ETSI TS 132 442 V11.7.0 (2014-10)



Digital cellular telecommunications system (Phase 2+); Universal Mobile Telecommunications System (UMTS); LTE;

Telecommunication management;
Trace Management Integration Reference Point (IRP);
Information Service (IS)
(3GPP TS 32.442 version 11.7.0 Release 11)



Reference RTS/TSGS-0532442vb70 Keywords

GSM, LTE, UMTS

ETSI

650 Route des Lucioles F-06921 Sophia Antipolis Cedex - FRANCE

Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16

Siret N° 348 623 562 00017 - NAF 742 C Association à but non lucratif enregistrée à la Sous-Préfecture de Grasse (06) N° 7803/88

Important notice

The present document can be downloaded from: http://www.etsi.org

The present document may be made available in electronic versions and/or in print. The content of any electronic and/or print versions of the present document shall not be modified without the prior written authorization of ETSI. In case of any existing or perceived difference in contents between such versions and/or in print, the only prevailing document is the print of the Portable Document Format (PDF) version kept on a specific network drive within ETSI Secretariat.

Users of the present document should be aware that the document may be subject to revision or change of status.

Information on the current status of this and other ETSI documents is available at

http://portal.etsi.org/tb/status/status.asp

If you find errors in the present document, please send your comment to one of the following services: http://portal.etsi.org/chaircor/ETSI_support.asp

Copyright Notification

No part may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm except as authorized by written permission of ETSI.

The content of the PDF version shall not be modified without the written authorization of ETSI.

The copyright and the foregoing restriction extend to reproduction in all media.

© European Telecommunications Standards Institute 2014.
All rights reserved.

DECTTM, **PLUGTESTS**TM, **UMTS**TM and the ETSI logo are Trade Marks of ETSI registered for the benefit of its Members. **3GPP**TM and **LTE**TM are Trade Marks of ETSI registered for the benefit of its Members and of the 3GPP Organizational Partners.

GSM® and the GSM logo are Trade Marks registered and owned by the GSM Association.

Intellectual Property Rights

IPRs essential or potentially essential to the present document may have been declared to ETSI. The information pertaining to these essential IPRs, if any, is publicly available for **ETSI members and non-members**, and can be found in ETSI SR 000 314: "Intellectual Property Rights (IPRs); Essential, or potentially Essential, IPRs notified to ETSI in respect of ETSI standards", which is available from the ETSI Secretariat. Latest updates are available on the ETSI Web server (http://ipr.etsi.org).

Pursuant to the ETSI IPR Policy, no investigation, including IPR searches, has been carried out by ETSI. No guarantee can be given as to the existence of other IPRs not referenced in ETSI SR 000 314 (or the updates on the ETSI Web server) which are, or may be, or may become, essential to the present document.

Foreword

This Technical Specification (TS) has been produced by ETSI 3rd Generation Partnership Project (3GPP).

The present document may refer to technical specifications or reports using their 3GPP identities, UMTS identities or GSM identities. These should be interpreted as being references to the corresponding ETSI deliverables.

The cross reference between GSM, UMTS, 3GPP and ETSI identities can be found under http://webapp.etsi.org/key/queryform.asp.

Modal verbs terminology

In the present document "shall", "shall not", "should", "should not", "may", "may not", "need", "need not", "will", "will not", "can" and "cannot" are to be interpreted as described in clause 3.2 of the ETSI Drafting Rules (Verbal forms for the expression of provisions).

"must" and "must not" are NOT allowed in ETSI deliverables except when used in direct citation.

Contents

Intelle	ectual Property Rights	2
Forev	word	2
Moda	al verbs terminology	2
Forev	word	5
Introd	duction	5
1	Scope	<i>6</i>
2	References	6
3	Definitions and abbreviations	
3.1	Definitions	
3.2	Abbreviations	
4	System Overview	7
4.1	System context	
4.2	Compliance rules	8
5	Information Object Classes	
5.1	Imported information entities and local labels	
5.2	Class diagram	
5.2.1	Attributes and relationships	
5.2.2	Inheritance	
5.3	Information object class definitions	
5.3.1	TraceJob	
5.3.1.1 5.3.1.2		
5.3.1.2		
5.3.1.	TraceRecord	
5.3.2.1		
5.3.2.2		
5.3.3	TraceIRP	
5.3.3.1		
5.3.4	ManagedEntity	
5.3.4.1		
5.4	Information relationship definitions	
5.4.1	relation-traceIRP-traceJob (M)	
5.4.1.1	· · ·	
5.4.1.2		
5.4.2	relation-traceJob-managedEntity (M)	
5.4.2.1		
5.4.2.2	2 Roles	15
5.4.3	relation-traceJob-traceRecord (M)	15
5.4.3.1	1 Definition	15
5.4.3.2	2 Roles	15
5.5	Information attribute definitions	16
5.5.1	Definition and legal values	16
6	Interface Definition	
6.1	Class diagram representing interfaces	
6.2	Generic rules	
6.3	TraceIRPManagement (M)	
6.3.1	Operation activateTraceJob(M)	
6.3.1.1		
6.3.1.2	1 1	
6.3.1.3	1 1	
6.3.1.4	4 Pre-condition	22

6.3.1.5	Post-condition	23
6.3.1.6	Exceptions	23
6.3.1.7	Constraints	23
6.3.2	Operation deactivateTraceJob(M)	24
6.3.2.1	Definition	24
6.3.2.2	Input parameters	24
6.3.2.3	Output parameters	
6.3.2.4	Pre-condition	24
6.3.2.4	Post-condition	24
6.3.2.6	Exceptions	25
6.3.3	Operation listTraceJob (M)	25
6.3.3.1	Definition	25
6.3.3.2	Input parameters	
6.3.3.3	Output parameters	
6.3.3.4	Pre-condition	27
6.3.3.5	Post-condition	27
6.3.3.6	Exceptions	
6.3.3.7	Constraints	27
6.3.4	Operation listActivatedTraceJobs (M)	28
6.3.4.1	Definition	28
6.3.4.2	Input parameters	28
6.3.4.3	Output parameters	28
6.3.5	Notification notifyTraceRecordingSessionFailure (O)	
6.3.5.1	Definition	28
6.3.5.2	Input parameters	28
6.3.5.3	Triggering event	28
6.3.5.3.1	From state	28
6.3.5.3.2	To state	29
6.3.6	Notification notifyTraceSessionLocalActivation (M)	29
6.3.6.1	Definition	29
6.3.6.2	Input parameters	29
6.3.6.3	Triggering event	29
6.3.6.3.1	From state	29
6.3.6.3.2	To state	29
6.3.7	Notification notifyTraceSessionIdentities (CM)	30
6.3.7.1	Definition	30
6.3.7.2	Input parameters	30
6.3.7.3	Triggering event	30
6.3.7.3.1	From state	30
6.3.7.3.2	To state	
6.3.7.4	Constraint	30
Annex A	(informative): Change history	31
History		32

Foreword

This Technical Specification has been produced by the 3rd Generation Partnership Project (3GPP).

The contents of the present document are subject to continuing work within the TSG and may change following formal TSG approval. Should the TSG modify the contents of the present document, it will be re-released by the TSG with an identifying change of release date and an increase in version number as follows:

Version x.y.z

where:

- x the first digit:
 - 1 presented to TSG for information;
 - 2 presented to TSG for approval;
 - 3 or greater indicates TSG approved document under change control.
- y the second digit is incremented for all changes of substance, i.e. technical enhancements, corrections, updates, etc.
- z the third digit is incremented when editorial only changes have been incorporated in the document.

Introduction

The present document is part of a TS-family covering the 3rd Generation Partnership Project; Technical Specification Group Services and System Aspects; Telecommunication management; as identified below:

- 32.441 "Trace Management Integration Reference Point (IRP): Requirements".
- 32.442 "Trace Management Integration Reference Point (IRP): Information Service (IS)".
- 32.443 "Trace Management Integration Reference Point (IRP): Common Object Request Broker Architecture (CORBA) Solution Set (SS)".
- 32.445 "Trace Management Integration Reference Point (IRP): eXtensible Markup Language (XML) file format definition".

The present document is part of a TS-family which describes the information service necessary for the Telecommunication Management (TM) of 3G systems. The TM principles and TM architecture are specified in 3GPP TS 32.101 [1] and 3GPP TS 32.102 [2].

Trace provides very detailed information on call level for a specific subscriber or MS. This data is an additional information source to Performance Measurements and allows deeper investigations in problems solving or in case of optimization.

1 Scope

The present document describes the mechanism used for control and configuration of the Trace, Minimization of Drive Test (MDT) and Radio Link Failure (RLF) reporting functionality through Itf-N. This specification is applicable to UMTS networks and EPS networks. GSM Trace is outside of the scope of this specification.

The conditions for supporting Network Sharing are stated in 3GPP TS 32.441 [13].

2 References

The following documents contain provisions which, through reference in this text, constitute provisions of the present document.

- References are either specific (identified by date of publication, edition number, version number, etc.) or non-specific.
- For a specific reference, subsequent revisions do not apply.
- For a non-specific reference, the latest version applies. In the case of a reference to a 3GPP document (including a GSM document), a non-specific reference implicitly refers to the latest version of that document *in the same Release as the present document*.
- [1] 3GPP TS 32.101: "Telecommunication management; Principles and high level requirements". [2] 3GPP TS 32.102: "Telecommunication management; Architecture". [3] 3GPP TS 32.150: "Telecommunication management; Integration Reference Point (IRP) Concept and definitions". [4] Void. [5] 3GPP TS 32.622: "Telecommunication management; Configuration Management (CM); Generic network resources Integration Reference Point (IRP); Network Resource Model (NRM)". 3GPP TS 32.302: "Telecommunication management; Configuration Management (CM); [6] Notification Integration Reference Point (IRP): Information Service (IS)". 3GPP TS 32.342: "Telecommunication management; File Transfer (FT) Integration Reference [7] Point (IRP): Information Service (IS)". [8] 3GPP TS 32.312: "Telecommunication management; Generic Integration Reference Point (IRP)
- management: Information Service (IS)".
- [9] 3GPP TS 32.422: "Telecommunication management; Subscriber and equipment trace; Trace control and configuration management".
- [10] 3GPP TS 32.602: "Telecommunication management; Configuration Management (CM); Basic CM Integration Reference Point (IRP): Information Service (IS)".
- [11] 3GPP TS 25.331: "Radio Resource Control (RRC); Protocol specification"
- [12] 3GPP TS 36.331: "Evolved Universal Terrestrial Radio Access (E-UTRA); Radio Resource Control (RRC); Protocol specification".
- [13] 3GPP TS 32.441: "Trace Management Integration Reference Point (IRP): Requirements".

3 Definitions and abbreviations

3.1 Definitions

For the purposes of the present document, the terms and definitions given in 3GPP TS 32.101 [1], 3GPP TS 32.102 [2], 3GPP TS 32.150 [3] and the following apply:

IRPAgent: See 3GPP TS 32.102 [2]. **IRPManager:** See 3GPP TS 32.102 [2].

3.2 Abbreviations

For the purposes of the present document, the abbreviations given in 3GPP TS 32.101 [1], 3GPP TS 32.102 [2], 3GPP TS 32.150 [3] and the following apply:

IOC	Information Object Class
IRP	Integration Reference Point
IS	Information Service
MDT	Minimization of Drive Tests
OMG	Object Management Group
RCEF	RRC Connection Establisment Failure
RLF	Radio Link Failure
UML	Unified Modelling Language (OMG)

4 System Overview

4.1 System context

The general definition of the System Context for the present IRP is found in 3GPP TS 32.150 [3] subclause 4.7.

In addition, the set of related IRP(s) relevant to the present IRP is shown in the two diagrams below.

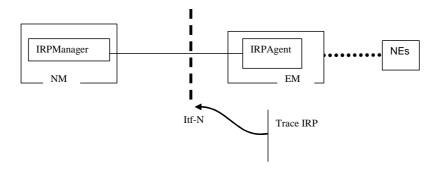


Figure 4.1.1: System Context A

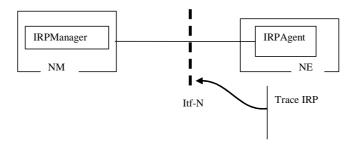


Figure 4.1.2: System Context B

4.2 Compliance rules

For general definitions of compliance rules related to qualifiers (Mandatory/Optional/Conditional) for *operations*, *notifications and parameters* (of operations and notifications) please refer to 3GPP TS 32.150 [3].

5 Information Object Classes

5.1 Imported information entities and local labels

Label reference	Local label
3GPP TS 32.622 [5], information object class, Top	Тор
3GPP TS 32.622 [5], information object class, IRPAgent	IRPAgent
3GPP TS 32.622 [5], information object class, GenericIRP	GenericIRP
3GPP TS 32.302 [6], information object class, NotificationIRP	NotificationIRP
3GPP TS 32.342 [7], information object class, FileTransferIRP	FileTransferIRP
3GPP TS 32.602 [10], information object class, ManagedEntity	ManagedEntity

5.2 Class diagram

5.2.1 Attributes and relationships

This clause introduces the set of Information Object Classes (IOCs) that encapsulate information within the IRPAgent. The intent is to identify the information required for the TraceIRP implementation of its operations and notification emission. This clause provides the overview of all support object classes in UML. Subsequent clauses provide more detailed specification of various aspects of these support object classes.

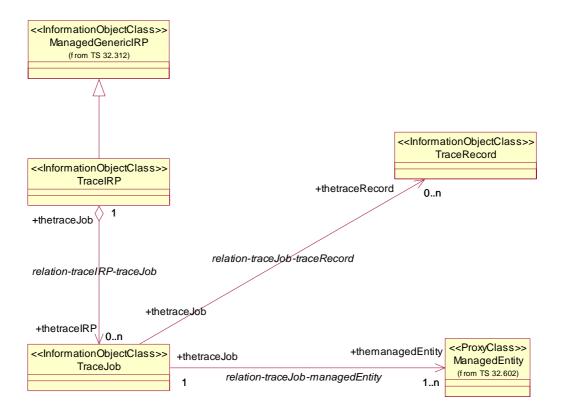
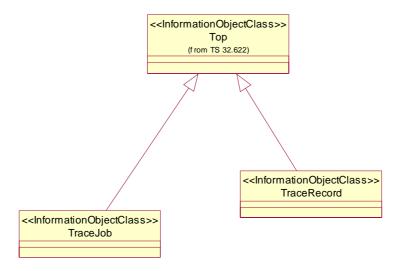


Figure 5.2.1: Information Object Class (IOC) UML diagram

5.2.2 Inheritance



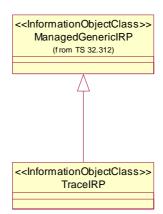


Figure 5.2.2: Information Object Class Inheritance UML Diagram

5.3 Information object class definitions

5.3.1 TraceJob

5.3.1.1 Definition

It represents a task that controls the Trace Sessions and collects the trace data (i.e. collects the TraceRecord of multiple ManagedEntity instances). The TraceReference is a unique ID, which identifies the Trace Session that has been created by the TraceJob and activated to one or multiple ManagedEntity instance(s).

It represents also the task that controls the UE based network performance measurements.

When a TraceJob is created the following attributes cannot be modified via the Itf-N:

- TraceReference
- ListOfInterfaces
- ListofNeTypes
- TraceDepth
- TraceTarget
- TriggeringEvent
- JobType
- areaScope
- ListOfMeasurements
- ReportingTrigger
- ReportInterval
- ReportAmount
- EventThreshold
- LoggingInterval
- LoggingDuration
- IPAddressOfTCE
- AnonymizationofMDTData
- MeasurementPeriodLTE
- MeasurementPeriodUMTS
- CollectionPeriodRrmUmts
- CollectionPeriodRrmLte
- PositioningMethod
- MeasurementQuantity
- PLMNTarget

If for any reason the TraceIRP determines that a Trace Session has been activated in its ManagedEntity(ies) the TraceIRP shall emit the "noitfyTraceSessionLocalActivation" notification to the subscribed IRPManagers to inform the active Trace Sessions. The IRPManagers can decide whether they deactivate the Trace Session or keep the Trace Session active. (E.g. if the TraceReference is colliding with an existing TraceJob"s TraceReference, the IRPManager may decide to immediately deactivate the Trace Session in that ManagedEntity.)

The TraceJob shall use its information to activate and configure Trace Session(s) in the requested ManagedEntity instance(s). When the TraceIRP determines that there are available TraceRecord files, it shall emit a notification to all subscribed IRPManagers informing the availability of the files. The method and the notification of the available files is described in the File Transfer IRP (3GPP TS 32.342 [7]).

If a TraceJob receives an indication from one of its ManagedEntity that starting a Trace Recording Session is failed for any reason, the "notifyTraceRecordingSessionFailure" notification may be emitted to inform all subscribed IRPManagers that there was a Trace Recording Session that was not started in the ManagedEntity.

5.3.1.2 Attributes

Attribute name	Support Qualifier
traceReference	M
listOfInterfaces	0
listOfNeTypes	CM
traceDepth	CM
traceTarget	M
triggeringEvent	CM
traceCollectionEntityAddress	M
jobType	M
listOfMeasurements	CM
reportingTrigger	CM
reportInterval	CM
reportAmount	CM
eventThreshold	CM
loggingInterval	CM
loggingDuration	CM
areaScope	CM
anonymizationOfMDTData	CM
measurementPeriodLTE	CM
measurementPeriodUMTS	CM
collectionPeriodRrmUmts	CM
collectionPeriodRrmLte	CM
positioningMethod	CM
measurementQuantity	CM
pLMNTarget	CM

5.3.1.3 Attribute constraints

The listOfNeTypes attributes shall be present only for Signalling Based Activation.

The traceTarget shall be public ID in case of a Management Based Activation is done to an ScscfFunction. The TraceTarget shall be cell only in case of the UTRAN cell traffic trace function.

The TraceTarget shall be E-UtranCell only in case of E-UTRAN cell traffic trace function. The traceTarget shall be either IMSI or IMEI(SV) if the Trace Session is activated to any of the following ManagedEntity(ies):

- HssFunction
- MscServerFunction
- SgsnFunction
- GgsnFunction
- BmscFunction
- RncFunction
- MmeFunction

The traceTarget shall be IMSI if the Trace Session is activated to a ManagedEntity playing a role of ServinGWFunction.

In case of subscription based MDT, the traceTarget attribute shall be able to carry (IMSI or IMEI(SV)), the areaScope attribute shall be able to carry a list of (cell or EUtranCell or TA/LA/RA).

In case of area based Immediate MDT, the traceTarget attribute shall be null value, the areaScope attribute shall carry a list of (Utrancell or E-UtranCell).

In case of area based Logged MDT, the traceTarget attribute shall carry an eNodeBs or a RNC. The Logged MDT should be initiated on the specified eNodeB/RNC in TraceTarget. The areaScope attribute shall carry a list of (Utrancell or E-UtranCell or TA/LA/RA)..

In case of RLF reporting, or RCEF reporting, the traceTarget attribute shall be null value, the areaScope attribute shall carry one or list of eNBs.

- traceTarget: This attribute shall be present if Trace or MD,T RLF or RCEF reporting is supported.
- areaScope: This attribute shall be present if MDT is supported.
- triggeringEvent: This attribute shall be present only if Trace is supported.
- listOfMeasurements: This attribute shall be present only if MDT is supported and the JobType attribute is set to ImmediateMDT.
- reportingTrigger: This attribute shall be present only if MDT is supported and the JobType attribute is set to ImmediateMDT and the ListOfMeasurements attribute is configured for M1 (for both UMTS and LTE) or M2 (only for UMTS).
- reportInterval: This attribute shall be present only if MDT is supported and the JobType attribute is set to ImmediateMDT and the ReportingTrigger is configured for PeriodicMeasurements
- reportAmount: This attribute shall be present only if MDT is supported and the JobType attribute is set to ImmediateMDT and the ReportingTrigger attribute is configured for PeriodicMeasurements.
- eventThreshold: This attribute shall be present only if MDT is supported and the JobType attribute is set to ImmediateMDT and the ReportTrigger attribute is configured for A2EventReporting in LTE or 1F/1IEventReporting in UMTS.
- loggingInterval: This attribute shall be present only if MDT is supported and the JobType attribute is set to LoggedMDT.
- loggingDuration: This attribute shall be present only if MDT is supported and the JobType attribute is set to LoggedMDT.
- anonymizationOfMDTData: This attribute shall be present only if MDT is supported and the mdtAreaScope attribute is present.
- measurementPeriodLTE: This attribute shall be present only if MDT is supported and the JobType attribute is set to Immediate MDT or combine Trace and Immediate MDT and the listOfMeasurements parameter for LTE has either M4 or M5 measurement set.
- measurementPeriodUMTS: This attribute shall be present only if MDT is supported and the JobType attribute is set to Immediate MDT or combine Trace and Immediate MDT and the listOfMeasurements parameter for UMTS has M6 or M7 measurements set.
- collectionPeriodRrmUmts: This attribute shall be present only if MDT is supported and the JobType attribute is set to Immediate MDT or combine Trace and Immediate MDT and the listOfMeasurements parameter has any of M3, M4, M5 measurement set in case of UMTS.
- collectionPeriodRrmLte: This attribute shall be present only if MDT is supported and the JobType attribute is set to Immediate MDT or combine Trace and Immediate MDT and the listOfMeasurements parameter has any of M2, M3 measurement set in case of LTE.
- positioningMethod: This attribute shall be present only if MDT is supported and the JobType attribute is set to Immediate MDT or combine Trace and Immediate MDT.
- measurementQuantity: This attribute shall be present only if MDT is supported and the JobType attribute is set to Immediate MDT or combined Trace and Immediate MDT and the reportingTrigger parameter is set to event 1F.

The pLMNTarget shall present for management based activation when several PLMNs are suppored in the RAN.

5.3.2 TraceRecord

5.3.2.1 Definition

TraceRecord is the representation of the files containing the logged information from the Trace Recording Sessions.

5.3.2.2 Attributes

Attribute name	Visibility	Support Qualifier	Read Qualifier	Write Qualifier
fileName	+	M	M	-

5.3.3 TraceIRP

5.3.3.1 Definition

TraceIRPis the representation of the trace management capabilities specified by the present document. This IOC inherits from ManagedGenericIRP IOC specified in 3GPP TS 32.312 [8].

5.3.4 ManagedEntity

5.3.4.1 Definition

In case of Signalling Based Activation the ManagedEntity represents the role that can be played by an instance of one of the following IOCs:

- HssFunction
- MscServerFunction
- SgsnFunction
- MmeFunction

In case of Management Based Activation the ManagedEntity represents the role that can be played by an instance of the following IOCs:

- HssFunction
- MscServerFunction
- SgsnFunction
- GgsnFunction
- BmscFunction
- RncFunction
- CscfFunction
- MmeFunction
- ServingGWFunction

In case of Cell Traffic Trace the ManagedEntity represents the role that can be played by an instance of the following IOCs:

- UtranCell
- E-UtranCell

5.4 Information relationship definitions

5.4.1 relation-traceIRP-traceJob (M)

5.4.1.1 Definition

This represents the relationship between TraceIRP and the TraceJob.

5.4.1.2 Roles

Name	Definition
theTraceIRP	It represents the TraceIRP
theTraceJobList	It represents the TraceJobList

5.4.2 relation-traceJob-managedEntity (M)

5.4.2.1 Definition

This represents the relationship between TraceJob and the ManagedEntity.

5.4.2.2 Roles

Name	Definition
theManagedEntity	The ManagedEntity, when playing this role, represents the actual network resource instance,
	where a Trace Session is activated.
theTraceJob	It represents the TraceJob

5.4.3 relation-traceJob-traceRecord (M)

5.4.3.1 Definition

This represents the relationship between TraceJob and the TraceRecord.

5.4.3.2 Roles

Name	Definition
theTraceJob	It represents the TraceJob
theTraceRecord	It represnts the TraceRecord.

5.5 Information attribute definitions

5.5.1 Definition and legal values

Attribute Name	Definition	Legal Values
anonymizationOfMDTData	It specifies the level of anonymization for an area based MDT.	See 3GPP TS 32.422 [9]
areaScope	It specifies MDT area scope when activates an MDT job.	List of cells/TA/LA/RA for subscription based MDT
	For RLF and RCEF reporting it specifies the eNB or list of eNBs where the RLF or RCEF reports should be collected.	or area based Logged MDT. List of cells for area based Immediate MDT. Cell, TA, LA, RA are mutually exclusive.
		One or list of eNBs for RLF and RCEFreporting.
collectionPeriodRrmLte	It specifies the collection period for collecting RRM configured measurement samples for M2, M3 in LTE. The attribute is applicable only for Immediate MDT. In case this attribute is not used, it carries a null semantic.	See 3GPP TS 32.422 [9]
collectionPeriodRrmUmts	It specifies the collection period for collecting RRM configured measurement samples for M3, M4, M5 in UMTS. The attribute is applicable only for Immediate MDT. In case this attribute is not used, it carries a null semantic.	See 3GPP TS 32.422 [9]
eventThreshold	It specifies the threshold which should trigger the reporting in case A2 event reporting in LTE or 1F/1I event in UMTS. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for A2 event in LTE or 1F event or 1I event in UMTS. In case this attribute is not used, it carries a null semantic.	See 3GPP TS 32.422 [9] , 3GPP TS 25.331 [11] , 3GPP TS 36.331 [12]
jobType	It specifies the MDT mode and it specifies also whether the TraceJob represents only MDT, Trace or a combined Trace and MDT job. The attribute is applicable for Trace, MDT, RCEF and RLF reporting.	See 3GPP TS 32.422 [9]
listOfInterfaces	It specifies the interfaces that needs to be traced in the given ManagedEntityFunction. The attribute is applicable only for Trace. In case this attribute is not used, it carries a null semantic.	See 3GPP TS 32.422 [9]
listOfMeasurements	It specifies the UE measurements that shall be collected in an Immediate MDT job. The attribute is applicable only for Immediate MDT. In case this attribute is not used, it carries a null semantic.	See 3GPP TS 32.422 [9]
listOfNETypes	It specifies in which type of ManagedFunction the trace should be activated. The attribute is applicable only for Trace with Signalling Based Trace activation. In case this attribute is not used, it carries a null semantic.	See 3GPP TS 32.422 [9]
loggingDuration	It specifies how long the MDT configuration is valid at the UE in case of Logged MDT. The attribute is applicable only for Logged MDT. In case this attribute is not used, it carries a null semantic.	See 3GPP TS 32.422 [9]
loggingInterval	It specifies the periodicty for Logged MDT. The attribute is applicable only for Logged MDT. In case this attribute is not used, it carries a null semantic.	See 3GPP TS 32.422 [9], 3GPP TS 25.331 [11] , 3GPP TS 36.331 [12]
measurementPeriodLTE	It specifies the measurement period for the Data Volume and Scheduled IP throughput measurements for MDT taken by the eNB. The attribute is applicable only for Immediate MDT. In case this attribute is not used, it carries a null semantic.	See 3GPP TS 32.422 [9]
measurementPeriodUMTS	It specifies the measurement period for the Data Volume and Throughput measurements for MDT taken by RNC. The attribute is applicable only for Immediate MDT. In case this attribute is not used, it carries a null semantic.	See 3GPP TS 32.422 [9]
measurementQuantity	It specifies the measurements that is collected in an MDT job for a UMTS MDT configured for event	See 3GPP TS 32.422 [9]

session to be recorded uses as selected PLMN. It specifies what positioning method should be used in the MDT job. It specifies the number of measurement reports that shall be taken for periodic reporting while the UE is in connected. The attribute is applicable only for Immediate MDT and when reporting Trigger is configured for periodical measurements. In case this attribute is not used, it carries a null semantic. reportInterval It specifies the interval between the periodical measurements shat shall be taken when the UE is in connected mode. The attribute is applicable only for Immediate MDT and when reporting Trigger is configured for periodical measurements. In case this attribute is not used, it carries a null semantic. reportingTrigger It specifies whether periodic or event based measurements should be collected. The attribute is applicable only for Immediate MDT and when reporting Trigger is configured for periodical measurements is configured for MI (for both UMTS and LTE) or M2 (only for UMTS). In case this attribute is not used, it carries a null semantic. traceCollectionEntityAddress It specifies the address of the Trace Collection Entity within an IRPManager. The attribute is applicable for for both Trace and MDT traceDepth It specifies the trace depth of the ManagedEntityFunction instances. The attribute is applicable only for Trace. In case this attribute is not used, it carries a null semantic. traceReference A globally unique identifier, which uniquely identifies the Any positive integer value. Trace Session that is created by the TraceJob. The attribute is applicable for both Trace and MDT. The attribute is applicable for both Trace and MDT. The attribute is applicable for both Trace and MDT. The attribute is applicable for both Trace and MDT. The ID value can be identified by its DN id. IMSI, IMEI, IMEISV, Public ID, cell, eNB and RNC are mutually exclusive. See 3GPP TS 32.422 See	Attribute Name	Definition	Legal Values
session to be recorded uses as selected PLMN. See 3GPP TS 32.422		triggered reporting.	
session to be recorded uses as selected PLMN. It specifies what positioning method should be used in the MDT job. It specifies the number of measurement reports that shall be taken for periodic reporting while the UE is in connected. The attribute is applicable only for Immediate MDT and when reporting Trigger is configured for periodical measurements. In case this attribute is not used, it carries a null semantic. reportInterval It specifies the interval between the periodical measurements that shall be taken when the UE is in connected mode. The attribute is applicable only for Immediate MDT and when reporting Trigger is configured for periodical measurements. In case this attribute is not used, it carries a null semantic. reportInterval It specifies whether periodic or event based measurements should be collected. The attribute is applicable only for Immediate MDT and when the listof Measurements is configured for MI (for both UMTS and LTE) or M2 (only for UMTS). In case this attribute is not used, it carries a null semantic. traceCollectionEntityAddress it specifies the address of the Trace Collection Entity within an IRPManager. The attribute is applicable for for both Trace and MDT traceDepth It specifies the trace depth of the ManagedEntityFunction instances. The attribute is applicable only for Trace. In case this attribute is applicable only for Trace. In case this attribute is not used, it carries a null semantic. traceTarget It specifies the trace depth of the ManagedEntityFunction instances. The attribute is not used, it carries a part of the trace and MDT. The attribute is applicable for both Trace and MDT. The attribute is applicable for both Trace and MDT. The attribute is applicable for both Trace and MDT. The attribute is applicable for both Trace and MDT. The attribute is applicable for both Trace and MDT. The attribute is applicable for both Trace and MDT. The attribute is applicable for both Trace and MDT. The attribute is applicable for both Trace and MDT. The ID value can be ide	pLMNTarget		See 3GPP TS 32.422 [9]
the MDT job. It specifies the number of measurement reports that shall be taken for periodic reporting while the UE is in connected. The attribute is applicable only for Immediate MDT and when reporting Trigger is configured for periodical measurements. In case this attribute is not used, it carries an ull semantic. reportInterval It specifies the interval between the periodical measurements. In case this attribute is not used, it carries an ull semantic. reportingTrigger It specifies whether periodic or event based measurements. In case this attribute is not used, it carries a null semantic. reportingTrigger It specifies whether periodic or event based measurements should be collected. The attribute is applicable only for Immediate MDT and when the listoffMeasurements is configured for mt (for both UMTS and LTE) or Mz (only for UMTS). In case this attribute is not used, it carries a null semantic. traceCollectionEntityAddress It specifies the address of the Trace Collection Entity within an IRPManager. The attribute is applicable for for both Trace and MDT traceDepth It specifies the trace depth of the ManagedEntityFunction instances. The attribute is not used, it carries a null semantic. traceReference A globally unique identifier, which uniquely identifies the Trace Session that is created by the TraceJob. The attribute is applicable for both Trace and MDT. The attribute is applicable only for Trace. In case this attribute is not used, it carries a null semantic. Trace Target It specifies the target object of the Trace and MDT. The attribute is applicable for both Trace and MDT. The attribute is applicable for both Trace and MDT. The attribute is applicable for both Trace and MDT. The attribute is applicable for both Trace and MDT. The attribute is applicable for both Trace and MDT. The attribute is applicable for both Trace and MDT. The attribute is applicable for both Trace and MDT. The attribute is applicable for both Trace and MDT. The lD type may be dientified by its DN id. Missiphical C		session to be recorded uses as selected PLMN.	
It specifies the number of measurement reports that shall be taken for periodic reporting while the UE is in connected. The attribute is applicable only for Immediate MDT and when reporting Trigger is configured for periodic call measurements. In case this attribute is not used, it carries a null semantic. reportInterval	positionigMethod		See 3GPP TS 32.422 [9]
It specifies the interval between the periodical measurements that shall be taken when the UE is in connected mode. The attribute is applicable only for Immediate MDT and when reporting Trigger is configured for periodical measurements. In case this attribute is not used, it carries a null semantic. reportingTrigger	reportAmount	It specifies the number of measurement reports that shall be taken for periodic reporting while the UE is in connected. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In case	See 3GPP TS 32.422 [9]
Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a null semantic. reportingTrigger It specifies whether periodic or event based measurements should be collected. The attribute is applicable only for Immediate MDT and when the listofMeasurements is configured for M1(for both UMTS and LTE) or M2 (only for UMTS). In case this attribute is not used, it carries a null semantic. traceCollectionEntityAddress It specifies the address of the Trace Collection Entity within an IRPManager. The attribute is applicable for for both Trace and MDT traceDepth It specifies the trace depth of the ManagedEntityFunction instances. The attribute is applicable only for Trace. In case this attribute is not used, it carries a null semantic. traceReference A globally unique identifier, which uniquely identifies the Trace Session that is created by the TraceJob. The attribute is applicable for both Trace and MDT. The attribute is applicable for both Trace and MDT. The attribute is applicable for both Trace and MDT. The attribute is applicable for both Trace and MDT. The attribute is applicable for both Trace and MDT. The attribute is applicable for both Trace and MDT. The attribute is applicable for both Trace and MDT. The attribute is applicable for both Trace and MDT. The attribute is applicable for both Trace and MDT. The attribute is applicable for both Trace and MDT. The attribute is applicable for both Trace and MDT. The attribute is applicable for both Trace and MDT. The attribute is applicable for both Trace and MDT. The attribute is applicable for both Trace and MDT. In a NB or a RNC. The ID value can be identified by its DN id. IMSI, IMEI, IMEISV, Public ID, cell, eNB an RNC are mutually exclusive. **Evaluation** It specifies the triggering event parameter of the trace session. The attribute is applicable only for Trace. In Sea 3GPP TS 32.422	reportInterval	It specifies the interval between the periodical	See 3GPP TS 32.422 [9]
measurements should be collected. The attribute is applicable only for Immediate MDT and when the ListOfMeasurements is configured for M1(for both UMTS and LTE) or M2 (only for UMTS). In case this attribute is not used, it carries a null semantic. traceCollectionEntityAddress It specifies the address of the Trace Collection Entity within an IRPManager. The attribute is applicable for for both Trace and MDT traceDepth It specifies the trace depth of the ManagedEntityFunction instances. The attribute is applicable only for Trace. In case this attribute is not used, it carries a null semantic. traceReference A globally unique identifier, which uniquely identifies the Trace Session that is created by the TraceJob. The attribute is applicable for both Trace and MDT. The attribute is applicable for both Trace and MDT. The attribute is applicable for both Trace and MDT. The attribute includes the ID type of the target and the ID Malue. The ID type may be IMSI or IMEI or an eMB or a RNC. The ID value can be a strin If the ID type is a Cell, the ID value can be identified by its DN id. It specifies the triggering event parameter of the trace session. The attribute is applicable only for Trace. In		Immediate MDT and when reporting Trigger is configured for periodical measurements. In case	
within an IRPManager. The attribute is applicable for for both Trace and MDT It specifies the trace depth of the ManagedEntityFunction instances. The attribute is applicable only for Trace. In case this attribute is not used, it carries a null semantic. traceReference A globally unique identifier, which uniquely identifies the Trace Session that is created by the TraceJob. The attribute is applicable for both Trace and MDT. The attribute is applicable for both Trace and MDT. The attribute is applicable for both Trace and MDT. The attribute includes the ID type of the target and the ID value. It specifies the target object of the Trace and MDT. The attribute includes the ID type of the target and the ID value can be a strin of the ID value can be a strin of the ID value can be identified by its DN id. IMSI, IMEI, IMEISV, Public ID, cell, eNB an RNC are mutually exclusive. triggeringEvent It specifies the triggering event parameter of the trace session. The attribute is applicable only for Trace. In	reportingTrigger	measurements should be collected. The attribute is applicable only for Immediate MDT and when the listOfMeasurements is configured for M1(for both UMTS and LTE) or M2 (only for UMTS). In case this	See 3GPP TS 32.422 [9]
ManagedEntityFunction instances. The attribute is applicable only for Trace. In case this attribute is not used, it carries a null semantic. A globally unique identifier, which uniquely identifies the Trace Session that is created by the TraceJob. The attribute is applicable for both Trace and MDT. The attribute is applicable for both Trace and MDT. This attribute is applicable for both Trace and MDT. This attribute includes the ID type of the target and the ID value. The ID type may be IMSI or IMEI or IMEISV or Public ID Private ID or a Cell of an eNB or a RNC. The ID value can be a strin If the ID type is a Cell, the ID value can be identified by its DN id. It specifies the triggering event parameter of the trace session. The attribute is applicable only for Trace. In	traceCollectionEntityAddress	within an IRPManager. The attribute is applicable for for	See 3GPP TS 32.422 [9]
A globally unique identifier, which uniquely identifies the Trace Session that is created by the TraceJob. The attribute is applicable for both Trace and MDT. The attribute is applicable for both Trace and MDT. The attribute is applicable for both Trace and MDT. This attribute includes the ID type of the target and the ID value. The ID type may be IMSI or IMEI or IMEISV or Public ID Private ID or a Cell of an eNB or a RNC. The ID value can be a strin If the ID type is a Cell, the ID value can be identified by its DN id. IMSI, IMEI, IMEISV, Public ID, cell, eNB an RNC are mutually exclusive. TriggeringEvent It specifies the triggering event parameter of the trace session. The attribute is applicable only for Trace. In	traceDepth	ManagedEntityFunction instances. The attribute is applicable only for Trace. In case this attribute is not	See 3GPP TS 32.422 [9]
It specifies the target object of the Trace and MDT. The attribute is applicable for both Trace and MDT. This attribute includes the ID type of the target and the ID value. The ID type may be IMSI or IMEI or IMEISV or Public ID Private ID or a Cell of an eNB or a RNC. The ID value can be a strin If the ID type is a Cell, the ID value can be identified by its DN id. IMSI, IMEI, IMEISV, Public ID, cell, eNB an RNC are mutually exclusive. TriggeringEvent It specifies the triggering event parameter of the trace session. The attribute is applicable only for Trace. In	traceReference	A globally unique identifier, which uniquely identifies the Trace Session that is created by the TraceJob.	
triggeringEvent	traceTarget	It specifies the target object of the Trace and MDT. The attribute is applicable for both Trace and MDT. This attribute includes the ID type of the target and the ID	IMSI or IMEI or IMEISV or Public ID or Private ID or a Cell or an eNB or a RNC. The ID value can be a string. If the ID type is a Cell, the ID value can be identified by its DN id. IMSI, IMEI, IMEISV, Public ID, cell, eNB and RNC are mutually
case this attribute is not used it carries a null semantic	triggeringEvent	It specifies the triggering event parameter of the trace session. The attribute is applicable only for Trace. In case this attribute is not used, it carries a null semantic.	See 3GPP TS 32.422 [9]

6 Interface Definition

6.1 Class diagram representing interfaces

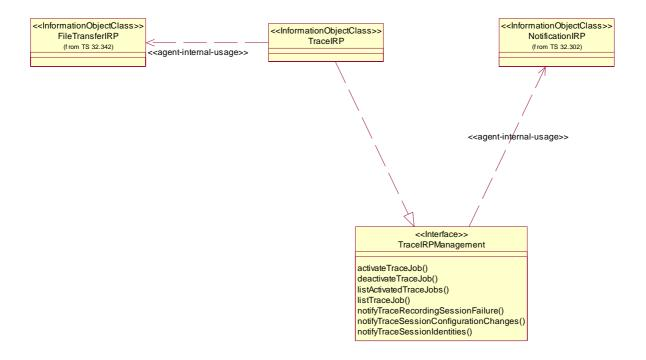


Figure 6.1: Class Diagram

6.2 Generic rules

- **Rule 1:** each operation with at least one input parameter supports a pre-condition valid_input_parameter which indicates that all input parameters shall be valid with regards to their information type. Additionally, each such operation supports an exception operation_failed_invalid_input_parameter which is raised when pre-condition valid_input_parameter is false. The exception has the same entry and exit state.
- Rule 2: each operation with at least one optional input parameter supports a set of pre-conditions supported_optional_input_parameter_xxx where "xxx" is the name of the optional input parameter and the pre-condition indicates that the operation supports the named optional input parameter. Additionally, each such operation supports an exception operation_failed_unsupported_optional_input_parameter_xxx which is raised when (a) the pre-condition supported_optional_input_parameter_xxx is false and (b) the named optional input parameter is carrying information. The exception has the same entry and exit state.
- Rule 3: each operation shall support a generic exception operation_failed_internal_problem which is raised
 when an internal problem occurs and that the operation cannot be completed. The exception has the same entry
 and exit state.

NOTE: These rules are mapped at the solution set level. Pre-conditions and exceptions, generated by these rules, need not appear explicitly in the present document.

6.3 TraceIRPManagement (M)

6.3.1 Operation activateTraceJob (M)

6.3.1.1 Definition

This operation support IRPManager"s request to create a TraceJob through Itf-N.

Once the TraceJob has been created, the attributes of the TraceJob will not be modified during the lifetime of the TraceJob.

One TraceJob can manage Trace Sessions in one or more ManagedEntity.

6.3.1.2 Input parameters

Parameter Name	Qualifier	Information type	Comment
iOCInstance	М	ManagedEntity.objectInstance	It specifies the DN of ManagedEntity
			instance where Trace Session is to be
			activated.
listOfInterfaces	0	TraceJob.listOfInterfaces	
listOfNeTypes	CM	TraceJob.listOfNeTypes	It specifies the type of
			ManagedFunctions.
traceDepth	М	TraceJob.traceDepth	It shows the
			traceDepth set to the Trace Session.
traceReference	М	TraceJob.traceReference	It identifies the
	141		TraceSession.
traceTarget	М	TraceJob.traceTarget	IMSI or IMEI or
			IMEISV or Public ID
			or Private ID or a
			Cell(identified by its DN id) or an eNB or a
			RNC.
			IMSI, IMEI,
			IMEISV, Public ID,
			Cell, eNB and RNC
			are mutually
	00		exclusive.
triggeringEvent traceCollectionEntityAddress	CO CM,CO	TraceJob.triggeringEvent TraceJob.traceCollectionEntityAddress	It appoifies the
CracecorrectionEntrryAddress	CIVI,CO		address to the Trace
			Collection Entity that
			is associated to the
			TraceJob. See
			3GPP TS 32.422 [9].
jobType	M	TraceJob.jobType	It specifies the type of the TraceJob
areaScope	CM	TraceJob.areaScope	It specifies MDT area
			(Cells/TA/RA/LA)
			where the Logged MDT measurements
			shall be collected.
			It specifies one or list
			of eNBs where the
			RLF or RCEF reports
			shall be collected.
			It specifies MDT area
			(list of cells) where the Immediate MDT
			measurements shall
			be collected.
listOfMeasurements	CM	TraceJob.listOfMeasurements	It specifies the
			measurements to be
			collected from the UE
reportingTrigger	СМ	TraceJob.reportingTrigger	It specifies the
			reporting trigger (event based
			reporting or periodic
			reporting in the UE.
reportInterval	CM	TraceJob.reportInterval	It specifies the
			interval between the
			periodical
			measurements to be
roport Amount	C N 4	Trago Tob report Amount	taken by the UE.
reportAmount	СМ	TraceJob.reportAmount	It specifies the number of
			measurement reports
			to be taken in

Parameter Name	Qualifier	Information type	Comment
		,,	periodical reporting in the UE
eventThreshold	СМ	TraceJob.eventThreshold	It specifies the threshold triggering the reporting in case of A2 event reporting in LTE or 1F/1I event reporting in UMTS.
loggingInterval	СМ	TraceJob.loggingInterval	It specifies the periodicity of Logged MDT.
loggingDuration	СМ	TraceJob.loggingDuration	It specifies the duration of the Logged MDT at the UE.
anonymizationOfMDTData	СМ	TraceJob.anonymizationOfMDTData	It specifies the anonymization level of an area based MDT.
measurementPeriodLTE	СМ	TraceJob.measurementPeriodLTE	It specifies the measurement period for the Data Volume and Scheduled IP Throughput measurements in the eNB within an Immediate MDT job.
measurementPeriodUMTS	СМ	TraceJob. measurementPeriodUMTS	It specifies the measurement period for the Data Volume and Throughput measurements in the RNC within an Immediate MDT job.
collectionPeriodRrmUmts	СМ	TraceJob.collectionPeriodRrmUmts	It specifies the collection period for M3, M4, M5 in UMTS within an Immediate MDT job.
collectionPeriodRrmLte	СМ	TraceJob.collectionPeriodRrmLte	It specifies the collection period for M2, M3 in LTE within an Immediate MDT job.
positioningMethod	СО	TraceJob.positioningMethod	It specifies the positioning method to be used for the Immediate MDT job.
measurementQuantity	СМ	TraceJob.measurementQuantity	It specifies which measurement should be collected in an event triggered measurement collection.
pLMNTarget	СМ	TraceJob.pLMNTarget	It specifies which PLMN that the subscriber of the session to be recorded uses as selected PLMN.

6.3.1.3 Output parameters

Parameter Name	Qualifier	Matching Information	Comment
status	М	ENUM (Success, Failure, PartialSuccess)	
unsupportedList	M	List of <managedentity, td="" tracedepth,<=""><td>It specifies what attributes</td></managedentity,>	It specifies what attributes
		ListOfInterfaces, TraceTarget, areaScope,	are not supported when a
		listOfMeasurements, reportingTrigger,	Trace Session is activated.
		reportInterval, reportAmount, eventThreshold,	The list can contain one or
		loggingInterval, loggingDuration,	all of the elements and
		<pre>anonymizationOfMDTData, measurementPeriodLTE,</pre>	relevant only for error
		measurementPeriodUMTS, positioningMethod,	cases.
		measurementQuantity reason, pLMNTarget)	

6.3.1.4 Pre-condition

 $\verb|validTraceReference|| AND | \verb|validTraceDepth|| AND | \verb|validTraceTarget||$

Assertion Name	Definition
validTraceDepth	The traceDepth input parameter is valid.
validTraceReference	The traceReference given is not matching to any existing traceReference value in the
	activated TraceJobs.
validTraceTarget	The traceTarget input parameter is valid.

6.3.1.5 Post-condition

traceSessionActivated

Assertion Name	Definition
traceSessionActivated	The Trace Session identified by the traceReference is activated in the given
	ManagedEntity instances.

6.3.1.6 Exceptions

Exception Name	Definition		
invalidTraceDepth	Condition: (validTraceDepth) is false.		
	Returned Information: output parameter status is set to "Failure".		
	Exit state: Entry State.		
invalidTraceTarget	Condition: (validTraceTarget) is false.		
	Returned Information: output parameter status is set to "Failure".		
	Exit state: Entry State.		
notuniqueTraceReference	Condition: (validTraceReference) is false.		
	Returned Information: output parameter status is set to "Failure".		
	Exit state: Entry State.		
pLMNTargetNotSupported	Condition: (validPLMNTarget) is false.		
	Returned Information: output parameter status is set to "Failure".		
	Exit state: Entry State.		

6.3.1.7 Constraints

Name	Definition
listOfNeTypes	It is a Signalling Based Activated trace that is requested.
traceCollectionEntityAddress CM, CO qualifier	Mandatory when tracing in EPS is supported; Mandatory when MDT is supported; Optional when tracing in UMTS is supported.
areaScope	MDT is supported or RLF or RCEF reporting is supported
listOfMeasurements	MDT is supported
reportingTrigger	MDT is supported
reportInterval	MDT is supported
reportAmount	MDT is supported
eventThreshold	MDT is supported
loggingInterval	MDT is supported
loggingDuration	MDT is supported
listOfMeasurements	MDT is supported
traceDepth	Trace is supported
triggeringEvent	Trace is supported
anonymizationOfMDTData	MDT is supported
measurementPeriodLTE	MDT is supported
measurementPeriodUMTS	MDT is supported
collectionPeriodRrmUmts	MDT is supported
collectionPeriodRrmLte	MDT is supported

positioningMethod	MDT is supported
pLMNTarget	Several PLMNs are supported in the RAN and a Management Based Activation Trace Session is requested.

6.3.2 Operation deactivateTraceJob (M)

6.3.2.1 Definition

This operation supports IPRManager"s request to stop a TraceJob through Itf-N. When this operation is received in the TraceJob shall deactivate the requested Trace Session in the requested ManagedEntity instances.

6.3.2.2 Input parameters

Parameter Name	Qualifier	Information type	Comment
traceReference	M	TraceJob.traceReference	This is a unique ID of the TraceJob
traceTarget	М		(IMSI or IMEI or IMEISV or Public ID or Private ID or a Cell(identified by its DN id) or an eNB or a RNC. IMSI, IMEI, IMEISV,Public ID, Cell, eNB and RNC are mutually exclusive.

6.3.2.3 Output parameters

Parameter Name	Qualifier	3	Comment
		Information	
status	M	ENUM (Success,	The operation may fail because of a specified
		Failure)	or an unspecified reason.
traceRecordingSessionReference	CM		This would indicate if a Trace Recording
			Session is ongoing when the deactivation
			command has been given.

6.3.2.4 Pre-condition

validTraceReference

Assertion Name	Definition
validTraceReference	The TraceReference input parameter is valid, which means that the TraceIRP is aware of
	such TraceJob, which has this traceReference value and is aware of the
	ManagedEntity holding such Trace Session.

6.3.2.4 Post-condition

TraceSessionisdeactivated

Assertion Name	Definition
TraceSessionisdeactivate	The Trace Session identified by the traceReference is deactivated in the requested
	ManagedEntity instance and the TraceJob is stopped.

6.3.2.6 Exceptions

Exception Name	Definition
notuniqueTraceReference	Condition: (validTraceReference) is false.
	Returned Information: output parameter status is set to "Failure".
	Exit state: Entry State.

6.3.3 Operation listTraceJob (M)

6.3.3.1 Definition

This operation support IPRManager"s request to list the parameters of a specific TraceJob through Itf-N.

6.3.3.2 Input parameters

Parameter Name	Qualifier	Information type	Comment	
traceReference	М	TraceJob.traceReference	It specifies the Trace Session that is requested for	
			interrogation.	

6.3.3.3 Output parameters

ioCtnstance Instance tinstance where a tinstance tinstance where a tinstance tinstance tinstance where a tinstance tinstance tinstance where a tinstance tinstance where a tinstance where the tins	Parameter Name	Qualifier	Matching Information	Comment	
Status	iOCInstance	М	ManagedElement.objec		
STATURE M					
Exacuse M ENUM (Success, Failure) TraceDob.traceDepth M TraceJob.traceDepth M TraceJob.traceTarget M M M M M M M M M M M M M M M M M M M		0			
Enum Seature TraceDepth TraceJob.traceDepth It shows the traceDepth trace control and configuration parameter that is associated to the TraceJob. This would indicate if a Trace Recording Session is engaging when the decinvation command has been given. This would indicate if a Trace Recording Session is engaging when the decinvation command has been given. This would indicate if a Trace Recording Session is engaging when the decinvation command has been given. This would indicate if a Trace Recording Session is engaging when the decinvation command has been given. This would indicate if a Trace Recording Session is engaging when the decinvation command has been given. This would indicate if a Trace Recording Session is engaging when the decinvation command has been given. This would indicate if a Trace Recording Session is engaging when the decinvation command has been given. This would indicate if a Trace Recording Session is engaging when the decinvation command has been given. This would indicate if a Trace Recording Session is engaging when the decinvation command has been given. This would indicate if a Trace Recording Session is engaging when the decinvation of the Record of the Trace Indicate	S		iaces		
traceDepth M TraceTob.traceDepth Is shows the traceDepth It accontrol and configuration parameter that is associated to the TraceTob. This would indicate if a Trace Recording Session is considered to the traceDepth Institute of the session is considered to the traceTob. This would indicate if a Trace Recording Session is considered the session is considered to the traceTob. This would indicate if a Trace Recording Session is considered to the traceTob. This would indicate if a Trace Recording Session is considered to the traceTob. This would indicate if a Trace Recording Session is considered to the TraceTob. This would indicate if a Trace Recording Session is considered to the TraceTob. This would indicate if a Trace Recording Session is considered to the Institute of the session is considered to the TraceTob. This would indicate if a TraceTob. This would indicate if a Trace Recording Session is considered to the TraceTob. This would indicate if a TraceTob. This would indicate if	Ctatus	N./I	ENLIM (Suppose Foilure)		
tracePopth M	Scacus	IVI	ENOW (Success, Failure)		
parameter that is associated to the TraceJob. The Recording Session is ongoing when the deactivation command has been given. This would indicate if a Trace Recording Session is ongoing when the deactivation command has been given. The recording of the provided provided in the provided pr	traceDepth	M	TraceJob.traceDepth		
essionReference traceTarget M TraceJob.traceTarget M TraceJob.traceTarget M TraceJob.traceTarget M TraceJob.traceTarget CO TraceJob.triggeringFillMSI or IME or IME[StO r Public ID or A RNC IMSI, IME[SV, Public ID, Cell, eNB and RNC are mutually exclusive. It is pecifies the triggering event trace control and configuration parameter that is associated to the TraceJob. See 3GPP TS 32.422 [9]. CM_CO TraceJob.traceCollection EntityAddress JobType CM TraceJob.areaScope CM TraceJob.areaScope TraceJob.areaScope CM TraceJob.areaScope TraceJob.areaScope CM TraceJob.areaScope TraceJob.areaScope CM TraceJob.reportInter It specifies the programments to be collected. It specifies the programments to be taken by the UE. TraceJob.areaSope CM TraceJob.reportInter TraceJob.areaSope CM TraceJob.reportInter TraceJob.reportInter TraceJob.reportInter TraceJob.reportInter TraceJob.see Gorpe Tinter TraceJob.reportInter TraceJob	-			_	
traceTarget M TraceJob.traceTarget MS or INEI or INEI or OP Labic ID or Private ID or a Cell (identified by its DN id) or a neNB or a RNC. MSI, INEI, MEISV.Public ID,Cell, eNB and RNC are mutually exclusive. TraceJob.traceCollect traceCollection CM,CO TraceJob.traceCollect traceCollection CM,CO TraceJob.traceCollect traceCollection CM,CO TraceJob.jobType M TraceJob.jobType M TraceJob.areaScope CM TraceJob.areaScope CM TraceJob.areaScope CM TraceJob.areaScope CM TraceJob.areaScope It specifies the type of the TraceJob. It can be one of the following: Trace, MDT data collection, RIF reporting, RCEF reporting. It specifies MDT area (Cells/TARALA) where the Logged MDT measurement shall be collected. It specifies MDT area (Isl of cells) where the Immediate MDT measurements shall be collected. It specifies the measurements to be collected from the UE traceJob.reportInter val cments reportInterval CM TraceJob.reportInter val TraceJob.venetThresh old CM TraceJob.loggingInter traceJob.beventThresh old CM TraceJob.boggingInter traceJob.measurement CM TraceJob.collection CM TraceJob.collection CM TraceJob.collection CM TraceJob.collection CM TraceJob.measurement CM TraceJob.collection CM TraceJob.collection CM TraceJob.collection CM TraceJob.measurement Topotition CM TraceJob.collection CM Tra	traceRecordingS	CM		This would indicate if a Trace Recording Session is	
triggeringEvent CO TraceJob.triggeringEvent CO TraceJob.triggeringEvent TraceCollection EntityAddress TraceJob.jobType TraceJob.jobType TraceJob.jobType CM TraceJob.areaScope CM TraceJob.areaScope CM TraceJob.areaScope CM TraceJob.areaScope CM TraceJob.areaScope CM TraceJob.reportIngTrigge TraceJob.reportInterval TraceJob.reportInterval TraceJob.reportInterval CM TraceJob.reportInterval CM TraceJob.reportInterval CM TraceJob.loggingInterval CM TraceJob.loggingInterval CM TraceJob.loggingInterval CM TraceJob.loggingInterval CM TraceJob.neasurement CM CM CTACeJob.neasurement CM CM CTACeJob.neasurement CM CM CTACeJob.neasurement CM CM CTACeJob.neasurement CM CTACeJob.neasurement CM CTACeJob.neasurement CM CTACeJob.neasurement CM CTACeJob.neasurement CM CM CTACeJob.neasurement	essionReference				
MISI, IMEI, IMEISV, Public ID, Cell, eNB and RNC are mutually exclusive.	traceTarget	M	TraceJob.traceTarget		
triggeringEvent CO TraceJob.triggeringE traceCollection EntityAddress CM,CO TraceJob.traceCollect EntityAddress JobType M TraceJob.seasCope CM TraceJob.areaScope CM TraceJob.areaScope CM TraceJob.areaScope CM TraceJob.listofMeasureme nts TraceJob.listofMeasureme nts TraceJob.listofMeasureme nts TraceJob.reportIngTrigge CM TraceJob.reportInter TraceJob.reportInter TraceJob.reportInter TraceJob.loggingInterval CM TraceJob.loggingInterval CM TraceJob.loggingInterval CM TraceJob.loggingInter TraceJob.loggingInter TraceJob.loggingInter CM TraceJob.loggingInter TraceJob.measurement DistofMeasureme TraceJob.reportIngTrig CM TraceJob.neonymizationOf CM TraceJob.ononymizati CM TraceJob.ononymizati CM TraceJob.bemanymizati CM TraceJob.collectionPerio CM TraceJob.bemanymizati CM TraceJob.beminymizati It specifies the measurement period for the Data Volume and Scheduled IP Throughput measurements in the RNC within an immediate MDT job. It specifies which remeasurement should be collected in an event triggered measurement should be collected in an event					
triggeringEvent CO TraceJob.triggeringE vent control and configuration parameter that is associated to the TraceCollection EntityAddress (is associated to the TraceLob. See 3GPP TS 32.422 [9]. TraceJob.traceCollection EntityAddress (is associated to the TraceCollection Entity that is associated to the TraceLob. See 3GPP TS 32.422 [9]. TraceJob.jobType					
traceCollection EntityAddress jobType M TraceJob. traceCollect innertityAddress jobType M TraceJob. jobType M TraceJob. jobType TraceJob. sea GSPP TS 32.422 [9]. It specifies the address to the Trace Collection Entity that is associated to the TraceJob. Sea GSPP TS 32.422 [9]. It specifies the type of the TraceJob. It can be one of the following: Trace, MDT data collection, Trace and MDT data collection. It specifies MDT area (Get of cells) where the Logged MDT measurements ball be collected. It specifies MDT area (Get of cells) where the Immediate MDT measurements to be collected. It specifies the measurements to be collected from the UE to periodic reporting in the UE. It specifies the interval between the periodical measurement to be taken by the UE. It specifies the number of measurement reports to be taken by the UE. It specifies the unmber of measurement reporting in case of A2 event reporting in LTE or 1F/11 event reporting in Case of A2 event reporting in LTE or 1F/11 event reporting in UMTS. It specifies the periodicity of the logging for dowlink pilot strength measurement in Logged MDT. It specifies the measurement period for the Data Volume and Scheduled IP Throughput measurements in the eNB within an Immediate MDT job. TraceJob. anonymization of TraceJob. collection Period MT is specifies the collection period for M		CO	TraceJob.triggeringE		
traceCollection EntityAddress jobType M TraceJob.jobType M TraceJob.jobType TraceJob.jobType M TraceJob.jobType TraceJob.jobType M TraceJob.jobType TraceJob.jobType M TraceJob.jobType TraceJob.jobType It specifies the address to the TraceJob. See 3GPP TS 32.422 [9]. It specifies the type of the TraceJob. See 3GPP TS 32.422 [9]. It specifies the type of the TraceJob. See 3GPP TS 32.422 [9]. It specifies the type of the TraceJob. See 3GPP TS 32.422 [9]. It specifies the type of the TraceJob. See 3GPP TS 32.422 [9]. It specifies the type of the TraceJob. MDT and the TraceJob. MDT and the TraceJob. MDT and the TraceJob. RCEF reporting, RCEF reporting, RCEF reporting, RCEF reporting, or RCEF repor	triggeringEvent			configuration parameter that is associated to the	
EntityAddress JobType					
JobType		CM,CO			
tollowing: Trace, MDT data collection, Trace and MDT data collection, RLF reporting, RCEF reports, all be collected. It specifies the measurement to be collected from the UE reporting in the UE. REPORTATION That EVEN. REPORTATION The ACE of RCEF reports, all be collected. It specifies the reporting trigger (event based reporting or periodic reporting) in the UE. REPORTATION In the UE. REPORTATION In the UE. REPORTATION THE VIEW of the logging for dowlink pilot strength measurement reporting in UMTS. REPORTATION The PORTATION THE VIEW THE PORTATION THE VIEW THE PORTATION THE VIEW			_		
data collection, RLF reporting, RCFF reporting. TraceJob.areaScope CM TraceJob.areaScope It specifies MDT area (Cells/TA/RA/LA) where the Logged MDT measurements shall be collected. It specifies MDT area (ilst of eNBs where the RLF reports, or RCFF reports shall be collected. It specifies MDT area (ilst of cells) where the Immediate MDT measurements shall be collected. It specifies MDT area (ilst of cells) where the Immediate MDT measurements shall be collected. It specifies the measurements to be collected from the UE measurements to be collected from the UE measurements to be collected from the UE measurements of the collection periodic reporting in the UE. TraceJob.reportInterval the specifies the reporting trigger (event based reporting or periodic reporting) in the UE. TraceJob.reportAmount the specifies the interval between the periodical measurement by the UE. TraceJob.reportAmount the specifies the number of measurement reports to be taken in periodical reporting in the UE the specifies the threshold triggering the reporting in Case of A2 event reporting in LTE or 1F/11 event reporting in Case of A2 event reporting in LTE or 1F/11 event reporting in Case of A2 event reporting in UMTS. It specifies the periodicity of the logging for dowlink pilot strength measurement in Logged MDT. It specifies the duration of the Logged MDT at the UE. TraceJob.measurement period for the Data Volume and Scheduled IP Throughput measurements in the eNB within an Immediate MDT job. TraceJob.measurement period for M2, M3 in LTE within an Immediate MDT job. TraceJob.measurement period for M2, M3 in LTE within an Immediate MDT job. TraceJob.measurement the positioning method to be used for the Immediate MDT job. TraceJob.measurement the positioning method to be used for the Immediate MDT job. TraceJob.measurement the positioning method to be used for the Immediate MDT job. TraceJob.measurement the positioning method to be used for the Immediate MDT job. TraceJob.measurement the positioning method to be used for	jobType	M	TraceJob.jobType		
areaScope CM TraceJob.areaScope It specifies MDT area (Cells/TA/RA/LA) where the Logged MDT measurements shall be collected. It specifies one or list of eNBs where the RLF reports, or RCEF reports shall be collected. It specifies the MDT area (list of cells) where the Immediate MDT measurements shall be collected. It specifies the measurements to be collected from the UE to take the most rements. CM TraceJob.reportInter reporting trigger (event based reporting or periodic reporting) in the UE. It specifies the interval between the periodical measurements to be taken by the UE. TraceJob.reportAmount the periodical reporting in the UE. TraceJob.eventThresh of the collection of measurement reports to be taken in periodical reporting in UMTS. It specifies the humber of measurement reporting in case of A2 event reporting in UMTS. It specifies the following the reporting in case of A2 event reporting in UMTS. It specifies the periodicity of the logging for dowlink pilot strength measurement Logged MDT. It specifies the duration of the Logged MDT at the UE. TraceJob.measurement period for the Data Volume and Scheduled IP Throughput measurements in the eNB within an Immediate MDT job. CM TraceJob.collectionPeriodMTT S CollectionPeriodMTMTS CollectionPerio CM TraceJob.collectionPeriodRTmUmts CollectionPeriodRTmUmts CollectionPeri					
MDT measurements shall be collected. It specifies one or list of eNBs where the RLF reports, or RCEF reports shall be collected. It specifies MDT area (list of cells) where the Immediate MDT measurements shall be collected. It specifies MDT area (list of cells) where the Immediate MDT measurements shall be collected from the UE reportingTrigge CM TraceJob.reportIngTr igger (event based reporting or periodic reporting) in the UE. reportInterval CM TraceJob.reportInter val reportAmount cmasurements to be taken by the UE. reportAmount CM TraceJob.reportAmoun t t specifies the interval between the periodical measurements to be taken by the UE. It specifies the number of measurement reports to be taken in periodical reporting in the UE to specifies the number of measurement reports to be taken in periodical reporting in the UE to specifies the threshold triggering the reporting in case of A2 event reporting in LTE or 1F/11 event reporting in Case of A2 event reporting in LTE or 1F/11 event reporting in Case of A2 event reporting in LTE or 1F/11 event reporting in Case of A2 event reporting in LTE or 1F/11 event reporting in Case of A2 event reporting in LTE or 1F/11 event reporting in Case of A2 event reporting in LTE or 1F/11 event reporting in Case of A2 event reporting in LTE or 1F/11 event reporting in Case of A2 event reporting in LTE or 1F/11 event reporting in Case of A2 event reporting in LTE or 1F/11 event reporting in Case of A2 event reporting in LTE or 1F/11 event reporting in Case of A2 event reporting in LTE or 1F/11 event reporting in Case of A2 event reporting in LTE or 1F/11 event reporting in Case of A2 event reporting in LTE or 1F/11 event reporting in Case of A2 event reporting in LTE or 1F/11 event reporting in Case of A2 event reporting in LTE or 1F/11 event reporting in Case of A2 event reporting in LTE or 1F/11 event reporting in	areaScope	CM	TraceJob.areaScope		
It specifies one or list of eNBs where the RLF reports, or RCEF reports shall be collected. It specifies MDT area (list of cells) where the Immediate MDT measurements to be collected. It specifies the measurements to be collected from the UE reportingTrigge	aroasoopo	OW			
It specifies MDT area (list of cells) where the Immediate MDT measurements shall be collected. It specifies MDT area (list of cells) where the Immediate MDT measurements shall be collected.					
MDT measurements shall be collected.					
TraceJob.listofMeasurements CM					
reportingTrigge	1: a+0fMaaa	CM	massa Tab list of Massa.		
reportIngTrigge reportInterval CM TraceJob.reportInter lt specifies the reporting trigger (event based reporting or periodic reportInterval LT traceJob.reportInter lt specifies the interval between the periodical measurements to be taken by the UE. reportAmount CM TraceJob.reportAmoun t tspecifies the interval between the periodical measurements to be taken by the UE. reportAmount CM TraceJob.reportAmoun t tspecifies the interval between the periodical measurements to be taken by the UE. reportAmount CM TraceJob.reportAmoun t tspecifies the number of measurement reports to be taken in periodical reporting in the UE. reportAmount CM TraceJob.loggingInterval lt specifies the hreshold triggering the reporting in case of A2 event reporting in LTE or 1F/11 event reporting in UMTS loggingInterval CM TraceJob.loggingDura tion CM TraceJob.loggingDura tion CM TraceJob.loggingDura tion CM TraceJob.measurement lt specifies the periodical reporting in the UE. reportAmount tspecifies the number of measurement reporting in case of A2 event reporting in LTE or 1F/11 event reporting in UMTS loggingInterval CM TraceJob.loggingDura tion CM TraceJob.nonymizati It specifies the duration of the Logged MDT. It specifies the duration of the Logged MDT at the UE. traceJob.measurement trace and Scheduled IP Throughput measurements in the eNB within an Immediate MDT job. collectionPerio CM TraceJob.collectionPeriod TraceJob.positioning Method TraceJob.positioning Method TraceJob.positioning It specifies the collection period for M2, M3 in LTE within an Immediate MDT job. TraceJob.positioning It specifies which measurement should be collected in an Immediate MDT job. TraceJob.positioning It specifies which measurement should be collected in an event triggered measurement collection. PLANTarget CM TraceJob.plaNTarget It specifies which PLMN that the subscriber of the session		CIVI		it specilies the measurements to be collected from the OE	
reportInterval CM TraceJob.reportInter the periodical periodic reporting in the UE. reportAmount CM TraceJob.reportAmount the eventThreshold CM TraceJob.eventThreshold CM TraceJob.eventThreshold CM TraceJob.loggingInterval CM TraceJob.loggingInterval the periodical reporting in the UE the event periodical reporting in the UE the periodical reporting in the UE the taken in periodical reporting in the UE under the UE the taken in periodical reporting in the UE the taken in periodical reporting in the UE the under the UE the periodical reporting in the UE the taken in periodical reporting in the UE the under the UE the periodical reporting in the UE the taken in the UE the ta		CM	I .	It specifies the reporting trigger (event based reporting or	
reportAmount CM TraceJob.reportAmoun It specifies the number of measurement reports to be taken in periodical reporting in the UE eventThreshold CM TraceJob.eventThresh old A2 event reporting in LTE or 1F/1I event reporting in Case of A2 event reporting in LTE or 1F/1I event reporting in UMTS. It specifies the periodicity of the logging for dowlink pilot strength measurement in Logged MDT. loggingDuration CM TraceJob.loggingDural It specifies the periodicity of the logging for dowlink pilot strength measurement in Logged MDT. loggingDuration CM TraceJob.loggingDural It specifies the duration of the Logged MDT at the UE. anonymizationOf CM TraceJob.anonymizati onOfMDTData MDTData MDTData MDTData MDTData MDTData MEASUREMENT SETTING TO THE PERIOD OF TRACEJOB. COLLECTION PERIOD OF TRACEJOB. COLLECTION PERIOD OF TRACEJOB. DOSITIONING OF TRACEJO	r		igger	periodic reporting) in the UE.	
reportAmount CM TraceJob.reportAmount t specifies the number of measurement reports to be taken in periodical reporting in the UE eventThreshold CM TraceJob.eventThresh old A2 event reporting in LTE or 1F/1I event reporting in Case of A2 event reporting in LTE or 1F/1I event reporting in UMTS loggingInterval CM TraceJob.loggingInte rval It specifies the periodicity of the logging for dowlink pilot strength measurement in Logged MDT. loggingDuration CM TraceJob.loggingDura tion anonymizationOf CM TraceJob.anonymizati onOfMDTData measurementPeri odLTE CM TraceJob.measurement periodUMTs measurementPeri odUMTs CM TraceJob.collectionPeriodRrmUmts collectionPerio CM TraceJob.collectionPeriodRrmUmts collectionPerio CM TraceJob.collectionPeriodRrmLte positioningMeth od measurementQuan tity CM TraceJob.positioning Method measurementQuan tity CM TraceJob.pLMNTarget CM TraceJob.pLMNTarget It specifies the number of measurement reporting in the UE It specifies the periodicity of the logging for dowlink pilot strength measurement in Logged MDT. It specifies the anonymization level of an area based MDT. It specifies the measurement period for the Data Volume and Scheduled IP Throughput measurements in the eNB within an Immediate MDT job. It specifies the measurement in the RNC within an Immediate MDT job. It specifies the collection period for M2, M3 in LTE within an Immediate MDT job. It specifies the collection period for M2, M3 in LTE within an Immediate MDT job. It specifies the positioning method to be used for the Immediate MDT job. It specifies the positioning method to be used for the Immediate MDT job. It specifies the measurement should be collected in an event triggered measurement collection. It specifies which PLMN that the subscriber of the session	reportInterval	CM	_		
t taken in periodical reporting in the UE eventThreshold CM TraceJob.eventThresh old SquingInterval CM TraceJob.loggingInterval conomization CM TraceJob.loggingDuration CM TraceJob.nonymization CM TraceJob.measurement PeriodLTE CM TraceJob.measurement Scheduled IP Throughput measurements in the eNB within an Immediate MDT job. CM TraceJob.collectionPeriodRTMLte CM TraceJob.positioning Method CM TraceJob.positioning pumblate CM TraceJob.positioning pumblate CM TraceJob.positioning pumblate CM TraceJob.measurement periodiction period for the Data Volume and It specifies the measurement period for M3, M4, M5 in UMTS within an Immediate MDT job. It specifies the measurement period for M3, M4, M5 in UMTS within an Immediate MDT job. It specifies the collection period for M3, M4, M5 in UMTS within an Immediate MDT job. It specifies the collection period for M3, M4, M5 in UMTS within an Immediate MDT job. It specifies the collection period for M3, M4, M5 in UMTS within an Immediate MDT job. It specifies the collection period for M2, M3 in LTE within an Immediate MDT job. It specifies the collection period for M2, M3 in LTE within an Immediate MDT job. It specifies the positioning method to be used for the Immediate MDT job. It specifies the positioning method to be used for the Immediate MDT job. It specifies the collection period for M2, M3 in LTE within an Immediate MDT job. It specifies the collection period for M2, M3 in LTE within an Immediate MDT job. It specifies the positioning method to be used for the Immediate MDT job. It specifies which measurement should be collected in an event triggered measurement should be collected in an event triggered measurement collection. It specifies which PLMN that the subscriber of the session		014			
eventThreshold CM TraceJob.eventThresh old	reportAmount	СМ	_	i i	
Old	eventThreshold	CM			
LoggingInterval CM	e venterni esnora	OW		A2 event reporting in LTE or 1F/1I event reporting in	
rval strength measurement in Logged MDT. CM TraceJob.loggingDura tion CM TraceJob.anonymizati It specifies the duration of the Logged MDT at the UE. TraceJob.anonymizati It specifies the anonymization level of an area based MDT. TraceJob.measurement DeriodLTE TraceJob.measurement It specifies the anonymization level of an area based MDT. TraceJob.measurement It specifies the measurement period for the Data Volume and Scheduled IP Throughput measurements in the eNB within an Immediate MDT job. CM TraceJob.measurement PeriodUMT Substitution It specifies the measurement period for the Data Volume and Throughput measurements in the RNC within an Immediate MDT job. COLIECTION PERIOD COLIECTION IT Specifies the collection period for M3, M4, M5 in UMTS within an Immediate MDT job. TraceJob.collection It specifies the collection period for M2, M3 in LTE within an Immediate MDT job. TraceJob.positioning It specifies the positioning method to be used for the Immediate MDT job. TraceJob.measurement Unan It specifies the positioning method to be used for the Immediate MDT job. TraceJob.measurement Unan Unantity It specifies which measurement should be collected in an event triggered measurement collection. TraceJob.planta					
TraceJob.loggingDural ton	loggingInterval	CM			
anonymizationOf MDTData					
anonymizationOf MDTData onOfMDTData onOfMD	loggingDuration	CM		It specifies the duration of the Logged MDT at the UE.	
MDTDataMDT.measurementPeri odLTECMTraceJob.measurement PeriodLTEIt specifies the measurement period for the Data Volume and Scheduled IP Throughput measurements in the eNB within an Immediate MDT job.measurementPeri odUMTSCMTraceJob. measurementPeriodUMT SIt specifies the measurement period for the Data Volume and Throughput measurements in the RNC within an Immediate MDT job.collectionPerio dRrmUmtsCMTraceJob.collectionP eriodRrmUmtsIt specifies the collection period for M3, M4, M5 in UMTS within an Immediate MDT job.collectionPerio dRrmLteCMTraceJob.collectionP eriodRrmLteIt specifies the collection period for M2, M3 in LTE within an Immediate MDT job.positioningMeth odCOTraceJob.positioning MethodIt specifies the positioning method to be used for the Immediate MDT job.measurementQuan tityCMTraceJob.measurement QuantityIt specifies which measurement should be collected in an event triggered measurement collection.pLMNTargetCMTraceJob.pLMNTargetIt specifies which PLMN that the subscriber of the session	anonymizationOf	CM		It specifies the aponymization level of an area based	
odLTE PeriodLTE and Scheduled IP Throughput measurements in the eNB within an Immediate MDT job. CM TraceJob. measurementPeriodUMT S collectionPerio dRrmUmts collectionPerio dRrmLte positioningMeth od measurementQuan tity pLMNTarget CM TraceJob. measurementPeriodUMT S TraceJob. collectionPerio dRrmLte positioningMeth od TraceJob.measurement DeriodLTE it specifies the measurement period for the Data Volume and Throughput measurements in the RNC within an Immediate MDT job. It specifies the collection period for M3, M4, M5 in UMTS within an Immediate MDT job. It specifies the collection period for M2, M3 in LTE within an Immediate MDT job. It specifies the positioning method to be used for the Immediate MDT job. It specifies the positioning method to be used for the Immediate MDT job. TraceJob.measurement Duantity It specifies which measurement should be collected in an event triggered measurement collection. It specifies which PLMN that the subscriber of the session	_	OW			
within an Immediate MDT job. CM TraceJob. measurementPeriodUMT S It specifies the measurement period for the Data Volume and Throughput measurements in the RNC within an Immediate MDT job. CollectionPerio CM TraceJob.collectionP eriodRrmUmts CollectionPerio CM TraceJob.collectionP dRrmLte positioningMeth od Method TraceJob.measurement Quantity within an Immediate MDT job. It specifies the collection period for M3, M4, M5 in UMTS within an Immediate MDT job. It specifies the collection period for M2, M3 in LTE within an Immediate MDT job. It specifies the positioning method to be used for the Immediate MDT job. It specifies the positioning method to be used for the Immediate MDT job. It specifies which measurement should be collected in an event triggered measurement collection. It specifies which PLMN that the subscriber of the session	measurementPeri	CM	TraceJob.measurement	It specifies the measurement period for the Data Volume	
TraceJob. measurementPeriodUMT S collectionPerio dRrmUmts collectionPerio dRrmLte positioningMeth od measurementQuan tity CM TraceJob.collectionPerio dRrmUmts CM TraceJob.collectionPerio dRrmLte positioningMeth od TraceJob.measurement S It specifies the measurement period for the Data Volume and Throughput measurements in the RNC within an Immediate MDT job. It specifies the collection period for M3, M4, M5 in UMTS within an Immediate MDT job. It specifies the collection period for M2, M3 in LTE within an Immediate MDT job. It specifies the positioning method to be used for the Immediate MDT job. TraceJob.measurement Quantity PLMNTarget CM TraceJob.pLMNTarget It specifies which measurement should be collected in an event triggered measurement collection. It specifies which PLMN that the subscriber of the session	odlTE		PeriodLTE		
measurementPeriodUMT S Immediate MDT job. collectionPerio dRrmUmts eriodRrmUmts within an Immediate MDT job. CollectionPerio dRrmUmts eriodRrmUmts within an Immediate MDT job. CollectionPerio dRrmLte EriodRrmLte in Immediate MDT job. CM TraceJob.collectionPerio dRrmLte in Immediate MDT job. CM TraceJob.collectionPerio dRrmLte in Immediate MDT job. TraceJob.positioning in It specifies the collection period for M2, M3 in LTE within an Immediate MDT job. TraceJob.positioning in Immediate MDT job. TraceJob.positioning in It specifies the positioning method to be used for the immediate MDT job. TraceJob.measurement it specifies which measurement should be collected in an event triggered measurement collection. PLMNTarget CM TraceJob.pLMNTarget It specifies which PLMN that the subscriber of the session					
odUMTS S Immediate MDT job. collectionPerio dRrmUmts CM TraceJob.collectionPerio eriodRrmUmts It specifies the collection period for M3, M4, M5 in UMTS within an Immediate MDT job. collectionPerio dRrmLte CM TraceJob.collectionPerio eriodRrmLte It specifies the collection period for M2, M3 in LTE within an Immediate MDT job. positioningMeth od CO TraceJob.positioning method to be used for the Immediate MDT job. measurementQuan tity CM TraceJob.measurement period for M2, M3 in LTE within an Immediate MDT job. It specifies the positioning method to be used for the Immediate MDT job. It specifies which measurement should be collected in an event triggered measurement collection. pLMNTarget CM TraceJob.pLMNTarget It specifies which PLMN that the subscriber of the session	maaguramant Dari	CM			
collectionPerio dRrmUmts collectionPerio dRrmUmts collectionPerio dRrmUmts collectionPerio dRrmUmts collectionPerio dRrmLte positioningMeth od measurementQuan tity pLMNTarget CM TraceJob.collectionP traceJob.collectionP eriodRrmLte priodRrmLte collectionPerio draceJob.collectionP traceJob.collectionP It specifies the collection period for M2, M3 in LTE within an Immediate MDT job. It specifies the positioning method to be used for the Immediate MDT job. It specifies which measurement should be collected in an event triggered measurement collection. It specifies which pLMN that the subscriber of the session					
dRrmUmts eriodRrmUmts within an Immediate MDT job. CollectionPerio dRrmLte eriodRrmLte lt specifies the collection period for M2, M3 in LTE within an Immediate MDT job. TraceJob.collectionPerio drum. TraceJob.positioning lt specifies the collection period for M2, M3 in LTE within an Immediate MDT job. TraceJob.positioning lt specifies the positioning method to be used for the Immediate MDT job. TraceJob.measurement lt specifies which measurement should be collected in an event triggered measurement collection. TraceJob.plmNTarget lt specifies which PLMN that the subscriber of the session		CM	1		
collectionPerio CM TraceJob.collectionPeriod eriodRrmLte It specifies the collection period for M2, M3 in LTE within an Immediate MDT job. positioningMeth od CO TraceJob.positioning Method It specifies the positioning method to be used for the Immediate MDT job. measurementQuan tity CM TraceJob.measurement period for M2, M3 in LTE within an Immediate MDT job. It specifies the positioning method to be used for the Immediate MDT job. It specifies which measurement should be collected in an event triggered measurement collection. pLMNTarget CM TraceJob.pLMNTarget It specifies which PLMN that the subscriber of the session				within an Immediate MDT job.	
positioningMeth CO TraceJob.positioning It specifies the positioning method to be used for the Immediate MDT job. measurementQuan tity CM TraceJob.measurement Unantity Event triggered measurement collection. pLMNTarget CM TraceJob.pLMNTarget It specifies which PLMN that the subscriber of the session		CM		It specifies the collection period for M2, M3 in LTE within	
od Method Immediate MDT job. measurementQuan tity CM TraceJob.measurement lt specifies which measurement should be collected in an event triggered measurement collection. pLMNTarget CM TraceJob.pLMNTarget It specifies which PLMN that the subscriber of the session					
measurementQuan tity CM TraceJob.measurement It specifies which measurement should be collected in an event triggered measurement collection. PLMNTarget CM TraceJob.pLMNTarget It specifies which PLMN that the subscriber of the session	_	CO			
tity Quantity event triggered measurement collection. pLMNTarget CM TraceJob.pLMNTarget It specifies which PLMN that the subscriber of the session		CNA			
pLMNTarget CM TraceJob.pLMNTarget It specifies which PLMN that the subscriber of the session		CIVI			
		CM	_		
			1.5.25.25.25		

6.3.3.4 Pre-condition

validTraceReference

Assertion Name	Definition		
validTraceReference	The traceReference input parameter is valid, which means that the TraceIRP is aware of		
	such TraceJob, which has this traceReference value and is aware of the		
	ManagedEntity holding such Trace Session.		

6.3.3.5 Post-condition

TraceSessionFound

Assertion Name	Definition		
TraceSessionFound	The TraceIRP has found the requested TraceJob with the traceReference and can read		
	the configured parameters.		

6.3.3.6 Exceptions

Exception Name	Definition
notuniqueTraceReference	Condition: (validTraceReference) is false.
	Returned Information: output parameter status is set to "Failure".
	Exit state: Entry State.

6.3.3.7 Constraints

	Definition
traceCollectionEntityAddress CM,CO	Mandatory when tracing in EPS is supported;
qualifier	Mandatory when MDT is supported;
	Optional when tracing in UMTS is supported.
anonymizationOfMDTData	MDT is supported
areaScope	MDT is supported or RLF reporting is supported
listOfMeasurements	MDT is supported
reportingTrigger	MDT is supported
reportInterval	MDT is supported
reportAmount	MDT is supported
eventThreshold	MDT is supported
loggingInterval	MDT is supported
loggingDuration	MDT is supported
traceDepth	Trace is supported
triggeringEvent	Trace is supported
measurementPeriodLTE	MDT is supported
measurementPeriodUMTS	MDT is supported
collectionPeriodRrmUmts	MDT is supported
collectionPeriodRrmLte	MDT is supported
positioningMethod	MDT is supported

measurementQuantity	MDT is supported
pLMNTarget	Several PLMNs are supported in the RAN and a
	Managment Based Activation Trace Session is activated.

6.3.4 Operation listActivatedTraceJobs (M)

6.3.4.1 Definition

This operation support IRPManager"s request to list all the activated TraceJobs through Itf-N.

6.3.4.2 Input parameters

No input parameters for this operation.

6.3.4.3 Output parameters

Parameter Name	Qualifier	Matching Information	Comment
traceReferenceList		TraceJob.traceRefe rence.objectinstan	The TraceReferenceList provides the identification of each activated Trace Session. If no TraceReference can be found, then this list is empty and status is "Success"
status		ENUM (Success, Failure)	The operation may fail because of a specified or an unspecified reason.

6.3.5 Notification notifyTraceRecordingSessionFailure (O)

6.3.5.1 Definition

The TraceIRP notifies all subscribed IRPManagers and the Trace Collection Entity (if its address is provided) if a Trace Recording Session in a ManagedEntity has not been started due to any problem.

6.3.5.2 Input parameters

Parameter Name	Qualifiers	Matching Information	Comment
objectClass			Notification header
objectInstance	M,Y	TraceIRP.objectInstance	Notification header
eventTime	M,Y		Notification header
notificationType	M,Y	"notifyTraceRecordingSessionFailure"	Notification header
systemDN	M,Y		Notification header
notificationID	O,Y		Notification header
traceRecordingSessionReference	O,N		The Trace Recording Session Reference may be
			visible only in signalling based activation.
traceReference	M,Y	TraceJob.traceReference	
reason	O,N		

6.3.5.3 Triggering event

6.3.5.3.1 From state

internalProblemInManagedEntity

Assertion Name	Definition		
internalProblemInMa	Because of an internal problem the ManagedEntity cannot start a Trace Recording		
nagedEntity	Session.		

6.3.5.3.2 To state

newNotificationReported

Assertion Name	Definition			
newNotificationRepo	The "notifyTraceRecordingSessionFailure "notification is emitted to the subscribed			
rted	IRPManager(s).			

6.3.6 Notification notifyTraceSessionLocalActivation (M)

6.3.6.1 Definition

The TraceIRP notifies all subscribed IRPManagers if a Trace Session is configured by the Element Manager.

6.3.6.2 Input parameters

Parameter Name	Qualifiers	Matching Information	Comment
objectClass	M,Y	TraceIRP.objectClass	Notification header
objectInstance	M,Y	TraceIRP.objectInstance	Notification header
eventTime	M,Y		Notification header
notificationType	M,Y	"notifyTraceSessionLocalActivation"	Notification header
systemDN	M,Y		Notification header
notificationID	O,Y		Notification header
traceReference	M,Y	TraceJob.traceReference	
traceTarget	M,Y	TraceJob.traceTarget	
iOCInstance	M,Y	ManagedEntity.objectInstance	

6.3.6.3 Triggering event

6.3.6.3.1 From state

unknownTraceReference

Assertion Name	Definition
unknownTraceReference	The TraceIRP has detected a traceReference associated to a Trace Session in a
	ManagedEntity that is not initiated via the ltf-N.

6.3.6.3.2 To state

new Notification Reported

Assertion Name	Definition
newNotificationReported	The " notifyTraceSessionLocalActivation " notification is emitted to the
	subscribed IRPManager(s).

6.3.7 Notification notifyTraceSessionIdentities (CM)

6.3.7.1 Definition

The TraceIRP or the MmeFunction notifies the Trace Collection Entity about the identities of the subscriber and Equipment in case of tracing a session in E-UTRAN only.

6.3.7.2 Input parameters

Parameter Name	Qualifiers	Matching Information	Comment
objectClass	M,Y	TraceIRP.objectClass, or	Notification
		MmeFunction.objectClass	header
objectInstance	M,Y	TraceIRP.objectInstance, or	Notification
		MmeFunction.objectClass	header
eventTime	M,Y		Notification
			header
notificationType	M,Y	"notifyTraceSessionIds"	Notification
			header
systemDN	M,Y		Notification
			header
notificationID	O,Y		Notification
			header
traceReference	M,Y	TraceJob.traceReference	
traceRecordingSessionReference	M,Y	TraceJob.traceRecordingSessionReference	
traceTarget	M,Y	TraceJob.traceTarget	

6.3.7.3 Triggering event

6.3.7.3.1 From state

FFS

Assertion Name	Definition			
FFS	FFS			

6.3.7.3.2 To state

FFS

Assertion Name	Definition
FFS	FFS

6.3.7.4 Constraint

Name	Definition
notifyTraceSessionIdentities Notification CM qualifier	Tracing is performed only in E-UTRAN

Annex A (informative): Change history

	Change history							
Date	TSG#	TSG Doc.	CR	Rev	Subject/Comment	Cat	Old	New
Apr 2007	S5_52	S5-070445			Submitted by SA5 prior SA#36 for Information with the intention to get SA#36 Rel-7 Approval for this TS and the CORBA Solution Set S 32.443		1.0.0	
Jun 2007	SP-36	SP-070288			Submitted to SA#36 for Approval		1.0.0	7.0.0
Mar 2008	SP-39	SP-080058	0001		Standardize the DN id of UTRAN cell as the identification for the trace target in case of cell traffic trace	F	7.0.0	7.1.0
Dec 2008	SP-42	SP-080846	0002		Introducing EPS in Subscriber and Equipment Trace	С	7.1.0	8.0.0
Dec 2009					Upgrade to Release 9		8.0.0	9.0.0
Jan 2010					Removal of track changes and correction of change history		9.0.0	9.0.1
Dec 2010	SP-50	SP-100833	003	1	Correcting the Identification of IMS Subscriber Tracing - Align with 32.421	F	9.0.1	10.0.0
Mar 2011	SP-51	SP-110102	004	-	Adding Minimization of Drive Tests (MDT) to Trace IRP	В	10.0.0	10.1.0
May 2011	SP-52	SP-110292	007	1	Add areascope parameter as a MDT configuration	F	10.1.0	10.2.0
May 2011	SP-52	SP-110286	800	1	Modify the defintion of traceTarget	С	10.2.0	11.0.0
Dec 2011	SP-54	SP-110716	013	1	Add RLF reporting configuration -Align with 32.422	В	11.0.0	11.1.0
Dec 2011	SP-54	SP-110715	015	2	upport multiple cells in area based MDT		11.0.0	11.1.0
Dec 2011	SP-54	SP-110715	017	2	Add TCE address for UTRAN MDT activation	Α	11.0.0	11.1.0
March 2012	SP-55	SP-120053	020	1	Inconsistency correction on trace target -Align with 32.422	Α	11.1.0	11.2.0
June-2012	SP-56	SP-120368	0215		Alignment of the Anonymization parameter with TS 32.422	Α	11.2.0	11.3.0
Sep-2012	SP-57	SP-120571	0216	1	dding new MDT configuration parameters to align with TS 37.320 Ind TS 32.422		11.3.0	11.4.0
Sep-2012	SP-57	SP-120571	0219	1	Add missing threshold parameter for UMTS event triggered measurements	Α	11.3.0	11.4.0
		SP-120795	0217	2	Add RCEF reporting	В		
	,	SP-120795	0222	3	Correction on scope, references and abreviations	F		
	,	SP-120794	0226	1	Correction of UMTS M2 reporting trigger configuration -Align with 32.422	Α		
Dec-2012	SP-58	SP-120796	0227	1	Introducing common MDT measurement period attribute in Trace IRP	В	11.4.0	11.5.0
		SP-120796	0228	1	Addition of Network Sharing	С	1	
	1	SP-120795		1	Add measurement M7	В	1	
	1	SP-120795		-	Combine measurement period parameters for LTE	С	1	
Mar-2013	SP-59	SP-130057	0231	1	Editorial corrections in 32.442	F	11.5.0	11.6.0
Sep-2014		SP-140558		-	Addition of missing parameters relating to RCEF	F	11.6.0	11.7.0

History

	Document history				
V11.4.0	September 2012	Publication			
V11.5.0	January 2013	Publication			
V11.6.0	April 2013	Publication			
V11.7.0	October 2014	Publication			