




Turntide Smart Motor System for RTU Monitor Only with Pre-Wired Motors

Document Version 1.1
February 23, 2023

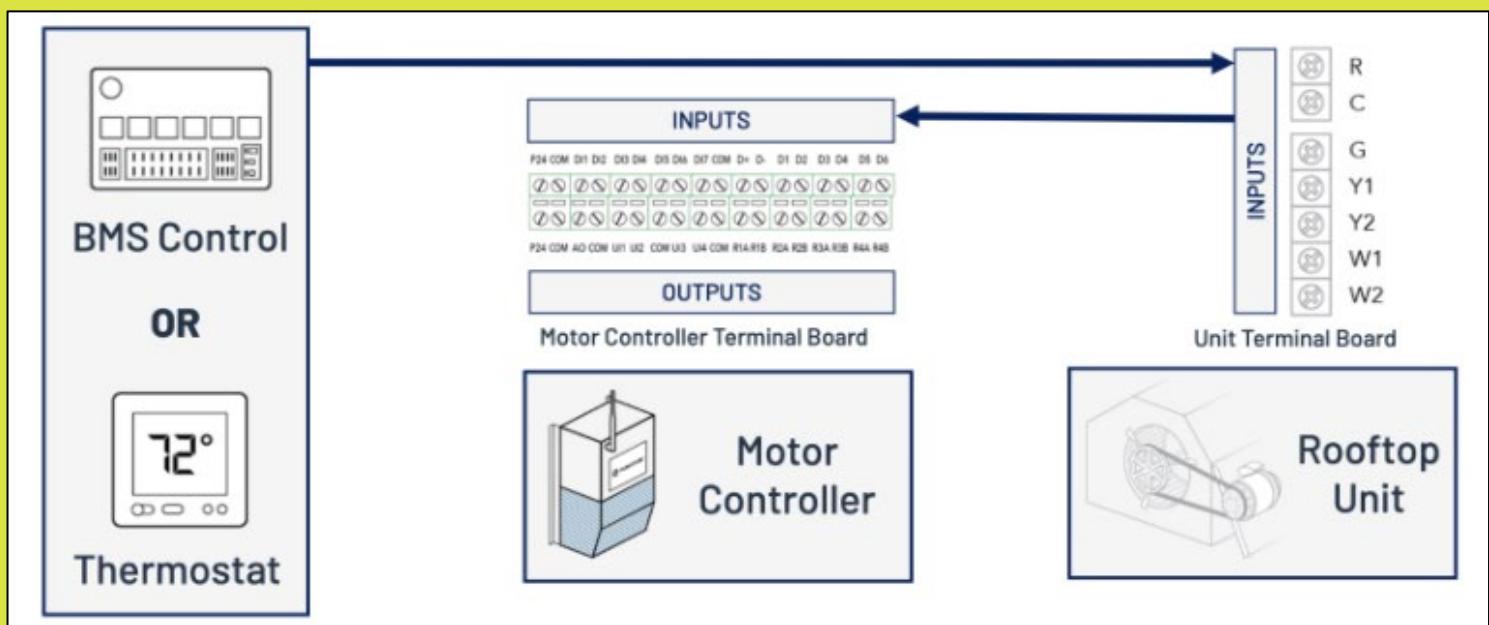

Revision History

| Document Revision Number | Description | Date |
|--------------------------|--|-------------------|
| 1.0 | <p>Initial release in this format with updates to original content:</p> <p>Added</p> <ul style="list-style-type: none"> Caution: Ensure that motor controller wires are isolated by a minimum of 6mm or 0.25in from power cables Disclaimer: For proper installation and grounding of the antenna, please refer to national and local codes (e.g., U.S.: NFPA 70, National Electrical Code, Article 810, Canada: Canadian Electrical Code, Section 54). Caution: Motor power harnesses are rated to 600 V and the Turntide controller and motor nameplates indicate operation up to 680 V. Warning: Ensure that input power ground is terminated on the controller. If not properly grounded, the motor controller may not function correctly and could pose a safety hazard. Instructions for proper motor-pulley alignment and belt tension More tool recommendations Links to documents on Turn tide Academy New! Wiring and information on SL121 and P06 motor controllers New Cord Grip Kit - cable fittings to seal or to provide strain relief to the terminals in which the conductors are connected Appendix with steps for Noise Isolation Feet installation, Supply and Return Air Sensors, How to Disable Wi-Fi through Hardware on P06 and SI121 Motor Controllers, Troubleshooting a Stalled Motor <p>Deleted</p> <ul style="list-style-type: none"> SL160 Motor Controller content and wiring <p>Clarification</p> <ul style="list-style-type: none"> Feet spacer bolts supplied with V01 and V02-D motors and mounting plate bolt sleeves supplied with V01 and V02 motors | February 21, 2023 |
| 1.1 | <p>Correction to P06 controller orientation during install: Mount the controller (ideally) in an upright (vertical), sideways (horizontal), or flat position to/on a rigid surface with a minimum clear space of 3 inches on top and bottom. The antenna location indicates the top of the controller. See P06 Motor Controller.</p> | February 23, 2023 |

Conventions

| | |
|--|---|
| Bold | <ul style="list-style-type: none"> Used in procedures for names of interface elements, such as buttons, fields, and menu items. For names of apps. For emphasis, typically when introducing a new concept or for the adverb “NOT.” For measurements when necessary to distinguish from surrounding text |
| <i>Italics</i> | References to names of additional Turntide guides and documents. |
| Links | Blue font for cross-references within document and to external sources. |
| Note: | Indicates information that can help a customer make better use of a Turntide product. |
| Caution icon  | Indicates an instruction that draws attention to the risk of damage to the product, process, or surroundings. |
| Warning icon  | Indicates an instruction that draws attention to risk of injury or death and tells the customer how to avoid the potential problem. |

Legal

The information in this document is subject to change without notice and should not be construed as a commitment by Turntide Technologies® or Software Motor Company. Turntide Technologies assumes no responsibility for any errors that may appear in this document. In no event shall Turntide Technologies be liable for incidental or consequential damages arising from use of this document or the software and hardware described in this document. © Turntide Technologies. All rights reserved.

Contact

877.776.8470 | support@turntide.com | 1295 Forgewood Avenue | Sunnyvale, CA 94089 www.turntide.com

Contents

| | |
|---|----|
| Audience | 5 |
| Installation Prerequisite | 5 |
| About this Installation Guide | 6 |
| Tools You'll Need | 7 |
| Included Items | 8 |
| Box 1: Turntide Smart Motor | 8 |
| Box 2: Turntide Smart Motor Controller | 10 |
| Box 3: Turntide Motor Systems (RTU) Installation Kit | 11 |
| Box 4: Motor Noise Isolation Feet Installation Kit | 13 |
| Control Wiring Method: Monitor Only | 14 |
| Installation Instructions | 16 |
| Task 1: Uninstall the existing motor and Install the Turntide Motor | 16 |
| Task 2: Verify Jumper Pins (P04, P05, and SL120 Motor Controllers) | 22 |
| SL121 Motor Controller Switches | 25 |
| SW1 for Modbus Termination Resistor and Digital Input Mode | 25 |
| UI1 to UI4 | 25 |
| SL121 Motor Controller User-Selectable Switch Options Usage & Example | 26 |
| P06 Motor Controller Switch Options | 28 |
| SW7 for Modbus Termination Resistor and Digital Input Mode | 28 |
| P06 Motor Controller User-Selectable Switch Options Diagram | 29 |
| P06 Motor Controller User-Selectable Switch Options Usage & Examples | 30 |
| Task 3: Install the Turntide Motor Controller | 32 |
| Task 4: Wire Components | 37 |
| Task 5: Start Up the System | 40 |
| Wiring Information SL120 Motor Controllers, Monitor Only | 42 |
| Wiring Information P04/P05 Motor Controllers, Monitor Only | 43 |
| Wiring Information SL121 Motor Controllers, Monitor Only | 44 |
| Wiring Information P06 Motor Controllers, Monitor Only | 45 |
| Appendix | 46 |
| How to Install Noise Isolation Feet | 46 |
| Noise Isolation Feet – Charts You Need | 46 |
| Installation Steps | 47 |

| | |
|--|----|
| KIT-ISLN-FT-101 Motor Noise Isolation Feet Installation on V01 and V02 Motors, Frames A, C, and D | 48 |
| KIT-ISLN-FT-201 Motor Noise Isolation Feet Installation on V01 and V02 Motors, Frame F | 51 |
| KIT-ISLN-FT-301 Motor Noise Isolation Feet Installation on V03 Motors, Frame H | 54 |
| Special Instructions for Installation on a Vertical Mounting Plate | 57 |
| Key Concepts | 57 |
| Supply and Return Air Sensors | 61 |
| How to Disable Wi-Fi through Hardware on P06 and SI121 Motor Controllers AFTER Motor Commissioning Completed | 62 |
| Troubleshooting a Stalled Motor | 64 |

Audience

The instructions in this guide are intended for a mechanical technician who is familiar working with commercial HVAC systems such as rooftop units (RTUs), air handling units (AHUs), and other similar equipment.

You will have access to Remote Support from Turntide Technical Services:

877.776.8470 (877-PRO-TIP+)

support@turntide.com

Installation Prerequisite

Installers are required to complete our online training courses for this product prior to performing installations. See Turntide Academy <https://www.turntideacademy.com/>.



Required: Follow all local and national electrical codes, safety compliance requirements, and common installation procedures.

About this Installation Guide

This guide provides instructions on how to install and set up the Turntide Motor System, consisting of the Turntide Smart Motor and the Turntide Motor Controller. The contents of kits and recommended tools are also listed. Additional guides provide information on networking and connections to Turntide Cloud Services.

The following motors and controllers are featured in this guide:

- V series motors: V01, V02, and V03
- P04 and P05 series motor controllers
- P06 series motor controllers **New Product**
- SL120 series motor controllers
- SL121 series motor controllers **New Product**









Reference material and additional instructions on [Turntide Academy](#):

- **Quick Reference Guide:** Motor weight, power, voltage, speed, and physical dimensions
- **Turntide Technician App User Guide:** Essential to commissioning and interacting with the Turntide Smart Motor System. A smart phone with the Turntide Technician App is necessary for connecting to the motor controller. The mobile app is required to configure the motor for operation. You cannot complete the installation without using the mobile app.
- **Remote Monitoring Kit (RMK+ Long Range) Installation Guide:** The RMK product is the primary means of connecting a motor controller to the Turntide Cloud applications using Wi-Fi and cellular 4G communications.
- **RTU Control Scheme Options:** More information on the difference between Man-in-the-Middle and Monitor Only control schemes.



Tools You'll Need

Table 1 Tools List
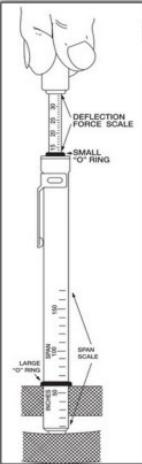
| | | | |
|---|---|--|--|
|  Belt tension gauge |  Uni-bit, hole saw or knock outs (for drilling hole into the RTU for the external unit antenna) |  Drill bit index up to 1/2in |  Wheel puller 3-jaw for removing existing motor pulley |
|  Terminal (spade) crimp tool |  Wire strippers |  Cordless drill |  Torque wrench |
|  Adjustable pliers |  Needle nose pliers |  Multi-VOM meter |  Clamp amp meter |
|  Screwdriver Phillips |  Screwdriver slot |  Hex wrenches 2mm and 5mm |  Hex wrench set 1/8in - 3/8in |
|  Combo Box/Open-End wrenches up to 3/4in Ratcheting type recommended. |  Thin head access wrenches |  90-degree offset wrenches | Additional supplies: <ul style="list-style-type: none"> • Silicon caulk • Loctite 620 retaining compound • Degreaser |


Included Items

Everything typically required to install the Turntide Smart Motor System arrives in separate boxes:

- Box 1: Turntide Smart Motor
- Box 2: Turntide Motor Controller
- Box 3: Turntide Motor Systems (RTU) Installation Kit
- Box 4: Motor Noise Isolation Feet Installation Kit (*may not be included in your installation*)



Note: Not all components in a kit will be used on every installation. Also, for unique applications, additional supplies may be required.

Box 1: Turntide Smart Motor

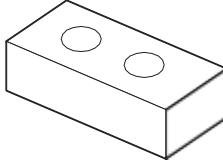
| Item | Quantity |
|---|----------|
| Turntide motor Use appropriate equipment and ensure safe handling when moving/lifting motors. For motor weights, see the <i>Quick Reference Guide</i> on Turntide Academy . | 1 |
| Shaft Adapter & Key (included only V01 Frame C motors) | 1 |
|  Caution: Motor power harnesses are rated to 600 V and the Turntide controller and motor nameplates indicate operation up to 680 V. | 1 |
| Power cable Voltage rating on power cabling is AC voltage and any reference to 680 V is DC. <ul style="list-style-type: none"> • 600 VAC cable is acceptable to hold 680 VDC • 230 VAC solutions may reference up to 340 VDC • 460 VAC solutions may refer up to 680 VDC • 575 VAC solutions may refer up to 850 VDC | 1 |
| Feet spacers supplied with V01 and V02-D motors, which allow for better wrench access. (Do NOT use with noise isolation feet.) | 2 |
|    | |



| Item | Quantity |
|---|----------|
| Bolts for feet spacers supplied with V01 and V02-D motors (M6 x 1mm x 25 mm)   | 4 |
| Mounting plate bolt sleeves (5/16in x 9/16in x 3/8in) supplied with V01 and V02 motors, which allows for uniform tightening of the nut. (Do NOT use with noise isolation feet.)   | 4 |

Box 2: Turntide Smart Motor Controller
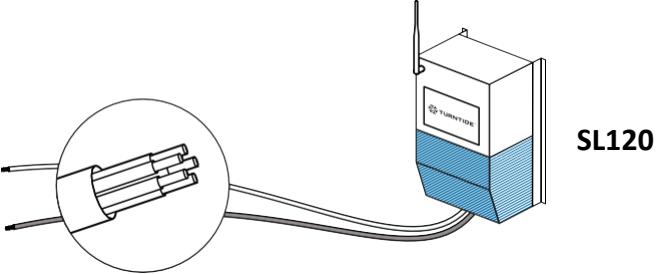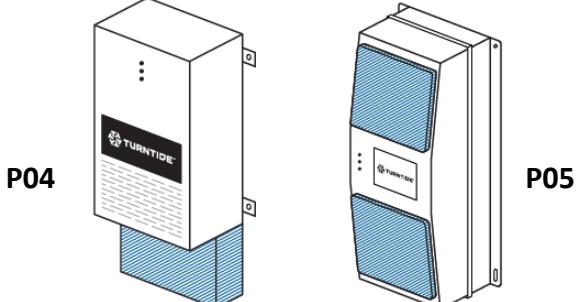
| Item | Quantity |
|--|--|
| (Pre-wired) Motor Controller and Control Cables  | 1 Motor Controller 2 Cables |
| Different Turntide Motor Controller models are available for different motor configurations. Their installation is described in this guide.  | |
| <p>All cables provided by Turntide are NOT rated for outdoor use.</p> <p>Antenna comes attached to SL120/SL121 motor controllers. For the P04 and P05 motor controllers, ensure you find the antenna in the box and attach it to the controller if a Remote Monitoring Kit (RMK) is NOT used on the jobsite.</p> <p>Note: Motor Controller Connectors <ul style="list-style-type: none"> • SL120, P04, and P05 motor controllers have female antenna connectors • SL121 and P06 motor controllers have male connectors </p> |   <p>Figure 1 Example of male connector on SL121 motor controller</p> |

Box 3: Turntide Motor Systems (RTU) Installation Kit
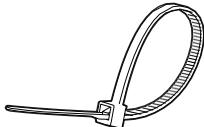
| Item | Quantity |
|---|------------------|
| Wire nuts – tan and red for motor power cable  | 6 of each |
| Wire nuts – blue for thermostat  | 8 |
| Hex head screws #10 x $\frac{3}{4}$ in  | 6 |
| Cable ties, 8 in  | 10 |
| Snap-in bushing – $\frac{1}{2}$ in  | 6 |
| Snap-in bushing – $\frac{3}{4}$ in  | 6 |
| Snap-in bushing – $1\frac{1}{4}$ in  | 2 |
| Washer for #10 screw, $\frac{1}{4}$ in ID and 9/16 inch OD  | 4 |
| Cable tie holder, center mount  | 6 |

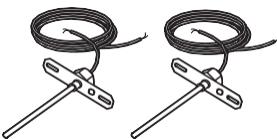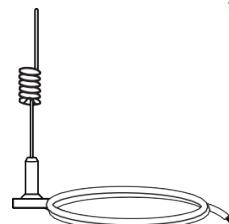
| Item | Quantity |
|--|----------|
| May arrive in a separate box. Air temp sensors and a 10-inch wire included if applicable. Sensor appearance may vary. | 2 |
|  External Dual-Band Wi-Fi antenna, 3m cable for installation when a Remote Monitor Kit (RMK) is also installed on a jobsite. See Turntide Academy for RMK installation guides. | 1 |
|  Turntide and Caution labels | 1 each |
| Wi-Fi Antenna Riser Kit - 1 kit (used only when external antenna necessary) | |
| ½ in Conduit hanger | 2 |
|  | 2 |
| ½in Coupling | 1 |
|  | 1 |
| ½in Connector | 1 |
|  | 2 |

| Item | Quantity |
|--|----------|
| Electrical Box Cover | 1 |
|  | |
| Weather Tite Connector, ½ in | 1 |
|  | |
| Cord Grip Kit (<i>or fittings already attached to blue cable</i>) | 1 Kit |
|  | |

Box 4: Motor Noise Isolation Feet Installation Kit

May not be required on every motor installation.

| | |
|--|-------|
| KIT-ISLN-FT-101 Motor Noise Isolation Feet Installation on V01 and V02 Motors, Frames are A, C, D KIT-ISLN-FT-201 Motor Noise Isolation Feet Installation on V01 and V02 Motors, Frame F KIT-ISLN-FT-301 Motor Noise Isolation Feet Installation on V03 Motors, Frame H | 1 Kit |
| Example of V01 motor with noise isolation feet KIT-ISLN-FT-101 installed. | |

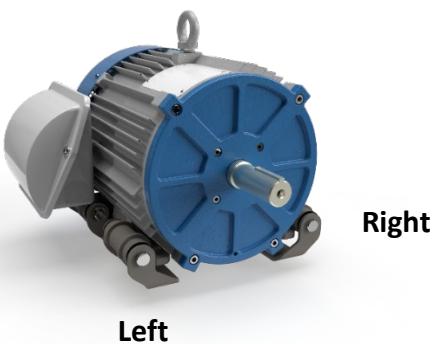

For Noise Isolation Feet Intallation instructions, see [Appendix](#)

Control Wiring Method: Monitor Only


Defined by a Motor Controller wired in parallel with the 24V signals from the thermostat. Thermostat directly controls RTU heating and cooling stages.

- BMS or Thermostat has no direct connection to the Turntide motor controller's inputs
- Turntide motor controller inputs are wired to the RTU unit terminal board
- Turntide motor controller outputs are now available for other potential uses, such as run status or alarm/warning indication. NOTE: Supported only with a Monitor-Only specific cascade flow.
- The thermostat/BMS will send signals to the motor controller and RTU unit terminal board separately.

The P04, P05, and SL120 motor controllers are prewired with a **white** input and **black** output cable.

- The **white** input wired in parallel with the thermostat 24V signals to the RTU.
- The **black** cable wired for 24V Common.

The SL121 and P06 motor controllers are prewired with a **blue** input cable.

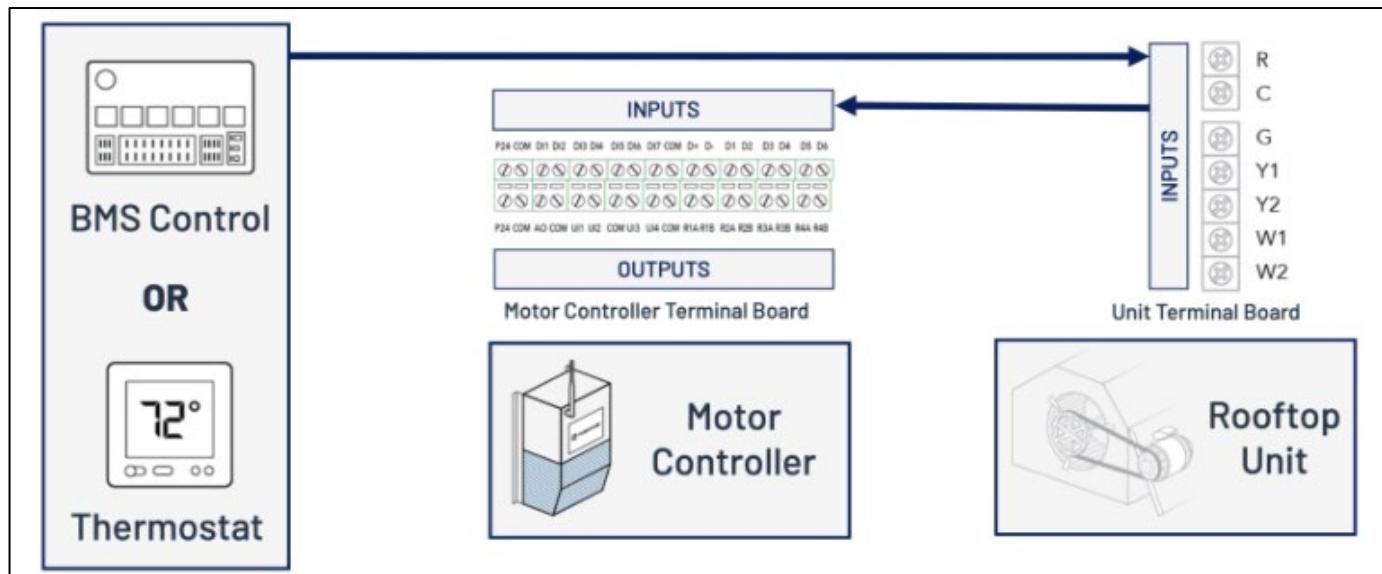

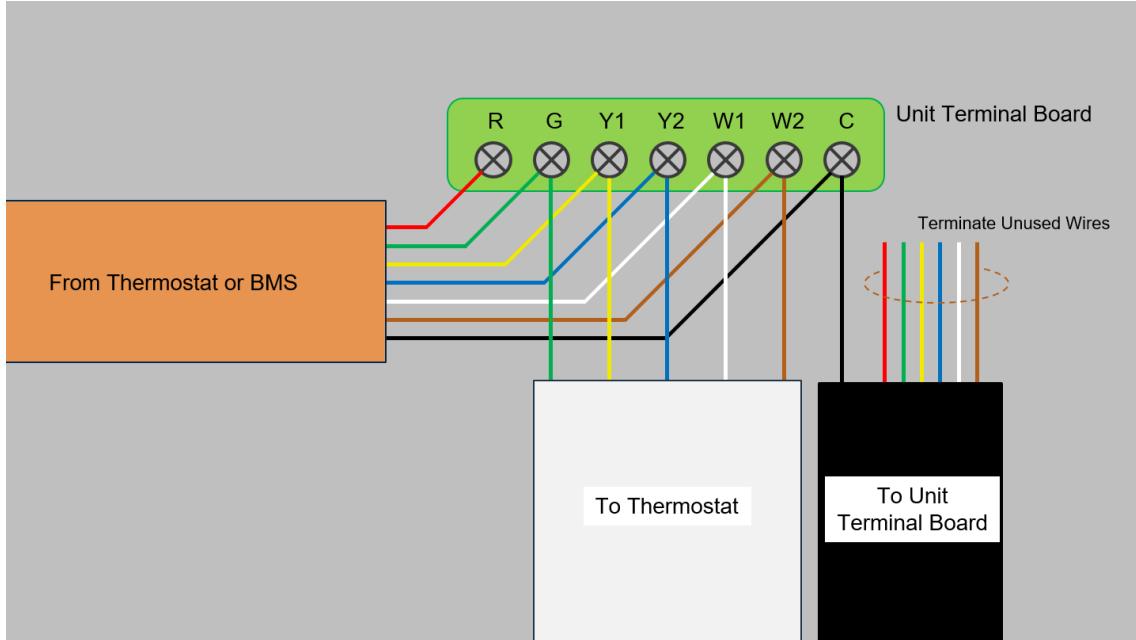


Figure 2 Monitor Only for P04, P05, and SL120 Motor Controllers

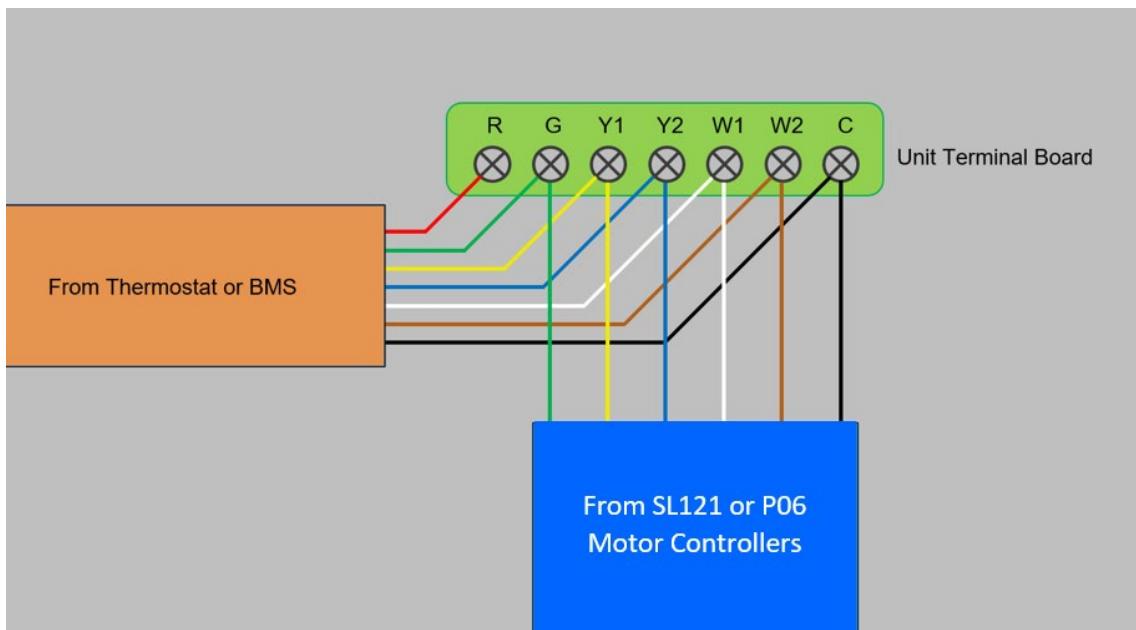



Figure 3 Monitor Only for SL121 or P06 Motor Controller


Installation Instructions




Follow these simple step-by-step instructions to replace the existing motor in a common Rooftop Unit (RTU) with a new Turntide Smart Motor System.







Task 1: Uninstall the existing motor and Install the Turntide Motor
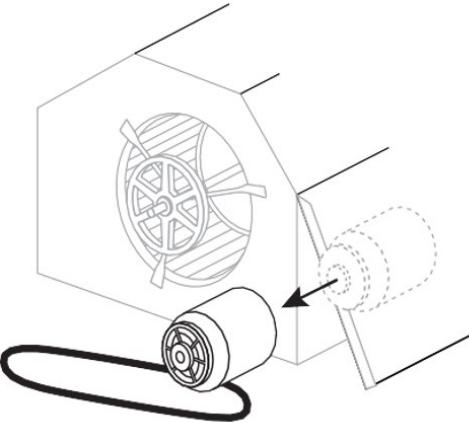
| Step | Instructions for Task 1: Uninstall the existing motor and Install the Turntide Motor | |
|------|--|---|
| 1 | Isolate all incoming power to RTU unit using normal Lock Out/Tag Out and local code requirements and verify that all power is turned off to the unit. |  |
| 2 | <ol style="list-style-type: none"> Remove the existing belt. Remove the motor and mounting plate as one assembly. In most cases, it's easier to remove the motor pulley before removing the motor. |  |
| 3 | <ol style="list-style-type: none"> Launch the XOi mobile app. Open the Turntide Motor Installation and Start Up workflow. Complete the first 7 steps. After the motor is installed, finish the rest of the XOi workflow steps. <p>Note: Trying to complete the XOi workflow as you progress through the installation process may slow down the overall installation.</p> |  |
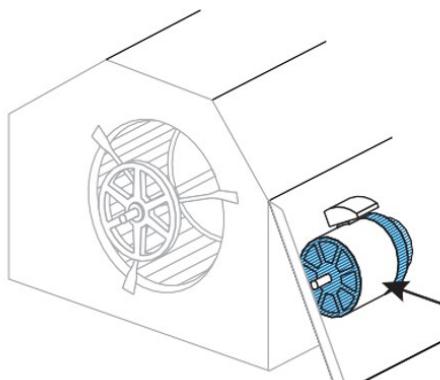
| Step | Instructions for Task 1: Uninstall the existing motor and Install the Turntide Motor | |
|------|--|---|
| 4 | <p>Determine if you should install the Noise Isolation Feet to the base of the new motor. Consider the following points:</p> <ol style="list-style-type: none"> 1. Noise isolation feet increase the overall height of the Turntide motor as follows: <ul style="list-style-type: none"> • KIT-ISLN-FT-101 on a V01 motor raises the shaft height 0.5 inches (1.27 cm) • KIT-ISLN-FT-101 on a V02-D motor raises the shaft height 0.5 inches (1.27 cm) • KIT-ISLN-FT-201 on a V02-F motor raises the shaft height 0.125 inches (0.32 cm) • KIT-ISLN-FT-301 on a V03 motor raises the shaft height 0.62 inches (1.57 cm) 2. You may have to increase the size of the belt once the isolator feet are installed. 3. It takes more time to complete the installation when you add noise isolation feet. 4. Is the the location where you are installing the motor a noise-sensitive area and therefore requires noise isolation feet? <p>YES, to installing noise isolation feet? Follow the instructions in the Appendix of this guide at this point in your installation process.</p> | <p>Example of V01 motor with noise isolation feet KIT-ISLN-FT-101 installed.</p>  <p>Right</p> <p>Left</p> <ol style="list-style-type: none"> 1. KIT-ISLN-FT-101 Motor Noise Isolation Feet Installation on V01 and V02 Motors, Frames are A, C, D 2. KIT-ISLN-FT-201 Motor Noise Isolation Feet Installation on V01 and V02 Motors, Frame F 3. KIT-ISLN-FT-301 Motor Noise Isolation Feet Installation on V03 Motors, Frame H |
| 5 | Install the Turntide Smart Motor to the existing motor mounting plate. |  |
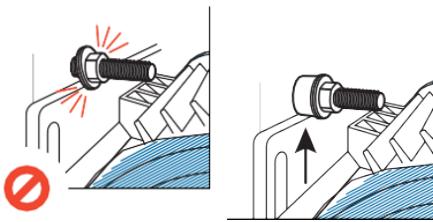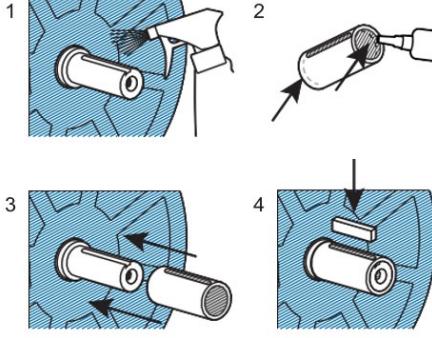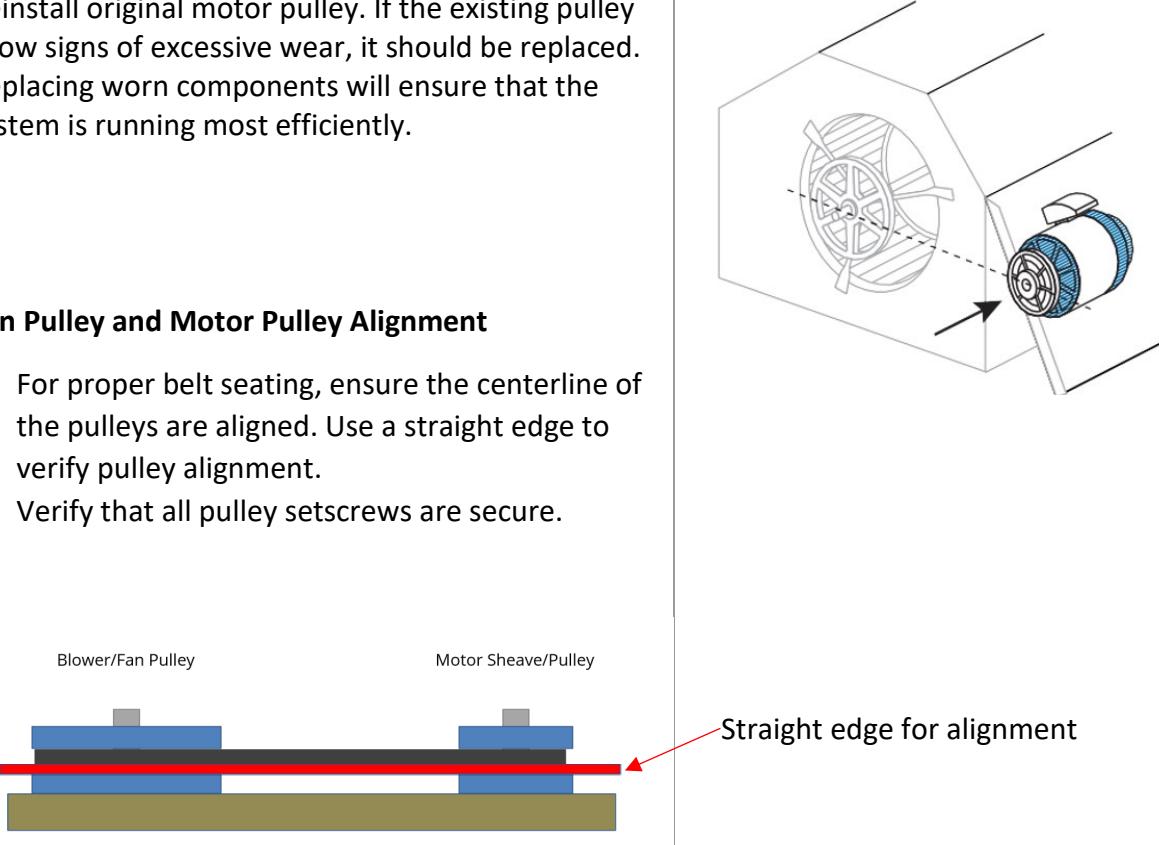
| Step | Instructions for Task 1: Uninstall the existing motor and Install the Turntide Motor | |
|------|--|--|
| 6 | <p>In some cases, tightening the motor plate nut is not possible. The provided bolt sleeves allow for proper nut tightening.</p> |  |
| 7 | <p>For V01 Frame C motors ONLY. The Turntide V01 Frame C motor has a 5/8in shaft, and the existing motor pulley is 7/8in ID.</p> <p>You must install the shaft adapter as follows:</p> <ol style="list-style-type: none"> 1. Clean the shaft with a degreaser. 2. Apply a small amount of Loctite 620 retaining compound. 3. Install the shaft adapter with the set screw towards the shaft end. 4. Insert the extended height shaft key and tighten the set screw to lock the shaft adapter in place. |  |
| 8 | <p>Reinstall original motor pulley. If the existing pulley show signs of excessive wear, it should be replaced. Replacing worn components will ensure that the system is running most efficiently.</p> <p>Fan Pulley and Motor Pulley Alignment</p> <ol style="list-style-type: none"> 1. For proper belt seating, ensure the centerline of the pulleys are aligned. Use a straight edge to verify pulley alignment. 2. Verify that all pulley setscrews are secure. <p>Blower/Fan Pulley Motor Sheave/Pulley</p>  | |
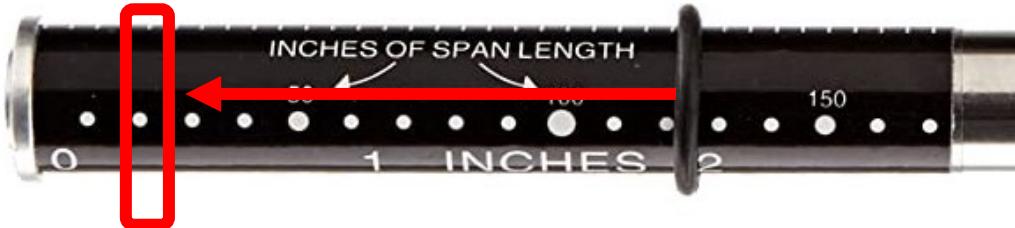
| Step | Instructions for Task 1: Uninstall the existing motor and Install the Turntide Motor |
|------|--|
| 9 | <p>Install the belt</p> <p>Measure the belt tension with a belt tension gauge. Do NOT attempt to tension the belt without proper testing tools. If the existing belt show signs of excessive wear, it should be replaced.</p> <ol style="list-style-type: none"> 1. Measure the distance (inches) from the center shaft of the motor to the center shaft of the blower wheel.  <ol style="list-style-type: none"> 2. Round the distance to the closest value. If evenly divided, round down. <i>For example, 20 1/2 inches in round down to 20 inches.</i> 3. Set the bottom O-ring of the belt tension gauge to that value. <i>For example, slide the O-ring down to the 20 inch mark or notch on your gauge.</i>  <ol style="list-style-type: none"> 4. Set the top O-ring at zero (0). (Slide the O-ring to the base.)  |
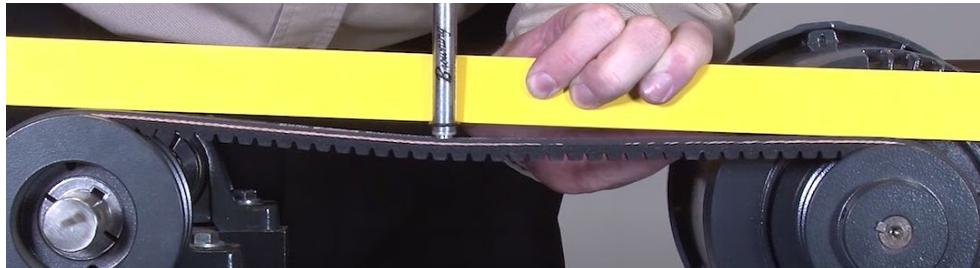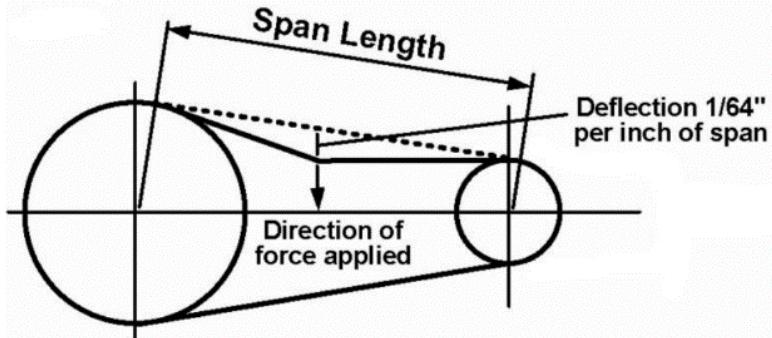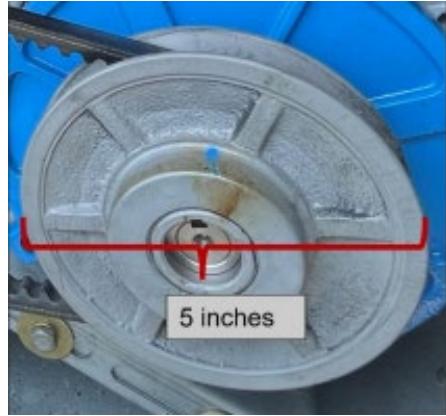
| Step | Instructions for Task 1: Uninstall the existing motor and Install the Turntide Motor |
|------|--|
| | <p>5. Set a straight edge across the top of the belt. Deflect the belt until the bottom O-ring is in the same plane as the straight edge.</p>  <p>HVAC industry standard</p>  <p>6. The top O-ring will have moved up the gauge and show the amount of force used. For example, say 7 pounds.</p> <p>7. Measure the diameter of the smaller pulley. <i>The diameter of the smaller pulley determines pressure to the belt that should be applied to the belt.</i></p>  |

| Step | Instructions for Task 1: Uninstall the existing motor and Install the Turntide Motor | | | | | | | | |
|------|--|--------------------------------|-----------|-------------------------|-------------|--------------|----------|--|--|
| | | Smallest Pulley Diameter Range | RPM Range | Belt Deflection Setting | | | | | |
| | | | | uncogged belts | | cogged belts | | | |
| | | 4L, A, AX | 2.0 - 2.9 | used belt | new belt | used belt | new belt | | |
| | | | | 1000 - 2500 | 1.8 | 2.6 | 2.0 | | |
| | | | | 2501 - 4000 | 1.4 | 2.0 | 1.6 | | |
| | | | | 3.0 - 3.6 | 1000 - 2500 | 3.6 | 5.4 | | |
| | | | | 2501 - 4000 | 2.8 | 4.1 | 3.3 | | |
| | | | | 3.8 - 4.8 | 1000 - 2500 | 4.4 | 6.6 | | |
| | | | | 2501 - 4000 | 3.7 | 5.7 | 4.3 | | |
| | | | | 5.0 - 7.0 | 1000 - 2500 | 5.3 | 7.8 | | |
| | | | | 2501 - 4000 | 4.6 | 6.8 | 5.1 | | |
| | | | | 3.4 - 4.2 | 860 - 2500 | 4.8 | 7.2 | | |
| | | | | 2501 - 4000 | | 4.1 | 6.2 | | |
| | | | | 5L, B, BX | 4.4 - 5.6 | 860 - 2500 | 5.2 | | |
| | | | | | 2501 - 4000 | 4.5 | 6.6 | | |
| | | | | 5.8 - 8.6 | 860 - 2500 | 6.2 | 9.4 | | |
| | | | | | 2501 - 4000 | 6.0 | 6.8 | | |

If the belt cannot be properly tensioned, install a longer or shorter belt, as necessary.




Task 2: Verify Jumper Pins (P04, P05, and SL120 Motor Controllers)




Turntide motor controllers are designed for several applications.

The jumpers are used to configure the motor controller for a specific application.


| | |
|-------------------------------------|---|
| Digital Input Mode jumpers | Determine the inputs the motor controller recognizes. |
| Universal Input (UI) jumpers | <p>Define the connected device type.</p> <ul style="list-style-type: none"> • Currently UI1 and UI2 are used in applications with Supply and Return Air sensors. • Setting the respective jumpers across pins 1 & 2 configure the control to respond to the resistive load of the thermistor. |

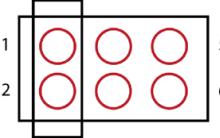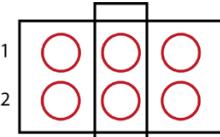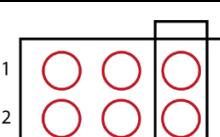

| Motor Controller Model | Modbus EOL Jumper | Digital Input Mode Jumper | Universal Input Mode Jumpers | | | |
|---|-------------------|---|------------------------------|------|---|------|
| | | | UI1 | UI2 | UI3 | UI4 |
| P04W | J96 | J96 | J5125 | J111 | J112 | J113 |
| P05 | J96 | J96 | J5125 | J111 | J112 | J113 |
| SL120 | J10 | J10 | J11 | J12 | J13 | J14 |
| Modbus EOL Selection | | | | | | |
| Pin Selections | | Mode | | | Examples | |
| 1 & 2 | | Installed: Enables EOL Resistor (End of line) Removed: Disables EOL Resistor (End of line) | | | Install if wiring to terminals D+/D is end of daisy chain. | |
|  | | | | | | |
| Digital Input Mode Selection | | | | | | |
| Pin Selections | | Mode | | | Examples | |
| 3 & 4 | | Enables digital inputs LOGIC or dry contact mode. | | | Install if S1 through S7 will be used to receive contact closures for control. | |
|  | | | | | | |
| 5 & 6 | | Enables digital inputs 24VAC signaling mode. | | | Install if S1 through S7 will be used to received 24VAC input signal from existing BMS or thermostat. | |
|  | | | | | | |

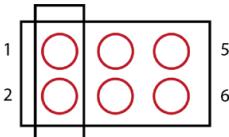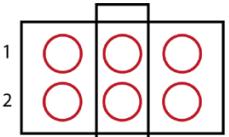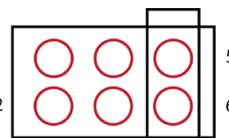
| Universal Input Mode Selection | | |
|---|--|---|
| Pin Selections | Mode | Examples |
| 1 & 2  | Resistive/LOGIC: Returns resistance of connected element or ON/OFF if declared as resistive or LOGIC mode respectively. | Resistive: 2 wire 10K Ω thermistor LOGIC: Dry contact closure = ON Dry contact open = OFF |
| 3 & 4  | Voltage: 0-10V signal ended voltage input. | 3-wire device with external power source that provides 0-10V signal. (1 signal, 1 common, 1 power) |
| 5 & 6  | Current: 0-20mA current input. | 3-wire device with external power source that provides a 0-20mA signal. (1 signal, 1 common, 1 power) |

To ensure the motor controller jumper pins are set correctly for an RTU installation, consult the following:

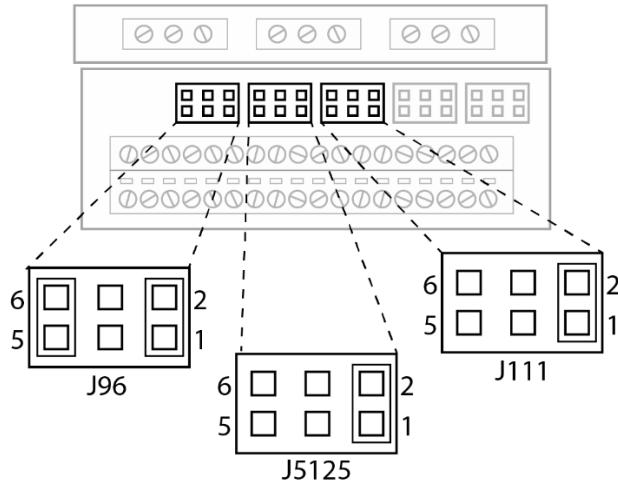


P04 Motor Controller Jumper Pins

- Confirm J96 jumper bridges are set on pins 1&2 and 5&6.
- Confirm J111 bridges are set on 1&2 and J5125 bridges on pins 1&2.

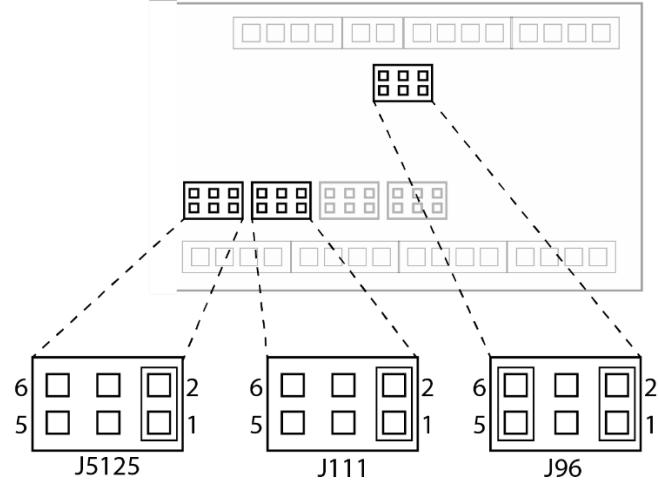

P05 Motor Controller Jumper Pins

- Confirm J5125 jumper bridges are set on pins 1&2.
- Confirm J111 bridges are set on 1&2 and J96 bridges on pins 1&2 and 5&6.

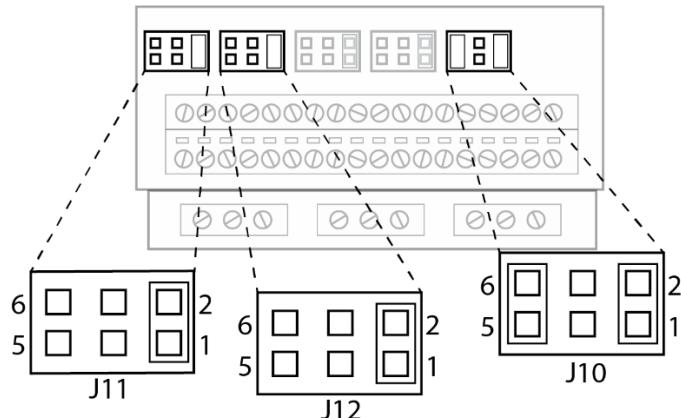


SL120 Motor Controller Jumper Pins

- Confirm J11 and J12 jumper bridges are set on pins 1&2.
- Confirm J10 jumper bridges are set on pins 1&2 and 5&6.

SL121 Motor Controller Switches

Figure 4 User-Selectable Switches SL121

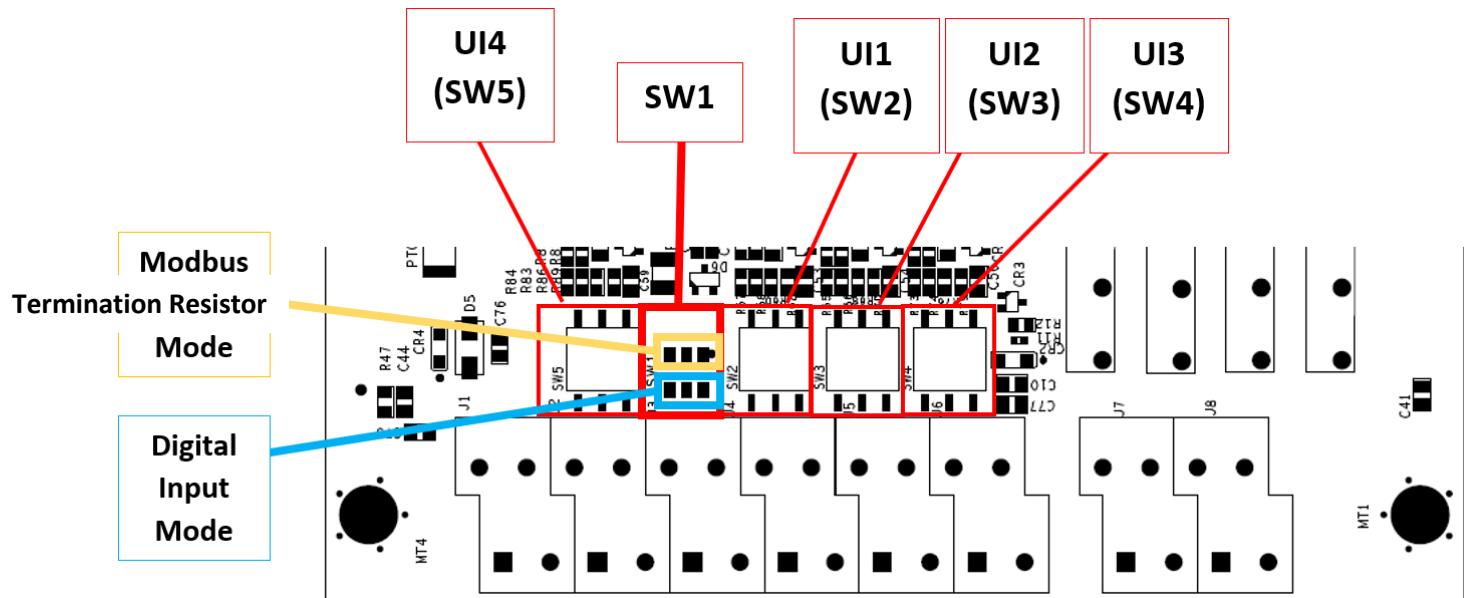

SW1 for Modbus Termination Resistor and Digital Input Mode

SW1 is used for both the Modbus Termination Resistor and Digital Input Mode settings selection. Digital or Discrete Inputs initiate a programmed response of the motor controller based on parameter settings.

UI1 to UI4


The Universal inputs define the connected device type. The Universal inputs may be configured in one of **three modes (I, V, R)** via DIP Switches.

- **Voltage (V):** 0-10V (may be used to control the inverter directly or used to monitor CO₂ or other sensors in HVAC systems)
 - **Current (I):** 0-20mA or 4-20mA (may be used for direct current loop control of the motor controller)
 - **Resistive (R):** Thermistor temperature sensors (may be used to monitor ambient air, return air, and supply air temperatures in HVAC systems)

Notes:



- Position 1 ON is the **resistive mode**
 - Position 2 ON is the **voltage mode**
 - Position 3 ON is the **current mode.**

ONLY one switch position should be ON at a time.

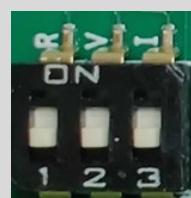

SL121 Motor Controller User-Selectable Switch Options Usage & Example

Table 2 Switch Options SL121
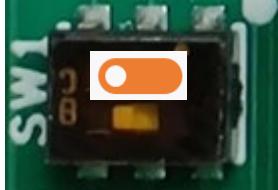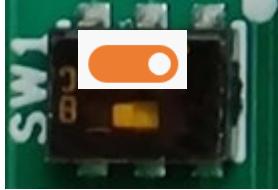
| Motor Controller Model | Modbus Termination Resistor Switch | Digital Input Mode Switch | Universal Input Mode Switches | | | |
|---|------------------------------------|---|-------------------------------|-----|---|-----|
| | | | UI1 | UI2 | UI3 | UI4 |
| SL121 | SW1 | SW1 | SW2 | SW3 | SW4 | SW5 |
| Modbus Termination Resistor Selection | | | | | | |
| Switch Position | | Mode | | | Examples | |
| Top LEFT position | | Modbus termination resistor is enabled | | | Set if wiring to terminals D+/D is end of daisy chain. | |
|  | | | | | | |
| Top RIGHT position | | Modbus termination resistor is disabled | | | | |
|  | | | | | | |
| Digital Input Mode Selection | | | | | | |
| Switch Position | | Mode | | | Examples | |
| Bottom LEFT position | | Enables digital inputs LOGIC or dry contact mode. | | | Set if DI1 through DI7 will be used to receive contact closures for control. | |
|  | | | | | | |
| Bottom RIGHT position | | Enables digital inputs 24VAC signaling mode. | | | Set if DI1 through DI7 will be used to received 24VAC input signal from existing BMS or thermostat. | |
|  | | | | | | |

| Motor Controller Model | Modbus Termination Resistor Switch | Digital Input Mode Switch | Universal Input Mode Switches | | | |
|--|------------------------------------|--|-------------------------------|-----|---|-----|
| | | | UI1 | UI2 | UI3 | UI4 |
| SL121 | SW1 | SW1 | SW2 | SW3 | SW4 | SW5 |
| Universal Input Mode Selection | | | | | | |
| UI1 to UI4 DIP Switch ON | | Mode | | | Examples | |
|  Caution: ONLY one switch position should be ON at a time; otherwise, may cause damage to the motor controller. R | | <p>Resistive/LOGIC: Returns resistance of connected element or ON/OFF if declared as resistive or LOGIC mode respectively.</p> | | | <p>Resistive: 2 wire 10K Ω thermistor LOGIC: Dry contact closure = ON Dry contact open = OFF</p> | |
|  Caution: ONLY one switch position should be ON at a time; otherwise, may cause damage to the motor controller. V | | <p>Voltage: 0-10V signal ended voltage input.</p> | | | <p>3-wire device with external power source that provides 0-10V signal. (1 signal, 1 common, 1 power)</p> | |
|  Caution: ONLY one switch position should be ON at a time; otherwise, may cause damage to the motor controller. I | | <p>Current: 0-20mA current input.</p> | | | <p>3-wire device with external power source that provides a 0-20mA signal. (1 signal, 1 common, 1 power)</p> | |


P06 Motor Controller Switch Options

The Universal inputs define the connected device type. The Universal inputs may be configured in one of **three modes (I, V, R)** via DIP Switches.

- **Voltage (V):** 0-10V (may be used to control the inverter directly or used to monitor CO2 or other sensors in HVAC systems)
- **Current (I):** 0-20mA or 4-20mA (may be used for direct current loop control of the motor controller)
- **Resistive (R):** Thermistor temperature sensors (may be used to monitor ambient air, return air, and supply air temperatures in HVAC systems)

Notes:

- Position 1 ON is the **resistive mode**
- Position 2 ON is the **voltage mode**
- Position 3 ON is the **current mode**.

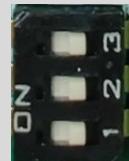


ONLY one switch position should be ON at a time.

SW7 for Modbus Termination Resistor and Digital Input Mode



SW7 is used for both the Modbus Termination Resistor and Digital Input mode settings selection. Digital or Discrete Inputs initiate a programmed response of the motor controller based on parameter settings.

The blue D+ D- cap is easily removed to improve access to SW7.

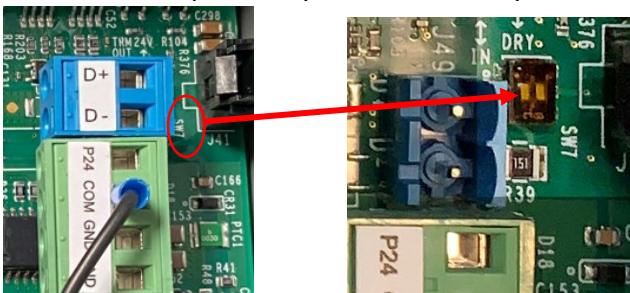

P06 Motor Controller User-Selectable Switch Options Diagram


Figure 5 User-Selectable Switches P06

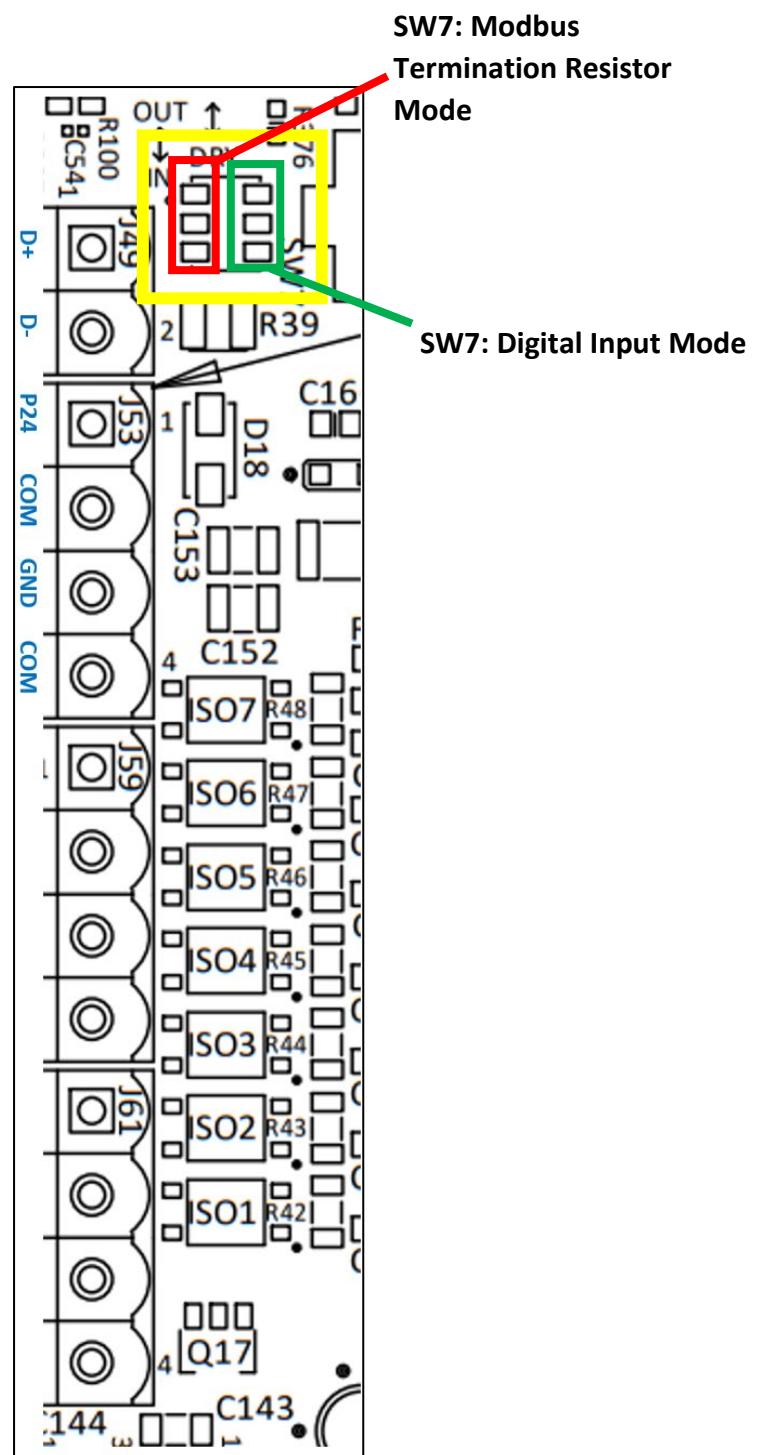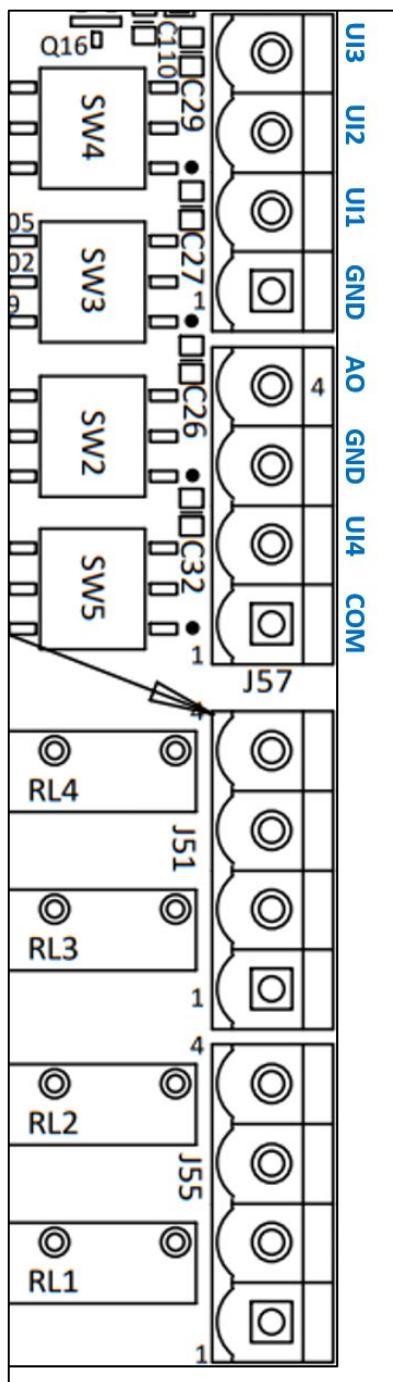

P06 Motor Controller User-Selectable Switch Options Usage & Examples

Table 3 P06 User-Selectable Switch Options



| Motor Controller Model | Modbus Termination Resistor Switch | Digital Input Mode Switch | Universal Input Mode Switches | | | |
|--|------------------------------------|---|-------------------------------|-----|---|-----|
| | | | UI1 | UI2 | UI3 | UI4 |
| P06 | SW7 | SW7 | SW2 | SW3 | SW4 | SW5 |
| Modbus Termination Resistor Selection | | | | | | |
| Switch Position | | Mode | | | Examples | |
| Left DOWN position  | | Modbus termination resistor is enabled | | | Set if wiring to terminals D+/D is end of daisy chain. | |
| Left UP position  | | Modbus termination resistor is disabled | | | | |
| Digital Input Mode Selection | | | | | | |
| Switch Position | | Mode | | | Examples | |
| Right DOWN position  | | Enables digital inputs LOGIC or dry contact mode. | | | Set if DI1 through DI7 will be used to receive contact closures for control. | |
| Right UP position  | | Enables digital inputs 24VAC signaling mode. | | | Set if DI1 through DI7 will be used to received 24VAC input signal from existing BMS or thermostat. | |

| Motor Controller Model | Modbus Termination Resistor Switch | Digital Input Mode Switch | Universal Input Mode Switches | | | |
|--|------------------------------------|--|-------------------------------|-----|---|-----|
| | | | UI1 | UI2 | UI3 | UI4 |
| P06 | SW7 | SW7 | SW2 | SW3 | SW4 | SW5 |
| Universal Input Mode Selection | | | | | | |
| UI1 to UI4 DIP Switch ON | | Mode | | | Examples | |
|  Caution: ONLY one switch position should be ON at a time; otherwise, may cause damage to the motor controller. R  | | <p>Resistive/LOGIC: Returns resistance of connected element or ON/OFF if declared as resistive or LOGIC mode respectively.</p> | | | <p>Resistive: 2 wire 10K Ω thermistor LOGIC: Dry contact closure = ON Dry contact open = OFF</p> | |
|  Caution: ONLY one switch position should be ON at a time; otherwise, may cause damage to the motor controller. V  | | <p>Voltage: 0-10V signal ended voltage input.</p> | | | <p>3-wire device with external power source that provides 0-10V signal. (1 signal, 1 common, 1 power)</p> | |
|  Caution: ONLY one switch position should be ON at a time; otherwise, may cause damage to the motor controller. I  | | <p>Current: 0-20mA current input.</p> | | | <p>3-wire device with external power source that provides a 0-20mA signal. (1 signal, 1 common, 1 power)</p> | |


Task 3: Install the Turntide Motor Controller



Required: Ensure that motor controller wires are isolated by a minimum of 6mm or 0.25 in from power cables and never route them through a common conduit or cable tray.
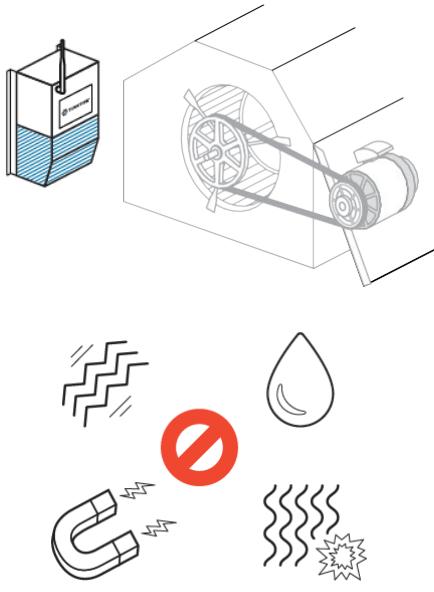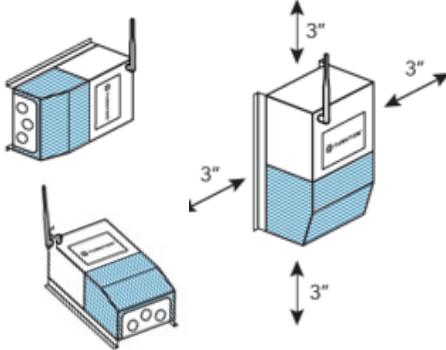
| Step | Instructions for Task 3: Install the Turntide Motor Controller |
|------|---|
| 1 | <p>Mount the Turntide Motor Controller inside the RTU—ideally in the blower cabinet—using caution not to penetrate the cabinet with the screws. Ensure the controller is far from excessive vibration, moisture, electromagnetic interference, and explosive/corrosive vapors.</p> <p>Note: If a suitable location is NOT available, please contact Turntide Technical Services.</p> <p>Do NOT install the controller on the floor in an area where pooled water or splashing water will affect it. You may have to install a channel slot (Unistrut or a similar riser) to elevate the controller so it is not in the lowest part of the cabinet where moisture can build up.</p>  |
| 2a | <p>SL120 Motor Controller</p> <ul style="list-style-type: none"> Mount in an upright (vertical), sideways (horizontal), or flat position to/on a rigid surface. Securely install the motor controller to the surface with a 1/4in or M7 fastener using the four screw tabs on the base. <p>Do NOT install the controller upside-down. The antenna location indicates the top of the controller.</p>  |



| Step | Instructions for Task 3: Install the Turntide Motor Controller |
|------|--|
| 2b | <p>SL121 Motor Controller</p> <p>Turntide smart motor controllers ship with cable fittings (cord grips) to seal or to provide strain relief to the terminals in which the conductors are connected.</p> <p>If your controller arrives with the cable fittings already installed, complete the controller installation as follows:</p> <ol style="list-style-type: none"> 1. Mount in an upright (vertical), sideways (horizontal), or flat position to/on a rigid surface. 2. Securely attach the motor controller to the surface with a 1/4in or M7 fastener using the four screw tabs on the base. 3. The SL121 has an integrated heatsink fan shroud. We strongly recommend a minimum of: <ul style="list-style-type: none"> • 2 inches clearance at the top and bottom of the controller to prevent impeding the airflow path • 0.5 inches around the sides of the controller to allow the inside ambient to vent. <p>If your controller does NOT have the cable fittings already installed, complete the controller installation as follows:</p> <p>The blue cable in the prewired controllers is coiled inside the unit. You will route the cable through the fitting and secure the fastening washer to clamp to the conduit ingress plate or plane:</p> <ul style="list-style-type: none"> • Install all strain relief accessories into the open holes with locknut on the inside. • Loosen the external portion of the strain relief (that you intend to pass the cable through) to allow for cable passage. • Uncoil the prewired cable and pass it through the strain relief from the inside of the enclosure to the outside of the enclosure. |

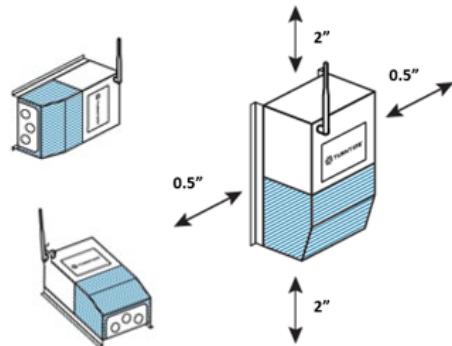

Do not install the controller upside-down. The antenna location indicates the top of the controller.

| Step | Instructions for Task 3: Install the Turntide Motor Controller |
|------|---|
| | <p>4. Tighten the external portion of the strain relief until the internal strain relief fitting seals and holds the cable secure.</p> <p>5. Hand-tighten until it is secure and the cable no longer moves when pulled. Do NOT overtighten.</p> <p>6. Mount in an upright (vertical), sideways (horizontal), or flat position to/on a rigid surface.</p> <p>7. Securely install the motor controller to the surface with a 1/4in or M7 fastener using the four screw tabs on the base.</p> <p>8. The SL121 has an integrated heatsink fan shroud. We strongly recommend a minimum of:</p> <ul style="list-style-type: none"> ○ 2 inches clearance at the top and bottom of the controller to prevent impeding the airflow path ○ 0.5 inches around the sides of the controller to allow the inside ambient to vent. <p>Note: If your business/organization requires that you manually disable Wi-Fi, see How to Disable Wi-Fi through Hardware on P06 and SI121 Motor Controllers AFTER Motor Commissioning Completed.</p> |

Do **not** install the controller upside-down. The antenna location indicates the top of the controller.
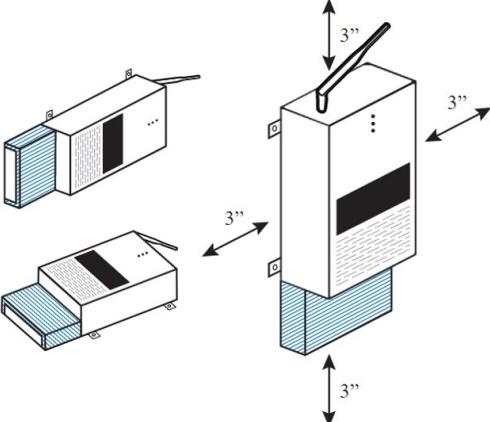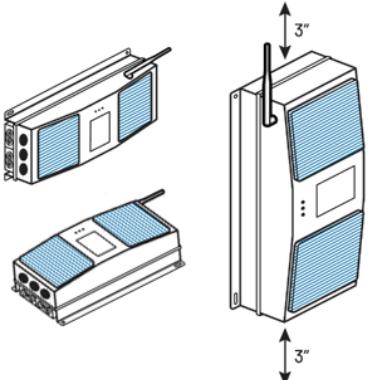
| Step | Instructions for Task 3: Install the Turntide Motor Controller |
|------|--|
| 2c | <p>P04 Motor Controller</p> <ol style="list-style-type: none"> 1. Insert bushings into motor controller and mount in an upright (vertical), sideways (horizontal), or flat position to/on a rigid surface with a minimum clear space of 3 inches on all sides. 2. Ensure you find the antenna in the box and attach it to the controller. <p>Note: The weight of the cables causes a load on the terminal blocks P1, P2, and P3. To reduce stress on the terminal blocks, use strain relieving devices such as cable glands to prevent possible damage.</p>  <div style="background-color: yellow; padding: 5px;"> <p>Do NOT install the controller upside-down. The antenna location indicates the top of the</p> </div> |
| 2d | <p>P05 Motor Controller</p> <ul style="list-style-type: none"> • Insert bushings into motor controller and mount in an upright (vertical), sideways (horizontal), or flat position to/on a rigid surface with a minimum clear space of 3 inches on top and bottom. Note that there is no minimum clearance on the sides. • Ensure you find the antenna in the box and attach it to the controller. <ol style="list-style-type: none"> 1. Cutting the grommet along its guidelines is acceptable. If the unit is exposed to the elements, use a conduit fitting to retain the IP66 rating. Power knockouts 3/4in, control cable 1/2in. 2. Route cables in a manner to prevent dripping water from entering the enclosure.  <div style="background-color: yellow; padding: 5px;"> <p>Do NOT install the controller upside-down. The antenna location indicates the top of the controller.</p> </div> |

2e

P06 Motor Controller

Turntide smart motor controllers ship with cable fittings (cord grips) to seal or to provide strain relief to the terminals in which the conductors are connected.

If your controller arrives with the cable fittings already installed, complete the controller installation as follows:


1. Mount the controller (ideally) in an upright (vertical), sideways (horizontal), or flat position to/on a rigid surface with a minimum clear space of 3 inches on top and bottom.
2. Note that there is no minimum clearance on the sides.

If your controller does NOT have the fittings already installed, complete the installation as follows:


The **blue** cable in the prewired controllers is coiled inside the unit. You will route the cable through the fitting and secure the fastening washer to clamp to the conduit ingress plate or plane:

1. Install all strain relief accessories into the open holes with locknut on the inside.
2. Loosen the external portion of the strain relief (that you intend to pass the cable through) to allow for cable passage.
3. Uncoil the prewired cable and pass it through the strain relief from the inside of the enclosure to the outside of the enclosure.
4. Tighten the external portion of the strain relief until the internal strain relief fitting seals and holds the cable secure.
5. Hand-tighten until it is secure and the cable no longer moves when pulled. Do NOT overtighten.
6. Mount the controller ideally in an upright (vertical), sideways (horizontal), or flat position to/on a rigid surface with a minimum clear space of 3 inches on top and bottom. Note that there is no minimum clearance on the sides.


Important: For P06 controllers, the included fittings must be installed to maintain an IP65 rating. If you do not use the included cord grip kit, use fittings that meet a minimum of IP65 water ingress protection and install them according to that manufacturer's instructions.

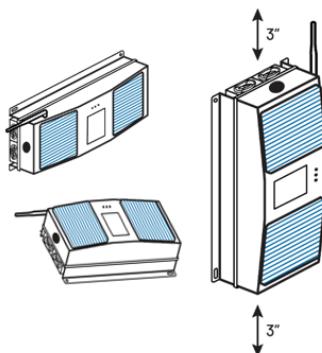


The antenna location indicates the top of the controller.



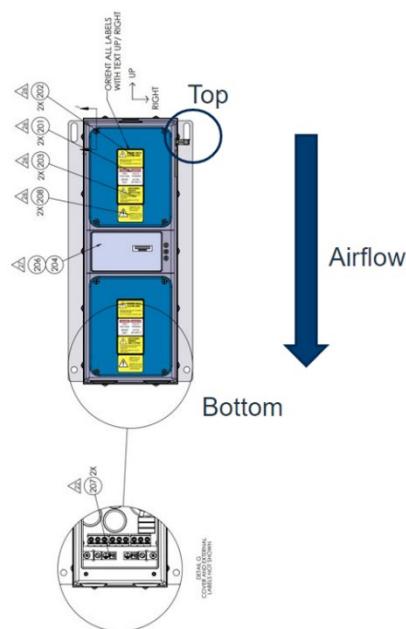






A note about Wi-Fi: If your business/organization requires that you manually disable Wi-Fi on the P06, see [How to Disable Wi-Fi through Hardware on P06 and SI121 Motor Controllers AFTER Motor Commissioning Completed.](#)
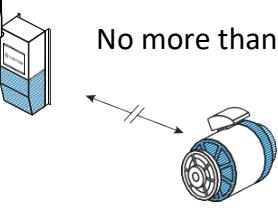
| Step | Instructions for Task 3: Install the Turntide Motor Controller |
|----------|---|
| 3 | <p>If a longer motor power cable is needed, Turntide offers a 10m (~33ft) option. Contact Turntide Technical Services for lengths greater than 10m.</p>  <p>No more than 100ft</p> |

Task 4: Wire Components
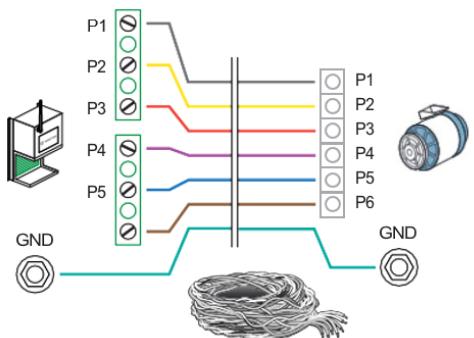
| Step | Instructions for Task 4: Wire Components |
|----------|--|
| 1 | <p>Refer to Wiring Information for physical layout of the wires.</p> <ul style="list-style-type: none"> • Wiring Information SL120 Motor Controllers, Monitor Only • Wiring Information P04/P05 Motor Controllers, Monitor Only • Wiring Information SL121 Motor Controllers, Monitor Only • Wiring Information P06 Motor Controllers, Monitor Only |
| 2 | <ol style="list-style-type: none"> 1. Insert bushing into the motor electrical box. 2. Install the ferrules end of the motor power cable to the Turntide Motor Controller and unterminated leads to the Turntide Smart Motor. 3. Cut excess length from the raw end of the cable to required length, leaving ample slack for future servicing.  |
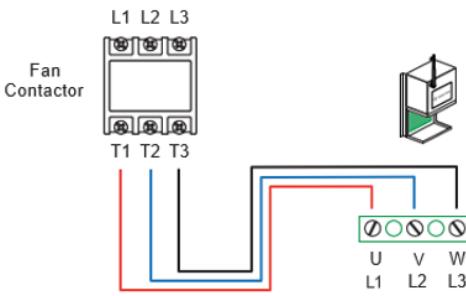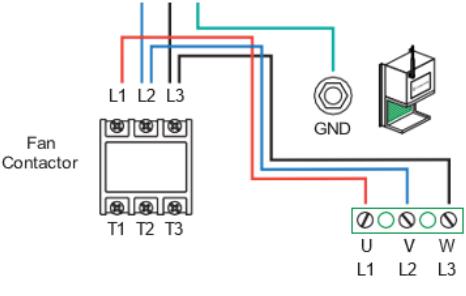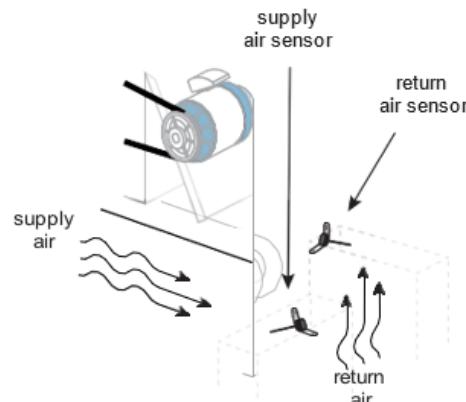
| Step | Instructions for Task 4: Wire Components |
|------|---|
| 3 | <p>Connect the induction motor power wires to the Turntide Motor Controller.</p> <p>If the original induction motor had separate overload wires, then they must be connected.</p>  <p>SL120/SL121 motor controllers are labeled L1, L3, and L3</p> <p>P04/P05/P06 motor controllers are labeled U, V, and W</p> |
| 4 | <p>Relocate induction motor power wires from the Load side of the fan contactor to the Line side, so that the Turntide Motor Controller has an unswitched power supply.</p> <p>Warning: Ensure that input power ground is terminated on the controller. If not properly grounded, the motor controller may not function correctly and could pose a safety hazard.</p>  |
| 5a | <p>Air Sensor Installation</p> <p>If you are NOT using air sensors, skip this task (7a) and task (7b).</p> <p>Air sensors are NOT intended for installations exposed to weather.</p> <p>Install the supply air sensor downstream of the coil and heat exchanger, and the return air sensor in the return duct inlet. (Sensors are identical and can be installed in either location.) For more information, see Supply and Return Air Sensors in the Appendix.</p> <p>All cables provided by Turntide are NOT rated for outdoor use.</p>  |
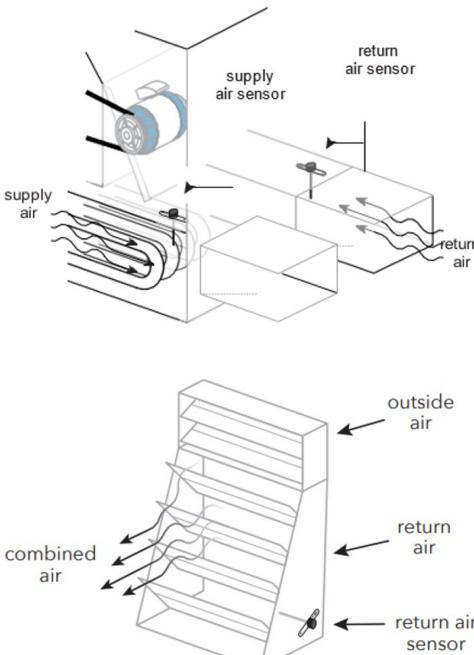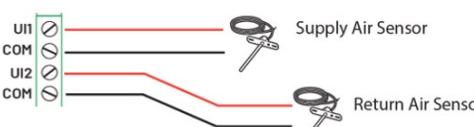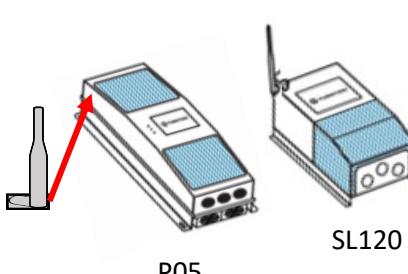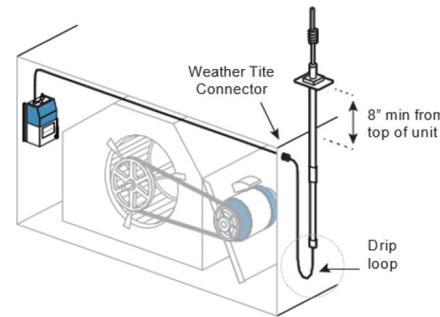
| Step | Instructions for Task 4: Wire Components |
|------|---|
| 5b | <p>For horizontally ducted units, install the supply air sensor through blower deck just beyond the heat exchanger, and the return air sensor where duct enters unit.</p> <p>For units equipped with an economizer, install the return air sensor upstream of the economizer such that it senses the indoor return air, not the outside air, taking care to not to impede damper blade operation.</p>  |
| 5c | <p>Wire sensors to the Turntide Motor Controller per configuration specific wiring diagrams.</p> <p>Sensors are not polarity sensitive.</p>  |
| 6 | <p>If you are not installing a Remote Monitoring Kit (RMK):</p> <ul style="list-style-type: none"> Ensure that you attach the small antenna shipped in the box with the P04 and P05 motor controllers to the controllers. <i>The SL120/SL121 and P06 motor controllers have the antenna connected.</i> Proceed to Task 5: Start Up the System. <p>If you are installing a Remote Monitoring Kit (RMK), follow the instructions in the <i>Remote Monitor Kit Installation Guide</i> on Turntide Academy.</p> <p>Disclaimer: For proper installation and grounding of the antenna, please refer to national and local codes (e.g., U.S.: NFPA 70, National Electrical Code, Article 810, Canada: Canadian Electrical Code, Section 54).</p>   |

Task 5: Start Up the System


| Step | Instructions for Task 5: Start Up the System |
|------|--|
| 1 | <p>1. Verify that all wiring is correct and wire terminations are tight and secure.</p> <p>2. Install cable ties around any loose wires and clean blower cavity of any debris from installation.</p> |
| 2 | <p>Turn the fan pulley by hand and verify that the motor pulley and fan rotate freely.</p> |
| 3 | <p>Turn on power to the unit.</p> |
| 4 | <p>Inspect the Turntide motor controller's LEDs for the correct run sequence.</p> <p>Upon power up:</p> <ol style="list-style-type: none"> The red and yellow LEDs will illuminate briefly The green LED will illuminate solid The yellow LED will blink once every five seconds to indicate logic flow |

| Step | Instructions for Task 5: Start Up the System |
|------|--|
| 5 | <p>At this point, you must use the Turntide Technician App to commission the motor. The setup wizard in the app will guide you through each step.</p> <p>A smart phone with the Turntide Technician mobile app is necessary for connecting to the motor controller. <i>You cannot complete the installation without using the mobile app.</i></p> <p>Turntide Technician App User Guide</p> |
| 6 | <p>General Information about the Turntide Technician App:</p> <p>The app will allow you to confirm that the motor is operating properly, the sensors, if used, are wired correctly, and if the motor controller is emitting proper signal strength.</p> <p>If the motor stalls, see Troubleshooting a Stalled Motor in the Appendix of this guide.</p> <p>The app will also allow you to save the summary screen on your phone image gallery for upload later to the XOi.</p> |
| 7 | <p>Affix the Turntide label on the exterior of the blower access panel and the Caution label on the blower housing.</p> |
| 8 | <p>Complete any remaining steps in the Turntide Motor Installation and Start Up XOi workflow.</p> |
| 9 | <p>Confirm all access panels are re-installed and secure on unit. Ensure all unit disconnects are in the ON position and remove all materials and tools from roof/location.</p> |

Wiring Information SL120 Motor Controllers, Monitor Only

Wiring Information

SL120 Motor Controllers

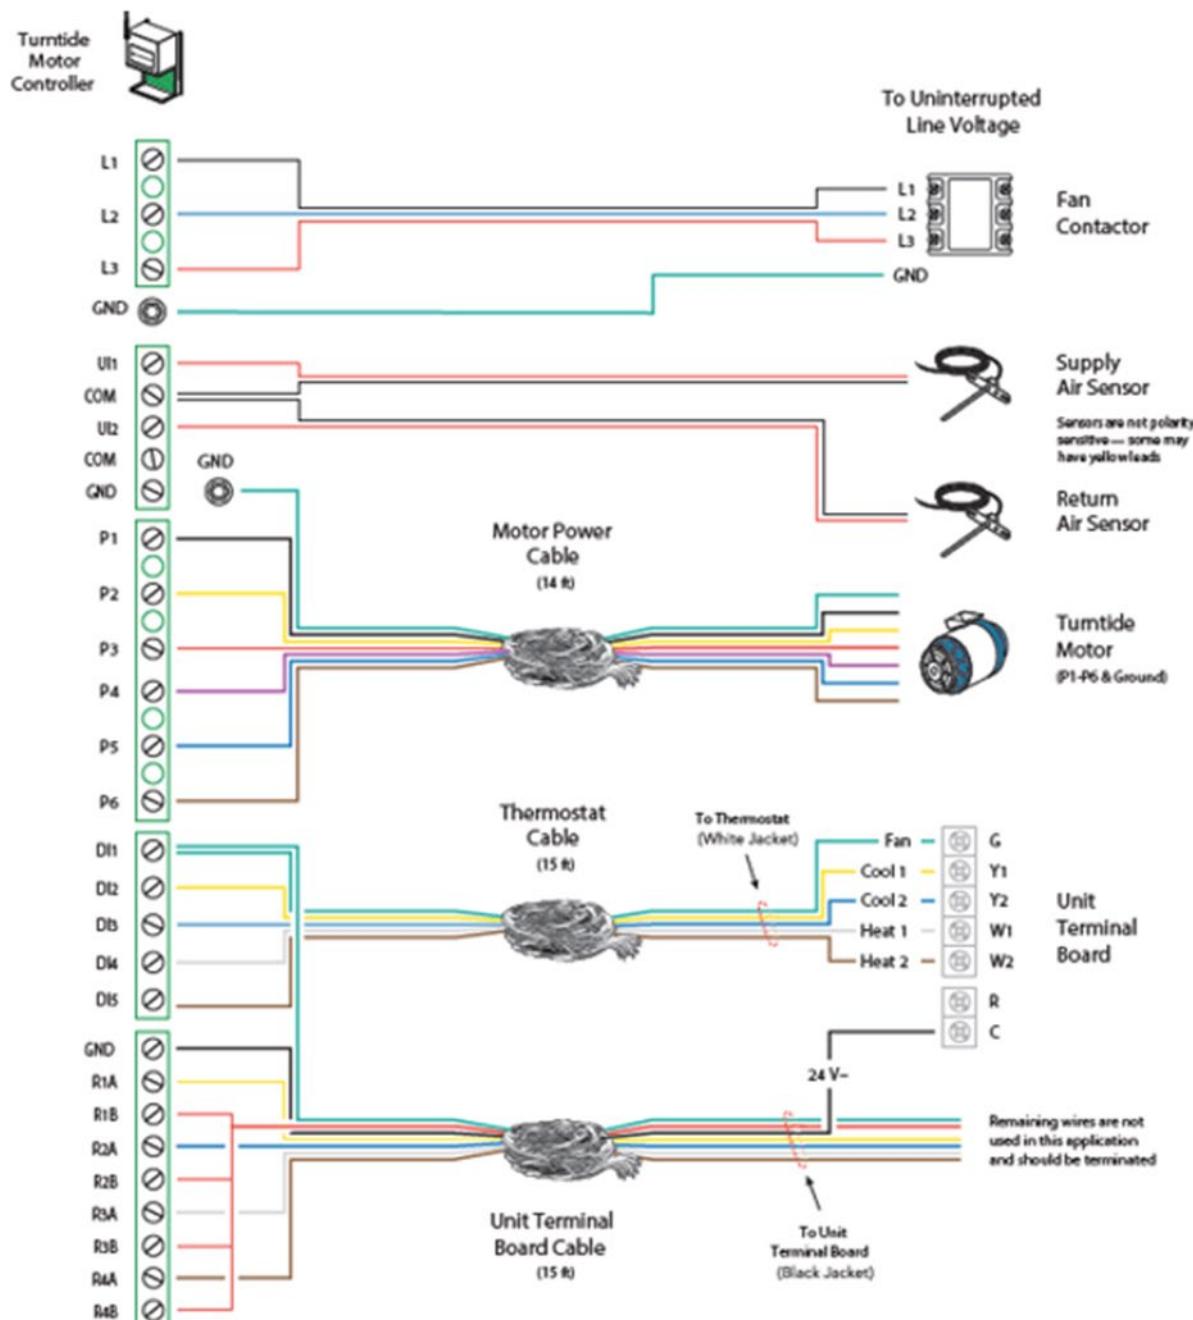


Note: In Monitor Only, the remaining wires in the black jacket cable are not used and should be terminated.

Wiring Information P04/P05 Motor Controllers, Monitor Only

Wiring Information

P04 / P05 Motor Controllers

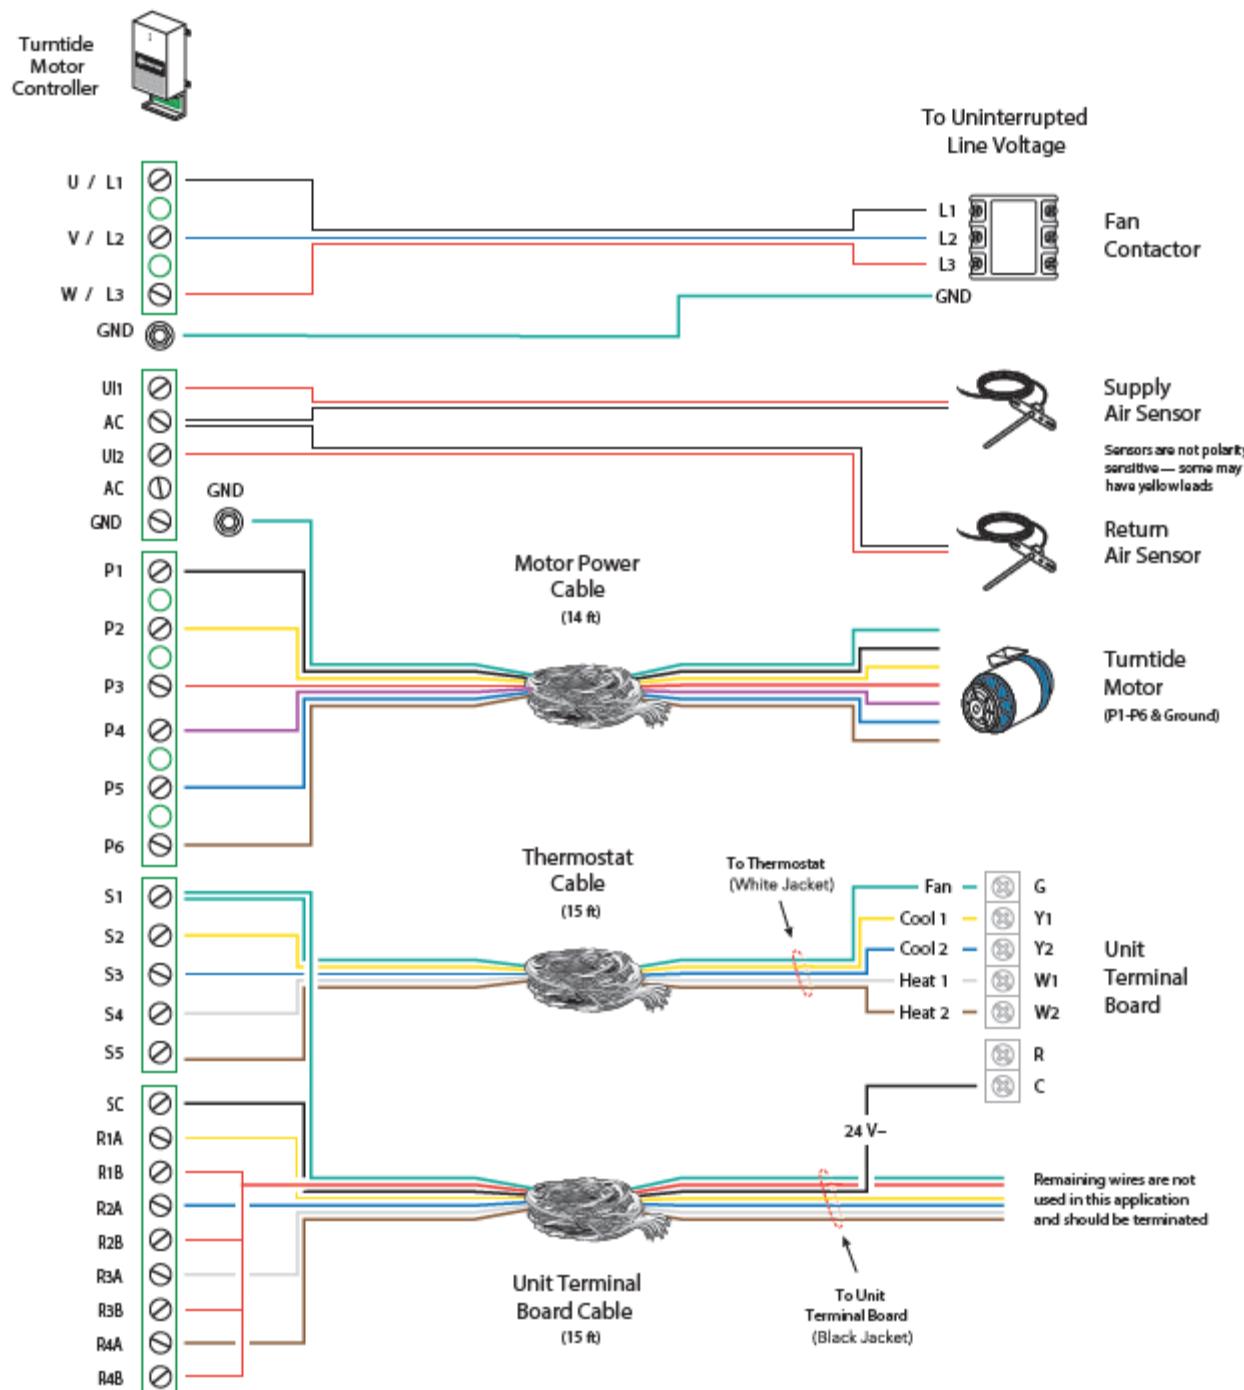


Note: In Monitor Only, the remaining wires in the black jacket cable are not used and should be terminated.

Wiring Information SL121 Motor Controllers, Monitor Only

Wiring Information


SL 121 Motor Controllers

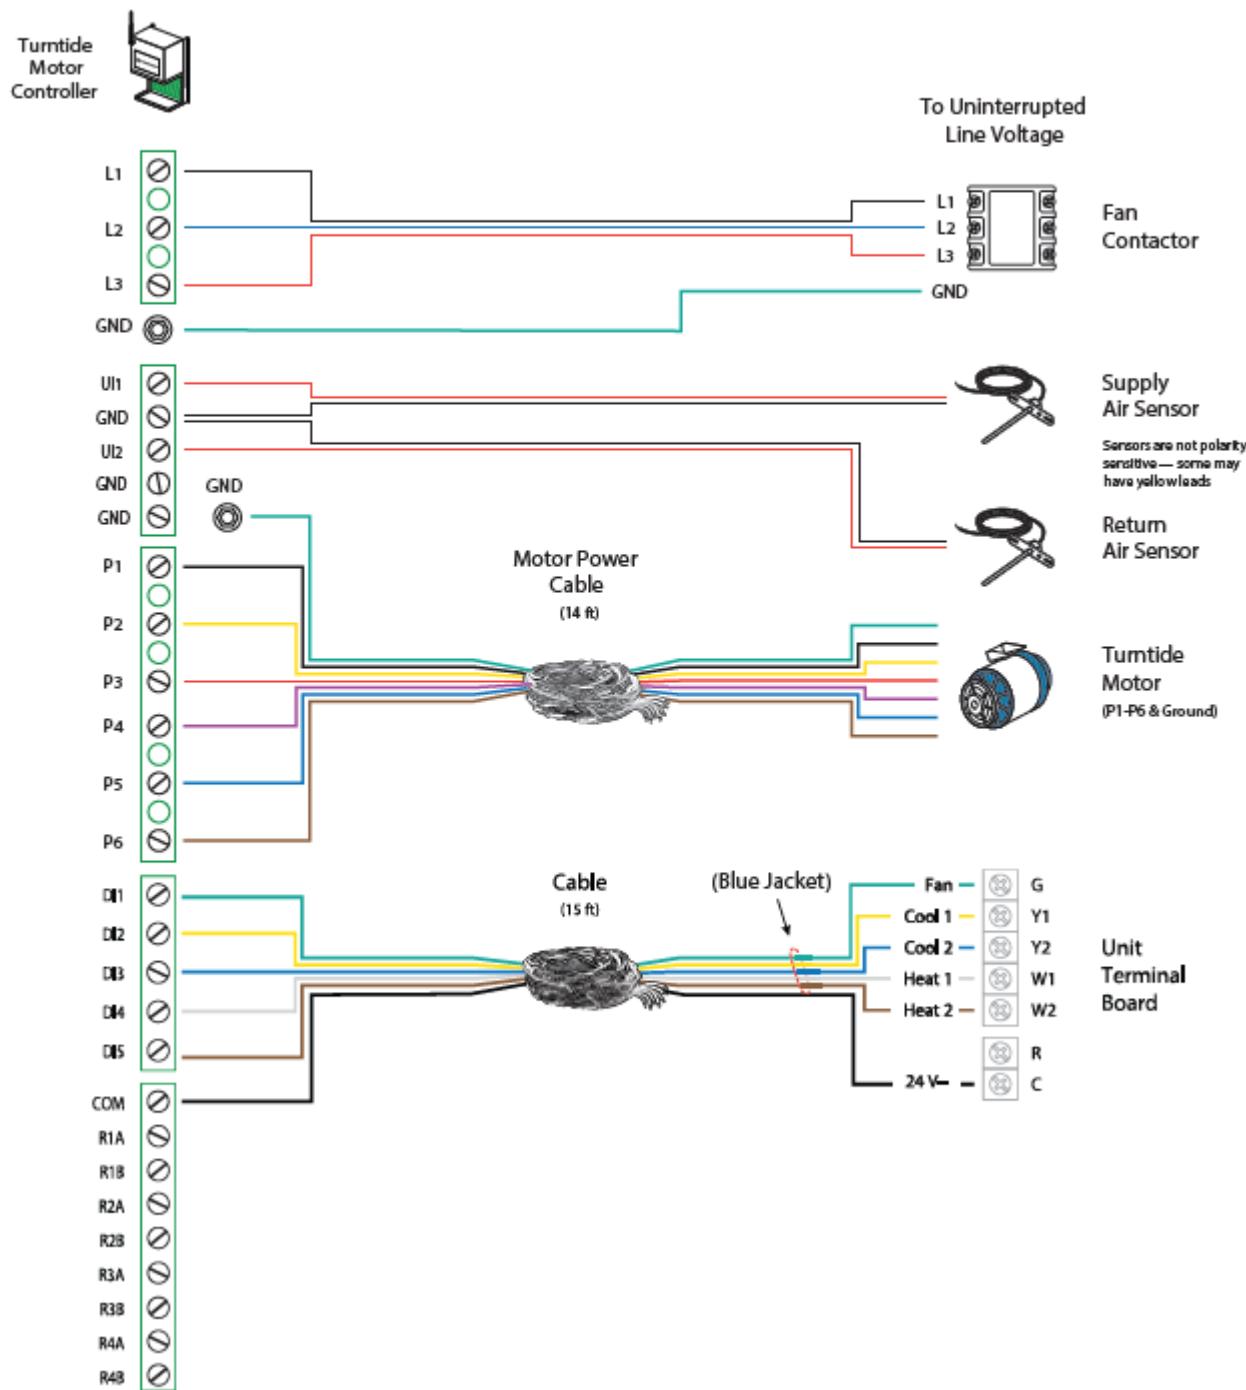

Wiring Information P06 Motor Controllers, Monitor Only

Wiring Information

P06 Motor Controllers

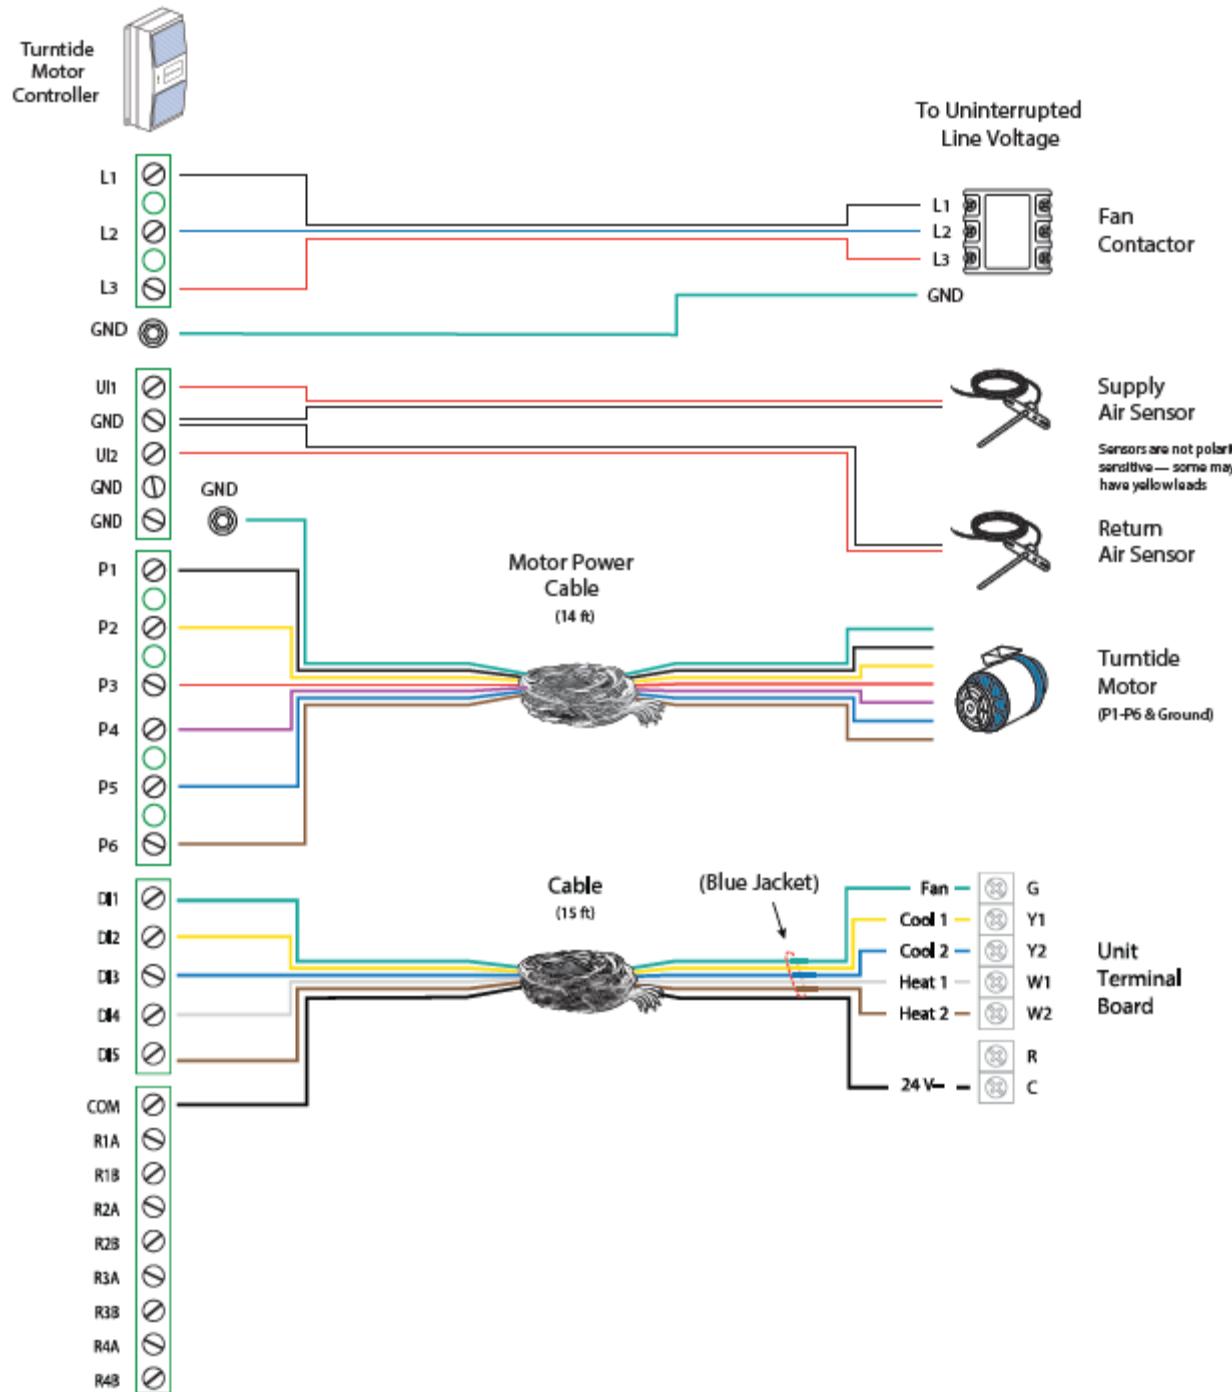

Appendix

How to Install Noise Isolation Feet

Noise Isolation Feet – Charts You Need

Table 4 Noise isolation kits matched with motors

| KIT | SKU (motor and frame) | Notes |
|------------------------|--|--|
| KIT-ISLN-FT-101 | V01-0300-2-A00 V01-0300-4-A00 V01-0300-2-C00 V01-0300-4-C00 V01-0300-6-C00 V01-0300-2-D00 V01-0300-4-D00 V01-0300-6-D00 V02-0500-2-D00 V02-0500-4-D00 V02-0500-6-D00 | Frames are A, C, D V02 motors with a 143/145T frame size require KIT_ISLN-FT-101. |
| KIT-ISLN-FT-201 | V01-0300-2-F00 V01-0300-4-F00 V01-0300-6-F00 V02-0500-2-F00 V02-0500-4-F00 V02-0500-6-F00 | Frame F V01-F motors, which are less than 3hp motors with a 182/184T frame size require KIT-ISLN-FT-201. |
| KIT-ISLN-FT-301 | V03-1500-4-H00 V03-1500-6-H00 | Frame H |


Table 5 Torque required for Nylon-Patch Thread-Locking Fasteners

| Kit | Fastener | Torque Inch Pounds | Torque Foot Pounds | Torque Nm |
|------------------------|--|----------------------------|--------------------------|------------------|
| KIT-ISLN-FT-101 | Two M6 x 1mm x 16mm Nylon-Patch Thread-Locking Fasteners | 170.0 in-lbs ± 11.2 in-lbs | 14 ft-lbs ± 1 ft-lbs | 19.2 Nm ± 1.3 Nm |
| KIT-ISLN-FT-201 | Four M6 x 1mm x 16mm Nylon-Patch Thread-Locking Fasteners | 170.0 in-lbs ± 11.2 in-lbs | 14 ft-lbs ± 1 ft-lbs | 19.2 Nm ± 1.3 Nm |
| KIT-ISLN-FT-301 | Eight M6 x 1mm x 16mm Nylon-Patch Thread-Locking Fasteners | 170.0 in-lbs ± 11.2 in-lbs | 14 ft-lbs ± 1 ft-lbs | 19.2 Nm ± 1.3 Nm |
| | Eight M8 x 1.25mm x 16mm Nylon-Patch Thread-Locking Fasteners | 330.0 in-lbs ± 19.5 in-lbs | 27.5 ft-lbs ± 1.6 ft-lbs | 37.3 Nm ± 2.2 Nm |

Installation Steps

- Identify the Turntide motor and frame size using the codes found on the nameplate of the motor and match it to a Noise Isolation Kit in **Table 4 Noise isolation kits matched with motors**. Verify that your package contains the correct noise isolation feet for your motor and motor frame.

Figure 6 Example Motor V01 with Frame A

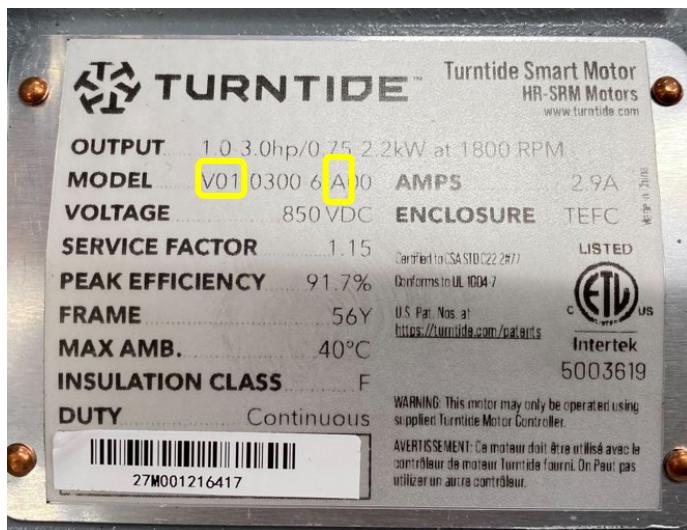



- Go to instructions for your kit:

- KIT-ISLN-FT-101 Motor Noise Isolation Feet Installation on V01 and V02 Motors, Frames A, C, and D
- KIT-ISLN-FT-201 Motor Noise Isolation Feet Installation on V01 and V02 Motors, Frame F
- KIT-ISLN-FT-301 Motor Noise Isolation Feet Installation on V03 Motors, Frame H

Important: Do NOT use feet spacers or bolt sleeves with noise isolation feet.

KIT-ISLN-FT-101 Motor Noise Isolation Feet Installation on V01 and V02 Motors, Frames A, C, and D

Important: Assumes you have removed the existing mounting plate. Do **NOT** use feet spacers or bolt sleeves with noise isolation feet.

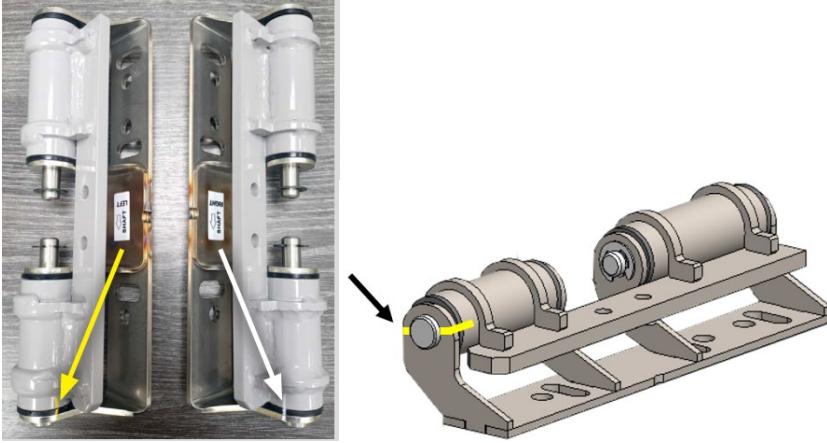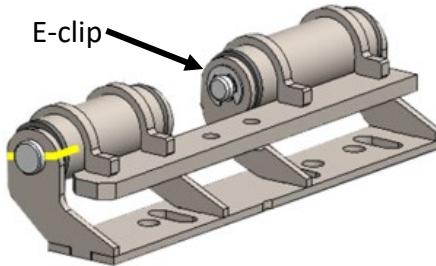
| Instructions for KIT-ISLN-FT-101 Motor Noise Isolation Feet Installation on V01 and V02 Motors, Frames A, C, and D | |
|--|--|
| 1 <p>Examine the new noise isolation feet:</p> <ul style="list-style-type: none"> The feet in KIT-ISLN-FT-101 are NOT symmetrical. They are identified as <i>Left</i> and <i>Right</i>, when facing the shaft end of the motor. The shorter barrel faces toward the motor shaft end. (A sticker indicates the direction.) Color indicator lines on the isolation foot upper and lower sections indicate which pieces go together when reassembling the isolation foot. The left foot is marked with yellow the right foot is marked with white. |  |
| 3 <p>Disassemble the noise isolation feet to allow for easier installation: Remove the E-clips from the clevis pins, sliding clevis pins out, so as to separate the lower foot section from the upper foot section.</p> |  |

Instructions for KIT-ISLN-FT-101 Motor Noise Isolation Feet Installation on V01 and V02 Motors, Frames A, C, and D



- 3** Install the **lower section** of the Left and Right noise isolation feet **to the mounting plate BUT do not tighten the bolts yet!** The Left foot is marked with **yellow**, and the Right foot is marked with **white**.

The position of the motor (and therefore noise isolation feet) relative to the mounting plate is determined based on where the pulley/belt is on the blower fan as well.

Lower section of foot installed on the mounting plate.

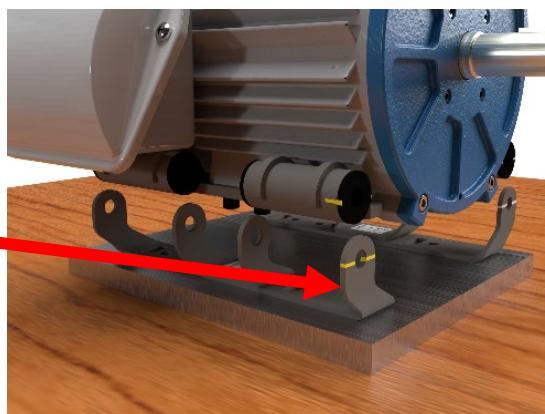
Special Cases:

Narrow Mounting Plate: If you are using a narrow mounting plate with a V01 motor and KIT-ISLN-FT-101, you will need filler blocks to allow the feet to hang over the edge of the mounting plate.

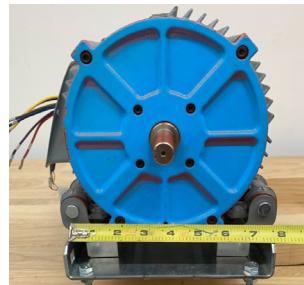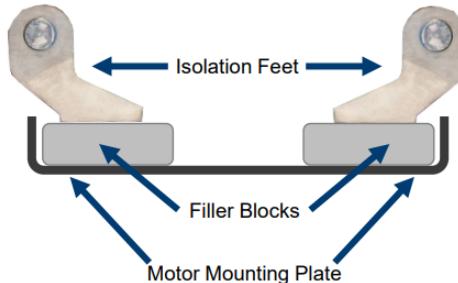


Vertical Mounting Plate: If your mounting plate is positioned vertically, at this point, follow instructions in **Special Instructions for Installation on a Vertical Mounting Plate** before proceeding with Step 5.


Instructions for KIT-ISLN-FT-101 Motor Noise Isolation Feet Installation on V01 and V02 Motors, Frames A, C, and D

- 4**
- Install the upper section of the Left and Right noise isolation feet **to the motor**.
 - Ensure that bolts connecting motor isolation feet to the motor body are torqued to specifications.
- KIT-ISLN-FT-101** for motors V01 and V02 (A, C, and D frames) includes:
- Two M6 x 1mm x 16mm Nylon-Patch Thread-Locking Fasteners
- Torque: **14 ft-lbs ± 1 ft-lbs** (19.2 Nm ± 1.3 Nm)


Upper section of foot
installed on the motor.

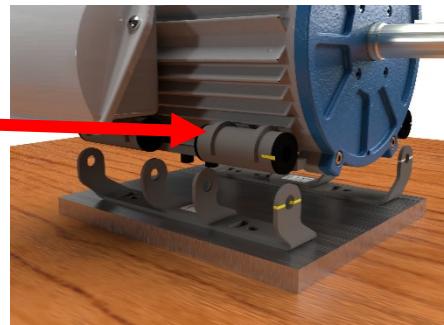

- 5**
- Reconnect the upper and lower sections of the noise isolation feet using the clevis pins and E-clips.
 - Carefully align the motor on the mounting plate on a flat surface.
 - Fully tighten the lower noise isolation feet bolts.

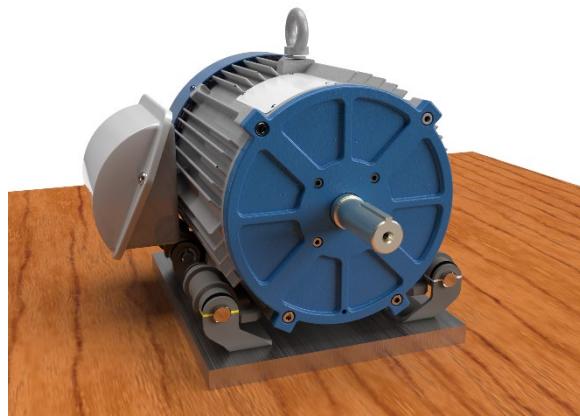

- 6** Reinstall the motor and mounting plate assembly in the RTU.

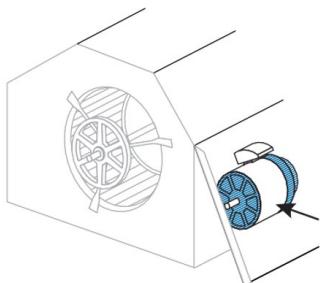

Go back to [Task 1: Uninstall the existing motor and Install the Turntide Motor, Step 7.](#)


KIT-ISLN-FT-201 Motor Noise Isolation Feet Installation on V01 and V02 Motors, Frame F

Important: Assumes you have removed the existing mounting plate. Do **not** use feet spacers or bolt sleeves with noise isolation feet.

Instructions for KIT-ISLN-FT-201 Motor Noise Isolation Feet Installation on V01 and V02 Motors, Frame F


1 Examine the new noise isolation feet:

1. The feet in KIT-ISLN-FT-201 are **NOT symmetrical**. They are identified as Left and Right, when facing the shaft end of the motor.
2. Color indicator lines on the isolation foot upper and lower sections indicate which pieces go together when reassembling the isolation foot. The left foot is marked with **yellow**, the right foot is marked with **white**.

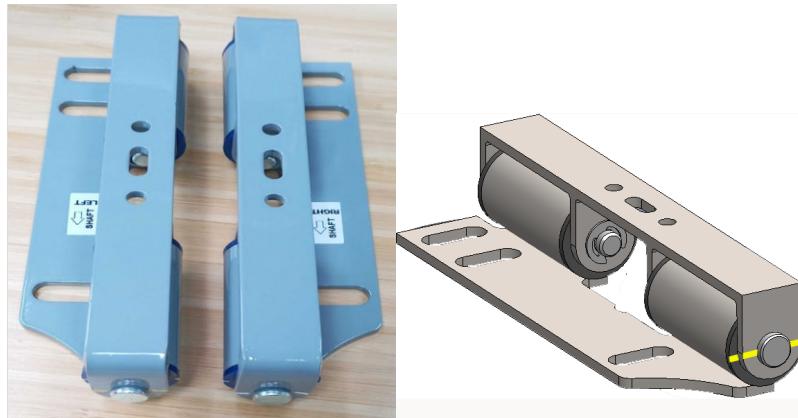

2 Disassemble the noise isolation feet:


Remove the E-clips from the clevis pins, sliding clevis pins out, so as to separate the lower foot section from the upper foot section.

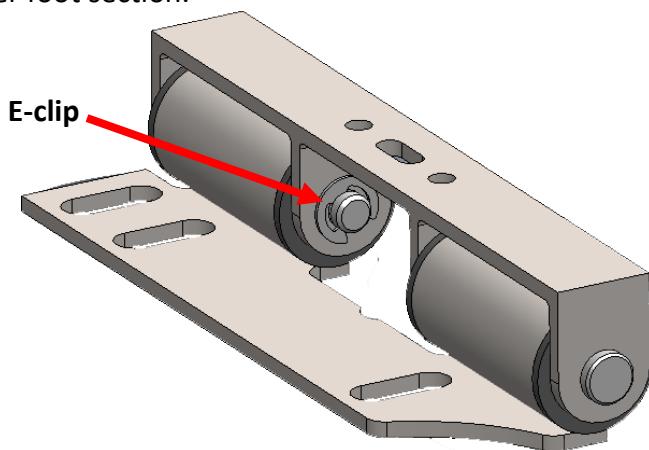

Instructions for KIT-ISLN-FT-201 Motor Noise Isolation Feet Installation on V01 and V02 Motors, Frame F

- 3** Install the **lower section** of the Left and Right noise isolation feet **to the mounting plate BUT do NOT tighten the bolts yet!** The Left foot is marked with **yellow** the Right foot is marked with **white**.

The position of the motor (and therefore noise isolation feet) relative to the mounting plate is determined based on where the pulley/belt is on the blower fan as well.

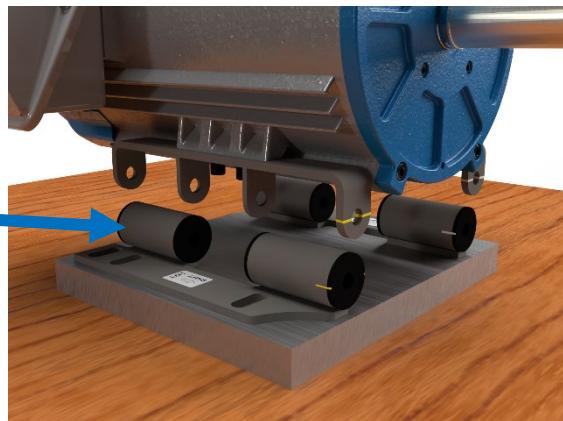

- 4**
1. Install **the upper section** of the Left and Right noise isolation feet **to the motor**.
 2. Ensure that bolts connecting motor isolation feet to the motor body are torqued to specifications.
- KIT-ISLN-FT-201 Motor Noise Isolation Feet Installation on V01 and V02 Motors, Frame F** includes:
- Four M6 x 1mm x 16mm Nylon-Patch Thread-Locking Fastener
Torque: **14 ft-lbs ± 1 ft-lbs (19.2 Nm ± 1.3 N)**

Upper section of foot installed on the motor.




Instructions for KIT-ISLN-FT-201 Motor Noise Isolation Feet Installation on V01 and V02 Motors, Frame F

- 5
- Reconnect the upper and lower sections of the noise isolation feet using the clevis pins and E-clips.
 - Carefully align the motor on the mounting plate on a flat surface.
 - Fully tighten the lower noise isolation feet bolts to the mounting plate.



- 6 Reinstall the motor and mounting plate assembly in the RTU.

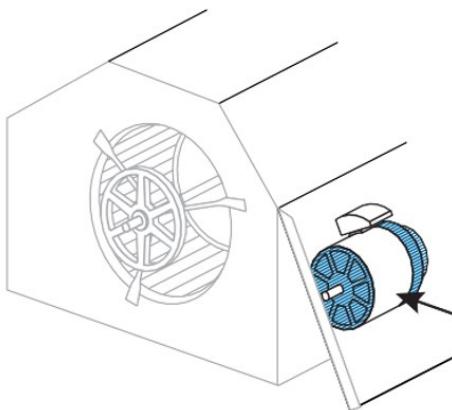

Go back to [Task 1: Uninstall the existing motor and Install the Turntide Motor, Step 7.](#)

KIT-ISLN-FT-301 Motor Noise Isolation Feet Installation on V03 Motors, Frame H

Important: Assumes you have removed the existing mounting plate. Do **not** use feet spacers or bolt sleeves with noise isolation feet.

Instructions for KIT-ISLN-FT-301 Motor Noise Isolation Feet Installation on V03 Motors, Frame H


1 Examine the new noise isolation feet:

The feet in KIT-ISLN-FT-301 are **symmetrical**.



2 Disassemble the noise isolation feet:


Remove the E-clips from the clevis pins, sliding clevis pins out, so as to separate the lower foot section from the upper foot section.

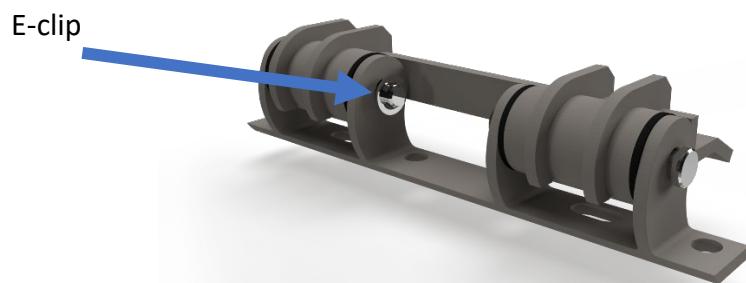

Instructions for KIT-ISLN-FT-301 Motor Noise Isolation Feet Installation on V03 Motors, Frame H

- 3** Install the **lower section** of the Left and Right noise isolation feet **to the mounting plate BUT do NOT tighten the bolts yet!**

The position of the motor (and therefore noise isolation feet) relative to the mounting plate is determined based on where the pulley/belt is on the blower fan as well.

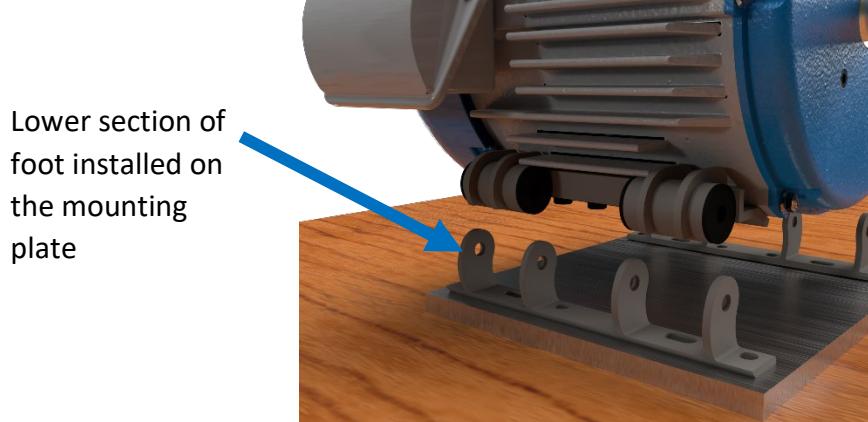

- 4**
1. Install the upper section of the noise isolation feet **to the motor.**
 2. Ensure that bolts connecting motor isolation feet to the motor body are torqued to specifications. Depending on the housing of your V03 motor, you will use the M6 or M8 fasteners.

KIT-ISLN-FT-301 Motor Noise Isolation Feet Installation on V03 Motors, Frame H includes:


Eight M6 x 1mm x 16mm Nylon-Patch Thread-Locking Fasteners

Torque: **14 ft-lbs ± 1 ft-lbs** (19.2 Nm ± 1.3)

Eight M8 x 1.25mm x 16mm Nylon-Patch Thread-Locking Fasteners


Torque: **27.5 ft-lbs ± 1.6 ft-lbs** (37.3 Nm ± 2.2 Nm)

Upper section of foot installed on the motor.

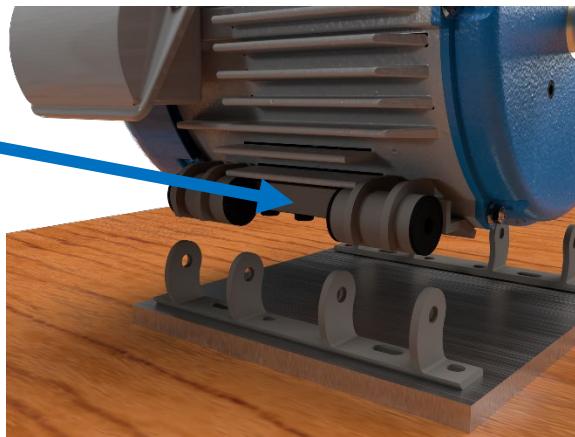


Instructions for KIT-ISLN-FT-301 Motor Noise Isolation Feet Installation on V03 Motors, Frame H

- 5
- Reconnect the upper and lower sections of the noise isolation feet using the clevis pins and E-clips.
 - Carefully align the motor on the mounting plate on a flat surface.
 - Fully tighten the lower noise isolation feet bolts.

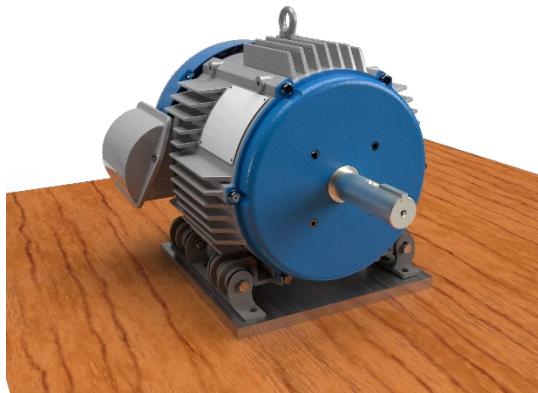


- 6 Reinstall the motor and mounting plate assembly in the RTU.

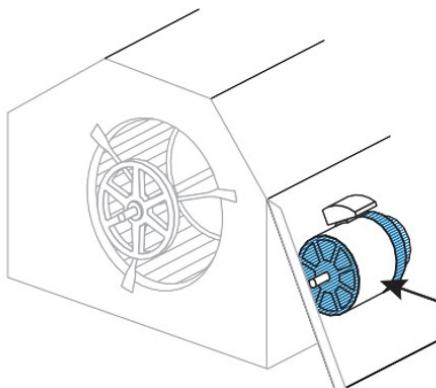

Go back to [Task 1: Uninstall the existing motor and Install the Turntide Motor, Step 7.](#)


Special Instructions for Installation on a Vertical Mounting Plate

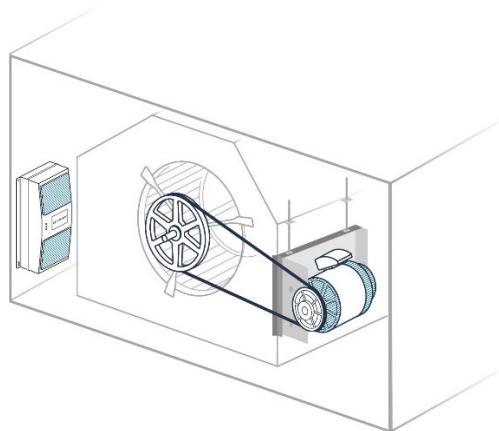

Key Concepts


BEFORE:

In an existing vertical mounting plate installation, the bolts are positioned with the thread facing the motor. As you can see in the example image, the bolt extends towards the motor.

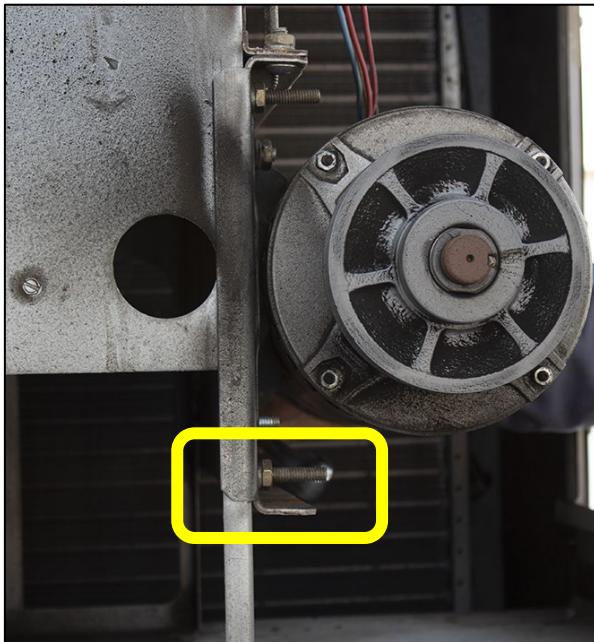

AFTER:


You will be reversing the mounting bolts (180 degrees) with the noise isolation feet installation. As you can see in the example image, the bolt thread now extends **towards** the RTU. This allows you to access the nut when belt tension adjustment is necessary.

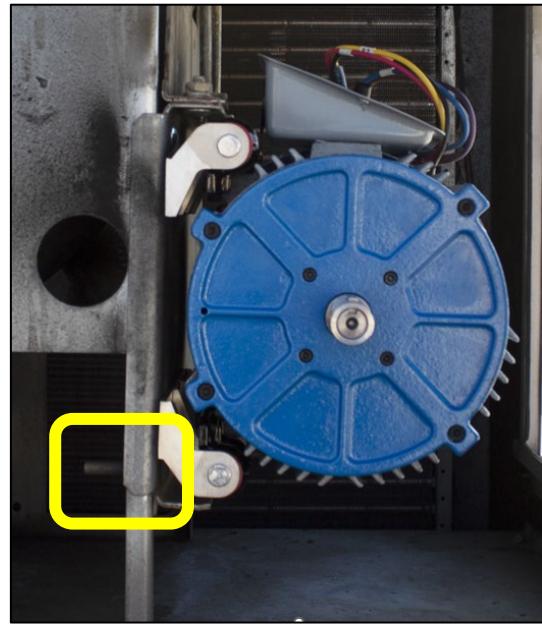

In your *existing* Turntide motor installation, the carriage bolts may have sleeves.




You will **not** use sleeves with the installation of the noise isolation feet.


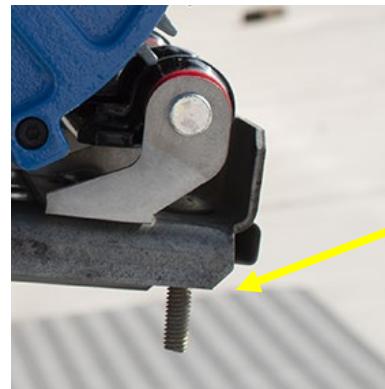


Before you begin, note the following:

1. Assumes you have removed the existing mounting plate.
2. **Important:** Feet spacers, bolt sleeves, and filler blocks are **not** applicable to this configuration.
3. You will reuse all the existing mounting bolts but turn all the bolts 180 degrees.
4. In the upper left corner of the mounting plate, use a **5/16in x 1in** carriage bolt. Using a shorter bolt ensures that it will **NOT** protrude into the blower housing.
5. You might have to shift the entire assembly down to get a good fit. This is necessary if the blower housing is preventing ample space for nut installation on the bolt in the upper right corner and proper bolt seating.

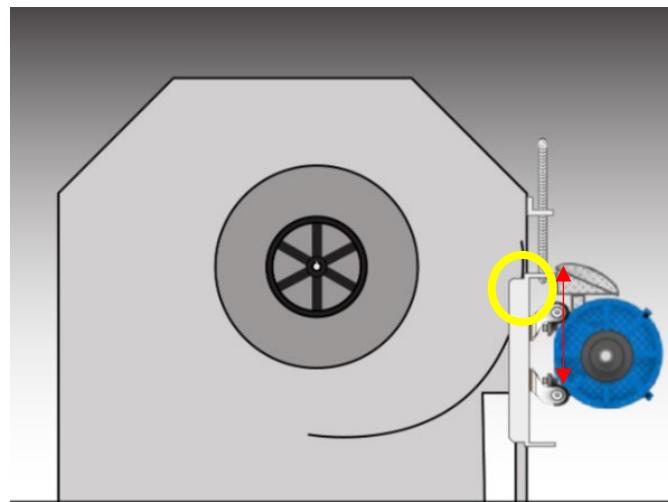


- 1**
1. Install the **5/16in x 1in carriage bolt** in the upper left corner of the **top** of mounting plate.
 2. Install the remaining bolts and add push nut bolt retainer to the bolts nearest the shaft/belt.

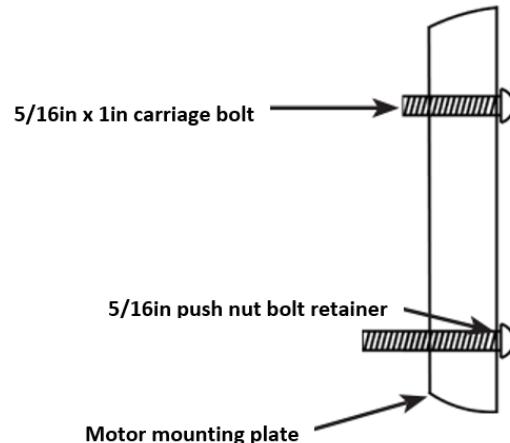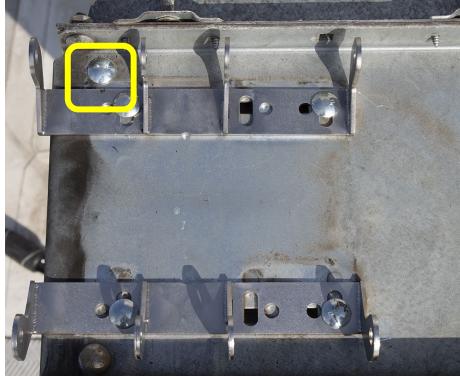


- 2**
- Install the **lower section** of the Left and Right noise isolation feet **to the mounting plate** BUT do **not** tighten the bolts yet! The Left foot is marked with **yellow**, and the Right foot is marked with **white**. *The position of the motor (and therefore noise isolation feet) relative to the mounting plate is determined based on where the pulley/belt is on the blower fan as well.*

Lower section of
foot installed on the
mounting plate.

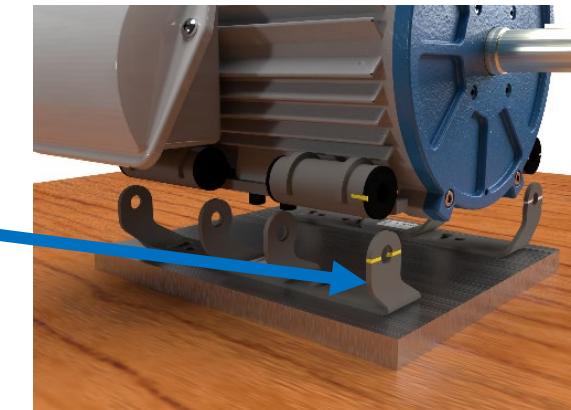

- 3**
1. Install the upper section of the Left and Right noise isolation feet **to the motor**.
 2. Ensure that bolts connecting motor isolation feet to the motor body are torqued to specifications.
KIT-ISLN-FT-101 for motors V01 and V02 (A, C, and D frames) includes:
Two M6 x 1mm x 16mm Nylon-Patch Thread-Locking Fasteners
Torque: **14 ft-lbs ± 1 ft-lbs** (19.2 Nm ± 1.3 Nm)


Upper section of foot installed on the motor.

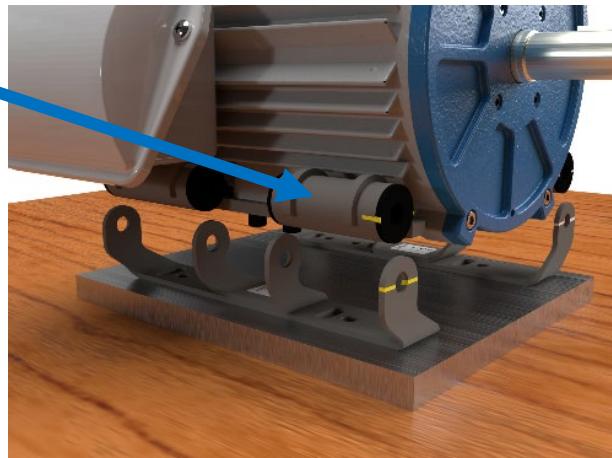

- 4**
1. Reconnect the upper and lower sections of the noise isolation feet using the clevis pins and E-clips.
 2. Carefully align the motor on the mounting plate on a flat surface.
 3. Fully tighten the lower noise isolation feet bolts.



- 5 Reinstall the motor and mounting plate assembly in the RTU.

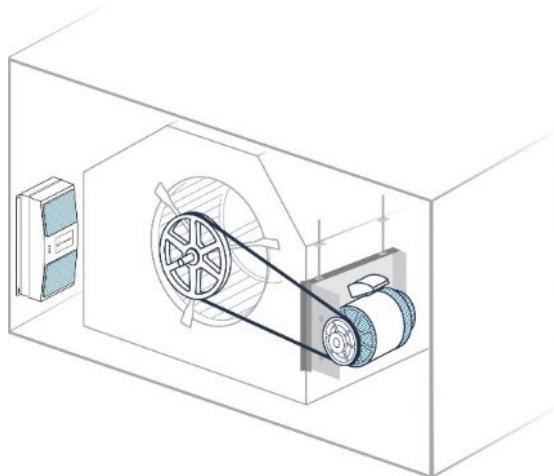

[Go back to Task 1: Uninstall the existing motor and Install the Turntide Motor, Step 7.](#)

Supply and Return Air Sensors

When you install a supply air temperature sensor, it changes the sequence of operations of the motor system in all flows.

1. If the unit is in heating mode and the supply air temperature is greater than 140degF, the Turntide motor will increase speed to increase airflow.
2. If the unit is in cooling mode and the supply air temperature is less than 50degF, the Turntide motor will increase speed to increase airflow.
3. If the sensors are not installed, the motor system maintains its typical control method dictated by the installed flow.
4. Supply and return temperatures are viewable in BOS for connected motors and on the Technician App for all motors.
5. As a failsafe measure, if the supply and return air sensors malfunction, then the motor system maintains the Turntide control method (40/75/90) or any custom setpoints that were installed. A malfunction includes if the Turntide motor controller cannot read any values from the sensor or if the values are invalid.


How to Disable Wi-Fi through Hardware on P06 and SI121 Motor Controllers AFTER Motor Commissioning Completed

This motor controller is intended to be installed and maintained by authorized service personnel only. For safety and security reasons, it is recommended that the controller be protected from physical access from unauthorized personnel.

To manually disable Wi-Fi via hardware on the P06 Motor Controller:

- You must have completed motor commissioning before you disable Wi-Fi on the controller.
- Bridge pins 1&2 of J64 to disable Wi-Fi. J64 is located under the cover at the top of the controller). *The antenna location indicates the top of the controller.*

Figure 7 P06 Motor Controller

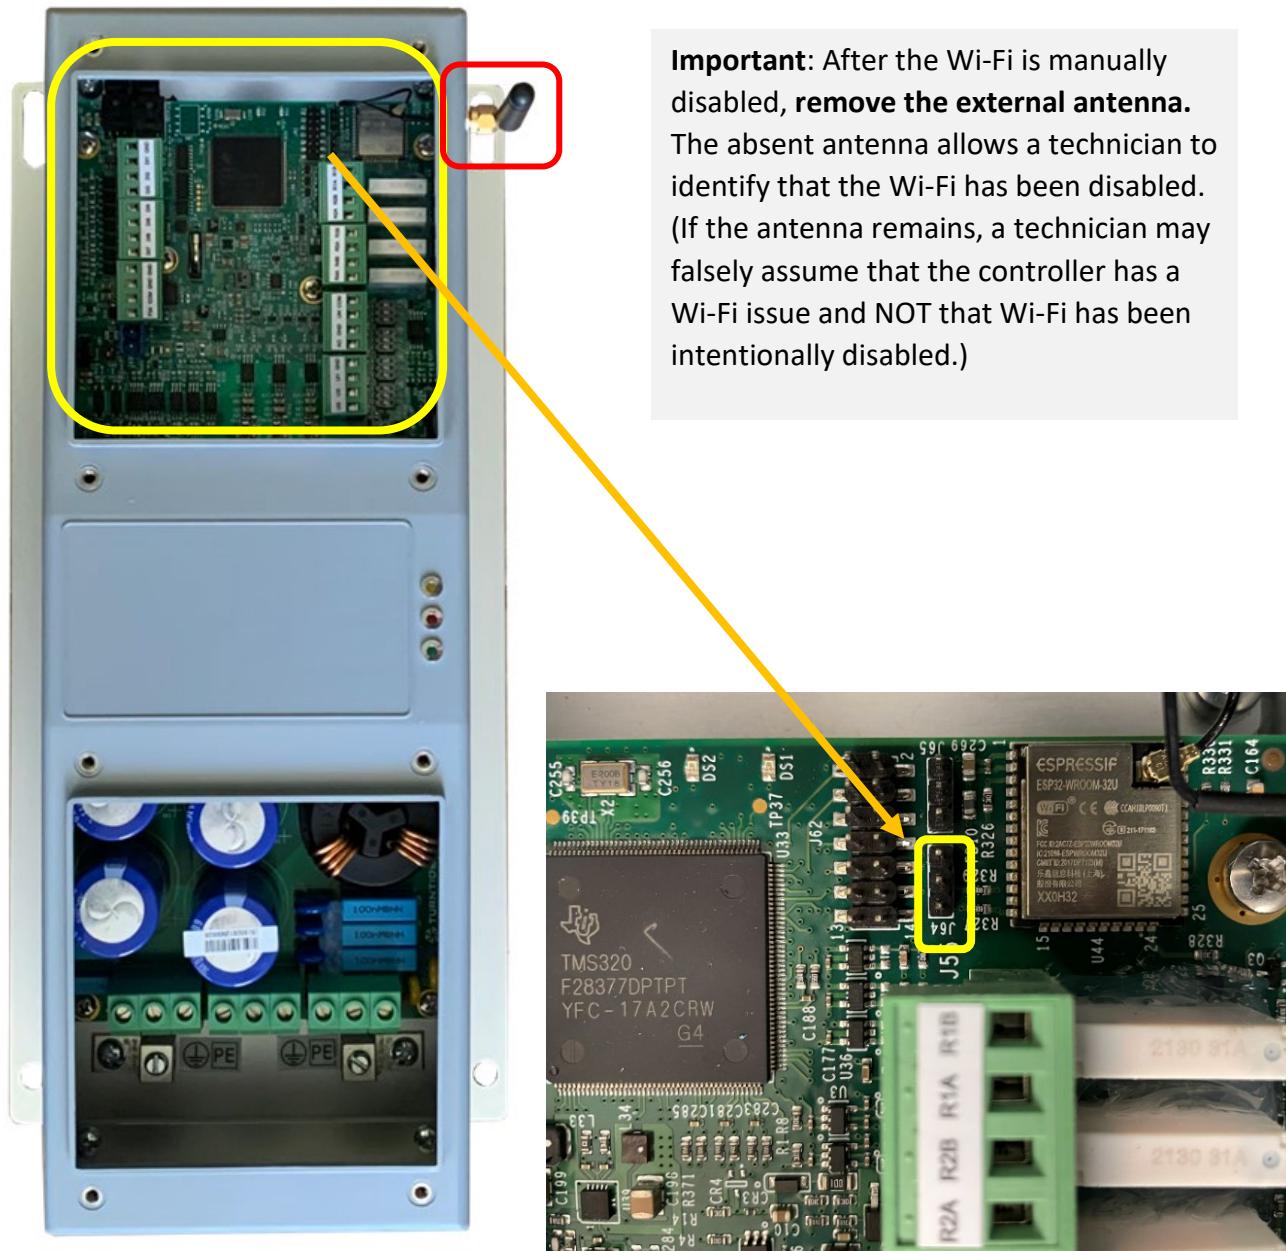


To manually disable Wi-Fi via hardware on the SL121 Motor Controller:

- You must have completed motor commissioning before you disable Wi-Fi on the controller.
- Bridge pins 1&2 of **J11** to disable Wi-Fi. On the SL121, you must remove the blue cover and IO board to access jumper J11. *The antenna location indicates the top of the controller.*

Figure 8 SL121 Motor Controller



Important: After the Wi-Fi is manually disabled, **remove the external antenna**. The absent antenna allows a technician to identify that the Wi-Fi has been disabled. (If the antenna remains, a technician may falsely assume that the controller has a Wi-Fi issue and NOT that Wi-Fi has been intentionally disabled.)

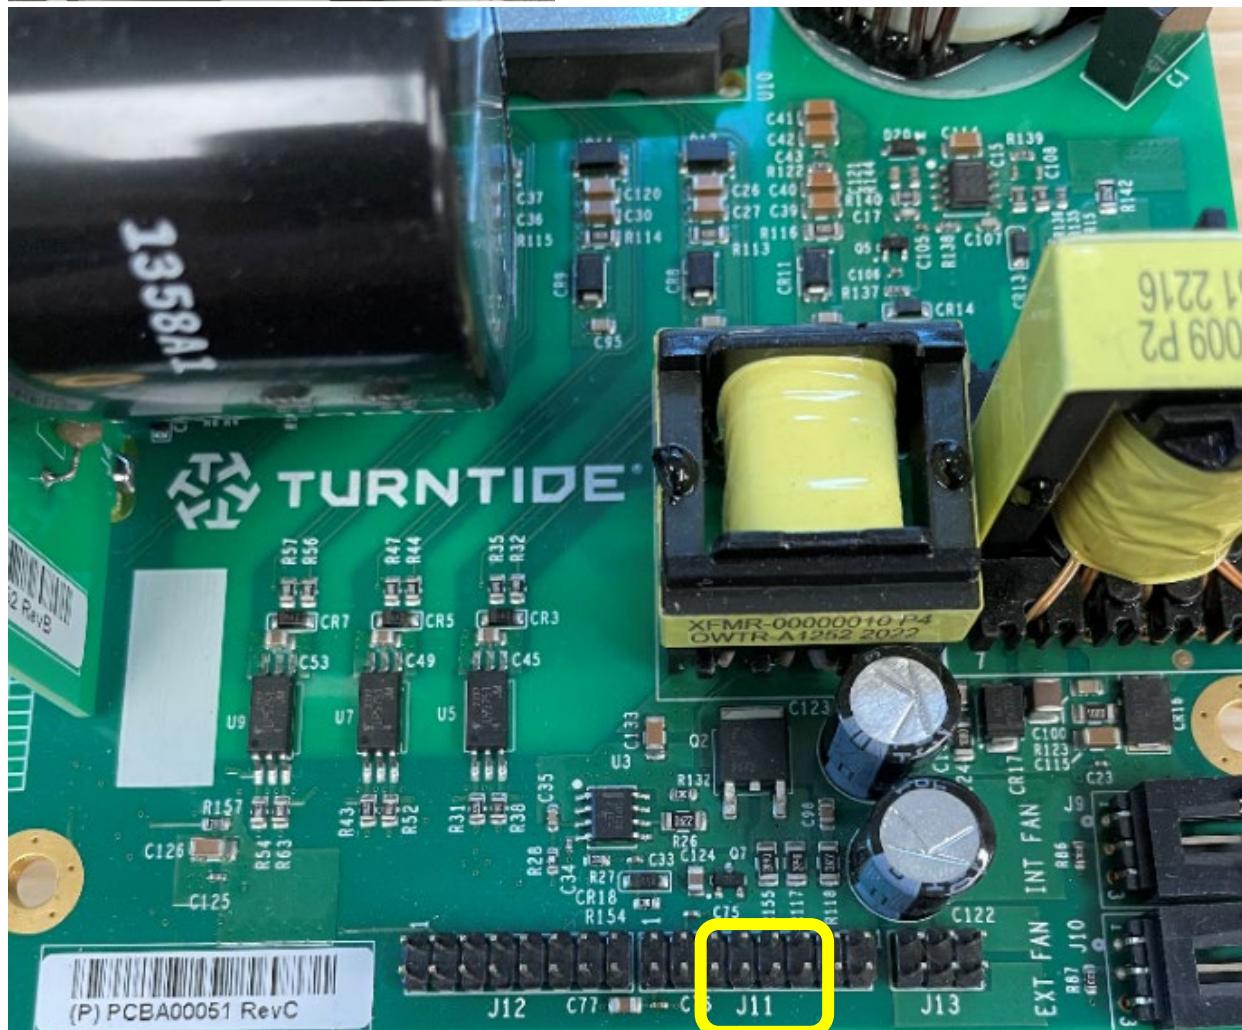

Troubleshooting a Stalled Motor

If motor stalling:

1. Remove the belt and test if the motor still stalls. (Manual mode in the Turntide Technician App.)
2. If motor runs *properly* without the belt:
 - **Slightly reduce the belt tension and test motor operation in small increments or upsize the belt if necessary.**
 - If you installed isolator feet, you may need to increase the belt by 2 sizes.
 - Note however, if the belt is too loose, it will slip and cause reduced airflow, excessive wear, and early failure.
3. If the motor is *still stalling* without a belt:
 - With the motor off, spin the motor by hand to feel bearings or if anything within the motor is clunking around.
 - Verify that power wiring is correctly wired. For example, are P2 & P3 correct or flipped?
 - Using the Turntide Technician App (**General** screen), verify that you have the correct motor model and voltage selected and that it matches the motor nameplate.
 - Confirm there aren't any rub-outs or exposed copper along the motor power wiring (Applicable check only if the motor has been in operation for some time).
 - If the motor continues to stall, call Turntide Technical support.

TURNTIDE TECHNOLOGY FOR SUSTAINABLE OPERATIONS

Our breakthrough technologies accelerate electrification and sustainable operations for energy-intensive industries.

Turntide Technologies | 1295 Forgewood Avenue, Sunnyvale, CA 94089 | turntide.com | sales@turntide.com

