

Vinyl cutter to T-shirt manual

Our Vevor vinyl cutter from the front Our Vevor vinyl cutter from an isometric perspective



Manual for using the Vevor vinyl cutter to create a T-shirt

Time estimates

- Most time will be spent peeling plastic from the vinyl
- Schedule two hours to produce your first T-shirt with one print
- Schedule 10 minutes to produce your tenth T-shirt with one print, 15 minutes for two print

Procedure

Overview of the procedure

1. Install Inkcut
2. Setup Inkcut
3. Get T-shirts
4. Get vinyl
5. Connect the vinyl cutter
6. Place foil of vinyl cutter
7. Set up Inkcut connection
8. Use Inkcut
9. Transfer vinyl to T-shirt

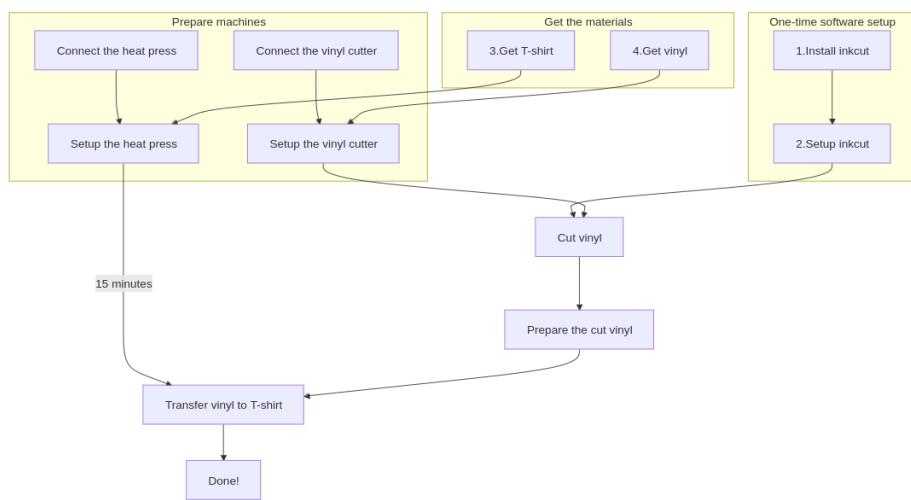


Figure 1: Overview of the procedure

1. Install Inkcutter

Inkcutter is a program to send things to cut to the vinyl cutter. It works under Linux, Mac and Windows. This guide shows how to do this for Linux.

Install the Debian packages:

```
apt-get install python3-pip python3-pyqt5 python3-setuptools  
apt-get install libcups2-dev python3-pyqt5.qtsvg
```

Create a (mandatory!) virtual environment for Inkcutter:

```
python3 -m venv ~/inkcutter_venv
```

Install the Inkcutter and PyQt5 Python packages in the virtual environment

```
~/inkcutter_venv/bin/pip install inkcutter PyQt5
```

Now you can start `inkcutter` with:

```
~/inkcutter_venv/bin/inkcutter
```

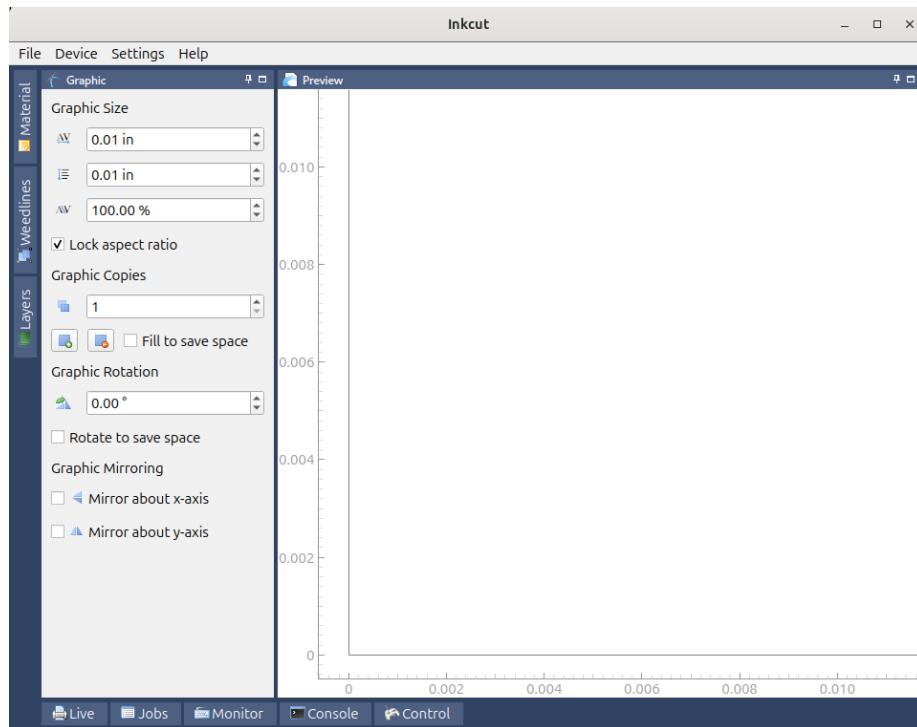


Figure 2: inkcutter in action

2. Setup Inkcut

- See Setup Inkcut notes for the notes behind this

Add yourself to the `dialout` group:

```
sudo usermod -a -G dialout "$USER"
```

Restart (yes, a cold boot!).

3. Get T-shirts

Get one or more T-shirts.

Company	Address	Price	Description
Lager 157	Kungsgatan 95	30	Has S, M, L and XL
New Yorker	Marknadsgatan 1	79	?All sizes

- Price is in kroner per (cheapest) T-shirt

4. Get vinyl

Get suitable vinyl

Suitable foil looks like this:

- The foil feels smoother than a sticker ('klistermärke')
- The foil is shinier than a sticker

A good place to vinyl is at <https://www.scandraft.se/>, where we have bought Siser P.S. Film Easyweed, which works well. You can order longer rolls: we've ordered rolls of 25 meters, for an unknown price (if you know the price, please contribute).


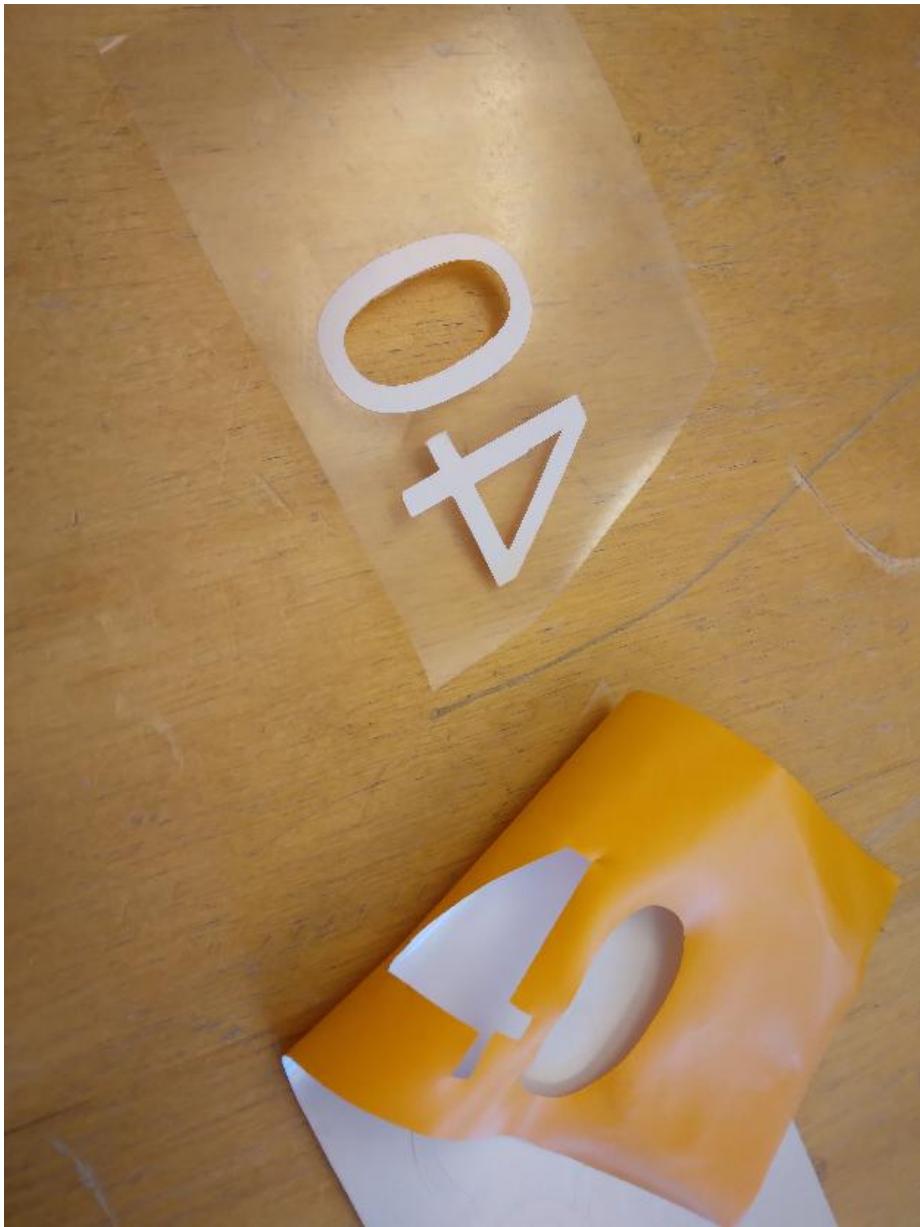


Figure 3: Transfer foil ready for transfer

5. Connect the vinyl cutter

Plug in the correct USB cable from the vinyl cutter to your computer:

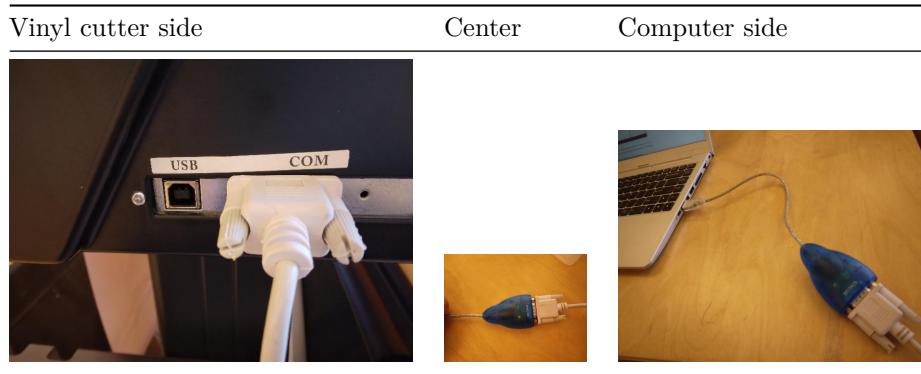

6. Setup the vinyl cutter


The vinyl cutter has three parameters:

- Origin: the bottom-left of the cut, move the red dot to the bottom-left of the vinyl
- Speed: the speed of the blade
 - If the speed is too high, no idea what happens. Please contribute if you know!
 - If the speed is too low, the process takes needlessly longer
- Force: how much force the blade applies to the vinyl
 - If the force is too high, the cutter will go through the vinyl
 - If the force is too low, the vinyl cannot be removed easily

Vinyl	Speed (mm/s)	Force(g)	Recommendation source
Siser P.S. Film	20	120	Trying out, works!
Siser P.S. Film	300	60	manual

7. Place foil of vinyl cutter

Place the foil on the vinyl cutter, with the white side up.

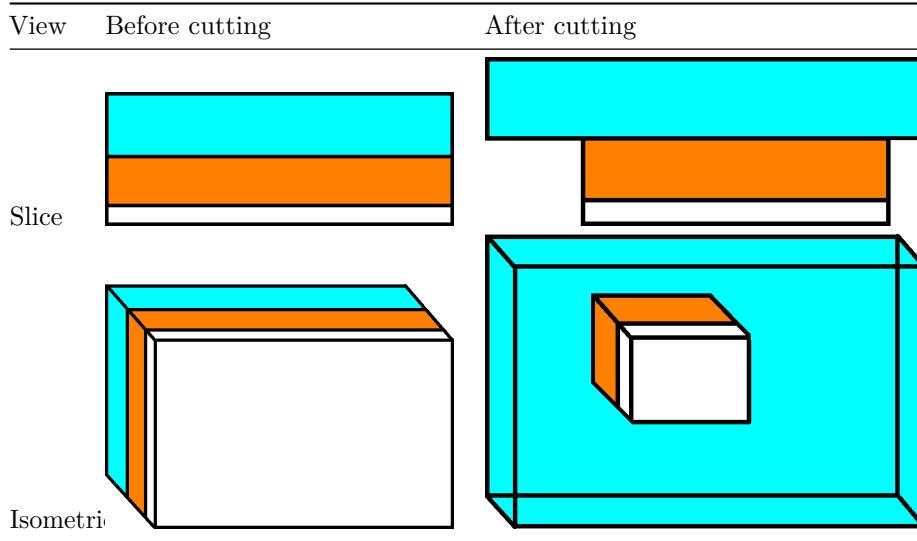

Structure of the foil and what will be cut away. Light-blue: thick, transparent layer, do not cut, can be separated from orange layer by hand. Orange: the color of the print. White: the glue connecting the print to the T-shirt

The knife cuts the white and colored layer only. The thick and transparent layer needs to remain intact.

8. Set up Inkcutter connection

Go to the ‘Configure device | Connection’:

- Type: Serial port
- Port: `ttyUSB0`. If you cannot select `ttyUSB0`, you’ve used the wrong USB cable coming out of the vinyl cutter :-)
- Baudrate: 38400

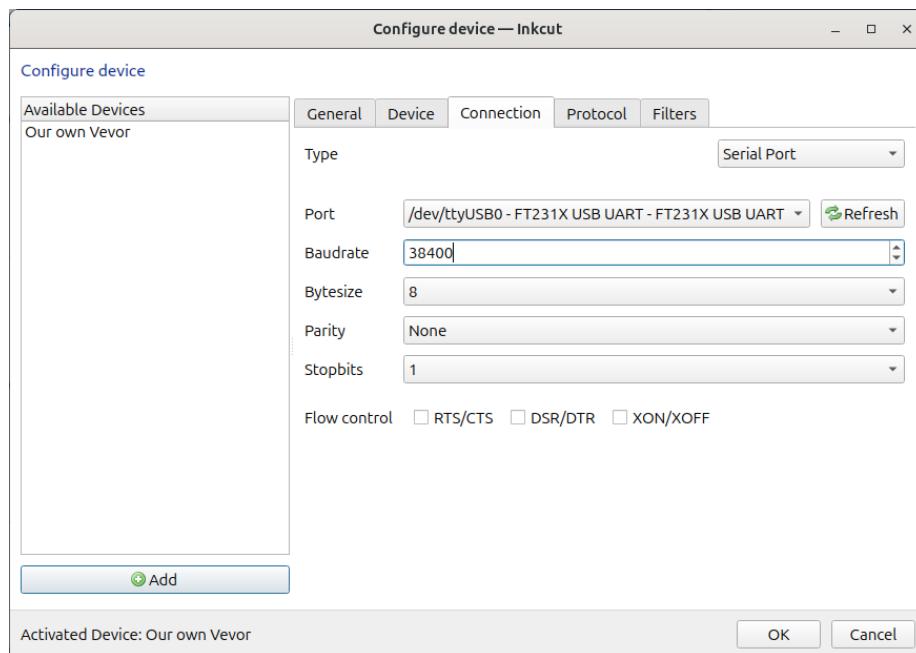


Figure 4: Use the serial port with a baudrate of 38400

Use the serial port with a baudrate of 38400. If you cannot select `ttyUSB0`, you’ve used the wrong USB cable coming out of the vinyl cutter

9. Use Inkcute

Load an SVG.

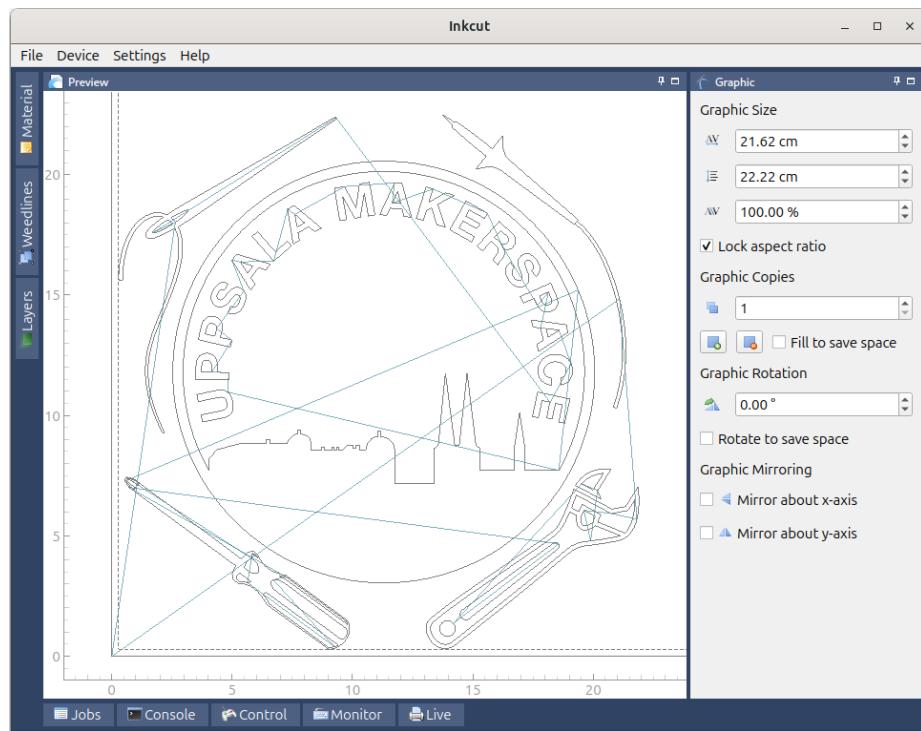


Figure 5: Inkcute in action

Fig 5. Inkcute in action

Fig 6. Don't forget to mirror letters. These letters will be mirrored when put on a T-shirt

Fig 7. Don't do two copies like this, this is wasteful.

Fig 8. Do many copies like this: this is not wasteful

10. Setup heat press

Vinyl	Temperature (C)	Time (s)	Recommendation source
Siser P.S. Film	180	10	Trying out, works!
Siser P.S. Film	150	15	manual

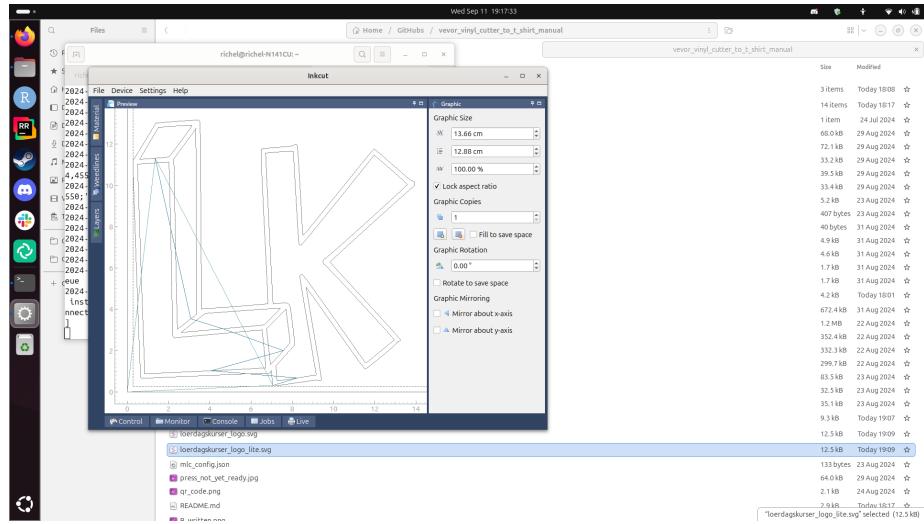


Figure 6: Don't forget to mirror letters. These letters will be mirrored when put on a T-shirt

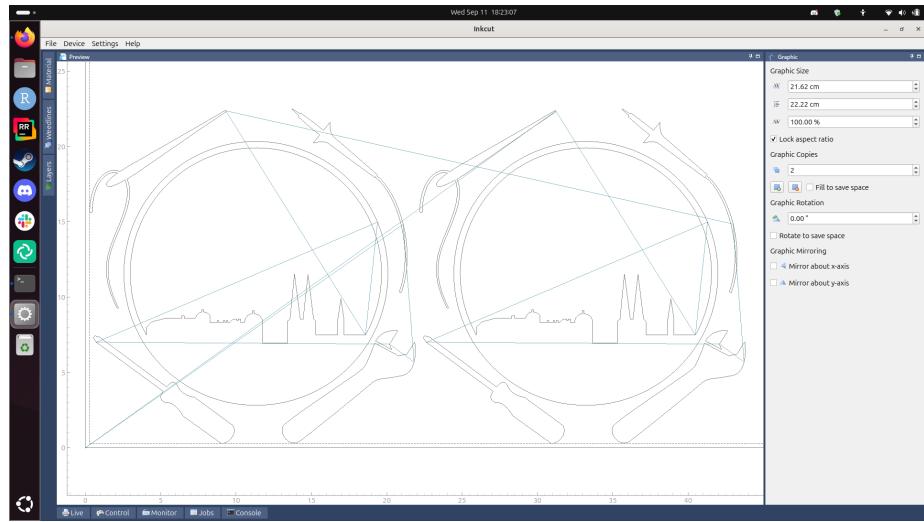


Figure 7: Don't do two copies like this

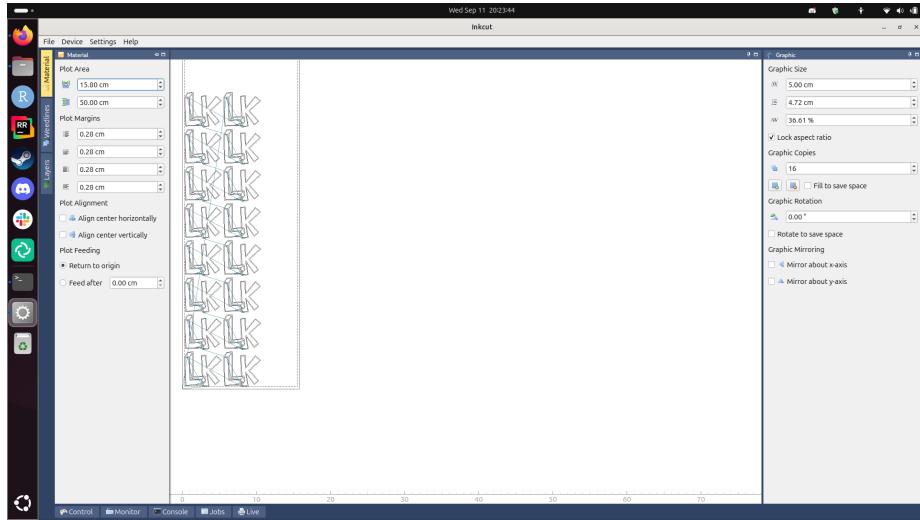


Figure 8: Do many copies like this

11. Transfer vinyl to T-shirt

Put the remainder of the foil on the T-shirt, with the colorful side up.

Press not yet ready. It should say T=160/160C. A temperature from 155 to 165 degrees Celcius would also be fine.

Heat up the heat press, this takes about 15 minutes.

Place the T-shirt under the press, with the foil at the right spot.

When the heat press is warmed up, lower the press. After around 20 seconds, the press will start to beep. Raise the press again.

Wait for the print to cool off.

Carefully peel off the transparent layer from the shirt.

Done!



Figure 9: Press not yet ready



Figure 10: T-shirts that are done

Troubleshooting

The vinyl cutter is wrinkling the paper

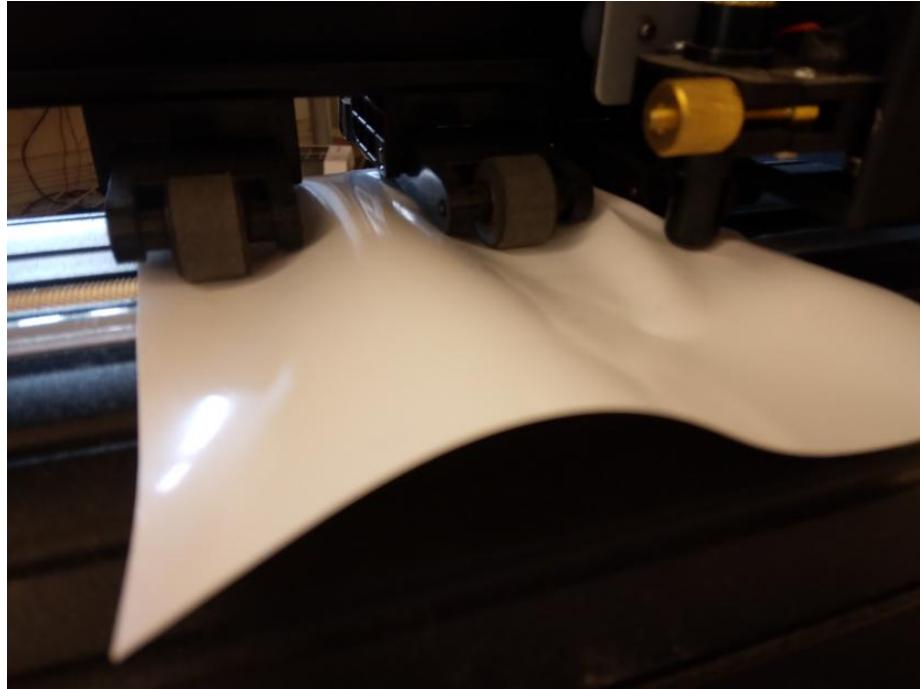


Figure 11: The vinyl cutter is wrinkling the paper

The vinyl cutter is wrinkling the paper.

This happens when at least one wheel of the three movable heads is not on a roller at the bottom:

The right wheel (right rectangle) is not on the roller (partially shown and indicated by the left rectangle)

The vinyl cutter is confused

This may happen when you send multiple prints at the same time. Press reset, close Inkcutter, press reset, start Inkcutter and try again



Figure 12: The right wheel is not on the roller



Figure 13: The vinyl cutter is confused


Contents

I .Precautions.....	2
II. Introduction for main parts.....	3-5
III. Technical parameters.....	6-7
IV. Bracket assembly diagram.....	8-10
V . Control buttons description and operation instructions.....	11
VI. Blade assembly.....	12-13
VII. Software and driver installation.....	14-19
VIII. Connection of software and machine.....	20-24

I .Precautions


1. Protective material must be removed before turning on the cutting plotter.
2. Check the label on the back side of the plotter to confirm that the rated voltage required by the plotter matches the voltage of the power base.
3. Firstly make sure that the power switch is off, then plug the power supply into grounded power outlet.
4. Please do not touch the power cord with wet hands to avoid electric shock.
5. Please only use the power cord, data cable provided with this product, or manufacturer-approved replacements.
6. Please do not drop metal objects and liquids into the machine to avoid malfunction.
7. After shutting down, you must wait another 5 seconds to turn on the cutting plotter again, otherwise it will cause damage to the cutting plotter.
8. In thunderstorms, turn the power switch to OFF and unplug the power cord.
9. Please do not privately change the manufacturer's components.
10. Manufacturer reserves the right to change product specifications without prior notice.
11. The manufacturer only bears the legal obligations of the product itself sold to the users, and does not bear other losses caused by the malfunction of the products.
12. Without our company's permit, no part of this manual can be copied or transmitted in any name.

II. Introduction for main parts

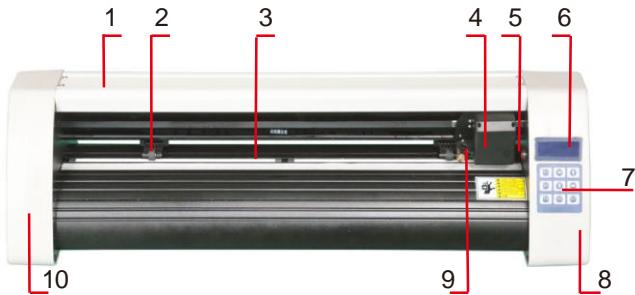

KH Model

1.Cover for rail guide	2. Pinch roller kit
3. Roller for feeding paper	4. Carriage
5. Reset switch	6. Screen
7. Buttons	8. The right cover
9. Blade clamp	10. The left cover

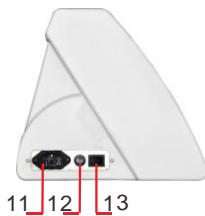


Left side



Right side

11.Power connection
12.Fuse holder
13.Power switch
14.USB port
15.COM port

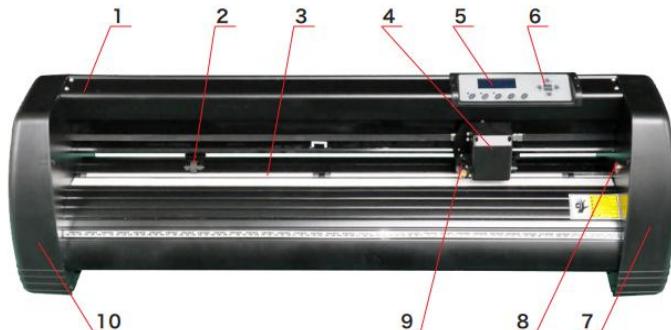

KI Model

1.Cover for rail guide	2. Pinch roller kit
3. Roller for feeding paper	4. Carriage
5. Screen	6. Buttons
7. The right cover	8. Reset switch
9. Blade clamp	10. The left cover




Left side




Right side

11.Power connection
12.Fuse holder
13.Power switch
14.USB port
15.COM port

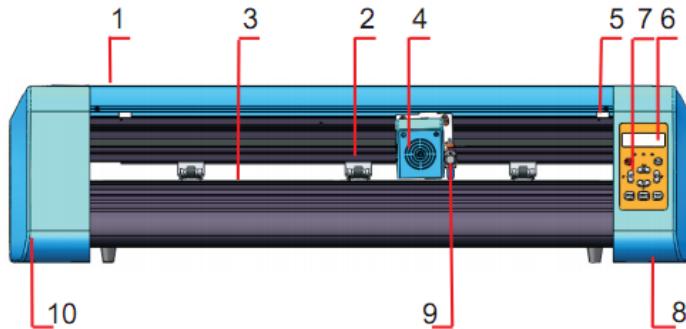


EH Model

1.Cover for rail guide	2. Pinch roller kit
3. Roller for feeding paper	4. Carriage
5. Reset switch	6. Screen
7. Buttons	8. The right cover
9. Blade clamp	10. The left cover

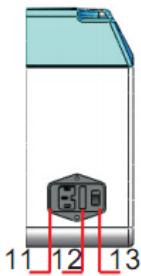

Left side

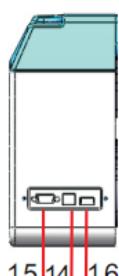

Right side

11.Power connection
12.Fuse holder
13.Power switch
14.USB port
15.COM port
16.U-disk port

III. Technical parameters


Item \ Model	375	720	870	1350
Max. feeding width	375mm	720mm	870mm	1350mm
Max. cutting width	285mm	630mm	780mm	1260mm
Cutting thickness	$\leq 1\text{mm}$			
Speed/Pressure	20-1200mm/s 20-1000g			
Buffer	1-4M			
LCD display	CN/EN			
Real-time Speed adjusting	Support			
Interface	COM+USB / COM+USB+U-DISK			
Re-cutting function	Support			
Re-cutting accuracy	0.127mm			
Resolution Ratio	0.0245mm/step			
Language format	DMPL/HPGL			
Voltage	AC85-264V			

Accessory box

	Item	Quantity	Unit
1	Cutting plotter	1	Set
2	Power supply cable	1	Pc
3	Blade	1	Box
4	Blade holder	1	Pc
5	Pen holder	1	Pc
6	Ball pen core	1	Pc
7	COM connection cable	1	Pc
8	USB cable	1	Pc
9	Spanner	1	Pc
10	USB driver	1	Pc
11	Bracket screws	1	Bag
To protect the machine, use only the accessories in this accessory box			


IV. Bracket assembly diagram

Iron bracket assembly diagram

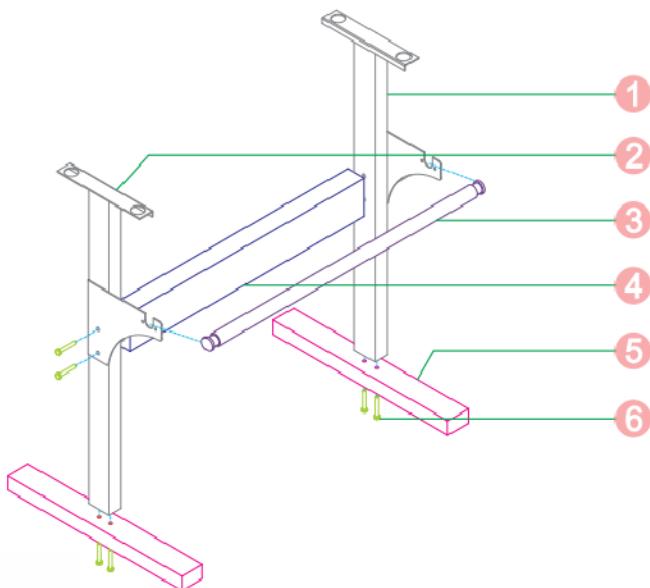


- | | |
|--------------------|------|
| 1. Right column | 1pc |
| 2. Left column | 1pc |
| 3. Paper roller | 1pc |
| 4. Beam | 1pc |
| 5. Foot | 2pcs |
| 6. M6*40 Hex bolts | 8pcs |

AI bracket assembly diagram

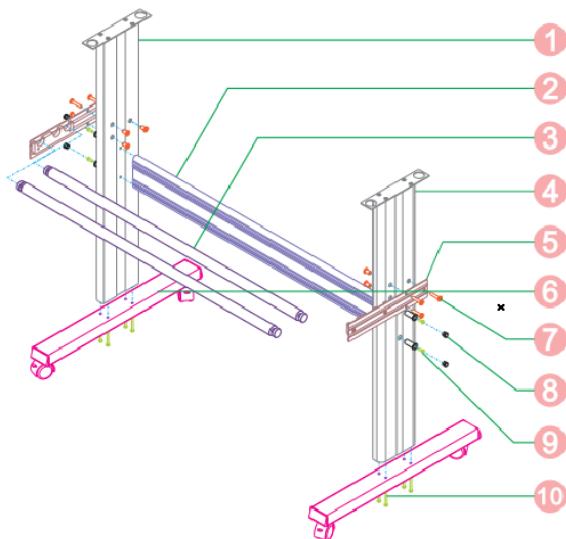


1. Left column	1pc
2. Beam	1pc
3. Paper roller	2pcs
4. Right column	1pc
5. Paper holder	2pcs
6. Foot	2pcs
7. Screws	6 sets
8. Screw sleeve	4 sets
9. Self-tapping screw 4*16	4pcs
10. Self-tapping screw 4*40	8pcs

Sheet metal racket assembly diagram

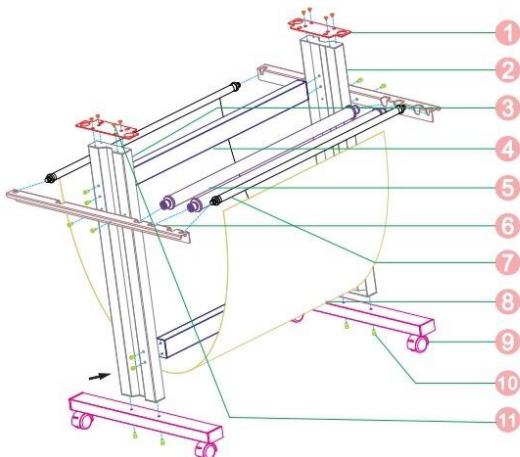

1. Connected board	2pcs
2. Right column	1pc
3. Left column	1pc
4. Beam	2pcs
5. Paper roller	2pcs
6. Paper holder	2pcs
7. Basket roller	2pcs
8. Basket	1pc
9. Foot	2pcs
10. 5×10 Socket head cap screw	20pcs
11. 4×6 Flat head screw	8pcs


V. Control buttons description and operation instructions

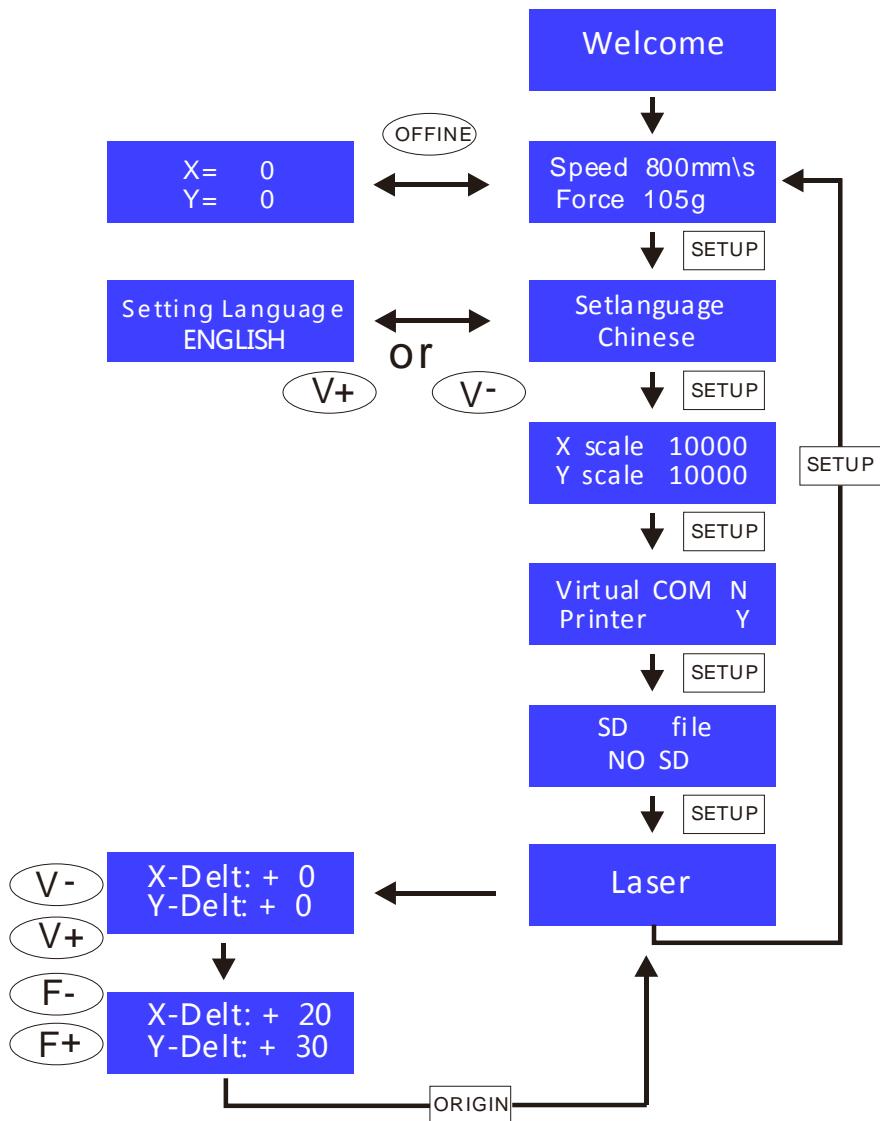


VI. Blade assembly

1). Assembly the blade into holder, see as below:


(Appearance view)

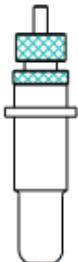


(Exploded view)

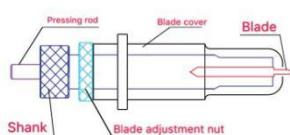


2). Loosen the blade adjustment nut and rotate the shank to adjust the length of the exposed blade tip. Determine the tip length according to the thickness of the material.

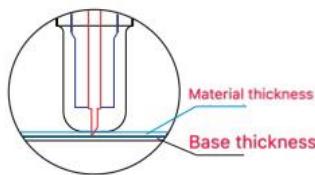

Correct

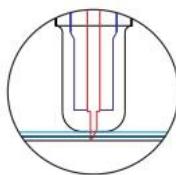

Blade tip is too long

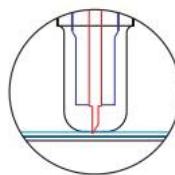

Blade tip is too short

- 1) Press the pressing rod when you want to change blade. Take out the blade when it is exposed.
- 2) Assembly the blade holder into wagon:
 - a, Loosen the fixed screw on tool holder
 - b, Put the blade holder into tool holder
 - c, Tighten and fix the blade holder when it arrives to correct position



Tips:

Do not touch the blade tip by finger, otherwise, your finger will be injured and the tip will be blunt.

VII. Software and driver installation

1. Open the software box (pic 1), take the disk and put it into CD optical drive (pic 2)




(pic 1)



(pic 2)

2. Open the computer, double click or right click optical drive to install the software. (pic 3)

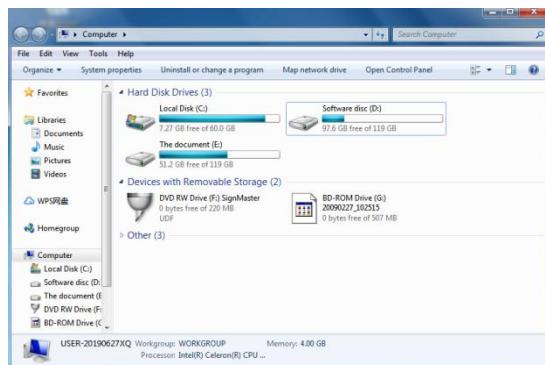

(pic 3)

3. After opening optical drive, click Install Software (pic 4)

Click on the icon in the red box

Select the language




(pic 4-2)




Enter the PSN code

Agree to click next

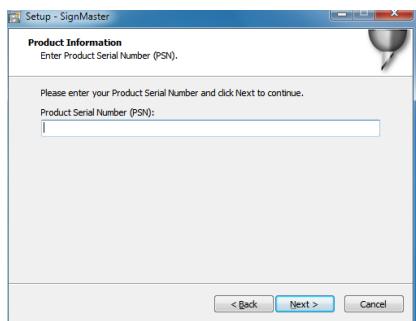


(pic 4-3)

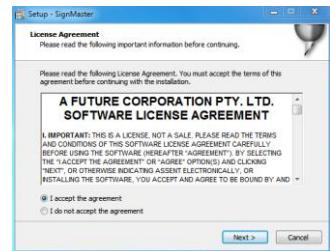

(pic 4-4)

PSN code can be found at left side of opened software box.


Default installation path, click next

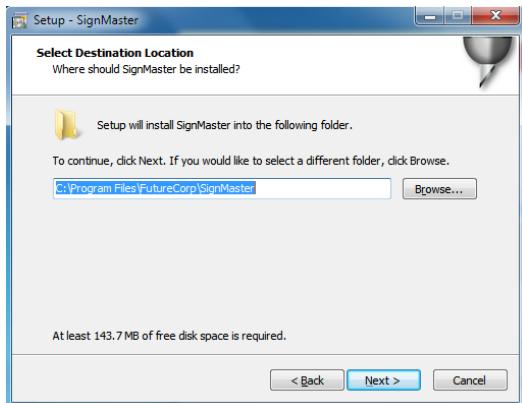

(pic 4-5)




Select the unit

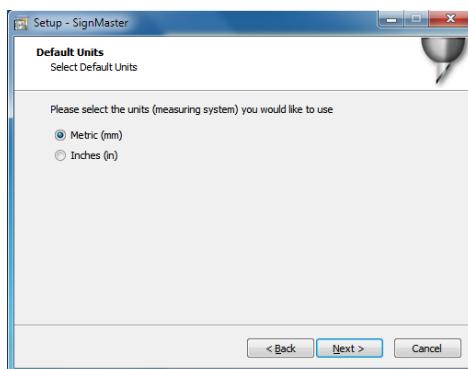

(pic 4-6)



Select machine model

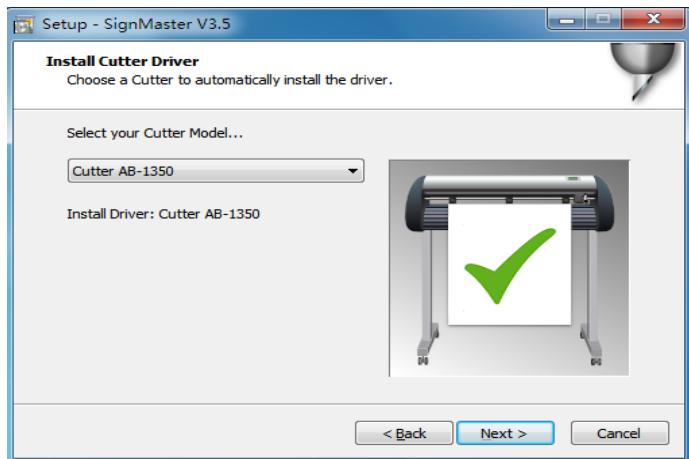


(pic 4-7)

(pic 4-7)


Next

The selected machine model can be viewed in the label above the machine power socket

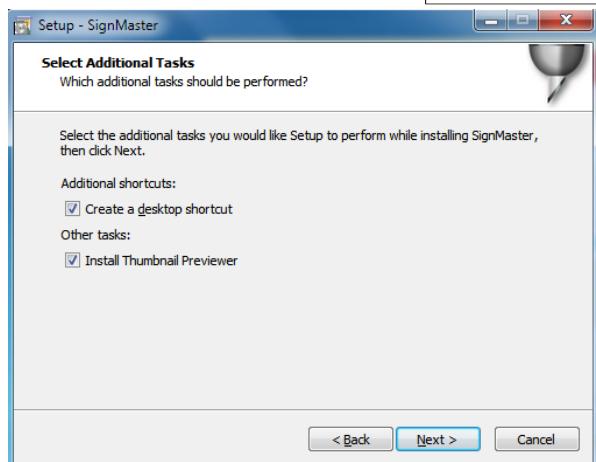

(pic 4-8)

The installation is complete

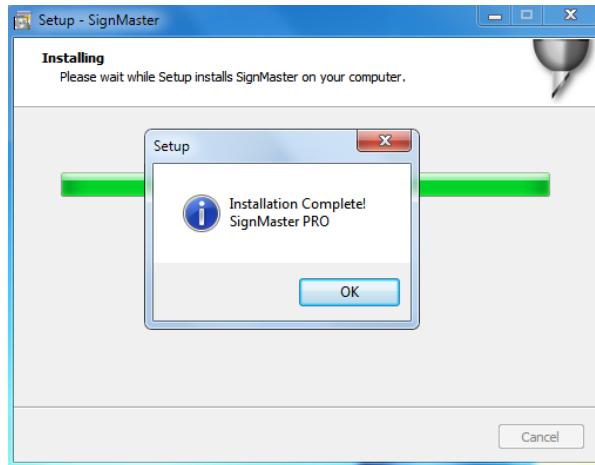


(pic 4-9)

This activation window appears when you open the software




(pic 4-10)

Click activate and enter your email twice

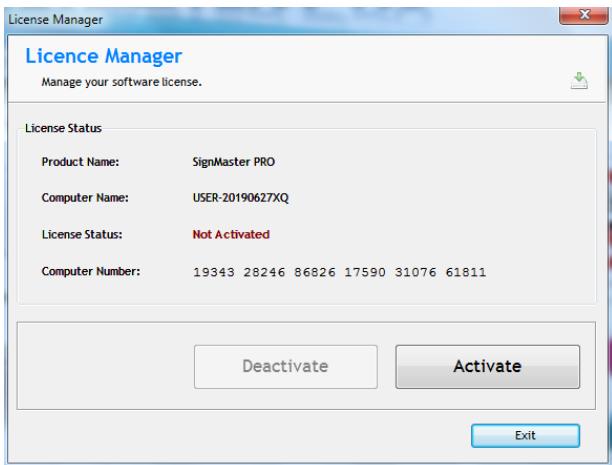

(pic 4-11)

Activation successful, exit

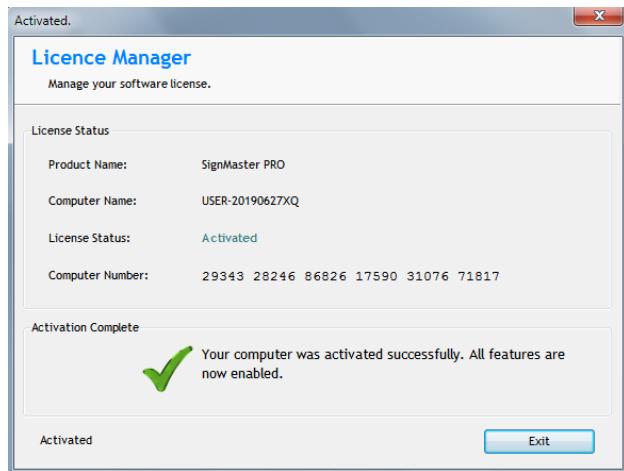


(pic 4-12)

VIII. Connection of software and machine

1. Open the software, select cut content, and click send to the cutting plotter


Click the carving knife icon in the red box

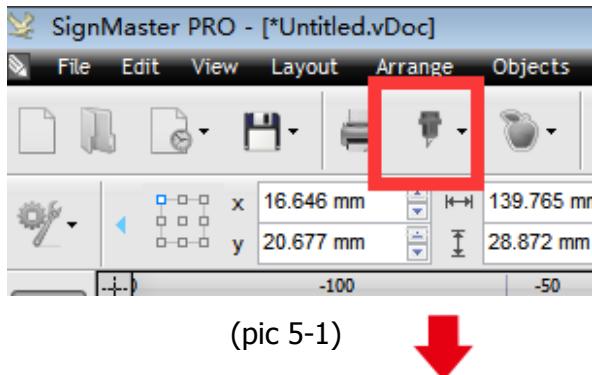


Click send to cutting plotter




Click properties

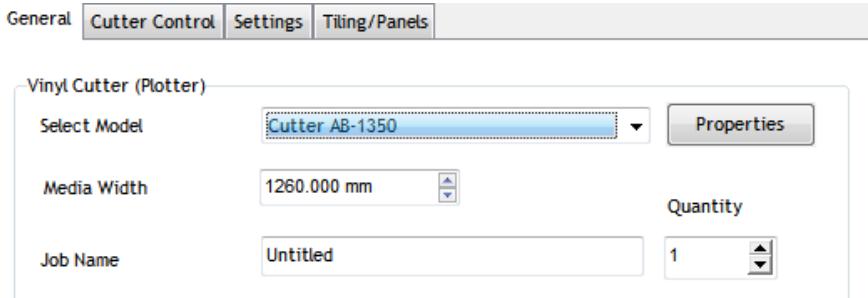

Click connect

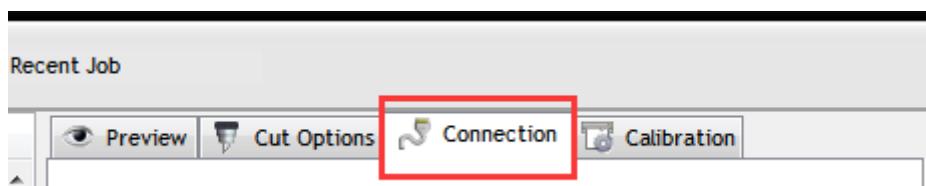

Select machine model

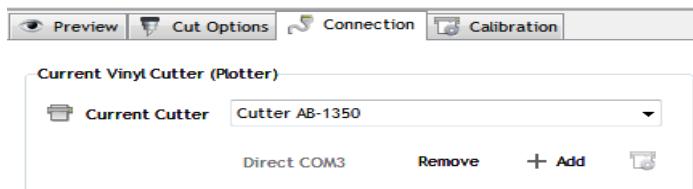

Select Direct USB Port

Connection Method

Port Type

Direct USB Port

Help

(pic 5-6)



Drop-down select driver

Settings



USB Port

Vinyl Cutter

Status


Device Connected

Detect

(pic 5-7)




Click finish

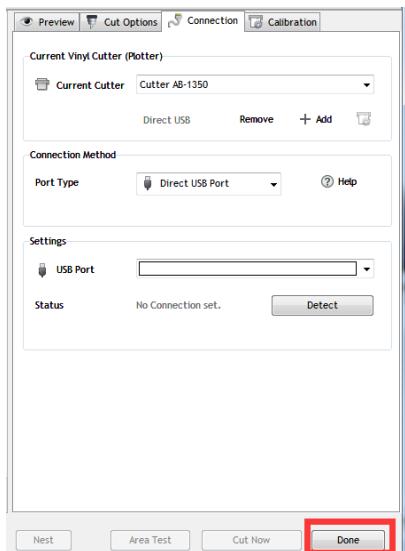

(pic 5-8)

Click cut now

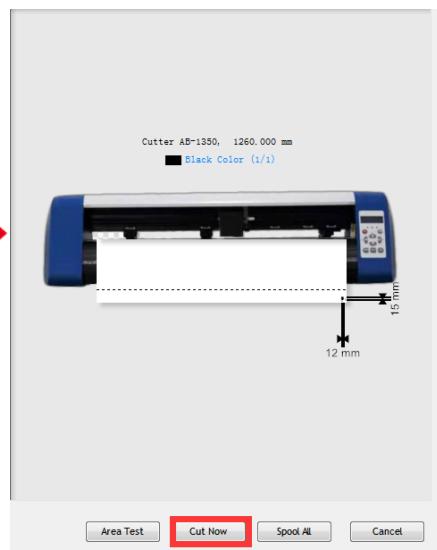

(pic 5-9)

Click cut now



(pic 5-10)

The output is completed, the cutting plotter is cutting



(pic 5-11)

Note: Please refer to the USB flash drive for specific operation, including the following videos

1. Ordinary cutting video
2. Automatic contour video
3. Automatic deviation correction video
4. Software installation video

P.S. FILM - EASYWEED®

SPECIFICATIONS

			Certifications
PU	90 microns	Adhesive polyester	REACH n° 1907/2006/EU OEKO-TEX® CONFIDENCE IN TEXTILES STANDARD 100 <small>084270.O CENTROCOT</small>

APPLICATION INSTRUCTIONS

	SUGGESTED CUTTING SETTINGS			TRANSFER SETTINGS			
cotton, polyester, poly/cotton blends (not suited for treated and dye sublimated textiles)	45°	60 gf	30 cm/sec	15 seconds	150°C (302°F)	Medium (2,5/3,5 bar)	hot/cold

- Cut the material mirrored
- Peel off excess material (Tip: use a heated surface for faster and easier "weeding")
- Place the decoration on the garment
- Apply following the recommended parameters
- Remove the carrier hot or cold

PRODUCT HIGHLIGHTS

- Wide range of colors
- Can be Layered
- Suitable for clothing for children and babies

NOTE: We highly recommend to perform a test before launching a production.

CARE AND WASHING RECOMMENDATIONS

Up to 80°C, inside-out	YES inside-out	YES (cotton cycle)	YES	Up to 2 years	Between 18°C and 26°C	Away from sunlight and dust	Vertical

- Wait 24 hours after the application before the first wash
- Respect the textile recommendations
- Do not bleach or use aggressive chemical agents

This document can be subject to variations. Updated versions are available on www.siser.com. For further information, please contact our sales office: info@siser.it



Siser s.r.l.
Viale della Tecnica, 18
36100 Vicenza - Italy

Tel. +39 0444.287960
Fax +39 0444.287959
info@siser.it
www.siser.com

r.e.a. vi 171856
reg. imp. vi n° 14971
c.s. € 103.300 i.v.
p.iva 01591490246



Management System
ISO 9001:2015
ISO 14001:2015
www.tuv.com
ID 9105027958

