


Trainings ▾

Initial Check

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause bodily injury.

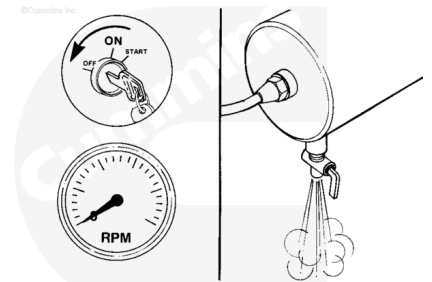


Shut off the engine.

Open the drain cock on the wet tank to release compressed air from the system.


Note : The illustrations shown will be of the SS model single cylinder air compressor. Differences in procedures for other models of Cummins air compressors will be shown where necessary.

Remove the air inlet and outlet connections from the air compressor.

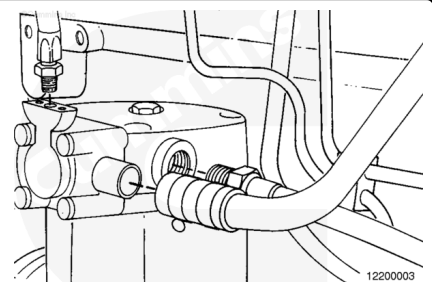


Measure the total carbon deposit thickness inside the air discharge line as shown.

Note : The carbon deposit thickness must not exceed 1.6 mm [0.06 (1/16) in].

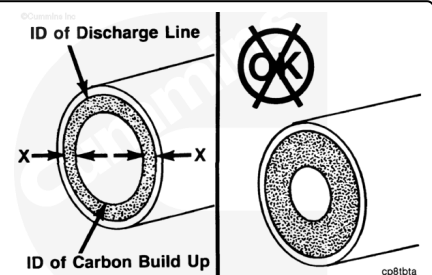


⚠ WARNING ⚠

The air discharge line must be capable of withstanding extreme heat and pressure to prevent personal injury and property damage. Refer to the manufacturer's specifications.

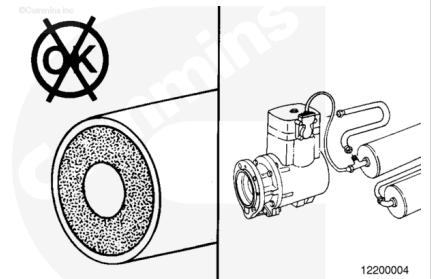


Note : If the total carbon deposit thickness exceeds specification, remove and clean, or replace the air discharge line. Refer to the manufacturer's material specifications.

Inspect any air dryers, spitter valves, pressure relief valves and alcohol injectors for carbon deposits or malfunctioning parts. Inspect for air leaks. Maintain and repair the parts according to the manufacturer's specifications.

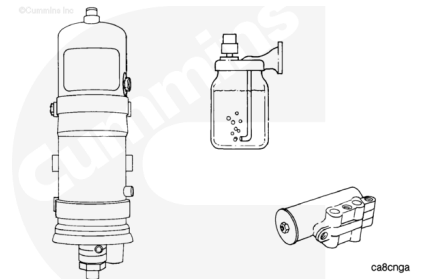

⚠ WARNING ⚠

The air discharge line must be capable of withstanding extreme heat and pressure to prevent personal injury and property damage. Refer to the manufacturer's specifications.

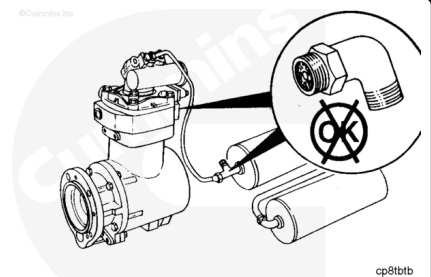


Continue to check for carbon buildup in the air discharge line connections up to the first connection, or wet tank.

Clean or replace any lines and fittings with carbon deposits greater than 1.6 mm [0.06 (1/16)-inch]. Refer to the manufacturer's specifications for cleaning, or replacement instructions.

⚠ CAUTION ⚠

Do not use a sharp object to remove carbon. The sealing surfaces may be damaged.

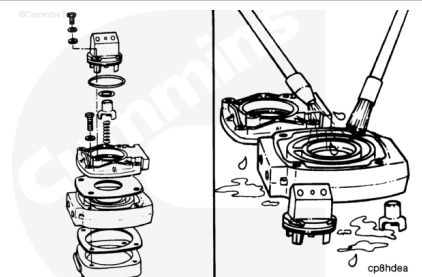


Remove the air compressor head and valve assembly. Refer to the Holset® Air Compressor Master Repair Manual.

Clean the compressor head and valve assembly components with solvent and a nonmetallic brush to remove carbon.

Inspect the valve assembly components for reuse. Refer to the Holset® Air Compressor Master Repair Manual.

Assemble the air compressor using new gaskets and o-rings.
Refer to the Holset® Air Compressor Master Repair Manual.
Install and tighten the air inlet and outlet connections.

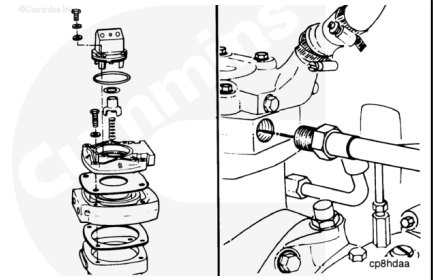

Close the wet tank drain cock.
Operate the engine and check for air leaks.

