


Trainings ▾

Measure

Use a dial indicator to measure the end clearance.

Bearing End Clearance		
mm		in
0.08	MIN	0.003
0.25	MAX	0.010

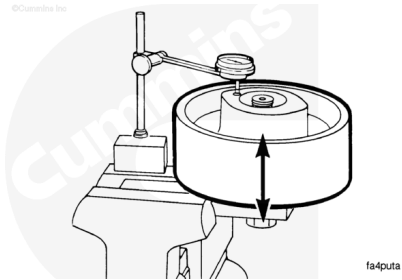

If the clearance is **not** within specification, verify the spacer was installed correctly.

The bearings **must** touch the spacer. The bearing races must touch the retaining ring.

Lubricate


Remove the capscrews, lock washers, cover plate, and gasket.

Use high performance, general purpose industrial-type grease (NLGI Grade No. 2) Chevron™ SRI Grease 2 or Mobilux™ EP 2 grease, or equivalent.

If above greases are not available locally, contact a Cummins® Distributor for advice on other Cummins® approved equivalents.

Fill the front cavity 2/3 full of grease.

Install the cover plate.

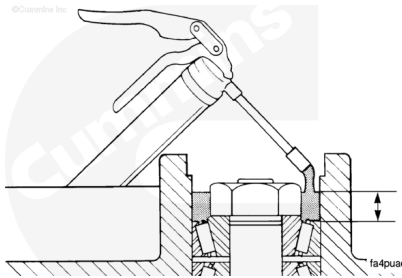


If the shock absorber has bushing and sleeves supplied separately, then assemble as follows:

1. Apply P80 Lubriplate™, Cummins® Part Number 3824878, or equivalent, rubber lubricant to the outer surface of the

rubber bushing (1). Insert fully into each end of the shock absorber.


2. Apply P80 Lubriplate™, Cummins® Part Number 3822487, or equivalent, rubber lubricant to the outer surface of the sleeve (2). Insert a sleeve into each of the rubber bushings until the sleeve is fully inserted.

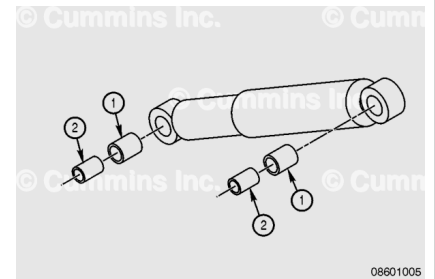

Install the pulley assembly onto the pivot arm assembly.


Tighten the capscrews.

Torque Value: 47 n•m [35 ft-lb]

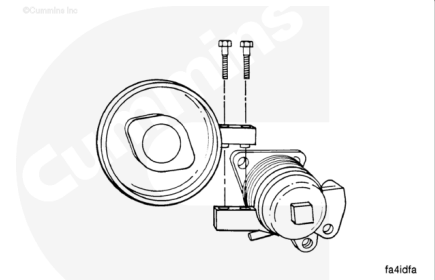

⚠ CAUTION ⚠

The shock absorber must be installed with the larger outer tube of the shock absorber attached to fan hub support. If the shock absorber is installed incorrectly, dirt and debris can enter the tube and cause the component to malfunction.

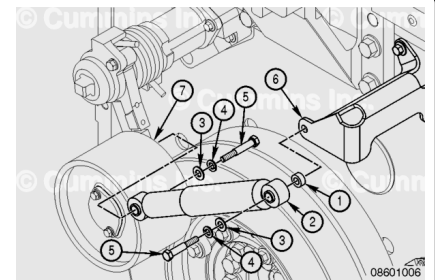

Install the following part to install the shock absorber:

- Spacer (1)
- Shock absorber (2)
- Flat washer (3)
- Lock washer (4)
- Capscrew (5)

Install the shock absorber (2) in the fan support (6).

Install the flat washer (3), lock washer (4), and capscrew (5) in the lower end of the shock absorber (2).


Install the shock absorber on the fan idler arm (7).

Tighten the two capscrews (5).

Adjust

The fan belt **must** be installed and under the tension of the fan idler arm to adjust the control rod. The fan belt and a portion of the flat washer is **not** shown for clarity.

Turn the control rod **clockwise** into the upper rod end to increase the belt tension.

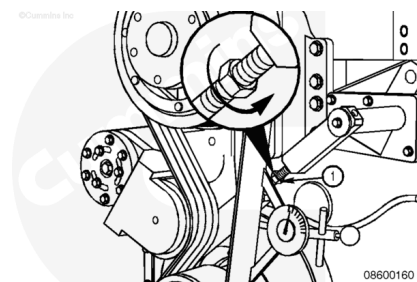

The idler lever screws are adjusted **only** if correct tension can **not** be obtained using the control rod.

Turn the control rod (1) **counterclockwise** out from the upper rod end until the idler lever pulley (2) is off the belt (3) completely.


Loosen three screws (4) on the belt tensioner.

Loosen six screws (5) on the belt tensioner.



Position the idler lever pulley (2) against the belt (3).

Tighten the three screws (4) and the six screws (5) on the belt tensioner.

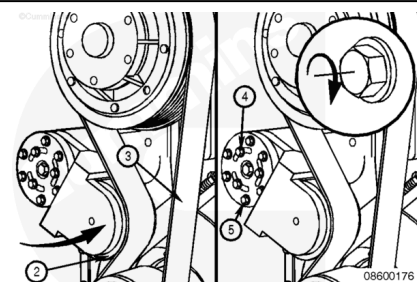

Turn the control rod **clockwise** into the upper rod end to tighten the belt tension.

