

Trainings ▾

General Information

The closed crankcase ventilation valve is used on engines in which the crankcase gases are vented back into the intake of engine. The purpose of the valve is to aid in regulating crankcase gas flow to the intake of the engine. Under high intake vacuum situations, the closed crankcase ventilation will prevent the engine from syphoning crankcase gases/oil from the crankcase of the engine.


©Cummins Inc.

Preparatory Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Disconnect the batteries.

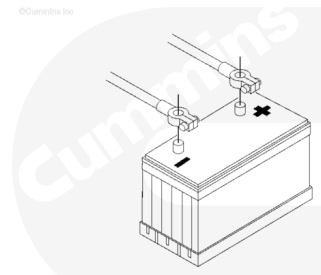


13900050

Remove

Front Gear Train

For front gear train engines, the closed crankcase ventilation valve is located between the tappet cover breather and intake manifold/cover of the engine.

The tappet cover closed crankcase ventilation valve is held in place by the molded closed crankcase ventilation hoses.

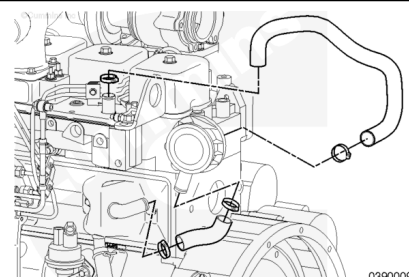

03900095


Removing the hoses will remove the valve.

Rear Gear Train

For rear gear train engines, the closed crankcase ventilation valve is connected between the flywheel housing and intake manifold/cover of the engine.


The tappet cover closed crankcase ventilation valve is held in place by the molded closed crankcase ventilation hoses.

Removing the hoses will remove the valve.

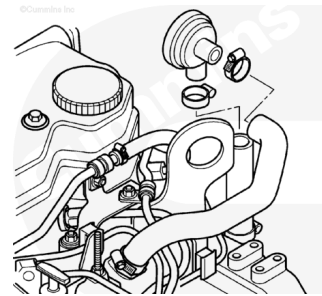

Clean and Inspect for Reuse

Inspect the valve for signs of damage or obstruction.

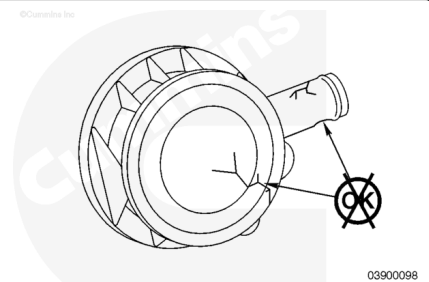


⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

If the valve is obstructed it **must** be cleaned with a solution of detergent or replaced to prevent excessive crankcase pressure buildup.

Dry components with compressed air.

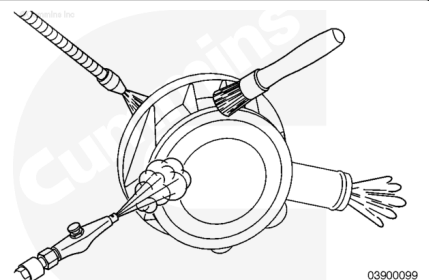


Install

Front Gear Train

Connect the tappet cover closed crankcase ventilation valve to the closed crankcase ventilation hoses and tighten the hose clamps.


Torque Value: 8 n•m [71 in-lb]

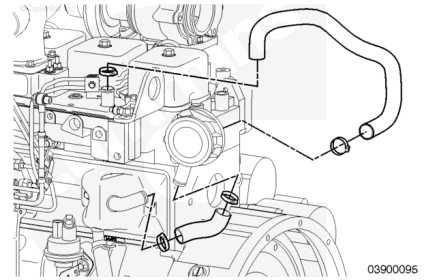

Rear Gear Train

Connect the closed crankcase ventilation valve to the closed crankcase ventilation hoses and secure the hose clamps.

Torque Value: 8 n•m [71 in-lb]

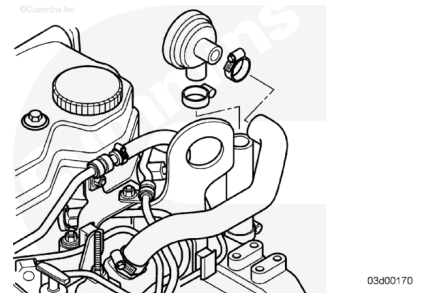

Finishing Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Connect the batteries.

