


Trainings ▾

Initial Check

Cranking Circuit or Battery Cable Test


Attach the carbon pile tester and multimeter. Apply 500 amps of load (250 amps for a 24-VDC system), and measure the positive and negative voltage losses. Add (V1) and (V2) together for a total battery cable voltage drop. The measured voltage drop **must** be less than 0.5 VDC for a 12-VDC system or less than 1 VDC for a 24-VDC system. If the voltage drops are excessive, repair or replace the wiring system.

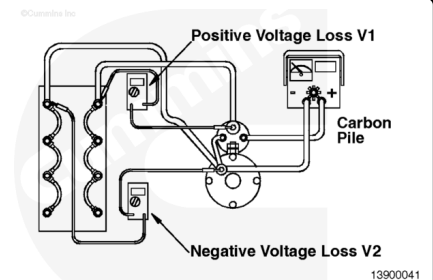

System Voltage	Maximum Voltage Drop
12 VDC	0.5 VDC
24 VDC	1.0 VDC

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first, and attach the negative (-) battery cable last.

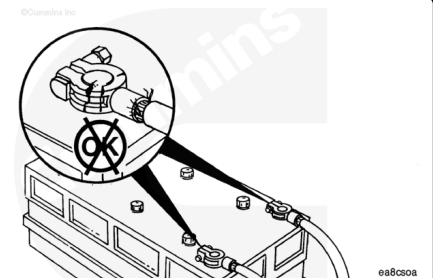

Inspect the battery terminals for loose, broken, or corroded connections.

Repair or replace broken cables or terminals.

If the connections are corroded, remove the cables, and use a battery brush to clean the cable and battery terminals.

Install and tighten the battery cables.

Use dielectric grease to coat the battery terminals to prevent corrosion.

