

Trainings ▾

Install

with Mechanically Actuated Injector

Install new o-rings in the fuel pump inlet hose fitting and the fuel supply tube fitting.

Install the fuel pump inlet hose (1) and the fuel supply tube (2).

Tighten the hoses.

Torque Value:


Fuel Pump Inlet Hose

1. 120 n•m [89 ft-lb]

Torque Value:

Fuel Supply Tube

1. 120 n•m [89 ft-lb]

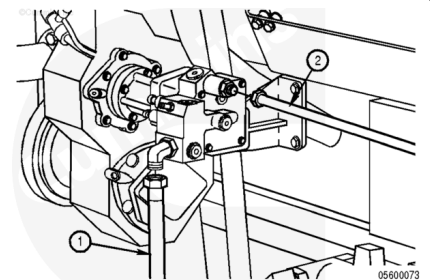

with Electronically Actuated Injector


Remove the union from its protective plastic bag and install new o-rings on the union.

Install the union in the outlet of the gerotor fuel pump.

Torque Value:


Gerotor Pump Outlet Union

1. 100 n•m [74 ft-lb]

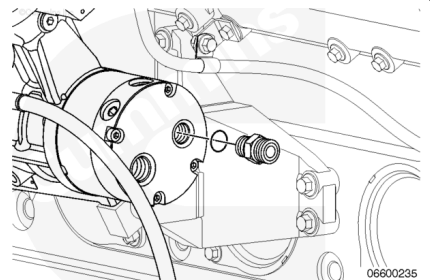


Remove the tee fitting from its protective plastic bag and install the tee fitting in the port on the back of the fuel pump by first positioning the locknut.

1. Locknut
2. Washer
3. O-ring.

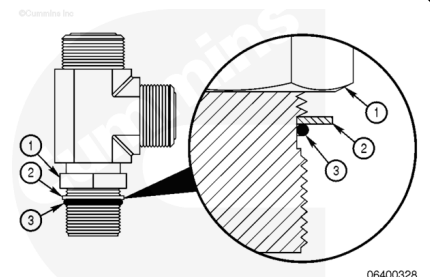

Install the tee fitting in the fuel pump port until the backup washer (1) contacts the port face.

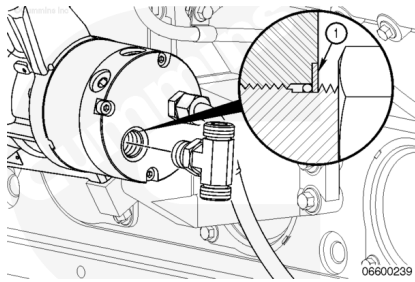


Using two wrenches, hold the tee fitting in the desired position and tighten the locknut.

Torque Value:

Tee Fitting Locknut

1. 100 n•m [74 ft-lb]

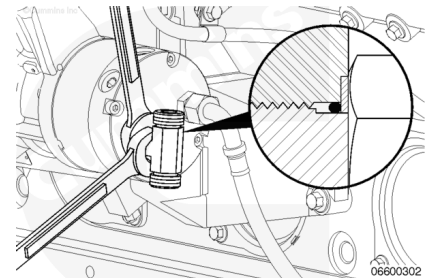


Remove the union from its protective plastic bag

Install new o-rings in the union, and then install it in the port for the bypass from the fuel pump inlet actuator.

Torque Value:


Fuel Pump Inlet to Actuator Union

1. 170 n•m [125 ft-lb]

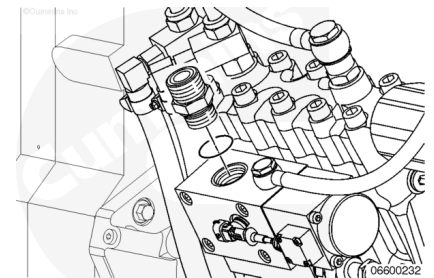

Make sure the fuel inlet (1) and outlet (2) elbow joints are positioned at a 10 o'clock and 12 o'clock angle as shown.

If elbow joints need to be repositioned, see the assembly steps in Fuel Filter Head. Refer to Procedure 006-017 in section 6. ([/qs3/pubsys2/xml/en/procedures/56/56-006-017-tr.html](http://qs3/pubsys2/xml/en/procedures/56/56-006-017-tr.html))

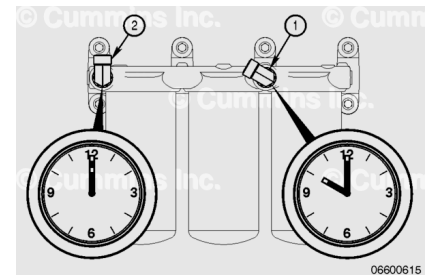

Remove the fuel line from its protective plastic bag. Install the fuel line from the outlet of the stage two filters to the inlet of the fuel pump pressurizing assembly.


Tighten the hose fitting (1) to the elbow of the filter head.

Tighten the hose fitting at the union (2) on the fuel pump pressurizing assembly.

Hose fitting sizes differ depending on hose part number.

Torque Value: 65 n•m [48 ft-lb]

Torque Value: 90 n•m [66 ft-lb]

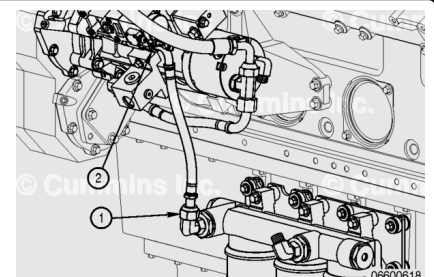

Remove the fuel line from its protective plastic bag. Install the fuel supply line from the gerotor fuel pump to the inlet of the stage two fuel filter.

Tighten the hose fitting (1) to the elbow of the filter head.


Tighten the hose fitting at the union (2) on the gerotor fuel pump.

Hose fitting sizes differ depending on hose part number.

Torque Value: 65 n•m [48 ft-lb]

Torque Value: 90 n•m [66 ft-lb]

Note : Make sure that both elbow unions are still positioned at the proper angles as described above. Avoid sharp bends or twisting of the hose. Some small adjustment to the elbow fittings may be required to reduce the risk of applying stress to the hose.

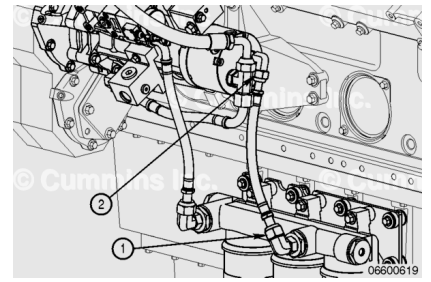

For Generator Model DQKAN with Low NOx Emissions Capability:


Remove the union from its protective plastic bag and install new o-rings.

Install the union to the outlet of the gerotor fuel pump.

Torque Value:


Gerotor Pump Outlet Union

1. 85 n•m [63 ft-lb]

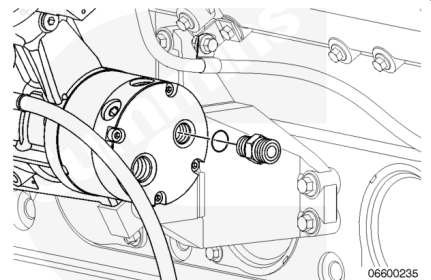


Remove the tee fitting from its protective plastic bag and install the tee fitting in the port on the back of the fuel pump by first positioning the locknut.

1. Locknut
2. Washer
3. O-ring.

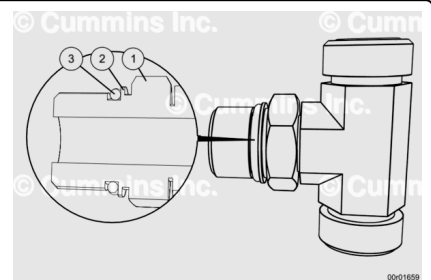

Install the tee fitting in the fuel pump port until the backup washer (1) contacts the port face.


Do **not** torque.

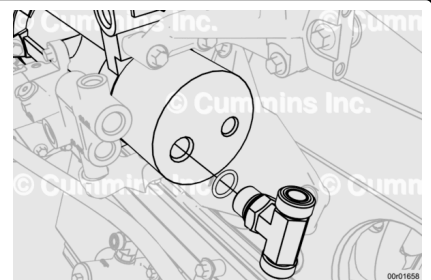

Remove the union from its protective plastic bag and install to fuel inlet manifold.

Install new o-rings.


Torque Value: 45 n•m [33 ft-lb]

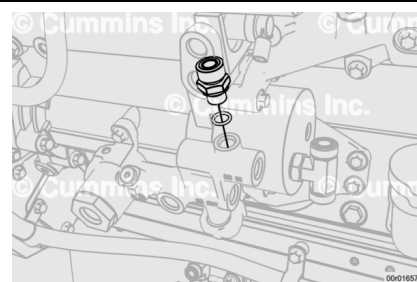

Remove the union and elbow from their protective plastic bags and install to the fuel manifold and fuel pump.

Install new o-rings.


Torque Value: 140 n•m [103 ft-lb]

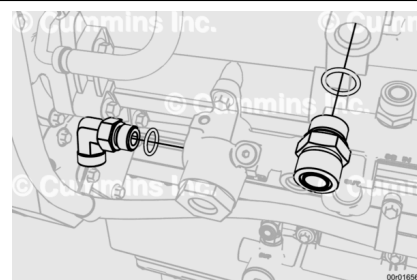

Remove the unions from their protective plastic bags and install to the fuel inlet manifold and fuel pump.

Install new o-rings.


Torque Value: 85 n•m [63 ft-lb]

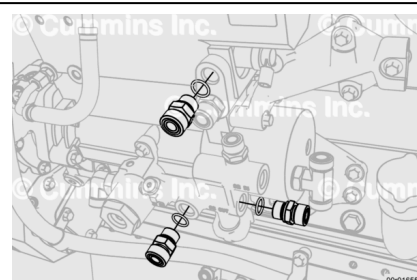

Remove the unions from their protective plastic bags and install to the fuel inlet manifold and fuel pump gerotor.

Install new o-rings.

Torque Value: 85 n•m [63 ft-lb]

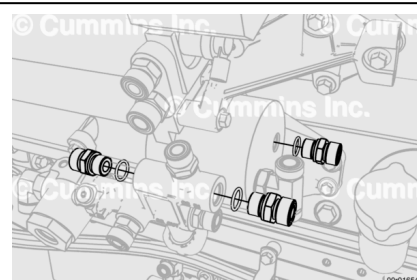


Remove the following items from plastic bags and install.

1. Fuel supply to gerotor
2. Fuel bypass to gerotor
3. Stage 2 filter inlet tube
4. Stage 2 filter outlet tube
5. Pump Inlet supply hose
6. Gerotor outlet tube

Torque Value

1. Fuel supply to gerotor: 115 n•m [85 ft-lb]

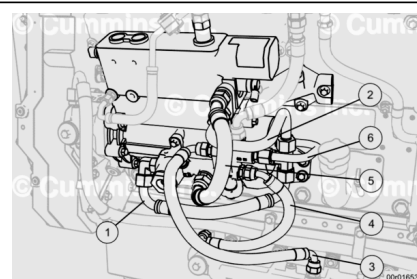


2. Fuel bypass to gerotor: 115 n•m [85 ft-lb]
3. Stage 2 filter inlet tube: 85 n•m [63 ft-lb]
4. Stage 2 filter outlet tube: 85 n•m [63 ft-lb]
5. Pump Inlet supply hose: 115 n•m [85 ft-lb]
6. Gerotor outlet tube: 80 n•m [59 ft-lb]

Note : Make sure that both elbow unions are still positioned at the proper angles as described above. Avoid sharp bends or twisting of the hose. Some small adjustment to the elbow fittings may be required to reduce the risk of applying stress to the hose.

Whilst holding the tee fitting in the position which ensures the best seating with the lines above and below, using two wrenches, tighten the tee fitting locknut.


Torque Value: 115 n•m [85 ft-lb]

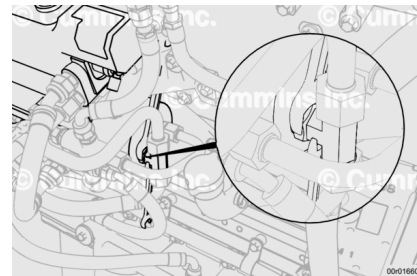

Marine Applications

Remove the fuel supply lines from the protective plastic bag.


Install the fuel supply lines that go along the lubricating oil pan rail.

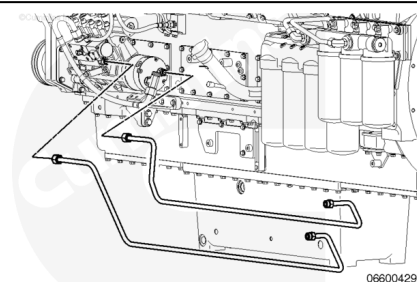

Install the clamps and capscrews securing the fuel line to the mounting plates.

Tighten the capscrews.

Torque Value: 9 n•m [80 in-lb]

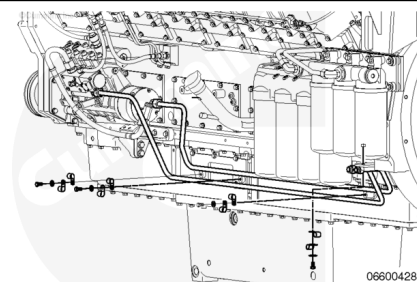


Remove the fuel supply lines from the protective plastic bag.

Install the short section of the fuel supply lines to the inlet and outlet of the stage 2 filter head.

Tighten the fittings.

Torque Value: 91 n•m [67 ft-lb]

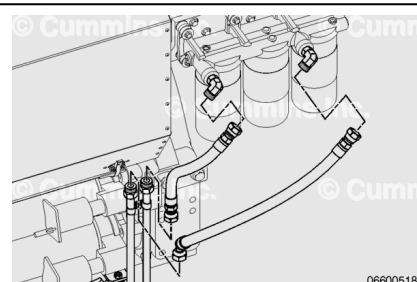

Remove the elbow from its protective plastic bag.


Install new o-rings on the union.

Install the union in the outlet of the gerotor fuel pump.

Torque Value:

Gerotor Pump Outlet Union

1. 100 n•m [74 ft-lb]

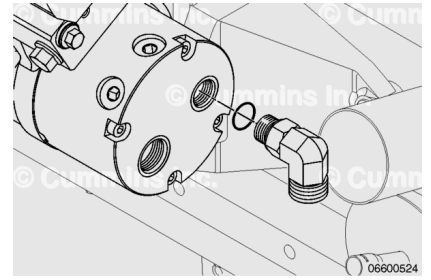

Remove the fuel line from its protective plastic bag.


Install the fuel supply line from the gerotor fuel pump to the tube leading to the inlet of the second stage filter.

Install new o-rings on each end.

Torque Value:

Fuel Supply Line


1. 65 n•m [48 ft-lb]

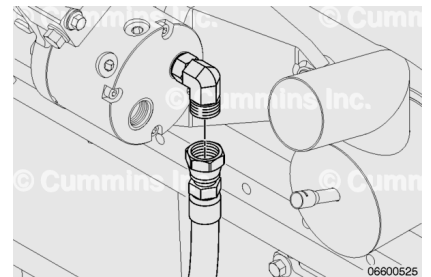


Remove the tee fitting from its protective plastic bag.

Install the tee fitting in the port on the back of the fuel pump by first positioning the locknut.

1. Locknut
2. Washer
3. O-ring.

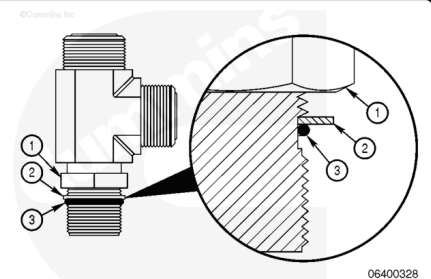

Install the tee fitting in the fuel pump port until the backup washer (1) contacts the port face.

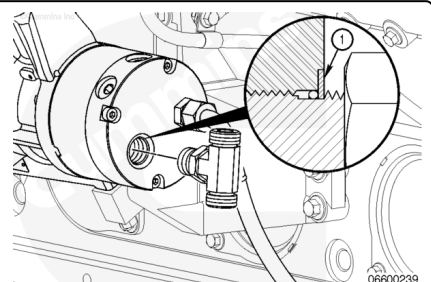


Use two wrenches to hold the tee fitting in the desired position and tighten the locknut.

Torque Value:

Tee Fitting Locknut

1. 100 n•m [74 ft-lb]

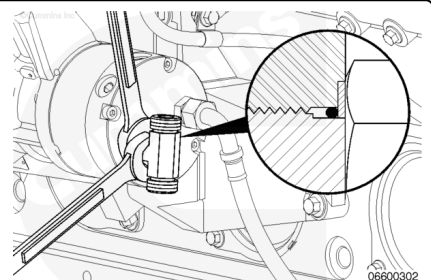

Remove the union from its protective plastic bag.


Install new o-rings in the union.

Install the union in the port for the bypass from the fuel pump inlet actuator.

Torque Value:

Fuel Pump Inlet to Actuator Union

1. 170 n•m [125 ft-lb]

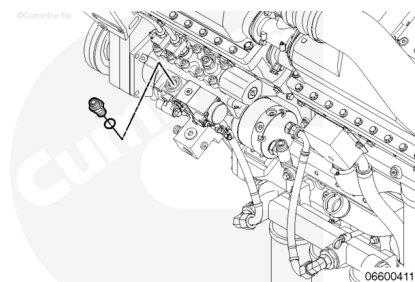


Remove the fuel supply line from its protective plastic bag.

Install the fuel bypass line on the inlet actuator bypass union to the tee fitting on the inlet of the gerotor fuel pump.

Torque Value:

Gerotor Fuel Supply Line

1. 91 n•m [67 ft-lb]

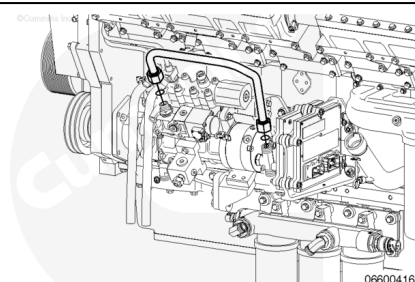

Remove the fuel supply line from its protective plastic bag.

Install the fuel supply line from the fuel manifold to the tee fitting on the gerotor fuel pump.

Torque Value:

Fuel Line From Manifold to Gerotor Pump Tee Fitting

1. 91 n•m [67 ft-lb]

