
Software Installation Guide for Modelling Part

This guide explains how to install the software required for working with mathematical models and synthesizing controllers using the Control System Toolbox in Python.

Windows


- Install VSCode development environment using the instructions: https://code.visualstudio.com/docs/setup/windows
- 2. Update Python to the latest version:
 - Go to https://www.python.org/downloads/ and download the latest version.
 - Run the installer as administrator and follow the installation wizard.
- 3. Install Miniconda:
 - Visit https://www.anaconda.com/download/success and download the Miniconda installer.
 - Run the installation wizard. On the Advanced Installation Options screen, check all the boxes
 even if warnings appear.

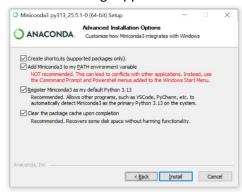

- Click Install and wait for installation to complete.
- 4. Open the Anaconda Prompt and install the necessary libraries:

```
conda install -c conda-forge slycot
conda install numpy
conda install matplotlib
conda install -c conda-forge scipy
conda install -c conda-forge control
```

- 5. Download the repository: https://github.com/voltbro/ReactionWheel
- 6. Open VSCode, go to File -> Open Folder, and select the downloaded repository folder.
- 7. Verify the setup:
 - Open file Python/test.ipynb.
 - In the top-right, click Select Kernel -> Select Another Kernel -> Python Environments -> base (Python 3.13.2).
 - Click Run All. If a step response plot appears below, everything is working correctly.

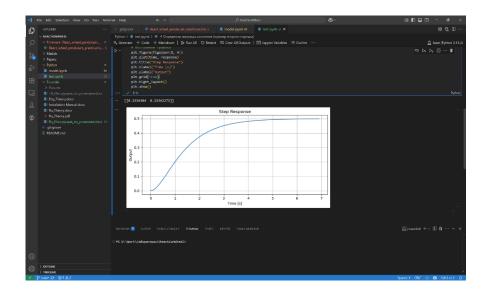

Ubuntu

1. Install VSCode:

sudo snap install --classic code


2. Install pip:

sudo apt install python3-pip

3. Install required libraries:

pip install numpy matplotlib scipy slycot control

- 4. Download the repository: https://github.com/voltbro/ReactionWheel
- 5. Open VSCode, go to File -> Open Folder, and select the repository.
 - Open file *Python/test.ipynb*.
 - In the top-right, click Select Kernel -> Select Another Kernel -> Python Environments -> base (Python 3.13.2).
 - Click Run All. If a step response plot appears below, everything is working correctly.

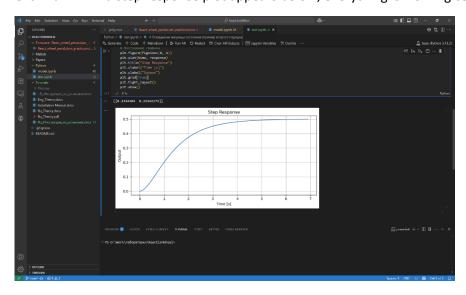


Software Installation for Hardware Part

This guide explains how to install the software needed to program the microcontroller used for controlling the reaction wheel inverted pendulum.


Windows

Installing Arduino IDE


- 1. Go to https://www.arduino.cc/en/software
- 2. Download Arduino IDE 2.3.4 for Windows 64-bit.
- 3. Run the installer and follow these steps:
 - Accept the license agreement.

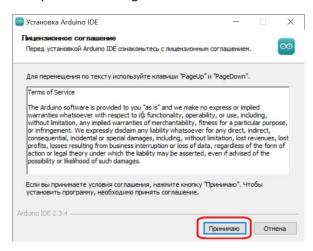


Choose Install for me only, then click Next.

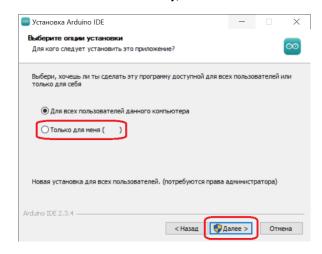


• Optionally change the installation path, then click **Install**.

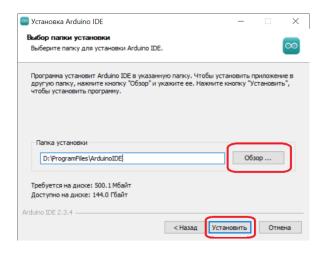

Wait for the installation to complete.

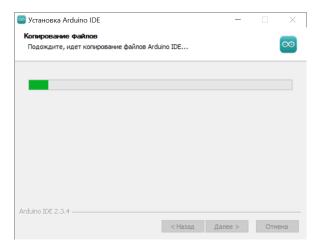

• Uncheck Run Arduino IDE and click Finish.

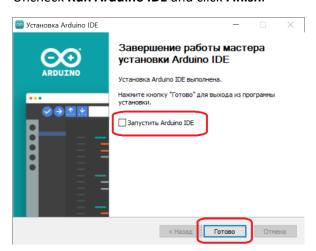


Installing STM32CubeProg


To flash STM32 microcontrollers, a programmer is required. The STM32CubeProgrammer utility is used for this purpose.

- 1. Go to https://www.st.com/en/development-tools/stm32cubeprog.html
- 2. Download STM32CubeProgrammer 2.19.0 for Windows 64-bit.
- 3. Run the installer:
 - Grant administrator access when prompted.

• Click Next through the wizard.

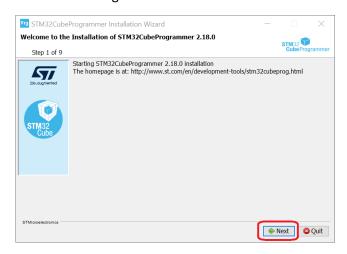


Accept the installation information.

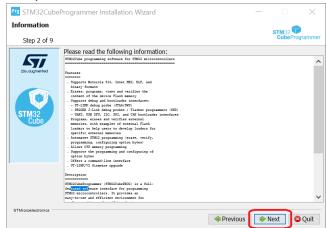


• Accept the license agreement.



• Choose the installation folder.

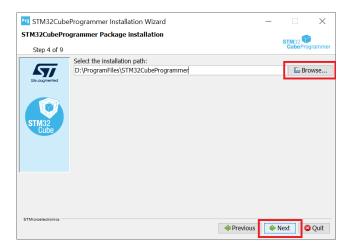


• If the folder doesn't exist, click **OK** to create it.



• Check the box I have read and understand..., then click Next.




Make sure all components are selected and click Next.

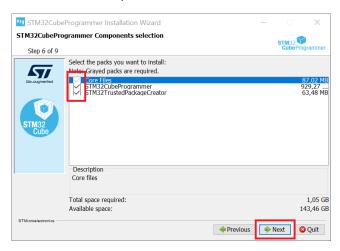


• During the installation, a device driver wizard will appear:




- Click Next → Install → Finish.
- After installation, click **Next**.

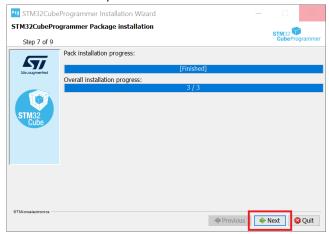

• Uncheck all boxes.

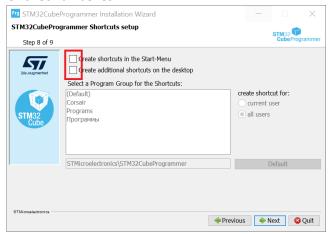


• Click **Done** in order to finish installation process.

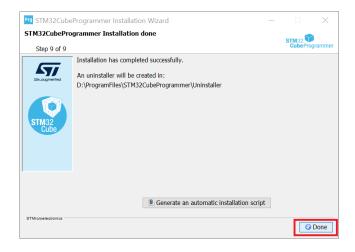

Installing STM32duino Support


To enable Arduino IDE support for STM32 microcontrollers:

1. Open Arduino IDE and go to File -> Preferences.

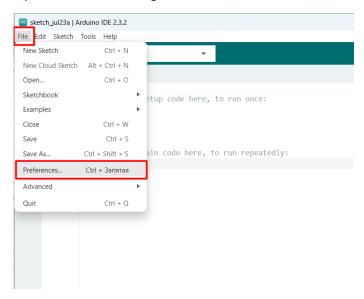

2. In the Additional Boards Manager URLs field, add the following URL:

https://github.com/stm32duino/BoardManagerFiles/raw/main/package_stmicroelectronics_index.json

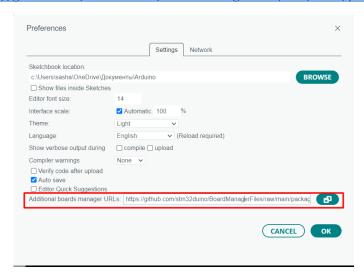


3. Click OK.

- 4. In the main window, go to **Tools -> Board -> Board Manager**.
- 5. Search for STM32, then install STM32 MCU based boards.

Arduino IDE Configuration


To work with STM32G474RE-based modules like VBCoreG4:

1. Go to Tools -> Board -> STM32 MCU based boards -> Generic STM32G4 series.

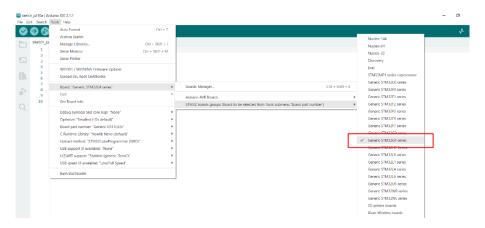


2. Make sure the same board series is shown in the list of board where firmware is going to be uploaded


3. If needed, click the arrow at the bottom of the board list and select **Select Other Board and Port**. Choose the correct board and click OK.

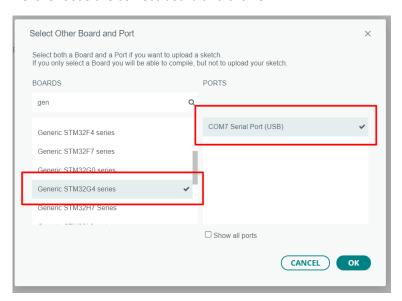

4. Set board part number: Tools -> Board part number -> Generic G474RETx

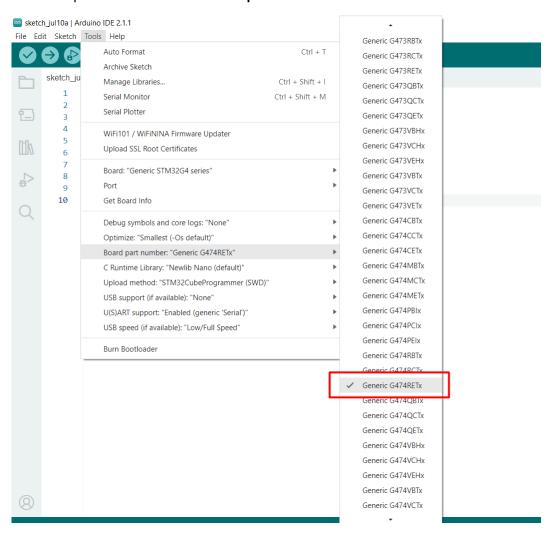

5. Set upload method: Tools -> Upload method -> STM32CubeProgrammer (SWD)

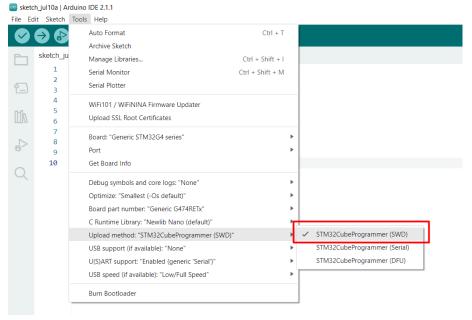

Installing VBCoreG4 System Library

To ensure compatibility with the VBCore VB32G4 board:

- 1. Download the library from https://github.com/VBCores/VBCoreG4 arduino system
- 2. Copy the VBCoreG4_arduino_system folder into your Arduino libraries directory. Typical locations:

C:\Program Files (x86)\Arduino\libraries

C:\Users\username\Documents\Arduino\libraries

3. If unsure, check **File -> Preferences in Arduino IDE** → **Sketchbook** location shows where the libraries folder is.

Installing Additional Libraries

1. Install the SimpleFOC library (for brushless motor control).

Follow the instructions: https://docs.simplefoc.com/library_download

- 2. Install AS5600 sensor library:
 - Go to https://github.com/Seeed-Studio/Seeed Arduino AS5600 and download the repository as a ZIP file.
 - In Arduino IDE, go to Sketch -> Include Library -> Add .ZIP Library and select the downloaded file.

Congratulations!

You have successfully installed and configured all tools needed for developing software for the VBCore VB32G4 microcontroller modules.