

here

Indoor Radio Mapper

User Guide

Version 4.3

Important Information

Notices

Topics:

This section contains document notices.

- *Legal Notices*
- *Document Information*

Legal Notices

© 2017 HERE Global B.V. and its Affiliate(s). All rights reserved.

This material, including documentation and any related computer programs, is protected by copyright controlled by HERE. All rights are reserved. Copying, including reproducing, storing, adapting or translating, any or all of this material requires the prior written consent of HERE. This material also contains confidential information, which may not be disclosed to others without the prior written consent of HERE.

Trademark Acknowledgements

HERE is trademark or registered trademark of HERE Global B.V.

Other product and company names mentioned herein may be trademarks or trade names of their respective owners.

Disclaimer

This content is provided "as-is" and without warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability, fitness for a particular purpose, satisfactory quality and non-infringement. HERE does not warrant that the content is error free and HERE does not warrant or make any representations regarding the quality, correctness, accuracy, or reliability of the content. You should therefore verify any information contained in the content before acting on it.

To the furthest extent permitted by law, under no circumstances, including without limitation the negligence of HERE, shall HERE be liable for any damages, including, without limitation, direct, special, indirect, punitive, consequential, exemplary and/ or incidental damages that result from the use or application of this content, even if HERE or an authorized representative has been advised of the possibility of such damages.

Document Information

Product

Name: Indoor Radio Mapper

Version: Version 4.3

Document

Name: Indoor Radio Mapper User Guide

ID: 9f72907-1489265557-25e03a7f

Status: FINAL

Date: 2017-Mar-11, 20:53 (GMT)

Contents

Chapter 1: Introduction.....	7
What is HERE Indoor Radio Mapper?.....	8
Chapter 2: Quick start.....	9
Prerequisites.....	10
Quick Start Workflow.....	11
Chapter 3: Getting Started.....	13
Transferring and Installing HERE Indoor Radio Mapper.....	14
Logging In.....	15
Chapter 4: Navigating in the Indoor Radio Mapper.....	16
Basic Navigation.....	17
Selecting and Managing Venues.....	18
Selecting and Managing Activities.....	20
Chapter 5: Custom Image-Based Venues.....	22
Prerequisites for Using Custom Image-based Indoor Maps.....	23
Importing Custom Indoor Maps.....	23
Manual Calibration.....	24
Chapter 6: Collecting Radio Data.....	26
Collect Data View.....	27
How to Collect Radio Data.....	28
Collecting Radio Data Indoors.....	29
Collecting Radio Data in Connectors.....	31
Collecting Radio Data Outdoors.....	31
Collecting Radio Data With Bitmaps.....	32
Showing the Data Collected by Others.....	34
Collecting Test Tracks.....	35

Indoor Radio Mapper User Guide

► Contents

here

Chapter 7: Managing Radio Data in Floor Detail view.....	37
Floor Radio Data Management.....	38
Storing Collected Radio Data.....	39
Chapter 8: Testing Positioning Performance.....	40
Testing for Performance.....	41
Testing Positioning Real-Time.....	41
Running a Test Track.....	42
Chapter 9: Publishing Radio Data.....	44
Publishing Flow.....	45
Chapter 10: FAQ.....	46
Why do I have to walk in straight lines at constant speed?.....	47
Why do I need to align my own custom indoor maps to Latitude and Longitude coordinates?.....	47
Are there any device settings that I should be aware of?.....	47

Chapter 1

Introduction

Topics:

- [*What is HERE Indoor Radio ...*](#)

This document provides information on how to use the HERE Indoor Radio Mapper to

- access HERE Private and Public Venue Maps
- import and align your own custom indoor maps
- collect radio data inside and outside of venues by using the indoor maps
- manage the collected radio data
- publish the collected radio data for HERE Mobile SDK
- test indoor positioning performance at the venue after the radio data collection

What is HERE Indoor Radio Mapper?

HERE Indoor Radio Mapper is an Android-based tool for collecting geo-referenced radio data on the WiFi access point and Bluetooth beacon signal strengths inside buildings. The tool also supports collecting signal strength data outdoors in the vicinity of the venue in case smooth indoor-outdoor transitions are required.

To use this tool, you need to have an indoor map of your venue (either a HERE Venue Map or a custom image-based indoor map of your own) and WiFi access points or Bluetooth beacons installed in your building. As soon as you meet these preconditions and have signed up for HERE Indoor Positioning (evaluation or a commercial deal), you can use this application to collect the radio data.

Radio data collection with the HERE Indoor Radio Mapper is a prerequisite for making the applications using the HERE Mobile SDK (Android or iOS) location-aware even inside buildings. The collected radio data is processed in the HERE Cloud to create an understanding of the radio signal behavior within the building. We call this understanding as the *radiomap* of the building. The radiomap is downloaded and used by the HERE Mobile SDK to locate the device running the location-aware application with a few-meter accuracy in 3D.

For a full description of the related concepts and the entire ecosystem, see the HERE Indoor Positioning Installation Guide. The same document also instructs, how to install and configure the Bluetooth beacons, if necessary, as well as how to test the system end-to-end.

Chapter 2

Quick start

Topics:

- *Prerequisites*
- *Quick Start Workflow*

This section gets you started with the HERE Indoor Radio Mapper in just a few minutes.

Prerequisites

Before you start working with the HERE Indoor Radio Mapper:

- You need to have a HERE Account and at least one AppID, which includes HERE Indoor Positioning features (evaluation, indoor-private feature or indoor-public feature).
- HERE Indoor Radio Mapper needs to be installed to a device running Android version 5.0 (API level 21) up to 7.0.
- The device you intend to use must be suitable for the radio data collection. The main criteria for a high-quality measurement device is the support for dual-band WiFi, i.e. compatible with 2.4-GHz and 5-GHz WiFi bands, and a Bluetooth radio. Other quality criteria include high radio scanning rate (e.g. once per two seconds for WiFi), high sensitivity and accuracy of signal strength measurements as well as low measurement noise.

Moreover, if the device has only Bluetooth radio (no WiFi or Cellular radio), the device needs to have a GPS for reference location purposes.

For further information on the devices recommended for the radio data collection, see the HERE Indoor Positioning Installation Guide.

- You have access to an indoor map for a venue, where you want to test or deploy HERE Indoor Positioning.

In case you intend to use a HERE Private Venue Map, this needs to be deployed to your HERE Account by HERE.


If you intend to use your own custom image-based indoor map, please refer to [Custom Image-Based Venues](#) on page 22 for supported image formats and other requirements.

If you intend to use any of HERE Public Venue Maps, they are available in HERE Indoor Radio Mapper in case you have HERE Indoor Positioning evaluation or indoor-public feature enabled in your HERE Indoor Positioning license.

Quick Start Workflow

The following figure shows the basic workflow for using the HERE Indoor Radio Mapper .

Figure 1: Quick start workflow

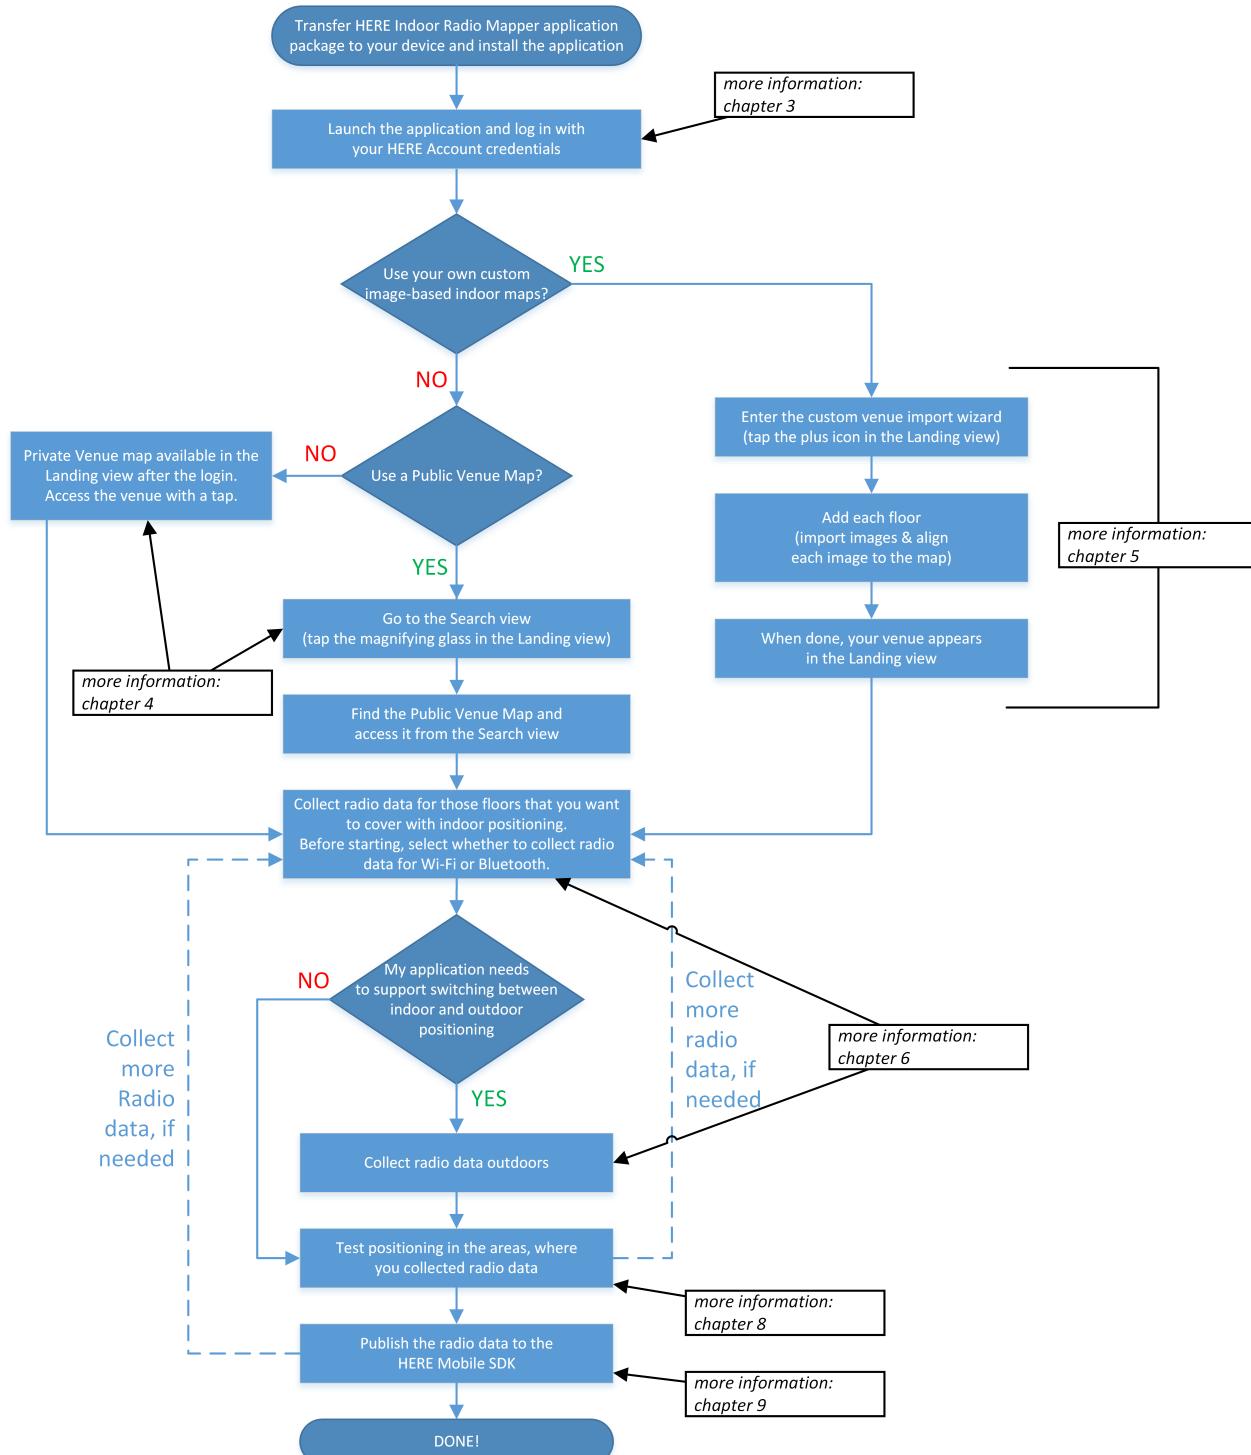

The usage can be summarized in a few simple steps:

Indoor Radio Mapper User Guide

► Quick start



1. Install the application and log in
2. Pick the indoor map to use
 - HERE Private Venue Map will be accessible right from the Landing view
 - HERE Public Venue Map will be accessible through the search
 - Your own custom image-based venue can be imported through the wizard
3. Collect radio data indoors and, if necessary, also outdoors
4. Test positioning throughout the building
5. If there are any problems, go back to the step 3 and repeat radio data collection in problematic areas
6. Publish the positioning data for the HERE Mobile SDK

Chapter 3

Getting Started

Topics:

- [*Transferring and Installin...*](#)
- [*Logging In*](#)

This section contains information for the installation of the HERE Indoor Radio Mapper and logging in.

Transferring and Installing HERE Indoor Radio Mapper

The HERE Indoor Radio Mapper delivery contains the following components:

- HERE Indoor Radio Mapper User Guide (this document)
- `here_indoor_radio_mapper-4.3.apk` application package file
- HERE Indoor Radio Mapper Release Notes

Install the application either by sending the `.apk` file as an e-mail attachment to your device or by copying the `.apk` file to your device.

Note: Make sure your device does not block installations from sources other than the Google Play store. In the settings, you can allow the installation from an unknown source for this single installation.


Installing via E-mail

To install the HERE Indoor Radio Mapper via email:

1. Send the `here_indoor_radio_mapper-4.3.apk` application package file as an attachment to your e-mail address.
2. Open the email in your Android device e-mail application and download the attachment. Follow the instructions in the package installer.

The following set of screenshots shows an exemplary installation flow with the pop-up notifying about an unknown installation source.

Figure 2: Installation flow

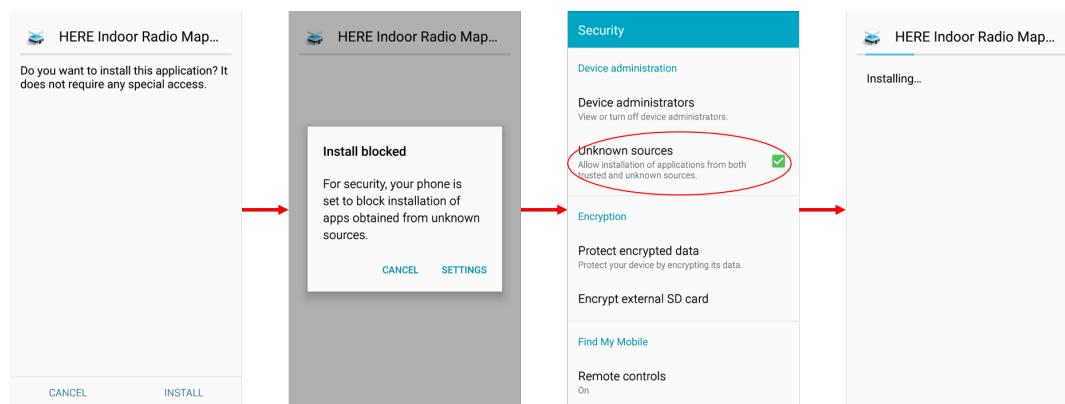

Installing by copying

To install the HERE Indoor Radio Mapper by copying the `.apk` file to the device file system:

1. If your mobile device does not have a file manager application, select one from Google Play and install it.
2. To transfer the files, connect the device with a USB cable to your computer:

Indoor Radio Mapper User Guide

► Getting Started



- Windows requires the correct Android device driver and installs it automatically when a device is connected. After the successful installation, the Android device's internal storage appears in the Windows Explorer.
 - On a Mac, use the File Transfer application to transfer files: <http://www.android.com/filetransfer/>.
 - On Linux, use the Android ADB (Android Debug Bridge) tool, for example, or applications supporting MTP (Media Transfer Protocol) to transfer the file.
3. Copy the `here_indoor_radio_mapper-4.3.apk` file to a folder on the device.
 4. Open the file manager or the installer application, find the `.apk` file and install the application.

Logging In

To log into the HERE Indoor Radio Mapper, you must have HERE Account credentials and HERE Indoor Positioning license. Please see the section *Indoor Positioning Requirements* in the HERE Indoor Positioning Installation Guide.

Before logging into the application, make sure your device is connected to a data network.

To log into the HERE Indoor Radio Mapper:

1. Launch the HERE Indoor Radio Mapper.
2. In the **Login** view, enter your HERE Account credentials.

Your credentials are checked and the **Landing** view appears.

■ **Note:** If your Account does not have a valid Indoor Positioning license, you cannot log in to the tool.

Chapter 4

Navigating in the Indoor Radio Mapper

Topics:

- [*Basic Navigation*](#)
- [*Selecting and Managing Ven...*](#)
- [*Selecting and Managing Act...*](#)

This section provides an overview on navigating in the HERE Indoor Radio Mapper and other basic functions.

Indoor Radio Mapper User Guide


► Navigating in the Indoor Radio Mapper



Basic Navigation

The HERE Indoor Radio Mapper has three levels of views, as indicated by the figure below.

Figure 3: Navigating between views

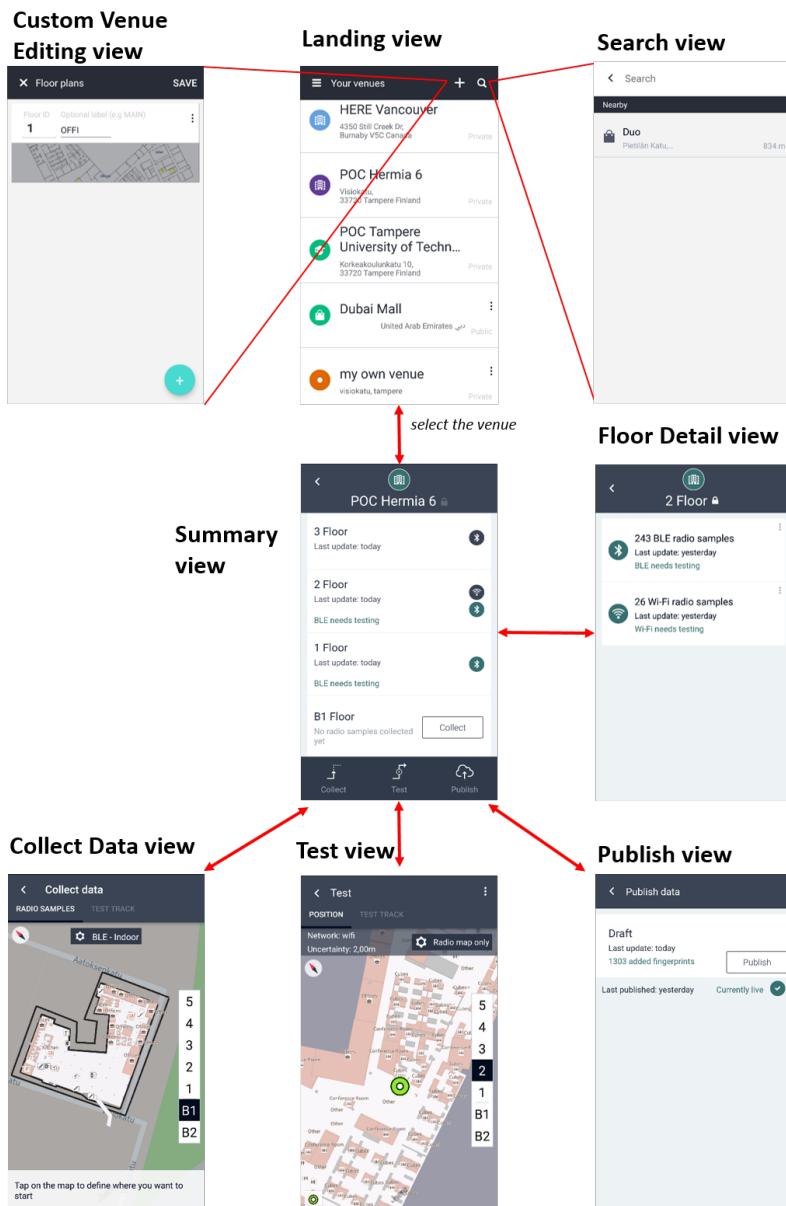

The levels are as follows:

- Top Level – **Landing view**

The **Landing** view allows you to quickly see and access the indoor maps that are relevant to you. The view shows any HERE Private Venue Maps that have been associated with your account and any custom image-based venues that you have imported to the tool. Moreover, the view shows the recently accessed HERE Public Venue Maps. Note that if there are no HERE Private Venue Maps associated with your account, the view is empty when you log in for the first time.

Indoor Radio Mapper User Guide

► Navigating in the Indoor Radio Mapper



- **Note:** The outlook of this view changes depending upon the features enabled in your HERE Indoor Positioning license. In case HERE Private Indoor Positioning feature is not enabled in your license, HERE Private Venue Maps will not be shown in the **Landing** view even if they were associated with your HERE Account. Moreover, in case HERE Public Indoor Positioning feature is not enabled in your license, HERE Public Venue Maps search shall be disabled.

Additionally, the basic operations accessible from the **Landing** view include:

- To select a venue for the radio data collection, performance testing or radio data management, select the desired venue from the **Landing** view. For more information, see [Selecting and Managing Venues](#) on page 18.
- To search for and access the HERE Public Venue Maps, access the **Search** view
- To add your own image-based custom venue to the HERE Indoor Radio Mapper, access the **Custom Venue Editing** view. See [Custom Image-Based Venues](#) on page 22 for further details.
- The three dots on the right side of HERE Public Venue Maps and custom indoor maps allows deleting the indoor map from the **Landing** view and accessing the **Custom Venue Editing** view. HERE Private Venue Maps cannot be removed from the view.
- To log out, open the **menu** in the **Landing** view and select **Log out**
- To manage your settings, open the **menu** in the **Landing** view and select **Settings**. The important items in the **Settings** are:
 - *Product key* - this is reserved for special purposes
 - *Clear recent venues* - clears the HERE Public Venue Maps and custom venues from the **Landing** view
 - *Units* - switch between metric, Imperial UK and Imperial US units
 - *Username* - this is reserved for future purposes. This can be used to identify the device that contributes radio data for the HERE Account.

- Second Level – **Summary** view

The **Summary** view provides the access to

- Collect radio data for each floor
- Manage radio data for each floor
- Test indoor positioning
- Publish positioning data for the HERE Mobile SDK

For more information, see [Selecting and Managing Activities](#) on page 20.

- Third Level – **Collect**, **Test**, **Publish** and **Floor Detail** views

For more information, see [Collecting Radio Data](#) on page 26, [Testing Positioning Performance](#) on page 40, [Publishing Radio Data](#) on page 44 and [Managing Radio Data in Floor Detail view](#) on page 37.

Selecting and Managing Venues

The figure below provides a sample **Landing** view when there are HERE Private Venue Maps associated with your HERE Account (*HERE Vancouver*, *POC Hermia 6*, *POC Tampere University of Technology*). Also, it shows


Indoor Radio Mapper User Guide

► Navigating in the Indoor Radio Mapper



that you have accessed a HERE Public Venue Map (*Dubai Mall*) and imported your own custom venue to the tool (*my own venue*).

Figure 4: Exemplary Landing View

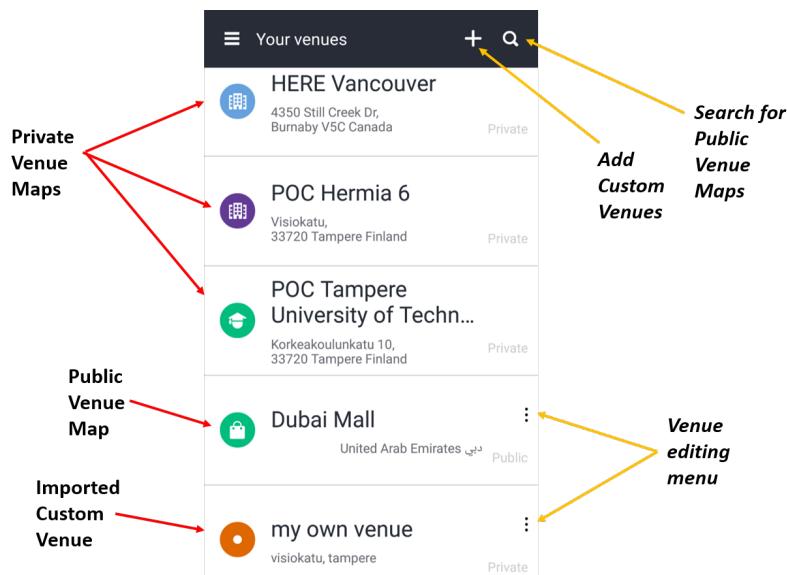

The **Landing** view may contain the following items:

- HERE Private Venue Maps (like the *HERE Vancouver*, *POC Hermia 6* and *POC Tampere University of Technology* in the sample above)

To have a HERE Private Venue Map added to your HERE Account, please contact your HERE representative. When a new HERE Private Venue Map has been added to your account, log out and log in to see the new HERE Private Venue Map in the **Landing** view.

You cannot remove HERE Private Venue Maps from the **Landing** view.

- HERE Public Venue Maps (like the *Dubai Mall* Venue Map in the sample above)

To add a HERE Public Venue Map from the HERE Public Venue Map database to the **Landing** view, tap the **search** icon (magnifying glass) and enter a search term. To add the desired venue to account, tap the venue.

You can remove HERE Public Venue Maps from the **Landing** view through the **Venue editing menu**. Note that this does not delete the radio data collected for the venue.

- Custom image-based venues (like the *my own venue* in the sample above)

To import your own image-based custom venue map, tap the **plus** icon. For more information, see [Importing Custom Indoor Maps](#).

You can remove custom venues from the **Landing** view through the **Venue editing menu**. Note that this does not delete the radio data collected for the venue.

Indoor Radio Mapper User Guide

► Navigating in the Indoor Radio Mapper

here


Selecting and Managing Activities

To collect, test and manage radio data for a venue, select the desired venue in the **Landing** view or select a venue from the **Search** view (HERE Public Venue Maps only). This will take you to the venue **Summary** view that displays the radio data collection and testing status for each floor in a venue.

The screenshot below provides an exemplary **Summary** view and shows the following characteristics:

- No data has been collected for the B1, B2, 4th and 5th floors
- Bluetooth radio data has been collected for the 1st, 2nd and 3rd floors as well as outside the venue (perimeter)
- WiFi radio data has been collected for the 2nd floor
- Test track for Bluetooth-based positioning has been collected
- The 1st and 2nd floor as well as the Perimeter (outdoor) Bluetooth radio data have been changed since the last Publish (indicated by *BLE needs testing*)
- The 2nd floor WiFi radio data and 3rd floor Bluetooth radio data have not been changed since the last Publish (no *needs testing* indication)

Figure 5: Exemplary Summary view when scrolling down the view

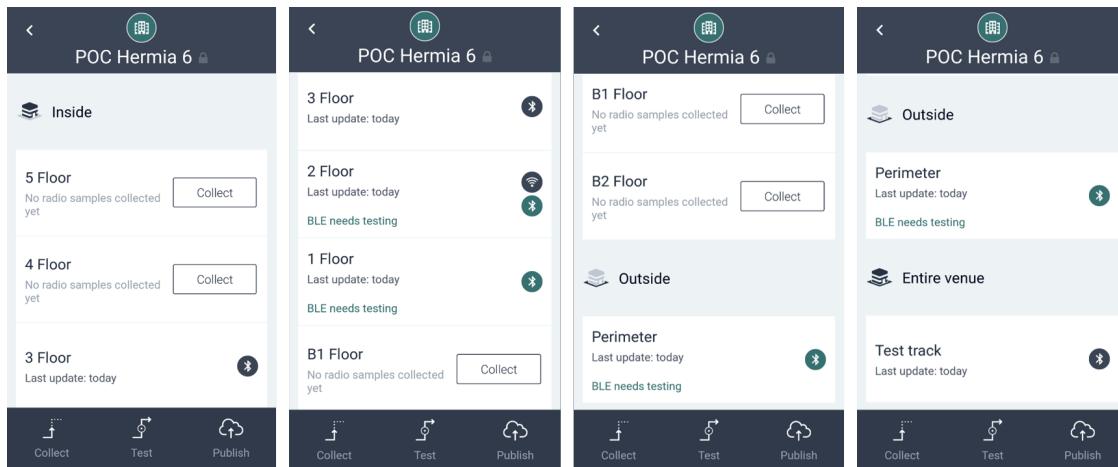

The important features of the **Summary** view include:

- Collect radio data indoors (see [Collecting Radio Data Indoors](#) on page 29) by tapping **Collect** for a **floor** in the **Inside** section or the **Collect** icon in the lower bar
- Collect radio data outdoors (see [Collecting Radio Data Outdoors](#) on page 31) by tapping **Collect** for the **Perimeter** in the **Outside** section or the **Collect** icon in the lower bar
- Collect a test track (see [Collecting Test Tracks](#) on page 35) by tapping **Collect** for the **Test track** in the **Entire venue** section or the **Collect** icon in the lower bar
- Manage the collected radio data on the floor level (see [Floor Radio Data Management](#) on page 38) by tapping the **floor**
- Test the positioning performance (see [Testing for Performance](#) on page 41) after the radio data collection by tapping the **Test** icon in the lower bar

Indoor Radio Mapper User Guide

► Navigating in the Indoor Radio Mapper



- Publish the radio data (see [Publishing Flow](#) on page 45) to be used by the HERE Mobile SDK by tapping the **Publish** icon in the lower bar
- **Note:** Please note that this is a necessary step before the HERE Mobile SDK is able to locate itself indoors

Chapter 5

Custom Image-Based Venues

Topics:

- *Prerequisites for Using Cu...*
- *Importing Custom Indoor Ma...*
- *Manual Calibration*

The following section provides information on using your own custom image-based venues in HERE Indoor Radio Mapper. The tool allows you to import, align and use your own custom image-based indoor maps for the radio data collection and positioning testing.

Prerequisites for Using Custom Image-based Indoor Maps

The prerequisites for using your own custom image-based indoor maps in HERE Indoor Radio Mapper are

- You have one image per floor in one of the supported formats. HERE Indoor Radio Mapper supports at least .bmp, .gif, .jpeg and .png image formats.
 - **Note:** Each image needs to describe the floor without any tilting and stretching.
 - **Note:** If the dimensions of the image are greater than 2048px but smaller than 4096px, HERE Indoor Radio Mapper will downscale the image to 2048px in the largest dimension. Larger images are not accepted.
 - **Note:** The image needs to have the same scale in both directions, i.e. one pixel must correspond to the same number of meters in all the directions
 - **Note:** Radio data collection should be performed in all the floors between the lowest and the highest floors you are interested in. For example, assume your building has six floors, but you are only interested in positioning in floors 3 and 5. In this case, it is advisable to also import the image for the floor 4 and perform radio data collection also in that floor in order to have smooth floor changes, when moving between the floors.
- It is recommended to use an image processing software to make the area outside of the building transparent in the image. This will make it easier to align the image on the HERE Map or satellite images.
- You have copied the custom indoor map images to your device
 - **Note:** Copy your indoor map images directly to an arbitrary folder in the device as described in [Transferring and Installing HERE Indoor Radio Mapper](#) on page 14. Alternatively, you may send the images as an email attachment and save them to a folder in the device.

Importing Custom Indoor Maps

1. Tap the + icon in the **Landing** view to open the dialog to enter the **Venue name** (left-most screenshot below). You may also optionally input the address. We will lookup the address in the HERE database, which will help you in aligning the image on the map.
 - **Note:** Use as descriptive name as possible. The HERE Mobile SDK Positioning API reports this name as the building name. You cannot change the building name afterwards.
2. Having completed the naming, you can start adding the floors. Once you tap + in the lower right corner (see the second screenshot from the left), a dialog prompts you to select an image representing the floor plan from the device folders.
3. After selecting the image, you can scale and rotate the image either on the HERE Map or satellite images (see the second screenshot from the right). When done, tap **SAVE** in the upper right corner. Alternatively,

Indoor Radio Mapper User Guide


Custom Image-Based Venues



you can enter the Latitude and Longitude coordinates of the two points in the image manually (see [Manual Calibration](#) on page 24 for further details).

4. Select the **Floor ID** and give the floor an optional four-letter label (see the right-most screenshot)
5. Repeat the steps 2-4 for each floor you want to add to the venue
6. Having added all the floors, tap **SAVE** in the upper right corner to add the venue to the **Landing** view. Note that you can return later on to add new floors to the venue so not all floors need to be added at the same time.

Figure 6: Importing and aligning a bitmap

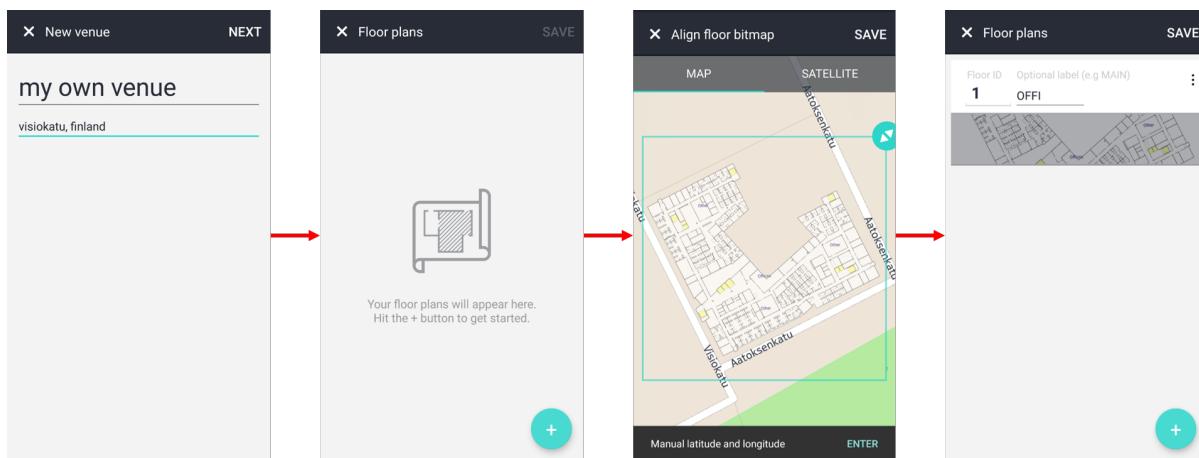

Note that a single floor image location can be recalibrated on the map as long as the changes are not saved in the [Custom Venue Editing](#) view. After saving, it is possible to change the floor image as long as there is no radio data collected for that floor or all the previously collected radio data has been deleted.

Manual Calibration

In case you are unable to align the image using a map or satellite images, it is also possible to align the image manually using two calibration points. To do this, you must know the WGS-84 Latitude and Longitude coordinates of two points for each image in decimal format.

You can resolve coordinates from another map or online satellite image service, such as HERE Maps web or Google Earth. Do not use the device GPS to resolve the building corner point coordinates due to the uncertainties involved in GPS positioning. In case the coordinates are erroneous, the indoor and outdoor positioning will not match. The accuracy of the coordinates should be a few meters.

To align an image-based indoor map to the geographical Latitude-Longitude coordinate system using manual alignment points, do the following:

1. In the floor image alignment view, press **ENTER** next to the text *Manual Latitude and Longitude* (see the 2nd screenshot from the right above). The view shown in the screenshot below appears.
2. Input the Latitude and Longitude coordinates of the **first** point and tap its location on the screen (black marker, see below)


Indoor Radio Mapper User Guide

► Custom Image-Based Venues

here

3. Input the Latitude and Longitude coordinates of the **second** point and tap its location on the screen (cyan marker, see below)
 4. Once both reference point coordinates have been set, tap **SAVE** in the upper left corner
- **Note:** It is convenient, if possible, to choose reference locations that are distinguishable on several floors.

Figure 7: Manual bitmap alignment

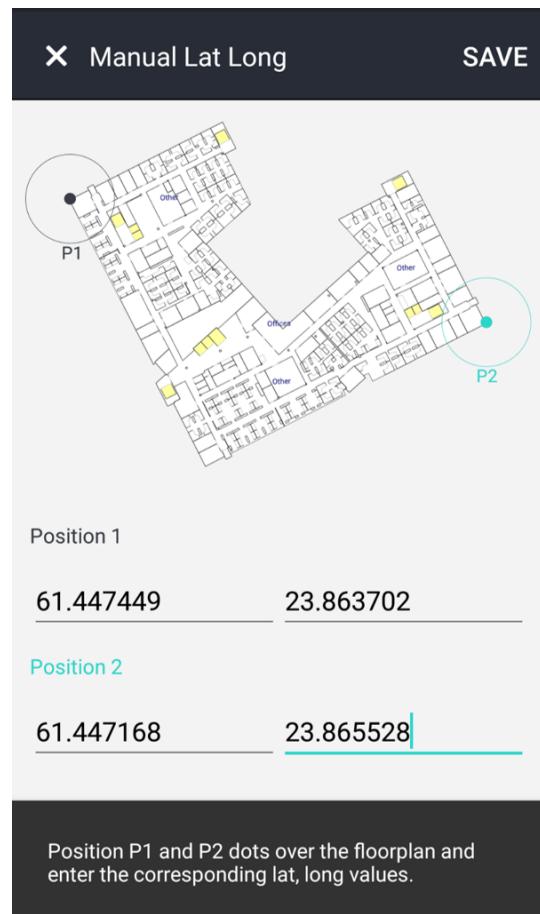

Chapter 6

Collecting Radio Data

Topics:

- [Collect Data View](#)
- [How to Collect Radio Data](#)
- [Collecting Radio Data Indo...](#)
- [Collecting Radio Data in C...](#)
- [Collecting Radio Data Outd...](#)
- [Collecting Radio Data With...](#)
- [Showing the Data Collected...](#)
- [Collecting Test Tracks](#)

The following section provides information on how to collect radio data by using HERE Indoor Radio Mapper.

The radio data collection is a prerequisite for indoor positioning. The collected radio data is processed in the HERE Cloud to create an understanding, a *radiomap*, of the radio environment in the venue. This radiomap is then used in the positioning phase by the HERE Mobile SDK to locate the location-aware application.

Indoor Radio Mapper User Guide

► Collecting Radio Data




Collect Data View

The following section provides instructions on how to collect radio data in the **Collect Data** view and guidelines on how to get optimized results.

To open the **Collect Data** view, tap **Collect** for a **floor** or for **Perimeter**, or tap **Collect** in the lower bar in the **Summary** view. For more information on navigating between views, see *Basic Navigation* on page 17.

The following figure shows an exemplary **Collect Data** view.

Figure 8: An exemplary Collect Data view

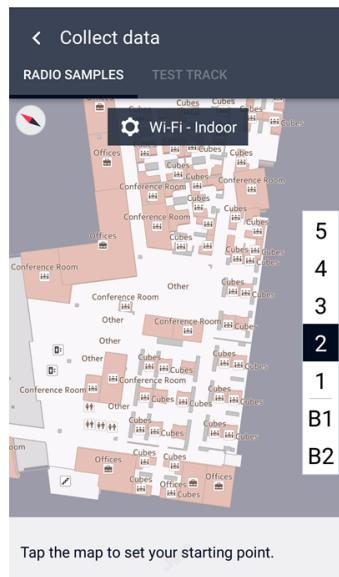

The basic functionality of the **Data Collect** view includes:

- To rotate the indoor map, use two fingers.
 - To zoom in and out, use a two-finger pinch.
 - To pan the indoor map, move one finger across the screen.
 - To switch floors, use the control on the right hand side.
 - To switch between the radio data collection and test track collection, tap **RADIO SAMPLES** or **TEST TRACK** on the top bar.
 - To open the settings menu, tap the **gear** icon. The settings allow to switch the collection mode between **Indoor** and **Outdoor** or the radio type between **Bluetooth** and **WiFi**. Moreover, it is possible to toggle the visibility of the radio data collected by others using the same account through the settings menu. See *Showing the Data Collected by Others* on page 34 for details.
- **Note:** All the radio data need not be collected in one go. You can always collect more radio data, and the previously collected radio data gets amended with the newly collected radio data.

How to Collect Radio Data

The radio data is collected by walking straight lines in a sequence in the venue. This sequence is illustrated in the following set of screenshots:

1. Access the **Collect data** view
2. Tap your current location on the indoor map to set your start point. When ready, tap the **recording** icon and simultaneously start walking in a straight line with constant speed.
3. The lower bar indicates the number of radio samples collected so far and the number of Bluetooth beacons or WiFi APs recorded for the current radio sample
4. When you reach your target, tap the **stop** icon immediately.
5. Tap your current location on the indoor map to set your end point. When ready, tap the **save** icon.
6. Continue collecting the next line of radio samples from the current location by pressing the recording icon.


Alternatively, if you made a mistake, tap the **trash can** icon in the upper right corner to delete the most recently collected line of radio data.

Indoor Radio Mapper User Guide

► Collecting Radio Data



Figure 9: The sequence for collecting a line of radio samples

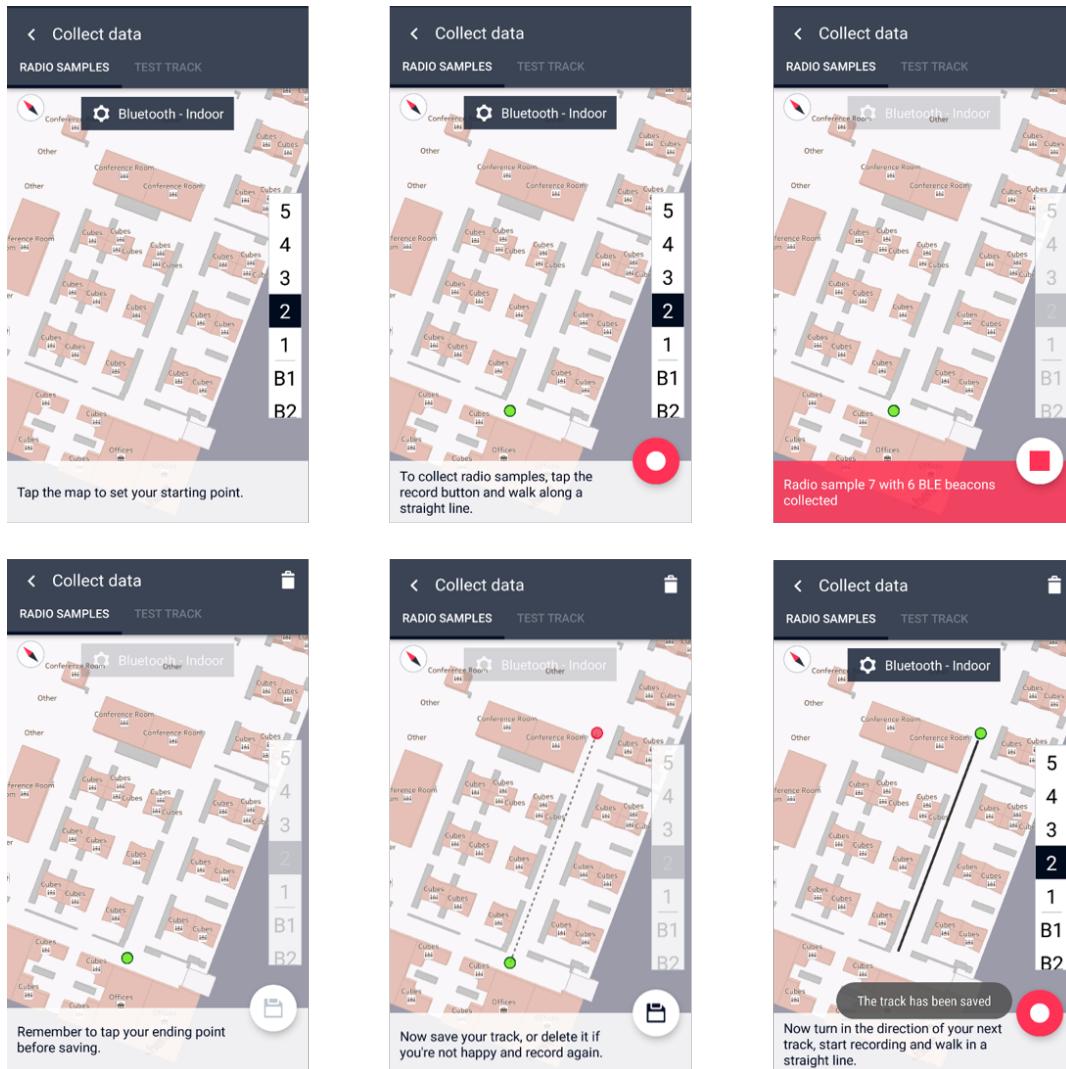

Collecting Radio Data Indoors

During the radio data collection, it is important to select the correct floor. In some buildings, such as office buildings, the floor layouts can resemble each other significantly and, as a consequence, potentially cause confusion and errors. The more thoroughly you perform the radio data collection, the better the resulting positioning performance.

To limit the effort of collecting data densely throughout the building, the following guidelines help to obtain good coverage:

- Main areas, such as main corridors, hallways and main halls have a higher priority; map them first.
- Smaller rooms have lower priority; map them in the second phase.
- In corridors (up to three to five meter width), collect a line of radio data along the both walls. It is advisable to walk first in one direction along one wall and then in the opposite direction along the other wall so that both walking directions get covered (this reduces the impact of body shading).

Indoor Radio Mapper User Guide

here


Collecting Radio Data

- Collect radio data in small rooms along the walkable areas. For example, if the room is a small one, i.e. few meters in width, you need to collect only one line of radio data along the center line of the room. It is advisable to collect radio data twice along this line - first in one direction and then to the opposite direction, when coming back.
- In bigger rooms, collect lines of radio data along the room edges, if the width of the room is moderate (not larger than three to four meters). Again, it is advisable to collect radio data in one direction along the first edge and then to the opposite direction along the other edge.
- If the width of the location (room or hall) is larger than four meters, it is advisable to collect measurements both along the edges and in the open area. For example, if the width of the location is 10 meters, collect data along four lines: along the edges and another two lines three to four meters from both edges.

The following figure shows some of the basic principles of the radio data collection:

- In main corridors the radio data has been collected by walking in opposite directions
- Bigger rooms have been circumvented and, where possible, radio data has also been collected in the middle of the room
- In the passages to the cubicles the radio data has been collected by walking in both directions
- In smaller rooms radio data has been collected along adjacent walls in opposite directions

Figure 10: Exemplary paths for the radio data collection

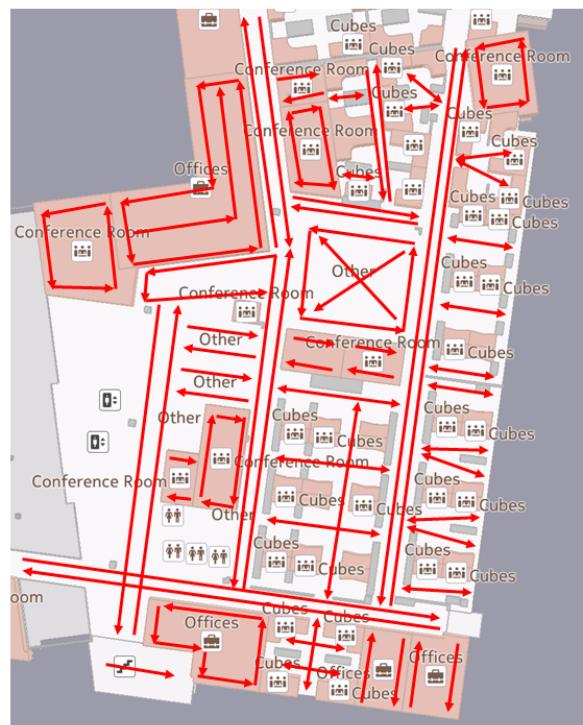


For information on how to collect radio data in connectors such as staircases and elevators, see [Collecting Radio Data in Connectors](#) on page 31.

Collecting Radio Data in Connectors

Connectors are places that connect floors, such as stairs, escalators or elevators. In order to have well-performing floor change behavior, you also need to collect radio samples in the connectors. In case of a staircase or an escalator, you can virtually divide the connector between the two connected floors roughly in the middle. The figure below shows an example:

Figure 11: Radio sample collection in connectors

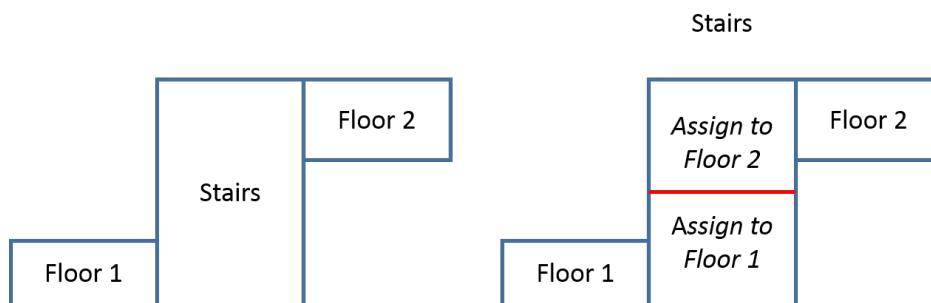

When collecting radio data with HERE Indoor Radio Mapper, assign the radio data collected below the red line to the Floor 1 and the radio data collected above the red line to the Floor 2. In case of an elevator, we suggest to take a few radio samples in a stationary elevator in the floor 1 (assigned to the Floor 1) and another set of radio samples in a stationary elevator in the Floor 2 (assigned to the Floor 2). This can be achieved by keeping the elevator in the 1st floor, starting to record radio samples and then stopping recording after a few radio samples. And then moving to the 2nd floor and repeating the same.

Collecting Radio Data Outdoors

Collecting radio data outdoors is not necessary, if the positioning is to be used indoors only. However, if you wish to have smooth changes between outdoor and indoor positioning methods, it is recommended to perform some radio data collection also along the building perimeter.

Collecting radio data outdoors is similar to collecting radio data indoors with the exception that you do not need to select a floor. You can freely choose a floor, but it does not have any impact on the end result as there is only one outdoor floor.

Make sure to observe the following guidelines for optimized results:

- Collect outdoor radio data along the building perimeter.
- Collect radio samples within a 10-meter radius around the building, each time moving between three to five meters away.
- Change the walking direction after each round.


Indoor Radio Mapper User Guide

here

- Collecting Radio Data

The figure below shows radio data collected while circling the building twice. As the first round is taken just next to the building outer wall, and the second round is roughly five meters further, it is advisable to make a third round around the building, another three to four meters further away from the second round.

Figure 12: Collecting Radio Data Outdoors

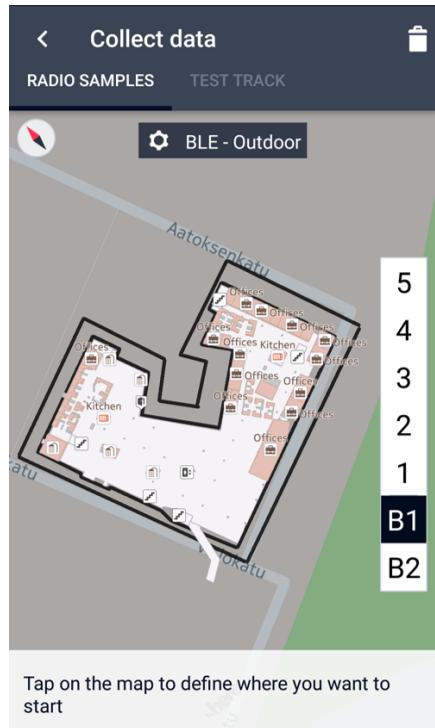

Collecting Radio Data With Bitmaps

Collecting radio data using a bitmap is analogous to using a HERE Venue Map. The only difference is that the bitmap cannot be zoomed in maximally, when the basic map is being shown in the background (see the left hand side screenshot in the figure below). However, tapping the magnifying glass accesses the *Extended*


Indoor Radio Mapper User Guide

► Collecting Radio Data

here

zoom view, which allows for a greater zoom level (right hand side screenshot). Radio data collection can be performed in the both views.


Figure 13: Radio data collection with bitmaps

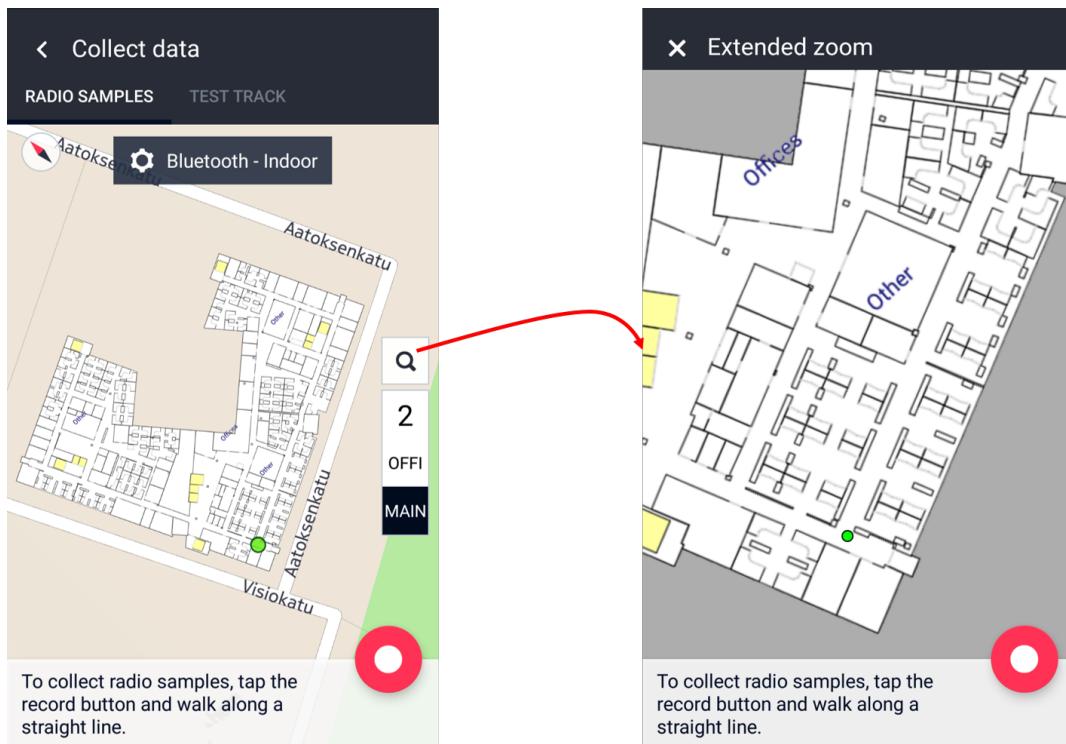

Showing the Data Collected by Others

To see the radio data collected by others, enter the settings menu by tapping the **gear** icon in the upper part of the **Collect Data** view. The following figure shows the settings menu.

Figure 14: Toggling the radio data visibility

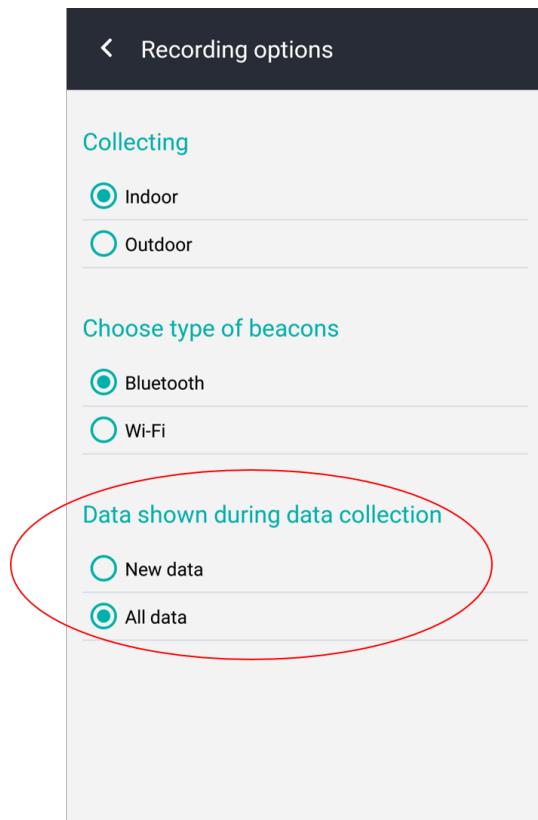

When the toggle *Data shown during data collection* is set to **New data**, only the radio data currently being collected is shown on the indoor map. Upon returning to the venue **Summary** view, the collected radio data is uploaded to the HERE Cloud and is no longer considered **New data**. Thus, when returning to the **Collect data** view, the previously collected radio data can only be seen, when selecting **All data**.

Selecting **All data** shows all the radio data collected by any HERE Indoor Radio Mapper running with the same HERE Account. This is illustrated in the following screenshots. The left hand side shows an exemplary view, when the setting is **New data**. In this case only the radio data collected after entering the **Collect Data** view is shown. The right hand side shows the view, when the setting is **All data**. In this case the radio data


Indoor Radio Mapper User Guide

here

- Collecting Radio Data

collected earlier by the same HERE Indoor Radio Mapper is shown (in dark green) together with the radio data collected by any other HERE Indoor Radio Mapper (in light green) running with the same HERE Account.

Figure 15: Showing all the data

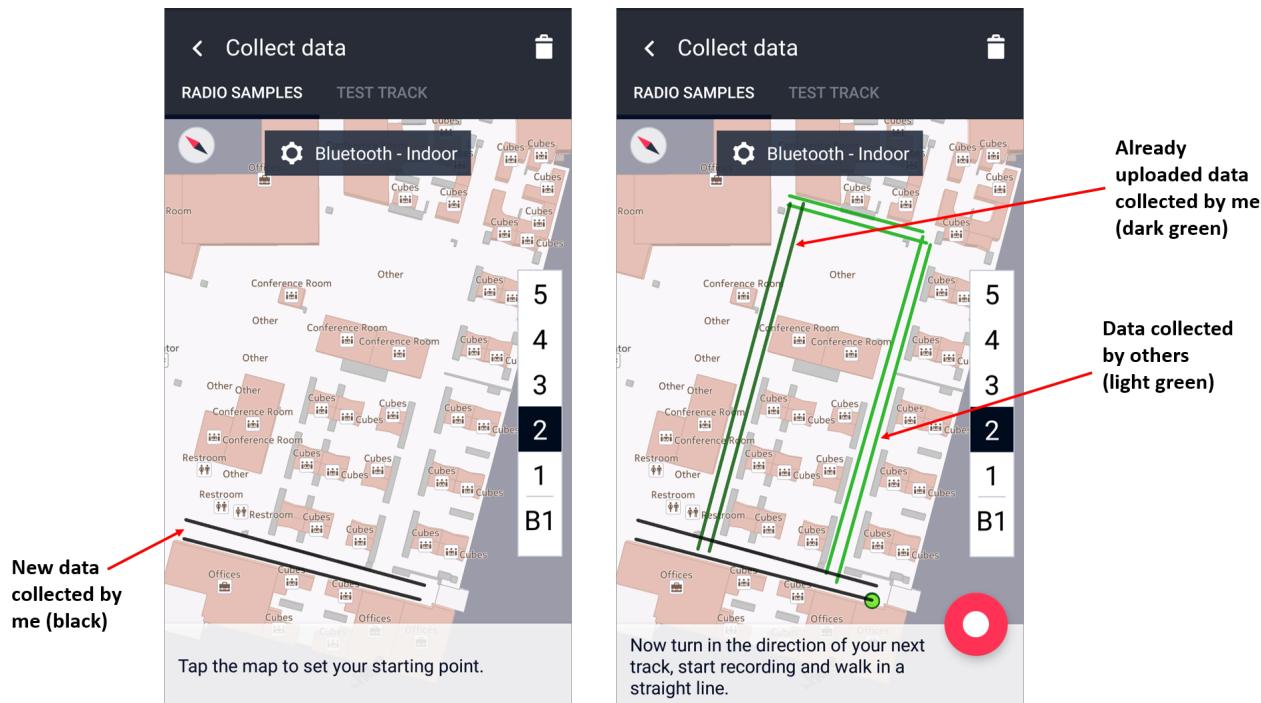

Collecting Test Tracks

Collecting a test track provides you with quantitative feedback on the positioning accuracy and floor detection rate.

To collect a test track, select the **Test Track** from the upper bar in the **Collect Data** view, or tap **Collect** for the **Entire Venue** in the venue **Summary** view.

Collecting a test track is similar to collecting radio data, with the following guidelines:

- Select the technology (Bluetooth or WiFi) from the settings.
- Visit all the floors from which you have collected the radio data.
- Comprehensively visit the areas from which you have collected the radio data.
- Visit also outdoor areas, in case you have collected outdoor radio data.
- As the test track needs to be continuous, you need to continue the track always from the end point of the previous segment.
- When changing from indoors to outdoors, or vice versa, remember to change to indoor/outdoor mode from the settings menu.
- Test track can be finished at any point once you have covered all the applicable areas

You can only collect one test track per building for each technology, i.e. you can have one test track for Bluetooth and the other for Wi-Fi. You can delete a test track by entering the detailed view by tapping the **Test Track** in the **Summary** view.

Indoor Radio Mapper User Guide


► Collecting Radio Data

here

You can collect a test track with less density than radio samples. For example, when collecting a test track in a corridor, instead of collecting a line of radio data along the opposite walls (as you should do when collecting radio samples), you can collect a test track simply along the center line. The same applies to rooms and other areas.

For information on running the test track to obtain quantitative information on the HERE Indoor Positioning performance at your venue, please see [Running a Test Track](#) on page 42.

Figure 16: Exemplary Test track in the Collect Data view

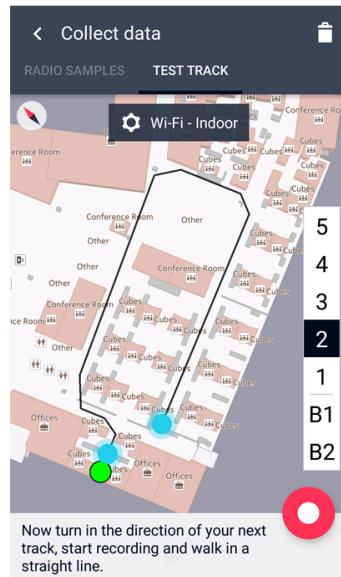

Chapter 7

Managing Radio Data in Floor Detail view

Topics:

- *Floor Radio Data Management...*
- *Storing Collected Radio Da...*

The following section provides information on how to manage the collected radio data in the HERE Indoor Radio Mapper.

Floor Radio Data Management

The radio data management refers to managing the radio data collected for your HERE Account. The radio data management for each floor is accessed from the **Summary** view. When tapping a floor for which radio data has been collected, you will be shown the **Floor Detail** view that includes a list of the collected radio data sets.

The basic concepts of the radio data management are:

- The changes made in this view only affect the draft radiomap, which can be tested in the **Test** view. The changes are reflected to the HERE Mobile SDK only when you publish the radio data. For further information on publishing, please see [Publishing Flow](#) on page 45. Additional information on the radiomaps and data flows in general can be found in the HERE Indoor Positioning Installation Guide.
- Any changes made will be reflected to the HERE Cloud and from there to the other HERE Indoor Radio Mapper instances running on the same HERE Account. Note that the conflict resolution is simply based on the latest change winning.
- When publishing, all the enabled radio data sets end up to be used by the HERE Mobile SDK
- A new radio data set appears in the **Floor Detail** view every time you collect new radio data in the **Collect Data** view and return to the **Summary** view. This is the smallest entity of radio data that can be managed in the HERE Indoor Radio Mapper.

The basic operations that can be done in the management view are:

- See which radio data sets have been published for use by the HERE Mobile SDK, and which are still unpublished
- Disable radio data sets from use (only the draft radiomap is affected)
- Enable radio data sets back into use (only the draft radiomap is affected)
- Delete radio data sets (only un-published ones can be deleted)

The following figure shows exemplary **Floor Detail** views for two floors. The following remarks can be made:

- For the 2nd floor
 - 11 WiFi radio samples are only in the draft radiomap, not usable by the HERE Mobile SDK
 - 43 WiFi radio samples have been disabled from the use totally
 - 378 Bluetooth radio samples are both in the draft radiomap and also published for the HERE Mobile SDK
 - 53 WiFi radio samples have been published for HERE Mobile SDK, but disabled from the draft radiomap
- For the 3rd floor


Indoor Radio Mapper User Guide

► Managing Radio Data in Floor Detail view



- 9 Bluetooth radio samples have been disabled from the use totally. The **delete** menu has been exposed by pressing the three vertical dots. Pressing **delete** will delete this radio data set (9 Bluetooth radio samples).

Figure 17: Examplary Floor Detail views

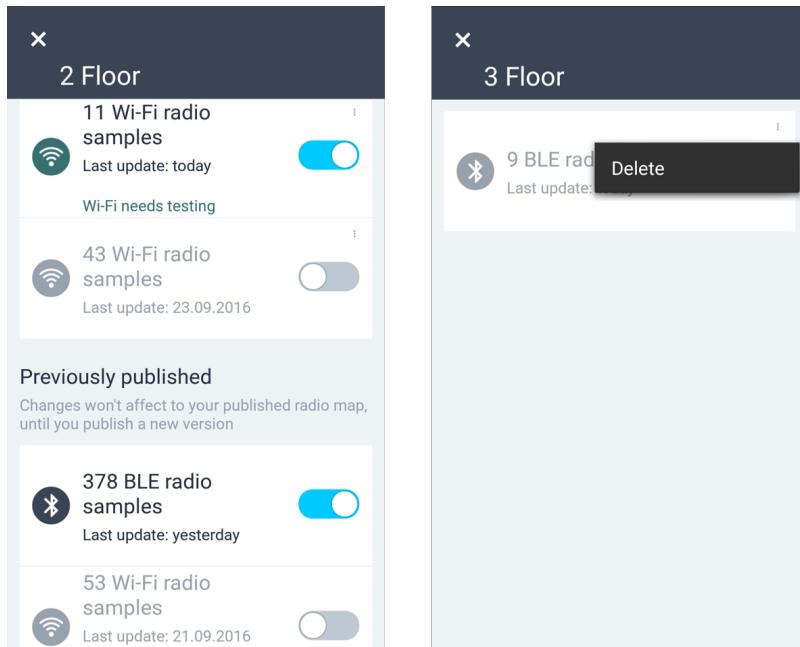

Storing Collected Radio Data

HERE Indoor Radio Mapper stores all the collected radio data in the HERE Cloud given that the device has Internet connectivity. If the radio data cannot be uploaded immediately, the radio data is stored in the internal database. The radio data remains in the database, even if:

- the application is closed,
- the device is switched off, or
- the device runs out of battery.

Chapter 8

Testing Positioning Performance

Topics:

- *Testing for Performance*

The following section provides information on how to conduct performance testing with HERE Indoor Radio Mapper.

Indoor Radio Mapper User Guide

► Testing Positioning Performance



Testing for Performance

The HERE Indoor Radio Mapper provides two methods to assess positioning performance:

- Real-time positioning and assessing the performance qualitatively
- Running a test track and assessing the performance quantitatively


The prerequisite for testing is collecting radio data at the venue. After the radio data upload, it takes some minutes before the generated radiomap is available for testing.

To open the **Test** view with the latest positioning data (radiomap) from the HERE Cloud, tap **Test** in the lower bar of the **Summary** view. For more information on navigating between views, see *Basic Navigation* on page 17.

Testing Positioning Real-Time

The real-time positioning view is accessed from the **Summary** view by tapping the **Test** icon in the lower bar.

Figure 18: Exemplary real-time positioning view

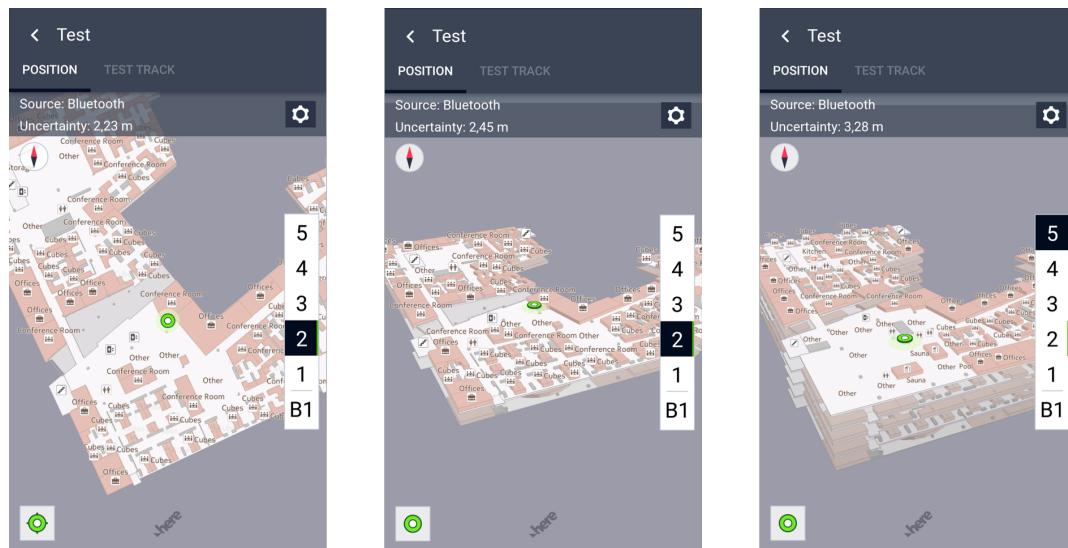

The **Test** view provides the following controls:

- **Gear icon** provides the access to the positioning method selection:
 - Activate **Wi-Fi only** in order to use WiFi-based indoor positioning exclusively
 - Activate **Bluetooth only** in order to use Bluetooth-based indoor positioning exclusively
 - Activate **Wi-Fi and Bluetooth** in order to use both Wi-Fi- and Bluetooth -based indoor positioning methods. In this case the algorithm utilizes the best one of the technologies, one technology at a time.
 - Activate **Wi-Fi, Bluetooth, GPS and network positioning** if you want to use all HERE positioning technologies (HERE Indoor Positioning, HERE WiFi/Cell -based Network Positioning and satellite-

Indoor Radio Mapper User Guide

► Testing Positioning Performance



based methods). In this case HERE Indoor Radio Mapper will select the best positioning method automatically.

- **Centering** icon

The **centering** icon is located in the lower left corner. When you tap the **centering** icon, the screen is centered to the current location and floor. Moreover, the screen is kept centered to the current location and floor as you move. This *tracking mode* is indicated by having the **centering** icon in sight (see the leftmost screenshot).

■ **Note:** The location icon can be seen through the floors. This is illustrated in the rightmost screenshot in the figure above. The floor indicator (righthand side) indicates that the 5th floor Venue Map is being shown. The true location is in the 2nd floor (as indicated in the left-most screenshot and by the green indicator for the 2nd floor in the floor switcher). However, the **centering** icon at the lower left corner indicates that the location is not being tracked. When you again want to get back to the actual current floor, press the **centering** icon.

The **Test** view provides the following information:

- **Source**

Indicates the technology used for the location determination, and is one of *Bluetooth*, *Wi-Fi*, *Cell* or *GNSS*.

- **Uncertainty**

Indicates the estimated location uncertainty in meters.

Running a Test Track

Before running a test track, you need to collect a test track. You can collect a test track at any point during the deployment: either before, during or after the radio data collection. For information on how to collect a test track, see [Collecting Test Tracks](#) on page 35. However, you can only run the test track after the radio data collection.

Tapping **TEST TRACK** in the upper bar opens the view that allows you to playback the test track by tapping the play button in the lower right corner of the **Test** view (see the screenshot below). You will see both the estimated location and the true location moving along the test track. The top bar provides you the following information:

- **Estimation mode** indicates whether you collected the test track for *Bluetooth* or *Wi-Fi*.
- **Deviation** indicates the distance in meters between the test track position (true location) and the current estimated position.

After the playback, HERE Indoor Radio Mapper provides the following information:

- **Mean, median and 95% error** - average and median error over the whole track in meters, and additionally the 95% error indicating that the error is less than the value 95% of the time.
- **Floor detection** - rate of detecting the correct floor in percentage; 100% means perfect floor detection
- **Minimum, median and maximum available Wi-Fi access points** (or *Bluetooth beacons*) - Statistics regarding the number of Wi-Fi access points or Bluetooth beacons over the test track.


Indoor Radio Mapper User Guide

- Testing Positioning Performance

here

Moreover, control buttons will be available after the playback for moving back and forth within the track to examine, in more detail, the performance in the different sections of the test track.

Figure 19: Exemplary Test Track view

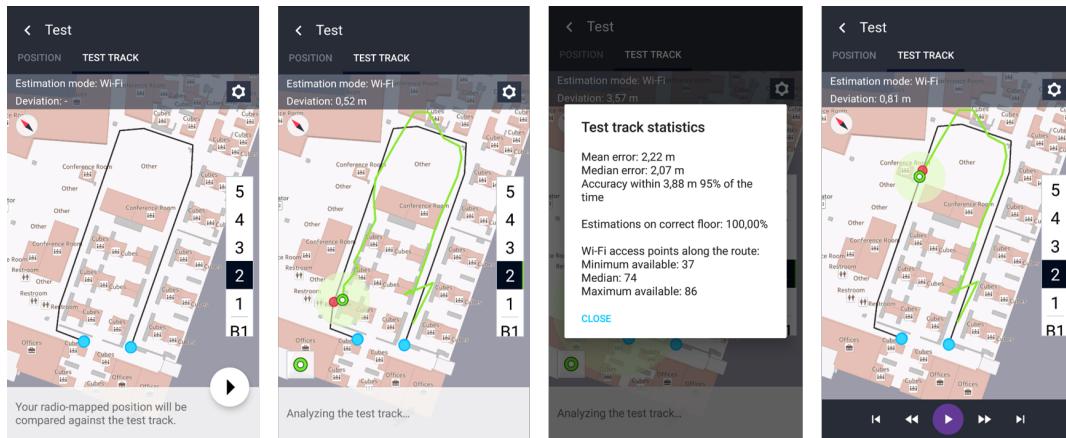

You can switch between Bluetooth and Wi-Fi test tracks by tapping the **gear** icon in the upper right corner.

Chapter 9

Publishing Radio Data

Topics:

- *Publishing Flow*

The following section provides details on publishing the radio data for use by the HERE Mobile SDK. The radio data needs to be published before it can be used by the HERE Mobile SDK.


Publishing Flow

Whenever radio data is being collected or a radio data set state is changed between enabled and disabled in the **Floor Detail** view (see *Floor Radio Data Management* on page 38), the operations affect only the draft radiomap. The basic idea is that radio data can be modified and tested freely in HERE Indoor Radio Mapper and the changes are not reflected to the production before the radio data is published. Note that when you test positioning with HERE Indoor Radio Mapper, you are always testing the positioning performance using the draft radiomap. Thus, before HERE Mobile SDK sees the same radio data as you test in HERE Indoor Radio Mapper, you need to publish the radio data.

Publishing means synchronizing the draft radiomap to the production. Any radio data sets, published or unpublished, that are *enabled* in the per-floor **Floor Detail** view are published, when the publish is commenced in the **Publish** view. Vice versa, any *disabled* radio data sets, published or unpublished, are removed from the production upon publish. Please refer to HERE Indoor Positioning Installation Guide for detailed explanation on the draft and published (production) radiomaps.

The following figure shows the publishing sequence. When entering the **Publish** view you will see the latest publishing time as well as the latest draft radiomap update time. Moreover, you will be shown the difference between the draft and the currently published radiomap (number of added and removed radio samples).

Figure 20: Publishing flow

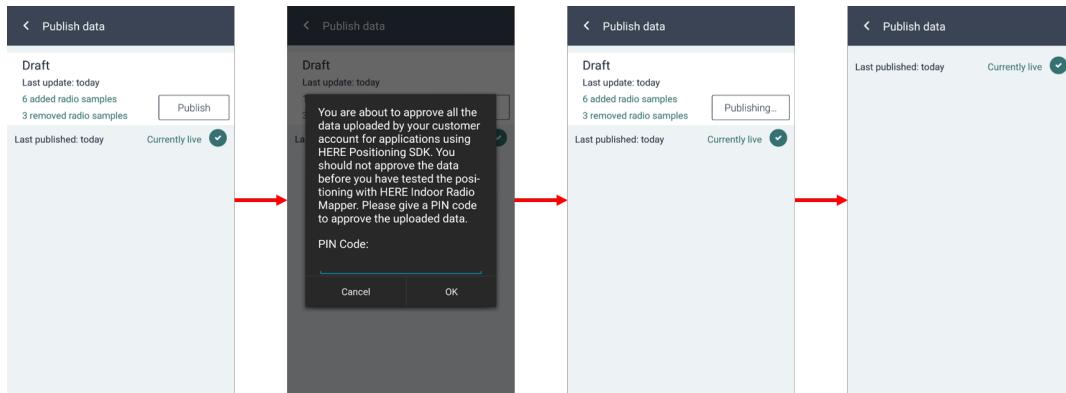

If you decide to publish the current draft radiomap, you will need to enter the PIN code. The PIN is queried in order to make sure that only authorized persons can publish the radio data. Once the PIN code has been input, the **Publish** button changes to indicate *Publishing*. Once the publishing process is complete, the only indication left will be the latest publishing time. Note that the Bluetooth and WiFi radio data are published at the same time.

- Note:** PIN code can be found from the Highlights section in the HERE Indoor Radio Mapper Release Notes.

Chapter 10

FAQ

Topics:

- *Why do I have to walk in s...*
- *Why do I need to align my ...*
- *Are there any device setti...*

The following section lists frequently asked questions and provides useful answers.

Why do I have to walk in straight lines at constant speed?

HERE Indoor Radio Mapper interpolates the collected radio samples between the start and end points you indicate on the floor plan. As the HERE Indoor Radio Mapper does not know about your walking speed or any turns that you make, the tool assumes that you walked in a straight line from the start to the end at constant speed. This assumption allows the HERE Indoor Radio Mapper to divide the radio samples evenly along that line.

Why do I need to align my own custom indoor maps to Latitude and Longitude coordinates?

Alignment serves two purposes:

1. To understand the dimensions of the building, in meters. This is important for HERE Indoor Positioning to function correctly.
2. When we switch from indoor positioning to outdoor positioning, having both indoor and outdoor maps in the same coordinate system is the only way to ensure smooth transition.

Are there any device settings that I should be aware of?

The latest Android devices have an advanced option that allows measuring the WiFi and Bluetooth radio signals even when the radios are turned off. HERE Indoor Radio Mapper benefits from enabling this option.

In Samsung devices these settings can be found through **Settings -> Location -> Improve accuracy**. The menu has the setting separately for WiFi and Bluetooth. HERE Indoor Radio Mapper queries these settings to be enabled, if not already enabled.

When this setting is enabled for WiFi, HERE Indoor Radio Mapper switches the WiFi connectivity off, when collecting WiFi radio data in order to ensure the best measurement quality. Similarly, when this setting is enabled for Bluetooth, HERE Indoor Radio Mapper switches the Bluetooth connectivity off, when collecting Bluetooth radio data in order to ensure the best measurement quality.