

# Protocolo de comunicação Rastreador New Tracker NT20





www.x3tech.com.br



## CONTENT

I.	COMMUNICATION PROTOCOL	3
Intro	oduction	3
II.	TERMS, DEFINITIONS	3
III.	BASIC RULES	3
Data	Flow Diagram	5
IV.	DATA PACKET FORMAT	6
4.1.	Start Bit	6
4.2.	Packet Length	6
4.3.	Protocol Number	6
4.4.	Information Contents	6
4.5.	Information Serial Number	6
4.6.	Error Check	6
4.7.	Stop Bit	7
V.	DETAILS ABOUT DATA PACKET SENT BY SERVER TO TERMINAL	8
5.1.	Login Message Packet	8
5.2.	Location Data Packet (combined information package of GPS and LBS)	10
5.3.	Alarm Packet (GPS, LBS, combined status information packet)	14
5.4.	Heartbeat Packet (status information packet)	18
5.5.	New frame Protocol implementation	21
5.6.	The terminal sends the ICCID number to the server (0x94)	25
5.7.	The terminal sends the IMSI number to the server (0x90)	26
VI.	DATA PACKET SENT FROM SERVER TO TERMINAL	27
6.1.	Packet Sent by Server	27
6.2.	Packet Replied by Terminal	28
vii.	Appendix A - Code fragment of the CRC-ITU:	35
ix.	Appendix C: Complete Format of the Information Package	39



#### i. Communication Protocol

#### Introduction

This document defines instructions about interface protocol on application layer of vehicles GPS tracker and location-based service platform. Related interface protocol only applies in the interaction between the platform and the position terminal.

## ii. Terms, Definitions

Terms, Abbreviation	Definition in English
CMPP	China Mobile Peer to Peer
GPS	Global Positioning System
GSM	Global System for Mobile Communication
GPRS	General Packet Radio Service
TCP	Transport Control Protocol
LBS	Location Based Services
IMEI	International Mobile Equipment Identity
MCC	Mobile Country Code
MNC	Mobile Network Code
LAC	Location Area Code
Cell ID	Cell Tower ID
UDP	User Datagram Protocol
SOS	Save Our Ship/Save Our Souls
CRC	Cyclic Redundancy Check
NITZ	Network Identity and Time Zone,
GIS	Geographic Information System

## iii. Basic Rules

- 1. If a GPRS connection is established successfully, the terminal will send a first login message packet to the server and, within five seconds, if the terminal receives a data packet responded by the server, the connection is considered to be a normal connection. The terminal will begin to send location information (i.e., GPS, LBS information package). A status information package will be sent by the terminal after three minutes to regularly confirm the connection.
- 2. If the GPRS connection is established unsuccessfully, the terminal will not be able to send the login message packet. The terminal will start schedule reboot in twenty minutes if the GPRS connection is failed three times. Within twenty minutes, if the terminal successfully connects to the server and receives the data packet from the server as the server's response to the login message packet sent by the terminal, the schedule reboot will be off and the terminal will not be rebooted; otherwise, the terminal will be rebooted automatically in twenty minutes.
- 3. After receiving the login message packet, the server will return a response data packet. If the terminal doesn't receive packet from the server within five seconds after sending the login message packet or the status information package, the current connection is regarded as an abnormal connection. The terminal will start a retransmission function for GPS tracking data, which will cause the terminal to




disconnect the current GPRS connection, rebuild a new GPRS connection and send a login message packet again.

- 4. If the connection is regarded to be abnormal, and the data packet as a response from the server is failed to be received three times after a connection is established and a login message packet or status information package is sent, the terminal will start schedule reboot and the scheduled time is ten minutes. Within ten minutes, if the terminal successfully connects to the server and receives the data packet responded by the server, the schedule reboot will be off and the terminal will not be rebooted; otherwise, the terminal will be rebooted automatically in ten minutes.
- 5. In case of the normal connection, the terminal will send a combined information package of GPS and LBS to the server after the GPS information is changed; and the server may set a default protocol for transmission by using commands.
- To ensure the effectiveness of the connection, the terminal will send status information to the server at regular intervals, and the server will return response data packets to confirm the connection.
- 7. For the terminal which doesn't register an IMEI number, the server will reply the terminal with a login request response and heartbeat packet response, rather than directly disconnect the connection. (If the connection is directly disconnected or the server doesn't reply to the terminal, it will lead to a continuous reconnected by the terminal and the GPRS traffic will be consumed heavily.



## **Data Flow Diagram**

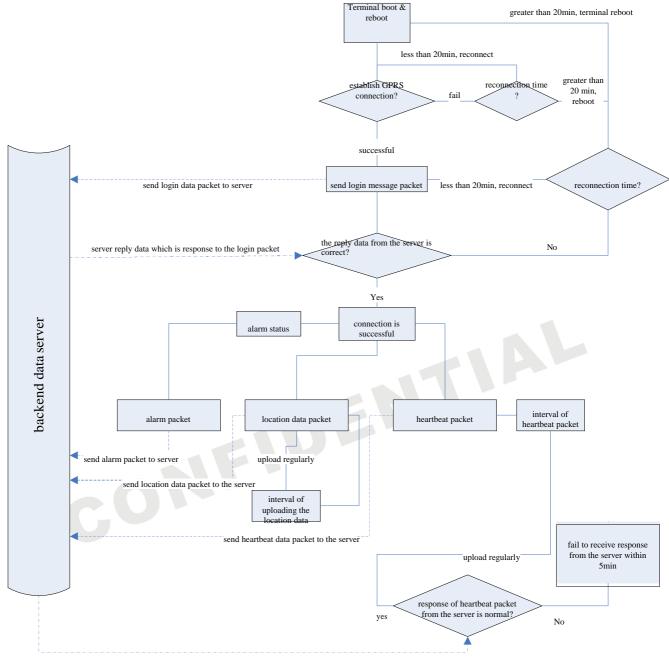

server reply data which is response to the heartbeat packet



## iv. Data Packet Format

The communication is transferred asynchronously in bytes.

The total length of packets is (10+N) Bytes.

Format	Length(Byte)
Start Bit	2
Packet Length	1
Protocol Number	1
Information Content	N
Information Serial Number	2
Error Check	2
Stop Bit	2

#### 4.1. Start Bit

Fixed value in HEX 0x78 0x78.

## 4.2. Packet Length

Length = Protocol Number + Information Content + Information Serial Number + Error Check, totally (5+N)Bytes, because the Information Content is a variable length field.

#### 4.3. Protocol Number

Туре	Value	
Login Message	0x01	
Location Data	0x12	
Status information	0x13	
String information	0x15	
Alarm data	0x16	
Location Data X3Tech (*)	0x22	
GPS, query address information by	0x1A	
phone number	UXIA	
Command information sent by the	0x80	
server to the terminal	0x80	

<sup>(\*)</sup> New frame see 5.5.1

## 4.4. Information Contents

The specific contents are determined by the protocol numbers corresponding to different applications.

## 4.5. Information Serial Number

The serial number of the first GPRS data (including status packet and data packet such as GPS, LBS) sent after booting is '1', and the serial number of data sent later at each time will be automatically added '1'.

## 4.6. Error Check

A check code may be used by the terminal or the server to distinguish whether the received information is error or not. To prevent errors occur during data transmission, error check is added to against data misoperation, so as to increase the security and efficiency of the system. The check code is generated by the CRC-ITU checking method.

The check codes of data in the structure of the protocol, from the Packet Length to the



Information Serial Number (including "Packet Length" and "Information Serial Number"), are values of CRC-ITU.

CRC error occur when the received information is calculated, the receiver will ignore and discard the data packet.

## **4.7. Stop Bit**

Fixed value in HEX 0x0D 0x0A.



## v. Details about Data Packet sent by Server to Terminal

The commonly used information packages sent by the terminal and those sent by the server will be interpreted separately.

## 5.1. Login Message Packet

## 5.1.1. Terminal Sending Data Packet to Server

The login message packet is used to be sent to the server with the terminal ID so as to confirm the established connection is normal or not.

	Description	Bits	Example		
	Start Bit	2	<u>0x78 0x78</u>		
	Packet	1	0x0D		
	Length	1	<u> </u>		
	Protocol	1	0x01		
Login Message	Number	•	UAU1		
Packet(18	Terminal ID	8	<u>0x01 0x23 0x45 0x67 0x89 0x01 0x23 0x45</u>		
Byte)	Information				
	Serial	2	$0x00\ 0x01$		
	Number				
	Error Check	2	0x8C 0xDD		
	Stop Bit	2	<u>0x0D 0x0</u>		

#### 5.1.1.1. Start Bit

For details see Data Packet Format section 4.1.

## 5.1.1.2. Packet Length

For details see Data Packet Format section 4.2.

#### 5.1.1.3. Protocol Number

For details see Data Packet Format section 4.3.

## **5.1.1.4.** Terminal ID

The terminal ID applies IMEI number of 15 bits.

Example: if the IMEI is 123456789012345,

the terminal ID is 0x01 0x23 0x45 0x67 0x89 0x01 0x23 0x45.

#### 5.1.1.5. Information Serial Number

For details see Data Packet Format section 4.5.

## 5.1.1.6. Error Check

For details see Data Packet Format section 4.6.

## 5.1.1.7. Stop Bit

For details see Data Packet Format section 4.7.



## 5.1.2. Server Responds the Data Packet

	Description	Bits	Example
Login	Start Bit	2	<u>0x78 0x78</u>
Message	Packet Length	1	<u>0x05</u>
Packet (18	Protocol	1	<u>0x01</u>
Byte)	Number		
	Information		
	Serial	2	<u>0x00 0x01</u>
Number			
	Error Check		<u>0xD9 0xDC</u>
	Stop Bit	2	<u>0x0D 0x0A</u>

The response packet from the server to the terminal: the protocol number in the response packet is identical to the protocol number in the data packet sent by the terminal.

## 5.1.2.1. Start Bit

For details see Data Packet Format section 4.1.

# 5.1.2.2. Packet Length

For details see Data Packet Format section 4.2.

#### 5.1.2.3. Protocol Number

For details see Data Packet Format section 4.3.

#### 5.1.2.4. Information Serial Number

For details see Data Packet Format section 4.5.

## 5.1.2.5. Error Check

For details see Data Packet Format section 4.6.

## 5.1.2.6. Stop Bit

For details see Data Packet Format section 4.7.

#### 5.1.3. Examples

Examples of the login message packet sent by the terminal to the server and the response packet sent by the server to the terminal are as follows: (in the examples the terminal ID is 123456789012345.

<b>Example of data packet sent by the terminal</b> 78 780 0D 01 01 23 45 67 89 01 23 45 00 01 8C DD 0D 0A									
Explain									
079 079	00D	001	0x01 0x23 0x45 0x67 0x89	<u>0x01 0x23 0x45 0x67 0x89 0x01 0x23 0x45</u>		<u>0x8C</u>	<u>0x0D 0x0A</u>		
<u>0x78 0x78</u>	<u>0x0D</u>	<u>0x01</u>	<u>0x01</u>		0x00 0x01	<u>0xDD</u>			
Chart Dit	Length	Protocol	Terminal ID		Serial No.	Error	Cham Dit		
Start Bit		No.			Serial No.	Check	Stop Bit		
Example of	response p	acket retur	ned by the server						
78 78 05 01 0	00 01 D9 D	OC 0D 0A							
Explain	Explain								
<u>0x78 0x78</u>	<u>0x05</u>	<u>0x01</u>	<u>0x00 0x01</u>	<u>0xD9 0xDC</u>	<u>0x0I</u>	O 0x0A			
Start Bit	Length	Protocol	Serial No.	Error Check	Ç+,	Start Bit			
Start Dit	Lengui	No.	Serial No. EITO	Error Check	Si	ut Dit			



# 5.2. Location Data Packet (combined information package of GPS and LBS)

## 5.2.1. Terminal Sending Location Data Packet to Server

	Forma t		Length(Byte	Example
	Start Bit		2	0x78 0x78
	Packe	t Length	1	0x1F
	Protoco	l Number	1	0x12
		Date Time	6	0x0B 0x08 0x1D 0x11 0x2E 0x10
	GPS Information	Quantity of GPS information satellites	1	0xCF
		Latitude	4	0x02 0x7A 0xC7 0xEB
Information		Longitude	4	0x0C 0x46 0x58 0x49
Content		Speed	1	0x00
		Course, Status	2	0x14 0x8F
		MCC	2	0x01 0xCC
	LBS	MNC	1	0x00
	Information	LAC	2	0x28 0x7D
		Cell ID	3	0x00 0x1F 0xB8
	Serial	Number	2	0x00 0x03
	Error	Check	2	0x80 0x81
	Stop Bit		2	0x0D 0x0A

## **5.2.1.1.** Start Bit

For details see Data Packet Format section 4.1.

## 5.2.1.2. Packet Length

For details see Data Packet Format section 4.2.

## 5.2.1.3. Protocol Number

For details see Data Packet Format section 4.3.

## **5.2.1.4. Date Time**

Format	Length(Byte)	Example
Year	1	0x0A
Month	1	0x03
Day	1	0x17
Hour	1	0x0F
Minute	1	0x32
Second	1	0x17

Example: 2010-03-23 15:30:23

Calculated as follows:

10(Decimal)=0A(Hexadecimal)

3 (Decimal)=03(Hexadecimal)



23(Decimal)=17(Hexadecimal) 15(Decimal)=0F(Hexadecimal) 50(Decimal)=32(Hexadecimal) 23(Decimal)=17(Hexadecimal)

Then the value is: 0x0A 0x03 0x17 0x0F 0x32 0x17

## 5.2.1.5. Length of GPS information, quantity of positioning satellites

The field is 1 Byte displayed by two hex digits, wherein the first one is for the length of GPS information and the second one for the number of the satellites join in positioning.

Example: if the value is 0xCB, it means the length of GPS information is 12 and the number of the positioning satellites is 11.

(C = 12Bit Lenght, B = 11 satellites)

#### **5.2.1.6.** Latitude

Four bytes are consumed, defining the latitude value of location data. The range of the value is 0-162000000, indicating a range of  $0^{\circ}$ - $90^{\circ}$ . The conversion method thereof is as follow:

converting the value of latitude and longitude output by GPS module into a decimal based on minute; multiplying the converted decimal by 30000; and converting the multiplied result into hexadecimal.

Example: 22°32.7658'=(22X60+32.7658)X3000=40582974, then converted into a hexadecimal number

```
40582974(Decimal)= 26B3F3E(Hexadecimal) at last the value is 0x02 0x6B 0x3F 0x3E.
```

#### **5.2.1.7.** Longitude

Four bytes are consumed, defining the longitude value of location data. The range of the value is 0-324000000, indicating a range of  $0^{\circ}$ -180°.

The conversion method herein is same to the method mentioned in Latitude (see section 5.2.1.6).

#### 5.2.1.8. Speed

One byte is consumed, defining the running Speed of GPS. The value ranges from 0x00 to 0xFF indicating a range from 0 to 225km/h.

e.g. 0x00 represents 0 km/h. 0x10 represents 16km/h. 0xFF represents 255 km/h.




#### 5.2.1.9. Course Status

Two bytes are consumed, defining the running direction of GPS. The value ranges from  $0^{\circ}$  to  $360^{\circ}$  measured clockwise from north of  $0^{\circ}$ .

	Bit7	0
	Bit6	0
	Bit5	GPS real-time/differential positioning
BYTE_1	Bit4	GPS having been positioning or not
DITE_I	Bit3	East Longitude, West Longitude
	Bit2	South Latitude, North Latitude
	Bit1	
	Bit0	
	Bit7	
	Bit6	
	Bit5	Course
BYTE_2	Bit4	Course
DITE_2	Bit3	
	Bit2	
	Bit1	
	Bit0	

Note: The status information in the data packet is the status corresponding to the time bit recorded in the data packet.

For example: the value is 0x15 0x4C, the corresponding binary is 00010101 01001100,

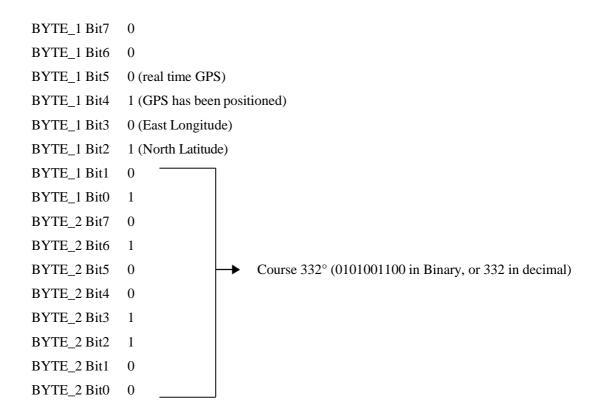

which means GPS tracking is on, real time GPS, location at north latitude, east longitude and the course is 332°.



The country code to which a mobile user belongs, i.e., Mobile Country Code(MCC).

Example: Chinese MCC is 460 in decimal, or 0x01 0xCC in Hex (that is, a decimal value of 460 converting into a hexadecimal value, and 0 is added at the left side because the converted hexadecimal value is less than four digits).

Herein the range is  $0x0000 \sim 0x03E7$ .

#### 5.2.1.11. MNC

Mobile Network Code(MNC) Example: Chinese MNC is 0x00.

#### 5.2.1.12. LAC

Location Area Code (LAC) included in LAI consists of two bytes and is encoded in hexadecimal. The available range is 0x0001-0xFFFE, and the code group 0x0000 and 0xFFFF cannot be used. (see GSM specification 03.03, 04.08 and 11.11).

#### 5.2.1.13. Cell ID

Cell Tower ID (Cell ID), which value ranges from 0x000000 to 0xFFFFFF.

#### 5.2.1.14. Information Serial Number

For details see Data Packet Format section 4.5.

#### **5.2.1.15.** Error Check

For details see Data Packet Format section 4.6.

## 5.2.1.16. Stop Bit

For details see Data Packet Format section 4.7.

## 5.2.2. Examples of Packet Sent from Terminal to Server

Example of sending by the terminal								
78 78 1F 12 0	78 78 1F 12 0B 08 1D 11 2E 10 CC 02 7A C7 EB 0C 46 58 49 00 14 8F 01 CC 00 28 7D 00 1F B8 00 03 80 81 0D 0A							
Explain								
<u>0x78 0x78</u>	<u>0x1F</u>	<u>0x12</u>	<u>0x0B 0x</u>	08 0x1D 0x11 0x	2E 0x10	<u>0xCC</u>	<u>0x02 0x7A</u>	0xC7 0xEB
	Packet	Protocol				Quantity of GF	PS .	
Start Bit				Date Time		information	Latit	ude
	Length	No.			sat			
0x0C 0x46 0x	x58 0x49	<u>0x00</u>	<u>0x14 0x8F</u>	<u>0x01 0xCC</u>	<u>0x00</u>	<u>0x28 0x7D</u>	<u>0x00 0x1F 0xB8</u>	<u>0x00 0x03</u>
Longitu	do	Speed	Course	MCC	MNC	LAC	Cell ID	Serial No.
Longitu	ide	Speed	Status	WICC	MINC	LAC	Cell ID	Serial No.
<u>0x80 0x81</u>	0x0D 0x0	)A						
Error Check	Stop Bit	t						



## 5.3. Alarm Packet (GPS, LBS, combined status information packet)

## 5.3.1. Server Sending Alarm Data Packet to Server

	Length (Byte)		
		2	
		Packet Length	1
		Protocol Number	1
		Date Time	6
		Quantity of GPS information satellites	1
	GPS	Latitude	4
	Information	Longitude	4
	mormation	Speed	1
		Course, Status	2
Y.C	LBS Information	LBS Length	1
Information  Content		MCC	2
Content		MNC	1
		LAC	2
		Cell ID	3
		Terminal Information Content	1
	status	Voltage Level	1
	Information	GSM Signal Strength	1
		Alarm/Language	2
		2	
		Error Check	2
		2	

Alarm packet is consisted by adding status information to location packet, so does the encoding format of the protocol.

#### 5.3.1.1. Start Bit

For details see Data Packet Format section 4.1.

## 5.3.1.2. Packet Length

For details see Data Packet Format section 4.2.

## 5.3.1.3. Protocol Number

For details see Data Packet Format section 4.3.

## **5.3.1.4.** Date Time

For details see Location Data Packet Format section 5.2.1.4.

## 5.3.1.5. Length of GPS information, quantity of positioning satellites

For details see Location Data Packet Format section 5.2.1.5.

#### **5.3.1.6.** Latitude

For details see Location Data Packet Format section 5.2.1.6.

## **5.3.1.7.** Longitude

For details see Location Data Packet Format section 5.2.1.7.

## **5.3.1.8.** Speed

For details see Location Data Packet Format section 5.2.1.8.

## **5.3.1.9.** Status and Course

For details see Location Data Packet Format section 5.2.1.9.



## 5.3.1.10. MCC

For details see Location Data Packet Format section 5.2.1.10.

#### 5.3.1.11. MNC

For details see Location Data Packet Format section 5.2.1.11.

#### 5.3.1.12. LAC

For details see Location Data Packet Format section 5.2.1.12.

#### 5.3.1.13. Cell ID

For details see Location Data Packet Format section 5.2.1.13.

#### **5.3.1.14.** Terminal Information

One byte is consumed, defining various status information of the mobile phone.

Bit		Code Meaning	
	21.5	1: oil and electricity disconnected	
	Bit7	0: gas oil and electricity connected	
	Bit6	1: GPS tracking is on	
	DIIO	0: GPS tracking is off	
		100: SOS	
	Bit3	011: Low Battery Alarm	
		010: Power Cut Alarm	
BYTE	Bit5	001: Shock Alarm	
		000: Normal	
	Bit2	1: Charge On	
		0: Charge Off	
	Bit1	1: ACC high	
	DILI	0: ACC Low	
	Bit0	1: Activated	
	BIIU	0: Deactivated	

Example: 0x44, corresponding binary value is 01000100,

indicates that the status of the terminal is: oil and electricity connected, GPS tracking is on, normal without any alarm, charge on, ACC is low, and deactivated.

## **5.3.1.15.** Voltage Level

The arrange is 0~6 defining the voltage is from low to high.

- 0: No Power (shutdown)
- 1: Extremely Low Battery (not enough for calling or sending text messages, etc.)
- 2: Very Low Battery (Low Battery Alarm)
- 3: Low Battery (can be used normally)
- 4: Medium
- 5: High
- 6: Very High

Example: 0x02 indicates very low battery and a Low Battery Alarm is sending.

## **5.3.1.16.** GSM Signal Strength Levels

0 – 100: percentage of GSM Signal



## 5.3.1.17. Alarm/Language

0x00 (former bit) 0x01 (latter bit)

former bit: terminal alarm status (suitable for alarm packet and electronic fence project) latter bit: the current language used in the terminal

	0x00: normal
	0x01: SOS
former bit	0x02: Power Cut Alarm
TOTHICI DIL	0x03: Shock Alarm
	0x04: Fence In Alarm
	0x05: Fence Out Alarm
latter bit	0x01: Chinese
latter oft	0x02: English

Examples:

No Alarm and Language is Chinese:

0x00 0x01 No Alarm and Language is English: 0x00 0x02

To increase the reliability of alarm information, labeling the alarm information repeatedly; in most cases, the alarm information keeps consistent with information of former terminal, while the inconsistencies are as follows:

- A. Low Battery Alarm occurred in the information of the terminal
- B. Fence in and out Alarm in the Alarm/Language information

#### 5.3.1.18. Information Serial Number

For details see Data Packet Format section 4.5.

#### **5.3.1.19. Error Check**

For details see Data Packet Format section 4.6.

## 5.3.1.20. Stop Bit

For details see Data Packet Format section 4.7.



# 5.3.2. Examples

<u>0x78 0x78</u>	<u>0x25</u>	<u>0x16</u>	0x0B 0x0B 0	x0F 0x0E 0x24	<u> x01D</u>	<u>0xCl</u>	3	<u>0x02 0x</u>	x7A 0xC8 0x87
Start Bit	Length	Protocol No.	Ι	Date Time		Quantity of information satellity	tion	:	Latitude
0x0C 0x46 0x5	7 0xE6	<u>0x00</u>	0x14 0x02	<u>0x09</u>	0x01	0xCC	<u>0x00</u>	0x28 0x7D	<u>0x00 0x1F 0x72</u>
Longitud	e	Speed	Course Status	LBS Length	M	CC	MNC	LAC	Cell ID
<u>0x65</u>	0	<u>x06</u>	<u>0x04</u>	<u>0x01 0</u>	<u>x01</u>	0x00 0x36	<u>0x56</u>	5 0xA4	<u>0x0D 0x0A</u>
Terminal Information Content	Volta	ge Level	GSM Signal Strength	Alarm/Lai	nguage	Serial No.	Error	Check	Stop Bit

Note: The status information in the data packet is the status corresponding to the time bit recorded in the data packet.



## **5.4.** Heartbeat Packet (status information packet)

Heartbeat packet is a data packet to maintain the connection between the terminal and the server.

## **5.4.1.** Terminal Sending Heartbeat Packet to Server

	Length (Byte)		
		2	
	Pa	cket Length	1
	Prot	tocol Number	1
		Terminal Information	1
To Comment on	Status Information	Content	1
Information  Content		Voltage Level	1
Content		GSM Signal Strength	1
		Alarm/Language	2
	Se	2	
	E	2	
		2	

## 5.4.1.1. Start Bit

For details see Data Packet Format section 4.1.

## 5.4.1.2. Packet Length

For details see Data Packet Format section 4.2.

#### 5.4.1.3. Protocol Number

For details see Data Packet Format section 4.3.

## **5.4.1.4.** Terminal Information

One byte is consumed defining for various status information of the mobile phone.

Bit		Code Meaning
	Bit7	1: oil and electricity disconnected
	DII/	0: gas oil and electricity
	Bit6	1: GPS tracking is on
	Био	0: GPS tracking is off
		100: SOS
	Bit3~ Bit5	011: Low Battery Alarm
		010: Power Cut Alarm
BYTE		001: Shock Alarm
		000: Normal
	Bit2	1: Charge On
		0: Charge Off
		1: ACC high
		0: ACC Low
	Bit0	1: Activated
	DIW	0: Deactivated



Example: 0x44, corresponding binary value is 01000100,

indicates that the status of the terminal is: oil and electricity connected, GPS tracking is on,

normal without any alarm, charge on, ACC is low, and deactivated.

## **5.4.1.5.** Voltage Level

The arrange is 0~6 defining the voltage is from

low to high. 0: No Power (shutdown)

1: Extremely Low Battery (not enough for calling or sending text

messages, etc.) 2: Very Low Battery (Low Battery Alarm)

3: Low Battery (can be

used normally) 4: Medium

5: High

6: Very High

Example: 0x02 indicates very low battery and a Low Battery Alarm is sending.

## **5.4.1.6.** GSM Signal Strength Levels

0 – 100: percentage of GSM Signal

## 5.4.1.7. Alarm/Language

0x00 (former bit) 0x01 (latter bit)

former bit: terminal alarm status (suitable for alarm packet and electronic fence project) latter bit: the current language of the terminal

	0x00: normal
	0x01: SOS
former bit	0x02: Power Cut Alarm
Tornier on	0x03: Shock Alarm
	0x04: Fence In Alarm
	0x05: Fence Out Alarm
latter bit	0x01: Chinese
latter oft	0x02: English

## Examples:

No Alarm and Language is Chinese:

0x00 0x01 No Alarm and Language

is English: 0x00 0x02

## 5.4.1.8. Information Serial Number

For details see Data Packet Format section 4.5.

#### 5.4.1.9. Error Check

For details see Data Packet Format section 4.6.

## **5.4.1.10. Stop Bit**

For details see Data Packet Format section 4.7.



## **5.4.2.** Server Responds the Data Packet

	Description	Bits	Example
	Start Bit	2	<u>0x78 0x78</u>
Login	Packet Length	1	<u>0x05</u>
Message	Protocol Number	1	<u>0x01</u>
Packet (18	Information Serial Number	2	<u>0x00 0x01</u>
Byte)	Error Check	2	0xD9 0xDC
	Stop Bit	2	0x0D 0x0A

The response packet from the server to the terminal: the protocol number in the response packet is identical to the protocol number in the data packet sent by the terminal.

## **5.4.2.1.** Start Bit

For details see Data Packet Format section 4.1.

## 5.4.2.2. Packet Length

For details see Data Packet Format section 4.2.

## 5.4.2.3. Protocol Number

For details see Data Packet Format section 4.3.

#### 5.4.2.4. Information Serial Number

For details see Data Packet Format section 4.5.

#### 5.4.2.5. Error Check

For details see Data Packet Format section 4.6.

## 5.4.2.6. Stop Bit

For details see Data Packet Format section 4.7.

## 5.4.3. Examples

Example of da	Example of data packet sent by the terminal						
78 78 08 13 4E	78 78 08 13 4B 04 03 00 01 00 11 06 1F 0D 0A						
Explain							
<u>0x78 0x78</u>	<u>0x08</u>	<u>0x13</u>	<u>0x4B 0x04 0x03</u>	<u>0x00 0x01</u>	<u>0x00 0x11</u>	<u>0x06 0x1F</u>	<u>0x0D 0x0A</u>
Start Bit	Length	Protocol	Information Content	Reserved bit	Serial No.	Error Check	Stop Bit
Start Dit	Length	No.	information Content	(Language)	Seriai No.	Elloi Clieck	Stop Bit
Example of res	sponse packe	et returned by	the server				
78 78 05 13 00	11 F9 70 0I	O 0A					
Explain							
<u>0x78 0x78</u>	<u>0x05</u>	<u>5</u>	<u>0x13</u>	<u>0x00 0x11</u>	<u>0xF9 0x70</u>	<u>0x0D</u>	<u>0x0A</u>
Start Bit	Leng	th	Protocol No.	Serial No.	Error Check	Stop	Bit



## 5.5. New frame Protocol implementation

This is a new frame implemented in NT20. It contains information such as, Terminal ID number, GPS date-time and Message date-time, odometer (mileage), horimeter (future), voltage value for power supply and internal battery.

To maintain the desired configuration, send the command as needed.:

SETLOCX12# - Sends old version location of frame 0x12

SETLOCX22# - Sends location with new frame 0x22

#### 5.5.1. New Location Data Frame 0x22

		Format	Length (Byte)	
		Start Bit	2	5.5.1.1
	P	acket Length	1	5.5.1.2
	Pro	otocol Number	1	5.5.1.3
	Locat	tion Source Type	1	5.5.1.4
	-	Γerminal ID	8	5.5.1.5
	Inte	rnal Date Time	6	5.5.1.6
		Data Time GPS	6	5.5.1.7
	GPS	Quantity of GPS information satellites	1	5.5.1.8
		Latitude	4	5.5.1.9
	Information	Longitude	4	5.5.1.10
		Speed	1	5.5.1.11
		Course, Status	2	5.5.1.12
Information		LBS Length	1	5.5.1.13
Content		MCC	2	5.5.1.14
Content	LBS	MNC	1	5.5.1.15
	Information	LAC	2	5.5.1.16
		Cell ID	3	5.5.1.17
		Terminal Information Content	1	5.5.1.18
	Status	Power Voltage	2	5.5.1.19
	Information	Battery Voltage	1	5.5.1.20
		GSM Signal Strength	1	5.5.1.21
		Alarm/Language	2	5.5.1.22
		Milleage	3	5.5.1.23
	То	otalHoursSum	3	5.5.1.24
	S	erial Number	2	5.5.1.25
	]	Error Check	2	5.5.1.26
		Stop Bit	2	5.5.1.27

#### 5.5.1.1. Start Bit

For details see Data Packet Format section 4.1.

## 5.5.1.2. Packet Length

For details see Data Packet Format section 4.2.



#### 5.5.1.3. Protocol Number

For details see Data Packet Format section 4.3.

## 5.5.1.4. Location Source Type

Defined according to the conditions:

- (0x01) Tracking is the packet generated by the TIMER parameter, with configurable communication interval respecting the state of the ignition, or in movement (virtual ignition).
- (0x02) Static is the packet generated by the STATIC parameter, with configurable communication interval with the ignition off and stopped.
- (0x03) ALARM is sent every time an input, ignition on/off, main power connected or disconnected, or output is changed state, or alarm event (similar to that generated by Command 0x16)

#### **5.5.1.5.** Terminal ID

For details see Data Packet Format section 5.1.1.4.

#### 5.5.1.6. Internal Date Time

Date, hour, minute and seconds of the internal clock, the moment that the position was generated, even if the GPS is not fixed.

More details see Location Data Packet Format section 5.2.1.4.

#### **5.5.1.7. Data Time GPS**

Date, time, minute and seconds from GPS, if GPS is not fixed, send the last valid position (\*). More details see Location Data Packet Format section 5.2.1.4.

#### 5.5.1.8. Length of GPS information, quantity of positioning satellites

For details see Location Data Packet Format section 5.2.1.5.

#### 5.5.1.9. Latitude

For details see Location Data Packet Format section 5.2.1.6.

#### **5.5.1.10.** Longitude

For details see Location Data Packet Format section 5.2.1.7.

## 5.5.1.11. Speed

For details see Location Data Packet Format section Location type

#### 5.5.1.12. Status and Course

For details see Location Data Packet Format section 5.2.1.9.

## 5.5.1.13. LBS Length

Please need to define (there is no reference in original doc).

#### 5.5.1.14. MNC

For details see Location Data Packet Format section 5.2.1.11.

## 5.5.1.15. MNC

For details see Location Data Packet Format section 5.2.1.11.

#### 5.5.1.16. LAC

For details see Location Data Packet Format section 5.2.1.12.

#### 5.5.1.17. Cell ID



For details see Location Data Packet Format section 5.2.1.13.

#### 5.5.1.18. Terminal Information

For details see Location Data Packet Format section 5.3.1.14.

Bit		Code Meaning		
	D:+7	1: oil and electricity disconnected		
	Bit7	0: gas oil and electricity connected		
	Bit6	1: GPS tracking is on		
	ыю	0: GPS tracking is off		
	Bit5	100: Panic SOS / Door State		
		011: Low Battery Alarm		
	Bit4&Bit3	010: Power Cut Alarm		
BYTE		001: Shock Alarm		
		000: Normal		
	Bit2	1: Charge On		
		0: Charge Off		
	Bit1	1: ACC high		
	DILI	0: ACC Low		
	Di+O	1: Activated		
	Bit0	0: Deactivated		

## **5.5.1.19.** Power Voltage

Main supply voltage, value with two houses multiplied by 100

Exemple

Voltage	11,85Vdc	35,40Vdc
Response Hexadecimal	4A1 Hex	DD4 Hex
Decimal	1185 Dec	3540 Dec

# 5.5.1.20. Battery Voltage

Battery voltage, value with one house multiplied by 10 Exemple:

Voltage	4,1Vdc	3,5Vdc
Response Hexadecimal	191 Hex	162 Hex
Decimal	41 Dec	354 Dec

## 5.5.1.21. GSM Signal Strength

For details see Location Data Packet Format section 5.3.1.16.

## 5.5.1.22. Alarm/Language

For details see Location Data Packet Format section 5.3.1.17.

## 5.5.1.23. Milleage

Sum of kilometers (Milleage), with ignition ACC=ON. With movement but with ACC=OFF is not added.

## 5.5.1.24. TotalHoursSum

Sum of time ACC=ON in hours, with ignition ACC=ON. When the vehicle is moving but with ACC=OFF the time is not added.

## 5.5.1.25. Information Serial Number



For details see Data Packet Format section 4.5.

## **5.5.1.26.** Error Check

For details see Data Packet Format section 4.6.

## **5.5.1.27. Stop Bit**

For details see Data Packet Format section 4.7.



## 5.6. The terminal sends the ICCID number to the server (0x94)

Form	at	Length( Byte)	Example			
Start I	Bit	2	Fixed value: 0x79 0x79			
Packet L	Packet Length		Length = protocol number + information content + error check			
Protocol N	lumber	1	0x94			
Information	Type of information (sub-protocol)	1 N	00 : External voltage 01~03 : (customized) 04: Terminal status synchronization 05: Door status 08: Self-test parameters 09: Positioning satellite information 0A: ICCID informationto be added According to the type of information, the content			
	content	IN .	is also different, 0A see the table below			
Information ser	rial number	2	After booting, each time the data is sent is automatically +1			
Error ch	neck	2	The CRC-ITU value of "packet length" to "information sequence number".			
Stop b	oit	2	Fixed value, unified as: 0x0D 0x0A			

When the type is 0A, this bit transmits ICCID information and is transmitted as a hexadecimal number.

V 11	then the type is or, this oit transmits leeds information and is transmitted as a nexadecimal number.						
	IMEI	8	Example: If the IMEI number is 123456789123456, the terminal ID is: 0x01				
	IIVIEI	0	0x23 0x45 0x67 0x89 0x12 0x34 0x56				
	IMCI	0	Example: If the IMSI number is 123456789123456, the terminal ID is: 0x01				
	IMSI	8	0x23 0x45 0x67 0x89 0x12 0x34 0x56				
	ICCID	10	Example: The ICCID number is 12345123456789123456 and the terminal ID				
	ICCID	10	is: 0x12 0x34 0x51 0x23 0x45 0x97 0x89 0x12 0x34 0x56				

Example:79790020940A03580910880015580460041990205313898607B91117301203130009A0720D0A

<u> 7979</u>	0020	94	<u>0A</u>	<u>0358091088001558</u>	<u>04600</u>	<u>419902053</u>	<u> 313</u>
Start bit	Length	Protocol No	Type	IMEI	IMSI		
8	98607B	911173012	20313	0009	A072	0D0A	
	ICCIE	)		Information sequence	Error check	Stop bit	



## **5.7.** The terminal sends the IMSI number to the server (0x90)

Fo	rmat	Length(Byte)	Remark
Sta	rt Bit	2	)x78 0x78
Packe	t Length	1	Length=protocol number + information content + error check
Protoco	l Number	1	)x90
	String("IMSI:")	5	rixed string(IMSI:)
Information	IMSI number	15	SIM card IMSI number
Content	Reserved Bits	2	Reserved bits, two, currently fixed at: 0x01 0x01
	Fixed character	1	Fixed character:0x9F
Error Check		2	he CRC-ITU value of the " Packet ength " to the " Fixed character ".
Sto	p Bit	2	0x0D 0x0A

**Example**: The device sends IMSI to the server:

7878 1A 90 494D53493A 3436303034303033303930333630 3001 01 9F 6BF9 0D0A

Platform reply: This information, the platform does not need to reply.

Note: Each time the device is powered on or restarted, the device IMSI information is reported once after the first heartbeat packet.



## vi. Data Packet Sent From Server to Terminal

## 6.1. Packet Sent by Server

	Format				
	Start Bit				
Pa	Packet length				
Pro	Protocol Number				
	Length of Command				
Information	Server Flag Bit	4			
Content	Command Content	M			
Informat	ion Serial Number	2			
Е	Error Check				
	Stop Bit	2			

#### **6.1.1.** Start Bit

For details see Data Packet Format section 4.1.

## 6.1.2. Packet Length

For details see Data Packet Format section 4.2.

#### 6.1.3. Protocol Number

The Protocol Number of terminal transmission is 0x80.

## 6.1.4. Length of Command

Length of Command = Server Flag Bit + Length of Command Content + Information Serial Number Example: measured in bytes, 0x0A means the content of command occupied ten bytes.

## 6.1.5. Server Flag Bit

It is reserved to the identification of the server. The binary data received by the terminal is returned without change.

## **6.1.6.** Command Content

It is represented in ASC II of string, and the command content is compatible with text message command.

## 6.1.7. Information Serial Number

For details see Data Packet Format section 4.5.

#### 6.1.8. Error Check

For details see Data Packet Format section 4.6.

## **6.1.9. Stop Bit**

For details see Data Packet Format section 4.7.



## 6.2. Packet Replied by Terminal

	Format				
	Start Bit				
Pa	1				
Pro	1				
	Length of Command				
Information	Server Flag Bit	4			
Content	Command Content	M			
Informat	ion Serial Number	2			
Е	rror Check	2			
	Stop Bit	2			

#### **6.2.1.** Start Bit

For details see Data Packet Format section 4.1.

## 6.2.2. Packet Length

For details see Data Packet Format section 4.2.

#### 6.2.3. Protocol Number

The terminal responds to the command sent by the server. The format of data packet is consistent with "the command sent by the server to the terminal", but the Protocol Number herein is different and is 0x15.

## 6.2.4. Length of Command

Length of Command = Server Flag Bit + Length of Command Content + Information Serial Number Example: measured in bytes, 0x0A means the content of command occupied ten bytes.

#### 6.2.5. Server Flag Bit

It is reserved to the identification of the server. The binary data received by the terminal is returned without change.

#### 6.2.6. Command Content

It is represented in ASC II of string, and the command content is compatible with text message command.

#### 6.2.7. Information Serial Number

For details see Data Packet Format section 4.5.

## 6.2.8. Error Check

For details see Data Packet Format section 4.6.

#### **6.2.9.** Stop Bit

For details see Data Packet Format section 4.7.



#### 6.3. Looking Up Location Information

**Function Description:** Obtain the command of tracking information. A mobile phone user or a short message server may obtain the tracking information by this command.

In an example, the transmitting and returning strings are converted into ASCII to generate command contents.

#### Sending by the server

DWXX#

#### Returned by the terminal

if successful, return

DWXX=Lat:<North/South Latitude>,Lon:<East/West Longitude>,Course:<angle>,Speed:<speed>,DateTime:<time>

if failed, return

DWXX=Command Error!

if tracking unsuccessful, return

DWXX=Lat:,Lon:, Course:,Speed:,DateTime:-:

Example:

 $DWXX = Lat: N23d5.1708m, Lon: E114d23.6212m, Course: 120, Speed: 53.02; Date Time: 08-09-12\\ 14: 52: 36.02; Date Time: 08-09-12\\ Date Time: 08-09-12$ 

Explain: which means: N23d5.1708m, E114d23.6212m, Course: 120, Speed: 53.02km/h, Date Time: 08-09-12 14:52:36.

#### 6.4. Cutting Oil and Electricity

Function Description: cutting off the vehicle oil-electric control circuit

In an example, the transmitting and returning strings are converted into ASCII to generate command contents.

## Sending by the server

DYD,000000#

#### Returned by the terminal

if successful, return DYD=Success!

if failed, return

DYD=Unvalued Fix DYD=Speed Limit, Speed 40km/h

Explain: the oil and electricity are not allowed to be disconnect when the GPS tracking is off or the running speed is higher than 20KM/H.

Server send:

787815 80110000000B4459442C3030303030303023000B 3FFA 0D0A

Terminal answer:

## 6.5. Connecting Oil and Electricity

Function Description: connecting the vehicle oil-electric control circuit

In an example, the transmitting and returning strings are converted into ASCII to generate command contents.

## Sending by the server

HFYD.000000#

## **Returned by the terminal**

if successful, return HFYD=Success! if failed, return HFYD=Fail!

#### Server send:



Terminal answer:

## 6.6. Address Querying Information Sent by the Server

In an example, the transmitting and returning strings are converted into ASCII to generate command contents. In an example, the transmitting and returning strings are converted into ASCII to generate command contents. ADDRESS, Address Content, Phone Number

Note: The address content in Chinese is sent in UNICODE.

## 6.7. Other examples

6.7.1. **BEND** 

Sending by the server

BEND,1,40#

#### Returned by the terminal

If sucessful: BEND=Success!

Server send:

787814 80100000000F42454E442C312C343023000FA 2E60 D0A

Terminal answer:

78781A15180000000F42454E443D537563636573732101003B0031F6A2

#### **6.7.2.** WHERE

#### Sending by the server

WHERE#

#### Returned by the terminal

Lat:S23.463425,Lon:W46.878248,Course:0.00,Speed:0.00,DateTime:2019-07-16 01:10:26

Server send:


787810 800C0000000A574845524523000A3 26F0 D0A

#### Terminal answer:

78786615000000000A4C61743A5332332E3436333432352C4C6F6E3A5734362E3837383234382C436F 757273653A302E30302C53706565643A302E30302C4461746554696D653A323031392D30372D313620 30313A31303A3236000000000000000000001D377078781A15180000000F42454E443D537563636 573732101003B0031F6A2



## 6.8. GPS, Phone Number Querying Address Information Package (0X1A)

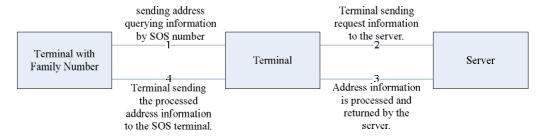

#### **6.8.1.** Information from Terminal to Server

The information is received by the terminal.

The format is basically same to the format mentioned as GPS information content, and the different is that phone number for querying address is added here.

	Length					
	Format					
	2					
	Packet Length					
	1					
		Date Time	6			
		Length of GPS information, quantity of positioning satellites	1			
Information	GPS	4				
Content	Information	Longitude	4			
Content		Speed	1			
		Course, Status	2			
		Phone Number	21			
		Language	2			
	Informat	ion Serial Number	2			
	E	Error Check	2			
		Stop Bit	2			

#### 6.8.1.1. Start Bit

For details see Data Packet Format section 4.1.

## 6.8.1.2. Packet Length

For details see Data Packet Format section 4.2.

Example: measured in bytes, 0x2E means the content of command occupied 46 bytes.

## 6.8.1.3. Protocol Number

0x1A is utilized.

## **6.8.1.4.** Date Time

For details see Location Data Packet Format section 5.2.1.4.

#### 6.8.1.5. Length of GPS information, quantity of positioning satellites

For details see Location Data Packet Format section 5.2.1.5.

#### **6.8.1.6.** Latitude

For details see Location Data Packet Format section 5.2.1.6.

## 6.8.1.7. Longitude

For details see Location Data Packet Format section 5.2.1.7.



## 6.8.1.8. Speed

For details see Location Data Packet Format section 5.2.1.8.

#### **6.8.1.9.** Course

For details see Location Data Packet Format section 5.2.1.9.

#### **6.8.1.10. Phone Number**

The SOS phone number used for requesting address query, which is converted by ASCII and 0 is added at the right side if less than 21 bits.

## **6.8.1.11.** Language

A bit indicates the current language used in the terminal.

Chinese: 0x00 0x01 English: 0x00 0x02

## 6.8.1.12. Information Serial Number

For details see Data Packet Format section 4.5.

#### **6.8.1.13.** Error Check

For details see Data Packet Format section 4.6.

#### 6.8.1.14. Stop Bit

For details see Data Packet Format section 4.7.

## 6.8.2. Response of Server

The server replies Chinese address or English address based on the extended command, and the response data packet is inconsistent

# 6.8.2.1. Response package in Chinese

The response data packet in Chinese is as follow:

		Start Bit		2	
	]	Length of data	bit	1	
		Protocol Numl	oer	1	
		Length o	of Command	1	
		Serve	r Flag Bit	4	
Command			ADDRESS	7	
packet sent	Information Content		&&	2	
from the		Command Content	Address Content	М	
terminal			&&	2	
(15+M+N Byte)			Phone Number	21	
			##	2	
	Infor	mation Serial	Number	2	
		Check Bit			
		Stop Bit		2	



Command Content: ADDRESS&&Address Content&&Phone Number## (ADDRESS, &&, ##

are fixed strings)

Chinese address content is sent in UNICODE.

7878 //Start Bit 84 //Data Length

17 //Response Protocol Number

7E //Length of Command, i.e., length of the information of the transmitted content

 000000001
 //Server Flag Bit

 41444452455353
 //ADDRESS

 2626
 //&& Separator

624059044F4D7F6E0028 //Chinese address is sent in UNICODE 004C004200530029003A

5E7F4E1C77015E7F5DDE

5E0282B190FD533AFF17 FF15FF144E6190530028 004E00320033002E0033

00390035002C00450031 00310032002E00390038 0038002996448FD1

2626 //&&Separator

31333731303831393133350000000000000000000 //Phone Number

2323 //## terminator of content

0106 //Serial No. 3825 //Check Bit 0D0A //Stop Bit

## 6.8.2.2. Response package in English

Considering the address or other foreign address in English is generally longer than that in Chinese, one data bit is not enough, so the data bit is occupied in 2 bytes. Note: only the length of data bit corresponding to the protocol number of response address information is changed into two bytes.

		2			
	L	ength of data bit		2	
	F	Protocol Number		1	
		Length of	Command	2	
		Server l	Flag Bit	4	
Command			ADDRESS	7	
packet sent	Information Con		&&	2	
from the		Command Content	Address	M	
server to			Content		
the	Content		&&	2	
terminal			Phone		
(15+M+N			Number	21	
Byte )			##	2	
	Inform	nation Serial Nu	mber	2	
		Check Bit		2	
		Stop Bit			

The Protocol Number of request Chinese address response is 0X97.



## **Example of English address response information:**

7878 //Start Bit 00D1 //Data Length

97 //Response Protocol Number

00CA //Length of Command, i.e., length of the information of the transmitted content

00000001 //Server Flag Bit 41444452455353 //ADDRESS 2626 //&& Separator

0053004F00530028004C //English address is sent in UNICODE

0029003A005300680069 006D0069006E00200046 0061006900720079006C 0061006E006400200057 00650073007400200052 0064002C004800750069 006300680065006E0067 002C004800750069007A 0068006F0075002C0047 00750061006E00670064 006F006E00670028004E

006F006E00670028004E 00320033002E00310031 0031002C004500310031 0034002E003400310031 0029004E006500610072

00620079

2626 //&& Separator

313235323031333739303737343035310000000000 //Phone Number

2323 //## terminator of content

0007 // Serial No.
 72b5 //Check Bit
 0D0A //Stop Bit



## vii. Appendix A - Code fragment of the CRC-ITU:

```
Code fragment of the CRC-ITU lookup table algorithm implemented based on C language is as
static const U16 crctab16[] =
    0X0000, 0X1189, 0X2312, 0X329B, 0X4624, 0X57AD, 0X6536, 0X74BF,
    0X8C48, 0X9DC1, 0XAF5A, 0XBED3, 0XCA6C, 0XDBE5, 0XE97E, 0XF8F7,
    0X1081, 0X0108, 0X3393, 0X221A, 0X56A5, 0X472C, 0X75B7, 0X643E,
    0X9CC9, 0X8D40, 0XBFDB, 0XAE52, 0XDAED, 0XCB64, 0XF9FF, 0XE876,
    0X2102, 0X308B, 0X0210, 0X1399, 0X6726, 0X76AF, 0X4434, 0X55BD,
    0XAD4A, 0XBCC3, 0X8E58, 0X9FD1, 0XEB6E, 0XFAE7, 0XC87C, 0XD9F5,
    0X3183, 0X200A, 0X1291, 0X0318, 0X77A7, 0X662E, 0X54B5, 0X453C,
    0XBDCB, 0XAC42, 0X9ED9, 0X8F50, 0XFBEF, 0XEA66, 0XD8FD, 0XC974,
    0X4204, 0X538D, 0X6116, 0X709F, 0X0420, 0X15A9, 0X2732, 0X36BB,
    0XCE4C, 0XDFC5, 0XED5E, 0XFCD7, 0X8868, 0X99E1, 0XAB7A, 0XBAF3,
    0X5285, 0X430C, 0X7197, 0X601E, 0X14A1, 0X0528, 0X37B3, 0X263A,
    0XDECD, 0XCF44, 0XFDDF, 0XEC56, 0X98E9, 0X8960, 0XBBFB, 0XAA72,
    0X6306, 0X728F, 0X4014, 0X519D, 0X2522, 0X34AB, 0X0630, 0X17B9,
    0XEF4E, 0XFEC7, 0XCC5C, 0XDDD5, 0XA96A, 0XB8E3, 0X8A78, 0X9BF1,
    0X7387, 0X620E, 0X5095, 0X411C, 0X35A3, 0X242A, 0X16B1, 0X0738,
    0XFFCF, 0XEE46, 0XDCDD, 0XCD54, 0XB9EB, 0XA862, 0X9AF9, 0X8B70,
    0X8408, 0X9581, 0XA71A, 0XB693, 0XC22C, 0XD3A5, 0XE13E, 0XF0B7,
    0X0840, 0X19C9, 0X2B52, 0X3ADB, 0X4E64, 0X5FED, 0X6D76, 0X7CFF,
    0X9489, 0X8500, 0XB79B, 0XA612, 0XD2AD, 0XC324, 0XF1BF, 0XE036,
    0X18C1, 0X0948, 0X3BD3, 0X2A5A, 0X5EE5, 0X4F6C, 0X7DF7, 0X6C7E,
    0XA50A, 0XB483, 0X8618, 0X9791, 0XE32E, 0XF2A7, 0XC03C, 0XD1B5,
    0X2942, 0X38CB, 0X0A50, 0X1BD9, 0X6F66, 0X7EEF, 0X4C74, 0X5DFD,
    0XB58B, 0XA402, 0X9699, 0X8710, 0XF3AF, 0XE226, 0XD0BD, 0XC134,
    0X39C3, 0X284A, 0X1AD1, 0X0B58, 0X7FE7, 0X6E6E, 0X5CF5, 0X4D7C,
    0XC60C, 0XD785, 0XE51E, 0XF497, 0X8028, 0X91A1, 0XA33A, 0XB2B3,
    0X4A44, 0X5BCD, 0X6956, 0X78DF, 0X0C60, 0X1DE9, 0X2F72, 0X3EFB,
    0XD68D, 0XC704, 0XF59F, 0XE416, 0X90A9, 0X8120, 0XB3BB, 0XA232,
    0X5AC5, 0X4B4C, 0X79D7, 0X685E, 0X1CE1, 0X0D68, 0X3FF3, 0X2E7A,
    0XE70E, 0XF687, 0XC41C, 0XD595, 0XA12A, 0XB0A3, 0X8238, 0X93B1,
    0X6B46, 0X7ACF, 0X4854, 0X59DD, 0X2D62, 0X3CEB, 0X0E70, 0X1FF9,
    0XF78F, 0XE606, 0XD49D, 0XC514, 0XB1AB, 0XA022, 0X92B9, 0X8330,
    0X7BC7, 0X6A4E, 0X58D5, 0X495C, 0X3DE3, 0X2C6A, 0X1EF1, 0X0F78,
};
  calculate the 16-bit CRC of data with predetermined length.
U16 GetCrc16(const U8* pData, int nLength)
    U16 fcs = 0xfffff;
                                // initialization
    while(nLength>0){
        fcs = (fcs >> 8) \land crctab16[(fcs \land *pData) \& 0xff];
        nLength--;
        pData++;
    }
    return ~fcs;
                       // negated
```



## viii.Appendix B: a fragment of example of data packet of communication protocol

The following data displayed in hexadecimal are intercepted from the communication between a terminal and a server, wherein transmission means sending by the terminal and reception means returned from the server:

Login packet:

transmission: 78 78 0D 01 03 53 41 35 32 15 03 62 00 02 2D 06 0D 0A

reception: 78 78 05 01 00 02 EB 47 0D 0A

GPS data packet (06 means adopting combined information package of GPS and LBS):

transmission: 78 78 1F 12 0B 08 1D 11 2E 10 CF 02 7A C7 EB 0C 46 58 49 00 14 8F 01 CC 00 28

7D 00 1F B8 00 03 80 81 0D 0A

## Status packet:

transmission: 78 78 0A 13 44 01 04 00 01 00 05 08 45 0D 0A

reception: 78 78 05 13 00 05 AF D5 0D 0A

## disconnect oil and electricity online:

reception: 78 78 15 80 0F 00 01 A9 58 44 59 44 2C 30 30 30 30 30 30 23 00 A0 DC F1 0D 0A

transmission: 78 78 18 15 10 00 01 A9 58 44 59 44 3D 53 75 63 63 65 73 73 21 00 02 00 18 91 77 0D 0A

the server sending DYD,000000#

reply: DYD=Success!

Command sent during disconnection of oil and electricity:

reception: 78 78 15 80 0F 00 01 A9 61 44 59 44 2C 30 30 30 30 30 30 23 00 A0 3E 10 0D 0A

transmission: 78 78 53 15 4B 00 01 A9 61 41 6C 72 65 61 64 79 20 69 6E 20 74 68 65 20 73 74 61 74 65 20 6F 66 20 66 75 65 6C 20 73 75 70 70 6C 79 20 63 75 74 20 6F 66 66 2C 74 68 65 20 63 6F 6D 6D 61

6E 64 20 69 73 20 6E 6F 74 20 72 75 6E 6E 69 6E 67 21 00 02 00 1C F3 0D 0D 0A

the server sending DYD,000000#

reply: Already in the state of fuel supply cut off, the command is not running!

#### **Connect oil and electricity online:**

reception:  $78\ 78\ 16\ 80\ 10\ 00\ 01\ A9\ 63\ 48\ 46\ 59\ 44\ 2C\ 30\ 30\ 30\ 30\ 30\ 30\ 23\ 00\ A0\ 7B\ DC\ 0D\ 0A$ 

transmission: 78 78 19 15 11 00 01 A9 63 48 46 59 44 3D 53 75 63 63 65 73 73 21 00 02 00 1E F8 93 0D

0A

the server sending: HFYD,000000#

reply: HFYD=Success!

Command sent during connection of oil and electricity:

reception: 78 78 16 80 10 00 01 A9 64 48 46 59 44 2C 30 30 30 30 30 30 23 00 A0 8B 1B 0D 0A

transmission: 78 78 55 15 4D 00 01 A9 64 41 6C 72 65 61 64 79 20 69 6E 20 74 68 65 20 73 74 61 74 65 20 6F 66 20 66 75 65 6C 20 73 75 70 70 6C 79 20 74 6F 20 72 65 73 75 6D 65 2C 74 68 65 20 63 6F 6D

6D 61 6E 64 20 69 73 20 6E 6F 74 20 72 75 6E 6E 69 6E 67 21 00 02 00 1F DB BF 0D 0A

the server sending: HFYD,000000#

reply: Already in the state of fuel supply to resume, the command is not running!

#### Querying address information online:

reception: 78 78 16 80 10 00 01 A9 67 44 57 58 58 2C 30 30 30 30 30 30 23 00 A0 06 2D 0D 0A

transmission: 78 78 64 15 5C 00 01 A9 67 44 57 58 58 3D 4C 61 74 3A 4E 32 33 2E 31 31 31 36 38 32 2C 4C 6F 6E 3A 45 31 31 34 2E 34 30 39 32 31 37 2C 43 6F 75 72 73 65 3A 30 2E 30 30 2C 53 70 65 65

64 3A 30 2E 33 35 31 38 2C 44 61 74 65 54 69 6D 65 3A 31 31 2D 31 31 2D 31 35 20 20 31 31 3A 35 33

3A 34 33 00 02 00 23 07 AE 0D 0A



content sent by the terminal:

DWXX=Lat:N23.111682,Lon:E114.409217,Course:0.00,Speed:0.3518,DateTime:11-11-15 11:53:43

#### the terminal obtains address information from the server:

#### **Chinese:**

reception: 78 78 94 17 8E 00 00 00 01 41 44 44 52 45 53 53 26 26 4F 4D 7F 6E 00 3A 5E 7F 4E 1C 77 01 60 E0 5D DE 5E 02 4E 91 5C 71 89 7F 8D EF 00 2E 65 87 53 4E 4E 00 8D EF 00 2E 79 BB 60 E0 5D DE 5B 89 4F 17 4F 1A 8B A1 5E 08 4E 8B 52 A1 62 40 7E A6 00 33 00 32 7C 73 00 2E 79 BB 60 E0 5D DE 5E 02 59 16 55 46 62 95 8D 44 67 0D 52 A1 4E 2D 5F C3 7E A6 00 33 00 32 7C 73 00 2E 26 26 36 36 33 36 36 00 03 00 04 00 00 00 00 00 00 00 00 00 00 23 23 00 01 E4 2A 0D 0A

The content sent by the server is: Locating: Wenhua Rd. 1, Huizhou, Guangdong, about 32 meters from Huizhou Anzhong Accounting Firm, about 32 meters from Huizhou Foreign Investment Service Center.

Mobile Phone Number is 66366.

#### **English:**

The content sent by the server is: Precisely Locating:10 号 Yunshan West Rd,Huicheng,Huizhou,Guangdong,516003(N23.11177,E114.40922)

Mobile Phone Number is 66366.

#### **Process of Alarm packet:**

## **Short message in Chinese:**

transmission: 78 78 25 16 0B 0B 0F 0E 24 1D CF 02 7A C8 87 0C 46 57 E6 00 14 02 09 01 CC 00 28 7D 00 1F 72 65 06 04 01 01 00 36 56 A4 0D 0A

reception: 78 78 05 16 00 36 95 70 0D 0A

Content of Short message is: Emergency Call: Wenhua Rd. 1, Huizhou, Guangdong, about 31 meters away from ATM machine of Bank of China, about 31 meters away from Jiangbei branch of of Bank



of China, 11-11-15 14:36:29.

The specific meanings of the above commands can be looked up in the protocol document.



# ix. Appendix C: Complete Format of the Information Package

A. data packet sent by the terminal to the server

	Login Message Packet (18 Byte)										
Start Bit	Start Bit Packet length Protocol Number Terminal ID Information Serial Number Check Bit Stop										
2	1	1	8	2	2	2					

				GPS Informat	ion Pac	kage (2	6+N By	te)				
		P		Informati	on Cont	ent						
		r		GPS	S Inform	nation						
		О										
S		t										
t		О										
a	Pack	с							Reserv	Inform		
r	et	О		Length of GPS	Lat	Lo			ed	ation	chec	stop
t	lengt	1	Date Time	information, quantity	itu	ngi	Spe	Course,	extende	serial	k bit	bit
В	h	N		of positioning	de	tud	ed	Status	d bit	number		
i		u		satellites	ac	e			d bit			
t		m										
		b										
		e										
		r										
2	1	1	6	1	4	4	1	2	N	2	2	2

				LE	S information pac						
S t a r t B i	Pa ck et le ng th	Pr ot oc ol N u m be r	Dat e Tim e	MCC	Information LBS Info	Content	Cell ID	R es er ve d ex te nd ed bit	In fo r m at io n se ri al n u m b	ch ec k bit	st op bi t
2	1	1	6	2	1	2.	3	N	er 2	2	2

	LBS complete information package (42+N Byte)																							
Sta	Pac	Pro		Information Content														Inf	che	sto				
rt	ket	toc	Dat							L	BS I	nforr	natio	n							Res	or	ck	p
Bit	len	ol	e	M	M	L	M	M	N	N	N	N	N	N	N	N	N	N	N	N	erv	mat	bit	bit
	gth	Nu	Ti	C	N	Α	C	C	C	C	C	C	C	C	C	C	C	C	C	C	ed	ion		
		mb	me	C	C	C	I	I	I	I	I	I	I	I	I	I	I	I	I	I	ext	seri		
		er						S	1	S	2	S	3	S	4	S	5	S	6	S	end	al		
								S		S		S		S		S		S		S	ed	nu		
										1		2		3		4		5		6	bit	mb		
																						er		
2	1	1	6	2	1	2	2	1	2	1	2	1	2	1	2	1	2	1	2	1	N	2	2	2

	GPS、LBS information package (34+M+N Byte)																
							Infor	mation (	Content								
					(	GPS Infor	mation			L	BS Info	rmatio	n				
St art Bi t	Pac ket len gth	Prot ocol Num ber	Da te Ti me	Length of GPS inform ation, quantit y of positio ning satellit es	Latit ude	Longi tude	Sp eed	Cou rse, Stat us	Rese rved exten ded bit	M CC	M N C	L A C	C ell I D	Rese rved and exten ded	Inform ation serial numbe r	che ck bit	st op bi t
2	1	1	6	1	4	4	1	2	M	2	1	2	3	M	2	2	2

				Status Pac	cket(13+N Byte)				
S		Proto		Information	Content		Informatio		
t	Packet	col	Terminal Information	Voltago	GSM Signal	Reserved	n Serial	Check	Stop
a	Length	Num	Content	Voltage Level	Strength Level	and	Number	Bit	Bit
r		ber	Content	Level	Sueligui Level	Extended			



t B i t						Bit (language)			
2	1	1	1	1	1	2	2	2	2

	SNR information of satellite (11+M+N Byte)													
			Info	rmation Content										
Start Bit	Packet Length	Protocol Number	Quantity of positioning satellites	SNR of Satellite	Reserved and Extended Bit	Information Serial Number	Check Bit	Stop Bit						
2	1	1	1	M	N	2	2	2						

	terminal responds to the command sent by server (15+M+N Byte)													
				5	String Content									
Start Bit	Packet Length	Protocol Number	Length of Command	Server Flag Bit	Command Content	Reserved and Extended Bit (language)	Information Serial Number	Chec k Bit	Stop Bit					
2	1	1	1	4	M	2	2	2	2					

	GPS, LBS, Status Information Package (40+M+N+L Byte)  Information Content  Rec																					
									Info	rmati	on Cor	ntent							Res			
				Ó	GPS	Infor	mati	on			I	LBS In	format	ion		Status Information			erve d	Info rmat		
Start Bit	Pac ket Len gth	Prot ocol Nu mbe r	Dat e Tim e	Length of GPS informatio n, quantity of positionin g satellites	itu de	Lo ngi tud e		Cou rse, Stat us	Reser ved and Exten ded Bit	LB S Len gth		MNC	LAC	Cell ID	Res erve d and Exte nde d Bit	min al Info rmat	Volt age	GSM Signa 1 Stren gth Level	nde d Bit (lan	ion Seri al Nu mbe	Che ck Bit	Stop Bit
2	1	1	6	1	4	4	1	2	M	1	2	1	2	3	N	1	1	1	2	2	2	2

B. Data Packet Sent by Server to Terminal

	- J													
	Response of Server after receiving Status Packet from Terminal (10 Bytes)													
Start Bit	Packet Length	Protocol Number	Information Serial Number	Check Bit	Stop Bit									
2	1	1	2	2	2									

	Command Packet Sent by Server to Terminal (15+M+N Byte)													
Stort	Doolsot	Drotocol		Informa	tion Content		Information	Check	Stop					
Bit	Start Packet Bit Length	Protocol Number	Length of Command	Server Flag Bit	Command Content	Reserved extended bit	Serial Number	Bit	Bit					
2	1	1	1	4	M	N	2	2	2					