



# Panorama 11.0

## M-200, M-300, M-600 and

## M-700

FIPS 140-3 Non-Proprietary Security Policy

Version: 1.1

Revision Date: November 25, 2024

**Palo Alto Networks, Inc.**

[www.paloaltonetworks.com](http://www.paloaltonetworks.com)

© 2024 Palo Alto Networks, Inc. Palo Alto Networks is a registered trademark of Palo Alto Networks. A list of our trademarks can be found at <https://www.paloaltonetworks.com/company/trademarks.html>. All other marks mentioned herein may be trademarks of their respective companies.

This document may be freely reproduced and distributed whole and intact including this copyright notice.

# Table of Contents

1. General	3
2. Cryptographic Module Specification	5
3. Cryptographic Module Interfaces	12
4. Roles, Services, and Authentication	13
5. Software/Firmware Security	23
6. Operational Environment	23
7. Physical Security	24
8. Non-Invasive Security	39
9. Sensitive Security Parameters	40
10. Self-Tests	43
11. Life-cycle Assurance	44
12. Mitigation of Other Attacks	45
13. References	45
14. Definitions and Acronyms	45

## 1. General

The Panorama M-200, M-300, M-600 and M-700 from Palo Alto Networks Inc., hereafter referred to as “Panorama M-Series”, “Panorama HW”, “modules”, or the “cryptographic modules” are multi-chip standalone cryptographic modules designed to fulfill FIPS 140-3 level 2 requirements. Panorama M-Series management appliances provide centralized management and visibility of Palo Alto Networks next generation firewalls. From a central location, you can gain insight into applications, users, and content traversing the firewalls. The knowledge of what is on the network, in conjunction with safe application enablement policies, maximizes protection and control while minimizing administrative effort. Your security team can centrally perform analysis, reporting, and forensics with the aggregated data over time, or on data stored on the local firewall.

The Panorama M-Series management appliances’ individual management and logging components can be separated in a distributed manner to accommodate large volumes of log data. Panorama M-Series management appliances can be deployed in the following ways:

- Centralized: In this scenario, all Panorama management and logging functions are combined into a single device.
- Distributed: you can separate the management and logging functions across multiple devices, splitting the functions between managers and log collectors.
  - Panorama: The Panorama manager is responsible for handling the tasks associated with policy and device configuration across all managed devices. The manager analyzes the data stored in managed log collectors for centralized reporting.
  - Management-Only: Providing the ability to perform all functions of Panorama with the exception of logging.
  - Log Collector: Organizations with high logging volume and retention requirements can deploy dedicated Panorama log collector devices that will aggregate log information from multiple managed firewalls.
- Panorama on the M-600 and M-700 supports an additional mode, the PAN-DB private cloud. The PAN-DB private cloud is an on-premise solution that is suitable for organizations that prohibit or restrict the use of the PAN-DB public cloud service. With this on-premise solution, you can deploy one or more M-600/M-700 appliances as PAN-DB servers within your network or data center.

The cryptographic module meets the overall requirements applicable to Level 2 security of FIPS 140-3.

Table 1 - Security Levels

ISO/IEC 24759 Section 6.	FIPS 140-3 Section Title	Security Level
1	General	2
2	Cryptographic Module Specification	2
3	Cryptographic Module Interfaces	2
4	Roles, Services, Authentication	3
5	Software/Firmware Security	2
6	Operational Environment	N/A
7	Physical Security	2
8	Non-Invasive Security	N/A
9	Sensitive Security Parameter Management	2
10	Self-Tests	2
11	Life-Cycle Assurance	3
12	Mitigation of Other Attacks	N/A
Overall Level		2

## 2. Cryptographic Module Specification

The configurations for this validation are highlighted in Table 2.

Table 2 - Hardware Tested Configuration

Module	Hardware	Firmware Version	Distinguishing Features
Panorama M-200	910-000176 Physical Kit: 920-000208	11.0.4	RJ45 interfaces, USB ports, LEDs
Panorama M-300	910-000271 Physical Kit: 920-000319	11.0.4	RJ45 interfaces, USB ports, LEDs
Panorama M-600	910-000175 Physical Kit: 920-000209	11.0.4	RJ45 interfaces, USB ports, LEDs, SFP+ ports
Panorama M-700	910-000270 Physical Kit: 920-000318	11.0.4	RJ45 interfaces, USB ports, LEDs, SFP+ ports

### Approved Mode of Operation

The following procedure will initialize the modules into the Approved mode of operation:

- Install physical kit opacity shields and tamper evidence seals according to the Physical Security Policy section. Physical kits must be correctly installed to operate in the Approved mode of operation. The tamper evidence seals and opacity shields shall be installed for the module to operate in a Approved mode of operation.
- During initial boot up, break the boot sequence via the console port connection (by pressing the maint button when instructed to do so) to access the main menu.
- Select “Continue.”
- Select the “Set FIPS-CC Mode” option to initialize the Approved mode.
- Select “Enable FIPS-CC Mode”.
- When prompted, select “Reboot” and the module will re-initialize and continue into the Approved mode of operation (FIPS-CC mode).
- The module will reboot.
- In FIPS-CC mode, the console port is available only as a status output port.
- Once the module has finished booting, the Crypto Officer can authenticate using the default credentials that come with the module
  - Once authenticated, the module will automatically require the operator to change their password; and the default credential is overwritten

The module will automatically indicate the Approved mode of operation in the following manner:

- Status output interface will indicate “\*\*\*\* FIPS-CC MODE ENABLED \*\*\*\*” via the CLI session.
- Status output interface will indicate “FIPS-CC mode enabled successfully” via the console port.
- The module will display “FIPS-CC” at all times in the status bar at the bottom of the web interface.
- The module will display “fips-cc” when “show system info” is entered via the CLI

Should one or more power-up self-tests fail, the Approved mode of operation will not be achieved. Feedback will consist of:

- The module will output “FIPS-CC failure”
- The module will reboot and enter a state in which the reason for the reboot can be determined.
- To determine which self-test caused the system to reboot into the error state, connect the console cable and follow the on-screen instructions to view the self-test output.

Note: Disabling FIPS-CC mode causes a complete factory reset, which is described in the Zeroization section below.

### Selecting Panorama, Management-Only, Log Collector, and PAN-DB System Modes

Panorama M-Series appliances support multiple configurations that provide varying services. The Cryptographic Officer can initialize the module into different system modes. The primary and default system mode is the Panorama mode. The Management-Only system mode is the same as Panorama mode except there is no log collecting service. The Log Collector system mode is a secondary mode that provides a focused log collecting and forwarding capability. Directions to convert the appliance into the Log Collector mode are discussed below. The M-600 and M-700 provide a fourth system mode, PAN-DB Private Cloud server.

Convert the M-200/M-300/M-600/M-700 appliance from Panorama mode to the Management-Only mode:

- Log into the CLI via SSH
- Enter “request system system-mode management-only”
- Enter “Y” to confirm the change to Management-Only mode.
- The system will reboot and perform the required power on self-tests.

Convert the M-200/M-300/M-600/M-700 appliance from Management-Only mode to the Panorama mode:

- Log into the CLI via SSH
- Enter “request system system-mode panorama”
- Enter “Y” to confirm the change to Panorama mode.
- The system will reboot and perform the required power on self-tests.

Convert the M-200/M-300/M-600/M-700 appliance from Panorama mode to the dedicated Panorama Log Collector mode:

- Log into the CLI via SSH
- Enter “request system system-mode logger”
- Enter “Y” to confirm the change to Panorama Log Collector mode.
- The system will reboot and perform the required power on self-tests.

Convert the M-200/M-300/M-600/M-700 appliance from Panorama Log Collector mode to the Panorama mode:

- Log into the CLI via SSH
- Enter “request system system-mode panorama”
- Enter “Y” to confirm the change to Panorama mode.
- The system will reboot and perform the required power on self-tests.

Convert the M-600/M-700 appliance from Panorama Manager mode to the dedicated PAN-DB Private Cloud mode:

- Log into the CLI via SSH
- Enter “request system system-mode panurldb”
- Enter “Y” to confirm the change to PAN-DB Private Cloud mode.
- The system will reboot and perform the required power on self-tests.

Convert the M-600/M-700 appliance from PAN-DB mode to the Panorama Manager mode:

- Log into the CLI via SSH
- Enter “request system system-mode panorama”
- Enter “Y” to confirm the change to Panorama mode.
- The system will reboot and perform the required power on self-tests.

NOTE: Changing the System Mode does not change the FIPS-CC Mode.

### Non-Compliant State

Failure to follow the directions in the Approved Mode of Operation above or rules noted in Section 11 will result in the module operating in a non-compliant state, which is considered out of scope of this validation.

### Zeroization

The following procedure will zeroize the module and must be performed under the control of the operator:

- Access the module’s CLI via SSH, and command the module to enter maintenance mode (“debug system maintenance-mode”); the module will reboot
  - Note: Establish a serial connection to the console port
- After reboot, select “Continue.”
- Select “Factory Reset”
- The module will perform a zeroization, and provide the following message once complete:
  - “Factory Reset Status: Success”

### Approved and Allowed Algorithms

The following table details the cryptographic algorithms and their algorithm certificates. Only the algorithms, modes, and key sizes specified in this table are used by the module. The CAVP certificate may contain more tested options than listed in this table.

Table 3 - Approved Algorithms

CAVP Cert	Algorithm and Standard	Mode/Method	Description/Key Size(s)/Key Strength(s)	Use/Function
A2165	Conditioning Component AES-CBC-MAC SP 800-90B	AES-CBC-MAC	128 bits	Vetted conditioning component for ESV Cert. #E65, E66
A2518	Conditioning Component AES-CBC-MAC SP 800-90B	AES-CBC-MAC	128 bits	Vetted conditioning component for ESV Cert. #E64
A3453	AES-CBC [SP 800-38A]	CBC	128, 192 and 256 bits	Encryption Decryption
A3453	AES-CFB128 [SP 800-38A]	CFB128	128 bits	Encryption Decryption
A3453	AES-CTR [SP 800-38A]	CTR	128, 192 and 256 bits	Encryption Decryption
A3453	AES-GCM [SP 800-38D]	GCM**	128 and 256 bits	Encryption Decryption

A3453	Counter DRBG [SP 800-90Arev1]	Counter DRBG	AES 256 bits with Derivation Function Enabled	Random Bit Generator
A3453	ECDSA KeyGen (FIPS 186-4)	ECDSA KeyGen	P-256, P-384, P-521	Key Generation
A3453	ECDSA KeyVer (FIPS 186-4)	ECDSA KeyVer	P-256, P-384, P-521	Public Key Validation
A3453	ECDSA SigGen (FIPS 186-4)	ECDSA SigGen	P-256, P-384, P-521 with SHA2-224, SHA2-256, SHA2-384, and SHA2-512	Signature Generation
A3453	ECDSA SigVer (FIPS 186-4)	ECDSA SigVer	P-256, P-384, P-521 with SHA-1, SHA2-224, SHA2-256, SHA2-384, and SHA2-512	Signature Verification
A3453	HMAC-SHA-1 [FIPS 198-1]	HMAC	HMAC-SHA-1 with $\lambda=96, 160$	Authentication for protocols
A3453	HMAC-SHA2-224 [FIPS 198-1]	HMAC	HMAC-SHA2-224 with $\lambda=224$	Authentication for protocols
A3453	HMAC-SHA2-256 [FIPS 198-1]	HMAC	HMAC-SHA2-256 with $\lambda=256$	Authentication for protocols
A3453	HMAC-SHA2-384 [FIPS 198-1]	HMAC	HMAC-SHA2-384 with $\lambda=384$	Authentication for protocols
A3453	HMAC-SHA2-512 [FIPS 198-1]	HMAC	HMAC-SHA2-512 with $\lambda=512$	Authentication for protocols
A3453	KAS-ECC-SSC Sp800-56Ar3	KAS	Ephemeral Unified Model: P-256/P-384/P-521	Key Exchange
A3453	KAS-FFC-SSC SP 800-56Ar3	KAS	dhEphem: MODP-2048	Key Exchange
A3453	KDF SNMP [SP 800-135rev1] (CVL)	SNMPv3 KDF		SNMPv3
A3453	KDF SSH [SP 800-135rev1] (CVL)	SSHv2 KDF		SSH
A3453	RSA KeyGen (FIPS 186-4)	RSA KeyGen (FIPS 186-4)	2048, 3072, and 4096 bits	Key Pair Generation
A3453	RSA SigGen (FIPS 186-4)	RSA SigGen (FIPS 186-4)	(ANSI X9.31, RSASSA-PKCS1_v1-5, RSASSA-PSS): 2048, 3072, and 4096-bit with hashes 256/384/512	Signature Generation
A3453	RSA SigVer (FIPS 186-4)	RSA SigVer (FIPS 186-4)	(ANSI X9.31, RSASSA-PKCS1_v1-5, RSASSA-PSS): 2048, 3072, 4096-bit (per IG C.F) with hashes SHA-1/224+++/256/384/512 +++ This Hash algorithm is not supported for ANSI X9.31	Signature Verification
A3453	SHA-1 [FIPS 180-4]	SHA	SHA-1	Digital Signature Verification Non-Digital Signature Applications (e.g. component of HMAC)
A3453	SHA2-224 [FIPS 180-4]	SHA2	SHA-224	Digital Signature Generation/Verification Non-Digital Signature Applications (e.g. component of HMAC)
A3453	SHA2-256 [FIPS 180-4]	SHA2	SHA-256	Digital Signature Generation/Verification Non-Digital Signature Applications (e.g. component of HMAC)
A3453	SHA2-384 [FIPS 180-4]	SHA2	SHA-384	Digital Signature Generation/Verification

				Non-Digital Signature Applications (e.g. component of HMAC)
A3453	SHA2-512 [FIPS 180-4]	SHA2	SHA-512	Digital Signature Generation/Verification  Non-Digital Signature Applications (e.g. component of HMAC)
A3453	Safe Primes Key Generation [RFC 3526]	Safe Primes Key Generation	MODP-2048	Safe Primes Key Generation
A3453	Safe Primes Key Verification [RFC 3526]	Safe Primes Key Verification	MODP-2048	Safe Primes Key Verification
A3453	TLS v1.2 KDF RFC7627 (CVL)	TLS1.2 KDF	TLS v1.2 Hash Algorithm: SHA2-256, SHA2-384	TLS
AES Cert. # A3453 and HMAC Cert. # A3453	KTS [SP 800-38F]	SP 800-38A, FIPS 198-1, and SP 800-38F. KTS (key wrapping and unwrapping) per IG D.G.	128, 192, and 256-bit keys providing 128, 192, or 256 bits of encryption strength	Key Wrapping
AES-GCM Cert. # A3453	KTS [SP 800-38F]	SP 800-38D and SP 800-38F. KTS (key wrapping and unwrapping) per IG D.G.	128 and 256-bit keys providing 128 or 256 bits of encryption strength	Key Wrapping
ESV Cert. #E64	SP 800-90B	ESV	Palo Alto Networks DRNG Entropy Source	Entropy
ESV Cert. #E65	SP 800-90B	ESV	Palo Alto Networks DRNG Entropy Source	Entropy
ESV Cert. #E66	SP 800-90B	ESV	Palo Alto Networks DRNG Entropy Source	Entropy
KAS-ECC-S SC Cert. #A3453, KDF SSH Cert. #A3453	KAS [SP 800-56Arev3]	SP 800-56Arev3. KAS-ECC per IG D.F Scenario 2 path (2).	P-256, P-384, and P-521 curves providing 128, 192, or 256 bits of encryption strength	Key Exchange with protocol KDF
KAS-ECC-S SC Cert. #A3453, TLS v1.2 KDF RFC7627 Cert. #A3453	KAS [SP 800-56Arev3]	SP 800-56Arev3. KAS-ECC per IG D.F Scenario 2 path (2).	P-256, P-384, and P-521 curves providing 128, 192, or 256 bits of encryption strength	Key Exchange with protocol KDF
KAS-FFC-S SC Cert. #A3453, KDF SSH Cert. #A3453	KAS [SP 800-56Arev3]	SP 800-56Arev3. KAS-FFC per IG D.F Scenario 2 path (2).	2048-bit key providing 112 bits of encryption strength	Key Exchange with protocol KDF
KAS-FFC-S SC Cert. #A3453, TLS v1.2 KDF RFC7627 Cert. #A3453	KAS [SP 800-56Arev3]	SP 800-56Arev3. KAS-FFC per IG D.F Scenario 2 path (2).	2048-bit key providing 112 bits of encryption strength	Key Exchange with protocol KDF

Vendor Affirmed	CKG (SP 800-133rev2)	Section 5.1, Section 5.2	Cryptographic Key Generation; SP 800-133rev2 and IG D.H.	Key Generation  Note: The seeds used for asymmetric key pair generation are produced using the unmodified/direct output of the DRBG
-----------------	----------------------	--------------------------	--	---

The module is compliant to IG C.H: GCM is used in the context of TLS and SSH:

- For TLS, The GCM implementation meets Scenario 1 of IG C.H: it is used in a manner compliant with SP 800-52 and in accordance with Section 4 of RFC 5288 for TLS key establishment, and ensures when the nonce\_explicit part of the IV exhausts all possible values for a given session key, that a new TLS handshake is initiated per sections 7.4.1.1 and 7.4.1.2 of RFC 5246. During operational testing, the module was tested against an independent version of TLS and found to behave correctly.
  - From this RFC 5288, the GCM cipher suites in use are:  
TLS\_ECDHE\_ECDSA\_WITH\_AES\_128\_GCM\_SHA256,  
TLS\_ECDHE\_ECDSA\_WITH\_AES\_256\_GCM\_SHA384,  
TLS\_ECDHE\_RSA\_WITH\_AES\_128\_GCM\_SHA256, and  
TLS\_ECDHE\_RSA\_WITH\_AES\_256\_GCM\_SHA384
- For SSH, the module meets Scenario 1 of IG C.H. The module conforms to RFCs 4252, 4253, and 5647. The fixed field is 4-byte in length and is derived using the SSH KDF; this ensures the fixed field is unique for any given GCM session. The invocation field is 8-byte in length and is incremented for each invocation of GCM; this prevents the IV from repeating until the entire invocation field space of  $2^{64}$  is exhausted, which can take hundreds of years. (In FIPS-CC Mode, SSH rekey is automatically configured at 1 GB of data or 1 hour, whichever comes first.)

In all the above cases, the nonce\_explicit is always generated deterministically. AES GCM keys are zeroized when the module is power cycled. For each new TLS or SSH session, a new AES GCM key is established.

The module is compliant to IG C.F:

The module utilizes Approved modulus sizes 2048, 3072, and 4096 bits for RSA signatures. This functionality has been CAVP tested as noted above. The minimum number of Miller Rabin tests for each modulus size is implemented according to Table C.2 of FIPS 186-4. For modulus size 4096, the module implements the largest number of Miller-Rabin tests shown in Table C.2. RSA SigVer is CAVP tested for all three supported modulus sizes as noted above. The module does not perform FIPS 186-2 SigVer. All supported modulus sizes are CAVP testable and tested as noted above. The module does not implement RSA key transport in the approved mode.

The module does not have any algorithms that fall under:

- Non-Approved Algorithms Allowed in the Approved Mode of Operation
- Non-Approved Algorithms Allowed in the Approved Mode of Operation with No Security Claimed
- Non-Approved Algorithms Not Allowed in the Approved Mode of Operation

**Table 4 - Supported Protocols in the Approved Mode**

TLSv1.2
SSHv2
SNMPv3

\*Note: these protocols were not reviewed or tested by the CMVP or CAVP.

### Module Diagrams

Figures 1 - 8 depict the modules and their interfaces. The cryptographic boundary consists of the physical perimeter of the hardware appliances with the physical kits installed. Please refer to the Physical Security section of this document for depictions of the modules with the physical kits installed.



Figure 1 - M-200 Front



Figure 2 - M-200 Rear

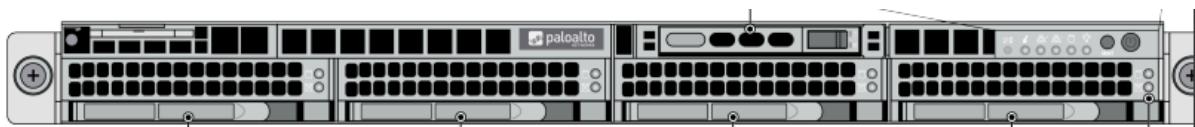


Figure 3 - M-300 Front

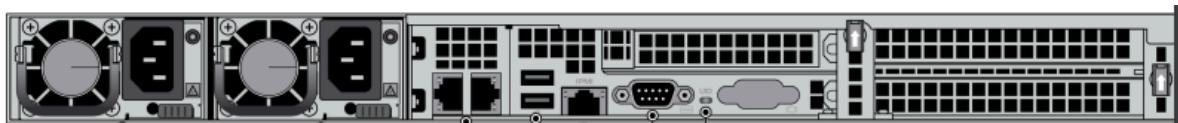


Figure 4 - M-300 Rear

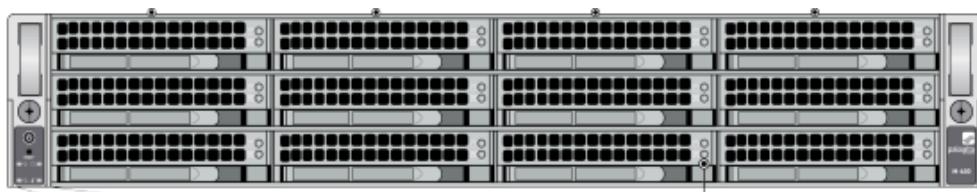


Figure 5 - M-600 Front

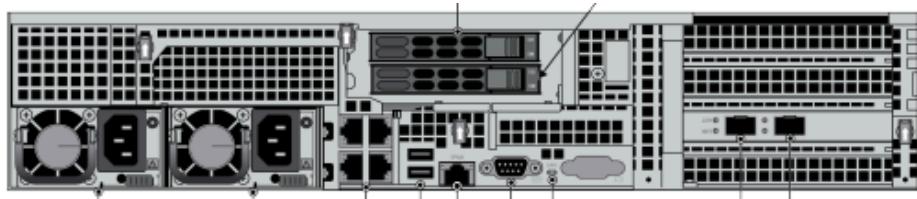


Figure 6 - M-600 Rear

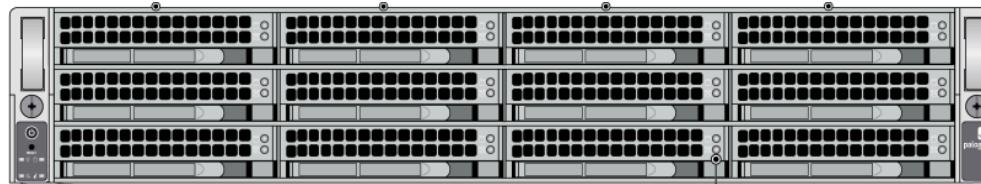


Figure 7 - M-700 Front

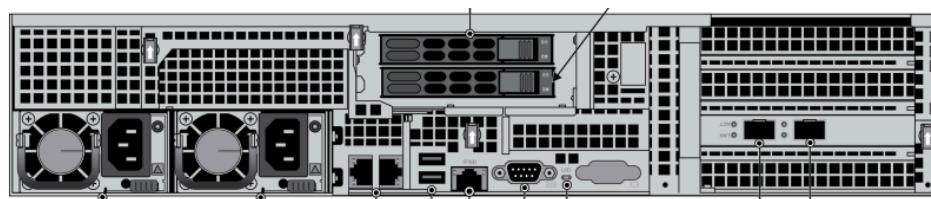


Figure 8 - M-700 Rear

### 3. Cryptographic Module Interfaces

The modules are multi-chip standalone modules with ports and interfaces as shown below. The modules do not implement a control output interface.

Table 5 - Ports and Interfaces

Physical Interface	Logical Interface	Data that passes over port/interface
LED	Status output	Module status via LED indicators
Power	Power	N/A

RJ45 Console	Status output	Self-test output
RJ45 Ethernet	Data input, control input, control output, data output, status output	TLS, SSH
SFP+ (M-600, M-700)	Data input, control input, data output, status output	TLS

## 4. Roles, Services, and Authentication

### Assumption of Roles

The module supports distinct operator roles. The cryptographic module enforces the separation of roles using unique authentication credentials associated with operator accounts.

The module supports concurrent operators.

The module does not provide a maintenance role or bypass capability.

Table 6 – Roles, Service Commands, Input and Output

Role	Service	Input	Output
CO	Show Version	Query module for version	Module provides version
CO	System Provisioning	Configuring and managing system configurations (e.g., IP address, system time, etc.) via CLI or WebUI	Confirmation of service via Configuration Logs
CO, User	Access web portal	Connect to web portal from TLS client.	Confirmation of service via Configuration Logs
CO, User	Access CLI	Connect to SSH server from SSH client	Confirmation of service via Configuration Logs
CO	Panorama Firmware Update	Loading new image	Message output noting version updated successfully via System Logs
CO	Panorama Manager Setup	Configuring and managing Manager configurations (e.g., HTTPS, NTP, etc.) via CLI or WebUI	Confirmation of service via Configuration Logs
CO	Manage Panorama Administrative Access	Configuring and managing Administrative configurations (e.g., creating user accounts, setting authentication method, etc.) via CLI or WebUI	Confirmation of service via Configuration Logs
CO	Configure High Availability	Configuring and managing High Availability (HA) configuration via CLI or WebUI	Confirmation of service via Configuration Logs

CO	Panorama Certificate Management	Configuring and managing certificates via CLI or WebUI	Confirmation of service via Configuration Logs
CO	Panorama Log Setting	Configuring and managing log settings via CLI or WebUI	Confirmation of service via Configuration Logs
CO	Panorama Server Profiles	Configuring and managing Server configurations (e.g. SNMP, etc.) via CLI or WebUI	Confirmation of service via Configuration Logs
CO	Setup Managed Devices and Deployment	Configuring and managing Managed Devices configurations (e.g., Versions, Licenses, etc.) via CLI or WebUI	Confirmation of service via Configuration Logs
CO	Configure Managed Log Collectors	Configuring and managing Managed Log Collectors configurations via CLI or WebUI	Confirmation of service via Configuration Logs
CO, Unauthenticated	Zeroize	Zeroize from CLI	Zeroization Indicator
CO, User, Unauthenticated	Self-Test	Run self-test via CLI or WebUI	Output results via System Logs
CO, User	Show Status	Show status via CLI or WebUI	FIPS-CC Mode Indicator
CO, User	System Audit	View system audit records via CLI or WebUI	Audit records via System Logs
CO, User	Monitor System Status and Logs	View system status records via CLI or WebUI	System status via System Logs
CO	Panorama Log Collector Setup	Configuring and managing Log Collectors configurations via CLI	Confirmation of service via Configuration Logs
CO	Panorama Pan-DB Setup	Configuring and managing Pan-DB URL configurations via CLI	Confirmation of service via Configuration Logs
CO	Manage Pan-DB Administrative Access	Configuring and managing Administrator password via CLI	Confirmation of service via Configuration Logs

Table 7 - Roles and Authentication

Role	Authentication Method	Authentication Strength
CO	Memorized Secret (Unique Username/password) and/or Single-Factor Cryptographic Software (certificate common name / public key-based authentication)	Password-based Minimum length is eight <sup>1</sup> (8) characters (95 possible characters). The probability that a random attempt will succeed or a false acceptance will occur is 1/(95 <sup>8</sup> ) which is less than 1/1,000,000 <sup>2</sup> . The probability of successfully authenticating to the module within one minute is 10/(95 <sup>8</sup> ), which is less than 1/100,000. The

<sup>1</sup> In FIPS-CC Mode, the module checks and enforces the minimum password length of eight (8) as specified in SP 800-63B. Passwords are securely stored hashed with salt value, with very restricted access control, and rate limiting mechanism for authentication attempts.

<sup>2</sup> SP 800-63B, Appendix A.4 establishes a minimum acceptable security strength of 10<sup>6</sup> based on the minimum acceptable random pin size of six (6) digits.

		<p>module's configuration supports at most ten failed attempts to authenticate in a one-minute period.</p> <p><u>Certificate/Public key-based</u></p> <p>The security modules support public-key based authentication using RSA 2048 and certificate-based authentication using RSA 2048, RSA 3072, RSA 4096, ECDSA P-256, P-384, or P-521.</p>
User	Memorized Secret (Unique Username/password) and/or Single-Factor Cryptographic Software (certificate common name / public key-based authentication)	<p>The minimum equivalent strength supported is 112 bits. The probability that a random attempt will succeed is <math>1/(2^{112})</math> which is less than 1/1,000,000. The probability of successfully authenticating to the module within a one minute period is <math>10/(2^{112})</math>, which is less than 1/100,000. The module in FIPS-CC mode allows at most 10 failed attempts before a lockout occurs.</p>

### Access Control Policy

While in the Approved mode of operation all authenticated services and CSPs are accessed via authenticated SSH or TLS sessions. Access is restricted to authenticated operators only and no interface is provided to modify the public or private key.

SNMPv3 authentication is supported but is not a method of module administration and does not allow read/write access of CSPs. Approved and allowed algorithms, relevant CSP and public keys related to these protocols are used to access the following services. CSP access by services is further described in the following tables. Additional service information and administrator guidance for Panorama can be found at <https://docs.paloaltonetworks.com/>.

The Crypto-Officer may access all services, and through the “management of administrative access” service may define multiple Crypto-Officer roles with limited services. The User role provides read-only access to the System Audit service. When configured in the default mode, Panorama Manager provides services via web-browser based interface and a command line interface (CLI). For the Panorama Log Collector mode and PAN-DB mode, only the CLI is available for management.

### SSP Access Rights

The table below defines the relationship between access to CSPs and the different module services. The modes of access shown in the table are defined as:

**G = Generate:** The module generates or derives the SSP.

**R = Read:** The SSP is read from the module (e.g. the SSP is output).

**W = Write:** The SSP is updated, imported, or written to the module.

**E = Execute:** The module uses the SSP in performing a cryptographic operation.

**Z = Zeroise:** The module zeroes the SSP.

**Table 8 - Approved Services**

Service	Description	Approved Security Functions		Keys and/or SSPs	Roles	Access rights to Keys and/or SSPs	Indicator
Show Version	Query the module to display the version	N/A		N/A	CO	N/A	Version displayed via System Logs / CLI / UI
System Provisioning	Perform panorama licensing, diagnostics, debug functions, manage Panorama support information and switch between Panorama Management-only, and Logger modes.  (Panorama or Management-Only Mode)	N/A		N/A	CO	N/A	System and Configuration logs
Access web portal	Connect to module's web portal to invoke services.  (Panorama or Management-Only Mode)	RSA SigVer (186-4) RSA SigVer (186-4) ECDSA SigVer (186-4)		CA Certificates RSA Public Keys ECDSA Public Keys	CO	G/R/E/W G/R/E/W G/R/E/W G/E/Z G/E/Z G/E/Z G/E/Z G/E/Z G/E/Z G/E/Z	System Logs
KAS	TLS v1.2 KDF RFC7627	TLS Pre-Master Secret					
	TLS v1.2 KDF RFC7627	TLS Master Secret					
CKG, ECDSA KeyGen (FIPS 186-4), ECDSA KeyVer (FIPS 186-4), KAS-ECC-SSC, KAS-FFC-SSC, Safe Primes Key Generation, Safe Primes Key Verification		TLS DHE/ECDHE Private Components					
		TLS DHE/ECDHE Public Components					
	HMAC-SHA2-256	TLS HMAC Keys					
	HMAC-SHA2-384						
KTS	AES-CBC	TLS Encryption Keys					
	AES-GCM	TLS Encryption Keys					
Counter DRBG, ESV		DRBG Seed DRBG V DRBG Key Entropy Input String	CO	G/E	Configuration/System Logs		
Access CLI	Connect to module's CLI via SSH	KTS				HMAC-SHA-1 HMAC-SHA2-256	SSH Session Authentication Keys

		HMAC-SHA2-512				
		AES-CBC AES-CTR	SSH Session Encryption Keys		G/E/Z	
	KTS	AES-GCM			G/E/Z	
	KAS	KDF SSH  KAS-ECC-SSC KAS-FFC-SSC Safe Primes Key Generation Safe Primes Key Verification	SSH DHE/ECDHE Private Components  SSH DHE/ECDHE Public Components		G/E/Z	
		Counter DRBG, ESV	DRBG Seed  DRBG V  DRBG Key  Entropy Input String	CO	G/E	Configuration/System Logs
Panorama Firmware Update	Download and install firmware updates	RSA SigVer (FIPS 186-4)	Public Key for Firmware Load Test	CO	W/E	System and Configuration logs
Panorama Manager Setup  Presents configuration options for management interfaces and communication for peer services (e.g., SNMP, RADIUS). Import, Export, Save, Load, revert and validate Panorama configurations and state role  (Panorama or Management-Only Mode)		CKG  RSA KeyGen (FIPS 186-4)  RSA SigGen (FIPS 186-4)	RSA Private Keys	CO	G/W/E	System and Configuration logs
		CKG  ECDSA KeyGen (FIPS 186-4)  ECDSA SigGen (FIPS 186-4)	ECDSA Private Keys		G/W/E	
		RSA SigVer (FIPS 186-4)	RSA Public Keys		G/R/E/W	
		ECDSA SigVer (FIPS 186-4)	ECDSA Public Keys		G/R/E/W	
		KDF SNMP	SNMPv3 Authentication Secret		W/E	
		KDF SNMP	SNMPv3 Privacy Secret		W/E	
		HMAC-SHA-1  HMAC-SHA2-224  HMAC-SHA2-256  HMAC-SHA2-384  HMAC-SHA2-512	SNMPv3 Authentication Key		G/E/Z	
		AES-CFB128	SNMPv3 Session Key		G/E/Z	
		RSA SigVer (FIPS 186-4)  ECDSA SigVer (FIPS 186-4)	CA Certificates		G/R/E/W	
		KAS	TLS v1.2 KDF RFC7627		G/E/Z	
			TLS v1.2 KDF RFC7627		G/E/Z	
			CKG, ECDSA KeyGen (FIPS 186-4), ECDSA KeyVer (FIPS 186-4), KAS-ECC-SSC, KAS-FFC-SSC, Safe Primes Key Generation, Safe Primes Key Verification		G/E/Z	
		KTS	TLS DHE/ECDHE Private Components  TLS DHE/ECDHE Public Components		G/E/R/W/Z	
			HMAC-SHA2-256  HMAC-SHA2-384		G/E/Z	
		AES-CBC	TLS HMAC Keys  TLS Encryption Keys		G/E/Z	

		KTS	AES-GCM	TLS Encryption Keys		G/E/Z	
		KTS	HMAC-SHA-1 HMAC-SHA2-256 HMAC-SHA2-512	SSH Session Authentication Keys		G/E/Z	
			AES-CBC, AES-CTR	SSH Session Encryption Keys		G/E/Z	
		KTS	AES-GCM			G/E/Z	
		KAS	KDF SSH KAS-ECC-SSC KAS-FFC-SSC Safe Primes Key Generation, Safe Primes Key Verification	SSH DHE/ECDHE Private Components  SSH DHE/ECDHE Public Components		G/E/R/W/Z	
		Counter DRBG, ESV		Entropy Input String DRBG Key DRBG V DRBG Seed	CO	G/E	System and Configuration Logs
Manage Panorama Administrative Access	Define access control methods via admin profiles, configure administrators and password profiles Configure local user database, authentication profiles, sequence of methods and access domains.  (Panorama, Management-Only, or Log Collector Mode)	N/A		CO, User Password		G/E/W	System and Configuration logs
		RSA SigVer (FIPS 186-4)		SSH Client Public Key		W/E	
		RSA SigVer (FIPS 186-4) ECDSA SigVer (FIPS 186-4)		SSH Host Public Key		G/R/E/W	
Configure High Availability	Configure High Availability communication settings  (Panorama or Management-Only Mode)	RSA SigVer (FIPS 186-4)		RSA Public Key	CO	G/R/E/W	Configuration Logs
		ECDSA SigVer (FIPS 186-4)		ECDSA Public Key		G/R/E/W	
Panorama Certificate Management	Manage RSA/ECDSA certificates and private keys, certificate profiles, revocation status, and usage; show status.	ECDSA SigGen (FIPS 186-4) RSA SigGen (FIPS 186-4)		RSA Private Keys ECDSA Private Keys	CO	G/R/W/E	System and Configuration logs

	(Panorama, Management-Only, or Log Collector Mode)	ECDSA SigVer (FIPS 186-4) RSA SigVer (FIPS 186-4)	RSA Public Keys ECDSA Public Keys		G/R/W/E	
		Counter DRBG	DRBG Seed DRBG V DRBG Key Entropy Input String		G/E	
Panorama Log Setting	Configure log forwarding (Panorama or Management-Only Mode)	N/A	N/A	CO	N/A	Configuration Logs
Panorama Server Profiles	Configure communication parameters and information for peer servers (Panorama or Management-Only Mode)	KDF SNMP	SNMPv3 Authentication Secret	CO	W/E	System Logs
		KDF SNMP	SNMPv3 Privacy Secret		W/E	
		HMAC-SHA-1 HMAC-SHA2-224 HMAC-SHA2-256 HMAC-SHA2-384 HMAC-SHA2-512	SNMPv3 Authentication Key		G/E/Z	
		AES-CFB128	SNMPv3 Session Key		G/E/Z	
Setup Managed Devices and Deployment	Set-up and define managed devices, device groups for firewalls  Configure device deployment applications and licenses  View current deployment information on the managed firewalls. It also allows you to manage firmware versions and schedule updates on the managed firewalls and managed log collectors.  (Panorama or Management-Only Mode)	N/A	N/A	CO	N/A	Configuration Logs
Configure Managed Log Collectors	Setup and manage other Log Collector management, communication and storage settings  View current deployment information on the managed Log Collectors. It also allows you to manage firmware versions and schedule updates on managed log collectors.  (Panorama or Management-Only Mode)	N/A	CO, User Password	CO	G/E/W	System and Configuration logs
Zeroize	Zeroize all SSPs	N/A	All SSPs	CO	Z	Zeroization Indicator
Self-Test	Run power up self-tests on demand by power cycling the module.	N/A	Firmware Integrity Verification Key	CO, User	E	System Logs

Show Status	View status of the module	N/A	N/A	CO, User	N/A	FIPS-CC Mode Indicator
System Audit	Allows review of limited configuration and system status via SNMPv3, logs, dashboard, show status, and configuration screens.  CO Only: Provides configuration commit capability.  (Panorama, Management-Only, or PAN-DB Mode)	N/A	N/A	CO, User	N/A	System Logs
Monitor System Status and Logs	Review system status via the panorama system CLI, dashboard and logs; show status.  (Panorama or Management-Only Mode)	N/A	N/A	CO, User	N/A	System Logs
Panorama Log Collector Setup	Presents configuration options for management interfaces and communication for peer services Import, Export, Save, Load, revert and validate Panorama configurations and state.  (Log Collector Mode only)	CKG RSA KeyGen (FIPS 186-4) RSA SigGen (FIPS 186-4)	RSA Private Keys	CO	G/W/E	System and Configuration logs
		CKG ECDSA KeyGen (FIPS 186-4) ECDSA SigGen (FIPS 186-4)	ECDSA Private Keys		G/W/E	
		RSA SigVer (FIPS 186-4)	RSA Public Keys		G/R/E/W	
		ECDSA SigVer (FIPS 186-4)	ECDSA Public Keys		G/R/E/W	
		KAS	TLS v1.2 KDF RFC7627	TLS Pre-Master Secret	G/E/Z	
			TLS v1.2 KDF RFC7627	TLS Master Secret	G/E/Z	
			CKG, ECDSA KeyGen (FIPS 186-4), ECDSA KeyVer (FIPS 186-4), KAS-ECC-SSC, KAS-FFC-SSC, Safe Primes Key Generation, Safe Primes Key Verification	TLS DHE/ECDHE Private Components	G/E/Z	
				TLS DHE/ECDHE Public Components	G/E/R/W/Z	

		KTS	HMAC-SHA2-256 HMAC-SHA2-384	TLS HMAC Keys		G/E/Z	
		AES-CBC		TLS Encryption Keys		G/E/Z	
		KTS	AES-GCM	TLS Encryption Keys		G/E/Z	
		KTS	HMAC-SHA-1 HMAC-SHA2-256 HMAC-SHA2-512	SSH Session Authentication Keys		G/E/Z	
			AES-CBC, AES-CTR	SSH Session Encryption Keys		G/E/Z	
		KTS	AES-GCM				
		KAS	KDF SSH	SSH DHE/ECDHE Private Components		G/E/Z	
			KAS-ECC-SSC KAS-FFC-SSC Safe Primes Key Generation, Safe Primes Key Verification				
		Counter DRBG, ESV		DRBG Seed DRBG V DRBG Key Entropy Input String		G/E	
Panorama Pan-DB Setup	Presents configuration options for management interfaces and communication for peer services Import, Export, Save, Load, revert and validate Panorama configurations and state. (PAN-DB Mode only)	KAS	TLS v1.2 KDF RFC7627	TLS Pre-Master Secret	CO	G/E/Z	System Logs
			TLS v1.2 KDF RFC7627	TLS Master Secret		G/E/Z	

			CKG, ECDSA KeyGen (FIPS 186-4), ECDSA KeyVer (FIPS 186-4), KAS-ECC-SSC, KAS-FFC-SSC, Safe Primes Key Generation, Safe Primes Key Verification	TLS DHE/ECDHE Private Components		G/E/Z	
		KTS	HMAC-SHA2-256 HMAC-SHA2-384	TLS HMAC Keys		G/E/R/W/Z	
			AES-CBC	TLS Encryption Keys		G/E/Z	
		KTS	AES-GCM	TLS Encryption Keys		G/E/Z	
		KTS	HMAC-SHA-1 HMAC-SHA2-256 HMAC-SHA2-512	SSH Session Authentication Keys		G/E/Z	
			AES-CBC, AES-CTR	SSH Session Encryption Keys		G/E/Z	
		KTS	AES-GCM				
		KAS	KDF SSH	SSH DHE/ECDHE Private Components		G/E/Z	
			KAS-ECC-SSC KAS-FFC-SSC Safe Primes Key Generation, Safe Primes Key Verification				
		Counter DRBG, ESV		DRBG Seed		G/E	
				DRBG V			
				DRBG Key			
				Entropy Input String			

Manage Pan-DB Administrative Access	Update Administrator password.  (PAN-DB Mode only)	N/A	CO, User Password	CO	G/E/W	System and Configuration logs
--	---	-----	-------------------	----	-------	----------------------------------

*Note: Configuration/System Logs for Approved services above will indicate FIPS-CC mode is enabled and that the service succeeded.*

## 5. Software/Firmware Security

The module performs the Firmware Integrity test by using HMAC-SHA-256 and ECDSA signature verification (HMAC and ECDSA Cert. #A3453) during the Pre-Operational Self-Test. In addition, the module also conducts the firmware load test by using RSA 2048 with SHA-256 (Cert. #A3453) for the new validated firmware to be uploaded into the module.

The pre-operational self-tests can be initiated by power cycling the module. When this is performed, the module automatically runs the cryptographic algorithm self-tests in addition to the pre-operational firmware integrity test.

## 6. Operational Environment

The FIPS 140-3 Area 5 Operational Environment requirements are not applicable because the module contains a non-modifiable operational environment. The operational environment is limited since the module includes a firmware load service to support necessary updates. New firmware versions within the scope of this validation must be validated through the FIPS 140-3 CMVP. Any other firmware loaded into this module is out of the scope of this validation and requires a separate FIPS 140-3 validation.

## 7. Physical Security

### Physical Security Mechanisms

The multi-chip standalone modules are production quality containing standard passivation. Chip components are protected by an opaque enclosure. There are tamper-evident seals that are applied on the modules by the Crypto-Officer. There are fifteen (15) for the M-200, fifteen (15) for the M-300, twenty-one (21) for the M-600, and twenty-one (21) for the M-700. All unused seals are to be controlled by the Crypto-Officer. The seals prevent removal of the opaque enclosure without evidence. The Crypto-Officer must ensure that the module surface is clean and dry. Tamper evident seals must be pressed firmly onto the adhering surfaces during installation and once applied, the Crypto-Officer shall permit 24 hours of cure time for all tamper evident seals. The seals prevent removal of the opaque enclosure without evidence. The Crypto-Officer should inspect the seals and shields for evidence of tamper every 30 days. If the seals show evidence of tamper, the Crypto-Officer should assume that the modules have been compromised and contact support.

Note: For ordering information, see Table 2 for physical kit part numbers and versions. Opacity shields are included in the physical kits.

### Operator Required Actions

The following table provides information regarding the various physical security mechanisms, and their recommended frequency of inspection/test.

Table 9 - Physical Security Inspection Guidelines

Physical Security Mechanism	Recommended Frequency of Inspection/Test	Inspection/Test Guidance Details
Tamper Evident Seals	30 days	(M-200, M-300) Verify integrity of tamper-evident seals in the locations identified in Section 7 of this Security Policy.
Front and Rear Opacity Shields Side Rails	30 days	(M-200, M-300) Verify that opacity shields and side rails have not been loosened or deformed from their original shape, thereby reducing their effectiveness.
Top Overlays	30 days	(M-200, M-300) Verify top overlays have not been removed or deformed. All edges should maintain strong adhesion characteristics.
Tamper Evident Seals	30 days	(M-600, M-700) Verify integrity of tamper-evident seals in the locations specified in Section 7 of this Security Policy.
Front and Rear Opacity Shields	30 days	(M-600, M-700) Verify that the front and rear opacity shields have not been deformed from their original shape, thereby reducing their effectiveness.
Vent Overlays	30 days	(M-600, M-700) Verify that the vent overlays have not been removed or deformed. All edges should maintain strong adhesion characteristics.

Refer to the following sections for instructions on installation and placement of the tamper seals and opacity shields.

## M-200 Tamper Seal Installation (15 Seals)

1. Replace the top cover with the physical top cover.

- a. Remove the VOID WARRANTY label and cover screws (replacement label included in the kit).

**M-200 appliance**—Remove the Void Warranty label that covers the left top cover screw then use a Phillips-head screwdriver to remove both screws as indicated in the illustration.

- b. Simultaneously depress the two (2) release buttons on top of the cover and slide the cover toward the back of the appliance to remove it.
- c. Slide the top cover (does not have vents) on the appliance until the release buttons click. Reinsert and slide cover into position and secure with the two (2) screws.


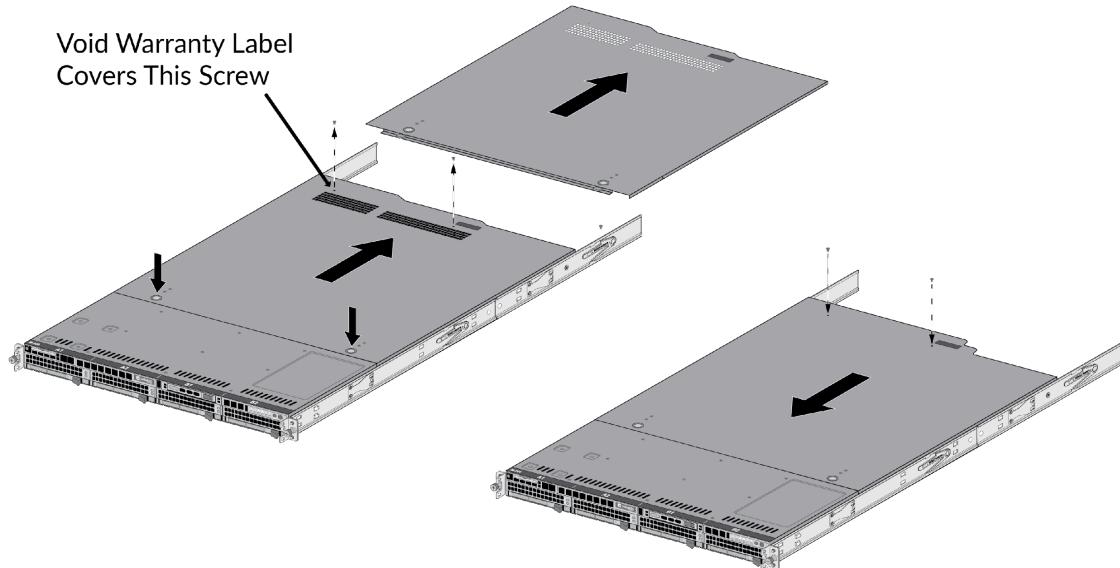


Figure 9 – M-200: Top Cover Replacement

2. On the left side of the M-200, firmly apply seven (7) tamper-evident seals as indicated in the illustration.

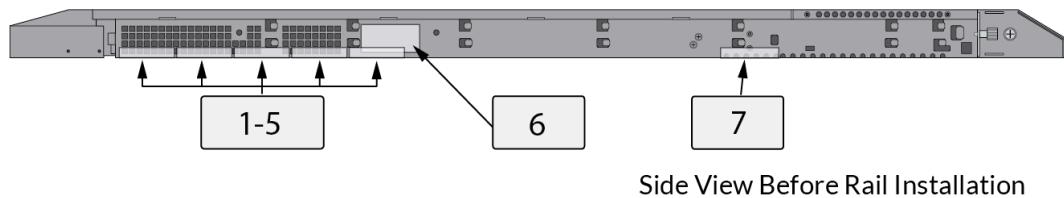

Side View Before Rail Installation

Figure 10 – M-200: Side View Before Rail Installation

Install the inner rack mount rail brackets as described in the “M-200 and M-600 Appliance Hardware Reference”. The front rack bracket that you replace in the next step is located on the front inner rails.

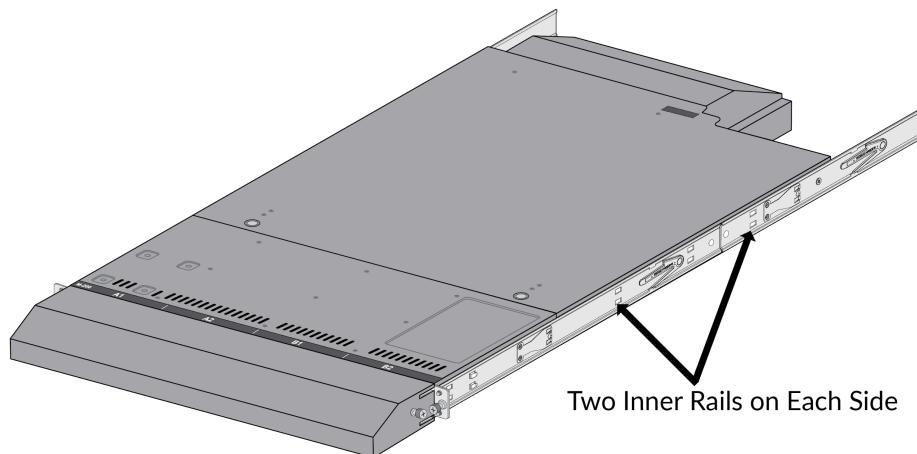


Figure 11 – M-200: Inner Rack Mount Rail Brackets

3. Attach the front cover brackets.

Replace the front rack-mount brackets (one bracket on each side) that are part of the inner-rack rails with the rack-mount brackets by removing and then reinstalling two screws on each bracket. The handles have standoffs that are used to secure the front cover.

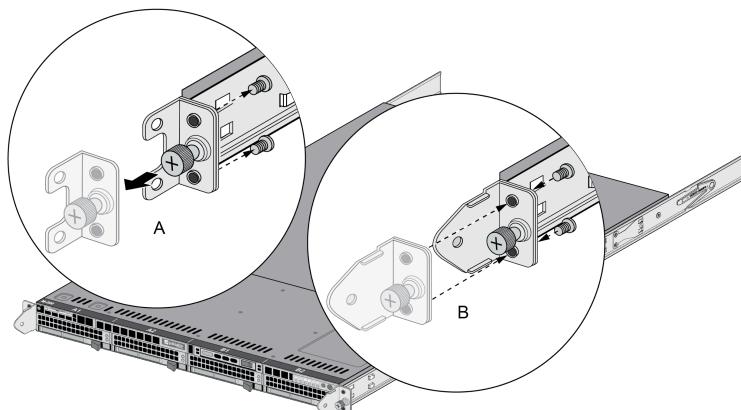


Figure 12 – M-200: Replacing Front Rack-Mount Brackets

4. Attach the physical kit front cover to the front of the appliance.

Slide the M-200 physical kit front cover over the brackets and secure the cover by turning the thumb screws clockwise (one thumb screw on each side).

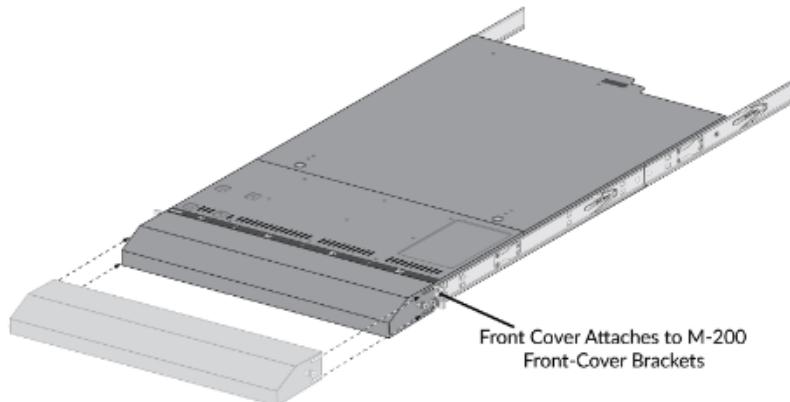


Figure 13 – M-200: Attach Physical Kit Front Cover

5. Attach the physical kit back cover to the back of the appliance.

Slide the back cover onto the back of the appliance, insert two M4 x 0.7 x 8mm (one (1) screw on each side), and turn the screws clockwise to secure the cover.

6. Apply a tamper-evident seal to each location shown in the following M-200 illustrations. Ensure you apply two (2) tamper-evident seals on the power supplies (see seals #14 and #15 on the rear illustration).

**Before you apply the tamper-evident seals, ensure that the appliance and physical kit surfaces are clean and dry. Firmly press one (1) seal on to each of the locations shown in the illustrations. Avoid touching the seals for at least 24 hours to allow time for the seals to properly adhere to the appliance and physical kit surfaces.**

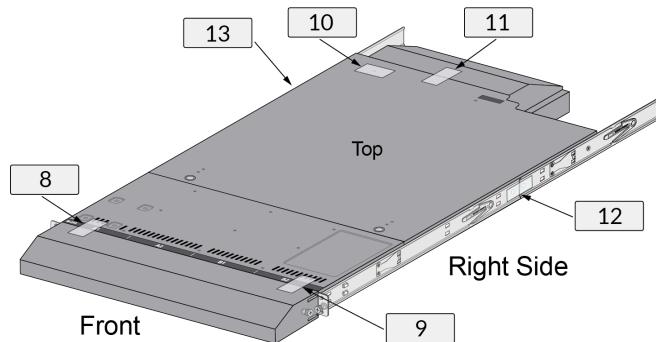


Figure 14 – M-200: Seal locations on Top and Right Side

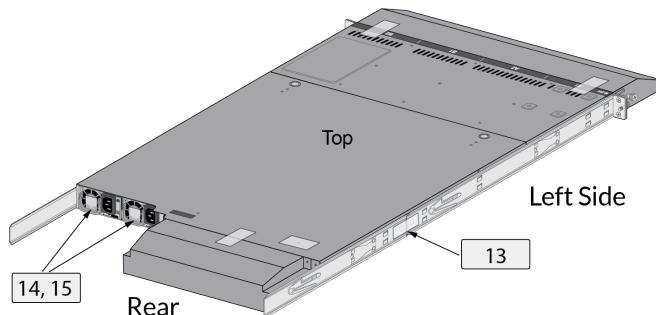


Figure 15 – M-200: Seal Locations on Left Side and Rear

### M-300 Tamper Seal Installation (15 Seals)

1. Replace the top cover with the FIPS top cover.
  - a. Remove the VOID WARRANTY label and cover screws (replacement label included in the kit).

**M-300 appliance**—Remove the Void Warranty label that covers the left top cover screw then use a Phillips-head screwdriver to remove both screws as indicated in the illustration.

- b. Simultaneously depress the two (2) release buttons on top of the cover and slide the cover toward the back of the appliance to remove it.
- c. Slide the physical kit top cover (does not have vents) on the appliance until the release buttons click. Reinsert and slide cover into position and secure with the two (2) screws.

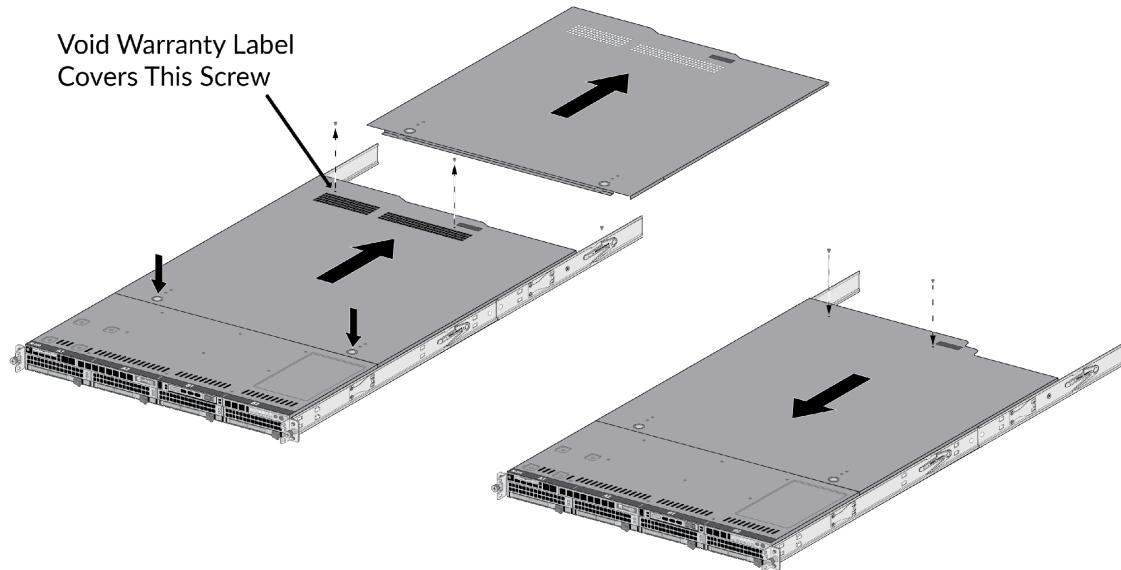


Figure 16 – M-300: Top Cover Replacement

2. On the left side of the M-300, firmly apply seven (7) tamper-evident seals as indicated in the illustration.

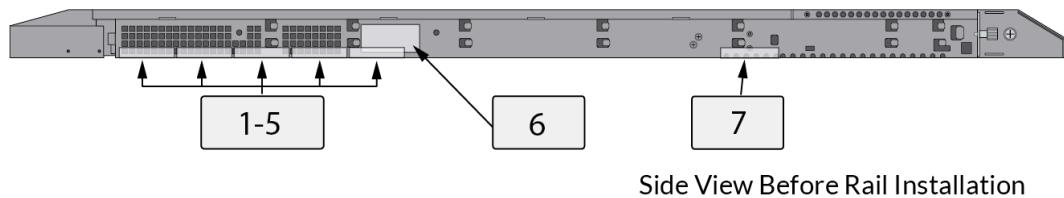


Figure 17 – M-300: Side View Before Rail Installation

Install the inner rack mount rail brackets as described in the “M-300 and M-700 Appliance Hardware Reference”. The front rack bracket that you replace in the next step is located on the front inner rails.


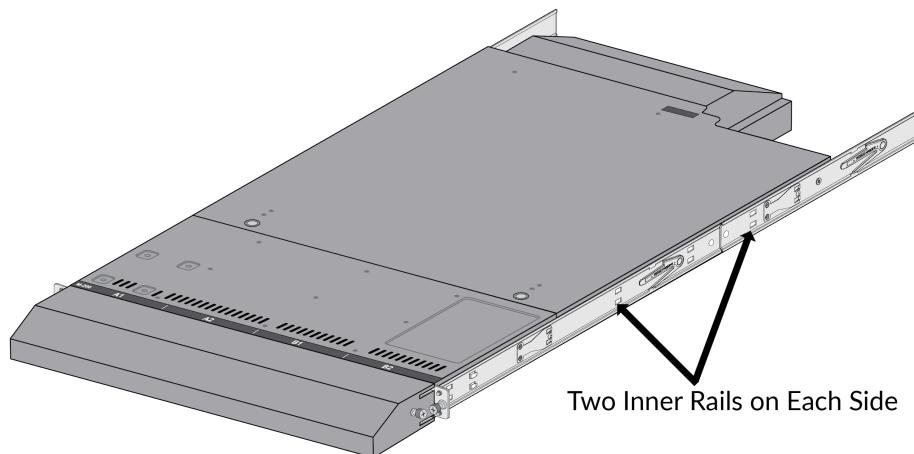


Figure 18 – M-200: Inner Rack Mount Rail Brackets

3. Attach the physical kit front cover brackets.


Replace the front rack-mount brackets (one bracket on each side) that are part of the inner-rack rails with the physical kit rack-mount brackets by removing and then reinstalling two screws on each bracket. The physical kit handles have standoffs that are used to secure the front cover.

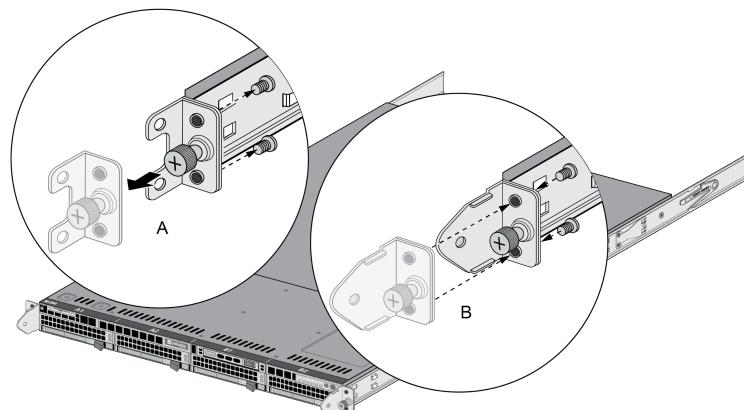

*Figure 19 – M-300: Replacing Front Rack-Mount Brackets*

4. Attach the physical kit front cover to the front of the appliance.

Slide the M-300 physical kit front cover over the physical kit brackets and secure the cover by turning the thumb screws clockwise (one thumb screw on each side).

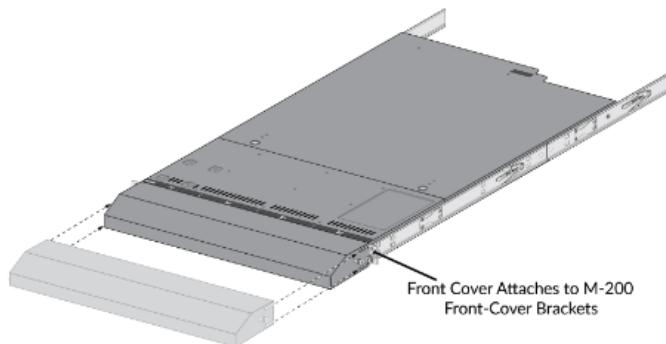

*Figure 20 – M-300: Attach Physical Kit Front Cover*

5. Attach the physical kit back cover to the back of the appliance.

Slide the back cover onto the back of the appliance, insert two M4 x 0.7 x 8mm (one (1) screw on each side), and turn the screws clockwise to secure the cover.

6. Apply a tamper-evident seal to each location shown in the following M-300 illustrations. Ensure you apply two (2) tamper-evident seals on the power supplies (see seals #14 and #15 on the rear illustration).

*Note: Before you apply the tamper-evident seals, ensure that the appliance and physical kit surfaces are clean and dry. Firmly press one (1) seal on to each of the locations shown in the illustrations. Avoid touching the seals for at least 24 hours to allow time for the seals to properly adhere to the appliance and physical kit surfaces.*

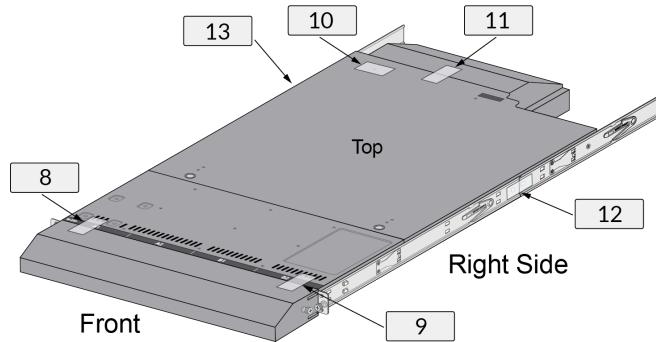


Figure 21 – M-300: Seal locations on Top and Right Side

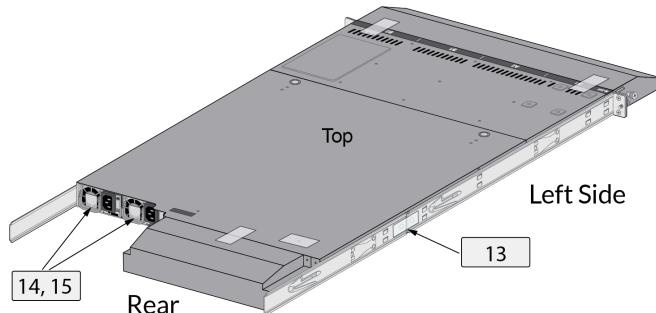


Figure 22 – M-300: Seal Locations on Left Side and Rear

### M-600 Tamper Seal Installation (21 Seals)

1. Replace the top cover with the FIPS top cover.

- Remove the VOID WARRANTY label and cover screws (replacement label included in the kit).

- Remove the Void Warranty label that covers the left side cover screw then use a Phillips-head screwdriver to remove both screws as indicated in the illustration.
- b. Simultaneously depress the two (2) release buttons on top of the cover and slide the cover toward the back of the appliance to remove it.
  - c. Slide the physical kit top cover (does not have vents) on the appliance until the release buttons click.  
Replace the two screws that you removed from the old cover


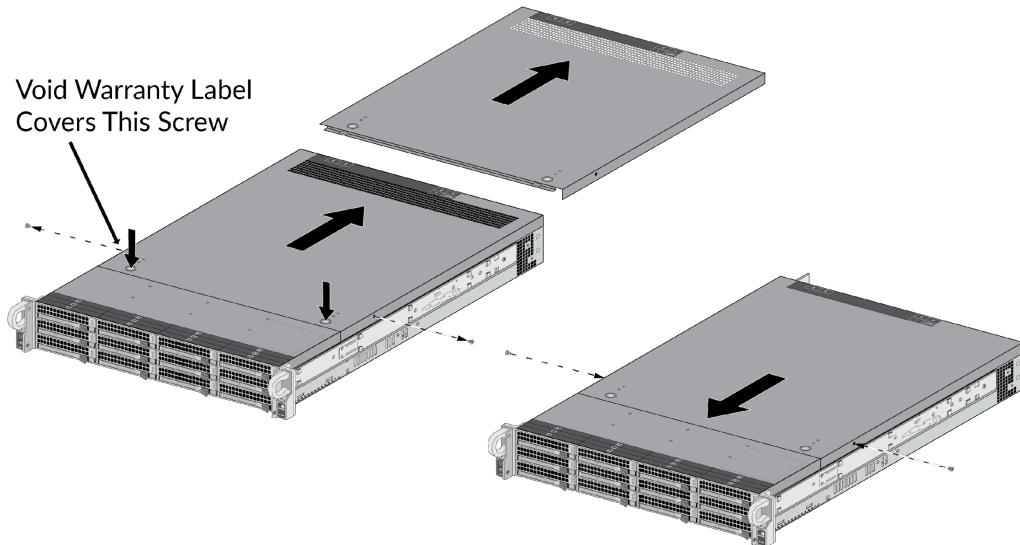


Figure 23 - M-600: Top Cover Replacement

2. Attach the physical front cover brackets.


Remove the front pull handles by removing two (2) screws from each handle (one (1) handle on each side), insert the M-600 physical kit front-cover brackets under each handle, and then replace the handles and secure them using the screws that you removed. The physical kit handles have standoffs that are used to secure the front cover.

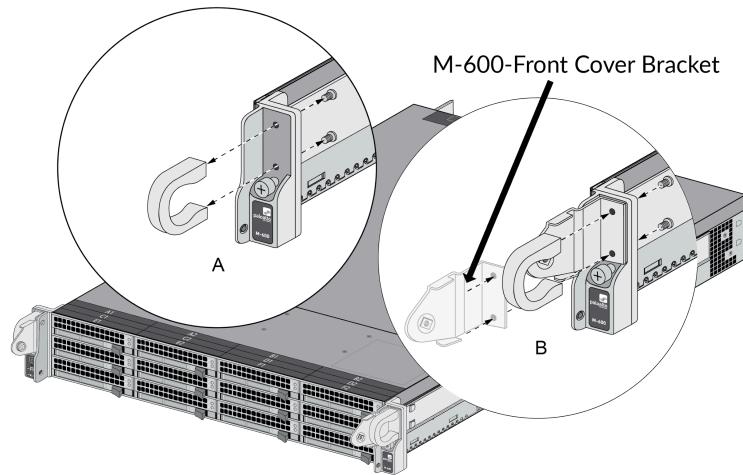

*Figure 24 – M-600: Front Cover Bracket*

3. Attach the physical kit front cover to the front of the appliance.

Slide the M-600 physical kit front cover over the physical kit pull handle brackets and secure the cover by turning the thumb screws clockwise (one thumb screw on each side).

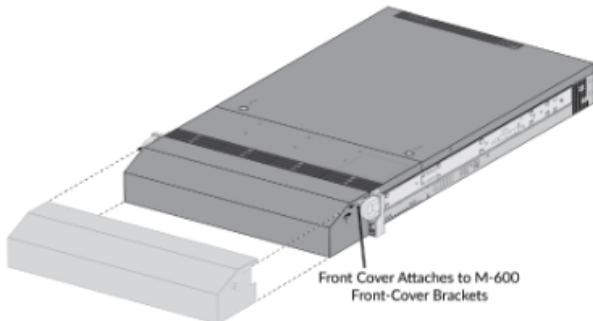

*Figure 25 – M-600: Physical Kit Front Cover*

4. Install a tamper-evident seal on the back of the appliance. This is seal #13 in the M-600 Figure 53. You need to install this seal before you install the M-600 physical kit back cover.
5. Attach the physical kit back cover to the back of the appliance.
  - a. Slide the back cover onto the back of the appliance and turn the two (2) thumb screws clockwise until tight (one (1) screw on each side) to secure the cover.
6. Apply a tamper-evident seal to each location shown in the following M-600 illustrations below.  
Also install the overlay stickers to cover vent openings (two (2) stickers on each side). You then install

tamper-evident seals over the overlay stickers. Apply two (2) tamper-evident seals on the back side of the right rack handle (see seals #18 and #19 on the left side in Figure 54). Apply two (2) tamper-evident seals on the power supplies (see seals #11 and #12 with rear inset of Figure 53).

*Note: Before you apply the tamper-evident seals, ensure that the appliance and physical kit surfaces are clean and dry. Firmly press one (1) seal on to each of the locations shown in the illustrations. Avoid touching the seals for at least 24 hours to allow time for the seals to properly adhere to the appliance and physical kit surfaces.*

#### M-600 Seal Placement (21 Seals)

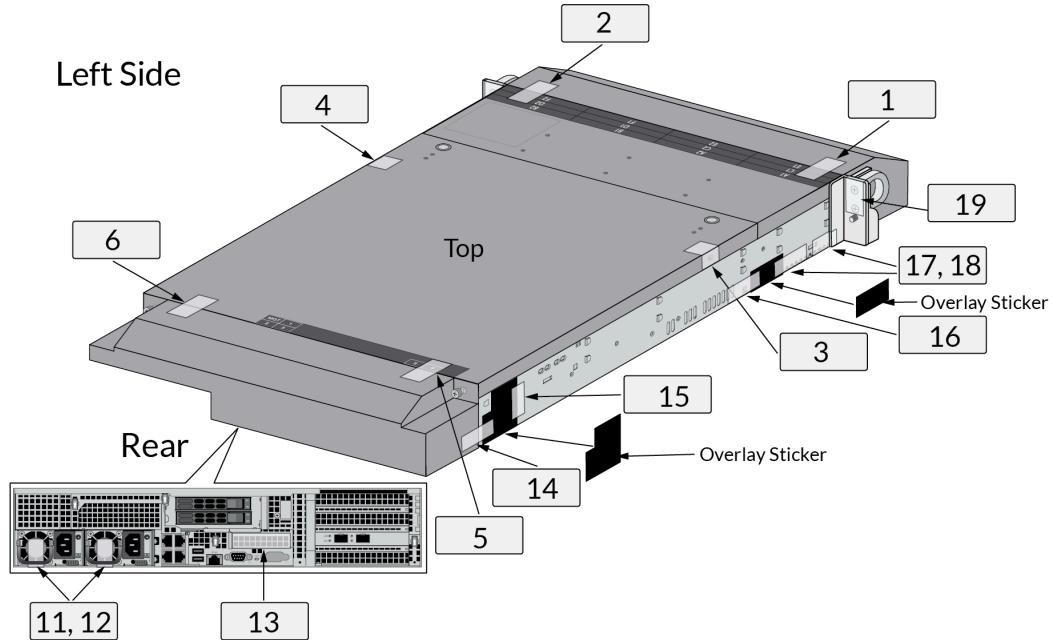


Figure 26 – M-600: Tamper Seal Locations (Top and Rear)

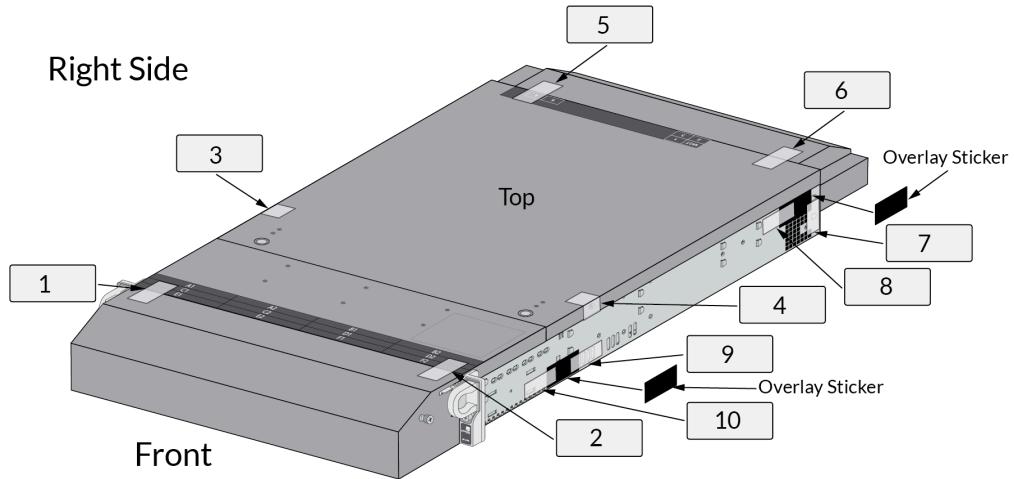


Figure 27 – M-600: Tamper Seal Locations (Top and Front)

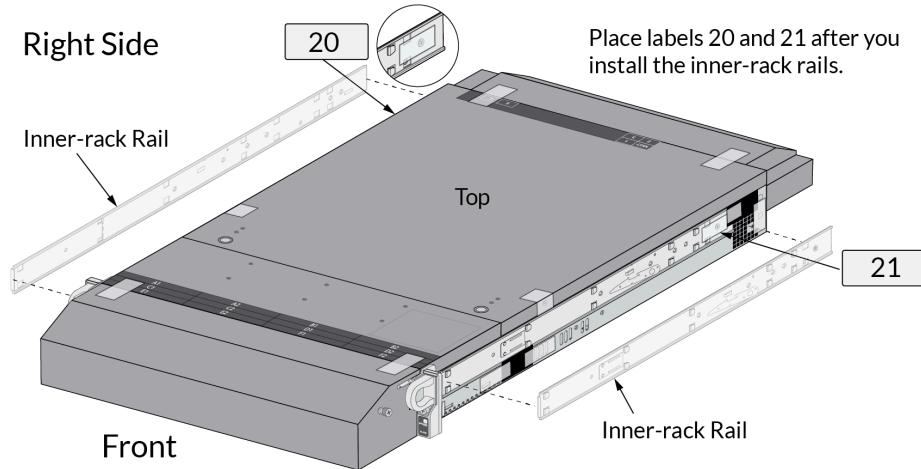


Figure 28 – M-600: Tamper Seals Location for Side Rails

#### M-700 Tamper Seal Installation (21 Seals)

1. Replace the top cover with the physical kit top cover.
  - a. Remove the VOID WARRANTY label and cover screws (replacement label included in the kit).
 

Remove the Void Warranty label that covers the left side cover screw then use a Phillips-head screwdriver to remove both screws as indicated in the illustration.
  - b. Simultaneously depress the two (2) release buttons on top of the cover and slide the cover toward the back of the appliance to remove it.
  - c. Slide the physical kit top cover (does not have vents) on the appliance until the release buttons click.  
Replace the two screws that you removed from the old cover

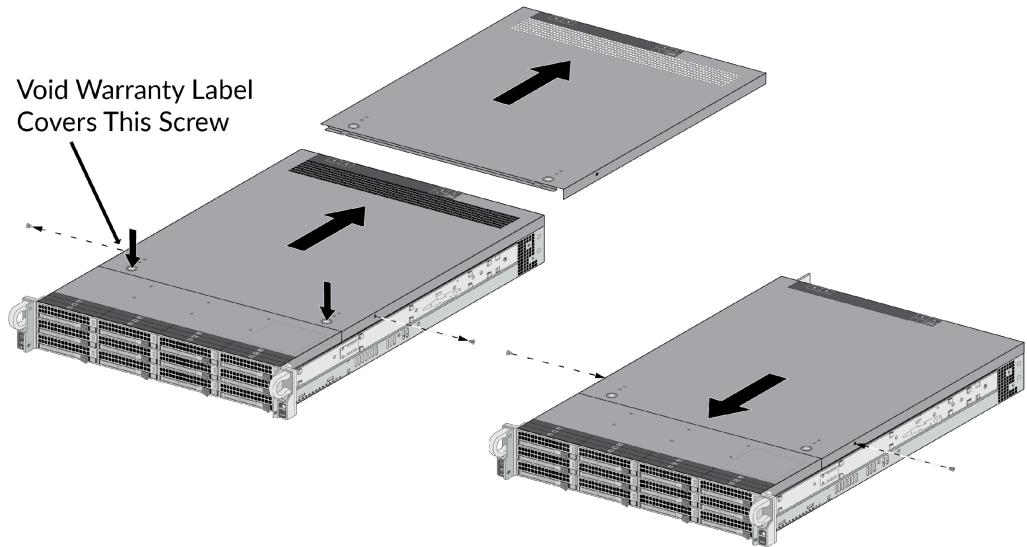


Figure 29 - M-700: Top Cover Replacement

2. Attach the physical kit front cover brackets.

Remove the front pull handles by removing two (2) screws from each handle (one (1) handle on each side), insert the M-700 physical kit front-cover brackets under each handle, and then replace the handles and secure them using the screws that you removed. The physical kit handles have standoffs that are used to secure the front cover.

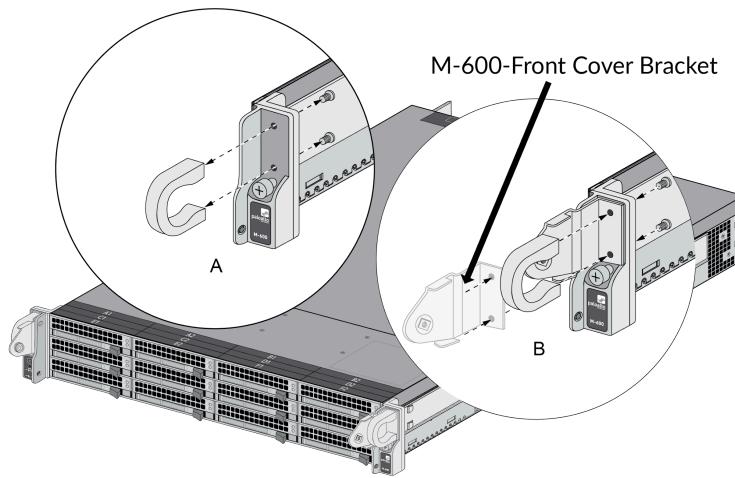


Figure 30 - M-700: Front Cover Bracket

3. Attach the physical kit front cover to the front of the appliance.

Slide the M-700 physical front cover over the physical kit pull handle brackets and secure the cover by turning the thumb screws clockwise (one thumb screw on each side).

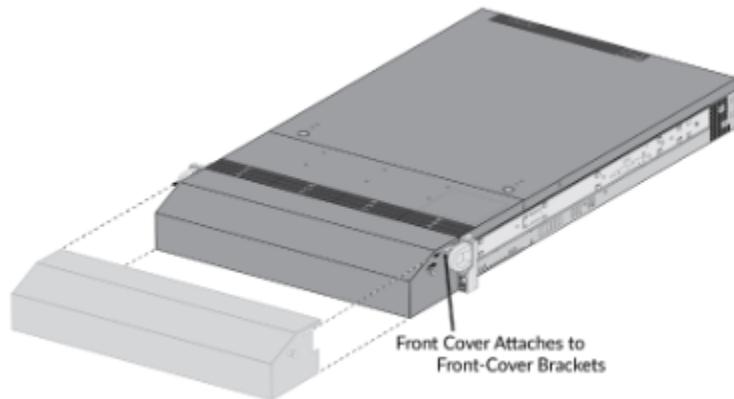


Figure 31 – M-700: Physical Kit Front Cover

4. Install a tamper-evident seal on the back of the appliance. This is seal #13 in the M-700 Figure 53. You need to install this seal before you install the M-700 physical kit back cover.
5. Attach the physical kit back cover to the back of the appliance.
  - a. Slide the back cover onto the back of the appliance and turn the two (2) thumb screws clockwise until tight (one (1) screw on each side) to secure the cover.
6. Apply a tamper-evident seal to each location shown in the following M-700 illustrations below. Also install the overlay stickers to cover vent openings (two (2) stickers on each side). You then install tamper-evident seals over the overlay stickers. Apply two (2) tamper-evident seals on the back side of the right rack handle (see seals #18 and #19 on the left side in Figure 54). Apply two (2) tamper-evident seals on the power supplies (see seals #11 and #12 with rear inset of Figure 53).

*Note: Before you apply the tamper-evident seals, ensure that the appliance and physical kit surfaces are clean and dry. Firmly press one (1) seal on to each of the locations shown in the illustrations. Avoid touching the seals for at least 24 hours to allow time for the seals to properly adhere to the appliance and physical kit surfaces.*

#### M-700 Seal Placement (21 Seals)

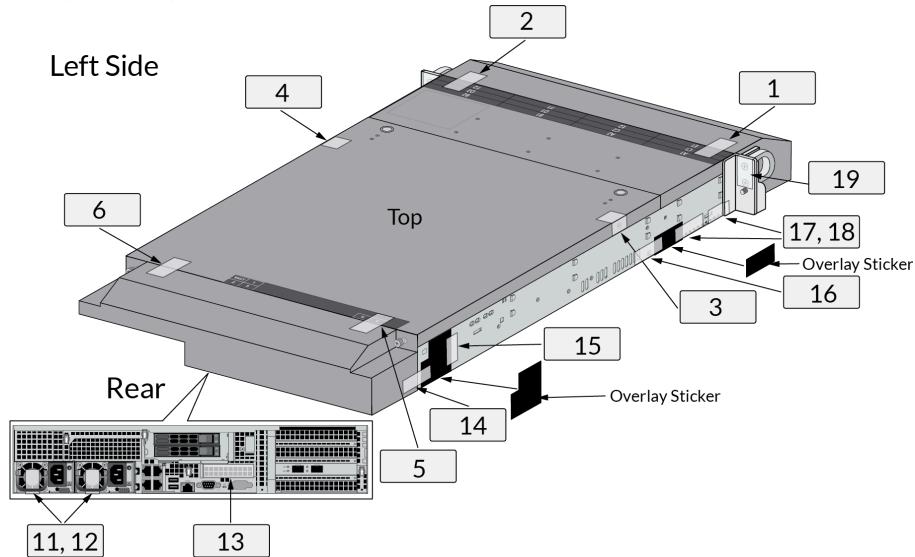


Figure 32 – M-700: Tamper Seal Locations (Top and Rear)

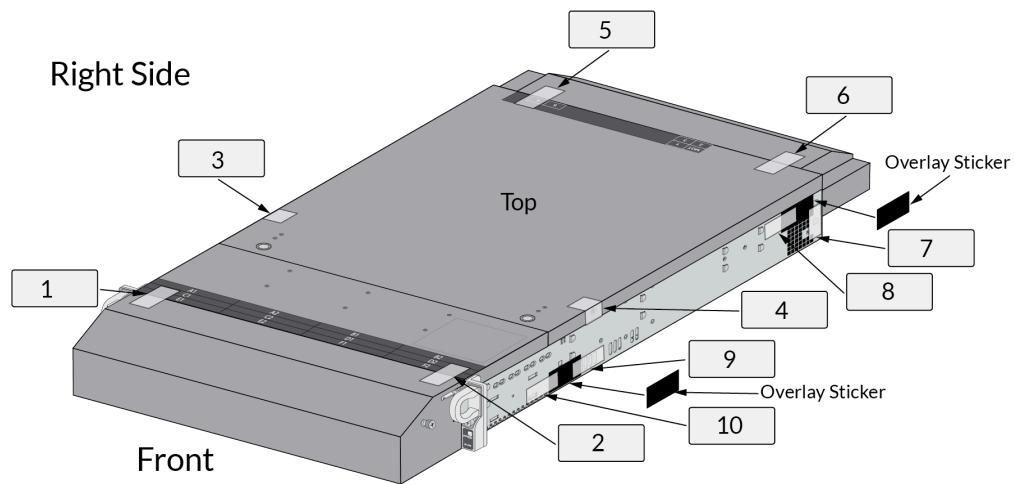


Figure 33 – M-700: Tamper Seal Locations (Top and Front)

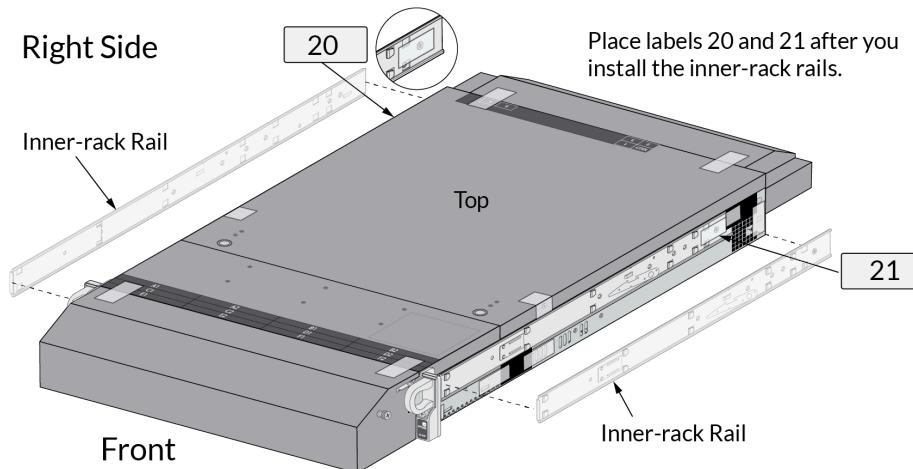


Figure 34 – M-700: Tamper Seals Location for Side Rails

## 8. Non-Invasive Security

There are currently no defined Approved non-invasive attack mitigation test metrics in SP 800-140F.

## 9. Sensitive Security Parameters

The following table details all the sensitive security parameters utilized by the module.

Table 10 - SSPs

Key/SSP/Name /Type	Strength	Security Function and Cert. Number	Generation	Import/Export	Establishment	Storage	Zeroization <sup>1</sup>	Use & Related Keys
CA Certificates	112 bits minimum	RSA SigVer (FIPS 186-4) ECDSA SigVer (FIPS 186-4) Cert. #A3453	DRBG, FIPS 186-4	TLS or SSH Session Key Encrypted	N/A	HDD/RAM - plaintext	HDD – Zeroize Service RAM - Zeroize at session termination	ECDSA/RSA Public key - Used to trust a root CA intermediate CA and leaf /end entity certificates (RSA 2048, 3072, and 4096 bits) (ECDSA P-256, P-384, and P-521)
RSA Public Keys	112 bits minimum	RSA SigVer (FIPS 186-4) Cert. #A3453	DRBG, FIPS 186-4	TLS or SSH Session Key Encrypted or Plaintext TLS handshake	N/A	HDD/RAM - plaintext	Zeroize Service	RSA public keys managed as certificates for the verification of signatures, establishment of TLS, operator authentication and peer authentication. (RSA 2048, 3072, or 4096-bit)
RSA Private Keys	112 bits minimum	RSA SigGen (FIPS 186-4) Cert. #A3453	DRBG, FIPS 186-4	TLS or SSH Session Key Encrypted	N/A	HDD/RAM - plaintext	HDD – Zeroize Service RAM - Zeroize at session termination	RSA Private keys for generation of signatures, authentication or key establishment. (RSA 2048, 3072, or 4096-bit)
ECDSA Public Keys	128 bits minimum	ECDSA SigVer (FIPS 186-4) Cert. #A3453	DRBG, FIPS 186-4	TLS or SSH Session Key Encrypted or Plaintext TLS handshake	N/A	HDD/RAM - plaintext	Zeroize Service	ECDSA public keys managed as certificates for the verification of signatures, establishment of TLS, operator authentication and peer authentication. (ECDSA P-256, P-384, or P-521)
ECDSA Private Keys	128 bits minimum	ECDSA SigGen (FIPS 186-4) Cert. #A3453	DRBG, FIPS 186-4	TLS or SSH Session Key Encrypted	N/A	HDD/RAM - plaintext	HDD – Zeroize Service RAM - Zeroize at session termination	ECDSA Private key for generation of signatures and authentication (P-256, P-384, or P-521)
TLS DHE/ECDHE Private Components	112 bits minimum	KAS-ECC-SSC KAS-FFC-SSC Cert. #A3453	DRBG, SP 800-56A Rev. 3	N/A	N/A	RAM - plaintext	Zeroize at session termination	KAS-FFC or KAS-ECC Ephemeral values used in key agreement (KAS-FFC MODP-2048, KAS-ECC P-256, P-384, P-521)
TLS DHE/ECDHE Public Components	112 bits minimum	KAS-ECC-SSC KAS-FFC-SSC Cert. #A3453	DRBG, SP 800-56A Rev. 3	Plaintext - TLS handshake	N/A	N/A	Zeroize at session termination	KAS-FFC or KAS-ECC Ephemeral values used in key agreement (KAS-FFC MODP-2048, KAS-ECC P-256, P-384, P-521)
TLS Pre-Master Secret	N/A	TLS v1.2 KDF RFC7627, Cert. #A3453	KAS SP 800-56A Rev. 3	N/A	N/A	RAM – plaintext	Zeroize at session termination	Secret value used to derive the TLS Master Secret along with client and server random nonces

TLS Master Secret	N/A	TLS v1.2 KDF RFC7627 Cert. #A3453	TLS v1.2 KDF RFC7627	N/A	N/A	RAM – plaintext	Zeroize at session termination	Secret value used to derive the TLS session keys
TLS Encryption Keys	128 bits minimum	AES-CBC or AES-GCM Cert. #A3453	TLS v1.2 KDF RFC7627	N/A	TLS, KAS SP 800-56A Rev. 3	RAM - plaintext	Zeroize at session termination	AES (128 or 256 bit) keys used in TLS connections (GCM; CBC)
TLS HMAC Keys	256 bits minimum	HMAC-SHA2-256 HMAC-SHA2-384 Cert. #A3453	TLS v1.2 KDF RFC7627	N/A	TLS, KAS SP 800-56A Rev. 3	RAM - plaintext	Zeroize at session termination	HMAC keys used in TLS connections (SHA-256, SHA-384) (256, 384 bits)
SSH DHE/ECDHE Private Components	112 bits minimum	KAS-ECC-SSC KAS-FFC-SSC Cert. #A3453	DRBG, SP 800-56A Rev. 3	N/A	N/A	RAM - plaintext	Zeroize at session termination	KAS-FFC or KAS-ECC public component (KAS-FFC MODP-2048, KAS-ECC P-256, KAS-ECC P-384, KAS-ECC P-521)
SSH DHE/ECDHE Public Components	112 bits minimum	KAS-ECC-SSC KAS-FFC-SSC Cert. #A3453	DRBG, SP 800-56A Rev. 3	Plaintext SSH handshake	N/A	RAM - plaintext	Zeroize at session termination	KAS-FFC or KAS-ECC public component (KAS-FFC MODP-2048, KAS-ECC P-256, KAS-ECC P-384, KAS-ECC P-521)
SSH Host Public Key	112 bits minimum	RSA SigVer (FIPS 186-4) ECDSA SigVer (FIPS 186-4) Cert. #A3453	DRBG, FIPS 186-4	N/A	N/A	HDD/RAM – plaintext	Zeroize Service	SSH Host Public Key (RSA 2048, RSA 3072, RSA 4096, ECDSA P-256, P-384, or P-521)
SSH Client Public Key	112 bits minimum	RSA SigVer (FIPS 186-4) Cert. #A3453	N/A	Encrypted via SSH or TLS	N/A	HDD/RAM – plaintext	Zeroize Service	Public RSA key used to authenticate client. (RSA 2048, 3072, and 4096 bits)
SSH Session Encryption Keys	128 bits minimum	AES-CBC, AES-CTR, or AES-GCM Cert. #A3453	KDF SSH	N/A	SSH, KAS SP 800-56A Rev. 3	RAM - plaintext	Zeroize at session termination	Used in all SSH connections to the security module's command line interface. (128, 192, or 256 bits: CBC or CTR) (128 or 256 bits: GCM)
SSH Session Authentication Keys	160 bits minimum	HMAC-SHA-1 HMAC-SHA2-256 HMAC-SHA2-512 Cert. #A3453	KDF SSH	N/A	SSH, KAS SP 800-56A Rev. 3	RAM - plaintext	Zeroize at session termination	Authentication keys used in all SSH connections to the security module's command line interface (HMAC-SHA-1, HMAC-SHA2-256, HMAC-SHA2-512) (160, 256, 512 bits)
Firmware integrity verification key	128 bits	HMAC-SHA2-256, ECDSA SigVer (FIPS 186-4) Cert. #A3453	N/A	N/A	N/A	HDD - plaintext	N/A	Used to check the integrity of crypto-related code. (HMAC-SHA-256 and ECDSA P-256) (Note: This is not considered an SSP)
Public Key for Firmware Load Test	112 bits	RSA SigVer (FIPS 186-4) Cert. #A3453	N/A	N/A	N/A	HDD - plaintext	N/A	Used to authenticate firmware and content to be installed on the firewall (RSA 2048 with SHA-256)
CO, User Password	N/A	SHA2-256 Cert. #A3453	External	Encrypted via SSH or TLS	N/A	HDD - a password hash (SHA2-256)	Zeroize Service	Authentication string with a minimum length of eight (8) characters.
Protocol Secrets	N/A	N/A	N/A	Encrypted via SSH or TLS	N/A	HDD/RAM – plaintext	Zeroize Service	Secrets used by RADIUS (8 characters minimum)

Entropy Input String	384 bits	CKG (vendor affirmed), Counter DRBG Cert. #A3453	Entropy as per SP 800-90B	N/A	N/A	RAM - plaintext	Power cycle	Entropy input string coming from the entropy source Input length = 384 bits
DRBG Seed	384 bits	CKG (vendor affirmed), Counter DRBG Cert. #A3453	Entropy as per SP 800-90B	N/A	N/A	RAM - Plaintext	Power cycle	DRBG seed coming from the entropy source Seed length = 384 bits
DRBG Key	256 bits	CKG (vendor affirmed), Counter DRBG Cert. #A3453	Entropy as per SP 800-90B	N/A	N/A	RAM - plaintext	Power cycle	AES 256 CTR DRBG state Key used in the generation of a random values
DRBG V	128 bits	CKG (vendor affirmed), Counter DRBG Cert. #A3453	Entropy as per SP 800-90B	N/A	N/A	RAM - plaintext	Power cycle	AES 256 CTR DRBG state V used in the generation of a random values
SNMPv3 Authentication Secret	N/A	KDF SNMP Cert. #A3453	N/A	Encrypted via TLS/SSH	N/A	HDD/RAM - plaintext	Zeroize Service	SNMPv3 secret used for localization (Minimum 8 characters)
SNMPv3 Privacy Secret	N/A	KDF SNMP Cert. #A3453	N/A	Encrypted via TLS/SSH	N/A	HDD/RAM - plaintext	Zeroize Service	SNMPv3 secret used for localization (Minimum 8 characters)
SNMPv3 Authentication Key	160 bits minimum	HMAC-SHA-1 HMAC-SHA2-224 HMAC-SHA2-256 HMAC-SHA2-384 HMAC-SHA2-512 Cert. #A3453	KDF SNMP	N/A	N/A	HDD/RAM - Plaintext	Zeroize Service	HMAC-SHA-1/224/256 /384/512 Authentication protocol key (160 bits)
SNMPv3 Session Key	128 bits minimum	AES-CFB128 Cert. #A3453	KDF SNMP	N/A	N/A	HDD/RAM - Plaintext	Zeroize Service	Privacy protocol encryption key (AES-CFB 128)

Note: SSPs are implicitly zeroized when power is lost, or explicitly zeroized by the zeroize service. In the case of implicit zeroization, the SSPs are implicitly overwritten with random values due to their ephemeral memory being reset upon power loss. For the zeroization service and zeroization at session termination, the SSP's memory location is overwritten with random values.

Table 11 – Non-Deterministic Random Number Generation Specification

Entropy Source	Minimum number of bits of entropy	Details
Palo Alto Networks DRNG Entropy Source	384 bits	ESV Cert. #E64, #E65, #E66  Entropy source provides full entropy, which is provided in the 384 bit seed.

## 10. Self-Tests

The cryptographic module performs the following tests below. The operator can command the module to perform the pre-operational and cryptographic algorithm self-tests by cycling power of the module; these tests do not require any additional operator action.

### Pre-operational Self-Tests

#### Pre-operational Firmware Integrity Test

- Verified with HMAC-SHA-256 and ECDSA P-256

*Note: the ECDSA and HMAC-SHA-256 KATs are performed prior to the Firmware Integrity Test*

### Conditional self-tests

#### Cryptographic algorithm self-tests

- AES 128-bit ECB Encrypt Known Answer Test
- AES 128-bit ECB Decrypt Known Answer Test
- AES 128-bit CMAC Known Answer Test\*
- AES 256-bit GCM Encrypt Known Answer Test
- AES 256-bit GCM Decrypt Known Answer Test
- AES 192-bit CCM Encrypt Known Answer Test\*
- AES 192-bit CCM Decrypt Known Answer Test\*
- RSA 2048-bit PKCS#1 v1.5 with SHA-256 Sign Known Answer Test
- RSA 2048-bit PKCS#1 v1.5 with SHA-256 Verify Known Answer Test
- RSA 2048-bit Encrypt Known Answer Test\*
- RSA 2048-bit Decrypt Known Answer Test\*
- ECDSA P-256 with SHA-512 Sign Known Answer Test
- ECDSA P-256 with SHA-512 Verify Known Answer Test
- HMAC-SHA-1 Known Answer Test
- HMAC-SHA-256 Known Answer Test
- HMAC-SHA-384 Known Answer Test
- HMAC-SHA-512 Known Answer Test
- SHA-1 Known Answer Test
- SHA-256 Known Answer Test
- SHA-384 Known Answer Test
- SHA-512 Known Answer Test
- DRBG SP 800-90Arev1 Instantiate/Generate/Reseed Known Answer Tests
- SP 800-90Arev1 Instantiate/Generate/Reseed Section 11.3 Health Tests
- SP 800-56Ar3 KAS-FFC-SSC 2048-bit Known Answer Test
- SP 800-56Ar3 KAS-ECC-SSC P-256 Known Answer Test
- SP 800-135rev1 TLS 1.2 with SHA-256 KDF Known Answer Tests
- SP 800-135rev1 SSH KDF with SHA-256 Known Answer Tests
- SP 800-135rev1 IKEv2 KDF Known Answer Tests\*
- SP 800-90B RCT/APT Health Tests on Entropy Source

*Note: The SP 800-90B Health Tests are implemented by the entropy source.*

*\*Note: Supported by the module cryptographic implementation, but only utilized for CAST*

#### Conditional Pairwise Consistency Self-Tests

- RSA Pairwise Consistency Test
- ECDSA/KAS-ECC Pairwise Consistency Test
- KAS-FFC Pairwise Consistency Test

#### Conditional Firmware Load test

- Firmware Load Test – Verify RSA 2048 with SHA-256 signature on firmware at time of load

#### Conditional Critical Functions Tests

- SP 800-56A Rev. 3 Assurance Tests (Based on Sections 5.5.2, 5.6.2, and 5.6.3)

#### Error Handling

In the event of a conditional test failure, the module will output a description of the error. These are summarized below.

Table 12 - Errors and Indicators

Cause of Error	Error State Indicator
Conditional Cryptographic Algorithm Self-Test or Firmware Integrity Test Failure	FIPS-CC mode failure. <Algorithm test> failed.
Conditional Pairwise Consistency or Critical Functions Test Failure	System log prints an error message.
Conditional Firmware Load Test Failure	System prints Invalid image message.

## 11. Life-cycle Assurance

The vendor provided life-cycle assurance documentation that describes configuration management, design, finite state model, development, testing, delivery + operation, end of life procedures, and guidance. For details regarding the secure installation, initialization, startup, and operation of the module, see section “Modes of Operation”.

Palo Alto Network provides an Administrator Guide for additional information noted in the “References” section of this Security Policy.

#### Module Enforced Security Rules

The module design corresponds to the module security rules. This section documents the security rules enforced by the cryptographic module to implement the security requirements of this FIPS 140-3 Level 2 module.

1. The cryptographic module shall provide distinct operator roles. When the module has not been placed in a valid role, the operator shall not have access to any cryptographic services.
2. The cryptographic module provides identity-based authentication
3. The cryptographic module shall clear previous authentications on power cycle.
4. The module shall support the generation of key material with the approved DRBG. The entropy provided must be greater than or equal to the strength of the key being generated.
1. Data output shall be inhibited during power-up self-tests and error states.
2. Processes performing key generation and zeroization processes shall be logically isolated from the logical data output paths.
3. The module does not output intermediate key generation values.
4. Status information output from the module shall not contain CSPs or sensitive data that if misused could lead to a compromise of the module.
5. There are no restrictions on which keys or CSPs are zeroized by the zeroization service.
6. The module maintains separation between concurrent operators.
7. The module does not support a maintenance interface or role.
8. The module does not have any external input/output devices used for entry/output of data.

9. The module does not enter or output plaintext CSPs.

## Vendor imposed security rules

In FIPS-CC mode, the following rules shall apply:

1. When FIPS-CC mode is enabled, the operator shall not install plugins.
  - a. Checked via CLI using “show plugins installed”
2. When FIPS-CC mode is enabled, the operator shall not use TACACS+. RADIUS may be used but must be protected by TLS protocol.
  - a. Checked via CLI using “show deviceconfig” command

Failure to follow these Security Rules will cause the module to operate in a non-compliant state.

## Key to Entity

The cryptographic module associates all keys (secret, private, or public) stored within, entered into or output from the module with authenticated operators of the module. Keys stored within the module are only made available to authenticated operators via TLS or SSH. Keys are only input or output from the module by the authenticated operator via a SSH or TLS protected communication. Any attempt to intervene in the key to entity relationship would require defeating the module TLS or SSH encryption and authentication/integrity mechanism.

## 12. Mitigation of Other Attacks

The module is not designed to mitigate any specific attacks outside the scope of FIPS 140-3. These requirements are not applicable.

## 13. References

[FIPS 140-3] FIPS Publication 140-3 Security Requirements for Cryptographic Modules

[AGD] Panorama Administrator’s Guide Version 11.0

## 14. Definitions and Acronyms

AES – Advanced Encryption Standard  
CA – Certificate Authority  
CLI – Command Line Interface  
CO – Crypto-Officer  
CSP – Critical Security Parameter  
CVL – Component Validation List  
DB9 – D-sub series, E size, 9 pins  
DES – Data Encryption Standard  
DH – Diffie-Hellman

DRBG – Deterministic Random Bit Generator  
EDC – Error Detection Code  
ECDH – Elliptical Curve Diffie-Hellman  
ECDSA – Elliptical Curve Digital Signature Algorithm  
FIPS – Federal Information Processing Standard  
HMAC – (Keyed) Hashed Message Authentication Code  
KDF – Key Derivation Function  
LED – Light Emitting Diode  
RJ45 – Networking Connector  
RNG – Random number generator  
RSA – Algorithm developed by Rivest, Shamir and Adleman  
SHA – Secure Hash Algorithm  
SNMP – Simple Network Management Protocol  
SSH – Secure Shell  
TLS – Transport Layer Security  
USB – Universal Serial Bus  
VGA – Video Graphics Array