


[FOSDEM AV Manual](#)  
[FOSDEM Video](#)

February 21, 2026



# **FOSDEM AV Manual**

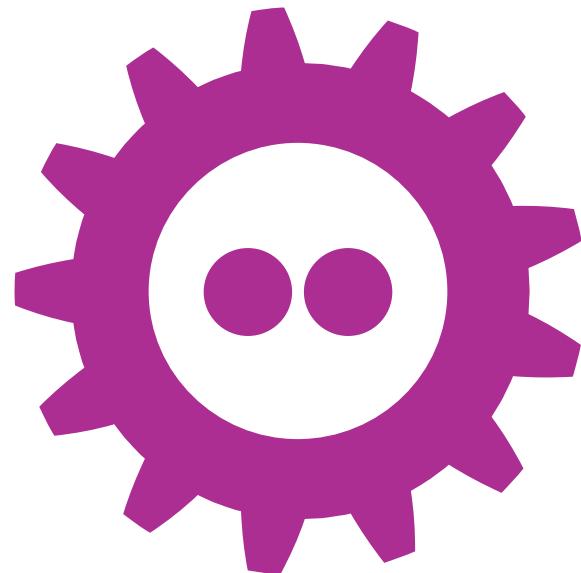

## Contents

<b>1</b>	<b>People</b>	<b>4</b>
1.1	AW, H, K, U and J teams . . . . .	4
1.2	Video operations control or VOC . . . . .	5
1.3	In the devroom . . . . .	5
<b>2</b>	<b>Monitoring and control of video streams</b>	<b>5</b>
2.1	General overview . . . . .	6
2.2	Per-room control . . . . .	6
<b>3</b>	<b>Rooms</b>	<b>8</b>
3.1	Teardown instructions . . . . .	11
3.2	Small rooms . . . . .	13
3.2.1	Cabling diagram . . . . .	14
3.3	Large rooms . . . . .	15
3.3.1	Cabling diagram . . . . .	16
3.4	Extra large rooms . . . . .	17
3.4.1	Cabling diagram . . . . .	18
3.5	Packing and storing equipment . . . . .	19
<b>4</b>	<b>FOSDEM video boxes</b>	<b>19</b>
<b>5</b>	<b>Tripod</b>	<b>20</b>
<b>6</b>	<b>Camera</b>	<b>21</b>
6.1	Standard camera settings and quick checklist . . . . .	21
6.2	Camera setup for a room . . . . .	21
6.2.1	Screw camera on mount . . . . .	21
6.2.2	Power and HDMI connectors . . . . .	21
6.2.3	Microphone . . . . .	22
6.2.4	Power on . . . . .	22
6.2.5	Factory default settings . . . . .	23
6.2.6	Audio settings . . . . .	23
6.2.7	Audio levels . . . . .	24
6.2.8	Video output configuration . . . . .	24
6.2.9	Remove the lens cover . . . . .	25
6.2.10	Checklist . . . . .	26
6.2.11	Contact control . . . . .	26
<b>7</b>	<b>During the event</b>	<b>26</b>
<b>8</b>	<b>System infrastructure overview</b>	<b>28</b>
8.1	sproxy . . . . .	29
8.2	video-box . . . . .	29
8.3	video-voctop . . . . .	29
8.4	video-control-server . . . . .	30
8.5	video-audio-parser . . . . .	30
8.6	video-streambackend . . . . .	31
8.7	video-streamfrontend . . . . .	31
8.8	video-streamdump . . . . .	31
8.9	HLS player . . . . .	31



<b>9 Historical notes</b>	<b>31</b>
9.1 mod_nginx_rtmp . . . . .	31
9.2 multicast . . . . .	31



## 1 People

Video is a big task, so there are many people working together to make it all happen. Here's all the teams:

### 1.1 AW, H, K, U and J teams

You should be a team of at least three per building: AW, H, K, U respectively. J has a dedicated knowledgeable volunteer.

Video coordination happens through the following channels:

- Fixed telephony - phone number 200 calls the NOC.
- Fixed telephony - phone number 2XX calls the closest VOC.
- Fixed telephony - you'll have a phone directory for with phones for all rooms and VOCs.
- Matrix - #video-backstage:fosdem.org is the general channel for announcements and general issues.
- Matrix - #video:fosdem.org is the general channel for visitors, online viewers, etc. for reporting issues and asking questions.
- Matrix - there will be separate per-building Matrix rooms for discussions about the building, sound checks, etc..
- Matrix - there are the standard channels for devroom-managers, volunteers and volunteers-backstage, where people also report issues.

For invites to all to the matrix channels, please contact the NOC people to invite you.

Your tasks before the conference starts:

- (Friday) take the equipment to the rooms in your building
- (Friday) work from the biggest to the smallest room
- (Friday) do basic setup: cam, sound, plug in cables, basic audio checks with microphones, ... See below for details.
- (days of the conference) ensure the rooms are ready before the first talk starts

During the day, you'll have a fixed spot in the building. The below spots should also appear in <https://nav.fosdem.org>.

- AW: AW.1125
- K: Floor 4 between K.4401 and K.4201
- H: room H.2111
- UB: room UB4.228

Your job during the conference, with the backup from the VOC team, is to do the following in your building:

- monitor video and update scene if necessary. See the “Monitoring and control of video streams” section for more details;
- assist speakers and respond to problem reports in the building;
- proactively fix problems with video. In some rooms, this includes preventatively replacing batteries!



## 1.2 Video operations control or VOC

You are in the NOC in the K building or in the VOC of a building.

Your job is to constantly monitor all the equipment and streams for problems, and to arrange fixes for any that occur. You have visual monitoring of all audio streams.

You have methods for contacting all relevant parties. The preferred one for issues that require quick reaction is the stationary phone to call the relevant people, or in person, if they're in your VOC.

- monitor video and update scene if necessary. See the “Monitoring and control of video streams” section for more details;
- monitor matrix channels for problem reports;
- answer the phone in the VOC for bug/problem reports;
- communicate with dispatch and NOC/VOCs about room-related issues - closing/opening rooms, etc..

Do not run out to fix problems yourselves. Delegate to the per building teams. Maintaining contact between everyone is your main priority.

For more details on the monitoring, see “Monitoring and control of video streams”.

## 1.3 In the devroom

If you are volunteering to be a camera operator inside a devroom, please:

- stay near the video equipment, keeping it safe (from people tripping over cables for example!)
- make sure the camera is aimed at the speaker
- monitor the devroom video/audio feeds (headphones!) for problems
- signal problems to VOC via matrix

Please do *NOT* disconnect or turn off any equipment yourself. That is the task of the per building team only.

## 2 Monitoring and control of video streams

There should be the following monitoring available:


- Page with video previews of camera, slides and mix streams, with sound levels. It can show all rooms, or a single building.  
This is the main tool and is available at <https://control.video.fosdem.org/showbuilding.php>;
- Grafana with audio levels of the camera's input, for all rooms and selectable for a set of rooms;
- Ability to stream every box's stream to check for issues in video or audio - this usually an `mpv` invocation;
- Control interface for the video mix, to select the scene to be shown, at <https://control.video.fosdem.org/> with user and password. Request access from NOC or your per-building video responsible person;
- (TBD) Host-level monitoring for all involved infrastructure, to see network outages and such.

Access to those systems is provided on Friday. Every per-building team should have a way to see the monitoring well enough, either via the in-room beamer, or some spare large screen.



## 2.1 General overview

The `showbuilding.php` looks like this:

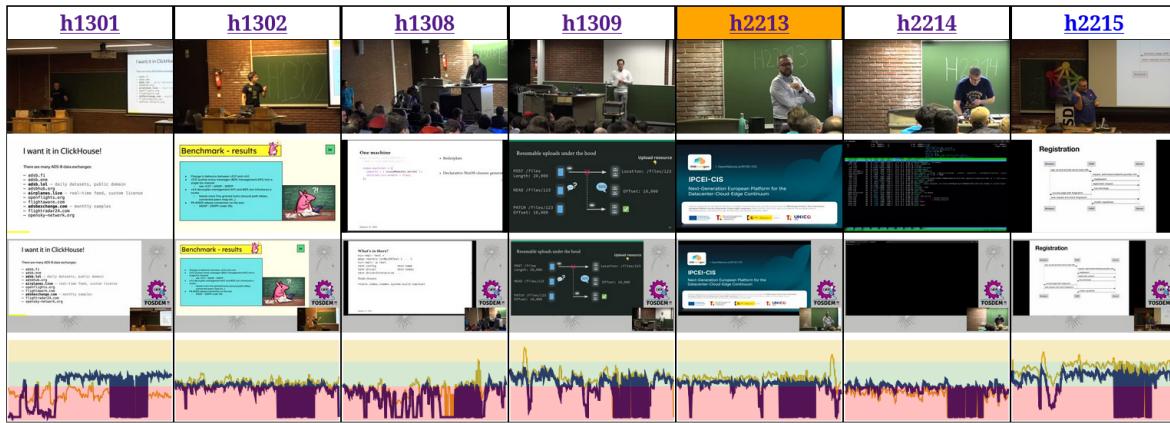

On top, you can select the buildings to see.

For each room in the building, from top to bottom:

- Room name. Its background is white if the sound levels are ok, red if there is no data, and yellow if the audio levels are not within the defined boundaries;
- Snapshot of the camera input, updated every 2-3 seconds;
- Snapshot of the slides/laptop input, updated every 2-3 seconds;
- Snapshot of the mixed stream output from the video mixer, updated every 2-3 seconds. This is what gets sent to the viewers of the streams;
- Graph of the levels of the sound. The blue line is the microphone input, the green-yellow is the room ambiance level picked from the camera internal microphone.

The three bands on the sound levels are, from top to bottom:

- Yellow band, from 0 dbm to -14 dbm - peaking/too high;
- Green band, from -14 dbm to -30 dbm - ok;
- Red band, below -30 dbm - too quiet or missing;

The sound levels for the microphone input during a talk need to be in the middle (green) band. It's good for the levels from the camera also to be in that band during a talk.

## 2.2 Per-room control

The per-room control looks like this:



[home](#) | Room aw1120

Room Status:

side-by-side presenter	side-by-side slides
fullscreen presenter	fullscreen slides

Mixer on [box43.video.fosdem.org](http://box43.video.fosdem.org); [Grafana](#)

Inputs (pre-fader)

IN1	IN2	IN3	PC

Outputs (post-fader)


Stream

Camera

Slides

Audio

Cambox box43.video.fosdem.org Slidesbox  
box80.video.fosdem.org

The "room status" on top is used to set if the room is either full or not. It's mostly for use for the devroom managers.

The 4 buttons below control the video mix:

- side-by-side presenter - picture in picture, large slides, small camera view. This is the default
- side-by-side slides - picture in picture, large camera, small slides view.
- fullscreen presenter - the camera view on full screen.
- fullscreen slides - the slides view on full screen.

On the right side there is a preview of the current streams, same as in `showbuilding.php` above. Below that is a graph of the output levels, same as described above.

Below that there's a link to a Grafana instance with all levels.

On the bottom left there is the audio mixer control. It's split in two parts - input and output.

The inputs are the three input on the box, and PC is the analog input from the HDMI capture card (the sound channel split from it). It carries either the camera audio (for a cambox) or the presenter's audio from their HDMI output (for the slides box).

The outputs are to the camera, to the room PA, and to the left/right channel of the headphone jack (for monitoring purposes).

For each slider, there's the current setting and the level at the moment, that should be moving in almost-real-time.

At the inputs, below the sliders there's a checkbox to select to which output channels the input channel gets sent.



### 3 Rooms

We have 30 rooms: 13 small, 15 large and 2 extra large rooms.

For the extra-large rooms (Janson, K.1105) we use ULB's audio for both input (microphones) and output (PA).

For the large rooms, we use the room's PA and our own microphones.

For the remaining rooms, we provide our own PA and microphones.

- AW: AW1120 (S), AW1121 (S)
- K: K1105 (XXL), K3201 (S), K3401 (S), K3601 (S), K4201 (S), K4401 (S), K4601 (S)
- H: H1301 (L), H1302 (L), H1308 (L), H1309 (L), H2213 (S), H2214 (S), H2215 (L)
- UA: UA2214 (L), UA2118(L), UA2220 (L), UB2147 (S), UB2252A (L)
- UB4: UB4132 (S), UB4136 (S), UB5132 (L), UB5230 (L)
- UD: UD2120 (L), UD2208 (L), UD2218A (L)
- UD6: UD6215 (L)
- J: Janson (XXL), J.1106 (S, spare)

Every room has one gray box with the equipment needed to setup the room. The box is labeled with the room number and includes a checklist with all equipment inside and a checklist for the setup.

The checklist is the main pointer on how to setup the room. There's a copy below without the room-specific details for where the cable runs are and the camera placement.



---

### Video buildup checklist for room **ROOM\_NUMBER**

---

#### **Anything not included / wrong in the box? Leave feedback on this paper**

- [ ] Bring equipment to room ROOM\_NUMBER
- [ ] Unpack tripod
- [ ] Place tripod at CAMERA\_POSITION
- [ ] Level tripod
- [ ] Install camera on tripod
- [ ] Connect camera power and install camera battery
- [ ] Set INPUT1 to LINE on 1st slider, EXT on 2nd slider, MAN on 3rd slider
- [ ] Set INPUT1 to 5 on volume knob
- [ ] Set INPUT2 to MIC/MIC +48V on 1st slider, INT MIC on 2nd slider, MAN on 3rd slider
- [ ] Set INPUT2 to 5 on volume knob
- [ ] Set camera resolution to 1920x1080 and refresh rate to 50p
- [ ] Remove lens cover of camera
- [ ] Install camera box (odd number) on tripod with zip ties
- [ ] Connect camera box (odd number) to power
- [ ] Connect camera to camera box with HDMI cable
  
- [ ] Install slides box (even number) on desk
- [ ] Connect slides box (even number) to power
- [ ] Connect internet (red cable left by the network team) to any port on slides box
- [ ] Connect speaker(clip-on) micropohone to IN3 on slides box
- [ ] Connect audience(handheld) microphone to IN2 on slides box
- [ ] Connect short XLR cable from OUT2 on slides box to room audio or FOSDEM-provided loudspeaker
- [ ] Connect charging cables from slides box USB ports to microphone receiver's batteries
- [ ] Connect charging cables from slides box USB ports to microphone transmitter's batteries - Always have batteries charging
- [ ] Connect HDMI cable from slides box HDMI LOOP to room projector - may need to use HDMI->VGA converter
- [ ] Connect HDMI cables to slides box HDMI IN port to be used by presenter - leave other end on desk
- [ ] Connect XLR cable from OUT1 on slides box to INPUT1 on camera - check suggested cable route at bottom
- [ ] Run ethernet cable from any port on slides box to any port on camera box - check suggested cable route at bottom
  
- [ ] Connect headphones to camera
- [ ] Write room name on the whiteboard to point camera to
- [ ] Point camera to where speaker will be without getting presentation in frame
- [ ] Mark on floor where speaker should be (skip for Janson, K.1105 and H.2215)
- [ ] Leave signs folder on desk next to slides box
  

#### **Tests**

- [ ] Make sure you see picture on camera box
- [ ] Make sure you see picture on slides box and projector when there's signal present
  
- [ ] Talk into all microphones and check levels
  - [ ] Within 80% on camera
  - [ ] No noise
  - [ ] Audible in room
  - [ ] No feedback - make sure to walk around with microphones
  
- [ ] Repeat microphone test with VOC
  - [ ] Ask VOC member to call you, in Matrix



---

Video buildup checklist for room **ROOM\_NUMBER**

---

- Make sure that a VOC member had ACKnowledged your request
  - When a VOC member is available, they'll call via Matrix
  - Test both mics and confirm levels
- 
- Make sure VOC sees both video sources
  - If no issues are seen from VOC, connect microphone batteries to chargers
  - Tape this checklist to camera box**
- 

Suggested route for XLR and network cable is as follows: CABLE\_RUN



### 3.1 Teardown instructions

This is the best layout for the pelicanases, videoboxes (and their PSU's) and fit everything else around or above it.

- Roll up each cable and put it back it's bag
- Be sure to put the room box contents checklist at the very top inside of the box once you're done





### 3.2 Small rooms

These have a projector and a tie pin microphone for the speaker. Audience questions must be repeated by the lecturer to be recorded properly.


A loudspeaker is also connected to amplify the lecturer for the room.

The connections there are as follows:

- Network cable (video VLAN) to the presenter box (any port)
- Network cable from the presenter to camera box (any port, one on each box)
- camera to AC power
- Microphone receiver for the speaker microphone to channel IN 3 of the mixer of the presenter's videobox
- XLR cable from the OUT 1 channel of the audio mixer of the presenter's videobox to channel 1 (LEFT) of the camera
- XLR cable from the OUT 2 channel of the audio mixer of the presenter's videobox to our loudspeaker
- USB power bank to the microphone receiver
- HDMI from the camera to the HDMI IN port of the video box
- HDMI cable from the presenter box HDMI OUT to the beamer in the room (if the beamer is HDMI)
- HDMI cable from the speaker's laptop to the HDMI IN port of the presenter box



### 3.2.1 Cabling diagram

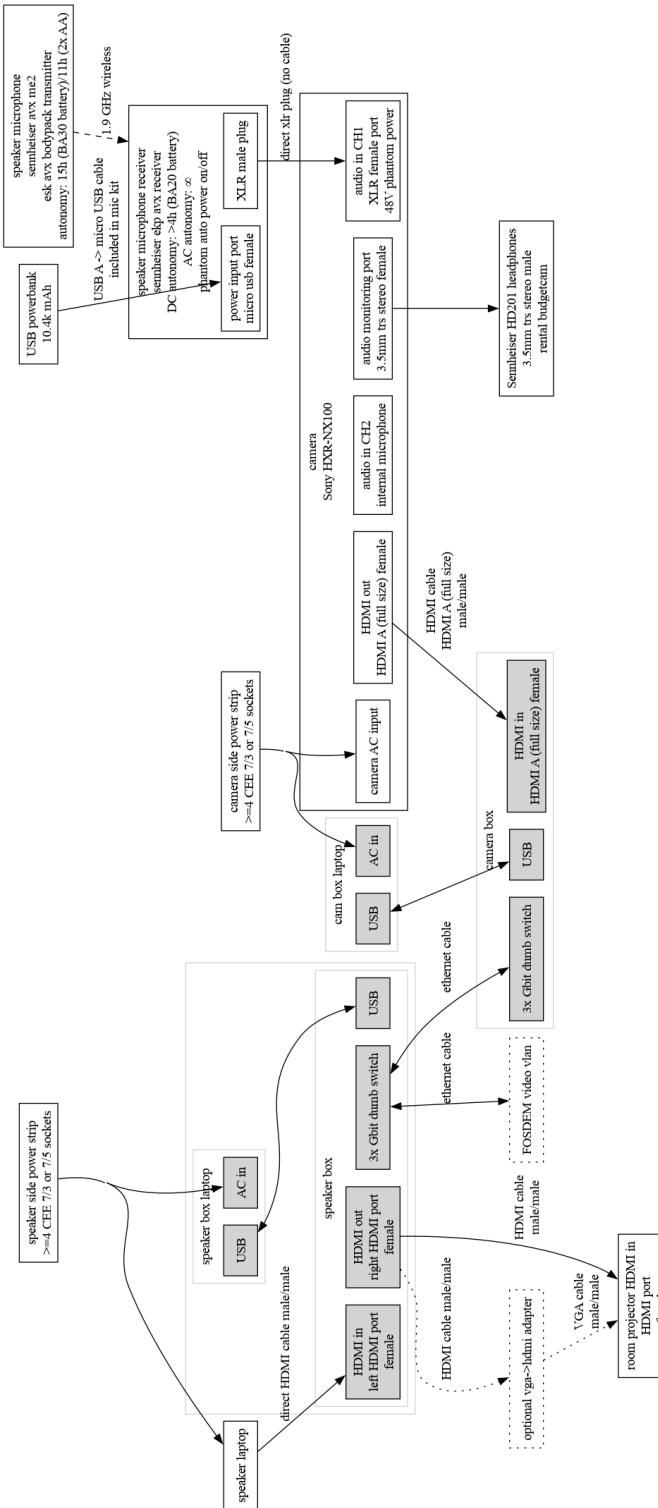

FOSDEM 2024 112 small rooms video cabling setup:  
aw1120, aw1121, aw1125, aw1126, h2213, h2214, k3201, k3401, k4201, k4401, ud2119



### 3.3 Large rooms


These have a projector, a tie pin mic for the speaker and an audience microphone. They use the Sony HXR-NX100 camera. For the rooms that don't have a PA, there's also a dedicated loudspeaker.

The connections there are as follows:

- Network cable (video VLAN) to the presenter box (any port)
- Network cable from the presenter to camera box (any port, one on each box)
- Camera, to AC power
- Microphone receiver for the speaker microphone to channel IN 3 of the mixer of the presenter's videobox
- Microphone receiver for the audience microphone to channel IN 2 of the mixer of the presenter's videobox
- XLR cable from the OUT 1 channel of the audio mixer of the presenter's videobox to channel 1 (LEFT) of the camera
- XLR cable from the OUT 2 channel of the audio mixer of the presenter's videobox to the room PA
- USB for charging from the presenter's videobox charging ports to the receivers in the mixer of the presenter's videobox
- HDMI from the camera to the HDMI port of the camera videobox
- HDMI cable from the presenter's video box HDMI OUT to the beamer in the room (if the beamer is HDMI)
- HDMI cable from the speaker's laptop to the HDMI IN HDMI port of the presenter's videobox



### 3.3.1 Cabling diagram

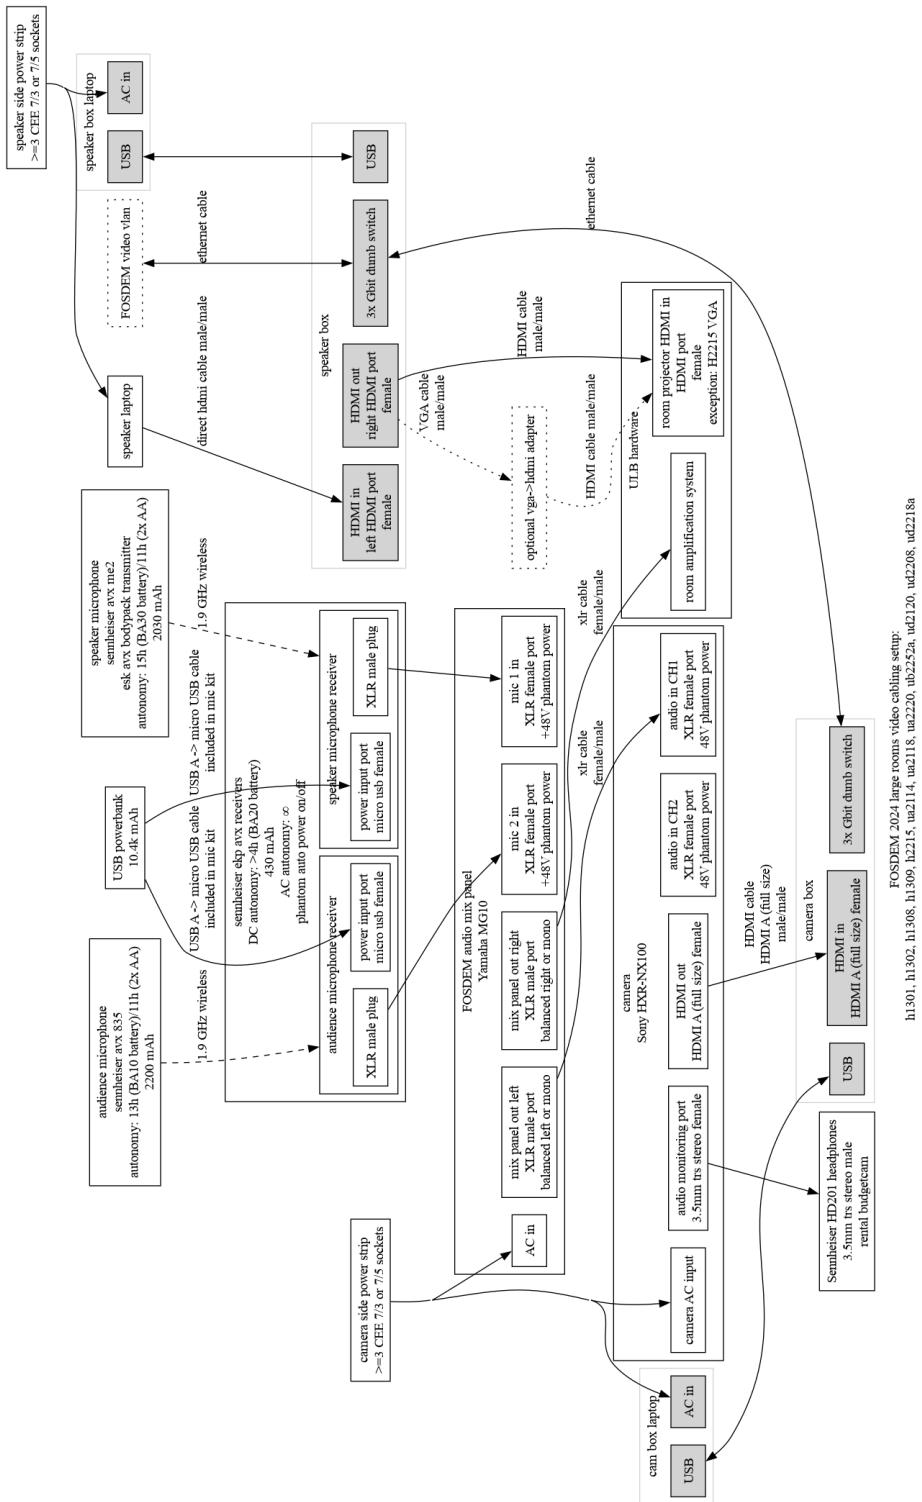



### 3.4 Extra large rooms


It has a projector, and all audio is handled by ULB. They use the Sony HXR-NX100 camera.

The connections there are as follows:

- Network cable (video VLAN) to the presenter box (any port)
- Network cable from the presenter to camera box (any port, one on each box)
- Camera, to AC power
- XLR cable from ULB's audio mixer to channel 1 (LEFT) of the camera
- XLR cable from the OUT 2 channel of the audio mixer of the presenter's videobox to the room PA
- HDMI from the camera to the HDMI port of the camera videobox
- HDMI cable from the presenter's video box HDMI OUT to the beamer in the room
- HDMI cable from the speaker's laptop to the HDMI IN port of the presenter's videobox



### 3.4.1 Cabling diagram

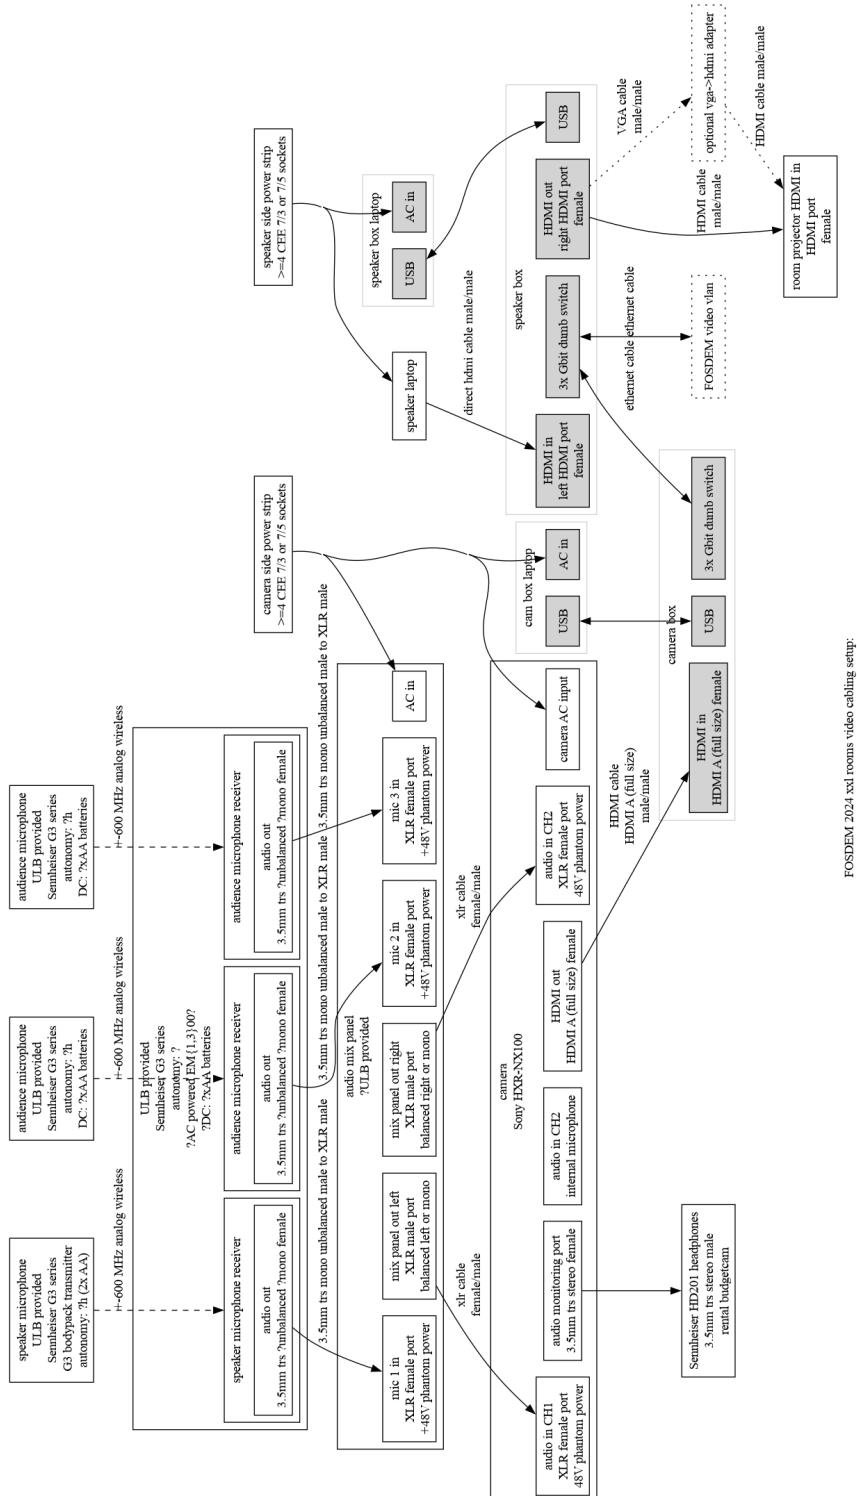

FOSDEM 2024 xxl rooms video cabling setup:  
janson, k1105



### 3.5 Packing and storing equipment

Each room has its designated video gear box for storing all non-rented equipment. Follow this sequence for efficient packing:

1. Position the videoboxes vertically in one corner of the box
2. Place the small Peli case (typically containing tie pin mic) vertically next to the videoboxes
3. Position the large Peli case (typically containing hand mic) on the opposite side of the videoboxes
4. Add the videobox power supply units
5. Fill remaining spaces between and above with other equipment

*Note:* Ensure each Peli case, videobox and laptop is returned to its original box, matching the IDs on the equipment with those listed in the box's checklist.



## 4 FOSDEM video boxes

The FOSDEM video box will take care of the streaming and recording. There is no need to operate the controls on the camera (once on and in the correct video mode, which the setup team will have done). The setup team should also have connected the following:

- at least one network cable
- a power cable, connected to mains, with the box already turned on
- slides boxes (the one for the speaker) only:
  - The right HDMI connection should be connected to the projector (HDMI loop out)
  - The left HDMI connection should have a loose HDMI cable, for connecting to the presenter laptop (HDMI in)



- Cam boxes only:
  - An HDMI cable to the (powered on) camera

Order of connections and powering on does not matter, each order will work. There is no need to reboot the box after connections have changed. Fully booting the box takes about a minute, and it should show its status on the display, which every few seconds is replaced with the video input it receives.

*Do not attempt to power off the box unassisted, as this may damage the integrity of the system.* If you suspect it may be malfunctioning and there is not enough diagnostic information, contact the control and monitoring team (see chapter “During the event” for full details). They may already be aware of the problem, but quick reporting helps cut down on reaction times.

While the box contains a network switch (all four ports are connected), *do not connect your own equipment* to the box. The boxes are on a special subnet with reserved bandwidth for the video streaming, and any other equipment may compromise the quality of the broadcast.

*The boxes have only HDMI input and HDMI output.* For lecturers with only VGA outputs, the per-building video team is required to ask them for their time machine license registration. Mini-DP and some other connectors might be available with the per-building team. The HDMI signal is automatically scaled to 1080p (1920x1080) at 50Hz. Matching this on the presenter laptop is a good idea, but not a requirement.

*The display on the box will show all vital information about the current status of the box.* It shows a snapshot of the stream video, replaced with signal and its network status (connected/disconnected), the recording status (yes/no), the streaming status (yes/no) and others every few seconds. The sides of the display show the audio levels of the built-in audio mixer.

The boxes report all this information to control while their network status is good, where the control and monitoring team keeps an eye on all rooms. If something is wrong, they may send somebody your way to correct it. Please follow the instructions (if any) of video team members. Keeping an eye on the box vitals and correcting any problems you notice is encouraged.

## 5 Tripod

We use the Manfrotto MVH 502. This should hopefully be self-explanatory. Please offer feedback to VOC if that is not the case.



## 6 Camera

FOSDEM will uses one camera model: the Sony HXR-NX100.

### 6.1 Standard camera settings and quick checklist

Resolution	1920x1080
Refresh rate	50p
MIC-CHANNEL1(left)	Speaker and audience microphone
MIC-CHANNEL2(right)	Internal microphone
Power source	Cable AND Battery
Lens cover	Remove!
Camera/Tripod	Cam must be attached to tripod plate

### 6.2 Camera setup for a room

#### 6.2.1 Screw camera on mount


Screw the camera onto the tripod. Every camera has a screw hole at the bottom that can be used for this. The plate has a distinct “point camera in this direction” arrow, pay attention to this. The screw can be tightened by a coin or similar object.



#### 6.2.2 Power and HDMI connectors

First plug in the battery at the back, then plug in both the HDMI and the power cable. Both connectors can be found next to each other to the right of the battery slot at the back. Look at the picture if you're unsure.

Do not forget to hook up the other end of the HDMI cable to the FOSDEM Video Box and the power cable into the mains.

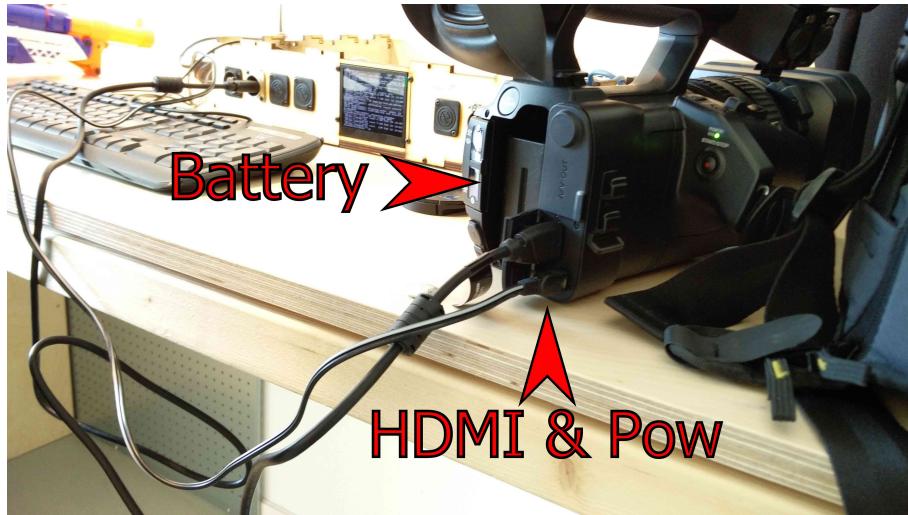

#### 6.2.3 Microphone

Plug the XLR cable from the audio mixer (in the slides box) output or ULB's audio system (for J and K.1105) into Input1. This is the main audio input and audio stream that's provided to the outside world.



#### 6.2.4 Power on

You can find the power button on the left side of the camera (looking from behind). Look in the bottom right corner.



### 6.2.5 Factory default settings

Does the camera ask for a time and date? Then you can skip this section, as it already is on factory default settings. Does the camera NOT ask for a time and date? Then we have to reset things.

First we reset all but the picture profile settings to factory default: Menu → “Others” (three drawers icon) → Initialize → OK.

Now we set date/time. Not important. Just click the SET button a few times to get through this.

Then we reset picture profile 4 (the default picture profile) to factory default: Menu → Camera set (camera icon) → Picture profile → PP4 → Setting → Reset → Yes.

### 6.2.6 Audio settings

The audio settings can only be done through the hardware switches on the camera. Make sure to set the switches to the correct positions, as these directly affect the availability of audio on the recordings and live streams. Wrong settings means no audio! If unsure, verify with the image below.

Input	Left switch	Middle switch	Right switch	dial
Input1	BOTTOM (Mic 48V)	MIDDLE (EXT MIC)	BOTTOM (MANUAL)	5
Input2	BOTTOM (Mic 48V)	TOP (INT MIC)	BOTTOM (MANUAL)	5



### 6.2.7 Audio levels

To configure the audio levels, use the following procedure for small rooms:

- Set the levels to 5 for both channels;
- For the internal camera microphone (channel 2, small rooms) talk loud near the camera and make sure the levels don't go over the end (using the dial);
- For channel 1 (speaker microphone) yell while wearing the microphone and make sure the levels don't go over the end (using the dial);

For the other (large, XXL) rooms:

- Set the levels to 5 for both channels;
- For the speaker microphone yell while wearing the microphone and make sure the levels don't go over the end, adjusting from the mixing console;
- For all the other microphones, talk moderately loudly while adjusting the microphones, making sure that they don't go over the top;
- Adjust the overall volume for the room to be audible as much as possible without creating feedback;
- Additionally test for feedback while moving with the microphone around the PA system in the room and adjust accordingly.

### 6.2.8 Video output configuration


The video configuration will be done through the on-screen display.

Set up like this:

Menu → 2nd icon (two arrows) → Video out → HDMI → 1080p.



The resolution information displayed on the OSD relates to recording to the SD card, which we do not use.  
*Ignore this text*, as the video output config is completely separate from the recording setting on this model.

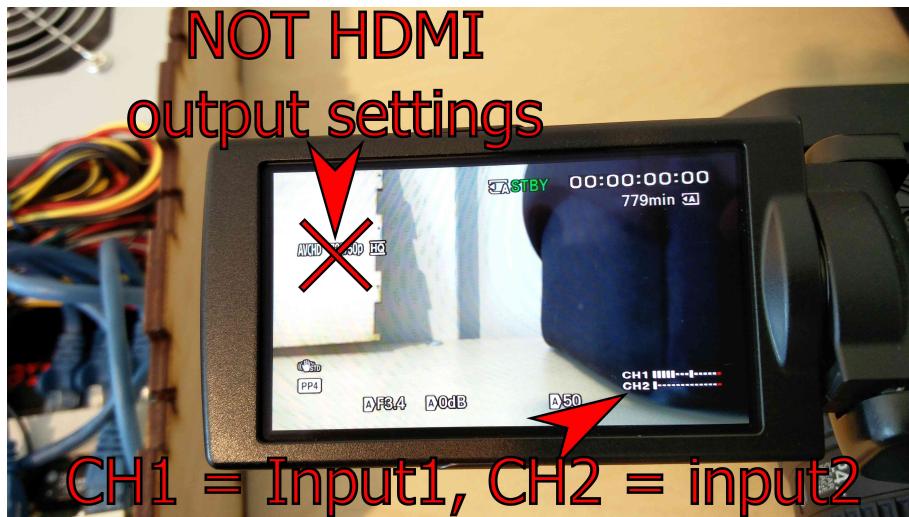

For rooms with low light conditions only, press button 3 (LOWLUX) to have the camera auto adapt to low light levels. A candle icon appears in the bottom right corner of the OSD screen.

#### 6.2.9 Remove the lens cover

*Do not forget to remove the lens cover.* Store it in the camera bag for safe keeping.



#### 6.2.10 Checklist

Please check the following before leaving:

- Does CH1 on the camera display spike when you tap the (powered on) wireless speaker microphone?
- Does CH2 on the camera display spike when you tap the camera itself with your fingers?
- Turn off the wireless speaker microphone before leaving to conserve battery power for during the day.
- Do both video boxes say mode 1080p50 on the LCD display?
- Does the camera video box display the camera image on the LCD display?

If any of these do not work, re-check your connections and settings. Still no luck? Contract VOC!

#### 6.2.11 Contact control

When you have finished setup of the room, please report to VOC for a full test. They will let you know what rooms still need attention.

## 7 During the event

It is expected of the devroom video volunteers that they keep an eye on the following, in order of importance:

- The wireless speaker mic is on during talks
- The wireless speaker mic is worn correctly (see below)
- The audio volume is not too low or too high (clipping is bad!)
- The camera is aimed at the speaker, *not* the projection screen (the projection screen is captured separately!)
- None of the video equipment is stolen or tampered with
- The video boxes/laptops are turned on and have OK network status.

The main task is ensuring audio quality. Video quality, while important, is only a secondary concern. A recording without video is still usable, but a recording without audio is completely useless.

The correct way to wear a lapel mic is as follows:




- The microphone is attached at speaker's clothes near the neck, under the chin (centrally);
- There are no necklaces or lanyards that would touch it during the talk;
- There are no scarves or similar that cover the microphone or will touch it;
- The microphone is attached to the topmost layer of clothes (so there's nothing above it that would touch it);
- If there is no place where the microphone can be attached, a lanyard can be used for this purpose, on top of all the clothing of the speaker;
- The microphone receiver is attached to the belt of the speaker. If not possible, it's attached on top of a pocket;
- If the speaker has neither a belt nor pockets, he/she can hold the receiver in hand, or worst case scenario, it can be attached with duct tape to the waist (with a full loop around the waist) (*this is a joke, do not duct-tape speakers*)
- The speaker is notified that if he's not facing in the direction of the microphone (e.g. not looking straight) the audio will be less audible.

Video team members will be both monitoring remotely as well as visiting rooms with problems. If you have questions, concerns or problems and there is no video team member nearby, contact them in [FOSDEM Video](#). If your video box shows issues on the LCD, most likely somebody is already on their way to you. When communicating with video team members, please mention the *room number* as opposed to the devroom name. Devrooms move around, room numbers stay constant.



## 8 System infrastructure overview

FOSDEM video, overview schema

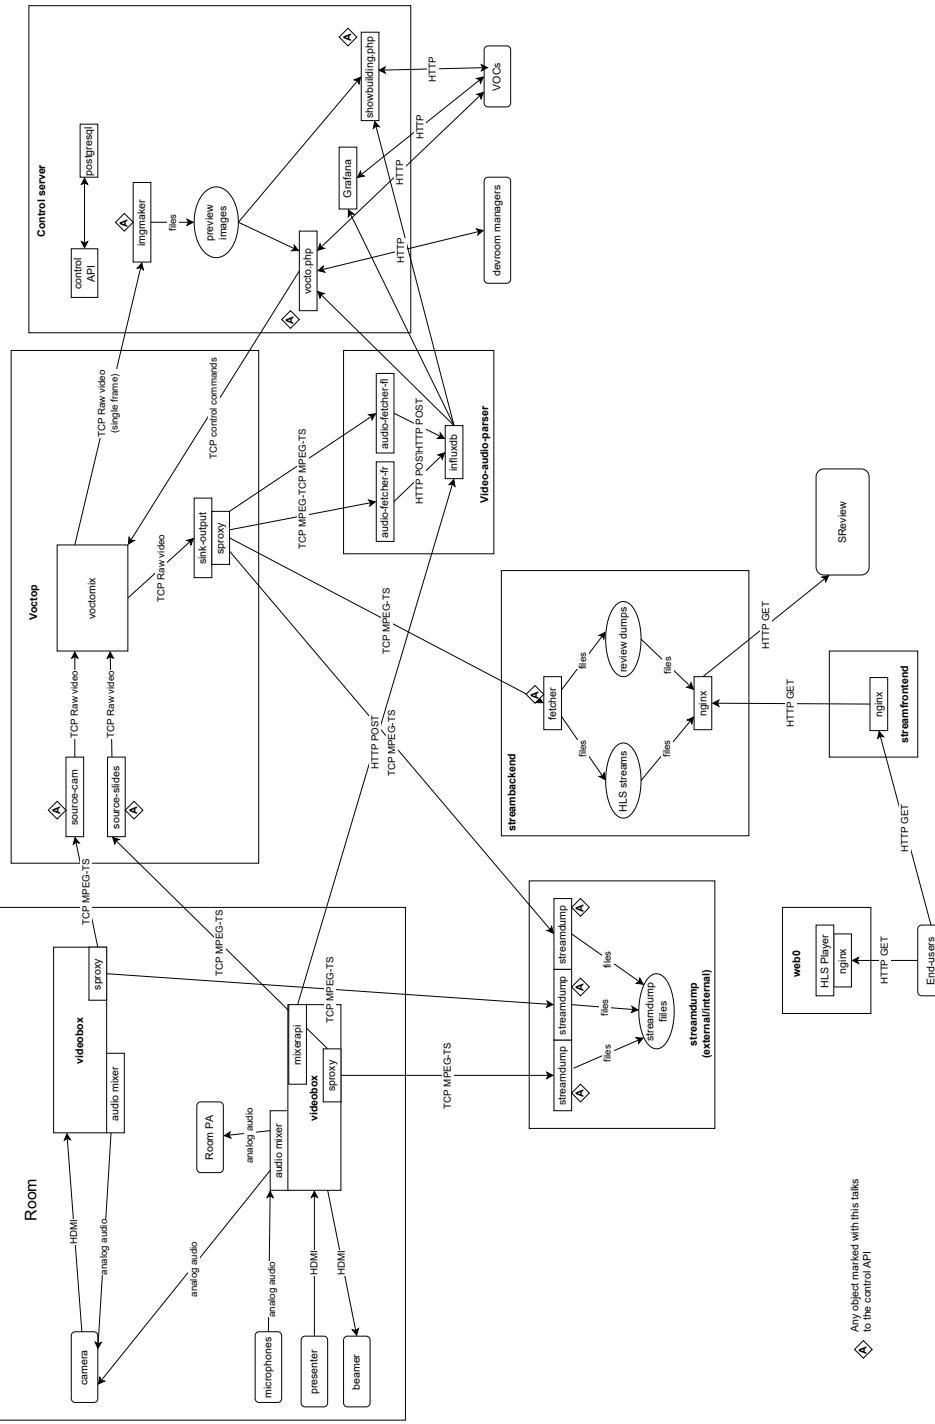



Above is a general schema of the setup.

This section explains how the video streaming and recording works in general for FOSDEM, to use as a helper to understanding the system and dealing with issues.

The system's code and recipes for deployment are available in FOSDEM's GitHub repo **infrastructure**, in the **ansible** subdirectory.

Below is a list of components (some software, some whole-system) that are the pieces of the whole thing.

## 8.1 sproxy

**sproxy** is a small piece of software available in <https://github.com/FOSDEM/sproxy> and FOSDEM's Debian package repository. It's written in C and its role is to receive a stream of bytes on `stdin` in a ring-buffer and provide the following TCP endpoints (up to 32) to clients:

- Port 8899 - this provides the stream from the current point onward. This is used for normal video clients that want to access the stream as it's being pushed at the moment;
- Port 8898 - this provides the stream with half of what's currently in the buffer, to allow clients to quickly start displaying the stream. This is used mostly for debug purposes, as it just makes it faster to find a keyframe;
- Port 80 - this provides the stream from the current point onward, after it receives some HTTP headers. This was implemented for compatibility with some streaming devices for the 2020 edition.

The main use of **sproxy** is to allow multiple clients to access a MPEG-TS encapsulated video (H.264, AAC) in real time without the need of any previous setup. MPEG-TS allows this, as it's not relevant when in the stream the client starts reading, as the encapsulation is self-synchronizing.

**sproxy** is the successor of multicast UDP running over the network, as that proved to create hard to debug problems with even moderate packet loss (which TCP doesn't have).

## 8.2 video-box

Implemented in role `video-box`.

The `video-box` is in general a capture device that provides `sproxy` interface from its video and audio capture, plus some monitoring functions.

In the box you can find:

- HDMI capture device, based on the MacroSilicon MS2131 chip. The two HDMI ports on the box are connected to it;
- A 5-port Ethernet switch;
- A 5-port audio mixer with 2 XLR outputs and 3 XLR inputs, all for line level;
- A power-board that handles powering all the components and provides 4 x USB-A power ports at 250 mW and one USB-A port that should be pass-through to the control board;
- A Radxa X4 board, which controls everything (a normal x86\_64 single-board computer);
- A three-section display;

## 8.3 video-voctop

Implemented in role `video-voctop`.

The `voctop` is the video mixer that fetches the streams for the camera and presenter from a room, and provides the "finished" video stream to the streaming and recording infrastructure. The finished stream is again presented via `sproxy`.

The mixing is done using `voctomix` (version 1). There are three sources for `voctomix`:



- `cam`, fetched from the box marked to be camera in the room;
- `grabber`, fetched from the box marked to be slides/presenter in the room;
- `background` that contains artwork/the year, and is the thing most forgotten to be updated every year.

All streams are chewed and converted exactly to what `voctomix` requires (raw video, 1080p, 25fps, SAR/DAR 1:1) and via a single `ffmpeg` instance a MPEG-TS stream that contains video streams with 720p and 1080p is provided via an `sproxy` instance.

The reason for mixing both video streams in the same MPEG-TS stream is that the laptop runs out of memory bandwidth if another copy of the raw stream is taken out of `voctomix`, and this also makes the preparation of the HLS easier.

`voctomix` provides control via text protocol on port 9999 which is used by the control server to switch the possible views/mixes of the stream:

- Full-screen camera;
- Full-screen presentation;
- Mix, large top-left presentation, small camera bottom right (the default);
- Mix, large top-left camera, small presentation bottom right;

## 8.4 video-control-server

Partially implemented in role `video-control-server`. Partially, because some of the stuff gets tweaked and updated on the running node before and during FOSDEM.

The following tasks are handled by the control server:

- A database (with interface) of the mapping room→voctop→camerabox→slidesbox. This is queried from the voctops and streambackend to know where to get the data for a particular room;
- A Grafana instance to plot the sound levels;
- A preview page with all rooms (selectable by building) showing camera/slides/mix and sound levels for every room (`showbuilding.php`);
- A control interface for every room for changing the current video mix, controlling the audio mixers and room status (`vocco.php`). It's authenticated with users/passwords provided to devroom managers and VOC people;
- DHCP and DNS server for the video VLAN.

The majority of the traffic to the control server is the fetching of raw video frames from the voctops, and amounts to a steady 300Mbps. This was the initial reason to move this node on-site.

## 8.5 video-audio-parser

Implemented in role `video-audio-parser`.

The following tasks are handled by the video-audio-parser:

- An InfluxDB database with sound levels for voctops and audio mixers (caller `ebur2`)
- Instances of `audiofetcher` that fetch data from the voctops to plot sound levels;



## 8.6 video-streambackend

Implemented in the role `video-streambackend`.

This is a (currently) single physical server outside of ULB that fetches all mixed video streams from the voctops, and creates:

- A HLS stream with two video (selectable) streams for viewing by end users;
- 20-minute dumps of video streams, to be processed by `SReview`

These are both created by using `ffmpeg`. The HLS stream is served via `nginx` to the streamfrontends, and the dumps are served via either `ssh/sshfs` or NFS to `sreview`.

## 8.7 video-streamfrontend

Implemented in the role `video-streamfrontend`.

This is a somewhat simple caching proxy implemented with `nginx` that presents the video streams from the streambackend to end users.

## 8.8 video-streamdump

The `streamdump`'s role is to connect to all video-boxes and all voctops, to fetch the video they provide to record it to be used for restore for emergencies. There is usually one at ULB and one externally.

## 8.9 HLS player

`web0`'s role is to host the HLS player (implemented in JavaScript) that end-users load to play the HLS stream with. It shows the video stream for the relevant room and allows for selecting the video quality that the users want so see.

## 9 Historical notes

Things done in the past that we moved away from:

### 9.1 mod\_nginx\_rtmp

The module is nice, but has serious limitations on multi-audio/video stream processing, strange failures, and at some point didn't have any updates or support. It was used to push from the voctops to the stereambackend. After its removal, all video transfers became pull-based.

### 9.2 multicast

Sending MPEG-TS over UDP over multicast saved bandwidth due to the multiple consumers of every stream. But packet loss in MPEG-TS was leading to subtle issues in `ffmpeg`'s parsing and processing and needing the restart of streams for issues that were hard to catch.

Experiments were done with flow control (didn't help) and reliable multicast (the libraries didn't work, or at least Vasil was unable to make them), but nothing came out of that, so `sproxy` was born.