For Raspberry PI On-Premise IoT / Apache Kafka / TML Deployments:

Author: Sebastian Maurice

Below are suggested configurations — some fields may differ or may not apply
Server environment:zookeeper.version=3.6.1--104dcb3e3fb464b30c5186d229e00af9f332524b, built on 04/21/2020 15:01 GMT
Server environment:java.version=1.8.0_144

1. Install Java

- a. sudo apt-get update
- b. sudo apt install default-jdk
- 2. install TMUX: https://linuxhint.com/install-tmux-ubuntu/
 - a. sudo apt update
 - b. sudo apt-get install tmux
 - c. pkill -f tmux (kills all tmux sessions)
 - d. tmux a -t <session name>

3. Cpu monitoring:

- a. sudo apt update
- b. sudo apt install -y htop

4. Install MySQL:


- a. Sudo apt update
- b. Sudo apt upgrade
- c. sudo apt install mariadb-server
- d. sudo mysql secure installation

5. Install Python

- a. sudo apt-get install -y build-essential tk-dev libncurses5-dev libncursesw5-dev libreadline6-dev libdb5.3-dev libgdbm-dev libsqlite3-dev libssl-dev libbz2-dev libexpat1-dev liblzma-dev zlib1g-dev libffidev tar wget vim
- b. sudo mkdir Python
- c. sudo apt-get install libatlas-base-dev
- d. sudo chown pi:pi /home/pi/Python
- e. cd Python
- f. wget https://www.python.org/ftp/python/3.9.15/Python-3.9.15.tgz
- g. sudo tar -zxvf Python-3.9.15.tgz
- h. cd Python-3.9.15/

- i. ./configure --enable-optimizations
- j. sudo make altinstall
- k. confirm install:
 - i. python -version
 - ii. IF WANT TO REMOVE PYTHON:
 - 1. sudo apt-get clean
 - 2. sudo apt-get autoremove --purge
 - 3. sudo apt-get remove python3.9
 - 4. sudo apt-get autoremove
- 6. install MAADSTML python library
 - a. pip install maadstml
 - b. pip install requests
 - c. pip install nest asyncio
 - d. pip install joblib
 - e. pip install asyncio
- 7. Install TML Technologies for ARM chipset If using Pi 3+, for PI 4 using ARM64 binaries:
 - a. Sudo mkdir viper
 - i. Copy viper (arm or arm64 i.e. cp * /home/pi/viper)
 - b. Sudo mkdir hpde
 - i. Copy hpde (arm or arm64)
 - c. Sudo mkdir viperviz
 - i. Copy viperviz (arm or arm64)
- 8. Start Apache Kafka: ZOOKEEPER
 - a. export KAFKA HEAP OPTS="-Xmx512M -Xms512M"
 - b. Edit zookeeper/conf/zoo.cfg
 - i. tickTime=2000
 initLimit=10
 syncLimit=5
 dataDir=/media/pi/sebusb/zookeeper # Don't put under
 /tmp, it will be deleted.
 clientPort=2181
 - c. Cd to "zookeeper/kafka/bin"
 - d. Enter:./zookeeper-server-start.sh
 - ../config/zookeeper.properties <enter>
- 9. Start Kafka in another terminal
 - a. Kill port: sudo kill -9 \$(sudo lsof -t -i:3000)
 - b. export KAFKA HEAP OPTS="-Xmx512M -Xms512M"
 - c. ./kafka-server-start.sh ../config/server.properties

- 10. VISUALIZATION URL: <u>Make sure to change IP address</u> to the one given to your Raspberry PI:
 - a. http://192.168.2.27:9005/iot-failure-seneca.html?topic=iot-preprocess2,iot-preprocess&offset=-
 - <u>1&groupid=&rollbackoffset=500&topictype=prediction&append=0&secure=0</u>
 - **b**. You should see a dashboard similar to this:

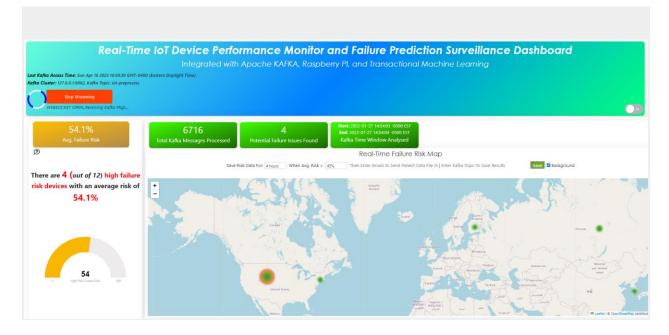

11. Increase swap file

- a. sudo nano /etc/dphys-swapfile
- b. CONF SWAPSIZE=2000
- c. sudo reboot
- **d.** free -m