# For Raspberry PI On-Premise IoT / Apache Kafka / TML Deployments:

**Author: Sebastian Maurice** 

Below are suggested configurations — some fields may differ or may not apply
Server environment:zookeeper.version=3.6.1--104dcb3e3fb464b30c5186d229e00af9f332524b, built on 04/21/2020 15:01 GMT
Server environment:java.version=1.8.0\_144

### MAIN SITE: https://github.com/smaurice101/raspberrypi

#### 1. Install Java

```
a. sudo apt-get update
b. sudo apt install default-jdk

i. If you run into issue uninstall: sudo apt-get autoremove openjdk-11-jre
ii. And reinstall
```

#### 2. install TMUX: https://linuxhint.com/install-tmux-ubuntu/

```
a. sudo apt update
b. sudo apt-get install tmux
c. pkill -f tmux (kills all tmux sessions)
d. tmux a -t <session name>
```

#### 3. Cpu monitoring:

```
a. sudo apt update
b. sudo apt install -y htop
```

#### 4. Install MySQL:

```
a. Sudo apt update
b. Sudo apt upgrade
c. sudo apt install mariadb-server
d. sudo mysql_secure_installation
e. enter: sudo mysql -u root
f. SET PASSWORD FOR 'root'@'localhost' = PASSWORD('new_password');
    i. Replace 'new_password' with raspberry
    ii. GRANT ALL PRIVILEGES on *.* to 'root'@'localhost'
        IDENTIFIED BY 'raspberry';
iii. FLUSH PRIVILEGES;
iv.
```

#### 5. Install Python (follow steps a-j)

```
a. sudo apt-get install -y build-essential tk-dev libncurses5-dev libncursesw5-dev libreadline6-dev
```

libdb5.3-dev libgdbm-dev libsqlite3-dev libssl-dev libbz2-dev libexpat1-dev liblzma-dev zlib1g-dev libffi-dev tar wget vim

- b. sudo mkdir Python
- c. sudo apt-get install libatlas-base-dev
- d. sudo chown pi:pi /home/pi/Python
- e. cd Python
- f. wget https://www.python.org/ftp/python/3.9.15/Python3.9.15.tgz
- g. sudo tar -zxvf Python-3.9.15.tgz
- h. cd Python-3.9.15/
- i. ./configure --enable-optimizations
- j. sudo make altinstall
- k. confirm install:
  - i. python -version
  - ii. IF WANT TO REMOVE PYTHON:
    - 1. sudo apt-get clean
    - 2. sudo apt-get autoremove --purge
    - 3. sudo apt-get remove python3.9
    - 4. sudo apt-get autoremove
- 6. IF REPOSITORY does not install:
  - a. Use: sudo apt-get install software-properties-common
  - b. Sudo apt-get update
- 7. install MAADSTML python library and other libraries
  - a. pip install maadstml
  - b. pip install requests
  - c. pip install nest asyncio
  - d. pip install joblib
  - e. pip install asyncio
- 8. Install TML Technologies for ARM chipset If using Pi 3+, for PI 4 using ARM64 binaries: YOU KEEP ALL THESE IN USB stick
  - a. https://github.com/smaurice101/raspberrypi
    - i. Download TML binaries
    - ii. Put each unzipped files in their folders:
      - 1. Sudo mkdir viper
      - 2. Sudo mkdir hpde
      - 3. Sudo mkdir viperviz
  - b. Copy viper-env-file from https://github.com/smaurice101/raspberrypi/tree/main/viper-env-file
    - i. Replace viper.env file with one above
      - 1. Copy/replace to Viper and Viperviz folder
  - c. IotSolution copy all Python scripts from Github: https://drive.google.com/drive/folders/1wJEufLVtOzu8R- yYh6ybMASAaKkvMaTw?usp=sharing
    - i. Sudo mkdir IotSolution

```
2. preprocess-iot-monitor-customdata.py
                3. preprocess2-iot-monitor-customdata.py
                4. Raw IoT Device Data: IoTData.zip and unzip
                   data
                5. IoT Lat/Longs: downlaofdsntmlidmain.csv
9. Start Apache Kafka: ZOOKEEPER (Store on USB stick)
     a. Sudo mkdir Kafka
     b. Sudo chown pi:pi Kafka
     c. Cd kafka 2.13-3.0.0
     d. Download Kafka: wget
        https://archive.apache.org/dist/kafka/3.0.0/kafka 2.13-
        3.0.0.tgz
     e. tar xzf kafka 2.13-3.0.0.tgz
     f. export KAFKA HEAP OPTS="-Xmx512M -Xms512M"
     g. PATH="$PATH:/home/pi/Kafka/kafka 2.13-3.0.0/bin"
     h. cd bin
     i. Enter: zookeeper-server-start.sh
        /home/pi/Kafka/kafka 2.13-
        3.0.0/config/zookeeper.properties <enter>
          i. Make sure to change zookeeper.properties:
             dataDir=/home/pi/zoodata
10. Start Kafka in another terminal
     a. Kill port: sudo kill -9 $(sudo lsof -t -i:3000)
     b. export KAFKA HEAP OPTS="-Xmx512M -Xms512M"
     c. ./kafka-server-start.sh ../config/server.properties
          i. Make sure to change: log.dirs=/mnt/usb/kafka-logs
11. To SSH in to raspberry pi
     a. Use Raspberry Pi imager and flash OS
          i. https://www.raspberrypi.com/software/
     b. Click setting and enable SSH and Wifi
     c. To manually enable wifi/ssh follow blog here:
          i. https://roboticsbackend.com/enable-ssh-on-raspberry-
             pi-raspbian/
12.Mount USB
     a. Make sure to put USB 3.0 in the right USB port (Raspberry pi has BLUE
        port for USB 3.0, and black for USB 2.0)
     b. Type: sudo ls -l /dev/disk/by-uuid/
     C. Capture uuid i.e. 61AA-D040 (for /sda1 which is usb)
```


1. produce-iot-customdata.py

lrwxrwxrwx 1 root root 15 Feb 20 23:08 37CA-39EC -> ../../mmcblk0p1
lrwxrwxrwx 1 root root 10 Feb 20 23:08 61AA-D040 -> ../../sda1
lrwxrwxrwx 1 root root 15 Feb 20 23:08 a4af13c6-d165-4cbd-a9f6-c961fef8255d -> .
d. ./../mmcblk0p2

- e. Create mount folder: sudo mkdir /mnt/usb
- f. Auto mount usb:
- Q. Open file: sudo nano /etc/fstab
- h. Add line at the end of /etc/fstab:
  - i. UUID=61AA-D040 /mnt/usb vfat uid=pi,gid=pi 0 0
  - ii. Save and exit
  - iii. Reboot: sudo reboot

# To Execute the IoT Solution

- 13. Cd to /mnt/usb/tmux
- 14. Run: ./tmux.sh
  - a. Note you may need to edit
- 15. VISUALIZATION URL: <u>Make sure to change IP address</u> to the one given to your Raspberry PI:
  - $\hbox{a. http://192.168.2.29:9005/iot-failure-seneca.html?topic=iot-preprocess2,iot-preprocess\&offset=-}$ 
    - 1&groupid=&rollbackoffset=500&topictype=prediction&append=0&secure=1
  - b. You should see a dashboard similar to this:

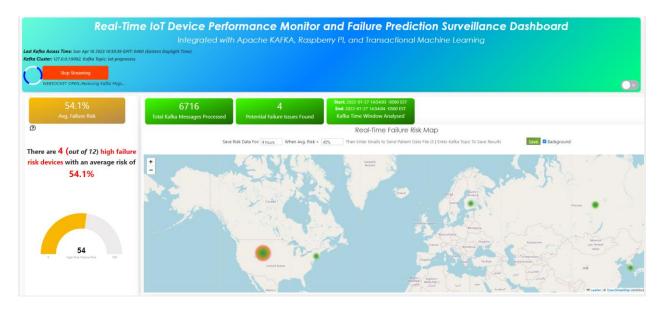

#### 16. Increase swap file

- a. sudo nano /etc/dphys-swapfile
- b. CONF SWAPSIZE=2000
- c. sudo reboot
- d. free -m

## **ISSUES**

# If you run in to issues if the solution does not start do the following to re-start solution:

- 1. Enter reboot pi: sudo reboot
- 2. Then restart and run:
  - a. cd to tmux folder
    - b. run: ./tmux.sh <enter>
    - c. check solution is running by checking the tmux windows:
      - i. list window run: tmux ls
      - ii. attach to window: tmux a -t preprocess2-data-python-8002
      - iii. attach to window: tmux a -t preprocess2-data-viper-8002