
Cityscapes Calibration

Nick Schneider, Marius Cordts

May 15, 2016

1 Coordinate Systems

We define three coordinate systems: (1) the vehicle coordinate system V according to ISO 8855 with the origin on the ground below of the rear axis center, x pointing in driving direction, y pointing left, and z pointing up; (2) the camera coordinate system C with the origin in the camera's optical center and same orientation; (3) the image coordinate system I with the origin in the top-left image pixel, u pointing right, v pointing down.

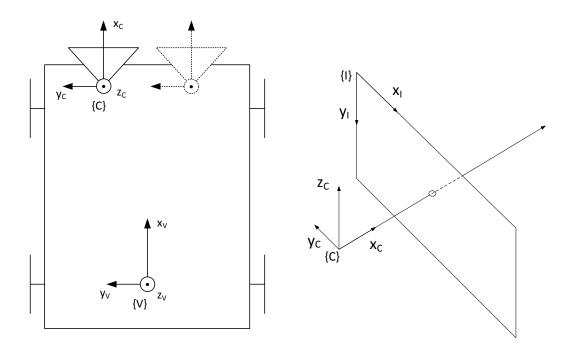

2 Coordinate Transformation

The transformation of a point (p_x^V, p_y^V, p_z^V) given in the vehicle coordinate system into a point (p_u^I, p_v^I) in the image coordinate system is given by

$$p_z^V \cdot \begin{pmatrix} p_u^I \\ p_v^I \\ 1 \end{pmatrix} = \mathbf{C} \cdot \begin{pmatrix} p_x^C \\ p_y^C \\ p_z^C \end{pmatrix} = \mathbf{C} \cdot (\mathbf{R}|\mathbf{t}) \cdot \begin{pmatrix} p_x^V \\ p_y^V \\ p_z^V \\ 1 \end{pmatrix} . \tag{1}$$

To transform a point (p_x^C, p_y^C, p_z^C) in the camera coordinate system into a point (p_x^V, p_y^V, p_z^V) in the vehicle coordinate system, we write

$$\begin{pmatrix} p_x^V \\ p_y^V \\ p_z^V \end{pmatrix} = (\mathbf{R}_{\mathbf{C} \to \mathbf{V}} | \mathbf{t}_{\mathbf{C} \to \mathbf{V}}) \cdot \begin{pmatrix} p_x^C \\ p_y^C \\ p_z^C \\ 1 \end{pmatrix} . \tag{2}$$

 $\mathbf{R}_{\mathbf{C} \to \mathbf{V}}$ can be calculated from $\mathbf{yaw}_{\mathrm{extrinsic}}$, $\mathrm{pitch}_{\mathrm{extrinsic}}$, $\mathrm{roll}_{\mathrm{extrinsic}}$ as

$$\mathbf{R}_{\mathbf{C}\to\mathbf{V}} = \begin{pmatrix} c_y \, c_p & c_y \, s_p \, s_r - s_y \, c_r & c_y \, s_p \, c_r + s_y \, s_r \\ s_y \, c_p & s_y \, s_p \, s_r + c_y \, c_r & s_y \, s_p \, c_r - c_y \, s_r \\ -s_p & c_p \, s_r & c_p \, c_r \end{pmatrix}$$
(3)

with s_y , c_y , s_p , c_p , s_r , and c_r representing the sine and cosine of yaw_{extrinsic}, pitch_{extrinsic} and roll_{extrinsic}, respectively and the translation $\mathbf{t}_{\mathbf{C}\to\mathbf{V}}$ is given by

$$\mathbf{t}_{\mathbf{C}\to\mathbf{V}} = \begin{pmatrix} x_{\text{extrinsic}} \\ y_{\text{extrinsic}} \\ z_{\text{extrinsic}} \end{pmatrix}. \tag{4}$$

To obtain **R** and **t** in equation (1) we invert equation (2) and obtain $\mathbf{R} = \mathbf{R}_{\mathbf{C} \to \mathbf{V}}^{\mathbf{T}}$ and $\mathbf{t} = -\mathbf{R} \cdot \mathbf{t}_{\mathbf{C} \to \mathbf{V}}$. To map a point from camera to image pixel coordinates, the intrinsic matrix **K** is typically used, which is defined as

$$\mathbf{K} = \begin{pmatrix} f_x & 0 & u_0 \\ 0 & f_y & v_0 \\ 0 & 0 & 1 \end{pmatrix} . \tag{5}$$

This form of \mathbf{K} assumes that the camera coordinate system's x, y and z axis are pointing right, down and front, respectively. To deal with the camera coordinate system described in Sec. 1, the intrinsic matrix is rotated to obtain \mathbf{C} , *i.e.*

$$\mathbf{C} = \mathbf{K} \cdot \begin{pmatrix} 0 & -1 & 0 \\ 0 & 0 & -1 \\ 1 & 0 & 0 \end{pmatrix} . \tag{6}$$

3 Parameters

Extrinsic and intrinsic calibration parameters of the camera are provided in the folder camera. The camera translation parameters $x_{\text{extrinsic}}$, $y_{\text{extrinsic}}$, $z_{\text{extrinsic}}$ are given in meters, the rotational parameters $y_{\text{extrinsic}}$, $y_{\text{ext$

Within the folder vehicle, we provide vehicle odometry consisting of speed [m/s] and yaw rate [rad/s] according to the vehicle coordinate system (V). Further, we included the outside temperature $[^{\circ}C]$, the GPS latitude $[^{\circ}N]$, and longitude $[^{\circ}E]$.