

Programming Chirp Parameters in TI Radar Devices

Vivek Dham

ABSTRACT

This application report provides information on how to select the right chirp parameters in a fast FMCW Radar device based on the end application and use case, and program them optimally on Tl's radar devices.

Contents Introduction 2 2 3 4 6 7 8 List of Figures 1 2 4 5 6 7 8 9 10 **List of Tables** 1 2 3 4



Introduction www.ti.com

Trademarks

All trademarks are the property of their respective owners.

1 Introduction

Frequency Modulated Continuous Wave (FMCW) mmWave radar sensors are becoming increasingly popular for multiple automotive and industrial applications. The system requirements and care-abouts in each of these applications could be very different. Range requirement, range resolution, max velocity requirement, sensor field of view, data memory, processor MIPS, and so forth are some of the aspects that need to be analyzed based on the end application. Understanding the relationships between the FMCW chirp configuration and system performance parameters helps in selecting the right chirp configurations.

TI's mmwave radar devices (MMIC) provide large flexibility in configuring chirp parameters and also allow multiple chirp configurations in a single frame. The timing parameters are accurately controlled by the digital timing engine and a built-in radio processor without heavy real-time software interference. This document describes the programming of chirp parameters and explains the various system considerations that determine the values for these parameters.

2 Impact of Chirp Configuration on System Parameters

In linear FMCW radars, the transmit (TX) signal is a single tone with its frequency changing linearly with time. This sweep in frequency is commonly referred to as a "chirp". A set of these chirps form a "Frame" and this can be used as the observation window for the radar processing. The various parameters of the chirp ramp (like frequency slope, sweep bandwidth, and so forth) impact the system performance.

Figure 1 depicts a single chirp and the associated timing parameters. Figure 2 shows frame structure that consists of a series of chirps followed by inter frame time. This represents 'Fast FMCW' modulation, where each chirp is typically 10's of µs in duration.

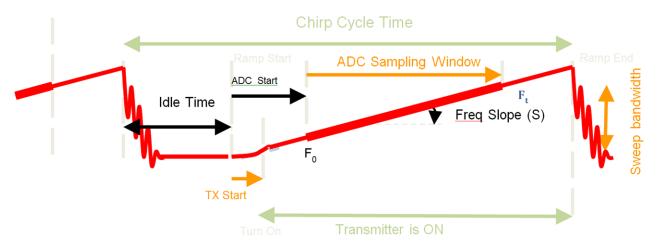


Figure 1. Typical FMCW Chirp

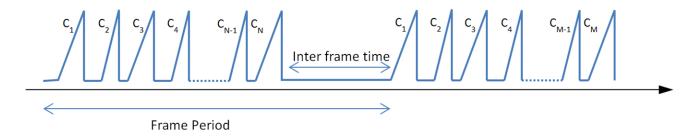


Figure 2. Typical Frame Structure



The following sections list key system performance parameters that are typically considered in any radar application and how the chirp configuration impacts each one of them.

Measurement Range and Range Resolution 2.1

The maximum and minimum distance over which a radar sensor can detect objects is an important parameter for a radar sensor. Also, the range resolution (ability to distinguish two nearby objects) is another important metric.

2.1.1 Maximum Range

In applications like automotive adaptive cruise control (ACC), it's important to be able to view a far off object (>150m). Detecting a far-off object can be limited by either the SNR of the received signal or the IF bandwidth supported by the Radar device.

The max range relationship with the IF bandwidth is shown in Equation 1. Tl's AWR1243 radar device provides a large 15 MHz bandwidth, allowing more flexibility in the slope that can be used, which indirectly helps increase the max velocity as will be seen later.

$$Range_{max} = \frac{IF_{max} \times c}{2 \times S}$$
 (1)

 $\begin{array}{l} \text{IF}_{\text{max}} \rightarrow \text{Maximum IF bandwidth supported} \\ c \rightarrow \text{Speed of light} \end{array}$

S → Slope of the transmitted chirp

Note that the IF_{max} is also dependent on the ADC sampling frequency (ADC $_{sampling}$) used. In a complex 1x sampling mode, the IF bandwidth is limited to 0.9^* (ADC_{sampling}). In case of complex 2x and real sampling modes, the IF bandwidth is limited to 0.9^* (ADC_{sampling})/2. The maximum ADC sampling frequency in the TI's radar devices is 37.5 Mhz.

The other aspect that could limit the max range is the signal to noise ratio (SNR) of signal received by the receiver. This depends on:

- RF performance of the Radar device, like TX output power, RX noise figure, as well as chirp parameters like chirp duration and number of chirps in the frame.
- Antenna parameters like the TX and RX antenna gain in the direction of interest.
- Object characteristics like Radar Cross Section (RCS). RCS is a measure of the amount of energy the object reflects back. This decides how detectable the object is with a radar sensor.
- Minimum SNR required by the detection algorithm to detect an object.

$$Range_{max} \text{ based on SNR} = 4 \sqrt{\frac{PtG_{Rx}G_{Tx}c^2\sigma NT_r}{f_C^2\left(4\pi\right)^3 \times kT \times NF \times SNR_{det}}}$$
 (2)

Pt → Tx output power

 G_{Rx} , $G_{Tx} \to \dot{R} X$ and TX Antenna gain $\sigma \to RCS$ of the object

N → Number of chirps

 $T_r \rightarrow Chirp time$

NF → Noise figure of the receiver

SNR_{det} → Minimum SNR required by the algorithum to detect an object

 $k \rightarrow Boltzman constant$

T_{det} → Ambient temperature



2.1.2 Range Resolution

In many applications it is important to be able to resolve two closely spaced objects as two separate objects, rather than detect them as one. The smallest distance between two objects that allows them to be detected as separate objects is referred to as range resolution. This primarily depends on the chirp sweep bandwidth that the radar sensor can provide. The larger the sweep bandwidth, the better the range resolution. Tl's radar devices support a 4 GHz sweep bandwidth that allows a range resolution of as low as approximately 4cm.

$$Range_{resolution} = \frac{c}{2 \times B}$$
 (3)

 $c \rightarrow Speed of light$

B → Sweep bandwidth of FMCW chirp

Better range resolution also helps in detecting very close by objects, hence, improving a minimum detection range.

2.2 Measurement Velocity and Velocity Resolution

2.2.1 Maximum Velocity

Along with the distance, the relative velocity of the object is another critical parameter of interest. The maximum measurable velocity in Fast FMCW modulated radars depends on the chirp cycle time, that is, the time difference between the start of two consecutive chirps. This in turn depends on how fast the frequency sweep can be performed and the minimum inter-chirp time allowed.

The faster the MMIC can ramp the frequency, the higher the maximum unambiguous velocity. TI's MMIC allows a fast ramp of 100 MHz/ μ s. Also the closed loop PLL is designed to support a very fast settling of the frequency ramp. Hence, the time taken for the VCO to jump from the end of the ramp frequency to restart the next ramp is very low and allows for a smaller idle time (as low as 2 μ sec). For minimum idle time computation, see Section 5.

Unambiguous max velocity =
$$\frac{\hat{\lambda}}{4T_C}$$
 (4)

T_c → Total Chirp time ,which inlcudes chirp time+idle time

 $\lambda \rightarrow$ Wavelength of the signal used

The actual measurable max velocity can be extended beyond the unambiguous max velocity using higher level algorithm.

2.2.2 Velocity Resolution

In applications, like park assist, you might need to separate out objects with small velocity differences, for which good velocity resolution is needed. Velocity resolution mostly depends on the transmit frame duration, that is, increasing the number of chirps in a frame improves the velocity resolution.

Unambiguous max velocity =
$$\frac{\hat{\chi}}{2NT_C}$$
 (5)

 $N_c \rightarrow Number of Chirp in a frame$

2.3 Angular Range and Resolution

In order to locate the object in the 2D space, the angle of the object is also required along with the distance. In a radar system, the angle is estimated by receiving the reflected signal from the object using multiple receivers that are spaced apart with a distance 'd'. The signal arriving at each of the successive

receivers is delayed by $d*\sin(\theta)$ and this "delay" causes a phase shift of $\frac{2\pi d\sin(\theta)}{\theta}$. This phase shift between each of the receivers is used to estimate the angle (θ) of the object.



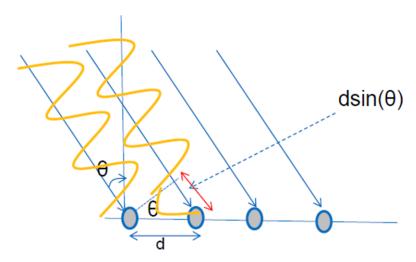


Figure 3. Angle Estimation Basics

The measurable unambiguous angular field of view from the MMIC perspective depends on the spacing between the receivers (d).

Max unambiguous angular range =
$$\sin^{-1} \left(\frac{\lambda}{2d} \right)$$
 (6)

d → Spacing between receiver antennas

 $\lambda \rightarrow Wavelength$

So for the widest angular field of view, the spacing of the receiver antenna should be $\frac{\pi}{2}$, theoretically giving $\pm 90^{\circ}$ viewing range.

Apart from the antenna spacing, the measurable distance at different angles would also depend on the antenna gain pattern. Typically antennas would have a peak gain at one angle (mostly at 0°, that is, directly facing the front of the antenna) and then the gain would reduce as the angle increases. Figure 4 shows an example antenna pattern where the gain at 90° angle is > 15 dB lower than what it is at 0° angle.

Antenna gain vs angle

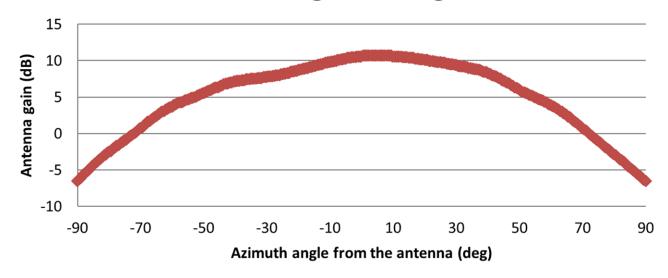


Figure 4. Example Antenna Gain Pattern



2.3.1 Angular Resolution

Apart from the angular field of view, it might also be important to resolve two objects at close by angles, that is, have good angular resolution. For example, in an automotive radar use case, it would be important to detect two cars far off in two different lanes rather than detect them as one single car. In general, the angular resolution measurement depends on the number of receiver antennas available. The larger the number of antennas, the better the resolution.

Angular resolution (deg) =
$$\frac{\lambda}{d \times N_{RX} \cos \theta} \times \frac{180}{\pi}$$
 (7)

 $\theta_c\to Angle$ of interest, that is, the angle at which the objects are present $N_{Rx}\to Number$ of receiver antennas

The angular resolution can be further improved using multiple transmitters. For more details, see MIMO Radar. If there are multiple transmitters available, then the transmit antennas can be spaced in such a way that each of the transmitters paired with the set of receivers together create a virtual receive array. For example, if there are 3 TX and 4 RX, then a MIMO radar system can produce the equivalent angular resolution of 12 virtual channels.

Angular resolution =
$$\frac{\lambda}{d \times N_{RX} N_{TX} \cos \theta} \times \frac{180}{\pi}$$
 (8)

 $N_{Tx} \rightarrow Number of transmit antennas$

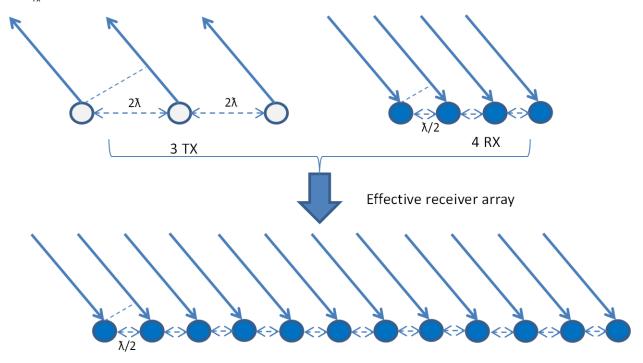


Figure 5. Effective Recevier Channels in MIMO Radar



3 Chirp Configurations for Common Applications

The most common applications for radar in the automotive context include short range radar (typically mounted in the corners) and mid or long-range radar (typically front facing).

This section shows chirp configurations for a 22m USRR, 45m SRR, 125m MRR and a 225m LRR use-case. It is important to note that these are just generic example configurations and it is possible to change the parameters based on the customer's specific system performance requirements. Sample chirp configurations and use-cases as applicable to various TI's mmwave radar devices are shown in the device-specific overview white papers.

| Parameter | Units | LRR | MRR | SRR | USRR |
|---------------------------------------|--------|-------|-------|-------|------|
| Max unambiguous range | m | 225 | 125 | 45 | 22.5 |
| Sweep bandwidth | MHz | 300 | 540 | 750 | 1500 |
| Ramp slope | MHz/us | 10 | 12 | 15 | 30 |
| Inter-chirp duration | us | 8 | 10 | 12 | 50 |
| Number of chirps | - | 256 | 128 | 128 | 128 |
| Range resolution | m | 0.50 | 0.28 | 0.20 | 0.1 |
| Chirp duration | us | 30 | 45 | 50 | 50 |
| Max umambiguous relative velocity (1) | kmph | 92.28 | 63.75 | 56.56 | 35.3 |
| Max beat frequency | MHz | 15 | 10 | 4.5 | 4.5 |
| ADC sampling rate (complex) | Msps | 16.67 | 11.11 | 5.00 | 5.00 |
| Number of samples per chirp | | 500 | 500 | 250 | 250 |
| Range FFT size | - | 512 | 512 | 256 | 256 |
| Frame time (total) | ms | 9.728 | 7.04 | 7.94 | 12.8 |
| Frame time (active) | ms | 7.68 | 5.76 | 6.4 | 6.4 |
| Radar data memory required | КВ | 2048 | 1024 | 512 | 512 |

Table 1. Example Chirp Configurations for Typical Applications

4 Configurable Chirp RAM and Chirp Profiles

The TI radar devices allow you to control the parameters of chirps in a frame by defining chirp profiles, and variations on top of these profiles through a chirp configuration RAM. Chirp profiles are basic chirp timing templates, useful in defining chirp variants with significant differences in one or more defining parameters (start frequency, slope, idle time, and so forth). The radar devices allow you to program four different chirp profiles. In addition, up to 512 unique chirps can be pre-programmed and stored in the chirp configuration RAM. Each chirp definition entry in the RAM can belong to one of the four profiles, and can optionally differ from their parent profile by small dithers in some of the parameter values. A frame would then consist of a sequence of chirps from a start index to an end index in the chirp configuration RAM which can be looped over up to 255 times.

The parameters that are controllable per profile are:

- · Start frequency
- Frequency slope
- Idle time
- ADC start time
- Ramp end time


⁽¹⁾ The maximum velocity can be increased beyond the max unambiguous velocity by using higher level algorithms.



Each chirp in the chirp configuration RAM can have small dither values that are added to the profile parameters defined in the profile RAM. These are:

- Start frequency variable
- Frequency slope variable
- · Idle time variable
- ADC start time variable

The chirp RAM and profile RAMs are depicted in Figure 6.

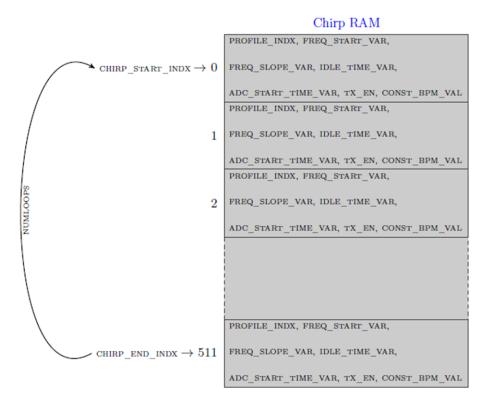

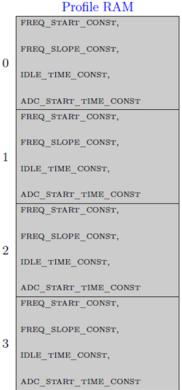


Figure 6. Chirp and Profile RAM Memory Allocation

5 Chirp Timing Parameters

Table 2 provides a list of the parameters that govern the chirp timing. It also shows the relationship of these parameters to form a chirp.

Table 2. Chirp Timing Parameters

| SI. No. | Parameter name | Description |
|---------|----------------|---|
| 1 | Idle time | The time between the end of previous chirp and start of next chirp. |
| 2 | TX start time | The time from the start of the ramp at which transmitter is turned on. |
| 3 | ADC start time | The time from the start of the ramp when the ADC starts sampling the data. |
| 4 | Ramp end time | The time from the start of the ramp until the chirp continues ramping. After this time the synthesizer frequency is reset to the start frequency of the next chirp. |

The following sections list the system considerations that need to be taken to determine the value for each of these parameters. The actual numbers for each of these parameters can be derived using a chirp timing parameter configuration calculator utility in Radar Studio application available as part of the DFP package.



5.1 Idle Time

The minimum required idle time is determined predominantly by the synthesizer ramp down settling time, which is a function of ramp down bandwidth. The synthesizer ramp down settling times for some typical bandwidths are tabulated in Table 3.

Table 3. Typical Synthesizer Ramp Down Times for Different Modulation Bandwidths

| Ramp Bandwidth | Synthesizer Ramp Down Time (μs) |
|---------------------|---------------------------------|
| < 1 GHz | 2 |
| > 1 GHz and < 2 GHz | 3.5 |
| > 2 GHz and < 3 GHz | 5 |
| > 3 GHz | 7 |

Table 3 can directly be used to set the minimum idle time, for cases where the ADC sampling rate is 5 Msps or higher. However, for low sampling rates (< 5 Msps), there is also another constraint that needs to be kept in mind when programming the minimum idle time. This comes from digital pipeline delays in the sigma-delta ADC decimation chain. Due to this, the minimum idle time might need to be slightly higher than the values shown in Table 3. The chirp parameter configuration calculator utility (part of the Radar Studio tool, www.ti.com/tool/mmwave-dfp) takes care of this constraint as well and provides the overall recommended idle time.

5.2 ADC Start Time

The ADC start time does NOT have a hard minimum requirement for correct chip functionality. However, there is a trade-off between the value of this parameter and the quality of "beginning of chirp" signal envelope settling, dependent on the following factors:

- Synthesizer PLL ramp-up settling time, which is a function of ramp slope
- HPF step response settling, which is a function of HPF corner frequencies
- IF/DFE LPF settling time, which is a function of DFE output mode and sampling rate.

The chirp timing parameter configuration calculator utility takes these aspects into account in computing the recommended value.

The user may also have other considerations such as maximum round-trip delay of reflections from the target based on the end use-case that may be added to the recommended ADC start time from the utility. The customer may also choose to use a smaller value than the recommended value, in order to reduce the total inter-chirp gap, by trading off the quality of settling.

5.3 Ramp End Time

The ramp end time is the sum of (a) the ADC start time, (b) the ADC sampling time and (c) the excess ramping time at the end of the ramp. There is no hard requirement on excess ramping time. However, there is again a trade-off between the amount of excess ramping and the "end of chirp" signal envelope settling performance. The primary factor determining the excess ramping required is IF/DFE filtering latency, which is again a function of DFE output mode and sampling rate.

The chirp timing parameter configuration calculator utility takes these aspects into account in arriving at the recommended value for this parameter.



Table 4. Typical IF/DFE Filtering Latencies as a Function of DFE Mode and Output Sampling Rate

| DFE Mode | DFE Sampling Rate (Msps) | IF/DFE Filtering Latencies (µs) |
|----------------|--------------------------|---------------------------------|
| Complex1x | 16.7 | 0.3 |
| | 10 | 0.5 |
| | 5 | 1.0 |
| Real/Complex2x | 33.3 | 0.1 |
| | 16.7 | 0.2 |
| | 10 | 0.4 |
| | 5 | 0.8 |

5.4 Example Timing Calculation Using the Calculator

The Ramp timing calculator available in the Radar Studio tool (part of the DFP package: (www.ti.com/tool/mmwave-dfp) provides the right timing parameter value recommendations based on the user configurations (slope, ADC samples, sampling rate). These recommendations are based on the minimum requirements from Tl's radar device.

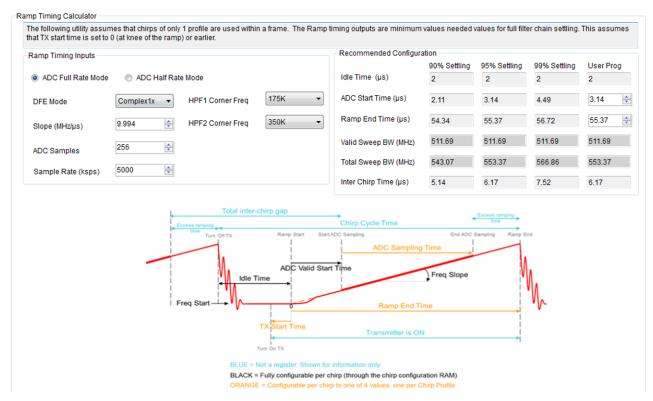


Figure 7. Example Usage of the Ramp Timing Calculator

You may have further considerations over these based on the specific use case. These considerations need to be accounted for separately.

For example, if the raw ADC data is being set over the CSI or LVDS path, the idle time setting needs to make sure the transfer on the CSI/LVDS interface is complete before the next chirp data is available. The time available for this data transfer is = "ramp end time" + "idle time". In case of CSI, the overhead time due to the MIPI protocol also needs to be accounted for.



6 Advanced Chirp Configurations

6.1 Multi-Mode Radar Applications

As you have seen that based on the desired application the chirp configurations need to be set differently. But what if we need to support multiple modes, for example short range and mid-range, simultaneously using a single radar device? The advanced frame configuration available in Tl's radar allows for large flexibility to have multiple chirp configurations in a single frame. The frame can be constituted using a sequence of "sub-frames" with each of these sub-frames representing a different radar mode. The rlSetAdvFrameConfig API helps enable this kind of configuration. For details, see the "AWR1XXX Radar Interface Control Document" in the DFP package: www.ti.com/tool/mmwave-dfp).

To provide maximum flexibility of the chirps within a frame the advanced frame config API provides the ability to break a frame into different sub frames (up to 4). Each of the sub frames consists of multiple bursts of chirps (up to 512 bursts). Each burst can consist of 512 unique chirps which are associated to one of the 4 profiles, and the start chirp index can be programmed to have a fixed offset from the previous burst. A set of bursts in a sub-frame can be further looped in software up to 64 times. The below figure is an example how a sub frame is formed.

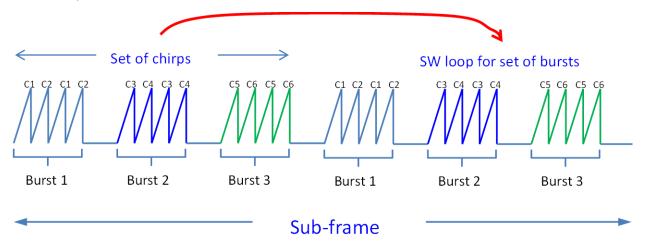


Figure 8. Sub Frame Structure Showing Three Bursts Looped Twice (start index having an offset of 2)

The frame is formed by a maximum of four such sub frames, and each of the sub frames can have a different set of chirps. The different chirps can also use different transmitters (which could possibly have different antenna configurations). Figure 9 shows an example of the different chirp profiles and sub frames that can form a frame.

The timing requirements for the advanced frame is as follows: Inter-burst time should be \geq 50 µsec, inter sub-frame time should be \geq 100 µsec and inter frame time should be \geq 200 µsec.



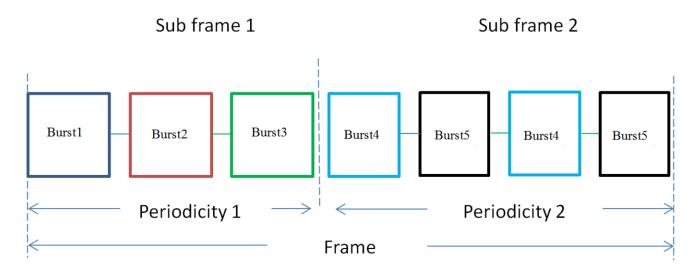


Figure 9. Example of Advanced Frame Configuration of Two Sub Frames

6.2 Individual Transmitter Binary Phase Modulation (BPM)

TI's radar device allows each of the transmitter outputs to be modulated by a phase of 0° or 180°. This allows usage of multiple transmitters simultaneously by using mutually uncorrelated binary codes. hence, improving the effective SNR.

The phase configuration is done by the "rlSetBpmChirpConfig" API. For details on BPM and MIMO radar, see MIMO Radar.

7 Basic Chirp Configuration Programming Sequence

TI's mmwave link APIs provide simple interface to the MMIC and offer full flexibility to configure all the chirp parameters based on the application and requirement. The details of each of the APIs and the parameter descriptions are available in the "AWR1XXX Radar Interface Control Document: www.ti.com/tool/mmwave-dfp). Figure 10 shows a typical sequence to be followed to configure the chirp and frame.

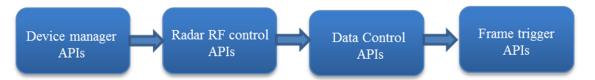


Figure 10. Radar Configuration Sequence



7.1 Device Manager APIs

These APIs are used to power on and initialize the sensor:

rlDevicePowerOn

This function initializes the driver and does the necessary resource allocation for the driver. It initializes the host protocol driver by creating the necessary OS services like semaphore, mutex, queues and so forth. It also brings radar devices (multiple devices in case of cascade) out of reset and opens the communication channel (SPI, Mailbox, and so forth) with these devices.

rlDeviceRfStart

This function initializes the RF (BIST) subsystem in the radar device. The function returns immediately and RF initialization completion is indicated by the asynchronous event (RL_EVENT_AR_DEVICE_START_COMPLETE). User application should wait for this event before invoking any Radar Sensor Control APIs.

DeviceFileDownload

This function downloads a binary file from the host to the internal RAM of the radar device. This file could be a firmware patch file, application code, calibration data or configuration data.

7.2 Radar RF Control APIs

These APIs are used to configure the RF parameters, chirp profiles and frame configurations.

rlSetChannelConfig

This API allows configuring of the number of TX antennas (out of 3) and number of RX antennas (out of 4) to be used. It also allows the selection of whether they are using the sensor in standalone mode or cascade mode.

rlSetAdcOutConfig

This API allows configuring of the number of bits per sample (12/14/16). It also allows the choice of whether the ADC data should be real only, Complex -1x or Complex- 2x.

rlSetLowPowerModeConfig

This API allows the setting of a low power ADC mode for power saving. In this mode, the maximum ADC sampling rate is limited.

rlSetProfileConfig

This API allows configuring the chirp "profile", which defines a template for a chirp. These configurations include chirp start frequency, idle time, ADC start time, chirp slope, chirp duration, TX power level in the chirp, number of ADC samples per chirp, the ADC sampling rate, High pass filter (HPF) cutoff frequencies and RX gain setting. Up to four profiles can be defined and in a particular frame (which can have up to 512 unique chirps) the chirps in the frame can belong to any of these four profiles. Since a single profile may not suffice all the intended use cases of the sensor, having flexibility to have multiple profiles allows usage of a single sensor in multiple scenarios/use cases.

rlSetChirpConfig

Once the profiles are defined, each of the unique chirps can be associated to one of these profiles. Apart from this, the API also allows limited chirp to chirp variations (beyond the profiles) in some of the important parameters like start frequency, idle time and ADC start time. The API also allows selecting the transmitters to be used in that particular chirp.

rlSetFrameConfig

This API allows selecting the sequence of the chirps that form the frame, number of frames that need to be transferred and the periodicity of the frames. The periodicity would define the inter-frame time (periodicity – chirptime), hence, the duty cycle of the transmission. The frame could be software API triggered (via rlSensorStart API) or externally triggered using the SYNC_IN signal. In case of the HW trigger option, a programmable delay can be set from the SYNC_IN edge.



7.3 Radar Data Control APIs

The ADC data captured during the chirps is transferred out of the device on the high speed debug interface or CSI. The data control APIs allow configuring the ADC data that needs to be transferred out and the high speed interface (LVDS/CSI) configurations. Along with the ADC data, some additional information related to the quality of the chirp and chirp parameters (that are referred to as CQ (chirp quality) and CP (chirp parameter), respectively) can also be transferred out. The LVDS/ CSI configurations, lane configurations, and so forth can be done using these APIs. For details on these APIs and the parameters, see the "AWR1XXX Radar Interface Control Document" (part of the DFP package: www.ti.com/tool/mmwave-dfp).

7.4 Frame Trigger API

Once the chirps and frames are configured, they can be triggered either via a software API or hardware triggered using the digital SYNC_IN signal. The software API to trigger the frame is rlSensorStart.

8 References

MIMO Radar

IMPORTANT NOTICE FOR TI DESIGN INFORMATION AND RESOURCES

Texas Instruments Incorporated ("TI") technical, application or other design advice, services or information, including, but not limited to, reference designs and materials relating to evaluation modules, (collectively, "TI Resources") are intended to assist designers who are developing applications that incorporate TI products; by downloading, accessing or using any particular TI Resource in any way, you (individually or, if you are acting on behalf of a company, your company) agree to use it solely for this purpose and subject to the terms of this Notice.

TI's provision of TI Resources does not expand or otherwise alter TI's applicable published warranties or warranty disclaimers for TI products, and no additional obligations or liabilities arise from TI providing such TI Resources. TI reserves the right to make corrections, enhancements, improvements and other changes to its TI Resources.

You understand and agree that you remain responsible for using your independent analysis, evaluation and judgment in designing your applications and that you have full and exclusive responsibility to assure the safety of your applications and compliance of your applications (and of all TI products used in or for your applications) with all applicable regulations, laws and other applicable requirements. You represent that, with respect to your applications, you have all the necessary expertise to create and implement safeguards that (1) anticipate dangerous consequences of failures, (2) monitor failures and their consequences, and (3) lessen the likelihood of failures that might cause harm and take appropriate actions. You agree that prior to using or distributing any applications that include TI products, you will thoroughly test such applications and the functionality of such TI products as used in such applications. TI has not conducted any testing other than that specifically described in the published documentation for a particular TI Resource.

You are authorized to use, copy and modify any individual TI Resource only in connection with the development of applications that include the TI product(s) identified in such TI Resource. NO OTHER LICENSE, EXPRESS OR IMPLIED, BY ESTOPPEL OR OTHERWISE TO ANY OTHER TI INTELLECTUAL PROPERTY RIGHT, AND NO LICENSE TO ANY TECHNOLOGY OR INTELLECTUAL PROPERTY RIGHT OF TI OR ANY THIRD PARTY IS GRANTED HEREIN, including but not limited to any patent right, copyright, mask work right, or other intellectual property right relating to any combination, machine, or process in which TI products or services are used. Information regarding or referencing third-party products or services does not constitute a license to use such products or services, or a warranty or endorsement thereof. Use of TI Resources may require a license from a third party under the patents or other intellectual property of TI.

TI RESOURCES ARE PROVIDED "AS IS" AND WITH ALL FAULTS. TI DISCLAIMS ALL OTHER WARRANTIES OR REPRESENTATIONS, EXPRESS OR IMPLIED, REGARDING TI RESOURCES OR USE THEREOF, INCLUDING BUT NOT LIMITED TO ACCURACY OR COMPLETENESS, TITLE, ANY EPIDEMIC FAILURE WARRANTY AND ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT OF ANY THIRD PARTY INTELLECTUAL PROPERTY RIGHTS.

TI SHALL NOT BE LIABLE FOR AND SHALL NOT DEFEND OR INDEMNIFY YOU AGAINST ANY CLAIM, INCLUDING BUT NOT LIMITED TO ANY INFRINGEMENT CLAIM THAT RELATES TO OR IS BASED ON ANY COMBINATION OF PRODUCTS EVEN IF DESCRIBED IN TI RESOURCES OR OTHERWISE. IN NO EVENT SHALL TI BE LIABLE FOR ANY ACTUAL, DIRECT, SPECIAL, COLLATERAL, INDIRECT, PUNITIVE, INCIDENTAL, CONSEQUENTIAL OR EXEMPLARY DAMAGES IN CONNECTION WITH OR ARISING OUT OF TI RESOURCES OR USE THEREOF, AND REGARDLESS OF WHETHER TI HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

You agree to fully indemnify TI and its representatives against any damages, costs, losses, and/or liabilities arising out of your non-compliance with the terms and provisions of this Notice.

This Notice applies to TI Resources. Additional terms apply to the use and purchase of certain types of materials, TI products and services. These include; without limitation, TI's standard terms for semiconductor products http://www.ti.com/sc/docs/stdterms.htm), evaluation modules, and samples (http://www.ti.com/sc/docs/sampterms.htm).

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265 Copyright © 2018, Texas Instruments Incorporated