
# Overview

This lab demonstrates the use of TI mmWave sensors to detect and recognize hand gestures.

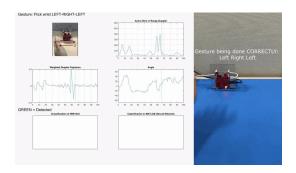

The unique range, velocity, and angle data from mmWave sensors can enable the detection of natural gestures. This example shows how mmWave can be used to detect a finger swipeing gesture and recognize the direction of motion. The lab provides full source code, a CCS project, a MATLAB GUI, and runs on the TI mmWave sensor xWR14xx EVM.

# Quickstart

The quickstart contains:

- Precompiled binaries for flashing the device using Uniflash
- Visualizer as .exe

# 1. Hardware and Software Requirements

### Hardware

Item	Details
Device	xWR1442 EVM (http://www.ti.com/tool/IWR1442BOOST)
Computer	PC with Windows 7 or 10. If a laptop is used, please use the 'High Performance' power plan in Windows.
Micro USB Cable	
Power Supply	5V, >2.5A with 2.1-mm barrel jack (center positive). The power supply can be wall adapter style or a battery pack with a USB to barrel jack cable.

### Software

Tool	Version	Required For	Details
mmWave Industrial Toolbox	Latest	-	Contains all files (quickstart, visualizer and firmware source files) related to mmWave Gesture Recognition Swipe lab.
MATLAB Runtime	2017a (9.2)	Quickstart Visualizer	To run the quickstart visualizer the runtime (https://www.mathworks.com/products/compiler/matlab-runtime.html) is sufficient.
Uniflash	Latest	Quickstart Firmware	Download offline tool (http://www.ti.com/tool/UNIFLASH) or use cloud version (https://dev.ti.com/uniflash/#!/)


Expand for mmWave Industrial Toolbox installation without Code Composer Studio




- 1. Navigate to the TI Resource Explorer (http://dev.ti.com/tirex/#/?link=Software%2FmmWave%20Sensors%2FIndustrial%20Toolbox)
- 2. Click the download button. A .zip file will be downloaded.



3. Navigate to the .zip file. Right click and then select Extract All.... Do NOT use the default path. The path must be c:\ti.

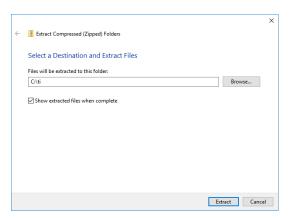


4. Verify installation by navigating to view the mmWave Gesture Recognition Swipe lab files at C:\ti\
<mmwave\_industrial\_toolbox\_install\_dir>\labs\lab0010-gesture-recog-swipe

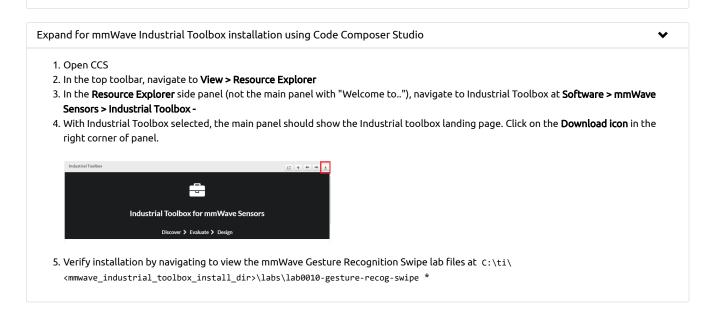

# 2. Physical Setup

The EVM should be positioned with antenna oriented on the top side and facing gesturing hand. The lab is configured to detect gestures within 0.35m of the EVM.

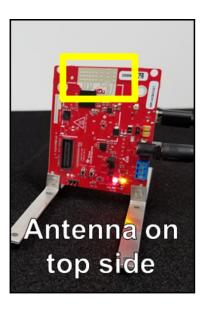

## 3. Flash the EVM

- Power on the EVM using a 5V/2.5A power supply.
- Flash the following image using Uniflash

Image	Location
Meta Image 1/RadarSS	C:\ti\ <mmwave_industrial_toolbox_install_dir>\labs\lab0010-gesture-recog-swipe\lab0010-gesture-recog-swipe-prebuilt_binaries\xwr12xx_xwr14xx_radarss.bin</mmwave_industrial_toolbox_install_dir>
Meta Image 2/MSS	C:\ti\ <mmwave_industrial_toolbox_install_dir>\labs\lab0010-gesture-recog-swipe\lab0010-gesture-recog-swipe-prebuilt_binaries\xwr14xx_gesture_swipe_mss.bin</mmwave_industrial_toolbox_install_dir>

#### Expand for help using Uniflash




- Connect the EVM to your PC and check the COM ports in Windows Device Manager
  - The EVM exports two virtual COM ports as shown below:
    - XDS110 Class Application/User UART (COM UART): Used for passing configuration data and firmware to the EVM
    - XDS110 Class Auxiliary Data Port (COM AUX): Used to send processed radar data output



Note the COM UART and COM AUX port numbers, as they will be used later for flashing and running the lab.

• Put the EVM in flashing mode by connecting jumpers on SOP0 and SOP2 as shown in the image. Then power cycle the EVM with SW2.

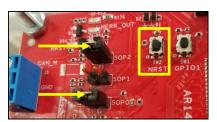

- Open the UniFlash tool (Download offline tool (http://www.ti.com/tool/UNIFLASH) or use cloud version (https://dev.ti.com/uniflash/#!/)
  - o In the New Configuration section, locate and select the appropriate device (IWR1442)

- o Click Start to proceed
- Click the **Settings & Utilities** tab. Under setup, fill the **COM Port** text box with the Application/User UART COM port number (COM UART) noted earlier
- In the Program tab, browse and locate the images (.bin file) as specified in the above table in the lab directions.
- Power cycle the device and click on Load Images



### Successful Flash Procedure

UniFlash's console should indicate: [SUCCESS] Program Load completed successfully

· Power off the board and remove only SOP2 jumper

#### SOP2 Removed?

Ensure that the jumper has been removed and the EVM power cycled. This puts the board back in functional mode.

### 4. Run the Lab

To run the lab, launch and configure the visualizer.

#### 1. Launch the visualizer:

- Navigate to C:\ti\<mmwave\_industrial\_toolbox\_install\_dir>\labs\lab0010-gesture-recog-swipe\lab0010-gesture-recog-swipe-quickstart\gesture\_recog\_swipe\_gui.exe
- $\bullet$  Click gest\_recog\_swipe\_gui.exe to run the visualizer


Note: Matlab Runtime Engine 9.2 is required. GUI will prompt for installation if necessary or install now (https://www.mathworks.com/products/compiler/matlab-runtime.html)

### 2. Configure Visualizer

- Within 10-20sec a list box dialog with found COM ports will appear. (If the figure does not pop up check the taskbar for the icon and click to bring up the dialog).
- Select the pair of COM ports corresponding to the EVM and click OK.
  - $\circ~$  After 10-20sec the GUI should appear.

# 5. Understanding the Output

- The GUI is comprised of:
  - A subset of the data streams from the radar used by the gesture recognition algorithm
  - o The gesture for this demo is a double swipe gesture where the hand is swiped from the left side to right side and then back to the left.

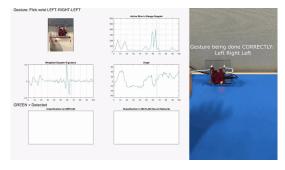

- The last panel is an indicator of whether the gesture was recognized or not:
  - If the gesture was not recognized, the panel remains white
  - If the gesturew was recognized, the panel flashes green.

# Developer's Guide

# Build the Firmware from Source Code

### 1. Software Requirements

Tool	Version	Required For	Details
mmWave Industrial Toolbox	Latest	-	Contains all files (quickstart, visualizer and firmware source files) related to mmWave Gesture Recognition Swipe lab
TI mmWave SDK	1.02.00.05	Firmware Source Code	The latest TI mmWave SDK (http://software-dl.ti.com/ra-processors/esd/MMWAVE-SDK/latest/index_FDS.html) and all the related tools are required to be installed as specified in the mmWave SDK release notes
Code Composer Studio	7.2+	Firmware Source Code	Download link (http://processors.wiki.ti.com/index.php/Download_CCS#Code_Composer_Studio_Version_7_Downloads) Note: CCSv6.x cannot be used

To verify proper installations, navigate to c:\ti and ensure that the following tools have been installed in the EXACT directory specified.

Tool	Version	Folder Path	Download link & Details	
CCS	7.3 or later	C:\ti\ccsv7	Download link (http://processors.wiki.ti.com/index.php/Download_CCS#Code_Composer_Studio_Version, Note: CCSv6.x cannot be used	
TI SYS/BIOS	6.53.2.00	C:\ti\bios_6_53_02_00	Included in mmwave sdk installer	
TI ARM compiler	16.9.6.LTS	C:\ti\ti-cgt-arm_16.9.1.LTS	Included in mmwave sdk installer	
XDC	3.50.04.43	C:\ti\xdctools_3_50_04_43_core	Included in mmwave sdk installer	
C64x+ DSPLIB	3.4.0.0	C:\ti\dsplib_c64Px_3_4_0_0	Included in mmwave sdk installer	
C674x DSPLIB	3.4.0.0	C:\ti\dsplib_c674x_3_4_0_0	Included in mmwave sdk installer	
C674x MATHLIB	3.1.2.1	C:\ti\mathlib_c674x_3_1_2_1	Included in mmwave sdk installer	
mmWave device support packages	1.5.3 or later	-	Upgrade to the latest using CCS update process (see SDK user guide for more details)	
TI Emulators package	6.0.0576.0 or later	-	Upgrade to the latest using CCS update process (see SDK user guide for more details)	

## 2. Import Lab Project

For the gesture recognition swipe lab, the MSS project for the R4F core needs to be imported to CCS and compiled to generate firmware for the IWR1443.

- Start CCS and setup workspace as desired.
- Import the projects below to CCS using either TI Resource Explorer in CCS or CCS Import Projectspecs method:
  - gesture\_swipe\_14xx\_mss

Expand for details on importing via TI Resource Explorer in CCS



- In the top toolbar, navigate to View > Resource Explorer
- In the Resource Explorer side panel (not the main panel with "Welcome to.."), navigate to Software > mmWave Sensors > Industrial Toolbox - > Labs > Gesture Recognition - Swipe Example
- Under the expanded **Gesture Recognition Swipe Example** folder, there should be the CCS Project\*.
- Click on the project, which should open the project in the right main panel, and then click on the Import to IDE button 😱 .



Expand for details on importing via CCS Import Projectspecs



- In the top toolbar, navigate to Project > Import CCS Projects...
- With the Select search-directory option enabled, click Browse..., navigate to the lab0010-gesture-recog-swipe folder at C:\ti\  $\verb|\color=| color=| c$
- Under Discovered projects, select gesture\_swipe\_14xx\_mss (ignore any other projects), then click Finish.



### Successful Import to IDE

After using either method, the project should be visible in CCS Project Explorer



### Project Workspace

When importing projects to a workspace, a copy is created in the workspace. All modifications will only be implemented for the workspace copy. The original project downloaded in mmWave Industrial Toolbox is not touched.

#### 3. Build the Lab

#### **Build MSS Project**

The DSS project must be built before the MSS project.

With the geesture\_swipe\_mss project selected in Project Explorer, right click on the project and select Rebuild Project. Selecting Rebuild instead of Build ensures that the project is always re-compiled. This is especially important in case the previous build failed with errors.



#### Successful MSS Project Build

In the Project Explorer panel, navigate to and expand gesture\_swipe\_xwr14xx\_mss > Debug directory. The project has been successfully built if the following files appear in the **Debug** folder:

xwr14xx\_gesture\_swipe\_mss.bin



### **Build Fails with Errors**

If the build fails with errors, please ensure that all the prerequisites are installed as mentioned in the mmWave SDK release notes.

#### 4. Execute the Lab

There are two ways to execute the compiled code on the EVM:

- · Deployment mode: the EVM boots autonomously from flash and starts running the bin image
  - Using Uniflash, flash the xwr14xx\_gesture\_swipe\_lab.bin found at <PROJECT\_WORKSPACE\_DIR>\gesture\_swipe\_14xx\_mss\Debug\xwr14xx\_gesture\_swipe\_lab.bin
  - The same procedure for flashing can be use as detailed in the Quickstart Flash the Device section.
- · Debug mode: enables connection with CCS while lab is running; useful during development and debugging

### Expand for help with Debug mode:




The CCS debug firmware (provided with the mmWave SDK) needs to be flashed once on the EVM.

- · CCS Debug method is enabled by flashing the CCS Debug Firmware (provided with the mmWave SDK) using the methods covered in the Quickstart Flash the Device section.
- · Use the following image instead

Image	Location	Comment
Meta Image 1/RadarSS	C:\ti\mmwave_sdk_ <ver>\packages\ti\utils\ccsdebug\xwr16xx_ccsdebug.bin</ver>	Provided with the mmWave SDK

After the CCS debug firmware has been flashed, connect the EVM to CCS

- Create a target configuration (skip to "Open the target..." if config already created previously in another lab for xwr14xx)
  - Go to File > New > New Target Configuration File
  - Specify an appropriate file name (ex: IWR16xx.ccxml) and check "Use shared location". Click Finish.
- In the configuration editor window:
  - Select **Texas Instruments XDS110 USB Debug Probe** for Connection
  - Select IWR1443 device as appropriate in the Board or Device text box.
  - Press the **Save** button to save the target configuration.
  - o [Optional]: Press the **Test Connection** button to check the connection with the board.
- Open the target configuration window by going to View > Target Configurations.
  - Under **User Defined** configurations the target configuration previously created should appear.
  - Right click on the target configuration and select Launch Select Configuration. The target configuration will launch in the Debug Window.

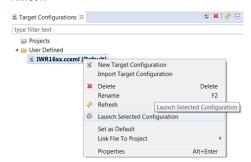

Connect

 $\circ~$  Select probe and then right click and select Connect Target



- · Load the binary
  - With the target connected, click **Load** button in the toolbar.
  - o In the Load Program dialog, press the Browse Project button.
  - Select xwr14xx\_gesture\_swipe\_mss.xe674 found at
     <PROJECT\_WORKSPACE\_DIR>\xwr14xx\_gesture\_swipe\_mss\Debug\xwr14xx\_gesture\_swipe\_mss.xe674 and press Ok.
  - Press **Ok** again in the **Load Program** dialog.
- · Run the binary
  - Press the **Run/Resume** button
  - The program should start executing and generate console output.



### Successful Run Binary

If binary is running correctly, the Console will include the "CLI is operational" message which indicates that the program is ready and waiting for the sensor configuration.

After executing the lab using either method, the lab can be visualized using the Quick Start GUI or continue to working with the GUI Source Code.

## Visualizer Source Code

Working with and running the Visualizer source files requires a MATLAB License not just the MATLAB Runtime Engine

- Open run\_demo\_dbl\_swipe.m, found at: '\labs\lab0010-gesture-recog-swipe\lab0010-gesture-recog-swipe\_gui\run\_demo\_swipe.m
- Running the .m file results in the same GUI as the Quick Start GUI; please refer to the section for details.
- · Files of interest:
  - plot\_gesture\_dbl\_swipe.m: Data streaming and processing for swipe detection

# Need More Help?

- Find answers to common questions on mmWave E2E FAQ (https://e2e.ti.com/support/sensor/mmwave\_sensors/w/wiki)
- Search for your issue or post a new question on the mmWave E2E forum (https://e2e.ti.com/support/sensor/mmwave\_sensors/f/1023)