
# MAmidiMEmo The Virtual S/W Synthesizer

User's Manual - Rev 0.4

### Install & Basic Settings

- Install
  - Extract the downloaded zip file.
  - Click MAmidiMEmo.exe
  - Will open the MAmidiMEmo. If not, please check the followings.
    - .NET Framework 4.7 or later installed on your PC.
    - ► VC++ 2012 Runtime installed on your PC.
    - ► (Execute "DelZoneID.ps1" to remove "Zone.Identifier" flag.)

#### Window Overview

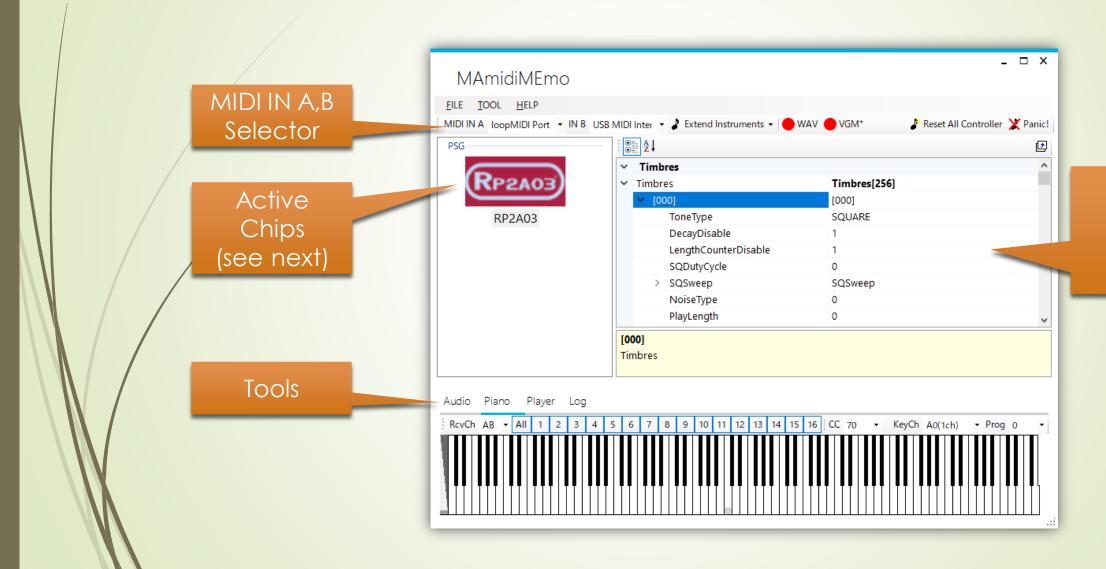


Chip
Parameter
Editor
(see next)


#### Add and Remove a Chip

To add Select the chip from this menu.

To remove
Open a context
menu and
select.

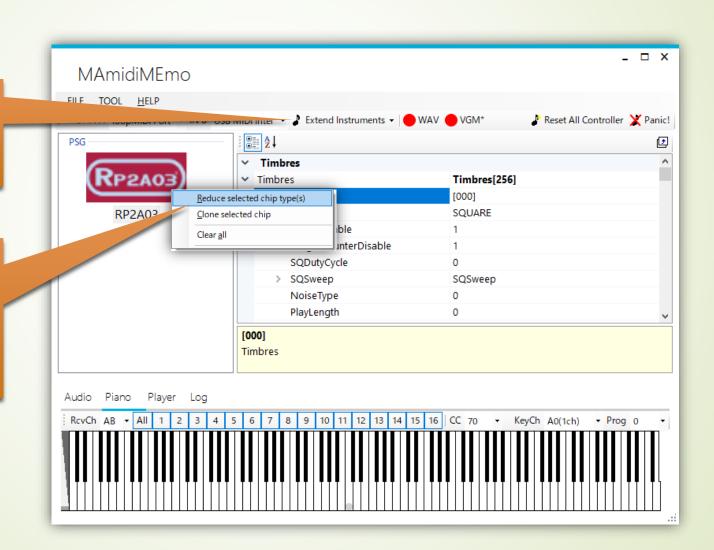


### Edit chip and sound parameters

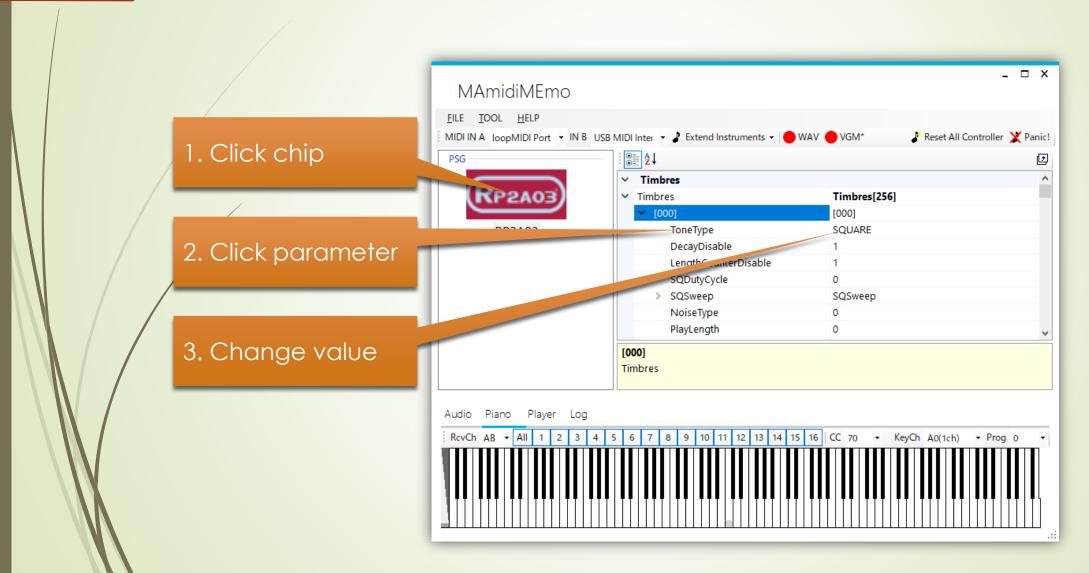


### Between MIDI ch and Chip ch Relation.

- You don't need to concern the Chip ch., generally. MAmidiMEmo will assign suitable Chip ch. automatically. However, you need to concern a max ch. number of the Chip.
- MAmidiMEmo will assign oldest sounding ch. to sound the new sounds.

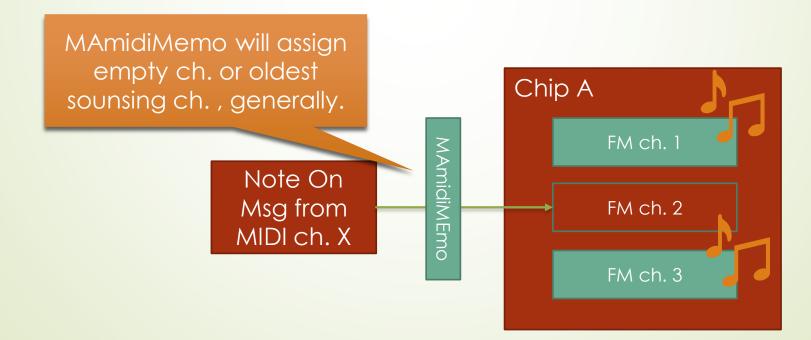


## Sounding Structure

- MAmidiMEmo outputs a sound from MIDI message along with the following structure.
  - So, at least, you need to edit the **Timbre** parameters to sound something.

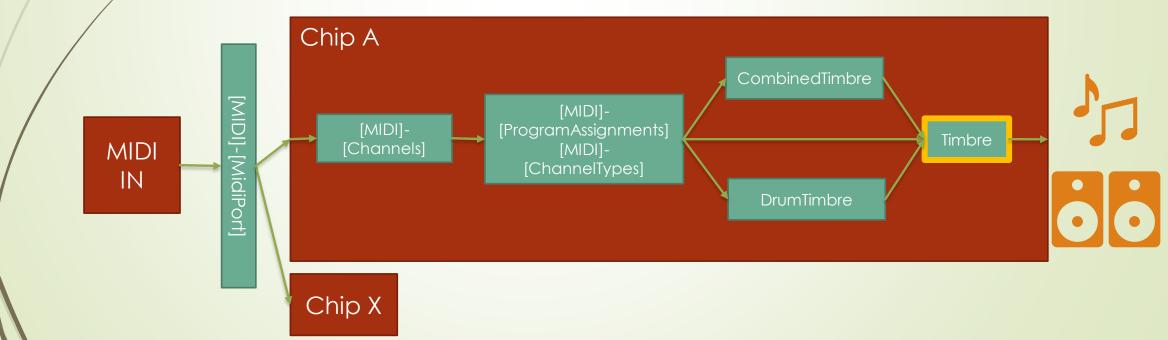


#### **Timbre**

- Generally, a chip has 256 Timbres, 256 CombinedTimbres, 128 DrumTimbres.
- CombinedTimbre can sound multiple Timbers at the same time (up to 4)
- DrumTimbre can sound Timbes as a Drum sounds (Ignoring Note Off msg).
- You can change the Timbre parameters on the Chip Parameter Editor. Generally, you need to learn the chip specification to edit the chip parameters.

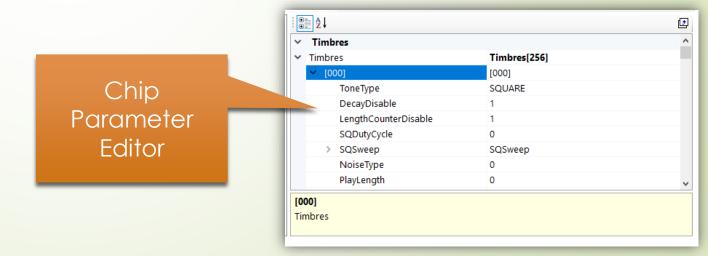


#### Timbre Structure

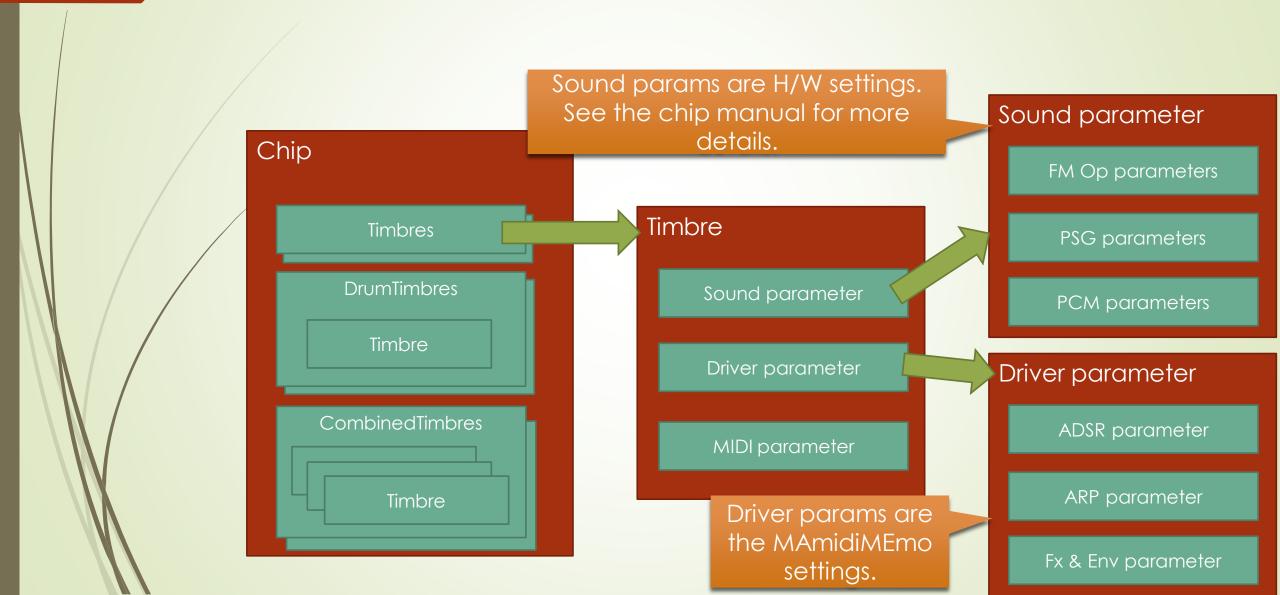


#### Driver parameters - Fx & Env Structure

You can make for a rich sound by using driver params. Especially, FxS can do it.

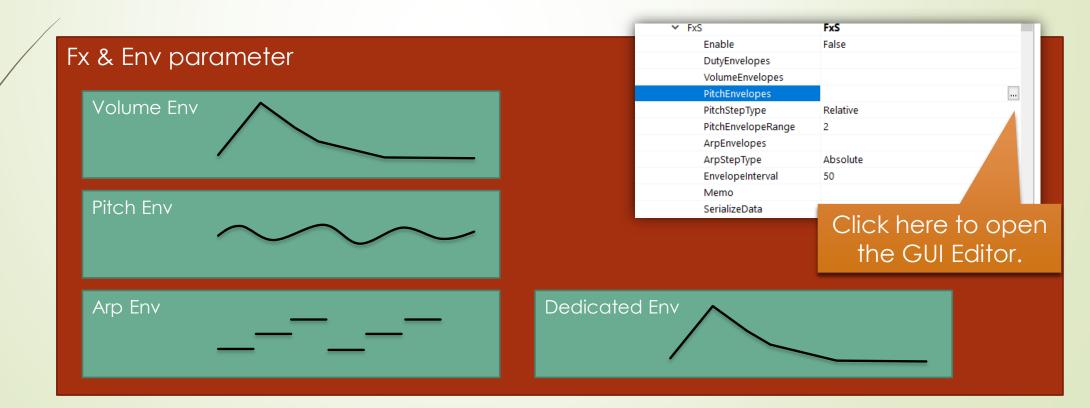

### Sample sounds

There are sample sound files in the "Samples" folder. You can drop a sample file "\*.MAmi" to the left pane.

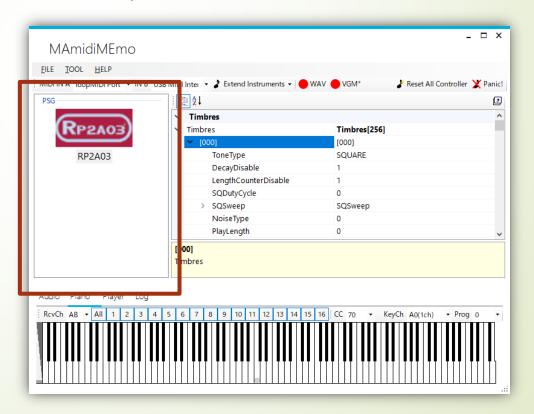

#### Additional files


- YM2608
  - Place legitimate "ym2608\_adpcm\_rom.bin" file in the MAmidiMEmo directory to sound ADPCM rhythm sounds.
- MT-32
  - Place legitimate "MT32\_CONTROL.ROM" and "MT32\_PCM.ROM" in the MAmidiMEmo directory to sound ADPCM sounds.

#### Limit Break

Any chip can output only a few voices. However, MAmidiMEmo can break this limitation by the following steps.



- 2. Select the [Clone selected chip] Cloned chip added.
- Select the cloned chip and set the [Follower Mode] value to "Unit0\*".
   \* If clone source chip ID is 0.

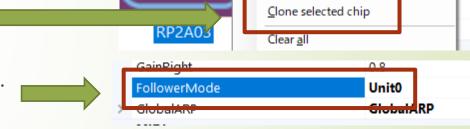


Reduce selected chip type(s)

- When the clone source chip consumed all voices, the cloned chip sound for the chip.
- If you want to extend max voices more, select the [Clone selected chip] of the cloned chip. And set the [Follower Mode] value to "Unit0".

# VGM Sound Interface (VSIF - UART) for Genesis/SMS

- MAmidiMEmo and VGMPlayer can drive real machine chips. Currently supports NTSC SMS(2, Mk III) for SN76489, OPLL and NTSC Genesis(MD) for SN76489, OPN2.
- How to
  - 1. Buy the following parts.
    - 1x <u>UART dongle</u> (Note: FT232R and so on. CH340 and CP2102 may not work 163,840bps, only 115,200bps.)
    - 1x <u>FLASH Cart for SMS or Genesis</u> and 1x <u>D-SUB 9 pin female connector</u> and <u>DuPont</u> wires

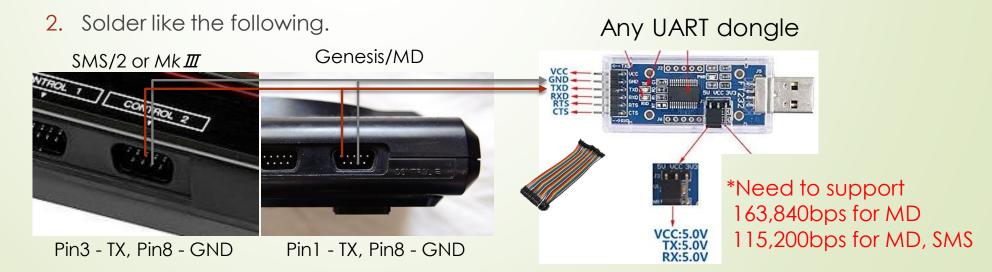


# VGM Sound Interface (VSIF - FTDI) for Genesis

- MAmidiMEmo and VGMPlayer can drive real machine chips more faster if you use FTDI2xx(232R, 232H and so on). Currently supports NTSC Genesis(MD) for SN76489, OPN2.
- How to
  - 1. Buy the following parts.
    - 1x FTDI2XX dongle (FT232R and so on. Need to support 5V.)
    - 1x FLASH Cart for Genesis and 1x D-SUB 9 pin female connector and DuPont wires



# VGM Sound Interface(VSIF - FTDI) for Famicom

- MAmidiMEmo can drive real machine chips more faster if you use FTDI2xx(232R, 232H and so on). Currently supports NTSC Famicom (Square/Tri/Noise ch only).
- How to
  - 1. Buy the following parts.
    - 1x FTDI2XX dongle (FT232R and so on. Need to support 5V.)
    - 1x FLASH Cart for Famicom and 1x D-SUB 15 pin female connector for FC and DuPont wires
  - 2. Solder like the following.

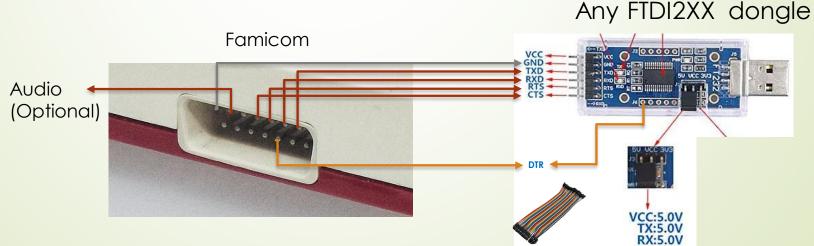

# VGM Sound Interface (VSIF) Settings

- 3. Burn VGMPlay\_md.bin(for Genesis) or VGMPlay\_sms.sms(for SMS) or VGMPlay\_nes\*.nes (for Famicom) to your FLASH Cart
- 4. Set the COMPort/FTDI ID and select "VSIF \*\*\*" you wish.

LINQ	v
Chip(Dedicated)	
COMPort	COM4
SoundEngine	Real(VSIF Genesis)
CurrentSoundEngine	Real(VSIF Genesis)
Filter	


- 5. Done!
- If you can not sound sounds, make sure soldering and COMPort name.Or, please contact me.
  - \*Some UART dongles may not work properly.
  - \*Compatible consoles may not work properly.

### **VGMPlayer**

1) Select interface type

NOTE: Bandwidth of UART is narrow. So you can not play heavy track data properly.

- 5) Adjust CLK speed for FTDlxxx mode for each environment (7~8% is best for normal machine)
- 6) Adjust buffer size for each files. (0 is max accuracy but so heavy.)

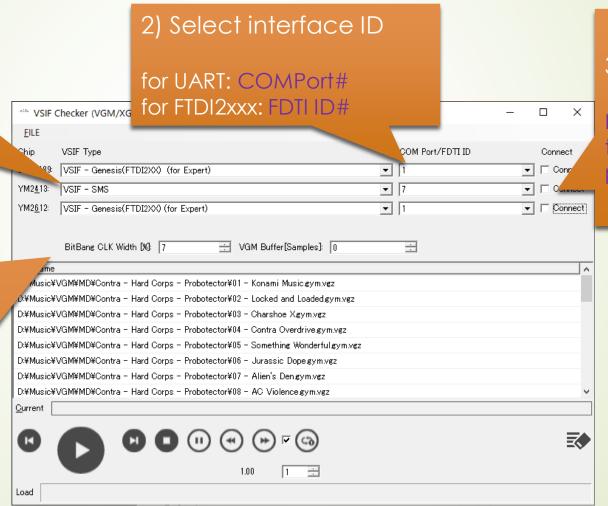

3) Check to connect

NOTE: If you re-connect to FTDlxxx mode, please reset Gen/MD.

## Trouble Shooting for MAmi

If you noticed "sound lag" or "stutter", open the Settings dialog from [TOOL] menu. Check [Sound Type] and [Audio Latency] value.

