GUIslice

0.13.0

Generated by Doxygen 1.8.11

Contents

1	GUI	slice lib	orary																1
2	Tod	o List																	3
3	Mod	lule Ind	ex																5
	3.1	Modul	es											 	 		 	 	 5
4	Hier	archica	I Index																7
	4.1	Class	Hierarchy											 	 		 	 	 7
5	Data	a Struct	ure Index	Ţ.															9
	5.1	Data S	Structures											 	 		 	 	 9
6	File	Index																	11
	6.1	File Lis	st											 	 		 	 	 11
7	Mod	lule Dod	cumentati	ion															13
	7.1	Gener	al Function	ns .										 	 		 	 	 13
		7.1.1	Detailed	l Des	criptio	n .								 	 		 	 	 14
		7.1.2	Function	n Doo	cumen	ntation	1							 	 		 	 	 14
			7.1.2.1	gs	lc_Del	bugPı	rintf(d	cons	t cha	ar *p	Fm	ıt,)) .	 	 		 	 	 14
			7.1.2.2	gs	lc_Get	tDrive	erDis	p(gsl	lc_ts	Gui	*p(Gui)		 	 		 	 	 14
			7.1.2.3	gs	lc_Get	tDrive	erTou	ich(g	slc_	tsGı	ui *	р G u	i) .	 	 		 	 	 14
			7.1.2.4	gs	lc_Get	tNam	eDis	p(gsl	lc_ts	Gui	*p(Gui)	•	 	 		 	 	 15
			7.1.2.5	gs	lc_Get	tNam	eTou	ıch(g	slc_	tsGı	ui *	oGu	i) .	 	 		 	 	 15
			7.1.2.6	gs	lc_Get	tVer(g	gslc_	tsGu	ıi *p	Gui)				 	 		 	 	 15

iv CONTENTS

		7.1.2.7	gslc_GuiRotate(gslc_tsGui *pGui, uint8_t nRotation)	16
		7.1.2.8	gslc_Init(gslc_tsGui *pGui, void *pvDriver, gslc_tsPage *asPage, uint8_t nMax↔ Page, gslc_tsFont *asFont, uint8_t nMaxFont)	16
		7.1.2.9	gslc_InitDebug(GSLC_CB_DEBUG_OUT pfunc)	16
		7.1.2.10	gslc_Quit(gslc_tsGui *pGui)	17
		7.1.2.11	gslc_SetBkgndColor(gslc_tsGui *pGui, gslc_tsColor nCol)	17
		7.1.2.12	gslc_SetBkgndImage(gslc_tsGui *pGui, gslc_tsImgRef sImgRef)	18
		7.1.2.13	gslc_SetClipRect(gslc_tsGui *pGui, gslc_tsRect *pRect)	18
		7.1.2.14	gslc_SetTransparentColor(gslc_tsGui *pGui, gslc_tsColor nCol)	18
		7.1.2.15	gslc_Update(gslc_tsGui *pGui)	19
7.2	Graphi	cs Genera	I Functions	20
	7.2.1	Detailed	Description	21
	7.2.2	Function	Documentation	21
		7.2.2.1	$ \begin{array}{llllllllllllllllllllllllllllllllllll$	21
		7.2.2.2	gslc_ClipPt(gslc_tsRect *pClipRect, int16_t nX, int16_t nY)	21
		7.2.2.3	gslc_ClipRect(gslc_tsRect *pClipRect, gslc_tsRect *pRect)	21
		7.2.2.4	gslc_ColorBlend2(gslc_tsColor colStart, gslc_tsColor colEnd, uint16_t nMidAmt, uint16_t nBlendAmt)	22
		7.2.2.5	gslc_ColorBlend3(gslc_tsColor colStart, gslc_tsColor colMid, gslc_tsColor col↔ End, uint16_t nMidAmt, uint16_t nBlendAmt)	22
		7.2.2.6	gslc_ColorEqual(gslc_tsColor a, gslc_tsColor b)	23
		7.2.2.7	gslc_cosFX(int16_t n64Ang)	23
		7.2.2.8	gslc_ExpandRect(gslc_tsRect rRect, int16_t nExpandW, int16_t nExpandH)	23
		7.2.2.9	gslc_GetImageFromFile(const char *pFname, gslc_teImgRefFlags eFmt)	24
		7.2.2.10	gslc_GetImageFromProg(const unsigned char *pImgBuf, gslc_teImgRefFlags eFmt)	24
		7.2.2.11	gslc_GetImageFromRam(unsigned char *pImgBuf, gslc_teImgRefFlags eFmt) .	24
		7.2.2.12	gslc_GetImageFromSD(const char *pFname, gslc_teImgRefFlags eFmt)	24
		7.2.2.13	gslc_InvalidateRgnAdd(gslc_tsGui *pGui, gslc_tsRect rAddRect)	25
		7.2.2.14	gslc_InvalidateRgnPage(gslc_tsGui *pGui, gslc_tsPage *pPage)	25
		7.2.2.15	gslc_InvalidateRgnReset(gslc_tsGui *pGui)	25
		7.2.2.16	gslc_InvalidateRgnScreen(gslc_tsGui *pGui)	26

CONTENTS

		7.2.2.17	gslc_lslnRect(int16_t nSelX, int16_t nSelY, gslc_tsRect rRect)	26
		7.2.2.18	gslc_lsInWH(int16_t nSelX, int16_t nSelY, uint16_t nWidth, uint16_t nHeight)	26
		7.2.2.19	gslc_PolarToXY(uint16_t nRad, int16_t n64Ang, int16_t *nDX, int16_t *nDY)	27
		7.2.2.20	gslc_sinFX(int16_t n64Ang)	27
		7.2.2.21	gslc_UnionRect(gslc_tsRect *pRect, gslc_tsRect rAddRect)	27
7.3	Graphi	cs Primitiv	re Functions	29
	7.3.1	Detailed	Description	30
	7.3.2	Function	Documentation	30
		7.3.2.1	gslc_DrawFillCircle(gslc_tsGui *pGui, int16_t nMidX, int16_t nMidY, uint16_t n↔ Radius, gslc_tsColor nCol)	30
		7.3.2.2	gslc_DrawFillGradSector(gslc_tsGui *pGui, int16_t nQuality, int16_t nMidX, int16_t nMidY, int16_t nRad1, int16_t nRad2, gslc_tsColor cArcStart, gslc_tsColor cArcEnd, int16_t nAngSecStart, int16_t nAngSecEnd, int16_t nAngGradStart, int16_t nAngGradRange)	30
		7.3.2.3	gslc_DrawFillQuad(gslc_tsGui *pGui, gslc_tsPt *psPt, gslc_tsColor nCol)	31
		7.3.2.4	gslc_DrawFillRect(gslc_tsGui *pGui, gslc_tsRect rRect, gslc_tsColor nCol)	31
		7.3.2.5	gslc_DrawFillRoundRect(gslc_tsGui *pGui, gslc_tsRect rRect, int16_t nRadius, gslc_tsColor nCol)	31
		7.3.2.6	gslc_DrawFillSector(gslc_tsGui *pGui, int16_t nQuality, int16_t nMidX, int16_ t nMidY, int16_t nRad1, int16_t nRad2, gslc_tsColor cArc, int16_t nAngSecStart, int16_t nAngSecEnd)	32
		7.3.2.7	gslc_DrawFillTriangle(gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, int16_t nX2, int16_t nY2, gslc_tsColor nCol)	32
		7.3.2.8	gslc_DrawFrameCircle(gslc_tsGui *pGui, int16_t nMidX, int16_t nMidY, uint16_t nRadius, gslc_tsColor nCol)	33
		7.3.2.9	gslc_DrawFrameQuad(gslc_tsGui *pGui, gslc_tsPt *psPt, gslc_tsColor nCol)	33
		7.3.2.10	gslc_DrawFrameRect(gslc_tsGui *pGui, gslc_tsRect rRect, gslc_tsColor nCol) .	33
		7.3.2.11	gslc_DrawFrameRoundRect(gslc_tsGui *pGui, gslc_tsRect rRect, int16_t n← Radius, gslc_tsColor nCol)	34
		7.3.2.12	gslc_DrawFrameTriangle(gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, int16_t nX2, int16_t nY2, gslc_tsColor nCol)	34
		7.3.2.13	gslc_DrawLine(gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, gslc_tsColor nCol)	35
		7.3.2.14	gslc_DrawLineH(gslc_tsGui *pGui, int16_t nX, int16_t nY, uint16_t nW, gslc_ts⇔ Color nCol)	35
		7.3.2.15	gslc_DrawLinePolar(gslc_tsGui *pGui, int16_t nX, int16_t nY, uint16_t nRadStart, uint16_t nRadEnd, int16_t n64Ang, gslc_tsColor nCol)	35

vi

		7.3.2.16	gslc_DrawLineV(gslc_tsGui ∗pGui, int16_t nX, int16_t nY, uint16_t nH, gslc_ts↔ Color nCol)	36
		7.3.2.17	gslc_DrawSetPixel(gslc_tsGui *pGui, int16_t nX, int16_t nY, gslc_tsColor nCol) .	36
7.4	Font F	unctions .		38
	7.4.1	Detailed	Description	38
	7.4.2	Function	Documentation	38
		7.4.2.1	$gslc_FontAdd(gslc_tsGui*pGui, int16_t nFontId, gslc_teFontRefType eFontRef \\ \leftarrow Type, const void *pvFontRef, uint16_t nFontSz)$	38
		7.4.2.2	gslc_FontGet(gslc_tsGui *pGui, int16_t nFontId)	39
		7.4.2.3	gslc_FontSet(gslc_tsGui *pGui, int16_t nFontId, gslc_teFontRefType eFontRef↔ Type, const void *pvFontRef, uint16_t nFontSz)	39
		7.4.2.4	gslc_FontSetMode(gslc_tsGui *pGui, int16_t nFontId, gslc_teFontRefMode e↔ FontMode)	39
7.5	Page F	unctions		41
	7.5.1	Detailed	Description	41
	7.5.2	Function	Documentation	41
		7.5.2.1	gslc_GetPageCur(gslc_tsGui *pGui)	41
		7.5.2.2	gslc_PageAdd(gslc_tsGui *pGui, int16_t nPageId, gslc_tsElem *psElem, uint16_t nMaxElem, gslc_tsElemRef *psElemRef, uint16_t nMaxElemRef)	42
		7.5.2.3	gslc_PageFindElemById(gslc_tsGui *pGui, int16_t nPageId, int16_t nElemId)	42
		7.5.2.4	gslc_PageRedrawGet(gslc_tsGui *pGui)	43
		7.5.2.5	gslc_PageRedrawSet(gslc_tsGui *pGui, bool bRedraw)	43
		7.5.2.6	gslc_PopupHide(gslc_tsGui *pGui)	43
		7.5.2.7	gslc_PopupShow(gslc_tsGui *pGui, int16_t nPageId, bool bModal)	43
		7.5.2.8	gslc_SetPageBase(gslc_tsGui *pGui, int16_t nPageId)	44
		7.5.2.9	gslc_SetPageCur(gslc_tsGui *pGui, int16_t nPageId)	44
		7.5.2.10	gslc_SetPageOverlay(gslc_tsGui *pGui, int16_t nPageId)	44
		7.5.2.11	gslc_SetStackPage(gslc_tsGui *pGui, uint8_t nStackPos, int16_t nPageId)	45
		7.5.2.12	gslc_SetStackState(gslc_tsGui *pGui, uint8_t nStackPos, bool bActive, bool b⇔ DoDraw)	45
7.6	Eleme	nt Functior	ns	46
	7.6.1	Detailed	Description	46
7.7	Eleme	nt: Creatio	n Functions	47

CONTENTS vii

	7.7.1	Detailed	Description	47
	7.7.2	Function	Documentation	47
		7.7.2.1	gslc_ElemCreateBox(gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_← tsRect rElem)	47
		7.7.2.2	gslc_ElemCreateBtnImg(gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsRect rElem, gslc_tsImgRef sImgRef, gslc_tsImgRef sImgRefSel, GSLC← CB_TOUCH cbTouch)	48
		7.7.2.3	gslc_ElemCreateBtnTxt(gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc _tsRect rElem, char *pStrBuf, uint8_t nStrBufMax, int16_t nFontId, GSLC_CB _TOUCH cbTouch)	48
		7.7.2.4	gslc_ElemCreateImg(gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_← tsRect rElem, gslc_tsImgRef sImgRef)	49
		7.7.2.5	gslc_ElemCreateLine(gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1)	49
		7.7.2.6	gslc_ElemCreateTxt(gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_ts⇔ Rect rElem, char *pStrBuf, uint8_t nStrBufMax, int16_t nFontId)	50
7.8	Eleme	nt: Genera	al Functions	51
	7.8.1	Detailed	Description	51
	7.8.2	Function	Documentation	51
		7.8.2.1	gslc_ElemGetId(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)	51
7.9	Eleme	nt: Update	Functions	52
	7.9.1	Detailed	Description	53
	7.9.2	Function	Documentation	53
		7.9.2.1	gslc_ElemGetGlow(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)	53
		7.9.2.2	gslc_ElemGetGlowEn(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)	54
		7.9.2.3	gslc_ElemGetGroup(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)	54
		7.9.2.4	gslc_ElemGetOnScreen(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)	54
		7.9.2.5	gslc_ElemGetRedraw(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)	55
		7.9.2.6	gslc_ElemGetTxtStr(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)	55
		7.9.2.7	gslc_ElemGetVisible(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)	55
		7.9.2.8	gslc_ElemOwnsCoord(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nX, int16_t nY, bool bOnlyClickEn)	56
		7.9.2.9	gslc_ElemSetClickEn(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool b← ClickEn)	56

viii CONTENTS

7.9.2.10	gslc_ElemSetCol(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor colFrame, gslc_tsColor colFill, gslc_tsColor colFillGlow)	56
7.9.2.11	gslc_ElemSetDrawFunc(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, GSLC↔ _CB_DRAW funcCb)	57
7.9.2.12	gslc_ElemSetFillEn(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bFillEn)	57
7.9.2.13	gslc_ElemSetFrameEn(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool b↔ FrameEn)	58
7.9.2.14	gslc_ElemSetGlow(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bGlowing)	58
7.9.2.15	gslc_ElemSetGlowCol(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_ts↔ Color colFrameGlow, gslc_tsColor colFillGlow, gslc_tsColor colTxtGlow)	58
7.9.2.16	gslc_ElemSetGlowEn(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool b⇔ GlowEn)	59
7.9.2.17	gslc_ElemSetGroup(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int nGroupId)	59
7.9.2.18	gslc_ElemSetRedraw(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_te↔ RedrawType eRedraw)	59
7.9.2.19	gslc_ElemSetRoundEn(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool b↔ RoundEn)	60
7.9.2.20	gslc_ElemSetStyleFrom(gslc_tsGui *pGui, gslc_tsElemRef *pElemRefSrc, gslc_tsElemRef *pElemRefDest)	60
7.9.2.21	gslc_ElemSetTickFunc(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, GSLC_← CB_TICK funcCb)	60
7.9.2.22	$ \begin{array}{llllllllllllllllllllllllllllllllllll$	61
7.9.2.23	gslc_ElemSetTxtAlign(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, unsigned nAlign)	61
7.9.2.24	gslc_ElemSetTxtCol(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor colVal)	62
7.9.2.25	gslc_ElemSetTxtEnc(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_te↔ TxtFlags eFlags)	63
7.9.2.26	gslc_ElemSetTxtMargin(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, unsigned nMargin)	63
7.9.2.27	gslc_ElemSetTxtMarginXY(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int8← _t nMarginX, int8_t nMarginY)	63
7.9.2.28	gslc_ElemSetTxtMem(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_te↔ TxtFlags eFlags)	64
7.9.2.29	gslc_ElemSetTxtStr(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, const char *pStr)	64
7.9.2.30	gslc_ElemSetVisible(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bVisible)	64

CONTENTS

		7.9.2.31	gslc_ElemUpdateFont(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int nFontId)	65
7.10	Touchs	creen Fun	ctions	66
	7.10.1	Detailed	Description	66
	7.10.2	Macro De	efinition Documentation	66
		7.10.2.1	TOUCH_ROTATION_DATA	66
		7.10.2.2	TOUCH_ROTATION_DATA	67
		7.10.2.3	TOUCH_ROTATION_FLIPX	67
		7.10.2.4	TOUCH_ROTATION_FLIPX	67
		7.10.2.5	TOUCH_ROTATION_FLIPY	67
		7.10.2.6	TOUCH_ROTATION_FLIPY	67
		7.10.2.7	TOUCH_ROTATION_SWAPXY	67
		7.10.2.8	TOUCH_ROTATION_SWAPXY	67
	7.10.3	Function	Documentation	67
		7.10.3.1	gslc_GetTouch(gslc_tsGui *pGui, int16_t *pnX, int16_t *pnY, uint16_t *pnPress, gslc_teInputRawEvent *peInputEvent, int16_t *pnInputVal)	67
		7.10.3.2	gslc_InitTouch(gslc_tsGui *pGui, const char *acDev)	67
		7.10.3.3	gslc_SetTouchRemapCal(gslc_tsGui *pGui, uint16_t nXMin, uint16_t nXMax, uint16_t nYMin, uint16_t nYMax)	68
		7.10.3.4	gslc_SetTouchRemapEn(gslc_tsGui *pGui, bool bEn)	68
		7.10.3.5	gslc_SetTouchRemapYX(gslc_tsGui *pGui, bool bSwap)	68
7.11	Input M	lapping Fu	unctions	70
	7.11.1	Detailed	Description	70
	7.11.2	Function	Documentation	70
		7.11.2.1	gslc_InitInputMap(gslc_tsGui *pGui, gslc_tsInputMap *asInputMap, uint8_t n⇔ InputMapMax)	70
		7.11.2.2	gslc_InputMapAdd(gslc_tsGui *pGui, gslc_teInputRawEvent eInputEvent, int16_t nInputVal, gslc_teAction eAction, int16_t nActionVal)	70
		7.11.2.3	gslc_SetPinPollFunc(gslc_tsGui *pGui, GSLC_CB_PIN_POLL pfunc)	70
7.12	Genera	al Purpose	Macros	71
	7.12.1	Detailed	Description	71
	7.12.2	Macro De	efinition Documentation	71
		7.12.2.1	GSLC_DEBUG2_PRINT	71

CONTENTS

	7.12.2.2	GSLC_DEBUG2_PRINT_CONST	. 71
	7.12.2.3	GSLC_DEBUG_PRINT	. 71
	7.12.2.4	GSLC_DEBUG_PRINT_CONST	. 71
7.13 Flash-	based Eler	ment Macros	. 72
7.13.1	Detailed	Description	. 72
7.13.2	Macro De	efinition Documentation	. 72
	7.13.2.1	gslc_ElemCreateBox_P	. 72
	7.13.2.2	gslc_ElemCreateBtnTxt_P	. 73
	7.13.2.3	gslc_ElemCreateLine_P	. 73
	7.13.2.4	gslc_ElemCreateTxt_P	. 73
	7.13.2.5	gslc_ElemCreateTxt_P_R	. 74
7.14 Interna	al Functions	s	. 75
7.14.1	Detailed	Description	. 80
7.14.2	Variable I	Documentation	. 80
	7.14.2.1	abPageStackActive	. 80
	7.14.2.2	abPageStackDoDraw	. 80
	7.14.2.3	apPageStack	. 80
	7.14.2.4	asElem	. 81
	7.14.2.5	asElemRef	. 81
	7.14.2.6	asFont	. 81
	7.14.2.7	asInputMap	. 81
	7.14.2.8	asPage	. 81
	7.14.2.9	b	. 81
	7.14.2.10) blnvalidateEn	. 81
	7.14.2.11	1 bRedrawPartialEn	. 81
	7.14.2.12	2 bScreenNeedFlip	. 81
	7.14.2.13	B bScreenNeedRedraw	. 81
	7.14.2.14	4 bTouchRemapEn	. 82
	7.14.2.15	5 bTouchRemapYX	. 82
	7.14.2.16	6 colElemFill	. 82

CONTENTS xi

7.14.2.17 colElemFillGlow
7.14.2.18 colElemFrame
7.14.2.19 colElemFrameGlow
7.14.2.20 colElemText
7.14.2.21 colElemTextGlow
7.14.2.22 eAction
7.14.2.23 eElemFlags
7.14.2.24 eEvent
7.14.2.25 eFontRefMode
7.14.2.26 eFontRefType
7.14.2.27 elmgFlags
7.14.2.28 eInitStatTouch
7.14.2.29 eTouch
7.14.2.30 eTxtAlign
7.14.2.31 eTxtFlags
7.14.2.32 eType
7.14.2.33 g
7.14.2.34 h
7.14.2.35 nActionVal
7.14.2.36 nDisp0H
7.14.2.37 nDisp0W
7.14.2.38 nDispDepth
7.14.2.39 nDispH
7.14.2.40 nDispW
7.14.2.41 nElemAutoldNext
7.14.2.42 nElemCnt
7.14.2.43 nElemIndFocused
7.14.2.44 nElemMax
7.14.2.45 nElemRefCnt
7.14.2.46 nElemRefMax

xii CONTENTS

7.14.2.47 nFeatures
7.14.2.48 nFlipX
7.14.2.49 nFlipY
7.14.2.50 nFontCnt
7.14.2.51 nFontMax
7.14.2.52 nFrameRateCnt
7.14.2.53 nFrameRateStart
7.14.2.54 nGroup
7.14.2.55 nld
7.14.2.56 nld
7.14.2.57 nInputMapCnt
7.14.2.58 nInputMapMax
7.14.2.59 nPageCnt
7.14.2.60 nPageId
7.14.2.61 nPageMax
7.14.2.62 nRotation
7.14.2.63 nRoundRadius
7.14.2.64 nSize
7.14.2.65 nStrBufMax
7.14.2.66 nSubType
7.14.2.67 nSwapXY
7.14.2.68 nTouchCalXMax
7.14.2.69 nTouchCalXMin
7.14.2.70 nTouchCalYMax
7.14.2.71 nTouchCalYMin
7.14.2.72 nTouchLastPress
7.14.2.73 nTouchLastX
7.14.2.74 nTouchLastY
7.14.2.75 nTouchRotation
7.14.2.76 nTxtMarginX

CONTENTS xiii

7.14.2.77 nTxtMarginY
7.14.2.78 nType
7.14.2.79 nVal
7.14.2.80 nX
7.14.2.81 nY
7.14.2.82 pElem
7.14.2.83 pElemRefParent
7.14.2.84 pElemRefTracked
7.14.2.85 pFname
7.14.2.86 pfuncPinPoll
7.14.2.87 pfuncXDraw
7.14.2.88 pfuncXEvent
7.14.2.89 pfuncXTick
7.14.2.90 pfuncXTouch
7.14.2.91 plmgBuf
7.14.2.92 pStrBuf
7.14.2.93 pTxtFont
7.14.2.94 pvData
7.14.2.95 pvDriver
7.14.2.96 pvFont
7.14.2.97 pvlmgRaw
7.14.2.98 pvScope
7.14.2.99 pXData
7.14.2.100°
7.14.2.101rBounds
7.14.2.102 Elem
7.14.2.103 Invalidate Rect
7.14.2.104sCollect
7.14.2.105sElemRefTmp
7.14.2.106sElemTmp

xiv CONTENTS

	7.14.2.10	07sElemTmpProg	91
	7.14.2.10	08sImgRefBkgnd	91
	7.14.2.10	9sImgRefGlow	91
	7.14.2.11	0sImgRefNorm	91
	7.14.2.11	1sTransCol	91
	7.14.2.11	2w	91
	7.14.2.11	3x	91
	7.14.2.11	4x	91
	7.14.2.11	5y	91
	7.14.2.11	θy	91
7.15 Interna	l: Misc Fu	nctions	92
7.15.1	Detailed	Description	92
7.15.2	Function	Documentation	92
	7.15.2.1	gslc_ResetImage()	92
7.16 Interna	l: Element	Functions	93
7.16.1	Detailed	Description	94
7.16.2	Function	Documentation	94
	7.16.2.1	gslc_DrawTxtBase(gslc_tsGui *pGui, char *pStrBuf, gslc_tsRect rTxt, gslc_ts↔ Font *pTxtFont, gslc_teTxtFlags eTxtFlags, int8_t eTxtAlign, gslc_tsColor colTxt, gslc_tsColor colBg, int16_t nMarginW, int16_t nMarginH)	94
	7.16.2.2	gslc_ElemAdd(gslc_tsGui *pGui, int16_t nPageId, gslc_tsElem *pElem, gslc_← teElemRefFlags eFlags)	94
	7.16.2.3	$\label{eq:gslc_tsGui} $$ gslc_ElemCreate(gslc_tsGui*pGui, int16_t nElemId, int16_t nPageId, int16_t n$$ Type, gslc_tsRect rElem, char *pStrBuf, uint8_t nStrBufMax, int16_t nFontId) $	95
	7.16.2.4	gslc_ElemDraw(gslc_tsGui *pGui, int16_t nPageId, int16_t nElemId)	95
	7.16.2.5	gslc_ElemDrawByRef(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_te↔ RedrawType eRedraw)	96
	7.16.2.6	gslc_ElemSetImage(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsImg↔ Ref sImgRef, gslc_tsImgRef sImgRefSel)	96
	7.16.2.7	gslc_GetElemFromRef(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)	96
	7.16.2.8	gslc_GetElemFromRefD(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_← t nLineNum)	97
	7.16.2.9	gslc_GetElemRefFlag(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, uint8_t n↔ FlagMask)	97

CONTENTS xv

		7.16.2.10	gslc_GetXDataFromRef(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_← t nType, int16_t nLineNum)	97
		7.16.2.11	gslc_SetElemRefFlag(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, uint8_t n↔ FlagMask, uint8_t nFlagVal)	98
		7.16.2.12	gslc_SetRoundRadius(gslc_tsGui *pGui, uint8_t nRadius)	98
7.17	Interna	I: Page Fu	nctions	99
	7.17.1	Detailed	Description	99
	7.17.2	Function	Documentation	99
		7.17.2.1	gslc_ElemEvent(void *pvGui, gslc_tsEvent sEvent)	99
		7.17.2.2	$gslc_ElemSendEventTouch(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef \leftrightarrow Tracked, gslc_teTouch eTouch, int16_t nX, int16_t nY) \\ $	100
		7.17.2.3	gslc_EventCreate(gslc_tsGui *pGui, gslc_teEventType eType, uint8_t nSubType, void *pvScope, void *pvData)	100
		7.17.2.4	gslc_PageEvent(void *pvGui, gslc_tsEvent sEvent)	101
		7.17.2.5	gslc_PageFindByld(gslc_tsGui *pGui, int16_t nPageId)	101
		7.17.2.6	gslc_PageFlipGet(gslc_tsGui *pGui)	101
		7.17.2.7	gslc_PageFlipGo(gslc_tsGui *pGui)	101
		7.17.2.8	gslc_PageFlipSet(gslc_tsGui *pGui, bool bNeeded)	102
		7.17.2.9	gslc_PageFocusStep(gslc_tsGui *pGui, gslc_tsPage *pPage, bool bNext)	102
		7.17.2.10	gslc_PageRedrawCalc(gslc_tsGui *pGui)	102
		7.17.2.11	gslc_PageRedrawGo(gslc_tsGui *pGui)	103
7.18	Interna	l: Element	Collection Functions	104
	7.18.1	Detailed	Description	105
	7.18.2	Function	Documentation	105
		7.18.2.1	gslc_CollectElemAdd(gslc_tsGui *pGui, gslc_tsCollect *pCollect, const gslc_ts⇔ Elem *pElem, gslc_teElemRefFlags eFlags)	105
		7.18.2.2	$gslc_CollectFindElemByld(gslc_tsGui *pGui, gslc_tsCollect *pCollect, int16_ {\leftarrow} t \; nElemId) \;\; . \;\; . \;\; . \;\; . \;\; . \;\; . \;\; . \;\;$	105
		7.18.2.3	$ \begin{array}{llllllllllllllllllllllllllllllllllll$	105
		7.18.2.4	gslc_CollectFindFocusStep(gslc_tsGui *pGui, gslc_tsCollect *pCollect, bool b⇔ Next, bool *pbWrapped, int16_t *pnElemInd)	106
		7.18.2.5	gslc_CollectGetElemRefTracked(gslc_tsGui *pGui, gslc_tsCollect *pCollect)	106
		7.18.2.6	gslc_CollectGetFocus(gslc_tsGui *pGui, gslc_tsCollect *pCollect)	106

xvi CONTENTS

		7.18.2.7	gslc_CollectGetNextId(gslc_tsGui *pGui, gslc_tsCollect *pCollect)	107
		7.18.2.8	gslc_CollectGetRedraw(gslc_tsGui *pGui, gslc_tsCollect *pCollect)	107
		7.18.2.9	$gslc_CollectReset(gslc_tsCollect *pCollect, gslc_tsElem *asElem, uint16_t n {\leftarrow} ElemMax, gslc_tsElemRef *asElemRef, uint16_t nElemRefMax)$	107
		7.18.2.10	$gslc_CollectSetElemTracked(gslc_tsGui *pGui, gslc_tsCollect *pCollect, gslc_ \leftrightarrow tsElemRef *pElemRef)$	108
		7.18.2.11	$ \begin{array}{llllllllllllllllllllllllllllllllllll$	108
		7.18.2.12	gslc_CollectSetParent(gslc_tsGui *pGui, gslc_tsCollect *pCollect, gslc_tsElem⊷ Ref *pElemRefParent)	108
7.19	Interna	l: Element	Collection Event Functions	110
	7.19.1	Detailed	Description	110
	7.19.2	Function	Documentation	110
		7.19.2.1	gslc_CollectEvent(void *pvGui, gslc_tsEvent sEvent)	110
		7.19.2.2	gslc_CollectInput(gslc_tsGui *pGui, gslc_tsCollect *pCollect, gslc_tsEventTouch *pEventTouch)	110
		7.19.2.3	$gslc_CollectTouch(gslc_tsGui *pGui, gslc_tsCollect *pCollect, gslc_tsEvent \leftarrow Touch *pEventTouch) \\ $	111
		7.19.2.4	$gslc_CollectTouchCompound(void *pvGui, void *pvElemRef, gslc_teTouch e \leftarrow Touch, int16_t nRelX, int16_t nRelY, gslc_tsCollect *pCollect)$	111
7.20	Interna	I: Tracking	Functions	112
	7.20.1	Detailed	Description	112
	7.20.2	Function	Documentation	112
		7.20.2.1	gslc_InputMapLookup(gslc_tsGui *pGui, gslc_teInputRawEvent eInputEvent, int16_t nInputVal, gslc_teAction *peAction, int16_t *pnActionVal)	112
		7.20.2.2	gslc_TrackInput(gslc_tsGui *pGui, gslc_tsPage *pPage, gslc_teInputRawEvent eInputEvent, int16_t nInputVal)	112
		7.20.2.3	gslc_TrackTouch(gslc_tsGui *pGui, gslc_tsPage *pPage, int16_t nX, int16_t nY, uint16_t nPress)	113
7.21	Interna	l: Cleanup	Functions	114
	7.21.1	Detailed	Description	114
	7.21.2	Function	Documentation	114
		7.21.2.1	gslc_CollectDestruct(gslc_tsGui *pGui, gslc_tsCollect *pCollect)	114
		7.21.2.2	gslc_ElemDestruct(gslc_tsElem *pElem)	115
		7.21.2.3	gslc_GuiDestruct(gslc_tsGui *pGui)	116
		7.21.2.4	gslc_PageDestruct(gslc_tsGui *pGui, gslc_tsPage *pPage)	116
		7.21.2.5	gslc_ResetElem(gslc_tsElem *pElem)	116
		7.21.2.6	gslc_ResetFont(gslc_tsFont *pFont)	117

CONTENTS xvii

8	Data	Structure Documentation	119
	8.1	gslc_tsCollect Struct Reference	119
		8.1.1 Detailed Description	120
	8.2	gslc_tsColor Struct Reference	120
		8.2.1 Detailed Description	120
	8.3	gslc_tsDriver Struct Reference	121
		8.3.1 Field Documentation	121
		8.3.1.1 nColBkgnd	121
		8.3.1.2 rClipRect	121
	8.4	gslc_tsElem Struct Reference	122
		8.4.1 Detailed Description	123
	8.5	gslc_tsElemRef Struct Reference	124
		8.5.1 Detailed Description	124
	8.6	gslc_tsEvent Struct Reference	124
		8.6.1 Detailed Description	125
	8.7	gslc_tsEventTouch Struct Reference	125
		8.7.1 Detailed Description	125
	8.8	gslc_tsFont Struct Reference	125
		8.8.1 Detailed Description	126
	8.9	gslc_tsGui Struct Reference	126
		8.9.1 Detailed Description	128
	8.10	gslc_tsImgRef Struct Reference	128
		8.10.1 Detailed Description	129
	8.11	gslc_tsInputMap Struct Reference	129
		8.11.1 Detailed Description	129
	8.12	gslc_tsPage Struct Reference	130
		8.12.1 Detailed Description	130
	8.13	gslc_tsPt Struct Reference	131
		8.13.1 Detailed Description	131
	8.14	gslc_tsRect Struct Reference	131

xviii CONTENTS

	8.14.1	Detailed Description	131
8.15	gslc_ts	Checkbox Struct Reference	132
	8.15.1	Detailed Description	132
	8.15.2	Field Documentation	132
		8.15.2.1 bChecked	132
		8.15.2.2 bRadio	132
		8.15.2.3 colCheck	133
		8.15.2.4 nStyle	133
		8.15.2.5 pfuncXToggle	133
8.16	gslc_ts	Gauge Struct Reference	133
	8.16.1	Detailed Description	134
	8.16.2	Field Documentation	134
		8.16.2.1 bFlip	134
		8.16.2.2 blndicFill	134
		8.16.2.3 bValLastValid	135
		8.16.2.4 bVert	135
		8.16.2.5 colGauge	135
		8.16.2.6 colTick	135
		8.16.2.7 nIndicLen	135
		8.16.2.8 nIndicTip	135
		8.16.2.9 nMax	135
		8.16.2.10 nMin	135
		8.16.2.11 nStyle	135
		8.16.2.12 nTickCnt	135
		8.16.2.13 nTickLen	136
		8.16.2.14 nVal	136
		8.16.2.15 nValLast	136
8.17	gslc_ts	Glowball Struct Reference	136
	8.17.1	Detailed Description	137
	8.17.2	Field Documentation	137

CONTENTS xix

		8.17.2.1	colBg			 	 	 	 ٠.	 	 137
		8.17.2.2	nAngEnd			 	 	 	 	 	 137
		8.17.2.3	nAngStart .			 	 	 	 	 	 137
		8.17.2.4	nMidX			 	 	 	 	 	 137
		8.17.2.5	nMidY			 	 	 	 	 	 138
		8.17.2.6	nNumRings			 	 	 	 	 	 138
		8.17.2.7	nQuality			 	 	 	 	 	 138
		8.17.2.8	nVal			 	 	 	 	 	 138
		8.17.2.9	nValLast			 	 	 	 	 	 138
		8.17.2.10	pRings			 	 	 	 	 	 138
8.18 gs	slc_ts	XGlowball	Ring Struct Re	eference)	 	 	 	 	 	 138
8.	.18.1	Field Doc	umentation .			 	 	 	 	 	 139
		8.18.1.1	cCol			 	 	 	 	 	 139
		8.18.1.2	nRad1			 	 	 	 	 	 139
		8.18.1.3	nRad2			 	 	 	 	 	 139
8.19 gs	slc_ts	XGraph St	ruct Referenc	е		 	 	 	 	 	 139
8.	.19.1	Detailed [Description .			 	 	 	 	 	 140
8.	.19.2	Field Doc	umentation .			 	 	 	 	 	 140
		8.19.2.1	bScrollEn			 	 	 	 	 	 140
		8.19.2.2	colGraph			 	 	 	 	 	 140
		8.19.2.3	eStyle			 	 	 	 	 	 141
		8.19.2.4	nBufCnt			 	 	 	 	 	 141
		8.19.2.5	nBufMax			 	 	 	 	 	 141
		8.19.2.6	nMargin			 	 	 	 	 	 141
		8.19.2.7	nPlotIndMax			 	 	 	 	 	 141
		8.19.2.8	nPlotIndStart	:		 	 	 	 	 	 141
		8.19.2.9	nPlotValMax			 	 	 	 	 	 141
		8.19.2.10	nPlotValMin			 	 	 	 	 	 141
		8.19.2.11	nScrollPos .			 	 	 	 	 	 141
		8.19.2.12	nWndHeight			 	 	 	 	 	 141

CONTENTS

	8.19.2.13 nWndWidth	142
	8.19.2.14 pBuf	142
8.20 gslc_ts	XKeyPad Struct Reference	142
8.20.1	Detailed Description	143
8.20.2	Field Documentation	143
	8.20.2.1 acValStr	143
	8.20.2.2 bValDecimalPt	143
	8.20.2.3 bValPositive	143
	8.20.2.4 nSubElemMax	143
	8.20.2.5 nTargetId	143
	8.20.2.6 nValStrPos	143
	8.20.2.7 pacKeys	144
	8.20.2.8 pfuncCb	144
	8.20.2.9 pfuncLookup	144
	8.20.2.10 psElem	144
	8.20.2.11 psElemRef	144
	8.20.2.12 sCollect	144
	8.20.2.13 sConfig	144
8.21 gslc_ts	XKeyPad_Alpha Struct Reference	144
8.21.1	Field Documentation	145
	8.21.1.1 asElem	145
	8.21.1.2 asElemRef	145
	8.21.1.3 sKeyPad	145
8.22 gslc_ts	XKeyPad_Num Struct Reference	145
8.22.1	Field Documentation	146
	8.22.1.1 asElem	146
	8.22.1.2 asElemRef	146
	8.22.1.3 sKeyPad	146
8.23 gslc_ts	XKeyPadCfg Struct Reference	146
8.23.1	Detailed Description	147

CONTENTS xxi

	8.23.2	Field Documentation	17
		8.23.2.1 bFloatEn	17
		8.23.2.2 bRoundEn	17
		8.23.2.3 bSignEn	17
		8.23.2.4 nButtonSzH	1 8
		8.23.2.5 nButtonSzW	48
		8.23.2.6 nFontld	48
		8.23.2.7 nFrameMargin	48
		8.23.2.8 nMaxCols	1 8
		8.23.2.9 nMaxRows	1 8
		8.23.2.10 nOffsetX	1 8
		8.23.2.11 nOffsetY	48
		8.23.2.12 pacKeys	1 8
8.24	gslc_ts	XKeyPadData Struct Reference	49
	8.24.1	Detailed Description	49
	8.24.2	Field Documentation	49
		8.24.2.1 nTargetId	49
		8.24.2.2 pStr	49
8.25	gslc_ts	XListbox Struct Reference	49
	8.25.1	Detailed Description	50
	8.25.2	Field Documentation	51
		8.25.2.1 bltemAutoSizeH	51
		8.25.2.2 bltemAutoSizeW	51
		8.25.2.3 bNeedRecalc	51
		8.25.2.4 colGap	51
		8.25.2.5 nBufltemsMax	51
		8.25.2.6 nBufltemsPos	51
		8.25.2.7 nCols	51
		8.25.2.8 nltemCnt	51
		8.25.2.9 nltemCurSel	51

xxii CONTENTS

		8.25.2.10	0 r	nlt	ten	nCı	urS	Sell	_a	st										 			 	151
		8.25.2.11	1 r	nlt	ten	nG	ар													 			 	152
		8.25.2.12	2 r	nlt	ten	nН														 			 	152
		8.25.2.13	3 r	nlt	ten	nSa	ave	edS	Sel											 			 	152
		8.25.2.14	4 r	nlt	ten	nTo	р													 			 	152
		8.25.2.15	5 r	nlt	ten	nW	١.													 			 	152
		8.25.2.16	6 r	nN	Лaг	rgir	ηH													 			 	152
		8.25.2.17	7 r	nN	Лaг	rgir	٦W													 			 	152
		8.25.2.18	8 r	nF	₹ov	NS														 			 	152
		8.25.2.19	9 r	pΒ	3uf	Iter	ms													 			 	152
		8.25.2.20	0 k	pfı	und	cXS	Sel													 			 	152
8.26	gslc_ts	XProgress	s S	Stı	ruc	t F	?efe	ere	nc	е										 			 	153
8	8.26.1	Detailed	De	es	scri	ipti	on													 			 	153
8	8.26.2	Field Doo	cu	ım	en	tati	ion	١.												 			 	153
		8.26.2.1	k	bF	⁼lip	١.														 			 	153
		8.26.2.2	k	bV	/all	Las	stVa	alic	١.											 			 	154
		8.26.2.3	k	bV	/er	t.														 			 	154
		8.26.2.4	C	СО	lG	aug	ge													 			 	154
		8.26.2.5	r	n l	Лaх	х.														 			 	154
		8.26.2.6	r	n l	/lin	١.														 			 	154
		8.26.2.7	r	nV	/al															 			 	154
		8.26.2.8	r	nV	/all	Las	st													 			 	154
8.27	gslc_ts	XRadial S	3trı	uc	t F	Refe	ere	nc	е											 			 	154
8	8.27.1	Detailed	De	es	scri	ipti	on													 			 	155
8	8.27.2	Field Doo	cu	ım	en	tati	ion	١.												 			 	155
		8.27.2.1	k	bF	⁼lip															 			 	155
		8.27.2.2	k	blr	ndi	cFi	ill													 			 	155
		8.27.2.3	k	b۷	/all	Las	stVa	alic	ı .											 			 	155
		8.27.2.4	C	СО	lG	auç	ge													 			 	156
		8.27.2.5	C	СО	lTi	ck														 			 	156

CONTENTS xxiii

8.27.2.6 nIndicLen
8.27.2.7 nIndicTip
8.27.2.8 nMax
8.27.2.9 nMin
8.27.2.10 nTickCnt
8.27.2.11 nTickLen
8.27.2.12 nVal
8.27.2.13 nValLast
sXRamp Struct Reference
Detailed Description
Prield Documentation
8.28.2.1 bValLastValid
8.28.2.2 nMax
8.28.2.3 nMin
8.28.2.4 nVal
8.28.2.5 nValLast
sXRingGauge Struct Reference
Detailed Description
2 Field Documentation
8.29.2.1 acStrLast
8.29.2.2 bGradient
8.29.2.3 colRing1
8.29.2.4 colRing2
8.29.2.5 colRingRemain
8.29.2.6 nAngRange
8.29.2.7 nAngStart
8.29.2.8 nQuality
8.29.2.9 nSegGap
8.29.2.10 nThickness
8.29.2.11 nVal

xxiv CONTENTS

	8.29.2.12 nValLast	9
	8.29.2.13 nValMax	9
	8.29.2.14 nValMin	9
8.30 gslc_ts	sXSelNum Struct Reference	0
8.30.1	Detailed Description	0
8.30.2	Field Documentation	0
	8.30.2.1 acElemTxt	0
	8.30.2.2 asElem	0
	8.30.2.3 asElemRef	i 1
	8.30.2.4 nCounter	i 1
	8.30.2.5 sCollect	i 1
8.31 gslc_ts	sXSlider Struct Reference	i 1
8.31.1	Detailed Description	2
8.31.2	Field Documentation	2
	8.31.2.1 bTrim	2
	8.31.2.2 bVert	2
	8.31.2.3 colTick	2
	8.31.2.4 colTrim	2
	8.31.2.5 nPos	3
	8.31.2.6 nPosMax	3
	8.31.2.7 nPosMin	3
	8.31.2.8 nThumbSz	3
	8.31.2.9 nTickDiv	3
	8.31.2.10 nTickLen	3
	8.31.2.11 pfuncXPos	3
8.32 gslc_ts	sXSpinner Struct Reference	3
8.32.1	Detailed Description	i 4
8.32.2	Field Documentation	i 4
	8.32.2.1 acDecr	i 4
	8.32.2.2 acElemTxt	i 4

CONTENTS xxv

	8.32.2.3 aclncr
	8.32.2.4 asElem
	8.32.2.5 asElemRef
	8.32.2.6 nCounter
	8.32.2.7 nlncr
	8.32.2.8 nMax
	8.32.2.9 nMin
	8.32.2.10 pElemRef
	8.32.2.11 pfuncXInput
	8.32.2.12 sCollect
8.33 gslc_t	sXTemplate Struct Reference
8.33.1	Detailed Description
8.34 gslc_t	sXTextbox Struct Reference
8.34.1	Detailed Description
8.34.2	Prield Documentation
	8.34.2.1 bScrollEn
	8.34.2.2 bWrapEn
	8.34.2.3 nBufCols
	8.34.2.4 nBufPosX
	8.34.2.5 nBufPosY
	8.34.2.6 nBufRows
	8.34.2.7 nChSizeX
	8.34.2.8 nChSizeY
	8.34.2.9 nCurPosX
	8.34.2.10 nCurPosY
	8.34.2.11 nMarginX
	8.34.2.12 nMarginY
	8.34.2.13 nRedrawRow
	8.34.2.14 nScrollPos
	8.34.2.15 nWndCols

xxvi CONTENTS

	8.34.2.16	nWndRows	168
	8.34.2.17	$n Wnd Row Start \dots \dots$	169
	8.34.2.18	pBuf	169
ΓΗPoin	t Class Re	ference	169
3.35.1	Construct	or & Destructor Documentation	169
	8.35.1.1	THPoint(void)	169
	8.35.1.2	THPoint(uint16_t x, uint16_t y, uint16_t z)	169
3.35.2	Member F	Function Documentation	169
	8.35.2.1	operator"!=(THPoint)	169
	8.35.2.2	operator==(THPoint)	169
3.35.3	Field Doc	umentation	169
	8.35.3.1	x	169
	8.35.3.2	y	169
	8.35.3.3	z	169
TouchH	andler Cla	ass Reference	170
3.36.1	Construct	or & Destructor Documentation	170
	8.36.1.1	TouchHandler()	170
3.36.2	Member F	Function Documentation	170
	8.36.2.1	begin(void)	170
	8.36.2.2	getPoint(void)	170
	8.36.2.3	scale(THPoint pln)	171
	8.36.2.4	setCalibration(uint16_t ts_xMin, uint16_t ts_xMax, uint16_t ts_yMin, uint16_t ts _yMax)	171
	8.36.2.5	setSize(uint16_t _disp_xSize, uint16_t _disp_ySize)	171
	8.36.2.6	$setSwapFlip(bool_swapXY,bool_flipX,bool_flipY) \\ \ \ldots \\ \ \ldots \\ \ \ldots \\ \ \ldots$	171
TouchH	andler_XF	PT2046 Class Reference	171
3.37.1	Construct	or & Destructor Documentation	172
	8.37.1.1	TouchHandler_XPT2046(SPIClass &spi, uint8_t spi_cs_pin)	172
3.37.2	Member F	Function Documentation	172
	8.37.2.1	begin(void)	172
	8.37.2.2	getPoint(void)	172
3.37.3	Field Doc	umentation	172
	8.37.3.1	spi	172
	0.07.0.0	touchDriver	170
3 1 3 3	3.35.1 3.35.2 3.35.3 FouchH 3.36.1 3.37.1	8.34.2.17 8.34.2.18 THPoint Class Ref 3.35.1 Construct 8.35.1.1 8.35.1.2 8.35.2 Member R 8.35.2.1 8.35.2.2 8.35.3 Field Doc 8.35.3.1 8.35.3.2 8.35.3.3 TouchHandler Cla 8.36.1.1 8.36.2.1 8.36.2.1 8.36.2.1 8.36.2.2 8.36.2.6 TouchHandler_XR 8.36.2.5 8.36.2.6 TouchHandler_XR 8.37.1 Construct 8.37.1 R 8.37.2.2 R 8.37.2.1 R 8.37.2.2	8.35.1.2 THPoint(uint16_t x, uint16_t y, uint16_t z) 8.35.2.1 operator*I=(THPoint) 8.35.2.2 operator=(THPoint) 8.35.3.3 Field Documentation 8.35.3.1 x 8.35.3.2 y 8.35.3.3 z TouchHandler Class Reference 8.36.1 Constructor & Destructor Documentation 8.36.2.1 begin(void) 8.36.2.2 getPoint(void) 8.36.2.3 scale(THPoint pln) 8.36.2.4 setCalibration(uint16_t ts_xMin, uint16_t ts_xMax, uint16_t ts_yMin, uint16_t ts—yMax) 8.36.2.5 setSize(uint16_t_disp_xSize, uint16_t_disp_ySize) 8.36.2.6 setSwapFlip(bool_swapXY, bool_flipX, bool_flipY) TouchHandler_XPT2046 Class Reference 8.37.1 Constructor & Destructor Documentation 8.37.1.1 TouchHandler_XPT2046(SPIClass &spi, uint8_t spi_cs_pin) 8.37.2.1 begin(void) 8.37.2.2 getPoint(void) 8.37.2.2 getPoint(void) 8.37.2.2 getPoint(void)

CONTENTS xxvii

9	File	Docume	entation		173
	9.1	READI	ME.md File	e Reference	173
	9.2	src/ele	m/XCheck	box.c File Reference	173
		9.2.1	Function	Documentation	174
			9.2.1.1	$gslc_ElemXCheckboxCreate(gslc_tsGui *pGui, int16_t nElemId, int16_t n \hookleftarrow Page, gslc_tsXCheckbox *pXData, gslc_tsRect rElem, bool bRadio, gslc_teX \hookleftarrow CheckboxStyle nStyle, gslc_tsColor colCheck, bool bChecked)$	174
			9.2.1.2	gslc_ElemXCheckboxDraw(void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)	174
			9.2.1.3	gslc_ElemXCheckboxFindChecked(gslc_tsGui *pGui, int16_t nGroupId)	175
			9.2.1.4	gslc_ElemXCheckboxGetState(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef) .	175
			9.2.1.5	gslc_ElemXCheckboxSetState(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bChecked)	175
			9.2.1.6	gslc_ElemXCheckboxSetStateFunc(gslc_tsGui *pGui, gslc_tsElemRef *pElem↔ Ref, GSLC_CB_XCHECKBOX pfuncCb)	176
			9.2.1.7	gslc_ElemXCheckboxSetStateHelp(gslc_tsGui *pGui, gslc_tsElemRef *pElem↔ Ref, bool bChecked, bool bDoCb)	176
			9.2.1.8	gslc_ElemXCheckboxToggleState(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)	176
			9.2.1.9		176
		9.2.2	Variable l	Documentation	178
			9.2.2.1	ERRSTR_NULL	178
			9.2.2.2	ERRSTR_PXD_NULL	178
	9.3	src/ele	m/XCheck	box.h File Reference	178
		9.3.1	Macro De	efinition Documentation	179
			9.3.1.1	gslc_ElemXCheckboxCreate_P	179
			9.3.1.2	GSLC_TYPEX_CHECKBOX	180
		9.3.2	Typedef [Documentation	180
			9.3.2.1	GSLC_CB_XCHECKBOX	180
		9.3.3	Enumera	tion Type Documentation	180
			9.3.3.1	gslc_teXCheckboxStyle	180
		9.3.4	Function	Documentation	181

xxviii CONTENTS

		9.3.4.1	gslc_ElemXCheckboxCreate(gslc_tsGui *pGui, int16_t nElemId, int16_t n← Page, gslc_tsXCheckbox *pXData, gslc_tsRect rElem, bool bRadio, gslc_teX← CheckboxStyle nStyle, gslc_tsColor colCheck, bool bChecked)	181
		9.3.4.2	gslc_ElemXCheckboxDraw(void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)	182
		9.3.4.3	gslc_ElemXCheckboxFindChecked(gslc_tsGui *pGui, int16_t nGroupId)	182
		9.3.4.4	gslc_ElemXCheckboxGetState(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef) .	183
		9.3.4.5	gslc_ElemXCheckboxSetState(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bChecked)	183
		9.3.4.6	gslc_ElemXCheckboxSetStateFunc(gslc_tsGui *pGui, gslc_tsElemRef *pElem↔ Ref, GSLC_CB_XCHECKBOX pfuncCb)	183
		9.3.4.7	gslc_ElemXCheckboxToggleState(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)	183
		9.3.4.8	gslc_ElemXCheckboxTouch(void *pvGui, void *pvElemRef, gslc_teTouch e ← Touch, int16_t nRelX, int16_t nRelY)	184
9.4	src/ele	m/XGauge	e.c File Reference	184
	9.4.1	Function	Documentation	186
		9.4.1.1	gslc_ElemXGaugeCreate(gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsXGauge *pXData, gslc_tsRect rElem, int16_t nMin, int16_t nMax, int16_t nVal, gslc_tsColor colGauge, bool bVert)	186
		9.4.1.2	gslc_ElemXGaugeDraw(void *pvGui, void *pvElemRef, gslc_teRedrawType e↔ Redraw)	186
		9.4.1.3	gslc_ElemXGaugeDrawProgressBar(gslc_tsGui *pGui, gslc_tsElemRef *p↔ ElemRef, gslc_teRedrawType eRedraw)	187
		9.4.1.4	gslc_ElemXGaugeSetFlip(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bFlip)	187
		9.4.1.5	gslc_ElemXGaugeSetIndicator(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor colGauge, uint16_t nIndicLen, uint16_t nIndicTip, bool bIndicFill)	187
		9.4.1.6	gslc_ElemXGaugeSetStyle(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_teXGaugeStyle nStyle)	188
		9.4.1.7	gslc_ElemXGaugeSetTicks(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor colTick, uint16_t nTickCnt, uint16_t nTickLen)	188
		9.4.1.8	gslc_ElemXGaugeUpdate(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16↔ _t nVal)	189
	9.4.2	Variable	Documentation	189
		9.4.2.1	ERRSTR_NULL	189
		9.4.2.2	ERRSTR_PXD_NULL	189
9.5	src/ele	m/XGauge	e.h File Reference	189

CONTENTS xxix

	9.5.1	Macro De	efinition Documentation	191
		9.5.1.1	gslc_ElemXGaugeCreate_P	191
		9.5.1.2	GSLC_TYPEX_GAUGE	191
	9.5.2	Enumera	tion Type Documentation	191
		9.5.2.1	gslc_teXGaugeStyle	191
	9.5.3	Function	Documentation	192
		9.5.3.1	gslc_ElemXGaugeCreate(gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsXGauge *pXData, gslc_tsRect rElem, int16_t nMin, int16_t nMax, int16_t nVal, gslc_tsColor colGauge, bool bVert)	192
		9.5.3.2	gslc_ElemXGaugeDraw(void *pvGui, void *pvElemRef, gslc_teRedrawType e⇔ Redraw)	192
		9.5.3.3	gslc_ElemXGaugeDrawProgressBar(gslc_tsGui *pGui, gslc_tsElemRef *p↔ ElemRef, gslc_teRedrawType eRedraw)	193
		9.5.3.4	$ \begin{array}{llllllllllllllllllllllllllllllllllll$	193
		9.5.3.5	$\label{lem:gslc_elem} gslc_ElemXGaugeSetIndicator(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor colGauge, uint16_t nIndicLen, uint16_t nIndicTip, bool bIndicFill) \\$	193
		9.5.3.6	gslc_ElemXGaugeSetStyle(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_teXGaugeStyle nType)	194
		9.5.3.7	gslc_ElemXGaugeSetTicks(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor colTick, uint16_t nTickCnt, uint16_t nTickLen)	194
		9.5.3.8	gslc_ElemXGaugeUpdate(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16↔ _t nVal)	195
9.6	src/ele	m/XGlowb	all.c File Reference	195
	9.6.1	Function	Documentation	196
		9.6.1.1	drawXGlowball(gslc_tsGui *pGui, gslc_tsXGlowball *pGlowball, int16_t nMidX, int16_t nMidY, int16_t nVal, uint16_t nAngStart, uint16_t nAngEnd)	196
		9.6.1.2	drawXGlowballArc(gslc_tsGui *pGui, gslc_tsXGlowball *pGlowball, int16_t n \hookleftarrow MidX, int16_t nMidY, int16_t nRad1, int16_t nRad2, gslc_tsColor cArc, uint16_t nAngStart, uint16_t nAngEnd)	196
		9.6.1.3	drawXGlowballRing(gslc_tsGui *pGui, gslc_tsXGlowball *pGlowball, int16_t n↔ MidX, int16_t nMidY, int16_t nVal, uint16_t nAngStart, uint16_t nAngEnd, bool bErase)	196
		9.6.1.4	gslc_ElemXGlowballCreate(gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsXGlowball *pXData, int16_t nMidX, int16_t nMidY, gslc_tsXGlowballRing *pRings, uint8_t nNumRings)	196
		9.6.1.5	gslc_ElemXGlowballDraw(void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)	197

CONTENTS

		9.6.1.6	gslc_ElemXGlowballSetAngles(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nAngStart, int16_t nAngEnd)	197
		9.6.1.7	gslc_ElemXGlowballSetColorBack(gslc_tsGui *pGui, gslc_tsElemRef *pElem← Ref, gslc_tsColor colBg)	197
		9.6.1.8	gslc_ElemXGlowballSetQuality(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, uint16_t nQuality)	197
		9.6.1.9	gslc_ElemXGlowballSetVal(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nVal)	197
	9.6.2	Variable	Documentation	197
		9.6.2.1	ERRSTR_NULL	197
		9.6.2.2	ERRSTR_PXD_NULL	197
9.7	src/ele	m/XGlowb	pall.h File Reference	197
	9.7.1	Macro De	efinition Documentation	199
		9.7.1.1	GSLC_TYPEX_GLOW	199
	9.7.2	Function	Documentation	199
		9.7.2.1	drawXGlowball(gslc_tsGui *pGui, gslc_tsXGlowball *pGlowball, int16_t nMidX, int16_t nMidY, int16_t nVal, uint16_t nAngStart, uint16_t nAngEnd)	199
		9.7.2.2	drawXGlowballArc(gslc_tsGui *pGui, gslc_tsXGlowball *pGlowball, int16_t n \leftarrow MidX, int16_t nMidY, int16_t nRad1, int16_t nRad2, gslc_tsColor cArc, uint16_t nAngStart, uint16_t nAngEnd)	199
		9.7.2.3	drawXGlowballRing(gslc_tsGui *pGui, gslc_tsXGlowball *pGlowball, int16_t n↔ MidX, int16_t nMidY, int16_t nVal, uint16_t nAngStart, uint16_t nAngEnd, bool bErase)	199
		9.7.2.4	gslc_ElemXGlowballCreate(gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsXGlowball *pXData, int16_t nMidX, int16_t nMidY, gslc_tsXGlowballRing *pRings, uint8_t nNumRings)	199
		9.7.2.5	gslc_ElemXGlowballDraw(void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)	199
		9.7.2.6	gslc_ElemXGlowballSetAngles(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nAngStart, int16_t nAngEnd)	200
		9.7.2.7	gslc_ElemXGlowballSetColorBack(gslc_tsGui *pGui, gslc_tsElemRef *pElem⇔ Ref, gslc_tsColor colBg)	200
		9.7.2.8	gslc_ElemXGlowballSetQuality(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, uint16_t nQuality)	200
		9.7.2.9	gslc_ElemXGlowballSetVal(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nVal)	200
9.8	src/ele	m/XGraph	.c File Reference	200
	9.8.1	Function	Documentation	201

CONTENTS xxxi

		9.8.1.1	gslc_ElemXGraphAdd(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nVa	l)201
		9.8.1.2	gslc_ElemXGraphCreate(gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsXGraph *pXData, gslc_tsRect rElem, int16_t nFontId, int16_t *pBuf, uint16_t nBufMax, gslc_tsColor colGraph)	201
		9.8.1.3	gslc_ElemXGraphDraw(void *pvGui, void *pvElemRef, gslc_teRedrawType e↔ Redraw)	201
		9.8.1.4	gslc_ElemXGraphScrollSet(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, uint8_t nScrollPos, uint8_t nScrollMax)	203
		9.8.1.5	gslc_ElemXGraphSetRange(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nYMin, int16_t nYMax)	203
		9.8.1.6	gslc_ElemXGraphSetStyle(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc⇔_teXGraphStyle eStyle, uint8_t nMargin)	203
	9.8.2	Variable I	Documentation	204
		9.8.2.1	ERRSTR_NULL	204
		9.8.2.2	ERRSTR_PXD_NULL	204
9.9	src/elei	m/XGraph	h File Reference	204
	9.9.1	Macro De	efinition Documentation	205
		9.9.1.1	GSLC_TYPEX_GRAPH	205
	9.9.2	Enumera	tion Type Documentation	205
		9.9.2.1	gslc_teXGraphStyle	205
	9.9.3	Function	Documentation	205
		9.9.3.1	gslc_ElemXGraphAdd(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nVa	l)205
		9.9.3.2	gslc_ElemXGraphCreate(gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsXGraph *pXData, gslc_tsRect rElem, int16_t nFontId, int16_t *pBuf, uint16_t nBufRows, gslc_tsColor colGraph)	206
		9.9.3.3	gslc_ElemXGraphDraw(void *pvGui, void *pvElemRef, gslc_teRedrawType e↔ Redraw)	206
		9.9.3.4	gslc_ElemXGraphScrollSet(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, uint8_t nScrollPos, uint8_t nScrollMax)	207
		9.9.3.5	gslc_ElemXGraphSetRange(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nYMin, int16_t nYMax)	207
		9.9.3.6	gslc_ElemXGraphSetStyle(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc⇔_teXGraphStyle eStyle, uint8_t nMargin)	207
9.10	src/elei	m/XKeyPa	d.c File Reference	208
	9.10.1	Function	Documentation	209
		9.10.1.1	ElemXKeyPadAddChar(gslc_tsGui *pGui, gslc_tsXKeyPad *pKeyPad, char ch) .	209

xxxii CONTENTS

9.10.1.2	$gslc_ElemXKeyPadCfgSetButtonSz(gslc_tsXKeyPadCfg *pConfig, int8_t n \\ \vdash ButtonSzW, int8_t nButtonSzH) \\ \dots $	209
9.10.1.3	$gslc_ElemXKeyPadCfgSetFloatEn(gslc_tsXKeyPadCfg*pConfig, bool bEn) \ . \ . \ .$	210
9.10.1.4	$gslc_ElemXKeyPadCfgSetRoundEn(gslc_tsXKeyPadCfg *pConfig, bool bEn) \ . \ .$	210
9.10.1.5	gslc_ElemXKeyPadCfgSetSignEn(gslc_tsXKeyPadCfg *pConfig, bool bEn)	210
9.10.1.6	$ gslc_ElemXKeyPadClick(void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nX, int16_t nY) \\ \dots \\ $	211
9.10.1.7	gslc_ElemXKeyPadCreateBase(gslc_tsGui *pGui, int16_t nElemId, int16_t n↔ Page, gslc_tsXKeyPad *pXData, int16_t nX0, int16_t nY0, int8_t nFontId, gslc↔ _tsXKeyPadCfg *pConfig, XKEYPAD_CREATE pfuncCreate, XKEYPAD_LOO↔ KUP pfuncLookup)	211
9.10.1.8	gslc_ElemXKeyPadDataTargetIdGet(gslc_tsGui *pGui, void *pvData)	211
9.10.1.9	gslc_ElemXKeyPadDataValGet(gslc_tsGui *pGui, void *pvData)	212
9.10.1.10	gslc_ElemXKeyPadDraw(void *pvGui, void *pvElemRef, gslc_teRedrawType e↔ Redraw)	212
9.10.1.11	gslc_ElemXKeyPadSetFloatEn(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bEn)	212
9.10.1.12	gslc_ElemXKeyPadSetSignEn(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bEn)	213
9.10.1.13	gslc_ElemXKeyPadTargetIdSet(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nTargetId)	213
9.10.1.14	gslc_ElemXKeyPadTouch(void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY)	214
9.10.1.15	gslc_ElemXKeyPadValGet(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, char *pStrBuf, uint8_t nStrBufLen)	214
9.10.1.16	gslc_ElemXKeyPadValSet(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, const char *pStrBuf)	214
9.10.1.17	$gslc_ElemXKeyPadValSetCb(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, G \\ \hookrightarrow SLC_CB_INPUT \ pfuncCb) \ . \ . \ . \ . \ . \ . \ . \ . \ . \ $	215
9.10.1.18	gslc_ElemXKeyPadValSetSign(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bPositive)	215
9.10.1.19	$ \label{eq:constraint} XKeyPadAddKeyElem(gslc_tsGui *pGui, gslc_tsXKeyPad *pXData, int16_t n $\longleftrightarrow $KeyId, bool bTxtField, int16_t nRow, int16_t nCol, int8_t nRowSpan, int8_t n $\longleftrightarrow $ColSpan, gslc_tsColor cColFill, gslc_tsColor cColGlow, bool bVisible)$	215
Variable I	Documentation	216
9.10.2.1	ERRSTR_NULL	216
9.10.2.2	ERRSTR_PXD_NULL	216
9.10.2.3	KEYPAD_DISP_DECIMAL_PT	216

9.10.2

CONTENTS xxxiii

		9.10.2.4	KEYPAD_DISP_NEGATIVE	216
9.11	src/eler	m/XKeyPad	d.h File Reference	216
	9.11.1	Macro De	finition Documentation	218
		9.11.1.1	GSLC_TYPEX_KEYPAD	218
		9.11.1.2	XKEYPAD_CB_STATE_CANCEL	218
		9.11.1.3	XKEYPAD_CB_STATE_DONE	218
		9.11.1.4	XKEYPAD_CB_STATE_UPDATE	218
		9.11.1.5	XKEYPAD_VAL_LEN	218
	9.11.2	Typedef D	Occumentation	218
		9.11.2.1	XKEYPAD_CREATE	218
		9.11.2.2	XKEYPAD_LOOKUP	218
	9.11.3	Enumerat	ion Type Documentation	218
		9.11.3.1	anonymous enum	218
	9.11.4	Function I	Documentation	219
		9.11.4.1	$gslc_ElemXKeyPadCfgSetButtonSz(gslc_tsXKeyPadCfg *pConfig, int8_t n \hookleftarrow ButtonSzW, int8_t nButtonSzH) \\ \dots \\ $	219
		9.11.4.2	$gslc_ElemXKeyPadCfgSetFloatEn(gslc_tsXKeyPadCfg *pConfig, bool bEn) \ . \ . \ .$	219
		9.11.4.3	${\sf gslc_ElemXKeyPadCfgSetRoundEn(gslc_tsXKeyPadCfg*pConfig,boolbEn)} \ \ . \ \ .$	219
		9.11.4.4	${\sf gslc_ElemXKeyPadCfgSetSignEn(gslc_tsXKeyPadCfg*pConfig,\ bool\ bEn)} . . .$	220
		9.11.4.5	gslc_ElemXKeyPadClick(void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nX, int16_t nY)	220
		9.11.4.6	gslc_ElemXKeyPadCreateBase(gslc_tsGui *pGui, int16_t nElemId, int16_t n↔ Page, gslc_tsXKeyPad *pXData, int16_t nX0, int16_t nY0, int8_t nFontId, gslc↔ _tsXKeyPadCfg *pConfig, XKEYPAD_CREATE pfuncCreate, XKEYPAD_LOO↔ KUP pfuncLookup)	220
		9.11.4.7	gslc_ElemXKeyPadDataTargetIdGet(gslc_tsGui *pGui, void *pvData)	221
		9.11.4.8	gslc_ElemXKeyPadDataValGet(gslc_tsGui *pGui, void *pvData)	221
		9.11.4.9	gslc_ElemXKeyPadDraw(void *pvGui, void *pvElemRef, gslc_teRedrawType e↔ Redraw)	221
		9.11.4.10	gslc_ElemXKeyPadSetFloatEn(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bEn)	222
		9.11.4.11	gslc_ElemXKeyPadSetSignEn(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bEn)	222

CONTENTS

		9.11.4.12	gslc_ElemXKeyPadTargetIdSet(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nld)	223
		9.11.4.13	gslc_ElemXKeyPadTouch(void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY)	223
		9.11.4.14	gslc_ElemXKeyPadValGet(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, char *pStrBuf, uint8_t nStrBufMax)	223
		9.11.4.15	gslc_ElemXKeyPadValSet(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, const char *pStrBuf)	224
		9.11.4.16	$gslc_ElemXKeyPadValSetCb(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, G {\leftarrow} SLC_CB_INPUT pfuncCb)$	224
		9.11.4.17	XKeyPadAddKeyElem(gslc_tsGui *pGui, gslc_tsXKeyPad *pXData, int16_t n ← Keyld, bool bTxtField, int16_t nRow, int16_t nCol, int8_t nRowSpan, int8_t n ← ColSpan, gslc_tsColor cColFill, gslc_tsColor cColGlow, bool bVisible)	224
9.12	src/eler	m/XKeyPa	d_Alpha.c File Reference	225
	9.12.1	Enumerat	tion Type Documentation	226
		9.12.1.1	anonymous enum	226
	9.12.2	Function	Documentation	226
		9.12.2.1	gslc_ElemXKeyPadCfgInit_Alpha()	226
		9.12.2.2	$gslc_ElemXKeyPadCreate_Alpha(gslc_tsGui *pGui, int16_t nElemId, int16_t n \leftrightarrow Page, gslc_tsXKeyPad_Alpha *pXData, int16_t nX0, int16_t nY0, int8_t nFontId, gslc_tsXKeyPadCfg *pConfig)$	226
		9.12.2.3	XKeyPadCreateKeys_Alpha(gslc_tsGui *pGui, gslc_tsXKeyPad *pXData)	227
		9.12.2.4	XKeyPadLookup_Alpha(gslc_tsGui *pGui, int16_t nKeyId)	227
	9.12.3	Variable [Documentation	227
		9.12.3.1	ERRSTR_NULL	227
		9.12.3.2	ERRSTR_PXD_NULL	227
		9.12.3.3	KEYPAD_LABEL_STRINGS	227
9.13	src/eler	m/XKeyPa	d_Alpha.h File Reference	227
	9.13.1	Macro De	efinition Documentation	228
		9.13.1.1	XKEYPADALPHA_BTN_BASIC	228
		9.13.1.2	XKEYPADALPHA_ELEM_MAX	228
	9.13.2	Function	Documentation	228
		9.13.2.1	gslc_ElemXKeyPadCfgInit_Alpha()	228

CONTENTS XXXV

		9.13.2.2	Page, gslc_tsXKeyPad_Alpha *pXData, int16_t nX0, int16_t nY0, int8_t nFontId,	
			gslc_tsXKeyPadCfg *pConfig)	229
9.14	src/eler	m/XKeyPa	d_Num.c File Reference	230
	9.14.1	Enumera	tion Type Documentation	231
		9.14.1.1	anonymous enum	231
	9.14.2	Function	Documentation	231
		9.14.2.1	gslc_ElemXKeyPadCfgInit_Num()	231
		9.14.2.2	$ \begin{array}{l} gslc_ElemXKeyPadCreate_Num(gslc_tsGui *pGui, int16_t \ nElemId, int16_t \ n \leftrightarrow \\ Page, \ gslc_tsXKeyPad_Num *pXData, int16_t \ nX0, int16_t \ nY0, int8_t \ nFontId, \\ gslc_tsXKeyPadCfg *pConfig) \ . \ . \ . \ . \ . \ . \ . \ . \ . \ $	231
		9.14.2.3	XKeyPadCreateKeys_Num(gslc_tsGui *pGui, gslc_tsXKeyPad *pXData)	232
		9.14.2.4	XKeyPadLookup_Num(gslc_tsGui *pGui, int16_t nKeyId)	232
	9.14.3	Variable I	Documentation	232
		9.14.3.1	ERRSTR_NULL	232
		9.14.3.2	ERRSTR_PXD_NULL	232
		9.14.3.3	KEYPAD_LABEL_STRINGS	232
9.15	src/eler	m/XKeyPa	d_Num.h File Reference	232
	9.15.1	Macro De	efinition Documentation	233
		9.15.1.1	XKEYPADNUM_BTN_BASIC	233
		9.15.1.2	XKEYPADNUM_ELEM_MAX	233
	9.15.2	Function	Documentation	233
		9.15.2.1	gslc_ElemXKeyPadCfgInit_Num()	233
		9.15.2.2	$ \begin{array}{l} gslc_ElemXKeyPadCreate_Num(gslc_tsGui *pGui, int16_t \ nElemId, int16_t \ n \leftrightarrow \\ Page, \ gslc_tsXKeyPad_Num *pXData, int16_t \ nX0, int16_t \ nY0, int8_t \ nFontId, \\ gslc_tsXKeyPadCfg *pConfig) \ . \ . \ . \ . \ . \ . \ . \ . \ . \ $	234
9.16	src/eler	m/XListbox	c.c File Reference	235
	9.16.1	Macro De	efinition Documentation	236
		9.16.1.1	XLISTBOX_MAX_STR	236
	9.16.2	Function	Documentation	236
		9.16.2.1	gslc_ElemXListboxAddItem(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, const char *pStrItem)	236

xxxvi CONTENTS

	9.16.2.2	$ \begin{array}{llllllllllllllllllllllllllllllllllll$	237
	9.16.2.3	gslc_ElemXListboxDraw(void *pvGui, void *pvElemRef, gslc_teRedrawType e↔ Redraw)	237
	9.16.2.4	gslc_ElemXListboxGetItem(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nItemCurSel, char *pStrItem, uint8_t nStrItemLen)	238
	9.16.2.5	$gslc_ElemXListboxGetItemCnt(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef) .$	238
	9.16.2.6	gslc_ElemXListboxGetSel(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)	238
	9.16.2.7	gslc_ElemXListboxItemsSetGap(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int8_t nGap, gslc_tsColor colGap)	239
	9.16.2.8	gslc_ElemXListboxItemsSetSize(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nItemW, int16_t nItemH)	239
	9.16.2.9	$gslc_ElemXListboxRecalcSize(gslc_tsXListbox *pListbox, gslc_tsRect rElem) \ . \ .$	239
	9.16.2.10	gslc_ElemXListboxReset(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)	239
	9.16.2.11	gslc_ElemXListboxSetMargin(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int8_t nMarginW, int8_t nMarginH)	240
	9.16.2.12	gslc_ElemXListboxSetScrollPos(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, uint16_t nScrollPos)	240
	9.16.2.13	gslc_ElemXListboxSetSel(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16↔ _t nltemCurSel)	240
	9.16.2.14	gslc_ElemXListboxSetSelFunc(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, GSLC_CB_XLISTBOX_SEL funcCb)	241
		i gslc_ElemXListboxSetSize(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int8← _t nRows, int8_t nCols)	241
	9.16.2.16	gslc_ElemXListboxTouch(void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY)	241
9.16.	3 Variable I	Documentation	242
	9.16.3.1	ERRSTR_NULL	242
	9.16.3.2	ERRSTR_PXD_NULL	242
9.17 src/e	em/XListbo	k.h File Reference	242
9.17.	1 Macro De	efinition Documentation	244
	9.17.1.1	GSLC_TYPEX_LISTBOX	244
	9.17.1.2	XLISTBOX_BUF_OH_R	244
	9.17.1.3	XLISTBOX_SEL_NONE	244
	9.17.1.4	XLISTBOX_SIZE_AUTO	244

CONTENTS xxxvii

	9.17.2	Typedef D	Occumentation	244
		9.17.2.1	GSLC_CB_XLISTBOX_SEL	244
	9.17.3	Function I	Documentation	244
		9.17.3.1	gslc_ElemXListboxAddItem(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, const char *pStrItem)	244
		9.17.3.2	$\label{eq:gslc_elemXL} $	244
		9.17.3.3	gslc_ElemXListboxDraw(void *pvGui, void *pvElemRef, gslc_teRedrawType e↔ Redraw)	245
		9.17.3.4	gslc_ElemXListboxGetItem(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nItemCurSel, char *pStrItem, uint8_t nStrItemLen)	245
		9.17.3.5	gslc_ElemXListboxGetItemCnt(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef) .	246
		9.17.3.6	gslc_ElemXListboxGetSel(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)	247
		9.17.3.7	gslc_ElemXListboxItemsSetGap(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int8_t nGap, gslc_tsColor colGap)	247
		9.17.3.8	gslc_ElemXListboxItemsSetSize(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nItemW, int16_t nItemH)	247
		9.17.3.9	gslc_ElemXListboxReset(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)	248
		9.17.3.10	gslc_ElemXListboxSetMargin(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int8_t nMarginW, int8_t nMarginH)	248
		9.17.3.11	gslc_ElemXListboxSetScrollPos(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, uint16_t nScrollPos)	248
		9.17.3.12	gslc_ElemXListboxSetSel(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16↔ _t nItemCurSel)	249
		9.17.3.13	gslc_ElemXListboxSetSelFunc(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, GSLC_CB_XLISTBOX_SEL funcCb)	249
		9.17.3.14	gslc_ElemXListboxSetSize(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int8↔ _t nRows, int8_t nCols)	249
		9.17.3.15	gslc_ElemXListboxTouch(void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY)	250
9.18	src/eler	m/XProgre	ss.c File Reference	250
	9.18.1	Function I	Documentation	251
		9.18.1.1	gslc_ElemXProgressCreate(gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsXProgress *pXData, gslc_tsRect rElem, int16_t nMin, int16_t nMax, int16_t nVal, gslc_tsColor colGauge, bool bVert)	251
		9.18.1.2	gslc_ElemXProgressDraw(void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)	252

xxxviii CONTENTS

		9.18.1.3	gslc_ElemXProgressDrawHelp(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_teRedrawType eRedraw)	252
		9.18.1.4	gslc_ElemXProgressSetFlip(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bFlip)	253
		9.18.1.5	gslc_ElemXProgressSetVal(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nVal)	253
	9.18.2	Variable I	Documentation	253
		9.18.2.1	ERRSTR_NULL	253
		9.18.2.2	ERRSTR_PXD_NULL	253
9.19	src/eler	m/XProgre	ess.h File Reference	254
	9.19.1	Macro De	efinition Documentation	255
		9.19.1.1	gslc_ElemXProgressCreate_P	255
		9.19.1.2	GSLC_TYPEX_PROGRESS	255
	9.19.2	Function	Documentation	256
		9.19.2.1	gslc_ElemXProgressCreate(gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsXProgress *pXData, gslc_tsRect rElem, int16_t nMin, int16_t nMax, int16_t nVal, gslc_tsColor colGauge, bool bVert)	256
		9.19.2.2	gslc_ElemXProgressDraw(void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)	256
		9.19.2.3	gslc_ElemXProgressDrawHelp(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_teRedrawType eRedraw)	257
		9.19.2.4	gslc_ElemXProgressSetFlip(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bFlip)	257
		9.19.2.5	gslc_ElemXProgressSetVal(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nVal)	257
9.20	src/eler	m/XRadial	.c File Reference	258
	9.20.1	Function	Documentation	259
		9.20.1.1	gslc_ElemXRadialCreate(gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsXRadial *pXData, gslc_tsRect rElem, int16_t nMin, int16_t nMax, int16_t nVal, gslc_tsColor colGauge)	259
		9.20.1.2	gslc_ElemXRadialDraw(void *pvGui, void *pvElemRef, gslc_teRedrawType e↔ Redraw)	259
		9.20.1.3	gslc_ElemXRadialDrawRadial(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_teRedrawType eRedraw)	260
		9.20.1.4	gslc_ElemXRadialDrawRadialHelp(gslc_tsGui *pGui, int16_t nX, int16_t nY, uint16_t nArrowLen, uint16_t nArrowSz, int16_t n64Ang, bool bFill, gslc_tsColor colFrame)	260

CONTENTS xxxix

		9.20.1.5	gslc_ElemXRadialSetFlip(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bFlip)	260
		9.20.1.6	gslc_ElemXRadialSetIndicator(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor colGauge, uint16_t nIndicLen, uint16_t nIndicTip, bool bIndicFill)	261
		9.20.1.7	gslc_ElemXRadialSetTicks(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc ← _tsColor colTick, uint16_t nTickCnt, uint16_t nTickLen)	261
		9.20.1.8	gslc_ElemXRadialSetVal(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nVal)	261
	9.20.2	Variable I	Documentation	262
		9.20.2.1	ERRSTR_NULL	262
		9.20.2.2	ERRSTR_PXD_NULL	262
9.21	src/elei	m/XRadial	.h File Reference	262
	9.21.1	Macro De	efinition Documentation	263
		9.21.1.1	gslc_ElemXRadialCreate_P	263
		9.21.1.2	GSLC_TYPEX_RADIAL	264
	9.21.2	Function	Documentation	264
		9.21.2.1	gslc_ElemXRadialCreate(gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsXRadial *pXData, gslc_tsRect rElem, int16_t nMin, int16_t nMax, int16_t nVal, gslc_tsColor colGauge)	264
		9.21.2.2	gslc_ElemXRadialDraw(void *pvGui, void *pvElemRef, gslc_teRedrawType e↔ Redraw)	264
		9.21.2.3	gslc_ElemXRadialDrawRadial(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_teRedrawType eRedraw)	265
		9.21.2.4	gslc_ElemXRadialSetFlip(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bFlip)	265
		9.21.2.5	gslc_ElemXRadialSetIndicator(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor colGauge, uint16_t nIndicLen, uint16_t nIndicTip, bool bIndicFill)	266
		9.21.2.6	gslc_ElemXRadialSetTicks(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc⇔_tsColor colTick, uint16_t nTickCnt, uint16_t nTickLen)	266
		9.21.2.7	gslc_ElemXRadialSetVal(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nVal)	266
9.22	src/elei	m/XRamp.	c File Reference	267
	9.22.1	Function	Documentation	268
		9.22.1.1	gslc_ElemXRampCreate(gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsXRamp *pXData, gslc_tsRect rElem, int16_t nMin, int16_t nMax, int16_t nVal, gslc_tsColor colGauge, bool bVert)	268

xI CONTENTS

		9.22.1.2	gslc_ElemXRampDraw(void *pvGui, void *pvElemRef, gslc_teRedrawType e↔ Redraw)	268
		9.22.1.3	gslc_ElemXRampDrawHelp(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_teRedrawType eRedraw)	269
		9.22.1.4	gslc_ElemXRampSetVal(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nVal)	269
	9.22.2	Variable I	Documentation	269
		9.22.2.1	ERRSTR_NULL	269
		9.22.2.2	ERRSTR_PXD_NULL	269
9.23	src/elei	m/XRamp.	h File Reference	270
	9.23.1	Macro De	efinition Documentation	271
		9.23.1.1	gslc_ElemXRampCreate_P	271
		9.23.1.2	GSLC_TYPEX_RAMP	271
	9.23.2	Function	Documentation	271
		9.23.2.1	gslc_ElemXRampCreate(gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsXRamp *pXData, gslc_tsRect rElem, int16_t nMin, int16_t nMax, int16_t nVal, gslc_tsColor colGauge, bool bVert)	271
		9.23.2.2	gslc_ElemXRampDraw(void *pvGui, void *pvElemRef, gslc_teRedrawType e↔ Redraw)	273
		9.23.2.3	gslc_ElemXRampDrawHelp(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_teRedrawType eRedraw)	273
		9.23.2.4	gslc_ElemXRampSetVal(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nVal)	274
9.24	src/elei	m/XRingG	auge.c File Reference	274
	9.24.1	Function	Documentation	275
		9.24.1.1	gslc_ElemXRingGaugeCreate(gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsXRingGauge *pXData, gslc_tsRect rElem, char *pStrBuf, uint8_t nStr⇔ BufMax, int16_t nFontId)	275
		9.24.1.2	gslc_ElemXRingGaugeDraw(void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)	276
		9.24.1.3	gslc_ElemXRingGaugeSetAngleRange(gslc_tsGui *pGui, gslc_tsElemRef *p↔ ElemRef, int16_t nStart, int16_t nRange, bool bClockwise)	276
		9.24.1.4	gslc_ElemXRingGaugeSetColorActiveFlat(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor colActive)	277
		9.24.1.5	gslc_ElemXRingGaugeSetColorActiveGradient(gslc_tsGui *pGui, gslc_tsElem↔ Ref *pElemRef, gslc_tsColor colStart, gslc_tsColor colEnd)	277

CONTENTS xli

		9.24.1.6	gslc_ElemXRingGaugeSetColorInactive(gslc_tsGui *pGui, gslc_tsElemRef *p← ElemRef, gslc_tsColor colInactive)	277
		9.24.1.7	gslc_ElemXRingGaugeSetQuality(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, uint16_t nSegments)	278
		9.24.1.8	$ \begin{array}{llllllllllllllllllllllllllllllllllll$	278
		9.24.1.9	gslc_ElemXRingGaugeSetVal(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nVal)	279
		9.24.1.10) gslc_ElemXRingGaugeSetValRange(gslc_tsGui *pGui, gslc_tsElemRef *p↔ ElemRef, int16_t nValMin, int16_t nValMax)	279
	9.24.2	Variable I	Documentation	279
		9.24.2.1	ERRSTR_NULL	279
		9.24.2.2	ERRSTR_PXD_NULL	279
9.25	src/ele	m/XRingG	auge.h File Reference	280
	9.25.1	Macro De	efinition Documentation	281
		9.25.1.1	GSLC_TYPEX_RING	281
		9.25.1.2	XRING_STR_MAX	281
	9.25.2	Function	Documentation	281
		9.25.2.1	gslc_ElemXRingGaugeCreate(gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsXRingGauge *pXData, gslc_tsRect rElem, char *pStrBuf, uint8_t nStr⇔ BufMax, int16_t nFontId)	281
		9.25.2.2	gslc_ElemXRingGaugeDraw(void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)	282
		9.25.2.3	gslc_ElemXRingGaugeSetAngleRange(gslc_tsGui *pGui, gslc_tsElemRef *p← ElemRef, int16_t nStart, int16_t nRange, bool bClockwise)	282
		9.25.2.4	gslc_ElemXRingGaugeSetColorActiveFlat(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor colActive)	283
		9.25.2.5	gslc_ElemXRingGaugeSetColorActiveGradient(gslc_tsGui *pGui, gslc_tsElem↔ Ref *pElemRef, gslc_tsColor colStart, gslc_tsColor colEnd)	283
		9.25.2.6	$gslc_ElemXRingGaugeSetColorInactive(gslc_tsGui *pGui, gslc_tsElemRef *p \leftarrow ElemRef, gslc_tsColor colInactive)$	283
		9.25.2.7	gslc_ElemXRingGaugeSetQuality(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, uint16_t nSegments)	284
		9.25.2.8	$gslc_ElemXRingGaugeSetThickness(gslc_tsGui *pGui, gslc_tsElemRef *p \leftarrow ElemRef, int8_t nThickness) $	284
		9.25.2.9	gslc_ElemXRingGaugeSetVal(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nVal)	285

xlii CONTENTS

		9.25.2.10	gslc_ElemXRingGaugeSetValRange(gslc_tsGui *pGui, gslc_tsElemRef *p↔ ElemRef, int16_t nValMin, int16_t nValMax)	285
9.26	src/eler	m/XSelNuı	m.c File Reference	285
	9.26.1	Function	Documentation	286
		9.26.1.1	gslc_ElemXSelNumClick(void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nX, int16_t nY)	286
		9.26.1.2	gslc_ElemXSelNumCreate(gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsXSelNum *pXData, gslc_tsRect rElem, int8_t nFontId)	287
		9.26.1.3	gslc_ElemXSelNumDraw(void *pvGui, void *pvElemRef, gslc_teRedrawType e↔ Redraw)	287
		9.26.1.4	$gslc_ElemXSelNumGetCounter(gslc_tsGui *pGui, gslc_tsXSelNum *pSelNum) \ .$	288
		9.26.1.5	gslc_ElemXSelNumSetCounter(gslc_tsGui *pGui, gslc_tsXSelNum *pSelNum, int16_t nCount)	288
		9.26.1.6	gslc_ElemXSelNumTouch(void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY)	288
	9.26.2	Variable I	Documentation	289
		9.26.2.1	ERRSTR_NULL	289
		9.26.2.2	ERRSTR_PXD_NULL	289
		9.26.2.3	SELNUM_ID_BTN_DEC	289
		9.26.2.4	SELNUM_ID_BTN_INC	289
		9.26.2.5	SELNUM_ID_TXT	289
9.27	src/eler	m/XSelNui	m.h File Reference	289
	9.27.1	Macro De	efinition Documentation	290
		9.27.1.1	GSLC_TYPEX_SELNUM	290
		9.27.1.2	SELNUM_STR_LEN	290
	9.27.2	Function	Documentation	290
		9.27.2.1	gslc_ElemXSelNumClick(void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nX, int16_t nY)	290
		9.27.2.2	gslc_ElemXSelNumCreate(gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsXSelNum *pXData, gslc_tsRect rElem, int8_t nFontId)	291
		9.27.2.3	gslc_ElemXSelNumDraw(void *pvGui, void *pvElemRef, gslc_teRedrawType e↔ Redraw)	291
		9.27.2.4	$gslc_ElemXSelNumGetCounter(gslc_tsGui*pGui, gslc_tsXSelNum*pSelNum) \ .$	291
		9.27.2.5	gslc_ElemXSelNumSetCounter(gslc_tsGui *pGui, gslc_tsXSelNum *pSelNum, int16_t nCount)	292

CONTENTS xliii

		9.27.2.6	gslc_ElemXSelNumTouch(void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY)	292
9.28	src/elei	m/XSlider.	c File Reference	292
	9.28.1	Function	Documentation	293
		9.28.1.1	gslc_ElemXSliderCreate(gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsXSlider *pXData, gslc_tsRect rElem, int16_t nPosMin, int16_t nPosMax, int16_t nPos, uint16_t nThumbSz, bool bVert)	293
		9.28.1.2	gslc_ElemXSliderDraw(void *pvGui, void *pvElemRef, gslc_teRedrawType e⇔ Redraw)	294
		9.28.1.3	gslc_ElemXSliderGetPos(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)	294
		9.28.1.4	gslc_ElemXSliderSetPos(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nPos)	295
		9.28.1.5	gslc_ElemXSliderSetPosFunc(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, GSLC_CB_XSLIDER_POS funcCb)	295
		9.28.1.6	$ \begin{array}{llllllllllllllllllllllllllllllllllll$	295
		9.28.1.7	gslc_ElemXSliderTouch(void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY)	296
	9.28.2	Variable I	Documentation	296
		9.28.2.1	ERRSTR_NULL	296
		9.28.2.2	ERRSTR_PXD_NULL	296
9.29	src/elei	m/XSlider.l	h File Reference	296
	9.29.1	Macro De	efinition Documentation	298
		9.29.1.1	gslc_ElemXSliderCreate_P	298
		9.29.1.2	GSLC_TYPEX_SLIDER	298
	9.29.2	Typedef [Documentation	298
		9.29.2.1	GSLC_CB_XSLIDER_POS	298
	9.29.3	Function	Documentation	298
		9.29.3.1	gslc_ElemXSliderCreate(gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsXSlider *pXData, gslc_tsRect rElem, int16_t nPosMin, int16_t nPosMax, int16_t nPos, uint16_t nThumbSz, bool bVert)	298
		9.29.3.2	gslc_ElemXSliderDraw(void *pvGui, void *pvElemRef, gslc_teRedrawType e↔ Redraw)	299
		9.29.3.3	gslc_ElemXSliderGetPos(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)	299

XIIV CONTENTS

		9.29.3.4	gslc_ElemXSliderSetPos(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nPos)	300
		9.29.3.5	gslc_ElemXSliderSetPosFunc(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, GSLC_CB_XSLIDER_POS funcCb)	300
		9.29.3.6	gslc_ElemXSliderSetStyle(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bTrim, gslc_tsColor colTrim, uint16_t nTickDiv, int16_t nTickLen, gslc_tsColor colTick)	300
		9.29.3.7	gslc_ElemXSliderTouch(void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY)	301
9.30	src/ele	m/XSpinne	er.c File Reference	301
	9.30.1	Function	Documentation	302
		9.30.1.1	gslc_ElemXSpinnerClick(void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nX, int16_t nY)	302
		9.30.1.2	gslc_ElemXSpinnerCreate(gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsXSpinner *pXData, gslc_tsRect rElem, int16_t nMin, int16_t nMax, int16t nVal, int16_t nIncr, int8_t nFontId, int8_t nButtonSz, GSLC_CB_INPUT cbInput)	303
		9.30.1.3	gslc_ElemXSpinnerDraw(void *pvGui, void *pvElemRef, gslc_teRedrawType e↔ Redraw)	303
		9.30.1.4	$gslc_ElemXSpinnerGetCounter(gslc_tsGui *pGui, gslc_tsXSpinner *pSpinner) \ .$	303
		9.30.1.5	gslc_ElemXSpinnerSetChars(void *pvGui, gslc_tsElemRef *pElemRef, uint8_↔ t clncr, uint8_t cDecr)	304
		9.30.1.6	gslc_ElemXSpinnerSetCounter(gslc_tsGui *pGui, gslc_tsXSpinner *pSpinner, int16_t nCount)	304
		9.30.1.7	gslc_ElemXSpinnerTouch(void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY)	304
	9.30.2	Variable I	Documentation	306
		9.30.2.1	ERRSTR_NULL	306
		9.30.2.2	ERRSTR_PXD_NULL	306
		9.30.2.3	SPINNER_ID_BTN_DEC	306
		9.30.2.4	SPINNER_ID_BTN_INC	306
			SPINNER_ID_TXT	
9.31			er.h File Reference	
	9.31.1	Macro De	efinition Documentation	308
		9.31.1.1	GSLC_TYPEX_SPINNER	308
			XSPINNER_CB_STATE_UPDATE	
		9.31.1.3	XSPINNER_COMP_CNT	308

CONTENTS xlv

		9.31.1.4	XSPINNER_STR_LEN	308
	9.31.2	Function	Documentation	308
		9.31.2.1	$ \begin{tabular}{lllllllllllllllllllllllllllllllllll$	308
		9.31.2.2	gslc_ElemXSpinnerCreate(gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsXSpinner *pXData, gslc_tsRect rElem, int16_t nMin, int16_t nMax, int16↔ _t nVal, int16_t nIncr, int8_t nFontId, int8_t nButtonSz, GSLC_CB_INPUT cbInput)	308
		9.31.2.3	gslc_ElemXSpinnerDraw(void *pvGui, void *pvElemRef, gslc_teRedrawType e↔ Redraw)	309
		9.31.2.4	$gslc_ElemXSpinnerGetCounter(gslc_tsGui *pGui, gslc_tsXSpinner *pSpinner) \ \ .$	309
		9.31.2.5	gslc_ElemXSpinnerSetChars(void *pvGui, gslc_tsElemRef *pElemRef, uint8_← t clncr, uint8_t cDecr)	309
		9.31.2.6	gslc_ElemXSpinnerSetCounter(gslc_tsGui *pGui, gslc_tsXSpinner *pSpinner, int16_t nCount)	310
		9.31.2.7	gslc_ElemXSpinnerTouch(void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY)	310
9.32	src/eler	m/XTempla	ate.c File Reference	311
	9.32.1	Function	Documentation	311
		9.32.1.1	gslc_ElemXTemplateCreate(gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsXTemplate *pXData, gslc_tsRect rElem, char *pStrBuf, uint8_t nStrBuf↔ Max, int16_t nFontId)	311
		9.32.1.2	gslc_ElemXTemplateDraw(void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)	312
		9.32.1.3	gslc_ElemXTemplateTouch(void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY)	312
	9.32.2	Variable I	Documentation	313
		9.32.2.1	ERRSTR_NULL	313
		9.32.2.2	ERRSTR_PXD_NULL	313
9.33	src/eler	n/XTempla	ate.h File Reference	313
	9.33.1	Macro De	efinition Documentation	314
		9.33.1.1	GSLC_TYPEX_TEMPLATE	314
	9.33.2	Function	Documentation	314
		9.33.2.1	gslc_ElemXTemplateCreate(gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsXTemplate *pXData, gslc_tsRect rElem, char *pStrBuf, uint8_t nStrBuf↔ Max, int16_t nFontId)	314
		9.33.2.2	gslc_ElemXTemplateDraw(void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)	314

XIVI CONTENTS

		9.33.2.3	int16_t nRelX, int16_t nRelY)	315
9.34	src/eler	m/XTextbo	x.c File Reference	315
	9.34.1	Function	Documentation	317
		9.34.1.1	gslc_ElemXTextboxAdd(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, char *pTx	<mark>t)</mark> 317
		9.34.1.2	gslc_ElemXTextboxBufAdd(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, unsigned char chNew, bool bAdvance)	317
		9.34.1.3	gslc_ElemXTextboxColReset(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)	317
		9.34.1.4	gslc_ElemXTextboxColSet(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc _tsColor nCol)	317
		9.34.1.5	gslc_ElemXTextboxCreate(gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsXTextbox *pXData, gslc_tsRect rElem, int16_t nFontId, char *pBuf, uint16_t nBufRows, uint16_t nBufCols)	318
		9.34.1.6	gslc_ElemXTextboxDraw(void *pvGui, void *pvElemRef, gslc_teRedrawType e↔ Redraw)	318
		9.34.1.7	gslc_ElemXTextboxLineWrAdv(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef) .	319
		9.34.1.8	gslc_ElemXTextboxReset(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)	319
		9.34.1.9	gslc_ElemXTextboxScrollSet(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, uint8_t nScrollPos, uint8_t nScrollMax)	319
		9.34.1.10	gslc_ElemXTextboxWrapSet(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bWrapEn)	319
	9.34.2	Variable I	Documentation	320
		9.34.2.1	ERRSTR_NULL	320
		9.34.2.2	ERRSTR_PXD_NULL	320
9.35	src/elei	m/XTextbo	x.h File Reference	320
	9.35.1	Macro De	efinition Documentation	321
		9.35.1.1	GSLC_TYPEX_TEXTBOX	321
		9.35.1.2	GSLC_XTEXTBOX_CODE_COL_RESET	321
		9.35.1.3	GSLC_XTEXTBOX_CODE_COL_SET	321
		9.35.1.4	XTEXTBOX_REDRAW_ALL	321
		9.35.1.5	XTEXTBOX_REDRAW_NONE	321
	9.35.2	Function	Documentation	321
		9.35.2.1	gslc_ElemXTextboxAdd(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, char *pTxt	t)321
		9.35.2.2	$gslc_ElemXTextboxColReset(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef) . .$	322

CONTENTS xlvii

		9.35.2.3	gslc_ElemXTextboxColSet(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc _tsColor nCol)	322
		9.35.2.4	gslc_ElemXTextboxCreate(gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsXTextbox *pXData, gslc_tsRect rElem, int16_t nFontId, char *pBuf, uint16_t nBufRows, uint16_t nBufCols)	322
		9.35.2.5	gslc_ElemXTextboxDraw(void *pvGui, void *pvElemRef, gslc_teRedrawType e↔ Redraw)	323
		9.35.2.6	gslc_ElemXTextboxReset(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)	323
		9.35.2.7	gslc_ElemXTextboxScrollSet(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, uint8_t nScrollPos, uint8_t nScrollMax)	324
		9.35.2.8	gslc_ElemXTextboxWrapSet(gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bWrapEn)	324
9.36	src/GU	Islice.c File	e Reference	324
	9.36.1	Enumera	tion Type Documentation	333
		9.36.1.1	gslc_teDebugPrintState	333
	9.36.2	Function	Documentation	333
		9.36.2.1	gslc_DrawFillSectorBase(gslc_tsGui *pGui, int16_t nQuality, int16_t nMidX, int16_t nMidY, int16_t nRad1, int16_t nRad2, gslc_tsColor cArcStart, gslc_ts← Color cArcEnd, bool bGradient, int16_t nAngGradStart, int16_t nAngGradRange, int16_t nAngSecStart, int16_t nAngSecEnd)	333
		9.36.2.2	gslc_FontSetBase(gslc_tsGui *pGui, uint8_t nFontInd, int16_t nFontId, gslc_te ← FontRefType eFontRefType, const void *pvFontRef, uint16_t nFontSz)	333
		9.36.2.3	$gslc_OrderCoord(int16_t*pnX0, int16_t*pnY0, int16_t*pnX1, int16_t*pnY1) .$	333
		9.36.2.4	gslc_SwapCoords(int16_t *pnXa, int16_t *pnYa, int16_t *pnXb, int16_t *pnYb) .	333
	9.36.3	Variable I	Documentation	333
		9.36.3.1	ERRSTR_NULL	333
		9.36.3.2	ERRSTR_PXD_NULL	333
		9.36.3.3	g_pfDebugOut	333
		9.36.3.4	m_nLUTSinF0X16	334
9.37	src/GU	Islice.h Fil	e Reference	334
	9.37.1	Macro De	efinition Documentation	348
		9.37.1.1	GSLC_2PI	348
		9.37.1.2	GSLC_ALIGN_BOT_LEFT	348
		9.37.1.3	GSLC_ALIGN_BOT_MID	348
		9.37.1.4	GSLC_ALIGN_BOT_RIGHT	348

xlviii CONTENTS

9.37.1.5 GSLC_ALIGN_MID_LEFT
9.37.1.6 GSLC_ALIGN_MID_MID
9.37.1.7 GSLC_ALIGN_MID_RIGHT
9.37.1.8 GSLC_ALIGN_TOP_LEFT
9.37.1.9 GSLC_ALIGN_TOP_MID
9.37.1.10 GSLC_ALIGN_TOP_RIGHT
9.37.1.11 GSLC_ALIGNH_LEFT
9.37.1.12 GSLC_ALIGNH_MID
9.37.1.13 GSLC_ALIGNH_RIGHT
9.37.1.14 GSLC_ALIGNV_BOT
9.37.1.15 GSLC_ALIGNV_MID
9.37.1.16 GSLC_ALIGNV_TOP
9.37.1.17 GSLC_COL_BLACK
9.37.1.18 GSLC_COL_BLUE
9.37.1.19 GSLC_COL_BLUE_DK1
9.37.1.20 GSLC_COL_BLUE_DK2
9.37.1.21 GSLC_COL_BLUE_DK3
9.37.1.22 GSLC_COL_BLUE_DK4
9.37.1.23 GSLC_COL_BLUE_LT1
9.37.1.24 GSLC_COL_BLUE_LT2
9.37.1.25 GSLC_COL_BLUE_LT3
9.37.1.26 GSLC_COL_BLUE_LT4
9.37.1.27 GSLC_COL_BROWN
9.37.1.28 GSLC_COL_CYAN
9.37.1.29 GSLC_COL_GRAY
9.37.1.30 GSLC_COL_GRAY_DK1
9.37.1.31 GSLC_COL_GRAY_DK2
9.37.1.32 GSLC_COL_GRAY_DK3
9.37.1.33 GSLC_COL_GRAY_LT1
9.37.1.34 GSLC_COL_GRAY_LT2

CONTENTS xlix

9.37.1.35 GSLC_COL_GRAY_LT3	351
9.37.1.36 GSLC_COL_GREEN	351
9.37.1.37 GSLC_COL_GREEN_DK1	351
9.37.1.38 GSLC_COL_GREEN_DK2	351
9.37.1.39 GSLC_COL_GREEN_DK3	351
9.37.1.40 GSLC_COL_GREEN_DK4	351
9.37.1.41 GSLC_COL_GREEN_LT1	352
9.37.1.42 GSLC_COL_GREEN_LT2	352
9.37.1.43 GSLC_COL_GREEN_LT3	352
9.37.1.44 GSLC_COL_GREEN_LT4	352
9.37.1.45 GSLC_COL_MAGENTA	352
9.37.1.46 GSLC_COL_ORANGE	352
9.37.1.47 GSLC_COL_PURPLE	352
9.37.1.48 GSLC_COL_RED	352
9.37.1.49 GSLC_COL_RED_DK1	352
9.37.1.50 GSLC_COL_RED_DK2	352
9.37.1.51 GSLC_COL_RED_DK3	353
9.37.1.52 GSLC_COL_RED_DK4	353
9.37.1.53 GSLC_COL_RED_LT1	353
9.37.1.54 GSLC_COL_RED_LT2	353
9.37.1.55 GSLC_COL_RED_LT3	353
9.37.1.56 GSLC_COL_RED_LT4	353
9.37.1.57 GSLC_COL_TEAL	353
9.37.1.58 GSLC_COL_WHITE	353
9.37.1.59 GSLC_COL_YELLOW	353
9.37.1.60 GSLC_COL_YELLOW_DK	353
9.37.1.61 GSLC_COLMONO_BLACK	354
9.37.1.62 GSLC_COLMONO_WHITE	354
9.37.1.63 GSLC_ELEM_FEA_CLICK_EN	354
9.37.1.64 GSLC_ELEM_FEA_FILL_EN	354

I CONTENTS

	9.37.1.65	5 GSLC_ELEM_FEA_FRAME_EN	 354
	9.37.1.66	6 GSLC_ELEM_FEA_GLOW_EN	 354
	9.37.1.67	7 GSLC_ELEM_FEA_NONE	 354
	9.37.1.68	8 GSLC_ELEM_FEA_ROUND_EN	 354
	9.37.1.69	9 GSLC_ELEM_FEA_VALID	 354
	9.37.1.70	0 GSLC_ELEMREF_DEFAULT	 354
	9.37.1.71	1 GSLC_PMEM	 355
9.37.2	Typedef [Documentation	 355
	9.37.2.1	GSLC_CB_DEBUG_OUT	 355
	9.37.2.2	GSLC_CB_DRAW	 355
	9.37.2.3	GSLC_CB_EVENT	 355
	9.37.2.4	GSLC_CB_INPUT	 355
	9.37.2.5	GSLC_CB_PIN_POLL	 355
	9.37.2.6	GSLC_CB_TICK	 355
	9.37.2.7	GSLC_CB_TOUCH	 355
	9.37.2.8	gslc_tsColor	 355
	9.37.2.9	gslc_tsElem	 355
	9.37.2.10	0 gslc_tsEvent	 356
	9.37.2.11	1 gslc_tsEventTouch	 356
	9.37.2.12	2 gslc_tsPt	 356
	9.37.2.13	3 gslc_tsRect	 356
9.37.3	Enumera	ation Type Documentation	 356
	9.37.3.1	gslc_teAction	 356
	9.37.3.2	gslc_teElemId	 356
	9.37.3.3	gslc_teElemInd	 357
	9.37.3.4	gslc_teElemRefFlags	 357
	9.37.3.5	gslc_teEventSubType	 357
	9.37.3.6	gslc_teEventType	 358
	9.37.3.7	gslc_teFontId	 358
	9.37.3.8	gslc_teFontRefMode	 358

CONTENTS

	9.37.3.9 gslc_teFontHefType
	9.37.3.10 gslc_teGroupId
	9.37.3.11 gslc_teImgRefFlags
	9.37.3.12 gslc_telnitStat
	9.37.3.13 gslc_teInputRawEvent
	9.37.3.14 gslc_tePageId
	9.37.3.15 gslc_tePin
	9.37.3.16 gslc_teRedrawType
	9.37.3.17 gslc_teStackPage
	9.37.3.18 gslc_teTouch
	9.37.3.19 gslc_teTxtFlags
	9.37.3.20 gslc_teTypeCore
9.37.4	Variable Documentation
	9.37.4.1 g_pfDebugOut
9.38 src/GL	JIslice_config.h File Reference
9.39 src/GL	Uslice_config_ard.h File Reference
9.39.1	Macro Definition Documentation
	9.39.1.1 ADAGFX_PIN_CLK
	9.39.1.2 ADAGFX_PIN_CS
	9.39.1.3 ADAGFX_PIN_DC
	9.39.1.4 ADAGFX_PIN_MISO
	9.39.1.5 ADAGFX_PIN_MOSI
	9.39.1.6 ADAGFX_PIN_RD
	9.39.1.7 ADAGFX_PIN_RST
	9.39.1.8 ADAGFX_PIN_SDCS
	9.39.1.9 ADAGFX_PIN_WR
	9.39.1.10 ADAGFX_SPI_HW
	9.39.1.11 ADATOUCH_FLIP_X
	9.39.1.12 ADATOUCH_FLIP_Y
	9.39.1.13 ADATOUCH_SWAP_XY

lii CONTENTS

9.39.1.14 DEBUG_ERR	 . 364
9.39.1.15 DRV_DISP_ADAGFX	 . 364
9.39.1.16 DRV_DISP_ADAGFX_ILI9341	 . 364
9.39.1.17 DRV_TOUCH_NONE	 . 364
9.39.1.18 GSLC_BMP_TRANS_EN	 . 364
9.39.1.19 GSLC_BMP_TRANS_RGB	 . 364
9.39.1.20 GSLC_CLIP_EN	 . 364
9.39.1.21 GSLC_DEV_TOUCH	 . 364
9.39.1.22 GSLC_FEATURE_COMPOUND	 . 364
9.39.1.23 GSLC_FEATURE_INPUT	 . 365
9.39.1.24 GSLC_FEATURE_XGAUGE_RADIAL	 . 365
9.39.1.25 GSLC_FEATURE_XGAUGE_RAMP	 . 365
9.39.1.26 GSLC_FEATURE_XTEXTBOX_EMBED	 . 365
9.39.1.27 GSLC_LOCAL_STR	 . 365
9.39.1.28 GSLC_LOCAL_STR_LEN	 . 365
9.39.1.29 GSLC_ROTATE	 . 365
9.39.1.30 GSLC_SD_BUFFPIXEL	 . 365
9.39.1.31 GSLC_SD_EN	 . 365
9.39.1.32 GSLC_TOUCH_MAX_EVT	 . 365
9.39.1.33 GSLC_USE_FLOAT	 . 365
9.39.1.34 GSLC_USE_PROGMEM	 . 365
9.39.1.35 TOUCH_ROTATION_DATA	 . 365
9.39.1.36 TOUCH_ROTATION_FLIPX	 . 365
9.39.1.37 TOUCH_ROTATION_FLIPY	 . 365
9.39.1.38 TOUCH_ROTATION_SWAPXY	 . 365
9.40 src/GUIslice_config_linux.h File Reference	 . 365
9.40.1 Macro Definition Documentation	 . 366
9.40.1.1 ADATOUCH_FLIP_X	 . 366
9.40.1.2 ADATOUCH_FLIP_Y	 . 366
9.40.1.3 ADATOUCH_SWAP_XY	 . 366

CONTENTS

	9.40.1.4 DEBUG_ERR
	9.40.1.5 DRV_DISP_SDL1
Г	9.40.1.6 DRV_SDL_FIX_S
HOW	9.40.1.7 DRV_SDL_MOUS
	9.40.1.8 DRV_TOUCH_TS
EN	9.40.1.9 GSLC_BMP_TRAI
RGB	9.40.1.10 GSLC_BMP_TRAI
	9.40.1.11 GSLC_DEV_FB .
	9.40.1.12 GSLC_DEV_TOU
	9.40.1.13 GSLC_DEV_VID_
MPOUND	9.40.1.14 GSLC_FEATURE
UT	9.40.1.15 GSLC_FEATURE
AUGE_RADIAL	9.40.1.16 GSLC_FEATURE
AUGE_RAMP	9.40.1.17 GSLC_FEATURE
EXTBOX_EMBED	9.40.1.18 GSLC_FEATURE
	9.40.1.19 GSLC_LOCAL_ST
EN	9.40.1.20 GSLC_LOCAL_ST
EVT 366	9.40.1.21 GSLC_TOUCH_M
	9.40.1.22 GSLC_USE_FLOA
M	9.40.1.23 GSLC_USE_PRO
	9.41 src/GUIslice_drv.h File Reference
nce	9.42 src/GUIslice_drv_adagfx.cpp File Re
9	9.43 src/GUIslice_drv_adagfx.h File Refer
	9.43.1 Detailed Description
	9.43.2 Macro Definition Documenta
IP_MEM	9.43.2.1 DRV_HAS_DRAW
RCLE_FILL	9.43.2.2 DRV_HAS_DRAW
RCLE_FRAME	9.43.2.3 DRV_HAS_DRAW
IE 370	9.43.2.4 DRV_HAS_DRAW
NINT 370	9.43.2.5 DRV_HAS_DRAW

liv CONTENTS

	9.43.2.6	DRV_HAS_DRAW_POINTS	370
	9.43.2.7	DRV_HAS_DRAW_RECT_FILL	371
	9.43.2.8	DRV_HAS_DRAW_RECT_FRAME	371
	9.43.2.9	DRV_HAS_DRAW_RECT_ROUND_FILL	371
	9.43.2.10	DRV_HAS_DRAW_RECT_ROUND_FRAME	371
	9.43.2.11	DRV_HAS_DRAW_TEXT	371
	9.43.2.12	DRV_HAS_DRAW_TRI_FILL	371
	9.43.2.13	DRV_HAS_DRAW_TRI_FRAME	371
	9.43.2.14	DRV_OVERRIDE_TXT_ALIGN	371
9.43.3	Function	Documentation	371
	9.43.3.1	gslc_DrvAdaptColorToRaw(gslc_tsColor nCol)	371
	9.43.3.2	gslc_DrvDestruct(gslc_tsGui *pGui)	371
	9.43.3.3	gslc_DrvDrawBkgnd(gslc_tsGui *pGui)	372
	9.43.3.4	gslc_DrvDrawBmp24FromMem(gslc_tsGui *pGui, int16_t nDstX, int16_t nDstY, const unsigned char *pBitmap, bool bProgMem)	372
	9.43.3.5	gslc_DrvDrawFillCircle(gslc_tsGui *pGui, int16_t nMidX, int16_t nMidY, uint16_t nRadius, gslc_tsColor nCol)	372
	9.43.3.6	gslc_DrvDrawFillRect(gslc_tsGui *pGui, gslc_tsRect rRect, gslc_tsColor nCol) .	373
	9.43.3.7	gslc_DrvDrawFillRoundRect(gslc_tsGui *pGui, gslc_tsRect rRect, int16_t n↔ Radius, gslc_tsColor nCol)	373
	9.43.3.8	gslc_DrvDrawFillTriangle(gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, int16_t nX2, int16_t nY2, gslc_tsColor nCol)	
	9.43.3.9	$ \begin{array}{llllllllllllllllllllllllllllllllllll$	374
	9.43.3.10	gslc_DrvDrawFrameRect(gslc_tsGui *pGui, gslc_tsRect rRect, gslc_tsColor nCol)	374
	9.43.3.11	$gslc_DrvDrawFrameRoundRect(gslc_tsGui *pGui, gslc_tsRect rRect, int16_t n \leftarrow Radius, gslc_tsColor nCol)$	375
	9.43.3.12	gslc_DrvDrawFrameTriangle(gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, int16_t nX2, int16_t nY2, gslc_tsColor nCol)	375
	9.43.3.13	gslc_DrvDrawImage(gslc_tsGui *pGui, int16_t nDstX, int16_t nDstY, gslc_ts⇔ ImgRef sImgRef)	375
	9.43.3.14	gslc_DrvDrawLine(gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, gslc_tsColor nCol)	376
	9.43.3.15	gslc_DrvDrawMonoFromMem(gslc_tsGui *pGui, int16_t nDstX, int16_t nDst↔ Y, const unsigned char *pBitmap, bool bProgMem)	376

CONTENTS

	9.43.3.16	gsic_DrvDrawPoint(gsic_tsGui *pGui, int16_t nX, int16_t nY, gsic_tsColor nCol).	3/6
	9.43.3.17	gslc_DrvDrawPoints(gslc_tsGui *pGui, gslc_tsPt *asPt, uint16_t nNumPt, gslc⇔_tsColor nCol)	377
	9.43.3.18	gslc_DrvDrawTxt(gslc_tsGui *pGui, int16_t nTxtX, int16_t nTxtY, gslc_tsFont *pFont, const char *pStr, gslc_teTxtFlags eTxtFlags, gslc_tsColor colTxt, gslc← _tsColor colBg)	377
	9.43.3.19	gslc_DrvFontAdd(gslc_teFontRefType eFontRefType, const void *pvFontRef, uint16_t nFontSz)	378
	9.43.3.20	gslc_DrvFontsDestruct(gslc_tsGui *pGui)	378
	9.43.3.21	gslc_DrvGetDriverDisp(gslc_tsGui *pGui)	378
	9.43.3.22	gslc_DrvGetDriverTouch(gslc_tsGui *pGui)	378
	9.43.3.23	gslc_DrvGetNameDisp(gslc_tsGui *pGui)	380
	9.43.3.24	gslc_DrvGetNameTouch(gslc_tsGui *pGui)	380
	9.43.3.25	gslc_DrvGetTouch(gslc_tsGui *pGui, int16_t *pnX, int16_t *pnY, uint16_t *pn↔ Press, gslc_teInputRawEvent *peInputEvent, int16_t *pnInputVal)	380
	9.43.3.26	$ \begin{array}{llllllllllllllllllllllllllllllllllll$	381
	9.43.3.27	gslc_DrvImageDestruct(void *pvImg)	381
	9.43.3.28	gslc_DrvInit(gslc_tsGui *pGui)	381
	9.43.3.29	gslc_DrvInitTouch(gslc_tsGui *pGui, const char *acDev)	382
	9.43.3.30	gslc_DrvInitTs(gslc_tsGui *pGui, const char *acDev)	382
	9.43.3.31	gslc_DrvLoadImage(gslc_tsGui *pGui, gslc_tsImgRef sImgRef)	382
	9.43.3.32	gslc_DrvPageFlipNow(gslc_tsGui *pGui)	383
	9.43.3.33	gslc_DrvRotate(gslc_tsGui *pGui, uint8_t nRotation)	383
	9.43.3.34	gslc_DrvSetBkgndColor(gslc_tsGui *pGui, gslc_tsColor nCol)	383
	9.43.3.35	gslc_DrvSetBkgndImage(gslc_tsGui *pGui, gslc_tsImgRef sImgRef)	384
	9.43.3.36	gslc_DrvSetClipRect(gslc_tsGui *pGui, gslc_tsRect *pRect)	384
	9.43.3.37	gslc_DrvSetElemImageGlow(gslc_tsGui *pGui, gslc_tsElem *pElem, gslc_ts⇔ ImgRef sImgRef)	384
	9.43.3.38	gslc_DrvSetElemImageNorm(gslc_tsGui *pGui, gslc_tsElem *pElem, gslc_ts⇔ ImgRef sImgRef)	385
9.44 src/GU	Islice_drv_	m5stack.cpp File Reference	385
9.45 src/GU	Islice_drv	m5stack.h File Reference	385

Ivi CONTENTS

9.45.1	Detailed [Description	388
9.45.2	Macro De	finition Documentation	388
	9.45.2.1	DRV_HAS_DRAW_BMP_MEM	388
	9.45.2.2	DRV_HAS_DRAW_CIRCLE_FILL	389
	9.45.2.3	DRV_HAS_DRAW_CIRCLE_FRAME	389
	9.45.2.4	DRV_HAS_DRAW_LINE	389
	9.45.2.5	DRV_HAS_DRAW_POINT	389
	9.45.2.6	DRV_HAS_DRAW_POINTS	389
	9.45.2.7	DRV_HAS_DRAW_RECT_FILL	389
	9.45.2.8	DRV_HAS_DRAW_RECT_FRAME	389
	9.45.2.9	DRV_HAS_DRAW_RECT_ROUND_FILL	389
	9.45.2.10	DRV_HAS_DRAW_RECT_ROUND_FRAME	389
	9.45.2.11	DRV_HAS_DRAW_TEXT	389
	9.45.2.12	DRV_HAS_DRAW_TRI_FILL	390
	9.45.2.13	DRV_HAS_DRAW_TRI_FRAME	390
	9.45.2.14	DRV_OVERRIDE_TXT_ALIGN	390
9.45.3	Function I	Documentation	390
	9.45.3.1	gslc_DrvAdaptColorToRaw(gslc_tsColor nCol)	390
	9.45.3.2	gslc_DrvDestruct(gslc_tsGui *pGui)	390
	9.45.3.3	gslc_DrvDrawBkgnd(gslc_tsGui *pGui)	390
	9.45.3.4	gslc_DrvDrawBmp24FromMem(gslc_tsGui *pGui, int16_t nDstX, int16_t nDstY, const unsigned char *pBitmap, bool bProgMem)	391
	9.45.3.5	gslc_DrvDrawFillCircle(gslc_tsGui *pGui, int16_t nMidX, int16_t nMidY, uint16_t nRadius, gslc_tsColor nCol)	391
	9.45.3.6	gslc_DrvDrawFillRect(gslc_tsGui *pGui, gslc_tsRect rRect, gslc_tsColor nCol) .	391
	9.45.3.7	gslc_DrvDrawFillRoundRect(gslc_tsGui *pGui, gslc_tsRect rRect, int16_t n↔ Radius, gslc_tsColor nCol)	392
	9.45.3.8	gslc_DrvDrawFillTriangle(gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, int16_t nX2, int16_t nY2, gslc_tsColor nCol)	392
	9.45.3.9	gslc_DrvDrawFrameCircle(gslc_tsGui *pGui, int16_t nMidX, int16_t nMid↔ Y, uint16_t nRadius, gslc_tsColor nCol)	392
	9.45.3.10	gslc_DrvDrawFrameRect(gslc_tsGui *pGui, gslc_tsRect rRect, gslc_tsColor nCol)	393

CONTENTS

9.45.3.11	gsic_DrvDrawFrameHoundHect(gsic_tsGui *pGui, gsic_tsHect rHect, int16_t n↔ Radius, gslc_tsColor nCol)	393
9.45.3.12	gslc_DrvDrawFrameTriangle(gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, int16_t nX2, int16_t nY2, gslc_tsColor nCol)	393
9.45.3.13	gslc_DrvDrawImage(gslc_tsGui *pGui, int16_t nDstX, int16_t nDstY, gslc_ts⇔ ImgRef sImgRef)	394
9.45.3.14	gslc_DrvDrawLine(gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, gslc_tsColor nCol)	394
9.45.3.15	gslc_DrvDrawMonoFromMem(gslc_tsGui *pGui, int16_t nDstX, int16_t nDst↔ Y, const unsigned char *pBitmap, bool bProgMem)	395
9.45.3.16	gslc_DrvDrawPoint(gslc_tsGui *pGui, int16_t nX, int16_t nY, gslc_tsColor nCol) .	395
9.45.3.17	gslc_DrvDrawPoints(gslc_tsGui *pGui, gslc_tsPt *asPt, uint16_t nNumPt, gslc↔ _tsColor nCol)	395
9.45.3.18	gslc_DrvDrawTxt(gslc_tsGui *pGui, int16_t nTxtX, int16_t nTxtY, gslc_tsFont *pFont, const char *pStr, gslc_teTxtFlags eTxtFlags, gslc_tsColor colTxt, gslc← _tsColor colBg)	396
9.45.3.19	gslc_DrvDrawTxtAlign(gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, int8_t eTxtAlign, gslc_tsFont *pFont, const char *pStr, gslc_teTxt↔ Flags eTxtFlags, gslc_tsColor colTxt, gslc_tsColor colBg)	396
9.45.3.20	gslc_DrvFontAdd(gslc_teFontRefType eFontRefType, const void *pvFontRef, uint16_t nFontSz)	397
9.45.3.21	gslc_DrvFontsDestruct(gslc_tsGui *pGui)	397
9.45.3.22	gslc_DrvGetDriverDisp(gslc_tsGui *pGui)	397
9.45.3.23	gslc_DrvGetDriverTouch(gslc_tsGui *pGui)	398
9.45.3.24	gslc_DrvGetNameDisp(gslc_tsGui *pGui)	398
9.45.3.25	gslc_DrvGetNameTouch(gslc_tsGui *pGui)	398
9.45.3.26	gslc_DrvGetTxtSize(gslc_tsGui *pGui, gslc_tsFont *pFont, const char *pStr, gslc_teTxtFlags eTxtFlags, int16_t *pnTxtX, int16_t *pnTxtY, uint16_t *pnTxt← SzW, uint16_t *pnTxtSzH)	398
9.45.3.27	gslc_DrvImageDestruct(void *pvImg)	399
9.45.3.28	gslc_DrvInit(gslc_tsGui *pGui)	399
9.45.3.29	gslc_DrvInitTs(gslc_tsGui *pGui, const char *acDev)	400
9.45.3.30	gslc_DrvLoadImage(gslc_tsGui *pGui, gslc_tsImgRef sImgRef)	400
9.45.3.31	gslc_DrvPageFlipNow(gslc_tsGui *pGui)	400
9.45.3.32	gslc_DrvRotate(gslc_tsGui *pGui, uint8_t nRotation)	401
9.45.3.33	gslc_DrvSetBkgndColor(gslc_tsGui *pGui, gslc_tsColor nCol)	401

Iviii CONTENTS

	9	9.45.3.34	gslc_DrvSetBkgndImage(gslc_tsGui *pGui, gslc_tsImgRef sImgRef)	401
	9	9.45.3.35	gslc_DrvSetClipRect(gslc_tsGui *pGui, gslc_tsRect *pRect)	402
	9	9.45.3.36	gslc_DrvSetElemImageGlow(gslc_tsGui *pGui, gslc_tsElem *pElem, gslc_ts⇔ ImgRef sImgRef)	402
	9	9.45.3.37	gslc_DrvSetElemImageNorm(gslc_tsGui *pGui, gslc_tsElem *pElem, gslc_ts⇔ ImgRef sImgRef)	402
9.45	5.4 \	Variable D	Documentation	402
	ç	9.45.4.1	ERRSTR_NULL	402
	ç	9.45.4.2	ERRSTR_PXD_NULL	403
9.46 src/	'GUIs	lice_drv_	sdl.c File Reference	403
9.47 src/	'GUIs	lice_drv_	sdl.h File Reference	403
9.47	7.1 [Detailed [Description	405
9.47	7.2	Macro De	finition Documentation	405
	9	9.47.2.1	DRV_HAS_DRAW_POINT	405
	9	9.47.2.2	DRV_OVERRIDE_TXT_ALIGN	405
9.47	7.3 F	unction I	Documentation	405
	9	9.47.3.1	gslc_DrvAdaptColor(gslc_tsColor sCol)	405
	9	9.47.3.2	gslc_DrvAdaptRect(gslc_tsRect rRect)	406
	9	9.47.3.3	gslc_DrvCleanStart(const char *sTTY)	406
	9	9.47.3.4	gslc_DrvDestruct(gslc_tsGui *pGui)	406
	9	9.47.3.5	gslc_DrvDrawBkgnd(gslc_tsGui *pGui)	407
	9	9.47.3.6	gslc_DrvDrawFillRect(gslc_tsGui *pGui, gslc_tsRect rRect, gslc_tsColor nCol) .	407
	9	9.47.3.7	gslc_DrvDrawFrameRect(gslc_tsGui *pGui, gslc_tsRect rRect, gslc_tsColor nCol)	407
	9	9.47.3.8	gslc_DrvDrawImage(gslc_tsGui *pGui, int16_t nDstX, int16_t nDstY, gslc_ts⇔ ImgRef sImgRef)	407
	9	9.47.3.9	gslc_DrvDrawLine(gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, gslc_tsColor nCol)	408
	9	9.47.3.10	gslc_DrvDrawPoint(gslc_tsGui *pGui, int16_t nX, int16_t nY, gslc_tsColor nCol) .	408
	9	9.47.3.11	gslc_DrvDrawPoints(gslc_tsGui *pGui, gslc_tsPt *asPt, uint16_t nNumPt, gslc⇔_tsColor nCol)	409
	Ç	9.47.3.12	gslc_DrvDrawTxt(gslc_tsGui *pGui, int16_t nTxtX, int16_t nTxtY, gslc_tsFont *pFont, const char *pStr, gslc_teTxtFlags eTxtFlags, gslc_tsColor colTxt, gslc← _tsColor colBg)	410

CONTENTS

9.	.3.13 gslc_DrvFontAdd(gslc_teFontRefType eFontRefType, const void *pvFontRef, uint16_t nFontSz)
9.	.3.14 gslc_DrvFontsDestruct(gslc_tsGui *pGui)
9.	.3.15 gslc_DrvGetDriverDisp(gslc_tsGui *pGui)
9.	.3.16 gslc_DrvGetDriverTouch(gslc_tsGui *pGui)
9.	.3.17 gslc_DrvGetNameDisp(gslc_tsGui *pGui)
9.	.3.18 gslc_DrvGetNameTouch(gslc_tsGui *pGui)
9.	.3.19 gslc_DrvGetTouch(gslc_tsGui *pGui, int16_t *pnX, int16_t *pnY, uint16_t *pn↔ Press, gslc_teInputRawEvent *peInputEvent, int16_t *pnInputVal) 413
9.	.3.20 gslc_DrvGetTxtSize(gslc_tsGui *pGui, gslc_tsFont *pFont, const char *pStr, gslc_teTxtFlags eTxtFlags, int16_t *pnTxtX, int16_t *pnTxtY, uint16_t *pnTxt← SzW, uint16_t *pnTxtSzH)
9.	.3.21 gslc_DrvImageDestruct(void *pvImg)
9.	.3.22 gslc_DrvInit(gslc_tsGui *pGui)
9.	.3.23 gslc_DrvInitTouch(gslc_tsGui *pGui, const char *acDev)
9.	.3.24 gslc_DrvLoadImage(gslc_tsGui *pGui, gslc_tsImgRef sImgRef) 415
9.	.3.25 gslc_DrvPageFlipNow(gslc_tsGui *pGui)
9.	.3.26 gslc_DrvReportInfoPost()
9.	.3.27 gslc_DrvReportInfoPre()
9.	.3.28 gslc_DrvRotate(gslc_tsGui *pGui, uint8_t nRotation)
9.	.3.29 gslc_DrvSetBkgndColor(gslc_tsGui *pGui, gslc_tsColor nCol)
9.	.3.30 gslc_DrvSetBkgndImage(gslc_tsGui *pGui, gslc_tsImgRef sImgRef) 417
9.	.3.31 gslc_DrvSetClipRect(gslc_tsGui *pGui, gslc_tsRect *pRect)
9.	.3.32 gslc_DrvSetElemImageGlow(gslc_tsGui *pGui, gslc_tsElem *pElem, gslc_ts⇔ ImgRef sImgRef)
9.	.3.33 gslc_DrvSetElemImageNorm(gslc_tsGui *pGui, gslc_tsElem *pElem, gslc_ts↔ ImgRef sImgRef)
9.48 src/GUIslic	_drv_tft_espi.cpp File Reference
9.49 src/GUIslic	_drv_tft_espi.h File Reference
9.49.1 De	illed Description
9.49.2 M	ro Definition Documentation
9.	.2.1 DRV_HAS_DRAW_BMP_MEM
9.	.2.2 DRV_HAS_DRAW_CIRCLE_FILL

IX

	9.49.2.3	DRV_HAS_DRAW_CIRCLE_FRAME	421
	9.49.2.4	DRV_HAS_DRAW_LINE	421
	9.49.2.5	DRV_HAS_DRAW_POINT	422
	9.49.2.6	DRV_HAS_DRAW_POINTS	422
	9.49.2.7	DRV_HAS_DRAW_RECT_FILL	422
	9.49.2.8	DRV_HAS_DRAW_RECT_FRAME	422
	9.49.2.9	DRV_HAS_DRAW_RECT_ROUND_FILL	422
	9.49.2.10	DRV_HAS_DRAW_RECT_ROUND_FRAME	422
	9.49.2.11	DRV_HAS_DRAW_TEXT	422
	9.49.2.12	DRV_HAS_DRAW_TRI_FILL	422
	9.49.2.13	DRV_HAS_DRAW_TRI_FRAME	422
	9.49.2.14	DRV_OVERRIDE_TXT_ALIGN	422
	9.49.2.15	GSLC_SPIFFS_EN	422
9.49.3	Function I	Documentation	422
	9.49.3.1	gslc_DrvAdaptColorToRaw(gslc_tsColor nCol)	422
	9.49.3.2	gslc_DrvDestruct(gslc_tsGui *pGui)	422
	9.49.3.3	gslc_DrvDrawBkgnd(gslc_tsGui *pGui)	423
	9.49.3.4	gslc_DrvDrawBmp24FromMem(gslc_tsGui *pGui, int16_t nDstX, int16_t nDstY, const unsigned char *pBitmap, bool bProgMem)	423
	9.49.3.5	gslc_DrvDrawFillCircle(gslc_tsGui *pGui, int16_t nMidX, int16_t nMidY, uint16_t nRadius, gslc_tsColor nCol)	423
	9.49.3.6	gslc_DrvDrawFillRect(gslc_tsGui *pGui, gslc_tsRect rRect, gslc_tsColor nCol) .	424
	9.49.3.7	gslc_DrvDrawFillRoundRect(gslc_tsGui *pGui, gslc_tsRect rRect, int16_t n↔ Radius, gslc_tsColor nCol)	424
	9.49.3.8	gslc_DrvDrawFillTriangle(gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, int16_t nX2, int16_t nY2, gslc_tsColor nCol)	424
	9.49.3.9	$ \begin{array}{llllllllllllllllllllllllllllllllllll$	425
	9.49.3.10	gslc_DrvDrawFrameRect(gslc_tsGui *pGui, gslc_tsRect rRect, gslc_tsColor nCol)	425
	9.49.3.11	gslc_DrvDrawFrameRoundRect(gslc_tsGui *pGui, gslc_tsRect rRect, int16_t n⊷ Radius, gslc_tsColor nCol)	426
	9.49.3.12	gslc_DrvDrawFrameTriangle(gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, int16_t nX2, int16_t nY2, gslc_tsColor nCol)	426

CONTENTS

9.49.3.13	gslc_DrvDrawImage(gslc_tsGui *pGui, int16_t nDstX, int16_t nDstY, gslc_ts⇔ ImgRef sImgRef)	426
9.49.3.14	$ \begin{array}{llllllllllllllllllllllllllllllllllll$	427
9.49.3.15	$ \begin{array}{llllllllllllllllllllllllllllllllllll$	427
9.49.3.16	$gslc_DrvDrawPoint(gslc_tsGui *pGui, int16_t nX, int16_t nY, gslc_tsColor nCol) \ .$	427
9.49.3.17	gslc_DrvDrawPoints(gslc_tsGui *pGui, gslc_tsPt *asPt, uint16_t nNumPt, gslc⇔_tsColor nCol)	428
9.49.3.18	gslc_DrvDrawTxt(gslc_tsGui *pGui, int16_t nTxtX, int16_t nTxtY, gslc_tsFont *pFont, const char *pStr, gslc_teTxtFlags eTxtFlags, gslc_tsColor colTxt, gslc _tsColor colBg)	428
9.49.3.19	gslc_DrvDrawTxtAlign(gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, int8_t eTxtAlign, gslc_tsFont *pFont, const char *pStr, gslc_teTxt↔ Flags eTxtFlags, gslc_tsColor colTxt, gslc_tsColor colBg)	429
9.49.3.20	gslc_DrvFontAdd(gslc_teFontRefType eFontRefType, const void *pvFontRef, uint16_t nFontSz)	429
9.49.3.21	gslc_DrvFontsDestruct(gslc_tsGui *pGui)	429
9.49.3.22	gslc_DrvGetDriverDisp(gslc_tsGui *pGui)	430
9.49.3.23	gslc_DrvGetDriverTouch(gslc_tsGui *pGui)	430
9.49.3.24	gslc_DrvGetNameDisp(gslc_tsGui *pGui)	430
9.49.3.25	gslc_DrvGetNameTouch(gslc_tsGui *pGui)	431
9.49.3.26	$ \begin{array}{llllllllllllllllllllllllllllllllllll$	431
9.49.3.27	gslc_DrvImageDestruct(void *pvImg)	431
9.49.3.28	gslc_DrvInit(gslc_tsGui *pGui)	432
9.49.3.29	gslc_DrvInitTs(gslc_tsGui *pGui, const char *acDev)	432
9.49.3.30	gslc_DrvLoadImage(gslc_tsGui *pGui, gslc_tsImgRef sImgRef)	433
9.49.3.31	gslc_DrvPageFlipNow(gslc_tsGui *pGui)	433
9.49.3.32	gslc_DrvRotate(gslc_tsGui *pGui, uint8_t nRotation)	433
9.49.3.33	gslc_DrvSetBkgndColor(gslc_tsGui *pGui, gslc_tsColor nCol)	433
9.49.3.34	gslc_DrvSetBkgndImage(gslc_tsGui *pGui, gslc_tsImgRef sImgRef)	434
9.49.3.35	gslc_DrvSetClipRect(gslc_tsGui *pGui, gslc_tsRect *pRect)	434
9.49.3.36	$\label{lem:gslc_def} $\operatorname{gslc_DrvSetElemImageGlow}(\operatorname{gslc_tsGui} *\operatorname{pGui}, \operatorname{gslc_tsElem} *\operatorname{pElem}, \operatorname{gslc_ts} \longleftrightarrow \operatorname{ImgRef} (\operatorname{sImgRef}) \dots $	434

lxii CONTENTS

		9.49.3.37	gslc_DrvSetElemImageNorm(gslc_tsGui *pGui, gslc_tsElem *pElem, gslc_ts↔	
			ImgRef sImgRef)	435
9.50	src/GU	Islice_drv_	utft.cpp File Reference	435
9.51	src/GU	Islice_drv_	utft.h File Reference	435
	9.51.1	Detailed I	Description	438
	9.51.2	Macro De	finition Documentation	438
		9.51.2.1	DRV_HAS_DRAW_BMP_MEM	438
		9.51.2.2	DRV_HAS_DRAW_CIRCLE_FILL	439
		9.51.2.3	DRV_HAS_DRAW_CIRCLE_FRAME	439
		9.51.2.4	DRV_HAS_DRAW_LINE	439
		9.51.2.5	DRV_HAS_DRAW_POINT	439
		9.51.2.6	DRV_HAS_DRAW_POINTS	439
		9.51.2.7	DRV_HAS_DRAW_RECT_FILL	439
		9.51.2.8	DRV_HAS_DRAW_RECT_FRAME	439
		9.51.2.9	DRV_HAS_DRAW_RECT_ROUND_FILL	439
		9.51.2.10	DRV_HAS_DRAW_RECT_ROUND_FRAME	439
		9.51.2.11	DRV_HAS_DRAW_TEXT	439
		9.51.2.12	DRV_HAS_DRAW_TRI_FILL	440
		9.51.2.13	DRV_HAS_DRAW_TRI_FRAME	440
		9.51.2.14	DRV_OVERRIDE_TXT_ALIGN	440
	9.51.3	Function	Documentation	440
		9.51.3.1	gslc_DrvAdaptColorToRaw(gslc_tsColor nCol)	440
		9.51.3.2	gslc_DrvDestruct(gslc_tsGui *pGui)	440
		9.51.3.3	gslc_DrvDrawBkgnd(gslc_tsGui *pGui)	440
		9.51.3.4	gslc_DrvDrawBmp24FromMem(gslc_tsGui *pGui, int16_t nDstX, int16_t nDstY, const unsigned char *pBitmap, bool bProgMem)	441
		9.51.3.5	gslc_DrvDrawFillCircle(gslc_tsGui *pGui, int16_t nMidX, int16_t nMidY, uint16_t nRadius, gslc_tsColor nCol)	441
		9.51.3.6	$gslc_DrvDrawFillRect(gslc_tsGui *pGui, gslc_tsRect rRect, gslc_tsColor nCol) .$	441
		9.51.3.7	gslc_DrvDrawFillRoundRect(gslc_tsGui *pGui, gslc_tsRect rRect, int16_t n⊷ Radius, gslc_tsColor nCol)	442
		9.51.3.8	$gslc_DrvDrawFillTriangle(gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, int16_t nX2, int16_t nY2, gslc_tsColor nCol)$	442

CONTENTS

9.51.3.9	gslc_DrvDrawFrameCircle(gslc_tsGui *pGui, int16_t nMidX, int16_t nMid↔ Y, uint16_t nRadius, gslc_tsColor nCol)	442
9.51.3.1	0 gslc_DrvDrawFrameRect(gslc_tsGui *pGui, gslc_tsRect rRect, gslc_tsColor nCol)	443
9.51.3.1	1 gslc_DrvDrawFrameRoundRect(gslc_tsGui ∗pGui, gslc_tsRect rRect, int16_t n↔ Radius, gslc_tsColor nCol)	443
9.51.3.1	2 gslc_DrvDrawFrameTriangle(gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, int16_t nX2, int16_t nY2, gslc_tsColor nCol)	443
9.51.3.1	3 gslc_DrvDrawImage(gslc_tsGui *pGui, int16_t nDstX, int16_t nDstY, gslc_ts↔ ImgRef sImgRef)	444
9.51.3.1	4 gslc_DrvDrawLine(gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, gslc_tsColor nCol)	444
9.51.3.1	5 gslc_DrvDrawMonoFromMem(gslc_tsGui *pGui, int16_t nDstX, int16_t nDst↔ Y, const unsigned char *pBitmap, bool bProgMem)	445
9.51.3.1	6 gslc_DrvDrawPoint(gslc_tsGui *pGui, int16_t nX, int16_t nY, gslc_tsColor nCol) .	445
9.51.3.1	7 gslc_DrvDrawPoints(gslc_tsGui *pGui, gslc_tsPt *asPt, uint16_t nNumPt, gslc↔ _tsColor nCol)	445
9.51.3.1	8 gslc_DrvDrawTxt(gslc_tsGui *pGui, int16_t nTxtX, int16_t nTxtY, gslc_tsFont *pFont, const char *pStr, gslc_teTxtFlags eTxtFlags, gslc_tsColor colTxt, gslc-tsColor colBg)	446
9.51.3.1	9 gslc_DrvFontAdd(gslc_teFontRefType eFontRefType, const void *pvFontRef, uint16_t nFontSz)	446
9.51.3.2	0 gslc_DrvFontsDestruct(gslc_tsGui *pGui)	447
9.51.3.2	1 gslc_DrvGetDriverDisp(gslc_tsGui *pGui)	447
9.51.3.2	2 gslc_DrvGetDriverTouch(gslc_tsGui *pGui)	447
9.51.3.2	3 gslc_DrvGetNameDisp(gslc_tsGui *pGui)	448
9.51.3.2	4 gslc_DrvGetNameTouch(gslc_tsGui *pGui)	449
9.51.3.2	5 gslc_DrvGetTouch(gslc_tsGui *pGui, int16_t *pnX, int16_t *pnY, uint16_t *pn↔ Press, gslc_teInputRawEvent *peInputEvent, int16_t *pnInputVal)	449
9.51.3.2	6 gslc_DrvGetTxtSize(gslc_tsGui *pGui, gslc_tsFont *pFont, const char *pStr, gslc_teTxtFlags eTxtFlags, int16_t *pnTxtX, int16_t *pnTxtY, uint16_t *pnTxt← SzW, uint16_t *pnTxtSzH)	449
9.51.3.2	7 gslc_DrvImageDestruct(void *pvImg)	450
9.51.3.2	8 gslc_DrvInit(gslc_tsGui *pGui)	450
9.51.3.2	9 gslc_DrvInitTouch(gslc_tsGui *pGui, const char *acDev)	451
9.51.3.3	0 gslc_DrvInitTs(gslc_tsGui *pGui, const char *acDev)	451
9.51.3.3	1 gslc_DrvLoadImage(gslc_tsGui *pGui, gslc_tsImgRef sImgRef)	451

lxiv CONTENTS

		9.51.3.32	2 gslc_DrvPageFlipNow(gslc_tsGui *pGui)	452
		9.51.3.33	3 gslc_DrvRotate(gslc_tsGui *pGui, uint8_t nRotation)	452
		9.51.3.34	gslc_DrvSetBkgndColor(gslc_tsGui *pGui, gslc_tsColor nCol)	452
		9.51.3.35	gslc_DrvSetBkgndImage(gslc_tsGui *pGui, gslc_tsImgRef sImgRef)	452
		9.51.3.36	6 gslc_DrvSetClipRect(gslc_tsGui *pGui, gslc_tsRect *pRect)	453
		9.51.3.37	gslc_DrvSetElemImageGlow(gslc_tsGui *pGui, gslc_tsElem *pElem, gslc_ts⇔ ImgRef sImgRef)	453
		9.51.3.38	B gslc_DrvSetElemImageNorm(gslc_tsGui *pGui, gslc_tsElem *pElem, gslc_ts⇔ ImgRef sImgRef)	453
9.52	src/GU	Islice_ex.h	File Reference	454
9.53	src/GU	Islice_th.c	pp File Reference	454
,	9.53.1	Function	Documentation	455
		9.53.1.1	gslc_getTouchHandler(void)	455
		9.53.1.2	gslc_InitTouchHandler(TouchHandler *pTH)	455
	9.53.2	Variable I	Documentation	455
		9.53.2.1	pTouchHandler	455
9.54	src/GU	lslice_th.h	File Reference	455
!	9.54.1	Function	Documentation	456
		9.54.1.1	gslc_getTouchHandler(void)	456
		9.54.1.2	gslc_InitTouchHandler(TouchHandler *pTHO)	456
9.55	src/GU	lslice_th_>	XPT2046.h File Reference	456
9.56	src/GU	Islice_vers	sion.h File Reference	457
!	9.56.1	Macro De	efinition Documentation	457
		9.56.1.1	GUISLICE_VER	457

Chapter 1

GUIslice library

A lightweight GUI framework for embedded displays

Design your GUI with a **drag & drop builder**, then apply the same code to a wide range of displays, libraries and controllers with the **cross-platform framework**. Open source **MIT license** grants free commercial usage.

- Extensive Documentation guides available
- GUIslice API documentation (online) & (PDF)
- Active development: see latest updates & work in progress
- Release history
- Website (www.impulseadventure.com)
- Support email: guislice@gmail.com
- GUIslice by Calvin Hass and GitHub contributors, Builder by Paul Conti

Features

- · Pure C library, no dynamic memory allocation
- · Widgets:
 - text, images, buttons, checkboxes, radio buttons, sliders, keypad, listbox, radial controls, scrolling textbox / terminal, graphs, etc. plus extensions and multiple pages.
- · Cross-platform GUIslice Builder application to generate layouts
- Platform-independent GUI core currently supports:
 - Adafruit-GFX, TFT eSPI, mcufriend, UTFT, SDL1.2, SDL2.0
- · Devices:
 - Raspberry Pi, Arduino, ATmega2560, ESP8266 / NodeMCU, ESP32, M5stack, Teensy 3, Feather M0 (Cortex-M0), nRF52 (Cortex-M4F), LINUX, Beaglebone Black, STM32, Due, etc.
- Typical displays:

2 GUIslice library

PiTFT, Adafruit TFT 3.5" / 2.8" / 2.4" / 2.2" / 1.44", FeatherWing TFT, OLED 0.96", mcufriend, BuyDisplay / EastRising 4.3" 5" 7", Waveshare, 4D Cape

- Display drivers include:
 - ILI9341, ST7735, SSD1306, HX8347D, HX8357, PCD8544, RA8875, ILI9341_t3, ILI9341_due
- Touchscreen control including:
 - STMPE610, FT6206, FT5206, XPT2046, 4-wire, tslib, URTouch, Adafruit Seesaw
- Foreign characters / UTF-8 encoding (in SDL mode), anti-aliased fonts (in TFT_eSPI mode)
- Dynamic display rotation
- GPIO / pin / keyboard / Adafruit Seesaw control for non-touchscreen devices

Screenshots

GUIslice Builder

- Includes cross-platform (Windows, LINUX and Mac) desktop application to generate GUIslice layouts
- Please refer to GUIslice Builder wiki for documentation

Chapter 2

Todo List

Global gslc_CollectFindFocusStep (gslc_tsGui *pGui, gslc_tsCollect *pCollect, bool bNext, bool *pb

Wrapped, int16_t *pnElemInd)

Doc. This API is experimental and subject to change

Global gslc_InitInputMap (gslc_tsGui *pGui, gslc_tsInputMap *asInputMap, uint8_t nInputMapMax)

Doc. This API is experimental and subject to change

Global gslc_InputMapAdd (gslc_tsGui *pGui, gslc_teInputRawEvent eInputEvent, int16_t nInputVal, gslc ← _ teAction eAction, int16_t nActionVal)

Doc. This API is experimental and subject to change

 $\label{linear_global_gslc_lnputMapLookup} $$ (gslc_tsGui *pGui, gslc_telnputRawEvent elnputEvent, int16_t nlnputVal, gslc_teAction *peAction, int16_t *pnActionVal) $$$

Doc. This API is experimental and subject to change

Global gslc_PageFocusStep (gslc_tsGui *pGui, gslc_tsPage *pPage, bool bNext)

Doc. This API is experimental and subject to change

Global gslc_SetPinPollFunc (gslc_tsGui *pGui, GSLC_CB_PIN_POLL pfunc)

Doc. This API is experimental and subject to change

4 Todo List

Chapter 3

Module Index

3.1 Modules

Here is a list of all modules:

General Functions
Graphics General Functions
Graphics Primitive Functions
Font Functions
Page Functions
Element Functions
Element: Creation Functions
Element: General Functions
Element: Update Functions
Touchscreen Functions
Input Mapping Functions
General Purpose Macros
Flash-based Element Macros
Internal Functions
Internal: Misc Functions
Internal: Element Functions
Internal: Page Functions
Internal: Element Collection Functions
Internal: Element Collection Event Functions
Internal: Tracking Functions
Internal: Cleanup Functions

6 Module Index

Chapter 4

Hierarchical Index

4.1 Class Hierarchy

This inheritance list is sorted roughly, but not completely, alphabetically:

gslc_tsCollect	119
gslc_tsColor	120
gslc_tsDriver	121
gslc_tsElem	122
gslc_tsElemRef	
gslc_tsEvent	
gslc_tsEventTouch	
gslc_tsFont	
gslc_tsGui	
gslc_tslmgRef	
gslc_tsInputMap	
gslc_tsPage	
gslc_tsPt	
gslc_tsRect	
gslc_tsXCheckbox	
gslc_tsXGauge	
gslc_tsXGlowball	
gslc_tsXGlowballRing	
gslc_tsXGraph	
gslc_tsXKeyPad	
gslc_tsXKeyPad_Alpha	
gslc_tsXKeyPad_Num	
gslc_tsXKeyPadCfg	
gslc_tsXKeyPadData	
gslc_tsXListbox	
gslc_tsXProgress	
gslc_tsXRadial	
gslc_tsXRamp	
gslc_tsXRingGauge	
gslc_tsXSelNum	
gslc_tsXSlider	
gslc_tsXSpinner	
gslc_tsXTemplate	
gslc_tsXTextbox	
THPoint	
TouchHandler	
Tavalal landlar VDT0040	174

8 Hierarchical Index

Chapter 5

Data Structure Index

5.1 Data Structures

Here are the data structures with brief descriptions:

gslc_tsCollect
Element collection struct
gslc_tsColor
Color structure. Defines RGB triplet
gslc_tsDriver
gslc_tsElem
Element Struct
gslc_tsElemRef
Element reference structure
gslc_tsEvent
Event structure
Structure used to pass touch data through event
gslc_tsFont
Font reference structure
gslc_tsGui
GUI structure
gslc_tsImgRef
Image reference structure
gslc_tsInputMap
Input mapping
gslc_tsPage
Page structure
gslc_tsPt Define point coordinates
gslc_tsRect
Rectangular region. Defines X,Y corner coordinates plus dimensions
gslc_tsXCheckbox
Extended data for Checkbox element
gslc_tsXGauge
Extended data for Gauge element
gslc_tsXGlowball
Extended data for Slider element
gslc_tsXGlowballRing
gslc_tsXGraph

10 Data Structure Index

gslc_tsXKeyPad	
Extended data for KeyPad element	42
gslc_tsXKeyPad_Alpha	44
gslc_tsXKeyPad_Num	45
gslc_tsXKeyPadCfg	
Configuration for the KeyPad	46
gslc_tsXKeyPadData	
Input callback data structure	49
gslc_tsXListbox	
Extended data for Listbox element	49
gslc_tsXProgress	
Extended data for Gauge element	53
gslc_tsXRadial	
Extended data for Gauge element	54
gslc_tsXRamp	
Extended data for Gauge element	57
gslc_tsXRingGauge	
Extended data for XRingGauge element	58
gslc_tsXSelNum	
Extended data for SelNum element	60
gslc_tsXSlider	
	61
gslc_tsXSpinner	
Extended data for Spinner element	63
gslc_tsXTemplate	
	66
gslc_tsXTextbox	
Extended data for Textbox element	
THPoint	
TouchHandler	
TouchHandler XPT2046	71

Chapter 6

File Index

6.1 File List

Here is a list of all files with brief descriptions:

12 File Index

src/elem/XKeyPad.h
src/elem/XKeyPad_Alpha.c
src/elem/XKeyPad_Alpha.h
src/elem/XKeyPad_Num.c
src/elem/XKeyPad_Num.h
src/elem/XListbox.c
src/elem/XListbox.h
src/elem/XProgress.c
src/elem/XProgress.h
src/elem/XRadial.c
src/elem/XRadial.h
src/elem/XRamp.c
src/elem/XRamp.h
src/elem/XRingGauge.c
src/elem/XRingGauge.h
src/elem/XSelNum.c
src/elem/XSelNum.h
src/elem/XSlider.c
src/elem/XSlider.h
src/elem/XSpinner.c
src/elem/XSpinner.h
src/elem/XTemplate.c
src/elem/XTemplate.h
src/elem/XTextbox.c
src/elem/XTextbox h

Chapter 7

Module Documentation

7.1 General Functions

General functions for configuring the GUI.

Functions

char * gslc_GetVer (gslc_tsGui *pGui)

Get the GUIslice version number.

const char * gslc_GetNameDisp (gslc_tsGui *pGui)

Get the GUIslice display driver name.

const char * gslc_GetNameTouch (gslc_tsGui *pGui)

Get the GUIslice touch driver name.

void * gslc_GetDriverDisp (gslc_tsGui *pGui)

Get the native display driver instance.

void * gslc_GetDriverTouch (gslc_tsGui *pGui)

Get the native touch driver instance.

bool gslc_Init (gslc_tsGui *pGui, void *pvDriver, gslc_tsPage *asPage, uint8_t nMaxPage, gslc_tsFont *as←
 Font, uint8_t nMaxFont)

Initialize the GUIslice library.

• void gslc_InitDebug (GSLC_CB_DEBUG_OUT pfunc)

Initialize debug output.

• void gslc DebugPrintf (const char *pFmt,...)

Optimized printf routine for GUIslice debug/error output.

• bool gslc_GuiRotate (gslc_tsGui *pGui, uint8_t nRotation)

Dynamically change rotation, automatically adapt touchscreen axes swap/flip.

void gslc_Quit (gslc_tsGui *pGui)

Exit the GUIslice environment.

void gslc_Update (gslc_tsGui *pGui)

Perform main GUIslice handling functions.

• bool gslc_SetBkgndImage (gslc_tsGui *pGui, gslc_tsImgRef sImgRef)

Configure the background to use a bitmap image.

bool gslc_SetBkgndColor (gslc_tsGui *pGui, gslc_tsColor nCol)

Configure the background to use a solid color.

bool gslc_SetTransparentColor (gslc_tsGui *pGui, gslc_tsColor nCol)

Configure the color to use for image transparency.

bool gslc_SetClipRect (gslc_tsGui *pGui, gslc_tsRect *pRect)

Set the clipping rectangle for further drawing.

7.1.1 Detailed Description

General functions for configuring the GUI.

7.1.2 Function Documentation

```
7.1.2.1 void gslc_DebugPrintf ( const char * pFmt, ... )
```

Optimized printf routine for GUIslice debug/error output.

- Only supports 's','d','u' tokens
- Calls on the output function configured in gslc_InitDebug()

Parameters

in	pFmt	Format string to use for printing
in		Variable parameter list

Returns

none

Get the native display driver instance.

• This can be useful to access special commands available in the selected driver.

Parameters

in <i>pGui</i>	Pointer to GUI
----------------	----------------

Returns

Void pointer to the display driver instance. This pointer should be typecast to the particular driver being used. If no driver was created then this function will return NULL.

7.1.2.3 void* gslc_GetDriverTouch (gslc_tsGui * pGui)

Get the native touch driver instance.

• This can be useful to access special commands available in the selected driver.

7.1 General Functions 15

Parameters

|--|

Returns

Void pointer to the touch driver instance. This pointer should be typecast to the particular driver being used. If no driver was created then this function will return NULL.

7.1.2.4 const char* gslc_GetNameDisp (gslc_tsGui * pGui)

Get the GUIslice display driver name.

Parameters

in <i>pGui</i>	Pointer to GUI
----------------	----------------

Returns

String containing driver name

7.1.2.5 const char* gslc_GetNameTouch (gslc_tsGui * pGui)

Get the GUIslice touch driver name.

Parameters

in <i>pGui</i> Pointer to GUI

Returns

String containing driver name

7.1.2.6 char* gslc_GetVer (gslc_tsGui * pGui)

Get the GUIslice version number.

Parameters

		_
in	pGui	Pointer to GUI

Returns

String containing version number

7.1.2.7 bool gslc_GuiRotate (gslc_tsGui * pGui, uint8_t nRotation)

Dynamically change rotation, automatically adapt touchscreen axes swap/flip.

The function assumes that the touchscreen settings for swap and flip in the GUIslice config are valid for the configured GSLC_ROTATE.

Parameters

in	pGui	Pointer to GUI
in	nRotation	Screen Rotation value (0, 1, 2 or 3)

Returns

true if success, false otherwise

7.1.2.8 bool gslc_Init (gslc_tsGui * pGui, void * pvDriver, gslc_tsPage * asPage, uint8_t nMaxPage, gslc_tsFont * asFont, uint8_t nMaxFont)

Initialize the GUIslice library.

- Configures the primary screen surface(s)
- · Initializes font support

PRE:

• The environment variables should be configured before calling gslc_Init().

Parameters

in	pGui	Pointer to GUI
in	pvDriver	Void pointer to Driver struct (gslc_tsDriver*)
in	asPage	Pointer to Page array
in	nMaxPage	Size of Page array
in	asFont	Pointer to Font array
in	nMaxFont	Size of Font array

Returns

true if success, false if fail

7.1.2.9 void gslc_InitDebug (GSLC_CB_DEBUG_OUT pfunc)

Initialize debug output.

7.1 General Functions 17

- Defines the user function used for debug/error output
- · pfunc is responsible for outputing a single character
- For Arduino, this user function would typically call Serial.print()

Parameters

in	pfunc	Pointer to user character-out function	
----	-------	--	--

Returns

none

7.1.2.10 void gslc_Quit ($gslc_tsGui * pGui$)

Exit the GUIslice environment.

· Calls lower-level destructors to clean up any initialized subsystems and deletes any created elements or fonts

Parameters

in	pGui	Pointer to GUI
----	------	----------------

Returns

None

7.1.2.11 bool gslc_SetBkgndColor ($gslc_tsGui * pGui$, $gslc_tsColor nCol$)

Configure the background to use a solid color.

• The background is used when redrawing the entire page

Parameters

in	pGui	Pointer to GUI
in	nCol	RGB Color to use

Returns

true if success, false if fail

7.1.2.12 bool gslc_SetBkgndlmage (gslc_tsGui * pGui, gslc_tslmgRef slmgRef)

Configure the background to use a bitmap image.

• The background is used when redrawing the entire page

Parameters

in	pGui	Pointer to GUI
in	sImgRef	Image reference

Returns

true if success, false if fail

7.1.2.13 bool gslc_SetClipRect ($gslc_tsGui * pGui$, $gslc_tsRect * pRect$)

Set the clipping rectangle for further drawing.

Parameters

in	pGui	Pointer to GUI
in	pRect	Pointer to Rect for clipping (or NULL for entire screen)

Returns

true if success, false if error

7.1.2.14 bool gslc_SetTransparentColor ($gslc_tsGui * pGui$, $gslc_tsColor nCol$)

Configure the color to use for image transparency.

- Drawing a BMP with transparency enabled will cause regions in this specific color to appear transparent
- This API overrides the config option GSLC_BMP_TRANS_RGB

Parameters

in	pGui	Pointer to GUI
in	nCol	RGB Color to use

Returns

true if success, false if fail

7.1 General Functions 19

7.1.2.15 void gslc_Update (gslc_tsGui * pGui)

Perform main GUIslice handling functions.

- · Handles any touch events
- Performs any necessary screen redraw

Parameters

in	pGui	Pointer to GUI
----	------	----------------

Returns

None

7.2 Graphics General Functions

Helper functions that support graphics operations.

Functions

bool gslc_lslnRect (int16_t nSelX, int16_t nSelY, gslc_tsRect rRect)

Determine if a coordinate is inside of a rectangular region.

gslc_tsRect gslc_ExpandRect (gslc_tsRect rRect, int16_t nExpandW, int16_t nExpandH)

Expand or contract a rectangle in width and/or height (equal amounts on both side), based on the centerpoint of the rectangle.

• bool gslc IsInWH (int16 t nSeIX, int16 t nSeIY, uint16 t nWidth, uint16 t nHeight)

Determine if a coordinate is inside of a width x height region.

void gslc_UnionRect (gslc_tsRect *pRect, gslc_tsRect rAddRect)

Expand a rect to include another rect.

void gslc_InvalidateRgnReset (gslc_tsGui *pGui)

Reset the invalidation region.

void gslc InvalidateRgnPage (gslc tsGui *pGui, gslc tsPage *pPage)

Include an entire page (eg.

void gslc_InvalidateRgnScreen (gslc_tsGui *pGui)

Mark the entire screen as invalidated.

void gslc_InvalidateRgnAdd (gslc_tsGui *pGui, gslc_tsRect rAddRect)

Add a rectangular region to the invalidation region.

bool gslc_ClipPt (gslc_tsRect *pClipRect, int16_t nX, int16_t nY)

Perform basic clipping of a single point to a clipping region.

bool gslc_ClipLine (gslc_tsRect *pClipRect, int16_t *pnX0, int16_t *pnY0, int16_t *pnX1, int16_t *pnY1)

Perform basic clipping of a line to a clipping region.

bool gslc_ClipRect (gslc_tsRect *pClipRect, gslc_tsRect *pRect)

Perform basic clipping of a rectangle to a clipping region.

gslc_tslmgRef gslc_GetImageFromFile (const char *pFname, gslc_teImgRefFlags eFmt)

Create an image reference to a bitmap file in LINUX filesystem.

• gslc tslmgRef gslc GetImageFromSD (const char *pFname, gslc telmgRefFlags eFmt)

Create an image reference to a bitmap file in SD card.

gslc_tslmgRef gslc_GetImageFromRam (unsigned char *pImgBuf, gslc_teImgRefFlags eFmt)

Create an image reference to a bitmap in SRAM.

gslc_tslmgRef gslc_GetImageFromProg (const unsigned char *pImgBuf, gslc_teImgRefFlags eFmt)

Create an image reference to a bitmap in program memory (PROGMEM)

 $\bullet \ \ void \ gslc_PolarToXY \ (uint16_t \ nRad, int16_t \ n64Ang, int16_t \ *nDX, int16_t \ *nDY) \\$

Convert polar coordinate to cartesian.

int16_t gslc_sinFX (int16_t n64Ang)

Calculate fixed-point sine function from fractional degrees.

int16_t gslc_cosFX (int16_t n64Ang)

Calculate fixed-point cosine function from fractional degrees.

gslc_tsColor gslc_ColorBlend2 (gslc_tsColor colStart, gslc_tsColor colEnd, uint16_t nMidAmt, uint16_t n
 BlendAmt)

Create a color based on a blend between two colors.

• gslc_tsColor gslc_ColorBlend3 (gslc_tsColor colStart, gslc_tsColor colMid, gslc_tsColor colEnd, uint16_t n ← MidAmt, uint16_t nBlendAmt)

Create a color based on a blend between three colors.

bool gslc_ColorEqual (gslc_tsColor a, gslc_tsColor b)

Check whether two colors are equal.

7.2.1 Detailed Description

Helper functions that support graphics operations.

7.2.2 Function Documentation

7.2.2.1 bool gslc_ClipLine (gslc_tsRect * pClipRect, int16_t * pnX0, int16_t * pnY0, int16_t * pnX1, int16_t * pnX1)

Perform basic clipping of a line to a clipping region.

- · Implements Cohen-Sutherland algorithm
- · Coordinates in parameter list are modified to fit the region

Parameters

in	pClipRect	Pointer to clipping region
in,out	pnX0	Ptr to X coordinate of line start
in,out	pnY0	Ptr to Y coordinate of line start
in,out	pnX1	Ptr to X coordinate of line end
in,out	pnY1	Ptr to Y coordinate of line end

Returns

true if line is visible, false if it should be discarded

7.2.2.2 bool gslc_ClipPt ($gslc_tsRect*pClipRect$, int16_t nX, int16_t nY)

Perform basic clipping of a single point to a clipping region.

Parameters

in	pClipRect	Pointer to clipping region
in	nΧ	X coordinate of point
in	nΥ	Y coordinate of point

Returns

true if point is visible, false if it should be discarded

7.2.2.3 bool gslc_ClipRect (gslc_tsRect * pClipRect, gslc_tsRect * pRect)

Perform basic clipping of a rectangle to a clipping region.

· Coordinates in parameter rect are modified to fit the region

Parameters

in	pClipRect	Pointer to clipping region
in,out	pRect	Ptr to rectangle

Returns

true if rect is visible, false if it should be discarded

7.2.2.4 gslc_tsColor gslc_ColorBlend2 (gslc_tsColor colStart, gslc_tsColor colEnd, uint16_t nMidAmt, uint16_t nBlendAmt)

Create a color based on a blend between two colors.

Parameters

in	colStart	Starting color
in	colEnd	Ending color
in	nMidAmt	Position (01000) between start and end color at which the midpoint between colors should appear. Normally set to 500 (half-way).
in	nBlendAmt	The position (01000) between start and end at which we want to calculate the resulting blended color.

Returns

Blended color

7.2.2.5 gslc_tsColor gslc_ColorBlend3 (gslc_tsColor colStart, gslc_tsColor colMid, gslc_tsColor colEnd, uint16_t nMidAmt, uint16_t nBlendAmt)

Create a color based on a blend between three colors.

Parameters

in	colStart	Starting color
in	colMid	Intermediate color
in	colEnd	Ending color
in	nMidAmt	Position (01000) between start and end color at which the intermediate color should
		appear.
in	nBlendAmt	The position (01000) between start and end at which we want to calculate the resulting
		blended color.

Returns

Blended color

7.2.2.6 bool gslc_ColorEqual (gslc_tsColor a, gslc_tsColor b)

Check whether two colors are equal.

Parameters

in	а	First color
in	b	Second color

Returns

True iff a and b are the same color.

7.2.2.7 int16_t gslc_cosFX (int16_t n64Ang)

Calculate fixed-point cosine function from fractional degrees.

- Depending on configuration, the result is derived from either floating point math library or fixed point lookup table.
- gslc_cosFX(nAngDeg*64)/32768.0 = cos(nAngDeg*2pi/360)

Parameters

in	n64Ang	Angle (in units of 1/64 degrees)
----	--------	----------------------------------

Returns

Fixed-point cosine result. Signed 16-bit; divide by 32768 to get the actual value.

7.2.2.8 gslc_tsRect gslc_ExpandRect (gslc_tsRect rRect, int16_t nExpandW, int16_t nExpandH)

Expand or contract a rectangle in width and/or height (equal amounts on both side), based on the centerpoint of the rectangle.

Parameters

in	rRect	Rectangular region before resizing
in	nExpandW	Number of pixels to expand the width (if positive) of contract the width (if negative)
in	nExpandH	Number of pixels to expand the height (if positive) of contract the height (if negative)

Returns

gslc_tsRect() with resized dimensions

7.2.2.9 gslc_tslmgRef gslc_GetlmageFromFile (const char * pFname, gslc_telmgRefFlags eFmt)

Create an image reference to a bitmap file in LINUX filesystem.

Parameters

in	pFname	Pointer to filename string of image in filesystem
in	eFmt	Image format

Returns

Loaded image reference

 $7.2.2.10 \quad gslc_tslmgRef \ gslc_GetlmageFromProg \ (\ const \ unsigned \ char * \textit{plmgBuf}, \ gslc_telmgRefFlags \ \textit{eFmt} \)$

Create an image reference to a bitmap in program memory (PROGMEM)

Parameters

in	plmgBuf	Pointer to image buffer in memory
in	eFmt	Image format

Returns

Loaded image reference

7.2.2.11 gslc_tslmgRef gslc_GetlmageFromRam (unsigned char * plmgBuf, gslc_telmgRefFlags eFmt)

Create an image reference to a bitmap in SRAM.

Parameters

in	pImgBuf	Pointer to image buffer in memory
in	eFmt	Image format

Returns

Loaded image reference

7.2.2.12 gslc_tslmgRef gslc_GetlmageFromSD (const char * pFname, gslc_telmgRefFlags eFmt)

Create an image reference to a bitmap file in SD card.

Parameters

in	pFname	Pointer to filename string of image in SD card
in	eFmt	Image format

Returns

Loaded image reference

7.2.2.13 void gslc_InvalidateRgnAdd ($gslc_tsGui*pGui, gslc_tsRect rAddRect$)

Add a rectangular region to the invalidation region.

• This is usually called when an element has been modified

Parameters

in	pGui	Pointer to GUI
in	rAddRect	Rectangle to add to the invalidation region

Returns

none

7.2.2.14 void gslc_InvalidateRgnPage (gslc_tsGui * pGui, gslc_tsPage * pPage)

Include an entire page (eg.

from a page stack) in the invalidation region

Parameters

in	pGui	Pointer to GUI
in	pPage	Pointer to page

Returns

none

7.2.2.15 void gslc_InvalidateRgnReset (gslc_tsGui * pGui)

Reset the invalidation region.

Parameters

In paul Pointer to Got	in	pGui	Pointer to GUI
----------------------------	----	------	----------------

Returns

none

7.2.2.16 void gslc_InvalidateRgnScreen (gslc_tsGui * pGui)

Mark the entire screen as invalidated.

Parameters

in <i>pG</i>

Returns

none

7.2.2.17 bool gslc_lslnRect (int16_t nSelX, int16_t nSelY, gslc_tsRect rRect)

Determine if a coordinate is inside of a rectangular region.

• This routine is useful in determining if a touch coordinate is inside of a button.

Parameters

in	nSelX	X coordinate to test
in	nSelY	X coordinate to test
in	rRect	Rectangular region to compare against

Returns

true if inside region, false otherwise

7.2.2.18 bool gslc_lslnWH (int16_t nSelX, int16_t nSelY, uint16_t nWidth, uint16_t nHeight)

Determine if a coordinate is inside of a width x height region.

• This routine is useful in determining if a relative coordinate is within a given W x H dimension

Parameters

in	nSelX	X coordinate to test
in	nSelY	X coordinate to test
in	nWidth	Width to test against
in	nHeight	Height to test against

Returns

true if inside region, false otherwise

7.2.2.19 void gslc_PolarToXY (uint16_t nRad, int16_t n64Ang, int16_t * nDX, int16_t * nDY)

Convert polar coordinate to cartesian.

Parameters

in	nRad	Radius of ray
in	n64Ang	Angle of ray (in units of 1/64 degrees, 0 is up)
out	nDX	X offset for ray end
out	nDY	Y offset for ray end

Returns

none

7.2.2.20 int16_t gslc_sinFX (int16_t n64Ang)

Calculate fixed-point sine function from fractional degrees.

- Depending on configuration, the result is derived from either floating point math library or fixed point lookup
- gslc_sinFX(nAngDeg*64)/32768.0 = sin(nAngDeg*2pi/360)

Parameters

i	า	n64Ang	Angle (in units of 1/64 degrees)	
---	---	--------	----------------------------------	--

Returns

Fixed-point sine result. Signed 16-bit; divide by 32768 to get the actual value.

7.2.2.21 void gslc_UnionRect (gslc_tsRect * pRect, gslc_tsRect rAddRect)

Expand a rect to include another rect.

• This routine can be useful to modify an invalidation region to include another modified element

Parameters

in	pRect	Initial rect region
in	rAddRect	Rectangle to add to the rect region

Returns

none

7.3 Graphics Primitive Functions

These routines cause immediate drawing to occur on the primary screen.

Functions

- void gslc_DrawSetPixel (gslc_tsGui *pGui, int16_t nX, int16_t nY, gslc_tsColor nCol)
 - Set a pixel on the active screen to the given color with lock.
- void gslc_DrawLine (gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, gslc_tsColor nCol)

 Draw an arbitrary line using Bresenham's algorithm.
- void gslc_DrawLineH (gslc_tsGui *pGui, int16_t nX, int16_t nY, uint16_t nW, gslc_tsColor nCol)
 - Draw a horizontal line.
- void gslc_DrawLineV (gslc_tsGui *pGui, int16_t nX, int16_t nY, uint16_t nH, gslc_tsColor nCol)
 - Draw a vertical line.
- void gslc_DrawLinePolar (gslc_tsGui *pGui, int16_t nX, int16_t nY, uint16_t nRadStart, uint16_t nRadEnd, int16_t n64Ang, gslc_tsColor nCol)
 - Draw a polar ray segment.
- void gslc DrawFrameRect (gslc tsGui *pGui, gslc tsRect rRect, gslc tsColor nCol)
 - Draw a framed rectangle.
- void gslc_DrawFrameRoundRect (gslc_tsGui *pGui, gslc_tsRect rRect, int16_t nRadius, gslc_tsColor nCol)
 - Draw a framed rounded rectangle.
- void gslc_DrawFillRect (gslc_tsGui *pGui, gslc_tsRect rRect, gslc_tsColor nCol)
 - Draw a filled rectangle.
- void gslc_DrawFillRoundRect (gslc_tsGui *pGui, gslc_tsRect rRect, int16_t nRadius, gslc_tsColor nCol)
 - Draw a filled rounded rectangle.
- void gslc_DrawFrameCircle (gslc_tsGui *pGui, int16_t nMidX, int16_t nMidY, uint16_t nRadius, gslc_tsColor nCol)
 - Draw a framed circle.
- void gslc_DrawFillCircle (gslc_tsGui *pGui, int16_t nMidX, int16_t nMidY, uint16_t nRadius, gslc_tsColor n←
 Col)
 - Draw a filled circle.
- void gslc_DrawFrameTriangle (gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, int16_t nX2, int16_t nY2, gslc_tsColor nCol)
 - Draw a framed triangle.
- void gslc_DrawFillTriangle (gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, int16_t nX2, int16_t nY2, gslc_tsColor nCol)
 - Draw a filled triangle.
- void gslc_DrawFrameQuad (gslc_tsGui *pGui, gslc_tsPt *psPt, gslc_tsColor nCol)
 - Draw a framed quadrilateral.
- void gslc_DrawFillQuad (gslc_tsGui *pGui, gslc_tsPt *psPt, gslc_tsColor nCol)
 - Draw a filled quadrilateral.
- void gslc_DrawFillGradSector (gslc_tsGui *pGui, int16_t nQuality, int16_t nMidX, int16_t nMidY, int16_t nAng
 Rad1, int16_t nRad2, gslc_tsColor cArcStart, gslc_tsColor cArcEnd, int16_t nAngSecStart, int16_t nAng
 SecEnd, int16_t nAngGradStart, int16_t nAngGradRange)
 - Draw a gradient filled sector of a circle with support for inner and outer radius.
- void gslc_DrawFillSector (gslc_tsGui *pGui, int16_t nQuality, int16_t nMidX, int16_t nMidY, int16_t nRad1, int16_t nRad2, gslc_tsColor cArc, int16_t nAngSecStart, int16_t nAngSecEnd)
 - Draw a flat filled sector of a circle with support for inner and outer radius.

7.3.1 Detailed Description

These routines cause immediate drawing to occur on the primary screen.

7.3.2 Function Documentation

7.3.2.1 void gslc_DrawFillCircle (gslc_tsGui * pGui, int16_t nMidX, int16_t nMidY, uint16_t nRadius, gslc_tsColor nCol)

Draw a filled circle.

Parameters

in	pGui	Pointer to GUI
in	nMidX	Center X coordinate
in	nMidY	Center Y coordinate
in	nRadius	Radius of circle
in	nCol	Color RGB value for the fill

Returns

none

7.3.2.2 void gslc_DrawFillGradSector (gslc_tsGui * pGui, int16_t nQuality, int16_t nMidX, int16_t nMidY, int16_t nRad1, int16_t nRad2, gslc_tsColor cArcStart, gslc_tsColor cArcEnd, int16_t nAngSecStart, int16_t nAngSecEnd, int16_t nAngGradStart, int16_t nAngGradRange)

Draw a gradient filled sector of a circle with support for inner and outer radius.

- · Can be used to create a ring or pie chart
- Note that the gradient fill is defined by both the color stops (cArcStart..cArcEnd) as well as a gradient angular range (nAngGradStart..nAngGradStart+nAngGradRange). This gradient angular range can be differeng from the drawing angular range (nAngSegStart..nAngSecEnd) to enable more advanced control styling / updates.

Parameters

in	pGui	Pointer to GUI
in	nQuality	Number of segments used to depict a full circle. The higher the value, the smoother the resulting arcs. A value of 72 provides 360/72=5 degrees per segment which is a reasonable compromise between smoothness and performance. Note that 360/nQuality should be an integer result, thus the allowable quality settings are: 360 (max quality), 180, 120, 90, 72, 60, 45, 40, 36 (low quality), etc.
in	nMidX	Midpoint X coordinate of circle
in	nMidY	Midpoint Y coordinate of circle
in	nRad1	Inner sector radius (0 for sector / pie, non-zero for ring)
in	nRad2	Outer sector radius. Delta from nRad1 defines ring thickness.
in	cArcStart	Start color for gradient fill (with angular range defined by nAngGradStart,nAngGradRange)

Parameters

in	cArcEnd	End color for gradient fill
in	nAngSecStart	Angle of start of sector drawing (0 at top), measured in degrees.
in	nAngSecEnd	Angle of end of sector drawing (0 at top), measured in degrees.
in	nAngGradStart	For gradient fill, defines the starting angle associated with the starting color (cArcStart)
in	nAngGradRange	For gradient fill, defines the angular range associated with the start-to-end color range (cArcStartcArcEnd)

Returns

none

7.3.2.3 void gslc_DrawFillQuad (gslc_tsGui * pGui, gslc_tsPt * psPt, gslc_tsColor nCol)

Draw a filled quadrilateral.

Parameters

	in	pGui	Pointer to GUI
	in	psPt	Pointer to array of 4 points
ſ	in	nCol	Color RGB value for the frame

Returns

true if success, false if error

7.3.2.4 void gslc_DrawFillRect (gslc_tsGui * pGui, gslc_tsRect rRect, gslc_tsColor nCol)

Draw a filled rectangle.

Parameters

in	pGui	Pointer to GUI
in	rRect	Rectangular region to fill
in	nCol	Color RGB value to fill

Returns

none

7.3.2.5 void gslc_DrawFillRoundRect (gslc_tsGui * pGui, gslc_tsRect rRect, int16_t nRadius, gslc_tsColor nCol)

Draw a filled rounded rectangle.

Parameters

in	pGui	Pointer to GUI
in	rRect	Rectangular region to fill
in	nRadius	Radius for the rounded corners
in	nCol	Color RGB value to fill

Returns

none

7.3.2.6 void gslc_DrawFillSector (gslc_tsGui * pGui, int16_t nQuality, int16_t nMidX, int16_t nMidX, int16_t nMidY, int16_t nRad1, int16_t nRad2, gslc_tsColor cArc, int16_t nAngSecStart, int16_t nAngSecEnd)

Draw a flat filled sector of a circle with support for inner and outer radius.

· Can be used to create a ring or pie chart

Parameters

in	pGui	Pointer to GUI	
in	nQuality	Number of segments used to depict a full circle. The higher the value, the smoother the resulting arcs. A value of 72 provides 360/72=5 degrees per segment which is a reasonable compromise between smoothness and performance.	
in	nMidX	Midpoint X coordinate of circle	
in	nMidY	Midpoint Y coordinate of circle	
in	nRad1	Inner sector radius (0 for sector / pie, non-zero for ring)	
in	nRad2	Outer sector radius. Delta from nRad1 defines ring thickness.	
in	cArc	Color for flat fill	
in	nAngSecStart	Angle of start of sector drawing (0 at top), measured in degrees.	
in	nAngSecEnd	Angle of end of sector drawing (0 at top), measured in degrees.	

Returns

none

7.3.2.7 void gslc_DrawFillTriangle (gslc_tsGui * pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, int16_t nX1, int16_t

Draw a filled triangle.

Parameters

in	pGui	Pointer to GUI
in	nX0	X Coordinate #1
in	nY0	Y Coordinate #1

Parameters

in	nX1	X Coordinate #2
in	nY1	Y Coordinate #2
in	nX2	X Coordinate #3
in	nY2	Y Coordinate #3
in	nCol	Color RGB value for the fill

Returns

true if success, false if error

7.3.2.8 void gslc_DrawFrameCircle (gslc_tsGui * pGui, int16_t nMidX, int16_t nMidY, uint16_t nRadius, gslc_tsColor nCol)

Draw a framed circle.

Parameters

in	pGui	Pointer to GUI
in	nMidX	Center X coordinate
in	nMidY	Center Y coordinate
in	nRadius	Radius of circle
in	nCol	Color RGB value for the frame

Returns

none

7.3.2.9 void gslc_DrawFrameQuad ($gslc_tsQui * pGui, gslc_tsPt * psPt, gslc_tsColor nCol$)

Draw a framed quadrilateral.

Parameters

in	pGui	Pointer to GUI
in	psPt	Pointer to array of 4 points
in	nCol	Color RGB value for the frame

Returns

true if success, false if error

7.3.2.10 void gslc_DrawFrameRect (gslc_tsGui * pGui, gslc_tsRect rRect, gslc_tsColor nCol)

Draw a framed rectangle.

Parameters

	in	pGui	Pointer to GUI
ĺ	in	rRect	Rectangular region to frame
ĺ	in	nCol	Color RGB value for the frame

Returns

none

 $7.3.2.11 \quad \text{void gslc_DrawFrameRoundRect (} \ \ \text{gslc_tsGui} * \textit{pGui}, \ \ \text{gslc_tsRect} \textit{ rRect}, \ \text{int16_t} \textit{ nRadius}, \ \ \text{gslc_tsColor} \textit{ nCol} \ \)$

Draw a framed rounded rectangle.

Parameters

in	pGui	Pointer to GUI
in	rRect	Rectangular region to frame
in	nRadius	Radius for the rounded corners
in	nCol	Color RGB value for the frame

Returns

none

7.3.2.12 void gslc_DrawFrameTriangle (gslc_tsGui * pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16

Draw a framed triangle.

Parameters

in	pGui	Pointer to GUI
in	nX0	X Coordinate #1
in	nY0	Y Coordinate #1
in	nX1	X Coordinate #2
in	nY1	Y Coordinate #2
in	nX2	X Coordinate #3
in	nY2	Y Coordinate #3
in	nCol	Color RGB value for the frame

Returns

true if success, false if error

7.3.2.13 void gslc_DrawLine (gslc_tsGui * pGui, int16_t nX0, int16_t nX1, int16_t nX1,

Draw an arbitrary line using Bresenham's algorithm.

Parameters

in	pGui	Pointer to GUI
in	nX0	X coordinate of line startpoint
in	nY0	Y coordinate of line startpoint
in	nX1	X coordinate of line endpoint
in	nY1	Y coordinate of line endpoint
in	nCol	Color RGB value for the line

Returns

none

7.3.2.14 void gslc_DrawLineH ($gslc_tsGui*pGui$, int16_t nX, int16_t nY, uint16_t nW, $gslc_tsColor nCol$)

Draw a horizontal line.

• Note that direction of line is in +ve X axis

Parameters

in	pGui	Pointer to GUI
in	nΧ	X coordinate of line startpoint
in	nΥ	Y coordinate of line startpoint
in	nW	Width of line (in +X direction)
in	nCol	Color RGB value for the line

Returns

none

7.3.2.15 void gslc_DrawLinePolar (gslc_tsGui * pGui, int16_t nX, int16_t nY, uint16_t nRadStart, uin

Draw a polar ray segment.

Parameters

in	pGui	Pointer to GUI	
in	nΧ	X coordinate of line startpoint	
in	nY	Y coordinate of line startpoint	
in	nRadStart	Starting radius of line	

Parameters

in	nRadEnd	Ending radius of line
in	n64Ang	Angle of ray (degrees * 64). 0 is up, +90*64 is to right From -180*64 to +180*64
in	nCol	Color RGB value for the line

Returns

none

7.3.2.16 void gslc_DrawLineV (gslc_tsGui * pGui, int16_t nX, int16_t nY, uint16_t nH, gslc_tsColor nCol)

Draw a vertical line.

• Note that direction of line is in +ve Y axis

Parameters

in	pGui	Pointer to GUI
in	nΧ	X coordinate of line startpoint
in	nΥ	Y coordinate of line startpoint
in	nΗ	Height of line (in +Y direction)
in	nCol	Color RGB value for the line

Returns

none

7.3.2.17 void gslc_DrawSetPixel ($gslc_tsGui * pGui$, int16_t nX, int16_t nY, $gslc_tsColor nCol$)

Set a pixel on the active screen to the given color with lock.

- Calls upon gslc_DrvDrawSetPixelRaw() but wraps with a surface lock lock
- If repeated access is needed, use gslc_DrvDrawSetPixelRaw() instead

Parameters

in	pGui	Pointer to GUI
in	nΧ	Pixel X coordinate to set
in	nΥ	Pixel Y coordinate to set
in	nCol	Color pixel value to assign

Returns

none

7.4 Font Functions

Functions that load fonts.

Functions

bool gslc_FontAdd (gslc_tsGui *pGui, int16_t nFontId, gslc_teFontRefType eFontRefType, const void *pv←
FontRef, uint16_t nFontSz)

Load a font into the local font cache and assign font ID (nFontId).

bool gslc_FontSet (gslc_tsGui *pGui, int16_t nFontId, gslc_teFontRefType eFontRefType, const void *pv←
FontRef, uint16_t nFontSz)

Load a font into the local font cache and store as font ID (nFontId)

gslc_tsFont * gslc_FontGet (gslc_tsGui *pGui, int16_t nFontId)

Fetch a font from its ID value.

• bool gslc_FontSetMode (gslc_tsGui *pGui, int16_t nFontId, gslc_teFontRefMode eFontMode)

Set the font operating mode.

7.4.1 Detailed Description

Functions that load fonts.

7.4.2 Function Documentation

7.4.2.1 bool gslc_FontAdd (gslc_tsGui * pGui, int16_t nFontId, gslc_teFontRefType eFontRefType, const void * pvFontRef, uint16_t nFontSz)

Load a font into the local font cache and assign font ID (nFontId).

- · Font is stored into next available internal array element
- NOTE: Use FontSet() instead

Parameters

in	pGui	Pointer to GUI	
in	nFontld	ID to use when referencing this font	
in	eFontRefType	Font reference type (eg. filename or pointer)	
in	pvFontRef	Reference pointer to identify the font. In the case of SDL mode, it is a filepath to the font	
	file. In the case of Arduino it is a pointer value to the font bitmap array (GFXFont)		
in	nFontSz	Typeface size to use (only used in SDL mode)	

Returns

true if load was successful, false otherwise

7.4 Font Functions 39

7.4.2.2 gslc_tsFont* gslc_FontGet (gslc_tsGui * pGui, int16_t nFontId)

Fetch a font from its ID value.

Parameters

in	pGui	Pointer to GUI
in	n⊷	ID value used to reference the font (supplied originally to gslc_FontAdd()
	FontId	

Returns

A pointer to the font structure or NULL if error

7.4.2.3 bool gslc_FontSet (gslc_tsGui * pGui, int16_t nFontId, gslc_teFontRefType eFontRefType, const void * pvFontRef, uint16_t nFontSz)

Load a font into the local font cache and store as font ID (nFontId)

- Font is stored into index nFontId, so nFontId must be from separate font enum (0-based).
- Example: enum { E_FONT_BTN, E_FONT_TXT, MAX_FONT };

Parameters

in	pGui	Pointer to GUI	
in	nFontId	ID to use when referencing this font	
in	eFontRefType	Font reference type (eg. filename or pointer)	
in	pvFontRef	Reference pointer to identify the font. In the case of SDL mode, it is a filepath to the font	
		file. In the case of Arduino it is a pointer value to the font bitmap array (GFXFont)	
in	nFontSz	Typeface size to use (only used in SDL mode)	

Returns

true if load was successful, false otherwise

 $7.4.2.4 \quad bool\ gslc_FontSetMode\ (\ gslc_tsGui*pGui,\ int16_t\ nFontId,\ gslc_teFontRefMode\ eFontMode\)$

Set the font operating mode.

Parameters

in	pGui	Pointer to GUI	
in	nFontId	ID value used to reference the font (supplied originally to gslc_FontAdd()	
in, out	in, out eFontMode Font mode to assign to this font		

Returns

true if success

7.5 Page Functions 41

7.5 Page Functions

Functions that operate at the page level.

Functions

int gslc_GetPageCur (gslc_tsGui *pGui)

Fetch the current page ID.

• void gslc_SetStackPage (gslc_tsGui *pGui, uint8_t nStackPos, int16_t nPageId)

Assign a page to the page stack.

• void gslc_SetStackState (gslc_tsGui *pGui, uint8_t nStackPos, bool bActive, bool bDoDraw)

Change the status of a page in a page stack.

void gslc_SetPageBase (gslc_tsGui *pGui, int16_t nPageId)

Assigns a page for the base layer in the page stack.

void gslc_SetPageCur (gslc_tsGui *pGui, int16_t nPageId)

Select a page for the current layer in the page stack.

void gslc_SetPageOverlay (gslc_tsGui *pGui, int16_t nPageId)

Select a page for the overlay layer in the page stack.

void gslc_PopupShow (gslc_tsGui *pGui, int16_t nPageId, bool bModal)

Show a popup dialog.

void gslc_PopupHide (gslc_tsGui *pGui)

Hides the currently active popup dialog.

void gslc_PageRedrawSet (gslc_tsGui *pGui, bool bRedraw)

Update the need-redraw status for the current page.

bool gslc_PageRedrawGet (gslc_tsGui *pGui)

Get the need-redraw status for the current page.

void gslc_PageAdd (gslc_tsGui *pGui, int16_t nPageId, gslc_tsElem *psElem, uint16_t nMaxElem, gslc_
tsElemRef *psElemRef, uint16_t nMaxElemRef)

Add a page to the GUI.

gslc_tsElemRef * gslc_PageFindElemById (gslc_tsGui *pGui, int16_t nPageId, int16_t nElemId)

Find an element in the GUI by its Page ID and Element ID.

7.5.1 Detailed Description

Functions that operate at the page level.

7.5.2 Function Documentation

7.5.2.1 int gslc_GetPageCur (gslc_tsGui * pGui)

Fetch the current page ID.

Parameters

in	pGui	Pointer to GUI

Returns

Page ID

7.5.2.2 void gslc_PageAdd (gslc_tsGui * pGui, int16_t nPageId, gslc_tsElem * psElem, uint16_t nMaxElem, gslc_tsElemRef * psElemRef, uint16_t nMaxElemRef)

Add a page to the GUI.

- · This call associates an element array with the collection within the page
- Once a page has been added to the GUI, elements can be added to the page by specifying the same page

Parameters

in	pGui	Pointer to GUI	
in	nPageId	Page ID to assign	
in	psElem	Internal element array storage to associate with the page	
in	nMaxElem	Maximum number of elements that can be added to the internal element array (ie. RAM))	
in	psElemRef	Internal element reference array storage to associate with the page. All elements, whether they are located in the internal element array or in external Flash (PROGMEM) storage, require an entry in the element reference array.	
in	nMaxElemRef	Maximum number of elements in the reference array. This is effectively the maximum number of elements that can appear on a page, irrespective of whether it is stored in RAM or Flash (PROGMEM).	

Returns

none

7.5.2.3 gslc_tsElemRef* gslc_PageFindElemByld (gslc_tsGui * pGui, int16_t nPageId, int16_t nElemId)

Find an element in the GUI by its Page ID and Element ID.

Parameters

in	pGui	Pointer to GUI
in	n⊷ Pageld	Page ID to search
in	n⊷ ElemId	Element ID to search

Returns

Ptr to an element or NULL if none found

7.5 Page Functions 43

7594	hool golo	Page Padrow Cat /	aolo	to Cuitas	nCui \
7.5.2.4	DOOI GSIC	PageRedrawGet (asic	ISGUI *	DGUI 1

Get the need-redraw status for the current page.

Parameters

in	pGui	Pointer to GUI
----	------	----------------

Returns

True if redraw required, false otherwise

7.5.2.5 void gslc_PageRedrawSet (gslc_tsGui * pGui, bool bRedraw)

Update the need-redraw status for the current page.

Parameters

in	pGui	Pointer to GUI
in	bRedraw	True if redraw required, false otherwise

Returns

none

7.5.2.6 void gslc_PopupHide (gslc_tsGui * pGui)

Hides the currently active popup dialog.

Parameters

in	pGui	Pointer to GUI

Returns

none

7.5.2.7 void gslc_PopupShow ($gslc_tsGui*pGui$, int16_t nPageId, bool bModal)

Show a popup dialog.

• Popup dialogs use the overlay layer in the page stack

Parameters

in	pGui	Pointer to GUI	
in	n⊷	Page ID to use as the popup dialog	
	Pageld		
in	bModal	If true, popup is modal (other layers won't accept touch). If false, popup is modeless (other	
		layers still accept touch)	

Returns

none

7.5.2.8 void gslc_SetPageBase (gslc_tsGui * pGui, int16_t nPageId)

Assigns a page for the base layer in the page stack.

Parameters

in	pGui	Pointer to GUI
in	n⊷	Page ID to select (or GSLC_PAGE_NONE to disable)
	Pageld	

Returns

none

7.5.2.9 void gslc_SetPageCur (gslc_tsGui * pGui, int16_t nPageId)

Select a page for the current layer in the page stack.

Parameters

in	pGui	Pointer to GUI
in	n⊷	Page ID to select
	Pageld	

Returns

none

7.5.2.10 void gslc_SetPageOverlay (gslc_tsGui * pGui, int16_t nPageId)

Select a page for the overlay layer in the page stack.

7.5 Page Functions 45

Parameters

in	pGui	Pointer to GUI
in	n⊷	Page ID to select (or GSLC_PAGE_NONE to disable)
	Pageld	

Returns

none

7.5.2.11 void gslc_SetStackPage (gslc_tsGui * pGui, uint8_t nStackPos, int16_t nPageld)

Assign a page to the page stack.

Parameters

in	pGui	Pointer to GUI
in	nStackPos	Position to update in the page stack (0GSLC_STACKMAX-1)
in	nPageId	Page ID to select as current

Returns

none

 $7.5.2.12 \quad \text{void gslc_SetStackState (} \quad \text{gslc_tsGui} * \textit{pGui}, \text{ uint8_t } \textit{nStackPos}, \text{ bool } \textit{bActive}, \text{ bool } \textit{bDoDraw} \text{)}$

Change the status of a page in a page stack.

Parameters

in	pGui	Pointer to GUI	
in	nStackPos	Position to update in the page stack (0GSLC_STACKMAX-1)	
in	bActive	Indicate if page should receive touch events	
in	bDoDraw	Indicate if page should continue to be redrawn. If pages in the stack are overlapping and an element in a lower layer continues to receive updates, then the element may "show through" the layers above it. In such cases where pages in the stack are overlapping and lower pages contain dynamically updating elements, it may be best to disable redraw while the overlapping page is visible (by setting bDoDraw to false).	


Returns

none

7.6 Element Functions

Functions that are used to create and manipulate elements.

Collaboration diagram for Element Functions:

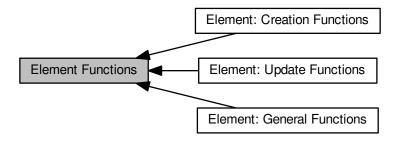

Modules

• Element: Creation Functions

Functions that create GUI elements.

• Element: General Functions

General-purpose functions that operate on Elements.

• Element: Update Functions

Functions that configure or modify an existing eleemnt.

7.6.1 Detailed Description

Functions that are used to create and manipulate elements.

7.7 Element: Creation Functions

Functions that create GUI elements.

Collaboration diagram for Element: Creation Functions:



Functions

 gslc_tsElemRef * gslc_ElemCreateTxt (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsRect rElem, char *pStrBuf, uint8_t nStrBufMax, int16_t nFontId)

Create a Text Element.

• gslc_tsElemRef * gslc_ElemCreateBtnTxt (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsRect rElem, char *pStrBuf, uint8 t nStrBufMax, int16 t nFontId, GSLC CB TOUCH cbTouch)

Create a textual Button Element.

• gslc_tsElemRef * gslc_ElemCreateBtnImg (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsRect rElem, gslc_tsImgRef sImgRef, gslc_tsImgRef sImgRefSel, GSLC_CB_TOUCH cbTouch)

Create a graphical Button Element.

gslc_tsElemRef * gslc_ElemCreateBox (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsRect r←
 Elem)

Create a Box Element.

gslc_tsElemRef * gslc_ElemCreateLine (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1)

Create a Line Element.

gslc_tsElemRef * gslc_ElemCreateImg (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsRect r
 Elem, gslc_tsImgRef sImgRef)

Create an image Element.

7.7.1 Detailed Description

Functions that create GUI elements.

7.7.2 Function Documentation

7.7.2.1 gslc_tsElemRef* gslc_ElemCreateBox (gslc_tsGui * pGui, int16_t nElemId, int16_t nPage, gslc_tsRect rElem

Create a Box Element.

· Draws a box with frame and fill

Parameters

in	pGui	Pointer to GUI	
in	n⊷	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)	
	ElemId		
in	nPage	Page ID to attach element to	
in	rElem	Rectangle coordinates defining box size	

Returns

Pointer to the Element reference or NULL if failure

7.7.2.2 gslc_tsElemRef* gslc_ElemCreateBtnlmg (gslc_tsGui * pGui, int16_t nElemId, int16_t nPage, gslc_tsRect rElem, gslc_tsImgRef sImgRef, gslc_tsImgRef sImgRefSel, GSLC_CB_TOUCH cbTouch)

Create a graphical Button Element.

- · Creates a clickable element that uses a BMP image with no frame or fill
- Transparency is supported by bitmap color (0xFF00FF)

Parameters

in	pGui	Pointer to GUI
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)
in	nPage	Page ID to attach element to
in	rElem	Rectangle coordinates defining image size
in	sImgRef	Image reference to load (unselected state)
in	sImgRefSel	Image reference to load (selected state)
in	cbTouch	Callback for touch events

Returns

Pointer to the Element reference or NULL if failure

7.7.2.3 gslc_tsElemRef* gslc_ElemCreateBtnTxt (gslc_tsGui * pGui, int16_t nElemId, int16_t nPage, gslc_tsRect rElem, char * pStrBuf, uint8_t nStrBufMax, int16_t nFontId, GSLC_CB_TOUCH cbTouch)

Create a textual Button Element.

· Creates a clickable element that has a textual label with frame and fill

in	pGui	Pointer to GUI	
in nElemId Element ID to assign (016383 or GSLC_ID_AUTO to autoge		Element ID to assign (016383 or GSLC_ID_AUTO to autogen)	

Parameters

in	nPage	Page ID to attach element to	
in	rElem	Rectangle coordinates defining text background size	
in	pStrBuf	String to copy into element	
in	nStrBufMax	Maximum length of string buffer (pStrBuf). Only applicable if GSLC_LOCAL_STR=0. Ignored if GSLC_LOCAL_STR=1.)	
in	nFontId	Font ID to use for text display	
in	cbTouch	Callback for touch events	

Returns

Pointer to the Element reference or NULL if failure

7.7.2.4 gslc_tsElemRef* gslc_ElemCreateImg (gslc_tsGui * pGui, int16_t nElemId, int16_t nPage, gslc_tsRect rElem, gslc_tsImgRef sImgRef)

Create an image Element.

· Draws an image

Parameters

in	pGui	Pointer to GUI	
in	n⊷	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)	
	ElemId	d	
in	nPage	Page ID to attach element to	
in	rElem	Rectangle coordinates defining box size	
in	sImgRef	Image reference to load	

Returns

Pointer to the Element reference or NULL if failure

7.7.2.5 gslc_tsElemRef* gslc_ElemCreateLine (gslc_tsGui * pGui, int16_t nElemId, int16_t nPage, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1)

Create a Line Element.

· Draws a line with fill color

in	pGui	Pointer to GUI	
in	n⊷	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)	
	ElemId		

Parameters

in	nPage	Page ID to attach element to	
in	nX0	X coordinate of line startpoint	
in	nY0	Y coordinate of line startpoint	
in	nX1	X coordinate of line endpoint	
in	nY1	Y coordinate of line endpoint	

Returns

Pointer to the Element reference or NULL if failure

7.7.2.6 gslc_tsElemRef* gslc_ElemCreateTxt (gslc_tsGui * pGui, int16_t nElemId, int16_t nPage, gslc_tsRect rElem, char * pStrBuf, uint8_t nStrBufMax, int16_t nFontId)

Create a Text Element.

· Draws a text string with filled background

Parameters

in	pGui	Pointer to GUI	
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)	
in	nPage	Page ID to attach element to	
in	rElem	Rectangle coordinates defining text background size	
in	pStrBuf	String to copy into element	
in	nStrBufMax	Maximum length of string buffer (pStrBuf). Only applicable if GSLC_LOCAL_STR=0.	
		Ignored if GSLC_LOCAL_STR=1.)	
in	nFontId	Font ID to use for text display	

Returns

Pointer to the Element reference or NULL if failure

7.8 Element: General Functions

General-purpose functions that operate on Elements.

Collaboration diagram for Element: General Functions:



Functions

• int gslc_ElemGetId (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Get an Element ID from an element structure.

7.8.1 Detailed Description

General-purpose functions that operate on Elements.

7.8.2 Function Documentation

7.8.2.1 int gslc_ElemGetId ($gslc_tsGui*pGui, gslc_tsElemRef*pElemRef$)

Get an Element ID from an element structure.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference structure

Returns

ID of element or GSLC_ID_NONE if not found

7.9 Element: Update Functions

Functions that configure or modify an existing eleemnt.

Collaboration diagram for Element: Update Functions:



Functions

 $\bullet \ \ void \ gslc_ElemSetFillEn \ (gslc_tsGui \ *pGui, \ gslc_tsElemRef \ *pElemRef, \ bool \ bFillEn)$

Set the fill state for an Element.

void gslc_ElemSetFrameEn (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bFrameEn)

Set the frame state for an Element.

void gslc_ElemSetRoundEn (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bRoundEn)

Set the rounded frame/fill state for an Element.

void gslc_ElemSetCol (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor colFrame, gslc_tsColor colFill, gslc_tsColor colFillGlow)

Update the common color selection for an Element.

void gslc_ElemSetGlowCol (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor colFrameGlow, gslc_tsColor colFillGlow, gslc_tsColor colTxtGlow)

Update the common color selection for glowing state of an Element.

void gslc_ElemSetGroup (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int nGroupId)

Set the group ID for an element.

• int gslc_ElemGetGroup (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Get the group ID for an element.

void gslc_ElemSetTxtAlign (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, unsigned nAlign)

Set the alignment of a textual element (horizontal and vertical)

• void gslc_ElemSetTxtMargin (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, unsigned nMargin)

Set the margin around of a textual element.

void gslc_ElemSetTxtMarginXY (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int8_t nMarginX, int8_t n
 MarginY)

Set the margin around of a textual element (X & Y offsets can be different)

• void gslc_ElemSetTxtStr (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, const char *pStr)

Update the text string associated with an Element.

char * gslc_ElemGetTxtStr (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Fetch the current text string associated with an Element.

void gslc ElemSetTxtCol (gslc tsGui *pGui, gslc tsElemRef *pElemRef, gslc tsColor colVal)

Update the text string color associated with an Element ID.

void gslc_ElemSetTxtMem (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_teTxtFlags eFlags)

Update the text string location in memory.

void gslc_ElemSetTxtEnc (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_teTxtFlags eFlags)

Update the text string encoding mode.

void gslc_ElemUpdateFont (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int nFontId)

Update the Font selected for an Element's text.

void gslc_ElemSetRedraw (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_teRedrawType eRedraw)
 Update the need-redraw status for an element.

gslc_teRedrawType gslc_ElemGetRedraw (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Get the need-redraw status for an element.

• void gslc_ElemSetGlowEn (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bGlowEn)

Update the glowing enable for an element.

 $\bullet \ \ void \ gslc_ElemSetClickEn \ (gslc_tsGui \ *pGui, \ gslc_tsElemRef \ *pElemRef, \ bool \ bClickEn)$

Update the click enable for an element.

• void gslc_ElemSetTouchFunc (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, GSLC_CB_TOUCH funcCb)

Update the touch function callback for an element.

void gslc_ElemSetStyleFrom (gslc_tsGui *pGui, gslc_tsElemRef *pElemRefSrc, gslc_tsElemRef *pElem←
 RefDest)

Copy style settings from one element to another.

bool gslc_ElemGetGlowEn (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Get the glowing enable for an element.

void gslc ElemSetGlow (gslc tsGui *pGui, gslc tsElemRef *pElemRef, bool bGlowing)

Update the glowing indicator for an element.

bool gslc_ElemGetGlow (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Get the glowing indicator for an element.

void gslc_ElemSetVisible (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bVisible)

Update the visibility status for an element.

bool gslc_ElemGetVisible (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Get the visibility status for an element.

bool gslc_ElemGetOnScreen (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Determine whether an element is visible on the screen.

• void gslc_ElemSetDrawFunc (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, GSLC_CB_DRAW funcCb)

Assign the drawing callback function for an element.

• void gslc_ElemSetTickFunc (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, GSLC_CB_TICK funcCb)

Assign the tick callback function for an element.

bool gslc_ElemOwnsCoord (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nX, int16_t nY, bool b←
 OnlyClickEn)

Determine if a coordinate is inside of an element.

7.9.1 Detailed Description

Functions that configure or modify an existing eleemnt.

7.9.2 Function Documentation

7.9.2.1 bool gslc_ElemGetGlow (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef)

Get the glowing indicator for an element.

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference

Returns

True if element is glowing

7.9.2.2 bool gslc_ElemGetGlowEn (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef)

Get the glowing enable for an element.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference

Returns

True if element supports glowing

7.9.2.3 int gslc_ElemGetGroup (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef)

Get the group ID for an element.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference

Returns

Group ID or GSLC GROUP ID NONE if unassigned

7.9.2.4 bool gslc_ElemGetOnScreen ($gslc_tsGui*pGui, gslc_tsElemRef*pElemRef$)

Determine whether an element is visible on the screen.

• This function takes into account both the element's "Visible" state as well as whether the element's associated page is active in the page stack.

j	in	pGui	Pointer to GUI
j	in <i>pElemRef</i>		Pointer to Element reference

Returns

True if element appears on the screen, false otherwise

7.9.2.5 gslc_teRedrawType gslc_ElemGetRedraw(gslc_tsGui * pGui, gslc_tsElemRef * pElemRef)

Get the need-redraw status for an element.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference

Returns

Redraw status

7.9.2.6 char* gslc_ElemGetTxtStr ($gslc_tsGui*pGui, gslc_tsElemRef*pElemRef$)

Fetch the current text string associated with an Element.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference

Returns

Pointer to character array string

7.9.2.7 bool gslc_ElemGetVisible ($gslc_tsGui*pGui, gslc_tsElemRef*pElemRef$)

Get the visibility status for an element.

• Note that the visibility state is independent of whether or not the page associated with the element is actively displayed.

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference

Returns

True if element is marked as visible, false if hidden

7.9.2.8 bool gslc_ElemOwnsCoord ($gslc_tsGui*pGui, gslc_tsElemRef*pElemRef, int16_t nX, int16_t nY, bool bOnlyClickEn)$

Determine if a coordinate is inside of an element.

• This routine is useful in determining if a touch coordinate is inside of a button.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Element reference used for boundary test
in	nX	X coordinate to test
in	nΥ	Y coordinate to test
in	bOnlyClickEn	Only output true if element was also marked as "clickable" (eg. bClickEn=true)

Returns

true if inside element, false otherwise

7.9.2.9 void gslc_ElemSetClickEn (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, bool bClickEn)

Update the click enable for an element.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	bClickEn	True if element should support click events

Returns

none

7.9.2.10 void gslc_ElemSetCol (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, gslc_tsColor colFrame, gslc_tsColor colFill, gslc_tsColor colFillGlow)

Update the common color selection for an Element.

ĺ	in	pGui	Pointer to GUI
۱	Т11	pGui	Folitiei to Goi

Parameters

in	pElemRef	Pointer to Element reference
in	colFrame	Color for the frame
in	colFill	Color for the fill
in	colFillGlow	Color for the fill when glowing

Returns

none

7.9.2.11 void gslc_ElemSetDrawFunc (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, GSLC_CB_DRAW funcCb)

Assign the drawing callback function for an element.

• This allows the user to override the default rendering for an element, enabling the creation of a custom element

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	funcCb	Function pointer to drawing routine (or NULL for default))

Returns

none

7.9.2.12 void gslc_ElemSetFillEn (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, bool bFillEn)

Set the fill state for an Element.

- If not filled, the element can support transparency against an arbitrary background, but this can require full screen redraws if the element is updated.
- If filled, the background fill color can be changed by gslc_ElemSetCol()

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	bFillEn	True if filled, false otherwise

Returns

none

7.9.2.13 void gslc_ElemSetFrameEn ($gslc_tsGui*pGui, gslc_tsElemRef*pElemRef, bool bFrameEn$)

Set the frame state for an Element.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	bFrameEn	True if framed, false otherwise

Returns

none

7.9.2.14 void gslc_ElemSetGlow ($gslc_tsGui*pGui, gslc_tsElemRef*pElemRef*, bool bGlowing$)

Update the glowing indicator for an element.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	bGlowing	True if element is glowing

Returns

none

7.9.2.15 void gslc_ElemSetGlowCol (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, gslc_tsColor colFrameGlow, gslc_tsColor colTxtGlow)

Update the common color selection for glowing state of an Element.

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	colFrameGlow	Color for the frame when glowing
in	colFillGlow	Color for the fill when glowing
in	colTxtGlow	Color for the text when glowing

Returns

none

7.9.2.16 void gslc_ElemSetGlowEn ($gslc_tsGui*pGui, gslc_tsElemRef*pElemRef, bool bGlowEn$)

Update the glowing enable for an element.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	bGlowEn	True if element should support glowing

Returns

none

7.9.2.17 void gslc_ElemSetGroup ($gslc_tsGui * pGui$, $gslc_tsElemRef * pElemRef$, int nGroupId)

Set the group ID for an element.

· Typically used to associate radio button elements together

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nGroupId	Group ID to assign

Returns

none

7.9.2.18 void gslc_ElemSetRedraw ($gslc_tsGui*pGui, gslc_tsElemRef*pElemRef, gslc_teRedrawType eRedraw$)

Update the need-redraw status for an element.

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	eRedraw	Redraw state to set

Returns

none

7.9.2.19 void gslc_ElemSetRoundEn (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, bool bRoundEn)

Set the rounded frame/fill state for an Element.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	bRoundEn	True if rounded, false otherwise

Returns

none

7.9.2.20 void gslc_ElemSetStyleFrom (gslc_tsGui * pGui, gslc_tsElemRef * pElemRefDest)

Copy style settings from one element to another.

Parameters

in	pGui	Pointer to GUI
in	pElemRefSrc	Pointer to source Element reference
in	pElemRefDest	Pointer to destination Element reference

Returns

none

7.9.2.21 void gslc_ElemSetTickFunc ($gslc_tsGui*pGui*gslc_tsElemRef*pElemRef*, GSLC_CB_TICK funcCb$)

Assign the tick callback function for an element.

This allows the user to provide background updates to an element triggered by the main loop call to gslc_←
Update()

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	funcCb	Function pointer to tick routine (or NULL for none))

Returns

none

7.9.2.22 void gslc_ElemSetTouchFunc ($gslc_tsGui*pGui, gslc_tsElemRef*pElemRef, GSLC_CB_TOUCH funcCb$)

Update the touch function callback for an element.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	funcCb	Pointer to the touch callback function

Returns

none

7.9.2.23 void gslc_ElemSetTxtAlign ($gslc_tsGui*pGui, gslc_tsElemRef*pElemRef, unsigned nAlign$)

Set the alignment of a textual element (horizontal and vertical)

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nAlign	Alignment to specify:
		GSLC_ALIGN_TOP_LEFT
		GSLC_ALIGN_TOP_MID
		GSLC_ALIGN_TOP_RIGHT
		GSLC_ALIGN_MID_LEFT
		• GSLC_ALIGN_MID_MID
		• GSLC_ALIGN_MID_RIGHT
		• GSLC_ALIGN_BOT_LEFT
		• GSLC_ALIGN_BOT_MID
		• GSLC_ALIGN_BOT_RIGHT

Returns

none

7.9.2.24 void gslc_ElemSetTxtCol ($gslc_tsGui*pGui*gslc_tsElemRef*pElemRef*, <math>gslc_tsColor*colVal$)

Update the text string color associated with an Element ID.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	colVal	RGB color to change to

Returns

none

7.9.2.25 void gslc_ElemSetTxtEnc ($gslc_tsGui*pGui, gslc_tsElemRef*pElemRef, gslc_teTxtFlags*eFlags*)$

Update the text string encoding mode.

• This function can be used to indicate that the element's text string is encoded in UTF-8, which supports extended / foreign character maps

Parameters

ir	pGui Pointer to GUI	
ir	pElemRef	Pointer to Element reference
ir	eFlags	Flags associated with text encoding (GSLC_TXT_ENC_*)

Returns

none

7.9.2.26 void gslc_ElemSetTxtMargin ($gslc_tsGui*pGui, gslc_tsElemRef*pElemRef, unsigned nMargin$)

Set the margin around of a textual element.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nMargin	Number of pixels gap to leave surrounding text

Returns

none

7.9.2.27 void gslc_ElemSetTxtMarginXY (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, int8_t nMarginX, int8_t nMarginY)

Set the margin around of a textual element (X & Y offsets can be different)

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nMarginX	Number of pixels gap to offset text horizontally
in	nMarginY	Number of pixels gap to offset text vertically

Returns

none

7.9.2.28 void gslc_ElemSetTxtMem (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, gslc_teTxtFlags eFlags)

Update the text string location in memory.

Parameters

in	pGui Pointer to GUI	
in	in pElemRef Pointer to Element reference	
in	eFlags	Flags associated with text memory location (GSLC_TXT_MEM_*)

Returns

none

7.9.2.29 void gslc_ElemSetTxtStr ($gslc_tsGui*pGui, gslc_tsElemRef*pElemRef, const char*pStr$)

Update the text string associated with an Element.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	pStr	String to copy into element

Returns

none

7.9.2.30 void gslc_ElemSetVisible (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, bool bVisible)

Update the visibility status for an element.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	bVisible	True if element is shown, false if hidden

Returns

none

7.9.2.31 void gslc_ElemUpdateFont ($gslc_tsGui*pGui, gslc_tsElemRef*pElemRef, int nFontId$)

Update the Font selected for an Element's text.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nFontId	Font ID to select

Returns

none

7.10 Touchscreen Functions

Functions that configure and respond to a touch device.

Macros

• #define TOUCH ROTATION DATA

Additional definitions for Touch Handling These macros define the transforms used in remapping the touchscreen inputs on the basis of the GUI nRotation setting.

#define TOUCH ROTATION DATA

Additional definitions for Touch Handling These macros define the transforms used in remapping the touchscreen inputs on the basis of the GUI nRotation setting.

- #define TOUCH_ROTATION_SWAPXY(rotation)
- #define TOUCH ROTATION SWAPXY(rotation)
- #define TOUCH ROTATION FLIPX(rotation)
- #define TOUCH_ROTATION_FLIPX(rotation)
- #define TOUCH_ROTATION_FLIPY(rotation)
- #define TOUCH_ROTATION_FLIPY(rotation)

Functions

• bool gslc_InitTouch (gslc_tsGui *pGui, const char *acDev)

Initialize the touchscreen device driver.

• bool gslc_GetTouch (gslc_tsGui *pGui, int16_t *pnX, int16_t *pnY, uint16_t *pnPress, gslc_teInputRawEvent *peInputEvent, int16_t *pnInputVal)

Initialize the touchscreen device driver.

void gslc SetTouchRemapEn (gslc tsGui *pGui, bool bEn)

Configure touchscreen remapping.

void gslc_SetTouchRemapCal (gslc_tsGui *pGui, uint16_t nXMin, uint16_t nXMax, uint16_t nYMin, uint16_t nYMax)

Configure touchscreen calibration values.

void gslc SetTouchRemapYX (gslc tsGui *pGui, bool bSwap)

Configure touchscreen XY swap.

7.10.1 Detailed Description

Functions that configure and respond to a touch device.

7.10.2 Macro Definition Documentation

7.10.2.1 #define TOUCH_ROTATION_DATA

Additional definitions for Touch Handling These macros define the transforms used in remapping the touchscreen inputs on the basis of the GUI nRotation setting.

7.10.2.2 #define TOUCH_ROTATION_DATA

Additional definitions for Touch Handling These macros define the transforms used in remapping the touchscreen inputs on the basis of the GUI nRotation setting.

- 7.10.2.3 #define TOUCH_ROTATION_FLIPX(rotation)
- 7.10.2.4 #define TOUCH_ROTATION_FLIPX(rotation)
- 7.10.2.5 #define TOUCH_ROTATION_FLIPY(rotation)
- 7.10.2.6 #define TOUCH_ROTATION_FLIPY(rotation)
- 7.10.2.7 #define TOUCH_ROTATION_SWAPXY(rotation)
- 7.10.2.8 #define TOUCH_ROTATION_SWAPXY(rotation)
- 7.10.3 Function Documentation
- 7.10.3.1 bool gslc_GetTouch ($gslc_tsGui * pGui$, $int16_t * pnX$, $int16_t * pnY$, $uint16_t * pnPress$, $gslc_teInputRawEvent * peInputEvent$, $int16_t * pnInputVal$)

Initialize the touchscreen device driver.

Parameters

in	pGui	Pointer to GUI
out	pnX	Ptr to int to contain latest touch X coordinate
out	pnY	Ptr to int to contain latest touch Y coordinate
out	pnPress	Ptr to int to contain latest touch pressure value
out	peInputEvent	Indication of event type
out	pnInputVal	Additional data for event type

Returns

true if touch event, false otherwise

7.10.3.2 bool gslc_lnitTouch ($gslc_tsGui * pGui$, const char * acDev)

Initialize the touchscreen device driver.

in	pGui	Pointer to GUI
in	acDev	Device path to touchscreen (or "" if not applicable)) eg. "/dev/input/touchscreen"

Returns

true if successful

7.10.3.3 void gslc_SetTouchRemapCal (gslc_tsGui * pGui, uint16_t nXMin, uint16_t nXMax, uint16_t nYMin, uint16_t nYMax)

Configure touchscreen calibration values.

· Only used if calibration remapping has been enabled

Parameters

in	pGui	Pointer to GUI
in	nXMin	Resistive touchscreen X_MIN calibration value
in	nXMax	Resistive touchscreen X_MAX calibration value
in	nYMin	Resistive touchscreen Y_MIN calibration value
in	nYMax	Resistive touchscreen Y_MAX calibration value

Returns

none

7.10.3.4 void gslc_SetTouchRemapEn ($gslc_tsGui*pGui$, bool bEn)

Configure touchscreen remapping.

Parameters

in	pGui	Pointer to GUI
in	bEn	Enable touchscreen remapping?

Returns

none

7.10.3.5 void gslc_SetTouchRemapYX (gslc_tsGui * pGui, bool bSwap)

Configure touchscreen XY swap.

i	n	pGui	Pointer to GUI
i	n	bSwap	Enable touchscreen XY swap

Returns

none

7.11 Input Mapping Functions

Functions that handle GPIO / pin and keyboard input.

Functions

- void gslc_SetPinPollFunc (gslc_tsGui *pGui, GSLC_CB_PIN_POLL pfunc)
- void gslc InitInputMap (gslc tsGui *pGui, gslc tsInputMap *asInputMap, uint8 t nInputMapMax)

7.11.1 Detailed Description

Functions that handle GPIO / pin and keyboard input.

7.11.2 Function Documentation

7.11.2.1 void gslc_InitInputMap (gslc_tsGui * pGui, gslc_tsInputMap * asInputMap, uint8_t nInputMapMax)

Todo Doc. This API is experimental and subject to change

7.11.2.2 void gslc_InputMapAdd (gslc_tsGui * pGui, gslc_teInputRawEvent eInputEvent, int16_t nInputVal, gslc_teAction eAction, int16_t nActionVal)

Todo Doc. This API is experimental and subject to change

7.11.2.3 void gslc_SetPinPollFunc (gslc_tsGui * pGui, GSLC_CB_PIN_POLL pfunc)

Todo Doc. This API is experimental and subject to change

7.12 General Purpose Macros

Macros that are used throughout the GUI for debug.

Macros

```
    #define GSLC_DEBUG_PRINT(sFmt, ...)
        Macro to enable optional debug output.
    #define GSLC_DEBUG2_PRINT(sFmt, ...)
    #define GSLC_DEBUG_PRINT_CONST(sFmt, ...)
```

• #define GSLC_DEBUG2_PRINT_CONST(sFmt, ...)

7.12.1 Detailed Description

Macros that are used throughout the GUI for debug.

7.12.2 Macro Definition Documentation

```
7.12.2.1 #define GSLC_DEBUG2_PRINT( sFmt, ... )

7.12.2.2 #define GSLC_DEBUG2_PRINT_CONST( sFmt, ... )

7.12.2.3 #define GSLC_DEBUG_PRINT( sFmt, ... )
```

Macro to enable optional debug output.

- Supports printf formatting via gslc_DebugPrintf()
- · Supports storing the format string in PROGMEM
- Note that at least one variable argument must be provided to the macro after the format string. This is a limitation of the macro definition. If no parameters are needed, then simply pass 0. For example: GSLC_D← EBUG_PRINT("Loaded OK",0);

```
in sFmt Format string for debug message
```

```
7.12.2.4 #define GSLC_DEBUG_PRINT_CONST( sFmt, ... )
```

7.13 Flash-based Element Macros

Macros that represent element creation routines based in FLASH memory.

Macros

• #define gslc_ElemCreateTxt_P(pGui, nElemId, nPage, nX, nY, nW, nH, strTxt, pFont, colTxt, colFrame, col ← Fill, nAlignTxt, bFrameEn, bFillEn)

Create a read-only text element.

• #define gslc_ElemCreateTxt_P_R(pGui, nElemId, nPage, nX, nY, nW, nH, strTxt, strLength, pFont, colTxt, colFrame, colFill, nAlignTxt, bFrameEn, bFillEn)

Create a read-write text element (element in Flash, string in RAM)

• #define gslc_ElemCreateBox_P(pGui, nElemId, nPage, nX, nY, nW, nH, colFrame, colFill, bFrameEn, bFillEn, pfuncXDraw, pfuncXTick)

Create a read-only box element.

- $\bullet \ \ \text{\#define } \underline{\text{gslc_ElemCreateLine_P(pGui, nElemId, nPage, nX0, nY0, nX1, nY1, colFill)}\\$
 - Create a read-only line element.
- #define gslc_ElemCreateBtnTxt_P(pGui, nElemId, nPage, nX, nY, nW, nH, strTxt, pFont, colTxt, colFrame, colFill, colFrameGlow, colFillGlow, nAlignTxt, bFrameEn, bFillEn, callFunc, extraData)

Create a text button element.

7.13.1 Detailed Description

Macros that represent element creation routines based in FLASH memory.

7.13.2 Macro Definition Documentation

7.13.2.1 #define gslc_ElemCreateBox_P(pGui, nElemId, nPage, nX, nY, nW, nH, colFrame, colFill, bFrameEn, bFillEn, pfuncXDraw, pfuncXTick)

Create a read-only box element.

in	pGui	Pointer to GUI
in	nElemId	Unique element ID to assign
in	nPage	Page ID to attach element to
in	nΧ	X coordinate of element
in	nΥ	Y coordinate of element
in	nW	Width of element
in	nH	Height of element
in	colFrame	Color for the frame
in	colFill	Color for the fill
in	bFrameEn	True if framed, false otherwise
in	bFillEn	True if filled, false otherwise
in	pfuncXDraw	Pointer to custom draw callback (or NULL if default)
in	pfuncXTick	Pointer to custom tick callback (or NULL if default)

7.13.2.2 #define gslc_ElemCreateBtnTxt_P(pGui, nElemId, nPage, nX, nY, nW, nH, strTxt, pFont, colTxt, colFrame, colFill, colFrameGlow, colFillGlow, nAlignTxt, bFrameEn, bFillEn, callFunc, extraData)

Create a text button element.

Parameters

in	pGui	Pointer to GUI
in	nElemId	Unique element ID to assign
in	nPage	Page ID to attach element to
in	nX	X coordinate of element
in	nY	Y coordinate of element
in	nW	Width of element
in	nH	Height of element
in	strTxt	Text string to display
in	pFont	Pointer to font resource
in	colTxt	Color for the text
in	colFrame	Color for the frame
in	colFill	Color for the fill
in	colFrameGlow	Color for the frame when glowing
in	colFillGlow	Color for the fill when glowing
in	nAlignTxt	Text alignment
in	bFrameEn	True if framed, false otherwise
in	bFillEn	True if filled, false otherwise
in	callFunc	Callback function for button press
in	extraData	Ptr to extended data structure

7.13.2.3 #define gslc_ElemCreateLine_P(pGui, nElemId, nPage, nX0, nY0, nX1, nY1, colFill)

Create a read-only line element.

Parameters

in	pGui	Pointer to GUI
in	n⇔	Unique element ID to assign
	ElemId	
in	nPage	Page ID to attach element to
in	nX0	X coordinate of line start
in	nY0	Y coordinate of line start
in	nX1	X coordinate of line end
in	nY1	Y coordinate of line end
in	colFill	Color for the line

7.13.2.4 #define gslc_ElemCreateTxt_P(pGui, nElemId, nPage, nX, nY, nW, nH, strTxt, pFont, colTxt, colFrame, colFill, nAlignTxt, bFrameEn, bFillEn)

Create a read-only text element.

Parameters

in	pGui	Pointer to GUI
in	nElemId	Unique element ID to assign
in	nPage	Page ID to attach element to
in	nΧ	X coordinate of element
in	nΥ	Y coordinate of element
in	nW	Width of element
in	nH	Height of element
in	strTxt	Text string to display
in	pFont	Pointer to font resource
in	colTxt	Color for the text
in	colFrame	Color for the frame
in	colFill	Color for the fill
in	nAlignTxt	Text alignment
in	bFrameEn	True if framed, false otherwise
in	bFillEn	True if filled, false otherwise

7.13.2.5 #define gslc_ElemCreateTxt_P_R(pGui, nElemId, nPage, nX, nY, nW, nH, strTxt, strLength, pFont, colTxt, colFrame, colFill, nAlignTxt, bFrameEn, bFillEn)

Create a read-write text element (element in Flash, string in RAM)


in	pGui	Pointer to GUI
in	nElemId	Unique element ID to assign
in	nPage	Page ID to attach element to
in	nΧ	X coordinate of element
in	nΥ	Y coordinate of element
in	nW	Width of element
in	nΗ	Height of element
in	strTxt	Text string to display
in	strLength	Length of text string
in	pFont	Pointer to font resource
in	colTxt	Color for the text
in	colFrame	Color for the frame
in	colFill	Color for the fill
in	nAlignTxt	Text alignment
in	bFrameEn	True if framed, false otherwise
in	bFillEn	True if filled, false otherwise

7.14 Internal Functions 75

7.14 Internal Functions

These functions are internal to the GUIslice implementation and are not intended to be called by user code and subject to change even in minor releases.

Collaboration diagram for Internal Functions:

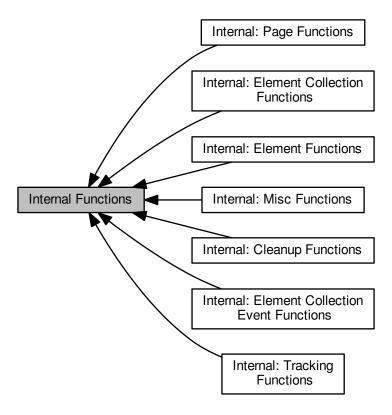

Modules

- Internal: Misc Functions
- · Internal: Element Functions
- Internal: Page Functions
- Internal: Element Collection Functions
- Internal: Element Collection Event Functions
- Internal: Tracking Functions
- Internal: Cleanup Functions

Variables

- int16_t gslc_tsRect::x
 - X coordinate of corner.
- int16_t gslc_tsRect::y

Y coordinate of corner.

uint16_t gslc_tsRect::w

Width of region.

• uint16_t gslc_tsRect::h

Height of region.

int16_t gslc_tsPt::x

X coordinate.

int16_t gslc_tsPt::y

Y coordinate.

uint8_t gslc_tsColor::r

RGB red value.

• uint8_t gslc_tsColor::g

RGB green value.

uint8_t gslc_tsColor::b

RGB blue value.

• gslc_teEventType gslc_tsEvent::eType

Event type.

• uint8_t gslc_tsEvent::nSubType

Event sub-type.

void * gslc tsEvent::pvScope

Event target scope (eg. Page, Collection, Event)

void * gslc_tsEvent::pvData

Generic data pointer for event.

• gslc_teTouch gslc_tsEventTouch::eTouch

Touch state.

int16_t gslc_tsEventTouch::nX

Touch X coordinate (or param1)

int16_t gslc_tsEventTouch::nY

Touch Y coordinate (or param2)

· int16 t gslc tsFont::nld

Font ID specified by user.

gslc_teFontRefType gslc_tsFont::eFontRefType

Font reference type.

• gslc_teFontRefMode gslc_tsFont::eFontRefMode

Font reference mode.

const void * gslc_tsFont::pvFont

Void ptr to the font reference (type defined by driver)

• uint16_t gslc_tsFont::nSize

Font size.

const unsigned char * gslc_tslmgRef::plmgBuf

Pointer to input image buffer in memory [RAM,FLASH].

• const char * gslc_tslmgRef::pFname

Pathname to input image file [FILE,SD].

gslc_telmgRefFlags gslc_tslmgRef::elmgFlags

Image reference flags.

void * gslc_tslmgRef::pvlmgRaw

Ptr to raw output image data (for pre-loaded images)

gslc_tsElem * gslc_tsElemRef::pElem

Pointer to element in memory [RAM,FLASH].

• gslc_teElemRefFlags gslc_tsElemRef::eElemFlags

Element reference flags.

7.14 Internal Functions 77

int16_t gslc_tsElem::nld

Element ID specified by user.

• uint8 t gslc tsElem::nFeatures

Element feature vector (appearance/behavior))

int16_t gslc_tsElem::nType

Element type enumeration.

• gslc_tsRect gslc_tsElem::rElem

Rect region containing element.

int16_t gslc_tsElem::nGroup

Group ID that the element belongs to.

gslc_tsColor gslc_tsElem::colElemFrame

Color for frame.

gslc_tsColor gslc_tsElem::colElemFill

Color for background fill.

gslc_tsColor gslc_tsElem::colElemFrameGlow

Color to use for frame when glowing.

gslc_tsColor gslc_tsElem::colElemFillGlow

Color to use for fill when glowing.

• gslc_tsImgRef gslc_tsElem::sImgRefNorm

Image reference to draw (normal)

gslc_tsImgRef gslc_tsElem::sImgRefGlow

Image reference to draw (glowing)

gslc_tsElemRef * gslc_tsElem::pElemRefParent

Parent element reference.

· char * gslc_tsElem::pStrBuf

Ptr to text string buffer to overlay.

uint8_t gslc_tsElem::nStrBufMax

Size of string buffer.

gslc_teTxtFlags gslc_tsElem::eTxtFlags

Flags associated with text buffer.

gslc_tsColor gslc_tsElem::colElemText

Color of overlay text.

• gslc_tsColor gslc_tsElem::colElemTextGlow

Color of overlay text when glowing.

• int8_t gslc_tsElem::eTxtAlign

Alignment of overlay text.

int8_t gslc_tsElem::nTxtMarginX

Margin of overlay text within rect region (x offset)

int8_t gslc_tsElem::nTxtMarginY

Margin of overlay text within rect region (y offset)

gslc tsFont * gslc tsElem::pTxtFont

Ptr to Font for overlay text.

void * gslc_tsElem::pXData

Ptr to extended data structure.

GSLC CB EVENT gslc tsElem::pfuncXEvent

UNUSED: Callback func ptr for event tree (draw,touch,tick)

GSLC_CB_DRAW gslc_tsElem::pfuncXDraw

Callback func ptr for custom drawing.

GSLC CB TOUCH gslc tsElem::pfuncXTouch

Callback func ptr for touch.

• GSLC_CB_TICK gslc_tsElem::pfuncXTick

Callback func ptr for timer/main loop tick.

gslc_tsElem * gslc_tsCollect::asElem

Array of elements.

uint16 t gslc tsCollect::nElemMax

Maximum number of elements to allocate (in RAM)

uint16 t gslc tsCollect::nElemCnt

Number of elements allocated.

int16_t gslc_tsCollect::nElemAutoIdNext

Next Element ID for auto-assignment.

gslc_tsElemRef * gslc_tsCollect::asElemRef

Array of element references.

uint16_t gslc_tsCollect::nElemRefMax

Maximum number of element references to allocate.

• uint16_t gslc_tsCollect::nElemRefCnt

Number of element references allocated.

• gslc_tsElemRef * gslc_tsCollect::pElemRefTracked

Element reference currently being touch-tracked (NULL for none)

• int16 t gslc tsCollect::nElemIndFocused

Element index currently in focus (eg. by keyboard/pin control), GSLC_IND_NONE for none.

gslc tsCollect gslc tsPage::sCollect

Collection of elements on page.

int16_t gslc_tsPage::nPageId

Page identifier.

• gslc_tsRect gslc_tsPage::rBounds

Bounding rect for page elements.

• gslc_teInputRawEvent gslc_tsInputMap::eEvent

The input event.

int16_t gslc_tsInputMap::nVal

The value associated with the input event.

• gslc teAction gslc tsInputMap::eAction

Resulting action.

• int16_t gslc_tsInputMap::nActionVal

The value for the output action.

uint16_t gslc_tsGui::nDispW

Width of the display (pixels)

uint16_t gslc_tsGui::nDispH

Height of the display (pixels)

uint16_t gslc_tsGui::nDisp0W

Width of the display (pixels) in native orientation.

uint16_t gslc_tsGui::nDisp0H

Height of the display (pixels) in native orientation.

· uint8 t gslc tsGui::nDispDepth

Bit depth of display (bits per pixel)

uint8_t gslc_tsGui::nRotation

Adafruit GFX Rotation of display.

· uint8_t gslc_tsGui::nTouchRotation

Touchscreen rotation offset vs display.

uint8_t gslc_tsGui::nSwapXY

Adafruit GFX Touch Swap x and y axes.

uint8_t gslc_tsGui::nFlipX

Adafruit GFX Touch Flip x axis.

7.14 Internal Functions 79

uint8_t gslc_tsGui::nFlipY

Adafruit GFX Touch Flip x axis.

uint16 t gslc tsGui::nTouchCalXMin

Calibration X minimum reading.

uint16_t gslc_tsGui::nTouchCalXMax

Calibration X maximum reading.

uint16_t gslc_tsGui::nTouchCalYMin

Calibration Y minimum reading.

uint16_t gslc_tsGui::nTouchCalYMax

Calibration Y maximum reading.

gslc_tsFont * gslc_tsGui::asFont

Collection of loaded fonts.

uint8_t gslc_tsGui::nFontMax

Maximum number of fonts to allocate.

uint8_t gslc_tsGui::nFontCnt

Number of fonts allocated.

uint8_t gslc_tsGui::nRoundRadius

Radius for rounded elements.

• gslc_tsColor gslc_tsGui::sTransCol

Color used for transparent image regions (GSLC_BMP_TRANS_EN=1)

gslc_tsElem gslc_tsGui::sElemTmp

Temporary element.

gslc_tsElemRef gslc_tsGui::sElemRefTmp

Temporary element reference.

gslc_tsElem gslc_tsGui::sElemTmpProg

Temporary element for Flash compatibility.

gslc_teInitStat gslc_tsGui::eInitStatTouch

Status of touch initialization.

int16_t gslc_tsGui::nTouchLastX

Last touch event X coord.

int16_t gslc_tsGui::nTouchLastY

Last touch event Y coord.

uint16_t gslc_tsGui::nTouchLastPress

Last touch event pressure (0=none))

• bool gslc_tsGui::bTouchRemapEn

Enable touch remapping?

bool gslc_tsGui::bTouchRemapYX

Enable touch controller swapping of X & Y.

void * gslc_tsGui::pvDriver

Driver-specific members (gslc_tsDriver*)

• bool gslc tsGui::bRedrawPartialEn

Driver supports partial page redraw.

gslc_tsImgRef gslc_tsGui::sImgRefBkgnd

Image reference for background.

• uint8_t gslc_tsGui::nFrameRateCnt

Diagnostic frame rate count.

uint8_t gslc_tsGui::nFrameRateStart

Diagnostic frame rate timestamp.

gslc tsPage * gslc tsGui::asPage

Array of all pages defined in system.

uint8_t gslc_tsGui::nPageMax

Maximum number of pages that can be defined.

uint8_t gslc_tsGui::nPageCnt

Current number of pages defined.

gslc_tsPage * gslc_tsGui::apPageStack [GSLC_STACK__MAX]

Stack of pages.

bool gslc_tsGui::abPageStackActive [GSLC_STACK__MAX]

Whether page in stack can receive touch events.

bool gslc_tsGui::abPageStackDoDraw [GSLC_STACK__MAX]

Whether page in stack is still actively drawn.

· bool gslc_tsGui::bScreenNeedRedraw

Screen requires a redraw.

bool gslc_tsGui::bScreenNeedFlip

Screen requires a page flip.

• bool gslc tsGui::bInvalidateEn

A region of the display has been invalidated.

· gslc_tsRect gslc_tsGui::rInvalidateRect

The rect region that has been invalidated.

• GSLC_CB_PIN_POLL gslc_tsGui::pfuncPinPoll

Callback func ptr for pin polling.

gslc_tsInputMap * gslc_tsGui::asInputMap

Array of input maps.

• uint8_t gslc_tsGui::nInputMapMax

Maximum number of input maps.

uint8 t gslc tsGui::nInputMapCnt

Current number of input maps.

7.14.1 Detailed Description

These functions are internal to the GUIslice implementation and are not intended to be called by user code and subject to change even in minor releases.

• The following functions are generally not required for typical users of GUIslice. However, for advanced usage more direct access may be required.

7.14.2 Variable Documentation

7.14.2.1 bool gslc_tsGui::abPageStackActive[GSLC_STACK__MAX]

Whether page in stack can receive touch events.

7.14.2.2 bool gslc_tsGui::abPageStackDoDraw[GSLC_STACK__MAX]

Whether page in stack is still actively drawn.

7.14.2.3 gslc tsPage* gslc_tsGui::apPageStack[GSLC STACK MAX]

Stack of pages.

7.14 Internal Functions 81

7.14.2.4 gslc_tsElem* gslc_tsCollect::asElem

Array of elements.

7.14.2.5 gslc_tsElemRef* gslc_tsCollect::asElemRef

Array of element references.

7.14.2.6 gslc_tsFont* gslc_tsGui::asFont

Collection of loaded fonts.

7.14.2.7 gslc_tsInputMap* gslc_tsGui::asInputMap

Array of input maps.

7.14.2.8 gslc_tsPage* gslc_tsGui::asPage

Array of all pages defined in system.

7.14.2.9 uint8_t gslc_tsColor::b

RGB blue value.

7.14.2.10 bool gslc_tsGui::blnvalidateEn

A region of the display has been invalidated.

7.14.2.11 bool gslc_tsGui::bRedrawPartialEn

Driver supports partial page redraw.

If true, only changed elements are redrawn during next page redraw command. If false, entire page is redrawn when any element has been updated prior to next page redraw command.

7.14.2.12 bool gslc_tsGui::bScreenNeedFlip

Screen requires a page flip.

7.14.2.13 bool gslc_tsGui::bScreenNeedRedraw

Screen requires a redraw.

7.14.2.14 bool gslc_tsGui::bTouchRemapEn Enable touch remapping? 7.14.2.15 bool gslc_tsGui::bTouchRemapYX Enable touch controller swapping of X & Y. 7.14.2.16 gslc_tsColor gslc_tsElem::colElemFill Color for background fill. 7.14.2.17 gslc_tsColor gslc_tsElem::colElemFillGlow Color to use for fill when glowing. 7.14.2.18 gslc_tsColor gslc_tsElem::colElemFrame Color for frame. 7.14.2.19 gslc_tsColor gslc_tsElem::colElemFrameGlow Color to use for frame when glowing. 7.14.2.20 gslc_tsColor gslc_tsElem::colElemText Color of overlay text. 7.14.2.21 gslc_tsColor gslc_tsElem::colElemTextGlow Color of overlay text when glowing. 7.14.2.22 gslc_teAction gslc_tslnputMap::eAction Resulting action. 7.14.2.23 gslc_teElemRefFlags gslc_tsElemRef::eElemFlags

Element reference flags.

7.14 Internal Functions 83

7.14.2.24 gslc_teInputRawEvent gslc_tsInputMap::eEvent The input event. 7.14.2.25 gslc_teFontRefMode gslc_tsFont::eFontRefMode Font reference mode. 7.14.2.26 gslc_teFontRefType gslc_tsFont::eFontRefType Font reference type. 7.14.2.27 gslc_telmgRefFlags gslc_tslmgRef::elmgFlags Image reference flags. 7.14.2.28 gslc_teInitStat gslc_tsGui::eInitStatTouch Status of touch initialization. 7.14.2.29 gslc_teTouch gslc_tsEventTouch::eTouch Touch state. 7.14.2.30 int8_t gslc_tsElem::eTxtAlign Alignment of overlay text. 7.14.2.31 gslc_teTxtFlags gslc_tsElem::eTxtFlags Flags associated with text buffer. 7.14.2.32 gslc_teEventType gslc_tsEvent::eType Event type. 7.14.2.33 uint8_t gslc_tsColor::g RGB green value.

7.14.2.34 uint16_t gslc_tsRect::h Height of region. 7.14.2.35 int16_t gslc_tsInputMap::nActionVal The value for the output action. 7.14.2.36 uint16_t gslc_tsGui::nDisp0H Height of the display (pixels) in native orientation. 7.14.2.37 uint16_t gslc_tsGui::nDisp0W Width of the display (pixels) in native orientation. 7.14.2.38 uint8_t gslc_tsGui::nDispDepth Bit depth of display (bits per pixel) 7.14.2.39 uint16_t gslc_tsGui::nDispH Height of the display (pixels) 7.14.2.40 uint16_t gslc_tsGui::nDispW Width of the display (pixels) 7.14.2.41 int16_t gslc_tsCollect::nElemAutoIdNext Next Element ID for auto-assignment. 7.14.2.42 uint16_t gslc_tsCollect::nElemCnt Number of elements allocated.

7.14.2.43 int16_t gslc_tsCollect::nElemIndFocused

Element index currently in focus (eg. by keyboard/pin control), GSLC_IND_NONE for none.

7.14 Internal Functions 85

7.14.2.44 uint16_t gslc_tsCollect::nElemMax

Maximum number of elements to allocate (in RAM)

7.14.2.45 uint16_t gslc_tsCollect::nElemRefCnt

Number of element references allocated.

7.14.2.46 uint16_t gslc_tsCollect::nElemRefMax

Maximum number of element references to allocate.

7.14.2.47 uint8_t gslc_tsElem::nFeatures

Element feature vector (appearance/behavior))

7.14.2.48 uint8_t gslc_tsGui::nFlipX

Adafruit GFX Touch Flip x axis.

7.14.2.49 uint8_t gslc_tsGui::nFlipY

Adafruit GFX Touch Flip x axis.

7.14.2.50 uint8_t gslc_tsGui::nFontCnt

Number of fonts allocated.

7.14.2.51 uint8_t gslc_tsGui::nFontMax

Maximum number of fonts to allocate.

7.14.2.52 uint8_t gslc_tsGui::nFrameRateCnt

Diagnostic frame rate count.

7.14.2.53 uint8_t gslc_tsGui::nFrameRateStart

Diagnostic frame rate timestamp.

7.14.2.54 int16_t gslc_tsElem::nGroup Group ID that the element belongs to. 7.14.2.55 int16_t gslc_tsFont::nld Font ID specified by user. 7.14.2.56 int16_t gslc_tsElem::nld Element ID specified by user. 7.14.2.57 uint8_t gslc_tsGui::nInputMapCnt Current number of input maps. 7.14.2.58 uint8_t gslc_tsGui::nInputMapMax Maximum number of input maps. 7.14.2.59 uint8_t gslc_tsGui::nPageCnt Current number of pages defined. 7.14.2.60 int16_t gslc_tsPage::nPageId Page identifier. 7.14.2.61 uint8_t gslc_tsGui::nPageMax Maximum number of pages that can be defined. 7.14.2.62 uint8_t gslc_tsGui::nRotation Adafruit GFX Rotation of display. 7.14.2.63 uint8_t gslc_tsGui::nRoundRadius

Radius for rounded elements.

7.14 Internal Functions 87

7.14.2.64 uint16_t gslc_tsFont::nSize Font size. 7.14.2.65 uint8_t gslc_tsElem::nStrBufMax Size of string buffer. 7.14.2.66 uint8_t gslc_tsEvent::nSubType Event sub-type. 7.14.2.67 uint8_t gslc_tsGui::nSwapXY Adafruit GFX Touch Swap x and y axes. 7.14.2.68 uint16_t gslc_tsGui::nTouchCalXMax Calibration X maximum reading. 7.14.2.69 uint16_t gslc_tsGui::nTouchCalXMin Calibration X minimum reading. 7.14.2.70 uint16_t gslc_tsGui::nTouchCalYMax Calibration Y maximum reading. 7.14.2.71 uint16_t gslc_tsGui::nTouchCalYMin Calibration Y minimum reading. 7.14.2.72 uint16_t gslc_tsGui::nTouchLastPress Last touch event pressure (0=none)) 7.14.2.73 int16_t gslc_tsGui::nTouchLastX

Last touch event X coord.

7.14.2.74 int16_t gslc_tsGui::nTouchLastY

Last touch event Y coord.

7.14.2.75 uint8_t gslc_tsGui::nTouchRotation

Touchscreen rotation offset vs display.

7.14.2.76 int8_t gslc_tsElem::nTxtMarginX

Margin of overlay text within rect region (x offset)

7.14.2.77 int8_t gslc_tsElem::nTxtMarginY

Margin of overlay text within rect region (y offset)

7.14.2.78 int16_t gslc_tsElem::nType

Element type enumeration.

7.14.2.79 int16_t gslc_tsInputMap::nVal

The value associated with the input event.

7.14.2.80 int16_t gslc_tsEventTouch::nX

Touch X coordinate (or param1)

7.14.2.81 int16_t gslc_tsEventTouch::nY

Touch Y coordinate (or param2)

7.14.2.82 gslc_tsElem* gslc_tsElemRef::pElem

Pointer to element in memory [RAM,FLASH].

7.14.2.83 gslc_tsElemRef* gslc_tsElem::pElemRefParent

Parent element reference.

Used during redraw to notify parent elements that they require redraw as well. Primary usage is in compound elements. NOTE: Although this field is only used in GLSC_COMPOUND mode, it is not wrapped in an ifdef because the ElemCreate*_P() function macros currently initialize this field.

7.14 Internal Functions 89

7.14.2.84 gslc_tsElemRef* gslc_tsCollect::pElemRefTracked

Element reference currently being touch-tracked (NULL for none)

7.14.2.85 const char* gslc_tslmgRef::pFname

Pathname to input image file [FILE,SD].

7.14.2.86 GSLC_CB_PIN_POLL gslc_tsGui::pfuncPinPoll

Callback func ptr for pin polling.

7.14.2.87 GSLC_CB_DRAW gslc_tsElem::pfuncXDraw

Callback func ptr for custom drawing.

7.14.2.88 GSLC_CB_EVENT gslc_tsElem::pfuncXEvent

UNUSED: Callback func ptr for event tree (draw,touch,tick)

7.14.2.89 GSLC_CB_TICK gslc_tsElem::pfuncXTick

Callback func ptr for timer/main loop tick.

7.14.2.90 GSLC_CB_TOUCH gslc_tsElem::pfuncXTouch

Callback func ptr for touch.

7.14.2.91 const unsigned char* gslc_tslmgRef::plmgBuf

Pointer to input image buffer in memory [RAM,FLASH].

7.14.2.92 char* gslc_tsElem::pStrBuf

Ptr to text string buffer to overlay.

7.14.2.93 gslc_tsFont* gslc_tsElem::pTxtFont

Ptr to Font for overlay text.

```
7.14.2.94 void* gslc_tsEvent::pvData
```

Generic data pointer for event.

This member is used to either pass a pointer to a simple data datatype (such as Element or Collection) or to a another structure that contains multiple fields.

```
7.14.2.95 void* gslc_tsGui::pvDriver
```

Driver-specific members (gslc_tsDriver*)

```
7.14.2.96 const void* gslc_tsFont::pvFont
```

Void ptr to the font reference (type defined by driver)

```
7.14.2.97 void* gslc_tslmgRef::pvlmgRaw
```

Ptr to raw output image data (for pre-loaded images)

```
7.14.2.98 void* gslc_tsEvent::pvScope
```

Event target scope (eg. Page, Collection, Event)

7.14.2.99 void* gslc_tsElem::pXData

Ptr to extended data structure.

7.14.2.100 uint8_t gslc_tsColor::r

RGB red value.

7.14.2.101 gslc_tsRect gslc_tsPage::rBounds

Bounding rect for page elements.

7.14.2.102 gslc_tsRect gslc_tsElem::rElem

Rect region containing element.

7.14.2.103 gslc_tsRect gslc_tsGui::rInvalidateRect

The rect region that has been invalidated.

7.14 Internal Functions 91

7.14.2.104 gslc_tsCollect gslc_tsPage::sCollect

Collection of elements on page.

7.14.2.105 gslc_tsElemRef gslc_tsGui::sElemRefTmp

Temporary element reference.

7.14.2.106 gslc_tsElem gslc_tsGui::sElemTmp

Temporary element.

7.14.2.107 gslc_tsElem gslc_tsGui::sElemTmpProg

Temporary element for Flash compatibility.

7.14.2.108 gslc_tslmgRef gslc_tsGui::slmgRefBkgnd

Image reference for background.

7.14.2.109 gslc_tslmgRef gslc_tsElem::slmgRefGlow

Image reference to draw (glowing)

7.14.2.110 gslc_tslmgRef gslc_tsElem::slmgRefNorm

Image reference to draw (normal)

7.14.2.111 gslc_tsColor gslc_tsGui::sTransCol

Color used for transparent image regions (GSLC_BMP_TRANS_EN=1)

7.14.2.112 uint16_t gslc_tsRect::w

Width of region.

7.14.2.113 int16_t gslc_tsRect::x

X coordinate of corner.

7.14.2.114 int16_t gslc_tsPt::x

X coordinate.

7.14.2.115 int16_t gslc_tsRect::y


Y coordinate of corner.

7.14.2.116 int16_t gslc_tsPt::y

Y coordinate.

7.15 Internal: Misc Functions

Collaboration diagram for Internal: Misc Functions:

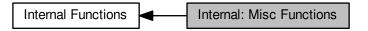

Functions

• gslc_tslmgRef gslc_ResetImage ()

Create a blank image reference structure.

7.15.1 Detailed Description

7.15.2 Function Documentation

7.15.2.1 gslc_tslmgRef gslc_ResetImage ()

Create a blank image reference structure.

Returns

Image reference struct

7.16 Internal: Element Functions

Collaboration diagram for Internal: Element Functions:



Functions

gslc_tsElem gslc_ElemCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPageId, int16_t nType, gslc_ts
 — Rect rElem, char *pStrBuf, uint8_t nStrBufMax, int16_t nFontId)

Create a new element with default styling.

gslc_tsElemRef * gslc_ElemAdd (gslc_tsGui *pGui, int16_t nPageId, gslc_tsElem *pElem, gslc_teElem←
 RefFlags eFlags)

Add the Element to the list of generated elements in the GUI environment.

- uint8_t gslc_GetElemRefFlag (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, uint8_t nFlagMask)

 Get the flags associated with an element reference.
- void gslc_SetElemRefFlag (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, uint8_t nFlagMask, uint8_t n← FlagVal)

Set the flags associated with an element reference.

• gslc_tsElem * gslc_GetElemFromRef (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Returns a pointer to an element from an element reference, copying from FLASH to RAM if element is stored in PROGMEM.

- gslc_tsElem * gslc_GetElemFromRefD (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nLineNum)

 Returns a pointer to an element from an element reference.
- void * gslc_GetXDataFromRef (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nType, int16_t nLine → Num)

Returns a pointer to the data structure associated with an extended element.

Set an element to use a bitmap image.

- bool gslc_ElemDrawByRef (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_teRedrawType eRedraw)
 - Draw an element to the active display.
- void gslc_ElemDraw (gslc_tsGui *pGui, int16_t nPageId, int16_t nElemId)

Draw an element to the active display.

void gslc_DrawTxtBase (gslc_tsGui *pGui, char *pStrBuf, gslc_tsRect rTxt, gslc_tsFont *pTxtFont, gslc←
 _teTxtFlags eTxtFlags, int8_t eTxtAlign, gslc_tsColor colTxt, gslc_tsColor colBg, int16_t nMarginW, int16_t nMarginH)

Draw text with full text justification.

void gslc_SetRoundRadius (gslc_tsGui *pGui, uint8_t nRadius)

Set the global rounded radius.

7.16.1 Detailed Description

7.16.2 Function Documentation

7.16.2.1 void gslc_DrawTxtBase (gslc_tsGui * pGui, char * pStrBuf, gslc_tsRect rTxt, gslc_tsFont * pTxtFont, gslc_teTxtFlags eTxtFlags, int8_t eTxtAlign, gslc_tsColor colTxt, gslc_tsColor colBg, int16_t nMarginW, int16_t nMarginH)

Draw text with full text justification.

• This function is usually only required by internal GUIslice rendering operations but is made available for custom element usage as well

Parameters

in	pGui	Pointer to GUI
in	pStrBuf	Pointer to text string buffer
in	rTxt	Rectangle region to contain the text
in	pTxtFont	Pointer to the font
in	eTxtFlags	Text string attributes
in	eTxtAlign	Text alignment / justification mode
in	colTxt	Text foreground color
in	colBg	Text background color
in	nMarginW	Horizontal margin within rect region to keep text away
in	nMarginH	Vertical margin within rect region to keep text away

Returns

none

7.16.2.2 gslc_tsElemRef* gslc_ElemAdd (gslc_tsGui * pGui, int16_t nPageld, gslc_tsElem * pElem, gslc_teElemRefFlags eFlags)

Add the Element to the list of generated elements in the GUI environment.

• NOTE: The content of pElem is copied so the pointer can be released after the call.

Parameters

in	pGui	Pointer to GUI
in	n⊷	Page ID to add element to (GSLC_PAGE_NONE to skip in case of temporary creation for
	Pageld	compound elements)
in	pElem	Pointer to Element to add
in	eFlags	Flags describing the element (eg. whether the element should be stored in internal RAM array
		or is located in Flash/PROGMEM).

Returns

Pointer to Element reference or NULL if fail

7.16.2.3 gslc_tsElem gslc_ElemCreate (gslc_tsGui * pGui, int16_t nElemId, int16_t nPageId, int16_t nType, gslc_tsRect rElem, char * pStrBuf, uint8_t nStrBufMax, int16_t nFontId)

Create a new element with default styling.

Parameters

in	pGui	Pointer to GUI
in	nElemId	User-supplied ID for referencing this element (or GSLC_ID_AUTO to auto-generate)
in	nPageId	The page ID on which this page should be associated
in	пТуре	Enumeration that indicates the type of element that is requested for creation. The type adjusts the visual representation and default styling.
in	rElem	Rectangle region framing the element
in	pStrBuf	String to copy into element
in	nStrBufMax	Maximum length of string buffer (pStrBuf). Only applicable if GSLC_LOCAL_STR=0. Ignored if GSLC_LOCAL_STR=1.)
in	nFontId	Font ID for textual elements

Returns

Initialized structure

7.16.2.4 void gslc_ElemDraw (gslc_tsGui * pGui, int16_t nPageld, int16_t nElemId)

Draw an element to the active display.

- Element is referenced by a page ID and element ID
- Provides similar functionality as ElemDrawByRef() but accepts page and element IDs

Parameters

in	pGui	Pointer to GUI
in	n⊷	ID of page containing element
	Pageld	
in	n⊷	ID of element
	ElemId	

Returns

7.16.2.5 bool gslc_ElemDrawByRef (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, gslc_teRedrawType eRedraw)

Draw an element to the active display.

· Element is referenced by an element pointer

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Ptr to Element reference to draw
in	eRedraw	Redraw mode

Returns

true if success, false otherwise

7.16.2.6 void gslc_ElemSetImage (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, gslc_tsImgRef sImgRef, gslc_tsImgRef sImgRef s

Set an element to use a bitmap image.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference to update
in	sImgRef	Image reference (normal state)
in	sImgRefSel	Image reference (glowing state)

Returns

none

7.16.2.7 gslc_tsElem* gslc_GetElemFromRef (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef)

Returns a pointer to an element from an element reference, copying from FLASH to RAM if element is stored in PROGMEM.

This function enables all APIs to work with Elements irrespective of whether they were created in RAM or Flash.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element Reference

Returns

Pointer to Element after ensuring that it is accessible from RAM

7.16.2.8 gslc_tsElem* gslc_GetElemFromRefD (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, int16_t nLineNum)

Returns a pointer to an element from an element reference.

This is a wrapper for GetElemFromRef() including debug checking for invalid pointers.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element Reference
in	nLineNum	Line number from calling function (ie. LINE)

Returns

Pointer to Element after ensuring that it is accessible from RAM

7.16.2.9 uint8_t gslc_GetElemRefFlag (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, uint8_t nFlagMask)

Get the flags associated with an element reference.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Element reference pointer
in	nFlagMask	Flags to read

Returns

Values associated with the element reference flags (subject to the flag mask)

7.16.2.10 void* gslc_GetXDataFromRef (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, int16_t nType, int16_t nLineNum)

Returns a pointer to the data structure associated with an extended element.

• Example usage: gslc_tsXListbox* pListbox = (gslc_tsXListbox*)gslc_GetXDataFromRef(pGui, pElemRef, GSLC_TYPEX_LISTBOX, LINE);

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element Reference
in	пТуре	Expected type indicator (ie. GSLC_TYPEX_*)
Generate 1 N	nLineNum	Line number from calling function (ie. LINE)

Returns

Void pointer to extended data (pXData), or NULL if error. Needs to be typecasted accordingly.

7.16.2.11 void gslc_SetElemRefFlag (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, uint8_t nFlagNask, uint8_t nFlagNask)

Set the flags associated with an element reference.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Element reference pointer
in	nFlagMask	Flags to read
in	nFlagVal	Values to assign to masked flags

Returns

none

7.16.2.12 void gslc_SetRoundRadius (gslc_tsGui * pGui, uint8_t nRadius)

Set the global rounded radius.

• Used for rounded rectangles


Parameters

in	pGui	Pointer to GUI
in	nRadius	Radius for rounded elements

Returns

7.17 Internal: Page Functions

Collaboration diagram for Internal: Page Functions:

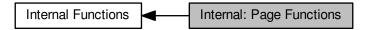

Functions

bool gslc_PageEvent (void *pvGui, gslc_tsEvent sEvent)

Common event handler function for a page.

void gslc_PageRedrawGo (gslc_tsGui *pGui)

Redraw all elements on the active page.

void gslc_PageFlipSet (gslc_tsGui *pGui, bool bNeeded)

Indicate whether the screen requires page flip.

bool gslc_PageFlipGet (gslc_tsGui *pGui)

Get state of pending page flip state.

void gslc_PageFlipGo (gslc_tsGui *pGui)

Update the visible screen if page has been marked for flipping.

gslc_tsPage * gslc_PageFindByld (gslc_tsGui *pGui, int16_t nPageId)

Find a page in the GUI by its ID.

void gslc_PageRedrawCalc (gslc_tsGui *pGui)

Perform a redraw calculation on the page to determine if additional elements should also be redrawn.

- int16_t gslc_PageFocusStep (gslc_tsGui *pGui, gslc_tsPage *pPage, bool bNext)
- gslc_tsEvent gslc_EventCreate (gslc_tsGui *pGui, gslc_teEventType eType, uint8_t nSubType, void *pv←
 Scope, void *pvData)

Create an event structure.

bool gslc ElemEvent (void *pvGui, gslc tsEvent sEvent)

Common event handler function for an element.

Trigger an element's touch event.

7.17.1 Detailed Description

7.17.2 Function Documentation

7.17.2.1 bool gslc_ElemEvent (void * pvGui, gslc_tsEvent sEvent)

Common event handler function for an element.

Parameters

i	Ln	pvGui	Void pointer to GUI
i	Ĺn	sEvent	Event data structure

Returns

true if success, false if fail

7.17.2.2 bool gslc_ElemSendEventTouch (gslc_tsGui * pGui, gslc_tsElemRef * pElemRefTracked, gslc_teTouch eTouch, int16_t nX, int16_t nY)

Trigger an element's touch event.

This is an optional behavior useful in some extended element types.

Parameters

in	pGui	Pointer to GUI
in	pElemRefTracked	Pointer to tracked Element reference (or NULL for none))
in	eTouch	Touch event type
in	nΧ	X coordinate of event (absolute coordinate)
in	nY	Y coordinate of event (absolute coordinate)

Returns

true if success, false if error

7.17.2.3 gslc_tsEvent gslc_EventCreate (gslc_tsGui * pGui, gslc_teEventType eType, uint8_t nSubType, void * pvScope, void * pvData)

Create an event structure.

Parameters

in	pGui	Pointer to GUI
in	еТуре	Event type (draw, touch, tick, etc.)
in	nSubType	Refinement of event type (or 0 if unused)
in	pvScope	Void ptr to object receiving event so that the event handler will have the context
in	pvData	Void ptr to additional data associated with the event (eg. coordinates for touch events)

Returns

None

7.17.2.4 bool gslc_PageEvent (void * pvGui, gslc_tsEvent sEvent)

Common event handler function for a page.

Parameters

in	pvGui	Void pointer to GUI
in	sEvent	Event data structure

Returns

true if success, false if fail

7.17.2.5 gslc_tsPage* gslc_PageFindByld (gslc_tsGui * pGui, int16_t nPageld)

Find a page in the GUI by its ID.

Parameters

in	pGui	Pointer to GUI
in	n⊷	Page ID to search
	Pageld	

Returns

Ptr to a page or NULL if none found

7.17.2.6 bool gslc_PageFlipGet (gslc_tsGui * pGui)

Get state of pending page flip state.

Parameters

in	pGui	Pointer to GUI
	'	

Returns

True if screen requires page flip

7.17.2.7 void gslc_PageFlipGo ($gslc_tsGui * pGui$)

Update the visible screen if page has been marked for flipping.

• On some hardware this can trigger a double-buffering page flip.

Parameters

in <i>pGui</i>	Pointer to GUI
----------------	----------------

Returns

None

7.17.2.8 void gslc_PageFlipSet (gslc_tsGui * pGui, bool bNeeded)

Indicate whether the screen requires page flip.

• This is generally called with bNeeded=true whenever drawing has been done to the active page. Page flip is actually performed later when calling PageFlipGo().

Parameters

in	pGui	Pointer to GUI
in	bNeeded	True if screen requires page flip

Returns

None

7.17.2.9 int16_t gslc_PageFocusStep (gslc_tsGui * pGui, gslc_tsPage * pPage, bool bNext)

Todo Doc. This API is experimental and subject to change

7.17.2.10 void gslc_PageRedrawCalc (gslc_tsGui * pGui)

Perform a redraw calculation on the page to determine if additional elements should also be redrawn.

This routine checks to see if any transparent elements have been marked as needing redraw. If so, the whole page may be marked as needing redraw (or at least the other elements that have been exposed underneath).

Parameters

in	pGui	Pointer to GUI

Returns

7.17.2.11 void gslc_PageRedrawGo (gslc_tsGui * pGui)

Redraw all elements on the active page.

Only the elements that have been marked as needing redraw are rendered unless the entire page has been marked as needing redraw (in which case everything is drawn)


Parameters

in pGui Pointer to GUI

Returns

7.18 Internal: Element Collection Functions

Collaboration diagram for Internal: Element Collection Functions:

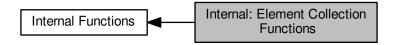

Functions

void gslc_CollectReset (gslc_tsCollect *pCollect, gslc_tsElem *asElem, uint16_t nElemMax, gslc_tsElemRef
 *asElemRef, uint16_t nElemRefMax)

Reset the members of an element collection.

gslc_tsElemRef * gslc_CollectElemAdd (gslc_tsGui *pGui, gslc_tsCollect *pCollect, const gslc_tsElem *p←
 Elem, gslc_teElemRefFlags eFlags)

Add an element to a collection.

bool gslc_CollectGetRedraw (gslc_tsGui *pGui, gslc_tsCollect *pCollect)

Determine if any elements in a collection need redraw.

- gslc_tsElemRef * gslc_CollectFindElemByld (gslc_tsGui *pGui, gslc_tsCollect *pCollect, int16_t nElemId)

 Find an element in a collection by its Element ID.
- gslc_tsElemRef * gslc_CollectFindElemFromCoord (gslc_tsGui *pGui, gslc_tsCollect *pCollect, int16_t nX, int16_t nY)

Find an element in a collection by a coordinate coordinate.

int gslc_CollectGetNextId (gslc_tsGui *pGui, gslc_tsCollect *pCollect)

Allocate the next available Element ID in a collection.

gslc_tsElemRef * gslc_CollectGetElemRefTracked (gslc_tsGui *pGui, gslc_tsCollect *pCollect)

Get the element within a collection that is currently being tracked.

void gslc_CollectSetElemTracked (gslc_tsGui *pGui, gslc_tsCollect *pCollect, gslc_tsElemRef *pElemRef)

Set the element within a collection that is currently being tracked.

int16_t gslc_CollectGetFocus (gslc_tsGui *pGui, gslc_tsCollect *pCollect)

Get the element index within a collection that is currently in focus.

void gslc_CollectSetFocus (gslc_tsGui *pGui, gslc_tsCollect *pCollect, int16_t nElemInd)

Set the element index within a collection that is currently in focus.

- bool gslc_CollectFindFocusStep (gslc_tsGui *pGui, gslc_tsCollect *pCollect, bool bNext, bool *pbWrapped, int16 t *pnElemInd)
- void gslc_CollectSetParent (gslc_tsGui *pGui, gslc_tsCollect *pCollect, gslc_tsElemRef *pElemRefParent)

Assign the parent element reference to all elements within a collection.

7.18.1 Detailed Description

7.18.2 Function Documentation

7.18.2.1 gslc_tsElemRef* gslc_CollectElemAdd (gslc_tsGui * pGui, gslc_tsCollect * pCollect, const gslc_tsElem * pElem, gslc_teElemRefFlags eFlags)

Add an element to a collection.

• Note that the contents of pElem are copied to the collection's element array so the pElem pointer can be discarded are the call is complete.

Parameters

in	pGui	Pointer to GUI
in	pCollect	Pointer to the collection
in	pElem	Ptr to the element to add
in	eFlags	Flags describing the element (eg. whether the element should be stored in internal RAM array or is located in Flash/PROGMEM).

Returns

Pointer to the element reference in the collection that has been added or NULL if there was an error

 $7.18.2.2 \quad \textbf{gslc_tsElemRef* gslc_CollectFindElemByld (} \quad \textbf{gslc_tsGui* pGui,} \quad \textbf{gslc_tsCollect* pCollect,} \quad \textbf{int16_t} \quad \textbf{nElemId} \quad \textbf{)}$

Find an element in a collection by its Element ID.

Parameters

in	pGui	Pointer to GUI
in	pCollect	Pointer to the collection
in	n⊷	Element ID to search for
	ElemId	

Returns

Pointer to the element reference in the collection that was found or NULL if no matches found

7.18.2.3 gslc_tsElemRef* gslc_CollectFindElemFromCoord (gslc_tsGui * pGui, gslc_tsCollect * pCollect, int16_t nX, int16_t nY)

Find an element in a collection by a coordinate coordinate.

• A match is found if the element is "clickable" (bClickEn=true) and the coordinate falls within the element's bounds (rElem).

Parameters

in	pGui	Pointer to GUI
in	pCollect	Pointer to the collection
in	nΧ	Absolute X coordinate to use for search
in	nΥ	Absolute Y coordinate to use for search

Returns

Pointer to the element reference in the collection that was found or NULL if no matches found

7.18.2.4 bool gslc_CollectFindFocusStep (gslc_tsGui * pGui, gslc_tsCollect * pCollect, bool bNext, bool * pbWrapped, int16 t * pnElemInd)

Todo Doc. This API is experimental and subject to change

7.18.2.5 $gslc_tsElemRef* gslc_CollectGetElemRefTracked (<math>gslc_tsGui* pGui, gslc_tsCollect* pCollect)$

Get the element within a collection that is currently being tracked.

Parameters

in	pGui	Pointer to GUI
in	pCollect	Pointer to the collection

Returns

Pointer to the element reference in the collection that is currently being tracked or NULL if no elements are being tracked

7.18.2.6 int16_t gslc_CollectGetFocus (gslc_tsGui * pGui, gslc_tsCollect * pCollect)

Get the element index within a collection that is currently in focus.

Parameters

in	pGui	Pointer to GUI
in	pCollect	Pointer to the collection

Returns

Element index or GSLC_IND_NONE for none

7.18.2.7 int gslc_CollectGetNextId ($gslc_tsGui * pGui$, $gslc_tsCollect * pCollect$)

Allocate the next available Element ID in a collection.

Parameters

in	pGui	Pointer to GUI
in	pCollect	Pointer to the collection

Returns

Element ID that is reserved for use

7.18.2.8 bool gslc_CollectGetRedraw ($gslc_tsGui*pGui, gslc_tsCollect*pCollect$)

Determine if any elements in a collection need redraw.

Parameters

j	in	pGui	Pointer to GUI
j	in	pCollect	Pointer to Element collection

Returns

True if redraw required, false otherwise

7.18.2.9 void gslc_CollectReset (gslc_tsCollect * pCollect, gslc_tsElem * asElem, uint16_t nElemMax, gslc_tsElemRef * asElemRef, uint16_t nElemRefMax)

Reset the members of an element collection.

Parameters

in	pCollect	Pointer to the collection	
in	asElem	Internal element array storage to associate with the collection	
in	nElemMax	Maximum number of elements that can be added to the internal element array (ie. RAM))	
in	asElemRef	asElemRef Internal element reference array storage to associate with the collection. All elemen whether they are located in the internal element array or in external Flash (PROGM storage, require an entry in the element reference array.	
in	nElemRefMax	Maximum number of elements in the reference array. This is effectively the maximum number of elements that can appear in the collection, irrespective of whether it is stored in RAM or Flash (PROGMEM).	

Returns

7.18.2.10 void gslc_CollectSetElemTracked (gslc_tsGui * pGui, gslc_tsCollect * pCollect, gslc_tsElemRef * pElemRef)

Set the element within a collection that is currently being tracked.

Parameters

in	pGui	Pointer to GUI	
in	pCollect	Pointer to the collection	
in	pElemRef	Ptr to element reference to mark as being tracked	

Returns

none

7.18.2.11 void gslc_CollectSetFocus (gslc_tsGui * pGui, gslc_tsCollect * pCollect, int16_t nElemInd)

Set the element index within a collection that is currently in focus.

Parameters

in	pGui	Pointer to GUI	
in	pCollect	Pointer to the collection	
in	nElemInd	Element index to set in focus, GSLC_IND_NONE for none	

Returns

none

7.18.2.12 void gslc_CollectSetParent (gslc_tsGui * pGui, gslc_tsCollect * pCollect, gslc_tsElemRef * pElemRefParent)

Assign the parent element reference to all elements within a collection.

• This is generally used in the case of compound elements where updates to a sub-element should cause the parent (compound element) to be redrawn as well.)


Parameters

in	pGui	Pointer to GUI
in	pCollect	Pointer to the collection
in	pElemRefParent	Ptr to element reference that is the parent

Returns

7.19 Internal: Element Collection Event Functions

Collaboration diagram for Internal: Element Collection Event Functions:

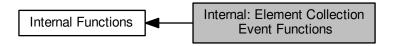

Functions

- bool gslc_CollectEvent (void *pvGui, gslc_tsEvent sEvent)
 - Common event handler function for an element collection.
- void gslc_CollectTouch (gslc_tsGui *pGui, gslc_tsCollect *pCollect, gslc_tsEventTouch *pEventTouch)

 Handle touch events within the element collection.
- bool gslc_CollectTouchCompound (void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY, gslc_tsCollect *pCollect)
 - Handle dispatch of touch (up,down,move) events to compound elements sub elements.
- void gslc_CollectInput (gslc_tsGui *pGui, gslc_tsCollect *pCollect, gslc_tsEventTouch *pEventTouch)

 Handle direct input events within the element collection.

7.19.1 Detailed Description

7.19.2 Function Documentation

7.19.2.1 bool gslc_CollectEvent (void * pvGui, gslc_tsEvent sEvent)

Common event handler function for an element collection.

Parameters

in	pvGui	Void pointer to GUI
in	sEvent	Event data structure

Returns

true if success, false if fail

7.19.2.2 void gslc_CollectInput (gslc_tsGui * pGui, gslc_tsCollect * pCollect, gslc_tsEventTouch * pEventTouch)

Handle direct input events within the element collection.

Parameters

in	pGui	Pointer to the GUI
in	pCollect	Ptr to the element collection
in	pEventTouch	Ptr to the touch event structure

Returns

none

 $7.19.2.3 \quad \text{void gslc_CollectTouch (} \textbf{gslc_tsGui} * \textbf{pGui}, \textbf{ } \textbf{gslc_tsCollect} * \textbf{pCollect}, \textbf{ } \textbf{gslc_tsEventTouch} * \textbf{pEventTouch} \text{)}$

Handle touch events within the element collection.

Parameters

in	pGui	Pointer to the GUI
in	pCollect	Ptr to the element collection
in	pEventTouch	Ptr to the touch event structure

Returns

none

7.19.2.4 bool gslc_CollectTouchCompound (void * pvGui, void * pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY, gslc_tsCollect * pCollect)

Handle dispatch of touch (up,down,move) events to compound elements sub elements.

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)	
in pvElemRef Void ptr to Element Reference(typecast to gslc_tsE		Void ptr to Element Reference(typecast to gslc_tsElemRef*)	
in	eTouch	Touch event type	
in	nRelX	Touch X coord relative to element	
in	nRelY	Touch Y coord relative to element	
in	pCollect	Collection containing sub elements	

Returns

true if success, false otherwise

7.20 Internal: Tracking Functions

Collaboration diagram for Internal: Tracking Functions:



Functions

- void gslc_TrackTouch (gslc_tsGui *pGui, gslc_tsPage *pPage, int16_t nX, int16_t nY, uint16_t nPress)

 Handles a touch event and performs the necessary tracking, glowing and selection actions depending on the press state.
- void gslc_TrackInput (gslc_tsGui *pGui, gslc_tsPage *pPage, gslc_teInputRawEvent eInputEvent, int16_
 t nInputVal)

Handles a direct input event and performs the necessary tracking, glowing and selection actions depending on the state.

bool gslc_InputMapLookup (gslc_tsGui *pGui, gslc_teInputRawEvent eInputEvent, int16_t nInputVal, gslc
 _teAction *peAction, int16_t *pnActionVal)

7.20.1 Detailed Description

7.20.2 Function Documentation

7.20.2.1 bool gslc_InputMapLookup (gslc_tsGui * pGui, gslc_teInputRawEvent eInputEvent, int16_t nInputVal, gslc_teAction * peAction, int16_t * pnActionVal)

Todo Doc. This API is experimental and subject to change

7.20.2.2 void gslc_TrackInput (gslc_tsGui * pGui, gslc_tsPage * pPage, gslc_teInputRawEvent eInputEvent, int16_t nInputVal)

Handles a direct input event and performs the necessary tracking, glowing and selection actions depending on the state.

Parameters

in	pGui	Pointer to GUI
in	pPage	Pointer to current page
in	eInputEvent	Indication of event type
in	nInputVal	Additional data for event type

Returns

none

7.20.2.3 void gslc_TrackTouch ($gslc_tsGui*pGui, gslc_tsPage*pPage, int16_t nX, int16_t nY, uint16_t nPress$)

Handles a touch event and performs the necessary tracking, glowing and selection actions depending on the press state.

Parameters

in	pGui	Pointer to GUI	
in	pPage	Pointer to current page	
in	nΧ	X coordinate of touch event	
in	nΥ	Y coordinate of touch event	
in	nPress	Pressure level of touch event (0 for none, else touch)	

Returns

7.21 Internal: Cleanup Functions

Collaboration diagram for Internal: Cleanup Functions:



Functions

void gslc_GuiDestruct (gslc_tsGui *pGui)

Free up any surfaces associated with the GUI, pages, collections and elements.

void gslc_PageDestruct (gslc_tsGui *pGui, gslc_tsPage *pPage)

Free up any members associated with a page.

void gslc_CollectDestruct (gslc_tsGui *pGui, gslc_tsCollect *pCollect)

Free up any members associated with an element collection.

void gslc_ElemDestruct (gslc_tsElem *pElem)

Free up any members associated with an element.

void gslc_ResetFont (gslc_tsFont *pFont)

Initialize a Font struct.

void gslc_ResetElem (gslc_tsElem *pElem)

Initialize an Element struct.

7.21.1 Detailed Description

7.21.2 Function Documentation

7.21.2.1 void gslc_CollectDestruct ($gslc_tsGui*pGui, gslc_tsCollect*pCollect)$

Free up any members associated with an element collection.

Parameters

in	pGui	Pointer to GUI
in	pCollect	Pointer to collection

Returns

7.21.2.2 void gslc_ElemDestruct ($gslc_tsElem*pElem$)

Free up any members associated with an element.

Parameters

	T .	
in	pElem	Pointer to element

Returns

none

7.21.2.3 void gslc_GuiDestruct (gslc_tsGui * pGui)

Free up any surfaces associated with the GUI, pages, collections and elements.

Also frees up any fonts.

• Called by gslc_Quit()

Parameters

Returns

none

7.21.2.4 void gslc_PageDestruct ($gslc_tsGui*pGui, gslc_tsPage*pPage*)$

Free up any members associated with a page.

Parameters

in	pGui	Pointer to GUI
in	pPage	Pointer to Page

Returns

none

7.21.2.5 void gslc_ResetElem (gslc_tsElem * pElem)

Initialize an Element struct.

Parameters

_			
ĺ	in	pElem	Pointer to Element

Returns

none

7.21.2.6 void gslc_ResetFont (gslc_tsFont * pFont)

Initialize a Font struct.

Parameters

in <i>pFont</i> Pointer to Fo

Returns

none

118 Module Documentation

Chapter 8


Data Structure Documentation

8.1 gslc_tsCollect Struct Reference

Element collection struct.

#include <GUIslice.h>

Collaboration diagram for gslc_tsCollect:

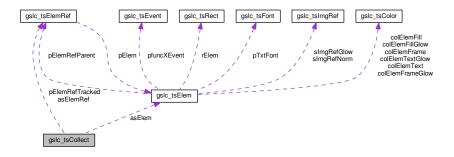

Data Fields

• gslc_tsElem * asElem

Array of elements.

uint16_t nElemMax

Maximum number of elements to allocate (in RAM)

uint16_t nElemCnt

Number of elements allocated.

• int16_t nElemAutoIdNext

Next Element ID for auto-assignment.

• gslc_tsElemRef * asElemRef

Array of element references.

• uint16_t nElemRefMax

Maximum number of element references to allocate.

• uint16_t nElemRefCnt

Number of element references allocated.

• gslc_tsElemRef * pElemRefTracked

Element reference currently being touch-tracked (NULL for none)

int16_t nElemIndFocused

Element index currently in focus (eg. by keyboard/pin control), GSLC_IND_NONE for none.

8.1.1 Detailed Description

Element collection struct.

- Collections are used to maintain a list of elements and any touch tracking status.
- · Pages and Compound Elements both instantiate a Collection

The documentation for this struct was generated from the following file:

· src/GUIslice.h

8.2 gslc_tsColor Struct Reference

Color structure. Defines RGB triplet.

```
#include <GUIslice.h>
```

Data Fields

• uint8_t r

RGB red value.

• uint8_t g

RGB green value.

uint8_t b

RGB blue value.

8.2.1 Detailed Description

Color structure. Defines RGB triplet.


The documentation for this struct was generated from the following file:

• src/GUIslice.h

8.3 gslc_tsDriver Struct Reference

```
#include <GUIslice_drv_adagfx.h>
```

Collaboration diagram for gslc_tsDriver:

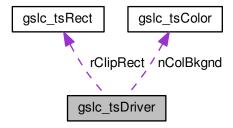

Data Fields

- gslc_tsColor nColBkgnd

 Background color (if not image-based)
- gslc_tsRect rClipRect Clipping rectangle.

8.3.1 Field Documentation

8.3.1.1 gslc_tsColor gslc_tsDriver::nColBkgnd

Background color (if not image-based)

8.3.1.2 gslc_tsRect gslc_tsDriver::rClipRect

Clipping rectangle.

The documentation for this struct was generated from the following files:


- src/GUIslice_drv_adagfx.h
- src/GUIslice drv m5stack.h
- src/GUIslice_drv_tft_espi.h
- src/GUIslice_drv_utft.h

8.4 gslc_tsElem Struct Reference

Element Struct.

#include <GUIslice.h>

Collaboration diagram for gslc_tsElem:

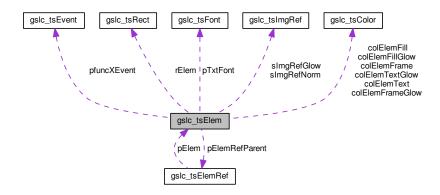

Data Fields

• int16_t nld

Element ID specified by user.

• uint8_t nFeatures

Element feature vector (appearance/behavior))

• int16_t nType

Element type enumeration.

gslc_tsRect rElem

Rect region containing element.

• int16_t nGroup

Group ID that the element belongs to.

• gslc_tsColor colElemFrame

Color for frame.

• gslc_tsColor colElemFill

Color for background fill.

gslc_tsColor colElemFrameGlow

Color to use for frame when glowing.

gslc_tsColor colElemFillGlow

Color to use for fill when glowing.

gslc_tslmgRef slmgRefNorm

Image reference to draw (normal)

• gslc_tsImgRef sImgRefGlow

Image reference to draw (glowing)

gslc tsElemRef * pElemRefParent

Parent element reference.

char * pStrBuf

Ptr to text string buffer to overlay.

uint8_t nStrBufMax

Size of string buffer.

gslc_teTxtFlags eTxtFlags

Flags associated with text buffer.

gslc_tsColor colElemText

Color of overlay text.

gslc_tsColor colElemTextGlow

Color of overlay text when glowing.

int8_t eTxtAlign

Alignment of overlay text.

• int8 t nTxtMarginX

Margin of overlay text within rect region (x offset)

int8_t nTxtMarginY

Margin of overlay text within rect region (y offset)

• gslc_tsFont * pTxtFont

Ptr to Font for overlay text.

void * pXData

Ptr to extended data structure.

GSLC CB EVENT pfuncXEvent

UNUSED: Callback func ptr for event tree (draw,touch,tick)

GSLC_CB_DRAW pfuncXDraw

Callback func ptr for custom drawing.

GSLC_CB_TOUCH pfuncXTouch

Callback func ptr for touch.

GSLC_CB_TICK pfuncXTick

Callback func ptr for timer/main loop tick.

8.4.1 Detailed Description

Element Struct.

- · Represents a single graphic element in the GUIslice environment
- · A page is made up of a number of elements
- Each element is created with a user-specified ID for further accesses (or GSLC_ID_AUTO for it to be autogenerated)
- · Display order of elements in a page is based upon the creation order
- Extensions to the core element types is provided through the pXData reference and pfuncX* callback functions.

The documentation for this struct was generated from the following file:


· src/GUIslice.h

8.5 gslc_tsElemRef Struct Reference

Element reference structure.

#include <GUIslice.h>

Collaboration diagram for gslc_tsElemRef:

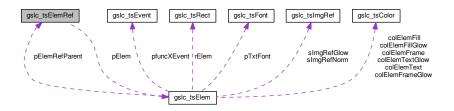

Data Fields

- gslc_tsElem * pElem
 - Pointer to element in memory [RAM,FLASH].
- gslc_teElemRefFlags eElemFlags

Element reference flags.

8.5.1 Detailed Description

Element reference structure.

The documentation for this struct was generated from the following file:

• src/GUIslice.h

8.6 gslc_tsEvent Struct Reference

Event structure.

#include <GUIslice.h>

Data Fields

• gslc_teEventType eType

Event type.

uint8_t nSubType

Event sub-type.

void * pvScope

Event target scope (eg. Page, Collection, Event)

void * pvData

Generic data pointer for event.

8.6.1 Detailed Description

Event structure.

The documentation for this struct was generated from the following file:

· src/GUIslice.h

8.7 gslc_tsEventTouch Struct Reference

Structure used to pass touch data through event.

```
#include <GUIslice.h>
```

Data Fields

· gslc teTouch eTouch

Touch state.

int16_t nX

Touch X coordinate (or param1)

int16 t nY

Touch Y coordinate (or param2)

8.7.1 Detailed Description

Structure used to pass touch data through event.

The documentation for this struct was generated from the following file:

· src/GUIslice.h

8.8 gslc_tsFont Struct Reference

Font reference structure.

```
#include <GUIslice.h>
```

Data Fields

• int16 t nld

Font ID specified by user.

gslc_teFontRefType eFontRefType

Font reference type.

• gslc_teFontRefMode eFontRefMode

Font reference mode.

const void * pvFont

Void ptr to the font reference (type defined by driver)

• uint16_t nSize

Font size.

8.8.1 Detailed Description

Font reference structure.

The documentation for this struct was generated from the following file:


· src/GUIslice.h

8.9 gslc_tsGui Struct Reference

GUI structure.

#include <GUIslice.h>

Collaboration diagram for gslc_tsGui:

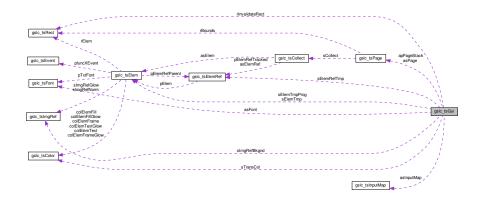

Data Fields

uint16_t nDispW

Width of the display (pixels)

• uint16_t nDispH

Height of the display (pixels)

uint16_t nDisp0W

Width of the display (pixels) in native orientation.

• uint16_t nDisp0H

Height of the display (pixels) in native orientation.

uint8_t nDispDepth

Bit depth of display (bits per pixel)

• uint8_t nRotation

Adafruit GFX Rotation of display.

uint8_t nTouchRotation

Touchscreen rotation offset vs display.

uint8_t nSwapXY

Adafruit GFX Touch Swap x and y axes.

uint8_t nFlipX

Adafruit GFX Touch Flip x axis.

uint8_t nFlipY

Adafruit GFX Touch Flip x axis.

• uint16 t nTouchCalXMin

Calibration X minimum reading.

uint16_t nTouchCalXMax

Calibration X maximum reading.

uint16 t nTouchCalYMin

Calibration Y minimum reading.

uint16_t nTouchCalYMax

Calibration Y maximum reading.

• gslc_tsFont * asFont

Collection of loaded fonts.

uint8_t nFontMax

Maximum number of fonts to allocate.

uint8 t nFontCnt

Number of fonts allocated.

· uint8 t nRoundRadius

Radius for rounded elements.

gslc tsColor sTransCol

Color used for transparent image regions (GSLC_BMP_TRANS_EN=1)

gslc_tsElem sElemTmp

Temporary element.

• gslc_tsElemRef sElemRefTmp

Temporary element reference.

• gslc_tsElem sElemTmpProg

Temporary element for Flash compatibility.

gslc_telnitStat elnitStatTouch

Status of touch initialization.

• int16 t nTouchLastX

Last touch event X coord.

int16_t nTouchLastY

Last touch event Y coord.

uint16_t nTouchLastPress

Last touch event pressure (0=none))

bool bTouchRemapEn

Enable touch remapping?

bool bTouchRemapYX

Enable touch controller swapping of X & Y.

void * pvDriver

Driver-specific members (gslc_tsDriver*)

bool bRedrawPartialEn

Driver supports partial page redraw.

gslc_tslmgRef slmgRefBkgnd

Image reference for background.

uint8_t nFrameRateCnt

Diagnostic frame rate count.

• uint8_t nFrameRateStart

Diagnostic frame rate timestamp.

gslc_tsPage * asPage

Array of all pages defined in system.

uint8_t nPageMax

Maximum number of pages that can be defined.

uint8_t nPageCnt

Current number of pages defined.

gslc_tsPage * apPageStack [GSLC_STACK__MAX]

Stack of pages.

bool abPageStackActive [GSLC_STACK__MAX]

Whether page in stack can receive touch events.

bool abPageStackDoDraw [GSLC_STACK__MAX]

Whether page in stack is still actively drawn.

bool bScreenNeedRedraw

Screen requires a redraw.

• bool bScreenNeedFlip

Screen requires a page flip.

bool blnvalidateEn

A region of the display has been invalidated.

· gslc_tsRect rInvalidateRect

The rect region that has been invalidated.

• GSLC_CB_PIN_POLL pfuncPinPoll

Callback func ptr for pin polling.

gslc tsInputMap * asInputMap

Array of input maps.

uint8_t nInputMapMax

Maximum number of input maps.

• uint8_t nInputMapCnt

Current number of input maps.

8.9.1 Detailed Description

GUI structure.

- · Contains all GUI state and content
- · Maintains list of one or more pages

The documentation for this struct was generated from the following file:

· src/GUIslice.h

8.10 gslc_tslmgRef Struct Reference

Image reference structure.

#include <GUIslice.h>

const unsigned char * plmgBuf

Pointer to input image buffer in memory [RAM,FLASH].

• const char * pFname

Pathname to input image file [FILE,SD].

• gslc_teImgRefFlags eImgFlags

Image reference flags.

void * pvlmgRaw

Ptr to raw output image data (for pre-loaded images)

8.10.1 Detailed Description

Image reference structure.

The documentation for this struct was generated from the following file:

· src/GUIslice.h

8.11 gslc_tsInputMap Struct Reference

Input mapping.

```
#include <GUIslice.h>
```

Data Fields

gslc_teInputRawEvent eEvent

The input event.

• int16_t nVal

The value associated with the input event.

gslc_teAction eAction

Resulting action.

• int16_t nActionVal

The value for the output action.

8.11.1 Detailed Description

Input mapping.

- Describes mapping from keyboard or GPIO input to a GUI action (such as changing the current element focus)
- This is generally used to support keyboard or GPIO control over the GUI operation

The documentation for this struct was generated from the following file:


· src/GUIslice.h

8.12 gslc_tsPage Struct Reference

Page structure.

#include <GUIslice.h>

Collaboration diagram for gslc_tsPage:

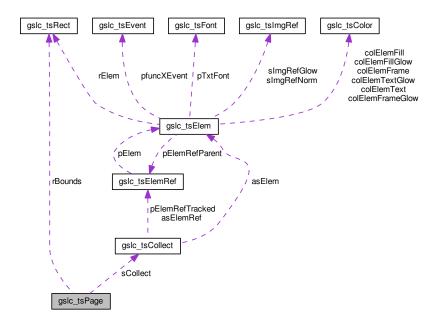

Data Fields

• gslc_tsCollect sCollect

Collection of elements on page.

• int16_t nPageId

Page identifier.

gslc_tsRect rBounds

Bounding rect for page elements.

8.12.1 Detailed Description

Page structure.

- · A page contains a collection of elements
- Many redraw functions operate at a page level
- · Maintains state as to whether redraw or screen flip is required

The documentation for this struct was generated from the following file:

• src/GUIslice.h

8.13 gslc_tsPt Struct Reference

Define point coordinates.

```
#include <GUIslice.h>
```

Data Fields

• int16_t x

X coordinate.

int16_t y

Y coordinate.

8.13.1 Detailed Description

Define point coordinates.

The documentation for this struct was generated from the following file:

· src/GUIslice.h

8.14 gslc_tsRect Struct Reference

Rectangular region. Defines X,Y corner coordinates plus dimensions.

```
#include <GUIslice.h>
```

Data Fields

• int16_t x

X coordinate of corner.

• int16_t y

Y coordinate of corner.

• uint16_t w

Width of region.

uint16_t h

Height of region.

8.14.1 Detailed Description

Rectangular region. Defines X,Y corner coordinates plus dimensions.

The documentation for this struct was generated from the following file:


• src/GUIslice.h

8.15 gslc_tsXCheckbox Struct Reference

Extended data for Checkbox element.

#include <XCheckbox.h>

Collaboration diagram for gslc_tsXCheckbox:

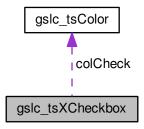

Data Fields

bool bRadio

Radio-button operation if true.

• gslc_teXCheckboxStyle nStyle

Drawing style for element.

bool bChecked

Indicates if it is selected (checked)

• gslc_tsColor colCheck

Color of checked inner fill.

• GSLC_CB_XCHECKBOX pfuncXToggle

Callback event to say element has changed.

8.15.1 Detailed Description

Extended data for Checkbox element.

8.15.2 Field Documentation

8.15.2.1 bool gslc_tsXCheckbox::bChecked

Indicates if it is selected (checked)

8.15.2.2 bool gslc_tsXCheckbox::bRadio

Radio-button operation if true.

8.15.2.3 gslc_tsColor gslc_tsXCheckbox::colCheck

Color of checked inner fill.

8.15.2.4 gslc_teXCheckboxStyle gslc_tsXCheckbox::nStyle

Drawing style for element.

8.15.2.5 GSLC_CB_XCHECKBOX gslc_tsXCheckbox::pfuncXToggle

Callback event to say element has changed.

The documentation for this struct was generated from the following file:


• src/elem/XCheckbox.h

8.16 gslc_tsXGauge Struct Reference

Extended data for Gauge element.

#include <XGauge.h>

Collaboration diagram for gslc_tsXGauge:

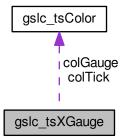

• int16_t nMin

Minimum control value.

int16_t nMax

Maximum control value.

• int16 t nVal

Current control value.

int16_t nValLast

Last value.

bool bValLastValid

Last value valid?

• gslc_teXGaugeStyle nStyle

Gauge sub-type.

• gslc_tsColor colGauge

Color of gauge fill bar.

gslc_tsColor colTick

Color of gauge tick marks.

uint16_t nTickCnt

Number of gauge tick marks.

uint16_t nTickLen

Length of gauge tick marks.

bool bVert

Vertical if true, else Horizontal.

bool bFlip

Reverse direction of gauge.

uint16_t nIndicLen

Indicator length.

uint16_t nIndicTip

Size of tip at end of indicator.

· bool blndicFill

Fill the indicator if true.

8.16.1 Detailed Description

Extended data for Gauge element.

8.16.2 Field Documentation

8.16.2.1 bool gslc_tsXGauge::bFlip

Reverse direction of gauge.

8.16.2.2 bool gslc_tsXGauge::blndicFill

Fill the indicator if true.

Generated by Doxygen

8.16.2.3 bool gslc_tsXGauge::bValLastValid Last value valid? 8.16.2.4 bool gslc_tsXGauge::bVert Vertical if true, else Horizontal. 8.16.2.5 gslc_tsColor gslc_tsXGauge::colGauge Color of gauge fill bar. 8.16.2.6 gslc_tsColor gslc_tsXGauge::colTick Color of gauge tick marks. 8.16.2.7 uint16_t gslc_tsXGauge::nIndicLen Indicator length. 8.16.2.8 uint16_t gslc_tsXGauge::nIndicTip Size of tip at end of indicator. 8.16.2.9 int16_t gslc_tsXGauge::nMax Maximum control value. 8.16.2.10 int16_t gslc_tsXGauge::nMin Minimum control value. 8.16.2.11 gslc_teXGaugeStyle gslc_tsXGauge::nStyle Gauge sub-type. 8.16.2.12 uint16_t gslc_tsXGauge::nTickCnt Number of gauge tick marks.

8.16.2.13 uint16_t gslc_tsXGauge::nTickLen

Length of gauge tick marks.

8.16.2.14 int16_t gslc_tsXGauge::nVal

Current control value.

8.16.2.15 int16_t gslc_tsXGauge::nValLast

Last value.

The documentation for this struct was generated from the following file:


· src/elem/XGauge.h

8.17 gslc_tsXGlowball Struct Reference

Extended data for Slider element.

#include <XGlowball.h>

Collaboration diagram for gslc_tsXGlowball:

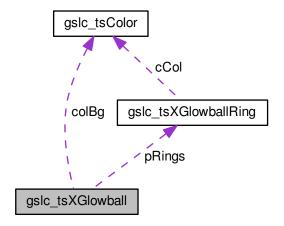

int16_t nMidX

Gauge midpoint X coord.

• int16_t nMidY

Gauge midpoint Y coord.

• gslc_tsXGlowballRing * pRings

Ring definition array.

• uint8_t nNumRings

Number of rings in definition.

• uint16_t nQuality

Rendering quality (number of segments / rotation)

• int16_t nAngStart

Starting angle (0..510 degrees)

• int16_t nAngEnd

Ending angle (0..510 degrees)

gslc_tsColor colBg

Background color (for redraw)

int16_t nVal

Current value.

int16_t nValLast

Previous value.

8.17.1 Detailed Description

Extended data for Slider element.

8.17.2 Field Documentation

8.17.2.1 gslc_tsColor gslc_tsXGlowball::colBg

Background color (for redraw)

8.17.2.2 int16_t gslc_tsXGlowball::nAngEnd

Ending angle (0..510 degrees)

8.17.2.3 int16_t gslc_tsXGlowball::nAngStart

Starting angle (0..510 degrees)

8.17.2.4 int16_t gslc_tsXGlowball::nMidX

Gauge midpoint X coord.

8.17.2.5 int16_t gslc_tsXGlowball::nMidY

Gauge midpoint Y coord.

8.17.2.6 uint8_t gslc_tsXGlowball::nNumRings

Number of rings in definition.

8.17.2.7 uint16_t gslc_tsXGlowball::nQuality

Rendering quality (number of segments / rotation)

8.17.2.8 int16_t gslc_tsXGlowball::nVal

Current value.

8.17.2.9 int16_t gslc_tsXGlowball::nValLast

Previous value.

8.17.2.10 gslc_tsXGlowballRing* gslc_tsXGlowball::pRings

Ring definition array.


The documentation for this struct was generated from the following file:

• src/elem/XGlowball.h

8.18 gslc_tsXGlowballRing Struct Reference

#include <XGlowball.h>

Collaboration diagram for gslc_tsXGlowballRing:

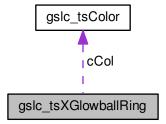

- uint8_t nRad1
- uint8_t nRad2
- gslc_tsColor cCol

8.18.1 Field Documentation

8.18.1.1 gslc_tsColor gslc_tsXGlowballRing::cCol

8.18.1.2 uint8_t gslc_tsXGlowballRing::nRad1

8.18.1.3 uint8_t gslc_tsXGlowballRing::nRad2

The documentation for this struct was generated from the following file:


• src/elem/XGlowball.h

8.19 gslc_tsXGraph Struct Reference

Extended data for Graph element.

#include <XGraph.h>

Collaboration diagram for gslc_tsXGraph:

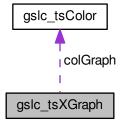

int16_t * pBuf

Ptr to the data buffer (circular buffer))

• uint8_t nMargin

Margin for graph area within element rect.

gslc_tsColor colGraph

Color of the graph.

• gslc_teXGraphStyle eStyle

Style of the graph.

• uint16_t nBufMax

Maximum number of points in buffer.

bool bScrollEn

Enable for scrollbar.

• uint16_t nScrollPos

Current scrollbar position.

uint16_t nWndHeight

Visible window height.

• uint16 t nWndWidth

Visible window width.

int16_t nPlotValMax

Visible window maximum value.

• int16_t nPlotValMin

Visible window minimum value.

uint16_t nPlotIndMax

Number of data points to show in window.

• uint16_t nBufCnt

Number of points in buffer.

uint16_t nPlotIndStart

First row of current window.

8.19.1 Detailed Description

Extended data for Graph element.

8.19.2 Field Documentation

8.19.2.1 bool gslc_tsXGraph::bScrollEn

Enable for scrollbar.

8.19.2.2 gslc_tsColor gslc_tsXGraph::colGraph

Color of the graph.

Visible window height.

Generated by Doxygen

8.19.2.3 gslc_teXGraphStyle gslc_tsXGraph::eStyle Style of the graph. 8.19.2.4 uint16_t gslc_tsXGraph::nBufCnt Number of points in buffer. 8.19.2.5 uint16_t gslc_tsXGraph::nBufMax Maximum number of points in buffer. 8.19.2.6 uint8_t gslc_tsXGraph::nMargin Margin for graph area within element rect. 8.19.2.7 uint16_t gslc_tsXGraph::nPlotIndMax Number of data points to show in window. 8.19.2.8 uint16_t gslc_tsXGraph::nPlotIndStart First row of current window. 8.19.2.9 int16_t gslc_tsXGraph::nPlotValMax Visible window maximum value. 8.19.2.10 int16_t gslc_tsXGraph::nPlotValMin Visible window minimum value. 8.19.2.11 uint16_t gslc_tsXGraph::nScrollPos Current scrollbar position. 8.19.2.12 uint16_t gslc_tsXGraph::nWndHeight

8.19.2.13 uint16_t gslc_tsXGraph::nWndWidth

Visible window width.

8.19.2.14 int16_t* gslc_tsXGraph::pBuf

Ptr to the data buffer (circular buffer))

The documentation for this struct was generated from the following file:


• src/elem/XGraph.h

8.20 gslc_tsXKeyPad Struct Reference

Extended data for KeyPad element.

#include <XKeyPad.h>

Collaboration diagram for gslc_tsXKeyPad:

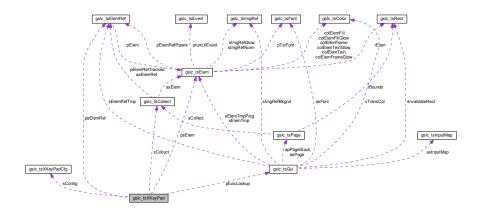

Data Fields

• uint8_t nValStrPos

Current number of characters stored in edit value string.

char acValStr [XKEYPAD_VAL_LEN]

Storage for edit value string.

· bool bValPositive

Value is positive if true, negative if false.

bool bValDecimalPt

Value string includes decimal point.

char ** pacKeys

Array of character strings for KeyPad labels.

• gslc_tsXKeyPadCfg sConfig

Configuration options.

• GSLC_CB_INPUT pfuncCb

Callback function for KeyPad actions.

XKEYPAD_LOOKUP pfuncLookup

Callback function for converting key into key label.

int16_t nTargetId

Target element ID associated with keypad (GSLC_CB_INPUT)

gslc_tsCollect sCollect

Collection management for sub-elements.

uint8 t nSubElemMax

Maximum number of sub-elements to create within KeyPad container.

gslc_tsElemRef * psElemRef

Ptr to storage for sub-element references.

gslc_tsElem * psElem

Ptr to storage for sub-elements.

8.20.1 Detailed Description

Extended data for KeyPad element.

8.20.2 Field Documentation

8.20.2.1 char gslc_tsXKeyPad::acValStr[XKEYPAD_VAL_LEN]

Storage for edit value string.

8.20.2.2 bool gslc_tsXKeyPad::bValDecimalPt

Value string includes decimal point.

8.20.2.3 bool gslc_tsXKeyPad::bValPositive

Value is positive if true, negative if false.

8.20.2.4 uint8_t gslc_tsXKeyPad::nSubElemMax

Maximum number of sub-elements to create within KeyPad container.

8.20.2.5 int16_t gslc_tsXKeyPad::nTargetId

Target element ID associated with keypad (GSLC_CB_INPUT)

8.20.2.6 uint8_t gslc_tsXKeyPad::nValStrPos

Current number of characters stored in edit value string.

8.20.2.7 char** gslc_tsXKeyPad::pacKeys

Array of character strings for KeyPad labels.

8.20.2.8 GSLC_CB_INPUT gslc_tsXKeyPad::pfuncCb

Callback function for KeyPad actions.

8.20.2.9 XKEYPAD_LOOKUP gslc_tsXKeyPad::pfuncLookup

Callback function for converting key into key label.

8.20.2.10 gslc_tsElem* gslc_tsXKeyPad::psElem

Ptr to storage for sub-elements.

8.20.2.11 gslc_tsElemRef* gslc_tsXKeyPad::psElemRef

Ptr to storage for sub-element references.

8.20.2.12 gslc_tsCollect gslc_tsXKeyPad::sCollect

Collection management for sub-elements.

8.20.2.13 gslc_tsXKeyPadCfg gslc_tsXKeyPad::sConfig

Configuration options.


The documentation for this struct was generated from the following file:

src/elem/XKeyPad.h

8.21 gslc_tsXKeyPad_Alpha Struct Reference

#include <XKeyPad_Alpha.h>

Collaboration diagram for gslc_tsXKeyPad_Alpha:

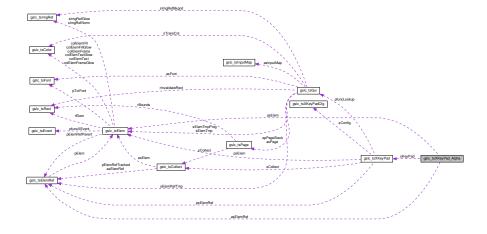

gslc_tsXKeyPad sKeyPad

Base XKeyPad element.

gslc_tsElemRef asElemRef [XKEYPADALPHA_ELEM_MAX]

Storage for sub-element references.

gslc_tsElem asElem [XKEYPADALPHA_ELEM_MAX]

Storage for sub-elements.

8.21.1 Field Documentation

8.21.1.1 gslc_tsElem gslc_tsXKeyPad_Alpha::asElem[XKEYPADALPHA_ELEM_MAX]

Storage for sub-elements.

8.21.1.2 gslc_tsElemRef gslc_tsXKeyPad_Alpha::asElemRef[XKEYPADALPHA_ELEM_MAX]

Storage for sub-element references.

8.21.1.3 gslc_tsXKeyPad gslc_tsXKeyPad_Alpha::sKeyPad

Base XKeyPad element.


The documentation for this struct was generated from the following file:

• src/elem/XKeyPad_Alpha.h

8.22 gslc_tsXKeyPad_Num Struct Reference

#include <XKeyPad_Num.h>

Collaboration diagram for gslc_tsXKeyPad_Num:

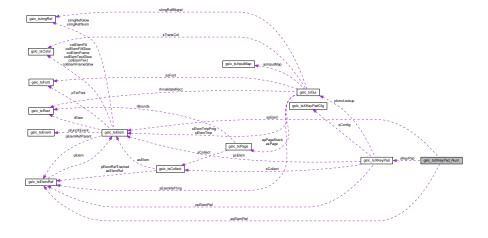

gslc_tsXKeyPad sKeyPad

Base XKeyPad element.

gslc_tsElemRef asElemRef [XKEYPADNUM_ELEM_MAX]

Storage for sub-element references.

gslc_tsElem asElem [XKEYPADNUM_ELEM_MAX]

Storage for sub-elements.

8.22.1 Field Documentation

8.22.1.1 gslc_tsElem gslc_tsXKeyPad_Num::asElem[XKEYPADNUM_ELEM_MAX]

Storage for sub-elements.

8.22.1.2 gslc_tsElemRef gslc_tsXKeyPad_Num::asElemRef[XKEYPADNUM_ELEM_MAX]

Storage for sub-element references.

8.22.1.3 gslc_tsXKeyPad gslc_tsXKeyPad_Num::sKeyPad

Base XKeyPad element.

The documentation for this struct was generated from the following file:

• src/elem/XKeyPad_Num.h

8.23 gslc_tsXKeyPadCfg Struct Reference

Configuration for the KeyPad.

#include <XKeyPad.h>

bool bFloatEn

Enable floating point (ie. decimal point)

• bool bSignEn

Enable negative numbers.

bool bRoundEn

Enable rounded corners.

• int8_t nButtonSzW

Button width (in pixels)

• int8_t nButtonSzH

Button height (in pixels)

char ** pacKeys

Array of character strings for KeyPad labels.

• int16_t nFontId

Configured font for KeyPad labels.

• int16 t nOffsetX

Configured offset (X direction) for buttons from parent container.

int16_t nOffsetY

Configured offset (Y direction) for buttons from parent container.

• int8_t nFrameMargin

Margin around text value field.

uint8_t nMaxCols

Maximum number of columns to occupy.

uint8_t nMaxRows

Maximum number of rows to occupy.

8.23.1 Detailed Description

Configuration for the KeyPad.

8.23.2 Field Documentation

8.23.2.1 bool gslc_tsXKeyPadCfg::bFloatEn

Enable floating point (ie. decimal point)

 $8.23.2.2 \quad bool\ gslc_tsXKeyPadCfg::bRoundEn$

Enable rounded corners.

8.23.2.3 bool gslc_tsXKeyPadCfg::bSignEn

Enable negative numbers.

8.23.2.4 int8_t gslc_tsXKeyPadCfg::nButtonSzH Button height (in pixels) 8.23.2.5 int8_t gslc_tsXKeyPadCfg::nButtonSzW Button width (in pixels) 8.23.2.6 int16_t gslc_tsXKeyPadCfg::nFontId Configured font for KeyPad labels. 8.23.2.7 int8_t gslc_tsXKeyPadCfg::nFrameMargin Margin around text value field. 8.23.2.8 uint8_t gslc_tsXKeyPadCfg::nMaxCols Maximum number of columns to occupy. 8.23.2.9 uint8_t gslc_tsXKeyPadCfg::nMaxRows Maximum number of rows to occupy. 8.23.2.10 int16_t gslc_tsXKeyPadCfg::nOffsetX Configured offset (X direction) for buttons from parent container. 8.23.2.11 int16_t gslc_tsXKeyPadCfg::nOffsetY Configured offset (Y direction) for buttons from parent container. 8.23.2.12 char** gslc_tsXKeyPadCfg::pacKeys

Array of character strings for KeyPad labels.

The documentation for this struct was generated from the following file:

• src/elem/XKeyPad.h

8.24 gslc_tsXKeyPadData Struct Reference

Input callback data structure.

#include <XKeyPad.h>

Data Fields

char * pStr

Final value of edited value field.

int16_t nTargetId

Target element ID to receive the value.

8.24.1 Detailed Description

Input callback data structure.

• This struct is returned in GSLC_CB_INPUT when the KeyPad edits are complete, and is used to provide the resulting edited value.

8.24.2 Field Documentation

8.24.2.1 int16_t gslc_tsXKeyPadData::nTargetId

Target element ID to receive the value.

8.24.2.2 char* gslc_tsXKeyPadData::pStr

Final value of edited value field.

The documentation for this struct was generated from the following file:


• src/elem/XKeyPad.h

8.25 gslc_tsXListbox Struct Reference

Extended data for Listbox element.

#include <XListbox.h>

Collaboration diagram for gslc_tsXListbox:

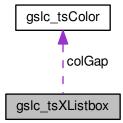

uint8_t * pBufltems

Buffer containing items.

• uint16_t nBufltemsMax

Max size of buffer containing items.

uint16_t nBufltemsPos

Current buffer position.

int16_t nltemCnt

Number of items in the list.

• int8_t nCols

Number of columns.

· int8_t nRows

Number of columns (or XLSITBOX_SIZE_AUTO to calculate)

bool bNeedRecalc

Determine if sizing may need recalc.

· int8_t nMarginW

Margin inside main listbox area (X offset)

int8_t nMarginH

Margin inside main listbox area (Y offset)

int16_t nltemW

Width of listbox item.

• int16_t nltemH

Height of listbox item.

· int8_t nltemGap

Gap between listbox items.

gslc_tsColor colGap

Gap color.

bool bltemAutoSizeW

Enable auto-sizing of items (in width)

· bool bltemAutoSizeH

Enable auto-sizing of items (in height)

• int16_t nltemCurSel

Currently selected item (XLISTBOX_SEL_NONE for none)

int16_t nltemCurSelLast

Old selected item to redraw (XLISTBOX_SEL_NONE for none)

• int16_t nltemSavedSel

Persistent selected item (ie. saved selection)

• int16_t nltemTop

Item to show at top of list after scrolling (0 is default)

• GSLC_CB_XLISTBOX_SEL pfuncXSel

Callback func ptr for selection update.

8.25.1 Detailed Description

Extended data for Listbox element.

8.25.2 Field Documentation 8.25.2.1 bool gslc_tsXListbox::bltemAutoSizeH Enable auto-sizing of items (in height) 8.25.2.2 bool gslc_tsXListbox::bltemAutoSizeW Enable auto-sizing of items (in width) 8.25.2.3 bool gslc_tsXListbox::bNeedRecalc Determine if sizing may need recalc. 8.25.2.4 gslc_tsColor gslc_tsXListbox::colGap Gap color. 8.25.2.5 uint16_t gslc_tsXListbox::nBufltemsMax Max size of buffer containing items. 8.25.2.6 uint16_t gslc_tsXListbox::nBufltemsPos Current buffer position. 8.25.2.7 int8_t gslc_tsXListbox::nCols Number of columns. 8.25.2.8 int16_t gslc_tsXListbox::nltemCnt Number of items in the list. 8.25.2.9 int16_t gslc_tsXListbox::nltemCurSel

Generated by Doxygen

Currently selected item (XLISTBOX_SEL_NONE for none)

Old selected item to redraw (XLISTBOX_SEL_NONE for none)

8.25.2.10 int16_t gslc_tsXListbox::nltemCurSelLast

8.25.2.11 int8_t gslc_tsXListbox::nltemGap Gap between listbox items. 8.25.2.12 int16_t gslc_tsXListbox::nltemH Height of listbox item. 8.25.2.13 int16_t gslc_tsXListbox::nltemSavedSel Persistent selected item (ie. saved selection) 8.25.2.14 int16_t gslc_tsXListbox::nltemTop Item to show at top of list after scrolling (0 is default) 8.25.2.15 int16_t gslc_tsXListbox::nltemW Width of listbox item. 8.25.2.16 int8_t gslc_tsXListbox::nMarginH Margin inside main listbox area (Y offset) 8.25.2.17 int8_t gslc_tsXListbox::nMarginW Margin inside main listbox area (X offset) 8.25.2.18 int8_t gslc_tsXListbox::nRows

Number of columns (or XLSITBOX_SIZE_AUTO to calculate)

8.25.2.19 uint8_t* gslc_tsXListbox::pBufltems

Buffer containing items.

 $8.25.2.20 \quad \textbf{GSLC_CB_XLISTBOX_SEL} \ gslc_tsXListbox::pfuncXSel$

Callback func ptr for selection update.

The documentation for this struct was generated from the following file:


• src/elem/XListbox.h

8.26 gslc_tsXProgress Struct Reference

Extended data for Gauge element.

#include <XProgress.h>

Collaboration diagram for gslc_tsXProgress:

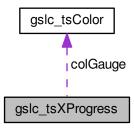

Data Fields

• int16_t nMin

Minimum control value.

• int16_t nMax

Maximum control value.

• int16_t nVal

Current control value.

int16_t nValLast

Last value.

bool bValLastValid

Last value valid?

• gslc_tsColor colGauge

Color of gauge fill bar.

bool bVert

Vertical if true, else Horizontal.

bool bFlip

Reverse direction of gauge.

8.26.1 Detailed Description

Extended data for Gauge element.

8.26.2 Field Documentation

8.26.2.1 bool gslc_tsXProgress::bFlip

Reverse direction of gauge.

8.26.2.2 bool gslc_tsXProgress::bValLastValid

Last value valid?

8.26.2.3 bool gslc_tsXProgress::bVert

Vertical if true, else Horizontal.

8.26.2.4 gslc_tsColor gslc_tsXProgress::colGauge

Color of gauge fill bar.

8.26.2.5 int16_t gslc_tsXProgress::nMax

Maximum control value.

8.26.2.6 int16_t gslc_tsXProgress::nMin

Minimum control value.

8.26.2.7 int16_t gslc_tsXProgress::nVal

Current control value.

8.26.2.8 int16_t gslc_tsXProgress::nValLast

Last value.

The documentation for this struct was generated from the following file:


• src/elem/XProgress.h

8.27 gslc_tsXRadial Struct Reference

Extended data for Gauge element.

#include <XRadial.h>

Collaboration diagram for gslc_tsXRadial:

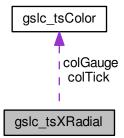

Data Fields

• int16_t nMin

Minimum control value.

• int16 t nMax

Maximum control value.

• int16_t nVal

Current control value.

int16 t nValLast

Last value.

bool bValLastValid

Last value valid?

• gslc_tsColor colGauge

Color of gauge fill bar.

• gslc_tsColor colTick

Color of gauge tick marks.

uint16_t nTickCnt

Number of gauge tick marks.

• uint16_t nTickLen

Length of gauge tick marks.

bool bFlip

Reverse direction of gauge.

• uint16_t nIndicLen

Indicator length.

uint16_t nIndicTip

Size of tip at end of indicator.

bool blndicFill

Fill the indicator if true.

8.27.1 Detailed Description

Extended data for Gauge element.

8.27.2 Field Documentation

8.27.2.1 bool gslc_tsXRadial::bFlip

Reverse direction of gauge.

8.27.2.2 bool gslc_tsXRadial::blndicFill

Fill the indicator if true.

8.27.2.3 bool gslc_tsXRadial::bValLastValid

Last value valid?

8.27.2.4 gslc_tsColor gslc_tsXRadial::colGauge Color of gauge fill bar. 8.27.2.5 gslc_tsColor gslc_tsXRadial::colTick Color of gauge tick marks. 8.27.2.6 uint16_t gslc_tsXRadial::nIndicLen Indicator length. 8.27.2.7 uint16_t gslc_tsXRadial::nIndicTip Size of tip at end of indicator. 8.27.2.8 int16_t gslc_tsXRadial::nMax Maximum control value. 8.27.2.9 int16_t gslc_tsXRadial::nMin Minimum control value. 8.27.2.10 uint16_t gslc_tsXRadial::nTickCnt Number of gauge tick marks. 8.27.2.11 uint16_t gslc_tsXRadial::nTickLen Length of gauge tick marks. 8.27.2.12 int16_t gslc_tsXRadial::nVal Current control value. 8.27.2.13 int16_t gslc_tsXRadial::nValLast

Last value.

The documentation for this struct was generated from the following file:

• src/elem/XRadial.h

8.28 gslc_tsXRamp Struct Reference

Extended data for Gauge element.

```
#include <XRamp.h>
```

Data Fields

• int16_t nMin

Minimum control value.

int16_t nMax

Maximum control value.

int16_t nVal

Current control value.

int16_t nValLast

Last value.

bool bValLastValid

Last value valid?

8.28.1 Detailed Description

Extended data for Gauge element.

8.28.2 Field Documentation

8.28.2.1 bool gslc_tsXRamp::bValLastValid

Last value valid?

8.28.2.2 int16_t gslc_tsXRamp::nMax

Maximum control value.

8.28.2.3 int16_t gslc_tsXRamp::nMin

Minimum control value.

8.28.2.4 int16_t gslc_tsXRamp::nVal

Current control value.

8.28.2.5 int16_t gslc_tsXRamp::nValLast

Last value.

The documentation for this struct was generated from the following file:


• src/elem/XRamp.h

8.29 gslc_tsXRingGauge Struct Reference

Extended data for XRingGauge element.

#include <XRingGauge.h>

Collaboration diagram for gslc_tsXRingGauge:

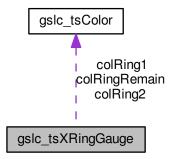

Data Fields

- int16_t nValMin
- int16_t nValMax
- int16_t nAngStart
- int16_t nAngRange
- int16_t nQuality
- int8_t nThickness
- bool bGradient
- uint8_t nSegGap
- gslc_tsColor colRing1
- gslc_tsColor colRing2
- gslc_tsColor colRingRemain
- int16_t nVal

Current position value.

• int16 t nValLast

Previous position value.

char acStrLast [XRING_STR_MAX]

8.29.1 Detailed Description

Extended data for XRingGauge element.

8.29.2 Field Documentation

8.29.2.1 char gslc_tsXRingGauge::acStrLast[XRING_STR_MAX]

8.29.2.2 bool gslc_tsXRingGauge::bGradient

8.29.2.3 gslc_tsColor gslc_tsXRingGauge::colRing1

8.29.2.4 gslc_tsColor gslc_tsXRingGauge::colRing2

8.29.2.5 gslc_tsColor gslc_tsXRingGauge::colRingRemain

8.29.2.6 int16_t gslc_tsXRingGauge::nAngRange

8.29.2.7 int16_t gslc_tsXRingGauge::nAngStart

8.29.2.8 int16_t gslc_tsXRingGauge::nQuality

8.29.2.9 uint8_t gslc_tsXRingGauge::nSegGap

8.29.2.10 int8_t gslc_tsXRingGauge::nThickness

8.29.2.11 int16_t gslc_tsXRingGauge::nVal

Current position value.

8.29.2.12 int16_t gslc_tsXRingGauge::nValLast

Previous position value.

8.29.2.13 int16_t gslc_tsXRingGauge::nValMax

8.29.2.14 int16_t gslc_tsXRingGauge::nValMin

The documentation for this struct was generated from the following file:


src/elem/XRingGauge.h

8.30 gslc_tsXSelNum Struct Reference

Extended data for SelNum element.

#include <XSelNum.h>

Collaboration diagram for gslc_tsXSelNum:

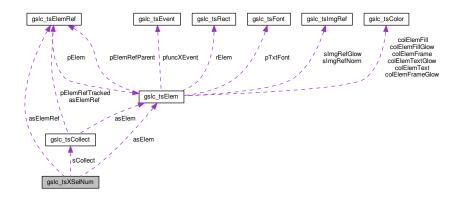

Data Fields

• int16_t nCounter

Counter for demo purposes.

gslc_tsCollect sCollect

Collection management for sub-elements.

gslc_tsElemRef asElemRef [4]

Storage for sub-element references.

• gslc_tsElem asElem [4]

Storage for sub-elements.

• char acElemTxt [4][SELNUM_STR_LEN]

Storage for strings.

8.30.1 Detailed Description

Extended data for SelNum element.

8.30.2 Field Documentation

 $8.30.2.1 \quad char\ gsic_tsXSelNum::acElemTxt[4][SELNUM_STR_LEN]$

Storage for strings.

8.30.2.2 gslc_tsElem gslc_tsXSelNum::asElem[4]

Storage for sub-elements.

8.30.2.3 gslc_tsElemRef gslc_tsXSelNum::asElemRef[4]

Storage for sub-element references.

8.30.2.4 int16_t gslc_tsXSelNum::nCounter

Counter for demo purposes.

8.30.2.5 gslc_tsCollect gslc_tsXSelNum::sCollect

Collection management for sub-elements.

The documentation for this struct was generated from the following file:


• src/elem/XSelNum.h

8.31 gslc_tsXSlider Struct Reference

Extended data for Slider element.

#include <XSlider.h>

 $Collaboration\ diagram\ for\ gslc_tsXSlider:$

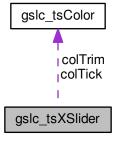

Data Fields

bool bVert

Orientation: true if vertical, else horizontal.

• int16 t nThumbSz

Size of the thumb control.

• int16_t nPosMin

Minimum position value of the slider.

int16_t nPosMax

Maximum position value of the slider.

• uint16_t nTickDiv

Style: number of tickmark divisions (0 for none)

• int16_t nTickLen

Style: length of tickmarks.

gslc_tsColor colTick

Style: color of ticks.

bool bTrim

Style: show a trim color.

gslc_tsColor colTrim

Style: color of trim.

• int16_t nPos

Current position value of the slider.

• GSLC_CB_XSLIDER_POS pfuncXPos

Callback func ptr for position update.

8.31.1 Detailed Description

Extended data for Slider element.

8.31.2 Field Documentation

8.31.2.1 bool gslc_tsXSlider::bTrim

Style: show a trim color.

8.31.2.2 bool gslc_tsXSlider::bVert

Orientation: true if vertical, else horizontal.

8.31.2.3 gslc_tsColor gslc_tsXSlider::colTick

Style: color of ticks.

8.31.2.4 gslc_tsColor gslc_tsXSlider::colTrim

Style: color of trim.

8.31.2.5 int16_t gslc_tsXSlider::nPos

Current position value of the slider.

8.31.2.6 int16_t gslc_tsXSlider::nPosMax

Maximum position value of the slider.

8.31.2.7 int16_t gslc_tsXSlider::nPosMin

Minimum position value of the slider.

8.31.2.8 int16_t gslc_tsXSlider::nThumbSz

Size of the thumb control.

8.31.2.9 uint16_t gslc_tsXSlider::nTickDiv

Style: number of tickmark divisions (0 for none)

8.31.2.10 int16_t gslc_tsXSlider::nTickLen

Style: length of tickmarks.

8.31.2.11 GSLC_CB_XSLIDER_POS gslc_tsXSlider::pfuncXPos

Callback func ptr for position update.

The documentation for this struct was generated from the following file:


• src/elem/XSlider.h

8.32 gslc_tsXSpinner Struct Reference

Extended data for Spinner element.

#include <XSpinner.h>

Collaboration diagram for gslc_tsXSpinner:

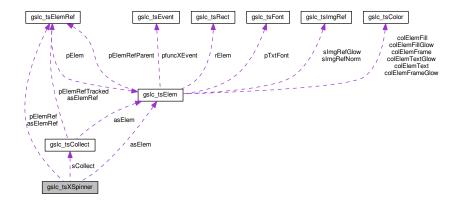

Data Fields

• int16_t nMin

Minimum control value.

int16_t nMax

Maximum control value.

• int16_t nlncr

Increment by value.

• int16_t nCounter

Current value.

• GSLC_CB_INPUT pfuncXInput

Callback func ptr for input ready.

• gslc_tsElemRef * pElemRef

Save our ElemRef for the callback.

• gslc_tsCollect sCollect

Collection management for sub-elements.

gslc_tsElemRef asElemRef [XSPINNER_COMP_CNT]

Storage for sub-element references.

gslc_tsElem asElem [XSPINNER_COMP_CNT]

Storage for sub-elements.

char acElemTxt [1][XSPINNER_STR_LEN]

Storage for strings.

• char aclncr [2]

Increment character string.

• char acDecr [2]

Decrement character string.

8.32.1 Detailed Description

Extended data for Spinner element.

8.32.2 Field Documentation

8.32.2.1 char gslc_tsXSpinner::acDecr[2]

Decrement character string.

8.32.2.2 char gslc_tsXSpinner::acElemTxt[1][XSPINNER_STR_LEN]

Storage for strings.

8.32.2.3 char gslc_tsXSpinner::acIncr[2]

Increment character string.

8.32.2.4 gslc_tsElem gslc_tsXSpinner::asElem[XSPINNER_COMP_CNT] Storage for sub-elements. 8.32.2.5 gslc_tsElemRef gslc_tsXSpinner::asElemRef[XSPINNER_COMP_CNT] Storage for sub-element references. 8.32.2.6 int16_t gslc_tsXSpinner::nCounter Current value. 8.32.2.7 int16_t gslc_tsXSpinner::nlncr Increment by value. 8.32.2.8 int16_t gslc_tsXSpinner::nMax Maximum control value. 8.32.2.9 int16_t gslc_tsXSpinner::nMin Minimum control value. 8.32.2.10 gslc_tsElemRef* gslc_tsXSpinner::pElemRef Save our ElemRef for the callback. 8.32.2.11 GSLC_CB_INPUT gslc_tsXSpinner::pfuncXInput Callback func ptr for input ready.

8.32.2.12 gslc_tsCollect gslc_tsXSpinner::sCollect

Collection management for sub-elements.

The documentation for this struct was generated from the following file:

• src/elem/XSpinner.h

8.33 gslc_tsXTemplate Struct Reference

Callback function for slider feedback.

```
#include <XTemplate.h>
```

8.33.1 Detailed Description

Callback function for slider feedback.

Extended data for Slider element

The documentation for this struct was generated from the following file:

• src/elem/XTemplate.h

8.34 gslc_tsXTextbox Struct Reference

Extended data for Textbox element.

```
#include <XTextbox.h>
```

Data Fields

char * pBuf

Ptr to the text buffer (circular buffer))

int8_t nMarginX

Margin for text area within element rect (X)

int8_t nMarginY

Margin for text area within element rect (Y)

bool bWrapEn

Enable for line wrapping.

• uint16_t nBufRows

Number of rows in buffer.

uint16_t nBufCols

Number of columns in buffer.

bool bScrollEn

Enable for scrollbar.

• uint16_t nScrollPos

Current scrollbar position.

uint8 t nChSizeX

Width of characters (pixels)

uint8_t nChSizeY

Height of characters (pixels)

• uint8 t nWndCols

Window X size.

• uint8_t nWndRows

Window Y size.

uint8_t nCurPosX

Cursor X position.

uint8_t nCurPosY

Cursor Y position.

uint8_t nBufPosX

Buffer X position.

uint8_t nBufPosY

Buffer Y position.

uint8_t nWndRowStart

First row of current window.

• int16_t nRedrawRow

Specific row to update in redraw (if not -1)

8.34.1 Detailed Description

Extended data for Textbox element.

8.34.2 Field Documentation

8.34.2.1 bool gslc_tsXTextbox::bScrollEn

Enable for scrollbar.

8.34.2.2 bool gslc_tsXTextbox::bWrapEn

Enable for line wrapping.

8.34.2.3 uint16_t gslc_tsXTextbox::nBufCols

Number of columns in buffer.

8.34.2.4 uint8_t gslc_tsXTextbox::nBufPosX

Buffer X position.

8.34.2.5 uint8_t gslc_tsXTextbox::nBufPosY

Buffer Y position.

8.34.2.6 uint16_t gslc_tsXTextbox::nBufRows

Number of rows in buffer.

8.34.2.7 uint8_t gslc_tsXTextbox::nChSizeX				
Width of characters (pixels)				
8.34.2.8 uint8_t gslc_tsXTextbox::nChSizeY				
Height of characters (pixels)				
8.34.2.9 uint8_t gslc_tsXTextbox::nCurPosX				
Cursor X position.				
8.34.2.10 uint8_t gslc_tsXTextbox::nCurPosY				
Cursor Y position.				
8.34.2.11 int8_t gslc_tsXTextbox::nMarginX				
Margin for text area within element rect (X)				
8.34.2.12 int8_t gslc_tsXTextbox::nMarginY Margin for text area within element rect (Y)				
8.34.2.13 int16_t gslc_tsXTextbox::nRedrawRow				
Specific row to update in redraw (if not -1)				
8.34.2.14 uint16_t gslc_tsXTextbox::nScrollPos				
Current scrollbar position.				
8.34.2.15 uint8_t gslc_tsXTextbox::nWndCols				
Window X size.				
8.34.2.16 uint8_t gslc_tsXTextbox::nWndRows				
Window Y size.				

```
8.34.2.17 uint8_t gslc_tsXTextbox::nWndRowStart
```

First row of current window.

```
8.34.2.18 char* gslc_tsXTextbox::pBuf
```

Ptr to the text buffer (circular buffer))

The documentation for this struct was generated from the following file:

• src/elem/XTextbox.h

8.35 THPoint Class Reference

```
#include <GUIslice_th.h>
```

Public Member Functions

- THPoint (void)
- THPoint (uint16_t x, uint16_t y, uint16_t z)
- bool operator== (THPoint)
- bool operator!= (THPoint)

Data Fields

- uint16_t x
- uint16_t y
- uint16_t z

8.35.1 Constructor & Destructor Documentation

```
8.35.1.1 THPoint::THPoint (void)
```

8.35.1.2 THPoint::THPoint (uint16_t x, uint16_t y, uint16_t z)

8.35.2 Member Function Documentation

```
8.35.2.1 bool THPoint::operator!= ( THPoint p1 )
```

8.35.2.2 bool THPoint::operator== (THPoint *p1*)

8.35.3 Field Documentation

8.35.3.1 uint16_t THPoint::x

8.35.3.2 uint16_t THPoint::y

8.35.3.3 uint16_t THPoint::z


The documentation for this class was generated from the following files:

- src/GUIslice_th.h
- src/GUIslice_th.cpp

8.36 TouchHandler Class Reference

```
#include <GUIslice_th.h>
```

Inheritance diagram for TouchHandler:

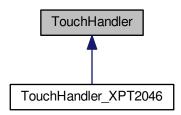

Public Member Functions

- TouchHandler ()
- void setSize (uint16_t _disp_xSize, uint16_t _disp_ySize)
- void setCalibration (uint16_t ts_xMin, uint16_t ts_xMax, uint16_t ts_yMin, uint16_t ts_yMax)
- void setSwapFlip (bool _swapXY, bool _flipX, bool _flipY)
- THPoint scale (THPoint pln)
- virtual void begin (void)
- virtual THPoint getPoint (void)

8.36.1 Constructor & Destructor Documentation

8.36.1.1 TouchHandler::TouchHandler() [inline]

8.36.2 Member Function Documentation

8.36.2.1 void TouchHandler::begin (void) [virtual]

Reimplemented in TouchHandler_XPT2046.

8.36.2.2 THPoint TouchHandler::getPoint (void) [virtual]

Reimplemented in TouchHandler_XPT2046.

- 8.36.2.3 THPoint TouchHandler::scale (THPoint pln)
- 8.36.2.4 void TouchHandler::setCalibration (uint16_t ts_xMin, uint16_t ts_xMax, uint16_t ts_yMin, uint16_t ts_yMax)
- 8.36.2.5 void TouchHandler::setSize (uint16_t _disp_xSize, uint16_t _disp_ySize)
- 8.36.2.6 void TouchHandler::setSwapFlip (bool _swapXY, bool _flipX, bool _flipY)


The documentation for this class was generated from the following files:

- · src/GUIslice_th.h
- src/GUIslice_th.cpp


8.37 TouchHandler_XPT2046 Class Reference

```
#include <GUIslice_th_XPT2046.h>
```

Inheritance diagram for TouchHandler_XPT2046:

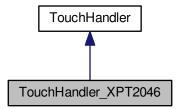

Collaboration diagram for TouchHandler_XPT2046:

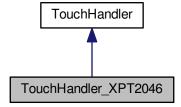

Public Member Functions

- TouchHandler_XPT2046 (SPIClass &spi, uint8_t spi_cs_pin)
- void begin (void)
- THPoint getPoint (void)

Data Fields

- SPIClass spi
- XPT2046_touch touchDriver

8.37.1 Constructor & Destructor Documentation

```
8.37.1.1 TouchHandler_XPT2046::TouchHandler_XPT2046 ( SPIClass & spi, uint8_t spi_cs_pin ) [inline]
```

8.37.2 Member Function Documentation

```
8.37.2.1 void TouchHandler_XPT2046::begin (void ) [inline], [virtual]
```

Reimplemented from TouchHandler.

```
8.37.2.2 THPoint TouchHandler_XPT2046::getPoint (void ) [inline], [virtual]
```

Reimplemented from TouchHandler.

8.37.3 Field Documentation

```
8.37.3.1 SPIClass TouchHandler_XPT2046::spi
```

8.37.3.2 XPT2046_touch TouchHandler_XPT2046::touchDriver

The documentation for this class was generated from the following file:

• src/GUIslice_th_XPT2046.h

Chapter 9


File Documentation

9.1 README.md File Reference

9.2 src/elem/XCheckbox.c File Reference

```
#include "GUIslice.h"
#include "GUIslice_drv.h"
#include "elem/XCheckbox.h"
#include <stdio.h>
```

Include dependency graph for XCheckbox.c:

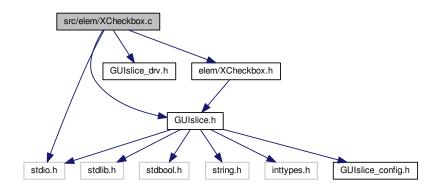

Functions

gslc_tsElemRef * gslc_ElemXCheckboxCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_
tsXCheckbox *pXData, gslc_tsRect rElem, bool bRadio, gslc_teXCheckboxStyle nStyle, gslc_tsColor col
Check, bool bChecked)

Create a Checkbox or Radio button Element.

• bool gslc ElemXCheckboxGetState (gslc tsGui *pGui, gslc tsElemRef *pElemRef)

Get a Checkbox element's current state.

• gslc_tsElemRef * gslc_ElemXCheckboxFindChecked (gslc_tsGui *pGui, int16_t nGroupId)

Find the checkbox within a group that has been checked.

 void gslc_ElemXCheckboxSetStateFunc (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, GSLC_CB_XCH← ECKBOX pfuncCb)

Assign the state callback function for a checkbox/radio button.

- void gslc_ElemXCheckboxSetStateHelp (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bChecked, bool bDoCb)
- $\bullet \ \ void \ gslc_ElemXCheckboxSetState \ (gslc_tsGui \ *pGui, \ gslc_tsElemRef \ *pElemRef, \ bool \ bChecked)\\$

Set a Checkbox element's current state.

void gslc_ElemXCheckboxToggleState (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Toggle a Checkbox element's current state.

• bool gslc_ElemXCheckboxDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)

Draw a Checkbox element on the screen.

bool gslc_ElemXCheckboxTouch (void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY)

Handle touch events to Checkbox element.

Variables

- const char GSLC_PMEM ERRSTR_NULL []
- const char GSLC_PMEM ERRSTR_PXD_NULL []

9.2.1 Function Documentation

9.2.1.1 gslc_tsElemRef* gslc_ElemXCheckboxCreate (gslc_tsGui * pGui, int16_t nPlemId, int16_t nPage, gslc_tsXCheckbox * pXData, gslc_tsRect rElem, bool bRadio, gslc_teXCheckboxStyle nStyle, gslc_tsColor colCheck, bool bChecked)

Create a Checkbox or Radio button Element.

Parameters

in	pGui	Pointer to GUI
in	nElemId Element ID to assign (016383 or GSLC_ID_AUTO to autoge	
in	nPage	Page ID to attach element to
in	pXData	Ptr to extended element data structure
in	rElem	Rectangle coordinates defining checkbox size
in	bRadio	Radio-button functionality if true
in	nStyle	Drawing style for checkbox / radio button
in	colCheck	Color for inner fill when checked
in	bChecked	Default state

Returns

Pointer to Element reference or NULL if failure

9.2.1.2 bool gslc_ElemXCheckboxDraw (void * pvGui, void * pvElemRef, gslc_teRedrawType eRedraw)

Draw a Checkbox element on the screen.

• Called from gslc_ElemDraw()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
in	eRedraw	Redraw mode

Returns

true if success, false otherwise

9.2.1.3 gslc_tsElemRef* gslc_ElemXCheckboxFindChecked (gslc_tsGui * pGui, int16_t nGroupId)

Find the checkbox within a group that has been checked.

Parameters

in	pGui	Pointer to GUI
in	n⊷	Group ID to search
	GroupId	

Returns

Element Ptr or NULL if none checked

9.2.1.4 bool gslc_ElemXCheckboxGetState (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef)

Get a Checkbox element's current state.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference

Returns

Current state

9.2.1.5 void gslc_ElemXCheckboxSetState ($gslc_tsGui*pGui, gslc_tsElemRef*pElemRef, bool bChecked$)

Set a Checkbox element's current state.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	bChecked	New state

Returns

none

9.2.1.6 void gslc_ElemXCheckboxSetStateFunc (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, GSLC_CB_XCHECKBOX pfuncCb)

Assign the state callback function for a checkbox/radio button.

Parameters

	in	pGui	Pointer to GUI
ĺ	in	pElemRef	Pointer to Element reference
ĺ	in	pfuncCb	Function pointer to callback routine (or NULL for none)

Returns

none

- 9.2.1.7 void gslc_ElemXCheckboxSetStateHelp ($gslc_tsGui*pGui, gslc_tsElemRef*pElemRef, bool bChecked, bool bDoCb$)
- 9.2.1.8 void gslc_ElemXCheckboxToggleState (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef)

Toggle a Checkbox element's current state.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference

Returns

none

9.2.1.9 bool gslc_ElemXCheckboxTouch (void * pvGui, void * pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY)

Handle touch events to Checkbox element.

• Called from gslc_ElemSendEventTouch()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
in	eTouch	Touch event type
in	nRelX	Touch X coord relative to element
in	nRelY	Touch Y coord relative to element

Returns

true if success, false otherwise


9.2.2 Variable Documentation

9.2.2.1 const char ERRSTR_NULL


9.2.2.2 const char GSLC_PMEM ERRSTR_PXD_NULL[]

9.3 src/elem/XCheckbox.h File Reference

#include "GUIslice.h"
Include dependency graph for XCheckbox.h:

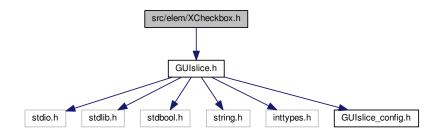

This graph shows which files directly or indirectly include this file:

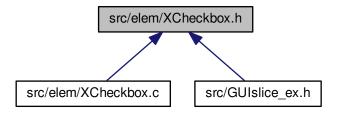

Data Structures

· struct gslc_tsXCheckbox

Extended data for Checkbox element.

Macros

- #define GSLC TYPEX CHECKBOX
- #define gslc_ElemXCheckboxCreate_P(pGui, nElemId, nPage, nX, nY, nW, nH, colFill, bFillEn, nGroup, b
 — Radio_, nStyle_, colCheck_, bChecked_)

Create a Checkbox or Radio button Element in Flash.

Typedefs

• typedef bool(* GSLC_CB_XCHECKBOX) (void *pvGui, void *pvElemRef, int16_t nSelId, bool bChecked)

Callback function for checkbox/radio element state change.

Enumerations

 enum gslc_teXCheckboxStyle { GSLCX_CHECKBOX_STYLE_BOX, GSLCX_CHECKBOX_STYLE_X, G← SLCX_CHECKBOX_STYLE_ROUND }

Checkbox drawing style.

Functions

gslc_tsElemRef * gslc_ElemXCheckboxCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_
tsXCheckbox *pXData, gslc_tsRect rElem, bool bRadio, gslc_teXCheckboxStyle nStyle, gslc_tsColor col
Check, bool bChecked)

Create a Checkbox or Radio button Element.

bool gslc ElemXCheckboxGetState (gslc tsGui *pGui, gslc tsElemRef *pElemRef)

Get a Checkbox element's current state.

void gslc_ElemXCheckboxSetState (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bChecked)
 Set a Checkbox element's current state.

gslc_tsElemRef * gslc_ElemXCheckboxFindChecked (gslc_tsGui *pGui, int16_t nGroupId)

Find the checkbox within a group that has been checked.

• void gslc_ElemXCheckboxToggleState (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Toggle a Checkbox element's current state.

 void gslc_ElemXCheckboxSetStateFunc (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, GSLC_CB_XCH← ECKBOX pfuncCb)

Assign the state callback function for a checkbox/radio button.

bool gslc_ElemXCheckboxDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)

Draw a Checkbox element on the screen.

bool gslc_ElemXCheckboxTouch (void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY)

Handle touch events to Checkbox element.

9.3.1 Macro Definition Documentation

9.3.1.1 #define gslc_ElemXCheckboxCreate_P(pGui, nElemId, nPage, nX, nY, nW, nH, colFill, bFillEn, nGroup, bRadio_, nStyle_, colCheck_, bChecked_)

Create a Checkbox or Radio button Element in Flash.

Parameters

in	pGui	Pointer to GUI
in	nElemId	Unique element ID to assign
in	nPage	Page ID to attach element to
in	nΧ	X coordinate of element
in	nΥ	Y coordinate of element
in	nW	Width of element
in	nH	Height of element
in	colFill	Color for the control background fill
in	bFillEn	True if background filled, false otherwise (recommend True)
in	nGroup	Group ID that radio buttons belong to (else GSLC_GROUP_NONE)
in	bRadio_	Radio-button functionality if true
in	nStyle_	Drawing style for checkbox / radio button
in	col⊷	Color for inner fill when checked
	Check_	
in	b⇔	Default state
	Checked←	
	_	

Returns

none

9.3.1.2 #define GSLC_TYPEX_CHECKBOX

9.3.2 Typedef Documentation

9.3.2.1 typedef bool(* GSLC_CB_XCHECKBOX) (void *pvGui, void *pvElemRef, int16_t nSelld, bool bChecked)

Callback function for checkbox/radio element state change.

- nSelld: Selected element's ID or GSLC_ID_NONE
- · bChecked: Element was selected if true, false otherwise

9.3.3 Enumeration Type Documentation

9.3.3.1 enum gslc_teXCheckboxStyle

Checkbox drawing style.

Enumerator

GSLCX_CHECKBOX_STYLE_BOX Inner box.

GSLCX_CHECKBOX_STYLE_X Crossed.

GSLCX_CHECKBOX_STYLE_ROUND Circular.

9.3.4 Function Documentation

9.3.4.1 gslc_tsElemRef* gslc_ElemXCheckboxCreate (gslc_tsGui * pGui, int16_t nElemId, int16_t nPage, gslc_tsXCheckbox * pXData, gslc_tsRect rElem, bool bRadio, gslc_teXCheckboxStyle nStyle, gslc_tsColor colCheck, bool bChecked)

Create a Checkbox or Radio button Element.

Parameters

in	pGui	Pointer to GUI
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)
in	nPage	Page ID to attach element to
in	pXData	Ptr to extended element data structure
in	rElem	Rectangle coordinates defining checkbox size
in	bRadio	Radio-button functionality if true
in	nStyle	Drawing style for checkbox / radio button
in	colCheck	Color for inner fill when checked
in	bChecked	Default state

Returns

Pointer to Element reference or NULL if failure

9.3.4.2 bool gslc_ElemXCheckboxDraw (void * pvGui, void * pvElemRef, gslc_teRedrawType eRedraw)

Draw a Checkbox element on the screen.

• Called from gslc_ElemDraw()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
in	eRedraw	Redraw mode

Returns

true if success, false otherwise

9.3.4.3 gslc_tsElemRef* gslc_ElemXCheckboxFindChecked (gslc_tsGui * pGui, int16_t nGroupId)

Find the checkbox within a group that has been checked.

Parameters

in	pGui	Pointer to GUI
in	n⊷	Group ID to search
	GroupId	

Returns

Element Ptr or NULL if none checked

9.3.4.4 bool gslc_ElemXCheckboxGetState ($gslc_tsGui*pGui, gslc_tsElemRef*pElemRef$)

Get a Checkbox element's current state.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference

Returns

Current state

9.3.4.5 void gslc_ElemXCheckboxSetState ($gslc_tsGui*pGui, gslc_tsElemRef*pElemRef*, bool bChecked$)

Set a Checkbox element's current state.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	bChecked	New state

Returns

none

9.3.4.6 void gslc_ElemXCheckboxSetStateFunc (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, GSLC_CB_XCHECKBOX pfuncCb)

Assign the state callback function for a checkbox/radio button.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	pfuncCb	Function pointer to callback routine (or NULL for none)

Returns

none

9.3.4.7 void gslc_ElemXCheckboxToggleState (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef)

Toggle a Checkbox element's current state.

Parameters

iı	า	pGui	Pointer to GUI
iı	n .	pElemRef	Pointer to Element reference

Returns

none

9.3.4.8 bool gslc_ElemXCheckboxTouch (void * pvGui, void * pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY)

Handle touch events to Checkbox element.

• Called from gslc_ElemSendEventTouch()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui∗)
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
in	eTouch	Touch event type
in	nRelX	Touch X coord relative to element
in	nRelY	Touch Y coord relative to element


Returns

true if success, false otherwise

9.4 src/elem/XGauge.c File Reference

```
#include "GUIslice.h"
#include "GUIslice_drv.h"
#include "elem/XGauge.h"
#include <stdio.h>
#include <math.h>
```

Include dependency graph for XGauge.c:

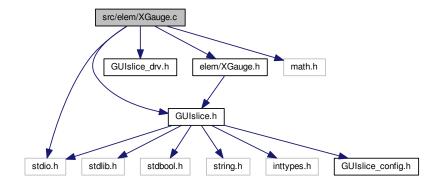

Functions

gslc_tsElemRef * gslc_ElemXGaugeCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsX←
Gauge *pXData, gslc_tsRect rElem, int16_t nMin, int16_t nMax, int16_t nVal, gslc_tsColor colGauge, bool bVert)

Create a Gauge Element.

- void gslc_ElemXGaugeSetStyle (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_teXGaugeStyle nStyle)

 Configure the style of a Gauge element.
- void gslc_ElemXGaugeSetIndicator (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor colGauge, uint16_t nIndicLen, uint16_t nIndicTip, bool bIndicFill)

Configure the appearance of the Gauge indicator.

• void gslc_ElemXGaugeSetTicks (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor colTick, uint16_t nTickCnt, uint16_t nTickLen)

Configure the appearance of the Gauge ticks.

- void gslc_ElemXGaugeUpdate (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nVal)
 - Update a Gauge element's current value.
- void gslc_ElemXGaugeSetFlip (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bFlip)

Set a Gauge element's fill direction.

- bool gslc_ElemXGaugeDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)
 - Draw a gauge element on the screen.
- bool gslc_ElemXGaugeDrawProgressBar (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_teRedraw←
 Type eRedraw)

Helper function to draw a gauge with style: progress bar.

Variables

- const char GSLC_PMEM ERRSTR_NULL []
- const char GSLC_PMEM ERRSTR_PXD_NULL []

9.4.1 Function Documentation

9.4.1.1 gslc_tsElemRef* gslc_ElemXGaugeCreate (gslc_tsGui * pGui, int16_t nElemId, int16_t nPage, gslc_tsXGauge * pXData, gslc_tsRect rElem, int16_t nMin, int16_t nMax, int16_t nVal, gslc_tsColor colGauge, bool bVert)

Create a Gauge Element.

- Draws a gauge element that represents a proportion (nVal) between nMin and nMax.
- Support gauge sub-types:
 - GSLC_TYPEX_GAUGE_PROG_BAR: Horizontal or vertical box with filled region
 - GSLC_TYPEX_GAUGE_RADIAL: Radial / compass indicator
- Default appearance is a horizontal progress bar, but can be changed with gslc_ElemXGaugeSetStyle())

Parameters

in	pGui	Pointer to GUI	
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)	
in	nPage	Page ID to attach element to	
in	pXData	Ptr to extended element data structure	
in	rElem	Rectangle coordinates defining gauge size	
in	nMin	Minimum value of gauge for nVal comparison	
in	nMax	Maximum value of gauge for nVal comparison	
in	nVal	Starting value of gauge	
in	colGauge	uge Color for the gauge indicator	
in	bVert	Flag to indicate vertical vs horizontal action (true = vertical, false = horizontal)	

Returns

Pointer to Element reference or NULL if failure

9.4.1.2 bool gslc_ElemXGaugeDraw (void * pvGui, void * pvElemRef, gslc_teRedrawType eRedraw)

Draw a gauge element on the screen.

• Called from gslc_ElemDraw()

Parameters

in	in pvGui Void ptr to GUI (typecast to gslc_tsGui*)	
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
in	eRedraw	Redraw mode

Returns

true if success, false otherwise

9.4.1.3 bool gslc_ElemXGaugeDrawProgressBar (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, gslc_teRedrawType eRedraw)

Helper function to draw a gauge with style: progress bar.

Called from gslc_ElemXGaugeDraw()

Parameters

in	pGui	Ptr to GUI
in	pElemRef	Ptr to Element reference
in	eRedraw	Redraw status

Returns

true if success, false otherwise

9.4.1.4 void gslc_ElemXGaugeSetFlip (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, bool bFlip)

Set a Gauge element's fill direction.

- · Setting bFlip reverses the default fill direction
- · Default fill direction for horizontal gauges: left-to-right
- · Default fill direction for vertical gauges: bottom-to-top

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	bFlip	If set, reverse direction of fill from default

Returns

none

9.4.1.5 void gslc_ElemXGaugeSetIndicator (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, gslc_tsColor colGauge, uint16_t nIndicLen, uint16_t nIndicTip, bool bIndicFill)

Configure the appearance of the Gauge indicator.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	colGauge	Color of the indicator
in	nIndicLen	Length of the indicator
in	nIndicTip	Size of the indicator tip
in	bIndicFill	Fill in the indicator if true

Returns

none

9.4.1.6 void gslc_ElemXGaugeSetStyle (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, gslc_teXGaugeStyle nType)

Configure the style of a Gauge element.

• This function is used to select between one of several gauge types (eg. progress bar, radial dial, etc.)

Parameters

	in	pGui	Pointer to GUI
	in pElemRef in nType		Pointer to Element reference
			Gauge style enumeration

Returns

none

9.4.1.7 void gslc_ElemXGaugeSetTicks ($gslc_tsGui*pGui, gslc_tsElemRef*pElemRef, gslc_tsColor colTick, uint16_t nTickCnt, uint16_t nTickLen$)

Configure the appearance of the Gauge ticks.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	colTick	Color of the gauge ticks
in	nTickCnt	Number of ticks to draw around / along gauge
in	nTickLen	Length of the tick marks to draw

Returns

none

9.4.1.8 void gslc_ElemXGaugeUpdate (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, int16_t nVal)

Update a Gauge element's current value.

• Note that min & max values are assigned in create()

Parameters

	in	pGui	Pointer to GUI
	in	pElemRef	Pointer to Element reference
ĺ	in	nVal	New value to show in gauge

Returns

none


9.4.2 Variable Documentation

9.4.2.1 const char GSLC_PMEM ERRSTR_NULL[]


9.4.2.2 const char GSLC_PMEM ERRSTR_PXD_NULL[]

9.5 src/elem/XGauge.h File Reference

#include "GUIslice.h"
Include dependency graph for XGauge.h:

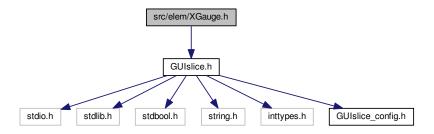

This graph shows which files directly or indirectly include this file:

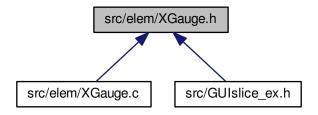

Data Structures

struct gslc_tsXGauge

Extended data for Gauge element.

Macros

- #define GSLC TYPEX GAUGE
- #define gslc_ElemXGaugeCreate_P(pGui, nElemId, nPage, nX, nY, nW, nH, nMin_, nMax_, nVal_, col
 Frame_, colFill_, colGauge_, bVert_)

Create a Gauge Element in Flash.

Enumerations

 enum gslc_teXGaugeStyle { GSLCX_GAUGE_STYLE_PROG_BAR, GSLCX_GAUGE_STYLE_RADIAL, GSLCX GAUGE STYLE RAMP}

Gauge drawing style.

Functions

 gslc_tsElemRef * gslc_ElemXGaugeCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsX← Gauge *pXData, gslc_tsRect rElem, int16_t nMin, int16_t nMax, int16_t nVal, gslc_tsColor colGauge, bool bVert)

Create a Gauge Element.

- void gslc_ElemXGaugeSetStyle (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_teXGaugeStyle nType)

 Configure the style of a Gauge element.
- void gslc_ElemXGaugeSetIndicator (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor colGauge, uint16_t nIndicLen, uint16_t nIndicTip, bool bIndicFill)

Configure the appearance of the Gauge indicator.

 void gslc_ElemXGaugeSetTicks (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor colTick, uint16_t nTickCnt, uint16_t nTickLen)

Configure the appearance of the Gauge ticks.

• void gslc_ElemXGaugeUpdate (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nVal)

Update a Gauge element's current value.

- void gslc_ElemXGaugeSetFlip (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bFlip)

 Set a Gauge element's fill direction.
- bool gslc_ElemXGaugeDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)

 Draw a gauge element on the screen.
- bool gslc_ElemXGaugeDrawProgressBar (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_teRedraw←
 Type eRedraw)

Helper function to draw a gauge with style: progress bar.

9.5.1 Macro Definition Documentation

9.5.1.1 #define gslc_ElemXGaugeCreate_P(pGui, nElemId, nPage, nX, nY, nW, nH, nMin_, nMax_, nVal_, colFrame_, colFill_, colGauge_, bVert_)

Create a Gauge Element in Flash.

Parameters

in	pGui	Pointer to GUI
in	nElemId	Unique element ID to assign
in	nPage	Page ID to attach element to
in	nX	X coordinate of element
in	nΥ	Y coordinate of element
in	nW	Width of element
in	nΗ	Height of element
in	nMin_	Minimum value of gauge for nVal comparison
in	nMax_	Maximum value of gauge for nVal comparison
in	nVal_	Starting value of gauge
in	col⊷	Color for the gauge frame
	Frame_	
in	colFill_	Color for the gauge background fill
in	col⊷	Color for the gauge indicator
	Gauge_	
in	bVert_	Flag to indicate vertical vs horizontal action (true = vertical, false = horizontal)

Returns

none

- 9.5.1.2 #define GSLC_TYPEX_GAUGE
- 9.5.2 Enumeration Type Documentation
- 9.5.2.1 enum gslc_teXGaugeStyle

Gauge drawing style.

Enumerator

GSLCX_GAUGE_STYLE_PROG_BAR Progress bar.
GSLCX_GAUGE_STYLE_RADIAL Radial indicator.
GSLCX_GAUGE_STYLE_RAMP Ramp indicator.

9.5.3 Function Documentation

9.5.3.1 gslc_tsElemRef* gslc_ElemXGaugeCreate (gslc_tsGui * pGui, int16_t nElemId, int16_t nPage, gslc_tsXGauge * pXData, gslc_tsRect rElem, int16_t nMin, int16_t nMax, int16_t nVal, gslc_tsColor colGauge, bool bVert)

Create a Gauge Element.

- Draws a gauge element that represents a proportion (nVal) between nMin and nMax.
- Support gauge sub-types:
 - GSLC_TYPEX_GAUGE_PROG_BAR: Horizontal or vertical box with filled region
 - GSLC_TYPEX_GAUGE_RADIAL: Radial / compass indicator
- Default appearance is a horizontal progress bar, but can be changed with gslc_ElemXGaugeSetStyle())

Parameters

in	pGui	Pointer to GUI
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)
in	nPage	Page ID to attach element to
in	pXData	Ptr to extended element data structure
in	rElem	Rectangle coordinates defining gauge size
in	nMin	Minimum value of gauge for nVal comparison
in	nMax	Maximum value of gauge for nVal comparison
in	nVal	Starting value of gauge
in	colGauge	Color for the gauge indicator
in	bVert	Flag to indicate vertical vs horizontal action (true = vertical, false = horizontal)

Returns

Pointer to Element reference or NULL if failure

9.5.3.2 bool gslc_ElemXGaugeDraw (void * pvGui, void * pvElemRef, gslc_teRedrawType eRedraw)

Draw a gauge element on the screen.

• Called from gslc_ElemDraw()

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
in	eRedraw	Redraw mode

Returns

true if success, false otherwise

9.5.3.3 bool gslc_ElemXGaugeDrawProgressBar (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, gslc_teRedrawType eRedraw)

Helper function to draw a gauge with style: progress bar.

• Called from gslc_ElemXGaugeDraw()

Parameters

in	pGui	Ptr to GUI
in	pElemRef	Ptr to Element reference
in	eRedraw	Redraw status

Returns

true if success, false otherwise

9.5.3.4 void gslc_ElemXGaugeSetFlip (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, bool bFlip)

Set a Gauge element's fill direction.

- · Setting bFlip reverses the default fill direction
- · Default fill direction for horizontal gauges: left-to-right
- Default fill direction for vertical gauges: bottom-to-top

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	bFlip	If set, reverse direction of fill from default

Returns

none

9.5.3.5 void gslc_ElemXGaugeSetIndicator (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, gslc_tsColor colGauge, uint16_t nIndicLen, uint16_t nIndicTip, bool bIndicFill)

Configure the appearance of the Gauge indicator.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	colGauge	Color of the indicator
in	nIndicLen	Length of the indicator
in	nIndicTip	Size of the indicator tip
in	bIndicFill	Fill in the indicator if true

Returns

none

9.5.3.6 void gslc_ElemXGaugeSetStyle (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, gslc_teXGaugeStyle nType)

Configure the style of a Gauge element.

• This function is used to select between one of several gauge types (eg. progress bar, radial dial, etc.)

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in <i>nType</i>		Gauge style enumeration

Returns

none

9.5.3.7 void gslc_ElemXGaugeSetTicks ($gslc_tsGui*pGui, gslc_tsElemRef*pElemRef, gslc_tsColor colTick, uint16_t nTickCnt, uint16_t nTickLen$)

Configure the appearance of the Gauge ticks.

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	colTick	Color of the gauge ticks
in	nTickCnt	Number of ticks to draw around / along gauge
in	nTickLen	Length of the tick marks to draw

Returns

none

9.5.3.8 void gslc_ElemXGaugeUpdate (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, int16_t nVal)

Update a Gauge element's current value.

• Note that min & max values are assigned in create()

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nVal	New value to show in gauge


Returns

none

9.6 src/elem/XGlowball.c File Reference

```
#include "GUIslice.h"
#include "GUIslice_drv.h"
#include "elem/XGlowball.h"
#include <stdio.h>
```

Include dependency graph for XGlowball.c:

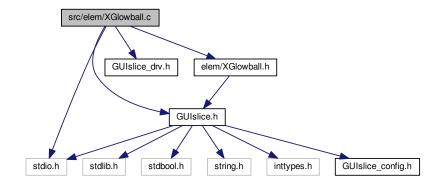

Functions

 gslc_tsElemRef * gslc_ElemXGlowballCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsX← Glowball *pXData, int16_t nMidX, int16_t nMidY, gslc_tsXGlowballRing *pRings, uint8_t nNumRings)

Create a XGlowball element.

- void drawXGlowballArc (gslc_tsGui *pGui, gslc_tsXGlowball *pGlowball, int16_t nMidX, int16_t nMidX, int16_t nRad1, int16_t nRad2, gslc_tsColor cArc, uint16_t nAngStart, uint16_t nAngEnd)
- void drawXGlowballRing (gslc_tsGui *pGui, gslc_tsXGlowball *pGlowball, int16_t nMidX, int16_t nMidX, int16_t nAngStart, uint16_t nAngEnd, bool bErase)
- void drawXGlowball (gslc_tsGui *pGui, gslc_tsXGlowball *pGlowball, int16_t nMidX, int16_t nMidY, int16_t nVal, uint16_t nAngStart, uint16_t nAngEnd)
- void gslc_ElemXGlowballSetVal (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nVal)
- void gslc_ElemXGlowballSetAngles (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nAngStart, int16_t nAngEnd)
- void gslc ElemXGlowballSetQuality (gslc tsGui *pGui, gslc tsElemRef *pElemRef, uint16 t nQuality)
- void gslc ElemXGlowballSetColorBack (gslc tsGui *pGui, gslc tsElemRef *pElemRef, gslc tsColor colBg)
- bool gslc_ElemXGlowballDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)

Draw the XGlowball element on the screen.

Variables

- const char GSLC_PMEM ERRSTR_NULL []
- const char GSLC_PMEM ERRSTR_PXD_NULL []

9.6.1 Function Documentation

- 9.6.1.1 void drawXGlowball (gslc_tsGui * pGui, gslc_tsXGlowball * pGlowball, int16_t nMidX, int16_t nMidX, int16_t nNidY, int16_t nVal, uint16_t nAngStart, uint16_t nAngEnd)
- 9.6.1.2 void drawXGlowballArc (gslc_tsGui * pGui, gslc_tsXGlowball * pGlowball, int16_t nMidX, int16_t nMidX, int16_t nRad2, gslc_tsColor cArc, uint16_t nAngStart, uint16_t nAngEnd)
- 9.6.1.3 void drawXGlowballRing (gslc_tsGui * pGui, gslc_tsXGlowball * pGlowball, int16_t nMidX, int16_t nMidX, int16_t nMidX, int16_t nAngStart, uint16_t nAngEnd, bool bErase)
- 9.6.1.4 gslc_tsElemRef* gslc_ElemXGlowballCreate (gslc_tsGui * pGui, int16_t nElemId, int16_t nPage, gslc_tsXGlowball * pXData, int16_t nMidX, int16_t nMidY, gslc_tsXGlowballRing * pRings, uint8_t nNumRings)

Create a XGlowball element.

in	pGui	Pointer to GUI
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)
in	nPage	Page ID to attach element to
in	pXData	Ptr to extended element data structure
in	nMidX	Center X coordinate
in	nMidY	Center Y coordinate
in	pRings	Pointer to tsXGlowballRing structure array defining appearance
in	nNumRings	Number of rings in pRings array

Returns

Pointer to Element reference or NULL if failure

9.6.1.5 bool gslc_ElemXGlowballDraw (void * pvGui, void * pvElemRef, gslc_teRedrawType eRedraw)

Draw the XGlowball element on the screen.

• Called from gslc_ElemDraw()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element (typecast to gslc_tsElemRef*)
in	eRedraw	Redraw mode

Returns


true if success, false otherwise

- 9.6.1.6 void gslc_ElemXGlowballSetAngles (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, int16_t nAngStart, int16_t nAngEnd)
- 9.6.1.7 void gslc_ElemXGlowballSetColorBack (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, gslc_tsColor colBg)
- 9.6.1.8 void gslc_ElemXGlowballSetQuality (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, uint16_t nQuality)
- 9.6.1.9 void gslc_ElemXGlowballSetVal ($gslc_tsGui*pGui, gslc_tsElemRef*pElemRef, int16_t nVal$)
- 9.6.2 Variable Documentation
- 9.6.2.1 const char GSLC_PMEM ERRSTR_NULL[]
- 9.6.2.2 const char GSLC_PMEM ERRSTR_PXD_NULL[]


9.7 src/elem/XGlowball.h File Reference

#include "GUIslice.h"

Include dependency graph for XGlowball.h:

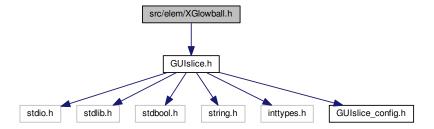

This graph shows which files directly or indirectly include this file:

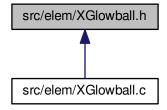

Data Structures

- struct gslc tsXGlowballRing
- struct gslc_tsXGlowball

Extended data for Slider element.

Macros

#define GSLC_TYPEX_GLOW

Functions

gslc_tsElemRef * gslc_ElemXGlowballCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsX
 Glowball *pXData, int16_t nMidX, int16_t nMidY, gslc_tsXGlowballRing *pRings, uint8_t nNumRings)

Create a XGlowball element.

bool gslc ElemXGlowballDraw (void *pvGui, void *pvElemRef, gslc teRedrawType eRedraw)

Draw the XGlowball element on the screen.

- void drawXGlowballArc (gslc_tsGui *pGui, gslc_tsXGlowball *pGlowball, int16_t nMidX, int16_t nMidY, int16 t nRad1, int16 t nRad2, gslc tsColor cArc, uint16 t nAngStart, uint16 t nAngEnd)
- void drawXGlowballRing (gslc_tsGui *pGui, gslc_tsXGlowball *pGlowball, int16_t nMidX, int16_t nMidY, int16_t nVal, uint16_t nAngStart, uint16_t nAngEnd, bool bErase)
- void drawXGlowball (gslc_tsGui *pGui, gslc_tsXGlowball *pGlowball, int16_t nMidX, int16_t nMidY, int16_t nVal, uint16_t nAngStart, uint16_t nAngEnd)
- void gslc_ElemXGlowballSetAngles (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nAngStart, int16_t nAngEnd)
- void gslc_ElemXGlowballSetVal (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nVal)
- void gslc_ElemXGlowballSetQuality (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, uint16_t nQuality)
- void gslc_ElemXGlowballSetColorBack (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor colBg)

- 9.7.1 Macro Definition Documentation
- 9.7.1.1 #define GSLC_TYPEX_GLOW
- 9.7.2 Function Documentation
- 9.7.2.1 void drawXGlowball (gslc_tsGui * pGui, gslc_tsXGlowball * pGlowball, int16_t nMidX, int16_t nMidX, int16_t nNidY, int
- 9.7.2.2 void drawXGlowballArc (gslc_tsGui * pGui, gslc_tsXGlowball * pGlowball, int16_t nMidX, int16_t nMidX, int16_t nRad2, gslc_tsColor cArc, uint16_t nAngStart, uint16_t nAngEnd)
- 9.7.2.3 void drawXGlowballRing (gslc_tsGui * pGui, gslc_tsXGlowball * pGlowball, int16_t nMidX, int16_t nMidX, int16_t nAngStart, uint16_t nAngEnd, bool bErase)
- 9.7.2.4 gslc_tsElemRef* gslc_ElemXGlowballCreate (gslc_tsGui * pGui, int16_t nElemId, int16_t nPage, gslc_tsXGlowball * pXData, int16_t nMidX, int16_t nMidY, gslc_tsXGlowballRing * pRings, uint8_t nNumRings)

Create a XGlowball element.

Parameters

in	pGui	Pointer to GUI	
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)	
in	nPage	Page ID to attach element to	
in	pXData	Ptr to extended element data structure	
in	nMidX	Center X coordinate	
in	nMidY	Center Y coordinate	
in	pRings	Pointer to tsXGlowballRing structure array defining appearance	
in	nNumRings	Number of rings in pRings array	

Returns

Pointer to Element reference or NULL if failure

9.7.2.5 bool gslc ElemXGlowballDraw (void * pvGui, void * pvElemRef, gslc teRedrawType eRedraw)

Draw the XGlowball element on the screen.

Called from gslc_ElemDraw()

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element (typecast to gslc_tsElemRef*)
in	eRedraw	Redraw mode

Returns

true if success, false otherwise

9.7.2.6 void gslc_ElemXGlowballSetAngles (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, int16_t nAngStart, int16_t nAngEnd)

9.7.2.7 void gslc_ElemXGlowballSetColorBack (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, gslc_tsColor colBg)


9.7.2.8 void gslc_ElemXGlowballSetQuality(gslc_tsGui * *pGui*, gslc_tsElemRef * *pElemRef*, uint16_t *nQuality*)

9.7.2.9 void gslc_ElemXGlowballSetVal (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, int16_t nVal)

9.8 src/elem/XGraph.c File Reference

```
#include "GUIslice.h"
#include "GUIslice_drv.h"
#include "elem/XGraph.h"
#include <stdio.h>
```

Include dependency graph for XGraph.c:

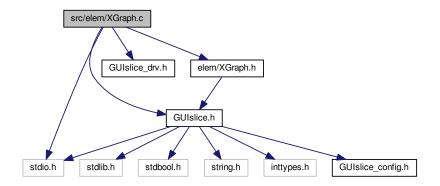

Functions

- gslc_tsElemRef * gslc_ElemXGraphCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsX
 Graph *pXData, gslc_tsRect rElem, int16_t nFontId, int16_t *pBuf, uint16_t nBufMax, gslc_tsColor colGraph)
 Create a Graph Element.
- void gslc_ElemXGraphSetStyle (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_teXGraphStyle eStyle, uint8_t nMargin)

Set the graph's additional drawing characteristics.

Set the graph's drawing range.

void gslc_ElemXGraphScrollSet (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, uint8_t nScrollPos, uint8_t nScrollMax)

Set the graph scroll position (nScrollPos) as a fraction of nScrollMax.

void gslc_ElemXGraphAdd (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nVal)

Add a value to the graph at the latest position.

bool gslc_ElemXGraphDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)

Draw a Graph element on the screen.

Variables

- const char GSLC_PMEM ERRSTR_NULL []
- const char GSLC_PMEM ERRSTR_PXD_NULL []

9.8.1 Function Documentation

9.8.1.1 void gslc_ElemXGraphAdd (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, int16_t nVal)

Add a value to the graph at the latest position.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nVal	Data value to add

Returns

none

9.8.1.2 gslc_tsElemRef* gslc_ElemXGraphCreate (gslc_tsGui * pGui, int16_t nElemId, int16_t nPage, gslc_tsXGraph * pXData, gslc_tsRect rElem, int16_t nFontId, int16_t * pBuf, uint16_t nBufRows, gslc_tsColor colGraph)

Create a Graph Element.

Parameters

in	pGui	Pointer to GUI	
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)	
in	nPage	Page ID to attach element to	
in	pXData	Ptr to extended element data structure	
in	rElem	Rectangle coordinates defining checkbox size	
in	nFontId	Font ID to use for graph area	
in	pBuf	Ptr to data buffer (already allocated) with size (nBufMax)	
		int16_t	
in	nBufRows	fRows Maximum number of points in buffer	
in	colGraph	Color of the graph	

Returns

Pointer to Element reference or NULL if failure

9.8.1.3 bool gslc_ElemXGraphDraw (void * pvGui, void * pvElemRef, gslc_teRedrawType eRedraw)

Draw a Graph element on the screen.

• Called from gslc_ElemDraw()

Parameters

	in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
	in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
in eRedraw Redraw mode		Redraw mode	

Returns

true if success, false otherwise

9.8.1.4 void gslc_ElemXGraphScrollSet ($gslc_tsGui*pGui, gslc_tsElemRef*pElemRef, uint8_t nScrollPos, uint8_t nScrollMax)$

Set the graph scroll position (nScrollPos) as a fraction of nScrollMax.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nScrollPos	New scroll position
in	nScrollMax	Maximum scroll position

Returns

none

9.8.1.5 void gslc_ElemXGraphSetRange (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, int16_t nYMin, int16_t nYMax)

Set the graph's drawing range.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nYMin	Minimum Y value to draw
in	nYMax	Maximum Y value to draw

Returns

none

9.8.1.6 void gslc_ElemXGraphSetStyle ($gslc_tsGui*pGui, gslc_tsElemRef*pElemRef, gslc_teXGraphStyle eStyle, uint8_t nMargin)$

Set the graph's additional drawing characteristics.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	eStyle Drawing style for the graph	
in	nMargin	Margin to provide around graph area inside frame

Returns

none


9.8.2 Variable Documentation

9.8.2.1 const char GSLC_PMEM ERRSTR_NULL[]


9.8.2.2 const char GSLC_PMEM ERRSTR_PXD_NULL[]

9.9 src/elem/XGraph.h File Reference

#include "GUIslice.h"
Include dependency graph for XGraph.h:

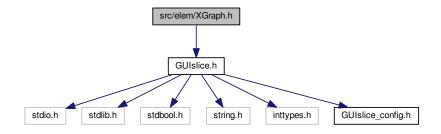

This graph shows which files directly or indirectly include this file:

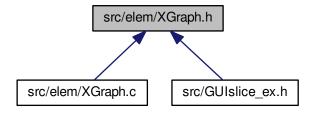

Data Structures

· struct gslc tsXGraph

Extended data for Graph element.

Macros

• #define GSLC_TYPEX_GRAPH

Enumerations

enum gslc_teXGraphStyle { GSLCX_GRAPH_STYLE_DOT, GSLCX_GRAPH_STYLE_LINE, GSLCX_GRAPH_STYLE_FILL }

Gauge drawing style.

Functions

gslc_tsElemRef * gslc_ElemXGraphCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsX←
Graph *pXData, gslc_tsRect rElem, int16_t nFontId, int16_t *pBuf, uint16_t nBufRows, gslc_tsColor col←
Graph)

Create a Graph Element.

 void gslc_ElemXGraphSetStyle (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_teXGraphStyle eStyle, uint8_t nMargin)

Set the graph's additional drawing characteristics.

Set the graph's drawing range.

bool gslc_ElemXGraphDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)

Draw a Graph element on the screen.

void gslc_ElemXGraphAdd (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nVal)

Add a value to the graph at the latest position.

void gslc_ElemXGraphScrollSet (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, uint8_t nScrollPos, uint8_t nScrollMax)

Set the graph scroll position (nScrollPos) as a fraction of nScrollMax.

9.9.1 Macro Definition Documentation

9.9.1.1 #define GSLC_TYPEX_GRAPH

9.9.2 Enumeration Type Documentation

9.9.2.1 enum gslc_teXGraphStyle

Gauge drawing style.

Enumerator

```
GSLCX_GRAPH_STYLE_DOT Dot.

GSLCX_GRAPH_STYLE_LINE Line.

GSLCX_GRAPH_STYLE_FILL Filled.
```

9.9.3 Function Documentation

9.9.3.1 void gslc_ElemXGraphAdd (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, int16_t nVal)

Add a value to the graph at the latest position.

Parameters

	in	pGui	Pointer to GUI
ſ	in	pElemRef	Pointer to Element reference
Ī	in	nVal	Data value to add

Returns

none

9.9.3.2 gslc_tsElemRef* gslc_ElemXGraphCreate (gslc_tsGui * pGui, int16_t nElemId, int16_t nPage, gslc_tsXGraph * pXData, gslc_tsRect rElem, int16_t nFontId, int16_t * pBuf, uint16_t nBufRows, gslc_tsColor colGraph)

Create a Graph Element.

Parameters

in	pGui	Pointer to GUI	
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)	
in	nPage	Page ID to attach element to	
in	pXData	Ptr to extended element data structure	
in	rElem	Rectangle coordinates defining checkbox size	
in	nFontId	Font ID to use for graph area	
in	pBuf	Ptr to data buffer (already allocated) with size (nBufMax)	
	int16_t		
in	nBufRows	ufRows Maximum number of points in buffer	
in	colGraph	Color of the graph	

Returns

Pointer to Element reference or NULL if failure

9.9.3.3 bool gslc_ElemXGraphDraw (void * pvGui, void * pvElemRef, gslc_teRedrawType eRedraw)

Draw a Graph element on the screen.

• Called from gslc_ElemDraw()

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
in	eRedraw	Redraw mode

Returns

true if success, false otherwise

9.9.3.4 void gslc_ElemXGraphScrollSet (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, uint8_t nScrollPos, uint8_t nScrollMax)

Set the graph scroll position (nScrollPos) as a fraction of nScrollMax.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nScrollPos	New scroll position
in	nScrollMax	Maximum scroll position

Returns

none

9.9.3.5 void gslc_ElemXGraphSetRange (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, int16_t nYMin, int16_t nYMax)

Set the graph's drawing range.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nYMin	Minimum Y value to draw
in	nYMax	Maximum Y value to draw

Returns

none

9.9.3.6 void gslc_ElemXGraphSetStyle (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, gslc_teXGraphStyle eStyle, uint8_t nMargin)

Set the graph's additional drawing characteristics.

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	eStyle	Drawing style for the graph
in	nMargin	Margin to provide around graph area inside frame


Returns

none

9.10 src/elem/XKeyPad.c File Reference

```
#include "GUIslice.h"
#include "GUIslice_drv.h"
#include "elem/XKeyPad.h"
#include <stdio.h>
```

Include dependency graph for XKeyPad.c:

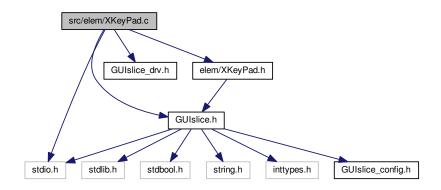

Functions

void XKeyPadAddKeyElem (gslc_tsGui *pGui, gslc_tsXKeyPad *pXData, int16_t nKeyId, bool bTxtField, int16_t nRow, int16_t nCol, int8_t nRowSpan, int8_t nColSpan, gslc_tsColor cColFill, gslc_tsColor cCol← Glow, bool bVisible)

Add a key to the KeyPad control.

gslc_tsElemRef * gslc_ElemXKeyPadCreateBase (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc
 _tsXKeyPad *pXData, int16_t nX0, int16_t nY0, int8_t nFontId, gslc_tsXKeyPadCfg *pConfig, XKEYPAD_←
 CREATE pfuncCreate, XKEYPAD_LOOKUP pfuncLookup)

Create a KeyPad Element.

- void gslc_ElemXKeyPadValSet (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, const char *pStrBuf)

 Set the current value for the editable text field.
- void gslc_ElemXKeyPadTargetIdSet (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nTargetId)
 Set target element ID for KeyPad return value.
- int16_t gslc_ElemXKeyPadDataTargetIdGet (gslc_tsGui *pGui, void *pvData)

Fetch the element target ID associated with this KeyPad.

• char * gslc_ElemXKeyPadDataValGet (gslc_tsGui *pGui, void *pvData)

Fetch the edited value string from the KeyPad.

bool gslc_ElemXKeyPadValGet (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, char *pStrBuf, uint8_t nStr
 — BufLen)

Set the current output string buffer associated with NumericInput element.

bool gslc_ElemXKeyPadDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)

Draw a KeyPad element on the screen.

void gslc_ElemXKeyPadValSetCb (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, GSLC_CB_INPUT pfuncCb)

Set the callback function associated with the KeyPad.

- void gslc ElemXKeyPadValSetSign (gslc tsGui *pGui, gslc tsElemRef *pElemRef, bool bPositive)
- bool ElemXKeyPadAddChar (gslc_tsGui *pGui, gslc_tsXKeyPad *pKeyPad, char ch)
- bool gslc_ElemXKeyPadClick (void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nX, int16_t nY)

 Handle a click event within the KeyPad.
- bool gslc_ElemXKeyPadTouch (void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY)

Handle touch (up,down,move) events to KeyPad element.

void gslc_ElemXKeyPadCfgSetButtonSz (gslc_tsXKeyPadCfg *pConfig, int8_t nButtonSzW, int8_t nButton←
 SzH)

Update the KeyPad configuration to define the KeyPad button sizing.

void gslc_ElemXKeyPadCfgSetFloatEn (gslc_tsXKeyPadCfg *pConfig, bool bEn)

Update the KeyPad configuration to enable floating point numbers.

void gslc_ElemXKeyPadCfgSetSignEn (gslc_tsXKeyPadCfg *pConfig, bool bEn)

Update the KeyPad configuration to enable negative numbers.

void gslc_ElemXKeyPadCfgSetRoundEn (gslc_tsXKeyPadCfg *pConfig, bool bEn)

Update the KeyPad configuration to enable rounded button corners.

• void gslc_ElemXKeyPadSetFloatEn (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bEn)

Update the KeyPad active configuration to enable negative numbers.

void gslc_ElemXKeyPadSetSignEn (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bEn)

Update the KeyPad active configuration to enable negative numbers.

Variables

- const char GSLC PMEM ERRSTR NULL []
- const char GSLC_PMEM ERRSTR_PXD_NULL []
- const char KEYPAD DISP NEGATIVE
- const char KEYPAD_DISP_DECIMAL_PT

9.10.1 Function Documentation

9.10.1.1 bool ElemXKeyPadAddChar (gslc_tsGui * pGui, gslc_tsXKeyPad * pKeyPad, char ch)

9.10.1.2 void gslc_ElemXKeyPadCfgSetButtonSz(_gslc_tsXKeyPadCfg * pConfig, int8_t nButtonSzW, int8_t nButton

Update the KeyPad configuration to define the KeyPad button sizing.

Parameters

	in	pConfig	Pointer to the XKeyPad config structure
	in	nButtonSzW	Width of buttons in pixels
ſ	in	nButtonSzH	Width of buttons in pixels

Returns

none

9.10.1.3 void gslc_ElemXKeyPadCfgSetFloatEn ($gslc_tsXKeyPadCfg*pConfig$, bool bEn)

Update the KeyPad configuration to enable floating point numbers.

• Effectively disables/enables the decimal point button & handling

Parameters

in	pConfig	Pointer to the XKeyPad config structure
in	bEn	Enable flag (true if floating point enabled)

Returns

none

9.10.1.4 void gslc_ElemXKeyPadCfgSetRoundEn ($gslc_tsXKeyPadCfg* pConfig$, bool bEn)

Update the KeyPad configuration to enable rounded button corners.

Parameters

	in	pConfig	Pointer to the XKeyPad config structure
ĺ	in	bEn	Enable rounded corners

Returns

none

9.10.1.5 void gslc_ElemXKeyPadCfgSetSignEn ($gslc_tsXKeyPadCfg*pConfig$, bool bEn)

Update the KeyPad configuration to enable negative numbers.

• Effectively disables/enables the sign button & handling

Parameters

ſ	in	pConfig	Pointer to the XKeyPad config structure
ſ	in	bEn	Enable flag (true if negative numbers enabled)

Returns

none

9.10.1.6 bool gslc_ElemXKeyPadClick (void * pvGui, void * pvElemRef, gslc_teTouch eTouch, int16_t nX, int16_t nY)

Handle a click event within the KeyPad.

• This is called internally by the KeyPad touch handler

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element Ref (typecast to gslc_tsElemRef*)
in	eTouch	Touch event type
in	nX	Touch X coord
in	nY	Touch Y coord

Returns

none

9.10.1.7 gslc_tsElemRef* gslc_ElemXKeyPadCreateBase (gslc_tsGui * pGui, int16_t nElemId, int16_t nPage, gslc_tsXKeyPad * pXData, int16_t nX0, int16_t nY0, int8_t nFontId, gslc_tsXKeyPadCfg * pConfig, XKEYPAD_CREATE pfuncCreate, XKEYPAD_LOOKUP pfuncLookup)

Create a KeyPad Element.

Parameters

in	pGui	Pointer to GUI
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)
in	nPage	Page ID to attach element to
in	pXData	Ptr to extended element data structure
in	nX0	X KeyPad Starting Coordinate
in	nY0	Y KeyPad Starting Coordinate
in	nFontId	Font ID to use for drawing the element
in	pConfig	Ptr to Config options
in	pfuncCreate	Ptr to callback function for creation
in	pfuncLookup	Ptr to callback function for button lookups

Returns

Pointer to Element or NULL if failure

9.10.1.8 int16_t gslc_ElemXKeyPadDataTargetIdGet (gslc_tsGui * pGui, void * pvData)

Fetch the element target ID associated with this KeyPad.

Parameters

in	pGui	Pointer to GUI
in	pvData	: Void ptr to callback data structure

Returns

Target Element ID or GSLC_ID_NONE if unspecified

9.10.1.9 char* gslc_ElemXKeyPadDataValGet (gslc_tsGui * pGui, void * pvData)

Fetch the edited value string from the KeyPad.

Parameters

in	pGui	Pointer to GUI
in	pvData	: Void ptr to callback data structure

Returns

Pointer to edited character string

9.10.1.10 bool gslc_ElemXKeyPadDraw (void * pvGui, void * pvElemRef, gslc_teRedrawType eRedraw)

Draw a KeyPad element on the screen.

· Called during redraw

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
in	eRedraw	Redraw mode

Returns

true if success, false otherwise

9.10.1.11 void gslc_ElemXKeyPadSetFloatEn ($gslc_tsGui*pGui, gslc_tsElemRef*pElemRef, bool bEn$)

Update the KeyPad active configuration to enable negative numbers.

• Effectively disables/enables the sign button & handling

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to KeyPad element reference
in	bEn	Enable flag (true if negative numbers enabled)

Returns

none

9.10.1.12 void gslc_ElemXKeyPadSetSignEn ($gslc_tsGui*pGui, gslc_tsElemRef*pElemRef*, bool bEn*)$

Update the KeyPad active configuration to enable negative numbers.

• Effectively disables/enables the sign button & handling

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to KeyPad element reference
in	bEn	Enable flag (true if negative numbers enabled)

Returns

none

9.10.1.13 void gslc_ElemXKeyPadTargetldSet (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, int16_t nld)

Set target element ID for KeyPad return value.

- The Target ID is used in the GSLC_CB_INPUT callback so that the user has the context needed to determine which field should be edited with the contents of the KeyPad edit field
- It is expected that the user will call this function when showing the KeyPad popup dialog

Parameters

	in	pGui	Pointer to GUI
	in	pElemRef	Ptr to KeyPad Element reference
ĺ	in	nld	Element enum ID for target of KeyPad value

Returns

none

9.10.1.14 bool gslc_ElemXKeyPadTouch (void * pvGui, void * pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY)

Handle touch (up,down,move) events to KeyPad element.

Called from gslc_ElemSendEventTouch()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element ref (typecast to gslc_tsElemRef*)
in	eTouch	Touch event type
in	nRelX	Touch X coord relative to element
in	nRelY	Touch Y coord relative to element

Returns

true if success, false otherwise

9.10.1.15 bool gslc_ElemXKeyPadValGet (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, char * pStrBuf, uint8_t nStrBufMax)

Set the current output string buffer associated with NumericInput element.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Ptr to KeyPad Element reference
in	pStrBuf	String to copy into element
in	nStrBufMax	Maximum length of string buffer (pStrBuf)

Returns

none

9.10.1.16 void gslc_ElemXKeyPadValSet (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, const char * pStrBuf)

Set the current value for the editable text field.

in	pGui	Pointer to GUI
in	pElemRef	Ptr to KeyPad Element reference
in	pStrBuf	String to copy into keypad

Returns

none

9.10.1.17 void gslc_ElemXKeyPadValSetCb (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, GSLC_CB_INPUT pfuncCb)

Set the callback function associated with the KeyPad.

• This function will be called during updates and OK / Cancel

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element Reference for KeyPad
in	pfuncCb	Callback function pointer

Returns

none

- 9.10.1.18 void gslc_ElemXKeyPadValSetSign (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, bool bPositive)
- 9.10.1.19 void XKeyPadAddKeyElem (gslc_tsGui * pGui, gslc_tsXKeyPad * pXData, int16_t nKeyId, bool bTxtField, int16_t nRow, int16_t nCol, int8_t nRowSpan, int8_t nColSpan, gslc_tsColor cColFill, gslc_tsColor cColGlow, bool bVisible)

Add a key to the KeyPad control.

Parameters

in	pGui	Pointer to GUI
in	pXData	Ptr to extended element data structure
in	nKeyld	ID to associated with the key
in	bTxtField	Is this the text value field?
in	nRow	Element placement position (row index, 0 at top)
in	nCol	Element placement position (column index, 0 at left)
in	nRowSpan	Number of columns to occupy by element (1 for normal size, 2 for double width)
in	nColSpan	Number of rows to occupy by element (1 for normal size, 2 for double height)
in	cColFill	Fill color for element
in	cColGlow	Fill color for element when glowing
in	bVisible	Initial key visibility state

Returns


none

9.10.2 Variable Documentation


- 9.10.2.1 const char GSLC_PMEM ERRSTR_NULL[]
- 9.10.2.2 const char GSLC_PMEM ERRSTR_PXD_NULL[]
- 9.10.2.3 const char KEYPAD_DISP_DECIMAL_PT
- 9.10.2.4 const char KEYPAD_DISP_NEGATIVE

9.11 src/elem/XKeyPad.h File Reference

#include "GUIslice.h"
Include dependency graph for XKeyPad.h:

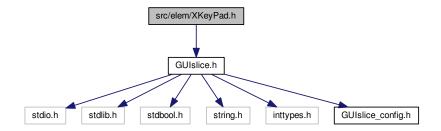

This graph shows which files directly or indirectly include this file:

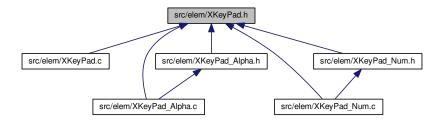

Data Structures

- struct gslc_tsXKeyPadCfg
 - Configuration for the KeyPad.
- struct gslc_tsXKeyPadData
 - Input callback data structure.
- struct gslc_tsXKeyPad
 - Extended data for KeyPad element.

Macros

- #define GSLC TYPEX KEYPAD
- #define XKEYPAD VAL LEN
- #define XKEYPAD CB STATE DONE
- #define XKEYPAD CB STATE CANCEL
- #define XKEYPAD_CB_STATE_UPDATE

Typedefs

- typedef int16_t(* XKEYPAD_LOOKUP) (gslc_tsGui *pGui, int16_t nKeyld)
 Function for KeyPad creation.
- typedef void(* XKEYPAD_CREATE) (gslc_tsGui *pGui, gslc_tsXKeyPad *pXData)

Enumerations

enum {
 KEYPAD_ID_BACKSPACE, KEYPAD_ID_PERIOD, KEYPAD_ID_SPACE, KEYPAD_ID_DECIMAL,
 KEYPAD_ID_MINUS, KEYPAD_ID_ESC, KEYPAD_ID_ENTER, KEYPAD_ID_BASIC_START,
 KEYPAD_ID_TXT }

Functions

void XKeyPadAddKeyElem (gslc_tsGui *pGui, gslc_tsXKeyPad *pXData, int16_t nKeyId, bool bTxtField, int16_t nRow, int16_t nCol, int8_t nRowSpan, int8_t nColSpan, gslc_tsColor cColFill, gslc_tsColor cCol← Glow, bool bVisible)

Add a key to the KeyPad control.

Create a KeyPad Element.

• void gslc_ElemXKeyPadValSet (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, const char *pStrBuf)

Set the current value for the editable text field.

- void gslc_ElemXKeyPadTargetIdSet (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nld)
 Set target element ID for KeyPad return value.
- bool gslc_ElemXKeyPadValGet (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, char *pStrBuf, uint8_t nStr
 —
 BufMax)

Set the current output string buffer associated with NumericInput element.

char * gslc_ElemXKeyPadDataValGet (gslc_tsGui *pGui, void *pvData)

Fetch the edited value string from the KeyPad.

int16_t gslc_ElemXKeyPadDataTargetIdGet (gslc_tsGui *pGui, void *pvData)

Fetch the element target ID associated with this KeyPad.

- bool gslc_ElemXKeyPadDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)
 - Draw a KeyPad element on the screen.
- bool gslc_ElemXKeyPadClick (void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nX, int16_t nY)

 Handle a click event within the KeyPad.
- bool gslc_ElemXKeyPadTouch (void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY)

Handle touch (up,down,move) events to KeyPad element.

void gslc_ElemXKeyPadValSetCb (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, GSLC_CB_INPUT pfuncCb)

Set the callback function associated with the KeyPad.

• void gslc_ElemXKeyPadCfgSetFloatEn (gslc_tsXKeyPadCfg *pConfig, bool bEn)

Update the KeyPad configuration to enable floating point numbers.

void gslc_ElemXKeyPadCfgSetSignEn (gslc_tsXKeyPadCfg *pConfig, bool bEn)

Update the KeyPad configuration to enable negative numbers.

void gslc_ElemXKeyPadCfgSetRoundEn (gslc_tsXKeyPadCfg *pConfig, bool bEn)

Update the KeyPad configuration to enable rounded button corners.

void gslc_ElemXKeyPadCfgSetButtonSz (gslc_tsXKeyPadCfg *pConfig, int8_t nButtonSzW, int8_t nButton←
 SzH)

Update the KeyPad configuration to define the KeyPad button sizing.

void gslc_ElemXKeyPadSetFloatEn (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bEn)

Update the KeyPad active configuration to enable negative numbers.

void gslc_ElemXKeyPadSetSignEn (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bEn)

Update the KeyPad active configuration to enable negative numbers.

9.11.1 Macro Definition Documentation

9.11.1.1 #define GSLC_TYPEX_KEYPAD

9.11.1.2 #define XKEYPAD_CB_STATE_CANCEL

9.11.1.3 #define XKEYPAD_CB_STATE_DONE

9.11.1.4 #define XKEYPAD_CB_STATE_UPDATE

9.11.1.5 #define XKEYPAD_VAL_LEN

9.11.2 Typedef Documentation

9.11.2.1 typedef void(* XKEYPAD_CREATE) (gslc_tsGui *pGui, gslc_tsXKeyPad *pXData)

9.11.2.2 typedef int16_t(* XKEYPAD_LOOKUP) (gslc_tsGui *pGui, int16_t nKeyld)

Function for KeyPad creation.

9.11.3 Enumeration Type Documentation

9.11.3.1 anonymous enum

Enumerator

KEYPAD_ID_BACKSPACE

KEYPAD_ID_PERIOD

KEYPAD_ID_SPACE

KEYPAD_ID_DECIMAL

KEYPAD_ID_MINUS

KEYPAD_ID_ESC

KEYPAD_ID_ENTER

KEYPAD_ID_BASIC_START

KEYPAD_ID_TXT

9.11.4 Function Documentation

9.11.4.1 void gslc_ElemXKeyPadCfgSetButtonSz (gslc_tsXKeyPadCfg * pConfig, int8_t nButtonSzW, int8_t nButtonSzW int8_t nButtonSzW.)

Update the KeyPad configuration to define the KeyPad button sizing.

Parameters

in	pConfig	Pointer to the XKeyPad config structure
in	nButtonSzW	Width of buttons in pixels
in	nButtonSzH	Width of buttons in pixels

Returns

none

9.11.4.2 void gslc_ElemXKeyPadCfgSetFloatEn ($gslc_tsXKeyPadCfg*pConfig$, bool bEn)

Update the KeyPad configuration to enable floating point numbers.

• Effectively disables/enables the decimal point button & handling

Parameters

in	pConfig	Pointer to the XKeyPad config structure
in	bEn	Enable flag (true if floating point enabled)

Returns

none

9.11.4.3 void gslc_ElemXKeyPadCfgSetRoundEn (gslc_tsXKeyPadCfg * pConfig, bool bEn)

Update the KeyPad configuration to enable rounded button corners.

Parameters

in	pConfig	Pointer to the XKeyPad config structure
in	bEn	Enable rounded corners

Returns

none

9.11.4.4 void gslc_ElemXKeyPadCfgSetSignEn (gslc_tsXKeyPadCfg * pConfig, bool bEn)

Update the KeyPad configuration to enable negative numbers.

• Effectively disables/enables the sign button & handling

Parameters

in	pConfig	Pointer to the XKeyPad config structure
in	bEn	Enable flag (true if negative numbers enabled)

Returns

none

9.11.4.5 bool gslc_ElemXKeyPadClick (void * pvGui, void * pvElemRef, gslc_teTouch eTouch, int16_t nX, int16_t nY)

Handle a click event within the KeyPad.

· This is called internally by the KeyPad touch handler

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element Ref (typecast to gslc_tsElemRef*)
in	eTouch	Touch event type
in	nΧ	Touch X coord
in	nΥ	Touch Y coord

Returns

none

9.11.4.6 gslc_tsElemRef* gslc_ElemXKeyPadCreateBase (gslc_tsGui * pGui, int16_t nElemId, int16_t nPage, gslc_tsXKeyPad * pXData, int16_t nX0, int16_t nY0, int8_t nFontId, gslc_tsXKeyPadCfg * pConfig, XKEYPAD_CREATE pfuncCreate, XKEYPAD_LOOKUP pfuncLookup)

Create a KeyPad Element.

in	pGui	Pointer to GUI	
in	nElemId Element ID to assign (016383 or GSLC_ID_AUTO to autoge		
in	nPage Page ID to attach element to		
in	pXData	pXData Ptr to extended element data structure	

Parameters

in	nX0	X KeyPad Starting Coordinate	
in	nY0	Y KeyPad Starting Coordinate	
in	nFontId	Font ID to use for drawing the element	
in	pConfig	Ptr to Config options	
in	pfuncCreate	Ptr to callback function for creation	
in	pfuncLookup	CLookup Ptr to callback function for button lookups	

Returns

Pointer to Element or NULL if failure

9.11.4.7 int16_t gslc_ElemXKeyPadDataTargetIdGet (gslc_tsGui * pGui, void * pvData)

Fetch the element target ID associated with this KeyPad.

Parameters

in	pGui	Pointer to GUI
in	pvData	: Void ptr to callback data structure

Returns

Target Element ID or GSLC_ID_NONE if unspecified

9.11.4.8 char* gslc_ElemXKeyPadDataValGet (gslc_tsGui * pGui, void * pvData)

Fetch the edited value string from the KeyPad.

Parameters

ſ	in	pGui	Pointer to GUI
	in	pvData	: Void ptr to callback data structure

Returns

Pointer to edited character string

9.11.4.9 bool gslc_ElemXKeyPadDraw (void * pvGui, void * pvElemRef, gslc_teRedrawType eRedraw)

Draw a KeyPad element on the screen.

· Called during redraw

Parameters

	in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)	
	in	in pvElemRef Void ptr to Element reference (typecast to gslc_tsElement reference) eRedraw Redraw mode		
Ī	in			

Returns

true if success, false otherwise

9.11.4.10 void gslc_ElemXKeyPadSetFloatEn ($gslc_tsGui*pGui, gslc_tsElemRef*pElemRef, bool bEn$)

Update the KeyPad active configuration to enable negative numbers.

• Effectively disables/enables the sign button & handling

Parameters

ſ	in	pGui	Pointer to GUI
Ī	in	pElemRef	Pointer to KeyPad element reference
Ī	in	bEn	Enable flag (true if negative numbers enabled)

Returns

none

9.11.4.11 void gslc_ElemXKeyPadSetSignEn (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, bool bEn)

Update the KeyPad active configuration to enable negative numbers.

• Effectively disables/enables the sign button & handling

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to KeyPad element reference
in	bEn	Enable flag (true if negative numbers enabled)

Returns

none

9.11.4.12 void gslc_ElemXKeyPadTargetldSet (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, int16_t nld)

Set target element ID for KeyPad return value.

- The Target ID is used in the GSLC_CB_INPUT callback so that the user has the context needed to determine which field should be edited with the contents of the KeyPad edit field
- It is expected that the user will call this function when showing the KeyPad popup dialog

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Ptr to KeyPad Element reference
in	nld	Element enum ID for target of KeyPad value

Returns

none

9.11.4.13 bool gslc_ElemXKeyPadTouch (void * pvGui, void * pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY)

Handle touch (up,down,move) events to KeyPad element.

Called from gslc_ElemSendEventTouch()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)	
in	pvElemRef	ElemRef Void ptr to Element ref (typecast to gslc_tsElemRef*)	
in	eTouch	Touch event type	
in	nRelX	Touch X coord relative to element	
in	nRelY	Touch Y coord relative to element	

Returns

true if success, false otherwise

9.11.4.14 bool gslc_ElemXKeyPadValGet (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, char * pStrBuf, uint8_t nStrBufMax)

Set the current output string buffer associated with NumericInput element.

in	pGui	Pointer to GUI
----	------	----------------

Parameters

in	pElemRef	Ptr to KeyPad Element reference
in	pStrBuf	String to copy into element
in	nStrBufMax	Maximum length of string buffer (pStrBuf)

Returns

none

9.11.4.15 void gslc_ElemXKeyPadValSet ($gslc_tsGui*pGui, gslc_tsElemRef*pElemRef, const char*pStrBuf$)

Set the current value for the editable text field.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Ptr to KeyPad Element reference
in	pStrBuf	String to copy into keypad

Returns

none

9.11.4.16 void gslc_ElemXKeyPadValSetCb (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, GSLC_CB_INPUT pfuncCb)

Set the callback function associated with the KeyPad.

• This function will be called during updates and OK / Cancel

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element Reference for KeyPad
in	pfuncCb	Callback function pointer

Returns

none

9.11.4.17 void XKeyPadAddKeyElem (gslc_tsGui * pGui, gslc_tsXKeyPad * pXData, int16_t nKeyId, bool bTxtField, int16_t nRow, int16_t nCol, int8_t nRowSpan, int8_t nColSpan, gslc_tsColor cColFill, gslc_tsColor cColGlow, bool bVisible)

Add a key to the KeyPad control.

Parameters

in	pGui	Pointer to GUI	
in	pXData	Ptr to extended element data structure	
in	nKeyld	Keyld ID to associated with the key	
in	bTxtField	Is this the text value field?	
in	nRow	Element placement position (row index, 0 at top)	
in	nCol	Element placement position (column index, 0 at left)	
in	nRowSpan	Number of columns to occupy by element (1 for normal size, 2 for double width)	
in	nColSpan	Number of rows to occupy by element (1 for normal size, 2 for double height)	
in	cColFill	Fill color for element	
in	cColGlow	Fill color for element when glowing	
in	bVisible	Initial key visibility state	


Returns

none

9.12 src/elem/XKeyPad_Alpha.c File Reference

```
#include "GUIslice.h"
#include "GUIslice_drv.h"
#include "elem/XKeyPad.h"
#include "elem/XKeyPad_Alpha.h"
#include <stdio.h>
```

Include dependency graph for XKeyPad_Alpha.c:

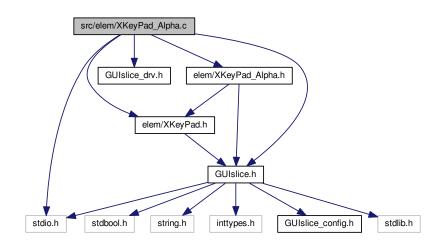

Enumerations

enum {
 KEYPAD_LBL_BACKSPACE, KEYPAD_LBL_PERIOD, KEYPAD_LBL_SPACE, KEYPAD_LBL_ESC,
 KEYPAD_LBL_ENTER, KEYPAD_LBL_BASIC_START }

Functions

- void XKeyPadCreateKeys_Alpha (gslc_tsGui *pGui, gslc_tsXKeyPad *pXData)
- int16_t XKeyPadLookup_Alpha (gslc_tsGui *pGui, int16_t nKeyId)
- gslc_tsElemRef * gslc_ElemXKeyPadCreate_Alpha (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsXKeyPad_Alpha *pXData, int16_t nX0, int16_t nY0, int8_t nFontId, gslc_tsXKeyPadCfg *pConfig)
 Create a KeyPad Element.
- gslc_tsXKeyPadCfg gslc_ElemXKeyPadCfgInit_Alpha ()

Initialize the KeyPad config structure.

Variables

- const char GSLC_PMEM ERRSTR_NULL []
- const char GSLC_PMEM ERRSTR_PXD_NULL []
- static char * KEYPAD_LABEL_STRINGS []

9.12.1 Enumeration Type Documentation

9.12.1.1 anonymous enum

Enumerator

KEYPAD_LBL_BACKSPACE
KEYPAD_LBL_PERIOD
KEYPAD_LBL_SPACE
KEYPAD_LBL_ESC
KEYPAD_LBL_ENTER
KEYPAD_LBL_BASIC_START

9.12.2 Function Documentation

```
9.12.2.1 gslc_tsXKeyPadCfg gslc_ElemXKeyPadCfgInit_Alpha ( )
```

Initialize the KeyPad config structure.

• This routine should be called to initialize the configuration data structure before calling any of the KeyPad config APIs

Returns

Initialized KeyPad config structure

9.12.2.2 gslc_tsElemRef* gslc_ElemXKeyPadCreate_Alpha (gslc_tsGui * pGui, int16_t nElemId, int16_t nPage, gslc_tsXKeyPad_Alpha * pXData, int16_t nX0, int16_t nY0, int8_t nFontId, gslc_tsXKeyPadCfg * pConfig)

Create a KeyPad Element.

Parameters

in	pGui	Pointer to GUI	
in	n⊷	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)	
	ElemId		
in	nPage	Page ID to attach element to	
in	pXData	Ptr to extended element data structure	
in	nX0	X KeyPad Starting Coordinate	
in	nY0	Y KeyPad Starting Coordinate	
in	nFontId	Font ID to use for drawing the element	
in	pConfig	Ptr to config options	

Returns

Pointer to Element or NULL if failure

```
9.12.2.3 void XKeyPadCreateKeys_Alpha ( gslc_tsGui*pGui, gslc_tsXKeyPad*pXData )
```

```
9.12.2.4 int16_t XKeyPadLookup_Alpha ( gslc_tsGui * pGui, int16_t nKeyld )
```

9.12.3 Variable Documentation


9.12.3.1 const char GSLC_PMEM ERRSTR_NULL[]

9.12.3.2 const char GSLC_PMEM ERRSTR_PXD_NULL[]


9.12.3.3 char* KEYPAD_LABEL_STRINGS[] [static]

9.13 src/elem/XKeyPad_Alpha.h File Reference

```
#include "GUIslice.h"
#include "elem/XKeyPad.h"
Include dependency graph for XKeyPad_Alpha.h:
```

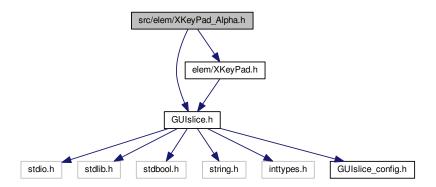

This graph shows which files directly or indirectly include this file:

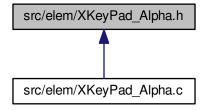

Data Structures

struct gslc_tsXKeyPad_Alpha

Macros

- #define XKEYPADALPHA_BTN_BASIC
- #define XKEYPADALPHA_ELEM_MAX

Functions

- gslc_tsElemRef * gslc_ElemXKeyPadCreate_Alpha (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsXKeyPad_Alpha *pXData, int16_t nX0, int16_t nY0, int8_t nFontId, gslc_tsXKeyPadCfg *pConfig)
 Create a KeyPad Element.
- gslc_tsXKeyPadCfg gslc_ElemXKeyPadCfgInit_Alpha ()
 Initialize the KeyPad config structure.

9.13.1 Macro Definition Documentation

- 9.13.1.1 #define XKEYPADALPHA_BTN_BASIC
- 9.13.1.2 #define XKEYPADALPHA_ELEM_MAX
- 9.13.2 Function Documentation
- 9.13.2.1 gslc_tsXKeyPadCfg gslc_ElemXKeyPadCfgInit_Alpha ()

Initialize the KeyPad config structure.

• This routine should be called to initialize the configuration data structure before calling any of the KeyPad config APIs

Returns

Initialized KeyPad config structure

9.13.2.2 gslc_tsElemRef* gslc_ElemXKeyPadCreate_Alpha (gslc_tsGui * pGui, int16_t nElemId, int16_t nPage, gslc_tsXKeyPad_Alpha * pXData, int16_t nX0, int16_t nY0, int8_t nFontId, gslc_tsXKeyPadCfg * pConfig)

Create a KeyPad Element.

Parameters

in	pGui	Pointer to GUI	
in	n⊷	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)	
	ElemId		
in	nPage	Page ID to attach element to	
in	pXData	Ptr to extended element data structure	
in	nX0	X KeyPad Starting Coordinate	
in	nY0	Y KeyPad Starting Coordinate	
in	nFontId	Font ID to use for drawing the element	
in	pConfig	Ptr to config options	


Returns

Pointer to Element or NULL if failure

9.14 src/elem/XKeyPad_Num.c File Reference

```
#include "GUIslice.h"
#include "GUIslice_drv.h"
#include "elem/XKeyPad.h"
#include "elem/XKeyPad_Num.h"
#include <stdio.h>
```

Include dependency graph for XKeyPad_Num.c:

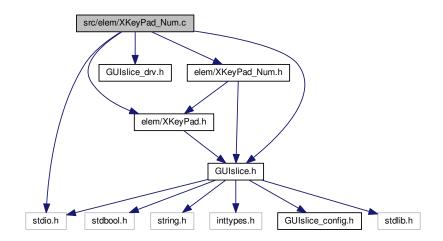

Enumerations

enum {
 KEYPAD_LBL_BACKSPACE, KEYPAD_LBL_DECIMAL, KEYPAD_LBL_MINUS, KEYPAD_LBL_ESC,
 KEYPAD_LBL_ENTER, KEYPAD_LBL_BASIC_START }

Functions

- void XKeyPadCreateKeys_Num (gslc_tsGui *pGui, gslc_tsXKeyPad *pXData)
- int16_t XKeyPadLookup_Num (gslc_tsGui *pGui, int16_t nKeyId)
- gslc_tsElemRef * gslc_ElemXKeyPadCreate_Num (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc
 _tsXKeyPad_Num *pXData, int16_t nX0, int16_t nY0, int8_t nFontId, gslc_tsXKeyPadCfg *pConfig)

Create a KeyPad Element.

gslc_tsXKeyPadCfg gslc_ElemXKeyPadCfgInit_Num ()

Initialize the KeyPad config structure.

Variables

- const char GSLC_PMEM ERRSTR_NULL []
- const char GSLC_PMEM ERRSTR_PXD_NULL []
- static char * KEYPAD_LABEL_STRINGS []

9.14.1 Enumeration Type Documentation

9.14.1.1 anonymous enum

Enumerator

KEYPAD_LBL_BACKSPACE
KEYPAD_LBL_DECIMAL
KEYPAD_LBL_MINUS
KEYPAD_LBL_ESC
KEYPAD_LBL_ENTER
KEYPAD_LBL_BASIC_START

9.14.2 Function Documentation

```
9.14.2.1 gslc_tsXKeyPadCfg gslc_ElemXKeyPadCfgInit_Num ( )
```

Initialize the KeyPad config structure.

 This routine should be called to initialize the configuration data structure before calling any of the KeyPad config APIs

Returns

Initialized KeyPad config structure

9.14.2.2 gslc_tsElemRef* gslc_ElemXKeyPadCreate_Num (gslc_tsGui * pGui, int16_t nElemId, int16_t nPage, gslc_tsXKeyPad_Num * pXData, int16_t nX0, int16_t nY0, int8_t nFontId, gslc_tsXKeyPadCfg * pConfig)

Create a KeyPad Element.

Parameters

in	pGui	Pointer to GUI	
in	n⊷	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)	
	ElemId		
in	nPage	Page ID to attach element to	
in	pXData	Ptr to extended element data structure	
in	nX0	X KeyPad Starting Coordinate	
in	nY0	Y KeyPad Starting Coordinate	
in	nFontId	Font ID to use for drawing the element	
in	pConfig	Ptr to config options	

Returns

Pointer to Element or NULL if failure

```
9.14.2.3 void XKeyPadCreateKeys_Num ( gslc_tsGui*pGui, gslc_tsXKeyPad*pXData )
```

9.14.2.4 int16_t XKeyPadLookup_Num (gslc_tsGui * pGui, int16_t nKeyld)

9.14.3 Variable Documentation

9.14.3.1 const char GSLC_PMEM ERRSTR_NULL[]


9.14.3.2 const char GSLC_PMEM ERRSTR_PXD_NULL[]

9.14.3.3 char* KEYPAD_LABEL_STRINGS[] [static]


9.15 src/elem/XKeyPad_Num.h File Reference

```
#include "GUIslice.h"
#include "elem/XKeyPad.h"
```

Include dependency graph for XKeyPad_Num.h:

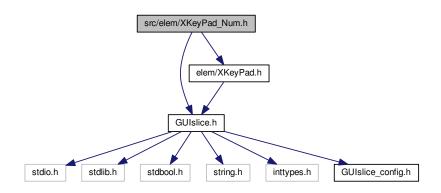

This graph shows which files directly or indirectly include this file:

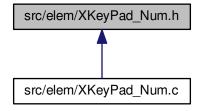

Data Structures

• struct gslc_tsXKeyPad_Num

Macros

- #define XKEYPADNUM_BTN_BASIC
- #define XKEYPADNUM_ELEM_MAX

Functions

- gslc_tsElemRef * gslc_ElemXKeyPadCreate_Num (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc
 _tsXKeyPad_Num *pXData, int16_t nX0, int16_t nY0, int8_t nFontId, gslc_tsXKeyPadCfg *pConfig)
 Create a KeyPad Element.
- gslc_tsXKeyPadCfg gslc_ElemXKeyPadCfgInit_Num ()
 Initialize the KeyPad config structure.

9.15.1 Macro Definition Documentation

- 9.15.1.1 #define XKEYPADNUM_BTN_BASIC
- 9.15.1.2 #define XKEYPADNUM_ELEM_MAX
- 9.15.2 Function Documentation
- 9.15.2.1 gslc_tsXKeyPadCfg gslc_ElemXKeyPadCfgInit_Num ()

Initialize the KeyPad config structure.

• This routine should be called to initialize the configuration data structure before calling any of the KeyPad config APIs

Returns

Initialized KeyPad config structure

9.15.2.2 gslc_tsElemRef* gslc_ElemXKeyPadCreate_Num (gslc_tsGui * pGui, int16_t nElemId, int16_t nPage, gslc_tsXKeyPad_Num * pXData, int16_t nX0, int16_t nY0, int8_t nFontId, gslc_tsXKeyPadCfg * pConfig)

Create a KeyPad Element.

Parameters

in	pGui	Pointer to GUI	
in	n⊷	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)	
	ElemId		
in	nPage	Page ID to attach element to	
in	pXData	Ptr to extended element data structure	
in	nX0	X KeyPad Starting Coordinate	
in	nY0	Y KeyPad Starting Coordinate	
in	nFontId	Font ID to use for drawing the element	
in	pConfig	Ptr to config options	


Returns

Pointer to Element or NULL if failure

9.16 src/elem/XListbox.c File Reference

```
#include "GUIslice.h"
#include "GUIslice_drv.h"
#include "elem/XListbox.h"
#include <stdio.h>
```

Include dependency graph for XListbox.c:

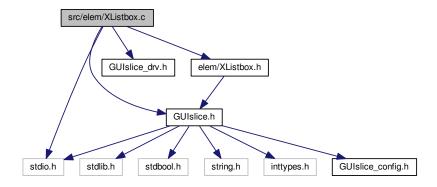

Macros

• #define XLISTBOX_MAX_STR

Functions

- bool gslc_ElemXListboxRecalcSize (gslc_tsXListbox *pListbox, gslc_tsRect rElem)
- void gslc_ElemXListboxSetSize (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int8_t nRows, int8_t nCols)

 Configure the number of rows & columns to display in the listbox.

void gslc_ElemXListboxSetMargin (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int8_t nMarginW, int8_t nMarginH)

Configure the margin inside the listbox.

void gslc_ElemXListboxItemsSetSize (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nItemW, int16
 t nItemH)

Configure the size of the listbox items.

void gslc_ElemXListboxItemsSetGap (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int8_t nGap, gslc_ts↔
 Color colGap)

Configure the gap between listbox items.

void gslc ElemXListboxReset (gslc tsGui *pGui, gslc tsElemRef *pElemRef)

Empty the listbox of all items.

bool gslc_ElemXListboxAddItem (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, const char *pStrItem)

Add an item to the listbox.

• bool gslc_ElemXListboxGetItem (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nItemCurSel, char *pStrItem, uint8 t nStrItemLen)

Get the indexed listbox item.

• int16_t gslc_ElemXListboxGetItemCnt (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Get the number of items in the listbox.

Create a Listbox Element.

bool gslc ElemXListboxDraw (void *pvGui, void *pvElemRef, gslc teRedrawType eRedraw)

Draw a Listbox element on the screen.

bool gslc_ElemXListboxTouch (void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY)

Handle touch events to Listbox element.

• int16_t gslc_ElemXListboxGetSel (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Get a Listbox element's current selection.

- bool gslc_ElemXListboxSetSel (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nltemCurSel)

 Set a Listbox element's current selection.
- bool gslc_ElemXListboxSetScrollPos (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, uint16_t nScrollPos)

 Set the Listbox scroll position.
- void gslc_ElemXListboxSetSelFunc (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, GSLC_CB_XLISTBO

 X SEL funcCb)

Assign the selection callback function for a Listbox.

Variables

- const char GSLC PMEM ERRSTR NULL[]
- const char GSLC_PMEM ERRSTR_PXD_NULL []

9.16.1 Macro Definition Documentation

9.16.1.1 #define XLISTBOX_MAX_STR

9.16.2 Function Documentation

9.16.2.1 bool gslc_ElemXListboxAddItem (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, const char * pStrItem)

Add an item to the listbox.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Ptr to Element Reference to update
in	pStrItem	String to use when creating the listbox item

Returns

true if OK, false if fail (eg. insufficient buffer storage)

9.16.2.2 gslc_tsElemRef* gslc_ElemXListboxCreate (gslc_tsGui * pGui, int16_t nElemId, int16_t nPage, gslc_tsXListbox * pXData, gslc_tsRect rElem, int16_t nFontId, uint8_t * pBufftems, uint16_t nBufftemsMax, int16_t nSelDefault)

Create a Listbox Element.

Parameters

in	pGui	Pointer to GUI
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)
in	nPage	Page ID to attach element to
in	pXData	Ptr to extended element data structure
in	rElem	Rectangle coordinates defining checkbox size
in	nFontld	Font ID for item display
in	pBufItems	Pointer to buffer that will contain list of items
in	nBufltemsMax	Max size of buffer for list of items (pBufItems)
in	nSelDefault	Default item to select

Returns

Pointer to Element reference or NULL if failure

9.16.2.3 bool gslc_ElemXListboxDraw (void * pvGui, void * pvElemRef, gslc_teRedrawType eRedraw)

Draw a Listbox element on the screen.

• Called from gslc_ElemDraw()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element (typecast to gslc_tsElemRef*)
in	eRedraw	Redraw mode

Returns

true if success, false otherwise

9.16.2.4 bool gslc_ElemXListboxGetItem (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, int16_t nItemCurSel, char * pStrItem, uint8_t nStrItemLen)

Get the indexed listbox item.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Ptr to Element Reference to update
in	nItemCurSel	Item index to fetch
out	pStrItem	Ptr to the string buffer to receive the item
in	nStrItemLen	Maximum buffer length of pStrItem

Returns

true if success, false if fail (eg. can't locate item)

9.16.2.5 int16_t gslc_ElemXListboxGetItemCnt (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef)

Get the number of items in the listbox.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Ptr to Element Reference to update

Returns

Number of items

9.16.2.6 int16_t gslc_ElemXListboxGetSel (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef)

Get a Listbox element's current selection.

Parameters

	in	pGui	Pointer to GUI
ſ	in	pElemRef	Pointer to Element reference

Returns

Current Listbox selection (or -1 if none)

9.16.2.7 void gslc_ElemXListboxItemsSetGap (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, int8_t nGap, gslc_tsColor colGap)

Configure the gap between listbox items.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Ptr to Element Reference to update
in	nGap	Set the gap between listbox items (0 for none)
in	colGap	Set the color of the gap between listbox items

Returns

none

9.16.2.8 void gslc_ElemXListboxItemsSetSize (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, int16_t nItemW, int16_t nItemH)

Configure the size of the listbox items.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Ptr to Element Reference to update
in	nItemW	Set the width of a listbox item (or -1 to auto-size)
in	nltemH	Set the height of a listbox item

Returns

none

9.16.2.9 bool gslc_ElemXListboxRecalcSize (gslc_tsXListbox * pListbox, gslc_tsRect rElem)

9.16.2.10 void gslc_ElemXListboxReset ($gslc_tsGui*pGui*pGui*gslc_tsElemRef*pElemRef*)$

Empty the listbox of all items.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Ptr to Element Reference to update

Returns

none

9.16.2.11 void gslc_ElemXListboxSetMargin (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, int8_t nMarginW, int8_t nMarginH)

Configure the margin inside the listbox.

• Defines the region bewteen the element rect and the inner listbox items

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Ptr to Element Reference to update
in	nMarginW	Set the margin (horizontal) inside the listbox (0 for none)
in	nMarginH	Set the margin (horizontal) inside the listbox (0 for none)

Returns

none

9.16.2.12 bool gslc_ElemXListboxSetScrollPos (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, uint16_t nScrollPos)

Set the Listbox scroll position.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nScrollPos	Scroll the listbox so that the nScrollPos item is at the top (0 default)

Returns

true if success, false if fail

9.16.2.13 bool gslc_ElemXListboxSetSel ($gslc_tsGui*pGui*pGui*pGui*, gslc_tsElemRef*pElemRef*, int16_t nltemCurSel*)$

Set a Listbox element's current selection.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nItemCurSel	Listbox item to select (or -1 for none)

Returns

true if success, false if fail

9.16.2.14 void gslc_ElemXListboxSetSelFunc ($gslc_tsGui*pGui, gslc_tsElemRef*pElemRef, GSLC_CB_XLISTBOX_SEL funcCb$)

Assign the selection callback function for a Listbox.

Parameters

	in	pGui	Pointer to GUI
-	in	pElemRef	Pointer to Element reference
	in	funcCb	Function pointer to selection routine (or NULL for none)

Returns

none

9.16.2.15 void gslc_ElemXListboxSetSize (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, int8_t nRows, int8_t nCols)

Configure the number of rows & columns to display in the listbox.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Ptr to Element Reference to update
in	nRows	Number of rows (>= 1, or XLISTBOX_SIZE_AUTO to base on content)
in	nCols	Number of columns (>= 1)

Returns

none

9.16.2.16 bool gslc_ElemXListboxTouch (void * pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY)

Handle touch events to Listbox element.

Called from gslc_ElemSendEventTouch()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element ref (typecast to gslc_tsElemRef*)
in	eTouch	Touch event type
in	nRelX	Touch X coord relative to element
in	nRelY	Touch Y coord relative to element

Returns

true if success, false otherwise


9.16.3 Variable Documentation

9.16.3.1 const char GSLC_PMEM ERRSTR_NULL[]


9.16.3.2 const char GSLC_PMEM ERRSTR_PXD_NULL[]

9.17 src/elem/XListbox.h File Reference

#include "GUIslice.h"
Include dependency graph for XListbox.h:

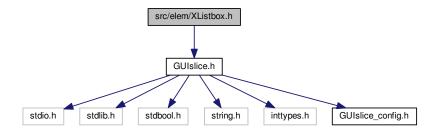

This graph shows which files directly or indirectly include this file:

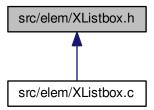

Data Structures

struct gslc_tsXListbox

Extended data for Listbox element.

Macros

- #define GSLC TYPEX LISTBOX
- #define XLISTBOX SEL NONE
- #define XLISTBOX_SIZE_AUTO
- #define XLISTBOX BUF OH R

Typedefs

typedef bool(* GSLC_CB_XLISTBOX_SEL) (void *pvGui, void *pvElem, int16_t nSel)
 Callback function for Listbox feedback.

Functions

gslc_tsElemRef * gslc_ElemXListboxCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_ts←
 XListbox *pXData, gslc_tsRect rElem, int16_t nFontId, uint8_t *pBufItems, uint16_t nBufItemsMax, int16_t
 nSelDefault)

Create a Listbox Element.

- void gslc_ElemXListboxSetSize (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int8_t nRows, int8_t nCols)

 Configure the number of rows & columns to display in the listbox.
- void gslc_ElemXListboxSetMargin (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int8_t nMarginW, int8_t nMarginH)

Configure the margin inside the listbox.

void gslc_ElemXListboxItemsSetSize (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nItemW, int16

_t nItemH)

Configure the size of the listbox items.

void gslc_ElemXListboxItemsSetGap (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int8_t nGap, gslc_ts↔
 Color colGap)

Configure the gap between listbox items.

void gslc_ElemXListboxReset (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Empty the listbox of all items.

Add an item to the listbox.

- $\bullet \ \ bool\ gslc_ElemXListboxAddItem\ (gslc_tsGui\ *pGui,\ gslc_tsElemRef\ *pElemRef,\ const\ char\ *pStrltem)$
- bool gslc_ElemXListboxGetItem (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nItemCurSel, char *pStrItem, uint8_t nStrItemLen)

Get the indexed listbox item.

int16_t gslc_ElemXListboxGetItemCnt (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Get the number of items in the listbox.

bool gslc_ElemXListboxDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)

Draw a Listbox element on the screen.

bool gslc_ElemXListboxTouch (void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY)

Handle touch events to Listbox element.

int16_t gslc_ElemXListboxGetSel (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Get a Listbox element's current selection.

bool gslc_ElemXListboxSetSel (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nltemCurSel)

Set a Listbox element's current selection.

- bool gslc_ElemXListboxSetScrollPos (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, uint16_t nScrollPos)
 Set the Listbox scroll position.
- void gslc_ElemXListboxSetSelFunc (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, GSLC_CB_XLISTBO

 X SEL funcCb)

Assign the selection callback function for a Listbox.

9.17.1 Macro Definition Documentation

- 9.17.1.1 #define GSLC_TYPEX_LISTBOX
- 9.17.1.2 #define XLISTBOX_BUF_OH_R
- 9.17.1.3 #define XLISTBOX_SEL_NONE
- 9.17.1.4 #define XLISTBOX_SIZE_AUTO

9.17.2 Typedef Documentation

9.17.2.1 typedef bool(* GSLC_CB_XLISTBOX_SEL) (void *pvGui, void *pvElem, int16_t nSel)

Callback function for Listbox feedback.

9.17.3 Function Documentation

9.17.3.1 bool gslc_ElemXListboxAddItem ($gslc_tsGui*pGui, gslc_tsElemRef*pElemRef, const char*pStrItem$)

Add an item to the listbox.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Ptr to Element Reference to update
in	pStrItem	String to use when creating the listbox item

Returns

true if OK, false if fail (eg. insufficient buffer storage)

9.17.3.2 gslc_tsElemRef* gslc_ElemXListboxCreate (gslc_tsGui * pGui, int16_t nElemId, int16_t nPage, gslc_tsXListbox * pXData, gslc_tsRect rElem, int16_t nFontId, uint8_t * pBufftems, uint16_t nBufftemsMax, int16_t nSelDefault)

Create a Listbox Element.

Parameters

in	pGui	Pointer to GUI
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)
in	nPage	Page ID to attach element to
in	pXData	Ptr to extended element data structure
in	rElem	Rectangle coordinates defining checkbox size
in	nFontld	Font ID for item display

Parameters

	in	pBufItems	Pointer to buffer that will contain list of items
	in	nBufltemsMax	Max size of buffer for list of items (pBufItems)
Ī	in	nSelDefault	Default item to select

Returns

Pointer to Element reference or NULL if failure

9.17.3.3 bool gslc_ElemXListboxDraw (void * pvGui, void * pvElemRef, gslc_teRedrawType eRedraw)

Draw a Listbox element on the screen.

• Called from gslc_ElemDraw()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element (typecast to gslc_tsElemRef*)
in	eRedraw	Redraw mode

Returns

true if success, false otherwise

9.17.3.4 bool gslc_ElemXListboxGetItem (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, int16_t nItemCurSel, char * pStrItem, uint8_t nStrItemLen)

Get the indexed listbox item.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Ptr to Element Reference to update
in	nItemCurSel	Item index to fetch
out	pStrItem	Ptr to the string buffer to receive the item
in	nStrItemLen	Maximum buffer length of pStrItem

Returns

true if success, false if fail (eg. can't locate item)

9.17.3.5 int16_t gslc_ElemXListboxGetItemCnt ($gslc_tsGui*pGui, gslc_tsElemRef*pElemRef$)

Get the number of items in the listbox.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Ptr to Element Reference to update

Returns

Number of items

9.17.3.6 int16_t gslc_ElemXListboxGetSel ($gslc_tsGui*pGui*, gslc_tsElemRef*pElemRef*)$

Get a Listbox element's current selection.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference

Returns

Current Listbox selection (or -1 if none)

9.17.3.7 void gslc_ElemXListboxltemsSetGap (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, int8_t nGap, gslc_tsColor colGap)

Configure the gap between listbox items.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Ptr to Element Reference to update
in	nGap	Set the gap between listbox items (0 for none)
in	colGap	Set the color of the gap between listbox items

Returns

none

9.17.3.8 void gslc_ElemXListboxItemsSetSize (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, int16_t nItemW, int16_t nItemH)

Configure the size of the listbox items.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Ptr to Element Reference to update
in	nItemW	Set the width of a listbox item (or -1 to auto-size)
in	nItemH	Set the height of a listbox item

Returns

none

9.17.3.9 void gslc_ElemXListboxReset (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef)

Empty the listbox of all items.

Parameters

ſ	in	pGui	Pointer to GUI
Ī	in	pElemRef	Ptr to Element Reference to update

Returns

none

9.17.3.10 void gslc_ElemXListboxSetMargin (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, int8_t nMarginW, int8_t nMarginH)

Configure the margin inside the listbox.

• Defines the region bewteen the element rect and the inner listbox items

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Ptr to Element Reference to update
in	nMarginW	Set the margin (horizontal) inside the listbox (0 for none)
in	nMarginH	Set the margin (horizontal) inside the listbox (0 for none)

Returns

none

9.17.3.11 bool gslc_ElemXListboxSetScrollPos (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, uint16_t nScrollPos)

Set the Listbox scroll position.

Parameters

	in	pGui	Pointer to GUI
	in	pElemRef	Pointer to Element reference
Ì	in	nScrollPos	Scroll the listbox so that the nScrollPos item is at the top (0 default)

Returns

true if success, false if fail

 $9.17.3.12 \quad bool\ gslc_ElemXListboxSetSel\ (\ gslc_tsGui*pGui,\ gslc_tsElemRef*pElemRef,\ int16_t\ nltemCurSel\)$

Set a Listbox element's current selection.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nItemCurSel	Listbox item to select (or -1 for none)

Returns

true if success, false if fail

9.17.3.13 void gslc_ElemXListboxSetSelFunc ($gslc_tsGui*pGui, gslc_tsElemRef*pElemRef, GSLC_CB_XLISTBOX_SEL funcCb$)

Assign the selection callback function for a Listbox.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	funcCb	Function pointer to selection routine (or NULL for none)

Returns

none

 $9.17.3.14 \quad \text{void gslc_ElemXListboxSetSize (} \quad \text{gslc_tsGui} * \textit{pGui}, \quad \text{gslc_tsElemRef} * \textit{pElemRef}, \quad \text{int8_t} \; \textit{nRows}, \quad \text{int8_t} \; \textit{nCols} \; \text{)}$

Configure the number of rows & columns to display in the listbox.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Ptr to Element Reference to update
in	nRows	Number of rows (>= 1, or XLISTBOX_SIZE_AUTO to base on content)
in	nCols	Number of columns (>= 1)

Returns

none

9.17.3.15 bool gslc_ElemXListboxTouch (void * pvGui, void * pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY)

Handle touch events to Listbox element.

• Called from gslc_ElemSendEventTouch()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element ref (typecast to gslc_tsElemRef*)
in	eTouch	Touch event type
in	nRelX	Touch X coord relative to element
in	nRelY	Touch Y coord relative to element


Returns

true if success, false otherwise

9.18 src/elem/XProgress.c File Reference

```
#include "GUIslice.h"
#include "GUIslice_drv.h"
#include "elem/XProgress.h"
#include <stdio.h>
```

Include dependency graph for XProgress.c:

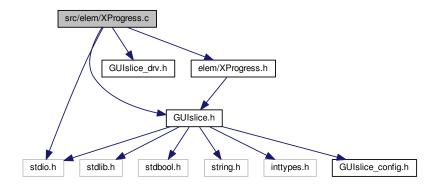

Functions

 gslc_tsElemRef * gslc_ElemXProgressCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsX← Progress *pXData, gslc_tsRect rElem, int16_t nMin, int16_t nMax, int16_t nVal, gslc_tsColor colGauge, bool bVert)

Create a Progress Bar Element.

- void gslc_ElemXProgressSetVal (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nVal)
 Update a Gauge element's current value.
- void gslc_ElemXProgressSetFlip (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bFlip)

 Set a Gauge element's fill direction.
- bool gslc_ElemXProgressDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)

 Draw a gauge element on the screen.

Helper function to draw a gauge with style: progress bar.

Variables

- const char GSLC_PMEM ERRSTR_NULL []
- const char GSLC_PMEM ERRSTR_PXD_NULL []

9.18.1 Function Documentation

9.18.1.1 gslc_tsElemRef* gslc_ElemXProgressCreate (gslc_tsGui * pGui, int16_t nElemId, int16_t nPage, gslc_tsXProgress * pXData, gslc_tsRect rElem, int16_t nMin, int16_t nMax, int16_t nVal, gslc_tsColor colGauge, bool bVert)

Create a Progress Bar Element.

• Draws a gauge element that represents a proportion (nVal) between nMin and nMax.

Parameters

in	pGui	Pointer to GUI	
in	nElemId Element ID to assign (016383 or GSLC_ID_AUTO to autogen)		
in	nPage	Page ID to attach element to	
in	pXData	Ptr to extended element data structure	
in	rElem Rectangle coordinates defining gauge size		
in	nMin	Minimum value of gauge for nVal comparison	
in	nMax	Maximum value of gauge for nVal comparison	
in	nVal	Starting value of gauge	
in	colGauge Color for the gauge indicator		
in	bVert	Flag to indicate vertical vs horizontal action (true = vertical, false = horizontal)	

Returns

Pointer to Element reference or NULL if failure

9.18.1.2 bool gslc_ElemXProgressDraw (void * pvGui, void * pvElemRef, gslc_teRedrawType eRedraw)

Draw a gauge element on the screen.

Called from gslc_ElemDraw()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
in	eRedraw	Redraw mode

Returns

true if success, false otherwise

9.18.1.3 bool gslc_ElemXProgressDrawHelp ($gslc_tsGui*pGui, gslc_tsElemRef*pElemRef, gslc_teRedrawType eRedraw$)

Helper function to draw a gauge with style: progress bar.

• Called from gslc_ElemXProgressDraw()

Parameters

i	n	pGui	Ptr to GUI
i	n	pElemRef	Ptr to Element reference
i	n	eRedraw	Redraw status

Returns

true if success, false otherwise

9.18.1.4 void gslc_ElemXProgressSetFlip (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, bool bFlip)

Set a Gauge element's fill direction.

- · Setting bFlip reverses the default fill direction
- · Default fill direction for horizontal gauges: left-to-right
- · Default fill direction for vertical gauges: bottom-to-top

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	bFlip	If set, reverse direction of fill from default

Returns

none

9.18.1.5 void gslc_ElemXProgressSetVal ($gslc_tsGui*pGui, gslc_tsElemRef*pElemRef, int16_t nVal$)

Update a Gauge element's current value.

• Note that min & max values are assigned in create()

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nVal	New value to show in gauge


Returns

none


- 9.18.2 Variable Documentation
- 9.18.2.1 const char GSLC_PMEM ERRSTR_NULL[]
- 9.18.2.2 const char GSLC_PMEM ERRSTR_PXD_NULL[]

9.19 src/elem/XProgress.h File Reference

#include "GUIslice.h"
Include dependency graph for XProgress.h:

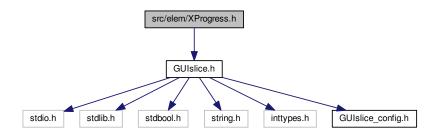

This graph shows which files directly or indirectly include this file:

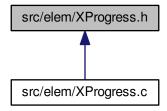

Data Structures

struct gslc_tsXProgress

Extended data for Gauge element.

Macros

- #define GSLC_TYPEX_PROGRESS
- #define gslc_ElemXProgressCreate_P(pGui, nElemId, nPage, nX, nY, nW, nH, nMin_, nMax_, nVal_, col ← Frame_, colFill_, colGauge_, bVert_)

Create a Gauge Element in Flash.

Functions

gslc_tsElemRef * gslc_ElemXProgressCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsX←
 Progress *pXData, gslc_tsRect rElem, int16_t nMin, int16_t nMax, int16_t nVal, gslc_tsColor colGauge, bool bVert)

Create a Progress Bar Element.

- void gslc_ElemXProgressSetVal (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nVal)
 - Update a Gauge element's current value.
- void gslc_ElemXProgressSetFlip (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bFlip)
 - Set a Gauge element's fill direction.
- bool gslc_ElemXProgressDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)
 - Draw a gauge element on the screen.

Helper function to draw a gauge with style: progress bar.

9.19.1 Macro Definition Documentation

9.19.1.1 #define gslc_ElemXProgressCreate_P(pGui, nElemId, nPage, nX, nY, nW, nH, nMin_, nMax_, nVal_, colFrame_, colFill_, colGauge_, bVert_)

Create a Gauge Element in Flash.

Parameters

in	pGui	Pointer to GUI
in	nElemId	Unique element ID to assign
in	nPage	Page ID to attach element to
in	nΧ	X coordinate of element
in	nY	Y coordinate of element
in	nW	Width of element
in	nH	Height of element
in	nMin_	Minimum value of gauge for nVal comparison
in	nMax_	Maximum value of gauge for nVal comparison
in	nVal_	Starting value of gauge
in	col⊷	Color for the gauge frame
	Frame_	
in	colFill_	Color for the gauge background fill
in	col⊷	Color for the gauge indicator
	Gauge_	
in	bVert_	Flag to indicate vertical vs horizontal action (true = vertical, false = horizontal)

Returns

none

9.19.1.2 #define GSLC_TYPEX_PROGRESS

9.19.2 Function Documentation

9.19.2.1 gslc_tsElemRef* gslc_ElemXProgressCreate (gslc_tsGui * pGui, int16_t nElemId, int16_t nPage, gslc_tsXProgress * pXData, gslc_tsRect rElem, int16_t nMin, int16_t nMax, int16_t nVal, gslc_tsColor colGauge, bool bVert)

Create a Progress Bar Element.

• Draws a gauge element that represents a proportion (nVal) between nMin and nMax.

Parameters

in	pGui	Pointer to GUI
in	nElemId Element ID to assign (016383 or GSLC_ID_AUTO to autogen)	
in	nPage	Page ID to attach element to
in	pXData	Ptr to extended element data structure
in	rElem	Rectangle coordinates defining gauge size
in	nMin	Minimum value of gauge for nVal comparison
in	nMax	Maximum value of gauge for nVal comparison
in	nVal	Starting value of gauge
in	colGauge	Color for the gauge indicator
in	bVert	Flag to indicate vertical vs horizontal action (true = vertical, false = horizontal)

Returns

Pointer to Element reference or NULL if failure

9.19.2.2 bool gslc_ElemXProgressDraw (void * pvGui, void * pvElemRef, gslc_teRedrawType eRedraw)

Draw a gauge element on the screen.

• Called from gslc_ElemDraw()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
in	eRedraw	Redraw mode

Returns

true if success, false otherwise

9.19.2.3 bool gslc_ElemXProgressDrawHelp (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, gslc_teRedrawType eRedraw)

Helper function to draw a gauge with style: progress bar.

• Called from gslc_ElemXProgressDraw()

Parameters

in	pGui	Ptr to GUI
in	pElemRef	Ptr to Element reference
in	eRedraw	Redraw status

Returns

true if success, false otherwise

9.19.2.4 void gslc_ElemXProgressSetFlip (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, bool bFlip)

Set a Gauge element's fill direction.

- · Setting bFlip reverses the default fill direction
- · Default fill direction for horizontal gauges: left-to-right
- · Default fill direction for vertical gauges: bottom-to-top

Parameters

ir	pGui	Pointer to GUI
ir	pElemRef	Pointer to Element reference
ir	bFlip	If set, reverse direction of fill from default

Returns

none

9.19.2.5 void gslc_ElemXProgressSetVal (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, int16_t nVal)

Update a Gauge element's current value.

· Note that min & max values are assigned in create()

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nVal	New value to show in gauge


Returns

none

9.20 src/elem/XRadial.c File Reference

```
#include "GUIslice.h"
#include "GUIslice_drv.h"
#include "elem/XRadial.h"
#include <stdio.h>
#include <math.h>
```

Include dependency graph for XRadial.c:

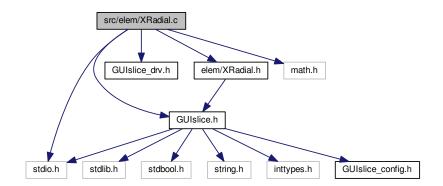

Functions

 gslc_tsElemRef * gslc_ElemXRadialCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsX← Radial *pXData, gslc_tsRect rElem, int16_t nMin, int16_t nMax, int16_t nVal, gslc_tsColor colGauge)

Create a Radial Gauge Element.

• void gslc_ElemXRadialSetIndicator (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor colGauge, uint16_t nIndicLen, uint16_t nIndicTip, bool bIndicFill)

Configure the appearance of the Gauge indicator.

• void gslc_ElemXRadialSetTicks (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor colTick, uint16 t nTickCnt, uint16 t nTickLen)

Configure the appearance of the Gauge ticks.

void gslc_ElemXRadialSetVal (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nVal)

Update a Gauge element's current value.

void gslc_ElemXRadialSetFlip (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bFlip)

Set a Gauge element's rotation direction.

- bool gslc_ElemXRadialDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)
 Draw a gauge element on the screen.
- void gslc_ElemXRadialDrawRadialHelp (gslc_tsGui *pGui, int16_t nX, int16_t nY, uint16_t nArrowLen, uint16_t nArrowSz, int16_t n64Ang, bool bFill, gslc_tsColor colFrame)

Helper function to draw a gauge with style: radial.

Variables

- const char GSLC_PMEM ERRSTR_NULL []
- const char GSLC_PMEM ERRSTR_PXD_NULL []

9.20.1 Function Documentation

```
9.20.1.1 gslc_tsElemRef* gslc_ElemXRadialCreate ( gslc_tsGui * pGui, int16_t nElemId, int16_t nPage, gslc_tsXRadial * pXData, gslc_tsRect rElem, int16_t nMin, int16_t nMax, int16_t nVal, gslc_tsColor colGauge )
```

Create a Radial Gauge Element.

• Draws a gauge element that represents a proportion (nVal) between nMin and nMax.

Parameters

in	pGui	Pointer to GUI
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)
in	nPage	Page ID to attach element to
in	pXData	Ptr to extended element data structure
in	rElem	Rectangle coordinates defining gauge size
in	nMin	Minimum value of gauge for nVal comparison
in	nMax	Maximum value of gauge for nVal comparison
in	nVal	Starting value of gauge
in	colGauge	Color for the gauge indicator

Returns

Pointer to Element reference or NULL if failure

9.20.1.2 bool gslc_ElemXRadialDraw (void * pvGui, void * pvElemRef, gslc_teRedrawType eRedraw)

Draw a gauge element on the screen.

Called from gslc_ElemDraw()

Parameters

	in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
	in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
Ī	in	eRedraw	Redraw mode

Returns

true if success, false otherwise

9.20.1.3 bool gslc_ElemXRadialDrawRadial (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, gslc_teRedrawType eRedraw)

Helper function to draw a gauge with style: radial.

• Called from gslc_ElemXRadialDraw()

Parameters

i	n	pGui	Ptr to GUI
i	n	pElemRef	Ptr to Element reference
i	n	eRedraw	Redraw status

Returns

true if success, false otherwise

- 9.20.1.4 void gslc_ElemXRadialDrawRadialHelp (gslc_tsGui * pGui, int16_t nX, int16_t nY, uint16_t nArrowLen, uint16_t nArrowSz, int16_t n64Ang, bool bFill, gslc_tsColor colFrame)
- 9.20.1.5 void gslc_ElemXRadialSetFlip ($gslc_tsGui*pGui, gslc_tsElemRef*pElemRef, bool bFlip$)

Set a Gauge element's rotation direction.

- Setting bFlip reverses the rotation direction
- · Default rotation is clockwise. When bFlip is set, uses counter-clockwise

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	bFlip	If set, reverse direction of rotation from default

Returns

none

9.20.1.6 void gslc_ElemXRadialSetIndicator (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, gslc_tsColor colGauge, uint16_t nIndicLen, uint16_t nIndicTip, bool bIndicFill)

Configure the appearance of the Gauge indicator.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	colGauge	Color of the indicator
in	nIndicLen	Length of the indicator
in	nIndicTip	Size of the indicator tip
in	bIndicFill	Fill in the indicator if true

Returns

none

9.20.1.7 void gslc_ElemXRadialSetTicks (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, gslc_tsColor colTick, uint16_t nTickCnt, uint16_t nTickLen)

Configure the appearance of the Gauge ticks.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	colTick	Color of the gauge ticks
in	nTickCnt	Number of ticks to draw around / along gauge
in	nTickLen	Length of the tick marks to draw

Returns

none

9.20.1.8 void gslc_ElemXRadialSetVal (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, int16_t nVal)

Update a Gauge element's current value.

Note that min & max values are assigned in create()

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nVal	New value to show in gauge

Returns

none


9.20.2 Variable Documentation

9.20.2.1 const char GSLC_PMEM ERRSTR_NULL[]


9.20.2.2 const char GSLC_PMEM ERRSTR_PXD_NULL[]

9.21 src/elem/XRadial.h File Reference

#include "GUIslice.h"
Include dependency graph for XRadial.h:

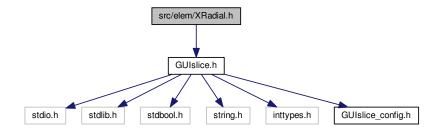

This graph shows which files directly or indirectly include this file:

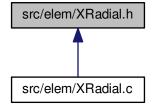

Data Structures

struct gslc_tsXRadial

Extended data for Gauge element.

Macros

- #define GSLC_TYPEX_RADIAL
- #define gslc_ElemXRadialCreate_P(pGui, nElemId, nPage, nX, nY, nW, nH, nMin_, nMax_, nVal_, col
 Frame_, colFill_, colGauge_)

Create a Gauge Element in Flash.

Functions

 gslc_tsElemRef * gslc_ElemXRadialCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsX← Radial *pXData, gslc_tsRect rElem, int16_t nMin, int16_t nMax, int16_t nVal, gslc_tsColor colGauge)

Create a Radial Gauge Element.

 void gslc_ElemXRadialSetIndicator (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor colGauge, uint16_t nIndicLen, uint16_t nIndicTip, bool bIndicFill)

Configure the appearance of the Gauge indicator.

 void gslc_ElemXRadialSetTicks (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor colTick, uint16_t nTickCnt, uint16_t nTickLen)

Configure the appearance of the Gauge ticks.

void gslc_ElemXRadialSetVal (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nVal)

Update a Gauge element's current value.

• void gslc_ElemXRadialSetFlip (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bFlip)

Set a Gauge element's rotation direction.

bool gslc_ElemXRadialDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)

Draw a gauge element on the screen.

Helper function to draw a gauge with style: radial.

9.21.1 Macro Definition Documentation

9.21.1.1 #define gslc_ElemXRadialCreate_P(pGui, nElemId, nPage, nX, nY, nW, nH, nMin_, nMax_, nVal_, colFrame_, colFill_, colGauge_)

Create a Gauge Element in Flash.

in	pGui	Pointer to GUI	
in	nElemId	Unique element ID to assign	
in	nPage	Page ID to attach element to	
in	nΧ	X coordinate of element	
in	nΥ	Y coordinate of element	
in	nW	Width of element	
in	nΗ	Height of element	

Parameters

in	nMin_	Minimum value of gauge for nVal comparison
in	nMax_	Maximum value of gauge for nVal comparison
in	nVal_	Starting value of gauge
in	col⇔	Color for the gauge frame
	Frame_	
in	colFill_	Color for the gauge background fill
in	col⊷	Color for the gauge indicator
	Gauge_	

Returns

none

9.21.1.2 #define GSLC_TYPEX_RADIAL

9.21.2 Function Documentation

9.21.2.1 gslc_tsElemRef* gslc_ElemXRadialCreate (gslc_tsGui * pGui, int16_t nElemId, int16_t nPage, gslc_tsXRadial * pXData, gslc_tsRect rElem, int16_t nMin, int16_t nMax, int16_t nVal, gslc_tsColor colGauge)

Create a Radial Gauge Element.

• Draws a gauge element that represents a proportion (nVal) between nMin and nMax.

Parameters

in	pGui	Pointer to GUI	
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)	
in	nPage	Page ID to attach element to	
in	pXData	Ptr to extended element data structure	
in	rElem	Rectangle coordinates defining gauge size	
in	nMin	Minimum value of gauge for nVal comparison	
in	nMax	Maximum value of gauge for nVal comparison	
in	nVal	Starting value of gauge	
in	colGauge Color for the gauge indicator		

Returns

Pointer to Element reference or NULL if failure

9.21.2.2 bool gslc_ElemXRadialDraw (void * pvGui, void * pvElemRef, gslc_teRedrawType eRedraw)

Draw a gauge element on the screen.

• Called from gslc_ElemDraw()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
in	eRedraw	Redraw mode

Returns

true if success, false otherwise

9.21.2.3 bool gslc_ElemXRadialDrawRadial (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, gslc_teRedrawType eRedraw)

Helper function to draw a gauge with style: radial.

• Called from gslc_ElemXRadialDraw()

Parameters

in	pGui	Ptr to GUI
in	pElemRef	Ptr to Element reference
in	eRedraw	Redraw status

Returns

true if success, false otherwise

9.21.2.4 void gslc_ElemXRadialSetFlip ($gslc_tsGui*pGui, gslc_tsElemRef*pElemRef, bool bFlip$)

Set a Gauge element's rotation direction.

- Setting bFlip reverses the rotation direction
- Default rotation is clockwise. When bFlip is set, uses counter-clockwise

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	bFlip	If set, reverse direction of rotation from default

Returns

none

9.21.2.5 void gslc_ElemXRadialSetIndicator (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, gslc_tsColor colGauge, uint16_t nIndicLen, uint16_t nIndicTip, bool bIndicFill)

Configure the appearance of the Gauge indicator.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	colGauge	Color of the indicator
in	nIndicLen	Length of the indicator
in	nIndicTip	Size of the indicator tip
in	bIndicFill	Fill in the indicator if true

Returns

none

9.21.2.6 void gslc_ElemXRadialSetTicks (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, gslc_tsColor colTick, uint16_t nTickCnt, uint16_t nTickLen)

Configure the appearance of the Gauge ticks.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	colTick	Color of the gauge ticks
in	nTickCnt	Number of ticks to draw around / along gauge
in	nTickLen	Length of the tick marks to draw

Returns

none

9.21.2.7 void gslc_ElemXRadialSetVal (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, int16_t nVal)

Update a Gauge element's current value.

• Note that min & max values are assigned in create()

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nVal	New value to show in gauge


Returns

none

9.22 src/elem/XRamp.c File Reference

```
#include "GUIslice.h"
#include "GUIslice_drv.h"
#include "elem/XRamp.h"
#include <stdio.h>
```

Include dependency graph for XRamp.c:

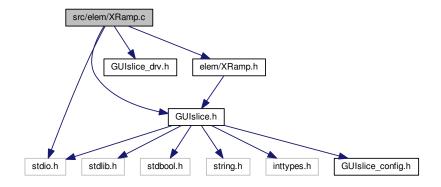

Functions

 gslc_tsElemRef * gslc_ElemXRampCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsX← Ramp *pXData, gslc_tsRect rElem, int16_t nMin, int16_t nMax, int16_t nVal, gslc_tsColor colGauge, bool bVert)

Create a Ramp Gauge Element.

- $\bullet \ \ void \ gslc_ElemXRampSetVal \ (gslc_tsGui \ *pGui, \ gslc_tsElemRef \ *pElemRef, \ int 16_t \ nVal) \\$
- bool gslc_ElemXRampDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)

Draw a gauge element on the screen.

Update a Gauge element's current value.

• bool gslc_ElemXRampDrawHelp (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_teRedrawType e ← Redraw)

Helper function to draw a gauge with style: ramp.

Variables

- const char GSLC_PMEM ERRSTR_NULL []
- const char GSLC_PMEM ERRSTR_PXD_NULL []

9.22.1 Function Documentation

9.22.1.1 gslc_tsElemRef* gslc_ElemXRampCreate (gslc_tsGui * pGui, int16_t nElemId, int16_t nPage, gslc_tsXRamp * pXData, gslc_tsRect rElem, int16_t nMin, int16_t nMax, int16_t nVal, gslc_tsColor colGauge, bool bVert)

Create a Ramp Gauge Element.

• Draws a gauge element that represents a proportion (nVal) between nMin and nMax.

Parameters

in	pGui	Pointer to GUI	
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)	
in	nPage	Page ID to attach element to	
in	pXData	Ptr to extended element data structure	
in	rElem	Rectangle coordinates defining gauge size	
in	nMin	Minimum value of gauge for nVal comparison	
in	nMax	Maximum value of gauge for nVal comparison	
in	nVal	Starting value of gauge	
in	colGauge	Color for the gauge indicator	
in	bVert	Flag to indicate vertical vs horizontal action (true = vertical, false = horizontal)	

Returns

Pointer to Element reference or NULL if failure

9.22.1.2 bool gslc_ElemXRampDraw (void * pvGui, void * pvElemRef, gslc_teRedrawType eRedraw)

Draw a gauge element on the screen.

• Called from gslc_ElemDraw()

	in	pvGui	Void ptr to GUI (typecast to gslc_tsGui∗)
	in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
Ì	in	eRedraw	Redraw mode

Returns

true if success, false otherwise

9.22.1.3 bool gslc_ElemXRampDrawHelp (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, gslc_teRedrawType eRedraw)

Helper function to draw a gauge with style: ramp.

Called from gslc_ElemXRampDraw()

Parameters

in	pGui	Ptr to GUI
in	pElemRef	Ptr to Element reference
in	eRedraw	Redraw status

Returns

true if success, false otherwise

9.22.1.4 void gslc_ElemXRampSetVal (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, int16_t nVal)

Update a Gauge element's current value.

• Note that min & max values are assigned in create()

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nVal	New value to show in gauge


Returns

none


- 9.22.2 Variable Documentation
- 9.22.2.1 const char GSLC_PMEM ERRSTR_NULL[]
- 9.22.2.2 const char GSLC_PMEM ERRSTR_PXD_NULL[]

9.23 src/elem/XRamp.h File Reference

#include "GUIslice.h"
Include dependency graph for XRamp.h:

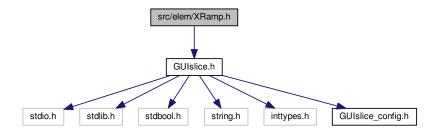

This graph shows which files directly or indirectly include this file:

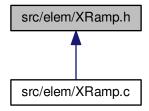

Data Structures

struct gslc_tsXRamp

Extended data for Gauge element.

Macros

- #define GSLC_TYPEX_RAMP
- #define gslc_ElemXRampCreate_P(pGui, nElemId, nPage, nX, nY, nW, nH, nMin_, nMax_, nVal_, col ← Frame_, colFill_)

Create a Gauge Element in Flash.

Functions

 gslc_tsElemRef * gslc_ElemXRampCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsX← Ramp *pXData, gslc_tsRect rElem, int16_t nMin, int16_t nMax, int16_t nVal, gslc_tsColor colGauge, bool bVert)

Create a Ramp Gauge Element.

void gslc_ElemXRampSetVal (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nVal)

Update a Gauge element's current value.

bool gslc_ElemXRampDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)

Draw a gauge element on the screen.

Helper function to draw a gauge with style: ramp.

9.23.1 Macro Definition Documentation

9.23.1.1 #define gslc_ElemXRampCreate_P(pGui, nElemId, nPage, nX, nY, nW, nH, nMin_, nMax_, nVal_, colFrame_, colFill_)

Create a Gauge Element in Flash.

Parameters

in	pGui	Pointer to GUI
in	nElemId	Unique element ID to assign
in	nPage	Page ID to attach element to
in	nΧ	X coordinate of element
in	nΥ	Y coordinate of element
in	nW	Width of element
in	nH	Height of element
in	nMin_	Minimum value of gauge for nVal comparison
in	nMax_	Maximum value of gauge for nVal comparison
in	nVal_	Starting value of gauge
in	col⊷	Color for the gauge frame
	Frame_	
in	colFill_	Color for the gauge background fill

Returns

none

9.23.1.2 #define GSLC_TYPEX_RAMP

9.23.2 Function Documentation

9.23.2.1 gslc_tsElemRef* gslc_ElemXRampCreate (gslc_tsGui * pGui, int16_t nElemId, int16_t nPage, gslc_tsXRamp * pXData, gslc_tsRect rElem, int16_t nMin, int16_t nMax, int16_t nVal, gslc_tsColor colGauge, bool bVert)

Create a Ramp Gauge Element.

272 File Documentation • Draws a gauge element that represents a proportion (nVal) between nMin and nMax.

Parameters

in	pGui	Pointer to GUI
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)
in	nPage	Page ID to attach element to
in	pXData	Ptr to extended element data structure
in	rElem	Rectangle coordinates defining gauge size
in	nMin	Minimum value of gauge for nVal comparison
in	nMax	Maximum value of gauge for nVal comparison
in	nVal	Starting value of gauge
in	colGauge	Color for the gauge indicator
in	bVert	Flag to indicate vertical vs horizontal action (true = vertical, false = horizontal)

Returns

Pointer to Element reference or NULL if failure

9.23.2.2 bool gslc_ElemXRampDraw (void * pvGui, void * pvElemRef, gslc_teRedrawType eRedraw)

Draw a gauge element on the screen.

• Called from gslc_ElemDraw()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
in	eRedraw	Redraw mode

Returns

true if success, false otherwise

9.23.2.3 bool gslc_ElemXRampDrawHelp ($gslc_tsGui*pGui, gslc_tsElemRef*pElemRef, gslc_teRedrawType eRedraw$)

Helper function to draw a gauge with style: ramp.

• Called from gslc_ElemXRampDraw()

i	n	pGui	Ptr to GUI
i	n	pElemRef	Ptr to Element reference
i	n	eRedraw	Redraw status

Returns

true if success, false otherwise

9.23.2.4 void gslc_ElemXRampSetVal (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, int16_t nVal)

Update a Gauge element's current value.

· Note that min & max values are assigned in create()

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nVal	New value to show in gauge


Returns

none

9.24 src/elem/XRingGauge.c File Reference

```
#include "GUIslice.h"
#include "GUIslice_drv.h"
#include "elem/XRingGauge.h"
#include <stdio.h>
```

Include dependency graph for XRingGauge.c:

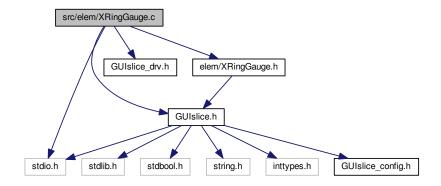

Functions

 gslc_tsElemRef * gslc_ElemXRingGaugeCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_← tsXRingGauge *pXData, gslc_tsRect rElem, char *pStrBuf, uint8_t nStrBufMax, int16_t nFontId) Create an XRingGauge element.

• bool gslc_ElemXRingGaugeDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)

Draw the template element on the screen.

- void gslc_ElemXRingGaugeSetVal (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nVal) Set an Ring Gauge current indicator value.
- void gslc_ElemXRingGaugeSetValRange (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nValMin, int16_t nValMax)

Defines the range of values that may be passed into SetVal(), used to scale the input to SetVal().

void gslc_ElemXRingGaugeSetAngleRange (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nStart, int16_t nRange, bool bClockwise)

Defines the angular range of the gauge, including both the active and inactive regions.

- void gslc_ElemXRingGaugeSetThickness (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int8_t nThickness)

 Defines the thickness of the ring arcs.
- void gslc_ElemXRingGaugeSetColorActiveFlat (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor colActive)

Defines the color of the active region to be a flat (constant) color.

void gslc_ElemXRingGaugeSetColorActiveGradient (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_
tsColor colStart, gslc_tsColor colEnd)

Defines the color of the active region to be a gradient using two color stops.

void gslc_ElemXRingGaugeSetColorInactive (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor collnactive)

Defines the color of the inactive region to be a flat (constant) color.

void gslc ElemXRingGaugeSetQuality (gslc tsGui *pGui, gslc tsElemRef *pElemRef, uint16 t nSegments)

Sets the quality of the ring drawing by defining the number of segments that are used when rendering a 360 degree gauge. The larger the number, the more segments are used and the smoother the curve.

Variables

- const char GSLC_PMEM ERRSTR_NULL []
- const char GSLC_PMEM ERRSTR_PXD_NULL []

9.24.1 Function Documentation

9.24.1.1 gslc_tsElemRef* gslc_ElemXRingGaugeCreate (gslc_tsGui * pGui, int16_t nElemId, int16_t nPage, gslc_tsXRingGauge * pXData, gslc_tsRect rElem, char * pStrBuf, uint8_t nStrBufMax, int16_t nFontId)

Create an XRingGauge element.

in	pGui	Pointer to GUI
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)
in	nPage	Page ID to attach element to
in	pXData	Ptr to extended element data structure
in	rElem	The square box that bounds the ring element. If a rectangular region is provided, then the
		ring control will be centered in the long axis.
in	pStrBuf	String buffer to use for gauge inner text
in	nStrBufMax	Maximum length of string buffer (pStrBuf)
in	nFontId	Font ID to use for text display

Returns

Pointer to Element reference or NULL if failure

9.24.1.2 bool gslc_ElemXRingGaugeDraw (void * pvGui, void * pvElemRef, gslc_teRedrawType eRedraw)

Draw the template element on the screen.

• Called from gslc_ElemDraw()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element (typecast to gslc_tsElemRef*)
in	eRedraw	Redraw mode

Returns

true if success, false otherwise

9.24.1.3 void gslc_ElemXRingGaugeSetAngleRange (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, int16_t nStart, int16_t nRange, bool bClockwise)

Defines the angular range of the gauge, including both the active and inactive regions.

- nStart defines the angle at the beginning of the active region.
- The current position marks the end of the active region and the beginning of the inactive region.
- nRange defines the angular range from the start of the active region to the end of the inactive region. In most cases, a range of 360 degrees is used.
- · All angles are measured in units of degrees.
- Angles are measured with 0 at the top, 90 towards the right, 180 towards the bottom, 270 towards the left, etc.

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nStart	Define angle of start of active region (measured in degrees)
in	nRange	Define angular range from strt of active region to end of the inactive region (measured in degrees)
in	bClockwise	Defines the direction in which the active region grows (true for clockwise) [FORCED TRUE, FOR FUTURE IMPLEMENTATION]

Returns

none

9.24.1.4 void gslc_ElemXRingGaugeSetColorActiveFlat (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, gslc_tsColor colActive)

Defines the color of the active region to be a flat (constant) color.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	colActive	Color of active region

Returns

none

9.24.1.5 void gslc_ElemXRingGaugeSetColorActiveGradient (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, gslc_tsColor colStart, gslc_tsColor colEnd)

Defines the color of the active region to be a gradient using two color stops.

The active region will be filled according to the proportion between nMin and nMax. The gradient is defined by a linear RGB blend between the two color stops(colStart and colEnd)

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	colStart	Starting color of gradient fill
in	colEnd	Ending color of gradient fill

Returns

none

9.24.1.6 void gslc_ElemXRingGaugeSetColorInactive (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, gslc_tsColor collnactive)

Defines the color of the inactive region to be a flat (constant) color.

The inactive color is often set to be the same as the background but it can be set to a different color to indicate the remainder of the value range that is yet to be filled.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	collnactive	Color of inactive region

Returns

none

9.24.1.7 void gslc_ElemXRingGaugeSetQuality ($gslc_tsGui*pGui, gslc_tsElemRef*pElemRef, uint16_t nSegments$)

Sets the quality of the ring drawing by defining the number of segments that are used when rendering a 360 degree gauge. The larger the number, the more segments are used and the smoother the curve.

A larger ring gauge may need a higher quality number to maintain a smoothed curve appearance.

Parameters

in	pGui	Pointer to GUI	
in	pElemRef	Pointer to Element reference	
in	nSegments	Number of arc segments to render a complete circle. The higher the value, the smoother the ring. Note that 360/nSegments should be an integer result, thus the allowable quality settings are: 360 (max quality), 180, 120, 90, 72, 60, 45, 40, 36 (low quality), etc.	

Returns

none

9.24.1.8 void gslc_ElemXRingGaugeSetThickness ($gslc_tsGui*pGui, gslc_tsElemRef*pElemRef, int8_t nThickness$)

Defines the thickness of the ring arcs.

More specifically, it defines the reduction in radius from the outer radius to the inner radius in pixels.

· Default thickness is 10 pixels

Parameters

	in	pGui	Pointer to GUI
	in	pElemRef	Pointer to Element reference
ľ	in	nThickness	Thickness of ring

Returns

none

9.24.1.9 void gslc_ElemXRingGaugeSetVal (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, int16_t nVal)

Set an Ring Gauge current indicator value.

Updates the current value of the ring gauge. The active region will be drawn up to the position defined by nVal within the value range defined by SetValRange(nMin,nMax). A SetVal() close to nMin will cause a very small active region to be drawn and a large remainder drawn in the inactive color, whereas a SetVal() close to nMax will cause a more complete active region to be drawn. When SetVal() equals nMax, the entire angular range will be drawn in the active color (and no inactive region).

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nVal	New position value

Returns

none

9.24.1.10 void gslc_ElemXRingGaugeSetValRange ($gslc_tsGui*pGui, gslc_tsElemRef*pElemRef, int16_t nValMin, int16_t nValMax$)

Defines the range of values that may be passed into SetVal(), used to scale the input to SetVal().

• Default is 0..100.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nValMin	Minimum value
in	nValMax	Maximum value

Returns

none


9.24.2 Variable Documentation

9.24.2.1 const char GSLC_PMEM ERRSTR_NULL[]


9.24.2.2 const char GSLC_PMEM ERRSTR_PXD_NULL[]

9.25 src/elem/XRingGauge.h File Reference

#include "GUIslice.h"
Include dependency graph for XRingGauge.h:

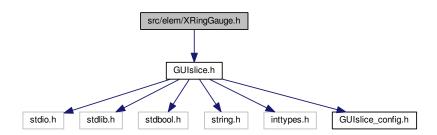

This graph shows which files directly or indirectly include this file:

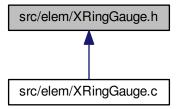

Data Structures

struct gslc_tsXRingGauge
 Extended data for XRingGauge element.

Macros

- #define GSLC_TYPEX_RING
- #define XRING_STR_MAX

Functions

- gslc_tsElemRef * gslc_ElemXRingGaugeCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_
 tsXRingGauge *pXData, gslc_tsRect rElem, char *pStrBuf, uint8_t nStrBufMax, int16_t nFontId)
 - Create an XRingGauge element.
- bool gslc_ElemXRingGaugeDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)

Draw the template element on the screen.

void gslc_ElemXRingGaugeSetVal (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nVal)

Set an Ring Gauge current indicator value.

void gslc_ElemXRingGaugeSetAngleRange (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nStart, int16 t nRange, bool bClockwise)

Defines the angular range of the gauge, including both the active and inactive regions.

void gslc_ElemXRingGaugeSetValRange (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nValMin, int16 t nValMax)

Defines the range of values that may be passed into SetVal(), used to scale the input to SetVal().

- void gslc_ElemXRingGaugeSetThickness (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int8_t nThickness)

 Defines the thickness of the ring arcs.
- void gslc_ElemXRingGaugeSetQuality (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, uint16_t nSegments)

 Sets the quality of the ring drawing by defining the number of segments that are used when rendering a 360 degree gauge. The larger the number, the more segments are used and the smoother the curve.
- void gslc_ElemXRingGaugeSetColorInactive (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor colInactive)

Defines the color of the inactive region to be a flat (constant) color.

void gslc_ElemXRingGaugeSetColorActiveFlat (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor colActive)

Defines the color of the active region to be a flat (constant) color.

void gslc_ElemXRingGaugeSetColorActiveGradient (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_
tsColor colStart, gslc_tsColor colEnd)

Defines the color of the active region to be a gradient using two color stops.

9.25.1 Macro Definition Documentation

9.25.1.1 #define GSLC_TYPEX_RING

9.25.1.2 #define XRING_STR_MAX

9.25.2 Function Documentation

9.25.2.1 gslc_tsElemRef* gslc_ElemXRingGaugeCreate (gslc_tsGui * pGui, int16_t nElemId, int16_t nPage, gslc_tsXRingGauge * pXData, gslc_tsRect rElem, char * pStrBuf, uint8_t nStrBufMax, int16_t nFontId)

Create an XRingGauge element.

in	pGui	Pointer to GUI
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)
in	nPage	Page ID to attach element to
in	pXData	Ptr to extended element data structure
in	rElem	The square box that bounds the ring element. If a rectangular region is provided, then the ring control will be centered in the long axis.
in	pStrBuf	String buffer to use for gauge inner text
in	nStrBufMax	Maximum length of string buffer (pStrBuf)
in	nFontld	Font ID to use for text display

Returns

Pointer to Element reference or NULL if failure

9.25.2.2 bool gslc_ElemXRingGaugeDraw (void * pvGui, void * pvElemRef, gslc_teRedrawType eRedraw)

Draw the template element on the screen.

• Called from gslc_ElemDraw()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element (typecast to gslc_tsElemRef*)
in	eRedraw	Redraw mode

Returns

true if success, false otherwise

9.25.2.3 void gslc_ElemXRingGaugeSetAngleRange (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, int16_t nStart, int16_t nRange, bool bClockwise)

Defines the angular range of the gauge, including both the active and inactive regions.

- nStart defines the angle at the beginning of the active region.
- The current position marks the end of the active region and the beginning of the inactive region.
- nRange defines the angular range from the start of the active region to the end of the inactive region. In most cases, a range of 360 degrees is used.
- · All angles are measured in units of degrees.
- Angles are measured with 0 at the top, 90 towards the right, 180 towards the bottom, 270 towards the left, etc.

in	pGui	Pointer to GUI	
in	pElemRef	Pointer to Element reference	
in	nStart	Define angle of start of active region (measured in degrees)	
in	nRange	Define angular range from strt of active region to end of the inactive region (measured in degrees)	
in	bClockwise	Defines the direction in which the active region grows (true for clockwise) [FORCED TRUE, FOR FUTURE IMPLEMENTATION]	

Returns

none

9.25.2.4 void gslc_ElemXRingGaugeSetColorActiveFlat (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, gslc_tsColor colActive)

Defines the color of the active region to be a flat (constant) color.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	colActive	Color of active region

Returns

none

9.25.2.5 void gslc_ElemXRingGaugeSetColorActiveGradient (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, gslc_tsColor colStart, gslc_tsColor colEnd)

Defines the color of the active region to be a gradient using two color stops.

The active region will be filled according to the proportion between nMin and nMax. The gradient is defined by a linear RGB blend between the two color stops(colStart and colEnd)

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	colStart	Starting color of gradient fill
in	colEnd	Ending color of gradient fill

Returns

none

9.25.2.6 void gslc_ElemXRingGaugeSetColorInactive (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, gslc_tsColor collnactive)

Defines the color of the inactive region to be a flat (constant) color.

The inactive color is often set to be the same as the background but it can be set to a different color to indicate the remainder of the value range that is yet to be filled.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	collnactive	Color of inactive region

Returns

none

 $9.25.2.7 \quad \text{void gslc_ElemXRingGaugeSetQuality (} \ \ \text{gslc_tsElemRef} * \textit{pElemRef}, \ \ \text{uint16_t} \ \textit{nSegments} \)$

Sets the quality of the ring drawing by defining the number of segments that are used when rendering a 360 degree gauge. The larger the number, the more segments are used and the smoother the curve.

A larger ring gauge may need a higher quality number to maintain a smoothed curve appearance.

Parameters

in	pGui	Pointer to GUI	
in	pElemRef	ef Pointer to Element reference	
in	nSegments	Number of arc segments to render a complete circle. The higher the value, the smoother the ring. Note that 360/nSegments should be an integer result, thus the allowable quality settings are: 360 (max quality), 180, 120, 90, 72, 60, 45, 40, 36 (low quality), etc.	

Returns

none

 $9.25.2.8 \quad \text{void gslc_ElemXRingGaugeSetThickness} \left(\begin{array}{ll} \textbf{gslc_tsElemRef} * \textit{pElemRef}, \ \textbf{int8_t} \ \textit{nThickness} \end{array} \right)$

Defines the thickness of the ring arcs.

More specifically, it defines the reduction in radius from the outer radius to the inner radius in pixels.

· Default thickness is 10 pixels

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nThickness	Thickness of ring

Returns

none

9.25.2.9 void gslc_ElemXRingGaugeSetVal (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, int16_t nVal)

Set an Ring Gauge current indicator value.

Updates the current value of the ring gauge. The active region will be drawn up to the position defined by nVal within the value range defined by SetValRange(nMin,nMax). A SetVal() close to nMin will cause a very small active region to be drawn and a large remainder drawn in the inactive color, whereas a SetVal() close to nMax will cause a more complete active region to be drawn. When SetVal() equals nMax, the entire angular range will be drawn in the active color (and no inactive region).

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nVal	New position value

Returns

none

9.25.2.10 void gslc_ElemXRingGaugeSetValRange (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, int16_t nValMin, int16_t nValMax)

Defines the range of values that may be passed into SetVal(), used to scale the input to SetVal().

• Default is 0..100.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nValMin	Minimum value
in	nValMax	Maximum value


Returns

none

9.26 src/elem/XSelNum.c File Reference

```
#include "GUIslice.h"
#include "GUIslice_drv.h"
#include "elem/XSelNum.h"
#include <stdio.h>
```

Include dependency graph for XSelNum.c:

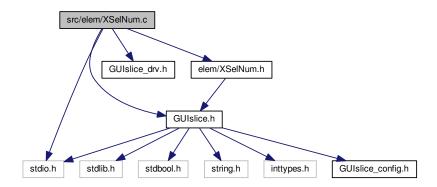

Functions

gslc_tsElemRef * gslc_ElemXSelNumCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsX←
 SelNum *pXData, gslc_tsRect rElem, int8_t nFontId)

Create a SelNum Element.

- bool gslc_ElemXSelNumDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)
 Draw a SelNum element on the screen.
- int gslc_ElemXSelNumGetCounter (gslc_tsGui *pGui, gslc_tsXSelNum *pSelNum)
 Get the current counter associated with SelNum.
- void gslc_ElemXSelNumSetCounter (gslc_tsGui *pGui, gslc_tsXSelNum *pSelNum, int16_t nCount) Set the current counter associated with SelNum.
- bool gslc_ElemXSelNumClick (void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nX, int16_t nY)

 Handle a click event within the SelNum.
- bool gslc_ElemXSelNumTouch (void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY)

Handle touch (up,down,move) events to SelNum element.

Variables

- const char GSLC_PMEM ERRSTR_NULL []
- const char GSLC PMEM ERRSTR PXD NULL []
- static const int16_t SELNUM_ID_BTN_INC
- static const int16_t SELNUM_ID_BTN_DEC
- static const int16 t SELNUM ID TXT

9.26.1 Function Documentation

9.26.1.1 bool gslc_ElemXSelNumClick (void * pvGui, void * pvElemRef, gslc_teTouch eTouch, int16_t nX, int16_t nY)

Handle a click event within the SelNum.

· This is called internally by the SelNum touch handler

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element ref (typecast to gslc_tsElemRef*)
in	eTouch	Touch event type
in	nΧ	Touch X coord
in	nΥ	Touch Y coord

Returns

none

9.26.1.2 gslc_tsElemRef* gslc_ElemXSelNumCreate (gslc_tsGui * pGui, int16_t nElemId, int16_t nPage, gslc_tsXSelNum * pXData, gslc_tsRect rElem, int8_t nFontId)

Create a SelNum Element.

Parameters

in	pGui	Pointer to GUI
in	n⊷	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)
	ElemId	
in	nPage	Page ID to attach element to
in	pXData	Ptr to extended element data structure
in	rElem	Rectangle coordinates defining element size
in	nFontld	Font ID to use for drawing the element

Returns

Pointer to Element or NULL if failure

9.26.1.3 bool gslc_ElemXSelNumDraw (void * pvGui, void * pvElemRef, gslc_teRedrawType eRedraw)

Draw a SelNum element on the screen.

· Called during redraw

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element ref (typecast to gslc_tsElemRef*)
in	eRedraw	Redraw mode

Returns

true if success, false otherwise

9.26.1.4 int gslc_ElemXSelNumGetCounter (gslc_tsGui * pGui, gslc_tsXSelNum * pSelNum)

Get the current counter associated with SelNum.

Parameters

in	pGui	Ptr to GUI
in	pSelNum	Ptr to Element

Returns

Current counter value

9.26.1.5 void gslc_ElemXSelNumSetCounter ($gslc_tsGui*pGui, gslc_tsXSelNum*pSelNum, int16_t nCount$)

Set the current counter associated with SelNum.

Parameters

in	pGui	Pointer to GUI
in	pSelNum	Ptr to Element
in	nCount	New counter value

Returns

none

9.26.1.6 bool gslc_ElemXSelNumTouch (void * pvGui, void * pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY)

Handle touch (up,down,move) events to SelNum element.

Called from gslc_ElemSendEventTouch()

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element ref (typecast to gslc_tsElemRef*)
in	eTouch	Touch event type
in	nRelX	Touch X coord relative to element
in	nRelY	Touch Y coord relative to element

Returns

true if success, false otherwise

9.26.2 Variable Documentation

9.26.2.1 const char GSLC_PMEM ERRSTR_NULL[]

9.26.2.2 const char GSLC_PMEM ERRSTR_PXD_NULL[]


9.26.2.3 const int16_t SELNUM_ID_BTN_DEC [static]

9.26.2.4 const int16_t SELNUM_ID_BTN_INC [static]


9.26.2.5 const int16_t SELNUM_ID_TXT [static]

9.27 src/elem/XSelNum.h File Reference

#include "GUIslice.h"
Include dependency graph for XSelNum.h:

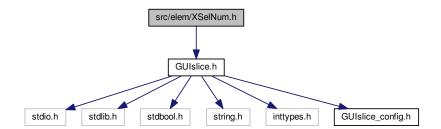

This graph shows which files directly or indirectly include this file:

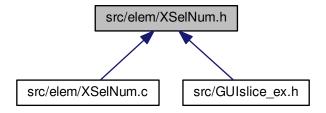

Data Structures

struct gslc_tsXSelNum

Extended data for SelNum element.

Macros

- #define GSLC_TYPEX_SELNUM
- #define SELNUM_STR_LEN

Functions

gslc_tsElemRef * gslc_ElemXSelNumCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsX←
 SelNum *pXData, gslc_tsRect rElem, int8_t nFontId)

Create a SelNum Element.

• bool gslc_ElemXSelNumDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)

Draw a SelNum element on the screen.

• int gslc_ElemXSelNumGetCounter (gslc_tsGui *pGui, gslc_tsXSelNum *pSelNum)

Get the current counter associated with SelNum.

- void gslc_ElemXSelNumSetCounter (gslc_tsGui *pGui, gslc_tsXSelNum *pSelNum, int16_t nCount) Set the current counter associated with SelNum.
- bool gslc_ElemXSelNumClick (void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nX, int16_t nY)

 Handle a click event within the SelNum.
- bool gslc_ElemXSelNumTouch (void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY)

Handle touch (up,down,move) events to SelNum element.

9.27.1 Macro Definition Documentation

- 9.27.1.1 #define GSLC_TYPEX_SELNUM
- 9.27.1.2 #define SELNUM_STR_LEN

9.27.2 Function Documentation

9.27.2.1 bool gslc_ElemXSelNumClick (void * pvGui, void * pvElemRef, gslc_teTouch eTouch, int16_t nX, int16_t nY)

Handle a click event within the SelNum.

· This is called internally by the SelNum touch handler

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element ref (typecast to gslc_tsElemRef*)
in	eTouch	Touch event type
in	nΧ	Touch X coord
in	nΥ	Touch Y coord

Returns

none

9.27.2.2 gslc_tsElemRef* gslc_ElemXSelNumCreate (gslc_tsGui * pGui, int16_t nElemId, int16_t nPage, gslc_tsXSelNum * pXData, gslc_tsRect rElem, int8_t nFontId)

Create a SelNum Element.

Parameters

in	pGui	Pointer to GUI
in	n⊷	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)
	ElemId	
in	nPage	Page ID to attach element to
in	pXData	Ptr to extended element data structure
in	rElem	Rectangle coordinates defining element size
in	nFontId	Font ID to use for drawing the element

Returns

Pointer to Element or NULL if failure

9.27.2.3 bool gslc_ElemXSelNumDraw (void * pvGui, void * pvElemRef, gslc_teRedrawType eRedraw)

Draw a SelNum element on the screen.

· Called during redraw

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element ref (typecast to gslc_tsElemRef*)
in	eRedraw	Redraw mode

Returns

true if success, false otherwise

9.27.2.4 int gslc_ElemXSelNumGetCounter (gslc_tsGui * pGui, gslc_tsXSelNum * pSelNum)

Get the current counter associated with SelNum.

Parameters

in	pGui	Ptr to GUI
in	pSelNum	Ptr to Element

Generated by Doxygen

Returns

Current counter value

9.27.2.5 void gslc_ElemXSelNumSetCounter (gslc_tsGui * pGui, gslc_tsXSelNum * pSelNum, int16_t nCount)

Set the current counter associated with SelNum.

Parameters

in	pGui	Pointer to GUI
in	pSelNum	Ptr to Element
in	nCount	New counter value

Returns

none

9.27.2.6 bool gslc_ElemXSelNumTouch (void * pvGui, void * pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY)

Handle touch (up,down,move) events to SelNum element.

Called from gslc_ElemSendEventTouch()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element ref (typecast to gslc_tsElemRef*)
in	eTouch	Touch event type
in	nRelX	Touch X coord relative to element
in	nRelY	Touch Y coord relative to element


Returns

true if success, false otherwise

9.28 src/elem/XSlider.c File Reference

```
#include "GUIslice.h"
#include "GUIslice_drv.h"
#include "elem/XSlider.h"
#include <stdio.h>
```

Include dependency graph for XSlider.c:

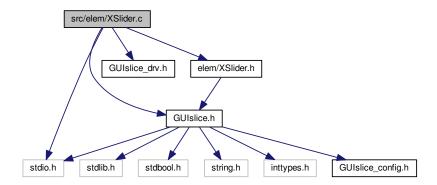

Functions

gslc_tsElemRef * gslc_ElemXSliderCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsX
 Slider *pXData, gslc_tsRect rElem, int16_t nPosMin, int16_t nPosMax, int16_t nPos, uint16_t nThumbSz, bool bVert)

Create a Slider Element.

void gslc_ElemXSliderSetStyle (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bTrim, gslc_tsColor col
 —
 Trim, uint16_t nTickDiv, int16_t nTickLen, gslc_tsColor colTick)

Set a Slider element's current position.

int gslc_ElemXSliderGetPos (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Get a Slider element's current position.

• void gslc_ElemXSliderSetPos (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nPos)

Set a Slider element's current position.

 void gslc_ElemXSliderSetPosFunc (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, GSLC_CB_XSLIDER_← POS funcCb)

Assign the position callback function for a slider.

bool gslc_ElemXSliderDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)

Draw a Slider element on the screen.

bool gslc_ElemXSliderTouch (void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY)

Handle touch events to Slider element.

Variables

- const char GSLC_PMEM ERRSTR_NULL []
- const char GSLC_PMEM ERRSTR_PXD_NULL []

9.28.1 Function Documentation

9.28.1.1 gslc_tsElemRef* gslc_ElemXSliderCreate (gslc_tsGui * pGui, int16_t nElemId, int16_t nPage, gslc_tsXSlider * pXData, gslc_tsRect rElem, int16_t nPosMin, int16_t nPosMax, int16_t nPos, uint16_t nThumbSz, bool bVert)

Create a Slider Element.

Parameters

in	pGui	Pointer to GUI
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)
in	nPage	Page ID to attach element to
in	pXData	Ptr to extended element data structure
in	rElem	Rectangle coordinates defining checkbox size
in	nPosMin	Minimum position value
in	nPosMax	Maximum position value
in	nPos	Starting position value
in	nThumbSz	Size of the thumb control
in	bVert	Orientation (true for vertical)

Returns

Pointer to Element reference or NULL if failure

9.28.1.2 bool gslc_ElemXSliderDraw (void * pvGui, void * pvElemRef, gslc_teRedrawType eRedraw)

Draw a Slider element on the screen.

• Called from gslc_ElemDraw()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element (typecast to gslc_tsElemRef*)
in	eRedraw	Redraw mode

Returns

true if success, false otherwise

9.28.1.3 int gslc_ElemXSliderGetPos (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef)

Get a Slider element's current position.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference

Returns

Current slider position

9.28.1.4 void gslc_ElemXSliderSetPos ($gslc_tsGui*pGui, gslc_tsElemRef*pElemRef, int16_t nPos$)

Set a Slider element's current position.

Parameters

in	pGui	Pointer to GUI
in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nPos	New position value

Returns

none

9.28.1.5 void gslc_ElemXSliderSetPosFunc ($gslc_tsGui * pGui$, $gslc_tsElemRef * pElemRef$, $GSLC_CB_XSLIDER_POS funcCb$)

Assign the position callback function for a slider.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	funcCb	Function pointer to position routine (or NULL for none)

Returns

none

9.28.1.6 void gslc_ElemXSliderSetStyle (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, bool bTrim, gslc_tsColor colTrim, uint16_t nTickDiv, int16_t nTickLen, gslc_tsColor colTick)

Set a Slider element's current position.

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	bTrim	Show a colored trim?
in	colTrim	Color of trim
in	nTickDiv	Number of tick divisions to show (0 for none)
in	nTickLen	Length of tickmarks
in	colTick	Color of ticks

Returns

none

9.28.1.7 bool gslc_ElemXSliderTouch (void * pvGui, void * pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY)

Handle touch events to Slider element.

Called from gslc_ElemSendEventTouch()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element ref (typecast to gslc_tsElemRef*)
in	eTouch	Touch event type
in	nRelX	Touch X coord relative to element
in	nRelY	Touch Y coord relative to element

Returns

true if success, false otherwise


9.28.2 Variable Documentation

9.28.2.1 const char GSLC_PMEM ERRSTR_NULL[]


9.28.2.2 const char GSLC_PMEM ERRSTR_PXD_NULL[]

9.29 src/elem/XSlider.h File Reference

#include "GUIslice.h"
Include dependency graph for XSlider.h:

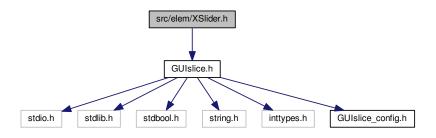

This graph shows which files directly or indirectly include this file:

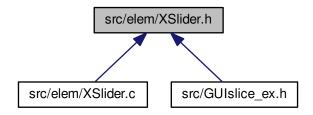

Data Structures

· struct gslc tsXSlider

Extended data for Slider element.

Macros

- #define GSLC_TYPEX_SLIDER
- #define gslc_ElemXSliderCreate_P(pGui, nElemId, nPage, nX, nY, nW, nH, nPosMin_, nPosMax_, nPos_, nThumbSz , bVert , colFrame , colFill)

Create a Slider Element in Flash.

Typedefs

typedef bool(* GSLC_CB_XSLIDER_POS) (void *pvGui, void *pvElem, int16_t nPos)
 Callback function for slider feedback.

Functions

 gslc_tsElemRef * gslc_ElemXSliderCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsX← Slider *pXData, gslc_tsRect rElem, int16_t nPosMin, int16_t nPosMax, int16_t nPos, uint16_t nThumbSz, bool bVert)

Create a Slider Element.

void gslc_ElemXSliderSetStyle (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bTrim, gslc_tsColor col
 —
 Trim, uint16_t nTickDiv, int16_t nTickLen, gslc_tsColor colTick)

Set a Slider element's current position.

int gslc_ElemXSliderGetPos (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Get a Slider element's current position.

void gslc_ElemXSliderSetPos (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nPos)

Set a Slider element's current position.

void gslc_ElemXSliderSetPosFunc (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, GSLC_CB_XSLIDER_← POS funcCb)

Assign the position callback function for a slider.

• bool gslc_ElemXSliderDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)

Draw a Slider element on the screen.

bool gslc_ElemXSliderTouch (void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY)

Handle touch events to Slider element.

9.29.1 Macro Definition Documentation

9.29.1.1 #define gslc_ElemXSliderCreate_P(pGui, nElemId, nPage, nX, nY, nW, nH, nPosMin_, nPosMax_, nPos_, nThumbSz_, bVert_, colFrame_, colFill_)

Create a Slider Element in Flash.

Parameters

in	pGui	Pointer to GUI	
in	nElemId	Unique element ID to assign	
in	nPage	Page ID to attach element to	
in	nΧ	X coordinate of element	
in	nΥ	Y coordinate of element	
in	nW	Width of element	
in	nH	Height of element	
in	nPosMin⊷	Minimum position value	
	_		
in	nPosMax⊷	Maximum position value	
	_		
in	nPos_	Starting position value	
in	nThumb⇔	Size of the thumb control	
	Sz_		
in	bVert_	Orientation (true for vertical)	
in	colFrame↔	Color of the element frame	
in	colFill_	Color of the element fill	

Returns

none

9.29.1.2 #define GSLC_TYPEX_SLIDER

9.29.2 Typedef Documentation

9.29.2.1 typedef bool(* GSLC_CB_XSLIDER_POS) (void *pvGui, void *pvElem, int16_t nPos)

Callback function for slider feedback.

9.29.3 Function Documentation

9.29.3.1 gslc_tsElemRef* gslc_ElemXSliderCreate (gslc_tsGui * pGui, int16_t nElemId, int16_t nPage, gslc_tsXSlider * pXData, gslc_tsRect rElem, int16_t nPosMin, int16_t nPosMax, int16_t nPos, uint16_t nThumbSz, bool bVert)

Create a Slider Element.

Parameters

in	pGui	Pointer to GUI	
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)	
in	nPage	Page ID to attach element to	
in	pXData	Ptr to extended element data structure	
in	rElem	Rectangle coordinates defining checkbox size	
in	nPosMin	Minimum position value	
in	nPosMax	Max Maximum position value	
in	nPos	Starting position value	
in	nThumbSz	Size of the thumb control	
in	bVert	Orientation (true for vertical)	

Returns

Pointer to Element reference or NULL if failure

9.29.3.2 bool gslc_ElemXSliderDraw (void * pvGui, void * pvElemRef, $gslc_teRedrawType eRedraw$)

Draw a Slider element on the screen.

Called from gslc_ElemDraw()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)	
in	pvElemRef	vElemRef Void ptr to Element (typecast to gslc_tsElemRef*)	
in	eRedraw	Redraw mode	

Returns

true if success, false otherwise

9.29.3.3 int gslc_ElemXSliderGetPos (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef)

Get a Slider element's current position.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference

Returns

Current slider position

9.29.3.4 void gslc_ElemXSliderSetPos ($gslc_tsGui*pGui, gslc_tsElemRef*pElemRef, int16_t nPos$)

Set a Slider element's current position.

Parameters

in	pGui	Pointer to GUI
in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nPos	New position value

Returns

none

9.29.3.5 void gslc_ElemXSliderSetPosFunc ($gslc_tsGui*pGui, gslc_tsElemRef*pElemRef, GSLC_CB_XSLIDER_POS funcCb$)

Assign the position callback function for a slider.

Parameters

	in	pGui	Pointer to GUI	
	in	pElemRef	Pointer to Element reference	
ĺ	in	funcCb	Function pointer to position routine (or NULL for none)	

Returns

none

9.29.3.6 void gslc_ElemXSliderSetStyle (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, bool bTrim, gslc_tsColor colTrim, uint16_t nTickDiv, int16_t nTickLen, gslc_tsColor colTick)

Set a Slider element's current position.

Parameters

in	pGui	Pointer to GUI	
in	pElemRef	Pointer to Element reference	
in	bTrim	Show a colored trim?	
in	colTrim	Color of trim	
in	nTickDiv	Number of tick divisions to show (0 for none)	
in	nTickLen	Length of tickmarks	
in	colTick	Color of ticks	

Returns

none

9.29.3.7 bool gslc_ElemXSliderTouch (void * pvGui, void * pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY)

Handle touch events to Slider element.

Called from gslc_ElemSendEventTouch()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)	
in	pvElemRef	ef Void ptr to Element ref (typecast to gslc_tsElemRef*)	
in	eTouch	Touch event type	
in	nRelX	Touch X coord relative to element	
in	nRelY	Touch Y coord relative to element	


Returns

true if success, false otherwise

9.30 src/elem/XSpinner.c File Reference

```
#include "GUIslice.h"
#include "GUIslice_drv.h"
#include "elem/XSpinner.h"
#include <stdio.h>
```

Include dependency graph for XSpinner.c:

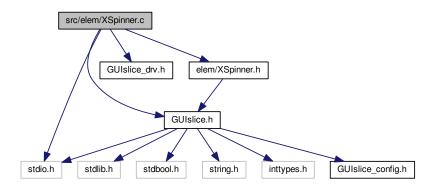

Functions

gslc_tsElemRef * gslc_ElemXSpinnerCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsX
 Spinner *pXData, gslc_tsRect rElem, int16_t nMin, int16_t nMax, int16_t nVal, int16_t nIncr, int8_t nFontId, int8_t nButtonSz, GSLC_CB_INPUT cbInput)

Create a Spinner Element.

• bool gslc_ElemXSpinnerSetChars (void *pvGui, gslc_tsElemRef *pElemRef, uint8_t clncr, uint8_t cDecr)

Set Up and Down characters for the Spinner element.

bool gslc ElemXSpinnerDraw (void *pvGui, void *pvElemRef, gslc teRedrawType eRedraw)

Draw a Spinner element on the screen.

int gslc ElemXSpinnerGetCounter (gslc tsGui *pGui, gslc tsXSpinner *pSpinner)

Get the current counter associated with Spinner.

• void gslc_ElemXSpinnerSetCounter (gslc_tsGui *pGui, gslc_tsXSpinner *pSpinner, int16_t nCount)

Set the current counter associated with Spinner.

- bool gslc_ElemXSpinnerClick (void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nX, int16_t nY)
 Handle a click event within the Spinner.
- bool gslc_ElemXSpinnerTouch (void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY)

Handle touch (up,down,move) events to Spinner element.

Variables

- const char GSLC_PMEM ERRSTR_NULL []
- const char GSLC_PMEM ERRSTR_PXD_NULL []
- static const int16_t SPINNER_ID_BTN_INC
- static const int16 t SPINNER ID BTN DEC
- static const int16_t SPINNER_ID_TXT

9.30.1 Function Documentation

9.30.1.1 bool gslc ElemXSpinnerClick (void * pvGui, void * pvElemRef, gslc teTouch eTouch, int16_t nX, int16_t nY)

Handle a click event within the Spinner.

· This is called internally by the Spinner touch handler

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)	
in	pvElemRef Void ptr to Element ref (typecast to gslc_tsElemRef*)		
in	eTouch	eTouch Touch event type	
in	nX Touch X coord		
in	nΥ	Touch Y coord	

Returns

none

9.30.1.2 gslc_tsElemRef* gslc_ElemXSpinnerCreate (gslc_tsGui * pGui, int16_t nElemId, int16_t nPage, gslc_tsXSpinner * pXData, gslc_tsRect rElem, int16_t nMin, int16_t nMax, int16_t nVal, int16_t nIncr, int8_t nFontId, int8_t nButtonSz, GSLC_CB_INPUT cbInput)

Create a Spinner Element.

Parameters

in	pGui	Pointer to GUI	
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)	
in	nPage	Page ID to attach element to	
in	pXData	Ptr to extended element data structure	
in	rElem	Rectangle coordinates defining overall size	
in	nMin	Minimum value of Spinner	
in	nMax	Maximum value of Spinner	
in	nVal	Starting value of Spinner	
in	nIncr	Increment Spinner by this value	
in	nFontId	Font ID to use for drawing the element	
in	nButtonSz	Size of individual buttons	
in	cbInput	Callback for touch events	

Returns

Pointer to Element or NULL if failure

9.30.1.3 bool gslc_ElemXSpinnerDraw (void * pvGui, void * pvElemRef, gslc_teRedrawType eRedraw)

Draw a Spinner element on the screen.

· Called during redraw

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)	
in	n pvElemRef Void ptr to Element (typecast to gslc_tsElemRef>		
in	eRedraw	Redraw mode	

Returns

true if success, false otherwise

9.30.1.4 int gslc_ElemXSpinnerGetCounter ($gslc_tsGui*pGui*, gslc_tsXSpinner*pSpinner*)$

Get the current counter associated with Spinner.

Parameters

in	pGui	Ptr to GUI
in	pSpinner	Ptr to Element

Returns

Current counter value

9.30.1.5 bool gslc_ElemXSpinnerSetChars (void * pvGui, gslc_tsElemRef * pElemRef, uint8_t cIncr, uint8_t cDecr)

Set Up and Down characters for the Spinner element.

· Called during redraw

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pElemRef	Ptr to ElementRef
in	clncr	Character to use to indicate incrementing the spinner
in	cDecr	Character to use to indicate decrementing the spinner

Returns

true if success, false otherwise

9.30.1.6 void gslc_ElemXSpinnerSetCounter (gslc_tsGui * pGui, gslc_tsXSpinner * pSpinner, int16_t nCount)

Set the current counter associated with Spinner.

Parameters

in	pGui	Pointer to GUI
in	pSpinner	Ptr to Element
in	nCount	New counter value

Returns

none

9.30.1.7 bool gslc_ElemXSpinnerTouch (void * pvGui, void * pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY)

Handle touch (up,down,move) events to Spinner element.

• Called from gslc_ElemSendEventTouch()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element ref (typecast to gslc_tsElemRef*)
in	eTouch	Touch event type
in	nRelX	Touch X coord relative to element
in	nRelY	Touch Y coord relative to element

Returns

true if success, false otherwise

9.30.2 Variable Documentation

9.30.2.1 const char GSLC_PMEM ERRSTR_NULL[]

9.30.2.2 const char GSLC_PMEM ERRSTR_PXD_NULL[]


9.30.2.3 const int16_t SPINNER_ID_BTN_DEC [static]

9.30.2.4 const int16_t SPINNER_ID_BTN_INC [static]


9.30.2.5 const int16_t SPINNER_ID_TXT [static]

9.31 src/elem/XSpinner.h File Reference

#include "GUIslice.h"
Include dependency graph for XSpinner.h:

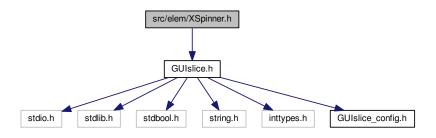

This graph shows which files directly or indirectly include this file:

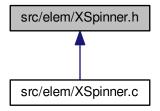

Data Structures

• struct gslc_tsXSpinner

Extended data for Spinner element.

Macros

- #define GSLC TYPEX SPINNER
- #define XSPINNER COMP CNT
- #define XSPINNER STR LEN
- #define XSPINNER_CB_STATE_UPDATE

Functions

Create a Spinner Element.

- bool gslc_ElemXSpinnerSetChars (void *pvGui, gslc_tsElemRef *pElemRef, uint8_t clncr, uint8_t cDecr)

 Set Up and Down characters for the Spinner element.
- bool gslc_ElemXSpinnerDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)

Draw a Spinner element on the screen.

• int gslc_ElemXSpinnerGetCounter (gslc_tsGui *pGui, gslc_tsXSpinner *pSpinner)

Get the current counter associated with Spinner.

- void gslc_ElemXSpinnerSetCounter (gslc_tsGui *pGui, gslc_tsXSpinner *pSpinner, int16_t nCount) Set the current counter associated with Spinner.
- bool gslc_ElemXSpinnerClick (void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nX, int16_t nY)

 Handle a click event within the Spinner.
- bool gslc_ElemXSpinnerTouch (void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY)

Handle touch (up,down,move) events to Spinner element.

9.31.1 Macro Definition Documentation

- 9.31.1.1 #define GSLC_TYPEX_SPINNER
- 9.31.1.2 #define XSPINNER_CB_STATE_UPDATE
- 9.31.1.3 #define XSPINNER_COMP_CNT
- 9.31.1.4 #define XSPINNER_STR_LEN

9.31.2 Function Documentation

9.31.2.1 bool gslc_ElemXSpinnerClick (void * pvGui, void * pvElemRef, gslc_teTouch eTouch, int16_t nX, int16_t nY)

Handle a click event within the Spinner.

· This is called internally by the Spinner touch handler

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element ref (typecast to gslc_tsElemRef*)
in	eTouch	Touch event type
in	nX	Touch X coord
in	nY	Touch Y coord

Returns

none

9.31.2.2 gslc_tsElemRef* gslc_ElemXSpinnerCreate (gslc_tsGui * pGui, int16_t nElemId, int16_t nPage, gslc_tsXSpinner * pXData, gslc_tsRect rElem, int16_t nMin, int16_t nMax, int16_t nVal, int16_t nIncr, int8_t nFontId, int8_t nButtonSz, GSLC_CB_INPUT cbInput)

Create a Spinner Element.

Parameters

in	pGui	Pointer to GUI
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)
in	nPage	Page ID to attach element to
in	pXData	Ptr to extended element data structure
in	rElem	Rectangle coordinates defining overall size
in	nMin	Minimum value of Spinner
in	nMax	Maximum value of Spinner
in	nVal	Starting value of Spinner

Parameters

in	nIncr	Increment Spinner by this value
in	nFontId	Font ID to use for drawing the element
in	nButtonSz	Size of individual buttons
in	cbInput	Callback for touch events

Returns

Pointer to Element or NULL if failure

9.31.2.3 bool gslc_ElemXSpinnerDraw (void * pvGui, void * pvElemRef, gslc_teRedrawType eRedraw)

Draw a Spinner element on the screen.

· Called during redraw

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element (typecast to gslc_tsElemRef*)
in	eRedraw	Redraw mode

Returns

true if success, false otherwise

9.31.2.4 int gslc_ElemXSpinnerGetCounter ($gslc_tsGui*pGui*, gslc_tsXSpinner*pSpinner*)$

Get the current counter associated with Spinner.

Parameters

in	pGui	Ptr to GUI
in	pSpinner	Ptr to Element

Returns

Current counter value

9.31.2.5 bool gslc_ElemXSpinnerSetChars (void *pvGui, gslc_tsElemRef *pElemRef, uint8_t clncr, uint8_t cDecr)

Set Up and Down characters for the Spinner element.

· Called during redraw

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pElemRef	Ptr to ElementRef
in	clncr	Character to use to indicate incrementing the spinner
in	cDecr	Character to use to indicate decrementing the spinner

Returns

true if success, false otherwise

9.31.2.6 void gslc_ElemXSpinnerSetCounter (gslc_tsGui * pGui, gslc_tsXSpinner * pSpinner, int16_t nCount)

Set the current counter associated with Spinner.

Parameters

in	pGui	Pointer to GUI
in	pSpinner	Ptr to Element
in	nCount	New counter value

Returns

none

9.31.2.7 bool gslc_ElemXSpinnerTouch (void * pvGui, void * pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY)

Handle touch (up,down,move) events to Spinner element.

Called from gslc_ElemSendEventTouch()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element ref (typecast to gslc_tsElemRef*)
in	eTouch	Touch event type
in	nRelX	Touch X coord relative to element
in	nRelY	Touch Y coord relative to element


Returns

true if success, false otherwise

9.32 src/elem/XTemplate.c File Reference

```
#include "GUIslice.h"
#include "GUIslice_drv.h"
#include "elem/XTemplate.h"
#include <stdio.h>
```

Include dependency graph for XTemplate.c:

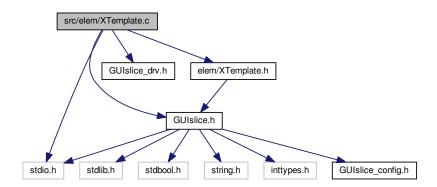

Functions

gslc_tsElemRef * gslc_ElemXTemplateCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_ts

 XTemplate *pXData, gslc_tsRect rElem, char *pStrBuf, uint8_t nStrBufMax, int16_t nFontId)

Create an Extended Text Field Element.

- bool gslc_ElemXTemplateDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)
 Draw the template element on the screen.
- bool gslc_ElemXTemplateTouch (void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16← _t nRelY)

Handle touch events to template element.

Variables

- const char GSLC_PMEM ERRSTR_NULL []
- const char GSLC_PMEM ERRSTR_PXD_NULL []

9.32.1 Function Documentation

9.32.1.1 gslc_tsElemRef* gslc_ElemXTemplateCreate (gslc_tsGui * pGui, int16_t nElemId, int16_t nPage, gslc_tsXTemplate * pXData, gslc_tsRect rElem, char * pStrBuf, uint8_t nStrBufMax, int16_t nFontId)

Create an Extended Text Field Element.

Parameters

in	pGui	Pointer to GUI
----	------	----------------

Parameters

in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)	
in	nPage	Page ID to attach element to	
in	pXData	Ptr to extended element data structure	
in	rElem	Rectangle coordinates defining element size	
in	pStrBuf	Ptr to string buffer	
in	nStrBufMax	ufMax Maximum buffer alength allocated to pStrBuf	
in	nFontId	ID of font to use for text output	

Returns

Pointer to Element reference or NULL if failure

9.32.1.2 bool gslc_ElemXTemplateDraw (void * pvGui, void * pvElemRef, gslc_teRedrawType eRedraw)

Draw the template element on the screen.

• Called from gslc_ElemDraw()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element (typecast to gslc_tsElemRef*)
in	eRedraw	Redraw mode

Returns

true if success, false otherwise

9.32.1.3 bool gslc_ElemXTemplateTouch (void * pvGui, void * pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY)

Handle touch events to template element.

• Called from gslc_ElemSendEventTouch()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)	
in	pvElemRef	ovElemRef Void ptr to Element ref (typecast to gslc_tsElemRef*	
in	eTouch	Touch event type	
in	nRelX	nRelX Touch X coord relative to element	
in	nRelY	Touch Y coord relative to element	

Returns

true if success, false otherwise


9.32.2 Variable Documentation

- 9.32.2.1 const char GSLC_PMEM ERRSTR_NULL[]
- 9.32.2.2 const char GSLC_PMEM ERRSTR_PXD_NULL[]


9.33 src/elem/XTemplate.h File Reference

#include "GUIslice.h"

Include dependency graph for XTemplate.h:

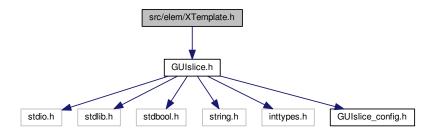

This graph shows which files directly or indirectly include this file:

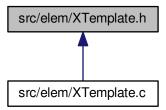

Data Structures

• struct gslc_tsXTemplate

Callback function for slider feedback.

Macros

#define GSLC_TYPEX_TEMPLATE

Functions

• gslc_tsElemRef * gslc_ElemXTemplateCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_ts↔ XTemplate *pXData, gslc_tsRect rElem, char *pStrBuf, uint8_t nStrBufMax, int16_t nFontId)

Create an Extended Text Field Element.

• bool gslc_ElemXTemplateDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)

Draw the template element on the screen.

bool gslc_ElemXTemplateTouch (void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16
 t nRelY)

Handle touch events to template element.

9.33.1 Macro Definition Documentation

9.33.1.1 #define GSLC_TYPEX_TEMPLATE

9.33.2 Function Documentation

9.33.2.1 gslc_tsElemRef* gslc_ElemXTemplateCreate (gslc_tsGui * pGui, int16_t nElemId, int16_t nPage, gslc_tsXTemplate * pXData, gslc_tsRect rElem, char * pStrBuf, uint8_t nStrBufMax, int16_t nFontId)

Create an Extended Text Field Element.

Parameters

in	pGui	Pointer to GUI	
in	nElemId	lemId Element ID to assign (016383 or GSLC_ID_AUTO to autogen	
in	nPage	Page ID to attach element to	
in	pXData	Ptr to extended element data structure	
in	rElem	Rectangle coordinates defining element size	
in	pStrBuf	Buf Ptr to string buffer	
in	nStrBufMax	nStrBufMax Maximum buffer alength allocated to pStrBuf	
in	nFontId	ID of font to use for text output	

Returns

Pointer to Element reference or NULL if failure

9.33.2.2 bool gslc_ElemXTemplateDraw (void * pvGui, void * pvElemRef, gslc_teRedrawType eRedraw)

Draw the template element on the screen.

• Called from gslc_ElemDraw()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element (typecast to gslc_tsElemRef*)
in	eRedraw	Redraw mode

Returns

true if success, false otherwise

9.33.2.3 bool gslc_ElemXTemplateTouch (void * pvGui, void * pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY)

Handle touch events to template element.

Called from gslc_ElemSendEventTouch()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)	
in	pvElemRef Void ptr to Element ref (typecast to gslc_tsElemRe		
in	eTouch	Touch event type	
in	nRelX	nRelX Touch X coord relative to element	
in	nRelY Touch Y coord relative to element		


Returns

true if success, false otherwise

9.34 src/elem/XTextbox.c File Reference

```
#include "GUIslice.h"
#include "GUIslice_drv.h"
#include "elem/XTextbox.h"
#include <stdio.h>
```

Include dependency graph for XTextbox.c:

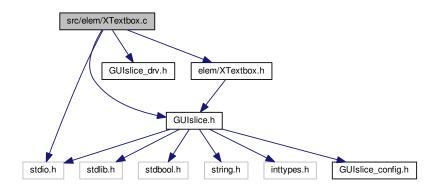

Functions

gslc_tsElemRef * gslc_ElemXTextboxCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsX←
Textbox *pXData, gslc_tsRect rElem, int16_t nFontId, char *pBuf, uint16_t nBufRows, uint16_t nBufCols)

Create a Textbox Element.

void gslc ElemXTextboxReset (gslc tsGui *pGui, gslc tsElemRef *pElemRef)

Reset the contents of the textbox.

- void gslc_ElemXTextboxLineWrAdv (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)
- void gslc_ElemXTextboxScrollSet (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, uint8_t nScrollPos, uint8← _t nScrollMax)

Set the textbox scroll position (nScrollPos) as a fraction of nScrollMax.

- void gslc_ElemXTextboxBufAdd (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, unsigned char chNew, bool bAdvance)
- void gslc_ElemXTextboxColSet (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor nCol)

 Insert a color set code into the current buffer position.
- void gslc_ElemXTextboxColReset (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Insert a color reset code into the current buffer position.

void gslc_ElemXTextboxWrapSet (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bWrapEn)

Enable or disable line wrap within textbox.

void gslc ElemXTextboxAdd (gslc tsGui *pGui, gslc tsElemRef *pElemRef, char *pTxt)

Add a text string to the textbox.

• bool gslc_ElemXTextboxDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)

Draw a Textbox element on the screen.

Variables

- const char GSLC_PMEM ERRSTR_NULL []
- const char GSLC_PMEM ERRSTR_PXD_NULL []

9.34.1 Function Documentation

9.34.1.1 void gslc_ElemXTextboxAdd (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, char * pTxt)

Add a text string to the textbox.

- · If it includes a newline then the buffer will advance to the next row
- · If wrap has been enabled, then a newline will be forced

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	pTxt	Pointer to text string (null-terminated)

Returns

none

- 9.34.1.2 void gslc_ElemXTextboxBufAdd (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, unsigned char chNew, bool bAdvance)
- 9.34.1.3 void gslc_ElemXTextboxColReset ($gslc_tsGui*pGui*, gslc_tsElemRef*pElemRef*)$

Insert a color reset code into the current buffer position.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference

Returns

none

9.34.1.4 void gslc_ElemXTextboxColSet ($gslc_tsGui * pGui$, $gslc_tsElemRef * pElemRef$, $gslc_tsColor nCol$)

Insert a color set code into the current buffer position.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nCol	Color to assign for next text written to textbox

Returns

none

9.34.1.5 gslc_tsElemRef* gslc_ElemXTextboxCreate (gslc_tsGui * pGui, int16_t nElemId, int16_t nPage, gslc_tsXTextbox * pXData, gslc_tsRect rElem, int16_t nFontId, char * pBuf, uint16_t nBufRows, uint16_t nBufCols)

Create a Textbox Element.

- The textbox is a scrolling window designed for displaying multi-line text using a monospaced font. A character buffer is defined by nBufRows*nBufCols to capture the added text. If the allocation buffer is larger than the display size (defined by rElem), then a scrollbar will be shown.
- Support for changing color within a row can be enabled with GSLC_FEATURE_XTEXTBOX_EMBED 1
- · Note that each color change command will consume 4 of the available "column" bytes.

Parameters

in	pGui	Pointer to GUI	
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)	
in	nPage	Page ID to attach element to	
in	pXData	Ptr to extended element data structure	
in	rElem	Rectangle coordinates defining textbox size	
in	nFontId	Font ID to use for text area	
in	pBuf	Ptr to text buffer (already allocated) with size (nBufRows*nBufCols) chars	
in	nBufRows	Number of rows in buffer	
in	nBufCols	Number of columns in buffer (incl special codes)	

Returns

Pointer to Element reference or NULL if failure

9.34.1.6 bool gslc_ElemXTextboxDraw (void * pvGui, void * pvElemRef, gslc_teRedrawType eRedraw)

Draw a Textbox element on the screen.

• Called from gslc_ElemDraw()

Parameters

in	pvGui Void ptr to GUI (typecast to gslc_tsGui*)	
in pvElemRef Void ptr to Element reference (typecast to gslc_tsEle		Void ptr to Element reference (typecast to gslc_tsElemRef*)
in eRedraw Redraw mode		Redraw mode

Returns

true if success, false otherwise

9.34.1.7 void gslc_ElemXTextboxLineWrAdv (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef)

9.34.1.8 void gslc_ElemXTextboxReset (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef)

Reset the contents of the textbox.

· Clears the buffer and resets the position

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference

Returns

none

9.34.1.9 void gslc_ElemXTextboxScrollSet (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, uint8_t nScrollPos, uint8_t nScrollMax)

Set the textbox scroll position (nScrollPos) as a fraction of nScrollMax.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nScrollPos	New scroll position
in	nScrollMax	Maximum scroll position

Returns

none

9.34.1.10 void gslc_ElemXTextboxWrapSet ($gslc_tsGui*pGui, gslc_tsElemRef*pElemRef, bool bWrapEn$)

Enable or disable line wrap within textbox.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	bWrapEn	Enable line wrap if true

Generated by Doxygen

Returns

none


9.34.2 Variable Documentation

9.34.2.1 const char GSLC_PMEM ERRSTR_NULL[]


9.34.2.2 const char GSLC_PMEM ERRSTR_PXD_NULL[]

9.35 src/elem/XTextbox.h File Reference

#include "GUIslice.h"
Include dependency graph for XTextbox.h:

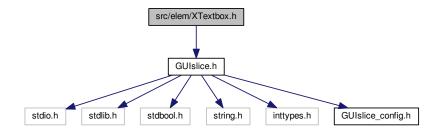

This graph shows which files directly or indirectly include this file:

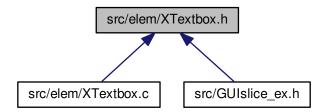

Data Structures

struct gslc_tsXTextbox

Extended data for Textbox element.

Macros

- #define GSLC TYPEX TEXTBOX
- #define GSLC XTEXTBOX CODE COL SET

Definitions for textbox special inline codes.

- #define GSLC XTEXTBOX CODE COL RESET
- #define XTEXTBOX_REDRAW_NONE
- #define XTEXTBOX REDRAW ALL

Functions

gslc_tsElemRef * gslc_ElemXTextboxCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsX←
Textbox *pXData, gslc_tsRect rElem, int16_t nFontId, char *pBuf, uint16_t nBufRows, uint16_t nBufCols)

Create a Textbox Element.

• void gslc_ElemXTextboxReset (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Reset the contents of the textbox.

bool gslc_ElemXTextboxDraw (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)

Draw a Textbox element on the screen.

void gslc_ElemXTextboxAdd (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, char *pTxt)

Add a text string to the textbox.

void gslc_ElemXTextboxColSet (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor nCol)

Insert a color set code into the current buffer position.

void gslc_ElemXTextboxColReset (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Insert a color reset code into the current buffer position.

• void gslc_ElemXTextboxWrapSet (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bWrapEn)

Enable or disable line wrap within textbox.

 void gslc_ElemXTextboxScrollSet (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, uint8_t nScrollPos, uint8← t nScrollMax)

Set the textbox scroll position (nScrollPos) as a fraction of nScrollMax.

9.35.1 Macro Definition Documentation

- 9.35.1.1 #define GSLC_TYPEX_TEXTBOX
- 9.35.1.2 #define GSLC_XTEXTBOX_CODE_COL_RESET
- 9.35.1.3 #define GSLC_XTEXTBOX_CODE_COL_SET

Definitions for textbox special inline codes.

- 9.35.1.4 #define XTEXTBOX_REDRAW_ALL
- 9.35.1.5 #define XTEXTBOX_REDRAW_NONE
- 9.35.2 Function Documentation
- 9.35.2.1 void gslc_ElemXTextboxAdd (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, char * pTxt)

Add a text string to the textbox.

- If it includes a newline then the buffer will advance to the next row
- · If wrap has been enabled, then a newline will be forced

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	pTxt	Pointer to text string (null-terminated)

Returns

none

9.35.2.2 void gslc_ElemXTextboxColReset ($gslc_tsGui*pGui, gslc_tsElemRef*pElemRef$)

Insert a color reset code into the current buffer position.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference

Returns

none

9.35.2.3 void gslc_ElemXTextboxColSet (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, gslc_tsColor nCol)

Insert a color set code into the current buffer position.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nCol	Color to assign for next text written to textbox

Returns

none

9.35.2.4 gslc_tsElemRef* gslc_ElemXTextboxCreate (gslc_tsGui * pGui, int16_t nElemId, int16_t nPage, gslc_tsXTextbox * pXData, gslc_tsRect rElem, int16_t nFontId, char * pBuf, uint16_t nBufRows, uint16_t nBufCols)

Create a Textbox Element.

• The textbox is a scrolling window designed for displaying multi-line text using a monospaced font. A character buffer is defined by nBufRows*nBufCols to capture the added text. If the allocation buffer is larger than the display size (defined by rElem), then a scrollbar will be shown.

- Support for changing color within a row can be enabled with GSLC_FEATURE_XTEXTBOX_EMBED 1
- · Note that each color change command will consume 4 of the available "column" bytes.

Parameters

in	pGui	Pointer to GUI	
in	nElemId	Element ID to assign (016383 or GSLC_ID_AUTO to autogen)	
in	nPage	Page ID to attach element to	
in	pXData	Ptr to extended element data structure	
in	rElem	Rectangle coordinates defining textbox size	
in	nFontId	Font ID to use for text area	
in	pBuf	Ptr to text buffer (already allocated) with size (nBufRows*nBufCols) chars	
in	nBufRows	Number of rows in buffer	
in	nBufCols	Number of columns in buffer (incl special codes)	

Returns

Pointer to Element reference or NULL if failure

9.35.2.5 bool gslc_ElemXTextboxDraw (void * pvGui, void * pvElemRef, gslc_teRedrawType eRedraw)

Draw a Textbox element on the screen.

• Called from gslc_ElemDraw()

Parameters

in	pvGui	Void ptr to GUI (typecast to gslc_tsGui*)
in	pvElemRef	Void ptr to Element reference (typecast to gslc_tsElemRef*)
in	eRedraw	Redraw mode

Returns

true if success, false otherwise

9.35.2.6 void gslc_ElemXTextboxReset (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef)

Reset the contents of the textbox.

· Clears the buffer and resets the position

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference

Generated by Doxygen

Returns

none

9.35.2.7 void gslc_ElemXTextboxScrollSet (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, uint8_t nScrollPos, uint8_t nScrollMax)

Set the textbox scroll position (nScrollPos) as a fraction of nScrollMax.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	nScrollPos	New scroll position
in	nScrollMax	Maximum scroll position

Returns

none

9.35.2.8 void gslc_ElemXTextboxWrapSet (gslc_tsGui * pGui, gslc_tsElemRef * pElemRef, bool bWrapEn)

Enable or disable line wrap within textbox.

Parameters

in	pGui	Pointer to GUI
in	pElemRef	Pointer to Element reference
in	bWrapEn	Enable line wrap if true


Returns

none

9.36 src/GUIslice.c File Reference

```
#include "GUIslice_config.h"
#include "GUIslice.h"
#include "GUIslice_drv.h"
#include <stdio.h>
#include <stdarg.h>
#include "GUIslice_version.h"
```

Include dependency graph for GUIslice.c:

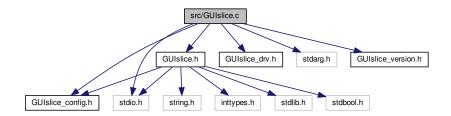

Enumerations

enum gslc_teDebugPrintState {
 GSLC_S_DEBUG_PRINT_NORM, GSLC_S_DEBUG_PRINT_TOKEN, GSLC_S_DEBUG_PRINT_UINT16,
 GSLC_S_DEBUG_PRINT_CHAR,
 GSLC_S_DEBUG_PRINT_STR, GSLC_S_DEBUG_PRINT_STR_P }

Functions

char * gslc GetVer (gslc tsGui *pGui)

Get the GUIslice version number.

const char * gslc_GetNameDisp (gslc_tsGui *pGui)

Get the GUIslice display driver name.

const char * gslc_GetNameTouch (gslc_tsGui *pGui)

Get the GUIslice touch driver name.

void * gslc_GetDriverDisp (gslc_tsGui *pGui)

Get the native display driver instance.

void * gslc_GetDriverTouch (gslc_tsGui *pGui)

Get the native touch driver instance.

bool gslc_Init (gslc_tsGui *pGui, void *pvDriver, gslc_tsPage *asPage, uint8_t nMaxPage, gslc_tsFont *as←
 Font, uint8_t nMaxFont)

Initialize the GUIslice library.

- void gslc_SetPinPollFunc (gslc_tsGui *pGui, GSLC_CB_PIN_POLL pfunc)
- void gslc_InitInputMap (gslc_tsGui *pGui, gslc_tsInputMap *asInputMap, uint8_t nInputMapMax)
- bool gslc_InputMapLookup (gslc_tsGui *pGui, gslc_teInputRawEvent eInputEvent, int16_t nInputVal, gslc
 _teAction *peAction, int16_t *pnActionVal)
- void gslc InitDebug (GSLC CB DEBUG OUT pfunc)

Initialize debug output.

• void gslc_DebugPrintf (const char *pFmt,...)

Optimized printf routine for GUIslice debug/error output.

void gslc_Quit (gslc_tsGui *pGui)

Exit the GUIslice environment.

• void gslc Update (gslc tsGui *pGui)

Perform main GUIslice handling functions.

• gslc_tsEvent gslc_EventCreate (gslc_tsGui *pGui, gslc_teEventType eType, uint8_t nSubType, void *pv ← Scope, void *pvData)

Create an event structure.

bool gslc_lslnRect (int16_t nSelX, int16_t nSelY, gslc_tsRect rRect)

Determine if a coordinate is inside of a rectangular region.

bool gslc IsInWH (int16 t nSelX, int16 t nSelY, uint16 t nWidth, uint16 t nHeight)

Determine if a coordinate is inside of a width x height region.

- void gslc_OrderCoord (int16_t *pnX0, int16_t *pnY0, int16_t *pnX1, int16_t *pnY1)
- bool gslc ClipPt (gslc tsRect *pClipRect, int16 t nX, int16 t nY)

Perform basic clipping of a single point to a clipping region.

• bool gslc_ClipLine (gslc_tsRect *pClipRect, int16_t *pnX0, int16_t *pnY0, int16_t *pnX1, int16_t *pnY1)

Perform basic clipping of a line to a clipping region.

bool gslc_ClipRect (gslc_tsRect *pClipRect, gslc_tsRect *pRect)

Perform basic clipping of a rectangle to a clipping region.

gslc_tslmgRef gslc_ResetImage ()

Create a blank image reference structure.

gslc_tslmgRef gslc_GetImageFromFile (const char *pFname, gslc_teImgRefFlags eFmt)

Create an image reference to a bitmap file in LINUX filesystem.

gslc_tslmgRef gslc_GetImageFromSD (const char *pFname, gslc_teImgRefFlags eFmt)

Create an image reference to a bitmap file in SD card.

gslc_tslmgRef gslc_GetImageFromRam (unsigned char *pImgBuf, gslc_teImgRefFlags eFmt)

Create an image reference to a bitmap in SRAM.

• gslc_tslmgRef gslc_GetImageFromProg (const unsigned char *pImgBuf, gslc_teImgRefFlags eFmt)

Create an image reference to a bitmap in program memory (PROGMEM)

• int16 t gslc sinFX (int16 t n64Ang)

Calculate fixed-point sine function from fractional degrees.

int16 t gslc cosFX (int16 t n64Ang)

Calculate fixed-point cosine function from fractional degrees.

void gslc PolarToXY (uint16 t nRad, int16 t n64Ang, int16 t *nDX, int16 t *nDY)

Convert polar coordinate to cartesian.

gslc_tsColor gslc_ColorBlend2 (gslc_tsColor colStart, gslc_tsColor colEnd, uint16_t nMidAmt, uint16_t n
 BlendAmt)

Create a color based on a blend between two colors.

gslc_tsColor gslc_ColorBlend3 (gslc_tsColor colStart, gslc_tsColor colMid, gslc_tsColor colEnd, uint16_t n
 MidAmt, uint16_t nBlendAmt)

Create a color based on a blend between three colors.

bool gslc_ColorEqual (gslc_tsColor a, gslc_tsColor b)

Check whether two colors are equal.

void gslc DrawSetPixel (gslc tsGui *pGui, int16 t nX, int16 t nY, gslc tsColor nCol)

Set a pixel on the active screen to the given color with lock.

• void gslc_DrawLine (gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, gslc_tsColor nCol)

Draw an arbitrary line using Bresenham's algorithm.

void gslc_DrawLineH (gslc_tsGui *pGui, int16_t nX, int16_t nY, uint16_t nW, gslc_tsColor nCol)

Draw a horizontal line.

void gslc_DrawLineV (gslc_tsGui *pGui, int16_t nX, int16_t nY, uint16_t nH, gslc_tsColor nCol)

Draw a vertical line.

• void gslc_DrawLinePolar (gslc_tsGui *pGui, int16_t nX, int16_t nY, uint16_t nRadStart, uint16_t nRadEnd, int16_t n64Ang, gslc_tsColor nCol)

Draw a polar ray segment.

void gslc_DrawFrameRect (gslc_tsGui *pGui, gslc_tsRect rRect, gslc_tsColor nCol)

Draw a framed rectangle.

 $\bullet \ \ void \ gslc_DrawFrameRoundRect \ (gslc_tsGui *pGui, \ gslc_tsRect \ rRect, \ int 16_t \ nRadius, \ gslc_tsColor \ nCol)$

Draw a framed rounded rectangle.

void gslc_DrawFillRect (gslc_tsGui *pGui, gslc_tsRect rRect, gslc_tsColor nCol)

Draw a filled rectangle.

void gslc DrawFillRoundRect (gslc tsGui *pGui, gslc tsRect rRect, int16 t nRadius, gslc tsColor nCol)

Draw a filled rounded rectangle.

gslc_tsRect gslc_ExpandRect (gslc_tsRect rRect, int16_t nExpandW, int16_t nExpandH)

Expand or contract a rectangle in width and/or height (equal amounts on both side), based on the centerpoint of the rectangle.

void gslc_UnionRect (gslc_tsRect *pRect, gslc_tsRect rAddRect)

Expand a rect to include another rect.

void gslc_InvalidateRgnReset (gslc_tsGui *pGui)

Reset the invalidation region.

void gslc_InvalidateRgnScreen (gslc_tsGui *pGui)

Mark the entire screen as invalidated.

void gslc_InvalidateRgnPage (gslc_tsGui *pGui, gslc_tsPage *pPage)

Include an entire page (eg.

void gslc InvalidateRgnAdd (gslc tsGui *pGui, gslc tsRect rAddRect)

Add a rectangular region to the invalidation region.

 void gslc_DrawFrameCircle (gslc_tsGui *pGui, int16_t nMidX, int16_t nMidY, uint16_t nRadius, gslc_tsColor nCol)

Draw a framed circle.

void gslc_DrawFillCircle (gslc_tsGui *pGui, int16_t nMidX, int16_t nMidY, uint16_t nRadius, gslc_tsColor n←
 Col)

Draw a filled circle.

void gslc_DrawFrameTriangle (gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nX1, int16_t nX2, int16_t nY2, gslc_tsColor nCol)

Draw a framed triangle.

- void gslc_SwapCoords (int16_t *pnXa, int16_t *pnYa, int16_t *pnXb, int16_t *pnYb)
- void gslc_DrawFillTriangle (gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, int16_t nX2, int16_t nY2, gslc_tsColor nCol)

Draw a filled triangle.

void gslc_DrawFrameQuad (gslc_tsGui *pGui, gslc_tsPt *psPt, gslc_tsColor nCol)

Draw a framed quadrilateral.

• void gslc_DrawFillQuad (gslc_tsGui *pGui, gslc_tsPt *psPt, gslc_tsColor nCol)

Draw a filled quadrilateral.

- void gslc_DrawFillSectorBase (gslc_tsGui *pGui, int16_t nQuality, int16_t nMidX, int16_t nMidY, int16_t n← Rad1, int16_t nRad2, gslc_tsColor cArcStart, gslc_tsColor cArcEnd, bool bGradient, int16_t nAngGradStart, int16_t nAngGradRange, int16_t nAngSecStart, int16_t nAngSecEnd)
- void gslc_DrawFillGradSector (gslc_tsGui *pGui, int16_t nQuality, int16_t nMidX, int16_t nMidY, int16_t nAngSecStart, int16_t nAngSecStart, int16_t nAngGradStart, int16_t nAngGradRange)

Draw a gradient filled sector of a circle with support for inner and outer radius.

• void gslc_DrawFillSector (gslc_tsGui *pGui, int16_t nQuality, int16_t nMidX, int16_t nMidY, int16_t nRad1, int16_t nRad2, gslc_tsColor cArc, int16_t nAngSecStart, int16_t nAngSecEnd)

Draw a flat filled sector of a circle with support for inner and outer radius.

- bool gslc_FontSetBase (gslc_tsGui *pGui, uint8_t nFontInd, int16_t nFontId, gslc_teFontRefType eFontRef
 —
 Type, const void *pvFontRef, uint16_t nFontSz)
- bool gslc_FontSet (gslc_tsGui *pGui, int16_t nFontId, gslc_teFontRefType eFontRefType, const void *pv←
 FontRef, uint16_t nFontSz)

Load a font into the local font cache and store as font ID (nFontId)

bool gslc_FontAdd (gslc_tsGui *pGui, int16_t nFontId, gslc_teFontRefType eFontRefType, const void *pv←
FontRef, uint16_t nFontSz)

Load a font into the local font cache and assign font ID (nFontId).

gslc_tsFont * gslc_FontGet (gslc_tsGui *pGui, int16_t nFontId)

Fetch a font from its ID value.

bool gslc_FontSetMode (gslc_tsGui *pGui, int16_t nFontId, gslc_teFontRefMode eFontMode)

Set the font operating mode.

bool gslc_PageEvent (void *pvGui, gslc_tsEvent sEvent)

Common event handler function for a page.

void gslc_PageAdd (gslc_tsGui *pGui, int16_t nPageId, gslc_tsElem *psElem, uint16_t nMaxElem, gslc_
tsElemRef *psElemRef, uint16_t nMaxElemRef)

Add a page to the GUI.

int gslc_GetPageCur (gslc_tsGui *pGui)

Fetch the current page ID.

void gslc SetStackPage (gslc tsGui *pGui, uint8 t nStackPos, int16 t nPageId)

Assign a page to the page stack.

void gslc SetStackState (gslc tsGui *pGui, uint8 t nStackPos, bool bActive, bool bDoDraw)

Change the status of a page in a page stack.

void gslc SetPageBase (gslc tsGui *pGui, int16 t nPageId)

Assigns a page for the base layer in the page stack.

void gslc_SetPageCur (gslc_tsGui *pGui, int16_t nPageId)

Select a page for the current layer in the page stack.

void gslc_SetPageOverlay (gslc_tsGui *pGui, int16_t nPageId)

Select a page for the overlay layer in the page stack.

void gslc_PopupShow (gslc_tsGui *pGui, int16_t nPageId, bool bModal)

Show a popup dialog.

void gslc PopupHide (gslc tsGui *pGui)

Hides the currently active popup dialog.

void gslc_PageRedrawSet (gslc_tsGui *pGui, bool bRedraw)

Update the need-redraw status for the current page.

bool gslc_PageRedrawGet (gslc_tsGui *pGui)

Get the need-redraw status for the current page.

• void gslc_PageRedrawCalc (gslc_tsGui *pGui)

Perform a redraw calculation on the page to determine if additional elements should also be redrawn.

void gslc_PageRedrawGo (gslc_tsGui *pGui)

Redraw all elements on the active page.

void gslc_PageFlipSet (gslc_tsGui *pGui, bool bNeeded)

Indicate whether the screen requires page flip.

bool gslc_PageFlipGet (gslc_tsGui *pGui)

Get state of pending page flip state.

void gslc_PageFlipGo (gslc_tsGui *pGui)

Update the visible screen if page has been marked for flipping.

gslc_tsPage * gslc_PageFindById (gslc_tsGui *pGui, int16_t nPageId)

Find a page in the GUI by its ID.

• gslc tsElemRef * gslc PageFindElemById (gslc tsGui *pGui, int16 t nPageId, int16 t nElemId)

Find an element in the GUI by its Page ID and Element ID.

- int16_t gslc_PageFocusStep (gslc_tsGui *pGui, gslc_tsPage *pPage, bool bNext)
- int gslc_ElemGetId (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Get an Element ID from an element structure.

uint8_t gslc_GetElemRefFlag (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, uint8_t nFlagMask)

Get the flags associated with an element reference.

 void gslc_SetElemRefFlag (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, uint8_t nFlagMask, uint8_t n← FlagVal)

Set the flags associated with an element reference.

• gslc_tsElem * gslc_GetElemFromRef (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Returns a pointer to an element from an element reference, copying from FLASH to RAM if element is stored in PROGMEM.

• gslc_tsElem * gslc_GetElemFromRefD (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nLineNum)

Returns a pointer to an element from an element reference.

void * gslc_GetXDataFromRef (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nType, int16_t nLine ← Num)

Returns a pointer to the data structure associated with an extended element.

void gslc_SetRoundRadius (gslc_tsGui *pGui, uint8_t nRadius)

Set the global rounded radius.

• gslc_tsElemRef * gslc_ElemCreateTxt (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsRect rElem, char *pStrBuf, uint8 t nStrBufMax, int16 t nFontId)

Create a Text Element.

 gslc_tsElemRef * gslc_ElemCreateBtnTxt (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsRect rElem, char *pStrBuf, uint8_t nStrBufMax, int16_t nFontId, GSLC_CB_TOUCH cbTouch)

Create a textual Button Element.

• gslc_tsElemRef * gslc_ElemCreateBtnImg (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsRect rElem, gslc_tsImgRef sImgRef, gslc_tsImgRef sImgRefSel, GSLC_CB_TOUCH cbTouch)

Create a graphical Button Element.

gslc_tsElemRef * gslc_ElemCreateBox (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsRect r← Elem)

Create a Box Element.

gslc_tsElemRef * gslc_ElemCreateLine (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1)

Create a Line Element.

gslc_tsElemRef * gslc_ElemCreateImg (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsRect r←
 Elem, gslc_tsImgRef sImgRef)

Create an image Element.

• bool gslc_ElemEvent (void *pvGui, gslc_tsEvent sEvent)

Common event handler function for an element.

void gslc_ElemDraw (gslc_tsGui *pGui, int16_t nPageId, int16_t nElemId)

Draw an element to the active display.

void gslc_DrawTxtBase (gslc_tsGui *pGui, char *pStrBuf, gslc_tsRect rTxt, gslc_tsFont *pTxtFont, gslc—teTxtFlags eTxtFlags, int8_t eTxtAlign, gslc_tsColor colTxt, gslc_tsColor colBg, int16_t nMarginW, int16_t nMarginH)

Draw text with full text justification.

- bool gslc_ElemDrawByRef (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_teRedrawType eRedraw)

 Draw an element to the active display.
- void gslc_ElemSetFillEn (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bFillEn)

Set the fill state for an Element.

• void gslc_ElemSetFrameEn (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bFrameEn)

Set the frame state for an Element.

void gslc ElemSetRoundEn (gslc tsGui *pGui, gslc tsElemRef *pElemRef, bool bRoundEn)

Set the rounded frame/fill state for an Element.

void gslc_ElemSetCol (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor colFrame, gslc_tsColor colFill, gslc_tsColor colFillGlow)

Update the common color selection for an Element.

void gslc_ElemSetGlowCol (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor colFrameGlow, gslc_tsColor colFillGlow, gslc_tsColor colTxtGlow)

Update the common color selection for glowing state of an Element.

void gslc_ElemSetGroup (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int nGroupId)

Set the group ID for an element.

• int gslc_ElemGetGroup (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Get the group ID for an element.

void gslc_ElemSetTxtAlign (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, unsigned nAlign)

Set the alignment of a textual element (horizontal and vertical)

void gslc_ElemSetTxtMargin (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, unsigned nMargin)
 Set the margin around of a textual element.

void gslc_ElemSetTxtMarginXY (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int8_t nMarginX, int8_t n
 MarginY)

Set the margin around of a textual element (X & Y offsets can be different)

void gslc_ElemSetTxtStr (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, const char *pStr)

Update the text string associated with an Element.

char * gslc_ElemGetTxtStr (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Fetch the current text string associated with an Element.

void gslc_ElemSetTxtCol (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor colVal)

Update the text string color associated with an Element ID.

void gslc_ElemSetTxtMem (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_teTxtFlags eFlags)

Update the text string location in memory.

void gslc_ElemSetTxtEnc (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_teTxtFlags eFlags)

Update the text string encoding mode.

• void gslc ElemUpdateFont (gslc tsGui *pGui, gslc tsElemRef *pElemRef, int nFontId)

Update the Font selected for an Element's text.

void gslc_ElemSetRedraw (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_teRedrawType eRedraw)
 Update the need-redraw status for an element.

gslc teRedrawType gslc ElemGetRedraw (gslc tsGui *pGui, gslc tsElemRef *pElemRef)

Get the need-redraw status for an element.

void gslc_ElemSetGlow (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bGlowing)

Update the glowing indicator for an element.

bool gslc ElemGetGlow (gslc tsGui *pGui, gslc tsElemRef *pElemRef)

Get the glowing indicator for an element.

• void gslc_ElemSetVisible (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bVisible)

Update the visibility status for an element.

bool gslc_ElemGetVisible (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Get the visibility status for an element.

• bool gslc ElemGetOnScreen (gslc tsGui *pGui, gslc tsElemRef *pElemRef)

Determine whether an element is visible on the screen.

void gslc_ElemSetGlowEn (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bGlowEn)

Update the glowing enable for an element.

bool gslc_ElemGetGlowEn (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Get the glowing enable for an element.

void gslc_ElemSetClickEn (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bClickEn)

Update the click enable for an element.

- void gslc_ElemSetTouchFunc (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, GSLC_CB_TOUCH funcCb)

 Update the touch function callback for an element.
- void gslc_ElemSetStyleFrom (gslc_tsGui *pGui, gslc_tsElemRef *pElemRefSrc, gslc_tsElemRef *pElem←
 RefDest)

Copy style settings from one element to another.

- void gslc_ElemSetDrawFunc (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, GSLC_CB_DRAW funcCb)

 Assign the drawing callback function for an element.
- void gslc_ElemSetTickFunc (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, GSLC_CB_TICK funcCb)

 Assign the tick callback function for an element.
- bool gslc_ElemOwnsCoord (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nX, int16_t nY, bool b

 OnlyClickEn)

Determine if a coordinate is inside of an element.

void gslc_CollectInput (gslc_tsGui *pGui, gslc_tsCollect *pCollect, gslc_tsEventTouch *pEventTouch)

Handle direct input events within the element collection.

void gslc_CollectTouch (gslc_tsGui *pGui, gslc_tsCollect *pCollect, gslc_tsEventTouch *pEventTouch)

Handle touch events within the element collection.

• bool gslc_CollectTouchCompound (void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY, gslc_tsCollect *pCollect)

Handle dispatch of touch (up,down,move) events to compound elements sub elements.

void gslc_TrackInput (gslc_tsGui *pGui, gslc_tsPage *pPage, gslc_teInputRawEvent eInputEvent, int16_←
t nInputVal)

Handles a direct input event and performs the necessary tracking, glowing and selection actions depending on the state.

void gslc TrackTouch (gslc tsGui *pGui, gslc tsPage *pPage, int16 t nX, int16 t nY, uint16 t nPress)

Handles a touch event and performs the necessary tracking, glowing and selection actions depending on the press state.

bool gslc_InitTouch (gslc_tsGui *pGui, const char *acDev)

Initialize the touchscreen device driver.

 bool gslc_GetTouch (gslc_tsGui *pGui, int16_t *pnX, int16_t *pnY, uint16_t *pnPress, gslc_teInputRawEvent *peInputEvent, int16_t *pnInputVal)

Initialize the touchscreen device driver.

void gslc_SetTouchRemapEn (gslc_tsGui *pGui, bool bEn)

Configure touchscreen remapping.

void gslc_SetTouchRemapCal (gslc_tsGui *pGui, uint16_t nXMin, uint16_t nXMax, uint16_t nYMin, uint16_t nYMax)

Configure touchscreen calibration values.

void gslc SetTouchRemapYX (gslc tsGui *pGui, bool bSwap)

Configure touchscreen XY swap.

gslc_tsElem gslc_ElemCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPageId, int16_t nType, gslc_ts←
 Rect rElem, char *pStrBuf, uint8_t nStrBufMax, int16_t nFontId)

Create a new element with default styling.

bool gslc CollectEvent (void *pvGui, gslc tsEvent sEvent)

Common event handler function for an element collection.

gslc_tsElemRef * gslc_CollectElemAdd (gslc_tsGui *pGui, gslc_tsCollect *pCollect, const gslc_tsElem *p←
 Elem, gslc_teElemRefFlags eFlags)

Add an element to a collection.

bool gslc_CollectGetRedraw (gslc_tsGui *pGui, gslc_tsCollect *pCollect)

Determine if any elements in a collection need redraw.

gslc_tsElemRef * gslc_ElemAdd (gslc_tsGui *pGui, int16_t nPageId, gslc_tsElem *pElem, gslc_teElem←
 RefFlags eFlags)

Add the Element to the list of generated elements in the GUI environment.

• bool gslc_SetClipRect (gslc_tsGui *pGui, gslc_tsRect *pRect)

Set the clipping rectangle for further drawing.

void gslc_ElemSetImage (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsImgRef sImgRef, gslc_ts← ImgRef sImgRefSel)

Set an element to use a bitmap image.

bool gslc SetBkgndImage (gslc tsGui *pGui, gslc tsImgRef sImgRef)

Configure the background to use a bitmap image.

• bool gslc_SetBkgndColor (gslc_tsGui *pGui, gslc_tsColor nCol)

Configure the background to use a solid color.

bool gslc_SetTransparentColor (gslc_tsGui *pGui, gslc_tsColor nCol)

Configure the color to use for image transparency.

bool gslc_GuiRotate (gslc_tsGui *pGui, uint8_t nRotation)

Dynamically change rotation, automatically adapt touchscreen axes swap/flip.

bool gslc_ElemSendEventTouch (gslc_tsGui *pGui, gslc_tsElemRef *pElemRefTracked, gslc_teTouch e
 — Touch, int16_t nX, int16_t nY)

Trigger an element's touch event.

void gslc ResetElem (gslc tsElem *pElem)

Initialize an Element struct.

void gslc_ResetFont (gslc_tsFont *pFont)

Initialize a Font struct.

void gslc_ElemDestruct (gslc_tsElem *pElem)

Free up any members associated with an element.

void gslc CollectDestruct (gslc tsGui *pGui, gslc tsCollect *pCollect)

Free up any members associated with an element collection.

void gslc_PageDestruct (gslc_tsGui *pGui, gslc_tsPage *pPage)

Free up any members associated with a page.

void gslc_GuiDestruct (gslc_tsGui *pGui)

Free up any surfaces associated with the GUI, pages, collections and elements.

void gslc_CollectReset (gslc_tsCollect *pCollect, gslc_tsElem *asElem, uint16_t nElemMax, gslc_tsElemRef
 *asElemRef, uint16_t nElemRefMax)

Reset the members of an element collection.

- bool gslc_CollectFindFocusStep (gslc_tsGui *pGui, gslc_tsCollect *pCollect, bool bNext, bool *pbWrapped, int16_t *pnElemInd)
- gslc_tsElemRef * gslc_CollectFindElemById (gslc_tsGui *pGui, gslc_tsCollect *pCollect, int16_t nElemId)

Find an element in a collection by its Element ID.

int gslc_CollectGetNextId (gslc_tsGui *pGui, gslc_tsCollect *pCollect)

Allocate the next available Element ID in a collection.

gslc_tsElemRef * gslc_CollectGetElemRefTracked (gslc_tsGui *pGui, gslc_tsCollect *pCollect)

Get the element within a collection that is currently being tracked.

Set the element within a collection that is currently being tracked.

- void gslc_CollectSetElemTracked (gslc_tsGui *pGui, gslc_tsCollect *pCollect, gslc_tsElemRef *pElemRef)
- gslc_tsElemRef * gslc_CollectFindElemFromCoord (gslc_tsGui *pGui, gslc_tsCollect *pCollect, int16_t nX, int16_t nY)

Find an element in a collection by a coordinate coordinate.

• int16_t gslc_CollectGetFocus (gslc_tsGui *pGui, gslc_tsCollect *pCollect)

Get the element index within a collection that is currently in focus.

• void gslc_CollectSetFocus (gslc_tsGui *pGui, gslc_tsCollect *pCollect, int16_t nElemInd)

Set the element index within a collection that is currently in focus.

void gslc_CollectSetParent (gslc_tsGui *pGui, gslc_tsCollect *pCollect, gslc_tsElemRef *pElemRefParent)

Assign the parent element reference to all elements within a collection.

Variables

GSLC_CB_DEBUG_OUT g_pfDebugOut

Global debug output function.

- uint16_t m_nLUTSinF0X16 [257]
- const char GSLC PMEM ERRSTR NULL []
- const char GSLC_PMEM ERRSTR_PXD_NULL []

- 9.36.1 Enumeration Type Documentation
- 9.36.1.1 enum gslc_teDebugPrintState

Enumerator

 $GSLC_S_DEBUG_PRINT_NORM$

GSLC_S_DEBUG_PRINT_TOKEN

GSLC_S_DEBUG_PRINT_UINT16

GSLC_S_DEBUG_PRINT_CHAR

GSLC_S_DEBUG_PRINT_STR

GSLC_S_DEBUG_PRINT_STR_P

- 9.36.2 Function Documentation
- 9.36.2.1 void gslc_DrawFillSectorBase (gslc_tsGui * pGui, int16_t nQuality, int16_t nMidX, int16_t nMidY, int16_t nRad1, int16_t nRad2, gslc_tsColor cArcStart, gslc_tsColor cArcEnd, bool bGradient, int16_t nAngGradStart, int16_t nAngGradRange, int16_t nAngSecStart, int16_t nAngSecEnd)
- 9.36.2.2 bool gslc_FontSetBase (gslc_tsGui * pGui, uint8_t nFontInd, int16_t nFontId, gslc_teFontRefType eFontRefType, const void * pvFontRef, uint16_t nFontSz)
- 9.36.2.3 void gslc_OrderCoord (int16_t * pnX0, int16_t * pnY0, int16_t * pnX1, int16_t * pnY1)
- 9.36.2.4 void gslc_SwapCoords (int16_t * pnXa, int16_t * pnYa, int16_t * pnXb, int16_t * pnYb)
- 9.36.3 Variable Documentation
- 9.36.3.1 const char ERRSTR_NULL[]
- 9.36.3.2 const char GSLC_PMEM ERRSTR_PXD_NULL[]
- 9.36.3.3 GSLC_CB_DEBUG_OUT g_pfDebugOut


Global debug output function.

The user assigns this function via gslc_InitDebug()

9.36.3.4 uint16_t m_nLUTSinF0X16

9.37 src/GUIslice.h File Reference

```
#include <stdio.h>
#include <stdlib.h>
#include <stdbool.h>
#include <string.h>
#include <inttypes.h>
#include "GUIslice_config.h"
Include dependency graph for GUIslice.h:
```

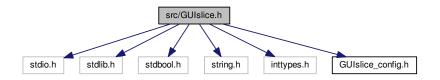

This graph shows which files directly or indirectly include this file:



Data Structures

struct gslc_tsRect

Rectangular region. Defines X,Y corner coordinates plus dimensions.

struct gslc_tsPt

Define point coordinates.

struct gslc_tsColor

Color structure. Defines RGB triplet.

struct gslc tsEvent

Event structure.

struct gslc_tsEventTouch

Structure used to pass touch data through event.

struct gslc tsFont

Font reference structure.

struct gslc_tslmgRef

Image reference structure.

struct gslc_tsElemRef

Element reference structure.

struct gslc_tsElem

Element Struct.

struct gslc_tsCollect

Element collection struct.

struct gslc_tsPage

Page structure.

struct gslc_tsInputMap

Input mapping.

struct gslc_tsGui

GUI structure.

Macros

- #define GSLC PMEM
- #define GSLC 2PI
- #define GSLC_ELEM_FEA_VALID

Element features type.

• #define GSLC_ELEM_FEA_ROUND_EN

Element is drawn with a rounded profile.

• #define GSLC_ELEM_FEA_CLICK_EN

Element accepts touch presses.

• #define GSLC_ELEM_FEA_GLOW_EN

Element supports glowing state.

#define GSLC_ELEM_FEA_FRAME_EN

Element is drawn with a frame.

• #define GSLC_ELEM_FEA_FILL_EN

Element is drawn with a fill.

#define GSLC_ELEM_FEA_NONE

Element default (no features set))

#define GSLC ALIGNV TOP

Element text alignment.

• #define GSLC_ALIGNV_MID

Vertical align to middle.

#define GSLC_ALIGNV_BOT

Vertical align to bottom.

• #define GSLC_ALIGNH_LEFT

Horizontal align to left.

• #define GSLC_ALIGNH_MID

Horizontal align to middle.

• #define GSLC_ALIGNH_RIGHT

Horizontal align to right.

#define GSLC_ALIGN_TOP_LEFT

Align to top-left.

• #define GSLC_ALIGN_TOP_MID

Align to middle of top.

#define GSLC_ALIGN_TOP_RIGHT

Align to top-right.

• #define GSLC ALIGN MID LEFT

Align to middle of left side.

#define GSLC_ALIGN_MID_MID

Align to center.

#define GSLC ALIGN MID RIGHT

Align to middle of right side.

• #define GSLC_ALIGN_BOT_LEFT

Align to bottom-left. #define GSLC_ALIGN_BOT_MID Align to middle of bottom. • #define GSLC ALIGN BOT RIGHT Align to bottom-right. #define GSLC_COL_RED_DK4 Basic color definition. #define GSLC COL RED DK3 Red (dark3) #define GSLC_COL_RED_DK2 Red (dark2) • #define GSLC_COL_RED_DK1 Red (dark1) • #define GSLC_COL_RED Red. • #define GSLC_COL_RED_LT1 Red (light1) • #define GSLC_COL_RED_LT2 Red (light2) #define GSLC COL RED LT3 Red (light3) #define GSLC_COL_RED_LT4 Red (light4) • #define GSLC_COL_GREEN_DK4 Green (dark4) • #define GSLC_COL_GREEN_DK3 Green (dark3) • #define GSLC_COL_GREEN_DK2 Green (dark2) • #define GSLC COL GREEN DK1 Green (dark1) #define GSLC_COL_GREEN Green. • #define GSLC_COL_GREEN_LT1 Green (light1) • #define GSLC_COL_GREEN_LT2 Green (light2) • #define GSLC_COL_GREEN_LT3 Green (light3)

 #define GSLC_COL_GREEN_LT4 Green (light4) • #define GSLC COL BLUE DK4 Blue (dark4) #define GSLC_COL_BLUE_DK3 Blue (dark3) • #define GSLC_COL_BLUE_DK2 Blue (dark2) #define GSLC_COL_BLUE_DK1 Blue (dark1) • #define GSLC_COL_BLUE Blue.

```
    #define GSLC_COL_BLUE_LT1

     Blue (light1)
• #define GSLC_COL_BLUE_LT2
     Blue (light2)

    #define GSLC_COL_BLUE_LT3

    Blue (light3)
• #define GSLC_COL_BLUE_LT4
    Blue (light4)

    #define GSLC_COL_BLACK

    Black.
• #define GSLC_COL_GRAY_DK3
     Gray (dark)

    #define GSLC_COL_GRAY_DK2

     Gray (dark)

    #define GSLC_COL_GRAY_DK1

     Gray (dark)

    #define GSLC_COL_GRAY

     Gray.

    #define GSLC_COL_GRAY_LT1

     Gray (light1)

    #define GSLC_COL_GRAY_LT2

     Gray (light2)
• #define GSLC_COL_GRAY_LT3
     Gray (light3)
• #define GSLC_COL_WHITE
     White.

    #define GSLC_COL_YELLOW

     Yellow.
• #define GSLC_COL_YELLOW_DK
     Yellow (dark)
• #define GSLC_COL_PURPLE
    Purple.
• #define GSLC_COL_CYAN
    Cyan.

    #define GSLC_COL_MAGENTA

    Magenta.

    #define GSLC COL TEAL

     Teal.

    #define GSLC_COL_ORANGE

     Orange.
• #define GSLC_COL_BROWN
    Brown.

    #define GSLC_COLMONO_BLACK

• #define GSLC_COLMONO_WHITE
     White.
• #define TOUCH_ROTATION_DATA
```

Additional definitions for Touch Handling These macros define the transforms used in remapping the touchscreen inputs on the basis of the GUI nRotation setting.

- #define TOUCH_ROTATION_SWAPXY(rotation)
- #define TOUCH_ROTATION_FLIPX(rotation)

- #define TOUCH_ROTATION_FLIPY(rotation)
- #define GSLC_ELEMREF_DEFAULT

Define the default element reference flags for new elements.

#define TOUCH ROTATION DATA

Additional definitions for Touch Handling These macros define the transforms used in remapping the touchscreen inputs on the basis of the GUI nRotation setting.

- #define TOUCH_ROTATION_SWAPXY(rotation)
- #define TOUCH ROTATION FLIPX(rotation)
- #define TOUCH ROTATION FLIPY(rotation)
- #define GSLC DEBUG PRINT(sFmt, ...)

Macro to enable optional debug output.

- #define GSLC_DEBUG2_PRINT(sFmt, ...)
- #define GSLC DEBUG PRINT CONST(sFmt, ...)
- #define GSLC DEBUG2 PRINT CONST(sFmt, ...)
- #define gslc_ElemCreateTxt_P(pGui, nElemId, nPage, nX, nY, nW, nH, strTxt, pFont, colTxt, colFrame, col
 Fill, nAlignTxt, bFrameEn, bFillEn)

Create a read-only text element.

• #define gslc_ElemCreateTxt_P_R(pGui, nElemId, nPage, nX, nY, nW, nH, strTxt, strLength, pFont, colTxt, colFrame, colFill, nAlignTxt, bFrameEn, bFillEn)

Create a read-write text element (element in Flash, string in RAM)

#define gslc_ElemCreateBox_P(pGui, nElemId, nPage, nX, nY, nW, nH, colFrame, colFill, bFrameEn, bFillEn, pfuncXDraw, pfuncXTick)

Create a read-only box element.

• #define gslc_ElemCreateLine_P(pGui, nElemId, nPage, nX0, nY0, nX1, nY1, colFill)

Create a read-only line element.

• #define gslc_ElemCreateBtnTxt_P(pGui, nElemId, nPage, nX, nY, nW, nH, strTxt, pFont, colTxt, colFrame, colFill, colFrameGlow, colFillGlow, nAlignTxt, bFrameEn, bFillEn, callFunc, extraData)

Create a text button element.

Typedefs

- typedef int16_t(* GSLC_CB_DEBUG_OUT) (char ch)
- typedef struct gslc_tsElem gslc_tsElem

Element Struct.

typedef struct gslc tsEvent gslc tsEvent

Event structure.

typedef bool(* GSLC CB EVENT) (void *pvGui, gslc tsEvent sEvent)

Callback function for element drawing.

typedef bool(* GSLC_CB_DRAW) (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)

Callback function for element drawing.

typedef bool(* GSLC_CB_TOUCH) (void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nX, int16←
 _t nY)

Callback function for element touch tracking.

typedef bool(* GSLC_CB_TICK) (void *pvGui, void *pvElemRef)

Callback function for element tick.

typedef bool(* GSLC CB PIN POLL) (void *pvGui, int16 t *pnPinInd, int16 t *pnPinVal)

Callback function for pin polling.

typedef bool(* GSLC_CB_INPUT) (void *pvGui, void *pvElemRef, int16_t nStatus, void *pvData)

Callback function for element input ready.

typedef struct gslc_tsRect gslc_tsRect

Rectangular region. Defines X,Y corner coordinates plus dimensions.

```
    typedef struct gslc_tsPt gslc_tsPt

        Define point coordinates.

    typedef struct gslc tsColor gslc tsColor

        Color structure. Defines RGB triplet.

    typedef struct gslc_tsEventTouch gslc_tsEventTouch

        Structure used to pass touch data through event.
Enumerations
   enum gslc_teElemId {
     GSLC_ID_USER_BASE, GSLC_ID_NONE, GSLC_ID_AUTO, GSLC_ID_TEMP,
     GSLC ID AUTO BASE }
        Element ID enumerations.

    enum gslc_tePageId { GSLC_PAGE_USER_BASE, GSLC_PAGE_NONE }

        Page ID enumerations.

    enum gslc teStackPage { GSLC STACK BASE, GSLC STACK CUR, GSLC STACK OVERLAY, GSLC ←

     STACK MAX }
        Define page stack.

    enum gslc teGroupId { GSLC GROUP ID USER BASE, GSLC GROUP ID NONE }

        Group ID enumerations.

    enum gslc teFontId { GSLC FONT USER BASE, GSLC FONT NONE }

        Font ID enumerations.

    enum gslc_teElemInd { GSLC_IND_NONE, GSLC_IND_FIRST }

        Element Index enumerations.

    enum gslc teTypeCore {

     GSLC TYPE NONE, GSLC TYPE BKGND, GSLC TYPE BTN, GSLC TYPE TXT,
     GSLC_TYPE_BOX, GSLC_TYPE_LINE, GSLC_TYPE_BASE_EXTEND }
        Element type.
   enum gslc_teInputRawEvent {
     GSLC INPUT NONE, GSLC INPUT TOUCH, GSLC INPUT KEY DOWN, GSLC INPUT KEY UP,
     GSLC INPUT PIN ASSERT, GSLC INPUT PIN DEASSERT }
        Raw input event types: touch, key, GPIOs.

    enum gslc teAction {

     GSLC_ACTION_UNDEF, GSLC_ACTION_NONE, GSLC_ACTION_FOCUS_PREV, GSLC_ACTION_FO↔
     CUS NEXT,
     GSLC ACTION SELECT, GSLC ACTION SET REL, GSLC ACTION SET ABS, GSLC ACTION DE↔
     BUG }
        GUI Action Requested These actions are usually the result of an InputMap lookup.
   enum gslc tePin {
     GSLC_PIN_BTN_A, GSLC_PIN_BTN_A_LONG, GSLC_PIN_BTN_B, GSLC_PIN_BTN_B_LONG,
     GSLC_PIN_BTN_C, GSLC_PIN_BTN_C_LONG, GSLC_PIN_BTN_D, GSLC_PIN_BTN_D_LONG,
     GSLC_PIN_BTN_E, GSLC_PIN_BTN_E_LONG, GSLC_PIN_BTN_UP, GSLC_PIN_BTN_DOWN,
     GSLC_PIN_BTN_LEFT, GSLC_PIN_BTN_RIGHT, GSLC_PIN_BTN_SEL }
        General purpose pin/button constants.

 enum gslc teTouch {

     GSLC_TOUCH_NONE, GSLC_TOUCH_TYPE_MASK, GSLC_TOUCH_COORD, GSLC_TOUCH_DIRECT,
     GSLC_TOUCH_SUBTYPE_MASK, GSLC_TOUCH_DOWN, GSLC_TOUCH_DOWN_IN, GSLC_TOUCH ←
     DOWN OUT,
     GSLC TOUCH UP, GSLC TOUCH UP IN, GSLC TOUCH UP OUT, GSLC TOUCH MOVE,
     GSLC_TOUCH_MOVE_IN, GSLC_TOUCH_MOVE_OUT, GSLC_TOUCH_FOCUS_ON, GSLC_TOUCH_←
     FOCUS OFF,
     GSLC TOUCH FOCUS SELECT, GSLC TOUCH SET REL, GSLC TOUCH SET ABS }
```

Processed event from input raw events and actions.

 enum gslc_telnitStat { GSLC_INITSTAT_UNDEF, GSLC_INITSTAT_INACTIVE, GSLC_INITSTAT_FAIL, GSLC_INITSTAT_ACTIVE }

Status of a module's initialization.

enum gslc_teEventType {

GSLC_EVT_NONE, GSLC_EVT_DRAW, GSLC_EVT_TOUCH, GSLC_EVT_TICK, GSLV_EVT_CUSTOM }

Event types.

Event sub-types.

- enum gslc_teRedrawType { GSLC_REDRAW_NONE, GSLC_REDRAW_FULL, GSLC_REDRAW_INC }
 Redraw types.
- enum gslc teFontRefType { GSLC FONTREF FNAME, GSLC FONTREF PTR }

Font Reference types.

enum gslc_teFontRefMode { GSLC_FONTREF_MODE_DEFAULT, GSLC_FONTREF_MODE_1, GSLC_←
FONTREF_MODE_2, GSLC_FONTREF_MODE_3 }

Font Reference modes.

enum gslc_teElemRefFlags {

GSLC_ELEMREF_NONE, GSLC_ELEMREF_SRC_RAM, GSLC_ELEMREF_SRC_PROG, GSLC_ELEM ← REF_SRC_CONST,

GSLC_ELEMREF_REDRAW_NONE, GSLC_ELEMREF_REDRAW_FULL, GSLC_ELEMREF_REDRAW ← _INC, GSLC_ELEMREF_GLOWING,

GSLC_ELEMREF_VISIBLE, GSLC_ELEMREF_SRC, GSLC_ELEMREF_REDRAW_MASK }

Element reference flags: Describes characteristics of an element.

enum gslc telmgRefFlags {

 ${\sf GSLC_IMGREF_NONE, GSLC_IMGREF_SRC_FILE, GSLC_IMGREF_SRC_SD, GSLC_IMGREF_SRC_} \leftrightarrow {\sf RAM},$

GSLC_IMGREF_SRC_PROG, GSLC_IMGREF_FMT_BMP24, GSLC_IMGREF_FMT_BMP16, GSLC_IM↔ GREF_FMT_RAW1,

GSLC_IMGREF_FMT_JPG, GSLC_IMGREF_SRC, GSLC_IMGREF_FMT }

Image reference flags: Describes characteristics of an image reference.

enum gslc_teTxtFlags {

GSLC_TXT_MEM_RAM, GSLC_TXT_MEM_PROG, GSLC_TXT_ALLOC_NONE, GSLC_TXT_ALLOC_INT, GSLC_TXT_ALLOC_EXT, GSLC_TXT_ENC_PLAIN, GSLC_TXT_ENC_UTF8, GSLC_TXT_MEM, GSLC_TXT_ALLOC, GSLC_TXT_ENC, GSLC_TXT_DEFAULT }

Text reference flags: Describes the characteristics of a text string (ie.

Functions

char * gslc GetVer (gslc tsGui *pGui)

Get the GUIslice version number.

const char * gslc_GetNameDisp (gslc_tsGui *pGui)

Get the GUIslice display driver name.

const char * gslc_GetNameTouch (gslc_tsGui *pGui)

Get the GUIslice touch driver name.

void * gslc_GetDriverDisp (gslc_tsGui *pGui)

Get the native display driver instance.

void * gslc_GetDriverTouch (gslc_tsGui *pGui)

Get the native touch driver instance.

bool gslc_Init (gslc_tsGui *pGui, void *pvDriver, gslc_tsPage *asPage, uint8_t nMaxPage, gslc_tsFont *as←
 Font, uint8_t nMaxFont)

Initialize the GUIslice library.

• void gslc_InitDebug (GSLC_CB_DEBUG_OUT pfunc)

Initialize debug output.

void gslc DebugPrintf (const char *pFmt,...)

Optimized printf routine for GUIslice debug/error output.

bool gslc_GuiRotate (gslc_tsGui *pGui, uint8_t nRotation)

Dynamically change rotation, automatically adapt touchscreen axes swap/flip.

void gslc Quit (gslc tsGui *pGui)

Exit the GUIslice environment.

void gslc_Update (gslc_tsGui *pGui)

Perform main GUIslice handling functions.

bool gslc SetBkgndImage (gslc tsGui *pGui, gslc tsImgRef sImgRef)

Configure the background to use a bitmap image.

bool gslc_SetBkgndColor (gslc_tsGui *pGui, gslc_tsColor nCol)

Configure the background to use a solid color.

bool gslc_SetTransparentColor (gslc_tsGui *pGui, gslc_tsColor nCol)

Configure the color to use for image transparency.

• bool gslc_SetClipRect (gslc_tsGui *pGui, gslc_tsRect *pRect)

Set the clipping rectangle for further drawing.

bool gslc_lsInRect (int16_t nSelX, int16_t nSelY, gslc_tsRect rRect)

Determine if a coordinate is inside of a rectangular region.

gslc_tsRect gslc_ExpandRect (gslc_tsRect rRect, int16_t nExpandW, int16_t nExpandH)

Expand or contract a rectangle in width and/or height (equal amounts on both side), based on the centerpoint of the rectangle.

bool gslc_lslnWH (int16_t nSelX, int16_t nSelY, uint16_t nWidth, uint16_t nHeight)

Determine if a coordinate is inside of a width x height region.

void gslc_UnionRect (gslc_tsRect *pRect, gslc_tsRect rAddRect)

Expand a rect to include another rect.

void gslc InvalidateRgnReset (gslc tsGui *pGui)

Reset the invalidation region.

void gslc_InvalidateRgnPage (gslc_tsGui *pGui, gslc_tsPage *pPage)

Include an entire page (eg.

void gslc_InvalidateRgnScreen (gslc_tsGui *pGui)

Mark the entire screen as invalidated.

• void gslc_InvalidateRgnAdd (gslc_tsGui *pGui, gslc_tsRect rAddRect)

Add a rectangular region to the invalidation region.

bool gslc_ClipPt (gslc_tsRect *pClipRect, int16_t nX, int16_t nY)

Perform basic clipping of a single point to a clipping region.

bool gslc ClipLine (gslc tsRect *pClipRect, int16 t *pnX0, int16 t *pnY0, int16 t *pnX1, int16 t *pnY1)

Perform basic clipping of a line to a clipping region.

bool gslc_ClipRect (gslc_tsRect *pClipRect, gslc_tsRect *pRect)

Perform basic clipping of a rectangle to a clipping region.

gslc_tslmgRef gslc_GetImageFromFile (const char *pFname, gslc_teImgRefFlags eFmt)

Create an image reference to a bitmap file in LINUX filesystem.

• gslc_tslmgRef gslc_GetImageFromSD (const char *pFname, gslc_teImgRefFlags eFmt)

Create an image reference to a bitmap file in SD card.

gslc_tslmgRef gslc_GetImageFromRam (unsigned char *pImgBuf, gslc_teImgRefFlags eFmt)

Create an image reference to a bitmap in SRAM.

gslc tslmgRef gslc GetImageFromProg (const unsigned char *pImgBuf, gslc teImgRefFlags eFmt)

Create an image reference to a bitmap in program memory (PROGMEM)

void gslc PolarToXY (uint16 t nRad, int16 t n64Ang, int16 t *nDX, int16 t *nDY)

Convert polar coordinate to cartesian.

int16_t gslc_sinFX (int16_t n64Ang)

Calculate fixed-point sine function from fractional degrees.

int16 t gslc cosFX (int16 t n64Ang)

Calculate fixed-point cosine function from fractional degrees.

gslc_tsColor gslc_ColorBlend2 (gslc_tsColor colStart, gslc_tsColor colEnd, uint16_t nMidAmt, uint16_t n
 BlendAmt)

Create a color based on a blend between two colors.

gslc_tsColor gslc_ColorBlend3 (gslc_tsColor colStart, gslc_tsColor colMid, gslc_tsColor colEnd, uint16_t n
 MidAmt, uint16 t nBlendAmt)

Create a color based on a blend between three colors.

• bool gslc_ColorEqual (gslc_tsColor a, gslc_tsColor b)

Check whether two colors are equal.

void gslc_DrawSetPixel (gslc_tsGui *pGui, int16_t nX, int16_t nY, gslc_tsColor nCol)

Set a pixel on the active screen to the given color with lock.

• void gslc_DrawLine (gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, gslc_tsColor nCol)

Draw an arbitrary line using Bresenham's algorithm.

• void gslc_DrawLineH (gslc_tsGui *pGui, int16_t nX, int16_t nY, uint16_t nW, gslc_tsColor nCol)

Draw a horizontal line.

void gslc DrawLineV (gslc tsGui *pGui, int16 t nX, int16 t nY, uint16 t nH, gslc tsColor nCol)

Draw a vertical line.

void gslc_DrawLinePolar (gslc_tsGui *pGui, int16_t nX, int16_t nY, uint16_t nRadStart, uint16_t nRadEnd, int16_t n64Ang, gslc_tsColor nCol)

Draw a polar ray segment.

void gslc_DrawFrameRect (gslc_tsGui *pGui, gslc_tsRect rRect, gslc_tsColor nCol)

Draw a framed rectangle.

- void gslc_DrawFrameRoundRect (gslc_tsGui *pGui, gslc_tsRect rRect, int16_t nRadius, gslc_tsColor nCol)
 Draw a framed rounded rectangle.
- void gslc_DrawFillRect (gslc_tsGui *pGui, gslc_tsRect rRect, gslc_tsColor nCol)

Draw a filled rectangle.

Draw a filled rounded rectangle.

• void gslc_DrawFillRoundRect (gslc_tsGui *pGui, gslc_tsRect rRect, int16_t nRadius, gslc_tsColor nCol)

void gslc_DrawFrameCircle (gslc_tsGui *pGui, int16_t nMidX, int16_t nMidY, uint16_t nRadius, gslc_tsColor nCol)

Draw a framed circle.

void gslc_DrawFillCircle (gslc_tsGui *pGui, int16_t nMidX, int16_t nMidY, uint16_t nRadius, gslc_tsColor n←
 Col)

Draw a filled circle.

• void gslc_DrawFrameTriangle (gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, int16_t nX2, int16_t nY2, gslc_tsColor nCol)

Draw a framed triangle.

• void gslc_DrawFillTriangle (gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, int16_t nX2, int16_t nY2, gslc_tsColor nCol)

Draw a filled triangle.

void gslc_DrawFrameQuad (gslc_tsGui *pGui, gslc_tsPt *psPt, gslc_tsColor nCol)

Draw a framed quadrilateral.

void gslc DrawFillQuad (gslc tsGui *pGui, gslc tsPt *psPt, gslc tsColor nCol)

Draw a filled quadrilateral.

void gslc_DrawFillGradSector (gslc_tsGui *pGui, int16_t nQuality, int16_t nMidX, int16_t nMidY, int16_t n← Rad1, int16_t nRad2, gslc_tsColor cArcStart, gslc_tsColor cArcEnd, int16_t nAngSecStart, int16_t nAng← SecEnd, int16_t nAngGradStart, int16_t nAngGradRange)

Draw a gradient filled sector of a circle with support for inner and outer radius.

void gslc_DrawFillSector (gslc_tsGui *pGui, int16_t nQuality, int16_t nMidX, int16_t nMidY, int16_t nRad1, int16_t nRad2, gslc_tsColor cArc, int16_t nAngSecStart, int16_t nAngSecEnd)

Draw a flat filled sector of a circle with support for inner and outer radius.

 bool gslc_FontAdd (gslc_tsGui *pGui, int16_t nFontId, gslc_teFontRefType eFontRefType, const void *pv← FontRef, uint16_t nFontSz)

Load a font into the local font cache and assign font ID (nFontId).

bool gslc_FontSet (gslc_tsGui *pGui, int16_t nFontId, gslc_teFontRefType eFontRefType, const void *pv←
FontRef, uint16_t nFontSz)

Load a font into the local font cache and store as font ID (nFontId)

gslc tsFont * gslc FontGet (gslc tsGui *pGui, int16 t nFontId)

Fetch a font from its ID value.

bool gslc FontSetMode (gslc tsGui *pGui, int16 t nFontId, gslc teFontRefMode eFontMode)

Set the font operating mode.

int gslc GetPageCur (gslc tsGui *pGui)

Fetch the current page ID.

void gslc SetStackPage (gslc tsGui *pGui, uint8 t nStackPos, int16 t nPageId)

Assign a page to the page stack.

• void gslc_SetStackState (gslc_tsGui *pGui, uint8_t nStackPos, bool bActive, bool bDoDraw)

Change the status of a page in a page stack.

void gslc SetPageBase (gslc tsGui *pGui, int16 t nPageId)

Assigns a page for the base layer in the page stack.

void gslc_SetPageCur (gslc_tsGui *pGui, int16_t nPageId)

Select a page for the current layer in the page stack.

void gslc_SetPageOverlay (gslc_tsGui *pGui, int16_t nPageId)

Select a page for the overlay layer in the page stack.

• void gslc_PopupShow (gslc_tsGui *pGui, int16_t nPageId, bool bModal)

Show a popup dialog.

void gslc_PopupHide (gslc_tsGui *pGui)

Hides the currently active popup dialog.

void gslc PageRedrawSet (gslc tsGui *pGui, bool bRedraw)

Update the need-redraw status for the current page.

bool gslc_PageRedrawGet (gslc_tsGui *pGui)

Get the need-redraw status for the current page.

void gslc_PageAdd (gslc_tsGui *pGui, int16_t nPageId, gslc_tsElem *psElem, uint16_t nMaxElem, gslc_
tsElemRef *psElemRef, uint16_t nMaxElemRef)

Add a page to the GUI.

gslc tsElemRef * gslc PageFindElemById (gslc tsGui *pGui, int16 t nPageId, int16 t nElemId)

Find an element in the GUI by its Page ID and Element ID.

 gslc_tsElemRef * gslc_ElemCreateTxt (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsRect rElem, char *pStrBuf, uint8_t nStrBufMax, int16_t nFontId)

Create a Text Element.

• gslc_tsElemRef * gslc_ElemCreateBtnTxt (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsRect rElem, char *pStrBuf, uint8_t nStrBufMax, int16_t nFontId, GSLC_CB_TOUCH cbTouch)

Create a textual Button Element.

• gslc_tsElemRef * gslc_ElemCreateBtnImg (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsRect rElem, gslc_tsImgRef sImgRef, gslc_tsImgRef sImgRefSel, GSLC_CB_TOUCH cbTouch)

Create a graphical Button Element.

gslc_tsElemRef * gslc_ElemCreateBox (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsRect r←
 Elem)

Create a Box Element.

gslc_tsElemRef * gslc_ElemCreateLine (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1)

Create a Line Element.

gslc_tsElemRef * gslc_ElemCreateImg (gslc_tsGui *pGui, int16_t nElemId, int16_t nPage, gslc_tsRect r←
 Elem, gslc_tsImgRef sImgRef)

Create an image Element.

int gslc_ElemGetId (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Get an Element ID from an element structure.

void gslc_ElemSetFillEn (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bFillEn)

Set the fill state for an Element.

void gslc_ElemSetFrameEn (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bFrameEn)

Set the frame state for an Element.

void gslc ElemSetRoundEn (gslc tsGui *pGui, gslc tsElemRef *pElemRef, bool bRoundEn)

Set the rounded frame/fill state for an Element.

void gslc_ElemSetCol (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor colFrame, gslc_tsColor colFill, gslc_tsColor colFillGlow)

Update the common color selection for an Element.

void gslc_ElemSetGlowCol (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor colFrameGlow, gslc_tsColor colFillGlow, gslc_tsColor colTxtGlow)

Update the common color selection for glowing state of an Element.

void gslc_ElemSetGroup (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int nGroupId)

Set the group ID for an element.

int gslc_ElemGetGroup (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Get the group ID for an element.

void gslc_ElemSetTxtAlign (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, unsigned nAlign)

Set the alignment of a textual element (horizontal and vertical)

void gslc_ElemSetTxtMargin (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, unsigned nMargin)

Set the margin around of a textual element.

void gslc_ElemSetTxtMarginXY (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int8_t nMarginX, int8_t n
 MarginY)

Set the margin around of a textual element (X & Y offsets can be different)

• void gslc_ElemSetTxtStr (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, const char *pStr)

Update the text string associated with an Element.

char * gslc_ElemGetTxtStr (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Fetch the current text string associated with an Element.

• void gslc_ElemSetTxtCol (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsColor colVal)

Update the text string color associated with an Element ID.

void gslc_ElemSetTxtMem (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_teTxtFlags eFlags)

Update the text string location in memory.

• void gslc_ElemSetTxtEnc (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_teTxtFlags eFlags)

Update the text string encoding mode.

void gslc ElemUpdateFont (gslc tsGui *pGui, gslc tsElemRef *pElemRef, int nFontId)

Update the Font selected for an Element's text.

• void gslc_ElemSetRedraw (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_teRedrawType eRedraw)

Update the need-redraw status for an element.

gslc_teRedrawType gslc_ElemGetRedraw (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Get the need-redraw status for an element.

• void gslc_ElemSetGlowEn (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bGlowEn)

Update the glowing enable for an element.

void gslc_ElemSetClickEn (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bClickEn)

Update the click enable for an element.

void gslc ElemSetTouchFunc (gslc tsGui *pGui, gslc tsElemRef *pElemRef, GSLC CB TOUCH funcCb)

Update the touch function callback for an element.

void gslc_ElemSetStyleFrom (gslc_tsGui *pGui, gslc_tsElemRef *pElemRefSrc, gslc_tsElemRef *pElem←
 RefDest)

Copy style settings from one element to another.

bool gslc ElemGetGlowEn (gslc tsGui *pGui, gslc tsElemRef *pElemRef)

Get the glowing enable for an element.

void gslc_ElemSetGlow (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bGlowing)

Update the glowing indicator for an element.

bool gslc_ElemGetGlow (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Get the glowing indicator for an element.

• void gslc_ElemSetVisible (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, bool bVisible)

Update the visibility status for an element.

• bool gslc_ElemGetVisible (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Get the visibility status for an element.

• bool gslc_ElemGetOnScreen (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Determine whether an element is visible on the screen.

void gslc_ElemSetDrawFunc (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, GSLC_CB_DRAW funcCb)

Assign the drawing callback function for an element.

• void gslc_ElemSetTickFunc (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, GSLC_CB_TICK funcCb)

Assign the tick callback function for an element.

bool gslc_ElemOwnsCoord (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nX, int16_t nY, bool b←
 OnlyClickEn)

Determine if a coordinate is inside of an element.

• bool gslc_InitTouch (gslc_tsGui *pGui, const char *acDev)

Initialize the touchscreen device driver.

 bool gslc_GetTouch (gslc_tsGui *pGui, int16_t *pnX, int16_t *pnY, uint16_t *pnPress, gslc_teInputRawEvent *peInputEvent, int16_t *pnInputVal)

Initialize the touchscreen device driver.

void gslc_SetTouchRemapEn (gslc_tsGui *pGui, bool bEn)

Configure touchscreen remapping.

void gslc_SetTouchRemapCal (gslc_tsGui *pGui, uint16_t nXMin, uint16_t nXMax, uint16_t nYMin, uint16_t nYMax)

Configure touchscreen calibration values.

void gslc_SetTouchRemapYX (gslc_tsGui *pGui, bool bSwap)

Configure touchscreen XY swap.

- void gslc_SetPinPollFunc (gslc_tsGui *pGui, GSLC_CB_PIN_POLL pfunc)
- void gslc_InitInputMap (gslc_tsGui *pGui, gslc_tsInputMap *asInputMap, uint8_t nInputMapMax)
- gslc_tsImgRef gslc_ResetImage ()

Create a blank image reference structure.

gslc_tsElem gslc_ElemCreate (gslc_tsGui *pGui, int16_t nElemId, int16_t nPageId, int16_t nType, gslc_ts←
 Rect rElem, char *pStrBuf, uint8_t nStrBufMax, int16_t nFontId)

Create a new element with default styling.

gslc_tsElemRef * gslc_ElemAdd (gslc_tsGui *pGui, int16_t nPageId, gslc_tsElem *pElem, gslc_teElem←
 RefFlags eFlags)

Add the Element to the list of generated elements in the GUI environment.

uint8_t gslc_GetElemRefFlag (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, uint8_t nFlagMask)

Get the flags associated with an element reference.

 void gslc_SetElemRefFlag (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, uint8_t nFlagMask, uint8_t n← FlagVal)

Set the flags associated with an element reference.

• gslc_tsElem * gslc_GetElemFromRef (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef)

Returns a pointer to an element from an element reference, copying from FLASH to RAM if element is stored in PROGMEM.

• gslc_tsElem * gslc_GetElemFromRefD (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nLineNum)

Returns a pointer to an element from an element reference.

void * gslc_GetXDataFromRef (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, int16_t nType, int16_t nLine ← Num)

Returns a pointer to the data structure associated with an extended element.

void gslc_ElemSetImage (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_tsImgRef sImgRef, gslc_ts
 ImgRef sImgRefSel)

Set an element to use a bitmap image.

• bool gslc_ElemDrawByRef (gslc_tsGui *pGui, gslc_tsElemRef *pElemRef, gslc_teRedrawType eRedraw)

Draw an element to the active display.

void gslc ElemDraw (gslc tsGui *pGui, int16 t nPageld, int16 t nElemId)

Draw an element to the active display.

void gslc_DrawTxtBase (gslc_tsGui *pGui, char *pStrBuf, gslc_tsRect rTxt, gslc_tsFont *pTxtFont, gslc
 _teTxtFlags eTxtFlags, int8_t eTxtAlign, gslc_tsColor colTxt, gslc_tsColor colBg, int16_t nMarginW, int16_t nMarginH)

Draw text with full text justification.

void gslc SetRoundRadius (gslc tsGui *pGui, uint8 t nRadius)

Set the global rounded radius.

bool gslc_PageEvent (void *pvGui, gslc_tsEvent sEvent)

Common event handler function for a page.

void gslc_PageRedrawGo (gslc_tsGui *pGui)

Redraw all elements on the active page.

void gslc PageFlipSet (gslc tsGui *pGui, bool bNeeded)

Indicate whether the screen requires page flip.

• bool gslc_PageFlipGet (gslc_tsGui *pGui)

Get state of pending page flip state.

void gslc_PageFlipGo (gslc_tsGui *pGui)

Update the visible screen if page has been marked for flipping.

gslc_tsPage * gslc_PageFindByld (gslc_tsGui *pGui, int16_t nPageId)

Find a page in the GUI by its ID.

void gslc_PageRedrawCalc (gslc_tsGui *pGui)

Perform a redraw calculation on the page to determine if additional elements should also be redrawn.

- int16_t gslc_PageFocusStep (gslc_tsGui *pGui, gslc_tsPage *pPage, bool bNext)
- gslc_tsEvent gslc_EventCreate (gslc_tsGui *pGui, gslc_teEventType eType, uint8_t nSubType, void *pv←
 Scope, void *pvData)

Create an event structure.

bool gslc ElemEvent (void *pvGui, gslc tsEvent sEvent)

Common event handler function for an element.

Trigger an element's touch event.

void gslc_CollectReset (gslc_tsCollect *pCollect, gslc_tsElem *asElem, uint16_t nElemMax, gslc_tsElemRef
 *asElemRef, uint16_t nElemRefMax)

Reset the members of an element collection.

gslc_tsElemRef * gslc_CollectElemAdd (gslc_tsGui *pGui, gslc_tsCollect *pCollect, const gslc_tsElem *p←
 Elem, gslc_teElemRefFlags eFlags)

Add an element to a collection.

bool gslc CollectGetRedraw (gslc tsGui *pGui, gslc tsCollect *pCollect)

Determine if any elements in a collection need redraw.

• gslc_tsElemRef * gslc_CollectFindElemById (gslc_tsGui *pGui, gslc_tsCollect *pCollect, int16_t nElemId)

Find an element in a collection by its Element ID.

gslc_tsElemRef * gslc_CollectFindElemFromCoord (gslc_tsGui *pGui, gslc_tsCollect *pCollect, int16_t nX, int16_t nY)

Find an element in a collection by a coordinate coordinate.

int gslc CollectGetNextId (gslc tsGui *pGui, gslc tsCollect *pCollect)

Allocate the next available Element ID in a collection.

gslc_tsElemRef * gslc_CollectGetElemRefTracked (gslc_tsGui *pGui, gslc_tsCollect *pCollect)

Get the element within a collection that is currently being tracked.

void gslc_CollectSetElemTracked (gslc_tsGui *pGui, gslc_tsCollect *pCollect, gslc_tsElemRef *pElemRef)

Set the element within a collection that is currently being tracked.

int16_t gslc_CollectGetFocus (gslc_tsGui *pGui, gslc_tsCollect *pCollect)

Get the element index within a collection that is currently in focus.

void gslc_CollectSetFocus (gslc_tsGui *pGui, gslc_tsCollect *pCollect, int16_t nElemInd)

Set the element index within a collection that is currently in focus.

- bool gslc_CollectFindFocusStep (gslc_tsGui *pGui, gslc_tsCollect *pCollect, bool bNext, bool *pbWrapped, int16 t *pnElemInd)
- void gslc_CollectSetParent (gslc_tsGui *pGui, gslc_tsCollect *pCollect, gslc_tsElemRef *pElemRefParent)

 Assign the parent element reference to all elements within a collection.
- bool gslc_CollectEvent (void *pvGui, gslc_tsEvent sEvent)

Common event handler function for an element collection.

void gslc_CollectTouch (gslc_tsGui *pGui, gslc_tsCollect *pCollect, gslc_tsEventTouch *pEventTouch)

Handle touch events within the element collection.

bool gslc_CollectTouchCompound (void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nRelX, int16_t nRelY, gslc_tsCollect *pCollect)

Handle dispatch of touch (up,down,move) events to compound elements sub elements.

• void gslc_CollectInput (gslc_tsGui *pGui, gslc_tsCollect *pCollect, gslc_tsEventTouch *pEventTouch)

Handle direct input events within the element collection.

void gslc TrackTouch (gslc tsGui *pGui, gslc tsPage *pPage, int16 t nX, int16 t nY, uint16 t nPress)

Handles a touch event and performs the necessary tracking, glowing and selection actions depending on the press state.

void gslc_TrackInput (gslc_tsGui *pGui, gslc_tsPage *pPage, gslc_teInputRawEvent eInputEvent, int16_←
t nInputVal)

Handles a direct input event and performs the necessary tracking, glowing and selection actions depending on the state.

- bool gslc_InputMapLookup (gslc_tsGui *pGui, gslc_teInputRawEvent eInputEvent, int16_t nInputVal, gslc
 _teAction *peAction, int16_t *pnActionVal)
- void gslc_GuiDestruct (gslc_tsGui *pGui)

Free up any surfaces associated with the GUI, pages, collections and elements.

void gslc_PageDestruct (gslc_tsGui *pGui, gslc_tsPage *pPage)

Free up any members associated with a page.

void gslc_CollectDestruct (gslc_tsGui *pGui, gslc_tsCollect *pCollect)

Free up any members associated with an element collection.

void gslc_ElemDestruct (gslc_tsElem *pElem)

Free up any members associated with an element.

void gslc_ResetFont (gslc_tsFont *pFont)

Initialize a Font struct.

void gslc ResetElem (gslc tsElem *pElem)

Initialize an Element struct.

Variables

GSLC_CB_DEBUG_OUT g_pfDebugOut

Global debug output function.

9.37.1 Macro Definition Documentation 9.37.1.1 #define GSLC_2PI 9.37.1.2 #define GSLC_ALIGN_BOT_LEFT Align to bottom-left. 9.37.1.3 #define GSLC_ALIGN_BOT_MID Align to middle of bottom. 9.37.1.4 #define GSLC_ALIGN_BOT_RIGHT Align to bottom-right. 9.37.1.5 #define GSLC_ALIGN_MID_LEFT Align to middle of left side. 9.37.1.6 #define GSLC_ALIGN_MID_MID Align to center. 9.37.1.7 #define GSLC_ALIGN_MID_RIGHT Align to middle of right side. 9.37.1.8 #define GSLC_ALIGN_TOP_LEFT Align to top-left. 9.37.1.9 #define GSLC_ALIGN_TOP_MID Align to middle of top. 9.37.1.10 #define GSLC_ALIGN_TOP_RIGHT Align to top-right.

9.37.1.11 #define GSLC_ALIGNH_LEFT Horizontal align to left. 9.37.1.12 #define GSLC_ALIGNH_MID Horizontal align to middle. 9.37.1.13 #define GSLC_ALIGNH_RIGHT Horizontal align to right. 9.37.1.14 #define GSLC_ALIGNV_BOT Vertical align to bottom. 9.37.1.15 #define GSLC_ALIGNV_MID Vertical align to middle. 9.37.1.16 #define GSLC_ALIGNV_TOP Element text alignment. Vertical align to top 9.37.1.17 #define GSLC_COL_BLACK Black. 9.37.1.18 #define GSLC_COL_BLUE Blue. 9.37.1.19 #define GSLC_COL_BLUE_DK1 Blue (dark1) 9.37.1.20 #define GSLC_COL_BLUE_DK2

Blue (dark2)

```
9.37.1.21 #define GSLC_COL_BLUE_DK3
Blue (dark3)
9.37.1.22 #define GSLC_COL_BLUE_DK4
Blue (dark4)
9.37.1.23 #define GSLC_COL_BLUE_LT1
Blue (light1)
9.37.1.24 #define GSLC_COL_BLUE_LT2
Blue (light2)
9.37.1.25 #define GSLC_COL_BLUE_LT3
Blue (light3)
9.37.1.26 #define GSLC_COL_BLUE_LT4
Blue (light4)
9.37.1.27 #define GSLC_COL_BROWN
Brown.
9.37.1.28 #define GSLC_COL_CYAN
Cyan.
9.37.1.29 #define GSLC_COL_GRAY
Gray.
9.37.1.30 #define GSLC_COL_GRAY_DK1
Gray (dark)
```

Generated by Doxygen

9.37.1.31 #define GSLC_COL_GRAY_DK2			
Gray (dark)			
9.37.1.32 #define GSLC_COL_GRAY_DK3			
Gray (dark)			
9.37.1.33 #define GSLC_COL_GRAY_LT1			
Gray (light1)			
9.37.1.34 #define GSLC_COL_GRAY_LT2			
Gray (light2)			
9.37.1.35 #define GSLC_COL_GRAY_LT3			
Gray (light3)			
9.37.1.36 #define GSLC_COL_GREEN			
Green.			
9.37.1.37 #define GSLC_COL_GREEN_DK1			
Green (dark1)			
9.37.1.38 #define GSLC_COL_GREEN_DK2			
Green (dark2)			
9.37.1.39 #define GSLC_COL_GREEN_DK3			
Green (dark3)			
9.37.1.40 #define GSLC_COL_GREEN_DK4			
Green (dark4)			

```
9.37.1.41 #define GSLC_COL_GREEN_LT1
Green (light1)
9.37.1.42 #define GSLC_COL_GREEN_LT2
Green (light2)
9.37.1.43 #define GSLC_COL_GREEN_LT3
Green (light3)
9.37.1.44 #define GSLC_COL_GREEN_LT4
Green (light4)
9.37.1.45 #define GSLC_COL_MAGENTA
Magenta.
9.37.1.46 #define GSLC_COL_ORANGE
Orange.
9.37.1.47 #define GSLC_COL_PURPLE
Purple.
9.37.1.48 #define GSLC_COL_RED
Red.
9.37.1.49 #define GSLC_COL_RED_DK1
Red (dark1)
9.37.1.50 #define GSLC_COL_RED_DK2
Red (dark2)
```

```
9.37.1.51 #define GSLC_COL_RED_DK3
Red (dark3)
9.37.1.52 #define GSLC_COL_RED_DK4
Basic color definition.
Red (dark4)
9.37.1.53 #define GSLC_COL_RED_LT1
Red (light1)
9.37.1.54 #define GSLC_COL_RED_LT2
Red (light2)
9.37.1.55 #define GSLC_COL_RED_LT3
Red (light3)
9.37.1.56 #define GSLC_COL_RED_LT4
Red (light4)
9.37.1.57 #define GSLC_COL_TEAL
Teal.
9.37.1.58 #define GSLC_COL_WHITE
White.
9.37.1.59 #define GSLC_COL_YELLOW
Yellow.
9.37.1.60 #define GSLC_COL_YELLOW_DK
Yellow (dark)
```

9.37.1.61 #define GSLC_COLMONO_BLACK Black. 9.37.1.62 #define GSLC_COLMONO_WHITE White. 9.37.1.63 #define GSLC_ELEM_FEA_CLICK_EN Element accepts touch presses. 9.37.1.64 #define GSLC_ELEM_FEA_FILL_EN Element is drawn with a fill. 9.37.1.65 #define GSLC_ELEM_FEA_FRAME_EN Element is drawn with a frame. 9.37.1.66 #define GSLC_ELEM_FEA_GLOW_EN Element supports glowing state. 9.37.1.67 #define GSLC_ELEM_FEA_NONE Element default (no features set)) 9.37.1.68 #define GSLC_ELEM_FEA_ROUND_EN Element is drawn with a rounded profile. 9.37.1.69 #define GSLC_ELEM_FEA_VALID Element features type. Element record is valid

9.37.1.70 #define GSLC_ELEMREF_DEFAULT

Define the default element reference flags for new elements.

9.37.1.71 #define GSLC_PMEM

9.37.2 Typedef Documentation

9.37.2.1 typedef int16_t(* GSLC_CB_DEBUG_OUT) (char ch)

9.37.2.2 typedef bool(* GSLC_CB_DRAW) (void *pvGui, void *pvElemRef, gslc_teRedrawType eRedraw)

Callback function for element drawing.

9.37.2.3 typedef bool(* GSLC_CB_EVENT) (void *pvGui, gslc_tsEvent sEvent)

Callback function for element drawing.

9.37.2.4 typedef bool(* GSLC_CB_INPUT) (void *pvGui, void *pvElemRef, int16_t nStatus, void *pvData)

Callback function for element input ready.

9.37.2.5 typedef bool(* GSLC_CB_PIN_POLL) (void *pvGui, int16_t *pnPinInd, int16_t *pnPinVal)

Callback function for pin polling.

9.37.2.6 typedef bool(* GSLC_CB_TICK) (void *pvGui, void *pvElemRef)

Callback function for element tick.

9.37.2.7 typedef bool(* GSLC_CB_TOUCH) (void *pvGui, void *pvElemRef, gslc_teTouch eTouch, int16_t nX, int16_t nY)

Callback function for element touch tracking.

9.37.2.8 typedef struct gslc_tsColor gslc_tsColor

Color structure. Defines RGB triplet.

9.37.2.9 typedef struct gslc_tsElem gslc_tsElem

Element Struct.

- Represents a single graphic element in the GUIslice environment
- · A page is made up of a number of elements
- Each element is created with a user-specified ID for further accesses (or GSLC_ID_AUTO for it to be autogenerated)
- Display order of elements in a page is based upon the creation order
- Extensions to the core element types is provided through the pXData reference and pfuncX* callback functions.

9.37.2.10 typedef struct gslc_tsEvent gslc_tsEvent

Event structure.

9.37.2.11 typedef struct gslc_tsEventTouch gslc_tsEventTouch

Structure used to pass touch data through event.

9.37.2.12 typedef struct gslc_tsPt gslc_tsPt

Define point coordinates.

9.37.2.13 typedef struct gslc_tsRect gslc_tsRect

Rectangular region. Defines X,Y corner coordinates plus dimensions.

9.37.3 Enumeration Type Documentation

9.37.3.1 enum gslc_teAction

GUI Action Requested These actions are usually the result of an InputMap lookup.

Enumerator

GSLC_ACTION_UNDEF Invalid action.

GSLC_ACTION_NONE No action to perform.

GSLC_ACTION_FOCUS_PREV Advance focus to the previous GUI element.

GSLC_ACTION_FOCUS_NEXT Advance focus to the next GUI element.

GSLC_ACTION_SELECT Select the currently focused GUI element.

GSLC_ACTION_SET_REL Adjust value (relative) of focused element.

GSLC ACTION SET ABS Adjust value (absolute) of focused element.

GSLC_ACTION_DEBUG Internal debug action.

9.37.3.2 enum gslc_teElemId

Element ID enumerations.

- The Element ID is the primary means for user code to reference a graphic element.
- Application code can assign arbitrary Element ID values in the range of 0...16383
- Specifying GSLC_ID_AUTO to ElemCreate() requests that GUIslice auto-assign an ID value for the Element.
 These auto-assigned values will begin at GSLC_ID_AUTO_BASE.
- · Negative Element ID values are reserved

Enumerator

GSLC_ID_USER_BASE Starting Element ID for user assignments.

GSLC_ID_NONE No Element ID has been assigned.

GSLC_ID_AUTO Auto-assigned Element ID requested.

GSLC_ID_TEMP ID for Temporary Element.

GSLC_ID_AUTO_BASE Starting Element ID to start auto-assignment (when GSLC_ID_AUTO is specified)

9.37.3.3 enum gslc_teElemInd

Element Index enumerations.

· The Element Index is used for internal purposes as an offset

Enumerator

GSLC_IND_NONE No Element Index is available.

GSLC_IND_FIRST User elements start at index 0.

9.37.3.4 enum gslc_teElemRefFlags

Element reference flags: Describes characteristics of an element.

Primarily used to support relocation of elements to Flash memory (PROGMEM)

Enumerator

GSLC_ELEMREF_NONE No element defined.

GSLC_ELEMREF_SRC_RAM Element is read/write Stored in RAM (internal element array)) Access directly.

GSLC_ELEMREF_SRC_PROG Element is read-only / const Stored in FLASH (external to element array) Access via PROGMEM.

GSLC_ELEMREF_SRC_CONST Element is read-only / const Stored in FLASH (external to element array) Access directly.

GSLC_ELEMREF_REDRAW_NONE No redraw requested.

GSLC_ELEMREF_REDRAW_FULL Full redraw of element requested.

GSLC_ELEMREF_REDRAW_INC Incremental redraw of element requested.

GSLC_ELEMREF_GLOWING Element state is glowing.

GSLC_ELEMREF_VISIBLE Element is currently shown (ie. visible)

GSLC_ELEMREF_SRC Mask for Source flags.

GSLC_ELEMREF_REDRAW_MASK Mask for Redraw flags.

9.37.3.5 enum gslc_teEventSubType

Event sub-types.

Enumerator

GSLC_EVTSUB_NONE

GSLC_EVTSUB_DRAW_NEEDED Incremental redraw (as needed)

GSLC_EVTSUB_DRAW_FORCE Force a full redraw.

9.37.3.6 enum gslc_teEventType

Event types.

Enumerator

```
GSLC_EVT_NONE No event; ignore.

GSLC_EVT_DRAW Perform redraw.

GSLC_EVT_TOUCH Track touch event.

GSLC_EVT_TICK Perform background tick handling.

GSLV_EVT_CUSTOM Custom event.
```

9.37.3.7 enum gslc_teFontId

Font ID enumerations.

- The Font ID is the primary means for user code to reference a specific font.
- Application code can assign arbitrary Font ID values in the range of 0...16383
- · Negative Font ID values are reserved

Enumerator

```
GSLC_FONT_USER_BASE Starting Font ID for user assignments. GSLC_FONT_NONE No Font ID has been assigned.
```

9.37.3.8 enum gslc_teFontRefMode

Font Reference modes.

- The Font Reference mode defines the source for the selected font. For graphics libraries that offer multiple types of fonts, this can be used to differentiate between a default font, hardware fonts, software fonts, etc.
- The encoding between the different modes is driver-specific.

Enumerator

```
GSLC_FONTREF_MODE_DEFAULT Default font mode.

GSLC_FONTREF_MODE_1 Font mode 1.

GSLC_FONTREF_MODE_2 Font mode 2.

GSLC_FONTREF_MODE_3 Font mode 3.
```

9.37.3.9 enum gslc_teFontRefType

Font Reference types.

• The Font Reference type defines the way in which a font is selected. In some device targets (such as LINUX SDL) a filename to a font file is provided. In others (such as Arduino, ESP8266), a pointer is given to a font structure (or NULL for default).

Enumerator

```
GSLC_FONTREF_FNAME Font reference is a filename (full path)

GSLC_FONTREF_PTR Font reference is a pointer to a font structure.
```

9.37.3.10 enum gslc_teGroupId

Group ID enumerations.

Enumerator

```
GSLC_GROUP_ID_USER_BASE Starting Group ID for user assignments. GSLC_GROUP_ID_NONE No Group ID has been assigned.
```

9.37.3.11 enum gslc_telmgRefFlags

Image reference flags: Describes characteristics of an image reference.

Enumerator

```
GSLC_IMGREF_NONE No image defined.

GSLC_IMGREF_SRC_FILE Image is stored in file system.

GSLC_IMGREF_SRC_SD Image is stored on SD card.

GSLC_IMGREF_SRC_RAM Image is stored in RAM.

GSLC_IMGREF_SRC_PROG Image is stored in program memory (PROGMEM)

GSLC_IMGREF_FMT_BMP24 Image format is BMP (24-bit)

GSLC_IMGREF_FMT_BMP16 Image format is BMP (16-bit RGB565)

GSLC_IMGREF_FMT_RAW1 Image format is raw monochrome (1-bit)

GSLC_IMGREF_FMT_JPG Image format is JPG (ESP32/ESP8366)

GSLC_IMGREF_SRC Mask for Source flags.

GSLC_IMGREF_FMT Mask for Format flags.
```

9.37.3.12 enum gslc_telnitStat

Status of a module's initialization.

Enumerator

```
GSLC_INITSTAT_UNDEF Module status has not been defined yet.
GSLC_INITSTAT_INACTIVE Module is not enabled.
GSLC_INITSTAT_FAIL Module is enabled but failed to init.
GSLC_INITSTAT_ACTIVE Module is enabled and initalized OK.
```

9.37.3.13 enum gslc_teInputRawEvent

Raw input event types: touch, key, GPIOs.

Enumerator

```
GSLC_INPUT_NONE No input event.
```

GSLC_INPUT_TOUCH Touch / mouse event.

GSLC_INPUT_KEY_DOWN Key press down / pin input asserted.

GSLC_INPUT_KEY_UP Key press up (released)

GSLC_INPUT_PIN_ASSERT GPIO pin input asserted (eg. set to 1 / High)

GSLC_INPUT_PIN_DEASSERT GPIO pin input deasserted (eg. set to 0 / Low)

9.37.3.14 enum gslc_tePageId

Page ID enumerations.

- The Page ID is the primary means for user code to reference a specific page of elements.
- · Application code can assign arbitrary Page ID values in the range of 0...16383
- · Negative Page ID values are reserved

Enumerator

```
GSLC_PAGE_USER_BASE Starting Page ID for user assignments. GSLC_PAGE_NONE No Page ID has been assigned.
```

9.37.3.15 enum gslc_tePin

General purpose pin/button constants.

Enumerator

```
GSLC_PIN_BTN_A Button A (short press)
```

GSLC_PIN_BTN_A_LONG Button A (long press)

GSLC_PIN_BTN_B Button B (short press)

GSLC_PIN_BTN_B_LONG Button B (long press)

GSLC_PIN_BTN_C Button C (short press)

GSLC_PIN_BTN_C_LONG Button C (long press)

GSLC_PIN_BTN_D Button D (short press)

GSLC_PIN_BTN_D_LONG Button D (long press)

GSLC_PIN_BTN_E Button E (short press)

GSLC_PIN_BTN_E_LONG Button E (long press)

GSLC_PIN_BTN_UP Button Up (short press)

GSLC_PIN_BTN_DOWN Button Down (short press)

GSLC_PIN_BTN_LEFT Button Left (short press)

GSLC_PIN_BTN_RIGHT Button Right (short press)

GSLC_PIN_BTN_SEL Button Select (short press)

9.37.3.16 enum gslc_teRedrawType

Redraw types.

Enumerator

GSLC_REDRAW_NONE No redraw requested.

GSLC_REDRAW_FULL Full redraw of element requested.

GSLC_REDRAW_INC Incremental redraw of element requested.

9.37.3.17 enum gslc_teStackPage

Define page stack.

Enumerator

GSLC_STACK_BASE Base page.

GSLC STACK CUR Current page.

GSLC_STACK_OVERLAY Overlay page (eg. popups)

GSLC_STACK__MAX Defines maximum number of pages in stack.

9.37.3.18 enum gslc_teTouch

Processed event from input raw events and actions.

Enumerator

GSLC_TOUCH_NONE No touch event active.

GSLC_TOUCH_TYPE_MASK Mask for type: coord/direct mode.

GSLC_TOUCH_COORD Event based on touch coordinate.

GSLC_TOUCH_DIRECT Event based on specific element index (keyboard/GPIO action)

GSLC_TOUCH_SUBTYPE_MASK Mask for subtype.

GSLC_TOUCH_DOWN Touch event (down)

GSLC_TOUCH_DOWN_IN Touch event (down inside tracked element)

GSLC_TOUCH_DOWN_OUT Touch event (down outside tracked element)

GSLC_TOUCH_UP Touch event (up)

GSLC_TOUCH_UP_IN Touch event (up inside tracked element)

GSLC_TOUCH_UP_OUT Touch event (up inside tracked element)

GSLC_TOUCH_MOVE Touch event (move)

GSLC_TOUCH_MOVE_IN Touch event (move inside tracked element)

GSLC_TOUCH_MOVE_OUT Touch event (move outside tracked element)

GSLC_TOUCH_FOCUS_ON Direct event focus on element.

GSLC_TOUCH_FOCUS_OFF Direct event focus away from focused element.

GSLC_TOUCH_FOCUS_SELECT Direct event select focus element.

GSLC_TOUCH_SET_REL Direct event set value (relative) on focus element.

GSLC_TOUCH_SET_ABS Direct event set value (absolute) on focus element.

9.37.3.19 enum gslc_teTxtFlags

Text reference flags: Describes the characteristics of a text string (ie.

whether internal to element or external and RAM vs Flash).)

Supported flag combinations are:

- ALLOC_NONE
- ALLOC_INT | MEM_RAM
- ALLOC_EXT | MEM_RAM
- ALLOC_EXT | MEM_PROG

Enumerator

```
GSLC_TXT_MEM_RAM Text string is in SRAM (read-write)
```

GSLC_TXT_MEM_PROG Text string is in PROGMEM (read-only)

GSLC_TXT_ALLOC_NONE No text string present.

GSLC_TXT_ALLOC_INT Text string allocated in internal element memory (GSLC_STR_LOCAL=1)

GSLC_TXT_ALLOC_EXT Text string allocated in external memory (GSLC_STR_LOCAL=0), ie. user code.

GSLC_TXT_ENC_PLAIN Encoding is plain text (LATIN1))

GSLC_TXT_ENC_UTF8 Encoding is UTF-8.

GSLC_TXT_MEM Mask for updating text memory type.

GSLC_TXT_ALLOC Mask for updating location of text string buffer allocation.

GSLC_TXT_ENC Mask for updating text encoding.

GSLC_TXT_DEFAULT

9.37.3.20 enum gslc_teTypeCore

Element type.

Enumerator

GSLC_TYPE_NONE No element type specified.

GSLC_TYPE_BKGND Background element type.

GSLC_TYPE_BTN Button element type.

GSLC_TYPE_TXT Text label element type.

GSLC_TYPE_BOX Box / frame element type.

GSLC_TYPE_LINE Line element type.

GSLC_TYPE_BASE_EXTEND Base value for extended type enumerations.

9.37.4 Variable Documentation


9.37.4.1 GSLC_CB_DEBUG_OUT g_pfDebugOut

Global debug output function.

• The user assigns this function via gslc_InitDebug()

9.38 src/GUIslice_config.h File Reference

This graph shows which files directly or indirectly include this file:

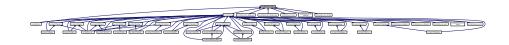

9.39 src/GUIslice_config_ard.h File Reference

Macros

- #define DRV_DISP_ADAGFX
- #define DRV_TOUCH_NONE
- #define DRV_DISP_ADAGFX_ILI9341
- #define ADAGFX PIN CS
- #define ADAGFX PIN DC
- #define ADAGFX_PIN_RST
- #define ADAGFX_PIN_SDCS
- #define ADAGFX_PIN_WR
- #define ADAGFX PIN RD
- #define ADAGFX_SPI_HW
- #define ADAGFX_PIN_MOSI
- #define ADAGFX_PIN_MISO
- #define ADAGFX_PIN_CLK
- #define GSLC ROTATE
- #define TOUCH_ROTATION_DATA
- #define TOUCH_ROTATION_SWAPXY(rotation)
- #define TOUCH_ROTATION_FLIPX(rotation)
- #define TOUCH_ROTATION_FLIPY(rotation)
- #define ADATOUCH_SWAP_XY
- #define ADATOUCH_FLIP_X
- #define ADATOUCH FLIP Y
- #define GSLC_TOUCH_MAX_EVT
- #define DEBUG_ERR
- #define GSLC_FEATURE_COMPOUND
- #define GSLC_FEATURE_XGAUGE_RADIAL
- #define GSLC_FEATURE_XGAUGE_RAMP
- #define GSLC_FEATURE_XTEXTBOX_EMBED
- #define GSLC_FEATURE_INPUT
- #define GSLC_SD_EN
- #define GSLC_SD_BUFFPIXEL
- #define GSLC_CLIP_EN
- #define GSLC_BMP_TRANS_EN
- #define GSLC_BMP_TRANS_RGB
- #define GSLC_LOCAL_STR
- #define GSLC_LOCAL_STR_LEN
- #define GSLC USE FLOAT
- #define GSLC DEV TOUCH
- #define GSLC_USE_PROGMEM

9.39.1	Macro Definition Documentation
9.39.1.1	#define ADAGFX_PIN_CLK
9.39.1.2	#define ADAGFX_PIN_CS
9.39.1.3	#define ADAGFX_PIN_DC
9.39.1.4	#define ADAGFX_PIN_MISO
9.39.1.5	#define ADAGFX_PIN_MOSI
9.39.1.6	#define ADAGFX_PIN_RD
9.39.1.7	#define ADAGFX_PIN_RST
9.39.1.8	#define ADAGFX_PIN_SDCS
9.39.1.9	#define ADAGFX_PIN_WR
9.39.1.10	#define ADAGFX_SPI_HW
9.39.1.11	#define ADATOUCH_FLIP_X
9.39.1.12	#define ADATOUCH_FLIP_Y
9.39.1.13	#define ADATOUCH_SWAP_XY
9.39.1.14	#define DEBUG_ERR
9.39.1.15	#define DRV_DISP_ADAGFX
9.39.1.16	#define DRV_DISP_ADAGFX_ILI9341
9.39.1.17	#define DRV_TOUCH_NONE
9.39.1.18	#define GSLC_BMP_TRANS_EN
9.39.1.19	#define GSLC_BMP_TRANS_RGB
9.39.1.20	#define GSLC_CLIP_EN
9.39.1.21	#define GSLC_DEV_TOUCH
9.39.1.22	#define GSLC_FEATURE_COMPOUND

9.39.1.23	#define GSLC_FEATURE_INPUT
9.39.1.24	#define GSLC_FEATURE_XGAUGE_RADIAL
9.39.1.25	#define GSLC_FEATURE_XGAUGE_RAMP
9.39.1.26	#define GSLC_FEATURE_XTEXTBOX_EMBED
9.39.1.27	#define GSLC_LOCAL_STR
9.39.1.28	#define GSLC_LOCAL_STR_LEN
9.39.1.29	#define GSLC_ROTATE
9.39.1.30	#define GSLC_SD_BUFFPIXEL
9.39.1.31	#define GSLC_SD_EN
9.39.1.32	#define GSLC_TOUCH_MAX_EVT
9.39.1.33	#define GSLC_USE_FLOAT
9.39.1.34	#define GSLC_USE_PROGMEM
9.39.1.35	#define TOUCH_ROTATION_DATA
9.39.1.36	#define TOUCH_ROTATION_FLIPX(rotation)
9.39.1.37	#define TOUCH_ROTATION_FLIPY(rotation)

9.40 src/GUIslice_config_linux.h File Reference

9.39.1.38 #define TOUCH_ROTATION_SWAPXY(rotation)

Macros

- #define DRV_DISP_SDL1
- #define DRV_TOUCH_TSLIB
- #define GSLC_FEATURE_COMPOUND
- #define GSLC_FEATURE_XGAUGE_RADIAL
- #define GSLC_FEATURE_XGAUGE_RAMP
- #define GSLC FEATURE XTEXTBOX EMBED
- #define GSLC_FEATURE_INPUT
- #define DEBUG_ERR
- #define GSLC_DEV_FB
- #define GSLC_DEV_TOUCH
- #define GSLC_DEV_VID_DRV
- #define DRV_SDL_FIX_START
- #define DRV SDL MOUSE SHOW
- #define GSLC_LOCAL_STR
- #define GSLC_USE_FLOAT
- #define ADATOUCH SWAP XY
- #define ADATOUCH FLIP X
- #define ADATOUCH_FLIP_Y
- #define GSLC_TOUCH_MAX_EVT
- #define GSLC LOCAL STR LEN
- #define GSLC_BMP_TRANS_EN
- #define GSLC_BMP_TRANS_RGB
- #define GSLC_USE_PROGMEM

9.40.1	Macro Definition Documentation
9.40.1.1	#define ADATOUCH_FLIP_X
9.40.1.2	#define ADATOUCH_FLIP_Y
9.40.1.3	#define ADATOUCH_SWAP_XY
9.40.1.4	#define DEBUG_ERR
9.40.1.5	#define DRV_DISP_SDL1
9.40.1.6	#define DRV_SDL_FIX_START
9.40.1.7	#define DRV_SDL_MOUSE_SHOW
9.40.1.8	#define DRV_TOUCH_TSLIB
9.40.1.9	#define GSLC_BMP_TRANS_EN
9.40.1.10	#define GSLC_BMP_TRANS_RGB
9.40.1.11	#define GSLC_DEV_FB
9.40.1.12	#define GSLC_DEV_TOUCH
9.40.1.13	#define GSLC_DEV_VID_DRV
9.40.1.14	#define GSLC_FEATURE_COMPOUND
9.40.1.15	#define GSLC_FEATURE_INPUT
9.40.1.16	#define GSLC_FEATURE_XGAUGE_RADIAL
9.40.1.17	#define GSLC_FEATURE_XGAUGE_RAMP
9.40.1.18	#define GSLC_FEATURE_XTEXTBOX_EMBED
9.40.1.19	#define GSLC_LOCAL_STR
9.40.1.20	#define GSLC_LOCAL_STR_LEN
9.40.1.21	#define GSLC_TOUCH_MAX_EVT
9.40.1.22	#define GSLC_USE_FLOAT
9.40.1.23	#define GSLC_USE_PROGMEM


9.41 src/GUIslice_drv.h File Reference

This graph shows which files directly or indirectly include this file:



9.42 src/GUIslice_drv_adagfx.cpp File Reference


#include "GUIslice_config.h"
Include dependency graph for GUIslice_drv_adagfx.cpp:

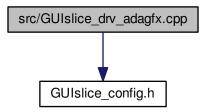

9.43 src/GUIslice_drv_adagfx.h File Reference

GUIslice library (driver layer for Adafruit-GFX)

#include "GUIslice.h"
#include <stdio.h>
Include dependency graph for GUIslice_drv_adagfx.h:

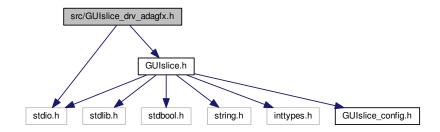

Data Structures

struct gslc_tsDriver

Macros

- #define DRV_HAS_DRAW_POINT Support gslc_DrvDrawPoint()
- #define DRV_HAS_DRAW_POINTS
 Support gslc_DrvDrawPoints()

• #define DRV_HAS_DRAW_LINE

Support gslc_DrvDrawLine()

• #define DRV HAS DRAW RECT FRAME

Support gslc_DrvDrawFrameRect()

• #define DRV_HAS_DRAW_RECT_FILL

Support gslc_DrvDrawFillRect()

• #define DRV_HAS_DRAW_RECT_ROUND_FRAME

Support gslc_DrvDrawFrameRoundRect()

#define DRV_HAS_DRAW_RECT_ROUND_FILL

Support gslc_DrvDrawFillRoundRect()

• #define DRV HAS DRAW CIRCLE FRAME

Support gslc_DrvDrawFrameCircle()

#define DRV HAS DRAW CIRCLE FILL

Support gslc_DrvDrawFillCircle()

#define DRV HAS DRAW TRI FRAME

Support gslc_DrvDrawFrameTriangle()

• #define DRV_HAS_DRAW_TRI_FILL

Support gslc_DrvDrawFillTriangle()

• #define DRV HAS DRAW TEXT

Support gslc_DrvDrawTxt()

• #define DRV_HAS_DRAW_BMP_MEM

Support gslc_DrvDrawBmp24FromMem()

• #define DRV_OVERRIDE_TXT_ALIGN

Driver provides text alignment.

Functions

bool gslc_DrvInit (gslc_tsGui *pGui)

Initialize the SDL library.

bool gslc DrvInitTs (gslc tsGui *pGui, const char *acDev)

Perform any touchscreen-specific initialization.

• void gslc_DrvDestruct (gslc_tsGui *pGui)

Free up any members associated with the driver.

const char * gslc_DrvGetNameDisp (gslc_tsGui *pGui)

Get the display driver name.

• const char * gslc_DrvGetNameTouch (gslc_tsGui *pGui)

Get the touch driver name.

void * gslc_DrvGetDriverDisp (gslc_tsGui *pGui)

Get the native display driver instance.

void * gslc DrvGetDriverTouch (gslc tsGui *pGui)

Get the native touch driver instance.

void * gslc_DrvLoadImage (gslc_tsGui *pGui, gslc_tsImgRef sImgRef)

Load a bitmap (*.bmp) and create a new image resource.

• bool gslc DrvSetBkgndImage (gslc tsGui *pGui, gslc tsImgRef sImgRef)

Configure the background to use a bitmap image.

bool gslc_DrvSetBkgndColor (gslc_tsGui *pGui, gslc_tsColor nCol)

Configure the background to use a solid color.

bool gslc DrvSetElemImageNorm (gslc tsGui *pGui, gslc tsElem *pElem, gslc tsImgRef sImgRef)

Set an element's normal-state image.

• bool gslc_DrvSetElemImageGlow (gslc_tsGui *pGui, gslc_tsElem *pElem, gslc_tsImgRef sImgRef)

Set an element's glow-state image.

void gslc_DrvImageDestruct (void *pvImg)

Release an image surface.

bool gslc_DrvSetClipRect (gslc_tsGui *pGui, gslc_tsRect *pRect)

Set the clipping rectangle for future drawing updates.

 $\bullet \ \ const \ void \ * gslc_DrvFontAdd \ (gslc_teFontRefType \ eFontRefType, const \ void \ * pvFontRef, \ uint16_t \ nFontSz)$

Load a font from a resource and return pointer to it.

void gslc DrvFontsDestruct (gslc tsGui *pGui)

Release all fonts defined in the GUI.

• bool gslc_DrvGetTxtSize (gslc_tsGui *pGui, gslc_tsFont *pFont, const char *pStr, gslc_teTxtFlags eTxt← Flags, int16_t *pnTxtX, int16_t *pnTxtY, uint16_t *pnTxtSzW, uint16_t *pnTxtSzH)

Get the extent (width and height) of a text string.

bool gslc_DrvDrawTxt (gslc_tsGui *pGui, int16_t nTxtX, int16_t nTxtY, gslc_tsFont *pFont, const char *pStr, gslc_teTxtFlags eTxtFlags, gslc_tsColor colTxt, gslc_tsColor colBg)

Draw a text string at the given coordinate.

void gslc_DrvPageFlipNow (gslc_tsGui *pGui)

Force a page flip to occur.

• bool gslc_DrvDrawPoint (gslc_tsGui *pGui, int16_t nX, int16_t nY, gslc_tsColor nCol)

Draw a point

bool gslc_DrvDrawPoints (gslc_tsGui *pGui, gslc_tsPt *asPt, uint16_t nNumPt, gslc_tsColor nCol)

Draw a point.

• bool gslc_DrvDrawFrameRect (gslc_tsGui *pGui, gslc_tsRect rRect, gslc_tsColor nCol)

Draw a framed rectangle.

bool gslc_DrvDrawFillRect (gslc_tsGui *pGui, gslc_tsRect rRect, gslc_tsColor nCol)

Draw a filled rectangle.

bool gslc_DrvDrawFrameRoundRect (gslc_tsGui *pGui, gslc_tsRect rRect, int16_t nRadius, gslc_tsColor n←
 Col)

Draw a framed rounded rectangle.

- bool gslc_DrvDrawFillRoundRect (gslc_tsGui *pGui, gslc_tsRect rRect, int16_t nRadius, gslc_tsColor nCol)

 Draw a filled rounded rectangle.
- bool gslc_DrvDrawLine (gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, gslc_tsColor nCol)

Draw a line.

• bool gslc_DrvDrawFrameCircle (gslc_tsGui *pGui, int16_t nMidX, int16_t nMidY, uint16_t nRadius, gslc_ts

Color nCol)

Draw a framed circle.

 bool gslc_DrvDrawFillCircle (gslc_tsGui *pGui, int16_t nMidX, int16_t nMidY, uint16_t nRadius, gslc_tsColor nCol)

Draw a filled circle.

bool gslc_DrvDrawFrameTriangle (gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, int16_t nX2, int16_t nY2, gslc_tsColor nCol)

Draw a framed triangle.

• bool gslc_DrvDrawFillTriangle (gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, int16_t nX2, int16_t nY2, gslc_tsColor nCol)

Draw a filled triangle.

bool gslc_DrvDrawImage (gslc_tsGui *pGui, int16_t nDstX, int16_t nDstY, gslc_tsImgRef sImgRef)

Copy all of source image to destination screen at specified coordinate.

• void gslc_DrvDrawMonoFromMem (gslc_tsGui *pGui, int16_t nDstX, int16_t nDstY, const unsigned char *p⇔ Bitmap, bool bProgMem)

Draw a monochrome bitmap from a memory array.

 void gslc_DrvDrawBmp24FromMem (gslc_tsGui *pGui, int16_t nDstX, int16_t nDstY, const unsigned char *pBitmap, bool bProgMem)

Draw a color 24-bit depth bitmap from a memory array.

void gslc_DrvDrawBkgnd (gslc_tsGui *pGui)

Copy the background image to destination screen.

• bool gslc_DrvInitTouch (gslc_tsGui *pGui, const char *acDev)

Perform any touchscreen-specific initialization.

bool gslc_DrvGetTouch (gslc_tsGui *pGui, int16_t *pnX, int16_t *pnY, uint16_t *pnPress, gslc_teInputRaw←
 Event *peInputEvent, int16_t *pnInputVal)

Get the last touch event from the internal touch handler.

• bool gslc_DrvRotate (gslc_tsGui *pGui, uint8_t nRotation)

Change rotation, automatically adapt touchscreen axes swap/flip.

uint16 t gslc DrvAdaptColorToRaw (gslc tsColor nCol)

9.43.1 Detailed Description

GUIslice library (driver layer for Adafruit-GFX)

9.43.2 Macro Definition Documentation

9.43.2.1 #define DRV_HAS_DRAW_BMP_MEM

Support gslc_DrvDrawBmp24FromMem()

9.43.2.2 #define DRV_HAS_DRAW_CIRCLE_FILL

Support gslc_DrvDrawFillCircle()

 $9.43.2.3 \quad \hbox{\#define DRV_HAS_DRAW_CIRCLE_FRAME}$

Support gslc DrvDrawFrameCircle()

9.43.2.4 #define DRV_HAS_DRAW_LINE

Support gslc_DrvDrawLine()

9.43.2.5 #define DRV_HAS_DRAW_POINT

Support gslc_DrvDrawPoint()

9.43.2.6 #define DRV_HAS_DRAW_POINTS

Support gslc_DrvDrawPoints()

```
9.43.2.7 #define DRV_HAS_DRAW_RECT_FILL
Support gslc_DrvDrawFillRect()
9.43.2.8 #define DRV_HAS_DRAW_RECT_FRAME
Support gslc_DrvDrawFrameRect()
9.43.2.9 #define DRV_HAS_DRAW_RECT_ROUND_FILL
Support gslc_DrvDrawFillRoundRect()
9.43.2.10 #define DRV_HAS_DRAW_RECT_ROUND_FRAME
Support gslc_DrvDrawFrameRoundRect()
9.43.2.11 #define DRV_HAS_DRAW_TEXT
Support gslc_DrvDrawTxt()
9.43.2.12 #define DRV_HAS_DRAW_TRI_FILL
Support gslc_DrvDrawFillTriangle()
9.43.2.13 #define DRV_HAS_DRAW_TRI_FRAME
Support gslc_DrvDrawFrameTriangle()
9.43.2.14 #define DRV_OVERRIDE_TXT_ALIGN
Driver provides text alignment.
9.43.3 Function Documentation
9.43.3.1 uint16_t gslc_DrvAdaptColorToRaw ( gslc_tsColor nCol )
9.43.3.2 void gslc_DrvDestruct ( gslc_tsGui * pGui )
Free up any members associated with the driver.
    • Eg. renderers, windows, background surfaces, etc.
```

Parameters

in <i>pGui</i>	Pointer to GUI
----------------	----------------

Returns

none

9.43.3.3 void gslc_DrvDrawBkgnd (gslc_tsGui * pGui)

Copy the background image to destination screen.

Parameters

in <i>pGui</i>	Pointer to GUI
----------------	----------------

Returns

true if success, false if fail

9.43.3.4 void gslc_DrvDrawBmp24FromMem (gslc_tsGui * pGui, int16_t nDstX, int16_t nDstY, const unsigned char * pBitmap, bool bProgMem)

Draw a color 24-bit depth bitmap from a memory array.

- Note that users must convert images from their native format (eg. BMP, PNG, etc.) into a C array. Please refer to the following guide for details: https://github.com/ImpulseAdventure/GU&Islice/wiki/Display-Images-from-FLASH
- The converted file (c array) can then be included in the sketch.

Parameters

in	pGui	Pointer to GUI
in	nDstX	X coord for copy
in	nDstY	Y coord for copy
in	pBitmap	Pointer to bitmap buffer
in	bProgMem	Bitmap is stored in Flash if true, RAM otherwise

Returns

none

9.43.3.5 bool gslc_DrvDrawFillCircle (gslc_tsGui * pGui, int16_t nMidX, int16_t nMidY, uint16_t nRadius, gslc_tsColor nCol)

Draw a filled circle.

Parameters

in	pGui	Pointer to GUI
in	nMidX	Center of circle (X coordinate)
in	nMidY	Center of circle (Y coordinate)
in	nRadius	Radius of circle
in	nCol	Color RGB value to fill

Returns

true if success, false if error

9.43.3.6 bool gslc_DrvDrawFillRect ($gslc_tsGui*pGui, gslc_tsRect_rRect, gslc_tsColor_nCol$)

Draw a filled rectangle.

Parameters

	in	pGui	Pointer to GUI
	in	rRect	Rectangular region to fill
ĺ	in	nCol	Color RGB value to fill

Returns

true if success, false if error

 $9.43.3.7 \quad bool\ gslc_DrvDrawFillRoundRect\ (\ gslc_tsGui*pGui,\ gslc_tsRect\ rRect,\ int16_t\ nRadius,\ gslc_tsColor\ nCol\)$

Draw a filled rounded rectangle.

Parameters

in	pGui	Pointer to GUI
in	rRect	Rectangular region to fill
in	nRadius	Radius for rounded corners
in	nCol	Color RGB value to fill

Returns

true if success, false if error

9.43.3.8 bool gslc_DrvDrawFillTriangle (gslc_tsGui * pGui, int16_t nX0, int16_t nY0, int16_t nX1, int

Draw a filled triangle.

Parameters

in	pGui	Pointer to GUI
in	nX0	X Coordinate #1
in	nY0	Y Coordinate #1
in	nX1	X Coordinate #2
in	nY1	Y Coordinate #2
in	nX2	X Coordinate #3
in	nY2	Y Coordinate #3
in	nCol	Color RGB value to fill

Returns

true if success, false if error

9.43.3.9 bool gslc_DrvDrawFrameCircle (gslc_tsGui * pGui, int16_t nMidX, int16_t nMidY, uint16_t nRadius, gslc_tsColor nCol)

Draw a framed circle.

Parameters

in	pGui	Pointer to GUI
in	nMidX	Center of circle (X coordinate)
in	nMidY	Center of circle (Y coordinate)
in	nRadius	Radius of circle
in	nCol	Color RGB value to frame

Returns

true if success, false if error

9.43.3.10 bool gslc_DrvDrawFrameRect ($gslc_tsGui*pGui*, gslc_tsRect*, gslc_tsColor*, gslc_tsC$

Draw a framed rectangle.

Parameters

in	pGui	Pointer to GUI
in	rRect	Rectangular region to frame
in	nCol	Color RGB value to frame

Returns

true if success, false if error

9.43.3.11 bool gslc_DrvDrawFrameRoundRect (gslc_tsGui * pGui, gslc_tsRect rRect, int16_t nRadius, gslc_tsColor nCol)

Draw a framed rounded rectangle.

Parameters

in	pGui	Pointer to GUI
in	rRect	Rectangular region to frame
in	nRadius	Radius for rounded corners
in	nCol	Color RGB value to frame

Returns

true if success, false if error

9.43.3.12 bool gslc_DrvDrawFrameTriangle (gslc_tsGui * pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, int16_t nX2, int16_t nY2, gslc_tsColor nCol)

Draw a framed triangle.

Parameters

in	pGui	Pointer to GUI
in	nX0	X Coordinate #1
in	nY0	Y Coordinate #1
in	nX1	X Coordinate #2
in	nY1	Y Coordinate #2
in	nX2	X Coordinate #3
in	nY2	Y Coordinate #3
in	nCol	Color RGB value to frame

Returns

true if success, false if error

9.43.3.13 bool gslc_DrvDrawlmage ($gslc_tsGui*pGui$, int16_t nDstX, int16_t nDstX, gslc_tslmgRef slmgRef)

Copy all of source image to destination screen at specified coordinate.

in	pGui	Pointer to GUI
in	nDstX	Destination X coord for copy
in	nDstY	Destination Y coord for copy
in	sImgRef	Image reference

Returns

true if success, false if fail

9.43.3.14 bool gslc_DrvDrawLine (gslc_tsGui * pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, gslc_tsColor nCol)

Draw a line.

Parameters

in	pGui	Pointer to GUI	
in	nX0	Line start (X coordinate)	
in	nY0	Line start (Y coordinate)	
in	nX1	Line finish (X coordinate)	
in	nY1	Line finish (Y coordinate)	
in	nCol	Color RGB value to draw	

Returns

true if success, false if error

9.43.3.15 void gslc_DrvDrawMonoFromMem (gslc_tsGui * pGui, int16_t nDstX, int16_t nDstY, const unsigned char * pBitmap, bool bProgMem)

Draw a monochrome bitmap from a memory array.

• Draw from the bitmap buffer using the foreground color defined in the header (unset bits are transparent)

Parameters

in	pGui	Pointer to GUI
in	nDstX	Destination X coord for copy
in	nDstY	Destination Y coord for copy
in	pBitmap	Pointer to bitmap buffer
in	bProgMem	Bitmap is stored in Flash if true, RAM otherwise

Returns

none

9.43.3.16 bool gslc_DrvDrawPoint (gslc_tsGui * pGui, int16_t nX, int16_t nY, gslc_tsColor nCol)

Draw a point.

Parameters

in	pGui	Pointer to GUI
in	nΧ	X coordinate of point
in	nΥ	Y coordinate of point
in	nCol	Color RGB value to draw

Returns

true if success, false if error

9.43.3.17 bool gslc_DrvDrawPoints ($gslc_tsGui*pGui*pGui*, gslc_tsPt*asPt$, $uint16_t*nNumPt$, $gslc_tsColor*nCol*$)

Draw a point.

Parameters

in	pGui	Pointer to GUI
in	asPt	Array of points to draw
in	n⊷	Number of points in array
	NumPt	
in	nCol	Color RGB value to draw

Returns

true if success, false if error

9.43.3.18 bool gslc_DrvDrawTxt (gslc_tsGui * pGui, int16_t nTxtX, int16_t nTxtY, gslc_tsFont * pFont, const char * pStr, gslc_teTxtFlags eTxtFlags, gslc_tsColor colTxt, gslc_tsColor colBg)

Draw a text string at the given coordinate.

Parameters

in	pGui	Pointer to GUI
in	nTxtX	X coordinate of top-left text string
in	nTxtY	Y coordinate of top-left text string
in	pFont	Ptr to Font
in	pStr	String to display
in	eTxtFlags	Flags associated with text string
in	colTxt	Color to draw text
in	colBg	unused in ADAGFX, defaults to black

Returns

true if success, false if failure

9.43.3.19 const void * gslc_DrvFontAdd (gslc_teFontRefType eFontRefType, const void * pvFontRef, uint16_t nFontSz)

Load a font from a resource and return pointer to it.

Parameters

in	eFontRefType	Font reference type (GSLC_FONTREF_PTR for Arduino)
in	pvFontRef	Font reference pointer (Pointer to the GFXFont array)
in	nFontSz	Typeface size to use

Returns

Void ptr to driver-specific font if load was successful, NULL otherwise

9.43.3.20 void gslc_DrvFontsDestruct (gslc_tsGui * pGui)

Release all fonts defined in the GUI.

Parameters

in	pGui	Pointer to GUI
----	------	----------------

Returns

none

9.43.3.21 void* gslc_DrvGetDriverDisp (gslc_tsGui * pGui)

Get the native display driver instance.

• This can be useful to access special commands available in the selected driver.

Parameters

in	pGui	Pointer to GUI
----	------	----------------

Returns

Void pointer to the display driver instance. This pointer should be typecast to the particular driver being used. If no driver was created then this function will return NULL.

9.43.3.22 void* gslc_DrvGetDriverTouch (gslc_tsGui * pGui)

Get the native touch driver instance.

This can be useful to access special commands available in the selected driver.	

Parameters

in <i>pGui</i>	Pointer to GUI
----------------	----------------

Returns

Void pointer to the touch driver instance. This pointer should be typecast to the particular driver being used. If no driver was created then this function will return NULL.

9.43.3.23 const char* gslc_DrvGetNameDisp (gslc_tsGui * pGui)

Get the display driver name.

Parameters

in <i>pGui</i>	Pointer to GUI
----------------	----------------

Returns

String containing driver name

9.43.3.24 const char* gslc_DrvGetNameTouch ($gslc_tsGui*pGui$)

Get the touch driver name.

Parameters

in	nGui	Pointer to GUI
111	pGui	Pointer to Got

Returns

String containing driver name

9.43.3.25 bool gslc_DrvGetTouch (gslc_tsGui * pGui, int16_t * pnX, int16_t * pnY, uint16_t * pnPress, gslc_teInputRawEvent * peInputEvent, int16_t * pnInputVal)

Get the last touch event from the internal touch handler.

in	pGui	Pointer to GUI
out	pnX	Ptr to X coordinate of last touch event
out	pnY	Ptr to Y coordinate of last touch event
out	pnPress	Ptr to Pressure level of last touch event (0 for none, 1 for touch)
out	peInputEvent	Indication of event type
out	pnInputVal	Additional data for event type

Returns

true if an event was detected or false otherwise

9.43.3.26 bool gslc_DrvGetTxtSize (gslc_tsGui * pGui, gslc_tsFont * pFont, const char * pStr, gslc_teTxtFlags eTxtFlags, int16_t * pnTxtX, int16_t * pnTxtY, uint16_t * pnTxtSzW, uint16_t * pnTxtSzW)

Get the extent (width and height) of a text string.

Parameters

in	pGui	Pointer to GUI
in	pFont	Ptr to Font structure
in	pStr	String to display
in	eTxtFlags	Flags associated with text string
out	pnTxtX	Ptr to offset X of text
out	pnTxtY	Ptr to offset Y of text
out	pnTxtSzW	Ptr to width of text
out	pnTxtSzH	Ptr to height of text

Returns

true if success, false if failure

9.43.3.27 void gslc_DrvImageDestruct (void * pvImg)

Release an image surface.

Parameters

in	pvlmg	Void ptr to image
----	-------	-------------------

Returns

none

9.43.3.28 bool gslc_DrvInit ($gslc_tsGui * pGui$)

Initialize the SDL library.

- Performs clean startup workaround (if enabled)
- · Configures video mode
- · Initializes font support

PRE:

• The environment variables should be configured before calling gslc_DrvInit(). This can be done with gslc_← DrvInitEnv() or manually in user function.

Parameters

In paul Pointer to Got	in	pGui	Pointer to GUI
----------------------------	----	------	----------------

Returns

true if success, false if fail

9.43.3.29 bool gslc_DrvInitTouch (gslc_tsGui * pGui, const char * acDev)

Perform any touchscreen-specific initialization.

Parameters

in	pGui	Pointer to GUI	
in	acDev	Device path to touchscreen eg. "/dev/input/touchscreen"	

Returns

true if successful

9.43.3.30 bool gslc_DrvInitTs (gslc_tsGui * pGui, const char * acDev)

Perform any touchscreen-specific initialization.

Parameters

in	pGui	Pointer to GUI
in	acDev	Device path to touchscreen eg. "/dev/input/touchscreen"

Returns

true if successful

9.43.3.31 void* gslc_DrvLoadlmage (gslc_tsGui * pGui, gslc_tsImgRef slmgRef)

Load a bitmap (*.bmp) and create a new image resource.

 $Transparency is enabled by GSLC_BMP_TRANS_EN through use of color (GSLC_BMP_TRANS_RGB).$

in	pGui	Pointer to GUI
in	sImgRef	Image reference

Returns

Image pointer (surface/texture) or NULL if error

9.43.3.32 void gslc_DrvPageFlipNow (gslc_tsGui * pGui)

Force a page flip to occur.

This generally copies active screen surface to the display.

Parameters

in	pGui	Pointer to GUI
----	------	----------------

Returns

none

9.43.3.33 bool gslc_DrvRotate (gslc_tsGui * pGui, uint8_t nRotation)

Change rotation, automatically adapt touchscreen axes swap/flip.

Parameters

in	pGui	Pointer to GUI
in	nRotation	Screen Rotation value (0, 1, 2 or 3)

Returns

true if successful

9.43.3.34 bool gslc_DrvSetBkgndColor ($gslc_tsGui*pGui, gslc_tsColor nCol$)

Configure the background to use a solid color.

• The background is used when redrawing the entire page

in	1	pGui	Pointer to GUI
in	1	nCol	RGB Color to use

Returns

true if success, false if fail

9.43.3.35 bool gslc_DrvSetBkgndlmage (gslc_tsGui * pGui, gslc_tsImgRef slmgRef)

Configure the background to use a bitmap image.

• The background is used when redrawing the entire page

Parameters

in	pGui	Pointer to GUI
in	sImgRef	Image reference

Returns

true if success, false if fail

9.43.3.36 bool gslc_DrvSetClipRect ($gslc_tsGui*pGui, gslc_tsRect*pRect$)

Set the clipping rectangle for future drawing updates.

Parameters

	in	pGui	Pointer to GUI
ſ	in	pRect	Rectangular region to constrain edits

Returns

true if success, false if error

9.43.3.37 bool gslc_DrvSetElemImageGlow ($gslc_tsGui*pGui*pGui*, gslc_tsElem*pElem*, gslc_tsImgRef* sImgRef*)$

Set an element's glow-state image.

in	pGui	Pointer to GUI
in	pElem	Pointer to Element to update
in	sImgRef	Image reference

Returns

true if success, false if error

9.43.3.38 bool gslc_brvSetElemImageNorm (gslc_tsGui * pGui, gslc_tsElem * pElem, gslc_tsImgRef sImgRef)

Set an element's normal-state image.

Parameters


in	pGui	Pointer to GUI
in	pElem	Pointer to Element to update
in	sImgRef	Image reference

Returns

true if success, false if error

9.44 src/GUIslice_drv_m5stack.cpp File Reference

#include "GUIslice_config.h"
Include dependency graph for GUIslice_drv_m5stack.cpp:

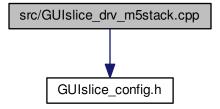


9.45 src/GUIslice_drv_m5stack.h File Reference

GUIslice library (driver layer for M5stack)

#include "GUIslice.h"
#include <stdio.h>

Include dependency graph for GUIslice_drv_m5stack.h:

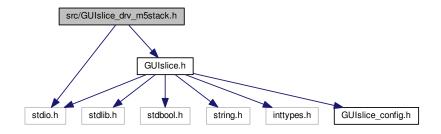

Data Structures

· struct gslc_tsDriver

Macros

• #define DRV_HAS_DRAW_POINT

Support gslc_DrvDrawPoint()

• #define DRV HAS DRAW POINTS

Support gslc_DrvDrawPoints()

#define DRV_HAS_DRAW_LINE

Support gslc_DrvDrawLine()

• #define DRV_HAS_DRAW_RECT_FRAME

Support gslc_DrvDrawFrameRect()

• #define DRV_HAS_DRAW_RECT_FILL

Support gslc_DrvDrawFillRect()

• #define DRV_HAS_DRAW_RECT_ROUND_FRAME

Support gslc_DrvDrawFrameRoundRect()

• #define DRV_HAS_DRAW_RECT_ROUND_FILL

Support gslc_DrvDrawFillRoundRect()

• #define DRV_HAS_DRAW_CIRCLE_FRAME

Support gslc_DrvDrawFrameCircle()

• #define DRV_HAS_DRAW_CIRCLE_FILL

Support gslc_DrvDrawFillCircle()

• #define DRV_HAS_DRAW_TRI_FRAME

Support gslc_DrvDrawFrameTriangle()

• #define DRV_HAS_DRAW_TRI_FILL

Support gslc_DrvDrawFillTriangle()

• #define DRV HAS DRAW TEXT

Support gslc_DrvDrawTxt()

• #define DRV_HAS_DRAW_BMP_MEM

Support gslc_DrvDrawBmp24FromMem()

• #define DRV_OVERRIDE_TXT_ALIGN

Driver provides text alignment.

Functions

bool gslc_DrvInit (gslc_tsGui *pGui)

Initialize the SDL library.

bool gslc_DrvInitTs (gslc_tsGui *pGui, const char *acDev)

Perform any touchscreen-specific initialization.

void gslc_DrvDestruct (gslc_tsGui *pGui)

Free up any members associated with the driver.

const char * gslc_DrvGetNameDisp (gslc_tsGui *pGui)

Get the display driver name.

const char * gslc DrvGetNameTouch (gslc tsGui *pGui)

Get the touch driver name.

void * gslc_DrvGetDriverDisp (gslc_tsGui *pGui)

Get the native display driver instance.

void * gslc_DrvGetDriverTouch (gslc_tsGui *pGui)

Get the native touch driver instance.

void * gslc_DrvLoadImage (gslc_tsGui *pGui, gslc_tsImgRef sImgRef)

Load a bitmap (*.bmp) and create a new image resource.

bool gslc_DrvSetBkgndImage (gslc_tsGui *pGui, gslc_tsImgRef sImgRef)

Configure the background to use a bitmap image.

bool gslc_DrvSetBkgndColor (gslc_tsGui *pGui, gslc_tsColor nCol)

Configure the background to use a solid color.

• bool gslc_DrvSetElemImageNorm (gslc_tsGui *pGui, gslc_tsElem *pElem, gslc_tsImgRef sImgRef)

Set an element's normal-state image.

bool gslc_DrvSetElemImageGlow (gslc_tsGui *pGui, gslc_tsElem *pElem, gslc_tsImgRef sImgRef)

Set an element's glow-state image.

void gslc_DrvImageDestruct (void *pvImg)

Release an image surface.

bool gslc_DrvSetClipRect (gslc_tsGui *pGui, gslc_tsRect *pRect)

Set the clipping rectangle for future drawing updates.

const void * gslc_DrvFontAdd (gslc_teFontRefType eFontRefType, const void *pvFontRef, uint16_t nFontSz)

Load a font from a resource and return pointer to it.

• void gslc DrvFontsDestruct (gslc tsGui *pGui)

Release all fonts defined in the GUI.

bool gslc_DrvGetTxtSize (gslc_tsGui *pGui, gslc_tsFont *pFont, const char *pStr, gslc_teTxtFlags eTxt←
 Flags, int16_t *pnTxtX, int16_t *pnTxtY, uint16_t *pnTxtSzW, uint16_t *pnTxtSzH)

Get the extent (width and height) of a text string.

bool gslc_DrvDrawTxt (gslc_tsGui *pGui, int16_t nTxtX, int16_t nTxtY, gslc_tsFont *pFont, const char *pStr, gslc_teTxtFlags eTxtFlags, gslc_tsColor colTxt, gslc_tsColor colBg)

Draw a text string at the given coordinate.

bool gslc_DrvDrawTxtAlign (gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, int8_t e
 TxtAlign, gslc_tsFont *pFont, const char *pStr, gslc_teTxtFlags eTxtFlags, gslc_tsColor colTxt, gslc_tsColor colBg)

Draw a text string in a bounding box using the specified alignment.

void gslc_DrvPageFlipNow (gslc_tsGui *pGui)

Force a page flip to occur.

• bool gslc_DrvDrawPoint (gslc_tsGui *pGui, int16_t nX, int16_t nY, gslc_tsColor nCol)

Draw a point.

bool gslc_DrvDrawPoints (gslc_tsGui *pGui, gslc_tsPt *asPt, uint16_t nNumPt, gslc_tsColor nCol)

Draw a point

• bool gslc_DrvDrawFrameRect (gslc_tsGui *pGui, gslc_tsRect rRect, gslc_tsColor nCol)

Draw a framed rectangle.

bool gslc DrvDrawFillRect (gslc tsGui *pGui, gslc tsRect rRect, gslc tsColor nCol)

Draw a filled rectangle.

bool gslc_DrvDrawFrameRoundRect (gslc_tsGui *pGui, gslc_tsRect rRect, int16_t nRadius, gslc_tsColor n←
 Col)

Draw a framed rounded rectangle.

- bool gslc_DrvDrawFillRoundRect (gslc_tsGui *pGui, gslc_tsRect rRect, int16_t nRadius, gslc_tsColor nCol)
 Draw a filled rounded rectangle.
- bool gslc_DrvDrawLine (gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, gslc_tsColor nCol)

Draw a line.

bool gslc_DrvDrawFrameCircle (gslc_tsGui *pGui, int16_t nMidX, int16_t nMidY, uint16_t nRadius, gslc_ts
 — Color nCol)

Draw a framed circle.

bool gslc_DrvDrawFillCircle (gslc_tsGui *pGui, int16_t nMidX, int16_t nMidY, uint16_t nRadius, gslc_tsColor nCol)

Draw a filled circle.

• bool gslc_DrvDrawFrameTriangle (gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, int16_t nX2, int16_t nY2, gslc_tsColor nCol)

Draw a framed triangle.

bool gslc_DrvDrawFillTriangle (gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, int16_t nX2, int16_t nY2, gslc_tsColor nCol)

Draw a filled triangle.

• bool gslc_DrvDrawImage (gslc_tsGui *pGui, int16_t nDstX, int16_t nDstY, gslc_tsImgRef sImgRef)

Copy all of source image to destination screen at specified coordinate.

void gslc_DrvDrawMonoFromMem (gslc_tsGui *pGui, int16_t nDstX, int16_t nDstY, const unsigned char *p←
 Bitmap, bool bProgMem)

Draw a monochrome bitmap from a memory array.

 void gslc_DrvDrawBmp24FromMem (gslc_tsGui *pGui, int16_t nDstX, int16_t nDstY, const unsigned char *pBitmap, bool bProgMem)

Draw a color 24-bit depth bitmap from a memory array.

void gslc_DrvDrawBkgnd (gslc_tsGui *pGui)

Copy the background image to destination screen.

bool gslc DrvRotate (gslc tsGui *pGui, uint8 t nRotation)

Change rotation, automatically adapt touchscreen axes swap/flip.

uint16_t gslc_DrvAdaptColorToRaw (gslc_tsColor nCol)

Variables

- const char GSLC_PMEM ERRSTR_NULL []
- const char GSLC_PMEM ERRSTR_PXD_NULL []

9.45.1 Detailed Description

GUIslice library (driver layer for M5stack)

9.45.2 Macro Definition Documentation

9.45.2.1 #define DRV_HAS_DRAW_BMP_MEM

Support gslc DrvDrawBmp24FromMem()

```
9.45.2.2 #define DRV_HAS_DRAW_CIRCLE_FILL
Support gslc_DrvDrawFillCircle()
9.45.2.3 #define DRV_HAS_DRAW_CIRCLE_FRAME
Support gslc_DrvDrawFrameCircle()
9.45.2.4 #define DRV_HAS_DRAW_LINE
Support gslc_DrvDrawLine()
9.45.2.5 #define DRV_HAS_DRAW_POINT
Support gslc_DrvDrawPoint()
9.45.2.6 #define DRV_HAS_DRAW_POINTS
Support gslc_DrvDrawPoints()
9.45.2.7 #define DRV_HAS_DRAW_RECT_FILL
Support gslc_DrvDrawFillRect()
9.45.2.8 #define DRV_HAS_DRAW_RECT_FRAME
Support gslc_DrvDrawFrameRect()
9.45.2.9 #define DRV_HAS_DRAW_RECT_ROUND_FILL
Support gslc_DrvDrawFillRoundRect()
9.45.2.10 #define DRV_HAS_DRAW_RECT_ROUND_FRAME
Support gslc_DrvDrawFrameRoundRect()
9.45.2.11 #define DRV_HAS_DRAW_TEXT
Support gslc_DrvDrawTxt()
```

9.45.2.12 #define DRV_HAS_DRAW_TRI_FILL

Support gslc_DrvDrawFillTriangle()

9.45.2.13 #define DRV_HAS_DRAW_TRI_FRAME

Support gslc_DrvDrawFrameTriangle()

9.45.2.14 #define DRV_OVERRIDE_TXT_ALIGN

Driver provides text alignment.

9.45.3 Function Documentation

9.45.3.1 uint16_t gslc_DrvAdaptColorToRaw (gslc_tsColor nCol)

9.45.3.2 void gslc_DrvDestruct (gslc_tsGui * pGui)

Free up any members associated with the driver.

• Eg. renderers, windows, background surfaces, etc.

Parameters

in	pGui	Pointer to GUI
----	------	----------------

Returns

none

9.45.3.3 void gslc_DrvDrawBkgnd (gslc_tsGui * pGui)

Copy the background image to destination screen.

Parameters

in	pGui	Pointer to GUI

Returns

true if success, false if fail

9.45.3.4 void gslc_DrvDrawBmp24FromMem (gslc_tsGui * pGui, int16_t nDstX, int16_t nDstY, const unsigned char * pBitmap, bool bProgMem)

Draw a color 24-bit depth bitmap from a memory array.

- Note that users must convert images from their native format (eg. BMP, PNG, etc.) into a C array. Please refer to the following guide for details: https://github.com/ImpulseAdventure/GU← Islice/wiki/Display-Images-from-FLASH
- The converted file (c array) can then be included in the sketch.

Parameters

in	pGui	Pointer to GUI
in	nDstX	X coord for copy
in	nDstY	Y coord for copy
in	pBitmap	Pointer to bitmap buffer
in	bProgMem	Bitmap is stored in Flash if true, RAM otherwise

Returns

none

9.45.3.5 bool gslc_DrvDrawFillCircle (gslc_tsGui * pGui, int16_t nMidX, int16_t nMidY, uint16_t nRadius, gslc_tsColor nCol)

Draw a filled circle.

Parameters

in	pGui	Pointer to GUI
in	nMidX	Center of circle (X coordinate)
in	nMidY	Center of circle (Y coordinate)
in	nRadius	Radius of circle
in	nCol	Color RGB value to fill

Returns

true if success, false if error

9.45.3.6 bool gslc_DrvDrawFillRect (gslc_tsGui * pGui, gslc_tsRect rRect, gslc_tsColor nCol)

Draw a filled rectangle.

in	pGui	Pointer to GUI
in	rRect	Rectangular region to fill
Generated/16/2000/xygeColor RGB value to fill		

Returns

true if success, false if error

9.45.3.7 bool gslc_DrvDrawFillRoundRect (gslc_tsGui * pGui, gslc_tsRect rRect, int16_t nRadius, gslc_tsColor nCol)

Draw a filled rounded rectangle.

Parameters

in	pGui	Pointer to GUI
in	rRect	Rectangular region to fill
in	nRadius	Radius for rounded corners
in	nCol	Color RGB value to fill

Returns

true if success, false if error

9.45.3.8 bool gslc_DrvDrawFillTriangle (gslc_tsGui * pGui, int16_t nX0, int16_t nY0, int16_t nX1, int

Draw a filled triangle.

Parameters

in	pGui	Pointer to GUI
in	nX0	X Coordinate #1
in	nY0	Y Coordinate #1
in	nX1	X Coordinate #2
in	nY1	Y Coordinate #2
in	nX2	X Coordinate #3
in	nY2	Y Coordinate #3
in	nCol	Color RGB value to fill

Returns

true if success, false if error

9.45.3.9 bool gslc_DrvDrawFrameCircle ($gslc_tsGui * pGui$, int16_t nMidX, int16_t nMidY, uint16_t nRadius, $gslc_tsColor nCol$)

Draw a framed circle.

in	pGui	Pointer to GUI

Parameters

in	nMidX	Center of circle (X coordinate)
in	nMidY	Center of circle (Y coordinate)
in	nRadius	Radius of circle
in	nCol	Color RGB value to frame

Returns

true if success, false if error

9.45.3.10 bool gslc_DrvDrawFrameRect (gslc_tsGui * pGui, gslc_tsRect rRect, gslc_tsColor nCol)

Draw a framed rectangle.

Parameters

in	pGui	Pointer to GUI
in	rRect	Rectangular region to frame
in	nCol	Color RGB value to frame

Returns

true if success, false if error

9.45.3.11 bool gslc_DrvDrawFrameRoundRect (gslc_tsGui * pGui, gslc_tsRect rRect, int16_t nRadius, gslc_tsColor nCol)

Draw a framed rounded rectangle.

Parameters

in	pGui	Pointer to GUI
in	rRect	Rectangular region to frame
in	nRadius	Radius for rounded corners
in	nCol	Color RGB value to frame

Returns

true if success, false if error

9.45.3.12 bool gslc_DrvDrawFrameTriangle (gslc_tsGui * pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, int16_t nX2, int16_t nY2, gslc_tsColor nCol)

Draw a framed triangle.

Parameters

in	pGui	Pointer to GUI
in	nX0	X Coordinate #1
in	nY0	Y Coordinate #1
in	nX1	X Coordinate #2
in	nY1	Y Coordinate #2
in	nX2	X Coordinate #3
in	nY2	Y Coordinate #3
in	nCol	Color RGB value to frame

Returns

true if success, false if error

9.45.3.13 bool gslc_DrvDrawlmage ($gslc_tsGui*pGui$, int16_t nDstX, int16_t nDstX, gslc_tslmgRef slmgRef)

Copy all of source image to destination screen at specified coordinate.

Parameters

in	pGui	Pointer to GUI
in	nDstX	Destination X coord for copy
in	nDstY	Destination Y coord for copy
in	sImgRef	Image reference

Returns

true if success, false if fail

9.45.3.14 bool gslc_DrvDrawLine (gslc_tsGui * pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, gslc_tsColor nCol)

Draw a line.

in	pGui Pointer to GUI	
in	nX0	Line start (X coordinate)
in	nY0	Line start (Y coordinate)
in	nX1	Line finish (X coordinate)
in	nY1	Line finish (Y coordinate)
in	nCol	Color RGB value to draw

Returns

true if success, false if error

9.45.3.15 void gslc_DrvDrawMonoFromMem (gslc_tsGui * pGui, int16_t nDstX, int16_t nDstY, const unsigned char * pBitmap, bool bProgMem)

Draw a monochrome bitmap from a memory array.

· Draw from the bitmap buffer using the foreground color defined in the header (unset bits are transparent)

Parameters

in	pGui	Pointer to GUI	
in	nDstX	Destination X coord for copy	
in	nDstY	Destination Y coord for copy	
in	pBitmap	Bitmap Pointer to bitmap buffer	
in	bProgMem	Bitmap is stored in Flash if true, RAM otherwise	

Returns

none

9.45.3.16 bool gslc_DrvDrawPoint (gslc_tsGui * pGui, int16_t nX, int16_t nY, gslc_tsColor nCol)

Draw a point.

Parameters

in	pGui Pointer to GUI	
in	nΧ	X coordinate of point
in	nΥ	Y coordinate of point
in	nCol	Color RGB value to draw

Returns

true if success, false if error

9.45.3.17 bool gslc_DrvDrawPoints ($gslc_tsGui*pGui, gslc_tsPt*asPt, uint16_t nNumPt, gslc_tsColor nCol$)

Draw a point.

in	pGui	Pointer to GUI

Parameters

in	asPt	Array of points to draw
in	n⊷	Number of points in array
	NumPt	
in	nCol	Color RGB value to draw

Returns

true if success, false if error

9.45.3.18 bool gslc_DrvDrawTxt (gslc_tsGui * pGui, int16_t nTxtX, int16_t nTxtY, gslc_tsFont * pFont, const char * pStr, gslc_teTxtFlags eTxtFlags, gslc_tsColor colTxt, gslc_tsColor colBg)

Draw a text string at the given coordinate.

Parameters

in	pGui	Pointer to GUI	
in	nTxtX	X coordinate of top-left text string	
in	nTxtY	Y coordinate of top-left text string	
in	pFont	Ptr to Font	
in	pStr	String to display	
in	eTxtFlags	Flags associated with text string	
in	colTxt	Color to draw text	
in	colBg	unused in m5stack, defaults to black	

Returns

true if success, false if failure

9.45.3.19 bool gslc_DrvDrawTxtAlign (gslc_tsGui * pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, int8_t eTxtAlign, gslc_tsFont * pFont, const char * pStr, gslc_teTxtFlags eTxtFlags, gslc_tsColor colTxt, gslc_tsColor colBg)

Draw a text string in a bounding box using the specified alignment.

in	pGui	Pointer to GUI	
in	nX0	X coordinate of top-left of bounding box	
in	nY0	Y coordinate of top-left of bounding box	
in	nX1	X coordinate of bot-right of bounding box	
in	nY1	Y coordinate of bot-right of bounding box	
in	eTxtAlign	Alignment mode]	
in	pFont	Ptr to Font	
in	pStr	String to display	
in	eTxtFlags	Flags associated with text string	
in	colTxt	Color to draw text	
in	colBg	unused in m5stack, defaults to black	

Returns

true if success, false if failure

9.45.3.20 const void * gslc_DrvFontAdd (gslc_teFontRefType eFontRefType, const void * pvFontRef, uint16_t nFontSz)

Load a font from a resource and return pointer to it.

Parameters

in	eFontRefType	Font reference type (GSLC_FONTREF_PTR for Arduino)
in	pvFontRef	Font reference pointer (Pointer to the GFXFont array)
in	n nFontSz Typeface size to use	

Returns

Void ptr to driver-specific font if load was successful, NULL otherwise

9.45.3.21 void gslc_DrvFontsDestruct (gslc_tsGui * pGui)

Release all fonts defined in the GUI.

Parameters

in	pGui	Pointer to GUI
----	------	----------------

Returns

none

9.45.3.22 void* gslc_DrvGetDriverDisp (gslc_tsGui * pGui)

Get the native display driver instance.

• This can be useful to access special commands available in the selected driver.

Parameters

in	pGui	Pointer to GUI

Returns

Void pointer to the display driver instance. This pointer should be typecast to the particular driver being used. If no driver was created then this function will return NULL.

```
9.45.3.23 void* gslc_DrvGetDriverTouch ( gslc_tsGui * pGui )
```

Get the native touch driver instance.

• This can be useful to access special commands available in the selected driver.

Parameters

in <i>pGui</i>	Pointer to GUI
----------------	----------------

Returns

Void pointer to the touch driver instance. This pointer should be typecast to the particular driver being used. If no driver was created then this function will return NULL.

```
9.45.3.24 const char* gslc_DrvGetNameDisp ( gslc_tsGui * pGui )
```

Get the display driver name.

Parameters

in <i>pGui</i> P	ointer to GUI
------------------	---------------

Returns

String containing driver name

```
9.45.3.25 const char* gslc_DrvGetNameTouch ( gslc_tsGui * pGui )
```

Get the touch driver name.

Parameters

in pGui Pointer to GL

Returns

String containing driver name

9.45.3.26 bool gslc_DrvGetTxtSize (gslc_tsGui * pGui, gslc_tsFont * pFont, const char * pStr, gslc_teTxtFlags eTxtFlags, int16_t * pnTxtX, int16_t * pnTxtY, uint16_t * pnTxtSzW, uint16_t * pnTxtSzW)

Get the extent (width and height) of a text string.

Parameters

in	pGui	Pointer to GUI
in	pFont	Ptr to Font structure
in	pStr	String to display
in	eTxtFlags	Flags associated with text string
out	pnTxtX	Ptr to offset X of text
out	pnTxtY	Ptr to offset Y of text
out	pnTxtSzW	Ptr to width of text
out	pnTxtSzH	Ptr to height of text

Returns

true if success, false if failure

9.45.3.27 void gslc_DrvImageDestruct (void * pvImg)

Release an image surface.

Parameters

in <i>pvlmg</i>	Void ptr to image
-----------------	-------------------

Returns

none

9.45.3.28 bool gslc_DrvInit (gslc_tsGui * pGui)

Initialize the SDL library.

- Performs clean startup workaround (if enabled)
- · Configures video mode
- · Initializes font support

PRE:

• The environment variables should be configured before calling gslc_DrvInit(). This can be done with gslc_← DrvInitEnv() or manually in user function.

in	pGui	Pointer to GUI

Returns

true if success, false if fail

9.45.3.29 bool gslc_DrvInitTs (gslc_tsGui * pGui, const char * acDev)

Perform any touchscreen-specific initialization.

Parameters

in	pGui	Pointer to GUI	
in	acDev	Device path to touchscreen eg. "/dev/input/touchscreen"	

Returns

true if successful

9.45.3.30 void* gslc_DrvLoadlmage ($gslc_tsGui*pGui, gslc_tsImgRef*sImgRef*)$

Load a bitmap (*.bmp) and create a new image resource.

Transparency is enabled by GSLC_BMP_TRANS_EN through use of color (GSLC_BMP_TRANS_RGB).

Parameters

in	pGui	Pointer to GUI
in	sImgRef	Image reference

Returns

Image pointer (surface/texture) or NULL if error

9.45.3.31 void gslc_DrvPageFlipNow (gslc_tsGui * pGui)

Force a page flip to occur.

This generally copies active screen surface to the display.

Parameters

in	pGui	Pointer to GUI

Returns

none

9.45.3.32 bool gslc_DrvRotate (gslc_tsGui * pGui, uint8_t nRotation)

Change rotation, automatically adapt touchscreen axes swap/flip.

Parameters

in	pGui	Pointer to GUI
in	nRotation	Screen Rotation value (0, 1, 2 or 3)

Returns

true if successful

9.45.3.33 bool gslc_DrvSetBkgndColor ($gslc_tsGui*pGui*, gslc_tsColor nCol$)

Configure the background to use a solid color.

• The background is used when redrawing the entire page

Parameters

in	pGui	Pointer to GUI
in	nCol	RGB Color to use

Returns

true if success, false if fail

9.45.3.34 bool gslc_DrvSetBkgndlmage ($gslc_tsGui*pGui, gslc_tsImgRef*sImgRef*)$

Configure the background to use a bitmap image.

• The background is used when redrawing the entire page

Parameters

in	pGui	Pointer to GUI
in	sImgRef	Image reference

Returns

true if success, false if fail

9.45.3.35 bool gslc_DrvSetClipRect ($gslc_tsGui * pGui$, $gslc_tsRect * pRect$)

Set the clipping rectangle for future drawing updates.

Parameters

in	pGui	Pointer to GUI
in	pRect	Rectangular region to constrain edits

Returns

true if success, false if error

9.45.3.36 bool gslc_DrvSetElemImageGlow ($gslc_tsGui*pGui, gslc_tsElem*pElem, gslc_tsImgRef*sImgRef*)$

Set an element's glow-state image.

Parameters

in	pGui	Pointer to GUI
in	pElem	Pointer to Element to update
in	sImgRef	Image reference

Returns

true if success, false if error

9.45.3.37 bool gslc_brvSetElemImageNorm (gslc_tsGui * pGui, gslc_tsElem * pElem, gslc_tsImgRef sImgRef)

Set an element's normal-state image.

Parameters

in	pGui	Pointer to GUI
in	pElem	Pointer to Element to update
in	sImgRef	Image reference

Returns

true if success, false if error


9.45.4 Variable Documentation

9.45.4.1 const char GSLC_PMEM ERRSTR_NULL[]

9.45.4.2 const char GSLC_PMEM ERRSTR_PXD_NULL[]

9.46 src/GUIslice_drv_sdl.c File Reference


#include "GUIslice_config.h"
Include dependency graph for GUIslice_drv_sdl.c:

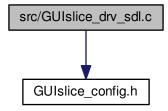

9.47 src/GUIslice_drv_sdl.h File Reference

GUIslice library (driver layer for LINUX / SDL)

#include "GUIslice.h"
#include <stdio.h>
Include dependency graph for GUIslice_drv_sdl.h:

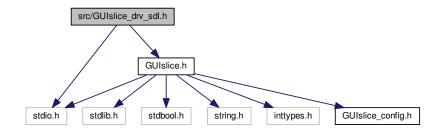

Data Structures

struct gslc_tsDriver

Macros

• #define DRV_HAS_DRAW_POINT

Support gslc_DrvDrawPoint()

• #define DRV_OVERRIDE_TXT_ALIGN

Driver provides text alignment.

Functions

• bool gslc_DrvInit (gslc_tsGui *pGui)

Initialize the SDL library.

void gslc_DrvDestruct (gslc_tsGui *pGui)

Free up any members associated with the driver.

const char * gslc_DrvGetNameDisp (gslc_tsGui *pGui)

Get the display driver name.

const char * gslc_DrvGetNameTouch (gslc_tsGui *pGui)

Get the touch driver name.

void * gslc_DrvGetDriverDisp (gslc_tsGui *pGui)

Get the native display driver instance.

void * gslc_DrvGetDriverTouch (gslc_tsGui *pGui)

Get the native touch driver instance.

void * gslc_DrvLoadImage (gslc_tsGui *pGui, gslc_tsImgRef sImgRef)

Load a bitmap (*.bmp) and create a new image resource.

bool gslc_DrvSetBkgndImage (gslc_tsGui *pGui, gslc_tsImgRef sImgRef)

Configure the background to use a bitmap image.

bool gslc_DrvSetBkgndColor (gslc_tsGui *pGui, gslc_tsColor nCol)

Configure the background to use a solid color.

• bool gslc_DrvSetElemImageNorm (gslc_tsGui *pGui, gslc_tsElem *pElem, gslc_tsImgRef sImgRef)

Set an element's normal-state image.

bool gslc DrvSetElemImageGlow (gslc tsGui *pGui, gslc tsElem *pElem, gslc tsImgRef sImgRef)

Set an element's glow-state image.

void gslc_DrvImageDestruct (void *pvImg)

Release an image surface.

bool gslc_DrvSetClipRect (gslc_tsGui *pGui, gslc_tsRect *pRect)

Set the clipping rectangle for future drawing updates.

• const void * gslc_DrvFontAdd (gslc_teFontRefType eFontRefType, const void *pvFontRef, uint16_t nFontSz)

Load a font from a resource and return pointer to it.

void gslc DrvFontsDestruct (gslc tsGui *pGui)

Release all fonts defined in the GUI.

 bool gslc_DrvGetTxtSize (gslc_tsGui *pGui, gslc_tsFont *pFont, const char *pStr, gslc_teTxtFlags eTxt← Flags, int16_t *pnTxtX, int16_t *pnTxtY, uint16_t *pnTxtSzW, uint16_t *pnTxtSzH)

Get the extent (width and height) of a text string.

• bool gslc_DrvDrawTxt (gslc_tsGui *pGui, int16_t nTxtX, int16_t nTxtY, gslc_tsFont *pFont, const char *pStr, gslc_teTxtFlags eTxtFlags, gslc_tsColor colTxt, gslc_tsColor colBg)

Draw a text string at the given coordinate.

void gslc_DrvPageFlipNow (gslc_tsGui *pGui)

Force a page flip to occur.

• bool gslc DrvDrawPoint (gslc tsGui *pGui, int16 t nX, int16 t nY, gslc tsColor nCol)

Draw a point

bool gslc_DrvDrawPoints (gslc_tsGui *pGui, gslc_tsPt *asPt, uint16_t nNumPt, gslc_tsColor nCol)

Draw a point.

• bool gslc_DrvDrawFrameRect (gslc_tsGui *pGui, gslc_tsRect rRect, gslc_tsColor nCol)

Draw a framed rectangle.

bool gslc_DrvDrawFillRect (gslc_tsGui *pGui, gslc_tsRect rRect, gslc_tsColor nCol)

Draw a filled rectangle.

bool gslc_DrvDrawLine (gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, gslc_tsColor nCol)

Draw a line.

• bool gslc_DrvDrawImage (gslc_tsGui *pGui, int16_t nDstX, int16_t nDstY, gslc_tsImgRef sImgRef)

Copy all of source image to destination screen at specified coordinate.

void gslc_DrvDrawBkgnd (gslc_tsGui *pGui)

Copy the background image to destination screen.

bool gslc_DrvGetTouch (gslc_tsGui *pGui, int16_t *pnX, int16_t *pnY, uint16_t *pnPress, gslc_teInputRaw←
 Event *peInputEvent, int16_t *pnInputVal)

Get the last touch event from the SDL Event handler.

bool gslc DrvRotate (gslc tsGui *pGui, uint8 t nRotation)

Change rotation, automatically adapt touchscreen axes swap/flip.

bool gslc_DrvCleanStart (const char *sTTY)

Ensure SDL initializes cleanly to workaround possible issues if previous SDL application failed to close down gracefully.

• void gslc DrvReportInfoPre ()

Report driver debug info (before initialization)

void gslc_DrvReportInfoPost ()

Report driver debug info (after initialization)

SDL_Rect gslc_DrvAdaptRect (gslc_tsRect rRect)

Translate a gslc_tsRect into an SDL_Rect.

• SDL_Color gslc_DrvAdaptColor (gslc_tsColor sCol)

Translate a gslc_tsColor into an SDL_Color.

bool gslc_DrvInitTouch (gslc_tsGui *pGui, const char *acDev)

Perform any touchscreen-specific initialization.

9.47.1 Detailed Description

GUIslice library (driver layer for LINUX / SDL)

9.47.2 Macro Definition Documentation

9.47.2.1 #define DRV_HAS_DRAW_POINT

Support gslc_DrvDrawPoint()

9.47.2.2 #define DRV OVERRIDE TXT ALIGN

Driver provides text alignment.

9.47.3 Function Documentation

9.47.3.1 SDL_Color gslc_DrvAdaptColor (gslc_tsColor sCol)

Translate a gslc_tsColor into an SDL_Color.

Parameters

in <i>sCol</i> gslc_tsColor

Returns

Converted SDL_Color

9.47.3.2 SDL_Rect gslc_DrvAdaptRect (gslc_tsRect rRect)

Translate a gslc_tsRect into an SDL_Rect.

Parameters

```
in rRect gslc_tsRect
```

Returns

Converted SDL_Rect

9.47.3.3 bool gslc_DrvCleanStart (const char * sTTY)

Ensure SDL initializes cleanly to workaround possible issues if previous SDL application failed to close down gracefully.

Parameters

in	sTTY	Terminal device (eg. "/dev/tty0")
----	------	-----------------------------------

Returns

true if success

9.47.3.4 void gslc_DrvDestruct (gslc_tsGui * pGui)

Free up any members associated with the driver.

• Eg. renderers, windows, background surfaces, etc.

Parameters

in	pGui	Pointer to GUI
----	------	----------------

Returns

none

9.47.3.5 void gslc_DrvDrawBkgnd (gslc_tsGui * pGui)

Copy the background image to destination screen.

Parameters

in	pGui	Pointer to GUI
----	------	----------------

Returns

true if success, false if fail

9.47.3.6 bool gslc_DrvDrawFillRect ($gslc_tsGui*pGui, gslc_tsRect rRect, gslc_tsColor nCol$)

Draw a filled rectangle.

Parameters

in	pGui	Pointer to GUI
in	rRect	Rectangular region to fill
in <i>nCol</i>		Color RGB value to fill

Returns

true if success, false if error

9.47.3.7 bool gslc_DrvDrawFrameRect ($gslc_tsGui*pGui, gslc_tsRect*rRect, gslc_tsColor*nCol$)

Draw a framed rectangle.

Parameters

in	pGui	Pointer to GUI
in	rRect	Rectangular region to frame
in	nCol	Color RGB value to frame

Returns

true if success, false if error

9.47.3.8 bool gslc_DrvDrawlmage (gslc_tsGui * pGui, int16_t nDstX, int16_t nDstY, gslc_tsImgRef sImgRef)

Copy all of source image to destination screen at specified coordinate.

Parameters

in	pGui	Pointer to GUI
in	nDstX	Destination X coord for copy
in <i>nDstY</i>		Destination Y coord for copy
in	sImgRef	Image reference

Returns

true if success, false if fail

9.47.3.9 bool gslc_DrvDrawLine (gslc_tsGui * pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, gslc_tsColor nCol)

Draw a line.

Parameters

in	pGui	Pointer to GUI
in	nX0	Line start (X coordinate)
in	nY0	Line start (Y coordinate)
in	nX1	Line finish (X coordinate)
in	nY1	Line finish (Y coordinate)
in	nCol	Color RGB value to draw

Returns

true if success, false if error

9.47.3.10 bool gslc_DrvDrawPoint ($gslc_tsGui * pGui$, int16_t nX, int16_t nY, $gslc_tsColor nCol$)

Draw a point.

Parameters

in	pGui	Pointer to GUI
in	nΧ	X coordinate of point
in	nΥ	Y coordinate of point
in	nCol	Color RGB value to draw

Returns

true if success, false if error

9.47.3.11 bool gslc_DrvDrawPoints (gslc_tsGui * pGui, gslc_tsPt * asPt, uint16_t nNumPt, gslc_tsColor nCol)

Draw a point.

Parameters

in	pGui	Pointer to GUI
in	asPt	Array of points to draw
in	n⊷	Number of points in array
	NumPt	
in	nCol	Color RGB value to draw

Returns

true if success, false if error

9.47.3.12 bool gslc_DrvDrawTxt (gslc_tsGui * pGui, int16_t nTxtX, int16_t nTxtY, gslc_tsFont * pFont, const char * pStr, gslc_teTxtFlags eTxtFlags, gslc_tsColor colTxt, gslc_tsColor colBg)

Draw a text string at the given coordinate.

Parameters

in	pGui	Pointer to GUI
in	nTxtX	X coordinate of top-left text string
in	nTxtY	Y coordinate of top-left text string
in	pFont	Ptr to Font
in	pStr	String to display
in	eTxtFlags	Flags associated with text string
in	colTxt	Color to draw text
in	colBg	unused in SDL, defaults to black

Returns

true if success, false if failure

9.47.3.13 const void* gslc_DrvFontAdd (gslc_teFontRefType eFontRefType, const void * pvFontRef, uint16_t nFontSz)

Load a font from a resource and return pointer to it.

Parameters

in	eFontRefType	Font reference type (GSLC_FONTREF_FNAME for SDL)
in	pvFontRef	Font reference pointer (Pointer to the font filename)
in	nFontSz	Typeface size to use

Returns

Void ptr to driver-specific font if load was successful, NULL otherwise

9.47.3.14 void gslc_DrvFontsDestruct (gslc_tsGui * pGui)

Release all fonts defined in the GUI.

Parameters

in	pGui	Pointer to GUI
----	------	----------------

Returns

none

```
9.47.3.15 void* gslc_DrvGetDriverDisp ( gslc_tsGui * pGui )
```

Get the native display driver instance.

• This can be useful to access special commands available in the selected driver.

Parameters

in p	Gui Pointer to GL
------	-------------------

Returns

Void pointer to the display driver instance. This pointer should be typecast to the particular driver being used. If no driver was created then this function will return NULL.

```
9.47.3.16 void* gslc_DrvGetDriverTouch ( gslc_tsGui * pGui )
```

Get the native touch driver instance.

• This can be useful to access special commands available in the selected driver.

Parameters

in	pGui	Pointer to GUI

Returns

Void pointer to the touch driver instance. This pointer should be typecast to the particular driver being used. If no driver was created then this function will return NULL.

9.47.3.17 const char* gslc_DrvGetNameDisp (gslc_tsGui * pGui)

Get the display driver name.

Parameters

in <i>pGui</i> Pointer to GUI

Returns

String containing driver name

9.47.3.18 const char* gslc_DrvGetNameTouch (gslc_tsGui * pGui)

Get the touch driver name.

Parameters

in	pGui	Pointer to GUI

Returns

String containing driver name

9.47.3.19 bool gslc_DrvGetTouch (gslc_tsGui * pGui, int16_t * pnX, int16_t * pnY, uint16_t * pnPress, gslc_teInputRawEvent * peInputEvent, int16_t * pnInputVal)

Get the last touch event from the SDL_Event handler.

Parameters

in	pGui	Pointer to GUI
out	pnX	Ptr to X coordinate of last touch event
out	pnY	Ptr to Y coordinate of last touch event
out	pnPress	Ptr to Pressure level of last touch event (0 for none, 1 for touch)
out	peInputEvent	Indication of event type
out	pnInputVal	Additional data for event type

Returns

true if an event was detected or false otherwise

9.47.3.20 bool gslc_DrvGetTxtSize (gslc_tsGui * pGui, gslc_tsFont * pFont, const char * pStr, gslc_teTxtFlags eTxtFlags, int16_t * pnTxtX, int16_t * pnTxtY, uint16_t * pnTxtSzW, uint16_t * pnTxtSzW)

Get the extent (width and height) of a text string.

Parameters

in	pGui	Pointer to GUI
----	------	----------------

Parameters

in	pFont	Ptr to Font structure
in	pStr	String to display
in	eTxtFlags	Flags associated with text string
out	pnTxtX	Ptr to offset X of text
out	pnTxtY	Ptr to offset Y of text
out	pnTxtSzW	Ptr to width of text
out	pnTxtSzH	Ptr to height of text

Returns

true if success, false if failure

9.47.3.21 void gslc_DrvImageDestruct (void * pvImg)

Release an image surface.

Parameters

in p	∕lmg \	oid ptr	to image
------	--------	---------	----------

Returns

none

9.47.3.22 bool gslc_DrvInit (gslc_tsGui * pGui)

Initialize the SDL library.

- Performs clean startup workaround (if enabled)
- · Configures video mode
- · Initializes font support

PRE:

• The environment variables should be configured before calling gslc_DrvInit().

Parameters

in	pGui	Pointer to GUI

Returns

true if success, false if fail

9.47.3.23 bool gslc_DrvInitTouch (gslc_tsGui * pGui, const char * acDev)

Perform any touchscreen-specific initialization.

Parameters

	•	Pointer to GUI	
in	acDev	Device path to touchscreen eg. "/dev/input/touchscreen"	

Returns

true if successful

9.47.3.24 void* gslc_DrvLoadlmage ($gslc_tsGui*pGui, gslc_tsImgRef*sImgRef*)$

Load a bitmap (*.bmp) and create a new image resource.

Transparency is enabled by GSLC_BMP_TRANS_EN through use of color (GSLC_BMP_TRANS_RGB).

Parameters

in	pGui	Pointer to GUI
in	sImgRef	Image reference

Returns

Image pointer (surface/texture/path) or NULL if error

9.47.3.25 void gslc_DrvPageFlipNow (gslc_tsGui * pGui)

Force a page flip to occur.

This generally copies active screen surface to the display.

Parameters

in	pGui	Pointer to GUI

Returns

none

```
9.47.3.26 void gslc_DrvReportInfoPost ( )
```

Report driver debug info (after initialization)

Returns

none

```
9.47.3.27 void gslc_DrvReportInfoPre ( )
```

Report driver debug info (before initialization)

Returns

none

```
9.47.3.28 bool gslc_DrvRotate ( gslc_tsGui * pGui, uint8_t nRotation )
```

Change rotation, automatically adapt touchscreen axes swap/flip.

Parameters

in	pGui	Pointer to GUI
in	nRotation	Screen Rotation value (0, 1, 2 or 3)

Returns

true if successful

```
9.47.3.29 bool gslc_DrvSetBkgndColor ( gslc_tsGui*pGui, gslc_tsColor nCol )
```

Configure the background to use a solid color.

• The background is used when redrawing the entire page

Parameters

in	pGui	Pointer to GUI
in	nCol	RGB Color to use

Returns

true if success, false if fail

9.47.3.30 bool gslc_DrvSetBkgndlmage (gslc_tsGui * pGui, gslc_tsImgRef slmgRef)

Configure the background to use a bitmap image.

• The background is used when redrawing the entire page

Parameters

in	pGui	Pointer to GUI
in	sImgRef	Image reference

Returns

true if success, false if fail

9.47.3.31 bool gslc_DrvSetClipRect ($gslc_tsGui*pGui, gslc_tsRect*pRect$)

Set the clipping rectangle for future drawing updates.

Parameters

in	pGui	Pointer to GUI
in	pRect	Rectangular region to constrain edits

Returns

true if success, false if error

9.47.3.32 bool gslc_DrvSetElemImageGlow ($gslc_tsGui*pGui, gslc_tsElem*pElem, gslc_tsImgRef*sImgRef*)$

Set an element's glow-state image.

Parameters

in	pGui	Pointer to GUI
in	pElem	Pointer to Element to update
in	sImgRef	Image reference

Returns

true if success, false if error

9.47.3.33 bool gslc_brvSetElemImageNorm (gslc_tsGui * pGui, gslc_tsElem * pElem, gslc_tsImgRef sImgRef)

Set an element's normal-state image.

Parameters


in	pGui	Pointer to GUI
in	pElem	Pointer to Element to update
in	sImgRef	Image reference

Returns

true if success, false if error

9.48 src/GUIslice_drv_tft_espi.cpp File Reference

#include "GUIslice_config.h"
Include dependency graph for GUIslice_drv_tft_espi.cpp:

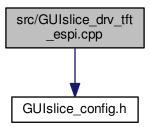


9.49 src/GUIslice_drv_tft_espi.h File Reference

GUIslice library (driver layer for TFT-eSPI)

#include "GUIslice.h"
#include <stdio.h>

Include dependency graph for GUIslice_drv_tft_espi.h:

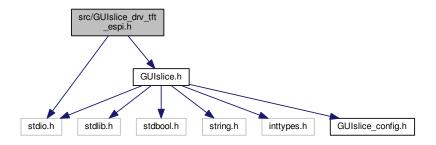

Data Structures

· struct gslc_tsDriver

Macros

- #define GSLC SPIFFS EN
- #define DRV_HAS_DRAW_POINT

Support gslc_DrvDrawPoint()

• #define DRV_HAS_DRAW_POINTS

Support gslc_DrvDrawPoints()

• #define DRV_HAS_DRAW_LINE

Support gslc_DrvDrawLine()

• #define DRV HAS DRAW RECT FRAME

Support gslc_DrvDrawFrameRect()

#define DRV_HAS_DRAW_RECT_FILL

Support gslc_DrvDrawFillRect()

#define DRV_HAS_DRAW_RECT_ROUND_FRAME

Support gslc_DrvDrawFrameRoundRect()

#define DRV_HAS_DRAW_RECT_ROUND_FILL

Support gslc_DrvDrawFillRoundRect()

#define DRV_HAS_DRAW_CIRCLE_FRAME

Support gslc_DrvDrawFrameCircle()

• #define DRV_HAS_DRAW_CIRCLE_FILL

Support gslc_DrvDrawFillCircle()

#define DRV_HAS_DRAW_TRI_FRAME

Support gslc_DrvDrawFrameTriangle()

• #define DRV_HAS_DRAW_TRI_FILL

Support gslc DrvDrawFillTriangle()

• #define DRV_HAS_DRAW_TEXT

Support gslc_DrvDrawTxt()

• #define DRV_HAS_DRAW_BMP_MEM

Support gslc_DrvDrawBmp24FromMem()

#define DRV_OVERRIDE_TXT_ALIGN

Driver provides text alignment.

Functions

bool gslc_DrvInit (gslc_tsGui *pGui)

Initialize the SDL library.

• bool gslc_DrvInitTs (gslc_tsGui *pGui, const char *acDev)

Perform any touchscreen-specific initialization.

void gslc_DrvDestruct (gslc_tsGui *pGui)

Free up any members associated with the driver.

const char * gslc_DrvGetNameDisp (gslc_tsGui *pGui)

Get the display driver name.

const char * gslc_DrvGetNameTouch (gslc_tsGui *pGui)

Get the touch driver name.

void * gslc_DrvGetDriverDisp (gslc_tsGui *pGui)

Get the native display driver instance.

void * gslc_DrvGetDriverTouch (gslc_tsGui *pGui)

Get the native touch driver instance.

void * gslc DrvLoadImage (gslc tsGui *pGui, gslc tsImgRef sImgRef)

Load a bitmap (*.bmp) and create a new image resource.

bool gslc_DrvSetBkgndImage (gslc_tsGui *pGui, gslc_tsImgRef sImgRef)

Configure the background to use a bitmap image.

bool gslc DrvSetBkgndColor (gslc tsGui *pGui, gslc tsColor nCol)

Configure the background to use a solid color.

bool gslc_DrvSetElemImageNorm (gslc_tsGui *pGui, gslc_tsElem *pElem, gslc_tsImgRef sImgRef)

Set an element's normal-state image.

• bool gslc DrvSetElemImageGlow (gslc tsGui *pGui, gslc tsElem *pElem, gslc tsImgRef sImgRef)

Set an element's glow-state image.

void gslc_DrvImageDestruct (void *pvImg)

Release an image surface.

bool gslc DrvSetClipRect (gslc tsGui *pGui, gslc tsRect *pRect)

Set the clipping rectangle for future drawing updates.

 $\bullet \ \ const \ void \ * gslc_DrvFontAdd \ (gslc_teFontRefType \ eFontRefType, const \ void \ * pvFontRef, \ uint16_t \ nFontSz)$

Load a font from a resource and return pointer to it.

void gslc_DrvFontsDestruct (gslc_tsGui *pGui)

Release all fonts defined in the GUI.

bool gslc_DrvGetTxtSize (gslc_tsGui *pGui, gslc_tsFont *pFont, const char *pStr, gslc_teTxtFlags eTxt←
Flags, int16_t *pnTxtX, int16_t *pnTxtY, uint16_t *pnTxtSzW, uint16_t *pnTxtSzH)

Get the extent (width and height) of a text string.

• bool gslc_DrvDrawTxt (gslc_tsGui *pGui, int16_t nTxtX, int16_t nTxtY, gslc_tsFont *pFont, const char *pStr, gslc_teTxtFlags eTxtFlags, gslc_tsColor colTxt, gslc_tsColor colBg)

Draw a text string at the given coordinate.

bool gslc_DrvDrawTxtAlign (gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, int8_t e
 TxtAlign, gslc_tsFont *pFont, const char *pStr, gslc_teTxtFlags eTxtFlags, gslc_tsColor colTxt, gslc_tsColor colBg)

Draw a text string in a bounding box using the specified alignment.

void gslc_DrvPageFlipNow (gslc_tsGui *pGui)

Force a page flip to occur.

• bool gslc_DrvDrawPoint (gslc_tsGui *pGui, int16_t nX, int16_t nY, gslc_tsColor nCol)

Draw a point.

bool gslc_DrvDrawPoints (gslc_tsGui *pGui, gslc_tsPt *asPt, uint16_t nNumPt, gslc_tsColor nCol)

Draw a point.

bool gslc DrvDrawFrameRect (gslc tsGui *pGui, gslc tsRect rRect, gslc tsColor nCol)

Draw a framed rectangle.

bool gslc_DrvDrawFillRect (gslc_tsGui *pGui, gslc_tsRect rRect, gslc_tsColor nCol)

Draw a filled rectangle.

bool gslc_DrvDrawFrameRoundRect (gslc_tsGui *pGui, gslc_tsRect rRect, int16_t nRadius, gslc_tsColor n←
 Col)

Draw a framed rounded rectangle.

- bool gslc_DrvDrawFillRoundRect (gslc_tsGui *pGui, gslc_tsRect rRect, int16_t nRadius, gslc_tsColor nCol)

 Draw a filled rounded rectangle.
- bool gslc_DrvDrawLine (gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, gslc_tsColor nCol)

Draw a line.

bool gslc_DrvDrawFrameCircle (gslc_tsGui *pGui, int16_t nMidX, int16_t nMidY, uint16_t nRadius, gslc_ts
 — Color nCol)

Draw a framed circle.

bool gslc_DrvDrawFillCircle (gslc_tsGui *pGui, int16_t nMidX, int16_t nMidY, uint16_t nRadius, gslc_tsColor nCol)

Draw a filled circle.

• bool gslc_DrvDrawFrameTriangle (gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, int16_t nX2, int16_t nY2, gslc_tsColor nCol)

Draw a framed triangle.

• bool gslc_DrvDrawFillTriangle (gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, int16_t nX2, int16_t nY2, gslc_tsColor nCol)

Draw a filled triangle.

• bool gslc_DrvDrawImage (gslc_tsGui *pGui, int16_t nDstX, int16_t nDstY, gslc_tsImgRef sImgRef)

Copy all of source image to destination screen at specified coordinate.

void gslc_DrvDrawMonoFromMem (gslc_tsGui *pGui, int16_t nDstX, int16_t nDstY, const unsigned char *p←
 Bitmap, bool bProgMem)

Draw a monochrome bitmap from a memory array.

 void gslc_DrvDrawBmp24FromMem (gslc_tsGui *pGui, int16_t nDstX, int16_t nDstY, const unsigned char *pBitmap, bool bProgMem)

Draw a color 24-bit depth bitmap from a memory array.

void gslc_DrvDrawBkgnd (gslc_tsGui *pGui)

Copy the background image to destination screen.

• bool gslc_DrvRotate (gslc_tsGui *pGui, uint8_t nRotation)

Change rotation, automatically adapt touchscreen axes swap/flip.

uint16_t gslc_DrvAdaptColorToRaw (gslc_tsColor nCol)

9.49.1 Detailed Description

GUIslice library (driver layer for TFT-eSPI)

9.49.2 Macro Definition Documentation

9.49.2.1 #define DRV_HAS_DRAW_BMP_MEM

Support gslc DrvDrawBmp24FromMem()

9.49.2.2 #define DRV_HAS_DRAW_CIRCLE_FILL

Support gslc_DrvDrawFillCircle()

9.49.2.3 #define DRV_HAS_DRAW_CIRCLE_FRAME

Support gslc_DrvDrawFrameCircle()

9.49.2.4 #define DRV_HAS_DRAW_LINE

Support gslc_DrvDrawLine()

```
9.49.2.5 #define DRV_HAS_DRAW_POINT
Support gslc_DrvDrawPoint()
9.49.2.6 #define DRV_HAS_DRAW_POINTS
Support gslc_DrvDrawPoints()
9.49.2.7 #define DRV_HAS_DRAW_RECT_FILL
Support gslc_DrvDrawFillRect()
9.49.2.8 #define DRV_HAS_DRAW_RECT_FRAME
Support gslc_DrvDrawFrameRect()
9.49.2.9 #define DRV_HAS_DRAW_RECT_ROUND_FILL
Support gslc_DrvDrawFillRoundRect()
9.49.2.10 #define DRV_HAS_DRAW_RECT_ROUND_FRAME
Support gslc_DrvDrawFrameRoundRect()
9.49.2.11 #define DRV_HAS_DRAW_TEXT
Support gslc_DrvDrawTxt()
9.49.2.12 #define DRV_HAS_DRAW_TRI_FILL
Support gslc_DrvDrawFillTriangle()
9.49.2.13 #define DRV_HAS_DRAW_TRI_FRAME
Support gslc_DrvDrawFrameTriangle()
9.49.2.14 #define DRV_OVERRIDE_TXT_ALIGN
Driver provides text alignment.
9.49.2.15 #define GSLC_SPIFFS_EN
9.49.3 Function Documentation
9.49.3.1 uint16_t gslc_DrvAdaptColorToRaw ( gslc_tsColor nCol )
9.49.3.2 void gslc_DrvDestruct ( gslc_tsGui*pGui )
Free up any members associated with the driver.
```

· Eg. renderers, windows, background surfaces, etc.

Parameters

in <i>pGui</i> Pointer to GL	JI
------------------------------	----

Returns

none

9.49.3.3 void gslc_DrvDrawBkgnd (gslc_tsGui * pGui)

Copy the background image to destination screen.

Parameters

in <i>pGui</i> Pointer to G	GUI
-----------------------------	-----

Returns

true if success, false if fail

9.49.3.4 void gslc_DrvDrawBmp24FromMem (gslc_tsGui * pGui, int16_t nDstX, int16_t nDstY, const unsigned char * pBitmap, bool bProgMem)

Draw a color 24-bit depth bitmap from a memory array.

- Note that users must convert images from their native format (eg. BMP, PNG, etc.) into a C array. Please refer to the following guide for details: https://github.com/ImpulseAdventure/GU← Islice/wiki/Display-Images-from-FLASH
- The converted file (c array) can then be included in the sketch.

Parameters

in	pGui	Pointer to GUI
in	nDstX	X coord for copy
in	nDstY	Y coord for copy
in	pBitmap	Pointer to bitmap buffer
in	bProgMem	Bitmap is stored in Flash if true, RAM otherwise

Returns

none

9.49.3.5 bool gslc_DrvDrawFillCircle (gslc_tsGui * pGui, int16_t nMidX, int16_t nMidY, uint16_t nRadius, gslc_tsColor nCol)

Draw a filled circle.

Parameters

in	pGui	Pointer to GUI
in	nMidX	Center of circle (X coordinate)
in	nMidY	Center of circle (Y coordinate)
in	nRadius	Radius of circle
in	nCol	Color RGB value to fill

Returns

true if success, false if error

9.49.3.6 bool gslc_DrvDrawFillRect (gslc_tsGui * pGui, gslc_tsRect rRect, gslc_tsColor nCol)

Draw a filled rectangle.

Parameters

in	pGui	Pointer to GUI
in	rRect	Rectangular region to fill
in	nCol	Color RGB value to fill

Returns

true if success, false if error

 $9.49.3.7 \quad bool\ gslc_DrvDrawFillRoundRect\ (\ gslc_tsGui*pGui,\ gslc_tsRect\ rRect,\ int16_t\ nRadius,\ gslc_tsColor\ nCol\)$

Draw a filled rounded rectangle.

Parameters

in	pGui	Pointer to GUI
in	rRect	Rectangular region to fill
in	nRadius	Radius for rounded corners
in	nCol	Color RGB value to fill

Returns

true if success, false if error

9.49.3.8 bool gslc_DrvDrawFillTriangle (gslc_tsGui * pGui, int16_t nX0, int16_t nX0, int16_t nX1, int

Draw a filled triangle.

Parameters

in	pGui	Pointer to GUI
in	nX0	X Coordinate #1
in	nY0	Y Coordinate #1
in	nX1	X Coordinate #2
in	nY1	Y Coordinate #2
in	nX2	X Coordinate #3
in	nY2	Y Coordinate #3
in	nCol	Color RGB value to fill

Returns

true if success, false if error

9.49.3.9 bool gslc_DrvDrawFrameCircle ($gslc_tsGui * pGui$, int16_t nMidX, int16_t nMidY, uint16_t nRadius, $gslc_tsColor nCol$)

Draw a framed circle.

Parameters

in	pGui	Pointer to GUI
in	nMidX	Center of circle (X coordinate)
in	nMidY	Center of circle (Y coordinate)
in	nRadius	Radius of circle
in	nCol	Color RGB value to frame

Returns

true if success, false if error

9.49.3.10 bool gslc_DrvDrawFrameRect ($gslc_tsGui*pGui, gslc_tsRect*pGui, gslc_tsR$

Draw a framed rectangle.

Parameters

in	pGui	Pointer to GUI
in	rRect	Rectangular region to frame
in	nCol	Color RGB value to frame

Returns

true if success, false if error

9.49.3.11 bool gslc_DrvDrawFrameRoundRect (gslc_tsGui * pGui, gslc_tsRect rRect, int16_t nRadius, gslc_tsColor nCol)

Draw a framed rounded rectangle.

Parameters

in	pGui	Pointer to GUI
in	rRect	Rectangular region to frame
in	nRadius	Radius for rounded corners
in	nCol	Color RGB value to frame

Returns

true if success, false if error

9.49.3.12 bool gslc_DrvDrawFrameTriangle (gslc_tsGui * pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, int16_t nX2, int16_t nY2, gslc_tsColor nCol)

Draw a framed triangle.

Parameters

in	pGui	Pointer to GUI
in	nX0	X Coordinate #1
in	nY0	Y Coordinate #1
in	nX1	X Coordinate #2
in	nY1	Y Coordinate #2
in	nX2	X Coordinate #3
in	nY2	Y Coordinate #3
in	nCol	Color RGB value to frame

Returns

true if success, false if error

9.49.3.13 bool gslc_DrvDrawlmage ($gslc_tsGui*pGui$, int16_t nDstX, int16_t nDstX, gslc_tslmgRef slmgRef)

Copy all of source image to destination screen at specified coordinate.

Parameters

in	pGui	Pointer to GUI
in	nDstX	Destination X coord for copy
in	nDstY	Destination Y coord for copy
in	sImgRef	Image reference

Returns

true if success, false if fail

9.49.3.14 bool gslc_DrvDrawLine (gslc_tsGui * pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, gslc_tsColor nCol)

Draw a line.

Parameters

in	pGui	Pointer to GUI
in	nX0	Line start (X coordinate)
in	nY0	Line start (Y coordinate)
in	nX1	Line finish (X coordinate)
in	nY1	Line finish (Y coordinate)
in	nCol	Color RGB value to draw

Returns

true if success, false if error

9.49.3.15 void gslc_DrvDrawMonoFromMem (gslc_tsGui * pGui, int16_t nDstX, int16_t nDstY, const unsigned char * pBitmap, bool bProgMem)

Draw a monochrome bitmap from a memory array.

• Draw from the bitmap buffer using the foreground color defined in the header (unset bits are transparent)

Parameters

in	pGui	Pointer to GUI
in	nDstX	Destination X coord for copy
in	nDstY	Destination Y coord for copy
in	pBitmap	Pointer to bitmap buffer
in	bProgMem	Bitmap is stored in Flash if true, RAM otherwise

Returns

none

9.49.3.16 bool gslc_DrvDrawPoint (gslc_tsGui * pGui, int16_t nX, int16_t nY, gslc_tsColor nCol)

Draw a point.

Parameters

in	pGui	Pointer to GUI
in	nΧ	X coordinate of point
in	nΥ	Y coordinate of point
in	nCol	Color RGB value to draw

Returns

true if success, false if error

9.49.3.17 bool gslc_DrvDrawPoints ($gslc_tsGui*pGui*pGui*, gslc_tsPt*asPt*, uint16_t nNumPt*, gslc_tsColor nCol*)$

Draw a point.

Parameters

in	pGui	Pointer to GUI
in	asPt	Array of points to draw
in	n⊷	Number of points in array
	NumPt	
in	nCol	Color RGB value to draw

Returns

true if success, false if error

9.49.3.18 bool gslc_DrvDrawTxt (gslc_tsGui * pGui, int16_t nTxtX, int16_t nTxtY, gslc_tsFont * pStr, gslc_teTxtFlags eTxtFlags, gslc_tsColor colTxt, gslc_tsColor colBg)

Draw a text string at the given coordinate.

Parameters

in	pGui	Pointer to GUI
in	nTxtX	X coordinate of top-left text string
in	nTxtY	Y coordinate of top-left text string
in	pFont	Ptr to Font
in	pStr	String to display
in	eTxtFlags	Flags associated with text string
in	colTxt	Color to draw text
in	colBg	Color of Background for antialias blending

Returns

true if success, false if failure

9.49.3.19 bool gslc_DrvDrawTxtAlign (gslc_tsGui * pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, int8_t eTxtAlign, gslc_tsFont * pFont, const char * pStr, gslc_teTxtFlags eTxtFlags, gslc_tsColor colTxt, gslc_tsColor colBg)

Draw a text string in a bounding box using the specified alignment.

Parameters

in	pGui	Pointer to GUI
in	nX0	X coordinate of top-left of bounding box
in	nY0	Y coordinate of top-left of bounding box
in	nX1	X coordinate of bot-right of bounding box
in	nY1	Y coordinate of bot-right of bounding box
in	eTxtAlign	Alignment mode]
in	pFont	Ptr to Font
in	pStr	String to display
in	eTxtFlags	Flags associated with text string
in	colTxt	Color to draw text
in	colBg	Color of Background for antialias blending

Returns

true if success, false if failure

9.49.3.20 const void * gslc_DrvFontAdd (gslc_teFontRefType eFontRefType, const void * pvFontRef, uint16_t nFontSz)

Load a font from a resource and return pointer to it.

Parameters

in	eFontRefType	Font reference type:	
		 GSLC_FONTREF_PTR for Standard TFT_eSPI Fonts 	
		GSLC_FONTREF_FNAME for antialiased Font in SPIFFS	
in	pvFontRef	Font reference pointer / SPIFFS font filename without ext.	
in	nFontSz	Typeface size to use, ignored for SPIFFS font	

Returns

Void ptr to driver-specific font if load was successful, NULL otherwise

9.49.3.21 void gslc_DrvFontsDestruct ($gslc_tsGui * pGui$)

Release all fonts defined in the GUI.

Parameters

	in	pGui	Pointer to GUI
--	----	------	----------------

Returns

none

```
9.49.3.22 void* gslc_DrvGetDriverDisp ( gslc_tsGui * pGui )
```

Get the native display driver instance.

• This can be useful to access special commands available in the selected driver.

Parameters

in	pGui	Pointer to GUI
----	------	----------------

Returns

Void pointer to the display driver instance. This pointer should be typecast to the particular driver being used. If no driver was created then this function will return NULL.

```
9.49.3.23 void* gslc_DrvGetDriverTouch ( gslc_tsGui * pGui )
```

Get the native touch driver instance.

• This can be useful to access special commands available in the selected driver.

Parameters

in	pGui	Pointer to GUI
----	------	----------------

Returns

Void pointer to the touch driver instance. This pointer should be typecast to the particular driver being used. If no driver was created then this function will return NULL.

9.49.3.24 const char* gslc_DrvGetNameDisp (gslc_tsGui * pGui)

Get the display driver name.

Parameters

in <i>pGui</i> Pointer to GUI

Returns

String containing driver name

9.49.3.25 const char* gslc_DrvGetNameTouch (gslc_tsGui * pGui)

Get the touch driver name.

Parameters

Returns

String containing driver name

9.49.3.26 bool gslc_DrvGetTxtSize (gslc_tsGui * pGui, gslc_tsFont * pFont, const char * pStr, gslc_teTxtFlags eTxtFlags, int16_t * pnTxtX, int16_t * pnTxtY, uint16_t * pnTxtSzW, uint16_t * pnTxtSzW)

Get the extent (width and height) of a text string.

Parameters

in	pGui	Pointer to GUI
in	pFont	Ptr to Font structure
in	pStr	String to display
in	eTxtFlags	Flags associated with text string
out	pnTxtX	Ptr to offset X of text
out	pnTxtY	Ptr to offset Y of text
out	pnTxtSzW	Ptr to width of text
out	pnTxtSzH	Ptr to height of text

Returns

true if success, false if failure

9.49.3.27 void gslc_DrvImageDestruct (void * pvImg)

Release an image surface.

Parameters

in pvlmg Void ptr to image	in	pvlmg	Void ptr to image
--------------------------------	----	-------	-------------------

Returns

none

```
9.49.3.28 bool gslc_DrvInit ( gslc_tsGui * pGui )
```

Initialize the SDL library.

- Performs clean startup workaround (if enabled)
- · Configures video mode
- · Initializes font support

PRE:

• The environment variables should be configured before calling gslc_DrvInit(). This can be done with gslc_← DrvInitEnv() or manually in user function.

Parameters

in	nGui	Pointer to GUI
T11	ρGui	Folliter to Got

Returns

true if success, false if fail

9.49.3.29 bool gslc_DrvInitTs (gslc_tsGui * pGui, const char * acDev)

Perform any touchscreen-specific initialization.

Parameters

in	pGui	Pointer to GUI	
in	acDev	Device path to touchscreen eg. "/dev/input/touchscreen"	

Returns

true if successful

9.49.3.30 void* gslc_DrvLoadlmage (gslc_tsGui * pGui, gslc_tsImgRef slmgRef)

Load a bitmap (*.bmp) and create a new image resource.

Transparency is enabled by GSLC_BMP_TRANS_EN through use of color (GSLC_BMP_TRANS_RGB).

Parameters

in	pGui	Pointer to GUI
in	sImgRef	Image reference

Returns

Image pointer (surface/texture) or NULL if error

9.49.3.31 void gslc_DrvPageFlipNow (gslc_tsGui * pGui)

Force a page flip to occur.

This generally copies active screen surface to the display.

Parameters

GUI	Pointer to	pGui	in
-----	------------	------	----

Returns

none

9.49.3.32 bool gslc_DrvRotate (gslc_tsGui * pGui, uint8_t nRotation)

Change rotation, automatically adapt touchscreen axes swap/flip.

Parameters

in	pGui	Pointer to GUI
in	nRotation	Screen Rotation value (0, 1, 2 or 3)

Returns

true if successful

9.49.3.33 bool gslc_DrvSetBkgndColor (gslc_tsGui * pGui, gslc_tsColor nCol)

Configure the background to use a solid color.

• The background is used when redrawing the entire page

Parameters

in	pGui	Pointer to GUI
in	nCol	RGB Color to use

Returns

true if success, false if fail

9.49.3.34 bool gslc_DrvSetBkgndlmage (gslc_tsGui * pGui, gslc_tsImgRef slmgRef)

Configure the background to use a bitmap image.

• The background is used when redrawing the entire page

Parameters

in	pGui	Pointer to GUI
in	sImgRef	Image reference

Returns

true if success, false if fail

9.49.3.35 bool gslc_DrvSetClipRect ($gslc_tsGui*pGui, gslc_tsRect*pRect*)$

Set the clipping rectangle for future drawing updates.

Parameters

in	pGui	Pointer to GUI
in	pRect	Rectangular region to constrain edits

Returns

true if success, false if error

9.49.3.36 bool gslc_DrvSetElemImageGlow (gslc_tsGui * pGui, gslc_tsElem * pElem, gslc_tsImgRef sImgRef)

Set an element's glow-state image.

Parameters

i	.n	pGui	Pointer to GUI	
i	n	pElem	Pointer to Element to update	
i	n	sImgRef	Image reference	

Returns

true if success, false if error

9.49.3.37 bool gslc_brvSetElemImageNorm (gslc_tsGui * pGui, gslc_tsElem * pElem, gslc_tsImgRef sImgRef)

Set an element's normal-state image.

Parameters


in	pGui	Pointer to GUI
in	pElem	Pointer to Element to update
in	sImgRef	Image reference

Returns

true if success, false if error

9.50 src/GUIslice_drv_utft.cpp File Reference

#include "GUIslice_config.h"
Include dependency graph for GUIslice_drv_utft.cpp:

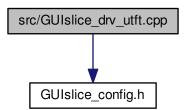


9.51 src/GUIslice_drv_utft.h File Reference

GUIslice library (driver layer for UTFT)

#include "GUIslice.h"
#include <stdio.h>

Include dependency graph for GUIslice_drv_utft.h:

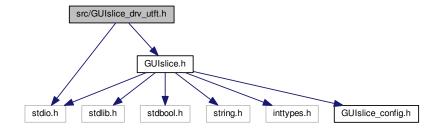

Data Structures

· struct gslc_tsDriver

Macros

• #define DRV_HAS_DRAW_POINT

Support gslc_DrvDrawPoint()

• #define DRV HAS DRAW POINTS

Support gslc_DrvDrawPoints()

#define DRV_HAS_DRAW_LINE

Support gslc_DrvDrawLine()

#define DRV_HAS_DRAW_RECT_FRAME

Support gslc_DrvDrawFrameRect()

• #define DRV_HAS_DRAW_RECT_FILL

Support gslc_DrvDrawFillRect()

• #define DRV_HAS_DRAW_RECT_ROUND_FRAME

Support gslc_DrvDrawFrameRoundRect()

• #define DRV_HAS_DRAW_RECT_ROUND_FILL

Support gslc_DrvDrawFillRoundRect()

• #define DRV_HAS_DRAW_CIRCLE_FRAME

Support gslc_DrvDrawFrameCircle()

• #define DRV_HAS_DRAW_CIRCLE_FILL

Support gslc_DrvDrawFillCircle()

• #define DRV_HAS_DRAW_TRI_FRAME

Support gslc_DrvDrawFrameTriangle()

• #define DRV_HAS_DRAW_TRI_FILL

Support gslc_DrvDrawFillTriangle()

#define DRV_HAS_DRAW_TEXT

Support gslc_DrvDrawTxt()

• #define DRV_HAS_DRAW_BMP_MEM

Support gslc_DrvDrawBmp24FromMem()

• #define DRV_OVERRIDE_TXT_ALIGN

Driver provides text alignment.

Functions

• bool gslc_DrvInit (gslc_tsGui *pGui)

Initialize the SDL library.

• bool gslc_DrvInitTs (gslc_tsGui *pGui, const char *acDev)

Perform any touchscreen-specific initialization.

void gslc DrvDestruct (gslc tsGui *pGui)

Free up any members associated with the driver.

const char * gslc_DrvGetNameDisp (gslc_tsGui *pGui)

Get the display driver name.

• const char * gslc_DrvGetNameTouch (gslc_tsGui *pGui)

Get the touch driver name.

void * gslc_DrvGetDriverDisp (gslc_tsGui *pGui)

Get the native display driver instance.

void * gslc_DrvGetDriverTouch (gslc_tsGui *pGui)

Get the native touch driver instance.

void * gslc_DrvLoadImage (gslc_tsGui *pGui, gslc_tsImgRef sImgRef)

Load a bitmap (*.bmp) and create a new image resource.

• bool gslc_DrvSetBkgndImage (gslc_tsGui *pGui, gslc_tsImgRef sImgRef)

Configure the background to use a bitmap image.

bool gslc DrvSetBkgndColor (gslc tsGui *pGui, gslc tsColor nCol)

Configure the background to use a solid color.

• bool gslc_DrvSetElemImageNorm (gslc_tsGui *pGui, gslc_tsElem *pElem, gslc_tsImgRef sImgRef)

Set an element's normal-state image.

bool gslc_DrvSetElemImageGlow (gslc_tsGui *pGui, gslc_tsElem *pElem, gslc_tsImgRef sImgRef)

Set an element's glow-state image.

void gslc_DrvImageDestruct (void *pvImg)

Release an image surface.

• bool gslc_DrvSetClipRect (gslc_tsGui *pGui, gslc_tsRect *pRect)

Set the clipping rectangle for future drawing updates.

 $\bullet \ \, \text{const void} * \underline{\text{gslc_DrvFontAdd (gslc_teFontRefType eFontRefType, const void}} * \underline{\text{pvFontRef, uint16_t nFontSz)}$

Load a font from a resource and return pointer to it.

void gslc_DrvFontsDestruct (gslc_tsGui *pGui)

Release all fonts defined in the GUI.

 bool gslc_DrvGetTxtSize (gslc_tsGui *pGui, gslc_tsFont *pFont, const char *pStr, gslc_teTxtFlags eTxt← Flags, int16_t *pnTxtX, int16_t *pnTxtY, uint16_t *pnTxtSzW, uint16_t *pnTxtSzH)

Get the extent (width and height) of a text string.

• bool gslc_DrvDrawTxt (gslc_tsGui *pGui, int16_t nTxtX, int16_t nTxtY, gslc_tsFont *pFont, const char *pStr, gslc_teTxtFlags eTxtFlags, gslc_tsColor colTxt, gslc_tsColor colBg)

Draw a text string at the given coordinate.

void gslc_DrvPageFlipNow (gslc_tsGui *pGui)

Force a page flip to occur.

• bool gslc_DrvDrawPoint (gslc_tsGui *pGui, int16_t nX, int16_t nY, gslc_tsColor nCol)

Draw a point

bool gslc_DrvDrawPoints (gslc_tsGui *pGui, gslc_tsPt *asPt, uint16_t nNumPt, gslc_tsColor nCol)

Draw a point.

bool gslc_DrvDrawFrameRect (gslc_tsGui *pGui, gslc_tsRect rRect, gslc_tsColor nCol)

Draw a framed rectangle.

• bool gslc_DrvDrawFillRect (gslc_tsGui *pGui, gslc_tsRect rRect, gslc_tsColor nCol)

Draw a filled rectangle.

bool gslc_DrvDrawFrameRoundRect (gslc_tsGui *pGui, gslc_tsRect rRect, int16_t nRadius, gslc_tsColor n←
 Col)

Draw a framed rounded rectangle.

• bool gslc_DrvDrawFillRoundRect (gslc_tsGui *pGui, gslc_tsRect rRect, int16_t nRadius, gslc_tsColor nCol)

Draw a filled rounded rectangle.

bool gslc_DrvDrawLine (gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, gslc_tsColor nCol)

Draw a line.

bool gslc_DrvDrawFrameCircle (gslc_tsGui *pGui, int16_t nMidX, int16_t nMidY, uint16_t nRadius, gslc_ts←
 Color nCol)

Draw a framed circle.

bool gslc_DrvDrawFillCircle (gslc_tsGui *pGui, int16_t nMidX, int16_t nMidY, uint16_t nRadius, gslc_tsColor nCol)

Draw a filled circle.

• bool gslc_DrvDrawFrameTriangle (gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, int16_t nX2, int16_t nY2, gslc_tsColor nCol)

Draw a framed triangle.

• bool gslc_DrvDrawFillTriangle (gslc_tsGui *pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, int16_t nX2, int16_t nY2, gslc_tsColor nCol)

Draw a filled triangle.

bool gslc_DrvDrawImage (gslc_tsGui *pGui, int16_t nDstX, int16_t nDstY, gslc_tsImgRef sImgRef)

Copy all of source image to destination screen at specified coordinate.

 void gslc_DrvDrawMonoFromMem (gslc_tsGui *pGui, int16_t nDstX, int16_t nDstY, const unsigned char *p← Bitmap, bool bProgMem)

Draw a monochrome bitmap from a memory array.

 void gslc_DrvDrawBmp24FromMem (gslc_tsGui *pGui, int16_t nDstX, int16_t nDstY, const unsigned char *pBitmap, bool bProgMem)

Draw a color 24-bit depth bitmap from a memory array.

void gslc_DrvDrawBkgnd (gslc_tsGui *pGui)

Copy the background image to destination screen.

• bool gslc_DrvInitTouch (gslc_tsGui *pGui, const char *acDev)

Perform any touchscreen-specific initialization.

bool gslc_DrvGetTouch (gslc_tsGui *pGui, int16_t *pnX, int16_t *pnY, uint16_t *pnPress, gslc_teInputRaw←
 Event *peInputEvent, int16_t *pnInputVal)

Get the last touch event from the internal touch handler.

• bool gslc_DrvRotate (gslc_tsGui *pGui, uint8_t nRotation)

Change rotation, automatically adapt touchscreen axes swap/flip.

uint16_t gslc_DrvAdaptColorToRaw (gslc_tsColor nCol)

9.51.1 Detailed Description

GUIslice library (driver layer for UTFT)

9.51.2 Macro Definition Documentation

9.51.2.1 #define DRV_HAS_DRAW_BMP_MEM

Support gslc_DrvDrawBmp24FromMem()

Generated by Doxygen

```
9.51.2.2 #define DRV_HAS_DRAW_CIRCLE_FILL
Support gslc_DrvDrawFillCircle()
9.51.2.3 #define DRV_HAS_DRAW_CIRCLE_FRAME
Support gslc_DrvDrawFrameCircle()
9.51.2.4 #define DRV_HAS_DRAW_LINE
Support gslc_DrvDrawLine()
9.51.2.5 #define DRV_HAS_DRAW_POINT
Support gslc_DrvDrawPoint()
9.51.2.6 #define DRV_HAS_DRAW_POINTS
Support gslc_DrvDrawPoints()
9.51.2.7 #define DRV_HAS_DRAW_RECT_FILL
Support gslc_DrvDrawFillRect()
9.51.2.8 #define DRV_HAS_DRAW_RECT_FRAME
Support gslc_DrvDrawFrameRect()
9.51.2.9 #define DRV_HAS_DRAW_RECT_ROUND_FILL
Support gslc_DrvDrawFillRoundRect()
9.51.2.10 #define DRV_HAS_DRAW_RECT_ROUND_FRAME
Support gslc_DrvDrawFrameRoundRect()
9.51.2.11 #define DRV_HAS_DRAW_TEXT
Support gslc_DrvDrawTxt()
```

9.51.2.12 #define DRV_HAS_DRAW_TRI_FILL

Support gslc_DrvDrawFillTriangle()

9.51.2.13 #define DRV_HAS_DRAW_TRI_FRAME

Support gslc_DrvDrawFrameTriangle()

9.51.2.14 #define DRV_OVERRIDE_TXT_ALIGN

Driver provides text alignment.

9.51.3 Function Documentation

9.51.3.1 uint16_t gslc_DrvAdaptColorToRaw (gslc_tsColor nCol)

9.51.3.2 void gslc_DrvDestruct (gslc_tsGui * pGui)

Free up any members associated with the driver.

• Eg. renderers, windows, background surfaces, etc.

Parameters

in	pGui	Pointer to GUI
----	------	----------------

Returns

none

9.51.3.3 void gslc_DrvDrawBkgnd (gslc_tsGui * pGui)

Copy the background image to destination screen.

Parameters

in	pGui	Pointer to GUI

Returns

true if success, false if fail

9.51.3.4 void gslc_DrvDrawBmp24FromMem (gslc_tsGui * pGui, int16_t nDstX, int16_t nDstY, const unsigned char * pBitmap, bool bProgMem)

Draw a color 24-bit depth bitmap from a memory array.

- Note that users must convert images from their native format (eg. BMP, PNG, etc.) into a C array. Please refer to the following guide for details: https://github.com/ImpulseAdventure/GU← Islice/wiki/Display-Images-from-FLASH
- The converted file (c array) can then be included in the sketch.

Parameters

in	pGui	Pointer to GUI
in	nDstX	X coord for copy
in	nDstY	Y coord for copy
in	pBitmap	Pointer to bitmap buffer
in	bProgMem	Bitmap is stored in Flash if true, RAM otherwise

Returns

none

9.51.3.5 bool gslc_DrvDrawFillCircle (gslc_tsGui * pGui, int16_t nMidX, int16_t nMidY, uint16_t nRadius, gslc_tsColor nCol)

Draw a filled circle.

Parameters

in	pGui	Pointer to GUI
in	nMidX	Center of circle (X coordinate)
in	nMidY	Center of circle (Y coordinate)
in	nRadius	Radius of circle
in	nCol	Color RGB value to fill

Returns

true if success, false if error

9.51.3.6 bool gslc_DrvDrawFillRect (gslc_tsGui * pGui, gslc_tsRect rRect, gslc_tsColor nCol)

Draw a filled rectangle.

in	pGui	Pointer to GUI
in	rRect	Rectangular region to fill
Generat	ed/ biClo dxy	eColor RGB value to fill

Returns

true if success, false if error

9.51.3.7 bool gslc_DrvDrawFillRoundRect (gslc_tsGui * pGui, gslc_tsRect rRect, int16_t nRadius, gslc_tsColor nCol)

Draw a filled rounded rectangle.

Parameters

in	pGui	Pointer to GUI
in	rRect	Rectangular region to fill
in	nRadius	Radius for rounded corners
in	nCol	Color RGB value to fill

Returns

true if success, false if error

9.51.3.8 bool gslc_DrvDrawFillTriangle (gslc_tsGui * pGui, int16_t nX0, int16_t nY0, int16_t nX1, int

Draw a filled triangle.

Parameters

in	pGui	Pointer to GUI
in	nX0	X Coordinate #1
in	nY0	Y Coordinate #1
in	nX1	X Coordinate #2
in	nY1	Y Coordinate #2
in	nX2	X Coordinate #3
in	nY2	Y Coordinate #3
in	nCol	Color RGB value to fill

Returns

true if success, false if error

9.51.3.9 bool gslc_DrvDrawFrameCircle ($gslc_tsGui * pGui$, int16_t nMidX, int16_t nMidY, uint16_t nRadius, $gslc_tsColor nCol$)

Draw a framed circle.

in	pGui	Pointer to GUI

Parameters

in	nMidX	Center of circle (X coordinate)
in	nMidY	Center of circle (Y coordinate)
in	nRadius	Radius of circle
in	nCol	Color RGB value to frame

Returns

true if success, false if error

9.51.3.10 bool gslc_DrvDrawFrameRect (gslc_tsGui * pGui, gslc_tsRect rRect, gslc_tsColor nCol)

Draw a framed rectangle.

Parameters

in	pGui	Pointer to GUI
in	rRect	Rectangular region to frame
in	nCol	Color RGB value to frame

Returns

true if success, false if error

9.51.3.11 bool gslc_DrvDrawFrameRoundRect (gslc_tsGui * pGui, gslc_tsRect rRect, int16_t nRadius, gslc_tsColor nCol)

Draw a framed rounded rectangle.

Parameters

in	pGui	Pointer to GUI
in	rRect	Rectangular region to frame
in	nRadius	Radius for rounded corners
in	nCol	Color RGB value to frame

Returns

true if success, false if error

9.51.3.12 bool gslc_DrvDrawFrameTriangle (gslc_tsGui * pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, int16_t nX2, int16_t nY2, gslc_tsColor nCol)

Draw a framed triangle.

Parameters

in	pGui	Pointer to GUI
in	nX0	X Coordinate #1
in	nY0	Y Coordinate #1
in	nX1	X Coordinate #2
in	nY1	Y Coordinate #2
in	nX2	X Coordinate #3
in	nY2	Y Coordinate #3
in	nCol	Color RGB value to frame

Returns

true if success, false if error

9.51.3.13 bool gslc_DrvDrawlmage ($gslc_tsGui*pGui$, int16_t nDstX, int16_t nDstX, gslc_tslmgRef slmgRef)

Copy all of source image to destination screen at specified coordinate.

Parameters

in	pGui	Pointer to GUI
in	nDstX	Destination X coord for copy
in	nDstY	Destination Y coord for copy
in	sImgRef	Image reference

Returns

true if success, false if fail

9.51.3.14 bool gslc_DrvDrawLine (gslc_tsGui * pGui, int16_t nX0, int16_t nY0, int16_t nX1, int16_t nY1, gslc_tsColor nCol)

Draw a line.

in	pGui	Pointer to GUI
in	nX0	Line start (X coordinate)
in	nY0	Line start (Y coordinate)
in	nX1	Line finish (X coordinate)
in	nY1	Line finish (Y coordinate)
in	nCol	Color RGB value to draw

Returns

true if success, false if error

9.51.3.15 void gslc_DrvDrawMonoFromMem (gslc_tsGui * pGui, int16_t nDstX, int16_t nDstY, const unsigned char * pBitmap, bool bProgMem)

Draw a monochrome bitmap from a memory array.

· Draw from the bitmap buffer using the foreground color defined in the header (unset bits are transparent)

Parameters

in	pGui	Pointer to GUI
in	nDstX	Destination X coord for copy
in	nDstY	Destination Y coord for copy
in	pBitmap	Pointer to bitmap buffer
in	bProgMem	Bitmap is stored in Flash if true, RAM otherwise

Returns

none

9.51.3.16 bool gslc_DrvDrawPoint (gslc_tsGui * pGui, int16_t nX, int16_t nY, gslc_tsColor nCol)

Draw a point.

Parameters

in	pGui Pointer to GUI	
in	nX X coordinate of point	
in	nY Y coordinate of point	
in	nCol	Color RGB value to draw

Returns

true if success, false if error

9.51.3.17 bool gslc_DrvDrawPoints ($gslc_tsGui*pGui*pGui*, gslc_tsPt*asPt*, uint16_t nNumPt*, gslc_tsColor nCol*)$

Draw a point.

in	pGui	Pointer to GUI

Parameters

in	asPt	Array of points to draw
in	n⊷	Number of points in array
	NumPt	
in	nCol	Color RGB value to draw

Returns

true if success, false if error

9.51.3.18 bool gslc_DrvDrawTxt (gslc_tsGui * pGui, int16_t nTxtX, int16_t nTxtY, gslc_tsFont * pFont, const char * pStr, gslc_teTxtFlags eTxtFlags, gslc_tsColor colTxt, gslc_tsColor colBg)

Draw a text string at the given coordinate.

Parameters

in	pGui	Pointer to GUI	
in	nTxtX	X coordinate of top-left text string	
in	nTxtY	Y coordinate of top-left text string	
in	pFont	Ptr to Font	
in	pStr	String to display	
in	eTxtFlags	Flags associated with text string	
in	colTxt	Color to draw text	
in	colBg	unused in ADAGFX, defaults to black	

Returns

true if success, false if failure

 $9.51.3.19 \quad const\ void*\ gslc_DrvFontAdd\ (\ gslc_teFontRefType\ \textit{eFontRefType},\ const\ void*\ \textit{pvFontRef},\ uint16_t\ \textit{nFontSz}\)$

Load a font from a resource and return pointer to it.

Parameters

in	eFontRefType	Font reference type (GSLC_FONTREF_PTR for Arduino)
in	pvFontRef	Font reference pointer (Pointer to the GFXFont array)
in	nFontSz	Typeface size to use

Returns

Void ptr to driver-specific font if load was successful, NULL otherwise

9.51.3.20 void gslc_DrvFontsDestruct (gslc_tsGui * pGui)

Release all fonts defined in the GUI.

Parameters

in	pGui	Pointer to GUI
----	------	----------------

Returns

none

```
9.51.3.21 void* gslc_DrvGetDriverDisp ( gslc_tsGui * pGui )
```

Get the native display driver instance.

• This can be useful to access special commands available in the selected driver.

Parameters

in <i>pGu</i>	ii Pointer to GUI
---------------	-------------------

Returns

Void pointer to the display driver instance. This pointer should be typecast to the particular driver being used. If no driver was created then this function will return NULL.

```
9.51.3.22 void* gslc_DrvGetDriverTouch ( gslc_tsGui * pGui )
```

Get the native touch driver instance.

• This can be useful to access special commands available in the selected driver.

Parameters

in	pGui	Pointer to GUI

Returns

Void pointer to the touch driver instance. This pointer should be typecast to the particular driver being used. If no driver was created then this function will return NULL.

9.51.3.23 const char* gslc_DrvGetNameDisp (gslc_tsGui * pGui)

Get the display driver name.

Parameters

in	pGui	Pointer to GUI

Returns

String containing driver name

9.51.3.24 const char* gslc_DrvGetNameTouch (gslc_tsGui * pGui)

Get the touch driver name.

Parameters

in <i>pGui</i>	Pointer to GUI
----------------	----------------

Returns

String containing driver name

9.51.3.25 bool gslc_DrvGetTouch (gslc_tsGui * pGui, int16_t * pnX, int16_t * pnY, uint16_t * pnPress, gslc_teInputRawEvent * peInputEvent, int16_t * pnInputVal)

Get the last touch event from the internal touch handler.

Parameters

in	pGui	Pointer to GUI
out	pnX	Ptr to X coordinate of last touch event
out	pnY	Ptr to Y coordinate of last touch event
out	pnPress	Ptr to Pressure level of last touch event (0 for none, 1 for touch)
out	peInputEvent	Indication of event type
out	pnInputVal	Additional data for event type

Returns

true if an event was detected or false otherwise

9.51.3.26 bool gslc_DrvGetTxtSize (gslc_tsGui * pGui, gslc_tsFont * pFont, const char * pStr, gslc_teTxtFlags eTxtFlags, int16_t * pnTxtX, int16_t * pnTxtY, uint16_t * pnTxtSzW, uint16_t * pnTxtSzW)

Get the extent (width and height) of a text string.

in	pGui	Pointer to GUI

Parameters

in	pFont	Ptr to Font structure
in	pStr	String to display
in	eTxtFlags	Flags associated with text string
out	pnTxtX	Ptr to offset X of text
out	pnTxtY	Ptr to offset Y of text
out	pnTxtSzW	Ptr to width of text
out	pnTxtSzH	Ptr to height of text

Returns

true if success, false if failure

9.51.3.27 void gslc_DrvImageDestruct (void * pvImg)

Release an image surface.

Parameters

in	pvlmg	Void ptr to image
----	-------	-------------------

Returns

none

9.51.3.28 bool gslc_DrvInit (gslc_tsGui * pGui)

Initialize the SDL library.

- Performs clean startup workaround (if enabled)
- · Configures video mode
- · Initializes font support

PRE:

• The environment variables should be configured before calling gslc_DrvInit(). This can be done with gslc_← DrvInitEnv() or manually in user function.

in <i>pGui</i>	Pointer to GUI
----------------	----------------

Returns

true if success, false if fail

9.51.3.29 bool gslc_DrvInitTouch (gslc_tsGui * pGui, const char * acDev)

Perform any touchscreen-specific initialization.

Parameters

in	pGui	Pointer to GUI	
in	acDev	Device path to touchscreen eg. "/dev/input/touchscreen"	

Returns

true if successful

9.51.3.30 bool gslc_DrvInitTs ($gslc_tsGui * pGui$, const char * acDev)

Perform any touchscreen-specific initialization.

Parameters

in	pGui	Pointer to GUI	
in	acDev	Device path to touchscreen eg. "/dev/input/touchscreen	

Returns

true if successful

9.51.3.31 void* gslc_DrvLoadlmage ($gslc_tsGui*pGui*, gslc_tslmgRef*slmgRef*)$

Load a bitmap (*.bmp) and create a new image resource.

Transparency is enabled by GSLC_BMP_TRANS_EN through use of color (GSLC_BMP_TRANS_RGB).

Parameters

in	pGui	Pointer to GUI
in	sImgRef	Image reference

Returns

Image pointer (surface/texture) or NULL if error

9.51.3.32 void gslc_DrvPageFlipNow (gslc_tsGui * pGui)

Force a page flip to occur.

This generally copies active screen surface to the display.

Parameters

in pGui Pointer to GU

Returns

none

9.51.3.33 bool gslc_DrvRotate (gslc_tsGui * pGui, uint8_t nRotation)

Change rotation, automatically adapt touchscreen axes swap/flip.

Parameters

in	pGui	Pointer to GUI
in	nRotation	Screen Rotation value (0, 1, 2 or 3)

Returns

true if successful

9.51.3.34 bool gslc_DrvSetBkgndColor ($gslc_tsGui*pGui, gslc_tsColor nCol$)

Configure the background to use a solid color.

• The background is used when redrawing the entire page

Parameters

in	pGui	Pointer to GUI
in	nCol	RGB Color to use

Returns

true if success, false if fail

9.51.3.35 bool gslc_DrvSetBkgndlmage (gslc_tsGui * pGui, gslc_tsImgRef slmgRef)

Configure the background to use a bitmap image.

• The background is used when redrawing the entire page

Parameters

in	pGui	Pointer to GUI
in	sImgRef	Image reference

Returns

true if success, false if fail

9.51.3.36 bool gslc_DrvSetClipRect ($gslc_tsGui*pGui, gslc_tsRect*pRect$)

Set the clipping rectangle for future drawing updates.

Parameters

	in	pGui	Pointer to GUI
ſ	in	pRect	Rectangular region to constrain edits

Returns

true if success, false if error

9.51.3.37 bool gslc_brvSetElemImageGlow (gslc_tsGui * pGui, gslc_tsElem * pElem, gslc_tsImgRef sImgRef)

Set an element's glow-state image.

Parameters

in	pGui	Pointer to GUI
in	pElem	Pointer to Element to update
in	sImgRef	Image reference

Returns

true if success, false if error

9.51.3.38 bool gslc_DrvSetElemImageNorm ($gslc_tsGui*pGui*, gslc_tsElem*pElem*, gslc_tsImgRef* sImgRef*)$

Set an element's normal-state image.

l	in	pGui	Pointer to GUI
	in	pElem	Pointer to Element to update
	Generat 1 N	ed by Doxygen SIMgRef	Image reference


Returns

true if success, false if error

src/GUIslice_ex.h File Reference 9.52


```
#include "GUIslice.h"
#include "elem/XCheckbox.h"
#include "elem/XGauge.h"
#include "elem/XGraph.h"
#include "elem/XSelNum.h"
#include "elem/XSlider.h"
#include "elem/XTextbox.h"
```

Include dependency graph for GUIslice_ex.h:

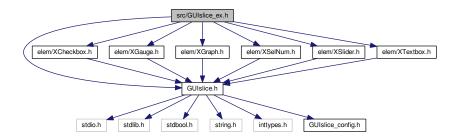

src/GUIslice_th.cpp File Reference 9.53

```
#include "GUIslice_th.h"
Include dependency graph for GUIslice_th.cpp:
```

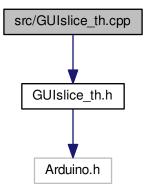


Functions

- void gslc_InitTouchHandler (TouchHandler *pTH)
- TouchHandler * gslc_getTouchHandler (void)


Variables

- TouchHandler * pTouchHandler
- 9.53.1 Function Documentation
- 9.53.1.1 TouchHandler* gslc_getTouchHandler(void)
- 9.53.1.2 void gslc_InitTouchHandler (TouchHandler * pTH)
- 9.53.2 Variable Documentation
- 9.53.2.1 TouchHandler* pTouchHandler
- 9.54 src/GUIslice_th.h File Reference

#include <Arduino.h>
Include dependency graph for GUIslice_th.h:

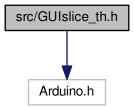

This graph shows which files directly or indirectly include this file:

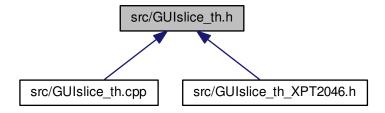

Data Structures

- · class THPoint
- · class TouchHandler

Functions

- void gslc_InitTouchHandler (TouchHandler *pTHO)
- TouchHandler * gslc_getTouchHandler (void)

9.54.1 Function Documentation


```
9.54.1.1 TouchHandler* gslc_getTouchHandler( void )
```

9.54.1.2 void gslc_InitTouchHandler (TouchHandler * pTHO)

9.55 src/GUIslice_th_XPT2046.h File Reference

```
#include <Arduino.h>
#include <GUIslice_th.h>
#include <XPT2046_touch.h>
```

Include dependency graph for GUIslice_th_XPT2046.h:

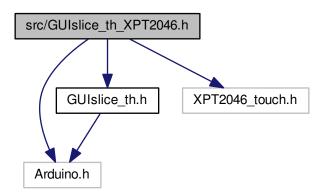


Data Structures

• class TouchHandler_XPT2046

9.56 src/GUIslice_version.h File Reference

This graph shows which files directly or indirectly include this file:

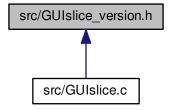

Macros

• #define GUISLICE_VER

9.56.1 Macro Definition Documentation

9.56.1.1 #define GUISLICE_VER