ARM Instructions


```
// Program to turn on an LED on GPIO 20
ldr r0, =0x20200008; FSEL2 register
               ; GPI020 Output
mov r1, #1
str r1, [r0]
ldr r0, =0x2020001C ; SET0 register
mov r1, #(1<<20); Bit 20 / GPI020
str r1, [r0]
```

3 Types of Instructions

- 1. Data processing instructions
- 2. Loads from and stores to memory
- 3. Branches to new program locations

Architecture is quite simple

Data Processing Instructions

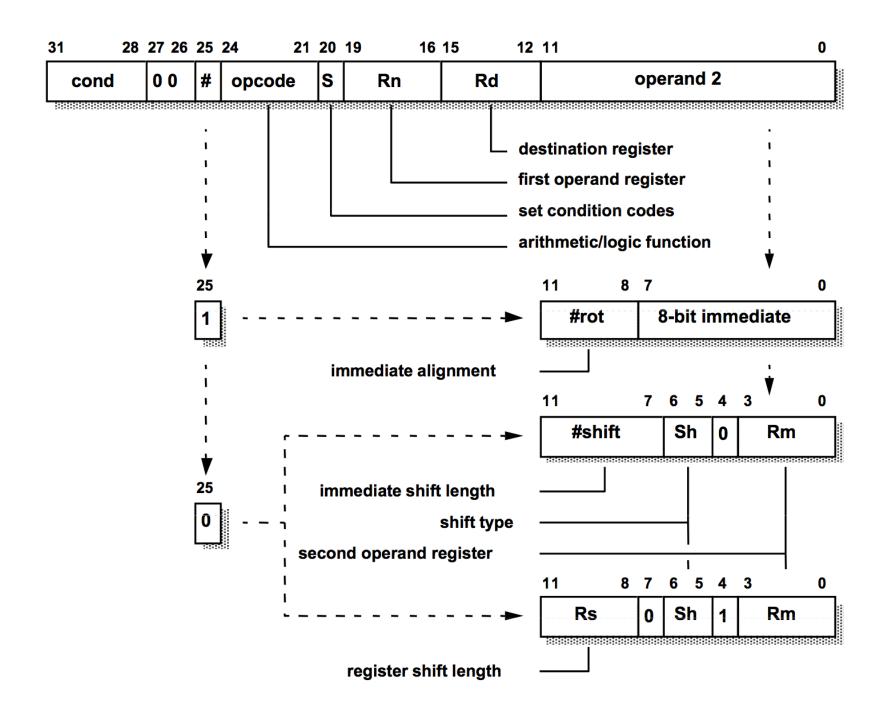

From ARM architecture manual ...

```
# data processing instruction
# ra = rb op #imm
# #imm = uuuu uuuu
```


op rb ra 1110 00 1 0000 0 bbbb aaaa 0000 uuuu uuuu


Assembler Mnemonic	OpCode	Action		
AND	0000	operand1 AND operand2		
EOR	0001	operand1 EOR operand2		
SUB	0010	operand1 - operand2		
RSB	0011	operand2 - operand1		
ADD	0100	operand1 + operand2		
ADC	0101	operand1 + operand2 + carry		
SBC	0110	operand1 - operand2 + carry - 1		
RSC	0111	operand2 - operand1 + carry - 1		
TST	1000	as AND, but result is not written		
TEQ	1001	as EOR, but result is not written		
CMP	1010	as SUB, but result is not written		
CMN	1011	as ADD, but result is not written		
ORR	1100	operand1 OR operand2		
MOV	1101	operand2(operand1 is ignored)		
BIC	1110	operand1 AND NOT operand2(Bit clear)		
MVN	1111	NOT operand2(operand1 is ignored)		

```
# data processing instruction
# ra = rb op #imm
# #imm = uuuu uuuu
```


```
# data processing instruction
# ra = rb op #imm
# #imm = uuuu uuuu
         op rb ra
1110 00 1 oooo 0 bbbb aaaa 0000 uuuu uuuu
add r1, r0, #1
         add r0 r1
                                    #1
1110 00 1 0100 0 0000 0001 0000 0000 0001
1110 0010 1000 0000 0001 0000 0000 0001
            8
               0 1 0 0
```

```
const int ADD = 0x04;
// compile data processing instruction
// with immediate
int dataprocinst(
    int op, int ra, int rb, int imm )
    int inst = 0xE2000000;
    inst = (op << 20);
    inst |= (rb<<16)|(ra<<12)|imm;
    return inst;
inst = dataprocinst(ADD, 1, 0, 1);
```

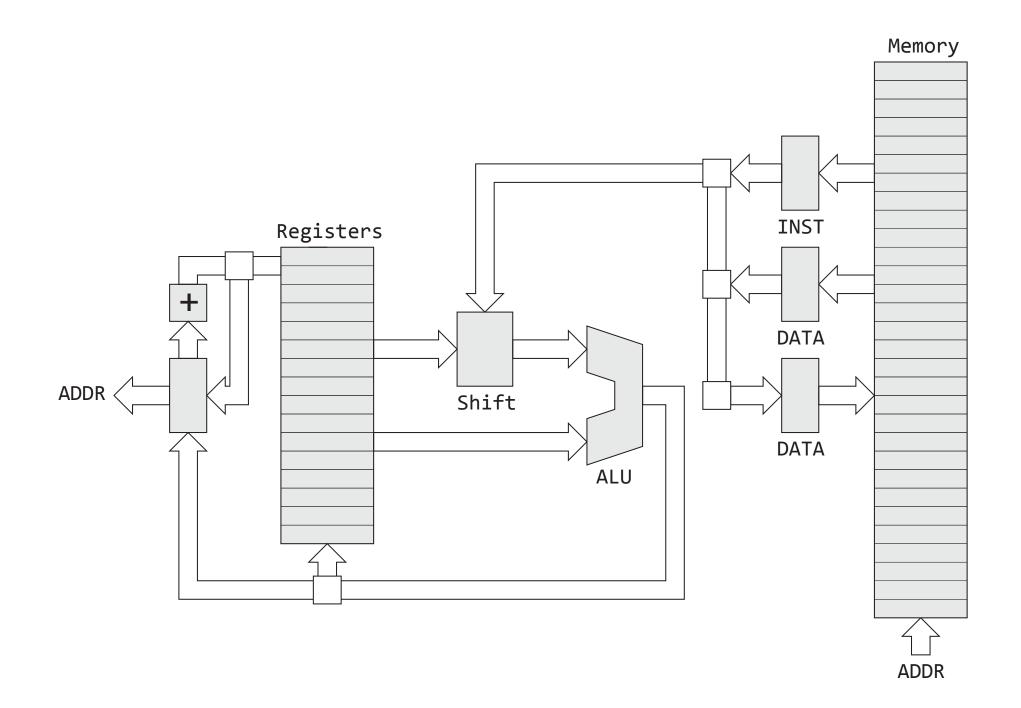

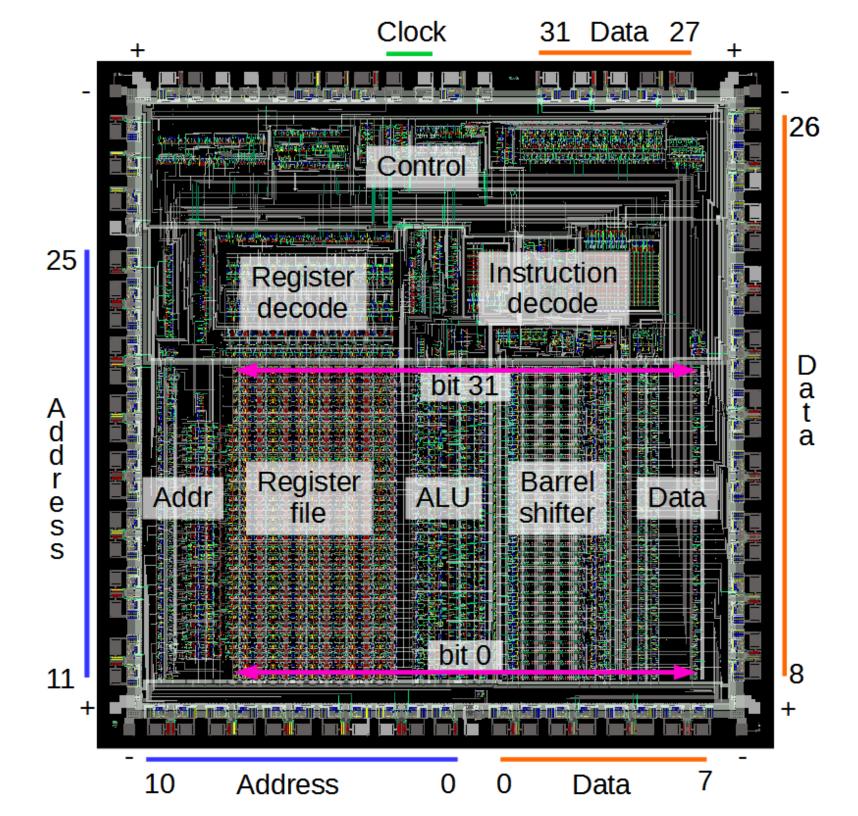

Rotate Right

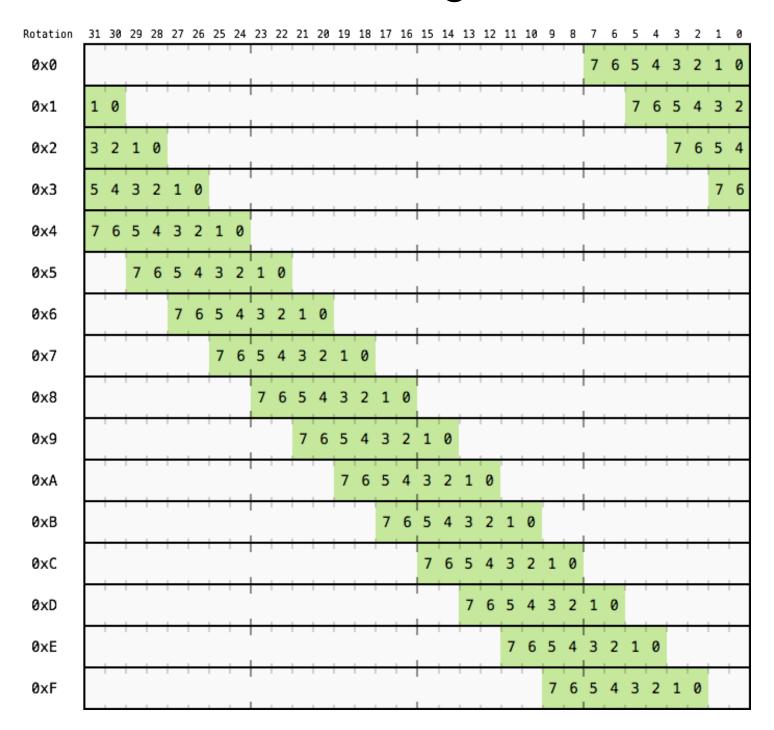

```
# data processing instruction
# ra = rb op imm
# imm = (uuuu uuuu) ROR (2*iii)
         op rb ra rot
1110 00 1 oooo 0 bbbb aaaa iiii uuuu uuuu
add r1, r0, #0x10000
         add r0 r1 rot 0x10000
```

1110 00 1 0100 0 0000 0001 1000 0000 0001

```
# data processing instruction
# ra = rb op imm
# imm = (uuuu uuuu) ROR (2*iii)
         op rb ra rot
1110 00 1 oooo 0 bbbb aaaa iiii uuuu uuuu
add r1, r0, #0x10000
         add r0 r1 rot #0x10000
1110 00 1 0100 0 0000 0001 1000 0000 0001
1110 0010 1000 0000 0001 1000 0000 0001
  E 2 8 0 1 8
```

```
# Determine the machine code for sub r7, r5, #0x300
```

imm = (uuuu uuuu) ROR (2*iiii)

Remember that ra is the result

op rb ra 1110 00 1 oooo 0 bbbb aaaa iiii uuuu uuuu


```
# data processing instruction
# ra = rb op imm
# imm = uuuu uuuu ROR (2*iiii)
        op rb ra rot
1110 00 1 oooo 0 bbbb aaaa iiii uuuu uuuu
sub r7, r5, #0x300
         sub r5 r7 rot #0x300
1110 00 1 0010 0 0101 0111 0100 0000 0011
1110 0010 0100 0101 0111 0100 1100 0011
  E 2 4 5 7 4 C
```

```
// Example: Replace
1dr r0, =0x20200008
// with
mov r0, #0x2000000
orr r0, r0, #0x00200000
orr r0, r0, #0x00000008
```

Condition Codes

```
// loop
mov r2, #0x3F0000
loop: // colon indicates a label
    subs r2, r2, #1 // set cond code
    bne loop
// A label is just a constant address
```

```
# data processing instruction
# ra = rb op imm
# imm = uuuu uuuu ROR (2*iiii)
# s=1 means set condition code
        op s rb ra
1110 00 1 oooo s bbbb aaaa iiii uuuu uuuu
subs r2, r2, #1
        sub s r2 r2
E2 52 20 01
```

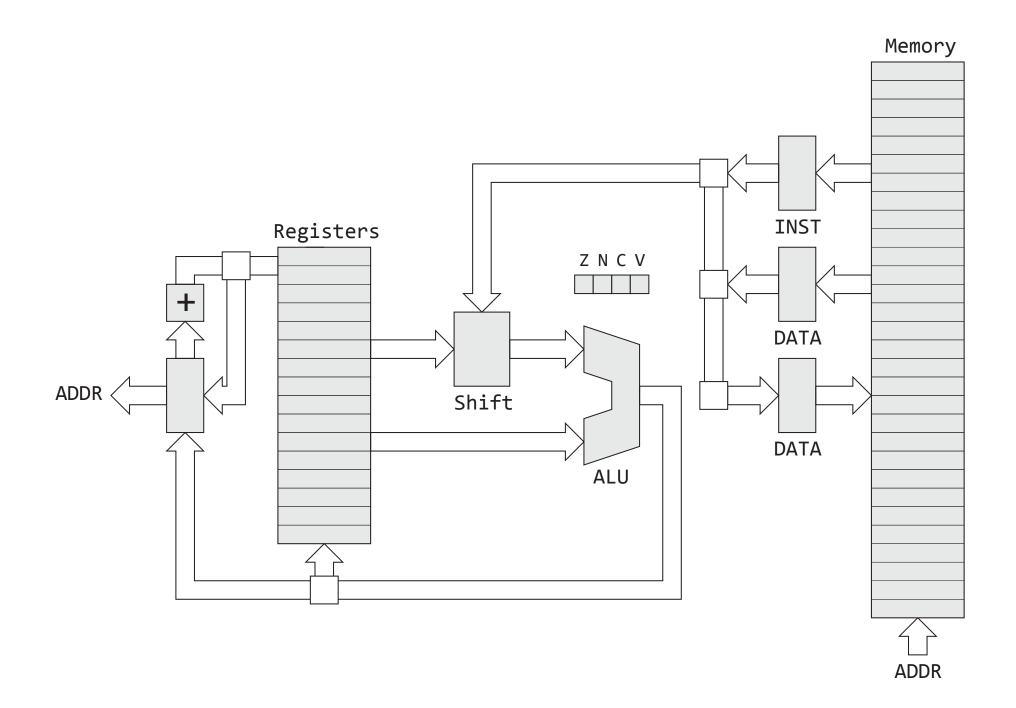

Condition Codes

Z - Result is O

N - Result is <0

C - Carry generated

V - Arithmetic overflow

```
# branch
cccc addr
cccc 101L oooo oooo oooo oooo oooo
b = bal = branch always
cccc addr
1110 101L oooo oooo oooo oooo oooo
```

bne cccc addr 0001 101L 0000 0000 0000 0000 0000

```
# data processing instruction
# ra = rb op #imm
# #imm = uuuu uuuu ROR (2*iii)
#
# Predicated execution:
# if condition is true
#
```

red op rb ra
cccc 00 1 oooo s bbbb aaaa iiii uuuu uuuu

Code	Suffix	Flags	Meaning	
0000	EQ	Z set equal		
0001	NE	Z clear	not equal	
0010	cs	C set	unsigned higher or same	
0011	CC	C clear	unsigned lower	
0100	MI	N set	negative	
0101	PL	N clear	positive or zero	
0110	VS	V set	overflow	
0111	VC	V clear	no overflow	
1000	н	C set and Z clear	unsigned higher	
1001	LS	C clear or Z set	unsigned lower or same	
1010	GE	N equals V	greater or equal	
1011	LT	N not equal to V	less than	
1100	GT	Z clear AND (N equals V)	greater than	
1101	LE	Z set OR (N not equal to V)	less than or equal	
1110	AL	(ignored)	always	

Orthogonal Instructions

Any operation

Register vs. immediate operands

All registers the same**

Predicated/conditional execution

Set or not set condition code

Orthogonality leads to composability

Blink

```
// Configure GPIO 20 for OUTPUT
loop:
 // Turn on LED
 // delay
 // Turn off LED
 // delay
 b loop
```

```
// Program to turn on an LED
// Setup GPIO 20
1dr r0, =0x20200008
mov r1, #1
str r1, [r0]
// Bit 20 for GPIO 20
mov r1, #(1<<20)
```


•••


```
// r0 points to GPIO SET0 register
1dr r0, =0x2020001C
str r1, [r0]
// delay
mov r2, #0x3F0000
wait1:
    subs r2, #1
    bne wait1
```


•••

```
// r0 points to GPIO CLR0 register
1dr r0, =0x20200028
str r1, [r0]
// delay
mov r2, #0x3F0000
wait2:
   sub r2, #1
   bne wait2
```

Load/Store Instructions

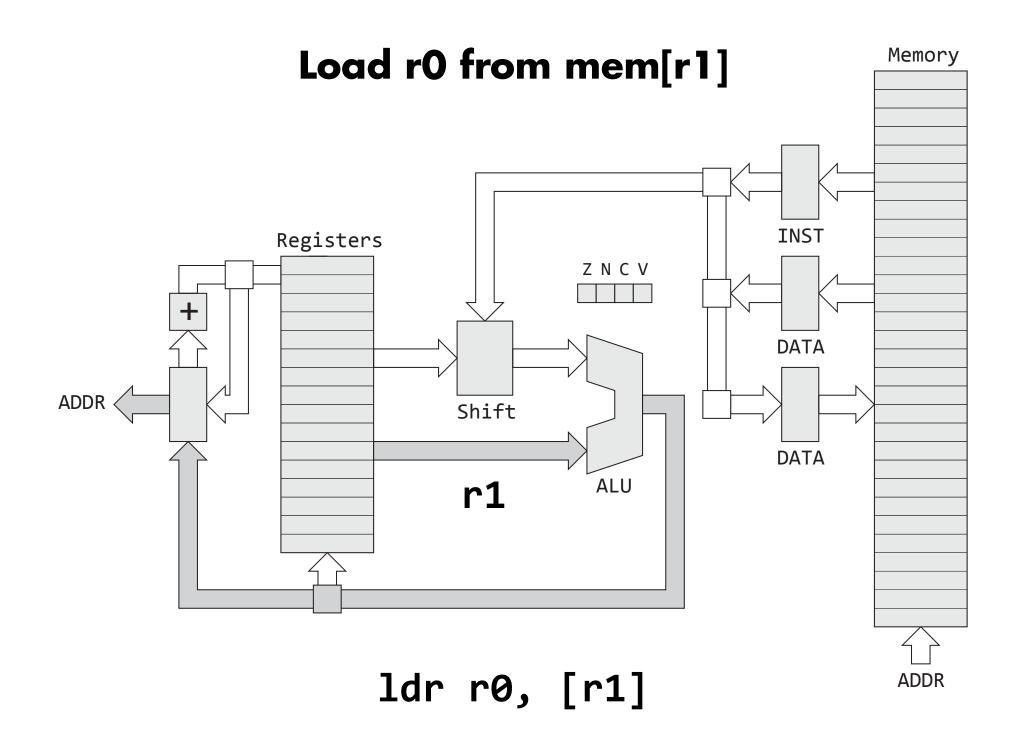

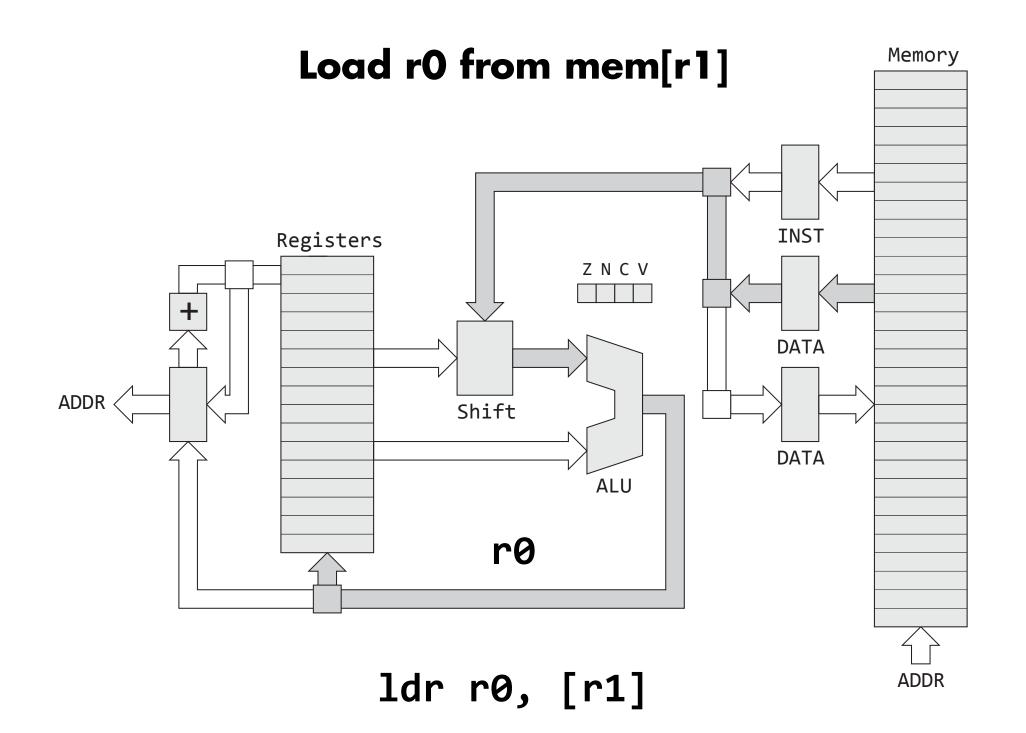

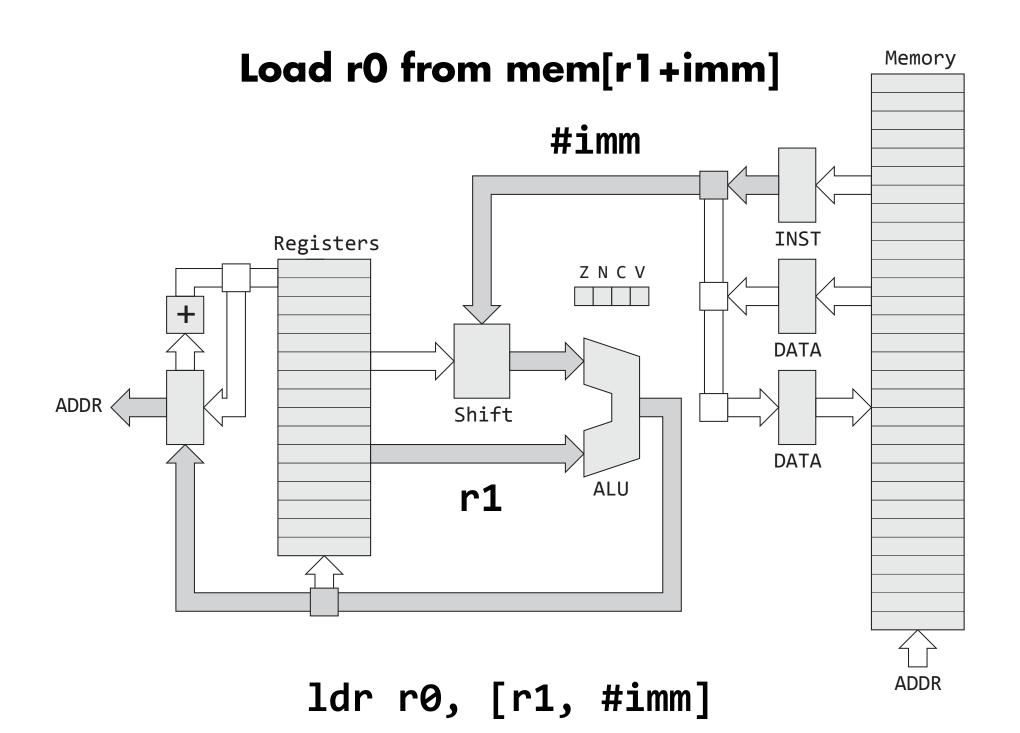

```
// Program to turn on an LED on GPIO 20
1dr r0, =0x20200008
mov r1, #1
str r1, [r0]
1dr r0, =0x2020001C
mov r1, #(1<<20)
str r1, [r0]
```

```
// Program to turn on an LED on GPIO 20
1dr r0, =0x20200000
mov r1, #1
str r1, [r0, #0x08]
mov r1, #(1<<20)
str r1, [r0, #0x1C]
```

// PC relative addressing

```
0: e59f0014
              ldr r0, [pc, #0x14]
4: e3a01001
              mov r1, #1
8: e5801000 str r1, [r0]
              ldr r0, [pc, #0x0c]
c: e59f000c
              mov r1, #0x100000
10: e3a01601
14: e5801000 str r1, [r0]
18: eafffffe b 18
1c: 20200008
20: 2020001c
```


// PC relative addressing

```
0: e59f0014
              ldr r0, [pc, #0x14]
              mov r1, #1
4: e3a01001
8: e5801000 str r1, [r0]
              ldr r0, [pc, #0x0c]
c: e59f000c
              mov r1, #0x100000
10: e3a01601
14: e5801000 str r1, [r0]
```

18: eafffffe b 18

1c: 20200008

20: 2020001c

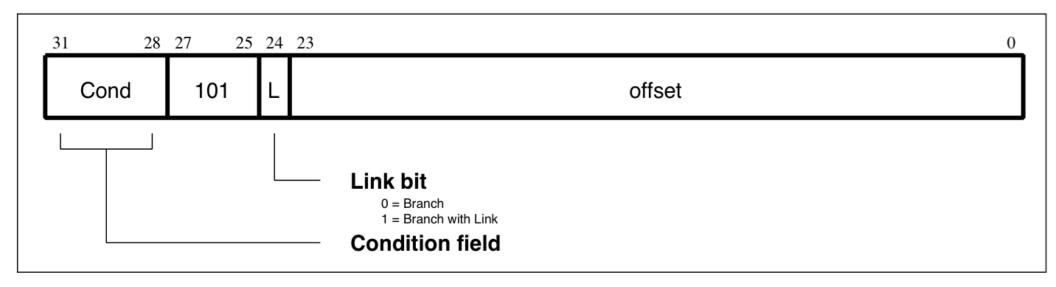

b. e3 ff ff fe

bne . 13 ff ff fe

NB. We will explain the link bit next lecture

Processors execute instructions in phases

Fetch Decode Execute

Phases are pipelined

Fetch	Decode	Execute		_
	Fetch	Decode	Execute	
		Fetch	Decode	Execute

PC value is 2 instructions ahead (PC+8) of the executing instruction (PC+8)

Assembly Language

Most importantly, you need to understand how processors represent information and execute instructions

Normally write code in C, but sometimes will need to read assembly to figure out what is going on

Instruction set architecture often easier to understand by looking at the bits

Concepts

Bits and bit operations

Types of ALU instructions

Condition codes: setting and branching

Addressing modes in loads & stores

Debugging Hints

Start with the simplest program.

Take baby steps, check that things work, then take another small step ...

If something doesn't work, backup to a known working state. Identify state 0.

Start by typing it in by hand; do not learn by cutting and pasting