### Xenomai 3.0-rc1

Generated by Doxygen 1.8.6

Sun Sep 28 2014 19:11:16

# Contents

1	API	servic	e tags		1
2	Dep	recate	d List		3
3	Mod	lule Ind	dex		5
	3.1	Modul	es		5
4	Data	a Struc	ture Inde	ex	7
	4.1	Data S	Structures	8	7
5	File	Index			9
	5.1	File Li	st		9
6	Mod	lule Do	cumenta	ation	17
	6.1	Chanr	nels and r	ranges	17
		6.1.1	Detailed	Description	18
	6.2	Big du	ıal kernel	lock	20
		6.2.1	Detailed	Description	20
		6.2.2	Macro D	Definition Documentation	20
			6.2.2.1	cobalt_atomic_enter	20
			6.2.2.2	cobalt_atomic_leave	21
			6.2.2.3	RTDM_EXECUTE_ATOMICALLY	21
	6.3	Spinlo	ck with p	reemption deactivation	23
		6.3.1	Detailed	Description	23
		6.3.2	Macro D	Definition Documentation	23
			6.3.2.1	rtdm_lock_irqrestore	23
			6.3.2.2	rtdm_lock_irqsave	24
		6.3.3	Function	n Documentation	24
			6.3.3.1	rtdm_lock_get	24
			6.3.3.2	rtdm_lock_init	24
			6.3.3.3	rtdm_lock_put	24
			6.3.3.4	rtdm_lock_put_irqrestore	
	6.4	Hser-	snace driv	ver core	26

iv CONTENTS

	6.4.1	Detailed	Description	27
	6.4.2	Macro D	Definition Documentation	27
		6.4.2.1	UDD_IRQ_CUSTOM	27
		6.4.2.2	UDD_IRQ_NONE	27
		6.4.2.3	UDD_MEM_LOGICAL	28
		6.4.2.4	UDD_MEM_NONE	28
		6.4.2.5	UDD_MEM_PHYS	28
		6.4.2.6	UDD_MEM_VIRTUAL	28
		6.4.2.7	UDD_RTIOC_IRQDIS	28
		6.4.2.8	UDD_RTIOC_IRQEN	28
		6.4.2.9	UDD_RTIOC_IRQSIG	28
	6.4.3	Function	Documentation	28
		6.4.3.1	udd_get_device	28
		6.4.3.2	udd_notify_event	30
		6.4.3.3	udd_post_irq_disable	30
		6.4.3.4	udd_post_irq_enable	31
		6.4.3.5	udd_register_device	31
		6.4.3.6	udd_unregister_device	32
6.5	Threa	d state fla	ngs	33
	6.5.1	Detailed	Description	34
	6.5.2	Macro D	Definition Documentation	34
		6.5.2.1	XNHELD	34
		6.5.2.2	XNLOCK	34
		6.5.2.3	XNMIGRATE	34
		6.5.2.4	XNPEND	34
		6.5.2.5	XNREADY	34
		6.5.2.6	XNSUSP	34
		6.5.2.7	XNTRAPLB	35
6.6	Threa	d informa	tion flags	36
	6.6.1	Detailed	Description	36
6.7	CAN [	Devices .		37
	6.7.1	Detailed	Description	43
	6.7.2	Macro D	Definition Documentation	46
		6.7.2.1	CAN_CTRLMODE_3_SAMPLES	46
		6.7.2.2	CAN_CTRLMODE_LISTENONLY	46
		6.7.2.3	CAN_CTRLMODE_LOOPBACK	46
		6.7.2.4	CAN_ERR_LOSTARB_UNSPEC	46
		6.7.2.5	CAN_RAW_ERR_FILTER	46
		6.7.2.6	CAN_RAW_FILTER	47
		6.7.2.7	CAN_RAW_LOOPBACK	47

CONTENTS

		6.7.2.8	CAN_RAW_RECV_OWN_MSGS	48
		6.7.2.9	RTCAN_RTIOC_RCV_TIMEOUT	48
		6.7.2.10	RTCAN_RTIOC_SND_TIMEOUT	49
		6.7.2.11	RTCAN_RTIOC_TAKE_TIMESTAMP	49
		6.7.2.12	SIOCGCANBAUDRATE	50
		6.7.2.13	SIOCGCANCTRLMODE	51
		6.7.2.14	SIOCGCANCUSTOMBITTIME	51
		6.7.2.15	SIOCGCANSTATE	52
		6.7.2.16	SIOCGIFINDEX	52
		6.7.2.17	SIOCSCANBAUDRATE	52
		6.7.2.18	SIOCSCANCTRLMODE	53
		6.7.2.19	SIOCSCANCUSTOMBITTIME	54
		6.7.2.20	SIOCSCANMODE	54
		6.7.2.21	SOL_CAN_RAW	55
	6.7.3	Typedef	Documentation	55
		6.7.3.1	can_filter_t	55
		6.7.3.2	can_frame_t	55
	6.7.4	Enumera	ation Type Documentation	56
		6.7.4.1	CAN_BITTIME_TYPE	56
		6.7.4.2	CAN_MODE	56
		6.7.4.3	CAN_STATE	56
6.8	RTDM			57
	6.8.1	Detailed	Description	58
	6.8.2	Macro D	efinition Documentation	58
		6.8.2.1	RTDM_TIMEOUT_INFINITE	
		6.8.2.2	RTDM_TIMEOUT_NONE	58
	6.8.3	Typedef	Documentation	58
		6.8.3.1	nanosecs_abs_t	58
		6.8.3.2	nanosecs_rel_t	58
6.9	RTDM	User AP	1	59
	6.9.1	Detailed	Description	60
	6.9.2	Function	Documentation	60
		6.9.2.1	rt_dev_accept	60
		6.9.2.2	rt_dev_bind	60
		6.9.2.3	rt_dev_close	61
		6.9.2.4	rt_dev_connect	61
		6.9.2.5	rt_dev_getpeername	62
		6.9.2.6	rt_dev_getsockname	62
		6.9.2.7	rt_dev_getsockopt	63
		6.9.2.8	rt_dev_ioctl	63

vi CONTENTS

6.9.2.9 rt_dev_listen	64
6.9.2.10 rt_dev_open	64
6.9.2.11 rt_dev_read	65
6.9.2.12 rt_dev_recv	66
6.9.2.13 rt_dev_recvfrom	66
6.9.2.14 rt_dev_recvmsg	67
6.9.2.15 rt_dev_send	67
6.9.2.16 rt_dev_sendmsg	68
6.9.2.17 rt_dev_sendto	68
6.9.2.18 rt_dev_setsockopt	69
6.9.2.19 rt_dev_shutdown	69
6.9.2.20 rt_dev_socket	70
6.9.2.21 rt_dev_write	70
6.10 Serial Devices	72
6.11 Testing Devices	74
6.12 Real-time IPC	75
6.12.1 Detailed Description	77
6.12.2 Macro Definition Documentation	77
6.12.2.1 BUFP_BUFSZ	77
6.12.2.2 BUFP_LABEL	78
6.12.2.3 IDDP_LABEL	78
6.12.2.4 IDDP_POOLSZ	
6.12.2.5 SO_RCVTIMEO	80
6.12.2.6 SO_SNDTIMEO	80
6.12.2.7 XDDP_BUFSZ	80
6.12.2.8 XDDP_EVTDOWN	81
6.12.2.9 XDDP_EVTIN	
6.12.2.10XDDP_EVTNOBUF	81
6.12.2.11XDDP_EVTOUT	81
6.12.2.12XDDP_LABEL	
6.12.2.13XDDP_MONITOR	82
6.12.2.14XDDP_POOLSZ	
6.12.3 Enumeration Type Documentation	
6.12.3.1 anonymous enum	84
6.12.4 Function Documentation	
6.12.4.1 bindAF_RTIPC	84
6.12.4.2 closeAF_RTIPC	
6.12.4.3 connectAF_RTIPC	
6.12.4.4 getpeernameAF_RTIPC	
6.12.4.5 getsocknameAF_RTIPC	87

CONTENTS

6.12.4.6 getsockoptAF_RTIPC
6.12.4.7 recvmsgAF_RTIPC
6.12.4.8 sendmsgAF_RTIPC
6.12.4.9 setsockoptAF_RTIPC
6.12.4.10socketAF_RTIPC
6.13 Asynchronous Procedure Calls
6.13.1 Detailed Description
6.13.2 Function Documentation
6.13.2.1 xnapc_alloc
6.13.2.2 xnapc_free
6.13.2.3 xnapc_schedule
6.14 In-kernel arithmetics
6.14.1 Detailed Description
6.14.2 Function Documentation
6.14.2.1 xnarch_generic_full_divmod64
6.15 Buffer descriptor
6.15.1 Detailed Description
6.15.2 Function Documentation
6.15.2.1 xnbufd_copy_from_kmem
6.15.2.2 xnbufd_copy_to_kmem
6.15.2.3 xnbufd_invalidate
6.15.2.4 xnbufd_map_kread
6.15.2.5 xnbufd_map_kwrite
6.15.2.6 xnbufd_map_uread
6.15.2.7 xnbufd_map_uwrite
6.15.2.8 xnbufd_reset
6.15.2.9 xnbufd_unmap_kread
6.15.2.10xnbufd_unmap_kwrite
6.15.2.11xnbufd_unmap_uread
6.15.2.12xnbufd_unmap_uwrite
6.16 Clock services
6.16.1 Detailed Description
6.16.2 Function Documentation
6.16.2.1 xnclock_adjust
6.16.2.2 xnclock_deregister
6.16.2.3 xnclock_register
6.16.2.4 xnclock_tick
6.17 Debugging services
6.17.1 Detailed Description
6.18 Dynamic memory allocation services

viii CONTENTS

6	18.1 Detailed Description
6	18.2 Function Documentation
	6.18.2.1 xnheap_alloc
	6.18.2.2 xnheap_destroy
	6.18.2.3 xnheap_free
	6.18.2.4 xnheap_init
	6.18.2.5 xnheap_set_name
6.19 C	obalt
6	19.1 Detailed Description
6.20 C	obalt kernel
6	20.1 Detailed Description
	6.20.1.1 Dual kernel service tags
6.21 Ir	terrupt management
6	21.1 Detailed Description
6	21.2 Function Documentation
	6.21.2.1 xnintr_affinity
	6.21.2.2 xnintr_attach
	6.21.2.3 xnintr_destroy
	6.21.2.4 xnintr_detach
	6.21.2.5 xnintr_disable
	6.21.2.6 xnintr_enable
	6.21.2.7 xnintr_init
6.22 L	cking services
6	22.1 Detailed Description
6	22.2 Macro Definition Documentation
	6.22.2.1 splexit
	6.22.2.2 splhigh
	6.22.2.3 spltest
6.23 L	ghtweight key-to-object mapping service
6	23.1 Detailed Description
6	23.2 Function Documentation
	6.23.2.1 xnmap_create
	6.23.2.2 xnmap_delete
	6.23.2.3 xnmap_enter
	6.23.2.4 xnmap_fetch
	6.23.2.5 xnmap_fetch_nocheck
	6.23.2.6 xnmap_remove
6.24 F	egistry services
6	24.1 Detailed Description
6	24.2 Function Documentation

CONTENTS

6.24.2.1 xnregistry_bind
6.24.2.2 xnregistry_enter
6.24.2.3 xnregistry_lookup
6.24.2.4 xnregistry_remove
6.24.2.5 xnregistry_unlink
6.25 Driver programming interface
6.25.1 Detailed Description
6.26 Driver to driver services
6.26.1 Detailed Description
6.26.2 Function Documentation
6.26.2.1 rtdm_accept
6.26.2.2 rtdm_bind
6.26.2.3 rtdm_close
6.26.2.4 rtdm_connect
6.26.2.5 rtdm_getpeername
6.26.2.6 rtdm_getsockname
6.26.2.7 rtdm_getsockopt
6.26.2.8 rtdm_ioctl
6.26.2.9 rtdm_listen
6.26.2.10rtdm_open
6.26.2.11rtdm_read
6.26.2.12rtdm_recv
6.26.2.13rtdm_recvfrom
6.26.2.14rtdm_recvmsg
6.26.2.15rtdm_send
6.26.2.16rtdm_sendmsg
6.26.2.17rtdm_sendto
6.26.2.18rtdm_setsockopt
6.26.2.19rtdm_shutdown
6.26.2.20rtdm_socket
6.26.2.21rtdm_write
6.27 Device Profiles
6.27.1 Detailed Description
6.27.2 Macro Definition Documentation
6.27.2.1 RTIOC_DEVICE_INFO
6.27.2.2 RTIOC_PURGE
6.28 Device Registration Services
6.28.1 Detailed Description
6.28.2 Macro Definition Documentation
6.28.2.1 RTDM_DEVICE_TYPE_MASK

X CONTENTS

	6.28.2.2 RTDM_EXCLUSIVE
	6.28.2.3 RTDM_FIXED_MINOR
	6.28.2.4 RTDM_NAMED_DEVICE
	6.28.2.5 RTDM_PROTOCOL_DEVICE
6.28.3	Function Documentation
	6.28.3.1 rtdm_close_handler
	6.28.3.2 rtdm_dev_register
	6.28.3.3 rtdm_dev_unregister
	6.28.3.4 rtdm_get_unmapped_area_handler
	6.28.3.5 rtdm_ioctl_handler
	6.28.3.6 rtdm_mmap_handler
	6.28.3.7 rtdm_open_handler
	6.28.3.8 rtdm_read_handler
	6.28.3.9 rtdm_recvmsg_handler
	6.28.3.10rtdm_select_handler
	6.28.3.11rtdm_sendmsg_handler
	6.28.3.12rtdm_socket_handler
	6.28.3.13rtdm_write_handler
6.29 Clock	Services
6.29.1	Detailed Description
6.29.2	Property Pro
	6.29.2.1 rtdm_clock_read
	6.29.2.2 rtdm_clock_read_monotonic
6.30 Task 5	Services
6.30.1	Detailed Description
6.30.2	? Typedef Documentation
	6.30.2.1 rtdm_task_proc_t
6.30.3	Function Documentation
	6.30.3.1 rtdm_task_busy_sleep
	6.30.3.2 rtdm_task_busy_wait
	6.30.3.3 rtdm_task_current
	6.30.3.4 rtdm_task_destroy
	6.30.3.5 rtdm_task_init
	6.30.3.6 rtdm_task_join
	6.30.3.7 rtdm_task_set_period
	6.30.3.8 rtdm_task_set_priority
	6.30.3.9 rtdm_task_should_stop
	6.30.3.10rtdm_task_sleep
	6.30.3.11rtdm_task_sleep_abs
	6.30.3.12rtdm_task_sleep_until

CONTENTS xi

6.30.3.13rtdm_task_unblock
6.30.3.14rtdm_task_wait_period
6.31 Timer Services
6.31.1 Detailed Description
6.31.2 Typedef Documentation
6.31.2.1 rtdm_timer_handler_t
6.31.3 Enumeration Type Documentation
6.31.3.1 rtdm_timer_mode
6.31.4 Function Documentation
6.31.4.1 rtdm_timer_destroy
6.31.4.2 rtdm_timer_init
6.31.4.3 rtdm_timer_start
6.31.4.4 rtdm_timer_start_in_handler
6.31.4.5 rtdm_timer_stop
6.31.4.6 rtdm_timer_stop_in_handler
6.32 Synchronisation Services
6.32.1 Detailed Description
6.32.2 Enumeration Type Documentation
6.32.2.1 rtdm_selecttype
6.32.3 Function Documentation
6.32.3.1 rtdm_for_each_waiter
6.32.3.2 rtdm_for_each_waiter_safe
6.32.3.3 rtdm_timedwait
6.32.3.4 rtdm_timedwait_condition
6.32.3.5 rtdm_timedwait_condition_locked
6.32.3.6 rtdm_timedwait_locked
6.32.3.7 rtdm_toseq_init
6.32.3.8 rtdm_wait
6.32.3.9 rtdm_wait_condition
6.32.3.10rtdm_wait_condition_locked
6.32.3.11rtdm_wait_locked
6.32.3.12rtdm_waitqueue_broadcast
6.32.3.13rtdm_waitqueue_destroy
6.32.3.14rtdm_waitqueue_flush
6.32.3.15rtdm_waitqueue_init
6.32.3.16rtdm_waitqueue_lock
6.32.3.17rtdm_waitqueue_signal
6.32.3.18rtdm_waitqueue_unlock
6.32.3.19rtdm_waitqueue_wakeup
6.33 Event Services

xii CONTENTS

6.33.1 Detailed Description
6.33.2 Function Documentation
6.33.2.1 rtdm_event_clear
6.33.2.2 rtdm_event_destroy
6.33.2.3 rtdm_event_init
6.33.2.4 rtdm_event_pulse
6.33.2.5 rtdm_event_select
6.33.2.6 rtdm_event_signal
6.33.2.7 rtdm_event_timedwait
6.33.2.8 rtdm_event_wait
6.34 Semaphore Services
6.34.1 Detailed Description
6.34.2 Function Documentation
6.34.2.1 rtdm_sem_destroy
6.34.2.2 rtdm_sem_down
6.34.2.3 rtdm_sem_init
6.34.2.4 rtdm_sem_select
6.34.2.5 rtdm_sem_timeddown
6.34.2.6 rtdm_sem_up
6.35 Mutex services
6.35.1 Detailed Description
6.35.2 Function Documentation
6.35.2.1 rtdm_mutex_destroy
6.35.2.2 rtdm_mutex_init
6.35.2.3 rtdm_mutex_lock
6.35.2.4 rtdm_mutex_timedlock
6.35.2.5 rtdm_mutex_unlock
6.36 Interrupt Management Services
6.36.1 Detailed Description
6.36.2 Macro Definition Documentation
6.36.2.1 rtdm_irq_get_arg
6.36.3 Typedef Documentation
6.36.3.1 rtdm_irq_handler_t
6.36.4 Function Documentation
6.36.4.1 rtdm_irq_disable
6.36.4.2 rtdm_irq_enable
6.36.4.3 rtdm_irq_free
6.36.4.4 rtdm_irq_request
6.37 Non-Real-Time Signalling Services
6.37.1 Detailed Description

CONTENTS xiii

6.37.2 Typedef Documentation
6.37.2.1 rtdm_nrtsig_handler_t
6.37.3 Function Documentation
6.37.3.1 rtdm_nrtsig_destroy
6.37.3.2 rtdm_nrtsig_init
6.37.3.3 rtdm_nrtsig_pend
6.38 Utility Services
6.38.1 Detailed Description
6.38.2 Function Documentation
6.38.2.1 rtdm_copy_from_user
6.38.2.2 rtdm_copy_to_user
6.38.2.3 rtdm_free
6.38.2.4 rtdm_in_rt_context
6.38.2.5 rtdm_iomap_to_user
6.38.2.6 rtdm_malloc
6.38.2.7 rtdm_mmap_iomem
6.38.2.8 rtdm_mmap_kmem
6.38.2.9 rtdm_mmap_to_user
6.38.2.10rtdm_mmap_vmem
6.38.2.11rtdm_munmap
6.38.2.12rtdm_printk
6.38.2.13rtdm_printk_ratelimited
6.38.2.14rtdm_ratelimit
6.38.2.15rtdm_read_user_ok
6.38.2.16rtdm_rt_capable
6.38.2.17rtdm_rw_user_ok
6.38.2.18rtdm_safe_copy_from_user
6.38.2.19rtdm_safe_copy_to_user
6.38.2.20rtdm_strncpy_from_user
6.39 SCHED_QUOTA scheduling policy
6.39.1 Detailed Description
6.40 Thread scheduling control
6.40.1 Detailed Description
6.40.2 Function Documentation
6.40.2.1 xnsched_rotate
6.40.2.2 xnsched_run
6.41 Synchronous I/O multiplexing
6.41.1 Detailed Description
6.41.2 Function Documentation
6.41.2.1 xnselect

XIV

6.41.2.2 xnselect_bind
6.41.2.3 xnselect_destroy
6.41.2.4 xnselect_init
6.41.2.5 xnselect_signal
6.41.2.6 xnselector_destroy
6.41.2.7 xnselector_init
6.42 Thread synchronization services
6.42.1 Detailed Description
6.42.2 Function Documentation
6.42.2.1 xnsynch_acquire
6.42.2.2 xnsynch_flush
6.42.2.3 xnsynch_init
6.42.2.4 xnsynch_peek_pendq
6.42.2.5 xnsynch_release
6.42.2.6 xnsynch_sleep_on
6.42.2.7 xnsynch_wakeup_one_sleeper
6.42.2.8 xnsynch_wakeup_this_sleeper
6.43 Thread services
6.43.1 Detailed Description
6.43.2 Function Documentation
6.43.2.1 xnthread_cancel
6.43.2.2 xnthread_current
6.43.2.3 xnthread_from_task
6.43.2.4 xnthread_harden
6.43.2.5 xnthread_init
6.43.2.6 xnthread_join
6.43.2.7 xnthread_map
6.43.2.8 xnthread_migrate
6.43.2.9 xnthread_relax
6.43.2.10xnthread_resume
6.43.2.11xnthread_set_mode
6.43.2.12xnthread_set_periodic
6.43.2.13xnthread_set_schedparam
6.43.2.14xnthread_set_slice
6.43.2.15xnthread_start
6.43.2.16xnthread_suspend
6.43.2.17xnthread_test_cancel
6.43.2.18xnthread_unblock
6.43.2.19xnthread_wait_period
6.44 Timer services

CONTENTS xv

6.44.1 Detailed Description	. 225
6.44.2 Function Documentation	. 226
6.44.2.1xntimer_migrate	. 226
6.44.2.2 program_htick_shot	. 226
6.44.2.3 switch_htick_mode	. 226
6.44.2.4 xntimer_destroy	. 227
6.44.2.5 xntimer_get_date	. 227
6.44.2.6 xntimer_get_overruns	. 228
6.44.2.7 xntimer_get_timeout	. 228
6.44.2.8 xntimer_grab_hardware	. 228
6.44.2.9 xntimer_init	. 229
6.44.2.10xntimer_interval	. 230
6.44.2.11xntimer_release_hardware	. 230
6.44.2.12xntimer_start	. 230
6.44.2.13xntimer_stop	. 231
6.45 Virtual file services	. 232
6.45.1 Detailed Description	. 233
6.45.2 Function Documentation	. 233
6.45.2.1 xnvfile_destroy	. 233
6.45.2.2 xnvfile_get_blob	. 234
6.45.2.3 xnvfile_get_integer	. 234
6.45.2.4 xnvfile_get_string	. 235
6.45.2.5 xnvfile_init_dir	. 235
6.45.2.6 xnvfile_init_link	. 236
6.45.2.7 xnvfile_init_regular	. 237
6.45.2.8 xnvfile_init_snapshot	. 237
6.45.3 Variable Documentation	
6.45.3.1 nkvfroot	. 238
6.45.3.2 nkvfroot	. 238
6.46 Analogy framework	
6.46.1 Detailed Description	. 239
6.47 Driver API	. 240
6.47.1 Detailed Description	. 240
6.48 Driver management services	. 241
6.48.1 Detailed Description	. 241
6.48.2 Function Documentation	. 241
6.48.2.1 a4l_register_drv	. 241
6.48.2.2 a4l_unregister_drv	. 241
6.49 Subdevice management services	
6.49.1 Detailed Description	. 244

xvi CONTENTS

6.49.2 Function Documentation
6.49.2.1 a4l_add_subd
6.49.2.2 a4l_alloc_subd
6.49.2.3 a4l_get_subd
6.50 Buffer management services
6.50.1 Detailed Description
6.50.2 Function Documentation
6.50.2.1 a4l_buf_commit_absget
6.50.2.2 a4l_buf_commit_absput
6.50.2.3 a4l_buf_commit_get
6.50.2.4 a4l_buf_commit_put
6.50.2.5 a4l_buf_count
6.50.2.6 a4l_buf_evt
6.50.2.7 a4l_buf_get
6.50.2.8 a4l_buf_prepare_absget
6.50.2.9 a4l_buf_prepare_absput
6.50.2.10a4l_buf_prepare_get
6.50.2.11a4l_buf_prepare_put
6.50.2.12a4l_buf_put
6.50.2.13a4l_get_chan
6.50.2.14a4l_get_cmd
6.51 Interrupt management services
6.51.1 Detailed Description
6.51.2 Function Documentation
6.51.2.1 a4l_free_irq
6.51.2.2 a4l_get_irq
6.51.2.3 a4l_request_irq
6.52 Misc services
6.52.1 Detailed Description
6.52.2 Function Documentation
6.52.2.1 a4l_get_time
6.53 Clocks and timers
6.53.1 Detailed Description
6.53.2 Function Documentation
6.53.2.1 clock_getres
6.53.2.2 clock_gettime
6.53.2.3 clock_nanosleep
6.53.2.4 clock_settime
6.53.2.5 nanosleep
6.53.2.6 timer_create

CONTENTS xvii

6.53.2.7 timer_delete
6.53.2.8 timer_getoverrun
6.53.2.9 timer_gettime
6.53.2.10timer_settime
6.54 Condition variables
6.54.1 Detailed Description
6.54.2 Function Documentation
6.54.2.1 pthread_cond_broadcast
6.54.2.2 pthread_cond_destroy
6.54.2.3 pthread_cond_init
6.54.2.4 pthread_cond_signal
6.54.2.5 pthread_cond_timedwait
6.54.2.6 pthread_cond_wait
6.54.2.7 pthread_condattr_destroy
6.54.2.8 pthread_condattr_getclock
6.54.2.9 pthread_condattr_getpshared
6.54.2.10pthread_condattr_init
6.54.2.11pthread_condattr_setclock
6.54.2.12pthread_condattr_setpshared
6.55 POSIX interface
6.55.1 Detailed Description
6.56 Message queues
6.56.1 Detailed Description
6.56.2 Function Documentation
6.56.2.1 mq_close
6.56.2.2 mq_getattr
6.56.2.3 mq_notify
6.56.2.4 mq_open
6.56.2.5 mq_receive
6.56.2.6 mq_send
6.56.2.7 mq_setattr
6.56.2.8 mq_timedreceive
6.56.2.9 mq_timedsend
6.56.2.10mq_unlink
6.57 Mutual exclusion
6.57.1 Detailed Description
6.57.2 Function Documentation
6.57.2.1 pthread_mutex_destroy
6.57.2.1 pthread_mutex_destroy       285         6.57.2.2 pthread_mutex_init       285

xviii CONTENTS

6.57.2.4 pthread_mutex_timedlock
6.57.2.5 pthread_mutex_trylock
6.57.2.6 pthread_mutex_unlock
6.57.2.7 pthread_mutexattr_destroy
6.57.2.8 pthread_mutexattr_getprotocol
6.57.2.9 pthread_mutexattr_getpshared
6.57.2.10pthread_mutexattr_gettype
6.57.2.11pthread_mutexattr_init
6.57.2.12pthread_mutexattr_setprotocol
6.57.2.13pthread_mutexattr_setpshared
6.57.2.14pthread_mutexattr_settype
6.58 Semaphores
6.58.1 Detailed Description
6.58.2 Function Documentation
6.58.2.1 sem_close
6.58.2.2 sem_destroy
6.58.2.3 sem_init
6.58.2.4 sem_post
6.58.2.5 sem_timedwait
6.58.2.6 sem_trywait
6.58.2.7 sem_unlink
6.58.2.8 sem_wait
6.59 Thread management
6.59.1 Detailed Description
6.59.2 Function Documentation
6.59.2.1 pthread_create
6.59.2.2 pthread_join
6.59.2.3 pthread_kill
6.59.2.4 pthread_setmode_np
6.59.2.5 pthread_setname_np
6.60 Scheduling management
6.60.1 Detailed Description
6.60.2 Function Documentation
6.60.2.1 pthread_getschedparam
6.60.2.2 pthread_getschedparam_ex
6.60.2.3 pthread_setschedparam
6.60.2.4 pthread_setschedparam_ex
6.60.2.5 pthread_yield
6.60.2.6 sched_get_priority_max
6.60.2.7 sched_get_priority_max_ex

CONTENTS xix

6.60.2.8 sched_get_priority_min
6.60.2.9 sched_get_priority_min_ex
6.60.2.10sched_getconfig_np
6.60.2.11sched_setconfig_np
6.60.2.12sched_yield
6.61 Smokey API
6.62 Asynchronous acquisition API
6.62.1 Detailed Description
6.62.2 Function Documentation
6.62.2.1 a4l_get_bufsize
6.62.2.2 a4l_mark_bufrw
6.62.2.3 a4l_mmap
6.62.2.4 a4l_poll
6.62.2.5 a4l_set_bufsize
6.62.2.6 a4l_snd_cancel
6.62.2.7 a4l_snd_command
6.63 Asynchronous acquisition API
6.63.1 Detailed Description
6.63.2 Function Documentation
6.63.2.1 a4l_async_read
6.63.2.2 a4l_async_write
6.64 Descriptor Syscall API
6.64.1 Detailed Description
6.64.2 Function Documentation
6.64.2.1 a4l_sys_desc
6.65 Descriptor API
6.65.1 Detailed Description
6.65.2 Function Documentation
6.65.2.1 a4l_close
6.65.2.2 a4l_fill_desc
6.65.2.3 a4l_get_chinfo
6.65.2.4 a4l_get_rnginfo
6.65.2.5 a4l_get_subdinfo
6.65.2.6 a4l_open
6.66 Range / conversion API
6.66.1 Detailed Description
6.66.2 Function Documentation
6.66.2.1 a4l_dtoraw
6.66.2.2 a4l_find_range
6.66.2.3 a4I_ftoraw

CONTENTS

6.66.2.4 a4l_rawtod
6.66.2.5 a4l_rawtof
6.66.2.6 a4l_rawtoul
6.66.2.7 a4l_sizeof_chan
6.66.2.8 a4l_sizeof_subd
6.66.2.9 a4l_ultoraw
6.67 Level 1 API
6.67.1 Detailed Description
6.68 Synchronous acquisition API
6.68.1 Detailed Description
6.68.2 Function Documentation
6.68.2.1 a4l_snd_insn
6.68.2.2 a4l_snd_insnlist
6.69 Level 2 API
6.69.1 Detailed Description
6.70 Synchronous acquisition API
6.70.1 Detailed Description
6.70.2 Function Documentation
6.70.2.1 a4l_config_subd
6.70.2.2 a4l_sync_dio
6.70.2.3 a4l_sync_read
6.70.2.4 a4l_sync_write
6.71 Analogy user API
6.71.1 Detailed Description
6.72 Level 0 API
6.72.1 Detailed Description
6.73 Basic Syscall API
6.73.1 Detailed Description
6.73.2 Function Documentation
6.73.2.1 a4l_sys_close
6.73.2.2 a4l_sys_open
6.73.2.3 a4l_sys_read
6.73.2.4 a4l_sys_write
6.74 Attach / detach Syscall API
6.74.1 Detailed Description
6.74.2 Function Documentation
6.74.2.1 a4l_sys_attach
6.74.2.2 a4l_sys_bufcfg
6.74.2.3 a4l_sys_detach
6.75 Alarm services

CONTENTS xxi

6.75.1 Detailed Description
6.75.2 Function Documentation
6.75.2.1 rt_alarm_create
6.75.2.2 rt_alarm_delete
6.75.2.3 rt_alarm_inquire
6.75.2.4 rt_alarm_start
6.75.2.5 rt_alarm_stop
6.76 Buffer services
6.76.1 Detailed Description
6.76.2 Macro Definition Documentation
6.76.2.1 B_PRIO
6.76.3 Function Documentation
6.76.3.1 rt_buffer_bind
6.76.3.2 rt_buffer_clear
6.76.3.3 rt_buffer_create
6.76.3.4 rt_buffer_delete
6.76.3.5 rt_buffer_inquire
6.76.3.6 rt_buffer_read
6.76.3.7 rt_buffer_read_timed
6.76.3.8 rt_buffer_read_until
6.76.3.9 rt_buffer_unbind
6.76.3.10rt_buffer_write
6.76.3.11rt_buffer_write_timed
6.76.3.12rt_buffer_write_until
6.77 Condition variable services
6.77.1 Detailed Description
6.77.2 Function Documentation
6.77.2.1 rt_cond_bind
6.77.2.2 rt_cond_broadcast
6.77.2.3 rt_cond_create
6.77.2.4 rt_cond_delete
6.77.2.5 rt_cond_inquire
6.77.2.6 rt_cond_signal
6.77.2.7 rt_cond_unbind
6.77.2.8 rt_cond_wait
6.77.2.9 rt_cond_wait_timed
6.77.2.10rt_cond_wait_until
6.78 Event flag group services
6.78.1 Detailed Description
6.78.2 Macro Definition Documentation

xxii CONTENTS

6.78.2.1 EV_ANY
6.78.2.2 EV_PRIO
6.78.3 Function Documentation
6.78.3.1 rt_event_bind
6.78.3.2 rt_event_clear
6.78.3.3 rt_event_create
6.78.3.4 rt_event_delete
6.78.3.5 rt_event_inquire
6.78.3.6 rt_event_signal
6.78.3.7 rt_event_unbind
6.78.3.8 rt_event_wait
6.78.3.9 rt_event_wait_timed
6.78.3.10rt_event_wait_until
6.79 Heap management services
6.79.1 Detailed Description
6.79.2 Macro Definition Documentation
6.79.2.1 H_PRIO
6.79.3 Function Documentation
6.79.3.1 rt_heap_alloc
6.79.3.2 rt_heap_alloc_timed
6.79.3.3 rt_heap_alloc_until
6.79.3.4 rt_heap_bind
6.79.3.5 rt_heap_create
6.79.3.6 rt_heap_delete
6.79.3.7 rt_heap_free
6.79.3.8 rt_heap_inquire
6.79.3.9 rt_heap_unbind
6.80 Alchemy API
6.80.1 Detailed Description
6.81 Mutex services
6.81.1 Detailed Description
6.81.2 Function Documentation
6.81.2.1 rt_mutex_acquire
6.81.2.2 rt_mutex_acquire_timed
6.81.2.3 rt_mutex_acquire_until
6.81.2.4 rt_mutex_bind
6.81.2.5 rt_mutex_create
6.81.2.6 rt_mutex_delete
6.81.2.7 rt_mutex_inquire
6.81.2.8 rt_mutex_release

CONTENTS xxiii

6.81.2.9 rt_mutex_unbind
6.82 Message pipe services
6.82.1 Detailed Description
6.82.2 Macro Definition Documentation
6.82.2.1 P_MINOR_AUTO
6.82.2.2 P_URGENT
6.82.3 Function Documentation
6.82.3.1 rt_pipe_bind
6.82.3.2 rt_pipe_create
6.82.3.3 rt_pipe_delete
6.82.3.4 rt_pipe_read
6.82.3.5 rt_pipe_read_timed
6.82.3.6 rt_pipe_read_until
6.82.3.7 rt_pipe_stream
6.82.3.8 rt_pipe_unbind
6.82.3.9 rt_pipe_write
6.83 Message queue services
6.83.1 Detailed Description
6.83.2 Macro Definition Documentation
6.83.2.1 Q_PRIO
6.83.3 Function Documentation
6.83.3.1 rt_queue_alloc
6.83.3.2 rt_queue_bind
6.83.3.3 rt_queue_create
6.83.3.4 rt_queue_delete
6.83.3.5 rt_queue_flush
6.83.3.6 rt_queue_free
6.83.3.7 rt_queue_inquire
6.83.3.8 rt_queue_read
6.83.3.9 rt_queue_read_timed
6.83.3.10rt_queue_read_until
6.83.3.11rt_queue_receive
6.83.3.12rt_queue_receive_timed
6.83.3.13rt_queue_receive_until
6.83.3.14rt_queue_send
6.83.3.15rt_queue_unbind
6.84 Semaphore services
6.84.1 Detailed Description
6.84.2 Macro Definition Documentation
6.84.2.1 S_PRIO

xxiv CONTENTS

6.84.3 Function Documentation	↓10
6.84.3.1 rt_sem_bind	<b>∤10</b>
6.84.3.2 rt_sem_broadcast	<b>↓11</b>
6.84.3.3 rt_sem_create	<b>↓</b> 11
6.84.3.4 rt_sem_delete	<b>∤</b> 12
6.84.3.5 rt_sem_inquire	<b>∤</b> 12
6.84.3.6 rt_sem_p	<b>∤</b> 13
6.84.3.7 rt_sem_p_timed	<b>∤13</b>
6.84.3.8 rt_sem_p_until	<b>ļ14</b>
6.84.3.9 rt_sem_unbind	<b>∤14</b>
6.84.3.10rt_sem_v	<b>ļ14</b>
6.85 Task management services	<b>∤</b> 15
6.85.1 Detailed Description	<b>∤</b> 16
6.85.2 Macro Definition Documentation	↓17
6.85.2.1 T_LOCK	<b>∤</b> 17
6.85.2.2 T_LOPRIO	<b>∤</b> 17
6.85.2.3 T_WARNSW	<b>∤</b> 17
6.85.3 Function Documentation	↓17
6.85.3.1 rt_task_bind	<b>∤</b> 17
6.85.3.2 rt_task_create	<b>∤18</b>
6.85.3.3 rt_task_delete	↓19
6.85.3.4 rt_task_inquire	↓19
6.85.3.5 rt_task_join	<del>1</del> 20
6.85.3.6 rt_task_receive	<del>1</del> 21
6.85.3.7 rt_task_receive_timed	<del>1</del> 21
6.85.3.8 rt_task_receive_until	122
6.85.3.9 rt_task_reply	122
6.85.3.10rt_task_resume	123
6.85.3.11rt_task_same	124
6.85.3.12rt_task_self	124
6.85.3.13rt_task_send	124
6.85.3.14rt_task_send_timed	125
6.85.3.15rt_task_send_until	126
6.85.3.16rt_task_set_affinity4	<del>1</del> 26
6.85.3.17rt_task_set_mode	127
6.85.3.18rt_task_set_periodic	128
6.85.3.19rt_task_set_priority	129
6.85.3.20rt_task_shadow	129
6.85.3.21rt_task_sleep	<del>1</del> 31
6.85.3.22rt_task_sleep_until	<del>1</del> 31

CONTENTS

		6.85.3.23rt_task_slice
		6.85.3.24rt_task_spawn
		6.85.3.25rt_task_start
		6.85.3.26rt_task_suspend
		6.85.3.27rt_task_unbind
		6.85.3.28rt_task_unblock
		6.85.3.29rt_task_wait_period
		6.85.3.30rt_task_yield
	6.86	Timer management services
		6.86.1 Detailed Description
		6.86.2 Typedef Documentation
		6.86.2.1 RT_TIMER_INFO
		6.86.3 Function Documentation
		6.86.3.1 rt_timer_inquire
		6.86.3.2 rt_timer_ns2ticks
		6.86.3.3 rt_timer_read
		6.86.3.4 rt_timer_spin
		6.86.3.5 rt_timer_ticks2ns
	6.87	VxWorks® emulator
		pSOS® emulator
	6.89	Transition Kit
		6.89.1 Detailed Description
		6.89.2 Function Documentation
		6.89.2.1 COMPATrt_alarm_create
		6.89.2.2 COMPATrt_event_clear
		6.89.2.3 COMPATrt_event_create
		6.89.2.4 COMPATrt_event_signal
		6.89.2.5 COMPATrt_task_create
		6.89.2.6 COMPATrt_task_set_periodic
		6.89.2.7 pthread_make_periodic_np
		6.89.2.8 pthread_wait_np
		6.89.2.9 rt_alarm_wait
7	Data	Structure Documentation 449
'	7.1	a4l_channel Struct Reference
	7.1	7.1.1 Detailed Description
		7.1.2 Field Documentation
		7.1.2.1 flags
		7.1.2.2 nb bits
	7.2	a4l_channels_desc Struct Reference
	1.4	<del>an_onannois_ueso otruot rielerenoe</del>

xxvi CONTENTS

	7.2.1	Detailed	Description	 	 45	50
	7.2.2	Field Do	umentation	 	 45	50
		7.2.2.1	chans	 	 45	50
		7.2.2.2	ength	 	 45	50
		7.2.2.3	mode	 	 45	50
7.3	a4l_cn	nd_desc S	truct Reference	 	 45	50
	7.3.1	Detailed	Description	 	 45	51
	7.3.2	Field Do	umentation	 	 45	51
		7.3.2.1	dx_subd	 	 45	51
7.4	a4l_de	escriptor S	ruct Reference	 	 45	52
	7.4.1	Detailed	Description	 	 45	52
	7.4.2	Field Do	umentation	 	 45	52
		7.4.2.1	ooard_name	 	 45	52
		7.4.2.2	driver_name	 	 45	52
		7.4.2.3	fd	 	 45	52
		7.4.2.4	dx_read_subd	 	 45	53
		7.4.2.5	dx_write_subd	 	 45	53
		7.4.2.6	magic	 	 45	53
		7.4.2.7	nb_subd	 	 45	53
		7.4.2.8	sbdata	 	 45	53
		7.4.2.9	sbsize	 	 45	53
7.5	a4l_dr	iver Struc	Reference	 	 45	53
	7.5.1	Detailed	Description	 	 45	54
7.6	a4l_ins	struction S	truct Reference	 	 45	54
	7.6.1	Detailed	Description	 	 45	54
	7.6.2	Field Do	umentation	 	 45	55
		7.6.2.1	dx_subd	 	 45	55
7.7	a4l_ins	struction_	st Struct Reference	 	 45	55
	7.7.1	Detailed	Description	 	 45	55
7.8	a4l_ra	nge Struc	Reference	 	 45	55
	7.8.1	Detailed	Description	 	 45	56
	7.8.2	Field Do	umentation	 	 45	56
		7.8.2.1	flags	 	 45	56
		7.8.2.2	max	 	 45	56
		7.8.2.3	min	 	 45	56
7.9	a4l_su	ıbdevice S	truct Reference	 	 45	56
	7.9.1	Detailed	Description	 	 45	58
7.10	atomic	_t Struct	Reference	 	 45	58
	7.10.1	Detailed	Description	 	 45	58
7.11	can_b	ittime Stru	ct Reference	 	 45	58

CONTENTS xxvii

7.11.1 Detailed Description
7.12 can_bittime_btr Struct Reference
7.12.1 Detailed Description
7.13 can_bittime_std Struct Reference
7.13.1 Detailed Description
7.14 can_filter Struct Reference
7.14.1 Detailed Description
7.14.2 Field Documentation
7.14.2.1 can_id
7.14.2.2 can_mask
7.15 can_frame Struct Reference
7.15.1 Detailed Description
7.15.2 Field Documentation
7.15.2.1 can_id
7.16 RT_ALARM_INFO Struct Reference
7.16.1 Detailed Description
7.17 RT_BUFFER_INFO Struct Reference
7.17.1 Detailed Description
7.18 RT_COND_INFO Struct Reference
7.18.1 Detailed Description
7.19 RT_EVENT_INFO Struct Reference
7.19.1 Detailed Description
7.20 RT_HEAP_INFO Struct Reference
7.20.1 Detailed Description
7.20.2 Field Documentation
7.20.2.1 usablemem
7.21 RT_MUTEX_INFO Struct Reference
7.21.1 Detailed Description
7.21.2 Field Documentation
7.21.2.1 owner
7.22 RT_QUEUE_INFO Struct Reference
7.22.1 Detailed Description
7.23 RT_SEM_INFO Struct Reference
7.23.1 Detailed Description
7.24 RT_TASK_INFO Struct Reference
7.24.1 Detailed Description
7.25 rt_timer_info Struct Reference
7.25.1 Detailed Description
7.25.2 Field Documentation
7.25.2.1 date

xxviii CONTENTS

7.26 rtdm_dev_context Struct Reference
7.26.1 Detailed Description
7.26.2 Field Documentation
7.26.2.1 device
7.27 rtdm_device Struct Reference
7.27.1 Detailed Description
7.27.2 Field Documentation
7.27.2.1 "@8
7.27.2.2 driver
7.27.2.3 label
7.27.2.4 minor
7.28 rtdm_device_info Struct Reference
7.28.1 Detailed Description
7.29 rtdm_driver Struct Reference
7.29.1 Detailed Description
7.29.2 Field Documentation
7.29.2.1 device_count
7.29.2.2 device_flags
7.29.2.3 profile_info
7.30 rtdm_fd_ops Struct Reference
7.30.1 Detailed Description
7.30.2 Field Documentation
7.30.2.1 close
7.30.2.2 get_unmapped_area
7.30.2.3 ioctl_nrt
7.30.2.4 ioctl_rt
7.30.2.5 mmap
7.30.2.6 open
7.30.2.7 read_nrt
7.30.2.8 read_rt
7.30.2.9 recvmsg_nrt
7.30.2.10recvmsg_rt
7.30.2.11select
7.30.2.12sendmsg_nrt
7.30.2.13sendmsg_rt
7.30.2.14socket
7.30.2.15write_nrt
7.30.2.16write_rt
7.31 rtipc_port_label Struct Reference
7.31.1 Detailed Description

CONTENTS xxix

7.31.2 Field Documentation
7.31.2.1 label
7.32 rtser_config Struct Reference
7.32.1 Detailed Description
7.33 rtser_event Struct Reference
7.33.1 Detailed Description
7.34 rtser_status Struct Reference
7.34.1 Detailed Description
7.35 sockaddr_can Struct Reference
7.35.1 Detailed Description
7.35.2 Field Documentation
7.35.2.1 can_ifindex
7.36 sockaddr_ipc Struct Reference
7.36.1 Detailed Description
7.36.2 Field Documentation
7.36.2.1 sipc_port
7.37 udd_device Struct Reference
7.37.1 Detailed Description
7.37.2 Field Documentation
7.37.2.1 close
7.37.2.2 device_flags
7.37.2.3 device_subclass
7.37.2.4 interrupt
7.37.2.5 ioctl
7.37.2.6 irq
7.37.2.7 mem_regions
7.37.2.8 mmap
7.37.2.9 open
7.38 udd_memregion Struct Reference
7.38.1 Detailed Description
7.38.2 Field Documentation
7.38.2.1 addr
7.38.2.2 len
7.38.2.3 type
7.39 udd_device::udd_reserved Struct Reference
7.39.1 Detailed Description
7.40 udd_signotify Struct Reference
7.40.1 Detailed Description
7.40.2 Field Documentation
7.40.2.1 pid

CONTENTS

7.40.2.2 sig
7.41 xnheap::xnbucket Struct Reference
7.41.1 Detailed Description
7.42 xnsched Struct Reference
7.42.1 Detailed Description
7.42.2 Field Documentation
7.42.2.1 cpu
7.42.2.2 curr
7.42.2.3 htimer
7.42.2.4 inesting
7.42.2.5 Iflags
7.42.2.6 resched
7.42.2.7 rrbtimer
7.42.2.8 rt
7.42.2.9 status
7.43 xnvfile_lock_ops Struct Reference
7.43.1 Detailed Description
7.43.2 Field Documentation
7.43.2.1 get
7.43.2.2 put
7.40.2.2 put
7.44 xnvfile_regular_iterator Struct Reference
7.44 xnvfile_regular_iterator Struct Reference
7.44 xnvfile_regular_iterator Struct Reference
7.44 xnvfile_regular_iterator Struct Reference
7.44 xnvfile_regular_iterator Struct Reference       487         7.44.1 Detailed Description       487         7.44.2 Field Documentation       487         7.44.2.1 pos       487
7.44 xnvfile_regular_iterator Struct Reference       487         7.44.1 Detailed Description       487         7.44.2 Field Documentation       487         7.44.2.1 pos       487         7.44.2.2 private       488
7.44 xnvfile_regular_iterator Struct Reference       487         7.44.1 Detailed Description       487         7.44.2 Field Documentation       487         7.44.2.1 pos       487         7.44.2.2 private       488         7.44.2.3 seq       488
7.44 xnvfile_regular_iterator Struct Reference       487         7.44.1 Detailed Description       487         7.44.2 Field Documentation       487         7.44.2.1 pos       487         7.44.2.2 private       488         7.44.2.3 seq       488         7.44.2.4 vfile       488
7.44 xnvfile_regular_iterator Struct Reference       487         7.44.1 Detailed Description       487         7.44.2 Field Documentation       487         7.44.2.1 pos       487         7.44.2.2 private       488         7.44.2.3 seq       488         7.44.2.4 vfile       488         7.45 xnvfile_regular_ops Struct Reference       488
7.44 xnvfile_regular_iterator Struct Reference       487         7.44.1 Detailed Description       487         7.44.2 Field Documentation       487         7.44.2.1 pos       487         7.44.2.2 private       488         7.44.2.3 seq       488         7.44.2.4 vfile       488         7.45 xnvfile_regular_ops Struct Reference       488         7.45.1 Detailed Description       488
7.44 xnvfile_regular_iterator Struct Reference       487         7.44.1 Detailed Description       487         7.44.2 Field Documentation       487         7.44.2.1 pos       487         7.44.2.2 private       488         7.44.2.3 seq       488         7.44.2.4 vfile       488         7.45 xnvfile_regular_ops Struct Reference       488         7.45.1 Detailed Description       488         7.45.2 Field Documentation       488
7.44 xnvfile_regular_iterator Struct Reference       487         7.44.1 Detailed Description       487         7.44.2 Field Documentation       487         7.44.2.1 pos       487         7.44.2.2 private       488         7.44.2.3 seq       488         7.44.2.4 vfile       488         7.45 xnvfile_regular_ops Struct Reference       488         7.45.1 Detailed Description       488         7.45.2 Field Documentation       488         7.45.2.1 begin       488
7.44 xnvfile_regular_iterator Struct Reference       487         7.44.1 Detailed Description       487         7.44.2 Field Documentation       487         7.44.2.1 pos       487         7.44.2.2 private       488         7.44.2.3 seq       488         7.44.2.4 vfile       488         7.45 xnvfile_regular_ops Struct Reference       488         7.45.1 Detailed Description       488         7.45.2 Field Documentation       488         7.45.2.1 begin       488         7.45.2.2 end       489
7.44 xnvfile_regular_iterator Struct Reference       487         7.44.1 Detailed Description       487         7.44.2 Field Documentation       487         7.44.2.1 pos       488         7.44.2.2 private       488         7.44.2.3 seq       488         7.44.2.4 vfile       488         7.45 xnvfile_regular_ops Struct Reference       488         7.45.1 Detailed Description       488         7.45.2 Field Documentation       488         7.45.2.1 begin       488         7.45.2.2 end       489         7.45.2.3 next       489
7.44 xnvfile_regular_iterator Struct Reference       487         7.44.1 Detailed Description       487         7.44.2 Field Documentation       487         7.44.2.1 pos       488         7.44.2.2 private       488         7.44.2.3 seq       488         7.44.2.4 vfile       488         7.45 xnvfile_regular_ops Struct Reference       488         7.45.1 Detailed Description       488         7.45.2 Field Documentation       488         7.45.2.1 begin       488         7.45.2.2 end       489         7.45.2.3 next       489         7.45.2.4 rewind       490
7.44 xnvfile_regular_iterator Struct Reference       487         7.44.1 Detailed Description       487         7.44.2 Field Documentation       487         7.44.2.1 pos       488         7.44.2.2 private       488         7.44.2.3 seq       488         7.45.2 vfile       488         7.45.1 Detailed Description       488         7.45.2 Field Documentation       488         7.45.2.1 begin       488         7.45.2.2 end       489         7.45.2.3 next       489         7.45.2.4 rewind       490         7.45.2.5 show       490
7.44 xnvfile_regular_iterator Struct Reference       487         7.44.1 Detailed Description       487         7.44.2 Field Documentation       487         7.44.2.1 pos       488         7.44.2.2 private       488         7.44.2.3 seq       488         7.44.2.4 vfile       488         7.45 xnvfile_regular_ops Struct Reference       488         7.45.1 Detailed Description       488         7.45.2 Field Documentation       488         7.45.2.1 begin       488         7.45.2.2 end       489         7.45.2.3 next       489         7.45.2.4 rewind       490         7.45.2.5 show       490         7.45.2.6 store       490
7.44 xnvfile_regular_iterator Struct Reference       487         7.44.1 Detailed Description       487         7.44.2 Field Documentation       487         7.44.2.1 pos       487         7.44.2.2 private       488         7.44.2.3 seq       488         7.45.2.4 vfile       488         7.45.1 Detailed Description       488         7.45.2 Field Documentation       488         7.45.2.1 begin       488         7.45.2.2 end       489         7.45.2.3 next       489         7.45.2.4 rewind       490         7.45.2.5 show       490         7.45.2.6 store       490         7.46 xnvfile_rev_tag Struct Reference       491

CONTENTS xxxi

	7.47	xnvfile	_snapshot Struct Reference	91
		7.47.1	Detailed Description	92
	7.48	xnvfile	_snapshot_iterator Struct Reference	92
		7.48.1	Detailed Description	93
		7.48.2	Field Documentation	93
			7.48.2.1 databuf	93
			7.48.2.2 endfn	93
			7.48.2.3 nrdata	94
			7.48.2.4 private	94
			7.48.2.5 seq	94
			7.48.2.6 vfile	94
	7.49	xnvfile	_snapshot_ops Struct Reference	94
		7.49.1	Detailed Description	94
		7.49.2	Field Documentation	94
			7.49.2.1 begin	94
			7.49.2.2 end	95
			7.49.2.3 next	95
			7.49.2.4 rewind	96
			7.49.2.5 show	96
			7.49.2.6 store	97
R	File	Docum		aa
8			nentation 4	<b>99</b>
8	<b>File</b> 8.1	includ	nentation 4 e/cobalt/kernel/rtdm/analogy/buffer.h File Reference	99
8	8.1	include 8.1.1	nentation 49 e/cobalt/kernel/rtdm/analogy/buffer.h File Reference	99 00
8		include 8.1.1 include	nentation 4 e/cobalt/kernel/rtdm/analogy/buffer.h File Reference 4 Detailed Description 5 e/cobalt/kernel/rtdm/analogy/channel_range.h File Reference 5	99 00
8	8.1	include 8.1.1 include 8.2.1	nentation  e/cobalt/kernel/rtdm/analogy/buffer.h File Reference	99 00 00
8	8.1	include 8.1.1 include 8.2.1 include	nentation  e/cobalt/kernel/rtdm/analogy/buffer.h File Reference	99 00 03 03
8	<ul><li>8.1</li><li>8.2</li><li>8.3</li></ul>	include 8.1.1 include 8.2.1 include 8.3.1	nentation  e/cobalt/kernel/rtdm/analogy/buffer.h File Reference	99 00 03 03
8	8.1	include 8.1.1 include 8.2.1 include 8.3.1 include	nentation  e/cobalt/kernel/rtdm/analogy/buffer.h File Reference  Detailed Description  e/cobalt/kernel/rtdm/analogy/channel_range.h File Reference  Detailed Description  e/cobalt/kernel/rtdm/analogy/context.h File Reference  Detailed Description  e/cobalt/kernel/rtdm/analogy/context.h File Reference  56  Detailed Description  56  Cobalt/kernel/rtdm/analogy/device.h File Reference  57  58  59  69  60  60  60  60  60  60  60  60  6	99 00 03 03 04
8	<ul><li>8.1</li><li>8.2</li><li>8.3</li><li>8.4</li></ul>	include 8.1.1 include 8.2.1 include 8.3.1 include 8.4.1	nentation  e/cobalt/kernel/rtdm/analogy/buffer.h File Reference  Detailed Description  e/cobalt/kernel/rtdm/analogy/channel_range.h File Reference  Detailed Description  forcobalt/kernel/rtdm/analogy/context.h File Reference  Detailed Description  forcobalt/kernel/rtdm/analogy/context.h File Reference  Detailed Description  forcobalt/kernel/rtdm/analogy/device.h File Reference  Detailed Description  forcobalt/kernel/rtdm/analogy/device.h File Reference  forcobalt/kernel/rtdm/analogy/device.h File Reference  forcobalt/kernel/rtdm/analogy/device.h File Reference  forcobalt/kernel/rtdm/analogy/device.h File Reference	99 00 03 03 04 05
8	<ul><li>8.1</li><li>8.2</li><li>8.3</li></ul>	include 8.1.1 include 8.2.1 include 8.3.1 include 8.4.1 include	nentation  e/cobalt/kernel/rtdm/analogy/buffer.h File Reference	99 00 03 03 04 05 05
8	<ul><li>8.1</li><li>8.2</li><li>8.3</li><li>8.4</li><li>8.5</li></ul>	include 8.1.1 include 8.2.1 include 8.3.1 include 8.4.1 include 8.5.1	nentation  e/cobalt/kernel/rtdm/analogy/buffer.h File Reference	99 00 03 03 04 05 05
8	<ul><li>8.1</li><li>8.2</li><li>8.3</li><li>8.4</li></ul>	include 8.1.1 include 8.2.1 include 8.3.1 include 8.4.1 include 8.5.1	nentation e/cobalt/kernel/rtdm/analogy/buffer.h File Reference Detailed Description e/cobalt/kernel/rtdm/analogy/channel_range.h File Reference Detailed Description e/cobalt/kernel/rtdm/analogy/context.h File Reference Detailed Description e/cobalt/kernel/rtdm/analogy/device.h File Reference Detailed Description e/cobalt/kernel/rtdm/analogy/device.h File Reference Detailed Description e/cobalt/kernel/rtdm/analogy/driver.h File Reference Detailed Description e/cobalt/kernel/rtdm/analogy/driver.h File Reference Detailed Description e/cobalt/kernel/rtdm/driver.h File Reference  56 Detailed Description 67 Detailed Description	99 00 03 03 04 05 05 06
В	<ul><li>8.1</li><li>8.2</li><li>8.3</li><li>8.4</li><li>8.5</li></ul>	include 8.1.1 include 8.2.1 include 8.3.1 include 8.4.1 include 8.5.1 include	nentation  e/cobalt/kernel/rtdm/analogy/buffer.h File Reference  Detailed Description  e/cobalt/kernel/rtdm/analogy/channel_range.h File Reference  Detailed Description  e/cobalt/kernel/rtdm/analogy/context.h File Reference  Detailed Description  e/cobalt/kernel/rtdm/analogy/device.h File Reference  Detailed Description  e/cobalt/kernel/rtdm/analogy/device.h File Reference  Detailed Description  e/cobalt/kernel/rtdm/analogy/driver.h File Reference  Detailed Description  e/cobalt/kernel/rtdm/analogy/driver.h File Reference  Detailed Description  e/cobalt/kernel/rtdm/driver.h File Reference  50  Detailed Description  51  Detailed Description  52  Detailed Description  53  Detailed Description  54	99 00 03 03 04 05 05 06 07
В	<ul><li>8.1</li><li>8.2</li><li>8.3</li><li>8.4</li><li>8.5</li></ul>	include 8.1.1 include 8.2.1 include 8.3.1 include 8.4.1 include 8.5.1 include 8.6.1	nentation  e/cobalt/kernel/rtdm/analogy/buffer.h File Reference	99 00 03 03 04 05 05 06 07 11
8	<ul><li>8.1</li><li>8.2</li><li>8.3</li><li>8.4</li><li>8.5</li></ul>	include 8.1.1 include 8.2.1 include 8.3.1 include 8.4.1 include 8.5.1 include 8.6.1	nentation  e/cobalt/kernel/rtdm/analogy/buffer.h File Reference  Detailed Description  e/cobalt/kernel/rtdm/analogy/channel_range.h File Reference  Detailed Description  e/cobalt/kernel/rtdm/analogy/context.h File Reference  Detailed Description  e/cobalt/kernel/rtdm/analogy/device.h File Reference  Detailed Description  e/cobalt/kernel/rtdm/analogy/device.h File Reference  Detailed Description  e/cobalt/kernel/rtdm/analogy/driver.h File Reference  Detailed Description  e/cobalt/kernel/rtdm/driver.h File Reference  Detailed Description  e/cobalt/kernel/rtdm/driver.h File Reference  Detailed Description  50  Accobalt/kernel/rtdm/driver.h File Reference  51  Detailed Description  52  Detailed Description  53  Macro Definition Documentation  54  Macro Definition Documentation  55  Macro Definition Documentation  56  Second RTDM_CLASS_MAGIC  57  Second RTDM_CLASS_MAGIC  57  Second RTDM_CLASS_MAGIC	99 00 03 03 04 05 05 06 07 11
В	<ul><li>8.1</li><li>8.2</li><li>8.3</li><li>8.4</li><li>8.5</li></ul>	include 8.1.1 include 8.2.1 include 8.3.1 include 8.4.1 include 8.5.1 include 8.6.1	nentation  a/cobalt/kernel/rtdm/analogy/buffer.h File Reference  Detailed Description  a/cobalt/kernel/rtdm/analogy/channel_range.h File Reference  Detailed Description  a/cobalt/kernel/rtdm/analogy/context.h File Reference  Detailed Description  a/cobalt/kernel/rtdm/analogy/device.h File Reference  Detailed Description  a/cobalt/kernel/rtdm/analogy/device.h File Reference  Detailed Description  a/cobalt/kernel/rtdm/analogy/driver.h File Reference  Detailed Description  a/cobalt/kernel/rtdm/driver.h File Reference  Detailed Description  50  Accobalt/kernel/rtdm/driver.h File Reference  Detailed Description  51  52  53  54  55  55  56  56  56  56  56  56  56	99 00 03 03 04 05 05 07 11 11
8	<ul><li>8.1</li><li>8.2</li><li>8.3</li><li>8.4</li><li>8.5</li></ul>	include 8.1.1 include 8.2.1 include 8.3.1 include 8.5.1 include 8.6.1 8.6.2	pentation  e/cobalt/kernel/rtdm/analogy/buffer.h File Reference  Detailed Description  e/cobalt/kernel/rtdm/analogy/channel_range.h File Reference  Detailed Description  e/cobalt/kernel/rtdm/analogy/context.h File Reference  Detailed Description  focobalt/kernel/rtdm/analogy/device.h File Reference  Detailed Description  focobalt/kernel/rtdm/analogy/device.h File Reference  Detailed Description  focobalt/kernel/rtdm/analogy/driver.h File Reference  Detailed Description  focobalt/kernel/rtdm/driver.h File Reference  Detailed Description  focobalt/kernel/rtdm/driver.h File Reference  focobalt/kernel/rtdm/driver.h F	99 00 03 04 05 05 06 07 11 11 12
8	<ul><li>8.1</li><li>8.2</li><li>8.3</li><li>8.4</li><li>8.5</li></ul>	include 8.1.1 include 8.2.1 include 8.3.1 include 8.5.1 include 8.6.1 8.6.2	pentation  pe/cobalt/kernel/rtdm/analogy/buffer.h File Reference  Detailed Description  pe/cobalt/kernel/rtdm/analogy/channel_range.h File Reference  Detailed Description  pe/cobalt/kernel/rtdm/analogy/context.h File Reference  Detailed Description  pe/cobalt/kernel/rtdm/analogy/device.h File Reference  Detailed Description  pe/cobalt/kernel/rtdm/analogy/device.h File Reference  Detailed Description  pe/cobalt/kernel/rtdm/analogy/driver.h File Reference  Detailed Description  pe/cobalt/kernel/rtdm/driver.h File Reference  Detailed Description  50  Macro Definition Documentation  51  86.2.1 RTDM_CLASS_MAGIC  52  Function Documentation  53  54  55  Function Documentation  56  57  58  58  58  58  58  58  58  58  58	99 00 03 03 04 05 05 06 07 11 11 12 12

xxxii CONTENTS

		8.6.3.3	rtd	m_fd	_to_	priv	ate										 			 512
		8.6.3.4	rtd	lm_pr	ivate	e_to	_fd										 	 		 513
8.7	include	e/cobalt/k	ern	el/rtdr	m/an	nalo	gy/in	stru	ctio	n.h l	-ile	Re	fere	ence	9 .		 	 		 513
	8.7.1	Detailed	l De	script	ion												 	 		 514
8.8	include	e/cobalt/k	ern	el/rtdr	m/an	nalog	gy/rt	dm_	_help	oers	.h F	ile	Ref	ere	nce		 	 		 515
	8.8.1	Detailed	l De	script	ion												 	 		 515
8.9	include	e/cobalt/k	ern	el/rtdr	m/an	nalog	gy/si	ubde	evice	e.h F	ile	Re	fere	nce			 	 		 516
	8.9.1	Detailed	l De	script	ion												 	 		 517
8.10	include	e/cobalt/k	ern	el/rtdr	m/an	nalo	gy/tr	ansf	fer.h	File	Re	fer	enc	е.			 	 		 518
	8.10.1	Detailed	l De	script	ion												 	 		 518
8.11	include	e/cobalt/k	ærn	el/rtdr	m/ca	ın.h	File	Ref	erer	nce							 	 		 519
	8.11.1	Detailed	l De	script	ion												 	 		 519
8.12	include	e/rtdm/cai	n.h	File F	Refer	renc	е.										 	 		 519
	8.12.1	Detailed	l De	script	ion												 	 		 520
8.13	include	e/rtdm/ua	ιpi/c	an.h I	File I	Refe	eren	ce .									 	 		 520
	8.13.1	Detailed	l De	script	ion												 	 		 526
8.14		e/cobalt/k																		
	8.14.1	Detailed	l De	script	ion												 	 		 527
8.15	include	e/cobalt/k	ern	el/rtdr	m/fd.	.h F	ile R	Refer	enc	е.							 	 		 528
		Detailed																		
	8.15.2	Function	ı Do	cume	entat	tion											 	 		 529
		8.15.2.1	rtd	m_fd	_get	t.											 	 		 529
		8.15.2.2	rtd	m_fd	_locl	k.											 	 		 530
		8.15.2.3	rtd	m_fd	_put	t.											 	 		 530
		8.15.2.4	rtd	m_fd	_sele	ect											 	 		 530
		8.15.2.5	rtd	m_fd	_unl	ock											 	 		 531
8.16	include	e/cobalt/k	ern	el/rtdr	m/ipo	c.h F	File I	Refe	eren	ce							 	 		 531
	8.16.1	Detailed	l De	script	ion											٠.	 	 		 532
8.17	include	e/rtdm/ipc	c.h F	File R	efere	ence	€									٠.	 	 		 532
		Detailed		-																
8.18	include	e/rtdm/ua	ιpi/ip	oc.h F	ile F	Refe	renc	e .									 	 		 533
	8.18.1	Detailed	De	script	ion												 	 		 536
8.19		e/cobalt/k																		
	8.19.1	Detailed	l De	script	ion												 	 		 536
8.20	include	e/rtdm/rtd	h.mk	ı File	Refe	eren	ce .										 	 		 537
	8.20.1	Detailed	De	script	ion												 ٠.	 		 537
8.21		e/rtdm/ua	-																	
		Detailed																		
8.22		e/cobalt/k																		
	8.22.1	Detailed	De	script	ion												 	 		 540

CONTENTS xxxiii

8.23 include/rtdm/serial.h File Reference
8.23.1 Detailed Description
8.24 include/rtdm/uapi/serial.h File Reference
8.24.1 Detailed Description
8.24.2 Macro Definition Documentation
8.24.2.1 RTSER_RTIOC_BREAK_CTL
8.24.2.2 RTSER_RTIOC_GET_CONFIG
8.24.2.3 RTSER_RTIOC_GET_CONTROL
8.24.2.4 RTSER_RTIOC_GET_STATUS
8.24.2.5 RTSER_RTIOC_SET_CONFIG
8.24.2.6 RTSER_RTIOC_SET_CONTROL
8.24.2.7 RTSER_RTIOC_WAIT_EVENT
8.25 include/cobalt/kernel/rtdm/testing.h File Reference
8.25.1 Detailed Description
8.26 include/rtdm/testing.h File Reference
8.26.1 Detailed Description
8.27 include/rtdm/uapi/testing.h File Reference
8.27.1 Detailed Description
8.28 include/cobalt/kernel/rtdm/udd.h File Reference
8.28.1 Detailed Description
8.29 include/rtdm/uapi/udd.h File Reference
8.29.1 Detailed Description
8.30 include/rtdm/analogy.h File Reference
8.30.1 Detailed Description
8.31 include/rtdm/uapi/analogy.h File Reference
8.31.1 Detailed Description
8.31.2 Macro Definition Documentation
8.31.2.1 A4L_RNG_FACTOR
8.32 lib/analogy/internal.h File Reference
8.32.1 Detailed Description
8.33 lib/analogy/async.c File Reference
8.33.1 Detailed Description
8.34 lib/analogy/descriptor.c File Reference
8.34.1 Detailed Description
8.35 lib/analogy/info.c File Reference
8.35.1 Detailed Description
8.36 lib/analogy/range.c File Reference
8.36.1 Detailed Description
8.37 lib/analogy/root_leaf.h File Reference
8.37.1 Detailed Description

xxxiv	CONTENTS
-------	----------

	8.38	lib/analogy/sync.c File Reference	567
		8.38.1 Detailed Description	568
	8.39	lib/analogy/sys.c File Reference	569
		8.39.1 Detailed Description	569
9	Exa	mple Documentation	571
			•
	9.1	bufp-label.c	
	9.2	bufp-readwrite.c	573
	9.3	can-rtt.c	575
	9.4	cross-link.c	580
	9.5	iddp-label.c	584
	9.6	iddp-sendrecv.c	587
	9.7	rtcanconfig.c	589
	9.8	rtcanrecv.c	592
	9.9	rtcansend.c	596
	9.10	xddp-echo.c	600
	9.11	xddp-label.c	602
	9.12	xddp-stream.c	606
Inc	dex		610

## Chapter 1

## API service tags

The non-POSIX API services based on the Copperplate library may be restricted to particular calling contexts, or entail specific side-effects.

This information applies to the Alchemy API services, and to all RTOS emulators as well. To describe this information, each service documented by this section bears a set of tags when applicable.

The table below matches the tags used throughout the documentation with the description of their meaning for the caller.

#### **Context tags**

Tag	Context on entry
xthread-only	Must be called from a Xenomai thread
xhandler-only	Must be called from a Xenomai handler. See
	note.
xcontext	May be called from any Xenomai context
	(thread or handler).
pthread-only	Must be called from a regular POSIX thread
thread-unrestricted	May be called from a Xenomai or regular
	POSIX thread indifferently
xthread-nowait	May be called from a Xenomai thread
	unrestricted, or from a regular thread as a
	non-blocking service only. See note.
unrestricted	May be called from any context previously
	described

#### Note

A Xenomai handler is most often used for callback-based timeout notifications. This context is *NOT* mapped to a regular Linux signal handler, it is actually underlaid by a special thread context, so that async-unsafe POSIX services may be invoked internally by the API implementation when running on behalf of such handler. Therefore, calling Xenomai API services from asynchronous regular signal handlers is fundamentally unsafe.

A non-blocking call for an API service is defined by a special value passed as a timeout specification.

#### Possible side-effects over the Cobalt core (i.e. dual kernel configuration)

Tag	Description		

2 API service tags

switch-primary	the caller may switch to primary mode
switch-secondary	the caller may switch to secondary mode

#### Note

As a rule of thumb, any service which might block the caller, causes a switch to primary mode if invoked from secondary mode. This rule might not apply in case the service can complete fully from user-space without any syscall entailed, due to a particular optimization (e.g. fast acquisition of semaphore resources directly from user-space in the non-contended case). Therefore, the switch-{primary, secondary} tags denote either services which will always switch the caller to the mode mentioned, or might have to do so, depending on the context. The absence of such tag indicates that such services can complete in either modes and as such will entail no switch.

# Chapter 2

# **Deprecated List**

#### Global COMPAT rt alarm create (RT ALARM \*alarm, const char \*name)

This is a compatibility service from the Transition Kit.

Global COMPAT\_\_rt\_event\_clear (RT\_EVENT \*event, unsigned long mask, unsigned long \*mask-\_r)

This is a compatibility service from the Transition Kit.

Global COMPAT\_\_rt\_event\_create (RT\_EVENT \*event, const char \*name, unsigned long ivalue, int mode)

This is a compatibility service from the Transition Kit.

Global COMPAT\_\_rt\_event\_signal (RT\_EVENT \*event, unsigned long mask)

This is a compatibility service from the Transition Kit.

Global COMPAT\_\_rt\_task\_create (RT\_TASK \*task, const char \*name, int stksize, int prio, int mode)

This is a compatibility service from the Transition Kit.

Global COMPAT\_rt\_task\_set\_periodic (RT\_TASK \*task, RTIME idate, RTIME period)

This is a compatibility service from the Transition Kit.

Global pthread\_make\_periodic\_np (pthread\_t thread, struct timespec \*starttp, struct timespec \*periodtp)

This service is a non-portable extension of the Xenomai 2.x POSIX interface, not available with Xenomai 3.x. Instead, Cobalt-based applications should set up a periodic timer using the timer\_create(), timer\_settime() call pair, then wait for release points via sigwaitinfo(). Overruns can be detected by looking at the siginfo.si\_overrun field. Alternatively, applications may obtain a file descriptor referring to a Cobalt timer via the timerfd() call, and read() from it to wait for timeouts.

#### Global pthread\_wait\_np (unsigned long \*overruns\_r)

This service is a non-portable extension of the Xenomai 2.x POSIX interface, not available with Xenomai 3.x. Instead, Cobalt-based applications should set up a periodic timer using the timer\_create(), timer\_settime() call pair, then wait for release points via sigwaitinfo(). Overruns can be detected by looking at the siginfo.si\_overrun field. Alternatively, applications may obtain a file descriptor referring to a Cobalt timer via the timerfd() call, and read() from it to wait for timeouts.

#### Global rt alarm wait (RT ALARM \*alarm)

This is a compatibility service from the Transition Kit.

### Global RTDM\_EXECUTE\_ATOMICALLY (code\_block)

This construct will be phased out in Xenomai 3.0. Please use rtdm waitqueue services instead.

#### Global rtdm task sleep until (nanosecs abs t wakeup time)

Use rtdm\_task\_sleep\_abs instead!

4 Deprecated List

# Chapter 3

# Module Index

# 3.1 Modules

Here is a list of all modules:
RTDM
RTDM User API
Driver programming interface
Driver to driver services
Device Registration Services
Clock Services
Task Services
Timer Services
Synchronisation Services
Big dual kernel lock
Spinlock with preemption deactivation
Event Services
Semaphore Services
Mutex services
Interrupt Management Services
Non-Real-Time Signalling Services
Utility Services
Device Profiles
User-space driver core
CAN Devices
Serial Devices
Testing Devices
Real-time IPC
Cobalt
Cobalt kernel
Asynchronous Procedure Calls
In-kernel arithmetics
Buffer descriptor
Clock services
Debugging services
Dynamic memory allocation services
Interrupt management
Locking services
Lightweight key-to-object mapping service
Registry services
Thread scheduling control
SCHED_QUOTA scheduling policy

6 Module Index

Synchronous I/O multiplexing	
Thread synchronization services	
Thread services	12
Thread state flags	33
Thread information flags	36
Timer services	
Virtual file services	
Analogy framework	
Driver API	
Channels and ranges	17
Driver management services	
Subdevice management services	
Buffer management services	
Interrupt management services	
Misc services	
Analogy user API	
Level 1 API	
Asynchronous acquisition API	
Descriptor API	
Synchronous acquisition API	35
Level 2 API	39
Asynchronous acquisition API	22
Range / conversion API	
Synchronous acquisition API	
Level 0 API	
Descriptor Syscall API	
Basic Syscall API	
Attach / detach Syscall API	
•	
POSIX interface	
Clocks and timers	
Condition variables	
Message queues	
Mutual exclusion	
Semaphores	93
Thread management	00
Scheduling management	04
Scheduling management	
Smokey API	13
Smokey API         3           Alchemy API         3	13 83
Smokey API       3         Alchemy API       3         Alarm services       3	13 83 49
Smokey API       3         Alchemy API       36         Alarm services       34         Buffer services       35	13 83 49 53
Smokey API       3         Alchemy API       38         Alarm services       3         Buffer services       3         Condition variable services       3	13 83 49 53 62
Smokey API       3         Alchemy API       38         Alarm services       34         Buffer services       35         Condition variable services       36         Event flag group services       36	13 83 49 53 62 68
Smokey API       3         Alchemy API       38         Alarm services       34         Buffer services       35         Condition variable services       36         Event flag group services       36         Heap management services       37	13 49 53 62 68 76
Smokey API       3         Alchemy API       36         Alarm services       34         Buffer services       35         Condition variable services       36         Event flag group services       36         Heap management services       37         Mutex services       36	13 83 49 53 62 68 76 85
Smokey API       3         Alchemy API       36         Alarm services       34         Buffer services       35         Condition variable services       36         Event flag group services       36         Heap management services       37         Mutex services       36         Message pipe services       36	13 83 49 53 62 68 76 85 91
Smokey API       3         Alchemy API       38         Alarm services       36         Buffer services       36         Condition variable services       36         Event flag group services       36         Heap management services       37         Mutex services       36         Message pipe services       36         Message queue services       36	13 83 49 53 62 68 76 85 91
Smokey API       3         Alchemy API       36         Alarm services       36         Buffer services       36         Condition variable services       36         Event flag group services       36         Heap management services       37         Mutex services       36         Message pipe services       36         Message queue services       36         Semaphore services       46	13 83 49 53 62 68 76 85 91 99
Smokey API       3         Alchemy API       36         Alarm services       36         Buffer services       36         Condition variable services       36         Event flag group services       36         Heap management services       37         Mutex services       36         Message pipe services       36         Message queue services       36         Semaphore services       36         Task management services       46	13 83 49 53 62 68 76 85 91 99 09
Smokey API       3         Alchemy API       36         Alarm services       36         Buffer services       36         Condition variable services       36         Event flag group services       36         Heap management services       37         Mutex services       36         Message pipe services       36         Message queue services       36         Semaphore services       36         Task management services       46	13 83 49 53 62 68 76 85 91 99
Smokey API       3         Alchemy API       36         Alarm services       34         Buffer services       35         Condition variable services       36         Event flag group services       36         Heap management services       37         Mutex services       36         Message pipe services       36         Message queue services       36         Semaphore services       36         Task management services       46         Timer management services       47	13 83 49 53 62 68 76 85 91 99 09
Smokey API       3         Alchemy API       36         Alarm services       34         Buffer services       35         Condition variable services       36         Event flag group services       36         Heap management services       37         Mutex services       36         Message pipe services       36         Message queue services       36         Semaphore services       36         Task management services       46         Timer management services       47         Timer management services       47	13 83 49 53 62 68 76 85 91 99 15 37

# Chapter 4

# Data Structure Index

# 4.1 Data Structures

Here are the data structures with brief descriptions:

a4i_cnannei
Structure describing some channel's characteristics
a4l_channels_desc
Structure describing a channels set
a4l_cmd_desc
Structure describing the asynchronous instruction
a4l_descriptor
Structure containing device-information useful to users
a4l_driver
Structure containing driver declaration data
a4l_instruction
Structure describing the synchronous instruction
a4l_instruction_list
Structure describing the list of synchronous instructions
a4l_range
Structure describing a (unique) range
a4l_subdevice
Structure describing the subdevice
atomic_t
Copyright © 2011 Gilles Chanteperdrix gilles.chanteperdrix@xenomai.org 458
can_bittime  Custom CAN bit-time definition
can bittime btr
Hardware-specific BTR bit-times
can_bittime_std
Standard bit-time parameters according to Bosch
can filter
Filter for reception of CAN messages
can_frame
Raw CAN frame
RT ALARM INFO
Alarm status descriptor
RT BUFFER INFO
Buffer status descriptor
RT COND INFO
Condition variable status descriptor
RT EVENT INFO
Event status descriptor
·

RT_HEAP_INFO	
Heap status descriptor	464
	465
RT_QUEUE_INFO	
RT_SEM_INFO	465
	466
RT_TASK_INFO  Task status descriptor	467
rt_timer_info	
P	467
rtdm_dev_context  Device context	468
rtdm_device	
RTDM device	469
	470
rtdm_driver	
RTDM driver	471
	472
rtipc_port_label	475
Port label information structure	475
	475
rtser_event	470
Additional information about serial device events	476
	477
sockaddr_can Socket address structure for the CAN address family	177
sockaddr_ipc	<del>*</del> //
Socket address structure for the RTIPC address family	
	479
udd_memregion	482
Reserved to the UDD core	483
udd_signotify	
UDD event notification descriptor	484
·	484
xnsched	405
Scheduling information structure	485
	486
xnvfile_regular_iterator	407
Regular vfile iterator	487
Regular vfile operation descriptor	488
xnvfile_rev_tag	401
Snapshot revision tag	491
Snapshot vfile descriptor	491
xnvfile_snapshot_iterator  Snapshot-driven vfile iterator	400
Snapshot-driven ville iterator	492
Snapshot vfile operation descriptor	194

# Chapter 5

# File Index

# 5.1 File List

Here is a list of all documented files with brief descriptions:

include/version.h
include/alchemy/alarm.h
include/alchemy/buffer.h
include/alchemy/compat.h
include/alchemy/cond.h??
include/alchemy/event.h
include/alchemy/heap.h??
include/alchemy/mutex.h
include/alchemy/pipe.h
include/alchemy/queue.h
include/alchemy/sem.h
include/alchemy/task.h
include/alchemy/timer.h
include/boilerplate/ancillaries.h
include/boilerplate/atomic.h
include/boilerplate/compiler.h
include/boilerplate/debug.h
include/boilerplate/hash.h
include/boilerplate/ <b>libc.h</b>
include/boilerplate/list.h
include/boilerplate/lock.h
include/boilerplate/obstack.h
include/boilerplate/private-list.h
include/boilerplate/scope.h
include/boilerplate/shared-list.h
include/boilerplate/time.h
include/cobalt/arith.h
include/cobalt/fcntl.h
include/cobalt/mqueue.h
include/cobalt/pthread.h
include/cobalt/sched.h
include/cobalt/semaphore.h
include/cobalt/signal.h
include/cobalt/stdio.h
include/cobalt/stdlib.h
include/cobalt/syslog.h
include/cobalt/ticks.h
include/cobalt/time.h

10 File Index

include/cobalt/trace.h
include/cobalt/unistd.h
include/cobalt/wrappers.h
include/cobalt/boilerplate/limits.h
include/cobalt/boilerplate/ <b>sched.h</b>
include/cobalt/boilerplate/signal.h
include/cobalt/boilerplate/trace.h
include/cobalt/boilerplate/wrappers.h
include/cobalt/kernel/ancillaries.h
include/cobalt/kernel/apc.h
include/cobalt/kernel/arith.h
include/cobalt/kernel/assert.h
include/cobalt/kernel/bheap.h
include/cobalt/kernel/ <b>bufd.h</b>
include/cobalt/kernel/clock.h
include/cobalt/kernel/ <b>heap.h</b>
include/cobalt/kernel/init.h
include/cobalt/kernel/intr.h
include/cobalt/kernel/ <b>list.h</b>
include/cobalt/kernel/ <b>lock.h</b>
include/cobalt/kernel/ <b>map.h</b>
include/cobalt/kernel/pipe.h ??
include/cobalt/kernel/ <b>ppd.h</b>
include/cobalt/kernel/registry.h ??
include/cobalt/kernel/sched-idle.h
include/cobalt/kernel/sched-quota.h
include/cobalt/kernel/sched-rt.h
include/cobalt/kernel/sched-sporadic.h ??
include/cobalt/kernel/sched-tp.h
include/cobalt/kernel/sched-weak.h
include/cobalt/kernel/sched.h
include/cobalt/kernel/ <b>schedqueue.h</b>
include/cobalt/kernel/synch.h
include/cooperince/includes
include/cobalt/kernel/timer.h
include/cobalt/kernel/trace.h
include/cobalt/kernel/tree.h
include/cobalt/kernel/ <b>vdso.h</b>
include/cobalt/kernel/vfile.h
include/cobalt/kernel/rtdm/autotune.h
include/cobalt/kernel/rtdm/can.h
include/cobalt/kernel/rtdm/cobalt.h
This file is part of the Xenomai project
include/cobalt/kernel/rtdm/driver.h
Real-Time Driver Model for Xenomai, driver API header
include/cobalt/kernel/rtdm/fd.h
include/cobalt/kernel/rtdm/ipc.h
This file is part of the Xenomai project
include/cobalt/kernel/rtdm/rtdm.h
include/cobalt/kernel/rtdm/serial.h
include/cobalt/kernel/rtdm/testing.h
include/cobalt/kernel/rtdm/udd.h
Copyright (C) 2014 Philippe Gerum rpm@xenomai.org 552
include/cobalt/kernel/rtdm/analogy/buffer.h
Analogy for Linux, buffer related features

5.1 File List

include/cobalt/kernel/rtdm/analogy/channel_range.h
Analogy for Linux, channel, range related features
include/cobalt/kernel/rtdm/analogy/ <b>command.h</b>
include/cobalt/kernel/rtdm/analogy/context.h
Analogy for Linux, context structure / macros declarations
include/cobalt/kernel/rtdm/analogy/device.h
Analogy for Linux, device related features
include/cobalt/kernel/rtdm/analogy/driver.h
Analogy for Linux, driver facilities
include/cobalt/kernel/rtdm/analogy/instruction.h
Analogy for Linux, instruction related features
include/cobalt/kernel/rtdm/analogy/rtdm_helpers.h
Analogy for Linux, Operation system facilities
include/cobalt/kernel/rtdm/analogy/subdevice.h
Analogy for Linux, subdevice related features
include/cobalt/kernel/rtdm/analogy/transfer.h
Analogy for Linux, transfer related features
include/cobalt/sys/cobalt.h
include/cobalt/sys/ioctl.h
include/cobalt/sys/mman.h
include/cobalt/sys/select.h
include/cobalt/sys/socket.h
include/cobalt/sys/time.h
include/cobalt/uapi/mutex.h
include/cobalt/uapi/sched.h
include/cobalt/uapi/sem.h???
include/cobalt/uapi/signal.h???
include/cobalt/uapi/syscall.h
include/cobalt/uapi/sysconf.h
include/cobalt/uapi/thread.h
include/cobalt/uapi/time.h
include/cobalt/uapi/asm-generic/arith.h
include/cobalt/uapi/asm-generic/ <b>features.h</b>
include/cobalt/uapi/asm-generic/syscall.h
include/cobalt/uapi/kernel/ <b>heap.h</b>
include/cobalt/uapi/kernel/ <b>limits.h</b>
include/cobalt/uapi/kernel/ <b>synch.h</b>
include/cobalt/uapi/kernel/thread.h
include/cobalt/uapi/kernel/ <b>trace.h</b>
include/cobalt/uapi/kernel/ <b>types.h</b>
include/cobalt/uapi/kernel/ <b>urw.h</b>
include/cobalt/uapi/kernel/ <b>vdso.h</b>
include/copperplate/clockobj.h
include/copperplate/cluster.h
include/copperplate/debug.h
include/copperplate/eventobj.h
include/copperplate/heapobj.h
include/copperplate/init.h
include/copperplate/reference.h
include/copperplate/registry-obstack.h??
include/copperplate/registry.h
include/copperplate/semobj.h
include/copperplate/syncobj.h
include/copperplate/threadobj.h

12 File Index

include/copperplate/timerobj.h	??
include/copperplate/traceobj.h	??
include/copperplate/wrappers.h	??
include/mercury/pthread.h	??
include/mercury/boilerplate/limits.h	??
include/mercury/boilerplate/ <b>sched.h</b>	??
include/mercury/boilerplate/signal.h	??
include/mercury/boilerplate/ <b>trace.h</b>	??
include/mercury/boilerplate/wrappers.h	??
include/psos/ <b>psos.h</b>	??
include/rtdm/analogy.h	
Analogy for Linux, library facilities	555
include/rtdm/autotune.h	??
include/rtdm/can.h	519
include/rtdm/ipc.h	
This file is part of the Xenomai project	532
include/rtdm/rtdm.h	
include/rtdm/serial.h	
Real-Time Driver Model for Xenomai, serial device profile header	540
include/rtdm/testing.h	
	550
include/rtdm/uapi/analogy.h	
•	556
include/rtdm/uapi/autotune.h	??
include/rtdm/uapi/can.h	
·	520
include/rtdm/uapi/ipc.h	
·	533
include/rtdm/uapi/rtdm.h	
·	538
include/rtdm/uapi/serial.h	
·	541
include/rtdm/uapi/testing.h	
	551
include/rtdm/uapi/udd.h	
·	554
include/smokey/smokey.h	??
include/trank/rtdk.h	??
include/trank/ <b>trank.h</b>	??
include/trank/native/alarm.h	??
include/trank/native/ <b>buffer.h</b>	??
include/trank/native/ <b>cond.h</b>	??
include/trank/native/ <b>event.h</b>	??
include/trank/native/ <b>heap.h</b>	??
include/trank/native/ <b>misc.h</b>	??
include/trank/native/ <b>mutex.h</b>	??
include/trank/native/ <b>pipe.h</b>	??
include/trank/native/ <b>queue.h</b>	??
include/trank/native/ <b>sem.h</b>	??
include/trank/native/task.h	??
include/trank/native/timer.h	??
include/trank/native/ <b>types.h</b>	??
include/trank/posix/ <b>pthread.h</b>	??
include/trank/posix/ptinead.n	??
include/trank/rtdm/ <b>rtdm.h</b>	??
include/trank/rtdm/ <b>rtipc.h</b>	??
include/trank/rtdm/ <b>rtserial.h</b>	??
	??
include/trank/rtdm/ <b>rttesting.h</b>	11

5.1 File List

include/vxworks/errnoLib.h??
include/vxworks/intLib.h
include/vxworks/kernLib.h
include/vxworks/lstLib.h
include/vxworks/memPartLib.h
include/vxworks/msgQLib.h
include/vxworks/rngLib.h
include/vxworks/semLib.h
include/vxworks/sysLib.h??
include/vxworks/taskInfo.h
include/vxworks/taskLib.h
include/vxworks/tickLib.h
include/vxworks/types.h
include/vxworks/wdLib.h
kernel/cobalt/debug.h
kernel/cobalt/procfs.h
kernel/cobalt/arch/arm/include/asm/xenomai/calibration.h
kernel/cobalt/arch/arm/include/asm/xenomai/features.h
kernel/cobalt/arch/arm/include/asm/xenomai/fptest.h
kernel/cobalt/arch/arm/include/asm/xenomai/ <b>machine.h</b>
kernel/cobalt/arch/arm/include/asm/xenomai/syscall.h
kernel/cobalt/arch/arm/include/asm/xenomai/syscall32.h
kernel/cobalt/arch/arm/include/asm/xenomai/thread.h
kernel/cobalt/arch/arm/include/asm/xenomai/wrappers.h
kernel/cobalt/arch/arm/include/asm/xenomai/uapi/ <b>arith.h</b>
kernel/cobalt/arch/arm/include/asm/xenomai/uapi/features.h
kernel/cobalt/arch/arm/include/asm/xenomai/uapi/fptest.h
kernel/cobalt/arch/arm/include/asm/xenomai/uapi/syscall.h
kernel/cobalt/arch/arm/include/asm/xenomai/uapi/tsc.h
kernel/cobalt/arch/blackfin/include/asm/xenomai/calibration.h
kernel/cobalt/arch/blackfin/include/asm/xenomai/ <b>features.h</b>
kernel/cobalt/arch/blackfin/include/asm/xenomai/syscall.h
kernel/cobalt/arch/blackfin/include/asm/xenomai/ <b>thread.h</b>
kernel/cobalt/arch/blackfin/include/asm/xenomai/wrappers.h
kernel/cobalt/arch/blackfin/include/asm/xenomai/uapi/ <b>arith.h</b>
kernel/cobalt/arch/blackfin/include/asm/xenomai/uapi/ <b>fptest.h</b>
kernel/cobalt/arch/blackfin/include/asm/xenomai/uapi/syscall.h
kernel/cobalt/arch/nios2/include/asm/xenomai/calibration.h
kernel/cobalt/arch/nios2/include/asm/xenomai/ <b>features.h</b>
kernel/cobalt/arch/nios2/include/asm/xenomai/ <b>fptest.h</b>
kernel/cobalt/arch/nios2/include/asm/xenomai/ <b>machine.h</b>
kernel/cobalt/arch/nios2/include/asm/xenomai/ <b>syscall.h</b>
kernel/cobalt/arch/nios2/include/asm/xenomai/syscall32.h
kernel/cobalt/arch/nios2/include/asm/xenomai/ <b>thread.h</b>
kernel/cobalt/arch/nios2/include/asm/xenomai/wrappers.h ??
kernel/cobalt/arch/nios2/include/asm/xenomai/uapi/ <b>arith.h</b>
kernel/cobalt/arch/nios2/include/asm/xenomai/uapi/features.h
kernel/cobalt/arch/nios2/include/asm/xenomai/uapi/fptest.h
kernel/cobalt/arch/nios2/include/asm/xenomai/uapi/syscall.h
kernel/cobalt/arch/powerpc/include/asm/xenomai/calibration.h ??
kernel/cobalt/arch/powerpc/include/asm/xenomai/features.h
kernel/cobalt/arch/powerpc/include/asm/xenomai/fptest.h
kernel/cobalt/arch/powerpc/include/asm/xenomai/machine.h
kernel/cobalt/arch/powerpc/include/asm/xenomai/syscall.h

14 File Index

· · · · · · · · · · · · · · · · · · ·	??
	??
1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	??
	??
	??
	??
	??
kernel/cobalt/arch/sh/include/asm/xenomai/calibration.h	??
kernel/cobalt/arch/sh/include/asm/xenomai/features.h	??
kernel/cobalt/arch/sh/include/asm/xenomai/fptest.h	??
kernel/cobalt/arch/sh/include/asm/xenomai/machine.h	??
kernel/cobalt/arch/sh/include/asm/xenomai/syscall.h	??
kernel/cobalt/arch/sh/include/asm/xenomai/syscall32.h	??
kernel/cobalt/arch/sh/include/asm/xenomai/thread.h	??
kernel/cobalt/arch/sh/include/asm/xenomai/wrappers.h	??
kernel/cobalt/arch/sh/include/asm/xenomai/uapi/arith.h	??
	??
	??
	??
	??
	??
	??
	??
	??
	??
	??
	??
kernel/cobalt/arch/x86/include/asm/xenomai/syscall32.h	??
	??
	??
	??
	??
	??
	??
1 ,	??
	??
, ,	??
kernel/cobalt/include/asm-generic/xenomai/ <b>syscall.h</b>	??
kernel/cobalt/include/asm-generic/xenomai/syscall32.h	??
kernel/cobalt/include/asm-generic/xenomai/thread.h	??
	??
	??
	??
·	??
·	??
·	??
!	??
·	??
kernel/cobalt/posix/ <b>memory.h</b>	??
kernel/cobalt/posix/ <b>monitor.h</b>	??
kernel/cobalt/posix/ <b>mqueue.h</b>	??
kernel/cobalt/posix/ <b>mutex.h</b>	??
kernel/cobalt/posix/ <b>process.h</b>	??
	??
	??
	??
kernel/cobalt/posix/ <b>syscall.h</b>	??
	??
none of the property and the second s	

5.1 File List

kernel/cobalt/posix/timer.h
kernel/cobalt/posix/timerfd.h
kernel/cobalt/rtdm/internal.h
kernel/cobalt/trace/cobalt-core.h
kernel/cobalt/trace/cobalt-posix.h
kernel/cobalt/trace/cobalt-rtdm.h
kernel/drivers/analogy/proc.h
kernel/drivers/analogy/intel/8255.h
kernel/drivers/analogy/national_instruments/mite.h
kernel/drivers/analogy/national_instruments/ni_mio.h
kernel/drivers/analogy/national_instruments/ni_stc.h
kernel/drivers/analogy/national_instruments/ni_tio.h
kernel/drivers/can/rtcan_dev.h
kernel/drivers/can/rtcan_internal.h
kernel/drivers/can/rtcan_list.h
kernel/drivers/can/rtcan_raw.h
kernel/drivers/can/rtcan_socket.h
kernel/drivers/can/rtcan version.h
kernel/drivers/can/mscan/rtcan_mscan.h
kernel/drivers/can/mscan/rtcan mscan regs.h
kernel/drivers/can/sja1000/rtcan_sja1000.h
kernel/drivers/can/sja1000/rtcan_sja1000_regs.h
kernel/drivers/ipc/internal.h
kernel/drivers/serial/16550A io.h
kernel/drivers/serial/16550A_pci.h
kernel/drivers/serial/16550A_pnp.h
lib/alchemy/ <b>alarm.h</b>
lib/alchemy/ <b>buffer.h</b>
lib/alchemy/ <b>cond.h</b>
lib/alchemy/ <b>event.h</b>
lib/alchemy/ <b>heap.h</b>
lib/alchemy/init.h
lib/alchemy/internal.h
lib/alchemy/ <b>mutex.h</b>
lib/alchemy/pipe.h
lib/alchemy/ <b>queue.h</b>
lib/alchemy/reference.h??
lib/alchemy/sem.h
lib/alchemy/task.h
lib/alchemy/timer.h
lib/analogy/async.c
Analogy for Linux, command, transfer, etc
lib/analogy/descriptor.c
Analogy for Linux, descriptor related features
lib/analogy/info.c
Analogy for Linux, device, subdevice, etc
lib/analogy/internal.h
Analogy for Linux, internal declarations
lib/analogy/range.c
Analogy for Linux, range related features
lib/analogy/root_leaf.h
Analogy for Linux, root / leaf system
lib/analogy/sync.c
Analogy for Linux, instruction related features
lib/analogy/sys.c
Analogy for Linux, descriptor related features
lib/cobalt/ <b>current.h</b>
lib/cobalt/init.h

16 File Index

	??
	??
	??
	??
	??
lib/cobalt/arch/blackfin/include/asm/xenomai/ <b>features.h</b>	??
lib/cobalt/arch/blackfin/include/asm/xenomai/ <b>syscall.h</b>	??
lib/cobalt/arch/blackfin/include/asm/xenomai/tsc.h	??
lib/cobalt/arch/nios2/include/asm/xenomai/ <b>features.h</b>	??
lib/cobalt/arch/nios2/include/asm/xenomai/ <b>syscall.h</b>	??
	??
	??
	??
	??
	??
	??
	??
	??
	??
	??
	??
lib/copperplate/regd/ <b>sysregfs.h</b>	??
	??
	??
lib/psos/ <b>pt.h</b>	??
	??
	??
	??
	??
lib/psos/ <b>task.h</b>	??
	??
	??
lib/trank/ <b>internal.h</b>	??
	??
lib/vxworks/memPartLib.h	??
lib/vxworks/ <b>msgQLib.h</b>	??
lib/vxworks/ <b>reference.h</b>	??
	??
	??
	??
lib/vxworks/tickLib.h	??
lib/vxworks/ <b>wdLib.h</b>	??

# Chapter 6

# Module Documentation

# 6.1 Channels and ranges

Channels.

Collaboration diagram for Channels and ranges:



## **Data Structures**

- struct a4l\_channel
  - Structure describing some channel's characteristics.
- struct a4l\_channels\_desc
  - Structure describing a channels set.
- struct a4l\_range
  - Structure describing a (unique) range.

#### Macros

- #define A4L\_CHAN\_GLOBAL 0x10
  - Internal use flag (must not be used by driver developer)
- #define A4L\_RNG\_GLOBAL 0x8
  - Internal use flag (must not be used by driver developer)
- #define RANGE(x, y)
  - Macro to declare a (unique) range with no unit defined.
- #define RANGE\_V(x, y)
  - Macro to declare a (unique) range in Volt.
- #define RANGE\_mA(x, y)
  - Macro to declare a (unique) range in milliAmpere.

• #define RANGE\_ext(x, y)

Macro to declare a (unique) range in some external reference.

• #define A4L RNG GLOBAL RNGDESC 0

Constant to define a ranges descriptor as global (inter-channel)

#define A4L RNG PERCHAN RNGDESC 1

Constant to define a ranges descriptor as specific for a channel.

#define RNG GLOBAL(x)

Macro to declare a ranges global descriptor in one line.

# Channel reference

Flags to define the channel's reference

#define A4L\_CHAN\_AREF\_GROUND 0x1
 Ground reference.

• #define A4L CHAN AREF COMMON 0x2

Common reference.

#define A4L CHAN AREF DIFF 0x4

Differential reference.

#define A4L\_CHAN\_AREF\_OTHER 0x8

Misc reference.

#### Channels declaration mode

Constant to define whether the channels in a descriptor are identical

#define A4L\_CHAN\_GLOBAL\_CHANDESC 0

Global declaration, the set contains channels with similar characteristics.

#define A4L\_CHAN\_PERCHAN\_CHANDESC 1

Per channel declaration, the decriptor gathers differents channels.

#### 6.1.1 Detailed Description

Channels. According to the Analogy nomenclature, the channel is the elementary acquisition entity. One channel is supposed to acquire one data at a time. A channel can be:

- an analog input or an analog ouput;
- a digital input or a digital ouput;

Channels are defined by their type and by some other characteristics like:

- their resolutions for analog channels (which usually ranges from 8 to 32 bits);
- their references;

Such parameters must be declared for each channel composing a subdevice. The structure a4l\_channel (struct a4l\_channel) is used to define one channel.

Another structure named a4l\_channels\_desc (struct a4l\_channels\_desc) gathers all channels for a specific subdevice. This latter structure also stores :

• the channels count;

 the channels declaration mode (A4L\_CHAN\_GLOBAL\_CHANDESC or A4L\_CHAN\_PERCHAN\_-CHANDESC): if all the channels composing a subdevice are identical, there is no need to declare the parameters for each channel; the global declaration mode eases the structure composition.

Usually the channels descriptor looks like this:

#### Ranges

So as to perform conversion from logical values acquired by the device to physical units, some range structure(s) must be declared on the driver side.

Such structures contain:

- the physical unit type (Volt, Ampere, none);
- the minimal and maximal values;

These range structures must be associated with the channels at subdevice registration time as a channel can work with many ranges. At configuration time (thanks to an Analogy command), one range will be selected for each enabled channel.

Consequently, for each channel, the developer must declare all the possible ranges in a structure called struct a4l\_rngtab. Here is an example:

```
struct a41_rngtab example_tab = {
   length: 2,
   rngs: {
        RANGE_V(-5,5),
        RANGE_V(-10,10),
   },
};
```

For each subdevice, a specific structure is designed to gather all the ranges tabs of all the channels. In this structure, called struct a4l rngdesc, three fields must be filled:

- the declaration mode (A4L\_RNG\_GLOBAL\_RNGDESC or A4L\_RNG\_PERCHAN\_RNGDESC);
- the number of ranges tab;
- the tab of ranges tabs pointers;

Most of the time, the channels which belong to the same subdevice use the same set of ranges. So, there is no need to declare the same ranges for each channel. A macro is defined to prevent redundant declarations: RNG GLOBAL().


Here is an example:

```
struct a41_rngdesc example_rng = RNG_GLOBAL(example_tab);
```

20 Module Documentation

# 6.2 Big dual kernel lock

Collaboration diagram for Big dual kernel lock:



#### Macros

#define cobalt\_atomic\_enter(context)

Enter atomic section (dual kernel only)

• #define cobalt atomic leave(context)

Leave atomic section (dual kernel only)

#define RTDM\_EXECUTE\_ATOMICALLY(code\_block)

Execute code block atomically (DEPRECATED)

# 6.2.1 Detailed Description

## 6.2.2 Macro Definition Documentation

6.2.2.1 #define cobalt atomic enter( context )

### Value:

Enter atomic section (dual kernel only)

This call opens a fully atomic section, serializing execution with respect to all interrupt handlers (including for real-time IRQs) and Xenomai threads running on all CPUs.

#### **Parameters**

context	name of local variable to store the context in. This variable updated by the real-time
	core will hold the information required to leave the atomic section properly.

# Note

Atomic sections may be nested. The caller is allowed to sleep on a blocking Xenomai service from primary mode within an atomic section delimited by cobalt\_atomic\_enter/cobalt\_atomic\_leave calls. On the contrary, sleeping on a regular Linux kernel service while holding such lock is NOT valid.

Since the strongest lock is acquired by this service, it can be used to synchronize real-time and non-real-time contexts.

#### Warning

This service is not portable to the Mercury core, and should be restricted to Cobalt-specific use cases, mainly for the purpose of porting existing dual-kernel drivers which still depend on the obsolete RTDM EXECUTE ATOMICALLY() construct.

#### 6.2.2.2 #define cobalt\_atomic\_leave( context )

#### Value:

Leave atomic section (dual kernel only)

This call closes an atomic section previously opened by a call to cobalt\_atomic\_enter(), restoring the preemption and interrupt state which prevailed prior to entering the exited section.

#### **Parameters**

```
context | name of local variable which stored the context.
```

#### Warning

This service is not portable to the Mercury core, and should be restricted to Cobalt-specific use cases.

#### 6.2.2.3 #define RTDM\_EXECUTE\_ATOMICALLY( code\_block )

#### Value:

Execute code block atomically (DEPRECATED)

Generally, it is illegal to suspend the current task by calling <a href="rtdm\_task\_sleep">rtdm\_event\_wait</a>(), etc. while holding a spinlock. In contrast, this macro allows to combine several operations including a potentially rescheduling call to an atomic code block with respect to other <a href="rtdm\_EXECUTE\_ATOMICALLY">RTDM\_EXECUTE\_ATOMICALLY</a>() blocks. The macro is a light-weight alternative for protecting code blocks via mutexes, and it can even be used to synchronise real-time and non-real-time contexts.

#### **Parameters**

```
code_block | Commands to be executed atomically
```

#### Note

It is not allowed to leave the code block explicitly by using break, return, goto, etc. This would leave the global lock held during the code block execution in an inconsistent state. Moreover, do not embed complex operations into the code bock. Consider that they will be executed under preemption lock with interrupts switched-off. Also note that invocation of rescheduling calls may break the atomicity until the task gains the CPU again.

Tags

unrestricted


**Deprecated** This construct will be phased out in Xenomai 3.0. Please use rtdm\_waitqueue services instead.

See Also

cobalt\_atomic\_enter().

# 6.3 Spinlock with preemption deactivation

Collaboration diagram for Spinlock with preemption deactivation:

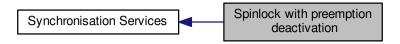

#### Macros

- #define RTDM\_LOCK\_UNLOCKED(\_\_name) IPIPE\_SPIN\_LOCK\_UNLOCKED
   Static lock initialisation.
- #define rtdm\_lock\_irqsave(context) splhigh(context)

Disable preemption locally.

#define rtdm\_lock\_irqrestore(context) splexit(context)
 Restore preemption state.

Variable to save the context while holding a lock.

# **Typedefs**

- typedef ipipe\_spinlock\_t rtdm\_lock\_t Lock variable.
- typedef unsigned long rtdm\_lockctx\_t

# **Functions**

- static void rtdm\_lock\_init (rtdm\_lock\_t \*lock)
  - Dynamic lock initialisation.
- static void rtdm\_lock\_get (rtdm\_lock\_t \*lock)

Acquire lock from non-preemptible contexts.

- static void rtdm\_lock\_put (rtdm\_lock\_t \*lock)
  - Release lock without preemption restoration.
- static void rtdm\_lock\_put\_irqrestore (rtdm\_lock\_t \*lock, rtdm\_lockctx\_t context)
   Release lock and restore preemption state.
- 6.3.1 Detailed Description
- 6.3.2 Macro Definition Documentation
- 6.3.2.1 #define rtdm\_lock\_irqrestore( context ) **splexit**(context)

Restore preemption state.

**Parameters** 

context | name of local variable which stored the context

Tags

unrestricted

6.3.2.2 #define rtdm\_lock\_irqsave( context ) **splhigh**(context)

Disable preemption locally.

**Parameters** 

context | name of local variable to store the context in

Tags

unrestricted

6.3.3 Function Documentation

6.3.3.1 static void rtdm\_lock\_get ( rtdm\_lock\_t \* lock ) [inline], [static]

Acquire lock from non-preemptible contexts.

**Parameters** 

lock | Address of lock variable

Tags

unrestricted

References spltest.

6.3.3.2 static void rtdm\_lock\_init ( rtdm\_lock\_t \* lock ) [inline], [static]

Dynamic lock initialisation.

**Parameters** 

lock | Address of lock variable

Tags

task-unrestricted

6.3.3.3 static void rtdm\_lock\_put ( rtdm\_lock\_t \* lock ) [inline], [static]

Release lock without preemption restoration.

## Parameters

lock	Address of lock variable

# Tags

unrestricted, might-switch

6.3.3.4 static void rtdm\_lock\_put\_irqrestore (  $rtdm_lock_t * lock, rtdm_lockctx_t context$  ) [inline], [static]

Release lock and restore preemption state.

## **Parameters**

lock	Address of lock variable
context	name of local variable which stored the context

## Tags

#### unrestricted

Referenced by a4l\_request\_irq(), and rtdm\_ratelimit().

26 Module Documentation

# 6.4 User-space driver core

This profile includes all mini-drivers sitting on top of the User-space Device Driver framework (UDD). Collaboration diagram for User-space driver core:



#### **Data Structures**

- struct udd\_memregion
- struct udd device
- struct udd\_signotify

UDD event notification descriptor.

#### **Functions**

int udd\_register\_device (struct udd\_device \*udd)

Register a UDD device.

• int udd\_unregister\_device (struct udd\_device \*udd)

Unregister a UDD device.

• struct udd device \* udd get device (struct rtdm fd \*fd)

RTDM file descriptor to target UDD device.

void udd\_notify\_event (struct udd\_device \*udd)

Notify an IRQ event for an unmanaged interrupt.

void udd\_post\_irq\_enable (int irq)

Post a request for enabling an IRQ line.

void udd post irg disable (int irg)

Post a request for disabling an IRQ line.

• #define UDD\_IRQ\_NONE 0

No IRQ managed.

• #define UDD\_IRQ\_CUSTOM (-1)

IRQ directly managed from the mini-driver on top of the UDD core.

## Memory types for mapping

#### Types of memory for mapping

The UDD core implements a default ->mmap() handler which first attempts to hand over the request to the corresponding handler defined by the mini-driver. If not present, the UDD core establishes the mapping automatically, depending on the memory type defined for the region.

• #define UDD\_MEM\_NONE 0

No memory region.

#define UDD\_MEM\_PHYS 1

Physical I/O memory region.

#define UDD MEM LOGICAL 2

Kernel logical memory region (e.g.

• #define UDD MEM VIRTUAL 3

Virtual memory region with no direct physical mapping (e.g.

### UDD IOCTL

#### **IOCTL** requests

• #define UDD\_RTIOC\_IRQEN\_IO(RTDM\_CLASS\_UDD, 0)

Enable the interrupt line.

• #define UDD\_RTIOC\_IRQDIS\_IO(RTDM\_CLASS\_UDD, 1)

Disable the interrupt line.

• #define UDD RTIOC IRQSIG IOW(RTDM CLASS UDD, 2, struct udd signotify)

Enable/Disable signal notification upon interrupt event.

### 6.4.1 Detailed Description

This profile includes all mini-drivers sitting on top of the User-space Device Driver framework (UDD). The generic UDD core driver enables interrupt control and I/O memory access interfaces to user-space device drivers, as defined by the mini-drivers when registering.

A mini-driver supplements the UDD core with ancillary functions for dealing with memory mappings and interrupt control for a particular I/O card/device.

UDD-compliant mini-drivers only have to provide the basic support for dealing with the interrupt sources present in the device, so that most part of the device requests can be handled from a Xenomai application running in user-space.

This profile is reminiscent of the UIO framework available with the Linux kernel, adapted to the dual kernel Cobalt environment.

### 6.4.2 Macro Definition Documentation

```
6.4.2.1 #define UDD_IRQ_CUSTOM (-1)
```

IRQ directly managed from the mini-driver on top of the UDD core.

The mini-driver is in charge of notifying the Cobalt threads waiting for IRQ events by calling the udd\_notify\_event() service.

Referenced by udd\_register\_device(), and udd\_unregister\_device().

## 6.4.2.2 #define UDD\_IRQ\_NONE 0

#### No IRQ managed.

Special IRQ values for udd\_device.irq Passing this code implicitly disables all interrupt-related services, including control (disable/enable) and notification.

Referenced by udd register device(), and udd unregister device().

6.4.2.3 #define UDD\_MEM\_LOGICAL 2

Kernel logical memory region (e.g.

kmalloc()). By default, the UDD core maps such memory to a virtual user range by calling the rtdm\_mmap\_kem() service.

6.4.2.4 #define UDD\_MEM\_NONE 0

No memory region.

Use this type code to disable an entry in the array of memory mappings, i.e. udd\_device.mem\_regions[].

6.4.2.5 #define UDD MEM PHYS 1

Physical I/O memory region.

By default, the UDD core maps such memory to a virtual user range by calling the rtdm\_mmap\_iomem() service.

6.4.2.6 #define UDD MEM VIRTUAL 3

Virtual memory region with no direct physical mapping (e.g.

vmalloc()). By default, the UDD core maps such memory to a virtual user range by calling the rtdm\_mmap\_vmem() service.

6.4.2.7 #define UDD\_RTIOC\_IRQDIS\_IO(RTDM\_CLASS\_UDD, 1)

Disable the interrupt line.

The UDD-class mini-driver in kernel should act upon this request appropriately when received via its ->ioctl() handler.

6.4.2.8 #define UDD\_RTIOC\_IRQEN\_IO(RTDM\_CLASS\_UDD, 0)

Enable the interrupt line.

The UDD-class mini-driver in kernel space should act upon this request appropriately when received via its ->ioctl() handler.

6.4.2.9 #define UDD\_RTIOC\_IRQSIG\_IOW(RTDM\_CLASS\_UDD, 2, struct udd\_signotify)

Enable/Disable signal notification upon interrupt event.

A valid notification descriptor must be passed along with this request, which is handled by the UDD core directly.

6.4.3 Function Documentation

6.4.3.1 struct **udd\_device**\* udd\_get\_device ( struct rtdm\_fd \* fd )

RTDM file descriptor to target UDD device.

Retrieves the UDD device from a RTDM file descriptor.

#### **Parameters**

fd	File descriptor received by an ancillary I/O handler from a mini-driver based on the
	UDD core.

#### Returns

A pointer to the UDD device to which fd refers to.

#### Note

This service is intended for use by mini-drivers based on the UDD core exclusively. Passing file descriptors referring to other RTDM devices will certainly lead to invalid results.

#### Tags

#### mode-unrestricted

References rtdm device::driver, rtdm driver::profile info, and rtdm fd device().

```
6.4.3.2 void udd_notify_event ( struct udd_device * udd )
```

Notify an IRQ event for an unmanaged interrupt.

When the UDD core shall hand over the interrupt management for a device to the mini-driver (see UD-D\_IRQ\_CUSTOM), the latter should notify the UDD core when IRQ events are received by calling this service.

As a result, the UDD core wakes up any Cobalt thread waiting for interrupts on the device via a read(2) or select(2) call.

#### **Parameters**

udd	UDD device descriptor receiving the IRQ.
-----	--

## Tags

### coreirq-only

### Note

In case the ref udd\_irq\_handler "IRQ handler" from the mini-driver requested the UDD core not to re-enable the interrupt line, the application may later request the unmasking by issuing the UDD\_-RTIOC\_IRQEN ioctl(2) command. Writing a non-zero integer to the device via the write(2) system call has the same effect.

References rtdm event signal().

```
6.4.3.3 void udd post irg disable (intirg)
```

Post a request for disabling an IRQ line.

This service issues a request to the regular kernel for disabling the IRQ line mentioned. If the caller runs in primary mode, the request is scheduled but deferred until the current CPU leaves the real-time domain. Otherwise, the request is immediately handled.

#### **Parameters**

irq IRQ line to disable.

#### Tags

#### unrestricted

#### Note

The deferral is required as some interrupt management code involved in disabling interrupt lines may not be safely executed from primary mode.

6.4.3.4 void udd post irg enable (intirg)

Post a request for enabling an IRQ line.

This service issues a request to the regular kernel for enabling the IRQ line mentioned. If the caller runs in primary mode, the request is scheduled but deferred until the current CPU leaves the real-time domain. Otherwise, the request is immediately handled.

**Parameters** 

irq | IRQ line to enable.

#### Tags

#### unrestricted

#### Note

The deferral is required as some interrupt management code involved in enabling interrupt lines may not be safely executed from primary mode.

6.4.3.5 int udd register device ( struct udd device \* udd )

Register a UDD device.

This routine registers a mini-driver at the UDD core.

**Parameters** 

*udd* UDD device descriptor which should describe the new device properties.

#### Returns

Zero is returned upon success, otherwise a negative error code is received, from the set of error codes defined by <a href="rtdm\_dev\_register">rtdm\_dev\_register</a>(). In addition, the following error codes can be returned:

- -EINVAL, some of the memory regions declared in the udd\_device.mem\_regions[] array have invalid properties, i.e. bad type, NULL name, zero length or address. Any undeclared region entry from the array must bear the UDD\_MEM\_NONE type.
- -EINVAL, if udd\_device.irq is different from UDD\_IRQ\_CUSTOM and UDD\_IRQ\_NONE but invalid, causing rtdm\_irq\_request() to fail.
- -EINVAL, if udd\_device.device\_flags contains invalid flags.
- -ENXIO can be received if this service is called while the Cobalt kernel is disabled.

Module Documentation

Tags

32

#### secondary-only

References rtdm\_driver::context\_size, rtdm\_driver::device\_count, udd\_device::device\_flags, rtdm\_driver::device\_flags, rtdm\_device::device\_flags, rtdm\_device::device\_flags, rtdm\_device::device\_flags, rtdm\_device::device\_interrupt, udd\_device::irq, rtdm\_device::label, udd\_device::mem\_regions, rtdm\_fd\_ops::open, rtdm\_driver::ops, rtdm\_driver::profile\_info, rtdm\_dev\_register(), rtdm\_dev\_unregister(), rtdm\_event\_init(), rtdm\_irq\_request(), RTDM\_NAMED\_DEVICE, RTDM\_PROTOCOL\_DEVICE, UDD\_IRQ\_CUSTOM, and UDD\_IRQ\_NONE.

6.4.3.6 int udd unregister device ( struct udd device \* udd )

Unregister a UDD device.

This routine unregisters a mini-driver from the UDD core. This routine waits until all connections to *udd* have been closed prior to unregistering.

**Parameters** 

udd	UDD device descriptor

#### Returns

Zero is returned upon success, otherwise -ENXIO is received if this service is called while the Cobalt kernel is disabled.

Tags

#### secondary-only

References udd\_device::irq, rtdm\_dev\_unregister(), rtdm\_event\_destroy(), rtdm\_irq\_free(), UDD\_IRQ\_CUSTOM, and UDD\_IRQ\_NONE.

# 6.5 Thread state flags

Bits reporting permanent or transient states of threads.

Collaboration diagram for Thread state flags:



#### Macros

#define XNSUSP 0x00000001

Suspended.

• #define XNPEND 0x00000002

Sleep-wait for a resource.

• #define XNDELAY 0x00000004

Delayed.

#define XNREADY 0x00000008

Linked to the ready queue.

#define XNDORMANT 0x00000010

Not started yet.

• #define XNZOMBIE 0x00000020

Zombie thread in deletion process.

• #define XNMAPPED 0x00000040

Thread is mapped to a linux task.

• #define XNRELAX 0x00000080

Relaxed shadow thread (blocking bit)

#define XNMIGRATE 0x00000100

Thread is currently migrating to another CPU.

#define XNHELD 0x00000200

Thread is held to process emergency.

• #define XNBOOST 0x00000400

Undergoes a PIP boost.

• #define XNDEBUG 0x00000800

Hit a debugger breakpoint.

• #define XNLOCK 0x00001000

Holds the scheduler lock (i.e.

#define XNRRB 0x00002000

Undergoes a round-robin scheduling.

• #define XNWARN 0x00004000

Issue SIGDEBUG on error detection.

#define XNFPU 0x00008000

Thread uses FPU.

• #define XNROOT 0x00010000

Root thread (that is, Linux/IDLE)

• #define XNWEAK 0x00020000

Non real-time shadow (from the WEAK class)

#define XNUSER 0x00040000

Shadow thread running in userland.

• #define XNJOINED 0x00080000

Another thread waits for joining this thread.

• #define XNTRAPLB 0x00100000

Trap lock break (i.e.

## 6.5.1 Detailed Description

Bits reporting permanent or transient states of threads.

#### 6.5.2 Macro Definition Documentation

#### 6.5.2.1 #define XNHELD 0x00000200

Thread is held to process emergency.

Referenced by xnthread\_resume(), and xnthread\_suspend().

#### 6.5.2.2 #define XNLOCK 0x00001000

Holds the scheduler lock (i.e.

not preemptible)

Referenced by xnthread\_set\_mode(), and xnthread\_suspend().

# 6.5.2.3 #define XNMIGRATE 0x00000100

Thread is currently migrating to another CPU.

# 6.5.2.4 #define XNPEND 0x00000002

Sleep-wait for a resource.

Referenced by xnsynch\_acquire(), xnsynch\_flush(), xnsynch\_sleep\_on(), xnsynch\_wakeup\_one\_sleeper(), xnsynch\_wakeup\_this\_sleeper(), xnthread\_resume(), and xnthread\_unblock().

# 6.5.2.5 #define XNREADY 0x00000008

Linked to the ready queue.

Referenced by xnthread resume(), and xnthread suspend().

#### 6.5.2.6 #define XNSUSP 0x00000001

#### Suspended.

Referenced by xnthread\_init(), xnthread\_start(), and xnthread\_suspend().

35

# 6.5.2.7 #define XNTRAPLB 0x00100000


Trap lock break (i.e. may not sleep with XNLOCK)
Referenced by xnthread\_suspend().

36 Module Documentation

# 6.6 Thread information flags

Bits reporting events notified to threads.

Collaboration diagram for Thread information flags:



#### Macros

#define XNTIMEO 0x00000001

Woken up due to a timeout condition.

• #define XNRMID 0x00000002

Pending on a removed resource.

#define XNBREAK 0x00000004

Forcibly awaken from a wait state.

#define XNKICKED 0x00000008

Forced out of primary mode.

• #define XNWAKEN 0x00000010

Thread waken up upon resource availability.

• #define XNROBBED 0x00000020

Robbed from resource ownership.

• #define XNCANCELD 0x00000040

Cancellation request is pending.

• #define XNMOVED 0x00000080

CPU migration in primary mode occurred.

• #define XNPIALERT 0x00001000

Priority inversion alert (SIGDEBUG sent)

• #define XNLBALERT 0x00002000

Scheduler lock break alert (SIGDEBUG sent)

## 6.6.1 Detailed Description

Bits reporting events notified to threads.

6.7 CAN Devices 37

# 6.7 CAN Devices

This is the common interface a RTDM-compliant CAN device has to provide.

Collaboration diagram for CAN Devices:



# **Data Structures**

struct can\_bittime\_std

Standard bit-time parameters according to Bosch.

struct can\_bittime\_btr

Hardware-specific BTR bit-times.

• struct can\_bittime

Custom CAN bit-time definition.

struct can\_filter

Filter for reception of CAN messages.

struct sockaddr\_can

Socket address structure for the CAN address family.

struct can\_frame

Raw CAN frame.

#### Macros

• #define AF\_CAN 29

CAN address family.

#define PF\_CAN AF\_CAN

CAN protocol family.

• #define SOL\_CAN\_RAW 103

CAN socket levels.

# **Typedefs**

typedef uint32\_t can\_id\_t

Type of CAN id (see CAN\_xxx\_MASK and CAN\_xxx\_FLAG)

typedef can\_id\_t can\_err\_mask\_t

Type of CAN error mask.

• typedef uint32\_t can\_baudrate\_t

Baudrate definition in bits per second.

• typedef enum CAN BITTIME TYPE can bittime type t

See CAN BITTIME TYPE.

typedef enum CAN\_MODE can\_mode\_t

See CAN\_MODE.

• typedef int can\_ctrlmode\_t

See CAN CTRLMODE.

typedef enum CAN\_STATE can\_state\_t

See CAN STATE.

typedef struct can\_filter can\_filter\_t

Filter for reception of CAN messages.

typedef struct can frame can frame t

Raw CAN frame.

#### **Enumerations**

enum CAN\_BITTIME\_TYPE { CAN\_BITTIME\_STD, CAN\_BITTIME\_BTR }
 Supported CAN bit-time types.

#### **CAN ID masks**

Bit masks for masking CAN IDs

• #define CAN\_EFF\_MASK 0x1FFFFFFF

Bit mask for extended CAN IDs.

• #define CAN SFF MASK 0x000007FF

Bit mask for standard CAN IDs.

# CAN ID flags

Flags within a CAN ID indicating special CAN frame attributes

#define CAN\_EFF\_FLAG 0x80000000

Extended frame.

#define CAN\_RTR\_FLAG 0x40000000

Remote transmission frame.

#define CAN ERR FLAG 0x20000000

Error frame (see Errors), not valid in struct can\_filter.

#define CAN\_INV\_FILTER CAN\_ERR\_FLAG

Invert CAN filter definition, only valid in struct can\_filter.

## Particular CAN protocols

Possible protocols for the PF CAN protocol family

Currently only the RAW protocol is supported.

• #define CAN RAW 1

Raw protocol of PF\_CAN, applicable to socket type SOCK\_RAW.

# CAN operation modes

Modes into which CAN controllers can be set

enum CAN\_MODE { CAN\_MODE\_STOP = 0, CAN\_MODE\_START, CAN\_MODE\_SLEEP }

# CAN controller modes

Special CAN controllers modes, which can be or'ed together.

Note

These modes are hardware-dependent. Please consult the hardware manual of the CAN controller for more detailed information.

- #define CAN\_CTRLMODE\_LISTENONLY 0x1
- #define CAN\_CTRLMODE\_LOOPBACK 0x2
- #define CAN CTRLMODE 3 SAMPLES 0x4

#### CAN controller states

States a CAN controller can be in.

```
    enum CAN_STATE {
        CAN_STATE_ERROR_ACTIVE = 0, CAN_STATE_ACTIVE = 0, CAN_STATE_ERROR_WARNING = 1, CAN_STATE_BUS_WARNING = 1,
        CAN_STATE_ERROR_PASSIVE = 2, CAN_STATE_BUS_PASSIVE = 2, CAN_STATE_BUS_OFF, CAN_STATE_SCANNING_BAUDRATE,
        CAN_STATE_STOPPED, CAN_STATE_SLEEPING }
```

# Timestamp switches

Arguments to pass to RTCAN\_RTIOC\_TAKE\_TIMESTAMP

#define RTCAN\_TAKE\_NO\_TIMESTAMPS 0

Switch off taking timestamps.

#define RTCAN\_TAKE\_TIMESTAMPS 1
 Do take timestamps.

RAW socket options

Setting and getting CAN RAW socket options.

• #define CAN RAW FILTER 0x1

CAN filter definition.

#define CAN RAW ERR FILTER 0x2

CAN error mask.

• #define CAN RAW LOOPBACK 0x3

CAN TX loopback.

#define CAN RAW RECV OWN MSGS 0x4

CAN receive own messages.

# **IOCTLs**

#### CAN device IOCTLs

#define SIOCGIFINDEX defined\_by\_kernel\_header\_file

Get CAN interface index by name.

- #define SIOCSCANBAUDRATE \_IOW(RTIOC\_TYPE\_CAN, 0x01, struct ifreq)
- #define SIOCGCANBAUDRATE \_IOWR(RTIOC\_TYPE\_CAN, 0x02, struct ifreq)
   Get baud rate.
- #define SIOCSCANCUSTOMBITTIME \_IOW(RTIOC\_TYPE\_CAN, 0x03, struct ifreq) Set custom bit time parameter.
- #define SIOCGCANCUSTOMBITTIME \_IOWR(RTIOC\_TYPE\_CAN, 0x04, struct ifreq)
   Get custom bit-time parameters.
- #define SIOCSCANMODE \_IOW(RTIOC\_TYPE\_CAN, 0x05, struct ifreq)

  Set operation mode of CAN controller.
- #define SIOCGCANSTATE \_IOWR(RTIOC\_TYPE\_CAN, 0x06, struct ifreq)

  Get current state of CAN controller.
- #define SIOCSCANCTRLMODE \_IOW(RTIOC\_TYPE\_CAN, 0x07, struct ifreq)
   Set special controller modes.
- #define SIOCGCANCTRLMODE \_IOWR(RTIOC\_TYPE\_CAN, 0x08, struct ifreq)

  Get special controller modes.
- #define RTCAN\_RTIOC\_TAKE\_TIMESTAMP\_IOW(RTIOC\_TYPE\_CAN, 0x09, int)

  Enable or disable storing a high precision timestamp upon reception of a CAN frame.
- #define RTCAN\_RTIOC\_RCV\_TIMEOUT\_IOW(RTIOC\_TYPE\_CAN, 0x0A, nanosecs\_rel\_t) Specify a reception timeout for a socket.
- #define RTCAN\_RTIOC\_SND\_TIMEOUT\_IOW(RTIOC\_TYPE\_CAN, 0x0B, nanosecs\_rel\_t) Specify a transmission timeout for a socket.

#### Error mask

Error class (mask) in can\_id field of struct can frame to be used with CAN RAW ERR FILTER.

**Note:** Error reporting is hardware dependent and most CAN controllers report less detailed error conditions than the SJA1000.

**Note:** In case of a bus-off error condition (CAN\_ERR\_BUSOFF), the CAN controller is **not** restarted automatically. It is the application's responsibility to react appropriately, e.g. calling CAN\_MODE\_START.

**Note:** Bus error interrupts (CAN\_ERR\_BUSERROR) are enabled when an application is calling a Recv function on a socket listening on bus errors (using CAN\_RAW\_ERR\_FILTER). After one bus error has occured, the interrupt will be disabled to allow the application time for error processing and to efficiently avoid bus error interrupt flooding.

- #define CAN\_ERR\_TX\_TIMEOUT 0x00000001U
  - TX timeout (netdevice driver)
- #define CAN\_ERR\_LOSTARB 0x00000002U

Lost arbitration (see data[0])

- #define CAN ERR CRTL 0x00000004U
  - Controller problems (see data[1])
- #define CAN\_ERR\_PROT 0x00000008U
  - Protocol violations (see data[2], data[3])
- #define CAN ERR TRX 0x00000010U
  - Transceiver status (see data[4])
- #define CAN\_ERR\_ACK 0x00000020U
  - Received no ACK on transmission.
- #define CAN ERR BUSOFF 0x00000040U

Bus off.

#define CAN\_ERR\_BUSERROR 0x00000080U
 Bus error (may flood!)

#define CAN\_ERR\_RESTARTED 0x00000100U
 Controller restarted.

#define CAN\_ERR\_MASK 0x1FFFFFFU
 Omit EFF, RTR, ERR flags.

# Arbitration lost error

Error in the data[0] field of struct can\_frame.

 #define CAN\_ERR\_LOSTARB\_UNSPEC 0x00 unspecified

# Controller problems

Error in the data[1] field of struct can\_frame.

- #define CAN\_ERR\_CRTL\_UNSPEC 0x00
   unspecified
- #define CAN\_ERR\_CRTL\_RX\_OVERFLOW 0x01 RX buffer overflow.
- #define CAN\_ERR\_CRTL\_TX\_OVERFLOW 0x02
   TX buffer overflow.
- #define CAN\_ERR\_CRTL\_RX\_WARNING 0x04 reached warning level for RX errors
- #define CAN\_ERR\_CRTL\_TX\_WARNING 0x08
   reached warning level for TX errors
- #define CAN\_ERR\_CRTL\_RX\_PASSIVE 0x10
   reached passive level for RX errors
- #define CAN\_ERR\_CRTL\_TX\_PASSIVE 0x20
   reached passive level for TX errors

# Protocol error type

Error in the data[2] field of struct can\_frame.

- #define CAN\_ERR\_PROT\_UNSPEC 0x00 unspecified
- #define CAN\_ERR\_PROT\_BIT 0x01 single bit error
- #define CAN\_ERR\_PROT\_FORM 0x02 frame format error
- #define CAN\_ERR\_PROT\_STUFF 0x04
   bit stuffing error
- #define CAN\_ERR\_PROT\_BIT0 0x08
   unable to send dominant bit
- #define CAN\_ERR\_PROT\_BIT1 0x10

unable to send recessive bit

#define CAN\_ERR\_PROT\_OVERLOAD 0x20

bus overload

• #define CAN ERR PROT ACTIVE 0x40

active error announcement

#define CAN\_ERR\_PROT\_TX 0x80

error occured on transmission

# Protocol error location

Error in the data[4] field of struct can\_frame.

- #define CAN\_ERR\_PROT\_LOC\_UNSPEC 0x00 unspecified
- #define CAN\_ERR\_PROT\_LOC\_SOF 0x03

start of frame

- #define CAN\_ERR\_PROT\_LOC\_ID28\_21 0x02
   ID bits 28 21 (SFF: 10 3)
- #define CAN\_ERR\_PROT\_LOC\_ID20\_18 0x06
   ID bits 20 18 (SFF: 2 0)
- #define CAN\_ERR\_PROT\_LOC\_SRTR 0x04 substitute RTR (SFF: RTR)
- #define CAN\_ERR\_PROT\_LOC\_IDE 0x05 identifier extension
- #define CAN\_ERR\_PROT\_LOC\_ID17\_13 0x07
   ID bits 17-13.
- #define CAN\_ERR\_PROT\_LOC\_ID12\_05 0x0F
   ID bits 12-5.
- #define CAN\_ERR\_PROT\_LOC\_ID04\_00 0x0E
   ID bits 4-0.
- #define CAN\_ERR\_PROT\_LOC\_RTR 0x0C
- #define CAN\_ERR\_PROT\_LOC\_RES1 0x0D
   reserved bit 1
- #define CAN\_ERR\_PROT\_LOC\_RES0 0x09
   reserved bit 0
- #define CAN\_ERR\_PROT\_LOC\_DLC 0x0B
   data length code
- #define CAN\_ERR\_PROT\_LOC\_DATA 0x0A data section
- #define CAN\_ERR\_PROT\_LOC\_CRC\_SEQ 0x08
   CRC sequence.
- #define CAN\_ERR\_PROT\_LOC\_CRC\_DEL 0x18 CRC delimiter.
- #define CAN\_ERR\_PROT\_LOC\_ACK 0x19
   ACK slot.
- #define CAN\_ERR\_PROT\_LOC\_ACK\_DEL 0x1B ACK delimiter.
- #define CAN\_ERR\_PROT\_LOC\_EOF 0x1A
   end of frame

- #define CAN\_ERR\_PROT\_LOC\_INTERM 0x12 intermission
- #define CAN\_ERR\_TRX\_UNSPEC 0x00

0000 0000

#define CAN\_ERR\_TRX\_CANH\_NO\_WIRE 0x04

0000 0100

- #define CAN\_ERR\_TRX\_CANH\_SHORT\_TO\_BAT 0x05
   0000 0101
- #define CAN\_ERR\_TRX\_CANH\_SHORT\_TO\_VCC 0x06 0000 0110
- #define CAN\_ERR\_TRX\_CANH\_SHORT\_TO\_GND 0x07 0000 0111
- #define CAN\_ERR\_TRX\_CANL\_NO\_WIRE 0x40 0100 0000
- #define CAN\_ERR\_TRX\_CANL\_SHORT\_TO\_BAT 0x50
   0101 0000
- #define CAN\_ERR\_TRX\_CANL\_SHORT\_TO\_VCC 0x60 0110 0000
- #define CAN\_ERR\_TRX\_CANL\_SHORT\_TO\_GND 0x70
- #define CAN\_ERR\_TRX\_CANL\_SHORT\_TO\_CANH 0x80 1000 0000

# 6.7.1 Detailed Description

This is the common interface a RTDM-compliant CAN device has to provide. Feel free to report bugs and comments on this profile to the "Socketcan" mailing list (Socketcan-core@lists.berlios.de) or directly to the authors (wg@grandegger.com or Sebastian.Smolorz@stud.uni-hannover.de).

### **Profile Revision: 2**

**Device Characteristics** 

Device Flags: RTDM\_PROTOCOL\_DEVICE

Protocol Family: PF\_CAN Socket Type: SOCK\_RAW

Device Class: RTDM\_CLASS\_CAN

Supported Operations

### Socket

Tags

# secondary-only

Specific return values:

-EPROTONOSUPPORT (Protocol is not supported by the driver. See CAN protocols for possible protocols.)

#### Close

Blocking calls to any of the Send or Receive functions will be unblocked when the socket is closed and return with an error.

#### Tags

#### secondary-only

Specific return values: none

**IOCTL** 

Tags

task-unrestricted. see below Specific return values: see below

#### Bind

Binds a socket to one or all CAN devices (see struct sockaddr\_can). If a filter list has been defined with setsockopt (see Sockopts), it will be used upon reception of CAN frames to decide whether the bound socket will receive a frame. If no filter has been defined, the socket will receive all CAN frames on the specified interface(s).

Binding to special interface index 0 will make the socket receive CAN frames from all CAN interfaces. Binding to an interface index is also relevant for the Send functions because they will transmit a message over the interface the socket is bound to when no socket address is given to them.

Tags

## secondary-only

Specific return values:

- -EFAULT (It was not possible to access user space memory area at the specified address.)
- -ENOMEM (Not enough memory to fulfill the operation)
- -EINVAL (Invalid address family, or invalid length of address structure)
- -ENODEV (Invalid CAN interface index)
- -ENOSPC (No enough space for filter list)
- -EBADF (Socket is about to be closed)
- -EAGAIN (Too many receivers. Old binding (if any) is still active. Close some sockets and try again.)

# Setsockopt, Getsockopt

These functions allow to set and get various socket options. Currently, only CAN raw sockets are supported.

Supported Levels and Options:

- Level SOL\_CAN\_RAW : CAN RAW protocol (see CAN\_RAW)
  - Option CAN RAW FILTER: CAN filter list
  - Option CAN\_RAW\_ERR\_FILTER : CAN error mask
  - Option CAN RAW LOOPBACK: CAN TX loopback to local sockets

Tags

task-unrestricted Specific return values: see links to options above.

# Recv, Recvfrom, Recvmsg

These functions receive CAN messages from a socket. Only one message per call can be received, so only one buffer with the correct length must be passed. For SOCK\_RAW, this is the size of struct can frame.

Unlike a call to one of the Send functions, a Recv function will not return with an error if an interface is down (due to bus-off or setting of stop mode) or in sleep mode. Moreover, in such a case there may still be some CAN messages in the socket buffer which could be read out successfully.

It is possible to receive a high precision timestamp with every CAN message. The condition is a former instruction to the socket via RTCAN\_RTIOC\_TAKE\_TIMESTAMP. The timestamp will be copied to the msg\_control buffer of struct msghdr if it points to a valid memory location with size of nanosecs\_abs\_t. If this is a NULL pointer the timestamp will be discarded silently.

**Note:** A msg\_controllen of 0 upon completion of the function call indicates that no timestamp is available for that message.

Supported Flags [in]:

- MSG\_DONTWAIT (By setting this flag the operation will only succeed if it would not block, i.e. if there is a message in the socket buffer. This flag takes precedence over a timeout specified by RTCAN RTIOC RCV TIMEOUT.)
- MSG\_PEEK (Receive a message but leave it in the socket buffer. The next receive operation will get that message again.)

Supported Flags [out]: none

Tags

#### mode-unrestricted

Specific return values:

• Non-negative value (Indicating the successful reception of a CAN message. For SOCK\_RAW, this is the size of struct can frame regardless of the actual size of the payload.)

- -EFAULT (It was not possible to access user space memory area at one of the specified addresses.)
- -EINVAL (Unsupported flag detected, or invalid length of socket address buffer, or invalid length of message control buffer)
- -EMSGSIZE (Zero or more than one iovec buffer passed, or buffer too small)
- -EAGAIN (No data available in non-blocking mode)
- -EBADF (Socket was closed.)
- -EINTR (Operation was interrupted explicitly or by signal.)
- -ETIMEDOUT (Timeout)

# Send, Sendto, Sendmsg

These functions send out CAN messages. Only one message per call can be transmitted, so only one buffer with the correct length must be passed. For SOCK\_RAW, this is the size of struct can\_frame. The following only applies to SOCK\_RAW: If a socket address of struct sockaddr\_can is given, only can\_ifindex is used. It is also possible to omit the socket address. Then the interface the socket is bound to will be used for sending messages.

If an interface goes down (due to bus-off or setting of stop mode) all senders that were blocked on this interface will be woken up.

Supported Flags:

 MSG\_DONTWAIT (By setting this flag the transmit operation will only succeed if it would not block. This flag takes precedence over a timeout specified by RTCAN\_RTIOC\_SND\_TIMEO-UT.)

Tags

#### mode-unrestricted

Specific return values:

- Non-negative value equal to given buffer size (Indicating the successful completion of the function call. See also note.)
- -EOPNOTSUPP (MSG\_OOB flag is not supported.)
- -EINVAL (Unsupported flag detected *or:* Invalid length of socket address *or:* Invalid address family *or:* Data length code of CAN frame not between 0 and 15 *or:* CAN standard frame has got an ID not between 0 and 2031)
- -EMSGSIZE (Zero or more than one buffer passed or invalid size of buffer)
- -EFAULT (It was not possible to access user space memory area at one of the specified addresses.)
- -ENXIO (Invalid CAN interface index 0 is not allowed here or socket not bound or rather bound to all interfaces.)
- -ENETDOWN (Controller is bus-off or in stopped state.)
- -ECOMM (Controller is sleeping)
- -EAGAIN (Cannot transmit without blocking but a non-blocking call was requested.)
- -EINTR (Operation was interrupted explicitly or by signal)
- -EBADF (Socket was closed.)
- -ETIMEDOUT (Timeout)

**Note:** A successful completion of the function call does not implicate a successful transmission of the message.

# 6.7.2 Macro Definition Documentation

# 6.7.2.1 #define CAN\_CTRLMODE\_3\_SAMPLES 0x4

Triple sampling mode

In this mode the CAN controller uses Triple sampling.

# 6.7.2.2 #define CAN CTRLMODE LISTENONLY 0x1

# Listen-Only mode

In this mode the CAN controller would give no acknowledge to the CAN-bus, even if a message is received successfully and messages would not be transmitted. This mode might be useful for busmonitoring, hot-plugging or throughput analysis.

#### Examples:

rtcanconfig.c.

# 6.7.2.3 #define CAN\_CTRLMODE\_LOOPBACK 0x2

#### Loopback mode

In this mode the CAN controller does an internal loop-back, a message is transmitted and simultaneously received. That mode can be used for self test operation.

#### Examples:

rtcanconfig.c.

# 6.7.2.4 #define CAN\_ERR\_LOSTARB\_UNSPEC 0x00

unspecified

else bit number in bitstream

6.7.2.5 #define CAN RAW ERR FILTER 0x2

# CAN error mask.

A CAN error mask (see Errors) can be set with setsockopt. This mask is then used to decide if error frames are delivered to this socket in case of error condidtions. The error frames are marked with the CAN\_ERR\_FLAG of CAN\_xxx\_FLAG and must be handled by the application properly. A detailed description of the errors can be found in the can\_id and the data fields of struct can\_frame (see Errors for futher details).

# **Parameters**

in	level	SOL_CAN_RAW
in	optname	CAN_RAW_ERR_FILTER
in	optval	Pointer to error mask of type can_err_mask_t.

in	optlen	Size of error mask: sizeof(can_err_mask_t).
----	--------	---

#### Tags

#### task-unrestricted

Specific return values:

- -EFAULT (It was not possible to access user space memory area at the specified address.)
- -EINVAL (Invalid length "optlen")

# Examples:

rtcanrecv.c.

6.7.2.6 #define CAN\_RAW\_FILTER 0x1

CAN filter definition.

A CAN raw filter list with elements of struct can\_filter can be installed with setsockopt. This list is used upon reception of CAN frames to decide whether the bound socket will receive a frame. An empty filter list can also be defined using optlen = 0, which is recommanded for write-only sockets.

If the socket was already bound with Bind, the old filter list gets replaced with the new one. Be aware that already received, but not read out CAN frames may stay in the socket buffer.

#### **Parameters**

in	level	SOL_CAN_RAW
in	optname	CAN_RAW_FILTER
in	optval	Pointer to array of struct can_filter.
in	optlen	Size of filter list: count * sizeof( struct can_filter).

#### Tags

#### task-unrestricted

Specific return values:

- -EFAULT (It was not possible to access user space memory area at the specified address.)
- -ENOMEM (Not enough memory to fulfill the operation)
- -EINVAL (Invalid length "optlen")
- -ENOSPC (No space to store filter list, check RT-Socket-CAN kernel parameters)

# Examples:

can-rtt.c, rtcanrecv.c, and rtcansend.c.

# 6.7.2.7 #define CAN\_RAW\_LOOPBACK 0x3

# CAN TX loopback.

The TX loopback to other local sockets can be selected with this setsockopt.

# Note

The TX loopback feature must be enabled in the kernel and then the loopback to other local TX sockets is enabled by default.

#### **Parameters**

in	level	SOL_CAN_RAW
in	optname	CAN_RAW_LOOPBACK
in	optval	Pointer to integer value.
in	optlen	Size of int: sizeof(int).

#### Tags

#### task-unrestricted

Specific return values:

- -EFAULT (It was not possible to access user space memory area at the specified address.)
- -EINVAL (Invalid length "optlen")
- -EOPNOTSUPP (not supported, check RT-Socket-CAN kernel parameters).

#### Examples:

rtcansend.c.

6.7.2.8 #define CAN\_RAW\_RECV\_OWN\_MSGS 0x4

CAN receive own messages.

Not supported by RT-Socket-CAN, but defined for compatibility with Socket-CAN.

6.7.2.9 #define RTCAN\_RTIOC\_RCV\_TIMEOUT\_IOW(RTIOC\_TYPE\_CAN, 0x0A, nanosecs\_rel\_t)

Specify a reception timeout for a socket.

Defines a timeout for all receive operations via a socket which will take effect when one of the receive functions is called without the MSG\_DONTWAIT flag set.

The default value for a newly created socket is an infinite timeout.

Note

The setting of the timeout value is not done atomically to avoid locks. Please set the value before receiving messages from the socket.

# Parameters

in	arg	Pointer to nanosecs_rel_t variable. The value is interpreted as relative
		timeout in nanoseconds in case of a positive value. See Timeouts for
		special timeouts.

#### Returns

0 on success, otherwise:

-EFAULT: It was not possible to access user space memory area at the specified address.

Tags

task-unrestricted

Examples:

rtcanrecv.c.

6.7.2.10 #define RTCAN\_RTIOC\_SND\_TIMEOUT\_IOW(RTIOC\_TYPE\_CAN, 0x0B, nanosecs\_rel\_t)

Specify a transmission timeout for a socket.

Defines a timeout for all send operations via a socket which will take effect when one of the send functions is called without the MSG\_DONTWAIT flag set.

The default value for a newly created socket is an infinite timeout.

Note

The setting of the timeout value is not done atomically to avoid locks. Please set the value before sending messages to the socket.

# **Parameters**

in	arg	Pointer to nanosecs_rel_t variable. The value is interpreted as relative
		timeout in nanoseconds in case of a positive value. See Timeouts for
		special timeouts.

#### Returns

0 on success, otherwise:

-EFAULT: It was not possible to access user space memory area at the specified address.

Tags

task-unrestricted

Examples:

rtcansend.c.

6.7.2.11 #define RTCAN\_RTIOC\_TAKE\_TIMESTAMP\_IOW(RTIOC\_TYPE\_CAN, 0x09, int)

Enable or disable storing a high precision timestamp upon reception of a CAN frame.

A newly created socket takes no timestamps by default.

#### **Parameters**

in	arg	int variable, see Timestamp switches
----	-----	--------------------------------------

# Returns

0 on success.

Tags

task-unrestricted

Note

Activating taking timestamps only has an effect on newly received CAN messages from the bus. Frames that already are in the socket buffer do not have timestamps if it was deactivated before. See Receive for more details.

Examples:

rtcanrecv.c.

6.7.2.12 #define SIOCGCANBAUDRATE \_IOWR(RTIOC\_TYPE\_CAN, 0x02, struct ifreq)

Get baud rate.

#### **Parameters**

in,out	arg	Pointer to interface request structure buffer (struct ifreq from
		linux/if.h). ifr_name must hold a valid CAN interface name, ifr_ifru
		will be filled with an instance of can_baudrate_t.

# Returns

0 on success, otherwise:

- -EFAULT: It was not possible to access user space memory area at the specified address.
- -ENODEV: No device with specified name exists.
- -EINVAL: No baud rate was set yet.

#### Tags

#### task-unrestricted

6.7.2.13 #define SIOCGCANCTRLMODE \_IOWR(RTIOC\_TYPE\_CAN, 0x08, struct ifreq)

# Get special controller modes.

#### **Parameters**

in	arg	Pointer to interface request structure buffer (struct ifreq from
		linux/if.h). ifr_name must hold a valid CAN interface name, ifr_ifru
		must be filled with an instance of can_ctrlmode_t.

#### Returns

0 on success, otherwise:

- -EFAULT: It was not possible to access user space memory area at the specified address.
- -ENODEV: No device with specified name exists.
- -EINVAL: No baud rate was set yet.

# Tags

# task-unrestricted, might-switch

# 6.7.2.14 #define SIOCGCANCUSTOMBITTIME \_IOWR(RTIOC\_TYPE\_CAN, 0x04, struct ifreq)

# Get custom bit-time parameters.

# **Parameters**

in,out	arg	Pointer	to	interface	request	structure	buffer	(struct	ifreq	from
		linux/if.h	ı). :	ifr_nameι	must hold	l a valid C	AN inte	rface nan	ne, ifr_	_ifru
		will be f	illed	d with an ir	nstance o	f struct <mark>ca</mark>	n_bittim	e.		

### Returns

0 on success, otherwise:

- -EFAULT: It was not possible to access user space memory area at the specified address.
- -ENODEV: No device with specified name exists.
- -EINVAL: No baud rate was set yet.

# Tags

# task-unrestricted

# 6.7.2.15 #define SIOCGCANSTATE \_IOWR(RTIOC\_TYPE\_CAN, 0x06, struct ifreq)

#### Get current state of CAN controller.

States are divided into main states and additional error indicators. A CAN controller is always in exactly one main state. CAN bus errors are registered by the CAN hardware and collected by the driver. There is one error indicator (bit) per error type. If this IOCTL is triggered the error types which occured since the last call of this IOCTL are reported and thereafter the error indicators are cleared. See also CAN controller states.

#### **Parameters**

i	n,out	arg	Pointer	to	interface	request	structure	buffer	(struct	ifreq	from
			linux/if.h	ı). :	ifr_name r	must hold	a valid C	AN inte	rface nan	ne, ifr	_ifru
			will be f	illed	d with an ir	nstance o	f can_mod	e_t.			

#### Returns

### 0 on success, otherwise:

- -EFAULT: It was not possible to access user space memory area at the specified address.
- -ENODEV: No device with specified name exists.

# Tags

task-unrestricted, might-switch

# 6.7.2.16 #define SIOCGIFINDEX defined by kernel header file

# Get CAN interface index by name.

#### **Parameters**

in,out	arg	Pointer to interface request structure buffer (struct ifreq from
		linux/if.h). If ifr_name holds a valid CAN interface name ifr_ifindex
		will be filled with the corresponding interface index.

#### Returns

#### 0 on success, otherwise:

- -EFAULT: It was not possible to access user space memory area at the specified address.
- -ENODEV: No device with specified name exists.

# Tags

# task-unrestricted

# Examples:

can-rtt.c, rtcanconfig.c, rtcanrecv.c, and rtcansend.c.

# 6.7.2.17 #define SIOCSCANBAUDRATE \_IOW(RTIOC\_TYPE\_CAN, 0x01, struct ifreq)

### Set baud rate.

The baudrate must be specified in bits per second. The driver will try to calculate resonable CAN bit-timing parameters. You can use SIOCSCANCUSTOMBITTIME to set custom bit-timing.

#### **Parameters**

in	arg	Pointer to interface request structure buffer (struct ifreq from
		linux/if.h). ifr_name must hold a valid CAN interface name, ifr_ifru
		must be filled with an instance of can_baudrate_t.

#### Returns

0 on success, otherwise:

- -EFAULT: It was not possible to access user space memory area at the specified address.
- -ENODEV: No device with specified name exists.
- -EINVAL: No valid baud rate, see can\_baudrate\_t.
- -EDOM : Baud rate not possible.
- -EAGAIN: Request could not be successully fulfilled. Try again.

# Tags

task-unrestricted, might-switch

#### Note

Setting the baud rate is a configuration task. It should be done deliberately or otherwise CAN messages will likely be lost.

# Examples:

rtcanconfig.c.

6.7.2.18 #define SIOCSCANCTRLMODE \_IOW(RTIOC\_TYPE\_CAN, 0x07, struct ifreq)

Set special controller modes.

Various special controller modes could be or'ed together (see CAN CTRLMODE for further information).

#### **Parameters**

in	arg	Pointer to	o interface	request	structure	buffer	(struct	ifreq	from
		linux/if.h).	ifr_name	must hold	l a valid C	AN inte	rface nam	ne, ifr_	_ifru
		must be f	lled with an	instance	of can_ctr	lmode_	ţt.		

# Returns

0 on success, otherwise:

- -EFAULT: It was not possible to access user space memory area at the specified address.
- -ENODEV: No device with specified name exists.
- -EINVAL: No valid baud rate, see can\_baudrate\_t.
- -EAGAIN: Request could not be successully fulfilled. Try again.

#### Tags

task-unrestricted, might-switch

#### Note

Setting special controller modes is a configuration task. It should be done deliberately or otherwise CAN messages will likely be lost.

#### Examples:

rtcanconfig.c.

# 6.7.2.19 #define SIOCSCANCUSTOMBITTIME \_IOW(RTIOC\_TYPE\_CAN, 0x03, struct ifreq)

Set custom bit time parameter.

Custem-bit time could be defined in various formats (see struct can\_bittime).

#### **Parameters**

54

in	arg	Pointer to interface request structure buffer (struct ifreq from
		linux/if.h). ifr_name must hold a valid CAN interface name, ifr_ifru
		must be filled with an instance of struct can_bittime.

# Returns

0 on success, otherwise:

- -EFAULT: It was not possible to access user space memory area at the specified address.
- -ENODEV: No device with specified name exists.
- -EINVAL: No valid baud rate, see can\_baudrate\_t.
- -EAGAIN: Request could not be successully fulfilled. Try again.

# Tags

task-unrestricted, might-switch

#### Note

Setting the bit-time is a configuration task. It should be done deliberately or otherwise CAN messages will likely be lost.

# Examples:

rtcanconfig.c.

# 6.7.2.20 #define SIOCSCANMODE \_IOW(RTIOC\_TYPE\_CAN, 0x05, struct ifreq)

Set operation mode of CAN controller.

See CAN controller modes for available modes.

# Parameters

in	arg	Pointer to interface request structure buffer (struct ifreq from
		linux/if.h). ifr_name must hold a valid CAN interface name, ifr_ifru
		must be filled with an instance of can_mode_t.

#### Returns

0 on success, otherwise:

- -EFAULT: It was not possible to access user space memory area at the specified address.
- -ENODEV: No device with specified name exists.
- -EAGAIN: (CAN\_MODE\_START, CAN\_MODE\_STOP) Could not successfully set mode, hardware is busy. Try again.
- -EINVAL: (CAN\_MODE\_START) Cannot start controller, set baud rate first.
- -ENETDOWN: (CAN\_MODE\_SLEEP) Cannot go into sleep mode because controller is stopped or bus off.
- -EOPNOTSUPP: unknown mode

Tags

task-unrestricted, might-switch

Note

Setting a CAN controller into normal operation after a bus-off can take some time (128 occurrences of 11 consecutive recessive bits). In such a case, although this IOCTL will return immediately with success and SIOCGCANSTATE will report CAN\_STATE\_ACTIVE, bus-off recovery may still be in progress.

If a controller is bus-off, setting it into stop mode will return no error but the controller remains bus-off.

# Examples:

rtcanconfig.c.

```
6.7.2.21 #define SOL_CAN_RAW 103
```

CAN socket levels.

Used for Sockopts for the particular protocols.

Examples:

can-rtt.c, rtcanrecv.c, and rtcansend.c.

6.7.3 Typedef Documentation

6.7.3.1 typedef struct can\_filter can\_filter\_t

Filter for reception of CAN messages.

This filter works as follows: A received CAN ID is AND'ed bitwise with can\_mask and then compared to can\_id. This also includes the CAN\_EFF\_FLAG and CAN\_RTR\_FLAG of CAN\_xxx\_FLAG. If this comparison is true, the message will be received by the socket. The logic can be inverted with the can\_id flag CAN\_INV\_FILTER:

```
if (can_id & CAN_INV_FILTER) {
   if ((received_can_id & can_mask) != (can_id & ~CAN_INV_FILTER))
      accept-message;
} else {
   if ((received_can_id & can_mask) == can_id)
      accept-message;
}
```

Multiple filters can be arranged in a filter list and set with Sockopts. If one of these filters matches a CAN ID upon reception of a CAN frame, this frame is accepted.

```
6.7.3.2 typedef struct can_frame can_frame_t
```

Raw CAN frame.

Central structure for receiving and sending CAN frames.

Examples:

rtcanrecv.c.

# 6.7.4 Enumeration Type Documentation

# 6.7.4.1 enum CAN\_BITTIME\_TYPE

Supported CAN bit-time types.

#### Enumerator

**CAN\_BITTIME\_STD** Standard bit-time definition according to Bosch.

CAN BITTIME BTR Hardware-specific BTR bit-time definition.

#### 6.7.4.2 enum CAN MODE

#### Enumerator

CAN MODE STOP Set controller in Stop mode (no reception / transmission possible)

CAN\_MODE\_START Set controller into normal operation.

Coming from stopped mode or bus off, the controller begins with no errors in CAN\_STATE\_A-CTIVE.

CAN MODE SLEEP Set controller into Sleep mode.

This is only possible if the controller is not stopped or bus-off.

Notice that sleep mode will only be entered when there is no bus activity. If the controller detects bus activity while "sleeping" it will go into operating mode again.

To actively leave sleep mode again trigger CAN\_MODE\_START.

# 6.7.4.3 enum CAN\_STATE

#### Enumerator

CAN STATE ERROR ACTIVE CAN controller is error active.

CAN\_STATE\_ACTIVE CAN controller is active.

CAN\_STATE\_ERROR\_WARNING CAN controller is error active, warning level is reached.

CAN\_STATE\_BUS\_WARNING CAN controller is error active, warning level is reached.

CAN STATE ERROR PASSIVE CAN controller is error passive.

CAN\_STATE\_BUS\_PASSIVE CAN controller is error passive.

CAN STATE BUS OFF CAN controller went into Bus Off.

CAN\_STATE\_SCANNING\_BAUDRATE CAN controller is scanning to get the baudrate.

CAN STATE STOPPED CAN controller is in stopped mode.


**CAN\_STATE\_SLEEPING** CAN controller is in Sleep mode.

6.8 RTDM 57

# 6.8 RTDM

The Real-Time Driver Model (RTDM) provides a unified interface to both users and developers of real-time device drivers.

Collaboration diagram for RTDM:

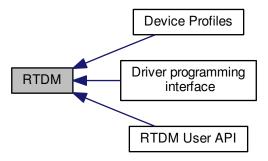

# Modules

RTDM User API

Application interface to RTDM services.

• Driver programming interface

RTDM driver programming interface.

• Device Profiles

Pre-defined classes of real-time devices.

# **Typedefs**

• typedef uint64\_t nanosecs\_abs\_t

RTDM type for representing absolute dates.

typedef int64\_t nanosecs\_rel\_t

RTDM type for representing relative intervals.

# **API Versioning**

• #define RTDM API VER 9

Common user and driver API version.

• #define RTDM\_API\_MIN\_COMPAT\_VER 9

Minimum API revision compatible with the current release.

RTDM TIMEOUT xxx

Special timeout values

- #define RTDM\_TIMEOUT\_INFINITE 0
   Block forever.
- #define RTDM TIMEOUT NONE (-1)

Any negative timeout means non-blocking.

# 6.8.1 Detailed Description

The Real-Time Driver Model (RTDM) provides a unified interface to both users and developers of real-time device drivers. Specifically, it addresses the constraints of mixed RT/non-RT systems like Xenomai. RTDM conforms to POSIX semantics (IEEE Std 1003.1) where available and applicable.

**API Revision:** 8

6.8.2 Macro Definition Documentation

6.8.2.1 #define RTDM\_TIMEOUT\_INFINITE 0

Block forever.

6.8.2.2 #define RTDM\_TIMEOUT\_NONE (-1)

Any negative timeout means non-blocking.

6.8.3 Typedef Documentation

6.8.3.1 typedef uint64\_t nanosecs\_abs\_t

RTDM type for representing absolute dates.

Its base type is a 64 bit unsigned integer. The unit is 1 nanosecond.

Examples:

rtcanrecv.c.

6.8.3.2 typedef int64\_t nanosecs\_rel\_t

RTDM type for representing relative intervals.

Its base type is a 64 bit signed integer. The unit is 1 nanosecond. Relative intervals can also encode the special timeouts "infinite" and "non-blocking", see RTDM\_TIMEOUT\_xxx.

Examples:

rtcanrecv.c.

6.9 RTDM User API 59

# 6.9 RTDM User API

Application interface to RTDM services.

Collaboration diagram for RTDM User API:



# **Files**

• file rtdm.h

Real-Time Driver Model for Xenomai, user API header.

# **Functions**

int rt\_dev\_open (const char \*path, int oflag,...)

Open a device.

• int rt\_dev\_socket (int protocol\_family, int socket\_type, int protocol)

Create a socket.

int rt\_dev\_close (int fd)

Close a device or socket.

• int rt\_dev\_ioctl (int fd, int request,...)

Issue an IOCTL.

ssize\_t rt\_dev\_read (int fd, void \*buf, size\_t nbyte)

Read from device.

• ssize\_t rt\_dev\_write (int fd, const void \*buf, size\_t nbyte)

Write to device.

• ssize\_t rt\_dev\_recvmsg (int fd, struct msghdr \*msg, int flags)

Receive message from socket.

ssize\_t rt\_dev\_recvfrom (int fd, void \*buf, size\_t len, int flags, struct sockaddr \*from, socklen\_t \*fromlen)

Receive message from socket.

ssize\_t rt\_dev\_recv (int fd, void \*buf, size\_t len, int flags)

Receive message from socket.

ssize\_t rt\_dev\_sendmsg (int fd, const struct msghdr \*msg, int flags)

Transmit message to socket.

• ssize\_t rt\_dev\_sendto (int fd, const void \*buf, size\_t len, int flags, const struct sockaddr \*to, socklen\_t tolen)

Transmit message to socket.

ssize\_t rt\_dev\_send (int fd, const void \*buf, size\_t len, int flags)

Transmit message to socket.

• int rt dev bind (int fd, const struct sockaddr \*my addr, socklen t addrlen)

Bind to local address.

• int rt\_dev\_connect (int fd, const struct sockaddr \*serv\_addr, socklen\_t addrlen)

Connect to remote address.

int rt\_dev\_listen (int fd, int backlog)

Listen for incomming connection requests.

int rt dev accept (int fd, struct sockaddr \*addr, socklen t \*addrlen)

Accept connection requests.

int rt\_dev\_shutdown (int fd, int how)

Shut down parts of a connection.

- int rt\_dev\_getsockopt (int fd, int level, int optname, void \*optval, socklen\_t \*optlen)
   Get socket option.
- int rt\_dev\_setsockopt (int fd, int level, int optname, const void \*optval, socklen\_t optlen) Set socket option.
- int rt\_dev\_getsockname (int fd, struct sockaddr \*name, socklen\_t \*namelen)

  Get local socket address.
- int rt\_dev\_getpeername (int fd, struct sockaddr \*name, socklen\_t \*namelen)
   Get socket destination address.

# 6.9.1 Detailed Description

Application interface to RTDM services. This is the upper interface of RTDM provided to application programs both in kernel and user space. Note that certain functions may not be implemented by every device. Refer to the Device Profiles for precise information.

# 6.9.2 Function Documentation

6.9.2.1 int rt\_dev\_accept ( int fd, struct sockaddr \* addr, socklen\_t \* addrlen )

# Accept connection requests.

### **Parameters**

in	fd	File descriptor as returned by rt_dev_socket()
out	addr	Buffer for remote address
in,out	addrlen	Address buffer size

### Returns

0 on success, otherwise negative error code

Action depends on driver implementation, see Device Profiles.

See Also

accept() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399

Tags

mode-unrestricted, might-switch

6.9.2.2 int rt\_dev\_bind ( int fd, const struct sockaddr \* my\_addr, socklen\_t addrlen )

Bind to local address.

6.9 RTDM User API 61

#### **Parameters**

in	fd	File descriptor as returned by rt_dev_socket()
in	my_addr	Address buffer
in	addrlen	Address buffer size

#### Returns

0 on success, otherwise negative error code

Action depends on driver implementation, see Device Profiles.

See Also

bind() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399

Tags

mode-unrestricted, might-switch

#### Examples:

rtcanrecv.c, and rtcansend.c.

6.9.2.3 int rt\_dev\_close (int fd)

Close a device or socket.

**Parameters** 

in	fd	File descriptor as returned by rt_dev_open() or rt_dev_socket()

#### Returns

0 on success, otherwise a negative error code.

Note

If the matching rt\_dev\_open() or rt\_dev\_socket() call took place in non-real-time context, rt\_dev\_close() must be issued within non-real-time as well. Otherwise, the call will fail.

Action depends on driver implementation, see Device Profiles.

See Also

close() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399

Tags

secondary-only, might-switch

Examples:

rtcanconfig.c, rtcanrecv.c, and rtcansend.c.

6.9.2.4 int rt\_dev\_connect ( int fd, const struct sockaddr \* serv\_addr, socklen\_t addrlen )

Connect to remote address.

#### **Parameters**

in	fd	File descriptor as returned by rt_dev_socket()
in	serv_addr	Address buffer
in	addrlen	Address buffer size

#### Returns

0 on success, otherwise negative error code

Action depends on driver implementation, see Device Profiles.

See Also

```
connect() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399
```

Tags

mode-unrestricted, might-switch

6.9.2.5 int rt\_dev\_getpeername ( int fd, struct sockaddr \* name, socklen\_t \* namelen )

#### Get socket destination address.

# **Parameters**

in	fd	File descriptor as returned by rt_dev_socket()
out	name	Address buffer
in,out	namelen	Address buffer size

### Returns

0 on success, otherwise negative error code

Action depends on driver implementation, see Device Profiles.

See Also

```
getpeername() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399
```

Tags

task-unrestricted, might-switch

6.9.2.6 int rt\_dev\_getsockname ( int fd, struct sockaddr \* name, socklen\_t \* namelen )

# Get local socket address.

# **Parameters**

in	fd	File descriptor as returned by rt_dev_socket()
out	name	Address buffer

6.9 RTDM User API 63

in,out	namelen	Address buffer size	
--------	---------	---------------------	--

#### Returns

0 on success, otherwise negative error code

Action depends on driver implementation, see Device Profiles.

See Also

getsockname() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399

Tags

task-unrestricted, might-switch

6.9.2.7 int rt\_dev\_getsockopt ( int fd, int level, int optname, void \* optval, socklen\_t \* optlen )

# Get socket option.

# **Parameters**

in	fd	File descriptor as returned by rt_dev_socket()
in	level	Addressed stack level
in	optname	Option name ID
out	optval	Value buffer
in,out	optlen	Value buffer size

### Returns

0 on success, otherwise negative error code

Action depends on driver implementation, see Device Profiles.

See Also

getsockopt() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399

Tags

task-unrestricted, might-switch

6.9.2.8 int rt\_dev\_ioctl ( int fd, int request, ... )

#### Issue an IOCTL.

### **Parameters**

in	fd	File descriptor as returned by rt_dev_open() or rt_dev_socket()
in	request	IOCTL code
		Optional third argument, depending on IOCTL function (void * or unsigned long)

#### Returns

Positiv value on success, otherwise negative error code

Action depends on driver implementation, see Device Profiles.

See Also

ioctl() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399

Tags

task-unrestricted, might-switch

Examples:

rtcanconfig.c, rtcanrecv.c, and rtcansend.c.

6.9.2.9 int rt\_dev\_listen ( int fd, int backlog )

Listen for incomming connection requests.

# **Parameters**

in	fd	File descriptor as returned by rt_dev_socket()
in	backlog	Maximum queue length

#### Returns

0 on success, otherwise negative error code

Action depends on driver implementation, see Device Profiles.

See Also

listen() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399

Tags

task-unrestricted, might-switch

6.9.2.10 int rt\_dev\_open ( const char \* path, int oflag, ... )

# Open a device.

### **Parameters**

in	path	Device name
in	oflag	Open flags
		Further parameters will be ignored.

# Returns

Positive file descriptor value on success, otherwise a negative error code.

Action depends on driver implementation, see Device Profiles.

See Also

open() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399

Tags

secondary-only, might-switch

6.9 RTDM User API 65

6.9.2.11 ssize\_t rt\_dev\_read ( int fd, void \* buf, size\_t nbyte )

Read from device.

#### **Parameters**

in	fd	File descriptor as returned by rt_dev_open()
out	buf	Input buffer
in	nbyte	Number of bytes to read

#### Returns

Number of bytes read, otherwise negative error code

Action depends on driver implementation, see Device Profiles.

See Also

```
read() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399
```

Tags

mode-unrestricted, might-switch

```
6.9.2.12 ssize_t rt_dev_recv ( int fd, void * buf, size_t len, int flags )
```

# Receive message from socket.

#### **Parameters**

in	fd	File descriptor as returned by rt_dev_socket()
out	buf	Message buffer
in	len	Message buffer size
in	flags	Message flags

# Returns

Number of bytes received, otherwise negative error code

Action depends on driver implementation, see Device Profiles.

See Also

```
recv() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399
```

Tags

mode-unrestricted, might-switch

6.9.2.13 ssize\_t rt\_dev\_recvfrom ( int fd, void \* buf, size\_t len, int flags, struct sockaddr \* from, socklen\_t \* fromlen )

Receive message from socket.

**Parameters** 

in	fd	File descriptor as returned by rt_dev_socket()

6.9 RTDM User API 67

out	buf	Message buffer
in	len	Message buffer size
in	flags	Message flags
out	from	Buffer for message sender address
in,out	fromlen	Address buffer size

#### Returns

Number of bytes received, otherwise negative error code

Action depends on driver implementation, see Device Profiles.

See Also

recvfrom() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399

Tags

mode-unrestricted, might-switch

Examples:

rtcanrecv.c.

6.9.2.14 ssize\_t rt\_dev\_recvmsg ( int fd, struct msghdr \* msg, int flags )

Receive message from socket.

#### **Parameters**

ſ	in	fd	File descriptor as returned by rt_dev_socket()
	in,out	msg	Message descriptor
Ì	in	flags	Message flags

## Returns

Number of bytes received, otherwise negative error code

Action depends on driver implementation, see Device Profiles.

See Also

recvmsg() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399

Tags

mode-unrestricted, might-switch

Examples:

rtcanrecv.c.

6.9.2.15 ssize\_t rt\_dev\_send ( int fd, const void \* buf, size\_t len, int flags )

Transmit message to socket.

#### **Parameters**

in	fd	File descriptor as returned by rt_dev_socket()
in	buf	Message buffer
in	len	Message buffer size
in	flags	Message flags

# Returns

Number of bytes sent, otherwise negative error code

Action depends on driver implementation, see Device Profiles.

See Also

```
send() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399
```

Tags

mode-unrestricted, might-switch

Examples:

rtcansend.c.

6.9.2.16 ssize\_t rt\_dev\_sendmsg (int fd, const struct msghdr \* msg, int flags)

Transmit message to socket.

#### **Parameters**

in	fd	File descriptor as returned by rt_dev_socket()
in	msg	Message descriptor
in	flags	Message flags

# Returns

Number of bytes sent, otherwise negative error code

Action depends on driver implementation, see Device Profiles.

See Also

```
sendmsg() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399
```

Tags

mode-unrestricted, might-switch

6.9.2.17 ssize\_t rt\_dev\_sendto ( int fd, const void \* buf, size\_t len, int flags, const struct sockaddr \* to, socklen t tolen )

Transmit message to socket.

6.9 RTDM User API 69

#### **Parameters**

in	fd	File descriptor as returned by rt_dev_socket()
in	buf	Message buffer
in	len	Message buffer size
in	flags	Message flags
in	to	Buffer for message destination address
in	tolen	Address buffer size

#### Returns

Number of bytes sent, otherwise negative error code

Action depends on driver implementation, see Device Profiles.

See Also

sendto() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399

Tags

mode-unrestricted, might-switch

Examples:

rtcansend.c.

6.9.2.18 int rt\_dev\_setsockopt (int fd, int level, int optname, const void \* optval, socklen\_t optlen)

Set socket option.

#### **Parameters**

in	fd	File descriptor as returned by rt_dev_socket()
in	level	Addressed stack level
in	optname	Option name ID
in	optval	Value buffer
in	optlen	Value buffer size

#### Returns

0 on success, otherwise negative error code

Action depends on driver implementation, see Device Profiles.

See Also

setsockopt() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399

Tags

task-unrestricted, might-switch

Examples:

rtcanrecv.c, and rtcansend.c.

6.9.2.19 int rt\_dev\_shutdown ( int fd, int how )

Shut down parts of a connection.

Module Documentation

#### **Parameters**

in	fd	File descriptor as returned by rt_dev_socket()
in	how	Specifies the part to be shut down (SHUT_xxx)

#### Returns

0 on success, otherwise negative error code

Action depends on driver implementation, see Device Profiles.

# See Also

```
shutdown() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399
```

# Tags

secondary-only, might-switch

6.9.2.20 int rt\_dev\_socket (int protocol\_family, int socket\_type, int protocol)

#### Create a socket.

#### **Parameters**

in	protocol_family	Protocol family (PF_xxx)
in	socket_type	Socket type (SOCK_xxx)
in	protocol	Protocol ID, 0 for default

# Returns

Positive file descriptor value on success, otherwise a negative error code.

Action depends on driver implementation, see Device Profiles.

# See Also

```
socket() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399
```

# Tags

secondary-only, might-switch

# Examples:

rtcanconfig.c, rtcanrecv.c, and rtcansend.c.

6.9.2.21 ssize\_t rt\_dev\_write ( int fd, const void \* buf, size\_t nbyte )

# Write to device.

# **Parameters**

in	fd	File descriptor as returned by rt_dev_open()
in	buf	Output buffer
in	nbyte	Number of bytes to write

6.9 RTDM User API

Returns

Number of bytes written, otherwise negative error code

Action depends on driver implementation, see Device Profiles.

See Also

write() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399

Tags

mode-unrestricted, might-switch

72 Module Documentation

# 6.10 Serial Devices

This is the common interface a RTDM-compliant serial device has to provide.

Collaboration diagram for Serial Devices:



This is the common interface a RTDM-compliant serial device has to provide. Feel free to comment on this profile via the Xenomai mailing list xenomai@xenomai.org or directly to the author jan.-kiszka@web.de.

**Profile Revision:** 3

**Device Characteristics** 

Device Flags: RTDM\_NAMED\_DEVICE, RTDM\_EXCLUSIVE

Device Class: RTDM\_CLASS\_SERIAL

Device Name: "/dev/rtdm/rtser<N>", N >= 0

**Supported Operations** 

# Open

Tags

secondary-only Specific return values: none **Close** 

Tags

secondary-only Specific return values: none **IOCTL** 

Tags

task-unrestricted. See below Specific return values: see below **Read** 

Tags

mode-unrestricted Specific return values:

- -ETIMEDOUT
- · -EINTR (interrupted explicitly or by signal)
- -EAGAIN (no data available in non-blocking mode)
- -EBADF (device has been closed while reading)
- -EIO (hardware error or broken bit stream)

#### Write

6.10 Serial Devices 73

# Tags

mode-unrestricted Specific return values:

- -ETIMEDOUT
- -EINTR (interrupted explicitly or by signal)
- -EAGAIN (no data written in non-blocking mode)
- -EBADF (device has been closed while writing)

# 6.11 Testing Devices

This group of devices is intended to provide in-kernel testing results.

Collaboration diagram for Testing Devices:



This group of devices is intended to provide in-kernel testing results. Feel free to comment on this profile via the Xenomai mailing list xenomai@xenomai.org or directly to the author jan.kiszka@web.de.

**Profile Revision: 2** 

**Device Characteristics** 

Device Flags: RTDM\_NAMED\_DEVICE Device Class: RTDM\_CLASS\_TESTING

**Supported Operations** 

Open

Tags

secondary-only Specific return values: none **Close** 

Tags

secondary-only Specific return values: none **IOCTL** 

Tags

task-unrestricted. See TSTIOCTLs below Specific return values: see TSTIOCTLs below

## 6.12 Real-time IPC

### **Profile Revision: 1**

Collaboration diagram for Real-time IPC:



## **Data Structures**

struct rtipc\_port\_label

Port label information structure.

struct sockaddr\_ipc

Socket address structure for the RTIPC address family.

## **Typedefs**

typedef int16\_t rtipc\_port\_t

Port number type for the RTIPC address family.

## Supported operations

Standard socket operations supported by the RTIPC protocols.

- int socket\_\_AF\_RTIPC (int domain=AF\_RTIPC, int type=SOCK\_DGRAM, int protocol) Create an endpoint for communication in the AF\_RTIPC domain.
- int close\_\_AF\_RTIPC (int sockfd)
  - Close a RTIPC socket descriptor.
- int bind\_\_AF\_RTIPC (int sockfd, const struct sockaddr\_ipc \*addr, socklen\_t addrlen)

  Bind a RTIPC socket to a port.
- int connect\_\_AF\_RTIPC (int sockfd, const struct sockaddr\_ipc \*addr, socklen\_t addrlen)

  Initiate a connection on a RTIPC socket.
- int setsockopt\_\_AF\_RTIPC (int sockfd, int level, int optname, const void \*optval, socklen\_t optlen) Set options on RTIPC sockets.
- int getsockopt\_\_AF\_RTIPC (int sockfd, int level, int optname, void \*optval, socklen\_t \*optlen)

  Get options on RTIPC sockets.
- ssize\_t sendmsg\_\_AF\_RTIPC (int sockfd, const struct msghdr \*msg, int flags)
   Send a message on a RTIPC socket.
- ssize\_t recvmsg\_\_AF\_RTIPC (int sockfd, struct msghdr \*msg, int flags)
  - Receive a message from a RTIPC socket.
- int getsockname\_\_AF\_RTIPC (int sockfd, struct sockaddr\_ipc \*addr, socklen\_t \*addrlen)

  Get socket name.
- int getpeername\_\_AF\_RTIPC (int sockfd, struct sockaddr\_ipc \*addr, socklen\_t \*addrlen)
   Get socket peer.

## RTIPC protocol list

protocols for the PF\_RTIPC protocol family

enum { IPCPROTO\_IPC = 0, IPCPROTO\_XDDP = 1, IPCPROTO\_IDDP = 2, IPCPROTO\_BUFP = 3 }

## XDDP socket options

Setting and getting XDDP socket options.

• #define XDDP\_LABEL 1

XDDP label assignment.

• #define XDDP\_POOLSZ 2

XDDP local pool size configuration.

• #define XDDP\_BUFSZ 3

XDDP streaming buffer size configuration.

• #define XDDP\_MONITOR 4

XDDP monitoring callback.

## XDDP events

Specific events occurring on XDDP channels, which can be monitored via the XDDP\_MONITOR socket option.

• #define XDDP EVTIN 1

Monitor writes to the non real-time endpoint.

• #define XDDP EVTOUT 2

Monitor reads from the non real-time endpoint.

#define XDDP EVTDOWN 3

Monitor close from the non real-time endpoint.

• #define XDDP EVTNOBUF 4

Monitor memory shortage for non real-time datagrams.

## IDDP socket options

Setting and getting IDDP socket options.

• #define IDDP\_LABEL 1

IDDP label assignment.

• #define IDDP\_POOLSZ 2

IDDP local pool size configuration.

## **BUFP** socket options

Setting and getting BUFP socket options.

#define BUFP LABEL 1

BUFP label assignment.

• #define BUFP BUFSZ 2

BUFP buffer size configuration.

## Socket level options

Setting and getting supported standard socket level options.

#define SO\_SNDTIMEO defined\_by\_kernel\_header\_file
 IPCPROTO\_IDDP and IPCPROTO\_BUFP protocols support the standard SO\_SNDTIMEO socket option, from the SOL\_SOCKET level.

#define SO\_RCVTIMEO defined\_by\_kernel\_header\_file

All RTIPC protocols support the standard SO\_RCVTIMEO socket option, from the SOL\_SOCKET level.

## 6.12.1 Detailed Description

### **Profile Revision: 1**

**Device Characteristics** 

Device Flags: RTDM\_PROTOCOL\_DEVICE

Protocol Family: PF\_RTIPC Socket Type: SOCK\_DGRAM

Device Class: RTDM\_CLASS\_RTIPC

### 6.12.2 Macro Definition Documentation

## 6.12.2.1 #define BUFP\_BUFSZ 2

BUFP buffer size configuration.

All messages written to a BUFP socket are buffered in a single per-socket memory area. Configuring the size of such buffer prior to binding the socket to a destination port is mandatory.

It is not allowed to configure a buffer size after the socket was bound. However, multiple configuration calls are allowed prior to the binding; the last value set will be used.

### Note

: the buffer memory is obtained from the host allocator by the bind call.

### **Parameters**

in	level	SOL_BUFP
in	optname	BUFP_BUFSZ
in	optval	Pointer to a variable of type size_t, containing the required size of the
		buffer to reserve at binding time
in	optlen	sizeof(size_t)

## Returns

0 is returned upon success. Otherwise:

- -EFAULT (Invalid data address given)
- -EALREADY (socket already bound)
- -EINVAL (optlen is invalid or \*optval is zero)

## Calling context:

### RT/non-RT

## Examples:

bufp-label.c, and bufp-readwrite.c.

6.12.2.2 #define BUFP LABEL 1

## BUFP label assignment.

ASCII label strings can be attached to BUFP ports, in order to connect sockets to them in a more descriptive way than using plain numeric port values.

When available, this label will be registered when binding, in addition to the port number (see BUFP port binding).

It is not allowed to assign a label after the socket was bound. However, multiple assignment calls are allowed prior to the binding; the last label set will be used.

### **Parameters**

in	level	SOL_BUFP
in	optname	BUFP_LABEL
in	optval	Pointer to struct rtipc_port_label
in	optlen	sizeof(struct rtipc_port_label)

### Returns

0 is returned upon success. Otherwise:

- -EFAULT (Invalid data address given)
- -EALREADY (socket already bound)
- -EINVAL (optlen is invalid)

Calling context:

RT/non-RT

Examples:

bufp-label.c.

6.12.2.3 #define IDDP LABEL 1

## IDDP label assignment.

ASCII label strings can be attached to IDDP ports, in order to connect sockets to them in a more descriptive way than using plain numeric port values.

When available, this label will be registered when binding, in addition to the port number (see IDDP port binding).

It is not allowed to assign a label after the socket was bound. However, multiple assignment calls are allowed prior to the binding; the last label set will be used.

**Parameters** 

in	level	SOL_IDDP
in	optname	IDDP_LABEL
in	optval	Pointer to struct rtipc_port_label
in	optlen	sizeof(struct rtipc_port_label)

### Returns

0 is returned upon success. Otherwise:

- -EFAULT (Invalid data address given)
- -EALREADY (socket already bound)
- -EINVAL (optlen is invalid)

## Calling context:

RT/non-RT

## Examples:

iddp-label.c.

## 6.12.2.4 #define IDDP\_POOLSZ 2

IDDP local pool size configuration.

By default, the memory needed to convey the data is pulled from Xenomai's system pool. Setting a local pool size overrides this default for the socket.

If a non-zero size was configured, a local pool is allocated at binding time. This pool will provide storage for pending datagrams.

It is not allowed to configure a local pool size after the socket was bound. However, multiple configuration calls are allowed prior to the binding; the last value set will be used.

### Note

: the pool memory is obtained from the host allocator by the bind call.

### **Parameters**

in	level	SOL_IDDP
in	optname	IDDP_POOLSZ
in	optval	Pointer to a variable of type size_t, containing the required size of the
		local pool to reserve at binding time
in	optlen	sizeof(size_t)

## Returns

0 is returned upon success. Otherwise:

- -EFAULT (Invalid data address given)
- -EALREADY (socket already bound)
- -EINVAL (optlen is invalid or \*optval is zero)

## Calling context:

RT/non-RT

Examples:

iddp-sendrecv.c.

6.12.2.5 #define SO\_RCVTIMEO defined\_by\_kernel\_header\_file

All RTIPC protocols support the standard SO RCVTIMEO socket option, from the SOL\_SOCKET level.

See Also

setsockopt(), getsockopt() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399/

Examples:

xddp-label.c.

Referenced by rt\_pipe\_read\_timed().

6.12.2.6 #define SO\_SNDTIMEO defined\_by\_kernel\_header\_file

IPCPROTO\_IDDP and IPCPROTO\_BUFP protocols support the standard SO\_SNDTIMEO socket option, from the SOL\_SOCKET level.

See Also

setsockopt(), getsockopt() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399/

6.12.2.7 #define XDDP\_BUFSZ 3

XDDP streaming buffer size configuration.

In addition to sending datagrams, real-time threads may stream data in a byte-oriented mode through the port as well. This increases the bandwidth and reduces the overhead, when the overall data to send to the Linux domain is collected by bits, and keeping the message boundaries is not required.

This feature is enabled when a non-zero buffer size is set for the socket. In that case, the real-time data accumulates into the streaming buffer when MSG MORE is passed to any of the send functions, until:

- the receiver from the Linux domain wakes up and consumes it,
- a different source port attempts to send data to the same destination port,
- MSG\_MORE is absent from the send flags,
- the buffer is full,

whichever comes first.

Setting \*optval to zero disables the streaming buffer, in which case all sendings are conveyed in separate datagrams, regardless of MSG\_MORE.

Note

only a single streaming buffer exists per socket. When this buffer is full, the real-time data stops accumulating and sending operations resume in mere datagram mode. Accumulation may happen again after some or all data in the streaming buffer is consumed from the Linux domain endpoint.

The streaming buffer size may be adjusted multiple times during the socket lifetime; the latest configuration change will take effect when the accumulation resumes after the previous buffer was flushed.

### **Parameters**

in	level	SOL_XDDP
in	optname	XDDP_BUFSZ
in	optval	Pointer to a variable of type size_t, containing the required size of the streaming buffer
in	optlen	sizeof(size_t)

### Returns

0 is returned upon success. Otherwise:

- -EFAULT (Invalid data address given)
- -ENOMEM (Not enough memory)
- -EINVAL (optlen is invalid)

Calling context:

RT/non-RT

Examples:

xddp-stream.c.

Referenced by rt\_pipe\_create().

6.12.2.8 #define XDDP\_EVTDOWN 3

Monitor close from the non real-time endpoint.

XDDP\_EVTDOWN is sent when the non real-time endpoint is closed. The argument is always 0.

6.12.2.9 #define XDDP\_EVTIN 1

Monitor writes to the non real-time endpoint.

XDDP\_EVTIN is sent when data is written to the non real-time endpoint the socket is bound to (i.e. via /dev/rtpN), which means that some input is pending for the real-time endpoint. The argument is the size of the incoming message.

6.12.2.10 #define XDDP\_EVTNOBUF 4

Monitor memory shortage for non real-time datagrams.

XDDP\_EVTNOBUF is sent when no memory is available from the pool to hold the message currently sent from the non real-time endpoint. The argument is the size of the failed allocation. Upon return from the callback, the caller will block and retry until enough space is available from the pool; during that process, the callback might be invoked multiple times, each time a new attempt to get the required memory fails.

6.12.2.11 #define XDDP\_EVTOUT 2

Monitor reads from the non real-time endpoint.

XDDP\_EVTOUT is sent when the non real-time endpoint successfully reads a complete message (i.e. via /dev/rtp/N). The argument is the size of the outgoing message.

6.12.2.12 #define XDDP\_LABEL 1

XDDP label assignment.

ASCII label strings can be attached to XDDP ports, so that opening the non-RT endpoint can be done by specifying this symbolic device name rather than referring to a raw pseudo-device entry (i.e. /dev/rtp/N).

When available, this label will be registered when binding, in addition to the port number (see XDDP port binding).

It is not allowed to assign a label after the socket was bound. However, multiple assignment calls are allowed prior to the binding; the last label set will be used.

### **Parameters**

in	level	SOL_XDDP
in	optname	XDDP_LABEL
in	optval	Pointer to struct rtipc_port_label
in	optlen	sizeof(struct rtipc_port_label)

### Returns

0 is returned upon success. Otherwise:

- -EFAULT (Invalid data address given)
- -EALREADY (socket already bound)
- -EINVAL (optlen invalid)

Calling context:

RT/non-RT

Examples:

xddp-label.c.

Referenced by rt pipe create().

6.12.2.13 #define XDDP\_MONITOR 4

XDDP monitoring callback.

Other RTDM drivers may install a user-defined callback via the <a href="rtdm\_setsockopt">rtdm\_setsockopt</a> call from the inter-driver API, in order to collect particular events occurring on the channel.

This notification mechanism is particularly useful to monitor a channel asynchronously while performing other tasks.

The user-provided routine will be passed the RTDM file descriptor of the socket receiving the event, the event code, and an optional argument. Four events are currently defined, see XDDP\_EVENTS.

The XDDP\_EVTIN and XDDP\_EVTOUT events are fired on behalf of a fully atomic context; therefore, care must be taken to keep their overhead low. In those cases, the Xenomai services that may be called from the callback are restricted to the set allowed to a real-time interrupt handler.

**Parameters** 

in	level	SOL_XDDP
in	optname	XDDP_MONITOR
in	optval	Pointer to a pointer to function of type int (*)(int fd, int event, long arg), containing the address of the user-defined callback.Passing a NULL callback pointer in <i>optval</i> disables monitoring.
in	optlen	sizeof(int (*)(int fd, int event, long arg))

### Returns

0 is returned upon success. Otherwise:

- -EFAULT (Invalid data address given)
- -EPERM (Operation not allowed from user-space)
- -EINVAL (optlen is invalid)

## Calling context:

RT/non-RT, kernel space only

## 6.12.2.14 #define XDDP\_POOLSZ 2

XDDP local pool size configuration.

By default, the memory needed to convey the data is pulled from Xenomai's system pool. Setting a local pool size overrides this default for the socket.

If a non-zero size was configured, a local pool is allocated at binding time. This pool will provide storage for pending datagrams.

It is not allowed to configure a local pool size after the socket was bound. However, multiple configuration calls are allowed prior to the binding; the last value set will be used.

### Note

: the pool memory is obtained from the host allocator by the bind call.

### **Parameters**

in	level	SOL_XDDP
in	optname	XDDP_POOLSZ
in	optval	Pointer to a variable of type size_t, containing the required size of the
		local pool to reserve at binding time
in	optlen	sizeof(size_t)

### Returns

0 is returned upon success. Otherwise:

- -EFAULT (Invalid data address given)
- -EALREADY (socket already bound)
- -EINVAL (optlen invalid or \*optval is zero)

## Calling context:

### RT/non-RT

Examples:

xddp-echo.c.

Referenced by rt\_pipe\_create().

## 6.12.3 Enumeration Type Documentation

6.12.3.1 anonymous enum

Enumerator

IPCPROTO IPC Default protocol (IDDP)

**IPCPROTO\_XDDP** Cross-domain datagram protocol (RT <-> non-RT). Real-time Xenomai threads and regular Linux threads may want to exchange data in a way that does not require the former to leave the real-time domain (i.e. primary mode). The RTDM-based XDDP protocol is available for this purpose.

On the Linux domain side, pseudo-device files named /dev/rtp<minor> give regular POSIX threads access to non real-time communication endpoints, via the standard character-based I/O interface. On the Xenomai domain side, sockets may be bound to XDDP ports, which act as proxies to send and receive data to/from the associated pseudo-device files. Ports and pseudo-device minor numbers are paired, meaning that e.g. socket port 7 will proxy the traffic to/from /dev/rtp7.

All data sent through a bound/connected XDDP socket via sendto(2) or write(2) will be passed to the peer endpoint in the Linux domain, and made available for reading via the standard read(2) system call. Conversely, all data sent using write(2) through the non real-time endpoint will be conveyed to the real-time socket endpoint, and made available to the recvfrom(2) or read(2) system calls.

**IPCPROTO\_IDDP** Intra-domain datagram protocol (RT <-> RT). The RTDM-based IDDP protocol enables real-time threads to exchange datagrams within the Xenomai domain, via socket endpoints.

**IPCPROTO\_BUFP** Buffer protocol (RT <-> RT, byte-oriented). The RTDM-based BUFP protocol implements a lightweight, byte-oriented, one-way Producer-Consumer data path. All messages written are buffered into a single memory area in strict FIFO order, until read by the consumer.

This protocol always prevents short writes, and only allows short reads when a potential dead-lock situation arises (i.e. readers and writers waiting for each other indefinitely).

### 6.12.4 Function Documentation

6.12.4.1 int bind\_\_AF\_RTIPC ( int sockfd, const struct **sockaddr\_ipc** \* addr, socklen\_t addrlen )

Bind a RTIPC socket to a port.

Bind the socket to a destination port.

**Parameters** 

in	sockfd	The RTDM file descriptor obtained from the socket creation call.
in	addr	The address to bind the socket to (see struct sockaddr_ipc). The
		meaning of such address depends on the RTIPC protocol in use for the socket:

## • IPCPROTO XDDP

This action creates an endpoint for channelling traffic between the Xenomai and Linux domains.

sipc\_family must be AF\_RTIPC, sipc\_port is either -1, or a valid free port number between 0 and CONFIG\_XENO\_OPT\_PIPE\_NRDEV-1.

If sipc port is -1, a free port will be assigned automatically.

Upon success, the pseudo-device /dev/rtpN will be reserved for this communication channel, where N is the assigned port number. The non real-time side shall open this device to exchange data over the bound socket.

If a label was assigned (see XDDP\_LABEL) prior to binding the socket to a port, a registry link referring to the created pseudo-device will be automatically set up as /proc/xenomai/registry/rtipc/xddp/label, where label is the label string passed to setsockopt() for the XDDP\_LABEL option.

### • IPCPROTO IDDP

This action creates an endpoint for exchanging datagrams within the Xenomai domain.

*sipc\_family* must be AF\_RTIPC, *sipc\_port* is either -1, or a valid free port number between 0 and CONFIG\_XENO\_OPT\_IDDP\_NRPORT-1.

If *sipc\_port* is -1, a free port will be assigned automatically. The real-time peer shall connect to the same port for exchanging data over the bound socket.

If a label was assigned (see IDDP\_LABEL) prior to binding the socket to a port, a registry link referring to the assigned port number will be automatically set up as /proc/xenomai/registry/rtipc/iddp/label, where label is the label string passed to setsockopt() for the IDDP\_LABEL option.

### • IPCPROTO BUFP

This action creates an endpoint for a one-way byte stream within the Xenomai domain.

*sipc\_family* must be AF\_RTIPC, *sipc\_port* is either -1, or a valid free port number between 0 and CONFIG\_XENO\_OPT\_BUFP\_NRPORT-1.

If *sipc\_port* is -1, an available port will be assigned automatically. The real-time peer shall connect to the same port for exchanging data over the bound socket.

If a label was assigned (see BUFP\_LABEL) prior to binding the socket to a port, a registry link referring to the assigned port number will be automatically set up as /proc/xenomai/registry/rtipc/bufp/label, where label is the label string passed to setsockopt() for the BUFP\_LABEL option.

## Parameters

in	addrlen	The size in bytes of the structure pointed to by addr.

### Returns

In addition to the standard error codes for bind(2), the following specific error code may be returned:

- -EFAULT (Invalid data address given)
- -ENOMEM (Not enough memory)
- -EINVAL (Invalid parameter)
- -EADDRINUSE (Socket already bound to a port, or no port available)

## Calling context:

non-RT

6.12.4.2 int close\_\_AF\_RTIPC (int sockfd)

Close a RTIPC socket descriptor.

Blocking calls to any of the sendmsg or recvmsg functions will be unblocked when the socket is closed and return with an error.

## **Parameters**

in	sockfd	The socket descriptor to close.

### Returns

In addition to the standard error codes for close(2), the following specific error code may be returned: none

### Calling context:

non-RT

6.12.4.3 int connect AF RTIPC (int sockfd, const struct sockaddr ipc \* addr, socklen t addrlen )

Initiate a connection on a RTIPC socket.

### **Parameters**

in	sockfd	The RTDM file descriptor obtained from the socket creation call.
in	addr	The address to connect the socket to (see struct sockaddr_ipc).

- If sipc\_port is a valid port for the protocol, it is used verbatim and the connection succeeds immediately, regardless of whether the destination is bound at the time of the call.
- If sipc\_port is -1 and a label was assigned to the socket, connect() blocks for the requested amount
  of time (see SO\_RCVTIMEO) until a socket is bound to the same label via bind(2) (see XDDP\_LABEL, IDDP\_LABEL, BUFP\_LABEL), in which case a connection is established between both
  endpoints.
- If sipc\_port is -1 and no label was assigned to the socket, the default destination address is cleared, meaning that any subsequent write to the socket will return -EDESTADDRREQ, until a valid destination address is set via connect(2) or bind(2).

### **Parameters**

in	addrlen	The size in bytes of the structure pointed to by <i>addr</i> .

### Returns

In addition to the standard error codes for connect(2), the following specific error code may be returned: none.

## Calling context:

RT/non-RT

6.12.4.4 int getpeername\_\_AF\_RTIPC ( int sockfd, struct **sockaddr\_ipc** \* addr, socklen\_t \* addrlen )

### Get socket peer.

The name of the remote endpoint for the socket is copied back (see struct sockaddr\_ipc). This is the default destination address for messages sent on the socket. It can be set either explicitly via connect(2), or implicitly via bind(2) if no connect(2) was called prior to binding the socket to a port, in which case both the local and remote names are equal.

### Returns

In addition to the standard error codes for getpeername(2), the following specific error code may be returned: none.

### Calling context:

RT/non-RT

6.12.4.5 int getsockname\_\_AF\_RTIPC ( int sockfd, struct **sockaddr\_ipc** \* addr, socklen\_t \* addrlen )

Get socket name.

The name of the local endpoint for the socket is copied back (see struct sockaddr\_ipc).

### Returns

In addition to the standard error codes for getsockname(2), the following specific error code may be returned: none.

### Calling context:

RT/non-RT

6.12.4.6 int getsockopt\_\_AF\_RTIPC ( int sockfd, int level, int optname, void \* optval, socklen\_t \* optlen )

Get options on RTIPC sockets.

These functions allow to get various socket options. Supported Levels and Options:

- Level SOL\_SOCKET
- Level SOL XDDP
- Level SOL\_IDDP
- Level SOL\_BUFP

### Returns

In addition to the standard error codes for getsockopt(2), the following specific error code may be returned: follow the option links above.

## Calling context:

RT/non-RT

6.12.4.7 ssize\_t recvmsg\_\_AF\_RTIPC ( int sockfd, struct msghdr \* msg, int flags )

Receive a message from a RTIPC socket.

#### **Parameters**

in	sockfd	The RTDM file descriptor obtained from the socket creation call.
out	msg	The address the message header will be copied at.
in	flags	Operation flags:

MSG\_DONTWAIT Non-blocking I/O operation. The caller will not be blocked whenever no message is immediately available for receipt at the time of the call, but will rather return with -EWOUL-DBLOCK.

### Note

IPCPROTO\_BUFP does not allow for short reads and always returns the requested amount of bytes, except in one situation: whenever some writer is waiting for sending data upon a buffer full condition, while the caller would have to wait for receiving a complete message. This is usually the sign of a pathological use of the BUFP socket, like defining an incorrect buffer size via BUFP\_BUFSZ. In that case, a short read is allowed to prevent a deadlock.

### Returns

In addition to the standard error codes for recvmsg(2), the following specific error code may be returned: none.

### Calling context:

RT

6.12.4.8 ssize t sendmsg AF RTIPC ( int sockfd, const struct msghdr \* msg, int flags )

### Send a message on a RTIPC socket.

### **Parameters**

in	sockfd	The RTDM file descriptor obtained from the socket creation call.
in	msg	The address of the message header conveying the datagram.
in	flags	Operation flags:

- MSG\_OOB Send out-of-band message. For all RTIPC protocols except IPCPROTO\_BUFP, sending out-of-band data actually means pushing them to the head of the receiving queue, so that the reader will always receive them before normal messages. IPCPROTO\_BUFP does not support out-of-band sending.
- MSG\_DONTWAIT Non-blocking I/O operation. The caller will not be blocked whenever the message cannot be sent immediately at the time of the call (e.g. memory shortage), but will rather return with -EWOULDBLOCK. Unlike other RTIPC protocols, IPCPROTO\_XDDP accepts but never considers MSG\_DONTWAIT since writing to a real-time XDDP endpoint is inherently a non-blocking operation.
- MSG\_MORE Accumulate data before sending. This flag is accepted by the IPCPROTO\_XDDP
  protocol only, and tells the send service to accumulate the outgoing data into an internal streaming
  buffer, instead of issuing a datagram immediately for it. See XDDP\_BUFSZ for more.

### Note

No RTIPC protocol allows for short writes, and only complete messages are sent to the peer.

### Returns

In addition to the standard error codes for sendmsg(2), the following specific error code may be returned: none.

## Calling context:

RT

6.12.4.9 int setsockopt\_\_AF\_RTIPC ( int sockfd, int level, int optname, const void \* optval, socklen t optlen )

Set options on RTIPC sockets.

These functions allow to set various socket options. Supported Levels and Options:

- Level SOL\_SOCKET
- Level SOL\_XDDP
- Level SOL\_IDDP
- Level SOL BUFP

### Returns

In addition to the standard error codes for setsockopt(2), the following specific error code may be returned: follow the option links above.

## Calling context:

non-RT

6.12.4.10 int socket\_\_AF\_RTIPC (int domain = AF\_RTIPC, int type = SOCK\_DGRAM, int protocol)

Create an endpoint for communication in the AF\_RTIPC domain.

### **Parameters**

in	domain	The communication domain. Must be AF_RTIPC.
in	type	The socket type. Must be SOCK_DGRAM.
in	protocol	Any of IPCPROTO_XDDP, IPCPROTO_IDDP, or IPCPROTO_BUFP.
		IPCPROTO_IPC is also valid, and refers to the default RTIPC protocol, namely IPCPROTO_IDDP.

### Returns

In addition to the standard error codes for socket(2), the following specific error code may be returned:

• -ENOPROTOOPT (Protocol is known, but not compiled in the RTIPC driver). See RTIPC protocols for available protocols.

### Calling context:

non-RT

## 6.13 Asynchronous Procedure Calls

Services for scheduling function calls in the Linux domain.

Collaboration diagram for Asynchronous Procedure Calls:



## **Functions**

- int xnapc\_alloc (const char \*name, void(\*handler)(void \*cookie), void \*cookie)
   Allocate an APC slot.
- void xnapc\_free (int apc)

Releases an APC slot.

static void xnapc\_schedule (int apc)

Schedule an APC invocation.

## 6.13.1 Detailed Description

Services for scheduling function calls in the Linux domain. APC is the acronym for Asynchronous Procedure Call, a mean by which activities from the Xenomai domain can schedule deferred invocations of handlers to be run into the Linux domain, as soon as possible when the Linux kernel gets back in control.

Up to BITS\_PER\_LONG APC slots can be active at any point in time.

APC support is built upon the interrupt pipeline's virtual interrupt support.

## 6.13.2 Function Documentation

6.13.2.1 int xnapc alloc ( const char \* name, void(\*)(void \*cookie) handler, void \* cookie )

## Allocate an APC slot.

APC is the acronym for Asynchronous Procedure Call, a mean by which activities from the Xenomai domain can schedule deferred invocations of handlers to be run into the Linux domain, as soon as possible when the Linux kernel gets back in control. Up to BITS\_PER\_LONG APC slots can be active at any point in time. APC support is built upon the interrupt pipeline's virtual interrupt support.

Any Linux kernel service which is callable from a regular Linux interrupt handler is in essence available to APC handlers.

Parameters

name	is a symbolic name identifying the APC which will get reported through the /proc/xenomai/apc interface. Passing NULL to create an anonymous APC is allowed.
handler	The address of the fault handler to call upon exception condition. The handle will be
	passed the <i>cookie</i> value unmodified.
cookie	A user-defined opaque pointer the APC handler receives as its sole argument.

### Returns

a valid APC identifier is returned upon success, or a negative error code otherwise:

- -EINVAL is returned if handler is invalid.
- -EBUSY is returned if no more APC slots are available.

### Tags

### unrestricted

6.13.2.2 void xnapc\_free ( int apc )

## Releases an APC slot.

This service deallocates an APC slot obtained by xnapc alloc().

### **Parameters**

## Tags

### unrestricted

6.13.2.3 static inline int xnapc schedule (int apc) [inline], [static]

### Schedule an APC invocation.

This service marks the APC as pending for the Linux domain, so that its handler will be called as soon as possible, when the Linux domain gets back in control.

When posted from the Linux domain, the APC handler is fired as soon as the interrupt mask is explicitly cleared by some kernel code. When posted from the Xenomai domain, the APC handler is fired as soon as the Linux domain is resumed, i.e. after Xenomai has completed all its pending duties.

## **Parameters**

арс	The APC id. to schedule.

This service can be called from:

Any domain context, albeit the usual calling place is from the Xenomai domain.

## 6.14 In-kernel arithmetics

A collection of helpers performing arithmetics not implicitly available from kernel context via GCC helpers.

Collaboration diagram for In-kernel arithmetics:



## **Functions**

• unsigned long long xnarch\_generic\_full\_divmod64 (unsigned long long a, unsigned long long b, unsigned long long \*rem)

Architecture-independent div64 operation with remainder.

## 6.14.1 Detailed Description

A collection of helpers performing arithmetics not implicitly available from kernel context via GC-C helpers. Many of these routines enable 64bit arithmetics on 32bit systems. Xenomai architecture ports normally implement the performance critical ones in hand-crafted assembly code (see kernel/cobalt/arch/<arch>/include/asm/xenomai/uapi/arith.h).

## 6.14.2 Function Documentation

6.14.2.1 unsigned long long xnarch\_generic\_full\_divmod64 ( unsigned long long a, unsigned long long \* rem )

Architecture-independent div64 operation with remainder.

### **Parameters**

а	dividend
b	divisor
rem	if non-NULL, a pointer to a 64bit variable for collecting the remainder from the divi-
	sion.

## 6.15 Buffer descriptor

Abstraction for copying data to/from different address spaces.

Collaboration diagram for Buffer descriptor:



## **Functions**

- static void xnbufd\_map\_uread (struct xnbufd \*bufd, const void \_\_user \*ptr, size\_t len)
   Initialize a buffer descriptor for reading from user memory.
- static void xnbufd\_map\_uwrite (struct xnbufd \*bufd, void \_\_user \*ptr, size\_t len)

Initialize a buffer descriptor for writing to user memory.

ssize\_t xnbufd\_unmap\_uread (struct xnbufd \*bufd)

Finalize a buffer descriptor obtained from xnbufd\_map\_uread().

ssize\_t xnbufd\_unmap\_uwrite (struct xnbufd \*bufd)

Finalize a buffer descriptor obtained from xnbufd\_map\_uwrite().

static void xnbufd\_map\_kread (struct xnbufd \*bufd, const void \*ptr, size\_t len)

Initialize a buffer descriptor for reading from kernel memory.

• static void xnbufd\_map\_kwrite (struct xnbufd \*bufd, void \*ptr, size\_t len)

Initialize a buffer descriptor for writing to kernel memory.

ssize\_t xnbufd\_unmap\_kread (struct xnbufd \*bufd)

Finalize a buffer descriptor obtained from xnbufd\_map\_kread().

• ssize t xnbufd unmap kwrite (struct xnbufd \*bufd)

Finalize a buffer descriptor obtained from xnbufd\_map\_kwrite().

ssize\_t xnbufd\_copy\_to\_kmem (void \*ptr, struct xnbufd \*bufd, size\_t len)

Copy memory covered by a buffer descriptor to kernel memory.

• ssize\_t xnbufd\_copy\_from\_kmem (struct xnbufd \*bufd, void \*from, size\_t len)

Copy kernel memory to the area covered by a buffer descriptor.

void xnbufd\_invalidate (struct xnbufd \*bufd)

Invalidate a buffer descriptor.

static void xnbufd\_reset (struct xnbufd \*bufd)

Reset a buffer descriptor.

## 6.15.1 Detailed Description

Abstraction for copying data to/from different address spaces. A buffer descriptor is a simple abstraction dealing with copy operations to/from memory buffers which may belong to different address spaces.

To this end, the buffer descriptor library provides a small set of copy routines which are aware of address space restrictions when moving data, and a generic container type which can hold a reference to - or cover - a particular memory area, either present in kernel space, or in any of the existing user memory contexts.

94 Module Documentation

The goal of the buffer descriptor abstraction is to hide address space specifics from Xenomai services dealing with memory areas, allowing them to operate on multiple address spaces seamlessly.

The common usage patterns are as follows:

• Implementing a Xenomai syscall returning a bulk of data to the caller, which may have to be copied back to either kernel or user space:

```
[Syscall implementation]
ssize_t rt_bulk_read_inner(struct xnbufd *bufd)
    ssize_t ret;
    size_t len;
void *bulk;
    bulk = get_next_readable_bulk(&len);
    ret = xnbufd_copy_from_kmem(bufd, bulk, min(bufd->b_len, len));
    free_bulk(bulk);
    ret = this_may_fail();
    if (ret)
            xnbufd_invalidate(bufd);
    return ret;
}
[Kernel wrapper for in-kernel calls]
int rt_bulk_read(void *ptr, size_t len)
    struct xnbufd bufd;
    ssize_t ret;
    xnbufd_map_kwrite(&bufd, ptr, len);
    ret = rt_bulk_read_inner(&bufd);
    xnbufd_unmap_kwrite(&bufd);
    return ret;
[Userland trampoline for user syscalls]
int __rt_bulk_read(struct pt_regs *regs)
    struct xnbufd bufd;
    void __user *ptr;
    ssize t ret:
    size_t len;
    ptr = (void __user *)__xn_reg_arg1(regs);
    len = __xn_reg_arg2(regs);
    xnbufd_map_uwrite(&bufd, ptr, len);
    ret = rt_bulk_read_inner(&bufd);
    xnbufd_unmap_uwrite(&bufd);
    return ret;
}
```

• Implementing a Xenomai syscall receiving a bulk of data from the caller, which may have to be read from either kernel or user space:

```
[Syscall implementation]
ssize_t rt_bulk_write_inner(struct xnbufd *bufd)
{
    void *bulk = get_free_bulk(bufd->b_len);
    return xnbufd_copy_to_kmem(bulk, bufd, bufd->b_len);
}
[Kernel wrapper for in-kernel calls]
int rt_bulk_write(const void *ptr, size_t len)
{
    struct xnbufd bufd;
    ssize_t ret;
    xnbufd_map_kread(&bufd, ptr, len);
    ret = rt_bulk_write_inner(&bufd);
    xnbufd_unmap_kread(&bufd);
    return ret;
}
[Userland trampoline for user syscalls]
```

```
int __rt_bulk_write(struct pt_regs *regs)
{
    struct xnbufd bufd;
    void __user *ptr;
    ssize_t ret;
    size_t len;

    ptr = (void __user *)__xn_reg_arg1(regs);
    len = __xn_reg_arg2(regs);

    xnbufd_map_uread(&bufd, ptr, len);
    ret = rt_bulk_write_inner(&bufd);
    xnbufd_unmap_uread(&bufd);
    return ret;
}
```

### 6.15.2 Function Documentation

```
6.15.2.1 ssize t xnbufd copy from kmem ( struct xnbufd * bufd, void * from, size t len )
```

Copy kernel memory to the area covered by a buffer descriptor.

This routine copies *len* bytes from the kernel memory starting at *from* to the area referred to by the buffer descriptor *bufd*. xnbufd\_copy\_from\_kmem() tracks the write offset within the destination memory internally, so that it may be called several times in a loop, until the entire memory area is stored.

The destination address space is dealt with, according to the following rules:

- if bufd refers to a writable kernel area (i.e. see xnbufd\_map\_kwrite()), the copy is immediatly and fully performed with no restriction.
- if bufd refers to a writable user area (i.e. see <a href="mailto:xnbufd\_map\_uwrite">xnbufd\_map\_uwrite</a>()), the copy is performed only if that area lives in the currently active address space, and only if the caller may sleep Linux-wise to process any potential page fault which may arise while writing to that memory.
- if bufd refers to a user area which may not be immediately written to from the current context, the copy is postponed until xnbufd\_unmap\_uwrite() is invoked for ubufd, at which point the copy will take place. In such a case, the source memory is transferred to a carry over buffer allocated internally; this operation may lead to request dynamic memory from the nucleus heap if len is greater than 64 bytes.

### **Parameters**

bufd	The address of the buffer descriptor covering the user memory to copy data to.
from	The start address of the kernel memory to copy from.
len	The length of the kernel memory to copy to bufd.

### Returns

The number of bytes written so far to the memory area covered by ubufd. Otherwise,

 -ENOMEM is returned when no memory is available from the nucleus heap to allocate the carry over buffer.

### Tags

unrestricted

### Note

Calling this routine while holding the nklock and/or running with interrupts disabled is invalid, and doing so will trigger a debug assertion.

This routine may switch the caller to secondary mode if a page fault occurs while reading from the user area. For that reason, xnbufd\_copy\_to\_kmem() may only be called from a preemptible section (Linux-wise).

```
6.15.2.2 ssize t xnbufd copy to kmem (void * to, struct xnbufd * bufd, size t len )
```

Copy memory covered by a buffer descriptor to kernel memory.

This routine copies *len* bytes from the area referred to by the buffer descriptor *bufd* to the kernel memory area *to.* xnbufd\_copy\_to\_kmem() tracks the read offset within the source memory internally, so that it may be called several times in a loop, until the entire memory area is loaded.

The source address space is dealt with, according to the following rules:

- if *bufd* refers to readable kernel area (i.e. see xnbufd\_map\_kread()), the copy is immediately and fully performed with no restriction.
- if bufd refers to a readable user area (i.e. see xnbufd\_map\_uread()), the copy is performed only if that area lives in the currently active address space, and only if the caller may sleep Linux-wise to process any potential page fault which may arise while reading from that memory.
- any attempt to read from *bufd* from a non-suitable context is considered as a bug, and will raise a panic assertion when the nucleus is compiled in debug mode.

### **Parameters**

to	The start address of the kernel memory to copy to.
bufd	The address of the buffer descriptor covering the user memory to copy data from.
len	The length of the user memory to copy from bufd.

## Returns

The number of bytes read so far from the memory area covered by *ubufd*. Otherwise:

• -EINVAL is returned upon attempt to read from the user area from an invalid context. This error is only returned when the debug mode is disabled; otherwise a panic assertion is raised.

## Tags

## task-unrestricted

### Note

Calling this routine while holding the nklock and/or running with interrupts disabled is invalid, and doing so will trigger a debug assertion.

This routine may switch the caller to secondary mode if a page fault occurs while reading from the user area. For that reason, xnbufd\_copy\_to\_kmem() may only be called from a preemptible section (Linux-wise).

6.15.2.3 void xnbufd\_invalidate ( struct xnbufd \* bufd )

Invalidate a buffer descriptor.

The buffer descriptor is invalidated, making it unusable for further copy operations. If an outstanding carry over buffer was allocated by a previous call to <a href="mailto:xnbufd\_copy\_from\_kmem">xnbufd\_copy\_from\_kmem</a>(), it is immediately freed so that no data transfer will happen when the descriptor is finalized.

The only action that may subsequently be performed on an invalidated descriptor is calling the relevant unmapping routine for it. For that reason, xnbufd\_invalidate() should be invoked on the error path when data may have been transferred to the carry over buffer.

### **Parameters**

bufd	The address of the buffer descriptor to invalidate.

### Tags

### unrestricted

6.15.2.4 void xnbufd\_map\_kread ( struct xnbufd \* bufd, const void \* ptr, size\_t len ) [inline], [static]

Initialize a buffer descriptor for reading from kernel memory.

The new buffer descriptor may be used to copy data from kernel memory. This routine should be used in pair with xnbufd\_unmap\_kread().

## **Parameters**

bufd	The address of the buffer descriptor which will map a <i>len</i> bytes kernel memory area,
	starting from <i>ptr.</i>
ptr	The start of the kernel buffer to map.
len	The length of the kernel buffer starting at ptr.

### Tags

### unrestricted

6.15.2.5 void xnbufd\_map\_kwrite ( struct xnbufd \* bufd, void \* ptr, size\_t len ) [inline], [static]

Initialize a buffer descriptor for writing to kernel memory.

The new buffer descriptor may be used to copy data to kernel memory. This routine should be used in pair with xnbufd unmap kwrite().

### **Parameters**

bufd	The address of the buffer descriptor which will map a <i>len</i> bytes kernel memory area,
	starting from ptr.
ptr	The start of the kernel buffer to map.
len	The length of the kernel buffer starting at ptr.

## Tags

### unrestricted

6.15.2.6 void xnbufd\_map\_uread ( struct xnbufd \* bufd, const void \_\_user \* ptr, size\_t len ) [inline], [static]

Initialize a buffer descriptor for reading from user memory.

The new buffer descriptor may be used to copy data from user memory. This routine should be used in pair with xnbufd\_unmap\_uread().

### **Parameters**

bufd	The address of the buffer descriptor which will map a <i>len</i> bytes user memory area, starting from <i>ptr. ptr</i> is never dereferenced directly, since it may refer to a buffer that lives in another address space.
ptr	The start of the user buffer to map.
len	The length of the user buffer starting at ptr.

## Tags

## task-unrestricted

Initialize a buffer descriptor for writing to user memory.

The new buffer descriptor may be used to copy data to user memory. This routine should be used in pair with xnbufd\_unmap\_uwrite().

### **Parameters**

bufd	The address of the buffer descriptor which will map a <i>len</i> bytes user memory area, starting from <i>ptr. ptr</i> is never dereferenced directly, since it may refer to a buffer that lives in another address space.
ptr	The start of the user buffer to map.
len	The length of the user buffer starting at ptr.

## Tags

## task-unrestricted

6.15.2.8 void xnbufd\_reset ( struct xnbufd \* bufd ) [inline], [static]

Reset a buffer descriptor.

The buffer descriptor is reset, so that all data already copied is forgotten. Any carry over buffer allocated is kept, though.

## **Parameters**

bufd The address of the buffer descriptor to reset.
---

## Tags

### unrestricted

6.15.2.9 ssize\_t xnbufd\_unmap\_kread ( struct xnbufd \* bufd )

Finalize a buffer descriptor obtained from xnbufd\_map\_kread().

This routine finalizes a buffer descriptor previously initialized by a call to xnbufd\_map\_kread(), to read data from a kernel area.

**Parameters** 

bufd The address of the buffer descriptor to finalize.

### Returns

The number of bytes read so far from the memory area covered by ubufd.

Tags

task-unrestricted

6.15.2.10 ssize\_t xnbufd\_unmap\_kwrite ( struct xnbufd \* bufd )

Finalize a buffer descriptor obtained from xnbufd\_map\_kwrite().

This routine finalizes a buffer descriptor previously initialized by a call to xnbufd\_map\_kwrite(), to write data to a kernel area.

**Parameters** 

bufd The address of the buffer descriptor to finalize.

### Returns

The number of bytes written so far to the memory area covered by ubufd.

Tags

task-unrestricted

6.15.2.11 ssize t xnbufd unmap uread ( struct xnbufd \* bufd )

Finalize a buffer descriptor obtained from xnbufd map uread().

This routine finalizes a buffer descriptor previously initialized by a call to xnbufd\_map\_uread(), to read data from a user area.

Parameters

bufd The address of the buffer descriptor to finalize.

Returns

The number of bytes read so far from the memory area covered by ubufd.

Tags

task-unrestricted

Note

Calling this routine while holding the nklock and/or running with interrupts disabled is invalid, and doing so will trigger a debug assertion.

100 Module Documentation

6.15.2.12 ssize\_t xnbufd\_unmap\_uwrite ( struct xnbufd \* bufd )

Finalize a buffer descriptor obtained from xnbufd\_map\_uwrite().

This routine finalizes a buffer descriptor previously initialized by a call to xnbufd\_map\_uwrite(), to write data to a user area.

The main action taken is to write the contents of the kernel memory area passed to xnbufd\_copy\_from\_kmem() whenever the copy operation was postponed at that time; the carry over buffer is eventually released as needed. If xnbufd\_copy\_from\_kmem() was allowed to copy to the destination user memory at once, then xnbufd\_unmap\_uwrite() leads to a no-op.

**Parameters** 

bufd The address of the buffer descriptor to finalize.

### Returns

The number of bytes written so far to the memory area covered by *ubufd*.

Tags

task-unrestricted

Note

Calling this routine while holding the nklock and/or running with interrupts disabled is invalid, and doing so will trigger a debug assertion.

6.16 Clock services

## 6.16 Clock services

Collaboration diagram for Clock services:



## **Functions**

int xnclock\_register (struct xnclock \*clock)

Register a Xenomai clock.

void xnclock\_deregister (struct xnclock \*clock)

Deregister a Xenomai clock.

void xnclock\_tick (struct xnclock \*clock)

Process a clock tick.

void xnclock\_adjust (struct xnclock \*clock, xnsticks\_t delta)

Adjust a clock time.

## 6.16.1 Detailed Description

## 6.16.2 Function Documentation

6.16.2.1 void xnclock\_adjust ( struct xnclock \* clock, xnsticks\_t delta )

## Adjust a clock time.

This service changes the epoch for the given clock by applying the specified tick delta on its wallclock offset.

### **Parameters**

clock	The clock to adjust.
delta	The adjustment value expressed in nanoseconds.

## Tags

task-unrestricted, atomic-entry

### Note

Xenomai tracks the system time in *nkclock*, as a monotonously increasing count of ticks since the epoch. The epoch is initially the same as the underlying machine time.

6.16.2.2 void xnclock\_deregister ( struct xnclock \* clock )

Deregister a Xenomai clock.

This service uninstalls a Xenomai clock previously registered with xnclock\_register().

This service may be called once all timers driven by *clock* have been stopped.

6.16 Clock services

### **Parameters**

clock	The clock to deregister.

Tags

secondary-only

6.16.2.3 int xnclock\_register ( struct xnclock \* clock )

Register a Xenomai clock.

This service installs a new clock which may be used to drive Xenomai timers.

**Parameters** 

clock The new clock to register.

Tags

secondary-only

6.16.2.4 void xnclock\_tick ( struct xnclock \* clock )

Process a clock tick.

This routine processes an incoming *clock* event, firing elapsed timers as appropriate.

**Parameters** 

clock The clock for which a new event was received.

Tags

coreirq-only, atomic-entry

Note

The current CPU must be part of the real-time affinity set, otherwise weird things may happen.

References xnsched::htimer, xnsched::lflags, and xnsched::status.

**Module Documentation** 

# 6.17 Debugging services

Collaboration diagram for Debugging services:




## 6.17.1 Detailed Description

## 6.18 Dynamic memory allocation services

The implementation of the memory allocator follows the algorithm described in a USENIX 1988 paper called "Design of a General Purpose Memory Allocator for the 4.3BSD Unix Kernel" by Marshall K.

Collaboration diagram for Dynamic memory allocation services:



## **Functions**

- int xnheap\_init (struct xnheap \*heap, void \*membase, u32 size)

  Initialize a memory heap.
- void xnheap\_set\_name (struct xnheap \*heap, const char \*name,...)
   Set the heap's name string.
- void xnheap\_destroy (struct xnheap \*heap)

Destroys a memory heap.

- void \* xnheap\_alloc (struct xnheap \*heap, u32 size)
  - Allocate a memory block from a memory heap.
- void xnheap\_free (struct xnheap \*heap, void \*block)

Release a block to a memory heap.

## 6.18.1 Detailed Description

The implementation of the memory allocator follows the algorithm described in a USENIX 1988 paper called "Design of a General Purpose Memory Allocator for the 4.3BSD Unix Kernel" by Marshall K. McKusick and Michael J. Karels. You can find it at various locations on the net, including <a href="http://docs.-FreeBSD.org/44doc/papers/kernmalloc.pdf">http://docs.-FreeBSD.org/44doc/papers/kernmalloc.pdf</a>.

Implementation constraints

- Minimum page size is 2 \*\* XNHEAP\_MINLOG2 (must be large enough to hold a pointer).
- Maximum page size is 2 \*\* XNHEAP MAXLOG2.
- Requested block size is rounded up to XNHEAP\_MINLOG2.
- Requested block size larger than 2 times the XNHEAP\_PAGESZ is rounded up to the next page boundary and obtained from the free page list. So we need a bucket for each power of two between XNHEAP\_MINLOG2 and XNHEAP\_MAXLOG2 inclusive, plus one to honor requests ranging from the maximum page size to twice this size.

106 Module Documentation

## 6.18.2 Function Documentation

6.18.2.1 void \* xnheap\_alloc ( struct xnheap \* heap, u32 size )

Allocate a memory block from a memory heap.

Allocates a contiguous region of memory from an active memory heap. Such allocation is guaranteed to be time-bounded.

### **Parameters**

heap	The descriptor address of the heap to get memory from.
size	The size in bytes of the requested block. Sizes lower or equal to the page size are
	rounded either to the minimum allocation size if lower than this value, or to the min-
	imum alignment size if greater or equal to this value. In the current implementation,
	with MINALLOC = 8 and MINALIGN = 16, a 7 bytes request will be rounded to 8
	bytes, and a 17 bytes request will be rounded to 32.

### Returns

The address of the allocated region upon success, or NULL if no memory is available from the specified heap.

## Tags

### unrestricted

6.18.2.2 void xnheap\_destroy ( struct xnheap \* heap )

Destroys a memory heap.

Destroys a memory heap.

**Parameters** 

heap   The heap descriptor.
-----------------------------

## Tags

secondary-only

6.18.2.3 void xnheap\_free ( struct xnheap \* heap, void \* block )

Release a block to a memory heap.

Releases a memory block to a heap.

## **Parameters**

heap	The heap descriptor.
block	The block to be returned to the heap.

## Tags

### unrestricted

6.18.2.4 int xnheap\_init ( struct xnheap \* heap, void \* membase, u32 size )

Initialize a memory heap.

Initializes a memory heap suitable for time-bounded allocation requests of dynamic memory.

### **Parameters**

heap	The address of a heap descriptor to initialize.
membase	The address of the storage area.
size	The size in bytes of the storage area. size must be a multiple of PAGE_SIZE and
	smaller than 2 Gb in the current implementation.

## Returns

0 is returned upon success, or:

- -EINVAL is returned if size is either:
  - not aligned on PAGE\_SIZE
  - smaller than 2 \* PAGE\_SIZE
  - greater than 2 Gb (XNHEAP\_MAXHEAPSZ)
- -ENOMEM is returned upon failure of allocating the meta-data area used internally to maintain the heap.

## Tags

secondary-only

6.18.2.5 void xnheap\_set\_name ( struct xnheap \* heap, const char \* name, ... )

Set the heap's name string.

Set the heap name that will be used in statistic outputs.

## **Parameters**

heap	The address of a heap descriptor.
name	Name displayed in statistic outputs. This parameter can be a printk()-like format
	argument list.

## Tags


task-unrestricted

6.19 Cobalt 109

## 6.19 Cobalt

Cobalt supplements the native Linux kernel in dual kernel configurations.

Collaboration diagram for Cobalt:

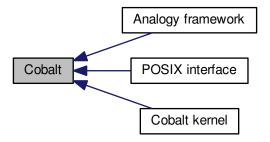

## Modules

Cobalt kernel

The Cobalt core is a co-kernel which supplements the Linux kernel for delivering real-time services with very low latency.

- Analogy framework
  - A RTDM-based interface for implementing DAQ card drivers.
- POSIX interface

The Cobalt/POSIX interface is an implementation of a subset of the Single Unix specification over the Cobalt core.

## 6.19.1 Detailed Description

Cobalt supplements the native Linux kernel in dual kernel configurations. It deals with all time-critical activities, such as handling interrupts, and scheduling real-time threads. The Cobalt kernel has higher priority over all the native kernel activities.


Cobalt provides an implementation of the POSIX and RTDM interfaces based on a set of generic RTOS building blocks.

110 Module Documentation

## 6.20 Cobalt kernel

The Cobalt core is a co-kernel which supplements the Linux kernel for delivering real-time services with very low latency.

Collaboration diagram for Cobalt kernel:

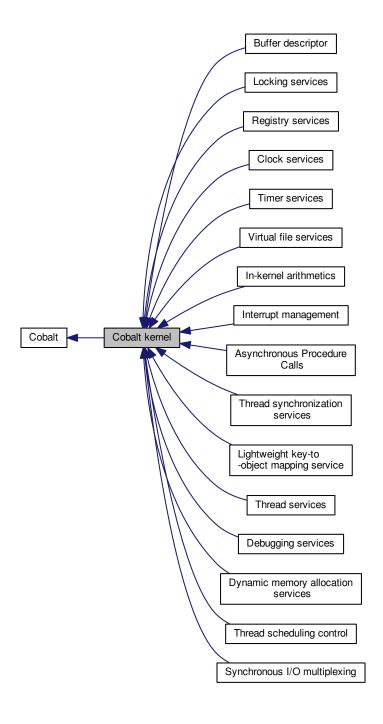

## Modules

• Asynchronous Procedure Calls

6.20 Cobalt kernel

Services for scheduling function calls in the Linux domain.

In-kernel arithmetics

A collection of helpers performing arithmetics not implicitly available from kernel context via GCC helpers.

Buffer descriptor

Abstraction for copying data to/from different address spaces.

- Clock services
- Debugging services
- Dynamic memory allocation services

The implementation of the memory allocator follows the algorithm described in a USENIX 1988 paper called "Design of a General Purpose Memory Allocator for the 4.3BSD Unix Kernel" by Marshall K.

- Interrupt management
- Locking services

The Xenomai core deals with concurrent activities from two distinct kernels running side-by-side.

Lightweight key-to-object mapping service

A map is a simple indexing structure which associates unique integer keys with pointers to objects.

Registry services

The registry provides a mean to index object descriptors on unique alphanumeric keys.

- Thread scheduling control
- Synchronous I/O multiplexing

This module implements the services needed for implementing the POSIX select() service, or any other event multiplexing services.

- Thread synchronization services
- Thread services
- Timer services

The Xenomai timer facility depends on a clock source (xnclock) for scheduling the next activation times.

Virtual file services

Virtual files provide a mean to export Xenomai object states to user-space, based on common kernel interfaces.

# 6.20.1 Detailed Description

The Cobalt core is a co-kernel which supplements the Linux kernel for delivering real-time services with very low latency. It implements a set of generic RTOS building blocks, which the Cobalt/POSIX and Cobalt/RTDM APIs are based on. Cobalt has higher priority over the Linux kernel activities.

### 6.20.1.1 Dual kernel service tags

The Cobalt kernel services may be restricted to particular calling contexts, or entail specific side-effects.

To describe this information, each service documented by this section bears a set of tags when applicable.

The table below matches the tags used throughout the documentation with the description of their meaning for the caller.

#### Context tags

Tag	Context on entry
primary-only	Must be called from a Cobalt task in primary
	mode

coreirq-only	Must be called from a Cobalt IRQ handler
secondary-only	Must be called from a Cobalt task in
	secondary mode or regular Linux task
rtdm-task	Must be called from a RTDM driver task
mode-unrestricted	Must be called from a Cobalt task in either
	primary or secondary mode
task-unrestricted	May be called from a Cobalt or regular Linux
	task indifferently
unrestricted	May be called from any context previously
	described
atomic-entry	Caller must currently hold the big Cobalt
	kernel lock (nklock)

# Possible side-effects

Tag	Description
might-switch	The Cobalt kernel may switch context

# 6.21 Interrupt management

Collaboration diagram for Interrupt management:



### **Functions**

void xnintr\_destroy (struct xnintr \*intr)

Destroy an interrupt descriptor.

• int xnintr attach (struct xnintr \*intr, void \*cookie)

Attach an interrupt descriptor.

void xnintr\_detach (struct xnintr \*intr)

Detach an interrupt descriptor.

void xnintr\_enable (struct xnintr \*intr)

Enable an interrupt line.

void xnintr\_disable (struct xnintr \*intr)

Disable an interrupt line.

void xnintr\_affinity (struct xnintr \*intr, cpumask\_t cpumask)

Set processor affinity of interrupt.

• int xnintr\_init (struct xnintr \*intr, const char \*name, unsigned int irq, xnisr\_t isr, xniack\_t iack, int flags)

Initialize an interrupt descriptor.

# 6.21.1 Detailed Description

# 6.21.2 Function Documentation

6.21.2.1 void xnintr\_affinity ( struct xnintr \* intr, cpumask\_t cpumask )

Set processor affinity of interrupt.

Restricts the IRQ line associated with the interrupt descriptor *intr* to be received only on processors which bits are set in *cpumask*.

### Parameters

intr	The address of the interrupt descriptor.
cpumask	The new processor affinity.

Note

Depending on architectures, setting more than one bit in *cpumask* could be meaningless.

Tags

secondary-only

6.21.2.2 int xnintr\_attach ( struct xnintr \* intr, void \* cookie )

Attach an interrupt descriptor.

Attach an interrupt descriptor previously initialized by xnintr\_init(). This operation registers the descriptor at the interrupt pipeline, but does not enable the interrupt line yet. A call to xnintr\_enable() is required to start receiving IRQs from the interrupt line associated to the descriptor.

#### **Parameters**

intr	The address of the interrupt descriptor to attach.
cookie	A user-defined opaque value which is stored into the descriptor for further retrieval
	by the interrupt handler.

#### Returns

0 is returned on success. Otherwise:

- -EINVAL is returned if an error occurred while attaching the descriptor.
- -EBUSY is returned if the descriptor was already attached.

Note

The caller must not hold nklock when invoking this service, this would cause deadlocks.

Tags

secondary-only

Note

Attaching an interrupt descriptor resets the tracked number of IRQ receipts to zero.

Referenced by rtdm irg request().

6.21.2.3 void xnintr destroy ( struct xnintr \* intr )

Destroy an interrupt descriptor.

Destroys an interrupt descriptor previously initialized by xnintr\_init(). The descriptor is automatically detached by a call to xnintr\_detach(). No more IRQs will be received through this descriptor after this service has returned.

**Parameters** 

$\mathit{intr} \mid The$ address of the interrupt descriptor to destroy.
--

#### Tags

### secondary-only

References xnintr\_detach().

Referenced by rtdm irg request().

6.21.2.4 void xnintr detach ( struct xnintr \* intr )

Detach an interrupt descriptor.

This call unregisters an interrupt descriptor previously attached by xnintr\_attach() from the interrupt pipeline. Once detached, the associated interrupt line is disabled, but the descriptor remains valid. The descriptor can be attached anew by a call to xnintr\_attach().

**Parameters** 

intr The address of the interrupt descriptor to detach.

Note

The caller **must not** hold nklock when invoking this service, this would cause deadlocks.

Tags

secondary-only

Referenced by xnintr\_destroy().

6.21.2.5 void xnintr\_disable ( struct xnintr \* intr )

Disable an interrupt line.

Disables the interrupt line associated with an interrupt descriptor.

**Parameters** 

intr | The address of the interrupt descriptor.

Tags

secondary-only

6.21.2.6 void xnintr\_enable ( struct xnintr \* intr )

Enable an interrupt line.

Enables the interrupt line associated with an interrupt descriptor.

**Parameters** 

intr The address of the interrupt descriptor.

Tags

secondary-only

Referenced by rtdm\_irq\_request().

6.21.2.7 int xnintr\_init ( struct xnintr \* intr, const char \* name, unsigned int irq, xnisr\_t isr, xniack\_t iack, int flags )

Initialize an interrupt descriptor.

When an interrupt occurs on the given *irq* line, the interrupt service routine *isr* is fired in order to deal with the hardware event. The interrupt handler may call any non-blocking service from the Cobalt core.

Upon receipt of an IRQ, the interrupt handler *isr* is immediately called on behalf of the interrupted stack context, the rescheduling procedure is locked, and the interrupt line is masked in the system interrupt controller chip. Upon return, the status of the interrupt handler is checked for the following bits:

• XN\_IRQ\_HANDLED indicates that the interrupt request was successfully handled.

• XN\_IRQ\_NONE indicates the opposite to XN\_IRQ\_HANDLED, meaning that no interrupt source could be identified for the ongoing request by the handler.

In addition, one of the following bits may be present in the status:

- XN\_IRQ\_DISABLE tells the Cobalt core to disable the interrupt line before returning from the interrupt context.
- XN\_IRQ\_PROPAGATE propagates the IRQ event down the interrupt pipeline to Linux. Using this flag is strongly discouraged, unless you fully understand the implications of such propagation.

### Warning

116

The handler should not use these bits if it shares the interrupt line with other handlers in the real-time domain. When any of these bits is detected, the interrupt line is left masked.

A count of interrupt receipts is tracked into the interrupt descriptor, and reset to zero each time such descriptor is attached. Since this count could wrap around, it should be used as an indication of interrupt activity only.

#### **Parameters**

intr	The address of a descriptor the Cobalt core will use to store the interrupt-specific
	data.
name	An ASCII string standing for the symbolic name of the interrupt or NULL.
irq	The IRQ line number associated with the interrupt descriptor. This value is
	architecture-dependent. An interrupt descriptor must be attached to the system
	by a call to xnintr_attach() before irq events can be received.
isr	The address of an interrupt handler, which is passed the address of the interrupt
	descriptor receiving the IRQ.
iack	
	default one. Only very specific situations actually require to override the default
	setting for this parameter, like having to acknowledge non-standard PIC hardware.
	iack should return a non-zero value to indicate that the interrupt has been properly
	acknowledged. If <i>iack</i> is NULL, the default routine will be used instead.
flags	A set of creation flags affecting the operation. The valid flags are:

- XN\_IRQTYPE\_SHARED enables IRQ-sharing with other interrupt objects.
- XN\_IRQTYPE\_EDGE is an additional flag need to be set together with XN\_IRQTYPE\_SHARED to enable IRQ-sharing of edge-triggered interrupts.

### Returns

0 is returned on success. Otherwise, -EINVAL is returned if *irg* is not a valid interrupt number.

# Tags

secondary-only

Referenced by rtdm\_irq\_request().

6.22 Locking services 117

# 6.22 Locking services

The Xenomai core deals with concurrent activities from two distinct kernels running side-by-side. Collaboration diagram for Locking services:



### Macros

- #define splhigh(x) ((x) = ipipe\_test\_and\_stall\_head() & 1)
  - Hard disable interrupts on the local processor, saving previous state.
- #define splexit(x) ipipe\_restore\_head(x & 1)
  - Restore the saved hard interrupt state on the local processor.
- #define splmax() ipipe stall head()
  - Hard disable interrupts on the local processor.
- #define splnone() ipipe\_unstall\_head()
  - Hard enable interrupts on the local processor.
- #define spltest() ipipe\_test\_head()

Test hard interrupt state on the local processor.

# 6.22.1 Detailed Description

The Xenomai core deals with concurrent activities from two distinct kernels running side-by-side. When interrupts are involved, the services from this section control the **hard** interrupt state exclusively, for protecting against processor-local or SMP concurrency.

Note

In a dual kernel configuration, hard interrupts are gated by the CPU. When enabled, hard interrupts are immediately delivered to the Xenomai core if they belong to a real-time source, or deferred until enabled by a second-stage virtual interrupt mask, if they belong to regular Linux devices/sources.

### 6.22.2 Macro Definition Documentation

6.22.2.1 #define splexit( x ) ipipe\_restore\_head(x & 1)

Restore the saved hard interrupt state on the local processor.

**Parameters** 

in	X	The context variable previously updated by splhigh()

6.22.2.2 #define splhigh( x ) ((x) = ipipe test and stall head() & 1)

Hard disable interrupts on the local processor, saving previous state.

**Module Documentation** 

# Parameters

out	x An unsigr	ed long integer context variable
-----	-------------	----------------------------------

6.22.2.3 #define spltest( ) ipipe\_test\_head()

Test hard interrupt state on the local processor.


# Returns

Zero if the local processor currently accepts interrupts, non-zero otherwise.

Referenced by rtdm\_fd\_select(), and rtdm\_lock\_get().

# 6.23 Lightweight key-to-object mapping service

A map is a simple indexing structure which associates unique integer keys with pointers to objects. Collaboration diagram for Lightweight key-to-object mapping service:



### **Functions**

- struct xnmap \* xnmap\_create (int nkeys, int reserve, int offset)
   Create a map.
- void xnmap delete (struct xnmap \*map)

Delete a map.

int xnmap\_enter (struct xnmap \*map, int key, void \*objaddr)
 Index an object into a map.

int xnmap\_remove (struct xnmap \*map, int key)

Remove an object reference from a map.

static void \* xnmap\_fetch\_nocheck (struct xnmap \*map, int key)

Search an object into a map - unchecked form.

static void \* xnmap\_fetch (struct xnmap \*map, int key)

Search an object into a map.

### 6.23.1 Detailed Description

A map is a simple indexing structure which associates unique integer keys with pointers to objects. The current implementation supports reservation, for naming/indexing objects, either on a fixed, user-provided integer (i.e. a reserved key value), or by drawing the next available key internally if the caller did not specify any fixed key. For instance, in some given map, the key space ranging from 0 to 255 could be reserved for fixed keys, whilst the range from 256 to 511 could be available for drawing free keys dynamically.

A maximum of 1024 unique keys per map is supported on 32bit machines.

(This implementation should not be confused with C++ STL maps, which are dynamically expandable and allow arbitrary key types; Xenomai maps don't).

### 6.23.2 Function Documentation

6.23.2.1 struct xnmap \* xnmap create ( int nkeys, int reserve, int offset )

### Create a map.

Allocates a new map with the specified addressing capabilities. The memory is obtained from the Xenomai system heap.

120 Module Documentation

#### **Parameters**

nkeys	The maximum number of unique keys the map will be able to hold. This value cannot exceed the static limit represented by XNMAP_MAX_KEYS, and must be a power of two.
reserve	The number of keys which should be kept for reservation within the index space. Reserving a key means to specify a valid key to the xnmap_enter() service, which will then attempt to register this exact key, instead of drawing the next available key from the unreserved index space. When reservation is in effect, the unreserved
	index space will hold key values greater than <i>reserve</i> , keeping the low key values for the reserved space. For instance, passing <i>reserve</i> = 32 would cause the index range [ 0 31 ] to be kept for reserved keys. When non-zero, <i>reserve</i> is rounded to the next multiple of BITS_PER_LONG. If <i>reserve</i> is zero no reservation will be available from the map.
offset	The lowest key value xnmap_enter() will return to the caller. Key values will be in the range [ 0 + offset nkeys + offset - 1 ]. Negative offsets are valid.

### Returns

the address of the new map is returned on success; otherwise, NULL is returned if *nkeys* is invalid.

### Tags

#### task-unrestricted

6.23.2.2 void xnmap\_delete ( struct xnmap \* map )

Delete a map.

Deletes a map, freeing any associated memory back to the Xenomai system heap.

**Parameters** 

map	The address of the map to delete.

# Tags

# task-unrestricted

6.23.2.3 int xnmap\_enter ( struct xnmap \* map, int key, void \* objaddr )

Index an object into a map.

Insert a new object into the given map.

### **Parameters**

тар	The address of the map to insert into.
key	The key to index the object on. If this key is within the valid index range [ 0 - offset
	nkeys - offset - 1], then an attempt to reserve this exact key is made. If <i>key</i> has an out-of-range value lower or equal to 0 - offset - 1, then an attempt is made to draw a free key from the unreserved index space.

objaddr	The address of the object to index on the key. This value will be returned by a
successful call to xnmap_fetch() with the same key.	

#### Returns

a valid key is returned on success, either key if reserved, or the next free key. Otherwise:

- -EEXIST is returned upon attempt to reserve a busy key.
- -ENOSPC when no more free key is available.

#### Tags

### unrestricted

6.23.2.4 void xnmap\_fetch ( struct xnmap \* map, int key ) [inline], [static]

Search an object into a map.

Retrieve an object reference from the given map by its index key.

#### **Parameters**

map	The address of the map to retrieve from.
key	The key to be searched for in the map index.

### Returns

The indexed object address is returned on success, otherwise NULL is returned when *key* is invalid or no object is currently indexed on it.

# Tags

### unrestricted

6.23.2.5 void xnmap\_fetch\_nocheck ( struct xnmap \* map, int key ) [inline], [static]

Search an object into a map - unchecked form.

Retrieve an object reference from the given map by its index key, but does not perform any sanity check on the provided key.

# **Parameters**

map	The address of the map to retrieve from.
key	The key to be searched for in the map index.

### Returns

The indexed object address is returned on success, otherwise NULL is returned when no object is currently indexed on *key*.

### Tags

# unrestricted

6.23.2.6 int xnmap\_remove ( struct xnmap \* map, int key )

Remove an object reference from a map.

Removes an object reference from the given map, releasing the associated key.

# Parameters

map The address of the map to remove from.	
key	The key the object reference to be removed is indexed on.

# Returns

0 is returned on success. Otherwise:

• -ESRCH is returned if key is invalid.

# Tags

unrestricted

# 6.24 Registry services

The registry provides a mean to index object descriptors on unique alphanumeric keys.

Collaboration diagram for Registry services:



# **Functions**

- int xnregistry\_enter (const char \*key, void \*objaddr, xnhandle\_t \*phandle, struct xnpnode \*pnode)

  Register a real-time object.
- int xnregistry\_bind (const char \*key, xnticks\_t timeout, int timeout\_mode, xnhandle\_t \*phandle)

  Bind to a real-time object.
- int xnregistry\_remove (xnhandle\_t handle)

Forcibly unregister a real-time object.

- static void \* xnregistry\_lookup (xnhandle\_t handle, unsigned long \*cstamp\_r) Find a real-time object into the registry.
- int xnregistry\_unlink (const char \*key)

Turn a named object into an anonymous object.

# 6.24.1 Detailed Description

The registry provides a mean to index object descriptors on unique alphanumeric keys. When labeled this way, an object is globally exported; it can be searched for, and its descriptor returned to the caller for further use; the latter operation is called a "binding". When no object has been registered under the given name yet, the registry can be asked to set up a rendez-vous, blocking the caller until the object is eventually registered.

# 6.24.2 Function Documentation

6.24.2.1 int xnregistry\_bind ( const char \* key, xnticks\_t timeout, int timeout\_mode, xnhandle\_t \* phandle )

Bind to a real-time object.

This service retrieves the registry handle of a given object identified by its key. Unless otherwise specified, this service will block the caller if the object is not registered yet, waiting for such registration to occur.

Parameters

key	A valid NULL-terminated string which identifies the object to bind to.		
timeout	The timeout which may be used to limit the time the thread wait for the object to		
	be registered. This value is a wait time given as a count of nanoseconds. It can		
	either be relative, absolute monotonic (XN_ABSOLUTE), or absolute adjustable (X-		
	N_REALTIME) depending on <i>timeout_mode</i> . Passing XN_INFINITE <b>and</b> setting		
	timeout_mode to XN_RELATIVE specifies an unbounded wait. Passing XN_NON-		
	BLOCK causes the service to return immediately without waiting if the object is not		
	registered on entry. All other values are used as a wait limit.		
timeout_mode	The mode of the <i>timeout</i> parameter. It can either be set to XN_RELATIVE, XN_AB-		
	SOLUTE, or XN_REALTIME (see also xntimer_start()).		
phandle	A pointer to a memory location which will be written upon success with the generic		
	handle defined by the registry for the retrieved object. Contents of this memory is		
	undefined upon failure.		

#### Returns

0 is returned upon success. Otherwise:

- -EINVAL is returned if key is NULL.
- -EINTR is returned if xnthread\_unblock() has been called for the waiting thread before the retrieval has completed.
- -EWOULDBLOCK is returned if timeout is equal to XN\_NONBLOCK and the searched object is not registered on entry. As a special exception, this error is also returned if this service should block, but was called from a context which cannot sleep (e.g. interrupt, non-realtime or scheduler locked).
- -ETIMEDOUT is returned if the object cannot be retrieved within the specified amount of time.

#### Tags

primary-only, might-switch

# Note

xnregistry\_bind() only returns the index portion of a handle, which might include other fixed bits to be complete (e.g. XNSYNCH\_PSHARED). The caller is responsible for completing the handle returned with those bits if applicable, depending on the context.

References XNBREAK, xnsynch\_sleep\_on(), and XNTIMEO.

6.24.2.2 int xnregistry\_enter ( const char \* key, void \* objaddr, xnhandle\_t \* phandle, struct xnpnode \* pnode )

Register a real-time object.

This service allocates a new registry slot for an associated object, and indexes it by an alphanumeric key for later retrieval.

#### **Parameters**

key	A valid NULL-terminated string by which the object will be indexed and later retrieved
	in the registry. Since it is assumed that such key is stored into the registered object,
	it will not be copied but only kept by reference in the registry. Pass an empty or
	NULL string if the object shall only occupy a registry slot for handle-based lookups.

126 Module Documentation

objaddr	An opaque pointer to the object to index by <i>key</i> .
phandle	A pointer to a generic handle defined by the registry which will uniquely identify the
	indexed object, until the latter is unregistered using the xnregistry_remove() service.
pnode	A pointer to an optional /proc node class descriptor. This structure provides the in-
	formation needed to export all objects from the given class through the /proc filesys-
	tem, under the /proc/xenomai/registry entry. Passing NULL indicates that no /proc
	support is available for the newly registered object.

#### Returns

0 is returned upon success. Otherwise:

- -EINVAL is returned if objaddr is NULL, or if key is non-NULL and contains an invalid '/' character.
- -ENOMEM is returned if the system fails to get enough dynamic memory from the global real-time heap in order to register the object.
- -EEXIST is returned if the key is already in use.

### Tags

unrestricted, might-switch, atomic-entry

References xnsched run().

Referenced by rtdm\_dev\_register().

Find a real-time object into the registry.

This service retrieves an object from its handle into the registry and returns the memory address of its descriptor. Optionally, it also copies back the object's creation stamp which is unique across object registration calls.

### Parameters

handle	The generic handle of the object to fetch.	
cstamp_r	If not-NULL, the object's creation stamp will be copied to this memory area.	

### Returns

The memory address of the object's descriptor is returned on success. Otherwise, NULL is returned if *handle* does not reference a registered object.

#### Tags

#### unrestricted

6.24.2.4 int xnregistry remove (xnhandle thandle)

Forcibly unregister a real-time object.

This service forcibly removes an object from the registry. The removal is performed regardless of the current object's locking status.

### **Parameters**

handle The generic handle of the object to remove.

# Returns

0 is returned upon success. Otherwise:

• -ESRCH is returned if handle does not reference a registered object.

# Tags

# unrestricted

Referenced by rtdm\_dev\_register(), and rtdm\_dev\_unregister().

```
6.24.2.5 int xnregistry_unlink ( const char * key )
```

Turn a named object into an anonymous object.


# Tags

unrestricted

# 6.25 Driver programming interface

RTDM driver programming interface.

Collaboration diagram for Driver programming interface:

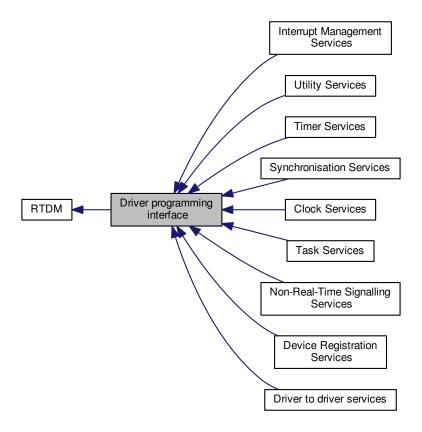

# Modules

- Driver to driver services
  - Inter-driver interface.
- Device Registration Services
- Clock Services
- Task Services
- Timer Services
- Synchronisation Services
- Interrupt Management Services
- Non-Real-Time Signalling Services

These services provide a mechanism to request the execution of a specified handler in non-real-time context.

Utility Services


# 6.25.1 Detailed Description

RTDM driver programming interface.

# 6.26 Driver to driver services

Inter-driver interface.

Collaboration diagram for Driver to driver services:

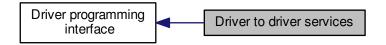

# **Functions**

• int rtdm\_open (const char \*path, int oflag,...)

Open a device.

• int rtdm\_socket (int protocol\_family, int socket\_type, int protocol)

Create a socket.

• int rtdm\_close (int fd)

Close a device or socket.

int rtdm\_ioctl (int fd, int request,...)

Issue an IOCTL.

ssize\_t rtdm\_read (int fd, void \*buf, size\_t nbyte)

Read from device.

• ssize\_t rtdm\_write (int fd, const void \*buf, size\_t nbyte)

Write to device.

ssize\_t rtdm\_recvmsg (int fd, struct msghdr \*msg, int flags)

Receive message from socket.

ssize\_t rtdm\_recvfrom (int fd, void \*buf, size\_t len, int flags, struct sockaddr \*from, socklen\_t \*fromlen)

Receive message from socket.

ssize\_t rtdm\_recv (int fd, void \*buf, size\_t len, int flags)

Receive message from socket.

• ssize\_t rtdm\_sendmsg (int fd, const struct msghdr \*msg, int flags)

Transmit message to socket.

ssize\_t rtdm\_sendto (int fd, const void \*buf, size\_t len, int flags, const struct sockaddr \*to, socklen\_t tolen)

Transmit message to socket.

ssize\_t rtdm\_send (int fd, const void \*buf, size\_t len, int flags)

Transmit message to socket.

int rtdm\_bind (int fd, const struct sockaddr \*my\_addr, socklen\_t addrlen)

Bind to local address.

• int rtdm\_connect (int fd, const struct sockaddr \*serv\_addr, socklen\_t addrlen)

Connect to remote address.

int rtdm\_listen (int fd, int backlog)

Listen to incoming connection requests.

• int rtdm\_accept (int fd, struct sockaddr \*addr, socklen\_t \*addrlen)

Accept a connection request.

• int rtdm\_shutdown (int fd, int how)

Shut down parts of a connection.

- int rtdm\_getsockopt (int fd, int level, int optname, void \*optval, socklen\_t \*optlen)

  Get socket option.
- int rtdm\_setsockopt (int fd, int level, int optname, const void \*optval, socklen\_t optlen)
   Set socket option.
- int rtdm\_getsockname (int fd, struct sockaddr \*name, socklen\_t \*namelen)

  Get local socket address.
- int rtdm\_getpeername (int fd, struct sockaddr \*name, socklen\_t \*namelen)

  Get socket destination address.

# 6.26.1 Detailed Description

Inter-driver interface.

### 6.26.2 Function Documentation

6.26.2.1 int rtdm\_accept ( int fd, struct sockaddr \* addr, socklen\_t \* addrlen )

Accept a connection request.

Refer to rt\_dev\_accept() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

mode-unrestricted, might-switch

```
6.26.2.2 int rtdm_bind ( int fd, const struct sockaddr * my_addr, socklen_t addrlen )
```

Bind to local address.

Refer to rt\_dev\_bind() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

task-unrestricted, might-switch

```
6.26.2.3 int rtdm_close (int fd)
```

Close a device or socket.

Refer to rt\_dev\_close() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

secondary-only, might-switch

```
6.26.2.4 int rtdm_connect ( int fd, const struct sockaddr * serv_addr, socklen_t addrlen )
```

Connect to remote address.

Refer to rt\_dev\_connect() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

mode-unrestricted, might-switch

```
6.26.2.5 int rtdm_getpeername ( int fd, struct sockaddr * name, socklen_t * namelen )
```

Get socket destination address.

Refer to rt\_dev\_getpeername() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

task-unrestricted, might-switch

```
6.26.2.6 int rtdm_getsockname ( int fd, struct sockaddr * name, socklen_t * namelen )
```

Get local socket address.

Refer to rt\_dev\_getsockname() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

task-unrestricted, might-switch

```
6.26.2.7 int rtdm getsockopt (int fd, int level, int optname, void * optval, socklen t * optlen )
```

Get socket option.

Refer to rt\_dev\_getsockopt() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

task-unrestricted, might-switch

```
6.26.2.8 int rtdm_ioctl (int fd, int request, ...)
```

Issue an IOCTL.

Refer to rt\_dev\_ioctl() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

task-unrestricted, might-switch

Module Documentation

```
6.26.2.9 int rtdm_listen ( int fd, int backlog )
```

Listen to incoming connection requests.

Refer to rt\_dev\_listen() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

task-unrestricted, might-switch

```
6.26.2.10 int rtdm_open (const char * path, int oflag, ...)
```

Open a device.

Refer to rt\_dev\_open() for parameters and return values

Tags

secondary-only, might-switch

```
6.26.2.11 ssize_t rtdm_read ( int fd, void * buf, size_t nbyte )
```

Read from device.

Refer to rt\_dev\_read() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

mode-unrestricted, might-switch

```
6.26.2.12 ssize_t rtdm_recv (int fd, void * buf, size_t len, int flags)
```

Receive message from socket.

Refer to rt\_dev\_recv() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

mode-unrestricted, might-switch

```
6.26.2.13 ssize_t rtdm_recvfrom ( int fd, void * buf, size_t len, int flags, struct sockaddr * from, socklen_t * fromlen )
```

Receive message from socket.

Refer to rt\_dev\_recvfrom() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

mode-unrestricted, might-switch

```
6.26.2.14 ssize_t rtdm_recvmsg (int fd, struct msghdr * msg, int flags)
```

Receive message from socket.

Refer to rt\_dev\_recvmsg() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

mode-unrestricted, might-switch

```
6.26.2.15 ssize_t rtdm_send (int fd, const void * buf, size_t len, int flags)
```

Transmit message to socket.

Refer to rt\_dev\_send() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

mode-unrestricted, might-switch

```
6.26.2.16 ssize_t rtdm_sendmsg (int fd, const struct msghdr * msg, int flags)
```

Transmit message to socket.

Refer to rt\_dev\_sendmsg() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

mode-unrestricted, might-switch

```
6.26.2.17 ssize_t rtdm_sendto ( int fd, const void * buf, size_t len, int flags, const struct sockaddr * to, socklen_t tolen )
```

Transmit message to socket.

Refer to rt\_dev\_sendto() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

mode-unrestricted, might-switch

```
6.26.2.18 int rtdm_setsockopt (int fd, int level, int optname, const void * optval, socklen_t optlen)
```

Set socket option.

Refer to rt\_dev\_setsockopt() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

task-unrestricted, might-switch

134 Module Documentation

```
6.26.2.19 int rtdm_shutdown (int fd, int how)
```

Shut down parts of a connection.

Refer to rt\_dev\_shutdown() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

secondary-only, might-switch

```
6.26.2.20 int rtdm_socket (int protocol_family, int socket_type, int protocol)
```

Create a socket.

Refer to rt\_dev\_socket() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

secondary-only, might-switch

```
6.26.2.21 ssize_t rtdm_write ( int fd, const void * buf, size_t nbyte )
```

Write to device.

Refer to rt\_dev\_write() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags


mode-unrestricted, might-switch

6.27 Device Profiles 135

# 6.27 Device Profiles

Pre-defined classes of real-time devices.

Collaboration diagram for Device Profiles:

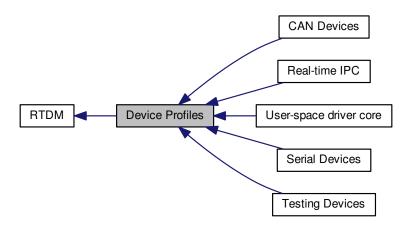

# Modules

• User-space driver core

This profile includes all mini-drivers sitting on top of the User-space Device Driver framework (UDD).

CAN Devices

This is the common interface a RTDM-compliant CAN device has to provide.

Serial Devices

This is the common interface a RTDM-compliant serial device has to provide.

• Testing Devices

This group of devices is intended to provide in-kernel testing results.

Real-time IPC

Profile Revision: 1

# **Data Structures**

• struct rtdm\_device\_info

Device information.

# **Typedefs**

• typedef struct rtdm\_device\_info rtdm\_device\_info\_t

Device information.

# RTDM CLASS xxx

#### Device classes

- #define RTDM CLASS PARPORT 1
- #define RTDM CLASS SERIAL 2
- #define RTDM CLASS CAN 3
- #define RTDM CLASS NETWORK 4
- #define RTDM CLASS RTMAC 5
- #define RTDM\_CLASS\_TESTING 6
- #define RTDM\_CLASS\_RTIPC 7
- #define RTDM\_CLASS\_COBALT 8
- #define RTDM CLASS UDD 9
- #define RTDM\_CLASS\_MEMORY 10
- #define RTDM CLASS MISC 223
- #define RTDM CLASS EXPERIMENTAL 224
- #define RTDM CLASS MAX 255

# **Device Naming**

Maximum length of device names (excluding the final null character)

• #define RTDM\_MAX\_DEVNAME\_LEN 31

# RTDM PURGE xxx BUFFER

Flags selecting buffers to be purged

- #define RTDM\_PURGE\_RX\_BUFFER 0x0001
- #define RTDM PURGE TX BUFFER 0x0002

# Common IOCTLs

The following IOCTLs are common to all device rtdm profiles.

- #define RTIOC\_DEVICE\_INFO \_IOR(RTIOC\_TYPE\_COMMON, 0x00, struct rtdm\_device\_info)

  Retrieve information about a device or socket.
- #define RTIOC\_PURGE\_IOW(RTIOC\_TYPE\_COMMON, 0x10, int)

  Purge internal device or socket buffers.

# 6.27.1 Detailed Description

Pre-defined classes of real-time devices. Device profiles define which operation handlers a driver of a certain class of devices has to implement, which name or protocol it has to register, which IOCTLs it has to provide, and further details. Sub-classes can be defined in order to extend a device profile with more hardware-specific functions.

#### 6.27.2 Macro Definition Documentation

6.27.2.1 #define RTIOC\_DEVICE\_INFO \_IOR(RTIOC\_TYPE\_COMMON, 0x00, struct rtdm\_device\_info)

Retrieve information about a device or socket.

6.27 Device Profiles 137

# Parameters

out	arg	Pointer to information buffer (struct rtdm_device_info)
-----	-----	---

6.27.2.2 #define RTIOC\_PURGE\_IOW(RTIOC\_TYPE\_COMMON, 0x10, int)

Purge internal device or socket buffers.

# Parameters

in	arg	Purge mask, see RTDM_PURGE_xxx_BUFFER

138 Module Documentation

# 6.28 Device Registration Services

Collaboration diagram for Device Registration Services:



# **Data Structures**

struct rtdm\_fd\_ops

RTDM file operation descriptor.

### **Functions**

• int rtdm\_open\_handler (struct rtdm\_fd \*fd, int oflags)

Open handler for named devices.

• int rtdm socket handler (struct rtdm fd \*fd, int protocol)

Socket creation handler for protocol devices.

void rtdm\_close\_handler (struct rtdm\_fd \*fd)

Close handler.

int rtdm\_ioctl\_handler (struct rtdm\_fd \*fd, unsigned int request, void \_\_user \*arg)

IOCTL handler.

• ssize\_t rtdm\_read\_handler (struct rtdm\_fd \*fd, void \_\_user \*buf, size\_t size)

Read handler.

ssize\_t rtdm\_write\_handler (struct rtdm\_fd \*fd, const void \_\_user \*buf, size\_t size)

Write handler.

ssize\_t rtdm\_recvmsg\_handler (struct rtdm\_fd \*fd, struct msghdr \*msg, int flags)

Receive message handler.

• ssize\_t rtdm\_sendmsg\_handler (struct rtdm\_fd \*fd, const struct msghdr \*msg, int flags)

Transmit message handler.

int rtdm\_select\_handler (struct rtdm\_fd \*fd, struct xnselector \*selector, unsigned int type, unsigned int index)

Select handler.

• int rtdm mmap handler (struct rtdm fd \*fd, struct vm area struct \*vma)

Memory mapping handler.

unsigned long rtdm\_get\_unmapped\_area\_handler (struct rtdm\_fd \*fd, unsigned long len, unsigned long pgoff, unsigned long flags)

Allocate mapping region in address space.

• int rtdm\_dev\_register (struct rtdm\_device \*dev)

Register a RTDM device.

void rtdm\_dev\_unregister (struct rtdm\_device \*dev)

Unregister a RTDM device.

# **Device Flags**

Static flags describing a RTDM device

#define RTDM EXCLUSIVE 0x0001

If set, only a single instance of the device can be requested by an application.

#define RTDM FIXED MINOR 0x0002

Use fixed minor provided in the rtdm\_device description for registering.

#define RTDM NAMED DEVICE 0x0010

If set, the device is addressed via a clear-text name.

#define RTDM\_PROTOCOL\_DEVICE 0x0020

If set, the device is addressed via a combination of protocol ID and socket type.

#define RTDM\_DEVICE\_TYPE\_MASK 0x00F0

Mask selecting the device type.

#define RTDM\_SECURE\_DEVICE 0x80000000

Flag indicating a secure variant of RTDM (not supported here)

- 6.28.1 Detailed Description
- 6.28.2 Macro Definition Documentation
- 6.28.2.1 #define RTDM\_DEVICE\_TYPE\_MASK 0x00F0

Mask selecting the device type.

6.28.2.2 #define RTDM\_EXCLUSIVE 0x0001

If set, only a single instance of the device can be requested by an application.

6.28.2.3 #define RTDM\_FIXED\_MINOR 0x0002

Use fixed minor provided in the rtdm\_device description for registering.

If this flag is absent, the RTDM core assigns minor numbers to devices managed by a driver in order of registration.

Referenced by rtdm\_dev\_register().

6.28.2.4 #define RTDM NAMED DEVICE 0x0010

If set, the device is addressed via a clear-text name.

Referenced by rtdm\_dev\_register(), rtdm\_dev\_unregister(), and udd\_register\_device().

6.28.2.5 #define RTDM\_PROTOCOL\_DEVICE 0x0020

If set, the device is addressed via a combination of protocol ID and socket type.

Referenced by udd\_register\_device().

# 6.28.3 Function Documentation

6.28.3.1 void rtdm\_close\_handler ( struct rtdm\_fd \* fd )

Close handler.

#### **Parameters**

in	n fd File descriptor associated with opened device instance.
----	--

#### See Also

close() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399

6.28.3.2 int rtdm dev register ( struct rtdm device \* dev )

Register a RTDM device.

Registers a device in the RTDM namespace.

#### **Parameters**

in	dev	Device descriptor.

#### Returns

0 is returned upon success. Otherwise:

- -EINVAL is returned if the descriptor contains invalid entries. RTDM\_PROFILE\_INFO() must appear in the list of initializers for the driver properties.
- -EEXIST is returned if the specified device name of protocol ID is already in use.
- -ENOMEM is returned if a memory allocation failed in the process of registering the device.

### Tags

### secondary-only

References rtdm\_fd\_ops::close, rtdm\_driver::device\_count, rtdm\_driver::device\_flags, rtdm\_device-::driver, rtdm\_device::label, rtdm\_device::minor, rtdm\_fd\_ops::open, rtdm\_driver::ops, rtdm\_driver-::protocol\_family, RTDM\_FIXED\_MINOR, RTDM\_NAMED\_DEVICE, rtdm\_fd\_ops::socket, rtdm\_driver-::socket\_type, xnregistry\_enter(), and xnregistry\_remove().

Referenced by udd register device().

6.28.3.3 void rtdm\_dev\_unregister ( struct rtdm\_device \* dev )

Unregister a RTDM device.

Removes the device from the RTDM namespace. This routine waits until all connections to *device* have been closed prior to unregistering.

#### **Parameters**

ſ	in	dev	Device descriptor.

### Tags

### secondary-only

References rtdm\_driver::device\_flags, rtdm\_device::driver, RTDM\_NAMED\_DEVICE, and xnregistry\_remove().

Referenced by udd\_register\_device(), and udd\_unregister\_device().

6.28.3.4 unsigned long rtdm\_get\_unmapped\_area\_handler ( struct rtdm\_fd \* fd, unsigned long len, unsigned long pgoff, unsigned long flags )

Allocate mapping region in address space.

When present, this optional handler should return the start address of a free region in the process's address space, large enough to cover the ongoing mmap() operation. If unspecified, the default architecture-defined handler is invoked.

Most drivers can omit this handler, except on MMU-less platforms (see second note).

#### **Parameters**

142

in	fd	File descriptor
in	len	Length of the requested region
in	pgoff	Page frame number to map to (see second note).
in	flags	Requested mapping flags

#### Returns

The start address of the mapping region on success. On failure, a negative error code should be returned, with -ENOSYS meaning that the driver does not want to provide such information, in which case the ongoing mmap() operation will fail.

#### Note

The address hint passed to the mmap() request is deliberately ignored by RTDM, and therefore not passed to this handler.

On MMU-less platforms, this handler is required because RTDM issues mapping requests over a shareable character device internally. In such context, the RTDM core may pass a null *pgoff* argument to the handler, for probing for the logical start address of the memory region to map to. Otherwise, when *pgoff* is non-zero, pgoff << PAGE\_SHIFT is usually returned.

6.28.3.5 int rtdm ioctl handler ( struct rtdm fd \* fd, unsigned int request, void user \* arg )

### IOCTL handler.

#### **Parameters**

in	fd	File descriptor
in	request	Request number as passed by the user
in,out	arg	Request argument as passed by the user

### Returns

A positive value or 0 on success. On failure return either -ENOSYS, to request that the function be called again from the opposite realtime/non-realtime context, or another negative error code.

### See Also

ioctl() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399

6.28.3.6 int rtdm\_mmap\_handler ( struct rtdm\_fd \* fd, struct vm\_area\_struct \* vma )

Memory mapping handler.

#### **Parameters**

in	fd	File descriptor
in	vma	Virtual memory area descriptor

#### Returns

0 on success. On failure, a negative error code is returned.

#### See Also

```
mmap() in POSIX.1-2001, http://pubs.opengroup.org/onlinepubs/7908799/xsh/mmap.html
```

Note

The address hint passed to the mmap() request is deliberately ignored by RTDM.

6.28.3.7 int rtdm open handler ( struct rtdm fd \* fd, int oflags )

Open handler for named devices.

### **Parameters**

in	fd	File descriptor associated with opened device instance
in	oflags	Open flags as passed by the user

The file descriptor carries a device minor information which can be retrieved by a call to rtdm\_fd\_minor(fd). The minor number can be used for distinguishing devices managed by a driver.

#### Returns

0 on success. On failure, a negative error code is returned.

#### See Also

```
open() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399
```

6.28.3.8 ssize\_t rtdm\_read\_handler ( struct rtdm\_fd \* fd, void \_\_user \* buf, size\_t size )

#### Read handler.

### Parameters

in	fd	File descriptor
out	buf	Input buffer as passed by the user
in	size	Number of bytes the user requests to read

### Returns

On success, the number of bytes read. On failure return either -ENOSYS, to request that this handler be called again from the opposite realtime/non-realtime context, or another negative error code.

# See Also

```
read() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399
```

6.28.3.9 ssize t rtdm recvmsg handler ( struct rtdm fd \* fd, struct msghdr \* msg, int flags )

Receive message handler.

144 Module Documentation

### **Parameters**

in	fd	File descriptor
in,out	msg	Message descriptor as passed by the user, automatically mirrored to
		safe kernel memory in case of user mode call
in	flags	Message flags as passed by the user

#### Returns

On success, the number of bytes received. On failure return either -ENOSYS, to request that this handler be called again from the opposite realtime/non-realtime context, or another negative error code.

#### See Also

recvmsg() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399

6.28.3.10 int rtdm\_select\_handler ( struct rtdm\_fd \* fd, struct xnselector \* selector, unsigned int type, unsigned int index )

### Select handler.

#### **Parameters**

in	fd	File descriptor
	selector	Pointer to the selector structure
	type	Type of events (XNSELECT_READ, XNSELECT_WRITE, or XNSEL-ECT_EXCEPT)
	index	Index of the file descriptor

### Returns

0 on success. On failure, a negative error code is returned.

#### See Also

select() in POSIX.1-2001, http://pubs.opengroup.org/onlinepubs/007908799/xsh/select.html

6.28.3.11 ssize\_t rtdm\_sendmsg\_handler ( struct rtdm\_fd \* fd, const struct msghdr \* msg, int flags )

# Transmit message handler.

#### **Parameters**

in	fd	File descriptor
in	msg	Message descriptor as passed by the user, automatically mirrored to
		safe kernel memory in case of user mode call
in	flags	Message flags as passed by the user

### Returns

On success, the number of bytes transmitted. On failure return either -ENOSYS, to request that this handler be called again from the opposite realtime/non-realtime context, or another negative error code.

#### See Also

sendmsg() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399

6.28.3.12 int rtdm\_socket\_handler ( struct rtdm\_fd \* fd, int protocol )

Socket creation handler for protocol devices.

#### **Parameters**

in	fd	File descriptor associated with opened device instance
in	protocol	Protocol number as passed by the user

### Returns

0 on success. On failure, a negative error code is returned.

### See Also

```
socket() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399
```

6.28.3.13 ssize\_t rtdm\_write\_handler ( struct rtdm\_fd \* fd, const void \_\_user \* buf, size\_t size )

#### Write handler.

#### **Parameters**

in	fd	File descriptor
in	buf	Output buffer as passed by the user
in	size	Number of bytes the user requests to write

### Returns


On success, the number of bytes written. On failure return either -ENOSYS, to request that this handler be called again from the opposite realtime/non-realtime context, or another negative error code.

### See Also

write() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399

# 6.29 Clock Services

Collaboration diagram for Clock Services:

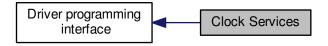

### **Functions**

- nanosecs\_abs\_t rtdm\_clock\_read (void)
   Get system time.
- nanosecs\_abs\_t rtdm\_clock\_read\_monotonic (void)
   Get monotonic time.
- 6.29.1 Detailed Description
- 6.29.2 Function Documentation
- 6.29.2.1 nanosecs\_abs\_t rtdm\_clock\_read ( void )

Get system time.

Returns

The system time in nanoseconds is returned

Note

The resolution of this service depends on the system timer. In particular, if the system timer is running in periodic mode, the return value will be limited to multiples of the timer tick period. The system timer may have to be started to obtain valid results. Whether this happens automatically (as on Xenomai) or is controlled by the application depends on the RTDM host environment.

# Tags

#### unrestricted

Referenced by a4l\_get\_time(), and rtdm\_ratelimit().

6.29.2.2 **nanosecs\_abs\_t** rtdm\_clock\_read\_monotonic ( void )

Get monotonic time.

Returns

The monotonic time in nanoseconds is returned

6.29 Clock Services 147

Note

The resolution of this service depends on the system timer. In particular, if the system timer is running in periodic mode, the return value will be limited to multiples of the timer tick period. The system timer may have to be started to obtain valid results. Whether this happens automatically (as on Xenomai) or is controlled by the application depends on the RTDM host environment.


Tags

unrestricted

148 Module Documentation

# 6.30 Task Services

Collaboration diagram for Task Services:

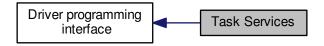

# **Typedefs**

typedef void(\* rtdm\_task\_proc\_t )(void \*arg)
 Real-time task procedure.

# **Functions**

• int rtdm\_task\_init (rtdm\_task\_t \*task, const char \*name, rtdm\_task\_proc\_t task\_proc, void \*arg, int priority, nanosecs\_rel\_t period)

Initialise and start a real-time task.

void rtdm\_task\_destroy (rtdm\_task\_t \*task)

Destroy a real-time task.

int rtdm\_task\_should\_stop (void)

Check for pending termination request.

void rtdm\_task\_set\_priority (rtdm\_task\_t \*task, int priority)

Adjust real-time task priority.

int rtdm\_task\_set\_period (rtdm\_task\_t \*task, nanosecs\_rel\_t period)

Adjust real-time task period.

int rtdm\_task\_wait\_period (void)

Wait on next real-time task period.

int rtdm\_task\_unblock (rtdm\_task\_t \*task)

Activate a blocked real-time task.

rtdm\_task\_t \* rtdm\_task\_current (void)

Get current real-time task.

int rtdm\_task\_sleep (nanosecs\_rel\_t delay)

Sleep a specified amount of time.

• int rtdm\_task\_sleep\_until (nanosecs\_abs\_t wakeup\_time)

Sleep until a specified absolute time.

• int rtdm\_task\_sleep\_abs (nanosecs\_abs\_t wakeup\_time, enum rtdm\_timer\_mode mode) Sleep until a specified absolute time.

• int rtdm\_task\_busy\_wait (bool condition, nanosecs\_rel\_t spin\_ns, nanosecs\_rel\_t sleep\_ns) Safe busy waiting.

void rtdm\_task\_join (rtdm\_task\_t \*task)

Wait on a real-time task to terminate.

void rtdm\_task\_busy\_sleep (nanosecs\_rel\_t delay)

Busy-wait a specified amount of time.

6.30 Task Services 149

# Task Priority Range

Maximum and minimum task priorities

- #define RTDM\_TASK\_LOWEST\_PRIORITY 0
- #define RTDM\_TASK\_HIGHEST\_PRIORITY 99

# Task Priority Modification

Raise or lower task priorities by one level

- #define RTDM\_TASK\_RAISE\_PRIORITY (+1)
- #define RTDM\_TASK\_LOWER\_PRIORITY (-1)
- 6.30.1 Detailed Description
- 6.30.2 Typedef Documentation
- 6.30.2.1 typedef void(\* rtdm\_task\_proc\_t)(void \*arg)

Real-time task procedure.

**Parameters** 

in,out	arg	argument as passed to rtdm_task_init()
--------	-----	--

# 6.30.3 Function Documentation

6.30.3.1 void rtdm\_task\_busy\_sleep ( nanosecs\_rel\_t delay )

Busy-wait a specified amount of time.

This service does not schedule out the caller, but rather spins in a tight loop, burning CPU cycles until the timeout elapses.

**Parameters** 

in	delay	Delay in nanoseconds. Note that a zero delay does <b>not</b> have the mean-
		ing of RTDM_TIMEOUT_INFINITE here.

Note

The caller must not be migratable to different CPUs while executing this service. Otherwise, the actual delay will be undefined.

Tags

unrestricted

6.30.3.2 int rtdm\_task\_busy\_wait ( bool condition, nanosecs\_rel\_t spin\_ns, nanosecs\_rel\_t sleep\_ns )

Safe busy waiting.

150 Module Documentation

This service alternates active spinning and sleeping within a wait loop, until a condition is satisfied. While sleeping, a task is scheduled out and does not consume any CPU time.

rtdm\_task\_busy\_wait() is particularly useful for waiting for a state change reading an I/O register, which usually happens shortly after the wait starts, without incurring the adverse effects of long busy waiting if it doesn't.

#### **Parameters**

in	condition	The C expression to be tested for detecting completion.
in	spin_ns	The time to spin on <i>condition</i> before sleeping, expressed as a count of
		nanoseconds.
in	sleep_ns	The time to sleep for before spinning again, expressed as a count of
		nanoseconds.

#### Returns

0 on success if *condition* is satisfied, otherwise:

- -EINTR is returned if the calling task has been unblocked by a Linux signal or explicitly via rtdm\_-task\_unblock().
- -EPERM may be returned if an illegal invocation environment is detected.

# Tags

primary-only, might-switch

```
6.30.3.3 rtdm task t* rtdm task current (void)
```

Get current real-time task.

Returns

Pointer to task handle

Tags

mode-unrestricted

```
6.30.3.4 void rtdm_task_destroy ( rtdm_task_t * task )
```

Destroy a real-time task.

This call sends a termination request to *task*, then waits for it to exit. All RTDM task should check for pending termination requests by calling rtdm\_task\_should\_stop() from their work loop.

If task is current, rtdm task destroy() terminates the current context, and does not return to the caller.

#### **Parameters**

in,out	task	Task handle as returned by rtdm_task_init()
--------	------	---

Note

Passing the same task handle to RTDM services after the completion of this function is not allowed.

Tags

secondary-only, might-switch

6.30 Task Services

6.30.3.5 int rtdm\_task\_init ( rtdm\_task\_t \* task, const char \* name, rtdm\_task\_proc\_t task\_proc, void \* arg, int priority, nanosecs\_rel\_t period )

Initialise and start a real-time task.

After initialising a task, the task handle remains valid and can be passed to RTDM services until either rtdm\_task\_destroy() or rtdm\_task\_join() was invoked.

#### **Parameters**

in,out	task	Task handle
in	name	Optional task name
in	task_proc	Procedure to be executed by the task
in	arg	Custom argument passed to task_proc() on entry
in	priority	Priority of the task, see also Task Priority Range
in	period	Period in nanoseconds of a cyclic task, 0 for non-cyclic mode. Waiting for the first and subsequent periodic events is done using rtdm_task_wait_period().

### Returns

0 on success, otherwise negative error code

# Tags

secondary-only, might-switch

References xnthread\_cancel(), xnthread\_init(), xnthread\_set\_periodic(), and xnthread\_start().

6.30.3.6 void rtdm\_task\_join ( rtdm\_task\_t \* task )

Wait on a real-time task to terminate.

**Parameters** 

in,out	task	Task handle as returned by rtdm_task_init()

## Note

Passing the same task handle to RTDM services after the completion of this function is not allowed. This service does not trigger the termination of the targeted task. The user has to take of this, otherwise <a href="rtdm\_task\_join">rtdm\_task\_join</a>() will never return.

### Tags

## mode-unrestricted

References xnthread\_join().

6.30.3.7 int rtdm\_task\_set\_period ( rtdm\_task\_t \* task, nanosecs\_rel\_t period )

Adjust real-time task period.

**Parameters** 

in,out	task	Task handle as returned by rtdm_task_init()
in	period	New period in nanoseconds of a cyclic task, 0 for non-cyclic mode

# Tags

### task-unrestricted

6.30.3.8 void rtdm\_task\_set\_priority ( rtdm\_task\_t \* task, int priority )

# Adjust real-time task priority.

### **Parameters**

in,out	task	Task handle as returned by rtdm_task_init()
in	priority	New priority of the task, see also Task Priority Range

## Tags

task-unrestricted, might-switch

6.30.3.9 int rtdm\_task\_should\_stop (void)

Check for pending termination request.

Check whether a termination request was received by the current RTDM task. Termination requests are sent by calling rtdm\_task\_destroy().

# Returns

Non-zero indicates that a termination request is pending, in which case the caller should wrap up and exit.

# Tags

rtdm-task, might-switch

6.30.3.10 int rtdm\_task\_sleep ( nanosecs\_rel\_t delay )

Sleep a specified amount of time.

### **Parameters**

in delay Delay in nanoseconds, see RTDM_TIMEOUT_xxx for s	special values.
---	-----------------

# Returns

0 on success, otherwise:

- -EINTR is returned if calling task has been unblock by a signal or explicitly via rtdm\_task\_unblock().
- -EPERM may be returned if an illegal invocation environment is detected.

# Tags

primary-only, might-switch

6.30 Task Services

6.30.3.11 int rtdm\_task\_sleep\_abs ( nanosecs\_abs\_t wakeup\_time, enum rtdm\_timer\_mode mode )

Sleep until a specified absolute time.

in	wakeup_time	Absolute timeout in nanoseconds
in	mode	Selects the timer mode, see RTDM_TIMERMODE_xxx for details

### Returns

0 on success, otherwise:

- -EINTR is returned if calling task has been unblock by a signal or explicitly via rtdm\_task\_unblock().
- -EPERM may be returned if an illegal invocation environment is detected.
- -EINVAL is returned if an invalid parameter was passed.

# Tags

primary-only, might-switch

```
6.30.3.12 int rtdm_task_sleep_until ( nanosecs_abs_t wakeup_time )
```

Sleep until a specified absolute time.

**Deprecated** Use rtdm\_task\_sleep\_abs instead!

### **Parameters**

in	wakeup_time	Absolute timeout in nanoseconds
----	-------------	---------------------------------

## Returns

0 on success, otherwise:

- -EINTR is returned if calling task has been unblock by a signal or explicitly via rtdm\_task\_unblock().
- -EPERM may be returned if an illegal invocation environment is detected.

# Tags

primary-only, might-switch

```
6.30.3.13 int rtdm_task_unblock ( rtdm_task_t * task )
```

Activate a blocked real-time task.

### Returns

Non-zero is returned if the task was actually unblocked from a pending wait state, 0 otherwise.

### Tags

unrestricted, might-switch

6.30 Task Services

```
6.30.3.14 int rtdm_task_wait_period (void)
```

Wait on next real-time task period.

# Returns

0 on success, otherwise:


- -EINVAL is returned if calling task is not in periodic mode.
- -ETIMEDOUT is returned if a timer overrun occurred, which indicates that a previous release point has been missed by the calling task.

Tags

primary-only, might-switch

# 6.31 Timer Services

Collaboration diagram for Timer Services:



# **Typedefs**

• typedef void(\* rtdm\_timer\_handler\_t )(rtdm\_timer\_t \*timer)

\*Timer handler.

# **Functions**

- int rtdm\_timer\_init (rtdm\_timer\_t \*timer, rtdm\_timer\_handler\_t handler, const char \*name)

  Initialise a timer.
- void rtdm\_timer\_destroy (rtdm\_timer\_t \*timer)

Destroy a timer.

• int rtdm\_timer\_start (rtdm\_timer\_t \*timer, nanosecs\_abs\_t expiry, nanosecs\_rel\_t interval, enum rtdm timer mode mode)

Start a timer.

void rtdm\_timer\_stop (rtdm\_timer\_t \*timer)

Stop a timer.

• int rtdm\_timer\_start\_in\_handler (rtdm\_timer\_t \*timer, nanosecs\_abs\_t expiry, nanosecs\_rel\_t interval, enum rtdm\_timer\_mode mode)

Start a timer from inside a timer handler.

void rtdm\_timer\_stop\_in\_handler (rtdm\_timer\_t \*timer)

Stop a timer from inside a timer handler.

# RTDM TIMERMODE xxx

## Timer operation modes

enum rtdm\_timer\_mode { RTDM\_TIMERMODE\_RELATIVE = XN\_RELATIVE, RTDM\_TIMERMODE\_ABSOLUTE = XN\_ABSOLUTE, RTDM\_TIMERMODE\_REALTIME = XN\_REALTIME }

# 6.31.1 Detailed Description

# 6.31.2 Typedef Documentation

6.31.2.1 typedef void(\* rtdm\_timer\_handler\_t)(rtdm\_timer\_t \*timer)

Timer handler.

6.31 Timer Services 157

### **Parameters**

in	timer	Timer handle as returned by rtdm_timer_init()
----	-------	---

# 6.31.3 Enumeration Type Documentation

6.31.3.1 enum rtdm\_timer\_mode

Enumerator

**RTDM\_TIMERMODE\_RELATIVE** Monotonic timer with relative timeout. **RTDM\_TIMERMODE\_ABSOLUTE** Monotonic timer with absolute timeout. **RTDM\_TIMERMODE\_REALTIME** Adjustable timer with absolute timeout.

# 6.31.4 Function Documentation

6.31.4.1 void rtdm\_timer\_destroy ( rtdm\_timer\_t \* timer )

# Destroy a timer.

**Parameters** 

in,out	timer	Timer handle as returned by rtdm_timer_init()
--------	-------	---

# Tags

### task-unrestricted

References xntimer destroy().

6.31.4.2 int rtdm\_timer\_init ( rtdm\_timer\_t \* timer, rtdm\_timer\_handler\_t handler, const char \* name )

# Initialise a timer.

### **Parameters**

in,out	timer	Timer handle
in	handler	Handler to be called on timer expiry
in	name	Optional timer name

# Returns

0 on success, otherwise negative error code

### Tags

# task-unrestricted

6.31.4.3 int rtdm\_timer\_start ( rtdm\_timer\_t \* timer, nanosecs\_abs\_t expiry, nanosecs\_rel\_t interval, enum rtdm\_timer\_mode mode )

Start a timer.

in,out	timer	Timer handle as returned by rtdm_timer_init()
in	expiry	Firing time of the timer, mode defines if relative or absolute
in	interval	Relative reload value, > 0 if the timer shall work in periodic mode with
		the specific interval, 0 for one-shot timers
in	mode	Defines the operation mode, see RTDM_TIMERMODE_xxx for possi-
		ble values

### Returns

0 on success, otherwise:

• -ETIMEDOUT is returned if expiry describes an absolute date in the past. In such an event, the timer is nevertheless armed for the next shot in the timeline if *interval* is non-zero.

# Tags

### unrestricted

References xntimer\_start().

6.31.4.4 int rtdm\_timer\_start\_in\_handler ( rtdm\_timer\_t \* timer, nanosecs\_abs\_t expiry, nanosecs\_rel\_t interval, enum rtdm\_timer\_mode mode )

Start a timer from inside a timer handler.

# **Parameters**

in,out	timer	Timer handle as returned by rtdm_timer_init()
in	expiry	Firing time of the timer, mode defines if relative or absolute
in	interval	Relative reload value, > 0 if the timer shall work in periodic mode with
		the specific interval, 0 for one-shot timers
in	mode	Defines the operation mode, see RTDM_TIMERMODE_xxx for possi-
		ble values

## Returns

0 on success, otherwise:

• -ETIMEDOUT is returned if expiry describes an absolute date in the past.

## Tags

# coreirq-only

6.31.4.5 void rtdm\_timer\_stop ( rtdm\_timer\_t \* timer )

# Stop a timer.

## **Parameters**

	in,out	timer	Timer handle as returned by rtdm_timer_init()
_			

# Tags

### unrestricted

References xntimer\_stop().

6.31 Timer Services 159

6.31.4.6 void rtdm\_timer\_stop\_in\_handler ( rtdm\_timer\_t \* timer )

Stop a timer from inside a timer handler.


in,out	timer	Timer handle as returned by rtdm_timer_init()
--------	-------	---

# Tags

coreirq-only

# 6.32 Synchronisation Services

Collaboration diagram for Synchronisation Services:

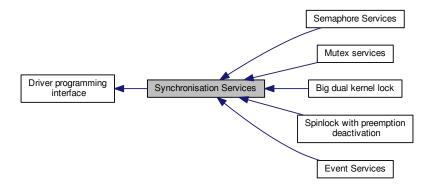

# Modules

- Big dual kernel lock
- · Spinlock with preemption deactivation
- Event Services
- Semaphore Services
- Mutex services

## **Functions**

- void rtdm\_waitqueue\_init (struct rtdm\_waitqueue \*wq)
   Initialize a RTDM wait queue.
- void rtdm\_waitqueue\_destroy (struct rtdm\_waitqueue \*wq)

Deletes a RTDM wait queue.

• rtdm\_timedwait\_condition\_locked (struct rtdm\_wait\_queue \*wq, C\_expr condition, nanosecs\_rel\_t timeout, rtdm\_toseq\_t \*toseq)

Timed sleep on a locked waitqueue until a condition gets true.

• rtdm wait condition locked (struct rtdm wait queue \*wq, C expr condition)

Sleep on a locked waitqueue until a condition gets true.

 rtdm\_timedwait\_condition (struct rtdm\_wait\_queue \*wq, C\_expr condition, nanosecs\_rel\_t timeout, rtdm\_toseq\_t \*toseq)

Timed sleep on a waitqueue until a condition gets true.

- void rtdm\_timedwait (struct rtdm\_wait\_queue \*wq, nanosecs\_rel\_t timeout, rtdm\_toseq\_t \*toseq)

  Timed sleep on a waitqueue unconditionally.
- void rtdm\_timedwait\_locked (struct rtdm\_wait\_queue \*wq, nanosecs\_rel\_t timeout, rtdm\_toseq\_t \*toseq)

Timed sleep on a locked waitqueue unconditionally.

• rtdm\_wait\_condition (struct rtdm\_wait\_queue \*wq, C\_expr condition)

Sleep on a waitqueue until a condition gets true.

void rtdm wait (struct rtdm wait queue \*wq)

Sleep on a waitqueue unconditionally.

void rtdm\_wait\_locked (struct rtdm\_wait\_queue \*wq)

Sleep on a locked waitqueue unconditionally.

void rtdm\_waitqueue\_lock (struct rtdm\_wait\_queue \*wq, rtdm\_lockctx\_t context)
 Lock a waitqueue.

• void rtdm\_waitqueue\_unlock (struct rtdm\_wait\_queue \*wq, rtdm\_lockctx\_t context)

Unlock a waitqueue.

void rtdm\_waitqueue\_signal (struct rtdm\_wait\_queue \*wq)

Signal a waitqueue.

void rtdm\_waitqueue\_broadcast (struct rtdm\_wait\_queue \*wq)

Broadcast a waitqueue.

void rtdm\_waitqueue\_flush (struct rtdm\_wait\_queue \*wq)

Flush a waitqueue.

• void rtdm\_waitqueue\_wakeup (struct rtdm\_wait\_queue \*wq, rtdm\_task\_t waiter)

Signal a particular waiter on a waitqueue.

• rtdm\_for\_each\_waiter (rtdm\_task\_t pos, struct rtdm\_wait\_queue \*wq)

Simple iterator for waitqueues.

• rtdm\_for\_each\_waiter\_safe (rtdm\_task\_t pos, rtdm\_task\_t tmp, struct rtdm\_wait\_queue \*wq) Safe iterator for waitqueues.

# RTDM SELECTTYPE xxx

Event types select can bind to

enum rtdm\_selecttype { RTDM\_SELECTTYPE\_READ = XNSELECT\_READ, RTDM\_SELECTT-YPE\_WRITE = XNSELECT\_WRITE, RTDM\_SELECTTYPE\_EXCEPT = XNSELECT\_EXCEPT }

## Timeout Sequence Management

• void rtdm\_toseq\_init (rtdm\_toseq\_t \*timeout\_seq, nanosecs\_rel\_t timeout)

Initialise a timeout sequence.

# 6.32.1 Detailed Description

# 6.32.2 Enumeration Type Documentation

6.32.2.1 enum rtdm\_selecttype

Enumerator

**RTDM\_SELECTTYPE\_READ** Select input data availability events. **RTDM\_SELECTTYPE\_WRITE** Select ouput buffer availability events. **RTDM\_SELECTTYPE\_EXCEPT** Select exceptional events.

6.32.3 Function Documentation

6.32.3.1 rtdm for each waiter ( rtdm task t pos, struct rtdm wait queue \* wq )

Simple iterator for waitqueues.

This construct traverses the wait list of a given waitqueue wq, assigning each RTDM task pointer to the cursor variable pos, which must be of type rtdm\_task\_t.

wq must have been locked by a call to rtdm\_waitqueue\_lock() prior to traversing its wait list.

pos cursor variable holding a pointer to the RTDM task being fetched.	
wq waitqueue to scan.	

### Note

The waitqueue should not be signaled, broadcast or flushed during the traversal, unless the loop is aborted immediately after. Should multiple waiters be readied while iterating, the safe form <a href="rtdm\_for\_each\_waiter\_safe">rtdm\_for\_each\_waiter\_safe</a>() must be used for traversal instead.

### Tags

# unrestricted

6.32.3.2 rtdm\_for\_each\_waiter\_safe ( rtdm\_task\_t pos, rtdm\_task\_t tmp, struct rtdm\_wait\_queue \* wq )

Safe iterator for waitqueues.

This construct traverses the wait list of a given waitqueue *wq*, assigning each RTDM task pointer to the cursor variable *pos*, which must be of type rtdm\_task\_t.

Unlike with <a href="rtdm\_for\_each\_waiter">rtdm\_for\_each\_waiter</a>(), the waitqueue may be signaled, broadcast or flushed during the traversal.

wq must have been locked by a call to rtdm\_waitqueue\_lock() prior to traversing its wait list.

#### **Parameters**

pos cursor variable holding a pointer to the RTDM task being fetched.	
tmp	temporary cursor variable.
wq	waitqueue to scan.

# Tags

# unrestricted

6.32.3.3 void rtdm\_timedwait ( struct rtdm\_wait\_queue \* wq, nanosecs\_rel\_t timeout, rtdm\_toseq\_t \* toseq )

Timed sleep on a waitqueue unconditionally.

The calling task is put to sleep until the waitqueue is signaled by either rtdm\_waitqueue\_signal() or rtdm\_waitqueue\_broadcast(), or flushed by a call to rtdm\_waitqueue\_flush(), or a timeout occurs.

# Parameters

	wq	waitqueue to wait on.
	timeout	relative timeout in nanoseconds, see RTDM_TIMEOUT_xxx for special
		values.
in,out	toseq	handle of a timeout sequence as returned by rtdm_toseq_init() or NU-
		LL.

## Returns

0 on success, otherwise:

• -EINTR is returned if the waitqueue has been flushed, or the calling task has received a Linux signal or has been forcibly unblocked by a call to rtdm\_task\_unblock().

164 Module Documentation

 -ETIMEDOUT is returned if the if the request has not been satisfied within the specified amount of time

#### Note

Passing RTDM\_TIMEOUT\_NONE to *timeout* makes no sense for such service, and might cause unexpected behavior.

# Tags

primary-only, might-switch

```
6.32.3.4 rtdm_timedwait_condition ( struct rtdm_wait_queue * wq, C_expr condition, nanosecs_rel_t timeout, rtdm_toseq_t * toseq )
```

Timed sleep on a waitqueue until a condition gets true.

The calling task is put to sleep until *condition* evaluates to true or a timeout occurs. The condition is checked each time the waitqueue *wq* is signaled.

#### **Parameters**

	wq	waitqueue to wait on.
	condition	C expression for the event to wait for.
	timeout	relative timeout in nanoseconds, see RTDM_TIMEOUT_xxx for special
		values.
in,out	toseq	handle of a timeout sequence as returned by rtdm_toseq_init() or NU-
		LL.

## Returns

0 on success, otherwise:

- -EINTR is returned if calling task has received a Linux signal or has been forcibly unblocked by a call to rtdm\_task\_unblock().
- -ETIMEDOUT is returned if the if the request has not been satisfied within the specified amount of time.

# Note

rtdm\_waitqueue\_signal() has to be called after changing any variable that could change the result of the wait condition.

Passing RTDM\_TIMEOUT\_NONE to *timeout* makes no sense for such service, and might cause unexpected behavior.

## Tags

primary-only, might-switch

```
6.32.3.5 rtdm_timedwait_condition_locked ( struct rtdm_wait_queue * wq, C_expr condition, nanosecs_rel_t timeout, rtdm_toseq_t * toseq )
```

Timed sleep on a locked waitqueue until a condition gets true.

The calling task is put to sleep until *condition* evaluates to true or a timeout occurs. The condition is checked each time the waitqueue *wq* is signaled.

The waitqueue must have been locked by a call to rtdm\_waitqueue\_lock() prior to calling this service.

	wq	locked waitqueue to wait on. The waitqueue lock is dropped when
		sleeping, then reacquired before this service returns to the caller.
	condition	C expression for the event to wait for.
	timeout	relative timeout in nanoseconds, see RTDM_TIMEOUT_xxx for special
		values.
in,out	toseq	handle of a timeout sequence as returned by rtdm_toseq_init() or NU-
		LL.

#### Returns

0 on success, otherwise:

- -EINTR is returned if calling task has received a Linux signal or has been forcibly unblocked by a call to rtdm\_task\_unblock().
- -ETIMEDOUT is returned if the if the request has not been satisfied within the specified amount of time.

#### Note

rtdm\_waitqueue\_signal() has to be called after changing any variable that could change the result of the wait condition.

Passing RTDM\_TIMEOUT\_NONE to *timeout* makes no sense for such service, and might cause unexpected behavior.

## Tags

primary-only, might-switch

6.32.3.6 void rtdm\_timedwait\_locked ( struct rtdm\_wait\_queue \* wq, nanosecs\_rel\_t timeout, rtdm toseq t \* toseq )

Timed sleep on a locked waitqueue unconditionally.

The calling task is put to sleep until the waitqueue is signaled by either rtdm\_waitqueue\_signal() or rtdm\_waitqueue\_broadcast(), or flushed by a call to rtdm\_waitqueue\_flush(), or a timeout occurs.

The waitqueue must have been locked by a call to <a href="rtdm\_waitqueue\_lock">rtdm\_waitqueue\_lock</a>() prior to calling this service.

## **Parameters**

	wq	locked waitqueue to wait on. The waitqueue lock is dropped when
		sleeping, then reacquired before this service returns to the caller.
	timeout	relative timeout in nanoseconds, see RTDM_TIMEOUT_xxx for special
		values.
in,out	toseq	handle of a timeout sequence as returned by rtdm_toseq_init() or NU-
		LL.

### Returns

0 on success, otherwise:

- -EINTR is returned if the waitqueue has been flushed, or the calling task has received a Linux signal or has been forcibly unblocked by a call to rtdm\_task\_unblock().
- -ETIMEDOUT is returned if the if the request has not been satisfied within the specified amount of time.

Note

Passing RTDM\_TIMEOUT\_NONE to *timeout* makes no sense for such service, and might cause unexpected behavior.

Tags

primary-only, might-switch

```
6.32.3.7 void rtdm toseq init ( rtdm toseq t * timeout seq, nanosecs rel t timeout )
```

Initialise a timeout sequence.

This service initialises a timeout sequence handle according to the given timeout value. Timeout sequences allow to maintain a continuous *timeout* across multiple calls of blocking synchronisation services. A typical application scenario is given below.

#### **Parameters**

in,out	timeout_seq	Timeout sequence handle
in	timeout	Relative timeout in nanoseconds, see RTDM_TIMEOUT_xxx for spe-
		cial values

## Application Scenario:

Using a timeout sequence in such a scenario avoids that the user-provided relative timeout is restarted on every call to <a href="rtdm\_event\_timedwait">rtdm\_event\_timedwait</a>(), potentially causing an overall delay that is larger than specified by timeout. Moreover, all functions supporting timeout sequences also interpret special timeout values (infinite and non-blocking), disburdening the driver developer from handling them separately.

Tags

task-unrestricted

```
6.32.3.8 void rtdm wait ( struct rtdm wait queue * wq )
```

Sleep on a waitqueue unconditionally.

The calling task is put to sleep until the waitqueue is signaled by either rtdm\_waitqueue\_signal() or rtdm\_waitqueue\_broadcast(), or flushed by a call to rtdm\_waitqueue\_flush().

wq	waitqueue to wait on.
----	-----------------------

### Returns

0 on success, otherwise:

• -EINTR is returned if the waitqueue has been flushed, or the calling task has received a Linux signal or has been forcibly unblocked by a call to rtdm task unblock().

## Tags

primary-only, might-switch

```
6.32.3.9 rtdm_wait_condition ( struct rtdm_wait_queue * wq, C_expr condition )
```

Sleep on a waitqueue until a condition gets true.

The calling task is put to sleep until *condition* evaluates to true. The condition is checked each time the waitqueue *wq* is signaled.

#### **Parameters**

wq	waitqueue to wait on
condition	C expression for the event to wait for.

#### Returns

0 on success, otherwise:

• -EINTR is returned if calling task has received a Linux signal or has been forcibly unblocked by a call to rtdm\_task\_unblock().

## Note

rtdm\_waitqueue\_signal() has to be called after changing any variable that could change the result of the wait condition.

# Tags

primary-only, might-switch

```
6.32.3.10 rtdm_wait_condition_locked ( struct rtdm_wait_queue * wq, C_expr condition )
```

Sleep on a locked waitqueue until a condition gets true.

The calling task is put to sleep until *condition* evaluates to true. The condition is checked each time the waitqueue *wq* is signaled.

The waitqueue must have been locked by a call to <a href="rtdm\_waitqueue\_lock">rtdm\_waitqueue\_lock</a>() prior to calling this service.

### **Parameters**

wq	locked waitqueue to wait on. The waitqueue lock is dropped when sleeping, then	
	reacquired before this service returns to the caller.	
condition	C expression for the event to wait for.	

#### Returns

0 on success, otherwise:

• -EINTR is returned if calling task has received a Linux signal or has been forcibly unblocked by a call to rtdm\_task\_unblock().

#### Note

rtdm\_waitqueue\_signal() has to be called after changing any variable that could change the result of the wait condition.

### Tags

primary-only, might-switch

```
6.32.3.11 void rtdm_wait_locked ( struct rtdm_wait_queue * wq )
```

Sleep on a locked waitqueue unconditionally.

The calling task is put to sleep until the waitqueue is signaled by either rtdm\_waitqueue\_signal() or rtdm\_waitqueue broadcast(), or flushed by a call to rtdm\_waitqueue flush().

The waitqueue must have been locked by a call to <a href="rtdm\_waitqueue\_lock">rtdm\_waitqueue\_lock</a>() prior to calling this service.

# **Parameters**

wq	locked waitqueue to wait on. The waitqueue lock is dropped when sleeping, then	
	reacquired before this service returns to the caller.	

## Returns

0 on success, otherwise:

• -EINTR is returned if the waitqueue has been flushed, or the calling task has received a Linux signal or has been forcibly unblocked by a call to rtdm\_task\_unblock().

# Tags

primary-only, might-switch

```
6.32.3.12 void rtdm_waitqueue_broadcast ( struct rtdm_wait_queue * wq )
```

Broadcast a waitqueue.

Broadcast the waitqueue *wq*, waking up all waiters. Each readied task may assume to have received the wake up event.

wq | waitqueue to broadcast.

Returns

non-zero if at least one task has been readied as a result of this call, zero otherwise.

Tags

unrestricted, might-switch

6.32.3.13 void rtdm\_waitqueue\_destroy ( struct rtdm\_waitqueue \* wq )

Deletes a RTDM wait queue.

Dismantles a wait queue structure, releasing all resources attached to it.

**Parameters** 

wq waitqueue to delete.

Tags

task-unrestricted

6.32.3.14 void rtdm\_waitqueue\_flush ( struct rtdm\_wait\_queue \* wq )

Flush a waitqueue.

Flushes the waitqueue wq, unblocking all waiters with an error status (-EINTR).

Parameters

wq waitqueue to flush.

Returns

non-zero if at least one task has been readied as a result of this call, zero otherwise.

Tags

unrestricted, might-switch

6.32.3.15 void rtdm\_waitqueue\_init ( struct rtdm\_waitqueue \* wq )

Initialize a RTDM wait queue.

Sets up a wait queue structure for further use.

**Parameters** 

wq waitqueue to initialize.

Tags

task-unrestricted

170 Module Documentation

6.32.3.16 void rtdm\_waitqueue\_lock ( struct rtdm\_wait\_queue \* wq, rtdm\_lockctx\_t context )

Lock a waitqueue.

Acquires the lock on the waitqueue wq.

**Parameters** 

wq	waitqueue to lock.
context	name of local variable to store the context in.

Note

Recursive locking might lead to unexpected behavior, including lock up.

Tags

unrestricted

6.32.3.17 void rtdm\_waitqueue\_signal ( struct rtdm\_wait\_queue \* wq )

Signal a waitqueue.

Signals the waitqueue wq, waking up a single waiter (if any).

**Parameters** 

Returns

non-zero if a task has been readied as a result of this call, zero otherwise.

Tags

unrestricted, might-switch

6.32.3.18 void rtdm\_waitqueue\_unlock ( struct rtdm\_wait\_queue \* wq, rtdm\_lockctx\_t context )

Unlock a waitqueue.

Releases the lock on the waitqueue wg.

**Parameters** 

wq	waitqueue to unlock.
context	name of local variable to retrieve the context from.

Tags

unrestricted

6.32.3.19 void rtdm\_waitqueue\_wakeup ( struct rtdm\_wait\_queue \* wq, rtdm\_task\_t waiter )

Signal a particular waiter on a waitqueue.

Signals the waitqueue wq, waking up waiter waiter only, which must be currently sleeping on the waitqueue.

wq	waitqueue to signal.
waiter	RTDM task to wake up.

# Tags

unrestricted, might-switch

# 6.33 Event Services

Collaboration diagram for Event Services:



# **Functions**

void rtdm\_event\_init (rtdm\_event\_t \*event, unsigned long pending)

Initialise an event.

void rtdm\_event\_destroy (rtdm\_event\_t \*event)

Destroy an event.

• void rtdm\_event\_pulse (rtdm\_event\_t \*event)

Signal an event occurrence to currently listening waiters.

• void rtdm\_event\_signal (rtdm\_event\_t \*event)

Signal an event occurrence.

int rtdm\_event\_wait (rtdm\_event\_t \*event)

Wait on event occurrence.

int rtdm\_event\_timedwait (rtdm\_event\_t \*event, nanosecs\_rel\_t timeout, rtdm\_toseq\_t \*timeout\_seq)

Wait on event occurrence with timeout.

void rtdm\_event\_clear (rtdm\_event\_t \*event)

Clear event state.

int rtdm\_event\_select (rtdm\_event\_t \*event, rtdm\_selector\_t \*selector, enum rtdm\_selecttype type, unsigned int fd\_index)

Bind a selector to an event.

# 6.33.1 Detailed Description

## 6.33.2 Function Documentation

6.33.2.1 void rtdm\_event\_clear ( rtdm\_event\_t \* event )

# Clear event state.

**Parameters** 

in,out	event	Event handle as returned by rtdm_event_init()

# Tags

### unrestricted

References xnselect\_signal().

6.33 Event Services 173

6.33.2.2 void rtdm\_event\_destroy ( rtdm\_event\_t \* event )

Destroy an event.

in,out	event	Event handle as returned by rtdm_event_init()

## Tags

## task-unrestricted, might-switch

References XNRMID, and xnselect\_destroy().

Referenced by udd\_unregister\_device().

6.33.2.3 void rtdm\_event\_init ( rtdm\_event\_t \* event, unsigned long pending )

#### Initialise an event.

#### **Parameters**

in,out	event	Event handle
in	pending	Non-zero if event shall be initialised as set, 0 otherwise

### Tags

### task-unrestricted

References xnselect\_init(), and xnsynch\_init().

Referenced by udd\_register\_device().

6.33.2.4 void rtdm event pulse ( rtdm event t \* event )

Signal an event occurrence to currently listening waiters.

This function wakes up all current waiters of the given event, but it does not change the event state. Subsequently callers of rtdm\_event\_wait() or rtdm\_event\_timedwait() will therefore be blocked first.

## **Parameters**

_			
	in,out	event	Event handle as returned by rtdm_event_init()

# Tags

# unrestricted, might-switch

6.33.2.5 int rtdm\_event\_select ( rtdm\_event\_t \* event, rtdm\_selector\_t \* selector, enum rtdm\_selecttype type, unsigned int fd\_index )

Bind a selector to an event.

This functions binds the given selector to an event so that the former is notified when the event state changes. Typically the select binding handler will invoke this service.

# Parameters

ſ	in.out	event	Event handle as returned by rtdm_event_init()
L	,		

6.33 Event Services 175

in,out	selector	Selector as passed to the select binding handler
in	type	Type of the bound event as passed to the select binding handler
in	fd_index	File descriptor index as passed to the select binding handler

#### Returns

0 on success, otherwise:

- -ENOMEM is returned if there is insufficient memory to establish the dynamic binding.
- -EINVAL is returned if type or fd\_index are invalid.

# Tags

### task-unrestricted

References xnselect\_bind().

```
6.33.2.6 void rtdm_event_signal ( rtdm_event_t * event )
```

Signal an event occurrence.

This function sets the given event and wakes up all current waiters. If no waiter is presently registered, the next call to <a href="rtdm\_event\_wait">rtdm\_event\_wait</a>() or <a href="rtdm\_event\_timedwait</a>() will return immediately.

#### **Parameters**

	in,out	event	Event handle as returned by rtdm_event_init()
--	--------	-------	---

# Tags

# unrestricted, might-switch

References xnsched\_run(), xnselect\_signal(), and xnsynch\_flush().

Referenced by udd\_notify\_event().

6.33.2.7 int rtdm\_event\_timedwait ( rtdm\_event\_t \* event, nanosecs\_rel\_t timeout, rtdm\_toseq\_t \* timeout\_seq )

Wait on event occurrence with timeout.

This function waits or tests for the occurrence of the given event, taking the provided timeout into account. On successful return, the event is reset.

#### **Parameters**

in,out	event	Event handle as returned by rtdm_event_init()
in	timeout	Relative timeout in nanoseconds, see RTDM_TIMEOUT_xxx for spe-
		cial values
in,out	timeout_seq	Handle of a timeout sequence as returned by rtdm_toseq_init() or NU-
		LL

## Returns

0 on success, otherwise:

 -ETIMEDOUT is returned if the if the request has not been satisfied within the specified amount of time. 176 Module Documentation

• -EINTR is returned if calling task has been unblock by a signal or explicitly via rtdm\_task\_unblock().

- -EIDRM is returned if event has been destroyed.
- -EPERM may be returned if an illegal invocation environment is detected.
- -EWOULDBLOCK is returned if a negative timeout (i.e., non-blocking operation) has been specified.

## Tags

primary-only, might-switch

References XNBREAK, XNRMID, xnselect\_signal(), xnsynch\_sleep\_on(), xnthread\_current(), and XN-TIMEO.

Referenced by rtdm event wait().

```
6.33.2.8 int rtdm_event_wait ( rtdm_event_t * event )
```

Wait on event occurrence.

This is the light-weight version of rtdm\_event\_timedwait(), implying an infinite timeout.

### **Parameters**

in,out	event	Event handle as returned by rtdm_event_init()
--------	-------	---

### Returns

0 on success, otherwise:

- -EINTR is returned if calling task has been unblock by a signal or explicitly via rtdm\_task\_unblock().
- -EIDRM is returned if event has been destroyed.
- -EPERM may be returned if an illegal invocation environment is detected.


# Tags

primary-only, might-switch

References rtdm\_event\_timedwait().

# 6.34 Semaphore Services

Collaboration diagram for Semaphore Services:

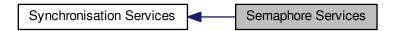

# **Functions**

- void rtdm\_sem\_init (rtdm\_sem\_t \*sem, unsigned long value)
   Initialise a semaphore.
- void rtdm\_sem\_destroy (rtdm\_sem\_t \*sem)

Destroy a semaphore.

int rtdm\_sem\_down (rtdm\_sem\_t \*sem)

Decrement a semaphore.

- int rtdm\_sem\_timeddown (rtdm\_sem\_t \*sem, nanosecs\_rel\_t timeout, rtdm\_toseq\_t \*timeout\_seq)

  Decrement a semaphore with timeout.
- void rtdm\_sem\_up (rtdm\_sem\_t \*sem)

Increment a semaphore.

 int rtdm\_sem\_select (rtdm\_sem\_t \*sem, rtdm\_selector\_t \*selector, enum rtdm\_selecttype type, unsigned int fd\_index)

Bind a selector to a semaphore.

# 6.34.1 Detailed Description

# 6.34.2 Function Documentation

6.34.2.1 void rtdm\_sem\_destroy ( rtdm\_sem\_t \* sem )

Destroy a semaphore.

**Parameters** 

in,out	sem	Semaphore handle as returned by rtdm_sem_init()
--------	-----	---

# Tags

task-unrestricted, might-switch

References XNRMID, and xnselect\_destroy().

6.34.2.2 int rtdm\_sem\_down ( rtdm\_sem\_t \* sem )

Decrement a semaphore.

This is the light-weight version of rtdm sem timeddown(), implying an infinite timeout.

178

in,out	sem	Semaphore handle as returned by rtdm_sem_init()
--------	-----	---

### Returns

0 on success, otherwise:

- -EINTR is returned if calling task has been unblock by a signal or explicitly via rtdm\_task\_unblock().
- -EIDRM is returned if sem has been destroyed.
- -EPERM may be returned if an illegal invocation environment is detected.

### Tags

primary-only, might-switch

References rtdm\_sem\_timeddown().

6.34.2.3 void rtdm\_sem\_init ( rtdm\_sem\_t \* sem, unsigned long value )

Initialise a semaphore.

#### **Parameters**

in,out	sem	Semaphore handle
in	value	Initial value of the semaphore

### Tags

### task-unrestricted

References xnselect\_init(), and xnsynch\_init().

6.34.2.4 int rtdm\_sem\_select ( rtdm\_sem\_t \* sem, rtdm\_selector\_t \* selector, enum rtdm selecttype type, unsigned int fd index )

Bind a selector to a semaphore.

This functions binds the given selector to the semaphore so that the former is notified when the semaphore state changes. Typically the select binding handler will invoke this service.

### **Parameters**

in,out	sem	Semaphore handle as returned by rtdm_sem_init()
in,out	selector	Selector as passed to the select binding handler
in	type	Type of the bound event as passed to the select binding handler
in	fd_index	File descriptor index as passed to the select binding handler

## Returns

0 on success, otherwise:

- -ENOMEM is returned if there is insufficient memory to establish the dynamic binding.
- -EINVAL is returned if type or fd\_index are invalid.

# Tags

# task-unrestricted

References xnselect\_bind().

6.34.2.5 int rtdm\_sem\_timeddown ( rtdm\_sem\_t \* sem, nanosecs\_rel\_t timeout, rtdm\_toseq\_t \* timeout\_seq )

Decrement a semaphore with timeout.

This function tries to decrement the given semphore's value if it is positive on entry. If not, the caller is blocked unless non-blocking operation was selected.

#### **Parameters**

in,out	sem	Semaphore handle as returned by rtdm_sem_init()
in	timeout	Relative timeout in nanoseconds, see RTDM_TIMEOUT_xxx for spe-
		cial values
in,out	timeout_seq	Handle of a timeout sequence as returned by rtdm_toseq_init() or NU-
		LL

#### Returns

0 on success, otherwise:

- -ETIMEDOUT is returned if the if the request has not been satisfied within the specified amount of time.
- -EWOULDBLOCK is returned if timeout is negative and the semaphore value is currently not positive
- -EINTR is returned if calling task has been unblock by a signal or explicitly via rtdm\_task\_unblock().
- -EIDRM is returned if sem has been destroyed.
- -EPERM may be returned if an illegal invocation environment is detected.

#### Tags

primary-only, might-switch

References XNBREAK, XNRMID, xnselect\_signal(), xnsynch\_sleep\_on(), xnthread\_current(), and XN-TIMEO.

Referenced by rtdm\_sem\_down().

```
6.34.2.6 void rtdm_sem_up ( rtdm_sem_t * sem )
```

Increment a semaphore.

This function increments the given semphore's value, waking up a potential waiter which was blocked upon rtdm\_sem\_down().

# **Parameters**

in,out	sem	Semaphore handle as returned by rtdm_sem_init()

# Tags

unrestricted, might-switch

References xnsched run(), xnselect signal(), and xnsynch wakeup one sleeper().

# 6.35 Mutex services

Collaboration diagram for Mutex services:



# **Functions**

• void rtdm\_mutex\_init (rtdm\_mutex\_t \*mutex)

void rtdm\_mutex\_destroy (rtdm\_mutex\_t \*mutex)

Destroy a mutex.

Initialise a mutex.

void rtdm\_mutex\_unlock (rtdm\_mutex\_t \*mutex)

Release a mutex.

• int rtdm\_mutex\_lock (rtdm\_mutex\_t \*mutex)

Request a mutex.

int rtdm\_mutex\_timedlock (rtdm\_mutex\_t \*mutex, nanosecs\_rel\_t timeout, rtdm\_toseq\_t \*timeout\_seq)

Request a mutex with timeout.

# 6.35.1 Detailed Description

# 6.35.2 Function Documentation

6.35.2.1 void rtdm\_mutex\_destroy ( rtdm\_mutex\_t \* mutex )

# Destroy a mutex.

# **Parameters**

in,out	mutex	Mutex handle as returned by rtdm_mutex_init()

# Tags

task-unrestricted, might-switch

# References XNRMID.

6.35.2.2 void rtdm\_mutex\_init ( rtdm\_mutex\_t \* mutex )

### Initialise a mutex.

This function initalises a basic mutex with priority inversion protection. "Basic", as it does not allow a mutex owner to recursively lock the same mutex again.

6.35 Mutex services 181

#### **Parameters**

in,out	mutex	Mutex handle
--------	-------	--------------

## Tags

## task-unrestricted

References xnsynch\_init().

```
6.35.2.3 int rtdm_mutex_lock ( rtdm_mutex_t * mutex )
```

Request a mutex.

This is the light-weight version of rtdm\_mutex\_timedlock(), implying an infinite timeout.

### **Parameters**

in,out	mutex	Mutex handle as returned by rtdm_mutex_init()
--------	-------	---

### Returns

0 on success, otherwise:

- -EIDRM is returned if mutex has been destroyed.
- -EPERM may be returned if an illegal invocation environment is detected.

# Tags

primary-only, might-switch

References rtdm\_mutex\_timedlock().

```
6.35.2.4 int rtdm_mutex_timedlock ( rtdm_mutex_t * mutex, nanosecs_rel_t timeout, rtdm_toseq_t * timeout_seq )
```

Request a mutex with timeout.

This function tries to acquire the given mutex. If it is not available, the caller is blocked unless non-blocking operation was selected.

# **Parameters**

in,out	mutex	Mutex handle as returned by rtdm_mutex_init()
in	timeout	Relative timeout in nanoseconds, see RTDM_TIMEOUT_xxx for special values
in,out	timeout_seq	Handle of a timeout sequence as returned by <a href="rtdm_toseq_init(">rtdm_toseq_init()</a> or NU-LL

# Returns

0 on success, otherwise:

- -ETIMEDOUT is returned if the if the request has not been satisfied within the specified amount of
- -EWOULDBLOCK is returned if timeout is negative and the semaphore value is currently not positive.

182 Module Documentation

- -EIDRM is returned if mutex has been destroyed.
- -EPERM may be returned if an illegal invocation environment is detected.

# Tags

primary-only, might-switch

References XNBREAK, XNRMID, xnsynch\_acquire(), xnthread\_current(), and XNTIMEO. Referenced by rtdm\_mutex\_lock().

6.35.2.5 void rtdm\_mutex\_unlock ( rtdm\_mutex\_t \* mutex )

### Release a mutex.

This function releases the given mutex, waking up a potential waiter which was blocked upon rtdm\_mutex\_lock() or rtdm\_mutex\_timedlock().

### **Parameters**

in,out	mutex	Mutex handle as returned by rtdm_mutex_init()


# Tags

primary-only, might-switch

References xnsched\_run(), and xnsynch\_release().

# 6.36 Interrupt Management Services

Collaboration diagram for Interrupt Management Services:

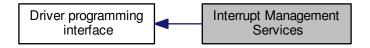

## Macros

#define rtdm\_irq\_get\_arg(irq\_handle, type) ((type \*)irq\_handle->cookie)
 Retrieve IRQ handler argument.

# **Typedefs**

typedef int(\* rtdm\_irq\_handler\_t )(rtdm\_irq\_t \*irq\_handle)
 Interrupt handler.

# **Functions**

• int rtdm\_irq\_request (rtdm\_irq\_t \*irq\_handle, unsigned int irq\_no, rtdm\_irq\_handler\_t handler, unsigned long flags, const char \*device\_name, void \*arg)

Register an interrupt handler.

int rtdm\_irq\_free (rtdm\_irq\_t \*irq\_handle)

Release an interrupt handler.

• int rtdm\_irq\_enable (rtdm\_irq\_t \*irq\_handle)

Enable interrupt line.

• int rtdm\_irq\_disable (rtdm\_irq\_t \*irq\_handle)

Disable interrupt line.

# RTDM IRQTYPE xxx

Interrupt registrations flags

• #define RTDM\_IRQTYPE\_SHARED XN\_IRQTYPE\_SHARED

Enable IRQ-sharing with other real-time drivers.

#define RTDM\_IRQTYPE\_EDGE XN\_IRQTYPE\_EDGE

Mark IRQ as edge-triggered, relevant for correct handling of shared edge-triggered IRQs.

# RTDM IRQ xxx

Return flags of interrupt handlers

• #define RTDM\_IRQ\_NONE XN\_IRQ\_NONE

Unhandled interrupt.

#define RTDM\_IRQ\_HANDLED XN\_IRQ\_HANDLED

Denote handled interrupt.

• #define RTDM IRQ DISABLE XN IRQ DISABLE

Request interrupt disabling on exit.

# 6.36.1 Detailed Description

# 6.36.2 Macro Definition Documentation

6.36.2.1 #define rtdm\_irq\_get\_arg( irq\_handle, type ) ((type \*)irq\_handle->cookie)

## Retrieve IRQ handler argument.

**Parameters** 

irq_handle	IRQ handle
type	Type of the pointer to return

### Returns

The argument pointer registered on <a href="rtdm\_irq\_request">rtdm\_irq\_request</a>() is returned, type-casted to the specified type.

## Tags

### unrestricted

# 6.36.3 Typedef Documentation

6.36.3.1 typedef int(\* rtdm\_irq\_handler\_t)(rtdm\_irq\_t \*irq\_handle)

## Interrupt handler.

**Parameters** 

in	irq_handle	IRQ handle as returned by rtdm_irq_request()

# Returns

0 or a combination of RTDM\_IRQ\_xxx flags

## 6.36.4 Function Documentation

6.36.4.1 int rtdm\_irq\_disable ( rtdm\_irq\_t \* irq\_handle )

Disable interrupt line.

### **Parameters**

in,out	irq_handle	IRQ handle as returned by rtdm_irq_request()
--------	------------	--

### Returns

0 on success, otherwise negative error code

### Note

This service is for exceptional use only. Drivers should always prefer interrupt masking at device level (via corresponding control registers etc.) over masking at line level. Keep in mind that the latter is incompatible with IRQ line sharing and can also be more costly as interrupt controller access requires broader synchronization. Also, certain IRQ types may not allow the invocation over RT and interrupt contexts. The caller is responsible for excluding such conflicts.

### Tags

secondary-only

6.36.4.2 int rtdm irg enable ( rtdm irg t \* irg handle )

Enable interrupt line.

**Parameters** 

in,out	irq_handle	IRQ handle as returned by rtdm_irq_request()
--------	------------	--

## Returns

0 on success, otherwise negative error code

## Note

This service is for exceptional use only. Drivers should always prefer interrupt masking at device level (via corresponding control registers etc.) over masking at line level. Keep in mind that the latter is incompatible with IRQ line sharing and can also be more costly as interrupt controller access requires broader synchronization. Also, certain IRQ types may not allow the invocation over RT and interrupt contexts. The caller is responsible for excluding such conflicts.

## Tags

secondary-only

6.36.4.3 int rtdm\_irq\_free ( rtdm\_irq\_t \* irq\_handle )

Release an interrupt handler.

**Parameters** 

	in,out irq_handle	IRQ handle as returned by rtdm_irq_request()
--	-------------------	--

### Returns

0 on success, otherwise negative error code

### Note

The caller is responsible for shutting down the IRQ source at device level before invoking this service. In turn, rtdm\_irq\_free ensures that any pending event on the given IRQ line is fully processed on return from this service.

## Tags

## secondary-only

Referenced by udd\_unregister\_device().

6.36.4.4 int rtdm\_irq\_request ( rtdm\_irq\_t \* irq\_handle, unsigned int irq\_no, rtdm\_irq\_handler\_t handler, unsigned long flags, const char \* device\_name, void \* arg )

Register an interrupt handler.

This function registers the provided handler with an IRQ line and enables the line.

### **Parameters**

in,out	irq_handle	IRQ handle	
in	irq_no	Line number of the addressed IRQ	
in	handler	Interrupt handler	
in	flags	Registration flags, see RTDM_IRQTYPE_xxx for details	
in	device_name	Device name to show up in real-time IRQ lists	
in	arg	Pointer to be passed to the interrupt handler on invocation	

## Returns

0 on success, otherwise:

- -EINVAL is returned if an invalid parameter was passed.
- -EBUSY is returned if the specified IRQ line is already in use.

# Tags

# secondary-only


 $References\ xnintr\_attach(),\ xnintr\_destroy(),\ xnintr\_enable(),\ and\ xnintr\_init().$ 

Referenced by udd\_register\_device().

# 6.37 Non-Real-Time Signalling Services

These services provide a mechanism to request the execution of a specified handler in non-real-time context.

Collaboration diagram for Non-Real-Time Signalling Services:

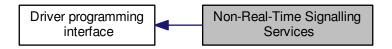

# **Typedefs**

• typedef void(\* rtdm\_nrtsig\_handler\_t )(rtdm\_nrtsig\_t nrt\_sig, void \*arg)

Non-real-time signal handler.

### **Functions**

- int rtdm\_nrtsig\_init (rtdm\_nrtsig\_t \*nrt\_sig, rtdm\_nrtsig\_handler\_t handler, void \*arg)

  Register a non-real-time signal handler.
- void rtdm\_nrtsig\_destroy (rtdm\_nrtsig\_t \*nrt\_sig)

Release a non-realtime signal handler.

void rtdm\_nrtsig\_pend (rtdm\_nrtsig\_t \*nrt\_sig)

Trigger non-real-time signal.

# 6.37.1 Detailed Description

These services provide a mechanism to request the execution of a specified handler in non-real-time context. The triggering can safely be performed in real-time context without suffering from unknown delays. The handler execution will be deferred until the next time the real-time subsystem releases the CPU to the non-real-time part.

# 6.37.2 Typedef Documentation

6.37.2.1 typedef void(\* rtdm nrtsig handler t)(rtdm nrtsig t nrt sig, void \*arg)

# Non-real-time signal handler.

## **Parameters**

in	nrt_sig	Signal handle as returned by rtdm_nrtsig_init()	
in	arg	Argument as passed to rtdm_nrtsig_init()	

## Note

The signal handler will run in soft-IRQ context of the non-real-time subsystem. Note the implications of this context, e.g. no invocation of blocking operations.

# 6.37.3 Function Documentation

6.37.3.1 void rtdm\_nrtsig\_destroy ( rtdm\_nrtsig\_t \* nrt\_sig )

Release a non-realtime signal handler.

**Parameters** 

in,out	nrt_sig	Signal handle

# Tags

## task-unrestricted

6.37.3.2 int rtdm\_nrtsig\_init ( rtdm\_nrtsig\_t \* nrt\_sig, rtdm\_nrtsig\_handler\_t handler, void \* arg )

Register a non-real-time signal handler.

# **Parameters**

in,out	nrt_sig	Signal handle	
in	handler	Non-real-time signal handler	
in	arg	Custom argument passed to handler() on each invocation	

# Returns

0 on success, otherwise:

• -EAGAIN is returned if no free signal slot is available.

# Tags

## task-unrestricted

6.37.3.3 void rtdm\_nrtsig\_pend ( rtdm\_nrtsig\_t \* nrt\_sig )

Trigger non-real-time signal.

## **Parameters**

in,out	nrt_sig	Signal handle	


## Tags

unrestricted

6.38 Utility Services 189

# 6.38 Utility Services

Collaboration diagram for Utility Services:

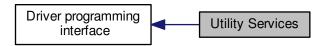

## **Functions**

• int rtdm\_mmap\_to\_user (struct rtdm\_fd \*fd, void \*src\_addr, size\_t len, int prot, void \*\*pptr, struct vm operations struct \*vm ops, void \*vm private data)

Map a kernel memory range into the address space of the user.

• int rtdm\_iomap\_to\_user (struct rtdm\_fd \*fd, phys\_addr\_t src\_addr, size\_t len, int prot, void \*\*pptr, struct vm\_operations\_struct \*vm\_ops, void \*vm\_private\_data)

Map an I/O memory range into the address space of the user.

int rtdm\_mmap\_kmem (struct vm\_area\_struct \*vma, void \*va)

Map a kernel logical memory range to a virtual user area.

int rtdm\_mmap\_vmem (struct vm\_area\_struct \*vma, void \*va)

Map a virtual memory range to a virtual user area.

int rtdm\_mmap\_iomem (struct vm\_area\_struct \*vma, phys\_addr\_t pa)

Map an I/O memory range to a virtual user area.

int rtdm\_munmap (void \*ptr, size\_t len)

Unmap a user memory range.

int rtdm\_ratelimit (struct rtdm\_ratelimit\_state \*rs, const char \*func)

Enforces a rate limit.

void rtdm\_printk\_ratelimited (const char \*format,...)

Real-time safe rate-limited message printing on kernel console.

• void rtdm printk (const char \*format,...)

Real-time safe message printing on kernel console.

void \* rtdm\_malloc (size\_t size)

Allocate memory block.

void rtdm\_free (void \*ptr)

Release real-time memory block.

• int rtdm\_read\_user\_ok (struct rtdm\_fd \*fd, const void \_\_user \*ptr, size\_t size)

Check if read access to user-space memory block is safe.

int rtdm\_rw\_user\_ok (struct rtdm\_fd \*fd, const void \_\_user \*ptr, size\_t size)

Check if read/write access to user-space memory block is safe.

• int rtdm\_copy\_from\_user (struct rtdm\_fd \*fd, void \*dst, const void \_\_user \*src, size\_t size)

Copy user-space memory block to specified buffer.

• int rtdm\_safe\_copy\_from\_user (struct rtdm\_fd \*fd, void \*dst, const void \_\_user \*src, size\_t size)

Check if read access to user-space memory block and copy it to specified buffer.

• int rtdm\_copy\_to\_user (struct rtdm\_fd \*fd, void \_\_user \*dst, const void \*src, size\_t size)

Copy specified buffer to user-space memory block.

• int rtdm\_safe\_copy\_to\_user (struct rtdm\_fd \*fd, void \_\_user \*dst, const void \*src, size\_t size)

Check if read/write access to user-space memory block is safe and copy specified buffer to it.

• int rtdm\_strncpy\_from\_user (struct rtdm\_fd \*fd, char \*dst, const char \_\_user \*src, size\_t count) Copy user-space string to specified buffer.

int rtdm\_in\_rt\_context (void)

Test if running in a real-time task.

• int rtdm\_rt\_capable (struct rtdm\_fd \*fd)

Test if the caller is capable of running in real-time context.

# 6.38.1 Detailed Description

## 6.38.2 Function Documentation

6.38.2.1 int rtdm\_copy\_from\_user ( struct rtdm\_fd \* fd, void \* dst, const void \_\_user \* src, size\_t size )

Copy user-space memory block to specified buffer.

### **Parameters**

in	fd	RTDM file descriptor as passed to the invoked device operation han-	
		dler	
in	dst	Destination buffer address	
in	src	Address of the user-space memory block	
in	size	Size of the memory block	

### Returns

0 on success, otherwise:

· -EFAULT is returned if an invalid memory area was accessed.

# Note

Before invoking this service, verify via <a href="rtdm\_read\_user\_ok">rtdm\_read\_user\_ok</a>() that the provided user-space address can securely be accessed.

## Tags

## task-unrestricted

6.38.2.2 int rtdm\_copy\_to\_user ( struct rtdm\_fd \* fd, void \_\_user \* dst, const void \* src, size\_t size )

Copy specified buffer to user-space memory block.

in	fd	RTDM file descriptor as passed to the invoked device operation han-	
		dler	
in	dst	Address of the user-space memory block	
in	src	Source buffer address	

6.38 Utility Services 191

in	size	Size of the memory block

### Returns

0 on success, otherwise:

· -EFAULT is returned if an invalid memory area was accessed.

Note

Before invoking this service, verify via <a href="rtdm\_rw\_user\_ok">rtdm\_rw\_user\_ok</a>() that the provided user-space address can securely be accessed.

Tags

task-unrestricted

```
6.38.2.3 void rtdm_free ( void * ptr )
```

Release real-time memory block.

**Parameters** 

in	ptr	Pointer to memory block as returned by rtdm_malloc()
----	-----	--

### Tags

## unrestricted

```
6.38.2.4 int rtdm_in_rt_context (void)
```

Test if running in a real-time task.

Returns

Non-zero is returned if the caller resides in real-time context, 0 otherwise.

Tags

unrestricted

```
6.38.2.5 int rtdm_iomap_to_user ( struct rtdm_fd * fd, phys_addr_t src_addr, size_t len, int prot, void ** pptr, struct vm_operations_struct * vm_ops, void * vm_private_data )
```

Map an I/O memory range into the address space of the user.

in	fd	RTDM file descriptor as passed to the invoked device operation han-
		dler

in	src_addr	physical I/O address to be mapped
in	len	Length of the memory range
in	prot	Protection flags for the user's memory range, typically either PROT
		READ or PROT_READ PROT_WRITE
in,out	pptr	Address of a pointer containing the desired user address or NULL on
		entry and the finally assigned address on return
in	vm_ops	vm_operations to be executed on the vm_area of the user memory
		range or NULL
in	vm_private	Private data to be stored in the vm_area, primarily useful for vm
	data	operation handlers

### Returns

0 on success, otherwise (most common values):

- -EINVAL is returned if an invalid start address, size, or destination address was passed.
- -ENOMEM is returned if there is insufficient free memory or the limit of memory mapping for the user process was reached.
- -EAGAIN is returned if too much memory has been already locked by the user process.
- -EPERM may be returned if an illegal invocation environment is detected.

### Note

RTDM supports two models for unmapping the memory area:

- manual unmapping via <a href="mailto:rtdm\_munmap">rtdm\_munmap</a>(), which may be issued from a driver in response to an IOCTL call, or by a call to the regular munmap() call from the application.
- automatic unmapping, triggered by the termination of the process which owns the mapping.
  To track the number of references pending on the resource mapped, the driver can pass the
  address of a close handler for the vm\_area considered, in the vm\_ops descriptor. See the
  relevant Linux kernel programming documentation (e.g. Linux Device Drivers book) on virtual
  memory management for details.

## Tags

secondary-only

6.38.2.6 void\* rtdm malloc ( size t size )

Allocate memory block.

### **Parameters**

in	size	Requested size of the memory block
----	------	------------------------------------

## Returns

The pointer to the allocated block is returned on success, NULL otherwise.

## Tags

# unrestricted

Referenced by a4l\_alloc\_subd().

6.38 Utility Services 193

6.38.2.7 int rtdm\_mmap\_iomem ( struct vm\_area\_struct \* vma, phys\_addr\_t pa )

Map an I/O memory range to a virtual user area.

This routine is commonly used from a ->mmap() handler of a RTDM driver, for mapping an I/O memory area over the user address space referred to by *vma*.

### **Parameters**

in	vma	The VMA descriptor to receive the mapping.
in	ра	The physical I/O address to be mapped.

### Returns

0 on success, otherwise a negated error code is returned.

### Note

To map a chunk of logical space obtained from kmalloc(), or a purely virtual area with no direct physical mapping to a VMA, call rtdm\_mmap\_kmem() or rtdm\_mmap\_vmem() respectively instead.

## Tags

secondary-only

6.38.2.8 int rtdm mmap kmem ( struct vm area struct \* vma, void \* va )

Map a kernel logical memory range to a virtual user area.

This routine is commonly used from a ->mmap() handler of a RTDM driver, for mapping a virtual memory area with a direct physical mapping over the user address space referred to by *vma*.

## **Parameters**

in	vma	The VMA descriptor to receive the mapping.
in	va	The kernel logical address to be mapped.

## Returns

0 on success, otherwise a negated error code is returned.

# Note

This service works on memory regions allocated via kmalloc(). To map a chunk of virtual space with no direct physical mapping, or a physical I/O memory to a VMA, call <a href="rtdm\_mmap\_vmem">rtdm\_mmap\_iomem</a>() respectively instead.

## Tags

secondary-only

6.38.2.9 int rtdm\_mmap\_to\_user ( struct rtdm\_fd \* fd, void \* src\_addr, size\_t len, int prot, void \*\* pptr, struct vm\_operations\_struct \* vm\_ops, void \* vm\_private\_data )

Map a kernel memory range into the address space of the user.

#### **Parameters**

in	fd	RTDM file descriptor as passed to the invoked device operation han-
		dler
in	src_addr	Kernel virtual address to be mapped
in	len	Length of the memory range
in	prot	Protection flags for the user's memory range, typically either PROT
		READ or PROT_READ PROT_WRITE
in,out	pptr	Address of a pointer containing the desired user address or NULL on
		entry and the finally assigned address on return
in	vm_ops	vm_operations to be executed on the vm_area of the user memory
		range or NULL
in	vm_private	Private data to be stored in the vm_area, primarily useful for vm
	data	operation handlers

### Returns

0 on success, otherwise (most common values):

- -EINVAL is returned if an invalid start address, size, or destination address was passed.
- -ENOMEM is returned if there is insufficient free memory or the limit of memory mapping for the user process was reached.
- -EAGAIN is returned if too much memory has been already locked by the user process.
- -EPERM may be returned if an illegal invocation environment is detected.

### Note

This service only works on memory regions allocated via kmalloc() or vmalloc(). To map physical I/O memory to user-space use rtdm\_iomap\_to\_user() instead.

RTDM supports two models for unmapping the memory area:

- manual unmapping via <a href="rtdm\_munmap">rtdm\_munmap</a>(), which may be issued from a driver in response to an IOCTL call, or by a call to the regular munmap() call from the application.
- automatic unmapping, triggered by the termination of the process which owns the mapping.
  To track the number of references pending on the resource mapped, the driver can pass the
  address of a close handler for the vm\_area considered, in the vm\_ops descriptor. See the
  relevant Linux kernel programming documentation (e.g. Linux Device Drivers book) on virtual
  memory management for details.

## Tags

## secondary-only

6.38.2.10 int rtdm\_mmap\_vmem ( struct vm\_area\_struct \* vma, void \* va )

Map a virtual memory range to a virtual user area.

This routine is commonly used from a ->mmap() handler of a RTDM driver, for mapping a purely virtual memory area over the user address space referred to by *vma*.

6.38 Utility Services 195

in	vma	The VMA descriptor to receive the mapping.
in	va	The virtual address to be mapped.

### Returns

0 on success, otherwise a negated error code is returned.

### Note

This service works on memory regions allocated via vmalloc(). To map a chunk of logical space obtained from kmalloc(), or a physical I/O memory to a VMA, call <a href="rtdm\_mmap\_kmem">rtdm\_mmap\_kmem</a>() or <a href="rtdm\_mmap\_kmem">

## Tags

secondary-only

6.38.2.11 int rtdm\_munmap ( void \* ptr, size\_t len )

Unmap a user memory range.

### **Parameters**

in	ptr	User address or the memory range
in	len	Length of the memory range

## Returns

0 on success, otherwise:

- -EINVAL is returned if an invalid address or size was passed.
- -EPERM may be returned if an illegal invocation environment is detected.

## Tags

secondary-only

6.38.2.12 void rtdm\_printk ( const char \* format, ... )

Real-time safe message printing on kernel console.

## **Parameters**

in	format	Format string (conforming standard printf())
		Arguments referred by format

## Returns

On success, this service returns the number of characters printed. Otherwise, a negative error code is returned.

### Tags

unrestricted

6.38.2.13 void rtdm printk ratelimited (const char \* format, ... )

Real-time safe rate-limited message printing on kernel console.

### **Parameters**

in	format	Format string (conforming standard printf())
		Arguments referred by format

### Returns

On success, this service returns the number of characters printed. Otherwise, a negative error code is returned.

## Tags

## unrestricted

6.38.2.14 int rtdm\_ratelimit ( struct rtdm\_ratelimit\_state \* rs, const char \* func )

### Enforces a rate limit.

This function enforces a rate limit: not more than rs->burst callbacks in every rs->interval.

### **Parameters**

in,out	rs	rtdm_ratelimit_state data
in	func	name of calling function

### Returns

0 means callback will be suppressed and 1 means go ahead and do it

## Tags

## unrestricted

References rtdm\_clock\_read(), and rtdm\_lock\_put\_irqrestore().

6.38.2.15 int rtdm\_read\_user\_ok ( struct rtdm\_fd \* fd, const void \_\_user \* ptr, size\_t size )

Check if read access to user-space memory block is safe.

## **Parameters**

in	fd	RTDM file descriptor as passed to the invoked device operation handler
in	ptr	Address of the user-provided memory block
in	size	Size of the memory block

## Returns

Non-zero is return when it is safe to read from the specified memory block, 0 otherwise.

## Tags

# task-unrestricted

6.38.2.16 int rtdm rt capable ( struct rtdm fd \* fd )

Test if the caller is capable of running in real-time context.

6.38 Utility Services 197

### **Parameters**

in	fd	RTDM file descriptor as passed to the invoked device operation han-
		dler

### Returns

Non-zero is returned if the caller is able to execute in real-time context (independent of its current execution mode), 0 otherwise.

### Note

This function can be used by drivers that provide different implementations for the same service depending on the execution mode of the caller. If a caller requests such a service in non-real-time context but is capable of running in real-time as well, it might be appropriate for the driver to reject the request via -ENOSYS so that RTDM can switch the caller and restart the request in real-time context.

## Tags

### unrestricted

6.38.2.17 int rtdm\_rw\_user\_ok ( struct rtdm\_fd \* fd, const void \_\_user \* ptr, size\_t size )

Check if read/write access to user-space memory block is safe.

### **Parameters**

in	fd	RTDM file descriptor as passed to the invoked device operation handler
in	ptr	Address of the user-provided memory block
in	size	Size of the memory block

### Returns

Non-zero is return when it is safe to read from or write to the specified memory block, 0 otherwise.

# Tags

# task-unrestricted

6.38.2.18 int rtdm\_safe\_copy\_from\_user ( struct rtdm\_fd \* fd, void \* dst, const void \_\_user \* src, size t size )

Check if read access to user-space memory block and copy it to specified buffer.

in	fd	RTDM file descriptor as passed to the invoked device operation han-
		dler
in	dst	Destination buffer address
in	src	Address of the user-space memory block

2	_!	C:== = f + == ========== =    = ==
1 n	SIZE	Size of the memory block
111	0,20	OLO OF THO HIGHIOTY BIOOK

## Returns

0 on success, otherwise:

· -EFAULT is returned if an invalid memory area was accessed.

Note

This service is a combination of rtdm\_read\_user\_ok and rtdm\_copy\_from\_user.

## Tags

task-unrestricted

```
6.38.2.19 int rtdm_safe_copy_to_user ( struct rtdm_fd * fd, void __user * dst, const void * src, size_t size )
```

Check if read/write access to user-space memory block is safe and copy specified buffer to it.

### **Parameters**

in	fd	RTDM file descriptor as passed to the invoked device operation han-
		dler
in	dst	Address of the user-space memory block
in	src	Source buffer address
in	size	Size of the memory block

## Returns

0 on success, otherwise:

· -EFAULT is returned if an invalid memory area was accessed.

Note

This service is a combination of rtdm\_rw\_user\_ok and rtdm\_copy\_to\_user.

Tags

task-unrestricted

6.38.2.20 int rtdm\_strncpy\_from\_user ( struct rtdm\_fd \* fd, char \* dst, const char  $\_$ user \* src, size\_t count )

Copy user-space string to specified buffer.

6.38 Utility Services 199

in	fd	RTDM file descriptor as passed to the invoked device operation han-
		dler
in	dst	Destination buffer address
in	src	Address of the user-space string
in	count	Maximum number of bytes to copy, including the trailing '0'

# Returns

Length of the string on success (not including the trailing '0'), otherwise:

• -EFAULT is returned if an invalid memory area was accessed.

# Note

This services already includes a check of the source address, calling <a href="rtdm\_read\_user\_ok">rtdm\_read\_user\_ok</a>() for <a href="src">src</a> explicitly is not required.

# Tags


task-unrestricted

200 Module Documentation

# 6.39 SCHED\_QUOTA scheduling policy

The SCHED\_QUOTA policy enforces a limitation on the CPU consumption of threads over a globally defined period, known as the quota interval.

Collaboration diagram for SCHED QUOTA scheduling policy:

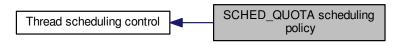


# 6.39.1 Detailed Description

The SCHED\_QUOTA policy enforces a limitation on the CPU consumption of threads over a globally defined period, known as the quota interval. This is done by pooling threads with common requirements in groups, and giving each group a share of the global period (CONFIG\_XENO\_OPT\_SCHED\_QUOT-A\_PERIOD).

When threads have entirely consumed the quota allotted to the group they belong to, the latter is suspended as a whole, until the next quota interval starts. At this point, a new runtime budget is given to each group, in accordance with its share.

# 6.40 Thread scheduling control

Collaboration diagram for Thread scheduling control:



## Modules

SCHED QUOTA scheduling policy

The SCHED\_QUOTA policy enforces a limitation on the CPU consumption of threads over a globally defined period, known as the quota interval.

## **Data Structures**

struct xnsched

Scheduling information structure.

## **Functions**

static int xnsched\_run (void)

The rescheduling procedure.

static void xnsched\_rotate (struct xnsched \*sched, struct xnsched\_class \*sched\_class, const union xnsched\_policy\_param \*sched\_param)

Rotate a scheduler runqueue.

# 6.40.1 Detailed Description

# 6.40.2 Function Documentation

6.40.2.1 void xnsched\_rotate ( struct **xnsched** \* sched, struct xnsched\_class \* sched\_class, const union xnsched\_policy\_param \* sched\_param ) [inline], [static]

Rotate a scheduler runqueue.

The specified scheduling class is requested to rotate its runqueue for the given scheduler. Rotation is performed according to the scheduling parameter specified by *sched\_param*.

### Note

The nucleus supports round-robin scheduling for the members of the RT class.

sched	The per-CPU scheduler hosting the target scheduling class.
sched_class	The scheduling class which should rotate its runqueue.
sched_param	The scheduling parameter providing rotation information to the specified scheduling
	class.

## Tags

## unrestricted, atomic-entry

6.40.2.2 int xnsched run (void) [inline], [static]

The rescheduling procedure.

This is the central rescheduling routine which should be called to validate and apply changes which have previously been made to the nucleus scheduling state, such as suspending, resuming or changing the priority of threads. This call performs context switches as needed. xnsched\_run() schedules out the current thread if:

- the current thread is about to block.
- a runnable thread from a higher priority scheduling class is waiting for the CPU.
- the current thread does not lead the runnable threads from its own scheduling class (i.e. round-robin).

The Cobalt core implements a lazy rescheduling scheme so that most of the services affecting the threads state MUST be followed by a call to the rescheduling procedure for the new scheduling state to be applied.

In other words, multiple changes on the scheduler state can be done in a row, waking threads up, blocking others, without being immediately translated into the corresponding context switches. When all changes have been applied, xnsched\_run() should be called for considering those changes, and possibly switching context.

As a notable exception to the previous principle however, every action which ends up suspending the current thread begets an implicit call to the rescheduling procedure on behalf of the blocking service.

Typically, self-suspension or sleeping on a synchronization object automatically leads to a call to the rescheduling procedure, therefore the caller does not need to explicitly issue xnsched\_run() after such operations.

The rescheduling procedure always leads to a null-effect if it is called on behalf of an interrupt service routine. Any outstanding scheduler lock held by the outgoing thread will be restored when the thread is scheduled back in.

Calling this procedure with no applicable context switch pending is harmless and simply leads to a null-effect.

# Returns

Non-zero is returned if a context switch actually happened, otherwise zero if the current thread was left running.

## Tags

### unrestricted

References xnsched::lflags, and xnsched::status.

Referenced by rtdm\_event\_signal(), rtdm\_mutex\_unlock(), rtdm\_sem\_up(), sched\_yield(), xnregistry\_enter(), xnselect\_bind(), xnselect\_destroy(), xnthread\_cancel(), xnthread\_migrate(), xnthread\_start(), and xnthread\_suspend().

# 6.41 Synchronous I/O multiplexing

This module implements the services needed for implementing the POSIX select() service, or any other event multiplexing services.

Collaboration diagram for Synchronous I/O multiplexing:



### **Functions**

void xnselect\_init (struct xnselect \*select\_block)

Initialize a struct xnselect structure.

• static int xnselect signal (struct xnselect \*select block, unsigned int state)

Signal a file descriptor state change.

void xnselect\_destroy (struct xnselect \*select\_block)

Destroy the xnselect structure associated with a file descriptor.

int xnselector init (struct xnselector \*selector)

Initialize a selector structure.

int xnselect (struct xnselector \*selector, fd\_set \*out\_fds[XNSELECT\_MAX\_TYPES], fd\_set \*in\_fds[XNSELECT\_MAX\_TYPES], int nfds, xnticks\_t timeout, xntmode\_t timeout\_mode)

Check the state of a number of file descriptors, wait for a state change if no descriptor is ready.

void xnselector destroy (struct xnselector \*selector)

Destroy a selector block.

int xnselect\_bind (struct xnselect \*select\_block, struct xnselect\_binding \*binding, struct xnselector \*selector, unsigned type, unsigned index, unsigned state)

Bind a file descriptor (represented by its xnselect structure) to a selector block.

## 6.41.1 Detailed Description

This module implements the services needed for implementing the POSIX select() service, or any other event multiplexing services. Following the implementation of the posix select service, this module defines three types of events:

- XNSELECT\_READ meaning that a file descriptor is ready for reading;
- XNSELECT\_WRITE meaning that a file descriptor is ready for writing;
- XNSELECT\_EXCEPT meaning that a file descriptor received an exceptional event.

It works by defining two structures:

- a struct xnselect structure, which should be added to every file descriptor for every event type (read, write, or except);
- a *struct xnselector* structure, the selection structure, passed by the thread calling the xnselect service, where this service does all its housekeeping.

## 6.41.2 Function Documentation

6.41.2.1 int xnselect ( struct xnselector \* selector, fd\_set \* out\_fds[XNSELECT\_MAX\_TYPES], fd\_set \* in\_fds[XNSELECT\_MAX\_TYPES], int nfds, xnticks\_t timeout, xntmode\_t timeout mode )

Check the state of a number of file descriptors, wait for a state change if no descriptor is ready.

### **Parameters**

selector	structure to check for pending events
out_fds	The set of descriptors with pending events if a strictly positive number is returned,
	or the set of descriptors not yet bound if -ECHRNG is returned;
in_fds	the set of descriptors which events should be checked
nfds	the highest-numbered descriptor in any of the in_fds sets, plus 1;
timeout	the timeout, whose meaning depends on timeout_mode, note that xnselect() pass
	timeout and timeout_mode unchanged to xnsynch_sleep_on, so passing a relative
	value different from XN_INFINITE as a timeout with timeout_mode set to XN_REL-
	ATIVE, will cause a longer sleep than expected if the sleep is interrupted.
timeout_mode	the mode of timeout.

## Return values

-EINVAL	if <i>nfds</i> is negative;
-ECHRNG	if some of the descriptors passed in <i>in_fds</i> have not yet been registered
	with xnselect_bind(), out_fds contains the set of such descriptors;
-EINTR	if xnselect was interrupted while waiting;
0	in case of timeout.
the	number of file descriptors having received an event.

# Tags

# primary-only, might-switch

References XNBREAK, xnsynch\_sleep\_on(), and XNTIMEO.

6.41.2.2 int xnselect\_bind ( struct xnselect \* select\_block, struct xnselect\_binding \* binding, struct xnselector \* selector, unsigned type, unsigned index, unsigned state )

Bind a file descriptor (represented by its *xnselect* structure) to a selector block.

## **Parameters**

select_block	pointer to the struct xnselect to be bound;
binding	pointer to a newly allocated (using xnmalloc) struct xnselect_binding;
selector	pointer to the selector structure;
type	type of events (XNSELECT_READ, XNSELECT_WRITE, or XNSELECT_EXCEP-
	( <i>T</i> );
index	index of the file descriptor (represented by select_block) in the bit fields used by the
	selector structure;
state	current state of the file descriptor.

select\_block must have been initialized with xnselect\_init(), the xnselector structure must have been initialized with xnselector\_init(), binding may be uninitialized.

This service must be called with nklock locked, irqs off. For this reason, the *binding* parameter must have been allocated by the caller outside the locking section.

### Return values

-EINVAL	if type or index is invalid;
0	otherwise.

## Tags

task-unrestricted, might-switch, atomic-entry

References xnsched run().

Referenced by rtdm\_event\_select(), and rtdm\_sem\_select().

6.41.2.3 void xnselect\_destroy ( struct xnselect \* select\_block )

Destroy the *xnselect* structure associated with a file descriptor.

Any binding with a xnselector block is destroyed.

**Parameters** 

select_block	pointer to the <i>xnselect</i> structure associated with a file descriptor
--------------	--

## Tags

task-unrestricted, might-switch

References xnsched run().

Referenced by rtdm\_event\_destroy(), and rtdm\_sem\_destroy().

6.41.2.4 void xnselect init ( struct xnselect \* select block )

Initialize a struct xnselect structure.

This service must be called to initialize a *struct xnselect* structure before it is bound to a selector by the means of xnselect\_bind().

**Parameters** 

select_block	pointer to the xnselect structure to be initialized

## Tags

## task-unrestricted

Referenced by rtdm\_event\_init(), and rtdm\_sem\_init().

6.41.2.5 static int xnselect\_signal ( struct **xnselect** \* select\_block, unsigned int state ) [inline], [static]

Signal a file descriptor state change.

select_block	pointer to an <i>xnselect</i> structure representing the file descriptor whose state changed;
state	new value of the state.

## Return values

1	if rescheduling is needed;
0	otherwise.

Referenced by rtdm\_event\_clear(), rtdm\_event\_signal(), rtdm\_event\_timedwait(), rtdm\_sem\_timeddown(), and rtdm\_sem\_up().

6.41.2.6 void xnselector\_destroy ( struct xnselector \* selector )

Destroy a selector block.

All bindings with file descriptor are destroyed.

**Parameters** 

selector	the selector block to be destroyed
00.00.0	the colocial block to be decirely ed

## Tags

### task-unrestricted

6.41.2.7 int xnselector\_init ( struct xnselector \* selector )

Initialize a selector structure.

Parameters

selector	The selector structure to be initialized.
Return values	
neturii values	
	0

# Tags

# task-unrestricted

References xnsynch\_init().

# 6.42 Thread synchronization services

Collaboration diagram for Thread synchronization services:



## **Functions**

- void xnsynch\_init (struct xnsynch \*synch, int flags, atomic\_t \*fastlock)
   Initialize a synchronization object.
- int xnsynch\_sleep\_on (struct xnsynch \*synch, xnticks\_t timeout, xntmode\_t timeout\_mode)

  Sleep on an ownerless synchronization object.
- struct xnthread \* xnsynch\_wakeup\_one\_sleeper (struct xnsynch \*synch)

  Unblock the heading thread from wait.
- void xnsynch\_wakeup\_this\_sleeper (struct xnsynch \*synch, struct xnthread \*sleeper)

  Unblock a particular thread from wait.
- int xnsynch\_acquire (struct xnsynch \*synch, xnticks\_t timeout, xntmode\_t timeout\_mode)

  Acquire the ownership of a synchronization object.
- struct xnthread \* xnsynch\_release (struct xnsynch \*synch, struct xnthread \*thread)

  Give the resource ownership to the next waiting thread.
- struct xnthread \* xnsynch\_peek\_pendq (struct xnsynch \*synch)

Access the thread leading a synch object wait queue.

int xnsynch\_flush (struct xnsynch \*synch, int reason)
 Unblock all waiters pending on a resource.

# 6.42.1 Detailed Description

## 6.42.2 Function Documentation

6.42.2.1 int xnsynch acquire ( struct xnsynch \* synch, xnticks t timeout, xntmode t timeout mode )

Acquire the ownership of a synchronization object.

This service should be called by upper interfaces wanting the current thread to acquire the ownership of the given resource. If the resource is already assigned to another thread, the caller is suspended.

This service must be used only with synchronization objects that track ownership (XNSYNCH\_OWNER set.

208 Module Documentation

synch	The descriptor address of the synchronization object to acquire.
timeout	The timeout which may be used to limit the time the thread pends on the resource.
	This value is a wait time given as a count of nanoseconds. It can either be relative,
	absolute monotonic, or absolute adjustable depending on timeout_mode. Passing
	XN_INFINITE and setting mode to XN_RELATIVE specifies an unbounded wait. All
	other values are used to initialize a watchdog timer.
timeout_mode	The mode of the timeout parameter. It can either be set to XN_RELATIVE, XN_AB-
_	SOLUTE, or XN_REALTIME (see also xntimer_start()).

### Returns

A bitmask which may include zero or one information bit among XNRMID, XNTIMEO and XNBR-EAK, which should be tested by the caller, for detecting respectively: object deletion, timeout or signal/unblock conditions which might have happened while waiting.

### Tags

primary-only, might-switch

References XNBOOST, XNBREAK, XNPEND, XNRMID, XNROBBED, xnthread\_current(), xnthread\_suspend(), XNTIMEO, XNWAKEN, and XNWEAK.

Referenced by rtdm\_mutex\_timedlock().

6.42.2.2 int xnsynch\_flush ( struct xnsynch \* synch, int reason )

Unblock all waiters pending on a resource.

This service atomically releases all threads which currently sleep on a given resource.

This service should be called by upper interfaces under circumstances requiring that the pending queue of a given resource is cleared, such as before the resource is deleted.

## **Parameters**

synch	The descriptor address of the synchronization object to be flushed.	
reason	Some flags to set in the information mask of every unblocked thread.	Zero is an
	acceptable value. The following bits are pre-defined by the nucleus:	

- XNRMID should be set to indicate that the synchronization object is about to be destroyed (see xnthread resume()).
- XNBREAK should be set to indicate that the wait has been forcibly interrupted (see xnthread\_-unblock()).

## Returns

XNSYNCH\_RESCHED is returned if at least one thread is unblocked, which means the caller should invoke xnsched\_run() for applying the new scheduling state. Otherwise, XNSYNCH\_DON-E is returned.

### Side effects

- The effective priority of the previous resource owner might be lowered to its base priority value as a consequence of the priority inheritance boost being cleared.
- The synchronization object is no more owned by any thread.

Tags

### unrestricted

References XNPEND, and xnthread resume().

Referenced by rtdm\_event\_signal().

6.42.2.3 void xnsynch init ( struct xnsynch \* synch, int flags, atomic t \* fastlock )

Initialize a synchronization object.

Initializes a synchronization object. Xenomai threads can wait on and signal such objects for serializing access to resources. This object has built-in support for priority inheritance.

### **Parameters**

synch	The address of a synchronization object descriptor the nucleus will use to store the object-specific data. This descriptor must always be valid while the object is active therefore it must be allocated in permanent memory.
flags	A set of creation flags affecting the operation. The valid flags are:

- XNSYNCH\_PRIO causes the threads waiting for the resource to pend in priority order. Otherwise, FIFO ordering is used (XNSYNCH\_FIFO).
- XNSYNCH\_OWNER indicates that the synchronization object shall track the resource ownership, allowing a single owner at most at any point in time. Note that setting this flag implies the use of xnsynch\_acquire() and xnsynch\_release() instead of xnsynch\_sleep\_on() and xnsynch\_wakeup\_-\*().
- XNSYNCH\_PIP enables priority inheritance when a priority inversion is detected among threads using this object. XNSYNCH\_PIP enables XNSYNCH\_OWNER and XNSYNCH\_PRIO implicitly.
- XNSYNCH\_DREORD (Disable REORDering) tells the nucleus that the wait queue should not be
  reordered whenever the priority of a blocked thread it holds is changed. If this flag is not specified,
  changing the priority of a blocked thread using xnthread\_set\_schedparam() will cause this object's
  wait queue to be reordered according to the new priority level, provided the synchronization object
  makes the waiters wait by priority order on the awaited resource (XNSYNCH\_PRIO).

# Parameters

fastlock	Address of the fast lock word to be associated with a synchronization object with
	ownership tracking. Therefore, a valid fast-lock address is required if XNSYNCH
	OWNER is set in flags.

Tags

### task-unrestricted

Referenced by rtdm\_event\_init(), rtdm\_mutex\_init(), rtdm\_sem\_init(), and xnselector\_init().

6.42.2.4 struct xnthread \* xnsynch\_peek\_pendq ( struct xnsynch \* synch )

Access the thread leading a synch object wait queue.

This services returns the descriptor address of to the thread leading a synchronization object wait queue.

### **Parameters**

a a b	The descriptor address of the target synchronization object.	
SVNCN	The describior address of the larger synchronization object.	

### Returns

The descriptor address of the unblocked thread.

## Tags

### unrestricted

6.42.2.5 struct xnthread \* xnsynch\_release ( struct xnsynch \* synch, struct xnthread \* thread )

Give the resource ownership to the next waiting thread.

This service releases the ownership of the given synchronization object. The thread which is currently leading the object's pending list, if any, is unblocked from its pending state. However, no reschedule is performed.

This service must be used only with synchronization objects that track ownership (XNSYNCH\_OWNER set).

### **Parameters**

synch	The descriptor address of the synchronization object whose ownership is changed.
thread	The descriptor address of the current owner.

### Returns

The descriptor address of the unblocked thread.

### Side effects

- The effective priority of the previous resource owner might be lowered to its base priority value as a consequence of the priority inheritance boost being cleared.
- The synchronization object ownership is transfered to the unblocked thread.

# Tags

primary-only, might-switch

References XNWEAK.

Referenced by rtdm\_mutex\_unlock().

6.42.2.6 int xnsynch\_sleep\_on ( struct xnsynch \* synch, xnticks\_t timeout, xntmode\_t timeout\_mode )

Sleep on an ownerless synchronization object.

Makes the calling thread sleep on the specified synchronization object, waiting for it to be signaled.

This service should be called by upper interfaces wanting the current thread to pend on the given resource. It must not be used with synchronization objects that are supposed to track ownership (XNSY-NCH\_OWNER).

#### **Parameters**

synch	The descriptor address of the synchronization object to sleep on.	
timeout	The timeout which may be used to limit the time the thread pends on the resource.	
	This value is a wait time given as a count of nanoseconds. It can either be relative,	
	absolute monotonic, or absolute adjustable depending on timeout_mode. Passing	
	XN_INFINITE and setting mode to XN_RELATIVE specifies an unbounded wait. All	
	other values are used to initialize a watchdog timer.	
timeout_mode	The mode of the timeout parameter. It can either be set to XN_RELATIVE, XN_AB-	
	SOLUTE, or XN_REALTIME (see also xntimer_start()).	

### Returns

A bitmask which may include zero or one information bit among XNRMID, XNTIMEO and XNBR-EAK, which should be tested by the caller, for detecting respectively: object deletion, timeout or signal/unblock conditions which might have happened while waiting.

## Tags

## primary-only, might-switch

References XNBREAK, XNPEND, XNRMID, xnthread\_current(), xnthread\_suspend(), and XNTIMEO.

Referenced by rtdm\_event\_timedwait(), rtdm\_sem\_timeddown(), xnregistry\_bind(), xnselect(), and xnthread join().

6.42.2.7 struct xnthread \* xnsynch\_wakeup\_one\_sleeper ( struct xnsynch \* synch )

Unblock the heading thread from wait.

This service wakes up the thread which is currently leading the synchronization object's pending list. The sleeping thread is unblocked from its pending state, but no reschedule is performed.

This service should be called by upper interfaces wanting to signal the given resource so that a single waiter is resumed. It must not be used with synchronization objects that are supposed to track ownership (XNSYNCH\_OWNER not set).

## Parameters

	The descriptor address of the synchronization object whose ownership is changed.
aunah	Liba deceriptor address at the eupobropization object whose augorobin is changed

# Returns

The descriptor address of the unblocked thread.

## Tags

### unrestricted

References XNPEND, and xnthread\_resume().

Referenced by rtdm\_sem\_up().

6.42.2.8 void xnsynch\_wakeup\_this\_sleeper ( struct xnsynch \* synch, struct xnthread \* sleeper )

Unblock a particular thread from wait.

This service wakes up a specific thread which is currently pending on the given synchronization object. The sleeping thread is unblocked from its pending state, but no reschedule is performed.

This service should be called by upper interfaces wanting to signal the given resource so that a specific waiter is resumed. It must not be used with synchronization objects that are supposed to track ownership (XNSYNCH OWNER not set).

Module Documentation

# Parameters

212

synch	The descriptor address of the synchronization object whose ownership is changed.	
sleeper	The thread to unblock which MUST be currently linked to the synchronization ob-	
	ject's pending queue (i.e. synch->pendq).	

# Tags


# unrestricted

References XNPEND, and xnthread\_resume().

6.43 Thread services 213

# 6.43 Thread services

Collaboration diagram for Thread services:



### Modules

Thread state flags

Bits reporting permanent or transient states of threads.

Thread information flags

Bits reporting events notified to threads.

### **Functions**

static struct xnthread \* xnthread\_current (void)

Retrieve the current Cobalt core TCB.

static struct xnthread \* xnthread\_from\_task (struct task\_struct \*p)

Retrieve the Cobalt core TCB attached to a Linux task.

static void xnthread\_test\_cancel (void)

Introduce a thread cancellation point.

int xnthread\_init (struct xnthread \*thread, const struct xnthread\_init\_attr \*attr, struct xnsched\_class \*sched\_class, const union xnsched\_policy\_param \*sched\_param)

Initialize a new thread.

int xnthread\_start (struct xnthread \*thread, const struct xnthread\_start\_attr \*attr)

Start a newly created thread.

• int xnthread set mode (struct xnthread \*thread, int clrmask, int setmask)

Change thread control mode.

void xnthread\_suspend (struct xnthread \*thread, int mask, xnticks\_t timeout, xntmode\_t timeout\_-mode, struct xnsynch \*wchan)

Suspend a thread.

• void xnthread\_resume (struct xnthread \*thread, int mask)

Resume a thread.

• int xnthread\_unblock (struct xnthread \*thread)

Unblock a thread.

int xnthread\_set\_periodic (struct xnthread \*thread, xnticks\_t idate, xntmode\_t timeout\_mode, xnticks\_t period)

Make a thread periodic.

int xnthread\_wait\_period (unsigned long \*overruns\_r)

Wait for the next periodic release point.

int xnthread\_set\_slice (struct xnthread \*thread, xnticks\_t quantum)

Set thread time-slicing information.

void xnthread\_cancel (struct xnthread \*thread)

Cancel a thread.

• int xnthread join (struct xnthread \*thread, bool uninterruptible)

Join with a terminated thread.

int xnthread harden (void)

Migrate a Linux task to the Xenomai domain.

void xnthread relax (int notify, int reason)

Switch a shadow thread back to the Linux domain.

int xnthread\_map (struct xnthread \*thread, struct completion \*done)

Create a shadow thread context over a kernel task.

• int xnthread migrate (int cpu)

Migrate the current thread.

• int xnthread\_set\_schedparam (struct xnthread \*thread, struct xnsched\_class \*sched\_class, const union xnsched\_policy\_param \*sched\_param)

Change the base scheduling parameters of a thread.

## 6.43.1 Detailed Description

## 6.43.2 Function Documentation

6.43.2.1 void xnthread\_cancel ( struct xnthread \* thread )

### Cancel a thread.

Request cancellation of a thread. This service forces *thread* to exit from any blocking call. *thread* will terminate as soon as it reaches a cancellation point. Cancellation points are defined for the following situations:

- thread self-cancels by a call to xnthread\_cancel().
- thread invokes a Linux syscall (user-space shadow only).
- thread receives a Linux signal (user-space shadow only).
- thread explicitly calls xnthread\_test\_cancel().

# Parameters

thread	The descriptor address of the thread to terminate.

# Tags

task-unrestricted, might-switch

References XNCANCELD, XNDORMANT, XNKICKED, xnsched\_run(), xnthread\_current(), xnthread\_resume(), and xnthread\_test\_cancel().

Referenced by rtdm\_task\_init().

6.43.2.2 struct xnthread \* xnthread\_current(void) [static]

Retrieve the current Cobalt core TCB.

Returns the address of the current Cobalt core thread descriptor, or NULL if running over a regular Linux task. This call is not affected by the current runtime mode of the core thread.

6.43 Thread services 215

Note

The returned value may differ from xnsched\_current\_thread() called from the same context, since the latter returns the root thread descriptor for the current CPU if the caller is running in secondary mode.

Tags

### unrestricted

Referenced by rtdm\_event\_timedwait(), rtdm\_mutex\_timedlock(), rtdm\_sem\_timeddown(), xnsynch\_acquire(), xnsynch\_sleep\_on(), xnthread\_cancel(), xnthread\_harden(), xnthread\_join(), xnthread\_map(), xnthread\_migrate(), xnthread\_relax(), xnthread\_test\_cancel(), and xnthread\_wait\_period().

```
6.43.2.3 struct xnthread * xnthread_from_task ( struct task_struct * p ) [static]
```

Retrieve the Cobalt core TCB attached to a Linux task.

Returns the address of the Cobalt core thread descriptor attached to the Linux task p, or NULL if p is a regular Linux task. This call is not affected by the current runtime mode of the core thread.

Tags

### unrestricted

```
6.43.2.4 int xnthread_harden (void)
```

Migrate a Linux task to the Xenomai domain.

This service causes the transition of "current" from the Linux domain to Xenomai. The shadow will resume in the Xenomai domain as returning from schedule().

Tags

```
secondary-only, might-switch
```

References XNDEBUG, XNRELAX, xnthread\_current(), xnthread\_relax(), and xnthread\_test\_cancel(). Referenced by xnthread\_map().

```
6.43.2.5 int xnthread_init ( struct xnthread * thread, const struct xnthread_init_attr * attr, struct xnsched_class * sched_class, const union xnsched_policy_param * sched_param )
```

Initialize a new thread.

Initializes a new thread. The thread is left dormant until it is actually started by xnthread\_start().

### **Parameters**

thread	The address of a thread descriptor the nucleus will use to store the thread-specific
	data. This descriptor must always be valid while the thread is active therefore it must
	be allocated in permanent memory.

## Warning

Some architectures may require the descriptor to be properly aligned in memory; this is an additional reason for descriptors not to be laid in the program stack where alignement constraints might not always be satisfied.

### **Parameters**

attr	A pointer to an attribute block describing the initial properties of the new thread.
	Members of this structure are defined as follows:

- name: An ASCII string standing for the symbolic name of the thread. This name is copied to a
  safe place into the thread descriptor. This name might be used in various situations by the nucleus
  for issuing human-readable diagnostic messages, so it is usually a good idea to provide a sensible
  value here. NULL is fine though and means "anonymous".
- flags: A set of creation flags affecting the operation. The following flags can be part of this bitmask, each of them affecting the nucleus behaviour regarding the created thread:
  - XNSUSP creates the thread in a suspended state. In such a case, the thread shall be explicitly resumed using the xnthread\_resume() service for its execution to actually begin, additionally to issuing xnthread\_start() for it. This flag can also be specified when invoking xnthread\_start() as a starting mode.
- XNUSER shall be set if *thread* will be mapped over an existing user-space task. Otherwise, a new kernel host task is created, then paired with the new Xenomai thread.
- XNFPU (enable FPU) tells the nucleus that the new thread may use the floating-point unit. XNFPU is implicitly assumed for user-space threads even if not set in *flags*.
- affinity: The processor affinity of this thread. Passing CPU\_MASK\_ALL means "any cpu" from the allowed core affinity mask (nkaffinity). Passing an empty set is invalid.

### **Parameters**

	sched_class	The initial scheduling class the new thread should be assigned to.
S	sched_param	The initial scheduling parameters to set for the new thread; sched_param must be
		valid within the context of <i>sched_class</i> .

## Returns

0 is returned on success. Otherwise, the following error code indicates the cause of the failure:

• -EINVAL is returned if attr->flags has invalid bits set, or attr->affinity is invalid (e.g. empty).

## Tags

### secondary-only

References XNFPU, XNSUSP, and XNUSER.

Referenced by rtdm task init().

6.43.2.6 int xnthread\_join ( struct xnthread \* thread, bool uninterruptible )

Join with a terminated thread.

This service waits for *thread* to terminate after a call to xnthread\_cancel(). If that thread has already terminated or is dormant at the time of the call, then xnthread\_join() returns immediately.

xnthread\_join() adapts to the calling context (primary or secondary).

6.43 Thread services 217

## **Parameters**

thread	The descriptor address of the thread to join with.	
uninterruptible	Boolean telling whether the service should wait for completion uninterruptible if	
	called from secondary mode.	

### Returns

0 is returned on success. Otherwise, the following error codes indicate the cause of the failure:

- -EDEADLK is returned if the current thread attempts to join itself.
- -EINTR is returned if the current thread was unblocked while waiting for thread to terminate.
- -EBUSY indicates that another thread is already waiting for thread to terminate.

## Tags

## task-unrestricted, might-switch

References XNBREAK, XNDORMANT, XNJOINED, XNRMID, xnsynch\_sleep\_on(), and xnthread\_current().

Referenced by rtdm task join().

6.43.2.7 int xnthread map ( struct xnthread \* thread, struct completion \* done )

Create a shadow thread context over a kernel task.

This call maps a nucleus thread to the "current" Linux task running in kernel space. The priority and scheduling class of the underlying Linux task are not affected; it is assumed that the caller did set them appropriately before issuing the shadow mapping request.

This call immediately moves the calling kernel thread to the Xenomai domain.

# Parameters

thread	ad The descriptor address of the new shadow thread to be mapped to "current". This	
	descriptor must have been previously initialized by a call to xnthread_init().	
done	A completion object to be signaled when thread is fully mapped over the current	
	Linux context, waiting for xnthread_start().	

### Returns

0 is returned on success. Otherwise:

- -ERESTARTSYS is returned if the current Linux task has received a signal, thus preventing the final migration to the Xenomai domain (i.e. in order to process the signal in the Linux domain). This error should not be considered as fatal.
- -EPERM is returned if the shadow thread has been killed before the current task had a chance to return to the caller. In such a case, the real-time mapping operation has failed globally, and no Xenomai resource remains attached to it.
- -EINVAL is returned if the thread control block bears the XNUSER bit.
- -EBUSY is returned if either the current Linux task or the associated shadow thread is already involved in a shadow mapping.

## Tags

## secondary-only, might-switch

References XNDORMANT, XNMAPPED, XNRELAX, xnthread\_current(), xnthread\_harden(), xnthread\_resume(), xnthread\_suspend(), xnthread\_test\_cancel(), and XNUSER.

6.43.2.8 int xnthread\_migrate (int cpu)

Migrate the current thread.

This call makes the current thread migrate to another (real-time) CPU if its affinity allows it. This call is available from primary mode only.

### **Parameters**

сри	The destination CPU.

### Return values

0	if the thread could migrate ;
-EPERM	if the calling context is invalid, or the scheduler is locked.
-EINVAL	if the current thread affinity forbids this migration.

## Tags

## primary-only, might-switch

References \_\_xntimer\_migrate(), XNMOVED, xnsched\_run(), and xnthread\_current().

6.43.2.9 void xnthread relax (int notify, int reason)

Switch a shadow thread back to the Linux domain.

This service yields the control of the running shadow back to Linux. This is obtained by suspending the shadow and scheduling a wake up call for the mated user task inside the Linux domain. The Linux task will resume on return from xnthread suspend() on behalf of the root thread.

### **Parameters**

notify	A boolean flag indicating whether threads monitored from secondary mode switches
	should be sent a SIGDEBUG signal. For instance, some internal operations like task
	exit should not trigger such signal.
reason	The reason to report along with the SIGDEBUG signal.

## Tags

primary-only, might-switch

# Note

"current" is valid here since the shadow runs with the properties of the Linux task.

References splmax, splnone, XNMOVED, XNRELAX, xnthread\_current(), xnthread\_suspend(), XNUS-ER, and XNWARN.

Referenced by xnthread\_harden().

6.43.2.10 void xnthread\_resume ( struct xnthread \* thread, int mask )

## Resume a thread.

Resumes the execution of a thread previously suspended by one or more calls to xnthread\_suspend(). This call removes a suspensive condition affecting the target thread. When all suspensive conditions are gone, the thread is left in a READY state at which point it becomes eligible anew for scheduling.

6.43 Thread services 219

#### **Parameters**

thread	The descriptor address of the resumed thread.
mask	The suspension mask specifying the suspensive condition to remove from the
	thread's wait mask. Possible values usable by the caller are:

- XNSUSP. This flag removes the explicit suspension condition. This condition might be additive to the XNPEND condition.
- XNDELAY. This flag removes the counted delay wait condition.
- XNPEND. This flag removes the resource wait condition. If a watchdog is armed, it is automatically
  disarmed by this call. Unlike the two previous conditions, only the current thread can set this
  condition for itself, i.e. no thread can force another one to pend on a resource.

When the thread is eventually resumed by one or more calls to xnthread\_resume(), the caller of xnthread\_suspend() in the awakened thread that suspended itself should check for the following bits in its own information mask to determine what caused its wake up:

- XNRMID means that the caller must assume that the pended synchronization object has been destroyed (see xnsynch\_flush()).
- XNTIMEO means that the delay elapsed, or the watchdog went off before the corresponding synchronization object was signaled.
- XNBREAK means that the wait has been forcibly broken by a call to xnthread\_unblock().

### Tags

### unrestricted, might-switch

References XNDELAY, XNHELD, XNPEND, XNREADY, and xntimer\_stop().

Referenced by sched\_yield(), xnsynch\_flush(), xnsynch\_wakeup\_one\_sleeper(), xnsynch\_wakeup\_this\_sleeper(), xnthread\_cancel(), xnthread\_map(), xnthread\_start(), and xnthread\_unblock().

6.43.2.11 int xnthread set mode ( struct xnthread \* thread, int clrmask, int setmask )

Change thread control mode.

Change the control mode of a given thread. The control mode affects the behaviour of the nucleus regarding the specified thread.

### **Parameters**

thread	The descriptor address of the affected thread.
clrmask	Clears the corresponding bits from the control field before setmask is applied. The
	scheduler lock held by the current thread can be forcibly released by passing the
	XNLOCK bit in this mask. In this case, the lock nesting count is also reset to zero.
setmask	The new thread mode. The following flags may be set in this bitmask:

- XNLOCK makes thread non-preemptible by other threads when running on a CPU. A non-preemptible thread may still block, in which case, the lock is reasserted when the thread is scheduled back in. If thread is current, the scheduler is immediately locked, otherwise such lock will take effect next time thread resumes on a CPU.
- XNWARN is a debugging aid, causing the thread to receive a SIGDEBUG signal when the following atypical or abnormal behavior is detected:
- thread switches to secondary mode (usable for detecting spurious relaxes).

• thread is about to sleep on a Cobalt mutex currently owned by a thread running in secondary mode, which reveals a priority inversion case.

- thread has both XNTRAPLB and XNLOCK set, and attempts to block on a Cobalt service, causing a lock break.
- XNTRAPLB disallows breaking the scheduler lock. In the default case, a thread which holds the
  scheduler lock is allowed to drop it temporarily for sleeping. If this mode bit is set, such thread
  would return immediately with XNBREAK set from xnthread\_suspend(). If XNWARN is set for
  thread, SIGDEBUG is sent in addition to raising the break condition.

# Tags

task-unrestricted, might-switch

### Note

Setting *clrmask* and *setmask* to zero leads to a nop, only returning the previous mode if *mode\_r* is a valid address.

### References XNLOCK.

6.43.2.12 int xnthread\_set\_periodic ( struct xnthread \* thread, xnticks\_t idate, xntmode\_t timeout mode, xnticks t period )

# Make a thread periodic.

Make a thread periodic by programming its first release point and its period in the processor time line. Subsequent calls to xnthread\_wait\_period() will delay the thread until the next periodic release point in the processor timeline is reached.

### **Parameters**

thread	The core thread to make periodic.
idate	The initial (absolute) date of the first release point, expressed in nanoseconds. The affected thread will be delayed by the first call to xnthread_wait_period() until this point is reached. If <i>idate</i> is equal to XN_INFINITE, the current system date is used, and no initial delay takes place. In the latter case, <i>timeout_mode</i> is not considered and can have any valid value.
timeout_mode	The mode of the <i>idate</i> parameter. It can either be set to XN_ABSOLUTE or XN_R-EALTIME with <i>idate</i> different from XN_INFINITE (see also xntimer_start()).
period	The period of the thread, expressed in nanoseconds. As a side-effect, passing XN_INFINITE attempts to stop the thread's periodic timer; in the latter case, the routine always exits succesfully, regardless of the previous state of this timer.

### Returns

0 is returned upon success. Otherwise:

- -ETIMEDOUT is returned idate is different from XN INFINITE and represents a date in the past.
- -EINVAL is returned if period is different from XN\_INFINITE but shorter than the scheduling latency value for the target system, as available from /proc/xenomai/latency. -EINVAL is also returned if timeout\_mode is not compatible with idate, such as XN\_RELATIVE with idate different from XN\_I-NFINITE.

### Tags

### task-unrestricted

References xntimer\_start(), and xntimer\_stop().

Referenced by rtdm\_task\_init().

6.43 Thread services 221

6.43.2.13 int xnthread\_set\_schedparam ( struct xnthread \* thread, struct xnsched\_class \* sched class, const union xnsched policy param \* sched param )

Change the base scheduling parameters of a thread.

Changes the base scheduling policy and paramaters of a thread. If the thread is currently blocked, waiting in priority-pending mode (XNSYNCH\_PRIO) for a synchronization object to be signaled, the nucleus will attempt to reorder the object's wait queue so that it reflects the new sleeper's priority, unless the XNSYNCH\_DREORD flag has been set for the pended object.

### **Parameters**

thread	The descriptor address of the affected thread. See note.
sched_class	The new scheduling class the thread should be assigned to.
sched_param	The scheduling parameters to set for the thread; sched_param must be valid within
	the context of sched_class.

It is absolutely required to use this service to change a thread priority, in order to have all the needed housekeeping chores correctly performed. i.e. Do *not* call xnsched\_set\_policy() directly or worse, change the thread.cprio field by hand in any case.

### Returns

0 is returned on success. Otherwise, a negative error code indicates the cause of a failure that happened in the scheduling class implementation for *sched\_class*. Invalid parameters passed into *sched\_param* are common causes of error.

### Side effects

- This service does not call the rescheduling procedure but may affect the state of the runnable queue for the previous and new scheduling classes.
- Assigning the same scheduling class and parameters to a running or ready thread moves it to the end of the runnable queue, thus causing a manual round-robin.

### Tags

# task-unregistred

### Note

The changes only apply to the Xenomai scheduling parameters for *thread*. There is no propagation/translation of such changes to the Linux scheduler for the task mated to the Xenomai target thread.

6.43.2.14 int xnthread\_set\_slice ( struct xnthread \* thread, xnticks\_t quantum )

Set thread time-slicing information.

Update the time-slicing information for a given thread. This service enables or disables round-robin scheduling for the thread, depending on the value of *quantum*. By default, times-slicing is disabled for a new thread initialized by a call to xnthread init().

#### **Parameters**

thread	The descriptor address of the affected thread.
quantum	The time quantum assigned to the thread expressed in nanoseconds. If quantum
	is different from XN_INFINITE, the time-slice for the thread is set to that value and
	its current time credit is refilled (i.e. the thread is given a full time-slice to run next).
	Otherwise, if <i>quantum</i> equals XN_INFINITE, time-slicing is stopped for that thread.

### Returns

0 is returned upon success. Otherwise, -EINVAL is returned if quantum is not XN\_INFINITE and:

- the base scheduling class of the target thread does not support time-slicing,
- quantum is smaller than the master clock gravity for a user thread, which denotes a spurious value.

### Tags

### task-unrestricted

References xnsched::curr, xnsched::rrbtimer, XNRRB, xntimer\_start(), and xntimer\_stop().

6.43.2.15 int xnthread start ( struct xnthread \* thread, const struct xnthread start attr \* attr )

Start a newly created thread.

Starts a (newly) created thread, scheduling it for the first time. This call releases the target thread from the XNDORMANT state. This service also sets the initial mode for the new thread.

### **Parameters**

thread	The descriptor address of the started thread which must have been previously initialized by a call to xnthread_init().
attr	A pointer to an attribute block describing the execution properties of the new thread. Members of this structure are defined as follows:

- mode: The initial thread mode. The following flags can be part of this bitmask, each of them affecting the nucleus behaviour regarding the started thread:
  - XNLOCK causes the thread to lock the scheduler when it starts. The target thread will have to call the xnsched\_unlock() service to unlock the scheduler. A non-preemptible thread may still block, in which case, the lock is reasserted when the thread is scheduled back in.
  - XNSUSP makes the thread start in a suspended state. In such a case, the thread will have to be explicitly resumed using the xnthread\_resume() service for its execution to actually begin.
- entry: The address of the thread's body routine. In other words, it is the thread entry point.
- cookie: A user-defined opaque cookie the nucleus will pass to the emerging thread as the sole argument of its entry point.

# Return values

0	if thread could be started;
-EBUSY	if thread was not dormant or stopped;

### Tags

# task-unrestricted, might-switch

References XNDORMANT, xnsched\_run(), XNSUSP, and xnthread\_resume(). Referenced by rtdm\_task\_init().

6.43 Thread services 223

6.43.2.16 void xnthread\_suspend ( struct xnthread \* thread, int mask, xnticks\_t timeout, xntmode\_t timeout mode, struct xnsynch \* wchan )

### Suspend a thread.

Suspends the execution of a thread according to a given suspensive condition. This thread will not be eligible for scheduling until it all the pending suspensive conditions set by this service are removed by one or more calls to xnthread\_resume().

### **Parameters**

thread	The descriptor address of the suspended thread.
mask	The suspension mask specifying the suspensive condition to add to the thread's
	wait mask. Possible values usable by the caller are:

- XNSUSP. This flag forcibly suspends a thread, regardless of any resource to wait for. A reverse call
  to xnthread\_resume() specifying the XNSUSP bit must be issued to remove this condition, which is
  cumulative with other suspension bits.wchan should be NULL when using this suspending mode.
- XNDELAY. This flags denotes a counted delay wait (in ticks) which duration is defined by the value of the timeout parameter.
- XNPEND. This flag denotes a wait for a synchronization object to be signaled. The wchan argument must points to this object. A timeout value can be passed to bound the wait. This suspending mode should not be used directly by the client interface, but rather through the xnsynch\_sleep\_on() call.

### **Parameters**

timeout	The timeout which may be used to limit the time the thread pends on a resource.
	This value is a wait time given in nanoseconds. It can either be relative, absolute
	monotonic, or absolute adjustable depending on timeout_mode.

Passing XN\_INFINITE **and** setting *timeout\_mode* to XN\_RELATIVE specifies an unbounded wait. All other values are used to initialize a watchdog timer. If the current operation mode of the system timer is oneshot and *timeout* elapses before xnthread\_suspend() has completed, then the target thread will not be suspended, and this routine leads to a null effect.

### Parameters

timeout_mode	The mode of the <i>timeout</i> parameter. It can either be set to XN_RELATIVE, XN_AB-
	SOLUTE, or XN_REALTIME (see also xntimer_start()).
wchan	The address of a pended resource. This parameter is used internally by the syn-
	chronization object implementation code to specify on which object the suspended
	thread pends. NULL is a legitimate value when this parameter does not apply to the
	current suspending mode (e.g. XNSUSP).

### Note

If the target thread has received a Linux-originated signal, then this service immediately exits without suspending the thread, but raises the XNBREAK condition in its information mask.

# Tags

### unrestricted, might-switch

References xnsched::curr, xnsched::lflags, splmax, XNBREAK, XNDELAY, XNHELD, XNKICKED, XNLBALERT, XNLOCK, XNREADY, XNRELAX, XNRMID, XNROBBED, xnsched\_run(), XNSUSP, XNTIME-O, xntimer\_start(), XNTRAPLB, XNUSER, XNWAKEN, and XNWARN.

Referenced by xnsynch\_acquire(), xnsynch\_sleep\_on(), xnthread\_map(), xnthread\_relax(), and xnthread\_wait\_period().

6.43.2.17 void xnthread\_test\_cancel (void ) [inline], [static]

Introduce a thread cancellation point.

Terminates the current thread if a cancellation request is pending for it, i.e. if xnthread\_cancel() was called.

Tags

#### mode-unrestricted

References XNCANCELD, and xnthread\_current().

Referenced by xnthread\_cancel(), xnthread\_harden(), and xnthread\_map().

6.43.2.18 int xnthread\_unblock ( struct xnthread \* thread )

Unblock a thread.

Breaks the thread out of any wait it is currently in. This call removes the XNDELAY and XNPEN-D suspensive conditions previously put by xnthread\_suspend() on the target thread. If all suspensive conditions are gone, the thread is left in a READY state at which point it becomes eligible anew for scheduling.

**Parameters** 

thread The descriptor address of the unblocked thread.

This call neither releases the thread from the XNSUSP, XNRELAX, XNDORMANT or XNHELD suspensive conditions.

When the thread resumes execution, the XNBREAK bit is set in the unblocked thread's information mask. Unblocking a non-blocked thread is perfectly harmless.

Returns

non-zero is returned if the thread was actually unblocked from a pending wait state, 0 otherwise.

Tags

unrestricted, might-switch

References XNBREAK, XNDELAY, XNPEND, and xnthread resume().

6.43.2.19 int xnthread wait period (unsigned long \* overruns r)

Wait for the next periodic release point.

Make the current thread wait for the next periodic release point in the processor time line.

Parameters

overruns_r	If non-NULL, overruns_r must be a pointer to a memory location which will be written
	with the count of pending overruns. This value is copied only when xnthread_wait
	period() returns -ETIMEDOUT or success; the memory location remains unmodified
	otherwise. If NULL, this count will never be copied back.

### Returns

0 is returned upon success; if *overruns\_r* is valid, zero is copied to the pointed memory location. Otherwise:

6.43 Thread services 225

• -EWOULDBLOCK is returned if xnthread\_set\_periodic() has not previously been called for the calling thread.

- -EINTR is returned if xnthread\_unblock() has been called for the waiting thread before the next periodic release point has been reached. In this case, the overrun counter is reset too.
- -ETIMEDOUT is returned if the timer has overrun, which indicates that one or more previous release points have been missed by the calling thread. If *overruns\_r* is valid, the count of pending overruns is copied to the pointed memory location.

Tags

primary-only, might-switch

References XNBREAK, XNDELAY, xnthread\_current(), xnthread\_suspend(), and xntimer\_get\_overruns().

# 6.44 Timer services

The Xenomai timer facility depends on a clock source (xnclock) for scheduling the next activation times. Collaboration diagram for Timer services:



# **Functions**

void xntimer\_destroy (struct xntimer \*timer)

Release a timer object.

static xnticks\_t xntimer\_interval (struct xntimer \*timer)

Return the timer interval value.

• int xntimer\_start (struct xntimer \*timer, xnticks\_t value, xnticks\_t interval, xntmode\_t mode)

Arm a timer.

xnticks\_t xntimer\_get\_date (struct xntimer \*timer)

Return the absolute expiration date.

xnticks\_t xntimer\_get\_timeout (struct xntimer \*timer)

Return the relative expiration date.

static void xntimer stop (struct xntimer \*timer)

Disarm a timer.

 void xntimer\_init (struct xntimer \*timer, struct xnclock \*clock, void(\*handler)(struct xntimer \*timer), struct xnsched \*sched, int flags)

Initialize a timer object.

void xntimer migrate (struct xntimer \*timer, struct xnsched \*sched)

Migrate a timer.

unsigned long long xntimer\_get\_overruns (struct xntimer \*timer, xnticks\_t now)

Get the count of overruns for the last tick.

static int program htick shot (unsigned long delay, struct clock event device \*cdev)

Program next host tick as a Xenomai timer event.

• static void switch\_htick\_mode (enum clock\_event\_mode mode, struct clock\_event\_device \*cdev)

Tick mode switch emulation callback.

int xntimer\_grab\_hardware (int cpu)

Grab the hardware timer.

• void xntimer\_release\_hardware (int cpu)

Release the hardware timer.

# 6.44.1 Detailed Description

The Xenomai timer facility depends on a clock source (xnclock) for scheduling the next activation times. The core provides and depends on a monotonic clock source (nkclock) with nanosecond resolution, driving the platform timer hardware exposed by the interrupt pipeline.

6.44 Timer services 227

# 6.44.2 Function Documentation

6.44.2.1 void \_\_xntimer\_migrate ( struct xntimer \* timer, struct xnsched \* sched )

Migrate a timer.

This call migrates a timer to another cpu. In order to avoid pathological cases, it must be called from the CPU to which *timer* is currently attached.

### **Parameters**

timer	The address of the timer object to be migrated.
sched	The address of the destination per-CPU scheduler slot.

### Tags

unrestricted, atomic-entry

References xntimer\_stop().

Referenced by xnthread migrate().

6.44.2.2 static int program\_htick\_shot ( unsigned long delay, struct clock\_event\_device \* cdev ) [static]

Program next host tick as a Xenomai timer event.

Program the next shot for the host tick on the current CPU. Emulation is done using a nucleus timer attached to the master timebase.

### **Parameters**

delay	The time delta from the current date to the next tick, expressed as a count of
	nanoseconds.
cdev	An pointer to the clock device which notifies us.

### Tags

### unrestricted

References xnsched::htimer, and xntimer start().

Referenced by xntimer\_grab\_hardware().

6.44.2.3 void switch\_htick\_mode ( enum clock\_event\_mode mode, struct clock\_event\_device \* cdev ) [static]

Tick mode switch emulation callback.

Changes the host tick mode for the tick device of the current CPU.

### **Parameters**

mode	The new mode to switch to. The possible values are:

- CLOCK\_EVT\_MODE\_ONESHOT, for a switch to oneshot mode.
- CLOCK\_EVT\_MODE\_PERIODIC, for a switch to periodic mode. The current implementation for the generic clockevent layer Linux exhibits should never downgrade from a oneshot to a periodic tick mode, so this mode should not be encountered. This said, the associated code is provided, basically for illustration purposes.

• CLOCK\_EVT\_MODE\_SHUTDOWN, indicates the removal of the current tick device. Normally, the nucleus only interposes on tick devices which should never be shut down, so this mode should not be encountered.

### **Parameters**

cdev An opaque pointer to the clock device which notifies us.

Tags

unrestricted

Note

GENERIC CLOCKEVENTS is required from the host kernel.

References xnsched::htimer, xntimer start(), and xntimer stop().

Referenced by xntimer\_grab\_hardware().

6.44.2.4 void xntimer\_destroy ( struct xntimer \* timer )

Release a timer object.

Destroys a timer. After it has been destroyed, all resources associated with the timer have been released. The timer is automatically deactivated before deletion if active on entry.

**Parameters** 

timer	The address of a valid timer descriptor.
-------	--

Tags

unrestricted

References xntimer\_stop().

Referenced by rtdm\_timer\_destroy().

6.44.2.5 xnticks\_t xntimer\_get\_date ( struct xntimer \* timer )

Return the absolute expiration date.

Return the next expiration date of a timer as an absolute count of nanoseconds.

**Parameters** 

timer The address of a valid timer descriptor.

Returns

The expiration date in nanoseconds. The special value XN\_INFINITE is returned if *timer* is currently disabled.

Tags

unrestricted, atomic-entry

6.44 Timer services 229

6.44.2.6 unsigned long long xntimer\_get\_overruns ( struct xntimer \* timer, xnticks\_t now )

Get the count of overruns for the last tick.

This service returns the count of pending overruns for the last tick of a given timer, as measured by the difference between the expected expiry date of the timer and the date *now* passed as argument.

### **Parameters**

timer	The address of a valid timer descriptor.
now	current date (as xnclock_read_raw(xntimer_clock(timer)))

#### Returns

the number of overruns of timer at date now

# Tags

unrestricted, atomic-entry

Referenced by xnthread\_wait\_period().

6.44.2.7 xnticks t xntimer get timeout ( struct xntimer \* timer )

Return the relative expiration date.

This call returns the count of nanoseconds remaining until the timer expires.

**Parameters** 

timer The address of a valid timer of	lescriptor.
---------------------------------------	-------------

### Returns

The count of nanoseconds until expiry. The special value XN\_INFINITE is returned if *timer* is currently disabled. It might happen that the timer expires when this service runs (even if the associated handler has not been fired yet); in such a case, 1 is returned.

# Tags

unrestricted, atomic-entry

6.44.2.8 int xntimer\_grab\_hardware ( int cpu )

Grab the hardware timer.

xntimer\_grab\_hardware() grabs and tunes the hardware timer in oneshot mode in order to clock the master time base. GENERIC\_CLOCKEVENTS is required from the host kernel.

Host tick emulation is performed for sharing the clockchip hardware between Linux and Xenomai, when the former provides support for oneshot timing (i.e. high resolution timers and no-HZ scheduler ticking).

Parameters

сри	The CPU number to grab the timer from.

### Returns

a positive value is returned on success, representing the duration of a Linux periodic tick expressed as a count of nanoseconds; zero should be returned when the Linux kernel does not undergo periodic timing on the given CPU (e.g. oneshot mode). Otherwise:

- -EBUSY is returned if the hardware timer has already been grabbed. xntimer\_release\_hardware() must be issued before xntimer\_grab\_hardware() is called again.
- -ENODEV is returned if the hardware timer cannot be used. This situation may occur after the kernel disabled the timer due to invalid calibration results; in such a case, such hardware is unusable for any timing duties.

### Tags

# secondary-only

References program\_htick\_shot(), and switch\_htick\_mode().

6.44.2.9 void xntimer\_init ( struct xntimer \* timer, struct xnclock \* clock, void(\*)(struct xntimer \*timer) handler, struct xnsched \* sched, int flags )

Initialize a timer object.

Creates a timer. When created, a timer is left disarmed; it must be started using xntimer\_start() in order to be activated.

### **Parameters**

timer	The address of a timer descriptor the nucleus will use to store the object-specific data. This descriptor must always be valid while the object is active therefore it must be allocated in permanent memory.
clock	The clock the timer relates to. Xenomai defines a monotonic system clock, with nanosecond resolution, named nkclock. In addition, external clocks driven by other tick sources may be created dynamically if CONFIG_XENO_OPT_EXTCLOCK is defined.
handler	The routine to call upon expiration of the timer.
sched	An optional pointer to the per-CPU scheduler slot the new timer is affine to. If non-NULL, the timer will fire on the CPU <i>sched</i> is bound to, otherwise it will fire either on the current CPU if real-time, or on the first real-time CPU.
flags	A set of flags describing the timer. The valid flags are:

• XNTIMER NOBLCK, the timer won't be frozen while GDB takes over control of the application.

A set of clock gravity hints can be passed via the *flags* argument, used for optimizing the built-in heuristics aimed at latency reduction:

- XNTIMER IGRAVITY, the timer activates a leaf timer handler.
- XNTIMER\_KGRAVITY, the timer activates a kernel thread.
- XNTIMER UGRAVITY, the timer activates a user-space thread.

There is no limitation on the number of timers which can be created/active concurrently.

### Tags

### unrestricted

6.44 Timer services 231

6.44.2.10 xnticks\_t xntimer\_interval ( struct xntimer \* timer ) [inline], [static]

Return the timer interval value.

Return the timer interval value in nanoseconds.

**Parameters** 

timer	The address of a valid timer descriptor.
-------	--

### Returns

The duration of a period in nanoseconds. The special value XN\_INFINITE is returned if *timer* is currently disabled or one shot.

Tags

unrestricted, atomic-entry

6.44.2.11 void xntimer\_release\_hardware (int cpu)

Release the hardware timer.

Releases the hardware timer, thus reverting the effect of a previous call to xntimer\_grab\_hardware(). In case the timer hardware is shared with Linux, a periodic setup suitable for the Linux kernel is reset.

**Parameters** 

сри	The CPU number the timer was grabbed from.
-----	--

Tags

secondary-only

6.44.2.12 int xntimer\_start ( struct xntimer \* timer, xnticks\_t value, xnticks\_t interval, xntmode\_t mode )

Arm a timer.

Activates a timer so that the associated timeout handler will be fired after each expiration time. A timer can be either periodic or one-shot, depending on the reload value passed to this routine. The given timer must have been previously initialized.

A timer is attached to the clock specified in xntimer\_init().

### **Parameters**

timer	The address of a valid timer descriptor.
value	The date of the initial timer shot, expressed in nanoseconds.
interval	The reload value of the timer. It is a periodic interval value to be used for repro-
	gramming the next timer shot, expressed in nanoseconds. If interval is equal to
	XN_INFINITE, the timer will not be reloaded after it has expired.
mode	The timer mode. It can be XN_RELATIVE if value shall be interpreted as a relative
	date, XN_ABSOLUTE for an absolute date based on the monotonic clock of the
	related time base (as returned my xnclock_read_monotonic()), or XN_REALTIME
	if the absolute date is based on the adjustable real-time date for the relevant clock
	(obtained from xnclock_read_realtime()).

232 Module Documentation

### Returns

0 is returned upon success, or -ETIMEDOUT if an absolute date in the past has been given. In such an event, the timer is nevertheless armed for the next shot in the timeline if *interval* is different from XN\_INFINITE.

Tags

# unrestricted, atomic-entry

Referenced by program\_htick\_shot(), rtdm\_timer\_start(), switch\_htick\_mode(), xnthread\_set\_periodic(), xnthread\_set\_slice(), and xnthread\_suspend().

6.44.2.13 int xntimer stop ( struct xntimer \* timer ) [inline], [static]

Disarm a timer.

This service deactivates a timer previously armed using xntimer\_start(). Once disarmed, the timer can be subsequently re-armed using the latter service.

**Parameters** 

timer The address of a valid timer descriptor.

Tags

# unrestricted, atomic-entry


Referenced by \_\_xntimer\_migrate(), rtdm\_timer\_stop(), switch\_htick\_mode(), xnthread\_resume(), xnthread\_set\_periodic(), xnthread\_set\_slice(), and xntimer\_destroy().

6.45 Virtual file services 233

# 6.45 Virtual file services

Virtual files provide a mean to export Xenomai object states to user-space, based on common kernel interfaces.

Collaboration diagram for Virtual file services:

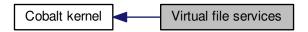

# **Data Structures**

struct xnvfile\_lock\_ops

Vfile locking operations.

struct xnvfile\_regular\_ops

Regular vfile operation descriptor.

struct xnvfile\_regular\_iterator

Regular vfile iterator.

struct xnvfile\_snapshot\_ops

Snapshot vfile operation descriptor.

struct xnvfile\_rev\_tag

Snapshot revision tag.

struct xnvfile\_snapshot

Snapshot vfile descriptor.

struct xnvfile\_snapshot\_iterator

Snapshot-driven vfile iterator.

# **Functions**

• int xnvfile\_init\_snapshot (const char \*name, struct xnvfile\_snapshot \*vfile, struct xnvfile\_directory \*parent)

Initialize a snapshot-driven vfile.

int xnvfile\_init\_regular (const char \*name, struct xnvfile\_regular \*vfile, struct xnvfile\_directory \*parent)

Initialize a regular vfile.

- int xnvfile\_init\_dir (const char \*name, struct xnvfile\_directory \*vdir, struct xnvfile\_directory \*parent)

  Initialize a virtual directory entry.
- int xnvfile\_init\_link (const char \*from, const char \*to, struct xnvfile\_link \*vlink, struct xnvfile\_-directory \*parent)

Initialize a virtual link entry.

• void xnvfile\_destroy (struct xnvfile \*vfile)

Removes a virtual file entry.

ssize t xnvfile get blob (struct xnvfile input \*input, void \*data, size t size)

Read in a data bulk written to the vfile.

• ssize\_t xnvfile\_get\_string (struct xnvfile\_input \*input, char \*s, size\_t maxlen)

Read in a C-string written to the vfile.

• ssize\_t xnvfile\_get\_integer (struct xnvfile\_input \*input, long \*valp)

Evaluate the string written to the vfile as a long integer.

### **Variables**

- struct xnvfile\_directory nkvfroot
   Xenomai vfile root directory.
- struct xnvfile\_directory nkvfroot
   Xenomai vfile root directory.

# 6.45.1 Detailed Description

Virtual files provide a mean to export Xenomai object states to user-space, based on common kernel interfaces. This encapsulation is aimed at:

- supporting consistent collection of very large record-based output, without encurring latency peaks for undergoing real-time activities.
- in the future, hiding discrepancies between linux kernel releases, regarding the proper way to export kernel object states to userland, either via the /proc interface or by any other mean.

This virtual file implementation offers record-based read support based on seq\_files, single-buffer write support, directory and link handling, all visible from the /proc namespace.

The vfile support exposes four filesystem object types:

 snapshot-driven file (struct xnvfile\_snapshot). This is commonly used to export real-time object states via the /proc filesystem. To minimize the latency involved in protecting the vfile routines from changes applied by real-time code on such objects, a snapshot of the data to output is first taken under proper locking, before the collected data is formatted and sent out in a lockless manner.

Because a large number of records may have to be output, the data collection phase is not strictly atomic as a whole, but only protected at record level. The vfile implementation can be notified of updates to the underlying data set, and restart the collection from scratch until the snapshot is fully consistent.

- regular sequential file (struct xnvfile\_regular). This is basically an encapsulated sequential file
  object as available from the host kernel (i.e. seq\_file), with a few additional features to make it
  more handy in a Xenomai environment, like implicit locking support and shortened declaration for
  simplest, single-record output.
- virtual link (struct xnvfile\_link). This is a symbolic link feature integrated with the vfile semantics. The link target is computed dynamically at creation time from a user-given helper routine.
- virtual directory (struct xnvfile\_directory). A directory object, which can be used to create a hierarchy for ordering a set of vfile objects.

# 6.45.2 Function Documentation

6.45.2.1 void xnvfile\_destroy ( struct xnvfile \* vfile )

Removes a virtual file entry.

6.45 Virtual file services 235

### **Parameters**

vfile	A pointer to the virtual file descriptor to remove.
-------	---

### Tags

### secondary-only

```
6.45.2.2 ssize t xnvfile get blob ( struct xnvfile input * input, void * data, size t size )
```

Read in a data bulk written to the vfile.

When writing to a vfile, the associated store() handler from the snapshot-driven vfile or regular vfile is called, with a single argument describing the input data. xnvfile\_get\_blob() retrieves this data as an untyped binary blob, and copies it back to the caller's buffer.

### **Parameters**

input	A pointer to the input descriptor passed to the store() handler.
data	The address of the destination buffer to copy the input data to.
size	The maximum number of bytes to copy to the destination buffer. If size is larger than
	the actual data size, the input is truncated to size.

### Returns

The number of bytes read and copied to the destination buffer upon success. Otherwise, a negative error code is returned:

· -EFAULT indicates an invalid source buffer address.

### Tags

# secondary-only

Referenced by xnvfile get integer(), and xnvfile get string().

```
6.45.2.3 ssize_t xnvfile_get_integer ( struct xnvfile_input * input, long * valp )
```

Evaluate the string written to the vfile as a long integer.

When writing to a vfile, the associated store() handler from the snapshot-driven vfile or regular vfile is called, with a single argument describing the input data. xnvfile\_get\_integer() retrieves and interprets this data as a long integer, and copies the resulting value back to *valp*.

The long integer can be expressed in decimal, octal or hexadecimal bases depending on the prefix found.

### **Parameters**

input	A pointer to the input descriptor passed to the store() handler.
valp	The address of a long integer variable to receive the value.

### Returns

The number of characters read while evaluating the input as a long integer upon success. Otherwise, a negative error code is returned:

• -EINVAL indicates a parse error on the input stream; the written text cannot be evaluated as a long integer.

236 Module Documentation

· -EFAULT indicates an invalid source buffer address.

### Tags

### secondary-only

References xnvfile\_get\_blob().

```
6.45.2.4 ssize t xnvfile get string ( struct xnvfile input * input, char * s, size t maxlen )
```

Read in a C-string written to the vfile.

When writing to a vfile, the associated store() handler from the snapshot-driven vfile or regular vfile is called, with a single argument describing the input data. xnvfile\_get\_string() retrieves this data as a null-terminated character string, and copies it back to the caller's buffer.

### **Parameters**

input	A pointer to the input descriptor passed to the store() handler.	
S	The address of the destination string buffer to copy the input data to.	
maxlen The maximum number of bytes to copy to the destination buffer, including the er		
	null character. If <i>maxlen</i> is larger than the actual string length, the input is truncate	
	to maxlen.	

### Returns

The number of characters read upon success. Otherwise, a negative error code is returned:

· -EFAULT indicates an invalid source buffer address.

# Tags

# secondary-only

References xnvfile\_get\_blob().

6.45.2.5 int xnvfile\_init\_dir ( const char \* name, struct xnvfile\_directory \* vdir, struct xnvfile\_directory \* parent )

Initialize a virtual directory entry.

# **Parameters**

name	The name which should appear in the pseudo-filesystem, identifying the vdir entry.
vdir	A pointer to the virtual directory descriptor to initialize.
parent	A pointer to a virtual directory descriptor standing for the parent directory of the new
	vdir. If NULL, the /proc root directory will be used. /proc/xenomai is mapped on the
	globally available <i>nkvfroot</i> vdir.

### Returns

0 is returned on success. Otherwise:

• -ENOMEM is returned if the virtual directory entry cannot be created in the /proc hierarchy.

# Tags

secondary-only

6.45 Virtual file services 237

6.45.2.6 int xnvfile\_init\_link ( const char \* from, const char \* to, struct xnvfile\_link \* vlink, struct xnvfile\_directory \* parent )

Initialize a virtual link entry.

### **Parameters**

from	The name which should appear in the pseudo-filesystem, identifying the vlink entry.	
to	The target file name which should be referred to symbolically by <i>name</i> .	
vlink	pointer to the virtual link descriptor to initialize.	
parent	A pointer to a virtual directory descriptor standing for the parent directory of the new	
	vlink. If NULL, the /proc root directory will be used. /proc/xenomai is mapped on the	
	globally available <i>nkvfroot</i> vdir.	

### Returns

0 is returned on success. Otherwise:

• -ENOMEM is returned if the virtual link entry cannot be created in the /proc hierarchy.

### Tags

secondary-only

6.45.2.7 int xnvfile\_init\_regular ( const char \* name, struct xnvfile\_regular \* vfile, struct xnvfile directory \* parent )

Initialize a regular vfile.

### **Parameters**

name	The name which should appear in the pseudo-filesystem, identifying the vfile entry.	
vfile	A pointer to a vfile descriptor to initialize from. The following fields in this structure	
	should be filled in prior to call this routine:	

- .privsz is the size (in bytes) of the private data area to be reserved in the vfile iterator. A NULL value indicates that no private area should be reserved.
- entry.lockops is a pointer to a lockingdescriptor", defining the lock and unlock operations for the vfile. This pointer may be left to NULL, in which case no locking will be applied.
- .ops is a pointer to an operation descriptor.

### **Parameters**

parent	A pointer to a virtual directory descriptor; the vfile entry will be created into this
	directory. If NULL, the /proc root directory will be used. /proc/xenomai is mapped
	on the globally available <i>nkvfroot</i> vdir.

### Returns

0 is returned on success. Otherwise:

• -ENOMEM is returned if the virtual file entry cannot be created in the /proc hierarchy.

### Tags

secondary-only

6.45.2.8 int xnvfile\_init\_snapshot ( const char \* name, struct **xnvfile\_snapshot** \* vfile, struct xnvfile directory \* parent )

Initialize a snapshot-driven vfile.

6.45 Virtual file services 239

### **Parameters**

name	The name which should appear in the pseudo-filesystem, identifying the vfile entry.	
vfile	A pointer to a vfile descriptor to initialize from. The following fields in this structur	
	should be filled in prior to call this routine:	

- .privsz is the size (in bytes) of the private data area to be reserved in the vfile iterator. A NULL
  value indicates that no private area should be reserved.
- .datasz is the size (in bytes) of a single record to be collected by the next() handler from the operation descriptor.
- .tag is a pointer to a mandatory vfile revision tag structure (struct xnvfile\_rev\_tag). This tag will be
  monitored for changes by the vfile core while collecting data to output, so that any update detected
  will cause the current snapshot data to be dropped, and the collection to restart from the beginning.
  To this end, any change to the data which may be part of the collected records, should also invoke
  xnvfile\_touch() on the associated tag.
- entry.lockops is a pointer to a lock descriptor, defining the lock and unlock operations for the vfile.
   This pointer may be left to NULL, in which case the operations on the nucleus lock (i.e. nklock) will be used internally around calls to data collection handlers (see operation descriptor).
- .ops is a pointer to an operation descriptor.

### **Parameters**

parent	A pointer to a virtual directory descriptor; the vfile entry will be created into this
	directory. If NULL, the /proc root directory will be used. /proc/xenomai is mapped
	on the globally available <i>nkvfroot</i> vdir.

### Returns

0 is returned on success. Otherwise:

• -ENOMEM is returned if the virtual file entry cannot be created in the /proc hierarchy.

# Tags

secondary-only

References xnvfile\_snapshot\_ops::store.

6.45.3 Variable Documentation

6.45.3.1 struct xnvfile directory nkvfroot

Xenomai vfile root directory.

This vdir maps the /proc/xenomai directory. It can be used to create a hierarchy of Xenomai-related vfiles under this root.

6.45.3.2 struct xnvfile directory nkvfroot


Xenomai vfile root directory.

This vdir maps the /proc/xenomai directory. It can be used to create a hierarchy of Xenomai-related vfiles under this root.

# 6.46 Analogy framework

A RTDM-based interface for implementing DAQ card drivers.

Collaboration diagram for Analogy framework:

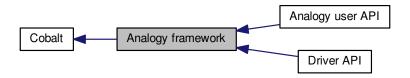

# Modules

- Driver API
   Programming interface provided to DAQ card drivers.
- Analogy user API

# 6.46.1 Detailed Description


A RTDM-based interface for implementing DAQ card drivers.

6.47 Driver API 241

# 6.47 Driver API

Programming interface provided to DAQ card drivers.

Collaboration diagram for Driver API:

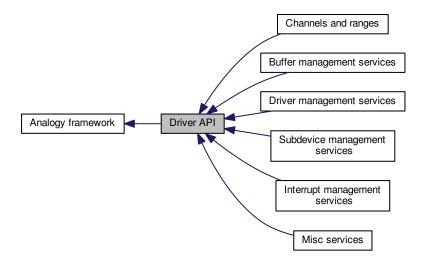

# Modules

• Channels and ranges

Channels.

• Driver management services

Analogy driver registration / unregistration.

Subdevice management services

Subdevice declaration in a driver.

Buffer management services

Buffer management services.

- Interrupt management services
- Misc services

# 6.47.1 Detailed Description

Programming interface provided to DAQ card drivers.

# 6.48 Driver management services

Analogy driver registration / unregistration.

Collaboration diagram for Driver management services:



# **Functions**

- int a4l\_register\_drv (struct a4l\_driver \*drv)
  - Register an Analogy driver.
- int a4l\_unregister\_drv (struct a4l\_driver \*drv)

Unregister an Analogy driver.

# 6.48.1 Detailed Description

Analogy driver registration / unregistration. In a common Linux char driver, the developer has to register a fops structure filled with callbacks for read / write / mmap / ioctl operations.

Analogy drivers do not have to implement read / write / mmap / ioctl functions, these procedures are implemented in the Analogy generic layer. Then, the transfers between user-space and kernel-space are already managed. Analogy drivers work with commands and instructions which are some kind of more dedicated read / write operations. And, instead of registering a fops structure, a Analogy driver must register some a4l\_driver structure.

# 6.48.2 Function Documentation

6.48.2.1 int a4l\_register\_drv ( struct a4l\_driver \* drv )

Register an Analogy driver.

After initialising a driver structure, the driver must be made available so as to be attached.

### **Parameters**

in	drv	Driver descriptor structure

### Returns

0 on success, otherwise negative error code.

References a4I driver::board name, and a4I driver::list.

6.48.2.2 int a4I unregister drv ( struct a4I driver \* drv )

Unregister an Analogy driver.

This function removes the driver descriptor from the Analogy driver list. The driver cannot be attached anymore.

# Parameters

_			
	in	drv	Driver descriptor structure

# Returns


0 on success, otherwise negative error code.

References a4l\_driver::board\_name, and a4l\_driver::list.

# 6.49 Subdevice management services

Subdevice declaration in a driver.

Collaboration diagram for Subdevice management services:

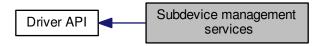

# **Functions**

244

- struct a4l\_subdevice \* a4l\_alloc\_subd (int sizeof\_priv, void(\*setup)(struct a4l\_subdevice \*))
   Allocate a subdevice descriptor.
- int a4l\_add\_subd (struct a4l\_device \*dev, struct a4l\_subdevice \*subd)
   Add a subdevice to the driver descriptor.
- struct a4l\_subdevice \* a4l\_get\_subd (struct a4l\_device \*dev, int idx)
   Get a pointer to the subdevice descriptor referenced by its registration index.

# Subdevices types

Flags to define the subdevice type

- #define A4L\_SUBD\_UNUSED (A4L\_SUBD\_MASK\_SPECIAL|0x1)
   Unused subdevice.
- #define A4L\_SUBD\_AI (A4L\_SUBD\_MASK\_READ|0x2)

Analog input subdevice.

• #define A4L\_SUBD\_AO (A4L\_SUBD\_MASK\_WRITE|0x4)

Analog output subdevice.

#define A4L SUBD DI (A4L SUBD MASK READ|0x8)

Digital input subdevice.

• #define A4L SUBD DO (A4L SUBD MASK WRITE|0x10)

Digital output subdevice.

• #define A4L\_SUBD\_DIO (A4L\_SUBD\_MASK\_SPECIAL|0x20)

Digital input/output subdevice.

#define A4L\_SUBD\_COUNTER (A4L\_SUBD\_MASK\_SPECIAL|0x40)

Counter subdevice.

- #define A4L\_SUBD\_TIMER (A4L\_SUBD\_MASK\_SPECIAL|0x80)

  Timer subdevice.
- #define A4L\_SUBD\_MEMORY (A4L\_SUBD\_MASK\_SPECIAL|0x100)
   Memory, EEPROM, DPRAM.
- #define A4L SUBD CALIB (A4L SUBD MASK SPECIAL|0x200)

Calibration subdevice DACs.

• #define A4L\_SUBD\_PROC (A4L\_SUBD\_MASK\_SPECIAL|0x400)

Processor, DSP.

#define A4L\_SUBD\_SERIAL (A4L\_SUBD\_MASK\_SPECIAL|0x800)

Serial IO subdevice.

• #define A4L SUBD TYPES

Mask which gathers all the types.

# Subdevice features

Flags to define the subdevice's capabilities

#define A4L\_SUBD\_CMD 0x1000

The subdevice can handle command (i.e it can perform asynchronous acquisition)

#define A4L SUBD MMAP 0x8000

The subdevice support mmap operations (technically, any driver can do it; however, the developer might want that his driver must be accessed through read / write.

# Subdevice status

Flags to define the subdevice's status

• #define A4L SUBD BUSY NR 0

The subdevice is busy, a synchronous or an asynchronous acquisition is occuring.

#define A4L SUBD BUSY (1 << A4L SUBD BUSY NR)</li>

The subdevice is busy, a synchronous or an asynchronous acquisition is occuring.

• #define A4L SUBD CLEAN NR 1

The subdevice is about to be cleaned in the middle of the detach procedure.

#define A4L\_SUBD\_CLEAN (1 << A4L\_SUBD\_CLEAN\_NR)</li>

The subdevice is busy, a synchronous or an asynchronous acquisition is occuring.

# 6.49.1 Detailed Description

Subdevice declaration in a driver. The subdevice structure is the most complex one in the Analogy driver layer. It contains some description fields to fill and some callbacks to declare.

The description fields are:

- flags: to define the subdevice type and its capabilities;
- chan\_desc: to describe the channels which compose the subdevice;
- rng\_desc: to declare the usable ranges;

The functions callbakes are:

- do\_cmd() and do\_cmdtest(): to performe asynchronous acquisitions thanks to commands;
- cancel(): to abort a working asynchronous acquisition;
- munge(): to apply modifications on the data freshly acquired during an asynchronous transfer.
   Warning: using this feature with can significantly reduce the performances (if the munge operation is complex, it will trigger high CPU charge and if the acquisition device is DMA capable, many cache-misses and cache-replaces will occur (the benefits of the DMA controller will vanish);
- trigger(): optionnaly to launch an asynchronous acquisition;

• insn\_read(), insn\_write(), insn\_bits(), insn\_config(): to perform synchronous acquisition operations.

Once the subdevice is filled, it must be inserted into the driver structure thanks to a4l\_add\_subd().

# 6.49.2 Function Documentation

```
6.49.2.1 int a4l add subd ( struct a4l device * dev, struct a4l subdevice * subd )
```

Add a subdevice to the driver descriptor.

Once the driver descriptor structure is initialized, the function a4l\_add\_subd() must be used so to add some subdevices to the driver.

### **Parameters**

in	dev	Device descriptor structure
in	subd	Subdevice descriptor structure

### Returns

the index with which the subdevice has been registered, in case of error a negative error code is returned.

References a4I subdevice::dev, a4I subdevice::idx, and a4I subdevice::list.

Allocate a subdevice descriptor.

This is a helper function so as to get a suitable subdevice descriptor

### **Parameters**

in	sizeof_priv	Size of the subdevice's private data
in	setup	Setup function to be called after the allocation

### Returns

the index with which the subdevice has been registered, in case of error a negative error code is returned.

References rtdm\_malloc().

```
6.49.2.3 struct a4l subdevice* a4l get subd ( struct a4l device * dev, int idx )
```

Get a pointer to the subdevice descriptor referenced by its registration index.

This function is scarcely useful as all the drivers callbacks get the related subdevice descriptor as first argument. This function is not optimized, it goes through a linked list to get the proper pointer. So it must not be used in real-time context but at initialization / cleanup time (attach / detach).

# **Parameters**

in	dev	Device descriptor structure
in	idx	Subdevice index

# Returns

0 on success, otherwise negative error code.

# 6.50 Buffer management services

Buffer management services.

Collaboration diagram for Buffer management services:



# **Functions**

• int a4l buf prepare absput (struct a4l subdevice \*subd, unsigned long count)

Update the absolute count of data sent from the device to the buffer since the start of the acquisition and after the next DMA shot.

• int a4l buf commit absput (struct a4l subdevice \*subd, unsigned long count)

Set the absolute count of data which was sent from the device to the buffer since the start of the acquisition and until the last DMA shot.

int a4l\_buf\_prepare\_put (struct a4l\_subdevice \*subd, unsigned long count)

Set the count of data which is to be sent to the buffer at the next DMA shot.

int a4l\_buf\_commit\_put (struct a4l\_subdevice \*subd, unsigned long count)

Set the count of data sent to the buffer during the last completed DMA shots.

• int a4l buf put (struct a4l subdevice \*subd, void \*bufdata, unsigned long count)

Copy some data from the device driver to the buffer.

• int a4l buf prepare absget (struct a4l subdevice \*subd, unsigned long count)

Update the absolute count of data sent from the buffer to the device since the start of the acquisition and after the next DMA shot.

int a4l\_buf\_commit\_absget (struct a4l\_subdevice \*subd, unsigned long count)

Set the absolute count of data which was sent from the buffer to the device since the start of the acquisition and until the last DMA shot.

• int a4l buf prepare get (struct a4l subdevice \*subd, unsigned long count)

Set the count of data which is to be sent from the buffer to the device at the next DMA shot.

• int a4l buf commit get (struct a4l subdevice \*subd, unsigned long count)

Set the count of data sent from the buffer to the device during the last completed DMA shots.

• int a4l buf get (struct a4l subdevice \*subd, void \*bufdata, unsigned long count)

Copy some data from the buffer to the device driver.

int a4l\_buf\_evt (struct a4l\_subdevice \*subd, unsigned long evts)

Signal some event(s) to a user-space program involved in some read / write operation.

unsigned long a4l\_buf\_count (struct a4l\_subdevice \*subd)

Get the data amount available in the Analogy buffer.

struct a4l\_cmd\_desc \* a4l\_get\_cmd (struct a4l\_subdevice \*subd)

Get the current Analogy command descriptor.

int a4l get chan (struct a4l subdevice \*subd)

Get the channel index according to its type.

# 6.50.1 Detailed Description

Buffer management services. The buffer is the key component of the Analogy infrastructure. It manages transfers between the user-space and the Analogy drivers thanks to generic functions which are described hereafter. Thanks to the buffer subsystem, the driver developer does not have to care about the way the user program retrieves or sends data.

To write a classical char driver, the developer has to fill a fops structure so as to provide transfer operations to the user program (read, write, ioctl and mmap if need be).

The Analogy infrastructure manages the whole interface with the userspace; the common read, write, mmap, etc. callbacks are generic Analogy functions. These functions manage (and perform, if need be) transfers between the user-space and an asynchronous buffer thanks to lockless mechanisms.

Consequently, the developer has to use the proper buffer functions in order to write / read acquired data into / from the asynchronous buffer.

Here are listed the functions:

- a4l\_buf\_prepare\_(abs)put() and a4l\_buf\_commit\_(abs)put()
- a4l\_buf\_prepare\_(abs)get() and a4l\_buf\_commit\_(abs)get()
- a4l buf put()
- a4l\_buf\_get()
- a4l buf evt().

The functions count might seem high; however, the developer needs a few of them to write a driver. Having so many functions enables to manage any transfer cases:

- If some DMA controller is available, there is no need to make the driver copy the acquired data into
  the asynchronous buffer, the DMA controller must directly trigger DMA shots into / from the buffer.
  In that case, a function a4l\_buf\_prepare\_\*() must be used so as to set up the DMA transfer and a
  function a4l\_buf\_commit\_\*() has to be called to complete the transfer().
- For DMA controllers which need to work with global counter (the transferred data count since the beginning of the acquisition), the functions a4l buf \* abs \*() have been made available.
- If no DMA controller is available, the driver has to perform the copy between the hardware component and the asynchronous buffer. In such cases, the functions a4l\_buf\_get() and a4l\_buf\_put() are useful.

### 6.50.2 Function Documentation

```
6.50.2.1 int a4l buf commit absget ( struct a4l subdevice * subd, unsigned long count )
```

Set the absolute count of data which was sent from the buffer to the device since the start of the acquisition and until the last DMA shot.

The functions a4l\_buf\_prepare\_(abs)put(), a4l\_buf\_commit\_(abs)put(), a4l\_buf\_prepare\_(abs)get() and a4l\_buf\_commit\_(abs)get() have been made available for DMA transfers. In such situations, no data copy is needed between the Analogy buffer and the device as some DMA controller is in charge of performing data shots from / to the Analogy buffer. However, some pointers still have to be updated so as to monitor the transfers.

#### **Parameters**

in	subd	Subdevice descriptor structure
in	count	The data count transferred to the device during the last DMA shot plus the data count which have been sent since the beginning of the acqui-
		sition

### Returns

0 on success, otherwise negative error code.

References A4L SUBD BUSY NR, a4I subdevice::buf, and a4I subdevice::status.

6.50.2.2 int a4l buf commit absput ( struct a4l subdevice \* subd, unsigned long count )

Set the absolute count of data which was sent from the device to the buffer since the start of the acquisition and until the last DMA shot.

The functions a4l\_buf\_prepare\_(abs)put(), a4l\_buf\_commit\_(abs)put(), a4l\_buf\_prepare\_(abs)get() and a4l\_buf\_commit\_(abs)get() have been made available for DMA transfers. In such situations, no data copy is needed between the Analogy buffer and the device as some DMA controller is in charge of performing data shots from / to the Analogy buffer. However, some pointers still have to be updated so as to monitor the transfers.

### **Parameters**

in	subd	Subdevice descriptor structure
in	count	The data count transferred to the buffer during the last DMA shot plus
		the data count which have been sent / retrieved since the beginning of the acquisition
		the acquisition

### Returns

0 on success, otherwise negative error code.

References A4L\_SUBD\_BUSY\_NR, a4l\_subdevice::buf, and a4l\_subdevice::status.

6.50.2.3 int a4l buf commit get ( struct a4l subdevice \* subd, unsigned long count )

Set the count of data sent from the buffer to the device during the last completed DMA shots.

The functions a4l\_buf\_prepare\_(abs)put(), a4l\_buf\_commit\_(abs)put(), a4l\_buf\_prepare\_(abs)get() and a4l\_buf\_commit\_(abs)get() have been made available for DMA transfers. In such situations, no data copy is needed between the Analogy buffer and the device as some DMA controller is in charge of performing data shots from / to the Analogy buffer. However, some pointers still have to be updated so as to monitor the transfers.

### Parameters

in	subd	Subdevice descriptor structure
in	count	The amount of data transferred

# Returns

0 on success, otherwise negative error code.

References A4L SUBD BUSY NR, a4I subdevice::buf, and a4I subdevice::status.

6.50.2.4 int a4l\_buf\_commit\_put ( struct a4l\_subdevice \* subd, unsigned long count )

Set the count of data sent to the buffer during the last completed DMA shots.

The functions a4l\_buf\_prepare\_(abs)put(), a4l\_buf\_commit\_(abs)put(), a4l\_buf\_prepare\_(abs)get() and a4l\_buf\_commit\_(abs)get() have been made available for DMA transfers. In such situations, no data copy is needed between the Analogy buffer and the device as some DMA controller is in charge of performing data shots from / to the Analogy buffer. However, some pointers still have to be updated so as to monitor the transfers.

### **Parameters**

in	subd	Subdevice descriptor structure
in	count	The amount of data transferred

### Returns

0 on success, otherwise negative error code.

References A4L SUBD BUSY NR, a4I subdevice::buf, and a4I subdevice::status.

6.50.2.5 unsigned long a4l buf count ( struct a4l subdevice \* subd )

Get the data amount available in the Analogy buffer.

#### **Parameters**

in	subd	Subdevice descriptor structure

### Returns

the amount of data available in the Analogy buffer.

References A4L SUBD BUSY NR, a4I subdevice::buf, and a4I subdevice::status.

6.50.2.6 int a4l\_buf\_evt ( struct a4l\_subdevice \* subd, unsigned long evts )

Signal some event(s) to a user-space program involved in some read / write operation.

The function a4l\_buf\_evt() is useful in many cases:

- To wake-up a process waiting for some data to read.
- To wake-up a process waiting for some data to write.
- To notify the user-process an error has occured during the acquistion.

### **Parameters**

in	subd	Subdevice descriptor structure
in	evts	Some specific event to notify:
		<ul> <li>A4L_BUF_ERROR to indicate some error has occured during the transfer</li> </ul>
		<ul> <li>A4L_BUF_EOA to indicate the acquisition is complete (this event is automatically set, it should not be used).</li> </ul>

### Returns

0 on success, otherwise negative error code.

References A4L\_SUBD\_BUSY\_NR, a4l\_subdevice::buf, and a4l\_subdevice::status.

6.50.2.7 int a4l buf get ( struct a4l subdevice \* subd, void \* bufdata, unsigned long count )

Copy some data from the buffer to the device driver.

The function a4l\_buf\_get() must copy data coming from the Analogy buffer to some acquisition device. This ring-buffer is an intermediate area between the device driver and the user-space program, which is supposed to provide the data to send to the device.

### **Parameters**

in	subd	Subdevice descriptor structure
in	bufdata	The data buffer to copy into the Analogy buffer
in	count	The amount of data to copy

### Returns

0 on success, otherwise negative error code.

References A4L\_SUBD\_BUSY\_NR, a4l\_subdevice::buf, and a4l\_subdevice::status.

6.50.2.8 int a4l\_buf\_prepare\_absget ( struct a4l\_subdevice \* subd, unsigned long count )

Update the absolute count of data sent from the buffer to the device since the start of the acquisition and after the next DMA shot.

The functions a4l\_buf\_prepare\_(abs)put(), a4l\_buf\_commit\_(abs)put(), a4l\_buf\_prepare\_(abs)get() and a4l\_buf\_commit\_(absg)et() have been made available for DMA transfers. In such situations, no data copy is needed between the Analogy buffer and the device as some DMA controller is in charge of performing data shots from / to the Analogy buffer. However, some pointers still have to be updated so as to monitor the transfers.

### **Parameters**

in	subd	Subdevice descriptor structure
in	count	The data count to be transferred during the next DMA shot plus the
		data count which have been copied since the start of the acquisition

### Returns

0 on success, otherwise negative error code.

References A4L SUBD BUSY NR, a4I subdevice::buf, and a4I subdevice::status.

6.50.2.9 int a4l buf prepare absput ( struct a4l subdevice \* subd, unsigned long count )

Update the absolute count of data sent from the device to the buffer since the start of the acquisition and after the next DMA shot.

The functions a4l\_buf\_prepare\_(abs)put(), a4l\_buf\_commit\_(abs)put(), a4l\_buf\_prepare\_(abs)get() and a4l\_buf\_commit\_(absg)et() have been made available for DMA transfers. In such situations, no data copy is needed between the Analogy buffer and the device as some DMA controller is in charge of performing data shots from / to the Analogy buffer. However, some pointers still have to be updated so as to monitor the transfers.

### **Parameters**

in	subd	Subdevice descriptor structure
in	count	The data count to be transferred during the next DMA shot plus the
		data count which have been copied since the start of the acquisition

### Returns

0 on success, otherwise negative error code.

References A4L SUBD BUSY NR, a4I subdevice::buf, and a4I subdevice::status.

6.50.2.10 int a4l\_buf\_prepare\_get ( struct a4l\_subdevice \* subd, unsigned long count )

Set the count of data which is to be sent from the buffer to the device at the next DMA shot.

The functions a4l\_buf\_prepare\_(abs)put(), a4l\_buf\_commit\_(abs)put(), a4l\_buf\_prepare\_(abs)get() and a4l\_buf\_commit\_(abs)get() have been made available for DMA transfers. In such situations, no data copy is needed between the Analogy buffer and the device as some DMA controller is in charge of performing data shots from / to the Analogy buffer. However, some pointers still have to be updated so as to monitor the transfers.

### **Parameters**

in	subd	Subdevice descriptor structure
in	count	The data count to be transferred

### Returns

0 on success, otherwise negative error code.

References A4L\_SUBD\_BUSY\_NR, a4l\_subdevice::buf, and a4l\_subdevice::status.

6.50.2.11 int a4l\_buf\_prepare\_put ( struct a4l\_subdevice \* subd, unsigned long count )

Set the count of data which is to be sent to the buffer at the next DMA shot.

The functions a4l\_buf\_prepare\_(abs)put(), a4l\_buf\_commit\_(abs)put(), a4l\_buf\_prepare\_(abs)get() and a4l\_buf\_commit\_(abs)get() have been made available for DMA transfers. In such situations, no data copy is needed between the Analogy buffer and the device as some DMA controller is in charge of performing data shots from / to the Analogy buffer. However, some pointers still have to be updated so as to monitor the transfers.

# **Parameters**

in	subd	Subdevice descriptor structure
in	count	The data count to be transferred

### Returns

0 on success, otherwise negative error code.

References A4L\_SUBD\_BUSY\_NR, a4l\_subdevice::buf, and a4l\_subdevice::status.

6.50.2.12 int a4l buf put ( struct a4l subdevice \* subd, void \* bufdata, unsigned long count )

Copy some data from the device driver to the buffer.

254 Module Documentation

The function a4l\_buf\_put() must copy data coming from some acquisition device to the Analogy buffer. This ring-buffer is an intermediate area between the device driver and the user-space program, which is supposed to recover the acquired data.

## **Parameters**

in	subd	Subdevice descriptor structure
in	bufdata	The data buffer to copy into the Analogy buffer
in	count	The amount of data to copy

# Returns

0 on success, otherwise negative error code.

References A4L\_SUBD\_BUSY\_NR, a4l\_subdevice::buf, and a4l\_subdevice::status.

6.50.2.13 int a4l\_get\_chan ( struct a4l\_subdevice \* subd )

Get the channel index according to its type.

### **Parameters**

in	subd	Subdevice descriptor structure
----	------	--------------------------------

# Returns

the channel index.

References A4L\_CHAN\_GLOBAL\_CHANDESC, a4l\_get\_cmd(), a4l\_subdevice::buf, a4l\_subdevice::chan\_desc, a4l\_cmd\_desc::chan\_descs, a4l\_channels\_desc::chans, a4l\_channels\_desc::mode, a4l\_channel::nb\_bits, and a4l\_cmd\_desc::nb\_chan.

6.50.2.14 struct a4l\_cmd\_desc\* a4l\_get\_cmd ( struct a4l\_subdevice \* subd )

Get the current Analogy command descriptor.

# Parameters

in	subd	Subdevice descriptor structure

# Returns

the command descriptor.

Referenced by a4l\_get\_chan().

# 6.51 Interrupt management services

Collaboration diagram for Interrupt management services:



# **Functions**

- unsigned int a4l\_get\_irq (struct a4l\_device \*dev)
   Get the interrupt number in use for a specific device.
- int a4l\_request\_irq (struct a4l\_device \*dev, unsigned int irq, a4l\_irq\_hdlr\_t handler, unsigned long flags, void \*cookie)

Register an interrupt handler for a specific device.

• int a4l\_free\_irq (struct a4l\_device \*dev, unsigned int irq)

Release an interrupt handler for a specific device.

# 6.51.1 Detailed Description

# 6.51.2 Function Documentation

6.51.2.1 int a4l\_free\_irq ( struct a4l\_device \* dev, unsigned int irq )

Release an interrupt handler for a specific device.

### **Parameters**

in	dev	Device descriptor structure
in	irq	Line number of the addressed IRQ

# Returns

0 on success, otherwise negative error code.

6.51.2.2 unsigned int a4l\_get\_irq ( struct a4l\_device \* dev )

Get the interrupt number in use for a specific device.

### **Parameters**

in dev Device descriptor structure	ın		dev	
------------------------------------	----	--	-----	--

## Returns

the line number used or A4L\_IRQ\_UNUSED if no interrupt is registered.

6.51.2.3 int a4l\_request\_irq ( struct a4l\_device \* dev, unsigned int irq, a4l\_irq\_hdlr\_t handler, unsigned long flags, void \* cookie )

Register an interrupt handler for a specific device.

# Parameters

in	dev	Device descriptor structure
in	irq	Line number of the addressed IRQ
in	handler	Interrupt handler
in	flags	Registration flags:     RTDM_IRQTYPE_SHARED: enable IRQ-sharing with other drivers (Warning: real-time drivers and non-real-time drivers cannot share an interrupt line).
		RTDM_IRQTYPE_EDGE: mark IRQ as edge-triggered (Warning: this flag is meaningless in RTDM-less context).
		<ul> <li>A4L_IRQ_DISABLED: keep IRQ disabled when calling the action handler (Warning: this flag is ignored in RTDM-enabled configu- ration).</li> </ul>
in	cookie	Pointer to be passed to the interrupt handler on invocation

# Returns

0 on success, otherwise negative error code.

References rtdm\_lock\_put\_irqrestore().

6.52 Misc services 259

# 6.52 Misc services

Collaboration diagram for Misc services:



# **Functions**

• unsigned long long a4l\_get\_time (void)

Get the absolute time in nanoseconds.

# 6.52.1 Detailed Description

# 6.52.2 Function Documentation

6.52.2.1 unsigned long long a4l\_get\_time (void)

Get the absolute time in nanoseconds.

Returns

the absolute time expressed in nanoseconds

References rtdm\_clock\_read().

260 Module Documentation

# 6.53 Clocks and timers

Cobalt/POSIX clock and timer services.

Collaboration diagram for Clocks and timers:



# **Functions**

int clock\_getres (clockid\_t clock\_id, struct timespec \*tp)

Get the resolution of the specified clock.

int clock\_gettime (clockid\_t clock\_id, struct timespec \*tp)

Read the specified clock.

• int clock settime (clockid t clock id, const struct timespec \*tp)

Set the specified clock.

- int clock\_nanosleep (clockid\_t clock\_id, int flags, const struct timespec \*rqtp, struct timespec \*rmtp)

  Sleep some amount of time.
- int nanosleep (const struct timespec \*rqtp, struct timespec \*rmtp)

Sleep some amount of time.

 int timer\_create (clockid\_t clockid, const struct sigevent \*\_\_restrict\_\_ evp, timer\_t \*\_\_restrict\_\_ timerid)

Create a timer.

• int timer\_delete (timer\_t timerid)

Delete a timer object.

int timer\_settime (timer\_t timerid, int flags, const struct itimerspec \*\_\_restrict\_\_ value, struct itimerspec \*\_\_restrict\_\_ ovalue)

Start or stop a timer.

• int timer\_gettime (timer\_t timerid, struct itimerspec \*value)

Get timer next expiration date and reload value.

int timer\_getoverrun (timer\_t timerid)

Get expiration overruns count since the most recent timer expiration signal delivery.

# 6.53.1 Detailed Description

Cobalt/POSIX clock and timer services. Cobalt supports three built-in clocks:

CLOCK\_REALTIME maps to the nucleus system clock, keeping time as the amount of time since the Epoch, with a resolution of one nanosecond.

CLOCK\_MONOTONIC maps to an architecture-dependent high resolution counter, so is suitable for measuring short time intervals. However, when used for sleeping (with clock\_nanosleep()), the CLOCK\_MONOTONIC clock has a resolution of one nanosecond, like the CLOCK\_REALTIME clock.

CLOCK\_MONOTONIC\_RAW is Linux-specific, and provides monotonic time values from a hardware timer which is not adjusted by NTP. This is strictly equivalent to CLOCK\_MONOTONIC with Xenomai, which is not NTP adjusted either.

6.53 Clocks and timers 261

In addition, external clocks can be dynamically registered using the cobalt\_clock\_register() service. These clocks are fully managed by Cobalt extension code, which should advertise each incoming tick by calling xnclock\_tick() for the relevant clock, from an interrupt context.

Timer objects may be created with the timer\_create() service using any of the built-in or external clocks. The resolution of these timers is clock-specific. However, built-in clocks all have nanosecond resolution, as specified for clock nanosleep().

See Also

Specification.

## 6.53.2 Function Documentation

6.53.2.1 int clock getres ( clockid t clock id, struct timespec \* tp )

Get the resolution of the specified clock.

This service returns, at the address res, if it is not NULL, the resolution of the clock clock id.

For both CLOCK\_REALTIME and CLOCK\_MONOTONIC, this resolution is the duration of one system clock tick. No other clock is supported.

#### **Parameters**

	clock identifier, either CLOCK_REALTIME or CLOCK_MONOTONIC;
tp	the address where the resolution of the specified clock will be stored on success.

### Return values

0	on success;
-1	with errno set if:
	• EINVAL, <i>clock_id</i> is invalid;

See Also

Specification.

6.53.2.2 int clock gettime ( clockid t clock id, struct timespec \* tp )

Read the specified clock.

This service returns, at the address tp the current value of the clock clock\_id. If clock\_id is:

- CLOCK\_REALTIME, the clock value represents the amount of time since the Epoch, with a precision of one system clock tick;
- CLOCK\_MONOTONIC or CLOCK\_MONOTONIC\_RAW, the clock value is given by an architecture-dependent high resolution counter, with a precision independent from the system clock tick duration.
- CLOCK\_HOST\_REALTIME, the clock value as seen by the host, typically Linux. Resolution and
  precision depend on the host, but it is guaranteed that both, host and Xenomai, see the same
  information.

## **Parameters**

clock_id	clock identifier, either CLOCK_REALTIME, CLOCK_MONOTONIC, or CLOCK_H-
	OST_REALTIME;
tp	the address where the value of the specified clock will be stored.

### Return values

0	on success;
-1	with errno set if:
	• EINVAL, <i>clock_id</i> is invalid.

### See Also

Specification.

Referenced by rt\_task\_set\_periodic().

6.53.2.3 int clock\_nanosleep ( clockid\_t clock\_id, int flags, const struct timespec \* rqtp, struct timespec \* rmtp )

Sleep some amount of time.

This service suspends the calling thread until the wakeup time specified by rqtp, or a signal is delivered to the caller. If the flag TIMER\_ABSTIME is set in the flags argument, the wakeup time is specified as an absolute value of the clock  $clock\_id$ . If the flag TIMER\_ABSTIME is not set, the wakeup time is specified as a time interval.

If this service is interrupted by a signal, the flag TIMER\_ABSTIME is not set, and *rmtp* is not *NULL*, the time remaining until the specified wakeup time is returned at the address *rmtp*.

The resolution of this service is one system clock tick.

### **Parameters**

clock_id	clock identifier, either CLOCK_REALTIME or CLOCK_MONOTONIC.
flags	one of:
	<ul> <li>0 meaning that the wakeup time rqtp is a time interval;</li> </ul>
	<ul> <li>TIMER_ABSTIME, meaning that the wakeup time is an absolute value of the clock clock_id.</li> </ul>
rqtp	address of the wakeup time.
rmtp	address where the remaining time before wakeup will be stored if the service is
	interrupted by a signal.

### Returns

0 on success;

an error number if:

- EPERM, the caller context is invalid;
- ENOTSUP, the specified clock is unsupported;
- EINVAL, the specified wakeup time is invalid;
- EINTR, this service was interrupted by a signal.

6.53 Clocks and timers 263

See Also

Specification.

Referenced by nanosleep().

6.53.2.4 int clock\_settime ( clockid\_t clock\_id, const struct timespec \* tp )

Set the specified clock.

This allow setting the CLOCK\_REALTIME clock.

**Parameters** 

clock_id	the id of the clock to be set, only CLOCK_REALTIME is supported.
tp	the address of a struct timespec specifying the new date.

## Return values

0	on success;
-1	with errno set if:
	<ul> <li>EINVAL, clock_id is not CLOCK_REALTIME;</li> </ul>
	<ul> <li>EINVAL, the date specified by tp is invalid.</li> </ul>

## See Also

Specification.

6.53.2.5 int nanosleep ( const struct timespec \* rqtp, struct timespec \* rmtp )

Sleep some amount of time.

This service suspends the calling thread until the wakeup time specified by *rqtp*, or a signal is delivered. The wakeup time is specified as a time interval.

If this service is interrupted by a signal and *rmtp* is not *NULL*, the time remaining until the specified wakeup time is returned at the address *rmtp*.

The resolution of this service is one system clock tick.

# **Parameters**

rqtp	address of the wakeup time.
rmtp	address where the remaining time before wakeup will be stored if the service is
	interrupted by a signal.

# Return values

0	on success;
-1	with errno set if:
	• EPERM, the caller context is invalid;
	<ul> <li>EINVAL, the specified wakeup time is invalid;</li> </ul>
	<ul> <li>EINTR, this service was interrupted by a signal.</li> </ul>

See Also

Specification.

References clock\_nanosleep().

```
6.53.2.6 int timer_create ( clockid_t clockid, const struct sigevent *__restrict__ evp, timer_t *__restrict__ timerid )
```

Create a timer.

This service creates a timer based on the clock *clockid*.

If *evp* is not *NULL*, it describes the notification mechanism used on timer expiration. Only thread-directed notification is supported (evp->sigev\_notify set to *SIGEV\_THREAD\_ID*).

If evp is NULL, the current Cobalt thread will receive the notifications with signal SIGALRM.

The recipient thread is delivered notifications when it calls any of the sigwait(), sigtimedwait() or sigwait-info() services.

If this service succeeds, an identifier for the created timer is returned at the address *timerid*. The timer is unarmed until started with the timer settime() service.

## **Parameters**

clockid	clock used as a timing base;
evp	description of the asynchronous notification to occur when the timer expires;
timerid	address where the identifier of the created timer will be stored on success.

### Return values

0	on success;
-1	with errno set if:
	• EINVAL, the clock <i>clockid</i> is invalid;
	<ul> <li>EINVAL, the member sigev_notify of the sigevent structure at the address evp is not SIGEV_THREAD_ID;</li> </ul>
	<ul> <li>EINVAL, the member sigev_signo of the sigevent structure is an invalid signal number;</li> </ul>
	<ul> <li>EAGAIN, the maximum number of timers was exceeded, recompile with a larger value.</li> </ul>

See Also

Specification.

Referenced by pthread\_make\_periodic\_np().

6.53.2.7 int timer\_delete ( timer\_t timerid )

Delete a timer object.

This service deletes the timer timerid.

6.53 Clocks and timers 265

### **Parameters**

timerid	identifier of the timer to be removed;

## Return values

0	on success;
-1	with errno set if:
	EINVAL, timerid is invalid;
	EPERM, the timer timerid does not belong to the current process.

# See Also

Specification.

6.53.2.8 int timer\_getoverrun ( timer\_t timerid )

Get expiration overruns count since the most recent timer expiration signal delivery.

This service returns *timerid* expiration overruns count since the most recent timer expiration signal delivery. If this count is more than *DELAYTIMER\_MAX* expirations, *DELAYTIMER\_MAX* is returned.

### **Parameters**

	Tr
timoria	l Imor identitior
uniena	limer identifier.
•	

# Returns

the overruns count on success;

- -1 with errno set if:
  - EINVAL, timerid is invalid;
  - EPERM, the timer timerid does not belong to the current process.

# See Also

Specification.

6.53.2.9 int timer\_gettime ( timer\_t timerid, struct itimerspec \* value )

Get timer next expiration date and reload value.

This service stores, at the address *value*, the expiration date (member *it\_value*) and reload value (member *it\_interval*) of the timer *timerid*. The values are returned as time intervals, and as multiples of the system clock tick duration (see note in section Clocks and timers services for details on the duration of the system clock tick). If the timer was not started, the returned members *it\_value* and *it\_interval* of *value* are zero.

### **Parameters**

timerid	timer identifier;

valuo	address where the timer expiration date and reload value are stored on success.
value	address where the timer expiration date and reload value are stored on success.

### Return values

0	on success;
-1	with errno set if:
	<ul> <li>EINVAL, timerid is invalid. For timerid to be valid, it must belong to the current process.</li> </ul>

### See Also

Specification.

6.53.2.10 timer\_settime ( timer\_t timerid, int flags, const struct itimerspec \*\_\_restrict\_\_ value, struct itimerspec \*\_\_restrict\_\_ ovalue )

Start or stop a timer.

This service sets a timer expiration date and reload value of the timer *timerid*. If *ovalue* is not *NULL*, the current expiration date and reload value are stored at the address *ovalue* as with timer\_gettime().

If the member *it\_value* of the **itimerspec** structure at *value* is zero, the timer is stopped, otherwise the timer is started. If the member *it\_interval* is not zero, the timer is periodic. The current thread must be a Cobalt thread (created with pthread\_create()) and will be notified via signal of timer expirations. Note that these notifications will cause user-space threads to switch to secondary mode.

When starting the timer, if *flags* is TIMER\_ABSTIME, the expiration value is interpreted as an absolute date of the clock passed to the timer\_create() service. Otherwise, the expiration value is interpreted as a time interval.

Expiration date and reload value are rounded to an integer count of nanoseconds.

## Parameters

time	erid	identifier of the timer to be started or stopped;
fl	ags	one of 0 or TIMER_ABSTIME;
Vá	alue	address where the specified timer expiration date and reload value are read;
ova	alue	address where the specified timer previous expiration date and reload value are
		stored if not NULL.

# Return values

0	on success;
-1	with errno set if:
	<ul> <li>EINVAL, the specified timer identifier, expiration date or reload value is invalid. For timerid to be valid, it must belong to the cur- rent process.</li> </ul>

### See Also

Specification.

Referenced by pthread\_make\_periodic\_np().

6.54 Condition variables 267

# 6.54 Condition variables

Cobalt/POSIX condition variable services.

Collaboration diagram for Condition variables:



## **Functions**

int pthread\_cond\_init (pthread\_cond\_t \*cond, const pthread\_condattr\_t \*attr)

• int pthread\_cond\_destroy (pthread\_cond\_t \*cond)

Destroy a condition variable.

Initialize a condition variable.

int pthread\_cond\_wait (pthread\_cond\_t \*cond, pthread\_mutex\_t \*mutex)

Wait on a condition variable.

 int pthread\_cond\_timedwait (pthread\_cond\_t \*cond, pthread\_mutex\_t \*mutex, const struct timespec \*abstime)

Wait a bounded time on a condition variable.

int pthread\_cond\_signal (pthread\_cond\_t \*cond)

Signal a condition variable.

int pthread\_cond\_broadcast (pthread\_cond\_t \*cond)

Broadcast a condition variable.

int pthread\_condattr\_init (pthread\_condattr\_t \*attr)

Initialize a condition variable attributes object.

int pthread\_condattr\_destroy (pthread\_condattr\_t \*attr)

Destroy a condition variable attributes object.

int pthread\_condattr\_getclock (const pthread\_condattr\_t \*attr, clockid\_t \*clk\_id)

Get the clock selection attribute from a condition variable attributes object.

int pthread\_condattr\_setclock (pthread\_condattr\_t \*attr, clockid\_t clk\_id)

Set the clock selection attribute of a condition variable attributes object.

int pthread\_condattr\_getpshared (const pthread\_condattr\_t \*attr, int \*pshared)

Get the process-shared attribute from a condition variable attributes object.

• int pthread condattr setpshared (pthread condattr t \*attr, int pshared)

Set the process-shared attribute of a condition variable attributes object.

# 6.54.1 Detailed Description

Cobalt/POSIX condition variable services. A condition variable is a synchronization object that allows threads to suspend execution until some predicate on shared data is satisfied. The basic operations on conditions are: signal the condition (when the predicate becomes true), and wait for the condition, suspending the thread execution until another thread signals the condition.

268 Module Documentation

A condition variable must always be associated with a mutex, to avoid the race condition where a thread prepares to wait on a condition variable and another thread signals the condition just before the first thread actually waits on it.

Before it can be used, a condition variable has to be initialized with <a href="mailto:phito:ntm;">phito:phi

Note that only pthread\_cond\_init() may be used to initialize a condition variable, using the static initializer PTHREAD COND INITIALIZER is not supported.

## 6.54.2 Function Documentation

6.54.2.1 int pthread\_cond\_broadcast ( pthread\_cond\_t \* cond )

Broadcast a condition variable.

This service unblocks all threads blocked on the condition variable cnd.

**Parameters** 

cond the condition variable to be signalled.

### Returns

0 on succes.

an error number if:

- EINVAL, the condition variable is invalid;
- EPERM, the condition variable is not process-shared and does not belong to the current process.

See Also

Specification.

Referenced by rt\_cond\_broadcast().

6.54.2.2 int pthread\_cond\_destroy ( pthread\_cond\_t \* cond )

Destroy a condition variable.

This service destroys the condition variable *cond*, if no thread is currently blocked on it. The condition variable becomes invalid for all condition variable services (they all return the EINVAL error) except <a href="pthread\_cond\_init(">pthread\_cond\_init()</a>).

**Parameters** 

cond the condition variable to be destroyed.

# Returns

0 on succes,

an error number if:

- EINVAL, the condition variable cond is invalid;
- EPERM, the condition variable is not process-shared and does not belong to the current process;
- EBUSY, some thread is currently using the condition variable.

6.54 Condition variables 269

See Also

Specification.

Referenced by rt\_cond\_create(), and rt\_cond\_delete().

6.54.2.3 int pthread\_cond\_init ( pthread\_cond\_t \* cond, const pthread\_condattr\_t \* attr )

Initialize a condition variable.

This service initializes the condition variable *cond*, using the condition variable attributes object *attr*. If *attr* is *NULL* or this service is called from user-space, default attributes are used (see <a href="pthread\_condattr-init">pthread\_condattr-init()</a>).

### **Parameters**

cond	the condition variable to be initialized;
attr	the condition variable attributes object.

### Returns

0 on succes,

an error number if:

- EINVAL, the condition variable attributes object attr is invalid or uninitialized;
- EBUSY, the condition variable cond was already initialized;
- ENOMEM, insufficient memory exists in the system heap to initialize the condition variable, increase CONFIG\_XENO\_OPT\_SYS\_HEAPSZ.

See Also

Specification.

References pthread condattr getclock(), and pthread condattr getpshared().

Referenced by rt\_cond\_create().

6.54.2.4 int pthread\_cond\_signal ( pthread\_cond\_t \* cond )

Signal a condition variable.

This service unblocks one thread blocked on the condition variable cnd.

If more than one thread is blocked on the specified condition variable, the highest priority thread is unblocked.

**Parameters** 

cond the condition variable to be signalled.
--

## Returns

0 on succes,

an error number if:

- EINVAL, the condition variable is invalid;
- EPERM, the condition variable is not process-shared and does not belong to the current process.

See Also

Specification.

Referenced by rt\_cond\_signal().

6.54.2.5 int pthread\_cond\_timedwait ( pthread\_cond\_t \* cond, pthread\_mutex\_t \* mutex, const struct timespec \* abstime )

Wait a bounded time on a condition variable.

This service is equivalent to <a href="mailto:pthread\_cond\_wait">pthread\_cond\_wait()</a>, except that the calling thread remains blocked on the condition variable *cnd* only until the timeout specified by *abstime* expires.

The timeout *abstime* is expressed as an absolute value of the *clock* attribute passed to pthread\_cond\_init(). By default, *CLOCK\_REALTIME* is used.

## **Parameters**

cond	the condition variable to wait for;
mutex	the mutex associated with <i>cnd</i> ;
abstime	the timeout, expressed as an absolute value of the clock attribute passed to pthread-
	_cond_init().

## Returns

0 on success.

an error number if:

- EPERM, the caller context is invalid;
- EPERM, the specified condition variable is not process-shared and does not belong to the current process;
- EINVAL, the specified condition variable, mutex or timeout is invalid;
- EINVAL, another thread is currently blocked on *cnd* using another mutex than *mx*;
- EPERM, the specified mutex is not owned by the caller:
- ETIMEDOUT, the specified timeout expired.

## See Also

Specification.

Referenced by rt cond wait timed().

6.54.2.6 int pthread cond wait ( pthread cond t \* cond, pthread mutex t \* mutex )

Wait on a condition variable.

This service atomically unlocks the mutex mx, and block the calling thread until the condition variable cnd is signalled using pthread\_cond\_signal() or pthread\_cond\_broadcast(). When the condition is signaled, this service re-acquire the mutex before returning.

Spurious wakeups occur if a signal is delivered to the blocked thread, so, an application should not assume that the condition changed upon successful return from this service.

Even if the mutex mx is recursive and its recursion count is greater than one on entry, it is unlocked before blocking the caller, and the recursion count is restored once the mutex is re-acquired by this service before returning.

Once a thread is blocked on a condition variable, a dynamic binding is formed between the condition vairable cnd and the mutex mx; if another thread calls this service specifying cnd as a condition variable but another mutex than mx, this service returns immediately with the EINVAL status.

This service is a cancellation point for Xenomai POSIX skin threads (created with the <a href="https://pubm.create">pthread\_create()</a>) service). When such a thread is cancelled while blocked in a call to this service, the mutex mx is re-acquired before the cancellation cleanup handlers are called.

6.54 Condition variables 271

## **Parameters**

cond	the condition variable to wait for;
mutex	the mutex associated with <i>cnd</i> .

### Returns

0 on success,

an error number if:

- EPERM, the caller context is invalid;
- EINVAL, the specified condition variable or mutex is invalid;
- EPERM, the specified condition variable is not process-shared and does not belong to the current process;
- EINVAL, another thread is currently blocked on *cnd* using another mutex than *mx*;
- EPERM, the specified mutex is not owned by the caller.

### See Also

Specification.

Referenced by rt\_cond\_wait\_timed().

6.54.2.7 int pthread\_condattr\_destroy ( pthread\_condattr\_t \* attr )

Destroy a condition variable attributes object.

This service destroys the condition variable attributes object attr. The object becomes invalid for all condition variable services (they all return EINVAL) except pthread\_condattr\_init().

# Parameters

attr	the initialized mutex attributes object to be destroyed.

## Returns

0 on success;

an error number if:

• EINVAL, the mutex attributes object attr is invalid.

### See Also

Specification.

Referenced by rt cond create().

6.54.2.8 int pthread\_condattr\_getclock ( const pthread\_condattr\_t \* attr, clockid\_t \* clk\_id )

Get the clock selection attribute from a condition variable attributes object.

This service stores, at the address *clk\_id*, the value of the *clock* attribute in the condition variable attributes object *attr*.

See <a href="pthread\_cond\_timedwait">pthread\_cond\_timedwait</a>() documentation for a description of the effect of this attribute on a condition variable. The clock ID returned is <a href="clock-real-returned">CLOCK\_REALTIME</a> or <a href="clock-real-returned">CLOCK\_MONOTONIC</a>.

## **Parameters**

attr	an initialized condition variable attributes object,
clk_id	address where the <i>clock</i> attribute value will be stored on success.

# Returns

0 on success, an error number if:

• EINVAL, the attribute object attr is invalid.

### See Also

Specification.

Referenced by pthread cond init().

6.54.2.9 int pthread condattr getpshared ( const pthread condattr t \* attr, int \* pshared )

Get the process-shared attribute from a condition variable attributes object.

This service stores, at the address *pshared*, the value of the *pshared* attribute in the condition variable attributes object *attr*.

The *pshared* attribute may only be one of *PTHREAD\_PROCESS\_PRIVATE* or *PTHREAD\_PROCESS\_SHARED*. See pthread\_condattr\_setpshared() for the meaning of these two constants.

### **Parameters**

attr	an initialized condition variable attributes object.
pshared	address where the value of the <i>pshared</i> attribute will be stored on success.

## Returns

0 on success, an error number if:

- EINVAL, the pshared address is invalid;
- EINVAL, the condition variable attributes object attr is invalid.

## See Also

Specification.

Referenced by pthread\_cond\_init().

6.54.2.10 int pthread\_condattr\_init ( pthread\_condattr\_t \* attr )

Initialize a condition variable attributes object.

This services initializes the condition variable attributes object *attr* with default values for all attributes. Default value are:

- for the clock attribute, CLOCK\_REALTIME;
- for the pshared attribute PTHREAD\_PROCESS\_PRIVATE.

If this service is called specifying a condition variable attributes object that was already initialized, the attributes object is reinitialized.

6.54 Condition variables 273

## **Parameters**

the condition		

### Returns

0 on success;

an error number if:

• ENOMEM, the condition variable attribute object pointer attr is NULL.

## See Also

Specification.

Referenced by rt\_cond\_create().

6.54.2.11 int pthread\_condattr\_setclock ( pthread\_condattr\_t \* attr, clockid\_t clk\_id )

Set the clock selection attribute of a condition variable attributes object.

This service set the *clock* attribute of the condition variable attributes object attr.

See <a href="pthread\_cond\_timedwait">pthread\_cond\_timedwait</a>() documentation for a description of the effect of this attribute on a condition variable.

## **Parameters**

attr	an initialized condition variable attributes object,
clk_id	value of the <i>clock</i> attribute, may be <i>CLOCK_REALTIME</i> or <i>CLOCK_MONOTONIC</i> .

### Returns

0 on success,

an error number if:

- EINVAL, the condition variable attributes object attr is invalid;
- EINVAL, the value of *clk\_id* is invalid for the *clock* attribute.

# See Also

Specification.

Referenced by rt\_cond\_create().

6.54.2.12 int pthread\_condattr\_setpshared ( pthread\_condattr\_t \* attr, int pshared )

Set the process-shared attribute of a condition variable attributes object.

This service set the *pshared* attribute of the condition variable attributes object attr.

# **Parameters**

attr	an initialized condition variable attributes object.	
pshared	value of the <i>pshared</i> attribute, may be one of:	
	<ul> <li>PTHREAD_PROCESS_PRIVATE, meaning that a condition variable created with the attributes object attr will only be accessible by threads within the same process as the thread that initialized the condition variable;</li> </ul>	
	<ul> <li>PTHREAD_PROCESS_SHARED, meaning that a condition variable created with the attributes object attr will be accessible by any thread that has access to the memory where the condition variable is allocated.</li> </ul>	

274 Module Documentation

# Returns

0 on success,

an error status if:

- EINVAL, the condition variable attributes object attr is invalid;
- EINVAL, the value of *pshared* is invalid.

# See Also

Specification.


Referenced by rt\_cond\_create().

6.55 POSIX interface 275

# 6.55 POSIX interface

The Cobalt/POSIX interface is an implementation of a subset of the Single Unix specification over the Cobalt core.

Collaboration diagram for POSIX interface:

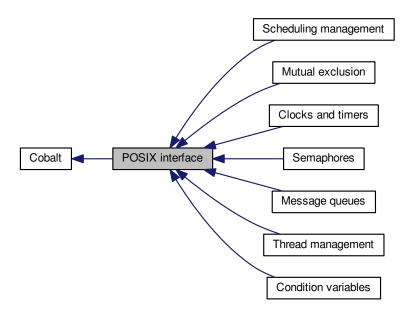

# Modules

· Clocks and timers

Cobalt/POSIX clock and timer services.

Condition variables

Cobalt/POSIX condition variable services.

Message queues

Cobalt/POSIX message queue services.

Mutual exclusion

Cobalt/POSIX mutual exclusion services.

Semaphores

Cobalt/POSIX semaphore services.

Thread management

Cobalt/POSIX thread management services.

Scheduling management

Cobalt/POSIX scheduling management services.

# 6.55.1 Detailed Description

The Cobalt/POSIX interface is an implementation of a subset of the <u>Single Unix specification</u> over the Cobalt core.

# 6.56 Message queues

Cobalt/POSIX message queue services.

Collaboration diagram for Message queues:



## **Functions**

• mqd\_t mq\_open (const char \*name, int oflags,...)

Open a message queue.

• int mq\_close (mqd\_t mqd)

Close a message queue.

• int mq\_unlink (const char \*name)

Unlink a message queue.

int mq\_getattr (mqd\_t mqd, struct mq\_attr \*attr)

Get message queue attributes.

int mq\_setattr (mqd\_t mqd, const struct mq\_attr \*\_\_restrict\_\_ attr, struct mq\_attr \*\_\_restrict\_\_ oattr)

Set message queue attributes.

• int mq send (mqd t q, const char \*buffer, size t len, unsigned prio)

Send a message to a message queue.

 int mq\_timedsend (mqd\_t q, const char \*buffer, size\_t len, unsigned prio, const struct timespec \*timeout)

Attempt, during a bounded time, to send a message to a message queue.

ssize\_t mq\_receive (mqd\_t q, char \*buffer, size\_t len, unsigned \*prio)

Receive a message from a message queue.

 ssize\_t mq\_timedreceive (mqd\_t q, char \*\_\_restrict\_\_ buffer, size\_t len, unsigned \*\_\_restrict\_\_ prio, const struct timespec \*\_\_restrict\_\_ timeout)

Attempt, during a bounded time, to receive a message from a message queue.

int mq\_notify (mqd\_t mqd, const struct sigevent \*evp)

Enable notification on message arrival.

# 6.56.1 Detailed Description

Cobalt/POSIX message queue services. A message queue allow exchanging data between real-time threads. For a POSIX message queue, maximum message length and maximum number of messages are fixed when it is created with mq\_open().

# 6.56.2 Function Documentation

6.56.2.1 int mq\_close ( mqd\_t mqd )

Close a message queue.

This service closes the message queue descriptor *mqd*. The message queue is destroyed only when all open descriptors are closed, and when unlinked with a call to the mq\_unlink() service.

### **Parameters**

mqd	message queue descriptor.

### Return values

0	on success;
-1	with errno set if:
	<ul> <li>EBADF, mqd is an invalid message queue descriptor;</li> <li>EPERM, the caller context is invalid.</li> </ul>

### See Also

Specification.

6.56.2.2 int mq\_getattr ( mqd\_t mqd, struct mq\_attr \* attr )

Get message queue attributes.

This service stores, at the address attr, the attributes of the messages queue descriptor mqd.

The following attributes are set:

- mq\_flags, flags of the message queue descriptor mqd;
- mq\_maxmsg, maximum number of messages in the message queue;
- mq\_msgsize, maximum message size;
- mq\_curmsgs, number of messages currently in the queue.

# **Parameters**

mqd	message queue descriptor;
attr	address where the message queue attributes will be stored on success.

# Return values

0	on success;
-1	with errno set if:
	• EBADF, <i>mqd</i> is not a valid descriptor.

# See Also

Specification.

6.56.2.3 int mq\_notify ( mqd\_t mqd, const struct sigevent \* evp )

Enable notification on message arrival.

If *evp* is not *NULL* and is the address of a **sigevent** structure with the *sigev\_notify* member set to SI-GEV\_SIGNAL, the current thread will be notified by a signal when a message is sent to the message queue *mqd*, the queue is empty, and no thread is blocked in call to mq\_receive() or mq\_timedreceive(). After the notification, the thread is unregistered.

If evp is NULL or the sigev\_notify member is SIGEV\_NONE, the current thread is unregistered.

Only one thread may be registered at a time.

If the current thread is not a Cobalt thread (created with pthread create()), this service fails.

Note that signals sent to user-space Cobalt threads will cause them to switch to secondary mode.

### **Parameters**

mqd	message queue descriptor;
evp	pointer to an event notification structure.

## Return values

0	on success;
-1	with errno set if:
	• EINVAL, <i>evp</i> is invalid;
	<ul> <li>EPERM, the caller context is invalid;</li> </ul>
	<ul> <li>EBADF, mqd is not a valid message queue descriptor;</li> </ul>
	<ul> <li>EBUSY, another thread is already registered.</li> </ul>

# See Also

Specification.

6.56.2.4 mqd\_t mq\_open ( const char \* name, int oflags, ... )

Open a message queue.

This service establishes a connection between the message queue named *name* and the calling context (kernel-space as a whole, or user-space process).

One of the following values should be set in oflags:

- O\_RDONLY, meaning that the returned queue descriptor may only be used for receiving messages;
- O\_WRONLY, meaning that the returned queue descriptor may only be used for sending messages;
- O\_RDWR, meaning that the returned queue descriptor may be used for both sending and receiving messages.

If no message queue named name exists, and oflags has the  $O\_CREAT$  bit set, the message queue is created by this function, taking two more arguments:

- a mode argument, of type mode\_t, currently ignored;
- an attr argument, pointer to an mq\_attr structure, specifying the attributes of the new message queue.

If oflags has the two bits O\_CREAT and O\_EXCL set and the message queue alread exists, this service fails.

If the O\_NONBLOCK bit is set in *oflags*, the mq\_send(), mq\_receive(), mq\_timedsend() and mq\_timedreceive() services return -1 with *errno* set to EAGAIN instead of blocking their caller.

The following arguments of the **mq\_attr** structure at the address *attr* are used when creating a message queue:

- mq\_maxmsg is the maximum number of messages in the queue (128 by default);
- mg msgsize is the maximum size of each message (128 by default).

*name* may be any arbitrary string, in which slashes have no particular meaning. However, for portability, using a name which starts with a slash and contains no other slash is recommended.

## **Parameters**

name	name of the message queue to open;
oflags	flags.

### Returns

a message queue descriptor on success;

- -1 with errno set if:
  - ENAMETOOLONG, the length of the name argument exceeds 64 characters;
  - EEXIST, the bits O\_CREAT and O\_EXCL were set in *oflags* and the message queue already exists;
  - ENOENT, the bit O\_CREAT is not set in oflags and the message queue does not exist;
  - ENOSPC, allocation of system memory failed, or insufficient memory exists in the system heap to create the queue, try increasing CONFIG\_XENO\_OPT\_SYS\_HEAPSZ;
  - EPERM, attempting to create a message queue from an invalid context;
  - EINVAL, the attr argument is invalid;
  - EMFILE, too many descriptors are currently open.

### See Also

Specification.

```
6.56.2.5 ssize t mg receive ( mgd t g, char * buffer, size t len, unsigned * prio )
```

Receive a message from a message queue.

If the message queue *fd* is not empty and if *len* is greater than the *mq\_msgsize* of the message queue, this service copies, at the address *buffer*, the queued message with the highest priority.

If the queue is empty and the flag *O\_NONBLOCK* is not set for the descriptor *fd*, the calling thread is suspended until some message is sent to the queue. If the queue is empty and the flag *O\_NONBLOCK* is set for the descriptor *fd*, this service returns immediately a value of -1 with *errno* set to EAGAIN.

## **Parameters**

	q	the queue descriptor;
--	---	-----------------------

buffer	the address where the received message will be stored on success;
len	buffer length;
prio	address where the priority of the received message will be stored on success.

# Returns

the message length, and copy a message at the address buffer on success;

- -1 with no message unqueued and errno set if:
  - EBADF, fd is not a valid descriptor open for reading;
  - EMSGSIZE, the length *len* is lesser than the message queue *mq\_msgsize* attribute;
  - EAGAIN, the queue is empty, and the flag O\_NONBLOCK is set for the descriptor fd;
  - EPERM, the caller context is invalid;
  - EINTR, the service was interrupted by a signal.

## See Also

Specification.

6.56.2.6 int mq\_send ( mqd\_t q, const char \* buffer, size\_t len, unsigned prio )

Send a message to a message queue.

If the message queue *fd* is not full, this service sends the message of length *len* pointed to by the argument *buffer*, with priority *prio*. A message with greater priority is inserted in the queue before a message with lower priority.

If the message queue is full and the flag  $O\_NONBLOCK$  is not set, the calling thread is suspended until the queue is not full. If the message queue is full and the flag  $O\_NONBLOCK$  is set, the message is not sent and the service returns immediately a value of -1 with errno set to EAGAIN.

### **Parameters**

q	message queue descriptor;
buffer	pointer to the message to be sent;
len	length of the message;
prio	priority of the message.

# Returns

0 and send a message on success;

- -1 with no message sent and errno set if:
  - EBADF, fd is not a valid message queue descriptor open for writing;
  - EMSGSIZE, the message length *len* exceeds the *mq\_msgsize* attribute of the message queue;
  - EAGAIN, the flag O NONBLOCK is set for the descriptor fd and the message queue is full;
  - EPERM, the caller context is invalid;
  - EINTR, the service was interrupted by a signal.

# See Also

Specification.

```
6.56.2.7 int mq_setattr ( mqd_t mqd, const struct mq_attr *__restrict__ attr, struct mq_attr *__restrict__ oattr )
```

Set message queue attributes.

This service sets the flags of the mqd descriptor to the value of the member  $mq\_flags$  of the  $mq\_attr$  structure pointed to by attr.

The previous value of the message queue attributes are stored at the address oattr if it is not NULL.

Only setting or clearing the O\_NONBLOCK flag has an effect.

### **Parameters**

mqd	message queue descriptor;
attr	pointer to new attributes (only <i>mq_flags</i> is used);
oattr	if not NULL, address where previous message queue attributes will be stored on
	success.

### Return values

0	on success;
-1	with errno set if:
	• EBADF, <i>mqd</i> is not a valid message queue descriptor.

### See Also

Specification.

```
6.56.2.8 ssize_t mq_timedreceive ( mqd_t q, char *__restrict__ buffer, size_t len, unsigned *__restrict__ prio, const struct timespec *__restrict__ timeout )
```

Attempt, during a bounded time, to receive a message from a message queue.

This service is equivalent to mq\_receive(), except that if the flag *O\_NONBLOCK* is not set for the descriptor *fd* and the message queue is empty, the calling thread is only suspended until the timeout *abs timeout* expires.

## **Parameters**

q	the queue descriptor;
buffer	the address where the received message will be stored on success;
len	buffer length;
prio	address where the priority of the received message will be stored on success.
timeout	the timeout, expressed as an absolute value of the CLOCK_REALTIME clock.

# Returns

the message length, and copy a message at the address buffer on success;

- -1 with no message unqueued and errno set if:
  - EBADF, fd is not a valid descriptor open for reading;
  - EMSGSIZE, the length *len* is lesser than the message queue *mq\_msgsize* attribute;
  - EAGAIN, the queue is empty, and the flag O NONBLOCK is set for the descriptor fd;
  - EPERM, the caller context is invalid;
  - EINTR, the service was interrupted by a signal;
  - ETIMEDOUT, the specified timeout expired.

Module Documentation

See Also

282

Specification.

6.56.2.9 int mq\_timedsend ( mqd\_t q, const char \* buffer, size\_t len, unsigned prio, const struct timespec \* timeout )

Attempt, during a bounded time, to send a message to a message queue.

This service is equivalent to mq\_send(), except that if the message queue is full and the flag *O\_NONB-LOCK* is not set for the descriptor *fd*, the calling thread is only suspended until the timeout specified by *abs timeout* expires.

## **Parameters**

q	message queue descriptor;
buffer	pointer to the message to be sent;
len	length of the message;
prio	priority of the message;
timeout	the timeout, expressed as an absolute value of the CLOCK_REALTIME clock.

### Returns

0 and send a message on success;

- -1 with no message sent and errno set if:
  - EBADF, fd is not a valid message queue descriptor open for writing;
  - EMSGSIZE, the message length exceeds the *mq\_msgsize* attribute of the message queue;
  - EAGAIN, the flag O NONBLOCK is set for the descriptor fd and the message queue is full;
  - EPERM, the caller context is invalid;
  - ETIMEDOUT, the specified timeout expired;
  - EINTR, the service was interrupted by a signal.

See Also

Specification.

6.56.2.10 int mg unlink (const char \* name)

Unlink a message queue.

This service unlinks the message queue named *name*. The message queue is not destroyed until all queue descriptors obtained with the mq\_open() service are closed with the mq\_close() service. However, after a call to this service, the unlinked queue may no longer be reached with the mq\_open() service.

## **Parameters**

name   name of the message queue to be unlinked.
--

# Return values

0	on success;
-1	with errno set if:
	• EPERM, the caller context is invalid;
	<ul> <li>ENAMETOOLONG, the length of the name argument exceeds 64 characters;</li> </ul>
	<ul> <li>ENOENT, the message queue does not exist.</li> </ul>

# See Also

Specification.

# 6.57 Mutual exclusion

Cobalt/POSIX mutual exclusion services.

Collaboration diagram for Mutual exclusion:



## **Functions**

- int pthread\_mutex\_init (pthread\_mutex\_t \*mutex, const pthread\_mutexattr\_t \*attr)
   Initialize a mutex.
- int pthread\_mutex\_destroy (pthread\_mutex\_t \*mutex)

Destroy a mutex.

int pthread\_mutex\_lock (pthread\_mutex\_t \*mutex)

Lock a mutex.

• int pthread\_mutex\_timedlock (pthread\_mutex\_t \*mutex, const struct timespec \*to)

Attempt, during a bounded time, to lock a mutex.

int pthread mutex trylock (pthread mutex t \*mutex)

Attempt to lock a mutex.

int pthread\_mutex\_unlock (pthread\_mutex\_t \*mutex)

Unlock a mutex.

• int pthread\_mutexattr\_init (pthread\_mutexattr\_t \*attr)

Initialize a mutex attributes object.

• int pthread mutexattr destroy (pthread mutexattr t \*attr)

Destroy a mutex attributes object.

int pthread\_mutexattr\_gettype (const pthread\_mutexattr\_t \*attr, int \*type)

Get the mutex type attribute from a mutex attributes object.

int pthread\_mutexattr\_settype (pthread\_mutexattr\_t \*attr, int type)

Set the mutex type attribute of a mutex attributes object.

• int pthread\_mutexattr\_getprotocol (const pthread\_mutexattr\_t \*attr, int \*proto)

Get the protocol attribute from a mutex attributes object.

• int pthread\_mutexattr\_setprotocol (pthread\_mutexattr\_t \*attr, int proto)

Set the protocol attribute of a mutex attributes object.

int pthread\_mutexattr\_getpshared (const pthread\_mutexattr\_t \*attr, int \*pshared)

Get the process-shared attribute of a mutex attributes object.

int pthread\_mutexattr\_setpshared (pthread\_mutexattr\_t \*attr, int pshared)

Set the process-shared attribute of a mutex attributes object.

6.57 Mutual exclusion 285

# 6.57.1 Detailed Description

Cobalt/POSIX mutual exclusion services. A mutex is a MUTual EXclusion device, and is useful for protecting shared data structures from concurrent modifications, and implementing critical sections and monitors.

A mutex has two possible states: unlocked (not owned by any thread), and locked (owned by one thread). A mutex can never be owned by two different threads simultaneously. A thread attempting to lock a mutex that is already locked by another thread is suspended until the owning thread unlocks the mutex first.

Before it can be used, a mutex has to be initialized with <a href="mailto:pth:new-reference">pth:new-reference</a> mutex, a mutex has to be initialized with <a href="pth:new-reference">pth:new-reference</a> may be passed to this service, allows to select the features of the created mutex, namely its <a href="mailto:type">type</a> (see <a href="pth:new-reference">pth:new-reference</a> mutexattr\_settype()), the <a href="priority protocol">protocol</a> it uses (see <a href="pth:new-reference">pth:new-reference</a> mutexattr\_settype()), and whether it may be shared between several processes (see <a href="pth:new-reference">pth:new-reference</a> mutexattr\_settype()).

By default, Cobalt mutexes are of the normal type, use no priority protocol and may not be shared between several processes.

Note that only pthread\_mutex\_init() may be used to initialize a mutex, using the static initializer PTHRE-AD\_MUTEX\_INITIALIZER is not supported.

# 6.57.2 Function Documentation

6.57.2.1 int pthread mutex destroy (pthread mutex t \* mutex)

Destroy a mutex.

This service destroys the mutex mx, if it is unlocked and not referenced by any condition variable. The mutex becomes invalid for all mutex services (they all return the EINVAL error) except pthread\_mutex\_init().

**Parameters** 

mutex | the mutex to be destroyed.

# Returns

 $0 \ on \ success, \\$ 

an error number if:

- EINVAL, the mutex *mx* is invalid;
- EPERM, the mutex is not process-shared and does not belong to the current process;
- EBUSY, the mutex is locked, or used by a condition variable.

See Also

Specification.

Referenced by rt mutex delete().

6.57.2.2 int pthread\_mutex\_init ( pthread\_mutex\_t \* mutex, const pthread\_mutexattr\_t \* attr )

Initialize a mutex.

This services initializes the mutex mx, using the mutex attributes object attr. If attr is NULL, default attributes are used (see pthread\_mutexattr\_init()).

#### **Parameters**

mutex	the mutex to be initialized;
attr	the mutex attributes object.

# Returns

0 on success.

an error number if:

- EINVAL, the mutex attributes object attr is invalid or uninitialized;
- EBUSY, the mutex mx was already initialized;
- ENOMEM, insufficient memory exists in the system heap to initialize the mutex, increase CONFIG XENO OPT SYS HEAPSZ.
- EAGAIN, insufficient memory exists in the semaphore heap to initialize the mutex, increase CONFIG\_XENO\_OPT\_SHARED\_HEAPSZ for a process-shared mutex, or CONFG\_XENO\_ OPT\_PRIVATE\_HEAPSZ for a process-private mutex.

### See Also

Specification.

References pthread\_mutexattr\_getprotocol(), pthread\_mutexattr\_getpshared(), and pthread\_mutexattr\_gettype().

Referenced by rt mutex create().

6.57.2.3 int pthread mutex lock ( pthread mutex t \* mutex )

# Lock a mutex.

This service attempts to lock the mutex mx. If the mutex is free, it becomes locked. If it was locked by another thread than the current one, the current thread is suspended until the mutex is unlocked. If it was already locked by the current mutex, the behaviour of this service depends on the mutex type:

- for mutexes of the PTHREAD\_MUTEX\_NORMAL type, this service deadlocks;
- for mutexes of the PTHREAD\_MUTEX\_ERRORCHECK type, this service returns the EDEADLK error number;
- for mutexes of the PTHREAD\_MUTEX\_RECURSIVE type, this service increments the lock recursion count and returns 0.

### **Parameters**

mutex   the mutex to be locked.		mutex	the mutex to be locked.
---------------------------------	--	-------	-------------------------

### Returns

0 on success

an error number if:

- EPERM, the caller context is invalid;
- EINVAL, the mutex mx is invalid;
- EPERM, the mutex is not process-shared and does not belong to the current process;
- EDEADLK, the mutex is of the *PTHREAD\_MUTEX\_ERRORCHECK* type and was already locked by the current thread;
- EAGAIN, the mutex is of the PTHREAD\_MUTEX\_RECURSIVE type and the maximum number of recursive locks has been exceeded.

6.57 Mutual exclusion 287

See Also

Specification.

References XNRELAX, and XNWEAK.

Referenced by rt mutex acquire timed().

6.57.2.4 int pthread\_mutex\_timedlock ( pthread\_mutex\_t \* mutex, const struct timespec \* to )

Attempt, during a bounded time, to lock a mutex.

This service is equivalent to <a href="https://pubm.nih.google-nih

## **Parameters**

mutex	the mutex to be locked;
to	the timeout, expressed as an absolute value of the CLOCK_REALTIME clock.

# Returns

0 on success:

an error number if:

- EPERM, the caller context is invalid;
- EINVAL, the mutex mx is invalid;
- EPERM, the mutex is not process-shared and does not belong to the current process;
- ETIMEDOUT, the mutex could not be locked and the specified timeout expired;
- EDEADLK, the mutex is of the *PTHREAD\_MUTEX\_ERRORCHECK* type and the mutex was already locked by the current thread;
- EAGAIN, the mutex is of the *PTHREAD\_MUTEX\_RECURSIVE* type and the maximum number of recursive locks has been exceeded.

See Also

Specification.

References XNRELAX, and XNWEAK.

Referenced by rt\_mutex\_acquire\_timed().

6.57.2.5 int pthread\_mutex\_trylock ( pthread\_mutex\_t \* mutex )

Attempt to lock a mutex.

This service is equivalent to pthread\_mutex\_lock(), except that if the mutex mx is locked by another thread than the current one, this service returns immediately.

**Parameters** 

mutex	the mutex to be locked.

### Returns

0 on success;

an error number if:

- EPERM, the caller context is invalid;
- EINVAL, the mutex is invalid;
- EPERM, the mutex is not process-shared and does not belong to the current process;
- EBUSY, the mutex was locked by another thread than the current one;
- EAGAIN, the mutex is recursive, and the maximum number of recursive locks has been exceeded.

### See Also

Specification.

References XNRELAX, and XNWEAK.

Referenced by rt\_mutex\_acquire\_timed(), and rt\_mutex\_inquire().

6.57.2.6 int pthread mutex unlock ( pthread mutex t \* mutex )

Unlock a mutex.

This service unlocks the mutex mx. If the mutex is of the  $PTHREAD\_MUTEX\_RECURSIVE$  type and the locking recursion count is greater than one, the lock recursion count is decremented and the mutex remains locked.

Attempting to unlock a mutex which is not locked or which is locked by another thread than the current one yields the EPERM error, whatever the mutex *type* attribute.

**Parameters** 

mutex | the mutex to be released.

### Returns

0 on success:

an error number if:

- EPERM, the caller context is invalid;
- EINVAL, the mutex mx is invalid;
- EPERM, the mutex was not locked by the current thread.

# See Also

Specification.

References XNWEAK.

Referenced by rt\_mutex\_inquire(), and rt\_mutex\_release().

6.57.2.7 int pthread\_mutexattr\_destroy ( pthread\_mutexattr\_t \* attr )

Destroy a mutex attributes object.

This service destroys the mutex attributes object *attr*. The object becomes invalid for all mutex services (they all return EINVAL) except pthread mutexattr init().

6.57 Mutual exclusion 289

### **Parameters**

attr | the initialized mutex attributes object to be destroyed.

## Returns

0 on success;

an error number if:

• EINVAL, the mutex attributes object attr is invalid.

## See Also

Specification.

Referenced by rt\_mutex\_create().

6.57.2.8 int pthread\_mutexattr\_getprotocol ( const pthread\_mutexattr\_t \* attr, int \* proto )

Get the protocol attribute from a mutex attributes object.

This service stores, at the address *proto*, the value of the *protocol* attribute in the mutex attributes object *attr*.

The *protcol* attribute may only be one of *PTHREAD\_PRIO\_NONE* or *PTHREAD\_PRIO\_INHERIT*. See <a href="pthread\_mutexattr\_setprotocol">pthread\_mutexattr\_setprotocol</a>() for the meaning of these two constants.

### **Parameters**

attr	an initialized mutex attributes object;
proto	address where the value of the <i>protocol</i> attribute will be stored on success.

## Returns

0 on success,

an error number if:

- EINVAL, the proto address is invalid;
- EINVAL, the mutex attributes object attr is invalid.

## See Also

Specification.

Referenced by pthread\_mutex\_init().

6.57.2.9 int pthread\_mutexattr\_getpshared ( const pthread\_mutexattr\_t \* attr, int \* pshared )

Get the process-shared attribute of a mutex attributes object.

This service stores, at the address *pshared*, the value of the *pshared* attribute in the mutex attributes object *attr*.

The pashared attribute may only be one of PTHREAD\_PROCESS\_PRIVATE or PTHREAD\_PROCES-S\_SHARED. See pthread\_mutexattr\_setpshared() for the meaning of these two constants.

## **Parameters**

	an initialized mutex attributes object;
pshared	address where the value of the <i>pshared</i> attribute will be stored on success.

# Returns

0 on success:

an error number if:

- EINVAL, the pshared address is invalid;
- EINVAL, the mutex attributes object attr is invalid.

## See Also

Specification.

Referenced by pthread\_mutex\_init().

6.57.2.10 int pthread\_mutexattr\_gettype ( const pthread\_mutexattr\_t \* attr, int \* type )

Get the mutex type attribute from a mutex attributes object.

This service stores, at the address *type*, the value of the *type* attribute in the mutex attributes object *attr*.

See <a href="pthread\_mutex\_lock">pthread\_mutex\_unlock</a>() documentations for a description of the values of the <a href="type">type</a> attribute and their effect on a mutex.

### **Parameters**

	an initialized mutex attributes object,
type	address where the <i>type</i> attribute value will be stored on success.

## Returns

0 on sucess,

an error number if:

- EINVAL, the type address is invalid;
- EINVAL, the mutex attributes object attr is invalid.

### See Also

Specification.

Referenced by pthread\_mutex\_init().

6.57.2.11 int pthread\_mutexattr\_init ( pthread\_mutexattr\_t \* attr )

Initialize a mutex attributes object.

This services initializes the mutex attributes object *attr* with default values for all attributes. Default value are :

- for the type attribute, PTHREAD\_MUTEX\_NORMAL;
- for the protocol attribute, PTHREAD\_PRIO\_NONE;
- for the pshared attribute, PTHREAD PROCESS PRIVATE.

If this service is called specifying a mutex attributes object that was already initialized, the attributes object is reinitialized.

6.57 Mutual exclusion 291

#### **Parameters**

attr | the mutex attributes object to be initialized.

#### Returns

0 on success;

an error number if:

• ENOMEM, the mutex attributes object pointer attr is NULL.

#### See Also

Specification.

Referenced by rt\_mutex\_create().

6.57.2.12 int pthread\_mutexattr\_setprotocol ( pthread\_mutexattr\_t \* attr, int proto )

Set the protocol attribute of a mutex attributes object.

This service set the *type* attribute of the mutex attributes object attr.

#### **Parameters**

attr	an initialized mutex attributes object,
proto	value of the <i>protocol</i> attribute, may be one of:
	<ul> <li>PTHREAD_PRIO_NONE, meaning that a mutex created with the attributes object attr will not follow any priority protocol;</li> </ul>
	<ul> <li>PTHREAD_PRIO_INHERIT, meaning that a mutex created with the attributes object attr, will follow the priority inheritance protocol.</li> </ul>

The value PTHREAD\_PRIO\_PROTECT (priority ceiling protocol) is unsupported.

### Returns

0 on success,

an error number if:

- EINVAL, the mutex attributes object attr is invalid;
- ENOTSUP, the value of proto is unsupported;
- EINVAL, the value of proto is invalid.

## See Also

Specification.

Referenced by rt\_mutex\_create().

6.57.2.13 int pthread\_mutexattr\_setpshared ( pthread\_mutexattr\_t \* attr, int pshared )

Set the process-shared attribute of a mutex attributes object.

This service set the *pshared* attribute of the mutex attributes object attr.

attr	an initialized mutex attributes object.
pshared	value of the <i>pshared</i> attribute, may be one of:
	<ul> <li>PTHREAD_PROCESS_PRIVATE, meaning that a mutex created with the attributes object attr will only be accessible by threads within the same process as the thread that initialized the mutex;</li> </ul>
	<ul> <li>PTHREAD_PROCESS_SHARED, meaning that a mutex created with the attributes object attr will be accessible by any thread that has access to the memory where the mutex is allocated.</li> </ul>

#### Returns

0 on success,

an error status if:

- EINVAL, the mutex attributes object attr is invalid;
- EINVAL, the value of pshared is invalid.

#### See Also

Specification.

Referenced by rt\_mutex\_create().

6.57.2.14 int pthread\_mutexattr\_settype ( pthread\_mutexattr\_t \* attr, int type )

Set the mutex type attribute of a mutex attributes object.

This service set the *type* attribute of the mutex attributes object attr.

See <a href="pthread\_mutex\_lock">pthread\_mutex\_unlock</a>() documentations for a description of the values of the <a href="type">type</a> attribute and their effect on a mutex.

The PTHREAD\_MUTEX\_DEFAULT default type is the same as PTHREAD\_MUTEX\_NORMAL. Note that using a Xenomai POSIX skin recursive mutex with a Xenomai POSIX skin condition variable is safe (see pthread\_cond\_wait() documentation).

### **Parameters**

attr	an initialized mutex attributes object,
type	value of the <i>type</i> attribute.

#### Returns

0 on success,

an error number if:

- EINVAL, the mutex attributes object attr is invalid;
- EINVAL, the value of type is invalid for the type attribute.

### See Also

Specification.

Referenced by rt\_mutex\_create().

6.58 Semaphores 293

# 6.58 Semaphores

Cobalt/POSIX semaphore services.

Collaboration diagram for Semaphores:



## **Functions**

int sem\_init (sem\_t \*sem, int pshared, unsigned int value)
 Initialize an unnamed semaphore.

int sem\_destroy (sem\_t \*sem)

Destroy an unnamed semaphore.

int sem\_post (sem\_t \*sem)

Post a semaphore.

int sem\_trywait (sem\_t \*sem)

Attempt to decrement a semaphore.

• int sem\_wait (sem\_t \*sem)

Decrement a semaphore.

• int sem\_timedwait (sem\_t \*sem, const struct timespec \*abs\_timeout)

Attempt to decrement a semaphore with a time limit.

• int sem\_close (sem\_t \*sem)

Close a named semaphore.

int sem\_unlink (const char \*name)

Unlink a named semaphore.

## 6.58.1 Detailed Description

Cobalt/POSIX semaphore services. Semaphores are counters for resources shared between threads. The basic operations on semaphores are: increment the counter atomically, and wait until the counter is non-null and decrement it atomically.

Semaphores have a maximum value past which they cannot be incremented. The macro *SEM\_VALU-E MAX* is defined to be this maximum value.

## 6.58.2 Function Documentation

```
6.58.2.1 int sem close ( sem t * sem )
```

Close a named semaphore.

This service closes the semaphore *sem*. The semaphore is destroyed only when unlinked with a call to the sem\_unlink() service and when each call to sem\_open() matches a call to this service.

When a semaphore is destroyed, the memory it used is returned to the system heap, so that further references to this semaphore are not guaranteed to fail, as is the case for unnamed semaphores.

This service fails if *sem* is an unnamed semaphore.

6.58 Semaphores 295

#### **Parameters**

sem	the semaphore to be closed.

#### Return values

0	on success;
-1	with errno set if:
	<ul> <li>EINVAL, the semaphore sem is invalid or is an unnamed semaphore.</li> </ul>

## See Also

Specification.

6.58.2.2 int sem\_destroy ( sem\_t \* sem )

Destroy an unnamed semaphore.

This service destroys the semaphore *sem*. Threads currently blocked on *sem* are unblocked and the service they called return -1 with *errno* set to EINVAL. The semaphore is then considered invalid by all semaphore services (they all fail with *errno* set to EINVAL) except <u>sem\_init()</u>.

This service fails if sem is a named semaphore.

#### **Parameters**

sem	the semaphore to be destroyed.

#### Return values

always	0 on success. If SEM_WARNDEL was mentioned in sem_init_np(), the semaphore is deleted as requested and a strictly positive value is returned to warn the caller if threads were pending on it, otherwise zero is returned. If SEM_NOBUSYDEL was mentioned in sem_init_np(), sem_destroy() may succeed only if no thread is waiting on the semaphore to delete, otherwise -EBUSY is returned.
-1	with errno set if:
	• EINVAL, the semaphore <i>sem</i> is invalid or a named semaphore;
	<ul> <li>EPERM, the semaphore sem is not process-shared and does not belong to the current process.</li> </ul>
	<ul> <li>EBUSY, a thread is currently waiting on the semaphore sem with SEM_NOBUSYDEL set.</li> </ul>

#### See Also

Specification.

6.58.2.3 int sem\_init ( sem\_t \* sem, int pshared, unsigned int value )

Initialize an unnamed semaphore.

This service initializes the semaphore *sm*, with the value *value*.

This service fails if *sm* is already initialized or is a named semaphore.

sem	the semaphore to be initialized;
pshared	if zero, means that the new semaphore may only be used by threads in the same
	process as the thread calling sem_init(); if non zero, means that the new semaphore may be used by any thread that has access to the memory where the semaphore is allocated.
value	the semaphore initial value.

#### Return values

0	on success,
-1	with errno set if:
	• EBUSY, the semaphore <i>sm</i> was already initialized;
	<ul> <li>ENOSPC, insufficient memory exists in the system heap to initialize the semaphore, increase CONFIG_XENO_OPT_SYS_HEAPSZ;</li> </ul>
	• EINVAL, the <i>value</i> argument exceeds <i>SEM_VALUE_MAX</i> .

#### See Also

Specification.

6.58.2.4 int sem\_post ( sem\_t \* sem )

Post a semaphore.

This service posts the semaphore sem.

If no thread is currently blocked on this semaphore, its count is incremented unless "pulse" mode is enabled for it (see sem\_init\_np(), SEM\_PULSE). If a thread is blocked on the semaphore, the thread heading the wait queue is unblocked.

### **Parameters**

sem   the semaphore to be signaled.
-------------------------------------

### Return values

0	on success;
-1	with errno set if:
	• EINVAL, the specified semaphore is invalid or uninitialized;
	<ul> <li>EPERM, the semaphore sm is not process-shared and does not belong to the current process;</li> </ul>
	• EAGAIN, the semaphore count is SEM_VALUE_MAX.

## See Also

Specification.

6.58.2.5 int sem\_timedwait ( sem\_t \* sem, const struct timespec \* abs\_timeout )

Attempt to decrement a semaphore with a time limit.

6.58 Semaphores

This service is equivalent to sem\_wait(), except that the caller is only blocked until the timeout abs\_-

timeout expires.

sem	the semaphore to be decremented;
abs_timeout	the timeout, expressed as an absolute value of the relevant clock for the semaphore,
	either CLOCK_MONOTONIC if SEM_RAWCLOCK was mentioned via sem_init
	np(), or CLOCK_REALTIME otherwise.

## Return values

0	on success;
-1	with errno set if:
	• EPERM, the caller context is invalid;
	<ul> <li>EINVAL, the semaphore is invalid or uninitialized;</li> </ul>
	<ul> <li>EINVAL, the specified timeout is invalid;</li> </ul>
	<ul> <li>EPERM, the semaphore sm is not process-shared and does not belong to the current process;</li> </ul>
	<ul> <li>EINTR, the caller was interrupted by a signal while blocked in this service;</li> </ul>
	<ul> <li>ETIMEDOUT, the semaphore could not be decremented and the specified timeout expired.</li> </ul>

## See Also

Specification.

References sem\_trywait().

6.58.2.6 int sem\_trywait ( sem\_t \* sem )

Attempt to decrement a semaphore.

This service is equivalent to sem\_wait(), except that it returns immediately if the semaphore sem is currently depleted, and that it is not a cancellation point.

## **Parameters**

sem	the semaphore to be decremented.
-----	----------------------------------

## Return values

0	on success;
-1	with errno set if:
	• EINVAL, the specified semaphore is invalid or uninitialized;
	<ul> <li>EPERM, the semaphore sem is not process-shared and does not belong to the current process;</li> </ul>
	<ul> <li>EAGAIN, the specified semaphore is currently fully depleted.</li> </ul>
	•

6.58 Semaphores 299

See Also

Specification.

Referenced by sem\_timedwait(), and sem\_wait().

```
6.58.2.7 int sem_unlink ( const char * name )
```

Unlink a named semaphore.

This service unlinks the semaphore named *name*. This semaphore is not destroyed until all references obtained with sem\_open() are closed by calling sem\_close(). However, the unlinked semaphore may no longer be reached with the sem\_open() service.

When a semaphore is destroyed, the memory it used is returned to the system heap, so that further references to this semaphore are not guaranteed to fail, as is the case for unnamed semaphores.

#### **Parameters**

name	the name of the semaphore to be unlinked.

#### Return values

0	on success;
-1	with errno set if:
	<ul> <li>ENAMETOOLONG, the length of the name argument exceeds 64 characters;</li> </ul>
	ENOENT, the named semaphore does not exist.

See Also

Specification.

```
6.58.2.8 int sem wait ( sem t * sem )
```

## Decrement a semaphore.

This service decrements the semaphore *sem* if it is currently if its value is greater than 0. If the semaphore's value is currently zero, the calling thread is suspended until the semaphore is posted, or a signal is delivered to the calling thread.

This service is a cancellation point for Cobalt threads (created with the <a href="pthread\_create">pthread\_create</a>() service). When such a thread is cancelled while blocked in a call to this service, the semaphore state is left unchanged before the cancellation cleanup handlers are called.

#### **Parameters**

sem	the semaphore to be decremented.
-----	----------------------------------

## Return values

0	on success;
-1	with errno set if:
	<ul> <li>EPERM, the caller context is invalid;</li> </ul>
	<ul> <li>EINVAL, the semaphore is invalid or uninitialized;</li> </ul>
	<ul> <li>EPERM, the semaphore sem is not process-shared and does not belong to the current process;</li> </ul>
	<ul> <li>EINTR, the caller was interrupted by a signal while blocked in this service.</li> </ul>

## See Also

Specification.

References sem\_trywait().

# 6.59 Thread management

Cobalt/POSIX thread management services.

Collaboration diagram for Thread management:



## **Functions**

- int pthread\_create (pthread\_t \*ptid\_r, const pthread\_attr\_t \*attr, void \*(\*start)(void \*), void \*arg)

  Create a new thread.
- int pthread\_setmode\_np (int clrmask, int setmask, int \*mode\_r)

Set the mode of the current thread.

• int pthread\_setname\_np (pthread\_t thread, const char \*name)

Set a thread name.

int pthread\_kill (pthread\_t thread, int sig)

Send a signal to a thread.

int pthread\_join (pthread\_t thread, void \*\*retval)

Wait for termination of a specified thread.

## 6.59.1 Detailed Description

Cobalt/POSIX thread management services.

See Also

Specification.

## 6.59.2 Function Documentation

6.59.2.1 int pthread\_create ( pthread\_t \* ptid\_r, const pthread\_attr\_t \* attr, void \*(\*)(void \*) start, void \* arg )

Create a new thread.

This service creates a thread managed by the Xenomai nucleus in dual kernel configuration.

The new thread signal mask is inherited from the current thread, if it was also created with pthread\_create(), otherwise the new thread signal mask is empty.

Other attributes of the new thread depend on the *attr* argument. If *attr* is NULL, default values for these attributes are used.

Returning from the *start* routine has the same effect as calling pthread\_exit() with the return value.

ptid_r	address where the identifier of the new thread will be stored on success;
attr	thread attributes;
start	thread start routine;
arg	opaque user-supplied argument passed to start;

#### Returns

0 on success:

an error number if:

- EINVAL, attr is invalid;
- EAGAIN, insufficient memory exists in the system heap to create a new thread, increase CONFIG XENO OPT SYS HEAPSZ;
- EINVAL, thread attribute *inheritsched* is set to PTHREAD\_INHERIT\_SCHED and the calling thread does not belong to the Cobalt interface;

See Also

Specification.

Note

When creating or shadowing a Xenomai thread for the first time in user-space, Xenomai installs a handler for the SIGSHADOW signal. If you had installed a handler before that, it will be automatically called by Xenomai for SIGSHADOW signals that it has not sent.

If, however, you install a signal handler for SIGSHADOW after creating or shadowing the first Xenomai thread, you have to explicitly call the function cobalt\_sigshadow\_handler at the beginning of your signal handler, using its return to know if the signal was in fact an internal signal of Xenomai (in which case it returns 1), or if you should handle the signal (in which case it returns 0). cobalt\_sigshadow\_handler prototype is:

## int cobalt\_sigshadow\_handler(int sig, struct siginfo \*si, void \*ctxt);

Which means that you should register your handler with sigaction, using the SA\_SIGINFO flag, and pass all the arguments you received to cobalt\_sigshadow\_handler.

6.59.2.2 int pthread join (pthread t thread, void \*\* retval)

Wait for termination of a specified thread.

If the thread *thread* is running and joinable, this service blocks the calling thread until the thread *thread* terminates or detaches. In this case, the calling context must be a blockable context (i.e. a Xenomai thread without the scheduler locked) or the root thread (i.e. a module initilization or cleanup routine). When *thread* terminates, the calling thread is unblocked and its return value is stored at\* the address *value ptr*.

If, on the other hand, the thread *thread* has already finished execution, its return value is stored at the address *value\_ptr* and this service returns immediately. In this case, this service may be called from any context

This service is a cancelation point for POSIX skin threads: if the calling thread is canceled while blocked in a call to this service, the cancelation request is honored and *thread* remains joinable.

Multiple simultaneous calls to <a href="pthread\_join">pthread\_join</a>() specifying the same running target thread block all the callers until the target thread terminates.

thread	identifier of the thread to wait for;
retval	address where the target thread return value will be stored on success.

### Returns

0 on success;

an error number if:

- ESRCH, thread is invalid;
- EDEADLK, attempting to join the calling thread;
- EINVAL, thread is detached;
- EPERM, the caller context is invalid.

#### See Also

Specification.

Referenced by rt\_task\_join().

6.59.2.3 int pthread\_kill ( pthread\_t thread, int sig )

Send a signal to a thread.

This service send the signal *sig* to the Xenomai POSIX skin thread *thread* (created with pthread\_create()). If *sig* is zero, this service check for existence of the thread *thread*, but no signal is sent.

#### **Parameters**

thread	thread identifier;
sig	signal number.

#### Returns

0 on success;

an error number if:

- EINVAL, sig is an invalid signal number;
- EAGAIN, the maximum number of pending signals has been exceeded;
- ESRCH, thread is an invalid thread identifier.

#### See Also

Specification.

6.59.2.4 int pthread\_setmode\_np ( int clrmask, int setmask, int \* mode\_r )

Set the mode of the current thread.

This service sets the mode of the calling thread. *clrmask* and *setmask* are two bit masks which are respectively cleared and set in the calling thread status. They are a bitwise OR of the following values:

• PTHREAD\_LOCK\_SCHED, when set, locks the scheduler, which prevents the current thread from being switched out until the scheduler is unlocked;

- PTHREAD\_WARNSW, when set, causes the signal SIGDEBUG to be sent to the current thread, whenever it involontary switches to secondary mode;
- PTHREAD\_CONFORMING can be passed in setmask to switch the current user-space task to its
  preferred runtime mode. The only meaningful use of this switch is to force a real-time shadow back
  to primary mode. Any other use leads to a nop.
- PTHREAD\_DISABLE\_LOCKBREAK disallows breaking the scheduler lock. In the default case, a
  thread which holds the scheduler lock is allowed to drop it temporarily for sleeping. If this mode bit
  is set, such thread would return with EINTR immediately from any blocking call.

PTHREAD\_LOCK\_SCHED and PTHREAD\_DISABLE\_LOCKBREAK are valid for any Xenomai thread, other bits are valid for Xenomai user-space threads only.

This service is a non-portable extension of the POSIX interface.

#### **Parameters**

clrmask	set of bits to be cleared;
setmask	set of bits to be set.
mode_r	If non-NULL, mode_r must be a pointer to a memory location which will be written
	upon success with the previous set of active mode bits. If NULL, the previous set of
	active mode bits will not be returned.

#### Returns

0 on success:

an error number if:

• EINVAL, some bit in *clrmask* or *setmask* is invalid.

### Note

Setting *clrmask* and *setmask* to zero leads to a nop, only returning the previous mode if *mode\_r* is a valid address.

6.59.2.5 int pthread\_setname\_np ( pthread\_t thread, const char \* name )

Set a thread name.

This service set to *name*, the name of *thread*. This name is used for displaying information in /proc/xenomai/sched.

This service is a non-portable extension of the POSIX interface.

## **Parameters**

thread	target thread;
name	name of the thread.

#### Returns

0 on success;

an error number if:

• ESRCH, thread is invalid.

# 6.60 Scheduling management

Cobalt/POSIX scheduling management services.

Collaboration diagram for Scheduling management:



## **Functions**

- int pthread\_setschedparam (pthread\_t thread, int policy, const struct sched\_param \*param)

  Set the scheduling policy and parameters of the specified thread.
- int pthread\_setschedparam\_ex (pthread\_t thread, int policy, const struct sched\_param\_ex \*param\_ex)

Set extended scheduling policy of thread.

int pthread\_getschedparam (pthread\_t thread, int \*\_\_restrict\_\_ policy, struct sched\_param \*\_\_restrict\_\_ param)

Get the scheduling policy and parameters of the specified thread.

int pthread\_getschedparam\_ex (pthread\_t thread, int \*\_\_restrict\_\_ policy\_r, struct sched\_param\_ex \*\_\_restrict\_\_ param\_ex)

Get extended scheduling policy of thread.

int sched\_yield (void)

Yield the processor.

int sched\_get\_priority\_min (int policy)

Get minimum priority of the specified scheduling policy.

int sched\_get\_priority\_min\_ex (int policy)

Get extended minimum priority of the specified scheduling policy.

int sched\_get\_priority\_max (int policy)

Get maximum priority of the specified scheduling policy.

int sched\_get\_priority\_max\_ex (int policy)

Get extended maximum priority of the specified scheduling policy.

int pthread\_yield (void)

Yield the processor.

• int sched\_setconfig\_np (int cpu, int policy, const union sched\_config \*config, size\_t len)

Set CPU-specific scheduler settings for a policy.

• ssize\_t sched\_getconfig\_np (int cpu, int policy, union sched\_config \*config, size\_t \*len\_r)

Retrieve CPU-specific scheduler settings for a policy.

## 6.60.1 Detailed Description

Cobalt/POSIX scheduling management services.

## 6.60.2 Function Documentation

```
6.60.2.1 int pthread_getschedparam ( pthread_t thread, int *__restrict__ policy, struct sched_param *__restrict__ param )
```

Get the scheduling policy and parameters of the specified thread.

This service returns, at the addresses *pol* and *par*, the current scheduling policy and scheduling parameters (i.e. priority) of the Xenomai POSIX skin thread *tid*. If this service is called from user-space and *tid* is not the identifier of a Xenomai POSIX skin thread, this service fallback to Linux regular pthread\_-getschedparam service.

#### **Parameters**

thread	target thread;
policy	address where the scheduling policy of <i>tid</i> is stored on success;
param	address where the scheduling parameters of <i>tid</i> is stored on success.

#### Returns

0 on success;

an error number if:

• ESRCH, tid is invalid.

#### See Also

Specification.

References pthread\_getschedparam\_ex().

Referenced by pthread getschedparam ex().

```
6.60.2.2 int pthread_getschedparam_ex ( pthread_t thread, int *__restrict__ policy_r, struct sched_param_ex *__restrict__ param_ex )
```

Get extended scheduling policy of thread.

This service is an extended version of the regular <a href="pthread\_getschedparam">pthread\_getschedparam</a>() service, which also supports Xenomai-specific or additional POSIX scheduling policies, not available with the host Linux environment.

#### **Parameters**

thread	target thread;
policy_r	address where the scheduling policy of thread is stored on success;
param_ex	address where the scheduling parameters of thread are stored on success.

#### Returns

0 on success;

an error number if:

• ESRCH, thread is invalid.

### See Also

Specification.

References pthread\_getschedparam().

Referenced by pthread\_getschedparam().

6.60.2.3 int pthread\_setschedparam ( pthread\_t thread, int policy, const struct sched\_param \* param )

Set the scheduling policy and parameters of the specified thread.

This service set the scheduling policy of the Xenomai POSIX skin thread *tid* to the value *pol*, and its scheduling parameters (i.e. its priority) to the value pointed to by *par*.

When used in user-space, passing the current thread ID as *tid* argument, this service turns the current thread into a Xenomai POSIX skin thread. If *tid* is neither the identifier of the current thread nor the identifier of a Xenomai POSIX skin thread this service falls back to the regular pthread\_setschedparam() service, hereby causing the current thread to switch to secondary mode if it is Xenomai thread.

#### **Parameters**

thread	target thread;	
policy	scheduling policy, one of SCHED_FIFO, SCHED_RR, SCHED_SPORADIC, SCH-	
	ED_TP or SCHED_OTHER;	
param	scheduling parameters address.	

#### Returns

0 on success:

an error number if:

- ESRCH, tid is invalid;
- EINVAL, pol or par->sched\_priority is invalid;
- EAGAIN, in user-space, insufficient memory exists in the system heap, increase CONFIG\_X-ENO\_OPT\_SYS\_HEAPSZ;
- EFAULT, in user-space, par is an invalid address;
- EPERM, in user-space, the calling process does not have superuser permissions.

### See Also

Specification.

Note

When creating or shadowing a Xenomai thread for the first time in user-space, Xenomai installs a handler for the SIGSHADOW signal. If you had installed a handler before that, it will be automatically called by Xenomai for SIGSHADOW signals that it has not sent.

If, however, you install a signal handler for SIGSHADOW after creating or shadowing the first Xenomai thread, you have to explicitly call the function xeno\_sigwinch\_handler at the beginning of your signal handler, using its return to know if the signal was in fact an internal signal of Xenomai (in which case it returns 1), or if you should handle the signal (in which case it returns 0). xeno\_sigwinch\_handler prototype is:

## int xeno\_sigwinch\_handler(int sig, siginfo\_t \*si, void \*ctxt);

Which means that you should register your handler with sigaction, using the SA\_SIGINFO flag, and pass all the arguments you received to xeno\_sigwinch\_handler.

References pthread\_setschedparam\_ex().

6.60.2.4 int pthread\_setschedparam\_ex ( pthread\_t thread, int policy, const struct sched\_param\_ex \* param\_ex )

Set extended scheduling policy of thread.

This service is an extended version of the regular <a href="pthread\_setschedparam">pthread\_setschedparam</a>() service, which supports Xenomai-specific or additional scheduling policies, not available with the host Linux environment.

This service set the scheduling policy of the Xenomai thread to the value *policy*, and its scheduling parameters (e.g. its priority) to the value pointed to by *param\_ex*.

If thread does not match the identifier of a Xenomai thread, this action falls back to the regular pthread\_setschedparam() service.

#### **Parameters**

thread	target Cobalt thread;
policy	scheduling policy, one of SCHED_WEAK, SCHED_FIFO, SCHED_COBALT, SCH-
	ED_RR, SCHED_SPORADIC, SCHED_TP, SCHED_QUOTA or SCHED_NORMA-
	L;
param_ex	scheduling parameters address. As a special exception, a negative sched_priority value is interpreted as if SCHED_WEAK was given in <i>policy</i> , using the absolute
	value of this parameter as the weak priority level.

When CONFIG\_XENO\_OPT\_SCHED\_WEAK is enabled, SCHED\_WEAK exhibits priority levels in the [0..99] range (inclusive). Otherwise, sched priority must be zero for the SCHED WEAK policy.

#### Returns

0 on success; an error number if:

- ESRCH, thread is invalid;
- EINVAL, policy or param ex->sched priority is invalid;
- EAGAIN, in user-space, insufficient memory exists in the system heap, increase CONFIG\_X-ENO OPT SYS HEAPSZ;
- EFAULT, in user-space, param\_ex is an invalid address;
- EPERM, in user-space, the calling process does not have superuser permissions.

#### See Also

Specification.

Note

When creating or shadowing a Xenomai thread for the first time in user-space, Xenomai installs a handler for the SIGSHADOW signal. If you had installed a handler before that, it will be automatically called by Xenomai for SIGSHADOW signals that it has not sent.

If, however, you install a signal handler for SIGSHADOW after creating or shadowing the first Xenomai thread, you have to explicitly call the function cobalt\_sigshadow\_handler at the beginning of your signal handler, using its return to know if the signal was in fact an internal signal of Xenomai (in which case it returns 1), or if you should handle the signal (in which case it returns 0). cobalt\_sigshadow\_handler prototype is:

## int cobalt\_sigshadow\_handler(int sig, struct siginfo \*si, void \*ctxt);

Which means that you should register your handler with sigaction, using the SA\_SIGINFO flag, and pass all the arguments you received to cobalt\_sigshadow\_handler.

pthread\_setschedparam\_ex() may switch the caller to secondary mode.

Referenced by pthread\_setschedparam().

6.60.2.5 int pthread\_yield (void)

Yield the processor.

This function move the current thread at the end of its priority group.

Return values

0

See Also

Specification.

References sched\_yield().

6.60.2.6 int sched\_get\_priority\_max ( int policy )

Get maximum priority of the specified scheduling policy.

This service returns the maximum priority of the scheduling policy policy.

**Parameters** 

policy	scheduling policy.

## Return values

0	on success;
-1	with errno set if:
	• EINVAL, <i>policy</i> is invalid.

See Also

Specification.

Referenced by sched\_get\_priority\_max\_ex().

6.60.2.7 int sched\_get\_priority\_max\_ex ( int policy )

Get extended maximum priority of the specified scheduling policy.

This service returns the maximum priority of the scheduling policy *policy*, reflecting any Cobalt extension to standard classes.

Parameters

policy	scheduling policy.
	ļ <u> </u>

## Return values

0	on success;
-1	with errno set if:
	EINVAL, <i>policy</i> is invalid.

See Also

Specification.

References sched\_get\_priority\_max().

6.60.2.8 int sched\_get\_priority\_min ( int policy )

Get minimum priority of the specified scheduling policy.

This service returns the minimum priority of the scheduling policy *policy*.

**Parameters** 

policy	scheduling policy.
--------	--------------------

#### Return values

0	on success;
-1	with errno set if:
	• EINVAL, <i>policy</i> is invalid.

## See Also

Specification.

Referenced by sched\_get\_priority\_min\_ex().

6.60.2.9 int sched\_get\_priority\_min\_ex ( int policy )

Get extended minimum priority of the specified scheduling policy.

This service returns the minimum priority of the scheduling policy, reflecting any Cobalt extension to the standard classes.

Parameters

П	naliav	achaduling policy
	policy	scheduling policy.
	' '	ļ

## Return values

0	on success;
-1	with errno set if:
	• EINVAL, <i>policy</i> is invalid.

## See Also

Specification.

References sched\_get\_priority\_min().

6.60.2.10 ssize\_t sched\_getconfig\_np ( int cpu, int policy, union sched\_config \* config, size\_t \* len\_r )

Retrieve CPU-specific scheduler settings for a policy.

A configuration is strictly local to the target cpu, and may differ from other processors.

сри	processor to retrieve the configuration of.
policy	scheduling policy to which the configuration data applies. Currently, SCHED_TP
	and SCHED_QUOTA are valid.
config	a pointer to a memory area where the configuration data will be copied back. This
	area must be at least *len_r bytes long.
len_r	overall length of the configuration data returned (in bytes).

### Returns

the number of bytes copied to *config* on success; a negative error number if:

- EINVAL, *cpu* is invalid, or *policy* is unsupported by the current kernel configuration, or *len* cannot hold the retrieved configuration data.
- ESRCH, with *policy* equal to SCHED\_QUOTA, if the group identifier required to perform the operation is not valid.
- ENOMEM, lack of memory to perform the operation.
- ENOSPC, len is too short.

6.60.2.11 int sched setconfig np (int cpu, int policy, const union sched config \* config, size t len )

Set CPU-specific scheduler settings for a policy.

A configuration is strictly local to the target *cpu*, and may differ from other processors.

### **Parameters**

	сри	processor to load the configuration of.
	policy	scheduling policy to which the configuration data applies. Currently, SCHED_TP and SCHED_QUOTA are valid.
-	config	a pointer to the configuration data to load on <i>cpu</i> , applicable to <i>policy</i> .

Settings applicable to SCHED\_TP

This call installs the temporal partitions for *cpu*.

• config.tp.windows should be a non-null set of time windows, defining the scheduling time slots for *cpu*. Each window defines its offset from the start of the global time frame (windows[].offset), a duration (windows[].duration), and the partition id it applies to (windows[].ptid).

Time windows must be strictly contiguous, i.e. windows[n].offset + windows[n].duration shall equal windows[n + 1].offset. If windows[].ptid is in the range [0..CONFIG\_XENO\_OPT\_SCHED\_TP\_NRP-ART-1], SCHED\_TP threads which belong to the partition being referred to may run for the duration of the time window.

Time holes may be defined using windows assigned to the pseudo partition #-1, during which no SCH-ED\_TP threads may be scheduled.

config.tp.nr\_windows should define the number of elements present in the config.tp.windows[] array.

Settings applicable to SCHED QUOTA

This call manages thread groups running on *cpu*.

- config.quota.op should define the operation to be carried out. Valid operations are:
  - sched\_quota\_add for creating a new thread group on cpu. The new group identifier will be written back to config.quota.add.tgid\_r upon success. A new group is given no initial runtime budget when created. sched quota set should be issued to enable it.
  - sched\_quota\_remove for deleting a thread group on cpu. The group identifier should be passed in config.quota.remove.tgid.
  - sched\_quota\_set for updating the scheduling parameters of a thread group defined on cpu.
     The group identifier should be passed in config.quota.set.tgid, along with the allotted percentage of the quota interval (config.quota.set.quota), and the peak percentage allowed (config.quota.set.quota peak).
  - sched\_quota\_get for retrieving the scheduling parameters of a thread group defined on cpu.
     The group identifier should be passed in config.quota.get.tgid. The allotted percentage of the quota interval (config.quota.get.quota\_r), and the peak percentage (config.quota.get.quota\_peak\_r) will be written to the given output variables. The result of this operation is identical to calling sched\_getconfig\_np().

#### **Parameters**

len overall length of the configuration data (in bytes).

#### Returns

0 on success; an error number if:

- EINVAL, *cpu* is invalid, or *policy* is unsupported by the current kernel configuration, *len* is invalid, or *config* contains invalid parameters.
- ENOMEM, lack of memory to perform the operation.
- EBUSY, with *policy* equal to SCHED\_QUOTA, if an attempt is made to remove a thread group which still manages threads.
- ESRCH, with policy equal to SCHED\_QUOTA, if the group identifier required to perform the operation is not valid.

6.60.2.12 int sched\_yield (void)

Yield the processor.

This function move the current thread at the end of its priority group.

Return values

0 |

See Also

Specification.

References sched\_yield(), XNRELAX, xnsched\_run(), xnthread\_resume(), and XNWEAK.

Referenced by pthread\_yield(), and sched\_yield().

314 Module Documentation

# 6.61 Smokey API

A simple infrastructure for writing and running smoke tests.

A simple infrastructure for writing and running smoke tests. Smokey is based on the Copperplate API, therefore is available over the single and dual kernel Xenomai configurations indifferently.

The API provides a set of services for declaring any number of test plugins, embodied into a test program. Each plugin usually implements a single smoke test, checking a particular feature of interest. Each plugin present in the running executable is automatically detected by the Smokey init routine. In addition, the Smokey API parses all arguments and options passed on the command line to the executable, running pre-defined actions which are therefore automatically recognized by all programs linked against the Smokey library.

Writing smoke tests with Smokey

A smoke test is composed of a routine which implements the test code, and a set of runtime settings/attributes for running such code. The routine prototype shall be:

```
int run_<test_name>(struct smokey_test *t, int argc, char *const argv[])
```

The test routine should return a zero value for success, or any negated POSIX error code for indicating the failure to the test driver (e.g. -EINVAL if some value is found to be wrong).

With *t* referring to the Smokey test descriptor, and *argc*, *argv* the argument count and vector expunged from all the inner options which may have been previously interpreted by the Smokey API and inner layers (such as Copperplate).

The Smokey API provides the services to declare a complete test (named **foo** in this example) as follows:

```
#include <smokey/smokey.h>
smokev test plugin(foo. // test name
                   SMOKEY_ARGLIST( // argument list
                        SMOKEY_INT(some_integer),
                        SMOKEY_STRING(some_string),
                        SMOKEY_BOOL(some_boolean),
                   // description
               "A dummy Smokey-based test plugin\n"
              "\taccepting three optional arguments:\n"
               "\tsome_integer=<value>\n"
               "\tsome_string=<string>\n"
              ''\tsome\_bool[=0/1]\n'
):
static int run_foo(struct smokey_test *t, int argc, char *const argv[])
     char *s_arg = NULL;
     bool b_arg = false;
     int i_arg = 0, ret;
        ret = smokey_parse_args(t, argc, argv);
     if (ret)
         return ret;
     if (SMOKEY_ARG_ISSET(foo, some_integer))
         i_arg = SMOKEY_ARG_INT(foo, some_integer);
     if (SMOKEY_ARG_ISSET(foo, some_string))
        s_arg = SMOKEY_ARG_STRING(foo, some_string);
     if (SMOKEY_ARG_ISSET(foo, some_boolean))
        b_arg = SMOKEY_ARG_INT(foo, some_boolean);
     return run_some_hypothetical_smoke_test_code(i_arg, s_arg, b_arg);
```

As illustrated, a smoke test is at least composed of a test plugin descriptor (i.e. *smokey\_test\_plugin()*), and a run handler named after the test.

6.61 Smokey API 315

Test arguments

Smokey recognizes three argument declarators, namely: SMOKEY\_INT(name) for a C (signed) integer, SMOKEY\_BOOL(name) for a boolean value and SMOKEY\_STRING(name) for a character string.

Each argument can be passed to the test code as a name=value pair, where *name* should match one of the declarators. Before the test-specific arguments can be accessed, a call to smokey\_parse\_args() must be issued by the test code, passing the parameters received in the run handler.

Once smokey\_parse\_args() has returned, each argument can be checked individually for presence. If a valid argument was matched on the command line, SMOKEY\_ARG\_ISSET(test\_name, arg\_name) returns non-zero. In the latter case, its value can be retrieved by a similar call to SMOKEY\_ARG\_INT(test\_name, arg\_name), SMOKEY\_ARG\_STRING(test\_name, arg\_name) or SMOKEY\_ARG\_BOOL(test\_name, arg\_name).

In the above example, passing "some\_integer=3" on the command line of any program implementing such Smokey-based test would cause the variable i arg to receive "3" as a value.

Pre-defined Smokey options

Any program linked against the Smokey API implicitly recognizes the following options:

—list dumps the list of tests implemented in the program to stdout. The information given includes
the description strings provided in the plugin declarators (smokey\_test\_plugin()). The position and
symbolic name of each test is also issued, which may be used in id specifications with the –run
option (see below).

## Note

Test positions may vary depending on changes to the host program like adding or removing other tests, the symbolic name however is stable and identifies each test uniquely.

-run[=<id[,id...]>] selects the tests to be run, determining the active test list among the overall set
of tests detected in the host program. The test driver code (e.g. implementing a test harness
program on top of Smokey) may then iterate over the smokey\_test\_list for accessing each active
test individually, in the enumeration order specified by the user.

If no argument is passed to -run, Smokey assumes that all tests detected in the current program should be picked, filling *smokey\_test\_list* with tests by increasing position order.

Otherwise, id may be a test position, a symbolic name, or a range thereof delimited by a dash character. A symbolic name may be matched using a glob(3) type regular expression.

id specification may be:

- 0-9, picks tests #0 to #9
- -3, picks tests #0 to #3
- 5-, picks tests #5 to the highest possible test position
- 2-0, picks tests #2 to #0, in decreasing order
- foo, picks test foo only
- 0,1,foo-picks tests #0, #1, and any test from foo up to the last test defined
- fo\* picks any test with a name starting by "fo"
- –keep-going sets the boolean flag smokey\_keep\_going to a non-zero value, indicating to the test
  driver that receiving a failure code from a smoke test should not abort the test loop. This flag is not
  otherwise interpreted by the Smokey API.

316 Module Documentation

–quiet sets the boolean flag smokey\_quiet\_mode to a non-zero value, which is should be interpreted by all parties as an indication to tame down verbosity.

Writing a test driver based on the Smokey API

A test driver provides the main() entry point, which should iterate over the test list (*smokey\_test\_list*) prepared by the Smokey API, for running each test individually. The *for\_each\_smokey\_test()* helper is available for iterating over the active test list.

When this entry point is called, all the initialization chores, including the test detection and the active test selection have been performed by the Smokey API already.

Issuing progress messages

The printf-like *smokey\_note()* routine is available for issuing progress messages to the output device (currently stdout), unless –quiet was detected on the command line.

Therefore, a possible implementation of a test driver could be as basic as:

# 6.62 Asynchronous acquisition API

Collaboration diagram for Asynchronous acquisition API:



## **Data Structures**

struct a4l\_cmd\_desc

Structure describing the asynchronous instruction.

## **Functions**

int a4l\_snd\_command (a4l\_desc\_t \*dsc, a4l\_cmd\_t \*cmd)

Send a command to an Analoy device.

• int a4l\_snd\_cancel (a4l\_desc\_t \*dsc, unsigned int idx\_subd)

Cancel an asynchronous acquisition.

• int a4l\_set\_bufsize (a4l\_desc\_t \*dsc, unsigned int idx\_subd, unsigned long size)

Change the size of the asynchronous buffer.

int a4l\_get\_bufsize (a4l\_desc\_t \*dsc, unsigned int idx\_subd, unsigned long \*size)

Get the size of the asynchronous buffer.

int a4l\_mark\_bufrw (a4l\_desc\_t \*dsc, unsigned int idx\_subd, unsigned long cur, unsigned long \*new)

Update the asynchronous buffer state.

• int a4l\_poll (a4l\_desc\_t \*dsc, unsigned int idx\_subd, unsigned long ms\_timeout)

Get the available data count.

• int a4l\_mmap (a4l\_desc\_t \*dsc, unsigned int idx\_subd, unsigned long size, void \*\*ptr)

Map the asynchronous ring-buffer into a user-space.

## ANALOGY CMD xxx

## Common command flags definitions

#define A4L\_CMD\_SIMUL 0x1

Do not execute the command, just check it.

#define A4L CMD BULK 0x2

Perform data recovery / transmission in bulk mode.

• #define A4L\_CMD\_WRITE 0x4

Perform a command which will write data to the device.

318 Module Documentation

## TRIG xxx

## Command triggers flags definitions

• #define TRIG NONE 0x00000001

Never trigger.

• #define TRIG\_NOW 0x00000002

Trigger now + N ns.

#define TRIG FOLLOW 0x00000004

Trigger on next lower level trig.

• #define TRIG TIME 0x00000008

Trigger at time N ns.

#define TRIG\_TIMER 0x00000010

Trigger at rate N ns.

#define TRIG\_COUNT 0x00000020

Trigger when count reaches N.

#define TRIG\_EXT 0x00000040

Trigger on external signal N.

#define TRIG\_INT 0x00000080

Trigger on analogy-internal signal N.

#define TRIG\_OTHER 0x00000100

Driver defined trigger.

• #define TRIG\_WAKE\_EOS 0x0020

Wake up on end-of-scan.

• #define TRIG ROUND MASK 0x00030000

Trigger not implemented yet.

#define TRIG\_ROUND\_NEAREST 0x00000000

Trigger not implemented yet.

• #define TRIG\_ROUND\_DOWN 0x00010000

Trigger not implemented yet.

#define TRIG ROUND UP 0x00020000

Trigger not implemented yet.

#define TRIG\_ROUND\_UP\_NEXT 0x00030000

Trigger not implemented yet.

#### Channel macros

Specific precompilation macros and constants useful for the channels descriptors tab located in the command structure

• #define CHAN(a) ((a) & 0xffff)

Channel indication macro.

#define RNG(a) (((a) & 0xff) << 16)</li>

Range definition macro.

#define AREF(a) (((a) & 0xf) << 24)</li>

Reference definition macro.

#define FLAGS(a) ((a) & CR\_FLAGS\_MASK)

Flags definition macro.

#define PACK(a, b, c) (CHAN(a) | RNG(b) | AREF(c))

Channel + range + reference definition macro.

• #define PACK\_FLAGS(a, b, c, d) (CHAN(a) | RNG(b) | AREF(c) | FLAGS(d))

Channel + range + reference + flags definition macro.

• #define AREF GROUND 0x00

Analog reference is analog ground.

#define AREF\_COMMON 0x01

Analog reference is analog common.

• #define AREF DIFF 0x02

Analog reference is differential.

• #define AREF\_OTHER 0x03

Analog reference is undefined.

## 6.62.1 Detailed Description

## 6.62.2 Function Documentation

```
6.62.2.1 int a4l_get_bufsize ( a4l_desc_t * dsc, unsigned int idx_subd, unsigned long * size )
```

Get the size of the asynchronous buffer.

During asynchronous acquisition, a ring-buffer enables the transfers from / to user-space. Functions like a4l\_read() or a4l\_write() recovers / sends data through this intermediate buffer. Please note, there is one ring-buffer per subdevice capable of asynchronous acquisition. By default, each buffer size is set to 64 KB.

#### **Parameters**

in	dsc	Device descriptor filled by a4l_open() (and optionally a4l_fill_desc())
in	idx_subd	Index of the concerned subdevice
out	size	Buffer size

### Returns

0 on success. Otherwise:

- -EINVAL is returned if some argument is missing or wrong (Please, type "dmesg" for more info)
- -EFAULT is returned if a user <-> kernel transfer went wrong

References a4I descriptor::fd.

```
6.62.2.2 int a4l_mark_bufrw ( a4l_desc_t * dsc, unsigned int idx_subd, unsigned long cur, unsigned long * new )
```

Update the asynchronous buffer state.

When the mapping of the asynchronous ring-buffer (thanks to a4l\_mmap() is disabled, common read / write syscalls have to be used. In input case, a4l\_read() must be used for:

- the retrieval of the acquired data.
- the notification to the Analogy layer that the acquired data have been consumed, then the area in the ring-buffer which was containing becomes available. In output case, a4l\_write() must be called to:
- send some data to the Analogy layer.
- signal the Analogy layer that a chunk of data in the ring-buffer must be used by the driver.

In mmap configuration, these features are provided by unique function named a4l\_mark\_bufrw(). In input case, a4l\_mark\_bufrw() can :

- recover the count of data newly available in the ring-buffer.
- notify the Analogy layer how many bytes have been consumed. In output case, a4l\_mark\_bufrw()
  can:
- · recover the count of data available for writing.
- notify Analogy that some bytes have been written.

#### **Parameters**

in	dsc	Device descriptor filled by a4l_open() (and optionally a4l_fill_desc())
in	idx_subd	Index of the concerned subdevice
in	cur	Amount of consumed data
out	new	Amount of available data

#### Returns

0 on success. Otherwise:

- -EINVAL is returned if some argument is missing or wrong; the descriptor and the new pointer should be checked; check also the kernel log ("dmesg")
- -EFAULT is returned if a user <-> kernel transfer went wrong

References a4l\_descriptor::fd.

6.62.2.3 int a4l\_mmap ( a4l\_desc\_t \* dsc, unsigned int idx\_subd, unsigned long size, void \*\* ptr )

Map the asynchronous ring-buffer into a user-space.

### **Parameters**

in	dsc	Device descriptor filled by a4l_open() (and optionally a4l_fill_desc())
in	idx_subd	Index of the concerned subdevice
in	size	Size of the buffer to map
out	ptr	Address of the pointer containing the assigned address on return

#### Returns

0 on success. Otherwise:

- -EINVAL is returned if some argument is missing or wrong, the descriptor and the pointer should be checked; check also the kernel log
- -EPERM is returned if the function is called in an RT context or if the buffer to resize is mapped in user-space (Please, type "dmesg" for more info)
- -EFAULT is returned if a user <-> kernel transfer went wrong
- · -EBUSY is returned if the buffer is already mapped in user-space

References a4I descriptor::fd.

6.62.2.4 int a4l poll ( a4l desc t \* dsc, unsigned int idx subd, unsigned long ms timeout )

Get the available data count.

in	dsc	Device descriptor filled by a4l_open() (and optionally a4l_fill_desc())
in	idx_subd	Index of the concerned subdevice
in	ms_timeout	The number of miliseconds to wait for some data to be available. Passing A4L_INFINITE causes the caller to block indefinitely until some data is available. Passing A4L_NONBLOCK causes the function to return immediately without waiting for any available data

#### Returns

the available data count. Otherwise:

- -EINVAL is returned if some argument is missing or wrong (Please, type "dmesg" for more info)
- -EFAULT is returned if a user <-> kernel transfer went wrong
- · -EINTR is returned if calling task has been unblocked by a signal

References a4l\_descriptor::fd.

Referenced by a4l\_async\_read(), and a4l\_async\_write().

6.62.2.5 int a4l set bufsize ( a4l desc t \* dsc, unsigned int idx subd, unsigned long size )

Change the size of the asynchronous buffer.

During asynchronous acquisition, a ring-buffer enables the transfers from / to user-space. Functions like a4l\_read() or a4l\_write() recovers / sends data through this intermediate buffer. The function a4l\_set\_bufsize() can change the size of the ring-buffer. Please note, there is one ring-buffer per subdevice capable of asynchronous acquisition. By default, each buffer size is set to 64 KB.

## **Parameters**

in	dsc	Device descriptor filled by a4l_open() (and optionally a4l_fill_desc())
in	idx_subd	Index of the concerned subdevice
in	size	
		XSIZE)

## Returns

0 on success. Otherwise:

- -EINVAL is returned if the analogy descriptor is not correct or if some argument is missing or wrong (Please, type "dmesg" for more info)
- -EPERM is returned if the function is called in an RT context or if the buffer to resize is mapped in user-space (Please, type "dmesg" for more info)
- -EFAULT is returned if a user <-> kernel transfer went wrong
- -EBUSY is returned if the selected subdevice is already processing an asynchronous operation
- -ENOMEM is returned if the system is out of memory

References a4l\_sys\_bufcfg(), and a4l\_descriptor::fd.

6.62.2.6 int a4l snd cancel ( a4l desc t \* dsc, unsigned int idx subd )

Cancel an asynchronous acquisition.

The function a4l\_snd\_cancel() is devoted to stop an asynchronous acquisition configured thanks to an Analogy command.

in	dsc	Device descriptor filled by a4l_open() (and optionally a4l_fill_desc())
in	idx_subd	Subdevice index

#### Returns

0 on success. Otherwise:

- -EINVAL is returned if some argument is missing or wrong (Please, type "dmesg" for more info)
- -EIO is returned if the selected subdevice does not support asynchronous operation

References a4l\_descriptor::fd.

6.62.2.7 int a4l\_snd\_command ( a4l\_desc\_t \* dsc, a4l\_cmd\_t \* cmd )

Send a command to an Analoy device.

The function a4l\_snd\_command() triggers asynchronous acquisition.

#### **Parameters**

in	dsc	Device descriptor filled by a4l_open() (and optionally a4l_fill_desc())
in	cmd	Command structure

#### Returns

0 on success. Otherwise:

- -EINVAL is returned if some argument is missing or wrong (Please, type "dmesg" for more info)
- -ENOMEM is returned if the system is out of memory
- -EFAULT is returned if a user <-> kernel transfer went wrong
- -EIO is returned if the selected subdevice cannot handle command
- -EBUSY is returned if the selected subdevice is already processing an asynchronous operation

References a4l\_descriptor::fd.

# 6.63 Asynchronous acquisition API

Collaboration diagram for Asynchronous acquisition API:



## **Functions**

- int a4l\_async\_read (a4l\_desc\_t \*dsc, void \*buf, size\_t nbyte, unsigned long ms\_timeout)

  Perform asynchronous read operation on the analog input subdevice.
- int a4l\_async\_write (a4l\_desc\_t \*dsc, void \*buf, size\_t nbyte, unsigned long ms\_timeout)

  Perform asynchronous write operation on the analog input subdevice.

## 6.63.1 Detailed Description

## 6.63.2 Function Documentation

6.63.2.1 int a4l\_async\_read ( **a4l\_desc\_t** \* dsc, void \* buf, size\_t nbyte, unsigned long ms\_timeout )

Perform asynchronous read operation on the analog input subdevice.

The function a4l\_async\_read() is only useful for acquisition configured through an Analogy command.

### **Parameters**

in	dsc	Device descriptor filled by a4l_open() (and optionally a4l_fill_desc())
out	buf	Input buffer
in	nbyte	Number of bytes to read
in	ms_timeout	The number of miliseconds to wait for some data to be available. Pass-
		ing A4L_INFINITE causes the caller to block indefinitely until some
		data is available. Passing A4L_NONBLOCK causes the function to
		return immediately without waiting for any available data

#### Returns

Number of bytes read, otherwise negative error code:

- -EINVAL is returned if some argument is missing or wrong, the descriptor should be checked; check also the kernel log
- -ENOENT is returned if the device's reading subdevice is idle (no command was sent)
- -EFAULT is returned if a user <-> kernel transfer went wrong
- -EINTR is returned if calling task has been unblocked by a signal

References a4l\_poll(), a4l\_sys\_read(), a4l\_descriptor::fd, and a4l\_descriptor::idx\_read\_subd.

6.63.2.2 int a4l\_async\_write ( **a4l\_desc\_t** \* dsc, void \* buf, size\_t nbyte, unsigned long ms\_timeout )

Perform asynchronous write operation on the analog input subdevice.

The function a4l\_async\_write() is only useful for acquisition configured through an Analogy command.

#### **Parameters**

in	dsc	Device descriptor filled by a4l_open() (and optionally a4l_fill_desc())
in	buf	Ouput buffer
in	nbyte	Number of bytes to write
in	ms_timeout	The number of miliseconds to wait for some free area to be available. Passing A4L_INFINITE causes the caller to block indefinitely until some data is available. Passing A4L_NONBLOCK causes the function to return immediately without waiting any available space to write data.

#### Returns

Number of bytes written, otherwise negative error code:

- -EINVAL is returned if some argument is missing or wrong, the descriptor should be checked; check also the kernel log
- -ENOENT is returned if the device's reading subdevice is idle (no command was sent)
- -EFAULT is returned if a user <-> kernel transfer went wrong
- -EINTR is returned if calling task has been unblocked by a signal

References a4l\_poll(), a4l\_sys\_write(), a4l\_descriptor::fd, and a4l\_descriptor::idx\_write\_subd.

# 6.64 Descriptor Syscall API

Collaboration diagram for Descriptor Syscall API:



#### **Data Structures**

struct a4l\_descriptor

Structure containing device-information useful to users.

## **Functions**

int a4l\_sys\_desc (int fd, a4l\_desc\_t \*dsc, int pass)
 Get a descriptor on an attached device.

# ANALOGY\_xxx\_DESC

Constants used as argument so as to define the description depth to recover

- #define A4L\_BSC\_DESC 0x0
  - BSC stands for basic descriptor (device data)
- #define A4L\_CPLX\_DESC 0x1

CPLX stands for complex descriptor (subdevice + channel + range data)

- 6.64.1 Detailed Description
- 6.64.2 Function Documentation
- 6.64.2.1 int a4l\_sys\_desc ( int fd, a4l\_desc\_t \* dsc, int pass )

Get a descriptor on an attached device.

Once the device has been attached, the function a4l\_get\_desc() retrieves various information on the device (subdevices, channels, ranges, etc.). The function a4l\_get\_desc() can be called twice:

- The first time, almost all the fields, except sbdata, are set (board\_name, nb\_subd, idx\_read\_subd, idx\_write\_subd, magic, sbsize); the last field, sbdata, is supposed to be a pointer on a buffer, which size is defined by the field sbsize.
- The second time, the buffer pointed by sbdata is filled with data about the subdevices, the channels and the ranges.

Between the two calls, an allocation must be performed in order to recover a buffer large enough to contain all the data. These data are set up according a root-leaf organization (device -> subdevice -> channel -> range). They cannot be accessed directly; specific functions are available so as to retrieve them:

- a4l\_get\_subdinfo() to get some subdevice's characteristics.
- a4l get chaninfo() to get some channel's characteristics.
- a4l\_get\_rnginfo() to get some range's characteristics.

#### **Parameters**

in	fd	Driver file descriptor
out	dsc	Device descriptor
in	pass	Description level to retrieve:
		<ul> <li>A4L_BSC_DESC to get the basic descriptor (notably the size of the data buffer to allocate).</li> </ul>
		<ul> <li>A4L_CPLX_DESC to get the complex descriptor, the data buffer is filled with characteristics about the subdevices, the channels and the ranges.</li> </ul>

#### Returns

0 on success. Otherwise:

- -EINVAL is returned if some argument is missing or wrong; the pass argument should be checked; check also the kernel log ("dmesg")
- -EFAULT is returned if a user <-> kernel transfer went wrong
- -ENODEV is returned if the descriptor is incoherent (the device may be unattached)

References A4L\_BSC\_DESC, a4l\_descriptor::magic, a4l\_descriptor::sbdata, and a4l\_descriptor::sbsize.

Referenced by a4l\_fill\_desc(), and a4l\_open().

6.65 Descriptor API 327

## 6.65 Descriptor API

Collaboration diagram for Descriptor API:



## **Functions**

• int a4l\_open (a4l\_desc\_t \*dsc, const char \*fname)

Open an Analogy device and basically fill the descriptor.

int a4l\_close (a4l\_desc\_t \*dsc)

Close the Analogy device related with the descriptor.

int a4l\_fill\_desc (a4l\_desc\_t \*dsc)

Fill the descriptor with subdevices, channels and ranges data.

• int a4l\_get\_subdinfo (a4l\_desc\_t \*dsc, unsigned int subd, a4l\_sbinfo\_t \*\*info)

Get an information structure on a specified subdevice.

- int a4l\_get\_chinfo (a4l\_desc\_t \*dsc, unsigned int subd, unsigned int chan, a4l\_chinfo\_t \*\*info)

  Get an information structure on a specified channel.
- int a4l\_get\_rnginfo (a4l\_desc\_t \*dsc, unsigned int subd, unsigned int chan, unsigned int rng, a4l\_rnginfo t \*\*info)

Get an information structure on a specified range.

## 6.65.1 Detailed Description

This is the API interface used to fill and use Analogy device descriptor structure

## 6.65.2 Function Documentation

Close the Analogy device related with the descriptor.

The file descriptor is associated with a context. The context is one of the enabler of asynchronous transfers. So, by closing the file descriptor, the programer must keep in mind that the currently occuring asynchronous transfer will cancelled.

## **Parameters**

in	dsc	Device descriptor

#### Returns

0 on success. Otherwise:

 -EINVAL is returned if some argument is missing or wrong; the the dsc pointer should be checked; check also the kernel log ("dmesg")

References a4l\_sys\_close(), and a4l\_descriptor::fd.

```
6.65.2.2 int a4l_fill_desc ( a4l_desc_t * dsc )
```

Fill the descriptor with subdevices, channels and ranges data.

#### **Parameters**

in	dsc	Device descriptor partly filled by a4l_open().
	400	Bovios descriptor partly fined by a fi_opon().

#### Returns

0 on success. Otherwise:

- -EINVAL is returned if some argument is missing or wrong; the the dsc pointer should be checked; check also the kernel log ("dmesg")
- -EFAULT is returned if a user <-> kernel transfer went wrong
- -ENODEV is returned if the descriptor is incoherent (the device may be unattached)

References A4L\_CPLX\_DESC, a4l\_sys\_desc(), a4l\_descriptor::fd, and a4l\_descriptor::magic.

6.65.2.3 int a4l\_get\_chinfo ( **a4l\_desc\_t** \* dsc, unsigned int subd, unsigned int chan, a4l\_chinfo\_t \*\* info )

Get an information structure on a specified channel.

#### **Parameters**

in	dsc	Device descriptor filled by a4l_open() and a4l_fill_desc()
in	subd	Subdevice index
in	chan	Channel index
out	info	Channel information structure

## Returns

0 on success. Otherwise:

 -EINVAL is returned if some argument is missing or wrong; subd, chan and the dsc pointer should be checked; check also the kernel log ("dmesg"); WARNING: a4l\_fill\_desc() should be called before using a4l\_get\_chinfo()

References a4l\_descriptor::magic, a4l\_descriptor::nb\_subd, and a4l\_descriptor::sbdata.

Referenced by a4l\_find\_range().

6.65.2.4 int a4l\_get\_rnginfo ( **a4l\_desc\_t** \* dsc, unsigned int subd, unsigned int chan, unsigned int rng, a4l rnginfo t \*\* info )

Get an information structure on a specified range.

6.65 Descriptor API 329

#### **Parameters**

in	dsc	Device descriptor filled by a4l_open() and a4l_fill_desc()
in	subd	Subdevice index
in	chan	Channel index
in	rng	Range index
out	info	Range information structure

#### Returns

0 on success. Otherwise:

 -EINVAL is returned if some argument is missing or wrong; subd, chan, rng and the dsc pointer should be checked; check also the kernel log ("dmesg"); WARNING: a4l\_fill\_desc() should be called before using a4l\_get\_rnginfo()

References a4I descriptor::magic, a4I descriptor::nb subd, and a4I descriptor::sbdata.

Referenced by a4l\_find\_range().

6.65.2.5 int a4l\_get\_subdinfo ( a4l\_desc\_t \* dsc, unsigned int subd, a4l\_sbinfo\_t \*\* info )

Get an information structure on a specified subdevice.

#### **Parameters**

in	dsc	Device descriptor filled by a4l_open() and a4l_fill_desc()
in	subd	Subdevice index
out	info	Subdevice information structure

#### Returns

0 on success. Otherwise:

• -EINVAL is returned if some argument is missing or wrong; subd and the dsc pointer should be checked; check also the kernel log ("dmesg"); WARNING: a4l\_fill\_desc() should be called before using a4l\_get\_subdinfo().

References a4I descriptor::magic, a4I descriptor::nb subd, and a4I descriptor::sbdata.

Referenced by a4l\_sync\_dio().

6.65.2.6 int a4l\_open ( a4l\_desc\_t \* dsc, const char \* fname )

Open an Analogy device and basically fill the descriptor.

## **Parameters**

out	dsc	Device descriptor
in	fname	Device name

## Returns

0 on success. Otherwise:

- -EINVAL is returned if some argument is missing or wrong; the fname and the dsc pointer should be checked; check also the kernel log ("dmesg")
- -EFAULT is returned if a user <-> kernel transfer went wrong

References A4L\_BSC\_DESC, a4l\_sys\_close(), a4l\_sys\_desc(), a4l\_sys\_open(), and a4l\_descriptor::fd.

## 6.66 Range / conversion API

Collaboration diagram for Range / conversion API:



## **Functions**

• int a4l\_sizeof\_chan (a4l\_chinfo\_t \*chan)

Get the size in memory of an acquired element.

int a4l\_sizeof\_subd (a4l\_sbinfo\_t \*subd)

Get the size in memory of a digital acquired element.

• int a4l\_find\_range (a4l\_desc\_t \*dsc, unsigned int idx\_subd, unsigned int idx\_chan, unsigned long unit, double min, double max, a4l\_rnginfo\_t \*\*rng)

Find the must suitable range.

• int a4l\_rawtoul (a4l\_chinfo\_t \*chan, unsigned long \*dst, void \*src, int cnt)

Unpack raw data (from the driver) into unsigned long values.

• int a4l\_rawtof (a4l\_chinfo\_t \*chan, a4l\_rnginfo\_t \*rng, float \*dst, void \*src, int cnt)

Convert raw data (from the driver) to float-typed samples.

int a4l\_rawtod (a4l\_chinfo\_t \*chan, a4l\_rnginfo\_t \*rng, double \*dst, void \*src, int cnt)

Convert raw data (from the driver) to double-typed samples.

• int a4l\_ultoraw (a4l\_chinfo\_t \*chan, void \*dst, unsigned long \*src, int cnt)

Pack unsigned long values into raw data (for the driver)

• int a4l\_ftoraw (a4l\_chinfo\_t \*chan, a4l\_rnginfo\_t \*rng, void \*dst, float \*src, int cnt)

Convert float-typed samples to raw data (for the driver)

int a4l\_dtoraw (a4l\_chinfo\_t \*chan, a4l\_rnginfo\_t \*rng, void \*dst, double \*src, int cnt)

Convert double-typed samples to raw data (for the driver)

## 6.66.1 Detailed Description

#### 6.66.2 Function Documentation

6.66.2.1 int a4l dtoraw (a4l chinfo t\*chan, a4l rnginfo t\*rng, void\*dst, double\*src, int cnt)

Convert double-typed samples to raw data (for the driver)

#### **Parameters**

in	chan	Channel descriptor
in	rng	Range descriptor

out	dst	Ouput buffer
in	src	Input buffer
in	cnt	Count of conversion to perform

#### Returns

the count of conversion performed, otherwise a negative error code:

 -EINVAL is returned if some argument is missing or wrong; chan, rng and the pointers should be checked; check also the kernel log ("dmesg"); WARNING: a4l\_fill\_desc() should be called before using a4l\_dtoraw()

References A4L RNG FACTOR, and a4l sizeof chan().

6.66.2.2 int a4l\_find\_range ( a4l\_desc\_t \* dsc, unsigned int idx\_subd, unsigned int idx\_chan, unsigned long unit, double min, double max, a4l\_rnginfo\_t \*\* rng )

## Find the must suitable range.

#### **Parameters**

in	dsc	Device descriptor filled by a4l_open() and a4l_fill_desc()
in	idx_subd	Index of the concerned subdevice
in	idx_chan	Index of the concerned channel
in	unit	Unit type used in the range
in	min	Minimal limit value
in	max	Maximal limit value
out	rng	Found range

### Returns

The index of the most suitable range on success. Otherwise:

- -ENOENT is returned if a suitable range is not found.
- -EINVAL is returned if some argument is missing or wrong; idx\_subd, idx\_chan and the dsc pointer should be checked; check also the kernel log ("dmesg"); WARNING: a4l\_fill\_desc() should be called before using a4l\_find\_range()

References a4l\_get\_chinfo(), a4l\_get\_rnginfo(), A4L\_RNG\_FACTOR, A4L\_RNG\_UNIT, and a4l\_descriptor::magic.

6.66.2.3 int a4l\_ftoraw ( a4l\_chinfo\_t \* chan, a4l\_rnginfo\_t \* rng, void \* dst, float \* src, int cnt )

Convert float-typed samples to raw data (for the driver)

#### **Parameters**

in	chan	Channel descriptor
in	rng	Range descriptor
out	dst	Ouput buffer
in	src	Input buffer

in	cnt	Count of conversion to perform

#### Returns

the count of conversion performed, otherwise a negative error code:

• -EINVAL is returned if some argument is missing or wrong; chan, rng and the pointers should be checked; check also the kernel log ("dmesg"); WARNING: a4l\_fill\_desc() should be called before using a4l\_ftoraw()

References A4L\_RNG\_FACTOR, and a4l\_sizeof\_chan().

Convert raw data (from the driver) to double-typed samples.

#### **Parameters**

in	chan	Channel descriptor
in	rng	Range descriptor
out	dst	Ouput buffer
in	src	Input buffer
in	cnt	Count of conversion to perform

#### Returns

the count of conversion performed, otherwise a negative error code:

 -EINVAL is returned if some argument is missing or wrong; chan, rng and the pointers should be checked; check also the kernel log ("dmesg"); WARNING: a4l\_fill\_desc() should be called before using a4l\_rawtod()

References A4L\_RNG\_FACTOR, and a4l\_sizeof\_chan().

Convert raw data (from the driver) to float-typed samples.

#### **Parameters**

in	chan	Channel descriptor
in	rng	Range descriptor
out	dst	Ouput buffer
in	src	Input buffer
in	cnt	Count of conversion to perform

#### Returns

the count of conversion performed, otherwise a negative error code:

 -EINVAL is returned if some argument is missing or wrong; chan, rng and the pointers should be checked; check also the kernel log ("dmesg"); WARNING: a4l\_fill\_desc() should be called before using a4l\_rawtod()

References A4L RNG FACTOR, and a4l sizeof chan().

6.66.2.6 int a4l\_rawtoul ( a4l\_chinfo\_t \* chan, unsigned long \* dst, void \* src, int cnt )

Unpack raw data (from the driver) into unsigned long values.

This function takes as input driver-specific data and scatters each element into an entry of an unsigned long table. It is a convenience routine which performs no conversion, just copy.

#### **Parameters**

in	chan	Channel descriptor
out	dst	Ouput buffer
in	src	Input buffer
in	cnt	Count of transfer to copy

#### Returns

the count of copy performed, otherwise a negative error code:

 -EINVAL is returned if some argument is missing or wrong; chan, dst and src pointers should be checked; check also the kernel log ("dmesg"); WARNING: a4l\_fill\_desc() should be called before using a4l\_ultoraw()

References a4l\_sizeof\_chan().

Get the size in memory of an acquired element.

According to the board, the channels have various acquisition widths. With values like 8, 16 or 32, there is no problem finding out the size in memory (1, 2, 4); however with widths like 12 or 24, this function might be helpful to guess the size needed in RAM for a single acquired element.

#### **Parameters**

in	chan	Channel descriptor

### Returns

the size in memory of an acquired element, otherwise a negative error code:

-EINVAL is returned if the argument chan is NULL

Referenced by a4l\_dtoraw(), a4l\_ftoraw(), a4l\_rawtod(), a4l\_rawtof(), a4l\_rawtoul(), and a4l\_ultoraw().

```
6.66.2.8 int a4l_sizeof_subd ( a4l_sbinfo_t * subd )
```

Get the size in memory of a digital acquired element.

This function is only useful for DIO subdevices. Digital subdevices are a specific kind of subdevice on which channels are regarded as bits composing the subdevice's bitfield. During a DIO acquisition, all bits are sampled. Therefore, a4l\_sizeof\_chan() is useless in this case and we have to use a4l\_sizeof\_subd(). With bitfields which sizes are 8, 16 or 32, there is no problem finding out the size in memory (1, 2, 4); however with widths like 12 or 24, this function might be helpful to guess the size needed in RAM for a single acquired element.

#### **Parameters**

in	subd	Subdevice descriptor
----	------	----------------------

#### Returns

the size in memory of an acquired element, otherwise a negative error code:

• -EINVAL is returned if the argument chan is NULL or if the subdevice is not a digital subdevice

References A4L\_SUBD\_DI, A4L\_SUBD\_DIO, A4L\_SUBD\_DO, and A4L\_SUBD\_TYPES. Referenced by a4l\_sync\_dio().

6.66.2.9 int a4l\_ultoraw ( a4l\_chinfo\_t \* chan, void \* dst, unsigned long \* src, int cnt )

Pack unsigned long values into raw data (for the driver)

This function takes as input a table of unsigned long values and gather them according to the channel width. It is a convenience routine which performs no conversion, just formatting.

#### **Parameters**

in	chan	Channel descriptor
out	dst	Ouput buffer
in	src	Input buffer
in	cnt	Count of transfer to copy

#### Returns

the count of copy performed, otherwise a negative error code:


 -EINVAL is returned if some argument is missing or wrong; chan, dst and src pointers should be checked; check also the kernel log ("dmesg"); WARNING: a4l\_fill\_desc() should be called before using a4l\_ultoraw()

References a4I sizeof chan().

6.67 Level 1 API 335

## 6.67 Level 1 API

Collaboration diagram for Level 1 API:

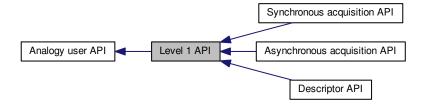

## Modules

- Asynchronous acquisition API
- Descriptor API
- Synchronous acquisition API

## 6.67.1 Detailed Description

336 Module Documentation

## 6.68 Synchronous acquisition API

Collaboration diagram for Synchronous acquisition API:



## **Data Structures**

• struct a4l instruction

Structure describing the synchronous instruction.

struct a4l\_instruction\_list

Structure describing the list of synchronous instructions.

## Macros

#define A4L\_INSN\_WAIT\_MAX 100000
 Maximal wait duration.

## **Functions**

int a4l\_snd\_insnlist (a4l\_desc\_t \*dsc, a4l\_insnlst\_t \*arg)
 Perform a list of synchronous acquisition misc operations.

int a4l snd insn (a4l desc t \*dsc, a4l insn t \*arg)

Perform a synchronous acquisition misc operation.

## Instruction type

Flags to define the type of instruction

- #define A4L\_INSN\_READ (0 | A4L\_INSN\_MASK\_READ)
   Read instruction.
- #define A4L\_INSN\_WRITE (1 | A4L\_INSN\_MASK\_WRITE)

Write instruction.

#define A4L\_INSN\_BITS

"Bits" instruction

• #define A4L\_INSN\_CONFIG

Configuration instruction.

#define A4L INSN GTOD

Get time instruction.

#define A4L\_INSN\_WAIT

Wait instruction.

• #define A4L INSN INTTRIG

Trigger instruction (to start asynchronous acquisition)

## Configuration instruction type

Values to define the type of configuration instruction

- #define A4L INSN CONFIG DIO INPUT 0
- #define A4L INSN CONFIG DIO OUTPUT 1
- #define A4L\_INSN\_CONFIG\_DIO\_OPENDRAIN 2
- #define A4L\_INSN\_CONFIG\_ANALOG\_TRIG 16
- #define A4L INSN CONFIG ALT SOURCE 20
- #define A4L INSN CONFIG DIGITAL TRIG 21
- #define A4L INSN CONFIG BLOCK SIZE 22
- #define A4L\_INSN\_CONFIG\_TIMER\_1 23
- #define A4L INSN CONFIG FILTER 24
- #define A4L\_INSN\_CONFIG\_CHANGE\_NOTIFY 25
- #define A4L\_INSN\_CONFIG\_SERIAL\_CLOCK 26
- #define A4L\_INSN\_CONFIG\_BIDIRECTIONAL\_DATA 27
- #define A4L INSN CONFIG DIO QUERY 28
- #define A4L\_INSN\_CONFIG\_PWM\_OUTPUT 29
- #define A4L\_INSN\_CONFIG\_GET\_PWM\_OUTPUT 30
- #define A4L\_INSN\_CONFIG\_ARM 31
- #define A4L INSN CONFIG DISARM 32
- #define A4L INSN CONFIG GET COUNTER STATUS 33
- #define A4L INSN CONFIG RESET 34
- #define A4L\_INSN\_CONFIG\_GPCT\_SINGLE\_PULSE\_GENERATOR 1001 /\* Use CTR as single pulsegenerator \*/
- #define A4L\_INSN\_CONFIG\_GPCT\_PULSE\_TRAIN\_GENERATOR 1002 /\* Use CTR as pulse-traingenerator \*/
- #define A4L\_INSN\_CONFIG\_GPCT\_QUADRATURE\_ENCODER 1003 /\* Use the counter as encoder \*/
- #define A4L\_INSN\_CONFIG\_SET\_GATE\_SRC 2001 /\* Set gate source \*/
- #define A4L\_INSN\_CONFIG\_GET\_GATE\_SRC 2002 /\* Get gate source \*/
- #define A4L\_INSN\_CONFIG\_SET\_CLOCK\_SRC 2003 /\* Set master clock source \*/
- #define A4L\_INSN\_CONFIG\_GET\_CLOCK\_SRC 2004 /\* Get master clock source \*/
- #define A4L INSN CONFIG SET OTHER SRC 2005 /\* Set other source \*/
- #define A4L\_INSN\_CONFIG\_SET\_COUNTER\_MODE 4097
- #define A4L INSN CONFIG SET ROUTING 4099
- #define A4L INSN CONFIG GET ROUTING 4109

## Counter status bits

Status bits for INSN\_CONFIG\_GET\_COUNTER\_STATUS

- #define A4L COUNTER ARMED 0x1
- #define A4L\_COUNTER\_COUNTING 0x2
- #define A4L COUNTER TERMINAL COUNT 0x4

#### IO direction

Values to define the IO polarity

- #define A4L INPUT 0
- #define A4L OUTPUT 1
- #define A4L OPENDRAIN 2

## Events types

Values to define the Analogy events. They might used to send some specific events through the instruction interface.

- #define A4L EV START 0x00040000
- #define A4L EV SCAN BEGIN 0x00080000
- #define A4L EV CONVERT 0x00100000
- #define **A4L\_EV\_SCAN\_END** 0x00200000
- #define **A4L EV STOP** 0x00400000

## 6.68.1 Detailed Description

#### 6.68.2 Function Documentation

```
6.68.2.1 int a4l snd insn ( a4l desc t*dsc, a4l insn t*arg )
```

Perform a synchronous acquisition misc operation.

The function a4l\_snd\_insn() triggers a synchronous acquisition.

#### **Parameters**

in	dsc	Device descriptor filled by a4l_open() (and optionally a4l_fill_desc())
in	arg	Instruction structure

#### Returns

0 on success. Otherwise:

- -EINVAL is returned if some argument is missing or wrong (Please, type "dmesg" for more info)
- -EFAULT is returned if a user <-> kernel transfer went wrong
- -ENOMEM is returned if the system is out of memory

References a4I descriptor::fd.

Referenced by a4l\_config\_subd(), a4l\_sync\_dio(), a4l\_sync\_read(), and a4l\_sync\_write().

```
6.68.2.2 int a4l_snd_insnlist ( a4l_desc_t * dsc, a4l_insnlst_t * arg )
```

Perform a list of synchronous acquisition misc operations.

The function a4l\_snd\_insnlist() is able to send many synchronous instructions on a various set of sub-devices, channels, etc.

## **Parameters**

in	dsc	Device descriptor filled by a4l_open() (and optionally a4l_fill_desc())
in	arg	Instructions list structure

## Returns

0 on success. Otherwise:

- -EINVAL is returned if some argument is missing or wrong (Please, type "dmesg" for more info)
- -EFAULT is returned if a user <-> kernel transfer went wrong


• -ENOMEM is returned if the system is out of memory

References a4l\_descriptor::fd.

Referenced by a4l\_sync\_read(), and a4l\_sync\_write().

## 6.69 Level 2 API

Collaboration diagram for Level 2 API:



## Modules

- Asynchronous acquisition API
- Range / conversion API
- Synchronous acquisition API

## 6.69.1 Detailed Description

## 6.70 Synchronous acquisition API

Collaboration diagram for Synchronous acquisition API:



## **Functions**

• int a4l\_sync\_write (a4l\_desc\_t \*dsc, unsigned int idx\_subd, unsigned int chan\_desc, unsigned int ns\_delay, void \*buf, size\_t nbyte)

Perform a synchronous acquisition write operation.

• int a4l\_sync\_read (a4l\_desc\_t \*dsc, unsigned int idx\_subd, unsigned int chan\_desc, unsigned int ns\_delay, void \*buf, size\_t nbyte)

Perform a synchronous acquisition read operation.

- int a4l\_sync\_dio (a4l\_desc\_t \*dsc, unsigned int idx\_subd, void \*mask, void \*buf)
  - Perform a synchronous acquisition digital acquisition.
- int a4l\_config\_subd (a4l\_desc\_t \*dsc, unsigned int idx\_subd, unsigned int type,...)

  Configure a subdevice.

## 6.70.1 Detailed Description

### 6.70.2 Function Documentation

6.70.2.1 int a4l config subd ( a4l desc t \* dsc, unsigned int idx subd, unsigned int type, ... )

#### Configure a subdevice.

a4l\_config\_subd() takes a variable count of arguments. According to the configuration type, some additional argument is necessary:

- A4L\_INSN\_CONFIG\_DIO\_INPUT: the channel index (unsigned int)
- A4L\_INSN\_CONFIG\_DIO\_OUTPUT: the channel index (unsigned int)
- A4L INSN CONFIG DIO QUERY: the returned DIO polarity (unsigned int \*)

#### **Parameters**

in	dsc	Device descriptor filled by a4l_open() (and optionally a4l_fill_desc())
in	idx_subd	Index of the concerned subdevice
in	type	Configuration parameter

#### Returns

0 on success. Otherwise:

- -EINVAL is returned if some argument is missing or wrong (Please, type "dmesg" for more info)
- -ENOSYS is returned if the configuration parameter is not supported

References A4L\_INSN\_CONFIG, a4l\_snd\_insn(), CHAN, a4l\_instruction::chan\_desc, a4l\_instruction::data\_size, and a4l\_instruction::type.

6.70.2.2 int a4l\_sync\_dio ( a4l\_desc\_t \* dsc, unsigned int idx\_subd, void \* mask, void \* buf )

Perform a synchronous acquisition digital acquisition.

#### **Parameters**

in	dsc	Device descriptor filled by a4l_open() (and optionally a4l_fill_desc())
in	idx_subd	Index of the concerned subdevice
in	mask	Write mask which indicates which bit(s) must be modified
in,out	buf	Input / output buffer

#### Returns

Number of bytes read, otherwise negative error code:

- -EINVAL is returned if some argument is missing or wrong (Please, type "dmesg" for more info)
- -EFAULT is returned if a user <-> kernel transfer went wrong
- -ENOMEM is returned if the system is out of memory
- -ENOSYS is returned if the driver does not provide any handler "instruction bits"

References a4l\_get\_subdinfo(), A4L\_INSN\_BITS, a4l\_sizeof\_subd(), a4l\_snd\_insn(), a4l\_instruction::data\_size, and a4l\_instruction::type.

6.70.2.3 int a4l\_sync\_read ( **a4l\_desc\_t** \* dsc, unsigned int idx\_subd, unsigned int chan\_desc, unsigned int ns\_delay, void \* buf, size\_t nbyte )

Perform a synchronous acquisition read operation.

#### **Parameters**

in	dsc	Device descriptor filled by a4l_open() (and optionally a4l_fill_desc())
in	idx_subd	Index of the concerned subdevice
in	chan_desc	Channel descriptor (channel, range and reference)
in	ns_delay	Optional delay (in nanoseconds) to wait between the setting of the in-
		put channel and sample(s) acquisition(s).
in	buf	Input buffer
in	nbyte	Number of bytes to read

### Returns

Number of bytes read, otherwise negative error code:

- -EINVAL is returned if some argument is missing or wrong (Please, type "dmesg" for more info)
- -EFAULT is returned if a user <-> kernel transfer went wrong

· -ENOMEM is returned if the system is out of memory

References A4L\_INSN\_READ, A4L\_INSN\_WAIT, a4l\_snd\_insn(), a4l\_snd\_insnlist(), a4l\_instruction\_list::count, a4l\_instruction::data, a4l\_instruction::data\_size, and a4l\_instruction::type.

6.70.2.4 int a4l\_sync\_write ( **a4l\_desc\_t** \* dsc, unsigned int idx\_subd, unsigned int chan\_desc, unsigned int ns\_delay, void \* buf, size\_t nbyte )

Perform a synchronous acquisition write operation.

#### **Parameters**

in	dsc	Device descriptor filled by a4l_open() (and optionally a4l_fill_desc())
in	idx_subd	Index of the concerned subdevice
in	chan_desc	Channel descriptor (channel, range and reference)
in	ns_delay	
		put channel and sample(s) acquisition(s).
in	buf	Output buffer
in	nbyte	Number of bytes to write

#### Returns

Number of bytes written, otherwise negative error code:


- -EINVAL is returned if some argument is missing or wrong (Please, type "dmesg" for more info)
- -EFAULT is returned if a user <-> kernel transfer went wrong
- -ENOMEM is returned if the system is out of memory

References A4L\_INSN\_WAIT, A4L\_INSN\_WRITE, a4l\_snd\_insn(), a4l\_snd\_insnlist(), a4l\_instruction\_list::count, a4l\_instruction::data, a4l\_instruction::data\_size, and a4l\_instruction::type.

344 Module Documentation

# 6.71 Analogy user API

Collaboration diagram for Analogy user API:

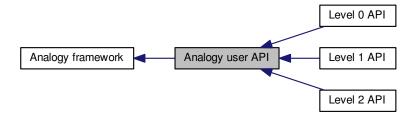

## Modules

- Level 1 API
- Level 2 API
- Level 0 API


## 6.71.1 Detailed Description

This is the API interface of Analogy library

6.72 Level 0 API 345

## 6.72 Level 0 API

Collaboration diagram for Level 0 API:

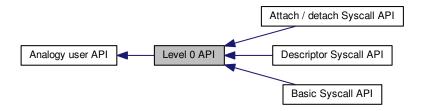

## Modules

- Descriptor Syscall API
- Basic Syscall API
- Attach / detach Syscall API

## 6.72.1 Detailed Description

System call interface to core Analogy services

This interface should not be used directly by applications.

Module Documentation

## 6.73 Basic Syscall API

Collaboration diagram for Basic Syscall API:



## **Functions**

• int a4l\_sys\_open (const char \*fname)

Open an Analogy device.

• int a4l\_sys\_close (int fd)

Close an Analogy device.

int a4l\_sys\_read (int fd, void \*buf, size\_t nbyte)

Read from an Analogy device.

int a4l\_sys\_write (int fd, void \*buf, size\_t nbyte)

Write to an Analogy device.

## 6.73.1 Detailed Description

## 6.73.2 Function Documentation

6.73.2.1 int a4l\_sys\_close ( int fd )

Close an Analogy device.

**Parameters** 

in	fd	File descriptor as returned by a4l_sys_open()

## Returns

0 on success, otherwise a negative error code.

Referenced by a4l\_close(), and a4l\_open().

6.73.2.2 int a4l\_sys\_open ( const char \* fname )

Open an Analogy device.

**Parameters** 

in	fname	Device name

## Returns

Positive file descriptor value on success, otherwise a negative error code.

Referenced by a4l\_open().

6.73.2.3 int a4l\_sys\_read ( int fd, void \* buf, size\_t nbyte )

Read from an Analogy device.

The function a4l read() is only useful for acquisition configured through an Analogy command.

#### **Parameters**

in	fd	File descriptor as returned by a4l_sys_open()
out	buf	Input buffer
in	nbyte	Number of bytes to read

#### Returns

Number of bytes read. Otherwise:

- -EINVAL is returned if some argument is missing or wrong (Please, type "dmesg" for more info)
- -ENOENT is returned if the device's reading subdevice is idle (no command was sent)
- -EFAULT is returned if a user <-> kernel transfer went wrong
- · -EINTR is returned if calling task has been unblocked by a signal

Referenced by a4I async read().

6.73.2.4 int a4l sys write (int fd, void \* buf, size t nbyte)

Write to an Analogy device.

The function a4l\_write() is only useful for acquisition configured through an Analogy command.

#### **Parameters**

in	fd	File descriptor as returned by a4l_sys_open()
in	buf	Output buffer
in	nbyte	Number of bytes to write

## Returns

Number of bytes written. Otherwise:

- -EINVAL is returned if some argument is missing or wrong (Please, type "dmesg" for more info)
- -ENOENT is returned if the device's writing subdevice is idle (no command was sent)
- -EFAULT is returned if a user <-> kernel transfer went wrong
- -EINTR is returned if calling task has been unblocked by a signal

Referenced by a4l async write().

## 6.74 Attach / detach Syscall API

Collaboration diagram for Attach / detach Syscall API:



## **Functions**

- int a4l\_sys\_attach (int fd, a4l\_lnkdesc\_t \*arg)
   Attach an Analogy device to a driver.
- int a4l\_sys\_detach (int fd)

Detach an Analogy device from a driver.

• int a4l\_sys\_bufcfg (int fd, unsigned int idx\_subd, unsigned long size)

Configure the buffer size.

## 6.74.1 Detailed Description

## 6.74.2 Function Documentation

6.74.2.1 int a4l\_sys\_attach (int fd, a4l\_lnkdesc\_t \* arg )

## Attach an Analogy device to a driver.

### **Parameters**

in	fd	File descriptor as returned by a4l_sys_open()
in	arg	Link descriptor argument

#### Returns

0 on success. Otherwise:

- · -ENOMEM is returned if the system is out of memory
- -EINVAL is returned if some argument is missing or wrong (Please, type "dmesg" for more info)
- -EFAULT is returned if a user <-> kernel transfer went wrong
- -ENODEV is returned in case of internal error (Please, type "dmesg" for more info)
- -ENXIO is returned in case of internal error (Please, type "dmesg" for more info)

## 6.74.2.2 int a4l\_sys\_bufcfg (int fd, unsigned int idx\_subd, unsigned long size )

## Configure the buffer size.

This function can configure the buffer size of the file descriptor currently in use. If the subdevice index is set to A4L\_BUF\_DEFMAGIC, it can also define the default buffser size at open time.

#### **Parameters**

in	fd	File descriptor as returned by a4l_sys_open()
in	idx_subd	Index of the concerned subdevice
in	size	Buffer size to be set

#### Returns

0 on success. Otherwise:

- -EINVAL is returned if some argument is missing or wrong (Please, type "dmesg" for more info)
- -EPERM is returned if the function is called in an RT context or if the buffer to resize is mapped in user-space (Please, type "dmesg" for more info)
- -EFAULT is returned if a user <-> kernel transfer went wrong
- -EBUSY is returned if the selected subdevice is already processing an asynchronous operation
- · -ENOMEM is returned if the system is out of memory

Referenced by a4l\_set\_bufsize().

6.74.2.3 int a4l\_sys\_detach (int fd)

Detach an Analogy device from a driver.

#### **Parameters**

in	fd   File descriptor as returned by a4l_sys_open()	
----	--	--

## Returns

0 on success. Otherwise:

- -EINVAL is returned if some argument is missing or wrong (Please, type "dmesg" for more info)
- -EBUSY is returned if the device to be detached is in use
- -EPERM is returned if the devive to be detached still has some buffer mapped in user-space
- -ENODEV is returned in case of internal error (Please, type "dmesg" for more info)
- -ENXIO is returned in case of internal error (Please, type "dmesg" for more info)

## 6.75 Alarm services

General-purpose watchdog timers.

Collaboration diagram for Alarm services:



## **Data Structures**

struct RT\_ALARM\_INFO
 Alarm status descriptor.

#### **Functions**

- int rt\_alarm\_start (RT\_ALARM \*alarm, RTIME value, RTIME interval)
   Start an alarm.
- int rt\_alarm\_stop (RT\_ALARM \*alarm)

Stop an alarm.

- int rt\_alarm\_inquire (RT\_ALARM \*alarm, RT\_ALARM\_INFO \*info)

  Query alarm status.
- int rt\_alarm\_create (RT\_ALARM \*alarm, const char \*name, void(\*handler)(void \*arg), void \*arg)

  Create an alarm object.
- int rt\_alarm\_delete (RT\_ALARM \*alarm)
   Delete an alarm.

## 6.75.1 Detailed Description

General-purpose watchdog timers. Alarms are general-purpose watchdog timers. Alchemy tasks may create any number of alarms and use them to run a user-defined handler, after a specified initial delay has elapsed. Alarms can be either one shot or periodic; in the latter case, the real-time system automatically reprograms the alarm for the next shot according to a user-defined interval value.

#### 6.75.2 Function Documentation

6.75.2.1 int rt\_alarm\_create ( RT\_ALARM \* alarm, const char \* name, void(\*)(void \*arg) handler, void \* arg )

## Create an alarm object.

This routine creates an object triggering an alarm routine at a specified time in the future. Alarms can be periodic or oneshot, depending on the reload interval value passed to rt\_alarm\_start().

6.75 Alarm services 351

#### **Parameters**

alarm	The address of an alarm descriptor which can be later used to identify uniquely the
	created object, upon success of this call.
name	An ASCII string standing for the symbolic name of the alarm. When non-NULL and
	non-empty, a copy of this string is used for indexing the created alarm into the object
	registry.
handler	The address of the routine to call when the alarm expires. This routine is passed
	the arg value.
arg	A user-defined opaque argument passed to the handler.

#### Returns

Zero is returned upon success. Otherwise:

- -ENOMEM is returned if the system fails to get memory from the local pool in order to create the alarm.
- -EEXIST is returned if the *name* is conflicting with an already registered alarm.
- · -EPERM is returned if this service was called from an asynchronous context.

## Tags

thread-unrestricted, switch-secondary

#### Note

Alarms are process-private objects and thus cannot be shared by multiple processes, even if they belong to the same Xenomai session.

```
6.75.2.2 int rt_alarm_delete ( RT_ALARM * alarm )
```

Delete an alarm.

This routine deletes an alarm object previously created by a call to rt\_alarm\_create().

**Parameters** 

alarm	The alarm descriptor.

#### Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if *alarm* is not a valid alarm descriptor.
- -EPERM is returned if this service was called from an asynchronous context.

## Tags

thread-unrestricted, switch-secondary

```
6.75.2.3 int rt_alarm_inquire ( RT_ALARM * alarm, RT_ALARM_INFO * info )
```

Query alarm status.

This routine returns the status information about the specified *alarm*.

#### **Parameters**

alarm	The alarm descriptor.
info	A pointer to the returnbuffer" to copy the information to.

### Returns

Zero is returned and status information is written to the structure pointed at by *info* upon success. Otherwise:

• -EINVAL is returned if alarm is not a valid alarm descriptor.

#### Tags

## unrestricted, switch-primary

References RT\_ALARM\_INFO::active, RT\_ALARM\_INFO::expiries, and RT\_ALARM\_INFO::name.

6.75.2.4 int rt\_alarm\_start ( RT\_ALARM \* alarm, RTIME value, RTIME interval )

#### Start an alarm.

This routine programs the trigger date of an alarm object. An alarm can be either periodic or oneshot, depending on the *interval* value.

Alarm handlers are always called on behalf of Xenomai's internal timer event routine. Therefore, Xenomai routines which can be called from such handlers are restricted to the set of services available on behalf of an asynchronous context.

This service overrides any previous setup of the expiry date and reload interval for the alarm.

## **Parameters**

alarm	The alarm descriptor.
value	The relative date of the first expiry, expressed in clock ticks (see note).
interval	The reload value of the alarm. It is a periodic interval value to be used for repro-
	gramming the next alarm shot, expressed in clock ticks (see note). If interval is
	equal to TM_INFINITE, the alarm will not be reloaded after it has expired.

#### Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if alarm is not a valid alarm descriptor.
- · -EPERM is returned if this service was called from an invalid context.

## Tags

xthread-only, switch-primary

## Note

Each of the initial *value* and *interval* is interpreted as a multiple of the Alchemy clock resolution (see –alchemy-clock-resolution option, defaults to 1 nanosecond).

6.75.2.5 int rt\_alarm\_stop ( RT\_ALARM \* alarm )

## Stop an alarm.

This routine disables an alarm object, preventing any further expiry until it is re-enabled via rt\_alarm\_start().

6.75 Alarm services 353

## **Parameters**

alarm	The alarm descriptor.

## Returns

Zero is returned upon success. Otherwise:

• -EINVAL is returned if alarm is not a valid alarm descriptor.

## Tags

unrestricted, switch-primary

## 6.76 Buffer services

Lightweight FIFO IPC mechanism.

Collaboration diagram for Buffer services:



#### **Data Structures**

struct RT\_BUFFER\_INFO
 Buffer status descriptor.

## Macros

#define B\_PRIO 0x1 /\* Pend by task priority order. \*/
 Creation flags.

#### **Functions**

- int rt\_buffer\_create (RT\_BUFFER \*bf, const char \*name, size\_t bufsz, int mode)

  Create an IPC buffer.
- int rt\_buffer\_delete (RT\_BUFFER \*bf)

Delete an IPC buffer.

ssize\_t rt\_buffer\_write\_timed (RT\_BUFFER \*bf, const void \*ptr, size\_t size, const struct timespec \*abs timeout)

Write to an IPC buffer.

- static ssize\_t rt\_buffer\_write\_until (RT\_BUFFER \*bf, const void \*ptr, size\_t size, RTIME timeout)

  Write to an IPC buffer (with absolute scalar timeout).
- static ssize\_t rt\_buffer\_write (RT\_BUFFER \*bf, const void \*ptr, size\_t size, RTIME timeout)

  Write to an IPC buffer (with relative scalar timeout).
- ssize\_t rt\_buffer\_read\_timed (RT\_BUFFER \*bf, void \*ptr, size\_t size, const struct timespec \*abs\_timeout)

Read from an IPC buffer.

- static ssize\_t rt\_buffer\_read\_until (RT\_BUFFER \*bf, void \*ptr, size\_t size, RTIME timeout)

  Read from an IPC buffer (with absolute scalar timeout).
- static ssize\_t rt\_buffer\_read (RT\_BUFFER \*bf, void \*ptr, size\_t size, RTIME timeout)
- Read from an IPC buffer (with relative scalar timeout).

   int rt\_buffer\_clear (RT\_BUFFER \*bf)

Clear an IPC buffer.

• int rt\_buffer\_inquire (RT\_BUFFER \*bf, RT\_BUFFER\_INFO \*info)

Query buffer status.

• int rt\_buffer\_bind (RT\_BUFFER \*bf, const char \*name, RTIME timeout)

6.76 Buffer services 355

Bind to an IPC buffer.

• int rt\_buffer\_unbind (RT\_BUFFER \*bf)

Unbind from an IPC buffer.

## 6.76.1 Detailed Description

Lightweight FIFO IPC mechanism. A buffer is a lightweight IPC mechanism, implementing a fast, one-way producer-consumer data path. All messages written are buffered in a single memory area in strict FIFO order, until read either in blocking or non-blocking mode.

Message are always atomically handled on the write side (i.e. no interleave, no short writes), whilst only complete messages are normally returned to the read side. However, short reads may happen under a well-defined situation (see note in rt\_buffer\_read()), albeit they can be fully avoided by proper use of the buffer.

#### 6.76.2 Macro Definition Documentation

6.76.2.1 #define B PRIO 0x1 /\* Pend by task priority order. \*/

Creation flags.

Referenced by rt buffer create().

## 6.76.3 Function Documentation

6.76.3.1 int rt\_buffer\_bind ( RT\_BUFFER \* bf, const char \* name, RTIME timeout )

### Bind to an IPC buffer.

This routine creates a new descriptor to refer to an existing IPC buffer identified by its symbolic name. If the object does not exist on entry, the caller may block until a buffer of the given name is created.

#### **Parameters**

bf	The address of a buffer descriptor filled in by the operation. Contents of this memory
	is undefined upon failure.
name	A valid NULL-terminated name which identifies the buffer to bind to. This string
	should match the object name argument passed to rt_buffer_create().
timeout	The number of clock ticks to wait for the registration to occur (see note). Passing
	TM_INFINITE causes the caller to block indefinitely until the object is registered.
	Passing TM_NONBLOCK causes the service to return immediately without waiting
	if the object is not registered on entry.

## Returns

Zero is returned upon success. Otherwise:

- -EINTR is returned if rt\_task\_unblock() was called for the current task before the retrieval has completed.
- -EWOULDBLOCK is returned if timeout is equal to TM\_NONBLOCK and the searched object is not registered on entry.
- -ETIMEDOUT is returned if the object cannot be retrieved within the specified amount of time.
- -EPERM is returned if this service should block, but was not called from a Xenomai thread.

Tags

xthread-nowait, switch-primary

Note

The *timeout* value is interpreted as a multiple of the Alchemy clock resolution (see –alchemy-clock-resolution option, defaults to 1 nanosecond).

6.76.3.2 int rt\_buffer\_clear ( RT\_BUFFER \* bf )

Clear an IPC buffer.

This routine empties a buffer from any data.

**Parameters** 

bf The buffer descriptor.

#### Returns

Zero is returned upon success. Otherwise:

• -EINVAL is returned if bf is not a valid buffer descriptor.

Tags

unrestricted, switch-primary

6.76.3.3 int rt buffer create ( RT BUFFER \* bf, const char \* name, size t bufsz, int mode )

Create an IPC buffer.

This routine creates an IPC object that allows tasks to send and receive data asynchronously via a memory buffer. Data may be of an arbitrary length, albeit this IPC is best suited for small to medium-sized messages, since data always have to be copied to the buffer during transit. Large messages may be more efficiently handled by message queues (RT\_QUEUE).

#### **Parameters**

bf	The address of a buffer descriptor which can be later used to identify uniquely the
	created object, upon success of this call.
name	An ASCII string standing for the symbolic name of the buffer. When non-NULL and non-empty, a copy of this string is used for indexing the created buffer into the object registry.
bufsz	The size of the buffer space available to hold data. The required memory is obtained from the main heap.
mode	The buffer creation mode. The following flags can be OR'ed into this bitmask, each of them affecting the new buffer:

- B\_FIFO makes tasks pend in FIFO order for reading data from the buffer.
- B\_PRIO makes tasks pend in priority order for reading data from the buffer.

This parameter also applies to tasks blocked on the buffer's write side (see rt buffer write()).

6.76 Buffer services 357

## Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if mode is invalid or bufsz is zero.
- -ENOMEM is returned if the system fails to get memory from the main heap in order to create the buffer.
- -EEXIST is returned if the *name* is conflicting with an already registered buffer.
- -EPERM is returned if this service was called from an asynchronous context.

## Tags

thread-unrestricted, switch-secondary

## Note

Buffers can be shared by multiple processes which belong to the same Xenomai session.

References B\_PRIO.

```
6.76.3.4 int rt buffer delete ( RT BUFFER * bf )
```

Delete an IPC buffer.

This routine deletes a buffer object previously created by a call to rt buffer create().

**Parameters** 

bf	The buffer descriptor.
----	------------------------

### Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if bf is not a valid buffer descriptor.
- -EPERM is returned if this service was called from an asynchronous context.

## Tags

thread-unrestricted, switch-secondary

```
6.76.3.5 int rt_buffer_inquire ( RT_BUFFER * bf, RT_BUFFER_INFO * info )
```

Query buffer status.

This routine returns the status information about the specified buffer.

**Parameters** 

bf	The buffer descriptor.
info	A pointer to the returnbuffer" to copy the information to.

358 Module Documentation

#### Returns

Zero is returned and status information is written to the structure pointed at by *info* upon success. Otherwise:

• -EINVAL is returned if bf is not a valid buffer descriptor.

## Tags

## unrestricted, switch-primary

References RT\_BUFFER\_INFO::availmem, RT\_BUFFER\_INFO::iwaiters, RT\_BUFFER\_INFO::name, RT\_BUFFER\_INFO::owaiters, and RT\_BUFFER\_INFO::totalmem.

```
6.76.3.6 ssize_t rt_buffer_read ( RT_BUFFER * bf, void * ptr, size_t len, RTIME timeout ) [inline], [static]
```

Read from an IPC buffer (with relative scalar timeout).

This routine is a variant of rt\_buffer\_read\_timed() accepting a relative timeout specification expressed as a scalar value.

#### **Parameters**

bf	The buffer descriptor.
ptr	A pointer to a memory area which will be written upon success with the received
	data.
len	The length in bytes of the memory area pointed to by ptr.
timeout	A delay expressed in clock ticks.

## Tags

## xthread-nowait, switch-primary

References rt\_buffer\_read\_timed().

```
6.76.3.7 ssize_t rt_buffer_read_timed ( RT_BUFFER * bf, void * ptr, size_t len, const struct timespec * abs_timeout )
```

#### Read from an IPC buffer.

This routine reads the next message from the specified buffer. If no message is available on entry, the caller is allowed to block until enough data is written to the buffer, or a timeout elapses.

## **Parameters**

bf	The buffer descriptor.
ptr	A pointer to a memory area which will be written upon success with the received
	data.
len	The length in bytes of the memory area pointed to by ptr. Under normal circum-
	stances, rt_buffer_read_timed() only returns entire messages as specified by the
	len argument, or an error value. However, short reads are allowed when a potential
	deadlock situation is detected (see note below).

6.76 Buffer services 359

abs_timeout	An absolute date expressed in clock ticks, specifying a time limit to wait for a mes-
	sage to be available from the buffer (see note). Passing NULL causes the caller to
	block indefinitely until enough data is available. Passing { .tv_sec = 0, .tv_nsec = 0 }
	causes the service to return immediately without blocking in case not enough data
	is available.

#### Returns

The number of bytes read from the buffer is returned upon success. Otherwise:

- -ETIMEDOUT is returned if abs\_timeout is reached before a complete message arrives.
- -EWOULDBLOCK is returned if abs\_timeout is { .tv\_sec = 0, .tv\_nsec = 0 } and not enough data is immediately available on entry to form a complete message.
- -EINTR is returned if rt\_task\_unblock() was called for the current task before enough data became available to form a complete message.
- -EINVAL is returned if *bf* is not a valid buffer descriptor, or *len* is greater than the actual buffer length.
- -EIDRM is returned if *bf* is deleted while the caller was waiting for data. In such event, *bf* is no more valid upon return of this service.
- -EPERM is returned if this service should block, but was not called from a Xenomai thread.

#### Note

A short read (i.e. fewer bytes returned than requested by *len*) may happen whenever a pathological use of the buffer is encountered. This condition only arises when the system detects that one or more writers are waiting for sending data, while a reader would have to wait for receiving a complete message at the same time. For instance, consider the following sequence, involving a 1024-byte buffer (bf) and two threads:

writer thread > rt\_write\_buffer(&bf, ptr, 1, TM\_INFINITE); (one byte to read, 1023 bytes available for sending) writer thread > rt\_write\_buffer(&bf, ptr, 1024, TM\_INFINITE); (writer blocks - no space for another 1024-byte message) reader thread > rt\_read\_buffer(&bf, ptr, 1024, TM\_INFINITE); (short read - a truncated (1-byte) message is returned)

In order to prevent both threads to wait for each other indefinitely, a short read is allowed, which may be completed by a subsequent call to rt\_buffer\_read() or rt\_buffer\_read\_until(). If that case arises, thread priorities, buffer and/or message lengths should likely be fixed, in order to eliminate such condition.

## Tags

xthread-nowait, switch-primary

#### Note

abs\_timeout is interpreted as a multiple of the Alchemy clock resolution (see -alchemy-clock-resolution option, defaults to 1 nanosecond).

Referenced by rt\_buffer\_read(), and rt\_buffer\_read\_until().

```
6.76.3.8 ssize_t rt_buffer_read_until ( RT_BUFFER * bf, void * ptr, size_t len, RTIME abs_timeout ) [inline], [static]
```

Read from an IPC buffer (with absolute scalar timeout).

This routine is a variant of rt\_buffer\_read\_timed() accepting an absolute timeout specification expressed as a scalar value.

#### **Parameters**

bf	The buffer descriptor.
ptr	A pointer to a memory area which will be written upon success with the received
	data.
len	The length in bytes of the memory area pointed to by ptr.
abs_timeout	An absolute date expressed in clock ticks.

## Tags

xthread-nowait, switch-primary

References rt\_buffer\_read\_timed().

6.76.3.9 int rt buffer unbind ( RT BUFFER \* bf )

Unbind from an IPC buffer.

**Parameters** 

bf	The buffer descriptor.

This routine releases a previous binding to an IPC buffer. After this call has returned, the descriptor is no more valid for referencing this object.

### Tags

#### thread-unrestricted

```
6.76.3.10 ssize_t rt_buffer_write ( RT_BUFFER * bf, const void * ptr, size_t len, RTIME timeout ) [inline], [static]
```

Write to an IPC buffer (with relative scalar timeout).

This routine is a variant of rt\_buffer\_write\_timed() accepting a relative timeout specification expressed as a scalar value.

#### **Parameters**

bf	The buffer descriptor.
ptr	The address of the message data to be written to the buffer.
len	The length in bytes of the message data.
timeout	A delay expressed in clock ticks.

## Tags

xthread-nowait, switch-primary

References rt\_buffer\_write\_timed().

6.76.3.11 ssize\_t rt\_buffer\_write\_timed ( RT\_BUFFER \* bf, const void \* ptr, size\_t len, const struct timespec \* abs\_timeout )

Write to an IPC buffer.

This routine writes a message to the specified buffer. If not enough buffer space is available on entry to hold the message, the caller is allowed to block until enough room is freed, or a timeout elapses, whichever comes first.

6.76 Buffer services 361

#### **Parameters**

bf	The buffer descriptor.
ptr	The address of the message data to be written to the buffer.
len	The length in bytes of the message data. Zero is a valid value, in which case the
	buffer is left untouched, and zero is returned to the caller.
abs_timeout	An absolute date expressed in clock ticks, specifying a time limit to wait for enough
	buffer space to be available to hold the message (see note). Passing NULL causes
	the caller to block indefinitely until enough buffer space is available. Passing { .tv
	sec = 0, .tv_nsec = 0 } causes the service to return immediately without blocking in
	case of buffer space shortage.

### Returns

The number of bytes written to the buffer is returned upon success. Otherwise:

- -ETIMEDOUT is returned if the absolute *abs\_timeout* date is reached before enough buffer space is available to hold the message.
- -EWOULDBLOCK is returned if abs\_timeout is { .tv\_sec = 0, .tv\_nsec = 0 } and no buffer space is immediately available on entry to hold the message.
- -EINTR is returned if rt\_task\_unblock() was called for the current task before enough buffer space became available to hold the message.
- -EINVAL is returned if *bf* is not a valid buffer descriptor, or *len* is greater than the actual buffer length.
- -EIDRM is returned if *bf* is deleted while the caller was waiting for buffer space. In such event, *bf* is no more valid upon return of this service.
- -EPERM is returned if this service should block, but was not called from a Xenomai thread.

## Tags

xthread-nowait, switch-primary

#### Note

abs\_timeout is interpreted as a multiple of the Alchemy clock resolution (see -alchemy-clock-resolution option, defaults to 1 nanosecond).

Referenced by rt\_buffer\_write(), and rt\_buffer\_write\_until().

6.76.3.12 ssize\_t rt\_buffer\_write\_until ( RT\_BUFFER \* bf, const void \* ptr, size\_t len, RTIME abs timeout ) [inline], [static]

Write to an IPC buffer (with absolute scalar timeout).

This routine is a variant of rt\_buffer\_write\_timed() accepting an absolute timeout specification expressed as a scalar value.

#### **Parameters**

bf The buffer descriptor.	
---------------------------	--

ptr	The address of the message data to be written to the buffer.
len	The length in bytes of the message data.
abs_timeout	An absolute date expressed in clock ticks.

## Tags

xthread-nowait, switch-primary

References rt\_buffer\_write\_timed().

## 6.77 Condition variable services

POSIXish condition variable mechanism.

Collaboration diagram for Condition variable services:



## **Data Structures**

• struct RT COND INFO

Condition variable status descriptor.

## **Functions**

• int rt\_cond\_create (RT\_COND \*cond, const char \*name)

Create a condition variable.

• int rt\_cond\_delete (RT\_COND \*cond)

Delete a condition variable.

int rt\_cond\_signal (RT\_COND \*cond)

Signal a condition variable.

int rt\_cond\_broadcast (RT\_COND \*cond)

Broadcast a condition variable.

int rt\_cond\_wait\_timed (RT\_COND \*cond, RT\_MUTEX \*mutex, const struct timespec \*abs\_timeout)

Wait on a condition variable.

static int rt\_cond\_wait\_until (RT\_COND \*cond, RT\_MUTEX \*mutex, RTIME timeout)

Wait on a condition variable (with absolute scalar timeout).

• static int rt\_cond\_wait (RT\_COND \*cond, RT\_MUTEX \*mutex, RTIME timeout)

Wait on a condition variable (with relative scalar timeout).

• int rt\_cond\_inquire (RT\_COND \*cond, RT\_COND\_INFO \*info)

Query condition variable status.

• int rt\_cond\_bind (RT\_COND \*cond, const char \*name, RTIME timeout)

Bind to a condition variable.

int rt\_cond\_unbind (RT\_COND \*cond)

Unbind from a condition variable.

## 6.77.1 Detailed Description

POSIXish condition variable mechanism. A condition variable is a synchronization mechanism which allows tasks to suspend execution until some predicate on some arbitrary shared data is satisfied.

The basic operations on conditions are: signal the condition (when the predicate becomes true), and wait for the condition, blocking the task execution until another task signals the condition. A condition variable must always be associated with a mutex, to avoid a well-known race condition where a task prepares to wait on a condition variable and another task signals the condition just before the first task actually waits on it.

## 6.77.2 Function Documentation

6.77.2.1 int rt cond bind ( RT COND \* cond, const char \* name, RTIME timeout )

Bind to a condition variable.

This routine creates a new descriptor to refer to an existing condition variable identified by its symbolic name. If the object not exist on entry, the caller may block until a condition variable of the given name is created.

#### **Parameters**

364

cond	The address of a condition variable descriptor filled in by the operation. Contents of
	this memory is undefined upon failure.
name	A valid NULL-terminated name which identifies the condition variable to bind to. This
	string should match the object name argument passed to rt_cond_create().
timeout	The number of clock ticks to wait for the registration to occur (see note). Passing
	TM_INFINITE causes the caller to block indefinitely until the object is registered.
	Passing TM_NONBLOCK causes the service to return immediately without waiting
	if the object is not registered on entry.

### Returns

Zero is returned upon success. Otherwise:

- -EINTR is returned if rt\_task\_unblock() was called for the current task before the retrieval has completed.
- -EWOULDBLOCK is returned if timeout is equal to TM\_NONBLOCK and the searched object is not registered on entry.
- -ETIMEDOUT is returned if the object cannot be retrieved within the specified amount of time.
- -EPERM is returned if this service should block, but was not called from a Xenomai thread.

## Tags

xthread-nowait, switch-primary

### Note

The *timeout* value is interpreted as a multiple of the Alchemy clock resolution (see –alchemy-clock-resolution option, defaults to 1 nanosecond).

6.77.2.2 int rt\_cond\_broadcast ( RT\_COND \* cond )

Broadcast a condition variable.

All tasks currently waiting on the condition variable are immediately unblocked.

cond	The condition variable descriptor.

### Returns

Zero is returned upon success. Otherwise:

-EINVAL is returned if cond is not a valid condition variable descriptor.

### Tags

unrestricted, switch-primary

References pthread\_cond\_broadcast().

6.77.2.3 int rt cond create ( RT COND \* cond, const char \* name )

Create a condition variable.

Create a synchronization object which allows tasks to suspend execution until some predicate on shared data is satisfied.

### **Parameters**

cond	The address of a condition variable descriptor which can be later used to identify
	uniquely the created object, upon success of this call.
name	An ASCII string standing for the symbolic name of the condition variable. When non-
	NULL and non-empty, a copy of this string is used for indexing the created condition
	variable into the object registry.

## Returns

Zero is returned upon success. Otherwise:

- -ENOMEM is returned if the system fails to get memory from the main heap in order to create the condition variable.
- -EEXIST is returned if the *name* is conflicting with an already registered condition variable.
- -EPERM is returned if this service was called from an asynchronous context.

## Tags

thread-unrestricted, switch-secondary

### Note

Condition variables can be shared by multiple processes which belong to the same Xenomai session.

#### Attention

If the underlying threading library does not support <a href="pthread\_condattr\_setclock">pthread\_condattr\_setclock</a>(), timings with Alchemy condition variables will be based on CLOCK\_REALTIME, and may therefore be affected by updates to the system date (e.g. NTP). This typically concerns legacy setups based on the linuxthreads library. In the normal case, timings are based on CLOCK\_MONOTONIC.

References pthread\_cond\_destroy(), pthread\_cond\_init(), pthread\_condattr\_destroy(), pthread\_condattr\_setclock(), and pthread\_condattr\_setpshared().

```
6.77.2.4 int rt_cond_delete ( RT_COND * cond )
```

Delete a condition variable.

This routine deletes a condition variable object previously created by a call to rt\_cond\_create().

**Parameters** 

```
cond The condition variable descriptor.
```

## Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if alarm is not a valid condition variable descriptor.
- -EPERM is returned if this service was called from an asynchronous context.
- -EBUSY is returned upon an attempt to destroy the object referenced by cond while it is referenced
  (for example, while being used in a rt\_cond\_wait(), rt\_cond\_wait\_timed() or rt\_cond\_wait\_until() by
  another task).

## Tags

thread-unrestricted, switch-secondary

References pthread\_cond\_destroy().

```
6.77.2.5 int rt_cond_inquire ( RT_COND * cond, RT_COND_INFO * info )
```

Query condition variable status.

This routine returns the status information about the specified condition variable.

**Parameters** 

cond	The condition variable descriptor.
info	A pointer to the returnbuffer" to copy the information to.

#### Returns

Zero is returned and status information is written to the structure pointed at by *info* upon success. Otherwise:

• -EINVAL is returned if cond is not a valid condition variable descriptor.

### Tags

unrestricted, switch-primary

References RT COND INFO::name.

```
6.77.2.6 int rt_cond_signal ( RT_COND * cond )
```

Signal a condition variable.

If the condition variable *cond* is pended, this routine immediately unblocks the first waiting task (by queuing priority order).

cond	The condition variable descriptor.

### Returns

Zero is returned upon success. Otherwise:

-EINVAL is returned if cond is not a valid condition variable descriptor.

### Tags

unrestricted, switch-primary

References pthread\_cond\_signal().

```
6.77.2.7 int rt_cond_unbind ( RT_COND * cond )
```

Unbind from a condition variable.

**Parameters** 

cond	The condition variable descriptor.
------	------------------------------------

This routine releases a previous binding to a condition variable. After this call has returned, the descriptor is no more valid for referencing this object.

## Tags

thread-unrestricted

```
6.77.2.8 int rt_cond_wait ( RT_COND * cond, RT_MUTEX * mutex, RTIME timeout ) [inline], [static]
```

Wait on a condition variable (with relative scalar timeout).

This routine is a variant of rt\_cond\_wait\_timed() accepting a relative timeout specification expressed as a scalar value.

### **Parameters**

cond	The condition variable descriptor.
mutex	The address of the mutex serializing the access to the shared data.
timeout	A delay expressed in clock ticks.

## Tags

xthread-only, switch-primary

References rt\_cond\_wait\_timed().

```
6.77.2.9 int rt_cond_wait_timed ( RT_COND * cond, RT_MUTEX * mutex, const struct timespec * abs_timeout )
```

Wait on a condition variable.

This service atomically releases the mutex and blocks the calling task, until the condition variable *cond* is signaled or a timeout occurs, whichever comes first. The mutex is re-acquired before returning from this service.

cond	The condition variable descriptor.
mutex	The address of the mutex serializing the access to the shared data.
abs_timeout	An absolute date expressed in clock ticks, specifying a time limit to wait for the condition variable to be signaled (see note). Passing NULL causes the caller to block indefinitely.

### Returns

Zero is returned upon success. Otherwise:

- -ETIMEDOUT is returned if abs timeout is reached before the condition variable is signaled.
- -EWOULDBLOCK is returned if abs\_timeout is { .tv\_sec = 0, .tv\_nsec = 0 } .
- -EINTR is returned if rt\_task\_unblock() was called for the current task.
- -EINVAL is returned if cond is not a valid condition variable descriptor.
- -EIDRM is returned if *cond* is deleted while the caller was waiting on the condition variable. In such event, *cond* is no more valid upon return of this service.
- -EPERM is returned if this service should block, but was not called from a Xenomai thread.

### Tags

xthread-only, switch-primary

### Note

abs\_timeout is interpreted as a multiple of the Alchemy clock resolution (see -alchemy-clock-resolution option, defaults to 1 nanosecond).

References pthread\_cond\_timedwait(), and pthread\_cond\_wait().

Referenced by rt\_cond\_wait(), and rt\_cond\_wait\_until().

Wait on a condition variable (with absolute scalar timeout).

This routine is a variant of rt\_cond\_wait\_timed() accepting an abs\_timeout specification expressed as a scalar value.

### **Parameters**

cond	The condition variable descriptor.
mutex	The address of the mutex serializing the access to the shared data.
abs_timeout	An absolute date expressed in clock ticks.

### Tags

xthread-only, switch-primary

References rt\_cond\_wait\_timed().

# 6.78 Event flag group services

Inter-task notification mechanism based on discrete flags.

Collaboration diagram for Event flag group services:



## **Data Structures**

• struct RT\_EVENT\_INFO

Event status descriptor.

## Macros

#define EV\_PRIO 0x1 /\* Pend by task priority order. \*/

Creation flags.

#define EV ANY 0x1 /\* Disjunctive wait. \*/

Operation flags.

### **Functions**

• int rt event delete (RT EVENT \*event)

Delete an event flag group.

 int rt\_event\_wait\_timed (RT\_EVENT \*event, unsigned int mask, unsigned int \*mask\_r, int mode, const struct timespec \*abs\_timeout)

Wait for an arbitrary set of events.

 static int rt\_event\_wait\_until (RT\_EVENT \*event, unsigned int mask, unsigned int \*mask\_r, int mode, RTIME timeout)

Wait for an arbitrary set of events (with absolute scalar timeout).

• static int rt\_event\_wait (RT\_EVENT \*event, unsigned int mask, unsigned int \*mask\_r, int mode, RTIME timeout)

Wait for an arbitrary set of events (with relative scalar timeout).

• int rt event inquire (RT EVENT \*event, RT EVENT INFO \*info)

Query event flag group status.

• int rt\_event\_bind (RT\_EVENT \*event, const char \*name, RTIME timeout)

Bind to an event flag group.

int rt\_event\_unbind (RT\_EVENT \*event)

Unbind from an event flag group.

• int rt\_event\_create (RT\_EVENT \*event, const char \*name, unsigned int ivalue, int mode)

Create an event flag group.

int rt\_event\_signal (RT\_EVENT \*event, unsigned int mask)

Signal an event.

• int rt\_event\_clear (RT\_EVENT \*event, unsigned int mask, unsigned int \*mask\_r)

Clear event flags.

370 Module Documentation

## 6.78.1 Detailed Description

Inter-task notification mechanism based on discrete flags. An event flag group is a synchronization object represented by a long-word structure; every available bit in this word represents a user-defined event flag.

When a bit is set, the associated event is said to have occurred. Xenomai tasks can use this mechanism to signal the occurrence of particular events to other tasks.

Tasks can either wait for events to occur in a conjunctive manner (all awaited events must have occurred to satisfy the wait request), or in a disjunctive way (at least one of the awaited events must have occurred to satisfy the wait request).

## 6.78.2 Macro Definition Documentation

6.78.2.1 #define EV ANY 0x1 /\* Disjunctive wait. \*/

Operation flags.

Referenced by rt event wait timed().

6.78.2.2 #define EV PRIO 0x1 /\* Pend by task priority order. \*/

Creation flags.

Referenced by rt event create().

## 6.78.3 Function Documentation

6.78.3.1 int rt\_event\_bind ( RT\_EVENT \* event, const char \* name, RTIME timeout )

Bind to an event flag group.

This routine creates a new descriptor to refer to an existing event flag group identified by its symbolic name. If the object does not exist on entry, the caller may block until an event flag group of the given name is created.

#### **Parameters**

event	The address of an event flag group descriptor filled in by the operation. Contents of
	this memory is undefined upon failure.
name	A valid NULL-terminated name which identifies the event flag group to bind to. This
	string should match the object name argument passed to rt_event_create().
timeout	The number of clock ticks to wait for the registration to occur (see note). Passing
	TM_INFINITE causes the caller to block indefinitely until the object is registered.
	Passing TM_NONBLOCK causes the service to return immediately without waiting
	if the object is not registered on entry.

## Returns

Zero is returned upon success. Otherwise:

- -EINTR is returned if rt\_task\_unblock() was called for the current task before the retrieval has completed.
- -EWOULDBLOCK is returned if *timeout* is equal to TM\_NONBLOCK and the searched object is not registered on entry.
- -ETIMEDOUT is returned if the object cannot be retrieved within the specified amount of time.

• -EPERM is returned if this service should block, but was not called from a Xenomai thread.

## Tags

xthread-nowait, switch-primary

### Note

The *timeout* value is interpreted as a multiple of the Alchemy clock resolution (see –alchemy-clock-resolution option, defaults to 1 nanosecond).

6.78.3.2 int rt\_event\_clear ( RT\_EVENT \* event, unsigned int mask, unsigned int \* mask\_r )

## Clear event flags.

This routine clears a set of flags from event.

### **Parameters**

event	The event descriptor.
mask	The set of event flags to be cleared.
mask_r	If non-NULL, mask_r is the address of a memory location which will receive the
	previous value of the event flag group before the flags are cleared.

#### Returns

Zero is returned upon success. Otherwise:

• -EINVAL is returned if event is not a valid event flag group descriptor.

## Tags

unrestricted, switch-primary

6.78.3.3 int rt\_event\_create ( RT\_EVENT \* event, const char \* name, unsigned int ivalue, int mode )

## Create an event flag group.

Event groups provide for task synchronization by allowing a set of flags (or "events") to be waited for and posted atomically. An event group contains a mask of received events; an arbitrary set of event flags can be pended or posted in a single operation.

## **Parameters**

	event	The address of an event descriptor which can be later used to identify uniquely the
		created object, upon success of this call.
Ī	name	An ASCII string standing for the symbolic name of the event. When non-NULL and
		non-empty, a copy of this string is used for indexing the created event into the object
		registry.

ivalue	The initial value of the group's event mask.
mode	The event group creation mode. The following flags can be OR'ed into this bitmask:

- EV\_FIFO makes tasks pend in FIFO order on the event flag group.
- EV\_PRIO makes tasks pend in priority order on the event flag group.

## Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if mode is invalid.
- -ENOMEM is returned if the system fails to get memory from the main heap in order to create the event flag group.
- -EEXIST is returned if the name is conflicting with an already registered event flag group.
- · -EPERM is returned if this service was called from an asynchronous context.

## Tags

thread-unrestricted, switch-secondary

### Note

Event flag groups can be shared by multiple processes which belong to the same Xenomai session.

References EV PRIO.

```
6.78.3.4 int rt event delete ( RT EVENT * event )
```

Delete an event flag group.

This routine deletes a event flag group previously created by a call to rt\_event\_create().

**Parameters** 

event   The event descriptor.
-------------------------------

## Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if event is not a valid event flag group descriptor.
- -EPERM is returned if this service was called from an asynchronous context.

## Tags

thread-unrestricted, switch-secondary

```
6.78.3.5 int rt_event_inquire ( RT_EVENT * event, RT_EVENT_INFO * info )
```

Query event flag group status.

This routine returns the status information about event.

event	The event descriptor.
info	A pointer to the returnbuffer" to copy the information to.

### Returns

Zero is returned and status information is written to the structure pointed at by *info* upon success. Otherwise:

• -EINVAL is returned if event is not a valid event flag group descriptor.

## Tags

unrestricted, switch-primary

References RT\_EVENT\_INFO::name, RT\_EVENT\_INFO::nwaiters, and RT\_EVENT\_INFO::value.

```
6.78.3.6 int rt_event_signal ( RT_EVENT * event, unsigned int mask )
```

### Signal an event.

Post a set of flags to *event*. All tasks having their wait request satisfied as a result of this operation are immediately readied.

#### **Parameters**

event	The event descriptor.
mask	The set of events to be posted.

## Returns

Zero is returned upon success. Otherwise:

• -EINVAL is returned if event is not an event flag group descriptor.

## Tags

unrestricted, switch-primary

```
6.78.3.7 int rt_event_unbind ( RT_EVENT * event )
```

Unbind from an event flag group.

## **Parameters**

event	The event descriptor.

This routine releases a previous binding to an event flag group. After this call has returned, the descriptor is no more valid for referencing this object.

## Tags

thread-unrestricted

374 Module Documentation

6.78.3.8 int rt\_event\_wait ( RT\_EVENT \* event, unsigned int mask, unsigned int \* mask\_r, int mode, RTIME timeout ) [inline], [static]

Wait for an arbitrary set of events (with relative scalar timeout).

This routine is a variant of rt\_event\_wait\_timed() accepting a relative timeout specification expressed as a scalar value.

event	The event descriptor.
mask	The set of bits to wait for.
mask_r	The value of the event mask at the time the task was readied.
mode	The pend mode.
timeout	A delay expressed in clock ticks,

## Tags

xthread-nowait, switch-primary

References rt\_event\_wait\_timed().

6.78.3.9 int rt\_event\_wait\_timed ( RT\_EVENT \* event, unsigned int mask, unsigned int \* mask\_r, int mode, const struct timespec \* abs\_timeout )

Wait for an arbitrary set of events.

Waits for one or more events to be signaled in event, or until a timeout elapses.

#### **Parameters**

event	The event descriptor.
mask	The set of bits to wait for. Passing zero causes this service to return immediately
	with a success value; the current value of the event mask is also copied to mask_r.
mask_r	The value of the event mask at the time the task was readied.
mode	The pend mode. The following flags can be OR'ed into this bitmask, each of them
	affecting the operation:

- EV\_ANY makes the task pend in disjunctive mode (i.e. OR); this means that the request is fulfilled when at least one bit set into *mask* is set in the current event mask.
- EV\_ALL makes the task pend in conjunctive mode (i.e. AND); this means that the request is fulfilled when at all bits set into *mask* are set in the current event mask.

#### **Parameters**

abs_timeout	An absolute date expressed in clock ticks, specifying a time limit to wait for the re-
	quest to be satisfied (see note). Passing NULL causes the caller to block indefinitely
	until the request is satisfied. Passing { .tv_sec = 0, .tv_nsec = 0 } causes the service
	to return without blocking in case the request cannot be satisfied immediately.

## Returns

Zero is returned upon success. Otherwise:

- -ETIMEDOUT is returned if abs\_timeout is reached before the request is satisfied.
- -EWOULDBLOCK is returned if abs\_timeout is { .tv\_sec = 0, .tv\_nsec = 0 } and the requested flags are not set on entry to the call.
- -EINTR is returned if rt\_task\_unblock() was called for the current task before the request is satisfied.
- -EINVAL is returned if *mode* is invalid, or *event* is not a valid event flag group descriptor.
- -EIDRM is returned if *event* is deleted while the caller was sleeping on it. In such a case, *event* is no more valid upon return of this service.

376 Module Documentation

• -EPERM is returned if this service should block, but was not called from a Xenomai thread.

## Tags

xthread-nowait, switch-primary

## Note

abs\_timeout value is interpreted as a multiple of the Alchemy clock resolution (see –alchemy-clock-resolution option, defaults to 1 nanosecond).

References EV ANY.

Referenced by rt\_event\_wait(), and rt\_event\_wait\_until().

6.78.3.10 int rt\_event\_wait\_until ( RT\_EVENT \* event, unsigned int mask, unsigned int \* mask\_r, int mode, RTIME abs\_timeout ) [inline], [static]

Wait for an arbitrary set of events (with absolute scalar timeout).

This routine is a variant of rt\_event\_wait\_timed() accepting an absolute timeout specification expressed as a scalar value.

#### **Parameters**

event	The event descriptor.
mask	The set of bits to wait for.
mask_r	The value of the event mask at the time the task was readied.
mode	The pend mode.
abs_timeout	An absolute date expressed in clock ticks.

## Tags

xthread-nowait, switch-primary

References rt\_event\_wait\_timed().

# 6.79 Heap management services

Region of memory dedicated to real-time allocation.

Collaboration diagram for Heap management services:



### **Data Structures**

struct RT HEAP INFO

Heap status descriptor.

## Macros

#define H\_PRIO 0x1 /\* Pend by task priority order. \*/
 Creation flags.

## **Functions**

- int rt\_heap\_create (RT\_HEAP \*heap, const char \*name, size\_t heapsize, int mode)
   Create a heap.
- int rt\_heap\_delete (RT\_HEAP \*heap)

Delete a heap.

 int rt\_heap\_alloc\_timed (RT\_HEAP \*heap, size\_t size, const struct timespec \*abs\_timeout, void \*\*blockp)

Allocate a block from a heap.

• static int rt\_heap\_alloc\_until (RT\_HEAP \*heap, size\_t size, RTIME timeout, void \*\*blockp)

Allocate a block from a heap (with absolute scalar timeout).

• static int rt\_heap\_alloc (RT\_HEAP \*heap, size\_t size, RTIME timeout, void \*\*blockp)

Allocate a block from a heap (with relative scalar timeout).

• int rt\_heap\_free (RT\_HEAP \*heap, void \*block)

Release a block to a heap.

int rt\_heap\_inquire (RT\_HEAP \*heap, RT\_HEAP\_INFO \*info)

Query heap status.

• int rt\_heap\_bind (RT\_HEAP \*heap, const char \*name, RTIME timeout)

Bind to a heap.

• int rt\_heap\_unbind (RT\_HEAP \*heap)

Unbind from a heap.

378 Module Documentation

## 6.79.1 Detailed Description

Region of memory dedicated to real-time allocation. Heaps are regions of memory used for dynamic memory allocation in a time-bounded fashion. Blocks of memory are allocated and freed in an arbitrary order and the pattern of allocation and size of blocks is not known until run time.

## 6.79.2 Macro Definition Documentation

6.79.2.1 #define H\_PRIO 0x1 /\* Pend by task priority order. \*/

Creation flags.

Referenced by rt\_heap\_create().

## 6.79.3 Function Documentation

```
6.79.3.1 int rt_heap_alloc ( RT_HEAP * heap, size_t size, RTIME timeout, void ** blockp ) [inline], [static]
```

Allocate a block from a heap (with relative scalar timeout).

This routine is a variant of rt\_heap\_alloc\_timed() accepting a relative timeout specification expressed as a scalar value.

Tags

```
xthread-nowait, switch-primary
```

References rt heap alloc timed().

```
6.79.3.2 int rt_heap_alloc_timed ( RT_HEAP * heap, size_t size, const struct timespec * abs_timeout, void ** blockp )
```

Allocate a block from a heap.

This service allocates a block from a given heap, or returns the address of the single memory segment if H\_SINGLE was mentioned in the creation mode to rt\_heap\_create(). When not enough memory is available on entry to this service, tasks may be blocked until their allocation request can be fulfilled.

### **Parameters**

heap	The heap descriptor.
size	The requested size (in bytes) of the block. If the heap is managed as a single-block area (H_SINGLE), this value can be either zero, or the same value given to rt_heap_create(). In that case, the same block covering the entire heap space is returned to all callers of this service.
abs_timeout	An absolute date expressed in clock ticks, specifying a time limit to wait for a block of the requested size to be available from the heap (see note). Passing NULL causes the caller to block indefinitely until a block is available. Passing { .tv_sec = 0, .tv_nsec = 0 } causes the service to return immediately without blocking in case not block is available.

blockp	A pointer to a memory location which will be written upon success with the address
-	of the allocated block, or the start address of the single memory segment. In the
	former case, the block can be freed using rt_heap_free().

### Returns

Zero is returned upon success. Otherwise:

- -ETIMEDOUT is returned if abs timeout is reached before a block is available.
- -EWOULDBLOCK is returned if abs\_timeout is equal to { .tv\_sec = 0, .tv\_nsec = 0 } and no block is immediately available on entry to fulfill the allocation request.
- -EINTR is returned if rt\_task\_unblock() was called for the current task before a block became available.
- -EINVAL is returned if *heap* is not a valid heap descriptor, or *heap* is managed as a single-block area (i.e. H\_SINGLE mode) and *size* is non-zero but does not match the original heap size passed to rt\_heap\_create().
- -EIDRM is returned if *heap* is deleted while the caller was waiting for a block. In such event, *heap* is no more valid upon return of this service.
- -EPERM is returned if this service should block, but was not called from a Xenomai thread.

## Tags

xthread-nowait, switch-primary

### Note

abs\_timeout is interpreted as a multiple of the Alchemy clock resolution (see -alchemy-clock-resolution option, defaults to 1 nanosecond).

Referenced by rt heap alloc(), and rt heap alloc until().

```
6.79.3.3 int rt_heap_alloc_until ( RT_HEAP * heap, size_t size, RTIME abs_timeout, void ** blockp ) [inline], [static]
```

Allocate a block from a heap (with absolute scalar timeout).

This routine is a variant of rt\_heap\_alloc\_timed() accepting an absolute timeout specification expressed as a scalar value.

Tags

xthread-nowait, switch-primary

References rt\_heap\_alloc\_timed().

```
6.79.3.4 int rt_heap_bind ( RT_HEAP * heap, const char * name, RTIME timeout )
```

Bind to a heap.

This routine creates a new descriptor to refer to an existing heap identified by its symbolic name. If the object does not exist on entry, the caller may block until a heap of the given name is created.

heap	The address of a heap descriptor filled in by the operation. Contents of this memory
	is undefined upon failure.
name	A valid NULL-terminated name which identifies the heap to bind to. This string
	should match the object name argument passed to rt_heap_create().
timeout	The number of clock ticks to wait for the registration to occur (see note). Passing
	TM_INFINITE causes the caller to block indefinitely until the object is registered.
	Passing TM_NONBLOCK causes the service to return immediately without waiting
	if the object is not registered on entry.

## Returns

Zero is returned upon success. Otherwise:

- -EINTR is returned if rt\_task\_unblock() was called for the current task before the retrieval has completed.
- -EWOULDBLOCK is returned if *timeout* is equal to TM\_NONBLOCK and the searched object is not registered on entry.
- -ETIMEDOUT is returned if the object cannot be retrieved within the specified amount of time.
- -EPERM is returned if this service should block, but was not called from a Xenomai thread.

### Tags

xthread-nowait, switch-primary

### Note

The *timeout* value is interpreted as a multiple of the Alchemy clock resolution (see –alchemy-clock-resolution option, defaults to 1 nanosecond).

6.79.3.5 int rt\_heap\_create ( RT\_HEAP \* heap, const char \* name, size\_t heapsz, int mode )

## Create a heap.

This routine creates a memory heap suitable for time-bounded allocation requests of RAM chunks. When not enough memory is available, tasks may be blocked until their allocation request can be fulfilled.

By default, heaps support allocation of multiple blocks of memory in an arbitrary order. However, it is possible to ask for single-block management by passing the H\_SINGLE flag into the *mode* parameter, in which case the entire memory space managed by the heap is made available as a unique block. In this mode, all allocation requests made through rt\_heap\_alloc() will return the same block address, pointing at the beginning of the heap memory.

## **Parameters**

heap	The address of a heap descriptor which can be later used to identify uniquely the
	created object, upon success of this call.
name	An ASCII string standing for the symbolic name of the heap. When non-NULL and non-empty, a copy of this string is used for indexing the created heap into the object registry.

heapsz	
	area is not extensible, so this value must be compatible with the highest memory
	pressure that could be expected. The valid range is between 2k and 2Gb.
mode	The heap creation mode. The following flags can be OR'ed into this bitmask, each
	of them affecting the new heap:

- H FIFO makes tasks pend in FIFO order on the heap when waiting for available blocks.
- H\_PRIO makes tasks pend in priority order on the heap when waiting for available blocks.
- H\_SINGLE causes the entire heap space to be managed as a single memory block.

### Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if mode is invalid, or heapsz is not in the range [2k..2Gb].
- -ENOMEM is returned if the system fails to get memory from the main heap in order to create the heap.
- -EEXIST is returned if the *name* is conflicting with an already registered heap.
- · -EPERM is returned if this service was called from an asynchronous context.

## Tags

thread-unrestricted, switch-secondary

## Note

Heaps can be shared by multiple processes which belong to the same Xenomai session.

References H\_PRIO.

```
6.79.3.6 int rt_heap_delete ( RT_HEAP * heap )
```

### Delete a heap.

This routine deletes a heap object previously created by a call to rt\_heap\_create(), releasing all tasks currently blocked on it.

## **Parameters**

heap	The heap descriptor.

#### Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if heap is not a valid heap descriptor.
- -EPERM is returned if this service was called from an asynchronous context.

## Tags

thread-unrestricted, switch-secondary

6.79.3.7 int rt\_heap\_free ( RT\_HEAP \* heap, void \* block )

Release a block to a heap.

This service should be used to release a block to the heap it belongs to. An attempt to fulfill the request of every task blocked on rt\_heap\_alloc() is made once *block* is returned to the memory pool.

heap	The heap descriptor.
block	The address of the block to free.

#### Returns

Zero is returned upon success. Otherwise:

• -EINVAL is returned if *heap* is not a valid heap descriptor, or *block* is not a valid block previously allocated by the rt\_heap\_alloc() service from *heap*.

## Tags

unrestricted, switch-primary

```
6.79.3.8 int rt_heap_inquire ( RT_HEAP * heap, RT_HEAP_INFO * info )
```

Query heap status.

This routine returns the status information about *heap*.

#### **Parameters**

heap	The heap descriptor.
info	A pointer to the returnbuffer" to copy the information to.

### Returns

Zero is returned and status information is written to the structure pointed at by *info* upon success. Otherwise:

• -EINVAL is returned if heap is not a valid heap descriptor.

## Tags

unrestricted, switch-primary

References RT\_HEAP\_INFO::heapsize, RT\_HEAP\_INFO::name, RT\_HEAP\_INFO::nwaiters, RT\_HEAP\_INFO::usablemem, and RT\_HEAP\_INFO::usedmem.

```
6.79.3.9 int rt_heap_unbind ( RT_HEAP * heap )
```

Unbind from a heap.

**Parameters** 

heap	The heap descriptor.
------	----------------------

This routine releases a previous binding to a heap. After this call has returned, the descriptor is no more valid for referencing this object.

### Tags


thread-unrestricted

384 Module Documentation

# 6.80 Alchemy API

A programming interface reminiscent from traditional RTOS APIs.

Collaboration diagram for Alchemy API:

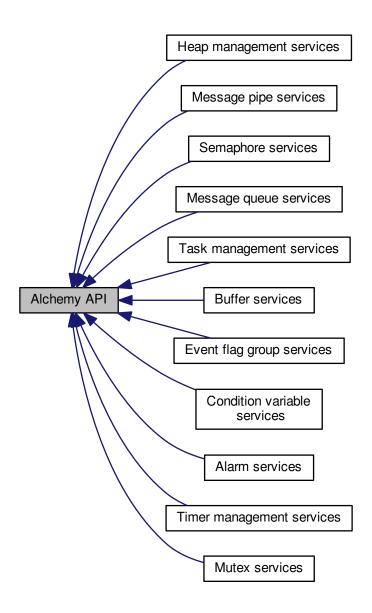

## Modules

Alarm services

General-purpose watchdog timers.

• Buffer services

Lightweight FIFO IPC mechanism.

• Condition variable services

POSIXish condition variable mechanism.

6.80 Alchemy API 385

Event flag group services

Inter-task notification mechanism based on discrete flags.

• Heap management services

Region of memory dedicated to real-time allocation.

Mutex services

POSIXish mutual exclusion servicesl.

Message pipe services

Two-way communication channel between Xenomai & Linux domains.

Message queue services

real-time IPC mechanism for sending messages of arbitrary size

• Semaphore services

Counting semaphore IPC mechanism.

Task management services

Services dealing with preemptive multi-tasking.

Timer management services

Services for reading and spinning on the hardware timer.

## 6.80.1 Detailed Description

A programming interface reminiscent from traditional RTOS APIs. This interface is an evolution of the former *native* API available with the Xenomai 2.x series.

## 6.81 Mutex services

POSIXish mutual exclusion servicesl.

Collaboration diagram for Mutex services:



## **Data Structures**

• struct RT\_MUTEX\_INFO

Mutex status descriptor.

## **Functions**

• int rt mutex create (RT MUTEX \*mutex, const char \*name)

Create a mutex.

int rt\_mutex\_delete (RT\_MUTEX \*mutex)

Delete a mutex.

• int rt\_mutex\_acquire\_timed (RT\_MUTEX \*mutex, const struct timespec \*abs\_timeout)

Acquire/lock a mutex (with absolute timeout date).

• static int rt\_mutex\_acquire\_until (RT\_MUTEX \*mutex, RTIME timeout)

Acquire/lock a mutex (with absolute scalar timeout).

static int rt\_mutex\_acquire (RT\_MUTEX \*mutex, RTIME timeout)

Acquire/lock a mutex (with relative scalar timeout).

int rt\_mutex\_release (RT\_MUTEX \*mutex)

Release/unlock a mutex.

• int rt\_mutex\_inquire (RT\_MUTEX \*mutex, RT\_MUTEX\_INFO \*info)

Query mutex status.

• int rt\_mutex\_bind (RT\_MUTEX \*mutex, const char \*name, RTIME timeout)

Bind to a mutex.

• int rt\_mutex\_unbind (RT\_MUTEX \*mutex)

Unbind from a mutex.

## 6.81.1 Detailed Description

POSIXish mutual exclusion servicesl. A mutex is a MUTual EXclusion object, and is useful for protecting shared data structures from concurrent modifications, and implementing critical sections and monitors.

A mutex has two possible states: unlocked (not owned by any task), and locked (owned by one task). A mutex can never be owned by two different tasks simultaneously. A task attempting to lock a mutex that is already locked by another task is blocked until the latter unlocks the mutex first.

Xenomai mutex services enforce a priority inheritance protocol in order to solve priority inversions.

6.81 Mutex services 387

## 6.81.2 Function Documentation

6.81.2.1 int rt\_mutex\_acquire ( RT\_MUTEX \* mutex, RTIME timeout ) [inline], [static]

Acquire/lock a mutex (with relative scalar timeout).

This routine is a variant of rt\_mutex\_acquire\_timed() accepting a relative timeout specification expressed as a scalar value.

### **Parameters**

mutex	The mutex descriptor.
timeout	A delay expressed in clock ticks.

## Tags

xthread-only, switch-primary

References rt\_mutex\_acquire\_timed().

6.81.2.2 int rt\_mutex\_acquire\_timed ( RT\_MUTEX \* mutex, const struct timespec \* abs\_timeout )

Acquire/lock a mutex (with absolute timeout date).

Attempt to lock a mutex. The calling task is blocked until the mutex is available, in which case it is locked again before this service returns. Xenomai mutexes are implicitely recursive and implement the priority inheritance protocol.

#### **Parameters**

mutex	The mutex descriptor.
abs_timeout	An absolute date expressed in clock ticks, specifying a time limit to wait for the mutex
	to be available (see note). Passing NULL the caller to block indefinitely. Passing {
	.tv_sec = 0, .tv_nsec = 0 } causes the service to return immediately without blocking
	in case <i>mutex</i> is already locked by another task.

### Returns

Zero is returned upon success. Otherwise:

- -ETIMEDOUT is returned if abs\_timeout is reached before the mutex is available.
- -EWOULDBLOCK is returned if *timeout* is { .tv\_sec = 0, .tv\_nsec = 0 } and the mutex is not immediately available.
- -EINTR is returned if rt task unblock() was called for the current task.
- -EINVAL is returned if *mutex* is not a valid mutex descriptor.
- -EIDRM is returned if *mutex* is deleted while the caller was waiting on it. In such event, *mutex* is no more valid upon return of this service.
- -EPERM is returned if this service should block, but was not called from a Xenomai thread.

## Tags

xthread-only, switch-primary

## Side effects

Over the Cobalt core, an Alchemy task with priority zero keeps running in primary mode until it releases the mutex, at which point it is switched back to secondary mode automatically.

Note

abs\_timeout is interpreted as a multiple of the Alchemy clock resolution (see -alchemy-clock-resolution option, defaults to 1 nanosecond).

References pthread\_mutex\_lock(), pthread\_mutex\_timedlock(), and pthread\_mutex\_trylock().

Referenced by rt mutex acquire(), and rt mutex acquire until().

6.81.2.3 int rt\_mutex\_acquire\_until ( RT\_MUTEX \* mutex, RTIME abs\_timeout ) [inline], [static]

Acquire/lock a mutex (with absolute scalar timeout).

This routine is a variant of rt\_mutex\_acquire\_timed() accepting an absolute timeout specification expressed as a scalar value.

#### **Parameters**

mutex	The mutex descriptor.
abs_timeout	An absolute date expressed in clock ticks.

#### Tags

xthread-only, switch-primary

References rt\_mutex\_acquire\_timed().

6.81.2.4 int rt\_mutex\_bind ( RT\_MUTEX \* mutex, const char \* name, RTIME timeout )

Bind to a mutex.

This routine creates a new descriptor to refer to an existing mutex identified by its symbolic name. If the object not exist on entry, the caller may block until a mutex of the given name is created.

## **Parameters**

mutex	The address of a mutex descriptor filled in by the operation. Contents of this memory
	is undefined upon failure.
name	A valid NULL-terminated name which identifies the mutex to bind to. This string
	should match the object name argument passed to rt_mutex_create().
timeout	The number of clock ticks to wait for the registration to occur (see note). Passing
	TM_INFINITE causes the caller to block indefinitely until the object is registered.
	Passing TM_NONBLOCK causes the service to return immediately without waiting
	if the object is not registered on entry.

### Returns

Zero is returned upon success. Otherwise:

- -EINTR is returned if rt\_task\_unblock() was called for the current task before the retrieval has completed.
- -EWOULDBLOCK is returned if *timeout* is equal to TM\_NONBLOCK and the searched object is not registered on entry.
- -ETIMEDOUT is returned if the object cannot be retrieved within the specified amount of time.
- -EPERM is returned if this service should block, but was not called from a Xenomai thread.

6.81 Mutex services 389

### Tags

xthread-nowait, switch-primary

#### Note

The *timeout* value is interpreted as a multiple of the Alchemy clock resolution (see –alchemy-clock-resolution option, defaults to 1 nanosecond).

6.81.2.5 int rt mutex create ( RT MUTEX \* mutex, const char \* name )

#### Create a mutex.

Create a mutual exclusion object that allows multiple tasks to synchronize access to a shared resource. A mutex is left in an unlocked state after creation.

#### **Parameters**

mutex	The address of a mutex descriptor which can be later used to identify uniquely the created object, upon success of this call.
name	An ASCII string standing for the symbolic name of the mutex. When non-NULL and
	non-empty, a copy of this string is used for indexing the created mutex into the object
	registry.

### Returns

Zero is returned upon success. Otherwise:

- -ENOMEM is returned if the system fails to get memory from the main heap in order to create the mutex.
- -EEXIST is returned if the *name* is conflicting with an already registered mutex.
- -EPERM is returned if this service was called from an asynchronous context.

## Tags

thread-unrestricted, switch-secondary

### Note

Mutexes can be shared by multiple processes which belong to the same Xenomai session.

References pthread\_mutex\_init(), pthread\_mutexattr\_destroy(), pthread\_mutexattr\_init(), pthread\_mutexattr\_setprotocol(), pthread\_mutexattr\_setpshared(), and pthread\_mutexattr\_settype().

6.81.2.6 int rt\_mutex\_delete ( RT\_MUTEX \* mutex )

### Delete a mutex.

This routine deletes a mutex object previously created by a call to rt\_mutex\_create().

Parameters

mutex	The mutex descriptor.

### Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if alarm is not a valid mutex descriptor.
- · -EPERM is returned if this service was called from an asynchronous context.
- -EBUSY is returned upon an attempt to destroy the object referenced by mutex while it is referenced (for example, while being used in a rt\_mutex\_acquite(), rt\_mutex\_acquire\_timed() or rt\_mutex\_acquire\_until() by another task).

## Tags

thread-unrestricted, switch-secondary

References pthread\_mutex\_destroy().

```
6.81.2.7 int rt_mutex_inquire ( RT_MUTEX * mutex, RT_MUTEX_INFO * info )
```

Query mutex status.

This routine returns the status information about the specified mutex.

### **Parameters**

mutex	The mutex descriptor.
info	A pointer to the returnbuffer" to copy the information to.

## Returns

Zero is returned and status information is written to the structure pointed at by *info* upon success. Otherwise:

- -EINVAL is returned if *mutex* is not a valid mutex descriptor.
- · -EPERM is returned if this service is called from an interrupt context.

## Tags

xthread-only, switch-primary

References RT\_MUTEX\_INFO::name, RT\_MUTEX\_INFO::owner, pthread\_mutex\_trylock(), and pthread\_mutex\_unlock().

```
6.81.2.8 int rt_mutex_release ( RT_MUTEX * mutex )
```

#### Release/unlock a mutex.

This routine releases a mutex object previously locked by a call to rt\_mutex\_acquire() or rt\_mutex\_acquire() or rt\_mutex\_acquire\_until(). If the mutex is pended, the first waiting task (by priority order) is immediately unblocked and transferred the ownership of the mutex; otherwise, the mutex is left in an unlocked state.

6.81 Mutex services 391

### **Parameters**

mutex	The mutex descriptor.

## Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if alarm is not a valid mutex descriptor.
- -EPERM is returned if *mutex* is not owned by the current task, or more generally if this service was called from a context which cannot own any mutex (e.g. interrupt context).

## Tags

xthread-only, switch-primary

References pthread\_mutex\_unlock().

6.81.2.9 int rt mutex unbind ( RT MUTEX \* mutex )

Unbind from a mutex.

**Parameters** 


mutex | The mutex descriptor.

This routine releases a previous binding to a mutex. After this call has returned, the descriptor is no more valid for referencing this object.

# 6.82 Message pipe services

Two-way communication channel between Xenomai & Linux domains.

Collaboration diagram for Message pipe services:

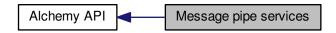

## Macros

392

#define P\_MINOR\_AUTO XNPIPE\_MINOR\_AUTO

Creation flags.

#define P\_URGENT 0x1

Operation flags.

## **Functions**

• int rt\_pipe\_create (RT\_PIPE \*pipe, const char \*name, int minor, size\_t poolsize)

Create a message pipe.

• int rt\_pipe\_delete (RT\_PIPE \*pipe)

Delete a message pipe.

ssize\_t rt\_pipe\_read\_timed (RT\_PIPE \*pipe, void \*buf, size\_t size, const struct timespec \*abs\_-timeout)

Read a message from a pipe.

• static ssize\_t rt\_pipe\_read\_until (RT\_PIPE \*pipe, void \*buf, size\_t size, RTIME timeout)

Read from a pipe (with absolute scalar timeout).

• static ssize\_t rt\_pipe\_read (RT\_PIPE \*pipe, void \*buf, size\_t size, RTIME timeout)

Read from a pipe (with relative scalar timeout).

ssize\_t rt\_pipe\_write (RT\_PIPE \*pipe, const void \*buf, size\_t size, int mode)

Write a message to a pipe.

• ssize\_t rt\_pipe\_stream (RT\_PIPE \*pipe, const void \*buf, size\_t size)

Stream bytes through a pipe.

• int rt\_pipe\_bind (RT\_PIPE \*pipe, const char \*name, RTIME timeout)

Bind to a message pipe.

• int rt\_pipe\_unbind (RT\_PIPE \*pipe)

Unbind from a message pipe.

## 6.82.1 Detailed Description

Two-way communication channel between Xenomai & Linux domains. A message pipe is a two-way communication channel between Xenomai threads and normal Linux threads using regular file I/O operations on a pseudo-device. Pipes can be operated in a message-oriented fashion so that message boundaries are preserved, and also in byte-oriented streaming mode from real-time to normal Linux threads for optimal throughput.

Xenomai threads open their side of the pipe using the rt\_pipe\_create() service; regular Linux threads do the same by opening one of the /dev/rtpN special devices, where N is the minor number agreed upon between both ends of each pipe.

In addition, named pipes are available through the registry support, which automatically creates a symbolic link from entries under /proc/xenomai/registry/rtipc/xddp/ to the corresponding special device file.

#### Note

Alchemy's message pipes are fully based on the XDDP protocol available from the RTDM/ipc driver.

## 6.82.2 Macro Definition Documentation

6.82.2.1 #define P\_MINOR\_AUTO XNPIPE\_MINOR\_AUTO

Creation flags.

6.82.2.2 #define P URGENT 0x1

Operation flags.

Referenced by rt pipe write().

### 6.82.3 Function Documentation

6.82.3.1 int rt\_pipe\_bind ( RT\_PIPE \* pipe, const char \* name, RTIME timeout )

Bind to a message pipe.

This routine creates a new descriptor to refer to an existing message pipe identified by its symbolic name. If the object does not exist on entry, the caller may block until a pipe of the given name is created.

#### **Parameters**

pipe	The address of a pipe descriptor filled in by the operation. Contents of this memory
	is undefined upon failure.
name	A valid NULL-terminated name which identifies the pipe to bind to. This string should
	match the object name argument passed to rt_pipe_create().
timeout	The number of clock ticks to wait for the registration to occur (see note). Passing
	TM_INFINITE causes the caller to block indefinitely until the object is registered.
	Passing TM_NONBLOCK causes the service to return immediately without waiting
	if the object is not registered on entry.

### Returns

Zero is returned upon success. Otherwise:

- -EINTR is returned if rt\_task\_unblock() was called for the current task before the retrieval has completed.
- -EWOULDBLOCK is returned if *timeout* is equal to TM\_NONBLOCK and the searched object is not registered on entry.
- -ETIMEDOUT is returned if the object cannot be retrieved within the specified amount of time.
- -EPERM is returned if this service should block, but was not called from a Xenomai thread.

## Tags

#### xthread-nowait

### Note

The *timeout* value is interpreted as a multiple of the Alchemy clock resolution (see –alchemy-clock-resolution option, defaults to 1 nanosecond).

6.82.3.2 int rt\_pipe\_create ( RT\_PIPE \* pipe, const char \* name, int minor, size\_t poolsize )

## Create a message pipe.

This service opens a bi-directional communication channel for exchanging messages between Xenomai threads and regular Linux threads. Pipes natively preserve message boundaries, but can also be used in byte-oriented streaming mode from Xenomai to Linux.

rt\_pipe\_create() always returns immediately, even if no thread has opened the associated special device file yet. On the contrary, the non real-time side could block upon attempt to open the special device file until rt\_pipe\_create() is issued on the same pipe from a Xenomai thread, unless O\_NONBLOCK was given to the open(2) system call.

#### **Parameters**

pipe	The address of a pipe descriptor which can be later used to identify uniquely the
	created object, upon success of this call.
name	An ASCII string standing for the symbolic name of the pipe. When non-NULL and non-empty, a copy of this string is used for indexing the created pipe into the object registry.

Named pipes are supported through the use of the registry. Passing a valid *name* parameter when creating a message pipe causes a symbolic link to be created from /proc/xenomai/registry/rtipc/xddp/*name* to the associated special device (i.e. /dev/rtp\*), so that the specific *minor* information does not need to be known from those processes for opening the proper device file. In such a case, both sides of the pipe only need to agree upon a symbolic name to refer to the same data path, which is especially useful whenever the *minor* number is picked up dynamically using an adaptive algorithm, such as passing P\_MINOR\_AUTO as *minor* value.

### **Parameters**

minor	The minor number of the device associated with the pipe. Passing P_MINOR_A-UTO causes the minor number to be auto-allocated. In such a case, a symbolic link will be automatically created from /proc/xenomai/registry/rtipc/xddp/name to the allocated pipe device entry. Valid minor numbers range from 0 to CONFIG_XENO_OPT_PIPE_NRDEV-1.
poolsize	Specifies the size of a dedicated buffer pool for the pipe. Passing 0 means that all message allocations for this pipe are performed on the Cobalt core heap.

#### Returns

Zero is returned upon success. Otherwise:

- -ENOMEM is returned if the system fails to get memory from the main heap in order to create the pipe.
- -ENODEV is returned if *minor* is different from P\_MINOR\_AUTO and is not a valid minor number.
- -EEXIST is returned if the *name* is conflicting with an already registered pipe.
- -EBUSY is returned if *minor* is already open.
- -EPERM is returned if this service was called from an asynchronous context.

Tags

thread-unrestricted, switch-secondary

References IPCPROTO\_XDDP, rtipc\_port\_label::label, sockaddr\_ipc::sipc\_family, sockaddr\_ipc::sipc\_port, XDDP\_BUFSZ, XDDP\_LABEL, and XDDP\_POOLSZ.

```
6.82.3.3 int rt_pipe_delete ( RT_PIPE * pipe )
```

Delete a message pipe.

This routine deletes a pipe object previously created by a call to rt\_pipe\_create(). All resources attached to that pipe are automatically released, all pending data is flushed.

**Parameters** 

pipe	The pipe descriptor.

### Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if *pipe* is not a valid pipe descriptor.
- -EIDRM is returned if pipe is a closed pipe descriptor.
- -EPERM is returned if this service was called from an asynchronous context.

Tags

thread-unrestricted, switch-secondary

```
6.82.3.4 ssize_t rt_pipe_read ( RT_PIPE * pipe, void * buf, size_t size, RTIME timeout ) [inline], [static]
```

Read from a pipe (with relative scalar timeout).

This routine is a variant of rt\_queue\_read\_timed() accepting a relative timeout specification expressed as a scalar value.

**Parameters** 

pipe	The pipe descriptor.
buf	A pointer to a memory area which will be written upon success with the message received.
size	The count of bytes from the received message to read up into <i>buf</i> . If <i>size</i> is lower than the actual message size, -ENOBUFS is returned since the incompletely received message would be lost. If <i>size</i> is zero, this call returns immediately with no other action.
timeout	A delay expressed in clock ticks.

### Tags

xthread-nowait, switch-primary

References rt\_pipe\_read\_timed().

396 Module Documentation

6.82.3.5 ssize\_t rt\_pipe\_read\_timed ( RT\_PIPE \* pipe, void \* buf, size\_t size, const struct timespec \* abs\_timeout )

Read a message from a pipe.

This service reads the next available message from a given pipe.

pipe	The pipe descriptor.
buf	A pointer to a memory area which will be written upon success with the message
	received.
size	The count of bytes from the received message to read up into <i>buf</i> . If <i>size</i> is lower than the actual message size, -ENOBUFS is returned since the incompletely received message would be lost. If <i>size</i> is zero, this call returns immediately with no other action.
abs_timeout	An absolute date expressed in clock ticks, specifying a time limit to wait for a message to be available from the pipe (see note). Passing NULL causes the caller to block indefinitely until a message is available. Passing { .tv_sec = 0, .tv_nsec = 0 } causes the service to return immediately without blocking in case no message is available.

#### Returns

The number of bytes available from the received message is returned upon success. Otherwise:

- -ETIMEDOUT is returned if abs timeout is reached before a message arrives.
- -EWOULDBLOCK is returned if abs\_timeout is { .tv\_sec = 0, .tv\_nsec = 0 } and no message is immediately available on entry to the call.
- -EINTR is returned if rt\_task\_unblock() was called for the current task before a message was available.
- -EINVAL is returned if pipe is not a valid pipe descriptor.
- -EIDRM is returned if *pipe* is deleted while the caller was waiting for a message. In such event, *pipe* is no more valid upon return of this service.
- -EPERM is returned if this service should block, but was not called from a Xenomai thread.

## Tags

xthread-nowait, switch-primary

## Note

abs\_timeout is interpreted as a multiple of the Alchemy clock resolution (see -alchemy-clock-resolution option, defaults to 1 nanosecond).

References SO RCVTIMEO.

Referenced by rt\_pipe\_read(), and rt\_pipe\_read\_until().

6.82.3.6 ssize\_t rt\_pipe\_read\_until ( RT\_PIPE \* pipe, void \* buf, size\_t size, RTIME abs\_timeout ) [inline], [static]

Read from a pipe (with absolute scalar timeout).

This routine is a variant of rt\_queue\_read\_timed() accepting an absolute timeout specification expressed as a scalar value.

pipe	The pipe descriptor.
buf	Pr
	received.
size	The count of bytes from the received message to read up into <i>buf</i> . If <i>size</i> is lower than the actual message size, -ENOBUFS is returned since the incompletely received message would be lost. If <i>size</i> is zero, this call returns immediately with no other action.
abs_timeout	An absolute date expressed in clock ticks.

### Tags

xthread-nowait, switch-primary

References rt\_pipe\_read\_timed().

```
6.82.3.7 ssize_t rt_pipe_stream ( RT_PIPE * pipe, const void * buf, size_t size )
```

Stream bytes through a pipe.

This service writes a sequence of bytes to be received from the associated special device. Unlike rt\_pipe\_send(), this service does not preserve message boundaries. Instead, an internal buffer is filled on the fly with the data, which will be consumed as soon as the receiver wakes up.

Data buffers sent by the rt\_pipe\_stream() service are always transmitted in FIFO order (i.e. P\_NORMAL mode).

#### **Parameters**

pipe	The pipe descriptor.
buf	The address of the first data byte to send. The data will be copied to an internal
	buffer before transmission.
size	The size in bytes of the buffer. Zero is a valid value, in which case the service
	returns immediately without sending any data.

### Returns

The number of bytes sent upon success; this value may be lower than *size*, depending on the available space in the internal buffer. Otherwise:

- -EINVAL is returned if *mode* is invalid or *pipe* is not a pipe descriptor.
- -ENOMEM is returned if not enough buffer space is available to complete the operation.
- -EIDRM is returned if pipe is a closed pipe descriptor.

### Note

Writing data to a pipe before any peer has opened the associated special device is allowed. The output will be buffered until then, only restricted by the available memory in the associated buffer pool (see rt\_pipe\_create()).

## Tags

xcontext, switch-primary

```
6.82.3.8 int rt pipe unbind ( RT PIPE * pipe )
```

Unbind from a message pipe.

#### **Parameters**

pipe	The pipe descriptor.

This routine releases a previous binding to a message pipe. After this call has returned, the descriptor is no more valid for referencing this object.

#### Tags

thread-unrestricted

6.82.3.9 ssize\_t rt\_pipe\_write ( RT\_PIPE \* pipe, const void \* buf, size\_t size, int mode )

Write a message to a pipe.

This service writes a complete message to be received from the associated special device. rt\_pipe\_write() always preserves message boundaries, which means that all data sent through a single call of this service will be gathered in a single read(2) operation from the special device.

This service differs from rt\_pipe\_send() in that it accepts a pointer to the raw data to be sent, instead of a canned message buffer.

#### **Parameters**

pipe	The pipe descriptor.
buf	The address of the first data byte to send. The data will be copied to an internal
	buffer before transmission.
size	The size in bytes of the message (payload data only). Zero is a valid value, in which
	case the service returns immediately without sending any message.
mode	A set of flags affecting the operation:

- P\_URGENT causes the message to be prepended to the output queue, ensuring a LIFO ordering.
- P\_NORMAL causes the message to be appended to the output queue, ensuring a FIFO ordering.

### Returns

Upon success, this service returns *size*. Upon error, one of the following error codes is returned:

- -EINVAL is returned if *mode* is invalid or *pipe* is not a pipe descriptor.
- -ENOMEM is returned if not enough buffer space is available to complete the operation.
- -EIDRM is returned if *pipe* is a closed pipe descriptor.

### Note

Writing data to a pipe before any peer has opened the associated special device is allowed. The output will be buffered until then, only restricted by the available memory in the associated buffer pool (see rt\_pipe\_create()).

### Tags

xcontext, switch-primary

References P\_URGENT.

# 6.83 Message queue services

real-time IPC mechanism for sending messages of arbitrary size Collaboration diagram for Message queue services:



### **Data Structures**

struct RT\_QUEUE\_INFO
 Queue status descriptor.

### Macros

#define Q\_PRIO 0x1 /\* Pend by task priority order. \*/
 Creation flags.

# **Functions**

• int rt\_queue\_create (RT\_QUEUE \*queue, const char \*name, size\_t poolsize, size\_t qlimit, int mode)

Create a message queue.

• int rt\_queue\_delete (RT\_QUEUE \*queue)

Delete a message queue.

void \* rt\_queue\_alloc (RT\_QUEUE \*queue, size\_t size)

Allocate a message buffer.

• int rt\_queue\_free (RT\_QUEUE \*queue, void \*buf)

Free a message buffer.

- int rt\_queue\_send (RT\_QUEUE \*queue, const void \*buf, size\_t size, int mode)
  - Send a message to a queue.
- ssize\_t rt\_queue\_receive\_timed (RT\_QUEUE \*queue, void \*\*bufp, const struct timespec \*abs\_timeout)

Receive a message from a queue (with absolute timeout date).

- static ssize\_t rt\_queue\_receive\_until (RT\_QUEUE \*queue, void \*\*bufp, RTIME timeout)
  - Receive from a queue (with absolute scalar timeout).
- static ssize\_t rt\_queue\_receive (RT\_QUEUE \*queue, void \*\*bufp, RTIME timeout)

Receive from a queue (with relative scalar timeout).

 ssize\_t rt\_queue\_read\_timed (RT\_QUEUE \*queue, void \*buf, size\_t size, const struct timespec \*abs\_timeout)

Read from a queue.

• static ssize\_t rt\_queue\_read\_until (RT\_QUEUE \*queue, void \*buf, size\_t size, RTIME timeout)

Read from a queue (with absolute scalar timeout).

• static ssize\_t rt\_queue\_read (RT\_QUEUE \*queue, void \*buf, size\_t size, RTIME timeout)

Read from a queue (with relative scalar timeout).

• int rt queue flush (RT QUEUE \*queue)

Flush pending messages from a queue.

int rt\_queue\_inquire (RT\_QUEUE \*queue, RT\_QUEUE\_INFO \*info)

Query queue status.

• int rt queue bind (RT QUEUE \*queue, const char \*name, RTIME timeout)

Bind to a message queue.

int rt\_queue\_unbind (RT\_QUEUE \*queue)

Unbind from a message queue.

# 6.83.1 Detailed Description

real-time IPC mechanism for sending messages of arbitrary size Message queueing is a method by which real-time tasks can exchange or pass data through a Xenomai-managed queue of messages. Messages can vary in length and be assigned different types or usages. A message queue can be created by one task and used by multiple tasks that send and/or receive messages to the queue.

### 6.83.2 Macro Definition Documentation

6.83.2.1 #define Q\_PRIO 0x1 /\* Pend by task priority order. \*/

Creation flags.

Referenced by rt\_queue\_create().

### 6.83.3 Function Documentation

```
6.83.3.1 void * rt_queue_alloc ( RT_QUEUE * q, size_t size )
```

## Allocate a message buffer.

This service allocates a message buffer from the queue's internal pool. This buffer can be filled in with payload information, prior enqueuing it by a call to rt\_queue\_send(). When used in pair, these services provide a zero-copy interface for sending messages.

# **Parameters**

q	The queue descriptor.
size	The requested size in bytes of the buffer. Zero is an acceptable value, which means
	that the message conveys no payload; in this case, the receiver will get a zero-sized
	message.

#### Returns

The address of the allocated buffer upon success, or NULL if the call fails.

# Tags

unrestricted, switch-primary

6.83.3.2 int rt\_queue\_bind ( RT\_QUEUE \* q, const char \* name, RTIME timeout )

Bind to a message queue.

This routine creates a new descriptor to refer to an existing message queue identified by its symbolic name. If the object does not exist on entry, the caller may block until a queue of the given name is created.

#### **Parameters**

q	The address of a queue descriptor filled in by the operation. Contents of this mem-
	ory is undefined upon failure.
name	A valid NULL-terminated name which identifies the queue to bind to. This string
	should match the object name argument passed to rt_queue_create().
timeout	The number of clock ticks to wait for the registration to occur (see note). Passing
	TM_INFINITE causes the caller to block indefinitely until the object is registered.
	Passing TM_NONBLOCK causes the service to return immediately without waiting
	if the object is not registered on entry.

#### Returns

Zero is returned upon success. Otherwise:

- -EINTR is returned if rt\_task\_unblock() was called for the current task before the retrieval has completed.
- -EWOULDBLOCK is returned if *timeout* is equal to TM\_NONBLOCK and the searched object is not registered on entry.
- -ETIMEDOUT is returned if the object cannot be retrieved within the specified amount of time.
- -EPERM is returned if this service should block, but was not called from a Xenomai thread.

#### Tags

xthread-nowait, switch-primary

### Note

The *timeout* value is interpreted as a multiple of the Alchemy clock resolution (see –alchemy-clock-resolution option, defaults to 1 nanosecond).

6.83.3.3 int rt\_queue\_create ( RT\_QUEUE \* q, const char \* name, size\_t poolsize, size\_t qlimit, int mode )

Create a message queue.

Create a message queue object which allows multiple tasks to exchange data through the use of variable-sized messages. A message queue is created empty.

#### **Parameters**

q The address of a queue descriptor which can be later used to identify uniquely the created object, upon success of this call.

name	An ASCII string standing for the symbolic name of the queue. When non-NULL
	and non-empty, a copy of this string is used for indexing the created queue into the
	object registry.
poolsize	The size (in bytes) of the message buffer pool to be pre-allocated for holding mes-
	sages. Message buffers will be claimed and released to this pool. The buffer pool
	memory cannot be extended. See note.
qlimit	This parameter allows to limit the maximum number of messages which can be
	queued at any point in time, sending to a full queue begets an error. The special
	value Q_UNLIMITED can be passed to disable the limit check.
mode	The queue creation mode. The following flags can be OR'ed into this bitmask, each
	of them affecting the new queue:

- Q\_FIFO makes tasks pend in FIFO order on the queue for consuming messages.
- Q\_PRIO makes tasks pend in priority order on the queue.

#### Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if mode is invalid or poolsize is zero.
- -ENOMEM is returned if the system fails to get memory from the main heap in order to create the queue.
- -EEXIST is returned if the name is conflicting with an already registered queue.
- · -EPERM is returned if this service was called from an asynchronous context.

### Tags

thread-unrestricted, switch-secondary

# Note

Queues can be shared by multiple processes which belong to the same Xenomai session. Each message pending into the queue consumes four long words plus the actual payload size, aligned to the next long word boundary. e.g. a 6 byte message on a 32 bit platform would require 24 bytes of storage into the pool.

When *qlimit* is given (i.e. different from Q\_UNLIMITED), this overhead is accounted for automatically, so that *qlimit* messages of *poolsize* / *qlimit* bytes can be stored into the pool concurrently. Otherwise, *poolsize* is increased by 5% internally to cope with such overhead.

References Q PRIO.

6.83.3.4 int rt\_queue\_delete ( RT\_QUEUE \* q )

# Delete a message queue.

This routine deletes a queue object previously created by a call to rt\_queue\_create(). All resources attached to that queue are automatically released, including all pending messages.

q The queue descriptor.

#### Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if q is not a valid queue descriptor.
- · -EPERM is returned if this service was called from an asynchronous context.

### Tags

thread-unrestricted, switch-secondary

```
6.83.3.5 int rt_queue_flush ( RT_QUEUE * q )
```

Flush pending messages from a queue.

This routine flushes all messages currently pending in a queue, releasing all message buffers appropriately.

#### **Parameters**

```
q The queue descriptor.
```

#### Returns

Zero is returned upon success. Otherwise:

• -EINVAL is returned if q is not a valid queue descriptor.

### Tags

unrestricted, switch-primary

```
6.83.3.6 int rt_queue_free ( RT_QUEUE * q, void * buf )
```

Free a message buffer.

This service releases a message buffer to the queue's internal pool.

# **Parameters**

q	The queue descriptor.
buf	The address of the message buffer to free. Even zero-sized messages carrying no
	payload data must be freed, since they are assigned a valid memory space to store
	internal information.

#### Returns

Zero is returned upon success, or -EINVAL if *buf* is not a valid message buffer previously allocated by the rt\_queue\_alloc() service, or the caller did not get ownership of the message through a successful return from rt\_queue\_receive().

### Tags

unrestricted, switch-primary

```
6.83.3.7 int rt_queue_inquire ( RT_QUEUE * q, RT_QUEUE_INFO * info )
```

### Query queue status.

This routine returns the status information about the specified queue.

#### **Parameters**

q	The queue descriptor.
info	A pointer to the returnbuffer" to copy the information to.

#### Returns

Zero is returned and status information is written to the structure pointed at by *info* upon success. Otherwise:

• -EINVAL is returned if q is not a valid queue descriptor.

#### Tags

### unrestricted, switch-primary

References RT\_QUEUE\_INFO::mode, RT\_QUEUE\_INFO::name, RT\_QUEUE\_INFO::nmessages, RT\_QUEUE\_INFO::nwaiters, RT\_QUEUE\_INFO::poolsize, RT\_QUEUE\_INFO::qlimit, and RT\_QUEUE\_INFO::usedmem.

Read from a queue (with relative scalar timeout).

This routine is a variant of rt\_queue\_read\_timed() accepting a relative timeout specification expressed as a scalar value.

#### **Parameters**

q	The queue descriptor.
buf	A pointer to a memory area which will be written upon success with the received
	message payload.
size	The length in bytes of the memory area pointed to by buf.
timeout	A delay expressed in clock ticks.

#### Tags

xthread-nowait, switch-primary

References rt\_queue\_read\_timed().

```
6.83.3.9 ssize_t rt_queue_read_timed ( RT_QUEUE * q, void * buf, size_t size, const struct timespec * abs timeout )
```

# Read from a queue.

This service reads the next available message from a given queue.

#### **Parameters**

q	The queue descriptor.
buf	
	message payload. The internal message buffer conveying the data is automatically
	freed by this call.
size	The length in bytes of the memory area pointed to by buf. Messages larger than
	size are truncated appropriately.
abs_timeout	An absolute date expressed in clock ticks, specifying a time limit to wait for a mes-
	sage to be available from the queue (see note). Passing NULL causes the caller to
	block indefinitely until a message is available. Passing { .tv_sec = 0, .tv_nsec = 0
	} causes the service to return immediately without blocking in case no message is
	available.

#### Returns

The number of bytes copied to *buf* is returned upon success. Zero is a possible value corresponding to a zero-sized message passed to rt\_queue\_send() or rt\_queue\_write(). Otherwise:

- -ETIMEDOUT is returned if abs timeout is reached before a message arrives.
- -EWOULDBLOCK is returned if abs\_timeout is { .tv\_sec = 0, .tv\_nsec = 0 } and no message is immediately available on entry to the call.
- -EINTR is returned if rt\_task\_unblock() was called for the current task before a message was available.
- -EINVAL is returned if q is not a valid queue descriptor.
- -EIDRM is returned if *q* is deleted while the caller was waiting for a message. In such event, *q* is no more valid upon return of this service.
- -EPERM is returned if this service should block, but was not called from a Xenomai thread.

### Tags

xthread-nowait, switch-primary

# Note

abs\_timeout is interpreted as a multiple of the Alchemy clock resolution (see -alchemy-clock-resolution option, defaults to 1 nanosecond).

Referenced by rt queue read(), and rt queue read until().

6.83.3.10 ssize\_t rt\_queue\_read\_until ( RT\_QUEUE \* q, void \* buf, size\_t size, RTIME abs\_timeout ) [inline], [static]

Read from a queue (with absolute scalar timeout).

This routine is a variant of rt\_queue\_read\_timed() accepting an absolute timeout specification expressed as a scalar value.

q	The queue descriptor.

buf	A pointer to a memory area which will be written upon success with the received message payload.
size	The length in bytes of the memory area pointed to by buf.
abs_timeout	An absolute date expressed in clock ticks.

# Tags

xthread-nowait, switch-primary

References rt\_queue\_read\_timed().

Receive from a queue (with relative scalar timeout).

This routine is a variant of rt\_queue\_receive\_timed() accepting a relative timeout specification expressed as a scalar value.

#### **Parameters**

q	The queue descriptor.
bufp	A pointer to a memory location which will be written with the address of the received
	message.
timeout	A delay expressed in clock ticks.

#### Tags

xthread-nowait, switch-primary

References rt\_queue\_receive\_timed().

Receive a message from a queue (with absolute timeout date).

This service receives the next available message from a given queue.

### **Parameters**

q	The queue descriptor.
bufp	A pointer to a memory location which will be written with the address of the received
	message, upon success. Once consumed, the message space should be freed
	using rt_queue_free().
abs_timeout	An absolute date expressed in clock ticks, specifying a time limit to wait for a message to be available from the queue (see note). Passing NULL causes the caller to block indefinitely until a message is available. Passing { .tv sec = 0, .tv nsec = 0
	} causes the service to return immediately without blocking in case no message is available.

### Returns

The number of bytes available from the received message is returned upon success. Zero is a possible value corresponding to a zero-sized message passed to rt\_queue\_send() or rt\_queue\_write(). Otherwise:

• -ETIMEDOUT is returned if abs\_timeout is reached before a message arrives.

408 Module Documentation

• -EWOULDBLOCK is returned if abs\_timeout is { .tv\_sec = 0, .tv\_nsec = 0 } and no message is immediately available on entry to the call.

- -EINTR is returned if rt\_task\_unblock() was called for the current task before a message was available.
- -EINVAL is returned if q is not a valid queue descriptor.
- -EIDRM is returned if *q* is deleted while the caller was waiting for a message. In such event, *q* is no more valid upon return of this service.
- -EPERM is returned if this service should block, but was not called from a Xenomai thread.

## Tags

xthread-nowait, switch-primary

#### Note

abs\_timeout is interpreted as a multiple of the Alchemy clock resolution (see -alchemy-clock-resolution option, defaults to 1 nanosecond).

Referenced by rt\_queue\_receive(), and rt\_queue\_receive\_until().

```
6.83.3.13 ssize_t rt_queue_receive_until ( RT_QUEUE * q, void ** bufp, RTIME abs_timeout ) [inline], [static]
```

Receive from a queue (with absolute scalar timeout).

This routine is a variant of rt\_queue\_receive\_timed() accepting an absolute timeout specification expressed as a scalar value.

#### **Parameters**

q	The queue descriptor.
bufp	A pointer to a memory location which will be written with the address of the received
	message.
abs_timeout	An absolute date expressed in clock ticks.

# Tags

xthread-nowait, switch-primary

References rt\_queue\_receive\_timed().

```
6.83.3.14 int rt_queue_send ( RT_QUEUE * q, const void * buf, size_t size, int mode )
```

Send a message to a gueue.

This service sends a complete message to a given queue. The message must have been allocated by a previous call to rt\_queue\_alloc().

q The queue descriptor.
-------------------------

buf	The address of the message buffer to be sent. The message buffer must have been
	allocated using the rt_queue_alloc() service. Once passed to rt_queue_send(), the
	memory pointed to by <i>buf</i> is no more under the control of the sender and thus should
	not be referenced by it anymore; deallocation of this memory must be handled on
	the receiving side.
size	The actual size in bytes of the message, which may be lower than the allocated size
	for the buffer obtained from rt_queue_alloc(). Zero is a valid value, in which case an
	empty message will be sent.
mode	A set of flags affecting the operation:

- Q\_URGENT causes the message to be prepended to the message queue, ensuring a LIFO ordering.
- Q\_NORMAL causes the message to be appended to the message queue, ensuring a FIFO ordering.
- Q\_BROADCAST causes the message to be sent to all tasks currently waiting for messages. The
  message is not copied; a reference count is maintained instead so that the message will remain
  valid until the last receiver releases its own reference using rt\_queue\_free(), after which the message space will be returned to the queue's internal pool.

#### Returns

Upon success, this service returns the number of receivers which got awaken as a result of the operation. If zero is returned, no task was waiting on the receiving side of the queue, and the message has been enqueued. Upon error, one of the following error codes is returned:

- -EINVAL is returned if q is not a message queue descriptor, mode is invalid, or buf is NULL.
- -ENOMEM is returned if queuing the message would exceed the limit defined for the queue at creation.

### Tags

unrestricted, switch-primary

6.83.3.15 int rt queue unbind (RT QUEUE \* q)

Unbind from a message queue.

# Parameters

q	The queue descriptor.

This routine releases a previous binding to a message queue. After this call has returned, the descriptor is no more valid for referencing this object.

# Tags

thread-unrestricted

410 Module Documentation

# 6.84 Semaphore services

Counting semaphore IPC mechanism.

Collaboration diagram for Semaphore services:



# **Data Structures**

struct RT SEM INFO

Semaphore status descriptor.

### Macros

#define S\_PRIO 0x1 /\* Pend by task priority order. \*/
 Creation flags.

#### **Functions**

- int rt\_sem\_create (RT\_SEM \*sem, const char \*name, unsigned long icount, int mode)

  Create a counting semaphore.
- int rt\_sem\_delete (RT\_SEM \*sem)

Delete a semaphore.

int rt\_sem\_p\_timed (RT\_SEM \*sem, const struct timespec \*abs\_timeout)

Pend on a semaphore.

static int rt\_sem\_p\_until (RT\_SEM \*sem, RTIME timeout)

Pend on a semaphore (with absolute scalar timeout).

• static int rt\_sem\_p (RT\_SEM \*sem, RTIME timeout)

Pend on a semaphore (with relative scalar timeout).

• int rt\_sem\_v (RT\_SEM \*sem)

Signal a semaphore.

int rt\_sem\_broadcast (RT\_SEM \*sem)

Broadcast a semaphore.

• int rt\_sem\_inquire (RT\_SEM \*sem, RT\_SEM\_INFO \*info)

Query semaphore status.

• int rt\_sem\_bind (RT\_SEM \*sem, const char \*name, RTIME timeout)

Bind to a semaphore.

• int rt\_sem\_unbind (RT\_SEM \*sem)

Unbind from a semaphore.

# 6.84.1 Detailed Description

Counting semaphore IPC mechanism. A counting semaphore is a synchronization object for controlling the concurrency level allowed in accessing a resource from multiple real-time tasks, based on the value of a count variable accessed atomically. The semaphore is used through the P ("Proberen", from the Dutch "test and decrement") and V ("Verhogen", increment) operations. The P operation decrements the semaphore count by one if non-zero, or waits until a V operation is issued by another task. Conversely, the V operation releases a resource by incrementing the count by one, unblocking the heading task waiting on the P operation if any. Waiting on a semaphore may cause a priority inversion.

If no more than a single resource is made available at any point in time, the semaphore enforces mutual exclusion and thus can be used to serialize access to a critical section. However, mutexes should be used instead in order to prevent priority inversions, based on the priority inheritance protocol.

### 6.84.2 Macro Definition Documentation

6.84.2.1 #define S\_PRIO 0x1 /\* Pend by task priority order. \*/

Creation flags.

Referenced by rt\_sem\_create().

#### 6.84.3 Function Documentation

6.84.3.1 int rt\_sem\_bind ( RT\_SEM \* sem, const char \* name, RTIME timeout )

#### Bind to a semaphore.

This routine creates a new descriptor to refer to an existing semaphore identified by its symbolic name. If the object does not exist on entry, the caller may block until a semaphore of the given name is created.

#### **Parameters**

sem	The address of a semaphore descriptor filled in by the operation. Contents of this
	memory is undefined upon failure.
name	A valid NULL-terminated name which identifies the semaphore to bind to. This string
	should match the object name argument passed to rt_sem_create().
timeout	The number of clock ticks to wait for the registration to occur (see note). Passing
	TM_INFINITE causes the caller to block indefinitely until the object is registered.
	Passing TM_NONBLOCK causes the service to return immediately without waiting
	if the object is not registered on entry.

#### Returns

Zero is returned upon success. Otherwise:

- -EINTR is returned if rt\_task\_unblock() was called for the current task before the retrieval has completed.
- -EWOULDBLOCK is returned if *timeout* is equal to TM\_NONBLOCK and the searched object is not registered on entry.
- -ETIMEDOUT is returned if the object cannot be retrieved within the specified amount of time.
- -EPERM is returned if this service should block, but was not called from a Xenomai thread.

### Tags

xthread-nowait, switch-primary

#### Note

The *timeout* value is interpreted as a multiple of the Alchemy clock resolution (see –alchemy-clock-resolution option, defaults to 1 nanosecond).

6.84.3.2 int rt\_sem\_broadcast ( RT\_SEM \* sem )

#### Broadcast a semaphore.

All tasks currently waiting on the semaphore are immediately unblocked. The semaphore count is set to zero.

#### **Parameters**

sem	The semaphore descriptor.
-----	---------------------------

#### Returns

Zero is returned upon success. Otherwise:

• -EINVAL is returned if sem is not a valid semaphore descriptor.

### Tags

#### unrestricted

6.84.3.3 int rt sem create ( RT SEM \* sem, const char \* name, unsigned long icount, int mode )

# Create a counting semaphore.

# **Parameters**

sem	The address of a semaphore descriptor which can be later used to identify uniquely
	the created object, upon success of this call.
name	An ASCII string standing for the symbolic name of the semaphore. When non-NULL
	and non-empty, a copy of this string is used for indexing the created semaphore into
	the object registry.
icount	The initial value of the counting semaphore.
mode	The semaphore creation mode. The following flags can be OR'ed into this bitmask:

- S\_FIFO makes tasks pend in FIFO order on the semaphore.
- S\_PRIO makes tasks pend in priority order on the semaphore.
- S\_PULSE causes the semaphore to behave in "pulse" mode. In this mode, the V (signal) operation attempts to release a single waiter each time it is called, without incrementing the semaphore count, even if no waiter is pending. For this reason, the semaphore count in pulse mode remains zero.

#### Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if icount is non-zero and S\_PULSE is set in mode, or mode is otherwise invalid.
- -ENOMEM is returned if the system fails to get memory from the main heap in order to create the semaphore.

- -EEXIST is returned if the name is conflicting with an already registered semaphore.
- -EPERM is returned if this service was called from an asynchronous context.

#### Tags

thread-unrestricted, switch-secondary

#### Note

Semaphores can be shared by multiple processes which belong to the same Xenomai session.

References S\_PRIO.

```
6.84.3.4 int rt_sem_delete ( RT_SEM * sem )
```

Delete a semaphore.

This routine deletes a semaphore previously created by a call to rt\_sem\_create().

**Parameters** 

sem	The semaphore descriptor.

#### Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if sem is not a valid semaphore descriptor.
- -EPERM is returned if this service was called from an asynchronous context.

### Tags

thread-unrestricted, switch-secondary

```
6.84.3.5 int rt_sem_inquire ( RT_SEM * sem, RT_SEM_INFO * info )
```

Query semaphore status.

This routine returns the status information about the specified semaphore.

### **Parameters**

sem	The semaphore descriptor.
info	A pointer to the returnbuffer" to copy the information to.

### Returns

Zero is returned and status information is written to the structure pointed at by *info* upon success. Otherwise:

• -EINVAL is returned if sem is not a valid semaphore descriptor.

# Tags

#### unrestricted

References RT\_SEM\_INFO::count, RT\_SEM\_INFO::name, and RT\_SEM\_INFO::nwaiters.

6.84.3.6 intrt\_sem\_p(RT\_SEM\*sem, RTIMEtimeout) [inline], [static]

Pend on a semaphore (with relative scalar timeout).

This routine is a variant of rt\_sem\_p\_timed() accepting a relative timeout specification expressed as a scalar value.

#### **Parameters**

sem	The semaphore descriptor.
timeout	A delay expressed in clock ticks.

#### Tags

xthread-nowait, switch-primary

References rt\_sem\_p\_timed().

6.84.3.7 int rt\_sem\_p\_timed ( RT\_SEM \* sem, const struct timespec \* abs\_timeout )

Pend on a semaphore.

Test and decrement the semaphore count. If the semaphore value is greater than zero, it is decremented by one and the service immediately returns to the caller. Otherwise, the caller is blocked until the semaphore is either signaled or destroyed, unless a non-blocking operation was required.

#### **Parameters**

sem	The semaphore descriptor.
abs_timeout	An absolute date expressed in clock ticks, specifying a time limit to wait for the request to be satisfied (see note). Passing NULL causes the caller to block indefinitely until the request is satisfied. Passing { .tv_sec = 0, .tv_nsec = 0 } causes the service
	to return without blocking in case the request cannot be satisfied immediately.

### Returns

Zero is returned upon success. Otherwise:

- -ETIMEDOUT is returned if abs timeout is reached before the request is satisfied.
- -EWOULDBLOCK is returned if *abs\_timeout* is { .tv\_sec = 0, .tv\_nsec = 0 } and the semaphore count is zero on entry.
- -EINTR is returned if rt\_task\_unblock() was called for the current task before the request is satisfied.
- -EINVAL is returned if sem is not a valid semaphore descriptor.
- -EIDRM is returned if *sem* is deleted while the caller was sleeping on it. In such a case, *sem* is no more valid upon return of this service.
- -EPERM is returned if this service should block, but was not called from a Xenomai thread.

### Tags

xthread-nowait, switch-primary

### Note

abs\_timeout is interpreted as a multiple of the Alchemy clock resolution (see -alchemy-clock-resolution option, defaults to 1 nanosecond).

Referenced by rt\_sem\_p(), and rt\_sem\_p\_until().

6.84.3.8 int rt\_sem\_p\_until ( RT\_SEM \* sem, RTIME abs\_timeout ) [inline], [static]

Pend on a semaphore (with absolute scalar timeout).

This routine is a variant of rt\_sem\_p\_timed() accepting an absolute timeout specification expressed as a scalar value.

**Parameters** 

sem	The semaphore descriptor.
abs_timeout	An absolute date expressed in clock ticks.

### Tags

xthread-nowait, switch-primary

References rt\_sem\_p\_timed().

```
6.84.3.9 int rt sem unbind ( RT SEM * sem )
```

Unbind from a semaphore.

**Parameters** 

```
sem | The semaphore descriptor.
```

This routine releases a previous binding to a semaphore. After this call has returned, the descriptor is no more valid for referencing this object.

### Tags

thread-unrestricted

```
6.84.3.10 int rt_sem_v ( RT_SEM * sem )
```

Signal a semaphore.

If the semaphore is pended, the task heading the wait queue is immediately unblocked. Otherwise, the semaphore count is incremented by one, unless the semaphore is used in "pulse" mode (see rt\_sem\_create()).

**Parameters** 

sem	The semaphore descriptor.

### Returns

Zero is returned upon success. Otherwise:

• -EINVAL is returned if sem is not a valid semaphore descriptor.

### Tags

unrestricted

416 Module Documentation

# 6.85 Task management services

Services dealing with preemptive multi-tasking.

Collaboration diagram for Task management services:



### **Data Structures**

struct RT\_TASK\_INFO

Task status descriptor.

#### Macros

#define T\_LOPRIO 0

Task priorities.

#define T\_LOCK \_\_THREAD\_M\_LOCK

Task mode bits.

#define T\_WARNSW \_\_THREAD\_M\_WARNSW

Cobalt only, nop over Mercury.

### **Functions**

int rt\_task\_delete (RT\_TASK \*task)

Delete a real-time task.

int rt\_task\_set\_affinity (RT\_TASK \*task, const cpu\_set\_t \*cpus)

Set CPU affinity of real-time task.

int rt\_task\_start (RT\_TASK \*task, void(\*entry)(void \*arg), void \*arg)

Start a real-time task.

• int rt\_task\_shadow (RT\_TASK \*task, const char \*name, int prio, int mode)

Turn caller into a real-time task.

int rt\_task\_join (RT\_TASK \*task)

Wait on the termination of a real-time task.

• int rt\_task\_wait\_period (unsigned long \*overruns\_r)

Wait for the next periodic release point.

int rt task sleep (RTIME delay)

Delay the current real-time task (with relative delay).

int rt\_task\_sleep\_until (RTIME date)

Delay the current real-time task (with absolute wakeup date).

• int rt\_task\_same (RT\_TASK \*task1, RT\_TASK \*task2)

Compare real-time task descriptors.

• int rt\_task\_suspend (RT\_TASK \*task)

Suspend a real-time task.

int rt\_task\_resume (RT\_TASK \*task)

Resume a real-time task.

RT\_TASK \* rt\_task\_self (void)

Retrieve the current task descriptor.

• int rt\_task\_set\_priority (RT\_TASK \*task, int prio)

Change the base priority of a real-time task.

int rt\_task\_set\_mode (int clrmask, int setmask, int \*mode\_r)

Change the current task mode.

int rt task yield (void)

Manual round-robin.

int rt task unblock (RT TASK \*task)

Unblock a real-time task.

• int rt task slice (RT TASK \*task, RTIME quantum)

Set a task's round-robin quantum.

• int rt\_task\_inquire (RT\_TASK \*task, RT\_TASK\_INFO \*info)

Retrieve information about a real-time task.

ssize\_t rt\_task\_send\_timed (RT\_TASK \*task, RT\_TASK\_MCB \*mcb\_s, RT\_TASK\_MCB \*mcb\_r, const struct timespec \*abs\_timeout)

Send a message to a real-time task.

static ssize\_t rt\_task\_send\_until (RT\_TASK \*task, RT\_TASK\_MCB \*mcb\_s, RT\_TASK\_MCB \*mcb r, RTIME timeout)

Send a message to a real-time task (with absolute scalar timeout).

static ssize\_t rt\_task\_send (RT\_TASK \*task, RT\_TASK\_MCB \*mcb\_s, RT\_TASK\_MCB \*mcb\_r, RTIME timeout)

Send a message to a real-time task (with relative scalar timeout).

• int rt\_task\_receive\_timed (RT\_TASK\_MCB \*mcb\_r, const struct timespec \*abs\_timeout)

Receive a message from a real-time task.

• static int rt task receive until (RT TASK MCB \*mcb r, RTIME timeout)

Receive a message from a real-time task (with absolute scalar timeout).

static int rt\_task\_receive (RT\_TASK\_MCB \*mcb\_r, RTIME timeout)

Receive a message from a real-time task (with relative scalar timeout).

• int rt task reply (int flowid, RT TASK MCB \*mcb s)

Reply to a remote task message.

• int rt\_task\_bind (RT\_TASK \*task, const char \*name, RTIME timeout)

Bind to a task.

• int rt\_task\_unbind (RT\_TASK \*task)

Unbind from a task.

• int rt task create (RT TASK \*task, const char \*name, int stksize, int prio, int mode)

Create a real-time task.

int rt\_task\_set\_periodic (RT\_TASK \*task, RTIME idate, RTIME period)

Make a real-time task periodic.

• int rt\_task\_spawn (RT\_TASK \*task, const char \*name, int stksize, int prio, int mode, void(\*entry)(void \*arg), void \*arg)

Create and start a real-time task.

# 6.85.1 Detailed Description

Services dealing with preemptive multi-tasking. Each Alchemy task is an independent portion of the overall application code embodied in a C procedure, which executes on its own stack context.

6.85.2 Macro Definition Documentation

6.85.2.1 #define T\_LOCK \_\_THREAD\_M\_LOCK

Task mode bits.

Referenced by rt\_task\_create(), rt\_task\_set\_mode(), and rt\_task\_shadow().

6.85.2.2 #define T LOPRIO 0

Task priorities.

6.85.2.3 #define T WARNSW THREAD M WARNSW

Cobalt only, nop over Mercury.

Referenced by rt\_task\_create(), rt\_task\_set\_mode(), and rt\_task\_shadow().

6.85.3 Function Documentation

6.85.3.1 int rt task bind ( RT TASK \* task, const char \* name, RTIME timeout )

Bind to a task.

This routine creates a new descriptor to refer to an existing Alchemy task identified by its symbolic name. If the object does not exist on entry, the caller may block until a task of the given name is created.

#### **Parameters**

task	The address of a task descriptor filled in by the operation. Contents of this memory
	is undefined upon failure.
name	A valid NULL-terminated name which identifies the task to bind to. This string should
	match the object name argument passed to rt_task_create(), or rt_task_shadow().
timeout	The number of clock ticks to wait for the registration to occur (see note). Passing
	TM_INFINITE causes the caller to block indefinitely until the object is registered.
	Passing TM_NONBLOCK causes the service to return immediately without waiting
	if the object is not registered on entry.

# Returns

Zero is returned upon success. Otherwise:

- -EINTR is returned if rt\_task\_unblock() was called for the current task before the retrieval has completed.
- -EWOULDBLOCK is returned if *timeout* is equal to TM\_NONBLOCK and the searched object is not registered on entry.
- -ETIMEDOUT is returned if the object cannot be retrieved within the specified amount of time.
- -EPERM is returned if this service should block, but was not called from a Xenomai thread.

Tags

xthread-nowait, switch-primary

# Note

The *timeout* value is interpreted as a multiple of the Alchemy clock resolution (see –alchemy-clock-resolution option, defaults to 1 nanosecond).

6.85.3.2 int rt\_task\_create ( RT\_TASK \* task, const char \* name, int stksize, int prio, int mode )

#### Create a real-time task.

This service creates a task with access to the full set of Xenomai real-time services. If *prio* is non-zero, the new task belongs to Xenomai's real-time FIFO scheduling class, aka SCHED\_FIFO. If *prio* is zero, the task belongs to the regular SCHED\_OTHER class.

Creating tasks with zero priority is useful for running non real-time processes which may invoke blocking real-time services, such as pending on a semaphore, reading from a message queue or a buffer, and so on.

Once created, the task is left dormant until it is actually started by rt\_task\_start().

#### **Parameters**

task	The address of a task descriptor which can be later used to identify uniquely the
	created object, upon success of this call.
name	An ASCII string standing for the symbolic name of the task. When non-NULL and non-empty, a copy of this string is used for indexing the created task into the object registry.
stksize	The size of the stack (in bytes) for the new task. If zero is passed, a system-dependent default size will be substituted.
prio	The base priority of the new task. This value must be in the [0 99] range, where 0 is the lowest effective priority.
mode	The task creation mode. The following flags can be OR'ed into this bitmask:

- T\_JOINABLE allows another task to wait on the termination of the new task. rt\_task\_join() shall be called for this task to clean up any resources after its termination.
- T\_LOCK causes the new task to lock the scheduler prior to entering the user routine specified by rt\_task\_start(). A call to rt\_task\_set\_mode() from the new task is required to drop this lock.
- When running over the Cobalt core, T\_WARNSW causes the SIGDEBUG signal to be sent to the current task whenever it switches to the secondary mode. This feature is useful to detect unwanted migrations to the Linux domain. This flag has no effect over the Mercury core.

# Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if either prio, mode or stksize are invalid.
- -ENOMEM is returned if the system fails to get memory from the main heap in order to create the task.
- -EEXIST is returned if the *name* is conflicting with an already registered task.

#### Tags

thread-unrestricted, switch-secondary

#### Side effects

- When running over the Cobalt core:
  - calling rt\_task\_create() causes SCHED\_FIFO tasks to switch to secondary mode.
  - members of Xenomai's SCHED\_FIFO class running in the primary domain have utmost priority over all Linux activities in the system, including Linux interrupt handlers.
- When running over the Mercury core, the new task belongs to the regular POSIX SCHED\_FI-FO class.

Note

Tasks can be referred to from multiple processes which all belong to the same Xenomai session.

### Examples:

cross-link.c.

References T\_LOCK, and T\_WARNSW.

Referenced by rt task spawn().

```
6.85.3.3 int rt_task_delete ( RT_TASK * task )
```

Delete a real-time task.

This call terminates a task previously created by rt\_task\_create().

Tasks created with the T\_JOINABLE flag shall be joined by a subsequent call to rt\_task\_join() once successfully deleted, to reclaim all resources.

**Parameters** 

```
task The task descriptor.
```

#### Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if task is not a valid task descriptor.
- -EPERM is returned if *task* is NULL and this service was called from an invalid context. In addition, this error is always raised when this service is called from asynchronous context, such as a timer/alarm handler.

Tags

thread-unrestricted, switch-secondary

Note

The caller must be an Alchemy task if task is NULL.

### Examples:

cross-link.c.

```
6.85.3.4 int rt_task_inquire ( RT_TASK * task, RT_TASK_INFO * info )
```

Retrieve information about a real-time task.

Return various information about an Alchemy task. This service may also be used to probe for task existence.

task	The task descriptor. If <i>task</i> is NULL, the information about the current task is returned.
info	The address of a structure the task information will be written to. Passing NULL is valid, in which case the system is only probed for existence of the specified task.

#### Returns

Zero is returned if the task exists. In addition, if *info* is non-NULL, it is filled in with task information.

- -EINVAL is returned if task is not a valid task descriptor, or if prio is invalid.
- -EPERM is returned if task is NULL and this service was called from an invalid context.

#### Tags

thread-unrestricted, switch-primary

#### Note

The caller must be an Alchemy task if task is NULL.

References RT\_TASK\_INFO::name, RT\_TASK\_INFO::pid, RT\_TASK\_INFO::prio, and RT\_TASK\_INFO::stat.

Wait on the termination of a real-time task.

This service blocks the caller in non-real-time context until *task* has terminated. All resources are released after successful completion of this service.

The specified task must have been created by the same process that wants to join it, and the T\_JOINA-BLE mode flag must have been set on creation to rt\_task\_create().

Tasks created with the T\_JOINABLE flag shall be joined by a subsequent call to rt\_task\_join() once successfully deleted, to reclaim all resources.

#### **Parameters**

task	The task descriptor.
------	----------------------

#### Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if task is not a valid task descriptor.
- -EINVAL is returned if the task was not created with T\_JOINABLE set or some other task is already waiting on the termination.
- -EDEADLK is returned if task refers to the caller.
- -ESRCH is returned if task no longer exists or refers to task created by a different process.

### Tags

thread-unrestricted, switch-primary

#### Note

After successful completion of this service, it is neither required nor valid to additionally invoke rt\_task\_delete() on the same task.

References pthread\_join().

422 Module Documentation

6.85.3.6 ssize\_t rt\_task\_receive(RT\_TASK\_MCB\*mcb\_r, RTIME timeout) [inline], [static]

Receive a message from a real-time task (with relative scalar timeout).

This routine is a variant of rt\_task\_receive\_timed() accepting a relative timeout specification expressed as a scalar value.

#### **Parameters**

mcb_r	The address of a message control block referring to the receive message area.
timeout	A delay expressed in clock ticks.

### Tags

xthread-only, switch-primary

References rt\_task\_receive\_timed().

```
6.85.3.7 int rt_task_receive_timed ( RT_TASK_MCB * mcb_r, const struct timespec * abs_timeout )
```

Receive a message from a real-time task.

This service is part of the synchronous message passing support available to Alchemy tasks. The caller receives a variable-sized message from another task. The sender is blocked until the caller invokes rt task reply() to finish the transaction.

A basic message control block is used to store the location and size of the data area to receive from the client, in addition to a user-defined operation code.

#### **Parameters**

mcb_r	The address of a message control block referring to the receive message area. The
	fields from this control block should be set as follows:

- mcb\_r->data should contain the address of a buffer large enough to collect the data sent by the remote task;
- mcb\_r->size should contain the size in bytes of the buffer space pointed at by mcb\_r->data. If mcb\_r->size is lower than the actual size of the received message, no data copy takes place and -ENOBUFS is returned to the caller. See note.

Upon return, mcb\_r->opcode will contain the operation code sent from the remote task using rt\_task\_send().

#### **Parameters**

abs_timeout	The number of clock ticks to wait for receiving a message (see note). Passing NULL
	causes the caller to block indefinitely until a remote task eventually sends a mes-
	sage. Passing { .tv_sec = 0, .tv_nsec = 0 } causes the service to return immediately
	without waiting if no remote task is currently waiting for sending a message.

#### Returns

A strictly positive value is returned upon success, representing a flow identifier for the opening transaction; this token should be passed to rt\_task\_reply(), in order to send back a reply to and unblock the remote task appropriately. Otherwise:

- -EPERM is returned if this service was called from an invalid context.
- -EINTR is returned if rt\_task\_unblock() was called for the current task before a message was received.

- -ENOBUFS is returned if *mcb\_r* does not point at a message area large enough to collect the remote task's message.
- -EWOULDBLOCK is returned if abs\_timeout is { .tv\_sec = 0, .tv\_nsec = 0 } and no remote task is currently waiting for sending a message to the caller.
- -ETIMEDOUT is returned if no message was received within the timeout.

### Tags

xthread-only, switch-primary

Note

abs\_timeout is interpreted as a multiple of the Alchemy clock resolution (see -alchemy-clock-resolution option, defaults to 1 nanosecond).

Referenced by rt\_task\_receive(), and rt\_task\_receive\_until().

```
6.85.3.8 ssize_t rt_task_receive_until( RT_TASK_MCB * mcb_r, RTIME abs_timeout ) [inline], [static]
```

Receive a message from a real-time task (with absolute scalar timeout).

This routine is a variant of rt\_task\_receive\_timed() accepting an absolute timeout specification expressed as a scalar value.

#### **Parameters**

mcb_r	The address of a message control block referring to the receive message area.
abs_timeout	An absolute date expressed in clock ticks.

# Tags

xthread-only, switch-primary

References rt\_task\_receive\_timed().

```
6.85.3.9 int rt_task_reply (int flowid, RT_TASK_MCB * mcb_s)
```

Reply to a remote task message.

This service is part of the synchronous message passing support available to Alchemy tasks. The caller sends a variable-sized message back to a remote task, in response to this task's initial message received by a call to rt\_task\_receive(). As a consequence of calling rt\_task\_reply(), the remote task will be unblocked from the rt\_task\_send() service.

A basic message control block is used to store the location and size of the data area to send back, in addition to a user-defined status code.

flowid	The flow identifier returned by a previous call to rt_task_receive() which uniquely
	identifies the current transaction.

424 Module Documentation

mcb\_s The address of an optional message control block referring to the message to be sent back. If mcb\_s is NULL, the remote will be unblocked without getting any reply data. When mcb\_s is valid, the fields from this control block should be set as follows:

- mcb s->data should contain the address of the payload data to send to the remote task.
- mcb\_s->size should contain the size in bytes of the payload data pointed at by mcb\_s->data. Zero
  is a legitimate value, and indicates that no payload data will be transferred. In the latter case,
  mcb\_s->data will be ignored.
- mcb\_s->opcode is an opaque status code carried during the message transfer the caller can fill
  with any appropriate value. It will be made available "as is" to the remote task into the status code
  field by the rt\_task\_send() service. If mcb\_s is NULL, Zero will be returned to the remote task into
  the status code field.

#### Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if flowid is invalid.
- -ENXIO is returned if *flowid* does not match the expected identifier returned from the latest call of the current task to rt\_task\_receive(), or if the remote task stopped waiting for the reply in the meantime (e.g. the remote could have been deleted or forcibly unblocked).
- -ENOBUFS is returned if the reply data referred to by *mcb\_s* is larger than the reply area mentioned by the remote task when calling rt\_task\_send(). In such a case, the remote task also receives -E-NOBUFS on return from rt\_task\_send().
- -EPERM is returned if this service was called from an invalid context.

#### Tags

xthread-only, switch-primary

```
6.85.3.10 int rt task resume ( RT TASK * task )
```

Resume a real-time task.

Forcibly resume the execution of a task which was previously suspended by a call to rt\_task\_suspend(), if the suspend nesting count decrements to zero.

**Parameters** 

task	The task descriptor.

#### Returns

Zero is returned upon success. Otherwise:

-EINVAL is returned if task is not a valid task descriptor.

#### Tags

unrestricted, switch-primary

# Note

Blocked and suspended task states are cumulative. Therefore, resuming a task currently waiting on a synchronization object (e.g. semaphore, queue) does not make it eligible for scheduling until the awaited resource is eventually acquired, or a timeout elapses.

```
6.85.3.11 int rt_task_same ( RT_TASK * task1, RT_TASK * task2 )
```

Compare real-time task descriptors.

This predicate returns true if task1 and task2 refer to the same task.

**Parameters** 

task1	First task descriptor to compare.
task2	Second task descriptor to compare.

#### Returns

A non-zero value is returned if both descriptors refer to the same task, zero otherwise.

# Tags

unrestricted

```
6.85.3.12 RT_TASK * rt_task_self (void)
```

Retrieve the current task descriptor.

Return the address of the current Alchemy task descriptor.

#### Returns

The address of the task descriptor referring to the current Alchemy task is returned upon success, or NULL if not called from a valid Alchemy task context.

### Tags

xthread-only

```
6.85.3.13 ssize_t rt_task_send ( RT_TASK * task, RT_TASK_MCB * mcb_r, RTIME timeout ) [inline], [static]
```

Send a message to a real-time task (with relative scalar timeout).

This routine is a variant of rt\_task\_send\_timed() accepting a relative timeout specification expressed as a scalar value.

**Parameters** 

task	The task descriptor.
mcb_s	The address of the message control block referring to the message to be sent.
mcb_r	The address of an optional message control block referring to the reply message
	area.
timeout	A delay expressed in clock ticks.

### Tags

xthread-only, switch-primary

References rt\_task\_send\_timed().

6.85.3.14 ssize\_t rt\_task\_send\_timed ( RT\_TASK \* task, RT\_TASK\_MCB \* mcb\_r, const struct timespec \* abs\_timeout )

Send a message to a real-time task.

This service is part of the synchronous message passing support available to Alchemy tasks. The caller sends a variable-sized message to another task, waiting for the remote to receive the initial message by a call to rt\_task\_receive(), then reply to it using rt\_task\_reply().

A basic message control block is used to store the location and size of the data area to send or retrieve upon reply, in addition to a user-defined operation code.

#### **Parameters**

task	The task descriptor.
mcb_s	The address of the message control block referring to the message to be sent. The
	fields from this control block should be set as follows:

- mcb s->data should contain the address of the payload data to send to the remote task.
- mcb\_s->size should contain the size in bytes of the payload data pointed at by mcb\_s->data. Zero
  is a legitimate value, and indicates that no payload data will be transferred. In the latter case,
  mcb s->data will be ignored.
- mcb\_s->opcode is an opaque operation code carried during the message transfer, the caller can
  fill with any appropriate value. It will be made available "as is" to the remote task into the operation
  code field by the rt\_task\_receive() service.

#### **Parameters**

mcb_r	The address of an optional message control block referring to the reply message
	area. If mcb_r is NULL and a reply is sent back by the remote task, the reply
	message will be discarded, and -ENOBUFS will be returned to the caller. When
	mcb_r is valid, the fields from this control block should be set as follows:

- mcb\_r->data should contain the address of a buffer large enough to collect the reply data from the remote task.
- mcb\_r->size should contain the size in bytes of the buffer space pointed at by mcb\_r->data. If mcb\_r->size is lower than the actual size of the reply message, no data copy takes place and -ENOBUFS is returned to the caller.

Upon return, mcb\_r->opcode will contain the status code sent back from the remote task using rt\_task\_reply(), or zero if unspecified.

# **Parameters**

abs_timeout	An absolute date expressed in clock ticks, specifying a time limit to wait for the
	recipient task to reply to the initial message (see note). Passing NULL causes the
	caller to block indefinitely until a reply is received. Passing { .tv_sec = 0, .tv_nsec
	= 0 } causes the service to return without blocking in case the recipient task is not
	waiting for messages at the time of the call.

#### Returns

A positive value is returned upon success, representing the length (in bytes) of the reply message returned by the remote task. Zero is a success status, meaning either that  $mcb_r$  was NULL on entry, or that no actual message was passed to the remote call to rt task reply(). Otherwise:

-EINVAL is returned if task is not a valid task descriptor.

- · -EPERM is returned if this service was called from an invalid context.
- -ENOBUFS is returned if mcb\_r does not point at a message area large enough to collect the remote task's reply. This includes the case where mcb\_r is NULL on entry, despite the remote task attempts to send a reply message.
- -EWOULDBLOCK is returned if abs\_timeout is { .tv\_sec = 0, .tv\_nsec = 0 } and the recipient task is not currently waiting for a message on the rt\_task\_receive() service.
- -EIDRM is returned if task has been deleted while waiting for a reply.
- -EINTR is returned if rt\_task\_unblock() was called for the current task before any reply was received from the recipient task.

### Tags

xthread-only, switch-primary

#### Note

abs\_timeout is interpreted as a multiple of the Alchemy clock resolution (see -alchemy-clock-resolution option, defaults to 1 nanosecond).

Referenced by rt\_task\_send(), and rt\_task\_send\_until().

```
6.85.3.15 ssize_t rt_task_send_until ( RT_TASK * task, RT_TASK_MCB * mcb_r, RTIME abs_timeout ) [inline], [static]
```

Send a message to a real-time task (with absolute scalar timeout).

This routine is a variant of rt\_task\_send\_timed() accepting an absolute timeout specification expressed as a scalar value.

#### **Parameters**

task	The task descriptor.
mcb_s	The address of the message control block referring to the message to be sent.
mcb_r	The address of an optional message control block referring to the reply message
	area.
abs_timeout	An absolute date expressed in clock ticks.

### Tags

xthread-only, switch-primary

References rt\_task\_send\_timed().

```
6.85.3.16 int rt task set affinity ( RT TASK * task, const cpu set t * cpus )
```

Set CPU affinity of real-time task.

This calls makes task affine to the set of CPUs defined by cpus.

task	The task descriptor. If <i>task</i> is NULL, the CPU affinity of the current task is changed.
cpus	The set of CPUs <i>task</i> should be affine to.

#### Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if *task* is NULL but the caller is not a Xenomai task, or if *task* is non-NULL but not a valid task descriptor.
- -EINVAL is returned if *cpus* contains no processors that are currently physically on the system and permitted to the process according to any restrictions that may be imposed by the "cpuset" mechanism described in cpuset(7).

#### Tags

thread-unrestricted, switch-secondary

#### Note

The caller must be an Alchemy task if task is NULL.

6.85.3.17 int rt\_task\_set\_mode (int clrmask, int setmask, int \* mode\_r)

Change the current task mode.

Each Alchemy task has a set of internal flags determining several operating conditions. rt\_task\_set\_mode() takes a bitmask of mode bits to clear for disabling the corresponding modes for the current task, and another one to set for enabling them. The mode bits which were previously in effect before the change can be returned upon request.

The following bits can be part of the bitmask:

- T\_LOCK causes the current task to lock the scheduler on the current CPU, preventing all further involuntary task switches on this CPU. Clearing this bit unlocks the scheduler.
- Only when running over the Cobalt core:
  - T\_WARNSW causes the SIGDEBUG signal to be sent to the current task whenever it switches to the secondary mode. This feature is useful to detect unwanted migrations to the Linux domain.
  - T\_CONFORMING can be passed in *setmask* to switch the current Alchemy task to its preferred runtime mode. The only meaningful use of this switch is to force a real-time task back to primary mode (see note). Any other use leads to a nop.

These two last flags have no effect over the Mercury core, and are simply ignored.

clrmask	A bitmask of mode bits to clear for the current task, before <i>setmask</i> is applied. Zero
	is an acceptable value which leads to a no-op.
setmask	A bitmask of mode bits to set for the current task. Zero is an acceptable value which
	leads to a no-op.
mode_r	If non-NULL, mode_r must be a pointer to a memory location which will be written
	upon success with the previous set of active mode bits. If NULL, the previous set of
	active mode bits will not be returned.

#### Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if task is not a valid task descriptor, or if any bit from clrmask or setmask is invalid.
- -EPERM is returned if this service was called from an invalid context.

#### Tags

xthread-only, switch-primary

#### Note

The caller must be an Alchemy task.

Forcing the task mode using the T\_CONFORMING bit from user code is almost always wrong, since the Xenomai/cobalt core handles mode switches internally when/if required. Most often, manual mode switching from applications introduces useless overhead. This mode bit is part of the API only to cover rare use cases in middleware code based on the Alchemy interface.

References T LOCK, and T WARNSW.

6.85.3.18 int rt\_task\_set\_periodic ( RT\_TASK \* task, RTIME idate, RTIME period )

Make a real-time task periodic.

Make a task periodic by programing its first release point and its period in the processor time line. *task* should then call rt\_task\_wait\_period() to sleep until the next periodic release point in the processor timeline is reached.

### **Parameters**

task	The task descriptor. If <i>task</i> is NULL, the current task is made periodic. <i>task</i> must
	belong the current process.
idate	The initial (absolute) date of the first release point, expressed in clock ticks (see
	note). If <i>idate</i> is equal to TM_NOW, the current system date is used.
period	The period of the task, expressed in clock ticks (see note). Passing TM_INFINITE
	stops the task's periodic timer if enabled, then returns successfully.

### Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if *task* is NULL but the caller is not a Xenomai task, or if *task* is non-NULL but not a valid task descriptor.
- -ETIMEDOUT is returned if *idate* is different from TM\_INFINITE and represents a date in the past.

# Tags

thread-unrestricted, switch-primary

#### Note

The caller must be an Alchemy task if task is NULL.

Over Cobalt, -EINVAL is returned if *period* is different from TM\_INFINITE but shorter than the user scheduling latency value for the target system, as displayed by /proc/xenomai/latency.

The *idate* and *period* values are interpreted as a multiple of the Alchemy clock resolution (see –alchemy-clock-resolution option, defaults to 1 nanosecond).

430 Module Documentation

#### Attention

Unlike its Xenomai 2.x counterpart, rt\_task\_set\_periodic() will **NOT** block *task* until *idate* is reached. The first beat in the periodic timeline should be awaited for by a call to rt\_task\_wait\_period().

#### Examples:

cross-link.c.

References clock gettime().

```
6.85.3.19 int rt task set priority ( RT TASK * task, int prio )
```

Change the base priority of a real-time task.

The base priority of a task defines the relative importance of the work being done by each task, which gains conrol of the CPU accordingly.

Changing the base priority of a task does not affect the priority boost the target task might have obtained as a consequence of a priority inheritance undergoing.

#### **Parameters**

task	The task descriptor. If <i>task</i> is NULL, the priority of the current task is changed.
prio	The new priority. This value must range from [T_LOPRIO T_HIPRIO] (inclusive)
	where T_LOPRIO is the lowest effective priority.

#### Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if *task* is not a valid task descriptor, or if *prio* is invalid.
- -EPERM is returned if task is NULL and this service was called from an invalid context.

# Tags

thread-unrestricted, switch-primary

# Note

The caller must be an Alchemy task if task is NULL.

Assigning the same priority to a running or ready task moves it to the end of its priority group, thus causing a manual round-robin.

```
6.85.3.20 int rt task shadow ( RT TASK * task, const char * name, int prio, int mode )
```

Turn caller into a real-time task.

Extends the calling Linux task with Xenomai capabilities, with access to the full set of Xenomai real-time services. This service is typically used for turning the main() thread of an application process into a Xenomai-enabled task.

If *prio* is non-zero, the new task moves to Xenomai's real-time FIFO scheduling class, aka SCHED\_FIFO. If *prio* is zero, the task moves to the regular SCHED\_OTHER class.

Running Xenomai tasks with zero priority is useful for running non real-time processes which may invoke blocking real-time services, such as pending on a semaphore, reading from a message queue or a buffer, and so on.

Once shadowed with the Xenomai extension, the calling task returns and resumes execution normally from the call site.

#### **Parameters**

task	If non-NULL, the address of a task descriptor which can be later used to identify
	uniquely the task, upon success of this call. If NULL, no descriptor is returned.
name	An ASCII string standing for the symbolic name of the task. When non-NULL and
	non-empty, a copy of this string is used for indexing the task into the object registry.
prio	The base priority of the task. This value must be in the [0 99] range, where 0 is
	the lowest effective priority.
mode	The task shadowing mode. The following flags can be OR'ed into this bitmask:

- T\_LOCK causes the current task to lock the scheduler before returning to the caller, preventing all
  further involuntary task switches on the current CPU. A call to rt\_task\_set\_mode() from the current
  task is required to drop this lock.
- When running over the Cobalt core, T\_WARNSW causes the SIGDEBUG signal to be sent to the current task whenever it switches to the secondary mode. This feature is useful to detect unwanted migrations to the Linux domain. This flag has no effect over the Mercury core.

#### Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if prio is invalid.
- -ENOMEM is returned if the system fails to get memory from the main heap in order to create the task extension.
- -EEXIST is returned if the *name* is conflicting with an already registered task.
- -EBUSY is returned if the caller is already mapped to a Xenomai task context.
- -EPERM is returned if this service was called from an invalid context.

# Tags

pthread-only, switch-secondary

#### Side effects

Over the Cobalt core, the caller always returns from this service in primary mode.

### Note

Tasks can be referred to from multiple processes which all belong to the same Xenomai session.

### Examples:

rtcanrecv.c, and rtcansend.c.

References T\_LOCK, and T\_WARNSW.

6.85.3.21 int rt\_task\_sleep ( RTIME delay )

Delay the current real-time task (with relative delay).

This routine is a variant of rt\_task\_sleep\_until() accepting a relative timeout specification.

#### **Parameters**

delay	A relative delay expressed in clock ticks (see note). A zero delay causes this service
	to return immediately to the caller with a success status.

#### Returns

See rt task sleep until().

### Tags

xthread-only, switch-primary

### Note

The *delay* value is interpreted as a multiple of the Alchemy clock resolution (see –alchemy-clock-resolution option, defaults to 1 nanosecond).

### Examples:

cross-link.c, and rtcansend.c.

```
6.85.3.22 int rt_task_sleep_until ( RTIME date )
```

Delay the current real-time task (with absolute wakeup date).

Delay the execution of the calling task until a given date is reached. The caller is put to sleep, and does not consume any CPU time in such a state.

#### **Parameters**

date	An absolute date expressed in clock ticks, specifying a wakeup date (see note). As
	a special case, TM_INFINITE is an acceptable value that causes the caller to block
	indefinitely, until rt_task_unblock() is called against it. Otherwise, any wake up date
	in the past causes the task to return immediately.

### Returns

Zero is returned upon success. Otherwise:

- -EINTR is returned if rt\_task\_unblock() was called for the current task.
- -ETIMEDOUT is returned if date has already elapsed.
- -EPERM is returned if this service was called from an invalid context.

# Tags

xthread-only, switch-primary

### Note

The caller must be an Alchemy task if task is NULL.

The *date* value is interpreted as a multiple of the Alchemy clock resolution (see –alchemy-clock-resolution option, defaults to 1 nanosecond).

6.85.3.23 int rt\_task\_slice ( RT\_TASK \* task, RTIME quantum )

Set a task's round-robin quantum.

Set the time credit allotted to a task undergoing the round-robin scheduling. If *quantum* is non-zero, rt\_task\_slice() also refills the current quantum for the target task, otherwise, time-slicing is stopped for that task.

In other words, rt task slice() should be used to toggle round-robin scheduling for an Alchemy task.

#### **Parameters**

task	The task descriptor. If <i>task</i> is NULL, the time credit of the current task is changed.
	task must belong to the current process.
quantum	The round-robin quantum for the task expressed in clock ticks (see note).

#### Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if task is not a valid task descriptor, or if prio is invalid.
- -EPERM is returned if task is NULL and this service was called from an invalid context.

### Tags

thread-unrestricted, switch-primary

#### Note

The caller must be an Alchemy task if *task* is NULL.

The *quantum* value is interpreted as a multiple of the Alchemy clock resolution (see –alchemy-clock-resolution option, defaults to 1 nanosecond).

6.85.3.24 int rt\_task\_spawn ( RT\_TASK \* task, const char \* name, int stksize, int prio, int mode, void(\*)(void \*arg) entry, void \* arg )

Create and start a real-time task.

This service spawns a task by combining calls to rt\_task\_create() and rt\_task\_start() for the new task.

task	The address of a task descriptor which can be later used to identify uniquely the created object, upon success of this call.
name	An ASCII string standing for the symbolic name of the task. When non-NULL and non-empty, a copy of this string is used for indexing the created task into the object registry.
stksize	The size of the stack (in bytes) for the new task. If zero is passed, a system-dependent default size will be substituted.
prio	The base priority of the new task. This value must be in the [0 99] range, where 0 is the lowest effective priority.
mode	The task creation mode. See rt_task_create().
entry	The address of the task entry point.

arg A user-defined opaque argument entry will receive.

Returns

See rt\_task\_create().

Tags

thread-unrestricted, switch-secondary

Side effects

```
see rt_task_create().
```

References rt\_task\_create(), and rt\_task\_start().

```
6.85.3.25 int rt_task_start ( RT_TASK * task, void(*)(void *arg) entry, void * arg )
```

Start a real-time task.

This call starts execution of a task previously created by rt\_task\_create(). This service causes the started task to leave the initial dormant state.

#### **Parameters**

task	The task descriptor.
entry	The address of the task entry point.
arg	A user-defined opaque argument <i>entry</i> will receive.

#### Returns

Zero is returned upon success. Otherwise:

-EINVAL is returned if task is not a valid task descriptor.

Tags

thread-unrestricted, switch-primary

Note

Starting an already started task leads to a nop, returning a success status.

Examples:

cross-link.c.

Referenced by rt\_task\_spawn().

```
6.85.3.26 int rt_task_suspend ( RT_TASK * task )
```

Suspend a real-time task.

Forcibly suspend the execution of a task. This task will not be eligible for scheduling until it is explicitly resumed by a call to rt\_task\_resume(). In other words, the suspended state caused by a call to rt\_task\_suspend() is cumulative with respect to the delayed and blocked states caused by other services, and is managed separately from them.

A nesting count is maintained so that rt\_task\_suspend() and rt\_task\_resume() must be used in pairs.

Receiving a Linux signal causes the suspended task to resume immediately.

### **Parameters**

task | The task descriptor. If task is NULL, the current task is suspended.

#### Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if *task* is NULL but the caller is not a Xenomai task, or if *task* is non-NULL but not a valid task descriptor.
- -EINTR is returned if a Linux signal has been received by the caller if suspended.
- -EPERM is returned if task is NULL and this service was called from an invalid context.

### Tags

thread-unrestricted, switch-primary

#### Note

The caller must be an Alchemy task if *task* is NULL.

Blocked and suspended task states are cumulative. Therefore, suspending a task currently waiting on a synchronization object (e.g. semaphore, queue) holds its execution until it is resumed, despite the awaited resource may have been acquired, or a timeout has elapsed in the meantime.

```
6.85.3.27 int rt task unbind ( RT TASK * task )
```

Unbind from a task.

**Parameters** 

```
task The task descriptor.
```

This routine releases a previous binding to an Alchemy task. After this call has returned, the descriptor is no more valid for referencing this object.

### Tags

thread-unrestricted

```
6.85.3.28 int rt_task_unblock ( RT_TASK * task )
```

Unblock a real-time task.

Break the task out of any wait it is currently in. This call clears all delay and/or resource wait condition for the target task.

However, rt\_task\_unblock() does not resume a task which has been forcibly suspended by a previous call to rt\_task\_suspend(). If all suspensive conditions are gone, the task becomes eligible anew for scheduling.

**Parameters** 

task The task descriptor.
---------------------------

436 Module Documentation

#### Returns

Zero is returned upon success. Otherwise:

• -EINVAL is returned if task is not a valid task descriptor.

### Tags

unrestricted, switch-primary

```
6.85.3.29 int rt task wait period (unsigned long * overruns r)
```

Wait for the next periodic release point.

Delay the current task until the next periodic release point is reached. The periodic timer should have been previously started for *task* by a call to rt\_task\_set\_periodic().

### **Parameters**

overruns r	If non-NULL, overruns_r shall be a pointer to a memory location which will be written				
	with the count of pending overruns. This value is written to only when rt task-				
	, -				
	_wait_period() returns -ETIMEDOUT or success. The memory location remains				
	unmodified otherwise. If NULL, this count will not be returned.				

### Returns

Zero is returned upon success. If *overruns\_r* is non-NULL, zero is written to the pointed memory location. Otherwise:

- -EWOULDBLOCK is returned if rt\_task\_set\_periodic() was not called for the current task.
- -EINTR is returned if rt\_task\_unblock() was called for the waiting task before the next periodic release point was reached. In this case, the overrun counter is also cleared.
- -ETIMEDOUT is returned if a timer overrun occurred, which indicates that a previous release point was missed by the calling task. If *overruns\_r* is non-NULL, the count of pending overruns is written to the pointed memory location.
- -EPERM is returned if this service was called from an invalid context.

### Tags

xthread-only, switch-primary

### Note

If the current release point has already been reached at the time of the call, the current task immediately returns from this service with no delay.

### Examples:

cross-link.c.

```
6.85.3.30 int rt_task_yield ( void )
```

### Manual round-robin.

Move the current task to the end of its priority group, so that the next equal-priority task in ready state is switched in.

## Returns

Zero is returned upon success. Otherwise:

• -EPERM is returned if this service was called from an invalid context.

## Tags

xthread-only, switch-primary

Module Documentation

## 6.86 Timer management services

Services for reading and spinning on the hardware timer.

Collaboration diagram for Timer management services:



### **Data Structures**

• struct rt\_timer\_info

Timer status descriptor.

## **Typedefs**

438

typedef struct rt\_timer\_info RT\_TIMER\_INFO
 Timer status descriptor.

### **Functions**

static RTIME rt\_timer\_read (void)

Return the current system time.

SRTIME rt\_timer\_ns2ticks (SRTIME ns)

Convert nanoseconds to Alchemy clock ticks.

SRTIME rt\_timer\_ticks2ns (SRTIME ticks)

Convert Alchemy clock ticks to nanoseconds.

• void rt\_timer\_inquire (RT\_TIMER\_INFO \*info)

Inquire about the Alchemy clock.

void rt\_timer\_spin (RTIME ns)

Busy wait burning CPU cycles.

## 6.86.1 Detailed Description

Services for reading and spinning on the hardware timer.

### 6.86.2 Typedef Documentation

6.86.2.1 typedef struct rt\_timer\_info RT\_TIMER\_INFO

Timer status descriptor.

This structure reports information about the Alchemy clock, returned by a call to rt\_timer\_inquire().

### 6.86.3 Function Documentation

```
6.86.3.1 void rt_timer_inquire ( RT_TIMER_INFO * info )
```

Inquire about the Alchemy clock.

Return status information about the Alchemy clock.

**Parameters** 

info The address of a structure to fill with the clock information.

### Tags

### unrestricted

References rt timer info::date, and rt timer info::period.

```
6.86.3.2 SRTIME rt_timer_ns2ticks ( SRTIME ns )
```

Convert nanoseconds to Alchemy clock ticks.

Convert a count of nanoseconds to Alchemy clock ticks. This routine operates on signed nanosecond values. This is the converse call to rt\_timer\_ticks2ns().

**Parameters** 

ns The count of nanoseconds to convert.

#### Returns

The corresponding value expressed in clock ticks of the Alchemy clock. The resolution of the Alchemy clock can be set using the –alchemy-clock-resolution option when starting the application process (defaults to 1 nanosecond).

### Tags

#### unrestricted

### Examples:

cross-link.c, and rtcansend.c.

```
6.86.3.3 RTIME rt_timer_read ( void ) [inline], [static]
```

Return the current system time.

Return the current time maintained by the Xenomai core clock.

### Returns

The current time expressed in clock ticks (see note).

### Tags

### unrestricted

Note

The *time* value is a multiple of the Alchemy clock resolution (see –alchemy-clock-resolution option, defaults to 1 nanosecond).

### Examples:

cross-link.c.

6.86.3.4 void rt\_timer\_spin ( RTIME ns )

Busy wait burning CPU cycles.

Enter a busy waiting loop for a count of nanoseconds.

Since this service is always called with interrupts enabled, the caller might be preempted by other real-time activities, therefore the actual delay might be longer than specified.

**Parameters** 

ns The time to wait expressed in nanoseconds.

### Tags

unrestricted

6.86.3.5 SRTIME rt\_timer\_ticks2ns ( SRTIME ns )

Convert Alchemy clock ticks to nanoseconds.

Convert a count of Alchemy clock ticks to nanoseconds. This routine operates on signed nanosecond values. This is the converse call to rt\_timer\_ns2ticks().

Parameters

ns The count of nanoseconds to convert.

### Returns

The corresponding value expressed in nanoseconds. The resolution of the Alchemy clock can be set using the –alchemy-clock-resolution option when starting the application process (defaults to 1 nanosecond).

Tags

unrestricted

## 6.87 VxWorks® emulator

A VxWorks® emulation library on top of Xenomai.

A VxWorks® emulation library on top of Xenomai. The emulator mimicks the behavior described in the public documentation of the WIND 5.x API for the following class of services:

- taskLib, taskInfoLib, taskHookLib,
- semLib, msgQLib, wdLib, memPartLib
- intLib, tickLib, sysLib (partial)
- errnoLib, lstLib, kernelLib (partial)

442 Module Documentation

## 6.88 pSOS® emulator

A pSOS® emulation library on top of Xenomai.

A pSOS® emulation library on top of Xenomai. The emulator mimicks the behavior described in the public documentation of the pSOS 2.x API for the following class of services:

- Tasks, Events, Queues, Semaphores
- Partitions, Regions, Timers

6.89 Transition Kit 443

### 6.89 Transition Kit

A set of wrappers and services easing the transition from Xenomai 2.x to 3.x.

• int COMPAT\_\_rt\_task\_create (RT\_TASK \*task, const char \*name, int stksize, int prio, int mode)

Create a real-time task (compatibility service).

• int COMPAT\_\_rt\_task\_set\_periodic (RT\_TASK \*task, RTIME idate, RTIME period)

Make a real-time task periodic (compatibility service).

int COMPAT\_\_rt\_alarm\_create (RT\_ALARM \*alarm, const char \*name)

Create an alarm object (compatibility service).

int rt\_alarm\_wait (RT\_ALARM \*alarm)

Wait for the next alarm shot (compatibility service).

int COMPAT\_\_rt\_event\_create (RT\_EVENT \*event, const char \*name, unsigned long ivalue, int mode)

Create an event flag group.

- int COMPAT\_\_rt\_event\_signal (RT\_EVENT \*event, unsigned long mask)
   Signal an event.
- int COMPAT\_\_rt\_event\_clear (RT\_EVENT \*event, unsigned long mask, unsigned long \*mask\_r)
   Clear event flags.
- int pthread\_make\_periodic\_np (pthread\_t thread, struct timespec \*starttp, struct timespec \*periodtp)

Make a thread periodic (compatibility service).

int pthread\_wait\_np (unsigned long \*overruns\_r)

Wait for the next periodic release point (compatibility service)

### 6.89.1 Detailed Description

A set of wrappers and services easing the transition from Xenomai 2.x to 3.x. This interface provides a source compatibility layer for building applications based on the Xenomai 2.x *posix* and *native* APIs over Xenomai 3.x.

### 6.89.2 Function Documentation

```
6.89.2.1 int COMPAT__rt_alarm_create ( RT_ALARM * alarm, const char * name )
```

Create an alarm object (compatibility service).

This routine creates an object triggering an alarm routine at a specified time in the future. Alarms can be periodic or oneshot, depending on the reload interval value passed to rt\_alarm\_start(). A task can wait for timeouts using the rt\_alarm\_wait() service.

#### **Parameters**

alarm	The address of an alarm descriptor which can be later used to identify uniquely the				
	created object, upon success of this call.				
name	An ASCII string standing for the symbolic name of the alarm. When non-NULL and				
	non-empty, a copy of this string is used for indexing the created alarm into the object				
	registry.				

#### Returns

Zero is returned upon success. Otherwise:

- -ENOMEM is returned if the system fails to get memory from the local pool in order to create the alarm.
- -EEXIST is returned if the *name* is conflicting with an already registered alarm.
- -EPERM is returned if this service was called from an asynchronous context.

#### Tags

thread-unrestricted, switch-secondary

#### Note

Alarms are process-private objects and thus cannot be shared by multiple processes, even if they belong to the same Xenomai session.

**Deprecated** This is a compatibility service from the Transition Kit.

```
6.89.2.2 int COMPAT__rt_event_clear ( RT_EVENT * event, unsigned long mask, unsigned long * mask_r )
```

### Clear event flags.

This call is the legacy form of the rt\_event\_clear() service, using a long event mask. The new form uses a regular integer to hold the event mask instead.

#### **Parameters**

event	The event descriptor.
mask	The set of event flags to be cleared.
mask_r	If non-NULL, mask_r is the address of a memory location which will receive the
	previous value of the event flag group before the flags are cleared.

### Returns

Zero is returned upon success. Otherwise:

• -EINVAL is returned if event is not a valid event flag group descriptor.

### Tags

unrestricted, switch-primary

**Deprecated** This is a compatibility service from the Transition Kit.

```
6.89.2.3 int COMPAT__rt_event_create ( RT_EVENT * event, const char * name, unsigned long ivalue, int mode )
```

### Create an event flag group.

This call is the legacy form of the rt\_event\_create() service, using a long event mask. The new form uses a regular integer to hold the event mask instead.

6.89 Transition Kit 445

#### **Parameters**

event	The address of an event descriptor which can be later used to identify uniquely the					
	created object, upon success of this call.					
name	An ASCII string standing for the symbolic name of the event. When non-NULL and non-empty, a copy of this string is used for indexing the created event into the object registry.					
ivalue	The initial value of the group's event mask.					
mode	The event group creation mode. The following flags can be OR'ed into this bitmask:					

- EV\_FIFO makes tasks pend in FIFO order on the event flag group.
- EV PRIO makes tasks pend in priority order on the event flag group.

### Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if mode is invalid.
- -ENOMEM is returned if the system fails to get memory from the main heap in order to create the event flag group.
- -EEXIST is returned if the name is conflicting with an already registered event flag group.
- -EPERM is returned if this service was called from an asynchronous context.

### Tags

thread-unrestricted, switch-secondary

### Note

Event flag groups can be shared by multiple processes which belong to the same Xenomai session.

**Deprecated** This is a compatibility service from the Transition Kit.

```
6.89.2.4 int COMPAT__rt_event_signal ( RT_EVENT * event, unsigned long mask )
```

### Signal an event.

This call is the legacy form of the rt\_event\_signal() service, using a long event mask. The new form uses a regular integer to hold the event mask instead.

#### **Parameters**

event	The event descriptor.		
mask	The set of events to be posted.		

### Returns

Zero is returned upon success. Otherwise:

-EINVAL is returned if event is not an event flag group descriptor.

### Tags

unrestricted, switch-primary

**Deprecated** This is a compatibility service from the Transition Kit.

6.89.2.5 int COMPAT\_\_rt\_task\_create ( RT\_TASK \* task, const char \* name, int stksize, int prio, int mode )

Create a real-time task (compatibility service).

This service creates a task with access to the full set of Xenomai real-time services.

This service creates a task with access to the full set of Xenomai real-time services. If *prio* is non-zero, the new task belongs to Xenomai's real-time FIFO scheduling class, aka SCHED\_FIFO. If *prio* is zero, the task belongs to the regular SCHED\_OTHER class.

Creating tasks with zero priority is useful for running non real-time processes which may invoke blocking real-time services, such as pending on a semaphore, reading from a message queue or a buffer, and so on.

Once created, the task is left dormant until it is actually started by rt\_task\_start().

#### **Parameters**

task	The address of a task descriptor which can be later used to identify uniquely the created object, upon success of this call.					
name	An ASCII string standing for the symbolic name of the task. When non-NULL and					
	non-empty, a copy of this string is used for indexing the created task into the object					
	registry.					
	, ,					
stksize	The size of the stack (in bytes) for the new task. If zero is passed, a system-					
	dependent default size will be substituted.					
prio	The base priority of the new task. This value must be in the [0 99] range, where 0					
	is the lowest effective priority.					
mode	The task creation mode. The following flags can be OR'ed into this bitmask:					

- T\_FPU allows the task to use the FPU whenever available on the platform. This flag may be omitted, as it is automatically set when a FPU is present on the platform, cleared otherwise.
- T\_SUSP causes the task to start in suspended mode. In such a case, the thread will have to be explicitly resumed using the rt\_task\_resume() service for its execution to actually begin.
- T\_CPU(cpuid) makes the new task affine to CPU # cpuid. CPU identifiers range from 0 to 7 (inclusive).
- T\_JOINABLE allows another task to wait on the termination of the new task. rt\_task\_join() shall be called for this task to clean up any resources after its termination.

Passing T\_FPU|T\_CPU(1) in the *mode* parameter thus creates a task with FPU support enabled and which will be affine to CPU #1.

• When running over the Cobalt core, T\_WARNSW causes the SIGDEBUG signal to be sent to the current task whenever it switches to the secondary mode. This feature is useful to detect unwanted migrations to the Linux domain. This flag has no effect over the Mercury core.

### Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if either prio, mode or stksize are invalid.
- -ENOMEM is returned if the system fails to get memory from the main heap in order to create the task
- -EEXIST is returned if the name is conflicting with an already registered task.

### Tags

thread-unrestricted, switch-secondary

6.89 Transition Kit 447

#### Side effects

- calling rt\_task\_create() causes SCHED\_FIFO tasks to switch to secondary mode.
- members of Xenomai's SCHED\_FIFO class running in the primary domain have utmost priority over all Linux activities in the system, including Linux interrupt handlers.

### Note

Tasks can be referred to from multiple processes which all belong to the same Xenomai session.

**Deprecated** This is a compatibility service from the Transition Kit.

```
6.89.2.6 int COMPAT rt task set periodic ( RT TASK * task, RTIME idate, RTIME period )
```

Make a real-time task periodic (compatibility service).

Make a task periodic by programing its first release point and its period in the processor time line. *task* should then call rt\_task\_wait\_period() to sleep until the next periodic release point in the processor timeline is reached.

#### **Parameters**

task	The task descriptor. If task is NULL, the current task is made periodic. task must			
	belong the current process.			
idate	The initial (absolute) date of the first release point, expressed in clock ticks (see			
	note). If idate is equal to TM_NOW, the current system date is used. Otherwise			
	task is NULL or equal to rt_task_self(), the caller is delayed until idate has elapsed.			
period	The period of the task, expressed in clock ticks (see note). Passing TM_INFINITE			
	stops the task's periodic timer if enabled, then returns successfully.			

#### Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if *task* is NULL but the caller is not a Xenomai task, or if *task* is non-NULL but not a valid task descriptor.
- -ETIMEDOUT is returned if idate is different from TM INFINITE and represents a date in the past.

### Tags

thread-unrestricted, switch-primary

### Note

The caller must be an Alchemy task if task is NULL.

Unlike the original Xenomai 2.x call, this emulation delays the caller until *idate* has elapsed only if *task* is NULL or equal to rt\_task\_self().

#### Side effects

Over Cobalt, -EINVAL is returned if *period* is different from TM\_INFINITE but shorter than the user scheduling latency value for the target system, as displayed by /proc/xenomai/latency.

Note

The *idate* and *period* values are interpreted as a multiple of the Alchemy clock resolution (see –alchemy-clock-resolution option, defaults to 1 nanosecond).

**Deprecated** This is a compatibility service from the Transition Kit.

6.89.2.7 int pthread\_make\_periodic\_np ( pthread\_t thread, struct timespec \* starttp, struct timespec \* periodtp )

Make a thread periodic (compatibility service).

This service makes the POSIX thread periodic.

#### **Parameters**

thread	thread to arm a periodic timer for.
starttp	start time, expressed as an absolute value of the CLOCK_REALTIME clock.
periodtp	period, expressed as a time interval.

#### Returns

0 on success;

an error number if:

- ESRCH, thread is invalid.
- ETIMEDOUT, the start time has already passed.
- EPERM, the caller is not a Xenomai thread.
- EINVAL, thread does not refer to the current thread.

#### Note

Unlike the original Xenomai 2.x call, this emulation does not delay the caller waiting for the first periodic release point. In addition, *thread* must be equal to pthread self().

Deprecated This service is a non-portable extension of the Xenomai 2.x POSIX interface, not available with Xenomai 3.x. Instead, Cobalt-based applications should set up a periodic timer using the timer\_create(), timer\_settime() call pair, then wait for release points via sigwaitinfo(). Overruns can be detected by looking at the siginfo.si\_overrun field. Alternatively, applications may obtain a file descriptor referring to a Cobalt timer via the timerfd() call, and read()

References timer create(), and timer settime().

from it to wait for timeouts.

6.89.2.8 int pthread\_wait\_np ( unsigned long \* overruns\_r )

Wait for the next periodic release point (compatibility service)

Delay the current thread until the next periodic release point is reached. The periodic timer should have been previously started for *thread* by a call to <a href="mailto:pthread\_make\_periodic\_np">pthread\_make\_periodic\_np</a>().

Parameters

6.89 Transition Kit 449

overruns_r	If non-NULL, <i>overruns_r</i> shall be a pointer to a memory location which will be written				
	with the count of pending overruns. This value is written to only when pthread_wait-				
	_np() returns ETIMEDOUT or success. The memory location remains unmodified				
	otherwise. If NULL, this count will not be returned.				

#### Returns

Zero is returned upon success. If *overruns\_r* is non-NULL, zero is written to the pointed memory location. Otherwise:

- EWOULDBLOCK is returned if pthread\_make\_periodic\_np() was not called for the current thread.
- EINTR is returned if thread was interrupted by a signal before the next periodic release point was reached.
- ETIMEDOUT is returned if a timer overrun occurred, which indicates that a previous release point was missed by the calling thread. If *overruns\_r* is non-NULL, the count of pending overruns is written to the pointed memory location.
- EPERM is returned if this service was called from an invalid context.

### Note

If the current release point has already been reached at the time of the call, the current thread immediately returns from this service with no delay.

Deprecated This service is a non-portable extension of the Xenomai 2.x POSIX interface, not available with Xenomai 3.x. Instead, Cobalt-based applications should set up a periodic timer using the timer\_create(), timer\_settime() call pair, then wait for release points via sigwaitinfo(). Overruns can be detected by looking at the siginfo.si\_overrun field. Alternatively, applications may obtain a file descriptor referring to a Cobalt timer via the timerfd() call, and read() from it to wait for timeouts.

```
6.89.2.9 int rt_alarm_wait ( RT_ALARM * alarm )
```

Wait for the next alarm shot (compatibility service).

This service allows the current task to suspend execution until the specified alarm triggers. The priority of the current task is raised above all other tasks - except those also undergoing an alarm wait.

### Returns

Zero is returned upon success, after the alarm timed out. Otherwise:

- -EINVAL is returned if alarm is not a valid alarm descriptor.
- -EPERM is returned if this service was called from an invalid context.
- -EINTR is returned if rt\_task\_unblock() was called for the current task before the request is satisfied.
- -EIDRM is returned if *alarm* is deleted while the caller was sleeping on it. In such a case, *alarm* is no more valid upon return of this service.

### Tags

xthread-only, switch-primary

**Deprecated** This is a compatibility service from the Transition Kit.

Mod	عاديا	Doc	ıımaı	ntatio	n
IVIUU	ıııı		.,,,,	Hallo	

# Chapter 7

# **Data Structure Documentation**

## 7.1 a4l\_channel Struct Reference

Structure describing some channel's characteristics.

## Data Fields

- unsigned long flags
- unsigned long nb\_bits

## 7.1.1 Detailed Description

Structure describing some channel's characteristics.

### 7.1.2 Field Documentation

7.1.2.1 unsigned long a4l\_channel::flags

Channel flags to define the reference.

7.1.2.2 unsigned long a4l\_channel::nb\_bits

Channel resolution.

Referenced by a4l\_get\_chan().


The documentation for this struct was generated from the following file:

• include/cobalt/kernel/rtdm/analogy/channel\_range.h

## 7.2 a4l\_channels\_desc Struct Reference

Structure describing a channels set.

Collaboration diagram for a4l\_channels\_desc:

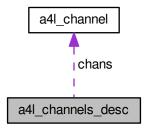

### Data Fields

- unsigned long mode
- unsigned long length
- struct a4l\_channel chans []

## 7.2.1 Detailed Description

Structure describing a channels set.

### 7.2.2 Field Documentation

7.2.2.1 struct a4l\_channel a4l\_channels\_desc::chans[]

Channels tab

Referenced by a4l\_get\_chan().

7.2.2.2 unsigned long a4l channels desc::length

Channels count

7.2.2.3 unsigned long a4l\_channels\_desc::mode

Declaration mode (global or per channel)

Referenced by a4l\_get\_chan().

The documentation for this struct was generated from the following file:

• include/cobalt/kernel/rtdm/analogy/channel\_range.h

## 7.3 a4l cmd desc Struct Reference

Structure describing the asynchronous instruction.

### Data Fields

unsigned char idx\_subd

Subdevice to which the command will be applied.

unsigned long flags

Command flags.

unsigned int start\_src

Start trigger type.

unsigned int start\_arg

Start trigger argument.

• unsigned int scan\_begin\_src

Scan begin trigger type.

unsigned int scan\_begin\_arg

Scan begin trigger argument.

unsigned int convert\_src

Convert trigger type.

unsigned int convert\_arg

Convert trigger argument.

unsigned int scan\_end\_src

Scan end trigger type.

unsigned int scan\_end\_arg

Scan end trigger argument.

unsigned int stop\_src

Stop trigger type.

unsigned int stop\_arg

Stop trigger argument.

unsigned char nb\_chan

Count of channels related with the command.

unsigned int \* chan descs

Tab containing channels descriptors.

• unsigned int data len

Driver specific buffer size.

sampl\_t \* data

Driver specific buffer pointer.

## 7.3.1 Detailed Description

Structure describing the asynchronous instruction.

See Also

a4l\_snd\_command()

### 7.3.2 Field Documentation

### 7.3.2.1 unsigned char a4l\_cmd\_desc::idx\_subd

Subdevice to which the command will be applied.

The documentation for this struct was generated from the following file:

• include/rtdm/uapi/analogy.h

## 7.4 a4l\_descriptor Struct Reference

Structure containing device-information useful to users.

### Data Fields

• char board\_name [A4L\_NAMELEN]

Board name.

• char driver\_name [A4L\_NAMELEN]

Driver name.

• int nb\_subd

Subdevices count.

int idx\_read\_subd

Input subdevice index.

int idx\_write\_subd

Output subdevice index.

int fd

File descriptor.

unsigned int magic

Opaque field.

• int sbsize

Data buffer size.

void \* sbdata

Data buffer pointer.

### 7.4.1 Detailed Description

Structure containing device-information useful to users.

See Also

a4l\_get\_desc()

### 7.4.2 Field Documentation

7.4.2.1 char a4l\_descriptor::board\_name[A4L\_NAMELEN]

Board name.

7.4.2.2 char a4l\_descriptor::driver\_name[A4L\_NAMELEN]

Driver name.

7.4.2.3 int a4l\_descriptor::fd

### File descriptor.

Referenced by a4l\_async\_read(), a4l\_async\_write(), a4l\_close(), a4l\_fill\_desc(), a4l\_get\_bufsize(), a4l\_mark\_bufrw(), a4l\_mmap(), a4l\_open(), a4l\_poll(), a4l\_set\_bufsize(), a4l\_snd\_cancel(), a4l\_snd\_command(), a4l\_snd\_insn(), and a4l\_snd\_insn().

7.4.2.4 int a4l\_descriptor::idx\_read\_subd

Input subdevice index.

Referenced by a4l\_async\_read().

7.4.2.5 int a4l\_descriptor::idx\_write\_subd

Output subdevice index.

Referenced by a4l\_async\_write().

7.4.2.6 unsigned int a4l\_descriptor::magic

Opaque field.

Referenced by a4l\_fill\_desc(), a4l\_find\_range(), a4l\_get\_chinfo(), a4l\_get\_rnginfo(), a4l\_get\_subdinfo(), a4l\_get\_subdinfo(), a4l\_sys\_desc().

7.4.2.7 int a4l\_descriptor::nb\_subd

Subdevices count.

Referenced by a4l\_get\_chinfo(), a4l\_get\_rnginfo(), and a4l\_get\_subdinfo().

7.4.2.8 void\* a4l descriptor::sbdata

Data buffer pointer.

Referenced by a4l\_get\_chinfo(), a4l\_get\_rnginfo(), a4l\_get\_subdinfo(), and a4l\_sys\_desc().

7.4.2.9 int a4l descriptor::sbsize

Data buffer size.

Referenced by a4l sys desc().

The documentation for this struct was generated from the following file:

• include/rtdm/analogy.h

## 7.5 a4l driver Struct Reference

Structure containing driver declaration data.

**Data Fields** 

struct list head list

List stuff.

struct module \* owner

Pointer to module containing the code.

unsigned int flags

Type / status driver's flags.

```
• char * board_name
```

Board name.

• char \* driver\_name

driver name

int privdata\_size

Size of the driver's private data.

• int(\* attach )(struct a4l\_device \*, struct a4l\_link\_desc \*)

Attach procedure.

int(\* detach )(struct a4l\_device \*)

Detach procedure.

## 7.5.1 Detailed Description

Structure containing driver declaration data.

See Also

```
rt_task_inquire()
```

The documentation for this struct was generated from the following file:

• include/cobalt/kernel/rtdm/analogy/driver.h

## 7.6 a4l\_instruction Struct Reference

Structure describing the synchronous instruction.

### Data Fields

• unsigned int type

Instruction type.

unsigned int idx\_subd

Subdevice to which the instruction will be applied.

unsigned int chan\_desc

Channel descriptor.

unsigned int data size

Size of the intruction data.

• void \* data

Instruction data.

## 7.6.1 Detailed Description

Structure describing the synchronous instruction.

See Also

```
a4l_snd_insn()
```

### 7.6.2 Field Documentation

### 7.6.2.1 unsigned int a4l\_instruction::idx\_subd

Subdevice to which the instruction will be applied.


The documentation for this struct was generated from the following file:

• include/rtdm/uapi/analogy.h

## 7.7 a4l\_instruction\_list Struct Reference

Structure describing the list of synchronous instructions.

Collaboration diagram for a4l\_instruction\_list:

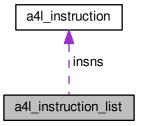

## Data Fields

- unsigned int count
  - Instructions count.
- a4l\_insn\_t \* insns

Tab containing the instructions pointers.

## 7.7.1 Detailed Description

Structure describing the list of synchronous instructions.

See Also

a4l\_snd\_insnlist()

The documentation for this struct was generated from the following file:

• include/rtdm/uapi/analogy.h

## 7.8 a4l\_range Struct Reference

Structure describing a (unique) range.

## Data Fields

- long min
- long max
- unsigned long flags

## 7.8.1 Detailed Description

Structure describing a (unique) range.

### 7.8.2 Field Documentation

7.8.2.1 unsigned long a4l\_range::flags

Range flags (unit, etc.)

7.8.2.2 long a4l\_range::max

Maximal falue

7.8.2.3 long a4l\_range::min

Minimal value


The documentation for this struct was generated from the following file:

• include/cobalt/kernel/rtdm/analogy/channel\_range.h

## 7.9 a4l\_subdevice Struct Reference

Structure describing the subdevice.

Collaboration diagram for a4l\_subdevice:

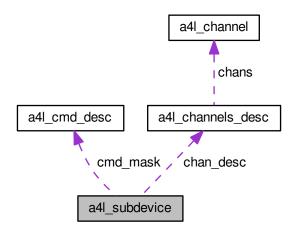

### Data Fields

struct list\_head list

List stuff.

struct a4l\_device \* dev

Containing device.

• unsigned int idx

Subdevice index.

struct a4l\_buffer \* buf

Linked buffer.

unsigned long status

Subdevice's status.

• unsigned long flags

Type flags.

struct a4l\_channels\_desc \* chan\_desc

Tab of channels descriptors pointers.

struct a4l\_rngdesc \* rng\_desc

Tab of ranges descriptors pointers.

struct a4l\_cmd\_desc \* cmd\_mask

Command capabilities mask.

• int(\* insn\_read )(struct a4l\_subdevice \*, struct a4l\_kernel\_instruction \*)

Callback for the instruction "read".

• int(\* insn\_write )(struct a4l\_subdevice \*, struct a4l\_kernel\_instruction \*)

Callback for the instruction "write".

• int(\* insn\_bits )(struct a4l\_subdevice \*, struct a4l\_kernel\_instruction \*)

Callback for the instruction "bits".

int(\* insn\_config )(struct a4l\_subdevice \*, struct a4l\_kernel\_instruction \*)
 Callback for the configuration instruction.

int(\* do\_cmd )(struct a4l\_subdevice \*, struct a4l\_cmd\_desc \*)

Callback for command handling.

• int(\* do\_cmdtest )(struct a4l\_subdevice \*, struct a4l\_cmd\_desc \*)

Callback for command checking.

void(\* cancel )(struct a4l\_subdevice \*)

Callback for asynchronous transfer cancellation.

void(\* munge )(struct a4l\_subdevice \*, void \*, unsigned long)

Callback for munge operation.

int(\* trigger )(struct a4l\_subdevice \*, lsampl\_t)

Callback for trigger operation.

• char priv [0]

Private data.

### 7.9.1 Detailed Description

Structure describing the subdevice.

See Also

a4l add subd()

The documentation for this struct was generated from the following file:

• include/cobalt/kernel/rtdm/analogy/subdevice.h

## 7.10 atomic\_t Struct Reference

Copyright © 2011 Gilles Chanteperdrix gilles.chanteperdrix@xenomai.org.

### 7.10.1 Detailed Description

Copyright © 2011 Gilles Chanteperdrix gilles.chanteperdrix@xenomai.org.

Copyright © 2013 Philippe Gerum rpm@xenomai.org.

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA.


The documentation for this struct was generated from the following file:

• include/boilerplate/atomic.h

## 7.11 can\_bittime Struct Reference

Custom CAN bit-time definition.

Collaboration diagram for can\_bittime:

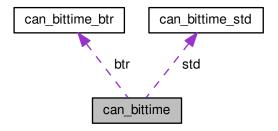

## Data Fields

- can\_bittime\_type\_t type
  - Type of bit-time definition.
- struct can\_bittime\_std std
  - Standard bit-time.
- struct can\_bittime\_btr btr

Hardware-spcific BTR bit-time.

## 7.11.1 Detailed Description

Custom CAN bit-time definition.

Examples:

rtcanconfig.c.

The documentation for this struct was generated from the following file:

• include/rtdm/uapi/can.h

# 7.12 can\_bittime\_btr Struct Reference

Hardware-specific BTR bit-times.

## Data Fields

- uint8\_t btr0
  - Bus timing register 0.
- uint8\_t btr1

Bus timing register 1.

## 7.12.1 Detailed Description

Hardware-specific BTR bit-times.

The documentation for this struct was generated from the following file:

• include/rtdm/uapi/can.h

## 7.13 can bittime std Struct Reference

Standard bit-time parameters according to Bosch.

### Data Fields

```
• uint32_t brp
```

Baud rate prescaler.

uint8\_t prop\_seg

from 1 to 8

uint8\_t phase\_seg1

from 1 to 8

uint8\_t phase\_seg2

from 1 to 8

• uint8\_t sjw:7

from 1 to 4

• uint8\_t sam:1

1 - enable triple sampling

## 7.13.1 Detailed Description

Standard bit-time parameters according to Bosch.

The documentation for this struct was generated from the following file:

• include/rtdm/uapi/can.h

## 7.14 can filter Struct Reference

Filter for reception of CAN messages.

### Data Fields

• uint32 t can id

CAN ID which must match with incoming IDs after passing the mask.

uint32\_t can\_mask

Mask which is applied to incoming IDs.

### 7.14.1 Detailed Description

Filter for reception of CAN messages.

This filter works as follows: A received CAN ID is AND'ed bitwise with can\_mask and then compared to can\_id. This also includes the CAN\_EFF\_FLAG and CAN\_RTR\_FLAG of CAN\_xxx\_FLAG. If this comparison is true, the message will be received by the socket. The logic can be inverted with the can\_id flag CAN\_INV\_FILTER:

```
if (can_id & CAN_INV_FILTER) {
   if ((received_can_id & can_mask) != (can_id & ~CAN_INV_FILTER))
      accept-message;
} else {
   if ((received_can_id & can_mask) == can_id)
      accept-message;
}
```

Multiple filters can be arranged in a filter list and set with Sockopts. If one of these filters matches a CAN ID upon reception of a CAN frame, this frame is accepted.

Examples:

can-rtt.c, and rtcanrecv.c.

### 7.14.2 Field Documentation

```
7.14.2.1 uint32_t can_filter::can_id
```

CAN ID which must match with incoming IDs after passing the mask.

The filter logic can be inverted with the flag CAN\_INV\_FILTER.

Examples:

rtcanrecv.c.

```
7.14.2.2 uint32_t can_filter::can_mask
```

Mask which is applied to incoming IDs.

See CAN ID masks if exactly one CAN ID should come through.

The documentation for this struct was generated from the following file:

include/rtdm/uapi/can.h

## 7.15 can frame Struct Reference

Raw CAN frame.

**Public Member Functions** 

uint8\_t data[8] \_\_attribute\_\_ ((aligned(8)))
 Payload data bytes.

### Data Fields

can\_id\_t can\_id

CAN ID of the frame.

• uint8\_t can\_dlc

Size of the payload in bytes.

### 7.15.1 Detailed Description

Raw CAN frame.

Central structure for receiving and sending CAN frames.

### Examples:

can-rtt.c, rtcanrecv.c, and rtcansend.c.

### 7.15.2 Field Documentation

```
7.15.2.1 can_id_t can_frame::can_id
```

CAN ID of the frame.

See CAN ID flags for special bits.

Examples:

can-rtt.c.

The documentation for this struct was generated from the following file:

• include/rtdm/uapi/can.h

## 7.16 RT\_ALARM\_INFO Struct Reference

Alarm status descriptor.

### Data Fields

• unsigned long expiries

Number of past expiries.

char name [XNOBJECT\_NAME\_LEN]

Name of alarm object.

int active

Active flag.

### 7.16.1 Detailed Description

Alarm status descriptor.

This structure reports various static and runtime information about a real-time alarm, returned by a call to rt\_alarm\_inquire().

The documentation for this struct was generated from the following file:

include/alchemy/alarm.h

## 7.17 RT\_BUFFER\_INFO Struct Reference

Buffer status descriptor.

### Data Fields

• int iwaiters

Number of tasks waiting on the read side of the buffer for input data.

int owaiters

Number of tasks waiting on the write side of the buffer for sending out data.

• size\_t totalmem

Overall size of buffer (in bytes).

size\_t availmem

Amount of memory currently available for holding more data.

• char name [XNOBJECT\_NAME\_LEN]

Name of the buffer.

### 7.17.1 Detailed Description

Buffer status descriptor.

This structure reports various static and runtime information about a real-time buffer, returned by a call to rt\_buffer\_inquire().

The documentation for this struct was generated from the following file:

include/alchemy/buffer.h

## 7.18 RT\_COND\_INFO Struct Reference

Condition variable status descriptor.

### Data Fields

char name [XNOBJECT\_NAME\_LEN]

Name of condition variable.

### 7.18.1 Detailed Description

Condition variable status descriptor.

This structure reports various static and runtime information about a condition variable, returned by a call to rt\_cond\_inquire().

The documentation for this struct was generated from the following file:

include/alchemy/cond.h

## 7.19 RT\_EVENT\_INFO Struct Reference

Event status descriptor.

### Data Fields

unsigned int value

Current value of the event flag group.

int nwaiters

Number of tasks currently waiting for events.

• char name [XNOBJECT\_NAME\_LEN]

Name of event flag group.

### 7.19.1 Detailed Description

Event status descriptor.

This structure reports various static and runtime information about an event flag group, returned by a call to rt\_event\_inquire().

The documentation for this struct was generated from the following file:

• include/alchemy/event.h

## 7.20 RT HEAP INFO Struct Reference

Heap status descriptor.

### Data Fields

• int nwaiters

Number of tasks waiting for available memory in rt\_heap\_alloc().

• int mode

Creation mode flags as given to rt\_heap\_create().

size\_t heapsize

Overall size of heap (in bytes).

size\_t usablemem

Maximum amount of memory available from the heap.

• size t usedmem

Amount of heap memory currently consumed.

char name [XNOBJECT\_NAME\_LEN]

Name of heap.

## 7.20.1 Detailed Description

Heap status descriptor.

This structure reports various static and runtime information about a real-time heap, returned by a call to rt\_heap\_inquire().

### 7.20.2 Field Documentation

### 7.20.2.1 size\_t RT\_HEAP\_INFO::usablemem

Maximum amount of memory available from the heap.

This value accounts for the overhead of internal data structures required to maintain the heap.

Referenced by rt\_heap\_inquire().

The documentation for this struct was generated from the following file:

• include/alchemy/heap.h

## 7.21 RT MUTEX INFO Struct Reference

Mutex status descriptor.

### Data Fields

RT\_TASK owner

Current mutex owner, or null if unlocked.

• char name [XNOBJECT\_NAME\_LEN]

Name of mutex.

### 7.21.1 Detailed Description

Mutex status descriptor.

This structure reports various static and runtime information about a mutex, returned by a call to rt\_mutex\_inquire().

### 7.21.2 Field Documentation

### 7.21.2.1 RT\_TASK RT\_MUTEX\_INFO::owner

Current mutex owner, or null if unlocked.

This information is in essence transient, and may not be valid anymore once used by the caller.

Referenced by rt\_mutex\_inquire().

The documentation for this struct was generated from the following file:

• include/alchemy/mutex.h

## 7.22 RT\_QUEUE\_INFO Struct Reference

Queue status descriptor.

### Data Fields

int nwaiters

Number of tasks currently waiting on the queue for messages.

int nmessages

Number of messages pending in queue.

int mode

Queue mode bits, as given to rt queue create().

size\_t qlimit

Maximum number of messages in queue, zero if unlimited.

size\_t poolsize

Size of memory pool for holding message buffers (in bytes).

size\_t usedmem

Amount of memory consumed from the buffer pool.

• char name [XNOBJECT\_NAME\_LEN]

Name of message queue.

### 7.22.1 Detailed Description

Queue status descriptor.

This structure reports various static and runtime information about a real-time queue, returned by a call to rt\_queue\_inquire().

The documentation for this struct was generated from the following file:

• include/alchemy/queue.h

## 7.23 RT SEM INFO Struct Reference

Semaphore status descriptor.

### Data Fields

• unsigned long count

Current semaphore value.

int nwaiters

Number of tasks waiting on the semaphore.

char name [XNOBJECT\_NAME\_LEN]

Name of semaphore.

### 7.23.1 Detailed Description

Semaphore status descriptor.

This structure reports various static and runtime information about a semaphore, returned by a call to rt\_sem\_inquire().

The documentation for this struct was generated from the following file:

• include/alchemy/sem.h

## 7.24 RT\_TASK\_INFO Struct Reference

Task status descriptor.

### Data Fields

• int prio

Task priority.

struct threadobj\_stat stat

Task status.

char name [XNOBJECT\_NAME\_LEN]

Name of task.

pid\_t pid

Host pid.

### 7.24.1 Detailed Description

Task status descriptor.

This structure reports various static and runtime information about a real-time task, returned by a call to rt\_task\_inquire().

The documentation for this struct was generated from the following file:

include/alchemy/task.h

## 7.25 rt timer info Struct Reference

Timer status descriptor.

### Data Fields

RTIME period

Clock resolution in nanoseconds.

RTIME date

Current monotonic date expressed in clock ticks.

### 7.25.1 Detailed Description

Timer status descriptor.

This structure reports information about the Alchemy clock, returned by a call to rt\_timer\_inquire().

### 7.25.2 Field Documentation

### 7.25.2.1 RTIME rt\_timer\_info::date

Current monotonic date expressed in clock ticks.

The duration of a tick depends on the Alchemy clock resolution for the process (see –alchemy-clock-resolution option, defaults to 1 nanosecond).

Referenced by rt\_timer\_inquire().


The documentation for this struct was generated from the following file:

• include/alchemy/timer.h

## 7.26 rtdm\_dev\_context Struct Reference

Device context.

Collaboration diagram for rtdm\_dev\_context:

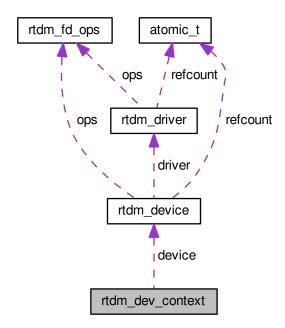

### Data Fields

- struct rtdm\_device \* device
  - Set of active device operation handlers.
- char dev\_private [0]

Begin of driver defined context data structure.

## 7.26.1 Detailed Description

### Device context.

A device context structure is associated with every open device instance. RTDM takes care of its creation and destruction and passes it to the operation handlers when being invoked.

Drivers can attach arbitrary data immediately after the official structure. The size of this data is provided via <a href="rtdm\_driver.context\_size">rtdm\_driver.context\_size</a> during device registration.

# 7.26.2 Field Documentation

# 7.26.2.1 struct **rtdm\_device**\* rtdm\_dev\_context::device

Set of active device operation handlers.

Reference to owning device

Referenced by rtdm\_fd\_device().


The documentation for this struct was generated from the following file:

• include/cobalt/kernel/rtdm/driver.h

# 7.27 rtdm\_device Struct Reference

RTDM device.

Collaboration diagram for rtdm\_device:

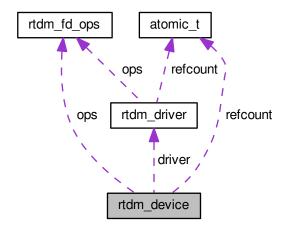

# Data Fields

• struct rtdm\_driver \* driver

Device driver.

void \* device\_data

Driver definable device data.

• const char \* label

Device label template for composing the device name.

int minor

Minor number of the device.

struct {};

Reserved area.

# 7.27.1 Detailed Description

RTDM device.

This descriptor describes a RTDM device instance. The structure holds runtime data, therefore it must reside in writable memory.

### 7.27.2 Field Documentation

7.27.2.1 struct { ... }

Reserved area.

7.27.2.2 struct rtdm\_driver\* rtdm\_device::driver

Device driver.

Referenced by rtdm\_dev\_register(), rtdm\_dev\_unregister(), udd\_get\_device(), and udd\_register\_device().

7.27.2.3 const char\* rtdm device::label

Device label template for composing the device name.

A limited printf-like format string is assumed, with a provision for replacing the first d/i placeholder found in the string by the device minor number. It is up to the driver to actually mention this placeholder or not, depending on the naming convention for its devices. For named devices, the corresponding device node will automatically appear in the /dev/rtdm hierarchy with hotplug-enabled device filesystems (DEVTMPF-S).

Referenced by rtdm\_dev\_register(), and udd\_register\_device().

7.27.2.4 int rtdm\_device::minor

Minor number of the device.

If RTDM\_FIXED\_MINOR is present in the driver flags, the value stored in this field is used verbatim by <a href="rtdm\_dev\_register">rtdm\_dev\_register</a>(). Otherwise, the RTDM core automatically assigns minor numbers to all devices managed by the driver referred to by <a href="rtd">driver</a>, in order of registration, storing the resulting values into this field.

Device nodes created for named devices in the Linux /dev hierarchy are assigned this minor number.

The minor number of the current device handling an I/O request can be retreived by a call to rtdm\_fd\_-minor().

Referenced by rtdm dev register().

The documentation for this struct was generated from the following file:

• include/cobalt/kernel/rtdm/driver.h

# 7.28 rtdm device info Struct Reference

Device information.

int device\_flags

Device flags, see Device Flags for details.

• int device class

Device class ID, see RTDM\_CLASS\_xxx.

int device\_sub\_class

Device sub-class, either RTDM\_SUBCLASS\_GENERIC or a RTDM\_SUBCLASS\_xxx definition of the related Device Profile.

• int profile\_version

Supported device profile version.

# 7.28.1 Detailed Description

Device information.


The documentation for this struct was generated from the following file:

• include/rtdm/uapi/rtdm.h

# 7.29 rtdm\_driver Struct Reference

RTDM driver.

Collaboration diagram for rtdm\_driver:

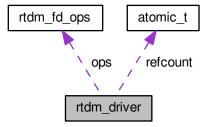

# Data Fields

struct rtdm\_profile\_info profile\_info

Class profile information.

int device flags

Device flags, see Device Flags for details.

• size\_t context\_size

Size of driver defined appendix to struct rtdm\_dev\_context.

int protocol family

Protocol device identification: protocol family (PF\_xxx)

• int socket\_type

Protocol device identification: socket type (SOCK\_xxx)

struct rtdm\_fd\_ops ops

I/O operation handlers.

• int device\_count

Count of devices this driver manages.

```
struct {};
```

Reserved area.

# 7.29.1 Detailed Description

#### RTDM driver.

This descriptor describes a RTDM device driver. The structure holds runtime data, therefore it must reside in writable memory.

### 7.29.2 Field Documentation

```
7.29.2.1 int rtdm_driver::device_count
```

Count of devices this driver manages.

This value is used to allocate a chrdev region for named devices.

Referenced by rtdm dev register(), and udd register device().

```
7.29.2.2 int rtdm_driver::device_flags
```

Device flags, see Device Flags for details.

Referenced by rtdm dev register(), rtdm dev unregister(), and udd register device().

```
7.29.2.3 struct rtdm_profile_info rtdm_driver::profile_info
```

Class profile information.

The RTDM PROFILE INFO() macro must be used for filling up this field.

Referenced by udd\_get\_device(), and udd\_register\_device().

The documentation for this struct was generated from the following file:

• include/cobalt/kernel/rtdm/driver.h

# 7.30 rtdm\_fd\_ops Struct Reference

RTDM file operation descriptor.

# Data Fields

int(\* open )(struct rtdm\_fd \*fd, int oflags)
 See rtdm\_open\_handler().

• int(\* socket )(struct rtdm\_fd \*fd, int protocol)

See rtdm socket handler().

void(\* close )(struct rtdm\_fd \*fd)

See rtdm\_close\_handler().

int(\* ioctl\_rt )(struct rtdm\_fd \*fd, unsigned int request, void \_\_user \*arg)

See rtdm ioctl handler().

int(\* ioctl\_nrt )(struct rtdm\_fd \*fd, unsigned int request, void \_\_user \*arg)

See rtdm ioctl handler().

ssize\_t(\* read\_rt )(struct rtdm\_fd \*fd, void \_\_user \*buf, size\_t size)

See rtdm read handler().

• ssize\_t(\* read\_nrt )(struct rtdm\_fd \*fd, void \_\_user \*buf, size\_t size)

See rtdm read handler().

• ssize\_t(\* write\_rt )(struct rtdm\_fd \*fd, const void \_\_user \*buf, size\_t size)

See rtdm write handler().

ssize\_t(\* write\_nrt )(struct rtdm\_fd \*fd, const void \_\_user \*buf, size\_t size)

See rtdm\_write\_handler().

ssize t(\* recvmsg rt )(struct rtdm fd \*fd, struct msghdr \*msg, int flags)

See rtdm recvmsg handler().

ssize t(\* recvmsg nrt )(struct rtdm fd \*fd, struct msghdr \*msg, int flags)

See rtdm recvmsg handler().

ssize\_t(\* sendmsg\_rt )(struct rtdm\_fd \*fd, const struct msghdr \*msg, int flags)

See rtdm sendmsg handler().

ssize t(\* sendmsg nrt )(struct rtdm fd \*fd, const struct msghdr \*msg, int flags)

See rtdm sendmsg handler().

• int(\* select )(struct rtdm\_fd \*fd, struct xnselector \*selector, unsigned int type, unsigned int index)

See rtdm\_select\_handler().

int(\* mmap )(struct rtdm\_fd \*fd, struct vm\_area\_struct \*vma)

See rtdm mmap handler().

 unsigned long(\* get\_unmapped\_area )(struct rtdm\_fd \*fd, unsigned long len, unsigned long pgoff, unsigned long flags)

See rtdm get unmapped area handler().

### 7.30.1 Detailed Description

RTDM file operation descriptor.

This structure describes the operations available with a RTDM device, defining handlers for submitting I/O requests. Those handlers are implemented by RTDM device drivers.

### 7.30.2 Field Documentation

7.30.2.1 void(\* rtdm fd ops::close)(struct rtdm fd \*fd)

See rtdm close handler().

Referenced by rtdm dev register().

7.30.2.2 unsigned long(\* rtdm\_fd\_ops::get\_unmapped\_area)(struct rtdm\_fd \*fd, unsigned long len, unsigned long pgoff, unsigned long flags)

See rtdm\_get\_unmapped\_area\_handler().

```
7.30.2.3 int(* rtdm_fd_ops::ioctl_nrt)(struct rtdm_fd *fd, unsigned int request, void __user *arg)
See rtdm ioctl handler().
7.30.2.4 int(* rtdm fd ops::ioctl rt)(struct rtdm fd *fd, unsigned int request, void user *arg)
See rtdm ioctl handler().
7.30.2.5 int(* rtdm_fd_ops::mmap)(struct rtdm_fd *fd, struct vm_area_struct *vma)
See rtdm_mmap_handler().
7.30.2.6 int(* rtdm_fd_ops::open)(struct rtdm_fd *fd, int oflags)
See rtdm open handler().
Referenced by rtdm_dev_register(), and udd_register_device().
7.30.2.7 ssize_t(* rtdm_fd_ops::read_nrt)(struct rtdm_fd *fd, void __user *buf, size_t size)
See rtdm read handler().
7.30.2.8 ssize t(* rtdm fd ops::read rt)(struct rtdm fd *fd, void user *buf, size t size)
See rtdm_read_handler().
7.30.2.9 ssize_t(* rtdm_fd_ops::recvmsg_nrt)(struct rtdm_fd *fd, struct msghdr *msg, int flags)
See rtdm_recvmsg_handler().
7.30.2.10 ssize t(* rtdm fd ops::recvmsg rt)(struct rtdm fd *fd, struct msghdr *msg, int flags)
See rtdm_recvmsg_handler().
7.30.2.11 int(* rtdm_fd_ops::select)(struct rtdm_fd *fd, struct xnselector *selector, unsigned int type,
           unsigned int index)
See rtdm select handler().
           ssize_t(* rtdm_fd_ops::sendmsg_nrt)(struct rtdm_fd *fd, const struct msghdr *msg, int
7.30.2.12
           flags)
See rtdm sendmsg handler().
7.30.2.13 ssize_t(* rtdm_fd_ops::sendmsg_rt)(struct rtdm_fd *fd, const struct msghdr *msg, int flags)
See rtdm_sendmsg_handler().
```

7.30.2.14 int(\* rtdm\_fd\_ops::socket)(struct rtdm\_fd \*fd, int protocol)

See rtdm\_socket\_handler().

Referenced by rtdm\_dev\_register().

7.30.2.15 ssize\_t(\* rtdm\_fd\_ops::write\_nrt)(struct rtdm\_fd \*fd, const void \_\_user \*buf, size\_t size)

See rtdm write handler().

7.30.2.16 ssize\_t(\* rtdm\_fd\_ops::write\_rt)(struct rtdm\_fd \*fd, const void \_\_user \*buf, size\_t size)

See rtdm\_write\_handler().

The documentation for this struct was generated from the following file:

include/cobalt/kernel/rtdm/fd.h

# 7.31 rtipc\_port\_label Struct Reference

Port label information structure.

### Data Fields

• char label [XNOBJECT\_NAME\_LEN]

Port label string, null-terminated.

# 7.31.1 Detailed Description

Port label information structure.

Examples:

bufp-label.c, iddp-label.c, and xddp-label.c.

# 7.31.2 Field Documentation

7.31.2.1 char rtipc\_port\_label::label[XNOBJECT\_NAME\_LEN]

Port label string, null-terminated.

Referenced by rt\_pipe\_create().

The documentation for this struct was generated from the following file:

• include/rtdm/uapi/ipc.h

# 7.32 rtser\_config Struct Reference

Serial device configuration.

• int config\_mask

mask specifying valid fields, see RTSER\_SET\_xxx

int baud\_rate

baud rate, default RTSER\_DEF\_BAUD

int parity

number of parity bits, see RTSER\_xxx\_PARITY

• int data bits

number of data bits, see RTSER\_xxx\_BITS

• int stop\_bits

number of stop bits, see RTSER\_xxx\_STOPB

int handshake

handshake mechanisms, see RTSER\_xxx\_HAND

• int fifo\_depth

reception FIFO interrupt threshold, see RTSER\_FIFO\_xxx

nanosecs\_rel\_t rx\_timeout

reception timeout, see RTSER\_TIMEOUT\_xxx for special values

• nanosecs\_rel\_t tx\_timeout

transmission timeout, see RTSER\_TIMEOUT\_xxx for special values

• nanosecs rel t event timeout

event timeout, see RTSER\_TIMEOUT\_xxx for special values

int timestamp\_history

enable timestamp history, see RTSER\_xxx\_TIMESTAMP\_HISTORY

int event\_mask

event mask to be used with RTSER\_RTIOC\_WAIT\_EVENT, see RTSER\_EVENT\_xxx

• int rs485

enable RS485 mode, see RTSER\_RS485\_xxx

# 7.32.1 Detailed Description

Serial device configuration.

Examples:

cross-link.c.

The documentation for this struct was generated from the following file:

• include/rtdm/uapi/serial.h

# 7.33 rtser\_event Struct Reference

Additional information about serial device events.

• int events

signalled events, see RTSER\_EVENT\_xxx

int rx\_pending

number of pending input characters

nanosecs\_abs\_t last\_timestamp

last interrupt timestamp

nanosecs\_abs\_t rxpend\_timestamp

reception timestamp of oldest character in input queue

# 7.33.1 Detailed Description

Additional information about serial device events.

### Examples:

cross-link.c.

The documentation for this struct was generated from the following file:

• include/rtdm/uapi/serial.h

# 7.34 rtser\_status Struct Reference

Serial device status.

# Data Fields

• int line\_status

line status register, see RTSER\_LSR\_xxx

int modem\_status

modem status register, see RTSER\_MSR\_xxx

# 7.34.1 Detailed Description

Serial device status.

The documentation for this struct was generated from the following file:

• include/rtdm/uapi/serial.h

# 7.35 sockaddr\_can Struct Reference

Socket address structure for the CAN address family.

sa\_family\_t can\_family
 CAN address family, must be AF\_CAN.

• int can\_ifindex

Interface index of CAN controller.

# 7.35.1 Detailed Description

Socket address structure for the CAN address family.

### Examples:

can-rtt.c, rtcanrecv.c, and rtcansend.c.

### 7.35.2 Field Documentation

7.35.2.1 int sockaddr\_can::can\_ifindex

Interface index of CAN controller.

See SIOCGIFINDEX.

The documentation for this struct was generated from the following file:

• include/rtdm/uapi/can.h

# 7.36 sockaddr\_ipc Struct Reference

Socket address structure for the RTIPC address family.

# Data Fields

sa\_family\_t sipc\_family
 RTIPC address family, must be AF\_RTIPC.

rtipc\_port\_t sipc\_port

Port number.

# 7.36.1 Detailed Description

Socket address structure for the RTIPC address family.

# Examples:

bufp-label.c, bufp-readwrite.c, iddp-label.c, iddp-sendrecv.c, xddp-echo.c, xddp-label.c, and xddp-stream.c.

# 7.36.2 Field Documentation

7.36.2.1 rtipc\_port\_t sockaddr\_ipc::sipc\_port

Port number.


Referenced by rt\_pipe\_create().

The documentation for this struct was generated from the following file:

• include/rtdm/uapi/ipc.h

# 7.37 udd\_device Struct Reference

Collaboration diagram for udd\_device:

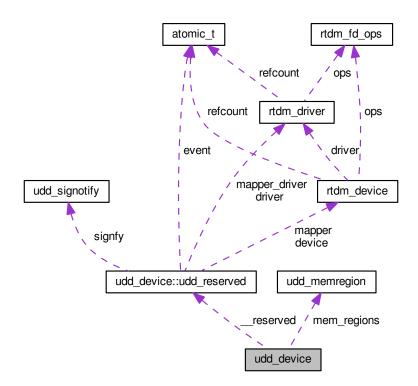

# **Data Structures**

struct udd\_reserved
 Reserved to the UDD core.

# Data Fields

• const char \* device\_name

Name of the device managed by the mini-driver, appears automatically in the /dev/rtdm namespace upon creation.

int device\_flags

Additional device flags (e.g.

int device\_subclass

Subclass code of the device managed by the mini-driver (see RTDM\_SUBCLASS\_xxx definition in the Device Profiles).

int irq

IRQ number.

• struct udd memregion mem regions [UDD NR MAPS]

Array of memory regions defined by the device.

int(\* open )(struct rtdm\_fd \*fd, int oflags)

Ancillary open() handler, optional.

void(\* close )(struct rtdm\_fd \*fd)

Ancillary close() handler, optional.

int(\* ioctl )(struct rtdm\_fd \*fd, unsigned int request, void \*arg)

Ancillary ioctl() handler, optional.

int(\* mmap )(struct rtdm\_fd \*fd, struct vm\_area\_struct \*vma)

Ancillary mmap() handler for the mapper device, optional.

int(\* interrupt )(struct udd\_device \*udd)

# 7.37.1 Detailed Description

UDD device descriptor.

This descriptor defines the characteristics of a UDD-based mini-driver when registering via a call to udd\_register\_device().

### 7.37.2 Field Documentation

7.37.2.1 void(\* udd\_device::close)(struct rtdm\_fd \*fd)

Ancillary close() handler, optional.

See rtdm\_close\_handler().

7.37.2.2 int udd device::device flags

Additional device flags (e.g.

RTDM EXCLUSIVE) RTDM NAMED DEVICE may be omitted).

Referenced by udd\_register\_device().

7.37.2.3 int udd\_device::device\_subclass

Subclass code of the device managed by the mini-driver (see RTDM\_SUBCLASS\_xxx definition in the Device Profiles).

The main class code is forced to RTDM CLASS UDD.

7.37.2.4 int(\* udd\_device::interrupt)(struct udd\_device \*udd)

Ancillary handler for receiving interrupts. This handler must be provided if the mini-driver hands over IR-Q handling to the UDD core, by setting the *irq* field to a valid value, different from UDD\_IRQ\_CUSTOM and UDD\_IRQ\_NONE.

The ->interrupt() handler shall return one of the following status codes:

- RTDM\_IRQ\_HANDLED, if the mini-driver successfully handled the IRQ. This flag can be combined with RTDM\_IRQ\_DISABLE to prevent the Cobalt kernel from re-enabling the interrupt line upon return, otherwise it is re-enabled automatically.
- RTDM\_IRQ\_NONE, if the interrupt does not match any IRQ the mini-driver can handle.

Once the ->interrupt() handler has returned, the UDD core notifies user-space Cobalt threads waiting for IRQ events (if any).

Referenced by udd\_register\_device().

7.37.2.5 int(\* udd\_device::ioctl)(struct rtdm\_fd \*fd, unsigned int request, void \*arg)

Ancillary ioctl() handler, optional.

See rtdm ioctl handler().

7.37.2.6 int udd device::irq

IRQ number.

If valid, the UDD core manages the corresponding interrupt line, installing a base handler. Otherwise, a special value can be passed for declaring unmanaged IRQs.

Referenced by udd register device(), and udd unregister device().

7.37.2.7 struct udd memregion udd device::mem regions[UDD NR MAPS]

Array of memory regions defined by the device.

The array can be sparse, with some entries bearing the UDD\_MEM\_NONE type interleaved with valid ones. See the discussion about UDD memory regions.

Referenced by udd\_register\_device().

7.37.2.8 int(\* udd\_device::mmap)(struct rtdm\_fd \*fd, struct vm\_area\_struct \*vma)

Ancillary mmap() handler for the mapper device, optional.

See <a href="rtdm\_mmap\_handler">rtdm\_mmap\_handler</a>(). The mapper device operates on a valid region defined in the <a href="mapper-regions">mem\_regions</a>[] array. A pointer to the region can be obtained by a call to udd\_get\_region().

If this handler is NULL, the UDD core establishes the mapping automatically, depending on the memory type defined for the region.

7.37.2.9 int(\* udd device::open)(struct rtdm fd \*fd, int oflags)

Ancillary open() handler, optional.

See rtdm open handler().

The documentation for this struct was generated from the following file:

include/cobalt/kernel/rtdm/udd.h

# 7.38 udd\_memregion Struct Reference

### Data Fields

• const char \* name

Name of the region (informational but required)

unsigned long addr

Start address of the region.

size\_t len

Length (in bytes) of the region.

int type

Type of the region.

### 7.38.1 Detailed Description

UDD memory region descriptor.

This descriptor defines the characteristics of a memory region declared to the UDD core by the minidriver. All valid regions should be declared in the udd\_device.mem\_regions[] array, invalid/unassigned ones should bear the UDD\_MEM\_NONE type.

The UDD core exposes each region via the mmap(2) interface to the application. To this end, a companion mapper device is created automatically when registering the mini-driver.

The mapper device creates special files in the RTDM namespace to reach the individual regions, which the application can open, for mapping the corresponding region to their address space via the mmap(2) system call.

For instance, declaring a region of physical memory at index #2 of the memory region array as follows:

```
static struct udd_device udd;

static int foocard_pci_probe(struct pci_dev *dev, const struct pci_device_id *id)
{
    udd.device_name = "foocard";
    ...
    udd.mem_regions[2].name = "ADC";
    udd.mem_regions[2].addr = pci_resource_start(dev, 1);
    udd.mem_regions[2].len = pci_resource_len(dev, 1);
    udd.mem_regions[2].type = UDD_MEM_PHYS;
    ...
    return udd_register_device(&udd);
}
```

will make such region accessible via the mapper device using the following sequence of code, via the default ->mmap() handler from the UDD core:

```
int fd, fdm;
void *p;

fd = open("/dev/foocard", O_RDWR);
fdm = open("/dev/foocard,mapper@2", O_RDWR);
p = mmap(NULL, 4096, PROT_READ|PROT_WRITE, 0, fdm, 0);
```

Note

No mapper device is created unless a valid region has been declared in the udd\_device.mem\_-regions[] array.

# 7.38.2 Field Documentation

7.38.2.1 unsigned long udd\_memregion::addr

Start address of the region.

This may be a physical or virtual address, depending on the memory type.

7.38.2.2 size\_t udd\_memregion::len

Length (in bytes) of the region.

This value must be PAGE SIZE aligned.

7.38.2.3 int udd\_memregion::type

Type of the region.

See the discussion about UDD memory types for possible values.


The documentation for this struct was generated from the following file:

• include/cobalt/kernel/rtdm/udd.h

# 7.39 udd device::udd reserved Struct Reference

Reserved to the UDD core.

Collaboration diagram for udd\_device::udd\_reserved:

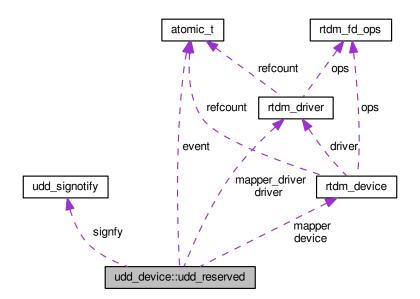

# 7.39.1 Detailed Description

Reserved to the UDD core.

The documentation for this struct was generated from the following file:

include/cobalt/kernel/rtdm/udd.h

# 7.40 udd\_signotify Struct Reference

UDD event notification descriptor.

### Data Fields

pid\_t pid

PID of the Cobalt thread to notify upon interrupt receipt.

int sig

Signal number to send to PID for notifying, which must be in the range [SIGRTMIN .

# 7.40.1 Detailed Description

UDD event notification descriptor.

This structure shall be used to pass the information required to enable/disable the notification by signal upon interrupt receipt.

If PID is zero or negative, the notification is disabled. Otherwise, the Cobalt thread whose PID is given will receive the Cobalt signal also mentioned, along with the count of interrupts at the time of the receipt stored in siginfo.si\_int. A Cobalt thread must explicitly wait for notifications using the sigwaitinfo() or sigtimedwait() services (no asynchronous mode available).

### 7.40.2 Field Documentation

7.40.2.1 pid t udd signotify::pid

PID of the Cobalt thread to notify upon interrupt receipt.

If pid is zero or negative, the notification is disabled.

7.40.2.2 int udd signotify::sig

Signal number to send to PID for notifying, which must be in the range [SIGRTMIN .

. SIGRTMAX] inclusive. This value is not considered if *pid* is zero or negative.

The documentation for this struct was generated from the following file:

• include/rtdm/uapi/udd.h

# 7.41 xnheap::xnbucket Struct Reference

log2 bucket list

# 7.41.1 Detailed Description

log2 bucket list

The documentation for this struct was generated from the following file:

• include/cobalt/kernel/heap.h

# 7.42 xnsched Struct Reference

Scheduling information structure.

# Data Fields

- unsigned long status
- unsigned long Iflags
- struct xnthread \* curr
- int cpu
- cpumask\_t resched
- struct xnsched\_rt rt
- volatile unsigned inesting
- struct xntimer htimer
- struct xntimer rrbtimer

# 7.42.1 Detailed Description

Scheduling information structure.

# 7.42.2 Field Documentation

7.42.2.1 int xnsched::cpu

Mask of CPUs needing rescheduling.

7.42.2.2 struct xnthread\* xnsched::curr

Owner CPU id.

Referenced by xnthread\_set\_slice(), and xnthread\_suspend().

7.42.2.3 struct xntimer xnsched::htimer

Round-robin timer.

Referenced by program\_htick\_shot(), switch\_htick\_mode(), and xnclock\_tick().

7.42.2.4 volatile unsigned xnsched::inesting

Host timer.

7.42.2.5 unsigned long xnsched::lflags

Current thread.

Referenced by xnclock\_tick(), xnsched\_run(), and xnthread\_suspend().

7.42.2.6 cpumask\_t xnsched::resched

Context of built-in real-time class.

7.42.2.7 struct xntimer xnsched::rrbtimer

Root thread control block.

Referenced by xnthread set slice().

7.42.2.8 struct xnsched\_rt xnsched::rt

Interrupt nesting level.

7.42.2.9 unsigned long xnsched::status

< Scheduler specific status bitmask. Scheduler specific local flags bitmask.

Referenced by xnclock\_tick(), and xnsched\_run().

The documentation for this struct was generated from the following file:

• include/cobalt/kernel/sched.h

# 7.43 xnvfile\_lock\_ops Struct Reference

Vfile locking operations.

Data Fields

- int(\* get )(struct xnvfile \*vfile)
- void(\* put )(struct xnvfile \*vfile)

# 7.43.1 Detailed Description

Vfile locking operations.

This structure describes the operations to be provided for implementing locking support on vfiles. They apply to both snapshot-driven and regular vfiles.

# 7.43.2 Field Documentation

7.43.2.1 int(\* xnvfile\_lock\_ops::get)(struct xnvfile \*vfile)

This handler should grab the desired lock.

#### **Parameters**

vfile | A pointer to the virtual file which needs locking.

#### Returns

zero should be returned if the call succeeds. Otherwise, a negative error code can be returned; upon error, the current vfile operation is aborted, and the user-space caller is passed back the error value.

7.43.2.2 void(\* xnvfile\_lock\_ops::put)(struct xnvfile \*vfile)

This handler should release the lock previously grabbed by the get() handler.

**Parameters** 

*vfile* A pointer to the virtual file which currently holds the lock to release.

The documentation for this struct was generated from the following file:

• include/cobalt/kernel/vfile.h

# 7.44 xnvfile regular iterator Struct Reference

Regular vfile iterator.

### Data Fields

loff\_t pos

Current record position while iterating.

• struct seq file \* seq

Backlink to the host sequential file supporting the vfile.

• struct xnvfile\_regular \* vfile

Backlink to the vfile being read.

• char private [0]

Start of private area.

# 7.44.1 Detailed Description

Regular vfile iterator.

This structure defines an iterator over a regular vfile.

### 7.44.2 Field Documentation

7.44.2.1 loff\_t xnvfile\_regular\_iterator::pos

Current record position while iterating.

7.44.2.2 char xnvfile\_regular\_iterator::private[0]

Start of private area.

Use xnvfile iterator priv() to address it.

7.44.2.3 struct seq\_file\* xnvfile\_regular\_iterator::seq

Backlink to the host sequential file supporting the vfile.

7.44.2.4 struct xnvfile regular\* xnvfile regular iterator::vfile

Backlink to the vfile being read.

The documentation for this struct was generated from the following file:

include/cobalt/kernel/vfile.h

# 7.45 xnvfile regular ops Struct Reference

Regular vfile operation descriptor.

### Data Fields

- int(\* rewind )(struct xnvfile regular iterator \*it)
- void \*(\* begin )(struct xnvfile\_regular\_iterator \*it)
- void \*(\* next )(struct xnvfile\_regular\_iterator \*it)
- void(\* end )(struct xnvfile regular iterator \*it)
- int(\* show )(struct xnvfile regular iterator \*it, void \*data)
- ssize t(\* store )(struct xnvfile input \*input)

# 7.45.1 Detailed Description

Regular vfile operation descriptor.

This structure describes the operations available with a regular vfile. It defines handlers for sending back formatted kernel data upon a user-space read request, and for obtaining user data upon a user-space write request.

### 7.45.2 Field Documentation

7.45.2.1 void\*(\* xnvfile\_regular\_ops::begin)(struct xnvfile\_regular\_iterator \*it)

This handler should prepare for iterating over the records upon a read request, starting from the specified position.

**Parameters** 

it A pointer to the current vfile iterator. On entry, it->pos is set to the (0-based) position of the first record to output. This handler may be called multiple times with different position requests.

#### Returns

A pointer to the first record to format and output, to be passed to the show() handler as its data parameter, if the call succeeds. Otherwise:

- NULL in case no record is available, in which case the read operation will terminate immediately with no output.
- VFILE\_SEQ\_START, a special value indicating that the show() handler should receive a NULL data pointer first, in order to output a header.
- ERR\_PTR(errno), where errno is a negative error code; upon error, the current operation will be aborted immediately.

#### Note

This handler is optional; if none is given in the operation descriptor (i.e. NULL value), the show() handler() will be called only once for a read operation, with a NULL *data* parameter. This particular setting is convenient for simple regular viiles having a single, fixed record to output.

7.45.2.2 void(\* xnvfile regular ops::end)(struct xnvfile regular iterator \*it)

This handler is called after all records have been output.

#### **Parameters**

it	A pointer to the current vfile iterator.

#### Note

This handler is optional and the pointer may be NULL.

7.45.2.3 void\*(\* xnvfile regular ops::next)(struct xnvfile regular iterator \*it)

This handler should return the address of the next record to format and output by the show()handler".

it	A pointer to the current vfile iterator. On entry, it->pos is set to the (0-based) position
	of the next record to output.

### Returns

**Parameters** 

A pointer to the next record to format and output, to be passed to the show() handler as its data parameter, if the call succeeds. Otherwise:

- NULL in case no record is available, in which case the read operation will terminate immediately with no output.
- ERR\_PTR(errno), where errno is a negative error code; upon error, the current operation will be aborted immediately.

### Note

This handler is optional; if none is given in the operation descriptor (i.e. NULL value), the read operation will stop after the first invocation of the show() handler.

7.45.2.4 int(\* xnvfile\_regular\_ops::rewind)(struct xnvfile\_regular\_iterator \*it)

This handler is called only once, when the virtual file is opened, before the begin() handler is invoked. Parameters

it A pointer to the vfile iterator which will be used to read the file contents.

#### Returns

Zero should be returned upon success. Otherwise, a negative error code aborts the operation, and is passed back to the reader.

#### Note

This handler is optional. It should not be used to allocate resources but rather to perform consistency checks, since no closure call is issued in case the open sequence eventually fails.

7.45.2.5 int(\* xnvfile regular ops::show)(struct xnvfile regular iterator \*it, void \*data)

This handler should format and output a record.

xnvfile\_printf(), xnvfile\_write(), xnvfile\_puts() and xnvfile\_putc() are available to format and/or emit the output. All routines take the iterator argument *it* as their first parameter.

#### **Parameters**

it	A pointer to the current vfile iterator.
data	A pointer to the record to format then output. The first call to the handler may
	receive a NULL data pointer, depending on the presence and/or return of a hander;
	the show handler should test this special value to output any header that fits, prior
	to receiving more calls with actual records.

### Returns

zero if the call succeeds, also indicating that the handler should be called for the next record if any. Otherwise:

- A negative error code. This will abort the output phase, and return this status to the reader.
- VFILE\_SEQ\_SKIP, a special value indicating that the current record should be skipped and will not be output.

7.45.2.6 ssize t(\* xnvfile regular ops::store)(struct xnvfile input \*input)

This handler receives data written to the vfile, likely for updating some kernel setting, or triggering any other action which fits. This is the only handler which deals with the write-side of a vfile. It is called when writing to the /proc entry of the vfile from a user-space process.

The input data is described by a descriptor passed to the handler, which may be subsequently passed to parsing helper routines. For instance, <a href="mailto:xnvfile\_get\_string">xnvfile\_get\_string</a>() will accept the input descriptor for returning the written data as a null-terminated character string. On the other hand, <a href="mailto:xnvfile\_get\_integer">xnvfile\_get\_integer</a>() will attempt to return a long integer from the input data.

#### **Parameters**

input	A pointer to an input descriptor.	It refers to an opaque data from the handler's	
	standpoint.		

### Returns

the number of bytes read from the input descriptor if the call succeeds. Otherwise, a negative error code. Return values from parsing helper routines are commonly passed back to the caller by the store() handler.

### Note

This handler is optional, and may be omitted for read-only vfiles.

The documentation for this struct was generated from the following file:

• include/cobalt/kernel/vfile.h

# 7.46 xnvfile\_rev\_tag Struct Reference

Snapshot revision tag.

### Data Fields

• int rev

Current revision number.

# 7.46.1 Detailed Description

Snapshot revision tag.

This structure defines a revision tag to be used with snapshot-driven vfiles.

# 7.46.2 Field Documentation

7.46.2.1 int xnvfile rev tag::rev

Current revision number.


The documentation for this struct was generated from the following file:

• include/cobalt/kernel/vfile.h

# 7.47 xnvfile\_snapshot Struct Reference

Snapshot vfile descriptor.

Collaboration diagram for xnvfile\_snapshot:

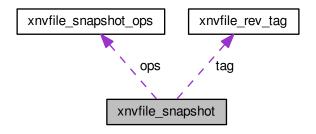

# 7.47.1 Detailed Description

Snapshot vfile descriptor.

This structure describes a snapshot-driven vfile. Reading from such a vfile involves a preliminary data collection phase under lock protection, and a subsequent formatting and output phase of the collected data records. Locking is done in a way that does not increase worst-case latency, regardless of the number of records to be collected for output.


The documentation for this struct was generated from the following file:

• include/cobalt/kernel/vfile.h

# 7.48 xnvfile\_snapshot\_iterator Struct Reference

Snapshot-driven vfile iterator.

Collaboration diagram for xnvfile\_snapshot\_iterator:

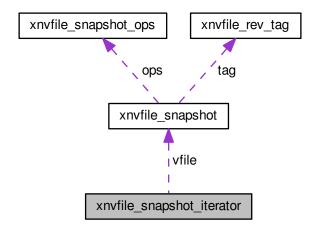

### Data Fields

int nrdata

Number of collected records.

• caddr t databuf

Address of record buffer.

struct seq\_file \* seq

Backlink to the host sequential file supporting the vfile.

• struct xnvfile\_snapshot \* vfile

Backlink to the vfile being read.

void(\* endfn )(struct xnvfile\_snapshot\_iterator \*it, void \*buf)

Buffer release handler.

• char private [0]

Start of private area.

# 7.48.1 Detailed Description

Snapshot-driven vfile iterator.

This structure defines an iterator over a snapshot-driven vfile.

# 7.48.2 Field Documentation

7.48.2.1 caddr\_t xnvfile\_snapshot\_iterator::databuf

Address of record buffer.

7.48.2.2 void(\* xnvfile\_snapshot\_iterator::endfn)(struct xnvfile\_snapshot\_iterator \*it, void \*buf)

Buffer release handler.

7.48.2.3 int xnvfile\_snapshot\_iterator::nrdata

Number of collected records.

7.48.2.4 char xnvfile snapshot iterator::private[0]

Start of private area.

Use xnvfile iterator priv() to address it.

7.48.2.5 struct seq file\* xnvfile snapshot iterator::seq

Backlink to the host sequential file supporting the vfile.

7.48.2.6 struct xnvfile snapshot\* xnvfile snapshot iterator::vfile

Backlink to the vfile being read.

The documentation for this struct was generated from the following file:

• include/cobalt/kernel/vfile.h

# 7.49 xnvfile snapshot ops Struct Reference

Snapshot vfile operation descriptor.

### Data Fields

- int(\* rewind )(struct xnvfile\_snapshot\_iterator \*it)
- void \*(\* begin )(struct xnvfile snapshot iterator \*it)
- void(\* end )(struct xnvfile snapshot iterator \*it, void \*buf)
- int(\* next )(struct xnvfile\_snapshot\_iterator \*it, void \*data)
- int(\* show )(struct xnvfile\_snapshot\_iterator \*it, void \*data)
- ssize\_t(\* store )(struct xnvfile\_input \*input)

# 7.49.1 Detailed Description

Snapshot vfile operation descriptor.

This structure describes the operations available with a snapshot-driven vfile. It defines handlers for returning a printable snapshot of some Xenomai object contents upon a user-space read request, and for updating this object upon a user-space write request.

### 7.49.2 Field Documentation

7.49.2.1 void\*(\* xnvfile\_snapshot\_ops::begin)(struct xnvfile\_snapshot\_iterator \*it)

This handler should allocate the snapshot buffer to hold records during the data collection phase. When specified, all records collected via the next()handler" will be written to a cell from the memory area returned by begin().

#### **Parameters**

it	A pointer to the current snapshot iterator.

### Returns

A pointer to the record buffer, if the call succeeds. Otherwise:

- NULL in case of allocation error. This will abort the data collection, and return -ENOMEM to the reader.
- VFILE\_SEQ\_EMPTY, a special value indicating that no record will be output. In such a case, the
  next() handler will not be called, and the data collection will stop immediately. However, the show()
  handler will still be called once, with a NULL data pointer (i.e. header display request).

### Note

This handler is optional; if none is given, an internal allocation depending on the value returned by the rewind() handler can be obtained.

7.49.2.2 void(\* xnvfile\_snapshot\_ops::end)(struct xnvfile\_snapshot\_iterator \*it, void \*buf)

This handler releases the memory buffer previously obtained from begin(). It is usually called after the snapshot data has been output by show(), but it may also be called before rewinding the vfile after a revision change, to release the dropped buffer.

### **Parameters**

it	A pointer to the current snapshot iterator.
buf	A pointer to the buffer to release.

#### Note

This routine is optional and the pointer may be NULL. It is not needed upon internal buffer allocation; see the description of the rewind()handler".

7.49.2.3 int(\* xnvfile snapshot ops::next)(struct xnvfile snapshot iterator \*it, void \*data)

This handler fetches the next record, as part of the snapshot data to be sent back to the reader via the show().

### **Parameters**

it	A pointer to the current snapshot iterator.
data	A pointer to the record to fill in.

### Returns

a strictly positive value, if the call succeeds and leaves a valid record into *data*, which should be passed to the show() handler() during the formatting and output phase. Otherwise:

- A negative error code. This will abort the data collection, and return this status to the reader.
- VFILE\_SEQ\_SKIP, a special value indicating that the current record should be skipped. In such a case, the *data* pointer is not advanced to the next position before the next() handler is called anew.

#### Note

This handler is called with the vfile lock held. Before each invocation of this handler, the vfile core checks whether the revision tag has been touched, in which case the data collection is restarted from scratch. A data collection phase succeeds whenever all records can be fetched via the next() handler, while the revision tag remains unchanged, which indicates that a consistent snapshot of the object state was taken.

### 7.49.2.4 int(\* xnvfile snapshot ops::rewind)(struct xnvfile snapshot iterator \*it)

This handler (re-)initializes the data collection, moving the seek pointer at the first record. When the file revision tag is touched while collecting data, the current reading is aborted, all collected data dropped, and the vfile is eventually rewound.

#### **Parameters**

it	A pointer to the current snapshot iterator.	Two useful information can be retrieved
	from this iterator in this context:	

- it->vfile is a pointer to the descriptor of the virtual file being rewound.
- xnvfile\_iterator\_priv(it) returns a pointer to the private data area, available from the descriptor, which size is vfile->privsz. If the latter size is zero, the returned pointer is meaningless and should not be used.

#### Returns

A negative error code aborts the data collection, and is passed back to the reader. Otherwise:

- a strictly positive value is interpreted as the total number of records which will be returned by the next() handler during the data collection phase. If no begin() handler is provided in the operation descriptor, this value is used to allocate the snapshot buffer internally. The size of this buffer would then be vfile->datasz \* value.
- zero leaves the allocation to the begin() handler if present, or indicates that no record is to be output in case such handler is not given.

### Note

This handler is optional; a NULL value indicates that nothing needs to be done for rewinding the vfile. It is called with the vfile lock held.

7.49.2.5 int(\* xnvfile\_snapshot\_ops::show)(struct xnvfile\_snapshot\_iterator \*it, void \*data)

This handler should format and output a record from the collected data.

xnvfile\_printf(), xnvfile\_write(), xnvfile\_puts() and xnvfile\_putc() are available to format and/or emit the output. All routines take the iterator argument *it* as their first parameter.

### **Parameters**

it	A pointer to t	he current snaps	hot iterator.
----	----------------	------------------	---------------

data	A pointer to the record to format then output. The first call to the handler is always		
	passed a NULL data pointer; the show handler should test this special value to		
	output any header that fits, prior to receiving more calls with actual records.		

#### Returns

zero if the call succeeds, also indicating that the handler should be called for the next record if any. Otherwise:

- A negative error code. This will abort the output phase, and return this status to the reader.
- VFILE\_SEQ\_SKIP, a special value indicating that the current record should be skipped and will not be output.

### 7.49.2.6 ssize t(\* xnvfile snapshot ops::store)(struct xnvfile input \*input)

This handler receives data written to the vfile, likely for updating the associated Xenomai object's state, or triggering any other action which fits. This is the only handler which deals with the write-side of a vfile. It is called when writing to the /proc entry of the vfile from a user-space process.

The input data is described by a descriptor passed to the handler, which may be subsequently passed to parsing helper routines. For instance, <a href="mailto:xnvfile\_get\_string">xnvfile\_get\_string</a>() will accept the input descriptor for returning the written data as a null-terminated character string. On the other hand, <a href="mailto:xnvfile\_get\_integer">xnvfile\_get\_integer</a>() will attempt to return a long integer from the input data.

### **Parameters**

input	A pointer to an input descriptor.	It refers to an	opaque da	ata from	the h	nandler's
	standpoint.					

### Returns

the number of bytes read from the input descriptor if the call succeeds. Otherwise, a negative error code. Return values from parsing helper routines are commonly passed back to the caller by the store() handler.

### Note

This handler is optional, and may be omitted for read-only vfiles.

Referenced by xnvfile init snapshot().

The documentation for this struct was generated from the following file:

• include/cobalt/kernel/vfile.h


Data	Structu	re Doc	ımani	tation
Dala	Siruciu	ie Duci	umem	iaiioi

# Chapter 8

# File Documentation


8.1 include/cobalt/kernel/rtdm/analogy/buffer.h File Reference

Analogy for Linux, buffer related features. Include dependency graph for buffer.h:



502 File Documentation

This graph shows which files directly or indirectly include this file:

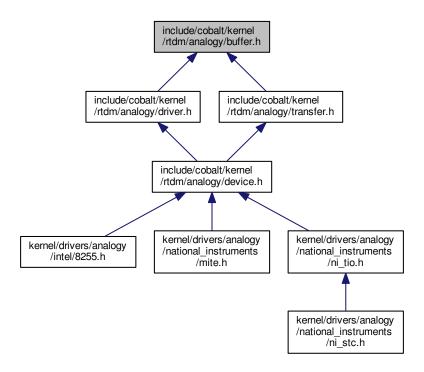

### 8.1.1 Detailed Description

Analogy for Linux, buffer related features. Copyright (C) 1997-2000 David A. Schleef ds@schleef.org Copyright (C) 2008 Alexis Berlemont alexis.berlemont@free.fr

Xenomai is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


Xenomai is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with Xenomai; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.


# 8.2 include/cobalt/kernel/rtdm/analogy/channel\_range.h File Reference

Analogy for Linux, channel, range related features.

Include dependency graph for channel\_range.h:

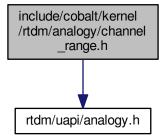

This graph shows which files directly or indirectly include this file:

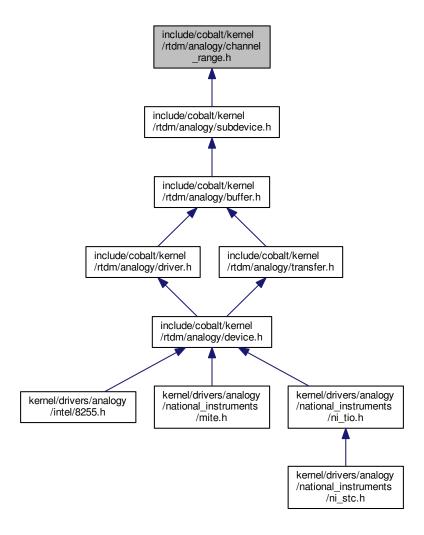

504 File Documentation

### **Data Structures**

struct a4l\_channel

Structure describing some channel's characteristics.

struct a4l\_channels\_desc

Structure describing a channels set.

struct a4l\_range

Structure describing a (unique) range.

### Macros

#define A4L CHAN GLOBAL 0x10

Internal use flag (must not be used by driver developer)

• #define A4L\_RNG\_GLOBAL 0x8

Internal use flag (must not be used by driver developer)

• #define RANGE(x, y)

Macro to declare a (unique) range with no unit defined.

#define RANGE\_V(x, y)

Macro to declare a (unique) range in Volt.

#define RANGE\_mA(x, y)

Macro to declare a (unique) range in milliAmpere.

• #define RANGE ext(x, y)

Macro to declare a (unique) range in some external reference.

#define A4L\_RNG\_GLOBAL\_RNGDESC 0

Constant to define a ranges descriptor as global (inter-channel)

#define A4L RNG PERCHAN RNGDESC 1

Constant to define a ranges descriptor as specific for a channel.

• #define RNG\_GLOBAL(x)

Macro to declare a ranges global descriptor in one line.

### Channel reference

Flags to define the channel's reference

#define A4L\_CHAN\_AREF\_GROUND 0x1

Ground reference.

#define A4L\_CHAN\_AREF\_COMMON 0x2

Common reference.

#define A4L\_CHAN\_AREF\_DIFF 0x4

Differential reference.

• #define A4L\_CHAN\_AREF\_OTHER 0x8

Misc reference.

#### Channels declaration mode

Constant to define whether the channels in a descriptor are identical

#define A4L\_CHAN\_GLOBAL\_CHANDESC 0

Global declaration, the set contains channels with similar characteristics.

#define A4L\_CHAN\_PERCHAN\_CHANDESC 1

Per channel declaration, the decriptor gathers differents channels.

# 8.2.1 Detailed Description

Analogy for Linux, channel, range related features. Copyright (C) 1997-2000 David A. Schleef ds@schleef.org Copyright (C) 2008 Alexis Berlemont alexis.berlemont@free.fr


Xenomai is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

Xenomai is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with Xenomai; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.


# 8.3 include/cobalt/kernel/rtdm/analogy/context.h File Reference

Analogy for Linux, context structure / macros declarations. Include dependency graph for context.h:

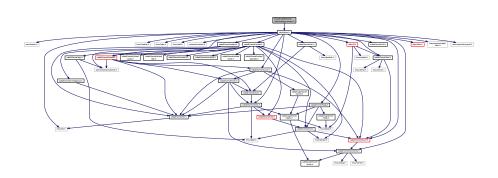

506 File Documentation

This graph shows which files directly or indirectly include this file:

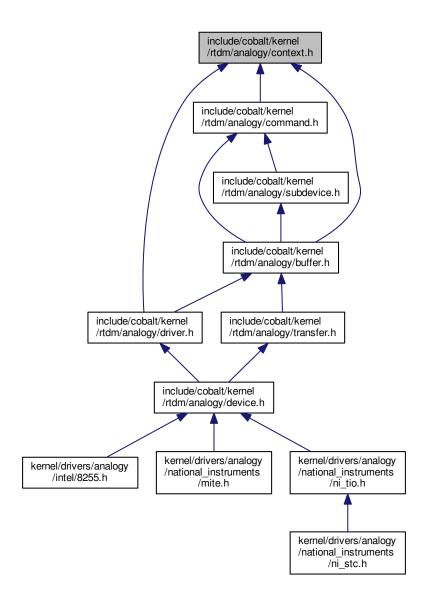

# 8.3.1 Detailed Description

Analogy for Linux, context structure / macros declarations. Copyright (C) 1997-2000 David A. Schleef ds@schleef.org Copyright (C) 2008 Alexis Berlemont alexis.berlemont@free.fr

Xenomai is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


Xenomai is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with Xenomai; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.


# 8.4 include/cobalt/kernel/rtdm/analogy/device.h File Reference

Analogy for Linux, device related features.

Include dependency graph for device.h:

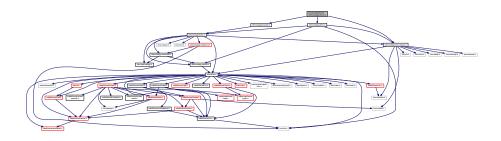

This graph shows which files directly or indirectly include this file:

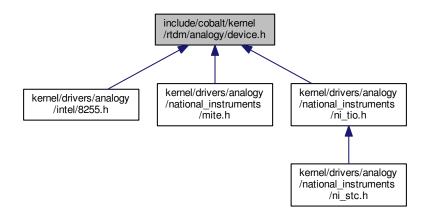

## 8.4.1 Detailed Description

Analogy for Linux, device related features. Copyright (C) 1997-2000 David A. Schleef ds@schleef.org Copyright (C) 2008 Alexis Berlemont alexis.berlemont@free.fr

Xenomai is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


Xenomai is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with Xenomai; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.


# 8.5 include/cobalt/kernel/rtdm/analogy/driver.h File Reference

Analogy for Linux, driver facilities.

Include dependency graph for driver.h:

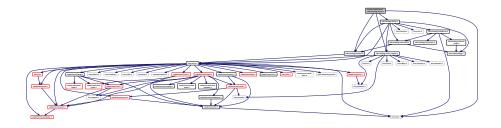

This graph shows which files directly or indirectly include this file:

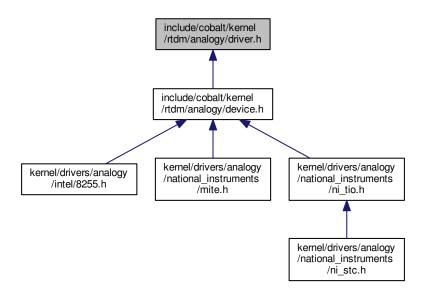

## **Data Structures**

• struct a4l\_driver

Structure containing driver declaration data.

## 8.5.1 Detailed Description

Analogy for Linux, driver facilities. Copyright (C) 1997-2000 David A. Schleef ds@schleef.org Copyright (C) 2008 Alexis Berlemont alexis.berlemont@free.fr


Xenomai is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

Xenomai is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.


You should have received a copy of the GNU General Public License along with Xenomai; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

## 8.6 include/cobalt/kernel/rtdm/driver.h File Reference

Real-Time Driver Model for Xenomai, driver API header. Include dependency graph for driver.h:

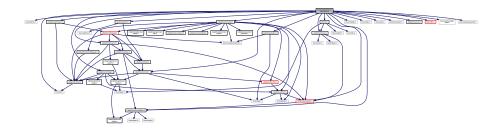

This graph shows which files directly or indirectly include this file:

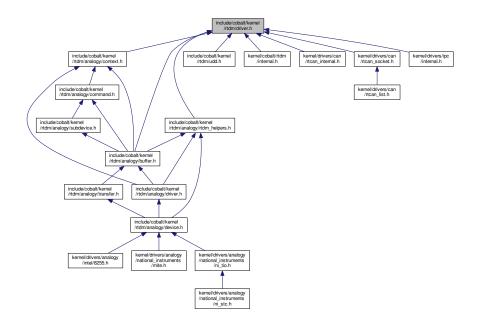

## **Data Structures**

- struct rtdm\_dev\_context Device context.
- struct rtdm\_driver

RTDM driver.

• struct rtdm\_device RTDM device.

#### Macros

- #define cobalt\_atomic\_enter(context)
   Enter atomic section (dual kernel only)
- #define cobalt\_atomic\_leave(context)

Leave atomic section (dual kernel only)

#define RTDM\_EXECUTE\_ATOMICALLY(code\_block)

Execute code block atomically (DEPRECATED)

#define RTDM\_LOCK\_UNLOCKED(\_\_name) IPIPE\_SPIN\_LOCK\_UNLOCKED

Static lock initialisation.

#define rtdm\_lock\_irqsave(context) splhigh(context)

Disable preemption locally.

#define rtdm lock irgrestore(context) splexit(context)

Restore preemption state.

#define rtdm\_irq\_get\_arg(irq\_handle, type) ((type \*)irq\_handle->cookie)

Retrieve IRQ handler argument.

#### **Device Flags**

Static flags describing a RTDM device

#define RTDM EXCLUSIVE 0x0001

If set, only a single instance of the device can be requested by an application.

#define RTDM FIXED MINOR 0x0002

Use fixed minor provided in the rtdm\_device description for registering.

#define RTDM NAMED DEVICE 0x0010

If set, the device is addressed via a clear-text name.

#define RTDM PROTOCOL DEVICE 0x0020

If set, the device is addressed via a combination of protocol ID and socket type.

#define RTDM DEVICE TYPE MASK 0x00F0

Mask selecting the device type.

#define RTDM\_SECURE\_DEVICE 0x80000000

Flag indicating a secure variant of RTDM (not supported here)

### RTDM profile information descriptor

RTDM profile information

This descriptor details the profile information associated to a RTDM class of device managed by a driver.

• #define RTDM CLASS MAGIC 0x8284636c

Initializer for class profile information.

#define RTDM\_PROFILE\_INFO(\_\_name, \_\_id, \_\_subid, \_\_version)

Initializer for class profile information.

### RTDM IRQTYPE xxx

Interrupt registrations flags

#define RTDM\_IRQTYPE\_SHARED XN\_IRQTYPE\_SHARED

Enable IRQ-sharing with other real-time drivers.

• #define RTDM\_IRQTYPE\_EDGE XN\_IRQTYPE\_EDGE

Mark IRQ as edge-triggered, relevant for correct handling of shared edge-triggered IRQs.

### RTDM\_IRQ\_xxx

Return flags of interrupt handlers

• #define RTDM\_IRQ\_NONE XN\_IRQ\_NONE

Unhandled interrupt.

#define RTDM\_IRQ\_HANDLED XN\_IRQ\_HANDLED

Denote handled interrupt.

#define RTDM\_IRQ\_DISABLE XN\_IRQ\_DISABLE

Request interrupt disabling on exit.

### **Task Priority Range**

Maximum and minimum task priorities

- #define RTDM\_TASK\_LOWEST\_PRIORITY 0
- #define RTDM\_TASK\_HIGHEST\_PRIORITY 99

### **Task Priority Modification**

Raise or lower task priorities by one level

- #define RTDM TASK RAISE PRIORITY (+1)
- #define RTDM\_TASK\_LOWER\_PRIORITY (-1)

## **Typedefs**

- typedef ipipe\_spinlock\_t rtdm\_lock\_t Lock variable.
- typedef unsigned long rtdm\_lockctx\_t

Variable to save the context while holding a lock.

• typedef int(\* rtdm\_irq\_handler\_t )(rtdm\_irq\_t \*irq\_handle)

Interrupt handler.

typedef void(\* rtdm\_nrtsig\_handler\_t )(rtdm\_nrtsig\_t nrt\_sig, void \*arg)

Non-real-time signal handler.

typedef void(\* rtdm\_timer\_handler\_t )(rtdm\_timer\_t \*timer)

Timer handler.

typedef void(\* rtdm\_task\_proc\_t )(void \*arg)

Real-time task procedure.

#### **Enumerations**

## RTDM\_SELECTTYPE\_xxx

Event types select can bind to

enum rtdm\_selecttype { RTDM\_SELECTTYPE\_READ = XNSELECT\_READ, RTDM\_SELECTTYPE\_WRITE = XNSELECT\_WRITE, RTDM\_SELECTTYPE\_EXCEPT = XNSELECT\_EXCEPT }

#### RTDM TIMERMODE xxx

Timer operation modes

 enum rtdm\_timer\_mode { RTDM\_TIMERMODE\_RELATIVE = XN\_RELATIVE, RTDM\_TIME-RMODE\_ABSOLUTE = XN\_ABSOLUTE, RTDM\_TIMERMODE\_REALTIME = XN\_REALTIME }

#### **Functions**

static void \* rtdm fd to private (struct rtdm fd \*fd)

Locate the driver private area associated to a device context structure.

• static struct rtdm\_fd \* rtdm\_private\_to\_fd (void \*dev\_private)

Locate a device file descriptor structure from its driver private area.

static bool rtdm\_fd\_is\_user (struct rtdm\_fd \*fd)

Tell whether the passed file descriptor belongs to an application.

• static struct rtdm device \* rtdm fd device (struct rtdm fd \*fd)

Locate a device structure from a file descriptor.

int rtdm\_dev\_register (struct rtdm\_device \*device)

Register a RTDM device.

void rtdm\_dev\_unregister (struct rtdm\_device \*device)

Unregister a RTDM device.

• void rtdm\_toseq\_init (rtdm\_toseq\_t \*timeout\_seq, nanosecs rel t timeout)

Initialise a timeout sequence.

static void rtdm\_lock\_init (rtdm\_lock\_t \*lock)

Dynamic lock initialisation.

static void rtdm\_lock\_get (rtdm\_lock\_t \*lock)

Acquire lock from non-preemptible contexts.

• static void rtdm\_lock\_put (rtdm\_lock\_t \*lock)

Release lock without preemption restoration.

static void rtdm\_lock\_put\_irgrestore (rtdm\_lock\_t \*lock, rtdm\_lockctx\_t context)

Release lock and restore preemption state.

• int rtdm\_irq\_request (rtdm\_irq\_t \*irq\_handle, unsigned int irq\_no, rtdm\_irq\_handler\_t handler, unsigned long flags, const char \*device\_name, void \*arg)

Register an interrupt handler.

• void rtdm timer destroy (rtdm timer t \*timer)

Destroy a timer.

• int rtdm\_timer\_start (rtdm\_timer\_t \*timer, nanosecs\_abs\_t expiry, nanosecs\_rel\_t interval, enum rtdm\_timer\_mode mode)

Start a timer.

• void rtdm timer stop (rtdm timer t \*timer)

Stop a timer.

• int rtdm\_task\_init (rtdm\_task\_t \*task, const char \*name, rtdm\_task\_proc\_t task\_proc, void \*arg, int priority, nanosecs\_rel\_t period)

Initialise and start a real-time task.

void rtdm\_task\_busy\_sleep (nanosecs\_rel\_t delay)

Busy-wait a specified amount of time.

void rtdm\_event\_init (rtdm\_event\_t \*event, unsigned long pending)

Initialise an event.

int rtdm\_event\_wait (rtdm\_event\_t \*event)

Wait on event occurrence.

int rtdm\_event\_timedwait (rtdm\_event\_t \*event, nanosecs\_rel\_t timeout, rtdm\_toseq\_t \*timeout\_seq)

Wait on event occurrence with timeout.

void rtdm\_event\_signal (rtdm\_event\_t \*event)

Signal an event occurrence.

void rtdm event clear (rtdm event t \*event)

Clear event state.

• void rtdm\_event\_pulse (rtdm\_event\_t \*event)

Signal an event occurrence to currently listening waiters.

void rtdm\_event\_destroy (rtdm\_event\_t \*event)

Destroy an event.

• void rtdm sem init (rtdm sem t \*sem, unsigned long value)

Initialise a semaphore.

int rtdm\_sem\_down (rtdm\_sem\_t \*sem)

Decrement a semaphore.

• int rtdm\_sem\_timeddown (rtdm\_sem\_t \*sem, nanosecs\_rel\_t timeout, rtdm\_toseq\_t \*timeout\_seq)

Decrement a semaphore with timeout.

• void rtdm\_sem\_up (rtdm\_sem\_t \*sem)

Increment a semaphore.

• void rtdm\_sem\_destroy (rtdm\_sem\_t \*sem)

Destroy a semaphore.

void rtdm\_mutex\_init (rtdm\_mutex\_t \*mutex)

Initialise a mutex.

• int rtdm mutex lock (rtdm mutex t \*mutex)

Request a mutex.

int rtdm\_mutex\_timedlock (rtdm\_mutex\_t \*mutex, nanosecs\_rel\_t timeout, rtdm\_toseq\_t \*timeout-seq)

Request a mutex with timeout.

• void rtdm mutex unlock (rtdm mutex t \*mutex)

Release a mutex.

void rtdm\_mutex\_destroy (rtdm\_mutex\_t \*mutex)

Destroy a mutex.

• int rtdm ratelimit (struct rtdm ratelimit state \*rs, const char \*func)

Enforces a rate limit.

## 8.6.1 Detailed Description

Real-Time Driver Model for Xenomai, driver API header. Copyright (C) 2005-2007 Jan Kiszka jan.kiszka@web.de Copyright (C) 2005 Joerg Langenberg joerg.langenberg@gmx.net Copyright (C) 2008 Gilles Chanteperdrix gilles.chanteperdrix@xenomai.org Copyright (C) 2014 Philippe Gerum rpm@xenomai.org

Xenomai is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

Xenomai is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with Xenomai; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

#### 8.6.2 Macro Definition Documentation

## 8.6.2.1 #define RTDM CLASS MAGIC 0x8284636c

Initializer for class profile information.

This macro must be used to fill in the class profile information field from a RTDM driver.

#### **Parameters**

name   Class name (unquoted).	
id	Class major identification number (profile_version.class_id).
subid	Class minor identification number (profile_version.subclass_id).
version	Profile version number.

Note

See Device Profiles.

```
8.6.2.2 #define RTDM_PROFILE_INFO( __name, __id, __subid, __version )
```

#### Value:

```
{
    .name = ( # __name ),
    .class_id = (__id),
    .subclass_id = (__subid),
    .version = (__version),
    .magic = ~RTDM_CLASS_MAGIC,
    .owner = THIS_MODULE,
}
```

Initializer for class profile information.

This macro must be used to fill in the class profile information field from a RTDM driver.

#### **Parameters**

name   Class name (unquoted).	
id	Class major identification number (profile_version.class_id).
subid	Class minor identification number (profile_version.subclass_id).
version	Profile version number.

Note

See Device Profiles.

#### 8.6.3 Function Documentation

```
8.6.3.1 static struct rtdm device* rtdm fd device ( struct rtdm fd * fd ) [static]
```

Locate a device structure from a file descriptor.

**Parameters** 

in	fd	File descriptor

#### Returns

The address of the device structure to which this file descriptor is attached.

References rtdm\_dev\_context::device.

Referenced by udd\_get\_device().

```
8.6.3.2 static bool rtdm_fd_is_user ( struct rtdm_fd * fd ) [inline], [static]
```

Tell whether the passed file descriptor belongs to an application.

#### **Parameters**

11t I'll the descriptor	in	fd	File descriptor
-------------------------	----	----	-----------------

#### Returns

true if passed file descriptor belongs to an application, false otherwise.

8.6.3.3 static void\* rtdm\_fd\_to\_private ( struct rtdm\_fd \* fd ) [inline], [static]

Locate the driver private area associated to a device context structure.

#### **Parameters**

in	fd	File descriptor structure associated with opened device instance

#### Returns

The address of the private driver area associated to file descriptor.

References rtdm\_dev\_context::dev\_private.

8.6.3.4 static struct rtdm\_fd\* rtdm\_private\_to\_fd ( void \* dev\_private ) [static]

Locate a device file descriptor structure from its driver private area.

#### **Parameters**

in	dev_private	Address of a private context area


## Returns

The address of the file descriptor structure defining dev\_private.

# 8.7 include/cobalt/kernel/rtdm/analogy/instruction.h File Reference

Analogy for Linux, instruction related features.

This graph shows which files directly or indirectly include this file:

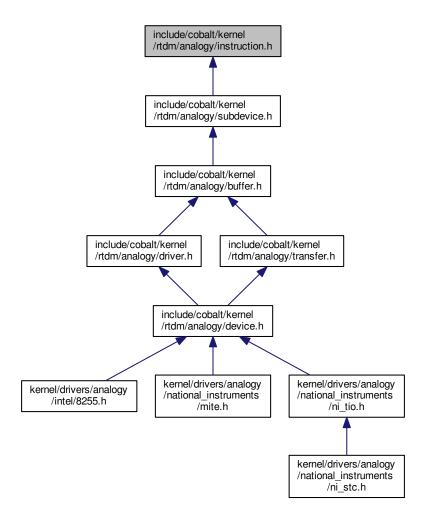

## 8.7.1 Detailed Description

Analogy for Linux, instruction related features.

Note

```
Copyright (C) 1997-2000 David A. Schleef ds@schleef.org
Copyright (C) 2008 Alexis Berlemont alexis.berlemont@free.fr
```


Xenomai is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

Xenomai is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.


You should have received a copy of the GNU General Public License along with Xenomai; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

## 8.8 include/cobalt/kernel/rtdm/analogy/rtdm\_helpers.h File Reference

Analogy for Linux, Operation system facilities. Include dependency graph for rtdm\_helpers.h:

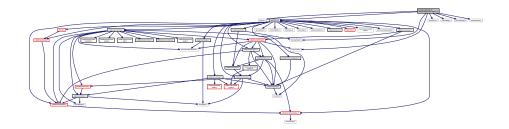

This graph shows which files directly or indirectly include this file:

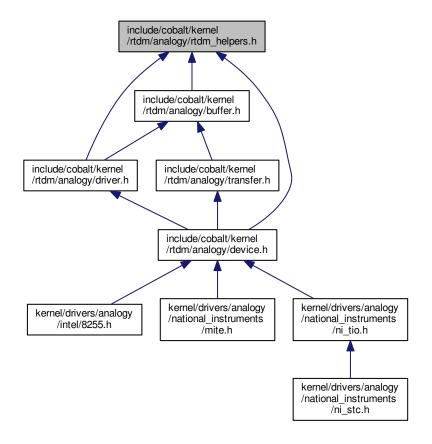

## 8.8.1 Detailed Description

Analogy for Linux, Operation system facilities. Copyright (C) 1997-2000 David A. Schleef ds@schleef.-org Copyright (C) 2008 Alexis Berlemont alexis.berlemont@free.fr

Xenomai is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your

option) any later version.


Xenomai is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with Xenomai; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.


# 8.9 include/cobalt/kernel/rtdm/analogy/subdevice.h File Reference

Analogy for Linux, subdevice related features.

Include dependency graph for subdevice.h:

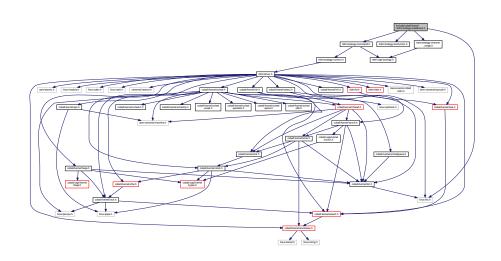

This graph shows which files directly or indirectly include this file:

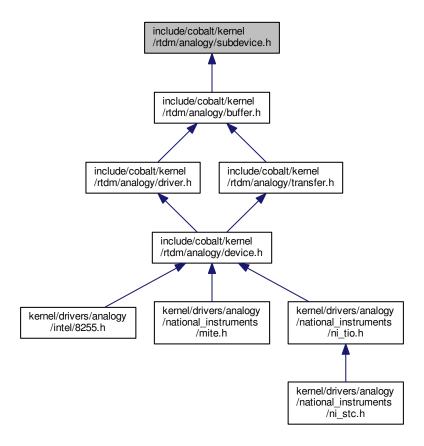

### **Data Structures**

• struct a4l\_subdevice

Structure describing the subdevice.

#### 8.9.1 Detailed Description

Analogy for Linux, subdevice related features. Copyright (C) 1997-2000 David A. Schleef ds@schleef.org Copyright (C) 2008 Alexis Berlemont alexis.berlemont@free.fr

Xenomai is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


Xenomai is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with Xenomai; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.


## 8.10 include/cobalt/kernel/rtdm/analogy/transfer.h File Reference

Analogy for Linux, transfer related features.

Include dependency graph for transfer.h:

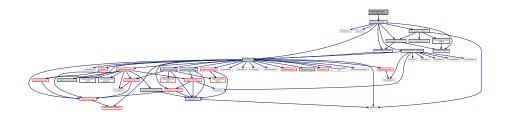

This graph shows which files directly or indirectly include this file:

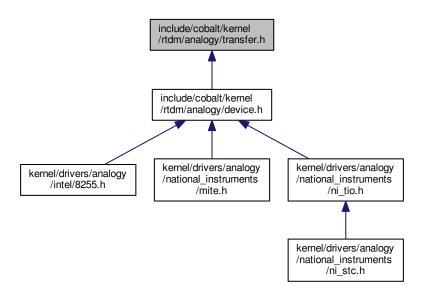

#### 8.10.1 Detailed Description

Analogy for Linux, transfer related features. Copyright (C) 1997-2000 David A. Schleef ds@schleef.org Copyright (C) 2008 Alexis Berlemont alexis.berlemont@free.fr


Xenomai is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

Xenomai is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with Xenomai; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

## 8.11 include/cobalt/kernel/rtdm/can.h File Reference

Include dependency graph for can.h:

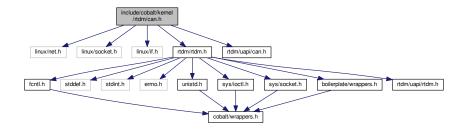

## 8.11.1 Detailed Description

Note

Copyright (C) 2006 Wolfgang Grandegger wg@grandegger.com Copyright (C) 2005, 2006 Sebastian Smolorz Sebastian.Smolorz@stud.uni-hannover.de

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU

General Public License for more details.


You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

## 8.12 include/rtdm/can.h File Reference

Include dependency graph for can.h:

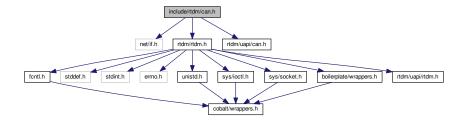

This graph shows which files directly or indirectly include this file:

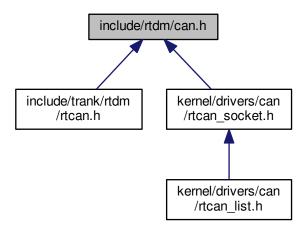

## 8.12.1 Detailed Description

Note

Copyright (C) 2006 Wolfgang Grandegger wg@grandegger.com
Copyright (C) 2005, 2006 Sebastian Smolorz Sebastian.Smolorz@stud.uni-hannover.de

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU


General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

# 8.13 include/rtdm/uapi/can.h File Reference

Real-Time Driver Model for RT-Socket-CAN, CAN device profile header.

This graph shows which files directly or indirectly include this file:

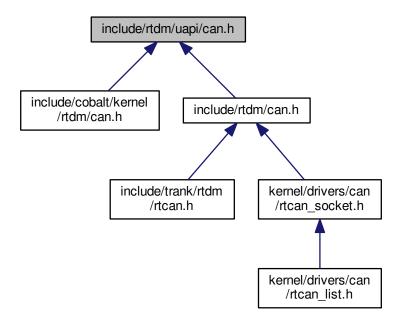

## **Data Structures**

• struct can\_bittime\_std

Standard bit-time parameters according to Bosch.

struct can\_bittime\_btr

Hardware-specific BTR bit-times.

• struct can bittime

Custom CAN bit-time definition.

struct can\_filter

Filter for reception of CAN messages.

struct sockaddr\_can

Socket address structure for the CAN address family.

• struct can\_frame

Raw CAN frame.

## Macros

• #define AF\_CAN 29

CAN address family.

• #define PF\_CAN AF\_CAN

CAN protocol family.

#define SOL\_CAN\_RAW 103

CAN socket levels.

#### **CAN ID masks**

Bit masks for masking CAN IDs

#define CAN\_EFF\_MASK 0x1FFFFFFF

Bit mask for extended CAN IDs.

• #define CAN SFF MASK 0x000007FF

Bit mask for standard CAN IDs.

#### **CAN ID flags**

Flags within a CAN ID indicating special CAN frame attributes

#define CAN EFF FLAG 0x80000000

Extended frame.

#define CAN RTR FLAG 0x40000000

Remote transmission frame.

#define CAN\_ERR\_FLAG 0x20000000

Error frame (see Errors), not valid in struct can\_filter.

#define CAN INV FILTER CAN ERR FLAG

Invert CAN filter definition, only valid in struct can\_filter.

#### **Particular CAN protocols**

Possible protocols for the PF CAN protocol family Currently only the RAW protocol is supported.

#define CAN\_RAW 1

Raw protocol of PF\_CAN, applicable to socket type SOCK\_RAW.

#### **CAN** controller modes

Special CAN controllers modes, which can be or'ed together.

Note

These modes are hardware-dependent. Please consult the hardware manual of the CAN controller for more detailed information.

- #define CAN\_CTRLMODE\_LISTENONLY 0x1#define CAN\_CTRLMODE\_LOOPBACK 0x2
- #define CAN CTRLMODE 3 SAMPLES 0x4

#### **Timestamp switches**

Arguments to pass to RTCAN RTIOC TAKE TIMESTAMP

#define RTCAN\_TAKE\_NO\_TIMESTAMPS 0

Switch off taking timestamps.

#define RTCAN TAKE TIMESTAMPS 1

Do take timestamps.

#### **RAW** socket options

Setting and getting CAN RAW socket options.

• #define CAN RAW FILTER 0x1

CAN filter definition.

• #define CAN\_RAW\_ERR\_FILTER 0x2

CAN error mask.

#define CAN\_RAW\_LOOPBACK 0x3

CAN TX loopback.

#define CAN\_RAW\_RECV\_OWN\_MSGS 0x4

CAN receive own messages.

#### **IOCTLs**

CAN device IOCTLs

- #define SIOCGIFINDEX defined\_by\_kernel\_header\_file Get CAN interface index by name.
- #define SIOCSCANBAUDRATE \_IOW(RTIOC\_TYPE\_CAN, 0x01, struct ifreq)
   Set baud rate.
- #define SIOCGCANBAUDRATE \_IOWR(RTIOC\_TYPE\_CAN, 0x02, struct ifreq)
   Get baud rate.
- #define SIOCSCANCUSTOMBITTIME \_IOW(RTIOC\_TYPE\_CAN, 0x03, struct ifreq)
   Set custom bit time parameter.
- #define SIOCGCANCUSTOMBITTIME \_IOWR(RTIOC\_TYPE\_CAN, 0x04, struct ifreq)

  Get custom bit-time parameters.
- #define SIOCSCANMODE \_IOW(RTIOC\_TYPE\_CAN, 0x05, struct ifreq)
   Set operation mode of CAN controller.
- #define SIOCGCANSTATE \_IOWR(RTIOC\_TYPE\_CAN, 0x06, struct ifreq)
   Get current state of CAN controller.
- #define SIOCSCANCTRLMODE \_IOW(RTIOC\_TYPE\_CAN, 0x07, struct ifreq)
   Set special controller modes.
- #define SIOCGCANCTRLMODE \_IOWR(RTIOC\_TYPE\_CAN, 0x08, struct ifreq)
   Get special controller modes.
- #define RTCAN\_RTIOC\_TAKE\_TIMESTAMP\_IOW(RTIOC\_TYPE\_CAN, 0x09, int)
   Enable or disable storing a high precision timestamp upon reception of a CAN frame.
- #define RTCAN\_RTIOC\_RCV\_TIMEOUT\_IOW(RTIOC\_TYPE\_CAN, 0x0A, nanosecs\_rel\_t)
   Specify a reception timeout for a socket.
- #define RTCAN\_RTIOC\_SND\_TIMEOUT\_IOW(RTIOC\_TYPE\_CAN, 0x0B, nanosecs\_rel\_t) Specify a transmission timeout for a socket.

#### **Error mask**

Error class (mask) in can\_id field of struct can\_frame to be used with CAN\_RAW\_ERR\_FILTER.

**Note:** Error reporting is hardware dependent and most CAN controllers report less detailed error conditions than the SJA1000.

**Note:** In case of a bus-off error condition (CAN\_ERR\_BUSOFF), the CAN controller is **not** restarted automatically. It is the application's responsibility to react appropriately, e.g. calling CAN\_MODE\_S-TART.

**Note:** Bus error interrupts (CAN\_ERR\_BUSERROR) are enabled when an application is calling a Recv function on a socket listening on bus errors (using CAN\_RAW\_ERR\_FILTER). After one bus error has occured, the interrupt will be disabled to allow the application time for error processing and to efficiently avoid bus error interrupt flooding.

- #define CAN ERR TX TIMEOUT 0x00000001U
  - TX timeout (netdevice driver)
- #define CAN\_ERR\_LOSTARB 0x00000002U

Lost arbitration (see data[0])

- #define CAN\_ERR\_CRTL 0x00000004U
  - Controller problems (see data[1])
- #define CAN\_ERR\_PROT 0x00000008U

Protocol violations (see data[2], data[3])

- #define CAN ERR TRX 0x00000010U
  - Transceiver status (see data[4])
- #define CAN ERR ACK 0x00000020U

Received no ACK on transmission.

#define CAN ERR BUSOFF 0x00000040U

Bus off.

- #define CAN\_ERR\_BUSERROR 0x00000080U
   Bus error (may flood!)
- #define CAN\_ERR\_RESTARTED 0x00000100U
   Controller restarted.
- #define CAN\_ERR\_MASK 0x1FFFFFFU

  Omit EFF, RTR, ERR flags.

#### **Arbitration lost error**

Error in the data[0] field of struct can\_frame.

 #define CAN\_ERR\_LOSTARB\_UNSPEC 0x00 unspecified

#### **Controller problems**

Error in the data[1] field of struct can\_frame.

- #define CAN\_ERR\_CRTL\_UNSPEC 0x00 unspecified
- #define CAN\_ERR\_CRTL\_RX\_OVERFLOW 0x01 RX buffer overflow.
- #define CAN\_ERR\_CRTL\_TX\_OVERFLOW 0x02
   TX buffer overflow.
- #define CAN\_ERR\_CRTL\_RX\_WARNING 0x04 reached warning level for RX errors
- #define CAN\_ERR\_CRTL\_TX\_WARNING 0x08
   reached warning level for TX errors
- #define CAN\_ERR\_CRTL\_RX\_PASSIVE 0x10
   reached passive level for RX errors
- #define CAN\_ERR\_CRTL\_TX\_PASSIVE 0x20
   reached passive level for TX errors

### Protocol error type

Error in the data[2] field of struct can frame.

- #define CAN\_ERR\_PROT\_UNSPEC 0x00
   unspecified
- #define CAN\_ERR\_PROT\_BIT 0x01 single bit error
- #define CAN\_ERR\_PROT\_FORM 0x02
- frame format error
   #define CAN\_ERR\_PROT\_STUFF 0x04
- bit stuffing error#define CAN\_ERR\_PROT\_BIT0 0x08
- unable to send dominant bit

   #define CAN\_ERR\_PROT\_BIT1 0x10
  - unable to send recessive bit
- #define CAN\_ERR\_PROT\_OVERLOAD 0x20 bus overload
- #define CAN\_ERR\_PROT\_ACTIVE 0x40
- #define CAN\_ERR\_PROT\_TX 0x80
- error occured on transmission

active error announcement

#### **Protocol error location**

Error in the data[4] field of struct can\_frame.

- #define CAN\_ERR\_PROT\_LOC\_UNSPEC 0x00
   unspecified
- #define CAN\_ERR\_PROT\_LOC\_SOF 0x03 start of frame
- #define CAN\_ERR\_PROT\_LOC\_ID28\_21 0x02
   ID bits 28 21 (SFF: 10 3)
- #define CAN\_ERR\_PROT\_LOC\_ID20\_18 0x06
   ID bits 20 18 (SFF: 2 0 )
- #define CAN\_ERR\_PROT\_LOC\_SRTR 0x04 substitute RTR (SFF: RTR)
- #define CAN\_ERR\_PROT\_LOC\_IDE 0x05 identifier extension
- #define CAN\_ERR\_PROT\_LOC\_ID17\_13 0x07
   ID bits 17-13.
- #define CAN\_ERR\_PROT\_LOC\_ID12\_05 0x0F ID bits 12-5.
- #define CAN\_ERR\_PROT\_LOC\_ID04\_00 0x0E
   ID bits 4-0.
- #define CAN\_ERR\_PROT\_LOC\_RTR 0x0C RTR.
- #define CAN\_ERR\_PROT\_LOC\_RES1 0x0D reserved bit 1
- #define CAN\_ERR\_PROT\_LOC\_RES0 0x09
   reserved bit 0
- #define CAN\_ERR\_PROT\_LOC\_DLC 0x0B data length code
- #define CAN\_ERR\_PROT\_LOC\_DATA 0x0A data section
- #define CAN\_ERR\_PROT\_LOC\_CRC\_SEQ 0x08
   CRC sequence.
- #define CAN\_ERR\_PROT\_LOC\_CRC\_DEL 0x18
   CRC delimiter.
- #define CAN\_ERR\_PROT\_LOC\_ACK 0x19
   ACK slot.
- #define CAN\_ERR\_PROT\_LOC\_ACK\_DEL 0x1B ACK delimiter.
- #define CAN\_ERR\_PROT\_LOC\_EOF 0x1A
   end of frame
- #define CAN\_ERR\_PROT\_LOC\_INTERM 0x12 intermission
- #define CAN\_ERR\_TRX\_UNSPEC 0x00 0000 0000
- #define CAN\_ERR\_TRX\_CANH\_NO\_WIRE 0x04 0000 0100
- #define CAN\_ERR\_TRX\_CANH\_SHORT\_TO\_BAT 0x05 0000 0101
- #define CAN\_ERR\_TRX\_CANH\_SHORT\_TO\_VCC 0x06 0000 0110
- #define CAN\_ERR\_TRX\_CANH\_SHORT\_TO\_GND 0x07 0000 0111
- #define CAN\_ERR\_TRX\_CANL\_NO\_WIRE 0x40 0100 0000
- #define CAN\_ERR\_TRX\_CANL\_SHORT\_TO\_BAT 0x50 0101 0000
- #define CAN\_ERR\_TRX\_CANL\_SHORT\_TO\_VCC 0x60 0110 0000
- #define CAN\_ERR\_TRX\_CANL\_SHORT\_TO\_GND 0x70 0111 0000
- #define CAN\_ERR\_TRX\_CANL\_SHORT\_TO\_CANH 0x80 1000 0000

## **Typedefs**

```
• typedef uint32_t can_id_t
```

Type of CAN id (see CAN\_xxx\_MASK and CAN\_xxx\_FLAG)

typedef can\_id\_t can\_err\_mask\_t

Type of CAN error mask.

typedef uint32\_t can\_baudrate\_t

Baudrate definition in bits per second.

typedef enum CAN\_BITTIME\_TYPE can\_bittime\_type\_t

See CAN BITTIME TYPE.

typedef enum CAN\_MODE can\_mode\_t

See CAN\_MODE.

typedef int can\_ctrlmode\_t

See CAN\_CTRLMODE.

typedef enum CAN\_STATE can\_state\_t

See CAN STATE.

typedef struct can\_filter can\_filter\_t

Filter for reception of CAN messages.

• typedef struct can\_frame can\_frame\_t

Raw CAN frame.

## **Enumerations**

enum CAN\_BITTIME\_TYPE { CAN\_BITTIME\_STD, CAN\_BITTIME\_BTR }
 Supported CAN bit-time types.

### **CAN** operation modes

Modes into which CAN controllers can be set

enum CAN\_MODE { CAN\_MODE\_STOP = 0, CAN\_MODE\_START, CAN\_MODE\_SLEEP }

#### **CAN** controller states

States a CAN controller can be in.

```
    enum CAN_STATE {
        CAN_STATE_ERROR_ACTIVE = 0, CAN_STATE_ACTIVE = 0, CAN_STATE_ERROR_WARNING = 1, CAN_STATE_BUS_WARNING = 1,
        CAN_STATE_ERROR_PASSIVE = 2, CAN_STATE_BUS_PASSIVE = 2, CAN_STATE_BUS_OFF, CAN_STATE_SCANNING_BAUDRATE,
        CAN_STATE_STOPPED, CAN_STATE_SLEEPING }
```

#### 8.13.1 Detailed Description

Real-Time Driver Model for RT-Socket-CAN, CAN device profile header.

Note

Copyright (C) 2006 Wolfgang Grandegger wg@grandegger.com Copyright (C) 2005, 2006 Sebastian Smolorz Sebastian.Smolorz@stud.uni-hannover.de

This RTDM CAN device profile header is based on:

include/linux/can.h, include/linux/socket.h, net/can/pf\_can.h in linux-can.patch, a CAN socket framework for Linux

Copyright (C) 2004, 2005, Robert Schwebel, Benedikt Spranger, Marc Kleine-Budde, Pengutronix

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU


General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

## 8.14 include/cobalt/kernel/rtdm/cobalt.h File Reference

This file is part of the Xenomai project.

Include dependency graph for cobalt.h:



#### 8.14.1 Detailed Description

This file is part of the Xenomai project.

Note

Copyright (C) 2013 Philippe Gerum rpm@xenomai.org


Xenomai is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.


You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

## 8.15 include/cobalt/kernel/rtdm/fd.h File Reference

Include dependency graph for fd.h:

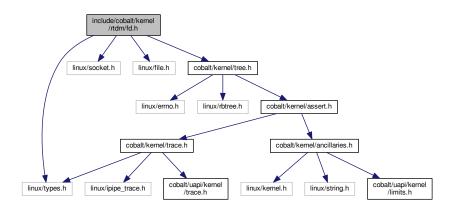

This graph shows which files directly or indirectly include this file:

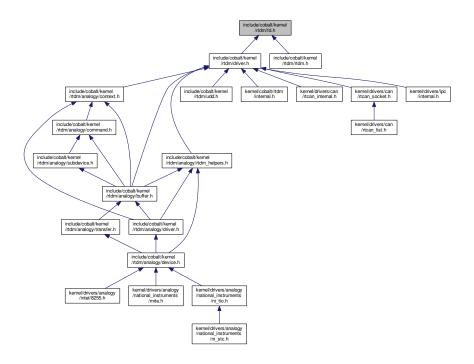

## **Data Structures**

• struct rtdm\_fd\_ops

RTDM file operation descriptor.

## **Functions**

• int rtdm\_open\_handler (struct rtdm\_fd \*fd, int oflags)

Open handler for named devices.

int rtdm\_socket\_handler (struct rtdm\_fd \*fd, int protocol)

Socket creation handler for protocol devices.

void rtdm\_close\_handler (struct rtdm\_fd \*fd)

Close handler.

• int rtdm\_ioctl\_handler (struct rtdm\_fd \*fd, unsigned int request, void \_\_user \*arg)

IOCTL handler.

ssize\_t rtdm\_read\_handler (struct rtdm\_fd \*fd, void \_\_user \*buf, size\_t size)

Read handler.

• ssize\_t rtdm\_write\_handler (struct rtdm\_fd \*fd, const void \_\_user \*buf, size\_t size)

Write handler.

ssize t rtdm recvmsg handler (struct rtdm fd \*fd, struct msghdr \*msg, int flags)

Receive message handler.

ssize t rtdm sendmsg handler (struct rtdm fd \*fd, const struct msghdr \*msg, int flags)

Transmit message handler.

int rtdm\_select\_handler (struct rtdm\_fd \*fd, struct xnselector \*selector, unsigned int type, unsigned int index)

Select handler.

• int rtdm mmap handler (struct rtdm fd \*fd, struct vm area struct \*vma)

Memory mapping handler.

unsigned long rtdm\_get\_unmapped\_area\_handler (struct rtdm\_fd \*fd, unsigned long len, unsigned long pgoff, unsigned long flags)

Allocate mapping region in address space.

struct rtdm\_fd \* rtdm\_fd\_get (int ufd, unsigned int magic)

Retrieve and lock a RTDM file descriptor.

int rtdm fd lock (struct rtdm fd \*fd)

Hold a reference on a RTDM file descriptor.

void rtdm\_fd\_put (struct rtdm\_fd \*fd)

Release a RTDM file descriptor obtained via rtdm\_fd\_get()

void rtdm fd unlock (struct rtdm fd \*fd)

Drop a reference on a RTDM file descriptor.

int rtdm\_fd\_select (int ufd, struct xnselector \*selector, unsigned int type)

Bind a selector to specified event types of a given file descriptor.

#### 8.15.1 Detailed Description

operation handlers

### 8.15.2 Function Documentation

8.15.2.1 struct rtdm\_fd\* rtdm\_fd\_get ( int ufd, unsigned int magic )

Retrieve and lock a RTDM file descriptor.

**Parameters** 

in	ufd	User-side file descriptor

in	magic	Magic word for lookup validation

Returns

Pointer to the RTDM file descriptor matching ufd, or ERR\_PTR(-EBADF).

Note

The file descriptor returned must be later released by a call to rtdm\_fd\_put().

Tags

#### unrestricted

Referenced by rtdm\_fd\_select().

8.15.2.2 int rtdm\_fd\_lock ( struct rtdm\_fd \* fd )

Hold a reference on a RTDM file descriptor.

**Parameters** 

in	fd	Target file descriptor
----	----	------------------------

Note

rtdm\_fd\_lock() increments the reference counter of fd. You only need to call this function in special scenarios, e.g. when keeping additional references to the file descriptor that have different lifetimes. Only use rtdm\_fd\_lock() on descriptors that are currently locked via an earlier rtdm\_fd\_get()/rtdm\_fd\_lock() or while running a device operation handler.

Tags

unrestricted

8.15.2.3 void rtdm fd put ( struct rtdm fd \* fd )

Release a RTDM file descriptor obtained via rtdm\_fd\_get()

**Parameters** 

in	fd	RTDM file descriptor to release
----	----	---------------------------------

Note

Every call to rtdm\_fd\_get() must be matched by a call to rtdm\_fd\_put().

Tags

unrestricted

Referenced by rtdm\_fd\_select().

8.15.2.4 int rtdm\_fd\_select ( int ufd, struct xnselector \* selector, unsigned int type )

Bind a selector to specified event types of a given file descriptor.

This function is invoked by higher RTOS layers implementing select-like services. It shall not be called directly by RTDM drivers.

#### **Parameters**

in	ufd	User-side file descriptor to bind to
in,out	selector	Selector object that shall be bound to the given event
in	type	Event type the caller is interested in

#### Returns

0 on success, otherwise:

- -EBADF is returned if the file descriptor ufd cannot be resolved.
- -EINVAL is returned if type is invalid.

## Tags

#### task-unrestricted

References rtdm\_fd\_get(), rtdm\_fd\_put(), splnone, and spltest.

8.15.2.5 void rtdm\_fd\_unlock ( struct rtdm\_fd \* fd )

Drop a reference on a RTDM file descriptor.

#### **Parameters**

in	fd	Target file descriptor

#### Note

Every call to rtdm\_fd\_lock() must be matched by a call to rtdm\_fd\_unlock().


### Tags

unrestricted

# 8.16 include/cobalt/kernel/rtdm/ipc.h File Reference

This file is part of the Xenomai project.

Include dependency graph for ipc.h:

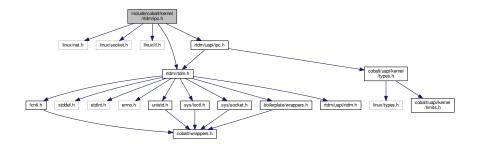

## 8.16.1 Detailed Description

This file is part of the Xenomai project.

Note

Copyright (C) 2009 Philippe Gerum rpm@xenomai.org

Xenomai is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.


## 8.17 include/rtdm/ipc.h File Reference

This file is part of the Xenomai project.

Include dependency graph for ipc.h:

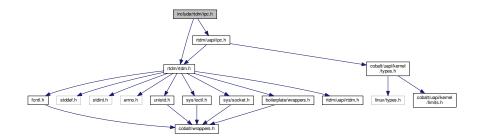

This graph shows which files directly or indirectly include this file:

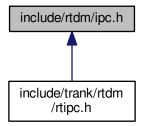

## 8.17.1 Detailed Description

This file is part of the Xenomai project.

Note

Copyright (C) 2009 Philippe Gerum rpm@xenomai.org

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA.


# 8.18 include/rtdm/uapi/ipc.h File Reference

This file is part of the Xenomai project.

Include dependency graph for ipc.h:



This graph shows which files directly or indirectly include this file:

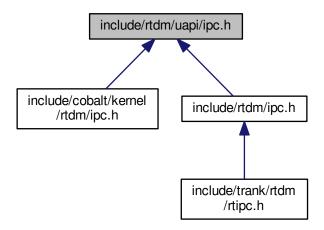

#### **Data Structures**

struct rtipc\_port\_label

Port label information structure.

struct sockaddr\_ipc

Socket address structure for the RTIPC address family.

## Macros

#### **XDDP** socket options

Setting and getting XDDP socket options.

- #define XDDP\_LABEL 1
  - XDDP label assignment.
- #define XDDP\_POOLSZ 2

XDDP local pool size configuration.

• #define XDDP\_BUFSZ 3

XDDP streaming buffer size configuration.

• #define XDDP\_MONITOR 4

XDDP monitoring callback.

#### **XDDP** events

Specific events occurring on XDDP channels, which can be monitored via the XDDP\_MONITOR socket option.

- #define XDDP EVTIN 1
  - Monitor writes to the non real-time endpoint.
- #define XDDP EVTOUT 2

Monitor reads from the non real-time endpoint.

- #define XDDP EVTDOWN 3
  - Monitor close from the non real-time endpoint.
- #define XDDP\_EVTNOBUF 4

Monitor memory shortage for non real-time datagrams.

#### **IDDP** socket options

Setting and getting IDDP socket options.

#define IDDP\_LABEL 1
 IDDP label assignment.

#define IDDP\_POOLSZ 2

IDDP local pool size configuration.

### **BUFP** socket options

Setting and getting BUFP socket options.

#define BUFP\_LABEL 1
 BUFP label assignment.
 #define BUFP\_BUFS7.2.2

• #define BUFP\_BUFSZ 2

BUFP buffer size configuration.

#### Socket level options

Setting and getting supported standard socket level options.

- #define SO\_SNDTIMEO defined\_by\_kernel\_header\_file
   IPCPROTO\_IDDP and IPCPROTO\_BUFP protocols support the standard SO\_SNDTIMEO socket option, from the SOL\_SOCKET level.
- #define SO\_RCVTIMEO defined\_by\_kernel\_header\_file
   All RTIPC protocols support the standard SO\_RCVTIMEO socket option, from the SOL\_SOCKET level.

## Typedefs

typedef int16\_t rtipc\_port\_t
 Port number type for the RTIPC address family.

#### Enumerations

## **RTIPC** protocol list

protocols for the PF\_RTIPC protocol family

enum { IPCPROTO\_IPC = 0, IPCPROTO\_XDDP = 1, IPCPROTO\_IDDP = 2, IPCPROTO\_BU-FP = 3 }

### **Functions**

#### Supported operations

Standard socket operations supported by the RTIPC protocols.

- int socket\_\_AF\_RTIPC (int domain=AF\_RTIPC, int type=SOCK\_DGRAM, int protocol)

  Create an endpoint for communication in the AF\_RTIPC domain.
- int close\_\_AF\_RTIPC (int sockfd)

Close a RTIPC socket descriptor.

- int bind\_\_AF\_RTIPC (int sockfd, const struct sockaddr\_ipc \*addr, socklen\_t addrlen)

  Bind a RTIPC socket to a port.
- int connect\_\_AF\_RTIPC (int sockfd, const struct sockaddr\_ipc \*addr, socklen\_t addrlen)

  Initiate a connection on a RTIPC socket.
- int setsockopt\_\_AF\_RTIPC (int sockfd, int level, int optname, const void \*optval, socklen\_t optlen)

Set options on RTIPC sockets.

• int getsockopt\_\_AF\_RTIPC (int sockfd, int level, int optname, void \*optval, socklen\_t \*optlen)

Get options on RTIPC sockets.

ssize\_t sendmsg\_\_AF\_RTIPC (int sockfd, const struct msghdr \*msg, int flags)
 Send a message on a RTIPC socket.

- ssize\_t recvmsg\_\_AF\_RTIPC (int sockfd, struct msghdr \*msg, int flags)
   Receive a message from a RTIPC socket.
- int getsockname\_\_AF\_RTIPC (int sockfd, struct sockaddr\_ipc \*addr, socklen\_t \*addrlen)

  Get socket name.
- int getpeername\_\_AF\_RTIPC (int sockfd, struct sockaddr\_ipc \*addr, socklen\_t \*addrlen)

  Get socket peer.

## 8.18.1 Detailed Description

This file is part of the Xenomai project.

Note

Copyright (C) 2009 Philippe Gerum rpm@xenomai.org


This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA.

## 8.19 include/cobalt/kernel/rtdm/rtdm.h File Reference

Include dependency graph for rtdm.h:

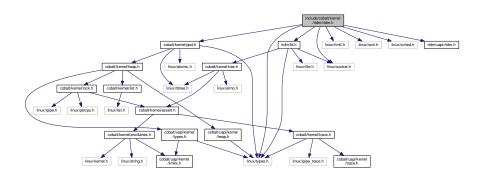

## 8.19.1 Detailed Description

Note

Copyright (C) 2005, 2006 Jan Kiszka jan.kiszka@web.de
Copyright (C) 2005 Joerg Langenberg joerg.langenberg@gmx.net


Xenomai is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

Xenomai is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.


You should have received a copy of the GNU General Public License along with Xenomai; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

## 8.20 include/rtdm/rtdm.h File Reference

Include dependency graph for rtdm.h:



This graph shows which files directly or indirectly include this file:

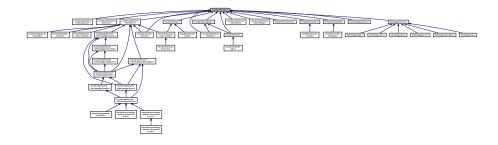

## 8.20.1 Detailed Description

Note

Copyright (C) 2005, 2006 Jan Kiszka jan.kiszka@web.de Copyright (C) 2005 Joerg Langenberg joerg.langenberg@gmx.net

Xenomai is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


Xenomai is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with Xenomai; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

## 8.21 include/rtdm/uapi/rtdm.h File Reference

Real-Time Driver Model for Xenomai, user API header.

This graph shows which files directly or indirectly include this file:

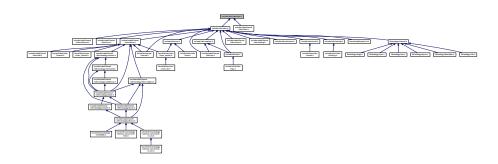

## **Data Structures**

struct rtdm\_device\_info
 Device information.

#### **Macros**

#### **API Versioning**

- #define RTDM API VER 9
  - Common user and driver API version.
- #define RTDM\_API\_MIN\_COMPAT\_VER 9

Minimum API revision compatible with the current release.

## RTDM\_TIMEOUT\_xxx

Special timeout values

- #define RTDM\_TIMEOUT\_INFINITE 0
   Block forever.
- #define RTDM\_TIMEOUT\_NONE (-1)
   Any negative timeout means non-blocking.

### RTDM\_CLASS\_xxx

Device classes

- #define RTDM\_CLASS\_PARPORT 1
- #define RTDM\_CLASS\_SERIAL 2
- #define RTDM\_CLASS\_CAN 3
- #define RTDM\_CLASS\_NETWORK 4
- #define RTDM\_CLASS\_RTMAC 5
- #define RTDM CLASS TESTING 6
- #define RTDM\_CLASS\_RTIPC 7
- #define RTDM\_CLASS\_COBALT 8
- #define RTDM\_CLASS\_UDD 9

- #define RTDM CLASS MEMORY 10
- #define RTDM CLASS MISC 223
- #define RTDM CLASS EXPERIMENTAL 224
- #define RTDM\_CLASS\_MAX 255

#### **Device Naming**

Maximum length of device names (excluding the final null character)

• #define RTDM\_MAX\_DEVNAME\_LEN 31

#### RTDM PURGE xxx BUFFER

Flags selecting buffers to be purged

- #define RTDM PURGE RX BUFFER 0x0001
- #define RTDM\_PURGE\_TX\_BUFFER 0x0002

#### **Common IOCTLs**

The following IOCTLs are common to all device rtdm profiles.

#define RTIOC\_DEVICE\_INFO \_IOR(RTIOC\_TYPE\_COMMON, 0x00, struct rtdm\_device\_-info)

Retrieve information about a device or socket.

#define RTIOC\_PURGE\_IOW(RTIOC\_TYPE\_COMMON, 0x10, int)

Purge internal device or socket buffers.

## **Typedefs**

typedef uint64\_t nanosecs\_abs\_t

RTDM type for representing absolute dates.

typedef int64\_t nanosecs\_rel\_t

RTDM type for representing relative intervals.

typedef struct rtdm\_device\_info rtdm\_device\_info\_t

Device information.

#### 8.21.1 Detailed Description

Real-Time Driver Model for Xenomai, user API header.

Note

```
Copyright (C) 2005, 2006 Jan Kiszka jan.kiszka@web.de
Copyright (C) 2005 Joerg Langenberg joerg.langenberg@gmx.net
```


This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA.

## 8.22 include/cobalt/kernel/rtdm/serial.h File Reference

Include dependency graph for serial.h:

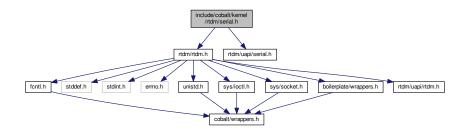

## 8.22.1 Detailed Description

Note

Copyright (C) 2005-2007 Jan Kiszka jan.kiszka@web.de

Xenomai is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


Xenomai is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with Xenomai; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.


## 8.23 include/rtdm/serial.h File Reference

Real-Time Driver Model for Xenomai, serial device profile header.

Include dependency graph for serial.h:

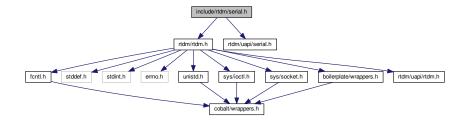

This graph shows which files directly or indirectly include this file:

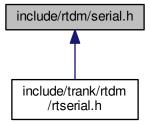

## 8.23.1 Detailed Description

Real-Time Driver Model for Xenomai, serial device profile header.

Note

Copyright (C) 2005-2007 Jan Kiszka jan.kiszka@web.de

Xenomai is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


Xenomai is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with Xenomai; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

# 8.24 include/rtdm/uapi/serial.h File Reference

Real-Time Driver Model for Xenomai, serial device profile header.

This graph shows which files directly or indirectly include this file:

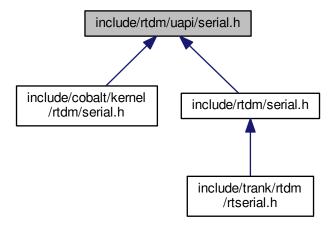

## **Data Structures**

struct rtser\_config

Serial device configuration.

struct rtser\_status

Serial device status.

struct rtser\_event

Additional information about serial device events.

## Macros

• #define RTSER\_RTIOC\_BREAK\_CTL\_IOR(RTIOC\_TYPE\_SERIAL, 0x06, int)

Set or clear break on UART output line.

## RTSER DEF BAUD

Default baud rate

• #define RTSER\_DEF\_BAUD 9600

## RTSER\_xxx\_PARITY

Number of parity bits

- #define RTSER NO PARITY 0x00
- #define RTSER ODD PARITY 0x01
- #define RTSER\_EVEN\_PARITY 0x03
- #define RTSER\_DEF\_PARITY RTSER\_NO\_PARITY

## RTSER XXX BITS

Number of data bits

• #define RTSER\_5\_BITS 0x00

- #define RTSER 6 BITS 0x01
- #define RTSER\_7\_BITS 0x02
- #define RTSER\_8\_BITS 0x03
- #define RTSER\_DEF\_BITS RTSER\_8\_BITS

#### RTSER xxx STOPB

Number of stop bits

- #define RTSER 1 STOPB 0x00
  - valid only in combination with 5 data bits
- #define RTSER\_1\_5\_STOPB 0x01
  - valid only in combination with 5 data bits
- #define RTSER\_2\_STOPB 0x01
  - valid only in combination with 5 data bits
- #define RTSER DEF STOPB RTSER 1 STOPB

valid only in combination with 5 data bits

#### RTSER xxx HAND

Handshake mechanisms

- #define RTSER NO\_HAND 0x00
- #define RTSER RTSCTS HAND 0x01
- #define RTSER\_DEF\_HAND RTSER\_NO\_HAND

#### RTSER RS485 xxx

RS485 mode with automatic RTS handling

- #define RTSER RS485 DISABLE 0x00
- #define RTSER\_RS485\_ENABLE 0x01
- #define RTSER\_DEF\_RS485 RTSER\_RS485\_DISABLE

#### RTSER FIFO xxx

Reception FIFO interrupt threshold

- #define RTSER\_FIFO\_DEPTH\_1 0x00
- #define RTSER FIFO DEPTH 4 0x40
- #define RTSER\_FIFO\_DEPTH\_8 0x80
- #define RTSER\_FIFO\_DEPTH\_14 0xC0
- #define RTSER\_DEF\_FIFO\_DEPTH RTSER\_FIFO\_DEPTH\_1

## RTSER\_TIMEOUT\_xxx

Special timeout values, see also RTDM\_TIMEOUT\_xxx

- #define RTSER TIMEOUT INFINITE RTDM TIMEOUT INFINITE
- #define RTSER TIMEOUT NONE RTDM TIMEOUT NONE
- #define RTSER\_DEF\_TIMEOUT RTDM\_TIMEOUT\_INFINITE

#### RTSER XXX TIMESTAMP HISTORY

Timestamp history control

- #define RTSER\_RX\_TIMESTAMP\_HISTORY 0x01
- #define RTSER\_DEF\_TIMESTAMP\_HISTORY 0x00

## RTSER\_EVENT\_xxx

Events bits

- #define RTSER EVENT RXPEND 0x01
- #define RTSER\_EVENT\_ERRPEND 0x02

- #define RTSER EVENT MODEMHI 0x04
- #define RTSER\_EVENT\_MODEMLO 0x08
- #define RTSER EVENT TXEMPTY 0x10
- #define RTSER DEF EVENT MASK 0x00

## RTSER\_SET\_xxx

Configuration mask bits

- #define RTSER SET BAUD 0x0001
- #define RTSER SET PARITY 0x0002
- #define RTSER SET DATA BITS 0x0004
- #define RTSER\_SET\_STOP\_BITS 0x0008
- #define RTSER\_SET\_HANDSHAKE 0x0010

- #define RTSER\_SET\_FIFO\_DEPTH 0x0020
  #define RTSER\_SET\_TIMEOUT\_RX 0x0100
  #define RTSER\_SET\_TIMEOUT\_TX 0x0200
  #define RTSER\_SET\_TIMEOUT\_EVENT 0x0400
- #define RTSER\_SET\_TIMESTAMP\_HISTORY 0x0800
- #define RTSER SET EVENT MASK 0x1000
- #define RTSER SET RS485 0x2000

## RTSER LSR xxx

Line status bits

- #define RTSER LSR DATA 0x01
- #define RTSER LSR OVERRUN ERR 0x02
- #define RTSER\_LSR\_PARITY\_ERR 0x04
- #define RTSER\_LSR\_FRAMING\_ERR 0x08
- #define RTSER\_LSR\_BREAK\_IND 0x10
- #define RTSER\_LSR\_THR\_EMTPY 0x20
  #define RTSER\_LSR\_TRANSM\_EMPTY 0x40
  #define RTSER\_LSR\_FIFO\_ERR 0x80
- #define RTSER\_SOFT\_OVERRUN\_ERR 0x0100

#### RTSER MSR xxx

Modem status bits

- #define RTSER MSR DCTS 0x01
- #define RTSER MSR DDSR 0x02
- #define RTSER MSR TERI 0x04
- #define RTSER MSR DDCD 0x08
- #define RTSER MSR CTS 0x10
- #define RTSER\_MSR\_DSR 0x20
- #define RTSER\_MSR\_RI 0x40
- #define RTSER\_MSR\_DCD 0x80

#### RTSER MCR xxx

Modem control bits

- #define RTSER\_MCR\_DTR 0x01
- #define RTSER\_MCR\_RTS 0x02
- #define RTSER MCR OUT1 0x04
- #define RTSER MCR OUT2 0x08
- #define RTSER MCR LOOP 0x10

## Sub-Classes of RTDM\_CLASS\_SERIAL

#define RTDM\_SUBCLASS\_16550A 0

## **IOCTLs**

Serial device IOCTLs

#define RTSER\_RTIOC\_GET\_CONFIG \_IOR(RTIOC\_TYPE\_SERIAL, 0x00, struct rtser\_config)

Get serial device configuration.

#define RTSER\_RTIOC\_SET\_CONFIG \_IOW(RTIOC\_TYPE\_SERIAL, 0x01, struct rtser\_config)

Set serial device configuration.

#define RTSER\_RTIOC\_GET\_STATUS \_IOR(RTIOC\_TYPE\_SERIAL, 0x02, struct rtser\_status)

Get serial device status.

- #define RTSER\_RTIOC\_GET\_CONTROL\_IOR(RTIOC\_TYPE\_SERIAL, 0x03, int)
   Get serial device's modem contol register.
- #define RTSER\_RTIOC\_SET\_CONTROL\_IOW(RTIOC\_TYPE\_SERIAL, 0x04, int)
   Set serial device's modem contol register.
- #define RTSER\_RTIOC\_WAIT\_EVENT \_IOR(RTIOC\_TYPE\_SERIAL, 0x05, struct rtser\_event)

Wait on serial device events according to previously set mask.

## RTSER\_BREAK\_xxx

#### Break control

• #define RTSER BREAK CLR 0x00

Serial device configuration.

#define RTSER\_BREAK\_SET 0x01

Serial device configuration.

#define RTIOC TYPE SERIAL RTDM CLASS SERIAL

Serial device configuration.

• typedef struct rtser config rtser config t

Serial device configuration.

typedef struct rtser\_status rtser\_status\_t

Serial device status.

typedef struct rtser\_event rtser\_event\_t

Additional information about serial device events.

## 8.24.1 Detailed Description

Real-Time Driver Model for Xenomai, serial device profile header.

Note

Copyright (C) 2005-2007 Jan Kiszka jan.kiszka@web.de

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA.

- 8.24.2 Macro Definition Documentation
- 8.24.2.1 #define RTSER\_RTIOC\_BREAK\_CTL\_IOR(RTIOC\_TYPE\_SERIAL, 0x06, int)

Set or clear break on UART output line.

**Parameters** 

in	arg	RTSER_BREAK_SET or RTSER_BREAK_CLR (int)
----	-----	--

Returns

0 on success, otherwise negative error code

Tags

task-unrestricted

Note

A set break condition may also be cleared on UART line reconfiguration.

8.24.2.2 #define RTSER\_RTIOC\_GET\_CONFIG \_IOR(RTIOC\_TYPE\_SERIAL, 0x00, struct rtser\_config)

Get serial device configuration.

**Parameters** 

out	arg	Pointer to configuration buffer (struct rtser_config)
-----	-----	---

Returns

0 on success, otherwise negative error code

Tags

task-unrestricted

8.24.2.3 #define RTSER\_RTIOC\_GET\_CONTROL\_IOR(RTIOC\_TYPE\_SERIAL, 0x03, int)

Get serial device's modem contol register.

**Parameters** 

out	arg	Pointer to variable receiving the content (int, see RTSER_MCR_xxx)

Returns

0 on success, otherwise negative error code

Tags

task-unrestricted

8.24.2.4 #define RTSER\_RTIOC\_GET\_STATUS \_IOR(RTIOC\_TYPE\_SERIAL, 0x02, struct rtser\_status)

Get serial device status.

#### **Parameters**

out	arg	Pointer to status buffer (struct rtser_status)
-----	-----	--

#### Returns

0 on success, otherwise negative error code

#### Tags

task-unrestricted

#### Note

The error states RTSER\_LSR\_OVERRUN\_ERR, RTSER\_LSR\_PARITY\_ERR, RTSER\_LSR\_FRAMING\_ERR, and RTSER\_SOFT\_OVERRUN\_ERR that may have occured during previous read accesses to the device will be saved for being reported via this IOCTL. Upon return from RTSER\_RTIOC\_GET\_STATUS, the saved state will be cleared.

8.24.2.5 #define RTSER\_RTIOC\_SET\_CONFIG \_IOW(RTIOC\_TYPE\_SERIAL, 0x01, struct rtser\_config)

Set serial device configuration.

#### **Parameters**

in	arg	Pointer to configuration buffer (struct rtser_config)
----	-----	---

#### Returns

0 on success, otherwise:

- -EPERM is returned if the caller's context is invalid, see note below.
- -ENOMEM is returned if a new history buffer for timestamps cannot be allocated.

## Tags

task-unrestricted

#### Note

If rtser\_config contains a valid timestamp\_history and the addressed device has been opened in non-real-time context, this IOCTL must be issued in non-real-time context as well. Otherwise, this command will fail.

## Examples:

cross-link.c.

8.24.2.6 #define RTSER\_RTIOC\_SET\_CONTROL\_IOW(RTIOC\_TYPE\_SERIAL, 0x04, int)

Set serial device's modem contol register.

#### **Parameters**

in	arg	New control register content (int, see RTSER_MCR_xxx)
----	-----	---

## Returns

0 on success, otherwise negative error code

## Tags

task-unrestricted

# 8.24.2.7 #define RTSER\_RTIOC\_WAIT\_EVENT \_IOR(RTIOC\_TYPE\_SERIAL, 0x05, struct rtser event)

Wait on serial device events according to previously set mask.

#### **Parameters**

out	arg	Pointer to event information buffer (struct rtser_event)
-----	-----	--

#### Returns

0 on success, otherwise:

- -EBUSY is returned if another task is already waiting on events of this device.
- -EBADF is returned if the file descriptor is invalid or the device has just been closed.

## Tags


mode-unrestricted

## Examples:

cross-link.c.

# 8.25 include/cobalt/kernel/rtdm/testing.h File Reference

Include dependency graph for testing.h:

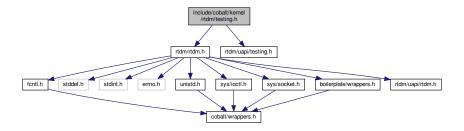

## 8.25.1 Detailed Description

Note

Copyright (C) 2005 Jan Kiszka jan.kiszka@web.de

Xenomai is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


Xenomai is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with Xenomai; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.


# 8.26 include/rtdm/testing.h File Reference

Real-Time Driver Model for Xenomai, testing device profile header.

Include dependency graph for testing.h:

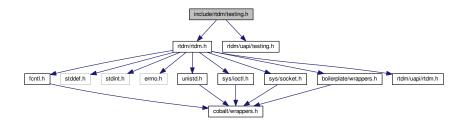

This graph shows which files directly or indirectly include this file:

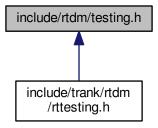

## 8.26.1 Detailed Description

Real-Time Driver Model for Xenomai, testing device profile header.

Note

Copyright (C) 2005 Jan Kiszka jan.kiszka@web.de

Xenomai is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


Xenomai is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with Xenomai; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

# 8.27 include/rtdm/uapi/testing.h File Reference

Real-Time Driver Model for Xenomai, testing device profile header.

This graph shows which files directly or indirectly include this file:

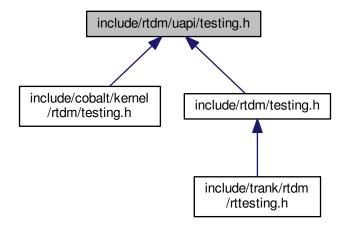

## Macros

## Sub-Classes of RTDM\_CLASS\_TESTING

- #define RTDM\_SUBCLASS\_TIMERBENCH 0 subclass name: "timerbench"
- #define RTDM\_SUBCLASS\_IRQBENCH 1

subclass name: "irqbench"

#define RTDM SUBCLASS SWITCHTEST 2

subclass name: "switchtest"

#define RTDM\_SUBCLASS\_RTDMTEST 3

subclase name: "rtdm"

## **IOCTLs**

Testing device IOCTLs

• #define RTTST\_RTIOC\_INTERM\_BENCH\_RES \_IOWR(RTIOC\_TYPE\_TESTING, 0x00, struct rttst\_interm\_bench\_res)

- #define RTTST\_RTIOC\_TMBENCH\_START \_IOW(RTIOC\_TYPE\_TESTING, 0x10, struct rttst\_tmbench\_config)
- #define RTTST\_RTIOC\_TMBENCH\_STOP \_IOWR(RTIOC\_TYPE\_TESTING, 0x11, struct rttst overall bench res)
- #define RTTST\_RTIOC\_IRQBENCH\_START \_IOW(RTIOC\_TYPE\_TESTING, 0x20, struct rttst irgbench config)
- #define RTTST RTIOC IRQBENCH STOP IO(RTIOC TYPE TESTING, 0x21)
- #define RTTST\_RTIOC\_IRQBENCH\_GET\_STATS \_IOR(RTIOC\_TYPE\_TESTING, 0x22, struct rttst\_irgbench\_stats)
- #define RTTST RTIOC IRQBENCH WAIT IRQ IO(RTIOC TYPE TESTING, 0x23)
- #define RTTST RTIOC IRQBENCH REPLY IRQ IO(RTIOC TYPE TESTING, 0x24)
- #define RTTST\_RTIOC\_SWTEST\_SET\_TASKS\_COUNT \_IOW(RTIOC\_TYPE\_TESTING, 0x30, unsigned long)
- #define RTTST\_RTIOC\_SWTEST\_SET\_CPU \_IOW(RTIOC\_TYPE\_TESTING, 0x31, unsigned long)
- #define RTTST\_RTIOC\_SWTEST\_REGISTER\_UTASK \_IOW(RTIOC\_TYPE\_TESTING, 0x32, struct rttst\_swtest\_task)
- #define RTTST\_RTIOC\_SWTEST\_CREATE\_KTASK\_IOWR(RTIOC\_TYPE\_TESTING, 0x33, struct rttst\_swtest\_task)
- #define RTTST\_RTIOC\_SWTEST\_PEND \_IOR(RTIOC\_TYPE\_TESTING, 0x34, struct rttst\_swtest task)
- #define RTTST\_RTIOC\_SWTEST\_SWITCH\_TO \_IOR(RTIOC\_TYPE\_TESTING, 0x35, struct rttst swtest dir)
- #define RTTST\_RTIOC\_SWTEST\_GET\_SWITCHES\_COUNT \_IOR(RTIOC\_TYPE\_TESTIN-G, 0x36, unsigned long)
- #define RTTST\_RTIOC\_SWTEST\_GET\_LAST\_ERROR \_IOR(RTIOC\_TYPE\_TESTING, 0x37, struct rttst swtest error)
- #define RTTST\_RTIOC\_SWTEST\_SET\_PAUSE \_IOW(RTIOC\_TYPE\_TESTING, 0x38, unsigned long)
- #define RTTST\_RTIOC\_RTDM\_DEFER\_CLOSE \_IOW(RTIOC\_TYPE\_TESTING, 0x40, unsigned long)

## 8.27.1 Detailed Description

Real-Time Driver Model for Xenomai, testing device profile header.

Note

Copyright (C) 2005 Jan Kiszka jan.kiszka@web.de

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA.

## 8.28 include/cobalt/kernel/rtdm/udd.h File Reference

Copyright (C) 2014 Philippe Gerum rpm@xenomai.org

Include dependency graph for udd.h:

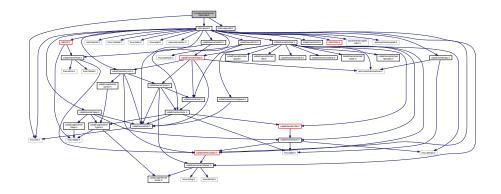

## **Data Structures**

- struct udd\_memregion
- struct udd device
- struct udd device::udd reserved

Reserved to the UDD core.

#### Macros

• #define UDD\_IRQ\_NONE 0

No IRQ managed.

• #define UDD\_IRQ\_CUSTOM (-1)

IRQ directly managed from the mini-driver on top of the UDD core.

## Memory types for mapping

Types of memory for mapping

The UDD core implements a default -> mmap() handler which first attempts to hand over the request to the corresponding handler defined by the mini-driver. If not present, the UDD core establishes the mapping automatically, depending on the memory type defined for the region.

- #define UDD\_MEM\_NONE 0
  - No memory region.
- #define UDD\_MEM\_PHYS 1

Physical I/O memory region.

- #define UDD\_MEM\_LOGICAL 2
  - Kernel logical memory region (e.g.
- #define UDD MEM VIRTUAL 3

Virtual memory region with no direct physical mapping (e.g.

## **Functions**

• int udd register device (struct udd device \*udd)

Register a UDD device.

int udd\_unregister\_device (struct udd\_device \*udd)

Unregister a UDD device.

struct udd\_device \* udd\_get\_device (struct rtdm\_fd \*fd)

RTDM file descriptor to target UDD device.

void udd\_notify\_event (struct udd\_device \*udd)

Notify an IRQ event for an unmanaged interrupt.

void udd\_post\_irq\_enable (int irq)

Post a request for enabling an IRQ line.

void udd\_post\_irq\_disable (int irq)

Post a request for disabling an IRQ line.

## 8.28.1 Detailed Description

Copyright (C) 2014 Philippe Gerum rpm@xenomai.org Xenomai is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

## 8.29 include/rtdm/uapi/udd.h File Reference

This file is part of the Xenomai project.

This graph shows which files directly or indirectly include this file:

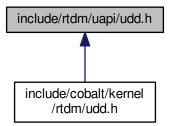

## **Data Structures**

struct udd signotify

UDD event notification descriptor.

#### Macros

## UDD\_IOCTL

IOCTL requests

#define UDD\_RTIOC\_IRQEN\_IO(RTDM\_CLASS\_UDD, 0)
 Enable the interrupt line.

- #define UDD\_RTIOC\_IRQDIS\_IO(RTDM\_CLASS\_UDD, 1)

  Disable the interrupt line.
- #define UDD\_RTIOC\_IRQSIG\_IOW(RTDM\_CLASS\_UDD, 2, struct udd\_signotify)
   Enable/Disable signal notification upon interrupt event.

## 8.29.1 Detailed Description

This file is part of the Xenomai project.

Author

Copyright (C) 2014 Philippe Gerum rpm@xenomai.org

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA.


## 8.30 include/rtdm/analogy.h File Reference

Analogy for Linux, library facilities.

Include dependency graph for analogy.h:



This graph shows which files directly or indirectly include this file:



## **Data Structures**

struct a4l descriptor

Structure containing device-information useful to users.

#### Macros

## **ANALOGY XXX DESC**

Constants used as argument so as to define the description depth to recover

#define A4L\_BSC\_DESC 0x0

BSC stands for basic descriptor (device data)

• #define A4L CPLX DESC 0x1

CPLX stands for complex descriptor (subdevice + channel + range data)

## 8.30.1 Detailed Description

Analogy for Linux, library facilities.

Note

```
Copyright (C) 1997-2000 David A. Schleef ds@schleef.org
Copyright (C) 2008 Alexis Berlemont alexis.berlemont@free.fr
```

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA.

# 8.31 include/rtdm/uapi/analogy.h File Reference

Analogy for Linux, UAPI bits.

This graph shows which files directly or indirectly include this file:

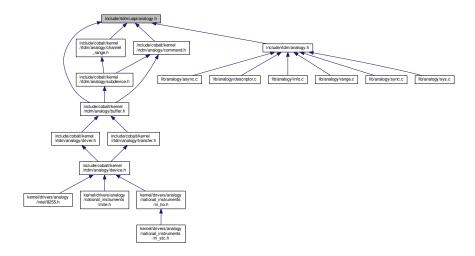

## **Data Structures**

struct a4l\_cmd\_desc

Structure describing the asynchronous instruction.

• struct a4l\_instruction

Structure describing the synchronous instruction.

struct a4l\_instruction\_list

Structure describing the list of synchronous instructions.

## Macros

• #define A4L\_RNG\_FACTOR 1000000

Constant for internal use only (must not be used by driver developer).

• #define A4L\_RNG\_VOLT\_UNIT 0x0

Volt unit range flag.

#define A4L\_RNG\_MAMP\_UNIT 0x1

MilliAmpere unit range flag.

• #define A4L\_RNG\_NO\_UNIT 0x2

No unit range flag.

• #define A4L\_RNG\_EXT\_UNIT 0x4

External unit range flag.

• #define A4L\_RNG\_UNIT(x)

Macro to retrieve the range unit from the range flags.

#define A4L\_INSN\_WAIT\_MAX 100000

Maximal wait duration.

#### ANALOGY\_CMD\_xxx

Common command flags definitions

- #define A4L\_CMD\_SIMUL 0x1

  Parent are not at the account of the common of the com
  - Do not execute the command, just check it.
- #define A4L\_CMD\_BULK 0x2

Perform data recovery / transmission in bulk mode.

• #define A4L CMD WRITE 0x4

Perform a command which will write data to the device.

#### TRIG xxx

Command triggers flags definitions

#define TRIG\_NONE 0x00000001

Never trigger.

• #define TRIG NOW 0x00000002

Trigger now + N ns.

• #define TRIG FOLLOW 0x00000004

Trigger on next lower level trig.

• #define TRIG\_TIME 0x00000008

Trigger at time N ns.

#define TRIG TIMER 0x00000010

Trigger at rate N ns.

#define TRIG COUNT 0x00000020

Trigger when count reaches N.

#define TRIG EXT 0x00000040

Trigger on external signal N.

• #define TRIG INT 0x00000080

Trigger on analogy-internal signal N.

#define TRIG\_OTHER 0x00000100

Driver defined trigger.

#define TRIG\_WAKE\_EOS 0x0020

Wake up on end-of-scan.

#define TRIG\_ROUND\_MASK 0x00030000

Trigger not implemented yet.

#define TRIG\_ROUND\_NEAREST 0x00000000

Trigger not implemented yet.

#define TRIG ROUND DOWN 0x00010000

Trigger not implemented yet.

#define TRIG\_ROUND\_UP 0x00020000

Trigger not implemented yet.

#define TRIG\_ROUND\_UP\_NEXT 0x00030000

Trigger not implemented yet.

## **Channel macros**

Specific precompilation macros and constants useful for the channels descriptors tab located in the command structure

#define CHAN(a) ((a) & 0xffff)

Channel indication macro.

• #define RNG(a) (((a) & 0xff) << 16)

Range definition macro.

#define AREF(a) (((a) & 0xf) << 24)</li>

Reference definition macro.

#define FLAGS(a) ((a) & CR\_FLAGS\_MASK)

Flags definition macro.

• #define PACK(a, b, c) (CHAN(a) | RNG(b) | AREF(c))

Channel + range + reference definition macro.

• #define PACK\_FLAGS(a, b, c, d) (CHAN(a) | RNG(b) | AREF(c) | FLAGS(d))

Channel + range + reference + flags definition macro.

#define AREF GROUND 0x00

Analog reference is analog ground.

#define AREF COMMON 0x01

Analog reference is analog common.

#define AREF DIFF 0x02

Analog reference is differential.

#define AREF\_OTHER 0x03

Analog reference is undefined.

## Subdevices types

Flags to define the subdevice type

- #define A4L\_SUBD\_UNUSED (A4L\_SUBD\_MASK\_SPECIAL|0x1)
   Unused subdevice.
- #define A4L\_SUBD\_AI (A4L\_SUBD\_MASK\_READ|0x2)

Analog input subdevice.

#define A4L\_SUBD\_AO (A4L\_SUBD\_MASK\_WRITE|0x4)

Analog output subdevice.

#define A4L SUBD DI (A4L SUBD MASK READ|0x8)

Digital input subdevice.

#define A4L SUBD DO (A4L SUBD MASK WRITE|0x10)

Digital output subdevice.

#define A4L\_SUBD\_DIO (A4L\_SUBD\_MASK\_SPECIAL|0x20)

Digital input/output subdevice.

#define A4L\_SUBD\_COUNTER (A4L\_SUBD\_MASK\_SPECIAL|0x40)

Counter subdevice.

#define A4L\_SUBD\_TIMER (A4L\_SUBD\_MASK\_SPECIAL|0x80)

Timer subdevice.

#define A4L\_SUBD\_MEMORY (A4L\_SUBD\_MASK\_SPECIAL|0x100)

Memory, EEPROM, DPRAM.

#define A4L SUBD CALIB (A4L SUBD MASK SPECIAL|0x200)

Calibration subdevice DACs.

#define A4L SUBD PROC (A4L SUBD MASK SPECIAL|0x400)

Processor, DSP.

#define A4L\_SUBD\_SERIAL (A4L\_SUBD\_MASK\_SPECIAL|0x800)

Serial IO subdevice.

#define A4L\_SUBD\_TYPES

Mask which gathers all the types.

## Subdevice features

Flags to define the subdevice's capabilities

- #define A4L SUBD CMD 0x1000
  - The subdevice can handle command (i.e it can perform asynchronous acquisition)
- #define A4L SUBD MMAP 0x8000

The subdevice support mmap operations (technically, any driver can do it; however, the developer might want that his driver must be accessed through read / write.

#### Subdevice status

Flags to define the subdevice's status

- #define A4L\_SUBD\_BUSY\_NR 0
  - The subdevice is busy, a synchronous or an asynchronous acquisition is occuring.
- #define A4L\_SUBD\_BUSY (1 << A4L\_SUBD\_BUSY\_NR)</li>
  - The subdevice is busy, a synchronous or an asynchronous acquisition is occuring.
- #define A4L SUBD CLEAN NR 1

The subdevice is about to be cleaned in the middle of the detach procedure.

#define A4L SUBD CLEAN (1 << A4L SUBD CLEAN NR)</li>

The subdevice is busy, a synchronous or an asynchronous acquisition is occuring.

## Instruction type

Flags to define the type of instruction

- #define A4L\_INSN\_READ (0 | A4L\_INSN\_MASK\_READ)
  - Read instruction.
- #define A4L\_INSN\_WRITE (1 | A4L\_INSN\_MASK\_WRITE)

Write instruction.

#define A4L INSN BITS

"Bits" instruction

#define A4L INSN CONFIG

Configuration instruction.

#define A4L INSN GTOD

Get time instruction.

#define A4L\_INSN\_WAIT

Wait instruction.

#define A4L INSN INTTRIG

Trigger instruction (to start asynchronous acquisition)

## Configuration instruction type

Values to define the type of configuration instruction

- #define A4L INSN CONFIG DIO INPUT 0
- #define A4L INSN CONFIG DIO OUTPUT 1
- #define A4L INSN CONFIG DIO OPENDRAIN 2
- #define A4L INSN CONFIG ANALOG TRIG 16
- #define A4L INSN CONFIG ALT SOURCE 20
- #define A4L\_INSN\_CONFIG\_DIGITAL\_TRIG 21
- #define A4L INSN CONFIG BLOCK SIZE 22
- #define A4L\_INSN\_CONFIG\_TIMER\_1 23
- #define A4L INSN CONFIG FILTER 24
- #define A4L INSN CONFIG CHANGE NOTIFY 25
- #define A4L\_INSN\_CONFIG\_SERIAL\_CLOCK 26
- #define A4L INSN CONFIG BIDIRECTIONAL DATA 27
- #define A4L\_INSN\_CONFIG\_DIO\_QUERY 28
- #define A4L INSN CONFIG PWM OUTPUT 29
- #define A4L\_INSN\_CONFIG\_GET\_PWM\_OUTPUT 30
- #define A4L\_INSN\_CONFIG\_ARM 31
- #define A4L INSN CONFIG DISARM 32
- #define A4L INSN CONFIG GET COUNTER STATUS 33
- #define A4L\_INSN\_CONFIG\_RESET 34
- #define A4L\_INSN\_CONFIG\_GPCT\_SINGLE\_PULSE\_GENERATOR 1001 /\* Use CTR as single pulsegenerator \*/
- #define A4L\_INSN\_CONFIG\_GPCT\_PULSE\_TRAIN\_GENERATOR 1002 /\* Use CTR as pulsetraingenerator \*/
- #define A4L\_INSN\_CONFIG\_GPCT\_QUADRATURE\_ENCODER 1003 /\* Use the counter as encoder \*/
- #define A4L INSN CONFIG SET GATE SRC 2001 /\* Set gate source \*/
- #define A4L\_INSN\_CONFIG\_GET\_GATE\_SRC 2002 /\* Get gate source \*/
- #define A4L INSN CONFIG SET CLOCK SRC 2003 /\* Set master clock source \*/
- #define A4L\_INSN\_CONFIG\_GET\_CLOCK\_SRC 2004 /\* Get master clock source \*/
- #define A4L\_INSN\_CONFIG\_SET\_OTHER\_SRC 2005 /\* Set other source \*/
- #define A4L INSN CONFIG SET COUNTER MODE 4097
- #define A4L INSN CONFIG SET ROUTING 4099
- #define A4L INSN CONFIG GET ROUTING 4109

#### Counter status bits

Status bits for INSN\_CONFIG\_GET\_COUNTER\_STATUS

- #define A4L\_COUNTER\_ARMED 0x1
- #define A4L\_COUNTER\_COUNTING 0x2
- #define A4L\_COUNTER\_TERMINAL\_COUNT 0x4

#### **IO** direction

Values to define the IO polarity

- #define A4L INPUT 0
- #define A4L OUTPUT 1
- #define A4L OPENDRAIN 2

#### **Events types**

Values to define the Analogy events. They might used to send some specific events through the instruction interface.

- #define A4L EV START 0x00040000
- #define A4L EV SCAN BEGIN 0x00080000
- #define A4L EV CONVERT 0x00100000
- #define A4L EV SCAN END 0x00200000
- #define A4L EV STOP 0x00400000

## 8.31.1 Detailed Description

Analogy for Linux, UAPI bits.

Note

```
Copyright (C) 1997-2000 David A. Schleef ds@schleef.org
Copyright (C) 2008 Alexis Berlemont alexis.berlemont@free.fr
```

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA.

#### 8.31.2 Macro Definition Documentation

8.31.2.1 #define A4L RNG FACTOR 1000000


Constant for internal use only (must not be used by driver developer).

Referenced by a4l\_dtoraw(), a4l\_find\_range(), a4l\_ftoraw(), a4l\_rawtod(), and a4l\_rawtof().


# 8.32 lib/analogy/internal.h File Reference

Analogy for Linux, internal declarations.

Include dependency graph for internal.h:

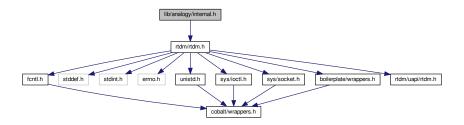

This graph shows which files directly or indirectly include this file:



## 8.32.1 Detailed Description

Analogy for Linux, internal declarations.

Note

Copyright (C) 2008 Alexis Berlemont alexis.berlemont@free.fr

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA.

# 8.33 lib/analogy/async.c File Reference

Analogy for Linux, command, transfer, etc.

Include dependency graph for async.c:

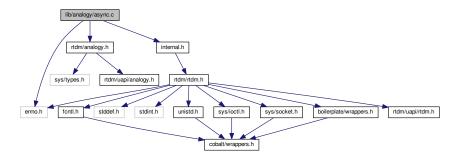

## **Functions**

- int a4l\_snd\_command (a4l\_desc\_t \*dsc, a4l\_cmd\_t \*cmd)

  Send a command to an Analoy device.
- int a4l\_snd\_cancel (a4l\_desc\_t \*dsc, unsigned int idx\_subd)

  Cancel an asynchronous acquisition.
- int a4l\_set\_bufsize (a4l\_desc\_t \*dsc, unsigned int idx\_subd, unsigned long size)

  Change the size of the asynchronous buffer.
- int a4l\_get\_bufsize (a4l\_desc\_t \*dsc, unsigned int idx\_subd, unsigned long \*size)

  Get the size of the asynchronous buffer.
- int a4l\_mark\_bufrw (a4l\_desc\_t \*dsc, unsigned int idx\_subd, unsigned long cur, unsigned long \*new)

Update the asynchronous buffer state.

- int a4l\_poll (a4l\_desc\_t \*dsc, unsigned int idx\_subd, unsigned long ms\_timeout)

  Get the available data count.
- int a4l\_mmap (a4l\_desc\_t \*dsc, unsigned int idx\_subd, unsigned long size, void \*\*ptr)

  Map the asynchronous ring-buffer into a user-space.
- int a4l\_async\_read (a4l\_desc\_t \*dsc, void \*buf, size\_t nbyte, unsigned long ms\_timeout)

  Perform asynchronous read operation on the analog input subdevice.
- int a4l\_async\_write (a4l\_desc\_t \*dsc, void \*buf, size\_t nbyte, unsigned long ms\_timeout)

  Perform asynchronous write operation on the analog input subdevice.

## 8.33.1 Detailed Description

Analogy for Linux, command, transfer, etc. related features

Note

```
Copyright (C) 1997-2000 David A. Schleef ds@schleef.org
Copyright (C) 2008 Alexis Berlemont alexis.berlemont@free.fr
```

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA.

# 8.34 lib/analogy/descriptor.c File Reference

Analogy for Linux, descriptor related features.

Include dependency graph for descriptor.c:

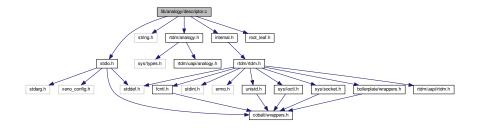

## **Functions**

- int a4l\_sys\_desc (int fd, a4l\_desc\_t \*dsc, int pass)
  - Get a descriptor on an attached device.
- int a4l\_open (a4l\_desc\_t \*dsc, const char \*fname)
  - Open an Analogy device and basically fill the descriptor.
- int a4l\_close (a4l\_desc\_t \*dsc)
  - Close the Analogy device related with the descriptor.
- int a4l fill desc (a4l desc t \*dsc)
  - Fill the descriptor with subdevices, channels and ranges data.
- int a4l\_get\_subdinfo (a4l\_desc\_t \*dsc, unsigned int subd, a4l\_sbinfo\_t \*\*info)
  - Get an information structure on a specified subdevice.
- int a4l\_get\_chinfo (a4l\_desc\_t \*dsc, unsigned int subd, unsigned int chan, a4l\_chinfo\_t \*\*info)

  Get an information structure on a specified channel.
- int a4l\_get\_rnginfo (a4l\_desc\_t \*dsc, unsigned int subd, unsigned int chan, unsigned int rng, a4l\_rnginfo\_t \*\*info)

Get an information structure on a specified range.

## 8.34.1 Detailed Description

Analogy for Linux, descriptor related features.

Note

```
Copyright (C) 1997-2000 David A. Schleef ds@schleef.org
Copyright (C) 2008 Alexis Berlemont alexis.berlemont@free.fr
```

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA.

# 8.35 lib/analogy/info.c File Reference

Analogy for Linux, device, subdevice, etc.

Include dependency graph for info.c:

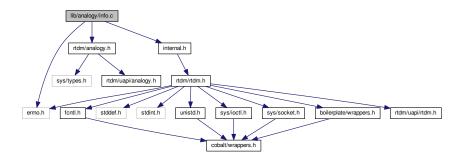

## 8.35.1 Detailed Description

Analogy for Linux, device, subdevice, etc. related features

Note

Copyright (C) 1997-2000 David A. Schleef ds@schleef.org Copyright (C) 2008 Alexis Berlemont alexis.berlemont@free.fr

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA.

# 8.36 lib/analogy/range.c File Reference

Analogy for Linux, range related features.

Include dependency graph for range.c:

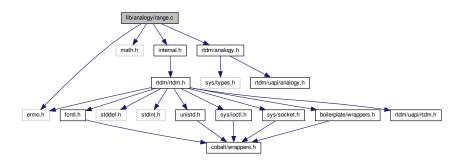

## **Functions**

• int a4l\_sizeof\_chan (a4l\_chinfo\_t \*chan)

Get the size in memory of an acquired element.

int a4l\_sizeof\_subd (a4l\_sbinfo\_t \*subd)

Get the size in memory of a digital acquired element.

• int a4l\_find\_range (a4l\_desc\_t \*dsc, unsigned int idx\_subd, unsigned int idx\_chan, unsigned long unit, double min, double max, a4l\_rnginfo\_t \*\*rng)

Find the must suitable range.

• int a4l rawtoul (a4l chinfo t \*chan, unsigned long \*dst, void \*src, int cnt)

Unpack raw data (from the driver) into unsigned long values.

• int a4l\_rawtof (a4l\_chinfo\_t \*chan, a4l\_rnginfo\_t \*rng, float \*dst, void \*src, int cnt)

Convert raw data (from the driver) to float-typed samples.

int a4l\_rawtod (a4l\_chinfo\_t \*chan, a4l\_rnginfo\_t \*rng, double \*dst, void \*src, int cnt)

Convert raw data (from the driver) to double-typed samples.

int a4l\_ultoraw (a4l\_chinfo\_t \*chan, void \*dst, unsigned long \*src, int cnt)

Pack unsigned long values into raw data (for the driver)

int a4l ftoraw (a4l chinfo t \*chan, a4l rnginfo t \*rng, void \*dst, float \*src, int cnt)

Convert float-typed samples to raw data (for the driver)

• int a4l\_dtoraw (a4l\_chinfo\_t \*chan, a4l\_rnginfo\_t \*rng, void \*dst, double \*src, int cnt)

Convert double-typed samples to raw data (for the driver)

## 8.36.1 Detailed Description

Analogy for Linux, range related features.

Note

Copyright (C) 1997-2000 David A. Schleef ds@schleef.org Copyright (C) 2008 Alexis Berlemont alexis.berlemont@free.fr

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA.

# 8.37 lib/analogy/root\_leaf.h File Reference

Analogy for Linux, root / leaf system.

This graph shows which files directly or indirectly include this file:



## 8.37.1 Detailed Description

Analogy for Linux, root / leaf system.

Note

Copyright (C) 1997-2000 David A. Schleef ds@schleef.org Copyright (C) 2008 Alexis Berlemont alexis.berlemont@free.fr

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA.

# 8.38 lib/analogy/sync.c File Reference

Analogy for Linux, instruction related features.

Include dependency graph for sync.c:

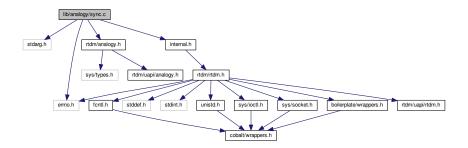

## **Functions**

• int a4l\_snd\_insnlist (a4l\_desc\_t \*dsc, a4l\_insnlst\_t \*arg)

Perform a list of synchronous acquisition misc operations.

• int a4l snd insn (a4l desc t \*dsc, a4l insn t \*arg)

Perform a synchronous acquisition misc operation.

• int a4l\_sync\_write (a4l\_desc\_t \*dsc, unsigned int idx\_subd, unsigned int chan\_desc, unsigned int ns\_delay, void \*buf, size\_t nbyte)

Perform a synchronous acquisition write operation.

• int a4l\_sync\_read (a4l\_desc\_t \*dsc, unsigned int idx\_subd, unsigned int chan\_desc, unsigned int ns\_delay, void \*buf, size\_t nbyte)

Perform a synchronous acquisition read operation.

int a4l sync dio (a4l desc t \*dsc, unsigned int idx subd, void \*mask, void \*buf)

Perform a synchronous acquisition digital acquisition.

• int a4l\_config\_subd (a4l\_desc\_t \*dsc, unsigned int idx\_subd, unsigned int type,...)

Configure a subdevice.

## 8.38.1 Detailed Description

Analogy for Linux, instruction related features.

Note

```
Copyright (C) 1997-2000 David A. Schleef ds@schleef.org
Copyright (C) 2008 Alexis Berlemont alexis.berlemont@free.fr
```

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA.

# 8.39 lib/analogy/sys.c File Reference

Analogy for Linux, descriptor related features.

Include dependency graph for sys.c:

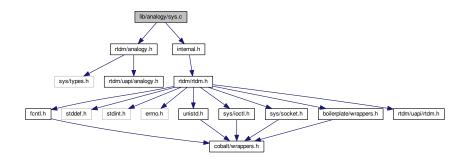

## **Functions**

• int a4l\_sys\_open (const char \*fname)

Open an Analogy device.

int a4l\_sys\_close (int fd)

Close an Analogy device.

• int a4l\_sys\_read (int fd, void \*buf, size\_t nbyte)

Read from an Analogy device.

• int a4l\_sys\_write (int fd, void \*buf, size\_t nbyte)

Write to an Analogy device.

• int a4l\_sys\_attach (int fd, a4l\_lnkdesc\_t \*arg)

Attach an Analogy device to a driver.

• int a4l sys detach (int fd)

Detach an Analogy device from a driver.

• int a4l\_sys\_bufcfg (int fd, unsigned int idx\_subd, unsigned long size)

Configure the buffer size.

## 8.39.1 Detailed Description

Analogy for Linux, descriptor related features.

Note

Copyright (C) 1997-2000 David A. Schleef ds@schleef.org Copyright (C) 2008 Alexis Berlemont alexis.berlemont@free.fr

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA.

# Chapter 9

# **Example Documentation**

# 9.1 bufp-label.c

```
/*

* BUFP-based client/server demo, using the read(2)/write(2)

* based data over a socket.
 * system calls to exchange data over a socket.
 * In this example, two sockets are created. A server thread (reader) * is bound to a real-time port and receives a stream of bytes sent to * this port from a client thread (writer).
#include <stdio.h>
#include <stdlib.h>
#include <unistd.h>
#include <signal.h>
#include <string.h>
#include <pthread.h>
#include <errno.h>
#include <rtdm/ipc.h>
pthread_t svtid, cltid;
#define BUFP_PORT_LABEL "bufp-demo"
static const char *msg[] = {
          "Surfing With The Alien",
          "Lords of Karma",
          "Banana Mango",
"Psycho Monkey",
          "Luminous Flesh Giants",
          "Moroccan Sunset",
          "Satch Boogie"
          "Flying In A Blue Dream",
         "Ride",
"Summer Song",
          "Speed Of Light",
          "Crystal Planet"
          "Raspberry Jam Delta-V",
         "Champagne?",
"Clouds Race Across The Sky",
"Engines Of Creation"
};
static void fail(const char *reason)
         perror(reason);
         exit(EXIT_FAILURE);
static void *server(void *arg)
         struct rtipc_port_label plabel;
         struct sockaddr_ipc saddr;
         char buf[128];
         size_t bufsz;
         int ret, s;
         s = socket(AF_RTIPC, SOCK_DGRAM, IPCPROTO_BUFP);
```

```
* Set a 16k buffer for the server endpoint. This
          * configuration must be done prior to binding the socket to a
          * port.
        bufsz = 16384; /* bytes */
ret = setsockopt(s, SOL_BUFP, BUFP_BUFSZ,
                            &bufsz, sizeof(bufsz));
         if (ret)
                  fail("setsockopt");
          * Set a port label. This name will be registered when
          * binding, in addition to the port number (if given).
         strcpy(plabel.label, BUFP_PORT_LABEL);
         if (ret)
                  fail("setsockopt");
         /*
 * Bind the socket to the port. Assign that port a label, so
          * that peers may use a descriptive information to locate
* it. Labeled ports will appear in the
            /proc/xenomai/registry/rtipc/bufp directory once the socket
          * is bound.
          * saddr.sipc_port specifies the port number to use. If -1 is * passed, the BUFP driver will auto-select an idle port.
         saddr.sipc_family = AF_RTIPC;
         saddr.sipc_port = -1;
         ret = bind(s, (struct sockaddr *)&saddr, sizeof(saddr));
         if (ret)
                  fail("bind");
         for (;;) {
                  ret = read(s, buf, sizeof(buf));
                  if (ret < 0) {</pre>
                           close(s);
                           fail("read");
                  printf("%s: received %d bytes, \"%.*s\"\n",
    __FUNCTION__, ret, ret, buf);
         return NULL:
}
static void *client(void *arg)
{
         struct rtipc_port_label plabel;
         struct sockaddr_ipc svsaddr;
         int ret, s, n = 0, len;
         struct timespec ts:
         s = socket(AF_RTIPC, SOCK_DGRAM, IPCPROTO_BUFP);
         if (s < 0)
                  fail("socket");
          * Set the port label. This name will be used to find the peer
          * when connecting, instead of the port number. The label must
          * be set _after_ the socket is bound to the port, so that
          * BUFP does not try to register this label for the client
          * port as well (like the server thread did).
         strcpy(plabel.label, BUFP_PORT_LABEL);
ret = setsockopt(s, SOL_BUFP, BUFP_LABEL
                            &plabel, sizeof(plabel));
                 fail("setsockopt");
         memset(&svsaddr, 0, sizeof(svsaddr));
         svsaddr.sipc_family = AF_RTIPC;
svsaddr.sipc_port = -1; /* Tell BUFP to search by label. */
         ret = connect(s, (struct sockaddr *)&svsaddr, sizeof(svsaddr));
                  fail("connect");
         for (;;) {
                  len = strlen(msg[n]);
                  ret = write(s, msg[n], len);
                  if (ret < 0) {</pre>
                          close(s);
                           fail("write");
                  }
```

9.2 bufp-readwrite.c 575

```
printf("%s: sent %d bytes, \"%.*s\"\n",
                         __FUNCTION__, ret, ret, msg[n]);
                 n = (n + 1) \% (sizeof(msg) / sizeof(msg[0]));
                  \ensuremath{^{*}} We run in full real-time mode (i.e. primary mode),
                  * so we have to let the system breathe between two
                  * iterations.
                 ts.tv_sec = 0;
                 ts.tv_nsec = 500000000; /* 500 ms */
                 clock_nanosleep(CLOCK_REALTIME, 0, &ts, NULL);
        return NULL;
}
int main(int argc, char **argv)
        struct sched_param svparam = {.sched_priority = 71 };
        struct sched_param clparam = {.sched_priority = 70 };
        pthread_attr_t svattr, clattr;
        sigset_t set;
        int sig;
        sigemptyset(&set);
        sigaddset(&set, SIGINT);
sigaddset(&set, SIGTERM);
        sigaddset(&set, SIGHUP);
        pthread_sigmask(SIG_BLOCK, &set, NULL);
        pthread_attr_init(&svattr);
        pthread_attr_setdetachstate(&svattr, PTHREAD_CREATE_JOINABLE);
        pthread_attr_setinheritsched(&svattr, PTHREAD_EXPLICIT_SCHED);
        {\tt pthread\_attr\_setschedpolicy(\&svattr, SCHED\_FIF0);}
        pthread_attr_setschedparam(&svattr, &svparam);
        errno = pthread_create(&svtid, &svattr, &server, NULL);
        if (errno)
                 fail("pthread_create");
        pthread_attr_init(&clattr);
        \tt pthread\_attr\_setdetachstate(\&clattr, PTHREAD\_CREATE\_JOINABLE);\\
        pthread_attr_setinheritsched(&clattr, PTHREAD_EXPLICIT_SCHED); pthread_attr_setschedpolicy(&clattr, SCHED_FIF0);
        pthread_attr_setschedparam(&clattr, &clparam);
        errno = pthread_create(&cltid, &clattr, &client, NULL);
        if (errno)
                 fail("pthread_create");
        sigwait(&set, &sig);
        pthread_cancel(svtid);
        pthread_cancel(cltid);
        pthread_join(svtid, NULL);
        pthread_join(cltid, NULL);
        return 0;
```

# 9.2 bufp-readwrite.c

```
* BUFP-based client/server demo, using the read(2)/write(2)
 * system calls to exchange data over a socket.
 \ensuremath{^{*}} In this example, two sockets are created. A server thread (reader)
 \ensuremath{^{*}} is bound to a real-time port and receives a stream of bytes sent to
 * this port from a client thread (writer).
#include <stdio.h>
#include <stdlib.h>
#include <unistd.h>
#include <signal.h>
#include <string.h>
#include <pthread.h>
#include <errno.h>
#include <rtdm/ipc.h>
pthread_t svtid, cltid;
#define BUFP_SVPORT 12
static const char *msg[] = {
```

```
"Surfing With The Alien",
         "Lords of Karma",
         "Banana Mango",
         "Psycho Monkey",
         "Luminous Flesh Giants",
"Moroccan Sunset",
         "Satch Boogie",
         "Flying In A Blue Dream",
         "Ride",
         "Summer Song"
         "Speed Of Light",
         "Crystal Planet"
         "Raspberry Jam Delta-V",
        "Champagne?",
"Clouds Race Across The Sky",
        "Engines Of Creation"
}:
static void fail(const char *reason)
{
        perror(reason);
         exit(EXIT_FAILURE);
}
static void *server(void *arg)
        struct sockaddr_ipc saddr;
        char buf[128];
        size_t bufsz;
        int ret, s;
        s = socket(AF_RTIPC, SOCK_DGRAM, IPCPROTO_BUFP);
        if (s < 0)</pre>
                 fail("socket");
         / * Set a 16k buffer for the server endpoint. This
 * configuration must be done prior to binding the socket to a
          * port.
        if (ret)
                 fail("setsockopt");
        saddr.sipc_family = AF_RTIPC;
        saddr.sipc_port = BUFP_SVPORT;
        ret = bind(s, (struct sockaddr *)&saddr, sizeof(saddr));
        if (ret)
                 fail("bind");
         for (;;) {
                 ret = read(s, buf, sizeof(buf));
if (ret < 0) {</pre>
                          close(s);
                          fail("read");
                 printf("%s: received %d bytes, \"%.*s\"\n",
                         __FUNCTION__, ret, ret, buf);
        }
        return NULL;
static void *client(void *arg)
        struct sockaddr_ipc svsaddr;
        int ret, s, n = 0, len;
        struct timespec ts;
        s = socket(AF_RTIPC, SOCK_DGRAM, IPCPROTO_BUFP);
        if (s < 0)
                 fail("socket");
        memset(&svsaddr, 0, sizeof(svsaddr));
        svsaddr.sipc_family = AF_RTIPC;
svsaddr.sipc_port = BUFP_SVPORT;
        ret = connect(s, (struct sockaddr *)&svsaddr, sizeof(svsaddr));
        if (ret)
                 fail("connect");
         for (;;) {
                 len = strlen(msg[n]);
                 ret = write(s, msg[n], len);
                 if (ret < 0) {</pre>
                          close(s);
```

9.3 can-rtt.c 577

```
fail("write");
                 printf("%s: sent %d bytes, \"%.*s\"\n",
                           _FUNCTION__, ret, ret, msg[n]);
                  n = (n + 1) % (sizeof(msg) / sizeof(msg[0]));
                 /*

* We run in full real-time mode (i.e. primary mode),
                  * so we have to let the system breathe between two
                  * iterations.
                 ts.tv sec = 0:
                  ts.tv_nsec = 500000000; /* 500 ms */
                  clock_nanosleep(CLOCK_REALTIME, 0, &ts, NULL);
        return NULL;
3
int main(int argc, char **argv)
{
        struct sched_param svparam = {.sched_priority = 71 };
struct sched_param clparam = {.sched_priority = 70 };
        pthread_attr_t svattr, clattr;
         sigset_t set;
         int sig;
         sigemptyset(&set);
         sigaddset(&set, SIGINT);
         sigaddset(&set, SIGTERM);
        sigaddset(&set. SIGHUP):
        pthread_sigmask(SIG_BLOCK, &set, NULL);
        pthread_attr_init(&svattr);
        pthread_attr_setdetachstate(&svattr, PTHREAD_CREATE_JOINABLE);
        pthread_attr_setinheritsched(&svattr, PTHREAD_EXPLICIT_SCHED); pthread_attr_setschedpolicy(&svattr, SCHED_FIF0);
        pthread_attr_setschedparam(&svattr, &svparam);
        errno = pthread_create(&svtid, &svattr, &server, NULL);
        if (errno)
                 fail("pthread_create");
        pthread_attr_init(&clattr);
        pthread_attr_setdetachstate(&clattr, PTHREAD_CREATE_JOINABLE);
        pthread_attr_setinheritsched(&clattr, PTHREAD_EXPLICIT_SCHED);
        pthread_attr_setschedpolicy(&clattr, SCHED_FIF0);
        pthread_attr_setschedparam(&clattr, &clparam);
        errno = pthread_create(&cltid, &clattr, &client, NULL);
        if (errno)
                 fail("pthread_create");
        sigwait(&set, &sig);
        pthread_cancel(svtid);
        pthread_cancel(cltid);
        pthread_join(svtid, NULL);
pthread_join(cltid, NULL);
        return 0;
```

## 9.3 can-rtt.c

```
/*

* Round-Trip-Time Test - sends and receives messages and measures the time in between.

* Copyright (C) 2006 Wolfgang Grandegger <wg@grandegger.com>

* Based on RTnet's examples/xenomai/posix/rtt-sender.c.

* Copyright (C) 2002 Ulrich Marx <marx@kammer.uni-hannover.de>

* 2002 Marc Kleine-Budde <kleine-budde@gmx.de>

* 2006 Jan Kiszka <jan.kiszka@web.de>

* This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

* This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the
```

```
* GNU General Public License for more details.
 \ensuremath{^{*}} You should have received a copy of the GNU General Public License
   along with this program; if not, write to the Free Software
   Foundation, Inc., 675 Mass Ave, Cambridge, MA 02139, USA.
 \ensuremath{^{*}} The program sends out CAN messages periodically and copies the current
 \ensuremath{^{*}} time-stamp to the payload. At reception, that time-stamp is compared
 * with the current time to determine the round-trip time. The jitter
 * values are printer out regularly. Concurrent tests can be carried out
* by starting the program with different message identifiers. It is also
* possible to use this program on a remote system as simple repeater to
#include <errno.h>
#include <mqueue.h>
#include <signal.h>
#include <pthread.h>
#include <stdio.h>
#include <stdlib.h>
#include <string.h>
#include <unistd.h>
#include <limits.h>
#include <getopt.h>
#include <memory.h>
#include <netinet/in.h>
#include <net/if.h>
#include <svs/ioctl.h>
#include <sys/mman.h>
#ifdef CONFIG_XENO_COBALT
#include <rtdm/can.h>
#else
#include <linux/can.h>
#include <linux/can/raw.h>
#define NSEC_PER_SEC 1000000000
static unsigned int cycle = 10000; /* 10 ms */
static canid t can id = 0x1:
static pthread_t txthread, rxthread;
static int txsock, rxsock;
static mqd_t mq;
static int txcount, rxcount;
static int overruns:
static int repeater;
struct rtt_stat {
    long long rtt;
     long long rtt_min;
     long long rtt_max;
     long long rtt_sum;
     long long rtt_sum_last;
     int counts_per_sec;
};
static void print_usage(char *prg)
     fprintf(stderr,
              "Usage: %s [Options] <tx-can-interface> <rx-can-interface>\n"
"Options:\n"
              "-h, --help
                                 This help\n''
             " -r, --repeater Repeater, send back received messages\n"
"-i, --id=ID CAN Identifier (default = 0x1)\n"
             " -c, --cycle
                                 Cycle time in us (default = 10000us)\n",
             prg);
}
static void *transmitter(void *arg)
     struct sched_param param = { .sched_priority = 80 };
     struct timespec next_period;
     struct timespec time;
     struct can_frame frame;
    long long *rtt_time = (long long *)&frame.data, t;
     /* Pre-fill CAN frame */
     frame.can_id = can_id;
     frame.can_dlc = sizeof(*rtt_time);
#ifdef CONFIG_XENO_COBALT
    pthread_setname_np(pthread_self(), "rtcan_rtt_transmitter");
#endif
```

9.3 can-rtt.c 579

```
pthread_setschedparam(pthread_self(), SCHED_FIFO, &param);
    clock_gettime(CLOCK_MONOTONIC, &next_period);
    while(1) {
        next_period.tv_nsec += cycle * 1000;
        while (next_period.tv_nsec >= NSEC_PER_SEC) {
                 next_period.tv_nsec -= NSEC_PER_SEC;
                 next_period.tv_sec++;
        }
        clock_nanosleep(CLOCK_MONOTONIC, TIMER_ABSTIME, &next_period, NULL);
        if (rxcount != txcount) {
            overruns++;
             continue;
        clock_gettime(CLOCK_MONOTONIC, &time);
        t = (long long)time.tv_sec * NSEC_PER_SEC + time.tv_nsec;
        memcpy(rtt_time, &t, sizeof(t));
        /* Transmit the message containing the local time */
if (send(txsock, (void *)&frame, sizeof(struct can_frame), 0) < 0) {
   if (errno == EBADF)</pre>
                printf("terminating transmitter thread\n");
                perror("send failed");
             return NULL;
        txcount++:
    }
}
static void *receiver(void *arg)
{
    struct sched_param param = { .sched_priority = 82 };
    struct timespec time;
    struct can_frame frame;
    0. 0. 0}:
#ifdef CONFIG_XENO_COBALT
    pthread_setname_np(pthread_self(), "rtcan_rtt_receiver");
#endif
    pthread_setschedparam(pthread_self(), SCHED_FIFO, &param);
    rtt stat.counts per sec = 1000000 / cvcle:
    while (1) {
        if (recv(rxsock, (void *)&frame, sizeof(struct can_frame), 0) < 0) {</pre>
            if (errno == EBADF)
    printf("terminating receiver thread\n");
             else
                perror("recv failed");
             return NULL;
        if (repeater) {
             /* Transmit the message back as is */
            if (errno == EBADF)

if (send(txsock, (void *)&frame, sizeof(struct can_frame), 0) < 0) {
                     printf("terminating transmitter thread\n");
                     perror("send failed");
                 return NULL;
            }
            txcount++:
        } else {
            memcpy(&t, rtt_time, sizeof(t));
             clock_gettime(CLOCK_MONOTONIC, &time);
             if (rxcount > 0) {
                rtt_stat.rtt = ((long long)time.tv_sec * 1000000000LL +
                                  time.tv_nsec - t);
                 rtt_stat.rtt_sum += rtt_stat.rtt;
                 if (rtt_stat.rtt < rtt_stat.rtt_min)</pre>
                     rtt_stat.rtt_min = rtt_stat.rtt;
                 if (rtt_stat.rtt > rtt_stat.rtt_max)
                     rtt_stat.rtt_max = rtt_stat.rtt;
            }
        if ((rxcount % rtt_stat.counts_per_sec) == 0) {
    mq_send(mq, (char_*)&rtt_stat, sizeof(rtt_stat), 0);
            rtt_stat.rtt_sum_last = rtt_stat.rtt_sum;
```

```
}
static void catch_signal(int sig)
{
    mq_close(mq);
int main(int argc, char *argv[])
    struct sched_param param = { .sched_priority = 1 };
    pthread_attr_t thattr;
     struct mq_attr mqattr;
     struct sockaddr_can rxaddr, txaddr;
     struct can_filter rxfilter[1];
     struct rtt_stat rtt_stat;
    char mqname[32];
     char *txdev, *rxdev;
     struct ifreq ifr;
    int ret, opt;
    struct option long_options[] = {
    { "id", required_argument, 0, 'i'},
    { "cycle", required_argument, 0, 'c'},
    { "repeater", no_argument, 0, 'r'},
         { "help", no_argument, 0, 'h'}, { 0, 0, 0, 0},
    while ((opt = getopt_long(argc, argv, "hri:c:",
                                   long_options, NULL)) != -1) {
         switch (opt) {
         case 'c':
             cycle = atoi(optarg);
             break;
              can_id = strtoul(optarg, NULL, 0);
              break;
         case 'r':
             repeater = 1;
              break;
         default:
             fprintf(stderr, "Unknown option %c\n", opt);
         case 'h':
             print_usage(argv[0]);
              exit(-1);
    }
    printf("%d %d\n", optind, argc);
if (optind + 2 != argc) {
         print_usage(argv[0]);
         exit(0);
    txdev = argv[optind];
    rxdev = argv[optind + 1];
      * Create and configure RX socket */
     if ((rxsock = socket(PF_CAN, SOCK_RAW, CAN_RAW)) < 0) {</pre>
         perror("RX socket failed");
         return -1;
    }
    strncpy(ifr.ifr_name, rxdev, IFNAMSIZ);
    printf("RX \ rxsock=\%d, \ ifr\_name=\%s\n", \ rxsock, \ ifr\_ifr\_name);
    if (ioctl(rxsock, SIOCGIFINDEX, &ifr) < 0) {
    perror("RX ioctl SIOCGIFINDEX failed");</pre>
         goto failure1;
     /* We only want to receive our own messages */
    &rxfilter, sizeof(struct can_filter)) < 0) {
perror("RX setsockopt CAN_RAW_FILTER failed");
         goto failure1;
    memset(&rxaddr, 0, sizeof(rxaddr));
rxaddr.can_ifindex = ifr.ifr_ifindex;
```

9.3 can-rtt.c 581

```
rxaddr.can_family = AF_CAN;
if (bind(rxsock, (struct sockaddr *)&rxaddr, sizeof(rxaddr)) < 0) {</pre>
    perror("RX bind failed\n");
    goto failure1;
/* Create and configure TX socket */
if (strcmp(rxdev, txdev) == 0) {
    txsock = rxsock;
} else {
    if ((txsock = socket(PF_CAN, SOCK_RAW, 0)) < 0) {</pre>
        perror("TX socket failed");
        goto failure1;
    strncpy(ifr.ifr_name, txdev, IFNAMSIZ);
    printf("TX txsock=%d, ifr_name=%s\n", txsock, ifr.ifr_name);
    if (ioctl(txsock, SIOCGIFINDEX, &ifr) < 0) {</pre>
        perror("TX ioctl SIOCGIFINDEX failed");
         goto failure2;
      * Suppress definiton of a default receive filter list */
    if (setsockopt(txsock, SOL_CAN_RAW, CAN_RAW_FILTER, NULL, 0) < 0) {</pre>
         perror("TX setsockopt CAN_RAW_FILTER failed");
        goto failure2;
    memset(&txaddr, 0, sizeof(txaddr));
    txaddr.can_ifindex = ifr.ifr_ifindex;
    txaddr.can_family = AF_CAN;
    if (bind(txsock, (struct sockaddr *)&txaddr, sizeof(txaddr)) < 0) {
    perror("TX bind failed\n");</pre>
             goto failure2;
signal(SIGTERM, catch_signal);
signal(SIGINT, catch_signal);
signal(SIGHUP, catch_signal);
mlockall(MCL_CURRENT|MCL_FUTURE);
printf("Round-Trip-Time test %s -> %s with CAN ID 0x%x\n",
argv[optind], argv[optind + 1], can_id);
printf("Cycle time: %d us\n", cycle);
printf("All RTT timing figures are in us.\n");
/* Create statistics message queue */
snprintf(mqname, sizeof(mqname), "/rtcan_rtt-%d", getpid());
mqattr.mq_flags
                  = 0;
mqattr.mq_maxmsg = 100;
mqattr.mq_msgsize = sizeof(struct rtt_stat);
mq = mq_open(mqname, O_RDWR | O_CREAT | O_EXCL, 0600, &mqattr);
if (mq == (mqd_t)-1) {
    perror("opening mqueue failed");
    goto failure2;
}
/* Create receiver RT-thread */
pthread_attr_init(&thattr);
pthread_attr_setdetachstate(&thattr, PTHREAD_CREATE_JOINABLE);
pthread_attr_setstacksize(&thattr, PTHREAD_STACK_MIN);
ret = pthread_create(&rxthread, &thattr, &receiver, NULL);
if (ret) {
    fprintf(stderr, "%s: pthread_create(receiver) failed\n",
             strerror(-ret));
    goto failure3;
}
if (!repeater) {
    /* Create transitter RT-thread */
    ret = pthread_create(&txthread, &thattr, &transmitter, NULL);
    if (ret) {
        fprintf(stderr, "%s: pthread_create(transmitter) failed\n",
                 strerror(-ret));
        goto failure4;
    3
}
pthread_setschedparam(pthread_self(), SCHED_FIFO, &param);
if (repeater)
    printf("Messages\n");
else
```

```
printf("Messages RTTlast RTT_avg RTT_min RTT_max Overruns\n");
   while (1) {
       long long rtt_avg;
       ret = mq_receive(mq, (char *)&rtt_stat, sizeof(rtt_stat), NULL);
       if (ret != sizeof(rtt_stat)) {
            if (ret < 0) {</pre>
                if (errno == EBADF)
                    printf("terminating mq_receive\n");
                else
                    perror("mq_receive failed");
            } else
                fprintf(stderr,
                          "mq_receive returned invalid length %d\n", ret);
            break;
       3
       if (repeater) {
            printf("%8d\n", rxcount);
            rtt_avg = ((rtt_stat.rtt_sum - rtt_stat.rtt_sum_last) /
            rtt_stat.counts_per_sec);
printf("%8d %7ld %7ld %7ld %8d\n", rxcount,
                    (long)(rtt_stat.rtt / 1000), (long)(rtt_avg / 1000),
                    (long)(rtt_stat.rtt_min / 1000),
(long)(rtt_stat.rtt_max / 1000),
                    overruns);
       }
   }
   /* This call also leaves primary mode, required for socket cleanup. */
   printf("shutting down\n");
   /* Important: First close the sockets! */
while ((close(rxsock) < 0) && (errno == EAGAIN)) {</pre>
       printf("RX socket busy - waiting...\n");
        sleep(1);
   while ((close(txsock) < 0) && (errno == EAGAIN)) {</pre>
       printf("TX socket busy - waiting...\n");
        sleep(1);
   pthread_join(txthread, NULL);
   pthread_kill(rxthread, SIGHUP);
   pthread_join(rxthread, NULL);
   return 0:
   pthread_kill(rxthread, SIGHUP);
   pthread_join(rxthread, NULL);
failure3:
   mq_close(mq);
failure2:
   close(txsock);
   close(rxsock);
   return 1;
```

#### 9.4 cross-link.c

}

```
/*
    * cross-link.c

* Userspace test program (Xenomai alchemy skin) for RTDM-based UART drivers

* Copyright 2005 by Joerg Langenberg <joergel75@gmx.net>

* Updates by Jan Kiszka <jan.kiszka@web.de>

* This program is free software; you can redistribute it and/or modify

* it under the terms of the GNU General Public License as published by

* the Free Software Foundation; either version 2 of the License, or

* (at your option) any later version.

* This program is distributed in the hope that it will be useful,

* but WITHOUT ANY WARRANTY; without even the implied warranty of

* MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the

* GNU General Public License for more details.
```

9.4 cross-link.c 583

```
* You should have received a copy of the GNU General Public License
 * along with this program; if not, write to the Free Software
 * Foundation, Inc., 675 Mass Ave, Cambridge, MA 02139, USA.
#include <stdio.h>
#include <signal.h>
#include <unistd.h>
#include <sys/mman.h>
#include <alchemy/task.h>
#include <alchemy/timer.h>
#include <rtdm/serial.h>
#define MAIN_PREFIX
                     "main : "
#define WTASK_PREFIX "write_task: "
#define RTASK_PREFIX "read_task:
#define WRITE FILE
                      "/dev/rtdm/rtser0"
                     "/dev/rtdm/rtser1"
#define READ_FILE
int read_fd = -1;
int write_fd = -1;
#define STATE_FILE_OPENED
#define STATE TASK CREATED
unsigned int read_state = 0;
unsigned int write_state = 0;
                             --s-ms-us-ns */
RTIME write_task_period_ns = 1000000000llu;
RT_TASK write_task;
RT_TASK read_task;
static const struct rtser_config read_config = {
        .config_mask
                         = 0xFFFF,
                          = 115200.
        .baud_rate
                          = RTSER_DEF_PARITY,
        .parity
        .data_bits
                          = RTSER_DEF_BITS,
        .stop_bits
                          = RTSER_DEF_STOPB,
        .handshake
                          = RTSER_DEF_HAND,
        .fifo\_depth
                          = RTSER_DEF_FIFO_DEPTH,
                          = RTSER_DEF_TIMEOUT,
        .rx_timeout
                          = RTSER_DEF_TIMEOUT,
        .tx timeout
                          = 10000000000, /* 1 s
        .event_timeout
        .timestamp_history = RTSER_RX_TIMESTAMP_HISTORY,
        .event_mask
                          = RTSER_EVENT_RXPEND,
}:
static const struct rtser_config write_config = {
        config_mask = RTSER_SET_BAUD | RTSER_SET_TIMESTAMP_HISTORY,
                          = 115200,
        .timestamp_history = RTSER_DEF_TIMESTAMP_HISTORY,
        /* the rest implicitly remains default *,
};
static int close_file( int fd, char *name)
        int err, i=0;
        do {
                i++:
                err = close(fd);
                switch (err) {
                        printf(MAIN_PREFIX "%s -> EAGAIN (%d times)\n",
                               name, i);
                        rt_task_sleep(50000); /* wait 50us */
                        break:
                case 0:
                        printf(MAIN_PREFIX "%s -> closed\n", name);
                default:
                        printf(MAIN_PREFIX "%s -> %s\n", name,
                       strerror(-err));
break;
        } while (err == -EAGAIN && i < 10);</pre>
        return err:
}
static void cleanup_all(void)
        if (read_state & STATE_FILE_OPENED) {
                close_file(read_fd, READ_FILE" (read)");
                read_state &= ~STATE_FILE_OPENED;
        }
```

```
if (write_state & STATE_FILE_OPENED) {
                close_file(write_fd, WRITE_FILE " (write)");
                write_state &= ~STATE_FILE_OPENED;
        if (write_state & STATE_TASK_CREATED) {
                printf(MAIN_PREFIX "delete write_task\n");
                 rt_task_delete(&write_task);
                write_state &= ~STATE_TASK_CREATED;
        }
        if (read_state & STATE_TASK_CREATED) {
                printf(MAIN_PREFIX "delete read_task\n");
                rt_task_delete(&read_task);
                read_state &= ~STATE_TASK_CREATED;
}
static void catch_signal(int sig)
        cleanup_all();
        printf(MAIN_PREFIX "exit\n");
        return:
}
static void write_task_proc(void *arg)
        int err;
        RTIME write_time;
        ssize_t sz = sizeof(RTIME);
        int written = 0;
        err = rt_task_set_periodic(NULL, TM_NOW,
                                    rt_timer_ns2ticks(write_task_period_ns));
        if (err) {
                printf(WTASK_PREFIX "error on set periodic, %s\n",
                       strerror(-err));
                goto exit_write_task;
        }
        while (1) {
                err = rt_task_wait_period(NULL);
                if (err) {
                        printf(WTASK_PREFIX
                                 "error on rt_task_wait_period, %s\n",
                                strerror(-err));
                         break:
                }
                write_time = rt_timer_read();
                 written = write(write_fd, &write_time, sz);
                if (written < 0 ) {
    printf(WTASK_PREFIX "error on write, %s\n",</pre>
                               strerror(-err));
                         break;
                 } else if (written != sz) {
                        printf(WTASK_PREFIX "only %d / %zd byte transmitted\n",
                               written, sz);
                        break:
                }
 exit_write_task:
        if ((write_state & STATE_FILE_OPENED) &&
    close_file(write_fd, WRITE_FILE " (write)") == 0)
    write_state &= ~STATE_FILE_OPENED;
        printf(WTASK_PREFIX "exit\n");
}
static void read_task_proc(void *arg)
        int err;
        int nr = 0;
        RTIME read_time = 0;
        RTIME write_time = 0;
RTIME irq_time = 0;
        ssize_t sz = sizeof(RTIME);
        int rd = 0;
        struct rtser_event rx_event;
        printf(" Nr | write->irq | irq->read | write->read |\n");
                                    ----\n");
        printf("-----
        /*
```

9.4 cross-link.c 585

```
* We are in secondary mode now due to printf, the next
          * blocking Xenomai or driver call will switch us back
          * (here: RTSER_RTIOC_WAIT_EVENT).
        while (1) {
    /* waiting for event */
    /* raid fd, RT
                  err = ioctl(read_fd, RTSER_RTIOC_WAIT_EVENT, &rx_event);
                  if (err) {
                           printf(RTASK_PREFIX
                                  "error on RTSER_RTIOC_WAIT_EVENT, %s\n", strerror(-err));
                           if (err == -ETIMEDOUT)
                                   continue;
                           break;
                  }
                  irg_time = rx_event.rxpend_timestamp;
                  rd = read(read_fd, &write_time, sz);
                  if (rd == sz) {
                           read_time = rt_timer_read();
                           printf("%3d |%16llu |%16llu |%16llu\n", nr,
                                  irq_time - write_time,
read_time - irq_time,
                                  read_time - write_time);
                          nr++;
                  } else if (rd < 0 ) {</pre>
                           printf(RTASK_PREFIX "error on read, code %s\n",
                                  strerror(-err));
                          break:
                  } else {
                          printf(RTASK_PREFIX "only %d / %zd byte received \n",
                                  rd, sz);
                           break:
                  }
         }
         if ((read_state & STATE_FILE_OPENED) &&
             close_file(read_fd, READ_FILE " (read)") == 0)
    read_state &= ~STATE_FILE_OPENED;
         printf(RTASK_PREFIX "exit\n");
}
int main(int argc, char* argv[])
         int err = 0:
         signal(SIGTERM, catch_signal);
         signal(SIGINT, catch_signal);
         /* open rtser0 */
         write_fd = open( WRITE_FILE, 0);
         if (write_fd < 0) {</pre>
                 printf(MAIN_PREFIX "can't open %s (write), %s\n", WRITE_FILE,
                         strerror(-write_fd));
                  goto error;
         write_state |= STATE_FILE_OPENED;
printf(MAIN_PREFIX "write-file opened\n");
         /* writing write-config */
         err = ioctl(write_fd, RTSER_RTIOC_SET_CONFIG, &write_config);
         if (err) {
                  printf(MAIN_PREFIX "error while RTSER_RTIOC_SET_CONFIG, %s\n",
                         strerror(-err));
                  goto error;
        printf(MAIN_PREFIX "write-config written\n");
         /* open rtser1 */
         read_fd = open( READ_FILE, 0 );
         if (read_fd < 0) {</pre>
                 printf(MAIN_PREFIX "can't open %s (read), %s\n", READ_FILE,
                         strerror(-read_fd));
                  goto error;
         read_state |= STATE_FILE_OPENED;
printf(MAIN_PREFIX "read-file opened\n");
         /* writing read-config */
         err = ioctl(read_fd, RTSER_RTIOC_SET_CONFIG, &read_config);
                 printf(MAIN_PREFIX "error while ioctl, %s\n",
                         strerror(-err));
                  goto error;
         }
```

```
printf(MAIN_PREFIX "read-config written\n");
       /* create write_task */
       err = rt_task_create(&write_task, "write_task", 0, 50, 0);
       if (err) {
               printf(MAIN_PREFIX "failed to create write_task, %s\n",
                      strerror(-err));
               goto error;
       write_state |= STATE_TASK_CREATED;
       printf(MAIN_PREFIX "write-task created\n");
       /* create read_task */
       err = rt_task_create(&read_task, "read_task", 0, 51, 0);
       if (err) {
               printf(MAIN_PREFIX "failed to create read_task, %s\n",
                      strerror(-err));
               goto error;
       read_state |= STATE_TASK_CREATED;
       printf(MAIN_PREFIX "read-task created\n");
       /* start write_task */
       printf(MAIN_PREFIX "starting write-task\n");
       err = rt_task_start(&write_task, &write_task_proc, NULL);
               printf({\tt MAIN\_PREFIX}\ "failed to start write\_task,\ \%s \backslash n",
                      strerror(-err));
               goto error;
       }
       /* start read_task */
       printf(MAIN_PREFIX "starting read-task\n");
       err = rt_task_start(&read_task,&read_task_proc,NULL);
       if (err) {
               printf(MAIN_PREFIX "failed to start read_task, %s\n",
                      strerror(-err));
               goto error;
       for (;;)
               pause();
       return 0;
error:
       cleanup_all();
       return err;
```

## 9.5 iddp-label.c

```
/*
    * IDDP-based client/server demo, using the write(2)/recvfrom(2)
   system calls to exchange data over a socket.
 * In this example, two sockets are created. A server thread (reader)
 * is bound to a labeled real-time port and receives datagrams sent to
 * this port from a client thread (writer). The client thread attaches
 * to the port opened by the server using a labeled connection
 * request. The client socket is bound to a different port, only to
 * provide a valid peer name; this is optional.
 * ASCII labels can be attached to bound ports, in order to connect
   sockets to them in a more descriptive way than using plain numeric
 * port values.
#include <stdio.h>
#include <stdlib.h>
#include <unistd.h>
#include <signal.h>
#include <string.h>
#include <pthread.h>
#include <errno.h>
#include <rtdm/ipc.h>
pthread_t svtid, cltid;
#define IDDP CLPORT 27
#define IDDP_PORT_LABEL "iddp-demo"
static const char *msg[] = {
```

9.5 iddp-label.c 587

```
"Surfing With The Alien",
    "Lords of Karma",
    "Banana Mango",
"Psycho Monkey",
    "Luminous Flesh Giants",
    "Moroccan Sunset",
    "Satch Boogie",
    "Flying In A Blue Dream",
    "Ride",
    "Summer Song",
    "Speed Of Light",
    "Crystal Planet"
    "Raspberry Jam Delta-V",
    "Champagne?",
    "Clouds Race Across The Sky",
    "Engines Of Creation"
}:
static void fail(const char *reason)
{
        perror(reason);
        exit(EXIT_FAILURE);
}
static void *server(void *arg)
        struct sockaddr_ipc saddr, claddr;
        struct rtipc_port_label plabel;
        socklen_t addrlen;
        char buf[128]:
        int ret. s:
        s = socket(AF_RTIPC, SOCK_DGRAM, IPCPROTO_IDDP);
        if (s < 0)
                fail("socket");
        * IDDP_POOLSZ required here.
         * Set a port label. This name will be registered when
         * binding, in addition to the port number (if given).
        strcpy(plabel.label, IDDP_PORT_LABEL);
        ret = setsockopt(s, SOL_IDDP, IDDP_LABEL,
                          &plabel, sizeof(plabel));
        if (ret)
                 fail("setsockopt");
        /*
 * Bind the socket to the port. Assign that port a label, so
         * that peers may use a descriptive information to locate
* it. Labeled ports will appear in the
           /proc/xenomai/registry/rtipc/iddp directory once the socket
         \mbox{\ensuremath{^{*}}} saddr.sipc_port specifies the port number to use. If -1 is
          * passed, the IDDP driver will auto-select an idle port.
        saddr.sipc_family = AF_RTIPC;
saddr.sipc_port = -1;    /* Pick next free */
ret = bind(s, (struct sockaddr *)&saddr, sizeof(saddr));
        if (ret)
                 fail("bind");
        for (;;) {
                 addrlen = sizeof(saddr);
                 if (ret < 0) {</pre>
                         close(s);
                         fail("recvfrom"):
                 printf("%s: received %d bytes, \"%.*s\" from port %d\n",
                           __FUNCTION__, ret, ret, buf, claddr.sipc_port);
        }
        return NULL:
}
static void *client(void *arg)
        struct sockaddr_ipc svsaddr, clsaddr;
        struct rtipc_port_label plabel;
int ret, s, n = 0, len;
```

```
struct timespec ts;
         s = socket(AF_RTIPC, SOCK_DGRAM, IPCPROTO_IDDP);
         if (s < 0)
                  fail("socket"):
         /*

* Set a name on the client socket. This is strictly optional,
          \mbox{\scriptsize $^*$} and only done here for the purpose of getting back a
          * different port number in recvfrom().
         clsaddr.sipc_family = AF_RTIPC;
clsaddr.sipc_port = IDDP_CLPORT;
         ret = bind(s, (struct sockaddr *)&clsaddr, sizeof(clsaddr));
         if (ret)
                  fail("bind");
          \ensuremath{^{*}} Set the port label. This name will be used to find the peer
          * when connecting, instead of the port number. The label must
          * be set _after_ the socket is bound to the port, so that
          * IDDP does not try to register this label for the client
          \mbox{\ensuremath{^{\ast}}} port as well (like the server thread did).
         strcpy(plabel.label, IDDP_PORT_LABEL);
ret = setsockopt(s, SOL_IDDP, IDDP_LABEL
                            &plabel, sizeof(plabel));
         if (ret)
                  fail("setsockopt");
         memset(&sysaddr. 0. sizeof(sysaddr)):
         svsaddr.sipc_family = AF_RTIPC;
svsaddr.sipc_port = -1; /* Tell IDDP to search by label. */
         ret = connect(s, (struct sockaddr *)&svsaddr, sizeof(svsaddr));
         if (ret)
                  fail("connect");
         for (;;) {
                  len = strlen(msg[n]);
                   /* Send to default destination we connected to. */
                  ret = write(s, msg[n], len);
                  if (ret < 0) {
    close(s);</pre>
                           fail("sendto");
                  printf("%s: sent %d bytes, \"%.*s\"\n",
                            _FUNCTION__, ret, ret, msg[n]);
                  n = (n + 1) \% (sizeof(msg) / sizeof(msg[0]));
                  /*

* We run in full real-time mode (i.e. primary mode),

* We run in full real-time mode time between two
                   * iterations.
                  ts.tv_sec = 0;
ts.tv_nsec = 500000000; /* 500 ms */
                  clock_nanosleep(CLOCK_REALTIME, 0, &ts, NULL);
         return NULL;
}
int main(int argc, char **argv)
         struct sched_param svparam = {.sched_priority = 71 };
         struct sched_param clparam = {.sched_priority = 70 };
         pthread_attr_t svattr, clattr;
         sigset_t set;
         int sia:
         sigemptyset(&set);
         sigaddset(&set, SIGINT);
         sigaddset(&set, SIGTERM);
         sigaddset(&set, SIGHUP);
         pthread_sigmask(SIG_BLOCK, &set, NULL);
         pthread_attr_init(&svattr);
         pthread_attr_setdetachstate(&svattr, PTHREAD_CREATE_JOINABLE);
         pthread_attr_setinheritsched(&svattr, PTHREAD_EXPLICIT_SCHED);
pthread_attr_setschedpolicy(&svattr, SCHED_FIF0);
         pthread_attr_setschedparam(&svattr, &svparam);
         errno = pthread_create(&svtid, &svattr, &server, NULL);
         if (errno)
                  fail("pthread_create");
         pthread_attr_init(&clattr);
         pthread_attr_setdetachstate(&clattr, PTHREAD_CREATE_JOINABLE);
```

9.6 iddp-sendrecv.c 589

## 9.6 iddp-sendrecv.c

```
/*
    * IDDP-based client/server demo, using the sendto(2)/recvfrom(2)
 * system calls to exchange data over a socket.
 * In this example, two sockets are created. A server thread (reader)
 * is bound to a real-time port and receives datagrams sent to this
 * port from a client thread (writer). The client socket is bound to a
 * different port, only to provide a valid peer name; this is
 * optional.
#include <stdio.h>
#include <stdlib.h>
#include <unistd.h>
#include <signal.h>
#include <string.h>
#include <pthread.h>
#include <errno.h>
#include <rtdm/ipc.h>
pthread_t svtid, cltid;
#define IDDP_SVPORT 12
#define IDDP_CLPORT 13
static const char *msg[] = {
         "Surfing With The Alien",
        "Lords of Karma",
        "Banana Mango",
"Psycho Monkey"
        "Luminous Flesh Giants",
"Moroccan Sunset",
        "Satch Boogie"
        "Flying In A Blue Dream",
        "Ride",
         "Summer Song"
         "Speed Of Light",
        "Crystal Planet"
         "Raspberry Jam Delta-V",
        "Champagne?",
        "Clouds Race Across The Sky",
        "Engines Of Creation"
};
static void fail(const char *reason)
{
        perror(reason);
        exit(EXIT_FAILURE);
}
static void *server(void *arg)
        struct sockaddr_ipc saddr, claddr;
        socklen_t addrlen;
        char buf[128]:
        size_t poolsz;
        int ret, s;
        s = socket(AF_RTIPC, SOCK_DGRAM, IPCPROTO_IDDP);
        if (s < 0)
                 fail("socket");
         * Set a local 32k pool for the server endpoint. Memory needed
         * to convey datagrams will be pulled from this pool, instead
```

```
* of Xenomai's system pool.
        poolsz = 32768; /* bytes */
        ret = setsockopt(s, SOL_IDDP, IDDP_POOLSZ,
                        &poolsz, sizeof(poolsz));
        if (ret)
                fail("setsockopt");
        saddr.sipc_family = AF_RTIPC;
        saddr.sipc_port = IDDP_SVPORT;
        ret = bind(s, (struct sockaddr *)&saddr, sizeof(saddr));
        if (ret)
                fail("bind");
        for (;;) {
                addrlen = sizeof(saddr);
                ret = recvfrom(s, buf, sizeof(buf), 0,
                              (struct sockaddr *)&claddr, &addrlen);
                if (ret < 0) {</pre>
                        close(s);
                        fail("recvfrom");
                return NULL;
}
static void *client(void *arg)
{
        struct sockaddr_ipc svsaddr, clsaddr;
        int ret, s, n = 0, len;
        struct timespec ts;
        s = socket(AF_RTIPC, SOCK_DGRAM, IPCPROTO_IDDP);
        if (s < 0)
                fail("socket");
        clsaddr.sipc_family = AF_RTIPC;
        clsaddr.sipc_port = IDDP_CLPORT;
        ret = bind(s, (struct sockaddr *)&clsaddr, sizeof(clsaddr));
        if (ret)
                fail("bind");
        svsaddr.sipc_family = AF_RTIPC;
        svsaddr.sipc_port = IDDP_SVPORT;
        for (;;) {
                len = strlen(msg[n]);
                ret = sendto(s, msg[n], len, 0,
                             (struct sockaddr *)&svsaddr, sizeof(svsaddr));
                if (ret < 0) {</pre>
                        close(s);
                        fail("sendto");
                printf("%s: sent %d bytes, \"%.*s\"\n",
                       __FUNCTION__, ret, ret, msg[n]);
                n = (n + 1) \% (sizeof(msg) / sizeof(msg[0]));
                /*
 * We run in full real-time mode (i.e. primary mode),
                * so we have to let the system breathe between two
                 * iterations.
                ts.tv_nsec = 500000000; /* 500 ms */
                clock_nanosleep(CLOCK_REALTIME, 0, &ts, NULL);
        return NULL;
}
int main(int argc, char **argv)
{
        struct sched_param svparam = {.sched_priority = 71 };
        struct sched_param clparam = {.sched_priority = 70 };
        pthread_attr_t svattr, clattr;
        sigset_t set;
        int sig;
        sigemptyset(&set):
        sigaddset(&set, SIGINT);
sigaddset(&set, SIGTERM);
        sigaddset(&set, SIGHUP);
        pthread_sigmask(SIG_BLOCK, &set, NULL);
        pthread_attr_init(&svattr);
        pthread_attr_setdetachstate(&svattr, PTHREAD_CREATE_JOINABLE);
```

9.7 rtcanconfig.c 591

```
pthread_attr_setinheritsched(&svattr, PTHREAD_EXPLICIT_SCHED);
pthread_attr_setschedpolicy(&svattr, SCHED_FIF0);
pthread_attr_setschedparam(&svattr, &svparam);
errno = pthread_create(&svtid, &svattr, &server, NULL);
if (errno)
         fail("pthread_create");
pthread_attr_init(&clattr);
pthread_attr_setdetachstate(&clattr, PTHREAD_CREATE_JOINABLE);
pthread_attr_setinheritsched(&clattr, PTHREAD_EXPLICIT_SCHED);
pthread_attr_setschedpolicy(&clattr, SCHED_FIF0);
pthread_attr_setschedparam(&clattr, &clparam);
errno = pthread_create(&cltid, &clattr, &client, NULL);
        fail("pthread_create");
sigwait(&set, &sig);
pthread_cancel(svtid);
pthread_cancel(cltid);
pthread_join(svtid, NULL);
pthread_join(cltid, NULL);
return 0;
```

## 9.7 rtcanconfig.c

```
* Program to configuring the CAN controller
  Copyright (C) 2006 Wolfgang Grandegger <wg@grandegger.com>
  Copyright (C) 2005, 2006 Sebastian Smolorz
                            <Sebastian.Smolorz@stud.uni-hannover.de>
 * This program is free software; you can redistribute it and/or modify
 * it under the terms of the GNU General Public License as published by
 * the Free Software Foundation; either version 2 of the License, or
  (at your option) any later version.
 * This program is distributed in the hope that it will be useful,
 * but WITHOUT ANY WARRANTY; without even the implied warranty of
 * MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the
 * GNU General Public License for more details.
 * You should have received a copy of the GNU General Public License
  along with this program; if not, write to the Free Software
 * Foundation, Inc., 675 Mass Ave, Cambridge, MA 02139, USA.
#include <stdio.h>
#include <stdlib.h>
#include <signal.h>
#include <unistd.h>
#include <string.h>
#include <time.h>
#include <errno.h>
#include <getopt.h>
#include <sys/mman.h>
#include <rtdm/can.h>
static void print_usage(char *prg)
    fprintf(stderr,
            "Usage: %s <can-interface> [Options] [up|down|start|stop|sleep]\n"
            "Options:\n"
            " -v, --verbose
                                       be verbose\n"
            " -h, --help
                                       this help\n''
            "-c, --ctrlmode=CTRLMODE listenonly, loopback or none\n"
            " -b, --baudrate=BPS
                                       baudrate in bits/sec\n"
            "-B, --bittime=BTR0:BTR1 BTR or standard bit-time\n"
            " -B, --bittime=BRP:PROP_SEG:PHASE_SEG1:PHASE_SEG2:SJW:SAM\n",
           prg);
static can_baudrate_t string_to_baudrate(char *str)
    can_baudrate_t baudrate;
    if (sscanf(str, "%i", &baudrate) != 1)
```

```
return -1;
     return baudrate;
}
static int string_to_mode(char *str)
     if ( !strcmp(str, "up") || !strcmp(str, "start") )
          return CAN_MODE_START;
     else if ( !strcmp(str, "down") || !strcmp(str, "stop") )
     return CAN_MODE_STOP;
else if ( !strcmp(str, "sleep") )
   return CAN_MODE_SLEEP;
     return -EINVAL;
static int string_to_ctrlmode(char *str)
     if (!strcmp(str, "listenonly"))
    return CAN_CTRLMODE_LISTENONLY;
else if (!strcmp(str, "loopback"))
    return CAN_CTRLMODE_LOOPBACK;
     else if ( !strcmp(str, "none") )
          return 0;
     return -1;
}
int main(int argc, char *argv[])
     char
               ifname[16]:
               can_fd = -1;
     int
               new_baudrate = -1;
     int
               new\_mode = -1;
     int
               new_ctrlmode = 0, set_ctrlmode = 0;
     int
               verbose = 0;
              bittime_count = 0, bittime_data[6];
     int
     can_baudrate_t *baudrate;
can_ctrlmode_t *ctrlmode;
     can_mode_t *mode;
     union {
       struct ifreq ifr;
       struct can_bittime bittime;
       can_baudrate_t baudrate;
       can_ctrlmode_t ctrlmode;
       can_mode_t mode;
     } u;
     struct can_bittime *bittime;
     int opt, ret;
     char* ptr;
     struct option long_options[] = {
          { "help", no_argument, 0, 'h' },
{ "verbose", no_argument, 0, 'v'},
{ "baudrate", required_argument, 0, 'b'},
{ "bittime", required_argument, 0, 'B'},
{ "ctrlmode", required_argument, 0, 'c'},
          { 0, 0, 0, 0},
     while ((opt = getopt_long(argc, argv, "hvb:B:c:",
                                     long_options, NULL)) != -1) {
          switch (opt) {
          case 'h':
              print_usage(argv[0]);
               exit(0);
          case 'v':
               verbose = 1;
               break:
          case 'b':
               new_baudrate = string_to_baudrate(optarg);
               if (new_baudrate == -1) {
                    print_usage(argv[0]);
                    exit(0);
               break;
          case 'B':
               ptr = optarg;
               while (1) {
                    bittime_data[bittime_count++] = strtoul(ptr, NULL, 0);
                    if (!(ptr = strchr(ptr, ':')))
                         break;
                    ptr++;
               }
if (bittime_count != 2 && bittime_count != 6) {
```

9.7 rtcanconfig.c 593

```
print_usage(argv[0]);
         }
         break:
    case 'c':
         ret = string_to_ctrlmode(optarg);
         if (ret == -1) {
             print_usage(argv[0]);
              exit(0);
         new_ctrlmode |= ret;
         set_ctrlmode = 1;
         break;
         break;
    default:
         fprintf(stderr, "Unknown option %c\n", opt);
}
/* Get CAN interface name */
if (optind != argc - 1 && optind != argc - 2) {
    print_usage(argv[0]);
     return 0;
strncpy(ifname, argv[optind], IFNAMSIZ);
strncpy(u.ifr.ifr_name, ifname, IFNAMSIZ);
if (optind == argc - 2) {
                                /* Get mode setting */
    new_mode = string_to_mode(argv[optind + 1]);
    if (verbose)
         printf("mode: %s (%#x)\n", argv[optind + 1], new_mode);
    if (new_mode < 0) {</pre>
         print_usage(argv[0]);
         return 0;
    }
}
 \begin{array}{lll} can\_fd = & rt\_dev\_socket(PF\_CAN, SOCK\_RAW, CAN\_RAW); \\ & if & (can\_fd < \emptyset) \end{array} \} 
    fprintf(stderr, "Cannot open RTDM CAN socket. Maybe driver not loaded? \n");
     return can_fd;
ret = rt_dev_ioctl(can_fd, SIOCGIFINDEX, &u.ifr);
if (ret) {
    fprintf(stderr, "Can't get interface index for %s, code = %d\n", ifname, ret);
if (new_baudrate != -1) {
    if (verbose)
         printf("baudrate: %d\n", new_baudrate);
    baudrate = &u.baudrate;
     *baudrate = new_baudrate;
    ret = rt_dev_ioctl(can_fd, SIOCSCANBAUDRATE, &u.ifr);
    if (ret) {
         goto abort;
}
if (bittime_count) {
    bittime = &u.bittime;
    if (bittime_count == 2) {
         bittime->type = CAN_BITTIME_BTR;
         bittime->btr.btr0 = bittime_data[0];
         bittime->btr.btr1 = bittime_data[1];
         if (verbose)
    printf("bit-time: btr0=0x%02x btr1=0x%02x\n",
                      bittime->btr.btr0, bittime->btr.btr1);
         bittime->type = CAN_BITTIME_STD;
         bittime->std.brp = bittime_data[0];
         bittime->std.prop_seg = bittime_data[1];
bittime->std.phase_seg1 = bittime_data[2];
bittime->std.phase_seg2 = bittime_data[3];
         bittime->std.sjw = bittime_data[4];
         bittime->std.sam = bittime_data[5];
         if (verbose)
              \label{limit} {\tt printf("bit-time: brp=\%d prop\_seg=\%d phase\_seg1=\%d "}
                       "phase_seg2=%d sjw=%d sam=%dn",
                      bittime->std.brp,
```

```
bittime->std.prop_seg,
                    bittime->std.phase_seg1,
                    bittime->std.phase_seg2,
                    bittime->std.sjw,
                    bittime->std.sam);
    }
    ret = rt_dev_ioctl(can_fd, SIOCSCANCUSTOMBITTIME, &u.ifr);
    if (ret) {
        goto abort;
if (set_ctrlmode != 0) {
    ctrlmode = &u.ctrlmode;
*ctrlmode = new_ctrlmode;
    if (verbose)
        printf("ctrlmode: %#x\n", new_ctrlmode);
    ret = rt_dev_ioctl(can_fd, SIOCSCANCTRLMODE, &u.ifr);
    if (ret) {
        goto abort;
    }
}
if (new_mode != -1) {
    mode = &u.mode;
    *mode = new_mode;
    ret = rt_dev_ioctl(can_fd, SIOCSCANMODE, &u.ifr);
    if (ret) {
        goto abort;
rt_dev_close(can_fd);
return 0:
rt_dev_close(can_fd);
return ret;
```

#### 9.8 rtcanrecv.c

```
#include <stdio.h>
#include <stdlib.h>
#include <signal.h>
#include <unistd.h>
#include <time.h>
#include <errno.h>
#include <getopt.h>
#include <sys/mman.h>
#include <alchemy/task.h>
#include <rtdm/can.h>
static void print_usage(char *prg)
    fprintf(stderr,
             "Usage: %s [<can-interface>] [Options]\n"
"Options:\n"
             " -f --filter=id:mask[:id:mask]... apply filter\n"
             " -e --error=mask
" -t, --timeout=MS
" -T, --timestamp
                                         receive error messages\n"
                                         timeout in ms \backslash n"
                                         with absolute timestamp\n"
             " -R, --timestamp-rel with relative timestamp\n"
" -v, --verbose be verbose\n"
              " -v, --verbose
             " -p, --print=MODULO
                                         print every MODULO message\n"
             " -h, --help
                                         this help\n",
             prg);
}
extern int optind, opterr, optopt;
static int s = -1, verbose = 0, print = 1;
static nanosecs_rel_t timeout = 0, with_timestamp = 0, timestamp_rel = 0;
RT_TASK rt_task_desc;
#define BUF_SIZ 255
#define MAX_FILTER 16
```

9.8 rtcanrecv.c 595

```
struct sockaddr_can recv_addr;
struct can_filter recv_filter[MAX_FILTER];
static int filter_count = 0;
static int add_filter(u_int32_t id, u_int32_t mask)
{
     if (filter_count >= MAX_FILTER)
         return -1;
    recv_filter[filter_count].can_id = id;
    recv_filter[filter_count].can_mask = mask;
    printf("Filter #%d: id=0x%08x mask=0x%08x\n", filter_count, id, mask);
     filter_count++;
    return 0;
}
static void cleanup(void)
    int ret;
    if (verbose)
         printf("Cleaning up...\n");
    if (s >= 0) {
   ret = rt_dev_close(s);
         if (ret) {
             fprintf(stderr, "rt_dev_close: %s\n", strerror(-ret));
         exit(EXIT_SUCCESS);
    }
}
static void cleanup_and_exit(int sig)
     if (verbose)
        printf("Signal %d received\n", sig);
    cleanup();
    exit(0);
}
static void rt_task(void)
     int i, ret, count = 0;
     struct can_frame frame;
     struct sockaddr_can addr;
     socklen_t addrlen = sizeof(addr);
     struct msghdr msg;
    struct iovec iov:
    nanosecs_abs_t timestamp, timestamp_prev = 0;
    if (with_timestamp) {
         msg.msg_iov = &iov;
        msg.msg_iovlen = 1;
msg.msg_name = (void *)&addr;
        msg.msg_namelen = sizeof(struct sockaddr_can);
msg.msg_control = (void *)&timestamp;
         msg.msg_controllen = sizeof(nanosecs_abs_t);
    }
    while (1) {
        if (with_timestamp) {
             iov.iov_base = (void *)&frame;
iov.iov_len = sizeof(can_frame_t);
             ret = rt_dev_recvmsg(s, &msg, 0);
         } else
      ret = rt_dev_recvfrom(s, (void *)&frame, sizeof(
can_frame_t), 0,
                                      (struct sockaddr *)&addr, &addrlen);
         if (ret < 0) {</pre>
             switch (ret) {
             case -ETIMEDOUT:
                 if (verbose)
                 printf("rt_dev_recv: timed out");
continue;
             case -EBADF:
                 if (verbose)
                     printf("rt_dev_recv: aborted because socket was closed");
                 break;
             default:
                 fprintf(stderr, "rt_dev_recv: %s\n", strerror(-ret));
         }
         if (print && (count % print) == 0) {
   printf("#%d: (%d) ", count, addr.can_ifindex);
```

```
if (with_timestamp && msg.msg_controllen) {
                    if (timestamp_rel) {
printf("%11dns ", (long long)(timestamp - timestamp_prev));
                         timestamp_prev = timestamp;
                    } else
                         printf("%11dns ", (long long)timestamp);
                if (frame.can_id & CAN_ERR_FLAG)
                    printf("!0x%08x!", frame.can_id & CAN_ERR_MASK);
                else if (frame.can_id & CAN_EFF_FLAG)
                    printf("<0x%08x>", frame.can_id & CAN_EFF_MASK);
                    printf("<0x%03x>", frame.can_id & CAN_SFF_MASK);
               printf(" [%d]", frame.can_dlc);
               if (!(frame.can_id & CAN_RTR_FLAG))
   for (i = 0; i < frame.can_dlc; i++) {</pre>
                        printf(" %02x", frame.data[i]);
                if (frame.can_id & CAN_ERR_FLAG) {
                    printf(" ERROR ");
                     if (frame.can_id & CAN_ERR_BUSOFF)
                    printf("bus-off");
if (frame.can_id & CAN_ERR_CRTL)
               printf("controller problem");
} else if (frame.can_id & CAN_RTR_FLAG)
                    printf(" remote request");
               printf("\n");
          count++:
     }
}
int main(int argc, char **argv)
     int opt, ret;
     u_int32_t id, mask;
     u_int32_t err_mask = 0;
     struct ifreq ifr;
     char *ptr;
     char name[32];
     struct option long_options[] = {
    { "help", no_argument, 0, 'h' },
    { "verbose", no_argument, 0, 'v'},
    { "filter", required_argument, 0, 'f'},
    { "error", required_argument, 0, 'e'},
    { "timeout", required_argument, 0, 't'},
    { "timestamp", no_argument, 0, 'T'},
    { "timestamp-rel", no_argument, 0, 'R'},
}
          { 0, 0, 0, 0},
     };
     mlockall(MCL_CURRENT | MCL_FUTURE);
     signal(SIGTERM, cleanup_and_exit);
     signal(SIGINT, cleanup_and_exit);
     while ((opt = getopt_long(argc, argv, "hve:f:t:p:RT"
                                      long_options, NULL)) != -1) {
          switch (opt) {
          case 'h':
               print_usage(argv[0]);
               exit(0);
          case 'p':
               print = strtoul(optarg, NULL, 0);
               break:
          case 'v':
               verbose = 1;
               break;
          case 'e':
               err_mask = strtoul(optarg, NULL, 0);
          case 'f':
               ptr = optarg;
while (1) {
                   id = strtoul(ptr, NULL, 0);
                    ptr = strchr(ptr, ':');
                     if (!ptr) {
                          fprintf(stderr, "filter must be applied in the form id:mask[:id:mask]...\n");
                          exit(1);
                    ptr++;
```

9.8 rtcanrecv.c 597

```
mask = strtoul(ptr, NULL, 0);
ptr = strchr(ptr, ':');
             add_filter(id, mask);
            if (!ptr)
                 break;
            ptr++;
        break;
    case 't':
        timeout = (nanosecs_rel_t)strtoul(optarg, NULL, 0) * 1000000;
        break:
    case 'R':
        timestamp_rel = 1;
        with timestamp = 1:
        break:
        fprintf(stderr, "Unknown option %c\n", opt);
    }
}
ret = rt_dev_socket(PF_CAN, SOCK_RAW, CAN_RAW);
    fprintf(stderr, "rt_dev_socket: %s\n", strerror(-ret));
    return -1;
}
s = ret:
if (argv[optind] == NULL) {
    if (verbose)
        printf("interface all\n");
    ifr.ifr_ifindex = 0;
} else {
    if (verbose)
        printf("interface %s\n", argv[optind]);
    strncpy(ifr.ifr_name, argv[optind], IFNAMSIZ);
    if (verbose)
        printf("s=%d, ifr_name=%s\n", s, ifr.ifr_name);
    ret = rt_dev_ioctl(s, SIOCGIFINDEX, &ifr);
    if (ret < 0) {</pre>
        fprintf(stderr, "rt_dev_ioctl GET_IFINDEX: %s\n", strerror(-ret));
        goto failure;
}
if (err_mask) {
  ret = rt_dev_setsockopt(s, SOL_CAN_RAW,
CAN_RAW_ERR_FILTER,
                             &err_mask, sizeof(err_mask));
    if (ret < 0) {</pre>
        fprintf(stderr, "rt_dev_setsockopt: %s\n", strerror(-ret));
        goto failure;
    if (verbose)
        printf("Using err_mask=%#x\n", err_mask);
if (filter_count) {
  ret = rt_dev_setsockopt(s, SOL_CAN_RAW,
CAN_RAW_FILTER,
                             &recv_filter, filter_count *
                             sizeof(struct can_filter));
        fprintf(stderr, \ "rt\_dev\_setsockopt: \ \%s\n", \ strerror(-ret));
        goto failure;
    }
}
recv_addr.can_family = AF_CAN;
recv_addr.can_ifindex = ifr.ifr_ifindex;
ret = rt_dev_bind(s, (struct sockaddr *)&recv_addr,
                   sizeof(struct sockaddr_can));
if (ret < 0) {</pre>
    fprintf(stderr, "rt_dev_bind: %s\n", strerror(-ret));
    goto failure;
if (timeout) {
    if (verbose)
        printf("Timeout: %lld ns\n", (long long)timeout);
```

```
ret = rt_dev_ioctl(s, RTCAN_RTIOC_RCV_TIMEOUT, &timeout);
           fprintf(stderr, "rt_dev_ioctl RCV_TIMEOUT: %s\n", strerror(-ret));
           goto failure;
   }
   if (with_timestamp) {
       ret = rt_dev_ioctl(s, RTCAN_RTIOC_TAKE_TIMESTAMP,
     RTCAN_TAKE_TIMESTAMPS);
       if (ret) {
          fprintf(stderr, "rt_dev_ioctl TAKE_TIMESTAMP: %s\n", strerror(-ret));
           goto failure;
   }
   snprintf(name, sizeof(name), "rtcanrecv-%d", getpid());
   ret = rt_task_shadow(&rt_task_desc, name, 0, 0);
       fprintf(stderr, "rt_task_shadow: %s\n", strerror(-ret));
       goto failure;
   rt_task();
   /* never returns */
failure:
   cleanup();
   return -1;
```

#### 9.9 rtcansend.c

```
#include <stdio.h>
 #include <stdlib.h>
 #include <signal.h>
 #include <unistd.h>
 #include <time.h>
 #include <errno.h>
 #include <getopt.h>
#include <sys/mman.h>
 #include <alchemy/task.h>
#include <alchemy/timer.h>
#include <rtdm/can.h>
extern int optind, opterr, optopt;
 static void print_usage(char *prg)
            fprintf(stderr,
                                   "Usage: %s <can-interface> [Options] <can-msg>\n"
                                   "<can-msg> can consist of up to 8 bytes given as a space separated list\n"
                                   "Options:\n"
                                  " -i, --identifier=ID CAN Identifier (default = 1)\n"
" -r --rtr send remote request\n"
                                   " -e --extended
                                                                                                       send extended frame\n"
                                   " -1 --loop=COUNT
                                                                                                       send message COUNT times \n''
                                   " -c, --count
                                                                                                       message count in data[0-3]\n"
                                   " -d, --delay=MS
                                                                                                       delay in ms (default = 1ms)\n'
                                   " -s, --send
                                                                                                       use send instead of sendto\n"
                                   " -t, --timeout=MS
                                                                                                       timeout in ms\n"
                                   " -L, --loopback=0|1
                                                                                                       switch local loopback off or on\n"
                                   " -v, --verbose
                                                                                                       be verbose\n"
                                   " -p, --print=MODULO
                                                                                                       \label{eq:print_every_MODULO_message} print_{\ensuremath{\text{every}}} \begin{tabular}{ll} MODULO_{\ensuremath{\text{message}}} \begin{tabular}{ll} n'' \\ \ensuremath{\text{every}} \begin{tabular}{ll} MODULO_{\ensuremath{\text{message}}} \begin{tabular}{ll} n'' \\ \ensuremath{\text{every}} \begin{tabular}{ll} MODULO_{\ensuremath{\text{message}}} \begin{tabular}{ll} n'' \\ \ensuremath{\text{every}} \begin{tabular}{ll} m'' \\ \ensuremath{\text{e
                                   " -h, --help
                                                                                                       this help\n'',
                                  prg);
}
RT_TASK rt_task_desc;
 static int s=-1. dlc=0. rtr=0. extended=0. verbose=0. loops=1:
 static SRTIME delay=1000000;
 static int count=0, print=1, use_send=0, loopback=-1;
 static nanosecs_rel_t timeout = 0;
 static struct can_frame frame;
 static struct sockaddr_can to_addr;
 static void cleanup(void)
 {
```

9.9 rtcansend.c 599

```
int ret;
      if (verbose)
           printf("Cleaning up...\n");
     usleep(100000);
      if (s >= 0) {
           ret = rt_dev_close(s);
           s = -1;
           if (ret) {
                 fprintf(stderr, "rt_dev_close: %s\n", strerror(-ret));
           exit(EXIT_SUCCESS);
}
static void cleanup_and_exit(int sig)
      if (verbose)
           printf("Signal %d received\n", sig);
      cleanup();
      exit(0);
static void rt_task(void)
      int i, j, ret;
      for (i = 0; i < loops; i++) {
   rt_task_sleep(rt_timer_ns2ticks(delay));</pre>
           if (count)
                 memcpy(&frame.data[0], &i, sizeof(i));
           /st Note: sendto avoids the definiton of a receive filter list st/
           if (use_send)
                ret = rt_dev_send(s, (void *)&frame, sizeof(can_frame_t), 0);
           else
                ret = rt_dev_sendto(s, (void *)&frame, sizeof(
        can_frame_t), 0,
                                             (struct sockaddr *)&to_addr, sizeof(to_addr));
           if (ret < 0) {</pre>
                 switch (ret) {
                 case -ETIMEDOUT:
                      if (verbose)
                           printf("rt_dev_send(to): timed out");
                      break:
                 case -EBADF:
                      if (verbose)
                            printf("rt_dev_send(to): aborted because socket was closed");
                      break;
                 default:
                      fprintf(stderr, "rt_dev_send: %s\n", strerror(-ret));
                      break;
                                            /* abort */
                 i = loops;
                 break:
           if (verbose && (i % print) == 0) {
                if (frame.can_id & CAN_EFF_FLAG)
    printf("<0x%08x>", frame.can_id & CAN_EFF_MASK);
                printf("<0x%03x>", frame.can_id & CAN_SFF_MASK);
printf(" [%d]", frame.can_dlc);
for (j = 0; j < frame.can_dlc; j++) {
    printf(" %02x", frame.data[j]);</pre>
                 printf("\n");
           }
     }
}
int main(int argc, char **argv)
     int i, opt, ret;
struct ifreq ifr;
      char name[32];
      struct option long_options[] = {
    { "help", no_argument, 0, 'h' },
    { "identifier", required_argument, 0, 'i'},
           { "identifier", require______ { "rtr", no_argument, 0, 'r'},
' '" "o argument, 0, 'e'},
           { "rtr", no_argument, 0, 'r'},
{ "extended", no_argument, 0, 'e'},
{ "verbose", no_argument, 0, 'v'},
{ "count", no_argument, 0, 'c'},
{ "print", required_argument, 0, 'p'},
{ "loop", required_argument, 0, 'l'},
{ "delay", required_argument, 0, 'd'},
```

```
{ "send", no_argument, 0, 's'},
{ "timeout", required_argument, 0, 't'},
{ "loopback", required_argument, 0, 'L'},
{ 0, 0, 0, 0, 0},
};
mlockall(MCL_CURRENT | MCL_FUTURE);
signal(SIGTERM, cleanup_and_exit);
signal(SIGINT, cleanup_and_exit);
frame.can id = 1:
while ((opt = getopt_long(argc, argv, "hvi:l:red:t:cp:sL:",
                             long_options, NULL)) != -1) {
    switch (opt) {
case 'h':
        print_usage(argv[0]);
         exit(0);
    case 'p':
        print = strtoul(optarg, NULL, 0);
    case 'v':
         verbose = 1;
        break;
    case 'c':
         count = 1;
         break;
    case '1':
        loops = strtoul(optarg, NULL, 0);
        break;
    case 'i':
         frame.can_id = strtoul(optarg, NULL, 0);
         break;
    case 'r':
        rtr = 1;
        break:
    case 'e':
        extended = 1;
    case 'd':
        delay = strtoul(optarg, NULL, 0) * 1000000LL;
        break:
    case 's':
        use_send = 1;
        break;
    case 't':
        timeout = strtoul(optarg, NULL, 0) * 1000000LL;
    case 'L':
        loopback = strtoul(optarg, NULL, 0);
        break:
         fprintf(stderr, "Unknown option %c\n", opt);
         break;
    }
}
if (optind == argc) {
    print_usage(argv[0]);
    exit(0);
}
if (argv[optind] == NULL) {
    fprintf(stderr, "No Interface supplied\n");
    exit(-1);
}
if (verbose)
    printf("interface %s\n", argv[optind]);
ret = rt_dev_socket(PF_CAN, SOCK_RAW, CAN_RAW);
if (ret < 0) {</pre>
    fprintf(stderr, "rt_dev_socket: %s\n", strerror(-ret));
    return -1;
}
```

9.9 rtcansend.c 601

```
s = ret;
   if (loopback >= 0) {
     ret = rt_dev_setsockopt(s, SOL_CAN_RAW,
CAN_RAW_LOOPBACK,
                                 &loopback, sizeof(loopback));
            fprintf(stderr, \ "rt\_dev\_setsockopt: \ \%s\n", \ strerror(-ret));
           goto failure;
       if (verbose)
           printf("Using loopback=%d\n", loopback);
   strncpy(ifr.ifr_name, argv[optind], IFNAMSIZ);
       printf("s=%d, ifr_name=%s\n", s, ifr.ifr_name);
   ret = rt_dev_ioctl(s, SIOCGIFINDEX, &ifr);
   if (ret < 0) {</pre>
       fprintf(stderr, "rt_dev_ioctl: %s\n", strerror(-ret));
       goto failure;
   }
   memset(&to_addr, 0, sizeof(to_addr));
   to_addr.can_ifindex = ifr.ifr_ifindex;
   to_addr.can_family = AF_CAN;
   if (use_send) {
       /* Suppress definiton of a default receive filter list */
     ret = rt_dev_setsockopt(s, SOL_CAN_RAW,
CAN_RAW_FILTER, NULL, 0);
       if (ret < 0) {</pre>
            fprintf(stderr, "rt_dev_setsockopt: %s\n", strerror(-ret));
           goto failure;
       }
       ret = rt_dev_bind(s, (struct sockaddr *)&to_addr, sizeof(to_addr));
       if (ret < 0) {</pre>
           fprintf(stderr, "rt_dev_bind: %s\n", strerror(-ret));
           goto failure;
   }
   if (count)
       frame.can_dlc = sizeof(int);
       for (i = optind + 1; i < argc; i++) {
           frame.data[dlc] = strtoul(argv[i], NULL, 0);
           dlc++:
           if( dlc == 8 )
                break;
       frame.can_dlc = dlc;
   }
   if (rtr)
       frame.can_id |= CAN_RTR_FLAG;
   if (extended)
       frame.can_id |= CAN_EFF_FLAG;
   if (timeout) {
       if (verbose)
       printf("Timeout: %1ld ns\n", (long long)timeout);
ret = rt_dev_ioctl(s, RTCAN_RTIOC_SND_TIMEOUT, &timeout);
       if (ret) {
           fprintf(stderr, "rt_dev_ioctl SND_TIMEOUT: %s\n", strerror(-ret));
           goto failure;
   }
   snprintf(name, sizeof(name), "rtcansend-%d", getpid());
   ret = rt_task_shadow(&rt_task_desc, name, 1, 0);
   if (ret) {
       fprintf(stderr, "rt_task_shadow: %s\n", strerror(-ret));
   rt_task();
   cleanup();
   return 0;
failure:
   cleanup();
   return -1;
```

## 9.10 xddp-echo.c

```
^{/*} ^{*} XDDP-based RT/NRT threads communication demo.
        Real-time Xenomai threads and regular Linux threads may want to
        exchange data in a way that does not require the former to leave the real-time domain (i.e. secondary mode). Message pipes – as \,
        implemented by the RTDM-based XDDP protocol - are provided for this
     * purpose.
    * On the Linux domain side, pseudo-device files named /dev/rtp<minor>
         give regular POSIX threads access to non real-time communication % \left( 1\right) =\left( 1\right) \left( 1\right) \left(
         endpoints, via the standard character-based I/O interface. On the
         Xenomai domain side, sockets may be bound to XDDP ports, which act
         as proxies to send and receive data to/from the associated
         pseudo-device files. Ports and pseudo-device minor numbers are
         paired, meaning that e.g. port 7 will proxy the traffic for
         /dev/rtp7. Therefore, port numbers may range from 0 to
         CONFIG_XENO_OPT_PIPE_NRDEV - 1.
         All data sent through a bound/connected XDDP socket via sendto(2) or
         write(2) will be passed to the peer endpoint in the Linux domain,
         and made available for reading via the standard read(2) system
         call. Conversely, all data sent using write(2) through the non
        real-time endpoint will be conveyed to the real-time socket
         endpoint, and made available to the recvfrom(2) or read(2) system
         calls.
    * Both threads can use the bi-directional data path to send and
        receive datagrams in a FIFO manner, as illustrated by the simple
         echoing process implemented by this program.
         realtime_thread------
            => get socket
              => bind socket to port 0
              => write traffic to NRT domain via sendto()
              => read traffic from NRT domain via recvfrom() <--|--+
        regular thread-----
             => open /dev/rtp0
             => read traffic from RT domain via read()
              => echo traffic back to RT domain via write()
 #include <stdio.h>
 #include <stdlib.h>
 #include <unistd.h>
 #include <signal.h>
 #include <string.h>
 #include <malloc.h>
 #include <pthread.h>
 #include <fcntl.h>
 #include <errno.h>
#include <rtdm/ipc.h>
pthread_t rt, nrt;
 #define XDDP PORT 0
                                                                /* [0..CONFIG-XENO OPT PIPE NRDEV - 1] */
 static const char *msg[] = {
                        "Surfing With The Alien",
                         "Lords of Karma",
                        "Banana Mango",
"Psycho Monkey"
                         "Luminous Flesh Giants",
                        "Moroccan Sunset",
                         "Satch Boogie"
                         "Flying In A Blue Dream",
                         "Ride",
                         "Summer Song"
                         "Speed Of Light",
                         "Crystal Planet"
                        "Raspberry Jam Delta-V",
                         "Champagne?",
                        "Clouds Race Across The Sky",
                        "Engines Of Creation"
}:
 static void fail(const char *reason)
                        exit(EXIT_FAILURE);
 static void *realtime_thread(void *arg)
```

9.10 xddp-echo.c 603

```
struct sockaddr_ipc saddr;
         int ret, s, n = 0, len;
         struct timespec ts;
         size_t poolsz;
         char buf[128];
          \ensuremath{^{*}} Get a datagram socket to bind to the RT endpoint. Each
          * endpoint is represented by a port number within the XDDP
            protocol namespace.
         s = socket(AF_RTIPC, SOCK_DGRAM, IPCPROTO_XDDP);
         if (s < 0) {
                  perror("socket");
                   exit(EXIT_FAILURE);
         }
          * Set a local 16k pool for the RT endpoint. Memory needed to
          * convey datagrams will be pulled from this pool, instead of
          * Xenomai's system pool.
         poolsz = 16384; /* bytes */
ret = setsockopt(s, SOL_XDDP, XDDP_POOLSZ,
                             &poolsz, sizeof(poolsz));
         if (ret)
                   fail("setsockopt");
          * Bind the socket to the port, to setup a proxy to channel * traffic to/from the Linux domain.
          * saddr.sipc_port specifies the port number to use.
          */
         memset(&saddr, 0, sizeof(saddr));
saddr.sipc_family = AF_RTIPC;
saddr.sipc_port = XDDP_PORT;
         ret = bind(s, (struct sockaddr *)&saddr, sizeof(saddr));
         if (ret)
                   fail("bind");
         for (;;) {
                   len = strlen(msg[n]);
                   /*

* Send a datagram to the NRT endpoint via the proxy.

**The description address, since a
                    \ensuremath{^{*}} We may pass a NULL destination address, since a
                    * bound socket is assigned a default destination
                    * address matching the binding address (unless
* connect(2) was issued before bind(2), in which case
* the former would prevail).
                   ret = sendto(s, msg[n], len, 0, NULL, 0);
                   if (ret != len)
                            fail("sendto");
                   printf("%s: sent %d bytes, \"%.*s\"\n",
                           __FUNCTION__, ret, ret, msg[n]);
                   /* Read back packets echoed by the regular thread */
                   ret = recvfrom(s, buf, sizeof(buf), 0, NULL, 0);
                   if (ret <= 0)</pre>
                            fail("recvfrom");
                   printf(" \Rightarrow \"*.*s" echoed by peer\n", ret, buf);
                   n = (n + 1) % (sizeof(msg) / sizeof(msg[0]));
                    \ensuremath{^{*}} We run in full real-time mode (i.e. primary mode),
                    * so we have to let the system breathe between two
                    * iterations.
                  ts.tv_sec = 0;
ts.tv_nsec = 500000000; /* 500 ms */
                   clock_nanosleep(CLOCK_REALTIME, 0, &ts, NULL);
         return NULL;
}
static void *regular_thread(void *arg)
{
         char buf[128], *devname;
         int fd, ret;
         if (asprintf(&devname, "/dev/rtp%d", XDDP_PORT) < 0)</pre>
                   fail("asprintf");
```

```
fd = open(devname, O_RDWR);
        free(devname);
        if (fd < 0)</pre>
                 fail("open");
        for (;;) {
    /* Get the next message from realtime_thread. */
                 ret = read(fd, buf, sizeof(buf));
                 if (ret <= 0)</pre>
                          fail("read");
                 /* Echo the message back to realtime_thread. */
                 ret = write(fd, buf, ret);
                 if (ret <= 0)</pre>
                          fail("write");
        }
        return NULL;
int main(int argc, char **argv)
        struct sched_param rtparam = { .sched_priority = 42 };
        pthread_attr_t rtattr, regattr;
        sigset_t set;
        int sig;
        sigemptyset(&set);
        sigaddset(&set, SIGINT);
        sigaddset(&set, SIGTERM);
sigaddset(&set, SIGHUP);
        pthread_sigmask(SIG_BLOCK, &set, NULL);
        pthread_attr_init(&rtattr);
        \tt pthread\_attr\_setdetachstate(\&rtattr, PTHREAD\_CREATE\_JOINABLE);
        pthread_attr_setinheritsched(&rtattr, PTHREAD_EXPLICIT_SCHED);
pthread_attr_setschedpolicy(&rtattr, SCHED_FIF0);
        pthread_attr_setschedparam(&rtattr, &rtparam);
        errno = pthread_create(&rt, &rtattr, &realtime_thread, NULL);
        if (errno)
                 fail("pthread_create");
        pthread_attr_init(&regattr);
        pthread_attr_setdetachstate(&regattr, PTHREAD_CREATE_JOINABLE);
        pthread_attr_setinheritsched(&regattr, PTHREAD_EXPLICIT_SCHED);
        pthread_attr_setschedpolicy(&regattr, SCHED_OTHER);
        errno = pthread_create(&nrt, &regattr, &regular_thread, NULL);
        if (errno)
                 fail("pthread_create");
        sigwait(&set, &sig);
        pthread_cancel(rt);
        pthread_cancel(nrt);
        pthread_join(rt, NULL);
pthread_join(nrt, NULL);
        return 0;
```

## 9.11 xddp-label.c

```
/*

* XDDP-based RT/NRT threads communication demo.

* Real-time Xenomai threads and regular Linux threads may want to

* exchange data in a way that does not require the former to leave

* the real-time domain (i.e. secondary mode). Message pipes - as

* implemented by the RTDM-based XDDP protocol - are provided for this

* purpose.

* On the Linux domain side, pseudo-device files named /dev/rtp<minor>

* give regular POSIX threads access to non real-time communication

* endpoints, via the standard character-based I/O interface. On the

* Xenomai domain side, sockets may be bound to XDDP ports, which act

* as proxies to send and receive data to/from the associated

* pseudo-device files. Ports and pseudo-device minor numbers are

* paired, meaning that e.g. port 7 will proxy the traffic for

* /dev/rtp7. Therefore, port numbers may range from 0 to

* CONFIG_XENO_OPT_PIPE_NRDEV - 1.

* All data sent through a bound/connected XDDP socket via sendto(2) or
```

9.11 xddp-label.c 605

```
* write(2) will be passed to the peer endpoint in the Linux domain,
 * and made available for reading via the standard read(2) system
 * call. Conversely, all data sent using write(2) through the non
 * real-time endpoint will be conveyed to the real-time socket
   endpoint, and made available to the recvfrom(2) or read(2) system
   calls.
 * ASCII labels can be attached to bound ports, in order to connect
 ^{st} sockets to them in a more descriptive way than using plain numeric
  * port values.
 * The example code below illustrates the following process:
 * realtime_thread1-----+
    => get socket
    => bind socket to port "xddp-demo
    => read traffic from NRT domain via recvfrom() <--+--
   realtime_thread2-----
    => get socket
    => connect socket to port "xddp-demo"
    => write traffic to NRT domain via sendto()
 * regular_thread-----
    => open /proc/xenomai/registry/rtipc/xddp/xddp-demo |
    => read traffic from RT domain via read()
    => mirror traffic to RT domain via write()
#include <stdio.h>
#include <stdlib.h>
#include <unistd.h>
#include <signal.h>
#include <string.h>
#include <malloc.h>
#include <pthread.h>
#include <fcntl.h>
#include <errno.h>
#include <rtdm/ipc.h>
pthread_t rt1, rt2, nrt;
#define XDDP_PORT_LABEL "xddp-demo"
static const char *msg[] = {
        "Surfing With The Alien",
        "Lords of Karma",
        "Banana Mango",
"Psycho Monkey"
        "Luminous Flesh Giants",
        "Moroccan Sunset",
        "Satch Boogie"
        "Flying In A Blue Dream",
        "Ride",
        "Summer Song"
        "Speed Of Light",
        "Crystal Planet"
        "Raspberry Jam Delta-V",
        "Champagne?",
        "Clouds Race Across The Sky",
        "Engines Of Creation"
}:
static void fail(const char *reason)
{
        perror(reason);
        exit(EXIT_FAILURE);
}
static void *realtime_thread1(void *arg)
{
        struct rtipc_port_label plabel;
        struct sockaddr_ipc saddr;
        char buf[128];
        int ret, s;
        /*

* Get a datagram socket to bind to the RT endpoint. Each

** a port number within the XD
        * endpoint is represented by a port number within the XDDP
          protocol namespace.
        s = socket(AF_RTIPC, SOCK_DGRAM, IPCPROTO_XDDP);
        if (s < 0) {
               perror("socket");
                exit(EXIT_FAILURE);
        }
```

```
* Set a port label. This name will be registered when
         * binding, in addition to the port number (if given).
        fail("setsockopt");
         * Bind the socket to the port, to setup a proxy to channel * traffic to/from the Linux domain. Assign that port a label,
           so that peers may use a descriptive information to locate it. For instance, the pseudo-device matching our RT
         * endpoint will appear as
          * /proc/xenomai/registry/rtipc/xddp/<XDDP_PORT_LABEL> in the
         * Linux domain, once the socket is bound.
         * saddr.sipc_port specifies the port number to use. If -1 is * passed, the XDDP driver will auto-select an idle port.
         memset(&saddr, 0, sizeof(saddr));
        saddr.sipc_family = AF_RTIPC;
         saddr.sipc_port = -1;
        ret = bind(s, (struct sockaddr *)&saddr, sizeof(saddr));
        if (ret)
                 fail("bind");
        ret = recvfrom(s, buf, sizeof(buf), 0, NULL, 0);
                 if (ret <= 0)</pre>
                         fail("recvfrom");
                 printf("%s: \"%.*s\" relayed by peer\n", __FUNCTION__, ret, buf);
        }
        return NULL;
}
static void *realtime_thread2(void *arg)
        struct rtipc_port_label plabel;
        struct sockaddr_ipc saddr;
         int ret, s, n = 0, len;
        struct timespec ts;
         struct timeval tv:
        socklen_t addrlen;
        s = socket(AF_RTIPC, SOCK_DGRAM, IPCPROTO_XDDP);
        if (s < 0) {
                 perror("socket");
                 exit(EXIT_FAILURE);
        }
         \ensuremath{^{*}} Set the socket timeout; it will apply when attempting to
         * connect to a labeled port, and to recvfrom() calls. The
         * following setup tells the XDDP driver to wait for at most
         \ensuremath{^{*}} one second until a socket is bound to a port using the same
         \mbox{*} label, or return with a timeout error.
        tv.tv_sec = 1;
        tv.tv_usec = 0;
        ret = setsockopt(s, SOL_SOCKET, SO_RCVTIMEO,
                           &tv, sizeof(tv));
        if (ret)
                 fail("setsockopt");
         * Set a port label. This name will be used to find the peer
         * when connecting, instead of the port number.
        if (ret)
                 fail("setsockopt");
        memset(&saddr, 0, sizeof(saddr));
        maintaincrease(state),
saddr.sipc_family = AF_RTIPC;
saddr.sipc_port = -1;  /* Tell XDDP to search by label. */
        ret = connect(s, (struct sockaddr *)&saddr, sizeof(saddr));
        if (ret)
                 fail("connect");
        ^{/\ast} ^{\ast} We succeeded in making the port our default destination
```

9.11 xddp-label.c 607

```
address by using its label, but we don't know its actual
         * port number yet. Use getpeername() to retrieve it.
        addrlen = sizeof(saddr);
        ret = getpeername(s, (struct sockaddr *)&saddr, &addrlen);
if (ret || addrlen != sizeof(saddr))
                 fail("getpeername");
        printf("%s: NRT peer is reading from /dev/rtp%d\n",
                __FUNCTION__, saddr.sipc_port);
        for (;;) {
                 len = strlen(msg[n]);
                \mbox{*} We may pass a NULL destination address, since the
                  * socket was successfully assigned the proper default
                  * address via connect(2).
                 ret = sendto(s, msg[n], len, 0, NULL, 0);
                 if (ret != len)
                         fail("sendto");
                 n = (n + 1) % (sizeof(msg) / sizeof(msg[0]));
                 /*

* We run in full real-time mode (i.e. primary mode),
                  \mbox{\scriptsize *} so we have to let the system breathe between two
                  * iterations.
                 ts.tv_sec = 0;
                 ts.tv_nsec = 500000000; /* 500 ms */
                 clock_nanosleep(CLOCK_REALTIME, 0, &ts, NULL);
        }
        return NULL;
static void *regular_thread(void *arg)
{
        char buf[128], *devname;
        int fd, ret;
        if (asprintf(&devname,
                      "/proc/xenomai/registry/rtipc/xddp/%s",
                      XDDP_PORT_LABEL) < 0)
                 fail("asprintf");
        fd = open(devname, O_RDWR);
        free(devname);
        if (fd < 0)</pre>
                 fail("open");
        for (;;) {
    /* Get the next message from realtime_thread2. */
                 ret = read(fd, buf, sizeof(buf));
                 if (ret <= 0)</pre>
                         fail("read"):
                 /* Relay the message to realtime_thread1. */
                 ret = write(fd, buf, ret);
                 if (ret <= 0)</pre>
                         fail("write");
        }
        return NULL:
}
int main(int argc, char **argv)
        struct sched_param rtparam = { .sched_priority = 42 };
        pthread_attr_t rtattr, regattr;
        sigset_t set;
        int sig;
        sigemptyset(&set);
        sigaddset(&set, SIGINT);
        sigaddset(&set, SIGTERM);
sigaddset(&set, SIGHUP);
        pthread_sigmask(SIG_BLOCK, &set, NULL);
        pthread_attr_init(&rtattr);
        pthread_attr_setdetachstate(&rtattr, PTHREAD_CREATE_JOINABLE);
        pthread_attr_setinheritsched(&rtattr, PTHREAD_EXPLICIT_SCHED);
pthread_attr_setschedpolicy(&rtattr, SCHED_FIF0);
```

```
pthread_attr_setschedparam(&rtattr, &rtparam);
        /* Both real-time threads have the same attribute set. */
        errno = pthread_create(&rt1, &rtattr, &realtime_thread1, NULL);
        if (errno)
                fail("pthread_create");
        errno = pthread_create(&rt2, &rtattr, &realtime_thread2, NULL);
        if (errno)
                fail("pthread create"):
       pthread_attr_init(&regattr);
       pthread_attr_setdetachstate(&regattr, PTHREAD_CREATE_JOINABLE);
       pthread_attr_setinheritsched(&regattr, PTHREAD_EXPLICIT_SCHED);
        pthread_attr_setschedpolicy(&regattr, SCHED_OTHER);
        errno = pthread_create(&nrt, &regattr, &regular_thread, NULL);
        if (errno)
                fail("pthread_create");
       sigwait(&set, &sig);
       pthread_cancel(rt1);
       pthread_cancel(rt2):
       pthread_cancel(nrt);
       pthread_join(rt1, NULL);
       pthread_join(rt2, NULL);
       pthread_join(nrt, NULL);
       return 0:
}
```

### 9.12 xddp-stream.c

```
\mbox{\ensuremath{^{*}}}\xspace XDDP-based RT/NRT threads communication demo.
   Real-time Xenomai threads and regular Linux threads may want to
   exchange data in a way that does not require the former to leave
   the real-time domain (i.e. secondary mode). Message pipes - as
 ^{st} implemented by the RTDM-based XDDP protocol - are provided for this
 * purpose.
 * On the Linux domain side, pseudo-device files named /dev/rtp<minor>
   give regular POSIX threads access to non real-time communication
   endpoints, via the standard character-based I/O interface. On the
   Xenomai domain side, sockets may be bound to XDDP ports, which act
   as proxies to send and receive data to/from the associated % \left( 1\right) =\left( 1\right) \left( 1\right) 
  pseudo-device files. Ports and pseudo-device minor numbers are paired, meaning that e.g. port 7 will proxy the traffic for /dev/rtp7. Therefore, port numbers may range from 0 to
   CONFIG_XENO_OPT_PIPE_NRDEV - 1.
 * All data sent through a bound/connected XDDP socket via sendto(2) or
  \mbox{write(2)} will be passed to the peer endpoint in the Linux domain,
   and made available for reading via the standard read(2) system
   call. Conversely, all data sent using write(2) through the non
   real-time endpoint will be conveyed to the real-time socket
   endpoint, and made available to the recvfrom(2) or read(2) system
  calls.
   In addition to sending datagrams, real-time threads may stream data
   in a byte-oriented mode through the proxy as well. This increases
   the bandwidth and reduces the overhead, when a lot of data has to
 * flow down to the Linux domain, if keeping the message boundaries is
 * not required. The example code below illustrates such use.
   => get socket
    => bind socket to port 0
         write scattered traffic to NRT domain via sendto()
    => read traffic from NRT domain via recvfrom()
 * regular thread------
    => open /dev/rtp0
    => read traffic from RT domain via read()
        echo traffic back to RT domain via write()
#include <stdio.h>
#include <stdlib.h>
#include <unistd.h>
#include <signal.h>
#include <string.h>
```

```
#include <malloc.h>
#include <pthread.h>
#include <fcntl.h>
#include <errno.h>
#include <rtdm/ipc.h>
pthread_t rt, nrt;
#define XDDP PORT 0
                       /* [0..CONFIG-XENO_OPT_PIPE_NRDEV - 1] */
static const char *msg[] = {
         "Surfing With The Alien",
         "Lords of Karma",
         "Banana Mango",
"Psycho Monkey",
         "Luminous Flesh Giants",
         "Moroccan Sunset",
         "Satch Boogie",
         "Flying In A Blue Dream",
         "Ride",
         "Summer Song"
         "Speed Of Light",
         "Crystal Planet"
         "Raspberry Jam Delta-V",
         "Champagne?",
         "Clouds Race Across The Sky",
         "Engines Of Creation"
};
static void fail(const char *reason)
{
        perror(reason);
         exit(EXIT_FAILURE);
}
static void *realtime_thread(void *arg)
{
         struct sockaddr_ipc saddr;
         int ret, s, n = 0, len, b;
         struct timespec ts;
        size_t streamsz;
        char buf[128];
         * Get a datagram socket to bind to the RT endpoint. Each
* endpoint is represented by a port number within the XDDP
         * protocol namespace.
        s = socket(AF_RTIPC, SOCK_DGRAM, IPCPROTO_XDDP);
        if (s < 0) {
                 perror("socket");
                 exit(EXIT_FAILURE);
        }
         * Tell the XDDP driver that we will use the streaming
         * capabilities on this socket. To this end, we have to
         * specify the size of the streaming buffer, as a count of
         * bytes. The real-time output will be buffered up to that
          * amount, and sent as a single datagram to the NRT endpoint
          * When fully gathered, or when another source port attempts
          * to send data to the same endpoint. Passing a null size
         * would disable streaming.
        streamsz = 1024; /* bytes */
        ret = setsockopt(s, SOL_XDDP, XDDP_BUFSZ,
                          &streamsz, sizeof(streamsz));
        if (ret)
                 fail("setsockopt");
         \ensuremath{^{*}} Bind the socket to the port, to setup a proxy to channel
         * traffic to/from the Linux domain.
         * saddr.sipc_port specifies the port number to use.
        memset(&saddr, 0, sizeof(saddr));
         saddr.sipc_family = AF_RTIPC;
         saddr.sipc_port = XDDP_PORT;
        ret = bind(s, (struct sockaddr *)&saddr, sizeof(saddr));
        if (ret)
                 fail("bind");
         for (;;) {
                 len = strlen(msg[n]);
                  \ensuremath{^{*}} Send a datagram to the NRT endpoint via the proxy.
                  * The output is artificially scattered in separate
```

```
* one-byte sendings, to illustrate the use of
                  * MSG_MORE.
                 for (b = 0; b < len; b++) {
                          ret = sendto(s, msg[n] + b, 1, MSG_MORE, NULL, 0);
if (ret != 1)
                                  fail("sendto");
                 printf("%s: sent (scattered) %d-bytes message, \"%.*s\"\n",
                          __FUNCTION__, len, len, msg[n]);
                 /* Read back packets echoed by the regular thread */
                 ret = recvfrom(s, buf, sizeof(buf), 0, NULL, 0);
                 if (ret <= 0)</pre>
                          fail("recvfrom");
                 printf(" \Rightarrow \"\%.*s" echoed by peer\n", ret, buf);
                 n = (n + 1) % (sizeof(msg) / sizeof(msg[0]));
                 /*
 * We run in full real-time mode (i.e. primary mode),
                  \ensuremath{^{*}} so we have to let the system breathe between two
                  * iterations.
                 ts.tv_sec = 0;
                 ts.tv_nsec = 500000000; /* 500 ms */
                 clock_nanosleep(CLOCK_REALTIME, 0, &ts, NULL);
        return NULL;
}
static void *regular_thread(void *arg)
        char buf[128], *devname;
        int fd, ret;
        fd = open(devname, O_RDWR);
        free(devname);
        if (fd < 0)</pre>
                 fail("open");
        for (;;) {
    /* Get the next message from realtime_thread. */
    ret = read(fd, buf, sizeof(buf));
                 if (ret <= 0)</pre>
                          fail("read");
                 /* Echo the message back to realtime_thread. */
                 ret = write(fd, buf, ret);
                 if (ret <= 0)</pre>
                          fail("write");
        return NULL;
}
int main(int argc, char **argv)
         struct sched_param rtparam = { .sched_priority = 42 };
        pthread_attr_t rtattr, regattr;
         sigset_t set;
        int sig;
        sigemptyset(&set):
        sigaddset(&set, SIGINT);
        sigaddset(&set, SIGTERM);
sigaddset(&set, SIGHUP);
        pthread_sigmask(SIG_BLOCK, &set, NULL);
        pthread_attr_init(&rtattr);
        pthread_attr_setdetachstate(&rtattr, PTHREAD_CREATE_JOINABLE);
        pthread_attr_setinheritsched(&rtattr, PTHREAD_EXPLICIT_SCHED);
        pthread_attr_setschedpolicy(&rtattr, SCHED_FIF0);
        pthread_attr_setschedparam(&rtattr, &rtparam);
        errno = pthread_create(&rt, &rtattr, &realtime_thread, NULL);
        if (errno)
                 fail("pthread_create");
        pthread_attr_init(&regattr);
        pthread_attr_setdetachstate(&regattr, PTHREAD_CREATE_JOINABLE);
pthread_attr_setinheritsched(&regattr, PTHREAD_EXPLICIT_SCHED);
```

9.12 xddp-stream.c 611

# Index

xntimer_migrate	a4l_descriptor, 452
Timer services, 226	board_name, 452
	driver_name, 452
A4L_RNG_FACTOR	fd, 452
uapi/analogy.h, 561	idx_read_subd, 452
a4l_add_subd	idx_write_subd, 453
Subdevice management services, 245	magic, 453
a4l_alloc_subd	nb_subd, 453
Subdevice management services, 245	sbdata, 453
a4l_async_read	sbsize, 453
Asynchronous acquisition API, 322	a4l driver, 453
a4l_async_write	a4l dtoraw
Asynchronous acquisition API, 322	Range / conversion API, 329
a4l_buf_commit_absget	<u> </u>
Buffer management services, 248	a4l_fill_desc
a4l_buf_commit_absput	Descriptor API, 327
Buffer management services, 249	a4l_find_range
a4l buf commit get	Range / conversion API, 330
Buffer management services, 249	a4l_free_irq
a4l_buf_commit_put	Interrupt management services, 255
Buffer management services, 249	a4l_ftoraw
a4l buf count	Range / conversion API, 330
Buffer management services, 250	a4l_get_bufsize
a4l buf evt	Asynchronous acquisition API, 318
Buffer management services, 250	a4l_get_chan
a4l_buf_get	Buffer management services, 254
Buffer management services, 251	a4l_get_chinfo
a4l_buf_prepare_absget	Descriptor API, 327
Buffer management services, 251	a4l_get_cmd
a4l_buf_prepare_absput	Buffer management services, 254
	a4l_get_irq
Buffer management services, 251	Interrupt management services, 255
a4l_buf_prepare_get	a4l_get_rnginfo
Buffer management services, 252	Descriptor API, 327
a4l_buf_prepare_put	a4l_get_subd
Buffer management services, 252	Subdevice management services, 245
a4l_buf_put	a4l_get_subdinfo
Buffer management services, 252	<del></del>
a4l_channel, 449	Descriptor API, 328
flags, 449	a4l_get_time
nb_bits, 449	Misc services, 258
a4l_channels_desc, 449	a4l_instruction, 454
chans, 450	idx_subd, 455
length, 450	a4l_instruction_list, 455
mode, 450	a4l_mark_bufrw
a4l_close	Asynchronous acquisition API, 318
Descriptor API, 326	a4l_mmap
a4l_cmd_desc, 450	Asynchronous acquisition API, 319
idx_subd, 451	a4l_open
a4l_config_subd	Descriptor API, 328
Synchronous acquisition API, 340	a4l_poll

INDEX 613

	As a character to the ADL 040	Alexander 2010
41	Asynchronous acquisition API, 319	Alarm services, 349
a4I_	range, 455	rt_alarm_create, 349
	flags, 456	rt_alarm_delete, 350
	max, 456	rt_alarm_inquire, 350
	min, 456	rt_alarm_start, 351
a4l_	rawtod	rt_alarm_stop, 351
	Range / conversion API, 331	Alchemy API, 383
a4l	rawtof	Analogy framework, 239
_	Range / conversion API, 331	Analogy user API, 343
a4l	rawtoul	Asynchronous acquisition API, 316, 322
u-11_	Range / conversion API, 331	a4l_async_read, 322
041	•	a4l_async_write, 322
a41_	register_drv	a4l_get_bufsize, 318
41	Driver management services, 241	
a41_	request_irq	a4l_mark_bufrw, 318
	Interrupt management services, 255	a4l_mmap, 319
a4l_	_set_bufsize	a4l_poll, 319
	Asynchronous acquisition API, 320	a4l_set_bufsize, 320
a4l_	sizeof_chan	a4l_snd_cancel, 320
	Range / conversion API, 332	a4l_snd_command, 321
a4l	sizeof subd	Asynchronous Procedure Calls, 90
_	Range / conversion API, 332	xnapc_alloc, 90
a4l	snd_cancel	xnapc_free, 91
u	Asynchronous acquisition API, 320	xnapc_schedule, 91
041	· ·	atomic_t, 458
a41_	snd_command	Attach / detach Syscall API, 347
- 41	Asynchronous acquisition API, 321	a4l_sys_attach, 347
a41_	snd_insn	a4l_sys_bufcfg, 347
	Synchronous acquisition API, 337	a4l_sys_detach, 348
a4l_	snd_insnlist	a4i_sys_detach, 346
	Synchronous acquisition API, 337	B PRIO
a4l_	subdevice, 456	Buffer services, 354
a4l	sync_dio	BUFP BUFSZ
	Synchronous acquisition API, 341	_
a4l	sync_read	Real-time IPC, 77
_	Synchronous acquisition API, 341	BUFP_LABEL
a4l	sync_write	Real-time IPC, 78
u-11_	Synchronous acquisition API, 342	Basic Syscall API, 345
041		a4l_sys_close, 345
a41_	sys_attach	a4l_sys_open, 345
41	Attach / detach Syscall API, 347	a4l_sys_read, <mark>345</mark>
a41_	sys_bufcfg	a4l_sys_write, 346
	Attach / detach Syscall API, 347	begin
a4l_	_sys_close	xnvfile_regular_ops, 488
	Basic Syscall API, 345	xnvfile_snapshot_ops, 494
a4l_	_sys_desc	Big dual kernel lock, 20
	Descriptor Syscall API, 324	cobalt atomic enter, 20
a4l	sys_detach	cobalt atomic leave, 21
_	Attach / detach Syscall API, 348	bind_AF_RTIPC
a4l	sys_open	Real-time IPC, 84
u	Basic Syscall API, 345	
241	· · · · · · · · · · · · · · · · · · ·	board_name
a41_	sys_read	a4l_descriptor, 452
- 41	Basic Syscall API, 345	Buffer descriptor, 93
a41_	sys_write	xnbufd_copy_from_kmem, 95
	Basic Syscall API, 346	xnbufd_copy_to_kmem, 96
a4l_	ultoraw	xnbufd_invalidate, 96
	Range / conversion API, 333	xnbufd_map_kread, 97
a4l_	_unregister_drv	xnbufd_map_kwrite, 97
	Driver management services, 241	xnbufd_map_uread, 97
add	_	xnbufd_map_uwrite, 98
	udd_memregion, 483	xnbufd_reset, 98

614 INDEX

CAN Devices, 56
•
CAN_STATE_ACTIVE
CAN Devices, 56
CAN_STATE_BUS_OFF
CAN Devices, 56
CAN_STATE_BUS_PASSIVE
CAN Devices, 56
CAN_STATE_BUS_WARNING
CAN Devices, 56
CAN_STATE_ERROR_ACTIVE
CAN Devices, 56
CAN_STATE_ERROR_PASSIVE
CAN Devices, 56
CAN_STATE_ERROR_WARNING
CAN Devices, 56
CAN_STATE_SCANNING_BAUDRATE
CAN Devices, 56
CAN_STATE_SLEEPING
CAN Devices, 56
CAN_STATE_STOPPED
CAN Devices, 56
CAN Devices, 37
CAN BITTIME TYPE, 56
CAN MODE, 56
<del>_</del>
CAN_RAW_FILTER, 47
CAN_RAW_LOOPBACK, 47
CAN_STATE, 56
can_filter_t, 55
can_frame_t, 55
SIOCGCANBAUDRATE, 49
SIOCGCANCTRLMODE, 51
SIOCGCANSTATE, 51
SIOCGIFINDEX, 52
SIOCSCANBAUDRATE, 52
SIOCSCANCTRLMODE, 53
SIOCSCANMODE, 54
SOL CAN RAW, 55
CAN_BITTIME_TYPE
CAN Devices, 56
CAN_MODE
CAN Devices, 56
CAN_RAW_ERR_FILTER
CAN Devices, 46
CAN_RAW_FILTER
CAN Devices, 47
CAN RAW LOOPBACK
CAN Devices, 47
CAN Devices, 47 CAN_STATE
CAN Devices, 47 CAN_STATE CAN Devices, 56
CAN Devices, 47 CAN_STATE CAN Devices, 56 COMPATrt_alarm_create
CAN Devices, 47 CAN_STATE CAN Devices, 56 COMPATrt_alarm_create Transition Kit, 442
CAN Devices, 47  CAN_STATE CAN Devices, 56  COMPATrt_alarm_create Transition Kit, 442  COMPATrt_event_clear
CAN Devices, 47  CAN_STATE CAN Devices, 56  COMPATrt_alarm_create Transition Kit, 442  COMPATrt_event_clear Transition Kit, 443
CAN Devices, 47  CAN_STATE CAN Devices, 56  COMPATrt_alarm_create Transition Kit, 442  COMPATrt_event_clear Transition Kit, 443  COMPATrt_event_create
CAN Devices, 47  CAN_STATE CAN Devices, 56  COMPATrt_alarm_create Transition Kit, 442  COMPATrt_event_clear Transition Kit, 443  COMPATrt_event_create Transition Kit, 443
CAN Devices, 47  CAN_STATE CAN Devices, 56  COMPATrt_alarm_create Transition Kit, 442  COMPATrt_event_clear Transition Kit, 443  COMPATrt_event_create
CAN Devices, 47  CAN_STATE CAN Devices, 56  COMPATrt_alarm_create Transition Kit, 442  COMPATrt_event_clear Transition Kit, 443  COMPATrt_event_create Transition Kit, 443

Transition Kit, 444	Cobalt kernel, 110
COMPATrt_task_set_periodic	cobalt_atomic_enter
Transition Kit, 446	Big dual kernel lock, 20
can bittime, 458	cobalt_atomic_leave
can_bittime_btr, 459	Big dual kernel lock, 21
can_bittime_std, 460	Condition variable services, 362
can_filter, 460	rt_cond_bind, 363
can_id, 461	rt_cond_broadcast, 363
can_mask, 461	rt_cond_create, 364
can_filter_t	rt_cond_delete, 364
CAN Devices, 55	rt_cond_inquire, 365
can_frame, 461	rt_cond_signal, 365
can_id, 462	rt_cond_unbind, 366
<del>_</del>	rt_cond_wait, 366
can_frame_t	rt_cond_wait_timed, 366
CAN Devices, 55	rt_cond_wait_until, 367
can_id	Condition variables, 266
can_filter, 461	pthread_cond_broadcast, 267
can_frame, 462	pthread cond destroy, 267
can_ifindex	pthread_cond_init, 268
sockaddr_can, 478	pthread_cond_signal, 268
can_mask	pthread_cond_timedwait, 268
can_filter, 461	pthread_cond_unredwait, 269
Channels and ranges, 17	pthread_condattr_destroy, 270
chans	pthread_condattr_getclock, 270
a4l_channels_desc, 450	
Clock Services, 146	pthread_condattr_getpshared, 271
rtdm_clock_read, 146	pthread_condattr_init, 271
rtdm_clock_read_monotonic, 146	pthread_condattr_setclock, 272
Clock services, 101	pthread_condattr_setpshared, 272
xnclock_adjust, 101	connectAF_RTIPC
xnclock_deregister, 101	Real-time IPC, 86
xnclock_register, 103	cpu
xnclock_tick, 103	xnsched, 485
clock_getres	curr
Clocks and timers, 260	xnsched, 485
clock_gettime	databuf
Clocks and timers, 260	xnvfile snapshot iterator, 493
clock_nanosleep	date
Clocks and timers, 261	rt timer info, 467
clock_settime	Debugging services, 104
Clocks and timers, 262	Descriptor API, 326
Clocks and timers, 259	a4l close, 326
clock_getres, 260	a41_close, 320 a41_fill_desc, 327
clock_gettime, 260	
clock_nanosleep, 261	a4l_get_chinfo, 327
clock settime, 262	a4l_get_rnginfo, 327
nanosleep, 262	a4l_get_subdinfo, 328
timer_create, 263	a4l_open, 328
	Descriptor Syscall API, 324
timer_delete, 263	a4l_sys_desc, 324
timer_getoverrun, 264	device
timer_gettime, 264	rtdm_dev_context, 469
timer_settime, 265	Device Profiles, 135
close	RTIOC_DEVICE_INFO, 136
rtdm_fd_ops, 473	RTIOC_PURGE, 137
udd_device, 480	Device Registration Services, 138
closeAF_RTIPC	RTDM_EXCLUSIVE, 139
Real-time IPC, 85	RTDM_FIXED_MINOR, 139
Cobalt, 109	RTDM_NAMED_DEVICE, 139

rtdm_close_handler, 140 rtdm_dev_register, 141 rtdm_dev_unregister, 141 rtdm_get_unmapped_area_handler, 141 rtdm_ioctl_handler, 142 rtdm_mmap_handler, 142 rtdm_open_handler, 143 rtdm_read_handler, 143 rtdm_recvmsg_handler, 143 rtdm_select_handler, 144 rtdm_sendmsg_handler, 144 rtdm_socket_handler, 144	Dynamic memory allocation services, 105 xnheap_alloc, 106 xnheap_destroy, 106 xnheap_free, 106 xnheap_init, 106 xnheap_set_name, 108  EV_ANY Event flag group services, 369 EV_PRIO Event flag group services, 369 end
rtdm_write_handler, 145	xnvfile_regular_ops, 489
device_count	xnvfile_snapshot_ops, 495
rtdm_driver, 472	endfn
device_flags	xnvfile_snapshot_iterator, 493
rtdm_driver, 472	Event flag group services, 368
udd_device, 480	EV_ANY, 369
device_subclass	EV_PRIO, 369
udd_device, 480	rt_event_bind, 369
driver	rt_event_clear, 370
rtdm_device, 470	rt_event_create, 370
Driver API, 240	rt_event_delete, 371
Driver management services, 241	rt_event_inquire, 371
a4l_register_drv, 241	rt_event_signal, 372
a4l_unregister_drv, 241	rt_event_unbind, 372
Driver programming interface, 128	rt_event_wait, 372
Driver to driver services, 129	rt_event_wait_timed, 374
rtdm_accept, 130	rt_event_wait_until, 375
rtdm_bind, 130	Event Services, 171
rtdm_close, 130	rtdm_event_clear, 171
rtdm_connect, 130	rtdm_event_destroy, 171
rtdm_getpeername, 131	rtdm_event_init, 173
rtdm_getsockname, 131	rtdm_event_pulse, 173
rtdm_getsockopt, 131	rtdm_event_select, 173
rtdm_ioctl, 131	rtdm_event_signal, 174
rtdm_listen, 131	rtdm_event_timedwait, 174
rtdm_open, 132	rtdm_event_wait, 175
rtdm_read, 132	
rtdm_recv, 132	fd
rtdm_recvfrom, 132	a4l_descriptor, 452
rtdm_recvmsg, 132	fd.h
rtdm_send, 133	rtdm_fd_get, 529
rtdm_sendmsg, 133	rtdm_fd_lock, 530
rtdm_sendto, 133	rtdm_fd_put, 530
rtdm_setsockopt, 133	rtdm_fd_select, 530
rtdm_shutdown, 133	rtdm_fd_unlock, 531
rtdm_socket, 134	flags
rtdm_write, 134	a4l_channel, 449
driver.h	a4l_range, 456
RTDM CLASS MAGIC, 511	net
RTDM_PROFILE_INFO, 511	get
rtdm_fd_device, 512	xnvfile_lock_ops, 486
	get_unmapped_area
rtdm_fd_is_user, 512	rtdm_fd_ops, 473
rtdm_fd_to_private, 512	getpeernameAF_RTIPC
rtdm_private_to_fd, 513	Real-time IPC, 86
driver_name	getsocknameAF_RTIPC
a4l_descriptor, 452	Real-time IPC, 87

getsockoptAF_RTIPC	include/cobalt/kernel/rtdm/serial.h, 540
Real-time IPC, 87	include/cobalt/kernel/rtdm/testing.h, 549
2.5. 2. 2, 2	include/cobalt/kernel/rtdm/udd.h, 552
H PRIO	include/rtdm/analogy.h, 555
Heap management services, 377	include/rtdm/can.h, 519
Heap management services, 376	include/rtdm/ipc.h, 532
H_PRIO, 377	include/rtdm/rtdm.h, 537
rt_heap_alloc, 377	include/rtdm/serial.h, 540
rt_heap_alloc_timed, 377	
rt heap alloc until, 378	include/rtdm/testing.h, 550
rt heap bind, 378	include/rtdm/uapi/analogy.h, 556
_ '- '	include/rtdm/uapi/can.h, 520
rt_heap_create, 379	include/rtdm/uapi/ipc.h, 533
rt_heap_delete, 380	include/rtdm/uapi/rtdm.h, 538
rt_heap_free, 380	include/rtdm/uapi/serial.h, 541
rt_heap_inquire, 382	include/rtdm/uapi/testing.h, 551
rt_heap_unbind, 382	include/rtdm/uapi/udd.h, 554
htimer	inesting
xnsched, 485	xnsched, 485
	interrupt
IPCPROTO_BUFP	udd_device, 480
Real-time IPC, 84	Interrupt management, 113
IPCPROTO_IDDP	xnintr_affinity, 113
Real-time IPC, 84	xnintr_attach, 113
IPCPROTO_IPC	xnintr destroy, 114
Real-time IPC, 84	xnintr_detach, 114
IPCPROTO XDDP	xnintr_disable, 115
Real-time IPC, 84	xnintr_enable, 115
IDDP LABEL	xnintr_init, 115
Real-time IPC, 78	<del>_</del>
IDDP_POOLSZ	Interrupt Management Services, 182
Real-time IPC, 79	rtdm_irq_disable, 183
idx_read_subd	rtdm_irq_enable, 184
a4I_descriptor, 452	rtdm_irq_free, 184
idx subd	rtdm_irq_get_arg, 183
<del>_</del>	rtdm_irq_handler_t, 183
a4l_cmd_desc, 451	rtdm_irq_request, 185
a4l_instruction, 455	Interrupt management services, 255
idx_write_subd	a4l_free_irq, 255
a4l_descriptor, 453	a4l_get_irq, 255
In-kernel arithmetics, 92	a4l_request_irq, 255
xnarch_generic_full_divmod64, 92	ioctl
include/cobalt/kernel/rtdm/analogy/buffer.h, 499	udd_device, 481
include/cobalt/kernel/rtdm/analogy/channel	ioctl nrt
range.h, 500	rtdm_fd_ops, 473
include/cobalt/kernel/rtdm/analogy/context.h, 503	ioctl rt
include/cobalt/kernel/rtdm/analogy/device.h, 505	rtdm_fd_ops, 474
include/cobalt/kernel/rtdm/analogy/driver.h, 505	irq
include/cobalt/kernel/rtdm/analogy/instruction.h,	udd device, 481
513	ada_acvice, 401
include/cobalt/kernel/rtdm/analogy/rtdm_helpers	label
h, 515	rtdm_device, 470
include/cobalt/kernel/rtdm/analogy/subdevice.h,	rtipc_port_label, 475
516	len
include/cobalt/kernel/rtdm/analogy/transfer.h, 518	udd_memregion, 483
include/cobalt/kernel/rtdm/can.h, 519	length
include/cobalt/kernel/rtdm/cobalt.h, 527	a4l_channels_desc, 450
include/cobalt/kernel/rtdm/driver.h, 507	Level 1 API 334
include/cobalt/kernel/rtdm/fd.h, 528	Level 1 API, 334
include/cobalt/kernel/rtdm/ipc.h, 531	Level 2 API, 339
include/cobalt/kernel/rtdm/rtdm.h, 536	Iflags

xnsched, 485	mq_notify, 276
lib/analogy/async.c, 562	mq_open, 277
lib/analogy/descriptor.c, 564	mq_receive, 278
lib/analogy/info.c, 565	mq_send, 279
lib/analogy/internal.h, 562	mq_setattr, 279
lib/analogy/range.c, 565	mq_timedreceive, 280
lib/analogy/root_leaf.h, 567	•—
<del>••</del>	mq_timedsend, 280
lib/analogy/sync.c, 567	mq_unlink, 282
lib/analogy/sys.c, 569	min
Lightweight key-to-object mapping service, 119	a4l_range, 456
xnmap_create, 119	minor
xnmap_delete, 120	rtdm_device, 470
xnmap_enter, 120	Misc services, 258
xnmap_fetch, 121	a4l_get_time, 258
xnmap_fetch_nocheck, 121	mmap
xnmap_remove, 121	rtdm_fd_ops, 474
Locking services, 117	udd device, 481
splexit, 117	mode
splhigh, 117	a4l_channels_desc, 450
spltest, 118	mq_close
magic	Message queues, 276
a4I descriptor, 453	mq_getattr
max	Message queues, 276
a4l_range, 456	mq_notify
mem_regions	Message queues, 276
udd device, 481	mq_open
Message pipe services, 391	Message queues, 277
P_MINOR_AUTO, 392	mq_receive
P_URGENT, 392	Message queues, 278
	mq_send
rt_pipe_bind, 392	Message queues, 279
rt_pipe_create, 393	mq_setattr
rt_pipe_delete, 394	Message queues, 279
rt_pipe_read, 394	mg timedreceive
rt_pipe_read_timed, 394	<u>.—</u>
rt_pipe_read_until, 396	Message queues, 280
rt_pipe_stream, 397	mq_timedsend
rt_pipe_unbind, 397	Message queues, 280
rt_pipe_write, 398	mq_unlink
Message queue services, 399	Message queues, 282
Q_PRIO, 400	Mutex services, 179, 385
rt_queue_alloc, 400	rt_mutex_acquire, 386
rt_queue_bind, 400	rt_mutex_acquire_timed, 386
rt queue create, 401	rt_mutex_acquire_until, 387
rt_queue_delete, 402	rt_mutex_bind, 387
rt_queue_flush, 403	rt_mutex_create, 388
rt_queue_free, 403	rt_mutex_delete, 388
rt_queue_inquire, 403	rt_mutex_inquire, 389
rt_queue_read, 404	rt_mutex_release, 389
rt_queue_read_timed, 404	rt_mutex_unbind, 390
$=\cdot$ $=$ $=$	rtdm_mutex_destroy, 179
rt_queue_read_until, 405	
rt_queue_receive, 406	rtdm_mutex_init, 179
rt_queue_receive_timed, 406	rtdm_mutex_lock, 180
rt_queue_receive_until, 407	rtdm_mutex_timedlock, 180
rt_queue_send, 407	rtdm_mutex_unlock, 181
rt_queue_unbind, 408	Mutual exclusion, 284
Message queues, 275	pthread_mutex_destroy, 285
mq_close, 276	pthread_mutex_init, 285
mq_getattr, 276	pthread_mutex_lock, 286

pthread_mutex_timedlock, 287	Condition variables, 267
pthread_mutex_trylock, 287	pthread_cond_destroy
pthread_mutex_unlock, 288	Condition variables, 267
pthread_mutexattr_destroy, 288	pthread cond init
pthread_mutexattr_getprotocol, 289	Condition variables, 268
pthread_mutexattr_getpshared, 289	pthread_cond_signal
pthread_mutexattr_gettype, 290	Condition variables, 268
pthread_mutexattr_init, 290	pthread_cond_timedwait
pthread_mutexattr_setprotocol, 291	Condition variables, 268
pthread_mutexattr_setpshared, 291	pthread_cond_wait
pthread_mutexattr_settype, 292	Condition variables, 269
	pthread_condattr_destroy
nanosecs_abs_t	Condition variables, 270
RTDM, 58	pthread_condattr_getclock
nanosecs_rel_t	Condition variables, 270
RTDM, 58	pthread_condattr_getpshared
nanosleep	Condition variables, 271
Clocks and timers, 262	pthread_condattr_init
nb_bits	Condition variables, 271
a4l_channel, 449	pthread_condattr_setclock
nb_subd	Condition variables, 272
a4l_descriptor, 453	pthread_condattr_setpshared
next	Condition variables, 272
xnvfile_regular_ops, 489	pthread_create
xnvfile_snapshot_ops, 495	Thread management, 300
nkvfroot	pthread_getschedparam
Virtual file services, 238	Scheduling management, 305
Non-Real-Time Signalling Services, 186	pthread_getschedparam_ex
rtdm_nrtsig_destroy, 187	Scheduling management, 305
rtdm_nrtsig_handler_t, 186	pthread_join
rtdm_nrtsig_init, 187	Thread management, 301
rtdm_nrtsig_pend, 187	pthread_kill
nrdata	Thread management, 302
xnvfile_snapshot_iterator, 493	pthread_make_periodic_np
	Transition Kit, 447
open	pthread_mutex_destroy
rtdm_fd_ops, 474	Mutual exclusion, 285
udd_device, 481	pthread mutex init
owner	Mutual exclusion, 285
RT_MUTEX_INFO, 465	pthread_mutex_lock
D MINOR ALITO	Mutual exclusion, 286
P_MINOR_AUTO	pthread_mutex_timedlock
Message pipe services, 392	Mutual exclusion, 287
P_URGENT	pthread_mutex_trylock
Message pipe services, 392	Mutual exclusion, 287
POSIX interface, 274	pthread_mutex_unlock
pSOS® emulator, 441	• – –
pid	Mutual exclusion, 288 pthread mutexattr destroy
udd_signotify, 484	Mutual exclusion, 288
pos	
xnvfile_regular_iterator, 487	pthread_mutexattr_getprotocol Mutual exclusion, 289
private	
xnvfile_regular_iterator, 487	pthread_mutexattr_getpshared
xnvfile_snapshot_iterator, 494	Mutual exclusion, 289
profile_info	pthread_mutexattr_gettype
rtdm_driver, 472	Mutual exclusion, 290
program_htick_shot	pthread_mutexattr_init
Timer services, 226	Mutual exclusion, 290
pthread_cond_broadcast	pthread_mutexattr_setprotocol

Mutual avaluation 004	which are the advanta CO
Mutual exclusion, 291	rt_dev_getsockopt, 63
pthread_mutexattr_setpshared	rt_dev_ioctl, 63
Mutual exclusion, 291	rt_dev_listen, 64
pthread_mutexattr_settype	rt_dev_open, 64
Mutual exclusion, 292	rt_dev_read, 64
pthread_setmode_np	rt_dev_recv, 66
Thread management, 302	rt_dev_recvfrom, 66
pthread_setname_np	rt_dev_recvmsg, 67
Thread management, 303	rt_dev_send, 67
pthread_setschedparam	rt_dev_sendmsg, 68
Scheduling management, 305	rt_dev_sendto, 68
pthread_setschedparam_ex	rt_dev_setsockopt, 69
Scheduling management, 306	rt_dev_shutdown, 69
pthread_wait_np	rt_dev_socket, 70
Transition Kit, 447	rt_dev_write, 70
pthread_yield	RTDM_CLASS_MAGIC
Scheduling management, 307	driver.h, 511
put	
xnvfile_lock_ops, 487	RTDM_EXCLUSIVE
XIIVIIIe_lock_ops, 407	Device Registration Services, 139
Q PRIO	RTDM_FIXED_MINOR
Message queue services, 400	Device Registration Services, 139
Message queue services, 400	RTDM_NAMED_DEVICE
RTDM SELECTTYPE EXCEPT	Device Registration Services, 139
Synchronisation Services, 162	RTDM_PROFILE_INFO
RTDM SELECTTYPE READ	driver.h, 511
	RTDM_TIMEOUT_NONE
Synchronisation Services, 162	RTDM, 58
RTDM_SELECTTYPE_WRITE	RTIOC DEVICE INFO
Synchronisation Services, 162	Device Profiles, 136
RTDM_TIMERMODE_ABSOLUTE	RTIOC_PURGE
Timer Services, 157	Device Profiles, 137
RTDM_TIMERMODE_REALTIME	Range / conversion API, 329
Timer Services, 157	a4l_dtoraw, 329
RTDM_TIMERMODE_RELATIVE	<del>_</del>
Timer Services, 157	a4l_find_range, 330
RT_ALARM_INFO, 462	a4l_ftoraw, 330
RT_BUFFER_INFO, 463	a4l_rawtod, 331
RT_COND_INFO, 463	a4l_rawtof, 331
RT_EVENT_INFO, 464	a4l_rawtoul, 331
RT_HEAP_INFO, 464	a4l_sizeof_chan, 332
usablemem, 465	a4l_sizeof_subd, 332
RT_MUTEX_INFO, 465	a4l_ultoraw, 333
owner, 465	read_nrt
RT QUEUE INFO, 465	rtdm_fd_ops, 474
RT SEM INFO, 466	read_rt
RT TASK INFO, 467	rtdm_fd_ops, 474
RT TIMER INFO	Real-time IPC
Timer management services, 437	IPCPROTO BUFP, 84
RTDM, 57	IPCPROTO IDDP, 84
nanosecs_abs_t, 58	IPCPROTO IPC, 84
nanosecs_rel_t, 58	IPCPROTO XDDP, 84
RTDM_TIMEOUT_NONE, 58	Real-time IPC, 75
RTDM User API, 59	BUFP BUFSZ, 77
	<del>_</del>
rt_dev_accept, 60	BUFP_LABEL, 78
rt_dev_bind, 60	bindAF_RTIPC, 84
rt_dev_close, 61	close_AF_RTIPC, 85
rt_dev_connect, 61	connectAF_RTIPC, 86
rt_dev_getpeername, 62	getpeernameAF_RTIPC, 86
rt_dev_getsockname, 62	getsocknameAF_RTIPC, 87

getsockoptAF_RTIPC, 87	rt_buffer_delete
IDDP_LABEL, 78	Buffer services, 356
IDDP_POOLSZ, 79	rt_buffer_inquire
recvmsgAF_RTIPC, 87	Buffer services, 356
SO_RCVTIMEO, 80	rt_buffer_read
SO_SNDTIMEO, 80	Buffer services, 357
sendmsgAF_RTIPC, 88	rt_buffer_read_timed
setsockoptAF_RTIPC, 89	Buffer services, 357
socketAF_RTIPC, 89	rt_buffer_read_until
XDDP_BUFSZ, 80	Buffer services, 358
XDDP EVTDOWN, 81	rt_buffer_unbind
XDDP_EVTIN, 81	Buffer services, 359
XDDP_EVTNOBUF, 81	rt_buffer_write
XDDP EVTOUT, 81	Buffer services, 359
XDDP_EVIOUT, 81 XDDP_LABEL, 81	
<del>_</del> :	rt_buffer_write_timed
XDDP_MONITOR, 82	Buffer services, 359
XDDP_POOLSZ, 83	rt_buffer_write_until
recvmsgAF_RTIPC	Buffer services, 360
Real-time IPC, 87	rt_cond_bind
recvmsg_nrt	Condition variable services, 363
rtdm_fd_ops, 474	rt_cond_broadcast
recvmsg_rt	Condition variable services, 363
rtdm_fd_ops, 474	rt_cond_create
Registry services, 124	Condition variable services, 364
xnregistry_bind, 124	rt_cond_delete
xnregistry_enter, 125	Condition variable services, 364
xnregistry_lookup, 126	rt_cond_inquire
xnregistry_remove, 126	Condition variable services, 365
xnregistry_unlink, 127	rt_cond_signal
resched	Condition variable services, 365
xnsched, 486	rt_cond_unbind
rev	Condition variable services, 366
xnvfile_rev_tag, 491	rt_cond_wait
rewind	Condition variable services, 366
	· · · · · · · · · · · · · · · · · · ·
xnvfile_regular_ops, 489	rt_cond_wait_timed
xnvfile_snapshot_ops, 496	Condition variable services, 366
rrbtimer	rt_cond_wait_until
xnsched, 486	Condition variable services, 367
rt	rt_dev_accept
xnsched, 486	RTDM User API, 60
rt_alarm_create	rt_dev_bind
Alarm services, 349	RTDM User API, 60
rt_alarm_delete	rt_dev_close
Alarm services, 350	RTDM User API, 61
rt_alarm_inquire	rt_dev_connect
Alarm services, 350	RTDM User API, 61
rt_alarm_start	rt_dev_getpeername
Alarm services, 351	RTDM User API, 62
rt_alarm_stop	rt_dev_getsockname
Alarm services, 351	RTDM User API, 62
rt_alarm_wait	rt_dev_getsockopt
Transition Kit, 448	RTDM User API, 63
rt_buffer_bind	rt_dev_ioctl
Buffer services, 354	RTDM User API, 63
rt_buffer_clear	rt_dev_listen
Buffer services, 355	RTDM User API, 64
rt_buffer_create	rt_dev_open PTDM Usor API 64
Buffer services, 355	RTDM User API, 64

rt_dev_read	rt_heap_unbind
RTDM User API, 64	Heap management services, 382
rt_dev_recv	rt_mutex_acquire
RTDM User API, 66	Mutex services, 386
rt_dev_recvfrom	rt_mutex_acquire_timed
RTDM User API, 66	Mutex services, 386
rt_dev_recvmsg	rt_mutex_acquire_until
RTDM User API, 67	Mutex services, 387
rt_dev_send	rt_mutex_bind
RTDM User API, 67	Mutex services, 387
rt_dev_sendmsg	rt_mutex_create
RTDM User API, 68	Mutex services, 388
rt_dev_sendto	rt_mutex_delete
RTDM User API, 68	Mutex services, 388
rt_dev_setsockopt	rt_mutex_inquire
RTDM User API, 69	Mutex services, 389
rt dev shutdown	rt_mutex_release
RTDM User API, 69	Mutex services, 389
rt dev socket	rt_mutex_unbind
RTDM User API, 70	Mutex services, 390
rt dev write	rt_pipe_bind
RTDM User API, 70	Message pipe services, 392
rt_event_bind	rt_pipe_create
Event flag group services, 369	Message pipe services, 393
rt_event_clear	rt_pipe_delete
Event flag group services, 370	Message pipe services, 394
rt_event_create	rt_pipe_read
Event flag group services, 370	Message pipe services, 394
rt_event_delete	rt_pipe_read_timed
Event flag group services, 371	Message pipe services, 394
rt_event_inquire	rt_pipe_read_until
Event flag group services, 371	Message pipe services, 396
rt_event_signal	rt_pipe_stream
Event flag group services, 372	Message pipe services, 397
rt event unbind	rt_pipe_unbind
Event flag group services, 372	-· · -
	Message pipe services, 397
rt_event_wait	rt_pipe_write
Event flag group services, 372 rt_event_wait_timed	Message pipe services, 398 rt_queue_alloc
	-· -
Event flag group services, 374 rt event wait until	Message queue services, 400 rt queue bind
	<b>-</b> · <b>-</b>
Event flag group services, 375	Message queue services, 400
rt_heap_alloc	rt_queue_create
Heap management services, 377	Message queue services, 401
rt_heap_alloc_timed	rt_queue_delete
Heap management services, 377	Message queue services, 402
rt_heap_alloc_until	rt_queue_flush
Heap management services, 378	Message queue services, 403
rt_heap_bind	rt_queue_free
Heap management services, 378	Message queue services, 403
rt_heap_create	rt_queue_inquire
Heap management services, 379	Message queue services, 403
rt_heap_delete	rt_queue_read
Heap management services, 380	Message queue services, 404
rt_heap_free	rt_queue_read_timed
Heap management services, 380	Message queue services, 404
rt_heap_inquire	rt_queue_read_until
Heap management services, 382	Message queue services, 405

rt_queue_receive	rt_task_send_until
Message queue services, 406	Task management services, 426
rt_queue_receive_timed	rt_task_set_affinity
Message queue services, 406	Task management services, 426
rt_queue_receive_until	rt_task_set_mode
Message queue services, 407	Task management services, 427
rt_queue_send	rt_task_set_periodic
Message queue services, 407	Task management services, 428
rt_queue_unbind	rt_task_set_priority
Message queue services, 408	Task management services, 429
rt_sem_bind	rt_task_shadow
Semaphore services, 410	Task management services, 429
rt_sem_broadcast	rt_task_sleep
Semaphore services, 411	Task management services, 430
rt_sem_create	rt_task_sleep_until
Semaphore services, 411	Task management services, 431
rt_sem_delete	rt_task_slice
Semaphore services, 412	Task management services, 431
rt_sem_inquire	rt_task_spawn
Semaphore services, 412	Task management services, 432
•	_
rt_sem_p	rt_task_start
Semaphore services, 412	Task management services, 433
rt_sem_p_timed	rt_task_suspend
Semaphore services, 413	Task management services, 433
rt_sem_p_until	rt_task_unbind
Semaphore services, 413	Task management services, 434
rt_sem_unbind	rt_task_unblock
Semaphore services, 414	Task management services, 434
rt_sem_v	rt_task_wait_period
Semaphore services, 414	Task management services, 435
rt_task_bind	rt_task_yield
Task management services, 417	Task management services, 435
rt_task_create	rt_timer_info, 467
Task management services, 417	date, 467
rt_task_delete	rt_timer_inquire
Task management services, 419	Timer management services, 438
rt_task_inquire	rt_timer_ns2ticks
Task management services, 419	Timer management services, 438
rt_task_join	rt_timer_read
Task management services, 420	Timer management services, 438
rt_task_receive	rt_timer_spin
Task management services, 420	Timer management services, 439
rt_task_receive_timed	rt_timer_ticks2ns
Task management services, 421	Timer management services, 439
rt_task_receive_until	rtdm_accept
Task management services, 422	Driver to driver services, 130
rt_task_reply	rtdm bind
	Driver to driver services, 130
Task management services, 422	
rt_task_resume	rtdm_clock_read
Task management services, 423	Clock Services, 146
rt_task_same	rtdm_clock_read_monotonic
Task management services, 423	Clock Services, 146
rt_task_self	rtdm_close
Task management services, 424	Driver to driver services, 130
rt_task_send	rtdm_close_handler
Task management services, 424	Device Registration Services, 140
rt_task_send_timed	rtdm connect
Task management services, 424	Driver to driver services, 130

utalian anni firana irani	
rtdm_copy_from_user	write_nrt, 475
Utility Services, 189	write_rt, 475
rtdm_copy_to_user	rtdm_fd_put
Utility Services, 189	fd.h, 530
rtdm_dev_context, 468	rtdm_fd_select
device, 469	fd.h, 530
rtdm_dev_register	rtdm_fd_to_private
Device Registration Services, 141	driver.h, 512
rtdm_dev_unregister	rtdm_fd_unlock
Device Registration Services, 141	fd.h, 531
rtdm_device, 469	rtdm_for_each_waiter
driver, 470	Synchronisation Services, 162
label, 470	rtdm_for_each_waiter_safe
minor, 470	Synchronisation Services, 163
rtdm_device_info, 470	rtdm_free
rtdm_driver, 471	Utility Services, 190
device_count, 472	rtdm_get_unmapped_area_handler
device_flags, 472	Device Registration Services, 141
profile_info, 472	rtdm_getpeername
rtdm_event_clear	Driver to driver services, 131
Event Services, 171	rtdm_getsockname
rtdm_event_destroy	Driver to driver services, 131
Event Services, 171	rtdm_getsockopt
rtdm_event_init	Driver to driver services, 131
Event Services, 173	rtdm_in_rt_context
rtdm_event_pulse	Utility Services, 190
Event Services, 173	rtdm_ioctl
rtdm_event_select	Driver to driver services, 131
Event Services, 173	rtdm_ioctl_handler
rtdm_event_signal	Device Registration Services, 142
Event Services, 174	rtdm_iomap_to_user
rtdm_event_timedwait	Utility Services, 190
Event Services, 174	rtdm_irq_disable
rtdm_event_wait	Interrupt Management Services, 183
Event Services, 175	rtdm_irq_enable
rtdm_fd_device	Interrupt Management Services, 184
driver.h, 512	rtdm_irq_free
rtdm_fd_get	Interrupt Management Services, 184
fd.h, 529	rtdm_irq_get_arg
rtdm_fd_is_user	Interrupt Management Services, 183
driver.h, 512	rtdm_irq_handler_t
rtdm_fd_lock	Interrupt Management Services, 183
fd.h, 530	rtdm_irq_request
rtdm_fd_ops, 472	Interrupt Management Services, 185
close, 473	rtdm_listen
get_unmapped_area, 473	Driver to driver services, 131
ioctl_nrt, 473	rtdm_lock_get
ioctl_rt, 474	Spinlock with preemption deactivation, 24
mmap, 474	rtdm_lock_init
open, 474	Spinlock with preemption deactivation, 24
read_nrt, 474	rtdm_lock_irqrestore
read_rt, 474	Spinlock with preemption deactivation, 23
recvmsg_nrt, 474	rtdm_lock_irqsave
recvmsg_rt, 474	Spinlock with preemption deactivation, 24
select, 474	rtdm_lock_put Spinlock with preemption deactivation, 24
sendmsg_nrt, 474	·
sendmsg_rt, 474 socket, 474	rtdm_lock_put_irqrestore Spinlock with preemption deactivation, 25
300NG1, 7/7	

at decrease the co	dalar di casalda
rtdm_malloc	rtdm_rt_capable
Utility Services, 191	Utility Services, 195
rtdm_mmap_handler	rtdm_rw_user_ok
Device Registration Services, 142	Utility Services, 196
rtdm_mmap_iomem	rtdm_safe_copy_from_user
Utility Services, 191	Utility Services, 196
rtdm_mmap_kmem	rtdm_safe_copy_to_user
Utility Services, 192	Utility Services, 197
rtdm_mmap_to_user	rtdm_select_handler
Utility Services, 192	Device Registration Services, 144
rtdm_mmap_vmem	rtdm selecttype
Utility Services, 193	Synchronisation Services, 162
rtdm_munmap	rtdm_sem_destroy
Utility Services, 194	Semaphore Services, 176
rtdm_mutex_destroy	rtdm_sem_down
Mutex services, 179	Semaphore Services, 176
rtdm_mutex_init	rtdm_sem_init
Mutex services, 179	Semaphore Services, 177
rtdm_mutex_lock	rtdm_sem_select
Mutex services, 180	Semaphore Services, 177
rtdm_mutex_timedlock	rtdm_sem_timeddown
Mutex services, 180	Semaphore Services, 177
rtdm_mutex_unlock	rtdm_sem_up
Mutex services, 181	Semaphore Services, 178
rtdm_nrtsig_destroy	rtdm_send
Non-Real-Time Signalling Services, 187	Driver to driver services, 133
rtdm_nrtsig_handler_t	rtdm_sendmsg
Non-Real-Time Signalling Services, 186	Driver to driver services, 133
rtdm_nrtsig_init	rtdm_sendmsg_handler
Non-Real-Time Signalling Services, 187	Device Registration Services, 144
rtdm_nrtsig_pend	rtdm_sendto
Non-Real-Time Signalling Services, 187	Driver to driver services, 133
rtdm_open	rtdm_setsockopt
Driver to driver services, 132	Driver to driver services, 133
rtdm_open_handler	rtdm_shutdown
Device Registration Services, 143	Driver to driver services, 133
rtdm_printk	rtdm_socket
Utility Services, 194	Driver to driver services, 134
rtdm_printk_ratelimited	rtdm_socket_handler
Utility Services, 194	Device Registration Services, 144
rtdm_private_to_fd	rtdm_strncpy_from_user
driver.h, 513	Utility Services, 197
rtdm_ratelimit	rtdm_task_busy_sleep
Utility Services, 195	Task Services, 149
rtdm_read	rtdm_task_busy_wait
Driver to driver services, 132	Task Services, 149
rtdm read handler	rtdm_task_current
Device Registration Services, 143	Task Services, 150
rtdm_read_user_ok	rtdm_task_destroy
Utility Services, 195	Task Services, 150
rtdm_recv	rtdm_task_init
Driver to driver services, 132	Task Services, 150
rtdm_recvfrom	rtdm_task_join
Driver to driver services, 132	Task Services, 151
rtdm_recvmsg	rtdm_task_proc_t
Driver to driver services, 132	Task Services, 149
rtdm_recvmsg_handler	rtdm_task_set_period
Device Registration Services, 143	Task Services, 151

rtdm_task_set_priority	rtdm_waitqueue_signal
Task Services, 152	Synchronisation Services, 170
rtdm_task_should_stop	rtdm_waitqueue_unlock
Task Services, 152	Synchronisation Services, 170
rtdm task sleep	rtdm_waitqueue_wakeup
Task Services, 152	Synchronisation Services, 170
rtdm_task_sleep_abs	rtdm write
Task Services, 152	Driver to driver services, 134
rtdm_task_sleep_until	rtdm_write_handler
Task Services, 154	Device Registration Services, 145
rtdm task unblock	rtipc port label, 475
Task Services, 154	label, 475
rtdm_task_wait_period	rtser_config, 475
Task Services, 154	rtser_event, 476
rtdm_timedwait	rtser_status, 477
Synchronisation Services, 163	_
rtdm timedwait condition	S_PRIO
Synchronisation Services, 164	Semaphore services, 410
rtdm timedwait condition locked	SCHED_QUOTA scheduling policy, 199
Synchronisation Services, 164	SIOCGCANBAUDRATE
rtdm_timedwait_locked	CAN Devices, 49
Synchronisation Services, 165	SIOCGCANCTRLMODE
rtdm_timer_destroy	CAN Devices, 51
Timer Services, 157	SIOCGCANCUSTOMBITTIME
rtdm_timer_handler_t	CAN Devices, 51
Timer Services, 156	SIOCGCANSTATE
	CAN Devices, 51
rtdm_timer_init Timer Services, 157	SIOCGIFINDEX
rtdm_timer_mode	CAN Devices, 52
Timer Services, 157	SIOCSCANBAUDRATE
	CAN Devices, 52
rtdm_timer_start	SIOCSCANCTRLMODE
Timer Services, 157	CAN Devices, 53
rtdm_timer_start_in_handler	SIOCSCANCUSTOMBITTIME
Timer Services, 158	CAN Devices, 53
rtdm_timer_stop	SIOCSCANMODE
Timer Services, 158	CAN Devices, 54
rtdm_timer_stop_in_handler	SO_RCVTIMEO
Timer Services, 158	Real-time IPC, 80
rtdm_toseq_init	SO_SNDTIMEO
Synchronisation Services, 166	Real-time IPC, 80
rtdm_wait	SOL_CAN_RAW
Synchronisation Services, 166	CAN Devices, 55
rtdm_wait_condition	sbdata
Synchronisation Services, 167	a4l_descriptor, 453
rtdm_wait_condition_locked	sbsize
Synchronisation Services, 167	a4l_descriptor, 453
rtdm_wait_locked	sched_get_priority_max
Synchronisation Services, 168	Scheduling management, 309
rtdm_waitqueue_broadcast	sched_get_priority_max_ex
Synchronisation Services, 168	Scheduling management, 309
rtdm_waitqueue_destroy	sched_get_priority_min
Synchronisation Services, 168	Scheduling management, 309
rtdm_waitqueue_flush	sched_get_priority_min_ex
Synchronisation Services, 169	Scheduling management, 310
rtdm_waitqueue_init	sched_getconfig_np
Synchronisation Services, 169	Scheduling management, 310
rtdm_waitqueue_lock	sched_setconfig_np
Synchronisation Services, 169	Scheduling management, 311

sched_yield	sem_trywait, 297
Scheduling management, 312	sem_unlink, 298
Scheduling management, 304	sem_wait, 298
pthread_getschedparam, 305	sendmsgAF_RTIPC
pthread_getschedparam_ex, 305	Real-time IPC, 88
pthread_setschedparam, 305	sendmsg nrt
pthread_setschedparam_ex, 306	rtdm_fd_ops, 474
pthread_yield, 307	sendmsg_rt
sched_get_priority_max, 309	rtdm fd ops, 474
sched_get_priority_max_ex, 309	seq
sched_get_priority_min, 309	xnvfile_regular_iterator, 488
sched_get_priority_min_ex, 310	xnvfile snapshot iterator, 494
sched_getconfig_np, 310	Serial Devices, 72
sched_setconfig_np, 311	setsockoptAF_RTIPC
sched_yield, 312	Real-time IPC, 89
select	show
rtdm_fd_ops, 474	xnvfile_regular_ops, 490
sem_close	xnvfile_snapshot_ops, 496
Semaphores, 293	_ · _ ·
·	sig
sem_destroy	udd_signotify, 484
Semaphores, 295	sipc_port
sem_init	sockaddr_ipc, 479
Semaphores, 295	Smokey API, 313
sem_post	sockaddr_can, 477
Semaphores, 296	can_ifindex, 478
sem_timedwait	sockaddr_ipc, 478
Semaphores, 297	sipc_port, 479
sem_trywait	socket
Semaphores, 297	rtdm_fd_ops, 474
sem_unlink	socketAF_RTIPC
Semaphores, 298	Real-time IPC, 89
sem_wait	Spinlock with preemption deactivation, 23
Semaphores, 298	rtdm_lock_get, 24
Semaphore Services, 176	rtdm_lock_init, 24
rtdm_sem_destroy, 176	rtdm_lock_irqrestore, 23
rtdm_sem_down, 176	rtdm_lock_irqsave, 24
rtdm_sem_init, 177	rtdm_lock_put, 24
rtdm_sem_select, 177	rtdm_lock_put_irqrestore, 25
rtdm_sem_timeddown, 177	splexit
rtdm_sem_up, 178	Locking services, 117
Semaphore services, 409	splhigh
rt_sem_bind, 410	Locking services, 117
rt_sem_broadcast, 411	spltest
rt_sem_create, 411	Locking services, 118
rt_sem_delete, 412	status
rt_sem_inquire, 412	xnsched, 486
rt_sem_p, 412	store
rt_sem_p_timed, 413	xnvfile_regular_ops, 490
rt_sem_p_until, 413	xnvfile_snapshot_ops, 497
rt_sem_unbind, 414	Subdevice management services, 243
rt_sem_v, 414	a4l_add_subd, 245
S_PRIO, 410	a4l_alloc_subd, 245
Semaphores, 293	a4l_get_subd, 245
sem_close, 293	switch_htick_mode
sem_destroy, 295	Timer services, 226
sem_init, 295	Synchronisation Services, 161
000	
sem_post, 296 sem_timedwait, 297	RTDM_SELECTTYPE_EXCEPT, 162 RTDM_SELECTTYPE_READ, 162

RTDM_SELECTTYPE_WRITE, 162	rt_task_set_affinity, 426
rtdm_for_each_waiter, 162	rt_task_set_mode, 427
rtdm_for_each_waiter_safe, 163	rt_task_set_periodic, 428
rtdm_selecttype, 162	rt_task_set_priority, 429
rtdm_timedwait, 163	rt_task_shadow, 429
rtdm_timedwait_condition, 164	rt_task_sleep, 430
rtdm_timedwait_condition_locked, 164	rt_task_sleep_until, 431
rtdm_timedwait_locked, 165	rt_task_slice, 431
rtdm_toseq_init, 166	rt_task_spawn, 432
rtdm_wait, 166	rt_task_start, 433
rtdm_wait_condition, 167	rt_task_suspend, 433
rtdm_wait_condition_locked, 167	rt_task_unbind, 434
rtdm_wait_locked, 168	
rtdm_waitqueue_broadcast, 168	rt_task_unblock, 434
rtdm_waitqueue_broadcast, 100	rt_task_wait_period, 435
rtdm_waitqueue_destroy, 100	rt_task_yield, 435
	T_LOCK, 417
rtdm_waitqueue_init, 169	T_LOPRIO, 417
rtdm_waitqueue_lock, 169	T_WARNSW, 417
rtdm_waitqueue_signal, 170	Task Services, 148
rtdm_waitqueue_unlock, 170	rtdm_task_busy_sleep, 149
rtdm_waitqueue_wakeup, 170	rtdm_task_busy_wait, 149
Synchronous acquisition API, 335, 340	rtdm_task_current, 150
a4l_config_subd, 340	rtdm_task_destroy, 150
a4l_snd_insn, 337	rtdm task init, 150
a4l_snd_insnlist, 337	rtdm_task_join, 151
a4l_sync_dio, 341	rtdm_task_proc_t, 149
a4l_sync_read, 341	rtdm_task_set_period, 151
a4l_sync_write, 342	rtdm_task_set_priority, 152
Synchronous I/O multiplexing, 202	rtdm_task_should_stop, 152
xnselect, 203	rtdm_task_sleep, 152
xnselect_bind, 203	rtdm_task_sleep_abs, 152
xnselect_destroy, 204	
xnselect_init, 204	rtdm_task_sleep_until, 154
xnselect_signal, 204	rtdm_task_unblock, 154
xnselector destroy, 205	rtdm_task_wait_period, 154
xnselector_init, 205	Testing Devices, 74
_	Thread information flags, 36
T_LOCK	Thread management, 300
Task management services, 417	pthread_create, 300
T_LOPRIO	pthread_join, 301
Task management services, 417	pthread_kill, 302
T_WARNSW	pthread_setmode_np, 302
Task management services, 417	pthread_setname_np, 303
Task management services, 415	Thread scheduling control, 200
rt_task_bind, 417	xnsched_rotate, 200
rt_task_create, 417	xnsched_run, 201
rt_task_delete, 419	Thread services, 212
rt_task_inquire, 419	xnthread cancel, 213
rt_task_join, 420	xnthread_current, 213
rt_task_receive, 420	xnthread_from_task, 214
rt_task_receive_timed, 421	xnthread harden, 214
rt_task_receive_until, 422	xnthread_init, 214
rt_task_reply, 422	xnthread_join, 215
rt_task_resume, 423	xnthread_map, 216
rt_task_same, 423	xnthread_map, 216
rt_task_same, 425 rt_task_self, 424	xnthread_relax, 217
rt_task_send, 424	xnthread_resume, 217
rt_task_send_timed, 424	xnthread_set_mode, 218
rt_task_send_until, 426	xnthread_set_periodic, 219

	01 1 11 000
xnthread_set_schedparam, 219	Clocks and timers, 263
xnthread_set_slice, 220	timer_delete
xnthread start, 221	Clocks and timers, 263
xnthread_suspend, 221	timer_getoverrun
xnthread_test_cancel, 222	Clocks and timers, 264
xnthread_unblock, 223	timer_gettime
	_ <del>_</del>
xnthread_wait_period, 223	Clocks and timers, 264
Thread state flags, 33	timer_settime
XNHELD, 34	Clocks and timers, 265
XNLOCK, 34	Transition Kit, 442
XNMIGRATE, 34	COMPATrt_alarm_create, 442
XNPEND, 34	COMPATrt_event_clear, 443
XNREADY, 34	COMPATrt_event_create, 443
	COMPATrt_event_signal, 444
XNSUSP, 34	COMPATrt_task_create, 444
XNTRAPLB, 34	
Thread synchronization services, 206	COMPATrt_task_set_periodic, 446
xnsynch_acquire, 206	pthread_make_periodic_np, 447
xnsynch_flush, 207	pthread_wait_np, 447
xnsynch_init, 208	rt_alarm_wait, 448
xnsynch_peek_pendq, 208	type
xnsynch_release, 209	udd memregion, 483
•	
xnsynch_sleep_on, 209	UDD IRQ CUSTOM
xnsynch_wakeup_one_sleeper, 210	User-space driver core, 27
xnsynch_wakeup_this_sleeper, 210	UDD IRQ NONE
Timer management services, 437	User-space driver core, 27
RT_TIMER_INFO, 437	
rt_timer_inquire, 438	UDD_MEM_LOGICAL
rt_timer_ns2ticks, 438	User-space driver core, 27
	UDD_MEM_NONE
rt_timer_read, 438	User-space driver core, 28
rt_timer_spin, 439	UDD MEM PHYS
rt_timer_ticks2ns, 439	User-space driver core, 28
Timer Services, 156	UDD MEM VIRTUAL
RTDM_TIMERMODE_ABSOLUTE, 157	User-space driver core, 28
RTDM_TIMERMODE_REALTIME, 157	UDD RTIOC IRQDIS
RTDM_TIMERMODE_RELATIVE, 157	
rtdm_timer_destroy, 157	User-space driver core, 28
	UDD_RTIOC_IRQEN
rtdm_timer_handler_t, 156	User-space driver core, 28
rtdm_timer_init, 157	UDD_RTIOC_IRQSIG
rtdm_timer_mode, 157	User-space driver core, 28
rtdm_timer_start, 157	uapi/analogy.h
rtdm_timer_start_in_handler, 158	A4L RNG FACTOR, 561
rtdm timer stop, 158	udd_device, 479
rtdm_timer_stop_in_handler, 158	close, 480
Timer services, 225	•
· · · · · · · · · · · · · · · · · · ·	device_flags, 480
xntimer_migrate, 226	device_subclass, 480
program_htick_shot, 226	interrupt, 480
switch_htick_mode, 226	ioctl, 481
xntimer_destroy, 227	irq, 481
xntimer_get_date, 227	mem_regions, 481
xntimer_get_overruns, 227	mmap, 481
xntimer_get_timeout, 228	open, 481
xntimer_get_timeout, 228	•
	udd_device::udd_reserved, 483
xntimer_init, 229	udd_get_device
xntimer_interval, 229	User-space driver core, 28
xntimer_release_hardware, 230	udd_memregion, 482
xntimer_start, 230	addr, 483
xntimer_stop, 231	len, 483
timer_create	type, 483
<del></del>	••

udd_notify_event	xnvfile_get_blob, 234
User-space driver core, 30	xnvfile_get_integer, 234
udd_post_irq_disable	xnvfile_get_string, 235
User-space driver core, 30	xnvfile_init_dir, 235
udd post irg enable	xnvfile init link, 235
User-space driver core, 31	xnvfile_init_regular, 237
udd_register_device	xnvfile_init_snapshot, 237
User-space driver core, 31	VxWorks® emulator, 440
udd_signotify, 484	TATTOTHERIOG, Officiation, 170
pid, 484	write_nrt
sig, 484	rtdm_fd_ops, 475
udd_unregister_device	write rt
User-space driver core, 32	rtdm_fd_ops, 475
· · · · · · · · · · · · · · · · · · ·	rtam_ia_ops, 470
usablemem	XDDP BUFSZ
RT_HEAP_INFO, 465	Real-time IPC, 80
User-space driver core, 26	XDDP EVTDOWN
UDD_IRQ_CUSTOM, 27	Real-time IPC, 81
UDD_IRQ_NONE, 27	XDDP EVTIN
UDD_MEM_LOGICAL, 27	Real-time IPC, 81
UDD_MEM_NONE, 28	
UDD_MEM_PHYS, 28	XDDP_EVTNOBUF
UDD_MEM_VIRTUAL, 28	Real-time IPC, 81
UDD_RTIOC_IRQDIS, 28	XDDP_EVTOUT
UDD_RTIOC_IRQEN, 28	Real-time IPC, 81
UDD_RTIOC_IRQSIG, 28	XDDP_LABEL
udd_get_device, 28	Real-time IPC, 81
udd_notify_event, 30	XDDP_MONITOR
udd_post_irq_disable, 30	Real-time IPC, 82
udd_post_irq_enable, 31	XDDP_POOLSZ
udd register device, 31	Real-time IPC, 83
udd_unregister_device, 32	XNHELD
Utility Services, 188	Thread state flags, 34
rtdm_copy_from_user, 189	XNLOCK
	Thread state flags, 34
rtdm_copy_to_user, 189	XNMIGRATE
rtdm_free, 190	Thread state flags, 34
rtdm_in_rt_context, 190	XNPEND
rtdm_iomap_to_user, 190	Thread state flags, 34
rtdm_malloc, 191	XNREADY
rtdm_mmap_iomem, 191	Thread state flags, 34
rtdm_mmap_kmem, 192	XNSUSP
rtdm_mmap_to_user, 192	Thread state flags, 34
rtdm_mmap_vmem, 193	XNTRAPLB
rtdm_munmap, 194	
rtdm_printk, 194	Thread state flags, 34
rtdm_printk_ratelimited, 194	xnapc_alloc
rtdm_ratelimit, 195	Asynchronous Procedure Calls, 90
rtdm_read_user_ok, 195	xnapc_free
rtdm_rt_capable, 195	Asynchronous Procedure Calls, 91
rtdm_rw_user_ok, 196	xnapc_schedule
rtdm_safe_copy_from_user, 196	Asynchronous Procedure Calls, 91
rtdm_safe_copy_to_user, 197	xnarch_generic_full_divmod64
rtdm_strncpy_from_user, 197	In-kernel arithmetics, 92
c	xnbufd_copy_from_kmem
vfile	Buffer descriptor, 95
xnvfile_regular_iterator, 488	xnbufd_copy_to_kmem
xnvfile_snapshot_iterator, 494	Buffer descriptor, 96
Virtual file services, 232	xnbufd invalidate
nkvfroot, 238	Buffer descriptor, 96
xnvfile destroy, 233	xnbufd map kread

Buffer descriptor, 97	Lightweight key-to-object mapping service,
xnbufd_map_kwrite	120
Buffer descriptor, 97	xnmap_fetch
xnbufd_map_uread	Lightweight key-to-object mapping service,
Buffer descriptor, 97	121
xnbufd_map_uwrite	xnmap_fetch_nocheck
Buffer descriptor, 98	Lightweight key-to-object mapping service,
xnbufd_reset	121
Buffer descriptor, 98	xnmap_remove
xnbufd_unmap_kread	Lightweight key-to-object mapping service,
Buffer descriptor, 98	121
xnbufd_unmap_kwrite	xnregistry_bind
Buffer descriptor, 99	Registry services, 124
xnbufd_unmap_uread	xnregistry_enter
Buffer descriptor, 99	Registry services, 125
xnbufd_unmap_uwrite	xnregistry_lookup
Buffer descriptor, 99	Registry services, 126
xnclock_adjust	xnregistry_remove
Clock services, 101	Registry services, 126
xnclock_deregister	xnregistry_unlink
Clock services, 101	Registry services, 127 xnsched, 485
xnclock_register	cpu, 485
Clock services, 103	
xnclock_tick	curr, 485
Clock services, 103	htimer, 485
xnheap::xnbucket, 484	inesting, 485
xnheap_alloc	Iflags, 485
Dynamic memory allocation services, 106	resched, 486
xnheap_destroy	rrbtimer, 486
Dynamic memory allocation services, 106	rt, 486
xnheap_free	status, 486 xnsched_rotate
Dynamic memory allocation services, 106	Thread scheduling control, 200
xnheap_init	xnsched_run
Dynamic memory allocation services, 106	Thread scheduling control, 201
xnheap_set_name	xnselect
Dynamic memory allocation services, 108	Synchronous I/O multiplexing, 203
xnintr_affinity	xnselect_bind
Interrupt management, 113	Synchronous I/O multiplexing, 203
xnintr_attach	xnselect_destroy
Interrupt management, 113	Synchronous I/O multiplexing, 204
xnintr_destroy	xnselect init
Interrupt management, 114	Synchronous I/O multiplexing, 204
xnintr_detach	xnselect signal
Interrupt management, 114	Synchronous I/O multiplexing, 204
xnintr_disable	xnselector_destroy
Interrupt management, 115	Synchronous I/O multiplexing, 205
xnintr_enable	xnselector_init
Interrupt management, 115	Synchronous I/O multiplexing, 205
xnintr init	xnsynch_acquire
Interrupt management, 115	Thread synchronization services, 206
xnmap_create	xnsynch_flush
Lightweight key-to-object mapping service,	Thread synchronization services, 207
119	xnsynch_init
xnmap_delete	Thread synchronization services, 208
Lightweight key-to-object mapping service,	xnsynch_peek_pendq
120	Thread synchronization services, 208
xnmap_enter	xnsynch_release

Thread synchronization services, 209	Timer services, 229
xnsynch_sleep_on	xntimer_release_hardware
Thread synchronization services, 209	Timer services, 230
xnsynch_wakeup_one_sleeper	xntimer_start
Thread synchronization services, 210	Timer services, 230
xnsynch_wakeup_this_sleeper	xntimer stop
· - · ·	<u> </u>
Thread synchronization services, 210	Timer services, 231
xnthread_cancel	xnvfile_destroy
Thread services, 213	Virtual file services, 233
xnthread_current	xnvfile_get_blob
Thread services, 213	Virtual file services, 234
xnthread_from_task	xnvfile_get_integer
Thread services, 214	Virtual file services, 234
xnthread_harden	xnvfile_get_string
Thread services, 214	Virtual file services, 235
xnthread_init	xnvfile_init_dir
Thread services, 214	Virtual file services, 235
xnthread_join	xnvfile_init_link
	Virtual file services, 235
Thread services, 215	xnvfile_init_regular
xnthread_map	Virtual file services, 237
Thread services, 216	xnvfile_init_snapshot
xnthread_migrate	
Thread services, 216	Virtual file services, 237
xnthread_relax	xnvfile_lock_ops, 486
Thread services, 217	get, 486
xnthread_resume	put, 487
Thread services, 217	xnvfile_regular_iterator, 487
xnthread_set_mode	pos, 487
Thread services, 218	private, 487
xnthread_set_periodic	seq, 488
Thread services, 219	vfile, 488
· · · · · · · · · · · · · · · · · · ·	xnvfile_regular_ops, 488
xnthread_set_schedparam	begin, 488
Thread services, 219	end, 489
xnthread_set_slice	next, 489
Thread services, 220	rewind, 489
xnthread_start	show, 490
Thread services, 221	store, 490
xnthread_suspend	
Thread services, 221	xnvfile_rev_tag, 491 rev, 491
xnthread_test_cancel	
Thread services, 222	xnvfile_snapshot, 491
xnthread unblock	xnvfile_snapshot_iterator, 492
Thread services, 223	databuf, 493
xnthread wait period	endfn, 493
Thread services, 223	nrdata, 493
xntimer_destroy	private, 494
_ •	seq, 494
Timer services, 227	vfile, 494
xntimer_get_date	xnvfile_snapshot_ops, 494
Timer services, 227	begin, 494
xntimer_get_overruns	end, 495
Timer services, 227	next, 495
xntimer_get_timeout	rewind, 496
Timer services, 228	show, 496
xntimer_grab_hardware	store, 497
Timer services, 228	3.016, <del>43</del> 7
xntimer_init	
Timer services, 229	
xntimer interval	
Antimol_intol vai	