### Xenomai 2.99.6

Generated by Doxygen 1.8.6

Thu Aug 7 2014 16:41:22

# Contents

| 1 | API  | servic  | e tags      |                          | 1      |
|---|------|---------|-------------|--------------------------|--------|
| 2 | Dep  | recate  | d List      |                          | 3      |
| 3 | Mod  | ule Inc | lex         |                          | 5      |
|   | 3.1  | Modul   | es          |                          | <br>5  |
| 4 | Data | Struc   | ture Inde   | ex                       | 7      |
|   | 4.1  | Data S  | Structures  | S                        | <br>7  |
| 5 | File | Index   |             |                          | 9      |
|   | 5.1  | File Li | st          |                          | <br>9  |
| 6 | Mod  | ule Do  | cumenta     | ation                    | 17     |
|   | 6.1  | Chann   | nels and r  | ranges                   | <br>17 |
|   |      | 6.1.1   | Detailed    | d Description            | <br>18 |
|   | 6.2  | Big du  | al kernel   | l lock                   | <br>20 |
|   |      | 6.2.1   | Detailed    | d Description            | <br>20 |
|   |      | 6.2.2   | Macro D     | Definition Documentation | <br>20 |
|   |      |         | 6.2.2.1     | cobalt_atomic_enter      | <br>20 |
|   |      |         | 6.2.2.2     | cobalt_atomic_leave      | <br>21 |
|   |      |         | 6.2.2.3     | RTDM_EXECUTE_ATOMICALLY  | <br>21 |
|   | 6.3  | Spinlo  | ck with p   | preemption deactivation  | <br>23 |
|   |      | 6.3.1   | Detailed    | d Description            | <br>23 |
|   |      | 6.3.2   | Macro D     | Definition Documentation | <br>23 |
|   |      |         | 6.3.2.1     | rtdm_lock_irqrestore     | <br>23 |
|   |      |         | 6.3.2.2     | rtdm_lock_irqsave        | <br>24 |
|   |      | 6.3.3   | Function    | n Documentation          | <br>24 |
|   |      |         | 6.3.3.1     | rtdm_lock_get            | <br>24 |
|   |      |         | 6.3.3.2     | rtdm_lock_init           | <br>24 |
|   |      |         | 6.3.3.3     | rtdm_lock_put            | <br>24 |
|   |      |         | 6.3.3.4     | rtdm_lock_put_irqrestore |        |
|   | 6.4  | Threa   | d state fla | ans                      | 26     |

iv CONTENTS

|     | 6.4.1 | Detailed [    | Description                | 27 |
|-----|-------|---------------|----------------------------|----|
|     | 6.4.2 | Macro De      | finition Documentation     | 27 |
|     |       | 6.4.2.1       | XNHELD                     | 27 |
|     |       | 6.4.2.2       | XNLOCK                     | 27 |
|     |       | 6.4.2.3       | XNMIGRATE                  | 27 |
|     |       | 6.4.2.4       | XNPEND                     | 27 |
|     |       | 6.4.2.5       | XNREADY                    | 27 |
|     |       | 6.4.2.6       | XNSUSP                     | 27 |
|     |       | 6.4.2.7       | XNTRAPLB                   | 28 |
| 6.5 | Threa | d information | on flags                   | 29 |
|     | 6.5.1 | Detailed [    | Description                | 29 |
| 6.6 | CAN E | Devices       |                            | 30 |
|     | 6.6.1 | Detailed [    | Description                | 36 |
|     | 6.6.2 | Macro De      | finition Documentation     | 39 |
|     |       | 6.6.2.1       | CAN_CTRLMODE_3_SAMPLES     | 39 |
|     |       | 6.6.2.2       | CAN_CTRLMODE_LISTENONLY    | 39 |
|     |       | 6.6.2.3       | CAN_CTRLMODE_LOOPBACK      | 39 |
|     |       | 6.6.2.4       | CAN_ERR_LOSTARB_UNSPEC     | 39 |
|     |       | 6.6.2.5       | CAN_RAW_ERR_FILTER         | 39 |
|     |       | 6.6.2.6       | CAN_RAW_FILTER             | 40 |
|     |       | 6.6.2.7       | CAN_RAW_LOOPBACK           | 40 |
|     |       | 6.6.2.8       | CAN_RAW_RECV_OWN_MSGS      | 41 |
|     |       | 6.6.2.9       | RTCAN_RTIOC_RCV_TIMEOUT    | 41 |
|     |       | 6.6.2.10      | RTCAN_RTIOC_SND_TIMEOUT    | 42 |
|     |       | 6.6.2.11      | RTCAN_RTIOC_TAKE_TIMESTAMP | 42 |
|     |       | 6.6.2.12      | SIOCGCANBAUDRATE           | 43 |
|     |       | 6.6.2.13      | SIOCGCANCTRLMODE           | 44 |
|     |       | 6.6.2.14      | SIOCGCANCUSTOMBITTIME      | 44 |
|     |       | 6.6.2.15      | SIOCGCANSTATE              | 45 |
|     |       | 6.6.2.16      | SIOCGIFINDEX               | 45 |
|     |       | 6.6.2.17      | SIOCSCANBAUDRATE           | 45 |
|     |       | 6.6.2.18      | SIOCSCANCTRLMODE           | 46 |
|     |       | 6.6.2.19      | SIOCSCANCUSTOMBITTIME      | 47 |
|     |       | 6.6.2.20      | SIOCSCANMODE               | 47 |
|     |       | 6.6.2.21      | SOL_CAN_RAW                | 48 |
|     | 6.6.3 | Typedef D     | Documentation              | 48 |
|     |       | 6.6.3.1       | can_filter_t               | 48 |
|     |       | 6.6.3.2       | can_frame_t                | 48 |
|     | 6.6.4 | Enumerat      | tion Type Documentation    | 49 |
|     |       | 6.6.4.1       | CAN_BITTIME_TYPE           | 49 |
|     |       |               |                            |    |

CONTENTS

|      |           | 6.6.4.2 CAN_MODE                 |
|------|-----------|----------------------------------|
|      |           | 6.6.4.3 CAN_STATE                |
| 6.7  | RTDM      | 1                                |
|      | 6.7.1     | Detailed Description             |
|      | 6.7.2     | Macro Definition Documentation   |
|      |           | 6.7.2.1 RTDM_TIMEOUT_INFINITE    |
|      |           | 6.7.2.2 RTDM_TIMEOUT_NONE        |
|      | 6.7.3     | Typedef Documentation            |
|      |           | 6.7.3.1 nanosecs_abs_t           |
|      |           | 6.7.3.2 nanosecs_rel_t           |
| 6.8  | RTDM      | 1 User API                       |
|      | 6.8.1     | Detailed Description             |
|      | 6.8.2     | Function Documentation           |
|      |           | 6.8.2.1 rt_dev_accept            |
|      |           | 6.8.2.2 rt_dev_bind              |
|      |           | 6.8.2.3 rt_dev_close             |
|      |           | 6.8.2.4 rt_dev_connect           |
|      |           | 6.8.2.5 rt_dev_getpeername       |
|      |           | 6.8.2.6 rt_dev_getsockname       |
|      |           | 6.8.2.7 rt_dev_getsockopt        |
|      |           | 6.8.2.8 rt_dev_ioctl             |
|      |           | 6.8.2.9 rt_dev_listen            |
|      |           | 6.8.2.10 rt_dev_open             |
|      |           | 6.8.2.11 rt_dev_read             |
|      |           | 6.8.2.12 rt_dev_recv             |
|      |           | 6.8.2.13 rt_dev_recvfrom         |
|      |           | 6.8.2.14 rt_dev_recvmsg          |
|      |           | 6.8.2.15 rt_dev_send             |
|      |           | 6.8.2.16 rt_dev_sendmsg          |
|      |           | 6.8.2.17 rt_dev_sendto           |
|      |           | 6.8.2.18 rt_dev_setsockopt       |
|      |           | 6.8.2.19 rt_dev_shutdown         |
|      |           | 6.8.2.20 rt_dev_socket           |
|      |           | 6.8.2.21 rt_dev_write            |
| 6.9  | Serial    | Devices                          |
| 6.10 | ) Testing | g Devices                        |
| 6.11 | Real-t    | ime IPC                          |
|      | 6.11.1    | Detailed Description             |
|      | 6.11.2    | 2 Macro Definition Documentation |
|      |           | 6.11.2.1 BUFP_BUFSZ              |

vi CONTENTS

| 6.11.2.2 BUFP_LABEL                   | 70 |
|---------------------------------------|----|
| 6.11.2.3 IDDP_LABEL                   | 70 |
| 6.11.2.4 IDDP_POOLSZ                  | 71 |
| 6.11.2.5 SO_RCVTIMEO                  | 72 |
| 6.11.2.6 SO_SNDTIMEO                  | 72 |
| 6.11.2.7 XDDP_BUFSZ                   | 72 |
| 6.11.2.8 XDDP_EVTDOWN                 | 73 |
| 6.11.2.9 XDDP_EVTIN                   | 73 |
| 6.11.2.10XDDP_EVTNOBUF                | 73 |
| 6.11.2.11XDDP_EVTOUT                  | 73 |
| 6.11.2.12XDDP_LABEL                   | 74 |
| 6.11.2.13XDDP_MONITOR                 | 74 |
| 6.11.2.14XDDP_POOLSZ                  | 75 |
| 6.11.3 Enumeration Type Documentation | 76 |
| 6.11.3.1 anonymous enum               | 76 |
| 6.11.4 Function Documentation         | 76 |
| 6.11.4.1 bindAF_RTIPC                 | 76 |
| 6.11.4.2 closeAF_RTIPC                | 77 |
| 6.11.4.3 connectAF_RTIPC              | 78 |
| 6.11.4.4 getpeernameAF_RTIPC          | 78 |
| 6.11.4.5 getsocknameAF_RTIPC          | 79 |
| 6.11.4.6 getsockoptAF_RTIPC           | 79 |
| 6.11.4.7 recvmsgAF_RTIPC              | 79 |
| 6.11.4.8 sendmsgAF_RTIPC              | 80 |
| 6.11.4.9 setsockoptAF_RTIPC           | 81 |
| 6.11.4.10socketAF_RTIPC               | 81 |
| 6.12 Asynchronous Procedure Calls     | 82 |
| 6.12.1 Detailed Description           | 82 |
| 6.12.2 Function Documentation         | 82 |
| 6.12.2.1 xnapc_alloc                  | 82 |
| 6.12.2.2 xnapc_free                   | 83 |
| 6.12.2.3 xnapc_schedule               | 83 |
| 6.13 In-kernel arithmetics            | 84 |
| 6.13.1 Detailed Description           | 84 |
| 6.13.2 Function Documentation         | 84 |
| 6.13.2.1 xnarch_generic_full_divmod64 | 84 |
| 6.14 Buffer descriptor                | 85 |
| 6.14.1 Detailed Description           | 85 |
| 6.14.2 Function Documentation         | 87 |
| 6.14.2.1 xnbufd_copy_from_kmem        | 87 |

CONTENTS

| 6.14.2.2 xnbufd_copy_to_kmem            | <br>88  |
|---|---------|
| 6.14.2.3 xnbufd_invalidate              | <br>89  |
| 6.14.2.4 xnbufd_map_kread               | <br>89  |
| 6.14.2.5 xnbufd_map_kwrite              | <br>89  |
| 6.14.2.6 xnbufd_map_uread               | <br>90  |
| 6.14.2.7 xnbufd_map_uwrite              | <br>90  |
| 6.14.2.8 xnbufd_reset                   | <br>90  |
| 6.14.2.9 xnbufd_unmap_kread             | <br>90  |
| 6.14.2.10xnbufd_unmap_kwrite            | <br>91  |
| 6.14.2.11xnbufd_unmap_uread             | <br>91  |
| 6.14.2.12xnbufd_unmap_uwrite            | <br>92  |
| 6.15 Clock services                     | <br>93  |
| 6.15.1 Detailed Description             | <br>93  |
| 6.15.2 Function Documentation           | <br>93  |
| 6.15.2.1 xnclock_adjust                 | <br>93  |
| 6.15.2.2 xnclock_deregister             | <br>94  |
| 6.15.2.3 xnclock_register               | <br>95  |
| 6.15.2.4 xnclock_tick                   | <br>95  |
| 6.16 Debugging services                 | <br>96  |
| 6.16.1 Detailed Description             | <br>96  |
| 6.17 Dynamic memory allocation services | <br>97  |
| 6.17.1 Detailed Description             | <br>97  |
| 6.17.2 Function Documentation           | <br>98  |
| 6.17.2.1 xnheap_alloc                   | <br>98  |
| 6.17.2.2 xnheap_destroy                 | <br>98  |
| 6.17.2.3 xnheap_extend                  | <br>99  |
| 6.17.2.4 xnheap_free                    | <br>99  |
| 6.17.2.5 xnheap_init                    | <br>100 |
| 6.17.2.6 xnheap_set_label               | <br>100 |
| 6.17.2.7 xnheap_test_and_free           | <br>100 |
| 6.18 Cobalt                             | <br>102 |
| 6.18.1 Detailed Description             | <br>102 |
| 6.19 Cobalt kernel                      | <br>103 |
| 6.19.1 Detailed Description             | <br>104 |
| 6.19.1.1 Dual kernel service tags       | <br>104 |
| 6.20 Interrupt management               |         |
| 6.20.1 Detailed Description             | <br>106 |
| 6.20.2 Function Documentation           | <br>106 |
| 6.20.2.1 xnintr_affinity                |         |
| 6.20.2.2 xnintr_attach                  | <br>107 |

viii CONTENTS

| 6.20.2.3 xnintr_destroy                        |
|--|
| 6.20.2.4 xnintr_detach                         |
| 6.20.2.5 xnintr_disable                        |
| 6.20.2.6 xnintr_enable                         |
| 6.20.2.7 xnintr_init                           |
| 6.21 Locking services                          |
| 6.21.1 Detailed Description                    |
| 6.21.2 Macro Definition Documentation          |
| 6.21.2.1 splexit                               |
| 6.21.2.2 splhigh                               |
| 6.21.2.3 spltest                               |
| 6.22 Lightweight key-to-object mapping service |
| 6.22.1 Detailed Description                    |
| 6.22.2 Function Documentation                  |
| 6.22.2.1 xnmap_create                          |
| 6.22.2.2 xnmap_delete                          |
| 6.22.2.3 xnmap_enter                           |
| 6.22.2.4 xnmap_fetch                           |
| 6.22.2.5 xnmap_fetch_nocheck                   |
| 6.22.2.6 xnmap_remove                          |
| 6.23 Registry services                         |
| 6.23.1 Detailed Description                    |
| 6.23.2 Function Documentation                  |
| 6.23.2.1 xnregistry_bind                       |
| 6.23.2.2 xnregistry_enter                      |
| 6.23.2.3 xnregistry_lookup                     |
| 6.23.2.4 xnregistry_remove                     |
| 6.23.2.5 xnregistry_unlink                     |
| 6.24 Driver programming interface              |
| 6.24.1 Detailed Description                    |
| 6.25 Driver to driver services                 |
| 6.25.1 Detailed Description                    |
| 6.25.2 Function Documentation                  |
| 6.25.2.1 rtdm_accept                           |
| 6.25.2.2 rtdm_bind                             |
| 6.25.2.3 rtdm_close                            |
| 6.25.2.4 rtdm_connect                          |
| 6.25.2.5 rtdm_getpeername                      |
| 6.25.2.6 rtdm_getsockname                      |
| 6.25.2.7 rtdm_getsockopt                       |
|  |

CONTENTS

|             | 6.25.2.8 rtdm_ioctl                |
|-------------|------------------------------------|
|             | 6.25.2.9 rtdm_listen               |
|             | 6.25.2.10rtdm_open                 |
|             | 6.25.2.11rtdm_read                 |
|             | 6.25.2.12rtdm_recv                 |
|             | 6.25.2.13rtdm_recvfrom             |
|             | 6.25.2.14rtdm_recvmsg              |
|             | 6.25.2.15rtdm_send                 |
|             | 6.25.2.16rtdm_sendmsg              |
|             | 6.25.2.17rtdm_sendto               |
|             | 6.25.2.18rtdm_setsockopt           |
|             | 6.25.2.19rtdm_shutdown             |
|             | 6.25.2.20rtdm_socket               |
|             | 6.25.2.21rtdm_write                |
| 6.26 Device | e Registration Services            |
| 6.26.       | 1 Detailed Description             |
| 6.26.       | 2 Macro Definition Documentation   |
|             | 6.26.2.1 RTDM_DEVICE_TYPE_MASK     |
|             | 6.26.2.2 RTDM_EXCLUSIVE            |
|             | 6.26.2.3 RTDM_NAMED_DEVICE         |
|             | 6.26.2.4 RTDM_PROTOCOL_DEVICE      |
| 6.26.       | 3 Function Documentation           |
|             | 6.26.3.1 rtdm_dev_register         |
|             | 6.26.3.2 rtdm_dev_unregister       |
| 6.27 Clock  | Services                           |
| 6.27.       | 1 Detailed Description             |
| 6.27.       | 2 Function Documentation           |
|             | 6.27.2.1 rtdm_clock_read           |
|             | 6.27.2.2 rtdm_clock_read_monotonic |
| 6.28 Task   | Services                           |
| 6.28.       | 1 Detailed Description             |
| 6.28.       | 2 Typedef Documentation            |
|             | 6.28.2.1 rtdm_task_proc_t          |
| 6.28.       | 3 Function Documentation           |
|             | 6.28.3.1 rtdm_task_busy_sleep      |
|             | 6.28.3.2 rtdm_task_current         |
|             | 6.28.3.3 rtdm_task_destroy         |
|             | 6.28.3.4 rtdm_task_init            |
|             | 6.28.3.5 rtdm_task_join            |
|             | 6.28.3.6 rtdm_task_set_period      |

X CONTENTS

|             | 6.28.3.7 rtdm_task_set_priority          | 6  |
|-------------|--|----|
|             | 6.28.3.8 rtdm_task_should_stop           | 6  |
|             | 6.28.3.9 rtdm_task_sleep                 | 7  |
|             | 6.28.3.10rtdm_task_sleep_abs             | 8  |
|             | 6.28.3.11rtdm_task_sleep_until           | 8  |
|             | 6.28.3.12rtdm_task_unblock               | 9  |
|             | 6.28.3.13rtdm_task_wait_period           | 9  |
| 6.29 Timer  | Services                                 | .0 |
| 6.29.1      | Detailed Description                     | .0 |
| 6.29.2      | Typedef Documentation                    | .0 |
|             | 6.29.2.1 rtdm_timer_handler_t            | .0 |
| 6.29.3      | Enumeration Type Documentation           | .1 |
|             | 6.29.3.1 rtdm_timer_mode                 | .1 |
| 6.29.4      | Function Documentation                   | .1 |
|             | 6.29.4.1 rtdm_timer_destroy              | .1 |
|             | 6.29.4.2 rtdm_timer_init                 | .1 |
|             | 6.29.4.3 rtdm_timer_start                | .1 |
|             | 6.29.4.4 rtdm_timer_start_in_handler     | .2 |
|             | 6.29.4.5 rtdm_timer_stop                 | .2 |
|             | 6.29.4.6 rtdm_timer_stop_in_handler      | .3 |
| 6.30 Synchi | ronisation Services                      | .5 |
| 6.30.1      | Detailed Description                     | 6  |
| 6.30.2      | Enumeration Type Documentation           | 6  |
|             | 6.30.2.1 rtdm_selecttype                 | 6  |
| 6.30.3      | Function Documentation                   | 6  |
|             | 6.30.3.1 rtdm_for_each_waiter            | 6  |
|             | 6.30.3.2 rtdm_for_each_waiter_safe       | .7 |
|             | 6.30.3.3 rtdm_timedwait                  | .7 |
|             | 6.30.3.4 rtdm_timedwait_condition        | 8  |
|             | 6.30.3.5 rtdm_timedwait_condition_locked | 8  |
|             | 6.30.3.6 rtdm_timedwait_locked           | .9 |
|             | 6.30.3.7 rtdm_toseq_init                 | 0  |
|             | 6.30.3.8 rtdm_wait                       | 0  |
|             | 6.30.3.9 rtdm_wait_condition             | 1  |
|             | 6.30.3.10rtdm_wait_condition_locked      | 1  |
|             | 6.30.3.11rtdm_wait_locked                | 2  |
|             | 6.30.3.12rtdm_waitqueue_broadcast        | 2  |
|             | 6.30.3.13rtdm_waitqueue_destroy          | 3  |
|             | 6.30.3.14rtdm_waitqueue_flush            | 3  |
|             | 6.30.3.15rtdm_waitqueue_init             | 3  |

CONTENTS xi

| 6.30.3.16rtdm_waitqueue_lock          |
|---------------------------------------|
| 6.30.3.17rtdm_waitqueue_signal        |
| 6.30.3.18rtdm_waitqueue_unlock        |
| 6.30.3.19rtdm_waitqueue_wakeup        |
| 6.31 Event Services                   |
| 6.31.1 Detailed Description           |
| 6.31.2 Function Documentation         |
| 6.31.2.1 rtdm_event_clear             |
| 6.31.2.2 rtdm_event_destroy           |
| 6.31.2.3 rtdm_event_init              |
| 6.31.2.4 rtdm_event_pulse             |
| 6.31.2.5 rtdm_event_select_bind       |
| 6.31.2.6 rtdm_event_signal            |
| 6.31.2.7 rtdm_event_timedwait         |
| 6.31.2.8 rtdm_event_wait              |
| 6.32 Semaphore Services               |
| 6.32.1 Detailed Description           |
| 6.32.2 Function Documentation         |
| 6.32.2.1 rtdm_sem_destroy             |
| 6.32.2.2 rtdm_sem_down                |
| 6.32.2.3 rtdm_sem_init                |
| 6.32.2.4 rtdm_sem_select_bind         |
| 6.32.2.5 rtdm_sem_timeddown           |
| 6.32.2.6 rtdm_sem_up162               |
| 6.33 Mutex services                   |
| 6.33.1 Detailed Description           |
| 6.33.2 Function Documentation         |
| 6.33.2.1 rtdm_mutex_destroy           |
| 6.33.2.2 rtdm_mutex_init              |
| 6.33.2.3 rtdm_mutex_lock              |
| 6.33.2.4 rtdm_mutex_timedlock         |
| 6.33.2.5 rtdm_mutex_unlock            |
| 6.34 Interrupt Management Services    |
| 6.34.1 Detailed Description           |
| 6.34.2 Macro Definition Documentation |
| 6.34.2.1 rtdm_irq_get_arg167          |
| 6.34.3 Typedef Documentation          |
| 6.34.3.1 rtdm_irq_handler_t           |
| 6.34.4 Function Documentation         |
| 6.34.4.1 rtdm_irq_disable             |

xii CONTENTS

| 6.34.4.2 rtdm_irq_enable               |
|--|
| 6.34.4.3 rtdm_irq_free                 |
| 6.34.4.4 rtdm_irq_request              |
| 6.35 Non-Real-Time Signalling Services |
| 6.35.1 Detailed Description            |
| 6.35.2 Typedef Documentation           |
| 6.35.2.1 rtdm_nrtsig_handler_t         |
| 6.35.3 Function Documentation          |
| 6.35.3.1 rtdm_nrtsig_destroy           |
| 6.35.3.2 rtdm_nrtsig_init              |
| 6.35.3.3 rtdm_nrtsig_pend              |
| 6.36 Utility Services                  |
| 6.36.1 Detailed Description            |
| 6.36.2 Function Documentation          |
| 6.36.2.1 rtdm_copy_from_user           |
| 6.36.2.2 rtdm_copy_to_user             |
| 6.36.2.3 rtdm_free                     |
| 6.36.2.4 rtdm_in_rt_context            |
| 6.36.2.5 rtdm_iomap_to_user            |
| 6.36.2.6 rtdm_malloc                   |
| 6.36.2.7 rtdm_mmap_iomem               |
| 6.36.2.8 rtdm_mmap_kmem                |
| 6.36.2.9 rtdm_mmap_to_user             |
| 6.36.2.10rtdm_munmap                   |
| 6.36.2.11rtdm_printk                   |
| 6.36.2.12rtdm_printk_ratelimited       |
| 6.36.2.13rtdm_ratelimit                |
| 6.36.2.14rtdm_read_user_ok             |
| 6.36.2.15rtdm_rt_capable               |
| 6.36.2.16rtdm_rw_user_ok               |
| 6.36.2.17rtdm_safe_copy_from_user      |
| 6.36.2.18rtdm_safe_copy_to_user        |
| 6.36.2.19rtdm_strncpy_from_user        |
| 6.37 Device Profiles                   |
| 6.37.1 Detailed Description            |
| 6.37.2 Macro Definition Documentation  |
| 6.37.2.1 RTIOC_DEVICE_INFO             |
| 6.37.2.2 RTIOC_PURGE                   |
| 6.38 SCHED_QUOTA scheduling policy     |
| 6.38.1 Detailed Description            |

CONTENTS xiii

| 6.39 Thread scheduling control         |
|--|
| 6.39.1 Detailed Description            |
| 6.39.2 Function Documentation          |
| 6.39.2.1 xnsched_rotate                |
| 6.39.2.2 xnsched_run                   |
| 6.40 Synchronous I/O multiplexing      |
| 6.40.1 Detailed Description            |
| 6.40.2 Function Documentation          |
| 6.40.2.1 xnselect                      |
| 6.40.2.2 xnselect_bind                 |
| 6.40.2.3 xnselect_destroy              |
| 6.40.2.4 xnselect_init                 |
| 6.40.2.5 xnselect_signal               |
| 6.40.2.6 xnselector_destroy            |
| 6.40.2.7 xnselector_init               |
| 6.41 Real-time shadow services         |
| 6.41.1 Detailed Description            |
| 6.41.2 Function Documentation          |
| 6.41.2.1 xnshadow_get_context          |
| 6.41.2.2 xnshadow_harden               |
| 6.41.2.3 xnshadow_map_kernel           |
| 6.41.2.4 xnshadow_map_user             |
| 6.41.2.5 xnshadow_pop_personality      |
| 6.41.2.6 xnshadow_push_personality     |
| 6.41.2.7 xnshadow_register_personality |
| 6.41.2.8 xnshadow_relax                |
| 6.42 Thread synchronization services   |
| 6.42.1 Detailed Description            |
| 6.42.2 Function Documentation          |
| 6.42.2.1 xnsynch_acquire               |
| 6.42.2.2 xnsynch_flush                 |
| 6.42.2.3 xnsynch_init                  |
| 6.42.2.4 xnsynch_peek_pendq            |
| 6.42.2.5 xnsynch_release               |
| 6.42.2.6 xnsynch_sleep_on              |
| 6.42.2.7 xnsynch_wakeup_one_sleeper    |
| 6.42.2.8 xnsynch_wakeup_this_sleeper   |
| 6.43 Thread services                   |
| 6.43.1 Detailed Description            |
| 6.43.2 Function Documentation          |

XIV

| 6.43.2.1 xnthread_cancel          | <br>204 |
|-----------------------------------|---------|
| 6.43.2.2 xnthread_init            | <br>204 |
| 6.43.2.3 xnthread_join            | <br>205 |
| 6.43.2.4 xnthread_migrate         | <br>206 |
| 6.43.2.5 xnthread_resume          | <br>206 |
| 6.43.2.6 xnthread_set_mode        | <br>207 |
| 6.43.2.7 xnthread_set_periodic    | <br>208 |
| 6.43.2.8 xnthread_set_schedparam  | <br>209 |
| 6.43.2.9 xnthread_set_slice       | <br>209 |
| 6.43.2.10xnthread_start           | <br>210 |
| 6.43.2.11xnthread_suspend         | <br>211 |
| 6.43.2.12xnthread_test_cancel     | <br>212 |
| 6.43.2.13xnthread_unblock         | <br>212 |
| 6.43.2.14xnthread_wait_period     | <br>212 |
| 6.44 Timer services               | <br>214 |
| 6.44.1 Detailed Description       | <br>214 |
| 6.44.2 Function Documentation     | <br>215 |
| 6.44.2.1xntimer_migrate           | <br>215 |
| 6.44.2.2 program_htick_shot       | <br>215 |
| 6.44.2.3 switch_htick_mode        | <br>215 |
| 6.44.2.4 xntimer_destroy          | <br>216 |
| 6.44.2.5 xntimer_get_date         | <br>216 |
| 6.44.2.6 xntimer_get_overruns     | <br>217 |
| 6.44.2.7 xntimer_get_timeout      | <br>217 |
| 6.44.2.8 xntimer_grab_hardware    | <br>217 |
| 6.44.2.9 xntimer_init             | <br>218 |
| 6.44.2.10xntimer_interval         | <br>219 |
| 6.44.2.11xntimer_release_hardware | <br>219 |
| 6.44.2.12xntimer_start            | <br>219 |
| 6.44.2.13xntimer_stop             | <br>220 |
| 6.45 Virtual file services        | <br>221 |
| 6.45.1 Detailed Description       | <br>222 |
| 6.45.2 Function Documentation     | <br>222 |
| 6.45.2.1 xnvfile_destroy          | <br>222 |
| 6.45.2.2 xnvfile_get_blob         | <br>223 |
| 6.45.2.3 xnvfile_get_integer      | <br>223 |
| 6.45.2.4 xnvfile_get_string       | <br>224 |
| 6.45.2.5 xnvfile_init_dir         | <br>224 |
| 6.45.2.6 xnvfile_init_link        |         |
| 6.45.2.7 xnvfile_init_regular     | <br>226 |

CONTENTS xv

| 6.45.2.8 xnvfile_init_snapshot     |
|------------------------------------|
| 6.45.3 Variable Documentation      |
| 6.45.3.1 nkvfroot                  |
| 6.45.3.2 nkvfroot                  |
| 6.46 Analogy framework             |
| 6.46.1 Detailed Description        |
| 6.47 Driver API                    |
| 6.47.1 Detailed Description        |
| 6.48 Driver management services    |
| 6.48.1 Detailed Description        |
| 6.48.2 Function Documentation      |
| 6.48.2.1 a4l_register_drv          |
| 6.48.2.2 a4l_unregister_drv        |
| 6.49 Subdevice management services |
| 6.49.1 Detailed Description        |
| 6.49.2 Function Documentation      |
| 6.49.2.1 a4l_add_subd              |
| 6.49.2.2 a4l_alloc_subd            |
| 6.49.2.3 a4l_get_subd              |
| 6.50 Buffer management services    |
| 6.50.1 Detailed Description        |
| 6.50.2 Function Documentation      |
| 6.50.2.1 a4l_buf_commit_absget     |
| 6.50.2.2 a4l_buf_commit_absput     |
| 6.50.2.3 a4l_buf_commit_get        |
| 6.50.2.4 a4l_buf_commit_put        |
| 6.50.2.5 a4l_buf_count             |
| 6.50.2.6 a4l_buf_evt               |
| 6.50.2.7 a4l_buf_get               |
| 6.50.2.8 a4l_buf_prepare_absget    |
| 6.50.2.9 a4l_buf_prepare_absput    |
| 6.50.2.10a4l_buf_prepare_get       |
| 6.50.2.11a4l_buf_prepare_put       |
| 6.50.2.12a4l_buf_put               |
| 6.50.2.13a4l_get_chan              |
| 6.50.2.14a4l_get_cmd               |
| 6.51 Interrupt management services |
| 6.51.1 Detailed Description        |
| 6.51.2 Function Documentation      |
| 6.51.2.1 a4l_free_irq              |

xvi CONTENTS

| 6.51.2.2 a4l_get_irq                 |
|--------------------------------------|
| 6.51.2.3 a4l_request_irq             |
| 6.52 Misc services                   |
| 6.52.1 Detailed Description          |
| 6.52.2 Function Documentation        |
| 6.52.2.1 a4l_get_time                |
| 6.53 Clocks and timers               |
| 6.53.1 Detailed Description          |
| 6.53.2 Function Documentation        |
| 6.53.2.1 clock_getres                |
| 6.53.2.2 clock_gettime               |
| 6.53.2.3 clock_nanosleep             |
| 6.53.2.4 clock_settime               |
| 6.53.2.5 nanosleep                   |
| 6.53.2.6 timer_create                |
| 6.53.2.7 timer_delete                |
| 6.53.2.8 timer_getoverrun            |
| 6.53.2.9 timer_gettime               |
| 6.53.2.10timer_settime               |
| 6.54 Condition variables             |
| 6.54.1 Detailed Description          |
| 6.54.2 Function Documentation        |
| 6.54.2.1 pthread_cond_broadcast      |
| 6.54.2.2 pthread_cond_destroy        |
| 6.54.2.3 pthread_cond_init           |
| 6.54.2.4 pthread_cond_signal         |
| 6.54.2.5 pthread_cond_timedwait      |
| 6.54.2.6 pthread_cond_wait           |
| 6.54.2.7 pthread_condattr_destroy    |
| 6.54.2.8 pthread_condattr_getclock   |
| 6.54.2.9 pthread_condattr_getpshared |
| 6.54.2.10pthread_condattr_init       |
| 6.54.2.11pthread_condattr_setclock   |
| 6.54.2.12pthread_condattr_setpshared |
| 6.55 POSIX interface                 |
| 6.55.1 Detailed Description          |
| 6.56 Message queues                  |
| 6.56.1 Detailed Description          |
| 6.56.2 Function Documentation        |
| 6.56.2.1 mq_close                    |

CONTENTS xvii

| 6.56.2.2 mq_getattr                    |
|--|
| 6.56.2.3 mg_notify                     |
| 6.56.2.4 mq_open                       |
| 6.56.2.5 mg_receive                    |
| 6.56.2.6 mg_send                       |
| 6.56.2.7 mg_setattr                    |
| 6.56.2.8 mq_timedreceive               |
| 6.56.2.9 mq_timedsend                  |
| 6.56.2.10mq_unlink                     |
| 6.57 Mutual exclusion                  |
| 6.57.1 Detailed Description            |
| 6.57.2 Function Documentation          |
| 6.57.2.1 pthread_mutex_destroy         |
| 6.57.2.2 pthread_mutex_init            |
| 6.57.2.3 pthread_mutex_lock            |
| 6.57.2.4 pthread_mutex_timedlock       |
| 6.57.2.5 pthread_mutex_trylock         |
| 6.57.2.6 pthread_mutex_unlock          |
| 6.57.2.7 pthread_mutexattr_destroy     |
| 6.57.2.8 pthread_mutexattr_getprotocol |
| 6.57.2.9 pthread_mutexattr_getpshared  |
| 6.57.2.10pthread_mutexattr_gettype     |
| 6.57.2.11pthread_mutexattr_init        |
| 6.57.2.12pthread_mutexattr_setprotocol |
| 6.57.2.13pthread_mutexattr_setpshared  |
| 6.57.2.14pthread_mutexattr_settype     |
| 6.58 Semaphores                        |
| 6.58.1 Detailed Description            |
| 6.58.2 Function Documentation          |
| 6.58.2.1 sem_close                     |
| 6.58.2.2 sem_destroy                   |
| 6.58.2.3 sem_init                      |
| 6.58.2.4 sem_post                      |
| 6.58.2.5 sem_timedwait                 |
| 6.58.2.6 sem_trywait                   |
| 6.58.2.7 sem_unlink                    |
| 6.58.2.8 sem_wait                      |
| 6.59 Thread management                 |
| 6.59.1 Detailed Description            |
| 6.59.2 Function Documentation          |

xviii CONTENTS

| 6.59.2.1 pthread_create            |
|------------------------------------|
| 6.59.2.2 pthread_join              |
| 6.59.2.3 pthread_kill              |
| 6.59.2.4 pthread_setmode_np        |
| 6.59.2.5 pthread_setname_np        |
| 6.60 Scheduling management         |
| 6.60.1 Detailed Description        |
| 6.60.2 Function Documentation      |
| 6.60.2.1 pthread_getschedparam     |
| 6.60.2.2 pthread_getschedparam_ex  |
| 6.60.2.3 pthread_setschedparam     |
| 6.60.2.4 pthread_setschedparam_ex  |
| 6.60.2.5 pthread_yield             |
| 6.60.2.6 sched_get_priority_max    |
| 6.60.2.7 sched_get_priority_max_ex |
| 6.60.2.8 sched_get_priority_min    |
| 6.60.2.9 sched_get_priority_min_ex |
| 6.60.2.10sched_getconfig_np        |
| 6.60.2.11sched_setconfig_np        |
| 6.60.2.12sched_yield               |
| 6.61 Smokey API                    |
| 6.62 Asynchronous acquisition API  |
| 6.62.1 Detailed Description        |
| 6.62.2 Function Documentation      |
| 6.62.2.1 a4l_get_bufsize           |
| 6.62.2.2 a4l_mark_bufrw            |
| 6.62.2.3 a4l_mmap                  |
| 6.62.2.4 a4l_poll                  |
| 6.62.2.5 a4l_set_bufsize           |
| 6.62.2.6 a4l_snd_cancel            |
| 6.62.2.7 a4l_snd_command           |
| 6.63 Asynchronous acquisition API  |
| 6.63.1 Detailed Description        |
| 6.63.2 Function Documentation      |
| 6.63.2.1 a4l_async_read            |
| 6.63.2.2 a4l_async_write           |
| 6.64 Descriptor Syscall API        |
| 6.64.1 Detailed Description        |
| 6.64.2 Function Documentation      |
| 6.64.2.1 a4l_sys_desc              |

CONTENTS xix

CONTENTS

| 6.72.1 Detailed Description           |
|---------------------------------------|
| 6.73 Basic Syscall API                |
| 6.73.1 Detailed Description           |
| 6.73.2 Function Documentation         |
| 6.73.2.1 a4l_sys_close                |
| 6.73.2.2 a4l_sys_open                 |
| 6.73.2.3 a4l_sys_read                 |
| 6.73.2.4 a4l_sys_write                |
| 6.74 Attach / detach Syscall API      |
| 6.74.1 Detailed Description           |
| 6.74.2 Function Documentation         |
| 6.74.2.1 a4l_sys_attach               |
| 6.74.2.2 a4l_sys_bufcfg               |
| 6.74.2.3 a4l_sys_detach               |
| 6.75 Alarm services                   |
| 6.75.1 Detailed Description           |
| 6.75.2 Function Documentation         |
| 6.75.2.1 rt_alarm_create              |
| 6.75.2.2 rt_alarm_delete              |
| 6.75.2.3 rt_alarm_inquire             |
| 6.75.2.4 rt_alarm_start               |
| 6.75.2.5 rt_alarm_stop                |
| 6.76 Buffer services                  |
| 6.76.1 Detailed Description           |
| 6.76.2 Macro Definition Documentation |
| 6.76.2.1 B_PRIO                       |
| 6.76.3 Function Documentation         |
| 6.76.3.1 rt_buffer_bind               |
| 6.76.3.2 rt_buffer_clear              |
| 6.76.3.3 rt_buffer_create             |
| 6.76.3.4 rt_buffer_delete             |
| 6.76.3.5 rt_buffer_inquire            |
| 6.76.3.6 rt_buffer_read               |
| 6.76.3.7 rt_buffer_read_timed         |
| 6.76.3.8 rt_buffer_read_until         |
| 6.76.3.9 rt_buffer_unbind             |
| 6.76.3.10rt_buffer_write              |
| 6.76.3.11rt_buffer_write_timed        |
| 6.76.3.12rt_buffer_write_until        |
| 6.77 Condition variable services      |

CONTENTS xxi

| 6.77.1 Detailed Description           |
|---------------------------------------|
| 6.77.2 Function Documentation         |
| 6.77.2.1 rt_cond_bind                 |
| 6.77.2.2 rt_cond_broadcast            |
| 6.77.2.3 rt_cond_create               |
| 6.77.2.4 rt_cond_delete               |
| 6.77.2.5 rt_cond_inquire              |
| 6.77.2.6 rt_cond_signal               |
| 6.77.2.7 rt_cond_unbind               |
| 6.77.2.8 rt_cond_wait                 |
| 6.77.2.9 rt_cond_wait_timed           |
| 6.77.2.10rt_cond_wait_until           |
| 6.78 Event flag group services        |
| 6.78.1 Detailed Description           |
| 6.78.2 Macro Definition Documentation |
| 6.78.2.1 EV_ANY                       |
| 6.78.2.2 EV_PRIO                      |
| 6.78.3 Function Documentation         |
| 6.78.3.1 rt_event_bind                |
| 6.78.3.2 rt_event_clear               |
| 6.78.3.3 rt_event_create              |
| 6.78.3.4 rt_event_delete              |
| 6.78.3.5 rt_event_inquire             |
| 6.78.3.6 rt_event_signal              |
| 6.78.3.7 rt_event_unbind              |
| 6.78.3.8 rt_event_wait                |
| 6.78.3.9 rt_event_wait_timed          |
| 6.78.3.10rt_event_wait_until          |
| 6.79 Heap management services         |
| 6.79.1 Detailed Description           |
| 6.79.2 Macro Definition Documentation |
| 6.79.2.1 H_PRIO                       |
| 6.79.3 Function Documentation         |
| 6.79.3.1 rt_heap_alloc                |
| 6.79.3.2 rt_heap_alloc_timed          |
| 6.79.3.3 rt_heap_alloc_until          |
| 6.79.3.4 rt_heap_bind                 |
| 6.79.3.5 rt_heap_create               |
| 6.79.3.6 rt_heap_delete               |
| 6.79.3.7 rt_heap_free                 |

xxii CONTENTS

| 6.79.3.8 rt_heap_inquire              |
|---------------------------------------|
| 6.79.3.9 rt_heap_unbind               |
| 6.80 Alchemy API                      |
| 6.80.1 Detailed Description           |
| 6.81 Mutex services                   |
| 6.81.1 Detailed Description           |
| 6.81.2 Function Documentation         |
| 6.81.2.1 rt_mutex_acquire             |
| 6.81.2.2 rt_mutex_acquire_timed       |
| 6.81.2.3 rt_mutex_acquire_until       |
| 6.81.2.4 rt_mutex_bind                |
| 6.81.2.5 rt_mutex_create              |
| 6.81.2.6 rt_mutex_delete              |
| 6.81.2.7 rt_mutex_inquire             |
| 6.81.2.8 rt_mutex_release             |
| 6.81.2.9 rt_mutex_unbind              |
| 6.82 Message pipe services            |
| 6.82.1 Detailed Description           |
| 6.82.2 Macro Definition Documentation |
| 6.82.2.1 P_MINOR_AUTO                 |
| 6.82.2.2 P_URGENT                     |
| 6.82.3 Function Documentation         |
| 6.82.3.1 rt_pipe_bind                 |
| 6.82.3.2 rt_pipe_create               |
| 6.82.3.3 rt_pipe_delete               |
| 6.82.3.4 rt_pipe_read                 |
| 6.82.3.5 rt_pipe_read_timed           |
| 6.82.3.6 rt_pipe_read_until           |
| 6.82.3.7 rt_pipe_stream               |
| 6.82.3.8 rt_pipe_unbind               |
| 6.82.3.9 rt_pipe_write                |
| 6.83 Message queue services           |
| 6.83.1 Detailed Description           |
| 6.83.2 Macro Definition Documentation |
| 6.83.2.1 Q_PRIO                       |
| 6.83.3 Function Documentation         |
| 6.83.3.1 rt_queue_alloc               |
| 6.83.3.2 rt_queue_bind                |
| 6.83.3.3 rt_queue_create              |
| 6.83.3.4 rt_queue_delete              |

CONTENTS xxiii

| 6.83.3.5 rt_queue_flush               | 392 |
|---------------------------------------|-----|
| 6.83.3.6 rt_queue_free                | 392 |
| 6.83.3.7 rt_queue_inquire             | 393 |
| 6.83.3.8 rt_queue_read                | 393 |
| 6.83.3.9 rt_queue_read_timed          | 393 |
| 6.83.3.10rt_queue_read_until          | 394 |
| 6.83.3.11rt_queue_receive             | 395 |
| 6.83.3.12rt_queue_receive_timed       | 395 |
| 6.83.3.13rt_queue_receive_until       | 396 |
| 6.83.3.14rt_queue_send                | 396 |
| 6.83.3.15rt_queue_unbind              | 397 |
| 6.84 Semaphore services               | 398 |
| 6.84.1 Detailed Description           | 399 |
| 6.84.2 Macro Definition Documentation | 399 |
| 6.84.2.1 S_PRIO                       | 399 |
| 6.84.3 Function Documentation         | 399 |
| 6.84.3.1 rt_sem_bind                  | 399 |
| 6.84.3.2 rt_sem_broadcast             | 400 |
| 6.84.3.3 rt_sem_create                | 400 |
| 6.84.3.4 rt_sem_delete                | 401 |
| 6.84.3.5 rt_sem_inquire               | 401 |
| 6.84.3.6 rt_sem_p                     | 402 |
| 6.84.3.7 rt_sem_p_timed               | 402 |
| 6.84.3.8 rt_sem_p_until               | 403 |
| 6.84.3.9 rt_sem_unbind                | 403 |
| 6.84.3.10rt_sem_v                     | 403 |
| 6.85 Task management services         | 404 |
| 6.85.1 Detailed Description           | 405 |
| 6.85.2 Macro Definition Documentation | 406 |
| 6.85.2.1 T_LOCK                       | 406 |
| 6.85.2.2 T_LOPRIO                     | 406 |
| 6.85.2.3 T_WARNSW                     | 406 |
| 6.85.3 Function Documentation         | 406 |
| 6.85.3.1 rt_task_bind                 | 406 |
| 6.85.3.2 rt_task_create               | 407 |
| 6.85.3.3 rt_task_delete               | 408 |
| 6.85.3.4 rt_task_inquire              | 408 |
| 6.85.3.5 rt_task_join                 | 409 |
| 6.85.3.6 rt_task_receive              | 410 |
| 6.85.3.7 rt_task_receive_timed        | 410 |

xxiv CONTENTS

|            | 6.85.3.8 rt_task_receive_until    |
|------------|-----------------------------------|
|            | 6.85.3.9 rt_task_reply            |
|            | 6.85.3.10rt_task_resume           |
|            | 6.85.3.11rt_task_same             |
|            | 6.85.3.12rt_task_self             |
|            | 6.85.3.13rt_task_send             |
|            | 6.85.3.14rt_task_send_timed       |
|            | 6.85.3.15rt_task_send_until       |
|            | 6.85.3.16rt_task_set_affinity     |
|            | 6.85.3.17rt_task_set_mode         |
|            | 6.85.3.18rt_task_set_periodic     |
|            | 6.85.3.19rt_task_set_priority     |
|            | 6.85.3.20rt_task_shadow           |
|            | 6.85.3.21rt_task_sleep            |
|            | 6.85.3.22rt_task_sleep_until      |
|            | 6.85.3.23rt_task_slice            |
|            | 6.85.3.24rt_task_spawn            |
|            | 6.85.3.25rt_task_start            |
|            | 6.85.3.26rt_task_suspend          |
|            | 6.85.3.27rt_task_unbind           |
|            | 6.85.3.28rt_task_unblock          |
|            | 6.85.3.29rt_task_wait_period      |
|            | 6.85.3.30rt_task_yield            |
| 6.86 Time  | r management services             |
| 6.86.      | 1 Detailed Description            |
| 6.86.      | 2 Typedef Documentation           |
|            | 6.86.2.1 RT_TIMER_INFO            |
| 6.86.      | 3 Function Documentation          |
|            | 6.86.3.1 rt_timer_inquire         |
|            | 6.86.3.2 rt_timer_ns2ticks        |
|            | 6.86.3.3 rt_timer_read            |
|            | 6.86.3.4 rt_timer_spin            |
|            | 6.86.3.5 rt_timer_ticks2ns        |
| 6.87 VxWd  | orks® emulator                    |
| 6.88 pSO   | S® emulator                       |
| 6.89 Trans | ition Kit                         |
| 6.89.      | 1 Detailed Description            |
| 6.89.      | 2 Function Documentation          |
|            | 6.89.2.1 pthread_make_periodic_np |
|            | 6.89.2.2 pthread_wait_np          |
|            |                                   |

CONTENTS

| 7 | Data | Struc       | ture Documentation              | 435        |  |  |
|---|------|-------------|---------------------------------|------------|--|--|
|   | 7.1  |             |                                 |            |  |  |
|   | 7.1  | 7.1.1       | Detailed Description            | 435<br>435 |  |  |
|   |      | 7.1.2       | Field Documentation             |            |  |  |
|   |      | 7.1.2       | 7.1.2.1 flags                   |            |  |  |
|   |      |             | 7.1.2.2 nb bits                 |            |  |  |
|   | 7.2  | a4l ch      | nannels_desc Struct Reference   |            |  |  |
|   | 1.2  | 7.2.1       | Detailed Description            |            |  |  |
|   |      | 7.2.2       | Field Documentation             |            |  |  |
|   |      | 7.2.2       | 7.2.2.1 chans                   |            |  |  |
|   |      |             | 7.2.2.2 length                  |            |  |  |
|   |      |             | 7.2.2.3 mode                    |            |  |  |
|   | 7.3  | a/I cr      | md_desc Struct Reference        |            |  |  |
|   | 7.5  | 7.3.1       | Detailed Description            |            |  |  |
|   |      | 7.3.2       | Field Documentation             |            |  |  |
|   |      | 7.5.2       | 7.3.2.1 idx subd                |            |  |  |
|   | 7.4  | 04L de      | escriptor Struct Reference      |            |  |  |
|   | 7.4  | 7.4.1       | Detailed Description            |            |  |  |
|   |      | 7.4.1       | Field Documentation             |            |  |  |
|   |      | 7.4.2       | 7.4.2.1 board name              |            |  |  |
|   |      |             | 7.4.2.2 fd                      |            |  |  |
|   |      |             | 7.4.2.3 idx read subd           |            |  |  |
|   |      |             | 7.4.2.4 idx write subd          |            |  |  |
|   |      |             |                                 |            |  |  |
|   |      |             | 3                               |            |  |  |
|   |      |             | 7.4.2.6 nb_subd                 |            |  |  |
|   |      |             |                                 |            |  |  |
|   | 7 5  | 0.41 de     | 7.4.2.8 sbsize                  |            |  |  |
|   | 7.5  | 7.5.1       |                                 |            |  |  |
|   | 7.6  |             | Detailed Description            |            |  |  |
|   | 7.6  | _           | Struction Struct Reference      |            |  |  |
|   |      | 7.6.1       | Detailed Description            |            |  |  |
|   |      | 7.6.2       | Field Documentation             |            |  |  |
|   | 7 7  | a 41 . i.a. | 7.6.2.1 idx_subd                |            |  |  |
|   | 7.7  | _           | struction_list Struct Reference |            |  |  |
|   | 7.0  |             | Detailed Description            |            |  |  |
|   | 7.8  | _           | ange Struct Reference           |            |  |  |
|   |      | 7.8.1       | Detailed Description            |            |  |  |
|   |      | 7.8.2       | Field Documentation             |            |  |  |
|   |      |             | 7.8.2.1 flags                   |            |  |  |
|   |      |             | 7.8.2.2 max                     | 442        |  |  |

xxvi CONTENTS

| 7.8.2.3 min                           |
|---------------------------------------|
| 7.9 a4l_subdevice Struct Reference    |
| 7.9.1 Detailed Description            |
| 7.10 atomic_long_t Struct Reference   |
| 7.10.1 Detailed Description           |
| 7.11 can_bittime Struct Reference     |
| 7.11.1 Detailed Description           |
| 7.12 can_bittime_btr Struct Reference |
| 7.12.1 Detailed Description           |
| 7.13 can_bittime_std Struct Reference |
| 7.13.1 Detailed Description           |
| 7.14 can_filter Struct Reference      |
| 7.14.1 Detailed Description           |
| 7.14.2 Field Documentation            |
| 7.14.2.1 can_id                       |
| 7.14.2.2 can_mask                     |
| 7.15 can_frame Struct Reference       |
| 7.15.1 Detailed Description           |
| 7.15.2 Field Documentation            |
| 7.15.2.1 can_id                       |
| 7.16 RT_ALARM_INFO Struct Reference   |
| 7.16.1 Detailed Description           |
| 7.17 RT_BUFFER_INFO Struct Reference  |
| 7.17.1 Detailed Description           |
| 7.18 RT_COND_INFO Struct Reference    |
| 7.18.1 Detailed Description           |
| 7.19 RT_EVENT_INFO Struct Reference   |
| 7.19.1 Detailed Description           |
| 7.20 RT_HEAP_INFO Struct Reference    |
| 7.20.1 Detailed Description           |
| 7.20.2 Field Documentation            |
| 7.20.2.1 usablemem                    |
| 7.21 RT_MUTEX_INFO Struct Reference   |
| 7.21.1 Detailed Description           |
| 7.21.2 Field Documentation            |
| 7.21.2.1 owner                        |
| 7.22 RT_QUEUE_INFO Struct Reference   |
| 7.22.1 Detailed Description           |
| 7.23 RT_SEM_INFO Struct Reference     |
| 7.23.1 Detailed Description           |

CONTENTS xxvii

| 7.24 RT_TASK_INFO Struct Reference     |
|--|
| 7.24.1 Detailed Description            |
| 7.25 rt_timer_info Struct Reference    |
| 7.25.1 Detailed Description            |
| 7.25.2 Field Documentation             |
| 7.25.2.1 date                          |
| 7.25.2.2 tsc                           |
| 7.26 rtdm_dev_context Struct Reference |
| 7.26.1 Detailed Description            |
| 7.26.2 Field Documentation             |
| 7.26.2.1 device                        |
| 7.27 rtdm_device Struct Reference      |
| 7.27.1 Detailed Description            |
| 7.27.2 Field Documentation             |
| 7.27.2.1 open                          |
| 7.27.2.2 socket                        |
| 7.28 rtdm_device_info Struct Reference |
| 7.28.1 Detailed Description            |
| 7.29 rtipc_port_label Struct Reference |
| 7.29.1 Detailed Description            |
| 7.29.2 Field Documentation             |
| 7.29.2.1 label                         |
| 7.30 rtser_config Struct Reference     |
| 7.30.1 Detailed Description            |
| 7.31 rtser_event Struct Reference      |
| 7.31.1 Detailed Description            |
| 7.32 rtser_status Struct Reference     |
| 7.32.1 Detailed Description            |
| 7.33 sockaddr_can Struct Reference     |
| 7.33.1 Detailed Description            |
| 7.33.2 Field Documentation             |
| 7.33.2.1 can_ifindex                   |
| 7.34 sockaddr_ipc Struct Reference     |
| 7.34.1 Detailed Description            |
| 7.34.2 Field Documentation             |
| 7.34.2.1 sipc_port                     |
| 7.35 xnsched Struct Reference          |
| 7.35.1 Detailed Description            |
| 7.35.2 Field Documentation             |
| 7.35.2.1 cpu                           |

xxviii CONTENTS

| 7.35.2.2 curr                                   |
|---|
| 7.35.2.3 htimer                                 |
| 7.35.2.4 inesting                               |
| 7.35.2.5 Iflags                                 |
| 7.35.2.6 resched                                |
| 7.35.2.7 rrbtimer                               |
| 7.35.2.8 rt                                     |
| 7.35.2.9 status                                 |
| 7.36 xnvfile_lock_ops Struct Reference          |
| 7.36.1 Detailed Description                     |
| 7.36.2 Field Documentation                      |
| 7.36.2.1 get                                    |
| 7.36.2.2 put                                    |
| 7.37 xnvfile_regular_iterator Struct Reference  |
| 7.37.1 Detailed Description                     |
| 7.37.2 Field Documentation                      |
| 7.37.2.1 pos                                    |
| 7.37.2.2 private                                |
| 7.37.2.3 seq                                    |
| 7.37.2.4 vfile                                  |
| 7.38 xnvfile_regular_ops Struct Reference       |
| 7.38.1 Detailed Description                     |
| 7.38.2 Field Documentation                      |
| 7.38.2.1 begin                                  |
| 7.38.2.2 end                                    |
| 7.38.2.3 next                                   |
| 7.38.2.4 rewind                                 |
| 7.38.2.5 show                                   |
| 7.38.2.6 store                                  |
| 7.39 xnvfile_rev_tag Struct Reference           |
| 7.39.1 Detailed Description                     |
| 7.39.2 Field Documentation                      |
| 7.39.2.1 rev                                    |
| 7.40 xnvfile_snapshot Struct Reference          |
| 7.40.1 Detailed Description                     |
| 7.41 xnvfile_snapshot_iterator Struct Reference |
| 7.41.1 Detailed Description                     |
| 7.41.2 Field Documentation                      |
| 7.41.2.1 databuf                                |
| 7.41.2.2 endfn                                  |

CONTENTS xxix

|   |      |           | 7.41.2.3   | nrdata   | <br> | <br> | <br>469 |
|---|------|-----------|------------|--|------|------|---------|
|   |      |           | 7.41.2.4   | private  | <br> | <br> | <br>469 |
|   |      |           | 7.41.2.5   | seq  | <br> | <br> | <br>469 |
|   |      |           | 7.41.2.6   | vfile  | <br> | <br> | <br>469 |
|   | 7.42 | 2 xnvfile | _snapsh    | ot_ops Struct Reference                            | <br> | <br> | <br>469 |
|   |      | 7.42.1    | Detailed   | Description  | <br> | <br> | <br>469 |
|   |      | 7.42.2    | Field Do   | cumentation  | <br> | <br> | <br>469 |
|   |      |           | 7.42.2.1   | begin  | <br> | <br> | <br>469 |
|   |      |           | 7.42.2.2   | end  | <br> | <br> | <br>470 |
|   |      |           | 7.42.2.3   | next   | <br> | <br> | <br>470 |
|   |      |           | 7.42.2.4   | rewind   | <br> | <br> | <br>471 |
|   |      |           | 7.42.2.5   | show   | <br> | <br> | <br>471 |
|   |      |           | 7.42.2.6   | store  | <br> | <br> | <br>472 |
| 8 | File | Docum     | nentation  |  |      |      | 473     |
|   | 8.1  | include   | e/cobalt/k | ernel/rtdm/analogy/buffer.h File Reference         | <br> | <br> | <br>473 |
|   |      | 8.1.1     | Detailed   | Description  | <br> | <br> | <br>474 |
|   | 8.2  | include   | e/cobalt/k | ernel/rtdm/analogy/channel_range.h File Reference  | <br> | <br> | <br>474 |
|   |      | 8.2.1     | Detailed   | Description  | <br> | <br> | <br>477 |
|   | 8.3  | include   | e/cobalt/k | ernel/rtdm/analogy/context.h File Reference        | <br> | <br> | <br>477 |
|   |      | 8.3.1     | Detailed   | Description  | <br> | <br> | <br>478 |
|   | 8.4  | include   | e/cobalt/k | ernel/rtdm/analogy/device.h File Reference         | <br> | <br> | <br>479 |
|   |      | 8.4.1     | Detailed   | Description  | <br> | <br> | <br>479 |
|   | 8.5  | include   | e/cobalt/k | ernel/rtdm/analogy/driver.h File Reference         | <br> | <br> | <br>480 |
|   |      | 8.5.1     | Detailed   | Description  | <br> | <br> | <br>480 |
|   | 8.6  | include   | e/cobalt/k | ernel/rtdm/driver.h File Reference                 | <br> | <br> | <br>481 |
|   |      | 8.6.1     |            | Description  |      |      |         |
|   |      | 8.6.2     | Typedef    | Documentation                                      |      |      |         |
|   |      |           | 8.6.2.1    | rtdm_open_handler_t                                |      |      |         |
|   |      |           | 8.6.2.2    | rtdm_socket_handler_t                              |      |      |         |
|   |      | 8.6.3     | Function   | Documentation                                      |      |      |         |
|   |      |           | 8.6.3.1    | rtdm_fd_device                                     |      |      |         |
|   |      |           | 8.6.3.2    | rtdm_fd_is_user                                    |      |      |         |
|   |      |           | 8.6.3.3    | rtdm_fd_to_private                                 |      |      |         |
|   |      |           | 8.6.3.4    | rtdm_private_to_fd                                 |      |      |         |
|   | 8.7  |           |            | ernel/rtdm/analogy/instruction.h File Reference    |      |      |         |
|   | _    | 8.7.1     |            | Description  |      |      |         |
|   | 8.8  |           |            | ernel/rtdm/analogy/rtdm_helpers.h File Reference . |      |      |         |
|   |      | 8.8.1     |            | Description  |      |      |         |
|   | 8.9  | include   | e/cobalt/k | ernel/rtdm/analogy/subdevice.h File Reference      | <br> | <br> | <br>491 |

CONTENTS

|      | 8.9.1   | Detailed Description                                   | . 492 |
|------|---------|--|-------|
| 8.10 | include | e/cobalt/kernel/rtdm/analogy/transfer.h File Reference | . 493 |
|      | 8.10.1  | Detailed Description                                   | . 493 |
| 8.11 | include | e/cobalt/kernel/rtdm/can.h File Reference              | . 494 |
|      | 8.11.1  | Detailed Description                                   | . 494 |
| 8.12 | include | e/rtdm/can.h File Reference                            | . 494 |
|      | 8.12.1  | Detailed Description                                   | . 495 |
| 8.13 | include | e/rtdm/uapi/can.h File Reference                       | . 495 |
|      | 8.13.1  | Detailed Description                                   | . 501 |
| 8.14 | include | e/cobalt/kernel/rtdm/cobalt.h File Reference           | . 502 |
|      | 8.14.1  | Detailed Description                                   | . 502 |
| 8.15 | include | e/cobalt/kernel/rtdm/ipc.h File Reference              | . 502 |
|      | 8.15.1  | Detailed Description                                   | . 503 |
| 8.16 | include | e/rtdm/ipc.h File Reference                            | . 503 |
|      | 8.16.1  | Detailed Description                                   | . 504 |
| 8.17 | include | e/rtdm/uapi/ipc.h File Reference                       | . 504 |
|      | 8.17.1  | Detailed Description                                   | . 507 |
| 8.18 | include | e/cobalt/kernel/rtdm/rtdm.h File Reference             | . 507 |
|      | 8.18.1  | Detailed Description                                   | . 507 |
| 8.19 | include | e/rtdm/rtdm.h File Reference                           | . 508 |
|      | 8.19.1  | Detailed Description                                   | . 508 |
| 8.20 |         | e/rtdm/uapi/rtdm.h File Reference                      |       |
|      | 8.20.1  | Detailed Description                                   | . 510 |
| 8.21 | include | e/cobalt/kernel/rtdm/serial.h File Reference           | . 511 |
|      |         | Detailed Description                                   |       |
| 8.22 | include | e/rtdm/serial.h File Reference                         | . 511 |
|      | 8.22.1  | Detailed Description                                   | . 512 |
| 8.23 | include | e/rtdm/uapi/serial.h File Reference                    | . 512 |
|      | 8.23.1  | Detailed Description                                   | . 516 |
|      | 8.23.2  | 2 Macro Definition Documentation                       |       |
|      |         | 8.23.2.1 RTSER_RTIOC_BREAK_CTL                         |       |
|      |         | 8.23.2.2 RTSER_RTIOC_GET_CONFIG                        |       |
|      |         | 8.23.2.3 RTSER_RTIOC_GET_CONTROL                       |       |
|      |         | 8.23.2.4 RTSER_RTIOC_GET_STATUS                        |       |
|      |         | 8.23.2.5 RTSER_RTIOC_SET_CONFIG                        |       |
|      |         | 8.23.2.6 RTSER_RTIOC_SET_CONTROL                       |       |
|      |         | 8.23.2.7 RTSER_RTIOC_WAIT_EVENT                        |       |
| 8.24 |         | e/cobalt/kernel/rtdm/testing.h File Reference          |       |
|      |         | Detailed Description                                   |       |
| 8.25 | include | e/rtdm/testing.h File Reference                        | . 521 |

| CONTENTS | XXX |
|----------|-----|
|          |     |

|   |      | rtcanrecv.c                                |     |
|---|------|--|-----|
|   | 9.7  | rtcanconfig.c                              | 558 |
|   | 9.6  | iddp-sendrecv.c                            | 555 |
|   | 9.5  | iddp-label.c                               | 553 |
|   | 9.4  | cross-link.c                               | 549 |
|   |      | can-rtt.c                                  |     |
|   | 9.2  | bufp-readwrite.c                           | 541 |
| J | 9.1  | bufp-label.c                               | 539 |
| 9 | Fyar | mple Documentation                         | 539 |
|   |      | 8.36.1 Detailed Description                | 537 |
|   | 8.36 | lib/analogy/sys.c File Reference           | 537 |
|   |      | 8.35.1 Detailed Description                | 536 |
|   | 8.35 | lib/analogy/sync.c File Reference          | 535 |
|   |      | 8.34.1 Detailed Description                | 535 |
|   | 8.34 | lib/analogy/root_leaf.h File Reference     | 535 |
|   |      | 8.33.1 Detailed Description                | 534 |
|   | 8.33 | lib/analogy/range.c File Reference         | 534 |
|   |      | 8.32.1 Detailed Description                | 533 |
|   | 8.32 | lib/analogy/info.c File Reference          | 533 |
|   |      | 8.31.1 Detailed Description                | 532 |
|   | 8.31 | lib/analogy/descriptor.c File Reference    | 532 |
|   |      | 8.30.1 Detailed Description                |     |
|   | 8.30 | lib/analogy/async.c File Reference         | 531 |
|   |      | 8.29.1 Detailed Description                |     |
|   | 8.29 | lib/analogy/internal.h File Reference      |     |
|   |      | 8.28.2.1 A4L_RNG_FACTOR                    | 530 |
|   |      | 8.28.2 Macro Definition Documentation      |     |
|   |      | 8.28.1 Detailed Description                |     |
|   | 8.28 | include/rtdm/uapi/analogy.h File Reference | 525 |
|   |      | 8.27.1 Detailed Description                |     |
|   | 8.27 | include/rtdm/analogy.h File Reference      | 523 |
|   |      | 8.26.1 Detailed Description                |     |
|   |      | include/rtdm/uapi/testing.h File Reference |     |
|   |      | 8.25.1 Detailed Description                | 521 |

## Chapter 1

## API service tags

The non-POSIX API services based on the Copperplate library may be restricted to particular calling contexts, or entail specific side-effects.

This information applies to the Alchemy API services, and to all RTOS emulators as well. To describe this information, each service documented by this section bears a set of tags when applicable.

The table below matches the tags used throughout the documentation with the description of their meaning for the caller.

#### **Context tags**

| Tag                 | Context on entry                            |
|---------------------|---|
| xthread-only        | Must be called from a Xenomai thread        |
| xhandler-only       | Must be called from a Xenomai handler. See  |
|                     | note.                                       |
| xcontext            | May be called from any Xenomai context      |
|                     | (thread or handler).                        |
| pthread-only        | Must be called from a regular POSIX thread  |
| thread-unrestricted | May be called from a Xenomai or regular     |
|                     | POSIX thread indifferently                  |
| xthread-nowait      | May be called from a Xenomai thread         |
|                     | unrestricted, or from a regular thread as a |
|                     | non-blocking service only. See note.        |
| unrestricted        | May be called from any context previously   |
|                     | described                                   |

#### Note

A Xenomai handler is most often used for callback-based timeout notifications. This context is *NOT* mapped to a regular Linux signal handler, it is actually underlaid by a special thread context, so that async-unsafe POSIX services may be invoked internally by the API implementation when running on behalf of such handler. Therefore, calling Xenomai API services from asynchronous regular signal handlers is fundamentally unsafe.

A non-blocking call for an API service is defined by a special value passed as a timeout specification.

#### Possible side-effects over the Cobalt core (i.e. dual kernel configuration)

| Tag | Description |  |  |
|-----|-------------|--|--|

2 API service tags

| switch-primary   | the caller may switch to primary mode   |
|------------------|---|
| switch-secondary | the caller may switch to secondary mode |

#### Note

As a rule of thumb, any service which might block the caller, causes a switch to primary mode if invoked from secondary mode. This rule might not apply in case the service can complete fully from user-space without any syscall entailed, due to a particular optimization (e.g. fast acquisition of semaphore resources directly from user-space in the non-contended case). Therefore, the switch-{primary, secondary} tags denote either services which will always switch the caller to the mode mentioned, or might have to do so, depending on the context. The absence of such tag indicates that such services can complete in either modes and as such will entail no switch.

### Chapter 2

## **Deprecated List**

## Global pthread\_make\_periodic\_np (pthread\_t thread, struct timespec \*starttp, struct timespec \*periodtp)

This service is a non-portable extension of the Xenomai 2.x POSIX interface, not available with Xenomai 3.x. Instead, Cobalt-based applications should set up a periodic timer using the timer\_create(), timer\_settime() call pair, then wait for release points via sigwaitinfo(). Overruns can be detected by looking at the siginfo.si\_overrun field. Alternatively, applications may obtain a file descriptor referring to a Cobalt timer via the timerfd() call, and read() from it to wait for timeouts.

#### Global pthread\_wait\_np (unsigned long \*overruns\_r)

This service is a non-portable extension of the Xenomai 2.x POSIX interface, not available with Xenomai 3.x. Instead, Cobalt-based applications should set up a periodic timer using the timer\_create(), timer\_settime() call pair, then wait for release points via sigwaitinfo(). Overruns can be detected by looking at the siginfo.si\_overrun field. Alternatively, applications may obtain a file descriptor referring to a Cobalt timer via the timerfd() call, and read() from it to wait for timeouts.

#### Global RTDM\_EXECUTE\_ATOMICALLY (code\_block)

This construct will be phased out in Xenomai 3.0. Please use rtdm\_waitqueue services instead.

#### Global rtdm\_task\_sleep\_until (nanosecs\_abs\_t wakeup\_time)

Use rtdm task sleep abs instead!

**Deprecated List** 

# Chapter 3

# Module Index

## 3.1 Modules

| Here is a list of all modules:            |
|---|
| RTDM                                      |
| RTDM User API                             |
| Driver programming interface              |
| Driver to driver services                 |
| Device Registration Services              |
| Clock Services                            |
| Task Services                             |
| Timer Services                            |
| Synchronisation Services                  |
| Big dual kernel lock                      |
| Spinlock with preemption deactivation     |
| Event Services                            |
| Semaphore Services                        |
| Mutex services                            |
| Interrupt Management Services             |
| Non-Real-Time Signalling Services         |
| Utility Services                          |
| Device Profiles                           |
| CAN Devices                               |
| Serial Devices                            |
| Testing Devices                           |
| Real-time IPC                             |
| Cobalt                                    |
| Cobalt kernel                             |
| Asynchronous Procedure Calls              |
| In-kernel arithmetics                     |
| Buffer descriptor                         |
| Clock services                            |
| Debugging services                        |
| Dynamic memory allocation services        |
| Interrupt management                      |
| Locking services                          |
| Lightweight key-to-object mapping service |
| Registry services                         |
| Thread scheduling control                 |
| SCHED_QUOTA scheduling policy             |
| Synchronous I/O multiplexing              |

6 Module Index

| Real-time snadow services             |       |
|---------------------------------------|-------|
| Thread synchronization services       |       |
| Thread services                       | 203   |
| Thread state flags                    | . 26  |
| Thread information flags              | . 29  |
| Timer services                        |       |
| Virtual file services                 |       |
| Analogy framework                     |       |
| Driver API                            |       |
| Channels and ranges                   |       |
| · · · · · · · · · · · · · · · · · · · |       |
| Driver management services            |       |
| Subdevice management services         |       |
| Buffer management services            |       |
| Interrupt management services         |       |
| Misc services                         |       |
| Analogy user API                      |       |
| Level 1 API                           | . 323 |
| Asynchronous acquisition API          | . 305 |
| Descriptor API                        |       |
| Synchronous acquisition API           |       |
| Level 2 API                           |       |
| Asynchronous acquisition API          |       |
|                                       |       |
| Range / conversion API                |       |
| Synchronous acquisition API           |       |
| Level 0 API                           |       |
| Descriptor Syscall API                |       |
| Basic Syscall API                     |       |
| Attach / detach Syscall API           | . 336 |
| POSIX interface                       | . 263 |
| Clocks and timers                     | 248   |
| Condition variables                   |       |
| Message queues                        |       |
| Mutual exclusion                      |       |
| Semaphores                            |       |
| Thread management                     |       |
| Scheduling management                 |       |
|                                       |       |
| Smokey API                            |       |
| Alchemy API                           |       |
| Alarm services                        | . 338 |
| Buffer services                       | . 342 |
| Condition variable services           | . 351 |
| Event flag group services             | . 357 |
| Heap management services              | . 365 |
| Mutex services                        | . 374 |
| Message pipe services                 |       |
| Message queue services                |       |
| Semaphore services                    |       |
| Task management services              |       |
| Timer management services             |       |
| -                                     |       |
| VxWorks® emulator                     |       |
| pSOS® emulator                        |       |
| Transition Kit                        | . 432 |

# Chapter 4

# Data Structure Index

## 4.1 Data Structures

Here are the data structures with brief descriptions:

| a4l_channel   |     |
|---|-----|
| Structure describing some channel's characteristics                       | 35  |
| a4l_channels_desc   |     |
| Structure describing a channels set                                       | 35  |
| a4l_cmd_desc  |     |
| Structure describing the asynchronous instruction                         | 36  |
| a4l_descriptor  |     |
| Structure containing device-information useful to users                   | 36  |
| a4l_driver  |     |
| Structure containing driver declaration data                              | 38  |
| a4l_instruction   |     |
| Structure describing the synchronous instruction                          | FC  |
| Structure describing the list of synchronous instructions                 | 1 - |
| a4l range   |     |
| Structure describing a (unique) range                                     | 11  |
| a4l subdevice   |     |
| Structure describing the subdevice  | 12  |
| atomic long t   |     |
| Copyright © 2011 Gilles Chanteperdrix gilles.chanteperdrix@xenomai.org 44 | 14  |
| can_bittime   |     |
| Custom CAN bit-time definition  | 14  |
| can_bittime_btr   |     |
| Hardware-specific BTR bit-times   | 15  |
| can_bittime_std   |     |
| Standard bit-time parameters according to Bosch                           | 15  |
| can_filter  |     |
| Filter for reception of CAN messages                                      | 16  |
| can_frame   |     |
| Raw CAN frame   | 1   |
| RT_ALARM_INFO   |     |
| Alarm status descriptor   | łč  |
| RT_BUFFER_INFO  Buffer status descriptor                                  | 1 C |
| RT COND INFO  | FC  |
| Condition variable status descriptor                                      | 10  |
| RT EVENT INFO   | re  |
| Event status descriptor   | 15  |
|   |     |

8 Data Structure Index

| RT HEAP INFO  |   |
|---|---|
| Heap status descriptor                                | 9 |
| RT_MUTEX_INFO   |   |
| Mutex status descriptor                               | 0 |
| RT_QUEUE_INFO   |   |
| Queue status descriptor                               | 1 |
| RT_SEM_INFO   |   |
| Semaphore status descriptor                           | 1 |
| RT_TASK_INFO  | _ |
| Task status descriptor                                | 2 |
| rt_timer_info Timer status descriptor                 | 2 |
| ·   | _ |
| rtdm_dev_context  Device context                      | Q |
| rtdm device   | J |
| RTDM device   | 4 |
| rtdm device info                                      | 7 |
| Device information                                    | 6 |
| rtipc_port_label                                      | Ŭ |
| Port label information structure                      | 6 |
| rtser config  | Ĭ |
| Serial device configuration                           | 7 |
| rtser_event   |   |
| Additional information about serial device events     | 8 |
| rtser_status  |   |
| Serial device status                                  | 8 |
| sockaddr_can  |   |
| Socket address structure for the CAN address family   | 9 |
| sockaddr_ipc  |   |
| Socket address structure for the RTIPC address family | 9 |
| xnsched   |   |
| Scheduling information structure                      | U |
| xnvfile_lock_ops                                      |   |
| Vfile locking operations                              |   |
| xnvfile_regular_iterator  Regular vfile iterator      | 2 |
| xnvfile_regular_ops                                   | _ |
| Regular vfile operation descriptor                    | Q |
| xnvfile_rev_tag                                       | J |
| Snapshot revision tag                                 | 6 |
| xnvfile_snapshot                                      | ٠ |
| Snapshot vfile descriptor                             | 7 |
| xnvfile_snapshot_iterator                             |   |
| Snapshot-driven vfile iterator                        | 7 |
| xnvfile_snapshot_ops                                  |   |
| Snapshot vfile operation descriptor                   | 9 |

# Chapter 5

# File Index

## 5.1 File List

Here is a list of all documented files with brief descriptions:

| include/version.h                  |
|------------------------------------|
| include/alchemy/alarm.h            |
| include/alchemy/buffer.h           |
| include/alchemy/compat.h           |
| include/alchemy/cond.h             |
| include/alchemy/event.h            |
| include/alchemy/heap.h??           |
| include/alchemy/mutex.h            |
| include/alchemy/pipe.h             |
| include/alchemy/queue.h            |
| include/alchemy/sem.h              |
| include/alchemy/task.h             |
| include/alchemy/timer.h            |
| include/boilerplate/ancillaries.h  |
| include/boilerplate/compiler.h     |
| include/boilerplate/debug.h??      |
| include/boilerplate/hash.h         |
| include/boilerplate/list.h         |
| include/boilerplate/lock.h         |
| include/boilerplate/obstack.h      |
| include/boilerplate/private-list.h |
| include/boilerplate/scope.h        |
| include/boilerplate/shared-list.h  |
| include/boilerplate/time.h         |
| include/cobalt/arith.h             |
| include/cobalt/fcntl.h             |
| include/cobalt/mqueue.h            |
| include/cobalt/pthread.h           |
| include/cobalt/sched.h             |
| include/cobalt/semaphore.h         |
| include/cobalt/signal.h            |
| include/cobalt/stdio.h             |
| include/cobalt/stdlib.h??          |
| include/cobalt/syslog.h            |
| include/cobalt/ticks.h             |
| include/cobalt/time.h              |
| include/cobalt/trace.h             |
| include/cobalt/unistd.h            |

10 File Index

| include/cobalt/wrappers.h                             | ??  |
|---|-----|
| include/cobalt/boilerplate/limits.h                   | ??  |
| include/cobalt/boilerplate/ <b>sched.h</b>            | ??  |
| include/cobalt/boilerplate/signal.h                   | ??  |
| include/cobalt/boilerplate/ <b>trace.h</b>            | ??  |
| include/cobalt/boilerplate/wrappers.h                 | ??  |
| include/cobalt/kernel/ <b>ancillaries.h</b>           | ??  |
| include/cobalt/kernel/apc.h                           |     |
| include/cobalt/kernel/arith.h                         | ??  |
| include/cobalt/kernel/ <b>assert.h</b>                | ??  |
| include/cobalt/kernel/ <b>bheap.h</b>                 |     |
| include/cobalt/kernel/ <b>bufd.h</b>                  |     |
| include/cobalt/kernel/ <b>clock.h</b>                 | ??  |
| include/cobalt/kernel/ <b>heap.h</b>                  | ??  |
| include/cobalt/kernel/ <b>init.h</b>                  |     |
| include/cobalt/kernel/ <b>intr.h</b>                  | ??  |
| include/cobalt/kernel/ <b>list.h</b>                  |     |
| include/cobalt/kernel/ <b>lock.h</b>                  |     |
| include/cobalt/kernel/ <b>map.h</b>                   |     |
| include/cobalt/kernel/ <b>pipe.h</b>                  |     |
| include/cobalt/kernel/ <b>ppd.h</b>                   |     |
| include/cobalt/kernel/ <b>registry.h</b>              |     |
| include/cobalt/kernel/ <b>sched-idle.h</b>            |     |
| include/cobalt/kernel/ <b>sched-quota.h</b>           |     |
| include/cobalt/kernel/ <b>sched-rt.h</b>              |     |
| include/cobalt/kernel/ <b>sched-sporadic.h</b>        |     |
| include/cobalt/kernel/ <b>sched-tp.h</b>              |     |
| include/cobalt/kernel/ <b>sched-weak.h</b>            |     |
| include/cobalt/kernel/ <b>sched.h</b>                 |     |
| include/cobalt/kernel/ <b>schedparam.h</b>            |     |
| include/cobalt/kernel/ <b>schedqueue.h</b>            |     |
| include/cobalt/kernel/ <b>select.h</b>                |     |
| include/cobalt/kernel/ <b>shadow.h</b>                |     |
| include/cobalt/kernel/ <b>stat.h</b>                  |     |
| include/cobalt/kernel/ <b>synch.h</b>                 |     |
| include/cobalt/kernel/thread.h                        |     |
|   |     |
| include/cobalt/kernel/ <b>trace.h</b>                 |     |
| include/cobalt/kernel/ <b>tree.h</b>                  |     |
|   |     |
|   |     |
|   |     |
|   |     |
|   | 494 |
| include/cobalt/kernel/rtdm/cobalt.h                   | EOO |
| This file is part of the Xenomai project              | 502 |
| include/cobalt/kernel/rtdm/driver.h                   | 404 |
| Real-Time Driver Model for Xenomai, driver API header |     |
| include/cobalt/kernel/rtdm/ <b>fd.h</b>               | 77  |
| include/cobalt/kernel/rtdm/ipc.h                      | F00 |
| This file is part of the Xenomai project              |     |
| include/cobalt/kernel/rtdm/rtdm.h                     |     |
| include/cobalt/kernel/rtdm/serial.h                   |     |
| include/cobalt/kernel/rtdm/testing.h                  | 520 |
| include/cobalt/kernel/rtdm/analogy/buffer.h           | 470 |
| Analogy for Linux, buffer related features            | 473 |
| include/cobalt/kernel/rtdm/analogy/channel_range.h    | 47. |
| Analogy for Linux, channel, range related features    |     |
| include/cobalt/kernel/rtdm/analogy/ <b>command.h</b>  | ??  |

5.1 File List

| include/cobalt/kernel/rtdm/analogy/context.h               |
|--|
| Analogy for Linux, context structure / macros declarations |
| include/cobalt/kernel/rtdm/analogy/device.h                |
| Analogy for Linux, device related features                 |
| include/cobalt/kernel/rtdm/analogy/driver.h                |
| Analogy for Linux, driver facilities                       |
| include/cobalt/kernel/rtdm/analogy/instruction.h           |
| Analogy for Linux, instruction related features            |
| include/cobalt/kernel/rtdm/analogy/rtdm_helpers.h          |
| Analogy for Linux, Operation system facilities             |
| include/cobalt/kernel/rtdm/analogy/subdevice.h             |
| Analogy for Linux, subdevice related features              |
| include/cobalt/kernel/rtdm/analogy/transfer.h              |
| Analogy for Linux, transfer related features               |
| include/cobalt/sys/cobalt.h                                |
| include/cobalt/sys/ioctl.h                                 |
| include/cobalt/sys/mman.h                                  |
| include/cobalt/sys/select.h                                |
| include/cobalt/sys/socket.h                                |
| include/cobalt/sys/time.h                                  |
| include/cobalt/sys/timerfd.h                               |
| include/cobalt/uapi/ <b>cond.h</b>                         |
| include/cobalt/uapi/event.h                                |
| include/cobalt/uapi/monitor.h                              |
| include/cobalt/uapi/mutex.h                                |
| include/cobalt/uapi/ <b>sched.h</b> ???                    |
| include/cobalt/uapi/sem.h??                                |
| include/cobalt/uapi/ <b>signal.h</b> ???                   |
| include/cobalt/uapi/syscall.h                              |
| include/cobalt/uapi/thread.h                               |
| include/cobalt/uapi/time.h???                              |
| include/cobalt/uapi/asm-generic/arith.h                    |
| include/cobalt/uapi/asm-generic/ <b>features.h</b>         |
| include/cobalt/uapi/asm-generic/syscall.h                  |
| include/cobalt/uapi/kernel/heap.h                          |
| include/cobalt/uapi/kernel/ <b>limits.h</b>                |
|  |
| include/cobalt/uapi/kernel/ <b>thread.h</b> ??             |
|  |
|  |
| · ·  |
| include/cobalt/uapi/kernel/ <b>vdso.h</b>                  |
| include/copperplate/clockobj.h??                           |
| include/copperplate/cluster.h                              |
| include/copperplate/debug.h                                |
| include/copperplate/eventobj.h??                           |
| include/copperplate/heapobj.h                              |
| include/copperplate/init.h                                 |
| include/copperplate/ <b>reference.h</b>                    |
| include/copperplate/registry-obstack.h??                   |
| include/copperplate/registry.h                             |
| include/copperplate/semobj.h                               |
| include/copperplate/syncobj.h                              |
| include/copperplate/threadobj.h                            |
| include/copperplate/timerobj.h                             |
| include/copperplate/traceobj.h??                           |
| include/copperplate/wrappers.h                             |
| 11 1   |

12 File Index

| include/mercury/boilerplate/ <b>limits.h</b>  | ??                               |
|---|----------------------------------|
| include/mercury/boilerplate/ <b>sched.h</b>   | ??                               |
| include/mercury/boilerplate/ <b>signal.h</b>  | ??                               |
| include/mercury/boilerplate/ <b>trace.h</b>   | ??                               |
| include/mercury/boilerplate/wrappers.h  | ??                               |
| include/nocore/atomic.h   | ??<br>??                         |
| include/psos/ <b>psos.h</b>   | "                                |
| include/rtdm/analogy.h  Analogy for Linux, library facilities   | 523                              |
| include/rtdm/ <b>autotune.h</b>   |                                  |
| include/rtdm/can.h  | 494                              |
| include/rtdm/ipc.h  | 707                              |
| This file is part of the Xenomai project  | 503                              |
| include/rtdm/rtdm.h   | 508                              |
| include/rtdm/serial.h   | 000                              |
| Real-Time Driver Model for Xenomai, serial device profile header  | 511                              |
| include/rtdm/testing.h  |                                  |
| Real-Time Driver Model for Xenomai, testing device profile header   | 521                              |
| include/rtdm/uapi/analogy.h   |                                  |
| Analogy for Linux, UAPI bits  | 525                              |
| include/rtdm/uapi/autotune.h  |                                  |
| include/rtdm/uapi/can.h   |                                  |
| Real-Time Driver Model for RT-Socket-CAN, CAN device profile header   | 495                              |
| include/rtdm/uapi/ <mark>ipc.h</mark>   |                                  |
| This file is part of the Xenomai project  | 504                              |
| include/rtdm/uapi/rtdm.h  |                                  |
| Real-Time Driver Model for Xenomai, user API header   | 509                              |
| include/rtdm/uapi/serial.h  |                                  |
| Real-Time Driver Model for Xenomai, serial device profile header  | 512                              |
| include/rtdm/uapi/testing.h   | <b>500</b>                       |
| Real-Time Driver Model for Xenomai, testing device profile header   |                                  |
| include/smokey/ <b>smokey.h</b>   | ??<br>??                         |
| include/trank/ <b>rtdk.h</b>  | ??                               |
| include/trank/trank.fr  | ??                               |
| include/trank/native/ <b>buffer.h</b>   | ??                               |
| include/trank/native/ <b>cond.h</b>   |                                  |
| include/trank/native/ <b>event.h</b>  | ??                               |
| include/trank/native/ <b>heap.h</b>   | ??                               |
| include/trank/native/ <b>misc.h</b>   | ??                               |
| include/trank/native/ <b>mutex.h</b>  | ??                               |
| include/trank/native/ <b>pipe.h</b>   | ??                               |
| include/trank/native/ <b>queue.h</b>  | ??                               |
| include/trank/native/ <b>sem.h</b>  | ??                               |
| include/trank/native/task.h   | ??                               |
| include/trank/native/t <b>imer.h</b>  | ??                               |
| include/trank/native/types.h  | ??                               |
| include/trank/posix/pthread.h   | ~~                               |
| include/frank/posix/ <b>pthread.h</b>   | ??                               |
| include/trank/rtdm/ <b>rtcan.h</b>  | ??                               |
| include/trank/rtdm/ <b>rtcan.h</b>  | ??<br>??                         |
| include/trank/rtdm/ <b>rtcan.h</b>  | ??<br>??<br>??                   |
| include/trank/rtdm/rtcan.h include/trank/rtdm/rtipc.h include/trank/rtdm/rtserial.h include/trank/rtdm/rtseting.h   | ??<br>??<br>??<br>??             |
| include/trank/rtdm/rtcan.h include/trank/rtdm/rtipc.h include/trank/rtdm/rtserial.h include/trank/rtdm/rttesting.h include/vxworks/errnoLib.h   | ??<br>??<br>??<br>??             |
| include/trank/rtdm/rtcan.h include/trank/rtdm/rtipc.h include/trank/rtdm/rtserial.h include/trank/rtdm/rttesting.h include/vxworks/errnoLib.h include/vxworks/intLib.h  | ??<br>??<br>??<br>??<br>??       |
| include/trank/rtdm/rtcan.h include/trank/rtdm/rtipc.h include/trank/rtdm/rtserial.h include/trank/rtdm/rttesting.h include/vxworks/errnoLib.h include/vxworks/intLib.h include/vxworks/kernLib.h                          | ??<br>??<br>??<br>??<br>??<br>?? |
| include/trank/rtdm/rtcan.h include/trank/rtdm/rtipc.h include/trank/rtdm/rtserial.h include/trank/rtdm/rttesting.h include/vxworks/errnoLib.h include/vxworks/intLib.h include/vxworks/kernLib.h include/vxworks/lstLib.h | ??<br>??<br>??<br>??<br>??<br>?? |
| include/trank/rtdm/rtcan.h include/trank/rtdm/rtipc.h include/trank/rtdm/rtserial.h include/trank/rtdm/rttesting.h include/vxworks/errnoLib.h include/vxworks/intLib.h include/vxworks/kernLib.h                          | ??<br>??<br>??<br>??<br>??<br>?? |

5.1 File List

| include/vxworks/rngLib.h   |
|--|
| include/vxworks/semLib.h   |
| include/vxworks/sysLib.h??   |
| include/vxworks/taskInfo.h   |
| include/vxworks/taskLib.h  |
| include/vxworks/tickLib.h??  |
| include/vxworks/types.h  |
| include/vxworks/wdLib.h  |
| kernel/cobalt/debug.h  |
| kernel/cobalt/ <b>procfs.h</b>   |
| kernel/cobalt/arch/arm/include/asm/xenomai/calibration.h   |
| kernel/cobalt/arch/arm/include/asm/xenomai/features.h  |
| kernel/cobalt/arch/arm/include/asm/xenomai/fptest.h  |
| kernel/cobalt/arch/arm/include/asm/xenomai/machine.h ?? kernel/cobalt/arch/arm/include/asm/xenomai/syscall.h ??  |
| ,  |
|  |
|  |
| kernel/cobalt/arch/arm/include/asm/xenomai/uapi/ <b>arith.h</b>  |
|  |
| and the second s |
|  |
|  |
|  |
|  |
|  |
|  |
| ,  |
|  |
|  |
|  |
| and the state of t |
| and the second s |
| kernel/cobalt/arch/blackfin/include/asm/xenomai/uapi/syscall.h ?? kernel/cobalt/arch/nios2/include/asm/xenomai/calibration.h ??  |
| kernel/cobalt/arch/nios2/include/asm/xenomai/features.h  |
| kernel/cobalt/arch/nios2/include/asm/xenomai/fptest.h  |
| kernel/cobalt/arch/nios2/include/asm/xenomai/ <b>machine.h</b>   |
| kernel/cobalt/arch/nios2/include/asm/xenomai/syscall.h ??  |
| kernel/cobalt/arch/nios2/include/asm/xenomai/thread.h  |
| kernel/cobalt/arch/nios2/include/asm/xenomai/wrappers.h  |
| kernel/cobalt/arch/nios2/include/asm/xenomai/uapi/arith.h ???  |
| kernel/cobalt/arch/nios2/include/asm/xenomai/uapi/ <b>features.h</b>   |
| kernel/cobalt/arch/nios2/include/asm/xenomai/uapi/fetet.h ??   |
| kernel/cobalt/arch/nios2/include/asm/xenomai/uapi/syscall.h  |
| kernel/cobalt/arch/powerpc/include/asm/xenomai/calibration.h   |
| kernel/cobalt/arch/powerpc/include/asm/xenomai/features.h  |
| kernel/cobalt/arch/powerpc/include/asm/xenomai/fptest.h  |
| kernel/cobalt/arch/powerpc/include/asm/xenomai/machine.h   |
| kernel/cobalt/arch/powerpc/include/asm/xenomai/syscall.h   |
| kernel/cobalt/arch/powerpc/include/asm/xenomai/thread.h  |
| kernel/cobalt/arch/powerpc/include/asm/xenomai/wrappers.h  |
| kernel/cobalt/arch/powerpc/include/asm/xenomai/uapi/arith.h  |
| kernel/cobalt/arch/powerpc/include/asm/xenomai/uapi/features.h   |
| kernel/cobalt/arch/powerpc/include/asm/xenomai/uapi/fptest.h   |
| kernel/cobalt/arch/powerpc/include/asm/xenomai/uapi/syscall.h  |
| kernel/cobalt/arch/sh/include/asm/xenomai/ <b>calibration.h</b>  |
| kernel/cobalt/arch/sh/include/asm/xenomai/ <b>features.h</b>   |
| kernel/cobalt/arch/sh/include/asm/xenomai/fptest.h   |
| •  |

14 File Index

| kernel/cobalt/arch/sh/include/asm/xenomai/ <b>machine.h</b>       | ?? |
|---|----|
| kernel/cobalt/arch/sh/include/asm/xenomai/ <b>syscall.h</b>       | ?? |
| kernel/cobalt/arch/sh/include/asm/xenomai/ <b>thread.h</b>        | ?? |
| kernel/cobalt/arch/sh/include/asm/xenomai/ <b>wrappers.h</b>      | ?? |
| kernel/cobalt/arch/sh/include/asm/xenomai/uapi/ <b>arith.h</b>    | ?? |
| kernel/cobalt/arch/sh/include/asm/xenomai/uapi/ <b>features.h</b> | ?? |
| kernel/cobalt/arch/sh/include/asm/xenomai/uapi/ <b>fptest.h</b>   | ?? |
| kernel/cobalt/arch/sh/include/asm/xenomai/uapi/ <b>syscall.h</b>  | ?? |
| kernel/cobalt/arch/x86/include/asm/xenomai/c1e.h                  | ?? |
| kernel/cobalt/arch/x86/include/asm/xenomai/calibration.h          | ?? |
| kernel/cobalt/arch/x86/include/asm/xenomai/ <b>features.h</b>     | ?? |
| kernel/cobalt/arch/x86/include/asm/xenomai/ <b>fptest.h</b>       | ?? |
| kernel/cobalt/arch/x86/include/asm/xenomai/ <b>machine.h</b>      | ?? |
| kernel/cobalt/arch/x86/include/asm/xenomai/ <b>smi.h</b>          | ?? |
| kernel/cobalt/arch/x86/include/asm/xenomai/ <b>syscall.h</b>      | ?? |
| kernel/cobalt/arch/x86/include/asm/xenomai/thread.h               | ?? |
| kernel/cobalt/arch/x86/include/asm/xenomai/ <b>wrappers.h</b>     | ?? |
| kernel/cobalt/arch/x86/include/asm/xenomai/uapi/ <b>arith.h</b>   | ?? |
| kernel/cobalt/arch/x86/include/asm/xenomai/uapi/features.h        | ?? |
| kernel/cobalt/arch/x86/include/asm/xenomai/uapi/fptest.h          | ?? |
| kernel/cobalt/arch/x86/include/asm/xenomai/uapi/ <b>syscall.h</b> | ?? |
| kernel/cobalt/include/asm-generic/xenomai/ <b>machine.h</b>       | ?? |
| kernel/cobalt/include/asm-generic/xenomai/ <b>mayday.h</b>        | ?? |
| kernel/cobalt/include/asm-generic/xenomai/ <b>pci ids.h</b>       | ?? |
| kernel/cobalt/include/asm-generic/xenomai/ <b>syscall.h</b>       | ?? |
| kernel/cobalt/include/asm-generic/xenomai/ <b>thread.h</b>        | ?? |
| kernel/cobalt/include/asm-generic/xenomai/ <b>wrappers.h</b>      | ?? |
| kernel/cobalt/include/ipipe/thread_info.h                         | ?? |
| kernel/cobalt/posix/ <b>clock.h</b>                               | ?? |
| kernel/cobalt/posix/ <b>cond.h</b>                                | ?? |
| kernel/cobalt/posix/ <b>event.h</b>                               | ?? |
| kernel/cobalt/posix/ <b>extension.h</b>                           | ?? |
| kernel/cobalt/posix/ <b>internal.h</b>                            | ?? |
| kernel/cobalt/posix/ <b>monitor.h</b>                             | ?? |
| kernel/cobalt/posix/ <b>mqueue.h</b>                              | ?? |
| kernel/cobalt/posix/ <b>mutex.h</b>                               | ?? |
| kernel/cobalt/posix/ <b>process.h</b>                             | ?? |
| kernel/cobalt/posix/ <b>sched.h</b>                               | ?? |
| kernel/cobalt/posix/ <b>select.h</b>                              | ?? |
| kernel/cobalt/posix/ <b>sem.h</b>                                 | ?? |
| kernel/cobalt/posix/ <b>signal.h</b>                              | ?? |
| kernel/cobalt/posix/thread.h                                      | ?? |
| kernel/cobalt/posix/ <b>timer.h</b>                               | ?? |
| kernel/cobalt/posix/ <b>timerfd.h</b>                             | ?? |
| kernel/cobalt/rtdm/ <b>internal.h</b>                             | ?? |
| kernel/cobalt/rtdm/ <b>syscall.h</b>                              | ?? |
| kernel/cobalt/trace/cobalt-core.h                                 | ?? |
| kernel/cobalt/trace/cobalt-posix.h                                | ?? |
| kernel/cobalt/trace/ <b>cobalt-rtdm.h</b>                         | ?? |
| kernel/drivers/analogy/ <b>proc.h</b>                             | ?? |
| kernel/drivers/analogy/intel/ <b>8255.h</b>                       | ?? |
| kernel/drivers/analogy/national_instruments/ <b>mite.h</b>        | ?? |
| kernel/drivers/analogy/national_instruments/ <b>ni_mio.h</b>      | ?? |
| kernel/drivers/analogy/national_instruments/ <b>ni_stc.h</b>      | ?? |
| kernel/drivers/analogy/national_instruments/ <b>ni_tio.h</b>      | ?? |
| kernel/drivers/can/ <b>rtcan_dev.h</b>                            | ?? |
| kernel/drivers/can/ <b>rtcan_internal.h</b>                       | ?? |
| kernel/drivers/can/ <b>rtcan list.h</b>                           | ?? |

5.1 File List

| kernel/drivers/can/rtcan_raw.h                                     |
|--|
| kernel/drivers/can/rtcan_socket.h                                  |
| kernel/drivers/can/rtcan_version.h                                 |
| kernel/drivers/can/mscan/rtcan_mscan.h                             |
| kernel/drivers/can/mscan/rtcan_mscan_regs.h                        |
| kernel/drivers/can/sja1000/ <b>rtcan_sja1000.h</b>                 |
| kernel/drivers/can/sja1000/rtcan_sja1000_regs.h                    |
| kernel/drivers/ipc/internal.h                                      |
| kernel/drivers/serial/16550A_io.h                                  |
| kernel/drivers/serial/16550A_pci.h??                               |
| kernel/drivers/serial/16550A_pnp.h                                 |
| lib/alchemy/alarm.h  |
| lib/alchemy/buffer.h   |
| lib/alchemy/cond.h   |
| lib/alchemy/event.h  |
| lib/alchemy/heap.h   |
| lib/alchemy/init.h   |
| lib/alchemy/internal.h   |
| lib/alchemy/mutex.h  |
| lib/alchemy/pipe.h   |
| lib/alchemy/queue.h??  |
| lib/alchemy/reference.h  |
| lib/alchemy/sem.h  |
| lib/alchemy/task.h   |
| lib/alchemy/timer.h  |
| lib/analogy/async.c  |
| Analogy for Linux, command, transfer, etc                          |
| lib/analogy/descriptor.c   |
| Analogy for Linux, descriptor related features                     |
| lib/analogy/info.c   |
| Analogy for Linux, device, subdevice, etc                          |
| lib/analogy/internal.h   |
| Analogy for Linux, internal declarations                           |
| lib/analogy/range.c  |
| Analogy for Linux, range related features                          |
| lib/analogy/root_leaf.h  |
| Analogy for Linux, root / leaf system                              |
| lib/analogy/sync.c Analogy for Linux, instruction related features |
| lib/analogy/sys.c  |
| Analogy for Linux, descriptor related features                     |
| lib/cobalt/current.h   |
| lib/cobalt/init.h  |
| lib/cobalt/internal.h  |
| lib/cobalt/sem heap.h  |
| lib/cobalt/arch/arm/include/asm/xenomai/ <b>features.h</b>         |
| lib/cobalt/arch/arm/include/asm/xenomai/syscall.h                  |
| lib/cobalt/arch/arm/include/asm/xenomai/ <b>tsc.h</b>              |
| lib/cobalt/arch/blackfin/include/asm/xenomai/ <b>features.h</b>    |
| lib/cobalt/arch/blackfin/include/asm/xenomai/syscall.h             |
| lib/cobalt/arch/blackfin/include/asm/xenomai/ <b>tsc.h</b>         |
| lib/cobalt/arch/nios2/include/asm/xenomai/ <b>features.h</b>       |
| lib/cobalt/arch/nios2/include/asm/xenomai/ <b>syscall.h</b>        |
| lib/cobalt/arch/nios2/include/asm/xenomai/ <b>tsc.h</b>            |
| lib/cobalt/arch/powerpc/include/asm/xenomai/ <b>features.h</b>     |
| lib/cobalt/arch/powerpc/include/asm/xenomai/syscall.h              |
| lib/cobalt/arch/powerpc/include/asm/xenomai/tsc.h                  |
| lib/cobalt/arch/sh/include/asm/xenomai/features.h                  |
|  |

16 File Index

| ib/cobalt/arch/sh/include/asm/xenomai/ <b>syscall.h</b>   | ?? |
|---|----|
| ib/cobalt/arch/sh/include/asm/xenomai/ <b>tsc.h</b>       | ?? |
| ib/cobalt/arch/x86/include/asm/xenomai/ <b>features.h</b> | ?? |
| ib/cobalt/arch/x86/include/asm/xenomai/ <b>syscall.h</b>  | ?? |
| ib/cobalt/arch/x86/include/asm/xenomai/ <b>tsc.h</b>      | ?? |
|   | ?? |
|   | ?? |
|   | ?? |
|   | ?? |
|   | ?? |
|   | ?? |
|   | ?? |
| ib/psos/ <b>rn.h</b>                                      | ?? |
| ib/psos/ <b>sem.h</b>                                     | ?? |
| ib/psos/ <b>task.h</b>                                    | ?? |
|   | ?? |
|   | ?? |
| ib/trank/ <b>internal.h</b>                               | ?? |
| ib/vxworks/ <b>init.h</b>                                 | ?? |
| ib/vxworks/memPartLib.h                                   | ?? |
| ib/vxworks/ <b>msgQLib.h</b>                              | ?? |
| ib/vxworks/ <b>reference.h</b>                            | ?? |
|   | ?? |
| ib/vxworks/ <b>semLib.h</b>                               | ?? |
|   | ?? |
| ib/vxworks/ <b>tickLib.h</b>                              | ?? |
| ib / navorko /wall ib b                                   | 2  |

## Chapter 6

## Module Documentation

## 6.1 Channels and ranges

Channels.

Collaboration diagram for Channels and ranges:



#### **Data Structures**

- struct a4l\_channel
  - Structure describing some channel's characteristics.
- struct a4l\_channels\_desc
  - Structure describing a channels set.
- struct a4l\_range
  - Structure describing a (unique) range.

#### Macros

- #define A4L\_CHAN\_GLOBAL 0x10
  - Internal use flag (must not be used by driver developer)
- #define A4L\_RNG\_GLOBAL 0x8
  - Internal use flag (must not be used by driver developer)
- #define RANGE(x, y)
  - Macro to declare a (unique) range with no unit defined.
- #define RANGE\_V(x, y)
  - Macro to declare a (unique) range in Volt.
- #define RANGE\_mA(x, y)
  - Macro to declare a (unique) range in milliAmpere.

• #define RANGE\_ext(x, y)

Macro to declare a (unique) range in some external reference.

• #define A4L RNG GLOBAL RNGDESC 0

Constant to define a ranges descriptor as global (inter-channel)

#define A4L RNG PERCHAN RNGDESC 1

Constant to define a ranges descriptor as specific for a channel.

#define RNG GLOBAL(x)

Macro to declare a ranges global descriptor in one line.

#### Channel reference

Flags to define the channel's reference

#define A4L\_CHAN\_AREF\_GROUND 0x1
 Ground reference.

• #define A4L CHAN AREF COMMON 0x2

Common reference.

#define A4L CHAN AREF DIFF 0x4

Differential reference.

#define A4L\_CHAN\_AREF\_OTHER 0x8

Misc reference.

#### Channels declaration mode

Constant to define whether the channels in a descriptor are identical

#define A4L\_CHAN\_GLOBAL\_CHANDESC 0

Global declaration, the set contains channels with similar characteristics.

#define A4L\_CHAN\_PERCHAN\_CHANDESC 1

Per channel declaration, the decriptor gathers differents channels.

#### 6.1.1 Detailed Description

Channels. According to the Analogy nomenclature, the channel is the elementary acquisition entity. One channel is supposed to acquire one data at a time. A channel can be:

- an analog input or an analog ouput;
- a digital input or a digital ouput;

Channels are defined by their type and by some other characteristics like:

- their resolutions for analog channels (which usually ranges from 8 to 32 bits);
- their references;

Such parameters must be declared for each channel composing a subdevice. The structure a4l\_channel (struct a4l\_channel) is used to define one channel.

Another structure named a4l\_channels\_desc (struct a4l\_channels\_desc) gathers all channels for a specific subdevice. This latter structure also stores :

• the channels count;

 the channels declaration mode (A4L\_CHAN\_GLOBAL\_CHANDESC or A4L\_CHAN\_PERCHAN\_-CHANDESC): if all the channels composing a subdevice are identical, there is no need to declare the parameters for each channel; the global declaration mode eases the structure composition.

Usually the channels descriptor looks like this:

#### Ranges

So as to perform conversion from logical values acquired by the device to physical units, some range structure(s) must be declared on the driver side.

Such structures contain:

- the physical unit type (Volt, Ampere, none);
- the minimal and maximal values;

These range structures must be associated with the channels at subdevice registration time as a channel can work with many ranges. At configuration time (thanks to an Analogy command), one range will be selected for each enabled channel.

Consequently, for each channel, the developer must declare all the possible ranges in a structure called struct a4l\_rngtab. Here is an example:

```
struct a41_rngtab example_tab = {
   length: 2,
   rngs: {
        RANGE_V(-5,5),
        RANGE_V(-10,10),
   },
};
```

For each subdevice, a specific structure is designed to gather all the ranges tabs of all the channels. In this structure, called struct a4l rngdesc, three fields must be filled:

- the declaration mode (A4L\_RNG\_GLOBAL\_RNGDESC or A4L\_RNG\_PERCHAN\_RNGDESC);
- the number of ranges tab;
- the tab of ranges tabs pointers;

Most of the time, the channels which belong to the same subdevice use the same set of ranges. So, there is no need to declare the same ranges for each channel. A macro is defined to prevent redundant declarations: RNG GLOBAL().

Here is an example:

```
struct a41_rngdesc example_rng = RNG_GLOBAL(example_tab);
```

20 Module Documentation

## 6.2 Big dual kernel lock

Collaboration diagram for Big dual kernel lock:



#### Macros

#define cobalt atomic enter(context)

Enter atomic section (dual kernel only)

#define cobalt\_atomic\_leave(context)

Leave atomic section (dual kernel only)

#define RTDM\_EXECUTE\_ATOMICALLY(code\_block)

Execute code block atomically (DEPRECATED)

#### 6.2.1 Detailed Description

#### 6.2.2 Macro Definition Documentation

6.2.2.1 #define cobalt atomic enter( context )

#### Value:

Enter atomic section (dual kernel only)

This call opens a fully atomic section, serializing execution with respect to all interrupt handlers (including for real-time IRQs) and Xenomai threads running on all CPUs.

#### **Parameters**

| context | name of local variable to store the context in. This variable updated by the real-time |
|---------|--|
|         | core will hold the information required to leave the atomic section properly.          |

#### Note

Atomic sections may be nested. The caller is allowed to sleep on a blocking Xenomai service from primary mode within an atomic section delimited by cobalt\_atomic\_enter/cobalt\_atomic\_leave calls. On the contrary, sleeping on a regular Linux kernel service while holding such lock is NOT valid.

Since the strongest lock is acquired by this service, it can be used to synchronize real-time and non-real-time contexts.

#### Warning

This service is not portable to the Mercury core, and should be restricted to Cobalt-specific use cases, mainly for the purpose of porting existing dual-kernel drivers which still depend on the obsolete RTDM\_EXECUTE\_ATOMICALLY() construct.

#### 6.2.2.2 #define cobalt\_atomic\_leave( context )

#### Value:

Leave atomic section (dual kernel only)

This call closes an atomic section previously opened by a call to cobalt\_atomic\_enter(), restoring the preemption and interrupt state which prevailed prior to entering the exited section.

#### **Parameters**

```
context | name of local variable which stored the context.
```

#### Warning

This service is not portable to the Mercury core, and should be restricted to Cobalt-specific use cases.

#### 6.2.2.3 #define RTDM\_EXECUTE\_ATOMICALLY( code\_block )

#### Value:

Execute code block atomically (DEPRECATED)

Generally, it is illegal to suspend the current task by calling <a href="rtdm\_task\_sleep">rtdm\_event\_wait</a>(), etc. while holding a spinlock. In contrast, this macro allows to combine several operations including a potentially rescheduling call to an atomic code block with respect to other <a href="rtdm\_EXECUTE\_ATOMICALLY">RTDM\_EXECUTE\_ATOMICALLY</a>() blocks. The macro is a light-weight alternative for protecting code blocks via mutexes, and it can even be used to synchronise real-time and non-real-time contexts.

#### **Parameters**

```
code_block | Commands to be executed atomically
```

#### Note

It is not allowed to leave the code block explicitly by using break, return, goto, etc. This would leave the global lock held during the code block execution in an inconsistent state. Moreover, do not embed complex operations into the code bock. Consider that they will be executed under preemption lock with interrupts switched-off. Also note that invocation of rescheduling calls may break the atomicity until the task gains the CPU again.

Tags

unrestricted


**Deprecated** This construct will be phased out in Xenomai 3.0. Please use rtdm\_waitqueue services instead.

See Also

cobalt\_atomic\_enter().

### 6.3 Spinlock with preemption deactivation

Collaboration diagram for Spinlock with preemption deactivation:

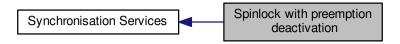

#### Macros

- #define RTDM\_LOCK\_UNLOCKED(\_\_name) IPIPE\_SPIN\_LOCK\_UNLOCKED Static lock initialisation.
- #define rtdm\_lock\_irqsave(context) splhigh(context)

Disable preemption locally.

#define rtdm\_lock\_irqrestore(context) splexit(context)

Restore preemption state.

### Typedefs

- typedef ipipe\_spinlock\_t rtdm\_lock\_t Lock variable.
- typedef unsigned long rtdm\_lockctx\_t

Variable to save the context while holding a lock.

#### **Functions**

- static void rtdm\_lock\_init (rtdm\_lock\_t \*lock)

  Dynamic lock initialisation.
- static void rtdm\_lock\_get (rtdm\_lock\_t \*lock)

Acquire lock from non-preemptible contexts.

- static void rtdm lock put (rtdm lock t \*lock)
  - Release lock without preemption restoration.
- static void rtdm\_lock\_put\_irqrestore (rtdm\_lock\_t \*lock, rtdm\_lockctx\_t context)

Release lock and restore preemption state.

- 6.3.1 Detailed Description
- 6.3.2 Macro Definition Documentation
- 6.3.2.1 #define rtdm\_lock\_irqrestore( context ) **splexit**(context)

Restore preemption state.

**Parameters** 

context | name of local variable which stored the context

Tags

unrestricted

6.3.2.2 #define rtdm\_lock\_irqsave( context ) **splhigh**(context)

Disable preemption locally.

**Parameters** 

context | name of local variable to store the context in

Tags

unrestricted

6.3.3 Function Documentation

6.3.3.1 static void rtdm\_lock\_get ( rtdm\_lock\_t \* lock ) [inline], [static]

Acquire lock from non-preemptible contexts.

**Parameters** 

lock | Address of lock variable

Tags

unrestricted

References spltest.

6.3.3.2 static void rtdm\_lock\_init ( rtdm\_lock\_t \* lock ) [inline], [static]

Dynamic lock initialisation.

**Parameters** 

lock | Address of lock variable

Tags

task-unrestricted

6.3.3.3 static void rtdm\_lock\_put ( rtdm\_lock\_t \* lock ) [inline], [static]

Release lock without preemption restoration.

#### Parameters

| lock | Address of lock variable |
|------|--------------------------|

#### Tags

unrestricted, might-switch

6.3.3.4 static void rtdm\_lock\_put\_irqrestore (  $rtdm_lock_t * lock, rtdm_lockctx_t context$  ) [inline], [static]

Release lock and restore preemption state.

#### **Parameters**

| lock    | Address of lock variable                        |  |
|---------|---|--|
| context | name of local variable which stored the context |  |

#### Tags

#### unrestricted

Referenced by a4l\_request\_irq(), and rtdm\_ratelimit().

26 Module Documentation

### 6.4 Thread state flags

Bits reporting permanent or transient states of threads.

Collaboration diagram for Thread state flags:



#### Macros

#define XNSUSP 0x00000001

Suspended.

• #define XNPEND 0x00000002

Sleep-wait for a resource.

• #define XNDELAY 0x00000004

Delayed.

#define XNREADY 0x00000008

Linked to the ready queue.

#define XNDORMANT 0x00000010

Not started yet.

• #define XNZOMBIE 0x00000020

Zombie thread in deletion process.

• #define XNMAPPED 0x00000040

Thread is mapped to a linux task.

• #define XNRELAX 0x00000080

Relaxed shadow thread (blocking bit)

#define XNMIGRATE 0x00000100

Thread is currently migrating to another CPU.

#define XNHELD 0x00000200

Thread is held to process emergency.

• #define XNBOOST 0x00000400

Undergoes a PIP boost.

#define XNDEBUG 0x00000800

Hit a debugger breakpoint.

• #define XNLOCK 0x00001000

Holds the scheduler lock (i.e.

#define XNRRB 0x00002000

Undergoes a round-robin scheduling.

• #define XNWARN 0x00004000

Issue SIGDEBUG on error detection.

#define XNFPU 0x00008000

Thread uses FPU.

• #define XNROOT 0x00010000

Root thread (that is, Linux/IDLE)

#define XNWEAK 0x00020000

Non real-time shadow (from the WEAK class)

#define XNUSER 0x00040000

Shadow thread running in userland.

• #define XNJOINED 0x00080000

Another thread waits for joining this thread.

• #define XNTRAPLB 0x00100000

Trap lock break (i.e.

#### 6.4.1 Detailed Description

Bits reporting permanent or transient states of threads.

#### 6.4.2 Macro Definition Documentation

#### 6.4.2.1 #define XNHELD 0x00000200

Thread is held to process emergency.

Referenced by xnthread\_resume(), and xnthread\_suspend().

#### 6.4.2.2 #define XNLOCK 0x00001000

Holds the scheduler lock (i.e.

not preemptible)

Referenced by xnthread\_set\_mode(), and xnthread\_suspend().

#### 6.4.2.3 #define XNMIGRATE 0x00000100

Thread is currently migrating to another CPU.

#### 6.4.2.4 #define XNPEND 0x00000002

Sleep-wait for a resource.

Referenced by xnsynch\_acquire(), xnsynch\_flush(), xnsynch\_sleep\_on(), xnsynch\_wakeup\_one\_sleeper(), xnsynch\_wakeup\_this\_sleeper(), xnthread\_resume(), and xnthread\_unblock().

#### 6.4.2.5 #define XNREADY 0x00000008

Linked to the ready queue.

Referenced by xnthread resume(), and xnthread suspend().

#### 6.4.2.6 #define XNSUSP 0x00000001

#### Suspended.

Referenced by xnthread\_init(), xnthread\_start(), and xnthread\_suspend().

28 Module Documentation

6.4.2.7 #define XNTRAPLB 0x00100000

Trap lock break (i.e. may not sleep with XNLOCK)
Referenced by xnthread\_suspend().

### 6.5 Thread information flags

Bits reporting events notified to threads.

Collaboration diagram for Thread information flags:



#### Macros

#define XNTIMEO 0x00000001

Woken up due to a timeout condition.

• #define XNRMID 0x00000002

Pending on a removed resource.

#define XNBREAK 0x00000004

Forcibly awaken from a wait state.

#define XNKICKED 0x00000008

Forced out of primary mode.

• #define XNWAKEN 0x00000010

Thread waken up upon resource availability.

• #define XNROBBED 0x00000020

Robbed from resource ownership.

• #define XNCANCELD 0x00000040

Cancellation request is pending.

• #define XNMOVED 0x00000080

CPU migration in primary mode occurred.

• #define XNPIALERT 0x00001000

Priority inversion alert (SIGDEBUG sent)

• #define XNLBALERT 0x00002000

Scheduler lock break alert (SIGDEBUG sent)

#### 6.5.1 Detailed Description

Bits reporting events notified to threads.

30 Module Documentation

#### 6.6 CAN Devices

This is the common interface a RTDM-compliant CAN device has to provide.

Collaboration diagram for CAN Devices:



#### **Data Structures**

struct can\_bittime\_std

Standard bit-time parameters according to Bosch.

struct can\_bittime\_btr

Hardware-specific BTR bit-times.

• struct can\_bittime

Custom CAN bit-time definition.

struct can\_filter

Filter for reception of CAN messages.

struct sockaddr\_can

Socket address structure for the CAN address family.

struct can\_frame

Raw CAN frame.

#### Macros

• #define AF\_CAN 29

CAN address family.

#define PF\_CAN AF\_CAN

CAN protocol family.

• #define SOL\_CAN\_RAW 103

CAN socket levels.

#### **Typedefs**

typedef uint32\_t can\_id\_t

Type of CAN id (see CAN\_xxx\_MASK and CAN\_xxx\_FLAG)

typedef can\_id\_t can\_err\_mask\_t

Type of CAN error mask.

• typedef uint32\_t can\_baudrate\_t

Baudrate definition in bits per second.

• typedef enum CAN BITTIME TYPE can bittime type t

See CAN BITTIME TYPE.

typedef enum CAN\_MODE can\_mode\_t

6.6 CAN Devices 31

See CAN\_MODE.

• typedef int can\_ctrlmode\_t

See CAN CTRLMODE.

typedef enum CAN\_STATE can\_state\_t

See CAN STATE.

typedef struct can\_filter can\_filter\_t

Filter for reception of CAN messages.

• typedef struct can frame can frame t

Raw CAN frame.

#### **Enumerations**

• enum CAN\_BITTIME\_TYPE { CAN\_BITTIME\_STD, CAN\_BITTIME\_BTR } Supported CAN bit-time types.

#### **CAN ID masks**

Bit masks for masking CAN IDs

• #define CAN\_EFF\_MASK 0x1FFFFFFF

Bit mask for extended CAN IDs.

• #define CAN SFF MASK 0x000007FF

Bit mask for standard CAN IDs.

#### CAN ID flags

Flags within a CAN ID indicating special CAN frame attributes

• #define CAN\_EFF\_FLAG 0x80000000

Extended frame.

#define CAN\_RTR\_FLAG 0x40000000

Remote transmission frame.

#define CAN\_ERR\_FLAG 0x20000000

Error frame (see Errors), not valid in struct can\_filter.

#define CAN\_INV\_FILTER CAN\_ERR\_FLAG

Invert CAN filter definition, only valid in struct can\_filter.

#### Particular CAN protocols

Possible protocols for the PF CAN protocol family

Currently only the RAW protocol is supported.

#define CAN\_RAW 1

Raw protocol of PF\_CAN, applicable to socket type SOCK\_RAW.

#### CAN operation modes

Modes into which CAN controllers can be set

enum CAN\_MODE { CAN\_MODE\_STOP = 0, CAN\_MODE\_START, CAN\_MODE\_SLEEP }

#### CAN controller modes

Special CAN controllers modes, which can be or'ed together.

Note

These modes are hardware-dependent. Please consult the hardware manual of the CAN controller for more detailed information.

- #define CAN\_CTRLMODE\_LISTENONLY 0x1
- #define CAN\_CTRLMODE\_LOOPBACK 0x2
- #define CAN CTRLMODE 3 SAMPLES 0x4

#### CAN controller states

States a CAN controller can be in.

```
    enum CAN_STATE {
        CAN_STATE_ERROR_ACTIVE = 0, CAN_STATE_ACTIVE = 0, CAN_STATE_ERROR_WARNING = 1, CAN_STATE_BUS_WARNING = 1,
        CAN_STATE_ERROR_PASSIVE = 2, CAN_STATE_BUS_PASSIVE = 2, CAN_STATE_BUS_OFF, CAN_STATE_SCANNING_BAUDRATE,
        CAN_STATE_STOPPED, CAN_STATE_SLEEPING }
```

#### Timestamp switches

Arguments to pass to RTCAN\_RTIOC\_TAKE\_TIMESTAMP

- #define RTCAN\_TAKE\_NO\_TIMESTAMPS 0
  - Switch off taking timestamps.
- #define RTCAN\_TAKE\_TIMESTAMPS 1
   Do take timestamps.

#### RAW socket options

Setting and getting CAN RAW socket options.

- #define CAN\_RAW\_FILTER 0x1
  - CAN filter definition.
- #define CAN RAW ERR FILTER 0x2
  - CAN error mask.
- #define CAN RAW LOOPBACK 0x3
  - CAN TX loopback.
- #define CAN RAW RECV OWN MSGS 0x4
  - CAN receive own messages.

#### **IOCTLs**

#### CAN device IOCTLs

#define SIOCGIFINDEX defined\_by\_kernel\_header\_file

6.6 CAN Devices 33

Get CAN interface index by name.

#define SIOCSCANBAUDRATE \_IOW(RTIOC\_TYPE\_CAN, 0x01, struct ifreq)

- #define SIOCGCANBAUDRATE \_IOWR(RTIOC\_TYPE\_CAN, 0x02, struct ifreq)
   Get baud rate.
- #define SIOCSCANCUSTOMBITTIME \_IOW(RTIOC\_TYPE\_CAN, 0x03, struct ifreq) Set custom bit time parameter.
- #define SIOCGCANCUSTOMBITTIME \_IOWR(RTIOC\_TYPE\_CAN, 0x04, struct ifreq) Get custom bit-time parameters.
- #define SIOCSCANMODE \_IOW(RTIOC\_TYPE\_CAN, 0x05, struct ifreq)

  Set operation mode of CAN controller.
- #define SIOCGCANSTATE \_IOWR(RTIOC\_TYPE\_CAN, 0x06, struct ifreq)

  Get current state of CAN controller.
- #define SIOCSCANCTRLMODE \_IOW(RTIOC\_TYPE\_CAN, 0x07, struct ifreq)
   Set special controller modes.
- #define SIOCGCANCTRLMODE \_IOWR(RTIOC\_TYPE\_CAN, 0x08, struct ifreq)

  Get special controller modes.
- #define RTCAN\_RTIOC\_TAKE\_TIMESTAMP\_IOW(RTIOC\_TYPE\_CAN, 0x09, int)

  Enable or disable storing a high precision timestamp upon reception of a CAN frame.
- #define RTCAN\_RTIOC\_RCV\_TIMEOUT\_IOW(RTIOC\_TYPE\_CAN, 0x0A, nanosecs\_rel\_t)
   Specify a reception timeout for a socket.
- #define RTCAN\_RTIOC\_SND\_TIMEOUT\_IOW(RTIOC\_TYPE\_CAN, 0x0B, nanosecs\_rel\_t) Specify a transmission timeout for a socket.

#### Error mask

Error class (mask) in can\_id field of struct can frame to be used with CAN RAW ERR FILTER.

**Note:** Error reporting is hardware dependent and most CAN controllers report less detailed error conditions than the SJA1000.

**Note:** In case of a bus-off error condition (CAN\_ERR\_BUSOFF), the CAN controller is **not** restarted automatically. It is the application's responsibility to react appropriately, e.g. calling CAN\_MODE\_START.

**Note:** Bus error interrupts (CAN\_ERR\_BUSERROR) are enabled when an application is calling a Recv function on a socket listening on bus errors (using CAN\_RAW\_ERR\_FILTER). After one bus error has occured, the interrupt will be disabled to allow the application time for error processing and to efficiently avoid bus error interrupt flooding.

- #define CAN\_ERR\_TX\_TIMEOUT 0x00000001U
  - TX timeout (netdevice driver)
- #define CAN\_ERR\_LOSTARB 0x00000002U

Lost arbitration (see data[0])

- #define CAN ERR CRTL 0x00000004U
  - Controller problems (see data[1])
- #define CAN\_ERR\_PROT 0x00000008U
  - Protocol violations (see data[2], data[3])
- #define CAN ERR TRX 0x00000010U
  - Transceiver status (see data[4])
- #define CAN\_ERR\_ACK 0x00000020U
  - Received no ACK on transmission.
- #define CAN\_ERR\_BUSOFF 0x00000040U

Bus off.

• #define CAN\_ERR\_BUSERROR 0x00000080U

Bus error (may flood!)

#define CAN\_ERR\_RESTARTED 0x00000100U
 Controller restarted.

#define CAN\_ERR\_MASK 0x1FFFFFFU
 Omit EFF, RTR, ERR flags.

#### Arbitration lost error

Error in the data[0] field of struct can\_frame.

 #define CAN\_ERR\_LOSTARB\_UNSPEC 0x00 unspecified

### Controller problems

Error in the data[1] field of struct can\_frame.

- #define CAN\_ERR\_CRTL\_UNSPEC 0x00 unspecified
- #define CAN\_ERR\_CRTL\_RX\_OVERFLOW 0x01 RX buffer overflow.
- #define CAN\_ERR\_CRTL\_TX\_OVERFLOW 0x02
   TX buffer overflow.
- #define CAN\_ERR\_CRTL\_RX\_WARNING 0x04 reached warning level for RX errors
- #define CAN\_ERR\_CRTL\_TX\_WARNING 0x08
   reached warning level for TX errors
- #define CAN\_ERR\_CRTL\_RX\_PASSIVE 0x10
   reached passive level for RX errors
- #define CAN\_ERR\_CRTL\_TX\_PASSIVE 0x20
   reached passive level for TX errors

#### Protocol error type

Error in the data[2] field of struct can\_frame.

- #define CAN\_ERR\_PROT\_UNSPEC 0x00 unspecified
- #define CAN\_ERR\_PROT\_BIT 0x01 single bit error
- #define CAN\_ERR\_PROT\_FORM 0x02 frame format error
- #define CAN\_ERR\_PROT\_STUFF 0x04
   bit stuffing error
- #define CAN\_ERR\_PROT\_BIT0 0x08
   unable to send dominant bit
- #define CAN\_ERR\_PROT\_BIT1 0x10

6.6 CAN Devices 35

unable to send recessive bit

#define CAN\_ERR\_PROT\_OVERLOAD 0x20

bus overload

#define CAN\_ERR\_PROT\_ACTIVE 0x40

active error announcement

#define CAN\_ERR\_PROT\_TX 0x80

error occured on transmission

#### Protocol error location

Error in the data[4] field of struct can\_frame.

- #define CAN\_ERR\_PROT\_LOC\_UNSPEC 0x00 unspecified
- #define CAN\_ERR\_PROT\_LOC\_SOF 0x03
   start of frame
- #define CAN\_ERR\_PROT\_LOC\_ID28\_21 0x02
   ID bits 28 21 (SFF: 10 3)
- #define CAN\_ERR\_PROT\_LOC\_ID20\_18 0x06
   ID bits 20 18 (SFF: 2 0 )
- #define CAN\_ERR\_PROT\_LOC\_SRTR 0x04 substitute RTR (SFF: RTR)
- #define CAN\_ERR\_PROT\_LOC\_IDE 0x05
   identifier extension
- #define CAN\_ERR\_PROT\_LOC\_ID17\_13 0x07
   ID bits 17-13.
- #define CAN\_ERR\_PROT\_LOC\_ID12\_05 0x0F
   ID bits 12-5.
- #define CAN\_ERR\_PROT\_LOC\_ID04\_00 0x0E
   ID bits 4-0.
- #define CAN\_ERR\_PROT\_LOC\_RTR 0x0C RTR.
- #define CAN\_ERR\_PROT\_LOC\_RES1 0x0D
   reserved bit 1
- #define CAN\_ERR\_PROT\_LOC\_RES0 0x09
   reserved bit 0
- #define CAN\_ERR\_PROT\_LOC\_DLC 0x0B
   data length code
- #define CAN\_ERR\_PROT\_LOC\_DATA 0x0A data section
- #define CAN\_ERR\_PROT\_LOC\_CRC\_SEQ 0x08
   CRC sequence.
- #define CAN\_ERR\_PROT\_LOC\_CRC\_DEL 0x18 CRC delimiter.
- #define CAN\_ERR\_PROT\_LOC\_ACK 0x19
   ACK slot.
- #define CAN\_ERR\_PROT\_LOC\_ACK\_DEL 0x1B ACK delimiter.
- #define CAN\_ERR\_PROT\_LOC\_EOF 0x1A
   end of frame

 #define CAN\_ERR\_PROT\_LOC\_INTERM 0x12 intermission

• #define CAN ERR TRX UNSPEC 0x00

0000 0000

#define CAN ERR TRX CANH NO WIRE 0x04

0000 0100

#define CAN\_ERR\_TRX\_CANH\_SHORT\_TO\_BAT 0x05
 0000 0101

 #define CAN\_ERR\_TRX\_CANH\_SHORT\_TO\_VCC 0x06 0000 0110

 #define CAN\_ERR\_TRX\_CANH\_SHORT\_TO\_GND 0x07 0000 0111

 #define CAN\_ERR\_TRX\_CANL\_NO\_WIRE 0x40 0100 0000

#define CAN\_ERR\_TRX\_CANL\_SHORT\_TO\_BAT 0x50

0101 0000

#define CAN\_ERR\_TRX\_CANL\_SHORT\_TO\_VCC 0x60 0110 0000

#define CAN\_ERR\_TRX\_CANL\_SHORT\_TO\_GND 0x70
 0111 0000

 #define CAN\_ERR\_TRX\_CANL\_SHORT\_TO\_CANH 0x80 1000 0000

#### 6.6.1 Detailed Description

This is the common interface a RTDM-compliant CAN device has to provide. Feel free to report bugs and comments on this profile to the "Socketcan" mailing list (Socketcan-core@lists.berlios.de) or directly to the authors (wg@grandegger.com or Sebastian.Smolorz@stud.uni-hannover.de).

#### **Profile Revision: 2**

**Device Characteristics** 

Device Flags: RTDM\_PROTOCOL\_DEVICE

Protocol Family: PF\_CAN Socket Type: SOCK\_RAW

Device Class: RTDM\_CLASS\_CAN

Supported Operations

#### **Socket**

Tags

#### secondary-only

Specific return values:

-EPROTONOSUPPORT (Protocol is not supported by the driver. See CAN protocols for possible protocols.)

#### Close

Blocking calls to any of the Send or Receive functions will be unblocked when the socket is closed and return with an error.

Tags

#### secondary-only

Specific return values: none

**IOCTL** 

6.6 CAN Devices 37

Tags

task-unrestricted. see below Specific return values: see below

#### Bind

Binds a socket to one or all CAN devices (see struct sockaddr\_can). If a filter list has been defined with setsockopt (see Sockopts), it will be used upon reception of CAN frames to decide whether the bound socket will receive a frame. If no filter has been defined, the socket will receive all CAN frames on the specified interface(s).

Binding to special interface index 0 will make the socket receive CAN frames from all CAN interfaces. Binding to an interface index is also relevant for the Send functions because they will transmit a message over the interface the socket is bound to when no socket address is given to them.

Tags

#### secondary-only

Specific return values:

- -EFAULT (It was not possible to access user space memory area at the specified address.)
- -ENOMEM (Not enough memory to fulfill the operation)
- -EINVAL (Invalid address family, or invalid length of address structure)
- -ENODEV (Invalid CAN interface index)
- -ENOSPC (No enough space for filter list)
- -EBADF (Socket is about to be closed)
- -EAGAIN (Too many receivers. Old binding (if any) is still active. Close some sockets and try again.)

#### Setsockopt, Getsockopt

These functions allow to set and get various socket options. Currently, only CAN raw sockets are supported.

Supported Levels and Options:

- Level SOL\_CAN\_RAW : CAN RAW protocol (see CAN\_RAW)
  - Option CAN RAW FILTER: CAN filter list
  - Option CAN\_RAW\_ERR\_FILTER : CAN error mask
  - Option CAN RAW LOOPBACK: CAN TX loopback to local sockets

Tags

task-unrestricted Specific return values: see links to options above.

#### Recv. Recvfrom, Recvmsq

These functions receive CAN messages from a socket. Only one message per call can be received, so only one buffer with the correct length must be passed. For SOCK\_RAW, this is the size of struct can frame.

Unlike a call to one of the Send functions, a Recv function will not return with an error if an interface is down (due to bus-off or setting of stop mode) or in sleep mode. Moreover, in such a case there may still be some CAN messages in the socket buffer which could be read out successfully.

It is possible to receive a high precision timestamp with every CAN message. The condition is a former instruction to the socket via RTCAN\_RTIOC\_TAKE\_TIMESTAMP. The timestamp will be copied to the msg\_control buffer of struct msghdr if it points to a valid memory location with size of nanosecs abs t. If this is a NULL pointer the timestamp will be discarded silently.

**Note:** A msg\_controllen of 0 upon completion of the function call indicates that no timestamp is available for that message.

Supported Flags [in]:

- MSG\_DONTWAIT (By setting this flag the operation will only succeed if it would not block, i.e.
  if there is a message in the socket buffer. This flag takes precedence over a timeout specified
  by RTCAN\_RTIOC\_RCV\_TIMEOUT.)
- MSG\_PEEK (Receive a message but leave it in the socket buffer. The next receive operation will get that message again.)

Supported Flags [out]: none

Tags

#### mode-unrestricted

Specific return values:

- Non-negative value (Indicating the successful reception of a CAN message. For SOCK\_RAW, this is the size of struct can frame regardless of the actual size of the payload.)
- -EFAULT (It was not possible to access user space memory area at one of the specified addresses.)
- -EINVAL (Unsupported flag detected, or invalid length of socket address buffer, or invalid length of message control buffer)
- -EMSGSIZE (Zero or more than one iovec buffer passed, or buffer too small)
- -EAGAIN (No data available in non-blocking mode)
- -EBADF (Socket was closed.)
- -EINTR (Operation was interrupted explicitly or by signal.)
- -ETIMEDOUT (Timeout)

#### Send, Sendto, Sendmsg

These functions send out CAN messages. Only one message per call can be transmitted, so only one buffer with the correct length must be passed. For SOCK\_RAW, this is the size of struct can\_frame. The following only applies to SOCK\_RAW: If a socket address of struct sockaddr\_can is given, only can\_ifindex is used. It is also possible to omit the socket address. Then the interface the socket is bound to will be used for sending messages.

If an interface goes down (due to bus-off or setting of stop mode) all senders that were blocked on this interface will be woken up.

Supported Flags:

 MSG\_DONTWAIT (By setting this flag the transmit operation will only succeed if it would not block. This flag takes precedence over a timeout specified by RTCAN\_RTIOC\_SND\_TIMEO-UT.)

Tags

#### mode-unrestricted

Specific return values:

- Non-negative value equal to given buffer size (Indicating the successful completion of the function call. See also note.)
- -EOPNOTSUPP (MSG\_OOB flag is not supported.)
- -EINVAL (Unsupported flag detected *or:* Invalid length of socket address *or:* Invalid address family *or:* Data length code of CAN frame not between 0 and 15 *or:* CAN standard frame has got an ID not between 0 and 2031)
- -EMSGSIZE (Zero or more than one buffer passed or invalid size of buffer)
- -EFAULT (It was not possible to access user space memory area at one of the specified addresses.)
- -ENXIO (Invalid CAN interface index 0 is not allowed here or socket not bound or rather bound to all interfaces.)
- -ENETDOWN (Controller is bus-off or in stopped state.)
- -ECOMM (Controller is sleeping)
- -EAGAIN (Cannot transmit without blocking but a non-blocking call was requested.)
- -EINTR (Operation was interrupted explicitly or by signal)
- -EBADF (Socket was closed.)
- -ETIMEDOUT (Timeout)

**Note:** A successful completion of the function call does not implicate a successful transmission of the message.

6.6 CAN Devices 39

#### 6.6.2 Macro Definition Documentation

6.6.2.1 #define CAN\_CTRLMODE\_3\_SAMPLES 0x4

Triple sampling mode

In this mode the CAN controller uses Triple sampling.

6.6.2.2 #define CAN CTRLMODE LISTENONLY 0x1

#### Listen-Only mode

In this mode the CAN controller would give no acknowledge to the CAN-bus, even if a message is received successfully and messages would not be transmitted. This mode might be useful for bus-monitoring, hot-plugging or throughput analysis.

#### Examples:

rtcanconfig.c.

6.6.2.3 #define CAN\_CTRLMODE\_LOOPBACK 0x2

#### Loopback mode

In this mode the CAN controller does an internal loop-back, a message is transmitted and simultaneously received. That mode can be used for self test operation.

#### Examples:

rtcanconfig.c.

6.6.2.4 #define CAN\_ERR\_LOSTARB\_UNSPEC 0x00

unspecified

else bit number in bitstream

6.6.2.5 #define CAN RAW ERR FILTER 0x2

#### CAN error mask.

A CAN error mask (see Errors) can be set with setsockopt. This mask is then used to decide if error frames are delivered to this socket in case of error condidtions. The error frames are marked with the CAN\_ERR\_FLAG of CAN\_xxx\_FLAG and must be handled by the application properly. A detailed description of the errors can be found in the can\_id and the data fields of struct can\_frame (see Errors for futher details).

#### **Parameters**

| in | level   | SOL_CAN_RAW                                   |
|----|---------|---|
| in | optname | CAN_RAW_ERR_FILTER                            |
| in | optval  | Pointer to error mask of type can_err_mask_t. |

| in | optlen | Size of error mask: sizeof(can_err_mask_t). |
|----|--------|---|

#### Tags

#### task-unrestricted

Specific return values:

- -EFAULT (It was not possible to access user space memory area at the specified address.)
- -EINVAL (Invalid length "optlen")

#### Examples:

rtcanrecv.c.

#### 6.6.2.6 #define CAN RAW FILTER 0x1

#### CAN filter definition.

A CAN raw filter list with elements of struct can\_filter can be installed with setsockopt. This list is used upon reception of CAN frames to decide whether the bound socket will receive a frame. An empty filter list can also be defined using optlen = 0, which is recommanded for write-only sockets.

If the socket was already bound with Bind, the old filter list gets replaced with the new one. Be aware that already received, but not read out CAN frames may stay in the socket buffer.

#### **Parameters**

| in | level   | SOL_CAN_RAW  |
|----|---------|--|
| in | optname | CAN_RAW_FILTER   |
| in | optval  | Pointer to array of struct can_filter.                   |
| in | optlen  | Size of filter list: count * sizeof( struct can_filter). |
|    |         |  |

#### Tags

#### task-unrestricted

Specific return values:

- -EFAULT (It was not possible to access user space memory area at the specified address.)
- -ENOMEM (Not enough memory to fulfill the operation)
- -EINVAL (Invalid length "optlen")
- -ENOSPC (No space to store filter list, check RT-Socket-CAN kernel parameters)

#### Examples:

can-rtt.c, rtcanrecv.c, and rtcansend.c.

#### 6.6.2.7 #define CAN\_RAW\_LOOPBACK 0x3

#### CAN TX loopback.

The TX loopback to other local sockets can be selected with this setsockopt.

#### Note

The TX loopback feature must be enabled in the kernel and then the loopback to other local TX sockets is enabled by default.

6.6 CAN Devices 41

#### **Parameters**

| in | level   | SOL_CAN_RAW               |
|----|---------|---------------------------|
| in | optname | CAN_RAW_LOOPBACK          |
| in | optval  | Pointer to integer value. |
| in | optlen  | Size of int: sizeof(int). |

#### Tags

#### task-unrestricted

Specific return values:

- -EFAULT (It was not possible to access user space memory area at the specified address.)
- -EINVAL (Invalid length "optlen")
- -EOPNOTSUPP (not supported, check RT-Socket-CAN kernel parameters).

### Examples:

rtcansend.c.

6.6.2.8 #define CAN\_RAW\_RECV\_OWN\_MSGS 0x4

CAN receive own messages.

Not supported by RT-Socket-CAN, but defined for compatibility with Socket-CAN.

6.6.2.9 #define RTCAN\_RTIOC\_RCV\_TIMEOUT\_IOW(RTIOC\_TYPE\_CAN, 0x0A, nanosecs\_rel\_t)

Specify a reception timeout for a socket.

Defines a timeout for all receive operations via a socket which will take effect when one of the receive functions is called without the MSG\_DONTWAIT flag set.

The default value for a newly created socket is an infinite timeout.

Note

The setting of the timeout value is not done atomically to avoid locks. Please set the value before receiving messages from the socket.

# Parameters

| in | arg | Pointer to nanosecs_rel_t variable. The value is interpreted as relative |
|----|-----|--|
|    |     | timeout in nanoseconds in case of a positive value. See Timeouts for     |
|    |     | special timeouts.  |

### Returns

0 on success, otherwise:

-EFAULT: It was not possible to access user space memory area at the specified address.

Tags

task-unrestricted

Examples:

rtcanrecv.c.

42 Module Documentation

6.6.2.10 #define RTCAN\_RTIOC\_SND\_TIMEOUT\_IOW(RTIOC\_TYPE\_CAN, 0x0B, nanosecs\_rel\_t)

Specify a transmission timeout for a socket.

Defines a timeout for all send operations via a socket which will take effect when one of the send functions is called without the MSG\_DONTWAIT flag set.

The default value for a newly created socket is an infinite timeout.

Note

The setting of the timeout value is not done atomically to avoid locks. Please set the value before sending messages to the socket.

#### **Parameters**

| in | arg | Pointer to nanosecs_rel_t variable. The value is interpreted as relative |
|----|-----|--|
|    |     | timeout in nanoseconds in case of a positive value. See Timeouts for     |
|    |     | special timeouts.  |

#### Returns

0 on success, otherwise:

-EFAULT: It was not possible to access user space memory area at the specified address.

Tags

task-unrestricted

Examples:

rtcansend.c.

6.6.2.11 #define RTCAN\_RTIOC\_TAKE\_TIMESTAMP\_IOW(RTIOC\_TYPE\_CAN, 0x09, int)

Enable or disable storing a high precision timestamp upon reception of a CAN frame.

A newly created socket takes no timestamps by default.

#### **Parameters**

| in | arg | int variable, see Timestamp switches |
|----|-----|--------------------------------------|
|----|-----|--------------------------------------|

# Returns

0 on success.

Tags

task-unrestricted

Note

Activating taking timestamps only has an effect on newly received CAN messages from the bus. Frames that already are in the socket buffer do not have timestamps if it was deactivated before. See Receive for more details.

# Examples:

rtcanrecv.c.

6.6 CAN Devices 43

6.6.2.12 #define SIOCGCANBAUDRATE \_IOWR(RTIOC\_TYPE\_CAN, 0x02, struct ifreq)

Get baud rate.

### **Parameters**

| in,out | arg | Pointer to interface request structure buffer (struct ifreq from     |
|--------|-----|--|
|        |     | linux/if.h). ifr_name must hold a valid CAN interface name, ifr_ifru |
|        |     | will be filled with an instance of can_baudrate_t.                   |

#### Returns

0 on success, otherwise:

- -EFAULT: It was not possible to access user space memory area at the specified address.
- -ENODEV: No device with specified name exists.
- -EINVAL: No baud rate was set yet.

#### Tags

#### task-unrestricted

6.6.2.13 #define SIOCGCANCTRLMODE \_IOWR(RTIOC\_TYPE\_CAN, 0x08, struct ifreq)

# Get special controller modes.

#### **Parameters**

| in | arg | Pointer to interface request structure buffer (struct ifreq from     |
|----|-----|--|
|    |     | linux/if.h). ifr_name must hold a valid CAN interface name, ifr_ifru |
|    |     | must be filled with an instance of can_ctrlmode_t.                   |

#### Returns

0 on success, otherwise:

- -EFAULT: It was not possible to access user space memory area at the specified address.
- -ENODEV: No device with specified name exists.
- -EINVAL: No baud rate was set yet.

# Tags

task-unrestricted, might-switch

6.6.2.14 #define SIOCGCANCUSTOMBITTIME \_IOWR(RTIOC\_TYPE\_CAN, 0x04, struct ifreq)

Get custom bit-time parameters.

# **Parameters**

| in,out | arg | Pointer    | to    | interface    | request   | structure                | buffer   | (struct   | ifreq    | from  |
|--------|-----|------------|-------|--------------|-----------|--------------------------|----------|-----------|----------|-------|
|        |     | linux/if.h | ı). : | ifr_nameι    | must hold | l a valid C              | AN inte  | rface nan | ne, ifr_ | _ifru |
|        |     | will be f  | illed | d with an ir | nstance o | f struct <mark>ca</mark> | n_bittim | e.        |          |       |

#### Returns

0 on success, otherwise:

- -EFAULT: It was not possible to access user space memory area at the specified address.
- -ENODEV: No device with specified name exists.
- -EINVAL: No baud rate was set yet.

# Tags

# task-unrestricted

6.6 CAN Devices 45

# 6.6.2.15 #define SIOCGCANSTATE \_IOWR(RTIOC\_TYPE\_CAN, 0x06, struct ifreq)

Get current state of CAN controller.

States are divided into main states and additional error indicators. A CAN controller is always in exactly one main state. CAN bus errors are registered by the CAN hardware and collected by the driver. There is one error indicator (bit) per error type. If this IOCTL is triggered the error types which occured since the last call of this IOCTL are reported and thereafter the error indicators are cleared. See also CAN controller states.

#### **Parameters**

| i | n,out | arg | Pointer    | to    | interface    | request   | structure | buffer  | (struct   | ifreq   | from  |
|---|-------|-----|------------|-------|--------------|-----------|-----------|---------|-----------|---------|-------|
|   |       |     | linux/if.h | ı). : | ifr_name r   | must hold | a valid C | AN inte | rface nan | ne, ifr | _ifru |
|   |       |     | will be f  | illed | d with an ir | nstance o | f can_mod | e_t.    |           |         |       |

#### Returns

0 on success, otherwise:

- -EFAULT: It was not possible to access user space memory area at the specified address.
- -ENODEV: No device with specified name exists.

# Tags

task-unrestricted, might-switch

6.6.2.16 #define SIOCGIFINDEX defined by kernel header file

Get CAN interface index by name.

#### **Parameters**

| in,out | arg | Pointer to interface request structure buffer (struct ifreq from      |
|--------|-----|---|
|        |     | linux/if.h). If ifr_name holds a valid CAN interface name ifr_ifindex |
|        |     | will be filled with the corresponding interface index.                |

#### Returns

0 on success, otherwise:

- -EFAULT: It was not possible to access user space memory area at the specified address.
- -ENODEV: No device with specified name exists.

# Tags

task-unrestricted

# Examples:

can-rtt.c, rtcanconfig.c, rtcanrecv.c, and rtcansend.c.

6.6.2.17 #define SIOCSCANBAUDRATE \_IOW(RTIOC\_TYPE\_CAN, 0x01, struct ifreq)

# Set baud rate.

The baudrate must be specified in bits per second. The driver will try to calculate resonable CAN bit-timing parameters. You can use SIOCSCANCUSTOMBITTIME to set custom bit-timing.

#### **Parameters**

| in | arg | Pointer to interface request structure buffer (struct ifreq from     |
|----|-----|--|
|    |     | linux/if.h). ifr_name must hold a valid CAN interface name, ifr_ifru |
|    |     | must be filled with an instance of can_baudrate_t.                   |

#### Returns

0 on success, otherwise:

- -EFAULT: It was not possible to access user space memory area at the specified address.
- -ENODEV: No device with specified name exists.
- -EINVAL: No valid baud rate, see can baudrate t.
- -EDOM : Baud rate not possible.
- -EAGAIN: Request could not be successully fulfilled. Try again.

# Tags

task-unrestricted, might-switch

#### Note

Setting the baud rate is a configuration task. It should be done deliberately or otherwise CAN messages will likely be lost.

# Examples:

rtcanconfig.c.

6.6.2.18 #define SIOCSCANCTRLMODE \_IOW(RTIOC\_TYPE\_CAN, 0x07, struct ifreq)

Set special controller modes.

Various special controller modes could be or'ed together (see CAN CTRLMODE for further information).

#### **Parameters**

| in | arg | Pointer to interface request structure buffer (struct ifreq from     |
|----|-----|--|
|    |     | linux/if.h). ifr_name must hold a valid CAN interface name, ifr_ifru |
|    |     | must be filled with an instance of can_ctrlmode_t.                   |

# Returns

0 on success, otherwise:

- -EFAULT: It was not possible to access user space memory area at the specified address.
- -ENODEV: No device with specified name exists.
- -EINVAL: No valid baud rate, see can\_baudrate\_t.
- -EAGAIN: Request could not be successully fulfilled. Try again.

#### Tags

task-unrestricted, might-switch

#### Note

Setting special controller modes is a configuration task. It should be done deliberately or otherwise CAN messages will likely be lost.

#### Examples:

rtcanconfig.c.

6.6 CAN Devices 47

# 6.6.2.19 #define SIOCSCANCUSTOMBITTIME \_IOW(RTIOC\_TYPE\_CAN, 0x03, struct ifreq)

Set custom bit time parameter.

Custem-bit time could be defined in various formats (see struct can\_bittime).

#### **Parameters**

| in | arg | Pointer to interface request structure buffer (struct ifreq from     |
|----|-----|--|
|    |     | linux/if.h). ifr_name must hold a valid CAN interface name, ifr_ifru |
|    |     | must be filled with an instance of struct can_bittime.               |

# Returns

0 on success, otherwise:

- -EFAULT: It was not possible to access user space memory area at the specified address.
- -ENODEV: No device with specified name exists.
- -EINVAL: No valid baud rate, see can\_baudrate\_t.
- -EAGAIN: Request could not be successully fulfilled. Try again.

# Tags

task-unrestricted, might-switch

#### Note

Setting the bit-time is a configuration task. It should be done deliberately or otherwise CAN messages will likely be lost.

# Examples:

rtcanconfig.c.

# 6.6.2.20 #define SIOCSCANMODE \_IOW(RTIOC\_TYPE\_CAN, 0x05, struct ifreq)

Set operation mode of CAN controller.

See CAN controller modes for available modes.

# Parameters

| in | arg | Pointer to interface request structure buffer (struct ifreq from     |
|----|-----|--|
|    |     | linux/if.h). ifr_name must hold a valid CAN interface name, ifr_ifru |
|    |     | must be filled with an instance of can_mode_t.                       |

#### Returns

0 on success, otherwise:

- -EFAULT: It was not possible to access user space memory area at the specified address.
- -ENODEV: No device with specified name exists.
- -EAGAIN: (CAN\_MODE\_START, CAN\_MODE\_STOP) Could not successfully set mode, hardware is busy. Try again.
- -EINVAL: (CAN\_MODE\_START) Cannot start controller, set baud rate first.
- -ENETDOWN: (CAN\_MODE\_SLEEP) Cannot go into sleep mode because controller is stopped or bus off.
- -EOPNOTSUPP: unknown mode

Tags

task-unrestricted, might-switch

Note

Setting a CAN controller into normal operation after a bus-off can take some time (128 occurrences of 11 consecutive recessive bits). In such a case, although this IOCTL will return immediately with success and SIOCGCANSTATE will report CAN\_STATE\_ACTIVE, bus-off recovery may still be in progress.

If a controller is bus-off, setting it into stop mode will return no error but the controller remains bus-off.

# Examples:

rtcanconfig.c.

```
6.6.2.21 #define SOL_CAN_RAW 103
```

CAN socket levels.

Used for Sockopts for the particular protocols.

Examples:

can-rtt.c, rtcanrecv.c, and rtcansend.c.

6.6.3 Typedef Documentation

6.6.3.1 typedef struct can\_filter can\_filter\_t

Filter for reception of CAN messages.

This filter works as follows: A received CAN ID is AND'ed bitwise with can\_mask and then compared to can\_id. This also includes the CAN\_EFF\_FLAG and CAN\_RTR\_FLAG of CAN\_xxx\_FLAG. If this comparison is true, the message will be received by the socket. The logic can be inverted with the can\_id flag CAN\_INV\_FILTER:

```
if (can_id & CAN_INV_FILTER) {
   if ((received_can_id & can_mask) != (can_id & ~CAN_INV_FILTER))
       accept-message;
} else {
   if ((received_can_id & can_mask) == can_id)
       accept-message;
}
```

Multiple filters can be arranged in a filter list and set with Sockopts. If one of these filters matches a CAN ID upon reception of a CAN frame, this frame is accepted.

```
6.6.3.2 typedef struct can_frame can_frame_t
```

Raw CAN frame.

Central structure for receiving and sending CAN frames.

Examples:

rtcanrecv.c.

6.6 CAN Devices 49

# 6.6.4 Enumeration Type Documentation

# 6.6.4.1 enum CAN\_BITTIME\_TYPE

Supported CAN bit-time types.

#### Enumerator

CAN\_BITTIME\_STD Standard bit-time definition according to Bosch.

CAN BITTIME BTR Hardware-specific BTR bit-time definition.

#### 6.6.4.2 enum CAN MODE

#### Enumerator

CAN MODE STOP Set controller in Stop mode (no reception / transmission possible)

**CAN\_MODE\_START** Set controller into normal operation.

Coming from stopped mode or bus off, the controller begins with no errors in CAN\_STATE\_A-CTIVE.

CAN MODE SLEEP Set controller into Sleep mode.

This is only possible if the controller is not stopped or bus-off.

Notice that sleep mode will only be entered when there is no bus activity. If the controller detects bus activity while "sleeping" it will go into operating mode again.

To actively leave sleep mode again trigger CAN\_MODE\_START.

# 6.6.4.3 enum CAN\_STATE

#### Enumerator

CAN STATE ERROR ACTIVE CAN controller is error active.

CAN\_STATE\_ACTIVE CAN controller is active.

CAN\_STATE\_ERROR\_WARNING CAN controller is error active, warning level is reached.

CAN\_STATE\_BUS\_WARNING CAN controller is error active, warning level is reached.

CAN STATE ERROR PASSIVE CAN controller is error passive.

CAN\_STATE\_BUS\_PASSIVE CAN controller is error passive.

CAN STATE BUS OFF CAN controller went into Bus Off.

CAN\_STATE\_SCANNING\_BAUDRATE CAN controller is scanning to get the baudrate.

CAN\_STATE\_STOPPED CAN controller is in stopped mode.


**CAN\_STATE\_SLEEPING** CAN controller is in Sleep mode.

50 Module Documentation

# 6.7 RTDM

The Real-Time Driver Model (RTDM) provides a unified interface to both users and developers of real-time device drivers.

Collaboration diagram for RTDM:

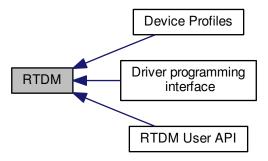

# Modules

RTDM User API

Application interface to RTDM services.

• Driver programming interface

RTDM driver programming interface.

• Device Profiles

Pre-defined classes of real-time devices.

# **Typedefs**

• typedef uint64\_t nanosecs\_abs\_t

RTDM type for representing absolute dates.

typedef int64\_t nanosecs\_rel\_t

RTDM type for representing relative intervals.

# **API Versioning**

• #define RTDM API VER 9

Common user and driver API version.

• #define RTDM\_API\_MIN\_COMPAT\_VER 9

Minimum API revision compatible with the current release.

RTDM TIMEOUT xxx

Special timeout values

6.7 RTDM 51

- #define RTDM\_TIMEOUT\_INFINITE 0
   Block forever.
- #define RTDM TIMEOUT NONE (-1)

Any negative timeout means non-blocking.

# 6.7.1 Detailed Description

The Real-Time Driver Model (RTDM) provides a unified interface to both users and developers of real-time device drivers. Specifically, it addresses the constraints of mixed RT/non-RT systems like Xenomai. RTDM conforms to POSIX semantics (IEEE Std 1003.1) where available and applicable.

**API Revision:** 8

6.7.2 Macro Definition Documentation

6.7.2.1 #define RTDM\_TIMEOUT\_INFINITE 0

Block forever.

6.7.2.2 #define RTDM\_TIMEOUT\_NONE (-1)

Any negative timeout means non-blocking.

6.7.3 Typedef Documentation

6.7.3.1 typedef uint64\_t nanosecs\_abs\_t

RTDM type for representing absolute dates.

Its base type is a 64 bit unsigned integer. The unit is 1 nanosecond.

Examples:

rtcanrecv.c.

6.7.3.2 typedef int64\_t nanosecs\_rel\_t

RTDM type for representing relative intervals.

Its base type is a 64 bit signed integer. The unit is 1 nanosecond. Relative intervals can also encode the special timeouts "infinite" and "non-blocking", see RTDM\_TIMEOUT\_xxx.

Examples:

rtcanrecv.c.

# 6.8 RTDM User API

Application interface to RTDM services.

Collaboration diagram for RTDM User API:



# **Files**

• file rtdm.h

Real-Time Driver Model for Xenomai, user API header.

#### **Functions**

int rt\_dev\_open (const char \*path, int oflag,...)

Open a device.

• int rt\_dev\_socket (int protocol\_family, int socket\_type, int protocol)

Create a socket.

int rt\_dev\_close (int fd)

Close a device or socket.

• int rt\_dev\_ioctl (int fd, int request,...)

Issue an IOCTL.

ssize\_t rt\_dev\_read (int fd, void \*buf, size\_t nbyte)

Read from device.

ssize\_t rt\_dev\_write (int fd, const void \*buf, size\_t nbyte)

Write to device.

ssize\_t rt\_dev\_recvmsg (int fd, struct msghdr \*msg, int flags)

Receive message from socket.

ssize\_t rt\_dev\_recvfrom (int fd, void \*buf, size\_t len, int flags, struct sockaddr \*from, socklen\_t \*fromlen)

Receive message from socket.

ssize\_t rt\_dev\_recv (int fd, void \*buf, size\_t len, int flags)

Receive message from socket.

ssize\_t rt\_dev\_sendmsg (int fd, const struct msghdr \*msg, int flags)

Transmit message to socket.

• ssize\_t rt\_dev\_sendto (int fd, const void \*buf, size\_t len, int flags, const struct sockaddr \*to, socklen\_t tolen)

Transmit message to socket.

ssize\_t rt\_dev\_send (int fd, const void \*buf, size\_t len, int flags)

Transmit message to socket.

• int rt dev bind (int fd, const struct sockaddr \*my addr, socklen t addrlen)

Bind to local address.

• int rt\_dev\_connect (int fd, const struct sockaddr \*serv\_addr, socklen\_t addrlen)

6.8 RTDM User API 53

Connect to remote address.

int rt\_dev\_listen (int fd, int backlog)

Listen for incomming connection requests.

int rt dev accept (int fd, struct sockaddr \*addr, socklen t \*addrlen)

Accept connection requests.

int rt\_dev\_shutdown (int fd, int how)

Shut down parts of a connection.

int rt\_dev\_getsockopt (int fd, int level, int optname, void \*optval, socklen\_t \*optlen)
 Get socket option.

• int rt\_dev\_setsockopt (int fd, int level, int optname, const void \*optval, socklen\_t optlen) Set socket option.

• int rt\_dev\_getsockname (int fd, struct sockaddr \*name, socklen\_t \*namelen)

Get local socket address.

int rt\_dev\_getpeername (int fd, struct sockaddr \*name, socklen\_t \*namelen)
 Get socket destination address.

# 6.8.1 Detailed Description

Application interface to RTDM services. This is the upper interface of RTDM provided to application programs both in kernel and user space. Note that certain functions may not be implemented by every device. Refer to the Device Profiles for precise information.

# 6.8.2 Function Documentation

6.8.2.1 int rt\_dev\_accept (int fd, struct sockaddr \* addr, socklen\_t \* addrlen )

# Accept connection requests.

### **Parameters**

| in     | fd      | File descriptor as returned by rt_dev_socket() |
|--------|---------|--|
| out    | addr    | Buffer for remote address                      |
| in,out | addrlen | Address buffer size                            |

### Returns

0 on success, otherwise negative error code

Action depends on driver implementation, see Device Profiles.

See Also

accept() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399

Tags

mode-unrestricted, might-switch

6.8.2.2 int rt\_dev\_bind ( int fd, const struct sockaddr \* my\_addr, socklen\_t addrlen )

Bind to local address.

#### **Parameters**

| in | fd      | File descriptor as returned by rt_dev_socket() |
|----|---------|--|
| in | my_addr | Address buffer                                 |
| in | addrlen | Address buffer size                            |

#### Returns

0 on success, otherwise negative error code

Action depends on driver implementation, see Device Profiles.

See Also

bind() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399

Tags

mode-unrestricted, might-switch

# Examples:

rtcanrecv.c, and rtcansend.c.

6.8.2.3 int rt\_dev\_close (int fd)

Close a device or socket.

### **Parameters**

| in | fd | File descriptor as returned by rt_dev_open() or rt_dev_socket() |
|----|----|---|
|----|----|---|

#### Returns

0 on success, otherwise a negative error code.

Note

If the matching rt\_dev\_open() or rt\_dev\_socket() call took place in non-real-time context, rt\_dev\_close() must be issued within non-real-time as well. Otherwise, the call will fail.

Action depends on driver implementation, see Device Profiles.

See Also

close() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399

Tags

secondary-only, might-switch

Examples:

cross-link.c, rtcanconfig.c, rtcanrecv.c, and rtcansend.c.

6.8.2.4 int rt\_dev\_connect ( int fd, const struct sockaddr \* serv\_addr, socklen\_t addrlen )

Connect to remote address.

6.8 RTDM User API 55

#### **Parameters**

| in | fd        | File descriptor as returned by rt_dev_socket() |
|----|-----------|--|
| in | serv_addr | Address buffer                                 |
| in | addrlen   | Address buffer size                            |

#### Returns

0 on success, otherwise negative error code

Action depends on driver implementation, see Device Profiles.

See Also

connect() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399

Tags

mode-unrestricted, might-switch

6.8.2.5 int rt\_dev\_getpeername ( int fd, struct sockaddr \* name, socklen\_t \* namelen )

#### Get socket destination address.

# **Parameters**

| in     | fd      | File descriptor as returned by rt_dev_socket() |
|--------|---------|--|
| out    | name    | Address buffer                                 |
| in,out | namelen | Address buffer size                            |

### Returns

0 on success, otherwise negative error code

Action depends on driver implementation, see Device Profiles.

See Also

getpeername() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399

Tags

task-unrestricted, might-switch

6.8.2.6 int rt\_dev\_getsockname ( int fd, struct sockaddr \* name, socklen\_t \* namelen )

# Get local socket address.

# **Parameters**

| in  | fd   | File descriptor as returned by rt_dev_socket() |
|-----|------|--|
| out | name | Address buffer                                 |

| in.out   | namelen | Address buffer size |
|----------|---------|---------------------|
| III, out | Hambion | Address baller size |

#### Returns

0 on success, otherwise negative error code

Action depends on driver implementation, see Device Profiles.

See Also

getsockname() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399

Tags

task-unrestricted, might-switch

6.8.2.7 int rt\_dev\_getsockopt ( int fd, int level, int optname, void \* optval, socklen\_t \* optlen )

# Get socket option.

# **Parameters**

| in     | fd      | File descriptor as returned by rt_dev_socket() |
|--------|---------|--|
| in     | level   | Addressed stack level                          |
| in     | optname | Option name ID                                 |
| out    | optval  | Value buffer                                   |
| in,out | optlen  | Value buffer size                              |

### Returns

0 on success, otherwise negative error code

Action depends on driver implementation, see Device Profiles.

See Also

getsockopt() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399

Tags

task-unrestricted, might-switch

6.8.2.8 int rt\_dev\_ioctl (int fd, int request, ...)

### Issue an IOCTL.

### **Parameters**

| in | fd      | File descriptor as returned by rt_dev_open() or rt_dev_socket()                |
|----|---------|--|
| in | request | IOCTL code   |
|    |         | Optional third argument, depending on IOCTL function (void * or unsigned long) |

### Returns

Positiv value on success, otherwise negative error code

Action depends on driver implementation, see Device Profiles.

6.8 RTDM User API 57

See Also

ioctl() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399

Tags

task-unrestricted, might-switch

Examples:

cross-link.c, rtcanconfig.c, rtcanrecv.c, and rtcansend.c.

6.8.2.9 int rt\_dev\_listen ( int fd, int backlog )

Listen for incomming connection requests.

#### **Parameters**

| in | fd      | File descriptor as returned by rt_dev_socket() |
|----|---------|--|
| in | backlog | Maximum queue length                           |

# Returns

0 on success, otherwise negative error code

Action depends on driver implementation, see Device Profiles.

See Also

listen() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399

Tags

task-unrestricted, might-switch

6.8.2.10 int rt\_dev\_open ( const char \* path, int oflag, ... )

# Open a device.

#### **Parameters**

| in | path  | Device name                         |
|----|-------|-------------------------------------|
| in | oflag | Open flags                          |
|    |       | Further parameters will be ignored. |

# Returns

Positive file descriptor value on success, otherwise a negative error code.

Action depends on driver implementation, see Device Profiles.

See Also

open() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399

Tags

secondary-only, might-switch

Examples:

cross-link.c.

6.8.2.11 ssize\_t rt\_dev\_read ( int fd, void \* buf, size\_t nbyte )

# Read from device.

#### **Parameters**

| in  | fd    | File descriptor as returned by rt_dev_open() |
|-----|-------|--|
| out | buf   | Input buffer                                 |
| in  | nbyte | Number of bytes to read                      |

#### Returns

Number of bytes read, otherwise negative error code

Action depends on driver implementation, see Device Profiles.

See Also

```
read() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399
```

Tags

mode-unrestricted, might-switch

Examples:

cross-link.c.

```
6.8.2.12 ssize_t rt_dev_recv ( int fd, void * buf, size_t len, int flags )
```

Receive message from socket.

#### **Parameters**

| in  | fd    | File descriptor as returned by rt_dev_socket() |
|-----|-------|--|
| out | buf   | Message buffer                                 |
| in  | len   | Message buffer size                            |
| in  | flags | Message flags                                  |

#### Returns

Number of bytes received, otherwise negative error code

Action depends on driver implementation, see Device Profiles.

See Also

```
recv() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399
```

Tags

mode-unrestricted, might-switch

```
6.8.2.13 ssize_t rt_dev_recvfrom ( int fd, void * buf, size_t len, int flags, struct sockaddr * from, socklen t * fromlen )
```

Receive message from socket.

6.8 RTDM User API 59

#### **Parameters**

| in     | fd      | File descriptor as returned by rt_dev_socket() |
|--------|---------|--|
| out    | buf     | Message buffer                                 |
| in     | len     | Message buffer size                            |
| in     | flags   | Message flags                                  |
| out    | from    | Buffer for message sender address              |
| in,out | fromlen | Address buffer size                            |

#### Returns

Number of bytes received, otherwise negative error code

Action depends on driver implementation, see Device Profiles.

See Also

recvfrom() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399

Tags

mode-unrestricted, might-switch

Examples:

rtcanrecv.c.

6.8.2.14 ssize\_t rt\_dev\_recvmsg ( int fd, struct msghdr \* msg, int flags )

Receive message from socket.

**Parameters** 

| in     | fd    | File descriptor as returned by rt_dev_socket() |
|--------|-------|--|
| in,out | msg   | Message descriptor                             |
| in     | flags | Message flags                                  |

# Returns

Number of bytes received, otherwise negative error code

Action depends on driver implementation, see Device Profiles.

See Also

recvmsg() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399

Tags

mode-unrestricted, might-switch

Examples:

rtcanrecv.c.

6.8.2.15 ssize t rt dev send ( int fd, const void \* buf, size t len, int flags )

Transmit message to socket.

#### **Parameters**

| in | fd    | File descriptor as returned by rt_dev_socket() |
|----|-------|--|
| in | buf   | Message buffer                                 |
| in | len   | Message buffer size                            |
| in | flags | Message flags                                  |

# Returns

Number of bytes sent, otherwise negative error code

Action depends on driver implementation, see Device Profiles.

See Also

```
send() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399
```

Tags

mode-unrestricted, might-switch

Examples:

rtcansend.c.

6.8.2.16 ssize\_t rt\_dev\_sendmsg (int fd, const struct msghdr \* msg, int flags)

Transmit message to socket.

# **Parameters**

| in | fd    | File descriptor as returned by rt_dev_socket() |
|----|-------|--|
| in | msg   | Message descriptor                             |
| in | flags | Message flags                                  |

# Returns

Number of bytes sent, otherwise negative error code

Action depends on driver implementation, see Device Profiles.

See Also

```
sendmsg() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399
```

Tags

mode-unrestricted, might-switch

6.8.2.17 ssize\_t rt\_dev\_sendto ( int fd, const void \* buf, size\_t len, int flags, const struct sockaddr \* to, socklen t tolen )

Transmit message to socket.

6.8 RTDM User API 61

#### **Parameters**

| in | fd    | File descriptor as returned by rt_dev_socket() |
|----|-------|--|
| in | buf   | Message buffer                                 |
| in | len   | Message buffer size                            |
| in | flags | Message flags                                  |
| in | to    | Buffer for message destination address         |
| in | tolen | Address buffer size                            |

#### Returns

Number of bytes sent, otherwise negative error code

Action depends on driver implementation, see Device Profiles.

See Also

sendto() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399

Tags

mode-unrestricted, might-switch

Examples:

rtcansend.c.

6.8.2.18 int rt\_dev\_setsockopt (int fd, int level, int optname, const void \* optval, socklen\_t optlen)

Set socket option.

#### **Parameters**

| in | fd      | File descriptor as returned by rt_dev_socket() |
|----|---------|--|
| in | level   | Addressed stack level                          |
| in | optname | Option name ID                                 |
| in | optval  | Value buffer                                   |
| in | optlen  | Value buffer size                              |

#### Returns

0 on success, otherwise negative error code

Action depends on driver implementation, see Device Profiles.

See Also

setsockopt() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399

Tags

task-unrestricted, might-switch

Examples:

rtcanrecv.c, and rtcansend.c.

6.8.2.19 int rt\_dev\_shutdown ( int fd, int how )

Shut down parts of a connection.

#### **Parameters**

| in | fd  | File descriptor as returned by rt_dev_socket() |
|----|-----|--|
| in | how | Specifies the part to be shut down (SHUT_xxx)  |

### Returns

0 on success, otherwise negative error code

Action depends on driver implementation, see Device Profiles.

See Also

```
shutdown() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399
```

Tags

secondary-only, might-switch

```
6.8.2.20 int rt_dev_socket ( int protocol_family, int socket_type, int protocol )
```

# Create a socket.

#### **Parameters**

| in | protocol_family | Protocol family (PF_xxx)   |
|----|-----------------|----------------------------|
| in | socket_type     | Socket type (SOCK_xxx)     |
| in | protocol        | Protocol ID, 0 for default |

# Returns

Positive file descriptor value on success, otherwise a negative error code.

Action depends on driver implementation, see Device Profiles.

See Also

```
socket() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399
```

Tags

secondary-only, might-switch

Examples:

rtcanconfig.c, rtcanrecv.c, and rtcansend.c.

```
6.8.2.21 ssize_t rt_dev_write ( int fd, const void * buf, size_t nbyte )
```

Write to device.

**Parameters** 

6.8 RTDM User API 63

| in | fd    | File descriptor as returned by rt_dev_open() |
|----|-------|--|
| in | buf   | Output buffer                                |
| in | nbyte | Number of bytes to write                     |

# Returns

Number of bytes written, otherwise negative error code

Action depends on driver implementation, see Device Profiles.

See Also

write() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399

Tags

mode-unrestricted, might-switch

Examples:

cross-link.c.

64 Module Documentation

# 6.9 Serial Devices

This is the common interface a RTDM-compliant serial device has to provide.

Collaboration diagram for Serial Devices:



This is the common interface a RTDM-compliant serial device has to provide. Feel free to comment on this profile via the Xenomai mailing list (Xenomai-core@gna.org) or directly to the author (jan.-kiszka@web.de).

**Profile Revision:** 3

**Device Characteristics** 

Device Flags: RTDM\_NAMED\_DEVICE, RTDM\_EXCLUSIVE

Device Name: "rtser<N>", N >= 0 Device Class: RTDM\_CLASS\_SERIAL

Supported Operations

Open

Tags

secondary-only Specific return values: none **Close** 

Tags

secondary-only Specific return values: none **IOCTL** 

Tags

task-unrestricted. See below Specific return values: see below **Read** 

Tags

mode-unrestricted Specific return values:

- -ETIMEDOUT
- · -EINTR (interrupted explicitly or by signal)
- -EAGAIN (no data available in non-blocking mode)
- -EBADF (device has been closed while reading)
- -EIO (hardware error or broken bit stream)

Write

6.9 Serial Devices 65

# Tags

mode-unrestricted Specific return values:

- -ETIMEDOUT
- -EINTR (interrupted explicitly or by signal)
- -EAGAIN (no data written in non-blocking mode)
- -EBADF (device has been closed while writing)

# 6.10 Testing Devices

This group of devices is intended to provide in-kernel testing results.

Collaboration diagram for Testing Devices:



This group of devices is intended to provide in-kernel testing results. Feel free to comment on this profile via the Xenomai mailing list (xenomai-core@gna.org) or directly to the author (jan.kiszka@web.de).

#### **Profile Revision: 2**

**Device Characteristics** 

Device Flags: RTDM\_NAMED\_DEVICE

Device Name: "rttest[-<subclass>]<N>", N>= 0, optional subclass name to simplify device

discovery

Device Class: RTDM\_CLASS\_TESTING

**Supported Operations** 

# Open

Tags

secondary-only Specific return values: none Close

Tags

secondary-only Specific return values: none **IOCTL** 

Tags

task-unrestricted. See TSTIOCTLs below Specific return values: see TSTIOCTLs below 6.11 Real-time IPC 67

# 6.11 Real-time IPC

#### **Profile Revision: 1**

Collaboration diagram for Real-time IPC:



# **Data Structures**

struct rtipc\_port\_label

Port label information structure.

struct sockaddr\_ipc

Socket address structure for the RTIPC address family.

# **Typedefs**

typedef int16\_t rtipc\_port\_t

Port number type for the RTIPC address family.

# Supported operations

Standard socket operations supported by the RTIPC protocols.

- int socket\_\_AF\_RTIPC (int domain=AF\_RTIPC, int type=SOCK\_DGRAM, int protocol) Create an endpoint for communication in the AF\_RTIPC domain.
- int close\_\_AF\_RTIPC (int sockfd)
  - Close a RTIPC socket descriptor.
- int bind\_\_AF\_RTIPC (int sockfd, const struct sockaddr\_ipc \*addr, socklen\_t addrlen)

  Bind a RTIPC socket to a port.
- int connect\_\_AF\_RTIPC (int sockfd, const struct sockaddr\_ipc \*addr, socklen\_t addrlen)

  Initiate a connection on a RTIPC socket.
- int setsockopt\_\_AF\_RTIPC (int sockfd, int level, int optname, const void \*optval, socklen\_t optlen) Set options on RTIPC sockets.
- int getsockopt\_\_AF\_RTIPC (int sockfd, int level, int optname, void \*optval, socklen\_t \*optlen)

  Get options on RTIPC sockets.
- ssize\_t sendmsg\_\_AF\_RTIPC (int sockfd, const struct msghdr \*msg, int flags)
   Send a message on a RTIPC socket.
- ssize\_t recvmsg\_\_AF\_RTIPC (int sockfd, struct msghdr \*msg, int flags)
  - Receive a message from a RTIPC socket.
- int getsockname\_\_AF\_RTIPC (int sockfd, struct sockaddr\_ipc \*addr, socklen\_t \*addrlen)

  Get socket name.
- int getpeername\_\_AF\_RTIPC (int sockfd, struct sockaddr\_ipc \*addr, socklen\_t \*addrlen)
   Get socket peer.

# RTIPC protocol list

protocols for the PF\_RTIPC protocol family

enum { IPCPROTO\_IPC = 0, IPCPROTO\_XDDP = 1, IPCPROTO\_IDDP = 2, IPCPROTO\_BUFP = 3 }

# XDDP socket options

Setting and getting XDDP socket options.

• #define XDDP\_LABEL 1

XDDP label assignment.

• #define XDDP\_POOLSZ 2

XDDP local pool size configuration.

#define XDDP\_BUFSZ 3

XDDP streaming buffer size configuration.

• #define XDDP\_MONITOR 4

XDDP monitoring callback.

# XDDP events

Specific events occurring on XDDP channels, which can be monitored via the XDDP\_MONITOR socket option.

• #define XDDP EVTIN 1

Monitor writes to the non real-time endpoint.

• #define XDDP EVTOUT 2

Monitor reads from the non real-time endpoint.

• #define XDDP\_EVTDOWN 3

Monitor close from the non real-time endpoint.

• #define XDDP EVTNOBUF 4

Monitor memory shortage for non real-time datagrams.

# IDDP socket options

Setting and getting IDDP socket options.

• #define IDDP\_LABEL 1

IDDP label assignment.

• #define IDDP\_POOLSZ 2

IDDP local pool size configuration.

# **BUFP** socket options

Setting and getting BUFP socket options.

#define BUFP LABEL 1

BUFP label assignment.

• #define BUFP BUFSZ 2

BUFP buffer size configuration.

6.11 Real-time IPC 69

# Socket level options

Setting and getting supported standard socket level options.

#define SO\_SNDTIMEO defined\_by\_kernel\_header\_file
 IPCPROTO\_IDDP and IPCPROTO\_BUFP protocols support the standard SO\_SNDTIMEO socket option, from the SOL\_SOCKET level.

#define SO\_RCVTIMEO defined\_by\_kernel\_header\_file

All RTIPC protocols support the standard SO\_RCVTIMEO socket option, from the SOL\_SOCKET level.

# 6.11.1 Detailed Description

### **Profile Revision: 1**

**Device Characteristics** 

Device Flags: RTDM\_PROTOCOL\_DEVICE

Protocol Family: PF\_RTIPC Socket Type: SOCK\_DGRAM

Device Class: RTDM\_CLASS\_RTIPC

#### 6.11.2 Macro Definition Documentation

# 6.11.2.1 #define BUFP\_BUFSZ 2

BUFP buffer size configuration.

All messages written to a BUFP socket are buffered in a single per-socket memory area. Configuring the size of such buffer prior to binding the socket to a destination port is mandatory.

It is not allowed to configure a buffer size after the socket was bound. However, multiple configuration calls are allowed prior to the binding; the last value set will be used.

#### Note

: the buffer memory is obtained from the host allocator by the bind call.

### **Parameters**

| in | level   | SOL_BUFP  |
|----|---------|---|
| in | optname | BUFP_BUFSZ  |
| in | optval  | Pointer to a variable of type size_t, containing the required size of the |
|    |         | buffer to reserve at binding time   |
| in | optlen  | sizeof(size_t)  |

# Returns

0 is returned upon success. Otherwise:

- -EFAULT (Invalid data address given)
- -EALREADY (socket already bound)
- -EINVAL (optlen is invalid or \*optval is zero)

# Calling context:

#### RT/non-RT

# Examples:

bufp-label.c, and bufp-readwrite.c.

# 6.11.2.2 #define BUFP LABEL 1

# BUFP label assignment.

ASCII label strings can be attached to BUFP ports, in order to connect sockets to them in a more descriptive way than using plain numeric port values.

When available, this label will be registered when binding, in addition to the port number (see BUFP port binding).

It is not allowed to assign a label after the socket was bound. However, multiple assignment calls are allowed prior to the binding; the last label set will be used.

#### **Parameters**

| in | level   | SOL_BUFP                           |
|----|---------|------------------------------------|
| in | optname | BUFP_LABEL                         |
| in | optval  | Pointer to struct rtipc_port_label |
| in | optlen  | sizeof(struct rtipc_port_label)    |

#### Returns

0 is returned upon success. Otherwise:

- -EFAULT (Invalid data address given)
- -EALREADY (socket already bound)
- -EINVAL (optlen is invalid)

Calling context:

RT/non-RT

Examples:

bufp-label.c.

6.11.2.3 #define IDDP LABEL 1

# IDDP label assignment.

ASCII label strings can be attached to IDDP ports, in order to connect sockets to them in a more descriptive way than using plain numeric port values.

When available, this label will be registered when binding, in addition to the port number (see IDDP port binding).

It is not allowed to assign a label after the socket was bound. However, multiple assignment calls are allowed prior to the binding; the last label set will be used.

**Parameters** 

6.11 Real-time IPC 71

| in | level   | SOL_IDDP                           |
|----|---------|------------------------------------|
| in | optname | IDDP_LABEL                         |
| in | optval  | Pointer to struct rtipc_port_label |
| in | optlen  | sizeof(struct rtipc_port_label)    |

#### Returns

0 is returned upon success. Otherwise:

- -EFAULT (Invalid data address given)
- -EALREADY (socket already bound)
- -EINVAL (optlen is invalid)

# Calling context:

RT/non-RT

# Examples:

iddp-label.c.

# 6.11.2.4 #define IDDP\_POOLSZ 2

IDDP local pool size configuration.

By default, the memory needed to convey the data is pulled from Xenomai's system pool. Setting a local pool size overrides this default for the socket.

If a non-zero size was configured, a local pool is allocated at binding time. This pool will provide storage for pending datagrams.

It is not allowed to configure a local pool size after the socket was bound. However, multiple configuration calls are allowed prior to the binding; the last value set will be used.

### Note

: the pool memory is obtained from the host allocator by the bind call.

### **Parameters**

| in | level   | SOL_IDDP  |
|----|---------|---|
| in | optname | IDDP_POOLSZ   |
| in | optval  | Pointer to a variable of type size_t, containing the required size of the |
|    |         | local pool to reserve at binding time                                     |
| in | optlen  | sizeof(size_t)  |

# Returns

0 is returned upon success. Otherwise:

- -EFAULT (Invalid data address given)
- -EALREADY (socket already bound)
- -EINVAL (optlen is invalid or \*optval is zero)

# Calling context:

RT/non-RT

72 Module Documentation

Examples:

iddp-sendrecv.c.

6.11.2.5 #define SO\_RCVTIMEO defined\_by\_kernel\_header\_file

All RTIPC protocols support the standard SO RCVTIMEO socket option, from the SOL\_SOCKET level.

See Also

setsockopt(), getsockopt() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399/

Examples:

xddp-label.c.

Referenced by rt\_pipe\_read\_timed().

6.11.2.6 #define SO\_SNDTIMEO defined\_by\_kernel\_header\_file

IPCPROTO\_IDDP and IPCPROTO\_BUFP protocols support the standard SO\_SNDTIMEO socket option, from the SOL\_SOCKET level.

See Also

setsockopt(), getsockopt() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399/

6.11.2.7 #define XDDP\_BUFSZ 3

XDDP streaming buffer size configuration.

In addition to sending datagrams, real-time threads may stream data in a byte-oriented mode through the port as well. This increases the bandwidth and reduces the overhead, when the overall data to send to the Linux domain is collected by bits, and keeping the message boundaries is not required.

This feature is enabled when a non-zero buffer size is set for the socket. In that case, the real-time data accumulates into the streaming buffer when MSG\_MORE is passed to any of the send functions, until:

- the receiver from the Linux domain wakes up and consumes it,
- a different source port attempts to send data to the same destination port,
- MSG\_MORE is absent from the send flags,
- the buffer is full,

whichever comes first.

Setting \*optval to zero disables the streaming buffer, in which case all sendings are conveyed in separate datagrams, regardless of MSG\_MORE.

Note

only a single streaming buffer exists per socket. When this buffer is full, the real-time data stops accumulating and sending operations resume in mere datagram mode. Accumulation may happen again after some or all data in the streaming buffer is consumed from the Linux domain endpoint.

The streaming buffer size may be adjusted multiple times during the socket lifetime; the latest configuration change will take effect when the accumulation resumes after the previous buffer was flushed.

6.11 Real-time IPC 73

### **Parameters**

| in | level   | SOL_XDDP   |
|----|---------|--|
| in | optname | XDDP_BUFSZ   |
| in | optval  | Pointer to a variable of type size_t, containing the required size of the streaming buffer |
| in | optlen  | sizeof(size_t)   |

#### Returns

0 is returned upon success. Otherwise:

- -EFAULT (Invalid data address given)
- -ENOMEM (Not enough memory)
- -EINVAL (optlen is invalid)

Calling context:

RT/non-RT

Examples:

xddp-stream.c.

Referenced by rt\_pipe\_create().

6.11.2.8 #define XDDP\_EVTDOWN 3

Monitor close from the non real-time endpoint.

XDDP\_EVTDOWN is sent when the non real-time endpoint is closed. The argument is always 0.

6.11.2.9 #define XDDP\_EVTIN 1

Monitor writes to the non real-time endpoint.

XDDP\_EVTIN is sent when data is written to the non real-time endpoint the socket is bound to (i.e. via /dev/rtpN), which means that some input is pending for the real-time endpoint. The argument is the size of the incoming message.

6.11.2.10 #define XDDP\_EVTNOBUF 4

Monitor memory shortage for non real-time datagrams.

XDDP\_EVTNOBUF is sent when no memory is available from the pool to hold the message currently sent from the non real-time endpoint. The argument is the size of the failed allocation. Upon return from the callback, the caller will block and retry until enough space is available from the pool; during that process, the callback might be invoked multiple times, each time a new attempt to get the required memory fails.

6.11.2.11 #define XDDP\_EVTOUT 2

Monitor reads from the non real-time endpoint.

XDDP\_EVTOUT is sent when the non real-time endpoint successfully reads a complete message (i.e. via /dev/rtp/N). The argument is the size of the outgoing message.

# 6.11.2.12 #define XDDP\_LABEL 1

# XDDP label assignment.

ASCII label strings can be attached to XDDP ports, so that opening the non-RT endpoint can be done by specifying this symbolic device name rather than referring to a raw pseudo-device entry (i.e. /dev/rtpN).

When available, this label will be registered when binding, in addition to the port number (see XDDP port binding).

It is not allowed to assign a label after the socket was bound. However, multiple assignment calls are allowed prior to the binding; the last label set will be used.

#### **Parameters**

| in | level   | SOL_XDDP                           |
|----|---------|------------------------------------|
| in | optname | XDDP_LABEL                         |
| in | optval  | Pointer to struct rtipc_port_label |
| in | optlen  | sizeof(struct rtipc_port_label)    |

#### Returns

0 is returned upon success. Otherwise:

- -EFAULT (Invalid data address given)
- -EALREADY (socket already bound)
- -EINVAL (optlen invalid)

Calling context:

RT/non-RT

Examples:

xddp-label.c.

Referenced by rt pipe create().

6.11.2.13 #define XDDP\_MONITOR 4

# XDDP monitoring callback.

Other RTDM drivers may install a user-defined callback via the <a href="rtdm\_setsockopt">rtdm\_setsockopt</a> call from the inter-driver API, in order to collect particular events occurring on the channel.

This notification mechanism is particularly useful to monitor a channel asynchronously while performing other tasks.

The user-provided routine will be passed the RTDM file descriptor of the socket receiving the event, the event code, and an optional argument. Four events are currently defined, see XDDP\_EVENTS.

The XDDP\_EVTIN and XDDP\_EVTOUT events are fired on behalf of a fully atomic context; therefore, care must be taken to keep their overhead low. In those cases, the Xenomai services that may be called from the callback are restricted to the set allowed to a real-time interrupt handler.

**Parameters** 

6.11 Real-time IPC 75

| in | level   | SOL_XDDP   |
|----|---------|--|
| in | optname | XDDP_MONITOR   |
| in | optval  | Pointer to a pointer to function of type int (*)(int fd, int event, long arg), containing the address of the user-defined callback.Passing a NULL callback pointer in <i>optval</i> disables monitoring. |
| in | optlen  | sizeof(int (*)(int fd, int event, long arg))   |

#### Returns

0 is returned upon success. Otherwise:

- -EFAULT (Invalid data address given)
- -EPERM (Operation not allowed from user-space)
- -EINVAL (optlen is invalid)

# Calling context:

RT/non-RT, kernel space only

# 6.11.2.14 #define XDDP\_POOLSZ 2

XDDP local pool size configuration.

By default, the memory needed to convey the data is pulled from Xenomai's system pool. Setting a local pool size overrides this default for the socket.

If a non-zero size was configured, a local pool is allocated at binding time. This pool will provide storage for pending datagrams.

It is not allowed to configure a local pool size after the socket was bound. However, multiple configuration calls are allowed prior to the binding; the last value set will be used.

#### Note

: the pool memory is obtained from the host allocator by the bind call.

#### **Parameters**

| in | level   | SOL_XDDP  |
|----|---------|---|
| in | optname | XDDP_POOLSZ   |
| in | optval  | Pointer to a variable of type size_t, containing the required size of the |
|    |         | local pool to reserve at binding time                                     |
| in | optlen  | sizeof(size_t)  |

### Returns

0 is returned upon success. Otherwise:

- -EFAULT (Invalid data address given)
- -EALREADY (socket already bound)
- -EINVAL (optlen invalid or \*optval is zero)

# Calling context:

#### RT/non-RT

Examples:

xddp-echo.c.

Referenced by rt\_pipe\_create().

# 6.11.3 Enumeration Type Documentation

6.11.3.1 anonymous enum

Enumerator

IPCPROTO IPC Default protocol (IDDP)

**IPCPROTO\_XDDP** Cross-domain datagram protocol (RT <-> non-RT). Real-time Xenomai threads and regular Linux threads may want to exchange data in a way that does not require the former to leave the real-time domain (i.e. primary mode). The RTDM-based XDDP protocol is available for this purpose.

On the Linux domain side, pseudo-device files named /dev/rtp<minor> give regular POSIX threads access to non real-time communication endpoints, via the standard character-based I/O interface. On the Xenomai domain side, sockets may be bound to XDDP ports, which act as proxies to send and receive data to/from the associated pseudo-device files. Ports and pseudo-device minor numbers are paired, meaning that e.g. socket port 7 will proxy the traffic to/from /dev/rtp7.

All data sent through a bound/connected XDDP socket via sendto(2) or write(2) will be passed to the peer endpoint in the Linux domain, and made available for reading via the standard read(2) system call. Conversely, all data sent using write(2) through the non real-time endpoint will be conveyed to the real-time socket endpoint, and made available to the recvfrom(2) or read(2) system calls.

**IPCPROTO\_IDDP** Intra-domain datagram protocol (RT <-> RT). The RTDM-based IDDP protocol enables real-time threads to exchange datagrams within the Xenomai domain, via socket endpoints.

**IPCPROTO\_BUFP** Buffer protocol (RT <-> RT, byte-oriented). The RTDM-based BUFP protocol implements a lightweight, byte-oriented, one-way Producer-Consumer data path. All messages written are buffered into a single memory area in strict FIFO order, until read by the consumer.

This protocol always prevents short writes, and only allows short reads when a potential dead-lock situation arises (i.e. readers and writers waiting for each other indefinitely).

### 6.11.4 Function Documentation

6.11.4.1 int bind\_\_AF\_RTIPC ( int sockfd, const struct **sockaddr\_ipc** \* addr, socklen\_t addrlen )

Bind a RTIPC socket to a port.

Bind the socket to a destination port.

**Parameters** 

| in | sockfd | The RTDM file descriptor obtained from the socket creation call.             |
|----|--------|--|
| in | addr   | The address to bind the socket to (see struct sockaddr_ipc). The             |
|    |        | meaning of such address depends on the RTIPC protocol in use for the socket: |

# • IPCPROTO XDDP

This action creates an endpoint for channelling traffic between the Xenomai and Linux domains.

6.11 Real-time IPC 77

sipc\_family must be AF\_RTIPC, sipc\_port is either -1, or a valid free port number between 0 and CONFIG\_XENO\_OPT\_PIPE\_NRDEV-1.

If sipc port is -1, a free port will be assigned automatically.

Upon success, the pseudo-device /dev/rtpN will be reserved for this communication channel, where N is the assigned port number. The non real-time side shall open this device to exchange data over the bound socket.

If a label was assigned (see XDDP\_LABEL) prior to binding the socket to a port, a registry link referring to the created pseudo-device will be automatically set up as /proc/xenomai/registry/rtipc/xddp/label, where label is the label string passed to setsockopt() for the XDDP\_LABEL option.

### • IPCPROTO IDDP

This action creates an endpoint for exchanging datagrams within the Xenomai domain.

*sipc\_family* must be AF\_RTIPC, *sipc\_port* is either -1, or a valid free port number between 0 and CONFIG\_XENO\_OPT\_IDDP\_NRPORT-1.

If *sipc\_port* is -1, a free port will be assigned automatically. The real-time peer shall connect to the same port for exchanging data over the bound socket.

If a label was assigned (see IDDP\_LABEL) prior to binding the socket to a port, a registry link referring to the assigned port number will be automatically set up as /proc/xenomai/registry/rtipc/iddp/label, where label is the label string passed to setsockopt() for the IDDP\_LABEL option.

### • IPCPROTO BUFP

This action creates an endpoint for a one-way byte stream within the Xenomai domain.

*sipc\_family* must be AF\_RTIPC, *sipc\_port* is either -1, or a valid free port number between 0 and CONFIG\_XENO\_OPT\_BUFP\_NRPORT-1.

If *sipc\_port* is -1, an available port will be assigned automatically. The real-time peer shall connect to the same port for exchanging data over the bound socket.

If a label was assigned (see BUFP\_LABEL) prior to binding the socket to a port, a registry link referring to the assigned port number will be automatically set up as /proc/xenomai/registry/rtipc/bufp/label, where label is the label string passed to setsockopt() for the BUFP\_LABEL option.

# Parameters

| in | addrlen | The size in bytes of the structure pointed to by addr. |
|----|---------|--|

### Returns

In addition to the standard error codes for bind(2), the following specific error code may be returned:

- -EFAULT (Invalid data address given)
- -ENOMEM (Not enough memory)
- -EINVAL (Invalid parameter)
- -EADDRINUSE (Socket already bound to a port, or no port available)

# Calling context:

non-RT

6.11.4.2 int close\_\_AF\_RTIPC (int sockfd)

Close a RTIPC socket descriptor.

Blocking calls to any of the sendmsg or recvmsg functions will be unblocked when the socket is closed and return with an error.

# **Parameters**

| in | sockfd | The socket descriptor to close. |
|----|--------|---------------------------------|
|----|--------|---------------------------------|

#### Returns

In addition to the standard error codes for close(2), the following specific error code may be returned: none

### Calling context:

non-RT

6.11.4.3 int connect AF RTIPC (int sockfd, const struct sockaddr ipc \* addr, socklen t addrlen )

Initiate a connection on a RTIPC socket.

### **Parameters**

| in | sockfd | The RTDM file descriptor obtained from the socket creation call. |
|----|--------|--|
| in | addr   | The address to connect the socket to (see struct sockaddr_ipc).  |

- If sipc\_port is a valid port for the protocol, it is used verbatim and the connection succeeds immediately, regardless of whether the destination is bound at the time of the call.
- If sipc\_port is -1 and a label was assigned to the socket, connect() blocks for the requested amount
  of time (see SO\_RCVTIMEO) until a socket is bound to the same label via bind(2) (see XDDP\_LABEL, IDDP\_LABEL, BUFP\_LABEL), in which case a connection is established between both
  endpoints.
- If sipc\_port is -1 and no label was assigned to the socket, the default destination address is cleared, meaning that any subsequent write to the socket will return -EDESTADDRREQ, until a valid destination address is set via connect(2) or bind(2).

#### **Parameters**

| in | addrlen | The size in bytes of the structure pointed to by addr. |
|----|---------|--|

### Returns

In addition to the standard error codes for connect(2), the following specific error code may be returned: none.

# Calling context:

RT/non-RT

6.11.4.4 int getpeername\_\_AF\_RTIPC ( int sockfd, struct **sockaddr\_ipc** \* addr, socklen\_t \* addrlen )

### Get socket peer.

The name of the remote endpoint for the socket is copied back (see struct sockaddr\_ipc). This is the default destination address for messages sent on the socket. It can be set either explicitly via connect(2), or implicitly via bind(2) if no connect(2) was called prior to binding the socket to a port, in which case both the local and remote names are equal.

6.11 Real-time IPC 79

### Returns

In addition to the standard error codes for getpeername(2), the following specific error code may be returned: none.

### Calling context:

RT/non-RT

6.11.4.5 int getsockname\_\_AF\_RTIPC ( int sockfd, struct **sockaddr\_ipc** \* addr, socklen\_t \* addrlen )

Get socket name.

The name of the local endpoint for the socket is copied back (see struct sockaddr\_ipc).

### Returns

In addition to the standard error codes for <code>getsockname(2)</code>, the following specific error code may be returned: none.

### Calling context:

RT/non-RT

6.11.4.6 int getsockopt\_\_AF\_RTIPC ( int sockfd, int level, int optname, void \* optval, socklen\_t \* optlen )

Get options on RTIPC sockets.

These functions allow to get various socket options. Supported Levels and Options:

- Level SOL\_SOCKET
- Level SOL XDDP
- Level SOL\_IDDP
- Level SOL BUFP

#### Returns

In addition to the standard error codes for getsockopt(2), the following specific error code may be returned: follow the option links above.

# Calling context:

RT/non-RT

6.11.4.7 ssize\_t recvmsg\_\_AF\_RTIPC ( int sockfd, struct msghdr \* msg, int flags )

Receive a message from a RTIPC socket.

#### **Parameters**

| in  | sockfd | The RTDM file descriptor obtained from the socket creation call. |
|-----|--------|--|
| out | msg    | The address the message header will be copied at.                |
| in  | flags  | Operation flags:   |

MSG\_DONTWAIT Non-blocking I/O operation. The caller will not be blocked whenever no message is immediately available for receipt at the time of the call, but will rather return with -EWOUL-DBLOCK.

### Note

IPCPROTO\_BUFP does not allow for short reads and always returns the requested amount of bytes, except in one situation: whenever some writer is waiting for sending data upon a buffer full condition, while the caller would have to wait for receiving a complete message. This is usually the sign of a pathological use of the BUFP socket, like defining an incorrect buffer size via BUFP\_BUFSZ. In that case, a short read is allowed to prevent a deadlock.

### Returns

In addition to the standard error codes for recvmsg(2), the following specific error code may be returned: none.

### Calling context:

RT

6.11.4.8 ssize t sendmsg AF RTIPC ( int sockfd, const struct msghdr \* msg, int flags )

### Send a message on a RTIPC socket.

### **Parameters**

| in | sockfd The RTDM file descriptor obtained from the socket creation call. |   |
|----|---|---|
| in | msg   | The address of the message header conveying the datagram. |
| in | flags   | Operation flags:  |

- MSG\_OOB Send out-of-band message. For all RTIPC protocols except IPCPROTO\_BUFP, sending out-of-band data actually means pushing them to the head of the receiving queue, so that the reader will always receive them before normal messages. IPCPROTO\_BUFP does not support out-of-band sending.
- MSG\_DONTWAIT Non-blocking I/O operation. The caller will not be blocked whenever the message cannot be sent immediately at the time of the call (e.g. memory shortage), but will rather return with -EWOULDBLOCK. Unlike other RTIPC protocols, IPCPROTO\_XDDP accepts but never considers MSG\_DONTWAIT since writing to a real-time XDDP endpoint is inherently a non-blocking operation.
- MSG\_MORE Accumulate data before sending. This flag is accepted by the IPCPROTO\_XDDP
  protocol only, and tells the send service to accumulate the outgoing data into an internal streaming
  buffer, instead of issuing a datagram immediately for it. See XDDP\_BUFSZ for more.

### Note

No RTIPC protocol allows for short writes, and only complete messages are sent to the peer.

6.11 Real-time IPC 81

# Returns

In addition to the standard error codes for sendmsg(2), the following specific error code may be returned: none.

# Calling context:

RT

6.11.4.9 int setsockopt\_\_AF\_RTIPC ( int sockfd, int level, int optname, const void \* optval, socklen t optlen )

Set options on RTIPC sockets.

These functions allow to set various socket options. Supported Levels and Options:

- Level SOL\_SOCKET
- Level SOL\_XDDP
- Level SOL IDDP
- Level SOL BUFP

#### Returns

In addition to the standard error codes for setsockopt(2), the following specific error code may be returned: follow the option links above.

# Calling context:

non-RT

6.11.4.10 int socket\_\_AF\_RTIPC (int domain = AF\_RTIPC, int type = SOCK\_DGRAM, int protocol)

Create an endpoint for communication in the AF\_RTIPC domain.

### **Parameters**

| in | domain   | The communication domain. Must be AF_RTIPC.                           |
|----|----------|---|
| in | type     | The socket type. Must be SOCK_DGRAM.                                  |
| in | protocol | Any of IPCPROTO_XDDP, IPCPROTO_IDDP, or IPCPROTO_BUFP.                |
|    |          | IPCPROTO_IPC is also valid, and refers to the default RTIPC protocol, |
|    |          | namely IPCPROTO_IDDP.   |

### Returns

In addition to the standard error codes for socket(2), the following specific error code may be returned:

• -ENOPROTOOPT (Protocol is known, but not compiled in the RTIPC driver). See RTIPC protocols for available protocols.

### Calling context:

non-RT

# 6.12 Asynchronous Procedure Calls

Services for scheduling function calls in the Linux domain.

Collaboration diagram for Asynchronous Procedure Calls:



# **Functions**

- int xnapc\_alloc (const char \*name, void(\*handler)(void \*cookie), void \*cookie)

  Allocate an APC slot.
- void xnapc\_free (int apc)

Releases an APC slot.

static void xnapc\_schedule (int apc)

Schedule an APC invocation.

# 6.12.1 Detailed Description

Services for scheduling function calls in the Linux domain. APC is the acronym for Asynchronous Procedure Call, a mean by which activities from the Xenomai domain can schedule deferred invocations of handlers to be run into the Linux domain, as soon as possible when the Linux kernel gets back in control.

Up to BITS\_PER\_LONG APC slots can be active at any point in time.

APC support is built upon the interrupt pipeline's virtual interrupt support.

# 6.12.2 Function Documentation

6.12.2.1 int xnapc alloc ( const char \* name, void(\*)(void \*cookie) handler, void \* cookie )

# Allocate an APC slot.

APC is the acronym for Asynchronous Procedure Call, a mean by which activities from the Xenomai domain can schedule deferred invocations of handlers to be run into the Linux domain, as soon as possible when the Linux kernel gets back in control. Up to BITS\_PER\_LONG APC slots can be active at any point in time. APC support is built upon the interrupt pipeline's virtual interrupt support.

Any Linux kernel service which is callable from a regular Linux interrupt handler is in essence available to APC handlers.

Parameters

| name    | is a symbolic name identifying the APC which will get reported through the            |
|---------|---|
|         | /proc/xenomai/apc interface. Passing NULL to create an anonymous APC is al-           |
|         | lowed.  |
| handler | The address of the fault handler to call upon exception condition. The handle will be |
|         | passed the <i>cookie</i> value unmodified.  |
| cookie  | A user-defined opaque pointer the APC handler receives as its sole argument.          |

### Returns

a valid APC identifier is returned upon success, or a negative error code otherwise:

- -EINVAL is returned if handler is invalid.
- -EBUSY is returned if no more APC slots are available.

### Tags

#### unrestricted

6.12.2.2 void xnapc free (int apc)

# Releases an APC slot.

This service deallocates an APC slot obtained by xnapc alloc().

### **Parameters**

| apc   The APC id. to release, as returned by a successful | call to the xnapc alloc() service. |
|---|------------------------------------|
|---|------------------------------------|

# Tags

### unrestricted

6.12.2.3 static inline int xnapc\_schedule ( int apc ) [inline], [static]

### Schedule an APC invocation.

This service marks the APC as pending for the Linux domain, so that its handler will be called as soon as possible, when the Linux domain gets back in control.

When posted from the Linux domain, the APC handler is fired as soon as the interrupt mask is explicitly cleared by some kernel code. When posted from the Xenomai domain, the APC handler is fired as soon as the Linux domain is resumed, i.e. after Xenomai has completed all its pending duties.

# Parameters

| арс | The APC id. to schedule. |
|-----|--------------------------|

This service can be called from:

• Any domain context, albeit the usual calling place is from the Xenomai domain.

# 6.13 In-kernel arithmetics

A collection of helpers performing arithmetics not implicitly available from kernel context via GCC helpers.

Collaboration diagram for In-kernel arithmetics:



# **Functions**

• unsigned long long xnarch\_generic\_full\_divmod64 (unsigned long long a, unsigned long long b, unsigned long long \*rem)

Architecture-independent div64 operation with remainder.

# 6.13.1 Detailed Description

A collection of helpers performing arithmetics not implicitly available from kernel context via GC-C helpers. Many of these routines enable 64bit arithmetics on 32bit systems. Xenomai architecture ports normally implement the performance critical ones in hand-crafted assembly code (see kernel/cobalt/arch/<arch>/include/asm/xenomai/uapi/arith.h).

# 6.13.2 Function Documentation

6.13.2.1 unsigned long long xnarch\_generic\_full\_divmod64 ( unsigned long long a, unsigned long long \* rem )

Architecture-independent div64 operation with remainder.

### **Parameters**

| а   | dividend   |
|-----|--|
| b   | divisor  |
| rem | if non-NULL, a pointer to a 64bit variable for collecting the remainder from the divi- |
|     | sion.  |

# 6.14 Buffer descriptor

Abstraction for copying data to/from different address spaces.

Collaboration diagram for Buffer descriptor:



# **Functions**

- static void xnbufd\_map\_uread (struct xnbufd \*bufd, const void \_\_user \*ptr, size\_t len)
   Initialize a buffer descriptor for reading from user memory.
- static void xnbufd\_map\_uwrite (struct xnbufd \*bufd, void \_\_user \*ptr, size\_t len)

Initialize a buffer descriptor for writing to user memory.

ssize\_t xnbufd\_unmap\_uread (struct xnbufd \*bufd)

Finalize a buffer descriptor obtained from xnbufd\_map\_uread().

ssize\_t xnbufd\_unmap\_uwrite (struct xnbufd \*bufd)

Finalize a buffer descriptor obtained from xnbufd\_map\_uwrite().

static void xnbufd\_map\_kread (struct xnbufd \*bufd, const void \*ptr, size\_t len)

Initialize a buffer descriptor for reading from kernel memory.

• static void xnbufd\_map\_kwrite (struct xnbufd \*bufd, void \*ptr, size\_t len)

Initialize a buffer descriptor for writing to kernel memory.

• ssize t xnbufd unmap kread (struct xnbufd \*bufd)

Finalize a buffer descriptor obtained from xnbufd\_map\_kread().

• ssize t xnbufd unmap kwrite (struct xnbufd \*bufd)

Finalize a buffer descriptor obtained from xnbufd\_map\_kwrite().

ssize\_t xnbufd\_copy\_to\_kmem (void \*ptr, struct xnbufd \*bufd, size\_t len)

Copy memory covered by a buffer descriptor to kernel memory.

• ssize\_t xnbufd\_copy\_from\_kmem (struct xnbufd \*bufd, void \*from, size\_t len)

Copy kernel memory to the area covered by a buffer descriptor.

void xnbufd\_invalidate (struct xnbufd \*bufd)

Invalidate a buffer descriptor.

static void xnbufd\_reset (struct xnbufd \*bufd)

Reset a buffer descriptor.

# 6.14.1 Detailed Description

Abstraction for copying data to/from different address spaces. A buffer descriptor is a simple abstraction dealing with copy operations to/from memory buffers which may belong to different address spaces.

To this end, the buffer descriptor library provides a small set of copy routines which are aware of address space restrictions when moving data, and a generic container type which can hold a reference to - or cover - a particular memory area, either present in kernel space, or in any of the existing user memory contexts.

The goal of the buffer descriptor abstraction is to hide address space specifics from Xenomai services dealing with memory areas, allowing them to operate on multiple address spaces seamlessly.

The common usage patterns are as follows:

 Implementing a Xenomai syscall returning a bulk of data to the caller, which may have to be copied back to either kernel or user space:

```
[Syscall implementation]
ssize_t rt_bulk_read_inner(struct xnbufd *bufd)
    ssize_t ret;
    size_t len;
void *bulk;
    bulk = get_next_readable_bulk(&len);
    ret = xnbufd_copy_from_kmem(bufd, bulk, min(bufd->b_len, len));
    free_bulk(bulk);
    ret = this_may_fail();
    if (ret)
            xnbufd_invalidate(bufd);
    return ret;
}
[Kernel wrapper for in-kernel calls]
int rt_bulk_read(void *ptr, size_t len)
    struct xnbufd bufd;
    ssize_t ret;
    xnbufd_map_kwrite(&bufd, ptr, len);
    ret = rt_bulk_read_inner(&bufd);
    xnbufd_unmap_kwrite(&bufd);
    return ret;
[Userland trampoline for user syscalls]
int __rt_bulk_read(struct pt_regs *regs)
    struct xnbufd bufd;
    void __user *ptr;
    ssize t ret:
    size_t len;
    ptr = (void __user *)__xn_reg_arg1(regs);
    len = __xn_reg_arg2(regs);
    xnbufd_map_uwrite(&bufd, ptr, len);
    ret = rt_bulk_read_inner(&bufd);
    xnbufd_unmap_uwrite(&bufd);
    return ret;
}
```

• Implementing a Xenomai syscall receiving a bulk of data from the caller, which may have to be read from either kernel or user space:

```
[Syscall implementation]
ssize_t rt_bulk_write_inner(struct xnbufd *bufd)
{
    void *bulk = get_free_bulk(bufd->b_len);
    return xnbufd_copy_to_kmem(bulk, bufd, bufd->b_len);
}
[Kernel wrapper for in-kernel calls]
int rt_bulk_write(const void *ptr, size_t len)
{
    struct xnbufd bufd;
    ssize_t ret;
    xnbufd_map_kread(&bufd, ptr, len);
    ret = rt_bulk_write_inner(&bufd);
    xnbufd_unmap_kread(&bufd);
    return ret;
}
[Userland trampoline for user syscalls]
```

```
int __rt_bulk_write(struct pt_regs *regs)
{
    struct xnbufd bufd;
    void __user *ptr;
    ssize_t ret;
    size_t len;

    ptr = (void __user *)__xn_reg_arg1(regs);
    len = __xn_reg_arg2(regs);

    xnbufd_map_uread(&bufd, ptr, len);
    ret = rt_bulk_write_inner(&bufd);
    xnbufd_unmap_uread(&bufd);

    return ret;
}
```

### 6.14.2 Function Documentation

```
6.14.2.1 ssize t xnbufd copy from kmem ( struct xnbufd * bufd, void * from, size t len )
```

Copy kernel memory to the area covered by a buffer descriptor.

This routine copies *len* bytes from the kernel memory starting at *from* to the area referred to by the buffer descriptor *bufd*. xnbufd\_copy\_from\_kmem() tracks the write offset within the destination memory internally, so that it may be called several times in a loop, until the entire memory area is stored.

The destination address space is dealt with, according to the following rules:

- if bufd refers to a writable kernel area (i.e. see xnbufd\_map\_kwrite()), the copy is immediatly and fully performed with no restriction.
- if bufd refers to a writable user area (i.e. see <a href="mailto:xnbufd\_map\_uwrite">xnbufd\_map\_uwrite</a>()), the copy is performed only if that area lives in the currently active address space, and only if the caller may sleep Linux-wise to process any potential page fault which may arise while writing to that memory.
- if bufd refers to a user area which may not be immediately written to from the current context, the copy is postponed until xnbufd\_unmap\_uwrite() is invoked for ubufd, at which point the copy will take place. In such a case, the source memory is transferred to a carry over buffer allocated internally; this operation may lead to request dynamic memory from the nucleus heap if len is greater than 64 bytes.

#### **Parameters**

| bı  | ufd | The address of the buffer descriptor covering the user memory to copy data to. |
|-----|-----|--|
| fro | om  | The start address of the kernel memory to copy from.                           |
|     | len | The length of the kernel memory to copy to bufd.                               |

### Returns

The number of bytes written so far to the memory area covered by *ubufd*. Otherwise,

 -ENOMEM is returned when no memory is available from the nucleus heap to allocate the carry over buffer.

### Tags

unrestricted

#### Note

Calling this routine while holding the nklock and/or running with interrupts disabled is invalid, and doing so will trigger a debug assertion.

This routine may switch the caller to secondary mode if a page fault occurs while reading from the user area. For that reason, xnbufd\_copy\_to\_kmem() may only be called from a preemptible section (Linux-wise).

```
6.14.2.2 ssize t xnbufd copy to kmem (void * to, struct xnbufd * bufd, size t len )
```

Copy memory covered by a buffer descriptor to kernel memory.

This routine copies *len* bytes from the area referred to by the buffer descriptor *bufd* to the kernel memory area *to.* xnbufd\_copy\_to\_kmem() tracks the read offset within the source memory internally, so that it may be called several times in a loop, until the entire memory area is loaded.

The source address space is dealt with, according to the following rules:

- if *bufd* refers to readable kernel area (i.e. see xnbufd\_map\_kread()), the copy is immediately and fully performed with no restriction.
- if bufd refers to a readable user area (i.e. see xnbufd\_map\_uread()), the copy is performed only if that area lives in the currently active address space, and only if the caller may sleep Linux-wise to process any potential page fault which may arise while reading from that memory.
- any attempt to read from *bufd* from a non-suitable context is considered as a bug, and will raise a panic assertion when the nucleus is compiled in debug mode.

### **Parameters**

| to   | The start address of the kernel memory to copy to.                               |
|------|--|
| bufd | The address of the buffer descriptor covering the user memory to copy data from. |
| len  | The length of the user memory to copy from <i>bufd</i> .                         |

# Returns

The number of bytes read so far from the memory area covered by *ubufd*. Otherwise:

• -EINVAL is returned upon attempt to read from the user area from an invalid context. This error is only returned when the debug mode is disabled; otherwise a panic assertion is raised.

# Tags

# task-unrestricted

### Note

Calling this routine while holding the nklock and/or running with interrupts disabled is invalid, and doing so will trigger a debug assertion.

This routine may switch the caller to secondary mode if a page fault occurs while reading from the user area. For that reason, xnbufd\_copy\_to\_kmem() may only be called from a preemptible section (Linux-wise).

6.14.2.3 void xnbufd\_invalidate ( struct xnbufd \* bufd )

Invalidate a buffer descriptor.

The buffer descriptor is invalidated, making it unusable for further copy operations. If an outstanding carry over buffer was allocated by a previous call to <a href="mailto:xnbufd\_copy\_from\_kmem">xnbufd\_copy\_from\_kmem</a>(), it is immediately freed so that no data transfer will happen when the descriptor is finalized.

The only action that may subsequently be performed on an invalidated descriptor is calling the relevant unmapping routine for it. For that reason, xnbufd\_invalidate() should be invoked on the error path when data may have been transferred to the carry over buffer.

#### **Parameters**

| bufd | The address of the buffer descriptor to invalidate. |
|------|---|

### Tags

### unrestricted

6.14.2.4 void xnbufd\_map\_kread ( struct xnbufd \* bufd, const void \* ptr, size\_t len ) [inline], [static]

Initialize a buffer descriptor for reading from kernel memory.

The new buffer descriptor may be used to copy data from kernel memory. This routine should be used in pair with xnbufd\_unmap\_kread().

# **Parameters**

| bufd | The address of the buffer descriptor which will map a len bytes kernel memory area, |
|------|---|
|      | starting from <i>ptr</i> .  |
| ptr  | The start of the kernel buffer to map.  |
| len  | The length of the kernel buffer starting at ptr.                                    |

### Tags

### unrestricted

6.14.2.5 void xnbufd\_map\_kwrite ( struct xnbufd \* bufd, void \* ptr, size\_t len ) [inline], [static]

Initialize a buffer descriptor for writing to kernel memory.

The new buffer descriptor may be used to copy data to kernel memory. This routine should be used in pair with xnbufd unmap kwrite().

#### **Parameters**

| bufd | The address of the buffer descriptor which will map a <i>len</i> bytes kernel memory area, |
|------|--|
|      | starting from <i>ptr</i> .   |
| ptr  | The start of the kernel buffer to map.   |
| len  | The length of the kernel buffer starting at ptr.   |

# Tags

### unrestricted

6.14.2.6 void xnbufd\_map\_uread ( struct xnbufd \* bufd, const void \_\_user \* ptr, size\_t len ) [inline], [static]

Initialize a buffer descriptor for reading from user memory.

The new buffer descriptor may be used to copy data from user memory. This routine should be used in pair with xnbufd\_unmap\_uread().

#### **Parameters**

| bufd | The address of the buffer descriptor which will map a <i>len</i> bytes user memory area, starting from <i>ptr. ptr</i> is never dereferenced directly, since it may refer to a buffer that lives in another address space. |
|------|--|
| ptr  | The start of the user buffer to map.   |
| len  | The length of the user buffer starting at ptr.   |

# Tags

# task-unrestricted

Initialize a buffer descriptor for writing to user memory.

The new buffer descriptor may be used to copy data to user memory. This routine should be used in pair with xnbufd\_unmap\_uwrite().

#### **Parameters**

| bufd | The address of the buffer descriptor which will map a <i>len</i> bytes user memory area, starting from <i>ptr. ptr</i> is never dereferenced directly, since it may refer to a buffer that lives in another address space. |
|------|--|
| ptr  | The start of the user buffer to map.   |
| len  | The length of the user buffer starting at ptr.   |

# Tags

# task-unrestricted

6.14.2.8 void xnbufd\_reset ( struct xnbufd \* bufd ) [inline], [static]

Reset a buffer descriptor.

The buffer descriptor is reset, so that all data already copied is forgotten. Any carry over buffer allocated is kept, though.

# **Parameters**

| bufd The address of the buffer descriptor to reset. |  |
|---|--|
|---|--|

# Tags

### unrestricted

6.14.2.9 ssize\_t xnbufd\_unmap\_kread ( struct xnbufd \* bufd )

Finalize a buffer descriptor obtained from xnbufd\_map\_kread().

This routine finalizes a buffer descriptor previously initialized by a call to xnbufd\_map\_kread(), to read data from a kernel area.

**Parameters** 

bufd | The address of the buffer descriptor to finalize.

### Returns

The number of bytes read so far from the memory area covered by ubufd.

# Tags

task-unrestricted

6.14.2.10 ssize\_t xnbufd\_unmap\_kwrite ( struct xnbufd \* bufd )

Finalize a buffer descriptor obtained from xnbufd\_map\_kwrite().

This routine finalizes a buffer descriptor previously initialized by a call to xnbufd\_map\_kwrite(), to write data to a kernel area.

**Parameters** 

bufd The address of the buffer descriptor to finalize.

### Returns

The number of bytes written so far to the memory area covered by ubufd.

# Tags

task-unrestricted

6.14.2.11 ssize t xnbufd unmap uread ( struct xnbufd \* bufd )

Finalize a buffer descriptor obtained from xnbufd map uread().

This routine finalizes a buffer descriptor previously initialized by a call to xnbufd\_map\_uread(), to read data from a user area.

**Parameters** 

bufd The address of the buffer descriptor to finalize.

# Returns

The number of bytes read so far from the memory area covered by ubufd.

# Tags

task-unrestricted

### Note

Calling this routine while holding the nklock and/or running with interrupts disabled is invalid, and doing so will trigger a debug assertion.

6.14.2.12 ssize\_t xnbufd\_unmap\_uwrite ( struct xnbufd \* bufd )

Finalize a buffer descriptor obtained from xnbufd\_map\_uwrite().

This routine finalizes a buffer descriptor previously initialized by a call to xnbufd\_map\_uwrite(), to write data to a user area.

The main action taken is to write the contents of the kernel memory area passed to xnbufd\_copy\_from\_kmem() whenever the copy operation was postponed at that time; the carry over buffer is eventually released as needed. If xnbufd\_copy\_from\_kmem() was allowed to copy to the destination user memory at once, then xnbufd\_unmap\_uwrite() leads to a no-op.

**Parameters** 

bufd The address of the buffer descriptor to finalize.

Returns

The number of bytes written so far to the memory area covered by ubufd.

Tags

task-unrestricted

Note

Calling this routine while holding the nklock and/or running with interrupts disabled is invalid, and doing so will trigger a debug assertion.

6.15 Clock services 93

# 6.15 Clock services

Collaboration diagram for Clock services:



# **Functions**

int xnclock\_register (struct xnclock \*clock)

Register a Xenomai clock.

void xnclock\_deregister (struct xnclock \*clock)

Deregister a Xenomai clock.

void xnclock\_tick (struct xnclock \*clock)

Process a clock tick.

void xnclock\_adjust (struct xnclock \*clock, xnsticks\_t delta)

Adjust a clock time.

# 6.15.1 Detailed Description

# 6.15.2 Function Documentation

6.15.2.1 void xnclock\_adjust ( struct xnclock \* clock, xnsticks\_t delta )

# Adjust a clock time.

This service changes the epoch for the given clock by applying the specified tick delta on its wallclock offset.

# **Parameters**

| clock | The clock to adjust.                           |
|-------|--|
| delta | The adjustment value expressed in nanoseconds. |

# Tags

task-unrestricted, atomic-entry

### Note

Xenomai tracks the system time in *nkclock*, as a monotonously increasing count of ticks since the epoch. The epoch is initially the same as the underlying machine time.

6.15.2.2 void xnclock\_deregister ( struct xnclock \* clock )

Deregister a Xenomai clock.

This service uninstalls a Xenomai clock previously registered with xnclock\_register().

This service may be called once all timers driven by *clock* have been stopped.

6.15 Clock services 95

### **Parameters**

| clock | The clock to deregister. |
|-------|--------------------------|

Tags

secondary-only

6.15.2.3 int xnclock\_register ( struct xnclock \* clock )

Register a Xenomai clock.

This service installs a new clock which may be used to drive Xenomai timers.

**Parameters** 

clock The new clock to register.

Tags

secondary-only

6.15.2.4 void xnclock\_tick ( struct xnclock \* clock )

Process a clock tick.

This routine processes an incoming *clock* event, firing elapsed timers as appropriate.

**Parameters** 

clock The clock for which a new event was received.

Tags

coreirq-only, atomic-entry

Note

The current CPU must be part of the real-time affinity set, otherwise weird things may happen.

References xnsched::htimer, xnsched::lflags, and xnsched::status.

# 6.16 Debugging services

Collaboration diagram for Debugging services:




# 6.16.1 Detailed Description

# 6.17 Dynamic memory allocation services

The implementation of the memory allocator follows the algorithm described in a USENIX 1988 paper called "Design of a General Purpose Memory Allocator for the 4.3BSD Unix Kernel" by Marshall K.

Collaboration diagram for Dynamic memory allocation services:



# **Functions**

int xnheap\_init (struct xnheap \*heap, void \*heapaddr, unsigned long heapsize, unsigned long pagesize)

Initialize a memory heap.

void xnheap\_set\_label (struct xnheap \*heap, const char \*name,...)

Set the heap's label string.

void xnheap\_destroy (struct xnheap \*heap, void(\*flushfn)(struct xnheap \*heap, void \*extaddr, unsigned long extsize, void \*cookie), void \*cookie)

Destroys a memory heap.

• int xnheap\_extend (struct xnheap \*heap, void \*extaddr, unsigned long extsize)

Extend a memory heap.

void \* xnheap\_alloc (struct xnheap \*heap, unsigned long size)

Allocate a memory block from a memory heap.

• int xnheap\_test\_and\_free (struct xnheap \*heap, void \*block, int(\*ckfn)(void \*block))

Test and release a memory block to a memory heap.

int xnheap\_free (struct xnheap \*heap, void \*block)

Release a memory block to a memory heap.

# 6.17.1 Detailed Description

The implementation of the memory allocator follows the algorithm described in a USENIX 1988 paper called "Design of a General Purpose Memory Allocator for the 4.3BSD Unix Kernel" by Marshall K. McKusick and Michael J. Karels. You can find it at various locations on the net, including <a href="http://docs.-FreeBSD.org/44doc/papers/kernmalloc.pdf">http://docs.-FreeBSD.org/44doc/papers/kernmalloc.pdf</a>. A minor variation allows this implementation to have 'extendable' heaps when needed, with multiple memory extents providing autonomous page address spaces.

The data structures hierarchy is as follows:

Implementation constraints

98

- Minimum page size is 2 \*\* XNHEAP MINLOG2 (must be large enough to hold a pointer).
- Maximum page size is 2 \*\* XNHEAP MAXLOG2.
- Minimum block size equals the minimum page size.
- Requested block size smaller than the minimum block size is rounded to the minimum block size.
- Requested block size larger than 2 times the page size is rounded to the next page boundary and obtained from the free page list. So we need a bucket for each power of two between XNHE-AP\_MINLOG2 and XNHEAP\_MAXLOG2 inclusive, plus one to honor requests ranging from the maximum page size to twice this size.

# 6.17.2 Function Documentation

6.17.2.1 void \* xnheap\_alloc ( struct xnheap \* heap, unsigned long size )

Allocate a memory block from a memory heap.

Allocates a contiguous region of memory from an active memory heap. Such allocation is guaranteed to be time-bounded.

**Parameters** 

| heap | The descriptor address of the heap to get memory from.                                 |
|------|--|
| size | The size in bytes of the requested block. Sizes lower or equal to the page size are    |
|      | rounded either to the minimum allocation size if lower than this value, or to the min- |
|      | imum alignment size if greater or equal to this value. In the current implementation,  |
|      | with MINALLOC = 8 and MINALIGN = 16, a 7 bytes request will be rounded to 8            |
|      | bytes, and a 17 bytes request will be rounded to 32.                                   |

#### Returns

The address of the allocated region upon success, or NULL if no memory is available from the specified heap.

Tags

### unrestricted

Referenced by xnshadow\_map\_user().

6.17.2.2 void xnheap\_destroy ( struct xnheap \* heap, void(\*)(struct xnheap \*heap, void \*extaddr, unsigned long extsize, void \*cookie) flushfn, void \* cookie )

Destroys a memory heap.

Destroys a memory heap.

### **Parameters**

| heap    | The descriptor address of the destroyed heap.   |
|---------|---|
| flushfn | If non-NULL, the address of a flush routine which will be called for each extent      |
|         | attached to the heap. This routine can be used by the calling code to further release |
|         | the heap memory.  |
| cookie  | If flushfn is non-NULL, cookie is an opaque pointer which will be passed unmodified   |
|         | to flushfn.   |

# Tags

### task-unrestricted

6.17.2.3 int xnheap\_extend ( struct xnheap \* heap, void \* extaddr, unsigned long extsize )

# Extend a memory heap.

Add a new extent to an existing memory heap.

#### **Parameters**

| heap    | The descriptor address of the heap to add an extent to.                            |
|---------|--|
| extaddr | The address of the extent memory.  |
| extsize | The size of the extent memory (in bytes). In the current implementation, this size |
|         | must match the one of the initial extent passed to xnheap_init().                  |

### Returns

0 is returned upon success, or -EINVAL is returned if extsize differs from the initial extent's size.

### Tags

### unrestricted

6.17.2.4 int xnheap\_free ( struct xnheap \* heap, void \* block )

Release a memory block to a memory heap.

Releases a memory region to the memory heap it was previously allocated from.

# **Parameters**

| heap The descriptor address of the heap to release memory to. |   |
|---|---|
| block   | The address of the region to be returned to the heap. |

### Returns

0 is returned upon success, or one of the following error codes:

- -EFAULT is returned whenever the memory address is outside the heap address space.
- -EINVAL is returned whenever the memory address does not represent a valid block.

### Tags

### unrestricted

References xnheap\_test\_and\_free().

6.17.2.5 int xnheap\_init ( struct xnheap \* heap, void \* heapaddr, unsigned long heapsize, unsigned long pagesize )

Initialize a memory heap.

Initializes a memory heap suitable for time-bounded allocation requests of dynamic memory.

### **Parameters**

| heap     | The address of a heap descriptor which will be used to store the allocation data.    |
|----------|--|
|          | This descriptor must always be valid while the heap is active therefore it must be   |
|          | allocated in permanent memory.   |
| heapaddr | The address of the heap storage area. All allocations will be made from the given    |
|          | area in time-bounded mode. Since additional extents can be added to a heap, this     |
|          | parameter is also known as the "initial extent".                                     |
| heapsize | The size in bytes of the initial extent pointed at by heapaddr. heapsize must be a   |
|          | multiple of pagesize and lower than 16 Mbytes. heapsize must be large enough to      |
|          | contain a dynamically-sized internal header. The following formula gives the size of |
|          | this header:   |
|          | H = heapsize, P=pagesize, M=sizeof(struct pagemap), E=sizeof(struct xnextent)        |
|          | hdrsize = $((H - E) * M) / (M + 1)$  |
|          | This value is then aligned on the next 16-byte boundary. The routine xnheap          |
|          | overhead() computes the corrected heap size according to the previous formula.       |
| pagesize | The size in bytes of the fundamental memory page which will be used to subdivide     |
|          | the heap internally. Choosing the right page size is important regarding perfor-     |
|          | mance and memory fragmentation issues, so it might be a good idea to take a look     |
|          | at http://docs.FreeBSD.org/44doc/papers/kernmalloc.pdf to pick the best one          |
|          | for your needs. In the current implementation, pagesize must be a power of two in    |
|          | the range [ 8 32768 ] inclusive.   |

# Returns

0 is returned upon success, or one of the following error codes:

• -EINVAL is returned whenever a parameter is invalid.

# Tags

### task-unrestricted

6.17.2.6 void xnheap\_set\_label ( struct xnheap \* heap, const char \* label, ... )

Set the heap's label string.

Set the heap label that will be used in statistic outputs.

# **Parameters**

| he | eap  | The address of a heap descriptor.  |  |
|----|------|--|--|
| la | ibel | Label string displayed in statistic outputs. This parameter can be a format string, in |  |
|    |      | which case succeeding parameters will be used to resolve the final label.              |  |

# Tags

# task-unrestricted

6.17.2.7 int xnheap\_test\_and\_free ( struct xnheap \* heap, void \* block, int(\*)(void \*block) ckfn )

Test and release a memory block to a memory heap.

Releases a memory region to the memory heap it was previously allocated from. Before the actual release is performed, an optional user-defined can be invoked to check for additional criteria with respect to the request consistency.

### **Parameters**

| heap   The        | e descriptor address of the heap to release memory to.   |
|-------------------|--|
| block The         | e address of the region to be returned to the heap.  |
| mei<br>exp<br>suc | e address of a user-supplied verification routine which is to be called after the mory address specified by <i>block</i> has been checked for validity. The routine is sected to proceed to further consistency checks, and either return zero upon ecess, or non-zero upon error. In the latter case, the release process is aborted, d <i>ckfn's</i> return value is passed back to the caller of this service as its error return |

# Warning

ckfn must not reschedule either directly or indirectly.

# Returns

0 is returned upon success, or -EINVAL is returned whenever the block is not a valid region of the specified heap. Additional return codes can also be defined locally by the *ckfn* routine.

# Tags


# unrestricted

Referenced by xnheap\_free().

# 6.18 Cobalt

Cobalt supplements the native Linux kernel in dual kernel configurations.

Collaboration diagram for Cobalt:

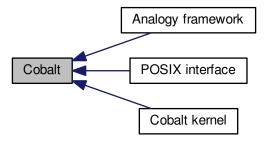

# Modules

Cobalt kernel

The Cobalt core is a co-kernel which supplements the Linux kernel for delivering real-time services with very low latency.

- Analogy framework
  - A RTDM-based interface for implementing DAQ card drivers.
- POSIX interface

The Cobalt/POSIX interface is an implementation of a subset of the Single Unix specification over the Cobalt core.

# 6.18.1 Detailed Description

Cobalt supplements the native Linux kernel in dual kernel configurations. It deals with all time-critical activities, such as handling interrupts, and scheduling real-time threads. The Cobalt kernel has higher priority over all the native kernel activities.


Cobalt provides an implementation of the POSIX and RTDM interfaces based on a set of generic RTOS building blocks.

6.19 Cobalt kernel

# 6.19 Cobalt kernel

The Cobalt core is a co-kernel which supplements the Linux kernel for delivering real-time services with very low latency.

Collaboration diagram for Cobalt kernel:

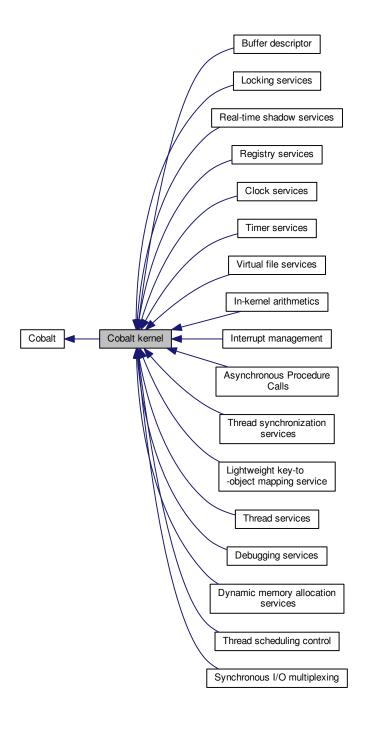

# Modules

• Asynchronous Procedure Calls

Services for scheduling function calls in the Linux domain.

In-kernel arithmetics

A collection of helpers performing arithmetics not implicitly available from kernel context via GCC helpers.

Buffer descriptor

Abstraction for copying data to/from different address spaces.

- Clock services
- Debugging services
- Dynamic memory allocation services

The implementation of the memory allocator follows the algorithm described in a USENIX 1988 paper called "Design of a General Purpose Memory Allocator for the 4.3BSD Unix Kernel" by Marshall K.

- Interrupt management
- Locking services

The Xenomai core deals with concurrent activities from two distinct kernels running side-by-side.

Lightweight key-to-object mapping service

A map is a simple indexing structure which associates unique integer keys with pointers to objects.

Registry services

The registry provides a mean to index object descriptors on unique alphanumeric keys.

- Thread scheduling control
- Synchronous I/O multiplexing

This module implements the services needed for implementing the POSIX select() service, or any other event multiplexing services.

Real-time shadow services

Real-time shadow services.

- Thread synchronization services
- Thread services
- Timer services

The Xenomai timer facility depends on a clock source (xnclock) for scheduling the next activation times.

Virtual file services

Virtual files provide a mean to export Xenomai object states to user-space, based on common kernel interfaces.

# 6.19.1 Detailed Description

The Cobalt core is a co-kernel which supplements the Linux kernel for delivering real-time services with very low latency. It implements a set of generic RTOS building blocks, which the Cobalt/POSIX and Cobalt/RTDM APIs are based on. Cobalt has higher priority over the Linux kernel activities.

# 6.19.1.1 Dual kernel service tags

The Cobalt kernel services may be restricted to particular calling contexts, or entail specific side-effects.

To describe this information, each service documented by this section bears a set of tags when applica-

The table below matches the tags used throughout the documentation with the description of their meaning for the caller.

# Context tags

| Tag | Context on entry |  |
|-----|------------------|--|
|     |                  |  |

6.19 Cobalt kernel

| primary-only      | Must be called from a Cobalt task in primary |
|-------------------|--|
|                   | mode   |
| coreirq-only      | Must be called from a Cobalt IRQ handler     |
| secondary-only    | Must be called from a Cobalt task in         |
|                   | secondary mode or regular Linux task         |
| rtdm-task         | Must be called from a RTDM driver task       |
| mode-unrestricted | Must be called from a Cobalt task in either  |
|                   | primary or secondary mode                    |
| task-unrestricted | May be called from a Cobalt or regular Linux |
|                   | task indifferently                           |
| unrestricted      | May be called from any context previously    |
|                   | described                                    |
| atomic-entry      | Caller must currently hold the big Cobalt    |
|                   | kernel lock (nklock)                         |

# Possible side-effects

| Tag          | Description                          |
|--------------|--------------------------------------|
| might-switch | The Cobalt kernel may switch context |

# 6.20 Interrupt management

Collaboration diagram for Interrupt management:



# **Functions**

void xnintr\_destroy (struct xnintr \*intr)

Destroy an interrupt object.

• int xnintr attach (struct xnintr \*intr, void \*cookie)

Attach an interrupt object.

void xnintr\_detach (struct xnintr \*intr)

Detach an interrupt object.

void xnintr\_enable (struct xnintr \*intr)

Enable an interrupt object.

void xnintr\_disable (struct xnintr \*intr)

Disable an interrupt object.

• void xnintr\_affinity (struct xnintr \*intr, cpumask\_t cpumask)

Set interrupt's processor affinity.

• int xnintr\_init (struct xnintr \*intr, const char \*name, unsigned int irq, xnisr\_t isr, xniack\_t iack, int flags)

Initialize an interrupt object.

# 6.20.1 Detailed Description

# 6.20.2 Function Documentation

6.20.2.1 void xnintr\_affinity ( struct xnintr \* intr, cpumask\_t cpumask )

Set interrupt's processor affinity.

Restricts the IRQ associated with the interrupt object *intr* to be received only on processors which bits are set in *cpumask*.

# **Parameters**

| intr  | The descriptor address of the interrupt object which affinity is to be changed. |  |
|---|---|--|
| cpumask The new processor affinity of the interrupt object. |   |  |

Note

Depending on architectures, setting more than one bit in *cpumask* could be meaningless.

Tags

secondary-only

6.20.2.2 int xnintr\_attach ( struct xnintr \* intr, void \* cookie )

Attach an interrupt object.

Attach an interrupt object previously initialized by xnintr\_init(). After this operation is completed, all IRQs received from the corresponding interrupt channel are directed to the object's ISR.

#### **Parameters**

| intr   | tr The descriptor address of the interrupt object to attach.                         |  |
|--------|--|--|
| cookie | A user-defined opaque value which is stored into the interrupt object descriptor for |  |
|        | further retrieval by the ISR/ISR handlers.   |  |

### Returns

0 is returned on success. Otherwise:

- -EINVAL is returned if a low-level error occurred while attaching the interrupt.
- -EBUSY is returned if the interrupt object was already attached.

Note

The caller **must not** hold nklock when invoking this service, this would cause deadlocks.

Tags

secondary-only

Note

Attaching an interrupt resets the tracked number of receipts to zero.

Referenced by rtdm irg request().

6.20.2.3 void xnintr\_destroy ( struct xnintr \* intr )

Destroy an interrupt object.

Destroys an interrupt object previously initialized by xnintr\_init(). The interrupt object is automatically detached by a call to xnintr\_detach(). No more IRQs will be dispatched by this object after this service has returned.

**Parameters** 

| intr | The descriptor address of the interrupt object to destroy. |
|------|--|

# Tags

secondary-only

References xnintr detach().

6.20.2.4 void xnintr detach ( struct xnintr \* intr )

Detach an interrupt object.

Detach an interrupt object previously attached by xnintr\_attach(). After this operation is completed, no more IRQs are directed to the object's ISR, but the interrupt object itself remains valid. A detached interrupt object can be attached again by a subsequent call to xnintr\_attach().

#### **Parameters**

intr | The descriptor address of the interrupt object to detach.

Note

108

The caller must not hold nklock when invoking this service, this would cause deadlocks.

Tags

secondary-only

Referenced by xnintr destroy().

6.20.2.5 void xnintr\_disable ( struct xnintr \* intr )

Disable an interrupt object.

Disables the hardware interrupt line associated with an interrupt object. This operation invalidates further interrupt requests from the given source until the IRQ line is re-enabled anew.

**Parameters** 

intr The descriptor address of the interrupt object to disable.

Tags

secondary-only

6.20.2.6 void xnintr\_enable ( struct xnintr \* intr )

Enable an interrupt object.

Enables the hardware interrupt line associated with an interrupt object.

Parameters

intr The descriptor address of the interrupt object to enable.

Tags

secondary-only

Referenced by rtdm\_irq\_request().

6.20.2.7 int xnintr\_init ( struct xnintr \* intr, const char \* name, unsigned int irq, xnisr\_t isr, xniack\_t iack, int flags )

Initialize an interrupt object.

Associates an interrupt object with an IRQ line.

When an interrupt occurs on the given *irq* line, the ISR is fired in order to deal with the hardware event. The interrupt service code may call any non-blocking service from the nucleus.

Upon receipt of an IRQ, the ISR is immediately called on behalf of the interrupted stack context, the rescheduling procedure is locked, and the interrupt source is masked at hardware level. The status value returned by the ISR is then checked for the following values:

XN ISR HANDLED indicates that the interrupt request has been fulfilled by the ISR.

• XN\_ISR\_NONE indicates the opposite to XN\_ISR\_HANDLED. The ISR must always return this value when it determines that the interrupt request has not been issued by the dedicated hardware device.

In addition, one of the following bits may be set by the ISR:

### Warning

Use these bits with care and only when you do understand their effect on the system. The ISR is not encouraged to use these bits in case it shares the IRQ line with other ISRs in the real-time domain.

- XN ISR NOENABLE prevents the IRQ line from being re-enabled after the ISR has returned.
- XN\_ISR\_PROPAGATE causes the IRQ event to be propagated down the pipeline to Linux. This
  is the regular way to share interrupts between the nucleus and the regular Linux kernel. In effect,
  XN\_ISR\_PROPAGATE implies XN\_ISR\_NOENABLE since it would make no sense to re-enable
  the IRQ line before the Linux kernel had a chance to process the propagated interrupt.

A count of interrupt receipts is tracked into the interrupt descriptor, and reset to zero each time the interrupt object is attached. Since this count could wrap around, it should be used as an indication of interrupt activity only.

### **Parameters**

| intr  | The address of a interrupt object descriptor the nucleus will use to store the object-   |
|-------|--|
|       | specific data. This descriptor must always be valid while the object is active therefore |
|       | it must be allocated in permanent memory.  |
| name  | An ASCII string standing for the symbolic name of the interrupt object or NULL.          |
| irq   | The hardware interrupt channel associated with the interrupt object. This value is       |
|       | architecture-dependent. An interrupt object must then be attached to the hardware        |
|       | interrupt vector using the xnintr_attach() service for the associated IRQs to be di-     |
|       | rected to this object.   |
| isr   | The address of a valid low-level interrupt service routine if this parameter is non-     |
|       | zero. This handler will be called each time the corresponding IRQ is delivered on        |
|       | behalf of an interrupt context. When called, the ISR is passed the descriptor address    |
|       | of the interrupt object.   |
| iack  | The address of an optional interrupt acknowledge routine, aimed at replacing the         |
|       | default one. Only very specific situations actually require to override the default      |
|       | setting for this parameter, like having to acknowledge non-standard PIC hardware.        |
|       | iack should return a non-zero value to indicate that the interrupt has been properly     |
|       | acknowledged. If <i>iack</i> is NULL, the default routine will be used instead.          |
| flags | A set of creation flags affecting the operation. The valid flags are:                    |

- XN\_ISR\_SHARED enables IRQ-sharing with other interrupt objects.
- XN\_ISR\_EDGE is an additional flag need to be set together with XN\_ISR\_SHARED to enable IRQ-sharing of edge-triggered interrupts.

# Returns

0 is returned on success. Otherwise, -EINVAL is returned if *irq* is not a valid interrupt number.

### Tags

# secondary-only

Referenced by rtdm\_irq\_request().

# 6.21 Locking services

The Xenomai core deals with concurrent activities from two distinct kernels running side-by-side. Collaboration diagram for Locking services:



### Macros

- #define splhigh(x) ((x) = ipipe\_test\_and\_stall\_head() & 1)
  - Hard disable interrupts on the local processor, saving previous state.
- #define splexit(x) ipipe\_restore\_head(x & 1)
  - Restore the saved hard interrupt state on the local processor.
- #define splmax() ipipe\_stall\_head()
  - Hard disable interrupts on the local processor.
- #define splnone() ipipe\_unstall\_head()
  - Hard enable interrupts on the local processor.
- #define spltest() ipipe\_test\_head()

Test hard interrupt state on the local processor.

# 6.21.1 Detailed Description

The Xenomai core deals with concurrent activities from two distinct kernels running side-by-side. When interrupts are involved, the services from this section control the **hard** interrupt state exclusively, for protecting against processor-local or SMP concurrency.

Note

In a dual kernel configuration, hard interrupts are gated by the CPU. When enabled, hard interrupts are immediately delivered to the Xenomai core if they belong to a real-time source, or deferred until enabled by a second-stage virtual interrupt mask, if they belong to regular Linux devices/sources.

### 6.21.2 Macro Definition Documentation

6.21.2.1 #define splexit( x ) ipipe\_restore\_head(x & 1)

Restore the saved hard interrupt state on the local processor.

**Parameters** 

| in | X | The context variable previously updated by splhigh() |
|----|---|--|

6.21.2.2 #define splhigh( x ) ((x) = ipipe test and stall head() & 1)

Hard disable interrupts on the local processor, saving previous state.

# Parameters

| out | X | An unsigned long integer context variable |
|-----|---|---|
|-----|---|---|

6.21.2.3 #define spltest( ) ipipe\_test\_head()

Test hard interrupt state on the local processor.


# Returns

Zero if the local processor currently accepts interrupts, non-zero otherwise.

Referenced by rtdm\_lock\_get().

# 6.22 Lightweight key-to-object mapping service

A map is a simple indexing structure which associates unique integer keys with pointers to objects. Collaboration diagram for Lightweight key-to-object mapping service:



### **Functions**

- struct xnmap \* xnmap\_create (int nkeys, int reserve, int offset)
   Create a map.
- void xnmap delete (struct xnmap \*map)

Delete a map.

• int xnmap\_enter (struct xnmap \*map, int key, void \*objaddr)

Index an object into a map.

int xnmap\_remove (struct xnmap \*map, int key)

Remove an object reference from a map.

static void \* xnmap\_fetch\_nocheck (struct xnmap \*map, int key)

Search an object into a map - unchecked form.

static void \* xnmap\_fetch (struct xnmap \*map, int key)

Search an object into a map.

# 6.22.1 Detailed Description

A map is a simple indexing structure which associates unique integer keys with pointers to objects. The current implementation supports reservation, for naming/indexing objects, either on a fixed, user-provided integer (i.e. a reserved key value), or by drawing the next available key internally if the caller did not specify any fixed key. For instance, in some given map, the key space ranging from 0 to 255 could be reserved for fixed keys, whilst the range from 256 to 511 could be available for drawing free keys dynamically.

A maximum of 1024 unique keys per map is supported on 32bit machines.

(This implementation should not be confused with C++ STL maps, which are dynamically expandable and allow arbitrary key types; Xenomai maps don't).

### 6.22.2 Function Documentation

6.22.2.1 struct xnmap \* xnmap create ( int nkeys, int reserve, int offset )

### Create a map.

Allocates a new map with the specified addressing capabilities. The memory is obtained from the Xenomai system heap.

#### **Parameters**

| nkeys   | The maximum number of unique keys the map will be able to hold. This value cannot exceed the static limit represented by XNMAP_MAX_KEYS, and must be a power of two.  |
|---------|---|
| reserve | The number of keys which should be kept for reservation within the index space. Reserving a key means to specify a valid key to the xnmap_enter() service, which will then attempt to register this exact key, instead of drawing the next available key from the unreserved index space. When reservation is in effect, the unreserved index space will hold key values greater than <i>reserve</i> , keeping the low key values for the reserved space. For instance, passing <i>reserve</i> = 32 would cause the index range [ 0 31 ] to be kept for reserved keys. When non-zero, <i>reserve</i> is rounded to the next multiple of BITS_PER_LONG. If <i>reserve</i> is zero no reservation will be available from the map. |
| offset  | The lowest key value xnmap_enter() will return to the caller. Key values will be in the range [ 0 + offset nkeys + offset - 1 ]. Negative offsets are valid.  |

## Returns

the address of the new map is returned on success; otherwise, NULL is returned if *nkeys* is invalid.

## Tags

#### task-unrestricted

6.22.2.2 void xnmap\_delete ( struct xnmap \* map )

## Delete a map.

Deletes a map, freeing any associated memory back to the Xenomai system heap.

## **Parameters**

| map | The address of the map to delete. |
|-----|-----------------------------------|

## Tags

## task-unrestricted

6.22.2.3 int xnmap\_enter ( struct xnmap \* map, int key, void \* objaddr )

Index an object into a map.

Insert a new object into the given map.

#### **Parameters**

| тар | The address of the map to insert into.   |  |
|-----|--|--|
| key | The key to index the object on. If this key is within the valid index range [ 0 - offset   |  |
|     | nkeys - offset - 1], then an attempt to reserve this exact key is made. If key has an out-of-range value lower or equal to 0 - offset - 1, then an attempt is made to draw |  |
|     | a free key from the unreserved index space.  |  |

| objaddr | The address of the object to index on the key. This value will be returned by a |  |
|---------|---|--|
|         | successful call to xnmap_fetch() with the same key.                             |  |

#### Returns

a valid key is returned on success, either key if reserved, or the next free key. Otherwise:

- -EEXIST is returned upon attempt to reserve a busy key.
- -ENOSPC when no more free key is available.

#### Tags

## unrestricted

6.22.2.4 void xnmap\_fetch ( struct xnmap \* map, int key ) [inline], [static]

Search an object into a map.

Retrieve an object reference from the given map by its index key.

#### **Parameters**

| тар | The address of the map to retrieve from.     |
|-----|--|
| key | The key to be searched for in the map index. |

#### Returns

The indexed object address is returned on success, otherwise NULL is returned when *key* is invalid or no object is currently indexed on it.

## Tags

### unrestricted

6.22.2.5 void xnmap\_fetch\_nocheck ( struct xnmap \* map, int key ) [inline], [static]

Search an object into a map - unchecked form.

Retrieve an object reference from the given map by its index key, but does not perform any sanity check on the provided key.

#### **Parameters**

| тар | The address of the map to retrieve from.     |
|-----|--|
| key | The key to be searched for in the map index. |

### Returns

The indexed object address is returned on success, otherwise NULL is returned when no object is currently indexed on *key*.

## Tags

## unrestricted

6.22.2.6 int xnmap\_remove ( struct xnmap \* map, int key )

Remove an object reference from a map.

Removes an object reference from the given map, releasing the associated key.

**Module Documentation** 

## Parameters

| тар   | The address of the map to remove from. |  |
|---|--|--|
| key The key the object reference to be removed is indexed on. |  |  |

## Returns

0 is returned on success. Otherwise:

• -ESRCH is returned if key is invalid.

## Tags

unrestricted

# 6.23 Registry services

The registry provides a mean to index object descriptors on unique alphanumeric keys.

Collaboration diagram for Registry services:



## **Functions**

- int xnregistry\_enter (const char \*key, void \*objaddr, xnhandle\_t \*phandle, struct xnpnode \*pnode)

  Register a real-time object.
- int xnregistry\_bind (const char \*key, xnticks\_t timeout, int timeout\_mode, xnhandle\_t \*phandle)

  Bind to a real-time object.
- int xnregistry\_remove (xnhandle\_t handle)

Forcibly unregister a real-time object.

- static void \* xnregistry\_lookup (xnhandle\_t handle, unsigned long \*cstamp\_r) Find a real-time object into the registry.
- int xnregistry\_unlink (const char \*key)

Turn a named object into an anonymous object.

## 6.23.1 Detailed Description

The registry provides a mean to index object descriptors on unique alphanumeric keys. When labeled this way, an object is globally exported; it can be searched for, and its descriptor returned to the caller for further use; the latter operation is called a "binding". When no object has been registered under the given name yet, the registry can be asked to set up a rendez-vous, blocking the caller until the object is eventually registered.

## 6.23.2 Function Documentation

6.23.2.1 int xnregistry\_bind ( const char \* key, xnticks\_t timeout, int timeout\_mode, xnhandle\_t \* phandle )

Bind to a real-time object.

This service retrieves the registry handle of a given object identified by its key. Unless otherwise specified, this service will block the caller if the object is not registered yet, waiting for such registration to occur.

**Parameters** 

118 Module Documentation

| key          | A valid NULL-terminated string which identifies the object to bind to.              |  |  |
|--------------|---|--|--|
| timeout      | The timeout which may be used to limit the time the thread wait for the object to   |  |  |
|              | be registered. This value is a wait time given as a count of nanoseconds. It can    |  |  |
|              | either be relative, absolute monotonic (XN_ABSOLUTE), or absolute adjustable (X-    |  |  |
|              | N_REALTIME) depending on timeout_mode. Passing XN_INFINITE and setting              |  |  |
|              | timeout_mode to XN_RELATIVE specifies an unbounded wait. Passing XN_NON-            |  |  |
|              | BLOCK causes the service to return immediately without waiting if the object is not |  |  |
|              | registered on entry. All other values are used as a wait limit.                     |  |  |
| timeout_mode | The mode of the timeout parameter. It can either be set to XN_RELATIVE, XN_AB-      |  |  |
|              | SOLUTE, or XN_REALTIME (see also xntimer_start()).                                  |  |  |
| phandle      | A pointer to a memory location which will be written upon success with the generic  |  |  |
|              | handle defined by the registry for the retrieved object. Contents of this memory is |  |  |
|              | undefined upon failure.   |  |  |

#### Returns

0 is returned upon success. Otherwise:

- -EINVAL is returned if key is NULL.
- -EINTR is returned if xnthread\_unblock() has been called for the waiting thread before the retrieval has completed.
- -EWOULDBLOCK is returned if timeout is equal to XN\_NONBLOCK and the searched object is not registered on entry. As a special exception, this error is also returned if this service should block, but was called from a context which cannot sleep (e.g. interrupt, non-realtime or scheduler locked).
- -ETIMEDOUT is returned if the object cannot be retrieved within the specified amount of time.

#### Tags

primary-only, might-switch

References XNBREAK, xnsynch\_sleep\_on(), and XNTIMEO.

6.23.2.2 int xnregistry\_enter ( const char \* key, void \* objaddr, xnhandle\_t \* phandle, struct xnpnode \* pnode )

Register a real-time object.

This service allocates a new registry slot for an associated object, and indexes it by an alphanumeric key for later retrieval.

### **Parameters**

| key     | A valid NULL-terminated string by which the object will be indexed and later retrieved   |  |  |  |
|---------|--|--|--|--|
|         | in the registry. Since it is assumed that such key is stored into the registered object, |  |  |  |
|         | t will not be copied but only kept by reference in the registry. Pass an empty or        |  |  |  |
|         | NULL string if the object shall only occupy a registry slot for handle-based lookups.    |  |  |  |
| objaddr | An opaque pointer to the object to index by <i>key</i> .                                 |  |  |  |
| phandle | A pointer to a generic handle defined by the registry which will uniquely identify the   |  |  |  |
|         | indexed object, until the latter is unregistered using the xnregistry_remove() service.  |  |  |  |

| pnode | A pointer to an optional /proc node class descriptor. This structure provides the in-  |
|-------|--|
|       | formation needed to export all objects from the given class through the /proc filesys- |
|       | tem, under the /proc/xenomai/registry entry. Passing NULL indicates that no /proc      |
|       | support is available for the newly registered object.                                  |

#### Returns

0 is returned upon success. Otherwise:

- -EINVAL is returned if objaddr is NULL, or if key is non-NULL and contains an invalid '/' character.
- -ENOMEM is returned if the system fails to get enough dynamic memory from the global real-time heap in order to register the object.
- -EEXIST is returned if the key is already in use.

## Tags

unrestricted, might-switch, atomic-entry

References xnsched run().

Referenced by rtdm\_dev\_register().

Find a real-time object into the registry.

This service retrieves an object from its handle into the registry and returns the memory address of its descriptor. Optionally, it also copies back the object's creation stamp which is unique across object registration calls.

## **Parameters**

| handle   | The generic handle of the object to fetch.                                   |  |
|----------|--|--|
| cstamp_r | If not-NULL, the object's creation stamp will be copied to this memory area. |  |

#### Returns

The memory address of the object's descriptor is returned on success. Otherwise, NULL is returned if *handle* does not reference a registered object.

#### Tags

#### unrestricted

```
6.23.2.4 int xnregistry_remove ( xnhandle_t handle )
```

Forcibly unregister a real-time object.

This service forcibly removes an object from the registry. The removal is performed regardless of the current object's locking status.

## **Parameters**

| handle | The generic handle of the object to remove. |  |
|--------|---|--|

## Returns

0 is returned upon success. Otherwise:

• -ESRCH is returned if handle does not reference a registered object.

Tags

## unrestricted

Referenced by rtdm\_dev\_unregister().

```
6.23.2.5 int xnregistry_unlink ( const char * key )
```

Turn a named object into an anonymous object.


Tags

unrestricted

# 6.24 Driver programming interface

RTDM driver programming interface.

Collaboration diagram for Driver programming interface:

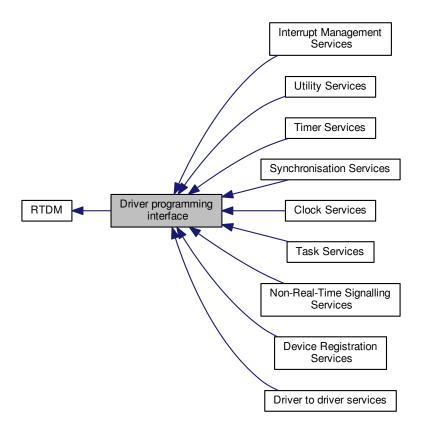

## Modules

- Driver to driver services
  - Inter-driver interface.
- Device Registration Services
- Clock Services
- Task Services
- Timer Services
- Synchronisation Services
- Interrupt Management Services
- Non-Real-Time Signalling Services

These services provide a mechanism to request the execution of a specified handler in non-real-time context.

Utility Services


# 6.24.1 Detailed Description

RTDM driver programming interface.

## 6.25 Driver to driver services

Inter-driver interface.

Collaboration diagram for Driver to driver services:

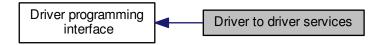

## **Functions**

• int rtdm\_open (const char \*path, int oflag,...)

Open a device.

• int rtdm\_socket (int protocol\_family, int socket\_type, int protocol)

Create a socket.

• int rtdm\_close (int fd)

Close a device or socket.

int rtdm\_ioctl (int fd, int request,...)

Issue an IOCTL.

ssize\_t rtdm\_read (int fd, void \*buf, size\_t nbyte)

Read from device.

• ssize\_t rtdm\_write (int fd, const void \*buf, size\_t nbyte)

Write to device.

ssize\_t rtdm\_recvmsg (int fd, struct msghdr \*msg, int flags)

Receive message from socket.

ssize\_t rtdm\_recvfrom (int fd, void \*buf, size\_t len, int flags, struct sockaddr \*from, socklen\_t \*fromlen)

Receive message from socket.

ssize\_t rtdm\_recv (int fd, void \*buf, size\_t len, int flags)

Receive message from socket.

• ssize\_t rtdm\_sendmsg (int fd, const struct msghdr \*msg, int flags)

Transmit message to socket.

ssize\_t rtdm\_sendto (int fd, const void \*buf, size\_t len, int flags, const struct sockaddr \*to, socklen\_t tolen)

Transmit message to socket.

• ssize\_t rtdm\_send (int fd, const void \*buf, size\_t len, int flags)

Transmit message to socket.

int rtdm\_bind (int fd, const struct sockaddr \*my\_addr, socklen\_t addrlen)

Bind to local address.

• int rtdm\_connect (int fd, const struct sockaddr \*serv\_addr, socklen\_t addrlen)

Connect to remote address.

int rtdm\_listen (int fd, int backlog)

Listen to incoming connection requests.

int rtdm\_accept (int fd, struct sockaddr \*addr, socklen\_t \*addrlen)

Accept a connection request.

• int rtdm\_shutdown (int fd, int how)

Shut down parts of a connection.

- int rtdm\_getsockopt (int fd, int level, int optname, void \*optval, socklen\_t \*optlen)

  Get socket option.
- int rtdm\_setsockopt (int fd, int level, int optname, const void \*optval, socklen\_t optlen)
   Set socket option.
- int rtdm\_getsockname (int fd, struct sockaddr \*name, socklen\_t \*namelen)

  Get local socket address.
- int rtdm\_getpeername (int fd, struct sockaddr \*name, socklen\_t \*namelen)

  Get socket destination address.

## 6.25.1 Detailed Description

Inter-driver interface.

### 6.25.2 Function Documentation

6.25.2.1 int rtdm\_accept ( int fd, struct sockaddr \* addr, socklen\_t \* addrlen )

Accept a connection request.

Refer to rt\_dev\_accept() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

mode-unrestricted, might-switch

6.25.2.2 int rtdm\_bind ( int fd, const struct sockaddr \* my\_addr, socklen\_t addrlen )

Bind to local address.

Refer to rt\_dev\_bind() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

task-unrestricted, might-switch

```
6.25.2.3 int rtdm_close (int fd)
```

Close a device or socket.

Refer to rt\_dev\_close() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

secondary-only, might-switch

```
6.25.2.4 int rtdm_connect ( int fd, const struct sockaddr * serv_addr, socklen_t addrlen )
```

Connect to remote address.

Refer to rt\_dev\_connect() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

124

mode-unrestricted, might-switch

```
6.25.2.5 int rtdm_getpeername ( int fd, struct sockaddr * name, socklen_t * namelen )
```

Get socket destination address.

Refer to rt\_dev\_getpeername() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

task-unrestricted, might-switch

```
6.25.2.6 int rtdm_getsockname ( int fd, struct sockaddr * name, socklen_t * namelen )
```

Get local socket address.

Refer to rt\_dev\_getsockname() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

task-unrestricted, might-switch

```
6.25.2.7 int rtdm getsockopt (int fd, int level, int optname, void * optval, socklen t * optlen )
```

Get socket option.

Refer to rt\_dev\_getsockopt() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

task-unrestricted, might-switch

```
6.25.2.8 int rtdm_ioctl (int fd, int request, ...)
```

Issue an IOCTL.

Refer to rt\_dev\_ioctl() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

task-unrestricted, might-switch

```
6.25.2.9 int rtdm_listen ( int fd, int backlog )
```

Listen to incoming connection requests.

Refer to rt\_dev\_listen() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

task-unrestricted, might-switch

```
6.25.2.10 int rtdm_open (const char * path, int oflag, ...)
```

Open a device.

Refer to rt\_dev\_open() for parameters and return values

Tags

secondary-only, might-switch

```
6.25.2.11 ssize_t rtdm_read ( int fd, void * buf, size_t nbyte )
```

Read from device.

Refer to rt\_dev\_read() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

mode-unrestricted, might-switch

```
6.25.2.12 ssize_t rtdm_recv (int fd, void * buf, size_t len, int flags)
```

Receive message from socket.

Refer to rt\_dev\_recv() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

mode-unrestricted, might-switch

```
6.25.2.13 ssize_t rtdm_recvfrom ( int fd, void * buf, size_t len, int flags, struct sockaddr * from, socklen_t * fromlen )
```

Receive message from socket.

Refer to rt\_dev\_recvfrom() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

mode-unrestricted, might-switch

```
6.25.2.14 ssize_t rtdm_recvmsg (int fd, struct msghdr * msg, int flags)
```

Receive message from socket.

Refer to rt\_dev\_recvmsg() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

mode-unrestricted, might-switch

```
6.25.2.15 ssize_t rtdm_send (int fd, const void * buf, size_t len, int flags)
```

Transmit message to socket.

Refer to rt\_dev\_send() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

mode-unrestricted, might-switch

```
6.25.2.16 ssize_t rtdm_sendmsg (int fd, const struct msghdr * msg, int flags)
```

Transmit message to socket.

Refer to rt\_dev\_sendmsg() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

mode-unrestricted, might-switch

```
6.25.2.17 ssize_t rtdm_sendto ( int fd, const void * buf, size_t len, int flags, const struct sockaddr * to, socklen_t tolen )
```

Transmit message to socket.

Refer to rt\_dev\_sendto() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

mode-unrestricted, might-switch

```
6.25.2.18 int rtdm_setsockopt (int fd, int level, int optname, const void * optval, socklen_t optlen)
```

Set socket option.

Refer to rt\_dev\_setsockopt() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

task-unrestricted, might-switch

6.25.2.19 int rtdm\_shutdown (int fd, int how)

Shut down parts of a connection.

Refer to rt\_dev\_shutdown() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

secondary-only, might-switch

6.25.2.20 int rtdm\_socket (int protocol\_family, int socket\_type, int protocol)

Create a socket.

Refer to rt\_dev\_socket() for parameters and return values. Action depends on driver implementation, see Device Profiles.

Tags

secondary-only, might-switch

6.25.2.21 ssize\_t rtdm\_write ( int fd, const void \* buf, size\_t nbyte )

Write to device.

Refer to rt\_dev\_write() for parameters and return values. Action depends on driver implementation, see Device Profiles.


Tags

mode-unrestricted, might-switch

128 Module Documentation

# 6.26 Device Registration Services

Collaboration diagram for Device Registration Services:

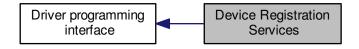

## **Functions**

- int rtdm\_dev\_register (struct rtdm\_device \*device)
- int rtdm\_dev\_unregister (struct rtdm\_device \*device, unsigned int poll\_delay)

  Unregisters a RTDM device.

## **Device Flags**

Static flags describing a RTDM device

Register a RTDM device.

- #define RTDM\_EXCLUSIVE 0x0001
  - If set, only a single instance of the device can be requested by an application.
- #define RTDM\_NAMED\_DEVICE 0x0010
  - If set, the device is addressed via a clear-text name.
- #define RTDM\_PROTOCOL\_DEVICE 0x0020
  - If set, the device is addressed via a combination of protocol ID and socket type.
- #define RTDM\_DEVICE\_TYPE\_MASK 0x00F0

Mask selecting the device type.

## **Driver Versioning**

Current revisions of RTDM structures, encoding of driver versions. See API Versioning for the interface revision.

- #define RTDM\_DEVICE\_STRUCT\_VER 7
  - Version of struct rtdm device.
- #define RTDM CONTEXT STRUCT VER 4

Version of struct rtdm\_dev\_context.

- #define RTDM SECURE DEVICE 0x80000000
  - Flag indicating a secure variant of RTDM (not supported here)
- #define RTDM\_DRIVER\_VER(major, minor, patch) (((major & 0xFF) << 16) | ((minor & 0xFF) << 8) | (patch & 0xFF))</li>
  - Version code constructor for driver revisions.
- #define RTDM\_DRIVER\_MAJOR\_VER(ver) (((ver) >> 16) & 0xFF)

Get major version number from driver revision code.

#define RTDM\_DRIVER\_MINOR\_VER(ver) (((ver) >> 8) & 0xFF)

Get minor version number from driver revision code.

#define RTDM DRIVER PATCH VER(ver) ((ver) & 0xFF)

Get patch version number from driver revision code.

## 6.26.1 Detailed Description

## 6.26.2 Macro Definition Documentation

6.26.2.1 #define RTDM DEVICE TYPE MASK 0x00F0

Mask selecting the device type.

Referenced by rtdm\_dev\_register(), and rtdm\_dev\_unregister().

6.26.2.2 #define RTDM\_EXCLUSIVE 0x0001

If set, only a single instance of the device can be requested by an application.

Referenced by rtdm dev register().

6.26.2.3 #define RTDM\_NAMED\_DEVICE 0x0010

If set, the device is addressed via a clear-text name.

Referenced by rtdm\_dev\_register(), and rtdm\_dev\_unregister().

6.26.2.4 #define RTDM\_PROTOCOL\_DEVICE 0x0020

If set, the device is addressed via a combination of protocol ID and socket type.

Referenced by rtdm\_dev\_register().

#### 6.26.3 Function Documentation

6.26.3.1 int rtdm\_dev\_register ( struct rtdm\_device \* device )

Register a RTDM device.

**Parameters** 

| in | device | Pointer to structure describing the new device. |
|----|--------|---|
|----|--------|---|

#### Returns

0 is returned upon success. Otherwise:

- -EINVAL is returned if the device structure contains invalid entries. Check kernel log in this case.
- -ENOMEM is returned if the context for an exclusive device cannot be allocated.
- -EEXIST is returned if the specified device name of protocol ID is already in use.
- -EAGAIN is returned if some /proc entry cannot be created.

## Tags

#### secondary-only

References rtdm\_device::context\_size, rtdm\_device::device\_flags, rtdm\_device::device\_name, rtdm\_device::device\_name, rtdm\_device::protocol\_family, rtdm\_device::protocol\_family, rtdm\_device::reserved, RTDM\_DEVICE\_STRUCT\_VER, RTDM\_DEVICE\_TYPE\_MASK, RTDM\_EXCLUSIVE, RTDM\_NAMED\_DEVICE, RTDM\_PROTOCOL\_DEVICE, rtdm\_device::socket, rtdm\_device::socket\_type, rtdm\_device::struct\_version, and xnregistry\_enter().

6.26.3.2 int rtdm dev unregister ( struct rtdm device \* device, unsigned int poll delay )

#### Unregisters a RTDM device.

#### **Parameters**

| in | device     | Pointer to structure describing the device to be unregistered.          |
|----|------------|---|
| in | poll_delay | Polling delay in milliseconds to check repeatedly for open instances of |
|    |            | device, or 0 for non-blocking mode.                                     |

## Returns

0 is returned upon success. Otherwise:

- -ENODEV is returned if the device was not registered.
- -EAGAIN is returned if the device is busy with open instances and 0 has been passed for *poll\_delay*.

#### Tags


## secondary-only

References rtdm\_device::device\_flags, rtdm\_device::device\_name, rtdm\_device::protocol\_family, rtdm\_device::reserved, RTDM\_DEVICE\_TYPE\_MASK, RTDM\_NAMED\_DEVICE, rtdm\_device::socket\_type, and xnregistry\_remove().

6.27 Clock Services 131

## 6.27 Clock Services

Collaboration diagram for Clock Services:



## **Functions**

- nanosecs\_abs\_t rtdm\_clock\_read (void)
   Get system time.
- nanosecs\_abs\_t rtdm\_clock\_read\_monotonic (void) Get monotonic time.
- 6.27.1 Detailed Description
- 6.27.2 Function Documentation
- 6.27.2.1 nanosecs\_abs\_t rtdm\_clock\_read ( void )

Get system time.

Returns

The system time in nanoseconds is returned

Note

The resolution of this service depends on the system timer. In particular, if the system timer is running in periodic mode, the return value will be limited to multiples of the timer tick period. The system timer may have to be started to obtain valid results. Whether this happens automatically (as on Xenomai) or is controlled by the application depends on the RTDM host environment.

Tags

unrestricted

Referenced by a4l\_get\_time(), and rtdm\_ratelimit().

6.27.2.2 **nanosecs\_abs\_t** rtdm\_clock\_read\_monotonic ( void )

Get monotonic time.

Returns

The monotonic time in nanoseconds is returned

132 Module Documentation

Note

The resolution of this service depends on the system timer. In particular, if the system timer is running in periodic mode, the return value will be limited to multiples of the timer tick period. The system timer may have to be started to obtain valid results. Whether this happens automatically (as on Xenomai) or is controlled by the application depends on the RTDM host environment.


Tags

unrestricted

6.28 Task Services

## 6.28 Task Services

Collaboration diagram for Task Services:



## **Typedefs**

typedef void(\* rtdm\_task\_proc\_t )(void \*arg)
 Real-time task procedure.

#### **Functions**

• int rtdm\_task\_init (rtdm\_task\_t \*task, const char \*name, rtdm\_task\_proc\_t task\_proc, void \*arg, int priority, nanosecs\_rel\_t period)

Initialise and start a real-time task.

void rtdm\_task\_destroy (rtdm\_task\_t \*task)

Destroy a real-time task.

int rtdm\_task\_should\_stop (void)

Check for pending termination request.

void rtdm\_task\_set\_priority (rtdm\_task\_t \*task, int priority)

Adjust real-time task priority.

int rtdm\_task\_set\_period (rtdm\_task\_t \*task, nanosecs\_rel\_t period)

Adjust real-time task period.

int rtdm\_task\_wait\_period (void)

Wait on next real-time task period.

int rtdm\_task\_unblock (rtdm\_task\_t \*task)

Activate a blocked real-time task.

rtdm\_task\_t \* rtdm\_task\_current (void)

Get current real-time task.

int rtdm\_task\_sleep (nanosecs\_rel\_t delay)

Sleep a specified amount of time.

• int rtdm task sleep until (nanosecs abs t wakeup time)

Sleep until a specified absolute time.

int rtdm\_task\_sleep\_abs (nanosecs\_abs\_t wakeup\_time, enum rtdm\_timer\_mode mode)

Sleep until a specified absolute time.

void rtdm\_task\_join (rtdm\_task\_t \*task)

Wait on a real-time task to terminate.

void rtdm\_task\_busy\_sleep (nanosecs\_rel\_t delay)

Busy-wait a specified amount of time.

## Task Priority Range

Maximum and minimum task priorities

- #define RTDM\_TASK\_LOWEST\_PRIORITY 0
- #define RTDM\_TASK\_HIGHEST\_PRIORITY 99

## Task Priority Modification

Raise or lower task priorities by one level

- #define RTDM\_TASK\_RAISE\_PRIORITY (+1)
- #define RTDM\_TASK\_LOWER\_PRIORITY (-1)
- 6.28.1 Detailed Description
- 6.28.2 Typedef Documentation
- 6.28.2.1 typedef void(\* rtdm\_task\_proc\_t)(void \*arg)

Real-time task procedure.

**Parameters** 

| in,out | arg | argument as passed to rtdm_task_init() |
|--------|-----|--|
|--------|-----|--|

## 6.28.3 Function Documentation

```
6.28.3.1 void rtdm task busy sleep ( nanosecs rel t delay )
```

Busy-wait a specified amount of time.

This service does not schedule out the caller, but rather spins in a tight loop, burning CPU cycles until the timeout elapses.

**Parameters** 

| in | delay | Delay in nanoseconds. Note that a zero delay does <b>not</b> have the mean- |
|----|-------|---|
|    |       | ing of RTDM_TIMEOUT_INFINITE here.  |

## Note

The caller must not be migratable to different CPUs while executing this service. Otherwise, the actual delay will be undefined.

Tags

unrestricted

6.28.3.2 rtdm\_task\_t\* rtdm\_task\_current (void)

Get current real-time task.

6.28 Task Services

Returns

Pointer to task handle

Tags

mode-unrestricted

6.28.3.3 void rtdm\_task\_destroy ( rtdm\_task\_t \* task )

Destroy a real-time task.

This call sends a termination request to *task*, then waits for it to exit. All RTDM task should check for pending termination requests by calling rtdm\_task\_should\_stop() from their work loop.

If task is current, rtdm\_task\_destroy() terminates the current context, and does not return to the caller.

#### **Parameters**

| in,out | task | Task handle as returned by rtdm_task_init() |
|--------|------|---|
|--------|------|---|

Note

Passing the same task handle to RTDM services after the completion of this function is not allowed.

Tags

secondary-only, might-switch

6.28.3.4 int rtdm\_task\_init ( rtdm\_task\_t \* task, const char \* name, rtdm\_task\_proc\_t task\_proc, void \* arg, int priority, nanosecs\_rel\_t period )

Initialise and start a real-time task.

After initialising a task, the task handle remains valid and can be passed to RTDM services until either rtdm\_task\_destroy() or rtdm\_task\_join() was invoked.

### **Parameters**

| in,out | task      | Task handle  |
|--------|-----------|--|
| in     | name      | Optional task name   |
| in     | task_proc | Procedure to be executed by the task   |
| in     | arg       | Custom argument passed to task_proc() on entry   |
| in     | priority  | Priority of the task, see also Task Priority Range   |
| in     | period    | Period in nanoseconds of a cyclic task, 0 for non-cyclic mode. Waiting for the first and subsequent periodic events is done using rtdm_task_wait_period(). |

Returns

0 on success, otherwise negative error code

Tags

secondary-only, might-switch

References xnthread\_cancel(), xnthread\_init(), xnthread\_set\_periodic(), and xnthread\_start().

6.28.3.5 void rtdm\_task\_join ( rtdm\_task\_t \* task )

Wait on a real-time task to terminate.

#### **Parameters**

| in,out | task | Task handle as returned by rtdm_task_init() |
|--------|------|---|
|--------|------|---|

#### Note

Passing the same task handle to RTDM services after the completion of this function is not allowed. This service does not trigger the termination of the targeted task. The user has to take of this, otherwise <a href="rtdm\_task\_join">rtdm\_task\_join</a>() will never return.

#### Tags

## mode-unrestricted

References xnthread\_join().

6.28.3.6 int rtdm\_task\_set\_period ( rtdm\_task\_t \* task, nanosecs\_rel\_t period )

Adjust real-time task period.

#### **Parameters**

| in,out | task   | Task handle as returned by rtdm_task_init()                       |
|--------|--------|---|
| in     | period | New period in nanoseconds of a cyclic task, 0 for non-cyclic mode |

## Tags

## task-unrestricted

6.28.3.7 void rtdm\_task\_set\_priority ( rtdm\_task\_t \* task, int priority )

## Adjust real-time task priority.

### **Parameters**

| in,out | task     | Task handle as returned by rtdm_task_init()            |
|--------|----------|--|
| in     | priority | New priority of the task, see also Task Priority Range |

## Tags

## task-unrestricted, might-switch

6.28.3.8 int rtdm\_task\_should\_stop (void)

Check for pending termination request.

Check whether a termination request was received by the current RTDM task. Termination requests are sent by calling rtdm\_task\_destroy().

### Returns

Non-zero indicates that a termination request is pending, in which case the caller should wrap up and exit.

## Tags

rtdm-task, might-switch

6.28 Task Services

6.28.3.9 int rtdm\_task\_sleep ( nanosecs\_rel\_t delay )

Sleep a specified amount of time.

#### **Parameters**

| in | delay | Delay in nanoseconds, see RTDM_TIMEOUT_xxx for special values. |
|----|-------|--|
|----|-------|--|

#### Returns

0 on success, otherwise:

- -EINTR is returned if calling task has been unblock by a signal or explicitly via rtdm task unblock().
- -EPERM may be returned if an illegal invocation environment is detected.

## Tags

primary-only, might-switch

6.28.3.10 int rtdm\_task\_sleep\_abs ( nanosecs\_abs\_t wakeup\_time, enum rtdm\_timer\_mode mode )

Sleep until a specified absolute time.

#### **Parameters**

| in | wakeup_time | Absolute timeout in nanoseconds                            |
|----|-------------|--|
| in | mode        | Selects the timer mode, see RTDM_TIMERMODE_xxx for details |

#### Returns

0 on success, otherwise:

- -EINTR is returned if calling task has been unblock by a signal or explicitly via rtdm\_task\_unblock().
- -EPERM may be returned if an illegal invocation environment is detected.
- -EINVAL is returned if an invalid parameter was passed.

## Tags

primary-only, might-switch

6.28.3.11 int rtdm\_task\_sleep\_until ( nanosecs\_abs\_t wakeup\_time )

Sleep until a specified absolute time.

**Deprecated** Use rtdm\_task\_sleep\_abs instead!

### **Parameters**

| in | wakeup_time | Absolute timeout in nanoseconds |
|----|-------------|---------------------------------|
|----|-------------|---------------------------------|

### Returns

0 on success, otherwise:

- -EINTR is returned if calling task has been unblock by a signal or explicitly via rtdm\_task\_unblock().
- -EPERM may be returned if an illegal invocation environment is detected.

## Tags

primary-only, might-switch

6.28 Task Services

```
6.28.3.12 int rtdm_task_unblock ( rtdm_task_t * task )
```

Activate a blocked real-time task.

Returns

Non-zero is returned if the task was actually unblocked from a pending wait state, 0 otherwise.

Tags

unrestricted, might-switch

```
6.28.3.13 int rtdm_task_wait_period (void)
```

Wait on next real-time task period.

Returns

0 on success, otherwise:


- -EINVAL is returned if calling task is not in periodic mode.
- -ETIMEDOUT is returned if a timer overrun occurred, which indicates that a previous release point has been missed by the calling task.

Tags

primary-only, might-switch

## 6.29 Timer Services

Collaboration diagram for Timer Services:



## **Typedefs**

• typedef void(\* rtdm\_timer\_handler\_t )(rtdm\_timer\_t \*timer)

Timer handler.

## **Functions**

- int rtdm\_timer\_init (rtdm\_timer\_t \*timer, rtdm\_timer\_handler\_t handler, const char \*name)

  Initialise a timer.
- void rtdm\_timer\_destroy (rtdm\_timer\_t \*timer)

Destroy a timer.

• int rtdm\_timer\_start (rtdm\_timer\_t \*timer, nanosecs\_abs\_t expiry, nanosecs\_rel\_t interval, enum rtdm\_timer\_mode mode)

Start a timer.

void rtdm\_timer\_stop (rtdm\_timer\_t \*timer)

Stop a timer.

• int rtdm\_timer\_start\_in\_handler (rtdm\_timer\_t \*timer, nanosecs\_abs\_t expiry, nanosecs\_rel\_t interval, enum rtdm\_timer\_mode mode)

Start a timer from inside a timer handler.

void rtdm\_timer\_stop\_in\_handler (rtdm\_timer\_t \*timer)

Stop a timer from inside a timer handler.

## RTDM TIMERMODE xxx

### Timer operation modes

enum rtdm\_timer\_mode { RTDM\_TIMERMODE\_RELATIVE = XN\_RELATIVE, RTDM\_TIMERMODE\_ABSOLUTE = XN\_ABSOLUTE, RTDM\_TIMERMODE\_REALTIME = XN\_REALTIME }

- 6.29.1 Detailed Description
- 6.29.2 Typedef Documentation
- 6.29.2.1 typedef void(\* rtdm\_timer\_handler\_t)(rtdm\_timer\_t \*timer)

Timer handler.

6.29 Timer Services 141

#### **Parameters**

| in | timer | Timer handle as returned by rtdm_timer_init() |
|----|-------|---|
|----|-------|---|

## 6.29.3 Enumeration Type Documentation

6.29.3.1 enum rtdm\_timer\_mode

Enumerator

**RTDM\_TIMERMODE\_RELATIVE** Monotonic timer with relative timeout. **RTDM\_TIMERMODE\_ABSOLUTE** Monotonic timer with absolute timeout. **RTDM\_TIMERMODE\_REALTIME** Adjustable timer with absolute timeout.

## 6.29.4 Function Documentation

6.29.4.1 void rtdm\_timer\_destroy ( rtdm\_timer\_t \* timer )

## Destroy a timer.

#### **Parameters**

| in,out | timer | Timer handle as returned by rtdm_timer_init() |
|--------|-------|---|
|--------|-------|---|

## Tags

#### task-unrestricted

References xntimer destroy().

6.29.4.2 int rtdm\_timer\_init ( rtdm\_timer\_t \* timer, rtdm\_timer\_handler\_t handler, const char \* name )

## Initialise a timer.

#### **Parameters**

| in,out | timer   | Timer handle                         |
|--------|---------|--------------------------------------|
| in     | handler | Handler to be called on timer expiry |
| in     | name    | Optional timer name                  |

## Returns

0 on success, otherwise negative error code

#### Tags

## task-unrestricted

6.29.4.3 int rtdm\_timer\_start ( rtdm\_timer\_t \* timer, nanosecs\_abs\_t expiry, nanosecs\_rel\_t interval, enum rtdm\_timer\_mode mode )

Start a timer.

#### **Parameters**

| in,out | timer    | Timer handle as returned by rtdm_timer_init()                            |
|--------|----------|--|
| in     | expiry   | Firing time of the timer, mode defines if relative or absolute           |
| in     | interval | Relative reload value, > 0 if the timer shall work in periodic mode with |
|        |          | the specific interval, 0 for one-shot timers                             |
| in     | mode     | Defines the operation mode, see RTDM_TIMERMODE_xxx for possi-            |
|        |          | ble values   |

#### Returns

0 on success, otherwise:

• -ETIMEDOUT is returned if expiry describes an absolute date in the past. In such an event, the timer is nevertheless armed for the next shot in the timeline if *interval* is non-zero.

## Tags

#### unrestricted

References xntimer\_start().

6.29.4.4 int rtdm\_timer\_start\_in\_handler ( rtdm\_timer\_t \* timer, nanosecs\_abs\_t expiry, nanosecs\_rel\_t interval, enum rtdm\_timer\_mode mode )

Start a timer from inside a timer handler.

## **Parameters**

| in,out | timer    | Timer handle as returned by rtdm_timer_init()                            |
|--------|----------|--|
| in     | expiry   | Firing time of the timer, mode defines if relative or absolute           |
| in     | interval | Relative reload value, > 0 if the timer shall work in periodic mode with |
|        |          | the specific interval, 0 for one-shot timers                             |
| in     | mode     | Defines the operation mode, see RTDM_TIMERMODE_xxx for possi-            |
|        |          | ble values   |

### Returns

0 on success, otherwise:

• -ETIMEDOUT is returned if expiry describes an absolute date in the past.

## Tags

## coreirq-only

6.29.4.5 void rtdm\_timer\_stop ( rtdm\_timer\_t \* timer )

## Stop a timer.

### **Parameters**

| in,out | timer | Timer handle as returned by rtdm_timer_init() |
|--------|-------|---|
|        | 1     | - "   |

## Tags

#### unrestricted

References xntimer\_stop().

6.29 Timer Services 143

6.29.4.6 void rtdm\_timer\_stop\_in\_handler ( rtdm\_timer\_t \* timer )

Stop a timer from inside a timer handler.

# Parameters


| in,out | timer | Timer handle as returned by rtdm_timer_init() |
|--------|-------|---|

# Tags

coreirq-only

# 6.30 Synchronisation Services

Collaboration diagram for Synchronisation Services:

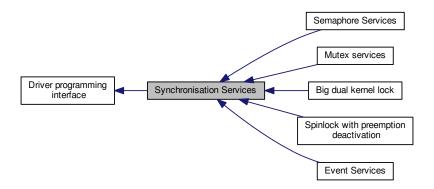

## Modules

- Big dual kernel lock
- · Spinlock with preemption deactivation
- Event Services
- Semaphore Services
- Mutex services

### **Functions**

- void rtdm\_waitqueue\_init (struct rtdm\_waitqueue \*wq)
   Initialize a RTDM wait queue.
- void rtdm\_waitqueue\_destroy (struct rtdm\_waitqueue \*wq)

Deletes a RTDM wait queue.

• rtdm\_timedwait\_condition\_locked (struct rtdm\_wait\_queue \*wq, C\_expr condition, nanosecs\_rel\_t timeout, rtdm\_toseq\_t \*toseq)

Timed sleep on a locked waitqueue until a condition gets true.

• rtdm wait condition locked (struct rtdm wait queue \*wq, C expr condition)

Sleep on a locked waitqueue until a condition gets true.

 rtdm\_timedwait\_condition (struct rtdm\_wait\_queue \*wq, C\_expr condition, nanosecs\_rel\_t timeout, rtdm\_toseq\_t \*toseq)

Timed sleep on a waitqueue until a condition gets true.

- void rtdm\_timedwait (struct rtdm\_wait\_queue \*wq, nanosecs\_rel\_t timeout, rtdm\_toseq\_t \*toseq)

  Timed sleep on a waitqueue unconditionally.
- void rtdm\_timedwait\_locked (struct rtdm\_wait\_queue \*wq, nanosecs\_rel\_t timeout, rtdm\_toseq\_t \*toseq)

Timed sleep on a locked waitqueue unconditionally.

• rtdm\_wait\_condition (struct rtdm\_wait\_queue \*wq, C\_expr condition)

Sleep on a waitqueue until a condition gets true.

void rtdm wait (struct rtdm wait queue \*wq)

Sleep on a waitqueue unconditionally.

void rtdm\_wait\_locked (struct rtdm\_wait\_queue \*wq)

Sleep on a locked waitqueue unconditionally.

void rtdm\_waitqueue\_lock (struct rtdm\_wait\_queue \*wq, rtdm\_lockctx\_t context)
 Lock a waitqueue.

• void rtdm\_waitqueue\_unlock (struct rtdm\_wait\_queue \*wq, rtdm\_lockctx\_t context)

void rtdm\_waitqueue\_signal (struct rtdm\_wait\_queue \*wq)

Signal a waitqueue.

Unlock a waitqueue.

void rtdm\_waitqueue\_broadcast (struct rtdm\_wait\_queue \*wq)

Broadcast a waitqueue.

void rtdm\_waitqueue\_flush (struct rtdm\_wait\_queue \*wq)

Flush a waitqueue.

• void rtdm\_waitqueue\_wakeup (struct rtdm\_wait\_queue \*wq, rtdm\_task\_t waiter)

Signal a particular waiter on a waitqueue.

• rtdm\_for\_each\_waiter (rtdm\_task\_t pos, struct rtdm\_wait\_queue \*wq)

Simple iterator for waitqueues.

• rtdm\_for\_each\_waiter\_safe (rtdm\_task\_t pos, rtdm\_task\_t tmp, struct rtdm\_wait\_queue \*wq) Safe iterator for waitqueues.

## RTDM SELECTTYPE xxx

Event types select can bind to

enum rtdm\_selecttype { RTDM\_SELECTTYPE\_READ = XNSELECT\_READ, RTDM\_SELECTT-YPE\_WRITE = XNSELECT\_WRITE, RTDM\_SELECTTYPE\_EXCEPT = XNSELECT\_EXCEPT }

#### Timeout Sequence Management

- void rtdm\_toseq\_init (rtdm\_toseq\_t \*timeout\_seq, nanosecs\_rel\_t timeout)
   Initialise a timeout sequence.
- 6.30.1 Detailed Description
- 6.30.2 Enumeration Type Documentation
- 6.30.2.1 enum rtdm\_selecttype

## Enumerator

**RTDM\_SELECTTYPE\_READ** Select input data availability events. **RTDM\_SELECTTYPE\_WRITE** Select ouput buffer availability events. **RTDM\_SELECTTYPE\_EXCEPT** Select exceptional events.

6.30.3 Function Documentation

6.30.3.1 rtdm for each waiter ( rtdm task t pos, struct rtdm wait queue \* wq )

Simple iterator for waitqueues.

This construct traverses the wait list of a given waitqueue wq, assigning each RTDM task pointer to the cursor variable pos, which must be of type rtdm\_task\_t.

wq must have been locked by a call to rtdm\_waitqueue\_lock() prior to traversing its wait list.

#### **Parameters**

| pos cursor variable holding a pointer to the RTDM task being fetched. |                    |
|---|--------------------|
| wq  | waitqueue to scan. |

#### Note

The waitqueue should not be signaled, broadcast or flushed during the traversal, unless the loop is aborted immediately after. Should multiple waiters be readied while iterating, the safe form <a href="rtdm\_for\_each\_waiter\_safe">rtdm\_for\_each\_waiter\_safe</a>() must be used for traversal instead.

#### Tags

## unrestricted

6.30.3.2 rtdm\_for\_each\_waiter\_safe ( rtdm\_task\_t pos, rtdm\_task\_t tmp, struct rtdm\_wait\_queue \* wq )

Safe iterator for waitqueues.

This construct traverses the wait list of a given waitqueue *wq*, assigning each RTDM task pointer to the cursor variable *pos*, which must be of type rtdm\_task\_t.

Unlike with <a href="rtdm\_for\_each\_waiter">rtdm\_for\_each\_waiter</a>(), the waitqueue may be signaled, broadcast or flushed during the traversal.

wq must have been locked by a call to rtdm\_waitqueue\_lock() prior to traversing its wait list.

#### **Parameters**

| pos cursor variable holding a pointer to the RTDM task being fetched. |                            |
|---|----------------------------|
| tmp   | temporary cursor variable. |
| wq  | waitqueue to scan.         |

## Tags

## unrestricted

6.30.3.3 void rtdm\_timedwait ( struct rtdm\_wait\_queue \* wq, nanosecs\_rel\_t timeout, rtdm\_toseq\_t \* toseq )

Timed sleep on a waitqueue unconditionally.

The calling task is put to sleep until the waitqueue is signaled by either rtdm\_waitqueue\_signal() or rtdm\_waitqueue\_broadcast(), or flushed by a call to rtdm\_waitqueue\_flush(), or a timeout occurs.

## Parameters

|        | wq      | waitqueue to wait on.  |
|--------|---------|--|
|        | timeout | relative timeout in nanoseconds, see RTDM_TIMEOUT_xxx for special    |
|        |         | values.  |
| in,out | toseq   | handle of a timeout sequence as returned by rtdm_toseq_init() or NU- |
|        |         | LL.  |

### Returns

0 on success, otherwise:

• -EINTR is returned if the waitqueue has been flushed, or the calling task has received a Linux signal or has been forcibly unblocked by a call to rtdm\_task\_unblock().

148 Module Documentation

 -ETIMEDOUT is returned if the if the request has not been satisfied within the specified amount of time.

#### Note

Passing RTDM\_TIMEOUT\_NONE to *timeout* makes no sense for such service, and might cause unexpected behavior.

## Tags

primary-only, might-switch

```
6.30.3.4 rtdm_timedwait_condition ( struct rtdm_wait_queue * wq, C_expr condition, nanosecs_rel_t timeout, rtdm_toseq_t * toseq )
```

Timed sleep on a waitqueue until a condition gets true.

The calling task is put to sleep until *condition* evaluates to true or a timeout occurs. The condition is checked each time the waitqueue *wq* is signaled.

#### **Parameters**

|        | wq        | waitqueue to wait on.  |
|--------|-----------|--|
|        | condition | C expression for the event to wait for.                              |
|        | timeout   | relative timeout in nanoseconds, see RTDM_TIMEOUT_xxx for special    |
|        |           | values.  |
| in,out | toseq     | handle of a timeout sequence as returned by rtdm_toseq_init() or NU- |
|        |           | LL.  |

#### Returns

0 on success, otherwise:

- -EINTR is returned if calling task has received a Linux signal or has been forcibly unblocked by a call to rtdm\_task\_unblock().
- -ETIMEDOUT is returned if the if the request has not been satisfied within the specified amount of time.

## Note

rtdm\_waitqueue\_signal() has to be called after changing any variable that could change the result of the wait condition.

Passing RTDM\_TIMEOUT\_NONE to *timeout* makes no sense for such service, and might cause unexpected behavior.

#### Tags

primary-only, might-switch

```
6.30.3.5 rtdm_timedwait_condition_locked ( struct rtdm_wait_queue * wq, C_expr condition, nanosecs_rel_t timeout, rtdm_toseq_t * toseq )
```

Timed sleep on a locked waitqueue until a condition gets true.

The calling task is put to sleep until *condition* evaluates to true or a timeout occurs. The condition is checked each time the waitqueue *wq* is signaled.

The waitqueue must have been locked by a call to rtdm\_waitqueue\_lock() prior to calling this service.

|        | wq        | locked waitqueue to wait on. The waitqueue lock is dropped when      |
|--------|-----------|--|
|        |           | sleeping, then reacquired before this service returns to the caller. |
|        | condition | C expression for the event to wait for.                              |
|        | timeout   | relative timeout in nanoseconds, see RTDM_TIMEOUT_xxx for special    |
|        |           | values.  |
| in,out | toseq     | handle of a timeout sequence as returned by rtdm_toseq_init() or NU- |
|        |           | LL.  |

#### Returns

0 on success, otherwise:

- -EINTR is returned if calling task has received a Linux signal or has been forcibly unblocked by a call to rtdm\_task\_unblock().
- -ETIMEDOUT is returned if the if the request has not been satisfied within the specified amount of time.

#### Note

rtdm\_waitqueue\_signal() has to be called after changing any variable that could change the result of the wait condition.

Passing RTDM\_TIMEOUT\_NONE to *timeout* makes no sense for such service, and might cause unexpected behavior.

### Tags

primary-only, might-switch

6.30.3.6 void rtdm\_timedwait\_locked ( struct rtdm\_wait\_queue \* wq, nanosecs\_rel\_t timeout, rtdm toseq t \* toseq )

Timed sleep on a locked waitqueue unconditionally.

The calling task is put to sleep until the waitqueue is signaled by either rtdm\_waitqueue\_signal() or rtdm\_waitqueue\_broadcast(), or flushed by a call to rtdm\_waitqueue\_flush(), or a timeout occurs.

The waitqueue must have been locked by a call to <a href="rtdm\_waitqueue\_lock">rtdm\_waitqueue\_lock</a>() prior to calling this service.

#### **Parameters**

|        | wq      | locked waitqueue to wait on. The waitqueue lock is dropped when sleeping, then reacquired before this service returns to the caller. |
|--------|---------|--|
|        | timeout | relative timeout in nanoseconds, see RTDM_TIMEOUT_xxx for special values.  |
| in,out | toseq   | handle of a timeout sequence as returned by <a href="rtdm_toseq_init">rtdm_toseq_init</a> () or NU-LL.                               |

#### Returns

0 on success, otherwise:

- -EINTR is returned if the waitqueue has been flushed, or the calling task has received a Linux signal or has been forcibly unblocked by a call to rtdm\_task\_unblock().
- -ETIMEDOUT is returned if the if the request has not been satisfied within the specified amount of time.

Note

Passing RTDM\_TIMEOUT\_NONE to *timeout* makes no sense for such service, and might cause unexpected behavior.

Tags

primary-only, might-switch

```
6.30.3.7 void rtdm toseq init ( rtdm toseq t * timeout seq, nanosecs rel t timeout )
```

Initialise a timeout sequence.

This service initialises a timeout sequence handle according to the given timeout value. Timeout sequences allow to maintain a continuous *timeout* across multiple calls of blocking synchronisation services. A typical application scenario is given below.

#### **Parameters**

| in,out | timeout_seq | Timeout sequence handle  |
|--------|-------------|--|
| in     | timeout     | Relative timeout in nanoseconds, see RTDM_TIMEOUT_xxx for spe- |
|        |             | cial values  |

### Application Scenario:

Using a timeout sequence in such a scenario avoids that the user-provided relative timeout is restarted on every call to <a href="rtdm\_event\_timedwait">rtdm\_event\_timedwait</a>(), potentially causing an overall delay that is larger than specified by timeout. Moreover, all functions supporting timeout sequences also interpret special timeout values (infinite and non-blocking), disburdening the driver developer from handling them separately.

Tags

task-unrestricted

```
6.30.3.8 void rtdm wait ( struct rtdm wait queue * wq )
```

Sleep on a waitqueue unconditionally.

The calling task is put to sleep until the waitqueue is signaled by either rtdm\_waitqueue\_signal() or rtdm\_waitqueue\_broadcast(), or flushed by a call to rtdm\_waitqueue\_flush().

| wq | waitqueue to wait on. |
|----|-----------------------|
| •  | ·                     |

#### Returns

0 on success, otherwise:

• -EINTR is returned if the waitqueue has been flushed, or the calling task has received a Linux signal or has been forcibly unblocked by a call to rtdm task unblock().

# Tags

primary-only, might-switch

```
6.30.3.9 rtdm_wait_condition ( struct rtdm_wait_queue * wq, C_expr condition )
```

Sleep on a waitqueue until a condition gets true.

The calling task is put to sleep until *condition* evaluates to true. The condition is checked each time the waitqueue *wq* is signaled.

#### **Parameters**

| wq waitqueue to wait on                           |  |
|---|--|
| condition C expression for the event to wait for. |  |

#### Returns

0 on success, otherwise:

• -EINTR is returned if calling task has received a Linux signal or has been forcibly unblocked by a call to rtdm\_task\_unblock().

# Note

rtdm\_waitqueue\_signal() has to be called after changing any variable that could change the result of the wait condition.

# Tags

primary-only, might-switch

```
6.30.3.10 rtdm_wait_condition_locked ( struct rtdm_wait_queue * wq, C_expr condition )
```

Sleep on a locked waitqueue until a condition gets true.

The calling task is put to sleep until *condition* evaluates to true. The condition is checked each time the waitqueue *wg* is signaled.

The waitqueue must have been locked by a call to <a href="rtdm\_waitqueue\_lock">rtdm\_waitqueue\_lock</a>() prior to calling this service.

#### **Parameters**

| wq        | locked waitqueue to wait on. The waitqueue lock is dropped when sleeping, then |
|-----------|--|
|           | reacquired before this service returns to the caller.                          |
| condition | C expression for the event to wait for.  |

#### Returns

0 on success, otherwise:

• -EINTR is returned if calling task has received a Linux signal or has been forcibly unblocked by a call to rtdm\_task\_unblock().

#### Note

rtdm\_waitqueue\_signal() has to be called after changing any variable that could change the result of the wait condition.

#### Tags

primary-only, might-switch

```
6.30.3.11 void rtdm_wait_locked ( struct rtdm_wait_queue * wq )
```

Sleep on a locked waitqueue unconditionally.

The calling task is put to sleep until the waitqueue is signaled by either rtdm\_waitqueue\_signal() or rtdm\_waitqueue broadcast(), or flushed by a call to rtdm\_waitqueue flush().

The waitqueue must have been locked by a call to rtdm\_waitqueue\_lock() prior to calling this service.

# **Parameters**

| wq | locked waitqueue to wait on. The waitqueue lock is dropped when sleeping, then |
|----|--|
|    | reacquired before this service returns to the caller.                          |

### Returns

0 on success, otherwise:

• -EINTR is returned if the waitqueue has been flushed, or the calling task has received a Linux signal or has been forcibly unblocked by a call to rtdm\_task\_unblock().

# Tags

primary-only, might-switch

```
6.30.3.12 void rtdm_waitqueue_broadcast ( struct rtdm_wait_queue * wq )
```

Broadcast a waitqueue.

Broadcast the waitqueue *wq*, waking up all waiters. Each readied task may assume to have received the wake up event.

wq waitqueue to broadcast.

Returns

non-zero if at least one task has been readied as a result of this call, zero otherwise.

Tags

unrestricted, might-switch

6.30.3.13 void rtdm\_waitqueue\_destroy ( struct rtdm\_waitqueue \* wq )

Deletes a RTDM wait queue.

Dismantles a wait queue structure, releasing all resources attached to it.

**Parameters** 

wq waitqueue to delete.

Tags

task-unrestricted

6.30.3.14 void rtdm\_waitqueue\_flush ( struct rtdm\_wait\_queue \* wq )

Flush a waitqueue.

Flushes the waitqueue wq, unblocking all waiters with an error status (-EINTR).

Parameters

wq waitqueue to flush.

Returns

non-zero if at least one task has been readied as a result of this call, zero otherwise.

Tags

unrestricted, might-switch

6.30.3.15 void rtdm\_waitqueue\_init ( struct rtdm\_waitqueue \* wq )

Initialize a RTDM wait queue.

Sets up a wait queue structure for further use.

**Parameters** 

wq waitqueue to initialize.

Tags

task-unrestricted

154 Module Documentation

6.30.3.16 void rtdm\_waitqueue\_lock ( struct rtdm\_wait\_queue \* wq, rtdm\_lockctx\_t context )

Lock a waitqueue.

Acquires the lock on the waitqueue wq.

**Parameters** 

| wq      | waitqueue to lock.                              |
|---------|---|
| context | name of local variable to store the context in. |

Note

Recursive locking might lead to unexpected behavior, including lock up.

Tags

unrestricted

6.30.3.17 void rtdm\_waitqueue\_signal ( struct rtdm\_wait\_queue \* wq )

Signal a waitqueue.

Signals the waitqueue wq, waking up a single waiter (if any).

**Parameters** 

| wq | waitqueue to signal. |
|----|----------------------|
|----|----------------------|

Returns

non-zero if a task has been readied as a result of this call, zero otherwise.

Tags

unrestricted, might-switch

6.30.3.18 void rtdm\_waitqueue\_unlock ( struct rtdm\_wait\_queue \* wq, rtdm\_lockctx\_t context )

Unlock a waitqueue.

Releases the lock on the waitqueue wg.

**Parameters** 

| wq      | waitqueue to unlock.                                 |
|---------|--|
| context | name of local variable to retrieve the context from. |

Tags

unrestricted

6.30.3.19 void rtdm\_waitqueue\_wakeup ( struct rtdm\_wait\_queue \* wq, rtdm\_task\_t waiter )

Signal a particular waiter on a waitqueue.

Signals the waitqueue wq, waking up waiter waiter only, which must be currently sleeping on the waitqueue.

| wq     | waitqueue to signal.  |
|--------|-----------------------|
| waiter | RTDM task to wake up. |

# Tags

unrestricted, might-switch

# 6.31 Event Services

Collaboration diagram for Event Services:



# **Functions**

void rtdm\_event\_init (rtdm\_event\_t \*event, unsigned long pending)

Initialise an event.

void rtdm\_event\_destroy (rtdm\_event\_t \*event)

Destroy an event.

• void rtdm\_event\_pulse (rtdm\_event\_t \*event)

Signal an event occurrence to currently listening waiters.

void rtdm\_event\_signal (rtdm\_event\_t \*event)

Signal an event occurrence.

int rtdm\_event\_wait (rtdm\_event\_t \*event)

Wait on event occurrence.

int rtdm\_event\_timedwait (rtdm\_event\_t \*event, nanosecs\_rel\_t timeout, rtdm\_toseq\_t \*timeout\_seq)

Wait on event occurrence with timeout.

void rtdm\_event\_clear (rtdm\_event\_t \*event)

Clear event state.

• int rtdm\_event\_select\_bind (rtdm\_event\_t \*event, rtdm\_selector\_t \*selector, enum rtdm\_selecttype type, unsigned int fd\_index)

Bind a selector to an event.

# 6.31.1 Detailed Description

#### 6.31.2 Function Documentation

6.31.2.1 void rtdm\_event\_clear ( rtdm\_event\_t \* event )

Clear event state.

Parameters

| in,out | event | Event handle as returned by rtdm_event_init() |
|--------|-------|---|

#### Tags

#### unrestricted

References xnselect\_signal().

6.31 Event Services 157

6.31.2.2 void rtdm\_event\_destroy ( rtdm\_event\_t \* event )

Destroy an event.

| in,out | event | Event handle as returned by rtdm_event_init() |
|--------|-------|---|

#### Tags

### task-unrestricted, might-switch

References XNRMID, and xnselect\_destroy().

6.31.2.3 void rtdm\_event\_init ( rtdm\_event\_t \* event, unsigned long pending )

#### Initialise an event.

# **Parameters**

| in,out | event   | Event handle   |
|--------|---------|--|
| in     | pending | Non-zero if event shall be initialised as set, 0 otherwise |

# Tags

#### task-unrestricted

References xnselect\_init(), and xnsynch\_init().

6.31.2.4 void rtdm\_event\_pulse ( rtdm\_event\_t \* event )

Signal an event occurrence to currently listening waiters.

This function wakes up all current waiters of the given event, but it does not change the event state. Subsequently callers of rtdm\_event\_wait() or rtdm\_event\_timedwait() will therefore be blocked first.

#### **Parameters**

| in,out | event | Event handle as returned by rtdm_event_init() |
|--------|-------|---|
|--------|-------|---|

### Tags

# unrestricted, might-switch

6.31.2.5 int rtdm\_event\_select\_bind ( rtdm\_event\_t \* event, rtdm\_selector\_t \* selector, enum rtdm\_selecttype type, unsigned int fd\_index )

Bind a selector to an event.

This functions binds the given selector to an event so that the former is notified when the event state changes. Typically the select binding handler will invoke this service.

# **Parameters**

| in,out | event    | Event handle as returned by rtdm_event_init()                   |
|--------|----------|---|
| in,out | selector | Selector as passed to the select binding handler                |
| in     | type     | Type of the bound event as passed to the select binding handler |

6.31 Event Services 159

| in | fd_index | File descriptor index as passed to the select binding handler |
|----|----------|---|
|----|----------|---|

#### Returns

0 on success, otherwise:

- -ENOMEM is returned if there is insufficient memory to establish the dynamic binding.
- -EINVAL is returned if type or fd\_index are invalid.

# Tags

#### task-unrestricted

References xnselect\_bind().

```
6.31.2.6 void rtdm_event_signal ( rtdm_event_t * event )
```

Signal an event occurrence.

This function sets the given event and wakes up all current waiters. If no waiter is presently registered, the next call to <a href="rtdm\_event\_wait">rtdm\_event\_wait</a>() or <a href="rtdm\_event\_timedwait</a>() will return immediately.

#### **Parameters**

| in,out | event | Event handle as returned by rtdm_event_init() |
|--------|-------|---|
|--------|-------|---|

#### Tags

# unrestricted, might-switch

References xnsched\_run(), xnselect\_signal(), and xnsynch\_flush().

```
6.31.2.7 int rtdm_event_timedwait ( rtdm_event_t * event, nanosecs_rel_t timeout, rtdm_toseq_t * timeout seq )
```

Wait on event occurrence with timeout.

This function waits or tests for the occurrence of the given event, taking the provided timeout into account. On successful return, the event is reset.

#### **Parameters**

| in,out | event       | Event handle as returned by rtdm_event_init()                            |
|--------|-------------|--|
| in     | timeout     | Relative timeout in nanoseconds, see RTDM_TIMEOUT_xxx for special values |
| in,out | timeout_seq | Handle of a timeout sequence as returned by rtdm_toseq_init() or NU-LL   |

#### Returns

0 on success, otherwise:

- -ETIMEDOUT is returned if the if the request has not been satisfied within the specified amount of time
- -EINTR is returned if calling task has been unblock by a signal or explicitly via rtdm\_task\_unblock().
- -EIDRM is returned if event has been destroyed.

160 Module Documentation

- -EPERM may be returned if an illegal invocation environment is detected.
- -EWOULDBLOCK is returned if a negative timeout (i.e., non-blocking operation) has been specified

# Tags

primary-only, might-switch

References XNBREAK, XNRMID, xnselect\_signal(), xnsynch\_sleep\_on(), and XNTIMEO. Referenced by rtdm\_event\_wait().

```
6.31.2.8 int rtdm_event_wait ( rtdm_event_t * event )
```

Wait on event occurrence.

This is the light-weight version of rtdm\_event\_timedwait(), implying an infinite timeout.

#### **Parameters**

|  | in,out | event | Event handle as returned by rtdm_event_init() |
|--|--------|-------|---|
|--|--------|-------|---|

# Returns

0 on success, otherwise:

- -EINTR is returned if calling task has been unblock by a signal or explicitly via rtdm\_task\_unblock().
- -EIDRM is returned if event has been destroyed.
- -EPERM may be returned if an illegal invocation environment is detected.

### Tags

primary-only, might-switch

References rtdm\_event\_timedwait().

# 6.32 Semaphore Services

Collaboration diagram for Semaphore Services:



# **Functions**

- void rtdm\_sem\_init (rtdm\_sem\_t \*sem, unsigned long value)
   Initialise a semaphore.
- void rtdm\_sem\_destroy (rtdm\_sem\_t \*sem)

Destroy a semaphore.

int rtdm\_sem\_down (rtdm\_sem\_t \*sem)

Decrement a semaphore.

- int rtdm\_sem\_timeddown (rtdm\_sem\_t \*sem, nanosecs\_rel\_t timeout, rtdm\_toseq\_t \*timeout\_seq)

  Decrement a semaphore with timeout.
- void rtdm\_sem\_up (rtdm\_sem\_t \*sem)

Increment a semaphore.

• int rtdm\_sem\_select\_bind (rtdm\_sem\_t \*sem, rtdm\_selector\_t \*selector, enum rtdm\_selecttype type, unsigned int fd\_index)

Bind a selector to a semaphore.

# 6.32.1 Detailed Description

# 6.32.2 Function Documentation

6.32.2.1 void rtdm\_sem\_destroy ( rtdm\_sem\_t \* sem )

# Destroy a semaphore.

**Parameters** 

| in,out | sem | Semaphore handle as returned by rtdm_sem_init() |
|--------|-----|---|
|--------|-----|---|

# Tags

task-unrestricted, might-switch

References XNRMID, and xnselect\_destroy().

6.32.2.2 int rtdm\_sem\_down ( rtdm\_sem\_t \* sem )

Decrement a semaphore.

This is the light-weight version of rtdm sem timeddown(), implying an infinite timeout.

| in,out | sem | Semaphore handle as returned by rtdm_sem_init() |
|--------|-----|---|
|--------|-----|---|

#### Returns

0 on success, otherwise:

- -EINTR is returned if calling task has been unblock by a signal or explicitly via rtdm\_task\_unblock().
- -EIDRM is returned if sem has been destroyed.
- -EPERM may be returned if an illegal invocation environment is detected.

### Tags

primary-only, might-switch

References rtdm\_sem\_timeddown().

6.32.2.3 void rtdm\_sem\_init ( rtdm\_sem\_t \* sem, unsigned long value )

Initialise a semaphore.

#### **Parameters**

| in,out | sem   | Semaphore handle               |
|--------|-------|--------------------------------|
| in     | value | Initial value of the semaphore |

#### Tags

#### task-unrestricted

References xnselect\_init(), and xnsynch\_init().

6.32.2.4 int rtdm\_sem\_select\_bind ( rtdm\_sem\_t \* sem, rtdm\_selector\_t \* selector, enum rtdm selecttype type, unsigned int fd index )

Bind a selector to a semaphore.

This functions binds the given selector to the semaphore so that the former is notified when the semaphore state changes. Typically the select binding handler will invoke this service.

#### **Parameters**

| in,out | sem      | Semaphore handle as returned by rtdm_sem_init()                 |
|--------|----------|---|
| in,out | selector | Selector as passed to the select binding handler                |
| in     | type     | Type of the bound event as passed to the select binding handler |
| in     | fd_index | File descriptor index as passed to the select binding handler   |

### Returns

0 on success, otherwise:

- -ENOMEM is returned if there is insufficient memory to establish the dynamic binding.
- -EINVAL is returned if type or fd\_index are invalid.

# Tags

# task-unrestricted

References xnselect\_bind().

6.32.2.5 int rtdm\_sem\_timeddown ( rtdm\_sem\_t \* sem, nanosecs\_rel\_t timeout, rtdm\_toseq\_t \* timeout\_seq )

Decrement a semaphore with timeout.

This function tries to decrement the given semphore's value if it is positive on entry. If not, the caller is blocked unless non-blocking operation was selected.

#### **Parameters**

| in,out | sem         | Semaphore handle as returned by rtdm_sem_init()                      |
|--------|-------------|--|
| in     | timeout     | Relative timeout in nanoseconds, see RTDM_TIMEOUT_xxx for spe-       |
|        |             | cial values  |
| in,out | timeout_seq | Handle of a timeout sequence as returned by rtdm_toseq_init() or NU- |
|        |             | LL   |

#### Returns

0 on success, otherwise:

- -ETIMEDOUT is returned if the if the request has not been satisfied within the specified amount of time.
- -EWOULDBLOCK is returned if timeout is negative and the semaphore value is currently not positive
- -EINTR is returned if calling task has been unblock by a signal or explicitly via rtdm\_task\_unblock().
- -EIDRM is returned if sem has been destroyed.
- -EPERM may be returned if an illegal invocation environment is detected.

#### Tags

primary-only, might-switch

References XNBREAK, XNRMID, xnselect\_signal(), xnsynch\_sleep\_on(), and XNTIMEO. Referenced by rtdm\_sem\_down().

```
6.32.2.6 void rtdm_sem_up ( rtdm_sem_t * sem )
```

Increment a semaphore.

This function increments the given semphore's value, waking up a potential waiter which was blocked upon rtdm sem down().

#### **Parameters**

| in,out | sem | Semaphore handle as returned by rtdm_sem_init() |
|--------|-----|---|
|--------|-----|---|

# Tags

unrestricted, might-switch

References xnsched\_run(), xnselect\_signal(), and xnsynch\_wakeup\_one\_sleeper().

# 6.33 Mutex services

Collaboration diagram for Mutex services:



# **Functions**

• void rtdm\_mutex\_init (rtdm\_mutex\_t \*mutex)

Initialise a mutex.void rtdm\_mutex\_destroy (rtdm\_mutex\_t \*mutex)

Destroy a mutex.

void rtdm\_mutex\_unlock (rtdm\_mutex\_t \*mutex)

Release a mutex.

• int rtdm\_mutex\_lock (rtdm\_mutex\_t \*mutex)

Request a mutex.

int rtdm\_mutex\_timedlock (rtdm\_mutex\_t \*mutex, nanosecs\_rel\_t timeout, rtdm\_toseq\_t \*timeout\_seq)

Request a mutex with timeout.

# 6.33.1 Detailed Description

# 6.33.2 Function Documentation

6.33.2.1 void rtdm mutex destroy ( rtdm mutex t \* mutex )

# Destroy a mutex.

# **Parameters**

| in,out | mutex | Mutex handle as returned by rtdm_mutex_init() |
|--------|-------|---|

# Tags

task-unrestricted, might-switch

# References XNRMID.

6.33.2.2 void rtdm\_mutex\_init ( rtdm\_mutex\_t \* mutex )

#### Initialise a mutex.

This function initalises a basic mutex with priority inversion protection. "Basic", as it does not allow a mutex owner to recursively lock the same mutex again.

6.33 Mutex services 165

#### **Parameters**

| in,out | mutex | Mutex handle |
|--------|-------|--------------|
|--------|-------|--------------|

# Tags

### task-unrestricted

References xnsynch\_init().

```
6.33.2.3 int rtdm_mutex_lock ( rtdm_mutex_t * mutex )
```

Request a mutex.

This is the light-weight version of rtdm\_mutex\_timedlock(), implying an infinite timeout.

#### **Parameters**

| in,out | mutex | Mutex handle as returned by rtdm_mutex_init() |
|--------|-------|---|
|--------|-------|---|

#### Returns

0 on success, otherwise:

- -EIDRM is returned if *mutex* has been destroyed.
- -EPERM may be returned if an illegal invocation environment is detected.

# Tags

primary-only, might-switch

References rtdm\_mutex\_timedlock().

```
6.33.2.4 int rtdm_mutex_timedlock ( rtdm_mutex_t * mutex, nanosecs_rel_t timeout, rtdm_toseq_t * timeout_seq )
```

Request a mutex with timeout.

This function tries to acquire the given mutex. If it is not available, the caller is blocked unless non-blocking operation was selected.

#### **Parameters**

| in,out | mutex       | Mutex handle as returned by rtdm_mutex_init()   |
|--------|-------------|---|
| in     | timeout     | Relative timeout in nanoseconds, see RTDM_TIMEOUT_xxx for special values                              |
| in,out | timeout_seq | Handle of a timeout sequence as returned by <a href="rtdm_toseq_init(">rtdm_toseq_init()</a> or NU-LL |

# Returns

0 on success, otherwise:

- -ETIMEDOUT is returned if the if the request has not been satisfied within the specified amount of
- -EWOULDBLOCK is returned if timeout is negative and the semaphore value is currently not positive.

166 Module Documentation

- -EIDRM is returned if mutex has been destroyed.
- -EPERM may be returned if an illegal invocation environment is detected.

# Tags

primary-only, might-switch

References XNBREAK, XNRMID, xnsynch acquire(), and XNTIMEO.

Referenced by rtdm\_mutex\_lock().

6.33.2.5 void rtdm\_mutex\_unlock ( rtdm\_mutex\_t \* mutex )

#### Release a mutex.

This function releases the given mutex, waking up a potential waiter which was blocked upon rtdm\_mutex\_lock() or rtdm\_mutex\_timedlock().

#### **Parameters**

| in,out | mutex | Mutex handle as returned by rtdm_mutex_init() |
|--------|-------|---|
| ,      |       |   |


# Tags

primary-only, might-switch

References xnsched\_run(), and xnsynch\_release().

# 6.34 Interrupt Management Services

Collaboration diagram for Interrupt Management Services:

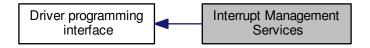

# Macros

#define rtdm\_irq\_get\_arg(irq\_handle, type) ((type \*)irq\_handle->cookie)
 Retrieve IRQ handler argument.

# **Typedefs**

typedef int(\* rtdm\_irq\_handler\_t )(rtdm\_irq\_t \*irq\_handle)
 Interrupt handler.

# **Functions**

• int rtdm\_irq\_request (rtdm\_irq\_t \*irq\_handle, unsigned int irq\_no, rtdm\_irq\_handler\_t handler, unsigned long flags, const char \*device\_name, void \*arg)

Register an interrupt handler.

int rtdm\_irq\_free (rtdm\_irq\_t \*irq\_handle)

Release an interrupt handler.

• int rtdm\_irq\_enable (rtdm\_irq\_t \*irq\_handle)

Enable interrupt line.

• int rtdm\_irq\_disable (rtdm\_irq\_t \*irq\_handle)

Disable interrupt line.

# RTDM IRQTYPE xxx

Interrupt registrations flags

#define RTDM\_IRQTYPE\_SHARED XN\_ISR\_SHARED

Enable IRQ-sharing with other real-time drivers.

#define RTDM\_IRQTYPE\_EDGE XN\_ISR\_EDGE

Mark IRQ as edge-triggered, relevant for correct handling of shared edge-triggered IRQs.

# RTDM IRQ xxx

Return flags of interrupt handlers

- #define RTDM\_IRQ\_NONE XN\_ISR\_NONE
   Unhandled interrupt.
- #define RTDM\_IRQ\_HANDLED XN\_ISR\_HANDLED

Denote handled interrupt.

# 6.34.1 Detailed Description

# 6.34.2 Macro Definition Documentation

6.34.2.1 #define rtdm\_irq\_get\_arg( irq\_handle, type ) ((type \*)irq\_handle->cookie)

# Retrieve IRQ handler argument.

#### **Parameters**

| irq_handle IRQ handle |                               |
|-----------------------|-------------------------------|
| type                  | Type of the pointer to return |

#### Returns

The argument pointer registered on <a href="rtdm\_irq\_request">rtdm\_irq\_request</a>() is returned, type-casted to the specified <a href="type">type</a>.

# Tags

# unrestricted

# 6.34.3 Typedef Documentation

6.34.3.1 typedef int(\* rtdm\_irq\_handler\_t)(rtdm\_irq\_t \*irq\_handle)

# Interrupt handler.

# **Parameters**

| in | irq_handle | IRQ handle as returned by rtdm_irq_request() |
|----|------------|--|
|----|------------|--|

#### Returns

0 or a combination of RTDM\_IRQ\_xxx flags

# 6.34.4 Function Documentation

6.34.4.1 int rtdm\_irq\_disable ( rtdm\_irq\_t \* irq\_handle )

# Disable interrupt line.

| in,out | irq_handle | IRQ handle as returned by rtdm_irq_request() |
|--------|------------|--|
|--------|------------|--|

#### Returns

0 on success, otherwise negative error code

#### Note

This service is for exceptional use only. Drivers should always prefer interrupt masking at device level (via corresponding control registers etc.) over masking at line level. Keep in mind that the latter is incompatible with IRQ line sharing and can also be more costly as interrupt controller access requires broader synchronization. Also, certain IRQ types may not allow the invocation over RT and interrupt contexts. The caller is responsible for excluding such conflicts.

#### Tags

secondary-only

6.34.4.2 int rtdm irg enable ( rtdm irg t \* irg handle )

Enable interrupt line.

**Parameters** 

| in | out, | irq_handle | IRQ handle as returned by rtdm_irq_request() |
|----|------|------------|--|
|----|------|------------|--|

#### Returns

0 on success, otherwise negative error code

# Note

This service is for exceptional use only. Drivers should always prefer interrupt masking at device level (via corresponding control registers etc.) over masking at line level. Keep in mind that the latter is incompatible with IRQ line sharing and can also be more costly as interrupt controller access requires broader synchronization. Also, certain IRQ types may not allow the invocation over RT and interrupt contexts. The caller is responsible for excluding such conflicts.

# Tags

secondary-only

6.34.4.3 int rtdm\_irq\_free ( rtdm\_irq\_t \* irq\_handle )

Release an interrupt handler.

**Parameters** 

| in,out | irq_handle | IRQ handle as returned by rtdm_irq_request() |
|--------|------------|--|

#### Returns

0 on success, otherwise negative error code

#### Note

The caller is responsible for shutting down the IRQ source at device level before invoking this service. In turn, rtdm\_irq\_free ensures that any pending event on the given IRQ line is fully processed on return from this service.

# Tags

secondary-only

6.34.4.4 int rtdm\_irq\_request ( rtdm\_irq\_t \* irq\_handle, unsigned int irq\_no, rtdm\_irq\_handler\_t handler, unsigned long flags, const char \* device\_name, void \* arg )

Register an interrupt handler.

This function registers the provided handler with an IRQ line and enables the line.

#### **Parameters**

| in,out | irq_handle  | IRQ handle  |
|--------|-------------|---|
| in     | irq_no      | Line number of the addressed IRQ                            |
| in     | handler     | Interrupt handler   |
| in     | flags       | Registration flags, see RTDM_IRQTYPE_xxx for details        |
| in     | device_name | Device name to show up in real-time IRQ lists               |
| in     | arg         | Pointer to be passed to the interrupt handler on invocation |

#### Returns

0 on success, otherwise:

- -EINVAL is returned if an invalid parameter was passed.
- -EBUSY is returned if the specified IRQ line is already in use.

# Tags


# secondary-only

References xnintr\_attach(), xnintr\_enable(), and xnintr\_init().

# 6.35 Non-Real-Time Signalling Services

These services provide a mechanism to request the execution of a specified handler in non-real-time context.

Collaboration diagram for Non-Real-Time Signalling Services:

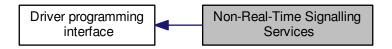

# **Typedefs**

• typedef void(\* rtdm\_nrtsig\_handler\_t )(rtdm\_nrtsig\_t nrt\_sig, void \*arg)

Non-real-time signal handler.

#### **Functions**

- int rtdm\_nrtsig\_init (rtdm\_nrtsig\_t \*nrt\_sig, rtdm\_nrtsig\_handler\_t handler, void \*arg)

  Register a non-real-time signal handler.
- void rtdm\_nrtsig\_destroy (rtdm\_nrtsig\_t \*nrt\_sig)

Release a non-realtime signal handler.

void rtdm\_nrtsig\_pend (rtdm\_nrtsig\_t \*nrt\_sig)

Trigger non-real-time signal.

# 6.35.1 Detailed Description

These services provide a mechanism to request the execution of a specified handler in non-real-time context. The triggering can safely be performed in real-time context without suffering from unknown delays. The handler execution will be deferred until the next time the real-time subsystem releases the CPU to the non-real-time part.

# 6.35.2 Typedef Documentation

6.35.2.1 typedef void(\* rtdm nrtsig handler t)(rtdm nrtsig t nrt sig, void \*arg)

# Non-real-time signal handler.

# **Parameters**

| in | nrt_sig | Signal handle as returned by rtdm_nrtsig_init() |
|----|---------|---|
| in | arg     | Argument as passed to rtdm_nrtsig_init()        |

### Note

The signal handler will run in soft-IRQ context of the non-real-time subsystem. Note the implications of this context, e.g. no invocation of blocking operations.

# 6.35.3 Function Documentation

6.35.3.1 void rtdm\_nrtsig\_destroy ( rtdm\_nrtsig\_t \* nrt\_sig )

Release a non-realtime signal handler.

**Parameters** 

| in,out | nrt_sig | Signal handle |
|--------|---------|---------------|

# Tags

# task-unrestricted

6.35.3.2 int rtdm\_nrtsig\_init ( rtdm\_nrtsig\_t \* nrt\_sig, rtdm\_nrtsig\_handler\_t handler, void \* arg )

Register a non-real-time signal handler.

# **Parameters**

| in,out | nrt_sig | Signal handle  |
|--------|---------|--|
| in     | handler | Non-real-time signal handler                           |
| in     | arg     | Custom argument passed to handler() on each invocation |

# Returns

0 on success, otherwise:

• -EAGAIN is returned if no free signal slot is available.

# Tags

#### task-unrestricted

6.35.3.3 void rtdm\_nrtsig\_pend ( rtdm\_nrtsig\_t \* nrt\_sig )

Trigger non-real-time signal.

# **Parameters**

| in,out | nrt_sig | Signal handle |  |
|--------|---------|---------------|--|


# Tags

unrestricted

6.36 Utility Services 173

# 6.36 Utility Services

Collaboration diagram for Utility Services:



# **Functions**

• int rtdm\_mmap\_to\_user (struct rtdm\_fd \*fd, void \*src\_addr, size\_t len, int prot, void \*\*pptr, struct vm operations struct \*vm ops, void \*vm private data)

Map a kernel memory range into the address space of the user.

• int rtdm\_iomap\_to\_user (struct rtdm\_fd \*fd, phys\_addr\_t src\_addr, size\_t len, int prot, void \*\*pptr, struct vm\_operations\_struct \*vm\_ops, void \*vm\_private\_data)

Map an I/O memory range into the address space of the user.

int rtdm\_mmap\_kmem (struct vm\_area\_struct \*vma, void \*va)

Map a kernel memory range to a virtual memory area.

int rtdm\_mmap\_iomem (struct vm\_area\_struct \*vma, phys\_addr\_t pa)

Map an I/O memory range to a virtual memory area.

int rtdm\_munmap (void \*ptr, size\_t len)

Unmap a user memory range.

• int rtdm\_ratelimit (struct rtdm\_ratelimit\_state \*rs, const char \*func)

Enforces a rate limit.

• void rtdm\_printk\_ratelimited (const char \*format,...)

Real-time safe rate-limited message printing on kernel console.

• void rtdm\_printk (const char \*format,...)

Real-time safe message printing on kernel console.

void \* rtdm\_malloc (size\_t size)

Allocate memory block.

void rtdm\_free (void \*ptr)

Release real-time memory block.

• int rtdm read user ok (struct rtdm fd \*fd, const void user \*ptr, size t size)

Check if read access to user-space memory block is safe.

• int rtdm\_rw\_user\_ok (struct rtdm\_fd \*fd, const void \_\_user \*ptr, size\_t size)

Check if read/write access to user-space memory block is safe.

• int rtdm\_copy\_from\_user (struct rtdm\_fd \*fd, void \*dst, const void \_\_user \*src, size\_t size)

Copy user-space memory block to specified buffer.

• int rtdm\_safe\_copy\_from\_user (struct rtdm\_fd \*fd, void \*dst, const void \_\_user \*src, size\_t size)

Check if read access to user-space memory block and copy it to specified buffer.

• int rtdm\_copy\_to\_user (struct rtdm\_fd \*fd, void \_\_user \*dst, const void \*src, size\_t size)

Copy specified buffer to user-space memory block.

int rtdm\_safe\_copy\_to\_user (struct rtdm\_fd \*fd, void \_\_user \*dst, const void \*src, size\_t size)

Check if read/write access to user-space memory block is safe and copy specified buffer to it.

int rtdm\_strncpy\_from\_user (struct rtdm\_fd \*fd, char \*dst, const char \_\_user \*src, size\_t count)

Copy user-space string to specified buffer.

int rtdm\_in\_rt\_context (void)

Test if running in a real-time task.

int rtdm\_rt\_capable (struct rtdm\_fd \*fd)

Test if the caller is capable of running in real-time context.

# 6.36.1 Detailed Description

# 6.36.2 Function Documentation

6.36.2.1 int rtdm\_copy\_from\_user ( struct rtdm\_fd \* fd, void \* dst, const void \_\_user \* src, size\_t size )

Copy user-space memory block to specified buffer.

#### **Parameters**

| in | fd   | RTDM file descriptor as passed to the invoked device operation han- |
|----|------|---|
|    |      | dler  |
| in | dst  | Destination buffer address  |
| in | src  | Address of the user-space memory block                              |
| in | size | Size of the memory block  |

#### Returns

0 on success, otherwise:

-EFAULT is returned if an invalid memory area was accessed.

# Note

Before invoking this service, verify via <a href="rtdm\_read\_user\_ok">rtdm\_read\_user\_ok</a>() that the provided user-space address can securely be accessed.

# Tags

#### task-unrestricted

6.36.2.2 int rtdm\_copy\_to\_user ( struct rtdm\_fd \* fd, void \_\_user \* dst, const void \* src, size\_t size )

Copy specified buffer to user-space memory block.

# **Parameters**

| in | fd   | RTDM file descriptor as passed to the invoked device operation handler |
|----|------|--|
| in | dst  | Address of the user-space memory block                                 |
| in | src  | Source buffer address  |
| in | size | Size of the memory block   |

# Returns

0 on success, otherwise:

-EFAULT is returned if an invalid memory area was accessed.

6.36 Utility Services 175

Note

Before invoking this service, verify via <a href="rtdm\_rw\_user\_ok">rtdm\_rw\_user\_ok</a>() that the provided user-space address can securely be accessed.

Tags

task-unrestricted

6.36.2.3 void rtdm\_free ( void \* ptr )

Release real-time memory block.

**Parameters** 

| in | ptr | Pointer to memory block as returned by rtdm_malloc() |
|----|-----|--|

Tags

unrestricted

6.36.2.4 int rtdm\_in\_rt\_context (void)

Test if running in a real-time task.

Returns

Non-zero is returned if the caller resides in real-time context, 0 otherwise.

Tags

task-unrestricted

6.36.2.5 int rtdm\_iomap\_to\_user ( struct rtdm\_fd \* fd, phys\_addr\_t src\_addr, size\_t len, int prot, void \*\* pptr, struct vm\_operations\_struct \* vm\_ops, void \* vm\_private\_data )

Map an I/O memory range into the address space of the user.

# **Parameters**

| in     | fd       | RTDM file descriptor as passed to the invoked device operation han- |
|--------|----------|---|
|        |          | dler  |
| in     | src_addr | physical I/O address to be mapped                                   |
| in     | len      | Length of the memory range  |
| in     | prot     | Protection flags for the user's memory range, typically either PROT |
|        |          | READ or PROT_READ PROT_WRITE  |
| in,out | pptr     | Address of a pointer containing the desired user address or NULL on |
|        |          | entry and the finally assigned address on return                    |
| in     | vm_ops   | vm_operations to be executed on the vm_area of the user memory      |
|        |          | range or NULL   |

| in | vm_private | Private data to be stored in the vm_area, primarily useful for vm |
|----|------------|---|
|    | data       | operation handlers  |

#### Returns

0 on success, otherwise (most common values):

- -EINVAL is returned if an invalid start address, size, or destination address was passed.
- -ENOMEM is returned if there is insufficient free memory or the limit of memory mapping for the user process was reached.
- -EAGAIN is returned if too much memory has been already locked by the user process.
- -EPERM may be returned if an illegal invocation environment is detected.

#### Note

RTDM supports two models for unmapping the memory area:

- manual unmapping via <a href="mailto:rtdm\_munmap">rtdm\_munmap</a>(), which may be issued from a driver in response to an IOCTL call, or by a call to the regular munmap() call from the application.
- automatic unmapping, triggered by the termination of the process which owns the mapping.
  To track the number of references pending on the resource mapped, the driver can pass the
  address of a close handler for the vm\_area considered, in the vm\_ops descriptor. See the
  relevant Linux kernel programming documentation (e.g. Linux Device Drivers book) on virtual
  memory management for details.

#### Tags

secondary-only

6.36.2.6 void\* rtdm\_malloc ( size\_t size )

Allocate memory block.

**Parameters** 

|    |      | ·                                  |
|----|------|------------------------------------|
| in | size | Requested size of the memory block |

#### Returns

The pointer to the allocated block is returned on success, NULL otherwise.

#### Tags

### unrestricted

Referenced by a4l alloc subd().

6.36.2.7 int rtdm\_mmap\_iomem ( struct vm\_area\_struct \* vma, phys\_addr\_t pa )

Map an I/O memory range to a virtual memory area.

This routine is commonly used from a ->mmap() handler of a RTDM driver, for mapping an I/O memory area over the user address space referred to by *vma*.

6.36 Utility Services 177

#### **Parameters**

| in | vma | The VMA descriptor to receive the mapping. |
|----|-----|--|
| in | ра  | The physical I/O address to be mapped.     |

#### Returns

0 on success, otherwise a negated error code is returned.

#### Note

To map a chunk of kernel virtual memory to a VMA, call <a href="rtdm\_mmap\_kmem">rtdm\_mmap\_kmem</a>() instead.

#### Tags

secondary-only

6.36.2.8 int rtdm mmap kmem ( struct vm area struct \* vma, void \* va )

Map a kernel memory range to a virtual memory area.

This routine is commonly used from a ->mmap() handler of a RTDM driver, for mapping a kernel memory area over the user address space referred to by *vma*.

#### **Parameters**

| in | vma | The VMA descriptor to receive the mapping. |
|----|-----|--|
| in | va  | The kernel virtual address to be mapped.   |

#### Returns

0 on success, otherwise a negated error code is returned.

# Note

This service only works on memory regions allocated via kmalloc() or vmalloc(). To map a chunk of physical I/O memory to a VMA, call rtdm\_mmap\_iomem() instead.

# Tags

secondary-only

6.36.2.9 int rtdm\_mmap\_to\_user ( struct rtdm\_fd \* fd, void \* src\_addr, size\_t len, int prot, void \*\* pptr, struct vm\_operations\_struct \* vm\_ops, void \* vm\_private\_data )

Map a kernel memory range into the address space of the user.

#### **Parameters**

| in | fd | RTDM file descriptor as passed to the invoked device operation han- |
|----|----|---|
|    |    | dler  |

| in     | src_addr           | Kernel virtual address to be mapped  |
|--------|--------------------|--|
| in     | len                | Length of the memory range   |
| in     | prot               | Protection flags for the user's memory range, typically either PROT<br>READ or PROT_READ PROT_WRITE                  |
| in,out | pptr               | Address of a pointer containing the desired user address or NULL on entry and the finally assigned address on return |
| in     | vm_ops             | vm_operations to be executed on the vm_area of the user memory range or NULL   |
| in     | vm_private<br>data | Private data to be stored in the vm_area, primarily useful for vmoperation handlers                                  |

#### Returns

0 on success, otherwise (most common values):

- -EINVAL is returned if an invalid start address, size, or destination address was passed.
- -ENOMEM is returned if there is insufficient free memory or the limit of memory mapping for the user process was reached.
- -EAGAIN is returned if too much memory has been already locked by the user process.
- -EPERM may be returned if an illegal invocation environment is detected.

#### Note

This service only works on memory regions allocated via kmalloc() or vmalloc(). To map physical I/O memory to user-space use rtdm\_iomap\_to\_user() instead.

RTDM supports two models for unmapping the memory area:

- manual unmapping via <a href="rtdm\_munmap">rtdm\_munmap</a>(), which may be issued from a driver in response to an IOCTL call, or by a call to the regular munmap() call from the application.
- automatic unmapping, triggered by the termination of the process which owns the mapping.
  To track the number of references pending on the resource mapped, the driver can pass the
  address of a close handler for the vm\_area considered, in the vm\_ops descriptor. See the
  relevant Linux kernel programming documentation (e.g. Linux Device Drivers book) on virtual
  memory management for details.

# Tags

# secondary-only

6.36.2.10 int rtdm\_munmap (void \* ptr, size\_t len )

# Unmap a user memory range.

### Parameters

| in | ptr | User address or the memory range |
|----|-----|----------------------------------|
| in | len | Length of the memory range       |

### Returns

0 on success, otherwise:

- -EINVAL is returned if an invalid address or size was passed.
- -EPERM may be returned if an illegal invocation environment is detected.

#### Tags

#### secondary-only

6.36 Utility Services 179

6.36.2.11 void rtdm\_printk ( const char \* format, ... )

Real-time safe message printing on kernel console.

#### **Parameters**

| in | format | Format string (conforming standard printf()) |
|----|--------|--|
|    |        | Arguments referred by format                 |

#### Returns

On success, this service returns the number of characters printed. Otherwise, a negative error code is returned.

# Tags

#### unrestricted

6.36.2.12 void rtdm\_printk\_ratelimited ( const char \* format, ... )

Real-time safe rate-limited message printing on kernel console.

#### **Parameters**

| in | format | Format string (conforming standard printf()) |
|----|--------|--|
|    |        | Arguments referred by format                 |

#### Returns

On success, this service returns the number of characters printed. Otherwise, a negative error code is returned.

# Tags

# unrestricted

6.36.2.13 int rtdm\_ratelimit ( struct rtdm\_ratelimit\_state \* rs, const char \* func )

Enforces a rate limit.

This function enforces a rate limit: not more than rs->burst callbacks in every rs->interval.

# **Parameters**

| in,out | rs   | rtdm_ratelimit_state data |
|--------|------|---------------------------|
| in     | func | name of calling function  |

#### Returns

0 means callback will be suppressed and 1 means go ahead and do it

# Tags

# unrestricted

References rtdm\_clock\_read(), and rtdm\_lock\_put\_irqrestore().

6.36.2.14 int rtdm read user ok ( struct rtdm fd \* fd, const void user \* ptr, size t size )

Check if read access to user-space memory block is safe.

180

| in | fd   | RTDM file descriptor as passed to the invoked device operation handler |
|----|------|--|
| in | ptr  | Address of the user-provided memory block                              |
| in | size | Size of the memory block   |

#### Returns

Non-zero is return when it is safe to read from the specified memory block, 0 otherwise.

# Tags

#### task-unrestricted

6.36.2.15 int rtdm\_rt\_capable ( struct rtdm\_fd \* fd )

Test if the caller is capable of running in real-time context.

#### **Parameters**

| in | fd | RTDM file descriptor as passed to the invoked device operation han- |
|----|----|---|
|    |    | dler  |

#### Returns

Non-zero is returned if the caller is able to execute in real-time context (independent of its current execution mode), 0 otherwise.

# Note

This function can be used by drivers that provide different implementations for the same service depending on the execution mode of the caller. If a caller requests such a service in non-real-time context but is capable of running in real-time as well, it might be appropriate for the driver to reject the request via -ENOSYS so that RTDM can switch the caller and restart the request in real-time context.

# Tags

### task-unrestricted

6.36.2.16 int rtdm\_rw\_user\_ok ( struct rtdm\_fd \* fd, const void \_\_user \* ptr, size\_t size )

Check if read/write access to user-space memory block is safe.

#### **Parameters**

| in | fd   | RTDM file descriptor as passed to the invoked device operation handler |
|----|------|--|
| in | ptr  | Address of the user-provided memory block                              |
| in | size | Size of the memory block   |

# Returns

Non-zero is return when it is safe to read from or write to the specified memory block, 0 otherwise.

### Tags

#### task-unrestricted

6.36 Utility Services 181

6.36.2.17 int rtdm\_safe\_copy\_from\_user ( struct rtdm\_fd \* fd, void \* dst, const void \_\_user \* src, size\_t size )

Check if read access to user-space memory block and copy it to specified buffer.

| in | fd   | RTDM file descriptor as passed to the invoked device operation han- |
|----|------|---|
|    |      | dler  |
| in | dst  | Destination buffer address  |
| in | src  | Address of the user-space memory block                              |
| in | size | Size of the memory block  |

### Returns

0 on success, otherwise:

• -EFAULT is returned if an invalid memory area was accessed.

# Note

This service is a combination of rtdm\_read\_user\_ok and rtdm\_copy\_from\_user.

### Tags

# task-unrestricted

Check if read/write access to user-space memory block is safe and copy specified buffer to it.

### **Parameters**

| in | fd   | RTDM file descriptor as passed to the invoked device operation han- |
|----|------|---|
|    |      | dler  |
| in | dst  | Address of the user-space memory block                              |
| in | src  | Source buffer address   |
| in | size | Size of the memory block  |

# Returns

0 on success, otherwise:

• -EFAULT is returned if an invalid memory area was accessed.

#### Note

This service is a combination of rtdm\_rw\_user\_ok and rtdm\_copy\_to\_user.

#### Tags

# task-unrestricted

Copy user-space string to specified buffer.

6.36 Utility Services 183

#### **Parameters**

| in | fd    | RTDM file descriptor as passed to the invoked device operation han- |
|----|-------|---|
|    |       | dler  |
| in | dst   | Destination buffer address  |
| in | src   | Address of the user-space string                                    |
| in | count | Maximum number of bytes to copy, including the trailing '0'         |

# Returns

Length of the string on success (not including the trailing '0'), otherwise:

• -EFAULT is returned if an invalid memory area was accessed.

# Note

This services already includes a check of the source address, calling <a href="rtdm\_read\_user\_ok">rtdm\_read\_user\_ok</a>() for <a href="src">src</a> explicitly is not required.

# Tags


task-unrestricted

184 Module Documentation

# 6.37 Device Profiles

Pre-defined classes of real-time devices.

Collaboration diagram for Device Profiles:

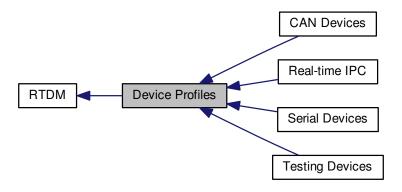

# Modules

CAN Devices

This is the common interface a RTDM-compliant CAN device has to provide.

Serial Devices

This is the common interface a RTDM-compliant serial device has to provide.

Testing Devices

This group of devices is intended to provide in-kernel testing results.

• Real-time IPC

Profile Revision: 1

# **Data Structures**

struct rtdm\_device\_info

Device information.

# **Typedefs**

• typedef struct rtdm\_device\_info rtdm\_device\_info\_t Device information.

# RTDM\_CLASS\_xxx

### Device classes

- #define RTDM\_CLASS\_PARPORT 1
- #define RTDM\_CLASS\_SERIAL 2

6.37 Device Profiles 185

- #define RTDM CLASS CAN 3
- #define RTDM\_CLASS\_NETWORK 4
- #define RTDM CLASS RTMAC 5
- #define RTDM CLASS TESTING 6
- #define RTDM CLASS RTIPC 7
- #define RTDM\_CLASS\_COBALT 8
- #define RTDM CLASS EXPERIMENTAL 224
- #define RTDM CLASS MAX 255

## **Device Naming**

Maximum length of device names (excluding the final null character)

• #define RTDM\_MAX\_DEVNAME\_LEN 31

RTDM\_PURGE\_xxx\_BUFFER

Flags selecting buffers to be purged

- #define RTDM\_PURGE\_RX\_BUFFER 0x0001
- #define RTDM\_PURGE\_TX\_BUFFER 0x0002

### Common IOCTLs

The following IOCTLs are common to all device rtdm profiles.

- #define RTIOC\_DEVICE\_INFO \_IOR(RTIOC\_TYPE\_COMMON, 0x00, struct rtdm\_device\_info)

  Retrieve information about a device or socket.
- #define RTIOC\_PURGE\_IOW(RTIOC\_TYPE\_COMMON, 0x10, int)

Purge internal device or socket buffers.

## 6.37.1 Detailed Description

Pre-defined classes of real-time devices. Device profiles define which operation handlers a driver of a certain class has to implement, which name or protocol it has to register, which IOCTLs it has to provide, and further details. Sub-classes can be defined in order to extend a device profile with more hardware-specific functions.

6.37.2 Macro Definition Documentation

6.37.2.1 #define RTIOC\_DEVICE\_INFO \_IOR(RTIOC\_TYPE\_COMMON, 0x00, struct rtdm\_device\_info)

Retrieve information about a device or socket.

Parameters

Generated on Thu Aug 7 2014 16:41:22 for Xenomai by Doxygen

| out | arg I | Pointer to information buffer (struct rtdm_device_info) |
|-----|-------|---|

6.37.2.2 #define RTIOC\_PURGE\_IOW(RTIOC\_TYPE\_COMMON, 0x10, int)


Purge internal device or socket buffers.

| in | arg | Purge mask, see RTDM_PURGE_xxx_BUFFER |
|----|-----|---------------------------------------|
|----|-----|---------------------------------------|

# 6.38 SCHED\_QUOTA scheduling policy

The SCHED\_QUOTA policy enforces a limitation on the CPU consumption of threads over a globally defined period, known as the quota interval.

Collaboration diagram for SCHED QUOTA scheduling policy:



## 6.38.1 Detailed Description

The SCHED\_QUOTA policy enforces a limitation on the CPU consumption of threads over a globally defined period, known as the quota interval. This is done by pooling threads with common requirements in groups, and giving each group a share of the global period (CONFIG\_XENO\_OPT\_SCHED\_QUOT-A\_PERIOD).

When threads have entirely consumed the quota allotted to the group they belong to, the latter is suspended as a whole, until the next quota interval starts. At this point, a new runtime budget is given to each group, in accordance with its share.

# 6.39 Thread scheduling control

Collaboration diagram for Thread scheduling control:



## Modules

SCHED QUOTA scheduling policy

The SCHED\_QUOTA policy enforces a limitation on the CPU consumption of threads over a globally defined period, known as the quota interval.

## **Data Structures**

struct xnsched

Scheduling information structure.

## **Functions**

static int xnsched\_run (void)

The rescheduling procedure.

• static void xnsched\_rotate (struct xnsched \*sched, struct xnsched\_class \*sched\_class, const union xnsched\_policy\_param \*sched\_param)

Rotate a scheduler runqueue.

## 6.39.1 Detailed Description

## 6.39.2 Function Documentation

6.39.2.1 void xnsched\_rotate ( struct **xnsched** \* sched, struct xnsched\_class \* sched\_class, const union xnsched\_policy\_param \* sched\_param ) [inline], [static]

Rotate a scheduler runqueue.

The specified scheduling class is requested to rotate its runqueue for the given scheduler. Rotation is performed according to the scheduling parameter specified by *sched\_param*.

### Note

The nucleus supports round-robin scheduling for the members of the RT class.

| sched       | The per-CPU scheduler hosting the target scheduling class.                                 |
|-------------|--|
| sched_class | The scheduling class which should rotate its runqueue.                                     |
| sched_param | The scheduling parameter providing rotation information to the specified scheduling class. |

### Tags

### unrestricted, atomic-entry

6.39.2.2 int xnsched run (void) [inline], [static]

The rescheduling procedure.

This is the central rescheduling routine which should be called to validate and apply changes which have previously been made to the nucleus scheduling state, such as suspending, resuming or changing the priority of threads. This call performs context switches as needed. xnsched\_run() schedules out the current thread if:

- the current thread is about to block.
- a runnable thread from a higher priority scheduling class is waiting for the CPU.
- the current thread does not lead the runnable threads from its own scheduling class (i.e. round-robin).

The Cobalt core implements a lazy rescheduling scheme so that most of the services affecting the threads state MUST be followed by a call to the rescheduling procedure for the new scheduling state to be applied.

In other words, multiple changes on the scheduler state can be done in a row, waking threads up, blocking others, without being immediately translated into the corresponding context switches. When all changes have been applied, xnsched\_run() should be called for considering those changes, and possibly switching context.

As a notable exception to the previous principle however, every action which ends up suspending the current thread begets an implicit call to the rescheduling procedure on behalf of the blocking service.

Typically, self-suspension or sleeping on a synchronization object automatically leads to a call to the rescheduling procedure, therefore the caller does not need to explicitly issue xnsched\_run() after such operations.

The rescheduling procedure always leads to a null-effect if it is called on behalf of an interrupt service routine. Any outstanding scheduler lock held by the outgoing thread will be restored when the thread is scheduled back in.

Calling this procedure with no applicable context switch pending is harmless and simply leads to a null-effect.

## Returns

Non-zero is returned if a context switch actually happened, otherwise zero if the current thread was left running.

### Tags

### unrestricted

References xnsched::lflags, and xnsched::status.

Referenced by rtdm\_event\_signal(), rtdm\_mutex\_unlock(), rtdm\_sem\_up(), xnregistry\_enter(), xnselect\_bind(), xnselect\_destroy(), xnthread\_cancel(), xnthread\_migrate(), xnthread\_start(), and xnthread\_suspend().

190 Module Documentation

# 6.40 Synchronous I/O multiplexing

This module implements the services needed for implementing the POSIX select() service, or any other event multiplexing services.

Collaboration diagram for Synchronous I/O multiplexing:



### **Functions**

void xnselect\_init (struct xnselect \*select\_block)

Initialize a struct xnselect structure.

• static int xnselect signal (struct xnselect \*select block, unsigned int state)

Signal a file descriptor state change.

void xnselect\_destroy (struct xnselect \*select\_block)

Destroy the xnselect structure associated with a file descriptor.

int xnselector\_init (struct xnselector \*selector)

Initialize a selector structure.

int xnselect (struct xnselector \*selector, fd\_set \*out\_fds[XNSELECT\_MAX\_TYPES], fd\_set \*in\_fds[XNSELECT\_MAX\_TYPES], int nfds, xnticks\_t timeout, xntmode\_t timeout\_mode)

Check the state of a number of file descriptors, wait for a state change if no descriptor is ready.

void xnselector destroy (struct xnselector \*selector)

Destroy a selector block.

int xnselect\_bind (struct xnselect \*select\_block, struct xnselect\_binding \*binding, struct xnselector \*selector, unsigned type, unsigned index, unsigned state)

Bind a file descriptor (represented by its xnselect structure) to a selector block.

## 6.40.1 Detailed Description

This module implements the services needed for implementing the POSIX select() service, or any other event multiplexing services. Following the implementation of the posix select service, this module defines three types of events:

- XNSELECT\_READ meaning that a file descriptor is ready for reading;
- XNSELECT\_WRITE meaning that a file descriptor is ready for writing;
- XNSELECT\_EXCEPT meaning that a file descriptor received an exceptional event.

It works by defining two structures:

- a *struct xnselect* structure, which should be added to every file descriptor for every event type (read, write, or except);
- a *struct xnselector* structure, the selection structure, passed by the thread calling the xnselect service, where this service does all its housekeeping.

## 6.40.2 Function Documentation

6.40.2.1 int xnselect ( struct xnselector \* selector, fd\_set \* out\_fds[XNSELECT\_MAX\_TYPES], fd\_set \* in\_fds[XNSELECT\_MAX\_TYPES], int nfds, xnticks\_t timeout, xntmode\_t timeout mode )

Check the state of a number of file descriptors, wait for a state change if no descriptor is ready.

### **Parameters**

| selector     | structure to check for pending events   |
|--------------|---|
| out_fds      | The set of descriptors with pending events if a strictly positive number is returned, |
|              | or the set of descriptors not yet bound if -ECHRNG is returned;                       |
| in_fds       | the set of descriptors which events should be checked                                 |
| nfds         | the highest-numbered descriptor in any of the <i>in_fds</i> sets, plus 1;             |
| timeout      | the timeout, whose meaning depends on timeout_mode, note that xnselect() pass         |
|              | timeout and timeout_mode unchanged to xnsynch_sleep_on, so passing a relative         |
|              | value different from XN_INFINITE as a timeout with timeout_mode set to XN_REL-        |
|              | ATIVE, will cause a longer sleep than expected if the sleep is interrupted.           |
| timeout_mode | the mode of timeout.  |

## Return values

| -EINVAL | if <i>nfds</i> is negative;   |
|---------|---|
| -ECHRNG | if some of the descriptors passed in <i>in_fds</i> have not yet been registered |
|         | with xnselect_bind(), out_fds contains the set of such descriptors;             |
| -EINTR  | if xnselect was interrupted while waiting;                                      |
| 0       | in case of timeout.   |
| the     | number of file descriptors having received an event.                            |

## Tags

## primary-only, might-switch

References XNBREAK, xnsynch\_sleep\_on(), and XNTIMEO.

6.40.2.2 int xnselect\_bind ( struct **xnselect** \* select\_block, struct xnselect\_binding \* binding, struct xnselector \* selector, unsigned type, unsigned index, unsigned state )

Bind a file descriptor (represented by its xnselect structure) to a selector block.

### **Parameters**

| select_block | pointer to the struct xnselect to be bound;  |
|--------------|--|
| binding      | pointer to a newly allocated (using xnmalloc) struct xnselect_binding;                   |
| selector     | pointer to the selector structure;   |
| type         | type of events (XNSELECT_READ, XNSELECT_WRITE, or XNSELECT_EXCEP-                        |
|              | <i>T</i> );  |
| index        | index of the file descriptor (represented by select_block) in the bit fields used by the |
|              | selector structure;  |
| state        | current state of the file descriptor>.   |

select\_block must have been initialized with xnselect\_init(), the xnselector structure must have been initialized with xnselector\_init(), binding may be uninitialized.

This service must be called with nklock locked, irqs off. For this reason, the *binding* parameter must have been allocated by the caller outside the locking section.

### Return values

| -EINVAL | if type or index is invalid; |
|---------|------------------------------|
| 0       | otherwise.                   |

## Tags

task-unrestricted, might-switch, atomic-entry

References xnsched run().

Referenced by rtdm\_event\_select\_bind(), and rtdm\_sem\_select\_bind().

6.40.2.3 void xnselect destroy ( struct xnselect \* select block )

Destroy the *xnselect* structure associated with a file descriptor.

Any binding with a xnselector block is destroyed.

**Parameters** 

| select_block | pointer to the xnselect structure associated with a file descriptor |
|--------------|---|
|--------------|---|

## Tags

task-unrestricted, might-switch

References xnsched\_run().

Referenced by rtdm\_event\_destroy(), and rtdm\_sem\_destroy().

6.40.2.4 void xnselect init ( struct xnselect \* select block )

Initialize a struct xnselect structure.

This service must be called to initialize a *struct xnselect* structure before it is bound to a selector by the means of xnselect\_bind().

**Parameters** 

| select_block | pointer to the xnselect structure to be initialized |
|--------------|---|

## Tags

task-unrestricted

Referenced by rtdm\_event\_init(), and rtdm\_sem\_init().

6.40.2.5 static int xnselect\_signal ( struct **xnselect** \* select\_block, unsigned int state ) [inline], [static]

Signal a file descriptor state change.

| select_block | pointer to an <i>xnselect</i> structure representing the file descriptor whose state changed; |   |
|--------------|---|---|
| state        | new value of the state.   | Ī |

## Return values

| 1 | if rescheduling is needed; |
|---|----------------------------|
| 0 | otherwise.                 |

Referenced by rtdm\_event\_clear(), rtdm\_event\_signal(), rtdm\_event\_timedwait(), rtdm\_sem\_timeddown(), and rtdm\_sem\_up().

6.40.2.6 void xnselector\_destroy ( struct xnselector \* selector )

Destroy a selector block.

All bindings with file descriptor are destroyed.

**Parameters** 

| selector   the selector block to be destroyed |  |
|---|--|
|---|--|

## Tags

### task-unrestricted

6.40.2.7 int xnselector\_init ( struct xnselector \* selector )

Initialize a selector structure.

Parameters

| selector       | The selector structure to be initialized. |
|----------------|---|
| Return values  |   |
| neturii values |   |
|                | 0   |

## Tags

## task-unrestricted

References xnsynch\_init().

## 6.41 Real-time shadow services

Real-time shadow services.

Collaboration diagram for Real-time shadow services:



## **Functions**

- int xnshadow\_map\_user (struct xnthread \*thread, unsigned long \_\_user \*u\_window\_offset)

  Create a shadow thread context over a user task.
- int xnshadow\_map\_kernel (struct xnthread \*thread, struct completion \*done)

Create a shadow thread context over a kernel task.

• int xnshadow\_harden (void)

Migrate a Linux task to the Xenomai domain.

void xnshadow\_relax (int notify, int reason)

Switch a shadow thread back to the Linux domain.

• int xnshadow\_register\_personality (struct xnpersonality \*personality)

Register a new interface personality.

struct xnpersonality \* xnshadow\_push\_personality (int muxid)

Stack a new personality over the current thread.

void xnshadow\_pop\_personality (struct xnpersonality \*prev)

Pop the topmost personality from the current thread.

void \* xnshadow\_get\_context (unsigned int muxid)

Return the per-process data attached to the calling process.

## 6.41.1 Detailed Description

Real-time shadow services.

## 6.41.2 Function Documentation

6.41.2.1 void\* xnshadow\_get\_context ( unsigned int muxid )

Return the per-process data attached to the calling process.

This service returns the per-process data attached to the calling process for the personality whose muxid is *muxid*. It must be called with nklock locked, irgs off.

The per-process data was obtained from the ->attach\_process() handler defined for the personality *muxid* refers to.

See xnshadow\_register\_personality() documentation for information on the way to attach a per-process data to a process.

| muxid | the personality muxid. |
|-------|------------------------|
| maxia | the personality muxic. |

### Returns

the per-process data if the current context is a user-space process; NULL otherwise.

### Tags

### task-unrestricted

```
6.41.2.2 int xnshadow harden (void)
```

Migrate a Linux task to the Xenomai domain.

This service causes the transition of "current" from the Linux domain to Xenomai. The shadow will resume in the Xenomai domain as returning from schedule().

## Tags

## secondary-only, might-switch

References XNDEBUG, XNRELAX, xnshadow\_relax(), and xnthread\_test\_cancel().

Referenced by xnshadow map kernel().

```
6.41.2.3 int xnshadow map kernel ( struct xnthread * thread, struct completion * done )
```

Create a shadow thread context over a kernel task.

This call maps a nucleus thread to the "current" Linux task running in kernel space. The priority and scheduling class of the underlying Linux task are not affected; it is assumed that the caller did set them appropriately before issuing the shadow mapping request.

This call immediately moves the calling kernel thread to the Xenomai domain.

## **Parameters**

| thread | The descriptor address of the new shadow thread to be mapped to "current". This |
|--------|---|
|        | descriptor must have been previously initialized by a call to xnthread_init().  |
| done   | A completion object to be signaled when thread is fully mapped over the current |
|        | Linux context, waiting for xnthread_start().                                    |

### Returns

0 is returned on success. Otherwise:

- -ERESTARTSYS is returned if the current Linux task has received a signal, thus preventing the final migration to the Xenomai domain (i.e. in order to process the signal in the Linux domain). This error should not be considered as fatal.
- -EPERM is returned if the shadow thread has been killed before the current task had a chance to return to the caller. In such a case, the real-time mapping operation has failed globally, and no Xenomai resource remains attached to it.
- -EINVAL is returned if the thread control block bears the XNUSER bit.
- -EBUSY is returned if either the current Linux task or the associated shadow thread is already involved in a shadow mapping.

Tags

### secondary-only, might-switch

References XNDORMANT, XNMAPPED, XNRELAX, xnshadow\_harden(), xnthread\_resume(), xnthread\_test\_cancel(), and XNUSER.

6.41.2.4 int xnshadow\_map\_user ( struct xnthread \* thread, unsigned long \_\_user \* u\_window\_offset )

Create a shadow thread context over a user task.

This call maps a nucleus thread to the "current" Linux task running in userland. The priority and scheduling class of the underlying Linux task are not affected; it is assumed that the interface library did set them appropriately before issuing the shadow mapping request.

### **Parameters**

| thread   | The descriptor address of the new shadow thread to be mapped to "current". This      |
|----------|--|
|          | descriptor must have been previously initialized by a call to xnthread_init().       |
| u_window | will receive the offset of the per-thread "u_window" structure in the process shared |
| offset   | heap associated to thread. This structure reflects thread state information visible  |
|          | from userland through a shared memory window.  |

#### Returns

0 is returned on success. Otherwise:

- -EINVAL is returned if the thread control block does not bear the XNUSER bit.
- -EBUSY is returned if either the current Linux task or the associated shadow thread is already involved in a shadow mapping.

Tags

## secondary-only

References xnheap\_alloc(), XNMAPPED, XNRELAX, xnthread\_start(), xnthread\_suspend(), and XNU-SER.

6.41.2.5 void xnshadow pop personality ( struct xnpersonality \* prev )

Pop the topmost personality from the current thread.

This service pops the topmost personality off the current thread.

## Parameters

| prev | the previous personality which was returned by the latest call to xnshadow_push |
|------|---|
|      | personality() for the current thread.   |

## Tags

## secondary-only

6.41.2.6 struct xnpersonality \* xnshadow\_push\_personality ( int muxid )

Stack a new personality over the current thread.

This service registers the current thread as a member of the additional personality identified by *muxid*. If the current thread is already assigned this personality, the call returns successfully with no effect.

| muxid   | the identifier of the additional personality. |
|---------|---|
| IIIUXIU | the identifier of the additional personality. |

### Returns

A handle to the previous personality. The caller should save this handle for unstacking *muxid* when applicable via a call to xnshadow\_pop\_personality().

## Tags

secondary-only

6.41.2.7 int xnshadow\_register\_personality ( struct xnpersonality \* personality )

Register a new interface personality.

- personality->ops.attach\_process() is called when a user-space process binds to the personality, on behalf of one of its threads. The attach\_process() handler may return:
  - . an opaque pointer, representing the context of the calling process for this personality;
  - . a NULL pointer, meaning that no per-process structure should be attached to this process for this personality;
  - . ERR PTR(negative value) indicating an error, the binding process will then abort.
- personality->ops.detach() is called on behalf of an exiting user-space process which has previously attached to the personality. This handler is passed a pointer to the per-process data received earlier from the ops->attach\_process() handler.

## Tags

secondary-only

6.41.2.8 void xnshadow relax (int notify, int reason)

Switch a shadow thread back to the Linux domain.

This service yields the control of the running shadow back to Linux. This is obtained by suspending the shadow and scheduling a wake up call for the mated user task inside the Linux domain. The Linux task will resume on return from xnthread suspend() on behalf of the root thread.

## Parameters

| notify | A boolean flag indicating whether threads monitored from secondary mode switches   |
|--------|--|
|        | should be sent a SIGDEBUG signal. For instance, some internal operations like task |
|        | exit should not trigger such signal.   |
| reason | The reason to report along with the SIGDEBUG signal.                               |

## Tags

primary-only, might-switch

### Note

"current" is valid here since the shadow runs with the properties of the Linux task.

References splmax, splnone, XNMOVED, XNRELAX, xnthread\_suspend(), XNUSER, and XNWARN. Referenced by xnshadow\_harden().

# 6.42 Thread synchronization services

Collaboration diagram for Thread synchronization services:



## **Functions**

- void xnsynch\_init (struct xnsynch \*synch, int flags, atomic\_long\_t \*fastlock)
   Initialize a synchronization object.
- int xnsynch\_sleep\_on (struct xnsynch \*synch, xnticks\_t timeout, xntmode\_t timeout\_mode)

  Sleep on an ownerless synchronization object.
- struct xnthread \* xnsynch\_wakeup\_one\_sleeper (struct xnsynch \*synch)

  Unblock the heading thread from wait.
- void xnsynch\_wakeup\_this\_sleeper (struct xnsynch \*synch, struct xnthread \*sleeper)

  Unblock a particular thread from wait.
- int xnsynch\_acquire (struct xnsynch \*synch, xnticks\_t timeout, xntmode\_t timeout\_mode)

  Acquire the ownership of a synchronization object.
- struct xnthread \* xnsynch\_release (struct xnsynch \*synch, struct xnthread \*thread)

  Give the resource ownership to the next waiting thread.
- struct xnthread \* xnsynch\_peek\_pendq (struct xnsynch \*synch)

Access the thread leading a synch object wait queue.

int xnsynch\_flush (struct xnsynch \*synch, int reason)
 Unblock all waiters pending on a resource.

## 6.42.1 Detailed Description

## 6.42.2 Function Documentation

6.42.2.1 int xnsynch acquire ( struct xnsynch \* synch, xnticks t timeout, xntmode t timeout mode )

Acquire the ownership of a synchronization object.

This service should be called by upper interfaces wanting the current thread to acquire the ownership of the given resource. If the resource is already assigned to another thread, the caller is suspended.

This service must be used only with synchronization objects that track ownership (XNSYNCH\_OWNER set.

| synch        | The descriptor address of the synchronization object to acquire.                           |
|--------------|--|
| timeout      | The timeout which may be used to limit the time the thread pends on the resource.          |
|              | This value is a wait time given as a count of nanoseconds. It can either be relative,      |
|              | absolute monotonic, or absolute adjustable depending on timeout_mode. Passing              |
|              | XN_INFINITE <b>and</b> setting <i>mode</i> to XN_RELATIVE specifies an unbounded wait. All |
|              | other values are used to initialize a watchdog timer.                                      |
| timeout_mode | The mode of the timeout parameter. It can either be set to XN_RELATIVE, XN_AB-             |
|              | SOLUTE, or XN_REALTIME (see also xntimer_start()).   |

#### Returns

A bitmask which may include zero or one information bit among XNRMID, XNTIMEO and XNBR-EAK, which should be tested by the caller, for detecting respectively: object deletion, timeout or signal/unblock conditions which might have happened while waiting.

#### Tags

primary-only, might-switch

References XNBOOST, XNBREAK, XNPEND, XNRMID, XNROBBED, xnthread\_suspend(), XNTIMEO, XNWAKEN, and XNWEAK.

Referenced by rtdm\_mutex\_timedlock().

6.42.2.2 int xnsynch\_flush ( struct xnsynch \* synch, int reason )

Unblock all waiters pending on a resource.

This service atomically releases all threads which currently sleep on a given resource.

This service should be called by upper interfaces under circumstances requiring that the pending queue of a given resource is cleared, such as before the resource is deleted.

### **Parameters**

| ſ | synch  | The descriptor address of the synchronization object to be flushed.             |
|---|--------|---|
| ſ | reason | Some flags to set in the information mask of every unblocked thread. Zero is an |
|   |        | acceptable value. The following bits are pre-defined by the nucleus:            |

- XNRMID should be set to indicate that the synchronization object is about to be destroyed (see xnthread resume()).
- XNBREAK should be set to indicate that the wait has been forcibly interrupted (see xnthread\_-unblock()).

### Returns

XNSYNCH\_RESCHED is returned if at least one thread is unblocked, which means the caller should invoke xnsched\_run() for applying the new scheduling state. Otherwise, XNSYNCH\_DON-E is returned.

### Side effects

- The effective priority of the previous resource owner might be lowered to its base priority value as a consequence of the priority inheritance boost being cleared.
- The synchronization object is no more owned by any thread.

### Tags

#### unrestricted

References XNPEND, and xnthread resume().

Referenced by rtdm event signal().

6.42.2.3 void xnsynch init ( struct xnsynch \* synch, int flags, atomic long t \* fastlock )

Initialize a synchronization object.

Initializes a synchronization object. Xenomai threads can wait on and signal such objects for serializing access to resources. This object has built-in support for priority inheritance.

#### **Parameters**

| synch | The address of a synchronization object descriptor the nucleus will use to store the object-specific data. This descriptor must always be valid while the object is active |
|-------|--|
|       | therefore it must be allocated in permanent memory.  |
| flags | A set of creation flags affecting the operation. The valid flags are:  |

- XNSYNCH\_PRIO causes the threads waiting for the resource to pend in priority order. Otherwise, FIFO ordering is used (XNSYNCH\_FIFO).
- XNSYNCH\_OWNER indicates that the synchronization object shall track the resource ownership, allowing a single owner at most at any point in time. Note that setting this flag implies the use of xnsynch\_acquire() and xnsynch\_release() instead of xnsynch\_sleep\_on() and xnsynch\_wakeup\_-\*().
- XNSYNCH\_PIP enables priority inheritance when a priority inversion is detected among threads using this object. XNSYNCH\_PIP enables XNSYNCH\_OWNER and XNSYNCH\_PRIO implicitly.
- XNSYNCH\_DREORD (Disable REORDering) tells the nucleus that the wait queue should not be
  reordered whenever the priority of a blocked thread it holds is changed. If this flag is not specified,
  changing the priority of a blocked thread using xnthread\_set\_schedparam() will cause this object's
  wait queue to be reordered according to the new priority level, provided the synchronization object
  makes the waiters wait by priority order on the awaited resource (XNSYNCH\_PRIO).

### **Parameters**

| fastlock | Address of the fast lock word to be associated with a synchronization object with |
|----------|---|
|          | ownership tracking. Therefore, a valid fast-lock address is required if XNSYNCH   |
|          | OWNER is set in flags.  |

### Tags

### task-unrestricted

Referenced by rtdm event init(), rtdm mutex init(), rtdm sem init(), and xnselector init().

6.42.2.4 struct xnthread \* xnsynch\_peek\_pendq ( struct xnsynch \* synch )

Access the thread leading a synch object wait queue.

This services returns the descriptor address of to the thread leading a synchronization object wait queue.

| synch | The descriptor address of the target synchronization object. |
|-------|--|
|-------|--|

### Returns

The descriptor address of the unblocked thread.

### Tags

### unrestricted

6.42.2.5 struct xnthread \* xnsynch\_release ( struct xnsynch \* synch, struct xnthread \* thread )

Give the resource ownership to the next waiting thread.

This service releases the ownership of the given synchronization object. The thread which is currently leading the object's pending list, if any, is unblocked from its pending state. However, no reschedule is performed.

This service must be used only with synchronization objects that track ownership (XNSYNCH\_OWNER set).

#### **Parameters**

| synch  | The descriptor address of the synchronization object whose ownership is changed. |
|--------|--|
| thread | The descriptor address of the current owner.                                     |

#### Returns

The descriptor address of the unblocked thread.

### Side effects

- The effective priority of the previous resource owner might be lowered to its base priority value as a consequence of the priority inheritance boost being cleared.
- The synchronization object ownership is transfered to the unblocked thread.

## Tags

primary-only, might-switch

References XNWEAK.

Referenced by rtdm\_mutex\_unlock().

6.42.2.6 int xnsynch\_sleep\_on ( struct xnsynch \* synch, xnticks\_t timeout, xntmode\_t timeout\_mode )

Sleep on an ownerless synchronization object.

Makes the calling thread sleep on the specified synchronization object, waiting for it to be signaled.

This service should be called by upper interfaces wanting the current thread to pend on the given resource. It must not be used with synchronization objects that are supposed to track ownership (XNSY-NCH\_OWNER).

| synch        | The descriptor address of the synchronization object to sleep on.                     |
|--------------|---|
| timeout      | The timeout which may be used to limit the time the thread pends on the resource.     |
|              | This value is a wait time given as a count of nanoseconds. It can either be relative, |
|              | absolute monotonic, or absolute adjustable depending on timeout_mode. Passing         |
|              | XN_INFINITE and setting mode to XN_RELATIVE specifies an unbounded wait. All          |
|              | other values are used to initialize a watchdog timer.                                 |
| timeout_mode | The mode of the timeout parameter. It can either be set to XN_RELATIVE, XN_AB-        |
|              | SOLUTE, or XN_REALTIME (see also xntimer_start()).                                    |

### Returns

A bitmask which may include zero or one information bit among XNRMID, XNTIMEO and XNBR-EAK, which should be tested by the caller, for detecting respectively: object deletion, timeout or signal/unblock conditions which might have happened while waiting.

### Tags

## primary-only, might-switch

References XNBREAK, XNPEND, XNRMID, xnthread suspend(), and XNTIMEO.

Referenced by rtdm\_event\_timedwait(), rtdm\_sem\_timeddown(), xnregistry\_bind(), xnselect(), and xnthread join().

6.42.2.7 struct xnthread \* xnsynch\_wakeup\_one\_sleeper ( struct xnsynch \* synch )

Unblock the heading thread from wait.

This service wakes up the thread which is currently leading the synchronization object's pending list. The sleeping thread is unblocked from its pending state, but no reschedule is performed.

This service should be called by upper interfaces wanting to signal the given resource so that a single waiter is resumed. It must not be used with synchronization objects that are supposed to track ownership (XNSYNCH\_OWNER not set).

## **Parameters**

|       | The descriptor address of the synchronization object whose ownership is changed. |
|-------|--|
| aunah | Liba deceriptor address at the eupobropization object whose augorobin is changed |
|       |  |
|       |  |
|       |  |

## Returns

The descriptor address of the unblocked thread.

## Tags

### unrestricted

References XNPEND, and xnthread\_resume().

Referenced by rtdm\_sem\_up().

6.42.2.8 void xnsynch\_wakeup\_this\_sleeper ( struct xnsynch \* synch, struct xnthread \* sleeper )

Unblock a particular thread from wait.

This service wakes up a specific thread which is currently pending on the given synchronization object. The sleeping thread is unblocked from its pending state, but no reschedule is performed.

This service should be called by upper interfaces wanting to signal the given resource so that a specific waiter is resumed. It must not be used with synchronization objects that are supposed to track ownership (XNSYNCH OWNER not set).

| synch The descriptor address of the synchronization object whose ownership is chang |   |
|---|---|
| sleeper   | The thread to unblock which MUST be currently linked to the synchronization ob- |
|   | ject's pending queue (i.e. synch->pendq).                                       |


## Tags

## unrestricted

References XNPEND, and xnthread\_resume().

## 6.43 Thread services

Collaboration diagram for Thread services:



### Modules

Thread state flags

Bits reporting permanent or transient states of threads.

Thread information flags

Bits reporting events notified to threads.

### **Functions**

static void xnthread\_test\_cancel (void)

Introduce a thread cancellation point.

int xnthread\_init (struct xnthread \*thread, const struct xnthread\_init\_attr \*attr, struct xnsched\_class \*sched\_class, const union xnsched\_policy\_param \*sched\_param)

Initialize a new thread.

• int xnthread\_start (struct xnthread \*thread, const struct xnthread\_start\_attr \*attr)

Start a newly created thread.

• int xnthread\_set\_mode (struct xnthread \*thread, int clrmask, int setmask)

Change thread control mode.

void xnthread\_suspend (struct xnthread \*thread, int mask, xnticks\_t timeout, xntmode\_t timeout\_-mode, struct xnsynch \*wchan)

Suspend a thread.

void xnthread\_resume (struct xnthread \*thread, int mask)

Resume a thread.

int xnthread\_unblock (struct xnthread \*thread)

Unblock a thread.

int xnthread\_set\_periodic (struct xnthread \*thread, xnticks\_t idate, xntmode\_t timeout\_mode, xnticks\_t period)

Make a thread periodic.

• int xnthread wait period (unsigned long \*overruns r)

Wait for the next periodic release point.

• int xnthread\_set\_slice (struct xnthread \*thread, xnticks\_t quantum)

Set thread time-slicing information.

void xnthread\_cancel (struct xnthread \*thread)

Cancel a thread.

• int xnthread\_join (struct xnthread \*thread, bool uninterruptible)

6.43 Thread services 205

Join with a terminated thread.

• int xnthread migrate (int cpu)

Migrate the current thread.

• int xnthread\_set\_schedparam (struct xnthread \*thread, struct xnsched\_class \*sched\_class, const union xnsched\_policy\_param \*sched\_param)

Change the base scheduling parameters of a thread.

## 6.43.1 Detailed Description

### 6.43.2 Function Documentation

6.43.2.1 void xnthread\_cancel ( struct xnthread \* thread )

### Cancel a thread.

Request cancellation of a thread. This service forces *thread* to exit from any blocking call. *thread* will terminate as soon as it reaches a cancellation point. Cancellation points are defined for the following situations:

- thread self-cancels by a call to xnthread cancel().
- thread invokes a Linux syscall (user-space shadow only).
- thread receives a Linux signal (user-space shadow only).
- thread explicitly calls xnthread\_test\_cancel().

### **Parameters**

| thread | The descriptor address of the thread to terminate. |
|--------|--|

## Tags

task-unrestricted, might-switch

References XNCANCELD, XNDORMANT, XNKICKED, xnsched\_run(), xnthread\_resume(), and xnthread\_test\_cancel().

Referenced by rtdm\_task\_init().

6.43.2.2 int xnthread\_init ( struct xnthread \* thread, const struct xnthread\_init\_attr \* attr, struct xnsched class \* sched class, const union xnsched policy param \* sched param )

Initialize a new thread.

Initializes a new thread. The thread is left dormant until it is actually started by xnthread\_start().

### **Parameters**

| thread | The address of a thread descriptor the nucleus will use to store the thread-specific    |
|--------|---|
|        | data. This descriptor must always be valid while the thread is active therefore it must |
|        | be allocated in permanent memory.   |

## Warning

Some architectures may require the descriptor to be properly aligned in memory; this is an additional reason for descriptors not to be laid in the program stack where alignement constraints might not always be satisfied.

| attr | A pointer to an attribute block describing the initial properties of the new thread. |
|------|--|
|      | Members of this structure are defined as follows:                                    |

- name: An ASCII string standing for the symbolic name of the thread. This name is copied to a
  safe place into the thread descriptor. This name might be used in various situations by the nucleus
  for issuing human-readable diagnostic messages, so it is usually a good idea to provide a sensible
  value here. NULL is fine though and means "anonymous".
- flags: A set of creation flags affecting the operation. The following flags can be part of this bitmask, each of them affecting the nucleus behaviour regarding the created thread:
  - XNSUSP creates the thread in a suspended state. In such a case, the thread shall be explicitly resumed using the xnthread\_resume() service for its execution to actually begin, additionally to issuing xnthread\_start() for it. This flag can also be specified when invoking xnthread\_start() as a starting mode.
- XNUSER shall be set if *thread* will be mapped over an existing user-space task. Otherwise, a new kernel host task is created, then paired with the new Xenomai thread.
- XNFPU (enable FPU) tells the nucleus that the new thread may use the floating-point unit. XNFPU is implicitly assumed for user-space threads even if not set in *flags*.
- affinity: The processor affinity of this thread. Passing CPU\_MASK\_ALL means "any cpu" from the allowed core affinity mask (nkaffinity). Passing an empty set is invalid.

#### **Parameters**

| sched_class | The initial scheduling class the new thread should be assigned to.               |
|-------------|--|
| sched_param | The initial scheduling parameters to set for the new thread; sched_param must be |
|             | valid within the context of sched_class.   |

## Returns

0 is returned on success. Otherwise, the following error code indicates the cause of the failure:

• -EINVAL is returned if attr->flags has invalid bits set, or attr->affinity is invalid (e.g. empty).

# Tags

### secondary-only

References XNFPU, XNSUSP, and XNUSER.

Referenced by rtdm task init().

6.43.2.3 int xnthread\_join ( struct xnthread \* thread, bool uninterruptible )

Join with a terminated thread.

This service waits for *thread* to terminate after a call to xnthread\_cancel(). If that thread has already terminated or is dormant at the time of the call, then xnthread\_join() returns immediately.

xnthread\_join() adapts to the calling context (primary or secondary).

6.43 Thread services 207

### **Parameters**

| thread          | The descriptor address of the thread to join with.                                |  |
|-----------------|---|--|
| uninterruptible | Boolean telling whether the service should wait for completion uninterruptible if |  |
|                 | called from secondary mode.   |  |

### Returns

0 is returned on success. Otherwise, the following error codes indicate the cause of the failure:

- -EDEADLK is returned if the current thread attempts to join itself.
- -EINTR is returned if the current thread was unblocked while waiting for thread to terminate.
- -EBUSY indicates that another thread is already waiting for thread to terminate.

#### Tags

task-unrestricted, might-switch

References XNBREAK, XNDORMANT, XNJOINED, XNRMID, and xnsynch\_sleep\_on().

Referenced by rtdm\_task\_join().

6.43.2.4 int xnthread\_migrate (int cpu)

Migrate the current thread.

This call makes the current thread migrate to another (real-time) CPU if its affinity allows it. This call is available from primary mode only.

#### **Parameters**

| cpu The destination CPU. |  |
|--------------------------|--|
|--------------------------|--|

#### Return values

| 0       | if the thread could migrate;                                   |
|---------|--|
| -EPERM  | if the calling context is invalid, or the scheduler is locked. |
| -EINVAL | if the current thread affinity forbids this migration.         |

### Tags

primary-only, might-switch

References \_\_xntimer\_migrate(), XNMOVED, and xnsched\_run().

6.43.2.5 void xnthread\_resume ( struct xnthread \* thread, int mask )

Resume a thread.

Resumes the execution of a thread previously suspended by one or more calls to xnthread\_suspend(). This call removes a suspensive condition affecting the target thread. When all suspensive conditions are gone, the thread is left in a READY state at which point it becomes eligible anew for scheduling.

| thread | The descriptor address of the resumed thread.                              |
|--------|--|
| mask   | The suspension mask specifying the suspensive condition to remove from the |
|        | thread's wait mask. Possible values usable by the caller are:              |

- XNSUSP. This flag removes the explicit suspension condition. This condition might be additive to the XNPEND condition.
- XNDELAY. This flag removes the counted delay wait condition.
- XNPEND. This flag removes the resource wait condition. If a watchdog is armed, it is automatically
  disarmed by this call. Unlike the two previous conditions, only the current thread can set this
  condition for itself, i.e. no thread can force another one to pend on a resource.

When the thread is eventually resumed by one or more calls to xnthread\_resume(), the caller of xnthread\_suspend() in the awakened thread that suspended itself should check for the following bits in its own information mask to determine what caused its wake up:

- XNRMID means that the caller must assume that the pended synchronization object has been destroyed (see xnsynch\_flush()).
- XNTIMEO means that the delay elapsed, or the watchdog went off before the corresponding synchronization object was signaled.
- XNBREAK means that the wait has been forcibly broken by a call to xnthread\_unblock().

### Tags

### unrestricted, might-switch

References XNDELAY, XNHELD, XNPEND, XNREADY, and xntimer\_stop().

Referenced by xnshadow\_map\_kernel(), xnsynch\_flush(), xnsynch\_wakeup\_one\_sleeper(), xnsynch\_wakeup\_this\_sleeper(), xnthread\_cancel(), xnthread\_start(), and xnthread\_unblock().

6.43.2.6 int xnthread set mode ( struct xnthread \* thread, int clrmask, int setmask )

Change thread control mode.

Change the control mode of a given thread. The control mode affects the behaviour of the nucleus regarding the specified thread.

| thread  | The descriptor address of the affected thread.                                       |
|---------|--|
| clrmask | Clears the corresponding bits from the control field before setmask is applied. The  |
|         | scheduler lock held by the current thread can be forcibly released by passing the    |
|         | XNLOCK bit in this mask. In this case, the lock nesting count is also reset to zero. |
| setmask | The new thread mode. The following flags may be set in this bitmask:                 |

- XNLOCK makes thread non-preemptible by other threads when running on a CPU. A non-preemptible thread may still block, in which case, the lock is reasserted when the thread is scheduled back in. If thread is current, the scheduler is immediately locked, otherwise such lock will take effect next time thread resumes on a CPU.
- XNWARN is a debugging aid, causing the thread to receive a SIGDEBUG signal when the following atypical or abnormal behavior is detected:
- thread switches to secondary mode (usable for detecting spurious relaxes).

6.43 Thread services 209

• thread is about to sleep on a Cobalt mutex currently owned by a thread running in secondary mode, which reveals a priority inversion case.

- thread has both XNTRAPLB and XNLOCK set, and attempts to block on a Cobalt service, causing a lock break.
- XNTRAPLB disallows breaking the scheduler lock. In the default case, a thread which holds the
  scheduler lock is allowed to drop it temporarily for sleeping. If this mode bit is set, such thread
  would return immediately with XNBREAK set from xnthread\_suspend(). If XNWARN is set for
  thread, SIGDEBUG is sent in addition to raising the break condition.

## Tags

task-unrestricted, might-switch

#### Note

Setting *clrmask* and *setmask* to zero leads to a nop, only returning the previous mode if *mode\_r* is a valid address.

#### References XNLOCK.

6.43.2.7 int xnthread\_set\_periodic ( struct xnthread \* thread, xnticks\_t idate, xntmode\_t timeout mode, xnticks t period )

## Make a thread periodic.

Make a thread periodic by programming its first release point and its period in the processor time line. Subsequent calls to xnthread\_wait\_period() will delay the thread until the next periodic release point in the processor timeline is reached.

### **Parameters**

| thread       | The core thread to make periodic.  |
|--------------|--|
| idate        | The initial (absolute) date of the first release point, expressed in nanoseconds. The affected thread will be delayed by the first call to xnthread_wait_period() until this point is reached. If <i>idate</i> is equal to XN_INFINITE, the current system date is used, and no initial delay takes place. In the latter case, <i>timeout_mode</i> is not considered and can have any valid value. |
| timeout_mode | The mode of the <i>idate</i> parameter. It can either be set to XN_ABSOLUTE or XN_R-EALTIME with <i>idate</i> different from XN_INFINITE (see also xntimer_start()).   |
| period       | The period of the thread, expressed in nanoseconds. As a side-effect, passing XN_INFINITE attempts to stop the thread's periodic timer; in the latter case, the routine always exits succesfully, regardless of the previous state of this timer.  |

### Returns

0 is returned upon success. Otherwise:

- -ETIMEDOUT is returned idate is different from XN INFINITE and represents a date in the past.
- -EINVAL is returned if period is different from XN\_INFINITE but shorter than the scheduling latency value for the target system, as available from /proc/xenomai/latency. -EINVAL is also returned if timeout\_mode is not compatible with idate, such as XN\_RELATIVE with idate different from XN\_I-NFINITE.

### Tags

## task-unrestricted

References xntimer\_start(), and xntimer\_stop().

Referenced by rtdm\_task\_init().

6.43.2.8 int xnthread\_set\_schedparam ( struct xnthread \* thread, struct xnsched\_class \* sched\_class, const union xnsched\_policy\_param \* sched\_param )

Change the base scheduling parameters of a thread.

Changes the base scheduling policy and paramaters of a thread. If the thread is currently blocked, waiting in priority-pending mode (XNSYNCH\_PRIO) for a synchronization object to be signaled, the nucleus will attempt to reorder the object's wait queue so that it reflects the new sleeper's priority, unless the XNSYNCH\_DREORD flag has been set for the pended object.

#### **Parameters**

| thread      | The descriptor address of the affected thread. See note.   |
|-------------|--|
| sched_class | The new scheduling class the thread should be assigned to.   |
| sched_param | The scheduling parameters to set for the thread; <i>sched_param</i> must be valid within the context of <i>sched_class</i> . |

It is absolutely required to use this service to change a thread priority, in order to have all the needed housekeeping chores correctly performed. i.e. Do *not* call xnsched\_set\_policy() directly or worse, change the thread.cprio field by hand in any case.

### Returns

0 is returned on success. Otherwise, a negative error code indicates the cause of a failure that happened in the scheduling class implementation for *sched\_class*. Invalid parameters passed into *sched\_param* are common causes of error.

#### Side effects

- This service does not call the rescheduling procedure but may affect the state of the runnable queue for the previous and new scheduling classes.
- Assigning the same scheduling class and parameters to a running or ready thread moves it to the end of the runnable queue, thus causing a manual round-robin.

### Tags

## task-unregistred

### Note

The changes only apply to the Xenomai scheduling parameters for *thread*. There is no propagation/translation of such changes to the Linux scheduler for the task mated to the Xenomai target thread.

6.43.2.9 int xnthread\_set\_slice ( struct xnthread \* thread, xnticks\_t quantum )

Set thread time-slicing information.

Update the time-slicing information for a given thread. This service enables or disables round-robin scheduling for the thread, depending on the value of *quantum*. By default, times-slicing is disabled for a new thread initialized by a call to xnthread init().

6.43 Thread services 211

#### **Parameters**

| thread  | The descriptor address of the affected thread.  |
|---------|---|
| quantum | The time quantum assigned to the thread expressed in nanoseconds. If quantum                  |
|         | is different from XN_INFINITE, the time-slice for the thread is set to that value and         |
|         | its current time credit is refilled (i.e. the thread is given a full time-slice to run next). |
|         | Otherwise, if <i>quantum</i> equals XN_INFINITE, time-slicing is stopped for that thread.     |

#### Returns

0 is returned upon success. Otherwise, -EINVAL is returned if *quantum* is not XN\_INFINITE and:

- the base scheduling class of the target thread does not support time-slicing,
- quantum is smaller than the master clock gravity for a user thread, which denotes a spurious value.

## Tags

### task-unrestricted

References xnsched::curr, xnsched::rrbtimer, XNRRB, xntimer start(), and xntimer stop().

6.43.2.10 int xnthread start ( struct xnthread \* thread, const struct xnthread start attr \* attr )

Start a newly created thread.

Starts a (newly) created thread, scheduling it for the first time. This call releases the target thread from the XNDORMANT state. This service also sets the initial mode for the new thread.

### **Parameters**

| thread | The descriptor address of the started thread which must have been previously ini-      |
|--------|--|
|        | tialized by a call to xnthread_init().   |
| attr   | A pointer to an attribute block describing the execution properties of the new thread. |
|        | Members of this structure are defined as follows:                                      |

- mode: The initial thread mode. The following flags can be part of this bitmask, each of them affecting the nucleus behaviour regarding the started thread:
  - XNLOCK causes the thread to lock the scheduler when it starts. The target thread will have to call the xnsched\_unlock() service to unlock the scheduler. A non-preemptible thread may still block, in which case, the lock is reasserted when the thread is scheduled back in.
  - XNSUSP makes the thread start in a suspended state. In such a case, the thread will have to be explicitly resumed using the xnthread\_resume() service for its execution to actually begin.
- entry: The address of the thread's body routine. In other words, it is the thread entry point.
- cookie: A user-defined opaque cookie the nucleus will pass to the emerging thread as the sole argument of its entry point.

## Return values

| 0      | if thread could be started;           |
|--------|---------------------------------------|
| -EBUSY | if thread was not dormant or stopped; |

### Tags

## task-unrestricted, might-switch

References XNDORMANT, xnsched\_run(), XNSUSP, and xnthread\_resume().

Referenced by rtdm\_task\_init(), and xnshadow\_map\_user().

6.43.2.11 void xnthread\_suspend ( struct xnthread \* thread, int mask, xnticks\_t timeout, xntmode\_t timeout\_mode, struct xnsynch \* wchan )

### Suspend a thread.

Suspends the execution of a thread according to a given suspensive condition. This thread will not be eligible for scheduling until it all the pending suspensive conditions set by this service are removed by one or more calls to xnthread\_resume().

#### **Parameters**

| thread |  |
|--------|--|
| mask   | The suspension mask specifying the suspensive condition to add to the thread's |
|        | wait mask. Possible values usable by the caller are:                           |

- XNSUSP. This flag forcibly suspends a thread, regardless of any resource to wait for. A reverse call
  to xnthread\_resume() specifying the XNSUSP bit must be issued to remove this condition, which is
  cumulative with other suspension bits.wchan should be NULL when using this suspending mode.
- XNDELAY. This flags denotes a counted delay wait (in ticks) which duration is defined by the value of the timeout parameter.
- XNPEND. This flag denotes a wait for a synchronization object to be signaled. The wchan argument must points to this object. A timeout value can be passed to bound the wait. This suspending mode should not be used directly by the client interface, but rather through the xnsynch\_sleep\_on() call.

#### **Parameters**

| timeout | The timeout which may be used to limit the time the thread pends on a resource.     |
|---------|---|
|         | This value is a wait time given in nanoseconds. It can either be relative, absolute |
|         | monotonic, or absolute adjustable depending on timeout_mode.                        |

Passing XN\_INFINITE **and** setting *timeout\_mode* to XN\_RELATIVE specifies an unbounded wait. All other values are used to initialize a watchdog timer. If the current operation mode of the system timer is oneshot and *timeout* elapses before xnthread\_suspend() has completed, then the target thread will not be suspended, and this routine leads to a null effect.

## Parameters

| timeout_mode | The mode of the timeout parameter. It can either be set to XN_RELATIVE, XN_AB-     |
|--------------|--|
|              | SOLUTE, or XN_REALTIME (see also xntimer_start()).                                 |
| wchan        | The address of a pended resource. This parameter is used internally by the syn-    |
|              | chronization object implementation code to specify on which object the suspended   |
|              | thread pends. NULL is a legitimate value when this parameter does not apply to the |
|              | current suspending mode (e.g. XNSUSP).   |

### Note

If the target thread has received a Linux-originated signal, then this service immediately exits without suspending the thread, but raises the XNBREAK condition in its information mask.

## Tags

## unrestricted, might-switch

References xnsched::curr, xnsched::lflags, splmax, XNBREAK, XNDELAY, XNHELD, XNKICKED, XNLBALERT, XNLOCK, XNREADY, XNRELAX, XNRMID, XNROBBED, xnsched\_run(), XNSUSP, XNTIME-O, xntimer\_start(), XNTRAPLB, XNUSER, XNWAKEN, and XNWARN.

Referenced by xnshadow\_map\_kernel(), xnshadow\_map\_user(), xnshadow\_relax(), xnsynch\_acquire(), xnsynch\_sleep\_on(), and xnthread\_wait\_period().

6.43 Thread services 213

6.43.2.12 void xnthread\_test\_cancel (void ) [inline], [static]

Introduce a thread cancellation point.

Terminates the current thread if a cancellation request is pending for it, i.e. if xnthread\_cancel() was called.

Calling context: This service may be called from all runtime modes of kernel or user-space threads.

References XNCANCELD.

Referenced by xnshadow harden(), xnshadow map kernel(), and xnthread cancel().

6.43.2.13 int xnthread\_unblock ( struct xnthread \* thread )

Unblock a thread.

Breaks the thread out of any wait it is currently in. This call removes the XNDELAY and XNPEN-D suspensive conditions previously put by xnthread\_suspend() on the target thread. If all suspensive conditions are gone, the thread is left in a READY state at which point it becomes eligible anew for scheduling.

**Parameters** 

thread The descriptor address of the unblocked thread.

This call neither releases the thread from the XNSUSP, XNRELAX, XNDORMANT or XNHELD suspensive conditions.

When the thread resumes execution, the XNBREAK bit is set in the unblocked thread's information mask. Unblocking a non-blocked thread is perfectly harmless.

### Returns

non-zero is returned if the thread was actually unblocked from a pending wait state, 0 otherwise.

Tags

unrestricted, might-switch

References XNBREAK, XNDELAY, XNPEND, and xnthread resume().

6.43.2.14 int xnthread\_wait\_period ( unsigned long \* overruns\_r )

Wait for the next periodic release point.

Make the current thread wait for the next periodic release point in the processor time line.

**Parameters** 

| overruns_r | If non-NULL, <i>overruns_r</i> must be a pointer to a memory location which will be written |
|------------|---|
|            | with the count of pending overruns. This value is copied only when xnthread_wait            |
|            | period() returns -ETIMEDOUT or success; the memory location remains unmodified              |
|            | otherwise. If NULL, this count will never be copied back.                                   |

#### Returns

0 is returned upon success; if *overruns\_r* is valid, zero is copied to the pointed memory location. Otherwise:

 -EWOULDBLOCK is returned if xnthread\_set\_periodic() has not previously been called for the calling thread. 214 Module Documentation

• -EINTR is returned if xnthread\_unblock() has been called for the waiting thread before the next periodic release point has been reached. In this case, the overrun counter is reset too.

• -ETIMEDOUT is returned if the timer has overrun, which indicates that one or more previous release points have been missed by the calling thread. If *overruns\_r* is valid, the count of pending overruns is copied to the pointed memory location.

Tags

primary-only, might-switch

References XNBREAK, XNDELAY, xnthread\_suspend(), and xntimer\_get\_overruns().

6.44 Timer services 215

## 6.44 Timer services

The Xenomai timer facility depends on a clock source (xnclock) for scheduling the next activation times. Collaboration diagram for Timer services:



## **Functions**

void xntimer destroy (struct xntimer \*timer)

Release a timer object.

static xnticks\_t xntimer\_interval (struct xntimer \*timer)

Return the timer interval value.

• int xntimer\_start (struct xntimer \*timer, xnticks\_t value, xnticks\_t interval, xntmode\_t mode)

Arm a timer.

xnticks\_t xntimer\_get\_date (struct xntimer \*timer)

Return the absolute expiration date.

• xnticks t xntimer get timeout (struct xntimer \*timer)

Return the relative expiration date.

• static void xntimer stop (struct xntimer \*timer)

Disarm a timer.

 void xntimer\_init (struct xntimer \*timer, struct xnclock \*clock, void(\*handler)(struct xntimer \*timer), struct xnsched \*sched, int flags)

Initialize a timer object.

• void xntimer migrate (struct xntimer \*timer, struct xnsched \*sched)

Migrate a timer.

unsigned long long xntimer\_get\_overruns (struct xntimer \*timer, xnticks\_t now)

Get the count of overruns for the last tick.

static int program htick shot (unsigned long delay, struct clock event device \*cdev)

Program next host tick as a Xenomai timer event.

• static void switch htick mode (enum clock event mode mode, struct clock event device \*cdev)

Tick mode switch emulation callback.

int xntimer\_grab\_hardware (int cpu)

Grab the hardware timer.

void xntimer\_release\_hardware (int cpu)

Release the hardware timer.

## 6.44.1 Detailed Description

The Xenomai timer facility depends on a clock source (xnclock) for scheduling the next activation times. The core provides and depends on a monotonic clock source (nkclock) with nanosecond resolution, driving the platform timer hardware exposed by the interrupt pipeline.

## 6.44.2 Function Documentation

6.44.2.1 void \_\_xntimer\_migrate ( struct xntimer \* timer, struct xnsched \* sched )

Migrate a timer.

This call migrates a timer to another cpu. In order to avoid pathological cases, it must be called from the CPU to which *timer* is currently attached.

#### **Parameters**

| timer | The address of the timer object to be migrated.        |
|-------|--|
| sched | The address of the destination per-CPU scheduler slot. |

### Tags

## unrestricted, atomic-entry

References xntimer\_stop().

Referenced by xnthread migrate().

6.44.2.2 static int program\_htick\_shot ( unsigned long delay, struct clock\_event\_device \* cdev ) [static]

Program next host tick as a Xenomai timer event.

Program the next shot for the host tick on the current CPU. Emulation is done using a nucleus timer attached to the master timebase.

### **Parameters**

| delay | The time delta from the current date to the next tick, expressed as a count of |
|-------|--|
|       | nanoseconds.   |
| cdev  | An pointer to the clock device which notifies us.                              |

### Tags

#### unrestricted

References xnsched::htimer, and xntimer start().

Referenced by xntimer\_grab\_hardware().

6.44.2.3 void switch\_htick\_mode ( enum clock\_event\_mode mode, struct clock\_event\_device \* cdev ) [static]

Tick mode switch emulation callback.

Changes the host tick mode for the tick device of the current CPU.

| mode | The new mode to switch to. The possible values are: |
|------|---|

- CLOCK\_EVT\_MODE\_ONESHOT, for a switch to oneshot mode.
- CLOCK\_EVT\_MODE\_PERIODIC, for a switch to periodic mode. The current implementation for the generic clockevent layer Linux exhibits should never downgrade from a oneshot to a periodic tick mode, so this mode should not be encountered. This said, the associated code is provided, basically for illustration purposes.

6.44 Timer services 217

CLOCK\_EVT\_MODE\_SHUTDOWN, indicates the removal of the current tick device. Normally, the
nucleus only interposes on tick devices which should never be shut down, so this mode should not
be encountered.

### **Parameters**

cdev An opaque pointer to the clock device which notifies us.

Tags

unrestricted

Note

GENERIC CLOCKEVENTS is required from the host kernel.

References xnsched::htimer, xntimer start(), and xntimer stop().

Referenced by xntimer\_grab\_hardware().

6.44.2.4 void xntimer\_destroy ( struct xntimer \* timer )

Release a timer object.

Destroys a timer. After it has been destroyed, all resources associated with the timer have been released. The timer is automatically deactivated before deletion if active on entry.

**Parameters** 

| timer | The address of a valid timer descriptor. |
|-------|--|
|-------|--|

Tags

unrestricted

References xntimer\_stop().

Referenced by rtdm\_timer\_destroy().

6.44.2.5 xnticks\_t xntimer\_get\_date ( struct xntimer \* timer )

Return the absolute expiration date.

Return the next expiration date of a timer as an absolute count of nanoseconds.

**Parameters** 

timer | The address of a valid timer descriptor.

Returns

The expiration date in nanoseconds. The special value XN\_INFINITE is returned if *timer* is currently disabled.

Tags

unrestricted, atomic-entry

6.44.2.6 unsigned long long xntimer\_get\_overruns ( struct xntimer \* timer, xnticks\_t now )

Get the count of overruns for the last tick.

This service returns the count of pending overruns for the last tick of a given timer, as measured by the difference between the expected expiry date of the timer and the date *now* passed as argument.

### **Parameters**

| timer | The address of a valid timer descriptor.                 |
|-------|--|
| now   | current date (as xnclock_read_raw(xntimer_clock(timer))) |

#### Returns

the number of overruns of timer at date now

### Tags

unrestricted, atomic-entry

Referenced by xnthread\_wait\_period().

6.44.2.7 xnticks t xntimer get timeout ( struct xntimer \* timer )

Return the relative expiration date.

This call returns the count of nanoseconds remaining until the timer expires.

### **Parameters**

| timer | The address of a valid timer descriptor. |
|-------|--|
|-------|--|

## Returns

The count of nanoseconds until expiry. The special value XN\_INFINITE is returned if *timer* is currently disabled. It might happen that the timer expires when this service runs (even if the associated handler has not been fired yet); in such a case, 1 is returned.

## Tags

unrestricted, atomic-entry

6.44.2.8 int xntimer\_grab\_hardware ( int cpu )

### Grab the hardware timer.

xntimer\_grab\_hardware() grabs and tunes the hardware timer in oneshot mode in order to clock the master time base. GENERIC\_CLOCKEVENTS is required from the host kernel.

Host tick emulation is performed for sharing the clockchip hardware between Linux and Xenomai, when the former provides support for oneshot timing (i.e. high resolution timers and no-HZ scheduler ticking).

| сри | The CPU number to grab the timer from. |
|-----|--|

6.44 Timer services 219

### Returns

a positive value is returned on success, representing the duration of a Linux periodic tick expressed as a count of nanoseconds; zero should be returned when the Linux kernel does not undergo periodic timing on the given CPU (e.g. oneshot mode). Otherwise:

- -EBUSY is returned if the hardware timer has already been grabbed. xntimer\_release\_hardware() must be issued before xntimer\_grab\_hardware() is called again.
- -ENODEV is returned if the hardware timer cannot be used. This situation may occur after the kernel disabled the timer due to invalid calibration results; in such a case, such hardware is unusable for any timing duties.

### Tags

## secondary-only

References program\_htick\_shot(), and switch\_htick\_mode().

6.44.2.9 void xntimer\_init ( struct xntimer \* timer, struct xnclock \* clock, void(\*)(struct xntimer \*timer) handler, struct xnsched \* sched, int flags )

Initialize a timer object.

Creates a timer. When created, a timer is left disarmed; it must be started using xntimer\_start() in order to be activated.

#### **Parameters**

| timer   | The address of a timer descriptor the nucleus will use to store the object-specific             |
|---------|---|
|         | data. This descriptor must always be valid while the object is active therefore it must         |
|         | be allocated in permanent memory.   |
| clock   | The clock the timer relates to. Xenomai defines a monotonic system clock, with                  |
|         | nanosecond resolution, named nkclock. In addition, external clocks driven by other              |
|         | tick sources may be created dynamically if CONFIG_XENO_OPT_EXTCLOCK is                          |
|         | defined.  |
| handler | The routine to call upon expiration of the timer.   |
| sched   | An optional pointer to the per-CPU scheduler slot the new timer is affine to. If non            |
|         | NULL, the timer will fire on the CPU <i>sched</i> is bound to, otherwise it will fire either on |
|         | the current CPU if real-time, or on the first real-time CPU.                                    |
| flags   | A set of flags describing the timer. The valid flags are:                                       |

• XNTIMER NOBLCK, the timer won't be frozen while GDB takes over control of the application.

A set of clock gravity hints can be passed via the *flags* argument, used for optimizing the built-in heuristics aimed at latency reduction:

- XNTIMER\_IGRAVITY, the timer activates a leaf timer handler.
- XNTIMER\_KGRAVITY, the timer activates a kernel thread.
- XNTIMER UGRAVITY, the timer activates a user-space thread.

There is no limitation on the number of timers which can be created/active concurrently.

### Tags

### unrestricted

6.44.2.10 xnticks\_t xntimer\_interval ( struct xntimer \* timer ) [inline], [static]

Return the timer interval value.

Return the timer interval value in nanoseconds.

**Parameters** 

| timer | The address of a valid timer descriptor. |
|-------|--|
|-------|--|

#### Returns

The duration of a period in nanoseconds. The special value XN\_INFINITE is returned if *timer* is currently disabled or one shot.

## Tags

unrestricted, atomic-entry

6.44.2.11 void xntimer\_release\_hardware (int cpu)

Release the hardware timer.

Releases the hardware timer, thus reverting the effect of a previous call to xntimer\_grab\_hardware(). In case the timer hardware is shared with Linux, a periodic setup suitable for the Linux kernel is reset.

**Parameters** 

| сри | The CPU number the timer was grabbed from. |
|-----|--|
| -1  |  |

## Tags

secondary-only

6.44.2.12 int xntimer\_start ( struct xntimer \* timer, xnticks\_t value, xnticks\_t interval, xntmode\_t mode )

Arm a timer.

Activates a timer so that the associated timeout handler will be fired after each expiration time. A timer can be either periodic or one-shot, depending on the reload value passed to this routine. The given timer must have been previously initialized.

A timer is attached to the clock specified in xntimer\_init().

| timer    | The address of a valid timer descriptor.  |
|----------|---|
| value    | The date of the initial timer shot, expressed in nanoseconds.                         |
| interval | The reload value of the timer. It is a periodic interval value to be used for repro-  |
|          | gramming the next timer shot, expressed in nanoseconds. If interval is equal to       |
|          | XN_INFINITE, the timer will not be reloaded after it has expired.                     |
| mode     | The timer mode. It can be XN_RELATIVE if value shall be interpreted as a relative     |
|          | date, XN_ABSOLUTE for an absolute date based on the monotonic clock of the            |
|          | related time base (as returned my xnclock_read_monotonic()), or XN_REALTIME           |
|          | if the absolute date is based on the adjustable real-time date for the relevant clock |
|          | (obtained from xnclock_read_realtime()).  |

6.44 Timer services 221

### Returns

0 is returned upon success, or -ETIMEDOUT if an absolute date in the past has been given. In such an event, the timer is nevertheless armed for the next shot in the timeline if *interval* is different from XN\_INFINITE.

Tags

### unrestricted, atomic-entry

Referenced by program\_htick\_shot(), rtdm\_timer\_start(), switch\_htick\_mode(), xnthread\_set\_periodic(), xnthread\_set\_slice(), and xnthread\_suspend().

6.44.2.13 int xntimer\_stop ( struct xntimer \* timer ) [inline], [static]

#### Disarm a timer.

This service deactivates a timer previously armed using xntimer\_start(). Once disarmed, the timer can be subsequently re-armed using the latter service.

#### **Parameters**

| timer | The address of a valid timer descriptor. |
|-------|--|
|-------|--|

Tags


### unrestricted, atomic-entry

Referenced by \_\_xntimer\_migrate(), rtdm\_timer\_stop(), switch\_htick\_mode(), xnthread\_resume(), xnthread\_set\_periodic(), xnthread\_set\_slice(), and xntimer\_destroy().

### 6.45 Virtual file services

Virtual files provide a mean to export Xenomai object states to user-space, based on common kernel interfaces.

Collaboration diagram for Virtual file services:

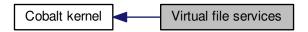

### **Data Structures**

• struct xnvfile\_lock\_ops

Vfile locking operations.

struct xnvfile\_regular\_ops

Regular vfile operation descriptor.

struct xnvfile\_regular\_iterator

Regular vfile iterator.

struct xnvfile\_snapshot\_ops

Snapshot vfile operation descriptor.

struct xnvfile\_rev\_tag

Snapshot revision tag.

struct xnvfile\_snapshot

Snapshot vfile descriptor.

struct xnvfile\_snapshot\_iterator

Snapshot-driven vfile iterator.

### **Functions**

• int xnvfile\_init\_snapshot (const char \*name, struct xnvfile\_snapshot \*vfile, struct xnvfile\_directory \*parent)

Initialize a snapshot-driven vfile.

int xnvfile\_init\_regular (const char \*name, struct xnvfile\_regular \*vfile, struct xnvfile\_directory \*parent)

Initialize a regular vfile.

- int xnvfile\_init\_dir (const char \*name, struct xnvfile\_directory \*vdir, struct xnvfile\_directory \*parent)

  Initialize a virtual directory entry.
- int xnvfile\_init\_link (const char \*from, const char \*to, struct xnvfile\_link \*vlink, struct xnvfile\_-directory \*parent)

Initialize a virtual link entry.

• void xnvfile\_destroy (struct xnvfile \*vfile)

Removes a virtual file entry.

ssize t xnvfile get blob (struct xnvfile input \*input, void \*data, size t size)

Read in a data bulk written to the vfile.

ssize\_t xnvfile\_get\_string (struct xnvfile\_input \*input, char \*s, size\_t maxlen)

6.45 Virtual file services 223

Read in a C-string written to the vfile.

• ssize\_t xnvfile\_get\_integer (struct xnvfile\_input \*input, long \*valp)

Evaluate the string written to the vfile as a long integer.

#### Variables

struct xnvfile\_directory nkvfroot
 Xenomai vfile root directory.

struct xnvfile\_directory nkvfroot
 Xenomai vfile root directory.

### 6.45.1 Detailed Description

Virtual files provide a mean to export Xenomai object states to user-space, based on common kernel interfaces. This encapsulation is aimed at:

- supporting consistent collection of very large record-based output, without encurring latency peaks for undergoing real-time activities.
- in the future, hiding discrepancies between linux kernel releases, regarding the proper way to export kernel object states to userland, either via the /proc interface or by any other mean.

This virtual file implementation offers record-based read support based on seq\_files, single-buffer write support, directory and link handling, all visible from the /proc namespace.

The vfile support exposes four filesystem object types:

 snapshot-driven file (struct xnvfile\_snapshot). This is commonly used to export real-time object states via the /proc filesystem. To minimize the latency involved in protecting the vfile routines from changes applied by real-time code on such objects, a snapshot of the data to output is first taken under proper locking, before the collected data is formatted and sent out in a lockless manner.

Because a large number of records may have to be output, the data collection phase is not strictly atomic as a whole, but only protected at record level. The vfile implementation can be notified of updates to the underlying data set, and restart the collection from scratch until the snapshot is fully consistent.

- regular sequential file (struct xnvfile\_regular). This is basically an encapsulated sequential file
  object as available from the host kernel (i.e. seq\_file), with a few additional features to make it
  more handy in a Xenomai environment, like implicit locking support and shortened declaration for
  simplest, single-record output.
- virtual link (struct xnvfile\_link). This is a symbolic link feature integrated with the vfile semantics. The link target is computed dynamically at creation time from a user-given helper routine.
- virtual directory (struct xnvfile\_directory). A directory object, which can be used to create a hierarchy for ordering a set of vfile objects.

### 6.45.2 Function Documentation

6.45.2.1 void xnvfile\_destroy ( struct xnvfile \* vfile )

Removes a virtual file entry.

### **Parameters**

| vfile A | A pointer to the virtual file descriptor to remove. |
|---------|---|
|---------|---|

### Tags

#### secondary-only

```
6.45.2.2 ssize t xnvfile get blob ( struct xnvfile input * input, void * data, size t size )
```

Read in a data bulk written to the vfile.

When writing to a vfile, the associated store() handler from the snapshot-driven vfile or regular vfile is called, with a single argument describing the input data. xnvfile\_get\_blob() retrieves this data as an untyped binary blob, and copies it back to the caller's buffer.

#### **Parameters**

| input A pointer to the input descriptor passed to the store() handler.                  |   |
|---|---|
| data The address of the destination buffer to copy the input data to.                   |   |
| size The maximum number of bytes to copy to the destination buffer. If size is larger t |   |
|   | the actual data size, the input is truncated to size. |

#### Returns

The number of bytes read and copied to the destination buffer upon success. Otherwise, a negative error code is returned:

· -EFAULT indicates an invalid source buffer address.

#### Tags

### secondary-only

Referenced by xnvfile get integer(), and xnvfile get string().

```
6.45.2.3 ssize_t xnvfile_get_integer ( struct xnvfile_input * input, long * valp )
```

Evaluate the string written to the vfile as a long integer.

When writing to a vfile, the associated store() handler from the snapshot-driven vfile or regular vfile is called, with a single argument describing the input data. xnvfile\_get\_integer() retrieves and interprets this data as a long integer, and copies the resulting value back to *valp*.

The long integer can be expressed in decimal, octal or hexadecimal bases depending on the prefix found.

### **Parameters**

| input A pointer to the input descriptor passed to the store() handler. |  |
|--|--|
| valp   | The address of a long integer variable to receive the value. |

#### Returns

The number of characters read while evaluating the input as a long integer upon success. Otherwise, a negative error code is returned:

• -EINVAL indicates a parse error on the input stream; the written text cannot be evaluated as a long integer.

6.45 Virtual file services 225

· -EFAULT indicates an invalid source buffer address.

### Tags

#### secondary-only

References xnvfile\_get\_blob().

```
6.45.2.4 ssize t xnvfile get string ( struct xnvfile input * input, char * s, size t maxlen )
```

Read in a C-string written to the vfile.

When writing to a vfile, the associated store() handler from the snapshot-driven vfile or regular vfile is called, with a single argument describing the input data. xnvfile\_get\_string() retrieves this data as a null-terminated character string, and copies it back to the caller's buffer.

#### **Parameters**

| input   | out A pointer to the input descriptor passed to the store() handler.    |  |
|---|---|--|
| S   | The address of the destination string buffer to copy the input data to. |  |
| maxlen The maximum number of bytes to copy to the destination buffer, including the null character. If maxlen is larger than the actual string length, the input is |   |  |
|   | to maxlen.  |  |

#### Returns

The number of characters read upon success. Otherwise, a negative error code is returned:

· -EFAULT indicates an invalid source buffer address.

### Tags

### secondary-only

References xnvfile\_get\_blob().

6.45.2.5 int xnvfile\_init\_dir ( const char \* name, struct xnvfile\_directory \* vdir, struct xnvfile\_directory \* parent )

Initialize a virtual directory entry.

# **Parameters**

| name   | The name which should appear in the pseudo-filesystem, identifying the vdir entry.       |
|--------|--|
| vdir   | A pointer to the virtual directory descriptor to initialize.                             |
| parent | A pointer to a virtual directory descriptor standing for the parent directory of the new |
|        | vdir. If NULL, the /proc root directory will be used. /proc/xenomai is mapped on the     |
|        | globally available <i>nkvfroot</i> vdir.   |

### Returns

0 is returned on success. Otherwise:

-ENOMEM is returned if the virtual directory entry cannot be created in the /proc hierarchy.

### Tags

secondary-only

6.45.2.6 int xnvfile\_init\_link ( const char \* from, const char \* to, struct xnvfile\_link \* vlink, struct xnvfile\_directory \* parent )

Initialize a virtual link entry.

6.45 Virtual file services 227

### **Parameters**

| from   | The name which should appear in the pseudo-filesystem, identifying the vlink entry.      |  |
|--------|--|--|
| to     | The target file name which should be referred to symbolically by <i>name</i> .           |  |
| vlink  | A pointer to the virtual link descriptor to initialize.                                  |  |
| parent | A pointer to a virtual directory descriptor standing for the parent directory of the new |  |
|        | vlink. If NULL, the /proc root directory will be used. /proc/xenomai is mapped on the    |  |
|        | globally available <i>nkvfroot</i> vdir.   |  |

#### Returns

0 is returned on success. Otherwise:

• -ENOMEM is returned if the virtual link entry cannot be created in the /proc hierarchy.

### Tags

secondary-only

6.45.2.7 int xnvfile\_init\_regular ( const char \* name, struct xnvfile\_regular \* vfile, struct xnvfile directory \* parent )

Initialize a regular vfile.

#### **Parameters**

| name  | The name which should appear in the pseudo-filesystem, identifying the vfile entry.        |  |
|-------|--|--|
| vfile | A pointer to a vfile descriptor to initialize from. The following fields in this structure |  |
|       | should be filled in prior to call this routine:  |  |

- .privsz is the size (in bytes) of the private data area to be reserved in the vfile iterator. A NULL value indicates that no private area should be reserved.
- entry.lockops is a pointer to a lockingdescriptor", defining the lock and unlock operations for the vfile. This pointer may be left to NULL, in which case no locking will be applied.
- .ops is a pointer to an operation descriptor.

#### **Parameters**

| parent | A pointer to a virtual directory descriptor; the vfile entry will be created into this |
|--------|--|
|        | directory. If NULL, the /proc root directory will be used. /proc/xenomai is mapped     |
|        | on the globally available <i>nkvfroot</i> vdir.  |

### Returns

0 is returned on success. Otherwise:

• -ENOMEM is returned if the virtual file entry cannot be created in the /proc hierarchy.

### Tags

secondary-only

6.45.2.8 int xnvfile\_init\_snapshot ( const char \* name, struct **xnvfile\_snapshot** \* vfile, struct xnvfile directory \* parent )

Initialize a snapshot-driven vfile.

#### **Parameters**

| name  | The name which should appear in the pseudo-filesystem, identifying the vfile entry.        |  |
|-------|--|--|
| vfile | A pointer to a vfile descriptor to initialize from. The following fields in this structure |  |
|       | should be filled in prior to call this routine:  |  |

- .privsz is the size (in bytes) of the private data area to be reserved in the vfile iterator. A NULL value indicates that no private area should be reserved.
- .datasz is the size (in bytes) of a single record to be collected by the next() handler from the operation descriptor.
- .tag is a pointer to a mandatory vfile revision tag structure (struct xnvfile\_rev\_tag). This tag will be
  monitored for changes by the vfile core while collecting data to output, so that any update detected
  will cause the current snapshot data to be dropped, and the collection to restart from the beginning.
  To this end, any change to the data which may be part of the collected records, should also invoke
  xnvfile\_touch() on the associated tag.
- entry.lockops is a pointer to a lock descriptor, defining the lock and unlock operations for the vfile.
   This pointer may be left to NULL, in which case the operations on the nucleus lock (i.e. nklock) will be used internally around calls to data collection handlers (see operation descriptor).
- .ops is a pointer to an operation descriptor.

#### **Parameters**

| parent | A pointer to a virtual directory descriptor; the vfile entry will be created into this |  |
|--------|--|--|
|        | directory. If NULL, the /proc root directory will be used. /proc/xenomai is mapped     |  |
|        | on the globally available <i>nkvfroot</i> vdir.  |  |

### Returns

0 is returned on success. Otherwise:

• -ENOMEM is returned if the virtual file entry cannot be created in the /proc hierarchy.

### Tags

### secondary-only

References xnvfile\_snapshot\_ops::store.

### 6.45.3 Variable Documentation

6.45.3.1 struct xnvfile directory nkvfroot

### Xenomai vfile root directory.

This vdir maps the /proc/xenomai directory. It can be used to create a hierarchy of Xenomai-related vfiles under this root.

6.45.3.2 struct xnvfile directory nkvfroot


### Xenomai vfile root directory.

This vdir maps the /proc/xenomai directory. It can be used to create a hierarchy of Xenomai-related vfiles under this root.

# 6.46 Analogy framework

A RTDM-based interface for implementing DAQ card drivers.

Collaboration diagram for Analogy framework:



# Modules

- Driver API
   Programming interface provided to DAQ card drivers.
- Analogy user API

# 6.46.1 Detailed Description


A RTDM-based interface for implementing DAQ card drivers.

# 6.47 Driver API

230

Programming interface provided to DAQ card drivers.

Collaboration diagram for Driver API:

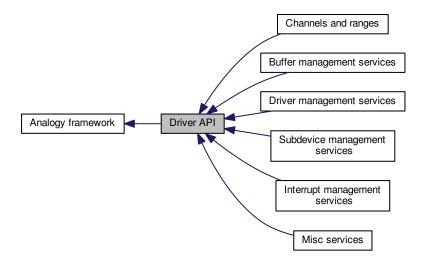

### Modules

• Channels and ranges

Channels.

• Driver management services

Analogy driver registration / unregistration.

Subdevice management services

Subdevice declaration in a driver.

Buffer management services

Buffer management services.

- Interrupt management services
- Misc services

# 6.47.1 Detailed Description

Programming interface provided to DAQ card drivers.

# 6.48 Driver management services

Analogy driver registration / unregistration.

Collaboration diagram for Driver management services:



### **Functions**

- int a4l\_register\_drv (struct a4l\_driver \*drv)
  - Register an Analogy driver.
- int a4l\_unregister\_drv (struct a4l\_driver \*drv)

Unregister an Analogy driver.

### 6.48.1 Detailed Description

Analogy driver registration / unregistration. In a common Linux char driver, the developer has to register a fops structure filled with callbacks for read / write / mmap / ioctl operations.

Analogy drivers do not have to implement read / write / mmap / ioctl functions, these procedures are implemented in the Analogy generic layer. Then, the transfers between user-space and kernel-space are already managed. Analogy drivers work with commands and instructions which are some kind of more dedicated read / write operations. And, instead of registering a fops structure, a Analogy driver must register some a4l\_driver structure.

### 6.48.2 Function Documentation

Register an Analogy driver.

After initialising a driver structure, the driver must be made available so as to be attached.

#### **Parameters**

| in | drv | Driver descriptor structure |
|----|-----|-----------------------------|

#### Returns

0 on success, otherwise negative error code.

References a4I driver::board name, and a4I driver::list.

6.48.2.2 int a4I unregister drv ( struct a4I driver \* drv )

Unregister an Analogy driver.

This function removes the driver descriptor from the Analogy driver list. The driver cannot be attached anymore.

### Parameters

| _ |    |     |                             |
|---|----|-----|-----------------------------|
|   | in | drv | Driver descriptor structure |

### Returns


0 on success, otherwise negative error code.

References a4l\_driver::board\_name, and a4l\_driver::list.

# 6.49 Subdevice management services

Subdevice declaration in a driver.

Collaboration diagram for Subdevice management services:

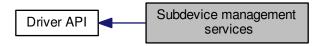

### **Functions**

- struct a4l\_subdevice \* a4l\_alloc\_subd (int sizeof\_priv, void(\*setup)(struct a4l\_subdevice \*))
   Allocate a subdevice descriptor.
- int a4l\_add\_subd (struct a4l\_device \*dev, struct a4l\_subdevice \*subd)
   Add a subdevice to the driver descriptor.
- struct a4l\_subdevice \* a4l\_get\_subd (struct a4l\_device \*dev, int idx)
   Get a pointer to the subdevice descriptor referenced by its registration index.

# Subdevices types

Flags to define the subdevice type

- #define A4L\_SUBD\_UNUSED (A4L\_SUBD\_MASK\_SPECIAL|0x1)
   Unused subdevice.
- #define A4L\_SUBD\_AI (A4L\_SUBD\_MASK\_READ|0x2)

Analog input subdevice.

• #define A4L\_SUBD\_AO (A4L\_SUBD\_MASK\_WRITE|0x4)

Analog output subdevice.

#define A4L\_SUBD\_DI (A4L\_SUBD\_MASK\_READ|0x8)

Digital input subdevice.

#define A4L\_SUBD\_DO (A4L\_SUBD\_MASK\_WRITE|0x10)

Digital output subdevice.

#define A4L\_SUBD\_DIO (A4L\_SUBD\_MASK\_SPECIAL|0x20)

Digital input/output subdevice.

#define A4L\_SUBD\_COUNTER (A4L\_SUBD\_MASK\_SPECIAL|0x40)

Counter subdevice.

- #define A4L\_SUBD\_TIMER (A4L\_SUBD\_MASK\_SPECIAL|0x80)

  Timer subdevice.
- #define A4L\_SUBD\_MEMORY (A4L\_SUBD\_MASK\_SPECIAL|0x100)
   Memory, EEPROM, DPRAM.
- #define A4L\_SUBD\_CALIB (A4L\_SUBD\_MASK\_SPECIAL|0x200)

Calibration subdevice DACs.

#define A4L\_SUBD\_PROC (A4L\_SUBD\_MASK\_SPECIAL|0x400)

Processor, DSP.

#define A4L\_SUBD\_SERIAL (A4L\_SUBD\_MASK\_SPECIAL|0x800)

Serial IO subdevice.

• #define A4L SUBD TYPES

Mask which gathers all the types.

### Subdevice features

Flags to define the subdevice's capabilities

#define A4L SUBD CMD 0x1000

The subdevice can handle command (i.e it can perform asynchronous acquisition)

#define A4L SUBD MMAP 0x8000

The subdevice support mmap operations (technically, any driver can do it; however, the developer might want that his driver must be accessed through read / write.

### Subdevice status

Flags to define the subdevice's status

• #define A4L SUBD BUSY NR 0

The subdevice is busy, a synchronous or an asynchronous acquisition is occuring.

#define A4L SUBD BUSY (1 << A4L SUBD BUSY NR)</li>

The subdevice is busy, a synchronous or an asynchronous acquisition is occuring.

• #define A4L SUBD CLEAN NR 1

The subdevice is about to be cleaned in the middle of the detach procedure.

• #define A4L\_SUBD\_CLEAN (1 << A4L\_SUBD\_CLEAN\_NR)

The subdevice is busy, a synchronous or an asynchronous acquisition is occuring.

### 6.49.1 Detailed Description

Subdevice declaration in a driver. The subdevice structure is the most complex one in the Analogy driver layer. It contains some description fields to fill and some callbacks to declare.

The description fields are:

- flags: to define the subdevice type and its capabilities;
- chan\_desc: to describe the channels which compose the subdevice;
- rng\_desc: to declare the usable ranges;

The functions callbakes are:

- do\_cmd() and do\_cmdtest(): to performe asynchronous acquisitions thanks to commands;
- cancel(): to abort a working asynchronous acquisition;
- munge(): to apply modifications on the data freshly acquired during an asynchronous transfer.
   Warning: using this feature with can significantly reduce the performances (if the munge operation is complex, it will trigger high CPU charge and if the acquisition device is DMA capable, many cache-misses and cache-replaces will occur (the benefits of the DMA controller will vanish);
- trigger(): optionnaly to launch an asynchronous acquisition;

• insn\_read(), insn\_write(), insn\_bits(), insn\_config(): to perform synchronous acquisition operations

Once the subdevice is filled, it must be inserted into the driver structure thanks to a4l\_add\_subd().

### 6.49.2 Function Documentation

6.49.2.1 int a4l add subd ( struct a4l device \* dev, struct a4l subdevice \* subd )

Add a subdevice to the driver descriptor.

Once the driver descriptor structure is initialized, the function a4l\_add\_subd() must be used so to add some subdevices to the driver.

#### **Parameters**

| in | dev  | Device descriptor structure    |
|----|------|--------------------------------|
| in | subd | Subdevice descriptor structure |

#### Returns

the index with which the subdevice has been registered, in case of error a negative error code is returned.

References a4I subdevice::dev, a4I subdevice::idx, and a4I subdevice::list.

Allocate a subdevice descriptor.

This is a helper function so as to get a suitable subdevice descriptor

### **Parameters**

| in | sizeof_priv | Size of the subdevice's private data             |
|----|-------------|--|
| in | setup       | Setup function to be called after the allocation |

#### Returns

the index with which the subdevice has been registered, in case of error a negative error code is returned.

References rtdm\_malloc().

Get a pointer to the subdevice descriptor referenced by its registration index.

This function is scarcely useful as all the drivers callbacks get the related subdevice descriptor as first argument. This function is not optimized, it goes through a linked list to get the proper pointer. So it must not be used in real-time context but at initialization / cleanup time (attach / detach).

### **Parameters**

| in | dev | Device descriptor structure |
|----|-----|-----------------------------|
| in | idx | Subdevice index             |

# Returns

0 on success, otherwise negative error code.

# 6.50 Buffer management services

Buffer management services.

Collaboration diagram for Buffer management services:



### **Functions**

• int a4l buf prepare absput (struct a4l subdevice \*subd, unsigned long count)

Update the absolute count of data sent from the device to the buffer since the start of the acquisition and after the next DMA shot.

• int a4l buf commit absput (struct a4l subdevice \*subd, unsigned long count)

Set the absolute count of data which was sent from the device to the buffer since the start of the acquisition and until the last DMA shot.

int a4l\_buf\_prepare\_put (struct a4l\_subdevice \*subd, unsigned long count)

Set the count of data which is to be sent to the buffer at the next DMA shot.

int a4l\_buf\_commit\_put (struct a4l\_subdevice \*subd, unsigned long count)

Set the count of data sent to the buffer during the last completed DMA shots.

• int a4l buf put (struct a4l subdevice \*subd, void \*bufdata, unsigned long count)

Copy some data from the device driver to the buffer.

• int a4l buf prepare absget (struct a4l subdevice \*subd, unsigned long count)

Update the absolute count of data sent from the buffer to the device since the start of the acquisition and after the next DMA shot.

int a4l\_buf\_commit\_absget (struct a4l\_subdevice \*subd, unsigned long count)

Set the absolute count of data which was sent from the buffer to the device since the start of the acquisition and until the last DMA shot.

• int a4l buf prepare get (struct a4l subdevice \*subd, unsigned long count)

Set the count of data which is to be sent from the buffer to the device at the next DMA shot.

• int a4l buf commit get (struct a4l subdevice \*subd, unsigned long count)

Set the count of data sent from the buffer to the device during the last completed DMA shots.

• int a4l buf get (struct a4l subdevice \*subd, void \*bufdata, unsigned long count)

Copy some data from the buffer to the device driver.

• int a4l\_buf\_evt (struct a4l\_subdevice \*subd, unsigned long evts)

Signal some event(s) to a user-space program involved in some read / write operation.

unsigned long a4l\_buf\_count (struct a4l\_subdevice \*subd)

Get the data amount available in the Analogy buffer.

struct a4l\_cmd\_desc \* a4l\_get\_cmd (struct a4l\_subdevice \*subd)

Get the current Analogy command descriptor.

int a4l get chan (struct a4l subdevice \*subd)

Get the channel index according to its type.

# 6.50.1 Detailed Description

Buffer management services. The buffer is the key component of the Analogy infrastructure. It manages transfers between the user-space and the Analogy drivers thanks to generic functions which are described hereafter. Thanks to the buffer subsystem, the driver developer does not have to care about the way the user program retrieves or sends data.

To write a classical char driver, the developer has to fill a fops structure so as to provide transfer operations to the user program (read, write, ioctl and mmap if need be).

The Analogy infrastructure manages the whole interface with the userspace; the common read, write, mmap, etc. callbacks are generic Analogy functions. These functions manage (and perform, if need be) transfers between the user-space and an asynchronous buffer thanks to lockless mechanisms.

Consequently, the developer has to use the proper buffer functions in order to write / read acquired data into / from the asynchronous buffer.

Here are listed the functions:

- a4l\_buf\_prepare\_(abs)put() and a4l\_buf\_commit\_(abs)put()
- a4l\_buf\_prepare\_(abs)get() and a4l\_buf\_commit\_(abs)get()
- a4l buf put()
- a4l\_buf\_get()
- a4l\_buf\_evt().

The functions count might seem high; however, the developer needs a few of them to write a driver. Having so many functions enables to manage any transfer cases:

- If some DMA controller is available, there is no need to make the driver copy the acquired data into the asynchronous buffer, the DMA controller must directly trigger DMA shots into / from the buffer. In that case, a function a4l\_buf\_prepare\_\*() must be used so as to set up the DMA transfer and a function a4l\_buf\_commit\_\*() has to be called to complete the transfer().
- For DMA controllers which need to work with global counter (the transferred data count since the beginning of the acquisition), the functions a4l buf \* abs \*() have been made available.
- If no DMA controller is available, the driver has to perform the copy between the hardware component and the asynchronous buffer. In such cases, the functions a4l\_buf\_get() and a4l\_buf\_put() are useful.

#### 6.50.2 Function Documentation

```
6.50.2.1 int a4l buf commit absget ( struct a4l subdevice * subd, unsigned long count )
```

Set the absolute count of data which was sent from the buffer to the device since the start of the acquisition and until the last DMA shot.

The functions a4l\_buf\_prepare\_(abs)put(), a4l\_buf\_commit\_(abs)put(), a4l\_buf\_prepare\_(abs)get() and a4l\_buf\_commit\_(abs)get() have been made available for DMA transfers. In such situations, no data copy is needed between the Analogy buffer and the device as some DMA controller is in charge of performing data shots from / to the Analogy buffer. However, some pointers still have to be updated so as to monitor the transfers.

#### **Parameters**

| in | subd  | Subdevice descriptor structure   |
|----|-------|--|
| in | count | The data count transferred to the device during the last DMA shot plus the data count which have been sent since the beginning of the acqui- |
|    |       | sition   |

#### Returns

0 on success, otherwise negative error code.

References A4L\_SUBD\_BUSY\_NR, a4l\_subdevice::buf, and a4l\_subdevice::status.

6.50.2.2 int a4l buf commit absput ( struct a4l subdevice \* subd, unsigned long count )

Set the absolute count of data which was sent from the device to the buffer since the start of the acquisition and until the last DMA shot.

The functions a4l\_buf\_prepare\_(abs)put(), a4l\_buf\_commit\_(abs)put(), a4l\_buf\_prepare\_(abs)get() and a4l\_buf\_commit\_(abs)get() have been made available for DMA transfers. In such situations, no data copy is needed between the Analogy buffer and the device as some DMA controller is in charge of performing data shots from / to the Analogy buffer. However, some pointers still have to be updated so as to monitor the transfers.

#### **Parameters**

| in | subd  | Subdevice descriptor structure   |
|----|-------|--|
| in | count | The data count transferred to the buffer during the last DMA shot plus                 |
|    |       | the data count which have been sent / retrieved since the beginning of the acquisition |
|    |       | the acquisition  |

#### Returns

0 on success, otherwise negative error code.

References A4L\_SUBD\_BUSY\_NR, a4l\_subdevice::buf, and a4l\_subdevice::status.

6.50.2.3 int a4l buf commit get ( struct a4l subdevice \* subd, unsigned long count )

Set the count of data sent from the buffer to the device during the last completed DMA shots.

The functions a4l\_buf\_prepare\_(abs)put(), a4l\_buf\_commit\_(abs)put(), a4l\_buf\_prepare\_(abs)get() and a4l\_buf\_commit\_(abs)get() have been made available for DMA transfers. In such situations, no data copy is needed between the Analogy buffer and the device as some DMA controller is in charge of performing data shots from / to the Analogy buffer. However, some pointers still have to be updated so as to monitor the transfers.

### Parameters

| in | subd  | Subdevice descriptor structure |
|----|-------|--------------------------------|
| in | count | The amount of data transferred |

### Returns

0 on success, otherwise negative error code.

References A4L SUBD BUSY NR, a4I subdevice::buf, and a4I subdevice::status.

6.50.2.4 int a4l\_buf\_commit\_put ( struct a4l\_subdevice \* subd, unsigned long count )

Set the count of data sent to the buffer during the last completed DMA shots.

The functions a4l\_buf\_prepare\_(abs)put(), a4l\_buf\_commit\_(abs)put(), a4l\_buf\_prepare\_(abs)get() and a4l\_buf\_commit\_(abs)get() have been made available for DMA transfers. In such situations, no data copy is needed between the Analogy buffer and the device as some DMA controller is in charge of performing data shots from / to the Analogy buffer. However, some pointers still have to be updated so as to monitor the transfers.

#### **Parameters**

| in | subd  | Subdevice descriptor structure |
|----|-------|--------------------------------|
| in | count | The amount of data transferred |

#### Returns

0 on success, otherwise negative error code.

References A4L SUBD BUSY NR, a4I subdevice::buf, and a4I subdevice::status.

6.50.2.5 unsigned long a4l buf count ( struct a4l subdevice \* subd )

Get the data amount available in the Analogy buffer.

#### **Parameters**

| in | subd | Subdevice descriptor structure |
|----|------|--------------------------------|

#### Returns

the amount of data available in the Analogy buffer.

References A4L SUBD BUSY NR, a4I subdevice::buf, and a4I subdevice::status.

6.50.2.6 int a4l\_buf\_evt ( struct a4l\_subdevice \* subd, unsigned long evts )

Signal some event(s) to a user-space program involved in some read / write operation.

The function a4l\_buf\_evt() is useful in many cases:

- To wake-up a process waiting for some data to read.
- To wake-up a process waiting for some data to write.
- To notify the user-process an error has occured during the acquistion.

#### **Parameters**

| subd | Subdevice descriptor structure  |
|------|---|
| evts | Some specific event to notify:  |
|      | A4L_BUF_ERROR to indicate some error has occured during<br>the transfer   |
|      | <ul> <li>A4L_BUF_EOA to indicate the acquisition is complete (this event<br/>is automatically set, it should not be used).</li> </ul> |
|      |   |

#### Returns

0 on success, otherwise negative error code.

References A4L\_SUBD\_BUSY\_NR, a4l\_subdevice::buf, and a4l\_subdevice::status.

6.50.2.7 int a4l buf get ( struct a4l subdevice \* subd, void \* bufdata, unsigned long count )

Copy some data from the buffer to the device driver.

The function a4l\_buf\_get() must copy data coming from the Analogy buffer to some acquisition device. This ring-buffer is an intermediate area between the device driver and the user-space program, which is supposed to provide the data to send to the device.

#### **Parameters**

| in | subd    | Subdevice descriptor structure                  |
|----|---------|---|
| in | bufdata | The data buffer to copy into the Analogy buffer |
| in | count   | The amount of data to copy                      |

#### Returns

0 on success, otherwise negative error code.

References A4L\_SUBD\_BUSY\_NR, a4l\_subdevice::buf, and a4l\_subdevice::status.

6.50.2.8 int a4l\_buf\_prepare\_absget ( struct a4l\_subdevice \* subd, unsigned long count )

Update the absolute count of data sent from the buffer to the device since the start of the acquisition and after the next DMA shot.

The functions a4l\_buf\_prepare\_(abs)put(), a4l\_buf\_commit\_(abs)put(), a4l\_buf\_prepare\_(abs)get() and a4l\_buf\_commit\_(absg)et() have been made available for DMA transfers. In such situations, no data copy is needed between the Analogy buffer and the device as some DMA controller is in charge of performing data shots from / to the Analogy buffer. However, some pointers still have to be updated so as to monitor the transfers.

#### **Parameters**

| in | subd  | Subdevice descriptor structure                                       |
|----|-------|--|
| in | count | The data count to be transferred during the next DMA shot plus the   |
|    |       | data count which have been copied since the start of the acquisition |

#### Returns

0 on success, otherwise negative error code.

References A4L SUBD BUSY NR, a4I subdevice::buf, and a4I subdevice::status.

6.50.2.9 int a4l buf prepare absput ( struct a4l subdevice \* subd, unsigned long count )

Update the absolute count of data sent from the device to the buffer since the start of the acquisition and after the next DMA shot.

The functions a4l\_buf\_prepare\_(abs)put(), a4l\_buf\_commit\_(abs)put(), a4l\_buf\_prepare\_(abs)get() and a4l\_buf\_commit\_(absg)et() have been made available for DMA transfers. In such situations, no data copy is needed between the Analogy buffer and the device as some DMA controller is in charge of performing data shots from / to the Analogy buffer. However, some pointers still have to be updated so as to monitor the transfers.

#### **Parameters**

| in | subd  | Subdevice descriptor structure                                       |
|----|-------|--|
| in | count | The data count to be transferred during the next DMA shot plus the   |
|    |       | data count which have been copied since the start of the acquisition |

#### Returns

0 on success, otherwise negative error code.

References A4L SUBD BUSY NR, a4I subdevice::buf, and a4I subdevice::status.

6.50.2.10 int a4l\_buf\_prepare\_get ( struct a4l\_subdevice \* subd, unsigned long count )

Set the count of data which is to be sent from the buffer to the device at the next DMA shot.

The functions a4l\_buf\_prepare\_(abs)put(), a4l\_buf\_commit\_(abs)put(), a4l\_buf\_prepare\_(abs)get() and a4l\_buf\_commit\_(abs)get() have been made available for DMA transfers. In such situations, no data copy is needed between the Analogy buffer and the device as some DMA controller is in charge of performing data shots from / to the Analogy buffer. However, some pointers still have to be updated so as to monitor the transfers.

#### **Parameters**

| in | subd  | Subdevice descriptor structure   |
|----|-------|----------------------------------|
| in | count | The data count to be transferred |

#### Returns

0 on success, otherwise negative error code.

References A4L\_SUBD\_BUSY\_NR, a4l\_subdevice::buf, and a4l\_subdevice::status.

6.50.2.11 int a4l\_buf\_prepare\_put ( struct a4l\_subdevice \* subd, unsigned long count )

Set the count of data which is to be sent to the buffer at the next DMA shot.

The functions a4l\_buf\_prepare\_(abs)put(), a4l\_buf\_commit\_(abs)put(), a4l\_buf\_prepare\_(abs)get() and a4l\_buf\_commit\_(abs)get() have been made available for DMA transfers. In such situations, no data copy is needed between the Analogy buffer and the device as some DMA controller is in charge of performing data shots from / to the Analogy buffer. However, some pointers still have to be updated so as to monitor the transfers.

### Parameters

| in | subd  | Subdevice descriptor structure   |
|----|-------|----------------------------------|
| in | count | The data count to be transferred |

### Returns

0 on success, otherwise negative error code.

References A4L\_SUBD\_BUSY\_NR, a4l\_subdevice::buf, and a4l\_subdevice::status.

6.50.2.12 int a4l buf put ( struct a4l subdevice \* subd, void \* bufdata, unsigned long count )

Copy some data from the device driver to the buffer.

The function a4l\_buf\_put() must copy data coming from some acquisition device to the Analogy buffer. This ring-buffer is an intermediate area between the device driver and the user-space program, which is supposed to recover the acquired data.

#### **Parameters**

| in | subd    | Subdevice descriptor structure                  |
|----|---------|---|
| in | bufdata | The data buffer to copy into the Analogy buffer |
| in | count   | The amount of data to copy                      |

#### Returns

0 on success, otherwise negative error code.

References A4L\_SUBD\_BUSY\_NR, a4l\_subdevice::buf, and a4l\_subdevice::status.

6.50.2.13 int a4l\_get\_chan ( struct a4l\_subdevice \* subd )

Get the channel index according to its type.

#### **Parameters**

| in | subd    | Subdevice descriptor structure |
|----|---------|--------------------------------|
|    | 0 00 0. |                                |

### Returns

the channel index.

References A4L\_CHAN\_GLOBAL\_CHANDESC, a4l\_get\_cmd(), a4l\_subdevice::buf, a4l\_subdevice::chan\_desc, a4l\_cmd\_desc::chan\_descs, a4l\_channels\_desc::chans, a4l\_channels\_desc::mode, a4l\_channel::nb\_bits, and a4l\_cmd\_desc::nb\_chan.

6.50.2.14 struct a4l\_cmd\_desc\* a4l\_get\_cmd ( struct a4l\_subdevice \* subd )

Get the current Analogy command descriptor.

# Parameters

| in | subd | Subdevice descriptor structure |
|----|------|--------------------------------|

### Returns

the command descriptor.

Referenced by a4l\_get\_chan().

# 6.51 Interrupt management services

Collaboration diagram for Interrupt management services:



### **Functions**

- unsigned int a4l\_get\_irq (struct a4l\_device \*dev)
   Get the interrupt number in use for a specific device.
- int a4l\_request\_irq (struct a4l\_device \*dev, unsigned int irq, a4l\_irq\_hdlr\_t handler, unsigned long flags, void \*cookie)

Register an interrupt handler for a specific device.

• int a4l\_free\_irq (struct a4l\_device \*dev, unsigned int irq)

Release an interrupt handler for a specific device.

# 6.51.1 Detailed Description

### 6.51.2 Function Documentation

6.51.2.1 int a4l\_free\_irq ( struct a4l\_device \* dev, unsigned int irq )

Release an interrupt handler for a specific device.

#### **Parameters**

| in | dev | Device descriptor structure      |
|----|-----|----------------------------------|
| in | irq | Line number of the addressed IRQ |

### Returns

0 on success, otherwise negative error code.

6.51.2.2 unsigned int a4l\_get\_irq ( struct a4l\_device \* dev )

Get the interrupt number in use for a specific device.

#### **Parameters**

| in dev Device descriptor structure | ın |  | dev |  |
|------------------------------------|----|--|-----|--|
|------------------------------------|----|--|-----|--|

#### Returns

the line number used or A4L\_IRQ\_UNUSED if no interrupt is registered.

6.51.2.3 int a4l\_request\_irq ( struct a4l\_device \* dev, unsigned int irq, a4l\_irq\_hdlr\_t handler, unsigned long flags, void \* cookie )

Register an interrupt handler for a specific device.

### Parameters

| in | dev     | Device descriptor structure  |
|----|---------|--|
| in | irq     | Line number of the addressed IRQ   |
| in | handler | Interrupt handler  |
| in | flags   | Registration flags:  RTDM_IRQTYPE_SHARED: enable IRQ-sharing with other drivers (Warning: real-time drivers and non-real-time drivers cannot share an interrupt line).  RTDM_IRQTYPE_EDGE: mark IRQ as edge-triggered (Warning: this flag is meaningless in RTDM-less context).  A4L_IRQ_DISABLED: keep IRQ disabled when calling the action |
|    |         | handler (Warning: this flag is ignored in RTDM-enabled configuration).   |
| in | cookie  | Pointer to be passed to the interrupt handler on invocation  |


# Returns

0 on success, otherwise negative error code.

References rtdm\_lock\_put\_irqrestore().

# 6.52 Misc services

Collaboration diagram for Misc services:



# **Functions**

- unsigned long long a4l\_get\_time (void)

  Get the absolute time in nanoseconds.
- 6.52.1 Detailed Description
- 6.52.2 Function Documentation
- 6.52.2.1 unsigned long long a4l\_get\_time (void)

Get the absolute time in nanoseconds.

Returns

the absolute time expressed in nanoseconds

References rtdm\_clock\_read().

6.53 Clocks and timers 249

### 6.53 Clocks and timers

Cobalt/POSIX clock and timer services.

Collaboration diagram for Clocks and timers:



### **Functions**

int clock\_getres (clockid\_t clock\_id, struct timespec \*tp)

Get the resolution of the specified clock.

int clock\_gettime (clockid\_t clock\_id, struct timespec \*tp)

Read the specified clock.

• int clock settime (clockid t clock id, const struct timespec \*tp)

Set the specified clock.

- int clock\_nanosleep (clockid\_t clock\_id, int flags, const struct timespec \*rqtp, struct timespec \*rmtp)

  Sleep some amount of time.
- int nanosleep (const struct timespec \*rqtp, struct timespec \*rmtp)

Sleep some amount of time.

 int timer\_create (clockid\_t clockid, const struct sigevent \*\_\_restrict\_\_ evp, timer\_t \*\_\_restrict\_\_ timerid)

Create a timer.

• int timer\_delete (timer\_t timerid)

Delete a timer object.

int timer\_settime (timer\_t timerid, int flags, const struct itimerspec \*\_\_restrict\_\_ value, struct itimerspec \*\_\_restrict\_\_ ovalue)

Start or stop a timer.

• int timer\_gettime (timer\_t timerid, struct itimerspec \*value)

Get timer next expiration date and reload value.

int timer\_getoverrun (timer\_t timerid)

Get expiration overruns count since the most recent timer expiration signal delivery.

### 6.53.1 Detailed Description

Cobalt/POSIX clock and timer services. Cobalt supports three built-in clocks:

CLOCK\_REALTIME maps to the nucleus system clock, keeping time as the amount of time since the Epoch, with a resolution of one nanosecond.

CLOCK\_MONOTONIC maps to an architecture-dependent high resolution counter, so is suitable for measuring short time intervals. However, when used for sleeping (with clock\_nanosleep()), the CLOCK\_MONOTONIC clock has a resolution of one nanosecond, like the CLOCK\_REALTIME clock.

CLOCK\_MONOTONIC\_RAW is Linux-specific, and provides monotonic time values from a hardware timer which is not adjusted by NTP. This is strictly equivalent to CLOCK\_MONOTONIC with Xenomai, which is not NTP adjusted either.

In addition, external clocks can be dynamically registered using the cobalt\_clock\_register() service. These clocks are fully managed by Cobalt extension code, which should advertise each incoming tick by calling xnclock\_tick() for the relevant clock, from an interrupt context.

Timer objects may be created with the timer\_create() service using any of the built-in or external clocks. The resolution of these timers is clock-specific. However, built-in clocks all have nanosecond resolution, as specified for clock nanosleep().

See Also

Specification.

#### 6.53.2 Function Documentation

6.53.2.1 int clock getres ( clockid t clock id, struct timespec \* tp )

Get the resolution of the specified clock.

This service returns, at the address res, if it is not NULL, the resolution of the clock clock id.

For both CLOCK\_REALTIME and CLOCK\_MONOTONIC, this resolution is the duration of one system clock tick. No other clock is supported.

#### **Parameters**

|    | clock identifier, either CLOCK_REALTIME or CLOCK_MONOTONIC;                        |
|----|--|
| tp | the address where the resolution of the specified clock will be stored on success. |

#### Return values

| 0  | on success;                           |
|----|---------------------------------------|
| -1 | with errno set if:                    |
|    | • EINVAL, <i>clock_id</i> is invalid; |

See Also

Specification.

6.53.2.2 int clock gettime ( clockid t clock id, struct timespec \* tp )

Read the specified clock.

This service returns, at the address tp the current value of the clock clock\_id. If clock\_id is:

- CLOCK\_REALTIME, the clock value represents the amount of time since the Epoch, with a precision of one system clock tick;
- CLOCK\_MONOTONIC or CLOCK\_MONOTONIC\_RAW, the clock value is given by an architecture-dependent high resolution counter, with a precision independent from the system clock tick duration.
- CLOCK\_HOST\_REALTIME, the clock value as seen by the host, typically Linux. Resolution and precision depend on the host, but it is guaranteed that both, host and Xenomai, see the same information.

6.53 Clocks and timers 251

#### **Parameters**

| clock_id | clock identifier, either CLOCK_REALTIME, CLOCK_MONOTONIC, or CLOCK_H- |  |
|----------|---|--|
|          | OST_REALTIME;   |  |
| tp       | the address where the value of the specified clock will be stored.    |  |

#### Return values

| 0  | on success;                    |
|----|--------------------------------|
| -1 | with errno set if:             |
|    | • EINVAL, clock_id is invalid. |

#### See Also

Specification.

6.53.2.3 int clock\_nanosleep ( clockid\_t clock\_id, int flags, const struct timespec \* rqtp, struct timespec \* rmtp )

Sleep some amount of time.

This service suspends the calling thread until the wakeup time specified by rqtp, or a signal is delivered to the caller. If the flag TIMER\_ABSTIME is set in the flags argument, the wakeup time is specified as an absolute value of the clock  $clock\_id$ . If the flag TIMER\_ABSTIME is not set, the wakeup time is specified as a time interval.

If this service is interrupted by a signal, the flag TIMER\_ABSTIME is not set, and *rmtp* is not *NULL*, the time remaining until the specified wakeup time is returned at the address *rmtp*.

The resolution of this service is one system clock tick.

#### **Parameters**

| clock_id | clock identifier, either CLOCK_REALTIME or CLOCK_MONOTONIC.   |
|----------|---|
| flags    | one of:   |
|          | <ul> <li>0 meaning that the wakeup time rqtp is a time interval;</li> </ul>                                     |
|          | <ul> <li>TIMER_ABSTIME, meaning that the wakeup time is an absolute value of the<br/>clock clock_id.</li> </ul> |
| rqtp     | address of the wakeup time.   |
| rmtp     | address where the remaining time before wakeup will be stored if the service is interrupted by a signal.        |

#### Returns

0 on success;

an error number if:

- EPERM, the caller context is invalid;
- ENOTSUP, the specified clock is unsupported;
- EINVAL, the specified wakeup time is invalid;
- EINTR, this service was interrupted by a signal.

See Also

Specification.

Referenced by nanosleep().

6.53.2.4 int clock\_settime ( clockid\_t clock\_id, const struct timespec \* tp )

Set the specified clock.

This allow setting the CLOCK\_REALTIME clock.

#### **Parameters**

| clock_id | the id of the clock to be set, only CLOCK_REALTIME is supported. |
|----------|--|
| tp       | the address of a struct timespec specifying the new date.        |

#### Return values

| 0  | on success;  |
|----|--|
| -1 | with errno set if:   |
|    | EINVAL, clock_id is not CLOCK_REALTIME;                          |
|    | <ul> <li>EINVAL, the date specified by tp is invalid.</li> </ul> |

### See Also

Specification.

6.53.2.5 int nanosleep ( const struct timespec \* rqtp, struct timespec \* rmtp )

Sleep some amount of time.

This service suspends the calling thread until the wakeup time specified by *rqtp*, or a signal is delivered. The wakeup time is specified as a time interval.

If this service is interrupted by a signal and *rmtp* is not *NULL*, the time remaining until the specified wakeup time is returned at the address *rmtp*.

The resolution of this service is one system clock tick.

### Parameters

| rqtp | address of the wakeup time.   |
|------|---|
| rmtp | address where the remaining time before wakeup will be stored if the service is |
|      | interrupted by a signal.  |

### Return values

| 0  | on success;  |
|----|--|
| -1 | with errno set if:   |
|    | EPERM, the caller context is invalid;                                |
|    | <ul> <li>EINVAL, the specified wakeup time is invalid;</li> </ul>    |
|    | <ul> <li>EINTR, this service was interrupted by a signal.</li> </ul> |
|    |  |

### See Also

Specification.

References clock\_nanosleep().

6.53 Clocks and timers 253

```
6.53.2.6 int timer_create ( clockid_t clockid, const struct sigevent *__restrict__ evp, timer_t *__restrict__ timerid )
```

### Create a timer.

This service creates a timer based on the clock *clockid*.

If *evp* is not *NULL*, it describes the notification mechanism used on timer expiration. Only thread-directed notification is supported (evp->sigev notify set to *SIGEV THREAD ID*).

If evp is NULL, the current Cobalt thread will receive the notifications with signal SIGALRM.

The recipient thread is delivered notifications when it calls any of the sigwait(), sigtimedwait() or sigwait-info() services.

If this service succeeds, an identifier for the created timer is returned at the address *timerid*. The timer is unarmed until started with the timer\_settime() service.

#### **Parameters**

| clockid | clock used as a timing base;  |
|---------|---|
| evp     | description of the asynchronous notification to occur when the timer expires; |
| timerid | address where the identifier of the created timer will be stored on success.  |

#### Return values

| 0  | on success;  |
|----|--|
| -1 | with errno set if:   |
|    | EINVAL, the clock <i>clockid</i> is invalid;   |
|    | <ul> <li>EINVAL, the member sigev_notify of the sigevent structure at the<br/>address evp is not SIGEV_THREAD_ID;</li> </ul> |
|    | <ul> <li>EINVAL, the member sigev_signo of the sigevent structure is an invalid signal number;</li> </ul>                    |
|    | <ul> <li>EAGAIN, the maximum number of timers was exceeded, recompile<br/>with a larger value.</li> </ul>                    |

### See Also

Specification.

Referenced by pthread\_make\_periodic\_np().

6.53.2.7 int timer\_delete ( timer\_t timerid )

Delete a timer object.

This service deletes the timer timerid.

**Parameters** 

| timerid       | identifier of the timer to be removed; |
|---------------|--|
| Return values |  |

on success;

| -1 | with errno set if:   |
|----|--|
|    | • EINVAL, timerid is invalid;                                      |
|    | • EPERM, the timer timerid does not belong to the current process. |
|    |  |

#### See Also

Specification.

6.53.2.8 int timer\_getoverrun ( timer\_t timerid )

Get expiration overruns count since the most recent timer expiration signal delivery.

This service returns *timerid* expiration overruns count since the most recent timer expiration signal delivery. If this count is more than *DELAYTIMER MAX* expirations, *DELAYTIMER MAX* is returned.

#### **Parameters**

| timerid | Timer identifier. |
|---------|-------------------|
| •       |                   |

#### Returns

the overruns count on success;

- -1 with errno set if:
  - EINVAL, timerid is invalid;
  - EPERM, the timer timerid does not belong to the current process.

#### See Also

Specification.

6.53.2.9 int timer\_gettime ( timer\_t timerid, struct itimerspec \* value )

Get timer next expiration date and reload value.

This service stores, at the address *value*, the expiration date (member *it\_value*) and reload value (member *it\_interval*) of the timer *timerid*. The values are returned as time intervals, and as multiples of the system clock tick duration (see note in section Clocks and timers services for details on the duration of the system clock tick). If the timer was not started, the returned members *it\_value* and *it\_interval* of *value* are zero.

### **Parameters**

| timerid | timer identifier;   |
|---------|---|
| value   | address where the timer expiration date and reload value are stored on success. |

#### Return values

| 0  | on success;   |
|----|---|
| -1 | with errno set if:  |
|    | <ul> <li>EINVAL, timerid is invalid. For timerid to be valid, it must belong to<br/>the current process.</li> </ul> |

### See Also

Specification.

6.53 Clocks and timers 255

6.53.2.10 timer\_settime ( timer\_t timerid, int flags, const struct itimerspec \*\_\_restrict\_\_ value, struct itimerspec \*\_\_restrict\_\_ ovalue )

#### Start or stop a timer.

This service sets a timer expiration date and reload value of the timer *timerid*. If *ovalue* is not *NULL*, the current expiration date and reload value are stored at the address *ovalue* as with timer\_gettime().

If the member *it\_value* of the **itimerspec** structure at *value* is zero, the timer is stopped, otherwise the timer is started. If the member *it\_interval* is not zero, the timer is periodic. The current thread must be a Cobalt thread (created with pthread\_create()) and will be notified via signal of timer expirations. Note that these notifications will cause user-space threads to switch to secondary mode.

When starting the timer, if *flags* is TIMER\_ABSTIME, the expiration value is interpreted as an absolute date of the clock passed to the timer\_create() service. Otherwise, the expiration value is interpreted as a time interval.

Expiration date and reload value are rounded to an integer count of nanoseconds.

#### **Parameters**

| timerid | identifier of the timer to be started or stopped;                               |
|---------|---|
| flags   | one of 0 or TIMER_ABSTIME;  |
| value   | address where the specified timer expiration date and reload value are read;    |
| ovalue  | address where the specified timer previous expiration date and reload value are |
|         | stored if not NULL.   |

#### Return values

| 0  | on success;   |
|----|---|
| -1 | with errno set if:  |
|    | <ul> <li>EINVAL, the specified timer identifier, expiration date or reload<br/>value is invalid. For timerid to be valid, it must belong to the cur-<br/>rent process.</li> </ul> |

### See Also

Specification.

Referenced by pthread\_make\_periodic\_np().

# 6.54 Condition variables

Cobalt/POSIX condition variable services.

Collaboration diagram for Condition variables:



#### **Functions**

int pthread\_cond\_init (pthread\_cond\_t \*cond, const pthread\_condattr\_t \*attr)
 Initialize a condition variable.

• int pthread\_cond\_destroy (pthread\_cond\_t \*cond)

Destroy a condition variable.

int pthread\_cond\_wait (pthread\_cond\_t \*cond, pthread\_mutex\_t \*mutex)

Wait on a condition variable.

 int pthread\_cond\_timedwait (pthread\_cond\_t \*cond, pthread\_mutex\_t \*mutex, const struct timespec \*abstime)

Wait a bounded time on a condition variable.

• int pthread\_cond\_signal (pthread\_cond\_t \*cond)

Signal a condition variable.

int pthread\_cond\_broadcast (pthread\_cond\_t \*cond)

Broadcast a condition variable.

int pthread\_condattr\_init (pthread\_condattr\_t \*attr)

Initialize a condition variable attributes object.

int pthread\_condattr\_destroy (pthread\_condattr\_t \*attr)

Destroy a condition variable attributes object.

int pthread\_condattr\_getclock (const pthread\_condattr\_t \*attr, clockid\_t \*clk\_id)

Get the clock selection attribute from a condition variable attributes object.

int pthread\_condattr\_setclock (pthread\_condattr\_t \*attr, clockid\_t clk\_id)

Set the clock selection attribute of a condition variable attributes object.

int pthread\_condattr\_getpshared (const pthread\_condattr\_t \*attr, int \*pshared)

Get the process-shared attribute from a condition variable attributes object.

• int pthread condattr setpshared (pthread condattr t \*attr, int pshared)

Set the process-shared attribute of a condition variable attributes object.

### 6.54.1 Detailed Description

Cobalt/POSIX condition variable services. A condition variable is a synchronization object that allows threads to suspend execution until some predicate on shared data is satisfied. The basic operations on conditions are: signal the condition (when the predicate becomes true), and wait for the condition, suspending the thread execution until another thread signals the condition.

6.54 Condition variables 257

A condition variable must always be associated with a mutex, to avoid the race condition where a thread prepares to wait on a condition variable and another thread signals the condition just before the first thread actually waits on it.

Before it can be used, a condition variable has to be initialized with <a href="mailto:phito:ntm;">phito:phi

Note that only pthread\_cond\_init() may be used to initialize a condition variable, using the static initializer PTHREAD COND INITIALIZER is not supported.

### 6.54.2 Function Documentation

6.54.2.1 int pthread\_cond\_broadcast ( pthread\_cond\_t \* cond )

Broadcast a condition variable.

This service unblocks all threads blocked on the condition variable cnd.

**Parameters** 

*cond* the condition variable to be signalled.

#### Returns

0 on succes.

an error number if:

- EINVAL, the condition variable is invalid;
- EPERM, the condition variable is not process-shared and does not belong to the current process.

See Also

Specification.

Referenced by rt\_cond\_broadcast().

6.54.2.2 int pthread cond destroy ( pthread cond t \* cond )

Destroy a condition variable.

This service destroys the condition variable *cond*, if no thread is currently blocked on it. The condition variable becomes invalid for all condition variable services (they all return the EINVAL error) except pthread cond init().

**Parameters** 

*cond* | the condition variable to be destroyed.

## Returns

0 on succes,

an error number if:

- EINVAL, the condition variable cond is invalid;
- EPERM, the condition variable is not process-shared and does not belong to the current process;
- EBUSY, some thread is currently using the condition variable.

See Also

Specification.

Referenced by rt cond create(), and rt cond delete().

6.54.2.3 int pthread cond init ( pthread cond t \* cond, const pthread condattr t \* attr )

Initialize a condition variable.

This service initializes the condition variable *cond*, using the condition variable attributes object *attr*. If *attr* is *NULL* or this service is called from user-space, default attributes are used (see <a href="pthread\_condattr-init(">pthread\_condattr-init()</a>).

#### **Parameters**

| cond | the condition variable to be initialized; |
|------|---|
| attr | the condition variable attributes object. |

## Returns

0 on succes,

an error number if:

- EINVAL, the condition variable attributes object attr is invalid or uninitialized;
- EBUSY, the condition variable cond was already initialized;
- ENOMEM, insufficient memory exists in the system heap to initialize the condition variable, increase CONFIG\_XENO\_OPT\_SYS\_HEAPSZ.

See Also

Specification.

References pthread condattr getclock(), and pthread condattr getpshared().

Referenced by rt\_cond\_create().

6.54.2.4 int pthread\_cond\_signal ( pthread\_cond\_t \* cond )

Signal a condition variable.

This service unblocks one thread blocked on the condition variable cnd.

If more than one thread is blocked on the specified condition variable, the highest priority thread is unblocked.

**Parameters** 

| cond the condition variable to be signalled. |
|--|
|--|

## Returns

0 on succes,

an error number if:

- EINVAL, the condition variable is invalid;
- EPERM, the condition variable is not process-shared and does not belong to the current process.

See Also

Specification.

Referenced by rt\_cond\_signal().

6.54 Condition variables 259

6.54.2.5 int pthread\_cond\_timedwait ( pthread\_cond\_t \* cond, pthread\_mutex\_t \* mutex, const struct timespec \* abstime )

Wait a bounded time on a condition variable.

This service is equivalent to <a href="mailto:pthread\_cond\_wait(">pthread\_cond\_wait()</a>, except that the calling thread remains blocked on the condition variable *cnd* only until the timeout specified by *abstime* expires.

The timeout *abstime* is expressed as an absolute value of the *clock* attribute passed to pthread\_cond\_init(). By default, *CLOCK\_REALTIME* is used.

### **Parameters**

| cond    | the condition variable to wait for;   |
|---------|---|
| mutex   | the mutex associated with <i>cnd</i> ;  |
| abstime | the timeout, expressed as an absolute value of the clock attribute passed to pthread- |
|         | _cond_init().   |

## Returns

0 on success.

an error number if:

- EPERM, the caller context is invalid;
- EPERM, the specified condition variable is not process-shared and does not belong to the current process;
- EINVAL, the specified condition variable, mutex or timeout is invalid;
- EINVAL, another thread is currently blocked on *cnd* using another mutex than *mx*;
- EPERM, the specified mutex is not owned by the caller;
- ETIMEDOUT, the specified timeout expired.

## See Also

Specification.

Referenced by rt\_cond\_wait\_timed().

6.54.2.6 int pthread cond wait ( pthread cond t \* cond, pthread mutex t \* mutex )

Wait on a condition variable.

This service atomically unlocks the mutex mx, and block the calling thread until the condition variable cnd is signalled using pthread\_cond\_signal() or pthread\_cond\_broadcast(). When the condition is signaled, this service re-acquire the mutex before returning.

Spurious wakeups occur if a signal is delivered to the blocked thread, so, an application should not assume that the condition changed upon successful return from this service.

Even if the mutex mx is recursive and its recursion count is greater than one on entry, it is unlocked before blocking the caller, and the recursion count is restored once the mutex is re-acquired by this service before returning.

Once a thread is blocked on a condition variable, a dynamic binding is formed between the condition vairable cnd and the mutex mx; if another thread calls this service specifying cnd as a condition variable but another mutex than mx, this service returns immediately with the EINVAL status.

This service is a cancellation point for Xenomai POSIX skin threads (created with the <a href="https://pubm.create">pthread\_create()</a>) service). When such a thread is cancelled while blocked in a call to this service, the mutex mx is re-acquired before the cancellation cleanup handlers are called.

## **Parameters**

| cond  | the condition variable to wait for;    |
|-------|--|
| mutex | the mutex associated with <i>cnd</i> . |

## Returns

0 on success,

an error number if:

- EPERM, the caller context is invalid;
- EINVAL, the specified condition variable or mutex is invalid;
- EPERM, the specified condition variable is not process-shared and does not belong to the current process;
- EINVAL, another thread is currently blocked on *cnd* using another mutex than *mx*;
- EPERM, the specified mutex is not owned by the caller.

#### See Also

Specification.

Referenced by rt\_cond\_wait\_timed().

6.54.2.7 int pthread\_condattr\_destroy ( pthread\_condattr\_t \* attr )

Destroy a condition variable attributes object.

This service destroys the condition variable attributes object *attr*. The object becomes invalid for all condition variable services (they all return EINVAL) except <a href="pthread\_condattr\_init">pthread\_condattr\_init</a>().

## Parameters

| attr | the initialized mutex attributes object to be destroyed. |
|------|--|

## Returns

0 on success;

an error number if:

• EINVAL, the mutex attributes object attr is invalid.

### See Also

Specification.

Referenced by rt cond create().

6.54.2.8 int pthread\_condattr\_getclock ( const pthread\_condattr\_t \* attr, clockid\_t \* clk\_id )

Get the clock selection attribute from a condition variable attributes object.

This service stores, at the address *clk\_id*, the value of the *clock* attribute in the condition variable attributes object *attr*.

See <a href="pthread\_cond\_timedwait">pthread\_cond\_timedwait</a>() documentation for a description of the effect of this attribute on a condition variable. The clock ID returned is <a href="clock\_REALTIME">CLOCK\_REALTIME</a> or <a href="clock\_MONOTONIC">CLOCK\_MONOTONIC</a>.

6.54 Condition variables 261

#### **Parameters**

| attr   | an initialized condition variable attributes object,                      |
|--------|---|
| clk_id | address where the <i>clock</i> attribute value will be stored on success. |

#### Returns

0 on success, an error number if:

• EINVAL, the attribute object attr is invalid.

See Also

Specification.

Referenced by pthread cond init().

6.54.2.9 int pthread condattr getpshared ( const pthread condattr t \* attr, int \* pshared )

Get the process-shared attribute from a condition variable attributes object.

This service stores, at the address *pshared*, the value of the *pshared* attribute in the condition variable attributes object *attr*.

The *pshared* attribute may only be one of *PTHREAD\_PROCESS\_PRIVATE* or *PTHREAD\_PROCESS\_SHARED*. See <a href="pthread\_condattr\_setpshared">pthread\_condattr\_setpshared</a>() for the meaning of these two constants.

#### **Parameters**

| attr    | an initialized condition variable attributes object.                               |
|---------|--|
| pshared | address where the value of the <i>pshared</i> attribute will be stored on success. |

## Returns

0 on success,

an error number if:

- EINVAL, the *pshared* address is invalid;
- EINVAL, the condition variable attributes object attr is invalid.

### See Also

Specification.

Referenced by pthread\_cond\_init().

6.54.2.10 int pthread\_condattr\_init ( pthread\_condattr\_t \* attr )

Initialize a condition variable attributes object.

This services initializes the condition variable attributes object *attr* with default values for all attributes. Default value are:

- for the clock attribute, CLOCK\_REALTIME;
- for the pshared attribute PTHREAD\_PROCESS\_PRIVATE.

If this service is called specifying a condition variable attributes object that was already initialized, the attributes object is reinitialized.

Module Documentation

## **Parameters**

262

attr | the condition variable attributes object to be initialized.

#### Returns

0 on success;

an error number if:

• ENOMEM, the condition variable attribute object pointer attr is NULL.

### See Also

Specification.

Referenced by rt\_cond\_create().

6.54.2.11 int pthread\_condattr\_setclock ( pthread\_condattr\_t \* attr, clockid\_t clk\_id )

Set the clock selection attribute of a condition variable attributes object.

This service set the *clock* attribute of the condition variable attributes object attr.

See <a href="pthread\_cond\_timedwait">pthread\_cond\_timedwait</a>() documentation for a description of the effect of this attribute on a condition variable.

### **Parameters**

| attr   | an initialized condition variable attributes object,  |
|--------|---|
| clk_id | value of the <i>clock</i> attribute, may be <i>CLOCK_REALTIME</i> or <i>CLOCK_MONOTONIC</i> . |

#### Returns

0 on success,

an error number if:

- EINVAL, the condition variable attributes object attr is invalid;
- EINVAL, the value of <code>clk\_id</code> is invalid for the <code>clock</code> attribute.

## See Also

Specification.

Referenced by rt\_cond\_create().

 $6.54.2.12 \quad int\ pthread\_condattr\_setpshared\ (\ pthread\_condattr\_t\ *\ attr,\ int\ pshared\ )$ 

Set the process-shared attribute of a condition variable attributes object.

This service set the *pshared* attribute of the condition variable attributes object attr.

## **Parameters**

| attr    | an initialized condition variable attributes object.   |
|---------|--|
| pshared | value of the <i>pshared</i> attribute, may be one of:  |
|         | <ul> <li>PTHREAD_PROCESS_PRIVATE, meaning that a condition variable created<br/>with the attributes object attr will only be accessible by threads within the same<br/>process as the thread that initialized the condition variable;</li> </ul> |
|         | <ul> <li>PTHREAD_PROCESS_SHARED, meaning that a condition variable created<br/>with the attributes object attr will be accessible by any thread that has access<br/>to the memory where the condition variable is allocated.</li> </ul>          |

6.54 Condition variables 263

# Returns

0 on success,

an error status if:

- EINVAL, the condition variable attributes object attr is invalid;
- EINVAL, the value of pshared is invalid.

## See Also

Specification.


Referenced by rt\_cond\_create().

264 Module Documentation

# 6.55 POSIX interface

The Cobalt/POSIX interface is an implementation of a subset of the Single Unix specification over the Cobalt core.

Collaboration diagram for POSIX interface:

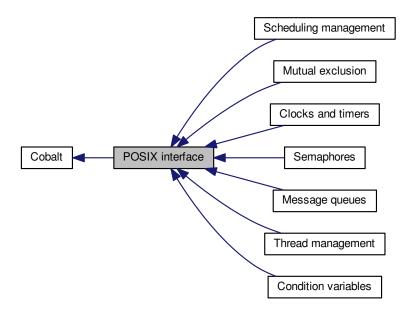

## Modules

· Clocks and timers

Cobalt/POSIX clock and timer services.

Condition variables

Cobalt/POSIX condition variable services.

Message queues

Cobalt/POSIX message queue services.

Mutual exclusion

Cobalt/POSIX mutual exclusion services.

Semaphores

Cobalt/POSIX semaphore services.

Thread management

Cobalt/POSIX thread management services.

• Scheduling management

Cobalt/POSIX scheduling management services.

# 6.55.1 Detailed Description

The Cobalt/POSIX interface is an implementation of a subset of the <u>Single Unix specification</u> over the Cobalt core.

6.56 Message queues 265

# 6.56 Message queues

Cobalt/POSIX message queue services.

Collaboration diagram for Message queues:



### **Functions**

• mqd\_t mq\_open (const char \*name, int oflags,...)

Open a message queue.

• int mq\_close (mqd\_t mqd)

Close a message queue.

• int mq\_unlink (const char \*name)

Unlink a message queue.

int mq\_getattr (mqd\_t mqd, struct mq\_attr \*attr)

Get message queue attributes.

int mq\_setattr (mqd\_t mqd, const struct mq\_attr \*\_\_restrict\_\_ attr, struct mq\_attr \*\_\_restrict\_\_ oattr)

Set message queue attributes.

• int mq send (mqd t q, const char \*buffer, size t len, unsigned prio)

Send a message to a message queue.

 int mq\_timedsend (mqd\_t q, const char \*buffer, size\_t len, unsigned prio, const struct timespec \*timeout)

Attempt, during a bounded time, to send a message to a message queue.

ssize\_t mq\_receive (mqd\_t q, char \*buffer, size\_t len, unsigned \*prio)

Receive a message from a message queue.

 ssize\_t mq\_timedreceive (mqd\_t q, char \*\_\_restrict\_\_ buffer, size\_t len, unsigned \*\_\_restrict\_\_ prio, const struct timespec \*\_\_restrict\_\_ timeout)

Attempt, during a bounded time, to receive a message from a message queue.

int mq\_notify (mqd\_t mqd, const struct sigevent \*evp)

Enable notification on message arrival.

## 6.56.1 Detailed Description

Cobalt/POSIX message queue services. A message queue allow exchanging data between real-time threads. For a POSIX message queue, maximum message length and maximum number of messages are fixed when it is created with mq\_open().

## 6.56.2 Function Documentation

6.56.2.1 int mq\_close ( mqd\_t mqd )

## Close a message queue.

This service closes the message queue descriptor *mqd*. The message queue is destroyed only when all open descriptors are closed, and when unlinked with a call to the mq\_unlink() service.

#### **Parameters**

| mqd | message queue descriptor. |
|-----|---------------------------|

### Return values

| 0  | on success;   |
|----|---|
| -1 | with errno set if:  |
|    | <ul> <li>EBADF, mqd is an invalid message queue descriptor;</li> <li>EPERM, the caller context is invalid.</li> </ul> |

#### See Also

Specification.

6.56.2.2 int mq\_getattr ( mqd\_t mqd, struct mq\_attr \* attr )

Get message queue attributes.

This service stores, at the address attr, the attributes of the messages queue descriptor mqd.

The following attributes are set:

- mq\_flags, flags of the message queue descriptor mqd;
- mq\_maxmsg, maximum number of messages in the message queue;
- mq\_msgsize, maximum message size;
- mq\_curmsgs, number of messages currently in the queue.

## **Parameters**

| mqd  | message queue descriptor;   |
|------|---|
| attr | address where the message queue attributes will be stored on success. |

## Return values

| 0  | on success;                                    |
|----|--|
| -1 | with errno set if:                             |
|    | • EBADF, <i>mqd</i> is not a valid descriptor. |

## See Also

Specification.

6.56.2.3 int mq\_notify ( mqd\_t mqd, const struct sigevent \* evp )

Enable notification on message arrival.

If *evp* is not *NULL* and is the address of a **sigevent** structure with the *sigev\_notify* member set to SI-GEV\_SIGNAL, the current thread will be notified by a signal when a message is sent to the message queue *mqd*, the queue is empty, and no thread is blocked in call to mq\_receive() or mq\_timedreceive(). After the notification, the thread is unregistered.

If evp is NULL or the sigev\_notify member is SIGEV\_NONE, the current thread is unregistered.

Only one thread may be registered at a time.

If the current thread is not a Cobalt thread (created with pthread create()), this service fails.

Note that signals sent to user-space Cobalt threads will cause them to switch to secondary mode.

#### **Parameters**

| mqd | message queue descriptor;                   |
|-----|---|
| evp | pointer to an event notification structure. |

### Return values

| 0  | on success;   |
|----|---|
| -1 | with errno set if:  |
|    | • EINVAL, <i>evp</i> is invalid;  |
|    | <ul> <li>EPERM, the caller context is invalid;</li> </ul>               |
|    | <ul> <li>EBADF, mqd is not a valid message queue descriptor;</li> </ul> |
|    | <ul> <li>EBUSY, another thread is already registered.</li> </ul>        |
|    |   |

## See Also

Specification.

6.56.2.4 mqd\_t mq\_open ( const char \* name, int oflags, ... )

Open a message queue.

This service establishes a connection between the message queue named *name* and the calling context (kernel-space as a whole, or user-space process).

One of the following values should be set in oflags:

- O\_RDONLY, meaning that the returned queue descriptor may only be used for receiving messages;
- O\_WRONLY, meaning that the returned queue descriptor may only be used for sending messages;
- O\_RDWR, meaning that the returned queue descriptor may be used for both sending and receiving messages.

If no message queue named *name* exists, and *oflags* has the *O\_CREAT* bit set, the message queue is created by this function, taking two more arguments:

- a mode argument, of type mode\_t, currently ignored;
- an attr argument, pointer to an **mq\_attr** structure, specifying the attributes of the new message queue.

If oflags has the two bits O\_CREAT and O\_EXCL set and the message queue alread exists, this service fails

If the O\_NONBLOCK bit is set in *oflags*, the mq\_send(), mq\_receive(), mq\_timedsend() and mq\_timedreceive() services return -1 with *errno* set to EAGAIN instead of blocking their caller.

The following arguments of the **mq\_attr** structure at the address *attr* are used when creating a message queue:

- mq\_maxmsg is the maximum number of messages in the queue (128 by default);
- mq msgsize is the maximum size of each message (128 by default).

*name* may be any arbitrary string, in which slashes have no particular meaning. However, for portability, using a name which starts with a slash and contains no other slash is recommended.

#### **Parameters**

| name   | name of the message queue to open; |
|--------|------------------------------------|
| oflags | flags.                             |

#### Returns

a message queue descriptor on success;

- -1 with errno set if:
  - ENAMETOOLONG, the length of the *name* argument exceeds 64 characters;
  - EEXIST, the bits O\_CREAT and O\_EXCL were set in *oflags* and the message queue already exists;
  - ENOENT, the bit O\_CREAT is not set in oflags and the message queue does not exist;
  - ENOSPC, allocation of system memory failed, or insufficient memory exists in the system heap to create the queue, try increasing CONFIG\_XENO\_OPT\_SYS\_HEAPSZ;
  - EPERM, attempting to create a message queue from an invalid context;
  - EINVAL, the attr argument is invalid;
  - EMFILE, too many descriptors are currently open.

#### See Also

Specification.

6.56.2.5 ssize t mg receive ( mgd t g, char \* buffer, size t len, unsigned \* prio )

Receive a message from a message queue.

If the message queue *fd* is not empty and if *len* is greater than the *mq\_msgsize* of the message queue, this service copies, at the address *buffer*, the queued message with the highest priority.

If the queue is empty and the flag *O\_NONBLOCK* is not set for the descriptor *fd*, the calling thread is suspended until some message is sent to the queue. If the queue is empty and the flag *O\_NONBLOCK* is set for the descriptor *fd*, this service returns immediately a value of -1 with *errno* set to EAGAIN.

## **Parameters**

| q | the queue descriptor; |
|---|-----------------------|
|   |                       |

| buffer | the address where the received message will be stored on success;             |
|--------|---|
| len    | buffer length;  |
| prio   | address where the priority of the received message will be stored on success. |

## Returns

the message length, and copy a message at the address buffer on success;

- -1 with no message unqueued and errno set if:
  - EBADF, fd is not a valid descriptor open for reading;
  - EMSGSIZE, the length *len* is lesser than the message queue *mq\_msgsize* attribute;
  - EAGAIN, the queue is empty, and the flag O\_NONBLOCK is set for the descriptor fd;
  - EPERM, the caller context is invalid;
  - EINTR, the service was interrupted by a signal.

### See Also

Specification.

6.56.2.6 int mq\_send ( mqd\_t q, const char \* buffer, size\_t len, unsigned prio )

Send a message to a message queue.

If the message queue *fd* is not full, this service sends the message of length *len* pointed to by the argument *buffer*, with priority *prio*. A message with greater priority is inserted in the queue before a message with lower priority.

If the message queue is full and the flag  $O\_NONBLOCK$  is not set, the calling thread is suspended until the queue is not full. If the message queue is full and the flag  $O\_NONBLOCK$  is set, the message is not sent and the service returns immediately a value of -1 with errno set to EAGAIN.

### **Parameters**

| q      | message queue descriptor;          |
|--------|------------------------------------|
| buffer | pointer to the message to be sent; |
| len    | length of the message;             |
| prio   | priority of the message.           |

## Returns

0 and send a message on success;

- -1 with no message sent and errno set if:
  - EBADF, fd is not a valid message queue descriptor open for writing;
  - EMSGSIZE, the message length *len* exceeds the *mq\_msgsize* attribute of the message queue;
  - EAGAIN, the flag O NONBLOCK is set for the descriptor fd and the message queue is full;
  - EPERM, the caller context is invalid;
  - EINTR, the service was interrupted by a signal.

## See Also

Specification.

6.56.2.7 int mq\_setattr ( mqd\_t mqd, const struct mq\_attr \*\_\_restrict\_\_ attr, struct mq\_attr \*\_\_restrict\_\_ oattr )

Set message queue attributes.

This service sets the flags of the *mqd* descriptor to the value of the member *mq\_flags* of the **mq\_attr** structure pointed to by *attr*.

The previous value of the message queue attributes are stored at the address oattr if it is not NULL.

Only setting or clearing the O\_NONBLOCK flag has an effect.

#### **Parameters**

| mqd   | message queue descriptor;  |
|-------|--|
| attr  | pointer to new attributes (only <i>mq_flags</i> is used);                      |
| oattr | if not NULL, address where previous message queue attributes will be stored on |
|       | success.   |

### Return values

| 0  | on success;  |
|----|--|
| -1 | with errno set if:   |
|    | • EBADF, <i>mqd</i> is not a valid message queue descriptor. |

#### See Also

Specification.

Attempt, during a bounded time, to receive a message from a message queue.

This service is equivalent to mq\_receive(), except that if the flag *O\_NONBLOCK* is not set for the descriptor *fd* and the message queue is empty, the calling thread is only suspended until the timeout *abs timeout* expires.

### **Parameters**

| q       | the queue descriptor;   |
|---------|---|
| buffer  | the address where the received message will be stored on success;             |
| len     | buffer length;  |
| prio    | address where the priority of the received message will be stored on success. |
| timeout | the timeout, expressed as an absolute value of the CLOCK_REALTIME clock.      |

## Returns

the message length, and copy a message at the address buffer on success;

- -1 with no message unqueued and errno set if:
  - EBADF, fd is not a valid descriptor open for reading;
  - EMSGSIZE, the length *len* is lesser than the message queue *mq\_msgsize* attribute;
  - EAGAIN, the queue is empty, and the flag O NONBLOCK is set for the descriptor fd;
  - EPERM, the caller context is invalid;
  - EINTR, the service was interrupted by a signal;
  - ETIMEDOUT, the specified timeout expired.

See Also

Specification.

6.56.2.9 int mq\_timedsend ( mqd\_t q, const char \* buffer, size\_t len, unsigned prio, const struct timespec \* timeout )

Attempt, during a bounded time, to send a message to a message queue.

This service is equivalent to mq\_send(), except that if the message queue is full and the flag *O\_NONB-LOCK* is not set for the descriptor *fd*, the calling thread is only suspended until the timeout specified by *abs\_timeout* expires.

### **Parameters**

| q       | message queue descriptor;  |
|---------|--|
| buffer  | pointer to the message to be sent;                                       |
| len     | length of the message;   |
| prio    | priority of the message;   |
| timeout | the timeout, expressed as an absolute value of the CLOCK_REALTIME clock. |

#### Returns

0 and send a message on success;

- -1 with no message sent and errno set if:
  - EBADF, fd is not a valid message queue descriptor open for writing;
  - EMSGSIZE, the message length exceeds the mq\_msgsize attribute of the message queue;
  - EAGAIN, the flag O NONBLOCK is set for the descriptor fd and the message queue is full;
  - EPERM, the caller context is invalid;
  - ETIMEDOUT, the specified timeout expired;
  - EINTR, the service was interrupted by a signal.

See Also

Specification.

6.56.2.10 int mq\_unlink ( const char \* name )

Unlink a message queue.

This service unlinks the message queue named *name*. The message queue is not destroyed until all queue descriptors obtained with the mq\_open() service are closed with the mq\_close() service. However, after a call to this service, the unlinked queue may no longer be reached with the mq\_open() service.

### **Parameters**

| name   name of the message queue to be unlinked. |
|--|
|--|

# Return values

| 0  | on success;  |
|----|--|
| -1 | with errno set if:   |
|    | • EPERM, the caller context is invalid;  |
|    | <ul> <li>ENAMETOOLONG, the length of the name argument exceeds 64 characters;</li> </ul> |
|    | <ul> <li>ENOENT, the message queue does not exist.</li> </ul>                            |

# See Also

Specification.

6.57 Mutual exclusion 273

## 6.57 Mutual exclusion

Cobalt/POSIX mutual exclusion services.

Collaboration diagram for Mutual exclusion:



### **Functions**

- int pthread\_mutex\_init (pthread\_mutex\_t \*mutex, const pthread\_mutexattr\_t \*attr)
   Initialize a mutex.
- int pthread\_mutex\_destroy (pthread\_mutex\_t \*mutex)

Destroy a mutex.

int pthread\_mutex\_lock (pthread\_mutex\_t \*mutex)

Lock a mutex.

• int pthread\_mutex\_timedlock (pthread\_mutex\_t \*mutex, const struct timespec \*to)

Attempt, during a bounded time, to lock a mutex.

int pthread mutex trylock (pthread mutex t \*mutex)

Attempt to lock a mutex.

int pthread\_mutex\_unlock (pthread\_mutex\_t \*mutex)

Unlock a mutex.

• int pthread\_mutexattr\_init (pthread\_mutexattr\_t \*attr)

Initialize a mutex attributes object.

int pthread mutexattr destroy (pthread mutexattr t \*attr)

Destroy a mutex attributes object.

int pthread\_mutexattr\_gettype (const pthread\_mutexattr\_t \*attr, int \*type)

Get the mutex type attribute from a mutex attributes object.

int pthread\_mutexattr\_settype (pthread\_mutexattr\_t \*attr, int type)

Set the mutex type attribute of a mutex attributes object.

• int pthread\_mutexattr\_getprotocol (const pthread\_mutexattr\_t \*attr, int \*proto)

Get the protocol attribute from a mutex attributes object.

• int pthread\_mutexattr\_setprotocol (pthread\_mutexattr\_t \*attr, int proto)

Set the protocol attribute of a mutex attributes object.

int pthread\_mutexattr\_getpshared (const pthread\_mutexattr\_t \*attr, int \*pshared)

Get the process-shared attribute of a mutex attributes object.

int pthread\_mutexattr\_setpshared (pthread\_mutexattr\_t \*attr, int pshared)

Set the process-shared attribute of a mutex attributes object.

274 Module Documentation

# 6.57.1 Detailed Description

Cobalt/POSIX mutual exclusion services. A mutex is a MUTual EXclusion device, and is useful for protecting shared data structures from concurrent modifications, and implementing critical sections and monitors.

A mutex has two possible states: unlocked (not owned by any thread), and locked (owned by one thread). A mutex can never be owned by two different threads simultaneously. A thread attempting to lock a mutex that is already locked by another thread is suspended until the owning thread unlocks the mutex first.

Before it can be used, a mutex has to be initialized with <a href="mailto:pth:new-reference">pth:new-reference</a> mutex, a mutex has to be initialized with <a href="pth:new-reference">pth:new-reference</a> may be passed to this service, allows to select the features of the created mutex, namely its <a href="mailto:type">type</a> (see <a href="pth:new-reference">pth:new-reference</a> mutexattr\_settype()), the <a href="priority protocol">protocol</a> it uses (see <a href="pth:new-reference">pth:new-reference</a> mutexattr\_settype()), and whether it may be shared between several processes (see <a href="pth:new-reference">pth:new-reference</a> mutexattr\_settype()).

By default, Cobalt mutexes are of the normal type, use no priority protocol and may not be shared between several processes.

Note that only pthread\_mutex\_init() may be used to initialize a mutex, using the static initializer PTHRE-AD\_MUTEX\_INITIALIZER is not supported.

# 6.57.2 Function Documentation

6.57.2.1 int pthread mutex destroy (pthread mutex t \* mutex)

### Destroy a mutex.

This service destroys the mutex mx, if it is unlocked and not referenced by any condition variable. The mutex becomes invalid for all mutex services (they all return the EINVAL error) except pthread\_mutex\_init().

**Parameters** 

mutex to be destroyed.

## Returns

0 on success,

an error number if:

- EINVAL, the mutex *mx* is invalid;
- EPERM, the mutex is not process-shared and does not belong to the current process;
- EBUSY, the mutex is locked, or used by a condition variable.

See Also

Specification.

Referenced by rt mutex delete().

6.57.2.2 int pthread\_mutex\_init ( pthread\_mutex\_t \* mutex, const pthread\_mutexattr\_t \* attr )

Initialize a mutex.

This services initializes the mutex mx, using the mutex attributes object attr. If attr is NULL, default attributes are used (see pthread\_mutexattr\_init()).

6.57 Mutual exclusion 275

#### **Parameters**

| mutex | the mutex to be initialized; |
|-------|------------------------------|
| attr  | the mutex attributes object. |

### Returns

0 on success,

an error number if:

- EINVAL, the mutex attributes object attr is invalid or uninitialized;
- EBUSY, the mutex mx was already initialized;
- ENOMEM, insufficient memory exists in the system heap to initialize the mutex, increase CONFIG XENO OPT SYS HEAPSZ.
- EAGAIN, insufficient memory exists in the semaphore heap to initialize the mutex, increase CONFIG\_XENO\_OPT\_GLOBAL\_SEM\_HEAPSZ for a process-shared mutex, or CONFG\_X-ENO\_OPT\_SEM\_HEAPSZ for a process-private mutex.

#### See Also

Specification.

References pthread\_mutexattr\_getprotocol(), pthread\_mutexattr\_getpshared(), and pthread\_mutexattr\_gettype().

Referenced by rt mutex create().

6.57.2.3 int pthread mutex lock ( pthread mutex t \* mutex )

## Lock a mutex.

This service attempts to lock the mutex mx. If the mutex is free, it becomes locked. If it was locked by another thread than the current one, the current thread is suspended until the mutex is unlocked. If it was already locked by the current mutex, the behaviour of this service depends on the mutex type:

- for mutexes of the PTHREAD\_MUTEX\_NORMAL type, this service deadlocks;
- for mutexes of the PTHREAD\_MUTEX\_ERRORCHECK type, this service returns the EDEADLK error number;
- for mutexes of the *PTHREAD\_MUTEX\_RECURSIVE* type, this service increments the lock recursion count and returns 0.

#### **Parameters**

| mutex   the mutex to be locked. |
|---------------------------------|
|---------------------------------|

#### Returns

0 on success

an error number if:

- EPERM, the caller context is invalid;
- EINVAL, the mutex mx is invalid;
- EPERM, the mutex is not process-shared and does not belong to the current process;
- EDEADLK, the mutex is of the *PTHREAD\_MUTEX\_ERRORCHECK* type and was already locked by the current thread;
- EAGAIN, the mutex is of the PTHREAD\_MUTEX\_RECURSIVE type and the maximum number of recursive locks has been exceeded.

See Also

276

Specification.

References XNRELAX, and XNWEAK.

Referenced by rt mutex acquire timed().

6.57.2.4 int pthread\_mutex\_timedlock ( pthread\_mutex\_t \* mutex, const struct timespec \* to )

Attempt, during a bounded time, to lock a mutex.

This service is equivalent to <a href="https://pubm.com/pthread\_mutex\_lock">pthread\_mutex\_lock</a>(), except that if the mutex mx is locked by another thread than the current one, this service only suspends the current thread until the timeout specified by to expires.

## **Parameters**

| mutex | the mutex to be locked;  |
|-------|--|
| to    | the timeout, expressed as an absolute value of the CLOCK_REALTIME clock. |

## Returns

0 on success:

an error number if:

- EPERM, the caller context is invalid;
- EINVAL, the mutex mx is invalid;
- EPERM, the mutex is not process-shared and does not belong to the current process;
- ETIMEDOUT, the mutex could not be locked and the specified timeout expired;
- EDEADLK, the mutex is of the *PTHREAD\_MUTEX\_ERRORCHECK* type and the mutex was already locked by the current thread;
- EAGAIN, the mutex is of the *PTHREAD\_MUTEX\_RECURSIVE* type and the maximum number of recursive locks has been exceeded.

See Also

Specification.

References XNRELAX, and XNWEAK.

Referenced by rt\_mutex\_acquire\_timed().

6.57.2.5 int pthread\_mutex\_trylock ( pthread\_mutex\_t \* mutex )

Attempt to lock a mutex.

This service is equivalent to pthread\_mutex\_lock(), except that if the mutex mx is locked by another thread than the current one, this service returns immediately.

**Parameters** 

mutex | the mutex to be locked.

6.57 Mutual exclusion 277

#### Returns

0 on success;

an error number if:

- EPERM, the caller context is invalid;
- EINVAL, the mutex is invalid;
- EPERM, the mutex is not process-shared and does not belong to the current process;
- EBUSY, the mutex was locked by another thread than the current one;
- EAGAIN, the mutex is recursive, and the maximum number of recursive locks has been exceeded.

#### See Also

Specification.

References XNRELAX, and XNWEAK.

Referenced by rt\_mutex\_acquire\_timed(), and rt\_mutex\_inquire().

6.57.2.6 int pthread mutex unlock ( pthread mutex t \* mutex )

Unlock a mutex.

This service unlocks the mutex mx. If the mutex is of the  $PTHREAD\_MUTEX\_RECURSIVE$  type and the locking recursion count is greater than one, the lock recursion count is decremented and the mutex remains locked.

Attempting to unlock a mutex which is not locked or which is locked by another thread than the current one yields the EPERM error, whatever the mutex *type* attribute.

**Parameters** 

mutex the mutex to be released.

#### Returns

0 on success;

an error number if:

- EPERM, the caller context is invalid;
- EINVAL, the mutex mx is invalid;
- EPERM, the mutex was not locked by the current thread.

## See Also

Specification.

References XNWEAK.

Referenced by rt\_mutex\_inquire(), and rt\_mutex\_release().

6.57.2.7 int pthread\_mutexattr\_destroy ( pthread\_mutexattr\_t \* attr )

Destroy a mutex attributes object.

This service destroys the mutex attributes object *attr*. The object becomes invalid for all mutex services (they all return EINVAL) except pthread mutexattr init().

## **Parameters**

| attr | the initialized mutex attributes object to be destroyed. |
|------|--|

### Returns

0 on success;

an error number if:

• EINVAL, the mutex attributes object attr is invalid.

### See Also

Specification.

Referenced by rt mutex create().

6.57.2.8 int pthread\_mutexattr\_getprotocol ( const pthread\_mutexattr\_t \* attr, int \* proto )

Get the protocol attribute from a mutex attributes object.

This service stores, at the address *proto*, the value of the *protocol* attribute in the mutex attributes object *attr*.

The *protcol* attribute may only be one of *PTHREAD\_PRIO\_NONE* or *PTHREAD\_PRIO\_INHERIT*. See <a href="pthread\_mutexattr\_setprotocol">pthread\_mutexattr\_setprotocol</a>() for the meaning of these two constants.

#### **Parameters**

| attr  | an initialized mutex attributes object;   |
|-------|---|
| proto | address where the value of the <i>protocol</i> attribute will be stored on success. |

### Returns

0 on success,

an error number if:

- EINVAL, the proto address is invalid;
- EINVAL, the mutex attributes object attr is invalid.

### See Also

Specification.

Referenced by pthread\_mutex\_init().

6.57.2.9 int pthread\_mutexattr\_getpshared ( const pthread\_mutexattr\_t \* attr, int \* pshared )

Get the process-shared attribute of a mutex attributes object.

This service stores, at the address *pshared*, the value of the *pshared* attribute in the mutex attributes object *attr*.

The *pashared* attribute may only be one of *PTHREAD\_PROCESS\_PRIVATE* or *PTHREAD\_PROCES-S\_SHARED*. See <a href="mailto:pthread\_mutexattr\_setpshared">pthread\_mutexattr\_setpshared</a>() for the meaning of these two constants.

6.57 Mutual exclusion 279

## **Parameters**

|         | an initialized mutex attributes object;  |
|---------|--|
| pshared | address where the value of the <i>pshared</i> attribute will be stored on success. |

## Returns

0 on success:

an error number if:

- EINVAL, the pshared address is invalid;
- EINVAL, the mutex attributes object attr is invalid.

### See Also

Specification.

Referenced by pthread\_mutex\_init().

6.57.2.10 int pthread\_mutexattr\_gettype ( const pthread\_mutexattr\_t \* attr, int \* type )

Get the mutex type attribute from a mutex attributes object.

This service stores, at the address type, the value of the type attribute in the mutex attributes object attr.

See <a href="pthread\_mutex\_lock">pthread\_mutex\_unlock</a>() documentations for a description of the values of the <a href="type">type</a> attribute and their effect on a mutex.

#### **Parameters**

| type | address where the <i>type</i> attribute value will be stored on success. |
|------|--|

### Returns

0 on sucess,

an error number if:

- EINVAL, the type address is invalid;
- EINVAL, the mutex attributes object attr is invalid.

#### See Also

Specification.

Referenced by pthread\_mutex\_init().

6.57.2.11 int pthread\_mutexattr\_init ( pthread\_mutexattr\_t \* attr )

Initialize a mutex attributes object.

This services initializes the mutex attributes object *attr* with default values for all attributes. Default value are :

- for the type attribute, PTHREAD\_MUTEX\_NORMAL;
- for the protocol attribute, PTHREAD\_PRIO\_NONE;
- for the pshared attribute, PTHREAD PROCESS PRIVATE.

If this service is called specifying a mutex attributes object that was already initialized, the attributes object is reinitialized.

#### **Parameters**

attr | the mutex attributes object to be initialized.

### Returns

0 on success;

an error number if:

• ENOMEM, the mutex attributes object pointer attr is NULL.

### See Also

Specification.

Referenced by rt\_mutex\_create().

6.57.2.12 int pthread\_mutexattr\_setprotocol ( pthread\_mutexattr\_t \* attr, int proto )

Set the protocol attribute of a mutex attributes object.

This service set the *type* attribute of the mutex attributes object attr.

#### **Parameters**

| attr  | an initialized mutex attributes object,  |
|-------|--|
| proto | value of the <i>protocol</i> attribute, may be one of:   |
|       | <ul> <li>PTHREAD_PRIO_NONE, meaning that a mutex created with the attributes<br/>object attr will not follow any priority protocol;</li> </ul>             |
|       | <ul> <li>PTHREAD_PRIO_INHERIT, meaning that a mutex created with the attributes<br/>object attr, will follow the priority inheritance protocol.</li> </ul> |

The value PTHREAD\_PRIO\_PROTECT (priority ceiling protocol) is unsupported.

## Returns

0 on success,

an error number if:

- EINVAL, the mutex attributes object attr is invalid;
- ENOTSUP, the value of proto is unsupported;
- EINVAL, the value of proto is invalid.

## See Also

Specification.

Referenced by rt\_mutex\_create().

6.57.2.13 int pthread\_mutexattr\_setpshared ( pthread\_mutexattr\_t \* attr, int pshared )

Set the process-shared attribute of a mutex attributes object.

This service set the *pshared* attribute of the mutex attributes object attr.

6.57 Mutual exclusion 281

## **Parameters**

| attr    | an initialized mutex attributes object.  |
|---------|--|
| pshared | value of the <i>pshared</i> attribute, may be one of:  |
|         | <ul> <li>PTHREAD_PROCESS_PRIVATE, meaning that a mutex created with the attributes object attr will only be accessible by threads within the same process as the thread that initialized the mutex;</li> </ul> |
|         | <ul> <li>PTHREAD_PROCESS_SHARED, meaning that a mutex created with the attributes object attr will be accessible by any thread that has access to the memory where the mutex is allocated.</li> </ul>          |

### Returns

0 on success,

an error status if:

- EINVAL, the mutex attributes object attr is invalid;
- EINVAL, the value of pshared is invalid.

#### See Also

Specification.

Referenced by rt\_mutex\_create().

6.57.2.14 int pthread\_mutexattr\_settype ( pthread\_mutexattr\_t \* attr, int type )

Set the mutex type attribute of a mutex attributes object.

This service set the *type* attribute of the mutex attributes object attr.

See <a href="pthread\_mutex\_lock">pthread\_mutex\_unlock</a>() documentations for a description of the values of the <a href="type">type</a> attribute and their effect on a mutex.

The PTHREAD\_MUTEX\_DEFAULT default type is the same as PTHREAD\_MUTEX\_NORMAL. Note that using a Xenomai POSIX skin recursive mutex with a Xenomai POSIX skin condition variable is safe (see pthread\_cond\_wait() documentation).

## **Parameters**

| attr | an initialized mutex attributes object, |
|------|---|
| type | value of the <i>type</i> attribute.     |

#### Returns

0 on success,

an error number if:

- EINVAL, the mutex attributes object attr is invalid;
- EINVAL, the value of type is invalid for the type attribute.

#### See Also

Specification.

Referenced by rt\_mutex\_create().

# 6.58 Semaphores

Cobalt/POSIX semaphore services.

Collaboration diagram for Semaphores:



## **Functions**

int sem\_init (sem\_t \*sem, int pshared, unsigned value)
 Initialize an unnamed semaphore.

int sem\_destroy (sem\_t \*sem)

Destroy an unnamed semaphore.

int sem\_post (sem\_t \*sem)

Post a semaphore.

int sem\_trywait (sem\_t \*sem)

Attempt to decrement a semaphore.

int sem\_wait (sem\_t \*sem)

Decrement a semaphore.

• int sem\_timedwait (sem\_t \*sem, const struct timespec \*abs\_timeout)

Attempt to decrement a semaphore with a time limit.

• int sem\_close (sem\_t \*sem)

Close a named semaphore.

int sem\_unlink (const char \*name)

Unlink a named semaphore.

## 6.58.1 Detailed Description

Cobalt/POSIX semaphore services. Semaphores are counters for resources shared between threads. The basic operations on semaphores are: increment the counter atomically, and wait until the counter is non-null and decrement it atomically.

Semaphores have a maximum value past which they cannot be incremented. The macro *SEM\_VALU-E MAX* is defined to be this maximum value.

## 6.58.2 Function Documentation

```
6.58.2.1 int sem_close ( sem_t * sem )
```

Close a named semaphore.

This service closes the semaphore *sem*. The semaphore is destroyed only when unlinked with a call to the sem\_unlink() service and when each call to sem\_open() matches a call to this service.

6.58 Semaphores 283

When a semaphore is destroyed, the memory it used is returned to the system heap, so that further references to this semaphore are not guaranteed to fail, as is the case for unnamed semaphores.

This service fails if *sem* is an unnamed semaphore.

#### **Parameters**

| sem   the semaphore to be closed. |  |
|-----------------------------------|--|
|-----------------------------------|--|

### Return values

| 0  | on success;  |
|----|--|
| -1 | with errno set if:   |
|    | <ul> <li>EINVAL, the semaphore sem is invalid or is an unnamed<br/>semaphore.</li> </ul> |

## See Also

Specification.

6.58.2.2 int sem\_destroy ( sem\_t \* sem )

Destroy an unnamed semaphore.

This service destroys the semaphore *sem*. Threads currently blocked on *sem* are unblocked and the service they called return -1 with *errno* set to EINVAL. The semaphore is then considered invalid by all semaphore services (they all fail with *errno* set to EINVAL) except <u>sem\_init()</u>.

This service fails if sem is a named semaphore.

### **Parameters**

| sem | the semaphore to be destroyed. |
|-----|--------------------------------|

### Return values

| always | 0 on success. If SEM_WARNDEL was mentioned in sem_init_np(), the semaphore is deleted as requested and a strictly positive value is returned to warn the caller if threads were pending on it, otherwise zero is returned. If SEM_NOBUSYDEL was mentioned in sem_init_np(), sem_destroy() may succeed only if no thread is waiting on the semaphore to delete, otherwise -EBUSY is returned. |
|--------|--|
| -1     | with errno set if:   |
|        | • EINVAL, the semaphore <i>sem</i> is invalid or a named semaphore;  |
|        | <ul> <li>EPERM, the semaphore sem is not process-shared and does not<br/>belong to the current process.</li> </ul>   |
|        | <ul> <li>EBUSY, a thread is currently waiting on the semaphore sem with<br/>SEM_NOBUSYDEL set.</li> </ul>  |

### See Also

Specification.

6.58.2.3 int sem\_init ( sem\_t \* sem, int pshared, unsigned value )

Initialize an unnamed semaphore.

This service initializes the semaphore *sm*, with the value *value*.

This service fails if *sm* is already initialized or is a named semaphore.

6.58 Semaphores 285

## **Parameters**

| sem     | the semaphore to be initialized;  |
|---------|---|
| pshared | if zero, means that the new semaphore may only be used by threads in the same   |
|         | process as the thread calling sem_init(); if non zero, means that the new semaphore may be used by any thread that has access to the memory where the semaphore is allocated. |
| value   | the semaphore initial value.  |

### Return values

| 0  | on success,   |
|----|---|
| -1 | with errno set if:  |
|    | • EBUSY, the semaphore <i>sm</i> was already initialized;   |
|    | <ul> <li>ENOSPC, insufficient memory exists in the system heap to initialize<br/>the semaphore, increase CONFIG_XENO_OPT_SYS_HEAPSZ;</li> </ul> |
|    | • EINVAL, the <i>value</i> argument exceeds <i>SEM_VALUE_MAX</i> .  |

### See Also

Specification.

6.58.2.4 int sem\_post ( sem\_t \* sem )

Post a semaphore.

This service posts the semaphore sem.

If no thread is currently blocked on this semaphore, its count is incremented unless "pulse" mode is enabled for it (see sem\_init\_np(), SEM\_PULSE). If a thread is blocked on the semaphore, the thread heading the wait queue is unblocked.

## **Parameters**

| sem | the semaphore to be signaled. |
|-----|-------------------------------|

## Return values

| 0  | on success;   |
|----|---|
| -1 | with errno set if:  |
|    | • EINVAL, the specified semaphore is invalid or uninitialized;  |
|    | <ul> <li>EPERM, the semaphore sm is not process-shared and does not<br/>belong to the current process;</li> </ul> |
|    | • EAGAIN, the semaphore count is SEM_VALUE_MAX.   |

## See Also

Specification.

6.58.2.5 int sem\_timedwait ( sem\_t \* sem, const struct timespec \* abs\_timeout )

Attempt to decrement a semaphore with a time limit.

This service is equivalent to sem\_wait(), except that the caller is only blocked until the timeout abs\_timeout expires.

6.58 Semaphores 287

## **Parameters**

| sem         | the semaphore to be decremented;   |
|-------------|--|
| abs_timeout | the timeout, expressed as an absolute value of the relevant clock for the semaphore, |
|             | either CLOCK_MONOTONIC if SEM_RAWCLOCK was mentioned via sem_init                    |
|             | np(), or CLOCK_REALTIME otherwise.   |

## Return values

| 0  | on success;   |
|----|---|
| -1 | with errno set if:  |
|    | • EPERM, the caller context is invalid;   |
|    | <ul> <li>EINVAL, the semaphore is invalid or uninitialized;</li> </ul>  |
|    | <ul> <li>EINVAL, the specified timeout is invalid;</li> </ul>   |
|    | <ul> <li>EPERM, the semaphore sm is not process-shared and does not<br/>belong to the current process;</li> </ul> |
|    | <ul> <li>EINTR, the caller was interrupted by a signal while blocked in this<br/>service;</li> </ul>              |
|    | <ul> <li>ETIMEDOUT, the semaphore could not be decremented and the<br/>specified timeout expired.</li> </ul>      |

# See Also

Specification.

References sem\_trywait().

6.58.2.6 int sem\_trywait ( sem\_t \* sem )

Attempt to decrement a semaphore.

This service is equivalent to sem\_wait(), except that it returns immediately if the semaphore sem is currently depleted, and that it is not a cancellation point.

## **Parameters**

| sem | the semaphore to be decremented. |
|-----|----------------------------------|
|-----|----------------------------------|

## Return values

| 0  | on success;  |
|----|--|
| -1 | with errno set if:   |
|    | • EINVAL, the specified semaphore is invalid or uninitialized;   |
|    | <ul> <li>EPERM, the semaphore sem is not process-shared and does not<br/>belong to the current process;</li> </ul> |
|    | <ul> <li>EAGAIN, the specified semaphore is currently fully depleted.</li> </ul>                                   |
|    | •  |

**Module Documentation** 

See Also

Specification.

Referenced by sem\_timedwait(), and sem\_wait().

6.58.2.7 int sem\_unlink ( const char \* name )

Unlink a named semaphore.

This service unlinks the semaphore named *name*. This semaphore is not destroyed until all references obtained with sem\_open() are closed by calling sem\_close(). However, the unlinked semaphore may no longer be reached with the sem\_open() service.

When a semaphore is destroyed, the memory it used is returned to the system heap, so that further references to this semaphore are not guaranteed to fail, as is the case for unnamed semaphores.

## **Parameters**

| name | the name of the semaphore to be unlinked. |
|------|---|

### Return values

| 0  | on success;  |
|----|--|
| -1 | with errno set if:   |
|    | <ul> <li>ENAMETOOLONG, the length of the name argument exceeds 64 characters;</li> </ul> |
|    | ENOENT, the named semaphore does not exist.  |

See Also

Specification.

6.58.2.8 int sem\_wait ( sem\_t \* sem )

## Decrement a semaphore.

This service decrements the semaphore *sem* if it is currently if its value is greater than 0. If the semaphore's value is currently zero, the calling thread is suspended until the semaphore is posted, or a signal is delivered to the calling thread.

This service is a cancellation point for Cobalt threads (created with the <a href="pthread\_create">pthread\_create</a>() service). When such a thread is cancelled while blocked in a call to this service, the semaphore state is left unchanged before the cancellation cleanup handlers are called.

#### **Parameters**

| sem   the semaphore to be decremented. |
|--|
|--|

6.58 Semaphores 289

## Return values

| 0  | on success;  |
|----|--|
| -1 | with errno set if:   |
|    | <ul> <li>EPERM, the caller context is invalid;</li> </ul>  |
|    | <ul> <li>EINVAL, the semaphore is invalid or uninitialized;</li> </ul>   |
|    | <ul> <li>EPERM, the semaphore sem is not process-shared and does not<br/>belong to the current process;</li> </ul> |
|    | <ul> <li>EINTR, the caller was interrupted by a signal while blocked in this<br/>service.</li> </ul>               |
|    |  |

See Also

Specification.

References sem\_trywait().

290 Module Documentation

# 6.59 Thread management

Cobalt/POSIX thread management services.

Collaboration diagram for Thread management:



## **Functions**

- int pthread\_create (pthread\_t \*ptid\_r, const pthread\_attr\_t \*attr, void \*(\*start)(void \*), void \*arg)

  Create a new thread.
- int pthread\_setmode\_np (int clrmask, int setmask, int \*mode\_r)

Set the mode of the current thread.

• int pthread\_setname\_np (pthread\_t thread, const char \*name)

Set a thread name.

int pthread\_kill (pthread\_t thread, int sig)

Send a signal to a thread.

int pthread\_join (pthread\_t thread, void \*\*retval)

Wait for termination of a specified thread.

## 6.59.1 Detailed Description

Cobalt/POSIX thread management services.

See Also

Specification.

## 6.59.2 Function Documentation

6.59.2.1 int pthread\_create ( pthread\_t \* ptid\_r, const pthread\_attr\_t \* attr, void \*(\*)(void \*) start, void \* arg )

Create a new thread.

This service creates a thread managed by the Xenomai nucleus in dual kernel configuration.

The new thread signal mask is inherited from the current thread, if it was also created with pthread\_create(), otherwise the new thread signal mask is empty.

Other attributes of the new thread depend on the *attr* argument. If *attr* is NULL, default values for these attributes are used.

Returning from the start routine has the same effect as calling pthread\_exit() with the return value.

#### **Parameters**

| ptid_r | address where the identifier of the new thread will be stored on success; |
|--------|---|
| attr   | thread attributes;  |
| start  | thread start routine;   |
| arg    | opaque user-supplied argument passed to start;                            |

#### Returns

0 on success:

an error number if:

- EINVAL, attr is invalid;
- EAGAIN, insufficient memory exists in the system heap to create a new thread, increase CONFIG XENO OPT SYS HEAPSZ;
- EINVAL, thread attribute *inheritsched* is set to PTHREAD\_INHERIT\_SCHED and the calling thread does not belong to the Cobalt interface;

See Also

Specification.

Note

When creating or shadowing a Xenomai thread for the first time in user-space, Xenomai installs a handler for the SIGSHADOW signal. If you had installed a handler before that, it will be automatically called by Xenomai for SIGSHADOW signals that it has not sent.

If, however, you install a signal handler for SIGSHADOW after creating or shadowing the first Xenomai thread, you have to explicitly call the function cobalt\_sigshadow\_handler at the beginning of your signal handler, using its return to know if the signal was in fact an internal signal of Xenomai (in which case it returns 1), or if you should handle the signal (in which case it returns 0). cobalt\_sigshadow\_handler prototype is:

# int cobalt\_sigshadow\_handler(int sig, struct siginfo \*si, void \*ctxt);

Which means that you should register your handler with sigaction, using the SA\_SIGINFO flag, and pass all the arguments you received to cobalt\_sigshadow\_handler.

6.59.2.2 int pthread join (pthread t thread, void \*\* retval)

Wait for termination of a specified thread.

If the thread *thread* is running and joinable, this service blocks the calling thread until the thread *thread* terminates or detaches. In this case, the calling context must be a blockable context (i.e. a Xenomai thread without the scheduler locked) or the root thread (i.e. a module initilization or cleanup routine). When *thread* terminates, the calling thread is unblocked and its return value is stored at\* the address *value\_ptr*.

If, on the other hand, the thread thread has already finished execution, its return value is stored at the address value\_ptr and this service returns immediately. In this case, this service may be called from any context.

This service is a cancelation point for POSIX skin threads: if the calling thread is canceled while blocked in a call to this service, the cancelation request is honored and *thread* remains joinable.

Multiple simultaneous calls to <a href="pthread\_join">pthread\_join</a>() specifying the same running target thread block all the callers until the target thread terminates.

## **Parameters**

| thread | identifier of the thread to wait for;                                   |
|--------|---|
| retval | address where the target thread return value will be stored on success. |

### Returns

0 on success;

an error number if:

- ESRCH, thread is invalid;
- EDEADLK, attempting to join the calling thread;
- EINVAL, thread is detached;
- EPERM, the caller context is invalid.

#### See Also

Specification.

Referenced by rt\_task\_join().

6.59.2.3 int pthread\_kill ( pthread\_t thread, int sig )

Send a signal to a thread.

This service send the signal *sig* to the Xenomai POSIX skin thread *thread* (created with pthread\_create()). If *sig* is zero, this service check for existence of the thread *thread*, but no signal is sent.

#### **Parameters**

| thread | thread identifier; |
|--------|--------------------|
| sig    | signal number.     |

### Returns

0 on success:

an error number if:

- EINVAL, sig is an invalid signal number;
- EAGAIN, the maximum number of pending signals has been exceeded;
- ESRCH, thread is an invalid thread identifier.

### See Also

Specification.

6.59.2.4 int pthread\_setmode\_np ( int clrmask, int setmask, int \* mode\_r )

Set the mode of the current thread.

This service sets the mode of the calling thread. *clrmask* and *setmask* are two bit masks which are respectively cleared and set in the calling thread status. They are a bitwise OR of the following values:

• PTHREAD\_LOCK\_SCHED, when set, locks the scheduler, which prevents the current thread from being switched out until the scheduler is unlocked;

- PTHREAD\_WARNSW, when set, causes the signal SIGDEBUG to be sent to the current thread, whenever it involontary switches to secondary mode;
- PTHREAD\_CONFORMING can be passed in setmask to switch the current user-space task to its
  preferred runtime mode. The only meaningful use of this switch is to force a real-time shadow back
  to primary mode. Any other use leads to a nop.
- PTHREAD\_DISABLE\_LOCKBREAK disallows breaking the scheduler lock. In the default case, a
  thread which holds the scheduler lock is allowed to drop it temporarily for sleeping. If this mode bit
  is set, such thread would return with EINTR immediately from any blocking call.

PTHREAD\_LOCK\_SCHED and PTHREAD\_DISABLE\_LOCKBREAK are valid for any Xenomai thread, other bits are valid for Xenomai user-space threads only.

This service is a non-portable extension of the POSIX interface.

#### **Parameters**

| clrmask | set of bits to be cleared;   |
|---------|--|
| setmask | set of bits to be set.   |
| mode_r  | If non-NULL, mode_r must be a pointer to a memory location which will be written     |
|         | upon success with the previous set of active mode bits. If NULL, the previous set of |
|         | active mode bits will not be returned.   |

### Returns

0 on success:

an error number if:

• EINVAL, some bit in clrmask or setmask is invalid.

## Note

Setting *clrmask* and *setmask* to zero leads to a nop, only returning the previous mode if *mode\_r* is a valid address.

6.59.2.5 int pthread\_setname\_np ( pthread\_t thread, const char \* name )

Set a thread name.

This service set to *name*, the name of *thread*. This name is used for displaying information in /proc/xenomai/sched.

This service is a non-portable extension of the POSIX interface.

# **Parameters**

| thread | target thread;      |
|--------|---------------------|
| name   | name of the thread. |

### Returns

0 on success;

an error number if:

• ESRCH, thread is invalid.

# 6.60 Scheduling management

Cobalt/POSIX scheduling management services.

Collaboration diagram for Scheduling management:



# **Functions**

- int pthread\_setschedparam (pthread\_t thread, int policy, const struct sched\_param \*param)

  Set the scheduling policy and parameters of the specified thread.
- int pthread\_setschedparam\_ex (pthread\_t thread, int policy, const struct sched\_param\_ex \*param\_ex)

Set extended scheduling policy of thread.

int pthread\_getschedparam (pthread\_t thread, int \*\_\_restrict\_\_ policy, struct sched\_param \*\_\_restrict\_\_ param)

Get the scheduling policy and parameters of the specified thread.

int pthread\_getschedparam\_ex (pthread\_t thread, int \*\_\_restrict\_\_ policy\_r, struct sched\_param\_ex \*\_\_restrict\_\_ param\_ex)

Get extended scheduling policy of thread.

int sched\_yield (void)

Yield the processor.

int sched\_get\_priority\_min (int policy)

Get minimum priority of the specified scheduling policy.

int sched\_get\_priority\_min\_ex (int policy)

Get extended minimum priority of the specified scheduling policy.

int sched\_get\_priority\_max (int policy)

Get maximum priority of the specified scheduling policy.

int sched\_get\_priority\_max\_ex (int policy)

Get extended maximum priority of the specified scheduling policy.

int pthread\_yield (void)

Yield the processor.

int sched\_setconfig\_np (int cpu, int policy, const union sched\_config \*config, size\_t len)

Set CPU-specific scheduler settings for a policy.

• ssize\_t sched\_getconfig\_np (int cpu, int policy, union sched\_config \*config, size\_t \*len\_r)

Retrieve CPU-specific scheduler settings for a policy.

# 6.60.1 Detailed Description

Cobalt/POSIX scheduling management services.

# 6.60.2 Function Documentation

```
6.60.2.1 int pthread_getschedparam ( pthread_t thread, int *__restrict__ policy, struct sched_param *__restrict__ param )
```

Get the scheduling policy and parameters of the specified thread.

This service returns, at the addresses *pol* and *par*, the current scheduling policy and scheduling parameters (i.e. priority) of the Xenomai POSIX skin thread *tid*. If this service is called from user-space and *tid* is not the identifier of a Xenomai POSIX skin thread, this service fallback to Linux regular pthread\_getschedparam service.

#### **Parameters**

| thread | target thread;  |
|--------|---|
| policy | address where the scheduling policy of <i>tid</i> is stored on success;     |
| param  | address where the scheduling parameters of <i>tid</i> is stored on success. |

#### Returns

0 on success;

an error number if:

• ESRCH, tid is invalid.

### See Also

Specification.

References pthread\_getschedparam\_ex().

Referenced by pthread getschedparam ex().

```
6.60.2.2 int pthread_getschedparam_ex ( pthread_t thread, int *__restrict__ policy_r, struct sched_param_ex *__restrict__ param_ex )
```

Get extended scheduling policy of thread.

This service is an extended version of the regular <a href="pthread\_getschedparam">pthread\_getschedparam</a>() service, which also supports Xenomai-specific or additional POSIX scheduling policies, not available with the host Linux environment.

### **Parameters**

| thread   | target thread;   |
|----------|--|
| policy_r | address where the scheduling policy of thread is stored on success;      |
| param_ex | address where the scheduling parameters of thread are stored on success. |

### Returns

0 on success:

an error number if:

• ESRCH, thread is invalid.

## See Also

Specification.

References pthread\_getschedparam().

Referenced by pthread\_getschedparam().

6.60.2.3 int pthread\_setschedparam ( pthread\_t thread, int policy, const struct sched\_param \* param )

Set the scheduling policy and parameters of the specified thread.

This service set the scheduling policy of the Xenomai POSIX skin thread *tid* to the value *pol*, and its scheduling parameters (i.e. its priority) to the value pointed to by *par*.

When used in user-space, passing the current thread ID as *tid* argument, this service turns the current thread into a Xenomai POSIX skin thread. If *tid* is neither the identifier of the current thread nor the identifier of a Xenomai POSIX skin thread this service falls back to the regular <a href="mailto:pthread\_setschedparam">pthread\_setschedparam</a>() service, hereby causing the current thread to switch to secondary mode if it is Xenomai thread.

#### **Parameters**

| thread | target thread;   |  |
|--------|--|--|
| policy | scheduling policy, one of SCHED_FIFO, SCHED_RR, SCHED_SPORADIC, SCH- |  |
|        | ED_TP or SCHED_OTHER;  |  |
| param  | scheduling parameters address.                                       |  |

#### Returns

0 on success:

an error number if:

- ESRCH, tid is invalid;
- EINVAL, pol or par->sched priority is invalid;
- EAGAIN, in user-space, insufficient memory exists in the system heap, increase CONFIG\_X-ENO\_OPT\_SYS\_HEAPSZ;
- EFAULT, in user-space, par is an invalid address;
- EPERM, in user-space, the calling process does not have superuser permissions.

## See Also

Specification.

Note

When creating or shadowing a Xenomai thread for the first time in user-space, Xenomai installs a handler for the SIGSHADOW signal. If you had installed a handler before that, it will be automatically called by Xenomai for SIGSHADOW signals that it has not sent.

If, however, you install a signal handler for SIGSHADOW after creating or shadowing the first Xenomai thread, you have to explicitly call the function xeno\_sigwinch\_handler at the beginning of your signal handler, using its return to know if the signal was in fact an internal signal of Xenomai (in which case it returns 1), or if you should handle the signal (in which case it returns 0). xeno\_sigwinch\_handler prototype is:

# int xeno\_sigwinch\_handler(int sig, siginfo\_t \*si, void \*ctxt);

Which means that you should register your handler with sigaction, using the SA\_SIGINFO flag, and pass all the arguments you received to xeno\_sigwinch\_handler.

References pthread\_setschedparam\_ex().

6.60.2.4 int pthread\_setschedparam\_ex ( pthread\_t thread, int policy, const struct sched\_param\_ex \* param\_ex )

Set extended scheduling policy of thread.

This service is an extended version of the regular pthread\_setschedparam() service, which supports Xenomai-specific or additional scheduling policies, not available with the host Linux environment.

This service set the scheduling policy of the Xenomai thread to the value *policy*, and its scheduling parameters (e.g. its priority) to the value pointed to by *param* ex.

If thread does not match the identifier of a Xenomai thread, this action falls back to the regular pthreadsetschedparam() service.

#### **Parameters**

| thread   | target Cobalt thread;  |
|----------|--|
| policy   | scheduling policy, one of SCHED_WEAK, SCHED_FIFO, SCHED_COBALT, SCH-   |
|          | ED_RR, SCHED_SPORADIC, SCHED_TP, SCHED_QUOTA or SCHED_NORMA-   |
|          | L;   |
| param_ex | scheduling parameters address. As a special exception, a negative sched_priority value is interpreted as if SCHED_WEAK was given in <i>policy</i> , using the absolute |
|          | value of this parameter as the weak priority level.  |

When CONFIG\_XENO\_OPT\_SCHED\_WEAK is enabled, SCHED\_WEAK exhibits priority levels in the [0..99] range (inclusive). Otherwise, sched priority must be zero for the SCHED WEAK policy.

#### Returns

0 on success; an error number if:

- ESRCH, thread is invalid;
- EINVAL, policy or param ex->sched priority is invalid;
- EAGAIN, in user-space, insufficient memory exists in the system heap, increase CONFIG\_X-ENO OPT SYS HEAPSZ;
- EFAULT, in user-space, param\_ex is an invalid address;
- EPERM, in user-space, the calling process does not have superuser permissions.

### See Also

Specification.

Note

When creating or shadowing a Xenomai thread for the first time in user-space, Xenomai installs a handler for the SIGSHADOW signal. If you had installed a handler before that, it will be automatically called by Xenomai for SIGSHADOW signals that it has not sent.

If, however, you install a signal handler for SIGSHADOW after creating or shadowing the first Xenomai thread, you have to explicitly call the function cobalt\_sigshadow\_handler at the beginning of your signal handler, using its return to know if the signal was in fact an internal signal of Xenomai (in which case it returns 1), or if you should handle the signal (in which case it returns 0). cobalt\_sigshadow\_handler prototype is:

# int cobalt\_sigshadow\_handler(int sig, struct siginfo \*si, void \*ctxt);

Which means that you should register your handler with sigaction, using the SA\_SIGINFO flag, and pass all the arguments you received to cobalt\_sigshadow\_handler.

pthread setschedparam ex() may switch the caller to secondary mode.

Referenced by pthread\_setschedparam().

6.60.2.5 int pthread\_yield (void)

Yield the processor.

This function move the current thread at the end of its priority group.

Return values

```
0
```

See Also

Specification.

References sched\_yield().

6.60.2.6 int sched\_get\_priority\_max ( int policy )

Get maximum priority of the specified scheduling policy.

This service returns the maximum priority of the scheduling policy policy.

**Parameters** 

| policy | scheduling policy. |
|--------|--------------------|

# Return values

| 0  | on success;                         |
|----|-------------------------------------|
| -1 | with errno set if:                  |
|    | • EINVAL, <i>policy</i> is invalid. |

See Also

Specification.

Referenced by sched\_get\_priority\_max\_ex().

6.60.2.7 int sched\_get\_priority\_max\_ex ( int policy )

Get extended maximum priority of the specified scheduling policy.

This service returns the maximum priority of the scheduling policy *policy*, reflecting any Cobalt extension to standard classes.

Parameters

| naliau | aphaduling policy  |
|--------|--------------------|
| DOIICV | Scheduling policy. |
| P J    | constant g pensy.  |

# Return values

| 0  | on success;                         |
|----|-------------------------------------|
| -1 | with errno set if:                  |
|    | • EINVAL, <i>policy</i> is invalid. |

See Also

Specification.

References sched\_get\_priority\_max().

6.60.2.8 int sched\_get\_priority\_min ( int policy )

Get minimum priority of the specified scheduling policy.

This service returns the minimum priority of the scheduling policy policy.

**Parameters** 

| policy | scheduling policy. |
|--------|--------------------|
|--------|--------------------|

### Return values

| 0  | on success;                         |
|----|-------------------------------------|
| -1 | with errno set if:                  |
|    | • EINVAL, <i>policy</i> is invalid. |

# See Also

Specification.

Referenced by sched\_get\_priority\_min\_ex().

6.60.2.9 int sched\_get\_priority\_min\_ex ( int policy )

Get extended minimum priority of the specified scheduling policy.

This service returns the minimum priority of the scheduling policy, reflecting any Cobalt extension to the standard classes.

Parameters

| П | naliav | achaduling policy  |
|---|--------|--------------------|
|   | policy | scheduling policy. |
|   | ' '    |                    |

# Return values

| 0  | on success;                       |
|----|-----------------------------------|
| -1 | with errno set if:                |
|    | EINVAL, <i>policy</i> is invalid. |

# See Also

Specification.

References sched\_get\_priority\_min().

6.60.2.10 ssize\_t sched\_getconfig\_np ( int cpu, int policy, union sched\_config \* config, size\_t \* len\_r )

Retrieve CPU-specific scheduler settings for a policy.

A configuration is strictly local to the target cpu, and may differ from other processors.

#### **Parameters**

| сри    | processor to retrieve the configuration of.                                       |
|--------|---|
| policy | scheduling policy to which the configuration data applies. Currently, SCHED_TP    |
|        | and SCHED_QUOTA are valid.  |
| config | a pointer to a memory area where the configuration data will be copied back. This |
|        | area must be at least *len_r bytes long.  |
| len_r  | overall length of the configuration data returned (in bytes).                     |

#### Returns

the number of bytes copied to *config* on success; a negative error number if:

- EINVAL, *cpu* is invalid, or *policy* is unsupported by the current kernel configuration, or *len* cannot hold the retrieved configuration data.
- ESRCH, with *policy* equal to SCHED\_QUOTA, if the group identifier required to perform the operation is not valid.
- ENOMEM, lack of memory to perform the operation.
- ENOSPC, len is too short.

6.60.2.11 int sched setconfig np (int cpu, int policy, const union sched config \* config, size t len )

Set CPU-specific scheduler settings for a policy.

A configuration is strictly local to the target *cpu*, and may differ from other processors.

## **Parameters**

|  | сри  | processor to load the configuration of. |
|--|--|---|
|  | policy scheduling policy to which the configuration data applies. Currently, SCHE and SCHED QUOTA are valid. |   |
| config a pointer to the configuration data to load on cpu, applicable to policy. |  |   |

Settings applicable to SCHED\_TP

This call installs the temporal partitions for *cpu*.

• config.tp.windows should be a non-null set of time windows, defining the scheduling time slots for *cpu*. Each window defines its offset from the start of the global time frame (windows[].offset), a duration (windows[].duration), and the partition id it applies to (windows[].ptid).

Time windows must be strictly contiguous, i.e. windows[n].offset + windows[n].duration shall equal windows[n + 1].offset. If windows[].ptid is in the range [0..CONFIG\_XENO\_OPT\_SCHED\_TP\_NRP-ART-1], SCHED\_TP threads which belong to the partition being referred to may run for the duration of the time window.

Time holes may be defined using windows assigned to the pseudo partition #-1, during which no SCH-ED\_TP threads may be scheduled.

config.tp.nr\_windows should define the number of elements present in the config.tp.windows[] array.

Settings applicable to SCHED QUOTA

This call manages thread groups running on cpu.

- config.quota.op should define the operation to be carried out. Valid operations are:
  - sched\_quota\_add for creating a new thread group on cpu. The new group identifier will be written back to config.quota.add.tgid\_r upon success. A new group is given no initial runtime budget when created. sched quota set should be issued to enable it.
  - sched\_quota\_remove for deleting a thread group on cpu. The group identifier should be passed in config.quota.remove.tgid.
  - sched\_quota\_set for updating the scheduling parameters of a thread group defined on cpu.
     The group identifier should be passed in config.quota.set.tgid, along with the allotted percentage of the quota interval (config.quota.set.quota), and the peak percentage allowed (config.quota.set.quota peak).
  - sched\_quota\_get for retrieving the scheduling parameters of a thread group defined on cpu.
     The group identifier should be passed in config.quota.get.tgid. The allotted percentage of the quota interval (config.quota.get.quota\_r), and the peak percentage (config.quota.get.quota\_peak\_r) will be written to the given output variables. The result of this operation is identical to calling sched\_getconfig\_np().

### **Parameters**

len overall length of the configuration data (in bytes).

#### Returns

0 on success; an error number if:

- EINVAL, *cpu* is invalid, or *policy* is unsupported by the current kernel configuration, *len* is invalid, or *config* contains invalid parameters.
- ENOMEM, lack of memory to perform the operation.
- EBUSY, with *policy* equal to SCHED\_QUOTA, if an attempt is made to remove a thread group which still manages threads.
- ESRCH, with policy equal to SCHED\_QUOTA, if the group identifier required to perform the operation is not valid.

6.60.2.12 int sched\_yield (void)

Yield the processor.

This function move the current thread at the end of its priority group.

Return values

0

See Also

Specification.

References XNRELAX, and XNWEAK.

Referenced by pthread\_yield().

6.61 Smokey API 303

# 6.61 Smokey API

A simple infrastructure for writing and running smoke tests.

A simple infrastructure for writing and running smoke tests. Smokey is based on the Copperplate API, therefore is available over the single and dual kernel Xenomai configurations indifferently.

The API provides a set of services for declaring any number of test plugins, embodied into a test program. Each plugin usually implements a single smoke test, checking a particular feature of interest. Each plugin present in the running executable is automatically detected by the Smokey init routine. In addition, the Smokey API parses all arguments and options passed on the command line to the executable, running pre-defined actions which are therefore automatically recognized by all programs linked against the Smokey library.

Writing smoke tests with Smokey

A smoke test is composed of a routine which implements the test code, and a set of runtime settings/attributes for running such code. The routine prototype shall be:

```
int run_<test_name>(struct smokey_test *t, int argc, char *const argv[])
```

The test routine should return a zero value for success, or any negated POSIX error code for indicating the failure to the test driver (e.g. -EINVAL if some value is found to be wrong).

With *t* referring to the Smokey test descriptor, and *argc*, *argv* the argument count and vector expunged from all the inner options which may have been previously interpreted by the Smokey API and inner layers (such as Copperplate).

The Smokey API provides the services to declare a complete test (named **foo** in this example) as follows:

```
#include <smokey/smokey.h>
smokev test plugin(foo. // test name
                   SMOKEY_ARGLIST( // argument list
                        SMOKEY_INT(some_integer),
                        SMOKEY_STRING(some_string),
                        SMOKEY_BOOL(some_boolean),
                   // description
               "A dummy Smokey-based test plugin\n"
              "\taccepting three optional arguments:\n"
               "\tsome_integer=<value>\n"
               "\tsome_string=<string>\n"
              ''\tsome\_bool[=0/1]\n'
):
static int run_foo(struct smokey_test *t, int argc, char *const argv[])
     char *s_arg = NULL;
     bool b_arg = false;
     int i_arg = 0, ret;
        ret = smokey_parse_args(t, argc, argv);
     if (ret)
         return ret;
     if (SMOKEY_ARG_ISSET(foo, some_integer))
         i_arg = SMOKEY_ARG_INT(foo, some_integer);
     if (SMOKEY_ARG_ISSET(foo, some_string))
        s_arg = SMOKEY_ARG_STRING(foo, some_string);
     if (SMOKEY_ARG_ISSET(foo, some_boolean))
        b_arg = SMOKEY_ARG_INT(foo, some_boolean);
     return run_some_hypothetical_smoke_test_code(i_arg, s_arg, b_arg);
```

As illustrated, a smoke test is at least composed of a test plugin descriptor (i.e. smokey\_test\_plugin()), and a run handler named after the test.

Test arguments

Smokey recognizes three argument declarators, namely: SMOKEY\_INT(name) for a C (signed) integer, SMOKEY\_BOOL(name) for a boolean value and SMOKEY\_STRING(name) for a character string.

Each argument can be passed to the test code as a name=value pair, where *name* should match one of the declarators. Before the test-specific arguments can be accessed, a call to smokey\_parse\_args() must be issued by the test code, passing the parameters received in the run handler.

Once smokey\_parse\_args() has returned, each argument can be checked individually for presence. If a valid argument was matched on the command line, SMOKEY\_ARG\_ISSET(test\_name, arg\_name) returns non-zero. In the latter case, its value can be retrieved by a similar call to SMOKEY\_ARG\_INT(test\_name, arg\_name), SMOKEY\_ARG\_STRING(test\_name, arg\_name) or SMOKEY\_ARG\_BOOL(test\_name, arg\_name).

In the above example, passing "some\_integer=3" on the command line of any program implementing such Smokey-based test would cause the variable i arg to receive "3" as a value.

Pre-defined Smokey options

Any program linked against the Smokey API implicitly recognizes the following options:

—list dumps the list of tests implemented in the program to stdout. The information given includes
the description strings provided in the plugin declarators (smokey\_test\_plugin()). The position and
symbolic name of each test is also issued, which may be used in id specifications with the –run
option (see below).

## Note

Test positions may vary depending on changes to the host program like adding or removing other tests, the symbolic name however is stable and identifies each test uniquely.

-run[=<id[,id...]>] selects the tests to be run, determining the active test list among the overall set
of tests detected in the host program. The test driver code (e.g. implementing a test harness
program on top of Smokey) may then iterate over the smokey\_test\_list for accessing each active
test individually, in the enumeration order specified by the user.

If no argument is passed to -run, Smokey assumes that all tests detected in the current program should be picked, filling *smokey\_test\_list* with tests by increasing position order.

Otherwise, id may be a test position, a symbolic name, or a range thereof delimited by a dash character. A symbolic name may be matched using a glob(3) type regular expression.

id specification may be:

- 0-9, picks tests #0 to #9
- -3, picks tests #0 to #3
- 5-, picks tests #5 to the highest possible test position
- 2-0, picks tests #2 to #0, in decreasing order
- foo, picks test foo only
- 0,1,foo-picks tests #0, #1, and any test from foo up to the last test defined
- fo\* picks any test with a name starting by "fo"
- –keep-going sets the boolean flag smokey\_keep\_going to a non-zero value, indicating to the test
  driver that receiving a failure code from a smoke test should not abort the test loop. This flag is not
  otherwise interpreted by the Smokey API.

6.61 Smokey API 305

Writing a test driver based on the Smokey API


A test driver provides the main() entry point, which should iterate over the test list (*smokey\_test\_list*) prepared by the Smokey API, for running each test individually. The *for\_each\_smokey\_test()* helper is available for iterating over the active test list.

When this entry point is called, all the initialization chores, including the test detection and the active test selection have been performed by the Smokey API already.

Therefore, a possible implementation of a test driver could be as basic as:

# 6.62 Asynchronous acquisition API

Collaboration diagram for Asynchronous acquisition API:



# **Data Structures**

struct a4l\_cmd\_desc

Structure describing the asynchronous instruction.

# **Functions**

int a4l\_snd\_command (a4l\_desc\_t \*dsc, a4l\_cmd\_t \*cmd)

Send a command to an Analoy device.

• int a4l\_snd\_cancel (a4l\_desc\_t \*dsc, unsigned int idx\_subd)

Cancel an asynchronous acquisition.

• int a4l\_set\_bufsize (a4l\_desc\_t \*dsc, unsigned int idx\_subd, unsigned long size)

Change the size of the asynchronous buffer.

int a4l\_get\_bufsize (a4l\_desc\_t \*dsc, unsigned int idx\_subd, unsigned long \*size)

Get the size of the asynchronous buffer.

int a4l\_mark\_bufrw (a4l\_desc\_t \*dsc, unsigned int idx\_subd, unsigned long cur, unsigned long \*new)

Update the asynchronous buffer state.

• int a4l\_poll (a4l\_desc\_t \*dsc, unsigned int idx\_subd, unsigned long ms\_timeout)

Get the available data count.

int a4l\_mmap (a4l\_desc\_t \*dsc, unsigned int idx\_subd, unsigned long size, void \*\*ptr)

Map the asynchronous ring-buffer into a user-space.

# ANALOGY\_CMD\_xxx

# Common command flags definitions

#define A4L\_CMD\_SIMUL 0x1

Do not execute the command, just check it.

#define A4L CMD BULK 0x2

Perform data recovery / transmission in bulk mode.

• #define A4L CMD WRITE 0x4

Perform a command which will write data to the device.

# TRIG xxx

Command triggers flags definitions

#define TRIG NONE 0x00000001

Never trigger.

• #define TRIG\_NOW 0x00000002

Trigger now + N ns.

• #define TRIG FOLLOW 0x00000004

Trigger on next lower level trig.

• #define TRIG TIME 0x00000008

Trigger at time N ns.

#define TRIG\_TIMER 0x00000010

Trigger at rate N ns.

#define TRIG\_COUNT 0x00000020

Trigger when count reaches N.

#define TRIG\_EXT 0x00000040

Trigger on external signal N.

#define TRIG\_INT 0x00000080

Trigger on analogy-internal signal N.

• #define TRIG\_OTHER 0x00000100

Driver defined trigger.

#define TRIG\_WAKE\_EOS 0x0020

Wake up on end-of-scan.

• #define TRIG\_ROUND\_MASK 0x00030000

Trigger not implemented yet.

#define TRIG\_ROUND\_NEAREST 0x00000000

Trigger not implemented yet.

• #define TRIG\_ROUND\_DOWN 0x00010000

Trigger not implemented yet.

• #define TRIG ROUND UP 0x00020000

Trigger not implemented yet.

#define TRIG\_ROUND\_UP\_NEXT 0x00030000

Trigger not implemented yet.

### Channel macros

Specific precompilation macros and constants useful for the channels descriptors tab located in the command structure

• #define CHAN(a) ((a) & 0xffff)

Channel indication macro.

#define RNG(a) (((a) & 0xff) << 16)</li>

Range definition macro.

#define AREF(a) (((a) & 0xf) << 24)</li>

Reference definition macro.

#define FLAGS(a) ((a) & CR\_FLAGS\_MASK)

Flags definition macro.

#define PACK(a, b, c) (CHAN(a) | RNG(b) | AREF(c))

Channel + range + reference definition macro.

• #define PACK\_FLAGS(a, b, c, d) (CHAN(a) | RNG(b) | AREF(c) | FLAGS(d))

Channel + range + reference + flags definition macro.

• #define AREF GROUND 0x00

Analog reference is analog ground.

#define AREF\_COMMON 0x01

Analog reference is analog common.

• #define AREF DIFF 0x02

Analog reference is differential.

#define AREF\_OTHER 0x03

Analog reference is undefined.

# 6.62.1 Detailed Description

# 6.62.2 Function Documentation

```
6.62.2.1 int a4l_get_bufsize ( a4l_desc_t * dsc, unsigned int idx_subd, unsigned long * size )
```

Get the size of the asynchronous buffer.

During asynchronous acquisition, a ring-buffer enables the transfers from / to user-space. Functions like a4l\_read() or a4l\_write() recovers / sends data through this intermediate buffer. Please note, there is one ring-buffer per subdevice capable of asynchronous acquisition. By default, each buffer size is set to 64 KB.

### **Parameters**

| in  | dsc      | Device descriptor filled by a4l_open() (and optionally a4l_fill_desc()) |
|-----|----------|---|
| in  | idx_subd | Index of the concerned subdevice  |
| out | size     | Buffer size   |

## Returns

0 on success. Otherwise:

- -EINVAL is returned if some argument is missing or wrong (Please, type "dmesg" for more info)
- -EFAULT is returned if a user <-> kernel transfer went wrong

References a4I descriptor::fd.

```
6.62.2.2 int a4l_mark_bufrw ( a4l_desc_t * dsc, unsigned int idx_subd, unsigned long cur, unsigned long * new )
```

Update the asynchronous buffer state.

When the mapping of the asynchronous ring-buffer (thanks to a4l\_mmap() is disabled, common read / write syscalls have to be used. In input case, a4l\_read() must be used for:

- the retrieval of the acquired data.
- the notification to the Analogy layer that the acquired data have been consumed, then the area in the ring-buffer which was containing becomes available. In output case, a4l\_write() must be called to:
- send some data to the Analogy layer.
- signal the Analogy layer that a chunk of data in the ring-buffer must be used by the driver.

In mmap configuration, these features are provided by unique function named a4l\_mark\_bufrw(). In input case, a4l\_mark\_bufrw() can :

- recover the count of data newly available in the ring-buffer.
- notify the Analogy layer how many bytes have been consumed. In output case, a4l\_mark\_bufrw()
  can:
- · recover the count of data available for writing.
- notify Analogy that some bytes have been written.

#### **Parameters**

| in  | dsc      | Device descriptor filled by a4l_open() (and optionally a4l_fill_desc()) |
|-----|----------|---|
| in  | idx_subd | Index of the concerned subdevice  |
| in  | cur      | Amount of consumed data   |
| out | new      | Amount of available data  |

#### Returns

0 on success. Otherwise:

- -EINVAL is returned if some argument is missing or wrong; the descriptor and the new pointer should be checked; check also the kernel log ("dmesg")
- -EFAULT is returned if a user <-> kernel transfer went wrong

References a4l\_descriptor::fd.

6.62.2.3 int a4l\_mmap ( a4l\_desc\_t \* dsc, unsigned int idx\_subd, unsigned long size, void \*\* ptr )

Map the asynchronous ring-buffer into a user-space.

## **Parameters**

| in  | dsc      | Device descriptor filled by a4l_open() (and optionally a4l_fill_desc()) |
|-----|----------|---|
| in  | idx_subd | Index of the concerned subdevice  |
| in  | size     | Size of the buffer to map   |
| out | ptr      | Address of the pointer containing the assigned address on return        |

### Returns

0 on success. Otherwise:

- -EINVAL is returned if some argument is missing or wrong, the descriptor and the pointer should be checked; check also the kernel log
- -EPERM is returned if the function is called in an RT context or if the buffer to resize is mapped in user-space (Please, type "dmesg" for more info)
- -EFAULT is returned if a user <-> kernel transfer went wrong
- · -EBUSY is returned if the buffer is already mapped in user-space

References a4I descriptor::fd.

6.62.2.4 int a4l poll ( a4l desc t \* dsc, unsigned int idx subd, unsigned long ms timeout )

Get the available data count.

310 Module Documentation

#### **Parameters**

| in | dsc        | Device descriptor filled by a4l_open() (and optionally a4l_fill_desc())   |
|----|------------|---|
| in | idx_subd   | Index of the concerned subdevice  |
| in | ms_timeout | The number of miliseconds to wait for some data to be available. Passing A4L_INFINITE causes the caller to block indefinitely until some data is available. Passing A4L_NONBLOCK causes the function to return immediately without waiting for any available data |

#### Returns

the available data count. Otherwise:

- -EINVAL is returned if some argument is missing or wrong (Please, type "dmesg" for more info)
- -EFAULT is returned if a user <-> kernel transfer went wrong
- · -EINTR is returned if calling task has been unblocked by a signal

References a4l\_descriptor::fd.

Referenced by a4l\_async\_read(), and a4l\_async\_write().

6.62.2.5 int a4l set bufsize ( a4l desc t \* dsc, unsigned int idx subd, unsigned long size )

Change the size of the asynchronous buffer.

During asynchronous acquisition, a ring-buffer enables the transfers from / to user-space. Functions like a4l\_read() or a4l\_write() recovers / sends data through this intermediate buffer. The function a4l\_set\_bufsize() can change the size of the ring-buffer. Please note, there is one ring-buffer per subdevice capable of asynchronous acquisition. By default, each buffer size is set to 64 KB.

### **Parameters**

| in | dsc      | Device descriptor filled by a4l_open() (and optionally a4l_fill_desc()) |
|----|----------|---|
| in | idx_subd | Index of the concerned subdevice  |
| in | size     | New buffer size, the maximal tolerated value is 16MB (A4L_BUF_MA-XSIZE) |

### Returns

0 on success. Otherwise:

- -EINVAL is returned if the analogy descriptor is not correct or if some argument is missing or wrong (Please, type "dmesg" for more info)
- -EPERM is returned if the function is called in an RT context or if the buffer to resize is mapped in user-space (Please, type "dmesg" for more info)
- -EFAULT is returned if a user <-> kernel transfer went wrong
- -EBUSY is returned if the selected subdevice is already processing an asynchronous operation
- -ENOMEM is returned if the system is out of memory

References a4l\_sys\_bufcfg(), and a4l\_descriptor::fd.

6.62.2.6 int a4l snd cancel ( a4l desc t \* dsc, unsigned int idx subd )

Cancel an asynchronous acquisition.

The function a4l\_snd\_cancel() is devoted to stop an asynchronous acquisition configured thanks to an Analogy command.

### **Parameters**

| in | dsc      | Device descriptor filled by a4l_open() (and optionally a4l_fill_desc()) |
|----|----------|---|
| in | idx_subd | Subdevice index   |

#### Returns

0 on success. Otherwise:

- -EINVAL is returned if some argument is missing or wrong (Please, type "dmesg" for more info)
- -EIO is returned if the selected subdevice does not support asynchronous operation

References a4l\_descriptor::fd.

6.62.2.7 int a4l\_snd\_command ( a4l\_desc\_t \* dsc, a4l\_cmd\_t \* cmd )

Send a command to an Analoy device.

The function a4l\_snd\_command() triggers asynchronous acquisition.

#### **Parameters**

| in | dsc | Device descriptor filled by a4l_open() (and optionally a4l_fill_desc()) |
|----|-----|---|
| in | cmd | Command structure   |

### Returns

0 on success. Otherwise:

- -EINVAL is returned if some argument is missing or wrong (Please, type "dmesg" for more info)
- -ENOMEM is returned if the system is out of memory
- -EFAULT is returned if a user <-> kernel transfer went wrong
- -EIO is returned if the selected subdevice cannot handle command
- -EBUSY is returned if the selected subdevice is already processing an asynchronous operation

References a4l\_descriptor::fd.

# 6.63 Asynchronous acquisition API

Collaboration diagram for Asynchronous acquisition API:



# **Functions**

- int a4l\_async\_read (a4l\_desc\_t \*dsc, void \*buf, size\_t nbyte, unsigned long ms\_timeout)

  Perform asynchronous read operation on the analog input subdevice.
- int a4l\_async\_write (a4l\_desc\_t \*dsc, void \*buf, size\_t nbyte, unsigned long ms\_timeout)

  Perform asynchronous write operation on the analog input subdevice.

# 6.63.1 Detailed Description

# 6.63.2 Function Documentation

6.63.2.1 int a4l\_async\_read ( **a4l\_desc\_t** \* dsc, void \* buf, size\_t nbyte, unsigned long ms\_timeout )

Perform asynchronous read operation on the analog input subdevice.

The function a4l\_async\_read() is only useful for acquisition configured through an Analogy command.

## **Parameters**

| in  | dsc        | Device descriptor filled by a4l_open() (and optionally a4l_fill_desc()) |
|-----|------------|---|
| out | buf        | Input buffer  |
| in  | nbyte      | Number of bytes to read   |
| in  | ms_timeout | The number of miliseconds to wait for some data to be available. Pass-  |
|     |            | ing A4L_INFINITE causes the caller to block indefinitely until some     |
|     |            | data is available. Passing A4L_NONBLOCK causes the function to          |
|     |            | return immediately without waiting for any available data               |

#### Returns

Number of bytes read, otherwise negative error code:

- -EINVAL is returned if some argument is missing or wrong, the descriptor should be checked; check also the kernel log
- -ENOENT is returned if the device's reading subdevice is idle (no command was sent)
- -EFAULT is returned if a user <-> kernel transfer went wrong
- · -EINTR is returned if calling task has been unblocked by a signal

References a4l\_poll(), a4l\_sys\_read(), a4l\_descriptor::fd, and a4l\_descriptor::idx\_read\_subd.

6.63.2.2 int a4l\_async\_write ( **a4l\_desc\_t** \* dsc, void \* buf, size\_t nbyte, unsigned long ms\_timeout )

Perform asynchronous write operation on the analog input subdevice.

The function a4l\_async\_write() is only useful for acquisition configured through an Analogy command.

### **Parameters**

| in | dsc        | Device descriptor filled by a4l_open() (and optionally a4l_fill_desc())  |
|----|------------|--|
| in | buf        | Ouput buffer   |
| in | nbyte      | Number of bytes to write   |
| in | ms_timeout | The number of miliseconds to wait for some free area to be available. Passing A4L_INFINITE causes the caller to block indefinitely until some data is available. Passing A4L_NONBLOCK causes the function to return immediately without waiting any available space to write data. |

### Returns

Number of bytes written, otherwise negative error code:

- -EINVAL is returned if some argument is missing or wrong, the descriptor should be checked; check also the kernel log
- -ENOENT is returned if the device's reading subdevice is idle (no command was sent)
- -EFAULT is returned if a user <-> kernel transfer went wrong
- · -EINTR is returned if calling task has been unblocked by a signal

References a4l\_poll(), a4l\_sys\_write(), a4l\_descriptor::fd, and a4l\_descriptor::idx\_write\_subd.

314 Module Documentation

# 6.64 Descriptor Syscall API

Collaboration diagram for Descriptor Syscall API:



### **Data Structures**

struct a4l\_descriptor

Structure containing device-information useful to users.

# **Functions**

int a4l\_sys\_desc (int fd, a4l\_desc\_t \*dsc, int pass)
 Get a descriptor on an attached device.

# ANALOGY\_xxx\_DESC

Constants used as argument so as to define the description depth to recover

- #define A4L\_BSC\_DESC 0x0
   BSC stands for basic descriptor (device data)
- #define A4L CPLX DESC 0x1

CPLX stands for complex descriptor (subdevice + channel + range data)

- 6.64.1 Detailed Description
- 6.64.2 Function Documentation
- 6.64.2.1 int a4l\_sys\_desc ( int fd, a4l\_desc\_t \* dsc, int pass )

Get a descriptor on an attached device.

Once the device has been attached, the function a4l\_get\_desc() retrieves various information on the device (subdevices, channels, ranges, etc.). The function a4l\_get\_desc() can be called twice:

- The first time, almost all the fields, except sbdata, are set (board\_name, nb\_subd, idx\_read\_subd, idx\_write\_subd, magic, sbsize); the last field, sbdata, is supposed to be a pointer on a buffer, which size is defined by the field sbsize.
- The second time, the buffer pointed by sbdata is filled with data about the subdevices, the channels and the ranges.

Between the two calls, an allocation must be performed in order to recover a buffer large enough to contain all the data. These data are set up according a root-leaf organization (device -> subdevice -> channel -> range). They cannot be accessed directly; specific functions are available so as to retrieve them:

- a4l\_get\_subdinfo() to get some subdevice's characteristics.
- a4l get chaninfo() to get some channel's characteristics.
- a4l\_get\_rnginfo() to get some range's characteristics.

#### **Parameters**

| in  | fd   | Driver file descriptor   |
|-----|------|--|
| out | dsc  | Device descriptor  |
| in  | pass | Description level to retrieve:   |
|     |      | <ul> <li>A4L_BSC_DESC to get the basic descriptor (notably the size of<br/>the data buffer to allocate).</li> </ul>  |
|     |      | <ul> <li>A4L_CPLX_DESC to get the complex descriptor, the data buffer<br/>is filled with characteristics about the subdevices, the channels<br/>and the ranges.</li> </ul> |

#### Returns

0 on success. Otherwise:

- -EINVAL is returned if some argument is missing or wrong; the pass argument should be checked; check also the kernel log ("dmesg")
- -EFAULT is returned if a user <-> kernel transfer went wrong
- -ENODEV is returned if the descriptor is incoherent (the device may be unattached)

References A4L\_BSC\_DESC, a4l\_descriptor::magic, a4l\_descriptor::sbdata, and a4l\_descriptor::sbsize.

Referenced by a4l\_fill\_desc(), and a4l\_open().

316 Module Documentation

# 6.65 Descriptor API

Collaboration diagram for Descriptor API:



# **Functions**

• int a4l\_open (a4l\_desc\_t \*dsc, const char \*fname)

Open an Analogy device and basically fill the descriptor.

int a4l\_close (a4l\_desc\_t \*dsc)

Close the Analogy device related with the descriptor.

• int a4l\_fill\_desc (a4l\_desc\_t \*dsc)

Fill the descriptor with subdevices, channels and ranges data.

• int a4l\_get\_subdinfo (a4l\_desc\_t \*dsc, unsigned int subd, a4l\_sbinfo\_t \*\*info)

Get an information structure on a specified subdevice.

- int a4l\_get\_chinfo (a4l\_desc\_t \*dsc, unsigned int subd, unsigned int chan, a4l\_chinfo\_t \*\*info)

  Get an information structure on a specified channel.
- int a4l\_get\_rnginfo (a4l\_desc\_t \*dsc, unsigned int subd, unsigned int chan, unsigned int rng, a4l\_rnginfo t \*\*info)

Get an information structure on a specified range.

# 6.65.1 Detailed Description

This is the API interface used to fill and use Analogy device descriptor structure

# 6.65.2 Function Documentation

6.65.2.1 int a4l\_close ( a4l\_desc\_t \* dsc )

Close the Analogy device related with the descriptor.

The file descriptor is associated with a context. The context is one of the enabler of asynchronous transfers. So, by closing the file descriptor, the programer must keep in mind that the currently occuring asynchronous transfer will cancelled.

## Parameters

| in | dsc | Device descriptor |
|----|-----|-------------------|

6.65 Descriptor API 317

#### Returns

0 on success. Otherwise:

 -EINVAL is returned if some argument is missing or wrong; the the dsc pointer should be checked; check also the kernel log ("dmesg")

References a4l\_sys\_close(), and a4l\_descriptor::fd.

```
6.65.2.2 int a4l_fill_desc ( a4l_desc_t * dsc )
```

Fill the descriptor with subdevices, channels and ranges data.

#### **Parameters**

| in | dsc | Device descriptor partly filled by a4l_open(). |
|----|-----|--|
|    | 400 | Bovios descriptor partly fined by a fi_opon(). |

#### Returns

0 on success. Otherwise:

- -EINVAL is returned if some argument is missing or wrong; the the dsc pointer should be checked; check also the kernel log ("dmesg")
- -EFAULT is returned if a user <-> kernel transfer went wrong
- -ENODEV is returned if the descriptor is incoherent (the device may be unattached)

References A4L\_CPLX\_DESC, a4l\_sys\_desc(), a4l\_descriptor::fd, and a4l\_descriptor::magic.

6.65.2.3 int a4l\_get\_chinfo ( **a4l\_desc\_t** \* dsc, unsigned int subd, unsigned int chan, a4l\_chinfo\_t \*\* info )

Get an information structure on a specified channel.

#### **Parameters**

| in  | dsc  | Device descriptor filled by a4l_open() and a4l_fill_desc() |
|-----|------|--|
| in  | subd | Subdevice index  |
| in  | chan | Channel index  |
| out | info | Channel information structure                              |

# Returns

0 on success. Otherwise:

 -EINVAL is returned if some argument is missing or wrong; subd, chan and the dsc pointer should be checked; check also the kernel log ("dmesg"); WARNING: a4l\_fill\_desc() should be called before using a4l\_get\_chinfo()

References a4l\_descriptor::magic, a4l\_descriptor::nb\_subd, and a4l\_descriptor::sbdata.

Referenced by a4l\_find\_range().

6.65.2.4 int a4l\_get\_rnginfo ( **a4l\_desc\_t** \* dsc, unsigned int subd, unsigned int chan, unsigned int rng, a4l rnginfo t \*\* info )

Get an information structure on a specified range.

#### **Parameters**

| in  | dsc  | Device descriptor filled by a4l_open() and a4l_fill_desc() |
|-----|------|--|
| in  | subd | Subdevice index  |
| in  | chan | Channel index  |
| in  | rng  | Range index  |
| out | info | Range information structure                                |

### Returns

0 on success. Otherwise:

 -EINVAL is returned if some argument is missing or wrong; subd, chan, rng and the dsc pointer should be checked; check also the kernel log ("dmesg"); WARNING: a4l\_fill\_desc() should be called before using a4l\_get\_rnginfo()

References a4l\_descriptor::magic, a4l\_descriptor::nb\_subd, and a4l\_descriptor::sbdata.

Referenced by a4l\_find\_range().

6.65.2.5 int a4l get subdinfo ( a4l desc t \* dsc, unsigned int subd, a4l sbinfo t \*\* info )

Get an information structure on a specified subdevice.

### **Parameters**

| in  | dsc  | Device descriptor filled by a4l_open() and a4l_fill_desc() |
|-----|------|--|
| in  | subd | Subdevice index  |
| out | info | Subdevice information structure                            |

## Returns

0 on success. Otherwise:

• -EINVAL is returned if some argument is missing or wrong; subd and the dsc pointer should be checked; check also the kernel log ("dmesg"); WARNING: a4l\_fill\_desc() should be called before using a4l\_get\_subdinfo().

References a4I descriptor::magic, a4I descriptor::nb subd, and a4I descriptor::sbdata.

Referenced by a4l\_sync\_dio().

6.65.2.6 int a4l\_open ( a4l\_desc\_t \* dsc, const char \* fname )

Open an Analogy device and basically fill the descriptor.

# **Parameters**

| out | dsc   | Device descriptor |
|-----|-------|-------------------|
| in  | fname | Device name       |

# Returns

0 on success. Otherwise:

- -EINVAL is returned if some argument is missing or wrong; the fname and the dsc pointer should be checked; check also the kernel log ("dmesg")
- -EFAULT is returned if a user <-> kernel transfer went wrong

References A4L\_BSC\_DESC, a4l\_sys\_close(), a4l\_sys\_desc(), a4l\_sys\_open(), and a4l\_descriptor::fd.

# 6.66 Range / conversion API

Collaboration diagram for Range / conversion API:



# **Functions**

• int a4l\_sizeof\_chan (a4l\_chinfo\_t \*chan)

Get the size in memory of an acquired element.

int a4l\_sizeof\_subd (a4l\_sbinfo\_t \*subd)

Get the size in memory of a digital acquired element.

• int a4l\_find\_range (a4l\_desc\_t \*dsc, unsigned int idx\_subd, unsigned int idx\_chan, unsigned long unit, double min, double max, a4l\_rnginfo\_t \*\*rng)

Find the must suitable range.

• int a4l\_rawtoul (a4l\_chinfo\_t \*chan, unsigned long \*dst, void \*src, int cnt)

Unpack raw data (from the driver) into unsigned long values.

• int a4l\_rawtof (a4l\_chinfo\_t \*chan, a4l\_rnginfo\_t \*rng, float \*dst, void \*src, int cnt)

Convert raw data (from the driver) to float-typed samples.

int a4l\_rawtod (a4l\_chinfo\_t \*chan, a4l\_rnginfo\_t \*rng, double \*dst, void \*src, int cnt)

Convert raw data (from the driver) to double-typed samples.

• int a4l\_ultoraw (a4l\_chinfo\_t \*chan, void \*dst, unsigned long \*src, int cnt)

Pack unsigned long values into raw data (for the driver)

• int a4l\_ftoraw (a4l\_chinfo\_t \*chan, a4l\_rnginfo\_t \*rng, void \*dst, float \*src, int cnt)

Convert float-typed samples to raw data (for the driver)

• int a4l\_dtoraw (a4l\_chinfo\_t \*chan, a4l\_rnginfo\_t \*rng, void \*dst, double \*src, int cnt)

Convert double-typed samples to raw data (for the driver)

# 6.66.1 Detailed Description

### 6.66.2 Function Documentation

6.66.2.1 int a4l dtoraw (a4l chinfo t\*chan, a4l rnginfo t\*rng, void\*dst, double\*src, int cnt)

Convert double-typed samples to raw data (for the driver)

## **Parameters**

| in | chan | Channel descriptor |
|----|------|--------------------|
| in | rng  | Range descriptor   |

| out | dst | Ouput buffer                   |
|-----|-----|--------------------------------|
| in  | src | Input buffer                   |
| in  | cnt | Count of conversion to perform |

#### Returns

the count of conversion performed, otherwise a negative error code:

 -EINVAL is returned if some argument is missing or wrong; chan, rng and the pointers should be checked; check also the kernel log ("dmesg"); WARNING: a4l\_fill\_desc() should be called before using a4l\_dtoraw()

References A4L RNG FACTOR, and a4I sizeof chan().

6.66.2.2 int a4l\_find\_range ( a4l\_desc\_t \* dsc, unsigned int idx\_subd, unsigned int idx\_chan, unsigned long unit, double min, double max, a4l\_rnginfo\_t \*\* rng )

# Find the must suitable range.

#### **Parameters**

| in  | dsc      | Device descriptor filled by a4l_open() and a4l_fill_desc() |
|-----|----------|--|
| in  | idx_subd | Index of the concerned subdevice                           |
| in  | idx_chan | Index of the concerned channel                             |
| in  | unit     | Unit type used in the range                                |
| in  | min      | Minimal limit value  |
| in  | max      | Maximal limit value  |
| out | rng      | Found range  |

## Returns

The index of the most suitable range on success. Otherwise:

- -ENOENT is returned if a suitable range is not found.
- -EINVAL is returned if some argument is missing or wrong; idx\_subd, idx\_chan and the dsc pointer should be checked; check also the kernel log ("dmesg"); WARNING: a4l\_fill\_desc() should be called before using a4l\_find\_range()

References a4l\_get\_chinfo(), a4l\_get\_rnginfo(), A4L\_RNG\_FACTOR, A4L\_RNG\_UNIT, and a4l\_descriptor::magic.

6.66.2.3 int a4l\_ftoraw ( a4l\_chinfo\_t \* chan, a4l\_rnginfo\_t \* rng, void \* dst, float \* src, int cnt )

Convert float-typed samples to raw data (for the driver)

# **Parameters**

| in  | chan | Channel descriptor |
|-----|------|--------------------|
| in  | rng  | Range descriptor   |
| out | dst  | Ouput buffer       |
| in  | src  | Input buffer       |

| in | cnt                                     | Count of conversion to perform   |
|----|---|--|
|    | • | parameter and pa |

#### Returns

the count of conversion performed, otherwise a negative error code:

• -EINVAL is returned if some argument is missing or wrong; chan, rng and the pointers should be checked; check also the kernel log ("dmesg"); WARNING: a4l\_fill\_desc() should be called before using a4l\_ftoraw()

References A4L\_RNG\_FACTOR, and a4l\_sizeof\_chan().

Convert raw data (from the driver) to double-typed samples.

## **Parameters**

| in  | chan | Channel descriptor             |
|-----|------|--------------------------------|
| in  | rng  | Range descriptor               |
| out | dst  | Ouput buffer                   |
| in  | src  | Input buffer                   |
| in  | cnt  | Count of conversion to perform |

#### Returns

the count of conversion performed, otherwise a negative error code:

 -EINVAL is returned if some argument is missing or wrong; chan, rng and the pointers should be checked; check also the kernel log ("dmesg"); WARNING: a4l\_fill\_desc() should be called before using a4l\_rawtod()

References A4L RNG FACTOR, and a4l sizeof chan().

Convert raw data (from the driver) to float-typed samples.

#### **Parameters**

| in  | chan | Channel descriptor             |
|-----|------|--------------------------------|
| in  | rng  | Range descriptor               |
| out | dst  | Ouput buffer                   |
| in  | src  | Input buffer                   |
| in  | cnt  | Count of conversion to perform |

#### Returns

the count of conversion performed, otherwise a negative error code:

 -EINVAL is returned if some argument is missing or wrong; chan, rng and the pointers should be checked; check also the kernel log ("dmesg"); WARNING: a4l\_fill\_desc() should be called before using a4l\_rawtod()

References A4L RNG FACTOR, and a4l sizeof chan().

6.66.2.6 int a4l\_rawtoul ( a4l\_chinfo\_t \* chan, unsigned long \* dst, void \* src, int cnt )

Unpack raw data (from the driver) into unsigned long values.

This function takes as input driver-specific data and scatters each element into an entry of an unsigned long table. It is a convenience routine which performs no conversion, just copy.

#### **Parameters**

| in  | chan | Channel descriptor        |
|-----|------|---------------------------|
| out | dst  | Ouput buffer              |
| in  | src  | Input buffer              |
| in  | cnt  | Count of transfer to copy |

#### Returns

the count of copy performed, otherwise a negative error code:

• -EINVAL is returned if some argument is missing or wrong; chan, dst and src pointers should be checked; check also the kernel log ("dmesg"); WARNING: a4l\_fill\_desc() should be called before using a4l\_ultoraw()

References a4l\_sizeof\_chan().

Get the size in memory of an acquired element.

According to the board, the channels have various acquisition widths. With values like 8, 16 or 32, there is no problem finding out the size in memory (1, 2, 4); however with widths like 12 or 24, this function might be helpful to guess the size needed in RAM for a single acquired element.

## **Parameters**

| in | chan | Channel descriptor |
|----|------|--------------------|

## Returns

the size in memory of an acquired element, otherwise a negative error code:

· -EINVAL is returned if the argument chan is NULL

Referenced by a4l\_dtoraw(), a4l\_ftoraw(), a4l\_rawtod(), a4l\_rawtof(), a4l\_rawtoul(), and a4l\_ultoraw().

```
6.66.2.8 int a4l_sizeof_subd ( a4l_sbinfo_t * subd )
```

Get the size in memory of a digital acquired element.

This function is only useful for DIO subdevices. Digital subdevices are a specific kind of subdevice on which channels are regarded as bits composing the subdevice's bitfield. During a DIO acquisition, all bits are sampled. Therefore, a4l\_sizeof\_chan() is useless in this case and we have to use a4l\_sizeof\_subd(). With bitfields which sizes are 8, 16 or 32, there is no problem finding out the size in memory (1, 2, 4); however with widths like 12 or 24, this function might be helpful to guess the size needed in RAM for a single acquired element.

#### **Parameters**

| in | subd | Subdevice descriptor |
|----|------|----------------------|
|----|------|----------------------|

### Returns

the size in memory of an acquired element, otherwise a negative error code:

• -EINVAL is returned if the argument chan is NULL or if the subdevice is not a digital subdevice

References A4L\_SUBD\_DI, A4L\_SUBD\_DIO, A4L\_SUBD\_DO, and A4L\_SUBD\_TYPES. Referenced by a4l\_sync\_dio().

6.66.2.9 int a4l\_ultoraw ( a4l\_chinfo\_t \* chan, void \* dst, unsigned long \* src, int cnt )

Pack unsigned long values into raw data (for the driver)

This function takes as input a table of unsigned long values and gather them according to the channel width. It is a convenience routine which performs no conversion, just formatting.

#### **Parameters**

| in  | chan | Channel descriptor        |
|-----|------|---------------------------|
| out | dst  | Ouput buffer              |
| in  | src  | Input buffer              |
| in  | cnt  | Count of transfer to copy |

### Returns

the count of copy performed, otherwise a negative error code:


 -EINVAL is returned if some argument is missing or wrong; chan, dst and src pointers should be checked; check also the kernel log ("dmesg"); WARNING: a4l\_fill\_desc() should be called before using a4l\_ultoraw()

References a4I sizeof chan().

Module Documentation

# 6.67 Level 1 API

Collaboration diagram for Level 1 API:

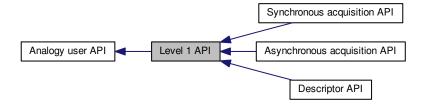

# Modules

- Asynchronous acquisition API
- Descriptor API
- Synchronous acquisition API

# 6.67.1 Detailed Description

# 6.68 Synchronous acquisition API

Collaboration diagram for Synchronous acquisition API:



# **Data Structures**

• struct a4l instruction

Structure describing the synchronous instruction.

struct a4l\_instruction\_list

Structure describing the list of synchronous instructions.

# Macros

#define A4L\_INSN\_WAIT\_MAX 100000
 Maximal wait duration.

# **Functions**

- int a4l\_snd\_insnlist (a4l\_desc\_t \*dsc, a4l\_insnlst\_t \*arg)
   Perform a list of synchronous acquisition misc operations.
- int a4l\_snd\_insn (a4l\_desc\_t \*dsc, a4l\_insn\_t \*arg)

Perform a synchronous acquisition misc operation.

# Instruction type

Flags to define the type of instruction

- #define A4L\_INSN\_READ (0 | A4L\_INSN\_MASK\_READ)
   Read instruction.
- #define A4L\_INSN\_WRITE (1 | A4L\_INSN\_MASK\_WRITE)

Write instruction.

#define A4L\_INSN\_BITS

"Bits" instruction

• #define A4L\_INSN\_CONFIG

Configuration instruction.

#define A4L INSN GTOD

Get time instruction.

• #define A4L\_INSN\_WAIT

Wait instruction.

• #define A4L INSN INTTRIG

Trigger instruction (to start asynchronous acquisition)

326 Module Documentation

# Configuration instruction type

Values to define the type of configuration instruction

- #define A4L INSN CONFIG DIO INPUT 0
- #define A4L INSN CONFIG DIO OUTPUT 1
- #define A4L\_INSN\_CONFIG\_DIO\_OPENDRAIN 2
- #define A4L\_INSN\_CONFIG\_ANALOG\_TRIG 16
- #define A4L INSN CONFIG ALT SOURCE 20
- #define A4L INSN CONFIG DIGITAL TRIG 21
- #define A4L INSN CONFIG BLOCK SIZE 22
- #define A4L INSN CONFIG TIMER 1 23
- #define A4L INSN CONFIG FILTER 24
- #define A4L\_INSN\_CONFIG\_CHANGE\_NOTIFY 25
- #define A4L\_INSN\_CONFIG\_SERIAL\_CLOCK 26
- #define A4L INSN CONFIG BIDIRECTIONAL DATA 27
- #define A4L INSN CONFIG DIO QUERY 28
- #define A4L INSN CONFIG PWM OUTPUT 29
- #define A4L\_INSN\_CONFIG\_GET\_PWM\_OUTPUT 30
- #define A4L\_INSN\_CONFIG\_ARM 31
- #define A4L INSN CONFIG DISARM 32
- #define A4L INSN CONFIG GET COUNTER STATUS 33
- #define A4L INSN CONFIG RESET 34
- #define A4L\_INSN\_CONFIG\_GPCT\_SINGLE\_PULSE\_GENERATOR 1001 /\* Use CTR as single pulsegenerator \*/
- #define A4L\_INSN\_CONFIG\_GPCT\_PULSE\_TRAIN\_GENERATOR 1002 /\* Use CTR as pulse-traingenerator \*/
- #define A4L\_INSN\_CONFIG\_GPCT\_QUADRATURE\_ENCODER 1003 /\* Use the counter as encoder \*/
- #define A4L\_INSN\_CONFIG\_SET\_GATE\_SRC 2001 /\* Set gate source \*/
- #define A4L\_INSN\_CONFIG\_GET\_GATE\_SRC 2002 /\* Get gate source \*/
- #define A4L\_INSN\_CONFIG\_SET\_CLOCK\_SRC 2003 /\* Set master clock source \*/
- #define A4L\_INSN\_CONFIG\_GET\_CLOCK\_SRC 2004 /\* Get master clock source \*/
- #define A4L\_INSN\_CONFIG\_SET\_OTHER\_SRC 2005 /\* Set other source \*/
- #define A4L\_INSN\_CONFIG\_SET\_COUNTER\_MODE 4097
- #define A4L INSN CONFIG SET ROUTING 4099
- #define A4L INSN CONFIG GET ROUTING 4109

# Counter status bits

Status bits for INSN\_CONFIG\_GET\_COUNTER\_STATUS

- #define A4L COUNTER ARMED 0x1
- #define A4L\_COUNTER\_COUNTING 0x2
- #define A4L COUNTER TERMINAL COUNT 0x4

### IO direction

Values to define the IO polarity

- #define A4L INPUT 0
- #define A4L OUTPUT 1
- #define A4L OPENDRAIN 2

# Events types

Values to define the Analogy events. They might used to send some specific events through the instruction interface.

- #define A4L EV START 0x00040000
- #define A4L EV SCAN BEGIN 0x00080000
- #define A4L EV CONVERT 0x00100000
- #define **A4L\_EV\_SCAN\_END** 0x00200000
- #define **A4L\_EV\_STOP** 0x00400000

# 6.68.1 Detailed Description

### 6.68.2 Function Documentation

```
6.68.2.1 int a4l snd insn ( a4l desc t*dsc, a4l insn t*arg )
```

Perform a synchronous acquisition misc operation.

The function a4l snd insn() triggers a synchronous acquisition.

#### **Parameters**

| in | dsc | Device descriptor filled by a4l_open() (and optionally a4l_fill_desc()) |
|----|-----|---|
| in | arg | Instruction structure   |

#### Returns

0 on success. Otherwise:

- -EINVAL is returned if some argument is missing or wrong (Please, type "dmesg" for more info)
- -EFAULT is returned if a user <-> kernel transfer went wrong
- -ENOMEM is returned if the system is out of memory

References a4I descriptor::fd.

Referenced by a4l\_config\_subd(), a4l\_sync\_dio(), a4l\_sync\_read(), and a4l\_sync\_write().

```
6.68.2.2 int a4l_snd_insnlist ( a4l_desc_t * dsc, a4l_insnlst_t * arg )
```

Perform a list of synchronous acquisition misc operations.

The function a4l\_snd\_insnlist() is able to send many synchronous instructions on a various set of sub-devices, channels, etc.

# **Parameters**

| in | dsc | Device descriptor filled by a4l_open() (and optionally a4l_fill_desc()) |
|----|-----|---|
| in | arg | Instructions list structure   |

# Returns

0 on success. Otherwise:

- -EINVAL is returned if some argument is missing or wrong (Please, type "dmesg" for more info)
- -EFAULT is returned if a user <-> kernel transfer went wrong

• -ENOMEM is returned if the system is out of memory


References a4I\_descriptor::fd.

Referenced by a4l\_sync\_read(), and a4l\_sync\_write().

6.69 Level 2 API 329

## 6.69 Level 2 API

Collaboration diagram for Level 2 API:

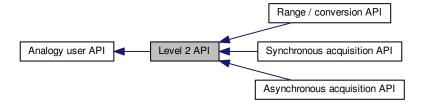

### Modules


- Asynchronous acquisition API
- Range / conversion API
- Synchronous acquisition API

## 6.69.1 Detailed Description

330 Module Documentation

## 6.70 Synchronous acquisition API

Collaboration diagram for Synchronous acquisition API:



### **Functions**

• int a4l\_sync\_write (a4l\_desc\_t \*dsc, unsigned int idx\_subd, unsigned int chan\_desc, unsigned int ns\_delay, void \*buf, size\_t nbyte)

Perform a synchronous acquisition write operation.

• int a4l\_sync\_read (a4l\_desc\_t \*dsc, unsigned int idx\_subd, unsigned int chan\_desc, unsigned int ns\_delay, void \*buf, size\_t nbyte)

Perform a synchronous acquisition read operation.

- int a4l\_sync\_dio (a4l\_desc\_t \*dsc, unsigned int idx\_subd, void \*mask, void \*buf)
  - Perform a synchronous acquisition digital acquisition.
- int a4l\_config\_subd (a4l\_desc\_t \*dsc, unsigned int idx\_subd, unsigned int type,...)

  Configure a subdevice.

### 6.70.1 Detailed Description

### 6.70.2 Function Documentation

6.70.2.1 int a4l config subd ( a4l desc t \* dsc, unsigned int idx subd, unsigned int type, ... )

#### Configure a subdevice.

a4l\_config\_subd() takes a variable count of arguments. According to the configuration type, some additional argument is necessary:

- A4L\_INSN\_CONFIG\_DIO\_INPUT: the channel index (unsigned int)
- A4L\_INSN\_CONFIG\_DIO\_OUTPUT: the channel index (unsigned int)
- A4L\_INSN\_CONFIG\_DIO\_QUERY: the returned DIO polarity (unsigned int \*)

#### **Parameters**

| in | dsc      | Device descriptor filled by a4l_open() (and optionally a4l_fill_desc()) |
|----|----------|---|
| in | idx_subd | Index of the concerned subdevice  |
| in | type     | Configuration parameter   |

#### Returns

0 on success. Otherwise:

- -EINVAL is returned if some argument is missing or wrong (Please, type "dmesg" for more info)
- -ENOSYS is returned if the configuration parameter is not supported

References A4L\_INSN\_CONFIG, a4l\_snd\_insn(), CHAN, a4l\_instruction::chan\_desc, a4l\_instruction::data\_size, and a4l\_instruction::type.

6.70.2.2 int a4l\_sync\_dio ( a4l\_desc\_t \* dsc, unsigned int idx\_subd, void \* mask, void \* buf )

Perform a synchronous acquisition digital acquisition.

#### **Parameters**

| in     | dsc      | Device descriptor filled by a4l_open() (and optionally a4l_fill_desc()) |
|--------|----------|---|
| in     | idx_subd | Index of the concerned subdevice  |
| in     | mask     | Write mask which indicates which bit(s) must be modified                |
| in,out | buf      | Input / output buffer   |

#### Returns

Number of bytes read, otherwise negative error code:

- -EINVAL is returned if some argument is missing or wrong (Please, type "dmesg" for more info)
- -EFAULT is returned if a user <-> kernel transfer went wrong
- -ENOMEM is returned if the system is out of memory
- -ENOSYS is returned if the driver does not provide any handler "instruction bits"

References a4l\_get\_subdinfo(), A4L\_INSN\_BITS, a4l\_sizeof\_subd(), a4l\_snd\_insn(), a4l\_instruction::data\_size, and a4l\_instruction::type.

6.70.2.3 int a4l\_sync\_read ( **a4l\_desc\_t** \* dsc, unsigned int idx\_subd, unsigned int chan\_desc, unsigned int ns\_delay, void \* buf, size\_t nbyte )

Perform a synchronous acquisition read operation.

#### **Parameters**

| in | dsc       | Device descriptor filled by a4l_open() (and optionally a4l_fill_desc()) |
|----|-----------|---|
| in | idx_subd  | Index of the concerned subdevice  |
| in | chan_desc | Channel descriptor (channel, range and reference)                       |
| in | ns_delay  | Optional delay (in nanoseconds) to wait between the setting of the in-  |
|    |           | put channel and sample(s) acquisition(s).                               |
| in | buf       | Input buffer  |
| in | nbyte     | Number of bytes to read   |

### Returns

Number of bytes read, otherwise negative error code:

- -EINVAL is returned if some argument is missing or wrong (Please, type "dmesg" for more info)
- -EFAULT is returned if a user <-> kernel transfer went wrong

• -ENOMEM is returned if the system is out of memory

References A4L\_INSN\_READ, A4L\_INSN\_WAIT, a4l\_snd\_insn(), a4l\_snd\_insnlist(), a4l\_instruction\_list::count, a4l\_instruction::data, a4l\_instruction::data\_size, and a4l\_instruction::type.

6.70.2.4 int a4l\_sync\_write ( **a4l\_desc\_t** \* dsc, unsigned int idx\_subd, unsigned int chan\_desc, unsigned int ns\_delay, void \* buf, size\_t nbyte )

Perform a synchronous acquisition write operation.

#### **Parameters**

| in | dsc       | Device descriptor filled by a4l_open() (and optionally a4l_fill_desc()) |
|----|-----------|---|
| in | idx_subd  | Index of the concerned subdevice  |
| in | chan_desc | Channel descriptor (channel, range and reference)                       |
| in | ns_delay  | Optional delay (in nanoseconds) to wait between the setting of the in-  |
|    |           | put channel and sample(s) acquisition(s).                               |
| in | buf       | Output buffer   |
| in | nbyte     | Number of bytes to write  |

#### Returns


Number of bytes written, otherwise negative error code:

- -EINVAL is returned if some argument is missing or wrong (Please, type "dmesg" for more info)
- -EFAULT is returned if a user <-> kernel transfer went wrong
- -ENOMEM is returned if the system is out of memory

References A4L\_INSN\_WAIT, A4L\_INSN\_WRITE, a4l\_snd\_insn(), a4l\_snd\_insnlist(), a4l\_instruction\_list::count, a4l\_instruction::data, a4l\_instruction::data size, and a4l\_instruction::type.

# 6.71 Analogy user API

Collaboration diagram for Analogy user API:

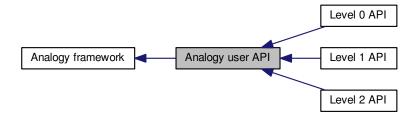

## Modules

- Level 1 API
- Level 2 API
- Level 0 API


## 6.71.1 Detailed Description

This is the API interface of Analogy library

334 Module Documentation

## 6.72 Level 0 API

Collaboration diagram for Level 0 API:

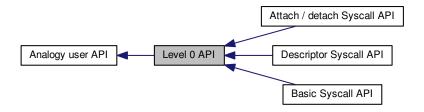

### Modules

- Descriptor Syscall API
- Basic Syscall API
- Attach / detach Syscall API

## 6.72.1 Detailed Description

System call interface to core Analogy services

This interface should not be used directly by applications.

## 6.73 Basic Syscall API

Collaboration diagram for Basic Syscall API:



### **Functions**

• int a4l\_sys\_open (const char \*fname)

Open an Analogy device.

• int a4l\_sys\_close (int fd)

Close an Analogy device.

int a4l\_sys\_read (int fd, void \*buf, size\_t nbyte)

Read from an Analogy device.

• int a4l\_sys\_write (int fd, void \*buf, size\_t nbyte)

Write to an Analogy device.

### 6.73.1 Detailed Description

### 6.73.2 Function Documentation

6.73.2.1 int a4l\_sys\_close ( int fd )

Close an Analogy device.

**Parameters** 

| The descriptor as returned by a41_sys_open() | in | fd | File descriptor as returned by a4l_sys_open() |
|--|----|----|---|
|--|----|----|---|

### Returns

0 on success, otherwise a negative error code.

Referenced by a4l\_close(), and a4l\_open().

6.73.2.2 int a4l\_sys\_open ( const char \* fname )

Open an Analogy device.

**Parameters** 

| in | fname | Device name |
|----|-------|-------------|

### Returns

Positive file descriptor value on success, otherwise a negative error code.

Referenced by a4l\_open().

6.73.2.3 int a4l\_sys\_read ( int fd, void \* buf, size\_t nbyte )

Read from an Analogy device.

The function a4l\_read() is only useful for acquisition configured through an Analogy command.

#### **Parameters**

| in  | fd    | File descriptor as returned by a4l_sys_open() |
|-----|-------|---|
| out | buf   | Input buffer                                  |
| in  | nbyte | Number of bytes to read                       |

#### Returns

Number of bytes read. Otherwise:

- -EINVAL is returned if some argument is missing or wrong (Please, type "dmesg" for more info)
- -ENOENT is returned if the device's reading subdevice is idle (no command was sent)
- -EFAULT is returned if a user <-> kernel transfer went wrong
- · -EINTR is returned if calling task has been unblocked by a signal

Referenced by a4l\_async\_read().

6.73.2.4 int a4I sys write (int fd, void \* buf, size t nbyte)

Write to an Analogy device.

The function a4l\_write() is only useful for acquisition configured through an Analogy command.

#### **Parameters**

| in | fd    | File descriptor as returned by a4l_sys_open() |
|----|-------|---|
| in | buf   | Output buffer                                 |
| in | nbyte | Number of bytes to write                      |

### Returns

Number of bytes written. Otherwise:

- -EINVAL is returned if some argument is missing or wrong (Please, type "dmesg" for more info)
- -ENOENT is returned if the device's writing subdevice is idle (no command was sent)
- -EFAULT is returned if a user <-> kernel transfer went wrong
- -EINTR is returned if calling task has been unblocked by a signal

Referenced by a4l async write().

## 6.74 Attach / detach Syscall API

Collaboration diagram for Attach / detach Syscall API:



### **Functions**

- int a4l\_sys\_attach (int fd, a4l\_lnkdesc\_t \*arg)
   Attach an Analogy device to a driver.
- int a4l\_sys\_detach (int fd)

Detach an Analogy device from a driver.

• int a4l\_sys\_bufcfg (int fd, unsigned int idx\_subd, unsigned long size)

Configure the buffer size.

## 6.74.1 Detailed Description

### 6.74.2 Function Documentation

6.74.2.1 int a4l\_sys\_attach (int fd, a4l\_lnkdesc\_t \* arg )

### Attach an Analogy device to a driver.

### **Parameters**

| in | fd  | File descriptor as returned by a4l_sys_open() |
|----|-----|---|
| in | arg | Link descriptor argument                      |

#### Returns

0 on success. Otherwise:

- -ENOMEM is returned if the system is out of memory
- -EINVAL is returned if some argument is missing or wrong (Please, type "dmesg" for more info)
- -EFAULT is returned if a user <-> kernel transfer went wrong
- -ENODEV is returned in case of internal error (Please, type "dmesg" for more info)
- -ENXIO is returned in case of internal error (Please, type "dmesg" for more info)

### 6.74.2.2 int a4l\_sys\_bufcfg (int fd, unsigned int idx\_subd, unsigned long size )

### Configure the buffer size.

This function can configure the buffer size of the file descriptor currently in use. If the subdevice index is set to A4L\_BUF\_DEFMAGIC, it can also define the default buffser size at open time.

| in | fd       | File descriptor as returned by a4l_sys_open() |
|----|----------|---|
| in | idx_subd | Index of the concerned subdevice              |
| in | size     | Buffer size to be set                         |

#### Returns

0 on success. Otherwise:

- -EINVAL is returned if some argument is missing or wrong (Please, type "dmesg" for more info)
- -EPERM is returned if the function is called in an RT context or if the buffer to resize is mapped in user-space (Please, type "dmesg" for more info)
- -EFAULT is returned if a user <-> kernel transfer went wrong
- -EBUSY is returned if the selected subdevice is already processing an asynchronous operation
- · -ENOMEM is returned if the system is out of memory

Referenced by a4l\_set\_bufsize().

6.74.2.3 int a4l\_sys\_detach (int fd)

Detach an Analogy device from a driver.

#### **Parameters**

| in | fd   File descriptor as returned by a4l_sys_open() |  |
|----|--|--|
|----|--|--|

### Returns

0 on success. Otherwise:

- -EINVAL is returned if some argument is missing or wrong (Please, type "dmesg" for more info)
- -EBUSY is returned if the device to be detached is in use
- -EPERM is returned if the devive to be detached still has some buffer mapped in user-space
- -ENODEV is returned in case of internal error (Please, type "dmesg" for more info)
- -ENXIO is returned in case of internal error (Please, type "dmesg" for more info)

6.75 Alarm services 339

### 6.75 Alarm services

General-purpose watchdog timers.

Collaboration diagram for Alarm services:



### **Data Structures**

struct RT\_ALARM\_INFO
 Alarm status descriptor.

### **Functions**

- int rt\_alarm\_start (RT\_ALARM \*alarm, RTIME value, RTIME interval)
   Start an alarm.
- int rt\_alarm\_stop (RT\_ALARM \*alarm)

Stop an alarm.

- int rt\_alarm\_inquire (RT\_ALARM \*alarm, RT\_ALARM\_INFO \*info)

  Query alarm status.
- int rt\_alarm\_create (RT\_ALARM \*alarm, const char \*name, void(\*handler)(void \*arg), void \*arg)

  Create an alarm object.
- int rt\_alarm\_delete (RT\_ALARM \*alarm)
   Delete an alarm.

### 6.75.1 Detailed Description

General-purpose watchdog timers. Alarms are general-purpose watchdog timers. Alchemy tasks may create any number of alarms and use them to run a user-defined handler, after a specified initial delay has elapsed. Alarms can be either one shot or periodic; in the latter case, the real-time system automatically reprograms the alarm for the next shot according to a user-defined interval value.

#### 6.75.2 Function Documentation

6.75.2.1 int rt\_alarm\_create ( RT\_ALARM \* alarm, const char \* name, void(\*)(void \*arg) handler, void \* arg )

### Create an alarm object.

This routine creates an object triggering an alarm routine at a specified time in the future. Alarms can be periodic or oneshot, depending on the reload interval value passed to rt\_alarm\_start().

| alarm   | The address of an alarm descriptor which can be later used to identify uniquely the     |
|---------|---|
|         | created object, upon success of this call.  |
| name    | An ASCII string standing for the symbolic name of the alarm. When non-NULL and          |
|         | non-empty, a copy of this string is used for indexing the created alarm into the object |
|         | registry.   |
| handler | The address of the routine to call when the alarm expires. This routine is passed       |
|         | the <i>arg</i> value.   |
| arg     | A user-defined opaque argument passed to the handler.                                   |

#### Returns

Zero is returned upon success. Otherwise:

- -ENOMEM is returned if the system fails to get memory from the local pool in order to create the alarm.
- -EEXIST is returned if the *name* is conflicting with an already registered alarm.
- · -EPERM is returned if this service was called from an asynchronous context.

### Tags

thread-unrestricted, switch-secondary

#### Note

Alarms are process-private objects and thus cannot be shared by multiple processes, even if they belong to the same Xenomai session.

```
6.75.2.2 int rt_alarm_delete ( RT_ALARM * alarm )
```

Delete an alarm.

This routine deletes an alarm object previously created by a call to rt\_alarm\_create().

**Parameters** 

| alarm | The alarm descriptor. |
|-------|-----------------------|

#### Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if *alarm* is not a valid alarm descriptor.
- -EPERM is returned if this service was called from an asynchronous context.

### Tags

thread-unrestricted, switch-secondary

```
6.75.2.3 int rt_alarm_inquire ( RT_ALARM * alarm, RT_ALARM_INFO * info )
```

### Query alarm status.

This routine returns the status information about the specified *alarm*.

6.75 Alarm services 341

#### **Parameters**

| alarm | The alarm descriptor.                                      |
|-------|--|
| info  | A pointer to the returnbuffer" to copy the information to. |

#### Returns

Zero is returned and status information is written to the structure pointed at by *info* upon success. Otherwise:

• -EINVAL is returned if alarm is not a valid alarm descriptor.

#### Tags

unrestricted, switch-primary

References RT ALARM INFO::active, RT ALARM INFO::expiries, and RT ALARM INFO::name.

6.75.2.4 int rt\_alarm\_start ( RT\_ALARM \* alarm, RTIME value, RTIME interval )

Start an alarm.

This routine programs the trigger date of an alarm object. An alarm can be either periodic or oneshot, depending on the *interval* value.

Alarm handlers are always called on behalf of Xenomai's internal timer event routine. Therefore, Xenomai routines which can be called from such handlers are restricted to the set of services available on behalf of an asynchronous context.

This service overrides any previous setup of the expiry date and reload interval for the alarm.

#### **Parameters**

| alarm    | The alarm descriptor.  |
|----------|--|
| value    | The relative date of the first expiry, expressed in clock ticks (see note).          |
| interval | The reload value of the alarm. It is a periodic interval value to be used for repro- |
|          | gramming the next alarm shot, expressed in clock ticks (see note). If interval is    |
|          | equal to TM_INFINITE, the alarm will not be reloaded after it has expired.           |

### Returns

Zero is returned upon success. Otherwise:

• -EINVAL is returned if alarm is not a valid alarm descriptor.

#### Tags

unrestricted, switch-primary

#### Note

Each of the initial *value* and *interval* is interpreted as a multiple of the Alchemy clock resolution (see –alchemy-clock-resolution option, defaults to 1 nanosecond).

6.75.2.5 int rt\_alarm\_stop ( RT\_ALARM \* alarm )

### Stop an alarm.

This routine disables an alarm object, preventing any further expiry until it is re-enabled via rt\_alarm\_start().

| alarm | The alarm descriptor. |  |
|-------|-----------------------|--|

### Returns

Zero is returned upon success. Otherwise:

• -EINVAL is returned if alarm is not a valid alarm descriptor.

## Tags

unrestricted, switch-primary

6.76 Buffer services 343

### 6.76 Buffer services

Lightweight FIFO IPC mechanism.

Collaboration diagram for Buffer services:



### **Data Structures**

struct RT\_BUFFER\_INFO
 Buffer status descriptor.

### Macros

#define B\_PRIO 0x1 /\* Pend by task priority order. \*/
 Creation flags.

#### **Functions**

- int rt\_buffer\_create (RT\_BUFFER \*bf, const char \*name, size\_t bufsz, int mode)

  Create an IPC buffer.
- int rt\_buffer\_delete (RT\_BUFFER \*bf)

Delete an IPC buffer.

ssize\_t rt\_buffer\_write\_timed (RT\_BUFFER \*bf, const void \*ptr, size\_t size, const struct timespec \*abs timeout)

Write to an IPC buffer.

- static ssize\_t rt\_buffer\_write\_until (RT\_BUFFER \*bf, const void \*ptr, size\_t size, RTIME timeout)

  Write to an IPC buffer (with absolute scalar timeout).
- static ssize\_t rt\_buffer\_write (RT\_BUFFER \*bf, const void \*ptr, size\_t size, RTIME timeout)

  Write to an IPC buffer (with relative scalar timeout).
- ssize\_t rt\_buffer\_read\_timed (RT\_BUFFER \*bf, void \*ptr, size\_t size, const struct timespec \*abs\_timeout)

Read from an IPC buffer.

- static ssize\_t rt\_buffer\_read\_until (RT\_BUFFER \*bf, void \*ptr, size\_t size, RTIME timeout)

  Read from an IPC buffer (with absolute scalar timeout).
- static ssize\_t rt\_buffer\_read (RT\_BUFFER \*bf, void \*ptr, size\_t size, RTIME timeout)

Read from an IPC buffer (with relative scalar timeout).

int rt\_buffer\_clear (RT\_BUFFER \*bf)

Clear an IPC buffer.

• int rt\_buffer\_inquire (RT\_BUFFER \*bf, RT\_BUFFER\_INFO \*info)

Query buffer status.

int rt\_buffer\_bind (RT\_BUFFER \*bf, const char \*name, RTIME timeout)

Bind to an IPC buffer.

• int rt\_buffer\_unbind (RT\_BUFFER \*bf)

Unbind from an IPC buffer.

### 6.76.1 Detailed Description

Lightweight FIFO IPC mechanism. A buffer is a lightweight IPC mechanism, implementing a fast, one-way producer-consumer data path. All messages written are buffered in a single memory area in strict FIFO order, until read either in blocking or non-blocking mode.

Message are always atomically handled on the write side (i.e. no interleave, no short writes), whilst only complete messages are normally returned to the read side. However, short reads may happen under a well-defined situation (see note in rt\_buffer\_read()), albeit they can be fully avoided by proper use of the buffer.

#### 6.76.2 Macro Definition Documentation

6.76.2.1 #define B PRIO 0x1 /\* Pend by task priority order. \*/

Creation flags.

Referenced by rt buffer create().

### 6.76.3 Function Documentation

6.76.3.1 int rt\_buffer\_bind ( RT\_BUFFER \* bf, const char \* name, RTIME timeout )

### Bind to an IPC buffer.

This routine creates a new descriptor to refer to an existing IPC buffer identified by its symbolic name. If the object does not exist on entry, the caller may block until a buffer of the given name is created.

#### **Parameters**

| bf      | ,   |
|---------|---|
|         | is undefined upon failure.  |
| name    | A valid NULL-terminated name which identifies the buffer to bind to. This string    |
|         | should match the object name argument passed to rt_buffer_create().                 |
| timeout | The number of clock ticks to wait for the registration to occur (see note). Passing |
|         | TM_INFINITE causes the caller to block indefinitely until the object is registered. |
|         | Passing TM_NONBLOCK causes the service to return immediately without waiting        |
|         | if the object is not registered on entry.   |

### Returns

Zero is returned upon success. Otherwise:

- -EINTR is returned if rt\_task\_unblock() was called for the current task before the retrieval has completed.
- -EWOULDBLOCK is returned if *timeout* is equal to TM\_NONBLOCK and the searched object is not registered on entry.
- -ETIMEDOUT is returned if the object cannot be retrieved within the specified amount of time.
- -EPERM is returned if this service should block, but was not called from a Xenomai thread.

6.76 Buffer services 345

### Tags

xthread-nowait, switch-primary

#### Note

The *timeout* value is interpreted as a multiple of the Alchemy clock resolution (see –alchemy-clock-resolution option, defaults to 1 nanosecond).

6.76.3.2 int rt\_buffer\_clear ( RT\_BUFFER \* bf )

Clear an IPC buffer.

This routine empties a buffer from any data.

**Parameters** 

| 1_1 | The level of the second of the |
|-----|--|
| nı  | I ne putter descriptor.  |
| D1  | The ballet decemptor.  |
|     |  |

#### Returns

Zero is returned upon success. Otherwise:

• -EINVAL is returned if bf is not a valid buffer descriptor.

### Tags

unrestricted, switch-primary

6.76.3.3 int rt buffer create ( RT BUFFER \* bf, const char \* name, size t bufsz, int mode )

### Create an IPC buffer.

This routine creates an IPC object that allows tasks to send and receive data asynchronously via a memory buffer. Data may be of an arbitrary length, albeit this IPC is best suited for small to medium-sized messages, since data always have to be copied to the buffer during transit. Large messages may be more efficiently handled by message queues (RT\_QUEUE).

#### **Parameters**

| bf    | The address of a buffer descriptor which can be later used to identify uniquely the created object, upon success of this call.   |
|-------|--|
| name  | An ASCII string standing for the symbolic name of the buffer. When non-NULL and non-empty, a copy of this string is used for indexing the created buffer into the object registry. |
| bufsz | The size of the buffer space available to hold data. The required memory is obtained from the main heap.   |
| mode  | The buffer creation mode. The following flags can be OR'ed into this bitmask, each of them affecting the new buffer:   |

- B\_FIFO makes tasks pend in FIFO order for reading data from the buffer.
- B\_PRIO makes tasks pend in priority order for reading data from the buffer.

This parameter also applies to tasks blocked on the buffer's write side (see rt buffer write()).

#### Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if mode is invalid or bufsz is zero.
- -ENOMEM is returned if the system fails to get memory from the main heap in order to create the buffer.
- -EEXIST is returned if the *name* is conflicting with an already registered buffer.
- -EPERM is returned if this service was called from an asynchronous context.

### Tags

thread-unrestricted, switch-secondary

#### Note

Buffers can be shared by multiple processes which belong to the same Xenomai session.

References B PRIO.

```
6.76.3.4 int rt buffer delete ( RT BUFFER * bf )
```

Delete an IPC buffer.

This routine deletes a buffer object previously created by a call to rt buffer create().

**Parameters** 

| bf | The buffer descriptor. |
|----|------------------------|
|----|------------------------|

### Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if bf is not a valid buffer descriptor.
- -EPERM is returned if this service was called from an asynchronous context.

### Tags

thread-unrestricted, switch-secondary

```
6.76.3.5 int rt_buffer_inquire ( RT_BUFFER * bf, RT_BUFFER_INFO * info )
```

Query buffer status.

This routine returns the status information about the specified buffer.

Parameters

| bf   | The buffer descriptor.                                     |
|------|--|
| info | A pointer to the returnbuffer" to copy the information to. |

6.76 Buffer services 347

### Returns

Zero is returned and status information is written to the structure pointed at by *info* upon success. Otherwise:

• -EINVAL is returned if bf is not a valid buffer descriptor.

### Tags

### unrestricted, switch-primary

References RT\_BUFFER\_INFO::availmem, RT\_BUFFER\_INFO::iwaiters, RT\_BUFFER\_INFO::name, RT\_BUFFER\_INFO::owaiters, and RT\_BUFFER\_INFO::totalmem.

```
6.76.3.6 ssize_t rt_buffer_read ( RT_BUFFER * bf, void * ptr, size_t len, RTIME timeout ) [inline], [static]
```

Read from an IPC buffer (with relative scalar timeout).

This routine is a variant of rt\_buffer\_read\_timed() accepting a relative timeout specification expressed as a scalar value.

#### **Parameters**

| bf      | The buffer descriptor.  |
|---------|---|
| ptr     | A pointer to a memory area which will be written upon success with the received |
|         | data.   |
| len     | The length in bytes of the memory area pointed to by ptr.                       |
| timeout | A delay expressed in clock ticks.   |

### Tags

### xthread-nowait, switch-primary

References rt\_buffer\_read\_timed().

```
6.76.3.7 ssize_t rt_buffer_read_timed ( RT_BUFFER * bf, void * ptr, size_t len, const struct timespec * abs_timeout )
```

#### Read from an IPC buffer.

This routine reads the next message from the specified buffer. If no message is available on entry, the caller is allowed to block until enough data is written to the buffer, or a timeout elapses.

### **Parameters**

| bf  | The buffer descriptor.   |
|-----|--|
| ptr | A pointer to a memory area which will be written upon success with the received    |
|     | data.  |
| len | The length in bytes of the memory area pointed to by ptr. Under normal circum-     |
|     | stances, rt_buffer_read_timed() only returns entire messages as specified by the   |
|     | len argument, or an error value. However, short reads are allowed when a potential |
|     | deadlock situation is detected (see note below).                                   |

348 Module Documentation

| abs_timeout | An absolute date expressed in clock ticks, specifying a time limit to wait for a mes-    |
|-------------|--|
|             | sage to be available from the buffer (see note). Passing NULL causes the caller to       |
|             | block indefinitely until enough data is available. Passing { .tv_sec = 0, .tv_nsec = 0 } |
|             | causes the service to return immediately without blocking in case not enough data        |
|             | is available.  |

#### Returns

The number of bytes read from the buffer is returned upon success. Otherwise:

- -ETIMEDOUT is returned if abs\_timeout is reached before a complete message arrives.
- -EWOULDBLOCK is returned if abs\_timeout is { .tv\_sec = 0, .tv\_nsec = 0 } and not enough data is immediately available on entry to form a complete message.
- -EINTR is returned if rt\_task\_unblock() was called for the current task before enough data became available to form a complete message.
- -EINVAL is returned if *bf* is not a valid buffer descriptor, or *len* is greater than the actual buffer length.
- -EIDRM is returned if *bf* is deleted while the caller was waiting for data. In such event, *bf* is no more valid upon return of this service.
- -EPERM is returned if this service should block, but was not called from a Xenomai thread.

#### Note

A short read (i.e. fewer bytes returned than requested by *len*) may happen whenever a pathological use of the buffer is encountered. This condition only arises when the system detects that one or more writers are waiting for sending data, while a reader would have to wait for receiving a complete message at the same time. For instance, consider the following sequence, involving a 1024-byte buffer (bf) and two threads:

writer thread > rt\_write\_buffer(&bf, ptr, 1, TM\_INFINITE); (one byte to read, 1023 bytes available for sending) writer thread > rt\_write\_buffer(&bf, ptr, 1024, TM\_INFINITE); (writer blocks - no space for another 1024-byte message) reader thread > rt\_read\_buffer(&bf, ptr, 1024, TM\_INFINITE); (short read - a truncated (1-byte) message is returned)

In order to prevent both threads to wait for each other indefinitely, a short read is allowed, which may be completed by a subsequent call to rt\_buffer\_read() or rt\_buffer\_read\_until(). If that case arises, thread priorities, buffer and/or message lengths should likely be fixed, in order to eliminate such condition.

### Tags

xthread-nowait, switch-primary

### Note

abs\_timeout is interpreted as a multiple of the Alchemy clock resolution (see -alchemy-clock-resolution option, defaults to 1 nanosecond).

Referenced by rt\_buffer\_read(), and rt\_buffer\_read\_until().

```
6.76.3.8 ssize_t rt_buffer_read_until ( RT_BUFFER * bf, void * ptr, size_t len, RTIME abs_timeout ) [inline], [static]
```

Read from an IPC buffer (with absolute scalar timeout).

This routine is a variant of rt\_buffer\_read\_timed() accepting an absolute timeout specification expressed as a scalar value.

6.76 Buffer services 349

#### **Parameters**

| bf          | The buffer descriptor.  |
|-------------|---|
| ptr         | A pointer to a memory area which will be written upon success with the received |
|             | data.   |
| len         | The length in bytes of the memory area pointed to by ptr.                       |
| abs_timeout | An absolute date expressed in clock ticks.                                      |

### Tags

xthread-nowait, switch-primary

References rt\_buffer\_read\_timed().

6.76.3.9 int rt buffer unbind ( RT BUFFER \* bf )

Unbind from an IPC buffer.

**Parameters** 

| bf | The buffer descriptor. |
|----|------------------------|

This routine releases a previous binding to an IPC buffer. After this call has returned, the descriptor is no more valid for referencing this object.

### Tags

#### thread-unrestricted

```
6.76.3.10 ssize_t rt_buffer_write ( RT_BUFFER * bf, const void * ptr, size_t len, RTIME timeout ) [inline], [static]
```

Write to an IPC buffer (with relative scalar timeout).

This routine is a variant of rt\_buffer\_write\_timed() accepting a relative timeout specification expressed as a scalar value.

#### **Parameters**

| bf      | The buffer descriptor.                                       |
|---------|--|
| ptr     | The address of the message data to be written to the buffer. |
| len     | The length in bytes of the message data.                     |
| timeout | A delay expressed in clock ticks.                            |

### Tags

xthread-nowait, switch-primary

References rt\_buffer\_write\_timed().

6.76.3.11 ssize\_t rt\_buffer\_write\_timed ( RT\_BUFFER \* bf, const void \* ptr, size\_t len, const struct timespec \* abs\_timeout )

Write to an IPC buffer.

This routine writes a message to the specified buffer. If not enough buffer space is available on entry to hold the message, the caller is allowed to block until enough room is freed, or a timeout elapses, whichever comes first.

| bf          | The buffer descriptor.   |
|-------------|--|
| ptr         | The address of the message data to be written to the buffer.                           |
| len         | The length in bytes of the message data. Zero is a valid value, in which case the      |
|             | buffer is left untouched, and zero is returned to the caller.                          |
| abs_timeout | An absolute date expressed in clock ticks, specifying a time limit to wait for enough  |
|             | buffer space to be available to hold the message (see note). Passing NULL causes       |
|             | the caller to block indefinitely until enough buffer space is available. Passing { .tv |
|             | sec = 0, .tv_nsec = 0 } causes the service to return immediately without blocking in   |
|             | case of buffer space shortage.   |

### Returns

The number of bytes written to the buffer is returned upon success. Otherwise:

- -ETIMEDOUT is returned if the absolute *abs\_timeout* date is reached before enough buffer space is available to hold the message.
- -EWOULDBLOCK is returned if abs\_timeout is { .tv\_sec = 0, .tv\_nsec = 0 } and no buffer space is immediately available on entry to hold the message.
- -EINTR is returned if rt\_task\_unblock() was called for the current task before enough buffer space became available to hold the message.
- -EINVAL is returned if *bf* is not a valid buffer descriptor, or *len* is greater than the actual buffer length.
- -EIDRM is returned if *bf* is deleted while the caller was waiting for buffer space. In such event, *bf* is no more valid upon return of this service.
- -EPERM is returned if this service should block, but was not called from a Xenomai thread.

### Tags

xthread-nowait, switch-primary

#### Note

abs\_timeout is interpreted as a multiple of the Alchemy clock resolution (see -alchemy-clock-resolution option, defaults to 1 nanosecond).

Referenced by rt\_buffer\_write(), and rt\_buffer\_write\_until().

6.76.3.12 ssize\_t rt\_buffer\_write\_until ( RT\_BUFFER \* bf, const void \* ptr, size\_t len, RTIME abs timeout ) [inline], [static]

Write to an IPC buffer (with absolute scalar timeout).

This routine is a variant of rt\_buffer\_write\_timed() accepting an absolute timeout specification expressed as a scalar value.

#### **Parameters**

| bf The buffer descriptor. |
|---------------------------|
|---------------------------|

6.76 Buffer services 351

| ptr         | The address of the message data to be written to the buffer. |
|-------------|--|
| len         | The length in bytes of the message data.                     |
| abs_timeout | An absolute date expressed in clock ticks.                   |

## Tags

xthread-nowait, switch-primary


References rt\_buffer\_write\_timed().

352 Module Documentation

### 6.77 Condition variable services

POSIXish condition variable mechanism.

Collaboration diagram for Condition variable services:

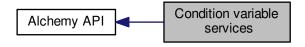

### **Data Structures**

struct RT COND INFO

Condition variable status descriptor.

### **Functions**

• int rt\_cond\_create (RT\_COND \*cond, const char \*name)

Create a condition variable.

• int rt\_cond\_delete (RT\_COND \*cond)

Delete a condition variable.

int rt\_cond\_signal (RT\_COND \*cond)

Signal a condition variable.

int rt\_cond\_broadcast (RT\_COND \*cond)

Broadcast a condition variable.

int rt\_cond\_wait\_timed (RT\_COND \*cond, RT\_MUTEX \*mutex, const struct timespec \*abs\_-timeout)

Wait on a condition variable.

static int rt\_cond\_wait\_until (RT\_COND \*cond, RT\_MUTEX \*mutex, RTIME timeout)

Wait on a condition variable (with absolute scalar timeout).

static int rt\_cond\_wait (RT\_COND \*cond, RT\_MUTEX \*mutex, RTIME timeout)

Wait on a condition variable (with relative scalar timeout).

• int rt\_cond\_inquire (RT\_COND \*cond, RT\_COND\_INFO \*info)

Query condition variable status.

• int rt\_cond\_bind (RT\_COND \*cond, const char \*name, RTIME timeout)

Bind to a condition variable.

int rt\_cond\_unbind (RT\_COND \*cond)

Unbind from a condition variable.

### 6.77.1 Detailed Description

POSIXish condition variable mechanism. A condition variable is a synchronization mechanism which allows tasks to suspend execution until some predicate on some arbitrary shared data is satisfied.

The basic operations on conditions are: signal the condition (when the predicate becomes true), and wait for the condition, blocking the task execution until another task signals the condition. A condition variable must always be associated with a mutex, to avoid a well-known race condition where a task prepares to wait on a condition variable and another task signals the condition just before the first task actually waits on it.

### 6.77.2 Function Documentation

6.77.2.1 int rt cond bind ( RT COND \* cond, const char \* name, RTIME timeout )

Bind to a condition variable.

This routine creates a new descriptor to refer to an existing condition variable identified by its symbolic name. If the object not exist on entry, the caller may block until a condition variable of the given name is created.

#### **Parameters**

| cond    | The address of a condition variable descriptor filled in by the operation. Contents of |
|---------|--|
|         | this memory is undefined upon failure.   |
| name    | A valid NULL-terminated name which identifies the condition variable to bind to. This  |
|         | string should match the object name argument passed to rt_cond_create().               |
| timeout | The number of clock ticks to wait for the registration to occur (see note). Passing    |
|         | TM_INFINITE causes the caller to block indefinitely until the object is registered.    |
|         | Passing TM_NONBLOCK causes the service to return immediately without waiting           |
|         | if the object is not registered on entry.  |

#### Returns

Zero is returned upon success. Otherwise:

- -EINTR is returned if rt\_task\_unblock() was called for the current task before the retrieval has completed.
- -EWOULDBLOCK is returned if timeout is equal to TM\_NONBLOCK and the searched object is not registered on entry.
- -ETIMEDOUT is returned if the object cannot be retrieved within the specified amount of time.
- -EPERM is returned if this service should block, but was not called from a Xenomai thread.

### Tags

xthread-nowait, switch-primary

### Note

The *timeout* value is interpreted as a multiple of the Alchemy clock resolution (see –alchemy-clock-resolution option, defaults to 1 nanosecond).

6.77.2.2 int rt\_cond\_broadcast ( RT\_COND \* cond )

Broadcast a condition variable.

All tasks currently waiting on the condition variable are immediately unblocked.

| cond | The condition variable descriptor. |
|------|------------------------------------|
|------|------------------------------------|

#### Returns

Zero is returned upon success. Otherwise:

• -EINVAL is returned if cond is not a valid condition variable descriptor.

#### Tags

unrestricted, switch-primary

References pthread\_cond\_broadcast().

```
6.77.2.3 int rt_cond_create ( RT_COND * cond, const char * name )
```

Create a condition variable.

Create a synchronization object which allows tasks to suspend execution until some predicate on shared data is satisfied.

#### **Parameters**

| cond | The address of a condition variable descriptor which can be later used to identify   |
|------|--|
|      | uniquely the created object, upon success of this call.                              |
| name | An ASCII string standing for the symbolic name of the condition variable. When non-  |
|      | NULL and non-empty, a copy of this string is used for indexing the created condition |
|      | variable into the object registry.   |

#### Returns

Zero is returned upon success. Otherwise:

- -ENOMEM is returned if the system fails to get memory from the main heap in order to create the condition variable.
- -EEXIST is returned if the *name* is conflicting with an already registered condition variable.
- -EPERM is returned if this service was called from an asynchronous context.

#### Tags

thread-unrestricted, switch-secondary

#### Note

Condition variables can be shared by multiple processes which belong to the same Xenomai session.

References pthread\_cond\_destroy(), pthread\_cond\_init(), pthread\_condattr\_destroy(), pthread\_condattr\_setclock(), and pthread\_condattr\_setpshared().

```
6.77.2.4 int rt_cond_delete ( RT_COND * cond )
```

Delete a condition variable.

This routine deletes a condition variable object previously created by a call to rt\_cond\_create().

| cond | The condition variable descriptor. |
|------|------------------------------------|

#### Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if alarm is not a valid condition variable descriptor.
- · -EPERM is returned if this service was called from an asynchronous context.
- -EBUSY is returned upon an attempt to destroy the object referenced by cond while it is referenced
  (for example, while being used in a rt\_cond\_wait(), rt\_cond\_wait\_timed() or rt\_cond\_wait\_until() by
  another task).

#### Tags

thread-unrestricted, switch-secondary

References pthread\_cond\_destroy().

```
6.77.2.5 int rt cond inquire ( RT COND * cond, RT COND INFO * info )
```

Query condition variable status.

This routine returns the status information about the specified condition variable.

#### **Parameters**

| cond | The condition variable descriptor.                         |
|------|--|
| info | A pointer to the returnbuffer" to copy the information to. |

### Returns

Zero is returned and status information is written to the structure pointed at by *info* upon success. Otherwise:

• -EINVAL is returned if cond is not a valid condition variable descriptor.

#### Tags

unrestricted, switch-primary

References RT COND INFO::name.

```
6.77.2.6 int rt_cond_signal ( RT_COND * cond )
```

Signal a condition variable.

If the condition variable *cond* is pended, this routine immediately unblocks the first waiting task (by queuing priority order).

**Parameters** 

| cond | The condition variable descriptor. |
|------|------------------------------------|

#### Returns

Zero is returned upon success. Otherwise:

• -EINVAL is returned if cond is not a valid condition variable descriptor.

### Tags

unrestricted, switch-primary

References pthread\_cond\_signal().

```
6.77.2.7 int rt_cond_unbind ( RT_COND * cond )
```

Unbind from a condition variable.

**Parameters** 

| cond | The condition variable descriptor. |
|------|------------------------------------|

This routine releases a previous binding to a condition variable. After this call has returned, the descriptor is no more valid for referencing this object.

### Tags

thread-unrestricted

```
6.77.2.8 int rt_cond_wait ( RT_COND * cond, RT_MUTEX * mutex, RTIME timeout ) [inline], [static]
```

Wait on a condition variable (with relative scalar timeout).

This routine is a variant of rt\_cond\_wait\_timed() accepting a relative timeout specification expressed as a scalar value.

### **Parameters**

| cond    | The condition variable descriptor.                                  |
|---------|---|
| mutex   | The address of the mutex serializing the access to the shared data. |
| timeout | A delay expressed in clock ticks.                                   |

### Tags

xthread-only, switch-primary

References rt\_cond\_wait\_timed().

```
6.77.2.9 int rt_cond_wait_timed ( RT_COND * cond, RT_MUTEX * mutex, const struct timespec * abs_timeout )
```

Wait on a condition variable.

This service atomically releases the mutex and blocks the calling task, until the condition variable *cond* is signaled or a timeout occurs, whichever comes first. The mutex is re-acquired before returning from this service.

| cond        | The condition variable descriptor.   |
|-------------|--|
| mutex       | The address of the mutex serializing the access to the shared data.  |
| abs_timeout | An absolute date expressed in clock ticks, specifying a time limit to wait for the condition variable to be signaled (see note). Passing NULL causes the caller to block indefinitely. |

#### Returns

Zero is returned upon success. Otherwise:

- -ETIMEDOUT is returned if abs\_timeout is reached before the condition variable is signaled.
- -EWOULDBLOCK is returned if abs\_timeout is { .tv\_sec = 0, .tv\_nsec = 0 } .
- -EINTR is returned if rt\_task\_unblock() was called for the current task.
- -EINVAL is returned if cond is not a valid condition variable descriptor.
- -EIDRM is returned if *cond* is deleted while the caller was waiting on the condition variable. In such event, *cond* is no more valid upon return of this service.
- -EPERM is returned if this service should block, but was not called from a Xenomai thread.

#### Tags

xthread-only, switch-primary

#### Note

abs\_timeout is interpreted as a multiple of the Alchemy clock resolution (see -alchemy-clock-resolution option, defaults to 1 nanosecond).

References pthread\_cond\_timedwait(), and pthread\_cond\_wait().

Referenced by rt\_cond\_wait(), and rt\_cond\_wait\_until().

Wait on a condition variable (with absolute scalar timeout).

This routine is a variant of rt\_cond\_wait\_timed() accepting an abs\_timeout specification expressed as a scalar value.

#### **Parameters**

| cond        | The condition variable descriptor.                                  |
|-------------|---|
| mutex       | The address of the mutex serializing the access to the shared data. |
| abs_timeout | An absolute date expressed in clock ticks.                          |

#### Tags

xthread-only, switch-primary

References rt\_cond\_wait\_timed().

Module Documentation

## 6.78 Event flag group services

Inter-task notification mechanism based on discrete flags.

Collaboration diagram for Event flag group services:



### **Data Structures**

struct RT\_EVENT\_INFO

Event status descriptor.

#### Macros

358

#define EV\_PRIO 0x1 /\* Pend by task priority order. \*/

Creation flags.

#define EV\_ANY 0x1 /\* Disjunctive wait. \*/

Operation flags.

#### **Functions**

• int rt\_event\_create (RT\_EVENT \*event, const char \*name, unsigned long ivalue, int mode)

• int rt\_event\_delete (RT\_EVENT \*event)

Create an event flag group.

Delete an event flag group.

• int rt event signal (RT EVENT \*event, unsigned long mask)

Signal an event.

• int rt\_event\_wait\_timed (RT\_EVENT \*event, unsigned long mask, unsigned long \*mask\_r, int mode, const struct timespec \*abs timeout)

Wait for an arbitrary set of events.

• static int rt\_event\_wait\_until (RT\_EVENT \*event, unsigned long mask, unsigned long \*mask\_r, int mode, RTIME timeout)

Wait for an arbitrary set of events (with absolute scalar timeout).

• static int rt\_event\_wait (RT\_EVENT \*event, unsigned long mask, unsigned long \*mask\_r, int mode, RTIME timeout)

Wait for an arbitrary set of events (with relative scalar timeout).

• int rt\_event\_clear (RT\_EVENT \*event, unsigned long mask, unsigned long \*mask\_r) Clear event flags.

• int rt\_event\_inquire (RT\_EVENT \*event, RT\_EVENT\_INFO \*info)

Query event flag group status.

• int rt\_event\_bind (RT\_EVENT \*event, const char \*name, RTIME timeout)

Bind to an event flag group.

• int rt\_event\_unbind (RT\_EVENT \*event)

Unbind from an event flag group.

### 6.78.1 Detailed Description

Inter-task notification mechanism based on discrete flags. An event flag group is a synchronization object represented by a long-word structure; every available bit in this word represents a user-defined event flag.

When a bit is set, the associated event is said to have occurred. Xenomai tasks can use this mechanism to signal the occurrence of particular events to other tasks.

Tasks can either wait for events to occur in a conjunctive manner (all awaited events must have occurred to satisfy the wait request), or in a disjunctive way (at least one of the awaited events must have occurred to satisfy the wait request).

### 6.78.2 Macro Definition Documentation

6.78.2.1 #define EV ANY 0x1 /\* Disjunctive wait. \*/

Operation flags.

Referenced by rt event wait timed().

6.78.2.2 #define EV PRIO 0x1 /\* Pend by task priority order. \*/

Creation flags.

Referenced by rt event create().

### 6.78.3 Function Documentation

6.78.3.1 int rt\_event\_bind ( RT\_EVENT \* event, const char \* name, RTIME timeout )

Bind to an event flag group.

This routine creates a new descriptor to refer to an existing event flag group identified by its symbolic name. If the object does not exist on entry, the caller may block until an event flag group of the given name is created.

#### **Parameters**

| event   | The address of an event flag group descriptor filled in by the operation. Contents of |
|---------|---|
|         | this memory is undefined upon failure.  |
| name    | A valid NULL-terminated name which identifies the event flag group to bind to. This   |
|         | string should match the object name argument passed to rt_event_create().             |
| timeout | The number of clock ticks to wait for the registration to occur (see note). Passing   |
|         | TM_INFINITE causes the caller to block indefinitely until the object is registered.   |
|         | Passing TM_NONBLOCK causes the service to return immediately without waiting          |
|         | if the object is not registered on entry.   |

### Returns

Zero is returned upon success. Otherwise:

- -EINTR is returned if rt\_task\_unblock() was called for the current task before the retrieval has completed.
- -EWOULDBLOCK is returned if *timeout* is equal to TM\_NONBLOCK and the searched object is not registered on entry.
- -ETIMEDOUT is returned if the object cannot be retrieved within the specified amount of time.

360 Module Documentation

• -EPERM is returned if this service should block, but was not called from a Xenomai thread.

### Tags

xthread-nowait, switch-primary

#### Note

The *timeout* value is interpreted as a multiple of the Alchemy clock resolution (see –alchemy-clock-resolution option, defaults to 1 nanosecond).

6.78.3.2 int rt\_event\_clear ( RT\_EVENT \* event, unsigned long mask, unsigned long \* mask\_r )

### Clear event flags.

This routine clears a set of flags from event.

#### **Parameters**

| event  | The event descriptor.  |
|--------|--|
| mask   | The set of event flags to be cleared.  |
| mask_r | If non-NULL, mask_r is the address of a memory location which will receive the |
|        | previous value of the event flag group before the flags are cleared.           |

#### Returns

Zero is returned upon success. Otherwise:

• -EINVAL is returned if event is not a valid event flag group descriptor.

### Tags

unrestricted, switch-primary

6.78.3.3 int rt\_event\_create ( RT\_EVENT \* event, const char \* name, unsigned long ivalue, int mode )

### Create an event flag group.

Event groups provide for task synchronization by allowing a set of flags (or "events") to be waited for and posted atomically. An event group contains a mask of received events; an arbitrary set of event flags can be pended or posted in a single operation.

### **Parameters**

| event | The address of an event descriptor which can be later used to identify uniquely the     |
|-------|---|
|       | created object, upon success of this call.  |
| name  | An ASCII string standing for the symbolic name of the event. When non-NULL and          |
|       | non-empty, a copy of this string is used for indexing the created event into the object |
|       | registry.   |

| ivalue | The initial value of the group's event mask.                                       |
|--------|--|
| mode   | The event group creation mode. The following flags can be OR'ed into this bitmask: |

- EV\_FIFO makes tasks pend in FIFO order on the event flag group.
- EV\_PRIO makes tasks pend in priority order on the event flag group.

#### Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if mode is invalid.
- -ENOMEM is returned if the system fails to get memory from the main heap in order to create the event flag group.
- -EEXIST is returned if the *name* is conflicting with an already registered event flag group.
- · -EPERM is returned if this service was called from an asynchronous context.

### Tags

thread-unrestricted, switch-secondary

#### Note

Event flag groups can be shared by multiple processes which belong to the same Xenomai session.

References EV PRIO.

```
6.78.3.4 int rt event delete ( RT EVENT * event )
```

Delete an event flag group.

This routine deletes a event flag group previously created by a call to rt\_event\_create().

**Parameters** 

| event | The event descriptor. |
|-------|-----------------------|
|-------|-----------------------|

### Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if event is not a valid event flag group descriptor.
- -EPERM is returned if this service was called from an asynchronous context.

### Tags

thread-unrestricted, switch-secondary

```
6.78.3.5 int rt_event_inquire ( RT_EVENT * event, RT_EVENT_INFO * info )
```

Query event flag group status.

This routine returns the status information about event.

| event | The event descriptor.                                      |
|-------|--|
| info  | A pointer to the returnbuffer" to copy the information to. |

#### Returns

Zero is returned and status information is written to the structure pointed at by *info* upon success. Otherwise:

• -EINVAL is returned if event is not a valid event flag group descriptor.

### Tags

unrestricted, switch-primary

References RT\_EVENT\_INFO::name, RT\_EVENT\_INFO::nwaiters, and RT\_EVENT\_INFO::value.

6.78.3.6 int rt\_event\_signal ( RT\_EVENT \* event, unsigned long mask )

#### Signal an event.

Post a set of flags to *event*. All tasks having their wait request satisfied as a result of this operation are immediately readied.

#### **Parameters**

| event | The event descriptor.           |
|-------|---------------------------------|
| mask  | The set of events to be posted. |

### Returns

Zero is returned upon success. Otherwise:

• -EINVAL is returned if event is not an event flag group descriptor.

### Tags

unrestricted, switch-primary

6.78.3.7 int rt\_event\_unbind ( RT\_EVENT \* event )

Unbind from an event flag group.

### **Parameters**

| event | The event descriptor. |
|-------|-----------------------|

This routine releases a previous binding to an event flag group. After this call has returned, the descriptor is no more valid for referencing this object.

### Tags

thread-unrestricted

6.78.3.8 int rt\_event\_wait ( RT\_EVENT \* event, unsigned long mask, unsigned long \* mask\_r, int mode, RTIME timeout ) [inline], [static]

Wait for an arbitrary set of events (with relative scalar timeout).

This routine is a variant of rt\_event\_wait\_timed() accepting a relative timeout specification expressed as a scalar value.

| event   | The event descriptor.   |
|---------|---|
| mask    | The set of bits to wait for.                                  |
| mask_r  | The value of the event mask at the time the task was readied. |
| mode    | The pend mode.  |
| timeout | A delay expressed in clock ticks,                             |

### Tags

xthread-nowait, switch-primary

References rt\_event\_wait\_timed().

6.78.3.9 int rt\_event\_wait\_timed ( RT\_EVENT \* event, unsigned long mask, unsigned long \* mask\_r, int mode, const struct timespec \* abs\_timeout )

Wait for an arbitrary set of events.

Waits for one or more events to be signaled in event, or until a timeout elapses.

#### **Parameters**

| event  | The event descriptor.   |
|--------|---|
| mask   | The set of bits to wait for. Passing zero causes this service to return immediately |
|        | with a success value; the current value of the event mask is also copied to mask_r. |
| mask_r | The value of the event mask at the time the task was readied.                       |
| mode   | The pend mode. The following flags can be OR'ed into this bitmask, each of them     |
|        | affecting the operation:  |

- EV\_ANY makes the task pend in disjunctive mode (i.e. OR); this means that the request is fulfilled when at least one bit set into *mask* is set in the current event mask.
- EV\_ALL makes the task pend in conjunctive mode (i.e. AND); this means that the request is fulfilled when at all bits set into *mask* are set in the current event mask.

#### **Parameters**

| abs_timeout | An absolute date expressed in clock ticks, specifying a time limit to wait for the re-   |
|-------------|--|
|             | quest to be satisfied (see note). Passing NULL causes the caller to block indefinitely   |
|             | until the request is satisfied. Passing { .tv_sec = 0, .tv_nsec = 0 } causes the service |
|             | to return without blocking in case the request cannot be satisfied immediately.          |

### Returns

Zero is returned upon success. Otherwise:

- -ETIMEDOUT is returned if abs\_timeout is reached before the request is satisfied.
- -EWOULDBLOCK is returned if abs\_timeout is { .tv\_sec = 0, .tv\_nsec = 0 } and the requested flags are not set on entry to the call.
- -EINTR is returned if rt\_task\_unblock() was called for the current task before the request is satisfied.
- -EINVAL is returned if *mode* is invalid, or *event* is not a valid event flag group descriptor.
- -EIDRM is returned if *event* is deleted while the caller was sleeping on it. In such a case, *event* is no more valid upon return of this service.

• -EPERM is returned if this service should block, but was not called from a Xenomai thread.

### Tags

xthread-nowait, switch-primary

### Note

abs\_timeout value is interpreted as a multiple of the Alchemy clock resolution (see –alchemy-clock-resolution option, defaults to 1 nanosecond).

References EV ANY.

Referenced by rt\_event\_wait(), and rt\_event\_wait\_until().

6.78.3.10 int rt\_event\_wait\_until ( RT\_EVENT \* event, unsigned long mask, unsigned long \* mask\_r, int mode, RTIME abs\_timeout ) [inline], [static]

Wait for an arbitrary set of events (with absolute scalar timeout).

This routine is a variant of rt\_event\_wait\_timed() accepting an absolute timeout specification expressed as a scalar value.

#### **Parameters**

| event       | The event descriptor.   |
|-------------|---|
| mask        | The set of bits to wait for.                                  |
| mask_r      | The value of the event mask at the time the task was readied. |
| mode        | The pend mode.  |
| abs_timeout | An absolute date expressed in clock ticks.                    |

## Tags

xthread-nowait, switch-primary

References rt\_event\_wait\_timed().

Module Documentation

# 6.79 Heap management services

Region of memory dedicated to real-time allocation.

Collaboration diagram for Heap management services:



#### **Data Structures**

struct RT HEAP INFO

Heap status descriptor.

## Macros

#define H\_PRIO 0x1 /\* Pend by task priority order. \*/
 Creation flags.

## **Functions**

- int rt\_heap\_create (RT\_HEAP \*heap, const char \*name, size\_t heapsize, int mode)
   Create a heap.
- int rt\_heap\_delete (RT\_HEAP \*heap)

Delete a heap.

 int rt\_heap\_alloc\_timed (RT\_HEAP \*heap, size\_t size, const struct timespec \*abs\_timeout, void \*\*blockp)

Allocate a block from a heap.

• static int rt\_heap\_alloc\_until (RT\_HEAP \*heap, size\_t size, RTIME timeout, void \*\*blockp)

Allocate a block from a heap (with absolute scalar timeout).

• static int rt\_heap\_alloc (RT\_HEAP \*heap, size\_t size, RTIME timeout, void \*\*blockp)

Allocate a block from a heap (with relative scalar timeout).

• int rt\_heap\_free (RT\_HEAP \*heap, void \*block)

Release a block to a heap.

int rt\_heap\_inquire (RT\_HEAP \*heap, RT\_HEAP\_INFO \*info)

Query heap status.

• int rt\_heap\_bind (RT\_HEAP \*heap, const char \*name, RTIME timeout)

Bind to a heap.

• int rt\_heap\_unbind (RT\_HEAP \*heap)

Unbind from a heap.

## 6.79.1 Detailed Description

Region of memory dedicated to real-time allocation. Heaps are regions of memory used for dynamic memory allocation in a time-bounded fashion. Blocks of memory are allocated and freed in an arbitrary order and the pattern of allocation and size of blocks is not known until run time.

### 6.79.2 Macro Definition Documentation

6.79.2.1 #define H\_PRIO 0x1 /\* Pend by task priority order. \*/

Creation flags.

Referenced by rt\_heap\_create().

### 6.79.3 Function Documentation

```
6.79.3.1 int rt_heap_alloc ( RT_HEAP * heap, size_t size, RTIME timeout, void ** blockp ) [inline], [static]
```

Allocate a block from a heap (with relative scalar timeout).

This routine is a variant of rt\_heap\_alloc\_timed() accepting a relative timeout specification expressed as a scalar value.

Tags

```
xthread-nowait, switch-primary
```

References rt heap alloc timed().

```
6.79.3.2 int rt_heap_alloc_timed ( RT_HEAP * heap, size_t size, const struct timespec * abs_timeout, void ** blockp )
```

Allocate a block from a heap.

This service allocates a block from a given heap, or returns the address of the single memory segment if H\_SINGLE was mentioned in the creation mode to rt\_heap\_create(). When not enough memory is available on entry to this service, tasks may be blocked until their allocation request can be fulfilled.

#### **Parameters**

| heap        | The heap descriptor.  |
|-------------|---|
| size        | The requested size (in bytes) of the block. If the heap is managed as a single-block area (H_SINGLE), this value can be either zero, or the same value given to rt_heap_create(). In that case, the same block covering the entire heap space is returned to all callers of this service.   |
| abs_timeout | An absolute date expressed in clock ticks, specifying a time limit to wait for a block of the requested size to be available from the heap (see note). Passing NULL causes the caller to block indefinitely until a block is available. Passing { .tv_sec = 0, .tv_nsec = 0 } causes the service to return immediately without blocking in case not block is available. |

368 Module Documentation

| blockp | A pointer to a memory location which will be written upon success with the address |
|--------|--|
|        | of the allocated block, or the start address of the single memory segment. In the  |
|        | former case, the block can be freed using rt_heap_free().                          |

#### Returns

Zero is returned upon success. Otherwise:

- -ETIMEDOUT is returned if abs timeout is reached before a block is available.
- -EWOULDBLOCK is returned if abs\_timeout is equal to { .tv\_sec = 0, .tv\_nsec = 0 } and no block is immediately available on entry to fulfill the allocation request.
- -EINTR is returned if rt\_task\_unblock() was called for the current task before a block became available.
- -EINVAL is returned if *heap* is not a valid heap descriptor, or *heap* is managed as a single-block area (i.e. H\_SINGLE mode) and *size* is non-zero but does not match the original heap size passed to rt\_heap\_create().
- -EIDRM is returned if *heap* is deleted while the caller was waiting for a block. In such event, *heap* is no more valid upon return of this service.
- -EPERM is returned if this service should block, but was not called from a Xenomai thread.

#### Tags

xthread-nowait, switch-primary

#### Note

abs\_timeout is interpreted as a multiple of the Alchemy clock resolution (see -alchemy-clock-resolution option, defaults to 1 nanosecond).

Referenced by rt heap alloc(), and rt heap alloc until().

```
6.79.3.3 int rt_heap_alloc_until ( RT_HEAP * heap, size_t size, RTIME abs_timeout, void ** blockp ) [inline], [static]
```

Allocate a block from a heap (with absolute scalar timeout).

This routine is a variant of rt\_heap\_alloc\_timed() accepting an absolute timeout specification expressed as a scalar value.

Tags

xthread-nowait, switch-primary

References rt\_heap\_alloc\_timed().

```
6.79.3.4 int rt heap bind ( RT HEAP * heap, const char * name, RTIME timeout )
```

Bind to a heap.

This routine creates a new descriptor to refer to an existing heap identified by its symbolic name. If the object does not exist on entry, the caller may block until a heap of the given name is created.

| heap    | The address of a heap descriptor filled in by the operation. Contents of this memory |
|---------|--|
|         | is undefined upon failure.   |
| name    | A valid NULL-terminated name which identifies the heap to bind to. This string       |
|         | should match the object name argument passed to rt_heap_create().                    |
| timeout | The number of clock ticks to wait for the registration to occur (see note). Passing  |
|         | TM_INFINITE causes the caller to block indefinitely until the object is registered.  |
|         | Passing TM_NONBLOCK causes the service to return immediately without waiting         |
|         | if the object is not registered on entry.  |

## Returns

Zero is returned upon success. Otherwise:

- -EINTR is returned if rt\_task\_unblock() was called for the current task before the retrieval has completed.
- -EWOULDBLOCK is returned if *timeout* is equal to TM\_NONBLOCK and the searched object is not registered on entry.
- -ETIMEDOUT is returned if the object cannot be retrieved within the specified amount of time.
- -EPERM is returned if this service should block, but was not called from a Xenomai thread.

## Tags

xthread-nowait, switch-primary

#### Note

The *timeout* value is interpreted as a multiple of the Alchemy clock resolution (see –alchemy-clock-resolution option, defaults to 1 nanosecond).

6.79.3.5 int rt\_heap\_create ( RT\_HEAP \* heap, const char \* name, size\_t heapsz, int mode )

## Create a heap.

This routine creates a memory heap suitable for time-bounded allocation requests of RAM chunks. When not enough memory is available, tasks may be blocked until their allocation request can be fulfilled.

By default, heaps support allocation of multiple blocks of memory in an arbitrary order. However, it is possible to ask for single-block management by passing the H\_SINGLE flag into the *mode* parameter, in which case the entire memory space managed by the heap is made available as a unique block. In this mode, all allocation requests made through rt\_heap\_alloc() will return the same block address, pointing at the beginning of the heap memory.

#### **Parameters**

| heap | The address of a heap descriptor which can be later used to identify uniquely the  |
|------|--|
|      | created object, upon success of this call.   |
| name | An ASCII string standing for the symbolic name of the heap. When non-NULL and non-empty, a copy of this string is used for indexing the created heap into the object |
|      | registry.  |

370 Module Documentation

| heapsz | The size (in bytes) of the memory pool, blocks will be claimed and released to. This area is not extensible, so this value must be compatible with the highest memory pressure that could be expected. The valid range is between 2k and 2Gb. |
|--------|---|
| mode   | The heap creation mode. The following flags can be OR'ed into this bitmask, each  |
|        | of them affecting the new heap:   |

- H FIFO makes tasks pend in FIFO order on the heap when waiting for available blocks.
- H\_PRIO makes tasks pend in priority order on the heap when waiting for available blocks.
- H\_SINGLE causes the entire heap space to be managed as a single memory block.

#### Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if mode is invalid, or heapsz is not in the range [2k..2Gb].
- -ENOMEM is returned if the system fails to get memory from the main heap in order to create the heap.
- -EEXIST is returned if the name is conflicting with an already registered heap.
- · -EPERM is returned if this service was called from an asynchronous context.

## Tags

thread-unrestricted, switch-secondary

#### Note

Heaps can be shared by multiple processes which belong to the same Xenomai session.

References H\_PRIO.

```
6.79.3.6 int rt_heap_delete ( RT_HEAP * heap )
```

#### Delete a heap.

This routine deletes a heap object previously created by a call to rt\_heap\_create(), releasing all tasks currently blocked on it.

#### **Parameters**

| heap | The heap descriptor. |
|------|----------------------|

#### Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if heap is not a valid heap descriptor.
- -EPERM is returned if this service was called from an asynchronous context.

## Tags

thread-unrestricted, switch-secondary

6.79.3.7 int rt\_heap\_free ( RT\_HEAP \* heap, void \* block )

Release a block to a heap.

This service should be used to release a block to the heap it belongs to. An attempt to fulfill the request of every task blocked on rt\_heap\_alloc() is made once *block* is returned to the memory pool.

| heap  | The heap descriptor.              |
|-------|-----------------------------------|
| block | The address of the block to free. |

#### Returns

Zero is returned upon success. Otherwise:

• -EINVAL is returned if *heap* is not a valid heap descriptor, or *block* is not a valid block previously allocated by the rt\_heap\_alloc() service from *heap*.

### Tags

unrestricted, switch-primary

```
6.79.3.8 int rt_heap_inquire ( RT_HEAP * heap, RT_HEAP_INFO * info )
```

Query heap status.

This routine returns the status information about *heap*.

#### **Parameters**

| heap | The heap descriptor.                                       |
|------|--|
| info | A pointer to the returnbuffer" to copy the information to. |

#### Returns

Zero is returned and status information is written to the structure pointed at by *info* upon success. Otherwise:

• -EINVAL is returned if heap is not a valid heap descriptor.

## Tags

unrestricted, switch-primary

References RT\_HEAP\_INFO::heapsize, RT\_HEAP\_INFO::name, RT\_HEAP\_INFO::nwaiters, RT\_HEAP\_INFO::usablemem, and RT\_HEAP\_INFO::usedmem.

```
6.79.3.9 int rt_heap_unbind ( RT_HEAP * heap )
```

Unbind from a heap.

**Parameters** 

| heap | The heap descriptor. |
|------|----------------------|
|------|----------------------|

This routine releases a previous binding to a heap. After this call has returned, the descriptor is no more valid for referencing this object.


#### Tags

thread-unrestricted

6.80 Alchemy API 373

# 6.80 Alchemy API

A programming interface reminiscent from traditional RTOS APIs. Collaboration diagram for Alchemy API:

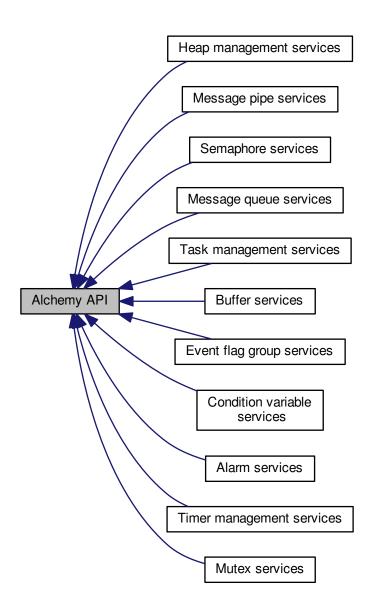

## Modules

Alarm services

General-purpose watchdog timers.

• Buffer services

Lightweight FIFO IPC mechanism.

• Condition variable services

POSIXish condition variable mechanism.

• Event flag group services

Inter-task notification mechanism based on discrete flags.

• Heap management services

Region of memory dedicated to real-time allocation.

Mutex services

POSIXish mutual exclusion servicesl.

• Message pipe services

Two-way communication channel between Xenomai & Linux domains.

Message queue services

real-time IPC mechanism for sending messages of arbitrary size

• Semaphore services

Counting semaphore IPC mechanism.

• Task management services

Services dealing with preemptive multi-tasking.

Timer management services

Services for reading and spinning on the hardware timer.

## 6.80.1 Detailed Description

A programming interface reminiscent from traditional RTOS APIs. This interface is an evolution of the former *native* API available with the Xenomai 2.x series.

6.81 Mutex services 375

## 6.81 Mutex services

POSIXish mutual exclusion servicesl.

Collaboration diagram for Mutex services:



### **Data Structures**

struct RT\_MUTEX\_INFO

Mutex status descriptor.

### **Functions**

• int rt\_mutex\_create (RT\_MUTEX \*mutex, const char \*name)

Create a mutex.

int rt\_mutex\_delete (RT\_MUTEX \*mutex)

Delete a mutex.

• int rt\_mutex\_acquire\_timed (RT\_MUTEX \*mutex, const struct timespec \*abs\_timeout)

Acquire/lock a mutex (with absolute timeout date).

• static int rt\_mutex\_acquire\_until (RT\_MUTEX \*mutex, RTIME timeout)

Acquire/lock a mutex (with absolute scalar timeout).

static int rt\_mutex\_acquire (RT\_MUTEX \*mutex, RTIME timeout)

Acquire/lock a mutex (with relative scalar timeout).

int rt\_mutex\_release (RT\_MUTEX \*mutex)

Release/unlock a mutex.

int rt\_mutex\_inquire (RT\_MUTEX \*mutex, RT\_MUTEX\_INFO \*info)

Query mutex status.

• int rt\_mutex\_bind (RT\_MUTEX \*mutex, const char \*name, RTIME timeout)

Bind to a mutex.

int rt\_mutex\_unbind (RT\_MUTEX \*mutex)

Unbind from a mutex.

### 6.81.1 Detailed Description

POSIXish mutual exclusion servicesl. A mutex is a MUTual EXclusion object, and is useful for protecting shared data structures from concurrent modifications, and implementing critical sections and monitors.

A mutex has two possible states: unlocked (not owned by any task), and locked (owned by one task). A mutex can never be owned by two different tasks simultaneously. A task attempting to lock a mutex that is already locked by another task is blocked until the latter unlocks the mutex first.

Xenomai mutex services enforce a priority inheritance protocol in order to solve priority inversions.

### 6.81.2 Function Documentation

6.81.2.1 int rt\_mutex\_acquire ( RT\_MUTEX \* mutex, RTIME timeout ) [inline], [static]

Acquire/lock a mutex (with relative scalar timeout).

This routine is a variant of rt\_mutex\_acquire\_timed() accepting a relative timeout specification expressed as a scalar value.

#### **Parameters**

| mutex   | The mutex descriptor.             |
|---------|-----------------------------------|
| timeout | A delay expressed in clock ticks. |

### Tags

xthread-only, switch-primary

References rt\_mutex\_acquire\_timed().

6.81.2.2 int rt mutex acquire timed ( RT MUTEX \* mutex, const struct timespec \* abs timeout )

Acquire/lock a mutex (with absolute timeout date).

Attempt to lock a mutex. The calling task is blocked until the mutex is available, in which case it is locked again before this service returns. Xenomai mutexes are implicitely recursive and implement the priority inheritance protocol.

#### **Parameters**

| mutex       | The mutex descriptor.  |
|-------------|--|
| abs_timeout | to be available (see note). Passing NULL the caller to block indefinitely. Passing { .tv_sec = 0, .tv_nsec = 0 } causes the service to return immediately without blocking |
|             | in case <i>mutex</i> is already locked by another task.  |

#### Returns

Zero is returned upon success. Otherwise:

- -ETIMEDOUT is returned if abs\_timeout is reached before the mutex is available.
- -EWOULDBLOCK is returned if *timeout* is { .tv\_sec = 0, .tv\_nsec = 0 } and the mutex is not immediately available.
- -EINTR is returned if rt task unblock() was called for the current task.
- -EINVAL is returned if *mutex* is not a valid mutex descriptor.
- -EIDRM is returned if *mutex* is deleted while the caller was waiting on it. In such event, *mutex* is no more valid upon return of this service.
- -EPERM is returned if this service should block, but was not called from a Xenomai thread.

## Tags

xthread-only, switch-primary

#### Side effects

Over the Cobalt core, an Alchemy task with priority zero keeps running in primary mode until it releases the mutex, at which point it is switched back to secondary mode automatically.

6.81 Mutex services 377

#### Note

abs\_timeout is interpreted as a multiple of the Alchemy clock resolution (see -alchemy-clock-resolution option, defaults to 1 nanosecond).

References pthread\_mutex\_lock(), pthread\_mutex\_timedlock(), and pthread\_mutex\_trylock().

Referenced by rt mutex acquire(), and rt mutex acquire until().

6.81.2.3 int rt\_mutex\_acquire\_until ( RT\_MUTEX \* mutex, RTIME abs\_timeout ) [inline], [static]

Acquire/lock a mutex (with absolute scalar timeout).

This routine is a variant of rt\_mutex\_acquire\_timed() accepting an absolute timeout specification expressed as a scalar value.

#### **Parameters**

| mutex The mutex descriptor.                          |  | The mutex descriptor.                      |
|--|--|--|
| abs_timeout   An absolute date expressed in clock ti |  | An absolute date expressed in clock ticks. |

#### Tags

xthread-only, switch-primary

References rt\_mutex\_acquire\_timed().

6.81.2.4 int rt\_mutex\_bind ( RT\_MUTEX \* mutex, const char \* name, RTIME timeout )

#### Bind to a mutex.

This routine creates a new descriptor to refer to an existing mutex identified by its symbolic name. If the object not exist on entry, the caller may block until a mutex of the given name is created.

#### **Parameters**

| mutex   | The address of a mutex descriptor filled in by the operation. Contents of this memory |
|---------|---|
|         | is undefined upon failure.  |
| name    | A valid NULL-terminated name which identifies the mutex to bind to. This string       |
|         | should match the object name argument passed to rt_mutex_create().                    |
| timeout | The number of clock ticks to wait for the registration to occur (see note). Passing   |
|         | TM_INFINITE causes the caller to block indefinitely until the object is registered.   |
|         | Passing TM_NONBLOCK causes the service to return immediately without waiting          |
|         | if the object is not registered on entry.   |

#### Returns

Zero is returned upon success. Otherwise:

- -EINTR is returned if rt\_task\_unblock() was called for the current task before the retrieval has completed.
- -EWOULDBLOCK is returned if *timeout* is equal to TM\_NONBLOCK and the searched object is not registered on entry.
- -ETIMEDOUT is returned if the object cannot be retrieved within the specified amount of time.
- -EPERM is returned if this service should block, but was not called from a Xenomai thread.

Tags

xthread-nowait, switch-primary

Note

The *timeout* value is interpreted as a multiple of the Alchemy clock resolution (see –alchemy-clock-resolution option, defaults to 1 nanosecond).

6.81.2.5 int rt mutex create ( RT MUTEX \* mutex, const char \* name )

Create a mutex.

Create a mutual exclusion object that allows multiple tasks to synchronize access to a shared resource. A mutex is left in an unlocked state after creation.

#### **Parameters**

| mutex | The address of a mutex descriptor which can be later used to identify uniquely the created object, upon success of this call. |
|-------|---|
| name  | An ASCII string standing for the symbolic name of the mutex. When non-NULL and  |
|       | non-empty, a copy of this string is used for indexing the created mutex into the object                                       |
|       | registry.   |

#### Returns

Zero is returned upon success. Otherwise:

- -ENOMEM is returned if the system fails to get memory from the main heap in order to create the mutex.
- -EEXIST is returned if the *name* is conflicting with an already registered mutex.
- -EPERM is returned if this service was called from an asynchronous context.

Tags

thread-unrestricted, switch-secondary

Note

Mutexes can be shared by multiple processes which belong to the same Xenomai session.

References pthread\_mutex\_init(), pthread\_mutexattr\_destroy(), pthread\_mutexattr\_init(), pthread\_mutexattr\_setprotocol(), pthread\_mutexattr\_setpshared(), and pthread\_mutexattr\_settype().

6.81.2.6 int rt\_mutex\_delete ( RT\_MUTEX \* mutex )

Delete a mutex.

This routine deletes a mutex object previously created by a call to rt mutex create().

Parameters

6.81 Mutex services 379

| mutex | The mutex descriptor. |  |
|-------|-----------------------|--|
| matex | The matex accompton   |  |

#### Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if alarm is not a valid mutex descriptor.
- -EPERM is returned if this service was called from an asynchronous context.
- -EBUSY is returned upon an attempt to destroy the object referenced by mutex while it is referenced (for example, while being used in a rt\_mutex\_acquite(), rt\_mutex\_acquire\_timed() or rt\_mutex\_acquire\_until() by another task).

## Tags

thread-unrestricted, switch-secondary

References pthread\_mutex\_destroy().

```
6.81.2.7 int rt_mutex_inquire ( RT_MUTEX * mutex, RT_MUTEX_INFO * info )
```

Query mutex status.

This routine returns the status information about the specified mutex.

#### **Parameters**

| mutex | The mutex descriptor.                                      |
|-------|--|
| info  | A pointer to the returnbuffer" to copy the information to. |

### Returns

Zero is returned and status information is written to the structure pointed at by *info* upon success. Otherwise:

- -EINVAL is returned if *mutex* is not a valid mutex descriptor.
- · -EPERM is returned if this service is called from an interrupt context.

### Tags

xthread-only, switch-primary

References RT\_MUTEX\_INFO::name, RT\_MUTEX\_INFO::owner, pthread\_mutex\_trylock(), and pthread\_mutex\_unlock().

```
6.81.2.8 int rt_mutex_release ( RT_MUTEX * mutex )
```

Release/unlock a mutex.

This routine releases a mutex object previously locked by a call to rt\_mutex\_acquire() or rt\_mutex\_acquire(). If the mutex is pended, the first waiting task (by priority order) is immediately unblocked and transfered the ownership of the mutex; otherwise, the mutex is left in an unlocked state.

| mutex | The mutex descri | otor. |  |
|-------|------------------|-------|--|

### Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if alarm is not a valid mutex descriptor.
- -EPERM is returned if *mutex* is not owned by the current task, or more generally if this service was called from a context which cannot own any mutex (e.g. interrupt context).

# Tags

xthread-only, switch-primary

References pthread\_mutex\_unlock().

6.81.2.9 int rt mutex unbind ( RT MUTEX \* mutex )

Unbind from a mutex.

**Parameters** 

mutex The mutex descriptor.

This routine releases a previous binding to a mutex. After this call has returned, the descriptor is no more valid for referencing this object.

# 6.82 Message pipe services

Two-way communication channel between Xenomai & Linux domains.

Collaboration diagram for Message pipe services:



## Macros

#define P\_MINOR\_AUTO XNPIPE\_MINOR\_AUTO

Creation flags.

• #define P URGENT 0x1

Operation flags.

### **Functions**

• int rt\_pipe\_create (RT\_PIPE \*pipe, const char \*name, int minor, size\_t poolsize)

Create a message pipe.

• int rt\_pipe\_delete (RT\_PIPE \*pipe)

Delete a message pipe.

ssize\_t rt\_pipe\_read\_timed (RT\_PIPE \*pipe, void \*buf, size\_t size, const struct timespec \*abs\_timeout)

Read a message from a pipe.

• static ssize\_t rt\_pipe\_read\_until (RT\_PIPE \*pipe, void \*buf, size\_t size, RTIME timeout)

Read from a pipe (with absolute scalar timeout).

static ssize\_t rt\_pipe\_read (RT\_PIPE \*pipe, void \*buf, size\_t size, RTIME timeout)

Read from a pipe (with relative scalar timeout).

ssize\_t rt\_pipe\_write (RT\_PIPE \*pipe, const void \*buf, size\_t size, int mode)

Write a message to a pipe.

• ssize\_t rt\_pipe\_stream (RT\_PIPE \*pipe, const void \*buf, size\_t size)

Stream bytes through a pipe.

• int rt\_pipe\_bind (RT\_PIPE \*pipe, const char \*name, RTIME timeout)

Bind to a message pipe.

• int rt\_pipe\_unbind (RT\_PIPE \*pipe)

Unbind from a message pipe.

## 6.82.1 Detailed Description

Two-way communication channel between Xenomai & Linux domains. A message pipe is a two-way communication channel between Xenomai threads and normal Linux threads using regular file I/O operations on a pseudo-device. Pipes can be operated in a message-oriented fashion so that message boundaries are preserved, and also in byte-oriented streaming mode from real-time to normal Linux threads for optimal throughput.

382 Module Documentation

Xenomai threads open their side of the pipe using the rt\_pipe\_create() service; regular Linux threads do the same by opening one of the /dev/rtpN special devices, where N is the minor number agreed upon between both ends of each pipe.

In addition, named pipes are available through the registry support, which automatically creates a symbolic link from entries under /proc/xenomai/registry/rtipc/xddp/ to the corresponding special device file.

#### Note

Alchemy's message pipes are fully based on the XDDP protocol available from the RTDM/ipc driver.

### 6.82.2 Macro Definition Documentation

6.82.2.1 #define P\_MINOR\_AUTO XNPIPE\_MINOR\_AUTO

Creation flags.

6.82.2.2 #define P URGENT 0x1

Operation flags.

Referenced by rt pipe write().

#### 6.82.3 Function Documentation

6.82.3.1 int rt pipe bind ( RT PIPE \* pipe, const char \* name, RTIME timeout )

Bind to a message pipe.

This routine creates a new descriptor to refer to an existing message pipe identified by its symbolic name. If the object does not exist on entry, the caller may block until a pipe of the given name is created.

#### **Parameters**

| pipe    | The address of a pipe descriptor filled in by the operation. Contents of this memory  |
|---------|---|
|         | is undefined upon failure.  |
| name    | A valid NULL-terminated name which identifies the pipe to bind to. This string should |
|         | match the object name argument passed to rt_pipe_create().                            |
| timeout | The number of clock ticks to wait for the registration to occur (see note). Passing   |
|         | TM_INFINITE causes the caller to block indefinitely until the object is registered.   |
|         | Passing TM_NONBLOCK causes the service to return immediately without waiting          |
|         | if the object is not registered on entry.   |

#### Returns

Zero is returned upon success. Otherwise:

- -EINTR is returned if rt\_task\_unblock() was called for the current task before the retrieval has completed.
- -EWOULDBLOCK is returned if *timeout* is equal to TM\_NONBLOCK and the searched object is not registered on entry.
- -ETIMEDOUT is returned if the object cannot be retrieved within the specified amount of time.
- -EPERM is returned if this service should block, but was not called from a Xenomai thread.

Tags

#### xthread-nowait

#### Note

The *timeout* value is interpreted as a multiple of the Alchemy clock resolution (see –alchemy-clock-resolution option, defaults to 1 nanosecond).

6.82.3.2 int rt\_pipe\_create ( RT\_PIPE \* pipe, const char \* name, int minor, size\_t poolsize )

#### Create a message pipe.

This service opens a bi-directional communication channel for exchanging messages between Xenomai threads and regular Linux threads. Pipes natively preserve message boundaries, but can also be used in byte-oriented streaming mode from Xenomai to Linux.

rt\_pipe\_create() always returns immediately, even if no thread has opened the associated special device file yet. On the contrary, the non real-time side could block upon attempt to open the special device file until rt\_pipe\_create() is issued on the same pipe from a Xenomai thread, unless O\_NONBLOCK was given to the open(2) system call.

#### **Parameters**

| pipe | The address of a pipe descriptor which can be later used to identify uniquely the      |
|------|--|
|      | created object, upon success of this call.   |
| name | An ASCII string standing for the symbolic name of the pipe. When non-NULL and          |
|      | non-empty, a copy of this string is used for indexing the created pipe into the object |
|      | registry.  |

Named pipes are supported through the use of the registry. Passing a valid *name* parameter when creating a message pipe causes a symbolic link to be created from /proc/xenomai/registry/rtipc/xddp/*name* to the associated special device (i.e. /dev/rtp\*), so that the specific *minor* information does not need to be known from those processes for opening the proper device file. In such a case, both sides of the pipe only need to agree upon a symbolic name to refer to the same data path, which is especially useful whenever the *minor* number is picked up dynamically using an adaptive algorithm, such as passing P\_MINOR\_AUTO as *minor* value.

#### **Parameters**

| minor    | The minor number of the device associated with the pipe. Passing P_MINOR_A-UTO causes the minor number to be auto-allocated. In such a case, a symbolic link will be automatically created from /proc/xenomai/registry/rtipc/xddp/name to the allocated pipe device entry. Valid minor numbers range from 0 to CONFIG_XENO_OPT_PIPE_NRDEV-1. |
|----------|--|
| poolsize | Specifies the size of a dedicated buffer pool for the pipe. Passing 0 means that all message allocations for this pipe are performed on the Cobalt core heap.  |

#### Returns

Zero is returned upon success. Otherwise:

- -ENOMEM is returned if the system fails to get memory from the main heap in order to create the pipe.
- -ENODEV is returned if *minor* is different from P\_MINOR\_AUTO and is not a valid minor number.
- -EEXIST is returned if the *name* is conflicting with an already registered pipe.
- -EBUSY is returned if minor is already open.
- -EPERM is returned if this service was called from an asynchronous context.

Tags

#### thread-unrestricted, switch-secondary

References IPCPROTO\_XDDP, rtipc\_port\_label::label, sockaddr\_ipc::sipc\_family, sockaddr\_ipc::sipc\_port, XDDP\_BUFSZ, XDDP\_LABEL, and XDDP\_POOLSZ.

```
6.82.3.3 int rt_pipe_delete ( RT_PIPE * pipe )
```

Delete a message pipe.

This routine deletes a pipe object previously created by a call to rt\_pipe\_create(). All resources attached to that pipe are automatically released, all pending data is flushed.

**Parameters** 

| pipe | The pipe descriptor. |
|------|----------------------|

#### Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if pipe is not a valid pipe descriptor.
- -EIDRM is returned if pipe is a closed pipe descriptor.
- -EPERM is returned if this service was called from an asynchronous context.

Tags

thread-unrestricted, switch-secondary

```
6.82.3.4 ssize_t rt_pipe_read ( RT_PIPE * pipe, void * buf, size_t size, RTIME timeout ) [inline], [static]
```

Read from a pipe (with relative scalar timeout).

This routine is a variant of rt\_queue\_read\_timed() accepting a relative timeout specification expressed as a scalar value.

**Parameters** 

| pipe    | The pipe descriptor.  |
|---------|---|
| buf     | A pointer to a memory area which will be written upon success with the message received.  |
| size    | The count of bytes from the received message to read up into <i>buf</i> . If <i>size</i> is lower than the actual message size, -ENOBUFS is returned since the incompletely received message would be lost. If <i>size</i> is zero, this call returns immediately with no other action. |
| timeout | A delay expressed in clock ticks.   |

#### Tags

xthread-nowait, switch-primary

References rt\_pipe\_read\_timed().

6.82.3.5 ssize\_t rt\_pipe\_read\_timed ( RT\_PIPE \* pipe, void \* buf, size\_t size, const struct timespec \* abs\_timeout )

Read a message from a pipe.

This service reads the next available message from a given pipe.

| pipe        | The pipe descriptor.   |
|-------------|--|
| buf         | A pointer to a memory area which will be written upon success with the message   |
|             | received.  |
| size        | The count of bytes from the received message to read up into <i>buf</i> . If <i>size</i> is lower than the actual message size, -ENOBUFS is returned since the incompletely received message would be lost. If <i>size</i> is zero, this call returns immediately with no other action.  |
| abs_timeout | An absolute date expressed in clock ticks, specifying a time limit to wait for a message to be available from the pipe (see note). Passing NULL causes the caller to block indefinitely until a message is available. Passing { .tv_sec = 0, .tv_nsec = 0 } causes the service to return immediately without blocking in case no message is available. |

#### Returns

The number of bytes available from the received message is returned upon success. Otherwise:

- -ETIMEDOUT is returned if abs timeout is reached before a message arrives.
- -EWOULDBLOCK is returned if abs\_timeout is { .tv\_sec = 0, .tv\_nsec = 0 } and no message is immediately available on entry to the call.
- -EINTR is returned if rt\_task\_unblock() was called for the current task before a message was available.
- -EINVAL is returned if pipe is not a valid pipe descriptor.
- -EIDRM is returned if *pipe* is deleted while the caller was waiting for a message. In such event, *pipe* is no more valid upon return of this service.
- -EPERM is returned if this service should block, but was not called from a Xenomai thread.

### Tags

xthread-nowait, switch-primary

## Note

abs\_timeout is interpreted as a multiple of the Alchemy clock resolution (see -alchemy-clock-resolution option, defaults to 1 nanosecond).

References SO RCVTIMEO.

Referenced by rt\_pipe\_read(), and rt\_pipe\_read\_until().

6.82.3.6 ssize\_t rt\_pipe\_read\_until ( RT\_PIPE \* pipe, void \* buf, size\_t size, RTIME abs\_timeout ) [inline], [static]

Read from a pipe (with absolute scalar timeout).

This routine is a variant of rt\_queue\_read\_timed() accepting an absolute timeout specification expressed as a scalar value.

| pipe        | The pipe descriptor.   |
|-------------|--|
| buf         | A pointer to a memory area which will be written upon success with the message       |
|             | received.  |
| size        | The count of bytes from the received message to read up into buf. If size is lower   |
|             | than the actual message size, -ENOBUFS is returned since the incompletely re-        |
|             | ceived message would be lost. If size is zero, this call returns immediately with no |
|             | other action.  |
| abs_timeout | An absolute date expressed in clock ticks.   |

### Tags

xthread-nowait, switch-primary

References rt\_pipe\_read\_timed().

```
6.82.3.7 ssize_t rt_pipe_stream ( RT_PIPE * pipe, const void * buf, size_t size )
```

Stream bytes through a pipe.

This service writes a sequence of bytes to be received from the associated special device. Unlike rt\_pipe\_send(), this service does not preserve message boundaries. Instead, an internal buffer is filled on the fly with the data, which will be consumed as soon as the receiver wakes up.

Data buffers sent by the rt\_pipe\_stream() service are always transmitted in FIFO order (i.e. P\_NORMAL mode).

#### **Parameters**

| pipe | The pipe descriptor.   |
|------|--|
| buf  | The address of the first data byte to send. The data will be copied to an internal |
|      | buffer before transmission.  |
| size | The size in bytes of the buffer. Zero is a valid value, in which case the service  |
|      | returns immediately without sending any data.                                      |

#### Returns

The number of bytes sent upon success; this value may be lower than *size*, depending on the available space in the internal buffer. Otherwise:

- -EINVAL is returned if mode is invalid or pipe is not a pipe descriptor.
- -ENOMEM is returned if not enough buffer space is available to complete the operation.
- -EIDRM is returned if pipe is a closed pipe descriptor.

#### Note

Writing data to a pipe before any peer has opened the associated special device is allowed. The output will be buffered until then, only restricted by the available memory in the associated buffer pool (see rt\_pipe\_create()).

## Tags

xcontext, switch-primary

```
6.82.3.8 int rt pipe unbind ( RT PIPE * pipe )
```

Unbind from a message pipe.

| pipe | The pipe descriptor. |
|------|----------------------|
|------|----------------------|

This routine releases a previous binding to a message pipe. After this call has returned, the descriptor is no more valid for referencing this object.

#### Tags

thread-unrestricted

6.82.3.9 ssize\_t rt\_pipe\_write ( RT\_PIPE \* pipe, const void \* buf, size\_t size, int mode )

Write a message to a pipe.

This service writes a complete message to be received from the associated special device. rt\_pipe\_write() always preserves message boundaries, which means that all data sent through a single call of this service will be gathered in a single read(2) operation from the special device.

This service differs from rt\_pipe\_send() in that it accepts a pointer to the raw data to be sent, instead of a canned message buffer.

#### **Parameters**

| pipe | The pipe descriptor.  |
|------|---|
| buf  | The address of the first data byte to send. The data will be copied to an internal    |
|      | buffer before transmission.   |
| size | The size in bytes of the message (payload data only). Zero is a valid value, in which |
|      | case the service returns immediately without sending any message.                     |
| mode | A set of flags affecting the operation:   |

- P\_URGENT causes the message to be prepended to the output queue, ensuring a LIFO ordering.
- P NORMAL causes the message to be appended to the output queue, ensuring a FIFO ordering.

#### Returns

Upon success, this service returns *size*. Upon error, one of the following error codes is returned:

- -EINVAL is returned if *mode* is invalid or *pipe* is not a pipe descriptor.
- -ENOMEM is returned if not enough buffer space is available to complete the operation.
- -EIDRM is returned if *pipe* is a closed pipe descriptor.

#### Note

Writing data to a pipe before any peer has opened the associated special device is allowed. The output will be buffered until then, only restricted by the available memory in the associated buffer pool (see rt\_pipe\_create()).

#### Tags

xcontext, switch-primary

References P\_URGENT.

# 6.83 Message queue services

real-time IPC mechanism for sending messages of arbitrary size Collaboration diagram for Message queue services:



## **Data Structures**

struct RT\_QUEUE\_INFO
 Queue status descriptor.

#### Macros

#define Q\_PRIO 0x1 /\* Pend by task priority order. \*/
 Creation flags.

## **Functions**

• int rt\_queue\_create (RT\_QUEUE \*queue, const char \*name, size\_t poolsize, size\_t qlimit, int mode)

Create a message queue.

• int rt\_queue\_delete (RT\_QUEUE \*queue)

Delete a message queue.

void \* rt\_queue\_alloc (RT\_QUEUE \*queue, size\_t size)

Allocate a message buffer.

int rt\_queue\_free (RT\_QUEUE \*queue, void \*buf)

Free a message buffer.

- int rt\_queue\_send (RT\_QUEUE \*queue, const void \*buf, size\_t size, int mode)
  - Send a message to a queue.
- ssize\_t rt\_queue\_receive\_timed (RT\_QUEUE \*queue, void \*\*bufp, const struct timespec \*abs\_timeout)

Receive a message from a queue (with absolute timeout date).

static ssize\_t rt\_queue\_receive\_until (RT\_QUEUE \*queue, void \*\*bufp, RTIME timeout)

Receive from a queue (with absolute scalar timeout).

• static ssize\_t rt\_queue\_receive (RT\_QUEUE \*queue, void \*\*bufp, RTIME timeout)

Receive from a queue (with relative scalar timeout).

 ssize\_t rt\_queue\_read\_timed (RT\_QUEUE \*queue, void \*buf, size\_t size, const struct timespec \*abs\_timeout)

Read from a queue.

• static ssize\_t rt\_queue\_read\_until (RT\_QUEUE \*queue, void \*buf, size\_t size, RTIME timeout)

Read from a queue (with absolute scalar timeout).

• static ssize\_t rt\_queue\_read (RT\_QUEUE \*queue, void \*buf, size\_t size, RTIME timeout)

Read from a queue (with relative scalar timeout).

• int rt queue flush (RT QUEUE \*queue)

Flush pending messages from a queue.

• int rt\_queue\_inquire (RT\_QUEUE \*queue, RT\_QUEUE\_INFO \*info)

Query queue status.

390

• int rt queue bind (RT QUEUE \*queue, const char \*name, RTIME timeout)

Bind to a message queue.

int rt\_queue\_unbind (RT\_QUEUE \*queue)

Unbind from a message queue.

## 6.83.1 Detailed Description

real-time IPC mechanism for sending messages of arbitrary size Message queueing is a method by which real-time tasks can exchange or pass data through a Xenomai-managed queue of messages. Messages can vary in length and be assigned different types or usages. A message queue can be created by one task and used by multiple tasks that send and/or receive messages to the queue.

### 6.83.2 Macro Definition Documentation

6.83.2.1 #define Q\_PRIO 0x1 /\* Pend by task priority order. \*/

#### Creation flags.

Referenced by rt\_queue\_create().

### 6.83.3 Function Documentation

```
6.83.3.1 void * rt_queue_alloc ( RT_QUEUE * q, size_t size )
```

### Allocate a message buffer.

This service allocates a message buffer from the queue's internal pool. This buffer can be filled in with payload information, prior enqueuing it by a call to rt\_queue\_send(). When used in pair, these services provide a zero-copy interface for sending messages.

#### Parameters

| q    | The queue descriptor.   |
|------|---|
| size | The requested size in bytes of the buffer. Zero is an acceptable value, which means   |
|      | that the message conveys no payload; in this case, the receiver will get a zero-sized |
|      | message.  |

#### Returns

The address of the allocated buffer upon success, or NULL if the call fails.

## Tags

unrestricted, switch-primary

6.83.3.2 int rt\_queue\_bind ( RT\_QUEUE \* q, const char \* name, RTIME timeout )

Bind to a message queue.

This routine creates a new descriptor to refer to an existing message queue identified by its symbolic name. If the object does not exist on entry, the caller may block until a queue of the given name is created.

#### **Parameters**

| q       | The address of a queue descriptor filled in by the operation. Contents of this mem- |
|---------|---|
|         | ory is undefined upon failure.  |
| name    | A valid NULL-terminated name which identifies the queue to bind to. This string     |
|         | should match the object name argument passed to rt_queue_create().                  |
| timeout | The number of clock ticks to wait for the registration to occur (see note). Passing |
|         | TM_INFINITE causes the caller to block indefinitely until the object is registered. |
|         | Passing TM_NONBLOCK causes the service to return immediately without waiting        |
|         | if the object is not registered on entry.   |

#### Returns

Zero is returned upon success. Otherwise:

- -EINTR is returned if rt\_task\_unblock() was called for the current task before the retrieval has completed.
- -EWOULDBLOCK is returned if timeout is equal to TM\_NONBLOCK and the searched object is not registered on entry.
- -ETIMEDOUT is returned if the object cannot be retrieved within the specified amount of time.
- -EPERM is returned if this service should block, but was not called from a Xenomai thread.

#### Tags

xthread-nowait, switch-primary

#### Note

The *timeout* value is interpreted as a multiple of the Alchemy clock resolution (see –alchemy-clock-resolution option, defaults to 1 nanosecond).

6.83.3.3 int rt\_queue\_create ( RT\_QUEUE \* q, const char \* name, size\_t poolsize, size\_t qlimit, int mode )

### Create a message queue.

Create a message queue object which allows multiple tasks to exchange data through the use of variable-sized messages. A message queue is created empty.

This service needs the special character device /dev/rtheap (10,254) when called from user-space tasks.

## **Parameters**

q The address of a queue descriptor which can be later used to identify uniquely the created object, upon success of this call.

| name     | An ASCII string standing for the symbolic name of the queue. When non-NULL           |
|----------|--|
|          | and non-empty, a copy of this string is used for indexing the created queue into the |
|          | object registry.   |
| poolsize | The size (in bytes) of the message buffer pool to be pre-allocated for holding mes-  |
|          | sages. Message buffers will be claimed and released to this pool. The buffer pool    |
|          | memory cannot be extended. See note.   |
| qlimit   | This parameter allows to limit the maximum number of messages which can be           |
|          | queued at any point in time, sending to a full queue begets an error. The special    |
|          | value Q_UNLIMITED can be passed to disable the limit check.                          |
| mode     | The queue creation mode. The following flags can be OR'ed into this bitmask, each    |
|          | of them affecting the new queue:   |

- Q\_FIFO makes tasks pend in FIFO order on the queue for consuming messages.
- Q\_PRIO makes tasks pend in priority order on the queue.

#### Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if mode is invalid or poolsize is zero.
- -ENOMEM is returned if the system fails to get memory from the main heap in order to create the queue.
- -EEXIST is returned if the name is conflicting with an already registered queue.
- · -EPERM is returned if this service was called from an asynchronous context.

### Tags

thread-unrestricted, switch-secondary

## Note

Queues can be shared by multiple processes which belong to the same Xenomai session. Each message pending into the queue consumes four long words plus the actual payload size, aligned to the next long word boundary. e.g. a 6 byte message on a 32 bit platform would require 24 bytes of storage into the pool.

When *qlimit* is given (i.e. different from Q\_UNLIMITED), this overhead is accounted for automatically, so that *qlimit* messages of *poolsize* / *qlimit* bytes can be stored into the pool concurrently. Otherwise, *poolsize* is increased by 5% internally to cope with such overhead.

References Q PRIO.

6.83.3.4 int rt\_queue\_delete ( RT\_QUEUE \* q )

## Delete a message queue.

This routine deletes a queue object previously created by a call to rt\_queue\_create(). All resources attached to that queue are automatically released, including all pending messages.

Parameters

q The queue descriptor.

#### Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if q is not a valid queue descriptor.
- · -EPERM is returned if this service was called from an asynchronous context.

### Tags

thread-unrestricted, switch-secondary

```
6.83.3.5 int rt_queue_flush ( RT_QUEUE * q )
```

Flush pending messages from a queue.

This routine flushes all messages currently pending in a queue, releasing all message buffers appropriately.

#### **Parameters**

q The queue descriptor.

#### Returns

Zero is returned upon success. Otherwise:

• -EINVAL is returned if q is not a valid queue descriptor.

### Tags

unrestricted, switch-primary

```
6.83.3.6 int rt_queue_free ( RT_QUEUE * q, void * buf )
```

Free a message buffer.

This service releases a message buffer to the queue's internal pool.

#### **Parameters**

| q   | The queue descriptor.   |
|-----|---|
| buf | The address of the message buffer to free. Even zero-sized messages carrying no   |
|     | payload data must be freed, since they are assigned a valid memory space to store |
|     | internal information.   |

#### Returns

Zero is returned upon success, or -EINVAL if *buf* is not a valid message buffer previously allocated by the rt\_queue\_alloc() service, or the caller did not get ownership of the message through a successful return from rt\_queue\_receive().

### Tags

unrestricted, switch-primary

```
6.83.3.7 int rt_queue_inquire ( RT_QUEUE * q, RT_QUEUE_INFO * info )
```

### Query queue status.

This routine returns the status information about the specified queue.

#### **Parameters**

| q    | The queue descriptor.                                      |
|------|--|
| info | A pointer to the returnbuffer" to copy the information to. |

#### Returns

Zero is returned and status information is written to the structure pointed at by *info* upon success. Otherwise:

• -EINVAL is returned if q is not a valid queue descriptor.

#### Tags

### unrestricted, switch-primary

References RT\_QUEUE\_INFO::mode, RT\_QUEUE\_INFO::name, RT\_QUEUE\_INFO::nmessages, RT\_QUEUE\_INFO::nwaiters, RT\_QUEUE\_INFO::poolsize, RT\_QUEUE\_INFO::qlimit, and RT\_QUEUE\_INFO::usedmem.

Read from a queue (with relative scalar timeout).

This routine is a variant of rt\_queue\_read\_timed() accepting a relative timeout specification expressed as a scalar value.

#### **Parameters**

| q       | The queue descriptor.   |
|---------|---|
| buf     | A pointer to a memory area which will be written upon success with the received |
|         | message payload.  |
| size    | The length in bytes of the memory area pointed to by buf.                       |
| timeout | A delay expressed in clock ticks.   |

#### Tags

xthread-nowait, switch-primary

References rt\_queue\_read\_timed().

```
6.83.3.9 ssize_t rt_queue_read_timed ( RT_QUEUE * q, void * buf, size_t size, const struct timespec * abs timeout )
```

## Read from a queue.

This service reads the next available message from a given queue.

| q           | The queue descriptor.   |
|-------------|---|
| buf         |   |
|             | message payload. The internal message buffer conveying the data is automatically  |
|             | freed by this call.   |
| size        | The length in bytes of the memory area pointed to by buf. Messages larger than  |
|             | size are truncated appropriately.   |
| abs_timeout | An absolute date expressed in clock ticks, specifying a time limit to wait for a message to be available from the queue (see note). Passing NULL causes the caller to block indefinitely until a message is available. Passing { .tv_sec = 0, .tv_nsec = 0 } causes the service to return immediately without blocking in case no message is available. |

#### Returns

The number of bytes copied to *buf* is returned upon success. Zero is a possible value corresponding to a zero-sized message passed to rt\_queue\_send() or rt\_queue\_write(). Otherwise:

- -ETIMEDOUT is returned if abs timeout is reached before a message arrives.
- -EWOULDBLOCK is returned if abs\_timeout is { .tv\_sec = 0, .tv\_nsec = 0 } and no message is immediately available on entry to the call.
- -EINTR is returned if rt\_task\_unblock() was called for the current task before a message was available.
- -EINVAL is returned if q is not a valid queue descriptor.
- -EIDRM is returned if *q* is deleted while the caller was waiting for a message. In such event, *q* is no more valid upon return of this service.
- -EPERM is returned if this service should block, but was not called from a Xenomai thread.

### Tags

xthread-nowait, switch-primary

## Note

abs\_timeout is interpreted as a multiple of the Alchemy clock resolution (see -alchemy-clock-resolution option, defaults to 1 nanosecond).

Referenced by rt queue read(), and rt queue read until().

6.83.3.10 ssize\_t rt\_queue\_read\_until ( RT\_QUEUE \* q, void \* buf, size\_t size, RTIME abs\_timeout ) [inline], [static]

Read from a queue (with absolute scalar timeout).

This routine is a variant of rt\_queue\_read\_timed() accepting an absolute timeout specification expressed as a scalar value.

### **Parameters**

| q | The queue descriptor. |
|---|-----------------------|

396 Module Documentation

| buf         | A pointer to a memory area which will be written upon success with the received message payload. |
|-------------|--|
| size        | The length in bytes of the memory area pointed to by buf.  |
| abs_timeout | An absolute date expressed in clock ticks.   |

## Tags

xthread-nowait, switch-primary

References rt\_queue\_read\_timed().

```
6.83.3.11 ssize_t rt_queue_receive ( RT_QUEUE * q, void ** bufp, RTIME timeout ) [inline], [static]
```

Receive from a queue (with relative scalar timeout).

This routine is a variant of rt\_queue\_receive\_timed() accepting a relative timeout specification expressed as a scalar value.

#### **Parameters**

| q       | The queue descriptor.   |
|---------|---|
| bufp    | A pointer to a memory location which will be written with the address of the received |
|         | message.  |
| timeout | A delay expressed in clock ticks.   |

#### Tags

xthread-nowait, switch-primary

References rt\_queue\_receive\_timed().

```
6.83.3.12 ssize_t rt_queue_receive_timed ( RT_QUEUE * q, void ** bufp, const struct timespec * abs_timeout )
```

Receive a message from a queue (with absolute timeout date).

This service receives the next available message from a given queue.

#### **Parameters**

| q           | The queue descriptor.  |
|-------------|--|
| bufp        | ,  |
|             | message, upon success. Once consumed, the message space should be freed              |
|             | using rt_queue_free().   |
| abs_timeout | 1  |
|             | sage to be available from the queue (see note). Passing NULL causes the caller to    |
|             | block indefinitely until a message is available. Passing { .tv_sec = 0, .tv_nsec = 0 |
|             | } causes the service to return immediately without blocking in case no message is    |
|             | available.   |

### Returns

The number of bytes available from the received message is returned upon success. Zero is a possible value corresponding to a zero-sized message passed to rt\_queue\_send() or rt\_queue\_write(). Otherwise:

• -ETIMEDOUT is returned if abs\_timeout is reached before a message arrives.

- -EWOULDBLOCK is returned if abs\_timeout is { .tv\_sec = 0, .tv\_nsec = 0 } and no message is immediately available on entry to the call.
- -EINTR is returned if rt\_task\_unblock() was called for the current task before a message was available.
- -EINVAL is returned if q is not a valid queue descriptor.
- -EIDRM is returned if *q* is deleted while the caller was waiting for a message. In such event, *q* is no more valid upon return of this service.
- -EPERM is returned if this service should block, but was not called from a Xenomai thread.

### Tags

xthread-nowait, switch-primary

#### Note

abs\_timeout is interpreted as a multiple of the Alchemy clock resolution (see -alchemy-clock-resolution option, defaults to 1 nanosecond).

Referenced by rt\_queue\_receive(), and rt\_queue\_receive\_until().

```
6.83.3.13 ssize_t rt_queue_receive_until ( RT_QUEUE * q, void ** bufp, RTIME abs_timeout ) [inline], [static]
```

Receive from a queue (with absolute scalar timeout).

This routine is a variant of rt\_queue\_receive\_timed() accepting an absolute timeout specification expressed as a scalar value.

#### **Parameters**

| q           | The queue descriptor.   |
|-------------|---|
| bufp        | A pointer to a memory location which will be written with the address of the received |
|             | message.  |
| abs_timeout | An absolute date expressed in clock ticks.  |

## Tags

xthread-nowait, switch-primary

References rt\_queue\_receive\_timed().

```
6.83.3.14 int rt_queue_send ( RT_QUEUE * q, const void * buf, size_t size, int mode )
```

Send a message to a gueue.

This service sends a complete message to a given queue. The message must have been allocated by a previous call to rt\_queue\_alloc().

## **Parameters**

| q The queue descriptor. |
|-------------------------|
|-------------------------|

398 Module Documentation

| buf  | The address of the message buffer to be sent. The message buffer must have been            |
|------|--|
|      | allocated using the rt_queue_alloc() service. Once passed to rt_queue_send(), the          |
|      | memory pointed to by <i>buf</i> is no more under the control of the sender and thus should |
|      | not be referenced by it anymore; deallocation of this memory must be handled on            |
|      | the receiving side.  |
| size | The actual size in bytes of the message, which may be lower than the allocated size        |
|      | for the buffer obtained from rt_queue_alloc(). Zero is a valid value, in which case an     |
|      | empty message will be sent.  |
| mode | A set of flags affecting the operation:  |

- Q\_URGENT causes the message to be prepended to the message queue, ensuring a LIFO ordering.
- Q\_NORMAL causes the message to be appended to the message queue, ensuring a FIFO ordering.
- Q\_BROADCAST causes the message to be sent to all tasks currently waiting for messages. The
  message is not copied; a reference count is maintained instead so that the message will remain
  valid until the last receiver releases its own reference using rt\_queue\_free(), after which the message space will be returned to the queue's internal pool.

#### Returns

Upon success, this service returns the number of receivers which got awaken as a result of the operation. If zero is returned, no task was waiting on the receiving side of the queue, and the message has been enqueued. Upon error, one of the following error codes is returned:

- -EINVAL is returned if q is not a message queue descriptor, mode is invalid, or buf is NULL.
- -ENOMEM is returned if queuing the message would exceed the limit defined for the queue at creation.

#### Tags

unrestricted, switch-primary

6.83.3.15 int rt queue unbind (RT QUEUE \* q)

Unbind from a message queue.

## Parameters

q The queue descriptor.

This routine releases a previous binding to a message queue. After this call has returned, the descriptor is no more valid for referencing this object.


## Tags

thread-unrestricted

# 6.84 Semaphore services

Counting semaphore IPC mechanism.

Collaboration diagram for Semaphore services:

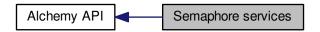

# **Data Structures**

struct RT SEM INFO

Semaphore status descriptor.

#### Macros

#define S\_PRIO 0x1 /\* Pend by task priority order. \*/
 Creation flags.

#### **Functions**

- int rt\_sem\_create (RT\_SEM \*sem, const char \*name, unsigned long icount, int mode)

  Create a counting semaphore.
- int rt\_sem\_delete (RT\_SEM \*sem)

Delete a semaphore.

int rt\_sem\_p\_timed (RT\_SEM \*sem, const struct timespec \*abs\_timeout)

Pend on a semaphore.

• static int rt\_sem\_p\_until (RT\_SEM \*sem, RTIME timeout)

Pend on a semaphore (with absolute scalar timeout).

• static int rt\_sem\_p (RT\_SEM \*sem, RTIME timeout)

Pend on a semaphore (with relative scalar timeout).

• int rt\_sem\_v (RT\_SEM \*sem)

Signal a semaphore.

• int rt\_sem\_broadcast (RT\_SEM \*sem)

Broadcast a semaphore.

• int rt\_sem\_inquire (RT\_SEM \*sem, RT\_SEM\_INFO \*info)

Query semaphore status.

• int rt\_sem\_bind (RT\_SEM \*sem, const char \*name, RTIME timeout)

Bind to a semaphore.

• int rt\_sem\_unbind (RT\_SEM \*sem)

Unbind from a semaphore.

400 Module Documentation

## 6.84.1 Detailed Description

Counting semaphore IPC mechanism. A counting semaphore is a synchronization object for controlling the concurrency level allowed in accessing a resource from multiple real-time tasks, based on the value of a count variable accessed atomically. The semaphore is used through the P ("Proberen", from the Dutch "test and decrement") and V ("Verhogen", increment) operations. The P operation decrements the semaphore count by one if non-zero, or waits until a V operation is issued by another task. Conversely, the V operation releases a resource by incrementing the count by one, unblocking the heading task waiting on the P operation if any. Waiting on a semaphore may cause a priority inversion.

If no more than a single resource is made available at any point in time, the semaphore enforces mutual exclusion and thus can be used to serialize access to a critical section. However, mutexes should be used instead in order to prevent priority inversions, based on the priority inheritance protocol.

### 6.84.2 Macro Definition Documentation

6.84.2.1 #define S\_PRIO 0x1 /\* Pend by task priority order. \*/

Creation flags.

Referenced by rt\_sem\_create().

#### 6.84.3 Function Documentation

6.84.3.1 int rt\_sem\_bind ( RT\_SEM \* sem, const char \* name, RTIME timeout )

#### Bind to a semaphore.

This routine creates a new descriptor to refer to an existing semaphore identified by its symbolic name. If the object does not exist on entry, the caller may block until a semaphore of the given name is created.

#### **Parameters**

| sem     | The address of a semaphore descriptor filled in by the operation. Contents of this  |
|---------|---|
|         | memory is undefined upon failure.   |
| name    | A valid NULL-terminated name which identifies the semaphore to bind to. This string |
|         | should match the object name argument passed to rt_sem_create().                    |
| timeout | The number of clock ticks to wait for the registration to occur (see note). Passing |
|         | TM_INFINITE causes the caller to block indefinitely until the object is registered. |
|         | Passing TM_NONBLOCK causes the service to return immediately without waiting        |
|         | if the object is not registered on entry.   |

#### Returns

Zero is returned upon success. Otherwise:

- -EINTR is returned if rt\_task\_unblock() was called for the current task before the retrieval has completed.
- -EWOULDBLOCK is returned if *timeout* is equal to TM\_NONBLOCK and the searched object is not registered on entry.
- -ETIMEDOUT is returned if the object cannot be retrieved within the specified amount of time.
- -EPERM is returned if this service should block, but was not called from a Xenomai thread.

#### Tags

xthread-nowait, switch-primary

#### Note

The *timeout* value is interpreted as a multiple of the Alchemy clock resolution (see –alchemy-clock-resolution option, defaults to 1 nanosecond).

6.84.3.2 int rt sem broadcast ( RT SEM \* sem )

#### Broadcast a semaphore.

All tasks currently waiting on the semaphore are immediately unblocked. The semaphore count is set to zero.

#### **Parameters**

| sem | The semaphore descriptor. |
|-----|---------------------------|
|-----|---------------------------|

#### Returns

Zero is returned upon success. Otherwise:

• -EINVAL is returned if sem is not a valid semaphore descriptor.

## Tags

#### unrestricted

6.84.3.3 int rt sem create ( RT SEM \* sem, const char \* name, unsigned long icount, int mode )

# Create a counting semaphore.

# **Parameters**

| sem    | The address of a semaphore descriptor which can be later used to identify uniquely   |
|--------|--|
|        | the created object, upon success of this call.                                       |
| name   | An ASCII string standing for the symbolic name of the semaphore. When non-NULL       |
|        | and non-empty, a copy of this string is used for indexing the created semaphore into |
|        | the object registry.   |
| icount | The initial value of the counting semaphore.   |
| mode   | The semaphore creation mode. The following flags can be OR'ed into this bitmask:     |

- S\_FIFO makes tasks pend in FIFO order on the semaphore.
- S\_PRIO makes tasks pend in priority order on the semaphore.
- S\_PULSE causes the semaphore to behave in "pulse" mode. In this mode, the V (signal) operation attempts to release a single waiter each time it is called, without incrementing the semaphore count, even if no waiter is pending. For this reason, the semaphore count in pulse mode remains zero.

#### Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if icount is non-zero and S\_PULSE is set in mode, or mode is otherwise invalid.
- -ENOMEM is returned if the system fails to get memory from the main heap in order to create the semaphore.

- -EEXIST is returned if the *name* is conflicting with an already registered semaphore.
- · -EPERM is returned if this service was called from an asynchronous context.

# Tags

thread-unrestricted, switch-secondary

#### Note

Semaphores can be shared by multiple processes which belong to the same Xenomai session.

References S\_PRIO.

```
6.84.3.4 int rt_sem_delete ( RT_SEM * sem )
```

Delete a semaphore.

This routine deletes a semaphore previously created by a call to rt\_sem\_create().

**Parameters** 

| sem | The semaphore descriptor. |
|-----|---------------------------|

#### Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if sem is not a valid semaphore descriptor.
- · -EPERM is returned if this service was called from an asynchronous context.

# Tags

thread-unrestricted, switch-secondary

```
6.84.3.5 int rt_sem_inquire ( RT_SEM * sem, RT_SEM_INFO * info )
```

Query semaphore status.

This routine returns the status information about the specified semaphore.

#### **Parameters**

| sem  | The semaphore descriptor.                                  |
|------|--|
| info | A pointer to the returnbuffer" to copy the information to. |

# Returns

Zero is returned and status information is written to the structure pointed at by *info* upon success. Otherwise:

• -EINVAL is returned if sem is not a valid semaphore descriptor.

# Tags

#### unrestricted

References RT\_SEM\_INFO::count, RT\_SEM\_INFO::name, and RT\_SEM\_INFO::nwaiters.

6.84.3.6 intrt\_sem\_p ( RT\_SEM \* sem, RTIME timeout ) [inline], [static]

Pend on a semaphore (with relative scalar timeout).

This routine is a variant of rt\_sem\_p\_timed() accepting a relative timeout specification expressed as a scalar value.

#### **Parameters**

| sem     | The semaphore descriptor.         |
|---------|-----------------------------------|
| timeout | A delay expressed in clock ticks. |

#### Tags

xthread-nowait, switch-primary

References rt\_sem\_p\_timed().

6.84.3.7 int rt\_sem\_p\_timed ( RT\_SEM \* sem, const struct timespec \* abs\_timeout )

Pend on a semaphore.

Test and decrement the semaphore count. If the semaphore value is greater than zero, it is decremented by one and the service immediately returns to the caller. Otherwise, the caller is blocked until the semaphore is either signaled or destroyed, unless a non-blocking operation was required.

#### **Parameters**

| sem         | The semaphore descriptor.  |
|-------------|--|
| abs_timeout | An absolute date expressed in clock ticks, specifying a time limit to wait for the request to be satisfied (see note). Passing NULL causes the caller to block indefinitely until the request is satisfied. Passing { .tv_sec = 0, .tv_nsec = 0 } causes the service |
|             | to return without blocking in case the request cannot be satisfied immediately.  |

# Returns

Zero is returned upon success. Otherwise:

- -ETIMEDOUT is returned if abs timeout is reached before the request is satisfied.
- -EWOULDBLOCK is returned if *abs\_timeout* is { .tv\_sec = 0, .tv\_nsec = 0 } and the semaphore count is zero on entry.
- -EINTR is returned if rt\_task\_unblock() was called for the current task before the request is satisfied.
- -EINVAL is returned if sem is not a valid semaphore descriptor.
- -EIDRM is returned if *sem* is deleted while the caller was sleeping on it. In such a case, *sem* is no more valid upon return of this service.
- -EPERM is returned if this service should block, but was not called from a Xenomai thread.

#### Tags

xthread-nowait, switch-primary

## Note

abs\_timeout is interpreted as a multiple of the Alchemy clock resolution (see -alchemy-clock-resolution option, defaults to 1 nanosecond).

Referenced by rt\_sem\_p(), and rt\_sem\_p\_until().

6.84.3.8 int rt\_sem\_p\_until ( RT\_SEM \* sem, RTIME abs\_timeout ) [inline], [static]

Pend on a semaphore (with absolute scalar timeout).

This routine is a variant of rt\_sem\_p\_timed() accepting an absolute timeout specification expressed as a scalar value.

**Parameters** 

| sem         | The semaphore descriptor.                  |
|-------------|--|
| abs_timeout | An absolute date expressed in clock ticks. |

## Tags

xthread-nowait, switch-primary

References rt\_sem\_p\_timed().

```
6.84.3.9 int rt sem unbind ( RT SEM * sem )
```

Unbind from a semaphore.

**Parameters** 

```
sem | The semaphore descriptor.
```

This routine releases a previous binding to a semaphore. After this call has returned, the descriptor is no more valid for referencing this object.

# Tags

thread-unrestricted

```
6.84.3.10 int rt_sem_v ( RT_SEM * sem )
```

Signal a semaphore.

If the semaphore is pended, the task heading the wait queue is immediately unblocked. Otherwise, the semaphore count is incremented by one, unless the semaphore is used in "pulse" mode (see rt\_sem\_create()).

**Parameters** 

| sem | The semaphore descriptor. |
|-----|---------------------------|

# Returns

Zero is returned upon success. Otherwise:

• -EINVAL is returned if sem is not a valid semaphore descriptor.

#### Tags

unrestricted

# 6.85 Task management services

Services dealing with preemptive multi-tasking.

Collaboration diagram for Task management services:



# **Data Structures**

struct RT\_TASK\_INFO

Task status descriptor.

#### Macros

#define T\_LOPRIO 0

Task priorities.

#define T\_LOCK \_\_THREAD\_M\_LOCK

Task mode bits.

• #define T\_WARNSW \_\_THREAD\_M\_WARNSW

Cobalt only, nop over Mercury.

# **Functions**

int rt\_task\_delete (RT\_TASK \*task)

Delete a real-time task.

int rt\_task\_set\_affinity (RT\_TASK \*task, const cpu\_set\_t \*cpus)

Set CPU affinity of real-time task.

int rt\_task\_start (RT\_TASK \*task, void(\*entry)(void \*arg), void \*arg)

Start a real-time task.

• int rt\_task\_shadow (RT\_TASK \*task, const char \*name, int prio, int mode)

Turn caller into a real-time task.

int rt\_task\_join (RT\_TASK \*task)

Wait on the termination of a real-time task.

• int rt\_task\_wait\_period (unsigned long \*overruns\_r)

Wait for the next periodic release point.

int rt task sleep (RTIME delay)

Delay the current real-time task (with relative delay).

int rt\_task\_sleep\_until (RTIME date)

Delay the current real-time task (with absolute wakeup date).

int rt\_task\_same (RT\_TASK \*task1, RT\_TASK \*task2)

Compare real-time task descriptors.

int rt\_task\_suspend (RT\_TASK \*task)

Suspend a real-time task.

int rt\_task\_resume (RT\_TASK \*task)

Resume a real-time task.

RT\_TASK \* rt\_task\_self (void)

Retrieve the current task descriptor.

• int rt\_task\_set\_priority (RT\_TASK \*task, int prio)

Change the base priority of a real-time task.

int rt\_task\_set\_mode (int clrmask, int setmask, int \*mode\_r)

Change the current task mode.

int rt\_task\_yield (void)

Manual round-robin.

int rt task unblock (RT TASK \*task)

Unblock a real-time task.

• int rt task slice (RT TASK \*task, RTIME quantum)

Set a task's round-robin quantum.

int rt\_task\_inquire (RT\_TASK \*task, RT\_TASK\_INFO \*info)

Retrieve information about a real-time task.

ssize\_t rt\_task\_send\_timed (RT\_TASK \*task, RT\_TASK\_MCB \*mcb\_s, RT\_TASK\_MCB \*mcb\_r, const struct timespec \*abs\_timeout)

Send a message to a real-time task.

static ssize\_t rt\_task\_send\_until (RT\_TASK \*task, RT\_TASK\_MCB \*mcb\_s, RT\_TASK\_MCB \*mcb r, RTIME timeout)

Send a message to a real-time task (with absolute scalar timeout).

static ssize\_t rt\_task\_send (RT\_TASK \*task, RT\_TASK\_MCB \*mcb\_s, RT\_TASK\_MCB \*mcb\_r, RTIME timeout)

Send a message to a real-time task (with relative scalar timeout).

int rt\_task\_receive\_timed (RT\_TASK\_MCB \*mcb\_r, const struct timespec \*abs\_timeout)

Receive a message from a real-time task.

• static int rt task receive until (RT TASK MCB \*mcb r, RTIME timeout)

Receive a message from a real-time task (with absolute scalar timeout).

static int rt\_task\_receive (RT\_TASK\_MCB \*mcb\_r, RTIME timeout)

Receive a message from a real-time task (with relative scalar timeout).

int rt\_task\_reply (int flowid, RT\_TASK\_MCB \*mcb\_s)

Reply to a remote task message.

int rt\_task\_bind (RT\_TASK \*task, const char \*name, RTIME timeout)

Bind to a task.

• int rt\_task\_unbind (RT\_TASK \*task)

Unbind from a task.

• int rt task create (RT TASK \*task, const char \*name, int stksize, int prio, int mode)

Create a real-time task.

int rt\_task\_set\_periodic (RT\_TASK \*task, RTIME idate, RTIME period)

Make a real-time task periodic.

• int rt\_task\_spawn (RT\_TASK \*task, const char \*name, int stksize, int prio, int mode, void(\*entry)(void \*arg), void \*arg)

Create and start a real-time task.

# 6.85.1 Detailed Description

Services dealing with preemptive multi-tasking. Each Alchemy task is an independent portion of the overall application code embodied in a C procedure, which executes on its own stack context.

6.85.2 Macro Definition Documentation

6.85.2.1 #define T\_LOCK \_\_THREAD\_M\_LOCK

Task mode bits.

Referenced by rt\_task\_set\_mode(), and rt\_task\_shadow().

6.85.2.2 #define T\_LOPRIO 0

Task priorities.

6.85.2.3 #define T WARNSW THREAD M WARNSW

Cobalt only, nop over Mercury.

Referenced by rt\_task\_set\_mode(), and rt\_task\_shadow().

6.85.3 Function Documentation

6.85.3.1 int rt\_task\_bind ( RT\_TASK \* task, const char \* name, RTIME timeout )

Bind to a task.

This routine creates a new descriptor to refer to an existing Alchemy task identified by its symbolic name. If the object does not exist on entry, the caller may block until a task of the given name is created.

#### **Parameters**

| task    | The address of a task descriptor filled in by the operation. Contents of this memory  |
|---------|---|
|         | is undefined upon failure.  |
| name    | A valid NULL-terminated name which identifies the task to bind to. This string should |
|         | match the object name argument passed to rt_task_create(), or rt_task_shadow().       |
| timeout | The number of clock ticks to wait for the registration to occur (see note). Passing   |
|         | TM_INFINITE causes the caller to block indefinitely until the object is registered.   |
|         | Passing TM_NONBLOCK causes the service to return immediately without waiting          |
|         | if the object is not registered on entry.   |

# Returns

Zero is returned upon success. Otherwise:

- -EINTR is returned if rt\_task\_unblock() was called for the current task before the retrieval has completed.
- -EWOULDBLOCK is returned if *timeout* is equal to TM\_NONBLOCK and the searched object is not registered on entry.
- -ETIMEDOUT is returned if the object cannot be retrieved within the specified amount of time.
- -EPERM is returned if this service should block, but was not called from a Xenomai thread.

Tags

xthread-nowait, switch-primary

# Note

The *timeout* value is interpreted as a multiple of the Alchemy clock resolution (see –alchemy-clock-resolution option, defaults to 1 nanosecond).

6.85.3.2 int rt\_task\_create ( RT\_TASK \* task, const char \* name, int stksize, int prio, int mode )

#### Create a real-time task.

This service creates a task with access to the full set of Xenomai real-time services. If *prio* is non-zero, the new task belongs to Xenomai's real-time FIFO scheduling class, aka SCHED\_FIFO. If *prio* is zero, the task belongs to the regular SCHED\_OTHER class.

Creating tasks with zero priority is useful for running non real-time processes which may invoke blocking real-time services, such as pending on a semaphore, reading from a message queue or a buffer, and so on.

Once created, the task is left dormant until it is actually started by rt\_task\_start().

#### **Parameters**

| task    | The address of a task descriptor which can be later used to identify uniquely the      |
|---------|--|
|         | created object, upon success of this call.   |
| name    | An ASCII string standing for the symbolic name of the task. When non-NULL and          |
|         | non-empty, a copy of this string is used for indexing the created task into the object |
|         | registry.  |
| stksize | The size of the stack (in bytes) for the new task. If zero is passed, a system-        |
|         | dependent default size will be substituted.  |
| prio    | The base priority of the new task. This value must be in the [0 99] range, where 0     |
|         | is the lowest effective priority.  |
| mode    | The task creation mode. The following flags can be OR'ed into this bitmask:            |

- T\_JOINABLE allows another task to wait on the termination of the new task. rt\_task\_join() shall be called for this task to clean up any resources after its termination.
- T\_LOCK causes the new task to lock the scheduler prior to entering the user routine specified by rt\_task\_start(). A call to rt\_task\_set\_mode() from the new task is required to drop this lock.
- When running over the Cobalt core, T\_WARNSW causes the SIGDEBUG signal to be sent to the current task whenever it switches to the secondary mode. This feature is useful to detect unwanted migrations to the Linux domain. This flag has no effect over the Mercury core.

#### Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if either prio, mode or stksize are invalid.
- -ENOMEM is returned if the system fails to get memory from the main heap in order to create the task.
- -EEXIST is returned if the *name* is conflicting with an already registered task.

#### Tags

thread-unrestricted, switch-secondary

#### Side effects

- When running over the Cobalt core:
  - calling rt task create() causes SCHED FIFO tasks to switch to secondary mode.
  - members of Xenomai's SCHED\_FIFO class running in the primary domain have utmost priority over all Linux activities in the system, including Linux interrupt handlers.
- When running over the Mercury core, the new task belongs to the regular POSIX SCHED\_FI-FO class.

Note

Tasks can be referred to from multiple processes which all belong to the same Xenomai session.

# Examples:

cross-link.c.

References rt\_task\_delete(), rt\_task\_set\_affinity(), and rt\_task\_suspend().

Referenced by rt task spawn().

```
6.85.3.3 int rt_task_delete ( RT_TASK * task )
```

Delete a real-time task.

This call terminates a task previously created by rt\_task\_create().

Tasks created with the T\_JOINABLE flag shall be joined by a subsequent call to rt\_task\_join() once successfully deleted, to reclaim all resources.

**Parameters** 

| task | The task descriptor. |
|------|----------------------|
|------|----------------------|

#### Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if task is not a valid task descriptor.
- -EPERM is returned if *task* is NULL and this service was called from an invalid context. In addition, this error is always raised when this service is called from asynchronous context, such as a timer/alarm handler.

#### Tags

thread-unrestricted, switch-secondary

Note

The caller must be an Alchemy task if task is NULL.

# Examples:

cross-link.c.

Referenced by rt\_task\_create().

```
6.85.3.4 int rt task inquire ( RT TASK * task, RT TASK INFO * info )
```

Retrieve information about a real-time task.

Return various information about an Alchemy task. This service may also be used to probe for task existence.

#### **Parameters**

| task | The task descriptor. If task is NULL, the information about the current task is re- |
|------|---|
|      | turned.   |
| info | The address of a structure the task information will be written to. Passing NULL is |
|      | valid, in which case the system is only probed for existence of the specified task. |

#### Returns

Zero is returned if the task exists. In addition, if *info* is non-NULL, it is filled in with task information.

- -EINVAL is returned if *task* is not a valid task descriptor, or if *prio* is invalid.
- -EPERM is returned if task is NULL and this service was called from an invalid context.

#### Tags

thread-unrestricted, switch-primary

#### Note

The caller must be an Alchemy task if task is NULL.

References RT\_TASK\_INFO::name, RT\_TASK\_INFO::pid, RT\_TASK\_INFO::prio, and RT\_TASK\_INFO::stat.

Wait on the termination of a real-time task.

This service blocks the caller in non-real-time context until *task* has terminated. All resources are released after successful completion of this service.

The specified task must have been created by the same process that wants to join it, and the T\_JOINA-BLE mode flag must have been set on creation to rt\_task\_create().

Tasks created with the T\_JOINABLE flag shall be joined by a subsequent call to rt\_task\_join() once successfully deleted, to reclaim all resources.

#### **Parameters**

| task | The task descriptor. |
|------|----------------------|

#### Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if task is not a valid task descriptor.
- -EINVAL is returned if the task was not created with T\_JOINABLE set or some other task is already waiting on the termination.
- -EDEADLK is returned if task refers to the caller.
- -ESRCH is returned if task no longer exists or refers to task created by a different process.

# Tags

thread-unrestricted, switch-primary

Note

After successful completion of this service, it is neither required nor valid to additionally invoke rt task delete() on the same task.

References pthread join().

```
6.85.3.6 ssize trt task receive ( RT TASK MCB * mcb r, RTIME timeout ) [inline], [static]
```

Receive a message from a real-time task (with relative scalar timeout).

This routine is a variant of rt\_task\_receive\_timed() accepting a relative timeout specification expressed as a scalar value.

#### **Parameters**

| _       | The address of a message control block referring to the receive message area. |
|---------|---|
| timeout | A delay expressed in clock ticks.   |

# Tags

xthread-only, switch-primary

References rt task receive timed().

```
6.85.3.7 int rt_task_receive_timed ( RT_TASK_MCB * mcb_r, const struct timespec * abs_timeout )
```

Receive a message from a real-time task.

This service is part of the synchronous message passing support available to Alchemy tasks. The caller receives a variable-sized message from another task. The sender is blocked until the caller invokes rt\_task\_reply() to finish the transaction.

A basic message control block is used to store the location and size of the data area to receive from the client, in addition to a user-defined operation code.

#### **Parameters**

| mcb_r | The address of a message control block referring to the receive message area. The |
|-------|---|
|       | fields from this control block should be set as follows:                          |

- mcb\_r->data should contain the address of a buffer large enough to collect the data sent by the remote task;
- mcb\_r->size should contain the size in bytes of the buffer space pointed at by mcb\_r->data. If mcb\_r->size is lower than the actual size of the received message, no data copy takes place and -ENOBUFS is returned to the caller. See note.

Upon return, mcb\_r->opcode will contain the operation code sent from the remote task using rt\_task\_send().

## Parameters

| abs_timeout | The number of clock ticks to wait for receiving a message (see note). Passing NULL   |
|-------------|--|
|             | causes the caller to block indefinitely until a remote task eventually sends a mes-  |
|             | sage. Passing { .tv_sec = 0, .tv_nsec = 0 } causes the service to return immediately |
|             | without waiting if no remote task is currently waiting for sending a message.        |

#### Returns

A strictly positive value is returned upon success, representing a flow identifier for the opening transaction; this token should be passed to rt\_task\_reply(), in order to send back a reply to and unblock the remote task appropriately. Otherwise:

- -EPERM is returned if this service was called from an invalid context.
- -EINTR is returned if rt\_task\_unblock() was called for the current task before a message was received.
- -ENOBUFS is returned if *mcb\_r* does not point at a message area large enough to collect the remote task's message.
- -EWOULDBLOCK is returned if abs\_timeout is { .tv\_sec = 0, .tv\_nsec = 0 } and no remote task is currently waiting for sending a message to the caller.
- -ETIMEDOUT is returned if no message was received within the timeout.

## Tags

xthread-only, switch-primary

#### Note

abs\_timeout is interpreted as a multiple of the Alchemy clock resolution (see -alchemy-clock-resolution option, defaults to 1 nanosecond).

Referenced by rt\_task\_receive(), and rt\_task\_receive\_until().

```
6.85.3.8 ssize_t rt_task_receive_until ( RT_TASK_MCB * mcb_r, RTIME abs_timeout ) [inline], [static]
```

Receive a message from a real-time task (with absolute scalar timeout).

This routine is a variant of rt\_task\_receive\_timed() accepting an absolute timeout specification expressed as a scalar value.

#### **Parameters**

| mcb_r       | The address of a message control block referring to the receive message area. |
|-------------|---|
| abs_timeout | An absolute date expressed in clock ticks.                                    |

## Tags

xthread-only, switch-primary

References rt\_task\_receive\_timed().

```
6.85.3.9 int rt_task_reply (int flowid, RT_TASK_MCB * mcb_s)
```

Reply to a remote task message.

This service is part of the synchronous message passing support available to Alchemy tasks. The caller sends a variable-sized message back to a remote task, in response to this task's initial message received by a call to rt\_task\_receive(). As a consequence of calling rt\_task\_reply(), the remote task will be unblocked from the rt\_task\_send() service.

A basic message control block is used to store the location and size of the data area to send back, in addition to a user-defined status code.

#### **Parameters**

| flowid | The flow identifier returned by a previous call to rt_task_receive() which uniquely            |
|--------|--|
|        | identifies the current transaction.  |
| mcb_s  |  |
|        | sent back. If <i>mcb_s</i> is NULL, the remote will be unblocked without getting any reply     |
|        | data. When <i>mcb_s</i> is valid, the fields from this control block should be set as follows: |

- mcb\_s->data should contain the address of the payload data to send to the remote task.
- mcb\_s->size should contain the size in bytes of the payload data pointed at by mcb\_s->data. Zero
  is a legitimate value, and indicates that no payload data will be transferred. In the latter case,
  mcb\_s->data will be ignored.
- mcb\_s->opcode is an opaque status code carried during the message transfer the caller can fill
  with any appropriate value. It will be made available "as is" to the remote task into the status code
  field by the rt\_task\_send() service. If mcb\_s is NULL, Zero will be returned to the remote task into
  the status code field.

#### Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if flowid is invalid.
- -ENXIO is returned if *flowid* does not match the expected identifier returned from the latest call of the current task to rt\_task\_receive(), or if the remote task stopped waiting for the reply in the meantime (e.g. the remote could have been deleted or forcibly unblocked).
- -ENOBUFS is returned if the reply data referred to by *mcb\_s* is larger than the reply area mentioned by the remote task when calling rt\_task\_send(). In such a case, the remote task also receives -E-NOBUFS on return from rt\_task\_send().
- -EPERM is returned if this service was called from an invalid context.

#### Tags

xthread-only, switch-primary

```
6.85.3.10 int rt task resume ( RT TASK * task )
```

Resume a real-time task.

Forcibly resume the execution of a task which was previously suspended by a call to rt\_task\_suspend(), if the suspend nesting count decrements to zero.

#### **Parameters**

| task The task | c descriptor. |
|---------------|---------------|
|---------------|---------------|

# Returns

Zero is returned upon success. Otherwise:

• -EINVAL is returned if task is not a valid task descriptor.

#### Tags

unrestricted, switch-primary

Note

Blocked and suspended task states are cumulative. Therefore, resuming a task currently waiting on a synchronization object (e.g. semaphore, queue) does not make it eligible for scheduling until the awaited resource is eventually acquired, or a timeout elapses.

```
6.85.3.11 int rt task same ( RT TASK * task1, RT TASK * task2 )
```

Compare real-time task descriptors.

This predicate returns true if *task1* and *task2* refer to the same task.

**Parameters** 

| task1 | First task descriptor to compare.  |
|-------|------------------------------------|
| task2 | Second task descriptor to compare. |

#### Returns

A non-zero value is returned if both descriptors refer to the same task, zero otherwise.

# Tags

#### unrestricted

```
6.85.3.12 RT_TASK * rt_task_self (void)
```

Retrieve the current task descriptor.

Return the address of the current Alchemy task descriptor.

# Returns

The address of the task descriptor referring to the current Alchemy task is returned upon success, or NULL if not called from a valid Alchemy task context.

# Tags

## xthread-only

Referenced by rt task set periodic().

```
6.85.3.13 ssize_t rt_task_send ( RT_TASK * task, RT_TASK_MCB * mcb_r, RTIME timeout ) [inline], [static]
```

Send a message to a real-time task (with relative scalar timeout).

This routine is a variant of rt\_task\_send\_timed() accepting a relative timeout specification expressed as a scalar value.

**Parameters** 

| task  | The task descriptor.  |
|-------|---|
| mcb s | The address of the message control block referring to the message to be sent. |

| mcb_r   | The address of an optional message control block referring to the reply message area. |
|---------|---|
| timeout | A delay expressed in clock ticks.   |

#### Tags

# xthread-only, switch-primary

References rt\_task\_send\_timed().

```
6.85.3.14 ssize_t rt_task_send_timed ( RT_TASK * task, RT_TASK_MCB * mcb_s, RT_TASK_MCB * mcb r, const struct timespec * abs timeout )
```

Send a message to a real-time task.

This service is part of the synchronous message passing support available to Alchemy tasks. The caller sends a variable-sized message to another task, waiting for the remote to receive the initial message by a call to rt\_task\_receive(), then reply to it using rt\_task\_reply().

A basic message control block is used to store the location and size of the data area to send or retrieve upon reply, in addition to a user-defined operation code.

#### **Parameters**

| task  | The task descriptor.  |
|-------|---|
| mcb_s | The address of the message control block referring to the message to be sent. The |
|       | fields from this control block should be set as follows:                          |

- mcb s->data should contain the address of the payload data to send to the remote task.
- mcb\_s->size should contain the size in bytes of the payload data pointed at by mcb\_s->data. Zero
  is a legitimate value, and indicates that no payload data will be transferred. In the latter case,
  mcb\_s->data will be ignored.
- mcb\_s->opcode is an opaque operation code carried during the message transfer, the caller can fill with any appropriate value. It will be made available "as is" to the remote task into the operation code field by the rt\_task\_receive() service.

#### **Parameters**

| mcb_r | The address of an optional message control block referring to the reply message |
|-------|---|
|       | area. If mcb_r is NULL and a reply is sent back by the remote task, the reply   |
|       | message will be discarded, and -ENOBUFS will be returned to the caller. When    |
|       | mcb_r is valid, the fields from this control block should be set as follows:    |

- mcb\_r->data should contain the address of a buffer large enough to collect the reply data from the remote task.
- mcb\_r->size should contain the size in bytes of the buffer space pointed at by mcb\_r->data. If mcb\_r->size is lower than the actual size of the reply message, no data copy takes place and -ENOBUFS is returned to the caller.

Upon return, mcb\_r->opcode will contain the status code sent back from the remote task using rt\_task\_reply(), or zero if unspecified.

#### **Parameters**

| abs_timeout | An absolute date expressed in clock ticks, specifying a time limit to wait for the      |
|-------------|---|
|             | recipient task to reply to the initial message (see note). Passing NULL causes the      |
|             | caller to block indefinitely until a reply is received. Passing { .tv_sec = 0, .tv_nsec |
|             | = 0 } causes the service to return without blocking in case the recipient task is not   |
|             | waiting for messages at the time of the call.   |

#### Returns

A positive value is returned upon success, representing the length (in bytes) of the reply message returned by the remote task. Zero is a success status, meaning either that  $mcb_r$  was NULL on entry, or that no actual message was passed to the remote call to rt task reply(). Otherwise:

- -EINVAL is returned if task is not a valid task descriptor.
- -EPERM is returned if this service was called from an invalid context.
- -ENOBUFS is returned if *mcb\_r* does not point at a message area large enough to collect the remote task's reply. This includes the case where *mcb\_r* is NULL on entry, despite the remote task attempts to send a reply message.
- -EWOULDBLOCK is returned if abs\_timeout is { .tv\_sec = 0, .tv\_nsec = 0 } and the recipient task is not currently waiting for a message on the rt\_task\_receive() service.
- -EIDRM is returned if task has been deleted while waiting for a reply.
- -EINTR is returned if rt\_task\_unblock() was called for the current task before any reply was received from the recipient task.

# Tags

xthread-only, switch-primary

#### Note

abs\_timeout is interpreted as a multiple of the Alchemy clock resolution (see -alchemy-clock-resolution option, defaults to 1 nanosecond).

Referenced by rt\_task\_send(), and rt\_task\_send\_until().

```
6.85.3.15 ssize_t rt_task_send_until ( RT_TASK * task, RT_TASK_MCB * mcb_s, RT_TASK_MCB * mcb_r, RTIME abs_timeout ) [inline], [static]
```

Send a message to a real-time task (with absolute scalar timeout).

This routine is a variant of rt\_task\_send\_timed() accepting an absolute timeout specification expressed as a scalar value.

#### **Parameters**

| task  | The task descriptor.  |
|-------|---|
| mcb_s | The address of the message control block referring to the message to be sent.   |
| mcb_r | The address of an optional message control block referring to the reply message |
|       | area.   |

| , ,, ,       | An absolute date expressed in clock ticks.   |
|--------------|--|
| ane timpolit | An absolute date everessed in slock ticks    |
| ลมอ แบบบนเ   | All absolute date explessed ill clock ticks. |
|              |  |

#### Tags

xthread-only, switch-primary

References rt\_task\_send\_timed().

```
6.85.3.16 int rt task set affinity ( RT TASK * task, const cpu set t * cpus )
```

Set CPU affinity of real-time task.

This calls makes task affine to the set of CPUs defined by cpus.

#### **Parameters**

| task | ,  |
|------|--|
| cpus | The set of CPUs <i>task</i> should be affine to. |

#### Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if *task* is NULL but the caller is not a Xenomai task, or if *task* is non-NULL but not a valid task descriptor.
- -EINVAL is returned if *cpus* contains no processors that are currently physically on the system and permitted to the process according to any restrictions that may be imposed by the "cpuset" mechanism described in cpuset(7).

# Tags

thread-unrestricted, switch-secondary

Note

The caller must be an Alchemy task if task is NULL.

Referenced by rt\_task\_create().

```
6.85.3.17 int rt task set mode ( int clrmask, int setmask, int * mode r )
```

Change the current task mode.

Each Alchemy task has a set of internal flags determining several operating conditions. rt\_task\_set\_mode() takes a bitmask of mode bits to clear for disabling the corresponding modes for the current task, and another one to set for enabling them. The mode bits which were previously in effect before the change can be returned upon request.

The following bits can be part of the bitmask:

- T\_LOCK causes the current task to lock the scheduler on the current CPU, preventing all further involuntary task switches on this CPU. Clearing this bit unlocks the scheduler.
- Only when running over the Cobalt core:
  - T\_WARNSW causes the SIGDEBUG signal to be sent to the current task whenever it switches to the secondary mode. This feature is useful to detect unwanted migrations to the Linux domain.

418 Module Documentation

T\_CONFORMING can be passed in *setmask* to switch the current Alchemy task to its preferred runtime mode. The only meaningful use of this switch is to force a real-time task back to primary mode (see note). Any other use leads to a nop.

These two last flags have no effect over the Mercury core, and are simply ignored.

#### **Parameters**

| clrmask | A bitmask of mode bits to clear for the current task, before setmask is applied. Zero |
|---------|---|
|         | is an acceptable value which leads to a no-op.  |
| setmask | A bitmask of mode bits to set for the current task. Zero is an acceptable value which |
|         | leads to a no-op.   |
| mode_r  | If non-NULL, mode_r must be a pointer to a memory location which will be written      |
|         | upon success with the previous set of active mode bits. If NULL, the previous set of  |
|         | active mode bits will not be returned.  |

#### Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if task is not a valid task descriptor, or if any bit from clrmask or setmask is invalid.
- · -EPERM is returned if this service was called from an invalid context.

#### Tags

xthread-only, switch-primary

#### Note

The caller must be an Alchemy task.

Forcing the task mode using the T\_CONFORMING bit from user code is almost always wrong, since the Xenomai/cobalt core handles mode switches internally when/if required. Most often, manual mode switching from applications introduces useless overhead. This mode bit is part of the API only to cover rare use cases in middleware code based on the Alchemy interface.

References T\_LOCK, and T\_WARNSW.

6.85.3.18 int rt\_task\_set\_periodic ( RT\_TASK \* task, RTIME idate, RTIME period )

Make a real-time task periodic.

Make a task periodic by programing its first release point and its period in the processor time line. *task* should then call rt\_task\_wait\_period() to sleep until the next periodic release point in the processor timeline is reached.

#### **Parameters**

| task   | The task descriptor. If task is NULL, the current task is made periodic. task must    |
|--------|---|
|        | belong the current process.   |
| idate  | The initial (absolute) date of the first release point, expressed in clock ticks (see |
|        | note). If <i>idate</i> is equal to TM_NOW, the current system date is used.           |
| period | The period of the task, expressed in clock ticks (see note). Passing TM_INFINITE      |
|        | stops the task's periodic timer if enabled, then returns successfully.                |

# Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if *task* is NULL but the caller is not a Xenomai task, or if *task* is non-NULL but not a valid task descriptor.
- -ETIMEDOUT is returned if idate is different from TM\_INFINITE and represents a date in the past.

# Tags

420

thread-unrestricted, switch-primary

#### Note

The caller must be an Alchemy task if task is NULL.

#### Side effects

Over Cobalt, -EINVAL is returned if *period* is different from TM\_INFINITE but shorter than the user scheduling latency value for the target system, as displayed by /proc/xenomai/latency.

## Note

The *idate* and *period* values are interpreted as a multiple of the Alchemy clock resolution (see –alchemy-clock-resolution option, defaults to 1 nanosecond).

# Examples:

cross-link.c.

References rt\_task\_self(), and rt\_task\_wait\_period().

```
6.85.3.19 int rt_task_set_priority ( RT_TASK * task, int prio )
```

Change the base priority of a real-time task.

The base priority of a task defines the relative importance of the work being done by each task, which gains conrol of the CPU accordingly.

Changing the base priority of a task does not affect the priority boost the target task might have obtained as a consequence of a priority inheritance undergoing.

#### **Parameters**

| task | The task descriptor. If <i>task</i> is NULL, the priority of the current task is changed. |
|------|---|
| prio | The new priority. This value must range from [T_LOPRIO T_HIPRIO] (inclusive)              |
|      | where T_LOPRIO is the lowest effective priority.  |

#### Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if task is not a valid task descriptor, or if prio is invalid.
- -EPERM is returned if *task* is NULL and this service was called from an invalid context.

# Tags

thread-unrestricted, switch-primary

# Note

The caller must be an Alchemy task if task is NULL.

Assigning the same priority to a running or ready task moves it to the end of its priority group, thus causing a manual round-robin.

6.85.3.20 int rt\_task\_shadow ( RT\_TASK \* task, const char \* name, int prio, int mode )

Turn caller into a real-time task.

Extends the calling Linux task with Xenomai capabilities, with access to the full set of Xenomai real-time services. This service is typically used for turning the main() thread of an application process into a Xenomai-enabled task.

If *prio* is non-zero, the new task moves to Xenomai's real-time FIFO scheduling class, aka SCHED\_FIFO. If *prio* is zero, the task moves to the regular SCHED\_OTHER class.

Running Xenomai tasks with zero priority is useful for running non real-time processes which may invoke blocking real-time services, such as pending on a semaphore, reading from a message queue or a buffer, and so on.

Once shadowed with the Xenomai extension, the calling task returns and resumes execution normally from the call site.

#### **Parameters**

| task | If non-NULL, the address of a task descriptor which can be later used to identify        |
|------|--|
|      | uniquely the task, upon success of this call. If NULL, no descriptor is returned.        |
| name | An ASCII string standing for the symbolic name of the task. When non-NULL and            |
|      | non-empty, a copy of this string is used for indexing the task into the object registry. |
| prio | The base priority of the task. This value must be in the [0 99] range, where 0 is        |
|      | the lowest effective priority.   |
| mode | The task shadowing mode. The following flags can be OR'ed into this bitmask:             |

- T\_LOCK causes the current task to lock the scheduler before returning to the caller, preventing all further involuntary task switches on the current CPU. A call to rt\_task\_set\_mode() from the current task is required to drop this lock.
- When running over the Cobalt core, T\_WARNSW causes the SIGDEBUG signal to be sent to the current task whenever it switches to the secondary mode. This feature is useful to detect unwanted migrations to the Linux domain. This flag has no effect over the Mercury core.

#### Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if prio is invalid.
- -ENOMEM is returned if the system fails to get memory from the main heap in order to create the task extension.
- -EEXIST is returned if the name is conflicting with an already registered task.
- -EBUSY is returned if the caller is already mapped to a Xenomai task context.
- -EPERM is returned if this service was called from an invalid context.

## Tags

pthread-only, switch-secondary

#### Side effects

Over the Cobalt core, the caller always returns from this service in primary mode.

422 Module Documentation

Note

Tasks can be referred to from multiple processes which all belong to the same Xenomai session.

# Examples:

rtcanrecv.c, and rtcansend.c.

References T\_LOCK, and T\_WARNSW.

6.85.3.21 int rt\_task\_sleep ( RTIME delay )

Delay the current real-time task (with relative delay).

This routine is a variant of rt\_task\_sleep\_until() accepting a relative timeout specification.

#### **Parameters**

| delay | A relative delay expressed in clock ticks (see note). A zero delay causes this service |
|-------|--|
|       | to return immediately to the caller with a success status.                             |

#### Returns

See rt\_task\_sleep\_until().

# Tags

xthread-only, switch-primary

## Note

The *delay* value is interpreted as a multiple of the Alchemy clock resolution (see –alchemy-clock-resolution option, defaults to 1 nanosecond).

# Examples:

cross-link.c, and rtcansend.c.

```
6.85.3.22 int rt task sleep until ( RTIME date )
```

Delay the current real-time task (with absolute wakeup date).

Delay the execution of the calling task until a given date is reached. The caller is put to sleep, and does not consume any CPU time in such a state.

#### **Parameters**

| date | An absolute date expressed in clock ticks, specifying a wakeup date (see note). As      |
|------|---|
|      | a special case, TM_INFINITE is an acceptable value that causes the caller to block      |
|      | indefinitely, until rt_task_unblock() is called against it. Otherwise, any wake up date |
|      | in the past causes the task to return immediately.                                      |

## Returns

Zero is returned upon success. Otherwise:

- -EINTR is returned if rt\_task\_unblock() was called for the current task.
- -ETIMEDOUT is returned if date has already elapsed.

· -EPERM is returned if this service was called from an invalid context.

# Tags

xthread-only, switch-primary

#### Note

The caller must be an Alchemy task if task is NULL.

The *date* value is interpreted as a multiple of the Alchemy clock resolution (see –alchemy-clock-resolution option, defaults to 1 nanosecond).

```
6.85.3.23 int rt_task_slice ( RT_TASK * task, RTIME quantum )
```

Set a task's round-robin quantum.

Set the time credit allotted to a task undergoing the round-robin scheduling. If *quantum* is non-zero, rt\_task\_slice() also refills the current quantum for the target task, otherwise, time-slicing is stopped for that task.

In other words, rt\_task\_slice() should be used to toggle round-robin scheduling for an Alchemy task.

#### **Parameters**

| task    | The task descriptor. If <i>task</i> is NULL, the time credit of the current task is changed. |
|---------|--|
|         | task must belong to the current process.   |
| quantum | The round-robin quantum for the task expressed in clock ticks (see note).                    |

## Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if task is not a valid task descriptor, or if prio is invalid.
- -EPERM is returned if task is NULL and this service was called from an invalid context.

# Tags

thread-unrestricted, switch-primary

#### Note

The caller must be an Alchemy task if task is NULL.

The *quantum* value is interpreted as a multiple of the Alchemy clock resolution (see –alchemy-clock-resolution option, defaults to 1 nanosecond).

6.85.3.24 int rt\_task\_spawn ( RT\_TASK \* task, const char \* name, int stksize, int prio, int mode, void(\*)(void \*arg) entry, void \* arg )

Create and start a real-time task.

This service spawns a task by combining calls to rt\_task\_create() and rt\_task\_start() for the new task.

#### **Parameters**

| task    | The address of a task descriptor which can be later used to identify uniquely the      |
|---------|--|
|         | created object, upon success of this call.   |
| name    | An ASCII string standing for the symbolic name of the task. When non-NULL and          |
|         | non-empty, a copy of this string is used for indexing the created task into the object |
|         | registry.  |
| stksize | The size of the stack (in bytes) for the new task. If zero is passed, a system-        |
|         | dependent default size will be substituted.  |
| prio    | The base priority of the new task. This value must be in the [0 99] range, where 0     |
|         | is the lowest effective priority.  |
| mode    | The task creation mode. See rt_task_create().  |
| entry   | The address of the task entry point.   |
| arg     | A user-defined opaque argument <i>entry</i> will receive.                              |

#### Returns

See rt\_task\_create().

# Tags

thread-unrestricted, switch-secondary

# Side effects

see rt\_task\_create().

References rt\_task\_create(), and rt\_task\_start().

6.85.3.25 int rt\_task\_start ( RT\_TASK \* task, void(\*)(void \*arg) entry, void \* arg )

# Start a real-time task.

This call starts execution of a task previously created by rt\_task\_create(). This service causes the started task to leave the initial dormant state.

# **Parameters**

| task  | The task descriptor.                                      |
|-------|---|
| entry | The address of the task entry point.                      |
| arg   | A user-defined opaque argument <i>entry</i> will receive. |

# Returns

Zero is returned upon success. Otherwise:

• -EINVAL is returned if task is not a valid task descriptor.

# Tags

thread-unrestricted, switch-primary

# Note

Starting an already started task leads to a nop, returning a success status.

# Examples:

cross-link.c.

Referenced by rt\_task\_spawn().

```
6.85.3.26 int rt_task_suspend ( RT_TASK * task )
```

Suspend a real-time task.

Forcibly suspend the execution of a task. This task will not be eligible for scheduling until it is explicitly resumed by a call to rt\_task\_resume(). In other words, the suspended state caused by a call to rt\_task\_suspend() is cumulative with respect to the delayed and blocked states caused by other services, and is managed separately from them.

A nesting count is maintained so that rt\_task\_suspend() and rt\_task\_resume() must be used in pairs.

Receiving a Linux signal causes the suspended task to resume immediately.

**Parameters** 

task The task descriptor. If task is NULL, the current task is suspended.

#### Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if *task* is NULL but the caller is not a Xenomai task, or if *task* is non-NULL but not a valid task descriptor.
- -EINTR is returned if a Linux signal has been received by the caller if suspended.
- -EPERM is returned if task is NULL and this service was called from an invalid context.

# Tags

thread-unrestricted, switch-primary

# Note

The caller must be an Alchemy task if task is NULL.

Blocked and suspended task states are cumulative. Therefore, suspending a task currently waiting on a synchronization object (e.g. semaphore, queue) holds its execution until it is resumed, despite the awaited resource may have been acquired, or a timeout has elapsed in the meantime.

Referenced by rt\_task\_create().

```
6.85.3.27 int rt_task_unbind ( RT_TASK * task )
```

Unbind from a task.

Parameters

```
task | The task descriptor.
```

This routine releases a previous binding to an Alchemy task. After this call has returned, the descriptor is no more valid for referencing this object.

# Tags

thread-unrestricted

```
6.85.3.28 int rt task unblock ( RT TASK * task )
```

Unblock a real-time task.

426 Module Documentation

Break the task out of any wait it is currently in. This call clears all delay and/or resource wait condition for the target task.

However, rt\_task\_unblock() does not resume a task which has been forcibly suspended by a previous call to rt\_task\_suspend(). If all suspensive conditions are gone, the task becomes eligible anew for scheduling.

**Parameters** 

task | The task descriptor.

#### Returns

Zero is returned upon success. Otherwise:

-EINVAL is returned if task is not a valid task descriptor.

# Tags

unrestricted, switch-primary

6.85.3.29 int rt\_task\_wait\_period ( unsigned long \* overruns\_r )

Wait for the next periodic release point.

Delay the current task until the next periodic release point is reached. The periodic timer should have been previously started for *task* by a call to rt\_task\_set\_periodic().

## **Parameters**

| overruns_r | If non-NULL, overruns_r shall be a pointer to a memory location which will be written |
|------------|---|
|            | with the count of pending overruns. This value is written to only when rt_task-       |
|            | _wait_period() returns -ETIMEDOUT or success. The memory location remains             |
|            | unmodified otherwise. If NULL, this count will not be returned.                       |

#### Returns

Zero is returned upon success. If *overruns\_r* is non-NULL, zero is written to the pointed memory location. Otherwise:

- -EWOULDBLOCK is returned if rt\_task\_set\_periodic() was not called for the current task.
- -EINTR is returned if rt\_task\_unblock() was called for the waiting task before the next periodic release point was reached. In this case, the overrun counter is also cleared.
- -ETIMEDOUT is returned if a timer overrun occurred, which indicates that a previous release point was missed by the calling task. If *overruns\_r* is non-NULL, the count of pending overruns is written to the pointed memory location.
- · -EPERM is returned if this service was called from an invalid context.

# Tags

xthread-only, switch-primary

Note

If the current release point has already been reached at the time of the call, the current task immediately returns from this service with no delay.

# Examples:

cross-link.c.

Referenced by rt\_task\_set\_periodic().

```
6.85.3.30 int rt_task_yield (void)
```

Manual round-robin.

Move the current task to the end of its priority group, so that the next equal-priority task in ready state is switched in.

# Returns

Zero is returned upon success. Otherwise:

• -EPERM is returned if this service was called from an invalid context.

# Tags

xthread-only, switch-primary

428 Module Documentation

# 6.86 Timer management services

Services for reading and spinning on the hardware timer.

Collaboration diagram for Timer management services:



# **Data Structures**

struct rt\_timer\_info

Timer status descriptor.

# **Typedefs**

typedef struct rt\_timer\_info RT\_TIMER\_INFO
 Timer status descriptor.

# **Functions**

• SRTIME rt\_timer\_ns2ticks (SRTIME ns)

Convert nanoseconds to Alchemy clock ticks.

SRTIME rt\_timer\_ticks2ns (SRTIME ticks)

Convert Alchemy clock ticks to nanoseconds.

RTIME rt\_timer\_read (void)

Return the current system time.

• int rt\_timer\_inquire (RT\_TIMER\_INFO \*info)

Inquire about the Xenomai core timer.

• void rt\_timer\_spin (RTIME ns)

Busy wait burning CPU cycles.

# 6.86.1 Detailed Description

Services for reading and spinning on the hardware timer.

# 6.86.2 Typedef Documentation

6.86.2.1 typedef struct rt\_timer\_info RT\_TIMER\_INFO

# Timer status descriptor.

This structure reports various static and runtime information about the timer, returned by a call to rt\_timer\_inquire().

# 6.86.3 Function Documentation

```
6.86.3.1 int rt_timer_inquire ( RT_TIMER_INFO * info )
```

Inquire about the Xenomai core timer.

Return status information of the Xenomai core timer.

**Parameters** 

info The address of a structure the status data will be written to.

#### Returns

This service always returns 0.

Tags

#### unrestricted

References rt\_timer\_info::date, rt\_timer\_info::period, and rt\_timer\_info::tsc.

```
6.86.3.2 SRTIME rt_timer_ns2ticks ( SRTIME ns )
```

Convert nanoseconds to Alchemy clock ticks.

Convert a count of nanoseconds to Alchemy clock ticks. This routine operates on signed nanosecond values. This is the converse call to rt\_timer\_ticks2ns().

**Parameters** 

```
ns The count of nanoseconds to convert.
```

# Returns

The corresponding value expressed in clock ticks of the Alchemy clock. The resolution of the Alchemy clock can be set using the –alchemy-clock-resolution option when starting the application process (defaults to 1 nanosecond).

Tags

unrestricted

Examples:

cross-link.c, and rtcansend.c.

```
6.86.3.3 RTIME rt_timer_read (void)
```

Return the current system time.

Return the current time maintained by the Xenomai core clock.

Returns

The current time expressed in clock ticks (see note).

Tags

unrestricted

Note

The *time* value is a multiple of the Alchemy clock resolution (see –alchemy-clock-resolution option, defaults to 1 nanosecond).

# Examples:

cross-link.c.

6.86.3.4 void rt\_timer\_spin ( RTIME ns )

Busy wait burning CPU cycles.

Enter a busy waiting loop for a count of nanoseconds.

Since this service is always called with interrupts enabled, the caller might be preempted by other real-time activities, therefore the actual delay might be longer than specified.

**Parameters** 

ns The time to wait expressed in nanoseconds.

#### Tags

unrestricted

6.86.3.5 SRTIME rt\_timer\_ticks2ns ( SRTIME ns )

Convert Alchemy clock ticks to nanoseconds.

Convert a count of Alchemy clock ticks to nanoseconds. This routine operates on signed nanosecond values. This is the converse call to rt\_timer\_ns2ticks().

Parameters

ns The count of nanoseconds to convert.

#### Returns

The corresponding value expressed in nanoseconds. The resolution of the Alchemy clock can be set using the –alchemy-clock-resolution option when starting the application process (defaults to 1 nanosecond).

Tags

unrestricted

# 6.87 VxWorks® emulator

A VxWorks® emulation library on top of Xenomai.

A VxWorks® emulation library on top of Xenomai. The emulator mimicks the behavior described in the public documentation of the WIND 5.x API for the following class of services:

- taskLib, taskInfoLib, taskHookLib,
- semLib, msgQLib, wdLib, memPartLib
- intLib, tickLib, sysLib (partial)
- errnoLib, lstLib, kernelLib (partial)

432 Module Documentation

# 6.88 pSOS® emulator

A pSOS® emulation library on top of Xenomai.

A pSOS® emulation library on top of Xenomai. The emulator mimicks the behavior described in the public documentation of the pSOS 2.x API for the following class of services:

- Tasks, Events, Queues, Semaphores
- Partitions, Regions, Timers

6.89 Transition Kit 433

# 6.89 Transition Kit

A set of wrappers and services easing the transition from Xenomai 2.x to 3.x.

int pthread\_make\_periodic\_np (pthread\_t thread, struct timespec \*starttp, struct timespec \*periodtp)

Make a thread periodic (compatibility service).

• int pthread wait np (unsigned long \*overruns r)

Wait for the next periodic release point (compatibility service)

# 6.89.1 Detailed Description

A set of wrappers and services easing the transition from Xenomai 2.x to 3.x. This interface provides a source compatibility layer for building applications based on the Xenomai 2.x *posix* and *native* APIs over Xenomai 3.x.

#### 6.89.2 Function Documentation

6.89.2.1 int pthread\_make\_periodic\_np ( pthread\_t thread, struct timespec \* starttp, struct timespec \* periodtp )

Make a thread periodic (compatibility service).

This service makes the POSIX thread periodic.

#### **Parameters**

| thread   | thread to arm a periodic timer for.                                     |
|----------|---|
| starttp  | start time, expressed as an absolute value of the CLOCK_REALTIME clock. |
| periodtp | period, expressed as a time interval.                                   |

#### Returns

0 on success;

an error number if:

- ESRCH, thread is invalid.
- ETIMEDOUT, the start time has already passed.
- EPERM, the caller is not a Xenomai thread.
- EINVAL, thread does not refer to the current thread.

#### Note

Unlike the original Xenomai 2.x call, this emulation does not delay the caller waiting for the first periodic release point. In addition, *thread* must be equal to pthread\_self().

Deprecated This service is a non-portable extension of the Xenomai 2.x POSIX interface, not available with Xenomai 3.x. Instead, Cobalt-based applications should set up a periodic timer using the timer\_create(), timer\_settime() call pair, then wait for release points via sigwaitinfo(). Overruns can be detected by looking at the siginfo.si\_overrun field. Alternatively, applications may obtain a file descriptor referring to a Cobalt timer via the timerfd() call, and read() from it to wait for timeouts.

References timer\_create(), and timer\_settime().

6.89.2.2 int pthread\_wait\_np ( unsigned long \* overruns\_r )

Wait for the next periodic release point (compatibility service)

Delay the current thread until the next periodic release point is reached. The periodic timer should have been previously started for thread by a call to pthread make periodic np().

#### **Parameters**

| overruns_r | If non-NULL, overruns_r shall be a pointer to a memory location which will be written |
|------------|---|
|            | with the count of pending overruns. This value is written to only when pthread_wait-  |
|            | _np() returns ETIMEDOUT or success. The memory location remains unmodified            |
|            | otherwise. If NULL, this count will not be returned.                                  |

#### Returns

Zero is returned upon success. If overruns r is non-NULL, zero is written to the pointed memory location. Otherwise:

- EWOULDBLOCK is returned if pthread make periodic np() was not called for the current thread.
- EINTR is returned if thread was interrupted by a signal before the next periodic release point was reached.
- ETIMEDOUT is returned if a timer overrun occurred, which indicates that a previous release point was missed by the calling thread. If overruns r is non-NULL, the count of pending overruns is written to the pointed memory location.
- EPERM is returned if this service was called from an invalid context.

# Note

If the current release point has already been reached at the time of the call, the current thread immediately returns from this service with no delay.

Deprecated This service is a non-portable extension of the Xenomai 2.x POSIX interface, not available with Xenomai 3.x. Instead, Cobalt-based applications should set up a periodic timer using the timer create(), timer settime() call pair, then wait for release points via sigwaitinfo(). Overruns can be detected by looking at the siginfo.si\_overrun field. Alternatively, applications may obtain a file descriptor referring to a Cobalt timer via the timerfd() call, and read() from it to wait for timeouts.

# Chapter 7

# **Data Structure Documentation**

# 7.1 a4l\_channel Struct Reference

Structure describing some channel's characteristics.

# Data Fields

- unsigned long flags
- unsigned long nb\_bits

# 7.1.1 Detailed Description

Structure describing some channel's characteristics.

# 7.1.2 Field Documentation

7.1.2.1 unsigned long a4l\_channel::flags

Channel flags to define the reference.

7.1.2.2 unsigned long a4l\_channel::nb\_bits

Channel resolution.

Referenced by a4l\_get\_chan().


The documentation for this struct was generated from the following file:

• include/cobalt/kernel/rtdm/analogy/channel\_range.h

# 7.2 a4l\_channels\_desc Struct Reference

Structure describing a channels set.

Collaboration diagram for a4l\_channels\_desc:

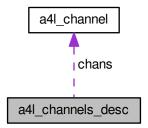

# Data Fields

- unsigned long mode
- unsigned long length
- struct a4l\_channel chans []

# 7.2.1 Detailed Description

Structure describing a channels set.

# 7.2.2 Field Documentation

7.2.2.1 struct a4l\_channel a4l\_channels\_desc::chans[]

Channels tab

Referenced by a4l\_get\_chan().

7.2.2.2 unsigned long a4l channels desc::length

Channels count

7.2.2.3 unsigned long a4l\_channels\_desc::mode

Declaration mode (global or per channel)

Referenced by a4l\_get\_chan().

The documentation for this struct was generated from the following file:

• include/cobalt/kernel/rtdm/analogy/channel\_range.h

# 7.3 a4l cmd desc Struct Reference

Structure describing the asynchronous instruction.

#### Data Fields

unsigned char idx\_subd

Subdevice to which the command will be applied.

unsigned long flags

Command flags.

unsigned int start\_src

Start trigger type.

unsigned int start\_arg

Start trigger argument.

• unsigned int scan\_begin\_src

Scan begin trigger type.

unsigned int scan\_begin\_arg

Scan begin trigger argument.

unsigned int convert\_src

Convert trigger type.

unsigned int convert\_arg

Convert trigger argument.

unsigned int scan\_end\_src

Scan end trigger type.

unsigned int scan\_end\_arg

Scan end trigger argument.

• unsigned int stop\_src

Stop trigger type.

unsigned int stop\_arg

Stop trigger argument.

• unsigned char nb\_chan

Count of channels related with the command.

unsigned int \* chan descs

Tab containing channels descriptors.

• unsigned int data len

Driver specific buffer size.

sampl\_t \* data

Driver specific buffer pointer.

## 7.3.1 Detailed Description

Structure describing the asynchronous instruction.

See Also

a4l\_snd\_command()

#### 7.3.2 Field Documentation

### 7.3.2.1 unsigned char a4l\_cmd\_desc::idx\_subd

Subdevice to which the command will be applied.

The documentation for this struct was generated from the following file:

include/rtdm/uapi/analogy.h

# 7.4 a4l\_descriptor Struct Reference

Structure containing device-information useful to users.

### Data Fields

• char board\_name [A4L\_NAMELEN]

Board name.

• int nb subd

Subdevices count.

int idx\_read\_subd

Input subdevice index.

int idx\_write\_subd

Output subdevice index.

int fd

File descriptor.

• unsigned int magic

Opaque field.

• int sbsize

Data buffer size.

void \* sbdata

Data buffer pointer.

# 7.4.1 Detailed Description

Structure containing device-information useful to users.

See Also

a4l\_get\_desc()

#### 7.4.2 Field Documentation

7.4.2.1 char a4l\_descriptor::board\_name[A4L\_NAMELEN]

Board name.

7.4.2.2 int a4l\_descriptor::fd

File descriptor.

Referenced by a4l\_async\_read(), a4l\_async\_write(), a4l\_close(), a4l\_fill\_desc(), a4l\_get\_bufsize(), a4l\_mark\_bufrw(), a4l\_mmap(), a4l\_open(), a4l\_poll(), a4l\_set\_bufsize(), a4l\_snd\_cancel(), a4l\_snd\_command(), a4l\_snd\_insn(), and a4l\_snd\_insn().

7.4.2.3 int a4l\_descriptor::idx\_read\_subd

Input subdevice index.

Referenced by a4l\_async\_read().

7.4.2.4 int a4l\_descriptor::idx\_write\_subd

Output subdevice index.

Referenced by a4l\_async\_write().

7.4.2.5 unsigned int a4l\_descriptor::magic

Opaque field.

Referenced by a4l\_fill\_desc(), a4l\_find\_range(), a4l\_get\_chinfo(), a4l\_get\_rnginfo(), a4l\_get\_subdinfo(), a4l\_sys\_desc().

7.4.2.6 int a4l descriptor::nb subd

Subdevices count.

Referenced by a4l\_get\_chinfo(), a4l\_get\_rnginfo(), and a4l\_get\_subdinfo().

7.4.2.7 void\* a4l descriptor::sbdata

Data buffer pointer.

Referenced by a4l\_get\_chinfo(), a4l\_get\_rnginfo(), a4l\_get\_subdinfo(), and a4l\_sys\_desc().

7.4.2.8 int a4l descriptor::sbsize

Data buffer size.

Referenced by a4l\_sys\_desc().

The documentation for this struct was generated from the following file:

include/rtdm/analogy.h

# 7.5 a4l\_driver Struct Reference

Structure containing driver declaration data.

Data Fields

struct list\_head list

List stuff.

struct module \* owner

Pointer to module containing the code.

• unsigned int flags

Type / status driver's flags.

char \* board\_name

Board name.

int privdata\_size

Size of the driver's private data.

int(\* attach )(struct a4l\_device \*, struct a4l\_link\_desc \*)

Attach procedure.

int(\* detach )(struct a4l\_device \*)
 Detach procedure.

## 7.5.1 Detailed Description

Structure containing driver declaration data.

See Also

```
rt_task_inquire()
```

The documentation for this struct was generated from the following file:

• include/cobalt/kernel/rtdm/analogy/driver.h

# 7.6 a4l\_instruction Struct Reference

Structure describing the synchronous instruction.

### Data Fields

• unsigned int type

Instruction type.

unsigned int idx\_subd

Subdevice to which the instruction will be applied.

unsigned int chan\_desc

Channel descriptor.

unsigned int data\_size

Size of the intruction data.

• void \* data

Instruction data.

## 7.6.1 Detailed Description

Structure describing the synchronous instruction.

See Also

```
a4l_snd_insn()
```

## 7.6.2 Field Documentation

## 7.6.2.1 unsigned int a4l\_instruction::idx\_subd

Subdevice to which the instruction will be applied.


The documentation for this struct was generated from the following file:

• include/rtdm/uapi/analogy.h

# 7.7 a4l\_instruction\_list Struct Reference

Structure describing the list of synchronous instructions.

Collaboration diagram for a4l\_instruction\_list:

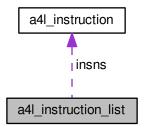

## Data Fields

unsigned int count

Instructions count.

• a4l\_insn\_t \* insns

Tab containing the instructions pointers.

## 7.7.1 Detailed Description

Structure describing the list of synchronous instructions.

See Also

a4l\_snd\_insnlist()

The documentation for this struct was generated from the following file:

• include/rtdm/uapi/analogy.h

# 7.8 a4l\_range Struct Reference

Structure describing a (unique) range.

### **Data Fields**

- long min
- long max
- unsigned long flags

## 7.8.1 Detailed Description

Structure describing a (unique) range.

## 7.8.2 Field Documentation

7.8.2.1 unsigned long a4l\_range::flags

Range flags (unit, etc.)

7.8.2.2 long a4l\_range::max

Maximal falue

7.8.2.3 long a4l\_range::min

Minimal value


The documentation for this struct was generated from the following file:

• include/cobalt/kernel/rtdm/analogy/channel\_range.h

# 7.9 a4l\_subdevice Struct Reference

Structure describing the subdevice.

Collaboration diagram for a4l\_subdevice:

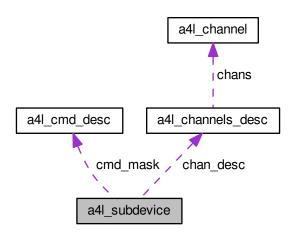

## Data Fields

struct list\_head list

List stuff.

struct a4l\_device \* dev

Containing device.

unsigned int idx

Subdevice index.

struct a4l buffer \* buf

Linked buffer.

• unsigned long status

Subdevice's status.

unsigned long flags

Type flags.

• struct a4l\_channels\_desc \* chan\_desc

Tab of channels descriptors pointers.

struct a4l\_rngdesc \* rng\_desc

Tab of ranges descriptors pointers.

struct a4l\_cmd\_desc \* cmd\_mask

Command capabilities mask.

int(\* insn\_read )(struct a4l\_subdevice \*, struct a4l\_kernel\_instruction \*)

Callback for the instruction "read".

int(\* insn\_write )(struct a4l\_subdevice \*, struct a4l\_kernel\_instruction \*)

Callback for the instruction "write".

int(\* insn\_bits )(struct a4l\_subdevice \*, struct a4l\_kernel\_instruction \*)

Callback for the instruction "bits".

• int(\* insn\_config\_)(struct a4l\_subdevice \*, struct a4l\_kernel\_instruction \*)

Callback for the configuration instruction.

int(\* do\_cmd )(struct a4l\_subdevice \*, struct a4l\_cmd\_desc \*)

Callback for command handling.

int(\* do\_cmdtest )(struct a4l\_subdevice \*, struct a4l\_cmd\_desc \*)

Callback for command checking.

void(\* cancel )(struct a4l\_subdevice \*)

Callback for asynchronous transfer cancellation.

void(\* munge )(struct a4l\_subdevice \*, void \*, unsigned long)

Callback for munge operation.

int(\* trigger )(struct a4l\_subdevice \*, lsampl\_t)

Callback for trigger operation.

• char priv [0]

Private data.

## 7.9.1 Detailed Description

Structure describing the subdevice.

See Also

a4l\_add\_subd()

The documentation for this struct was generated from the following file:

include/cobalt/kernel/rtdm/analogy/subdevice.h

# 7.10 atomic\_long\_t Struct Reference

Copyright © 2011 Gilles Chanteperdrix gilles.chanteperdrix@xenomai.org.

## 7.10.1 Detailed Description

Copyright © 2011 Gilles Chanteperdrix gilles.chanteperdrix@xenomai.org.

Copyright © 2013 Philippe Gerum rpm@xenomai.org.

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA.


The documentation for this struct was generated from the following file:

• include/nocore/atomic.h

## 7.11 can bittime Struct Reference

Custom CAN bit-time definition.

Collaboration diagram for can\_bittime:

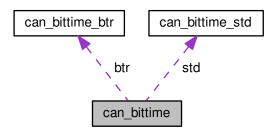

### Data Fields

- can bittime type t type
  - Type of bit-time definition.
- struct can\_bittime\_std std
  - Standard bit-time.
- struct can bittime btr btr

Hardware-spcific BTR bit-time.

## 7.11.1 Detailed Description

Custom CAN bit-time definition.

Examples:

rtcanconfig.c.

The documentation for this struct was generated from the following file:

• include/rtdm/uapi/can.h

# 7.12 can bittime btr Struct Reference

Hardware-specific BTR bit-times.

Data Fields

• uint8\_t btr0

Bus timing register 0.

• uint8\_t btr1

Bus timing register 1.

## 7.12.1 Detailed Description

Hardware-specific BTR bit-times.

The documentation for this struct was generated from the following file:

• include/rtdm/uapi/can.h

# 7.13 can\_bittime\_std Struct Reference

Standard bit-time parameters according to Bosch.

## Data Fields

```
uint32_t brp
```

Baud rate prescaler.

uint8\_t prop\_seg

from 1 to 8

uint8\_t phase\_seg1

from 1 to 8

uint8\_t phase\_seg2

from 1 to 8

uint8\_t sjw:7

from 1 to 4

• uint8\_t sam:1

1 - enable triple sampling

## 7.13.1 Detailed Description

Standard bit-time parameters according to Bosch.

The documentation for this struct was generated from the following file:

• include/rtdm/uapi/can.h

# 7.14 can\_filter Struct Reference

Filter for reception of CAN messages.

#### Data Fields

• uint32 t can id

CAN ID which must match with incoming IDs after passing the mask.

uint32\_t can\_mask

Mask which is applied to incoming IDs.

## 7.14.1 Detailed Description

Filter for reception of CAN messages.

This filter works as follows: A received CAN ID is AND'ed bitwise with can\_mask and then compared to can\_id. This also includes the CAN\_EFF\_FLAG and CAN\_RTR\_FLAG of CAN\_xxx\_FLAG. If this comparison is true, the message will be received by the socket. The logic can be inverted with the can\_id flag CAN\_INV\_FILTER:

```
if (can_id & CAN_INV_FILTER) {
   if ((received_can_id & can_mask) != (can_id & ~CAN_INV_FILTER))
      accept-message;
} else {
   if ((received_can_id & can_mask) == can_id)
      accept-message;
}
```

Multiple filters can be arranged in a filter list and set with Sockopts. If one of these filters matches a CAN ID upon reception of a CAN frame, this frame is accepted.

#### Examples:

can-rtt.c, and rtcanrecv.c.

## 7.14.2 Field Documentation

```
7.14.2.1 uint32_t can_filter::can_id
```

CAN ID which must match with incoming IDs after passing the mask.

The filter logic can be inverted with the flag CAN\_INV\_FILTER.

## Examples:

rtcanrecv.c.

7.14.2.2 uint32\_t can\_filter::can\_mask

Mask which is applied to incoming IDs.

See CAN ID masks if exactly one CAN ID should come through.

The documentation for this struct was generated from the following file:

• include/rtdm/uapi/can.h

# 7.15 can\_frame Struct Reference

Raw CAN frame.

**Public Member Functions** 

uint8\_t data[8] \_\_attribute\_\_ ((aligned(8)))
 Payload data bytes.

## Data Fields

• can\_id\_t can\_id

CAN ID of the frame.

• uint8\_t can\_dlc

Size of the payload in bytes.

## 7.15.1 Detailed Description

Raw CAN frame.

Central structure for receiving and sending CAN frames.

Examples:

can-rtt.c, rtcanrecv.c, and rtcansend.c.

### 7.15.2 Field Documentation

7.15.2.1 can\_id\_t can\_frame::can\_id

CAN ID of the frame.

See CAN ID flags for special bits.

Examples:

can-rtt.c.

The documentation for this struct was generated from the following file:

• include/rtdm/uapi/can.h

# 7.16 RT\_ALARM\_INFO Struct Reference

Alarm status descriptor.

#### Data Fields

unsigned long expiries

Number of past expiries.

char name [XNOBJECT\_NAME\_LEN]

Name of alarm object.

• int active

Active flag.

## 7.16.1 Detailed Description

Alarm status descriptor.

This structure reports various static and runtime information about a real-time alarm, returned by a call to rt\_alarm\_inquire().

The documentation for this struct was generated from the following file:

include/alchemy/alarm.h

# 7.17 RT\_BUFFER\_INFO Struct Reference

Buffer status descriptor.

### **Data Fields**

• int iwaiters

Number of tasks waiting on the read side of the buffer for input data.

int owaiters

Number of tasks waiting on the write side of the buffer for sending out data.

• size\_t totalmem

Overall size of buffer (in bytes).

• size\_t availmem

Amount of memory currently available for holding more data.

char name [XNOBJECT\_NAME\_LEN]

Name of the buffer.

### 7.17.1 Detailed Description

Buffer status descriptor.

This structure reports various static and runtime information about a real-time buffer, returned by a call to rt\_buffer\_inquire().

The documentation for this struct was generated from the following file:

include/alchemy/buffer.h

# 7.18 RT\_COND\_INFO Struct Reference

Condition variable status descriptor.

## Data Fields

char name [XNOBJECT\_NAME\_LEN]

Name of condition variable.

## 7.18.1 Detailed Description

Condition variable status descriptor.

This structure reports various static and runtime information about a condition variable, returned by a call to rt\_cond\_inquire().

The documentation for this struct was generated from the following file:

• include/alchemy/cond.h

# 7.19 RT\_EVENT\_INFO Struct Reference

Event status descriptor.

### **Data Fields**

unsigned long value

Current value of the event flag group.

• int nwaiters

Number of tasks currently waiting for events.

char name [XNOBJECT\_NAME\_LEN]

Name of event flag group.

## 7.19.1 Detailed Description

Event status descriptor.

This structure reports various static and runtime information about an event flag group, returned by a call to rt\_event\_inquire().

The documentation for this struct was generated from the following file:

• include/alchemy/event.h

# 7.20 RT\_HEAP\_INFO Struct Reference

Heap status descriptor.

### Data Fields

int nwaiters

Number of tasks waiting for available memory in rt\_heap\_alloc().

int mode

Creation mode flags as given to rt\_heap\_create().

size\_t heapsize

Overall size of heap (in bytes).

size t usablemem

Maximum amount of memory available from the heap.

size\_t usedmem

Amount of heap memory currently consumed.

• char name [XNOBJECT\_NAME\_LEN]

Name of heap.

## 7.20.1 Detailed Description

Heap status descriptor.

This structure reports various static and runtime information about a real-time heap, returned by a call to rt\_heap\_inquire().

### 7.20.2 Field Documentation

```
7.20.2.1 size_t RT_HEAP_INFO::usablemem
```

Maximum amount of memory available from the heap.

This value accounts for the overhead of internal data structures required to maintain the heap.

Referenced by rt\_heap\_inquire().

The documentation for this struct was generated from the following file:

include/alchemy/heap.h

# 7.21 RT\_MUTEX\_INFO Struct Reference

Mutex status descriptor.

## Data Fields

RT TASK owner

Current mutex owner, or null if unlocked.

• char name [XNOBJECT NAME LEN]

Name of mutex.

## 7.21.1 Detailed Description

Mutex status descriptor.

This structure reports various static and runtime information about a mutex, returned by a call to rt\_mutex\_inquire().

## 7.21.2 Field Documentation

## 7.21.2.1 RT\_TASK RT\_MUTEX\_INFO::owner

Current mutex owner, or null if unlocked.

This information is in essence transient, and may not be valid anymore once used by the caller.

Referenced by rt mutex inquire().

The documentation for this struct was generated from the following file:

• include/alchemy/mutex.h

# 7.22 RT\_QUEUE\_INFO Struct Reference

Queue status descriptor.

### Data Fields

int nwaiters

Number of tasks currently waiting on the gueue for messages.

int nmessages

Number of messages pending in queue.

• int mode

Queue mode bits, as given to rt\_queue\_create().

size\_t qlimit

Maximum number of messages in queue, zero if unlimited.

size\_t poolsize

Size of memory pool for holding message buffers (in bytes).

• size t usedmem

Amount of memory consumed from the buffer pool.

char name [XNOBJECT\_NAME\_LEN]

Name of message queue.

## 7.22.1 Detailed Description

Queue status descriptor.

This structure reports various static and runtime information about a real-time queue, returned by a call to rt\_queue\_inquire().

The documentation for this struct was generated from the following file:

• include/alchemy/queue.h

# 7.23 RT\_SEM\_INFO Struct Reference

Semaphore status descriptor.

### **Data Fields**

unsigned long count

Current semaphore value.

int nwaiters

Number of tasks waiting on the semaphore.

• char name [XNOBJECT\_NAME\_LEN]

Name of semaphore.

## 7.23.1 Detailed Description

Semaphore status descriptor.

This structure reports various static and runtime information about a semaphore, returned by a call to rt\_sem\_inquire().

The documentation for this struct was generated from the following file:

• include/alchemy/sem.h

# 7.24 RT TASK INFO Struct Reference

Task status descriptor.

### Data Fields

• int prio

Task priority.

• struct threadobj\_stat stat

Task status.

• char name [XNOBJECT\_NAME\_LEN]

Name of task.

• pid\_t pid

Host pid.

## 7.24.1 Detailed Description

Task status descriptor.

This structure reports various static and runtime information about a real-time task, returned by a call to rt\_task\_inquire().

The documentation for this struct was generated from the following file:

• include/alchemy/task.h

# 7.25 rt timer info Struct Reference

Timer status descriptor.

#### Data Fields

RTIME period

Clock resolution in nanoseconds.

• RTIME tsc

Current time stamp counter value.

RTIME date

Current monotonic date, based on the time stamp counter value.

## 7.25.1 Detailed Description

Timer status descriptor.

This structure reports various static and runtime information about the timer, returned by a call to rt\_timer\_inquire().

### 7.25.2 Field Documentation

#### 7.25.2.1 RTIME rt timer info::date

Current monotonic date, based on the time stamp counter value.

The date is expressed in clock ticks, therefore depends on the Alchemy clock resolution applicable to the current process.

Referenced by rt\_timer\_inquire().

### 7.25.2.2 RTIME rt\_timer\_info::tsc

Current time stamp counter value.

The source of this information is hardware-dependent, and does not depend on the per-process clock settings. Consecutive readings from a single CPU are guaranteed to be monotonically incrementing, however readings may not be synchronized on multi-core hardware if the time stamp counter is local to each CPU. Therefore, whether consecutive readings from different CPUs are consistent and monotonically incrementing depends on the underlying TSC source.

Referenced by rt timer inquire().


The documentation for this struct was generated from the following file:

• include/alchemy/timer.h

## 7.26 rtdm dev context Struct Reference

Device context.

Collaboration diagram for rtdm\_dev\_context:

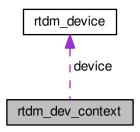

## Data Fields

struct rtdm\_device \* device

Set of active device operation handlers.

struct rtdm\_devctx\_reserved reserved

Data stored by RTDM inside a device context (internal use only)

• char dev private [0]

Begin of driver defined context data structure.

## 7.26.1 Detailed Description

#### Device context.

A device context structure is associated with every open device instance. RTDM takes care of its creation and destruction and passes it to the operation handlers when being invoked.

Drivers can attach arbitrary data immediately after the official structure. The size of this data is provided via <a href="rtdm\_device.context\_size">rtdm\_device.context\_size</a> during device registration.

### 7.26.2 Field Documentation

7.26.2.1 struct rtdm\_device\* rtdm\_dev\_context::device

Set of active device operation handlers.

Reference to owning device

Referenced by rtdm fd device().

The documentation for this struct was generated from the following file:

• include/cobalt/kernel/rtdm/driver.h

# 7.27 rtdm\_device Struct Reference

RTDM device.

### **Data Fields**

struct rtdm\_dev\_reserved reserved

Data stored by RTDM inside a registered device (internal use only)

• int struct version

Revision number of this structure, see Driver Versioning defines.

int device\_flags

Device flags, see Device Flags for details.

size\_t context\_size

Size of driver defined appendix to struct rtdm\_dev\_context.

char device\_name [RTDM\_MAX\_DEVNAME\_LEN+1]

Named device identification (orthogonal to Linux device name space)

int protocol\_family

Protocol device identification: protocol family (PF\_xxx)

int socket\_type

Protocol device identification: socket type (SOCK\_xxx)

rtdm\_open\_handler\_t open

Named device instance creation for real-time contexts.

• rtdm socket handler t socket

Protocol socket creation for real-time contexts.

struct rtdm\_fd\_ops ops

Default operations on newly opened device instance.

• int device class

Device class ID, see RTDM\_CLASS\_xxx.

int device\_sub\_class

Device sub-class, see RTDM\_SUBCLASS\_xxx definition in the Device Profiles.

int profile\_version

Supported device profile version.

const char \* driver\_name

Informational driver name (reported via /proc)

int driver\_version

Driver version, see Driver Versioning defines.

• const char \* peripheral\_name

Informational peripheral name the device is attached to (reported via /proc)

• const char \* provider\_name

Informational driver provider name (reported via /proc)

const char \* proc\_name

Name of /proc entry for the device, must not be NULL.

• int device id

Driver definable device ID.

void \* device data

Driver definable device data.

### 7.27.1 Detailed Description

#### RTDM device.

This structure specifies a RTDM device. As some fields, especially the reserved area, will be modified by RTDM during runtime, the structure must not reside in write-protected memory.

### 7.27.2 Field Documentation

### 7.27.2.1 rtdm\_open\_handler\_t rtdm\_device::open

Named device instance creation for real-time contexts.

Referenced by rtdm\_dev\_register().

7.27.2.2 rtdm\_socket\_handler\_t rtdm\_device::socket

Protocol socket creation for real-time contexts.

Referenced by rtdm\_dev\_register().

The documentation for this struct was generated from the following file:

• include/cobalt/kernel/rtdm/driver.h

# 7.28 rtdm\_device\_info Struct Reference

Device information.

### **Data Fields**

int device\_flags

Device flags, see Device Flags for details.

int device\_class

Device class ID, see RTDM\_CLASS\_xxx.

• int device sub class

Device sub-class, either RTDM\_SUBCLASS\_GENERIC or a RTDM\_SUBCLASS\_xxx definition of the related Device Profile.

• int profile version

Supported device profile version.

## 7.28.1 Detailed Description

Device information.

The documentation for this struct was generated from the following file:

• include/rtdm/uapi/rtdm.h

# 7.29 rtipc\_port\_label Struct Reference

Port label information structure.

## **Data Fields**

• char label [XNOBJECT NAME LEN]

Port label string, null-terminated.

## 7.29.1 Detailed Description

Port label information structure.

Examples:

bufp-label.c, iddp-label.c, and xddp-label.c.

#### 7.29.2 Field Documentation

7.29.2.1 char rtipc\_port\_label::label[XNOBJECT\_NAME\_LEN]

Port label string, null-terminated.

Referenced by rt pipe create().

The documentation for this struct was generated from the following file:

include/rtdm/uapi/ipc.h

# 7.30 rtser\_config Struct Reference

Serial device configuration.

### **Data Fields**

• int config\_mask

mask specifying valid fields, see RTSER\_SET\_xxx

int baud\_rate

baud rate, default RTSER\_DEF\_BAUD

int parity

number of parity bits, see RTSER\_xxx\_PARITY

int data\_bits

number of data bits, see RTSER\_xxx\_BITS

int stop\_bits

number of stop bits, see RTSER\_xxx\_STOPB

int handshake

handshake mechanisms, see RTSER\_xxx\_HAND

int fifo\_depth

reception FIFO interrupt threshold, see RTSER\_FIFO\_xxx

nanosecs\_rel\_t rx\_timeout

reception timeout, see RTSER TIMEOUT xxx for special values

· nanosecs rel t tx timeout

transmission timeout, see RTSER\_TIMEOUT\_xxx for special values

• nanosecs\_rel\_t event\_timeout

event timeout, see RTSER\_TIMEOUT\_xxx for special values

int timestamp\_history

enable timestamp history, see RTSER\_xxx\_TIMESTAMP\_HISTORY

int event\_mask

event mask to be used with RTSER\_RTIOC\_WAIT\_EVENT, see RTSER\_EVENT\_xxx

int rs485

enable RS485 mode, see RTSER RS485 xxx

## 7.30.1 Detailed Description

Serial device configuration.

Examples:

cross-link.c.

The documentation for this struct was generated from the following file:

• include/rtdm/uapi/serial.h

# 7.31 rtser\_event Struct Reference

Additional information about serial device events.

## Data Fields

• int events

signalled events, see RTSER EVENT xxx

• int rx\_pending

number of pending input characters

nanosecs\_abs\_t last\_timestamp

last interrupt timestamp

nanosecs\_abs\_t rxpend\_timestamp

reception timestamp of oldest character in input queue

## 7.31.1 Detailed Description

Additional information about serial device events.

Examples:

cross-link.c.

The documentation for this struct was generated from the following file:

• include/rtdm/uapi/serial.h

# 7.32 rtser\_status Struct Reference

Serial device status.

## Data Fields

• int line\_status

line status register, see RTSER\_LSR\_xxx

• int modem status

modem status register, see RTSER\_MSR\_xxx

## 7.32.1 Detailed Description

Serial device status.

The documentation for this struct was generated from the following file:

• include/rtdm/uapi/serial.h

# 7.33 sockaddr\_can Struct Reference

Socket address structure for the CAN address family.

## Data Fields

sa\_family\_t can\_family
 CAN address family, must be AF\_CAN.

int can\_ifindex

Interface index of CAN controller.

## 7.33.1 Detailed Description

Socket address structure for the CAN address family.

### Examples:

can-rtt.c, rtcanrecv.c, and rtcansend.c.

### 7.33.2 Field Documentation

7.33.2.1 int sockaddr\_can::can\_ifindex

Interface index of CAN controller.

See SIOCGIFINDEX.

The documentation for this struct was generated from the following file:

• include/rtdm/uapi/can.h

# 7.34 sockaddr ipc Struct Reference

Socket address structure for the RTIPC address family.

## Data Fields

sa\_family\_t sipc\_family
 RTIPC address family, must be AF\_RTIPC.

rtipc\_port\_t sipc\_port

Port number.

## 7.34.1 Detailed Description

Socket address structure for the RTIPC address family.

### Examples:

bufp-label.c, bufp-readwrite.c, iddp-label.c, iddp-sendrecv.c, xddp-echo.c, xddp-label.c, and xddp-stream.c.

### 7.34.2 Field Documentation

7.34.2.1 rtipc\_port\_t sockaddr\_ipc::sipc\_port

Port number.

Referenced by rt\_pipe\_create().

The documentation for this struct was generated from the following file:

• include/rtdm/uapi/ipc.h

## 7.35 xnsched Struct Reference

Scheduling information structure.

### **Data Fields**

- unsigned long status
- unsigned long Iflags
- struct xnthread \* curr
- int cpu
- cpumask\_t resched
- struct xnsched\_rt rt
- volatile unsigned inesting
- struct xntimer htimer
- struct xntimer rrbtimer

## 7.35.1 Detailed Description

Scheduling information structure.

### 7.35.2 Field Documentation

7.35.2.1 int xnsched::cpu

Mask of CPUs needing rescheduling.

7.35.2.2 struct xnthread\* xnsched::curr

Owner CPU id.

Referenced by xnthread\_set\_slice(), and xnthread\_suspend().

7.35.2.3 struct xntimer xnsched::htimer

Round-robin timer.

Referenced by program\_htick\_shot(), switch\_htick\_mode(), and xnclock\_tick().

7.35.2.4 volatile unsigned xnsched::inesting

Host timer.

7.35.2.5 unsigned long xnsched::lflags

Current thread.

Referenced by xnclock\_tick(), xnsched\_run(), and xnthread\_suspend().

7.35.2.6 cpumask\_t xnsched::resched

Context of built-in real-time class.

7.35.2.7 struct xntimer xnsched::rrbtimer

Root thread control block.

Referenced by xnthread\_set\_slice().

7.35.2.8 struct xnsched rt xnsched::rt

Interrupt nesting level.

7.35.2.9 unsigned long xnsched::status

< Scheduler specific status bitmask. Scheduler specific local flags bitmask.

Referenced by xnclock\_tick(), and xnsched\_run().

The documentation for this struct was generated from the following file:

• include/cobalt/kernel/sched.h

# 7.36 xnvfile\_lock\_ops Struct Reference

Vfile locking operations.

## Data Fields

- int(\* get )(struct xnvfile \*vfile)
- void(\* put )(struct xnvfile \*vfile)

## 7.36.1 Detailed Description

Vfile locking operations.

This structure describes the operations to be provided for implementing locking support on vfiles. They apply to both snapshot-driven and regular vfiles.

### 7.36.2 Field Documentation

7.36.2.1 int(\* xnvfile lock ops::get)(struct xnvfile \*vfile)

This handler should grab the desired lock.

**Parameters** 

vfile | A pointer to the virtual file which needs locking.

### Returns

zero should be returned if the call succeeds. Otherwise, a negative error code can be returned; upon error, the current vfile operation is aborted, and the user-space caller is passed back the error value.

7.36.2.2 void(\* xnvfile\_lock\_ops::put)(struct xnvfile \*vfile)

This handler should release the lock previously grabbed by the get() handler.

**Parameters** 

vfile | A pointer to the virtual file which currently holds the lock to release.

The documentation for this struct was generated from the following file:

• include/cobalt/kernel/vfile.h

# 7.37 xnvfile\_regular\_iterator Struct Reference

Regular vfile iterator.

#### Data Fields

loff\_t pos

Current record position while iterating.

• struct seq file \* seq

Backlink to the host sequential file supporting the vfile.

• struct xnvfile\_regular \* vfile

Backlink to the vfile being read.

• char private [0]

Start of private area.

## 7.37.1 Detailed Description

Regular vfile iterator.

This structure defines an iterator over a regular vfile.

### 7.37.2 Field Documentation

7.37.2.1 loff\_t xnvfile\_regular\_iterator::pos

Current record position while iterating.

7.37.2.2 char xnvfile regular iterator::private[0]

Start of private area.

Use xnvfile iterator priv() to address it.

7.37.2.3 struct seq\_file\* xnvfile\_regular\_iterator::seq

Backlink to the host sequential file supporting the vfile.

7.37.2.4 struct xnvfile\_regular\* xnvfile\_regular\_iterator::vfile

Backlink to the vfile being read.

The documentation for this struct was generated from the following file:

• include/cobalt/kernel/vfile.h

# 7.38 xnvfile\_regular\_ops Struct Reference

Regular vfile operation descriptor.

## Data Fields

- int(\* rewind )(struct xnvfile\_regular\_iterator \*it)
- void \*(\* begin )(struct xnvfile\_regular\_iterator \*it)
- void \*(\* next )(struct xnvfile regular iterator \*it)
- void(\* end )(struct xnvfile\_regular\_iterator \*it)
- int(\* show )(struct xnvfile\_regular\_iterator \*it, void \*data)
- ssize t(\* store )(struct xnvfile input \*input)

## 7.38.1 Detailed Description

Regular vfile operation descriptor.

This structure describes the operations available with a regular vfile. It defines handlers for sending back formatted kernel data upon a user-space read request, and for obtaining user data upon a user-space write request.

### 7.38.2 Field Documentation

7.38.2.1 void\*(\* xnvfile regular ops::begin)(struct xnvfile regular iterator \*it)

This handler should prepare for iterating over the records upon a read request, starting from the specified position.

#### **Parameters**

| it | A pointer to the current vfile iterator. On entry, it->pos is set to the (0-based) position |  |
|----|---|--|
|    | of the first record to output. This handler may be called multiple times with different     |  |
|    | position requests.  |  |

#### Returns

A pointer to the first record to format and output, to be passed to the show() handler as its data parameter, if the call succeeds. Otherwise:

- NULL in case no record is available, in which case the read operation will terminate immediately
  with no output.
- VFILE\_SEQ\_START, a special value indicating that the show() handler should receive a NULL data pointer first, in order to output a header.
- ERR\_PTR(errno), where errno is a negative error code; upon error, the current operation will be aborted immediately.

#### Note

This handler is optional; if none is given in the operation descriptor (i.e. NULL value), the show() handler() will be called only once for a read operation, with a NULL data parameter. This particular setting is convenient for simple regular viiles having a single, fixed record to output.

7.38.2.2 void(\* xnvfile regular ops::end)(struct xnvfile regular iterator \*it)

This handler is called after all records have been output.

#### **Parameters**

it A pointer to the current vfile iterator.

### Note

This handler is optional and the pointer may be NULL.

7.38.2.3 void\*(\* xnvfile\_regular\_ops::next)(struct xnvfile\_regular\_iterator \*it)

This handler should return the address of the next record to format and output by the show()handler".

### Parameters

it A pointer to the current vfile iterator. On entry, it->pos is set to the (0-based) position of the next record to output.

#### Returns

A pointer to the next record to format and output, to be passed to the show() handler as its *data* parameter, if the call succeeds. Otherwise:

- NULL in case no record is available, in which case the read operation will terminate immediately with no output.
- ERR\_PTR(errno), where errno is a negative error code; upon error, the current operation will be aborted immediately.

#### Note

This handler is optional; if none is given in the operation descriptor (i.e. NULL value), the read operation will stop after the first invocation of the show() handler.

7.38.2.4 int(\* xnvfile\_regular\_ops::rewind)(struct xnvfile\_regular\_iterator \*it)

This handler is called only once, when the virtual file is opened, before the begin() handler is invoked.

#### **Parameters**

it A pointer to the vfile iterator which will be used to read the file contents.

#### Returns

Zero should be returned upon success. Otherwise, a negative error code aborts the operation, and is passed back to the reader.

#### Note

This handler is optional. It should not be used to allocate resources but rather to perform consistency checks, since no closure call is issued in case the open sequence eventually fails.

7.38.2.5 int(\* xnvfile regular ops::show)(struct xnvfile regular iterator \*it, void \*data)

This handler should format and output a record.

xnvfile\_printf(), xnvfile\_write(), xnvfile\_puts() and xnvfile\_putc() are available to format and/or emit the output. All routines take the iterator argument *it* as their first parameter.

#### **Parameters**

| it   | A pointer to the current vfile iterator.  |  |
|------|---|--|
| data | A pointer to the record to format then output. The first call to the handler may      |  |
|      | receive a NULL data pointer, depending on the presence and/or return of a hander;     |  |
|      | the show handler should test this special value to output any header that fits, prior |  |
|      | to receiving more calls with actual records.  |  |

## Returns

zero if the call succeeds, also indicating that the handler should be called for the next record if any. Otherwise:

- A negative error code. This will abort the output phase, and return this status to the reader.
- VFILE\_SEQ\_SKIP, a special value indicating that the current record should be skipped and will not be output.

7.38.2.6 ssize\_t(\* xnvfile\_regular\_ops::store)(struct xnvfile\_input \*input)

This handler receives data written to the vfile, likely for updating some kernel setting, or triggering any other action which fits. This is the only handler which deals with the write-side of a vfile. It is called when writing to the /proc entry of the vfile from a user-space process.

The input data is described by a descriptor passed to the handler, which may be subsequently passed to parsing helper routines. For instance, <a href="mailto:xnvfile\_get\_string">xnvfile\_get\_string</a>() will accept the input descriptor for returning the written data as a null-terminated character string. On the other hand, <a href="mailto:xnvfile\_get\_integer">xnvfile\_get\_integer</a>() will attempt to return a long integer from the input data.

#### **Parameters**

| input | A pointer to an input descriptor. | It refers to an opaque data from the handler's |
|-------|-----------------------------------|--|
|       | standpoint.                       |  |

#### Returns

the number of bytes read from the input descriptor if the call succeeds. Otherwise, a negative error code. Return values from parsing helper routines are commonly passed back to the caller by the store() handler.

#### Note

This handler is optional, and may be omitted for read-only vfiles.

The documentation for this struct was generated from the following file:

include/cobalt/kernel/vfile.h

# 7.39 xnvfile rev tag Struct Reference

Snapshot revision tag.

### **Data Fields**

int rev

Current revision number.

## 7.39.1 Detailed Description

Snapshot revision tag.

This structure defines a revision tag to be used with snapshot-driven vfiles.

### 7.39.2 Field Documentation

7.39.2.1 int xnvfile rev tag::rev

Current revision number.


The documentation for this struct was generated from the following file:

include/cobalt/kernel/vfile.h

# 7.40 xnvfile\_snapshot Struct Reference

Snapshot vfile descriptor.

Collaboration diagram for xnvfile\_snapshot:

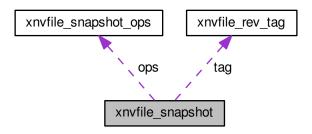

## 7.40.1 Detailed Description

Snapshot vfile descriptor.

This structure describes a snapshot-driven vfile. Reading from such a vfile involves a preliminary data collection phase under lock protection, and a subsequent formatting and output phase of the collected data records. Locking is done in a way that does not increase worst-case latency, regardless of the number of records to be collected for output.


The documentation for this struct was generated from the following file:

• include/cobalt/kernel/vfile.h

# 7.41 xnvfile\_snapshot\_iterator Struct Reference

Snapshot-driven vfile iterator.

Collaboration diagram for xnvfile\_snapshot\_iterator:

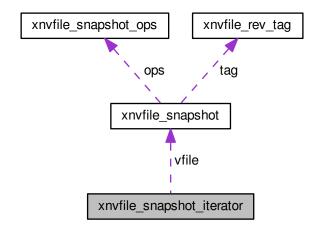

### **Data Fields**

int nrdata

Number of collected records.

• caddr t databuf

Address of record buffer.

• struct seq\_file \* seq

Backlink to the host sequential file supporting the vfile.

• struct xnvfile\_snapshot \* vfile

Backlink to the vfile being read.

void(\* endfn )(struct xnvfile\_snapshot\_iterator \*it, void \*buf)

Buffer release handler.

• char private [0]

Start of private area.

## 7.41.1 Detailed Description

Snapshot-driven vfile iterator.

This structure defines an iterator over a snapshot-driven vfile.

## 7.41.2 Field Documentation

7.41.2.1 caddr\_t xnvfile\_snapshot\_iterator::databuf

Address of record buffer.

7.41.2.2 void(\* xnvfile\_snapshot\_iterator::endfn)(struct xnvfile\_snapshot\_iterator \*it, void \*buf)

Buffer release handler.

7.41.2.3 int xnvfile\_snapshot\_iterator::nrdata

Number of collected records.

7.41.2.4 char xnvfile snapshot iterator::private[0]

Start of private area.

Use xnvfile iterator priv() to address it.

7.41.2.5 struct seq file\* xnvfile snapshot iterator::seq

Backlink to the host sequential file supporting the vfile.

7.41.2.6 struct xnvfile snapshot\* xnvfile snapshot iterator::vfile

Backlink to the vfile being read.

The documentation for this struct was generated from the following file:

• include/cobalt/kernel/vfile.h

# 7.42 xnvfile snapshot ops Struct Reference

Snapshot vfile operation descriptor.

### **Data Fields**

- int(\* rewind )(struct xnvfile\_snapshot\_iterator \*it)
- void \*(\* begin )(struct xnvfile snapshot iterator \*it)
- void(\* end )(struct xnvfile\_snapshot\_iterator \*it, void \*buf)
- int(\* next )(struct xnvfile\_snapshot\_iterator \*it, void \*data)
- int(\* show )(struct xnvfile\_snapshot\_iterator \*it, void \*data)
- ssize\_t(\* store )(struct xnvfile\_input \*input)

## 7.42.1 Detailed Description

Snapshot vfile operation descriptor.

This structure describes the operations available with a snapshot-driven vfile. It defines handlers for returning a printable snapshot of some Xenomai object contents upon a user-space read request, and for updating this object upon a user-space write request.

### 7.42.2 Field Documentation

7.42.2.1 void\*(\* xnvfile snapshot ops::begin)(struct xnvfile snapshot iterator \*it)

This handler should allocate the snapshot buffer to hold records during the data collection phase. When specified, all records collected via the next()handler" will be written to a cell from the memory area returned by begin().

#### **Parameters**

| it A pointer to the current snapshot iterator. |
|--|
|--|

#### Returns

A pointer to the record buffer, if the call succeeds. Otherwise:

- NULL in case of allocation error. This will abort the data collection, and return -ENOMEM to the reader.
- VFILE\_SEQ\_EMPTY, a special value indicating that no record will be output. In such a case, the
  next() handler will not be called, and the data collection will stop immediately. However, the show()
  handler will still be called once, with a NULL data pointer (i.e. header display request).

#### Note

This handler is optional; if none is given, an internal allocation depending on the value returned by the rewind() handler can be obtained.

7.42.2.2 void(\* xnvfile\_snapshot\_ops::end)(struct xnvfile\_snapshot\_iterator \*it, void \*buf)

This handler releases the memory buffer previously obtained from begin(). It is usually called after the snapshot data has been output by show(), but it may also be called before rewinding the vfile after a revision change, to release the dropped buffer.

#### **Parameters**

| it  | A pointer to the current snapshot iterator. |
|-----|---|
| buf | A pointer to the buffer to release.         |

#### Note

This routine is optional and the pointer may be NULL. It is not needed upon internal buffer allocation; see the description of the rewind()handler".

7.42.2.3 int(\* xnvfile snapshot ops::next)(struct xnvfile snapshot iterator \*it, void \*data)

This handler fetches the next record, as part of the snapshot data to be sent back to the reader via the show().

#### **Parameters**

| it   | A pointer to the current snapshot iterator. |
|------|---|
| data | A pointer to the record to fill in.         |

#### Returns

a strictly positive value, if the call succeeds and leaves a valid record into *data*, which should be passed to the show() handler() during the formatting and output phase. Otherwise:

- A negative error code. This will abort the data collection, and return this status to the reader.
- VFILE\_SEQ\_SKIP, a special value indicating that the current record should be skipped. In such a
  case, the data pointer is not advanced to the next position before the next() handler is called anew.

#### Note

This handler is called with the vfile lock held. Before each invocation of this handler, the vfile core checks whether the revision tag has been touched, in which case the data collection is restarted from scratch. A data collection phase succeeds whenever all records can be fetched via the next() handler, while the revision tag remains unchanged, which indicates that a consistent snapshot of the object state was taken.

### 7.42.2.4 int(\* xnvfile snapshot ops::rewind)(struct xnvfile snapshot iterator \*it)

This handler (re-)initializes the data collection, moving the seek pointer at the first record. When the file revision tag is touched while collecting data, the current reading is aborted, all collected data dropped, and the vfile is eventually rewound.

#### **Parameters**

| it | A pointer to the current snapshot iterator. | Two useful information can be retrieved |
|----|---|---|
|    | from this iterator in this context:         |   |

- it->vfile is a pointer to the descriptor of the virtual file being rewound.
- xnvfile\_iterator\_priv(it) returns a pointer to the private data area, available from the descriptor, which size is vfile->privsz. If the latter size is zero, the returned pointer is meaningless and should not be used.

#### Returns

A negative error code aborts the data collection, and is passed back to the reader. Otherwise:

- a strictly positive value is interpreted as the total number of records which will be returned by the next() handler during the data collection phase. If no begin() handler is provided in the operation descriptor, this value is used to allocate the snapshot buffer internally. The size of this buffer would then be vfile->datasz \* value.
- zero leaves the allocation to the begin() handler if present, or indicates that no record is to be output in case such handler is not given.

### Note

This handler is optional; a NULL value indicates that nothing needs to be done for rewinding the vfile. It is called with the vfile lock held.

7.42.2.5 int(\* xnvfile\_snapshot\_ops::show)(struct xnvfile\_snapshot\_iterator \*it, void \*data)

This handler should format and output a record from the collected data.

xnvfile\_printf(), xnvfile\_write(), xnvfile\_puts() and xnvfile\_putc() are available to format and/or emit the output. All routines take the iterator argument *it* as their first parameter.

#### **Parameters**

it A pointer to the current snapshot iterator.

| data | A pointer to the record to format then output. The first call to the handler is always   |
|------|--|
|      |  |
|      | passed a NULL data pointer; the show handler should test this special value to   |
|      |  |
|      | output any header that fits, prior to receiving more calls with actual records.  |
|      | partially marginal and marginal and marginal and an artifact and artifact artifact and artifact artifact and artifact artif |

#### Returns

zero if the call succeeds, also indicating that the handler should be called for the next record if any. Otherwise:

- A negative error code. This will abort the output phase, and return this status to the reader.
- VFILE\_SEQ\_SKIP, a special value indicating that the current record should be skipped and will not be output.

### 7.42.2.6 ssize t(\* xnvfile snapshot ops::store)(struct xnvfile input \*input)

This handler receives data written to the vfile, likely for updating the associated Xenomai object's state, or triggering any other action which fits. This is the only handler which deals with the write-side of a vfile. It is called when writing to the /proc entry of the vfile from a user-space process.

The input data is described by a descriptor passed to the handler, which may be subsequently passed to parsing helper routines. For instance, <a href="mailto:xnvfile\_get\_string">xnvfile\_get\_string</a>() will accept the input descriptor for returning the written data as a null-terminated character string. On the other hand, <a href="mailto:xnvfile\_get\_integer">xnvfile\_get\_integer</a>() will attempt to return a long integer from the input data.

#### **Parameters**

| input | A pointer to an input descriptor. | It refers to an opaque data from the handler's |
|-------|-----------------------------------|--|
|       | standpoint.                       |  |

#### Returns

the number of bytes read from the input descriptor if the call succeeds. Otherwise, a negative error code. Return values from parsing helper routines are commonly passed back to the caller by the store() handler.

#### Note

This handler is optional, and may be omitted for read-only vfiles.

Referenced by xnvfile init snapshot().

The documentation for this struct was generated from the following file:


• include/cobalt/kernel/vfile.h

# Chapter 8


# File Documentation

8.1 include/cobalt/kernel/rtdm/analogy/buffer.h File Reference

Analogy for Linux, buffer related features. Include dependency graph for buffer.h:

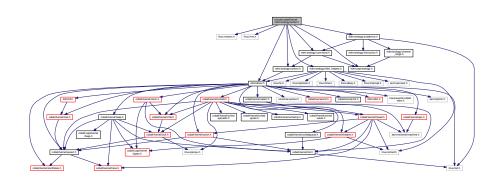

This graph shows which files directly or indirectly include this file:

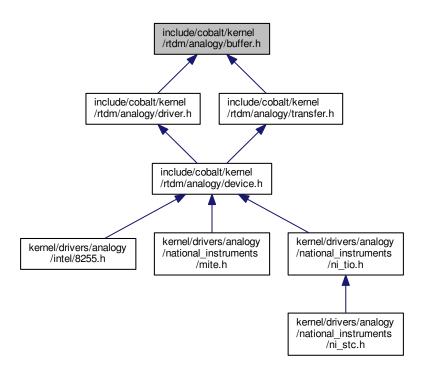

## 8.1.1 Detailed Description

Analogy for Linux, buffer related features. Copyright (C) 1997-2000 David A. Schleef ds@schleef.org Copyright (C) 2008 Alexis Berlemont alexis.berlemont@free.fr

Xenomai is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


Xenomai is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with Xenomai; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.


# 8.2 include/cobalt/kernel/rtdm/analogy/channel\_range.h File Reference

Analogy for Linux, channel, range related features.

Include dependency graph for channel\_range.h:

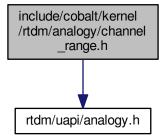

This graph shows which files directly or indirectly include this file:

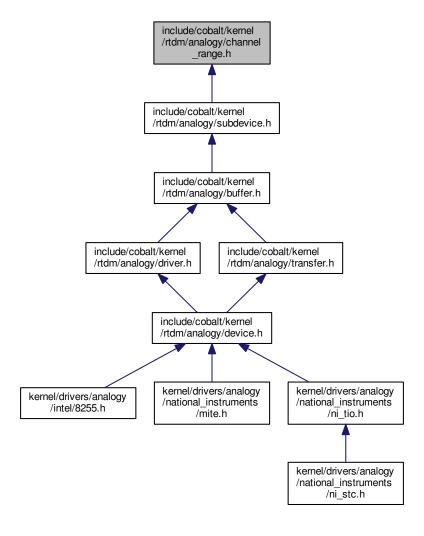

### **Data Structures**

struct a4l\_channel

Structure describing some channel's characteristics.

struct a4l\_channels\_desc

Structure describing a channels set.

struct a4l\_range

Structure describing a (unique) range.

### Macros

#define A4L\_CHAN\_GLOBAL 0x10

Internal use flag (must not be used by driver developer)

• #define A4L\_RNG\_GLOBAL 0x8

Internal use flag (must not be used by driver developer)

• #define RANGE(x, y)

Macro to declare a (unique) range with no unit defined.

#define RANGE\_V(x, y)

Macro to declare a (unique) range in Volt.

#define RANGE\_mA(x, y)

Macro to declare a (unique) range in milliAmpere.

#define RANGE\_ext(x, y)

Macro to declare a (unique) range in some external reference.

#define A4L\_RNG\_GLOBAL\_RNGDESC 0

Constant to define a ranges descriptor as global (inter-channel)

#define A4L RNG PERCHAN RNGDESC 1

Constant to define a ranges descriptor as specific for a channel.

#define RNG\_GLOBAL(x)

Macro to declare a ranges global descriptor in one line.

### Channel reference

Flags to define the channel's reference

#define A4L\_CHAN\_AREF\_GROUND 0x1

Ground reference.

#define A4L\_CHAN\_AREF\_COMMON 0x2

Common reference.

#define A4L\_CHAN\_AREF\_DIFF 0x4

Differential reference.

#define A4L\_CHAN\_AREF\_OTHER 0x8

Misc reference.

#### Channels declaration mode

Constant to define whether the channels in a descriptor are identical

#define A4L\_CHAN\_GLOBAL\_CHANDESC 0

Global declaration, the set contains channels with similar characteristics.

#define A4L\_CHAN\_PERCHAN\_CHANDESC 1

Per channel declaration, the decriptor gathers differents channels.

## 8.2.1 Detailed Description

Analogy for Linux, channel, range related features. Copyright (C) 1997-2000 David A. Schleef ds@schleef.org Copyright (C) 2008 Alexis Berlemont alexis.berlemont@free.fr

Xenomai is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


Xenomai is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with Xenomai; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.


# 8.3 include/cobalt/kernel/rtdm/analogy/context.h File Reference

Analogy for Linux, context structure / macros declarations.

Include dependency graph for context.h:

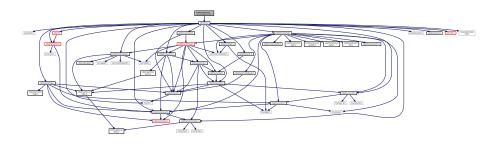

This graph shows which files directly or indirectly include this file:

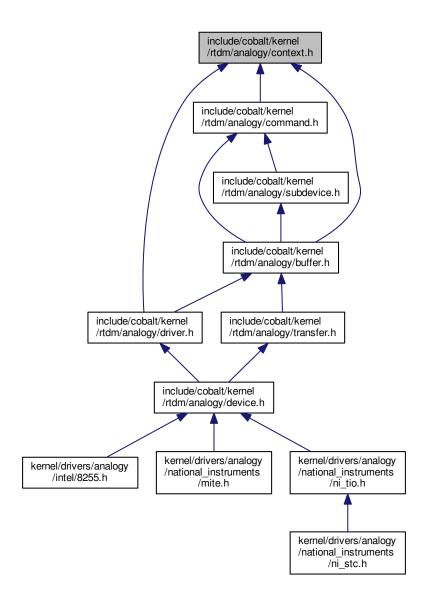

## 8.3.1 Detailed Description

Analogy for Linux, context structure / macros declarations. Copyright (C) 1997-2000 David A. Schleef ds@schleef.org Copyright (C) 2008 Alexis Berlemont alexis.berlemont@free.fr

Xenomai is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


Xenomai is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with Xenomai; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.


# 8.4 include/cobalt/kernel/rtdm/analogy/device.h File Reference

Analogy for Linux, device related features.

Include dependency graph for device.h:

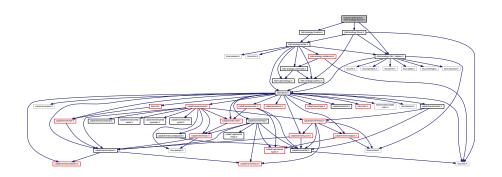

This graph shows which files directly or indirectly include this file:

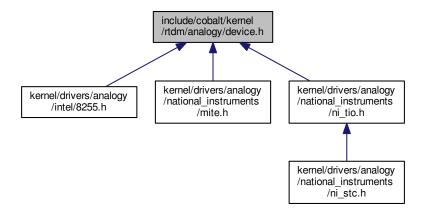

### 8.4.1 Detailed Description

Analogy for Linux, device related features. Copyright (C) 1997-2000 David A. Schleef ds@schleef.org Copyright (C) 2008 Alexis Berlemont alexis.berlemont@free.fr

Xenomai is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


Xenomai is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with Xenomai; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.


# 8.5 include/cobalt/kernel/rtdm/analogy/driver.h File Reference

Analogy for Linux, driver facilities.

Include dependency graph for driver.h:

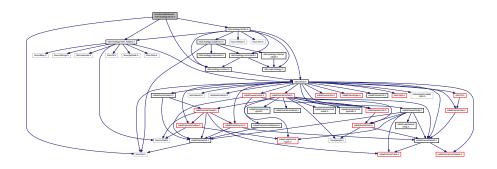

This graph shows which files directly or indirectly include this file:

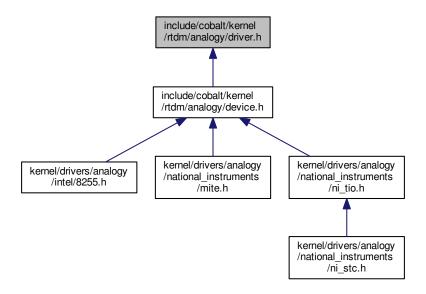

## **Data Structures**

• struct a4l\_driver Structure containing driver declaration data.

## 8.5.1 Detailed Description

Analogy for Linux, driver facilities. Copyright (C) 1997-2000 David A. Schleef ds@schleef.org Copyright (C) 2008 Alexis Berlemont alexis.berlemont@free.fr

Xenomai is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


Xenomai is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with Xenomai; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.


## 8.6 include/cobalt/kernel/rtdm/driver.h File Reference

Real-Time Driver Model for Xenomai, driver API header.

Include dependency graph for driver.h:

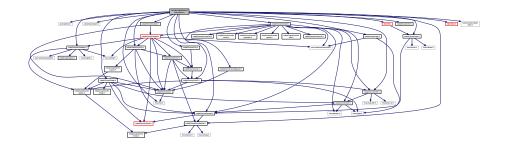

This graph shows which files directly or indirectly include this file:

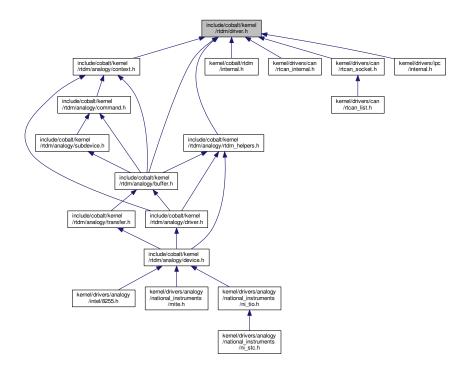

## **Data Structures**

• struct rtdm\_dev\_context

Device context.

struct rtdm\_device

RTDM device.

#### Macros

#define cobalt atomic enter(context)

Enter atomic section (dual kernel only)

• #define cobalt\_atomic\_leave(context)

Leave atomic section (dual kernel only)

#define RTDM EXECUTE ATOMICALLY(code block)

Execute code block atomically (DEPRECATED)

• #define RTDM\_LOCK\_UNLOCKED(\_\_name) IPIPE\_SPIN\_LOCK\_UNLOCKED

Static lock initialisation.

#define rtdm\_lock\_irqsave(context) splhigh(context)

Disable preemption locally.

#define rtdm\_lock\_irqrestore(context) splexit(context)

Restore preemption state.

• #define rtdm\_irq\_get\_arg(irq\_handle, type) ((type \*)irq\_handle->cookie)

Retrieve IRQ handler argument.

#### **Device Flags**

Static flags describing a RTDM device

#define RTDM EXCLUSIVE 0x0001

If set, only a single instance of the device can be requested by an application.

#define RTDM\_NAMED\_DEVICE 0x0010

If set, the device is addressed via a clear-text name.

#define RTDM PROTOCOL DEVICE 0x0020

If set, the device is addressed via a combination of protocol ID and socket type.

• #define RTDM\_DEVICE\_TYPE\_MASK 0x00F0

Mask selecting the device type.

#### **Driver Versioning**

Current revisions of RTDM structures, encoding of driver versions. See API Versioning for the interface revision.

#define RTDM\_DEVICE\_STRUCT\_VER 7

Version of struct rtdm device.

#define RTDM CONTEXT STRUCT VER 4

Version of struct rtdm dev context.

#define RTDM\_SECURE\_DEVICE 0x80000000

Flag indicating a secure variant of RTDM (not supported here)

#define RTDM\_DRIVER\_VER(major, minor, patch) (((major & 0xFF) << 16) | ((minor & 0xFF) << 8) | (patch & 0xFF))</li>

Version code constructor for driver revisions.

#define RTDM\_DRIVER\_MAJOR\_VER(ver) (((ver) >> 16) & 0xFF)

Get major version number from driver revision code.

• #define RTDM DRIVER MINOR VER(ver) (((ver) >> 8) & 0xFF)

Get minor version number from driver revision code.

#define RTDM\_DRIVER\_PATCH\_VER(ver) ((ver) & 0xFF)

Get patch version number from driver revision code.

#### RTDM IRQTYPE xxx

Interrupt registrations flags

- #define RTDM\_IRQTYPE\_SHARED XN\_ISR\_SHARED
  - Enable IRQ-sharing with other real-time drivers.
- #define RTDM IRQTYPE EDGE XN ISR EDGE

Mark IRQ as edge-triggered, relevant for correct handling of shared edge-triggered IRQs.

## RTDM\_IRQ\_xxx

Return flags of interrupt handlers

- #define RTDM IRQ NONE XN ISR NONE
  - Unhandled interrupt.
- #define RTDM\_IRQ\_HANDLED XN\_ISR\_HANDLED

Denote handled interrupt.

## **Task Priority Range**

Maximum and minimum task priorities

- #define RTDM\_TASK\_LOWEST\_PRIORITY 0
- #define RTDM TASK HIGHEST PRIORITY 99

## **Task Priority Modification**

Raise or lower task priorities by one level

- #define RTDM TASK RAISE PRIORITY (+1)
- #define RTDM TASK LOWER PRIORITY (-1)

## **Typedefs**

- typedef ipipe\_spinlock\_t rtdm\_lock\_t
  - Lock variable.
- typedef unsigned long rtdm\_lockctx\_t

Variable to save the context while holding a lock.

- typedef int(\* rtdm\_irq\_handler\_t )(rtdm\_irq\_t \*irq\_handle)
  - Interrupt handler.
- typedef void(\* rtdm\_nrtsig\_handler\_t )(rtdm\_nrtsig\_t nrt\_sig, void \*arg)

Non-real-time signal handler.

- typedef void(\* rtdm\_timer\_handler\_t )(rtdm\_timer\_t \*timer)
  - Timer handler.
- typedef void(\* rtdm\_task\_proc\_t)(void \*arg)

Real-time task procedure.

## **Operation Handler Prototypes**

- typedef int(\* rtdm\_open\_handler\_t )(struct rtdm\_fd \*fd, int oflag)

  Named device open handler.
- typedef int(\* rtdm\_socket\_handler\_t )(struct rtdm\_fd \*fd, int protocol)

Socket creation handler for protocol devices.

### **Enumerations**

#### RTDM SELECTTYPE xxx

Event types select can bind to

 enum rtdm\_selecttype { RTDM\_SELECTTYPE\_READ = XNSELECT\_READ, RTDM\_SELECT-TYPE\_WRITE = XNSELECT\_WRITE, RTDM\_SELECTTYPE\_EXCEPT = XNSELECT\_EXCE-PT }

### RTDM\_TIMERMODE\_xxx

Timer operation modes

 enum rtdm\_timer\_mode { RTDM\_TIMERMODE\_RELATIVE = XN\_RELATIVE, RTDM\_TIME-RMODE\_ABSOLUTE = XN\_ABSOLUTE, RTDM\_TIMERMODE\_REALTIME = XN\_REALTIME }

### **Functions**

• static void \* rtdm\_fd\_to\_private (struct rtdm\_fd \*fd)

Locate the driver private area associated to a device context structure.

static struct rtdm\_fd \* rtdm\_private\_to\_fd (void \*dev\_private)

Locate a device file descriptor structure from its driver private area.

• static bool rtdm\_fd\_is\_user (struct rtdm\_fd \*fd)

Tell whether the passed file descriptor belongs to an application.

static struct rtdm device \* rtdm fd device (struct rtdm fd \*fd)

Locate a device structure from a file descriptor.

int rtdm\_dev\_register (struct rtdm\_device \*device)

Register a RTDM device.

• int rtdm\_dev\_unregister (struct rtdm\_device \*device, unsigned int poll\_delay)

Unregisters a RTDM device.

• void rtdm toseg init (rtdm toseg t \*timeout seg, nanosecs rel t timeout)

Initialise a timeout sequence.

static void rtdm\_lock\_init (rtdm\_lock\_t \*lock)

Dynamic lock initialisation.

static void rtdm\_lock\_get (rtdm\_lock\_t \*lock)

Acquire lock from non-preemptible contexts.

static void rtdm\_lock\_put (rtdm\_lock\_t \*lock)

Release lock without preemption restoration.

static void rtdm\_lock\_put\_irqrestore (rtdm\_lock\_t \*lock, rtdm\_lockctx\_t context)

Release lock and restore preemption state.

• int rtdm\_irq\_request (rtdm\_irq\_t \*irq\_handle, unsigned int irq\_no, rtdm\_irq\_handler\_t handler, unsigned long flags, const char \*device name, void \*arg)

Register an interrupt handler.

void rtdm\_timer\_destroy (rtdm\_timer\_t \*timer)

Destroy a timer.

• int rtdm\_timer\_start (rtdm\_timer\_t \*timer, nanosecs\_abs\_t expiry, nanosecs\_rel\_t interval, enum rtdm timer mode mode)

Start a timer.

void rtdm\_timer\_stop (rtdm\_timer\_t \*timer)

Stop a timer.

 int rtdm\_task\_init (rtdm\_task\_t \*task, const char \*name, rtdm\_task\_proc\_t task\_proc, void \*arg, int priority, nanosecs\_rel\_t period) Initialise and start a real-time task.

void rtdm\_task\_busy\_sleep (nanosecs\_rel\_t delay)

Busy-wait a specified amount of time.

void rtdm\_event\_init (rtdm\_event\_t \*event, unsigned long pending)

Initialise an event.

• int rtdm event wait (rtdm event t \*event)

Wait on event occurrence.

int rtdm\_event\_timedwait (rtdm\_event\_t \*event, nanosecs\_rel\_t timeout, rtdm\_toseq\_t \*timeout\_seq)

Wait on event occurrence with timeout.

void rtdm\_event\_signal (rtdm\_event\_t \*event)

Signal an event occurrence.

void rtdm\_event\_clear (rtdm\_event\_t \*event)

Clear event state.

void rtdm\_event\_pulse (rtdm\_event\_t \*event)

Signal an event occurrence to currently listening waiters.

void rtdm\_event\_destroy (rtdm\_event\_t \*event)

Destroy an event.

• void rtdm\_sem\_init (rtdm\_sem\_t \*sem, unsigned long value)

Initialise a semaphore.

int rtdm\_sem\_down (rtdm\_sem\_t \*sem)

Decrement a semaphore.

• int rtdm\_sem\_timeddown (rtdm\_sem\_t \*sem, nanosecs\_rel\_t timeout, rtdm\_toseq\_t \*timeout\_seq)

Decrement a semaphore with timeout.

void rtdm sem up (rtdm sem t \*sem)

Increment a semaphore.

• void rtdm\_sem\_destroy (rtdm\_sem\_t \*sem)

Destroy a semaphore.

• void rtdm\_mutex\_init (rtdm\_mutex\_t \*mutex)

Initialise a mutex.

int rtdm\_mutex\_lock (rtdm\_mutex\_t \*mutex)

Request a mutex.

int rtdm\_mutex\_timedlock (rtdm\_mutex\_t \*mutex, nanosecs\_rel\_t timeout, rtdm\_toseq\_t \*timeout\_seq)

Request a mutex with timeout.

void rtdm\_mutex\_unlock (rtdm\_mutex\_t \*mutex)

Release a mutex.

void rtdm\_mutex\_destroy (rtdm\_mutex\_t \*mutex)

Destroy a mutex.

• int rtdm\_ratelimit (struct rtdm\_ratelimit\_state \*rs, const char \*func)

Enforces a rate limit.

### 8.6.1 Detailed Description

Real-Time Driver Model for Xenomai, driver API header.

#### Note

Copyright (C) 2005-2007 Jan Kiszka jan.kiszka@web.de

Copyright (C) 2005 Joerg Langenberg joerg.langenberg@gmx.net

Copyright (C) 2008 Gilles Chanteperdrix gilles.chanteperdrix@xenomai.org

Xenomai is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

Xenomai is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with Xenomai; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

## 8.6.2 Typedef Documentation

8.6.2.1 typedef int(\* rtdm\_open\_handler\_t)(struct rtdm\_fd \*fd, int oflag)

#### Named device open handler.

#### **Parameters**

| in | fd    | File descriptor structure associated with opened device instance |
|----|-------|--|
| in | oflag | Open flags as passed by the user                                 |

#### Returns

0 on success. On failure return either -ENOSYS, to request that this handler be called again from the opposite realtime/non-realtime context, or another negative error code.

#### See Also

open() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399

8.6.2.2 typedef int(\* rtdm\_socket\_handler\_t)(struct rtdm\_fd \*fd, int protocol)

Socket creation handler for protocol devices.

#### **Parameters**

| in | fd       | File descriptor structure associated with opened device instance |
|----|----------|--|
| in | protocol | Protocol number as passed by the user                            |

#### Returns

0 on success. On failure return either -ENOSYS, to request that this handler be called again from the opposite realtime/non-realtime context, or another negative error code.

#### See Also

socket() in IEEE Std 1003.1, http://www.opengroup.org/onlinepubs/009695399

- 8.6.3 Function Documentation
- 8.6.3.1 static struct **rtdm\_device**\* rtdm\_fd\_device ( struct rtdm\_fd \* fd ) [static]

Locate a device structure from a file descriptor.

#### **Parameters**

| in | fd | File descriptor |
|----|----|-----------------|
|----|----|-----------------|

#### Returns

The address of the device structure to which this file descriptor is attached.

References rtdm\_dev\_context::device.

8.6.3.2 static bool rtdm\_fd\_is\_user ( struct rtdm\_fd \* fd ) [inline], [static]

Tell whether the passed file descriptor belongs to an application.

#### **Parameters**

| in | fd | File descriptor |
|----|----|-----------------|

#### Returns

true if passed file descriptor belongs to an application, false otherwise.

8.6.3.3 static void\* rtdm\_fd\_to\_private ( struct rtdm\_fd \* fd ) [inline], [static]

Locate the driver private area associated to a device context structure.

### **Parameters**

| in | fd | File descriptor structure associated with opened device instance |
|----|----|--|
|----|----|--|

## Returns

The address of the private driver area associated to *file* descriptor.

References rtdm\_dev\_context::dev\_private.

8.6.3.4 static struct rtdm\_fd\* rtdm\_private\_to\_fd ( void \* dev\_private ) [static]

Locate a device file descriptor structure from its driver private area.

## Parameters

| in | dev_private | Address of a private context area |
|----|-------------|-----------------------------------|


#### Returns

The address of the file descriptor structure defining dev\_private.

# 8.7 include/cobalt/kernel/rtdm/analogy/instruction.h File Reference

Analogy for Linux, instruction related features.

This graph shows which files directly or indirectly include this file:

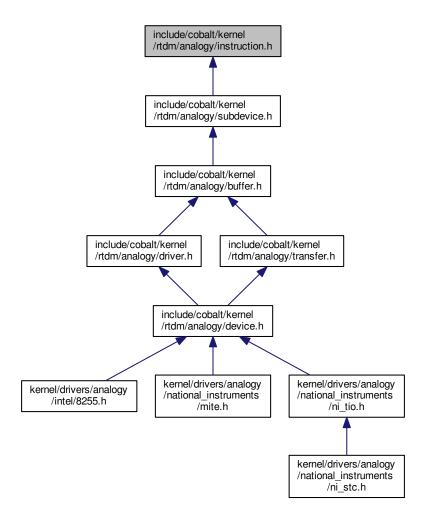

## 8.7.1 Detailed Description

Analogy for Linux, instruction related features.

Note

```
Copyright (C) 1997-2000 David A. Schleef ds@schleef.org
Copyright (C) 2008 Alexis Berlemont alexis.berlemont@free.fr
```


Xenomai is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

Xenomai is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.


You should have received a copy of the GNU General Public License along with Xenomai; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

# 8.8 include/cobalt/kernel/rtdm/analogy/rtdm\_helpers.h File Reference

Analogy for Linux, Operation system facilities. Include dependency graph for rtdm\_helpers.h:

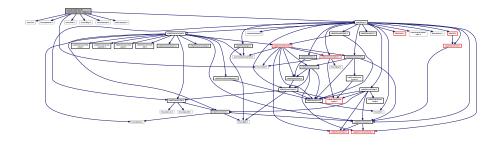

This graph shows which files directly or indirectly include this file:

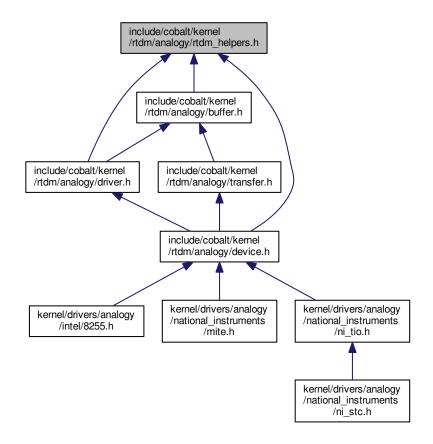

## 8.8.1 Detailed Description

Analogy for Linux, Operation system facilities. Copyright (C) 1997-2000 David A. Schleef ds@schleef.org Copyright (C) 2008 Alexis Berlemont alexis.berlemont@free.fr

Xenomai is free software; you can redistribute it and/or modify it under the terms of the GNU General

Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


Xenomai is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with Xenomai; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.


# 8.9 include/cobalt/kernel/rtdm/analogy/subdevice.h File Reference

Analogy for Linux, subdevice related features.

Include dependency graph for subdevice.h:

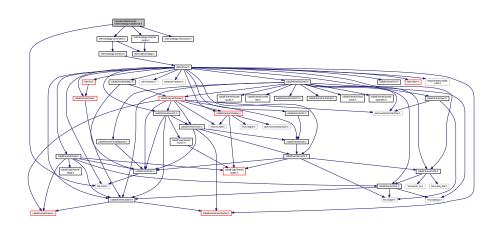

This graph shows which files directly or indirectly include this file:

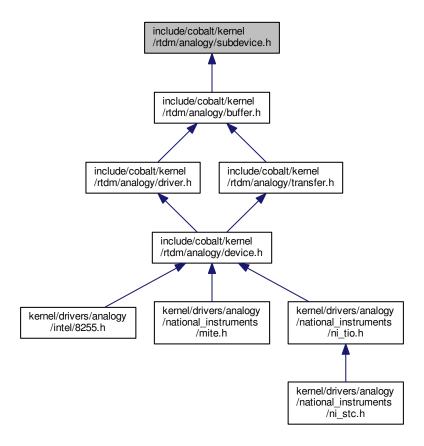

## **Data Structures**

struct a4l\_subdevice

Structure describing the subdevice.

### 8.9.1 Detailed Description

Analogy for Linux, subdevice related features. Copyright (C) 1997-2000 David A. Schleef ds@schleef.-org Copyright (C) 2008 Alexis Berlemont alexis.berlemont@free.fr

Xenomai is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


Xenomai is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with Xenomai; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.


## 8.10 include/cobalt/kernel/rtdm/analogy/transfer.h File Reference

Analogy for Linux, transfer related features.

Include dependency graph for transfer.h:

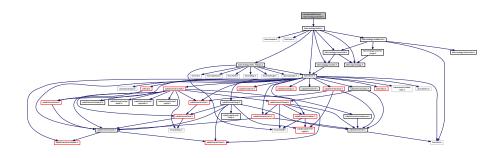

This graph shows which files directly or indirectly include this file:

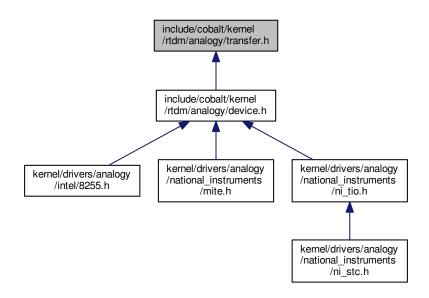

## 8.10.1 Detailed Description

Analogy for Linux, transfer related features. Copyright (C) 1997-2000 David A. Schleef ds@schleef.org Copyright (C) 2008 Alexis Berlemont alexis.berlemont@free.fr


Xenomai is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

Xenomai is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with Xenomai; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

## 8.11 include/cobalt/kernel/rtdm/can.h File Reference

Include dependency graph for can.h:

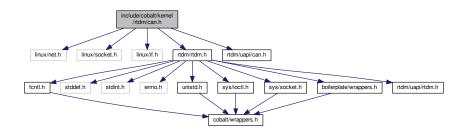

## 8.11.1 Detailed Description

Note

Copyright (C) 2006 Wolfgang Grandegger wg@grandegger.com Copyright (C) 2005, 2006 Sebastian Smolorz Sebastian.Smolorz@stud.uni-hannover.de

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU

General Public License for more details.


You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

## 8.12 include/rtdm/can.h File Reference

Include dependency graph for can.h:

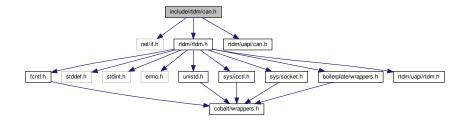

This graph shows which files directly or indirectly include this file:

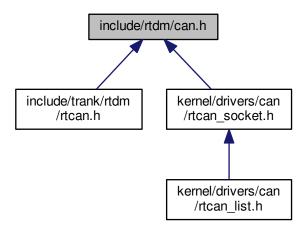

## 8.12.1 Detailed Description

Note

Copyright (C) 2006 Wolfgang Grandegger wg@grandegger.com
Copyright (C) 2005, 2006 Sebastian Smolorz Sebastian.Smolorz@stud.uni-hannover.de

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU


General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

# 8.13 include/rtdm/uapi/can.h File Reference

Real-Time Driver Model for RT-Socket-CAN, CAN device profile header.

This graph shows which files directly or indirectly include this file:

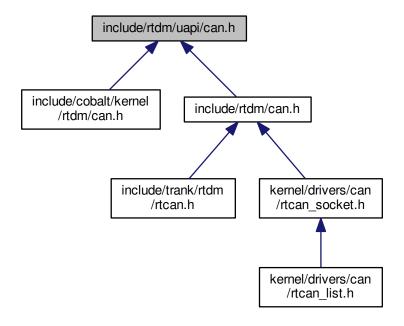

## **Data Structures**

struct can\_bittime\_std

Standard bit-time parameters according to Bosch.

struct can\_bittime\_btr

Hardware-specific BTR bit-times.

• struct can bittime

Custom CAN bit-time definition.

struct can\_filter

Filter for reception of CAN messages.

struct sockaddr\_can

Socket address structure for the CAN address family.

• struct can\_frame

Raw CAN frame.

## Macros

• #define AF\_CAN 29

CAN address family.

• #define PF\_CAN AF\_CAN

CAN protocol family.

• #define SOL\_CAN\_RAW 103

CAN socket levels.

#### **CAN ID masks**

Bit masks for masking CAN IDs

#define CAN\_EFF\_MASK 0x1FFFFFFF

Bit mask for extended CAN IDs.

• #define CAN SFF MASK 0x000007FF

Bit mask for standard CAN IDs.

#### **CAN ID flags**

Flags within a CAN ID indicating special CAN frame attributes

#define CAN EFF FLAG 0x80000000

Extended frame.

#define CAN RTR FLAG 0x40000000

Remote transmission frame.

#define CAN\_ERR\_FLAG 0x20000000

Error frame (see Errors), not valid in struct can\_filter.

#define CAN INV FILTER CAN ERR FLAG

Invert CAN filter definition, only valid in struct can\_filter.

#### **Particular CAN protocols**

Possible protocols for the PF CAN protocol family Currently only the RAW protocol is supported.

#define CAN\_RAW 1

Raw protocol of PF\_CAN, applicable to socket type SOCK\_RAW.

#### **CAN** controller modes

Special CAN controllers modes, which can be or'ed together.

Note

These modes are hardware-dependent. Please consult the hardware manual of the CAN controller for more detailed information.

- #define CAN\_CTRLMODE\_LISTENONLY 0x1#define CAN\_CTRLMODE\_LOOPBACK 0x2
- #define CAN CTRLMODE 3 SAMPLES 0x4

#### **Timestamp switches**

Arguments to pass to RTCAN RTIOC TAKE TIMESTAMP

#define RTCAN\_TAKE\_NO\_TIMESTAMPS 0

Switch off taking timestamps.

#define RTCAN TAKE TIMESTAMPS 1

Do take timestamps.

### **RAW** socket options

Setting and getting CAN RAW socket options.

• #define CAN RAW FILTER 0x1

CAN filter definition.

• #define CAN\_RAW\_ERR\_FILTER 0x2

CAN error mask.

#define CAN\_RAW\_LOOPBACK 0x3

CAN TX loopback.

• #define CAN\_RAW\_RECV\_OWN\_MSGS 0x4

CAN receive own messages.

#### **IOCTLs**

CAN device IOCTLs

• #define SIOCGIFINDEX defined\_by\_kernel\_header\_file Get CAN interface index by name.

#define SIOCSCANBAUDRATE \_IOW(RTIOC\_TYPE\_CAN, 0x01, struct ifreq)
 Set baud rate.

#define SIOCGCANBAUDRATE \_IOWR(RTIOC\_TYPE\_CAN, 0x02, struct ifreq)
 Get baud rate.

#define SIOCSCANCUSTOMBITTIME \_IOW(RTIOC\_TYPE\_CAN, 0x03, struct ifreq)
 Set custom bit time parameter.

• #define SIOCGCANCUSTOMBITTIME \_IOWR(RTIOC\_TYPE\_CAN, 0x04, struct ifreq) Get custom bit-time parameters.

#define SIOCSCANMODE \_IOW(RTIOC\_TYPE\_CAN, 0x05, struct ifreq)
 Set operation mode of CAN controller.

#define SIOCGCANSTATE \_IOWR(RTIOC\_TYPE\_CAN, 0x06, struct ifreq)
 Get current state of CAN controller.

#define SIOCSCANCTRLMODE \_IOW(RTIOC\_TYPE\_CAN, 0x07, struct ifreq)
 Set special controller modes.

#define SIOCGCANCTRLMODE \_IOWR(RTIOC\_TYPE\_CAN, 0x08, struct ifreq)
 Get special controller modes.

• #define RTCAN\_RTIOC\_TAKE\_TIMESTAMP\_IOW(RTIOC\_TYPE\_CAN, 0x09, int)

Enable or disable storing a high precision timestamp upon reception of a CAN frame.

• #define RTCAN\_RTIOC\_RCV\_TIMEOUT\_IOW(RTIOC\_TYPE\_CAN, 0x0A, nanosecs\_rel\_t) Specify a reception timeout for a socket.

#define RTCAN\_RTIOC\_SND\_TIMEOUT\_IOW(RTIOC\_TYPE\_CAN, 0x0B, nanosecs\_rel\_t)
 Specify a transmission timeout for a socket.

## **Error mask**

Error class (mask) in can\_id field of struct can\_frame to be used with CAN\_RAW\_ERR\_FILTER.

**Note:** Error reporting is hardware dependent and most CAN controllers report less detailed error conditions than the SJA1000.

**Note:** In case of a bus-off error condition (CAN\_ERR\_BUSOFF), the CAN controller is **not** restarted automatically. It is the application's responsibility to react appropriately, e.g. calling CAN\_MODE\_S-TART.

**Note:** Bus error interrupts (CAN\_ERR\_BUSERROR) are enabled when an application is calling a Recv function on a socket listening on bus errors (using CAN\_RAW\_ERR\_FILTER). After one bus error has occured, the interrupt will be disabled to allow the application time for error processing and to efficiently avoid bus error interrupt flooding.

#define CAN ERR TX TIMEOUT 0x00000001U

TX timeout (netdevice driver)

#define CAN\_ERR\_LOSTARB 0x00000002U

Lost arbitration (see data[0])

#define CAN\_ERR\_CRTL 0x00000004U

Controller problems (see data[1])

#define CAN\_ERR\_PROT 0x00000008U

Protocol violations (see data[2], data[3])

#define CAN ERR TRX 0x00000010U

Transceiver status (see data[4])

• #define CAN ERR ACK 0x00000020U

Received no ACK on transmission.

#define CAN ERR BUSOFF 0x00000040U

Bus off.

- #define CAN\_ERR\_BUSERROR 0x00000080U
   Bus error (may flood!)
- #define CAN\_ERR\_RESTARTED 0x00000100U
   Controller restarted.
- #define CAN\_ERR\_MASK 0x1FFFFFFU
   Omit EFF, RTR, ERR flags.

#### **Arbitration lost error**

Error in the data[0] field of struct can\_frame.

 #define CAN\_ERR\_LOSTARB\_UNSPEC 0x00 unspecified

#### **Controller problems**

Error in the data[1] field of struct can\_frame.

- #define CAN\_ERR\_CRTL\_UNSPEC 0x00 unspecified
- #define CAN\_ERR\_CRTL\_RX\_OVERFLOW 0x01 RX buffer overflow.
- #define CAN\_ERR\_CRTL\_TX\_OVERFLOW 0x02
   TX buffer overflow.
- #define CAN\_ERR\_CRTL\_RX\_WARNING 0x04 reached warning level for RX errors
- #define CAN\_ERR\_CRTL\_TX\_WARNING 0x08
   reached warning level for TX errors
- #define CAN\_ERR\_CRTL\_RX\_PASSIVE 0x10
   reached passive level for RX errors
- #define CAN\_ERR\_CRTL\_TX\_PASSIVE 0x20
   reached passive level for TX errors

## Protocol error type

Error in the data[2] field of struct can frame.

- #define CAN\_ERR\_PROT\_UNSPEC 0x00 unspecified
- #define CAN\_ERR\_PROT\_BIT 0x01 single bit error
- #define CAN\_ERR\_PROT\_FORM 0x02 frame format error
- #define CAN\_ERR\_PROT\_STUFF 0x04
- bit stuffing error#define CAN\_ERR\_PROT\_BIT0 0x08
- unable to send dominant bit

  #define CAN\_ERR\_PROT\_BIT1 0x10

unable to send recessive bit

- #define CAN\_ERR\_PROT\_OVERLOAD 0x20 bus overload
- #define CAN\_ERR\_PROT\_ACTIVE 0x40
   active error announcement
- #define CAN\_ERR\_PROT\_TX 0x80 error occured on transmission

#### **Protocol error location**

Error in the data[4] field of struct can frame.

 #define CAN\_ERR\_PROT\_LOC\_UNSPEC 0x00 unspecified

- #define CAN\_ERR\_PROT\_LOC\_SOF 0x03 start of frame
- #define CAN\_ERR\_PROT\_LOC\_ID28\_21 0x02
   ID bits 28 21 (SFF: 10 3)
- #define CAN\_ERR\_PROT\_LOC\_ID20\_18 0x06
   ID bits 20 18 (SFF: 2 0 )
- #define CAN\_ERR\_PROT\_LOC\_SRTR 0x04 substitute RTR (SFF: RTR)
- #define CAN\_ERR\_PROT\_LOC\_IDE 0x05 identifier extension
- #define CAN\_ERR\_PROT\_LOC\_ID17\_13 0x07
   ID bits 17-13.
- #define CAN\_ERR\_PROT\_LOC\_ID12\_05 0x0F
   ID bits 12-5.
- #define CAN\_ERR\_PROT\_LOC\_ID04\_00 0x0E
   ID bits 4-0.
- #define CAN\_ERR\_PROT\_LOC\_RTR 0x0C RTR.
- #define CAN\_ERR\_PROT\_LOC\_RES1 0x0D reserved bit 1
- #define CAN\_ERR\_PROT\_LOC\_RES0 0x09
   reserved bit 0
- #define CAN\_ERR\_PROT\_LOC\_DLC 0x0B data length code
- #define CAN\_ERR\_PROT\_LOC\_DATA 0x0A data section
- #define CAN\_ERR\_PROT\_LOC\_CRC\_SEQ 0x08
   CRC sequence.
- #define CAN\_ERR\_PROT\_LOC\_CRC\_DEL 0x18
   CRC delimiter.
- #define CAN\_ERR\_PROT\_LOC\_ACK 0x19
   ACK slot.
- #define CAN\_ERR\_PROT\_LOC\_ACK\_DEL 0x1B ACK delimiter.
- #define CAN\_ERR\_PROT\_LOC\_EOF 0x1A
   end of frame
- #define CAN\_ERR\_PROT\_LOC\_INTERM 0x12 intermission
- #define CAN\_ERR\_TRX\_UNSPEC 0x00 0000 0000
- #define CAN\_ERR\_TRX\_CANH\_NO\_WIRE 0x04 0000 0100
- #define CAN\_ERR\_TRX\_CANH\_SHORT\_TO\_BAT 0x05 0000 0101
- #define CAN\_ERR\_TRX\_CANH\_SHORT\_TO\_VCC 0x06 0000 0110
- #define CAN\_ERR\_TRX\_CANH\_SHORT\_TO\_GND 0x07 0000 0111
- #define CAN\_ERR\_TRX\_CANL\_NO\_WIRE 0x40 0100 0000
- #define CAN\_ERR\_TRX\_CANL\_SHORT\_TO\_BAT 0x50 0101 0000
- #define CAN\_ERR\_TRX\_CANL\_SHORT\_TO\_VCC 0x60 0110 0000
- #define CAN\_ERR\_TRX\_CANL\_SHORT\_TO\_GND 0x70 0111 0000
- #define CAN\_ERR\_TRX\_CANL\_SHORT\_TO\_CANH 0x80 1000 0000

## **Typedefs**

```
typedef uint32_t can_id_t
```

Type of CAN id (see CAN\_xxx\_MASK and CAN\_xxx\_FLAG)

typedef can\_id\_t can\_err\_mask\_t

Type of CAN error mask.

typedef uint32\_t can\_baudrate\_t

Baudrate definition in bits per second.

typedef enum CAN\_BITTIME\_TYPE can\_bittime\_type\_t

See CAN\_BITTIME\_TYPE.

typedef enum CAN\_MODE can\_mode\_t

See CAN MODE.

typedef int can\_ctrlmode\_t

See CAN\_CTRLMODE.

typedef enum CAN\_STATE can\_state\_t

See CAN STATE.

typedef struct can\_filter can\_filter\_t

Filter for reception of CAN messages.

• typedef struct can\_frame can\_frame\_t

Raw CAN frame.

## **Enumerations**

• enum CAN\_BITTIME\_TYPE { CAN\_BITTIME\_STD, CAN\_BITTIME\_BTR } Supported CAN bit-time types.

## **CAN** operation modes

Modes into which CAN controllers can be set

enum CAN\_MODE { CAN\_MODE\_STOP = 0, CAN\_MODE\_START, CAN\_MODE\_SLEEP }

#### **CAN** controller states

States a CAN controller can be in.

```
    enum CAN_STATE {
        CAN_STATE_ERROR_ACTIVE = 0, CAN_STATE_ACTIVE = 0, CAN_STATE_ERROR_WARNING = 1, CAN_STATE_BUS_WARNING = 1,
        CAN_STATE_ERROR_PASSIVE = 2, CAN_STATE_BUS_PASSIVE = 2, CAN_STATE_BUS_OFF, CAN_STATE_SCANNING_BAUDRATE,
        CAN_STATE_STOPPED, CAN_STATE_SLEEPING }
```

### 8.13.1 Detailed Description

Real-Time Driver Model for RT-Socket-CAN, CAN device profile header.

Note

Copyright (C) 2006 Wolfgang Grandegger wg@grandegger.com

Copyright (C) 2005, 2006 Sebastian Smolorz Sebastian. Smolorz@stud.uni-hannover.de

This RTDM CAN device profile header is based on:

include/linux/can.h, include/linux/socket.h, net/can/pf\_can.h in linux-can.patch, a CAN socket framework for Linux

Copyright (C) 2004, 2005, Robert Schwebel, Benedikt Spranger, Marc Kleine-Budde, Pengutronix

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU

General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

## 8.14 include/cobalt/kernel/rtdm/cobalt.h File Reference

This file is part of the Xenomai project.

Include dependency graph for cobalt.h:



## 8.14.1 Detailed Description

This file is part of the Xenomai project.

Note

Copyright (C) 2013 Philippe Gerum rpm@xenomai.org

Xenomai is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

## 8.15 include/cobalt/kernel/rtdm/ipc.h File Reference

This file is part of the Xenomai project.

Include dependency graph for ipc.h:

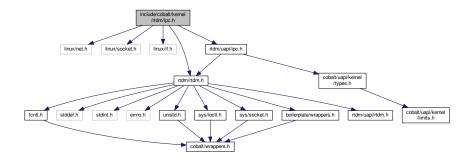

## 8.15.1 Detailed Description

This file is part of the Xenomai project.

Note

Copyright (C) 2009 Philippe Gerum rpm@xenomai.org

Xenomai is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.


# 8.16 include/rtdm/ipc.h File Reference

This file is part of the Xenomai project.

Include dependency graph for ipc.h:

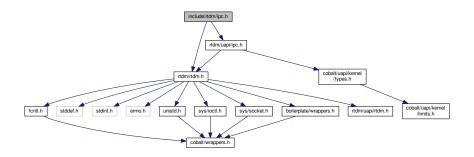

This graph shows which files directly or indirectly include this file:

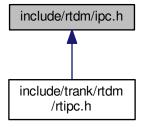

## 8.16.1 Detailed Description

This file is part of the Xenomai project.

Note

Copyright (C) 2009 Philippe Gerum rpm@xenomai.org

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA.


# 8.17 include/rtdm/uapi/ipc.h File Reference

This file is part of the Xenomai project.

Include dependency graph for ipc.h:

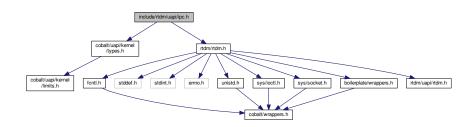

This graph shows which files directly or indirectly include this file:

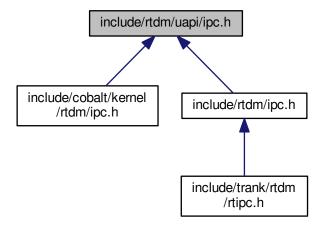

## **Data Structures**

struct rtipc\_port\_label

Port label information structure.

struct sockaddr\_ipc

Socket address structure for the RTIPC address family.

## Macros

### **XDDP** socket options

Setting and getting XDDP socket options.

- #define XDDP LABEL 1
  - XDDP label assignment.
- #define XDDP\_POOLSZ 2
  - XDDP local pool size configuration.
- #define XDDP\_BUFSZ 3
  - XDDP streaming buffer size configuration.
- #define XDDP\_MONITOR 4
  - XDDP monitoring callback.

#### **XDDP** events

Specific events occurring on XDDP channels, which can be monitored via the XDDP\_MONITOR socket option.

- #define XDDP EVTIN 1
  - Monitor writes to the non real-time endpoint.
- #define XDDP EVTOUT 2
  - Monitor reads from the non real-time endpoint.
- #define XDDP EVTDOWN 3
  - Monitor close from the non real-time endpoint.
- #define XDDP\_EVTNOBUF 4

Monitor memory shortage for non real-time datagrams.

## **IDDP** socket options

Setting and getting IDDP socket options.

#define IDDP\_LABEL 1
 IDDP label assignment.
 #define IDDP\_POOLSZ 2

IDDP local pool size configuration.

## **BUFP** socket options

Setting and getting BUFP socket options.

#define BUFP\_LABEL 1
 BUFP label assignment.
 #define BUFP BUFSZ 2

BUFP buffer size configuration.

## Socket level options

Setting and getting supported standard socket level options.

- #define SO\_SNDTIMEO defined\_by\_kernel\_header\_file
   IPCPROTO\_IDDP and IPCPROTO\_BUFP protocols support the standard SO\_SNDTIMEO socket option, from the SOL\_SOCKET level.
- #define SO\_RCVTIMEO defined\_by\_kernel\_header\_file

  All RTIPC protocols support the standard SO\_RCVTIMEO socket option, from the SOL\_SOCKET level.

## Typedefs

typedef int16\_t rtipc\_port\_t
 Port number type for the RTIPC address family.

#### Enumerations

## **RTIPC** protocol list

protocols for the PF\_RTIPC protocol family

enum { IPCPROTO\_IPC = 0, IPCPROTO\_XDDP = 1, IPCPROTO\_IDDP = 2, IPCPROTO\_BU-FP = 3 }

## **Functions**

#### Supported operations

Standard socket operations supported by the RTIPC protocols.

- int socket\_\_AF\_RTIPC (int domain=AF\_RTIPC, int type=SOCK\_DGRAM, int protocol)

  Create an endpoint for communication in the AF\_RTIPC domain.
- int close\_\_AF\_RTIPC (int sockfd)
  - Close a RTIPC socket descriptor.
- int bind\_\_AF\_RTIPC (int sockfd, const struct sockaddr\_ipc \*addr, socklen\_t addrlen)

  Bind a RTIPC socket to a port.
- int connect\_\_AF\_RTIPC (int sockfd, const struct sockaddr\_ipc \*addr, socklen\_t addrlen)

  Initiate a connection on a RTIPC socket.
- int setsockopt\_\_AF\_RTIPC (int sockfd, int level, int optname, const void \*optval, socklen\_t optlen)

Set options on RTIPC sockets.

- int getsockopt\_\_AF\_RTIPC (int sockfd, int level, int optname, void \*optval, socklen\_t \*optlen)

  Get options on RTIPC sockets.
- ssize\_t sendmsg\_\_AF\_RTIPC (int sockfd, const struct msghdr \*msg, int flags)
   Send a message on a RTIPC socket.
- ssize\_t recvmsg\_\_AF\_RTIPC (int sockfd, struct msghdr \*msg, int flags)
   Receive a message from a RTIPC socket.
- int getsockname\_\_AF\_RTIPC (int sockfd, struct sockaddr\_ipc \*addr, socklen\_t \*addrlen)
   Get socket name.
- int getpeername\_\_AF\_RTIPC (int sockfd, struct sockaddr\_ipc \*addr, socklen\_t \*addrlen)

  Get socket peer.

## 8.17.1 Detailed Description

This file is part of the Xenomai project.

Note

Copyright (C) 2009 Philippe Gerum rpm@xenomai.org


This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA.

## 8.18 include/cobalt/kernel/rtdm/rtdm.h File Reference

Include dependency graph for rtdm.h:

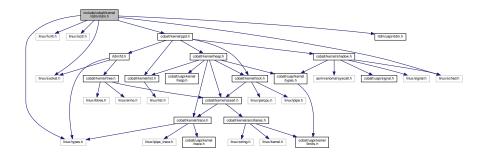

## 8.18.1 Detailed Description

Note

Copyright (C) 2005, 2006 Jan Kiszka jan.kiszka@web.de
Copyright (C) 2005 Joerg Langenberg joerg.langenberg@gmx.net


Xenomai is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

Xenomai is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.


You should have received a copy of the GNU General Public License along with Xenomai; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

## 8.19 include/rtdm/rtdm.h File Reference

Include dependency graph for rtdm.h:

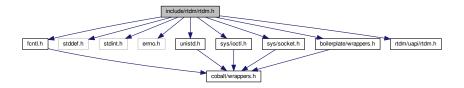

This graph shows which files directly or indirectly include this file:

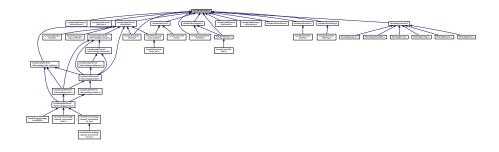

## 8.19.1 Detailed Description

Note

Copyright (C) 2005, 2006 Jan Kiszka jan.kiszka@web.de
Copyright (C) 2005 Joerg Langenberg joerg.langenberg@gmx.net

Xenomai is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


Xenomai is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with Xenomai; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

# 8.20 include/rtdm/uapi/rtdm.h File Reference

Real-Time Driver Model for Xenomai, user API header.

This graph shows which files directly or indirectly include this file:

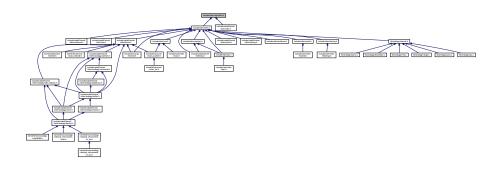

### **Data Structures**

struct rtdm\_device\_info
 Device information.

# Macros

### **API Versioning**

#define RTDM API VER 9

Common user and driver API version.

#define RTDM\_API\_MIN\_COMPAT\_VER 9

Minimum API revision compatible with the current release.

# RTDM\_TIMEOUT\_xxx

Special timeout values

- #define RTDM\_TIMEOUT\_INFINITE 0

  Block forever.
- #define RTDM\_TIMEOUT\_NONE (-1)
   Any negative timeout means non-blocking.

#### RTDM CLASS xxx

Device classes

- #define RTDM\_CLASS\_PARPORT 1
- #define RTDM\_CLASS\_SERIAL 2
- #define RTDM\_CLASS\_CAN 3
- #define RTDM\_CLASS\_NETWORK 4
- #define RTDM\_CLASS\_RTMAC 5
- #define RTDM\_CLASS\_TESTING 6
- #define RTDM CLASS RTIPC 7
- #define RTDM\_CLASS\_COBALT 8
- #define RTDM\_CLASS\_EXPERIMENTAL 224

• #define RTDM\_CLASS\_MAX 255

#### **Device Naming**

Maximum length of device names (excluding the final null character)

• #define RTDM\_MAX\_DEVNAME\_LEN 31

## RTDM\_PURGE\_xxx\_BUFFER

Flags selecting buffers to be purged

- #define RTDM PURGE RX BUFFER 0x0001
- #define RTDM\_PURGE\_TX\_BUFFER 0x0002

#### **Common IOCTLs**

The following IOCTLs are common to all device rtdm\_profiles.

• #define RTIOC\_DEVICE\_INFO \_IOR(RTIOC\_TYPE\_COMMON, 0x00, struct rtdm\_device\_info)

Retrieve information about a device or socket.

#define RTIOC\_PURGE\_IOW(RTIOC\_TYPE\_COMMON, 0x10, int)

Purge internal device or socket buffers.

# **Typedefs**

typedef uint64 t nanosecs abs t

RTDM type for representing absolute dates.

typedef int64\_t nanosecs\_rel\_t

RTDM type for representing relative intervals.

typedef struct rtdm device info rtdm device info t

Device information.

# 8.20.1 Detailed Description

Real-Time Driver Model for Xenomai, user API header.

Note


```
Copyright (C) 2005, 2006 Jan Kiszka jan.kiszka@web.de
Copyright (C) 2005 Joerg Langenberg joerg.langenberg@gmx.net
```

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

# 8.21 include/cobalt/kernel/rtdm/serial.h File Reference

Include dependency graph for serial.h:

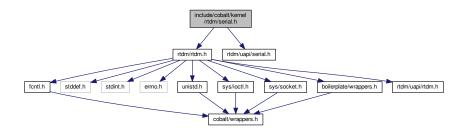

# 8.21.1 Detailed Description

Note

Copyright (C) 2005-2007 Jan Kiszka jan.kiszka@web.de

Xenomai is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


Xenomai is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with Xenomai; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.


# 8.22 include/rtdm/serial.h File Reference

Real-Time Driver Model for Xenomai, serial device profile header.

Include dependency graph for serial.h:

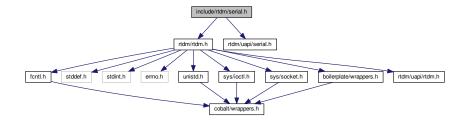

This graph shows which files directly or indirectly include this file:

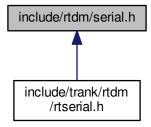

# 8.22.1 Detailed Description

Real-Time Driver Model for Xenomai, serial device profile header.

Note

Copyright (C) 2005-2007 Jan Kiszka jan.kiszka@web.de

Xenomai is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


Xenomai is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with Xenomai; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

# 8.23 include/rtdm/uapi/serial.h File Reference

Real-Time Driver Model for Xenomai, serial device profile header.

This graph shows which files directly or indirectly include this file:

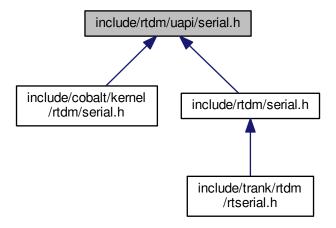

# **Data Structures**

- struct rtser\_config
  - Serial device configuration.
- struct rtser\_status
  - Serial device status.
- struct rtser\_event

Additional information about serial device events.

#### Macros

• #define RTSER\_RTIOC\_BREAK\_CTL\_IOR(RTIOC\_TYPE\_SERIAL, 0x06, int)

Set or clear break on UART output line.

#### RTSER DEF BAUD

Default baud rate

• #define RTSER\_DEF\_BAUD 9600

### RTSER\_xxx\_PARITY

Number of parity bits

- #define RTSER NO PARITY 0x00
- #define RTSER ODD PARITY 0x01
- #define RTSER\_EVEN\_PARITY 0x03
- #define RTSER\_DEF\_PARITY RTSER\_NO\_PARITY

### RTSER XXX BITS

Number of data bits

#define RTSER\_5\_BITS 0x00

- #define RTSER 6 BITS 0x01
- #define RTSER\_7\_BITS 0x02
- #define RTSER\_8\_BITS 0x03
- #define RTSER\_DEF\_BITS RTSER\_8\_BITS

#### RTSER xxx STOPB

Number of stop bits

- #define RTSER 1 STOPB 0x00
  - valid only in combination with 5 data bits
- #define RTSER\_1\_5\_STOPB 0x01
  - valid only in combination with 5 data bits
- #define RTSER\_2\_STOPB 0x01
  - valid only in combination with 5 data bits
- #define RTSER DEF STOPB RTSER 1 STOPB

valid only in combination with 5 data bits

#### RTSER xxx HAND

Handshake mechanisms

- #define RTSER NO\_HAND 0x00
- #define RTSER RTSCTS HAND 0x01
- #define RTSER\_DEF\_HAND RTSER\_NO\_HAND

#### RTSER RS485 xxx

RS485 mode with automatic RTS handling

- #define RTSER RS485 DISABLE 0x00
- #define RTSER\_RS485\_ENABLE 0x01
- #define RTSER\_DEF\_RS485 RTSER\_RS485\_DISABLE

#### RTSER FIFO xxx

Reception FIFO interrupt threshold

- #define RTSER\_FIFO\_DEPTH\_1 0x00
- #define RTSER FIFO DEPTH 4 0x40
- #define RTSER\_FIFO\_DEPTH\_8 0x80
- #define RTSER\_FIFO\_DEPTH\_14 0xC0
- #define RTSER\_DEF\_FIFO\_DEPTH RTSER\_FIFO\_DEPTH\_1

### RTSER\_TIMEOUT\_xxx

Special timeout values, see also RTDM\_TIMEOUT\_xxx

- #define RTSER TIMEOUT INFINITE RTDM TIMEOUT INFINITE
- #define RTSER TIMEOUT NONE RTDM TIMEOUT NONE
- #define RTSER\_DEF\_TIMEOUT RTDM\_TIMEOUT\_INFINITE

#### RTSER XXX TIMESTAMP HISTORY

Timestamp history control

- #define RTSER\_RX\_TIMESTAMP\_HISTORY 0x01
- #define RTSER\_DEF\_TIMESTAMP\_HISTORY 0x00

#### RTSER EVENT xxx

Events bits

- #define RTSER EVENT RXPEND 0x01
- #define RTSER\_EVENT\_ERRPEND 0x02

- #define RTSER EVENT MODEMHI 0x04
- #define RTSER EVENT MODEMLO 0x08
- #define RTSER EVENT TXEMPTY 0x10
- #define RTSER DEF EVENT MASK 0x00

### RTSER\_SET\_xxx

Configuration mask bits

- #define RTSER SET BAUD 0x0001
- #define RTSER SET PARITY 0x0002
- #define RTSER SET DATA BITS 0x0004
- #define RTSER\_SET\_STOP\_BITS 0x0008
- #define RTSER\_SET\_HANDSHAKE 0x0010

- #define RTSER\_SET\_FIFO\_DEPTH 0x0020
  #define RTSER\_SET\_TIMEOUT\_RX 0x0100
  #define RTSER\_SET\_TIMEOUT\_TX 0x0200
  #define RTSER\_SET\_TIMEOUT\_EVENT 0x0400
- #define RTSER\_SET\_TIMESTAMP\_HISTORY 0x0800
- #define RTSER SET EVENT MASK 0x1000
- #define RTSER SET RS485 0x2000

# RTSER\_LSR\_xxx

Line status bits

- #define RTSER LSR DATA 0x01
- #define RTSER LSR OVERRUN ERR 0x02
- #define RTSER\_LSR\_PARITY\_ERR 0x04
- #define RTSER\_LSR\_FRAMING\_ERR 0x08
- #define RTSER\_LSR\_BREAK\_IND 0x10
- #define RTSER\_LSR\_THR\_EMTPY 0x20
  #define RTSER\_LSR\_TRANSM\_EMPTY 0x40
  #define RTSER\_LSR\_FIFO\_ERR 0x80
- #define RTSER\_SOFT\_OVERRUN\_ERR 0x0100

#### RTSER MSR xxx

Modem status bits

- #define RTSER MSR DCTS 0x01
- #define RTSER MSR DDSR 0x02
- #define RTSER MSR TERI 0x04
- #define RTSER MSR DDCD 0x08
- #define RTSER MSR CTS 0x10
- #define RTSER\_MSR\_DSR 0x20
- #define RTSER\_MSR\_RI 0x40
- #define RTSER\_MSR\_DCD 0x80

#### RTSER MCR xxx

Modem control bits

- #define RTSER\_MCR\_DTR 0x01
- #define RTSER\_MCR\_RTS 0x02
- #define RTSER MCR OUT1 0x04
- #define RTSER MCR OUT2 0x08
- #define RTSER MCR LOOP 0x10

### Sub-Classes of RTDM\_CLASS\_SERIAL

#define RTDM\_SUBCLASS\_16550A 0

#### **IOCTLs**

Serial device IOCTLs

• #define RTSER\_RTIOC\_GET\_CONFIG \_IOR(RTIOC\_TYPE\_SERIAL, 0x00, struct rtser\_config)

Get serial device configuration.

#define RTSER\_RTIOC\_SET\_CONFIG \_IOW(RTIOC\_TYPE\_SERIAL, 0x01, struct rtser\_config)

Set serial device configuration.

• #define RTSER\_RTIOC\_GET\_STATUS \_IOR(RTIOC\_TYPE\_SERIAL, 0x02, struct rtser\_status)

Get serial device status.

- #define RTSER\_RTIOC\_GET\_CONTROL\_IOR(RTIOC\_TYPE\_SERIAL, 0x03, int)

  Get serial device's modem contol register.
- #define RTSER\_RTIOC\_SET\_CONTROL\_IOW(RTIOC\_TYPE\_SERIAL, 0x04, int)
   Set serial device's modem contol register.
- #define RTSER\_RTIOC\_WAIT\_EVENT \_IOR(RTIOC\_TYPE\_SERIAL, 0x05, struct rtser\_event)

Wait on serial device events according to previously set mask.

# RTSER\_BREAK\_xxx

#### Break control

• #define RTSER BREAK CLR 0x00

Serial device configuration.

#define RTSER\_BREAK\_SET 0x01

Serial device configuration.

• #define RTIOC TYPE SERIAL RTDM CLASS SERIAL

Serial device configuration.

• typedef struct rtser config rtser config t

Serial device configuration.

typedef struct rtser\_status rtser\_status\_t

Serial device status.

typedef struct rtser\_event rtser\_event\_t

Additional information about serial device events.

### 8.23.1 Detailed Description

Real-Time Driver Model for Xenomai, serial device profile header.

Note

Copyright (C) 2005-2007 Jan Kiszka jan.kiszka@web.de

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

- 8.23.2 Macro Definition Documentation
- 8.23.2.1 #define RTSER\_RTIOC\_BREAK\_CTL\_IOR(RTIOC\_TYPE\_SERIAL, 0x06, int)

Set or clear break on UART output line.

#### **Parameters**

| in a | g | RTSER_BREAK_SET or RTSER_BREAK_CLR (int) |
|------|---|--|
|------|---|--|

Returns

0 on success, otherwise negative error code

Tags

task-unrestricted

Note

A set break condition may also be cleared on UART line reconfiguration.

8.23.2.2 #define RTSER\_RTIOC\_GET\_CONFIG \_IOR(RTIOC\_TYPE\_SERIAL, 0x00, struct rtser\_config)

Get serial device configuration.

**Parameters** 

| out | arg | Pointer to configuration buffer (struct rtser_config) |
|-----|-----|---|
|-----|-----|---|

Returns

0 on success, otherwise negative error code

Tags

task-unrestricted

8.23.2.3 #define RTSER\_RTIOC\_GET\_CONTROL\_IOR(RTIOC\_TYPE\_SERIAL, 0x03, int)

Get serial device's modem contol register.

**Parameters** 

| out | arg | Pointer to variable receiving the content (int, see RTSER_MCR_xxx) |
|-----|-----|--|

Returns

0 on success, otherwise negative error code

Tags

task-unrestricted

8.23.2.4 #define RTSER\_RTIOC\_GET\_STATUS \_IOR(RTIOC\_TYPE\_SERIAL, 0x02, struct rtser\_status)

Get serial device status.

#### **Parameters**

| out | arg | Pointer to status buffer (struct rtser_status) |
|-----|-----|--|
|-----|-----|--|

#### Returns

0 on success, otherwise negative error code

#### Tags

task-unrestricted

#### Note

The error states RTSER\_LSR\_OVERRUN\_ERR, RTSER\_LSR\_PARITY\_ERR, RTSER\_LSR\_FRAMING\_ERR, and RTSER\_SOFT\_OVERRUN\_ERR that may have occurred during previous read accesses to the device will be saved for being reported via this IOCTL. Upon return from RTSER\_RTIOC\_GET\_STATUS, the saved state will be cleared.

8.23.2.5 #define RTSER\_RTIOC\_SET\_CONFIG \_IOW(RTIOC\_TYPE\_SERIAL, 0x01, struct rtser config)

Set serial device configuration.

#### **Parameters**

| in | arg | Pointer to configuration buffer (struct rtser_config) |
|----|-----|---|
|----|-----|---|

#### Returns

0 on success, otherwise:

- -EPERM is returned if the caller's context is invalid, see note below.
- -ENOMEM is returned if a new history buffer for timestamps cannot be allocated.

## Tags

task-unrestricted

#### Note

If rtser\_config contains a valid timestamp\_history and the addressed device has been opened in non-real-time context, this IOCTL must be issued in non-real-time context as well. Otherwise, this command will fail.

### Examples:

cross-link.c.

8.23.2.6 #define RTSER\_RTIOC\_SET\_CONTROL\_IOW(RTIOC\_TYPE\_SERIAL, 0x04, int)

Set serial device's modem contol register.

#### **Parameters**

| in | arg | New control register content (int, see RTSER_MCR_xxx) |
|----|-----|---|
|----|-----|---|

### Returns

0 on success, otherwise negative error code

# Tags

task-unrestricted

# 8.23.2.7 #define RTSER\_RTIOC\_WAIT\_EVENT \_IOR(RTIOC\_TYPE\_SERIAL, 0x05, struct rtser\_event)

Wait on serial device events according to previously set mask.

#### **Parameters**

| out | arg | Pointer to event information buffer (struct rtser event) |
|-----|-----|--|
| out | arg | 1 Sinter to event information barief (ciract rees_event) |

#### Returns

0 on success, otherwise:

- -EBUSY is returned if another task is already waiting on events of this device.
- -EBADF is returned if the file descriptor is invalid or the device has just been closed.

### Tags


mode-unrestricted

# Examples:

cross-link.c.

# 8.24 include/cobalt/kernel/rtdm/testing.h File Reference

Include dependency graph for testing.h:

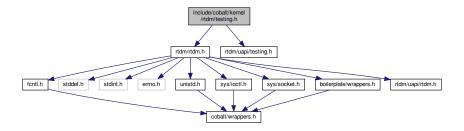

# 8.24.1 Detailed Description

Note

Copyright (C) 2005 Jan Kiszka jan.kiszka@web.de

Xenomai is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


Xenomai is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with Xenomai; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.


# 8.25 include/rtdm/testing.h File Reference

Real-Time Driver Model for Xenomai, testing device profile header.

Include dependency graph for testing.h:

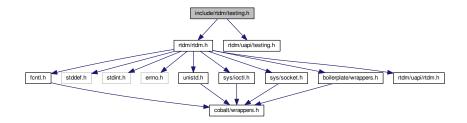

This graph shows which files directly or indirectly include this file:

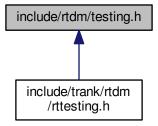

# 8.25.1 Detailed Description

Real-Time Driver Model for Xenomai, testing device profile header.

Note

Copyright (C) 2005 Jan Kiszka jan.kiszka@web.de

Xenomai is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


Xenomai is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with Xenomai; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

# 8.26 include/rtdm/uapi/testing.h File Reference

Real-Time Driver Model for Xenomai, testing device profile header.

This graph shows which files directly or indirectly include this file:

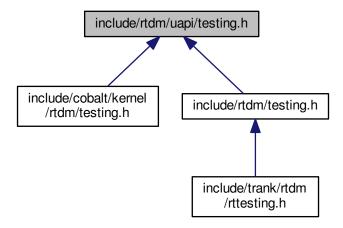

### Macros

### Sub-Classes of RTDM\_CLASS\_TESTING

- #define RTDM\_SUBCLASS\_TIMERBENCH 0 subclass name: "timerbench"
- #define RTDM\_SUBCLASS\_IRQBENCH 1

subclass name: "irqbench"

#define RTDM SUBCLASS SWITCHTEST 2

subclass name: "switchtest"

#define RTDM\_SUBCLASS\_RTDMTEST 3

subclase name: "rtdm"

#### **IOCTLs**

Testing device IOCTLs

- #define RTTST\_RTIOC\_INTERM\_BENCH\_RES \_IOWR(RTIOC\_TYPE\_TESTING, 0x00, struct rttst\_interm\_bench\_res)
- #define RTTST\_RTIOC\_TMBENCH\_START \_IOW(RTIOC\_TYPE\_TESTING, 0x10, struct rttst\_tmbench\_config)
- #define RTTST\_RTIOC\_TMBENCH\_STOP \_IOWR(RTIOC\_TYPE\_TESTING, 0x11, struct rttst overall bench res)
- #define RTTST\_RTIOC\_IRQBENCH\_START \_IOW(RTIOC\_TYPE\_TESTING, 0x20, struct rttst irgbench config)
- #define RTTST RTIOC IRQBENCH STOP IO(RTIOC TYPE TESTING, 0x21)
- #define RTTST\_RTIOC\_IRQBENCH\_GET\_STATS \_IOR(RTIOC\_TYPE\_TESTING, 0x22, struct rttst\_irgbench\_stats)
- #define RTTST RTIOC IRQBENCH WAIT IRQ IO(RTIOC TYPE TESTING, 0x23)
- #define RTTST RTIOC IRQBENCH REPLY IRQ IO(RTIOC TYPE TESTING, 0x24)
- #define RTTST\_RTIOC\_SWTEST\_SET\_TASKS\_COUNT \_IOW(RTIOC\_TYPE\_TESTING, 0x30, unsigned long)
- #define RTTST\_RTIOC\_SWTEST\_SET\_CPU \_IOW(RTIOC\_TYPE\_TESTING, 0x31, unsigned long)
- #define RTTST\_RTIOC\_SWTEST\_REGISTER\_UTASK \_IOW(RTIOC\_TYPE\_TESTING, 0x32, struct rttst\_swtest\_task)
- #define RTTST\_RTIOC\_SWTEST\_CREATE\_KTASK\_IOWR(RTIOC\_TYPE\_TESTING, 0x33, struct rttst\_swtest\_task)
- #define RTTST\_RTIOC\_SWTEST\_PEND \_IOR(RTIOC\_TYPE\_TESTING, 0x34, struct rttst\_-swtest task)
- #define RTTST\_RTIOC\_SWTEST\_SWITCH\_TO \_IOR(RTIOC\_TYPE\_TESTING, 0x35, struct rttst swtest dir)
- #define RTTST\_RTIOC\_SWTEST\_GET\_SWITCHES\_COUNT \_IOR(RTIOC\_TYPE\_TESTIN-G, 0x36, unsigned long)
- #define RTTST\_RTIOC\_SWTEST\_GET\_LAST\_ERROR \_IOR(RTIOC\_TYPE\_TESTING, 0x37, struct rttst\_swtest\_error)
- #define RTTST\_RTIOC\_SWTEST\_SET\_PAUSE \_IOW(RTIOC\_TYPE\_TESTING, 0x38, unsigned long)
- #define RTTST\_RTIOC\_RTDM\_DEFER\_CLOSE \_IOW(RTIOC\_TYPE\_TESTING, 0x40, unsigned long)

### 8.26.1 Detailed Description

Real-Time Driver Model for Xenomai, testing device profile header.

Note

Copyright (C) 2005 Jan Kiszka jan.kiszka@web.de

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA.


# 8.27 include/rtdm/analogy.h File Reference

Analogy for Linux, library facilities.

Include dependency graph for analogy.h:

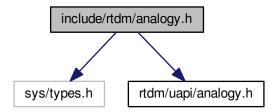

This graph shows which files directly or indirectly include this file:

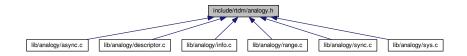

# **Data Structures**

struct a4l descriptor

Structure containing device-information useful to users.

# Macros

# ANALOGY\_xxx\_DESC

Constants used as argument so as to define the description depth to recover

- #define A4L\_BSC\_DESC 0x0
   BSC stands for basic descriptor (device data)
- #define A4L\_CPLX\_DESC 0x1

CPLX stands for complex descriptor (subdevice + channel + range data)

# 8.27.1 Detailed Description

Analogy for Linux, library facilities.

Note

Copyright (C) 1997-2000 David A. Schleef ds@schleef.org Copyright (C) 2008 Alexis Berlemont alexis.berlemont@free.fr

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA.

# 8.28 include/rtdm/uapi/analogy.h File Reference

Analogy for Linux, UAPI bits.

This graph shows which files directly or indirectly include this file:

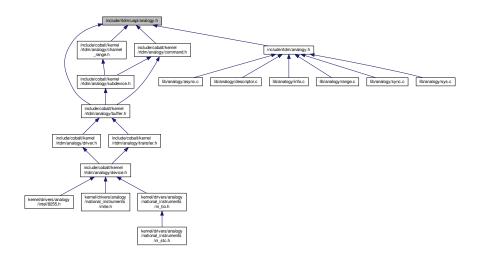

## **Data Structures**

struct a4l cmd desc

Structure describing the asynchronous instruction.

• struct a4l\_instruction

Structure describing the synchronous instruction.

struct a4l\_instruction\_list

Structure describing the list of synchronous instructions.

#### Macros

• #define A4L RNG FACTOR 1000000

Constant for internal use only (must not be used by driver developer).

#define A4L\_RNG\_VOLT\_UNIT 0x0

Volt unit range flag.

#define A4L RNG MAMP UNIT 0x1

MilliAmpere unit range flag.

• #define A4L\_RNG\_NO\_UNIT 0x2

No unit range flag.

#define A4L\_RNG\_EXT\_UNIT 0x4

External unit range flag.

• #define A4L\_RNG\_UNIT(x)

Macro to retrieve the range unit from the range flags.

• #define A4L INSN WAIT MAX 100000

Maximal wait duration.

## ANALOGY\_CMD\_xxx

Common command flags definitions

#define A4L CMD SIMUL 0x1

Do not execute the command, just check it.

#define A4L CMD BULK 0x2

Perform data recovery / transmission in bulk mode.

#define A4L CMD WRITE 0x4

Perform a command which will write data to the device.

#### TRIG xxx

Command triggers flags definitions

#define TRIG NONE 0x00000001

Never trigger.

#define TRIG NOW 0x00000002

Trigger now + N ns.

#define TRIG FOLLOW 0x00000004

Trigger on next lower level trig.

#define TRIG TIME 0x00000008

Trigger at time N ns.

#define TRIG\_TIMER 0x00000010

Trigger at rate N ns.

#define TRIG COUNT 0x00000020

Trigger when count reaches N.

#define TRIG\_EXT 0x00000040

Trigger on external signal N.

#define TRIG INT 0x00000080

Trigger on analogy-internal signal N.

#define TRIG OTHER 0x00000100

Driver defined trigger.

#define TRIG\_WAKE\_EOS 0x0020

Wake up on end-of-scan.

#define TRIG ROUND MASK 0x00030000

Trigger not implemented yet.

#define TRIG ROUND NEAREST 0x00000000

Trigger not implemented yet.

#define TRIG ROUND DOWN 0x00010000

Trigger not implemented yet.

• #define TRIG\_ROUND\_UP 0x00020000

Trigger not implemented yet.

#define TRIG ROUND UP NEXT 0x00030000

Trigger not implemented yet.

#### **Channel macros**

Specific precompilation macros and constants useful for the channels descriptors tab located in the command structure

#define CHAN(a) ((a) & 0xffff)

Channel indication macro.

#define RNG(a) (((a) & 0xff) << 16)</li>

Range definition macro.

#define AREF(a) (((a) & 0xf) << 24)</li>

Reference definition macro.

#define FLAGS(a) ((a) & CR\_FLAGS\_MASK)

Flags definition macro.

#define PACK(a, b, c) (CHAN(a) | RNG(b) | AREF(c))

Channel + range + reference definition macro.

#define PACK\_FLAGS(a, b, c, d) (CHAN(a) | RNG(b) | AREF(c) | FLAGS(d))

Channel + range + reference + flags definition macro.

#define AREF GROUND 0x00

Analog reference is analog ground.

#define AREF\_COMMON 0x01

Analog reference is analog common.

#define AREF\_DIFF 0x02

Analog reference is differential.

#define AREF\_OTHER 0x03

Analog reference is undefined.

### Subdevices types

Flags to define the subdevice type

#define A4L\_SUBD\_UNUSED (A4L\_SUBD\_MASK\_SPECIAL|0x1)

Unused subdevice.

#define A4L\_SUBD\_AI (A4L\_SUBD\_MASK\_READ|0x2)

Analog input subdevice.

#define A4L\_SUBD\_AO (A4L\_SUBD\_MASK\_WRITE|0x4)

Analog output subdevice.

#define A4L SUBD DI (A4L SUBD MASK READI0x8)

Digital input subdevice.

#define A4L\_SUBD\_DO (A4L\_SUBD\_MASK\_WRITE|0x10)

Digital output subdevice.

#define A4L\_SUBD\_DIO (A4L\_SUBD\_MASK\_SPECIAL|0x20)

Digital input/output subdevice.

#define A4L\_SUBD\_COUNTER (A4L\_SUBD\_MASK\_SPECIAL|0x40)

Counter subdevice.

#define A4L\_SUBD\_TIMER (A4L\_SUBD\_MASK\_SPECIAL|0x80)

Timer subdevice.

#define A4L\_SUBD\_MEMORY (A4L\_SUBD\_MASK\_SPECIAL|0x100)

Memory, EEPROM, DPRAM.

#define A4L SUBD CALIB (A4L SUBD MASK SPECIALIOx200)

Calibration subdevice DACs.

• #define A4L SUBD PROC (A4L SUBD MASK SPECIAL|0x400)

Processor, DSP.

#define A4L SUBD SERIAL (A4L SUBD MASK SPECIAL|0x800)

Serial IO subdevice.

• #define A4L\_SUBD TYPES

Mask which gathers all the types.

#### Subdevice features

Flags to define the subdevice's capabilities

• #define A4L SUBD CMD 0x1000

The subdevice can handle command (i.e it can perform asynchronous acquisition)

• #define A4L SUBD MMAP 0x8000

The subdevice support mmap operations (technically, any driver can do it; however, the developer might want that his driver must be accessed through read / write.

#### Subdevice status

Flags to define the subdevice's status

• #define A4L SUBD BUSY NR 0

The subdevice is busy, a synchronous or an asynchronous acquisition is occuring.

#define A4L SUBD BUSY (1 << A4L SUBD BUSY NR)</li>

The subdevice is busy, a synchronous or an asynchronous acquisition is occuring.

#define A4L SUBD CLEAN NR 1

The subdevice is about to be cleaned in the middle of the detach procedure.

#define A4L SUBD CLEAN (1 << A4L SUBD CLEAN NR)</li>

The subdevice is busy, a synchronous or an asynchronous acquisition is occuring.

## Instruction type

Flags to define the type of instruction

#define A4L\_INSN\_READ (0 | A4L\_INSN\_MASK\_READ)

Read instruction.

• #define A4L INSN WRITE (1 | A4L INSN MASK WRITE)

Write instruction.

#define A4L INSN BITS

"Bits" instruction

#define A4L\_INSN\_CONFIG

Configuration instruction.

#define A4L INSN GTOD

Get time instruction.

#define A4L INSN WAIT

Wait instruction.

#define A4L INSN INTTRIG

Trigger instruction (to start asynchronous acquisition)

#### Configuration instruction type

Values to define the type of configuration instruction

- #define A4L INSN CONFIG DIO INPUT 0
- #define A4L INSN CONFIG DIO OUTPUT 1
- #define A4L\_INSN\_CONFIG\_DIO\_OPENDRAIN 2
- #define A4L\_INSN\_CONFIG\_ANALOG\_TRIG 16
- #define A4L\_INSN\_CONFIG\_ALT\_SOURCE 20
- #define A4L\_INSN\_CONFIG\_DIGITAL\_TRIG 21
- #define **A4L\_INSN\_CONFIG\_BLOCK\_SIZE** 22
- #define A4L\_INSN\_CONFIG\_TIMER\_1 23
- #define A4L\_INSN\_CONFIG\_FILTER 24
   #define A4L\_INSN\_CONFIG\_CHANGE\_NOTIFY 3
- #define A4L\_INSN\_CONFIG\_CHANGE\_NOTIFY 25
   #define A4L\_INSN\_CONFIG\_SERIAL\_CLOCK 26
- #define A4L INSN CONFIG BIDIRECTIONAL DATA 27
- #define A4L INSN CONFIG DIO QUERY 28
- #define A4L\_INSN\_CONFIG\_PWM\_OUTPUT 29
- #define A4L\_INSN\_CONFIG\_GET\_PWM\_OUTPUT 30
- #define A4L INSN CONFIG ARM 31
- #define A4L INSN CONFIG DISARM 32
- #define A4L\_INSN\_CONFIG\_GET\_COUNTER\_STATUS 33
- #define A4L\_INSN\_CONFIG\_RESET 34
- #define A4L\_INSN\_CONFIG\_GPCT\_SINGLE\_PULSE\_GENERATOR 1001 /\* Use CTR as single pulsegenerator \*/

- #define A4L\_INSN\_CONFIG\_GPCT\_PULSE\_TRAIN\_GENERATOR 1002 /\* Use CTR as pulsetraingenerator \*/
- #define A4L\_INSN\_CONFIG\_GPCT\_QUADRATURE\_ENCODER 1003 /\* Use the counter as encoder \*/
- #define A4L\_INSN\_CONFIG\_SET\_GATE\_SRC 2001 /\* Set gate source \*/
- #define A4L\_INSN\_CONFIG\_GET\_GATE\_SRC 2002 /\* Get gate source \*/
- #define A4L\_INSN\_CONFIG\_SET\_CLOCK\_SRC 2003 /\* Set master clock source \*/
- #define A4L\_INSN\_CONFIG\_GET\_CLOCK\_SRC 2004 /\* Get master clock source \*/
- #define A4L\_INSN\_CONFIG\_SET\_OTHER\_SRC 2005 /\* Set other source \*/
- #define A4L\_INSN\_CONFIG\_SET\_COUNTER\_MODE 4097
- #define A4L\_INSN\_CONFIG\_SET\_ROUTING 4099
- #define A4L\_INSN\_CONFIG\_GET\_ROUTING 4109

#### Counter status bits

Status bits for INSN\_CONFIG\_GET\_COUNTER\_STATUS

- #define A4L COUNTER ARMED 0x1
- #define A4L COUNTER COUNTING 0x2
- #define A4L\_COUNTER\_TERMINAL\_COUNT 0x4

#### **IO** direction

Values to define the IO polarity

- #define A4L INPUT 0
- #define A4L OUTPUT 1
- #define A4L OPENDRAIN 2

### **Events types**

Values to define the Analogy events. They might used to send some specific events through the instruction interface.

- #define A4L\_EV\_START 0x00040000
- #define A4L EV SCAN BEGIN 0x00080000
- #define **A4L\_EV\_CONVERT** 0x00100000
- #define A4L\_EV\_SCAN\_END 0x00200000
- #define **A4L EV STOP** 0x00400000

### 8.28.1 Detailed Description

Analogy for Linux, UAPI bits.

Note

```
Copyright (C) 1997-2000 David A. Schleef ds@schleef.org
Copyright (C) 2008 Alexis Berlemont alexis.berlemont@free.fr
```

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

### 8.28.2 Macro Definition Documentation

## 8.28.2.1 #define A4L\_RNG\_FACTOR 1000000


Constant for internal use only (must not be used by driver developer).

Referenced by a4l\_dtoraw(), a4l\_find\_range(), a4l\_ftoraw(), a4l\_rawtod(), and a4l\_rawtof().


# 8.29 lib/analogy/internal.h File Reference

Analogy for Linux, internal declarations.

Include dependency graph for internal.h:

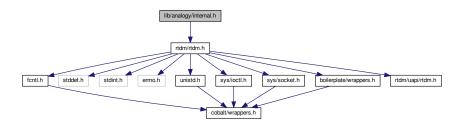

This graph shows which files directly or indirectly include this file:

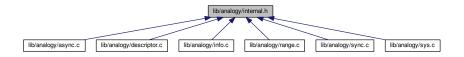

# 8.29.1 Detailed Description

Analogy for Linux, internal declarations.

Note

Copyright (C) 2008 Alexis Berlemont alexis.berlemont@free.fr


This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

# 8.30 lib/analogy/async.c File Reference

Analogy for Linux, command, transfer, etc.

Include dependency graph for async.c:

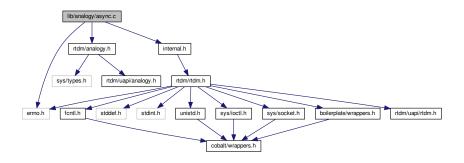

#### **Functions**

- int a4l\_snd\_command (a4l\_desc\_t \*dsc, a4l\_cmd\_t \*cmd)
  - Send a command to an Analoy device.
- int a4l\_snd\_cancel (a4l\_desc\_t \*dsc, unsigned int idx\_subd)
  - Cancel an asynchronous acquisition.
- int a4l\_set\_bufsize (a4l\_desc\_t \*dsc, unsigned int idx\_subd, unsigned long size)

  Change the size of the asynchronous buffer.
- int a4l\_get\_bufsize (a4l\_desc\_t \*dsc, unsigned int idx\_subd, unsigned long \*size)

  Get the size of the asynchronous buffer.
- int a4l\_mark\_bufrw (a4l\_desc\_t \*dsc, unsigned int idx\_subd, unsigned long cur, unsigned long \*new)

Update the asynchronous buffer state.

- int a4l\_poll (a4l\_desc\_t \*dsc, unsigned int idx\_subd, unsigned long ms\_timeout)

  Get the available data count.
- int a4l\_mmap (a4l\_desc\_t \*dsc, unsigned int idx\_subd, unsigned long size, void \*\*ptr)

  Map the asynchronous ring-buffer into a user-space.
- int a4l\_async\_read (a4l\_desc\_t \*dsc, void \*buf, size\_t nbyte, unsigned long ms\_timeout)

  Perform asynchronous read operation on the analog input subdevice.
- int a4l\_async\_write (a4l\_desc\_t \*dsc, void \*buf, size\_t nbyte, unsigned long ms\_timeout)

  Perform asynchronous write operation on the analog input subdevice.

# 8.30.1 Detailed Description

Analogy for Linux, command, transfer, etc. related features

Note

Copyright (C) 1997-2000 David A. Schleef ds@schleef.org Copyright (C) 2008 Alexis Berlemont alexis.berlemont@free.fr

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA.

# 8.31 lib/analogy/descriptor.c File Reference

Analogy for Linux, descriptor related features.

Include dependency graph for descriptor.c:

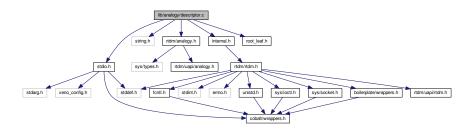

#### **Functions**

- int a4l\_sys\_desc (int fd, a4l\_desc\_t \*dsc, int pass)
  - Get a descriptor on an attached device.
- int a4l\_open (a4l\_desc\_t \*dsc, const char \*fname)
  - Open an Analogy device and basically fill the descriptor.
- int a4l\_close (a4l\_desc\_t \*dsc)
  - Close the Analogy device related with the descriptor.
- int a4l\_fill\_desc (a4l\_desc\_t \*dsc)
  - Fill the descriptor with subdevices, channels and ranges data.
- int a4l\_get\_subdinfo (a4l\_desc\_t \*dsc, unsigned int subd, a4l\_sbinfo\_t \*\*info)
  - Get an information structure on a specified subdevice.
- int a4l\_get\_chinfo (a4l\_desc\_t \*dsc, unsigned int subd, unsigned int chan, a4l\_chinfo\_t \*\*info)

  Get an information structure on a specified channel.
- int a4l\_get\_rnginfo (a4l\_desc\_t \*dsc, unsigned int subd, unsigned int chan, unsigned int rng, a4l\_rnginfo t \*\*info)

Get an information structure on a specified range.

# 8.31.1 Detailed Description

Analogy for Linux, descriptor related features.

Note

Copyright (C) 1997-2000 David A. Schleef ds@schleef.org Copyright (C) 2008 Alexis Berlemont alexis.berlemont@free.fr

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA.

# 8.32 lib/analogy/info.c File Reference

Analogy for Linux, device, subdevice, etc.

Include dependency graph for info.c:

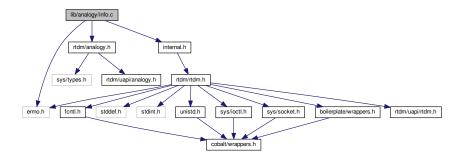

# 8.32.1 Detailed Description

Analogy for Linux, device, subdevice, etc. related features

Note

Copyright (C) 1997-2000 David A. Schleef ds@schleef.org Copyright (C) 2008 Alexis Berlemont alexis.berlemont@free.fr


This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

# 8.33 lib/analogy/range.c File Reference

Analogy for Linux, range related features.

Include dependency graph for range.c:

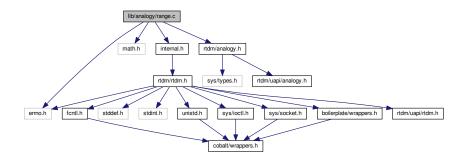

#### **Functions**

• int a4l sizeof chan (a4l chinfo t \*chan)

Get the size in memory of an acquired element.

• int a4l sizeof subd (a4l sbinfo t \*subd)

Get the size in memory of a digital acquired element.

• int a4l\_find\_range (a4l\_desc\_t \*dsc, unsigned int idx\_subd, unsigned int idx\_chan, unsigned long unit, double min, double max, a4l\_rnginfo\_t \*\*rng)

Find the must suitable range.

int a4l\_rawtoul (a4l\_chinfo\_t \*chan, unsigned long \*dst, void \*src, int cnt)

Unpack raw data (from the driver) into unsigned long values.

int a4l\_rawtof (a4l\_chinfo\_t \*chan, a4l\_rnginfo\_t \*rng, float \*dst, void \*src, int cnt)

Convert raw data (from the driver) to float-typed samples.

int a4l\_rawtod (a4l\_chinfo\_t \*chan, a4l\_rnginfo\_t \*rng, double \*dst, void \*src, int cnt)

Convert raw data (from the driver) to double-typed samples.

• int a4l\_ultoraw (a4l\_chinfo\_t \*chan, void \*dst, unsigned long \*src, int cnt)

Pack unsigned long values into raw data (for the driver)

• int a4l\_ftoraw (a4l\_chinfo\_t \*chan, a4l\_rnginfo\_t \*rng, void \*dst, float \*src, int cnt)

Convert float-typed samples to raw data (for the driver)

• int a4l\_dtoraw (a4l\_chinfo\_t \*chan, a4l\_rnginfo\_t \*rng, void \*dst, double \*src, int cnt)

Convert double-typed samples to raw data (for the driver)

# 8.33.1 Detailed Description

Analogy for Linux, range related features.

Note

Copyright (C) 1997-2000 David A. Schleef ds@schleef.org

Copyright (C) 2008 Alexis Berlemont alexis.berlemont@free.fr

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA.

# 8.34 lib/analogy/root\_leaf.h File Reference

Analogy for Linux, root / leaf system.

This graph shows which files directly or indirectly include this file:



# 8.34.1 Detailed Description

Analogy for Linux, root / leaf system.

Note

```
Copyright (C) 1997-2000 David A. Schleef ds@schleef.org
Copyright (C) 2008 Alexis Berlemont alexis.berlemont@free.fr
```

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA.

# 8.35 lib/analogy/sync.c File Reference

Analogy for Linux, instruction related features.

Include dependency graph for sync.c:

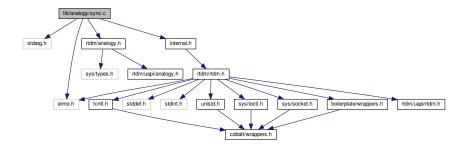

# **Functions**

• int a4l\_snd\_insnlist (a4l\_desc\_t \*dsc, a4l\_insnlst\_t \*arg)

Perform a list of synchronous acquisition misc operations.

• int a4l snd insn (a4l desc t \*dsc, a4l insn t \*arg)

Perform a synchronous acquisition misc operation.

• int a4l\_sync\_write (a4l\_desc\_t \*dsc, unsigned int idx\_subd, unsigned int chan\_desc, unsigned int ns delay, void \*buf, size t nbyte)

Perform a synchronous acquisition write operation.

• int a4l\_sync\_read (a4l\_desc\_t \*dsc, unsigned int idx\_subd, unsigned int chan\_desc, unsigned int ns\_delay, void \*buf, size\_t nbyte)

Perform a synchronous acquisition read operation.

int a4l sync dio (a4l desc t \*dsc, unsigned int idx subd, void \*mask, void \*buf)

Perform a synchronous acquisition digital acquisition.

• int a4l\_config\_subd (a4l\_desc\_t \*dsc, unsigned int idx\_subd, unsigned int type,...)

Configure a subdevice.

# 8.35.1 Detailed Description

Analogy for Linux, instruction related features.

Note

```
Copyright (C) 1997-2000 David A. Schleef ds@schleef.org
Copyright (C) 2008 Alexis Berlemont alexis.berlemont@free.fr
```


This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

# 8.36 lib/analogy/sys.c File Reference

Analogy for Linux, descriptor related features.

Include dependency graph for sys.c:

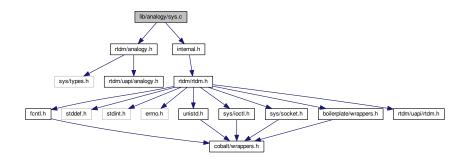

### **Functions**

• int a4l\_sys\_open (const char \*fname)

Open an Analogy device.

int a4l\_sys\_close (int fd)

Close an Analogy device.

• int a4l\_sys\_read (int fd, void \*buf, size\_t nbyte)

Read from an Analogy device.

• int a4l\_sys\_write (int fd, void \*buf, size\_t nbyte)

Write to an Analogy device.

• int a4l\_sys\_attach (int fd, a4l\_lnkdesc\_t \*arg)

Attach an Analogy device to a driver.

• int a4l sys detach (int fd)

Detach an Analogy device from a driver.

int a4l\_sys\_bufcfg (int fd, unsigned int idx\_subd, unsigned long size)

Configure the buffer size.

# 8.36.1 Detailed Description

Analogy for Linux, descriptor related features.

Note

Copyright (C) 1997-2000 David A. Schleef ds@schleef.org Copyright (C) 2008 Alexis Berlemont alexis.berlemont@free.fr

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

# Chapter 9

# **Example Documentation**

# 9.1 bufp-label.c

```
/*

* BUFP-based client/server demo, using the read(2)/write(2)

* based data over a socket.
 * system calls to exchange data over a socket.
 * In this example, two sockets are created. A server thread (reader) * is bound to a real-time port and receives a stream of bytes sent to * this port from a client thread (writer).
 * See Makefile in this directory for build directives.
#include <sys/mman.h>
#include <stdio.h>
#include <stdlib.h>
#include <unistd.h>
#include <signal.h>
#include <string.h>
#include <pthread.h>
#include <errno.h>
#include <rtdm/ipc.h>
pthread_t svtid, cltid;
#define BUFP_PORT_LABEL "bufp-demo"
static const char *msg[] = {
     "Surfing With The Alien",
     "Lords of Karma",
     "Banana Mango",
"Psycho Monkey"
     "Luminous Flesh Giants",
     "Moroccan Sunset",
     "Satch Boogie"
     "Flying In A Blue Dream",
     "Summer Song",
     "Speed Of Light",
     "Crystal Planet"
     "Raspberry Jam Delta-V",
"Champagne?",
     "Clouds Race Across The Sky",
     "Engines Of Creation"
};
static void fail(const char *reason)
{
         perror(reason);
         exit(EXIT_FAILURE);
}
static void *server(void *arg)
         struct rtipc_port_label plabel;
         struct sockaddr_ipc saddr;
         char buf[128];
         size_t bufsz;
         int ret, s;
         s = socket(AF_RTIPC, SOCK_DGRAM, IPCPROTO_BUFP);
         if (s < 0)
```

```
fail("socket");
         /*

* Set a 16k buffer for the server endpoint. This
          \ensuremath{^{*}} configuration must be done prior to binding the socket to a
            port.
         bufsz = 16384; /* bytes */
         ret = setsockopt(s, SOL_BUFP, BUFP_BUFSZ,
                            &bufsz, sizeof(bufsz));
         if (ret)
                  fail("setsockopt");
         /*

* Set a port label. This name will be registered when

* the port number (if given).
          * binding, in addition to the port number (if given).
         strcpy(plabel.label, BUFP_PORT_LABEL);
ret = setsockopt(s, SOL_BUFP, BUFP_LABEL,
                            &plabel, sizeof(plabel));
                  fail("setsockopt");
         /*
 * Bind the socket to the port. Assign that port a label, so
          * that peers may use a descriptive information to locate
          * it. Labeled ports will appear in the
          * /proc/xenomai/registry/rtipc/bufp directory once the socket
          * is bound.
          * saddr.sipc_port specifies the port number to use. If -1 is
          * passed, the BUFP driver will auto-select an idle port.
         saddr.sipc_family = AF_RTIPC;
         saddr.sipc_port = -1;
         ret = bind(s, (struct sockaddr *)&saddr, sizeof(saddr));
         if (ret)
                  fail("bind");
         for (;;) {
                  ret = read(s, buf, sizeof(buf));
                  if (ret < 0) {
                           close(s);
                           fail("read");
                  rt_printf("%s: received %d bytes, \"%.*s\"\n",
                             __FUNCTION__, ret, ret, buf);
         }
         return NULL;
}
static void *client(void *arg)
         struct rtipc_port_label plabel;
         struct sockaddr_ipc svsaddr;
         int ret, s, n = 0, len;
         struct timespec ts;
         s = socket(AF_RTIPC, SOCK_DGRAM, IPCPROTO_BUFP);
         if (s < 0)
                  fail("socket");
         /*

* Set the port label. This name will be used to find the peer
          * when connecting, instead of the port number. The label must
          * be set _after_ the socket is bound to the port, so that
* BUFP does not try to register this label for the client
          * port as well (like the server thread did).
         strcpy(plabel.label, BUFP_PORT_LABEL);
ret = setsockopt(s, SOL_BUFP, BUFP_LABEL,
                            &plabel, sizeof(plabel));
         if (ret)
                  fail("setsockopt");
         memset(&svsaddr, 0, sizeof(svsaddr));
         svsaddr.sipc_family = AF_RTIPC;
svsaddr.sipc_port = -1; /* Tell BUFP to search by label. */
         ret = connect(s, (struct sockaddr *)&svsaddr, sizeof(svsaddr));
         if (ret)
                  fail("connect");
         for (;;) {
                  len = strlen(msg[n]);
                  ret = write(s, msg[n], len);
if (ret < 0) {</pre>
```

9.2 bufp-readwrite.c 541

```
close(s);
                           fail("write");
                  rt\_printf("%s: sent %d bytes, \"%.*s\"\n",
                  __FUNCTION__, ret, ret, msg[n]);
n = (n + 1) % (sizeof(msg) / sizeof(msg[0]));
                  /*

* We run in full real-time mode (i.e. primary mode),
                   \ensuremath{^{*}} so we have to let the system breathe between two
                   * iterations.
                  ts.tv sec = 0:
                  ts.tv_nsec = 500000000; /* 500 ms */
                  clock_nanosleep(CLOCK_REALTIME, 0, &ts, NULL);
         return NULL:
}
static void cleanup_upon_sig(int sig)
         pthread_cancel(svtid);
         pthread_cancel(cltid);
         signal(sig, SIG_DFL);
         pthread_join(svtid, NULL);
         pthread_join(cltid, NULL);
int main(int argc, char **argv)
         struct sched_param svparam = {.sched_priority = 71 };
         struct sched_param clparam = {.sched_priority = 70 };
         pthread_attr_t svattr, clattr;
         sigset_t mask, oldmask;
         mlockall(MCL_CURRENT | MCL_FUTURE);
         sigemptyset(&mask);
         sigaddset(&mask, SIGINT);
         signal(SIGINT, cleanup_upon_sig);
         sigaddset(&mask, SIGTERM);
         signal(SIGTERM, cleanup_upon_sig);
         sigaddset(&mask, SIGHUP);
signal(SIGHUP, cleanup_upon_sig);
         pthread_sigmask(SIG_BLOCK, &mask, &oldmask);
          * This is a real-time compatible printf() package from
            Xenomai's RT Development Kit (RTDK), that does NOT cause
            any transition to secondary mode.
         rt_print_auto_init(1);
         pthread_attr_init(&svattr);
         pthread_attr_setdetachstate(&svattr, PTHREAD_CREATE_JOINABLE);
pthread_attr_setinheritsched(&svattr, PTHREAD_EXPLICIT_SCHED);
pthread_attr_setschedpolicy(&svattr, SCHED_FIFO);
         pthread_attr_setschedparam(&svattr, &svparam);
         errno = pthread_create(&svtid, &svattr, &server, NULL);
         if (errno)
                  fail("pthread_create");
         pthread_attr_init(&clattr);
         pthread_attr_setdetachstate(&clattr, PTHREAD_CREATE_JOINABLE);
         \tt pthread\_attr\_setinheritsched(\&clattr, PTHREAD\_EXPLICIT\_SCHED); \\
         {\tt pthread\_attr\_setschedpolicy(\&clattr, SCHED\_FIF0);}
         pthread_attr_setschedparam(&clattr, &clparam);
         errno = pthread_create(&cltid, &clattr, &client, NULL);
                  fail("pthread_create");
         sigsuspend(&oldmask);
```

# 9.2 bufp-readwrite.c

```
/*
  * BUFP-based client/server demo, using the read(2)/write(2)
  * system calls to exchange data over a socket.
```

```
* In this example, two sockets are created. A server thread (reader)
 * is bound to a real-time port and receives a stream of bytes sent to
 * this port from a client thread (writer).
 * See Makefile in this directory for build directives.
#include <sys/mman.h>
#include <stdio.h>
#include <stdlib.h>
#include <unistd.h>
#include <signal.h>
#include <string.h>
#include <pthread.h>
#include <errno.h>
#include <rtdm/ipc.h>
pthread_t svtid, cltid;
#define BUFP_SVPORT 12
static const char *msg[] = {
    "Surfing With The Alien",
"Lords of Karma",
    "Banana Mango",
"Psycho Monkey"
    "Luminous Flesh Giants",
    "Moroccan Sunset",
    "Satch Boogie"
    "Flying In A Blue Dream",
    "Ride",
    "Summer Song",
    "Speed Of Light",
    "Crystal Planet"
    "Raspberry Jam Delta-V",
"Champagne?",
    "Clouds Race Across The Sky",
    "Engines Of Creation"
static void fail(const char *reason)
{
        perror(reason):
        exit(EXIT_FAILURE);
}
static void *server(void *arg)
{
        struct sockaddr_ipc saddr;
        char buf[128];
        size_t bufsz;
        int ret, s;
        s = socket(AF_RTIPC, SOCK_DGRAM, IPCPROTO_BUFP);
        if (s < 0)
                 fail("socket");
        /*
 * Set a 16k buffer for the server endpoint. This
 * configuration must be done prior to binding the socket to a
...
        bufsz = 16384; /* bytes */
        ret = setsockopt(s, SOL_BUFP, BUFP_BUFSZ,
                           &bufsz, sizeof(bufsz));
        if (ret)
                 fail("setsockopt");
        saddr.sipc_family = AF_RTIPC;
        saddr.sipc_port = BUFP_SVPORT;
        ret = bind(s, (struct sockaddr *)&saddr, sizeof(saddr));
        if (ret)
                 fail("bind");
         for (;;) {
                 ret = read(s, buf, sizeof(buf));
                 if (ret < 0) {</pre>
                          close(s);
                          fail("read");
                 rt_printf("%s: received %d bytes, \"%.*s\"\n",
                            __FUNCTION__, ret, ret, buf);
        return NULL;
}
```

9.2 bufp-readwrite.c 543

```
static void *client(void *arg)
         struct sockaddr_ipc svsaddr;
         int ret, s, n = 0, len;
         struct timespec ts;
         s = socket(AF_RTIPC, SOCK_DGRAM, IPCPROTO_BUFP);
         if (s < 0)
                  fail("socket");
         memset(&svsaddr, 0, sizeof(svsaddr));
         svsaddr.sipc_family = AF_RTIPC;
svsaddr.sipc_port = BUFP_SVPORT;
         ret = connect(s, (struct sockaddr *)&svsaddr, sizeof(svsaddr));
         if (ret)
                  fail("connect");
         for (;;) {
                  len = strlen(msg[n]);
                  ret = write(s, msg[n], len);
                   if (ret < 0) {</pre>
                           close(s);
                            fail("write");
                  rt_printf("%s: sent %d bytes, \"%.*s\"\n",
                  __FUNCTION__, ret, ret, msg[n]);
n = (n + 1) % (sizeof(msg) / sizeof(msg[0]));
                  /*
 * We run in full real-time mode (i.e. primary mode),
 * so we have to let the system breathe between two
                   * iterations.
                  ts.tv_sec = 0;
                   ts.tv_nsec = 500000000; /* 500 ms */
                   clock_nanosleep(CLOCK_REALTIME, 0, &ts, NULL);
         return NULL:
static void cleanup_upon_sig(int sig)
{
         pthread cancel(sytid):
         pthread_cancel(cltid);
         signal(sig, SIG_DFL);
         pthread_join(svtid, NULL);
         pthread_join(cltid, NULL);
}
int main(int argc, char **argv)
{
         struct sched_param svparam = {.sched_priority = 71 };
         struct sched_param clparam = {.sched_priority = 70 };
         pthread_attr_t svattr, clattr;
         sigset_t mask, oldmask;
         mlockall(MCL_CURRENT | MCL_FUTURE);
         sigemptyset(&mask);
         sigaddset(&mask, SIGINT);
         signal(SIGINT, cleanup_upon_sig);
signal(sugreem, cleanup_upon_sig);
signal(SIGTERM, cleanup_upon_sig);
         sigaddset(&mask, SIGHUP);
         signal(SIGHUP, cleanup_upon_sig);
         pthread_sigmask(SIG_BLOCK, &mask, &oldmask);
          * This is a real-time compatible printf() package from
          * Xenomai's RT Development Kit (RTDK), that does NOT cause
          \ensuremath{^{*}} any transition to secondary mode.
         rt_print_auto_init(1);
         pthread_attr_init(&svattr);
         pthread_attr_setdetachstate(&svattr, PTHREAD_CREATE_JOINABLE);
         pthread_attr_setinheritsched(&svattr, PTHREAD_EXPLICIT_SCHED);
         pthread_attr_setschedpolicy(&svattr, SCHED_FIF0);
         pthread_attr_setschedparam(&svattr, &svparam);
         errno = pthread_create(&svtid, &svattr, &server, NULL);
         if (errno)
                  fail("pthread_create");
         pthread_attr_init(&clattr);
         pthread_attr_setdetachstate(&clattr, PTHREAD_CREATE_JOINABLE);
pthread_attr_setinheritsched(&clattr, PTHREAD_EXPLICIT_SCHED);
```

# 9.3 can-rtt.c

```
* Round-Trip-Time Test - sends and receives messages and measures the
                           time in between.
   Copyright (C) 2006 Wolfgang Grandegger <wg@grandegger.com>
   Based on RTnet's examples/xenomai/posix/rtt-sender.c.
   Copyright (C) 2002 Ulrich Marx <marx@kammer.uni-hannover.de>
                  2002 Marc Kleine-Budde <kleine-budde@gmx.de>
                  2006 Jan Kiszka <jan.kiszka@web.de>
 * This program is free software; you can redistribute it and/or modify
 * it under the terms of the GNU General Public License as published by
   the Free Software Foundation; either version 2 of the License, or
  (at your option) any later version.
 * This program is distributed in the hope that it will be useful,
   but WITHOUT ANY WARRANTY; without even the implied warranty of
   MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the
  GNU General Public License for more details.
   You should have received a copy of the GNU General Public License
   along with this program; if not, write to the Free Software
   Foundation, Inc., 675 Mass Ave, Cambridge, MA 02139, USA.
 \ensuremath{^{*}} The program sends out CAN messages periodically and copies the current
 * time-stamp to the payload. At reception, that time-stamp is compared * with the current time to determine the round-trip time. The jitter
 * values are printer out regularly. Concurrent tests can be carried out
 \ensuremath{^{*}} by starting the program with different message identifiers. It is also
 ^{\star} possible to use this program on a remote system as simple repeater to
 * loopback messages.
#include <errno.h>
#include <mqueue.h>
#include <signal.h>
#include <pthread.h>
#include <stdio.h>
#include <stdlib.h>
#include <string.h>
#include <unistd.h>
#include <limits.h>
#include <getopt.h>
#include <netinet/in.h>
#include <net/if.h>
#include <sys/ioctl.h>
#include <sys/mman.h>
#ifdef CONFIG_XENO_COBALT
#include <rtdm/can.h>
#else
#include <linux/can.h>
#include <linux/can/raw.h>
#define NSEC PER SEC 1000000000
static unsigned int cycle = 10000; /* 10 ms */
static canid_t can_id = 0x1;
static pthread_t txthread, rxthread;
static int txsock, rxsock;
static mqd_t mq;
static int txcount. rxcount:
static int overruns;
static int repeater;
```

9.3 can-rtt.c 545

```
struct rtt_stat {
    long long rtt;
    long long rtt_min;
     long long rtt_max;
     long long rtt sum:
     long long rtt_sum_last;
     int counts_per_sec;
};
static void print_usage(char *prg)
     fprintf(stderr,
             "Usage: %s [Options] <tx-can-interface> <rx-can-interface>\n"
             "Options:\n"
             " -h, --help This help\n"

"-r, --repeater Repeater, send back received messages\n"

"-i, --id=ID CAN Identifier (default = 0x1)\n"

(default = 10000us)\n",
             " -c, --cycle
             prg);
}
static void *transmitter(void *arg)
    struct sched_param param = { .sched_priority = 80 };
    struct timespec next_period;
     struct timespec time;
     struct can_frame frame;
    long long *rtt_time = (long long *)&frame.data;
     /* Pre-fill CAN frame */
     frame.can_id = can_id;
     frame.can_dlc = sizeof(*rtt_time);
#ifdef CONFIG_XENO_COBALT
    pthread_setname_np(pthread_self(), "rtcan_rtt_transmitter");
#endif
    pthread_setschedparam(pthread_self(), SCHED_FIFO, &param);
    clock_gettime(CLOCK_MONOTONIC, &next_period);
    while(1) {
        next_period.tv_nsec += cycle * 1000;
         while (next_period.tv_nsec >= NSEC_PER_SEC) {
                  next_period.tv_nsec -= NSEC_PER_SEC;
                  next_period.tv_sec++;
         }
         clock_nanosleep(CLOCK_MONOTONIC, TIMER_ABSTIME, &next_period, NULL);
         if (rxcount != txcount) {
             overruns++;
             continue;
         clock_gettime(CLOCK_MONOTONIC, &time);
         *rtt_time = (long long)time.tv_sec * NSEC_PER_SEC + time.tv_nsec;
         /* Transmit the message containing the local time */
if (send(txsock, (void *)&frame, sizeof(struct can_frame), 0) < 0) {
   if (errno == EBADF)</pre>
                 printf("terminating transmitter thread\n");
             else
                 perror("send failed");
             return NULL;
         txcount++;
    }
}
static void *receiver(void *arg)
     struct sched_param param = { .sched_priority = 82 };
     struct timespec time;
     struct can_frame frame;
     long long *rtt_time = (long long *)frame.data;
     struct rtt_stat rtt_stat = {0, 1000000000000000LL, -100000000000000000LL,
                                   0. 0. 0}:
#ifdef CONFIG_XENO_COBALT
    pthread_setname_np(pthread_self(), "rtcan_rtt_receiver");
    pthread_setschedparam(pthread_self(), SCHED_FIFO, &param);
    rtt_stat.counts_per_sec = 1000000 / cycle;
```

```
while (1) {
          if (recv(rxsock, (void *)&frame, sizeof(struct can_frame), 0) < 0) {</pre>
               if (errno == EBADF)
                  printf("terminating receiver thread\n");
               else
                  perror("recv failed");
              return NULL;
          if (repeater) {
              /* Transmit the message back as is */
if (send(txsock, (void *)&frame, sizeof(struct can_frame), 0) < 0) {
   if (errno == EBADF)</pre>
                        printf("terminating transmitter thread\n");
                        perror("send failed");
                   return NULL;
              }
              txcount++;
          } else {
              clock_gettime(CLOCK_MONOTONIC, &time);
               if (rxcount > 0) {
                   rtt_stat.rtt = ((long long)time.tv_sec * 1000000000LL +
                                       time.tv_nsec - *rtt_time);
                   rtt_stat.rtt_sum += rtt_stat.rtt;
if (rtt_stat.rtt < rtt_stat.rtt_min)</pre>
                        rtt_stat.rtt_min = rtt_stat.rtt;
                   if (rtt_stat.rtt > rtt_stat.rtt_max)
                        rtt_stat.rtt_max = rtt_stat.rtt;
              }
          }
          rxcount++:
          if ((rxcount % rtt_stat.counts_per_sec) == 0) {
               mq_send(mq, (char *)&rtt_stat, sizeof(rtt_stat), 0);
              rtt_stat.rtt_sum_last = rtt_stat.rtt_sum;
     }
}
static void catch_signal(int sig)
     mq_close(mq);
}
int main(int argc, char *argv[])
     struct sched_param param = { .sched_priority = 1 };
     pthread_attr_t thattr;
     struct mq_attr mqattr;
     struct sockaddr_can rxaddr, txaddr;
     struct can_filter rxfilter[1];
     struct rtt_stat rtt_stat;
     char mqname[32];
char *txdev, *rxdev;
struct ifreq ifr;
     int ret, opt;
     struct option long_options[] = {
    { "id", required_argument, 0, 'i'},
    { "cycle", required_argument, 0, 'c'},
    { "repeater", no_argument, 0, 'r'},
    { "help", no_argument, 0, 'h'},
    { 0, 0, 0, 0},
}
     };
     while ((opt = getopt_long(argc, argv, "hri:c:",
                                     long_options, NULL)) != -1) {
          switch (opt) {
          case 'c':
              cycle = atoi(optarg);
              break;
          case 'i':
              can_id = strtoul(optarg, NULL, 0);
          case 'r':
              repeater = 1;
              break:
              fprintf(stderr, "Unknown option %c\n", opt);
          case 'h':
              print_usage(argv[0]);
               exit(-1);
          }
```

9.3 can-rtt.c 547

```
}
printf("%d %d\n", optind, argc);
if (optind + 2 != argc) {
    print_usage(argv[0]);
    exit(0);
txdev = argv[optind];
rxdev = argv[optind + 1];
  * Create and configure RX socket */
if ((rxsock = socket(PF_CAN, SOCK_RAW, CAN_RAW)) < 0) {</pre>
    perror("RX socket failed");
     return -1;
strncpy(ifr.ifr_name, rxdev, IFNAMSIZ);
printf("RX rxsock=%d, ifr_name=%s\n", rxsock, ifr.ifr_name);
if (ioctl(rxsock, SIOCGIFINDEX, &ifr) < 0) {</pre>
    perror("RX ioctl SIOCGIFINDEX failed");
     goto failure1;
/* We only want to receive our own messages */
rxfilter[0].can_id = can_id;
rxfilter[0].can_mask = 0x3ff;
if (setsockopt(rxsock, SOL_CAN_RAW, CAN_RAW_FILTER,
    &rxfilter, sizeof(struct can_filter)) < 0) {
perror("RX setsockopt CAN_RAW_FILTER failed");</pre>
    goto failure1;
memset(&rxaddr, 0, sizeof(rxaddr));
rxaddr.can_ifindex = ifr.ifr_ifindex;
rxaddr.can_family = AF_CAN;
if (bind(rxsock, (struct sockaddr *)&rxaddr, sizeof(rxaddr)) < 0) {</pre>
    perror("RX bind failed\n");
    goto failure1;
}
/* Create and configure TX socket */
if (strcmp(rxdev, txdev) == 0) {
    txsock = rxsock;
    if ((txsock = socket(PF_CAN, SOCK_RAW, 0)) < 0) {
   perror("TX socket failed");</pre>
         goto failure1;
    strncpy(ifr.ifr_name, txdev, IFNAMSIZ);
    printf("TX txsock=%d, ifr_name=%s\n", txsock, ifr.ifr_name);
    if (ioctl(txsock, SIOCGIFINDEX, &ifr) < 0) {</pre>
         perror("TX ioctl SIOCGIFINDEX failed");
         goto failure2;
    /* Suppress definition of a default receive filter list */
if (setsockopt(txsock, SOL_CAN_RAW, CAN_RAW_FILTER, NULL, 0) < 0) {</pre>
         perror("TX setsockopt CAN_RAW_FILTER failed");
         goto failure2;
    memset(&txaddr, 0, sizeof(txaddr));
    txaddr.can_ifindex = ifr.ifr_ifindex;
txaddr.can_family = AF_CAN;
    if (bind(txsock, (struct sockaddr *)&txaddr, sizeof(txaddr)) < 0) {</pre>
              perror("TX bind failed\n");
              goto failure2;
    }
}
signal(SIGTERM, catch_signal);
signal(SIGINT, catch_signal);
signal(SIGHUP, catch_signal);
mlockall(MCL_CURRENT|MCL_FUTURE);
printf("Round-Trip-Time test %s -> %s with CAN ID 0x%x\n",
argv[optind], argv[optind + 1], can_id);
printf("Cycle time: %d us\n", cycle);
printf("All RTT timing figures are in us.\n");
/* Create statistics message queue */
snprintf(mqname, sizeof(mqname), "/rtcan_rtt-%d", getpid());
```

```
mqattr.mq_flags = 0;
   mqattr.mq_maxmsg = 100;
  mqattr.mq_msgsize = sizeof(struct rtt_stat);
   mq = mq_open(mqname, O_RDWR | O_CREAT | O_EXCL, 0600, &mqattr);
   if (mq == (mqd_t)-1) {
       perror("opening mqueue failed");
       goto failure2;
   /* Create receiver RT-thread */
   pthread_attr_init(&thattr);
   pthread_attr_setdetachstate(&thattr, PTHREAD_CREATE_JOINABLE);
   pthread_attr_setstacksize(&thattr, PTHREAD_STACK_MIN);
   ret = pthread_create(&rxthread, &thattr, &receiver, NULL);
   if (ret) {
       fprintf(stderr, \ \ "\%s: \ pthread\_create(receiver) \ failed \backslash n",
               strerror(-ret));
       goto failure3;
   }
   if (!repeater) {
       /* Create transitter RT-thread */
       ret = pthread_create(&txthread, &thattr, &transmitter, NULL);
       if (ret) {
           fprintf(stderr, "%s: pthread_create(transmitter) failed\n",
                    strerror(-ret));
           goto failure4;
       }
   }
   pthread_setschedparam(pthread_self(), SCHED_FIFO, &param);
      printf("Messages\n");
       printf("Messages RTTlast RTT_avg RTT_min RTT_max Overruns\n");
      long long rtt_avg;
       ret = mq_receive(mq, (char *)&rtt_stat, sizeof(rtt_stat), NULL);
       if (ret != sizeof(rtt_stat)) {
           if (ret < 0) {
   if (errno == EBADF)</pre>
                   printf("terminating mq_receive\n");
               else
                  perror("mq_receive failed");
           } else
               fprintf(stderr,
                        "mq_receive returned invalid length %d\n", ret);
           break;
       }
       if (repeater) {
           printf("%8d\n", rxcount);
       } else {
           rtt_avg = ((rtt_stat.rtt_sum - rtt_stat.rtt_sum_last) /
                       rtt_stat.counts_per_sec);
           printf("%8d %7ld %7ld %7ld %7ld %8d\n", rxcount,
                   (long)(rtt_stat.rtt / 1000), (long)(rtt_avg / 1000), (long)(rtt_stat.rtt_min / 1000),
                   (long)(rtt_stat.rtt_max / 1000),
                  overruns);
   }
   ^{\prime \star} This call also leaves primary mode, required for socket cleanup. ^{\star \prime}
  printf("shutting down\n");
     Important: First close the sockets! */
   while ((close(rxsock) < 0) && (errno == EAGAIN)) {</pre>
       printf("RX socket busy - waiting...\n");
       sleep(1);
   while ((close(txsock) < 0) && (errno == EAGAIN)) {</pre>
       printf("TX socket busy - waiting...\n");
       sleep(1);
   pthread_join(txthread, NULL);
   pthread_kill(rxthread, SIGHUP);
   pthread_join(rxthread, NULL);
   return 0;
failure4:
   pthread_kill(rxthread, SIGHUP);
```

9.4 cross-link.c 549

```
pthread_join(rxthread, NULL);
failure3:
    mq_close(mq);
failure2:
    close(txsock);
failure1:
    close(rxsock);

    return 1;
}
```

#### 9.4 cross-link.c

```
/*
* cross-link.c
   Userspace test program (Xenomai alchemy skin) for RTDM-based UART drivers Copyright 2005 by Joerg Langenberg <joergel75@gmx.net>
 * Updates by Jan Kiszka <jan.kiszka@web.de>
 * This program is free software; you can redistribute it and/or modify
 * it under the terms of the GNU General Public License as published by
   the Free Software Foundation; either version 2 of the License, or
 * (at your option) any later version.
 * This program is distributed in the hope that it will be useful,
 * but WITHOUT ANY WARRANTY; without even the implied warranty of
 * MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the
 * GNU General Public License for more details.
 * You should have received a copy of the GNU General Public License
 * along with this program; if not, write to the Free Software
 * Foundation, Inc., 675 Mass Ave, Cambridge, MA 02139, USA.
#include <stdio.h>
#include <signal.h>
#include <unistd.h>
#include <sys/mman.h>
#include <alchemy/task.h>
#include <alchemy/timer.h>
#include <rtdm/serial.h>
#define MAIN_PREFIX "main : "
#define WTASK_PREFIX "write_task: "
#define RTASK_PREFIX "read_task: "
                       "rtser0"
#define WRITE FILE
                       "rtser1"
#define READ FILE
int read_fd = -1;
int write_fd = -1;
#define STATE FILE OPENED
#define STATE_TASK_CREATED
unsigned int read_state = 0;
unsigned int write_state = 0;
                              --s-ms-us-ns */
RTIME write_task_period_ns = 1000000000llu;
RT_TASK write_task;
RT_TASK read_task;
static const struct rtser_config read_config = {
         .config_mask = 0xFFFF,
         .baud_rate
                            = 115200,
         .parity
                            = RTSER DEF PARITY.
         .data_bits
                            = RTSER_DEF_BITS,
                            = RTSER_DEF_STOPB,
         .stop_bits
         .handshake
                            = RTSER_DEF_HAND,
         .fifo_depth
                            = RTSER_DEF_FIFO_DEPTH,
         .rx_timeout
                            = RTSER DEF TIMEOUT.
                           = RTSER_DEF_TIMEOUT,
         .tx timeout
                            = 1000000000, /* 1 s
        .event_timeout
         .timestamp_history = RTSER_RX_TIMESTAMP_HISTORY,
                            = RTSER_EVENT_RXPEND,
};
static const struct rtser_config write_config = {
    .config_mask = RTSER_SET_BAUD | RTSER_SET_TIMESTAMP_HISTORY,
                             = 115200,
         .timestamp_history = RTSER_DEF_TIMESTAMP_HISTORY,
```

```
/* the rest implicitly remains default */
static int close_file( int fd, char *name)
        int err, i=0;
        do {
                i++;
                err = rt_dev_close(fd);
                switch (err) {
                case -EAGAIN:
                        printf(MAIN_PREFIX "%s -> EAGAIN (%d times)\n",
                               name, i);
                         rt_task_sleep(50000); /* wait 50us */
                        break;
                case 0:
                         printf(MAIN_PREFIX "%s -> closed\n", name);
                         break;
                default:
                         printf(MAIN\_PREFIX "%s -> %s\n", name,
                                strerror(-err));
                        break:
        } while (err == -EAGAIN && i < 10);</pre>
        return err;
}
static void cleanup_all(void)
{
        if (read_state & STATE_FILE_OPENED) {
                close_file(read_fd, READ_FILE" (read)");
                read_state &= ~STATE_FILE_OPENED;
        if (write_state & STATE_FILE_OPENED) {
                close_file(write_fd, WRITE_FILE " (write)");
                write_state &= ~STATE_FILE_OPENED;
        }
        if (write_state & STATE_TASK_CREATED) {
                printf(MAIN_PREFIX "delete write_task\n");
                 rt_task_delete(&write_task);
                write_state &= ~STATE_TASK_CREATED;
        if (read_state & STATE_TASK_CREATED) {
    printf(MAIN_PREFIX "delete read_task\n");
                rt_task_delete(&read_task);
                read_state &= ~STATE_TASK_CREATED;
}
static void catch_signal(int sig)
{
        cleanup_all();
        printf(MAIN_PREFIX "exit\n");
        return,
}
static void write_task_proc(void *arg)
        RTIME write_time;
        ssize_t sz = sizeof(RTIME);
        int written = 0;
        err = rt_task_set_periodic(NULL, TM_NOW,
                                    rt_timer_ns2ticks(write_task_period_ns));
        if (err) {
                printf(WTASK_PREFIX "error on set periodic, %s\n",
                       strerror(-err));
                goto exit_write_task;
        while (1) {
                err = rt_task_wait_period(NULL);
                if (err) {
                        printf(WTASK_PREFIX
                                 "error on rt_task_wait_period, %s\n",
                                strerror(-err));
                         break;
                write_time = rt_timer_read();
```

9.4 cross-link.c 551

```
written = rt_dev_write(write_fd, &write_time, sz);
                  if (written < 0 ) {</pre>
                          printf(WTASK_PREFIX "error on rt_dev_write, %s\n",
                                 strerror(-err));
                          break:
                  } else if (written != sz) {
                          printf(WTASK_PREFIX "only %d / %zd byte transmitted\n",
                                  written, sz);
                  }
         }
 exit_write_task:
         if ((write_state & STATE_FILE_OPENED) &&
    close_file(write_fd, WRITE_FILE " (write)") == 0)
                  write_state &= ~STATE_FILE_OPENED;
         printf(WTASK_PREFIX "exit\n");
static void read_task_proc(void *arg)
         int err;
         int nr = 0;
         RTIME read_time = 0;
         RTIME write_time = 0;
         RTIME irq_time = 0;
         ssize_t sz = sizeof(RTIME);
         int read = 0;
         struct rtser_event rx_event;
         printf(" Nr | write->irq | irq->read | write->read |\n");
printf("-----\n");
         * We are in secondary mode now due to printf, the next
* blocking Xenomai or driver call will switch us back
          * (here: RTSER_RTIOC_WAIT_EVENT).
        while (1) {
     /* waiting for event */
                  err = rt_dev_ioctl(read_fd, RTSER_RTIOC_WAIT_EVENT, &
      rx_event);
                  if (err) {
                          printf(RTASK_PREFIX
                                  "error on RTSER_RTIOC_WAIT_EVENT, %s\n",
                                  strerror(-err));
                           if (err == -ETIMEDOUT)
                                  continue:
                          break;
                  }
                  irq_time = rx_event.rxpend_timestamp;
                  read = rt_dev_read(read_fd, &write_time, sz);
                  if (read == sz) {
                          read_time = rt_timer_read();
                          printf("%3d |%16llu |%16llu |%16llu\n", nr,
                                 irq_time - write_time,
read_time - irq_time,
                                  read_time - write_time);
                          nr++;
                  } else if (read < 0 ) {</pre>
                          printf(RTASK_PREFIX "error on rt_dev_read, code %s\n",
                                  strerror(-err));
                          break:
                  } else {
                          printf(RTASK_PREFIX "only %d / %zd byte received \n",
                                 read. sz):
                          break;
                  }
         }
         if ((read_state & STATE_FILE_OPENED) &&
             close_file(read_fd, READ_FILE " (read)") == 0)
    read_state &= ~STATE_FILE_OPENED;
         printf(RTASK_PREFIX "exit\n");
}
int main(int argc, char* argv[])
{
         signal(SIGTERM, catch_signal);
         signal(SIGINT, catch_signal);
```

```
/* no memory-swapping for this programm */
       mlockall(MCL_CURRENT | MCL_FUTURE);
       /* open rtser0 */
       write_fd = rt_dev_open( WRITE_FILE, 0);
if (write_fd < 0) {</pre>
               printf(MAIN_PREFIX "can't open %s (write), %s\n", WRITE_FILE,
                      strerror(-write_fd));
               goto error;
       write state |= STATE FILE OPENED:
       printf(MAIN_PREFIX "write-file opened\n");
       /* writing write-config */
       err = rt_dev_ioctl(write_fd, RTSER_RTIOC_SET_CONFIG, &
     write_config);
       if (err) {
               printf(MAIN_PREFIX "error while RTSER_RTIOC_SET_CONFIG, %s\n",
                      strerror(-err));
               goto error;
       printf(MAIN_PREFIX "write-config written\n");
       /* open rtser1 */
       read_fd = rt_dev_open( READ_FILE, 0 );
       if (read_fd < 0) {</pre>
               printf(MAIN_PREFIX "can't open %s (read), %s\n", READ_FILE,
                      strerror(-read_fd));
               goto error;
       read_state |= STATE_FILE_OPENED;
       printf(MAIN_PREFIX "read-file opened\n");
       /* writing read-config */
       err = rt_dev_ioctl(read_fd, RTSER_RTIOC_SET_CONFIG, &read_config)
       if (err) {
               printf(MAIN_PREFIX "error while rt_dev_ioctl, %s\n",
                      strerror(-err));
               goto error;
       printf(MAIN_PREFIX "read-config written\n");
       /* create write_task */
       err = rt_task_create(&write_task, "write_task", 0, 50, 0);
       if (err) {
               printf(MAIN_PREFIX "failed to create write_task, %s\n",
                      strerror(-err));
               goto error:
       write_state |= STATE_TASK_CREATED;
       printf(MAIN_PREFIX "write-task created\n");
       /* create read_task */
       err = rt_task_create(&read_task, "read_task", 0, 51, 0);
       if (err) {
               printf(MAIN_PREFIX "failed to create read_task, %s\n",
                      strerror(-err));
               goto error;
       read_state |= STATE_TASK_CREATED;
       printf(MAIN_PREFIX "read-task created\n");
       /* start write_task */
printf(MAIN_PREFIX "starting write-task\n");
       err = rt_task_start(&write_task, &write_task_proc, NULL);
       if (err) {
               printf(MAIN_PREFIX "failed to start write_task, %s\n",
                      strerror(-err)):
               goto error;
       }
       /* start read_task */
printf(MAIN_PREFIX "starting read-task\n");
       err = rt_task_start(&read_task,&read_task_proc,NULL);
              printf(MAIN_PREFIX "failed to start read_task, %s\n",
                      strerror(-err));
               goto error;
       }
       pause();
       return 0;
error:
       cleanup_all();
       return err:
```

9.5 iddp-label.c 553

}

## 9.5 iddp-label.c

```
* IDDP-based client/server demo, using the write(2)/recvfrom(2)
   system calls to exchange data over a socket.
 * In this example, two sockets are created. A server thread (reader)
 ^{st} is bound to a labeled real-time port and receives datagrams sent to
 * this port from a client thread (writer). The client thread attaches
   to the port opened by the server using a labeled connection
 * request. The client socket is bound to a different port, only to
   provide a valid peer name; this is optional.
 * ASCII labels can be attached to bound ports, in order to connect
   sockets to them in a more descriptive way than using plain numeric
 * port values.
 * See Makefile in this directory for build directives.
#include <sys/mman.h>
#include <stdio.h>
#include <stdlib.h>
#include <unistd.h>
#include <signal.h>
#include <string.h>
#include <pthread.h>
#include <errno.h>
#include <rtdm/ipc.h>
pthread_t svtid, cltid;
#define IDDP_CLPORT 27
#define IDDP PORT LABEL "iddp-demo"
static const char *msg[] = {
    "Surfing With The Alien",
    "Lords of Karma",
    "Banana Mango",
"Psycho Monkey"
    "Luminous Flesh Giants",
    "Moroccan Sunset",
    "Satch Boogie"
    "Flying In A Blue Dream",
    "Ride",
    "Summer Song",
    "Speed Of Light",
    "Crystal Planet",
    "Raspberry Jam Delta-V",
    "Champagne?",
    "Clouds Race Across The Sky",
     "Engines Of Creation"
}:
static void fail(const char *reason)
        perror(reason);
        exit(EXIT_FAILURE);
}
static void *server(void *arg)
        struct sockaddr_ipc saddr, claddr;
        struct rtipc_port_label plabel;
        socklen_t addrlen;
char buf[128];
        int ret, s;
        s = socket(AF_RTIPC, SOCK_DGRAM, IPCPROTO_IDDP);
        /*

* We will use Xenomai's system heap for datagram, so no

* IDDP_POOLSZ required here.
        /*

* Set a port label. This name will be registered when

the port number (if given).
         * binding, in addition to the port number (if given).
```

```
strcpy(plabel.label, IDDP_PORT_LABEL);
         ret = setsockopt(s, SOL_IDDP, IDDP_LABEL
                             &plabel, sizeof(plabel));
         if (ret)
                   fail("setsockopt");
         /*

* Bind the socket to the port. Assign that port a label, so
          \ensuremath{^{*}} that peers may use a descriptive information to locate
           * it. Labeled ports will appear in the
          * /proc/xenomai/registry/rtipc/iddp directory once the socket
          * is bound.
          * saddr.sipc_port specifies the port number to use. If -1 is
          * passed, the IDDP driver will auto-select an idle port.
         saddr.sipc_family = AF_RTIPC;
saddr.sipc_port = -1;    /* Pick next free */
ret = bind(s, (struct sockaddr *)&saddr, sizeof(saddr));
         if (ret)
                   fail("bind");
         for (;;) {
                   addrlen = sizeof(saddr);
                   ret = recvfrom(s, buf, sizeof(buf), 0,
(struct sockaddr *)&claddr, &addrlen);
                   if (ret < 0) {</pre>
                            close(s);
                            fail("recvfrom");
                   }
                   rt_printf("%s: received %d bytes, \"%.*s\" from port %d\n",
                              __FUNCTION__, ret, ret, buf, claddr.sipc_port);
         }
         return NULL;
}
static void *client(void *arg)
{
         struct sockaddr_ipc svsaddr, clsaddr;
         struct rtipc_port_label plabel;
int ret, s, n = 0, len;
struct timespec ts;
         s = socket(AF_RTIPC, SOCK_DGRAM, IPCPROTO_IDDP);
         if (s < 0)
                  fail("socket");
          * Set a name on the client socket. This is strictly optional,
          * and only done here for the purpose of getting back a
          * different port number in recvfrom().
         clsaddr.sipc_family = AF_RTIPC;
clsaddr.sipc_port = IDDP_CLPORT;
         ret = bind(s, (struct sockaddr *)&clsaddr, sizeof(clsaddr));
         if (ret)
                   fail("bind");
         ^{\prime*} * Set the port label. This name will be used to find the peer
          \ensuremath{^{*}} when connecting, instead of the port number. The label must
          * be set _after_ the socket is bound to the port, so that
* IDDP does not try to register this label for the client
          * port as well (like the server thread did).
         if (ret)
                   fail("setsockopt");
         memset(&svsaddr, 0, sizeof(svsaddr));
svsaddr.sipc_family = AF_RTIPC;
svsaddr.sipc_port = -1; /* Tell IDDP to search by label. */
         ret = connect(s, (struct sockaddr *)&svsaddr, sizeof(svsaddr));
         if (ret)
                   fail("connect");
         for (;;) {
                   len = strlen(msg[n]);
                   /* Send to default destination we connected to. */
                   ret = write(s, msg[n], len);
                   if (ret < 0) {</pre>
                            close(s);
                            fail("sendto");
                   }
```

9.6 iddp-sendrecv.c 555

```
rt_printf("%s: sent %d bytes, \"%.*s\"\n",
                   __FUNCTION__, ret, ret, msg[n]);
n = (n + 1) % (sizeof(msg) / sizeof(msg[0]));
                    * We run in full real-time mode (i.e. primary mode),
* so we have to let the system breathe between two
                    * iterations.
                   ts.tv_sec = 0;
                   ts.tv_nsec = 500000000; /* 500 ms */
                   clock_nanosleep(CLOCK_REALTIME, 0, &ts, NULL);
         return NULL;
}
static void cleanup_upon_sig(int sig)
{
         pthread_cancel(svtid);
         pthread_cancel(cltid);
         signal(sig, SIG_DFL);
         pthread_join(svtid, NULL);
         pthread_join(cltid, NULL);
}
int main(int argc, char **argv)
         struct sched_param svparam = {.sched_priority = 71 };
struct sched_param clparam = {.sched_priority = 70 };
         pthread_attr_t svattr, clattr;
         sigset t mask. oldmask:
         mlockall(MCL_CURRENT | MCL_FUTURE);
         sigemptyset(&mask);
         sigaddset(&mask, SIGINT);
         signal(SIGINT, cleanup_upon_sig);
         sigaddset(&mask, SIGTERM);
         signal(SIGTERM, cleanup_upon_sig);
         sigaddset(&mask, SIGHUP);
         signal(SIGHUP, cleanup_upon_sig);
pthread_sigmask(SIG_BLOCK, &mask, &oldmask);
          * This is a real-time compatible printf() package from
* Xenomai's RT Development Kit (RTDK), that does NOT cause
          \mbox{\ensuremath{^{\ast}}} any transition to secondary mode.
         rt_print_auto_init(1);
         pthread_attr_init(&svattr);
         pthread_attr_setdetachstate(&svattr, PTHREAD_CREATE_JOINABLE);
         \tt pthread\_attr\_setinheritsched(\&svattr, PTHREAD\_EXPLICIT\_SCHED); \\
         pthread_attr_setschedpolicy(&svattr, SCHED_FIF0);
         pthread_attr_setschedparam(&svattr, &svparam);
         errno = pthread_create(&svtid, &svattr, &server, NULL);
         if (errno)
                   fail("pthread_create");
         pthread_attr_init(&clattr);
         pthread_attr_setdetachstate(&clattr, PTHREAD_CREATE_JOINABLE);
         pthread_attr_setinheritsched(&clattr, PTHREAD_EXPLICIT_SCHED);
         pthread_attr_setschedpolicy(&clattr, SCHED_FIF0);
         pthread_attr_setschedparam(&clattr, &clparam);
         errno = pthread_create(&cltid, &clattr, &client, NULL);
         if (errno)
                   fail("pthread_create");
         sigsuspend(&oldmask);
         return 0:
```

# 9.6 iddp-sendrecv.c

```
/*
  * IDDP-based client/server demo, using the sendto(2)/recvfrom(2)
  * system calls to exchange data over a socket.
  *
  * In this example, two sockets are created. A server thread (reader)
  * is bound to a real-time port and receives datagrams sent to this
```

```
* port from a client thread (writer). The client socket is bound to a
 * different port, only to provide a valid peer name; this is
 * optional.
 \ensuremath{^{*}} See Makefile in this directory for build directives.
#include <sys/mman.h>
#include <stdio.h>
#include <stdlib.h>
#include <unistd.h>
#include <signal.h>
#include <string.h>
#include <pthread.h>
#include <errno.h>
#include <rtdm/ipc.h>
pthread t sytid. cltid:
#define IDDP_SVPORT 12
#define IDDP_CLPORT 13
static const char *msg[] = {
    "Surfing With The Alien",
"Lords of Karma",
     "Banana Mango",
     "Psycho Monkey"
     "Luminous Flesh Giants",
     "Moroccan Sunset",
     "Satch Boogie"
     "Flying In A Blue Dream",
     "Ride",
     "Summer Song",
     "Speed Of Light",
     "Crystal Planet"
     "Raspberry Jam Delta-V", "Champagne?",
     "Clouds Race Across The Sky",
     "Engines Of Creation"
static void fail(const char *reason)
{
         perror(reason):
         exit(EXIT_FAILURE);
}
static void *server(void *arg)
{
         struct sockaddr_ipc saddr, claddr;
         socklen_t addrlen;
         char buf[128];
         size_t poolsz;
         int ret, s;
         s = socket(AF_RTIPC, SOCK_DGRAM, IPCPROTO_IDDP);
         if (s < 0)
                  fail("socket");
        /*

* Set a local 32k pool for the server endpoint. Memory needed

* to convey datagrams will be pulled from this pool, instead

* of Xenomai's system pool.
         poolsz = 32768; /* bytes */
         ret = setsockopt(s, SOL_IDDP, IDDP_POOLSZ,
                           &poolsz, sizeof(poolsz));
        if (ret)
     fail("setsockopt");
         saddr.sipc_family = AF_RTIPC;
         saddr.sipc_port = IDDP_SVPORT;
         ret = bind(s, (struct sockaddr *)&saddr, sizeof(saddr));
         if (ret)
                  fail("bind");
         for (;;) {
                  addrlen = sizeof(saddr);
                  ret = recvfrom(s, buf, sizeof(buf), 0,
                                   (struct sockaddr *)&claddr, &addrlen);
                  if (ret < 0) {</pre>
                           close(s);
                           fail("recvfrom");
                  rt_printf("%s: received %d bytes, \"%.*s\" from port %d\n",
                             __FUNCTION__, ret, ret, buf, claddr.sipc_port);
         }
```

```
return NULL;
}
static void *client(void *arg)
        struct sockaddr_ipc svsaddr, clsaddr;
        int ret, s, n = 0, len;
        struct timespec ts;
        s = socket(AF_RTIPC, SOCK_DGRAM, IPCPROTO_IDDP);
        if (s < 0)
                fail("socket");
        clsaddr.sipc_family = AF_RTIPC;
        clsaddr.sipc_port = IDDP_CLPORT;
        ret = bind(s, (struct sockaddr *)&clsaddr, sizeof(clsaddr));
        if (ret)
                 fail("bind");
        svsaddr.sipc_family = AF_RTIPC;
        svsaddr.sipc_port = IDDP_SVPORT;
        for (;;) {
                 len = strlen(msg[n]);
                 ret = sendto(s, msg[n], len, 0,
                              (struct sockaddr *)&svsaddr, sizeof(svsaddr));
                 if (ret < 0) {</pre>
                         close(s);
                         fail("sendto");
                 }
                 rt_printf("%s: sent %d bytes, \"%.*s\"\n",
                 __FUNCTION__, ret, ret, msg[n]);
n = (n + 1) % (sizeof(msg) / sizeof(msg[0]));
                /*

* We run in full real-time mode (i.e. primary mode),
                 \ensuremath{^{*}} so we have to let the system breathe between two
                  \ast iterations.
                 ts.tv_sec = 0;
                 ts.tv_nsec = 500000000; /* 500 ms */
                 clock_nanosleep(CLOCK_REALTIME, 0, &ts, NULL);
        return NULL;
}
static void cleanup_upon_sig(int sig)
        pthread_cancel(svtid);
        pthread_cancel(cltid);
        signal(sig, SIG_DFL);
        pthread_join(svtid, NULL);
        pthread_join(cltid, NULL);
}
int main(int argc, char **argv)
{
        struct sched_param svparam = {.sched_priority = 71 };
        struct sched_param clparam = {.sched_priority = 70 };
        pthread_attr_t svattr, clattr;
        sigset_t mask, oldmask;
        mlockall(MCL_CURRENT | MCL_FUTURE);
        sigemptyset(&mask);
        sigaddset(&mask, SIGINT);
        signal(SIGINT, cleanup_upon_sig);
        sigaddset(&mask, SIGTERM);
        signal(SIGTERM, cleanup_upon_sig);
signaddset(&mask, SIGHUP);
        signal(SIGHUP, cleanup_upon_sig);
        pthread_sigmask(SIG_BLOCK, &mask, &oldmask);
         * This is a real-time compatible printf() package from
         * Xenomai's RT Development Kit (RTDK), that does NOT cause
         * any transition to secondary mode.
        rt_print_auto_init(1);
        pthread attr init(&svattr):
        pthread_attr_setdetachstate(&svattr, PTHREAD_CREATE_JOINABLE);
        pthread_attr_setinheritsched(&svattr, PTHREAD_EXPLICIT_SCHED);
        pthread_attr_setschedpolicy(&svattr, SCHED_FIF0);
        pthread_attr_setschedparam(&svattr, &svparam);
        errno = pthread_create(&svtid, &svattr, &server, NULL);
        if (errno)
```

### 9.7 rtcanconfig.c

```
* Program to configuring the CAN controller
  Copyright (C) 2006 Wolfgang Grandegger <wg@grandegger.com>
  Copyright (C) 2005, 2006 Sebastian Smolorz
                            <Sebastian.Smolorz@stud.uni-hannover.de>
 * This program is free software; you can redistribute it and/or modify
 * it under the terms of the GNU General Public License as published by
  the Free Software Foundation; either version 2 of the License, or
  (at your option) any later version.
 * This program is distributed in the hope that it will be useful,
 * but WITHOUT ANY WARRANTY; without even the implied warranty of
 * MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the
 * GNU General Public License for more details.
* You should have received a copy of the GNU General Public License
 * along with this program; if not, write to the Free Software
 * Foundation, Inc., 675 Mass Ave, Cambridge, MA 02139, USA.
#include <stdio.h>
#include <stdlib.h>
#include <signal.h>
#include <unistd.h>
#include <string.h>
#include <time.h>
#include <errno.h>
#include <getopt.h>
#include <sys/mman.h>
#include <rtdm/can.h>
static void print_usage(char *prg)
            "Usage: %s <can-interface> [Options] [up|down|start|stop|sleep]\n"
            "Options:\n"
             -v, --verbose
                                        be verbose\n'
            " -h, --help
                                        this help\n"
            " -c, --ctrlmode=CTRLMODE listenonly, loopback or none\n"
            " -b, --baudrate=BPS
                                        baudrate in bits/sec\n"
            "-B, --bittime=BTR0:BTR1 BTR or standard bit-time\n"
            "-B, --bittime=BRP:PROP_SEG:PHASE_SEG1:PHASE_SEG2:SJW:SAM\n",
            prg);
static can_baudrate_t string_to_baudrate(char *str)
    can_baudrate_t baudrate;
    if (sscanf(str, "%i", &baudrate) != 1)
        return -1:
    return baudrate;
static int string_to_mode(char *str)
    if ( !strcmp(str, "up") || !strcmp(str, "start") )
    return CAN_MODE_START;
    else if ( !strcmp(str, "down") || !strcmp(str, "stop") )
        return CAN_MODE_STOP;
```

9.7 rtcanconfig.c 559

```
else if ( !strcmp(str, "sleep") )
          return CAN_MODE_SLEEP;
     return -EINVAL;
}
static int string_to_ctrlmode(char *str)
{
     if (!strcmp(str, "listenonly") )
    return CAM_CTRLMODE_LISTENONLY;
else if (!strcmp(str, "loopback") )
    return CAM_CTRLMODE_LOOPBACK;
     else if ( !strcmp(str, "none") )
          return 0;
     return -1;
}
int main(int argc, char *argv[])
     char
               ifname[16];
               can_fd = -1;
     int
               new_baudrate = -1;
     int
               new\_mode = -1;
               new_ctrlmode = 0, set_ctrlmode = 0;
     int
               verbose = 0;
     int
               bittime_count = 0, bittime_data[6];
     int
     can_baudrate_t *baudrate;
can_ctrlmode_t *ctrlmode;
     can_mode_t *mode;
     union {
       struct ifreq ifr;
       struct can_bittime bittime;
       can_baudrate_t baudrate;
       can_ctrlmode_t ctrlmode;
       can_mode_t mode;
     } u:
     struct can_bittime *bittime;
     int opt, ret;
     char* ptr;
     struct option long_options[] = {
    { "help", no_argument, 0, 'h' },
    { "verbose", no_argument, 0, 'v'},
    { "baudrate", required_argument, 0, 'b'},
    { "bittime", required_argument, 0, 'B'},
    { "ctrlmode", required_argument, 0, 'c'},
          { 0, 0, 0, 0},
     };
     while ((opt = getopt_long(argc, argv, "hvb:B:c:",
                                       long_options, NULL)) != -1) {
          switch (opt) {
          case 'h':
               print_usage(argv[0]);
               exit(0);
          case 'v':
               verbose = 1;
               break;
          case 'b':
               new_baudrate = string_to_baudrate(optarg);
if (new_baudrate == -1) {
                    print_usage(argv[0]);
                     exit(0);
               break:
          case 'B':
               ptr = optarg;
               while (1) {
                     bittime_data[bittime_count++] = strtoul(ptr, NULL, 0);
                     if (!(ptr = strchr(ptr, ':')))
                          break;
                    ptr++;
                if (bittime_count != 2 && bittime_count != 6) {
                    print_usage(argv[0]);
                     exit(0);
               }
               break;
          case 'c':
               ret = string_to_ctrlmode(optarg);
               if (ret == -1) {
                    print_usage(argv[0]);
                     exit(0):
```

```
}
        new_ctrlmode |= ret;
        set_ctrlmode = 1;
        break:
        break;
    default:
        fprintf(stderr, "Unknown option %c\n", opt);
        break:
    }
}
/* Get CAN interface name */
if (optind != argc - 1 && optind != argc - 2) {
    print_usage(argv[0]);
    return 0:
}
strncpy(ifname, argv[optind], IFNAMSIZ);
strncpy(u.ifr.ifr_name, ifname, IFNAMSIZ);
if (optind == argc - 2) { /* Get mode setting */
    new_mode = string_to_mode(argv[optind + 1]);
    if (verbose)
        printf("mode: %s (%#x)\n", argv[optind + 1], new_mode);
    if (new_mode < 0) {</pre>
        print_usage(argv[0]);
        return 0;
}
can_fd = rt_dev_socket(PF_CAN, SOCK_RAW, CAN_RAW);
if (can_fd < 0) {</pre>
    fprintf(stderr, "Cannot open RTDM CAN socket. Maybe driver not loaded? \n");
    return can_fd;
ret = rt_dev_ioctl(can_fd, SIOCGIFINDEX, &u.ifr);
if (ret) {
    fprintf(stderr, "Can't \ get \ interface \ index \ for \ \%s, \ code = \ \%d\n", \ ifname, \ ret);
    return ret;
if (new_baudrate != -1) {
    if (verbose)
        printf("baudrate: %d\n", new_baudrate);
    baudrate = &u.baudrate:
    *baudrate = new_baudrate;
    ret = rt_dev_ioctl(can_fd, SIOCSCANBAUDRATE, &u.ifr);
    if (ret) {
        goto abort;
}
if (bittime_count) {
    bittime = &u.bittime;
    if (bittime_count == 2) {
  bittime->type = CAN_BITTIME_BTR;
  bittime->btr.btr0 = bittime_data[0];
        bittime->btr.btr1 = bittime_data[1];
        if (verbose)
            printf("bit-time: btr0=0x%02x btr1=0x%02x\n",
                    bittime->btr.btr0, bittime->btr.btr1);
    } else {
        bittime->type = CAN_BITTIME_STD;
        bittime->std.brp = bittime_data[0];
        bittime->std.prop_seg = bittime_data[1];
        bittime->std.phase_seg1 = bittime_data[2];
        bittime->std.phase_seg2 = bittime_data[3];
        bittime->std.sjw = bittime_data[4];
        bittime->std.sam = bittime_data[5];
        if (verbose)
            printf("bit-time: brp=%d prop_seg=%d phase_seg1=%d "
                    "phase_seg2=%d sjw=%d sam=%d\n",
                    bittime->std.brp,
                    bittime->std.prop_seg,
                    bittime->std.phase_seg1,
                    bittime->std.phase_seg2,
                    bittime->std.sjw.
                    bittime->std.sam);
    ret = rt_dev_ioctl(can_fd, SIOCSCANCUSTOMBITTIME, &u.ifr);
    if (ret) {
        goto abort;
```

9.8 rtcanrecv.c 561

```
}
   }
   if (set_ctrlmode != 0) {
   ctrlmode = &u.ctrlmode;
       *ctrlmode = new_ctrlmode;
       if (verbose)
          printf("ctrlmode: %#x\n", new_ctrlmode);
       ret = rt_dev_ioctl(can_fd, SIOCSCANCTRLMODE, &u.ifr);
       if (ret) {
           goto abort;
   if (new_mode != -1) {
       mode = &u.mode:
       *mode = new_mode;
       ret = rt_dev_ioctl(can_fd, SIOCSCANMODE, &u.ifr);
       if (ret) {
           goto abort;
   }
   rt_dev_close(can_fd);
   return 0;
abort:
   rt_dev_close(can_fd);
   return ret;
```

#### 9.8 rtcanrecv.c

```
#include <stdio.h>
#include <stdlib.h>
#include <signal.h>
#include <unistd.h>
#include <time.h>
#include <errno.h>
#include <getopt.h>
#include <sys/mman.h>
#include <alchemy/task.h>
#include <rtdm/can.h>
static void print_usage(char *prg)
    fprintf(stderr,
              "Usage: %s [<can-interface>] [Options]\n"
              "Options:\n"
             "-f --filter=id:mask[:id:mask]... apply filter\n"
"-e --error=mask receive error messages\n"
             " -t, --timeout=MS
                                         timeout in ms\n"
             " -T, --timestamp
                                        with absolute timestamp\n"
             " -R, --timestamp-rel
                                        with relative timestamp\n"
             " -v, --verbose
                                        be verbose \n''
             " -p, --print=MODULO
" -h, --help
                                        print every MODULO message \n'' this help \n'',
             prg);
}
extern int optind, opterr, optopt;
static int s = -1, verbose = 0, print = 1;
static nanosecs_rel_t timeout = 0, with_timestamp = 0, timestamp_rel = 0;
RT_TASK rt_task_desc;
#define BUF_SIZ 255
#define MAX_FILTER 16
struct sockaddr_can recv_addr;
struct can_filter recv_filter[MAX_FILTER];
static int filter_count = 0;
static int add_filter(u_int32_t id, u_int32_t mask)
    if (filter_count >= MAX_FILTER)
         return -1;
    recv_filter[filter_count].can_id = id;
```

```
recv_filter[filter_count].can_mask = mask;
    printf("Filter #%d: id=0x%08x mask=0x%08x\n", filter_count, id, mask);
    filter_count++;
    return 0;
static void cleanup(void)
    int ret;
    if (verbose)
        printf("Cleaning up...\n");
    if (s >= 0) {
        ret = rt_dev_close(s);
        if (ret) {
             fprintf(stderr, "rt_dev_close: %s\n", strerror(-ret));
        exit(EXIT_SUCCESS);
}
static void cleanup_and_exit(int sig)
{
    if (verbose)
        printf("Signal %d received\n", sig);
    cleanup();
    exit(0);
}
static void rt_task(void)
    int i, ret, count = 0;
    struct can_frame frame;
    struct sockaddr_can addr;
    socklen_t addrlen = sizeof(addr);
    struct msghdr msg;
    struct iovec iov;
    nanosecs_abs_t timestamp, timestamp_prev = 0;
    if (with_timestamp) {
        msg.msg_iov = &iov;
        msg.msg_iovlen = 1;
        msg.msg_name = (void *)&addr;
        msg.msg_namelen = sizeof(struct sockaddr_can);
        msg.msg_control = (void *)&timestamp;
        msg.msg_controllen = sizeof(nanosecs_abs_t);
    }
    while (1) {
         if (with_timestamp) {
             iov.iov_base = (void *)&frame;
             iov.iov_len = sizeof(can_frame_t);
             ret = rt_dev_recvmsg(s, &msg, 0);
        } else
             ret = rt_dev_recvfrom(s, (void *)&frame, sizeof(
      can_frame_t), 0,
                                     (struct sockaddr *)&addr, &addrlen);
        if (ret < 0) {</pre>
             switch (ret) {
             case -ETIMEDOUT:
                 if (verbose)
                     printf("rt_dev_recv: timed out");
                 continue;
             case -EBADF:
                 if (verbose)
                      printf("rt dev recv: aborted because socket was closed"):
                 fprintf(stderr, "rt\_dev\_recv: %s\n", strerror(-ret));
             }
             break;
        }
        if (print && (count % print) == 0) {
   printf("#%d: (%d) ", count, addr.can_ifindex);
             if (with_timestamp && msg.msg_controllen) {
                 if (timestamp_rel) {
printf("%11dns ", (long long)(timestamp - timestamp_prev));
    timestamp_prev = timestamp;
                 } else
                      printf("%lldns ", (long long)timestamp);
             if (frame.can_id & CAN_ERR_FLAG)
             printf("'.0x%08x!", frame.can_id & CAN_ERR_MASK);
else if (frame.can_id & CAN_EFF_FLAG)
```

9.8 rtcanrecv.c 563

```
printf("<0x%08x>", frame.can_id & CAN_EFF_MASK);
                     printf("<0x%03x>", frame.can_id & CAN_SFF_MASK);
               printf(" [%d]", frame.can_dlc);
                if (!(frame.can_id & CAN_RTR_FLAG))
                     for (i = 0; i < frame.can_dlc; i++) {
    printf(" %02x", frame.data[i]);</pre>
               if (frame.can_id & CAN_ERR_FLAG) {
   printf(" ERROR ");
                     if (frame.can_id & CAN_ERR_BUSOFF)
                          printf("bus-off");
                     if (frame.can_id & CAN_ERR_CRTL)
                         printf("controller problem");
               } else if (frame.can_id & CAN_RTR_FLAG)
    printf(" remote request");
               printf("\n");
          count++;
     }
}
int main(int argc, char **argv)
     int opt, ret;
     u_int32_t id, mask;
     u_int32_t err_mask = 0;
     struct ifreq ifr;
     char *ptr;
     char name[32]:
     struct option long_options[] = {
          for iong_options[] = {
    "help", no_argument, 0, 'h' },
    "verbose", no_argument, 0, 'v'},
    "filter", required_argument, 0, 'f'},
    "error", required_argument, 0, 'e'},
    "timeout", required_argument, 0, 't'},
    "timestamp", no_argument, 0, 'T'},
    "timestamp-rel", no_argument, 0, 'R'},

          { 0, 0, 0, 0},
     };
     mlockall(MCL_CURRENT | MCL_FUTURE);
     signal(SIGTERM, cleanup_and_exit);
     signal(SIGINT, cleanup_and_exit);
     while ((opt = getopt_long(argc, argv, "hve:f:t:p:RT",
                                       long_options, NULL)) != -1) {
          switch (opt) {
          case 'h':
               print_usage(argv[0]);
                exit(0);
          case 'p':
               print = strtoul(optarg, NULL, 0);
                break;
          case 'v':
               verbose = 1:
               break:
          case 'e':
               err_mask = strtoul(optarg, NULL, 0);
               break;
          case 'f':
               ptr = optarg;
                while (1) {
                     id = strtoul(ptr, NULL, 0);
                     ptr = strchr(ptr, ':');
                     if (!ptr) {
                          fprintf(stderr, "filter must be applied in the form id:mask[:id:mask]...\n");
                          exit(1);
                    ptr++;
                     mask = strtoul(ptr, NULL, 0);
ptr = strchr(ptr, ':');
                     add_filter(id, mask);
                     if (!ptr)
                          break;
                     ptr++;
               }
               break:
          case 't':
```

```
timeout = (nanosecs_rel_t)strtoul(optarg, NULL, 0) * 1000000;
    case 'R':
        timestamp_rel = 1;
    case
        with_timestamp = 1;
    default:
        fprintf(stderr, "Unknown option %c\n", opt);
        break:
}
ret = rt_dev_socket(PF_CAN, SOCK_RAW, CAN_RAW);
if (ret < 0) {</pre>
    fprintf(stderr, "rt_dev_socket: %s\n", strerror(-ret));
    return -1;
if (argv[optind] == NULL) {
    if (verbose)
        printf("interface all\n");
    ifr.ifr_ifindex = 0;
} else {
    if (verbose)
        printf("interface %s\n", argv[optind]);
    strncpy(ifr.ifr_name, argv[optind], IFNAMSIZ);
        printf("s=%d, ifr_name=%s\n", s, ifr.ifr_name);
    ret = rt_dev_ioctl(s, SIOCGIFINDEX, &ifr);
    if (ret < 0) {
    fprintf(stderr, "rt_dev_ioctl GET_IFINDEX: %s\n", strerror(-ret));</pre>
        goto failure;
    }
}
if (err_mask) {
    ret = rt_dev_setsockopt(s, SOL_CAN_RAW,
  CAN_RAW_ERR_FILTER,
                               &err_mask, sizeof(err_mask));
    if (ret < 0) {</pre>
        fprintf(stderr, "rt_dev_setsockopt: %s\n", strerror(-ret));
        goto failure;
    if (verbose)
        printf("Using err_mask=%#x\n", err_mask);
}
if (filter_count) {
  ret = rt_dev_setsockopt(s, SOL_CAN_RAW,
CAN_RAW_FILTER,
                               &recv_filter, filter_count *
                               sizeof(struct can_filter));
    if (ret < 0) {</pre>
         fprintf(stderr, "rt_dev_setsockopt: %s\n", strerror(-ret));
        goto failure;
}
recv_addr.can_family = AF_CAN;
recv_addr.can_ifindex = ifr.ifr_ifindex;
ret = rt_dev_bind(s, (struct sockaddr *)&recv_addr,
                   sizeof(struct sockaddr_can));
if (ret < 0) {</pre>
    fprintf(stderr, "rt\_dev\_bind: %s\n", strerror(-ret));\\
    goto failure;
}
if (timeout) {
    printf("Timeout: %lld ns\n", (long long)timeout);
ret = rt_dev_ioctl(s, RTCAN_RTIOC_RCV_TIMEOUT, &timeout);
    if (ret) {
        fprintf(stderr, "rt_dev_ioctl RCV_TIMEOUT: %s\n", strerror(-ret));
        goto failure;
    }
}
if (with_timestamp) {
  ret = rt_dev_ioctl(s, RTCAN_RTIOC_TAKE_TIMESTAMP,
RTCAN_TAKE_TIMESTAMPS);
```

9.9 rtcansend.c 565

#### 9.9 rtcansend.c

```
#include <stdio.h>
#include <stdlib.h>
#include <signal.h>
#include <unistd.h>
#include <time.h>
#include <errno.h>
#include <getopt.h>
#include <sys/mman.h>
#include <alchemy/task.h>
#include <alchemy/timer.h>
#include <rtdm/can.h>
extern int optind, opterr, optopt;
static void print_usage(char *prg)
     fprintf(stderr,
              "Usage: %s <can-interface> [Options] <can-msg>\n"
              "<can-msg> can consist of up to 8 bytes given as a space separated list\n"
              "Options:\n"
              " -i, --identifier=ID CAN Identifier (default = 1)\n"
" -r --rtr send remote request\n"
" -e --extended send extended frame\n"
" -l --loop=COUNT send message COUNT times\n"
              " -c, --count
                                          message count in data[0-3]\n"
              " -d, --delay=MS
                                          delay in ms (default = 1ms)\n"
              " -s, --send
                                          use send instead of sendto\n"
              " -t, --timeout=MS
                                          timeout in ms \ \ "
              " -L, --loopback=0|1
                                          switch local loopback off or on \ensuremath{\text{n}}\xspace
              " -v, --verbose
                                          be verbose\n"
              " -p, --print=MODULO
" -h, --help
                                         print every MODULO message\n"
                                          this help\n'',
              prg);
RT_TASK rt_task_desc;
static int s=-1, dlc=0, rtr=0, extended=0, verbose=0, loops=1;
static SRTIME delay=1000000;
static int count=0, print=1, use_send=0, loopback=-1;
static nanosecs_rel_t timeout = 0;
static struct can frame frame:
static struct sockaddr_can to_addr;
static void cleanup(void)
     int ret:
     if (verbose)
         printf("Cleaning up...\n");
     usleep(100000);
     if (s >= 0) {
         ret = rt_dev_close(s);
```

```
if (ret) {
                fprintf(stderr, "rt_dev_close: %s\n", strerror(-ret));
           exit(EXIT_SUCCESS);
}
static void cleanup_and_exit(int sig)
      if (verbose)
          printf("Signal %d received\n", sig);
     cleanup();
     exit(0);
static void rt_task(void)
     int i, j, ret;
      for (i = 0; i < loops; i++) {</pre>
          rt_task_sleep(rt_timer_ns2ticks(delay));
          if (count)
                memcpy(&frame.data[0], &i, sizeof(i));
            ^{st} Note: sendto avoids the definiton of a receive filter list ^{st}/
           if (use_send)
               ret = rt_dev_send(s, (void *)&frame, sizeof(can_frame_t), 0);
                ret = rt_dev_sendto(s, (void *)&frame, sizeof(
        can_frame_t), 0,
                                           (struct sockaddr *)&to_addr, sizeof(to_addr));
          if (ret < 0) {</pre>
                switch (ret) {
                case -ETIMEDOUT:
                     if (verbose)
                          printf("rt_dev_send(to): timed out");
                     break:
                case -EBADF:
                     if (verbose)
                          printf("rt_dev_send(to): aborted because socket was closed");
                default:
                     fprintf(stderr, "rt_dev_send: %s\n", strerror(-ret));
                     break:
                }
                i = loops;
                                          /* abort */
                break;
          if (verbose && (i % print) == 0) {
   if (frame.can_id & CAN_EFF_FLAG)
                     printf("<0x%08x>", frame.can_id & CAN_EFF_MASK);
                     printf("<0x%03x>", frame.can_id & CAN_SFF_MASK);
                printf(" [%d]", frame.can_dlc);
for (j = 0; j < frame.can_dlc; j++) {
    printf(" %02x", frame.data[j]);</pre>
                printf("\n");
     }
}
int main(int argc, char **argv)
      int i, opt, ret;
      struct ifreq ifr;
     char name[32];
      struct option long_options[] = {
           { "help", no_argument, 0, 'h' },
           { "identifier", required_argument, 0, 'i'},
          { "identifier", required_argument, 0, 'i'}
{ "rtr", no_argument, 0, 'r'},
{ "extended", no_argument, 0, 'e'},
{ "verbose", no_argument, 0, 'v'},
{ "count", no_argument, 0, 'c'},
{ "loop", required_argument, 0, 'p'},
{ "delay", required_argument, 0, 'd'},
{ "send", no_argument, 0, 's'},
{ "timeout", required_argument, 0, 't'},
{ "loopback", required_argument, 0, 't'},
{ 0.0.0.0}
           { 0, 0, 0, 0},
     };
     mlockall(MCL_CURRENT | MCL_FUTURE);
      signal(SIGTERM, cleanup_and_exit);
      signal(SIGINT, cleanup_and_exit);
```

9.9 rtcansend.c 567

```
frame.can_id = 1;
while ((opt = getopt_long(argc, argv, "hvi:l:red:t:cp:sL:",
                          long_options, NULL)) != -1) {
    switch (opt) {
    case 'h':
       print_usage(argv[0]);
        exit(0);
    case 'p':
       print = strtoul(optarg, NULL, 0);
    case 'v':
        verbose = 1;
        break;
    case 'c':
       count = 1;
       break;
    case '1':
       loops = strtoul(optarg, NULL, 0);
        break:
        frame.can_id = strtoul(optarg, NULL, 0);
       break;
    case 'r':
       rtr = 1;
       break;
    case 'e':
        extended = 1;
        break;
    case 'd':
       delay = strtoul(optarg, NULL, 0) * 1000000LL;
    case 's':
       use send = 1:
        break;
        timeout = strtoul(optarg, NULL, 0) * 1000000LL;
        break:
    case 'L':
        loopback = strtoul(optarg, NULL, 0);
    default:
        fprintf(stderr, "Unknown option %c\n", opt);
        break:
}
if (optind == argc) {
   print_usage(argv[0]);
    exit(0);
if (argv[optind] == NULL) {
    fprintf(stderr, \ "No \ Interface \ supplied \backslash n");\\
    exit(-1);
}
if (verbose)
   printf("interface %s\n", argv[optind]);
ret = rt_dev_socket(PF_CAN, SOCK_RAW, CAN_RAW);
if (ret < 0) {</pre>
    fprintf(stderr, "rt_dev_socket: %s\n", strerror(-ret));
    return -1;
s = ret;
if (loopback >= 0) {
    ret = rt_dev_setsockopt(s, SOL_CAN_RAW,
  CAN_RAW_LOOPBACK,
                            &loopback, sizeof(loopback));
        fprintf(stderr, "rt_dev_setsockopt: %s\n", strerror(-ret));
        goto failure;
    }
```

```
if (verbose)
           printf("Using loopback=%d\n", loopback);
   strncpy(ifr.ifr_name, argv[optind], IFNAMSIZ);
   if (verbose)
       printf("s=%d, ifr_name=%s\n", s, ifr.ifr_name);
   ret = rt_dev_ioctl(s, SIOCGIFINDEX, &ifr);
   if (ret < 0) {</pre>
       fprintf(stderr, "rt_dev_ioctl: %s\n", strerror(-ret));
       goto failure;
   memset(&to_addr, 0, sizeof(to_addr));
   to_addr.can_ifindex = ifr.ifr_ifindex;
   to_addr.can_family = AF_CAN;
   if (use_send) {
       /* Suppress definiton of a default receive filter list */
       ret = rt_dev_setsockopt(s, SOL_CAN_RAW,
     CAN_RAW_FILTER, NULL, 0);
       if (ret < 0) {</pre>
           fprintf(stderr, "rt_dev_setsockopt: %s\n", strerror(-ret));
           goto failure;
       ret = rt_dev_bind(s, (struct sockaddr *)&to_addr, sizeof(to_addr));
           fprintf(stderr, "rt_dev_bind: %s\n", strerror(-ret));
           goto failure:
       }
   }
   if (count)
       frame.can_dlc = sizeof(int);
   else {
       for (i = optind + 1; i < argc; i++) {</pre>
           frame.data[dlc] = strtoul(argv[i], NULL, 0);
           if( dlc == 8 )
               break:
       frame.can_dlc = dlc;
   }
   if (rtr)
       frame.can_id |= CAN_RTR_FLAG;
   if (extended)
       frame.can_id |= CAN_EFF_FLAG;
   if (timeout) {
       if (verbose)
       printf("Timeout: %1ld ns\n", (long long)timeout);
ret = rt_dev_ioctl(s, RTCAN_RTIOC_SND_TIMEOUT, &timeout);
       if (ret) {
           fprintf(stderr, "rt_dev_ioctl SND_TIMEOUT: %s\n", strerror(-ret));
           goto failure;
       }
   }
   snprintf(name, sizeof(name), "rtcansend-%d", getpid());
   ret = rt_task_shadow(&rt_task_desc, name, 1, 0);
       fprintf(stderr, "rt_task_shadow: %s\n", strerror(-ret));
       goto failure;
   }
   rt_task();
   cleanup();
   return 0;
failure:
   cleanup();
```

# 9.10 xddp-echo.c

```
/*
* XDDP-based RT/NRT threads communication demo.
```

9.10 xddp-echo.c 569

```
* Real-time Xenomai threads and regular Linux threads may want to
 * exchange data in a way that does not require the former to leave
 * the real-time domain (i.e. secondary mode). Message pipes - as
 st implemented by the RTDM-based XDDP protocol - are provided for this
 * purpose.
 * On the Linux domain side, pseudo-device files named /dev/rtp<minor>
 * give regular POSIX threads access to non real-time communication
   endpoints, via the standard character-based \ensuremath{\text{I}}/0 interface. On the
   Xenomai domain side, sockets may be bound to XDDP ports, which act
   as proxies to send and receive data to/from the associated pseudo-device files. Ports and pseudo-device minor numbers are paired, meaning that e.g. port 7 will proxy the traffic for
   /dev/rtp7. Therefore, port numbers may range from 0 to
   CONFIG_XENO_OPT_PIPE_NRDEV - 1.
 * All data sent through a bound/connected XDDP socket via sendto(2) or
   write(2) will be passed to the peer endpoint in the Linux domain, and made available for reading via the standard read(2) system
   call. Conversely, all data sent using write(2) through the non
   real-time endpoint will be conveyed to the real-time socket
   endpoint, and made available to the recvfrom(2) or read(2) system
 * calls.
   Both threads can use the bi-directional data path to send and
   receive datagrams in a FIFO manner, as illustrated by the simple
   echoing process implemented by this program.
   realtime_thread------
    => get socket
     => bind socket to port 0
     => write traffic to NRT domain via sendto()
     => read traffic from NRT domain via recvfrom() <--|
 * regular_thread-----+
     => open /dev/rtp0
     => read traffic from RT domain via read()
                                                            1 1
     => echo traffic back to RT domain via write()
 * See Makefile in this directory for build directives.
   NOTE: XDDP is a replacement for the legacy RT_PIPE interface
 st available from the native skin until Xenomai 3.
#include <sys/mman.h>
#include <stdio.h>
#include <stdlib.h>
#include <unistd.h>
#include <signal.h>
#include <string.h>
#include <malloc.h>
#include <pthread.h>
#include <fcntl.h>
#include <errno.h>
#include <rtdm/ipc.h>
pthread_t rt, nrt;
#define XDDP_PORT 0
                         /* [0..CONFIG-XENO_OPT_PIPE_NRDEV - 1] */
static const char *msq[] = {
     "Surfing With The Alien",
    "Lords of Karma",
    "Banana Mango",
"Psycho Monkey"
    "Luminous Flesh Giants",
    "Moroccan Sunset",
    "Satch Boogie"
    "Flying In A Blue Dream",
    "Ride",
    "Summer Song"
    "Speed Of Light",
    "Crystal Planet"
    "Raspberry Jam Delta-V",
    "Champagne?",
    "Clouds Race Across The Sky",
    "Engines Of Creation"
static void fail(const char *reason)
{
        perror(reason);
        exit(EXIT_FAILURE);
static void *realtime_thread(void *arg)
```

```
struct sockaddr_ipc saddr;
         int ret, s, n = 0, len;
         struct timespec ts;
         size_t poolsz;
         char buf[128]:
          \ensuremath{^{*}} Get a datagram socket to bind to the RT endpoint. Each
          * endpoint is represented by a port number within the XDDP
            protocol namespace.
         s = socket(AF_RTIPC, SOCK_DGRAM, IPCPROTO_XDDP);
         if (s < 0) {
                  perror("socket");
                  exit(EXIT_FAILURE);
         }
          * Set a local 16k pool for the RT endpoint. Memory needed to
          * convey datagrams will be pulled from this pool, instead of
          * Xenomai's system pool.
        poolsz = 16384; /* bytes */
ret = setsockopt(s, SOL_XDDP, XDDP_POOLSZ,
                            &poolsz, sizeof(poolsz));
         if (ret)
                  fail("setsockopt");
          * Bind the socket to the port, to setup a proxy to channel * traffic to/from the Linux domain.
          * saddr.sipc_port specifies the port number to use.
         memset(&saddr, 0, sizeof(saddr));
saddr.sipc_family = AF_RTIPC;
saddr.sipc_port = XDDP_PORT;
         ret = bind(s, (struct sockaddr *)&saddr, sizeof(saddr));
         if (ret)
                  fail("bind");
         for (;;) {
                  len = strlen(msg[n]);
                  /*

* Send a datagram to the NRT endpoint via the proxy.

** Send a datagram to the NRT endpoint via the proxy.
                   \ensuremath{^{*}} We may pass a NULL destination address, since a
                   \ensuremath{^{*}} bound socket is assigned a default destination
                   * address matching the binding address (unless
* connect(2) was issued before bind(2), in which case
* the former would prevail).
                  ret = sendto(s, msg[n], len, 0, NULL, 0);
                  if (ret != len)
                           fail("sendto");
                  rt_printf("%s: sent %d bytes, \"%.*s\"\n",
                              __FUNCTION__, ret, ret, msg[n]);
                  /* Read back packets echoed by the regular thread */
                  ret = recvfrom(s, buf, sizeof(buf), 0, NULL, 0);
                  if (ret <= 0)</pre>
                           fail("recvfrom");
                  rt\_printf(" \Rightarrow \"%.*s\" echoed by peer\n", ret, buf);
                  n = (n + 1) % (sizeof(msg) / sizeof(msg[0]));
                   * We run in full real-time mode (i.e. primary mode),
                   * so we have to let the system breathe between two
                   * iterations.
                  ts.tv_sec = 0;
ts.tv_nsec = 500000000; /* 500 ms */
                  clock_nanosleep(CLOCK_REALTIME, 0, &ts, NULL);
         return NULL;
static void *regular_thread(void *arg)
{
         char buf[128], *devname;
         int fd, ret;
```

9.11 xddp-label.c 571

```
fd = open(devname, O_RDWR);
         free(devname);
         if (fd < 0)</pre>
                  fail("open");
         for (;;) {
    /* Get the next message from realtime_thread. */
                  ret = read(fd, buf, sizeof(buf));
                  if (ret <= 0)</pre>
                           fail("read");
                  /* Echo the message back to realtime_thread. */
                  ret = write(fd, buf, ret);
                  if (ret <= 0)</pre>
                           fail("write");
         }
         return NULL;
static void cleanup_upon_sig(int sig)
         pthread_cancel(rt);
         pthread_cancel(nrt);
         signal(sig, SIG_DFL);
         pthread_join(rt, NULL);
         pthread_join(nrt, NULL);
}
int main(int argc, char **argv)
{
         struct sched_param rtparam = { .sched_priority = 42 };
         pthread_attr_t rtattr, regattr;
         sigset_t mask, oldmask;
         mlockall(MCL_CURRENT | MCL_FUTURE);
         sigemptyset(&mask);
         sigaddset(&mask, SIGINT);
         signal(SIGINT, cleanup_upon_sig);
         sigaddset(&mask, SIGTERM);
         signal(SIGTERM, cleanup_upon_sig);
         sigaddset(&mask, SIGHUP);
signal(SIGHUP, cleanup_upon_sig);
         pthread_sigmask(SIG_BLOCK, &mask, &oldmask);
         /*

* This is a real-time compatible printf() package from

* Xenomai's RT Development Kit (RTDK), that does NOT cause

* any transition to secondary (i.e. non real-time) mode when
         rt_print_auto_init(1);
         pthread_attr_init(&rtattr);
         pthread_attr_setdetachstate(&rtattr, PTHREAD_CREATE_JOINABLE);
         pthread_attr_setinheritsched(&rtattr, PTHREAD_EXPLICIT_SCHED);
         pthread_attr_setschedpolicy(&rtattr, SCHED_FIF0);
         pthread_attr_setschedparam(&rtattr, &rtparam);
         errno = pthread_create(&rt, &rtattr, &realtime_thread, NULL);
         if (errno)
                  fail("pthread_create");
         pthread_attr_init(&regattr);
         \verb|pthread_attr_setdetachstate| (\&regattr, PTHREAD_CREATE_JOINABLE); \\
         pthread_attr_setinheritsched(&regattr, PTHREAD_EXPLICIT_SCHED);
pthread_attr_setschedpolicy(&regattr, SCHED_OTHER);
         errno = pthread_create(&nrt, &regattr, &regular_thread, NULL);
                  fail("pthread_create");
         sigsuspend(&oldmask);
```

# 9.11 xddp-label.c

```
/*
* XDDP-based RT/NRT threads communication demo.
```

```
* Real-time Xenomai threads and regular Linux threads may want to
* exchange data in a way that does not require the former to leave
 * the real-time domain (i.e. secondary mode). Message pipes - as
 * implemented by the RTDM-based XDDP protocol - are provided for this
 * purpose.
 * On the Linux domain side, pseudo-device files named /dev/rtp<minor>
 * give regular POSIX threads access to non real-time communication
   endpoints, via the standard character-based I/O interface. On the
   Xenomai domain side, sockets may be bound to XDDP ports, which act
  as proxies to send and receive data to/from the associated pseudo-device files. Ports and pseudo-device minor numbers are paired, meaning that e.g. port 7 will proxy the traffic for
   /dev/rtp7. Therefore, port numbers may range from 0 to
  CONFIG_XENO_OPT_PIPE_NRDEV - 1.
 * All data sent through a bound/connected XDDP socket via sendto(2) or
  write(2) will be passed to the peer endpoint in the Linux domain, and made available for reading via the standard read(2) system
   call. Conversely, all data sent using write(2) through the non
   real-time endpoint will be conveyed to the real-time socket
   endpoint, and made available to the \operatorname{recvfrom}(2) or \operatorname{read}(2) system
  calls.
   ASCII labels can be attached to bound ports, in order to connect
   sockets to them in a more descriptive way than using plain numeric
   port values.
   The example code below illustrates the following process:
   realtime thread1-----
    => get socket
    => bind socket to port "xddp-demo
    => read traffic from NRT domain via recvfrom() <--+--+
   realtime thread2-----
    => get socket
     => connect socket to port "xddp-demo"
     => write traffic to NRT domain via sendto()
  regular_thread-----+
    => open /proc/xenomai/registry/rtipc/xddp/xddp-demo | |
    => read traffic from RT domain via read()
    => mirror traffic to RT domain via write()
 * See Makefile in this directory for build directives.
 * NOTE: XDDP is a replacement for the legacy RT_PIPE interface
 * available from the native skin until Xenomai 3.
#include <sys/mman.h>
#include <stdio.h>
#include <stdlib.h>
#include <unistd.h>
#include <signal.h>
#include <string.h>
#include <malloc.h>
#include <pthread.h>
#include <fcntl.h>
#include <errno.h>
#include <rtdm/ipc.h>
pthread_t rt1, rt2, nrt;
#define XDDP_PORT_LABEL "xddp-demo"
static const char *msq[] = {
    "Surfing With The Alien",
    "Lords of Karma",
    "Banana Mango",
"Psycho Monkey"
    "Luminous Flesh Giants",
    "Moroccan Sunset",
    "Satch Boogie"
    "Flying In A Blue Dream",
    "Summer Song"
    "Speed Of Light",
    "Crystal Planet"
    "Raspberry Jam Delta-V".
    "Champagne?",
    "Clouds Race Across The Sky",
    "Engines Of Creation"
static void fail(const char *reason)
```

9.11 xddp-label.c 573

```
perror(reason);
         exit(EXIT_FAILURE);
}
static void *realtime_thread1(void *arg)
         struct rtipc_port_label plabel;
         struct sockaddr_ipc saddr;
         char buf[128];
        int ret, s;
         * Get a datagram socket to bind to the RT endpoint. Each
* endpoint is represented by a port number within the XDDP
          * protocol namespace.
        s = socket(AF_RTIPC, SOCK_DGRAM, IPCPROTO_XDDP);
        if (s < 0) {
                 perror("socket");
                 exit(EXIT_FAILURE);
        }
          * Set a port label. This name will be registered when
          * binding, in addition to the port number (if given).
        strcpy(plabel.label, XDDP_PORT_LABEL);
        ret = setsockopt(s, SOL_XDDP, XDDP_LABEL
                           &plabel, sizeof(plabel));
        if (ret)
                 fail("setsockopt");
          * Bind the socket to the port, to setup a proxy to channel
          \ensuremath{^{*}} traffic to/from the Linux domain. Assign that port a label,
          * so that peers may use a descriptive information to locate
* it. For instance, the pseudo-device matching our RT
          * endpoint will appear as
           /proc/xenomai/registry/rtipc/xddp/<XDDP_PORT_LABEL> in the
          * Linux domain, once the socket is bound.
          \mbox{\ensuremath{^{*}}} saddr.sipc_port specifies the port number to use. If -1 is
          * passed, the XDDP driver will auto-select an idle port.
        memset(&saddr, 0, sizeof(saddr));
        saddr.sipc_family = AF_RTIPC;
saddr.sipc_port = -1;
        ret = bind(s, (struct sockaddr *)&saddr, sizeof(saddr));
        ret = recvfrom(s, buf, sizeof(buf), 0, NULL, 0);
                 if (ret <= 0)</pre>
                          fail("recvfrom");
                 rt_printf("%s: \"%.*s\" relayed by peer\n", __FUNCTION__, ret, buf);
        return NULL:
}
static void *realtime_thread2(void *arg)
         struct rtipc_port_label plabel;
        struct sockaddr_ipc saddr;
        int ret, s, n = 0, len;
        struct timespec ts;
        struct timeval tv;
        socklen_t addrlen;
        s = socket(AF_RTIPC, SOCK_DGRAM, IPCPROTO_XDDP);
        if (s < 0) {
                 perror("socket");
                 exit(EXIT_FAILURE);
        }
        /*

* Set the socket timeout; it will apply when attempting to
          * connect to a labeled port, and to recofrom() calls. The following setup tells the XDDP driver to wait for at most
          * one second until a socket is bound to a port using the same
          * label, or return with a timeout error.
        tv.tv_sec = 1;
        tv.tv_usec = 0;
        ret = setsockopt(s, SOL_SOCKET, SO_RCVTIMEO,
```

```
&tv, sizeof(tv));
        if (ret)
                 fail("setsockopt");
         * Set a port label. This name will be used to find the peer * when connecting, instead of the port number.
        if (ret)
                 fail("setsockopt");
        memset(&saddr, 0, sizeof(saddr));
        ret = connect(s, (struct sockaddr *)&saddr, sizeof(saddr));
        if (ret)
                 fail("connect");
        /*

* We succeeded in making the port our default destination

* address by using its label, but we don't know its actual

* port number yet. Use getpeername() to retrieve it.
        addrlen = sizeof(saddr);
        ret = getpeername(s, (struct sockaddr *)&saddr, &addrlen);
if (ret || addrlen != sizeof(saddr))
                 fail("getpeername");
        rt_printf("%s: NRT peer is reading from /dev/rtp%d\n",
                   __FUNCTION__, saddr.sipc_port);
        for (;;) {
                 len = strlen(msg[n]);
                 /*
* Send a datagram to the NRT endpoint via the proxy.
                  * We may pass a NULL destination address, since the
                   * socket was successfully assigned the proper default
                   * address via connect(2).
                 ret = sendto(s, msg[n], len, 0, NULL, 0);
                 if (ret != len)
                          fail("sendto");
                 \label{eq:rt_printf("%s: sent %d bytes, $$\''\.*s\''\n'', $$
                            __FUNCTION__, ret, ret, msg[n]);
                 n = (n + 1) \% (sizeof(msg) / sizeof(msg[0]));
                 /*

* We run in full real-time mode (i.e. primary mode),
                  * so we have to let the system breathe between two
                  * iterations.
                 ts.tv_sec = 0;
                 ts.tv_nsec = 500000000; /* 500 ms */
                 clock_nanosleep(CLOCK_REALTIME, 0, &ts, NULL);
        }
        return NULL:
}
static void *regular_thread(void *arg)
         char buf[128], *devname;
        int fd, ret;
        if (asprintf(&devname,
                        "/proc/xenomai/registry/rtipc/xddp/%s",
                       XDDP_PORT_LABEL) < 0)
                 fail("asprintf");
        fd = open(devname. 0 RDWR):
         free(devname);
                 fail("open");
        for (;;) {
    /* Get the next message from realtime_thread2. */
                 ret = read(fd, buf, sizeof(buf));
                 if (ret <= 0)</pre>
                          fail("read");
                 /* Relay the message to realtime_thread1. */
                 ret = write(fd, buf, ret);
                 if (ret <= 0)</pre>
```

9.12 xddp-stream.c 575

```
fail("write");
        }
        return NULL;
static void cleanup_upon_sig(int sig)
        pthread_cancel(rt1);
        pthread_cancel(rt2);
        pthread_cancel(nrt);
        signal(sig, SIG_DFL);
        pthread_join(rt1, NULL);
        pthread_join(rt2, NULL);
        pthread_join(nrt, NULL);
}
int main(int argc, char **argv)
        struct sched_param rtparam = { .sched_priority = 42 };
        pthread_attr_t rtattr, regattr;
        sigset_t mask, oldmask;
        mlockall(MCL_CURRENT | MCL_FUTURE);
        sigemptyset(&mask);
        sigaddset(&mask, SIGINT);
        signal(SIGINT, cleanup_upon_sig);
        sigaddset(&mask, SIGTERM);
        signal(SIGTERM, cleanup_upon_sig);
sigaddset(&mask, SIGHUP);
        signal(SIGHUP, cleanup_upon_sig);
        pthread_sigmask(SIG_BLOCK, &mask, &oldmask);
        /*
    * This is a real-time compatible printf() package from
    ** V:+ (PTDK) that does NOT ca
           Xenomai's RT Development Kit (RTDK), that does NOT cause
            any transition to secondary (i.e. non real-time) mode when
         * writing output.
        rt_print_auto_init(1);
        pthread attr init(&rtattr):
        pthread_attr_setdetachstate(&rtattr, PTHREAD_CREATE_JOINABLE);
        pthread_attr_setinheritsched(&rtattr, PTHREAD_EXPLICIT_SCHED);
        pthread_attr_setschedpolicy(&rtattr, SCHED_FIF0);
        pthread_attr_setschedparam(&rtattr, &rtparam);
        /* Both real-time threads have the same attribute set. */
        errno = pthread_create(&rt1, &rtattr, &realtime_thread1, NULL);
                 fail("pthread_create");
        errno = pthread_create(&rt2, &rtattr, &realtime_thread2, NULL);
        if (errno)
                 fail("pthread_create");
        pthread_attr_init(&regattr);
        \verb|pthread_attr_setdetachstate(\&regattr, PTHREAD_CREATE_JOINABLE)|;|
        \verb|pthread_attr_setinheritsched| (\&regattr, PTHREAD_EXPLICIT_SCHED); \\
        pthread_attr_setschedpolicy(&regattr, SCHED_OTHER);
        errno = pthread_create(&nrt, &regattr, &regular_thread, NULL);
        if (errno)
                 fail("pthread_create");
        sigsuspend(&oldmask):
        return 0;
```

## 9.12 xddp-stream.c

```
/*

* XDDP-based RT/NRT threads communication demo.

* Real-time Xenomai threads and regular Linux threads may want to

* exchange data in a way that does not require the former to leave

* the real-time domain (i.e. secondary mode). Message pipes - as

* implemented by the RTDM-based XDDP protocol - are provided for this

* purpose.
```

```
* On the Linux domain side, pseudo-device files named /dev/rtp<minor>
   * give regular POSIX threads access to non real-time communication
         endpoints, via the standard character-based I/O interface. On the
    * Xenomai domain side, sockets may be bound to XDDP ports, which act
        as proxies to send and receive data to/from the associated % \left( 1\right) =\left( 1\right) \left( 1\right) \left
         pseudo-device files. Ports and pseudo-device minor numbers are
         paired, meaning that e.g. port 7 will proxy the traffic for
         /dev/rtp7. Therefore, port numbers may range from 0 to
    * CONFIG_XENO_OPT_PIPE_NRDEV - 1.
     * All data sent through a bound/connected XDDP socket via sendto(2) or
        write(2) will be passed to the peer endpoint in the Linux domain, and made available for reading via the standard read(2) system
         call. Conversely, all data sent using write(2) through the non
        real-time endpoint will be conveyed to the real-time socket
         endpoint, and made available to the recvfrom(2) or read(2) system
        calls.
    * In addition to sending datagrams, real-time threads may stream data
    * in a byte-oriented mode through the proxy as well. This increases
     * the bandwidth and reduces the overhead, when a lot of data has to
     * flow down to the Linux domain, if keeping the message boundaries is
    * not required. The example code below illustrates such use.
        => get socket
             => bind socket to port 0
             => write scattered traffic to NRT domain via sendto()
             => read traffic from NRT domain via recvfrom()
        regular thread----
             => open /dev/rtp0
             => read traffic from RT domain via read()
             => echo traffic back to RT domain via write()
    * See Makefile in this directory for build directives.
    * NOTE: XDDP is a replacement for the legacy RT_PIPE interface
    * available from the native skin until Xenomai 3.
 #include <sys/mman.h>
 #include <stdio.h>
 #include <stdlib.h>
 #include <unistd.h>
 #include <signal.h>
 #include <string.h>
 #include <malloc.h>
 #include <pthread.h>
 #include <fcntl.h>
 #include <errno.h>
 #include <rtdm/ipc.h>
pthread_t rt, nrt;
                                                                   /* [0..CONFIG-XENO_OPT_PIPE_NRDEV - 1] */
 #define XDDP PORT 0
 static const char *msg[] = {
            "Surfing With The Alien",
            "Lords of Karma",
             "Banana Mango"
            "Psycho Monkey",
            "Luminous Flesh Giants",
            "Moroccan Sunset",
            "Satch Boogie"
            "Flying In A Blue Dream",
            "Ride",
             "Summer Song"
            "Speed Of Light",
            "Crystal Planet"
            "Raspberry Jam Delta-V",
            "Champagne?",
             "Clouds Race Across The Sky",
            "Engines Of Creation"
}:
 static void fail(const char *reason)
 {
                      perror(reason);
                      exit(EXIT_FAILURE);
}
 static void *realtime_thread(void *arg)
                       struct sockaddr_ipc saddr;
                      int ret, s, n = 0, len, b;
                      struct timespec ts;
                      size t streamsz:
```

```
/*
    * Get a datagram socket to bind to the RT endpoint. Each
          \mbox{\scriptsize *} endpoint is represented by a port number within the XDDP
             protocol namespace.
         s = socket(AF_RTIPC, SOCK_DGRAM, IPCPROTO_XDDP);
         if (s < 0) {</pre>
                   perror("socket"):
                   exit(EXIT_FAILURE);
         }
          \ensuremath{^{*}} Tell the XDDP driver that we will use the streaming
          * capabilities on this socket. To this end, we have to

* specify the size of the streaming buffer, as a count of

* bytes. The real-time output will be buffered up to that

* amount, and sent as a single datagram to the NRT endpoint
           * when fully gathered, or when another source port attempts
          * to send data to the same endpoint. Passing a null size
          ^{\star} would disable streaming.
         streamsz = 1024; /* bytes */
ret = setsockopt(s, SOL_XDDP, XDDP_BUFSZ,
                              &streamsz, sizeof(streamsz));
                   fail("setsockopt");
          * Bind the socket to the port, to setup a proxy to channel * traffic to/from the Linux domain.
          * saddr.sipc_port specifies the port number to use.
         memset(&saddr, 0, sizeof(saddr));
saddr.sipc_family = AF_RTIPC;
saddr.sipc_port = XDDP_PORT;
         ret = bind(s, (struct sockaddr *)&saddr, sizeof(saddr));
         if (ret)
                   fail("bind");
         for (;;) {
                   len = strlen(msg[n]);
                   /*
* Send a datagram to the NRT endpoint via the proxy.
                    * The output is artificially scattered in separate
                    \mbox{\scriptsize *} one-byte sendings, to illustrate the use of
                    * MSG_MORE.
                   for (b = 0; b < len; b++) {
                             ret = sendto(s, msg[n] + b, 1, MSG_MORE, NULL, 0);
                             if (ret != 1)
                                      fail("sendto");
                   }
                   rt_printf("%s: sent (scattered) %d-bytes message, \"%.*s\"\n",
                                __FUNCTION__, len, len, msg[n]);
                    /* Read back packets echoed by the regular thread */
                   ret = recvfrom(s, buf, sizeof(buf), 0, NULL, 0);
                   if (ret <= 0)</pre>
                             fail("recvfrom");
                   rt\_printf(" \Rightarrow \"%.*s\" echoed by peer\n", ret, buf);
                   n = (n + 1) % (sizeof(msg) / sizeof(msg[0]));
                    \ensuremath{^{*}} We run in full real-time mode (i.e. primary mode),
                    * so we have to let the system breathe between two
                    * iterations.
                   ts.tv_sec = 0;
ts.tv_nsec = 500000000; /* 500 ms */
                   clock_nanosleep(CLOCK_REALTIME, 0, &ts, NULL);
         return NULL;
static void *regular_thread(void *arg)
         char buf[128], *devname;
         if (asprintf(&devname, "/dev/rtp%d", XDDP_PORT) < 0)</pre>
                   fail("asprintf");
```

char buf[128];

```
fd = open(devname, O_RDWR);
         free(devname);
         if (fd < 0)</pre>
                  fail("open");
         for (;;) {
    /* Get the next message from realtime_thread. */
                   ret = read(fd, buf, sizeof(buf));
                   if (ret <= 0)</pre>
                            fail("read");
                   /* Echo the message back to realtime_thread. */
                  ret = write(fd, buf, ret);
                   if (ret <= 0)</pre>
                           fail("write");
         }
         return NULL;
static void cleanup_upon_sig(int sig)
         pthread_cancel(rt);
         pthread_cancel(nrt);
         signal(sig, SIG_DFL);
         pthread_join(rt, NULL);
         pthread_join(nrt, NULL);
}
int main(int argc, char **argv)
{
         struct sched_param rtparam = { .sched_priority = 42 };
         pthread_attr_t rtattr, regattr;
         sigset_t mask, oldmask;
         mlockall(MCL_CURRENT | MCL_FUTURE);
         sigemptyset(&mask);
         sigaddset(&mask, SIGINT);
         signal(SIGINT, cleanup_upon_sig);
         sigaddset(&mask, SIGTERM);
signal(SIGTERM, cleanup_upon_sig);
         sigaddset(&mask, SIGHUP);
signal(SIGHUP, cleanup_upon_sig);
         pthread_sigmask(SIG_BLOCK, &mask, &oldmask);
         /*

* This is a real-time compatible printf() package from

* Xenomai's RT Development Kit (RTDK), that does NOT cause

* any transition to secondary (i.e. non real-time) mode when
         rt_print_auto_init(1);
         pthread_attr_init(&rtattr);
         pthread_attr_setdetachstate(&rtattr, PTHREAD_CREATE_JOINABLE);
         pthread_attr_setinheritsched(&rtattr, PTHREAD_EXPLICIT_SCHED);
         pthread_attr_setschedpolicy(&rtattr, SCHED_FIF0);
         pthread_attr_setschedparam(&rtattr, &rtparam);
         errno = pthread_create(&rt, &rtattr, &realtime_thread, NULL);
         if (errno)
                  fail("pthread_create");
         pthread_attr_init(&regattr);
         \verb|pthread_attr_setdetachstate| (\&regattr, PTHREAD_CREATE_JOINABLE); \\
         pthread_attr_setinheritsched(&regattr, PTHREAD_EXPLICIT_SCHED);
pthread_attr_setschedpolicy(&regattr, SCHED_OTHER);
         errno = pthread_create(&nrt, &regattr, &regular_thread, NULL);
                  fail("pthread_create");
         sigsuspend(&oldmask);
         return 0;
```

# Index

| xntimer_migrate                    | a4I_descriptor, 438                |
|------------------------------------|------------------------------------|
| Timer services, 215                | board_name, 438                    |
|                                    | fd, 438                            |
| A4L_RNG_FACTOR                     | idx_read_subd, 438                 |
| uapi/analogy.h, 530                | idx_write_subd, 438                |
| a4l_add_subd                       | magic, 439                         |
| Subdevice management services, 234 | nb subd, 439                       |
| a4l_alloc_subd                     | sbdata, 439                        |
| Subdevice management services, 234 | sbsize, 439                        |
| a4l_async_read                     | a4l_driver, 439                    |
| Asynchronous acquisition API, 311  | a4l dtoraw                         |
| a4l_async_write                    | Range / conversion API, 318        |
| Asynchronous acquisition API, 311  | a4l_fill_desc                      |
| a4l_buf_commit_absget              | Descriptor API, 316                |
| Buffer management services, 237    | a4I_find_range                     |
| a4l_buf_commit_absput              | Range / conversion API, 319        |
| Buffer management services, 238    | a4l_free_irq                       |
| a4l_buf_commit_get                 | ·                                  |
| Buffer management services, 238    | Interrupt management services, 244 |
| a4l_buf_commit_put                 | a4l_ftoraw                         |
| Buffer management services, 238    | Range / conversion API, 319        |
| a4l_buf_count                      | a4l_get_bufsize                    |
| Buffer management services, 239    | Asynchronous acquisition API, 307  |
| a4l_buf_evt                        | a4l_get_chan                       |
| Buffer management services, 239    | Buffer management services, 243    |
| a4l_buf_get                        | a4l_get_chinfo                     |
| Buffer management services, 240    | Descriptor API, 316                |
| a4l_buf_prepare_absget             | a4l_get_cmd                        |
| Buffer management services, 240    | Buffer management services, 243    |
| a4l_buf_prepare_absput             | a4l_get_irq                        |
| Buffer management services, 240    | Interrupt management services, 244 |
| a4l_buf_prepare_get                | a4l_get_rnginfo                    |
| Buffer management services, 241    | Descriptor API, 316                |
| a4l_buf_prepare_put                | a4l_get_subd                       |
| Buffer management services, 241    | Subdevice management services, 234 |
| a4l_buf_put                        | a4l_get_subdinfo                   |
| Buffer management services, 241    | Descriptor API, 317                |
| a4l_channel, 435                   | a4l_get_time                       |
| flags, 435                         | Misc services, 247                 |
| nb_bits, 435                       | a4l_instruction, 440               |
| a4l_channels_desc, 435             | idx_subd, 440                      |
| chans, 436                         | a4l_instruction_list, 441          |
| length, 436                        | a4l_mark_bufrw                     |
| mode, 436                          | Asynchronous acquisition API, 307  |
| a4l close                          | a4l mmap                           |
| Descriptor API, 315                | Asynchronous acquisition API, 308  |
| a4l cmd desc, 436                  | a4l open                           |
| idx_subd, 437                      | Descriptor API, 317                |
| a4l config subd                    | a4l_poll                           |
| Synchronous acquisition API. 329   | Asynchronous acquisition API, 308  |
|                                    |                                    |

580 INDEX

| a4l_    | _range, 441                        | rt_alarm_inquire, 339                  |
|---------|------------------------------------|--|
|         | flags, 442                         | rt_alarm_start, 340                    |
|         | max, 442                           | rt_alarm_stop, 340                     |
|         | min, 442                           | Alchemy API, 372                       |
| a4l     | rawtod                             | Analogy framework, 228                 |
|         | Range / conversion API, 320        | Analogy user API, 332                  |
| a4l     | rawtof                             | Asynchronous acquisition API, 305, 311 |
| u-11_   | Range / conversion API, 320        | a4l_async_read, 311                    |
| - 41    | rawtoul                            | a4l async write, 311                   |
| a41_    | =                                  | a4l_get_bufsize, 307                   |
| - 41    | Range / conversion API, 320        | a4l mark bufrw, 307                    |
| a4I_    | _register_drv                      |  |
|         | Driver management services, 230    | a4l_mmap, 308                          |
| a4l_    | _request_irq                       | a4l_poll, 308                          |
|         | Interrupt management services, 244 | a4l_set_bufsize, 309                   |
| a4l_    | _set_bufsize                       | a4l_snd_cancel, 309                    |
|         | Asynchronous acquisition API, 309  | a4l_snd_command, 310                   |
| a4l_    | sizeof_chan                        | Asynchronous Procedure Calls, 82       |
| _       | Range / conversion API, 321        | xnapc_alloc, 82                        |
| a4l     | _sizeof_subd                       | xnapc_free, 83                         |
|         | Range / conversion API, 321        | xnapc_schedule, 83                     |
| a4l     | _snd_cancel                        | atomic_long_t, 444                     |
| α+ι_    | Asynchronous acquisition API, 309  | Attach / detach Syscall API, 336       |
| 241     | snd command                        | a4l_sys_attach, 336                    |
| a41_    |                                    | a4l_sys_bufcfg, 336                    |
| - 41    | Asynchronous acquisition API, 310  | a4l_sys_detach, 337                    |
| a41_    | _snd_insn                          | a n_oyo_dotdon, oo7                    |
|         | Synchronous acquisition API, 326   | B PRIO                                 |
| a4l_    | _snd_insnlist                      | Buffer services, 343                   |
|         | Synchronous acquisition API, 326   | BUFP BUFSZ                             |
| a4l_    | _subdevice, 442                    | Real-time IPC, 69                      |
| a4l_    | _sync_dio                          | BUFP_LABEL                             |
|         | Synchronous acquisition API, 330   | Real-time IPC, 70                      |
| a4l     | sync_read                          | Basic Syscall API, 334                 |
| _       | Synchronous acquisition API, 330   |  |
| a4l     | sync write                         | a4l_sys_close, 334                     |
| <b></b> | Synchronous acquisition API, 331   | a4l_sys_open, 334                      |
| a4l     | sys_attach                         | a4l_sys_read, 334                      |
| a+1_    | Attach / detach Syscall API, 336   | a4l_sys_write, 335                     |
| - 41    |                                    | begin                                  |
| a41_    | _sys_bufcfg                        | xnvfile_regular_ops, 464               |
| - 41    | Attach / detach Syscall API, 336   | xnvfile_snapshot_ops, 469              |
| a41_    | _sys_close                         | Big dual kernel lock, 20               |
|         | Basic Syscall API, 334             | cobalt_atomic_enter, 20                |
| a4l_    | _sysdesc                           | cobalt_atomic_leave, 21                |
|         | Descriptor Syscall API, 313        | bind AF RTIPC                          |
| a4l_    | _sys_detach                        | Real-time IPC, 76                      |
|         | Attach / detach Syscall API, 337   | board_name                             |
| a4l     | _sys_open                          | a4l_descriptor, 438                    |
|         | Basic Syscall API, 334             | Buffer descriptor, 85                  |
| a4l     | sys_read                           | xnbufd_copy_from_kmem, 87              |
| <b></b> | Basic Syscall API, 334             | xnbufd_copy_to_kmem, 88                |
| 2/1     | sys_write                          |  |
| a+1_    | = · =                              | xnbufd_invalidate, 88                  |
| - 41    | Basic Syscall API, 335             | xnbufd_map_kread, 89                   |
| a41_    | _ultoraw                           | xnbufd_map_kwrite, 89                  |
|         | Range / conversion API, 322        | xnbufd_map_uread, 89                   |
| a4l_    | _unregister_drv                    | xnbufd_map_uwrite, 90                  |
|         | Driver management services, 230    | xnbufd_reset, 90                       |
| Alaı    | m services, 338                    | xnbufd_unmap_kread, 90                 |
|         | rt_alarm_create, 338               | xnbufd_unmap_kwrite, 91                |
|         | rt_alarm_delete, 339               | xnbufd_unmap_uread, 91                 |

| xnbufd_unmap_uwrite, 91          | CAN_STATE_BUS_OFF                     |
|----------------------------------|---------------------------------------|
| Buffer management services, 236  | CAN Devices, 49                       |
| a4l_buf_commit_absget, 237       | CAN_STATE_BUS_PASSIVE                 |
| a4l_buf_commit_absput, 238       | CAN Devices, 49                       |
| a4l_buf_commit_get, 238          | CAN_STATE_BUS_WARNING                 |
| a4l_buf_commit_put, 238          | CAN Devices, 49                       |
| a4l_buf_count, 239               | CAN_STATE_ERROR_ACTIVE                |
| a4l_buf_evt, 239                 | CAN Devices, 49                       |
| a4l_buf_get, 240                 | CAN_STATE_ERROR_PASSIVE               |
| a4l_buf_prepare_absget, 240      | CAN Devices, 49                       |
| a4l buf prepare absput, 240      | CAN STATE ERROR WARNING               |
| a4l_buf_prepare_get, 241         | CAN Devices, 49                       |
| a4l_buf_prepare_put, 241         | CAN STATE SCANNING BAUDRATE           |
| a4l_buf_put, 241                 |                                       |
| a4l_get_chan, 243                | CAN Devices, 49                       |
| a4l_get_cmd, 243                 | CAN Parisas 40                        |
| Buffer services, 342             | CAN Devices, 49                       |
| B_PRIO, 343                      | CAN_STATE_STOPPED                     |
| rt_buffer_bind, 343              | CAN Devices, 49                       |
|                                  | CAN Devices, 30                       |
| rt_buffer_clear, 344             | CAN_BITTIME_TYPE, 49                  |
| rt_buffer_create, 344            | CAN_MODE, 49                          |
| rt_buffer_delete, 345            | CAN_RAW_FILTER, 40                    |
| rt_buffer_inquire, 345           | CAN_RAW_LOOPBACK, 40                  |
| rt_buffer_read, 346              | CAN_STATE, 49                         |
| rt_buffer_read_timed, 346        | can_filter_t, 48                      |
| rt_buffer_read_until, 347        | can_frame_t, 48                       |
| rt_buffer_unbind, 348            | SIOCGCANBAUDRATE, 42                  |
| rt_buffer_write, 348             | SIOCGCANCTRLMODE, 44                  |
| rt_buffer_write_timed, 348       | SIOCGCANSTATE, 44                     |
| rt_buffer_write_until, 349       | SIOCGIFINDEX, 45                      |
| CAND                             | SIOCSCANBAUDRATE, 45                  |
| CAN Devices                      | SIOCSCANCTRLMODE, 46                  |
| CAN_BITTIME_BTR, 49              | SIOCSCANMODE, 47                      |
| CAN_BITTIME_STD, 49              | SOL CAN RAW, 48                       |
| CAN_MODE_SLEEP, 49               | CAN BITTIME TYPE                      |
| CAN_MODE_START, 49               | CAN Devices, 49                       |
| CAN_MODE_STOP, 49                | · · · · · · · · · · · · · · · · · · · |
| CAN_STATE_ACTIVE, 49             | CAN Pavisos 40                        |
| CAN_STATE_BUS_OFF, 49            | CAN Devices, 49                       |
| CAN_STATE_BUS_PASSIVE, 49        | CAN_RAW_ERR_FILTER                    |
| CAN_STATE_BUS_WARNING, 49        | CAN Devices, 39                       |
| CAN_STATE_ERROR_ACTIVE, 49       | CAN_RAW_FILTER                        |
| CAN_STATE_ERROR_PASSIVE, 49      | CAN Devices, 40                       |
| CAN_STATE_ERROR_WARNING, 49      | CAN_RAW_LOOPBACK                      |
| CAN_STATE_SCANNING_BAUDRATE, 49  | CAN Devices, 40                       |
| CAN_STATE_SLEEPING, 49           | CAN_STATE                             |
| CAN_STATE_STOPPED, 49            | CAN Devices, 49                       |
| CAN_BITTIME_BTR                  | can_bittime, 444                      |
| CAN Devices, 49                  | can_bittime_btr, 445                  |
| CAN BITTIME STD                  | can_bittime_std, 445                  |
| CAN Devices, 49                  | can_filter, 446                       |
| CAN MODE SLEEP                   | can_id, 446                           |
| CAN Devices, 49                  | can_mask, 446                         |
| CAN_MODE_START                   | can_filter_t                          |
| CAN Devices, 49                  | CAN Devices, 48                       |
| CAN MODE STOP                    | can_frame, 447                        |
| CAN Devices, 49                  | can_id, 447                           |
| CAN Devices, 49 CAN_STATE_ACTIVE | can frame t                           |
| CAN Devices, 49                  | CAN Devices, 48                       |
| OAN DEVICES, 43                  | OAN DEVICES, 40                       |

| can_id                                | pthread_cond_destroy, 256               |
|---------------------------------------|---|
| can_filter, 446                       | pthread_cond_init, 257                  |
| can_frame, 447                        | pthread_cond_signal, 257                |
| can_ifindex                           | pthread_cond_timedwait, 257             |
| sockaddr_can, 459                     | pthread_cond_wait, 258                  |
| can_mask                              | pthread_condattr_destroy, 259           |
| can_filter, 446                       | pthread_condattr_getclock, 259          |
| Channels and ranges, 17               | pthread_condattr_getpshared, 260        |
| chans                                 | pthread_condattr_init, 260              |
| a4l_channels_desc, 436                | pthread_condattr_setclock, 261          |
| Clock Services, 131                   | pthread_condattr_setpshared, 261        |
| rtdm_clock_read, 131                  | connectAF_RTIPC                         |
| rtdm_clock_read_monotonic, 131        | Real-time IPC, 78                       |
| Clock services, 93                    | cpu                                     |
| xnclock_adjust, 93                    | xnsched, 460                            |
| xnclock_deregister, 93                | curr                                    |
| xnclock_register, 95                  | xnsched, 460                            |
| xnclock tick, 95                      |   |
| clock_getres                          | databuf                                 |
| Clocks and timers, 249                | xnvfile_snapshot_iterator, 468          |
| clock_gettime                         | date                                    |
| Clocks and timers, 249                | rt_timer_info, 453                      |
| clock_nanosleep                       | Debugging services, 96                  |
| Clocks and timers, 250                | Descriptor API, 315                     |
| clock_settime                         | a4l_close, 315                          |
| Clocks and timers, 250                | a4l_fill_desc, 316                      |
| Clocks and timers, 248                | a4l_get_chinfo, 316                     |
| clock_getres, 249                     | a4l_get_rnginfo, 316                    |
| clock_gettime, 249                    | a4l_get_subdinfo, 317                   |
| clock_nanosleep, 250                  | a4l_open, 317                           |
| clock_settime, 250                    | Descriptor Syscall API, 313             |
| nanosleep, 251                        | a4l_sys_desc, 313                       |
| timer_create, 251                     | device                                  |
| timer_delete, 252                     | rtdm_dev_context, 454                   |
| timer_getoverrun, 253                 | Device Profiles, 183                    |
| timer_gettime, 253                    | RTIOC_DEVICE_INFO, 184                  |
| timer_settime, 253                    | RTIOC_PURGE, 185                        |
| close_AF_RTIPC                        | Device Registration Services, 128       |
| Real-time IPC, 77                     | RTDM_EXCLUSIVE, 129                     |
| Cobalt, 102                           | RTDM_NAMED_DEVICE, 129                  |
| Cobalt kernel, 103                    | rtdm_dev_register, 129                  |
| cobalt_atomic_enter                   | rtdm_dev_unregister, 130                |
| Big dual kernel lock, 20              | Driver API, 229                         |
| cobalt atomic leave                   | Driver management services, 230         |
| Big dual kernel lock, 21              | a4l_register_drv, 230                   |
| Condition variable services, 351      | a4l_unregister_drv, 230                 |
| rt cond bind, 352                     | Driver programming interface, 121       |
| rt cond broadcast, 352                | Driver to driver services, 122          |
| rt_cond_create, 353                   | rtdm_accept, 123                        |
| rt_cond_delete, 353                   | rtdm_bind, 123                          |
| rt_cond_inquire, 354                  | rtdm_close, 123                         |
| rt_cond_signal, 354                   | rtdm_connect, 123                       |
| rt_cond_unbind, 355                   | rtdm_getpeername, 124                   |
| rt cond wait, 355                     | rtdm_getsockname, 124                   |
| rt_cond_wait_timed, 355               | rtdm_getsockopt, 124<br>rtdm_ioctl, 124 |
| rt_cond_wait_timed, 355               | rtdm_listen, 124                        |
| Condition variables, 255              | rtdm_open, 125                          |
| · · · · · · · · · · · · · · · · · · · | — ·                                     |
| pthread_cond_broadcast, 256           | rtdm_read, 125                          |

| rtdm_recv, 125   | a4l_descriptor, 438   |
|--|---|
| rtdm recvfrom, 125   | flags   |
| rtdm_recvmsg, 125  | a4l_channel, 435  |
| rtdm_send, 126   | a4l_range, 442  |
| rtdm_sendmsg, 126  | _ 0 /   |
| rtdm_sendto, 126   | get   |
| rtdm_setsockopt, 126   | xnvfile_lock_ops, 462   |
| rtdm_shutdown, 126   | getpeername_AF_RTIPC  |
| rtdm_socket, 127   | Real-time IPC, 78   |
| rtdm_write, 127  | getsockname AF RTIPC  |
| driver.h   | Real-time IPC, 79   |
| rtdm_fd_device, 487  | getsockoptAF_RTIPC  |
| rtdm_fd_is_user, 488   | Real-time IPC, 79   |
| rtdm_fd_to_private, 488  | ,   |
| rtdm_open_handler_t, 486   | H PRIO  |
| rtdm_private_to_fd, 488  | Heap management services, 366   |
| rtdm_socket_handler_t, 486   | Heap management services, 365   |
| Dynamic memory allocation services, 97   | H_PRIO, 366   |
| xnheap_alloc, 98   | rt_heap_alloc, 366  |
| xnheap_alloc, 98   | rt_heap_alloc_timed, 366  |
| . =  | rt_heap_alloc_until, 367  |
| xnheap_extend, 99  | rt_heap_bind, 367   |
| xnheap_free, 99  | rt_heap_create, 368   |
| xnheap_init, 99  | rt_heap_delete, 369   |
| xnheap_set_label, 100  | rt_heap_free, 369   |
| xnheap_test_and_free, 100  | rt_heap_inquire, 371  |
| EV ANY   | rt heap unbind, 371   |
| <del>_</del>   | htimer  |
| Event flag group services, 358   | xnsched, 460  |
| EV_PRIO  | Alisched, 400   |
| Event flag group services, 358   | IPCPROTO BUFP   |
| end  | Real-time IPC, 76   |
| xnvfile_regular_ops, 464   | IPCPROTO_IDDP   |
| xnvfile_snapshot_ops, 470  | Real-time IPC, 76   |
| endfn  | IPCPROTO IPC  |
| xnvfile_snapshot_iterator, 468   | Real-time IPC, 76   |
| Event flag group services, 357   | IPCPROTO XDDP   |
| EV_ANY, 358  | Real-time IPC, 76   |
| EV_PRIO, 358   | IDDP_LABEL  |
| rt_event_bind, 358   | Real-time IPC, 70   |
| rt_event_clear, 359  | · · · · · · · · · · · · · · · · · · ·   |
| rt_event_create, 359   | IDDP_POOLSZ Real-time IPC, 71   |
| rt_event_delete, 360   | · · · · · · · · · · · · · · · · · · ·   |
| rt_event_inquire, 360  | idx_read_subd   |
| rt_event_signal, 361   | a4l_descriptor, 438   |
| rt_event_unbind, 361   | idx_subd  |
| rt_event_wait, 361   | a4l_cmd_desc, 437   |
| rt_event_wait_timed, 363   | a4l_instruction, 440  |
| rt_event_wait_until, 364   | idx_write_subd  |
| Event Services, 155  | a4l_descriptor, 438   |
| rtdm_event_clear, 155  | In-kernel arithmetics, 84   |
| rtdm_event_destroy, 155  | xnarch_generic_full_divmod64, 84  |
|  | include/cobalt/kernel/rtdm/analogy/buffer.h, 473  |
| rtdm_event_init, 157   | include/cobalt/kernel/rtdm/analogy/channel  |
| rtdm_event_pulse, 157  |   |
| rtdm_event_pulse, 157 rtdm_event_select_bind, 157  | range.h, 474  |
| rtdm_event_pulse, 157  | include/cobalt/kernel/rtdm/analogy/context.h, 477   |
| rtdm_event_pulse, 157 rtdm_event_select_bind, 157  | include/cobalt/kernel/rtdm/analogy/context.h, 477 include/cobalt/kernel/rtdm/analogy/device.h, 479  |
| rtdm_event_pulse, 157 rtdm_event_select_bind, 157 rtdm_event_signal, 158                           | include/cobalt/kernel/rtdm/analogy/context.h, 477 include/cobalt/kernel/rtdm/analogy/device.h, 479 include/cobalt/kernel/rtdm/analogy/driver.h, 480 |
| rtdm_event_pulse, 157 rtdm_event_select_bind, 157 rtdm_event_signal, 158 rtdm_event_timedwait, 158 | include/cobalt/kernel/rtdm/analogy/context.h, 477 include/cobalt/kernel/rtdm/analogy/device.h, 479  |

| include/cobalt/kernel/rtdm/analogy/rtdm_helpersh, 490 include/cobalt/kernel/rtdm/analogy/subdevice.h, 491 include/cobalt/kernel/rtdm/analogy/transfer.h, 493 include/cobalt/kernel/rtdm/can.h, 494 include/cobalt/kernel/rtdm/cobalt.h, 502 include/cobalt/kernel/rtdm/driver.h, 481 include/cobalt/kernel/rtdm/jpc.h, 502 include/cobalt/kernel/rtdm/rtdm.h, 507 include/cobalt/kernel/rtdm/serial.h, 511 include/cobalt/kernel/rtdm/serial.h, 511 include/cobalt/kernel/rtdm/testing.h, 520 include/rtdm/analogy.h, 523 include/rtdm/can.h, 494 include/rtdm/ipc.h, 503 | lib/analogy/range.c, 534 lib/analogy/root_leaf.h, 535 lib/analogy/sync.c, 535 lib/analogy/sys.c, 537 Lightweight key-to-object mapping service, 112 |
|---|---|
| include/rtdm/rtdm.h, 508<br>include/rtdm/serial.h, 511  | magic   |
| include/rtdm/testing.h, 521   | a4I descriptor, 439   |
| include/rtdm/uapi/analogy.h, 525  | max   |
| include/rtdm/uapi/can.h, 495  | a4l_range, 442  |
| include/rtdm/uapi/ipc.h, 504  | Message pipe services, 380  |
| include/rtdm/uapi/rtdm.h, 509   | P_MINOR_AUTO, 381   |
| include/rtdm/uapi/serial.h, 512   | P_URGENT, 381   |
| include/rtdm/uapi/testing.h, 522  | rt_pipe_bind, 381   |
| inesting  | rt_pipe_create, 382   |
| xnsched, 461  | rt_pipe_delete, 383   |
| Interrupt management, 106   | rt_pipe_read, 383   |
| xnintr_affinity, 106  | rt_pipe_read_timed, 383   |
| xnintr_attach, 106  | rt_pipe_read_until, 385   |
| xnintr_destroy, 107   | rt_pipe_stream, 386   |
| xnintr_detach, 107  | rt_pipe_unbind, 386   |
| xnintr_disable, 108   | rt_pipe_write, 387  |
| xnintr_enable, 108  | Message queue services, 388   |
| xnintr_init, 108  | Q_PRIO, 389   |
| Interrupt Management Services, 166  | rt_queue_alloc, 389   |
| rtdm_irq_disable, 167   | rt_queue_bind, 389  |
| rtdm_irq_enable, 168  | rt_queue_create, 390  |
| rtdm_irq_free, 168  | rt_queue_delete, 391  |
| rtdm_irq_get_arg, 167   | rt_queue_flush, 392   |
| rtdm_irq_handler_t, 167   | rt_queue_free, 392  |
| rtdm_irq_request, 169   | rt_queue_inquire, 392   |
| Interrupt management services, 244  | rt_queue_read, 393  |
| a4l_free_irq, 244   | rt_queue_read_timed, 393  |
| a4l_get_irq, 244  | rt_queue_read_until, 394  |
| a4l_request_irq, 244  | rt_queue_receive, 395   |
| labol   | rt_queue_receive_timed, 395   |
| label rtipc port label, 457   | rt_queue_receive_until, 396 rt_queue_send, 396  |
| length  | rt_queue_send, 390<br>rt_queue_unbind, 397  |
| a4l_channels_desc, 436  | Message queues, 264   |
| Level 0 API, 333  | mq_close, 265   |
| Level 1 API, 323  | mq_getattr, 265   |
| Level 2 API, 328  | mq_notify, 265  |
| Iflags  | mq_open, 266  |
| xnsched, 461  | mq_receive, 267   |
| lib/analogy/async.c, 531  | mq_send, 268  |
| lib/analogy/descriptor.c, 532   | mq_setattr, 268   |
| lib/analogy/info.c, 533   | mq_timedreceive, 269  |
| lib/analogy/internal.h, 530   | mq_timedsend, 269   |
| •   | <u> </u>  |

| mg_unlink, 271                                 | RTDM, 51                               |
|--|--|
| min  | nanosecs_rel_t                         |
| a4l range, 442                                 | RTDM, 51                               |
| Misc services, 247                             | nanosleep                              |
| a4l get time, 247                              | Clocks and timers, 251                 |
| mode   | nb_bits                                |
| a4l_channels_desc, 436                         | a4l_channel, 435                       |
| mq_close                                       | nb_subd                                |
| Message queues, 265                            | a4l_descriptor, 439                    |
| mq_getattr                                     | next                                   |
| Message queues, 265                            | xnvfile_regular_ops, 464               |
| mq_notify                                      | xnvfile_snapshot_ops, 470              |
| Message queues, 265                            | nkvfroot                               |
| mq_open  | Virtual file services, 227             |
| Message queues, 266                            | Non-Real-Time Signalling Services, 170 |
| mq_receive                                     | rtdm_nrtsig_destroy, 171               |
| Message queues, 267                            | rtdm_nrtsig_handler_t, 170             |
| mq_send  | rtdm_nrtsig_init, 171                  |
| Message queues, 268                            | rtdm_nrtsig_pend, 171                  |
| mq_setattr                                     | nrdata                                 |
| Message queues, 268                            | xnvfile_snapshot_iterator, 468         |
| mq_timedreceive                                |  |
| Message queues, 269                            | open                                   |
| mq_timedsend                                   | rtdm_device, 456                       |
| Message queues, 269                            | owner                                  |
| mq_unlink                                      | RT_MUTEX_INFO, 451                     |
| Message queues, 271                            | P MINOR AUTO                           |
| Mutex services, 163, 374                       | Message pipe services, 381             |
| rt_mutex_acquire, 375                          | P URGENT                               |
| rt_mutex_acquire_timed, 375                    | Message pipe services, 381             |
| rt_mutex_acquire_until, 376 rt_mutex_bind, 376 | POSIX interface, 263                   |
| rt_mutex_bind, 376<br>rt_mutex_create, 377     | pSOS® emulator, 431                    |
| rt_mutex_create, 377 rt_mutex_delete, 377      | pos                                    |
| rt_mutex_uelete, 377 rt_mutex_inquire, 378     | xnvfile_regular_iterator, 463          |
| rt_mutex_release, 378                          | private                                |
| rt_mutex_unbind, 379                           | xnvfile_regular_iterator, 463          |
| rtdm_mutex_destroy, 163                        | xnvfile_snapshot_iterator, 469         |
| rtdm_mutex_init, 163                           | program_htick_shot                     |
| rtdm_mutex_lock, 164                           | Timer services, 215                    |
| rtdm mutex timedlock, 164                      | pthread_cond_broadcast                 |
| rtdm mutex unlock, 165                         | Condition variables, 256               |
| Mutual exclusion, 273                          | pthread_cond_destroy                   |
| pthread mutex destroy, 274                     | Condition variables, 256               |
| pthread_mutex_init, 274                        | pthread_cond_init                      |
| pthread_mutex_lock, 275                        | Condition variables, 257               |
| pthread_mutex_timedlock, 276                   | pthread_cond_signal                    |
| pthread_mutex_trylock, 276                     | Condition variables, 257               |
| pthread_mutex_unlock, 277                      | pthread_cond_timedwait                 |
| pthread_mutexattr_destroy, 277                 | Condition variables, 257               |
| pthread_mutexattr_getprotocol, 278             | pthread_cond_wait                      |
| pthread_mutexattr_getpshared, 278              | Condition variables, 258               |
| pthread_mutexattr_gettype, 279                 | pthread_condattr_destroy               |
| pthread_mutexattr_init, 279                    | Condition variables, 259               |
| pthread_mutexattr_setprotocol, 280             | pthread_condattr_getclock              |
| pthread_mutexattr_setpshared, 280              | Condition variables, 259               |
| pthread_mutexattr_settype, 281                 | pthread_condattr_getpshared            |
| nanososs abs t                                 | Condition variables, 260               |
| nanosecs_abs_t                                 | pthread_condattr_init                  |

| Condition variables, 260      | xnvfile_lock_ops, 462             |
|-------------------------------|-----------------------------------|
| pthread_condattr_setclock     | 0. 0010                           |
| Condition variables, 261      | Q_PRIO                            |
| pthread_condattr_setpshared   | Message queue services, 389       |
| Condition variables, 261      | RTDM SELECTTYPE EXCEPT            |
| pthread_create                | Synchronisation Services, 146     |
| Thread management, 289        | RTDM SELECTTYPE READ              |
| pthread_getschedparam         | Synchronisation Services, 146     |
| Scheduling management, 294    | RTDM_SELECTTYPE_WRITE             |
| pthread_getschedparam_ex      | Synchronisation Services, 146     |
| Scheduling management, 294    | RTDM TIMERMODE ABSOLUTE           |
| pthread_join                  | Timer Services, 141               |
| Thread management, 290        | RTDM TIMERMODE REALTIME           |
| pthread_kill                  | Timer Services, 141               |
| Thread management, 291        | RTDM TIMERMODE RELATIVE           |
| pthread_make_periodic_np      | Timer Services, 141               |
| Transition Kit, 432           | RT_ALARM_INFO, 448                |
| pthread_mutex_destroy         | RT_BUFFER_INFO, 448               |
| Mutual exclusion, 274         | RT_COND_INFO, 449                 |
| pthread_mutex_init            | RT_EVENT_INFO, 449                |
| Mutual exclusion, 274         | RT_HEAP_INFO, 449                 |
| pthread_mutex_lock            | usablemem, 450                    |
| Mutual exclusion, 275         | RT MUTEX INFO, 450                |
| pthread_mutex_timedlock       | owner, 451                        |
| Mutual exclusion, 276         | RT QUEUE INFO, 451                |
| pthread_mutex_trylock         | RT SEM INFO, 451                  |
| Mutual exclusion, 276         | RT_TASK_INFO, 452                 |
| pthread_mutex_unlock          | RT_TIMER_INFO                     |
| Mutual exclusion, 277         | Timer management services, 427    |
| pthread_mutexattr_destroy     | RTDM, 50                          |
| Mutual exclusion, 277         | nanosecs_abs_t, 51                |
| pthread_mutexattr_getprotocol | nanosecs rel t, 51                |
| Mutual exclusion, 278         | RTDM_TIMEOUT_NONE, 51             |
| pthread_mutexattr_getpshared  | RTDM User API, 52                 |
| Mutual exclusion, 278         | rt_dev_accept, 53                 |
| pthread_mutexattr_gettype     | rt_dev_bind, 53                   |
| Mutual exclusion, 279         | rt_dev_close, 54                  |
| pthread_mutexattr_init        | rt dev connect, 54                |
| Mutual exclusion, 279         | rt_dev_getpeername, 55            |
| pthread_mutexattr_setprotocol | rt_dev_getsockname, 55            |
| Mutual exclusion, 280         | rt_dev_getsockopt, 56             |
| pthread_mutexattr_setpshared  | rt_dev_ioctl, 56                  |
| Mutual exclusion, 280         | rt_dev_listen, 57                 |
| pthread_mutexattr_settype     | rt_dev_open, 57                   |
| Mutual exclusion, 281         | rt_dev_read, 57                   |
| pthread_setmode_np            | rt_dev_recv, 58                   |
| Thread management, 291        | rt_dev_recvfrom, 58               |
| pthread_setname_np            | rt_dev_recvmsg, 59                |
| Thread management, 292        | rt_dev_send, 59                   |
| pthread_setschedparam         | rt_dev_sendmsg, 60                |
| Scheduling management, 294    | rt_dev_sendto, 60                 |
| pthread_setschedparam_ex      | rt_dev_setsockopt, 61             |
| Scheduling management, 295    | rt_dev_shutdown, 61               |
| pthread_wait_np               | rt_dev_socket, 62                 |
| Transition Kit, 432           | rt_dev_write, 62                  |
| pthread_yield                 | RTDM_EXCLUSIVE                    |
| Scheduling management, 296    | Device Registration Services, 129 |
| put                           | RTDM_NAMED_DEVICE                 |

| Device Registration Services, 129 RTDM_TIMEOUT_NONE | Registry services, 117 xnregistry_bind, 117 |
|---|---|
| RTDM, 51  | xnregistry_enter, 118                       |
| RTIOC_DEVICE_INFO                                   | xnregistry_lookup, 119                      |
| Device Profiles, 184                                | xnregistry_remove, 119                      |
| RTIOC PURGE   | xnregistry_unlink, 120                      |
| Device Profiles, 185                                | resched                                     |
| Range / conversion API, 318                         | xnsched, 461                                |
| a4l dtoraw, 318                                     | rev   |
| a4I_find_range, 319                                 | xnvfile rev tag, 466                        |
|   |   |
| a4l_ftoraw, 319                                     | rewind                                      |
| a4l_rawtod, 320                                     | xnvfile_regular_ops, 465                    |
| a4l_rawtof, 320                                     | xnvfile_snapshot_ops, 471                   |
| a4l_rawtoul, 320                                    | rrbtimer                                    |
| a4l_sizeof_chan, 321                                | xnsched, 461                                |
| a4l_sizeof_subd, 321                                | rt  |
| a4l_ultoraw, 322                                    | xnsched, 461                                |
| Real-time IPC                                       | rt_alarm_create                             |
| IPCPROTO_BUFP, 76                                   | Alarm services, 338                         |
| IPCPROTO_IDDP, 76                                   | rt_alarm_delete                             |
| IPCPROTO IPC, 76                                    | Alarm services, 339                         |
| IPCPROTO_XDDP, 76                                   | rt_alarm_inquire                            |
| Real-time IPC, 67                                   | Alarm services, 339                         |
| BUFP BUFSZ, 69                                      | rt_alarm_start                              |
| BUFP LABEL, 70                                      | Alarm services, 340                         |
| bindAF_RTIPC, 76                                    | rt_alarm_stop                               |
|   |   |
| close_AF_RTIPC, 77                                  | Alarm services, 340                         |
| connect_AF_RTIPC, 78                                | rt_buffer_bind                              |
| getpeernameAF_RTIPC, 78                             | Buffer services, 343                        |
| getsocknameAF_RTIPC, 79                             | rt_buffer_clear                             |
| getsockoptAF_RTIPC, 79                              | Buffer services, 344                        |
| IDDP_LABEL, 70                                      | rt_buffer_create                            |
| IDDP_POOLSZ, 71                                     | Buffer services, 344                        |
| recvmsgAF_RTIPC, 79                                 | rt_buffer_delete                            |
| SO_RCVTIMEO, 72                                     | Buffer services, 345                        |
| SO_SNDTIMEO, 72                                     | rt_buffer_inquire                           |
| sendmsgAF_RTIPC, 80                                 | Buffer services, 345                        |
| setsockoptAF_RTIPC, 81                              | rt buffer read                              |
| socket_AF_RTIPC, 81                                 | Buffer services, 346                        |
| XDDP_BUFSZ, 72                                      | rt_buffer_read_timed                        |
| XDDP_EVTDOWN, 73                                    | Buffer services, 346                        |
| XDDP_EVTIN, 73                                      | rt_buffer_read_until                        |
| XDDP_EVTNOBUF, 73                                   | Buffer services, 347                        |
| XDDP EVTOUT, 73                                     | rt_buffer_unbind                            |
| XDDP_LABEL, 73                                      | Buffer services, 348                        |
| XDDP MONITOR, 74                                    | · ·   |
| <u> </u>  | rt_buffer_write                             |
| XDDP_POOLSZ, 75                                     | Buffer services, 348                        |
| Real-time shadow services, 193                      | rt_buffer_write_timed                       |
| xnshadow_get_context, 193                           | Buffer services, 348                        |
| xnshadow_harden, 194                                | rt_buffer_write_until                       |
| xnshadow_map_kernel, 194                            | Buffer services, 349                        |
| xnshadow_map_user, 195                              | rt_cond_bind                                |
| xnshadow_pop_personality, 195                       | Condition variable services, 352            |
| xnshadow_push_personality, 195                      | rt_cond_broadcast                           |
| xnshadow_register_personality, 196                  | Condition variable services, 352            |
| xnshadow_relax, 196                                 | rt_cond_create                              |
| recvmsg_AF_RTIPC                                    | Condition variable services, 353            |
| Real-time IPC, 79                                   | rt_cond_delete                              |

| Condition variable services, 353                    | Event flag group services, 359                      |
|---|---|
| rt_cond_inquire                                     | rt_event_create                                     |
| Condition variable services, 354                    | Event flag group services, 359                      |
| rt_cond_signal                                      | rt_event_delete                                     |
| Condition variable services, 354                    | Event flag group services, 360                      |
| rt_cond_unbind                                      | rt_event_inquire                                    |
| Condition variable services, 355                    | Event flag group services, 360                      |
| rt_cond_wait  | rt_event_signal                                     |
| Condition variable services, 355                    | Event flag group services, 361                      |
| rt_cond_wait_timed                                  | rt_event_unbind                                     |
| Condition variable services, 355                    | Event flag group services, 361                      |
| rt_cond_wait_until Condition variable services, 356 | rt_event_wait                                       |
|   | Event flag group services, 361  rt_event_wait_timed |
| rt_dev_accept<br>RTDM User API, 53                  | Event flag group services, 363                      |
| rt_dev_bind   | rt_event_wait_until                                 |
| RTDM User API, 53                                   | Event flag group services, 364                      |
| rt_dev_close  | rt heap alloc                                       |
| RTDM User API, 54                                   | Heap management services, 366                       |
| rt dev connect                                      | rt_heap_alloc_timed                                 |
| RTDM User API, 54                                   | Heap management services, 366                       |
| rt_dev_getpeername                                  | rt_heap_alloc_until                                 |
| RTDM User API, 55                                   | Heap management services, 367                       |
| rt_dev_getsockname                                  | rt_heap_bind  |
| RTDM User API, 55                                   | Heap management services, 367                       |
| rt_dev_getsockopt                                   | rt_heap_create                                      |
| RTDM User API, 56                                   | Heap management services, 368                       |
| rt_dev_ioctl  | rt_heap_delete                                      |
| RTDM User API, 56                                   | Heap management services, 369                       |
| rt_dev_listen                                       | rt_heap_free  |
| RTDM User API, 57                                   | Heap management services, 369                       |
| rt_dev_open   | rt_heap_inquire                                     |
| RTDM User API, 57                                   | Heap management services, 371                       |
| rt_dev_read   | rt_heap_unbind                                      |
| RTDM User API, 57                                   | Heap management services, 371                       |
| rt_dev_recv   | rt_mutex_acquire                                    |
| RTDM User API, 58                                   | Mutex services, 375                                 |
| rt_dev_recvfrom                                     | rt_mutex_acquire_timed                              |
| RTDM User API, 58                                   | Mutex services, 375                                 |
| rt_dev_recvmsg                                      | rt_mutex_acquire_until                              |
| RTDM User API, 59                                   | Mutex services, 376                                 |
| rt_dev_send   | rt_mutex_bind                                       |
| RTDM User API, 59                                   | Mutex services, 376                                 |
| rt_dev_sendmsg                                      | rt_mutex_create                                     |
| RTDM User API, 60                                   | Mutex services, 377                                 |
| rt_dev_sendto                                       | rt_mutex_delete                                     |
| RTDM User API, 60                                   | Mutex services, 377                                 |
| rt_dev_setsockopt                                   | rt_mutex_inquire                                    |
| RTDM User API, 61                                   | Mutex services, 378                                 |
| rt_dev_shutdown                                     | rt_mutex_release                                    |
| RTDM User API, 61                                   | Mutex services, 378                                 |
| rt_dev_socket                                       | rt_mutex_unbind                                     |
| RTDM User API, 62                                   | Mutex services, 379                                 |
| rt_dev_write  | rt_pipe_bind  |
| RTDM User API, 62                                   | Message pipe services, 381                          |
| rt_event_bind                                       | rt_pipe_create                                      |
| Event flag group services, 358                      | Message pipe services, 382                          |
| rt_event_clear                                      | rt_pipe_delete                                      |

| Message pipe services, 383 rt_pipe_read             | Semaphore services, 402 rt_sem_unbind           |
|---|---|
| Message pipe services, 383                          | Semaphore services, 403                         |
| rt_pipe_read_timed                                  | rt_sem_v  |
| Message pipe services, 383                          | Semaphore services, 403                         |
| rt_pipe_read_until                                  | rt_task_bind                                    |
| Message pipe services, 385                          | Task management services, 406                   |
| rt_pipe_stream                                      | rt_task_create                                  |
| Message pipe services, 386                          | Task management services, 406                   |
| rt_pipe_unbind  Message pipe services, 386          | rt_task_delete  Task management services, 408   |
| rt_pipe_write                                       | rt task inquire                                 |
| Message pipe services, 387                          | Task management services, 408                   |
| rt_queue_alloc                                      | rt_task_join                                    |
| Message queue services, 389                         | Task management services, 409                   |
| rt_queue_bind                                       | rt_task_receive                                 |
| Message queue services, 389                         | Task management services, 410                   |
| rt_queue_create                                     | rt_task_receive_timed                           |
| Message queue services, 390                         | Task management services, 410                   |
| rt_queue_delete                                     | rt_task_receive_until                           |
| Message queue services, 391                         | Task management services, 411                   |
| rt_queue_flush                                      | rt_task_reply                                   |
| Message queue services, 392                         | Task management services, 411                   |
| rt_queue_free                                       | rt_task_resume                                  |
| Message queue services, 392 rt_queue_inquire        | Task management services, 412 rt_task_same      |
| Message queue services, 392                         | Task management services, 413                   |
| rt_queue_read                                       | rt_task_self                                    |
| Message queue services, 393                         | Task management services, 413                   |
| rt_queue_read_timed                                 | rt_task_send                                    |
| Message queue services, 393                         | Task management services, 413                   |
| rt_queue_read_until                                 | rt_task_send_timed                              |
| Message queue services, 394                         | Task management services, 414                   |
| rt_queue_receive                                    | rt_task_send_until                              |
| Message queue services, 395                         | Task management services, 415                   |
| rt_queue_receive_timed                              | rt_task_set_affinity                            |
| Message queue services, 395                         | Task management services, 416                   |
| rt_queue_receive_until  Message queue services, 396 | rt_task_set_mode  Task management services, 416 |
| rt_queue_send                                       | rt_task_set_periodic                            |
| Message queue services, 396                         | Task management services, 418                   |
| rt queue unbind                                     | rt task set priority                            |
| Message queue services, 397                         | Task management services, 419                   |
| rt_sem_bind   | rt_task_shadow                                  |
| Semaphore services, 399                             | Task management services, 419                   |
| rt_sem_broadcast                                    | rt_task_sleep                                   |
| Semaphore services, 400                             | Task management services, 421                   |
| rt_sem_create                                       | rt_task_sleep_until                             |
| Semaphore services, 400                             | Task management services, 421                   |
| rt_sem_delete                                       | rt_task_slice                                   |
| Semaphore services, 401                             | Task management services, 422                   |
| rt_sem_inquire<br>Semaphore services, 401           | rt_task_spawn Task management services, 422     |
| rt_sem_p  | rt_task_start                                   |
| Semaphore services, 401                             | Task management services, 423                   |
| rt_sem_p_timed                                      | rt_task_suspend                                 |
| Semaphore services, 402                             | Task management services, 423                   |
| rt_sem_p_until                                      | rt_task_unbind                                  |

| Task management services, 424     | rtdm_event_timedwait                      |
|-----------------------------------|---|
| rt_task_unblock                   | Event Services, 158                       |
| Task management services, 424     | rtdm_event_wait                           |
| rt_task_wait_period               | Event Services, 159                       |
| Task management services, 425     | rtdm_fd_device                            |
| rt_task_yield                     | driver.h, 487                             |
| Task management services, 426     | rtdm_fd_is_user                           |
| rt_timer_info, 452                | driver.h, 488                             |
| date, 453                         | rtdm_fd_to_private                        |
| tsc, 453                          | driver.h, 488                             |
| rt_timer_inquire                  | rtdm_for_each_waiter                      |
| Timer management services, 428    | Synchronisation Services, 146             |
| rt_timer_ns2ticks                 | rtdm_for_each_waiter_safe                 |
| Timer management services, 428    | Synchronisation Services, 147             |
| rt_timer_read                     | rtdm free                                 |
| Timer management services, 428    | Utility Services, 174                     |
| rt_timer_spin                     | rtdm_getpeername                          |
| Timer management services, 429    | Driver to driver services, 124            |
| rt timer ticks2ns                 | rtdm_getsockname                          |
| Timer management services, 429    | Driver to driver services, 124            |
| rtdm accept                       | rtdm_getsockopt                           |
| Driver to driver services, 123    | Driver to driver services, 124            |
| rtdm_bind                         | rtdm_in_rt_context                        |
| Driver to driver services, 123    | Utility Services, 174                     |
| rtdm_clock_read                   | rtdm_ioctl                                |
| Clock Services, 131               | Driver to driver services, 124            |
| rtdm_clock_read_monotonic         |   |
| Clock Services, 131               | rtdm_iomap_to_user                        |
|                                   | Utility Services, 174                     |
| rtdm_close                        | rtdm_irq_disable                          |
| Driver to driver services, 123    | Interrupt Management Services, 167        |
| rtdm_connect                      | rtdm_irq_enable                           |
| Driver to driver services, 123    | Interrupt Management Services, 168        |
| rtdm_copy_from_user               | rtdm_irq_free                             |
| Utility Services, 173             | Interrupt Management Services, 168        |
| rtdm_copy_to_user                 | rtdm_irq_get_arg                          |
| Utility Services, 173             | Interrupt Management Services, 167        |
| rtdm_dev_context, 453             | rtdm_irq_handler_t                        |
| device, 454                       | Interrupt Management Services, 167        |
| rtdm_dev_register                 | rtdm_irq_request                          |
| Device Registration Services, 129 | Interrupt Management Services, 169        |
| rtdm_dev_unregister               | rtdm_listen                               |
| Device Registration Services, 130 | Driver to driver services, 124            |
| rtdm_device, 454                  | rtdm_lock_get                             |
| open, <del>456</del>              | Spinlock with preemption deactivation, 24 |
| socket, 456                       | rtdm_lock_init                            |
| rtdm_device_info, 456             | Spinlock with preemption deactivation, 24 |
| rtdm_event_clear                  | rtdm_lock_irqrestore                      |
| Event Services, 155               | Spinlock with preemption deactivation, 23 |
| rtdm_event_destroy                | rtdm_lock_irqsave                         |
| Event Services, 155               | Spinlock with preemption deactivation, 24 |
| rtdm_event_init                   | rtdm_lock_put                             |
| Event Services, 157               | Spinlock with preemption deactivation, 24 |
| rtdm_event_pulse                  | rtdm_lock_put_irqrestore                  |
| Event Services, 157               | Spinlock with preemption deactivation, 25 |
| rtdm_event_select_bind            | rtdm_malloc                               |
| Event Services, 157               | Utility Services, 175                     |
| rtdm_event_signal                 | rtdm_mmap_iomem                           |
| Event Services, 158               | Utility Services, 175                     |

| rtdm_mmap_kmem                         | rtdm_sem_down                  |
|--|--------------------------------|
| Utility Services, 176                  | Semaphore Services, 160        |
| rtdm_mmap_to_user                      | rtdm_sem_init                  |
| Utility Services, 176                  | Semaphore Services, 161        |
| rtdm_munmap                            | rtdm sem select bind           |
| Utility Services, 177                  | Semaphore Services, 161        |
| rtdm_mutex_destroy                     | rtdm_sem_timeddown             |
| Mutex services, 163                    | Semaphore Services, 161        |
| rtdm_mutex_init                        | rtdm_sem_up                    |
| Mutex services, 163                    | Semaphore Services, 162        |
| rtdm_mutex_lock                        | rtdm send                      |
| Mutex services, 164                    | Driver to driver services, 126 |
| rtdm_mutex_timedlock                   | rtdm_sendmsg                   |
| Mutex services, 164                    | Driver to driver services, 126 |
| rtdm_mutex_unlock                      | rtdm_sendto                    |
| Mutex services, 165                    | Driver to driver services, 126 |
| rtdm_nrtsig_destroy                    | rtdm_setsockopt                |
| Non-Real-Time Signalling Services, 171 | Driver to driver services, 126 |
| rtdm_nrtsig_handler_t                  | rtdm shutdown                  |
| Non-Real-Time Signalling Services, 170 | Driver to driver services, 126 |
| rtdm nrtsig init                       | rtdm_socket                    |
| Non-Real-Time Signalling Services, 171 | Driver to driver services, 127 |
| rtdm_nrtsig_pend                       | rtdm_socket_handler_t          |
| Non-Real-Time Signalling Services, 171 | driver.h, 486                  |
| rtdm_open                              | rtdm_strncpy_from_user         |
| Driver to driver services, 125         | Utility Services, 181          |
| rtdm_open_handler_t                    | rtdm_task_busy_sleep           |
| driver.h, 486                          | Task Services, 134             |
| rtdm_printk                            | rtdm_task_current              |
| Utility Services, 177                  | Task Services, 134             |
| rtdm_printk_ratelimited                | rtdm_task_destroy              |
| Utility Services, 178                  | Task Services, 135             |
| rtdm_private_to_fd                     | rtdm_task_init                 |
| driver.h, 488                          | Task Services, 135             |
| rtdm_ratelimit                         | rtdm task join                 |
| Utility Services, 178                  | Task Services, 135             |
| rtdm_read                              | rtdm_task_proc_t               |
| Driver to driver services, 125         | Task Services, 134             |
| rtdm_read_user_ok                      | rtdm_task_set_period           |
| Utility Services, 178                  | Task Services, 136             |
| rtdm recv                              | rtdm_task_set_priority         |
| Driver to driver services, 125         | Task Services, 136             |
| rtdm_recvfrom                          | rtdm_task_should_stop          |
| Driver to driver services, 125         | Task Services, 136             |
| rtdm_recvmsg                           | rtdm_task_sleep                |
| Driver to driver services, 125         | Task Services, 136             |
| rtdm_rt_capable                        | rtdm_task_sleep_abs            |
| Utility Services, 179                  | Task Services, 138             |
| rtdm_rw_user_ok                        | rtdm_task_sleep_until          |
| Utility Services, 179                  | Task Services, 138             |
| rtdm_safe_copy_from_user               | rtdm_task_unblock              |
| Utility Services, 179                  | Task Services, 138             |
| rtdm_safe_copy_to_user                 | rtdm_task_wait_period          |
| Utility Services, 181                  | Task Services, 139             |
| rtdm_selecttype                        | rtdm_timedwait                 |
| Synchronisation Services, 146          | Synchronisation Services, 147  |
| rtdm_sem_destroy                       | rtdm_timedwait_condition       |
| Semaphore Services, 160                | Synchronisation Services, 148  |

| rtdm_timedwait_condition_locked    | SIOCGCANCTRLMODE  |
|------------------------------------|---|
| Synchronisation Services, 148      | CAN Devices, 44   |
| rtdm_timedwait_locked              | SIOCGCANCUSTOMBITTIME                                       |
| Synchronisation Services, 149      | CAN Devices, 44   |
| rtdm_timer_destroy                 | SIOCGCANSTATE   |
| Timer Services, 141                | CAN Devices, 44   |
| rtdm_timer_handler_t               | SIOCGIFINDEX  |
| Timer Services, 140                | CAN Devices, 45   |
| rtdm_timer_init                    | SIOCSCANBAUDRATE  |
| Timer Services, 141                | CAN Devices, 45   |
| rtdm_timer_mode                    | SIOCSCANCTRLMODE  |
| Timer Services, 141                | CAN Devices, 46   |
| rtdm_timer_start                   | SIOCSCANCUSTOMBITTIME                                       |
| Timer Services, 141                | CAN Devices, 46   |
| rtdm_timer_start_in_handler        | SIOCSCANMODE  |
| Timer Services, 142                | CAN Devices, 47   |
| rtdm_timer_stop                    | SO RCVTIMEO   |
| Timer Services, 142                | Real-time IPC, 72   |
| rtdm_timer_stop_in_handler         | SO SNDTIMEO   |
| Timer Services, 142                | <del>_</del>  |
| rtdm_toseq_init                    | Real-time IPC, 72   |
| Synchronisation Services, 150      | SOL_CAN_RAW   |
| rtdm wait                          | CAN Devices, 48   |
| Synchronisation Services, 150      | sbdata  |
|                                    | a4l_descriptor, 439   |
| rtdm_wait_condition                | sbsize  |
| Synchronisation Services, 151      | a4l_descriptor, 439   |
| rtdm_wait_condition_locked         | sched_get_priority_max                                      |
| Synchronisation Services, 151      | Scheduling management, 298                                  |
| rtdm_wait_locked                   | sched_get_priority_max_ex                                   |
| Synchronisation Services, 152      | Scheduling management, 298                                  |
| rtdm_waitqueue_broadcast           | sched_get_priority_min                                      |
| Synchronisation Services, 152      | Scheduling management, 298                                  |
| rtdm_waitqueue_destroy             | sched_get_priority_min_ex                                   |
| Synchronisation Services, 152      | Scheduling management, 299                                  |
| rtdm_waitqueue_flush               | sched_getconfig_np  |
| Synchronisation Services, 153      | Scheduling management, 299                                  |
| rtdm_waitqueue_init                | sched_setconfig_np  |
| Synchronisation Services, 153      | Scheduling management, 300                                  |
| rtdm_waitqueue_lock                | sched_yield   |
| Synchronisation Services, 153      | Scheduling management, 301                                  |
| rtdm_waitqueue_signal              | Scheduling management, 293                                  |
| Synchronisation Services, 154      |   |
| rtdm_waitqueue_unlock              | pthread_getschedparam, 294<br>pthread_getschedparam_ex, 294 |
| Synchronisation Services, 154      |   |
| rtdm_waitqueue_wakeup              | pthread_setschedparam, 294                                  |
| Synchronisation Services, 154      | pthread_setschedparam_ex, 295                               |
| rtdm_write                         | pthread_yield, 296  |
| Driver to driver services, 127     | sched_get_priority_max, 298                                 |
| rtipc_port_label, 456              | sched_get_priority_max_ex, 298                              |
| label, 457                         | sched_get_priority_min, 298                                 |
| rtser_config, 457                  | sched_get_priority_min_ex, 299                              |
| rtser_event, 458                   | sched_getconfig_np, 299                                     |
| rtser_status, 458                  | sched_setconfig_np, 300                                     |
|                                    | sched_yield, 301  |
| S_PRIO                             | sem_close   |
| Semaphore services, 399            | Semaphores, 282   |
| SCHED_QUOTA scheduling policy, 186 | sem_destroy   |
| SIOCGCANBAUDRATE                   | Semaphores, 284   |
| CAN Devices, 42                    | sem_init  |

| Comanharaa 204                 | rtdm, davisa, 456                         |
|--------------------------------|---|
| Semaphores, 284                | rtdm_device, 456                          |
| sem_post                       | socket_AF_RTIPC                           |
| Semaphores, 285                | Real-time IPC, 81                         |
| sem_timedwait                  | Spinlock with preemption deactivation, 23 |
| Semaphores, 286                | rtdm_lock_get, 24                         |
| sem_trywait                    | rtdm_lock_init, 24                        |
| Semaphores, 286                | rtdm_lock_irqrestore, 23                  |
| sem_unlink                     | rtdm_lock_irqsave, 24                     |
| Semaphores, 287                | rtdm_lock_put, 24                         |
| sem_wait                       | rtdm_lock_put_irqrestore, 25              |
| Semaphores, 287                | splexit                                   |
| Semaphore Services, 160        | Locking services, 110                     |
| rtdm_sem_destroy, 160          | splhigh                                   |
| rtdm_sem_down, 160             | Locking services, 110                     |
| rtdm_sem_init, 161             | spltest                                   |
| rtdm_sem_select_bind, 161      | Locking services, 111                     |
| rtdm_sem_timeddown, 161        | status                                    |
| rtdm_sem_up, 162               | xnsched, 461                              |
| Semaphore services, 398        | store                                     |
| rt_sem_bind, 399               | xnvfile_regular_ops, 465                  |
| rt_sem_broadcast, 400          | xnvfile_snapshot_ops, 472                 |
| rt sem create, 400             | Subdevice management services, 232        |
| rt_sem_delete, 401             | a4l_add_subd, 234                         |
| rt_sem_inquire, 401            | a4l_alloc_subd, 234                       |
| rt_sem_p, 401                  | a4l_get_subd, 234                         |
| rt_sem_p_timed, 402            | switch_htick_mode                         |
| rt_sem_p_until, 402            | Timer services, 215                       |
| rt_sem_unbind, 403             | Synchronisation Services, 145             |
|                                | RTDM SELECTTYPE EXCEPT, 146               |
| rt_sem_v, 403                  |   |
| S_PRIO, 399                    | RTDM_SELECTTYPE_READ, 146                 |
| Semaphores, 282                | RTDM_SELECTTYPE_WRITE, 146                |
| sem_close, 282                 | rtdm_for_each_waiter, 146                 |
| sem_destroy, 284               | rtdm_for_each_waiter_safe, 147            |
| sem_init, 284                  | rtdm_selecttype, 146                      |
| sem_post, 285                  | rtdm_timedwait, 147                       |
| sem_timedwait, 286             | rtdm_timedwait_condition, 148             |
| sem_trywait, 286               | rtdm_timedwait_condition_locked, 148      |
| sem_unlink, 287                | rtdm_timedwait_locked, 149                |
| sem_wait, 287                  | rtdm_toseq_init, 150                      |
| sendmsgAF_RTIPC                | rtdm_wait, 150                            |
| Real-time IPC, 80              | rtdm_wait_condition, 151                  |
| seq                            | rtdm_wait_condition_locked, 151           |
| xnvfile_regular_iterator, 463  | rtdm_wait_locked, 152                     |
| xnvfile snapshot iterator, 469 | rtdm_waitqueue_broadcast, 152             |
| Serial Devices, 64             | rtdm waitqueue destroy, 152               |
| setsockoptAF_RTIPC             | rtdm_waitqueue_flush, 153                 |
| Real-time IPC, 81              | rtdm_waitqueue_init, 153                  |
| show                           | rtdm_waitqueue_lock, 153                  |
| xnvfile_regular_ops, 465       | rtdm_waitqueue_signal, 154                |
| — · — ·                        | rtdm_waitqueue_unlock, 154                |
| xnvfile_snapshot_ops, 471      | _ · · ·                                   |
| sipc_port                      | rtdm_waitqueue_wakeup, 154                |
| sockaddr_ipc, 460              | Synchronous acquisition API, 324, 329     |
| Smokey API, 302                | a4l_config_subd, 329                      |
| sockaddr_can, 459              | a4l_snd_insn, 326                         |
| can_ifindex, 459               | a4l_snd_insnlist, 326                     |
| sockaddr_ipc, 459              | a4l_sync_dio, 330                         |
| sipc_port, 460                 | a4l_sync_read, 330                        |
| socket                         | a4l_sync_write, 331                       |

| Synchronous I/O multiplexing, 189                           | rtdm_task_sleep, 136                 |
|---|--------------------------------------|
| xnselect, 190   | rtdm_task_sleep_abs, 138             |
| xnselect_bind, 190  | rtdm_task_sleep_until, 138           |
| xnselect_destroy, 191                                       | rtdm_task_unblock, 138               |
| xnselect_init, 191  | rtdm_task_wait_period, 139           |
| xnselect_signal, 191  | Testing Devices, 66                  |
| xnselector_destroy, 192                                     | Thread information flags, 29         |
| xnselector_init, 192  | Thread management, 289               |
| T_LOCK  | pthread_create, 289                  |
| Task management services, 406                               | pthread_join, 290                    |
| T LOPRIO  | pthread_kill, 291                    |
| Task management services, 406                               | pthread_setmode_np, 291              |
| T WARNSW  | pthread_setname_np, 292              |
| <del>_</del>  | Thread scheduling control, 187       |
| Task management services, 406 Task management services, 404 | xnsched_rotate, 187                  |
| rt_task_bind, 406   | xnsched_run, 188                     |
| rt_task_create, 406   | Thread services, 203                 |
| rt task delete, 408   | xnthread_cancel, 204                 |
|   | xnthread_init, 204                   |
| rt_task_inquire, 408  | xnthread_join, 205                   |
| rt_task_join, 409   | xnthread_migrate, 206                |
| rt_task_receive, 410  | xnthread_resume, 206                 |
| rt_task_receive_timed, 410                                  | xnthread_set_mode, 207               |
| rt_task_receive_until, 411                                  | xnthread_set_periodic, 208           |
| rt_task_reply, 411  | xnthread_set_schedparam, 208         |
| rt_task_resume, 412   | xnthread_set_slice, 209              |
| rt_task_same, 413   | xnthread_start, 210                  |
| rt_task_self, 413   | xnthread_suspend, 210                |
| rt_task_send, 413   | xnthread_test_cancel, 211            |
| rt_task_send_timed, 414                                     | xnthread_unblock, 212                |
| rt_task_send_until, 415                                     | xnthread_wait_period, 212            |
| rt_task_set_affinity, 416                                   | Thread state flags, 26               |
| rt_task_set_mode, 416                                       | XNHELD, 27                           |
| rt_task_set_periodic, 418                                   | XNLOCK, 27                           |
| rt_task_set_priority, 419                                   | XNMIGRATE, 27                        |
| rt_task_shadow, 419   | XNPEND, 27                           |
| rt_task_sleep, 421  | XNREADY, 27                          |
| rt_task_sleep_until, 421                                    | XNSUSP, 27                           |
| rt_task_slice, 422  | XNTRAPLB, 27                         |
| rt_task_spawn, 422  | Thread synchronization services, 197 |
| rt_task_start, 423  | xnsynch acquire, 197                 |
| rt_task_suspend, 423  | _ ' '                                |
| rt_task_unbind, 424   | xnsynch_flush, 198                   |
| rt_task_unblock, 424  | xnsynch_init, 199                    |
| rt_task_wait_period, 425                                    | xnsynch_peek_pendq, 199              |
| rt_task_yield, 426  | xnsynch_release, 200                 |
| T_LOCK, 406   | xnsynch_sleep_on, 200                |
| T_LOPRIO, 406   | xnsynch_wakeup_one_sleeper, 201      |
| T_WARNSW, 406   | xnsynch_wakeup_this_sleeper, 201     |
| Task Services, 133  | Timer management services, 427       |
| rtdm_task_busy_sleep, 134                                   | RT_TIMER_INFO, 427                   |
| rtdm_task_current, 134                                      | rt_timer_inquire, 428                |
| rtdm_task_destroy, 135                                      | rt_timer_ns2ticks, 428               |
| rtdm_task_init, 135   | rt_timer_read, 428                   |
| rtdm_task_join, 135   | rt_timer_spin, 429                   |
| rtdm_task_proc_t, 134                                       | rt_timer_ticks2ns, 429               |
| rtdm_task_set_period, 136                                   | Timer Services, 140                  |
| rtdm_task_set_priority, 136                                 | RTDM_TIMERMODE_ABSOLUTE, 14          |
| rtdm_task_should_stop, 136                                  | RTDM_TIMERMODE_REALTIME, 141         |

| RTDM_TIMERMODE_RELATIVE, 141           | rtdm_rw_user_ok, 179             |
|--|----------------------------------|
| rtdm_timer_destroy, 141                | rtdm_safe_copy_from_user, 179    |
| rtdm_timer_handler_t, 140              | rtdm_safe_copy_to_user, 181      |
| rtdm_timer_init, 141                   | rtdm_strncpy_from_user, 181      |
| rtdm_timer_mode, 141                   | ,                                |
| rtdm_timer_start, 141                  | vfile                            |
| rtdm_timer_start_in_handler, 142       | xnvfile_regular_iterator, 463    |
| rtdm_timer_stop, 142                   | xnvfile_snapshot_iterator, 469   |
| rtdm_timer_stop_in_handler, 142        | Virtual file services, 221       |
| Timer services, 214                    | nkvfroot, 227                    |
| xntimer_migrate, 215                   | xnvfile_destroy, 222             |
| program htick shot, 215                | xnvfile_get_blob, 223            |
| . • = -                                | xnvfile_get_integer, 223         |
| switch_htick_mode, 215                 | xnvfile_get_string, 224          |
| xntimer_destroy, 216                   | xnvfile_init_dir, 224            |
| xntimer_get_date, 216                  |                                  |
| xntimer_get_overruns, 216              | xnvfile_init_link, 224           |
| xntimer_get_timeout, 217               | xnvfile_init_regular, 226        |
| xntimer_grab_hardware, 217             | xnvfile_init_snapshot, 226       |
| xntimer_init, 218                      | VxWorks® emulator, 430           |
| xntimer_interval, 218                  | VDDD DUEGZ                       |
| xntimer_release_hardware, 219          | XDDP_BUFSZ                       |
| xntimer_start, 219                     | Real-time IPC, 72                |
| xntimer stop, 220                      | XDDP_EVTDOWN                     |
| timer_create                           | Real-time IPC, 73                |
| Clocks and timers, 251                 | XDDP_EVTIN                       |
| timer delete                           | Real-time IPC, 73                |
| Clocks and timers, 252                 | XDDP_EVTNOBUF                    |
| timer_getoverrun                       | Real-time IPC, 73                |
| Clocks and timers, 253                 | XDDP EVTOUT                      |
|  | Real-time IPC, 73                |
| timer_gettime                          | XDDP LABEL                       |
| Clocks and timers, 253                 | Real-time IPC, 73                |
| timer_settime                          | XDDP MONITOR                     |
| Clocks and timers, 253                 | Real-time IPC, 74                |
| Transition Kit, 432                    | XDDP POOLSZ                      |
| pthread_make_periodic_np, 432          | Real-time IPC, 75                |
| pthread_wait_np, 432                   | XNHELD                           |
| tsc                                    |                                  |
| rt_timer_info, 453                     | Thread state flags, 27           |
| ······································ | XNLOCK                           |
| uapi/analogy.h                         | Thread state flags, 27           |
| A4L_RNG_FACTOR, 530                    | XNMIGRATE                        |
| usablemem                              | Thread state flags, 27           |
| RT_HEAP_INFO, 450                      | XNPEND                           |
| Utility Services, 172                  | Thread state flags, 27           |
| rtdm_copy_from_user, 173               | XNREADY                          |
| rtdm_copy_to_user, 173                 | Thread state flags, 27           |
| rtdm_free, 174                         | XNSUSP                           |
| rtdm_in_rt_context, 174                | Thread state flags, 27           |
| rtdm_iomap_to_user, 174                | XNTRAPLB                         |
| rtdm_malloc, 175                       | Thread state flags, 27           |
| rtdm_mmap_iomem, 175                   | xnapc_alloc                      |
| rtdm_mmap_kmem, 176                    | Asynchronous Procedure Calls, 82 |
| rtdm_mmap_to_user, 176                 | xnapc_free                       |
| rtdm_munmap, 177                       | Asynchronous Procedure Calls, 83 |
| rtdm_printk, 177                       | xnapc_schedule                   |
| rtdm_printk_ratelimited, 178           | Asynchronous Procedure Calls, 83 |
| rtdm_ratelimit, 178                    | xnarch_generic_full_divmod64     |
|  | _ <del>-</del>                   |
| rtdm_read_user_ok, 178                 | In-kernel arithmetics, 84        |
| rtdm_rt_capable, 179                   | xnbufd_copy_from_kmem            |

| Buffer descriptor, 87                   | Interrupt management, 108                  |
|---|--|
| xnbufd_copy_to_kmem                     | xnmap_create                               |
| Buffer descriptor, 88                   | Lightweight key-to-object mapping service, |
| xnbufd_invalidate                       | 112  |
| Buffer descriptor, 88                   | xnmap_delete                               |
| xnbufd_map_kread                        | Lightweight key-to-object mapping service, |
| Buffer descriptor, 89                   | 113  |
| xnbufd_map_kwrite                       | xnmap_enter                                |
| Buffer descriptor, 89                   | Lightweight key-to-object mapping service, |
| xnbufd_map_uread                        | 113  |
| Buffer descriptor, 89                   | xnmap_fetch                                |
| xnbufd_map_uwrite                       | Lightweight key-to-object mapping service, |
| Buffer descriptor, 90                   | 114  |
| xnbufd_reset                            | xnmap_fetch_nocheck                        |
| Buffer descriptor, 90                   | Lightweight key-to-object mapping service, |
| xnbufd_unmap_kread                      | 114  |
| Buffer descriptor, 90                   | xnmap_remove                               |
| xnbufd_unmap_kwrite                     | Lightweight key-to-object mapping service, |
| Buffer descriptor, 91                   | 114  |
| xnbufd_unmap_uread                      | xnregistry_bind                            |
| Buffer descriptor, 91                   | Registry services, 117                     |
| xnbufd_unmap_uwrite                     | xnregistry_enter                           |
| Buffer descriptor, 91                   | Registry services, 118                     |
| xnclock_adjust                          | xnregistry_lookup                          |
| Clock services, 93                      | Registry services, 119                     |
| xnclock_deregister                      | xnregistry_remove                          |
| Clock services, 93                      | Registry services, 119                     |
| xnclock_register                        | xnregistry_unlink                          |
| Clock services, 95                      | Registry services, 120                     |
| xnclock_tick                            | xnsched, 460                               |
| Clock services, 95                      | cpu, 460                                   |
| xnheap_alloc                            | curr, 460                                  |
| Dynamic memory allocation services, 98  | htimer, 460                                |
| xnheap_destroy                          | inesting, 461                              |
| Dynamic memory allocation services, 98  | Iflags, 461                                |
| xnheap_extend                           | resched, 461                               |
| Dynamic memory allocation services, 99  | rrbtimer, 461                              |
| xnheap_free                             | rt, 461                                    |
| Dynamic memory allocation services, 99  | status, 461                                |
| xnheap_init                             | xnsched_rotate                             |
| Dynamic memory allocation services, 99  | Thread scheduling control, 187             |
| xnheap_set_label                        | xnsched_run                                |
| Dynamic memory allocation services, 100 | Thread scheduling control, 188             |
| xnheap_test_and_free                    | xnselect                                   |
| Dynamic memory allocation services, 100 | Synchronous I/O multiplexing, 190          |
| xnintr_affinity                         | xnselect_bind                              |
| Interrupt management, 106               | Synchronous I/O multiplexing, 190          |
| xnintr_attach                           | xnselect_destroy                           |
| Interrupt management, 106               | Synchronous I/O multiplexing, 191          |
| xnintr_destroy                          | xnselect_init                              |
| Interrupt management, 107               | Synchronous I/O multiplexing, 191          |
| xnintr_detach                           | xnselect_signal                            |
| Interrupt management, 107               | Synchronous I/O multiplexing, 191          |
| xnintr_disable                          | xnselector_destroy                         |
| Interrupt management, 108               | Synchronous I/O multiplexing, 192          |
| xnintr_enable                           | xnselector_init                            |
| Interrupt management, 108               | Synchronous I/O multiplexing, 192          |
| xnintr_init                             | xnshadow_get_context                       |

| Real-time shadow services, 193                          | Thread services, 212                    |
|---|---|
| xnshadow_harden   | xntimer_destroy                         |
| Real-time shadow services, 194                          | Timer services, 216                     |
| xnshadow_map_kernel                                     | xntimer_get_date                        |
| Real-time shadow services, 194                          | Timer services, 216                     |
| xnshadow_map_user                                       | xntimer_get_overruns                    |
| Real-time shadow services, 195                          | Timer services, 216                     |
| xnshadow_pop_personality Real-time shadow services, 195 | xntimer_get_timeout Timer services, 217 |
| xnshadow_push_personality                               | xntimer_grab_hardware                   |
| Real-time shadow services, 195                          | Timer services, 217                     |
| xnshadow_register_personality                           | xntimer init                            |
| Real-time shadow services, 196                          | Timer services, 218                     |
| xnshadow relax  | xntimer interval                        |
| Real-time shadow services, 196                          | Timer services, 218                     |
| xnsynch_acquire   | xntimer release hardware                |
| Thread synchronization services, 197                    | Timer services, 219                     |
| xnsynch_flush   | xntimer_start                           |
| Thread synchronization services, 198                    | Timer services, 219                     |
| xnsynch_init  | xntimer_stop                            |
| Thread synchronization services, 199                    | Timer services, 220                     |
| xnsynch_peek_pendq                                      | xnvfile_destroy                         |
| Thread synchronization services, 199                    | Virtual file services, 222              |
| xnsynch_release   | xnvfile_get_blob                        |
| Thread synchronization services, 200                    | Virtual file services, 223              |
| xnsynch_sleep_on  | xnvfile_get_integer                     |
| Thread synchronization services, 200                    | Virtual file services, 223              |
| xnsynch_wakeup_one_sleeper                              | xnvfile_get_string                      |
| Thread synchronization services, 201                    | Virtual file services, 224              |
| xnsynch_wakeup_this_sleeper                             | xnvfile_init_dir                        |
| Thread synchronization services, 201                    | Virtual file services, 224              |
| xnthread_cancel   | xnvfile_init_link                       |
| Thread services, 204                                    | Virtual file services, 224              |
| xnthread_init   | xnvfile_init_regular                    |
| Thread services, 204                                    | Virtual file services, 226              |
| xnthread_join   | xnvfile_init_snapshot                   |
| Thread services, 205                                    | Virtual file services, 226              |
| xnthread_migrate  | xnvfile_lock_ops, 461                   |
| Thread services, 206                                    | get, 462<br>put, 462                    |
| xnthread_resume Thread services, 206                    | xnvfile_regular_iterator, 462           |
| xnthread_set_mode                                       | pos, 463                                |
| Thread services, 207                                    | private, 463                            |
| xnthread_set_periodic                                   | seq, 463                                |
| Thread services, 208                                    | vfile, 463                              |
| xnthread_set_schedparam                                 | xnvfile_regular_ops, 463                |
| Thread services, 208                                    | begin, 464                              |
| xnthread_set_slice                                      | end, 464                                |
| Thread services, 209                                    | next, 464                               |
| xnthread_start  | rewind, 465                             |
| Thread services, 210                                    | show, 465                               |
| xnthread_suspend  | store, 465                              |
| Thread services, 210                                    | xnvfile_rev_tag, 466                    |
| xnthread_test_cancel                                    | rev, 466                                |
| Thread services, 211                                    | xnvfile_snapshot, 467                   |
| xnthread_unblock  | xnvfile_snapshot_iterator, 467          |
| Thread services, 212                                    | databuf, 468                            |
| xnthread_wait_period                                    | endfn, 468                              |

```
nrdata, 468
private, 469
seq, 469
vfile, 469
xnvfile_snapshot_ops, 469
begin, 469
end, 470
next, 470
rewind, 471
show, 471
store, 472
```