# Xenomai Native skin API 2.5.6.1

Generated by Doxygen 1.7.6.1

Thu Aug 2 2012 09:31:36

# **Contents**

1	Mod	lule Ind	ex										1
	1.1	Module	es					 					1
2	Data	a Struct	ure Inde	x									3
	2.1	Data S	Structures					 					3
3	File	Index											5
	3.1	File Lis	st					 				 •	5
4	Mod	lule Do	cumenta	tion									7
	4.1	Task S	tatus					 					7
		4.1.1	Detailed	Descrip	otion			 					8
	4.2	Alarm	services.					 					9
		4.2.1	Detailed	Descrip	otion			 					9
		4.2.2	Function	Docum	entat	ion .		 					10
			4.2.2.1	rt_alar	m_cre	eate		 					10
			4.2.2.2	rt_alar	m_cre	eate		 					11
			4.2.2.3	rt_alar	m_de	lete		 					12
			4.2.2.4	rt_alar	m_inc	quire		 					13
			4.2.2.5	rt_alar	m_sta	art .		 					14
			4.2.2.6	rt_alar	m_stc	p .		 					15
			4.2.2.7	rt_alar	m_wa	ait .		 					15
	4.3	Buffer	services.					 					17
		4.3.1	Detailed	Descrip	otion			 					18
		4.3.2	Function	Docum	entat	ion .		 					18
			4321	rt buffe	er bir	nd							18

ii CONTENTS

		4.3.2.2	rt_buffer_clear	19
		4.3.2.3	rt_buffer_create	20
		4.3.2.4	rt_buffer_delete	21
		4.3.2.5	rt_buffer_inquire	21
		4.3.2.6	rt_buffer_read	22
		4.3.2.7	rt_buffer_unbind	24
		4.3.2.8	rt_buffer_write	24
		4.3.2.9	rt_buffer_write_until	26
4.4	Condi	tion variat	ole services	28
	4.4.1	Detailed	Description	29
	4.4.2	Function	Documentation	29
		4.4.2.1	rt_cond_bind	29
		4.4.2.2	rt_cond_broadcast	30
		4.4.2.3	rt_cond_create	31
		4.4.2.4	rt_cond_delete	31
		4.4.2.5	rt_cond_inquire	32
		4.4.2.6	rt_cond_signal	33
		4.4.2.7	rt_cond_unbind	33
		4.4.2.8	rt_cond_wait	34
		4.4.2.9	rt_cond_wait_until	35
4.5	Event	flag group	services	37
	4.5.1	Detailed	Description	38
	4.5.2	Function	Documentation	38
		4.5.2.1	rt_event_bind	38
		4.5.2.2	rt_event_clear	39
		4.5.2.3	rt_event_create	40
		4.5.2.4	rt_event_delete	41
		4.5.2.5	rt_event_inquire	42
		4.5.2.6	rt_event_signal	42
		4.5.2.7	rt_event_unbind	43
		4.5.2.8	rt_event_wait	43
		4.5.2.9	rt_event_wait_until	45
4.6	Memo	ry heap s	ervices	48
	4.6.1	Detailed	Description	48

CONTENTS iii

	4.6.2	Function	Documentation	49
		4.6.2.1	rt_heap_alloc	49
		4.6.2.2	rt_heap_bind	50
		4.6.2.3	rt_heap_create	52
		4.6.2.4	rt_heap_delete	54
		4.6.2.5	rt_heap_free	54
		4.6.2.6	rt_heap_inquire	55
		4.6.2.7	rt_heap_unbind	56
4.7	Interru	pt manag	ement services	57
	4.7.1	Function	Documentation	58
		4.7.1.1	rt_intr_bind	58
		4.7.1.2	rt_intr_create	59
		4.7.1.3	rt_intr_create	60
		4.7.1.4	rt_intr_delete	63
		4.7.1.5	rt_intr_disable	63
		4.7.1.6	rt_intr_enable	64
		4.7.1.7	rt_intr_inquire	65
		4.7.1.8	rt_intr_unbind	65
		4.7.1.9	rt_intr_wait	66
4.8	Native	Xenomai	API	68
	4.8.1	Detailed	Description	69
4.9	Mutex	services.		70
	4.9.1	Detailed	Description	71
	4.9.2	Function	Documentation	71
		4.9.2.1	rt_mutex_acquire	71
		4.9.2.2	rt_mutex_acquire_until	72
		4.9.2.3	rt_mutex_bind	73
		4.9.2.4	rt_mutex_create	74
		4.9.2.5	rt_mutex_delete	75
		4.9.2.6	rt_mutex_inquire	76
		4.9.2.7	rt_mutex_release	77
		4.9.2.8	rt_mutex_unbind	77
4.10	Messa	ge pipe s	ervices	79
	4.10.1	Detailed	Description	80

iv CONTENTS

4.10.2	Prunction Documentation
	4.10.2.1 rt_pipe_alloc
	4.10.2.2 rt_pipe_create
	4.10.2.3 rt_pipe_delete
	4.10.2.4 rt_pipe_flush
	4.10.2.5 rt_pipe_free
	4.10.2.6 rt_pipe_monitor
	4.10.2.7 rt_pipe_read
	4.10.2.8 rt_pipe_receive
	4.10.2.9 rt_pipe_send
	4.10.2.10rt_pipe_stream
	4.10.2.11rt_pipe_write
4.11 Messa	age queue services
4.11.1	Detailed Description
4.11.2	Prunction Documentation
	4.11.2.1 rt_queue_alloc
	4.11.2.2 rt_queue_bind
	4.11.2.3 rt_queue_create
	4.11.2.4 rt_queue_delete
	4.11.2.5 rt_queue_flush
	4.11.2.6 rt_queue_free
	4.11.2.7 rt_queue_inquire
	4.11.2.8 rt_queue_read
	4.11.2.9 rt_queue_read_until
	4.11.2.10rt_queue_receive
	4.11.2.11rt_queue_receive_until 106
	4.11.2.12rt_queue_send
	4.11.2.13rt_queue_unbind
	4.11.2.14rt_queue_write
4.12 Count	ing semaphore services
4.12.1	Detailed Description
4.12.2	Prunction Documentation
	4.12.2.1 rt_sem_bind
	4.12.2.2 rt_sem_broadcast

CONTENTS v

4.12.2.3 rt_sem_create
4.12.2.4 rt_sem_delete
4.12.2.5 rt_sem_inquire
4.12.2.6 rt_sem_p
4.12.2.7 rt_sem_p_until
4.12.2.8 rt_sem_unbind
4.12.2.9 rt_sem_v
4.13 Task management services
4.13.1 Detailed Description
4.13.2 Function Documentation
4.13.2.1 rt_task_add_hook
4.13.2.2 rt_task_bind
4.13.2.3 rt_task_catch
4.13.2.4 rt_task_create
4.13.2.5 rt_task_delete
4.13.2.6 rt_task_inquire
4.13.2.7 rt_task_join
4.13.2.8 rt_task_notify
4.13.2.9 rt_task_receive
4.13.2.10rt_task_remove_hook
4.13.2.11rt_task_reply
4.13.2.12rt_task_resume
4.13.2.13rt_task_same
4.13.2.14rt_task_self
4.13.2.15rt_task_send
4.13.2.16rt_task_set_mode
4.13.2.17rt_task_set_periodic
4.13.2.18rt_task_set_priority
4.13.2.19rt_task_shadow
4.13.2.20rt_task_sleep
4.13.2.21rt_task_sleep_until
4.13.2.22rt_task_slice
4.13.2.23rt_task_spawn
4.13.2.24rt_task_start

vi CONTENTS

			4.13.2.25rt_task_suspend	51
			4.13.2.26rt_task_unbind	52
			4.13.2.27rt_task_unblock	52
			4.13.2.28rt_task_wait_period	53
			4.13.2.29rt_task_yield	54
	4.14	Timer	management services	55
		4.14.1	Detailed Description	56
		4.14.2	Typedef Documentation	56
			4.14.2.1 RT_TIMER_INFO	56
		4.14.3	Function Documentation	56
			4.14.3.1 rt_timer_inquire	56
			4.14.3.2 rt_timer_ns2ticks	57
			4.14.3.3 rt_timer_ns2tsc	58
			4.14.3.4 rt_timer_read	58
			4.14.3.5 rt_timer_set_mode	59
			4.14.3.6 rt_timer_spin	30
			4.14.3.7 rt_timer_ticks2ns	30
			4.14.3.8 rt_timer_tsc	31
			4.14.3.9 rt_timer_tsc2ns	31
5	Data	Struct	ture Documentation 16	3
	5.1	rt_hea	p_info Struct Reference	3
		5.1.1	Detailed Description	3
	5.2	rt_mut	tex_info Struct Reference	3
		5.2.1	Detailed Description	34
		5.2.2	Field Documentation	34
			5.2.2.1 locked	34
			5.2.2.2 name	34
			5.2.2.3 nwaiters	34
			5.2.2.4 owner	34
	5.3	rt_task	c_info Struct Reference	34
		5.3.1	Detailed Description	35
		5.3.2	Field Documentation	35
			5.3.2.1 bprio	35

CONTENTS vii

			5.3.2.2	cprio	165
			5.3.2.3	ctxswitches	166
			5.3.2.4	exectime	166
			5.3.2.5	modeswitches	166
			5.3.2.6	name	166
			5.3.2.7	pagefaults	166
			5.3.2.8	relpoint	166
			5.3.2.9	status	166
	5.4	rt_tasl	k_mcb Str	uct Reference	167
		5.4.1	Detailed	Description	167
		5.4.2	Field Doo	cumentation	167
			5.4.2.1	data	167
			5.4.2.2	flowid	167
			5.4.2.3	opcode	167
			5.4.2.4	size	168
	5.5	rt_time	er_info Str	ruct Reference	168
		5.5.1	Detailed	Description	168
6	File	Docun	nentation		169
6	<b>File</b> 6.1		nentation e/native/al	arm.h File Reference	
6			e/native/al	arm.h File Reference	169
6		include	e/native/al Detailed		169 170
5	6.1	include	e/native/al Detailed e/native/bu	arm.h File Reference	169 170 170
6	6.1	include 6.1.1 include 6.2.1	e/native/al Detailed e/native/bu Detailed	arm.h File Reference	169 170 170 172
6	6.1	include 6.1.1 include 6.2.1	e/native/al Detailed e/native/bu Detailed e/native/co	arm.h File Reference  Description  uffer.h File Reference  Description	169 170 170 172 172
5	6.1	include 6.1.1 include 6.2.1 include 6.3.1	e/native/al Detailed e/native/bu Detailed e/native/co Detailed	arm.h File Reference  Description  uffer.h File Reference  Description  ond.h File Reference	169 170 170 172 172 174
6	<ul><li>6.1</li><li>6.2</li><li>6.3</li></ul>	include 6.1.1 include 6.2.1 include 6.3.1	e/native/al Detailed e/native/bu Detailed e/native/cu Detailed e/native/ev	arm.h File Reference  Description  uffer.h File Reference  Description  ond.h File Reference  Description	169 170 170 172 172 174 174
6	<ul><li>6.1</li><li>6.2</li><li>6.3</li></ul>	include 6.1.1 include 6.2.1 include 6.3.1 include 6.4.1	e/native/al Detailed e/native/co Detailed e/native/co Detailed e/native/ev Detailed	arm.h File Reference  Description  uffer.h File Reference  Description  ond.h File Reference  Description  vent.h File Reference	169 170 170 172 172 174 174
5	<ul><li>6.1</li><li>6.2</li><li>6.3</li><li>6.4</li></ul>	include 6.1.1 include 6.2.1 include 6.3.1 include 6.4.1	e/native/al Detailed e/native/co Detailed e/native/co Detailed e/native/ev Detailed e/native/ev	arm.h File Reference  Description  uffer.h File Reference  Description  ond.h File Reference  Description  vent.h File Reference  Description	1169 1170 1170 1172 1174 1174 1176
5	<ul><li>6.1</li><li>6.2</li><li>6.3</li><li>6.4</li></ul>	include 6.1.1 include 6.2.1 include 6.3.1 include 6.4.1	e/native/al Detailed e/native/co Detailed e/native/ev Detailed e/native/ev Detailed e/native/he	arm.h File Reference  Description  uffer.h File Reference  Description  ond.h File Reference  Description  vent.h File Reference  Description  vent.h File Reference  Description  eap.h File Reference	1169 1170 1172 1172 1174 1174 1176 1176
5	<ul><li>6.1</li><li>6.2</li><li>6.3</li><li>6.4</li></ul>	include 6.1.1 include 6.2.1 include 6.3.1 include 6.4.1 include 6.5.1	e/native/al Detailed e/native/co Detailed e/native/eo Detailed e/native/eo Detailed e/native/ho Detailed Typedef I	arm.h File Reference  Description  uffer.h File Reference  Description  ond.h File Reference  Description  vent.h File Reference  Description  eap.h File Reference  Description	169 170 170 172 172 174 174 176 176 178
6	<ul><li>6.1</li><li>6.2</li><li>6.3</li><li>6.4</li></ul>	include 6.1.1 include 6.2.1 include 6.3.1 include 6.4.1 include 6.5.1 6.5.2	e/native/al Detailed e/native/co Detailed e/native/co Detailed e/native/eo Detailed e/native/ho Detailed Typedef I 6.5.2.1	arm.h File Reference  Description  uffer.h File Reference  Description  ond.h File Reference  Description  vent.h File Reference  Description  pag.h File Reference  Description  Documentation	169 170 170 172 172 174 174 176 177 178 178
6	<ul><li>6.1</li><li>6.2</li><li>6.3</li><li>6.4</li><li>6.5</li></ul>	include 6.1.1 include 6.2.1 include 6.3.1 include 6.4.1 include 6.5.1 6.5.2	e/native/al Detailed e/native/co Detailed e/native/ev Detailed e/native/ev Detailed e/native/he Detailed Typedef I 6.5.2.1	arm.h File Reference  Description  uffer.h File Reference  Description  ond.h File Reference  Description  vent.h File Reference  Description  eap.h File Reference  Description  exp.h File Reference  Description  RT_HEAP_INFO	169 170 172 172 174 174 176 178 178 178
6	<ul><li>6.1</li><li>6.2</li><li>6.3</li><li>6.4</li><li>6.5</li></ul>	include 6.1.1 include 6.2.1 include 6.3.1 include 6.4.1 include 6.5.1 6.5.2 include 6.6.1	e/native/al Detailed e/native/co Detailed e/native/co Detailed e/native/ev Detailed e/native/he Detailed Typedef I 6.5.2.1 e/native/in Detailed	arm.h File Reference  Description  uffer.h File Reference  Description  ond.h File Reference  Description  vent.h File Reference  Description  vent.h File Reference  Description  eap.h File Reference  Description  The Reference  The Reference  The Reference  The Reference	169 170 170 172 172 174 174 176 178 178 178 178

viii CONTENTS

	6.7.1	Detailed Description
6.8	include	e/native/mutex.h File Reference
	6.8.1	Detailed Description
	6.8.2	Typedef Documentation
		6.8.2.1 RT_MUTEX_INFO
6.9	include	e/native/pipe.h File Reference
	6.9.1	Detailed Description
6.10	include	e/native/ppd.h File Reference
	6.10.1	Detailed Description
6.11	include	e/native/queue.h File Reference
	6.11.1	Detailed Description
6.12	include	e/native/sem.h File Reference
	6.12.1	Detailed Description
6.13	include	e/native/task.h File Reference
	6.13.1	Detailed Description
	6.13.2	Typedef Documentation
		6.13.2.1 RT_TASK_INFO
		6.13.2.2 RT_TASK_MCB
6.14	include	e/native/timer.h File Reference
	6.14.1	Detailed Description
6.15	include	e/native/types.h File Reference
	6.15.1	Detailed Description
6.16	ksrc/sk	sins/native/module.c File Reference
	6.16.1	Detailed Description
6.17	ksrc/sk	sins/native/syscall.c File Reference
	6.17.1	Detailed Description
6.18	ksrc/sk	sins/native/alarm.c File Reference 200
	6.18.1	Detailed Description
6.19	ksrc/sk	sins/native/buffer.c File Reference
	6.19.1	Detailed Description
6.20	ksrc/sk	xins/native/cond.c File Reference
	6.20.1	Detailed Description
6.21	ksrc/sk	xins/native/event.c File Reference 204
	6.21.1	Detailed Description

CONTENTS ix

	6.22	ksrc/skins/native/heap.c File Reference	205
		6.22.1 Detailed Description	206
	6.23	ksrc/skins/native/intr.c File Reference	207
		6.23.1 Detailed Description	207
	6.24	ksrc/skins/native/mutex.c File Reference	208
		6.24.1 Detailed Description	209
	6.25	ksrc/skins/native/pipe.c File Reference	209
		6.25.1 Detailed Description	210
	6.26	ksrc/skins/native/queue.c File Reference	211
		6.26.1 Detailed Description	212
	6.27	ksrc/skins/native/sem.c File Reference	212
		6.27.1 Detailed Description	213
	6.28	ksrc/skins/native/task.c File Reference	214
		6.28.1 Detailed Description	216
	6.29	ksrc/skins/native/timer.c File Reference	216
		6.29.1 Detailed Description	217
,	Evo	mnla Dagumentation	210
7			<b>219</b>
7	7.1	bound_task.c	219
7	7.1 7.2	bound_task.c	219 219
7	7.1 7.2 7.3	bound_task.c	219 219 220
7	7.1 7.2 7.3 7.4	bound_task.c	219 219 220 221
7	7.1 7.2 7.3 7.4 7.5	bound_task.c	219 219 220 221 222
7	7.1 7.2 7.3 7.4 7.5 7.6	bound_task.c	219 219 220 221 222 223
7	7.1 7.2 7.3 7.4 7.5 7.6 7.7	bound_task.c	219 219 220 221 222 223 224
7	7.1 7.2 7.3 7.4 7.5 7.6 7.7	bound_task.c	219 219 220 221 222 223 224 225
7	7.1 7.2 7.3 7.4 7.5 7.6 7.7 7.8 7.9	bound_task.c  cond_var.c  event_flags.c  kernel_task.c  local_heap.c  msg_queue.c  mutex.c  pipe.c  semaphore.c	219 219 220 221 222 223 224 225 227
7	7.1 7.2 7.3 7.4 7.5 7.6 7.7 7.8 7.9 7.10	bound_task.c  cond_var.c  event_flags.c  kernel_task.c  local_heap.c  msg_queue.c  mutex.c  pipe.c  semaphore.c  shared_mem.c	219 219 220 221 222 223 224 225 227 228
7	7.1 7.2 7.3 7.4 7.5 7.6 7.7 7.8 7.9 7.10 7.11	bound_task.c  cond_var.c  event_flags.c  kernel_task.c  local_heap.c  msg_queue.c  mutex.c  pipe.c  semaphore.c  shared_mem.c  sigxcpu.c	219 219 220 221 222 223 224 225 227 228 229
7	7.1 7.2 7.3 7.4 7.5 7.6 7.7 7.8 7.9 7.10 7.11 7.12	bound_task.c  cond_var.c  event_flags.c  kernel_task.c  local_heap.c  msg_queue.c  mutex.c  pipe.c  semaphore.c  shared_mem.c  sigxcpu.c  trivial-periodic.c	219 219 220 221 222 223 224 225 227 228 229 230
7	7.1 7.2 7.3 7.4 7.5 7.6 7.7 7.8 7.9 7.10 7.11 7.12 7.13	bound_task.c  cond_var.c  event_flags.c  kernel_task.c  local_heap.c  msg_queue.c  mutex.c  pipe.c  semaphore.c  shared_mem.c  sigxcpu.c  trivial-periodic.c  user_alarm.c	219 219 220 221 222 223 224 225 227 228 229 230 231
7	7.1 7.2 7.3 7.4 7.5 7.6 7.7 7.8 7.9 7.10 7.11 7.12 7.13 7.14	bound_task.c  cond_var.c  event_flags.c  kernel_task.c  local_heap.c  msg_queue.c  mutex.c  pipe.c  semaphore.c  shared_mem.c  sigxcpu.c  trivial-periodic.c	219 219 220 221 222 223 224 225 227 228 229 230 231 232

# **Module Index**

# 1.1 Modules

# Here is a list of all modules:

Native Xenomai API	68
Task Status	7
Alarm services	9
Buffer services	17
Condition variable services	28
Event flag group services	37
	48
Interrupt management services	57
Mutex services	70
Message pipe services	79
• • •	94
Counting semaphore services	11
	21
Timer management services	55

2 Module Index

# **Data Structure Index**

# 2.1 Data Structures

Here are the data structures with brief descriptions:

rt_heap_info
Structure containing heap-information useful to users 163
rt_mutex_info
Structure containing mutex information useful to users 163
rt_task_info
Structure containing task-information useful to users 164
rt_task_mcb
Structure used in passing messages between tasks 167
rt_timer_info
Structure containing timer-information useful to users 168

# File Index

# 3.1 File List

include/native/alarm.h
This file is part of the Xenomai project
include/native/buffer.h
This file is part of the Xenomai project
include/native/cond.h
This file is part of the Xenomai project
include/native/event.h
This file is part of the Xenomai project
include/native/heap.h
This file is part of the Xenomai project
include/native/intr.h
This file is part of the Xenomai project
include/native/misc.h
This file is part of the Xenomai project
include/native/mutex.h  This file is part of the Vanemai project
This file is part of the Xenomai project
This file is part of the Xenomai project
include/native/ppd.h
This file is part of the Xenomai project
include/native/queue.h
This file is part of the Xenomai project
include/native/sem.h
This file is part of the Xenomai project
include/native/syscall.h
include/native/task.h
This file is part of the Xenomai project
include/native/timer.h

Here is a list of all documented files with brief descriptions:


include/native/types.h	
This file is part of the Xenomai project	7
ksrc/skins/native/alarm.c	
This file is part of the Xenomai project	0
ksrc/skins/native/buffer.c	
This file is part of the Xenomai project	1
ksrc/skins/native/cond.c	
This file is part of the Xenomai project	2
ksrc/skins/native/event.c	
This file is part of the Xenomai project	4
ksrc/skins/native/heap.c	
This file is part of the Xenomai project 20	5
ksrc/skins/native/intr.c	
This file is part of the Xenomai project	7
ksrc/skins/native/module.c	
This file is part of the Xenomai project	9
ksrc/skins/native/mutex.c	
This file is part of the Xenomai project	8
ksrc/skins/native/pipe.c	
This file is part of the Xenomai project	9
ksrc/skins/native/queue.c	
This file is part of the Xenomai project	1
ksrc/skins/native/sem.c	
This file is part of the Xenomai project	2
ksrc/skins/native/syscall.c	
This file is part of the Xenomai project	9
ksrc/skins/native/task.c	
This file is part of the Xenomai project	4
ksrc/skins/native/timer.c	
This file is part of the Xenomai project	6
src/skins/native/wrappers.h	?

# **Module Documentation**

# 4.1 Task Status

Defines used to specify task state and/or mode.

Collaboration diagram for Task Status:

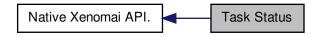

# **Defines**

- #define T\_BLOCKED XNPEND
  - See #XNPEND.
- #define T\_DELAYED XNDELAY
  - See #XNDELAY.
- #define T\_READY XNREADY
  - See #XNREADY.
- #define T\_DORMANT XNDORMANT
  - See #XNDORMANT.
- #define T\_STARTED XNSTARTED
  - See #XNSTARTED.
- #define T\_BOOST XNBOOST
  - See #XNBOOST.

• #define T\_LOCK XNLOCK

See #XNLOCK.

• #define T\_NOSIG XNASDI

See #XNASDI.

• #define T\_WARNSW XNTRAPSW

See #XNTRAPSW.

• #define T\_RPIOFF XNRPIOFF

See #XNRPIOFF.


# 4.1.1 Detailed Description

Defines used to specify task state and/or mode.

4.2 Alarm services. 9

# 4.2 Alarm services.

Collaboration diagram for Alarm services.:

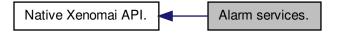

# **Files**

• file alarm.c

This file is part of the Xenomai project.

# **Functions**

• int rt\_alarm\_create (RT\_ALARM \*alarm, const char \*name, rt\_alarm\_t handler, void \*cookie)

Create an alarm object from kernel space.

• int rt\_alarm\_delete (RT\_ALARM \*alarm)

Delete an alarm.

- int rt\_alarm\_start (RT\_ALARM \*alarm, RTIME value, RTIME interval)
   Start an alarm.
- int rt\_alarm\_stop (RT\_ALARM \*alarm)

Stop an alarm.

- int rt\_alarm\_inquire (RT\_ALARM \*alarm, RT\_ALARM\_INFO \*info)
   Inquire about an alarm.
- int rt\_alarm\_create (RT\_ALARM \*alarm, const char \*name)

Create an alarm object from user-space.

• int rt\_alarm\_wait (RT\_ALARM \*alarm)

Wait for the next alarm shot.

# 4.2.1 Detailed Description

Alarms are general watchdog timers. Any Xenomai task may create any number of alarms and use them to run a user-defined handler, after a specified initial delay has elapsed. Alarms can be either one shot or periodic; in the latter case, the real-time kernel automatically reprograms the alarm for the next shot according to a user-defined interval value.

# 4.2.2 Function Documentation

4.2.2.1 int rt\_alarm\_create ( RT\_ALARM \* alarm, const char \* name )

Create an alarm object from user-space.

Initializes an alarm object from a user-space application. Alarms can be made periodic or oneshot, depending on the reload interval value passed to rt\_alarm\_start() for them. In this mode, the basic principle is to define some alarm server task which routinely waits for the next incoming alarm event through the rt\_alarm\_wait() syscall.

#### **Parameters**

alarm	The address of an alarm descriptor Xenomai will use to store the alarm-related data. This descriptor must always be valid while the alarm is active therefore it must be allocated in permanent memory.
name	An ASCII string standing for the symbolic name of the alarm When non-NULL and non-empty, this string is copied to a safe place into the descriptor, and passed to the registry package if enabled for indexing the created alarm.

# Returns

0 is returned upon success. Otherwise:

- -ENOMEM is returned if the system fails to get enough dynamic memory from the global real-time heap in order to register the alarm.
- -EEXIST is returned if the name is already in use by some registered object.
- -EPERM is returned if this service was called from an asynchronous context.

#### **Environments:**

This service can be called from:

User-space task

Rescheduling: possible.

#### Note

It is possible to combine kernel-based alarm handling with waiter threads pending on the same alarm object from user-space through the rt\_alarm\_wait() service. For this purpose, the rt\_alarm\_handler() routine which is internally invoked to wake up alarm servers in user-space is accessible to user-provided alarm handlers in kernel space, and should be called from there in order to unblock any thread sleeping on the rt\_alarm\_wait() service.

4.2.2.2 int rt\_alarm\_create ( RT\_ALARM \* alarm, const char \* name, rt\_alarm\_t handler, void \* cookie )

Create an alarm object from kernel space.

Create an object triggering an alarm routine at a specified time in the future. Alarms can be made periodic or oneshot, depending on the reload interval value passed to rt\_alarm\_start() for them. In kernel space, alarms are immediately notified on behalf of the timer interrupt to a user-defined handler.

#### **Parameters**

	T
alarm	The address of an alarm descriptor Xenomai will use to store the
	alarm-related data. This descriptor must always be valid while
	the alarm is active therefore it must be allocated in permanent
	memory.
name	An ASCII string standing for the symbolic name of the alarm
	When non-NULL and non-empty, this string is copied to a safe
	place into the descriptor, and passed to the registry package if
	enabled for indexing the created alarm.
handler	The address of the routine to call when the alarm expires. This
	routine will be passed the address of the current alarm descrip-
	tor, and the opaque <i>cookie</i> .
cookie	A user-defined opaque cookie the real-time kernel will pass to
	the alarm handler as its second argument.

#### Returns

0 is returned upon success. Otherwise:

- -ENOMEM is returned if the system fails to get enough dynamic memory from the global real-time heap in order to register the alarm.
- -EEXIST is returned if the name is already in use by some registered object.
- -EPERM is returned if this service was called from an asynchronous context.

#### **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- Kernel-based task

Rescheduling: possible.

#### Note

It is possible to combine kernel-based alarm handling with waiter threads pending on the same alarm object from user-space through the rt\_alarm\_wait() service. For this purpose, the rt\_alarm\_handler() routine which is internally invoked to wake up alarm servers in user-space is accessible to user-provided alarm handlers in kernel space, and should be called from there in order to unblock any thread sleeping on the rt\_alarm\_wait() service.

References rt alarm delete().

```
4.2.2.3 int rt alarm delete (RT_ALARM * alarm )
```

Delete an alarm.

Destroy an alarm. An alarm exists in the system since rt\_alarm\_create() has been called to create it, so this service must be called in order to destroy it afterwards.

#### **Parameters**

alarm The descriptor address of the affected alarm.

#### Returns

0 is returned upon success. Otherwise:

- -EINVAL is returned if alarm is not a alarm descriptor.
- -EIDRM is returned if alarm is a deleted alarm descriptor.
- -EPERM is returned if this service was called from an asynchronous context.

# Environments:

This service can be called from:

Kernel module initialization/cleanup code

- Kernel-based task
- User-space task

Rescheduling: never.

Referenced by rt alarm create().

4.2.2.4 int rt\_alarm\_inquire ( RT\_ALARM \* alarm, RT\_ALARM\_INFO \* info )

Inquire about an alarm.

Return various information about the status of a given alarm.

#### **Parameters**

alarm	The descriptor address of the inquired alarm.
info	The address of a structure the alarm information will be written
	to.

The expiration date returned in the information block is converted to the current time unit. The special value TM\_INFINITE is returned if *alarm* is currently inactive/stopped. In single-shot mode, it might happen that the alarm has already expired when this service is run (even if the associated handler has not been fired yet); in such a case, 1 is returned.

### Returns

0 is returned and status information is written to the structure pointed at by *info* upon success. Otherwise:

- -EINVAL is returned if alarm is not a alarm descriptor.
- -EIDRM is returned if *alarm* is a deleted alarm descriptor.

# **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- Interrupt service routine
- Kernel-based task
- User-space task

Rescheduling: never.

4.2.2.5 int rt alarm start ( RT\_ALARM \* alarm, RTIME value, RTIME interval )

Start an alarm.

Program the trigger date of an alarm object. An alarm can be either periodic or oneshot, depending on the reload value passed to this routine. The given alarm must have been previously created by a call to rt\_alarm\_create().

Alarm handlers are always called on behalf of Xenomai's internal timer tick handler, so the Xenomai services which can be called from such handlers are restricted to the set of services available on behalf of any ISR.

This service overrides any previous setup of the expiry date and reload interval for the given alarm.

#### **Parameters**

	The descriptor address of the affected alarm.
value	The relative date of the initial alarm shot, expressed in clock ticks
	(see note).
interval	The reload value of the alarm. It is a periodic interval value to be
	used for reprogramming the next alarm shot, expressed in clock
	ticks (see note). If interval is equal to TM_INFINITE, the alarm
	will not be reloaded after it has expired.

# Returns

0 is returned upon success. Otherwise:

• -EINVAL is returned if alarm is not a alarm descriptor.

# Environments:

This service can be called from:

- Kernel module initialization/cleanup code
- Interrupt service routine
- · Kernel-based task
- User-space task

Rescheduling: never.

# Note

The initial *value* and *interval* will be interpreted as jiffies if the native skin is bound to a periodic time base (see CONFIG\_XENO\_OPT\_NATIVE\_PERIOD), or nanoseconds otherwise.

4.2 Alarm services. 15

```
4.2.2.6 int rt_alarm_stop ( RT_ALARM * alarm )
```

Stop an alarm.

Disarm an alarm object previously armed using rt\_alarm\_start() so that it will not trigger until is is re-armed.

#### **Parameters**

alarm The descriptor address of the released alarm.

# **Returns**

0 is returned upon success. Otherwise:

- -EINVAL is returned if alarm is not a alarm descriptor.
- -EIDRM is returned if alarm is a deleted alarm descriptor.

# **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- · Interrupt service routine
- Kernel-based task
- User-space task

Rescheduling: never.

```
4.2.2.7 int rt_alarm_wait ( RT_ALARM * alarm )
```

Wait for the next alarm shot.

This user-space only call allows the current task to suspend execution until the specified alarm triggers. The priority of the current task is raised above all other Xenomai tasks - except those also undergoing an alarm or interrupt wait (see <a href="rt\_intr\_wait()">rt\_intr\_wait()</a>) - so that it would preempt any of them under normal circumstances (i.e. no scheduler lock).

# **Parameters**

alarm The descriptor address of the awaited alarm.

# **Returns**

0 is returned upon success. Otherwise:

- -EINVAL is returned if alarm is not an alarm descriptor.
- -EPERM is returned if this service was called from a context which cannot sleep (e.g. interrupt, non-realtime or scheduler locked).
- -EIDRM is returned if *alarm* is a deleted alarm descriptor, including if the deletion occurred while the caller was waiting for its next shot.
- -EINTR is returned if rt\_task\_unblock() has been called for the current task before the next alarm shot.

# **Environments:**

This service can be called from:

• User-space task

Rescheduling: always.

# **Examples:**

user\_alarm.c.

# 4.3 Buffer services.

Collaboration diagram for Buffer services.:



# **Files**

• file buffer.c

This file is part of the Xenomai project.

#### **Functions**

• int rt\_buffer\_create (RT\_BUFFER \*bf, const char \*name, size\_t bufsz, int mode)

Create a buffer.

• int rt\_buffer\_delete (RT\_BUFFER \*bf)

Delete a buffer.

 ssize\_t rt\_buffer\_write (RT\_BUFFER \*bf, const void \*ptr, size\_t len, RTI-ME timeout)

Write to a buffer.

 ssize\_t rt\_buffer\_write\_until (RT\_BUFFER \*bf, const void \*ptr, size\_t len, RTIME timeout)

Write to a buffer (with absolute timeout date).

ssize\_t rt\_buffer\_read (RT\_BUFFER \*bf, void \*ptr, size\_t len, RTIME timeout)

Read from a buffer.

• int rt\_buffer\_clear (RT\_BUFFER \*bf)

Clear a buffer.

- int rt\_buffer\_inquire (RT\_BUFFER \*bf, RT\_BUFFER\_INFO \*info)
  - Inquire about a buffer.
- int rt\_buffer\_bind (RT\_BUFFER \*bf, const char \*name, RTIME timeout)

  Bind to a buffer.
- static int rt\_buffer\_unbind (RT\_BUFFER \*bf)

Unbind from a buffer.

# 4.3.1 Detailed Description

### Buffer services.

A buffer is a lightweight IPC object, implementing a fast, one-way Producer-Consumer data path. All messages written are buffered in a single memory area in strict FIFO order, until read either in blocking or non-blocking mode.

Message are always atomically handled on the write side (i.e. no interleave, no short writes), whilst only complete messages are normally returned to the read side. However, short reads may happen under a well-defined situation (see note in rt\_buffer\_read()), albeit they can be fully avoided by proper use of the buffer.

# 4.3.2 Function Documentation

4.3.2.1 int rt buffer bind ( RT\_BUFFER \* bf, const char \* name, RTIME timeout )

#### Bind to a buffer.

This user-space only service retrieves the uniform descriptor of a given - Xenomai buffer identified by its symbolic name. If the buffer does not exist on entry, this service blocks the caller until a buffer of the given name is created.

#### **Parameters**

name	A valid NULL-terminated name which identifies the buffer to bind
	to.
bf	The address of a buffer descriptor retrieved by the operation.
	Contents of this memory is undefined upon failure.
timeout	The number of clock ticks to wait for the registration to occur
	(see note). Passing TM_INFINITE causes the caller to block
	indefinitely until the object is registered. Passing TM_NONBL-
	OCK causes the service to return immediately without waiting if
	the object is not registered on entry.

# Returns

0 is returned upon success. Otherwise:

- -EFAULT is returned if bf or name is referencing invalid memory.
- -EINTR is returned if rt\_task\_unblock() has been called for the waiting task before the retrieval has completed.
- -EWOULDBLOCK is returned if *timeout* is equal to TM\_NONBLOCK and the searched object is not registered on entry.
- -ETIMEDOUT is returned if the object cannot be retrieved within the specified amount of time.

• -EPERM is returned if this service should block, but was called from a context which cannot sleep (e.g. interrupt, non-realtime context).

#### **Environments:**

This service can be called from:

• User-space task (switches to primary mode)

Rescheduling: always unless the request is immediately satisfied or *timeout* specifies a non-blocking operation.

#### Note

The *timeout* value will be interpreted as jiffies if the native skin is bound to a periodic time base (see CONFIG\_XENO\_OPT\_NATIVE\_PERIOD), or nanosebfs otherwise.

4.3.2.2 int rt buffer clear ( RT\_BUFFER \* bf )

Clear a buffer.

Empties a buffer from any data.

#### **Parameters**

bf The descriptor address of the cleared buffer.

# **Returns**

0 is returned upon success. Otherwise:

- -EINVAL is returned if bf is not a buffer descriptor.
- -EIDRM is returned if bf is a deleted buffer descriptor.

# **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- Interrupt service routine
- Kernel-based task
- User-space task

Rescheduling: possible, as a consequence of resuming tasks that wait for buffer space in rt buffer write().

4.3.2.3 intrt buffer create ( RT\_BUFFER \* bf, const char \* name, size\_t bufsz, int mode )

### Create a buffer.

Create a synchronization object that allows tasks to send and receive data asynchronously via a memory buffer. Data may be of an arbitrary length, albeit this IPC is best suited for small to medium-sized messages, since data always have to be copied to the buffer during transit. Large messages may be more efficiently handled by message queues (RT\_QUEUE) via rt\_queue\_send()/rt\_queue\_receive() services.

# **Parameters**

bf	The address of a buffer descriptor Xenomai will use to store the
	buffer-related data. This descriptor must always be valid while
	the buffer is active therefore it must be allocated in permanent
	memory.
name	An ASCII string standing for the symbolic name of the buffer
	When non-NULL and non-empty, this string is copied to a safe
	place into the descriptor, and passed to the registry package if
	enabled for indexing the created buffer.
bufsz	The size of the buffer space available to hold data. The required
	memory is obtained from the system heap.
mode	The buffer creation mode. The following flags can be OR'ed into
	this bitmask, each of them affecting the new buffer:

- B\_FIFO makes tasks pend in FIFO order for reading data from the buffer.
- B\_PRIO makes tasks pend in priority order for reading data from the buffer.

This parameter also applies to tasks blocked on the buffer's output queue (see rt\_buffer\_write()).

# Returns

0 is returned upon success. Otherwise:

- -ENOMEM is returned if the system fails to get enough dynamic memory from the global real-time heap in order to register the buffer.
- -EEXIST is returned if the name is already in use by some registered object.
- -EPERM is returned if this service was called from an asynchronous context.

# Environments:

This service can be called from:

- Kernel module initialization/cleanup code
- User-space task (switches to secondary mode)

Rescheduling: possible.

References rt\_buffer\_delete().

4.3.2.4 int rt\_buffer\_delete ( RT\_BUFFER \* bf )

Delete a buffer.

Destroy a buffer and release all the tasks currently pending on it. A buffer exists in the system since rt\_buffer\_create() has been called to create it, so this service must be called in order to destroy it afterwards.

#### **Parameters**

bf The descriptor address of the buffer to delete.

#### **Returns**

0 is returned upon success. Otherwise:

- -EINVAL is returned if bf is not a buffer descriptor.
- -EIDRM is returned if bf is a deleted buffer descriptor.
- -EPERM is returned if this service was called from an asynchronous context.

# **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- User-space task (switches to secondary mode)

Rescheduling: possible.

Referenced by rt\_buffer\_create().

4.3.2.5 int rt\_buffer\_inquire ( RT\_BUFFER \* bf, RT\_BUFFER\_INFO \* info )

Inquire about a buffer.

Return various information about the status of a given buffer.

# **Parameters**

bf	The descriptor address of the inquired buffer.
info	The address of a structure the buffer information will be written
	to.

# Returns

0 is returned and status information is written to the structure pointed at by *info* upon success. Otherwise:

- -EINVAL is returned if bf is not a buffer descriptor.
- -EIDRM is returned if bf is a deleted buffer descriptor.

# **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- Interrupt service routine
- · Kernel-based task
- User-space task

Rescheduling: never.

4.3.2.6 ssize\_t rt\_buffer\_read ( RT\_BUFFER \* bf, void \* ptr, size\_t len, RTIME timeout )

# Read from a buffer.

Reads the next message from the specified buffer. If no message is available on entry, the caller is allowed to block until enough data is written to the buffer.

# **Parameters**

bf	The descriptor address of the buffer to read from.
ptr	A pointer to a memory area which will be written upon success
	with the received data.
len	The length in bytes of the memory area pointed to by ptr. Under
	normal circumstances, rt_buffer_read() only returns entire mes-
	sages as specified by the len argument, or an error value
	However, short reads are allowed when a potential deadlock sit-
	uation is detected (see note below).
timeout	The number of clock ticks to wait for a message to be available
	from the buffer (see note). Passing TM_INFINITE causes the
	caller to block indefinitely until enough data is available. Passing
	TM_NONBLOCK causes the service to return immediately with-
	out blocking in case not enough data is available.

#### Returns

The number of bytes read from the buffer is returned upon success. - Otherwise:

- -ETIMEDOUT is returned if timeout is different from TM\_NONBLOCK and not enough data is available within the specified amount of time to form a complete message.
- -EWOULDBLOCK is returned if timeout is equal to TM\_NONBLOCK and not enough data is immediately available on entry to form a complete message.
- -EINTR is returned if rt\_task\_unblock() has been called for the reading task before enough data became available to form a complete message.
- -EINVAL is returned if *bf* is not a buffer descriptor, or *len* is greater than the actual buffer length.
- -EIDRM is returned if bf is a deleted buffer descriptor.
- -EPERM is returned if this service should block, but was called from a context which cannot sleep (e.g. interrupt, non-realtime context).
- -ENOMEM is returned if not enough memory is available from the system heap to hold a temporary copy of the message (user-space call only).

# Note

A short read (i.e. fewer bytes returned than requested by *len*) may happen whenever a pathological use of the buffer is encountered. This condition only arises when the system detects that one or more writers are waiting for sending data, while a reader would have to wait for receiving a complete message at the same time. For instance, consider the following sequence, involving a 1024-byte buffer (bf) and two threads:

writer thread > rt\_write\_buffer(&bf, ptr, 1, TM\_INFINITE); (one byte to read, 1023 bytes available for sending) writer thread > rt\_write\_buffer(&bf, ptr, 1024, TM\_INFINITE); (writer blocks - no space for another 1024-byte message) reader thread > rt\_read\_buffer(&bf, ptr, 1024, TM\_INFINITE); (short read - a truncated (1-byte) message is returned)

In order to prevent both threads to wait for each other indefinitely, a short read is allowed, which may be completed by a subsequent call to rt\_buffer\_read() or rt\_buffer\_read\_until(). If that case arises, thread priorities, buffer and/or message lengths should likely be fixed, in order to eliminate such condition.

# **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- Interrupt service routine (non-blocking call only)
- Kernel-based task
- User-space task (switches to primary mode)

Rescheduling: always unless the request is immediately satisfied and no task is waiting for buffer space to be released for the same buffer (see rt\_buffer\_write()), or timeout specifies a non-blocking operation.

# Note

The *timeout* value will be interpreted as jiffies if the native skin is bound to a periodic time base (see CONFIG\_XENO\_OPT\_NATIVE\_PERIOD), or nanoseconds otherwise.

```
4.3.2.7 intrt_buffer_unbind(RT_BUFFER * bf) [inline, static]
```

Unbind from a buffer.

This user-space only service unbinds the calling task from the buffer object previously retrieved by a call to rt buffer bind().

#### **Parameters**

```
bf The address of a buffer descriptor to unbind from.
```

# Returns

0 is always returned.

This service can be called from:

· User-space task.

Rescheduling: never.

```
4.3.2.8 ssize_t rt_buffer_write ( RT_BUFFER * bf, const void * ptr, size_t len, RTIME timeout )
```

Write to a buffer.

Writes a message to the specified buffer. If not enough buffer space is available on entry to hold the message, the caller is allowed to block until enough room is freed. Data written by rt\_buffer\_write() calls can be read in FIFO order by subsequent rt\_buffer\_read() calls. Messages sent via rt\_buffer\_write() are handled atomically (no interleave, no short writes).

## **Parameters**

bf	The descriptor address of the buffer to write to.
ptr	The address of the message data to be written to the buffer.
len	The length in bytes of the message data. Zero is a valid value,
	in which case the buffer is left untouched, and zero is returned
	to the caller. No partial message is ever sent.
timeout	The number of clock ticks to wait for enough buffer space to be
	available to hold the message (see note). Passing TM_INFINITE
	causes the caller to block indefinitely until enough buffer space is
	available. Passing TM_NONBLOCK causes the service to return
	immediately without blocking in case of buffer space shortage.

#### Returns

The number of bytes written to the buffer is returned upon success. - Otherwise:

- -ETIMEDOUT is returned if timeout is different from TM\_NONBLOCK and no buffer space is available within the specified amount of time to hold the message.
- -EWOULDBLOCK is returned if *timeout* is equal to TM\_NONBLOCK and no buffer space is immediately available on entry to hold the message.
- -EINTR is returned if rt\_task\_unblock() has been called for the writing task before enough buffer space became available to hold the message.
- -EINVAL is returned if *bf* is not a buffer descriptor, or *len* is greater than the actual buffer length.
- -EIDRM is returned if bf is a deleted buffer descriptor.
- -EPERM is returned if this service should block, but was called from a context which cannot sleep (e.g. interrupt, non-realtime context).
- -ENOMEM is returned if not enough memory is available from the system heap to hold a temporary copy of the message (user-space call only).

# Environments:

This service can be called from:

- Kernel module initialization/cleanup code
- Interrupt service routine (non-blocking call only)
- Kernel-based task
- User-space task (switches to primary mode)

Rescheduling: always unless the request is immediately satisfied and no task is waiting for messages on the same buffer, or *timeout* specifies a non-blocking operation.

### Note

The *timeout* value will be interpreted as jiffies if the native skin is bound to a periodic time base (see CONFIG\_XENO\_OPT\_NATIVE\_PERIOD), or nanoseconds otherwise.

4.3.2.9 ssize\_t rt\_buffer\_write\_until ( RT\_BUFFER \* bf, const void \* ptr, size\_t len, RTIME timeout )

Write to a buffer (with absolute timeout date).

Writes a message to the specified buffer. If not enough buffer space is available on entry to hold the message, the caller is allowed to block until enough room is freed, or a timeout elapses.

#### **Parameters**

bf	The descriptor address of the buffer to write to.
ptr	The address of the message data to be written to the buffer.
len	The length in bytes of the message data. Zero is a valid value,
	in which case the buffer is left untouched, and zero is returned
	to the caller.
timeout	The absolute date specifying a time limit to wait for enough buffer
	space to be available to hold the message (see note). Passing
	TM_INFINITE causes the caller to block indefinitely until enough
	buffer space is available. Passing TM_NONBLOCK causes the
	service to return immediately without blocking in case of buffer
	space shortage.

### Returns

The number of bytes written to the buffer is returned upon success. - Otherwise:

- -ETIMEDOUT is returned if the absolute *timeout* date is reached before enough buffer space is available to hold the message.
- -EWOULDBLOCK is returned if *timeout* is equal to TM\_NONBLOCK and no buffer space is immediately available on entry to hold the message.
- -EINTR is returned if rt\_task\_unblock() has been called for the writing task before enough buffer space became available to hold the message.
- -EINVAL is returned if *bf* is not a buffer descriptor, or *len* is greater than the actual buffer length.

- -EIDRM is returned if bf is a deleted buffer descriptor.
- -EPERM is returned if this service should block, but was called from a context which cannot sleep (e.g. interrupt, non-realtime context).
- -ENOMEM is returned if not enough memory is available from the system heap to hold a temporary copy of the message (user-space call only).

## **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- Interrupt service routine (non-blocking call only)
- · Kernel-based task
- User-space task (switches to primary mode)

Rescheduling: always unless the request is immediately satisfied and no task is waiting for messages on the same buffer, or *timeout* specifies a non-blocking operation.

### Note

The *timeout* value will be interpreted as jiffies if the native skin is bound to a periodic time base (see CONFIG\_XENO\_OPT\_NATIVE\_PERIOD), or nanoseconds otherwise.

# 4.4 Condition variable services.

Collaboration diagram for Condition variable services.:



#### **Files**

• file cond.c

This file is part of the Xenomai project.

### **Functions**

int rt\_cond\_create (RT\_COND \*cond, const char \*name)

Create a condition variable.

• int rt\_cond\_delete (RT\_COND \*cond)

Delete a condition variable.

• int rt\_cond\_signal (RT\_COND \*cond)

Signal a condition variable.

• int rt\_cond\_broadcast (RT\_COND \*cond)

Broadcast a condition variable.

 int rt\_cond\_wait (RT\_COND \*cond, RT\_MUTEX \*mutex, RTIME timeout)

Wait on a condition.

int rt\_cond\_wait\_until (RT\_COND \*cond, RT\_MUTEX \*mutex, RTIME timeout)

Wait on a condition (with absolute timeout date).

• int rt\_cond\_inquire (RT\_COND \*cond, RT\_COND\_INFO \*info)

Inquire about a condition variable.

• int rt\_cond\_bind (RT\_COND \*cond, const char \*name, RTIME timeout)

Bind to a condition variable.

static int rt cond unbind (RT COND \*cond)

Unbind from a condition variable.

### 4.4.1 Detailed Description

Condition variable services.

A condition variable is a synchronization object which allows tasks to suspend execution until some predicate on shared data is satisfied. The basic operations on conditions are: signal the condition (when the predicate becomes true), and wait for the condition, blocking the task execution until another task signals the condition. A condition variable must always be associated with a mutex, to avoid a well-known race condition where a task prepares to wait on a condition variable and another task signals the condition just before the first task actually waits on it.

### 4.4.2 Function Documentation

4.4.2.1 int rt cond bind ( RT\_COND \* cond, const char \* name, RTIME timeout )

Bind to a condition variable.

This user-space only service retrieves the uniform descriptor of a given - Xenomai condition variable identified by its symbolic name. If the condition variable does not exist on entry, this service blocks the caller until a condition variable of the given name is created.

### **Parameters**

name	A valid NULL-terminated name which identifies the condition
	variable to bind to.
cond	The address of a condition variable descriptor retrieved by the
	operation. Contents of this memory is undefined upon failure.
timeout	The number of clock ticks to wait for the registration to occur
	(see note). Passing TM_INFINITE causes the caller to block
	indefinitely until the object is registered. Passing TM_NONBL-
	OCK causes the service to return immediately without waiting if
	the object is not registered on entry.

## **Returns**

0 is returned upon success. Otherwise:

- -EFAULT is returned if cond or name is referencing invalid memory.
- -EINTR is returned if rt\_task\_unblock() has been called for the waiting task before the retrieval has completed.
- -EWOULDBLOCK is returned if *timeout* is equal to TM\_NONBLOCK and the searched object is not registered on entry.
- -ETIMEDOUT is returned if the object cannot be retrieved within the specified amount of time.

• -EPERM is returned if this service should block, but was called from a context which cannot sleep (e.g. interrupt, non-realtime context).

### **Environments:**

This service can be called from:

• User-space task (switches to primary mode)

Rescheduling: always unless the request is immediately satisfied or *timeout* specifies a non-blocking operation.

#### Note

The *timeout* value will be interpreted as jiffies if the native skin is bound to a periodic time base (see CONFIG\_XENO\_OPT\_NATIVE\_PERIOD), or nanoseconds otherwise.

## 4.4.2.2 int rt\_cond\_broadcast ( RT\_COND \* cond )

Broadcast a condition variable.

If the condition variable is pended, all tasks currently waiting on it are immediately unblocked.

#### **Parameters**

cond The descriptor address of the affected condition variable.

### Returns

0 is returned upon success. Otherwise:

- -EINVAL is returned if *cond* is not a condition variable descriptor.
- -EIDRM is returned if *cond* is a deleted condition variable descriptor.

### **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- Interrupt service routine
- Kernel-based task
- User-space task

Rescheduling: possible.

4.4.2.3 int rt\_cond\_create ( RT\_COND \* cond, const char \* name )

Create a condition variable.

Create a synchronization object that allows tasks to suspend execution until some predicate on shared data is satisfied.

#### **Parameters**

cond	The address of a condition variable descriptor Xenomai will use
	to store the variable-related data. This descriptor must always
	be valid while the variable is active therefore it must be allocated
	in permanent memory.
name	An ASCII string standing for the symbolic name of the condition
	variable. When non-NULL and non-empty, this string is copied
	to a safe place into the descriptor, and passed to the registry
	package if enabled for indexing the created variable.

#### **Returns**

0 is returned upon success. Otherwise:

- -ENOMEM is returned if the system fails to get enough dynamic memory from the global real-time heap in order to register the condition variable.
- -EEXIST is returned if the *name* is already in use by some registered object.
- -EPERM is returned if this service was called from an asynchronous context.

# Environments:

This service can be called from:

- Kernel module initialization/cleanup code
- Kernel-based task
- User-space task

Rescheduling: possible.

References rt\_cond\_delete().

4.4.2.4 int rt\_cond\_delete ( RT\_COND \* cond )

Delete a condition variable.

Destroy a condition variable and release all the tasks currently pending on it. A condition variable exists in the system since rt\_cond\_create() has been called to create it, so this service must be called in order to destroy it afterwards.

#### **Parameters**

cond	The descriptor	addrage /	of tha	affected	condition	variable
cona		auul coo i	OI LIIC	anecieu	COHUILION	variable.

#### Returns

0 is returned upon success. Otherwise:

- -EINVAL or -ESRCH is returned if *cond* is not a condition variable descriptor.
- -EIDRM is returned if cond is a deleted condition variable descriptor.
- -EPERM is returned if this service was called from an asynchronous context.

#### **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- · Kernel-based task
- User-space task

Rescheduling: possible.

Referenced by rt\_cond\_create().

4.4.2.5 int rt\_cond\_inquire ( RT\_COND \* cond, RT\_COND\_INFO \* info )

Inquire about a condition variable.

Return various information about the status of a given condition variable.

## **Parameters**

	cond	The descriptor address of the inquired condition variable.
Ī	info	The address of a structure the condition variable information will
		be written to.

### Returns

0 is returned and status information is written to the structure pointed at by *info* upon success. Otherwise:

- -EINVAL is returned if *cond* is not a condition variable descriptor.
- -EIDRM is returned if *cond* is a deleted condition variable descriptor.

### **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- · Interrupt service routine
- Kernel-based task
- User-space task

Rescheduling: never.

```
4.4.2.6 int rt_cond_signal ( RT_COND * cond )
```

Signal a condition variable.

If the condition variable is pended, the first waiting task (by queuing priority order) is immediately unblocked.

#### **Parameters**

cond | The descriptor address of the affected condition variable.

## Returns

0 is returned upon success. Otherwise:

- -EINVAL is returned if cond is not a condition variable descriptor.
- -EIDRM is returned if cond is a deleted condition variable descriptor.

### **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- Interrupt service routine
- Kernel-based task
- User-space task

Rescheduling: possible.

```
4.4.2.7 intrt_cond_unbind(RT_COND * cond) [inline, static]
```

Unbind from a condition variable.

This user-space only service unbinds the calling task from the condition variable object previously retrieved by a call to rt\_cond\_bind().

## **Parameters**

cond The address of a condition variable descriptor to unbind from.

#### Returns

0 is always returned.

This service can be called from:

· User-space task.

Rescheduling: never.

4.4.2.8 int rt cond wait ( RT\_COND \* cond, RT\_MUTEX \* mutex, RTIME timeout )

Wait on a condition.

This service atomically release the mutex and causes the calling task to block on the specified condition variable. The caller will be unblocked when the variable is signaled, and the mutex re-acquired before returning from this service.

Tasks pend on condition variables by priority order.

## **Parameters**

cond	The descriptor address of the affected condition variable.
mutex	The descriptor address of the mutex protecting the condition
	variable.
timeout	The number of clock ticks to wait for the condition variable to be signaled (see note). Passing TM_INFINITE causes the caller to block indefinitely until the condition variable is signaled.

### Returns

0 is returned upon success. Otherwise:

- -EINVAL is returned if mutex is not a mutex descriptor, or cond is not a condition variable descriptor.
- -EIDRM is returned if *mutex* or *cond* is a deleted object descriptor, including if the deletion occurred while the caller was sleeping on the variable.
- -ETIMEDOUT is returned if timeout expired before the condition variable has been signaled.
- -EINTR is returned if rt\_task\_unblock() has been called for the waiting task, or a signal has been received before the condition variable has been signaled. Note that the condition variable may be signaled right after this

interruption, so when using -EINTR, the code must not call rt\_cond\_wait() immediately again, or a condition signal may be missed. With respect to restartint rt\_cond\_wait(), -EINTR should be handled as if 0 had been returned.

• -EWOULDBLOCK is returned if timeout equals TM NONBLOCK.

#### **Environments:**

This service can be called from:

- Kernel-based task
- User-space task (switches to primary mode)

Rescheduling: always unless the request is immediately satisfied or *timeout* specifies a non-blocking operation.

#### Note

The *timeout* value will be interpreted as jiffies if the native skin is bound to a periodic time base (see CONFIG\_XENO\_OPT\_NATIVE\_PERIOD), or nanoseconds otherwise.

4.4.2.9 int rt\_cond\_wait\_until ( RT\_COND \* cond, RT\_MUTEX \* mutex, RTIME timeout )

Wait on a condition (with absolute timeout date).

This service atomically release the mutex and causes the calling task to block on the specified condition variable. The caller will be unblocked when the variable is signaled, and the mutex re-acquired before returning from this service.

Tasks pend on condition variables by priority order.

### **Parameters**

cond	The descriptor address of the affected condition variable.
mutex	The descriptor address of the mutex protecting the condition
	variable.
timeout	The absolute date specifying a time limit to wait for the condi-
	tion variable to be signaled (see note). Passing TM_INFINITE
	causes the caller to block indefinitely until the condition variable
	is signaled.

### Returns

0 is returned upon success. Otherwise:

 -EINVAL is returned if mutex is not a mutex descriptor, or cond is not a condition variable descriptor.

- -EIDRM is returned if *mutex* or *cond* is a deleted object descriptor, including if the deletion occurred while the caller was sleeping on the variable.
- -ETIMEDOUT is returned if the absolute *timeout* date is reached before the condition variable is signaled.
- -EINTR is returned if rt\_task\_unblock() has been called for the waiting task before the condition variable has been signaled. Note that the condition variable may be signaled right after this interruption, so when using -EINTR, the code must not call rt\_cond\_wait() immediately again, or a condition signal may be missed. With respect to restartint rt\_cond\_wait(), -EINTR should be handled as if 0 had been returned.
- -EWOULDBLOCK is returned if timeout equals TM\_NONBLOCK.

### **Environments:**

This service can be called from:

- Kernel-based task
- User-space task (switches to primary mode)

Rescheduling: always unless the request is immediately satisfied or *timeout* specifies a non-blocking operation.

### Note

The *timeout* value will be interpreted as jiffies if the native skin is bound to a periodic time base (see CONFIG\_XENO\_OPT\_NATIVE\_PERIOD), or nanoseconds otherwise.

# 4.5 Event flag group services.

Collaboration diagram for Event flag group services .:



## **Files**

file event.c

This file is part of the Xenomai project.

### **Functions**

 int rt\_event\_create (RT\_EVENT \*event, const char \*name, unsigned long ivalue, int mode)

Create an event group.

int rt\_event\_delete (RT\_EVENT \*event)

Delete an event group.

• int rt\_event\_signal (RT\_EVENT \*event, unsigned long mask)

Post an event group.

int rt\_event\_wait (RT\_EVENT \*event, unsigned long mask, unsigned long \*mask r, int mode, RTIME timeout)

Pend on an event group.

• int rt\_event\_wait\_until (RT\_EVENT \*event, unsigned long mask, unsigned long \*mask r, int mode, RTIME timeout)

Pend on an event group (with absolute timeout date).

int rt\_event\_clear (RT\_EVENT \*event, unsigned long mask, unsigned long \*mask\_r)

Clear an event group.

• int rt\_event\_inquire (RT\_EVENT \*event, RT\_EVENT\_INFO \*info)

Inquire about an event group.

 int rt\_event\_bind (RT\_EVENT \*event, const char \*name, RTIME timeout)

Bind to an event flag group.

static int rt\_event\_unbind (RT\_EVENT \*event)

Unbind from an event flag group.

### 4.5.1 Detailed Description

An event flag group is a synchronization object represented by a long-word structure; every available bit in such word can be used to map a user-defined event flag. When a flag is set, the associated event is said to have occurred. Xenomai tasks and interrupt handlers can use event flags to signal the occurrence of events to other tasks; those tasks can either wait for the events to occur in a conjunctive manner (all awaited events must have occurred to wake up), or in a disjunctive way (at least one of the awaited events must have occurred to wake up).

### 4.5.2 Function Documentation

4.5.2.1 int rt event bind ( RT\_EVENT \* event, const char \* name, RTIME timeout )

Bind to an event flag group.

This user-space only service retrieves the uniform descriptor of a given - Xenomai event flag group identified by its symbolic name. If the event flag group does not exist on entry, this service blocks the caller until a event flag group of the given name is created.

#### **Parameters**

name	A valid NULL-terminated name which identifies the event flag
	group to bind to.
event	The address of an event flag group descriptor retrieved by the
	operation. Contents of this memory is undefined upon failure.
timeout	The number of clock ticks to wait for the registration to occur
	(see note). Passing TM_INFINITE causes the caller to block
	indefinitely until the object is registered. Passing TM_NONBL-
	OCK causes the service to return immediately without waiting if
	the object is not registered on entry.

#### Returns

0 is returned upon success. Otherwise:

- -EFAULT is returned if event or name is referencing invalid memory.
- -EINTR is returned if rt\_task\_unblock() has been called for the waiting task before the retrieval has completed.
- -EWOULDBLOCK is returned if *timeout* is equal to TM\_NONBLOCK and the searched object is not registered on entry.
- -ETIMEDOUT is returned if the object cannot be retrieved within the specified amount of time.

• -EPERM is returned if this service should block, but was called from a context which cannot sleep (e.g. interrupt, non-realtime context).

### **Environments:**

This service can be called from:

• User-space task (switches to primary mode)

Rescheduling: always unless the request is immediately satisfied or *timeout* specifies a non-blocking operation.

#### Note

The *timeout* value will be interpreted as jiffies if the native skin is bound to a periodic time base (see CONFIG\_XENO\_OPT\_NATIVE\_PERIOD), or nanoseconds otherwise.

4.5.2.2 int rt\_event\_clear ( RT\_EVENT \* event, unsigned long mask, unsigned long \* mask\_r )

Clear an event group.

Clears a set of flags from an event mask.

### **Parameters**

event	The descriptor address of the affected event.
mask	The set of events to be cleared.
	If non-NULL, <i>mask_r</i> is the address of a memory location which will be written upon success with the previous value of the event
	group before the flags are cleared.

## Returns

0 is returned upon success. Otherwise:

- -EINVAL is returned if event is not an event group descriptor.
- -EIDRM is returned if event is a deleted event group descriptor.

## **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- · Interrupt service routine

- · Kernel-based task
- User-space task

Rescheduling: never.

4.5.2.3 int rt\_event\_create ( RT\_EVENT \* event, const char \* name, unsigned long ivalue, int mode )

Create an event group.

Event groups provide for task synchronization by allowing a set of flags (or "events") to be waited for and posted atomically. An event group contains a mask of received events; any set of bits from the event mask can be pended or posted in a single operation.

Tasks can wait for a conjunctive (AND) or disjunctive (OR) set of events to occur. A task pending on an event group in conjunctive mode is woken up as soon as all awaited events are set in the event mask. A task pending on an event group in disjunctive mode is woken up as soon as any awaited event is set in the event mask.

#### **Parameters**

eveni	The address of an event group descriptor Xenomai will use to store the event-related data. This descriptor must always be valid while the group is active therefore it must be allocated in permanent memory.
name	An ASCII string standing for the symbolic name of the group When non-NULL and non-empty, this string is copied to a safe place into the descriptor, and passed to the registry package if enabled for indexing the created event group.
ivalue	The initial value of the group's event mask.
mode	The event group creation mode. The following flags can be O-R'ed into this bitmask, each of them affecting the new group:

- EV\_FIFO makes tasks pend in FIFO order on the event group.
- EV PRIO makes tasks pend in priority order on the event group.

### Returns

0 is returned upon success. Otherwise:

- -EEXIST is returned if the name is already in use by some registered object.
- -EPERM is returned if this service was called from an asynchronous context.

• -ENOMEM is returned if the system fails to get enough dynamic memory from the global real-time heap in order to register the event group.

### **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- Kernel-based task
- User-space task

Rescheduling: possible.

References rt event delete().

4.5.2.4 int rt\_event\_delete ( RT\_EVENT \* event )

Delete an event group.

Destroy an event group and release all the tasks currently pending on it. An event group exists in the system since <a href="rt\_event\_create">rt\_event\_create</a>() has been called to create it, so this service must be called in order to destroy it afterwards.

#### **Parameters**

event The descriptor address of the affected event group.

### Returns

0 is returned upon success. Otherwise:

- -EINVAL is returned if *event* is not a event group descriptor.
- -EIDRM is returned if event is a deleted event group descriptor.
- -EPERM is returned if this service was called from an asynchronous context.

## **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- Kernel-based task
- User-space task

Rescheduling: possible.

Referenced by rt event create().

4.5.2.5 int rt\_event\_inquire ( RT\_EVENT \* event, RT\_EVENT\_INFO \* info )

Inquire about an event group.

Return various information about the status of a specified event group.

#### **Parameters**

event	The descriptor address of the inquired event group.
info	The address of a structure the event group information will be
	written to.

#### Returns

0 is returned and status information is written to the structure pointed at by *info* upon success. Otherwise:

- -EINVAL is returned if *event* is not a event group descriptor.
- -EIDRM is returned if event is a deleted event group descriptor.

### **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- Interrupt service routine
- Kernel-based task
- User-space task

Rescheduling: never.

4.5.2.6 int rt\_event\_signal ( RT\_EVENT \* event, unsigned long mask )

Post an event group.

Post a set of bits to the event mask. All tasks having their wait request fulfilled by the posted events are resumed.

### **Parameters**

	The descriptor address of the affected event.
mask	The set of events to be posted.

#### Returns

0 is returned upon success. Otherwise:

- -EINVAL is returned if event is not an event group descriptor.
- -EIDRM is returned if event is a deleted event group descriptor.

### **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- · Interrupt service routine
- Kernel-based task
- User-space task

Rescheduling: possible.

```
4.5.2.7 intrt_event_unbind(RT_EVENT * event) [inline, static]
```

Unbind from an event flag group.

This user-space only service unbinds the calling task from the event flag group object previously retrieved by a call to rt\_event\_bind().

# Parameters

```
event | The address of an event flag group descriptor to unbind from.
```

## Returns

0 is always returned.

This service can be called from:

User-space task.

Rescheduling: never.

```
4.5.2.8 int rt_event_wait ( RT_EVENT * event, unsigned long mask, unsigned long * mask_r, int mode, RTIME timeout )
```

Pend on an event group.

Waits for one or more events on the specified event group, either in conjunctive or disjunctive mode.

If the specified set of bits is not set, the calling task is blocked. The task is not resumed until the request is fulfilled. The event bits are NOT cleared from the event group when a request is satisfied; rt\_event\_wait() will return immediately with success for the same event mask until rt\_event\_clear() is called to clear those bits.

#### **Parameters**

0.1004	The decement address of the offerted event average
	The descriptor address of the affected event group.
mask	The set of bits to wait for. Passing zero causes this service to
	return immediately with a success value; the current value of the
	event mask is also copied to <i>mask_r</i> .
mask_r	The value of the event mask at the time the task was readied.
mode	The pend mode. The following flags can be OR'ed into this bit-
	mask, each of them affecting the operation:

- EV\_ANY makes the task pend in disjunctive mode (i.e. OR); this means that the request is fulfilled when at least one bit set into mask is set in the current event mask.
- EV\_ALL makes the task pend in conjunctive mode (i.e. AND); this means
  that the request is fulfilled when at all bits set into mask are set in the
  current event mask.

## **Parameters**

timeout	The number of clock ticks to wait for fulfilling the request (see
	note). Passing TM_INFINITE causes the caller to block indef-
	initely until the request is fulfilled. Passing TM_NONBLOCK
	causes the service to return immediately without waiting if the
	request cannot be satisfied immediately.

## Returns

0 is returned upon success. Otherwise:

- -EINVAL is returned if event is not a event group descriptor.
- -EIDRM is returned if event is a deleted event group descriptor, including if the deletion occurred while the caller was sleeping on it before the request has been satisfied.
- -EWOULDBLOCK is returned if *timeout* is equal to TM\_NONBLOCK and the current event mask value does not satisfy the request.
- -EINTR is returned if rt\_task\_unblock() has been called for the waiting task before the request has been satisfied.

- -ETIMEDOUT is returned if the request has not been satisfied within the specified amount of time.
- -EPERM is returned if this service should block, but was called from a context which cannot sleep (e.g. interrupt, non-realtime context).

#### **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code or Interrupt service routine only if timeout is equal to TM\_NONBLOCK.
- Kernel-based task
- User-space task (switches to primary mode)

Rescheduling: always unless the request is immediately satisfied or *timeout* specifies a non-blocking operation.

#### Note

The *timeout* value will be interpreted as jiffies if the native skin is bound to a periodic time base (see CONFIG\_XENO\_OPT\_NATIVE\_PERIOD), or nanoseconds otherwise.

4.5.2.9 int rt\_event\_wait\_until ( RT\_EVENT \* event, unsigned long mask, unsigned long \* mask\_r, int mode, RTIME timeout )

Pend on an event group (with absolute timeout date).

Waits for one or more events on the specified event group, either in conjunctive or disjunctive mode.

If the specified set of bits is not set, the calling task is blocked. The task is not resumed until the request is fulfilled. The event bits are NOT cleared from the event group when a request is satisfied; rt\_event\_wait() will return immediately with success for the same event mask until rt\_event\_clear() is called to clear those bits.

### **Parameters**

event	The descriptor address of the affected event group.
mask	The set of bits to wait for. Passing zero causes this service to
	return immediately with a success value; the current value of the
	event mask is also copied to <i>mask_r</i> .
	The value of the event mask at the time the task was readied.
mode	The pend mode. The following flags can be OR'ed into this bit-
	mask, each of them affecting the operation:

- EV\_ANY makes the task pend in disjunctive mode (i.e. OR); this means
  that the request is fulfilled when at least one bit set into mask is set in the
  current event mask.
- EV\_ALL makes the task pend in conjunctive mode (i.e. AND); this means that the request is fulfilled when at all bits set into *mask* are set in the current event mask.

### **Parameters**

timeout	The absolute date specifying a time limit to wait for fulfilling the
	request (see note). Passing TM_INFINITE causes the caller to
	block indefinitely until the request is fulfilled. Passing TM NON-
	BLOCK causes the service to return immediately without waiting
	if the request cannot be satisfied immediately.

#### Returns

0 is returned upon success. Otherwise:

- -EINVAL is returned if event is not a event group descriptor.
- -EIDRM is returned if event is a deleted event group descriptor, including if the deletion occurred while the caller was sleeping on it before the request has been satisfied.
- -EWOULDBLOCK is returned if *timeout* is equal to TM\_NONBLOCK and the current event mask value does not satisfy the request.
- -EINTR is returned if rt\_task\_unblock() has been called for the waiting task before the request has been satisfied.
- -ETIMEDOUT is returned if the absolute *timeout* date is reached before the request is satisfied.
- -EPERM is returned if this service should block, but was called from a context which cannot sleep (e.g. interrupt, non-realtime context).

### **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code or Interrupt service routine only if timeout is equal to TM\_NONBLOCK.
- Kernel-based task
- User-space task (switches to primary mode)

Rescheduling: always unless the request is immediately satisfied or *timeout* specifies a non-blocking operation.

Note

The *timeout* value will be interpreted as jiffies if the native skin is bound to a periodic time base (see CONFIG\_XENO\_OPT\_NATIVE\_PERIOD), or nanoseconds otherwise.

# 4.6 Memory heap services.

Collaboration diagram for Memory heap services.:



### **Files**

• file heap.c

This file is part of the Xenomai project.

### **Functions**

• int rt\_heap\_create (RT\_HEAP \*heap, const char \*name, size\_t heapsize, int mode)

Create a memory heap or a shared memory segment.

• int rt\_heap\_delete (RT\_HEAP \*heap)

Delete a real-time heap.

 int rt\_heap\_alloc (RT\_HEAP \*heap, size\_t size, RTIME timeout, void \*\*blockp)

Allocate a block or return the single segment base.

• int rt\_heap\_free (RT\_HEAP \*heap, void \*block)

Free a block.

int rt\_heap\_inquire (RT\_HEAP \*heap, RT\_HEAP\_INFO \*info)
 Inquire about a heap.

• int rt\_heap\_bind (RT\_HEAP \*heap, const char \*name, RTIME timeout)

Bind to a mappable heap.

• int rt\_heap\_unbind (RT\_HEAP \*heap)

Unbind from a mappable heap.

# 4.6.1 Detailed Description

Memory heaps are regions of memory used for dynamic memory allocation in a time-bounded fashion. Blocks of memory are allocated and freed in an

arbitrary order and the pattern of allocation and size of blocks is not known until run time.

The implementation of the memory allocator follows the algorithm described in a USENIX 1988 paper called "Design of a General Purpose Memory Allocator for the 4.3BSD Unix Kernel" by Marshall K. McKusick and Michael J. Karels.

Xenomai memory heaps are built over the nucleus's heap objects, which in turn provide the needed support for sharing a memory area between kernel and user-space using direct memory mapping.

### 4.6.2 Function Documentation

4.6.2.1 int rt heap alloc ( RT\_HEAP \* heap, size\_t size, RTIME timeout, void \*\* blockp )

Allocate a block or return the single segment base.

This service allocates a block from the heap's internal pool, or returns the address of the single memory segment in the caller's address space. Tasks may wait for some requested amount of memory to become available from local heaps.

#### **Parameters**

heap	The descriptor address of the heap to allocate a block from.
size	
	aged as a single-block area (H_SINGLE), this value can be ei-
	ther zero, or the same value given to rt_heap_create(). In that
	case, the same block covering the entire heap space will always
	be returned to all callers of this service.
timeout	The number of clock ticks to wait for a block of sufficient size to be available from a local heap (see note). Passing TM_INFINITE causes the caller to block indefinitely until some block is eventually available. Passing TM_NONBLOCK causes the service to return immediately without waiting if no block is available on entry. This parameter has no influence if the heap is managed as a single-block area since the entire heap space is always available.
blockp	A pointer to a memory location which will be written upon success with the address of the allocated block, or the start address of the single memory segment. In the former case, the block should be freed using rt_heap_free().

### Returns

0 is returned upon success. Otherwise:

 -EINVAL is returned if heap is not a heap descriptor, or heap is managed as a single-block area (i.e. H\_SINGLE mode) and size is non-zero but does not match the original heap size passed to rt\_heap\_create().

- -EIDRM is returned if *heap* is a deleted heap descriptor.
- -ETIMEDOUT is returned if *timeout* is different from TM\_NONBLOCK and no block is available within the specified amount of time.
- -EWOULDBLOCK is returned if timeout is equal to TM\_NONBLOCK and no block is immediately available on entry.
- -EINTR is returned if rt\_task\_unblock() has been called for the waiting task before any block was available.
- -EPERM is returned if this service should block but was called from a context which cannot sleep (e.g. interrupt, non-realtime context).

#### **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- Interrupt service routine only if *timeout* is equal to TM\_NONBLOCK, or the heap is managed as a single-block area.
- Kernel-based task
- User-space task (switches to primary mode)

Rescheduling: always unless the request is immediately satisfied or *timeout* specifies a non-blocking operation. Operations on single-block heaps never start the rescheduling procedure.

## Note

The *timeout* value will be interpreted as jiffies if the native skin is bound to a periodic time base (see CONFIG\_XENO\_OPT\_NATIVE\_PERIOD), or nanoseconds otherwise.

4.6.2.2 int rt\_heap\_bind ( RT\_HEAP \* heap, const char \* name, RTIME timeout )

Bind to a mappable heap.

This user-space only service retrieves the uniform descriptor of a given mappable Xenomai heap identified by its symbolic name. If the heap does not exist on entry, this service blocks the caller until a heap of the given name is created.

#### **Parameters**

name	A valid NULL-terminated name which identifies the heap to bind
	to.
heap	The address of a heap descriptor retrieved by the operation
	Contents of this memory is undefined upon failure.
timeout	The number of clock ticks to wait for the registration to occur
	(see note). Passing TM_INFINITE causes the caller to block
	indefinitely until the object is registered. Passing TM_NONBL-
	OCK causes the service to return immediately without waiting if
	the object is not registered on entry.

#### **Returns**

0 is returned upon success. Otherwise:

- -EFAULT is returned if heap or name is referencing invalid memory.
- -EINTR is returned if rt\_task\_unblock() has been called for the waiting task before the retrieval has completed.
- -EWOULDBLOCK is returned if timeout is equal to TM\_NONBLOCK and the searched object is not registered on entry.
- -ETIMEDOUT is returned if the object cannot be retrieved within the specified amount of time.
- -EPERM is returned if this service should block, but was called from a context which cannot sleep (e.g. interrupt, non-realtime context).
- -ENOENT is returned if the special file /dev/rtheap (character-mode, major 10, minor 254) is not available from the filesystem. This device is needed to map the shared heap memory into the caller's address space. udev-based systems should not need manual creation of such device entry. Environments:

This service can be called from:

User-space task (switches to primary mode)

Rescheduling: always unless the request is immediately satisfied or *timeout* specifies a non-blocking operation.

### Note

The *timeout* value will be interpreted as jiffies if the native skin is bound to a periodic time base (see CONFIG\_XENO\_OPT\_NATIVE\_PERIOD), or nanoseconds otherwise.

### **Examples:**

shared\_mem.c.

4.6.2.3 int rt\_heap\_create ( RT\_HEAP \* heap, const char \* name, size\_t heapsize, int mode )

Create a memory heap or a shared memory segment.

Initializes a memory heap suitable for time-bounded allocation requests of dynamic memory. Memory heaps can be local to the kernel address space, or mapped to user-space.

In their simplest form, heaps are only accessible from kernel space, and are merely usable as regular memory allocators.

Heaps existing in kernel space can be mapped by user-space processes to their own address space provided H\_MAPPABLE has been passed into the *mode* parameter.

By default, heaps support allocation of multiple blocks of memory in an arbitrary order. However, it is possible to ask for single-block management by passing the H\_SINGLE flag into the *mode* parameter, in which case the entire memory space managed by the heap is made available as a unique block. In this mode, all allocation requests made through rt\_heap\_alloc() will then return the same block address, pointing at the beginning of the heap memory.

H\_SHARED is a shorthand for creating shared memory segments transparently accessible from kernel and user-space contexts, which are basically single-block, mappable heaps. By proper use of a common *name*, all tasks can bind themselves to the same heap and thus share the same memory space, which start address should be subsequently retrieved by a call to rt\_heap\_alloc().

#### **Parameters**

heap	The address of a heap descriptor Xenomai will use to store the heap-related data. This descriptor must always be valid while the heap is active therefore it must be allocated in permanent memory.
name	An ASCII string standing for the symbolic name of the heap When non-NULL and non-empty, this string is copied to a safe place into the descriptor, and passed to the registry package if enabled for indexing the created heap. Mappable heaps must be given a valid name.
heapsize	The size (in bytes) of the block pool which is going to be pre- allocated to the heap. Memory blocks will be claimed and re- leased to this pool. The block pool is not extensible, so this value must be compatible with the highest memory pressure that could be expected. A minimum of 2 * PAGE_SIZE will be enforced for mappable heaps, 2 * XNHEAP_PAGE_SIZE otherwise.
mode	The heap creation mode. The following flags can be OR'ed into this bitmask, each of them affecting the new heap:

 H\_FIFO makes tasks pend in FIFO order on the heap when waiting for available blocks.

- H\_PRIO makes tasks pend in priority order on the heap when waiting for available blocks.
- H\_MAPPABLE causes the heap to be sharable between kernel and user-space contexts. Otherwise, the new heap is only available for kernel-based usage. This flag is implicitely set when the caller is running in user-space. This feature requires the real-time support in user-space to be configured in (CONFIG\_XENO\_OPT\_PERVASIVE).
- H\_SINGLE causes the entire heap space to be managed as a single memory block.
- H\_SHARED is a shorthand for H\_MAPPABLE|H\_SINGLE, creating a global shared memory segment accessible from both the kernel and userspace contexts.
- H\_DMA causes the block pool associated to the heap to be allocated in physically contiguous memory, suitable for DMA operations with I/O devices. The physical address of the heap can be obtained by a call to rt\_heap\_inquire().
- H\_NONCACHED causes the heap not to be cached. This is necessary
  on platforms such as ARM to share a heap between kernel and userspace. Note that this flag is not compatible with the H\_DMA flag.

### Returns

0 is returned upon success. Otherwise:

- -EEXIST is returned if the name is already in use by some registered object.
- -EINVAL is returned if heapsize is null, greater than the system limit, or name is null or empty for a mappable heap.
- -ENOMEM is returned if not enough system memory is available to create
  or register the heap. Additionally, and if H\_MAPPABLE has been passed
  in mode, errors while mapping the block pool in the caller's address space
  might beget this return code too.
- -EPERM is returned if this service was called from an invalid context.
- -ENOSYS is returned if mode specifies H\_MAPPABLE, but the real-time support in user-space is unavailable.

### **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- User-space task (switches to secondary mode)

Rescheduling: possible.

References rt heap delete().

4.6.2.4 int rt\_heap\_delete ( RT\_HEAP \* heap )

Delete a real-time heap.

Destroy a heap and release all the tasks currently pending on it. A heap exists in the system since rt\_heap\_create() has been called to create it, so this service must be called in order to destroy it afterwards.

#### **Parameters**

heap The descriptor address of the affected heap.

#### Returns

0 is returned upon success. Otherwise:

- -EINVAL is returned if heap is not a heap descriptor.
- -EIDRM is returned if *heap* is a deleted heap descriptor.
- -EPERM is returned if this service was called from an invalid context.

## **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- User-space task (switches to secondary mode).

Rescheduling: possible.

Referenced by rt\_heap\_create().

4.6.2.5 int rt heap free ( RT\_HEAP \* heap, void \* block )

## Free a block.

This service releases a block to the heap's internal pool. If some task is currently waiting for a block so that it's pending request could be satisfied as a result of the release, it is immediately resumed.

If the heap is defined as a single-block area (i.e. H\_SINGLE mode), this service leads to a null-effect and always returns successfully.

#### **Parameters**

heap	The address of the heap descriptor to which the block block belong.
block	The address of the block to free.

## Returns

0 is returned upon success, or -EINVAL if *block* is not a valid block previously allocated by the rt\_heap\_alloc() service.

## **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- Interrupt service routine
- Kernel-based task
- User-space task

Rescheduling: possible.

Inquire about a heap.

Return various information about the status of a given heap.

### **Parameters**

heap	The descriptor address of the inquired heap.
info	The address of a structure the heap information will be written
	to.

### Returns

0 is returned and status information is written to the structure pointed at by *info* upon success. Otherwise:

- -EINVAL is returned if *heap* is not a message queue descriptor.
- -EIDRM is returned if *heap* is a deleted queue descriptor.

## **Environments:**

This service can be called from:

Kernel module initialization/cleanup code

- Interrupt service routine
- Kernel-based task
- User-space task

Rescheduling: never.

```
4.6.2.7 int rt_heap_unbind ( RT_HEAP * heap )
```

Unbind from a mappable heap.

This user-space only service unbinds the calling task from the heap object previously retrieved by a call to rt\_heap\_bind().

Unbinding from a heap when it is no longer needed is especially important in order to properly release the mapping resources used to attach the heap memory to the caller's address space.

### **Parameters**

heap The address of a heap descriptor to unbind from.

### Returns

0 is always returned.

This service can be called from:

· User-space task.

Rescheduling: never.

### **Examples:**

shared\_mem.c.

# 4.7 Interrupt management services.

Collaboration diagram for Interrupt management services.:



## **Files**

file intr.c

This file is part of the Xenomai project.

### **Functions**

int rt\_intr\_create (RT\_INTR \*intr, const char \*name, unsigned irq, rt\_isr\_t isr, rt\_iack\_t iack, int mode)

Create an interrupt object from kernel space.

int rt\_intr\_delete (RT\_INTR \*intr)

Delete an interrupt object.

• int rt\_intr\_enable (RT\_INTR \*intr)

Enable an interrupt object.

• int rt\_intr\_disable (RT\_INTR \*intr)

Disable an interrupt object.

• int rt\_intr\_inquire (RT\_INTR \*intr, RT\_INTR\_INFO \*info)

Inquire about an interrupt object.

 int rt\_intr\_create (RT\_INTR \*intr, const char \*name, unsigned irq, int mode)

Create an interrupt object from user-space.

int rt\_intr\_wait (RT\_INTR \*intr, RTIME timeout)

Wait for the next interrupt.

• int rt\_intr\_bind (RT\_INTR \*intr, const char \*name, RTIME timeout)

Bind to an interrupt object.

• static int rt\_intr\_unbind (RT\_INTR \*intr)

Unbind from an interrupt object.

#### 4.7.1 Function Documentation

4.7.1.1 int rt\_intr\_bind ( RT\_INTR \* intr, const char \* name, RTIME timeout )

Bind to an interrupt object.

This user-space only service retrieves the uniform descriptor of a given - Xenomai interrupt object identified by its IRQ number. If the object does not exist on entry, this service blocks the caller until an interrupt object of the given number is created. An interrupt is registered whenever a kernel-space task invokes the rt intr create() service successfully for the given IRQ line.

#### **Parameters**

intr	The address of an interrupt object descriptor retrieved by the
	operation. Contents of this memory is undefined upon failure.
name	An ASCII string standing for the symbolic name of the interrupt
	object to search for.
timeout	The number of clock ticks to wait for the registration to occur
	(see note). Passing TM_INFINITE causes the caller to block
	indefinitely until the object is registered. Passing TM_NONBL-
	OCK causes the service to return immediately without waiting if
	the object is not registered on entry.

#### Returns

0 is returned upon success. Otherwise:

- -EFAULT is returned if intr is referencing invalid memory.
- -EINVAL is returned if irq is invalid.
- -EINTR is returned if rt\_task\_unblock() has been called for the waiting task before the retrieval has completed.
- -EWOULDBLOCK is returned if *timeout* is equal to TM\_NONBLOCK and the searched object is not registered on entry.
- -ETIMEDOUT is returned if the object cannot be retrieved within the specified amount of time.
- -EPERM is returned if this service should block, but was called from a context which cannot sleep (e.g. interrupt, non-realtime context).

## **Environments:**

This service can be called from:

• User-space task (switches to primary mode)

Rescheduling: always unless the request is immediately satisfied or *timeout* specifies a non-blocking operation.

#### Note

The *timeout* value will be interpreted as jiffies if the native skin is bound to a periodic time base (see CONFIG\_XENO\_OPT\_NATIVE\_PERIOD), or nanoseconds otherwise.

4.7.1.2 int rt\_intr\_create ( RT\_INTR \* intr, const char \* name, unsigned irq, int mode )

Create an interrupt object from user-space.

Initializes and associates an interrupt object with an IRQ line from a user-space application. In this mode, the basic principle is to define some interrupt server task which routinely waits for the next incoming IRQ event through the rt\_intr\_wait() syscall.

When an interrupt occurs on the given *irq* line, any task pending on the interrupt object through rt\_intr\_wait() is imediately awaken in order to deal with the hardware event. The interrupt service code may then call any Xenomai service available from user-space.

#### **Parameters**

intr	The address of a interrupt object descriptor Xenomai will use to
	store the object-specific data. This descriptor must always be
	valid while the object is active therefore it must be allocated in
	permanent memory.
name	An ASCII string standing for the symbolic name of the interrupt
	object. When non-NULL and non-empty, this string is copied
	to a safe place into the descriptor, and passed to the registry
	package if enabled for indexing the created interrupt objects.
irq	The hardware interrupt channel associated with the interrupt ob-
	ject. This value is architecture-dependent.
mode	The interrupt object creation mode. The following flags can be
	OR'ed into this bitmask:

- I\_NOAUTOENA asks Xenomai not to re-enable the IRQ line before awakening the interrupt server task. This flag is functionally equivalent as always returning RT\_INTR\_NOENABLE from a kernel space interrupt handler.
- I\_PROPAGATE asks Xenomai to propagate the IRQ down the pipeline; in other words, the interrupt occurrence is chained to Linux after it has been processed by the Xenomai task. This flag is functionally equivalent as always returning RT\_INTR\_PROPAGATE from a kernel space interrupt handler.

#### Returns

0 is returned upon success. Otherwise:

- -ENOMEM is returned if the system fails to get enough dynamic memory from the global real-time heap in order to register the interrupt object.
- -EBUSY is returned if the interrupt line is already in use by another interrupt object. Only a single interrupt object can be associated to any given interrupt line using rt\_intr\_create() at any time, regardless of the caller's execution space (kernel or user).

#### **Environments:**

This service can be called from:

User-space task

Rescheduling: possible.

#### Note

The interrupt source associated to the interrupt descriptor remains masked upon creation. rt\_intr\_enable() should be called for the new interrupt object to unmask it.

### **Examples:**

```
user_irq.c.
```

4.7.1.3 int rt\_intr\_create ( RT\_INTR \* intr, const char \* name, unsigned irq, rt\_isr\_t isr, rt\_iack\_t iack, int mode )

Create an interrupt object from kernel space.

Initializes and associates an interrupt object with an IRQ line. In kernel space, interrupts are immediately notified to a user-defined handler or ISR (interrupt service routine).

When an interrupt occurs on the given *irq* line, the ISR is fired in order to deal with the hardware event. The interrupt service code may call any non-suspensive Xenomai service.

Upon receipt of an IRQ, the ISR is immediately called on behalf of the interrupted stack context, the rescheduling procedure is locked, and the interrupt source is masked at hardware level. The status value returned by the ISR is then checked for the following values:

 RT\_INTR\_HANDLED indicates that the interrupt request has been fulfilled by the ISR.  RT\_INTR\_NONE indicates the opposite to RT\_INTR\_HANDLED. The -ISR must always return this value when it determines that the interrupt request has not been issued by the dedicated hardware device.

In addition, one of the following bits may be set by the ISR:

NOTE: use these bits with care and only when you do understand their effect on the system. The ISR is not encouraged to use these bits in case it shares the IRQ line with other ISRs in the real-time domain.

- RT\_INTR\_NOENABLE asks Xenomai not to re-enable the IRQ line upon return of the interrupt service routine.
- RT\_INTR\_PROPAGATE tells Xenomai to require the real-time control layer to forward the IRQ. For instance, this would cause the Adeos control layer to propagate the interrupt down the interrupt pipeline to other Adeos domains, such as Linux. This is the regular way to share interrupts between Xenomai and the Linux kernel. In effect, RT\_INTR\_PRO-PAGATE implies RT\_INTR\_NOENABLE since it would make no sense to re-enable the interrupt channel before the next domain down the pipeline has had a chance to process the propagated interrupt.

A count of interrupt receipts is tracked into the interrupt descriptor, and reset to zero each time the interrupt object is attached. Since this count could wrap around, it should be used as an indication of interrupt activity only.

### **Parameters**

intr	The address of a interrupt object descriptor Xenomai will use to
	store the object-specific data. This descriptor must always be
	valid while the object is active therefore it must be allocated in
	permanent memory.
name	An ASCII string standing for the symbolic name of the interrupt
	object. When non-NULL and non-empty, this string is copied
	to a safe place into the descriptor, and passed to the registry
	package if enabled for indexing the created interrupt objects.
irq	The hardware interrupt channel associated with the interrupt ob-
	ject. This value is architecture-dependent.
isr	The address of a valid interrupt service routine in kernel space.
	This handler will be called each time the corresponding IRQ is
	delivered on behalf of an interrupt context. A pointer to an in-
	ternal information is passed to the routine which can use it to
	retrieve the descriptor address of the associated interrupt object
	through the I_DESC() macro.
iack	The address of an optional interrupt acknowledge routine, aimed
	at replacing the default one. Only very specific situations actu-
	ally require to override the default setting for this parameter, like
	having to acknowledge non-standard PIC hardware. iack should
	return a non-zero value to indicate that the interrupt has been
	properly acknowledged. If <i>iack</i> is NULL, the default routine will
	be used instead.

Generated on Thu Aug 2 2012 09:31:36 for Xenomai Native skin API by Doxygen

mode	The interrupt object creation mode. The following flags can be
	OR'ed into this bitmask, each of them affecting the new interrupt
	object:

- I\_SHARED enables IRQ-sharing with other interrupt objects.
- I\_EDGE is an additional flag need to be set together with I\_SHARED to enable IRQ-sharing of edge-triggered interrupts.

0 is returned upon success. Otherwise:

- -ENOMEM is returned if the system fails to get enough dynamic memory from the global real-time heap in order to register the interrupt object.
- -EBUSY is returned if the interrupt line is already in use by another interrupt object. Only a single interrupt object can be associated to any given interrupt line using rt intr create() at any time.
- -EEXIST is returned if *irq* is already associated to an existing interrupt object.
- -EPERM is returned if this service was called from an asynchronous context.

## Environments:

This service can be called from:

- Kernel module initialization/cleanup code
- Kernel-based task
- User-space task (note that in user-space the interface is different, see rt\_intr\_create())

Rescheduling: possible.

### Note

The interrupt source associated to the interrupt descriptor remains masked upon creation. rt\_intr\_enable() should be called for the new interrupt object to unmask it.

References rt intr delete().

4.7.1.4 int rt\_intr\_delete ( RT\_INTR \* intr )

Delete an interrupt object.

Destroys an interrupt object. An interrupt exists in the system since rt\_intr\_create() has been called to create it, so this service must be called in order to destroy it afterwards.

Any user-space task which might be currently pending on the interrupt object through the rt\_intr\_wait() service will be awaken as a result of the deletion, and return with the -EIDRM status.

#### **Parameters**

intr The descriptor address of the affected interrupt object.

#### Returns

0 is returned upon success. Otherwise:

- -EINVAL is returned if intr is not a valid interrupt object descriptor.
- -EIDRM is returned if *intr* is a deleted interrupt object descriptor.
- -EPERM is returned if this service was called from an asynchronous context.

### **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- Kernel-based task
- User-space task

Rescheduling: possible.

Referenced by rt\_intr\_create().

4.7.1.5 int rt intr disable (RT\_INTR \* intr)

Disable an interrupt object.

Disables the hardware interrupt line associated with an interrupt object. This operation invalidates further interrupt requests from the given source until the IRQ line is re-enabled anew through rt\_intr\_enable().

### **Parameters**

*intr* The descriptor address of the interrupt object to enable.

Generated on Thu Aug 2 2012 09:31:36 for Xenomai Native skin API by Doxygen

0 is returned upon success. Otherwise:

- -EINVAL is returned if intr is not a interrupt object descriptor.
- -EIDRM is returned if *intr* is a deleted interrupt object descriptor.

### **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- Kernel-based task
- User-space task

Rescheduling: never.

4.7.1.6 int rt\_intr\_enable ( RT\_INTR \* intr )

Enable an interrupt object.

Enables the hardware interrupt line associated with an interrupt object. Over Adeos-based systems which mask and acknowledge IRQs upon receipt, this operation is necessary to revalidate the interrupt channel so that more interrupts from the same source can be notified.

## Parameters

intr The descriptor address of the interrupt object to enable.

### Returns

0 is returned upon success. Otherwise:

- -EINVAL is returned if intr is not a interrupt object descriptor.
- -EIDRM is returned if *intr* is a deleted interrupt object descriptor.

## Environments:

This service can be called from:

- Kernel module initialization/cleanup code
- Kernel-based task
- · User-space task

Rescheduling: never.

4.7.1.7 int rt\_intr\_inquire ( RT\_INTR \* intr, RT\_INTR\_INFO \* info )

Inquire about an interrupt object.

Return various information about the status of a given interrupt object.

#### **Parameters**

intr	The descriptor address of the inquired interrupt object.
info	The address of a structure the interrupt object information will be
	written to.

### Returns

0 is returned and status information is written to the structure pointed at by *info* upon success. Otherwise:

- -EINVAL is returned if *intr* is not a interrupt object descriptor.
- -EIDRM is returned if intr is a deleted interrupt object descriptor.

### **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- Interrupt service routine
- Kernel-based task
- User-space task

Rescheduling: never.

```
4.7.1.8 intrt_intr_unbind(RT_INTR * intr) [inline, static]
```

Unbind from an interrupt object.

This user-space only service unbinds the calling task from the interrupt object previously retrieved by a call to rt\_intr\_bind().

#### **Parameters**

intr   The address of a interrupt object descriptor to unbind from.
---

0 is always returned.

This service can be called from:

· User-space task.

Rescheduling: never.

4.7.1.9 int rt\_intr\_wait ( RT\_INTR \* intr, RTIME timeout )

Wait for the next interrupt.

This user-space only call allows the current task to suspend execution until the associated interrupt event triggers. The priority of the current task is raised above all other Xenomai tasks - except those also undergoing an interrupt or alarm wait (see <a href="rt\_alarm\_wait()">rt\_alarm\_wait()</a>) - so that it would preempt any of them under normal circumstances (i.e. no scheduler lock).

Interrupt receipts are logged if they cannot be delivered immediately to some interrupt server task, so that a call to rt\_intr\_wait() might return immediately if an IRQ is already pending on entry of the service.

### **Parameters**

intr	The descriptor address of the awaited interrupt.
timeout	The number of clock ticks to wait for an interrupt to occur (see
	note). Passing TM_INFINITE causes the caller to block indef-
	initely until an interrupt triggers. Passing TM_NONBLOCK is
	invalid.

## Returns

A positive value is returned upon success, representing the number of pending interrupts to process. Otherwise:

- -ETIMEDOUT is returned if no interrupt occurred within the specified amount of time.
- -EINVAL is returned if *intr* is not an interrupt object descriptor, or *timeout* is equal to TM\_NONBLOCK.
- -EIDRM is returned if *intr* is a deleted interrupt object descriptor, including if the deletion occurred while the caller was waiting for its next interrupt.
- -EINTR is returned if rt\_task\_unblock() has been called for the current task before the next interrupt occurrence.

## **Environments:**

This service can be called from:

User-space task

Rescheduling: always, unless an interrupt is already pending on entry.

### Note


The *timeout* value will be interpreted as jiffies if the native skin is bound to a periodic time base (see CONFIG\_XENO\_OPT\_NATIVE\_PERIOD), or nanoseconds otherwise.

## Examples:

user\_irq.c.

# 4.8 Native Xenomai API.

Collaboration diagram for Native Xenomai API.:

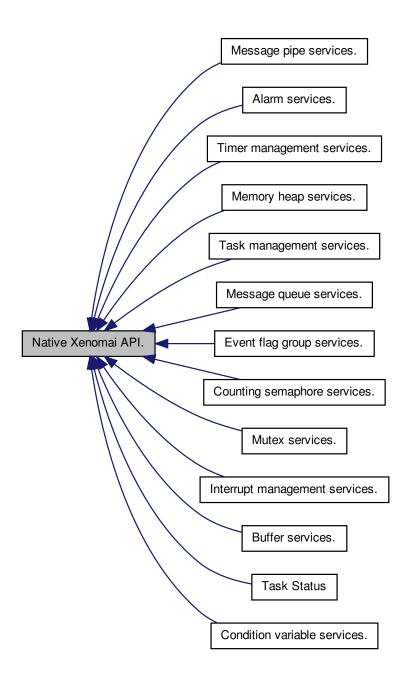

## **Modules**

• Task Status

Defines used to specify task state and/or mode.


- Alarm services.
- Buffer services.
- Condition variable services.
- Event flag group services.
- Memory heap services.
- Interrupt management services.
- Mutex services.
- Message pipe services.
- Message queue services.
- Counting semaphore services.
- Task management services.
- Timer management services.

## 4.8.1 Detailed Description

The native Xenomai programming interface available to real-time applications. This API is built over the abstract RTOS core implemented by the Xenomai nucleus.

## 4.9 Mutex services.

Collaboration diagram for Mutex services.:

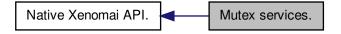

## **Files**

• file mutex.c

This file is part of the Xenomai project.

## **Functions**

- int rt\_mutex\_create (RT\_MUTEX \*mutex, const char \*name)

  Create a mutex.
- int rt\_mutex\_delete (RT\_MUTEX \*mutex)

Delete a mutex.

• int rt\_mutex\_acquire (RT\_MUTEX \*mutex, RTIME timeout)

Acquire a mutex.

• int rt\_mutex\_acquire\_until (RT\_MUTEX \*mutex, RTIME timeout)

Acquire a mutex (with absolute timeout date).

• int rt\_mutex\_release (RT\_MUTEX \*mutex)

Unlock mutex.

• int rt\_mutex\_inquire (RT\_MUTEX \*mutex, RT\_MUTEX\_INFO \*info)

Inquire about a mutex.

 int rt\_mutex\_bind (RT\_MUTEX \*mutex, const char \*name, RTIME timeout)

Bind to a mutex.

• static int rt\_mutex\_unbind (RT\_MUTEX \*mutex)

Unbind from a mutex.

## 4.9.1 Detailed Description

### Mutex services.

A mutex is a MUTual EXclusion object, and is useful for protecting shared data structures from concurrent modifications, and implementing critical sections and monitors.

A mutex has two possible states: unlocked (not owned by any task), and locked (owned by one task). A mutex can never be owned by two different tasks simultaneously. A task attempting to lock a mutex that is already locked by another task is blocked until the latter unlocks the mutex first.

Xenomai mutex services enforce a priority inheritance protocol in order to solve priority inversions.

### 4.9.2 Function Documentation

4.9.2.1 int rt\_mutex\_acquire ( RT\_MUTEX \* mutex, RTIME timeout )

## Acquire a mutex.

Attempt to lock a mutex. The calling task is blocked until the mutex is available, in which case it is locked again before this service returns. Mutexes have an ownership property, which means that their current owner is tracked. Xenomai mutexes are implicitly recursive and implement the priority inheritance protocol.

Since a nested locking count is maintained for the current owner, rt\_mutex\_acquire{\_until}() and rt\_mutex\_release() must be used in pairs.

Tasks pend on mutexes by priority order.

### **Parameters**

mutex	The descriptor address of the mutex to acquire.
timeout	The number of clock ticks to wait for the mutex to be available
	to the calling task (see note). Passing TM_INFINITE causes the
	caller to block indefinitely until the mutex is available. Passing
	TM_NONBLOCK causes the service to return immediately with-
	out waiting if the mutex is still locked by another task.

### Returns

0 is returned upon success. Otherwise:

- -EINVAL is returned if *mutex* is not a mutex descriptor.
- -EIDRM is returned if *mutex* is a deleted mutex descriptor, including if the deletion occurred while the caller was sleeping on it.

- -EWOULDBLOCK is returned if *timeout* is equal to TM\_NONBLOCK and the mutex is not immediately available.
- -EINTR is returned if rt\_task\_unblock() has been called for the waiting task before the mutex has become available.
- -ETIMEDOUT is returned if the mutex cannot be made available to the calling task within the specified amount of time.
- -EPERM is returned if this service was called from a context which cannot be given the ownership of the mutex (e.g. interrupt, non-realtime context).

#### **Environments:**

This service can be called from:

- Kernel-based task
- User-space task (switches to primary mode)

Rescheduling: always unless the request is immediately satisfied or *timeout* specifies a non-blocking operation. If the caller is blocked, the current owner's priority might be temporarily raised as a consequence of the priority inheritance protocol.

## Note

The *timeout* value will be interpreted as jiffies if the native skin is bound to a periodic time base (see CONFIG\_XENO\_OPT\_NATIVE\_PERIOD), or nanoseconds otherwise.

4.9.2.2 int rt\_mutex\_acquire\_until ( RT\_MUTEX \* mutex, RTIME timeout )

Acquire a mutex (with absolute timeout date).

Attempt to lock a mutex. The calling task is blocked until the mutex is available, in which case it is locked again before this service returns. Mutexes have an ownership property, which means that their current owner is tracked. Xenomai mutexes are implicitly recursive and implement the priority inheritance protocol.

Since a nested locking count is maintained for the current owner, rt\_mutex\_acquire{\_until}() and rt\_mutex\_release() must be used in pairs.

Tasks pend on mutexes by priority order.

## **Parameters**

mutex	The descriptor address of the mutex to acquire.
timeout	The absolute date specifying a time limit to wait for the mutex to
	be available to the calling task (see note).

Generated on Thu Aug 2 2012 09:31:36 for Xenomai Native skin API by Doxygen

0 is returned upon success. Otherwise:

- -EINVAL is returned if *mutex* is not a mutex descriptor.
- -EIDRM is returned if mutex is a deleted mutex descriptor, including if the deletion occurred while the caller was sleeping on it.
- -EWOULDBLOCK is returned if *timeout* is equal to TM\_NONBLOCK and the mutex is not immediately available.
- -EINTR is returned if rt\_task\_unblock() has been called for the waiting task before the mutex has become available.
- -ETIMEDOUT is returned if the mutex cannot be made available to the calling task until the absolute timeout date is reached.
- -EPERM is returned if this service was called from a context which cannot be given the ownership of the mutex (e.g. interrupt, non-realtime context).

#### **Environments:**

This service can be called from:

- Kernel-based task
- User-space task (switches to primary mode)

Rescheduling: always unless the request is immediately satisfied or *timeout* specifies a non-blocking operation. If the caller is blocked, the current owner's priority might be temporarily raised as a consequence of the priority inheritance protocol.

### Note

The *timeout* value will be interpreted as jiffies if the native skin is bound to a periodic time base (see CONFIG\_XENO\_OPT\_NATIVE\_PERIOD), or nanoseconds otherwise.

4.9.2.3 int rt\_mutex\_bind ( RT\_MUTEX \* mutex, const char \* name, RTIME timeout )

## Bind to a mutex.

This user-space only service retrieves the uniform descriptor of a given - Xenomai mutex identified by its symbolic name. If the mutex does not exist on entry, this service blocks the caller until a mutex of the given name is created.

#### **Parameters**

name	A valid NULL-terminated name which identifies the mutex to bind
	to.
mutex	The address of a mutex descriptor retrieved by the operation.
	Contents of this memory is undefined upon failure.
timeout	The number of clock ticks to wait for the registration to occur
	(see note). Passing TM_INFINITE causes the caller to block
	indefinitely until the object is registered. Passing TM_NONBL-
	OCK causes the service to return immediately without waiting if
	the object is not registered on entry.

0 is returned upon success. Otherwise:

- -EFAULT is returned if mutex or name is referencing invalid memory.
- -EINTR is returned if rt\_task\_unblock() has been called for the waiting task before the retrieval has completed.
- -EWOULDBLOCK is returned if *timeout* is equal to TM\_NONBLOCK and the searched object is not registered on entry.
- -ETIMEDOUT is returned if the object cannot be retrieved within the specified amount of time.
- -EPERM is returned if this service should block, but was called from a context which cannot sleep (e.g. interrupt, non-realtime context).

## **Environments:**

This service can be called from:

• User-space task (switches to primary mode)

Rescheduling: always unless the request is immediately satisfied or *timeout* specifies a non-blocking operation.

#### Note

The *timeout* value will be interpreted as jiffies if the native skin is bound to a periodic time base (see CONFIG\_XENO\_OPT\_NATIVE\_PERIOD), or nanoseconds otherwise.

4.9.2.4 int  $rt_mutex_create$  (  $RT_MUTEX * mutex$ , const char \* name )

### Create a mutex.

Create a mutual exclusion object that allows multiple tasks to synchronize access to a shared resource. A mutex is left in an unlocked state after creation.

#### **Parameters**

mutex	The address of a mutex descriptor Xenomai will use to store the mutex-related data. This descriptor must always be valid while the mutex is active therefore it must be allocated in permanent memory.
name	An ASCII string standing for the symbolic name of the mutex. When non-NULL and non-empty, this string is copied to a safe place into the descriptor, and passed to the registry package if enabled for indexing the created mutex.

### **Returns**

0 is returned upon success. Otherwise:

- -ENOMEM is returned if the system fails to get enough dynamic memory from the global real-time heap in order to register the mutex.
- -EEXIST is returned if the name is already in use by some registered object.
- -EPERM is returned if this service was called from an asynchronous context.

## Environments:

This service can be called from:

- Kernel module initialization/cleanup code
- Kernel-based task
- User-space task

Rescheduling: possible.

4.9.2.5 int rt\_mutex\_delete ( RT\_MUTEX \* mutex )

## Delete a mutex.

Destroy a mutex and release all the tasks currently pending on it. A mutex exists in the system since rt\_mutex\_create() has been called to create it, so this service must be called in order to destroy it afterwards.

## **Parameters**

mutex The descriptor address of the affected mutex.	
---	--

0 is returned upon success. Otherwise:

- -EINVAL is returned if *mutex* is not a mutex descriptor.
- -EIDRM is returned if *mutex* is a deleted mutex descriptor.
- -EPERM is returned if this service was called from an asynchronous context.

## **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- Kernel-based task
- User-space task

Rescheduling: possible.

```
4.9.2.6 int rt_mutex_inquire ( RT_MUTEX * mutex, RT_MUTEX_INFO * info )
```

Inquire about a mutex.

Return various information about the status of a given mutex.

### **Parameters**

mutex	The descriptor address of the inquired mutex.
info	The address of a structure the mutex information will be written
	to.

## Returns

0 is returned and status information is written to the structure pointed at by *info* upon success. Otherwise:

- -EINVAL is returned if *mutex* is not a mutex descriptor.
- -EIDRM is returned if *mutex* is a deleted mutex descriptor.

## **Environments:**

This service can be called from:

Kernel module initialization/cleanup code

- Interrupt service routine
- Kernel-based task
- User-space task

Rescheduling: never.

References rt\_mutex\_info::locked, rt\_mutex\_info::name, rt\_mutex\_info::nwaiters, and rt\_mutex\_info::owner.

```
4.9.2.7 int rt mutex release ( RT_MUTEX * mutex )
```

Unlock mutex.

Release a mutex. If the mutex is pended, the first waiting task (by priority order) is immediately unblocked and transfered the ownership of the mutex; otherwise, the mutex is left in an unlocked state.

#### **Parameters**

mutex | The descriptor address of the released mutex.

### Returns

0 is returned upon success. Otherwise:

- -EINVAL is returned if *mutex* is not a mutex descriptor.
- -EIDRM is returned if *mutex* is a deleted mutex descriptor.
- -EPERM is returned if mutex is not owned by the current task, or more generally if this service was called from a context which cannot own any mutex (e.g. interrupt, or non-realtime context).

## **Environments:**

This service can be called from:

- Kernel-based task
- User-space task (switches to primary mode)

Rescheduling: possible.

```
4.9.2.8 intrt_mutex_unbind(RT_MUTEX * mutex) [inline, static]
```

Unbind from a mutex.

This user-space only service unbinds the calling task from the mutex object previously retrieved by a call to rt\_mutex\_bind().

## **Parameters**

mutex The address of a mutex descriptor to unbind from.

## Returns

0 is always returned.

This service can be called from:

• User-space task.

Rescheduling: never.

# 4.10 Message pipe services.

Collaboration diagram for Message pipe services.:



### **Files**

• file pipe.c

This file is part of the Xenomai project.

### **Functions**

int rt\_pipe\_create (RT\_PIPE \*pipe, const char \*name, int minor, size\_t poolsize)

Create a message pipe.

• int rt\_pipe\_delete (RT\_PIPE \*pipe)

Delete a message pipe.

ssize\_t rt\_pipe\_receive (RT\_PIPE \*pipe, RT\_PIPE\_MSG \*\*msgp, RTIME timeout)

Receive a message from a pipe.

 ssize\_t rt\_pipe\_read (RT\_PIPE \*pipe, void \*buf, size\_t size, RTIME timeout)

Read a message from a pipe.

ssize\_t rt\_pipe\_send (RT\_PIPE \*pipe, RT\_PIPE\_MSG \*msg, size\_t size, int mode)

Send a message through a pipe.

ssize\_t rt\_pipe\_write (RT\_PIPE \*pipe, const void \*buf, size\_t size, int mode)

Write a message to a pipe.

- ssize\_t rt\_pipe\_stream (RT\_PIPE \*pipe, const void \*buf, size\_t size)

  Stream bytes to a pipe.
- RT\_PIPE\_MSG \* rt\_pipe\_alloc (RT\_PIPE \*pipe, size\_t size)

Allocate a message pipe buffer.

int rt\_pipe\_free (RT\_PIPE \*pipe, RT\_PIPE\_MSG \*msg)

Free a message pipe buffer.

• int rt pipe flush (RT PIPE \*pipe, int mode)

Flush the i/o queues associated with the kernel endpoint of a message pipe.

• int rt\_pipe\_monitor (RT\_PIPE \*pipe, int(\*fn)(RT\_PIPE \*pipe, int event, long arg))

Monitor a message pipe asynchronously.

### 4.10.1 Detailed Description

Message pipe services.

A message pipe is a two-way communication channel between Xenomai tasks and standard Linux processes using regular file I/O operations on a pseudo-device. Pipes can be operated in a message-oriented fashion so that message boundaries are preserved, and also in byte streaming mode from real-time to standard Linux processes for optimal throughput.

Xenomai tasks open their side of the pipe using the rt\_pipe\_create() service; standard Linux processes do the same by opening one of the /dev/rtpN special devices, where N is the minor number agreed upon between both ends of each pipe. Additionally, named pipes are available through the registry support, which automatically creates a symbolic link from entries under /proc/xenomai/registry/native/pipes/ to the corresponding special device file.

## 4.10.2 Function Documentation

4.10.2.1 RT\_PIPE\_MSG\* rt\_pipe\_alloc ( RT\_PIPE \* pipe, size\_t size )

Allocate a message pipe buffer.

This service allocates a message buffer from the pipe's heap which can be subsequently filled by the caller then passed to <a href="rt\_pipe\_send">rt\_pipe\_send</a>() for sending. - The beginning of the available data area of <a href="size">size</a> contiguous bytes is accessible from P MSGPTR(msg).

### **Parameters**

pipe	The descriptor address of the affected pipe.
size	The requested size in bytes of the buffer. This value should rep-
	resent the size of the payload data.

### Returns

The address of the allocated message buffer upon success, or NULL if the allocation fails.

## Environments:

This service can be called from:

Kernel module initialization/cleanup code

- Interrupt service routine
- Kernel-based task

Rescheduling: never.

Referenced by rt pipe write().

4.10.2.2 int rt\_pipe\_create ( RT\_PIPE \* pipe, const char \* name, int minor, size\_t poolsize )

Create a message pipe.

This service opens a bi-directional communication channel allowing data exchange between Xenomai tasks and standard Linux processes. Pipes natively preserve message boundaries, but can also be used in byte stream mode from Xenomai tasks to standard Linux processes.

rt\_pipe\_create() always returns immediately, even if no Linux process has opened the associated special device file yet. On the contrary, the non real-time side could block upon attempt to open the special device file until rt\_pipe\_create() is issued on the same pipe from a Xenomai task, unless O\_NONBL-OCK has been specified to the open(2) system call.

#### **Parameters**

pipe	The address of a pipe descriptor Xenomai will use to store the pipe-related data. This descriptor must always be valid while the pipe is active therefore it must be allocated in permanent memory.
name	An ASCII string standing for the symbolic name of the message pipe. When non-NULL and non-empty, this string is copied to a safe place into the descriptor, and passed to the registry package if enabled for indexing the created pipe.

Named pipes are supported through the use of the registry. When the registry support is enabled, passing a valid *name* parameter when creating a message pipe subsequently allows standard Linux processes to follow a symbolic link from /proc/xenomai/registry/pipes/*name* in order to reach the associated special device (i.e. /dev/rtp\*), so that the specific *minor* information does not need to be known from those processes for opening the proper device file. In such a case, both sides of the pipe only need to agree upon a symbolic name to refer to the same data path, which is especially useful whenever the *minor* number is picked up dynamically using an adaptive algorithm, such as passing P\_MINOR\_AUTO as *minor* value.

#### **Parameters**

minor	The minor number of the device associated with the pipe Passing P_MINOR_AUTO causes the minor number to be auto-allocated. In such a case, the <i>name</i> parameter must be valid so that user-space processes may subsequently follow the symbolic link that will be automatically created from /proc/xeno-mai/registry/pipes/name to the allocated pipe device entry (i.e. /dev/rtp*).
poolsize	Specifies the size of a dedicated buffer pool for the pipe. Passing
, some	0 means that all message allocations for this pipe are performed on the system heap.

#### Returns

0 is returned upon success. Otherwise:

- -ENOMEM is returned if the system fails to get enough dynamic memory from the global real-time heap in order to register the pipe, or if not enough memory could be obtained from the selected buffer pool for allocating the internal streaming buffer.
- -EEXIST is returned if the *name* is already in use by some registered object.
- -ENODEV is returned if *minor* is different from P\_MINOR\_AUTO and is not a valid minor number for the pipe special device either (i.e. /dev/rtp\*).
- -EBUSY is returned if *minor* is already open.
- -EPERM is returned if this service was called from an asynchronous context.

#### **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- Kernel-based task
- User-space task

Rescheduling: possible.

References rt pipe delete().

4.10.2.3 int rt\_pipe\_delete ( RT\_PIPE \* pipe )

Delete a message pipe.

This service deletes a pipe previously created by rt\_pipe\_create(). Data pending for transmission to non real-time processes are lost.

### **Parameters**

pipe	The descriptor address of the affected pipe.

#### **Returns**

0 is returned upon success. Otherwise:

- -EINVAL is returned if pipe is not a pipe descriptor.
- -EIDRM is returned if *pipe* is a closed pipe descriptor.
- -ENODEV or -EBADF can be returned if pipe is scrambled.
- -EPERM is returned if this service was called from an asynchronous context.

## **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- Kernel-based task
- User-space task

Rescheduling: possible.

Referenced by rt\_pipe\_create().

4.10.2.4 int rt\_pipe\_flush ( RT\_PIPE \* pipe, int mode )

Flush the i/o queues associated with the kernel endpoint of a message pipe.

This service flushes all data pending for consumption by the remote side in user-space for the given message pipe. Upon success, no data remains to be read from the remote side of the connection.

#### **Parameters**

	The descriptor address of the pipe to flush.
mode	A mask indicating which queues need to be flushed; the follow-
	ing flags may be combined in a single flush request:

Generated on Thu Aug 2 2012 09:31:36 for Xenomai Native skin API by Doxygen

- XNPIPE\_OFLUSH causes the output queue to be flushed (i.e. unread data sent from the real-time endpoint in kernel-space to the non real-time endpoint in user-space will be discarded). This is equivalent to calling ioctl(pipefd, XNPIPEIOC\_OFLUSH, 0) from user-space.
- XNPIPE\_IFLUSH causes the input queue to be flushed (i.e. unread data sent from the non real-time endpoint in user-space to the real-time endpoint in kernel-space will be discarded). This is equivalent to calling ioctl(pipefd, XNPIPEIOC\_IFLUSH, 0) from user-space.

Zero is returned upon success. Otherwise:

- -EINVAL is returned if *pipe* is not a pipe descriptor.
- -EIDRM is returned if *pipe* is a closed pipe descriptor.
- -ENODEV or -EBADF are returned if pipe is scrambled.

### **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- Interrupt service routine
- Kernel-based task

Rescheduling: never.

4.10.2.5 int rt\_pipe\_free ( RT\_PIPE \* pipe, RT\_PIPE\_MSG \* msg )

Free a message pipe buffer.

This service releases a message buffer returned by rt\_pipe\_receive() to the pipe's heap.

### **Parameters**

	The descriptor address of the affected pipe.
msg	The address of the message buffer to free.

### Returns

0 is returned upon success, or -EINVAL if *msg* is not a valid message buffer previously allocated by the rt\_pipe\_alloc() service.

#### **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- · Interrupt service routine
- Kernel-based task

Rescheduling: never.

Referenced by rt\_pipe\_read(), and rt\_pipe\_write().

```
4.10.2.6 int rt_pipe_monitor ( RT_PIPE * pipe, int(*)(RT_PIPE *pipe, int event, long arg) fn
)
```

Monitor a message pipe asynchronously.

This service registers a notifier callback that will be called upon specific events occurring on the channel. <a href="rt\_pipe\_monitor">rt\_pipe\_monitor</a>() is particularly useful to monitor a channel asynchronously while performing other tasks.

#### **Parameters**

pipe	The descriptor address of the pipe to monitor.
fn	The notification handler. This user-provided routine will be
	passed the address of the message pipe descriptor receiving the
	event, the event code, and an optional argument. Four events
	are currently defined:

- P\_EVENT\_INPUT is sent when the user-space endpoint writes to the pipe, which means that some input is pending for the kernel-based endpoint. The argument is the size of the incoming message.
- P\_EVENT\_OUTPUT is sent when the user-space endpoint successfully reads a complete buffer from the pipe. The argument is the size of the outgoing message.
- P\_EVENT\_CLOSE is sent when the user-space endpoint is closed. The argument is always 0.
- P\_EVENT\_NOBUF is sent when no memory is available from the kernel
  pool to hold the message currently sent from the user-space endpoint.
  The argument is the size of the failed allocation. Upon return from the
  handler, the caller will block and retry until enough space is available
  from the pool; during that process, the handler might be called multiple
  times, each time a new attempt to get the required memory fails.

The P\_EVENT\_INPUT and P\_EVENT\_OUTPUT events are fired on behalf of a fully atomic context; therefore, care must be taken to keep their overhead low.

In those cases, the Xenomai services that may be called from the handler are restricted to the set allowed to a real-time interrupt handler.

### Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if pipe is not a pipe descriptor.
- -EIDRM is returned if *pipe* is a closed pipe descriptor.
- -ENODEV or -EBADF are returned if pipe is scrambled.

#### **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- Kernel-based task

Rescheduling: never.

```
4.10.2.7 ssize_t rt_pipe_read ( RT_PIPE * pipe, void * buf, size_t size, RTIME timeout )
```

Read a message from a pipe.

This service retrieves the next message written to the associated special device in user-space. rt\_pipe\_read() always preserves message boundaries, which means that all data sent through the same write(2) operation to the special device will be gathered in a single message by this service. This services differs from rt\_pipe\_receive() in that it copies back the payload data to a user-defined memory area, instead of returning a pointer to the internal message buffer holding such data.

Unless otherwise specified, the caller is blocked for a given amount of time if no data is immediately available on entry.

## **Parameters**

pipe	The descriptor address of the pipe to read from.
buf	A pointer to a memory location which will be written upon suc-
	cess with the read message contents.
size	The count of bytes from the received message to read up into buf. If size is lower than the actual message size, -ENOBUFS is returned since the incompletely received message would be lost. If size is zero, this call returns immediately with no other action.
timeout	The number of clock ticks to wait for some message to arrive (see note). Passing TM_INFINITE causes the caller to block indefinitely until some data is eventually available. Passing TMNQNBLQCK 所知場象 持身 经对证金额 人名西班尔斯斯 电影响 对于 waiting if no data is available on entry.

The number of read bytes copied to the *buf* is returned upon success. Otherwise:

- 0 is returned if the peer closed the channel while rt\_pipe\_read() was reading from it. There is no way to distinguish this situation from an empty message return using rt\_pipe\_read(). One should rather call rt\_pipe\_receive() whenever this information is required.
- -EINVAL is returned if pipe is not a pipe descriptor.
- -EIDRM is returned if *pipe* is a closed pipe descriptor.
- -ENODEV or -EBADF are returned if pipe is scrambled.
- -ETIMEDOUT is returned if timeout is different from TM\_NONBLOCK and no data is available within the specified amount of time.
- -EWOULDBLOCK is returned if timeout is equal to TM\_NONBLOCK and no data is immediately available on entry.
- -EINTR is returned if rt\_task\_unblock() has been called for the waiting task before any data was available.
- -EPERM is returned if this service should block, but was called from a context which cannot sleep (e.g. interrupt, non-realtime context).
- -ENOBUFS is returned if *size* is not large enough to collect the message data.

### Environments:

This service can be called from:

- Kernel module initialization/cleanup code
- Interrupt service routine only if timeout is equal to TM\_NONBLOCK.
- Kernel-based task
- User-space task (switches to primary mode)

Rescheduling: always unless the request is immediately satisfied or *timeout* specifies a non-blocking operation.

### Note

The *timeout* value will be interpreted as jiffies if the native skin is bound to a periodic time base (see CONFIG\_XENO\_OPT\_NATIVE\_PERIOD), or nanoseconds otherwise.

References rt pipe free(), and rt pipe receive().

4.10.2.8 ssize\_t rt\_pipe\_receive ( RT\_PIPE \* pipe, RT\_PIPE\_MSG \*\* msgp, RTIME timeout )

Receive a message from a pipe.

This service retrieves the next message written to the associated special device in user-space. rt\_pipe\_receive() always preserves message boundaries, which means that all data sent through the same write(2) operation to the special device will be gathered in a single message by this service. This service differs from rt\_pipe\_read() in that it returns a pointer to the internal buffer holding the message, which improves performances by saving a data copy to a user-provided buffer, especially when large messages are involved.

Unless otherwise specified, the caller is blocked for a given amount of time if no data is immediately available on entry.

#### **Parameters**

pipe	The descriptor address of the pipe to receive from.
msgp	A pointer to a memory location which will be written upon suc-
	cess with the address of the received message. Once con-
	sumed, the message space should be freed using rt_pipe
	free(). The application code can retrieve the actual data and size
	carried by the message by respectively using the P_MSGPTR()
	and P_MSGSIZE() macros. *msgp is set to NULL and zero is
	returned to the caller, in case the peer closed the channel while
	rt_pipe_receive() was reading from it.
timeout	The number of clock ticks to wait for some message to arrive
	(see note). Passing TM_INFINITE causes the caller to block
	indefinitely until some data is eventually available. Passing TM-
	_NONBLOCK causes the service to return immediately without
	waiting if no data is available on entry.

## Returns

The number of read bytes available from the received message is returned upon success; this value will be equal to P MSGSIZE(\*msgp). Otherwise:

- 0 is returned and \*msgp is set to NULL if the peer closed the channel while rt\_pipe\_receive() was reading from it. This is to be distinguished from an empty message return, where \*msgp points to a valid - albeit empty - message block (i.e. P\_MSGSIZE(\*msgp) == 0).
- -EINVAL is returned if *pipe* is not a pipe descriptor.
- -ENODEV or -EBADF are returned if pipe is scrambled.
- -ETIMEDOUT is returned if *timeout* is different from TM\_NONBLOCK and no data is available within the specified amount of time.

- -EWOULDBLOCK is returned if timeout is equal to TM\_NONBLOCK and no data is immediately available on entry.
- -EINTR is returned if rt\_task\_unblock() has been called for the waiting task before any data was available.
- -EPERM is returned if this service should block, but was called from a context which cannot sleep (e.g. interrupt, non-realtime context).

#### **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- Interrupt service routine only if timeout is equal to TM\_NONBLOCK.
- Kernel-based task

Rescheduling: always unless the request is immediately satisfied or *timeout* specifies a non-blocking operation.

### Note

The *timeout* value will be interpreted as jiffies if the native skin is bound to a periodic time base (see CONFIG\_XENO\_OPT\_NATIVE\_PERIOD), or nanoseconds otherwise.

Referenced by rt pipe read().

```
4.10.2.9 ssize_t rt_pipe_send ( RT_PIPE * pipe, RT_PIPE_MSG * msg, size_t size, int mode )
```

Send a message through a pipe.

This service writes a complete message to be received from the associated special device. rt\_pipe\_send() always preserves message boundaries, which means that all data sent through a single call of this service will be gathered in a single read(2) operation from the special device. This service differs from rt\_pipe\_write() in that it accepts a canned message buffer, instead of a pointer to the raw data to be sent. This call is useful whenever the caller wants to prepare the message contents separately from its sending, which does not require to have all the data to be sent available at once but allows for incremental updates of the message, and also saves a message copy, since rt\_pipe\_send() deals internally with message buffers.

### **Parameters**

!	The descriptor address of the visc to soul to
pipe	The descriptor address of the pipe to send to.
msg	The address of the message to be sent. The message space
	must have been allocated using the rt_pipe_alloc() service
	Once passed to rt_pipe_send(), the memory pointed to by <i>msg</i>
	is no more under the control of the application code and thus
	should not be referenced by it anymore; deallocation of this
	memory will be automatically handled as needed. As a spe-
	cial exception, <i>msg</i> can be NULL and will not be dereferenced if
	size is zero.
size	The size in bytes of the message (payload data only). Zero is a
	valid value, in which case the service returns immediately with-
	out sending any message. This parameter allows you to actually
	send less data than you reserved using the rt_pipe_alloc() ser-
	vice, which may be the case if you did not know how much space
	you needed at the time of allocation. In all other cases it may be
	more convenient to just pass P_MSGSIZE(msg).
mode	A set of flags affecting the operation:

- P\_URGENT causes the message to be prepended to the output queue, ensuring a LIFO ordering.
- P\_NORMAL causes the message to be appended to the output queue, ensuring a FIFO ordering.

## Returns

Upon success, this service returns *size*. Upon error, one of the following error codes is returned:

- -EINVAL is returned if *pipe* is not a pipe descriptor.
- -EIDRM is returned if *pipe* is a closed pipe descriptor.
- -ENODEV or -EBADF are returned if pipe is scrambled.

## **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- Interrupt service routine
- Kernel-based task

Rescheduling: possible.

#### Note

Writing data to a pipe before any peer has opened the associated special device is allowed. The output will be buffered until then, only restricted by the available memory in the relevant buffer pool (see rt\_pipe\_create()).

Referenced by rt\_pipe\_write().

```
4.10.2.10 ssize_t rt_pipe_stream ( RT_PIPE * pipe, const void * buf, size_t size )
```

Stream bytes to a pipe.

This service writes a sequence of bytes to be received from the associated special device. Unlike rt\_pipe\_send(), this service does not preserve message boundaries. Instead, an internal buffer is filled on the fly with the data, which will be consumed as soon as the receiver wakes up.

Data buffers sent by the rt\_pipe\_stream() service are always transmitted in FIFO order (i.e. P NORMAL mode).

#### **Parameters**

pipe	The descriptor address of the pipe to write to.
buf	The address of the first data byte to send. The data will be
	copied to an internal buffer before transmission.
size	The size in bytes of the buffer. Zero is a valid value, in which
	case the service returns immediately without buffering any data.

### **Returns**

The number of bytes sent upon success; this value may be lower than *size*, depending on the available space in the internal buffer. Otherwise:

- -EINVAL is returned if pipe is not a pipe descriptor.
- -EIDRM is returned if *pipe* is a closed pipe descriptor.
- -ENODEV or -EBADF are returned if pipe is scrambled.
- -ENOSYS is returned if the byte streaming mode has been disabled at configuration time by nullifying the size of the pipe buffer (see CONFIG\_-XENO\_OPT\_NATIVE\_PIPE\_BUFSZ).

## **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- Interrupt service routine

- · Kernel-based task
- User-space task

Rescheduling: possible.

#### Note

Writing data to a pipe before any peer has opened the associated special device is allowed. The output will be buffered until then, only restricted by the available memory in the relevant buffer pool (see rt\_pipe\_create()).

4.10.2.11 ssize\_t rt\_pipe\_write ( RT\_PIPE \* pipe, const void \* buf, size\_t size, int mode )

Write a message to a pipe.

This service writes a complete message to be received from the associated special device. rt\_pipe\_write() always preserves message boundaries, which means that all data sent through a single call of this service will be gathered in a single read(2) operation from the special device. This service differs from rt\_pipe\_send() in that it accepts a pointer to the raw data to be sent, instead of a canned message buffer. This call is useful whenever the caller does not need to prepare the message contents separately from its sending.

## **Parameters**

pipe	The descriptor address of the pipe to write to.
buf	The address of the first data byte to send. The data will be
	copied to an internal buffer before transmission.
size	The size in bytes of the message (payload data only). Zero is a valid value, in which case the service returns immediately with-
	out sending any message.
mode	A set of flags affecting the operation:

- P\_URGENT causes the message to be prepended to the output queue, ensuring a LIFO ordering.
- P\_NORMAL causes the message to be appended to the output queue, ensuring a FIFO ordering.

#### Returns

Upon success, this service returns *size*. Upon error, one of the following error codes is returned:

- -EINVAL is returned if *pipe* is not a pipe descriptor.
- -ENOMEM is returned if not enough buffer space is available to complete the operation.

- -EIDRM is returned if *pipe* is a closed pipe descriptor.
- -ENODEV or -EBADF are returned if pipe is scrambled.

## **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- Interrupt service routine
- Kernel-based task
- User-space task

Rescheduling: possible.

## Note

Writing data to a pipe before any peer has opened the associated special device is allowed. The output will be buffered until then, only restricted by the available memory in the relevant buffer pool (see rt\_pipe\_create()).

References rt\_pipe\_alloc(), rt\_pipe\_free(), and rt\_pipe\_send().

# 4.11 Message queue services.

Collaboration diagram for Message queue services.:



## **Files**

• file queue.c

This file is part of the Xenomai project.

### **Functions**

 int rt\_queue\_create (RT\_QUEUE \*q, const char \*name, size\_t poolsize, size\_t qlimit, int mode)

Create a message queue.

• int rt\_queue\_delete (RT\_QUEUE \*q)

Delete a message queue.

• void \* rt\_queue\_alloc (RT\_QUEUE \*q, size\_t size)

Allocate a message queue buffer.

• int rt\_queue\_free (RT\_QUEUE \*q, void \*buf)

Free a message queue buffer.

- int rt\_queue\_send (RT\_QUEUE \*q, void \*mbuf, size\_t size, int mode) Send a message to a queue.
- int rt\_queue\_write (RT\_QUEUE \*q, const void \*buf, size\_t size, int mode)

Write a message to a queue.

- ssize\_t rt\_queue\_receive (RT\_QUEUE \*q, void \*\*bufp, RTIME timeout)

  Receive a message from a queue.
- ssize\_t rt\_queue\_receive\_until (RT\_QUEUE \*q, void \*\*bufp, RTIME timeout)

Receive a message from a queue (with absolute timeout date).

ssize\_t rt\_queue\_read (RT\_QUEUE \*q, void \*buf, size\_t size, RTIME timeout)

Read a message from a queue.

 ssize\_t rt\_queue\_read\_until (RT\_QUEUE \*q, void \*buf, size\_t size, RTI-ME timeout)

Read a message from a queue (with absolute timeout date).

• int rt queue flush (RT QUEUE \*q)

Flush a message queue.

• int rt\_queue\_inquire (RT\_QUEUE \*q, RT\_QUEUE\_INFO \*info)

Inquire about a message queue.

• int rt\_queue\_bind (RT\_QUEUE \*q, const char \*name, RTIME timeout)

Bind to a shared message queue.

• int rt queue unbind (RT QUEUE \*q)

Unbind from a shared message queue.

## 4.11.1 Detailed Description

### Queue services.

Message queueing is a method by which real-time tasks can exchange or pass data through a Xenomai-managed queue of messages. Messages can vary in length and be assigned different types or usages. A message queue can be created by one task and used by multiple tasks that send and/or receive messages to the queue.

This implementation is based on a zero-copy scheme for message buffers. - Message buffer pools are built over the nucleus's heap objects, which in turn provide the needed support for exchanging messages between kernel and user-space using direct memory mapping.

# 4.11.2 Function Documentation

4.11.2.1 void\* rt queue alloc ( RT\_QUEUE \* q, size\_t size )

Allocate a message queue buffer.

This service allocates a message buffer from the queue's internal pool which can be subsequently filled by the caller then passed to rt\_queue\_send() for sending.

#### **Parameters**

q	The descriptor address of the affected queue.
size	The requested size in bytes of the buffer. Zero is an acceptable
	value, meaning that the message will not carry any payload data;
	the receiver will thus receive a zero-sized message.

### Returns

The address of the allocated message buffer upon success, or NULL if the allocation fails.

### **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- Interrupt service routine
- Kernel-based task
- User-space task

Rescheduling: never.

Referenced by rt\_queue\_write().

4.11.2.2 int rt queue bind (RT\_QUEUE \* q, const char \* name, RTIME timeout)

Bind to a shared message queue.

This user-space only service retrieves the uniform descriptor of a given shared Xenomai message queue identified by its symbolic name. If the queue does not exist on entry, this service blocks the caller until a queue of the given name is created.

#### **Parameters**

name	A valid NULL-terminated name which identifies the queue to
	bind to.
q	The address of a queue descriptor retrieved by the operation.
	Contents of this memory is undefined upon failure.
timeout	The number of clock ticks to wait for the registration to occur
	(see note). Passing TM_INFINITE causes the caller to block
	indefinitely until the object is registered. Passing TM_NONBL-
	OCK causes the service to return immediately without waiting if
	the object is not registered on entry.

## Returns

0 is returned upon success. Otherwise:

- -EFAULT is returned if q or name is referencing invalid memory.
- -EINTR is returned if rt\_task\_unblock() has been called for the waiting task before the retrieval has completed.
- -EWOULDBLOCK is returned if timeout is equal to TM\_NONBLOCK and the searched object is not registered on entry.
- -ETIMEDOUT is returned if the object cannot be retrieved within the specified amount of time.

- -EPERM is returned if this service should block, but was called from a
  context which cannot sleep (e.g. interrupt, non-realtime context). This
  error may also be returned whenever the call attempts to bind from a
  user-space application to a local queue defined from kernel space (i.e.
  Q SHARED was not passed to rt queue create()).
- -ENOENT is returned if the special file /dev/rtheap (character-mode, major 10, minor 254) is not available from the filesystem. This device is needed to map the memory pool used by the shared queue into the caller's address space. udev-based systems should not need manual creation of such device entry.

#### Environments:

This service can be called from:

• User-space task (switches to primary mode)

Rescheduling: always unless the request is immediately satisfied or *timeout* specifies a non-blocking operation.

#### Note

The *timeout* value will be interpreted as jiffies if the native skin is bound to a periodic time base (see CONFIG\_XENO\_OPT\_NATIVE\_PERIOD), or nanoseconds otherwise.

### **Examples:**

msg\_queue.c.

4.11.2.3 int rt\_queue\_create ( RT\_QUEUE \* q, const char \* name, size\_t poolsize, size\_t qlimit, int mode )

Create a message queue.

Create a message queue object that allows multiple tasks to exchange data through the use of variable-sized messages. A message queue is created empty. Message queues can be local to the kernel space, or shared between kernel and user-space.

This service needs the special character device /dev/rtheap (10,254) when called from user-space tasks.

### **Parameters**

q The address of a queue descriptor Xenomai will use to store the queue-related data. This descriptor must always be valid while the message queue is active therefore it must be allocated in permanent memory.

name	An ASCII string standing for the symbolic name of the queue.
	When non-NULL and non-empty, this string is copied to a safe
	place into the descriptor, and passed to the registry package if
	enabled for indexing the created queue. Shared queues must
	be given a valid name.
poolsize	The size (in bytes) of the message buffer pool which is going to
	be pre-allocated to the queue. Message buffers will be claimed
	and released to this pool. The buffer pool memory is not extensi-
	ble, so this value must be compatible with the highest message
	pressure that could be expected.
qlimit	This parameter allows to limit the maximum number of mes-
	sages which can be queued at any point in time. Sending to
	a full queue begets an error. The special value Q_UNLIMITED
	can be passed to specify an unlimited amount.
mode	The queue creation mode. The following flags can be OR'ed into
	this bitmask, each of them affecting the new queue:

- Q\_FIFO makes tasks pend in FIFO order on the queue for consuming messages.
- Q\_PRIO makes tasks pend in priority order on the queue.
- Q\_SHARED causes the queue to be sharable between kernel and user-space tasks. Otherwise, the new queue is only available for kernel-based usage. This flag is implicitely set when the caller is running in user-space. This feature requires the real-time support in user-space to be configured in (CONFIG\_XENO\_OPT\_PERVASIVE).
- Q\_DMA causes the buffer pool associated to the queue to be allocated in physically contiguous memory, suitable for DMA operations with I/O devices. A 128Kb limit exists for *poolsize* when this flag is passed.

0 is returned upon success. Otherwise:

- -EEXIST is returned if the *name* is already in use by some registered object.
- -EINVAL is returned if *poolsize* is null, greater than the system limit, or *name* is null or empty for a shared queue.
- -ENOMEM is returned if not enough system memory is available to create
  or register the queue. Additionally, and if Q\_SHARED has been passed in
  mode, errors while mapping the buffer pool in the caller's address space
  might beget this return code too.

- -EPERM is returned if this service was called from an invalid context.
- -ENOSYS is returned if *mode* specifies Q\_SHARED, but the real-time support in user-space is unavailable.
- -ENOENT is returned if /dev/rtheap can't be opened.

#### **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- User-space task (switches to secondary mode)

Rescheduling: possible.

References rt\_queue\_delete().

4.11.2.4 int rt\_queue\_delete ( RT\_QUEUE \* q )

Delete a message queue.

Destroy a message queue and release all the tasks currently pending on it. A queue exists in the system since rt\_queue\_create() has been called to create it, so this service must be called in order to destroy it afterwards.

# **Parameters**

g The descriptor address of the affected queue.

### Returns

0 is returned upon success. Otherwise:

- -EINVAL is returned if q is not a message queue descriptor.
- -EIDRM is returned if *q* is a deleted queue descriptor.
- -EPERM is returned if this service was called from an asynchronous context.

# **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- User-space task (switches to secondary mode).

Rescheduling: possible.

Referenced by rt\_queue\_create().

```
4.11.2.5 int rt_queue_flush ( RT_QUEUE * q )
```

Flush a message queue.

This service discards all unread messages from a message queue.

#### **Parameters**

q The descriptor address of the affected queue.

#### Returns

The number of messages flushed is returned upon success. Otherwise:

- -EINVAL is returned if q is not a message queue descriptor.
- -EIDRM is returned if *q* is a deleted queue descriptor.

# **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- Interrupt service routine
- Kernel-based task
- User-space task

Rescheduling: never.

References rt\_queue\_free().

```
4.11.2.6 int rt_queue_free ( RT_QUEUE * q, void * buf )
```

Free a message queue buffer.

This service releases a message buffer returned by rt\_queue\_receive() to the queue's internal pool.

### **Parameters**

q	The descriptor address of the affected queue.
buf	The address of the message buffer to free. Even zero-sized
	messages carrying no payload data must be freed, since they
	are assigned a valid memory space to store internal information.

0 is returned upon success, or -EINVAL if *buf* is not a valid message buffer previously allocated by the rt\_queue\_alloc() service, or the caller did not get ownership of the message through a successful return from rt\_queue\_receive().

# **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- · Interrupt service routine
- Kernel-based task
- User-space task

Rescheduling: never.

Referenced by rt\_queue\_flush().

4.11.2.7 int rt\_queue\_inquire ( RT\_QUEUE \* q, RT\_QUEUE\_INFO \* info )

Inquire about a message queue.

Return various information about the status of a given queue.

# **Parameters**

q	The descriptor address of the inquired queue.
info	The address of a structure the queue information will be written
	to.

# Returns

0 is returned and status information is written to the structure pointed at by *info* upon success. Otherwise:

- -EINVAL is returned if q is not a message queue descriptor.
- -EIDRM is returned if q is a deleted queue descriptor.

# **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- Interrupt service routine

- · Kernel-based task
- User-space task

Rescheduling: never.

4.11.2.8 ssize\_t rt\_queue\_read ( RT\_QUEUE \* q, void \* buf, size\_t size, RTIME timeout )

Read a message from a queue.

This service retrieves the next message available from the given queue. Unless otherwise specified, the caller is blocked for a given amount of time if no message is immediately available on entry. This services differs from rt\_queue\_receive() in that it copies back the payload data to a user-defined memory area, instead of returning a pointer to the message buffer holding such data.

#### **Parameters**

	The descriptor address of the message queue to read from.
buf	A pointer to a memory area which will be written upon success
	with the message contents. The internal message buffer con-
	veying the data is automatically freed by this call.
size	The length in bytes of the memory area pointed to by buf
	Messages larger than <i>size</i> are truncated appropriately.
timeout	The number of clock ticks to wait for a message to arrive (see
	note). Passing TM_INFINITE causes the caller to block indefi-
	nitely until some message is eventually available. Passing TM-
	_NONBLOCK causes the service to return immediately without
	waiting if no message is available on entry.

#### Returns

The number of bytes available from the received message is returned upon success, which might be greater than the actual number of bytes copied to the destination buffer if the message has been truncated. Zero is a possible value corresponding to a zero-sized message passed to rt\_queue\_send() or rt\_queue\_write(). Otherwise:

- -EINVAL is returned if q is not a message queue descriptor.
- -EIDRM is returned if q is a deleted queue descriptor.
- -ETIMEDOUT is returned if *timeout* is different from TM\_NONBLOCK and no message is available within the specified amount of time.
- -EWOULDBLOCK is returned if *timeout* is equal to TM\_NONBLOCK and no message is immediately available on entry.
- -EINTR is returned if rt\_task\_unblock() has been called for the waiting task before any data was available.

• -EPERM is returned if this service should block, but was called from a context which cannot sleep (e.g. interrupt, non-realtime context).

# **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- Interrupt service routine only if timeout is equal to TM\_NONBLOCK.
- Kernel-based task
- User-space task (switches to primary mode)

Rescheduling: always unless the request is immediately satisfied or *timeout* specifies a non-blocking operation.

#### Note

The *timeout* value will be interpreted as jiffies if the native skin is bound to a periodic time base (see CONFIG\_XENO\_OPT\_NATIVE\_PERIOD), or nanoseconds otherwise.

4.11.2.9 ssize\_t rt\_queue\_read\_until ( RT\_QUEUE \* q, void \* buf, size\_t size, RTIME timeout )

Read a message from a queue (with absolute timeout date).

This service retrieves the next message available from the given queue. Unless otherwise specified, the caller is blocked for a given amount of time if no message is immediately available on entry. This services differs from rt\_queue\_receive() in that it copies back the payload data to a user-defined memory area, instead of returning a pointer to the message buffer holding such data.

# **Parameters**

q	The descriptor address of the message queue to read from.
buf	A pointer to a memory area which will be written upon success
	with the message contents. The internal message buffer con-
	veying the data is automatically freed by this call.
size	The length in bytes of the memory area pointed to by buf
	Messages larger than <i>size</i> are truncated appropriately.
timeout	The absolute date specifying a time limit to wait for a message
	to arrive (see note). Passing TM_INFINITE causes the caller
	to block indefinitely until some message is eventually available.
	Passing TM_NONBLOCK causes the service to return immedi-
	ately without waiting if no message is available on entry.

The number of bytes available from the received message is returned upon success, which might be greater than the actual number of bytes copied to the destination buffer if the message has been truncated. Zero is a possible value corresponding to a zero-sized message passed to rt\_queue\_send() or rt\_queue\_write(). Otherwise:

- -EINVAL is returned if q is not a message queue descriptor.
- -EIDRM is returned if *q* is a deleted queue descriptor.
- -ETIMEDOUT is returned if the absolute *timeout* date is reached before a message arrives.
- -EWOULDBLOCK is returned if timeout is equal to TM\_NONBLOCK and no message is immediately available on entry.
- -EINTR is returned if rt\_task\_unblock() has been called for the waiting task before any data was available.
- -EPERM is returned if this service should block, but was called from a context which cannot sleep (e.g. interrupt, non-realtime context).

# **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- Interrupt service routine only if timeout is equal to TM NONBLOCK.
- Kernel-based task
- User-space task (switches to primary mode)

Rescheduling: always unless the request is immediately satisfied or *timeout* specifies a non-blocking operation.

### Note

The *timeout* value will be interpreted as jiffies if the native skin is bound to a periodic time base (see CONFIG\_XENO\_OPT\_NATIVE\_PERIOD), or nanoseconds otherwise.

4.11.2.10 ssize\_t rt\_queue\_receive ( RT\_QUEUE \* q, void \*\* bufp, RTIME timeout )

Receive a message from a queue.

This service retrieves the next message available from the given queue. Unless otherwise specified, the caller is blocked for a given amount of time if no message is immediately available on entry.

### **Parameters**

	The descriptor address of the message queue to receive from.
bufp	A pointer to a memory location which will be written upon success with the address of the received message. Once consumed, the message space should be freed using rt_queue_free().
timeout	The number of clock ticks to wait for a message to arrive (see note). Passing TM_INFINITE causes the caller to block indefinitely until some message is eventually available. Passing TM_NONBLOCK causes the service to return immediately without waiting if no message is available on entry.

#### Returns

The number of bytes available from the received message is returned upon success. Zero is a possible value corresponding to a zero-sized message passed to rt\_queue\_send(). Otherwise:

- -EINVAL is returned if q is not a message queue descriptor.
- -EIDRM is returned if q is a deleted queue descriptor.
- -ETIMEDOUT is returned if timeout is different from TM\_NONBLOCK and no message is available within the specified amount of time.
- -EWOULDBLOCK is returned if *timeout* is equal to TM\_NONBLOCK and no message is immediately available on entry.
- -EINTR is returned if rt\_task\_unblock() has been called for the waiting task before any data was available.
- -EPERM is returned if this service should block, but was called from a context which cannot sleep (e.g. interrupt, non-realtime context).

## **Environments:**

This service can be called from:

Kernel module initialization/cleanup code

- Interrupt service routine only if *timeout* is equal to TM NONBLOCK.
- · Kernel-based task
- User-space task (switches to primary mode)

Rescheduling: always unless the request is immediately satisfied or *timeout* specifies a non-blocking operation.

#### Note

The *timeout* value will be interpreted as jiffies if the native skin is bound to a periodic time base (see CONFIG\_XENO\_OPT\_NATIVE\_PERIOD), or nanoseconds otherwise.

```
4.11.2.11 ssize_t rt_queue_receive_until ( RT_QUEUE * q, void ** bufp, RTIME timeout )
```

Receive a message from a gueue (with absolute timeout date).

This service retrieves the next message available from the given queue. Unless otherwise specified, the caller is blocked for a given amount of time if no message is immediately available on entry.

#### **Parameters**

q	The descriptor address of the message queue to receive from.
bufp	A pointer to a memory location which will be written upon success with the address of the received message. Once consumed, the message space should be freed using rt_queue_free().
timeout	The absolute date specifying a time limit to wait for a message to arrive (see note). Passing TM_INFINITE causes the caller to block indefinitely until some message is eventually available. Passing TM_NONBLOCK causes the service to return immediately without waiting if no message is available on entry.

# Returns

The number of bytes available from the received message is returned upon success. Zero is a possible value corresponding to a zero-sized message passed to rt queue send(). Otherwise:

- -EINVAL is returned if q is not a message queue descriptor.
- -EIDRM is returned if *q* is a deleted queue descriptor.
- -ETIMEDOUT is returned if the absolute *timeout* date is reached before a message arrives.

- -EWOULDBLOCK is returned if timeout is equal to TM\_NONBLOCK and no message is immediately available on entry.
- -EINTR is returned if rt\_task\_unblock() has been called for the waiting task before any data was available.
- -EPERM is returned if this service should block, but was called from a context which cannot sleep (e.g. interrupt, non-realtime context).

### **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- Interrupt service routine only if timeout is equal to TM\_NONBLOCK.
- Kernel-based task
- User-space task (switches to primary mode)

Rescheduling: always unless the request is immediately satisfied or *timeout* specifies a non-blocking operation.

### Note

The *timeout* value will be interpreted as jiffies if the native skin is bound to a periodic time base (see CONFIG\_XENO\_OPT\_NATIVE\_PERIOD), or nanoseconds otherwise.

4.11.2.12 int  $rt\_queue\_send$  ( RT\_QUEUE \* q, void \* mbuf, size\_t size, int mode )

Send a message to a queue.

This service sends a complete message to a given queue. The message must have been allocated by a previous call to rt queue alloc().

# **Parameters**

	The descriptor address of the message queue to send to.
mbuf	The address of the message buffer to be sent. The message
	buffer must have been allocated using the rt_queue_alloc() ser-
	vice. Once passed to rt_queue_send(), the memory pointed to
	by mbuf is no more under the control of the sender and thus
	should not be referenced by it anymore; deallocation of this
	memory must be handled on the receiving side.
size	The size in bytes of the message. Zero is a valid value, in which
	case an empty message will be sent.
mode	A set of flags affecting the operation:

- Q\_URGENT causes the message to be prepended to the message queue, ensuring a LIFO ordering.
- Q\_NORMAL causes the message to be appended to the message queue, ensuring a FIFO ordering.
- Q\_BROADCAST causes the message to be sent to all tasks currently waiting for messages. The message is not copied; a reference count is maintained instead so that the message will remain valid until the last receiver releases its own reference using rt\_queue\_free(), after which the message space will be returned to the queue's internal pool.

Upon success, this service returns the number of receivers which got awaken as a result of the operation. If zero is returned, no task was waiting on the receiving side of the queue, and the message has been enqueued. Upon error, one of the following error codes is returned:

- -EINVAL is returned if q is not a message queue descriptor, or mbuf is not a valid message buffer obtained from a previous call to rt\_queue\_alloc().
- -EIDRM is returned if *q* is a deleted queue descriptor.
- -ENOMEM is returned if queuing the message would exceed the limit defined for the queue at creation.

### **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- Interrupt service routine
- Kernel-based task
- User-space task

Rescheduling: possible.

Referenced by rt\_queue\_write().

```
4.11.2.13 int rt queue unbind (RT_QUEUE * q )
```

Unbind from a shared message queue.

This user-space only service unbinds the calling task from the message queue object previously retrieved by a call to rt\_queue\_bind().

Unbinding from a message queue when it is no more needed is especially important in order to properly release the mapping resources used to attach the shared queue memory to the caller's address space.

#### **Parameters**

q	The address of a queue descriptor to unbind from.

#### Returns

0 is returned upon success. Otherwise:

• -EINVAL is returned if *q* is invalid or not bound.

This service can be called from:

User-space task.

Rescheduling: never.

# Examples:

msg\_queue.c.

4.11.2.14 int rt queue write ( RT\_QUEUE \* q, const void \* buf, size\_t size, int mode )

Write a message to a queue.

This service writes a complete message to a given queue. This service differs from rt\_queue\_send() in that it accepts a pointer to the raw data to be sent, instead of a canned message buffer.

# **Parameters**

q	The descriptor address of the message queue to write to.
buf	The address of the message data to be written to the queue. A
	message buffer will be allocated internally to convey the data.
size	The size in bytes of the message data. Zero is a valid value, in
	which case an empty message will be sent.
mode	A set of flags affecting the operation:

- Q\_URGENT causes the message to be prepended to the message queue, ensuring a LIFO ordering.
- Q\_NORMAL causes the message to be appended to the message queue, ensuring a FIFO ordering.
- Q\_BROADCAST causes the message to be sent to all tasks currently waiting for messages. The message is not copied; a reference count is maintained instead so that the message will remain valid until all receivers get a copy of the message, after which the message space will be returned to the gueue's internal pool.

Upon success, this service returns the number of receivers which got awaken as a result of the operation. If zero is returned, no task was waiting on the receiving side of the queue, and the message has been enqueued. Upon error, one of the following error codes is returned:

- -EINVAL is returned if q is not a message queue descriptor.
- -EIDRM is returned if *q* is a deleted queue descriptor.
- -ENOMEM is returned if queuing the message would exceed the limit defined for the queue at creation, or if no memory can be obtained to convey the message data internally.
- -ESRCH is returned if a q represents a stale userland handle

# **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- Interrupt service routine
- · Kernel-based task
- User-space task

Rescheduling: possible.

References rt\_queue\_alloc(), and rt\_queue\_send().

# 4.12 Counting semaphore services.

Collaboration diagram for Counting semaphore services.:



# **Files**

• file sem.c

This file is part of the Xenomai project.

# **Functions**

 int rt\_sem\_create (RT\_SEM \*sem, const char \*name, unsigned long icount, int mode)

Create a counting semaphore.

• int rt\_sem\_delete (RT\_SEM \*sem)

Delete a semaphore.

• int rt\_sem\_p (RT\_SEM \*sem, RTIME timeout)

Pend on a semaphore.

• int rt\_sem\_p\_until (RT\_SEM \*sem, RTIME timeout)

Pend on a semaphore (with absolute timeout date).

• int rt\_sem\_v (RT\_SEM \*sem)

Signal a semaphore.

int rt\_sem\_broadcast (RT\_SEM \*sem)

Broadcast a semaphore.

• int rt\_sem\_inquire (RT\_SEM \*sem, RT\_SEM\_INFO \*info)

Inquire about a semaphore.

• int rt\_sem\_bind (RT\_SEM \*sem, const char \*name, RTIME timeout)

Bind to a semaphore.

• static int rt\_sem\_unbind (RT\_SEM \*sem)

Unbind from a semaphore.

# 4.12.1 Detailed Description

A counting semaphore is a synchronization object granting Xenomai tasks a concurrent access to a given number of resources maintained in an internal counter variable. The semaphore is used through the P ("Proberen", from the Dutch "test and decrement") and V ("Verhogen", increment) operations. The P operation waits for a unit to become available from the count, and the V operation releases a resource by incrementing the unit count by one.

If no more than a single resource is made available at any point in time, the semaphore enforces mutual exclusion and thus can be used to serialize access to a critical section. However, mutexes should be used instead in order to prevent priority inversions.

### 4.12.2 Function Documentation

4.12.2.1 int rt\_sem\_bind ( RT\_SEM \* sem, const char \* name, RTIME timeout )

# Bind to a semaphore.

This user-space only service retrieves the uniform descriptor of a given - Xenomai semaphore identified by its symbolic name. If the semaphore does not exist on entry, this service blocks the caller until a semaphore of the given name is created.

#### **Parameters**

name	A valid NULL-terminated name which identifies the semaphore
	to bind to.
sem	The address of a semaphore descriptor retrieved by the opera-
	tion. Contents of this memory is undefined upon failure.
timeout	The number of clock ticks to wait for the registration to occur
	(see note). Passing TM_INFINITE causes the caller to block
	indefinitely until the object is registered. Passing TM_NONBL-
	OCK causes the service to return immediately without waiting if
	the object is not registered on entry.

# Returns

0 is returned upon success. Otherwise:

- -EFAULT is returned if sem or name is referencing invalid memory.
- -EINTR is returned if rt\_task\_unblock() has been called for the waiting task before the retrieval has completed.
- -EWOULDBLOCK is returned if timeout is equal to TM\_NONBLOCK and the searched object is not registered on entry.

- -ETIMEDOUT is returned if the object cannot be retrieved within the specified amount of time.
- -EPERM is returned if this service should block, but was called from a context which cannot sleep (e.g. interrupt, non-realtime context).

### **Environments:**

This service can be called from:

• User-space task (switches to primary mode)

Rescheduling: always unless the request is immediately satisfied or *timeout* specifies a non-blocking operation.

#### Note

The *timeout* value will be interpreted as jiffies if the native skin is bound to a periodic time base (see CONFIG\_XENO\_OPT\_NATIVE\_PERIOD), or nanoseconds otherwise.

4.12.2.2 int rt sem broadcast ( RT\_SEM \* sem )

Broadcast a semaphore.

Unblock all tasks waiting on a semaphore. Awaken tasks return from rt\_sem\_p() as if the semaphore has been signaled. The semaphore count is zeroed as a result of the operation.

# **Parameters**

sem | The descriptor address of the affected semaphore.

### **Returns**

0 is returned upon success. Otherwise:

- -EINVAL is returned if sem is not a semaphore descriptor.
- -EIDRM is returned if sem is a deleted semaphore descriptor.

# **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- · Interrupt service routine

- · Kernel-based task
- User-space task

Rescheduling: possible.

4.12.2.3 int rt\_sem\_create ( RT\_SEM \* sem, const char \* name, unsigned long icount, int mode )

Create a counting semaphore.

#### **Parameters**

	The address of a semaphore descriptor Xenomai will use to store the semaphore-related data. This descriptor must always be valid while the semaphore is active therefore it must be allocated in permanent memory.
name	An ASCII string standing for the symbolic name of the semaphore. When non-NULL and non-empty, this string is copied to a safe place into the descriptor, and passed to the registry package if enabled for indexing the created semaphore.
icount	The initial value of the semaphore count.
mode	The semaphore creation mode. The following flags can be - OR'ed into this bitmask, each of them affecting the new semaphore:

- S\_FIFO makes tasks pend in FIFO order on the semaphore.
- S\_PRIO makes tasks pend in priority order on the semaphore.
- S\_PULSE causes the semaphore to behave in "pulse" mode. In this
  mode, the V (signal) operation attempts to release a single waiter each
  time it is called, but without incrementing the semaphore count if no waiter
  is pending. For this reason, the semaphore count in pulse mode remains
  zero.

# Returns

0 is returned upon success. Otherwise:

- -ENOMEM is returned if the system fails to get enough dynamic memory from the global real-time heap in order to register the semaphore.
- -EEXIST is returned if the name is already in use by some registered object.
- -EINVAL is returned if the *icount* is non-zero and *mode* specifies a pulse semaphore.

-EPERM is returned if this service was called from an asynchronous context.

#### **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- Kernel-based task
- User-space task

Rescheduling: possible.

References rt sem delete().

```
4.12.2.4 int rt sem delete ( RT_SEM * sem )
```

Delete a semaphore.

Destroy a semaphore and release all the tasks currently pending on it. A semaphore exists in the system since rt\_sem\_create() has been called to create it, so this service must be called in order to destroy it afterwards.

#### **Parameters**

sem The descriptor address of the affected semaphore.

### Returns

0 is returned upon success. Otherwise:

- -EINVAL is returned if *sem* is not a semaphore descriptor.
- -EIDRM is returned if sem is a deleted semaphore descriptor.
- -EPERM is returned if this service was called from an asynchronous context.

# **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- · Kernel-based task
- User-space task

Rescheduling: possible.

Referenced by rt sem create().

4.12.2.5 int rt\_sem\_inquire ( RT\_SEM \* sem, RT\_SEM\_INFO \* info )

Inquire about a semaphore.

Return various information about the status of a given semaphore.

#### **Parameters**

sem	The descriptor address of the inquired semaphore.
info	The address of a structure the semaphore information will be
	written to.

#### Returns

0 is returned and status information is written to the structure pointed at by *info* upon success. Otherwise:

- -EINVAL is returned if sem is not a semaphore descriptor.
- -EIDRM is returned if sem is a deleted semaphore descriptor.

# **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- Interrupt service routine
- Kernel-based task
- User-space task

Rescheduling: never.

4.12.2.6 int rt\_sem\_p ( RT\_SEM \* sem, RTIME timeout )

Pend on a semaphore.

Acquire a semaphore unit. If the semaphore value is greater than zero, it is decremented by one and the service immediately returns to the caller. - Otherwise, the caller is blocked until the semaphore is either signaled or destroyed, unless a non-blocking operation has been required.

# **Parameters**

sem	The descriptor address of the affected semaphore.
timeout	The number of clock ticks to wait for a semaphore unit to be
	available (see note). Passing TM_INFINITE causes the caller to
	block indefinitely until a unit is available. Passing TM_NONBL-
	OCK causes the service to return immediately without waiting if
	no unit is available.

Generated on Thu Aug 2 2012 09:31:36 for Xenomai Native skin API by Doxygen

0 is returned upon success. Otherwise:

- -EINVAL is returned if *sem* is not a semaphore descriptor.
- -EIDRM is returned if sem is a deleted semaphore descriptor, including
  if the deletion occurred while the caller was sleeping on it for a unit to
  become available.
- -EWOULDBLOCK is returned if timeout is equal to TM\_NONBLOCK and the semaphore value is zero.
- -EINTR is returned if rt\_task\_unblock() has been called for the waiting task before a semaphore unit has become available.
- -ETIMEDOUT is returned if no unit is available within the specified amount of time.
- -EPERM is returned if this service should block, but was called from a context which cannot sleep (e.g. interrupt, non-realtime context).

#### **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- Interrupt service routine only if timeout is equal to TM\_NONBLOCK.
- Kernel-based task
- User-space task (switches to primary mode)

Rescheduling: always unless the request is immediately satisfied or *timeout* specifies a non-blocking operation.

#### Note

The *timeout* value will be interpreted as jiffies if the native skin is bound to a periodic time base (see CONFIG\_XENO\_OPT\_NATIVE\_PERIOD), or nanoseconds otherwise.

4.12.2.7 int rt\_sem\_p\_until ( RT\_SEM \* sem, RTIME timeout )

Pend on a semaphore (with absolute timeout date).

Acquire a semaphore unit. If the semaphore value is greater than zero, it is decremented by one and the service immediately returns to the caller. - Otherwise, the caller is blocked until the semaphore is either signaled or destroyed, unless a non-blocking operation has been required.

#### **Parameters**

sem	The descriptor address of the affected semaphore.
timeout	The absolute date specifying a time limit to wait for a semaphore
	unit to be available (see note). Passing TM_INFINITE causes
	the caller to block indefinitely until a unit is available. Passing
	TM_NONBLOCK causes the service to return immediately with-
	out waiting if no unit is available.

#### Returns

0 is returned upon success. Otherwise:

- -EINVAL is returned if sem is not a semaphore descriptor.
- -EIDRM is returned if *sem* is a deleted semaphore descriptor, including if the deletion occurred while the caller was sleeping on it for a unit to become available.
- -EWOULDBLOCK is returned if *timeout* is equal to TM\_NONBLOCK and the semaphore value is zero.
- -EINTR is returned if rt\_task\_unblock() has been called for the waiting task before a semaphore unit has become available.
- -ETIMEDOUT is returned if the absolute *timeout* date is reached before a semaphore unit is available.
- -EPERM is returned if this service should block, but was called from a context which cannot sleep (e.g. interrupt, non-realtime context).

# **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- Interrupt service routine only if timeout is equal to TM\_NONBLOCK.
- · Kernel-based task
- User-space task (switches to primary mode)

Rescheduling: always unless the request is immediately satisfied or *timeout* specifies a non-blocking operation.

### Note

The *timeout* value will be interpreted as jiffies if the native skin is bound to a periodic time base (see CONFIG\_XENO\_OPT\_NATIVE\_PERIOD), or nanoseconds otherwise.

```
4.12.2.8 intrt_sem_unbind(RT_SEM * sem) [inline, static]
```

Unbind from a semaphore.

This user-space only service unbinds the calling task from the semaphore object previously retrieved by a call to rt\_sem\_bind().

#### **Parameters**

sem | The address of a semaphore descriptor to unbind from.

# **Returns**

0 is always returned.

This service can be called from:

User-space task.

Rescheduling: never.

```
4.12.2.9 int rt_sem_v ( RT_SEM * sem )
```

Signal a semaphore.

Release a semaphore unit. If the semaphore is pended, the first waiting task (by queuing order) is immediately unblocked; otherwise, the semaphore value is incremented by one.

# Parameters

sem | The descriptor address of the affected semaphore.

# Returns

0 is returned upon success. Otherwise:

- -EINVAL is returned if sem is not a semaphore descriptor.
- -EIDRM is returned if *sem* is a deleted semaphore descriptor.

# **Environments:**

This service can be called from:


- Kernel module initialization/cleanup code
- Interrupt service routine
- Kernel-based task

• User-space task

Rescheduling: possible.

# 4.13 Task management services.

Collaboration diagram for Task management services.:

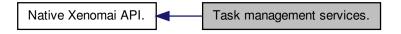

# **Files**

• file task.c

This file is part of the Xenomai project.

# **Functions**

int rt\_task\_create (RT\_TASK \*task, const char \*name, int stksize, int prio, int mode)

Create a new real-time task.

 int rt\_task\_start (RT\_TASK \*task, void(\*entry)(void \*cookie), void \*cookie)

Start a real-time task.

• int rt\_task\_suspend (RT\_TASK \*task)

Suspend a real-time task.

• int rt\_task\_resume (RT\_TASK \*task)

Resume a real-time task.

• int rt\_task\_delete (RT\_TASK \*task)

Delete a real-time task.

int rt\_task\_yield (void)

Manual round-robin.

int rt\_task\_set\_periodic (RT\_TASK \*task, RTIME idate, RTIME period)
 Make a real-time task periodic.

• int rt\_task\_wait\_period (unsigned long \*overruns\_r)

Wait for the next periodic release point.

• int rt\_task\_set\_priority (RT\_TASK \*task, int prio)

Change the base priority of a real-time task.

• int rt\_task\_sleep (RTIME delay)

Delay the calling task (relative).

• int rt task sleep until (RTIME date)

Delay the calling task (absolute).

• int rt task unblock (RT TASK \*task)

Unblock a real-time task.

• int rt\_task\_inquire (RT\_TASK \*task, RT\_TASK\_INFO \*info)

Inquire about a real-time task.

• int rt\_task\_add\_hook (int type, void(\*routine)(void \*cookie))

Install a task hook.

int rt\_task\_remove\_hook (int type, void(\*routine)(void \*cookie))

Remove a task hook.

int rt\_task\_catch (void(\*handler)(rt\_sigset\_t))

Install a signal handler.

• int rt\_task\_notify (RT\_TASK \*task, rt\_sigset\_t signals)

Send signals to a task.

int rt\_task\_set\_mode (int clrmask, int setmask, int \*mode\_r)

Change task mode bits.

RT\_TASK \* rt\_task\_self (void)

Retrieve the current task.

int rt\_task\_slice (RT\_TASK \*task, RTIME quantum)

Set a task's round-robin quantum.

ssize\_t rt\_task\_send (RT\_TASK \*task, RT\_TASK\_MCB \*mcb\_s, RT\_T-ASK\_MCB \*mcb\_r, RTIME timeout)

Send a message to a task.

• int rt task receive (RT TASK MCB \*mcb r, RTIME timeout)

Receive a message from a task.

int rt\_task\_reply (int flowid, RT\_TASK\_MCB \*mcb\_s)

Reply to a task.

static int rt\_task\_spawn (RT\_TASK \*task, const char \*name, int stksize, int prio, int mode, void(\*entry)(void \*cookie), void \*cookie)

Spawn a new real-time task.

 int rt\_task\_shadow (RT\_TASK \*task, const char \*name, int prio, int mode)

Turns the current Linux task into a native Xenomai task.

int rt\_task\_bind (RT\_TASK \*task, const char \*name, RTIME timeout)

Bind to a real-time task.

• static int rt\_task\_unbind (RT\_TASK \*task)

Unbind from a real-time task.

int rt\_task\_join (RT\_TASK \*task)

Wait on the termination of a real-time task.

int rt\_task\_same (RT\_TASK \*task1, RT\_TASK \*task2)

Compare two task descriptors.

# 4.13.1 Detailed Description

Xenomai provides a set of multitasking mechanisms. The basic process object performing actions in Xenomai is a task, a logically complete path of application code. Each Xenomai task is an independent portion of the overall application code embodied in a C procedure, which executes on its own stack context.

The Xenomai scheduler ensures that concurrent tasks are run according to one of the supported scheduling policies. Currently, the Xenomai scheduler supports fixed priority-based FIFO and round-robin policies.

## 4.13.2 Function Documentation

4.13.2.1 int rt\_task\_add\_hook ( int type, void(\*)(void \*cookie) routine )

Install a task hook.

The real-time kernel allows to register user-defined routines which get called whenever a specific scheduling event occurs. Multiple hooks can be chained for a single event type, and get called on a FIFO basis.

The scheduling is locked while a hook is executing.

#### **Parameters**

type Defines the kind of hook to install:

- T\_HOOK\_START: The user-defined routine will be called on behalf of the starter task whenever a new task starts. An opaque cookie is passed to the routine which can use it to retrieve the descriptor address of the started task through the T\_DESC() macro.
- T\_HOOK\_DELETE: The user-defined routine will be called on behalf of the deletor task whenever a task is deleted. An opaque cookie is passed to the routine which can use it to retrieve the descriptor address of the deleted task through the T\_DESC() macro.
- T\_HOOK\_SWITCH: The user-defined routine will be called on behalf of the resuming task whenever a context switch takes place. An opaque cookie is passed to the routine which can use it to retrieve the descriptor address of the task which has been switched in through the T\_DESC() macro.

# **Parameters**

routine	The address of the user-supplied routine to call.
---------	---

0 is returned upon success. Otherwise, one of the following error codes indicates the cause of the failure:

- -EINVAL is returned if *type* is incorrect.
- -ENOMEM is returned if not enough memory is available from the system heap to add the new hook.

#### **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- Interrupt service routine
- Kernel-based task

Rescheduling: never.

4.13.2.2 int rt\_task\_bind ( RT\_TASK \* task, const char \* name, RTIME timeout )

Bind to a real-time task.

This user-space only service retrieves the uniform descriptor of a given - Xenomai task identified by its symbolic name. If the task does not exist on entry, this service blocks the caller until a task of the given name is created.

# **Parameters**

name	A valid NULL-terminated name which identifies the task to bind
	to.
task	The address of a task descriptor retrieved by the operation
	Contents of this memory is undefined upon failure.
timeout	The number of clock ticks to wait for the registration to occur
	(see note). Passing TM_INFINITE causes the caller to block
	indefinitely until the object is registered. Passing TM_NONBL-
	OCK causes the service to return immediately without waiting if
	the object is not registered on entry.

### Returns

0 is returned upon success. Otherwise:

- -EFAULT is returned if task or name is referencing invalid memory.
- -EINTR is returned if rt\_task\_unblock() has been called for the waiting task before the retrieval has completed.

- -EWOULDBLOCK is returned if *timeout* is equal to TM\_NONBLOCK and the searched object is not registered on entry.
- -ETIMEDOUT is returned if the object cannot be retrieved within the specified amount of time.
- -EPERM is returned if this service should block, but was called from a context which cannot sleep (e.g. interrupt, non-realtime context).

#### **Environments:**

This service can be called from:

• User-space task (switches to primary mode)

Rescheduling: always unless the request is immediately satisfied or *timeout* specifies a non-blocking operation.

#### Note

The *timeout* value will be interpreted as jiffies if the native skin is bound to a periodic time base (see CONFIG\_XENO\_OPT\_NATIVE\_PERIOD), or nanoseconds otherwise.

# Examples:

bound task.c.

4.13.2.3 int rt\_task\_catch ( void(\*)(rt\_sigset\_t) handler )

Install a signal handler.

This service installs a signal handler for the current task. Signals are discrete events tasks can receive each time they resume execution. When signals are pending upon resumption, *handler* is fired to process them. Signals can be sent using rt\_task\_notify(). A task can block the signal delivery by passing the T\_NOSIG bit to rt\_task\_set\_mode().

Calling this service implicitely unblocks the signal delivery for the caller.

## **Parameters**

handler	The address of the user-supplied routine to fire when signals are
	pending for the task. This handler is passed the set of pending
	signals as its first and only argument.

0 upon success, or:

 -EPERM is returned if this service was not called from a real-time task context.

# **Environments:**

This service can be called from:

· Kernel-based task

Rescheduling: possible.

4.13.2.4 int rt\_task\_create ( RT\_TASK \* task, const char \* name, int stksize, int prio, int mode )

Create a new real-time task.

Creates a real-time task, either running in a kernel module or in user-space depending on the caller's context.

# **Parameters**

task	The address of a task descriptor Xenomai will use to store the
	task-related data. This descriptor must always be valid while
	the task is active therefore it must be allocated in permanent
	memory.

The task is left in an innocuous state until it is actually started by rt\_task\_start().

# **Parameters**

name	An ASCII string standing for the symbolic name of the task
	When non-NULL and non-empty, this string is copied to a safe
	place into the descriptor, and passed to the registry package if
	enabled for indexing the created task.
stksize	The size of the stack (in bytes) for the new task. If zero is passed,
	a reasonable pre-defined size will be substituted.
prio	The base priority of the new task. This value must range from [0
	99] (inclusive) where 0 is the lowest effective priority.
mode	The task creation mode. The following flags can be OR'ed into
	this bitmask, each of them affecting the new task:

- T\_FPU allows the task to use the FPU whenever available on the platform. This flag is forced for user-space tasks.
- T SUSP causes the task to start in suspended mode. In such a case,

the thread will have to be explicitly resumed using the rt\_task\_resume() service for its execution to actually begin.

- T\_CPU(cpuid) makes the new task affine to CPU # cpuid. CPU identifiers range from 0 to RTHAL NR CPUS 1 (inclusive).
- T\_JOINABLE (user-space only) allows another task to wait on the termination of the new task. This implies that rt\_task\_join() is actually called for this task to clean up any user-space located resources after its termination.

Passing T\_FPU|T\_CPU(1) in the *mode* parameter thus creates a task with FPU support enabled and which will be affine to CPU #1.

#### Returns

0 is returned upon success. Otherwise:

- -ENOMEM is returned if the system fails to get enough dynamic memory from the global real-time heap in order to create or register the task.
- -EEXIST is returned if the name is already in use by some registered object.
- -EPERM is returned if this service was called from an asynchronous context.

# **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- Kernel-based task
- User-space task

Rescheduling: possible.

Note

When creating or shadowing a Xenomai thread for the first time in user-space, Xenomai installs a handler for the SIGWINCH signal. If you had installed a handler before that, it will be automatically called by Xenomai for SIGWINCH signals that it has not sent.

If, however, you install a signal handler for SIGWINCH after creating or shadowing the first Xenomai thread, you have to explicitly call the function xenosigwinch handler at the beginning of your signal handler, using its return to

know if the signal was in fact an internal signal of Xenomai (in which case it returns 1), or if you should handle the signal (in which case it returns 0). xeno\_sigwinch\_handler prototype is:

# int xeno\_sigwinch\_handler(int sig, siginfo\_t \*si, void \*ctxt);

Which means that you should register your handler with sigaction, using the SA\_SIGINFO flag, and pass all the arguments you received to xeno\_sigwinch-handler.

Referenced by rt\_task\_spawn().

```
4.13.2.5 int rt_task_delete ( RT_TASK * task )
```

Delete a real-time task.

Terminate a task and release all the real-time kernel resources it currently holds. A task exists in the system since rt\_task\_create() has been called to create it, so this service must be called in order to destroy it afterwards.

Native tasks implement a mechanism by which they are immune from deletion by other tasks while they run into a deemed safe section of code. This feature is used internally by the native skin in order to prevent tasks from being deleted in the middle of a critical section, without resorting to interrupt masking when the latter is not an option. For this reason, the caller of rt\_task\_delete() might be blocked and a rescheduling take place, waiting for the target task to exit such critical section.

The DELETE hooks are called on behalf of the calling context (if any). The information stored in the task control block remains valid until all hooks have been called.

### **Parameters**

task	The descriptor address of the affected task. If task is NULL, the	1
	current task is deleted.	

# Returns

0 is returned upon success. Otherwise:

- -EINVAL is returned if task is not a task descriptor.
- -EPERM is returned if *task* is NULL but not called from a task context, or this service was called from an asynchronous context.
- -EINTR is returned if rt\_task\_unblock() has been invoked for the caller while it was waiting for task to exit a safe section. In such a case, the deletion process has been aborted and task remains unaffected.
- -EIDRM is returned if *task* is a deleted task descriptor.

# **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code only if task is non-NULL.
- Kernel-based task
- Any user-space context (conforming call)

Rescheduling: always if *task* is NULL, and possible if the deleted task is currently running into a safe section.

# Note

A task that was successfully joined via rt\_task\_join() must not be explicitly deleted afterwards. However, invoking rt\_task\_join() remains mandatory for every joinable task even after calling rt\_task\_delete().

References rt\_task\_self().

```
4.13.2.6 int rt_task_inquire ( RT_TASK * task, RT_TASK_INFO * info )
```

Inquire about a real-time task.

Return various information about the status of a given task.

#### **Parameters**

task	The descriptor address of the inquired task. If task is NULL, the
	current task is inquired.
info	The address of a structure the task information will be written to.
	Passing NULL is valid, in which case the system is only probed
	for existence of the specified task.

# **Returns**

0 is returned if the task exists, and status information is written to the structure pointed at by *info* if non-NULL. Otherwise:

- -EINVAL is returned if task is not a task descriptor.
- -EPERM is returned if task is NULL but not called from a task context.
- -EIDRM is returned if *task* is a deleted task descriptor.

# **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- Interrupt service routine only if task is non-NULL.
- Kernel-based task
- User-space task

Rescheduling: never.

References rt\_task\_info::bprio, rt\_task\_info::cprio, rt\_task\_info::ctxswitches, rt\_task\_info::exectime, rt\_task\_info::modeswitches, rt\_task\_info::name, rt\_task\_info::pagefaults, rt\_task\_info::relpoint, and rt\_task\_info::status.

```
4.13.2.7 int rt task join (RT_TASK * task )
```

Wait on the termination of a real-time task.

This user-space only service blocks the caller in non-real-time context until *task* has terminated. All real-time kernel resources are released after successful completion of this service. Note that the specified task must have been created by the same process that wants to join it, and the T\_JOINABLE mode flag must have been set on creation.

#### **Parameters**

task The address of a task descriptor to join.

# Returns

0 is returned upon success. Otherwise:

- -EINVAL is returned if the task was not created with T\_JOINABLE set or some other task is already waiting on the termination.
- -EDEADLK is returned if task refers to the caller.
- -ESRCH is returned if task no longer exists or refers to task created by a different process.

This service can be called from:

User-space task.

Rescheduling: always unless the task was already terminated.

#### Note

After successful completion of this service it is neither required nor valid to additionally invoke rt\_task\_delete() on the same task.

4.13.2.8 int rt\_task\_notify ( RT\_TASK \* task, rt\_sigset\_t signals )

Send signals to a task.

This service sends a set of signals to a given task. A task can install a signal handler using the rt\_task\_catch() service to process them.

#### **Parameters**

task	The descriptor address of the affected task which must have
	been previously created by the rt_task_create() service.
signals	The set of signals to make pending for the task. This set is O-
	R'ed with the current set of pending signals for the task; there
	is no count of occurence maintained for each available signal,
	which is either pending or cleared.

#### **Returns**

0 is returned upon success. Otherwise:

- -EINVAL is returned if task is not a task descriptor.
- -EPERM is returned if task is NULL but not called from a real-time task context.
- -EIDRM is returned if task is a deleted task descriptor.
- -ESRCH is returned if task has not set any signal handler.

### **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- Interrupt service routine only if task is non-NULL.
- Kernel-based task
- User-space task

Rescheduling: possible.

```
4.13.2.9 int rt_task_receive ( RT_TASK_MCB * mcb_r, RTIME timeout )
```

Receive a message from a task.

This service is part of the synchronous message passing support available to Xenomai tasks. It allows the caller to receive a variable-sized message

sent from another task using the rt\_task\_send() service. The sending task is blocked until the caller invokes rt\_task\_reply() to finish the transaction.

A basic message control block is used to store the location and size of the data area to receive from the client, in addition to a user-defined operation code.

# **Parameters**

mcb_r	The address of a message control block referring to the receive
	message area. The fields from this control block should be set
	as follows:

- mcb\_r->data should contain the address of a buffer large enough to collect the data sent by the remote task;
- mcb\_r->size should contain the size in bytes of the buffer space pointed at by mcb\_r->data. If mcb\_r->size is lower than the actual size of the received message, no data copy takes place and -ENOBUFS is returned to the caller. See note.

Upon return, mcb\_r->opcode will contain the operation code sent from the remote task using rt\_task\_send().

### **Parameters**

timeout	The number of clock ticks to wait for receiving a message (see
	note). Passing TM_INFINITE causes the caller to block indefi-
	nitely until a remote task eventually sends a message. Passing
	TM_NONBLOCK causes the service to return immediately with-
	out waiting if no remote task is currently waiting for sending a
	message.

### Returns

A strictly positive value is returned upon success, representing a flow identifier for the opening transaction; this token should be passed to rt\_task\_reply(), in order to send back a reply to and unblock the remote task appropriately. Otherwise:

- -ENOBUFS is returned if *mcb\_r* does not point at a message area large enough to collect the remote task's message.
- -EWOULDBLOCK is returned if timeout is equal to TM\_NONBLOCK and no remote task is currently waiting for sending a message to the caller.
- -ETIMEDOUT is returned if no message was received within the *timeout*.
- -EINTR is returned if rt\_task\_unblock() has been called for the caller before any message was available.

• -EPERM is returned if this service was called from a context which cannot sleep (e.g. interrupt, non-realtime or scheduler locked).

# **Environments:**

This service can be called from:

- Kernel-based task
- User-space task (switches to primary mode)

Rescheduling: Always.

# Note

The *timeout* value will be interpreted as jiffies if the native skin is bound to a periodic time base (see CONFIG\_XENO\_OPT\_NATIVE\_PERIOD), or nanoseconds otherwise.

When called from a user-space task, this service may need to allocate some temporary buffer space from the system heap to hold the received data if the size of the latter exceeds a certain amount; the threshold before allocation is currently set to 64 bytes.

References rt task mcb::data, rt task mcb::opcode, and rt task mcb::size.

4.13.2.10 int rt\_task\_remove\_hook ( int type, void(\*)(void \*cookie) routine )

Remove a task hook.

This service allows to remove a task hook previously registered using rt\_task-\_add\_hook().

# **Parameters**

type Defines the kind of hook to uninstall. Possible values are:

- T\_HOOK\_START
- T HOOK DELETE
- T\_HOOK\_SWITCH

routine	The address of the user-supplied routine to remove from the
	hook list.

0 is returned upon success. Otherwise, one of the following error codes indicates the cause of the failure:

• -EINVAL is returned if type is incorrect.

# **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- Interrupt service routine
- Kernel-based task

Rescheduling: never.

```
4.13.2.11 int rt_task_reply ( int flowid, RT_TASK_MCB * mcb_s )
```

# Reply to a task.

This service is part of the synchronous message passing support available to Xenomai tasks. It allows the caller to send back a variable-sized message to the client task, once the initial message from this task has been pulled using rt\_task\_receive() and processed. As a consequence of this call, the remote task will be unblocked from the rt\_task\_send() service.

A basic message control block is used to store the location and size of the data area to send back, in addition to a user-defined status code.

flowid	The flow identifier returned by a previous call to rt_task_receive()
	which uniquely identifies the current transaction.
mcb_s	The address of an optional message control block referring to
	the message to be sent back. If mcb_s is NULL, the client will
	be unblocked without getting any reply data. When mcb_s is
	valid, the fields from this control block should be set as follows:

- mcb\_s->data should contain the address of the payload data to send to the remote task.
- mcb\_s->size should contain the size in bytes of the payload data pointed at by mcb\_s->data. 0 is a legitimate value, and indicates that no payload data will be transferred. In the latter case, mcb\_s->data will be ignored. See note.
- mcb\_s->opcode is an opaque status code carried during the message transfer the caller can fill with any appropriate value. It will be made

available "as is" to the remote task into the status code field by the rt\_task\_send() service. If mcb\_s is NULL, 0 will be returned to the client into the status code field.

#### Returns

Zero is returned upon success. Otherwise:

- -EINVAL is returned if flowid is invalid.
- -ENXIO is returned if flowid does not match the expected identifier returned from the latest call of the current task to rt\_task\_receive(), or if the remote task stopped waiting for the reply in the meantime (e.g. the client could have been deleted or forcibly unblocked).
- -EPERM is returned if this service was called from an invalid context (e.g. interrupt, or non-primary).

#### **Environments:**

This service can be called from:

- Kernel-based task
- User-space task (switches to primary mode)

Rescheduling: Always.

Note

When called from a user-space task, this service may need to allocate some temporary buffer space from the system heap to hold the reply data if the size of the latter exceeds a certain amount; the threshold before allocation is currently set to 64 bytes.

References rt\_task\_mcb::data, rt\_task\_mcb::opcode, and rt\_task\_mcb::size.

```
4.13.2.12 int rt_task_resume ( RT_TASK * task )
```

Resume a real-time task.

Forcibly resume the execution of a task which has been previously suspended by a call to rt\_task\_suspend().

The suspension nesting count is decremented so that rt\_task\_resume() will only resume the task if this count falls down to zero as a result of the current invocation.

task The descriptor address of the affected task	
--	--

0 is returned upon success. Otherwise:

- -EINVAL is returned if task is not a task descriptor.
- -EIDRM is returned if task is a deleted task descriptor.

# **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- Interrupt service routine
- Kernel-based task
- User-space task

Rescheduling: possible if the suspension nesting level falls down to zero as a result of the current invocation.

```
4.13.2.13 int rt_task_same ( RT_TASK * task1, RT_TASK * task2 )
```

Compare two task descriptors.

This service checks whether two task descriptors refer to the same task. - This service is particularly useful in user-space, since rt\_task\_self() does return a task descriptor which is different from the original descriptor used by the application, but still refers to the same task internally.

# **Parameters**

task1	The address of the first task descriptor to compare.
task2	The address of the second task descriptor to compare.

# Returns

non-zero whenever the two task descriptors refer to the same task, zero otherwise.

This service can be called from:

- · Kernel-based task.
- User-space task.

Rescheduling: never.

```
4.13.2.14 RT_TASK* rt_task_self ( void )
```

Retrieve the current task.

Return the current task descriptor address.

# Returns

The address of the caller's task descriptor is returned upon success, or NULL if the calling context is asynchronous (i.e. not a Xenomai task).

# **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- Interrupt service routine Those will cause a NULL return.
- Kernel-based task
- User-space task

Rescheduling: never.

Referenced by rt\_task\_delete().

```
4.13.2.15 ssize_t rt_task_send ( RT_TASK * task, RT_TASK_MCB * mcb_s, RT_TASK_MCB * mcb_r, RTIME timeout )
```

Send a message to a task.

This service is part of the synchronous message passing support available to Xenomai tasks. It allows the caller to send a variable-sized message to another task, waiting for the remote to receive the initial message by a call to rt\_task\_receive(), then reply to it using rt\_task\_reply().

A basic message control block is used to store the location and size of the data area to send or retrieve upon reply, in addition to a user-defined operation code.

# **Parameters**


	task	The descriptor address of the recipient task.
I	mcb_s	The address of the message control block referring to the mes-
		sage to be sent. The fields from this control block should be set
		as follows:

• mcb s->data should contain the address of the payload data to send to

the remote task.

- mcb\_s->size should contain the size in bytes of the payload data pointed at by mcb\_s->data. 0 is a legitimate value, and indicates that no payload data will be transferred. In the latter case, mcb\_s->data will be ignored. See note.
- mcb\_s->opcode is an opaque operation code carried during the message transfer the caller can fill with any appropriate value. It will be made available "as is" to the remote task into the operation code field by the rt task receive() service.

#### **Parameters**

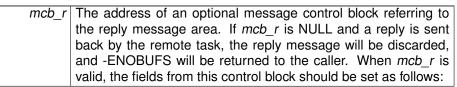

- mcb\_r->data should contain the address of a buffer large enough to collect the reply data from the remote task.
- mcb\_r->size should contain the size in bytes of the buffer space pointed at by mcb\_r->data. If mcb\_r->size is lower than the actual size of the reply message, no data copy takes place and -ENOBUFS is returned to the caller. See note.

Upon return, mcb\_r->opcode will contain the status code sent back from the remote task using rt\_task\_reply(), or 0 if unspecified.

# **Parameters**

timeout	The number of clock ticks to wait for the remote task to reply to
	the initial message (see note). Passing TM_INFINITE causes
	the caller to block indefinitely until the remote task eventually
	replies. Passing TM_NONBLOCK causes the service to return
	immediately without waiting if the remote task is not waiting for
	messages (i.e. if task is not currently blocked on the rt_task
	receive() service); however, the caller will wait indefinitely for a
	reply from that remote task if present.

#### Returns

A positive value is returned upon success, representing the length (in bytes) of the reply message returned by the remote task. 0 is a success status, meaning either that  $mcb\_r$  was NULL on entry, or that no actual message was passed to the remote call to  $rt\_task\_reply()$ . Otherwise:

- -ENOBUFS is returned if mcb\_r does not point at a message area large enough to collect the remote task's reply. This includes the case where mcb\_r is NULL on entry albeit the remote task attempts to send a reply message.
- -EWOULDBLOCK is returned if *timeout* is equal to TM\_NONBLOCK and *task* is not currently blocked on the rt\_task\_receive() service.
- -EIDRM is returned if *task* has been deleted while waiting for a reply.
- -EINTR is returned if rt\_task\_unblock() has been called for the caller before any reply was available.
- -EPERM is returned if this service should block, but was called from a context which cannot sleep (e.g. interrupt, non-realtime context).
- -ESRCH is returned if task cannot be found (when called from user-space only).

#### **Environments:**

This service can be called from:

- Kernel-based task
- User-space task (switches to primary mode)

Rescheduling: Always.

Note

The *timeout* value will be interpreted as jiffies if the native skin is bound to a periodic time base (see CONFIG\_XENO\_OPT\_NATIVE\_PERIOD), or nanoseconds otherwise.

When called from a user-space task, this service may need to allocate some temporary buffer space from the system heap to hold both the sent and the reply data if this cumulated size exceeds a certain amount; the threshold before allocation is currently set to 64 bytes.

References rt\_task\_mcb::data, rt\_task\_mcb::flowid, rt\_task\_mcb::opcode, and rt\_task\_mcb::size.

4.13.2.16 int rt\_task\_set\_mode ( int clrmask, int setmask, int \* mode\_r )

Change task mode bits.

Each Xenomai task has a set of internal bits determining various operating conditions; the rt\_task\_set\_mode() service allows to alter three of them, respectively controlling:

- whether the task locks the rescheduling procedure,
- whether the task undergoes a round-robin scheduling.
- whether the task blocks the delivery of signals.

To this end, rt\_task\_set\_mode() takes a bitmask of mode bits to clear for disabling the corresponding modes, and another one to set for enabling them. The mode bits which were previously in effect can be returned upon request.

The following bits can be part of the bitmask:

- T\_LOCK causes the current task to lock the scheduler. Clearing this bit unlocks the scheduler.
- T\_NOSIG disables the asynchronous signal delivery for the current task.
- When set, T\_WARNSW causes the SIGXCPU signal to be sent to the current user-space task whenever it switches to the secondary mode. -This feature is useful to detect unwanted migrations to the Linux domain.
- T\_RPIOFF disables thread priority coupling between Xenomai and Linux schedulers. This bit prevents the root Linux thread from inheriting the priority of the running shadow Xenomai thread. Use CONFIG\_XENO\_O-PT\_RPIOFF to globally disable priority coupling.
- T\_PRIMARY can be passed to switch the current user-space task to primary mode (setmask |= T\_PRIMARY), or secondary mode (clrmask |= T\_PRIMARY). Upon return from rt\_task\_set\_mode(), the user-space task will run into the specified domain.

Normally, this service can only be called on behalf of a regular real-time task, either running in kernel or user-space. However, as a special exception, requests for setting/clearing the T\_LOCK bit from asynchronous contexts are silently dropped, and the call returns successfully if no other mode bits have been specified. This is consistent with the fact that Xenomai enforces a scheduler lock until the outer interrupt handler has returned.

clrmask	A bitmask of mode bits to clear for the current task, before set-
	<i>mask</i> is applied. 0 is an acceptable value which leads to a no-op.
setmask	A bitmask of mode bits to set for the current task. 0 is an accept-
	able value which leads to a no-op.
mode_r	If non-NULL, mode_r must be a pointer to a memory location
	which will be written upon success with the previous set of active
	mode bits. If NULL, the previous set of active mode bits will not
	be returned.

0 is returned upon success, or:

- -EINVAL if either setmask or clrmask specifies invalid bits. T\_PRIMARY is invalid for kernel-based tasks.
- -EPERM is returned if this service was not called from a real-time task context.

#### **Environments:**

This service can be called from:

- Kernel-based task
- User-space task

Rescheduling: possible, if T\_LOCK has been passed into *clrmask* and the calling context is a task.

References T\_LOCK, T\_NOSIG, T\_RPIOFF, and T\_WARNSW.

4.13.2.17 int rt\_task\_set\_periodic ( RT\_TASK \* task, RTIME idate, RTIME period )

Make a real-time task periodic.

Make a task periodic by programing its first release point and its period in the processor time line. Subsequent calls to rt\_task\_wait\_period() will delay the task until the next periodic release point in the processor timeline is reached.

task	The descriptor address of the affected task. This task is imme-
	diately delayed until the first periodic release point is reached. If
	task is NULL, the current task is set periodic.
idate	The initial (absolute) date of the first release point, expressed
	in clock ticks (see note). The affected task will be delayed until
	this point is reached. If <i>idate</i> is equal to TM_NOW, the current
	system date is used, and no initial delay takes place.
period	The period of the task, expressed in clock ticks (see note)
	Passing TM_INFINITE attempts to stop the task's periodic timer;
	in the latter case, the routine always exits succesfully, regardless
	of the previous state of this timer.

0 is returned upon success. Otherwise:

- -EINVAL is returned if task is not a task descriptor, or period is different from TM\_INFINITE but shorter than the scheduling latency value for the target system, as available from /proc/xenomai/latency.
- -EIDRM is returned if task is a deleted task descriptor.
- -ETIMEDOUT is returned if idate is different from TM\_INFINITE and represents a date in the past.
- -EWOULDBLOCK is returned if the system timer is not active.
- -EPERM is returned if task is NULL but not called from a task context.

#### **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code or interrupt only if task is non-NULL.
- Kernel-based task
- User-space task (switches to primary mode)

Rescheduling: always if the operation affects the current task and *idate* has not elapsed yet.

#### Note

The *idate* and *period* values will be interpreted as jiffies if the native skin is bound to a periodic time base (see CONFIG\_XENO\_OPT\_NATIVE\_PERIOD), or nanoseconds otherwise.

4.13.2.18 int rt\_task\_set\_priority ( RT\_TASK \* task, int prio )

Change the base priority of a real-time task.

Changing the base priority of a task does not affect the priority boost the target task might have obtained as a consequence of a previous priority inheritance.

	The descriptor address of the affected task.
prio	The new task priority. This value must range from [0 99] (in-
	clusive) where 0 is the lowest effective priority.

Upon success, the previously set priority is returned. Otherwise:

- -EINVAL is returned if task is not a task descriptor, or if prio is invalid.
- -EPERM is returned if task is NULL but not called from a task context.
- -EIDRM is returned if *task* is a deleted task descriptor.

# Side-effects:

- This service calls the rescheduling procedure.
- Assigning the same priority to a running or ready task moves it to the end
  of its priority group, thus causing a manual round-robin.

#### **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- Interrupt service routine only if task is non-NULL.
- · Kernel-based task
- User-space task

Rescheduling: possible if *task* is the current one.

4.13.2.19 int rt\_task\_shadow ( RT\_TASK \* task, const char \* name, int prio, int mode )

Turns the current Linux task into a native Xenomai task.

Creates a real-time task running in the context of the calling regular Linux task in user-space.

task	In non-NULL, the address of a task descriptor Xenomai will use
	to store the task-related data; this descriptor must always be
	valid while the task is active therefore it must be allocated in
	permanent memory. If NULL is passed, then the descriptor will
	not be returned; main() threads which do not need to be referred
	to by other threads may use this syntax to promote themselves
	to the real-time domain for instance.

#### Note

Allowing for a NULL descriptor pointer to be passed is a recent feature which is not available with any earlier Xenomai release.

The current context is switched to primary execution mode and returns immediately, unless T\_SUSP has been passed in the *mode* parameter.

#### **Parameters**

name	An ASCII string standing for the symbolic name of the task When non-NULL and non-empty, this string is copied to a safe place into the descriptor, and passed to the registry package if enabled for indexing the created task.
prio	The base priority which will be set for the current task. This value must range from [0 99] (inclusive) where 0 is the lowest effective priority.
mode	The task creation mode. The following flags can be OR'ed into this bitmask, each of them affecting the new task:

- T\_FPU allows the task to use the FPU whenever available on the platform. This flag is forced for this call, therefore it can be omitted.
- T\_SUSP causes the task to enter the suspended mode after it has been put under Xenomai's control. In such a case, a call to rt\_task\_resume() will be needed to wake up the current task.
- T\_CPU(cpuid) makes the current task affine to CPU # cpuid. CPU identifiers range from 0 to RTHAL\_NR\_CPUS 1 (inclusive). The calling task will migrate to another processor before this service returns if the current one is not part of the CPU affinity mask.

Passing  $T_CPU(0)|T_CPU(1)$  in the *mode* parameter thus defines a task affine to CPUs #0 and #1.

#### Returns

0 is returned upon success. Otherwise:

- -EBUSY is returned if the current Linux task is already mapped to a -Xenomai context.
- -ENOMEM is returned if the system fails to get enough dynamic memory from the global real-time heap in order to create or register the task.
- -EEXIST is returned if the name is already in use by some registered object.
- -EPERM is returned if this service was called from an asynchronous context.

#### **Environments:**

This service can be called from:

• User-space task (enters primary mode)

Rescheduling: possible.

Note

When creating or shadowing a Xenomai thread for the first time in user-space, Xenomai installs a handler for the SIGWINCH signal. If you had installed a handler before that, it will be automatically called by Xenomai for SIGWINCH signals that it has not sent.

If, however, you install a signal handler for SIGWINCH after creating or shadowing the first Xenomai thread, you have to explicitly call the function xeno—sigwinch\_handler at the beginning of your signal handler, using its return to know if the signal was in fact an internal signal of Xenomai (in which case it returns 1), or if you should handle the signal (in which case it returns 0). xeno—sigwinch\_handler prototype is:

# int xeno\_sigwinch\_handler(int sig, siginfo\_t \*si, void \*ctxt);

Which means that you should register your handler with sigaction, using the SA\_SIGINFO flag, and pass all the arguments you received to xeno\_sigwinch-handler.

4.13.2.20 int rt task sleep (RTIME delay)

Delay the calling task (relative).

Delay the execution of the calling task for a number of internal clock ticks.

#### **Parameters**

delay	The number of clock ticks to wait before resuming the task (see
	note). Passing zero causes the task to return immediately with
	no delay.

# Returns

0 is returned upon success, otherwise:

- -EINTR is returned if rt\_task\_unblock() has been called for the sleeping task before the sleep time has elapsed.
- -EWOULDBLOCK is returned if the system timer is inactive.

• -EPERM is returned if this service was called from a context which cannot sleep (e.g. interrupt, non-realtime or scheduler locked).

# **Environments:**

This service can be called from:

- Kernel-based task
- User-space task (switches to primary mode)

Rescheduling: always unless a null delay is given.

# Note

The *delay* value will be interpreted as jiffies if the native skin is bound to a periodic time base (see CONFIG\_XENO\_OPT\_NATIVE\_PERIOD), or nanoseconds otherwise.

4.13.2.21 int rt\_task\_sleep\_until ( RTIME date )

Delay the calling task (absolute).

Delay the execution of the calling task until a given date is reached.

# **Parameters**

date	The absolute date in clock ticks to wait before resuming the
	task (see note). As a special case, TM_INFINITE is an accept-
	able value that makes the caller block indefinitely, until rt_task
	unblock() is called against it. Otherwise, any wake up date in the
	past causes the task to return immediately with no delay.

#### Returns

0 is returned upon success. Otherwise:

- -EINTR is returned if rt\_task\_unblock() has been called for the sleeping task before the sleep time has elapsed.
- -ETIMEDOUT is returned if date has already elapsed.
- -EWOULDBLOCK is returned if the system timer is inactive, and Date

is valid but different from TM INFINITE.

• -EPERM is returned if this service was called from a context which cannot sleep (e.g. interrupt, non-realtime or scheduler locked).

# **Environments:**

This service can be called from:

- Kernel-based task
- User-space task (switches to primary mode)

Rescheduling: always unless a date in the past is given.

#### Note

The *date* value will be interpreted as jiffies if the native skin is bound to a periodic time base (see CONFIG\_XENO\_OPT\_NATIVE\_PERIOD), or nanoseconds otherwise.

4.13.2.22 int rt task slice ( RT\_TASK \* task, RTIME quantum )

Set a task's round-robin quantum.

Set the time credit allotted to a task undergoing the round-robin scheduling. If *quantum* is non-zero, rt\_task\_slice() also refills the current quantum for the target task, otherwise, time-slicing is stopped for that task.

#### **Parameters**

task	The descriptor address of the affected task. If task is NULL, the
	current task is considered.
quantum	The round-robin quantum for the task expressed in ticks (see
	note).

# **Returns**

0 is returned upon success. Otherwise:

- -EINVAL is returned if task is not a task descriptor.
- -EPERM is returned if task is NULL but not called from a task context.

# **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- Interrupt service routine only if task is non-NULL.
- Kernel-based task
- User-space task

Rescheduling: never.

#### Note

The *quantum* value is always interpreted as a count of ticks. If the task undergoes aperiodic timing, the tick duration is defined by CONFIG\_XENO OPT TIMING VIRTICK.

4.13.2.23 int rt\_task\_spawn ( RT\_TASK \* task, const char \* name, int stksize, int prio, int mode, void(\*)(void \*cookie) entry, void \* cookie) [inline, static]

Spawn a new real-time task.

Creates and immediately starts a real-time task, either running in a kernel module or in user-space depending on the caller's context. This service is a simple shorthand for rt\_task\_create() followed by a call to rt\_task\_start().

	The address of a task descriptor Xenomai will use to store the task-related data. This descriptor must always be valid while the task is active therefore it must be allocated in permanent memory.
name	An ASCII string standing for the symbolic name of the task
	When non-NULL and non-empty, this string is copied to a safe
	place into the descriptor, and passed to the registry package if
	enabled for indexing the created task.
stksize	The size of the stack (in bytes) for the new task. If zero is passed,
	a reasonable pre-defined size will be substituted.
prio	[ ]
	99] (inclusive) where 0 is the lowest effective priority.
mode	The task creation mode. The following flags can be OR'ed into
	this bitmask, each of them affecting the new task:

- T\_FPU allows the task to use the FPU whenever available on the platform. This flag is forced for user-space tasks.
- T\_SUSP causes the task to start in suspended mode. In such a case, the thread will have to be explicitly resumed using the rt\_task\_resume() service for its execution to actually begin.
- T\_CPU(cpuid) makes the new task affine to CPU # cpuid. CPU identifiers range from 0 to RTHAL\_NR\_CPUS 1 (inclusive).
- T\_JOINABLE (user-space only) allows another task to wait on the termination of the new task. This implies that rt\_task\_join() is actually called for this task to clean up any user-space located resources after its termination.

Passing T\_FPU|T\_CPU(1) in the *mode* parameter thus creates a task with FPU support enabled and which will be affine to CPU #1.

# **Parameters**

entry	The address of the task's body routine. In other words, it is the
	task entry point.
cookie	A user-defined opaque cookie the real-time kernel will pass to
	the emerging task as the sole argument of its entry point.

#### Returns

0 is returned upon success. Otherwise:

- -ENOMEM is returned if the system fails to get enough dynamic memory from the global real-time heap in order to create the new task's stack space or register the task.
- -EEXIST is returned if the name is already in use by some registered object.
- -EPERM is returned if this service was called from an asynchronous context.

# **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- Kernel-based task
- User-space task

Rescheduling: possible.

Note

When creating or shadowing a Xenomai thread for the first time in user-space, Xenomai installs a handler for the SIGWINCH signal. If you had installed a handler before that, it will be automatically called by Xenomai for SIGWINCH signals that it has not sent.

If, however, you install a signal handler for SIGWINCH after creating or shadowing the first Xenomai thread, you have to explicitly call the function xeno\_sigwinch\_handler at the beginning of your signal handler, using its return to know if the signal was in fact an internal signal of Xenomai (in which case it returns 1), or if you should handle the signal (in which case it returns 0). xeno\_sigwinch\_handler prototype is:

# int xeno\_sigwinch\_handler(int sig, siginfo\_t \*si, void \*ctxt);

Which means that you should register your handler with sigaction, using the SA\_SIGINFO flag, and pass all the arguments you received to xeno\_sigwinch-handler.

References rt\_task\_create(), and rt\_task\_start().

4.13.2.24 int rt task start ( RT\_TASK \* task, void(\*)(void \*cookie) entry, void \* cookie )

Start a real-time task.

Start a (newly) created task, scheduling it for the first time. This call releases the target task from the dormant state.

The TSTART hooks are called on behalf of the calling context (if any, see rt\_task\_add\_hook()).

#### **Parameters**

task	The descriptor address of the affected task which must have
	been previously created by the rt_task_create() service.
entry	The address of the task's body routine. In other words, it is the
	task entry point.
cookie	A user-defined opaque cookie the real-time kernel will pass to
	the emerging task as the sole argument of its entry point.

## Returns

0 is returned upon success. Otherwise:

- -EINVAL is returned if task is not a task descriptor.
- -EIDRM is returned if task is a deleted task descriptor.
- -EBUSY is returned if task is already started.
- -EPERM is returned if this service was called from an asynchronous context.

# Environments:

This service can be called from:

- Kernel module initialization/cleanup code
- · Kernel-based task
- User-space task

Rescheduling: possible.

Referenced by rt task spawn().

4.13.2.25 int rt\_task\_suspend ( RT\_TASK \* task )

Suspend a real-time task.

Forcibly suspend the execution of a task. This task will not be eligible for scheduling until it is explicitly resumed by a call to rt\_task\_resume(). In other words, the suspended state caused by a call to rt\_task\_suspend() is cumulative with respect to the delayed and blocked states caused by other services, and is managed separately from them.

A nesting count is maintained so that rt\_task\_suspend() and rt\_task\_resume() must be used in pairs.

Receiving a Linux signal causes the suspended task to resume immediately.

#### **Parameters**

task	The descriptor address of the affected task. If task is NULL, the
	current task is suspended.

#### Returns

0 is returned upon success. Otherwise:

- -EINTR is returned if a Linux signal has been received by the suspended task.
- -EINVAL is returned if task is not a task descriptor.
- -EPERM is returned if this service was called from an invalid context (e.g. interrupt, non-realtime context).
- -EIDRM is returned if task is a deleted task descriptor.

# **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- Interrupt service routine only if task is non-NULL.
- Kernel-based task
- User-space task (switches to primary mode)

Rescheduling: always if task is NULL.

4.13.2.26 intrt\_task\_unbind(RT\_TASK \* task) [inline, static]

Unbind from a real-time task.

This user-space only service unbinds the calling task from the task object previously retrieved by a call to rt\_task\_bind().

#### **Parameters**

task The address of a task descriptor to unbind from.

# Returns

0 is always returned.

This service can be called from:

· User-space task.

Rescheduling: never.

```
4.13.2.27 int rt_task_unblock ( RT_TASK * task )
```

Unblock a real-time task.

Break the task out of any wait it is currently in. This call clears all delay and/or resource wait condition for the target task. However, rt\_task\_unblock() does not resume a task which has been forcibly suspended by a previous call to rt\_task\_suspend(). If all suspensive conditions are gone, the task becomes eligible anew for scheduling.

#### **Parameters**

task	The descriptor address of the affected task.
------	--

#### Returns

0 is returned upon success. Otherwise:

- -EINVAL is returned if task is not a task descriptor.
- -EIDRM is returned if task is a deleted task descriptor.

# **Environments:**

This service can be called from:

Kernel module initialization/cleanup code

- Interrupt service routine
- Kernel-based task
- User-space task

Rescheduling: possible.

```
4.13.2.28 int rt_task_wait_period ( unsigned long * overruns_r )
```

Wait for the next periodic release point.

Make the current task wait for the next periodic release point in the processor time line.

# **Parameters**

	overruns_r	If non-NULL, overruns_r must be a pointer to a memory location
ı		which will be written with the count of pending overruns. This
ı		value is copied only when rt_task_wait_period() returns -ETIM-
ı		EDOUT or success; the memory location remains unmodified
		otherwise. If NULL, this count will never be copied back.

#### Returns

0 is returned upon success; if *overruns\_r* is valid, zero is copied to the pointed memory location. Otherwise:

- -EWOULDBLOCK is returned if rt\_task\_set\_periodic() has not previously been called for the calling task.
- -EINTR is returned if rt\_task\_unblock() has been called for the waiting task before the next periodic release point has been reached. In this case, the overrun counter is reset too.
- -ETIMEDOUT is returned if a timer overrun occurred, which indicates that
  a previous release point has been missed by the calling task. If overruns
  \_r is valid, the count of pending overruns is copied to the pointed memory
  location.
- -EPERM is returned if this service was called from a context which cannot sleep (e.g. interrupt, non-realtime or scheduler locked).

# **Environments:**

This service can be called from:

- Kernel-based task
- User-space task (switches to primary mode)

Rescheduling: always, unless the current release point has already been reached. In the latter case, the current task immediately returns from this service without being delayed.

```
4.13.2.29 int rt_task_yield ( void )
```

Manual round-robin.

Move the current task to the end of its priority group, so that the next equalpriority task in ready state is switched in.

#### Returns

0 is returned upon success. Otherwise:

• -EPERM is returned if this service was called from a context which cannot sleep (e.g. interrupt, non-realtime or scheduler locked).

# **Environments:**


This service can be called from:

- Kernel-based task
- User-space task

Rescheduling: always if a next equal-priority task is ready to run, otherwise, this service leads to a no-op.

# 4.14 Timer management services.

Collaboration diagram for Timer management services.:

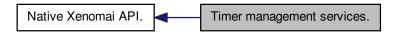

# **Data Structures**

• struct rt\_timer\_info

Structure containing timer-information useful to users.

# **Files**

• file timer.h

This file is part of the Xenomai project.

• file timer.c

This file is part of the Xenomai project.

# **Typedefs**

typedef struct rt\_timer\_info RT\_TIMER\_INFO
 Structure containing timer-information useful to users.

# **Functions**

SRTIME rt\_timer\_ns2tsc (SRTIME ns)

Convert nanoseconds to local CPU clock ticks.

• SRTIME rt\_timer\_tsc2ns (SRTIME ticks)

Convert local CPU clock ticks to nanoseconds.

RTIME rt\_timer\_tsc (void)

Return the current TSC value.

RTIME rt\_timer\_read (void)

Return the current system time.

• SRTIME rt timer ns2ticks (SRTIME ns)

Convert nanoseconds to internal clock ticks.

• SRTIME rt\_timer\_ticks2ns (SRTIME ticks)

Convert internal clock ticks to nanoseconds.

• int rt\_timer\_inquire (RT\_TIMER\_INFO \*info)

Inquire about the timer.

void rt\_timer\_spin (RTIME ns)

Busy wait burning CPU cycles.

• int rt\_timer\_set\_mode (RTIME nstick)

Set the system clock rate.

# 4.14.1 Detailed Description

Timer-related services allow to control the Xenomai system timer which is used in all timed operations.

# 4.14.2 Typedef Documentation

# 4.14.2.1 typedef struct rt timer info RT TIMER INFO

Structure containing timer-information useful to users.

# See also

```
rt_timer_inquire()
```

# 4.14.3 Function Documentation

```
4.14.3.1 int rt_timer_inquire ( RT_TIMER_INFO * info )
```

Inquire about the timer.

Return various information about the status of the system timer.

# Parameters

info	The address of a structure the timer information will be written
	to.

# Returns

This service always returns 0.

The information block returns the period and the current system date. The period can have the following values:

• TM UNSET is a special value indicating that the system timer is inactive.

A call to rt\_timer\_set\_mode() re-activates it.

- TM\_ONESHOT is a special value indicating that the timer has been set up in oneshot mode.
- Any other period value indicates that the system timer is currently running in periodic mode; it is a count of nanoseconds representing the period of the timer, i.e. the duration of a periodic tick or "jiffy".

#### **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- Interrupt service routine
- Kernel-based task
- User-space task

Rescheduling: never.

```
4.14.3.2 SRTIME rt_timer_ns2ticks ( SRTIME ns )
```

Convert nanoseconds to internal clock ticks.

Convert a count of nanoseconds to internal clock ticks. This routine operates on signed nanosecond values.

#### **Parameters**

ns The count of nanoseconds to convert.

# Returns

The corresponding value expressed in internal clock ticks.

#### **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- Interrupt service routine
- Kernel-based task
- User-space task

4.14.3.3 SRTIME rt\_timer\_ns2tsc ( SRTIME ns )

Convert nanoseconds to local CPU clock ticks.

Convert a count of nanoseconds to local CPU clock ticks. This routine operates on signed nanosecond values.

#### **Parameters**

ns The count of nanoseconds to convert.

#### Returns

The corresponding value expressed in CPU clock ticks.

# **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- Interrupt service routine
- Kernel-based task
- · User-space task

Rescheduling: never.

4.14.3.4 RTIME rt\_timer\_read ( void )

Return the current system time.

Return the current time maintained by the master time base.

#### Returns

The current time expressed in clock ticks (see note).

# Environments:

This service can be called from:

- Kernel module initialization/cleanup code
- Interrupt service routine
- · Kernel-based task
- · User-space task

#### Note

The value returned will represent a count of jiffies if the native skin is bound to a periodic time base (see CONFIG\_XENO\_OPT\_NATIVE\_PERIOD), or nanoseconds otherwise.

#### **Examples:**

trivial-periodic.c.

```
4.14.3.5 int rt_timer_set_mode ( RTIME nstick )
```

Set the system clock rate.

This routine switches to periodic timing mode and sets the clock tick rate, or resets the current timing mode to aperiodic/oneshot mode depending on the value of the *nstick* parameter. Since the native skin automatically sets its time base according to the configured policy and period at load time (see CONFIG\_XENO\_OPT\_NATIVE\_PERIOD), calling rt\_timer\_set\_mode() is not required from applications unless the pre-defined mode and period need to be changed dynamically.

This service sets the time unit which will be relevant when specifying time intervals to the services taking timeout or delays as input parameters. In periodic mode, clock ticks will represent periodic jiffies. In oneshot mode, clock ticks will represent nanoseconds.

#### **Parameters**

The time base period in nanoseconds. If this parameter is equal
to the special TM_ONESHOT value, the time base is set to op-
erate in a tick-less fashion (i.e. oneshot mode). Other values
are interpreted as the time between two consecutive clock ticks
in periodic timing mode (i.e. clock HZ = 1e9 / nstick).

#### Returns

0 is returned on success. Otherwise:

 -ENODEV is returned if the underlying architecture does not support the requested periodic timing. Aperiodic/oneshot timing is always supported.

# **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- User-space task

4.14.3.6 void rt\_timer\_spin ( RTIME ns )

Busy wait burning CPU cycles.

Enter a busy waiting loop for a count of nanoseconds. The precision of this service largely depends on the availability of a time stamp counter on the current CPU.

Since this service is usually called with interrupts enabled, the caller might be preempted by other real-time activities, therefore the actual delay might be longer than specified.

#### **Parameters**

ns The time to wait expressed in nanoseconds.

# **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- Interrupt service routine
- Kernel-based task
- · User-space task

Rescheduling: never.

4.14.3.7 SRTIME rt\_timer\_ticks2ns ( SRTIME ticks )

Convert internal clock ticks to nanoseconds.

Convert a count of internal clock ticks to nanoseconds. This routine operates on signed tick values.

# **Parameters**

ticks The count of internal clock ticks to convert.

# Returns

The corresponding value expressed in nanoseconds.

# **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- Interrupt service routine

- Kernel-based task
- User-space task

Rescheduling: never.

4.14.3.8 RTIME rt\_timer\_tsc ( void )

Return the current TSC value.

Return the value of the time stamp counter (TSC) maintained by the CPU of the underlying architecture.

#### Returns

The current value of the TSC.

# **Environments:**

This service can be called from:

- Kernel module initialization/cleanup code
- Interrupt service routine
- Kernel-based task
- User-space task

Rescheduling: never.

4.14.3.9 SRTIME rt\_timer\_tsc2ns ( SRTIME ticks )

Convert local CPU clock ticks to nanoseconds.

Convert a local CPU clock ticks to nanoseconds. This routine operates on signed tick values.

#### **Parameters**

ticks The count of local CPU clock ticks to convert.

#### **Returns**

The corresponding value expressed in nanoseconds.

# **Environments:**

This service can be called from:

Kernel module initialization/cleanup code

- Interrupt service routine
- Kernel-based task
- User-space task

# **Chapter 5**

# **Data Structure Documentation**

# 5.1 rt\_heap\_info Struct Reference

Structure containing heap-information useful to users.

# 5.1.1 Detailed Description

Structure containing heap-information useful to users.

See also

```
rt_heap_inquire()
```

The documentation for this struct was generated from the following file:

• include/native/heap.h

# 5.2 rt\_mutex\_info Struct Reference

Structure containing mutex information useful to users.

# **Data Fields**

- int locked
  - > 0 if mutex is locked.
- int nwaiters

Number of pending tasks.

• char name [XNOBJECT\_NAME\_LEN]

Symbolic name.

char owner [XNOBJECT\_NAME\_LEN]
 Symbolic name of the current owner, empty if unlocked.

# 5.2.1 Detailed Description

Structure containing mutex information useful to users.

See also

rt\_mutex\_inquire()

# 5.2.2 Field Documentation

5.2.2.1 int rt\_mutex\_info::locked

> 0 if mutex is locked.

Referenced by rt\_mutex\_inquire().

5.2.2.2 char rt\_mutex\_info::name[XNOBJECT\_NAME\_LEN]

Symbolic name.

Referenced by rt\_mutex\_inquire().

5.2.2.3 int rt\_mutex\_info::nwaiters

Number of pending tasks.

Referenced by rt mutex inquire().

5.2.2.4 char rt\_mutex\_info::owner[XNOBJECT\_NAME\_LEN]

Symbolic name of the current owner, empty if unlocked.

Referenced by rt\_mutex\_inquire().

The documentation for this struct was generated from the following file:

• include/native/mutex.h

# 5.3 rt\_task\_info Struct Reference

Structure containing task-information useful to users.

# **Data Fields**

• int bprio

Base priority.

• int cprio

Current priority.

unsigned status

Task's status.

RTIME relpoint

Time of next release.

• char name [XNOBJECT\_NAME\_LEN]

Symbolic name assigned at creation.

• RTIME exectime

Execution time in primary mode in nanoseconds.

• int modeswitches

Number of primary->secondary mode switches.

int ctxswitches

Number of context switches.

int pagefaults

Number of triggered page faults.

# 5.3.1 Detailed Description

Structure containing task-information useful to users.

# See also

```
rt_task_inquire()
```

# 5.3.2 Field Documentation

```
5.3.2.1 int rt_task_info::bprio
```

Base priority.

Referenced by rt\_task\_inquire().

5.3.2.2 int rt\_task\_info::cprio

Current priority.

May change through Priority Inheritance.

Referenced by rt task inquire().

Number of context switches.

Referenced by rt\_task\_inquire().

5.3.2.4 RTIME rt\_task\_info::exectime

Execution time in primary mode in nanoseconds.

Referenced by rt\_task\_inquire().

5.3.2.5 int rt\_task\_info::modeswitches

Number of primary->secondary mode switches.

Referenced by rt\_task\_inquire().

5.3.2.6 char rt\_task\_info::name[XNOBJECT\_NAME\_LEN]

Symbolic name assigned at creation.

Referenced by rt\_task\_inquire().

5.3.2.7 int rt\_task\_info::pagefaults

Number of triggered page faults.

Referenced by rt\_task\_inquire().

5.3.2.8 RTIME rt\_task\_info::relpoint

Time of next release.

Referenced by rt\_task\_inquire().

5.3.2.9 unsigned rt\_task\_info::status

Task's status.

See also

Task Status

Referenced by rt\_task\_inquire().

The documentation for this struct was generated from the following file:

• include/native/task.h

# 5.4 rt\_task\_mcb Struct Reference

Structure used in passing messages between tasks.

# **Data Fields**

• int flowid

Flow identifier.

• int opcode

Operation code.

• caddr\_t data

Message address.

• size\_t size

Message size (bytes).

# 5.4.1 Detailed Description

Structure used in passing messages between tasks.

See also

```
rt_task_send(), rt_task_reply(), rt_task_receive()
```

# 5.4.2 Field Documentation

```
5.4.2.1 caddr_t rt_task_mcb::data
```

Message address.

Referenced by rt\_task\_receive(), rt\_task\_reply(), and rt\_task\_send().

```
5.4.2.2 int rt_task_mcb::flowid
```

Flow identifier.

Referenced by rt\_task\_send().

5.4.2.3 int rt\_task\_mcb::opcode

Operation code.

Referenced by rt\_task\_receive(), rt\_task\_reply(), and rt\_task\_send().

5.4.2.4 size\_t rt\_task\_mcb::size

Message size (bytes).

Referenced by rt\_task\_receive(), rt\_task\_reply(), and rt\_task\_send().

The documentation for this struct was generated from the following file:

• include/native/task.h

# 5.5 rt\_timer\_info Struct Reference

Structure containing timer-information useful to users.

# 5.5.1 Detailed Description

Structure containing timer-information useful to users.

See also

rt\_timer\_inquire()

The documentation for this struct was generated from the following file:


• include/native/timer.h

# **Chapter 6**


# **File Documentation**

# 6.1 include/native/alarm.h File Reference

This file is part of the Xenomai project. Include dependency graph for alarm.h:

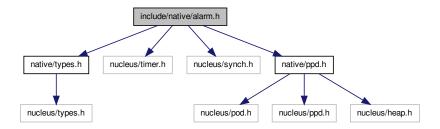

This graph shows which files directly or indirectly include this file:

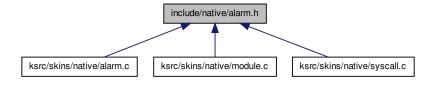

#### **Functions**

• int rt\_alarm\_create (RT\_ALARM \*alarm, const char \*name, rt\_alarm\_t handler, void \*cookie)

Create an alarm object from kernel space.

• int rt\_alarm\_delete (RT\_ALARM \*alarm)

Delete an alarm.

int rt\_alarm\_start (RT\_ALARM \*alarm, RTIME value, RTIME interval)
 Start an alarm.

• int rt\_alarm\_stop (RT\_ALARM \*alarm)

Stop an alarm.

• int rt\_alarm\_inquire (RT\_ALARM \*alarm, RT\_ALARM\_INFO \*info)

Inquire about an alarm.

#### 6.1.1 Detailed Description

This file is part of the Xenomai project.

Note

Copyright (C) 2004 Philippe Gerum < rpm@xenomai.org>


This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT - ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.


You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

# 6.2 include/native/buffer.h File Reference

Include dependency graph for buffer.h:

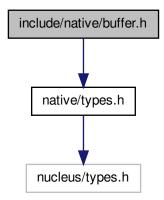

This graph shows which files directly or indirectly include this file:

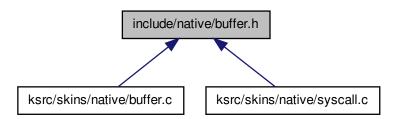

#### **Functions**

- int rt\_buffer\_bind (RT\_BUFFER \*bf, const char \*name, RTIME timeout)

  Bind to a buffer.
- static int rt\_buffer\_unbind (RT\_BUFFER \*bf)

  Unbind from a buffer.
- int rt\_buffer\_create (RT\_BUFFER \*bf, const char \*name, size\_t bufsz, int mode)

Create a buffer.

• int rt\_buffer\_delete (RT\_BUFFER \*bf)

Delete a buffer.

ssize\_t rt\_buffer\_write (RT\_BUFFER \*bf, const void \*ptr, size\_t size, RT-IME timeout)

Write to a buffer.

• ssize\_t rt\_buffer\_write\_until (RT\_BUFFER \*bf, const void \*ptr, size\_t size, RTIME timeout)

Write to a buffer (with absolute timeout date).

ssize\_t rt\_buffer\_read (RT\_BUFFER \*bf, void \*ptr, size\_t size, RTIME timeout)

Read from a buffer.

• int rt buffer clear (RT BUFFER \*bf)

Clear a buffer.

• int rt\_buffer\_inquire (RT\_BUFFER \*bf, RT\_BUFFER\_INFO \*info)

Inquire about a buffer.

### 6.2.1 Detailed Description

This file is part of the Xenomai project.

Note

Copyright (C) 2008 Philippe Gerum < rpm@xenomai.org>


This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT - ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.


You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

#### 6.3 include/native/cond.h File Reference

Include dependency graph for cond.h:

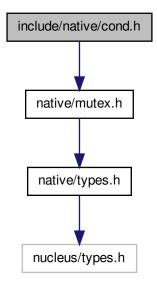

This graph shows which files directly or indirectly include this file:

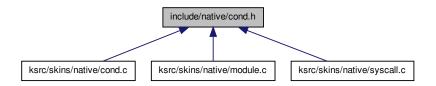

## **Functions**

- int rt\_cond\_bind (RT\_COND \*cond, const char \*name, RTIME timeout)

  Bind to a condition variable.
- static int rt\_cond\_unbind (RT\_COND \*cond)

  Unbind from a condition variable.
- int rt\_cond\_create (RT\_COND \*cond, const char \*name)

Create a condition variable.

• int rt\_cond\_delete (RT\_COND \*cond)

Delete a condition variable.

• int rt cond signal (RT COND \*cond)

Signal a condition variable.

int rt\_cond\_broadcast (RT\_COND \*cond)

Broadcast a condition variable.

 int rt\_cond\_wait (RT\_COND \*cond, RT\_MUTEX \*mutex, RTIME timeout)

Wait on a condition.

int rt\_cond\_wait\_until (RT\_COND \*cond, RT\_MUTEX \*mutex, RTIME timeout)

Wait on a condition (with absolute timeout date).

• int rt cond inquire (RT COND \*cond, RT COND INFO \*info)

Inquire about a condition variable.

#### 6.3.1 Detailed Description

This file is part of the Xenomai project.

Note

Copyright (C) 2004 Philippe Gerum < rpm@xenomai.org>


This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT - ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.


You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

#### 6.4 include/native/event.h File Reference

Include dependency graph for event.h:

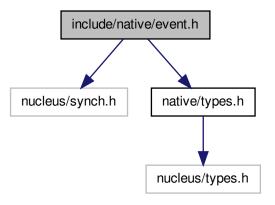

This graph shows which files directly or indirectly include this file:

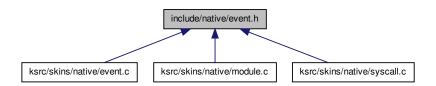

#### **Functions**

 int rt\_event\_bind (RT\_EVENT \*event, const char \*name, RTIME timeout)

Bind to an event flag group.

• static int rt\_event\_unbind (RT\_EVENT \*event)

Unbind from an event flag group.

• int rt\_event\_create (RT\_EVENT \*event, const char \*name, unsigned long ivalue, int mode)

Create an event group.

• int rt\_event\_delete (RT\_EVENT \*event)

Delete an event group.

• int rt\_event\_signal (RT\_EVENT \*event, unsigned long mask)

Post an event group.

int rt\_event\_wait (RT\_EVENT \*event, unsigned long mask, unsigned long \*mask r, int mode, RTIME timeout)

Pend on an event group.

int rt\_event\_wait\_until (RT\_EVENT \*event, unsigned long mask, unsigned long \*mask r, int mode, RTIME timeout)

Pend on an event group (with absolute timeout date).

int rt\_event\_clear (RT\_EVENT \*event, unsigned long mask, unsigned long \*mask r)

Clear an event group.

• int rt\_event\_inquire (RT\_EVENT \*event, RT\_EVENT\_INFO \*info)

Inquire about an event group.

## 6.4.1 Detailed Description

This file is part of the Xenomai project.

Note

Copyright (C) 2004 Philippe Gerum < rpm@xenomai.org>


This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT - ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.


You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

## 6.5 include/native/heap.h File Reference

Include dependency graph for heap.h:

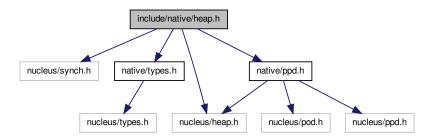

This graph shows which files directly or indirectly include this file:

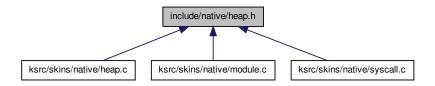

#### **Data Structures**

struct rt\_heap\_info

Structure containing heap-information useful to users.

# **Typedefs**

typedef struct rt\_heap\_info RT\_HEAP\_INFO
 Structure containing heap-information useful to users.

## **Functions**

• int rt\_heap\_create (RT\_HEAP \*heap, const char \*name, size\_t heapsize, int mode)

Create a memory heap or a shared memory segment.

• int rt\_heap\_delete (RT\_HEAP \*heap)

Delete a real-time heap.

 int rt\_heap\_alloc (RT\_HEAP \*heap, size\_t size, RTIME timeout, void \*\*blockp)

Allocate a block or return the single segment base.

• int rt\_heap\_free (RT\_HEAP \*heap, void \*block)

• int rt\_heap\_inquire (RT\_HEAP \*heap, RT\_HEAP\_INFO \*info)
Inquire about a heap.

#### 6.5.1 Detailed Description

Free a block.

This file is part of the Xenomai project.

Note

```
Copyright (C) 2004 Philippe Gerum < rpm@xenomai.org>
```

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT - ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

## 6.5.2 Typedef Documentation

```
6.5.2.1 typedef struct rt_heap_info RT_HEAP_INFO
```


Structure containing heap-information useful to users.

See also


```
rt_heap_inquire()
```

#### 6.6 include/native/intr.h File Reference

Include dependency graph for intr.h:

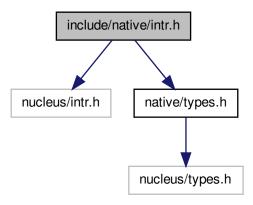

This graph shows which files directly or indirectly include this file:

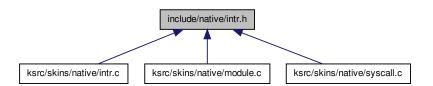

# **Functions**

- int rt\_intr\_bind (RT\_INTR \*intr, const char \*name, RTIME timeout)

  Bind to an interrupt object.
- static int rt\_intr\_unbind (RT\_INTR \*intr)

  Unbind from an interrupt object.
- int rt\_intr\_create (RT\_INTR \*intr, const char \*name, unsigned irq, int mode)

Create an interrupt object from user-space.

• int rt\_intr\_wait (RT\_INTR \*intr, RTIME timeout)

Wait for the next interrupt.

• int rt\_intr\_delete (RT\_INTR \*intr)

Delete an interrupt object.

• int rt\_intr\_enable (RT\_INTR \*intr)

Enable an interrupt object.

• int rt intr disable (RT INTR \*intr)

Disable an interrupt object.

• int rt\_intr\_inquire (RT\_INTR \*intr, RT\_INTR\_INFO \*info)

Inquire about an interrupt object.

### 6.6.1 Detailed Description

This file is part of the Xenomai project.

Note

Copyright (C) 2005 Philippe Gerum < rpm@xenomai.org>


This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT - ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.


You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

## 6.7 include/native/misc.h File Reference

Include dependency graph for misc.h:

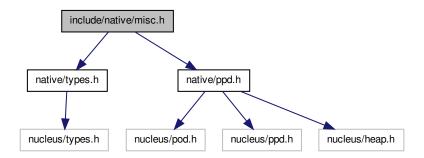

This graph shows which files directly or indirectly include this file:

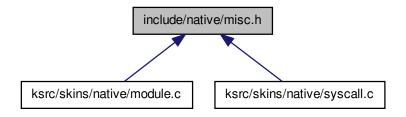

#### 6.7.1 Detailed Description

This file is part of the Xenomai project.

Note

Copyright (C) 2005 Philippe Gerum < rpm@xenomai.org>

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT - ANY WARRANTY; without even the implied warranty of MERCHANTABILITY


or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.


## 6.8 include/native/mutex.h File Reference

This file is part of the Xenomai project.

Include dependency graph for mutex.h:

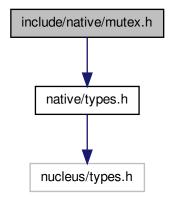

This graph shows which files directly or indirectly include this file:

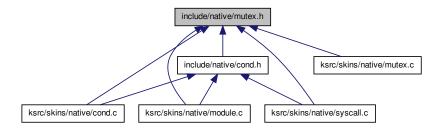

#### **Data Structures**

struct rt\_mutex\_info

Structure containing mutex information useful to users.

#### **Typedefs**

typedef struct rt\_mutex\_info RT\_MUTEX\_INFO
 Structure containing mutex information useful to users.

#### **Functions**

 int rt\_mutex\_bind (RT\_MUTEX \*mutex, const char \*name, RTIME timeout)

Bind to a mutex.

static int rt\_mutex\_unbind (RT\_MUTEX \*mutex)

Unbind from a mutex.

• int rt\_mutex\_create (RT\_MUTEX \*mutex, const char \*name)

Create a mutex.

int rt\_mutex\_delete (RT\_MUTEX \*mutex)

Delete a mutex.

int rt\_mutex\_acquire (RT\_MUTEX \*mutex, RTIME timeout)

Acquire a mutex.

• int rt\_mutex\_acquire\_until (RT\_MUTEX \*mutex, RTIME timeout)

Acquire a mutex (with absolute timeout date).

• int rt mutex release (RT MUTEX \*mutex)

Unlock mutex.

int rt\_mutex\_inquire (RT\_MUTEX \*mutex, RT\_MUTEX\_INFO \*info)
 Inquire about a mutex.

#### 6.8.1 Detailed Description

This file is part of the Xenomai project.

Note

Copyright (C) 2004 Philippe Gerum < rpm@xenomai.org>

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT - ANY WARRANTY; without even the implied warranty of MERCHANTABILITY

or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

## 6.8.2 Typedef Documentation

## 6.8.2.1 typedef struct rt\_mutex\_info RT\_MUTEX\_INFO

Structure containing mutex information useful to users.


See also

rt\_mutex\_inquire()


# 6.9 include/native/pipe.h File Reference

This file is part of the Xenomai project.

Include dependency graph for pipe.h:

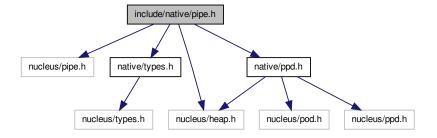

This graph shows which files directly or indirectly include this file:

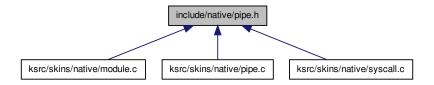

#### **Functions**

int rt\_pipe\_create (RT\_PIPE \*pipe, const char \*name, int minor, size\_t poolsize)

Create a message pipe.

• int rt\_pipe\_delete (RT\_PIPE \*pipe)

Delete a message pipe.

 ssize\_t rt\_pipe\_read (RT\_PIPE \*pipe, void \*buf, size\_t size, RTIME timeout)

Read a message from a pipe.

ssize\_t rt\_pipe\_write (RT\_PIPE \*pipe, const void \*buf, size\_t size, int mode)

Write a message to a pipe.

- ssize\_t rt\_pipe\_stream (RT\_PIPE \*pipe, const void \*buf, size\_t size)

  Stream bytes to a pipe.
- ssize\_t rt\_pipe\_receive (RT\_PIPE \*pipe, RT\_PIPE\_MSG \*\*msg, RTIME timeout)

Receive a message from a pipe.

ssize\_t rt\_pipe\_send (RT\_PIPE \*pipe, RT\_PIPE\_MSG \*msg, size\_t size, int mode)

Send a message through a pipe.

• RT PIPE MSG \* rt pipe alloc (RT PIPE \*pipe, size t size)

Allocate a message pipe buffer.

• int rt\_pipe\_free (RT\_PIPE \*pipe, RT\_PIPE\_MSG \*msg)

Free a message pipe buffer.

• int rt\_pipe\_flush (RT\_PIPE \*pipe, int mode)

Flush the i/o queues associated with the kernel endpoint of a message pipe.

int rt\_pipe\_monitor (RT\_PIPE \*pipe, int(\*fn)(RT\_PIPE \*pipe, int event, long arg))

Monitor a message pipe asynchronously.

#### 6.9.1 Detailed Description

This file is part of the Xenomai project.

Note

Copyright (C) 2004 Philippe Gerum < rpm@xenomai.org>

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


This program is distributed in the hope that it will be useful, but WITHOUT - ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.


# 6.10 include/native/ppd.h File Reference

This file is part of the Xenomai project.

Include dependency graph for ppd.h:

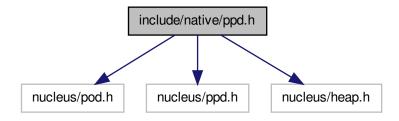

This graph shows which files directly or indirectly include this file:

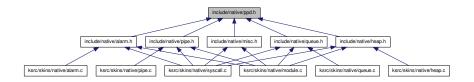

## 6.10.1 Detailed Description

This file is part of the Xenomai project.

Note

Copyright (C) 2007 Philippe Gerum < rpm@xenomai.org>


This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT - ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.


You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

# 6.11 include/native/queue.h File Reference

Include dependency graph for queue.h:

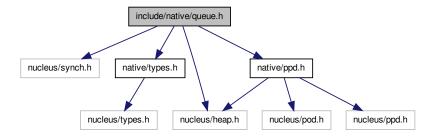

This graph shows which files directly or indirectly include this file:

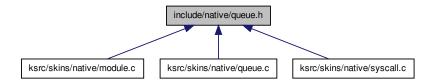

### **Functions**

• int rt\_queue\_create (RT\_QUEUE \*q, const char \*name, size\_t poolsize, size\_t qlimit, int mode)

Create a message queue.

• int rt\_queue\_delete (RT\_QUEUE \*q)

Delete a message queue.

void \* rt\_queue\_alloc (RT\_QUEUE \*q, size\_t size)

Allocate a message queue buffer.

• int rt\_queue\_free (RT\_QUEUE \*q, void \*buf)

Free a message queue buffer.

- int rt\_queue\_send (RT\_QUEUE \*q, void \*buf, size\_t size, int mode) Send a message to a queue.
- int rt\_queue\_write (RT\_QUEUE \*q, const void \*buf, size\_t size, int mode)

Write a message to a queue.

• ssize trt queue receive (RT QUEUE \*q, void \*\*bufp, RTIME timeout)

Receive a message from a queue.

 ssize\_t rt\_queue\_receive\_until (RT\_QUEUE \*q, void \*\*bufp, RTIME timeout)

Receive a message from a queue (with absolute timeout date).

ssize\_t rt\_queue\_read (RT\_QUEUE \*q, void \*bufp, size\_t size, RTIME timeout)

Read a message from a queue.

ssize\_t rt\_queue\_read\_until (RT\_QUEUE \*q, void \*bufp, size\_t size, RT-IME timeout)

Read a message from a queue (with absolute timeout date).

int rt\_queue\_flush (RT\_QUEUE \*q)

Flush a message queue.

• int rt\_queue\_inquire (RT\_QUEUE \*q, RT\_QUEUE\_INFO \*info)

Inquire about a message queue.

#### 6.11.1 Detailed Description

This file is part of the Xenomai project.

Note

Copyright (C) 2004 Philippe Gerum < rpm@xenomai.org>


This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT - ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.


You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

# 6.12 include/native/sem.h File Reference

Include dependency graph for sem.h:

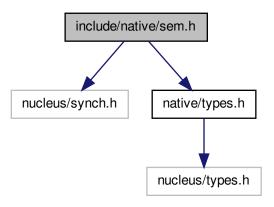

This graph shows which files directly or indirectly include this file:

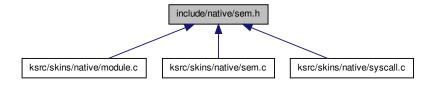

# **Functions**

- int rt\_sem\_bind (RT\_SEM \*sem, const char \*name, RTIME timeout)

  Bind to a semaphore.
- static int rt\_sem\_unbind (RT\_SEM \*sem)
  Unbind from a semaphore.
- int rt\_sem\_create (RT\_SEM \*sem, const char \*name, unsigned long icount, int mode)

Create a counting semaphore.

• int rt\_sem\_delete (RT\_SEM \*sem)

Delete a semaphore.

• int rt\_sem\_p (RT\_SEM \*sem, RTIME timeout)

Pend on a semaphore.

• int rt\_sem\_p\_until (RT\_SEM \*sem, RTIME timeout)

Pend on a semaphore (with absolute timeout date).

• int rt\_sem\_v (RT\_SEM \*sem)

Signal a semaphore.

int rt\_sem\_broadcast (RT\_SEM \*sem)

Broadcast a semaphore.

• int rt sem inquire (RT SEM \*sem, RT SEM INFO \*info)

Inquire about a semaphore.

#### 6.12.1 Detailed Description

This file is part of the Xenomai project.

Note

Copyright (C) 2004 Philippe Gerum < rpm@xenomai.org>


This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT - ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

#### 6.13 include/native/task.h File Reference

Include dependency graph for task.h:

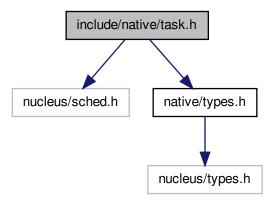

This graph shows which files directly or indirectly include this file:



## **Data Structures**

- struct rt\_task\_info
  - Structure containing task-information useful to users.
- struct rt\_task\_mcb

Structure used in passing messages between tasks.

#### **Defines**

- #define T\_BLOCKED XNPEND
  - See #XNPEND.
- #define T\_DELAYED XNDELAY
  - See #XNDELAY.
- #define T\_READY XNREADY
  - See #XNREADY.
- #define T\_DORMANT XNDORMANT

See #XNDORMANT.

#define T\_STARTED XNSTARTED

See #XNSTARTED.

#define T\_BOOST XNBOOST

See #XNBOOST.

#define T\_LOCK XNLOCK

See #XNLOCK.

#define T NOSIG XNASDI

See #XNASDI.

#define T WARNSW XNTRAPSW

See #XNTRAPSW.

#define T RPIOFF XNRPIOFF

See #XNRPIOFF.

## **Typedefs**

typedef struct rt\_task\_info RT\_TASK\_INFO

Structure containing task-information useful to users.

typedef struct rt\_task\_mcb RT\_TASK\_MCB

Structure used in passing messages between tasks.

#### **Functions**

• int rt\_task\_shadow (RT\_TASK \*task, const char \*name, int prio, int mode)

Turns the current Linux task into a native Xenomai task.

• int rt\_task\_bind (RT\_TASK \*task, const char \*name, RTIME timeout)

Bind to a real-time task.

• static int rt\_task\_unbind (RT\_TASK \*task)

Unbind from a real-time task.

int rt\_task\_join (RT\_TASK \*task)

Wait on the termination of a real-time task.

int rt\_task\_create (RT\_TASK \*task, const char \*name, int stksize, int prio, int mode) deprecated in kernel

Create a new real-time task.

 int rt\_task\_start (RT\_TASK \*task, void(\*fun)(void \*cookie), void \*cookie)

Start a real-time task.

• int rt task suspend (RT TASK \*task)

Suspend a real-time task.

• int rt\_task\_resume (RT\_TASK \*task)

Resume a real-time task.

• int rt task delete (RT TASK \*task)

Delete a real-time task.

• int rt\_task\_yield (void)

Manual round-robin.

• int rt\_task\_set\_periodic (RT\_TASK \*task, RTIME idate, RTIME period)

Make a real-time task periodic.

int rt\_task\_wait\_period (unsigned long \*overruns\_r)

Wait for the next periodic release point.

int rt\_task\_set\_priority (RT\_TASK \*task, int prio)

Change the base priority of a real-time task.

• int rt\_task\_sleep (RTIME delay)

Delay the calling task (relative).

• int rt\_task\_sleep\_until (RTIME date)

Delay the calling task (absolute).

int rt\_task\_unblock (RT\_TASK \*task)

Unblock a real-time task.

• int rt task inquire (RT TASK \*task, RT TASK INFO \*info)

Inquire about a real-time task.

int rt\_task\_notify (RT\_TASK \*task, rt\_sigset\_t signals)

Send signals to a task.

int rt\_task\_set\_mode (int clrmask, int setmask, int \*mode\_r)

Change task mode bits.

RT\_TASK \* rt\_task\_self (void)

Retrieve the current task.

int rt\_task\_slice (RT\_TASK \*task, RTIME quantum)

Set a task's round-robin quantum.

ssize\_t rt\_task\_send (RT\_TASK \*task, RT\_TASK\_MCB \*mcb\_s, RT\_T-ASK MCB \*mcb r, RTIME timeout)

Send a message to a task.

int rt\_task\_receive (RT\_TASK\_MCB \*mcb\_r, RTIME timeout)

Receive a message from a task.

int rt\_task\_reply (int flowid, RT\_TASK\_MCB \*mcb\_s)

Reply to a task.

static int rt\_task\_spawn (RT\_TASK \*task, const char \*name, int stksize, int prio, int mode, void(\*entry)(void \*cookie), void \*cookie)

Spawn a new real-time task.

int rt\_task\_same (RT\_TASK \*task1, RT\_TASK \*task2)

Compare two task descriptors.

#### 6.13.1 Detailed Description

Note

Copyright (C) 2004 Philippe Gerum < rpm@xenomai.org>

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT - ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

6.13.2 Typedef Documentation

6.13.2.1 typedef struct rt\_task\_info RT\_TASK\_INFO

Structure containing task-information useful to users.

See also

rt\_task\_inquire()

6.13.2.2 typedef struct rt\_task\_mcb RT\_TASK\_MCB

Structure used in passing messages between tasks.


See also

rt\_task\_send(), rt\_task\_reply(), rt\_task\_receive()


# 6.14 include/native/timer.h File Reference

This file is part of the Xenomai project.

Include dependency graph for timer.h:

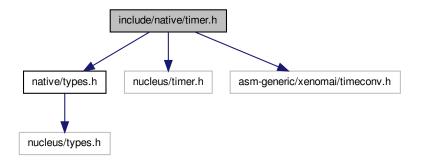

This graph shows which files directly or indirectly include this file:

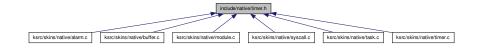

# **Data Structures**

• struct rt\_timer\_info

Structure containing timer-information useful to users.

# **Typedefs**

typedef struct rt\_timer\_info RT\_TIMER\_INFO
 Structure containing timer-information useful to users.

#### **Functions**

• SRTIME rt\_timer\_ns2tsc (SRTIME ns)

Convert nanoseconds to local CPU clock ticks.

SRTIME rt timer tsc2ns (SRTIME ticks)

Convert local CPU clock ticks to nanoseconds.

RTIME rt\_timer\_tsc (void)

Return the current TSC value.

RTIME rt timer read (void)

Return the current system time.

SRTIME rt\_timer\_ns2ticks (SRTIME ns)

Convert nanoseconds to internal clock ticks.

SRTIME rt\_timer\_ticks2ns (SRTIME ticks)

Convert internal clock ticks to nanoseconds.

• int rt\_timer\_inquire (RT\_TIMER\_INFO \*info)

Inquire about the timer.

void rt\_timer\_spin (RTIME ns)

Busy wait burning CPU cycles.

• int rt\_timer\_set\_mode (RTIME nstick)

Set the system clock rate.

#### 6.14.1 Detailed Description

This file is part of the Xenomai project.

Note

Copyright (C) 2004 Philippe Gerum < rpm@xenomai.org>


This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT - ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.


You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

# 6.15 include/native/types.h File Reference

Include dependency graph for types.h:

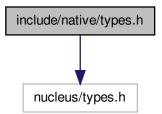

This graph shows which files directly or indirectly include this file:

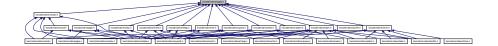

#### 6.15.1 Detailed Description

This file is part of the Xenomai project.

Note

Copyright (C) 2004 Philippe Gerum < rpm@xenomai.org>

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


This program is distributed in the hope that it will be useful, but WITHOUT - ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

## 6.16 ksrc/skins/native/module.c File Reference

This file is part of the Xenomai project.

Include dependency graph for module.c:

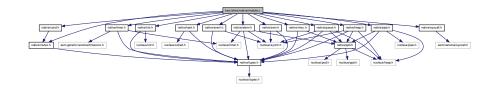

#### 6.16.1 Detailed Description

This file is part of the Xenomai project.

Note

Copyright (C) 2004 Philippe Gerum < rpm@xenomai.org>

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


This program is distributed in the hope that it will be useful, but WITHOUT - ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

# 6.17 ksrc/skins/native/syscall.c File Reference

This file is part of the Xenomai project.

Include dependency graph for syscall.c:

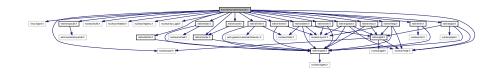

#### 6.17.1 Detailed Description

This file is part of the Xenomai project.

Note

Copyright (C) 2004 Philippe Gerum < rpm@xenomai.org>

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


This program is distributed in the hope that it will be useful, but WITHOUT - ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

#### 6.18 ksrc/skins/native/alarm.c File Reference

This file is part of the Xenomai project.

Include dependency graph for alarm.c:

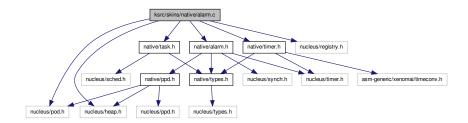

## **Functions**

 int rt\_alarm\_create (RT\_ALARM \*alarm, const char \*name, rt\_alarm\_t handler, void \*cookie)

Create an alarm object from kernel space.

- int rt\_alarm\_delete (RT\_ALARM \*alarm)
  - Delete an alarm.
- int rt\_alarm\_start (RT\_ALARM \*alarm, RTIME value, RTIME interval) Start an alarm.

- int rt\_alarm\_stop (RT\_ALARM \*alarm) Stop an alarm.
- int rt\_alarm\_inquire (RT\_ALARM \*alarm, RT\_ALARM\_INFO \*info)

  Inquire about an alarm.

#### 6.18.1 Detailed Description

This file is part of the Xenomai project.

Note

Copyright (C) 2004 Philippe Gerum < rpm@xenomai.org>

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


This program is distributed in the hope that it will be useful, but WITHOUT - ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

## 6.19 ksrc/skins/native/buffer.c File Reference

This file is part of the Xenomai project.

Include dependency graph for buffer.c:

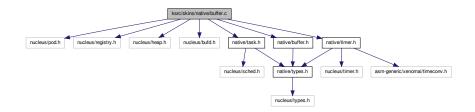

#### **Functions**

 int rt\_buffer\_create (RT\_BUFFER \*bf, const char \*name, size\_t bufsz, int mode) Create a buffer.

• int rt\_buffer\_delete (RT\_BUFFER \*bf)

Delete a buffer.

 ssize\_t rt\_buffer\_write (RT\_BUFFER \*bf, const void \*ptr, size\_t len, RTI-ME timeout)

Write to a buffer.

• ssize\_t rt\_buffer\_write\_until (RT\_BUFFER \*bf, const void \*ptr, size\_t len, RTIME timeout)

Write to a buffer (with absolute timeout date).

ssize\_t rt\_buffer\_read (RT\_BUFFER \*bf, void \*ptr, size\_t len, RTIME timeout)

Read from a buffer.

• int rt buffer clear (RT BUFFER \*bf)

Clear a buffer.

• int rt\_buffer\_inquire (RT\_BUFFER \*bf, RT\_BUFFER\_INFO \*info)

Inquire about a buffer.

#### 6.19.1 Detailed Description

This file is part of the Xenomai project.

Note

Copyright (C) 2008 Philippe Gerum < rpm@xenomai.org>


This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT - ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

#### 6.20 ksrc/skins/native/cond.c File Reference

Include dependency graph for cond.c:

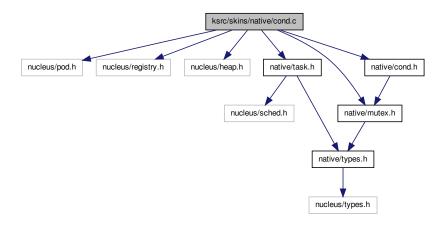

#### **Functions**

• int rt\_cond\_create (RT\_COND \*cond, const char \*name)

Create a condition variable.

• int rt\_cond\_delete (RT\_COND \*cond)

Delete a condition variable.

• int rt\_cond\_signal (RT\_COND \*cond)

Signal a condition variable.

int rt\_cond\_broadcast (RT\_COND \*cond)

Broadcast a condition variable.

 int rt\_cond\_wait (RT\_COND \*cond, RT\_MUTEX \*mutex, RTIME timeout)

Wait on a condition.

int rt\_cond\_wait\_until (RT\_COND \*cond, RT\_MUTEX \*mutex, RTIME timeout)

Wait on a condition (with absolute timeout date).

• int rt\_cond\_inquire (RT\_COND \*cond, RT\_COND\_INFO \*info)

Inquire about a condition variable.

# 6.20.1 Detailed Description

Note

Copyright (C) 2004 Philippe Gerum < rpm@xenomai.org>

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


This program is distributed in the hope that it will be useful, but WITHOUT - ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

## 6.21 ksrc/skins/native/event.c File Reference

This file is part of the Xenomai project.

Include dependency graph for event.c:

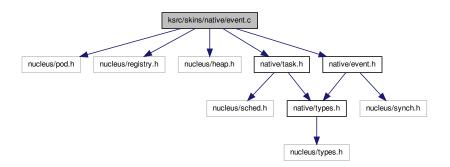

## **Functions**

• int rt\_event\_create (RT\_EVENT \*event, const char \*name, unsigned long ivalue, int mode)

Create an event group.

int rt\_event\_delete (RT\_EVENT \*event)

Delete an event group.

int rt\_event\_signal (RT\_EVENT \*event, unsigned long mask)
 Post an event group.

int rt\_event\_wait (RT\_EVENT \*event, unsigned long mask, unsigned long \*mask r, int mode, RTIME timeout)

Pend on an event group.

int rt\_event\_wait\_until (RT\_EVENT \*event, unsigned long mask, unsigned long \*mask\_r, int mode, RTIME timeout)

Pend on an event group (with absolute timeout date).

int rt\_event\_clear (RT\_EVENT \*event, unsigned long mask, unsigned long \*mask\_r)

Clear an event group.

• int rt\_event\_inquire (RT\_EVENT \*event, RT\_EVENT\_INFO \*info)

Inquire about an event group.

#### 6.21.1 Detailed Description

This file is part of the Xenomai project.

Note

Copyright (C) 2004 Philippe Gerum < rpm@xenomai.org>

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


This program is distributed in the hope that it will be useful, but WITHOUT - ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

# 6.22 ksrc/skins/native/heap.c File Reference

This file is part of the Xenomai project.

Include dependency graph for heap.c:

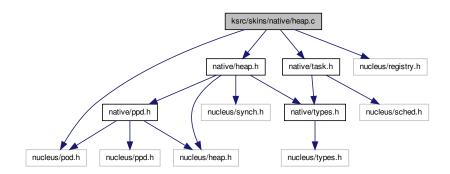

#### **Functions**

• int rt\_heap\_create (RT\_HEAP \*heap, const char \*name, size\_t heapsize, int mode)

Create a memory heap or a shared memory segment.

- int rt\_heap\_delete (RT\_HEAP \*heap)
  - Delete a real-time heap.
- int rt\_heap\_alloc (RT\_HEAP \*heap, size\_t size, RTIME timeout, void \*\*blockp)

Allocate a block or return the single segment base.

- int rt\_heap\_free (RT\_HEAP \*heap, void \*block) Free a block.
- int rt\_heap\_inquire (RT\_HEAP \*heap, RT\_HEAP\_INFO \*info)

  Inquire about a heap.

#### 6.22.1 Detailed Description

This file is part of the Xenomai project.

Note

Copyright (C) 2004 Philippe Gerum < rpm@xenomai.org>

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT - ANY WARRANTY; without even the implied warranty of MERCHANTABILITY


or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

#### 6.23 ksrc/skins/native/intr.c File Reference

This file is part of the Xenomai project.

Include dependency graph for intr.c:

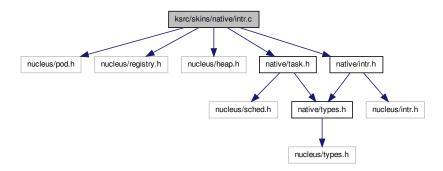

### **Functions**

• int rt\_intr\_create (RT\_INTR \*intr, const char \*name, unsigned irq, rt\_isr\_t isr, rt\_iack\_t iack, int mode)

Create an interrupt object from kernel space.

• int rt\_intr\_delete (RT\_INTR \*intr)

Delete an interrupt object.

• int rt\_intr\_enable (RT\_INTR \*intr)

Enable an interrupt object.

• int rt\_intr\_disable (RT\_INTR \*intr)

Disable an interrupt object.

• int rt\_intr\_inquire (RT\_INTR \*intr, RT\_INTR\_INFO \*info)

Inquire about an interrupt object.

#### 6.23.1 Detailed Description

This file is part of the Xenomai project.

Note

Copyright (C) 2005 Philippe Gerum < rpm@xenomai.org>

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


This program is distributed in the hope that it will be useful, but WITHOUT - ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

#### 6.24 ksrc/skins/native/mutex.c File Reference

This file is part of the Xenomai project.

Include dependency graph for mutex.c:

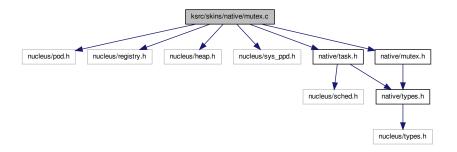

#### **Functions**

- int rt\_mutex\_create (RT\_MUTEX \*mutex, const char \*name)

  Create a mutex.
- int rt\_mutex\_delete (RT\_MUTEX \*mutex)

Delete a mutex.

- int rt\_mutex\_acquire (RT\_MUTEX \*mutex, RTIME timeout)
   Acquire a mutex.
- int rt\_mutex\_acquire\_until (RT\_MUTEX \*mutex, RTIME timeout)

  Acquire a mutex (with absolute timeout date).

- int rt\_mutex\_release (RT\_MUTEX \*mutex)

  Unlock mutex.
- int rt\_mutex\_inquire (RT\_MUTEX \*mutex, RT\_MUTEX\_INFO \*info)

  Inquire about a mutex.

#### 6.24.1 Detailed Description

This file is part of the Xenomai project.

Note

Copyright (C) 2004 Philippe Gerum < rpm@xenomai.org>

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


This program is distributed in the hope that it will be useful, but WITHOUT - ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

# 6.25 ksrc/skins/native/pipe.c File Reference

This file is part of the Xenomai project.

Include dependency graph for pipe.c:

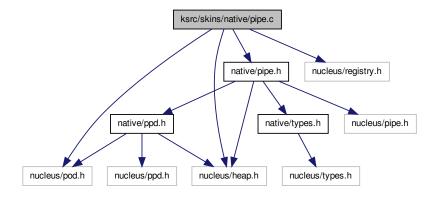

#### **Functions**

int rt\_pipe\_create (RT\_PIPE \*pipe, const char \*name, int minor, size\_t poolsize)

Create a message pipe.

• int rt\_pipe\_delete (RT\_PIPE \*pipe)

Delete a message pipe.

ssize\_t rt\_pipe\_receive (RT\_PIPE \*pipe, RT\_PIPE\_MSG \*\*msgp, RTIME timeout)

Receive a message from a pipe.

 ssize\_t rt\_pipe\_read (RT\_PIPE \*pipe, void \*buf, size\_t size, RTIME timeout)

Read a message from a pipe.

ssize\_t rt\_pipe\_send (RT\_PIPE \*pipe, RT\_PIPE\_MSG \*msg, size\_t size, int mode)

Send a message through a pipe.

• ssize\_t rt\_pipe\_write (RT\_PIPE \*pipe, const void \*buf, size\_t size, int mode)

Write a message to a pipe.

- ssize\_t rt\_pipe\_stream (RT\_PIPE \*pipe, const void \*buf, size\_t size) Stream bytes to a pipe.
- RT\_PIPE\_MSG \* rt\_pipe\_alloc (RT\_PIPE \*pipe, size\_t size)

Allocate a message pipe buffer.

• int rt pipe free (RT PIPE \*pipe, RT PIPE MSG \*msg)

Free a message pipe buffer.

• int rt\_pipe\_flush (RT\_PIPE \*pipe, int mode)

Flush the i/o queues associated with the kernel endpoint of a message pipe.

int rt\_pipe\_monitor (RT\_PIPE \*pipe, int(\*fn)(RT\_PIPE \*pipe, int event, long arg))

Monitor a message pipe asynchronously.

#### 6.25.1 Detailed Description

This file is part of the Xenomai project.

Note

Copyright (C) 2004 Philippe Gerum < rpm@xenomai.org>

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT - ANY WARRANTY; without even the implied warranty of MERCHANTABILITY


or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

# 6.26 ksrc/skins/native/queue.c File Reference

This file is part of the Xenomai project.

Include dependency graph for queue.c:

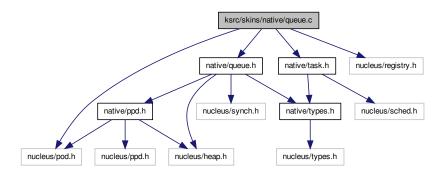

#### **Functions**

 int rt\_queue\_create (RT\_QUEUE \*q, const char \*name, size\_t poolsize, size t qlimit, int mode)

Create a message queue.

• int rt queue delete (RT QUEUE \*q)

Delete a message queue.

void \* rt\_queue\_alloc (RT\_QUEUE \*q, size\_t size)

Allocate a message queue buffer.

int rt\_queue\_free (RT\_QUEUE \*q, void \*buf)

Free a message queue buffer.

- int rt\_queue\_send (RT\_QUEUE \*q, void \*mbuf, size\_t size, int mode)

  Send a message to a queue.
- int rt\_queue\_write (RT\_QUEUE \*q, const void \*buf, size\_t size, int mode)

Write a message to a queue.

ssize t rt queue receive (RT QUEUE \*q, void \*\*bufp, RTIME timeout)

Receive a message from a queue.

 ssize\_t rt\_queue\_receive\_until (RT\_QUEUE \*q, void \*\*bufp, RTIME timeout)

Receive a message from a queue (with absolute timeout date).

ssize\_t rt\_queue\_read (RT\_QUEUE \*q, void \*buf, size\_t size, RTIME timeout)

Read a message from a queue.

 ssize\_t rt\_queue\_read\_until (RT\_QUEUE \*q, void \*buf, size\_t size, RTI-ME timeout)

Read a message from a queue (with absolute timeout date).

• int rt\_queue\_flush (RT\_QUEUE \*q)

Flush a message queue.

• int rt\_queue\_inquire (RT\_QUEUE \*q, RT\_QUEUE\_INFO \*info)

Inquire about a message queue.

#### 6.26.1 Detailed Description

This file is part of the Xenomai project.

Note

Copyright (C) 2004 Philippe Gerum < rpm@xenomai.org>

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


This program is distributed in the hope that it will be useful, but WITHOUT - ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

#### 6.27 ksrc/skins/native/sem.c File Reference

This file is part of the Xenomai project.

Include dependency graph for sem.c:

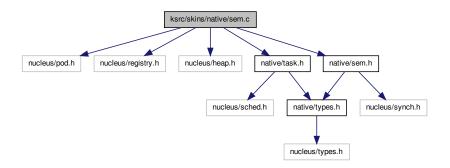

#### **Functions**

• int rt\_sem\_create (RT\_SEM \*sem, const char \*name, unsigned long icount, int mode)

Create a counting semaphore.

• int rt\_sem\_delete (RT\_SEM \*sem)

Delete a semaphore.

• int rt\_sem\_p (RT\_SEM \*sem, RTIME timeout)

Pend on a semaphore.

• int rt\_sem\_p\_until (RT\_SEM \*sem, RTIME timeout)

Pend on a semaphore (with absolute timeout date).

• int rt\_sem\_v (RT\_SEM \*sem)

Signal a semaphore.

• int rt\_sem\_broadcast (RT\_SEM \*sem)

Broadcast a semaphore.

• int rt sem inquire (RT SEM \*sem, RT SEM INFO \*info)

Inquire about a semaphore.

### 6.27.1 Detailed Description

This file is part of the Xenomai project.

Note

Copyright (C) 2004 Philippe Gerum < rpm@xenomai.org>

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


This program is distributed in the hope that it will be useful, but WITHOUT - ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

### 6.28 ksrc/skins/native/task.c File Reference

This file is part of the Xenomai project.

Include dependency graph for task.c:

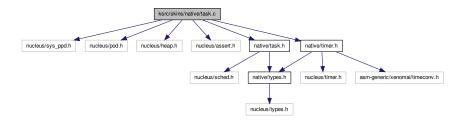

#### **Functions**

• int rt\_task\_create (RT\_TASK \*task, const char \*name, int stksize, int prio, int mode)

Create a new real-time task.

int rt\_task\_start (RT\_TASK \*task, void(\*entry)(void \*cookie), void \*cookie)

Start a real-time task.

• int rt\_task\_suspend (RT\_TASK \*task)

Suspend a real-time task.

• int rt\_task\_resume (RT\_TASK \*task)

Resume a real-time task.

• int rt task delete (RT TASK \*task)

Delete a real-time task.

int rt\_task\_yield (void)

Manual round-robin.

int rt\_task\_set\_periodic (RT\_TASK \*task, RTIME idate, RTIME period)

Make a real-time task periodic.

• int rt task wait period (unsigned long \*overruns r)

Wait for the next periodic release point.

• int rt\_task\_set\_priority (RT\_TASK \*task, int prio)

Change the base priority of a real-time task.

int rt\_task\_sleep (RTIME delay)

Delay the calling task (relative).

• int rt task sleep until (RTIME date)

Delay the calling task (absolute).

int rt\_task\_unblock (RT\_TASK \*task)

Unblock a real-time task.

• int rt task inquire (RT TASK \*task, RT TASK INFO \*info)

Inquire about a real-time task.

• int rt\_task\_add\_hook (int type, void(\*routine)(void \*cookie))

Install a task hook.

• int rt\_task\_remove\_hook (int type, void(\*routine)(void \*cookie))

Remove a task hook.

• int rt\_task\_catch (void(\*handler)(rt\_sigset\_t))

Install a signal handler.

int rt\_task\_notify (RT\_TASK \*task, rt\_sigset\_t signals)

Send signals to a task.

• int rt\_task\_set\_mode (int clrmask, int setmask, int \*mode\_r)

Change task mode bits.

RT\_TASK \* rt\_task\_self (void)

Retrieve the current task.

• int rt\_task\_slice (RT\_TASK \*task, RTIME quantum)

Set a task's round-robin quantum.

ssize\_t rt\_task\_send (RT\_TASK \*task, RT\_TASK\_MCB \*mcb\_s, RT\_T-ASK\_MCB \*mcb\_r, RTIME timeout)

Send a message to a task.

int rt\_task\_receive (RT\_TASK\_MCB \*mcb\_r, RTIME timeout)

Receive a message from a task.

int rt\_task\_reply (int flowid, RT\_TASK\_MCB \*mcb\_s)

Reply to a task.

#### 6.28.1 Detailed Description

This file is part of the Xenomai project.

Note

Copyright (C) 2004 Philippe Gerum < rpm@xenomai.org>

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.


This program is distributed in the hope that it will be useful, but WITHOUT - ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

### 6.29 ksrc/skins/native/timer.c File Reference

This file is part of the Xenomai project.

Include dependency graph for timer.c:

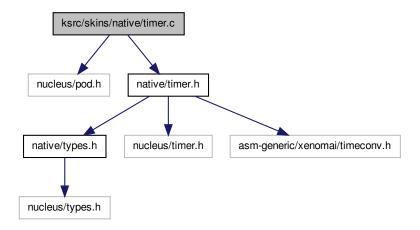

#### **Functions**

• int rt\_timer\_inquire (RT\_TIMER\_INFO \*info)

Inquire about the timer.

void rt\_timer\_spin (RTIME ns)

Busy wait burning CPU cycles.

• int rt\_timer\_set\_mode (RTIME nstick)

Set the system clock rate.

#### 6.29.1 Detailed Description

This file is part of the Xenomai project.

Note

Copyright (C) 2004 Philippe Gerum < rpm@xenomai.org>

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT - ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

# **Chapter 7**

# **Example Documentation**

# 7.1 bound\_task.c

```
#include <sys/mman.h>
#include <native/task.h>
#define SIGNALS (0x1|0x4) /* Signals to send */
RT_TASK task_desc;
int main (int argc, char *argv[])
{
   int err;
   mlockall(MCL_CURRENT|MCL_FUTURE);
   /* Bind to a task which has been created elsewhere, either in kernel or user-space. The call will block us until such task is created with the expected name. */
   err = rt_task_bind(&task_desc, "SomeTaskName", TM_NONBLOCK);
   if (!err)
        /* Send signals to the bound task */
        rt_task_notify(&task_desc, SIGNALS);
        /* ... */
}
```

## 7.2 cond\_var.c

```
#include <native/mutex.h>
#include <native/cond.h>
RT_COND cond_desc;
RT_MUTEX mutex_desc;
```

```
int shared_event = 0;
void foo (void)
   int err;
    /* Create a condition variable and a mutex guarding it; we could
       also have attempted to bind to some pre-existing objects, using
       rt_cond_bind() and rt_mutex_bind() instead of creating them. */
    err = rt_mutex_create(&mutex_desc,"MyCondMutex");
    err = rt_cond_create(&cond_desc,"MyCondVar");
    /* Now, wait for some task to post the shared event... */
    rt_mutex_acquire(&mutex_desc,TM_INFINITE);
    while (!shared_event && !err)
        err = rt_cond_wait(&cond_desc,&mutex_desc,TM_INFINITE);
   rt_mutex_release(&mutex_desc);
    /* ... */
}
void bar (void)
    /* ... */
    /* Post the shared event. */
    rt_mutex_acquire(&mutex_desc,TM_INFINITE);
    shared_event = 1;
    rt_cond_signal(&cond_desc);
    rt_mutex_release(&mutex_desc);
    /* ... */
}
void cleanup (void)
   rt_cond_delete(&cond_desc);
   rt_mutex_delete(&mutex_desc);
}
7.3
      event_flags.c
#include <native/event.h>
#define EVENT_INIT
                                        /* No flags present at init */
                                       /* Tasks will wait by priority order */
#define EVENT_MODE
                          EV_PRIO
#define EVENT_WAIT_MASK (0x1|0x2|0x4) /* List of monitored events */
#define EVENT_SIGNAL_MASK (0x2)
                                        /* List of events to send */
```

```
RT_EVENT ev_desc;
void foo (void)
    unsigned long mask_ret;
   int err;
    /* Create an event flag; we could also have attempted to bind to
       some pre-existing object, using rt_event_bind() instead of
       creating it. */
    err = rt_event_create(&ev_desc,
                          "MyEventFlagGroup",
                          EVENT_INIT,
                          EVENT_MODE);
    /* Now, wait for some task to post some event flags... */
    err = rt_event_wait(&ev_desc,
                        EVENT_WAIT_MASK,
                        &mask_ret, EV_ANY, /* Disjunctive wait */
                        TM_INFINITE);
    /* ... */
}
void bar (void)
   /* ... */
    /* Post some events. */
   rt_event_signal(&ev_desc,EVENT_SIGNAL_MASK);
    /* ... */
}
void cleanup (void)
   rt_event_delete(&ev_desc);
     kernel_task.c
7.4
```

```
#include <native/task.h>
#define TASK_PRIO 99
                                 /* Highest RT priority */
#define TASK_MODE T_FPU|T_CPU(0) /* Uses FPU, bound to CPU #0 */
                                  /* Stack size (in bytes) */
#define TASK_STKSZ 4096
RT_TASK task_desc;
void task_body (void *cookie)
{
```

```
for (;;) { /* ... "cookie" should be NULL ... */
}
int init_module (void)
    int err;
    /* · · · · */
    err = rt_task_create(&task_desc,
                          "MyTaskName",
                          TASK_STKSZ,
                          TASK_PRIO,
                          TASK_MODE);
    if (!err)
        rt_task_start(&task_desc,&task_body,NULL);
    /* ... */
}
void cleanup_module (void)
    rt_task_delete(&task_desc);
```

# 7.5 local\_heap.c

```
#include <native/heap.h>
#define HEAP_SIZE (256*1024)
#define HEAP_MODE 0
                                /* Local heap. */
RT_HEAP heap_desc;
int init_module (void)
   void *block;
    int err;
    /* Create a 256Kb heap usable for dynamic memory allocation of
      variable-size blocks in kernel space. */
    err = rt_heap_create(&heap_desc,"MyHeapName",HEAP_SIZE,HEAP_MODE);
   if (err)
        fail();
    /st Request a 16-bytes block, asking for a non-blocking call since
      only Xenomai tasks may block. */
    err = rt_heap_alloc(&heap_desc,16,TM_NONBLOCK,&block);
    if (err)
       goto no_memory;
```

```
/* Free the block: */
   rt_heap_free(&heap_desc,block);
   /* ... */
}
void cleanup_module (void)
{
   rt_heap_delete(&heap_desc);
}
```

# 7.6 msg\_queue.c

```
#include <sys/mman.h>
#include <stdio.h>
#include <string.h>
#include <native/task.h>
#include <native/queue.h>
#define TASK_PRIO 99 /* Highest RT priority */
#define TASK_MODE 0 /* No flags */
#define TASK_STKSZ 0 /* Stack size (use default one) */
RT_QUEUE q_desc;
RT_TASK task_desc;
void consumer (void *cookie)
    ssize_t len;
    void *msg;
    int err;
    /st Bind to a queue which has been created elsewhere, either in
       kernel or user-space. The call will block us until such queue
       is created with the expected name. The queue should have been
       created with the \ensuremath{\mathsf{Q}}\xspace_{\ensuremath{\mathsf{SHARED}}} mode set, which is implicit when
       creation takes place in user-space. */
    err = rt_queue_bind(&q_desc, "SomeQueueName", TM_INFINITE);
   if (err)
        fail();
    /* Collect each message sent to the queue by the queuer() routine,
       until the queue is eventually removed from the system by a call
       to rt_queue_delete(). */
    while ((len = rt_queue_receive(&q_desc,&msg,TM_INFINITE)) > 0)
        printf("received message> len=\%d bytes, ptr=\%p, s=\%s\n",
               len,msg,(const char *)msg);
        rt_queue_free(&q_desc,msg);
    /st We need to unbind explicitly from the queue in order to
       properly release the underlying memory mapping. Exiting the
```

```
process unbinds all mappings automatically. */
    rt_queue_unbind(&q_desc);
    if (len != -EIDRM)
        /* We received some unexpected error notification. */
        fail();
    /* ... */
}
int main (int argc, char *argv[])
    static char *messages[] = { "hello", "world", NULL };
    int n, len;
    void *msg;
    mlockall(MCL_CURRENT|MCL_FUTURE);
    err = rt_task_create(&task_desc,
                         "MyTaskName",
                         TASK_STKSZ,
                         TASK_PRIO,
                         TASK_MODE);
   if (!err)
       rt_task_start(&task_desc,&task_body,NULL);
    for (n = 0; messages[n] != NULL; n++)
        len = strlen(messages[n]) + 1;
        /* Get a message block of the right size. */
       msg = rt_queue_alloc(&q_desc,len);
        if (!msg)
            /* No memory available. */
            fail();
       strcpy(msg,messages[n]);
       rt_queue_send(&q_desc,msg,len,Q_NORMAL);
    rt_task_delete(&task_desc);
7.7 mutex.c
```

```
#include <native/mutex.h>
RT_MUTEX mutex_desc;
int main (int argc, char *argv[])
    int err;
    /* Create a mutex; we could also have attempted to bind to some
```

7.8 pipe.c 225

```
pre-existing object, using rt_mutex_bind() and rt_mutex_bind()
       instead of creating it. In any case, priority inheritance is
       automatically enforced for mutual exclusion locks. */
   err = rt_mutex_create(&mutex_desc,"MyMutex");
    /st Now, grab the mutex lock, run the critical section, then
       release the lock: */
   rt_mutex_acquire(&mutex_desc,TM_INFINITE);
   /* ... Critical section ... */
   rt_mutex_release(&mutex_desc);
    /* ... */
}
void cleanup (void)
   rt_mutex_delete(&mutex_desc);
      pipe.c
7.8
#include <sys/types.h>
#include <fcntl.h>
#include <string.h>
#include <stdio.h>
#include <native/pipe.h>
#define PIPE_MINOR 0
/* User-space side */
int pipe_fd;
int main(int argc, char *argv[])
        char devname[32], buf[16];
        /* ··· */
        sprintf(devname, "/dev/rtp%d", PIPE_MINOR);
        pipe_fd = open(devname, O_RDWR);
        if (pipe_fd < 0)
                fail();
        /* Wait for the prompt string "Hello"... */
        read(pipe_fd, buf, sizeof(buf));
        /* Then send the reply string "World": */
        write(pipe_fd, "World", sizeof("World"));
```

/\* · · · \*/

}

```
void cleanup(void)
        close(pipe_fd);
}
/* Kernel-side */
#define TASK_PRIO 0
                                /* Highest RT priority */
#define TASK_MODE T_FPU|T_CPU(0) /* Uses FPU, bound to CPU #0 */
#define TASK_STKSZ 4096
                          /* Stack size (in bytes) */
RT_TASK task_desc;
RT_PIPE pipe_desc;
void task_body(void)
{
       RT_PIPE_MSG *msgout, *msgin;
        int err, len, n;
        for (;;) {
               /* ... */
               len = sizeof("Hello");
                /* Get a message block of the right size in order to
                  initiate the message-oriented dialog with the
                   user-space process. Sending a continuous stream of
                   bytes is also possible using rt_pipe_stream(), in
                   which case no message buffer needs to be
                  preallocated. */
               msgout = rt_pipe_alloc(len);
               if (!msgout)
                        fail();
                /* Send prompt message "Hello" (the output buffer will be freed
                   automatically)... */
                strcpy(RT_PIPE_MSGPTR(msgout), "Hello");
               rt_pipe_send(&pipe_desc, msgout, len, P_NORMAL);
                /* Then wait for the reply string "World": */
               n = rt_pipe_receive(&pipe_desc, &msgin, TM_INFINITE);
               if (n < 0) {
                        printf("receive error> errno=%d\n", n);
                        continue;
               }
               if (n == 0) {
                        if (msg == NULL) {
                                printf("pipe closed by peer while reading\n");
                                continue;
                        }
                        printf("empty message received\n");
               } else
                        printf("received msg> %s, size=%d\n", P_MSGPTR(msg),
                               P_MSGSIZE(msg));
                /* Free the received message buffer. */
               rt_pipe_free(&pipe_desc, msgin);
```

```
/* ··· */
        }
init init_module(void)
{
        int err;
        err = rt_pipe_create(&pipe_desc, NULL, PIPE_MINOR);
        if (err)
                fail();
        /* · · · · */
        err = rt_task_create(&task_desc,
                              "MyTaskName", TASK_STKSZ, TASK_PRIO, TASK_MODE);
        if (!err)
                rt_task_start(&task_desc, &task_body, NULL);
        /* ... */
void cleanup_module(void)
{
        rt_pipe_delete(&pipe_desc);
        rt_task_delete(&task_desc);
}
```

# 7.9 semaphore.c

```
#include <native/sem.h>
                       /* Initial semaphore count */
#define SEM_INIT 1
#define SEM_MODE S_FIFO /* Wait by FIFO order */
RT_SEM sem_desc;
void foo (void)
   int err;
   /* Create a semaphore; we could also have attempted to bind to
       some pre-existing object, using rt_sem_bind() instead of
       creating it. */
   err = rt_sem_create(&sem_desc,"MySemaphore",SEM_INIT,SEM_MODE);
    for (;;) {
        /* Now, wait for a semaphore unit... */
        rt_sem_p(&sem_desc,TM_INFINITE);
        /* · · · · */
        /* then release it. */
        rt_sem_v(&sem_desc);
```

```
/* ... */
}

void cleanup (void)

{
   rt_sem_delete(&sem_desc);
}
```

### 7.10 shared\_mem.c

```
#include <native/heap.h>
RT_HEAP heap_desc;
void *shared_mem; /* Start address of the shared memory segment */
/* A shared memory segment with Xenomai is implemented as a mappable
  real-time heap object managed as a single memory block. In this
  mode, the allocation routine always returns the start address of
   the heap memory to all callers, and the free routine always leads
  to a no-op. */
int main (int argc, char *argv[])
   int err;
   /st Bind to a shared heap which has been created elsewhere, either
       in kernel or user-space. Here we cannot wait and the heap must
      be available at once, since the caller is not a Xenomai-enabled
      thread. The heap should have been created with the H_SHARED
   err = rt_heap_bind(&heap_desc, "SomeShmName", TM_NONBLOCK);
   if (err)
        fail();
   /* Get the address of the shared memory segment. The "size" and
       "timeout" arguments are unused here. */
   rt_heap_alloc(&heap_desc,0,TM_NONBLOCK,&shared_mem);
    /* ... */
}
void cleanup (void)
{
    /st We need to unbind explicitly from the heap in order to
      properly release the underlying memory mapping. Exiting the
      process unbinds all mappings automatically. */
   rt_heap_unbind(&heap_desc);
}
```

7.11 sigxcpu.c 229

# 7.11 sigxcpu.c

```
#include <unistd.h>
#include <stdlib.h>
#include <stdio.h>
#include <string.h>
#include <signal.h>
#include <getopt.h>
#include <execinfo.h>
#include <native/task.h>
RT_TASK task;
void task_body (void *cookie)
    /* Ask Xenomai to warn us upon switches to secondary mode. */
   rt_task_set_mode(0, T_WARNSW, NULL);
    /* A real-time task always starts in primary mode. */
    for (;;) {
        rt_task_sleep(1000000000);
        /* Running in primary mode... */
       printf("Switched to secondary mode\n");
        /* ...printf() => write(2): we have just switched to secondary
          mode: SIGXCPU should have been sent to us by now. */
}
void warn_upon_switch(int sig __attribute__((unused)))
   void *bt[32];
    int nentries;
    /* Dump a backtrace of the frame which caused the switch to
      secondary mode: */
   nentries = backtrace(bt, sizeof(bt) / sizeof(bt[0]));
    backtrace_symbols_fd(bt,nentries,fileno(stdout));
}
int main (int argc, char **argv)
    int err;
    signal(SIGXCPU, warn_upon_switch);
    err = rt_task_create(&task,"mytask",0,1,T_FPU);
    if (err)
        fprintf(stderr,"failed to create task, code %d\n",err);
        return 0;
    err = rt_task_start(&task,&task_body,NULL);
    if (err)
        fprintf(stderr,"failed to start task, code %d\n",err);
```

```
return 0;
}
pause();
return 0;
}
```

# 7.12 trivial-periodic.c

```
#include <stdio.h>
#include <signal.h>
#include <unistd.h>
#include <sys/mman.h>
#include <native/task.h>
#include <native/timer.h>
RT_TASK demo_task;
/* NOTE: error handling omitted. */
void demo(void *arg)
{
       RTIME now, previous;
        * Arguments: &task (NULL=self),
                      start time,
                     period (here: 1 s)
        rt_task_set_periodic(NULL, TM_NOW, 1000000000);
       previous = rt_timer_read();
        while (1) {
                rt_task_wait_period(NULL);
                now = rt_timer_read();
                * NOTE: printf may have unexpected impact on the timing of
                         your program. It is used here in the critical loop
                         only for demonstration purposes.
                printf("Time since last turn: %ld.%06ld ms\n",
                       (long)(now - previous) / 1000000,
                       (long)(now - previous) % 1000000);
                       previous = now;
       }
}
void catch_signal(int sig)
{
}
int main(int argc, char* argv[])
{
        signal(SIGTERM, catch_signal);
        signal(SIGINT, catch_signal);
```

```
/* Avoids memory swapping for this program */
mlockall(MCL_CURRENT|MCL_FUTURE);

/*
    * Arguments: &task,
    * name,
    * stack size (0=default),
    * priority,
    * mode (FPU, start suspended, ...)
    */
rt_task_create(&demo_task, "trivial", 0, 99, 0);

/*
    * Arguments: &task,
    * task function,
    * function argument
    */
rt_task_start(&demo_task, &demo, NULL);

pause();
rt_task_delete(&demo_task);
}
```

## 7.13 user\_alarm.c

```
#include <sys/mman.h>
#include <native/task.h>
#include <native/alarm.h>
#define TASK_PRIO 99 /* Highest RT priority */
#define TASK_MODE 0 /* No flags */
#define TASK_STKSZ 0 /* Stack size (use default one) */
#define ALARM_VALUE
                          500000 /* First shot at now + 500 us */
#define ALARM_INTERVAL 250000 /* Period is 250 us */
RT_ALARM alarm_desc;
RT_TASK server_desc;
void alarm_server (void *cookie)
    for (;;) {
        /* Wait for the next alarm to trigger. */
        err = rt_alarm_wait(&alarm_desc);
        if (!err) {
            /* Process the alarm shot. */
        }
    }
int main (int argc, char *argv[])
     int err;
```

```
mlockall(MCL_CURRENT|MCL_FUTURE);
    /* ... */
    err = rt_alarm_create(&alarm_desc,"MyAlarm");
    err = rt_alarm_start(&alarm_desc,
                         ALARM_VALUE,
                         ALARM_INTERVAL);
    /* ··· */
    err = rt_task_create(&server_desc,
                         "MyAlarmServer",
                         TASK_STKSZ,
                         TASK_PRIO,
                         TASK_MODE);
    if (!err)
       rt_task_start(&server_desc,&alarm_server,NULL);
    /* ... */
}
void cleanup (void)
   rt_alarm_delete(&alarm_desc);
   rt_task_delete(&server_desc);
```

# 7.14 user\_irq.c

```
#include <sys/mman.h>
#include <native/task.h>
#include <native/intr.h>
#define IRQ_NUMBER 7 /* Intercept interrupt #7 */
#define TASK_PRIO 99 /* Highest RT priority */
#define TASK_MODE 0 /* No flags */
#define TASK_STKSZ 0 /* Stack size (use default one) */
RT_INTR intr_desc;
RT_TASK server_desc;
void irq_server (void *cookie)
    for (;;) {
       /* Wait for the next interrupt on channel #7. */
       err = rt_intr_wait(&intr_desc,TM_INFINITE);
       if (!err) {
            /* Process interrupt. */
    }
}
```

7.15 user\_task.c 233

```
int main (int argc, char *argv[])
    int err;
    mlockall(MCL_CURRENT|MCL_FUTURE);
    /* · · · */
    err = rt_intr_create(&intr_desc,"MyIrq",IRQ_NUMBER,0);
    /* ··· */
    err = rt_task_create(&server_desc,
                          "MyIrqServer",
                          {\tt TASK\_STKSZ},
                          TASK_PRIO,
                          TASK_MODE);
    if (!err)
       rt_task_start(&server_desc,&irq_server,NULL);
    /* · · · */
}
void cleanup (void)
    rt_intr_delete(&intr_desc);
    rt_task_delete(&server_desc);
```

#### 7.15 user\_task.c

```
#include <sys/mman.h>
#include <native/task.h>

#define TASK_PRIO 99 /* Highest RT priority */
#define TASK_MODE 0 /* No flags */
#define TASK_STKSZ 0 /* Stack size (use default one) */
RT_TASK task_desc;

void task_body (void *cookie)

{
    for (;;) {
        /* ... "cookie" should be NULL ... */
    }
}

int main (int argc, char *argv[])

{
    int err;
    mlockall(MCL_CURRENT|MCL_FUTURE);
    /* ... */
```