HSPEXP+ USER'S MANUAL VERSION 3.0 BETA

PREPARED BY

Paul B. Duda Anurag Mishra Anthony S. Donigian, Jr.

RESPEC 3824 Jet Drive Rapid City, South Dakota 57703

PREPARED FOR

Minnesota Pollution Control Agency 520 Lafayette Road St. Paul, MN 55155

NOVEMBER 2018

Project Number 2986 RSI-2770





DISCLAIMER

HSPEXP+ has been developed by RESPEC to support hydrology and water quality calibration of watershed models that are developed using Hydrologic Simulation Program-Fortran (HSPF) and conduct quality assurance and quality control of the models. This project is open source and released free of cost to support modelers who are using HSPF. This project is under active development, and as a result, we welcome any user comments, suggestions, and recommendations for implementation in future versions. However, no active support is available for HSPEXP+ by RESPEC or any other agency. RESPEC and the authors do not assume any responsibility for system operation, output, interpretation, or use.

ACKNOWLEDGEMENTS

HSPEXP+ is being developed by RESPEC to support watershed modeling projects. Version 3.0 has been developed by a RESPEC team including Mr. Paul Duda, Dr. Anurag Mishra, Mr. Paul Hummel, Mr. Tony Donigian, Mr. Seth Kenner, Mr. Chris Lupo, and Mr. Geoff Kramer. Dr. Anurag Mishra was the project manager and responsible for the project design, implementation, and testing prior to version 3.0. Technical and administrative guidance for earlier versions was provided by Mr. Paul Duda, Mr. Mark Gray, Mr. Brian Bicknell, and Mr. Tony Donigian. HSPEXP+ is under continuous development, and new capabilities are added to meet the priority needs of the user community, as additional resources are made available.

HSPEXP+ is an updated, refined, and expanded version of HSPEXP, originally developed by the USGS [Lumb et al., 1994]. It was developed as an 'expert system' for HSPF watershed model hydrologic calibration, hence the name "HSPEXP."

Dr. Rebecca Zeckoski from Virginia Tech assisted in developing the initial user interface and coding the expert guidance. Support for Dr. Zeckoski's contributions was made possible by the Center of Watershed Studies within Virginia Tech's Biological System Engineering Department.

The Clean Water Fund of Minnesota has supported the development of HSPEXP+ and the versions following the release of HSPEXP+1.0 in February 2015.

RESPEC thanks the modelers who provide valuable feedback to the HSPEXP+ project.

USER ASSISTANCE AND FEEDBACK

As indicated earlier, active support for HSPEXP+ is not available; however, feedback may be provided by email (hspexpplus@respec.com).



GLOSSARY OF TERMS

Term	Definition
HSPF	Hydrologic Simulation Program – Fortran
HSPEXP	EXPERT system for Calibration of HSPF
HSPEXP+	Enhanced Expert System for Calibration of HSPF
BASINS	Better Assessment Science Integrating point and Nonpoint Sources
UCI	User's Control Input
WINHSPF	Windows interface for HSPF
EXS	BASINS-Specification File
PERLND	Pervious land operation in UCI
PQUAL	Module for simulating Quality constituent on PERLND
IMPLND	Impervious Land operation in UCI
IQUAL	Module for simulating quality constituent on IMPLND
RCHRES	Operation to simuate rivers and lakes in UCI
ECH	ECHO file output from the HSPF model run.
EXT TARGETS	External Targets block in UCI file that directs the model data to output to different formats
WDM	Watershed Data Management. A binary format for saving time-series data.
SCHEMATIC	A block in UCI file that directs how the different operations connect to each other to pass different time series
MASS-LINK	A block in UCI file that directs how the time series are passed among operations
GEN-INFO	General Information block in UCI that describes the properties of land and RCHRES operations
CSV	Comma-Separated Values File Format
PNG	Portable Network Graphics File Format
EMF	Enhanced metafile format
JSON	Javascript Object Notation (JSON) format
DBF	dBase database file



TABLE OF CONTENTS

1.0	INTR	ODUCT	ON	1
2.0	CAPA	ABILITIE	S OF HSPEXP+	3
	2.1	HYDRO	DLOGIC CALIBRATION	3
	2.2	WATER	QUALITY CALIBRATION	4
	2.3	AUTON	MATED GRAPH GENERATION	4
	2.4	MULTI	SIMULATION MANAGER	5
	2.5	QA/QC	Reporting	5
	2.6	RECEI	/ING WATER MODEL SETUP	6
	2.7	CAVEA	TS AND LIMITATIONS	6
3.0	USIN	G HSPE	XP+	8
	3.1	USER I	NTERFACE	8
		3.1.1	Setting Up the Project	8
		3.1.2	Setting Up UCI and Other Files	9
		3.1.3	Basins-Specification File Content and Format	11
		3.1.4	Setting Up Graph Specification File(s) to Generate Additional Graphs	13
		3.1.5	Setting Up BASINS Observed Water Quality Data File	16
		3.1.6	Setting Up Multi Simulation Specification File, UCI, and WDM for Sensitivity/Uncertainty Analysis	17
		3.1.7	Multi Simulation Manager Output	20
		3.1.8	Running HSPEXP+	20
	3.2	HSPEX	P+ OUTPUT REPORTS AND GRAPHS	20
		3.2.1	Hydrology Calibration Reports	20
		3.2.2	Regan Plots	22
		3.2.3	Constituent Balance Reports	22
		3.2.4	QA/QC Reports	23
	3.3		ALLOCATION TOOL	
	3.4	RECEI	/ING WATER MODELS	32
	3.5	RESOL	VING ERRORS	32
4.0	LIMI	TATION	S	33
5 0	REFE	RENCE	\$	35





TABL	E	PAGE
3-1	Basins Specification File Content and Format	12
3-2	Definitions of Inputs	13
3-3	Description of Model Parameter Headings	19
3-4	Explanation of Column Headings for Tables 3-5 and 3-6	29
3-5	Allocation of Loading of Total Nitrogen (pounds) to Individual Sources After Applying the Losses in the Stream	30
3-6	Percent Contribution of Individual Sources at Each Reach	31



LIST OF FIGURES

FIGUR	E Company of the Comp	PAGE
3-1	HSPEXP+ Interface	8
3-2	WinHSPF Output Manager	9
3-3	Interface to add Hydrologic Calibration Location(s) in WinHSPF3.1	10
3-4	Example EXS File	13
3-5	Example Graph Specification File	16
3-6	Portion of Sample Water Quality Data DBF File	17
3-7	Example Multi Sim Spec File for Sensitivity Analysis	18
3-8	Example Multi Simulation Specification File for Uncertainty Analysis	18
3-9	Example Output File	20
3-10	QA/QC Report Window View	23
3-11	Model Parameter Value Analysis Window View	
	Sediment Loading Rate Analysis Window View	
3-13	Example Whisker Box-Plot of Loading Rates	
3-14	Diurnal Pattern Analysis Window View	25
3-15	Diurnal Anomalies Window View	
3-16	Constituent Storage Analysis Window View	26
3-17	Locations in Illinois River Watershed Model at Which Load Allocation Reports Are Generated	28
3-18	Example HSPEXP+ Error	32
4-1	Hydrography of Redeye, Long Prairie, and Crow Wing River Watersheds	34



1.0 INTRODUCTION

The legacy version of Expert System for Calibration of HSPF (HSPEXP) [Bicknell et al., 2005] was developed by the US Geological Survey (USGS) [Lumb et al., 1994] as a tool to assist model users with hydrologic calibration of HSPF. HSPEXP+ is the next generation of HSPEXP.

HSPEXP+ has been completely redesigned and shares only some of the legacy input file format, mathematical formulae, and algorithms from HSPEXP. HSPEXP+ can perform several additional functions and has evolved into a comprehensive tool for hydrologic and water quality calibration, as well as quality assurance/quality control (QA/QC) for HSPF models.

HSPEXP (legacy version) interactively allows the user to edit the input UCI file for HSPF, run HSPF simulations, produce plots of HSPF hydrology outputs compared to observed values, compute error statistics for a simulation, and provide the user with expert advice on which parameters should be changed to improve the calibration. In general, using HSPEXP is an interactive process that requires repeating the cycle of simulation, computing statistics, reviewing plots, getting advice, and modifying parameters.

Artificial intelligence (AI) was first used with HSPF on a project at the Stanford Research Institute (SRI) in Menlo Park, California, to estimate initial values for model parameters. HSPEXP is the result of a USGS project to create an expert system to assist with calibrating a watershed model. The prototype was developed with AI software tools, and, when properly refined, was converted to ANSI standard Fortran using the Graphical Kernel System (GKS) for portability.

HSPEXP uses over 35 rules that involve over 80 conditions to recommend parameter adjustments. The rules are divided into four groups: annual volumes, low flows, storm flows, and seasonal flows. Rules in subsequent groups are not tested until all rules in the previous group pass. The rules are based on the experience of experts who have used HSPF in a variety of climates and physiographic regions.

Meteorological records of precipitation and estimates of potential evapotranspiration in a Watershed Data Management (WDM) file are required for watershed simulation using HSPF. Air temperature, dew point temperature, wind, and solar radiation are also required for simulating snow accumulation and melt. Air temperature, wind, solar radiation, humidity, cloud cover, tillage practices, point sources, and/or pesticide applications may be required for water quality simulation. Physical measurements and related parameters are required to describe the land area, channels, and reservoirs.

Output options include tables of statistics that compare observed data and simulated results, ten different types of graphical presentations, and tables of the expert advice. Time-series output data from the simulation is written to the WDM file. Output data may be viewed interactively or written to text files for printing or analysis in a spreadsheet program.

HSPEXP has been used to support HSPF applications in various watersheds including the Patuxent River (Maryland), the LeSueur River Basin (Minnesota), and the Truckee River Basin (California/Nevada).



HSPEXP was developed for older operating systems, and multiple users have reported that it is not suitable for current computers. The USGS has stopped active development of HSPEXP.

Building on the algorithms of HSPEXP, HSPEXP+ was developed by RESPEC to facilitate hydrologic and water quality calibration projects. The software is available free of cost through the RESPEC website, and its source code is available along with the BASINS source code.



2.0 CAPABILITIES OF HSPEXP+

HSPEXP+ is developed on the codebase of BASINS and can interact with the multiple data formats that are used in the HSPF model as described later. HSPEXP+ reads the UCI file for an HSPF watershed model as well as the output data generated by HSPF and then generates multiple reports, graphs, and guidance to assist in hydrologic and water quality calibration. HSPEXP+ also can be used for QA/QC.

Unlike its predecessor, HSPEXP+ cannot be used interactively to edit HSPF UCI files. HSPEXP+ also cannot generate the BASINS Specifications (EXS) file. However, HSPEXP+ users may prepare the EXS file using WinHSPF3.1, or in a text editor. The UCI file can be edited in WinHSPF or a text editor (based on the calibration results and advice generated by HSPEXP+).

2.1 HYDROLOGIC CALIBRATION

HSPEXP+ uses the EXS file (extension *.exs) to obtain information about the calibration site, observed flow time-series dataset, simulated time-series datasets, analysis period, drainage area, storm periods, and error criteria. The format of the EXS file is consistent with that used by HSPEXP. To read more about this file, please refer to the HSPEXP manual [Lumb et al., 1994]. The content and format of the EXS file has been described in the EXS File section of this manual. WinHSPF3.1 can be used to generate an EXS file interactively, which can be edited in a text editor later, if needed.

The following are HSPEXP+ capabilities for hydrologic calibration:

- / Land use and watershed area reports are produced to provide a quick check of watershed segment connectivity.
- / Expert Statistics [Lumb et al., 1994] are produced for hydrology calibration (using the algorithms from the original HSPEXP) at multiple sites in the watershed and in simple text files. The EXS file can list more than one site, or the folder that contains the model calibration files can have multiple EXS files for multiple locations.
- / Advice for model calibration is produced for each calibration site in a text file.
- / Additional statistics are produced including annual, monthly, and daily flow comparisons.
- Overall, annual, and monthly time-series graphs, flow frequency duration graphs, cumulative flow graphs, and time-series graphs of other components (e.g., potential evapotranspiration, lower zone storage, and upper zone storage) are produced.
- / By default, HSPEXP+ (and its predecessor, HSPEXP) considers May, June, and July to be the summer months and December, January, and February to be the winter months for calculating seasonal statistics. In HSPEXP+, summer and winter months can be specified in the EXS file if changes to the default seasons are needed (i.e, northern and colder regions of the US or southern hemisphere). Please refer to the EXS file section for more details.
- / All graphs produced by HSPEXP+ are high-quality PNG format that can be directly inserted into reports and presentations.
- / All reports produced by HSPEXP+ can be directly opened in any spreadsheet program for quick viewing, formatting, and presentation.



- / All graphs and reports are produced in a time-stamped folder with a copy of the UCI file for reference.
- / HSPEXP+ can generate water balance reports in several layouts that include overall water balance, annual water balance, and water balance grouped by land use.

2.2 WATER QUALITY CALIBRATION

HSPEXP+ does not require the EXS file for water quality calibration tasks. HSPEXP+ can create simulated and observed data graphs as described in Section 2.3, and it can generate various constituent loading and reach budget reports as described below.

- / HSPEXP+ generates nutrient balance reports in a variety of layouts for dissolved oxygen (DO), heat, sediment, total nitrogen (TN) and its components, and total phosphorus (TP) and its components.
- / HSPEXP+ generates box-and-whisker plots of nutrient loading rates (i.e. lbs/ac/yr) for the entire watershed.
- / HSPEXP+ produces Regan plots, which include a plot of simulated phytoplankton and benthic algae, along with multiple nutrients at all of the reaches, total suspended solids (TSS) at all of the reaches, maximum and minimum daily DO for all the reaches, and load duration curves for the reaches where River Eutrophication Standards (RES) are provided.
- / HSPEXP+ does not calculate statistics that compare observed and simulated water quality data; however, it provides reports and graphs to better understand the water quality simulation and guide changes in the parameters accordingly. HSPEXP+ does not provide advice for water quality parameter adjustments.
- From HSPEXP+2.0 onwards, if GQUAL is simulated, HSPEXP+ will generate land loading and reach budget reports of the constituent, provided the GQUAL and related PQUAL are named exactly the same. This feature is still under testing, and users are advised extreme caution while analyzing the results from the GQUAL section.

2.3 AUTOMATED GRAPH GENERATION

Besides the typical graphs produced during hydrology calibration statistics generation, HSPEXP+ also generates graphs based on graph specification file(s), and a suite of QA/QC graphs called Regan plots. The automated graphs produced by HSPEXP+ are described below.

- / HSPEXP+ produces Regan plots, which include a plot of simulated phytoplankton and benthic algae, along with multiple nutrients at all of the reaches, TSS at all of the reaches, Maximum and minimum daily DO concentration (if hourly DO is output in the binary file or WDM file), and load duration curves for the reaches where RES standards are provided.
- / HSPEXP+ can generate additional graphs for water quality, snow depth, frequency duration, and scatter plots. The specifications for these graphs must be provided in one or more comma-separated file (*.csv format). From HSPEXP+2.0.0, HSPEXP+ can also produce graphs from files in JSON format generated by BASINS4.5 and later versions.

RSI-2770 DRAFT



- The time series for these graphs can be obtained from a WDM file, HBN file, or a BASINS observed water quality (DBF format) file.
- / HSPEXP+ also outputs the dataset used for generating the graphs in tab-delimited text files. Users can use the data in these text files for additional analysis outside of BASINS and HSPEXP+.

2.4 MULTI SIMULATION MANAGER

HSPEXP+ includes the capability to conduct multiple simulations based on a specification file provided by the user. The specification file is a CSV file that provides a list of WDM datasets for which HSPEXP+ will calculate statistics, a list of parameters that will be varied by HSPEXP+, and changes in the parameter value for each individual simulation. User can provide information about thousands of simulations in the specification file.

2.5 QA/QC REPORTING

HSPEXP+ produces a QA/QC report for the specified watershed model, providing a set of checks for HSPF hydrology and water quality models that are based on generalized professional judgment. HSPEXP+ uses the guidance from an existing body of watershed science knowledge and compares model parameters, pollutant loading rates, change in storages over the model simulation period etc. and presents them in the model QA/QC report.

The sequence of messages that are contained in the QA/QC Report for any UCI and its resulting output flag aspects of the model input and output that are considered nontypical, thereby providing the modeler with a checklist of items that warrant either re-affirmation or modification, either by refining aspects of the model input or undertaking additional calibration.

The sections of the QA/QC report include the following:

- Check of Watershed Area: HSPEXP+ reports areas of all operations contributing to the terminal reaches (with no outlets), as well as hydrology calibration reaches (determined through associated EXS files). The resulting area table is designed to help the modeler understand if the model connectivity is working as expected.
- Parameter Values Analysis: Using a database of typical model parameter values for hydrology, sediment, temperature, dissolved oxygen, nitrogen, phosphorus, and biological oxygen demand as organics based on the modeling guidance developed for Minnesota Pollution Control Agency (MPCA) and BASINS technical notes, HSPEXP+ compares parameter values of each operation with this database and reports the parameters that are beyond the typical limits.
- Loading Rate Comparison to Target Rates: Using a database of typical-loading rates of total nitrogen (TN), total phosphorus (TP), biochemical oxygen demand (BOD), ammonia as nitrogen (NH4-N), nitrate as nitrogen (NO3-N), organic nitrogen (org-N), orthophosphorus as phosphorus (PO4-P), and organic phosphorus (org-P), based on modeling guidance developed for MPCA, HSPEXP+ compares the model-loading rates with the target-loading rates and reports the anomalies.
- / Land Use Comparisons: Using the model output and a set of rules based on previous modeling guidance, HSPEXP+ reports anomalies in runoff and constituent loadings among the land use

RSI-2770 DRAFT



- categories in the model. For example, given that cropland typically has greater surface runoff than forest land, this section will compare the runoff rates for these land uses and report if it is different than expected.
- Constituent Storage Analysis: HSPEXP+ analyzes storage of select constituents in the model results, such as reach volume, bed sediment storage, nutrient storage etc., and evaluates if the storages show continuous increase or decrease for the period of simulation.
- / Diurnal Pattern Analysis: HSPEXP+ checks a list of constituents that normally vary consistently by the time of the day, like water temperature and dissolved oxygen, and reports if these time series show anomalies.

Iterative use of the QA/QC module should result in decreasing the number of instances of nontypical specifications or results. The aspects that remain flagged in a model run that is considered a final calibration will document nuances of the model that should be explained in the modeling application report.

The user should be aware that unique settings and conditions can lead to hydrologic and water quality complexities that do not conform to the judgments that are embedded in this module. Furthermore, the set of aspects for which checks have been included is not all-inclusive. The QA/QC module assumes that the model is run in English Units and the units of nutrients are in lbs. This module also assumes that first four water quality constituents simulated on the land are ammonia (NH3+NH4), nitrate as nitrogen (NO3), orthophosphorus as phosphorus (ORTHO P), and biochemical oxygen demand (BOD) in the order that they are listed here with the QUALID as it is listed in the parenthesis.

Version 3.0 of HSPEXP+ is the first to have this QA/QC report feature.

2.6 RECEIVING WATER MODEL SETUP

<under development>

2.7 CAVEATS AND LIMITATIONS

Caveats for the HSPEXP+ program are listed below.

- / HSPEXP+ is under continuous development. Although it has been tested on many computers and watersheds, HSPEXP+ may not work for a specific computer configuration or for a specific HSPF watershed model. For example, loading allocation reports may not be accurate when there are multiple diversions in a model that reroute back to the model. Some reports may not work for the operations with an active AGCHEM section.
- / HSPEXP+ needs extensive testing with different projects.
- / HSPEXP+ expects that the model is run with the units option flag set to English.
 - » If automated graphs are requested, HSPEXP+ expects that the graph specification files in CSV format are present in the same folder as the other model files.
- / HSPEXP+ assumes that the ammonia (NH3+NH4), nitrate (NO3), orthophosphate (ORTHO P), and biochemical oxygen demand (BOD) constituents that are simulated in PERLND PQUAL and IMPLND IQUAL have the exact same names as shown in parentheses here, and that they are simulated with the units of pounds. Although this requirement is now relaxed for most reports from version 2.0.0 onward, some reports may still have issues with names other than the



- default names. HSPEXP+ also assumes that nitrite (NO2) on the land is not simulated as a separate PQUAL, and all the nitrate from the land enters the reach as nitrate. However, in the RCHRES section, both nitrate and nitrite are simulated.
- / For the Multi Simulation Manager, HSPEXP+ assumes that the WDM file specified in the EXT TARGETS sections of the UCI file has the same base name as the UCI file.



3.0 USING HSPEXP+

Using HSPEXP+ for an HSPF project requires some preparation by the user after setting up the model. The following instructions assume that the modeler has a properly functioning HSPF model.

3.1 USER INTERFACE

HSPEXP+ has a simple user interface. Basic explanations are provided in the user interface itself. The interface also shows useful tool tips to the user when the mouse hovers over certain sections. The user needs to find the UCI file for the project. The remaining options can be selected or deselected using check boxes. Any grayed-out features are unavailable for the current project based on the options selected. Setting up an HSPF project for analysis by using HSPEXP+ is described in the following sections.

3.1.1 SETTING UP THE PROJECT

The HSPEXP+ interface is shown in Figure 3-1.

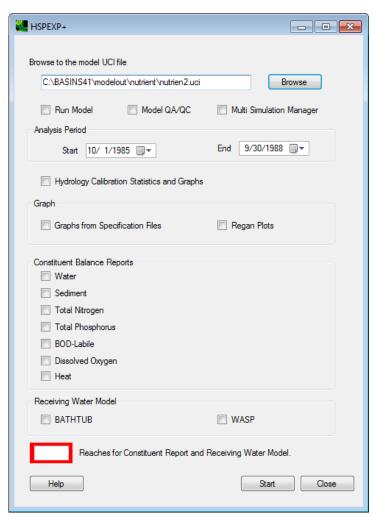


Figure 3-1. HSPEXP+ Interface.



3.1.2 SETTING UP USER'S CONTROL INPUT AND OTHER FILES

If a user wants to generate hydrology calibration statistics and graphs, HSPEXP+ requires that the name of the output WDM file be fewer than eight characters. The output file that contains the hydrology output (WDM file) from HSPF should be in the same folder as the UCI file. Although HSPF does not require separate WDM files for output and input (as many as four WDM files for each HSPF model), the output datasets should be saved in a different WDM file than the input datasets. When performing hydrologic calibration, the WDM file referred to in the EXS file is used to read the observed flow and simulated output. The echo (ECH) file from the HSPF run is used to obtain the time stamp of the most recent HSPF run.

The user must set up HSPF such that hydrologic calibration output is generated for each location of interest. To generate hydrologic calibration output at the location of interest, open the UCI file in WinHSPF3.1. Open the Output Manager, as shown in Figure 3-2.

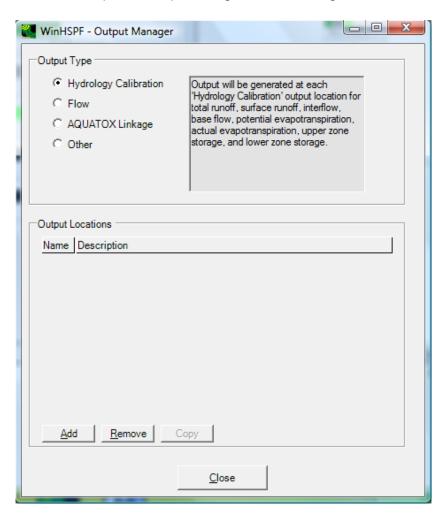


Figure 3-2. WinHSPF Output Manager.

Click the radio button beside Hydrology Calibration, and then click **Add**. In the WinHSPF- Add Output window, two separate frames show up. The left frame titled Operation: contains a list of available calibration locations (i.e., the reaches of the watershed). The right frame Observed Flow Time Series: lists the observed flow datasets in the project WDM file. The datasets listed in this frame have two



attributes: SCENARIO and CONSTITUENT specified as OBSERVED and FLOW, respectively in the model output WDM file. The window also contains two text fields. The user must choose one of the calibration locations, and that populates the WDM Location ID: field. This identifier is used as the location ID attribute on the WDM time-series datasets that will be created. The user must also select the corresponding observed dataset on the right frame that will be compared with the simulated data and used for hydrologic calibration. The user is also asked to enter a base dataset number for the datasets to be created. The new datasets will be numbered as the available datasets following that number, as shown in Figure 3-3.

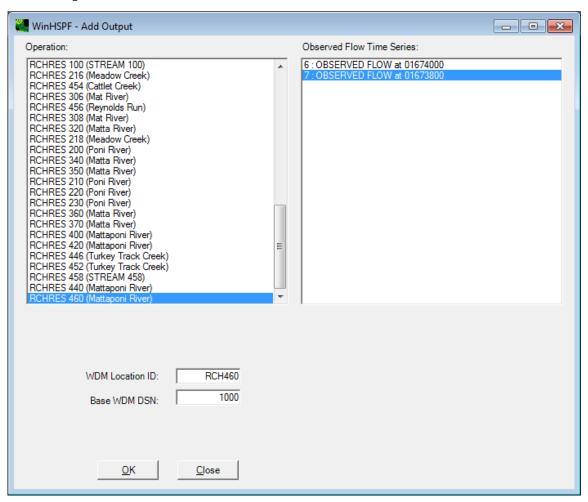


Figure 3-3. Interface to add Hydrologic Calibration Location(s) in WinHSPF3.1.

Clicking **OK** from this window brings the user back to the Output Manager window. As the user returns to the Output Manager window, eight new time-series datasets are created in the project WDM file, as required by HSPEXP+. The user can click **Add** to insert more than one hydrology calibration location.

The UCI in memory is modified to include the appropriate COPY operation as well as the appropriate EXT TARGETS, SCHEMATIC, and MASS-LINK Blocks. At the same time, WinHSPF creates an EXS file. The observed flow data are also used to identify the storm dates, and those dates are listed in the EXS file. WinHSPF uses the HySEPLocMin method [Sloto and Crouse, 1996] in the USGS Groundwater Toolbox to separate storm flow and baseflows. A stormflow time series is then used to select major



storms within the simulation period. The user is advised to check these storm dates before using them for hydrology calibration.

If nutrient balance reports are being generated, HSPEXP+ requires that the GEN-INFO table should have names for each PERLND, IMPLND, and RCHRES. HSPEXP+ uses this information from the GEN-INFO table to group the output. If the GEN-INFO table does not have a proper land-use description or the names of RCHRES operations, the output in some of the reports will not be grouped in a user-friendly fashion.

If nutrient balance reports are being generated, the user must name the nutrient constituents for PQUAL and IQUAL in the QUALID section as shown below and list the unit in pounds.

- / Ammonia should be named NH3+NH4.
- / Nitrate should be named NO3. HSPEXP+ assumes that Nitrite (NO2) is not simulated separately on the land surface.
- / Orthophosphorus should be named ORTHO P.
- / Biochemical Oxygen Demand should be named BOD.

Although this requirement is relaxed in versions following 2.0.0 for most reports, some reports may still have issues, and the user is recommended to follow the naming scheme specified above. If Regan plots are being generated, the user must ensure that the appropriate sections are active and that the outputs are written to an HBN file at monthly or shorter intervals.

If GQUAL constituents are being simulated, the name and units of the GQUAL constituent must match the corresponding PQUAL and IQUAL constituent.

3.1.3 BASINS-SPECIFICATION FILE CONTENT AND FORMAT

The format of the EXS file is consistent with that used in the predecessor program HSPEXP. To read more about this file, please refer to the HSPEXP manual or refer to the EXS file information at the end of this section. HSPEXP+ is unable to produce the EXS file. However, WinHSPF 3.1 and newer versions can generate the EXS file for the hydrology calibration locations as described in Section 3.1.2. A single EXS file can be used for calibration at one to ten separate locations. If a user wants to calibrate at more than ten locations, or if the storm dates are different for different locations, users can provide multiple EXS files. The number of EXS files is unlimited.

When used with HSPEXP+, the EXS file can include comment lines, following the same format of a UCI file. Any line with three asterisks (***) is treated as a comment by HSPEXP+ (unlike its predecessor).

HSPEXP+ considers June, July, and August to be the summer months and December, January, and February to be the winter months for calculating seasonal statistics. EXS files generated using WinHSPF3.1 list these months at the end of the file by using the keyword Seasons. The user can specify different summer and winter months in the EXS file, if needed.

Descriptions of all the parts of an EXS file are provided in Tables 3-1 and 3-2. Most of the information in these tables is reproduced from the original HSPEXP manual (Lumb et al, 1994, page 34), with some changes that are relevant for HSPEXP+. The specification file content and format are shown in Table 3-1, and definitions of input types are shown in Table 3-2.



Table 3-1. BASINS-Specification File Content and Format

Line Type/Content	Number of Lines	Line Format	Description			
			Name (prefix) of WDM file			
			Number of sites			
General Information	1	A8, 215, 4F8, 2X, I4, 2I2, 2X, I4, 2I2	Current site number			
General information	'	AO, 213, 41 0, 2A, 14, 212, 2A, 14, 212	Latitude and longitude limits of the basin			
			Start and end dates for calibration statistics, if different from simulation period.			
			DSN for simulated runoff (inches)			
			DSN for observed flow (cfs)			
			DSN for simulated surface runoff (inches)			
			DSN for simulated interflow (inches)			
			DSN for simulated baseflow (inches)			
			DSN for precipitation (inches)			
WDM Dataset ID Nos.	# of sites	10I4, 1X, I2, 2X, A20	DSN for potential evapotranspiration (inches)			
			DSN for actual evapotranspiration (inches)			
			DSN for upper zone storage (inches)			
			DSN for lower zone storage (inches)			
			Flag indicating whether statistics have been calculated for the site (not used)			
			Site name			
Number of Storms	# of storms	14	Number of storm periods			
Storm Periods	# of storms	15, 513, 15, 513	Storm start and end dates/times (yr, mo, dy, hr, min, sec)			
Drainage Areas	1	10F8	Drainage area (acres) for each site			
			Values for error terms and criteria			
			Acceptable error in total volume (%)			
			Acceptable error in low-flow recession (-)			
			Acceptable error in 50% lowest flows (%)			
Error Criteria	# of sites	10F8	Acceptable error in 10% highest flows (%)			
Elloi Olitella	# Of Sites	IUFO	Ratio of interflow to surface runoff			
			Acceptable error in seasonal volumes (%)			
			Acceptable error in summer storm volumes (%)			
			Multiplier on third and fourth error terms			
			Percent of flows to use on low-flow recession error			
Seasons Keyword	1	A7	Enter Seasons			
Summer Months	1	CSV	Enter the months for summer in csv format			
Winter Months	1	CSV	Enter the months for winter in csv format			



Table 3-2. Definitions of Inputs

A <i>n</i> -character input with column width = n columns
I <i>n</i> - integer input with column width = n columns
F <i>n</i> -real number input with column width = n columns
n X - n blank spaces
csv - comma-separated values

The last five line types in an EXS file that were used with the original HSPEXP program are not used in HSPEXP+; these are three lines of computed statistics and two lines of flags for ancillary data.

An example EXS file is shown in Figure 3-4. Please refer to the HSPEXP manual (Lumb et al., 1994) for additional details about the format.

```
***This Basins Specification file (EXS) file has been generated from WinHSPF.

<WDMNAME><Ste><cst><LatMin><LatMax><LngMin><LngMax><yyyymmdd><yyyymmdd>***
BMRW 1 1 0 0 0 0 2003 1 1 20151231
SIMOPTLOWSUNOFTOMAGNOSUPYPETXSAETUZSXLZSX LOCATION***
1001 610021003100410091005100610071008 0 RCH460
  4001 610021003100410091005100610071008 0 RCH460

***The following Storm dates (100 or less) are generated by subtracting the baseflow time series from the observed flow time series.

***The baseflow time series was generated using the HysepLocMin method that is available with the USGS Surface Water Toolbox.

***The storm date generation process is under development; users should verify these dates independently.

GSL>****The 310021003100410091005100610071008 0 RCH460
    2003 2 15 0
2003 3 3 0
                                       0 2003 3 2 0
0 2003 3 11 0
                                      0 2003 3 11
0 2003 3 29
0 2003 4 6
0 2003 6 4
0 2003 7 2
0 2003 10 14
              3 20
3 30
5 16
6 15
9 12
                                       0 2003 11 19
    2003 11 20 0 0
                                       0 2003 12
   2004 9 15
2004 11 12
                                       0 2004
                                       0 2004 11 24
10.00 .03 10.00 15.00 15.00 2.50 20.00 15.00 1.50 30.00 15.00 20.00 15.00 10.00 10.00 15.00 20.00 15.00 15.00 ***If you want to specify seasons for your Expert Statistics Calculation, specify them here.
***Seasons Is a keyword, that tells HSPEXP+ that user will provide it's own seasons
  Seasons:
***Months selected for Summers, comma separated
  6,7,8
***Months selected for Winters, comma separated
```

Figure 3-4. Example EXS File.

3.1.4 SETTING UP GRAPH SPECIFICATION FILE(S) TO GENERATE ADDITIONAL GRAPHS

Graph specification files can be used for producing additional graphs, if needed. The graph specification files should be in the same folder as the UCI file. The graph specification file format is a CSV format, where the user can provide specifications for as many graphs as necessary. In this file, blank lines, lines that start with a comma (,) or lines that contain asterisks (***) are not read by HSPEXP+ (i.e., these lines are comments).

In the graph specification file, two types of input are required. The first is the general specification of the graph. For this type of input, the user specifies the graph type (time series, scatter, or frequency duration), output file name (in *.png or *.emf format), number of data series (curves) to be plotted on each graph, and axes labels. In the second type of input, the user provides information about each dataset that will be plotted. HSPEXP+ expects one line of input for each dataset that will be plotted.

RSI-2770 DRAFT



Each input line provides information about the source data file, WDM DSN of the dataset, or location and constituent of the dataset, curve type (point or line), curve color, curve legend, and transformations. Once the information about each curve is provided, the specification for the next graph may be provided.

The first two lines of the graph specification file are header lines. The first header line has headings for general specifications of a graph, and the second line has headings for specifications of individual datasets.

General Specification of the Graph

The list below explains the headings for the general specifications of the graph. Each graph should have one line for general specifications.

- Graph Type: The type of graph can be time series, frequency, or scatter. These are the only types currently available.
- Destination File Name: A unique output file name must be provided with an extension of *.png or *.emf.
- / Number of Data Series: An integer value indicates the number of datasets in the graph.
- / Y-Axis Label: Label for the Yaxis (if one writes deg-, or mu-, it is converted to $^{\circ}$ or μ , respectively). This value may be blank.
- / X-Axis Label: Label for the X-axis. This value may be blank.
- / Aux-Axis Label: Label for the auxiliary axis. This value may be blank.
- / Right-Axis Label: Label for the right axis. This value may be blank.
- / Start Date: The start date in mm/dd/yyyy¹ format. This date will be used to subset the input dataset. If the start and end dates are blank, the dates are read from the simulation time span in the main HSPEXP+ interface. This value may be blank.
- / End Date: The end date in mm/dd/yyyy format. This date will be used to subset the input dataset. This value may be blank.
- / Y-Axis Limit (Min): Minimum value for *Y*-axis. This value may be blank.
- / Y-Axis Limit (Max): Maximum value for *Y*-axis. This value may be blank.
- / Aux-Axis Limit (Min): Minimum value for aux-axis. This value may be blank.
- / Aux-Axis Limit (Max): Maximum value for aux-axis. This value may be blank.
- / Right-Axis Limit (Min): Minimum value for right axis. This value may be blank.
- / Right-Axis Limit (Max): Maximum value for right axis. This value may be blank.
- Y-Axis Log?: Should the Y-axis be a log scale? Write yes. This value may be blank.
- / Aux-Axis Log?: Should the aux-axis be a log scale? Write yes. This value may be blank.
- / Right-Axis Log?: Should the right axis be a log scale? Write yes. This value may be blank.

¹⁴

Some spreadsheet program can change the dates, depending on the local system setting. The user must also verify that the dates are correct in a text editing program.



- / Season Start Month/Day: To plot only seasonal data (for example, only winter months for snow depth frequency duration), provide the start day of the season (e.g., 10/1).² This value may be blank.
- / Season End Month/Day: To plot only seasonal data (for example, only winter months for snow depth frequency duration), provide the end day of the season (for example, 4/30). This value may be blank.

Specification for Curve

All the headings for the specifications of each individual curve in the graph are explained below.

- Axis for the curve (or optional curve definition): If this entry is specifying the axis for a curve, enter left, right, or aux-axis. Note: for a frequency graph, only a left axis option is available. For scatter graphs, provide the names of axes as X-axis or Y-axis to differentiate between dependent and independent variables. Optional curve definitions: For scatter graphs, a Regression line and/or a 45-deg line may be generated, so this entry would be a regression or 45-deg line (these two lines do not need a source time series). For combining (i.e., adding, multiplying, subtracting, or dividing) a time series with another time series provided to the graph, this entry must include add, multiply, subtract, or divide. The time series is then combined with the previous time series. Make sure that the two time series that are combined have the same time step.
- / Data Source: The data source can be a WDM file (absolute path or relative path must be provided), a BASINS Observed WQ file (DBF), a HBN file, a USGS RDB water quality file, or a WQX filtered file.
 - » If the data source is a WDM file, provide the DSN number. If the data source is a DBF file, HBN file, USGS RDB water quality file, or WQX filtered file, provide the location and the constituent name.
- Blank, if WDM file. Constituent, if DBF, HBN File, USGS RDB water quality file, or WQX filtered file: Leave it blank if the data source is a WDM file, or else provide the constituent name.
- / Plot Type (Line or Point): line or point indicating the type of the plot.
- / Color of Plot: Write the color of the plot (line or points). This value may be blank.
- / StepType: Write nonstep for continuous line, and either forwardstep or rearwardstep for the step type plots.
- / Symbol Type, if Point Graph: The available options are circle, square, plus, diamond, star, hdash, vdash, triangle, triangledown, and xcross. Leave this specification blank for line graphs. Circle is default type for point data. This value may be blank.
- / Size of Line or Point: Size of line or points can be provided as an integer value. This value may be blank.
- Label for the Curve: Users can provide a label for the curve or leave it blank for HSPEXP+ to generate a default label. Users can also write don't show to not show the label and symbol for the curve in the legend. This value may be blank.
- / Aggregation: Before plotting, users can aggregate the data from the existing time step to hourly, daily, monthly, or yearly. This value may be blank.

² Some spreadsheet program can change the dates, depending upon the local system setting. The user must also verify that the dates are correct in a text editing program.



- / Aggregation Type: Users can select the type of aggregation as average, min, max, or sum. Users can also aggregate by percentiles. For example, %50 will extract the 50th percentile while aggregating. This value may be blank.
- I Transformation: Users can transform the aggregated dataset by using four key words. C to F will transform Celsius temperature data to Fahrenheit and F to C will do the reverse. Sum c will add a constant c to every time step, and product c will multiply by c for every time step. This value may be blank. An example graph specification file, when opened in a spreadsheet program, is shown in Figure 3-5.

al A	В	C	D	E	F	G	H	I	J	K	L	M	N	0	P	Q	R	S	T
1 ***This is a graph	specification file. The lin	es with ""***""	or blank lines	are ignored	by progra	m.													
***The first two r	ows are heading rows to	help a user fill i	n the column v	ralues and a	re not rea	by the pr	ogram.												
***To make a nev	v graph the user first spe	cifies the type o	f graph (times	eries scatte	r or freque	ncy durati	on) then the	name of t	he graph number of curves in the										
4 ***graph axes lab	els axes limits (user cann	ot limit the x-ax	xis width). In t	the lines fol	lowing the	specificat	ion of graph	user provi	des the specifications										
5 ***of each curve																			
		Number of		X-Axis	Aux-Axis	Right Axis	Start Date (mm/dd/yy	End Date (mm/dd/ yyyy)		Y-Axis Limit	Limit	Aux-Axis	Right- Axis Limit	Right- Axis Limit	Y-Axis	Aux Axis	Right	Season Start Month	Season End Month
6 Type of Graph	Destination File Name	Data Series	Y-Axis Label	Label	Label	Label	yy) format	format	Y-Axis Limit (Min)	(Max)	(Min)	(Max)	(Min)	(Max)	Log?	Log	Axis Log	/day	/day
7 Axis for the Curve	Data Source	DSN Number if WDM File. Location if DBF or HBN File	Constituent i	f Plot Type (line or	Color of Plot	StepType		Size of Line or Point	Label for the Curve	Aggreg.	ati Aggrega on Type	ti Transfor mation							
8 ***																			
9 Timeseries	RCH238_LakeLevel.png	3	B Lake Level (n	n)					92	5 9	45	0							
IO Left	Lakes\lake_level.dbf	058014200	Elevation (ft)	point	blue		circle		Observed Lake Level at Pokegama Lake			prod 0.30	08						
Left	Snake.wdm	2389	9	line	red	nonstep			L Simulated Lake Level at RCH 238	Daily	Average	prod 0.30	08						
L2 Aux	Snake.wdm	2380)	line	red	nonstep			Daily Average Simulated Flow at RCH 238	Daily	Average								
13 ***																			
14 Timeseries	Temp\RCH230_WT.png	3	Water Tempe	erature (de	g-C)					1	00								
Left	STC_WQ_OBS.dbf	07030004-503	TW-degF	point	blue		circle		Observed Water Temperature at Snake R	2 MI E	of Grasston	ftoc							
l6 Left	Snake.wdm	2301	L	line	red	nonstep			Daily Average Simulated Water Temperature at RCH 230	Daily	Average	ftoc							
17 ***Left	Snake.wdm	2301	ı	line	Purple	nonstep			1. 75% Quartile of Simulated Water Temperature at RCH 230	Daily	75	6 ftoc							
18 Aux	Snake.wdm	2300)	line	red	nonstep			Daily Average Simulated Flow at RCH 230	Daily	Average								
19 ***																			

Figure 3-5. Example Graph Specification File.

If using HSPEXP+2.0.0 or later, the user is able to provide graph specification file(s) that were generated in the BASINS interface. BASINS 4.5 and later can be used to generate a graph using the interactive interface and then save the specification file in the JavaScript Object Notation (JSON) format. HSPEXP+ will generate graphs for all the JSON files in the project folder.

3.1.5 SETTING UP BASINS OBSERVED WATER QUALITY DATA FILE

The observed water quality data can be provided in a DBF file for BASINS or HSPEXP+ to read. This format is useful when the data is non-continuous. The DBF file can be edited or created in LibreOffice or OpenOffice (note: MS Excel 2007 and newer versions can open this file format but do not support saving this format). This file format has five columns that should be named exactly as shown below. Any additional columns are not read by BASINS or HSPEXP+.

- / ID: This column should identify the location of the collected data
- / DATE: This column should identify the date in text format (mm/dd/yyyy).
- / TIME: This column should identify the time in text format (HHMM).
- / PARM: This column should identify the name of the constituent.
- / VALUE: This column should identify the value recorded at the respective date and time for the respective location and constituent.

The user can use unlimited locations, parameters, and values. These aspects are limited by the capacity of the software used to create it. Large DBF files may result in longer times to open, close, and read the file. A portion of a sample DBF file is shown in Figure 3-6.



File Edit View Insert Format Iools Data Window Help											
	· 🛅 · 🔚 🙎		🖶 🔯 l 🤲		b 🖺 - 🝰 🦴 -						
. 0	Liberation San	s 🔻 10	- a α	<u>a</u> = =							
E6	•	# ∑ =	0.01								
	Α	В	С	D	E						
1	ID,C,12	DATE,D	TIME,C,5	PARM,C,7	VALUE,C,18						
2	07030001-506	02/01/99	1100	NH4-N	0.05						
3	07030001-506	03/22/99	0930	NH4-N	0.02						
4	07030001-506	04/12/99	1100	NH4-N	0.01						
5	07030001-506	05/17/99	1045	NH4-N	0.04						
6	07030001-506	06/16/99	1015	NH4-N	0.01						
7	07030001-506	07/12/99	1045	NH4-N	0.01						
8	07030001-506	08/09/99	1030	NH4-N	0.01						
9	07030001-506	09/28/99	1015	NH4-N	0.01						
10	07030001-506	10/30/01	0830	NH4-N	0.025						
11	07030001-506	11/13/01	0915	NH4-N	0.025						
12	07030001-506	01/15/02	0900	NH4-N	0.025						
13	07030001-506	03/12/02	1000	NH4-N	0.025						
14	07030001-506	04/23/02	0930	NH4-N	0.025						
15	07030001-506	05/19/02	1215	NH4-N	0.025						
16	07030001-506	06/12/02	0930	NH4-N	0.025						
17	07030001-506	07/08/02	1100	NH4-N	0.08						
18	07030001-506	08/21/02	0930	NH4-N	0.025						
19	07030001-506	09/19/02	0930	NH4-N	0.025						
20	07030001-506	10/06/03	1100	NH4-N	0.025						
21	07030001-506	11/26/03	1045	NH4-N	0.025						
22	07030001-506	02/11/04	0945	NH4-N	0.025						

Figure 3-6. Portion of Sample Water Quality Data DBF File.

3.1.6 SETTING UP MULTI SIMULATION SPECIFICATION FILE, USER'S CONTROL INPUT, AND WATERSHED DATA MANAGEMENT FOR SENSITIVITY/UNCERTAINTY ANALYSIS

To use the Multi Simulation Manager, ensure that the model output WDM file and the UCI file have the same name. If the model does not output to a WDM file, the multi simulation manager will not process any output from the simulations. Ensure that the model outputs at least one-time series to the output WDM in the EXT TARGETS block.

If you do not have a multi simulation specification file, HSPEXP+ generates a default specification file. To generate the default specification file, start HSPEXP+, browse to the UCI file of an existing working HSPF model, and select the box next to Multi Simulation Model Manager. This process will automatically generate a multi simulation specification file named as MultiSimSpecFile.csv. This default file contains information about, at most, two datasets that will be analyzed for each simulation and information about the parameters LZSN and INFILT that will be varied for each simulation. The format of specification file is described later in this section. HSPEXP+ will then copy the existing UCI file to the name MultSim.uci and run the model simulation. The statistical analysis of the datasets identified in the multi simulation specification file will be saved in MultiSimOutput.xml. The output file contains several statistics of the two output datasets that can be used to calculate model sensitivity and uncertainty.

The specification file can be modified to add more output datasets, include more parameters to vary, and provide more combinations of parameter variability. Depending on the modeling objective, sensitivity analysis, uncertainty analysis, model calibration, and model scenario analysis can be conducted using Multi Simulation manager.

The lines that contain **** in the multi simulation specification file are comments and ignored by HSPEXP+. As illustrated in Figures 3-7 and 3-8, rows 1 and 2 are comments. The first column in the third row is labeled DSN. The following columns in this row refer to the DSN in the model output WDM file (file with the same name as the UCI). Statistical analyses of these datasets are produced in the output file for



each model iteration. The fourth row is a comment, and the following row is a heading for model parameters, as described in Table 3-3.

A	В	C	D	E	F	G	H	I	J	K	L	M	N
***Generic Parameter List Fo	or Sensitivity/	Uncertainty Analys	is And Output	DSN from the	UCI file								
***Following Output IDs are	the first two	D read from the E)	T TARGET bloc	k of the UCI f	ile. You can add	more if you want to.							
DSN	1000	1100	1200	1300	1400	1500	1600	1700	1800	1900	2100	2200	2300
***The operation number, Is	and use, tied v	with next, and mult	tiplier can be l	left blank									
PARMID	OPN_TYPE	TABLE_NAME	PARM_NAME	OCCURENCE	MULT_FACTOR?	OPN_NUMBER_NAME	LOWERLIMIT	UPPERLIMIT					
	1 PERLND	PWAT-PARM2	LZSN		1		3	8					
	2 PERLND	PWAT-PARM2	INFILT		1		0.01	0.5					
	3 PERLND	PWAT-PARM2	AGWRC		1		0.8	0.999					
	4 PERLND	PWAT-PARM4	IRC		1	Pasture	0.4	0.9					
	5 RCHRES	HEAT-PARM	CFSAEX		1		0.5	1					
	6 RCHRES	SILT-CLAY-PM	TAUCD	2	0	510	5.00E-10	5					
	7 RCHRES	OX-REAPARM	REAK		1	510	0.1	0.7					
	8 PERLND	MON-IFLW-CONC		1	1	Pasture	0.001	9.9					
	9 PERLND	MON-IFLW-CONC		2	1		0.001	9.9					
	10 RCHRES	PHYTO-PARM	SEED		1	Mainstem	2	7					
Delete intermediate UCI file	rs 0												
***Following lines list the n	nultiplication	factor for each par	ameter for eac	ch simulation									
Simulation ID		Parameter2	Parameter3			Parameter6	Parameter7	Parameter8	Parameter9	Parameter10			
	1 0.9												
	2 1.1												
	3	0.9											
	4	1.1											
	5		0.9										
	6		1.1										
	7			0.9									
	8			1.1									
	9				0.5								
	10				0.8								
	11				1.2								
	12				1.5								
	13				1.3	0.000005							
	14					0.00003							
	15					0.3	0.9						
	16						1.1						
	17						1.1	0.9					
	18							1.1					
	19							1.1	0.9				
	20								1.1				
	21								1.1	0.9			
	22									1.1			
										1.1			

Figure 3-7. Example Multi Sim Spec File for Sensitivity Analysis.

4 A								
***Generic Parameter List For Se	ensitivity/Un	certainty Analysis	And Output DS	N from the U	CI file			
***Following Output IDs are the	first two ID	ead from the EXT	TARGET block	of the UCI file	. You can add mor	e if you want to.		
DSN	1000)						
***The operation number, land	use, tied wit	h next, and multip	lier can be left	blank				
PARMID	OPN_TYPE	TABLE_NAME	PARM_NAME	OCCURENCE	MULT_FACTOR?	OPN_NUMBER_NAME	LOWERLIMIT	UPPERLIMIT
1	PERLND	PWAT-PARM2	LZSN		1		2	1
2	PERLND	PWAT-PARM2	INFILT		1		0.001	0.
3	PERLND	PWAT-PARM2	AGWRC		1		0.85	0.99
4	PERLND	PWAT-PARM4	IRC		1		0.3	0.8
5	PERLND	MON-UZSN			1		0.05	
6	PERLND	MON-LZETPARM			1		0.1	0.
Delete intermediate UCI files?	0							
***Following lines list the multi								
Simulation ID		Parameter2	Parameter3	Parameter4		Parameter6		
1								
2						0.4615		
3						0.3805		
4	0.0776	0.4453	0.68	0.8491	0.4218	1.1281		
5								
6	2.467	0.1227	0.136	1.147	2.4224	0.5737		
7		0.2661	1.393	0.5893	0.3132	2.3149		
8	0.4729	0.9204	0.3308	0.4586		0.1925		
9	0.099	0.0998	0.6171	0.7906	1.4005	1.6056		
10	0.3379	0.7153	0.0935	0.8428	2.1149	0.2965		
11	0.7026	0.4641	0.3535	1.7474	2.1177	0.9203		
12						1.8831		
13			0.6198	0.6298		0.1885		
14		0.2837	0.4713			3.3049		
15								
16								
17	2.9636	0.3731	0.7987	0.9233	2.0115	0.3913		
18	0.604	0.2626	0.2249	1.483	1.158	0.8882		
19	0.2675	0.5823	2.2245	1.0065	2.0226	0.435		
20	0.9407	0.5452	1.5331	1.1323	1.9728	0.9635		
21		0.3064	0.3903	0.8518	2.2693	1.7053		
22	2.3144	0.9754	0.5095	1.0868	1.6837	0.4724		
23	0.3043	0.2655	2.9686	1.2255	2.8444	0.8284		

Figure 3-8. Example Multi Simulation Specification File for Uncertainty Analysis.



Table 3-3. Description of Model Parameter Headings

Parameter Table Heading	Description
ParmID	An integer indicating parameter number. It starts sequentially from 1 to the total number of parameters that may be varied.
OPN_Type	The type of operation for the parameter (PERLND, IMPLND, or RCHRES). If the modeler wants to change the multiplication factor to a point source, then this value will be Point. If a modeler wants to change the point-source time series, then this value will be Point_TS.
Table_Name	The table in which the model parameter is found.
Parm_Name	Model parameter name. If a MASS-LINK factor must be changed, then this should contain the Source Group, Source Member Name, Source Member Subscript1, Source Member Subscript2, Target Group, Target Member Name, Target Member Subscript1, and Target Member Subscript 2. All of these values must be separated by a colon (:).
	If a point-source factor or a point-source time series must be changed, then this value should be Target Member Subscript 1, and Target Member Subscript 2. All of these values must be separated by full colon (:).
Occur_Or_MLNumber	Some tables occur multiple times (QUAL-PROPS, MON-ACCUM etc.). This column indicates the occurrence number of that column. If Table_Name is MASS-LINK, this column should indicate the MASS-LINK table number.
Mult_Factor_FG	A flag with a value of 0 or 1. A value of 0 indicates that the absolute value of the parameter will be provided. A value of 1 indicates the multiplication factor of that parameter will be provided.
OPN_Number_Or_Name	If this value is blank, all the operations and tables that satisfy the criteria that are specified in previous columns will be varied. To change the parameters of only specific operations, either the operation number or operation name (as specified in the GEN-INFO block of the UCI file) must be provided.
Lower_Limit and Upper_Limit	If a lower limit and or upper limit is provided, HSPEXP+ will check the parameter value against the limits and make sure that the generated parameter value does not violate the limits.

Following the description of model parameters that will be varied in the Multi Simulation Manager, the next row contains a flag for whether the intermediate UCI must be deleted. If this flag is 0, then the UCI file for each model iteration will be saved; if this flag is set to 1, then the UCI file for each simulation will be deleted following the simulation. The user may want to set this flag to 0 during testing.

The following row in the specification file contains a header line for the model simulations. The first column is an integer that indicates the simulation ID, and the following column contains the model parameter multiplication factor or the model parameter value (as specified in the table above). If a column is empty, then the model parameter for that specific simulation is not varied.

An example Multi Simulation Specification File for a sensitivity analysis is shown in Figure 3-7, and an example Multi Simulation Specification File for uncertainty analysis is shown in Figure 3-8. The model parameter values and multiplication factors for sensitivity analysis, uncertainty analysis, scenario generation, or model calibration must be developed by the user independently. Once the Multi Simulation Specification File is updated, the user can start HSPEXP+, check the box for the Multi Simulation Manager, and click on **Start**.



3.1.7 MULTI SIMULATION MANAGER OUTPUT

Once the Multi Simulation Manager process is complete, HSPEXP+ will give a message to indicate the same and open the folder with the output file. The output file can be opened in any XML editor, including MS Excel. Part of an example output file is shown in Figure 3-9. The output file contains the SimID, ID of the analyzed dataset, and statistics (e.g., sum; annual sum; mean; geometric mean; maximum of 30-day geometric mean; average annual peak; 10, 25, and 50 percent highs; 2, 5, 10, and 25 percent lows; and 17 different percentiles) for each dataset for each simulation. If the output file does not populate with statistics, the FILES block, the EXT TARGETS block, and/or the WDM file are likely set up incorrectly and should be reevaluated. UCI files that are generated can be reviewed if the 'Delete intermediate UCI files' flag was set to 0.

	Α		В	С	D	E	F	G	Н	I	J	K
1	SimID 💌	ID	¥	Sum 🔻	mean 💌	SumAnnual 💌	geometric mean 💌	max(30-day GeoMean) 🔽	AvAnnPeak 💌	10%High	25%High	50%High ▼ 9
2	C)	1001	12257.81	11.19	4088.74	10.92	14.44	14.77	1614.09	3926.32	7268.60
3	()	1002	867.98	0.79	289.52	0.58	1.16	4.82	297.81	504.21	673.17
4	1	l	1001	12260.43	11.20	4089.61	10.93	14.44	14.77	1614.14	3926.98	7270.41
5	1	L	1002	867.81	0.79	289.47	0.58	1.16	4.83	299.35	505.76	673.76
. 6	2	2	1001	12256.17	11.19	4088.19	10.92	14.44	14.77	1614.05	3925.86	7267.15
7	2	2	1002	871.39	0.80	290.66	0.59	1.16	4.83	297.47	503.90	674.32
8	3	3	1001	12260.51	11.20	4089.64	10.92	14.44	14.78	1614.40	3927.22	7270.69
9	3	3	1002	894.94	0.82	298.52	0.60	1.20	4.93	306.03	518.75	692.61
10	4	1	1001	12255.38	11.19	4087.92	10.92	14.44	14.77	1613.80	3925.43	7266.42
11	4	1	1002	843.83	0.77	281.47	0.56	1.13	4.73	291.12	491.26	655.69
12												

Figure 3-9. Example Output File.

Additionally, a WDM file is also produced by the Multi Simulation Manager including a copy of the datasets identified in the specification file for each individual model simulation. The user can review the WDM file to generate any other statistics that are not available in the default output file.

3.1.8 RUNNING HSPEXP+

Running HSPEXP+ is straightforward, provided that all the set-up procedures have been followed. Browse to HSPEXP+ from the program menu on your computer and click on it to open. Browse to the UCI file and then set the start and/or end date of the analysis period if it differs from the model simulation period specified in the UCI file. Select options as needed and click on **Start**.

3.2 HSPEXP+ OUTPUT REPORTS AND GRAPHS

HSPEXP+ generates multiple outputs and reports based on the options selected by the user. This section describes some of the reports that are generated by HSPEXP+. Note that this list is not exhaustive and as the HSPEXP+ development continues, additional reports and may be added or the existing reports may be modified.

3.2.1 HYDROLOGY CALIBRATION REPORTS

As noted in Section 3.1.1, the user can generate hydrology calibration statistics and graphs in the HSPEXP+ interface. The following reports and graphs are output when this option is selected. In the following list, XXX refers to the modeling location for which the EXS file was provided, and all the statistics and graphs are produced for flow at a daily time step. If observed and simulated flow are available for shorter time steps, HSPEXP+ generates average daily flow before calculating the statistics.



- / ExpertSysStats-XXX.text: This file contains model expert statistics for the entire model analysis period and on an annual average basis. To read more about the statistics generated in this report, please refer to Lumb et. al [1994].
- / XXXadvice.txt: This file includes advice on how to adjust model parameters for improved calibration. To read more about the advice, please refer to Lumb et al. [1994].
- / AnnualFlowStats-XXX.txt: This file reports the annual comparison of observed and simulated flow volume.
- / DailyMonthlyFlowStats-XXX.txt: This file reports the model fit statistics for daily and monthly flow volume.
- / MonthlyAverageFlowStats-XXX.txt: This file reports the monthly comparison of observed and simulated flow volume.
- / FlowXXX.png: Daily time-series plot of observed and simulated flow along with the weighted flow.
- / Flow_XXX_month.png: Monthly time-series plot of observed and simulated flow.
- / Flow_XXX_monthlog.png: Monthly time-series plot of observed and simulated flow at log scale.
- / FlowXXX_YYYY.png: A time-series plot of the observed and simulated flow for the year 'YYYY.'
- / FlowXXX_YYYYlog.png: A time-series plot of the observed and simulated flow for the year 'YYYY,' with log scale.
- / Flow XXX cum.png: Cumulative flow rate plot for the period of analysis.
- / Flow_XXX_cumDif.png: Cumulative difference plot of observed and simulated flow.
- / Flow_XXX_dur.png: Frequency duration curves of observed and simulated flow.
- / Flow_XXX_Components.png: Components of simulated flow and weighted precipitation plotted as daily time series.
- / Flow_XXX_Components_month.png: Components of simulated flow and weighted precipitation plotted as monthly time series.
- / Flow_XXX_Error_LZS.png: Error in observed and simulated flow plotted as a function of lower zone storage in inches.
- / Flow_XXX_Error_ObsFlow.png: Error in observed and simulated flow plotted as a function of observed flow.
- / Flow_XXX_Error_UZS.png: Error in observed and simulated flow plotted as a function of upper zone storage in inches.
- Flow_XXX_ET.png: Weekly time-series plot of observed potential and actual evapotranspiration.
- / Flow XXX scatDay.png: Scatter plot of observed and simulated flow volumes.
- / Flow_XXX_scatDaylog.png: Scatter plot of observed and simulated daily flow volumes at log scale.



3.2.2 REGAN PLOTS

Regan plots are a collection of plots generated from the simulated data to gain insights into model operation and stability. The datasets are read from the HSPF binary output file (.hbn). These automatic graphs do not compare observed and simulated data. The following are descriptions of automated graphs produced in HSPEXP+:

- / DO_Concentration_RCHRES_X.png: Daily time-series plot of maximum and minimum daily simulated concentration of DO at RCHRES X in the model. This graph is only produced for RCHRES operations that output DO concentration at an hourly interval in the binary or WDM file.
- / Nutrient_RCHRES_X.png: Time-series plot of simulated phytoplankton, dissolved ammonia, dissolved nitrate, dissolved orthophosphate and benthic algae for RCHRES X. The time step of this graph depends on the timestep of the data in the binary file. Please refer to Mishra et al. [2017] for more details on this graph.
- / TSS_RCHRES_X.png Time-series plot of TSS, bed depth, and flow for the RCHRES X.
- / LoadDurationTP_RCHRES_X.png Load duration curves of the RCHRES with simulated data and the RES standard. These graphs are produced for the RCHRES for which the RES_TP_Standard.csv file is provided.

3.2.3 CONSTITUENT BALANCE REPORTS

Constituent balance reports for the entire watershed can be generated for multiple constituents (water, TP, TN, sediment, DO, and heat) by checking appropriate boxes. Additionally, constituent balance reports for specific locations can be generated by entering the reach number in the red box at the bottom of the interface. The example reports below assume that the constituent balance reports are generated for total phosphorus at RCHRES 1 in the watershed. All these reports can be opened in any spreadsheet program. Some reports are formatted in such a way that the automatic filtering can be used to extract and view relevant information. In the following labels, XXX refers to the UCI file name.

- / TotalP_landLoadings.txt: Loadings of phosphorus and its constituents from each operation from different pathways for each analysis year and the entire analysis period. This report does not include PERLND operations where phosphorus is simulated by using the AGCHEM module.
- PO4_Reach_Budget.txt: Annual average reach budget of orthophosphorus for each reach for the entire analysis period.
- / TP_XXX_Grp_By_OPN_LU_Ann_Avg: Annual average fluxes of P and its constituent through different pathways in PERLND, IMPLND, and RCHRES operations.
- TP_XXX_LoadAllocation.txt: P load allocated to all the sources in the watershed for all of the RCHRES on an annual average basis, after taking into account the losses that may occur in the RCHRES. More description of this report is available in Section 3.3.
- / TP_XXX_Per_OPN_Per_Year: This report is similar to TP_XXX_Grp_By_OPN_LU_Ann_Avg, but the values are presented at an annual basis.
- / TP_XXX_Per_RCH_Ann_Avg_Budget: Annual average budget of total P for each reach in the model.
- / MonthlyLoadings/TotalP_Monthly_Land_Loadings.txt: Average monthly loadings of P and its constituents on an average monthly basis.



In addition to the text-based reports, HSPEXP+ also generates two kinds of graphs in a PNG format that give a quick summary of model constituents. These graphs are described as follows:


- / PO4_BoxWhisker.png A box-and-whisker graph of annual average PO4 loading rates grouped by land-use types.
- / MonthlyLoadings/PO4_P_LandUse_BoxWhisker.png A box-and-whisker graph of PO4 loading rates from LandUse grouped by the 12 months of the year.

3.2.4 QA/QC REPORTS

HSPEXP+ has a feature specifically designed for watershed model QA/QC. To use this feature, the users clicks the Model QA/QC check box on the main form, selects constituents to report as desired, and then clicks **Start**.

The default QA/QC report will contain sections checking watershed area, parameter values, and diurnal patterns. In addition, based on the constituents checked in the main user interface form, further analyses of loading rates, land use comparisons, and constituent storages will be performed.

A status window appears on the screen while the QA/QC report is in being generated. Once it is complete, it will appear on the screen within a web browser as seen in Figure 3-10.

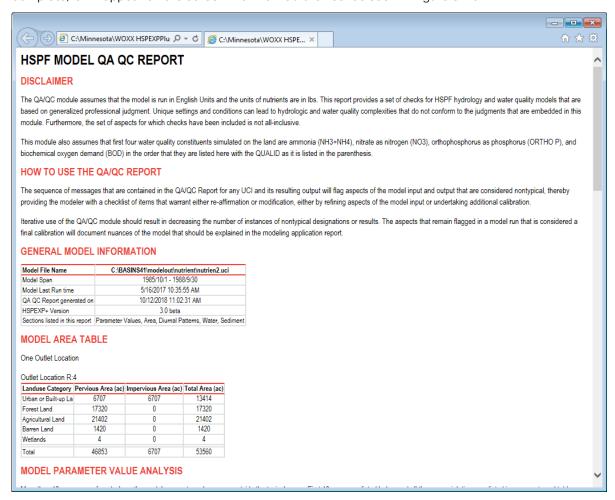

23

Figure 3-10. QA/QC Report Window View.



The Parameter Values Analysis uses a database of typical model parameter values for hydrology, sediment, temperature, dissolved oxygen, nitrogen, phosphorus, and biological oxygen demand as organics based on the modeling guidance developed for MPCA and BASINS technical notes. HSPEXP+ compares parameter values of each operation with this database and reports the parameters that are beyond the typical limits. The QA/QC report table lists for each parameter outside the typical limits its operation number, description, table name, value, and typical minimum and maximum values. If more than 10 parameter values are beyond the typical limits, a supplemental XML table is referenced, as seen in Figure 3-11.

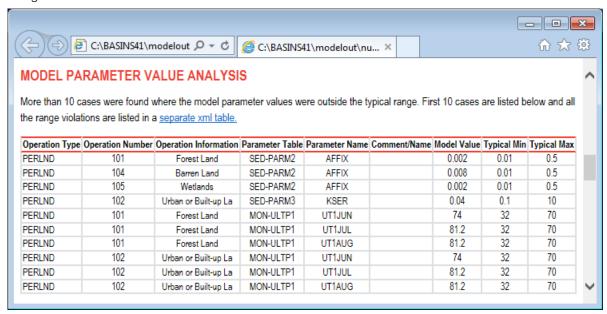


Figure 3-11. Model Parameter Value Analysis Window View.

The Constituent Loading Rates for selected constituents are presented in a box-whisker plot, along with information regarding comparison of the loading rates to target rates and comparison of loading rates among land uses. The box-whisker plot shows the variation in average annual loading among the model segments within each land use category. If there is only one model segment, there will be only a single tick at the average annual load for that land use. If there are multiple model segments, the tick will be at the median, and the extent of the box will indicate the interquartile range (25th and 75th percentile). The whiskers extend to the highest and lowest average annual loading rate for the segments of that land use classification. Results of an example loading rate comparison report is shown in Figure 3-12, followed by an example whisker box-plot of loading rates in Figure 3-13.

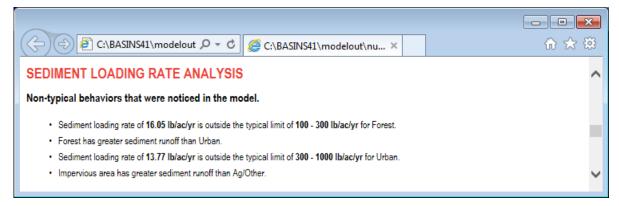


Figure 3-12. Sediment Loading Rate Analysis Window View.



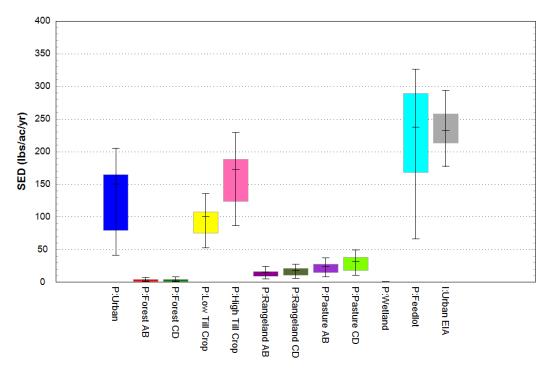


Figure 3-13. Example Whisker Box-Plot of Loading Rates.

The Diurnal Pattern Analysis reviews daily fluctuations in constituents such as DO and Water Temperature, which typically follow a pattern of lower values in the early morning and increased values in the afternoon and early evening, and reports anomalies, or days where the normal pattern are not upheld. These patterns are most notable in non-winter months, thus only the period from May through September is reviewed. A small number of days that do not follow the normal patterns is not uncommon, but a substantial percentage of exceptions may indicate the need for further review of the model's simulation of these constituents. Note that the Diurnal Pattern Analysis requires that the simulation results are written to the binary output (HBN) file on an hourly time step or shorter, as seen in Figure 3-14.

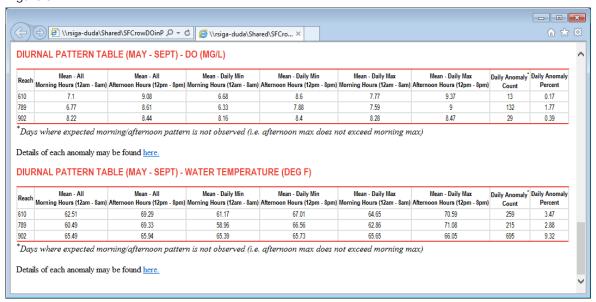


Figure 3-14. Diurnal Pattern Analysis Window View.



Figure 3-15 shows that when exceptions are found, an additional file is generated containing details of each exception.

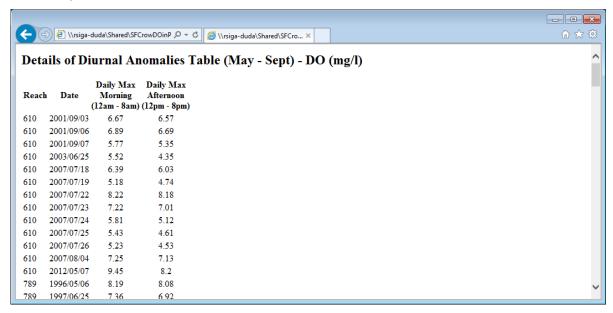


Figure 3-15. Diurnal Anomalies Window View.

The Constituent Storage Analysis checks model storage time series for increasing/decreasing trends for each selected constituent. This analysis is conducted by computing the difference of the timeseries' values from its mean over the time span of the model. Should the slope of a best fit line through these resulting differences be significant enough to indicate an increasing or decreasing trend, the difference between the best fit line's starting and ending points is used to estimate the percent change. A summary of all model outputs reviewed for the current constituent is provided at the end of the section, and an example can be seen in Figure 3-16.

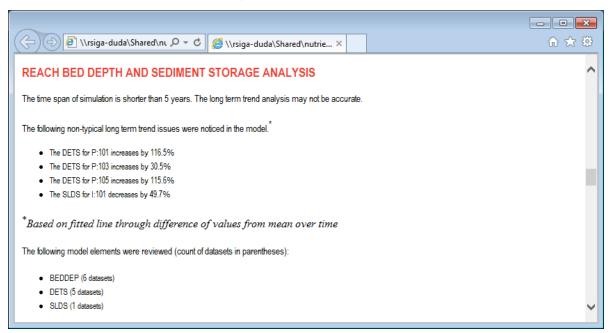


Figure 3-16. Constituent Storage Analysis Window View.



3.3 LOAD ALLOCATION TOOL

Under MPCA Work Order #9 (Shell No. 79375), AQUA TERRA Consultants (acquired by RESPEC in September 2015) was contracted to develop a Source Allocation Tool to allow users of BASINS/HSPF to identify which contaminant sources are the major contributors to water quality impairments (and the focus of Total Maximum Daily Loads [TMDLs]) so that remediation strategies and plans can be efficiently prepared.

RESPEC developed this tool as part of HSPEXP+, which is currently used for calibrating hydrology, and supporting water quality calibration. HSPEXP+ uses the output WDM file for hydrology calibration and the binary output file for generating water and nutrient balance reports. HSPEXP+ also generates graphs for hydrology and water quality calibration.

HSPEXP+ outputs the source-load allocation report as a simple text file that is formatted for viewing and editing in any spreadsheet program. The source-load allocation is also output as a bar graph for specific locations when the user specifies these locations on the HSPEXP+ form. The source-load allocation files are generated in a time-stamped (time of the last successful HSPF run) folder in the folder containing the HSPF UCI with a name of XX_YYY_LoadAllocation.txt, where XX is replaced by the nutrient of interest (TP or TN), and YYY is replaced by the UCI base file name. If the user requests load allocation reports at specific locations (reach end points) in the watershed, additional files (XX_YYY_LoadAllocation_Locations.txt and XX_YYY_ZZZ_LoadingAlloation.png, where zzz refers to the reach number) are generated that contain the load allocation reports at only the requested locations.

In addition to the source-load allocation report, HSPEXP+ generates several other nutrient balance reports that include nutrient loadings from each PERLND and IMPLND, as well as the fate and transport of nutrients in each RCHRES on an annual basis and annual average basis. HSPEXP+ also generates reports with a detailed nutrient budget for each RCHRES on an annual average basis. For every nutrient balance, a box-and-whisker plot of the nutrient loading rate is also generated.

To calculate the source-load allocation, the average annual contribution of each individual source (nonpoint, point, direct atmospheric deposition) is calculated at each reach starting at the most upstream reach. If any losses of nutrient occur in the stream on an average annual basis because of settling/deposition to the channel bottom or other biochemical processes, then the losses are applied back to each individual source proportional to its relative contribution. As we move downstream, the contribution of each source is recalculated, including the upstream sources. If losses occur at a downstream reach, they are applied proportionally (as reductions) to the cumulative sources. This calculation is performed for all the reaches in the watershed. If any pollutant gains occur in the reach, the gains are not applied back to the sources, since they are derived from the channel and not the upstream sources. The losses and gains are accumulated separately for each reach, and the gains are reported as a separate source.

The output locations for the Illinois River watershed (IRW) model are shown in Figure 3-17. The typical output in the load allocation file is shown in the example Tables 3-5 and 3-6 for the IRW model [AQUA TERRA Consultants, 2015]. Table 3-5 provides the loads allocated to each source, and Table 3-6 shows the load percentages derived from each source. The column headings for the two tables are described in Table 3-4. Note that Pasture1 and Pasture1-Litter from the IRW watershed modeling report were combined to Pasture1, and the three urban categories were combined to one urban category, developed, to save space.



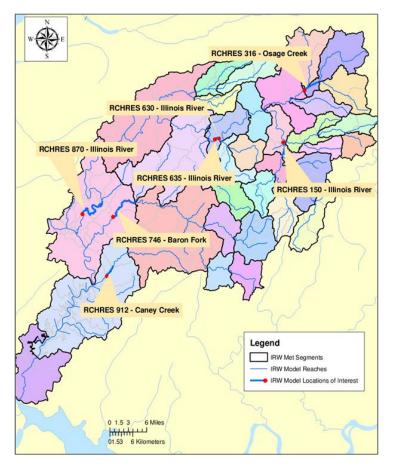


Figure 3-17. Locations in Illinois River Watershed Model at Which Load Allocation Reports Are Generated.



Table 3-4. Explanation of Column Headings for Tables 3-5 and 3-6

Column Heading	Explanation
Reach	Name and number of reach. This value is read from the GEN-INFO table for the RCHRES section. This section should be as descriptive as possible in the UCI file.
P: PERLND Name or I: IMPLND Name	These column names are generated from the GEN-INFO table in the UCI file for the PERLND and IMPLND sections. Each land use is listed in these columns. The values in these columns represent the loading from the respective land use to the respective reach once the losses in the reach have been accounted for.
Point Sources	Contribution of point sources to the specific reach, once losses have been accounted for.
Direct Atmospheric Deposition in the Reach	Direct atmospheric deposition that falls on the reach surface. The contribution of direct deposition is reduced, proportionally if losses occur in the reach.
Mass Balance Errors/Additional Sources*	Pollutant loads that cannot be accounted for by nonpoint source, point source, or atmospheric deposition. This column also includes any mass balance errors that may result because of precision errors in the HSPF code.
Diversions	If any of the reaches have diversions, the diversion loads are listed here. The diversions are considered lost from the system and are not applied back to the sources.
Cumulative Instream Losses	The losses are added for each reach and the cumulative losses are reported in this column.
Cumulative Instream Gains	The gains are added for each reach and the cumulative gains are reported in this column. For load allocation, gains are considered a source.
Total	Total of all sources

^{*}This includes mass balance errors and any additional source that is not accounted for in listed sources.



Table 3-5. Allocation of Loading of Total Nitrogen (pounds) to Individual Sources After Applying the Losses in the Stream

Reach	P. Forest	P: Pasture1	P: Pasture 2	P: Pasture3	P: Grass/ Shrub/ Barren	P: Developed	P: Wetlands	P: Cropland	l: Developed	Point Sources	Direct Atmospheric Deposition on the Reach	Mass Balance Errors/ Additional Sources ^(a)	Diversion	Cumulative Instream Losses	Cumulative Instream Gains	Total ^(b)
RCHRES 150 Illinois River	210,426	291,959	125,820	232,360	13,862	83,898	1,895	4,321	3,003	30,505	32	88	0	-4,840	-	998,168
RCHRES 316 Osage Creek	45,241	261,821	72,806	257,788	9,071	315,855	444	4,680	29,494	476,590	29	139	0	-12,281	-	1,473,958
RCHRES 630 Illinois River	443,651	734,760	282,550	822,441	43,399	619,124	5,012	11,649	52,237	599,796	145	331	0	-49,109	-	3,615,095
RCHRES 635 Illinois River	444,594	736,430	282,957	823,118	43,515	619,556	5,057	11,646	52,230	599,635	148	331	0	-50,080	-	3,619,216
RCHRES 746 Baron Fork	519,203	357,183	187,292	405,728	110,723	97,807	2,095	3,040	1,487	14,667	73	150	0	-12,542	_	1,699,449
RCHRES 870 Illinois River	1,023,887	1,196,426	414,927	1,090,350	178,289	760,938	12,107	18,652	59,083	709,303	369	500	-48,221 ^(b)	-137,356	-	5,416,609
RCHRES 912 Caney Creek	128,561	119,365	62,122	143,470	14,167	36,423	194	1,531	1,663	19,202	12	46	0	-2,779	-	526,755

⁽a) This column shows mass balance errors because of unit conversion and any additional sources that are not represented traditionally.

⁽b) The total does not include instream losses because they have already been applied to the individual sources.



Table 3-6. Percent Contribution of Individual Sources at Each Reach

Reach	P. Forest	P: Pasture1	P: Pasture2	P. Pasture3	P: Grass/Shrub/ Barren	P: Developed	P: Wetlands	P: Cropland	l: Developed	Point Sources	Direct Atmospheric Deposition on the Reach	Mass Balance Errors/ Additional Sources ^(a)	Diversion	Cumulative Instream Losses	Cumulative Instream Gains	Total ^(b)
RCHRES 150 Illinois River	21.1	29.3	12.6	23.3	1.4	8.4	0.2	0.4	0.3	3.1	0.0	0.0	0.0	-0.5	0.0	100.0
RCHRES 316 Osage Creek	3.1	17.8	4.9	17.5	0.6	21.4	0.0	0.3	2.0	32.3	0.0	0.0	0.0	-0.8	0.0	100.0
RCHRES 630 Illinois River	12.3	20.3	7.8	22.8	1.2	17.1	0.1	0.3	1.5	16.6	0.0	0.0	0.0	-1.4	0.0	100.0
RCHRES 635 Illinois River	12.3	20.4	7.8	22.7	1.2	17.1	0.1	0.3	1.4	16.6	0.0	0.0	0.0	-1.4	0.0	100.0
RCHRES 746 Baron Fork	30.6	21.0	11.0	23.9	6.5	5.8	0.1	0.2	0.1	0.9	0.0	0.0	0.0	-0.7	0.0	100.0
RCHRES 870 Illinois River	18.9	22.1	7.7	20.1	3.3	14.0	0.2	0.3	1.1	13.1	0.0	0.0	-0.9 ^(b)	-2.5	0.0	100.0
RCHRES 912 Caney Creek	24.4	22.7	11.8	27.2	2.7	6.9	0.0	0.3	0.3	3.7	0.0	0.0	0.0	-0.5	0.0	100.0

⁽a) This column shows mass balance errors because of unit conversion and any additional sources that are not represented traditionally. (b) The total does not include Instream losses because they have already been applied to the individual sources.



3.4 RECEIVING WATER MODELS

<under development>

3.5 RESOLVING ERRORS

HSPEXP+ assumes that the user has provided correct data in all the model set-up files; currently, error checking in HSPEXP+ is minimal and rudimentary. In some cases, HSPEXP+ may generate some common errors as a pop-up if the format of some input in the EXS file is incorrect or if some required files are missing. HSPEXP+ also produces a log file every time it is run. Referring to the log file may give some indication of the cause of the error. In most cases, the user may have to refer to the help manual and ensure that all input files are set up correctly. An example of an error in HSPEXP+ is shown in Figure 3-18.

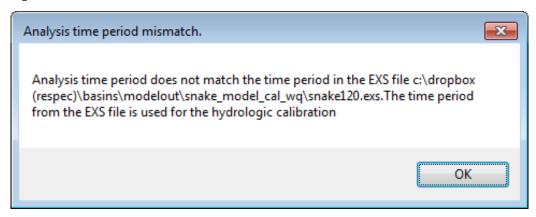


Figure 3-18. Example HSPEXP+ Error.



4.0 LIMITATIONS

Currently, HSPEXP+ can only take into account nonpoint sources, point sources, GENER Sources applied through the SCHEMATIC Block, NETWORK Block, and direct atmospheric deposition to water surfaces. This program cannot account for additional sources such as pollutant loads from tile drainage if represented in an unconventional manner (e.g., through SPEC-ACTIONS). Because of the flexibility of HSPF, additional sources can be modeled several different ways; therefore, including them in a standard reporting program is difficult.

In the versions following HSPEXP+ 1.0, when HSPEXP+ encounters a GENER operation that contributes to a REACH (through a SCHEMATIC or NETWORK block), it checks if the GENER time series is output to a WDM dataset. If the output WDM time series is available, HSPEXP+ reads the time series, obtains the applicable multiplication factors from the MASS-LINK and SCHEMATIC blocks, and calculates the loadings. These loadings are included in the GENER Sources category of the Constituent Budget Report. If the GENER time series is not output to a WDM dataset, the GENER loadings for that reach are included in the Mass Balance Differences/Additional Sources category of the Constituent Budget Report. The user can also tabulate these nonconventional sources separately and recalculate the resulting totals and contribution percent.

Another possible limitation of using HSPEXP+ arises in the case of models with multiple UCI files. For example, models of the Redeye, Long Prairie, and Crow Wing rivers were developed as separate watershed models, where the Redeye and Long Prairie Rivers contributed flow and nutrients to the Crow Wing River, as illustrated in Figure 4-1. When the load allocation report is prepared for the Crow Wing River model, the Redeye and Long Prairie Rivers are considered point sources. When losses occur in the Crow Wing River reaches, they are applied back to the Redeye and Long Prairie Watersheds as point sources, instead of distributing them to the sources upstream of the confluence points of the Redeye and the Long Prairie rivers with the Crow Wing River. The user may have to manually redistribute these losses back to the individual sources of contributing models (in this case, Redeye and Long Prairie River watersheds). HSPEXP+ does not produce reliable loading allocation reports for models that have a complex network (e.g., models where diversions get rerouted back to the model, or different routing based on surface or groundwater flows).



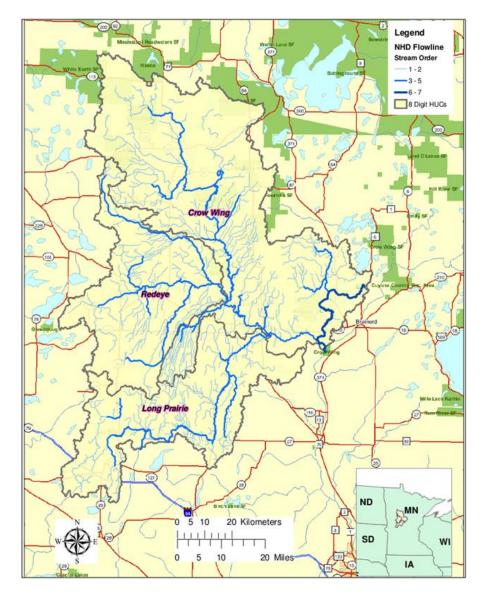


Figure 4-1. Hydrography of Redeye, Long Prairie, and Crow Wing River Watersheds.



5.0 REFERENCES

AQUA TERRA Consultants, 2015. *Illinois River Watershed Nutrient Modeling: Model Calibration and Validation*, prepared by AQUA TERRA Consultants, Mountain View, CA, for the US Environmental Protection Agency Region 6, Dallas, TX.

Bicknell, B. R., J.C. Imhoff, J. L. Kittle, T. H. Jobes, and A. S. Donigian, 2005. *HSPF Version 12.2 User's Manual,* prepared by AQUA TERRA Consultants, Mountain View, CA, for the US Environmental Protection Agency, Office of Surface Water, Reston, VA.

Lumb, A. M., R. B. McCammon, and J. L. Kittle, Jr., 1994. *User's Manual for an Expert System (HSPEXP) for Calibration of the Hydrological Simulation Program-FORTRAN*, Water-Resources Investigations Report 94-4168, prepared by the US Geological Survey, Reston, VA.

Mishra, A.; B. R. Bicknell; P. B. Duda; A. S. Donigian, Jr.; and M. H. Gray, 2017. "HSPEXP+: An Enhanced Expert System for HSPF Model Calibration—A Case Study of the Snake River Watershed in Minnesota," *Journal of Water Management Modeling*, C422, Vol. 25.

Sloto, R. A. and M. Y. Crouse, 1996. *HYSEP: A Computer Program for Streamflow Hydrograph Separation and Analysis*, US Geological Survey Water-Resources Investigations Report 96-4040, prepared by the US Geological Survey, Lemoyne, PA.