

В

Exploded View




Assemble the 12 items together as shown without tightening down any screws. Lay the loose assembly down on a flat surface.

Exact locations of the brackets do not matter yet.

The short red extrusions are for squaring the frame and will be removed later.


ITEM NO.	DESCRIPTION	QTY.
1	583mm TSlot Extrusion	2
2	Inside corner bracket	8
3	75mm Temporary TSlot Extrusion for Squaring	2

Upper Frame Squaring Setup			
<u></u>	(i) BY	Created by: Joshua Vasquez	last edited: 10/8/2019
		SCALE: 1:4	SHEET 1 OF 10

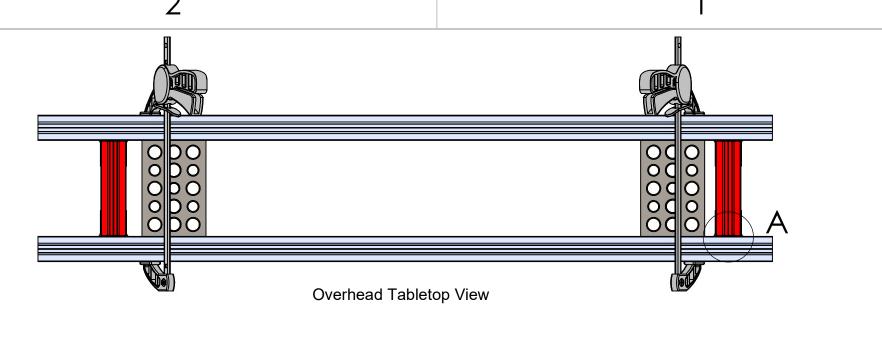

Slide two 1-2-3 Blocks into the frame on either side and loosely clamp the entire setup together as shown above.

Notice that the red extrusions will be loose. This is intentional as they are not being used as references to square the frame. In this configuration, the frame is "square" using the 1-2-3 Blocks as a reference.

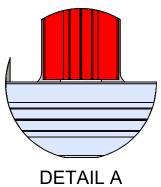


В

DETAIL A SCALE 1:1

Α

В

Upper Frame Bracket Registration			
(a) (b)	Created by:	last edited:	
CCC BY	Joshua Vasquez	10/8/2019	
	SCALE: 1:3	SHEET 2 OF 10	

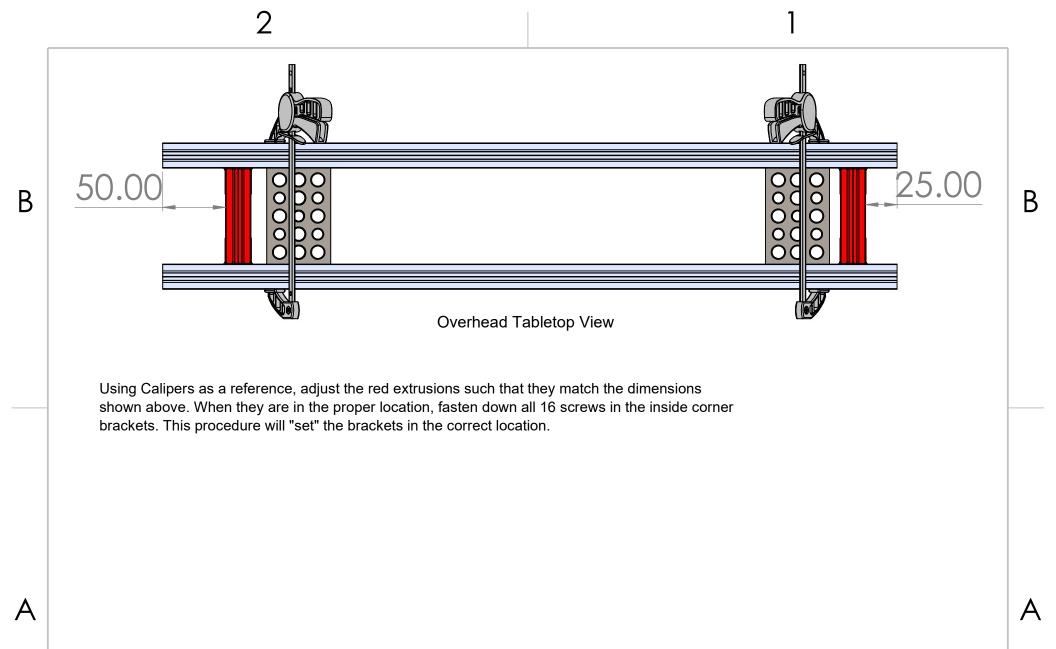

Created by:
Joshua Vasquez


SCALE: 1:3

SHEET 3 OF 10


2

•

Upper Frame Bracket Fixturing

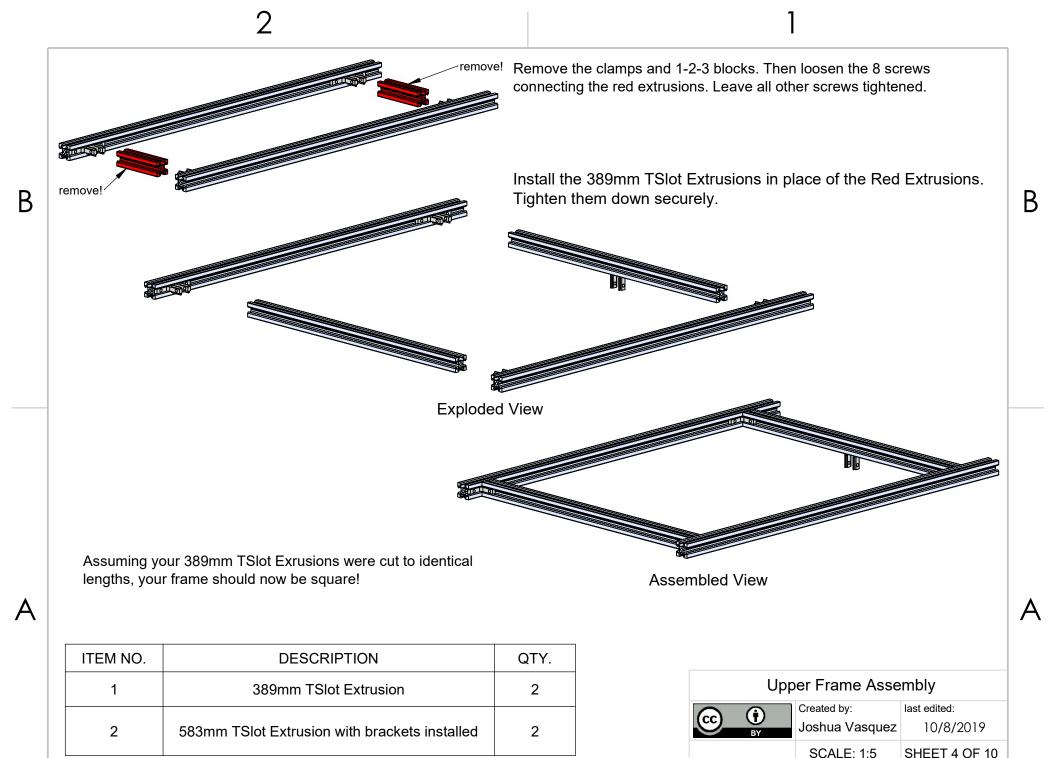



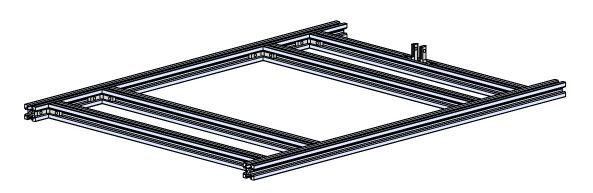

Like before, assemble the entire lower frame without fastening down any set screws.

ITEM NO.	DESCRIPTION	QTY.
1	389mm TSlot Extrusion	4
2	583mm TSlot Extrusion	2
3	Inside corner bracket	18

В

Lower Frame Loose Assembly			
(3)	BY	Created by: Joshua Vasquez	last edited: 10/8/2019
		SCALE: 1:5	SHEET 5 OF 10


В

Δ

В

Make 8 of the following assemblies.

В

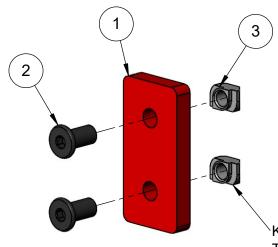

Keep these T-Nuts Loose; only two full turns.
They will be tightened into the frame later.

A

ITEM NO.	DESCRIPTION	QTY.
1	Outer Frame Squaring Plate	8
2	M5 x 0.8 Screw, Low Profile, 10mm	16
3	M5 Drop-In T-Nut for 20x20 Extrusion	16


Squaring Bracket Assembly				
Created by: Joshua Vasquez last edited: 10/8/201			last edited: 10/8/2019	
		SCALE: 1:1	SHEET 6 OF 10	

Join the prior frame with the loose frame "back-to-back" such that the dangling corner brackets do not interfere with each other. Then install the 8 plate assemblies into the corner and tighten them down such that the frame is "pulled" into the shape by the frame from the prior step.

Note: This process is made easier by dangling the frame over a table such that the corner brackets do not prevent the frame from resting flat on


the table surface.

В

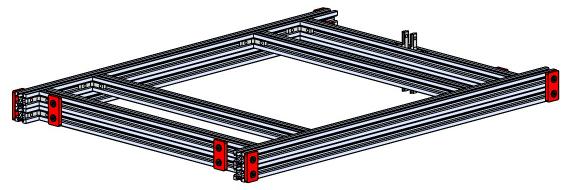

Clamp down the outer frame with the temporary red plates as shown below. This step will pull the lower frame into a configuration that matches the upper frame.

Then clamp down the setscrews in the outer frame extrusions. (The inner extrusions will be clamped down later.)

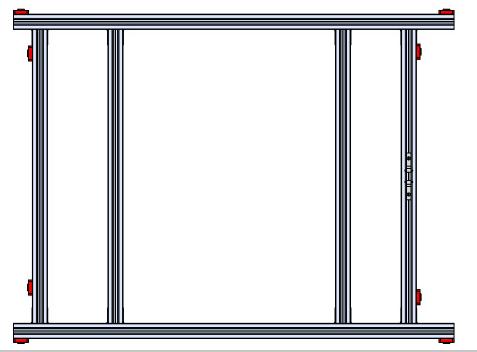

Upper/Lower Frame Registration			
<u>@</u>	()	Created by: Joshua Vasquez	last edited: 10/8/2019
		SCALE: 1:5	SHEET 7 OF 10


1

A

В

Now tighten down the setscrews in the outer frame extrusions on the frame that is still loose. (The inner extrusions will be clamped down later.)

В

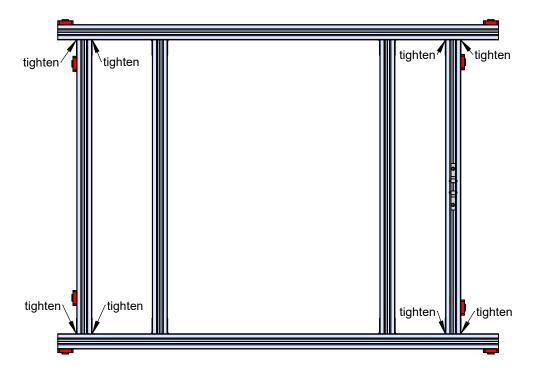

A

Lower Frame Bracket Fixturing				
(cc)	(i)	Created by:	last edited:	
	BY	Joshua Vasquez	10/8/2019	
		SCALE: 1:5	SHEET 8 OF 10	

В

With the outer screws tightened on the lower frame, remove the temporary plates and separate the frames.

В



Set this one aside.

A

Separated Upper/Lower Frames			
	(i)	Created by:	last edited:
(00)	BY	Joshua Vasquez	10/8/2019
		SCALE: 1:6	SHEET 9 OF 10

В

