Introduction	2
Computer Requirements	2
Overview	2
Classifier Assembly	2
Printing the Classifier Models – General Settings	2
Classifier Parts Listing Diagram	3
Classifier – Base Plate	3
Classifier – Camera Module	3
Classifier – Camera Light Ring	3
Classifier – Wheel (Caliber Specific)	4
Classifier – Drive Gear	4
Classifier – Top Lid	4
Classifier – Feed Nozzle (Caliber Specific)	4
Classifier – Tension Cam	4
Classifier – Tension Cam Shim	4
Classifier – Drop Nozzle (Caliber Specific)	4
Classifier Assembly	5
Assembly Diagram	5
Assembly Steps	5
Camera Assembly	6
Sorter Assembly	6
Electronics and Enclosure Assembly	6
Printing the Enclosure Models – General Settings	6
Enclosure – Box	6
Enclosure – Lid	6
Electronics Assembly	6
QUICK STEPS	7
Detailed Instructions	7
Install 40mm Fan	7
Install LED Dimmer	7
Install Power Jack (12v)	8
Install Power Switch	8
Install the Arduino Uno	8
Install the CNC Motor Shield	8
Connect up power wires and ground	8
Parts List	9
Electronics and Enclosure Parts	9

Classifier and Sorter Parts9

Introduction

This document is a guide for those who are interested in creating an AI Headstamp Sorter machine. This document references resources found in the GitHub Repository at https://github.com/sjseth/AI-Case-Sorter-CS7.1

Also available is the video build series at: [link to youtube playlist] (TBD)

Computer Requirements

Central to this project is the Windows based software which handles the picture classification and builds the machine learning models used for classification. Here is the list of requirements to run the software:

- Windows 10 (x64) or greater
- 64bit processor architecture
- Processor must support AVX instructions (AVX, AVX2, etc). Most processors made after 2015 support it. Most Celeron and Atom processors do not support AVX instructions.
- C++ VS Redistributable
- (2) USB 3.0 or type A ports. (a USB hub can be used if the machine has other USB port types)

Overview

The AI Headstamp Sorter machine has 3 major components:

- Classifier The part of the machine which takes a picture of the brass and classifies it. Then it is dropped into the sorter. The camera assembly is included as part of the classifier.
- Sorter The bottom half of the machine which has a rotary arm with tubes to sort the brass into bins.
- Electronics & Enclosure The electronics are housed in an enclosure which is powered by an external power supply and connects to the computer using USB.

Classifier Assembly

Printing the Classifier Models – General Settings

It is highly recommended that you use Black PLA+ for all components in this project. I have used the JAYO brand of PLA+ with great success. For all models, these are the general print settings that I have used:

Nozzle Temp: 222C

• **Bed Temp:** 60C

• Layer Height: .20mm

Support overhang angle: 88 degrees.

Support type: tree

• Infill: 30%

• Infill Pattern: Lines or Grid

These should be the assumed print settings for all models unless specific changes/overrides are indicated below.

The models account for shrinkage already and though a calibrated printer will give you better dimensional results, if you print all the parts with the same print settings, everything should fit together with minimal post-print modification.

The classifier models are available in the GitHub repo folder 3dModels/Classifier

Classifier Parts Listing Diagram



Classifier - Base Plate

Recommend using black PLA+ but if you decide to use a different color, you will need to "black-out" the bottom of the camera hole and surrounding side surfaces to keep the picture dark. Flat black paint or a sharpy will usually work as these parts do not have any wear.

Classifier – Camera Module

Layer Height: .16mm (or smaller).

The camera module has some very small screw holes to facilitate the m2.5 screws needed to bolt on the blower fan. The more precision you can get out of your printer, the better. Recommended to use Black PLA or PLA+ as any other color will result in less-than-optimal image processing results.

It may also help to slow down your print speed on the first 10 layers of this print to get better screw hole definition.

Classifier – Camera Light Ring

Color Material: Non-Opaque White PLA.

The purpose of this part is to diffuse the light from the led light strip. The more translucent the material, the better. Generally cheap white PLA works great here.

Classifier – Wheel (Caliber Specific)

This wheel can be printed in either orientation however, it is recommended to print the wheel with the bottom (non-geared side) down. If you are printing to a smooth glass bed, this may result in a very shiny bottom on the part and you will need to "scuff" it with some light sandpaper 300-400 grid to avoid reflections from the camera backlight. Using print base with a matte texture is recommended. (Example of magnetic print surface)

Classifier – Drive Gear

This part can be printed in any color you choose. Recommend PLA+ for greater durability but no problems have been reported with just standard PLA.

Classifier – Top Lid

This lid was designed for two functions:

- 1. To support the feed tube mechanism.
- 2. To block overhead ambient light from leaking into the camera.

It is for this second function that it is recommended that this part also be printed in black.

Classifier – Feed Nozzle (Caliber Specific)

Any desired color can be used for this part.

Classifier – Tension Cam

• Layer Height: .16

• Infill: 100%

Classifier – Tension Cam Shim


This part should thread snugly onto an M6 bolt or threaded rod. It should also fit loosely in the tension cam. Print the part as is and if there is a fit issue, scale the part up or down by 1% until you get the desired fit. The cam should move freely and easily when installed over this part.

This part should be printed in Black.

Classifier – Drop Nozzle (Caliber Specific)

The drop nozzle is designed cancel the rotational effect on the falling brass and allow the brass to drop straight down into the sort tube which as the effect of a smoother/faster sort drop (vs the brass rattling around in the tube and not making it into the desired sort bucket in time. Standard print settings apply but the part should be a press fit into the drop hole. If it is too tight/loose, use scaling in your slicer to upscale/downscale by 1%.

This part is not required but may improve performance. It can be printed in the color of your choosing.

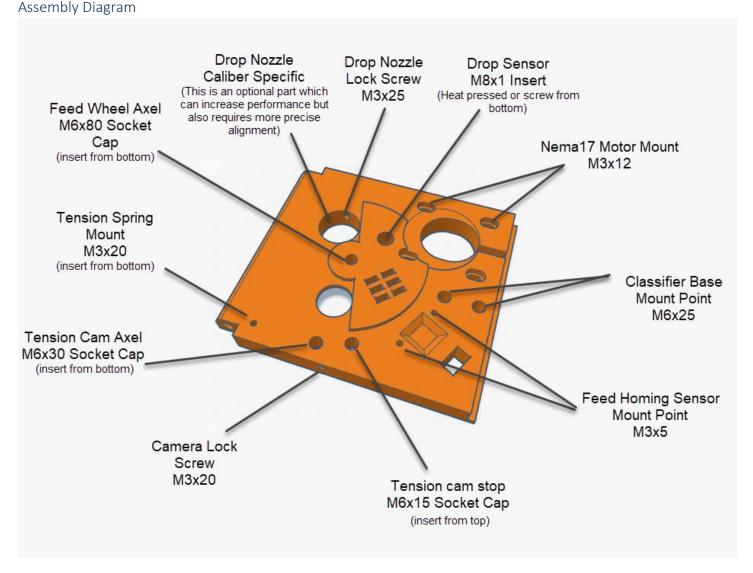

Assembly Steps

Installing the parts in the correct order can save you time and frustration. Here is the best order I have found for construction:

- 1. Test fit the camera housing into the base. It should have a snug press fit. If the fitment is loose, you will need to use the Camera Lock Screw (m3x20) to secure the camera in place. You will need to remove any burrs and might need to lightly sand the outside of the camera housing to get a good fit. We will install this part last but it is easiest to make sure it is going to fit before installing the rest of the hardware.
- 2. Install the Drop Sensor insert. This is an M8x1.0 threaded insert (see parts list) (don't confuse it with M8x1.25 which is more commonly available). The threaded insert can be threaded into the sensor hole from the bottom if you have an m8x1 bolt handy, otherwise it is recommended to use a hot soldering iron to press fit it into the
 - Be careful not to seat the insert all the way in flush to the body and it should hang approx. 1/8in below the base.
- 3. Install the Proximity Sensor (Drop Sensor) into the threaded insert. You should screw this in until the top of the insert is flush or slightly below the top surface of the classifier base. If sensor is too high, it will catch on the feed wheel.

- 4. Install the Feed Wheel Axel (m6x80mm socket cap screw). This screw threads from the bottom and should be threaded snug to the base. **DO NOT OVER TIGHTEN.** If you use a different type of screw, it is possible the head of that screw may be too large and interfere with the camera hole. Socket head is recommended.
- 5. Install the Nema17 Motor. Do not tighten the motor screws all the way down yet. Slide the motor towards the back of the slot. Install the coupler flange on to the motor shaft.
- 6. Press fit the drop nozzle for your desired caliber (see caliber conversion kits). If the fit is too loose, you will need to use an m3x30 set screw to hold it in place.
- 7. Install Tension Cam Axel Screw from bottom and seat flush to base (M6x30). Thread the Tension Cam shim onto the tension cam screw until it is snug to the base. You should be able to thread this part by hand. If it is too tight, you might consider printing another which is 1-2% larger.
- 8. Install the Tension Cam spring mount from the bottom (m3x20)
- 9. Install the Tension Cam stop screw from the top and thread until the bolt is flush with the bottom of the base.
- 10. Insert [size] o-ring on the tension cam
- 11. Slide Tension cam over the tension cam shim/axel.
- 12. Attach extension spring to cam and spring mount. Thread m3 nut down onto spring mount screw .

 Pro Tip: Rather than use a nut to secure the spring, use the edge of a sharp file or Dremel to cut a notch about 1/4in down on the m3 screw. It only needs to be deep enough to keep the spring from sliding off. This makes removal of the cam much easier.
- 13. Install Feed wheel with bearing preinstalled. The wheel should easily slide down over the m6 axel screw. Add a lock nut or two standard nuts to the top of the wheel. Do not over tighten as the wheel should move freely.
- 14. Install the homing sensor. This takes two m3x10 (or shorter) screws.

Camera Assembly

Sorter Assembly

[TBD]

Electronics and Enclosure Assembly

Printing the Enclosure Models – General Settings

The electronics enclosures can be printed in any material and color of your choosing. This is entirely personal preference and I make no recommendations here.

Enclosure - Box


This box houses the electronics. As long as it is printed to spec, it should match up to existing Arduino uno holes. It is recommended that you should use a support angle of 88 degrees. The only support area needed is the USB hole.

Enclosure - Lid

Recommend to print along with the box with the same material so after accounting for shrinkage, everything works.

Electronics Assembly

Refer to the <u>Parts List</u> section below for the list parts and resources to acquire the needed components to complete this project

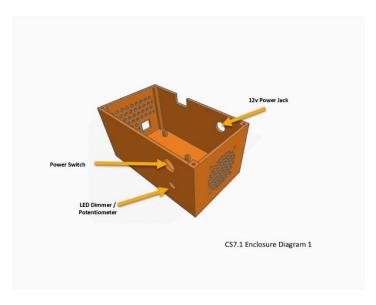

QUICK STEPS

- 1. Install 40mm Fan
- 2. Install LED Dimmer with 4.7K resistor.
- 3. Install 12v Jack
- 4. Install Power switch
- 5. Install Arduino Uno
- 6. Install Motor Shield
- 7. Connect all 12v power lines and ground
 - a. Arduino Shield
 - b. Dimmer
 - c. Fan
 - d. Drop Sensor
 - e. Wires for Camera Fan with connectors
 - f. Wires for Camera Light with connectors
- 8. Attach motor cables to shield
- 9. Add Motor controller to shield (TCM2209)
- 10. Adjust Vref on motors
- 11. Load Arduino code onto Arduino

Detailed Instructions

Install 40mm Fan

The 40mm fan should be installed on the inside of the enclosure. The back of the fan has hex shaped holes where the 3mm nuts should be placed the front of the fan should face the enclosure wall grill. You will need (4) M3 screws of approximately 15mm length. Do not connect the fan wiring just yet.

Install LED Dimmer

Connect red and black wires to the power side of the dimmer. The wires should be approx. 4-6 inches in length to and they can be cut down to size later. These wires will connect to 12v and ground. On the motor/led side of the dimmer, connect two smaller wires (22-24AWG) of approximately 6-8in. You will need to install the 4.7K resister between the positive output and the connector which will provide a more useable light range. It is recommended to use yellow and black to signify low signal and ground. These wires should have female connectors so they can be quickly detached from the sort system for maintenance.

Install Power Jack (12v)

If you are not using the power jacks with pre-soldered wires, you will need to solder 6" 16AWG wires to the leads. Red wire on the center pin and black on the outer .

Install Power Switch

Solder 16AWG red wires of approx. 6" length to both leads on the power button. Install into the enclosure and secure with a nut.

Install the Arduino Uno

The Arduino Uno should drop right into the box and us the usb hole for alignment. The Arduino is secured by M3 x 5mm screws. Do not over tighten these or you will break the screw risers. If you can get all 4 screws in, don't fight it. It will be plenty secure with just two screws. Magnetic screwdriver helps here.

Install the CNC Motor Shield

Before seating the motor shield, you should attach the two 16AWG wires (red & black) of approx. 6" length to the power connector on the shield. This can be difficult to do after it has been seated.

Align the pins and carefully press down on to the Arduino. If you have it lined up, it should only take mild pressure to seat it.

Connect up power wires and ground

The red wire from the power jack should connect directly to one of the red wires on the power switch (it doesn't matter which). The rest of your red wires should be bonded together to form a power rail. Your black ground wires should also be bound together to form a ground rail. You can use any method you like to wire these together but I prefer to use connectors such as these:



https://www.amazon.com/gp/product/B0BKTNDP9K

Parts List

raits List			
Electronics and Enclosure Parts			
12v Jack	 https://www.amazon.com/gp/product/B091PS6XQ4 https://www.amazon.com/gp/product/B07Y8KKSR1/ 		
12mm Push button switch	 https://www.amazon.com/gp/product/B06XF6PT9L https://www.amazon.com/Cylewet-Self-Locking-Latching-Button-CYT1091/dp/B075VBV4QH 		
12v motor dimmer PWM (led dimmer)	https://www.amazon.com/gp/product/B07GP72BWV		
Arduino Uno R3 (Genuine Arduino recommended)	 https://www.amazon.com/ELEGOO-Board-ATmega328P-ATMEGA16U2-Compliant/dp/B01EWOE0UU https://www.amazon.com/Arduino-A000066-ARDUINO-UNO-R3/dp/B008GRTSV6 https://www.amazon.com/SunFounder-Board-Arduino-ATMEGA328P-ATMEGA16U2/dp/B08353DL5P 		
CNC Expansion Shield	 https://www.amazon.com/WWZMDiB-CNC-Shield-V3- Engraving/dp/B0BQDW1H8Z https://www.amazon.com/Ximimark-Engraver-Printer- Expansion-Arduino/dp/B07L74X18N https://www.amazon.com/Printer-A4988-Expansion-Arduino- Engraver/dp/B09YR2HZP6 		
(7) 2-pin jumpers	https://www.amazon.com/gp/product/B077957RN7		
40mm 12v Fan	• https://www.amazon.com/gp/product/B07CH6YC32		
12v 5amp Power supply	 https://www.amazon.com/gp/product/B01GEA8PQA https://www.amazon.com/gp/product/B0711Q5B49 		
4.7K Ohm Resistor	• https://www.amazon.com/California-JOS-4-7K-Tolerance-Resistance/dp/B0B4FXTWWY		
Classifier and Sorter Parts			
(2) Nema 17 Motors (1.5a)	 https://www.amazon.com/STEPPERONLINE-Stepper-Bipolar- 42x42x38mm-Connector/dp/B0B38GX54H https://www.amazon.com/gp/product/B07TGJT5M2 		
Nema17 motor cables	 https://www.amazon.com/lverntech-XH2-54-Terminal-Stepper- Printer/dp/B08SQ35LRQ 		
(2) 5mm ID Flange Shaft Coupling	 https://www.amazon.com/gp/product/B07L1FMBBC https://www.amazon.com/Befenybay-Hardness-Flange- Coupling-Screws/dp/B07V5YZHTC 		
6.35mm (.25in) x 22mm (.88in) extension spring	 https://www.amazon.com/gp/product/B076XKY3JM You can order the spring by itself, but cheaper to buy the spring kit and have extra springs when you need them. 		

6mm ID , 19mm OD Bearings	https://www.amazon.com/dp/B07FMV2ZHR Recommended have 2 for each caliber you plan on sorting.			
(2) Homing Sensors	 https://www.amazon.com/gp/product/B07PCN6T6F https://www.amazon.com/OCTSEPCY-Mechanical-Horizontal-Switches-Printers/dp/B0B6FJ5YPG 			
Inductive Proximity Sensor (8mm, 3wire NO) Part Number: PR08-2DN	 https://www.amazon.com/gp/product/B081254GB2 https://www.amazon.com/Baomain-Proximity-PR08-2DN-3-wires-Inductive/dp/B01KUIR2QQ/ https://www.amazon.com/uxcell-Inductive-Proximity-Detector-PR08-2DN/dp/B07CWQHQZ1 			
M8x1mm Thread Adaptor (for proximity to screw into)	https://www.amazon.com/dp/B0BMZV52BK			
M6 x 80mm Socket Head Cap Screw	https://www.amazon.com/dp/B01N91YP3N			
M6 Nuts . Locknuts are great	 https://www.amazon.com/M6-1-0-Stainless-Thread-Bright- Finish/dp/B08Y8PV88V https://www.amazon.com/M6-Lock-Nuts-Locknuts- Stainless/dp/B0BFWRKJGZ 			
Threaded Inserts (m3, m4)	 https://www.amazon.com/gp/product/B08Z86Z85R https://www.amazon.com/ShineNow-Inserts-Plastic-Printing-Threaded/dp/B09MK4X1KQ https://www.amazon.com/QLOUNI-Threaded-Embedment-Assortment-Projects/dp/B07YFQ1H5J 			
M6 Cap Screws • (10) M6x25 (Mounts) • (1) M6x16 (TC Stop) • (1) M6x30 (TC Axle)	https://www.amazon.com/120Pcs-Stainless-Socket-Washers- Assortment/dp/B01N0ZU46G			
 M3, M4 Screw assortment (8) M3x12 (motor mounting) (1) M3x15 (Feed Tube Set Screw) (2) M3x15 (Sorter Body Set Screws) (1) M3 x 20 (Tension spring mount) (8) M3 x 10 (motor shaft flange coupling) (1) M3x 15 Camera Set Screw (1) M3x 25 Drop Nozzle Set Screw (2) M4x 15 (Classifier Lid hinge) 	https://www.amazon.com/Assortment-GTERNITY-Assorted- Stainless-Phillips/dp/B08T69WNQ1 temporal com/Assortment-GTERNITY-Assorted-Model			
	•			
	•			
	•			