# Elementary Signals

# **Elementary Signals**

The preparatory reading for this section is Chapter 1 of (Karris, 2012) which


- begins with a discussion of the elementary signals that may be applied to electrical circuits
- introduces the unit step, unit ramp and dirac delta functions
- · presents the sampling and sifting properties of the delta function and
- concludes with examples of how other useful signals can be synthesised from these elementary signals.

An annotatable copy of the notes for this presentation will be distributed before the first class meeting as **Worksheet 3** in the **Week 1: Classroom Activities** section of the Canvas site. I will also distribute a copy to your personal **Worksheets** section of the **OneNote Class Notebook** so that you can add your own notes using OneNote.

You can also view the notes for this presentation as a webpage (HTML) and as a downloadable PDF file.

After class, the lecture recording and the annotated version of the worksheets will be made available to you via OneNote and through Canvas.

Consider the network shown below, where the switch is closed at time t = Tt = T and all components are ideal.

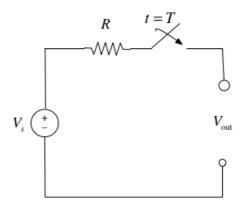

Express the output voltage  $V_{\text{out}} V_{\text{out}}$  as a function of the unit step function, and sketch the appropriate waveform.

# **Solution**

Before the switch is closed at  $t < Tt < T_t$ 


$$V_{\text{out}} = 0$$
.

After the switch is closed for t > Tt > T,

$$V_{\rm out} = V_s$$
.

about:srcdoc Page 1 of 12


We imagine that the voltage jumps instantaneously from 0 to  $V_s V_s$  volts at t = Tt = T seconds.

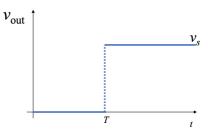

We call this type of signal a step function.

# **The Unit Step Function**

$$u_0(t) = \begin{cases} 0 & t < 0 \\ 1 & t > 0 \end{cases}$$

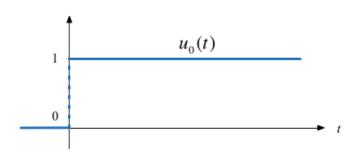


#### In Matlab

In Matlab, we use the heaviside function (named after Oliver Heaviside).


```
%%file plot_heaviside.m

syms t
ezplot(heaviside(t),[-1,1])
heaviside(0)
```

Created file '/Users/eechris/dev/eg-247-textbook/content/elementary\_signals/plot\_heaviside.m'.



about:srcdoc Page 2 of 12

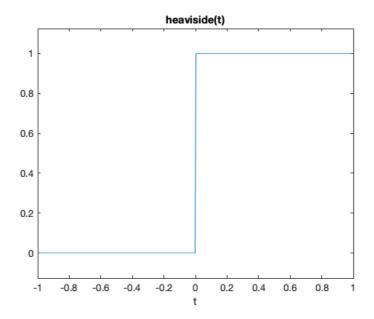

Note that, so that it can be plotted, Matlab defines the *heaviside function* slightly differently from the mathematically ideal unit step:

heaviside(t) = 
$$\begin{cases} 0 & t < 0 \\ 1/2 & t = 0 \\ 1 & t > 0 \end{cases}$$


# **Simple Signal Operations**

# **Amplitude Scaling**

Sketch  $Au_0(t)Au_0(t)$  and  $-Au_0(t)-Au_0(t)$ 


```
syms t;
u0(t) = heaviside(t); % rename heaviside function for ease of use
A = 2; % so signal can be plotted
ezplot(A*u0(t),[-1,1]),grid,title('Applitude scaling $$Au_0(t)$$','interpreter','latex')
```

about:srcdoc Page 3 of 12

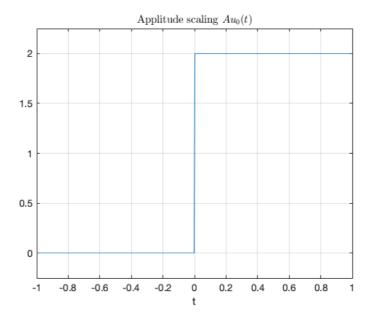

Note that the signal is scaled in the yy direction.

ezplot(-A\*u0(t),[-1,1]), grid, title('Amplitude scaling and mirroring \$\$-Au\_0(t)\$\$','interpreter','ldtex

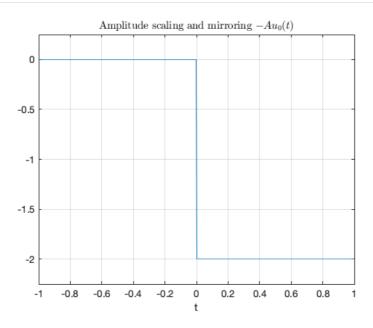


Note that, because of the sign, the signal is mirrored about the xx axis as well as being scaled by 2.

#### **Time Reversal**

Sketch  $u_0(-t)u_0(-t)$ 


about:srcdoc Page 4 of 12

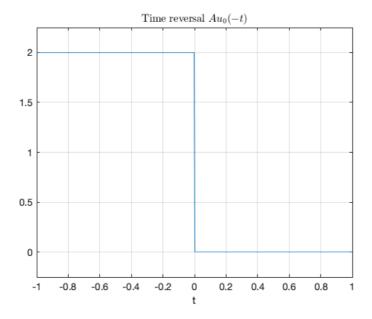

The sign on the function argument -t-t causes the whole signal to be reversed in time. Note that another way of looking at this is that the signal is mirrored about the yy axis.


### **Time Delay and Advance**

Sketch  $u_0(t-T)u_0(t-T)$  and  $u_0(t+T)u_0(t+T)$ 

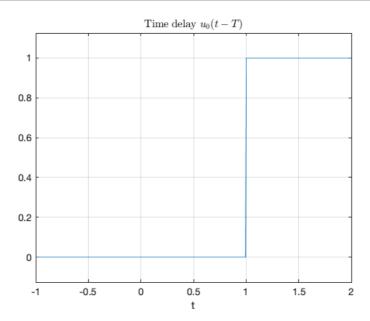

This is a *time delay* ... note for  $u_0(t-T)u_0(t-T)$  the step change occurs T seconds **later** than it does for  $u_0(t)u_0(t)$ .

about:srcdoc Page 5 of 12

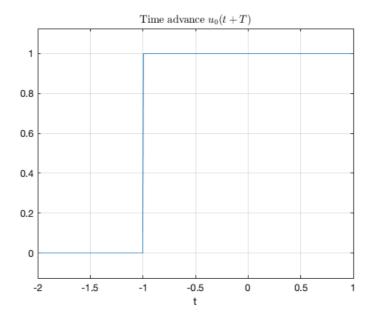

This is a *time advance* ... note for  $u_0(t+T)u_0(t+T)$  the step change occurs T seconds **earlier** than it does for  $u_o(t)u_o(t)$  .


#### **Examples**

We will work through some examples in class. See Worksheet 3.

# Synthesis of Signals from the Unit Step

Unit step functions can be used to represent other time-varying functions such as rectangular pulses, square waves and triangular pulses. See Worksheet 3 for the examples that we will look at in class.

# **The Ramp Function**

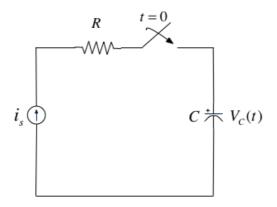

In the circuit shown above  $i_s i_s$  is a constant current source and the switch is closed at time t = 0t = 0.

When the current through the capacitor  $i_c(t) = i_s i_c(t) = i_s$  is a constant and the voltage across the capacitor is

about:srcdoc Page 6 of 12

$$v_c(t) = \frac{1}{C} \int_{-\infty}^{t} i_c(\tau) \ d\tau$$

where  $\tau \tau$  is a dummy variable.

Since the switch closes at t = 0, we can express the current  $i_c(t)i_c(t)$  as

$$i_c(t) = i_s u_0(t)$$

and if  $v_c(t) = 0v_c(t) = 0$  for t < 0t < 0 we have


$$v_c(t) = \frac{1}{C} \int_{-\infty}^{t} i_s u_0(\tau) \ d\tau = \underbrace{\frac{i_s}{C} \int_{-\infty}^{0} i_c(\tau) \ d\tau}_{0} + \frac{i_s}{C} \int_{0}^{t} i_c(\tau) \ d\tau$$

So, the voltage across the capacitor can be represented as

$$v_C(t) = \frac{i_s}{C} t u_0(t)$$

To sketch the wave form, let's arbitrarily let CC and  $i_si_s$  be one and then plot with MATLAB.

```
C = 1; is = 1;
vc(t)=(is/C)*t*u0(t);
ezplot(vc(t),[-1,4]),grid,title('A ramp function')
```

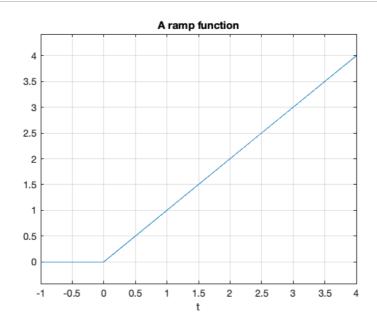

This type of signal is called a **ramp function**. Note that it is the *integral* of the step function (the resistor-capacitor circuit implements a simple integrator circuit).

about:srcdoc Page 7 of 12

The unit ramp function is defined as

$$u_1(t) = \int_{-\infty}^{t} u_0(\tau) d\tau$$

so

$$u_1(t) = \begin{cases} 0 & t < 0 \\ t & t > 0 \end{cases}$$

and

$$u_0(t) = \frac{d}{dt}u_1(t)$$

### Note


Higher order functions of *tt* can be generated by the repeated integration of the unit step function.

For future reference, you should determine  $u_2(t)u_2(t)$ ,  $u_3(t)u_3(t)$  and  $u_n(t)u_n(t)$  for yourself and make a note of the general rule:

$$u_{n-1} = \frac{1}{n} \frac{d}{dt} u_n(t)$$

Details are given in equations 1.26—1.29 in Karris.

# **The Dirac Delta Function**

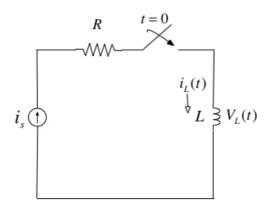

In the circuit shown above, the switch is closed at time t=0 t=0 and  $i_L(t)=0$   $i_L(t)=0$  for t<0 t<0. Express the inductor current  $i_L(t)i_L(t)$  in terms of the unit step function and hence derive an expression for  $v_L(t)v_L(t)$ .

#### **Solution**

about:srcdoc Page 8 of 12

$$v_L(t) = L \frac{di_L}{dt}$$

Because the switch closes instantaneously at t = 0t = 0

$$i_L(t) = i_s u_0(t)$$

Thus

$$v_L(t) = i_s L \frac{d}{dt} u_0(t).$$

To solve this problem we need to invent a function that represents the derivative of the unit step function. This function is called  $\delta(t)\delta(t)$  or the *dirac delta* function (named after Paul Dirac).

#### The delta function

The unit impulse or the delta function, denoted as  $\delta(t)\delta(t)$ , is the derivative of the unit step.

This function is tricky because  $u_0(t)u_0(t)$  is discontinuous at t=0 t = 0 but it must have the properties

$$\int_{-\infty}^{t} \delta(\tau)d\tau = u_0(t)$$

and

$$\delta(t) = 0 \ \forall \ t \neq 0.$$

#### Sketch of the delta function



#### **MATLAB Confirmation**

about:srcdoc Page 9 of 12

Note that we can't plot dirac(t) in MATLAB with ezplot.

### Important properties of the delta function

# **Sampling Property**

The sampling property of the delta function states that

$$f(t)\delta(t-a) = f(a)\delta(t-a)$$

or, when a = 0a = 0,

$$f(t)\delta(t) = f(0)\delta(t)$$

Multiplication of any function f(t) f(t) by the delta function  $\delta(t) \delta(t)$  results in sampling the function at the time instants for which the delta function is not zero.

The study of descrete-time (sampled) systems is based on this property.

You should work through the proof for youself.

#### **Sifting Property**

The sifting property of the delta function states that

$$\int_{-\infty}^{\infty} f(t)\delta(t-\alpha)dt = f(\alpha)$$

That is, if multiply any function f(t) f(t) by  $\delta(t - \alpha) \delta(t - \alpha)$ , and integrate from  $-\infty - \infty$  to  $+\infty + \infty$ , we will get the value of f(t) f(t) evaluated at  $t = \alpha . t = \alpha$ .

You should also work through the proof for yourself.

#### **Higher Order Delta Fuctions**

the nth-order delta function is defined as the nth derivative of  $u_0(t)u_0(t)$ , that is

$$\delta^n(t) = \frac{d^n}{dt^n} [u_0(t)]$$

The function  $\delta'(t)\delta^{'}(t)$  is called the *doublet*,  $\delta''(t)\delta^{''}(t)$  is called the *triplet* and so on.

By a procedure similar to the derivation of the sampling property we can show that

about:srcdoc Page 10 of 12

$$f(t)\delta'(t-a) = f(a)\delta'(t-a) - f'(t)\delta(t-a)$$

Also, derivation of the sifting property can be extended to show that

$$\int_{-\infty}^{\infty} f(t)\delta^{n}(t-\alpha)dt = (-1)^{n} \frac{d^{n}}{dt^{n}} [f(t)] \bigg|_{t=\alpha}$$

#### Summary

In this chapter we have looked at some elementary signals and the theoretical circuits that can be used to generate them.

#### **Takeaways**

- You should note that the unit step is the *heaviside function*  $u_0(t)u_0(t)$ .
- Many useful signals can be synthesized by use of the unit step as a "gating function" in combination with other signals
- That unit ramp function  $u_1(t)u_1(t)$  is the integral of the step function.
- The *Dirac delta* function  $\delta(t)\delta(t)$  is the derivative of the unit step function. We sometimes refer to it as the *unit impulse function*.
- The delta function has sampling and sifting properties that will be useful in the development of *time convolution* and *sampling theory*.

#### **Examples**

We will do some of these in class. See worksheet3.

#### Homework

These are for you to do later for further practice. See Homework 1.

#### References

- 1. Holdgraf, C. R., de Heer, W., Pasley, B. N., & Knight, R. T. (2014). Evidence for Predictive Coding in Human Auditory Cortex. In *International Conference on Cognitive Neuroscience*. Brisbane, Australia, Australia: Frontiers in Neuroscience.
- Holdgraf, C. R., de Heer, W., Pasley, B. N., Rieger, J. W., Crone, N., Lin, J. J., ... Theunissen, F. E. (2016). Rapid tuning shifts in human auditory cortex enhance speech intelligibility. *Nature Communications*, 7(May), 13654. https://doi.org/10.1038/ncomms13654
- Holdgraf, C. R., Culich, A., Rokem, A., Deniz, F., Alegro, M., & Ushizima, D. (2017). Portable learning environments for hands-on computational instruction using container-and cloud-based technology to teach data science. In ACM International Conference Proceeding Series (Vol. Part F1287). https://doi.org/10.1145/3093338.3093370
- Holdgraf, C. R., Rieger, J. W., Micheli, C., Martin, S., Knight, R. T., & Theunissen, F. E. (2017). Encoding and decoding models in cognitive electrophysiology. *Frontiers in Systems Neuroscience*, 11. https://doi.org/10.3389/fnsys.2017.00061
- 5. Flanagan, D., & Matsumoto, Y. (2008). The Ruby Programming Language. O'Reilly Media.
- 6. Karris, S. T. (2012). Signals and systems with MATLAB computing and Simulink modeling. Fremont, CA.: Orchard

about:srcdoc Page 11 of 12

Publishing. Retrieved from https://ebookcentral.proquest.com/lib/swansea-ebooks/reader.action?docID=3384197

- 7. Wickert, M. (2013). *Signals & systems for dummies*. Hoboken, NJ: Wiley. Retrieved from https://ebookcentral.proquest.com/lib/swansea-ebooks/detail.action?docID=1192822
- 8. Boulet, B. (2006). *Fundamentals of signals and systems*. Hingham, Mass.: Da Vinci Engineering Press. Retrieved from https://ebookcentral.proquest.com/lib/swansea-ebooks/detail.action?docID=3135971
- 9. Boulet, B. (2006). *Fundamentals of signals and systems*. Hingham, Mass.: Da Vinci Engineering Press. Retrieved from https://ebookcentral.proquest.com/lib/swansea-ebooks/detail.action?docID=3135971
- 0. Hsu, H. P. (2011). *Schaums outlines signals and systems*. HNew York, NY: McGraw-Hill. Retrieved from https://www.dawsonera.com/abstract/9780071634731

about:srcdoc Page 12 of 12