

深圳大夏龙雀科技有限公司

Shenzhen DX-SMART Technology Co Ltd.

DX-BT24-T 蓝牙模块 DX-BT24-T Bluetooth Module

Note: English instructions go to page 15 (英文说明书请跳转到第15页)

技术手册 v1.0

版本	修订日期	修订说明	维护人
V1.0	2021/03/06	初始版本	DL



目录

一、	概述	3
二、	模块默认参数 ·····	3
三、	应用领域······	3
四、	功耗参数	•••••4
五、	射频特性	•••••4
六、	透传参数	•••••4
七、	模块引脚说明及最小电路图	5
八、	管脚功能描述	5
	功能引脚详细说明	
十、	外形尺寸	7
+-	-、LAYOUT 注意事项····································	8
十二		9
	12.1测试指令	10
	12.2 获取软件版本号	10
	12.3 查询一蓝牙地址码	10
	12.4 查询一设备名称	10
	12.5 查询一串口波特率	10
	12.6查询串口停止位	11
	12.7查询一串口校验位	11
	12.8 设置\查询一通知上位机连接状态	11
	12.9 设置\查询—通知连接含地址码	12
	12. 10 查询—服务 SERVICE UUID	12
	12. 11 查询—通知 NOTIFY UUID\写入 WRITE UUID	12
	12.12 查询一写入 WRITE UUID	13
	12.13 设置\查询一低功耗模式(注:每次重启都会恢复默认值)	
	12.14查询一广播时间间隔	
	12.15 查询一模块发射功率	14
	12. 16 软件重启	14
	12.17恢复出厂设置(注:每次重启都会恢复默认值)	14
十三	、联系我们••••••••••••••••••••••••••••••••••••	14

一. 概述

DX-BT24-T 5.1蓝牙模块是深圳大夏龙雀科技有限公司专为智能无线数据传输而打造,采用英国DAILOG公司14531芯片,配置 256Kb 空间,遵循V5.1 BLE蓝牙规范。用户可根据AT 指令查询需要串口波特率、设备名称等参数,使用灵活。

本模块支持 UART 接口,并支持蓝牙串口透传, 具有成本低、体积小、功耗低、收发灵敏性高等优 点,只需配备少许的外围元件就能实现其强大功 能。



二. 模块默认参数:

蓝牙协议	Bluetooth Specification V5.1 BLE	
工作频率	2.4GHz ISM band	
通信接口	UART	
供电电源	3.3V	
天线	可以选择PCB板载天线、或外接DB天线(默认为PCB天线)	
通信距离	5M 以内	
外观尺寸	8.3(L)mm x7.6 (W)mm x 2(H) mm	
蓝牙认证	FCC CE ROHS REACH	
蓝牙名称	BT24-T	
串口参数	9600、8数据位、1停止位、无校验、无流控	
空中升级	不支持	
Service UUID	FFE0	
Notify & Write UUID	FFE1	
Write UUID	FFE2	
Work temperature	MIN:-40°C - MAX:+85°C	
定制需求	如有其它特殊功能要求,可以联系我司,对模块进行定制	

三.应用领域:

DX-BT24-T 模块同时支持 BT5.1 BLE 协议,可以同具备 BLE 蓝牙功能的 iOS 设备直接连接,支持后台程序常驻运行。主要用于短距离的数据无线传输领域。避免繁琐的线缆连接,能直接替代串口线。BT24-T 模块成功应用领域:

※ 蓝牙无线数据传输; ※ 手机、电脑周边设备;

※ 手持 POS 设备; ※ 医疗设备无线数据传输;

※ 智能家居控制;※ 蓝牙近知机;※ 蓝牙遥控玩具;※ 共享单车;



四. 功耗参数

广播间隔 540ms 下			
模式	状态	电流	Unit
 低功耗模式	Discoverable	16	uA
M. M. D. C.	Connected	285	uA
正常工作模式	Discoverable	266	uA
	Connected	285	uA
透传数据时	Connected	MIN:310 uA	
(11520Bytes/s)		MAX:3.5 mA	
		(MIN 为最小数据量,MAX 为 最大数据量时的功耗)	

五. 射频特性

Rating	Value	Unit
BLE 发射功率	-19.5~+2.5	dBm
BLE 灵敏度	-94	dBm

六. 透传参数


数据吞吐量:

Android ->BT24-T -> UART		UART ->BT24-T -> Android	
波特率	115200	波特率	115200
连接间隔时间(ms)	15	连接间隔时间(ms)	15
APP 数据包大小(bytes)	230	串口数据包大小(bytes)	320
发送间隔(ms)	20	发送间隔(ms)	20
吞吐量(bytes/s)	10120	吞吐量(bytes/s)	10626
Characteristic 写方式	Write without	Characteristic 通知方式	Notify
	Response		
iPhone ->BT24-T -> UART		UART ->BT24-T ->	iPhone
波特率	115200	波特率	115200
连接间隔时间(ms)	30	连接间隔时间(ms)	30
APP 数据包大小(bytes)	140	串口数据包大小(bytes)	180
发送间隔(ms)	20	发送间隔(ms)	50
吞吐量(bytes/s)	5600	吞吐量(bytes/s)	3240

Characteristic 写方式	Write without	Characteristic 通知方式	Notify
	Response		

注:此表格参数仅做参考,不代表模组能支持的最大数据吞吐量。

七. 模块引脚说明及最小电路图:

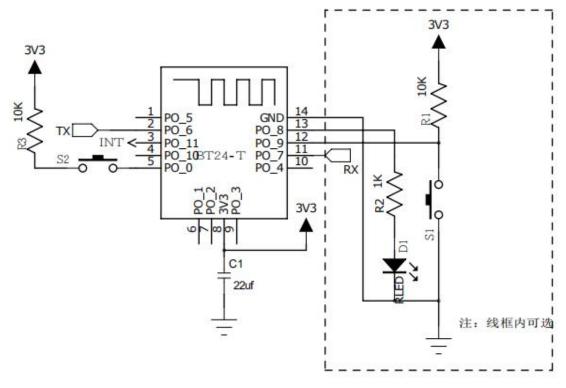

八. 管脚功能描述:

管脚序号	管脚名称	管脚说明
1	P0_5	可编程输入输出口
2	TX	串口数据输出
3	P1_11	蓝牙连接指示口(未连接为低,连接上为高)
4	PO_10	可编程输入输出口
5	P0_0/Reset	复位脚(输入200ms高电平脉冲)
6	P0_1	可编程输入输出口
7	P0_2	可编程输入输出口
8	VCC	电源 V3. 3
9	P0_3	时钟输入脚/可编程输入输出口
10	P0_4	时钟输入脚/可编程输入输出口
11	RX	串口数据输入

12	PO_9	断开连接引脚 (200ms 低电脉冲断开) 低功耗模式唤醒 (200ms 低电脉冲唤醒)	
13	PO_8	LED 灯管脚 (未连接: 1s 亮 1s 灭,连接: 3s 亮 50ms 灭)	
14	GND	地	

九. 功能引脚详细说明

1、13 脚 (P0_8): LED 灯指示引脚

•用于指示蓝牙模块所处状态,LED灯闪烁方式与蓝牙模块状态对应见下表:

模块	LED 显示	模块状态
11 +# ++	均匀慢速闪烁(1s-on, 1s-off)	待机状态
从模块	亮 3s 灭	连接状态
	50ms (3s-on, 50ms-off)	
	低功耗模式下灯灭	

2、3 脚(P1_11): 连接状态指示脚

引脚状态	模块状态
输出低电平	待机状态
输出高电平	连接状态

3、12 脚(P0_9):连接中断脚(模块处于连接状态有效)

引脚状态	模块状态
无动作	连接状态
从模块输入 200ms 低电平脉冲	中断连接,模块进入低功耗模式
	(进入之前设置的工作模式, 如未设
	置则是正常工作模式)

4、1 脚(PO_9):低功耗模式唤醒脚(模块处于低功耗模式有效)


引脚状态	模块状态	
无动作	低功耗模式	
从模块输入 200ms 低电平脉冲	从低功耗模式唤醒,模块进入待机状态	

5、低功耗和正常工作模式对比

	正常工作模式	低功耗模式
AT 指令	上电即可发送 AT 指令	P0_9: 200ms 低电脉冲唤醒才能发 AT 指令
灯状态	均匀慢速闪烁	灯不亮

十. 外形尺寸:

厚度: 2.0mm±0.2mm

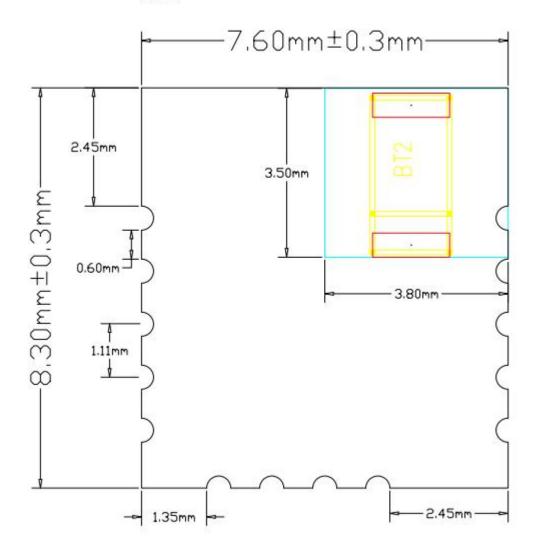


十一. LAYOUT 注意事项


DX-BT24-T 蓝牙模块工作在2.4G无线频段,应尽量避免各种因素对无线收发的影响,注意以下几点:

- 1、包围蓝牙的产品外壳避免使用金属,当使用部分金属外壳时,应尽量让模块天线部分远离金属部分。产品内部金属连接线或者金属螺钉,应尽量远离模块天线部分。
- 2、模块天线部分应靠载板PCB 四围放置,不允许放置于板中,且天线下方载板铣空,与天线平行的方向,不允许铺铜或走线、或直接把天线部分直接露出载板.
- 3、建议在基板上的模块贴装位置使用绝缘材料进行隔离,例如在该位置放一个整块的

丝印 (TopOverLay)

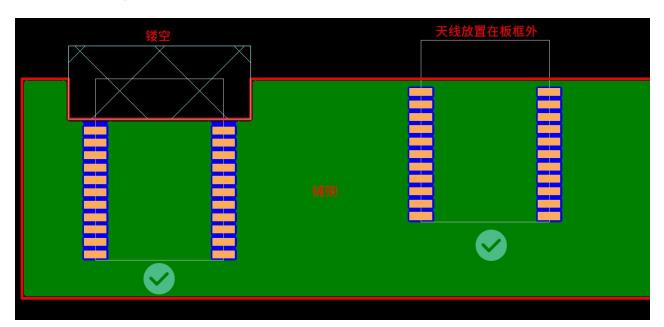

(推荐)

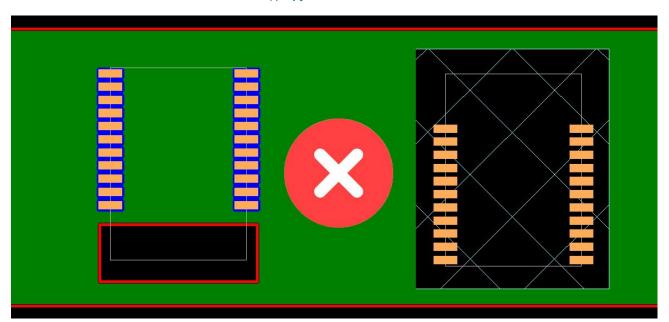


(不推荐)



十二.AT 指令集(注:模块上电未连接时即为AT指令模式)

- 1、AT 指令,属于字符行指令,按行解析(即发 AT 指令时必须以回车换行或者\r\n、16 进制为 0D0A 结尾)
- 2、AT 指令为大写,指令前缀为 AT+,可分为参数设置指令和读取指令。
- 3、设置指令格式: AT+<CMD><PARAM>操作成功返回: +<CMD>=<PARAM>\r\n OK\r\n 失败不返回字符。
- 4、读取指令格式: AT+<CMD>操作成功返回: +<CMD>=<PARAM>\r\n 失败不返回字符。

AT 命令格式举例(图一为 AT 测试命令,图二为将蓝牙名称改为 1234):

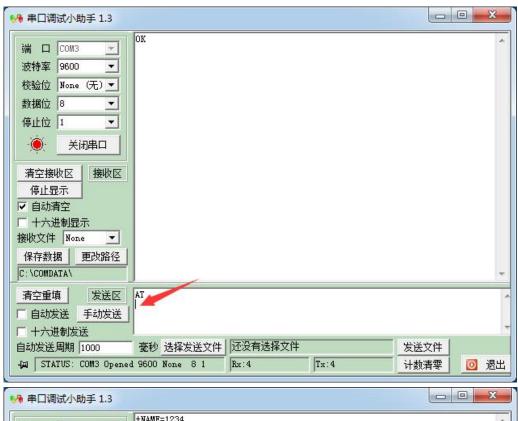



1、测试指令:

功能	指令	响应	说明
测试指令	AT \r\n	OK\r\n	

2、获取软件版本号:

功能	指令	响应	说明
查询版本号	AT+VERSION\r\n	+VERSION= <version>\r\n</version>	<version>软件版本号</version>

注: 依据不同的模块与定制需求, 版本会有区别。

3、查询模块蓝牙地址码:

功能	指令	响应	说明
查询模块 MAC 地址	AT+LADDR\r\n	+LADDR= <laddr>\r\n</laddr>	<laddr>蓝牙 MAC 地址码</laddr>

4、查询设备名称:

功能	指令	响应	说明
查询模块蓝牙名	AT+NAME\r\n	+NAME= <name>\r\n</name>	<name>蓝牙名,最长为</name>
			20 个字节
			默认名称: BT24-T

示例:

发送查询:

AT+NAME\r\n

--查询模块名

返回:

+NAME=BT24-T\r\n

——返回模块设备名为: "BT24-T"

5、查询一串口波特率:

功能	指令	响应	说明
查询模块波特率	AT+BAUD\r\n	+BAUD= <baud>\r\n</baud>	<baud>波特率对应序号</baud>

	1:2400
	2:4800
	3:9600
	4:19200
	5:38400
	6:57600
	7:115200
	默认值: 3 (9600)

示例:

发送查询:

 $AT+BAUD\r\n$

返回:

+BAUD=3\r\n

6、查询一串口停止位:

功能	指令	响应	说明
查询模块串口停止位	AT+STOP\r\n	+ST0P= <param/> \r\n	<param/> 停止位
			0-1 停止位
			1-2 停止位
			默认值:0

7、查询一串口校验位:

功能	指令	响应	说明
查询模块串口校验位	AT+PARI\r\n	+PARI= <param/> \r\n	< Param>校验位
			0−1 无校验
			1−2 奇校验
			2-2 偶校验
			默认值:0

8、设置\查询一通知上位机连接状态:连接成功模块返回 OK+CONN

功能	指令	响应	说明
查询通知上位机连接	AT+NOTI\r\n	+NOTI= <param/> \r\n	<param/> 校验位
状态			0−不通知

设置通知上位机连接	AT+NOTI <param/> \r\	+NOTI= <param/> \r\n	1-通知
状态	n	ок	默认值:0

9、设置\查询一通知连接含地址码: 连接成功模块返回 0K+CONN0x112233445566

功能	指令	响应	说明
查询通知上位机连接	AT+NOTP\r\n	+NOTP= <param/> \r\n	<param/> 校验位
状态			0-不通知
设置通知上位机连接	AT+NOTP <param/> \r	+NOTP= <param/> \r\n	1−通知
状态	\n	ок	默认值: 0

10、查询一服务 SERVICE UUID:

功能	指令	响应	说明
查询模块服务	AT+UUID\r\n	+UUID = <service>\r\n</service>	<service>服务 UUID</service>
UUID			默认服务 UUID:
			FFE0

示例:

1. 发送设置:

AT+UUID \r\n

返回:

+UUID=0xFFE0 r\n

11、查询一通知 NOTIFY UUID\写入 WRITE UUID:

功能	指令	响应	说明
查询模块通知\写入	AT+CHAR\r\n	+CHAR= <uuid>\r\n</uuid>	<uuid>通知\写入</uuid>
UUID			UUID
			默认值: FFE1

注:此通道是为可读写通道(即可以读也可写)

示例:

1. 发送设置:

AT+CHAR\r\n

返回:

+ CHAR=FFE1r\n

12、查询一写入 WRITE UUID:

功能	指令	响应	说明
查询模块写入 UUID	AT+WRITE\r\n	+WRITE= <uuid>\r\n</uuid>	<uuid>写入 UUID</uuid>
			默认值: FFE2

13、设置\查询一低功耗模式: (注:每次重启都会恢复默认值)

功能	指令	响应	说明
查询模块低功耗模式	AT+PWRM\r\n	+PWRM= <param/> \r\n	< Param > (0, 1)
设置模块低功耗模式	AT+PWRM <param/> \r\	+PWRM= <param/> \r\n	0: 低功耗模式 1: 正常工作模式
	n	ОК	默认值: 1

14、查询一广播时间间隔:

功能	指令	响应	说明
查询模块广播时间间隔	AT+ ADVI \r\n	+ ADVI = <param/> \r\n	Param: 0~F
			0—100ms
			1—152.5ms
			2—211.25ms
			3—318.75ms
			4—417.5ms
			5—546.25ms
			6—760ms
			7—852.5ms
			8—1022.5ms
			9—1285ms
			A—2000ms
			B—3000ms
			C—4000ms
			D—5000ms
			E—6000ms
			F—7000ms
			默认值:5

15、查询一模块发射功率:

功能	指令	响应	说明
查询模块发射功率	AT+POWE\r\n	+POWE= <powe>\r\n</powe>	<powe>:</powe>
			1: -19.5 dB
			2: -13.5 dB
			3: -10dB
			4: -7dB
			5: -5dB
			6: -3.5dB
			7: -2dB
			8: -1dB
			9: 0dB
			A: +1dB
			B: +1.5dB
			C: +2.5dB
			默认: C

16、软件重启:

功能	指令	响应	说明
软件重启	AT+RESET\r\n	OK\r\n	

17、恢复出厂设置: (注:每次重启都会恢复默认值)

功能	指令	响应	说明
恢复出厂设置	AT+DEFAULT \r\n	OK\r\n	

十三. 联系我们

深圳大夏龙雀科技有限公司

地址:深圳市宝安区航空路华丰智谷 A1 座 601

电话: 0755-2997 8125 传真: 0755-2997 8369

网址: http://www.szdx-smart.com/



Table Of Contents

1. Overview	16
2. Module Default Parameters	16
3. Application Area	17
4. Power consumption parameters	17
5. Radio frequency characteristics	17
6. Transparent Transmission Parameters	17
7. Module Pin Description And Minimum Circuit Diagram	18
8. Pin Function Description	19
9. Detailed Description Of Function pins	19
10, Dimensions	21
11、LAYOUT Precautions	
12、AT COMMAND	23
12.1 Test Command	24
12.2 Get The Software Version	
12.3 Query Module Bluetooth MAC	24
12.4 Query Device Name	
12.5 Query - Serial Port Baud Rate	25
12.6 Query - Serial Port Stop Bit:	25
12.7 Query - Serial Parity Bit:	26
12.8 Set/Query-Notify the host computer connection status	26
12.9 Set/Query - Notification connection with address code	26
12.10 Query - SERVICE UUID	26
12.11 Query - NOTIFY UUID\ WRITE UUID	27
12.12 Query - WRITE UUID	27
12.13 Settings\Query-Low Power Mode(Note: Each restart will restore the defau	alt
value)	27
12.14 Settings\Query - Broadcast time interval	28
12.15Settings\Query - Module transmit power	28
12.16 Software restart	29
12.17 Restore default settings(Note: Each restart will restore the default value)	29
13. Contact Us	29



1. Overview

DX-BT24-T 5.1 Bluetooth module is built by Shenzhen DX-SMART Technology Co., Ltd. for intelligent wireless data transmission. It uses the British DAILOG 14531 chip, configures 256Kb space, and follows V5.1 BLE Bluetooth specification. Users can query parameters such as serial port baud rate and device name according to AT commands, flexible use.

This module supports UART interface and supports Bluetooth serial port transparent transmission. It has the advantages of low cost, small size, low power consumption, high sensitivity of sending and receiving, etc. It can realize its powerful functions with only a few peripheral components simple operation, high cost performance and technology leading edge.



2. Module default parameters:

Bluetooth Protocol	Bluetooth Specification V5.1 BLE
Working Frequency	2.4GHz ISM band
Communication Interface	UART
Power Supply	3.3V
Communication distance	Within 5M
Physical Dimension	8.3(L)mm x7.6 (W)mm x 2(H) mm
Bluetooth Authentication	FCC CE ROHS REACH
Bluetooth Name	BT24-T
Serial Port Parameters	9600 \ 8 data bits \ 1 stop bit \ No check \ No flow control
Service UUID	FFE0
Notify\Write UUID	FFE1
Write UUID	FFE2
Work temperature	MIN:-40℃ - MAX:+85℃
Customized requirements	If you have other special function requirements, you can contact us to customize the module.



3. Application area:

DX-BT24-T module supports BT5.1 BLE protocol, which can be directly connected to iOS devices that have BLE Bluetooth function, and supports background program resident operation.

Successful application of BT24-T module:

- ※ Bluetooth wireless data transmission;
- ※ Mobile phones, computer peripherals;
- ※ Handheld POS device;
- ★ Medical equipment wireless data transmission;
- ※ Smart Home Control;
- X Automotive Inspection OBD Equipment;
- **X** Bluetooth printer;
- ※ Bluetooth remote control toy;
- X Anti-lost device, LED light control;

4. Power consumption parameters:

Broadcast interval: 540ms			
Mode	Status	Current	Unit
Low power mode	Discoverable	16	uA
	Connected	285	uA
Newselwerking	Discoverable	266	uA
Normal working	Connected	285	uA
mode			
When transparently	Connected	MIN:310 uA	mA
transmitting		MAX:3.5 mA	
data(11520Bytes/s)		(MIN is the minimum	
		amount of data, MAX is the	
		power consumption at the	
		maximum amount of data)	

5. Radio frequency characteristics:

Rating	Value	Unit
BLE Transmit power	-19.5~+2.5	dBm
BLE Sensitivity	-94	dBm



6. Transparent transmission parameters


Data throughput:

Android ->BT24-T -> UART		UART ->BT24-T -> Android	
Baud rate	115200	Baud rate	115200
Connection interval (ms)	15	Connection interval (ms)	15
Serial packet size (bytes)	230	Serial packet size (bytes)	320
Transmission interval (ms)	20	Transmission interval (ms)	20
Throughput (bytes/s)	10120	Throughput (bytes/s)	10626
Characteristic Write	Write without Response	t Characteristic Notify Noti	
iPhone 6 ->BT24-T -> UART		UART ->BT24-T -> iPhone 6	
Baud rate	115200	Baud rate 11520	
Connection interval (ms)	30	Connection interval (ms) 30	
Serial packet size (bytes)	140	Serial packet size (bytes)	180
Transmission interval (ms)	20	Transmission interval (ms)	50
Throughput (bytes/s)	5600	Throughput (bytes/s) 3240	
Characteristic Write	Write without Response	Characteristic Notify	Notify

Note: This table parameter is for reference only and does not represent the maximum data throughput that the module can support.



7. Module pin description and minimum circuit diagram:

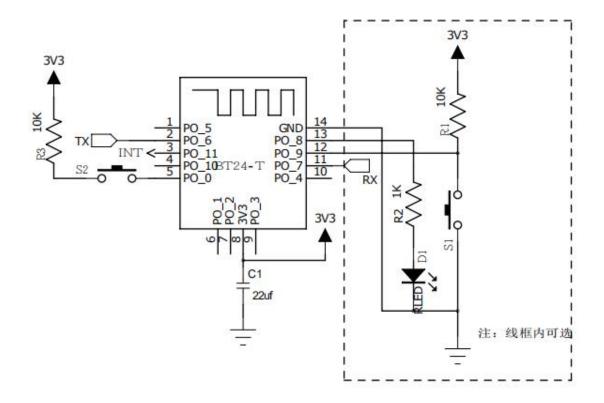

8. Pin function description:

管脚序号	管脚名称	管脚说明	
1	PO_5	Programmable input and output	
2	TX	Serial data output	
3	P1_11	Bluetooth connection indicator (not connected low, connection high)	
4	P0_10	Programmable input and output	
5	P0_0/Reset	Reset(Input 200ms high level pulse)	
6	P0_1	Programmable input and output	
7	P0_2	Programmable input and output	
8	VCC	V3.3	
9	P0_3	Clock input pin/programmable input and output port	
10	P0_4	Clock input pin/programmable input and output port	
11	RX	Serial data input	
12	P0_9	Disconnect pin(200ms low power pulse disconnection) Low power mode wake up(200ms low power pulse wake up)	

13	P0_8	LED light pin(Not connected: 1s on, 1s off, connected: 3s on, 50ms off)
14	GND	Land

9. Detailed description of function pins:

1、13 feet (PO_8): LED indicator pin

• Used to indicate the status of the Bluetooth module, the LED flashing mode corresponds to the status of the Bluetooth module, see the table below:

Module	LED display	Module status
	Flashes slowly and evenly(1s-on,1s-off)	standby mode
Slave module	Bright 3s Extinguish Connection Status 50ms (3s-on, 50ms-off)	
	Light off in low power mode	

2. Pin 3 (P1_11): connection status indication pin

Pin status	Module status	
Output low	standby mode	
Output high level	Connection Status	

3. Pin 1 (PO_9): connection interruption pin (the module is in the connected state is valid)

Pin status	Module status	
No action	Connection Status	
Input 200ms low-level pulse from the	The connection is interrupted and	
module	the module enters low power	
	consumption mode(Enter the	
	previously set working mode, if not	
	set, it is the normal working mode)	

4. Pin1 (P0_9): low-power mode wake-up pin (the module is effective in low-power mode)


Pin status	Module status	
No action	Low power mode	
Input 200ms low-level pulse from the	Wake up from low power mode, the	
module	module enters the standby state	

5. Comparison of low power mode and normal working mode

	Normal working mode	Low power mode	
AT command	Send AT commands after	PO_9: 200ms low power pulse wake up to	
	power-on	send AT command	
Light status	Even slow blinking	light is not on	

10. Dimensions:

厚度: 2.0mm±0.2mm

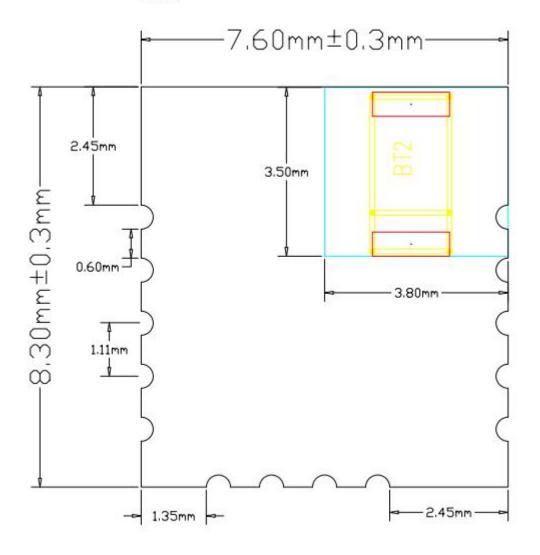


11. LAYOUT Precautions:


The DX-BT24-T Bluetooth module works in the 2.4G wireless band. It should try to avoid the influence of various factors on the wireless transceiver. Pay attention to the following points:

- 1. the product shell surrounding the Bluetooth module to avoid the use of metal, when using part of the metal shell, should try to make the module antenna part away from the metal part.
- 2. The internal metal connecting wires or metal screws of the product should be far away from the antenna part of the module.
- 3. The antenna part of the module should be placed around the PCB of the carrier board. It is not allowed to be placed in the board, and the carrier board under the antenna is slotted. The direction parallel to the antenna is not allowed to be copper or traced. It is also a good choice to directly expose the antenna part out of the carrier board.
- 4. It is recommended to use insulating material for isolation at the module mounting position on the substrate. For example, put a block of screen printing (TopOverLay) at this position.

(Recommend)

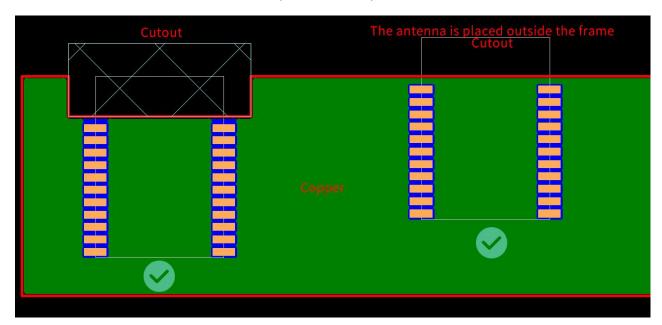


(Not recommend)

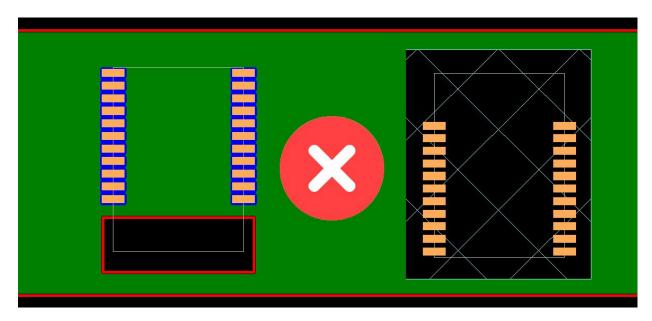




- 1. AT command, which belongs to the character line instruction, is parsed according to the line (that is, AT command must be returned by carriage return or \r\n, hexadecimal number is 0D0A)
 - 2. The AT command supports case and the instruction prefix is AT+, which can be divided into parameter setting instructions and read instructions.
 - 3. Set the instruction format: AT+<CMD><PARAM> Operation returns successfully: +<CMD>=<PARAM>\r\n OK\r\n Failure does not return characters.
 - 4. Read instruction format: AT+<CMD>Operation succeeds: +<CMD>=<PARAM>\r\n Failure does not return a return character.

AT command format example (Figure 1 is AT test command, Figure 2 is to change the Bluetooth name to 1234):

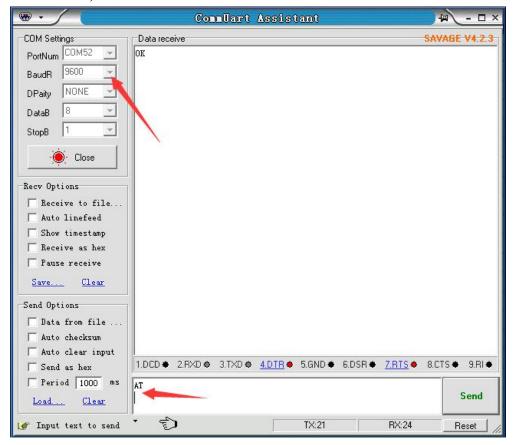

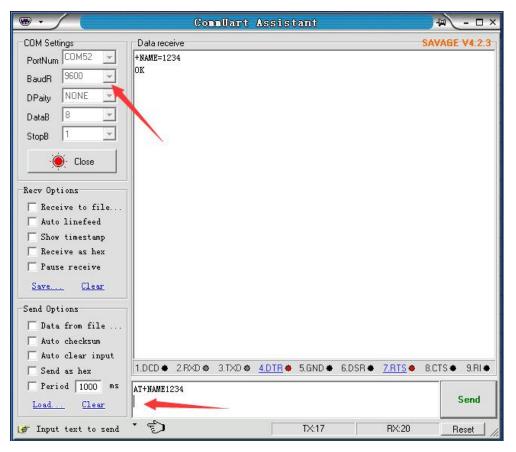

1. Test Command:

Function	Command	Response	Description
Test instructions	AT \r\n	OK\r\n	

2. Get The Software Version:

Function	Command	Response	Description
Query version number	AT+VERSION\r\n	+VERSION= <version>\r\n</version>	<version> Software</version>
		OK\r\n	version number

Note:The version will be different depending on different modules and customization requirements.

3. Query Module Bluetooth MAC:

Function	Command	Response	Description
Query module MAC	AT+LADDR\r\n	+LADDR= <laddr>\r\n</laddr>	<laddr> Bluetooth 12-bit</laddr>
address			MAC Address Code



4. Query Device Name:

Function	Command	Response	Description
Query module Bluetooth	AT+NAME\r\n	+NAME= <name>\r\n</name>	<name> Bluetooth</name>
name			name, up to 20 bytes
			Default name: BT24-T

Example	e:		
Send in	quiry:		
	$AT + NAME \backslash r \backslash n$	——Query module name	
return:			
	+NAME=DX-BT24-T\r\n	Return module device name:	"DX-BT24-T"

5. Query - Serial Port Baud Rate:

Function	Command	Response	Description
Query module baud	AT+BAUD\r\n	+BAUD= <baud>\r\n</baud>	<baud> Baud rate</baud>
•			corresponding serial
			number
			1:2400
			2:4800
			3:9600
			4:19200
			5:38400
			6:57600
			7:115200
			8:230400
			Default: 3(9600)

Send inquiry:

 $AT + BAUD \backslash r \backslash n$

return:

 $+BAUD=3\r\n$

 $OK\r\n$

6. Query - Serial Port Stop Bit:

Function	Command	Response	Description
Query module serial port	AT+STOP\r\n	+STOP= <param/> \r\n	< Param> Stop bit
stop bit			0 -1 Stop bit
			1 -2 Stop bit



			Default: 0
--	--	--	------------

7. Query - Serial Parity Bit:

Function	Command	Response	Description
Query module serial	AT+PARI\r\n	+PARI= <param/> \r\n	< Param> Check Digit
parity bit			0 -1 No check
			1 -2 Odd parity
			2 -2 Even parity
			Default: 0

8. Set/Query—Notify the host computer connection status: The connection success module returns OK+CONN:

Function	Command	Response	Description
Query status	AT+NOTI\r\n	+NOTI= <param/> \r\n	< Param> Check Digit
Set status	AT+NOTI <para< td=""><td>+NOTI=<param/>\r\n</td><td>0- Not notified 1- Notice</td></para<>	+NOTI= <param/> \r\n	0- Not notified 1- Notice
	$m>\r$	OK	Defaults: 0

9. Set/Query—Notification connection with address code: The connection success module returns OK+CONN0x112233445566:

Function	Command	Response	Description
Notification connection	AT+NOTP\r\n	+NOTP= <param/> \r\n	< Param> Check Digit
with address code			0- Not notified
Notification connection	AT+NOTP <para< td=""><td>+NOTP=<param/>\r\n</td><td>1- Notice</td></para<>	+NOTP= <param/> \r\n	1- Notice
with address code	$m>\backslash r\backslash n$	OK	Defaults: 0

$10\$ Query—SERVICE UUID:

Function	Command	Response	Description
Query service UUID	AT+UUID\r\n	+UUID = <service>\r\n</service>	<service> UUID</service>
			Default service
			UUID:FFE0

Example:

1. Send Settings:

AT+UUID rn

return:

+UUID=0xFFE0 r\n

11. Query—NOTIFY UUID\ WRITE UUID:

Function	Command	Response	Description
Query module	AT+CHAR\r\n	+CHAR= <uuid>\r\n</uuid>	<uuid>notify\write</uuid>
notify\write UUID			UUID
			Default: FFE1

Note: This channel is a readable and writable channel (ie it can be read or written)

1. Send settings:

 $AT+CHAR\r\n$

return:

+ CHAR=FFE1r\n

12. Query—WRITE UUID:

Function	Command	Response	Description
Query module write	AT+WRITE\r\n	+WRITE= <uuid>\r\n</uuid>	<uuid> write UUID</uuid>
UUID			Default: FFE2

13. Settings\Query - Low Power Mode: (Note: Each restart will restore the default value)

Function	Command	Response	Description
Query module low	AT+PWRM\r\n	+PWRM= <param/> \r\n	< Param >(0、1)
power mode			0: Low power mode
Set module low power	AT+PWRM <para< td=""><td>+PWRM=<param/>\r\n</td><td>1: working mode</td></para<>	+PWRM= <param/> \r\n	1: working mode
mode	m>\r\n	ок	Default: 1

14. Query - Broadcast time interval:

Function	Command	Response	Description
Query Broadcast time	AT+ ADVI \r\n	+ ADVI= <param/> \r\n	Param: 0~F
	(, , , ,	(, (,	0—100ms
interval			1—152.5ms
			2—211.25ms
			3—318.75ms
			4—417.5ms
			5—546.25ms
			6—760ms
			7—852.5ms
			8—1022.5ms
			9—1285ms
			A-2000ms
			B-3000ms
			C—4000ms
			D—5000ms
			E6000ms
			F—7000ms
			Default: 5

15 Query - Module transmit power:

Function	Command	Response	Description
Query module transmit	AT+POWE\r\n	+POWE= <powe>\r\n</powe>	<powe>:</powe>
	, ,	, ,	1: -19.5 dB
power			2: -13.5 dB
			3: -10dB
			4: -7dB
			5: -5dB
			6: -3.5dB
			7: -2dB
			8: -1dB
			9: 0dB
			A: +1dB
			B: +1.5dB
			C: +2.5dB
			Default: C

16. Software restart:

Function	Command	Response	Description
Software restart	AT+RESET\r\n	OK\r\n	

17. Restore default settings: (Note: Each restart will restore the default value)

Function	Command	Response	Description
Restore default settings	AT+DEFAULT \r\n	OK\r\n	

13. Contact us

Shen Zhen DX-SMART Technology Co., Ltd.

Address: Room 601, Block A1, Huafeng Zhigu, Hangkong Road, Baoan District, Shenzhen

Tel: 0755-2997 8125 **Fax:** 0755-2997 8369

Website: http://www.szdx-smart.com/