

EasySolar 12V and 24V, 1600VA

The all-in-one solar power solution

www.victronenergy.com



All-in-one solar power solution

The EasySolar combines a MPPT solar charge controller, an inverter/charger and AC distribution in one enclosure.

The product is easy to install, with a minimum of wiring.

The solar charge controller: Blue Solar MPPT 100/50

Up to three strings of PV panels can be connected to three sets of MC4 (PV-STo1) PV connectors.

The inverter/charger: MultiPlus Compact 12/1600/70 or 24/1600/40

The MPPT charge controller and the MultiPlus Compact inverter/charger share the DC battery cables (included). The batteries can be charged with solar power (BlueSolar MPPT) and/or with AC power (inverter/charger) from the utility grid or a genset.

AC distribution

The AC distribution consists of a RCD (30 mA/16 A) and four AC outputs protected by two 10A and two 16A circuit breakers.

One 16A output is controlled by the AC input: it will switch on only when AC is available.


PowerAssist

Unique PowerAssist technology protects the utility or generator supply from being overloaded by adding extra inverter power when needed.

Unique solar application software

Several software programs (Assistants) are available to configure the system for various grid interactive or stand-alone applications. Please see

http://www.victronenergy.nl/support-and-downloads/software/

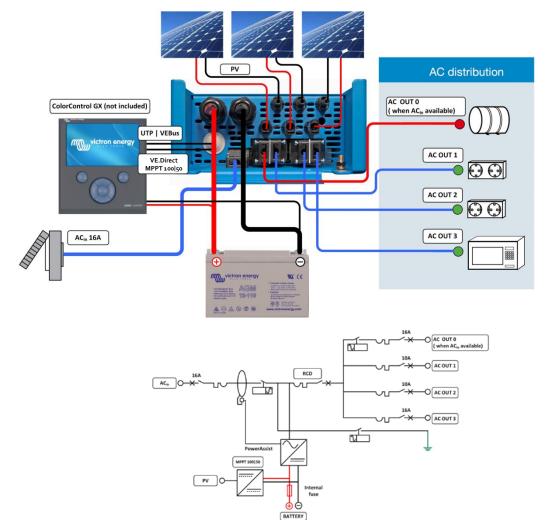



EasySolar	EasySolar 12/1600/70	EasySolar 24/1600/40	
- C - 11	Inverter/charger		
Transfer switch	INVERTER 16A	\	
Input voltage range	9,5 – 17V	19 – 33V	
'Heavy duty' output AC o	16 /		
Output AC1, 2, 3	Output voltage: 230 VAC ± 2%		
, , , , , ,	Frequency: 50 Hz ± 0,1% (1)		
Cont. output power at 25°C (3)	·	1600VA / 1300W	
Cont. output power at 40°C	1200		
Peak power Maximum efficiency	3000		
Zero load power	92% 8W	94% 10W	
Zero load power in search mode	2W	3W	
Zero load power in search mode	CHARGER	3**	
	Input voltage rang	e: 187-265 VAC	
AC Input	Input frequency: 45 – 65 Hz Power factor: 1		
Charge voltage 'absorption'	14,4V	28,8V	
Charge voltage 'float'	13,8V	27 , 6V	
Storage mode	13,2V	26,4V	
Charge current house battery (4)	70A	40A	
Charge current starter battery (A)	4		
Battery temperature sensor	yes		
Programmable relay (5)	yes		
Protection (2)	a-i		
Model Sol	lar Charge Controller	0.0/50	
Maximum output current	MPPT 100/50 50 A		
Maximum PV power, 6a,b)	700W	1400W	
Maximum PV open circuit voltage	100V	100V	
Maximum efficiency	98%		
Self-consumption	10 mA		
Charge voltage 'absorption', default setting	14,4V	28,8V	
Charge voltage 'float', default setting	13,8V	27 , 6V	
Charge algorithm	multi-stage	adaptive	
Temperature compensation	-16 mV / °C	-32 mV / °C	
Protection	a - (9	
	MON CHARACTERISTICS		
Operating temp. range	-20 to +50°C (fan assisted cooling) max 95%		
Humidity (non-condensing):	ENCLOSURE	590	
Material & Colour	aluminium (blue RAL 5012)		
Protection category	IP 21		
Battery-connection	Battery cables of 1.5 meter		
PV connection	Three sets of MC4 (PV-STo1) PV connectors.		
230 V AC-connection	G-ST18i connector		
Weight	15kg		
Dimensions (hxwxd)	745 × 214 × 110mm		
	STANDARDS		
Safety	EN 60335-1, EN 60335-2-29, EN 62109		
Emission / Immunity	EN 55014-1, EN 55014-2, EN 61000-3-3		
Automotive Directive 1) Can be adjusted to 60Hz and to 240V	3) Non-linear load, crest factor 3:1	2004/104/EC 3) Non-linear load, crest factor 3:1	
2) Protection a. Output short circuit b. Overload c. Battery voltage too high	 3) Involvement look, creat factor 3.1 4) At 25°C ambient 5) Programmable relay which can be set for general alarm, DC under voltage or genset start signal function 6a) If more PV power is connected, the controller will limit input power 		
d. Battery voltage too low e. Temperature too high f. 230 VAC on inverter output g. Input voltage ripple too high	700 W resp. 1400 W 6b) PV voltage must exceed Vbat + 5V for the controller to start. Thereafter minimum PV voltage is Vbat + 1V		

