Contact Information

Name: Martin Bieber Jensen E-mail: martinbj@mp.aau.dk

Phone: +4522666973

Address: Fibigerstræde 14, Room 34

Name: Raphael Peter Harrow-Hodgkinson

E-mail: rphh@mp.aau.dk Phone: +4591741380

Address: Fibigerstræde 14, Room 34

Name: Helge Glinvad Grøn E-mail: helgegg@mp.aau.dk Phone: +4599407663

Address: Pontoppidanstræde 103

Links

Link to Documentation:


 $\overline{\text{https:}//\text{github.com}/\text{AAUSmartProductionLab}/\text{data-}}$

driven-decisions/

Link to IFN Homepage: https://www.ifn.aau.dk/

The link to the documentation can also be found scanning the QR code here:



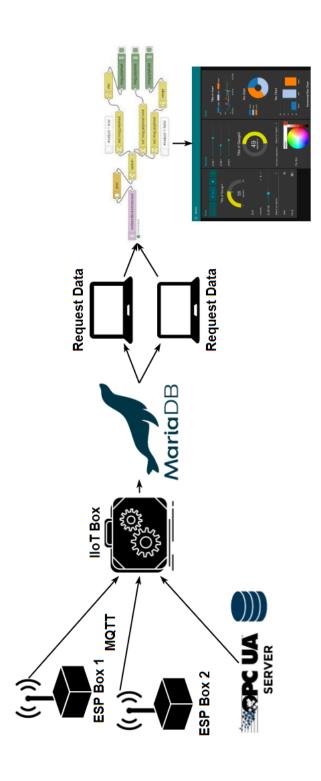

Industrial Internet of Things Box Manual



IFN Demonstrator 7

Martin B. Jensen Raphael P. Hodgkinson

Overview

The IIoT Box is created as a part of an Innovation Factory North(IFN) Demonstrator. The general purpose of the box is to help Small and Medium sized Enterprises(SMEs) try out different sensor solutions in their production, to see what data creates value in their companies.

This manual will contain some of the essential information in order to get the IIoT Box up and running as well as links and references to more in depth documentation and guides etc.

Usernames and Passwords

A table, of the commonly used usernames and passwords that is used to connect to the various interfaces of the lloT Box, can be found in Table ${\tt L}$.

robotlab	nimbe	Raspap Dashboard
robotlab	*n_sss2_Toll	WiFi Credentials
robotlab	iq	xuniJ
Password	Username	Credentials

Table 1: Table of usernames and passwords (* n is the number of the box)

Miscellaneous Information

The IIoT Box has some additional features and information provided here.

The IIoT Box can be connected directly to the internet and this creates options for storing the data in the cloud for wider access to the data.

The ESP Boxes can also be expanded with additional sensors, however this requires some programming of the ESP8266 within the ESP Box.

The range between the IIoT Box and the ESP Boxes is approximately 15 meters. This can range can be increased in the future with the addition of a long range WiFi modem and antenna.

The ESP Boxes has a battery life of approximately +48 hours for the ESP Box I and 36 hours for the ESP Box 2

A simplified architecture of the IIoT Box solution can be found on the back of this manual.

Contents of the box

A list of the contents of the box is listed. The list shows the content of both the IIoT Box and the ESP Boxes that are contained within the IIoT Box.

- IIoT Box:
- o 1 \times 7-inch Touchscreen Joy-it RB-LCD7.2
- o 1 \times Raspberry Pi 3B/3B+
- o 1 \times Goobay USB-C Cable (For charging battery)
- o 1 \times Goobay Micro USB (For programming the ESP Boxes)
- :I xo8 923 \times I o
- * 1 \times Wemos D1 Mini Pro ESP8266
- PH18CND10PAM1SA Photoelectric sensor
- UMI 0200U9M \pm 1 \times Joy-it MPU6050 IMU
- * 1 × Cellularline Powerbank 3000 mAh
- * I imes Micro USB (Power from battery to ESP8266)
- o 1 × ESP Box 2:
- * 1 \times Wemos D1 Mini Pro ESP8266
- * 1 \times 1^{O} -it SEN-KA012TF DHT 11
- * 1 imes Seeed Studio Grove-125KHz RFID Reader
- dAm 0008 Ansdrawo Ponilas All *
- ESP8266) * 1 \times Micro USB (Power from battery to

Getting Started

This is a short getting started guide with the steps to get the IloT Box up and running. The steps are listed below:

- I. Power up the box using the barrel plug power cable provided in the box. (Wait a few minutes for the Box to properly boot up).
- 2. Once the IIoT Box is booted up, connect to the WiFi Access Point with that has the same name as the IIoT Box (e.g. iiot_box_2 or iiot_box_3).
- 3. Once connected, the status of the raspberry pi can be checked by visiting: 10.3.141.1 URL in the browser. The credentials are: username: admin and password: robotlab.
- 4. From the dashboard it can be seen what devices are connected to the IIoT Box this could for example be the sensor boxes. These will appear with the host name ESPBox1 or ESPBox2. If these two are connected the IIoT Box should be receiving data from nected the IIoT Box should be receiving data from pected the IIoT Box should be receiving data from nected the IIoT Box should be receiving data from nected the IIoT Box should be receiving data from nected the IIoT Box should be received and should be r
- 5. If everything is up and running Mode-RED can be accessed through port 1880. So go to the address 10.3.141.1:1880 in the browser.
- 6. In Node-RED data can be accessed, analyzed and formatted such that it can be used in a dashboard or for storing. For a more in depth guide on Node-RED check the documentation found in the links in this manual.
- 7. The data is sent through MQTT from the ESP Boxes and the data can be checked through the debug window in Node-RED.
- 8. The IIoT Box also has the capabilities of collecting data from an OPC-UA server. However this requires some integration at the specific site in order to work. The ethernet port on the box can be used for this purpose.