# **LVGL** Documentation v7.0.2

**Contributors of LVGL** 

# **CONTENTS**

| 1 | Intro          | oduction          | 2  |  |  |
|---|----------------|-------------------|----|--|--|
|   | 1.1            | Key features      | 2  |  |  |
|   | 1.2            | Requirements      | 2  |  |  |
|   | 1.3            | License           | 3  |  |  |
|   | 1.4            | Repository layout | 3  |  |  |
|   | 1.5            | Release policy    | 4  |  |  |
|   | 1.6            | FAQ               | 5  |  |  |
|   |                |                   | Ĭ  |  |  |
| 2 | $\mathbf{Get}$ | started           | 8  |  |  |
|   | 2.1            | Quick overview    | 8  |  |  |
|   | 2.2            | Simulator on PC   | 16 |  |  |
|   | 2.3            |                   | 18 |  |  |
|   | 2.4            |                   | 18 |  |  |
|   | 2.5            |                   | 18 |  |  |
|   | 2.6            | 1 /               | 18 |  |  |
|   | 2.7            |                   | 19 |  |  |
|   | 2.,            |                   |    |  |  |
| 3 | Porting 22     |                   |    |  |  |
|   | 3.1            |                   | 22 |  |  |
|   | 3.2            | V                 | 23 |  |  |
|   | 3.3            |                   | 23 |  |  |
|   | 3.4            |                   | 31 |  |  |
|   | 3.5            |                   | 10 |  |  |
|   | 3.6            |                   | 10 |  |  |
|   | 3.7            |                   | 11 |  |  |
|   | 3.8            |                   | 11 |  |  |
|   | 3.9            |                   | 12 |  |  |
|   | 0.0            | Logging           | -  |  |  |
| 4 | Ove            | rview 4           | 14 |  |  |
|   | 4.1            | Objects           | 14 |  |  |
|   | 4.2            | · ·               | 19 |  |  |
|   | 4.3            | ·                 | 50 |  |  |
|   | 4.4            |                   | 53 |  |  |
|   | 4.5            | · ·               | 76 |  |  |
|   | 4.6            | *                 | 34 |  |  |
|   | 4.7            | 1 1               | 93 |  |  |
|   | 4.8            |                   | 99 |  |  |
|   | 4.9            | File system       |    |  |  |
|   | 4.10           | Animations        |    |  |  |
|   | 4.11           | Tasks             |    |  |  |
|   | 1.11           | 100000            | -0 |  |  |

|   | 4.12 | Drawing                          |
|---|------|----------------------------------|
| 5 | Wid  |                                  |
|   | 5.1  | Base object (lv_obj)             |
|   | 5.2  | Arc (lv_arc)                     |
|   | 5.3  | Bar (lv_bar)                     |
|   | 5.4  | Button (lv_btn)                  |
|   | 5.5  | Button matrix (lv_btnmatrix)     |
|   | 5.6  | Calendar (lv_calendar)           |
|   | 5.7  | Canvas (lv_canvas)               |
|   | 5.8  | Checkbox (lv_cb)                 |
|   | 5.9  | Chart (lv_chart)                 |
|   | 5.10 | Container (lv_cont)              |
|   | 5.11 | color picker (lv_cpicker)        |
|   | 5.12 | Drop-down list (lv_dropdown)     |
|   | 5.13 | Gauge (lv_gauge)                 |
|   | 5.14 | Image (lv_img)                   |
|   | 5.15 | Image button (lv_imgbtn)         |
|   | 5.16 | Keyboard (lv_keyboard)           |
|   | 5.17 | Label (lv_label)                 |
|   | 5.18 | LED (lv_led)                     |
|   | 5.19 | Line (lv_line)                   |
|   | 5.20 | List (lv_list)                   |
|   | 5.21 | Line meter (lv_lmeter)           |
|   | 5.22 | Message box (lv_msdbox)          |
|   | 5.23 | Object mask (lv_objmask)         |
|   | 5.24 | Page (lv_page)                   |
|   | 5.25 | Roller (lv_roller)               |
|   | 5.26 | Slider (lv_slider)               |
|   | 5.27 | Spinbox (lv_spinbox)             |
|   | 5.28 | Spinner (lv_spinner)             |
|   | 5.29 | Switch (lv_switch)               |
|   | 5.30 | Table (lv_table)                 |
|   | 5.31 | Tabview (lv_tabview)             |
|   | 5.32 | Text area (lv_textarea)          |
|   | 5.33 | Tile view (lv_tileview)          |
|   | 5.34 | Window (lv_win)                  |
| 6 | Cont | tributing 397                    |
|   | 6.1  | Introduction                     |
|   | 6.2  | When you got started with LVGL   |
|   | 6.3  | When you already use LVGL        |
|   | 6.4  | When you are confident with LVGL |

# Documentation of V6

 ${\rm PDF}\ {\rm version} \colon LVGL.pdf$ 



Website • GitHub • Forum • Live demo • Simulator • Blog

CONTENTS 1

# INTRODUCTION

LVGL (Light and Versatile Graphic Library) is a free and open-source graphics library providing everything you need to create embedded GUI with easy-to-use graphical elements, beautiful visual effects and low memory footprint.

# 1.1 Key features

- Powerful building blocks such as buttons, charts, lists, sliders, images etc.
- Advanced graphics with animations, anti-aliasing, opacity, smooth scrolling
- Various input devices such as touchpad, mouse, keyboard, encoder etc.
- Multi-language support with UTF-8 encoding
- Multi-display support, i.e. use more TFT, monochrome displays simultaneously
- Fully customizable graphic elements
- Hardware independent to use with any microcontroller or display
- Scalable to operate with little memory (64 kB Flash, 16 kB RAM)
- OS, External memory and GPU supported but not required
- Single frame buffer operation even with advanced graphical effects
- Written in C for maximal compatibility (C++ compatible)
- Simulator to start embedded GUI design on a PC without embedded hardware
- Binding to MicroPython
- Tutorials, examples, themes for rapid GUI design
- Documentation is available as online and offline
- Free and open-source under MIT license

# 1.2 Requirements

Basically, every modern controller (which is able to drive a display (is suitable to run LVGL. The minimal requirements are:

- 16, 32 or 64 bit microcontroller or processor
- > 16 MHz clock speed is recommended

- Flash/ROM: > 64 kB for the very essential components (> 180 kB is recommended)
- RAM: Static RAM usage: ~2 kB depending on the used features and objects types Stack: > 2kB (> 8 kB is recommended) Dynamic data (heap): > 2 KB (> 16 kB is recommended if using several objects). Set by LV\_MEM\_SIZE in lv\_conf.h. Display buffer: > "Horizontal resolution" pixels (> 10 × "Horizontal resolution" is recommended)
- One frame buffer in the MCU or in external display controller
- C99 or newer compiler
- Basic C (or C++) knowledge: pointers, structs, callbacks

Note that the memory usage might vary depending on the architecture, compiler and build options.

# 1.3 License

The LVGL project (including all repositories) is licensed under MIT license. It means you can use it even in commercial projects.

The only thing you need to do is to add a notice about you are using LVGL in your product. This notice can be placed in the user guide, on your website, on an about screen, or anywhere else where users might see it.

It's not mandatory but we highly appreciate it if you write a few words about your project in the My projects category of the Forum or a private message from lvgl.io.

Although you can get LVGL for free there is a huge work behind it. It's created by a group of volunteers who made it available for you in their free time.

To make the LVGL project sustainable, please consider *Contributing* to the project. You can choose from *many ways of contributions* such as simply writing a tweet about you are using LVGL, fixing bugs, translating the documentation, or even becoming a maintainer.

# 1.4 Repository layout

All repositories of the LVGL project are hosted n GitHub: https://github.com/lvgl

You fill these repositories there:

- lvgl The library itself
- lv examples Examples and demos
- lv\_drivers Display and input device drivers
- docs Source of the documentation's site (https://docs.lvgl.io)
- blog Source of the blog's site (https://blog.lvgl.io)
- sim Source of the online simulator's site (https://sim.lvgl.io)
- ly sim ... Simulator projects for various IDEs and platforms
- lv\_port\_... LVGL ports to development boards
- lv\_binding\_.. Bindings to other languages
- lv\_... Ports to other platforms

1.3. License 3

The lvgl, lv\_examples and lv\_drivers are the core repositories which gets the most attentions regarding maintenance.

# 1.5 Release policy

The core repositories follow the rules of Semantic versioning:

- Major versions for incompatible API changes. E.g. v5.0.0, v6.0.0
- Minor version for new but backward-compatible functionalities. E.g. v6.1.0, v6.2.0
- Patch version for backward-compatible bug fixes. E.g. v6.1.1, v6.1.2

#### 1.5.1 Branches

The core repositories have at least the following branches:

- master latest version, patches are merged directly here.
- dev merge new features here until they are merged into master.
- release/vX stable versions of the major releases

# 1.5.2 Release cycle

LVGL has a monthly periodic release cycle.

- 1st Tuesday of the month Make a major, minor, or patch release from master depending on the new features. After that merge only patches into master and add new features into the dev.
- 3rd Tuesday of the month Make a patch release from master. After that merge the new features from the dev to master branch. In the rest of the month merge only patches into master and new features into dev branch.

In other words, patches are merged directly into master and new features into dev. dev is merged to master in the middle of the month and the new features are released at the beginning of the next month.

## 1.5.3 Tags

Tags like vX.Y.Z are created for every release.

## 1.5.4 Changelog

The changes are recorded in CHANGELOG.md.

## 1.5.5 Side projects

The docs is rebuilt on every release. By default, the latest documentation is displayed which is for the current master branch of lvgl. The documentation of earlier versions is available from the menu on the left.

The simulator, porting, and other projects are updated with best effort. Pull requests are welcome if you updated one of them.

1.5. Release policy 4

# 1.5.6 Version support

In the core repositories each major version has a branch (e.g. release/v6). All the minor and patch releases of that major version are merged there.

It makes possible to add fixed older versions without bothering the newer ones.

All major versions are officially supported for 1 year.

# 1.6 **FAQ**

# 1.6.1 Where can I ask questions?

You can ask questions in the Forum: https://forum.lvgl.io/.

We use GitHub issues for development related discussion. So you should use them only if your question or issue is tightly related to the development of the library.

# 1.6.2 Is my MCU/hardware supported?

Every MCU which is capable of driving a display via Parallel port, SPI, RGB interface or anything else and fulfills the *Requirements* is supported by LLVGL.

It includes:

- "Common" MCUs like STM32F, STM32H, NXP Kinetis, LPC, iMX, dsPIC33, PIC32 etc.
- Bluetooth, GSM, WiFi modules like Nordic NRF and Espressif ESP32
- Linux frame buffer like /dev/fb0 which includes Single-board computers too like Raspberry Pi
- And anything else with a strong enough MCU and a periphery to drive a display

# 1.6.3 Is my display supported?

LVGL needs just one simple driver function to copy an array of pixels into a given area of the display. If you can do this with your display then you can use that display with LVGL.

Some examples of the supported display types:

- TFTs with 16 or 24 bit color depth
- Monitors with HDMI port
- Small monochrome displays
- Gray-scale displays
- even LED matrices
- or any other display where you can control the color/state of the pixels

See the *Porting* section to learn more.

1.6. FAQ 5

# 1.6.4 Nothing happens, my display driver is not called. What have I missed?

Be sure you are calling  $lv\_tick\_inc(x)$  in an interrupt and  $lv\_task\_handler()$  in your main while(1).

Learn more in the *Tick* and *Task handler* section.

# 1.6.5 Why the display driver is called only once? Only the upper part of the display is refreshed.

Be sure you are calling lv\_disp\_flush\_ready(drv) at the end of your "display flush callback".

# 1.6.6 Why I see only garbage on the screen?

Probably there a bug in your display driver. Try the following code without using LVGL. You should see a square with red-blue gradient

```
#define BUF W 20
#define BUF_H 10
lv_color_t buf[BUF_W * BUF_H];
lv_color_t * buf_p = buf;
uint16_t x, y;
for(y = 0; y < BUF H; y++) {
    lv color t c = lv color mix(LV COLOR BLUE, LV COLOR RED, (y * 255) / BUF H);
    for(x = 0; x \& lt; BUF_W; x++){
        (*buf p) = c;
        buf_p++;
    }
}
lv area t a;
a.x1 = 10;
a.y1 = 40;
a.x2 = a.x1 + BUF W - 1;
a.y2 = a.y1 + BUF_H - 1;
my_flush_cb(NULL, &a, buf);
```

# 1.6.7 Why I see non-sense colors on the screen?

Probably LVGL's color format is not compatible with your displays color format. Check  $LV\_COLOR\_DEPTH$  in  $lv\_conf.h$ .

If you are using 16 bit colors with SPI (or other byte-oriented interface) probably you need to set LV COLOR 16 SWAP 1 in *lv conf.h*. It swaps the upper and lower bytes of the pixels.

## 1.6.8 How to speed up my UI?

- Turn on compiler optimization and enable cache if your MCU has
- Increase the size of the display buffer
- Use 2 display buffers and flush the buffer with DMA (or similar periphery) in the background

1.6. FAQ 6

- Increase the clock speed of the SPI or Parallel port if you use them to drive the display
- If your display has SPI port consider changing to a model with parallel because it has much higher throughput
- Keep the display buffer in the internal RAM (not in external SRAM) because LVGL uses it a lot and it should have a small access time

# 1.6.9 How to reduce flash/ROM usage?

You can disable all the unused features (such as animations, file system, GPU etc.) and object types in  $lv\_conf.h.$ 

If you are using GCC you can add

- -fdata-sections -ffunction-sections compiler flags
- --gc-sections linker flag

to remove unused functions and variables from the final binary

# 1.6.10 How to reduce the RAM usage

- Lower the size of the Display buffer
- Reduce LV\_MEM\_SIZE in *lv\_conf.h*. This memory used when you create objects like buttons, labels, etc.
- To work with lower LV\_MEM\_SIZE you can create the objects only when required and deleted them when they are not required anymore

# 1.6.11 How to work with an operating system?

To work with an operating system where tasks can interrupt each other (preemptive) you should protect LVGL related function calls with a mutex. See the *Operating system and interrupts* section to learn more.

1.6. FAQ 7

**CHAPTER** 

TWO

# **GET STARTED**

# 2.1 Quick overview

Here you can learn the most important things about LVGL. You should read it first to get a general impression and read the detailed *Porting* and *Overview* sections after that.

## 2.1.1 Get started in a simulator

Instead of porting LVGL to an embedded hardware, it's highly recommended to get started in a simulator first.

LVGL is ported to many IDEs to be sure you will find your faviourite one. Go to *Simulators* to get ready-to-use projects which can be run on your PC. This way you can save the porting for now and make some experience with LVGL immediately.

# 2.1.2 Add LVGL into your project

The following steps show how to setup LVGL on an embedded system with a display and a touchpad.

- Download or Clone the library from GitHub with git clone https://github.com/lvgl/lvgl.git
- Copy the lvgl folder into your project
- Copy lvgl/lv\_conf\_templ.h as lv\_conf.h next to the lvgl folder, change the first #if 0 to 1 to enable the file's content and set at least LV\_HOR\_RES\_MAX, LV\_VER\_RES\_MAX and LV\_COLOR\_DEPTH defines.
- Include lvgl/lvgl.h where you need to use LVGL related functions.
- Call lv\_tick\_inc(x) every x milliseconds in a Timer or Task (x should be between 1 and 10). It is required for the internal timing of LVGL.
- Call lv init()
- Create a display buffer for LVGL LVGL will render the graphics here first, and seed the rendered image to the display. The buffer size can be set freely but 1/10 screen size is a good starting point.

• Implement and register a function which can **copy the rendered image** to an area of your display:

```
lv_disp_drv_t disp_drv;
                                      /*Descriptor of a display driver*/
lv disp drv init(&disp drv);
                                      /*Basic initialization*/
                                      /*Set your driver function*/
disp_drv.flush_cb = my_disp_flush;
disp drv.buffer = &disp buf;
                                     /*Assign the buffer to the display*/
lv disp drv register(&disp drv);
                                     /*Finally register the driver*/
void my_disp_flush(lv_disp_drv_t * disp, const lv_area_t * area, lv_color_t * color_p)
    int32 t x, y;
    for(y = area->y1; y <= area->y2; y++) {
        for(x = area->x1; x <= area->x2; x++) {
            set_pixel(x, y, *color_p); /* Put a pixel to the display.*/
            color_p++;
       }
    }
    lv disp flush ready(disp);
                                       /* Indicate you are ready with the flushing*/
```

• Implement and register a function which can read an input device. E.g. for a touch pad:

```
lv indev drv t indev drv;
                                           /*Descriptor of a input device driver*/
lv indev drv init(&indev drv);
                                           /*Basic initialization*/
indev drv.type = LV INDEV TYPE POINTER;
                                           /*Touch pad is a pointer-like device*/
indev drv.read_cb = my_touchpad_read;
                                           /*Set your driver function*/
lv indev drv register(&indev drv);
                                           /*Finally register the driver*/
bool my_touchpad_read(lv_indev_t * indev, lv_indev_data_t * data)
    data->state = touchpad is pressed() ? LV INDEV STATE PR : LV INDEV STATE REL;
    if(data->state == LV_INDEV_STATE_PR) touchpad_get_xy(&data->point.x, &data->point.
y);
    return false; /*Return `false` because we are not buffering and no more data to,,
→read*/
}
```

• Call lv\_task\_handler() periodically every few milliseconds in the main while(1) loop, in Timer interrupt or in an Operation system task. It will redraw the screen if required, handle input devices etc.

For a more detailed guide go to the Porting section.

#### 2.1.3 Learn the basics

#### Widgets

The graphical elements like Buttons, Labels, Sliders, Charts etc are called objects or widgets in LVGL. Go to *Widgets* to see the full list of available widgets.

Every object has a parent object where it is create. For example if a label is created on a button, the button is the parent of label. The child object moves with the parent and if the parent is deleted the children will be deleted too.

Children can be visible only on their parent. It other words, the parts of the children out of the parent are clipped.

A *screen* is the "root" parent. You can have any number of screens. To get the current screen call <code>lv\_scr\_act()</code>, and to load a screen use <code>lv\_scr\_load(scr1)</code>.

You can create a new object with lv\_<type>\_create(parent, obj\_to\_copy). It will return an lv\_obj\_t \* variable which should be used as a reference to the object to set its parameters. The first parameter is the desired *parent*, the second parameters can be an object to copy (NULL if unused). For example:

```
lv_obj_t * slider1 = lv_slider_create(lv_scr_act(), NULL);
```

To set some basic attribute <code>lv\_obj\_set\_<paramters\_name>(obj, <value>)</code> function can be used. For example:

```
lv_obj_set_x(btn1, 30);
lv_obj_set_y(btn1, 10);
lv_obj_set_size(btn1, 200, 50);
```

The objects has type specific parameters too which can be set by lv\_<type>\_set\_<parameters\_name>(obj, <value>) functions. For example:

```
lv_slider_set_value(slider1, 70, LV_ANIM_ON);
```

To see the full API visit the documentation of the widgets or the related header file (e.g. lvgl/src/lv\_widgets/lv\_slider.h).

#### **Events**

Events are used to inform the user if something has happened with an object. You can assign a callback to an object which will be called if the object is clicked, released, dragged, being deleted etc. It should look like this:

Learn more about the events in the *Event overview* section.

#### **Parts**

Widgets might be built from one or more parts. For example a button has only one part called LV\_BTN\_PART\_MAIN. However, a Page has LV\_PAGE\_PART\_BG, LV\_PAGE\_PART\_SCROLLABLE, LV\_PAGE\_PART\_SCROLLBAR and LV\_PAGE\_PART\_EDGE\_FLASG.

Some parts are *virtual* (they are not real object, just drawn on the fly, such as the scrollbar of a page) but other parts are *real* (they are real object, such as the scrollable part of the page).

Parts come into play when you want to set the styles and states of a given part of an object. (See below)

#### **States**

The objects can be in a combination of the following states:

- LV\_STATE\_DEFAULT Normal, released
- LV\_STATE\_CHECKED Toggled or checked
- LV\_STATE\_FOCUSED Focused via keypad or encoder or clicked via touchpad/mouse
- LV\_STATE\_HOVERED Hovered by mouse (not supported now)
- LV\_STATE\_PRESSED Pressed
- LV STATE DISABLED Disabled or inactive

For example if you press an object is automatically get the LV\_STATE\_PRESSED state and when you release is it will be removed.

To get the current state use  $lv_obj_get_state(obj, part)$ . It will return the ORed states. For example it's a valid state for a checkbox:  $LV_STATE_CHECKED \mid LV_STATE_PRESSED \mid LV_STATE_FOCUSED$ 

#### **Styles**

Styles can be assigned to the parts objects to changed their appearance. A style can describe for example the background color, border width, text font and so on. See the full list here.

The styles can be cascaded (similarly to CSS). It means you can add more styles to a part of an object. For example style\_btn can set a default button appearance, and style\_btn\_red can overwrite some properties to make the button red-

Every style property you set is specific to a state. For example is you can set different background color for LV\_STATE\_DEFAULT and LV\_STATE\_PRESSED. The library finds the best match between the state of the given part and the available style properties. For example if the object is in pressed state and the border width is specified for pressed state, then it will be used. However, if it's nt specified for pressed state, the LV\_STATE\_DEFAULT's border width will be used. If the border width not defined for LV\_STATE\_DEFAULT either, a default value will be used.

Some properties (typically the text-related ones) can be inherited. It means if a property is not set in an object it will be searched in its parents too. For example you can set the font once in the screen's style and every text will inherit it by default.

Local style properties also can be added to the objects.

#### **Themes**

Themes are the default styles of the objects. The styles from the themes are applied automatically when the objects are created.

You can select the theme to use in lv conf.h.

## 2.1.4 Examples

#### **Button with label**



```
#include "../../lv examples.h"
static void btn_event_cb(lv_obj_t * btn, lv_event_t event)
    if(event == LV_EVENT_CLICKED) {
       static uint8_t cnt = 0;
       cnt++;
       /*Get the first child of the button which is the label and change its text*/
       lv_obj_t * label = lv_obj_get_child(btn, NULL);
       lv_label_set_text_fmt(label, "Button: %d", cnt);
   }
}
* Create a button with a label and react on Click event.
void lv_ex_get_started_1(void)
    lv_obj_t * btn = lv_btn_create(lv_scr_act(), NULL);
                                                           /*Add a button the
→current screen*/
    lv_obj_set_pos(btn, 10, 10);
                                                            /*Set its position*/
    lv_obj_set_size(btn, 120, 50);
                                                            /*Set its size*/
    lv_obj_set_event_cb(btn, btn_event_cb);
                                                            /*Assign a callback tou
→the button*/
    lv_obj_t * label = lv_label_create(btn, NULL);
                                                           /*Add a label to the...
   lv_label_set_text(label, "Button");
                                                            /*Set the labels text*/
}
```

#### Styling buttons



```
#include "../../lv examples.h"
* Create styles from scratch for buttons.
void lv ex get started 2(void)
    static lv_style_t style_btn;
    static lv_style_t style_btn_red;
    /*Create a simple button style*/
   lv_style_init(&style_btn);
    lv style set radius(&style btn, LV STATE DEFAULT, 10);
   lv style set bg opa(&style btn, LV STATE DEFAULT, LV OPA COVER);
   lv style set bg color(&style btn, LV STATE DEFAULT, LV COLOR SILVER);
    lv_style_set_bg_grad_color(&style_btn, LV_STATE_DEFAULT, LV_COLOR_GRAY);
   lv style set bg grad dir(&style btn, LV STATE DEFAULT, LV GRAD DIR VER);
   /*Swap the colors in pressed state*/
   lv style set bg color(&style btn, LV STATE PRESSED, LV COLOR GRAY);
    lv style set bg grad color(&style btn, LV STATE PRESSED, LV COLOR SILVER);
    /*Add a border*/
   lv style set border color(&style btn, LV STATE DEFAULT, LV COLOR WHITE);
    lv_style_set_border_opa(&style_btn, LV_STATE_DEFAULT, LV_OPA_70);
    lv_style_set_border_width(&style_btn, LV_STATE_DEFAULT, 2);
   /*Different border color in focused state*/
    lv style set border color(&style btn, LV STATE FOCUSED, LV COLOR BLUE);
    lv_style_set_border_color(&style_btn, LV_STATE_FOCUSED | LV_STATE_PRESSED, LV_
→COLOR NAVY);
```


(continues on next page)

```
/*Set the text style*/
   lv_style_set_text_color(&style_btn, LV_STATE_DEFAULT, LV_COLOR_WHITE);
   /*Make the button smaller when pressed*/
   lv style set transform height(&style btn, LV STATE PRESSED, -5);
   lv_style_set_transform_width(&style_btn, LV_STATE_PRESSED, -10);
   /*Add a transition to the size change*/
   static lv anim path t path;
   lv_anim_path_init(&path);
   lv anim path set cb(&path, lv anim path overshoot);
   lv_style_set_transition_prop_1(&style_btn, LV_STATE_DEFAULT, LV_STYLE_TRANSFORM_
→HEIGHT);
   lv_style_set_transition_prop_2(&style_btn, LV_STATE_DEFAULT, LV_STYLE_TRANSFORM_
→WIDTH);
   lv style set transition time(&style btn, LV STATE DEFAULT, 300);
   lv_style_set_transition_path(&style_btn, LV_STATE_DEFAULT, &path);
   /*Create a red style. Change only some colors.*/
   lv style init(&style btn red);
   lv style set bg color(&style btn red, LV_STATE_DEFAULT, LV_COLOR_RED);
   lv style set bg grad color(&style btn red, LV STATE DEFAULT, LV COLOR MAROON);
   lv style set bg color(&style btn red, LV STATE PRESSED, LV COLOR MAROON);
   lv style set bg grad color(&style btn red, LV STATE PRESSED, LV COLOR RED);
   lv_style_set_text_color(&style_btn_red, LV_STATE_DEFAULT, LV_COLOR_WHITE);
   /*Create buttons and use the new styles*/
   lv obj t * btn = lv btn create(lv scr act(), NULL);
                                                          /*Add a button the
→current screen*/
   lv obj set pos(btn, 10, 10);
                                                           /*Set its position*/
   lv_obj_set_size(btn, 120, 50);
                                                           /*Set its size*/
   lv_obj_reset_style_list(btn, LV_BTN_PART_MAIN);
                                                           /*Remove the styles
→coming from the theme*/
   lv obj add style(btn, LV BTN PART MAIN, &style btn);
   lv_obj_t * label = lv_label_create(btn, NULL);  /*Add a label to the_
→button*/
                                                          /*Set the labels text*/
   lv label set text(label, "Button");
   /*Create a new button*/
   lv obj t * btn2 = lv btn create(lv scr act(), btn);
   lv_obj_set_pos(btn2, 10, 80);
   lv_obj_set_size(btn2, 120, 50);
                                                               /*Set its size*/
   lv_obj_reset_style_list(btn2, LV_BTN_PART_MAIN); /*Remove the styles_
→coming from the theme*/
   lv_obj_add_style(btn2, LV_BTN_PART_MAIN, &style_btn);
   lv obj add style(btn2, LV BTN PART MAIN, &style btn red); /*Add the red style.
→on top of the current */
   lv obj set style local radius(btn2, LV BTN PART MAIN, LV STATE DEFAULT, LV RADIUS
→CIRCLE); /*Add a local style*/
   label = lv_label_create(btn2, NULL);
                                                /*Add a label to the button*/
   lv label set text(label, "Button 2");
                                                             /*Set the labels text*/
```

(continues on next page)

```
}
```

#### Slider and alignment

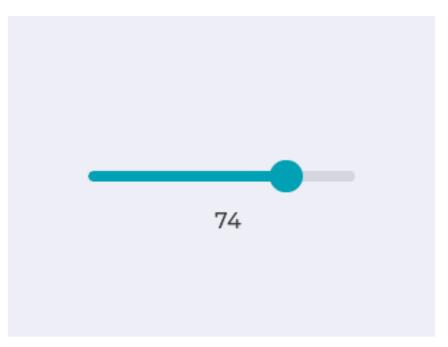

```
#include "../../lv_examples.h"
static lv_obj_t * label;
static void slider_event_cb(lv_obj_t * slider, lv_event_t event)
    if(event == LV_EVENT_VALUE_CHANGED) {
        /*Refresh the text*/
       lv_label_set_text_fmt(label, "%d", lv_slider_get_value(slider));
}
* Create a slider and write its value on a label.
void lv_ex_get_started_3(void)
    /* Create a slider in the center of the display */
   lv_obj_t * slider = lv_slider_create(lv_scr_act(), NULL);
   lv_obj_set_width(slider, 200);
                                                         /*Set the width*/
    lv_obj_align(slider, NULL, LV_ALIGN_CENTER, 0, 0); /*Align to the center of_
→the parent (screen)*/
   lv_obj_set_event_cb(slider, slider_event_cb);
                                                    /*Assign an event function*/
    /* Create a label below the slider */
    label = lv_label_create(lv_scr_act(), NULL);
```

(continues on next page)

15

# 2.1.5 Micropython

Learn more about *Micropython*.

```
# Create a Button and a Label
scr = lv.obj()
btn = lv.btn(scr)
btn.align(lv.scr_act(), lv.ALIGN.CENTER, 0, 0)
label = lv.label(btn)
label.set_text("Button")

# Load the screen
lv.scr_load(scr)
```

# 2.2 Simulator on PC

You can try out the LVGL using only your PC (i.e. without any development boards). The LVGL will run on a simulator environment on the PC where anyone can write and experiment the real LVGL applications.

Simulator on the PC have the following advantages:

- Hardware independent Write a code, run it on the PC and see the result on the PC monitor.
- Cross-platform Any Windows, Linux or OSX PC can run the PC simulator.
- Portability the written code is portable, which means you can simply copy it when using an embedded hardware.
- Easy Validation The simulator is also very useful to report bugs because it means common platform for every user. So it's a good idea to reproduce a bug in simulator and use the code snippet in the Forum.

## 2.2.1 Select an IDE

The simulator is ported to various IDEs (Integrated Development Environments). Choose your favorite IDE, read its README on GitHub, download the project, and load it to the IDE.

You can use any IDEs for the development but, for simplicity, the configuration for Eclipse CDT is focused in this tutorial. The following section describes the set-up guide of Eclipse CDT in more details.

Note: If you are on Windows, it's usually better to use the Visual Studio or CodeBlocks projects instead. They work out of the box without requiring extra steps.

2.2. Simulator on PC 16

# 2.2.2 Set-up Eclipse CDT

## **Install Eclipse CDT**

Eclipse CDT is a C/C++ IDE.

Eclipse is a Java based software therefore be sure Java Runtime Environment is installed on your system.

On Debian-based distros (e.g. Ubuntu): sudo apt-get install default-jre

Note: If you are using other distros, then please refer and install 'Java Runtime Environment' suitable to your distro. Note: If you are using macOS and get a "Failed to create the Java Virtual Machine" error, uninstall any other Java JDK installs and install Java JDK 8u. This should fix the problem.

You can download Eclipse's CDT from: https://www.eclipse.org/cdt/downloads.php. Start the installer and choose  $Eclipse\ CDT$  from the list.

#### Install SDL 2

The PC simulator uses the SDL 2 cross platform library to simulate a TFT display and a touch pad.

#### Linux

On **Linux** you can easily install SDL2 using a terminal:

- 1. Find the current version of SDL2: apt-cache search libsdl2 (e.g. libsdl2-2.0-0)
- 2. Install SDL2: sudo apt-get install libsdl2-2.0-0 (replace with the found version)
- 3. Install SDL2 development package: sudo apt-qet install libsdl2-dev
- 4. If build essentials are not installed yet: sudo apt-get install build-essential

#### Windows

If you are using **Windows** firstly you need to install MinGW (64 bit version). After installing MinGW, do the following steps to add SDL2:

- 1. Download the development libraries of SDL.Go to https://www.libsdl.org/download-2.0.php and download Development Libraries: SDL2-devel-2.0.5-mingw.tar.gz
- 2. Decompress the file and go to  $x86\_64$ -w64-mingw32 directory (for 64 bit MinGW) or to i686-w64-mingw32 (for 32 bit MinGW)
- 3. Copy ...mingw32/include/SDL2 folder to C:/MinGW/.../x86 64-w64-mingw32/include
- 4. Copy  $\_...mingw32/lib/$  content to  $C:/MinGW/.../x86\_64-w64-mingw32/lib$
- 5. Copy \_\_...mingw32/bin/SDL2.dll to {eclipse\_worksapce}/pc\_simulator/Debug/. Do it later when Eclipse is installed.

Note: If you are using Microsoft Visual Studio instead of Eclipse then you don't have to install MinGW.

#### **OSX**

On OSX you can easily install SDL2 with brew: brew install sdl2

If something is not working, then please refer this tutorial to get started with SDL.

2.2. Simulator on PC

## Pre-configured project

A pre-configured graphics library project (based on the latest release) is always available to get started easily. You can find the latest one on GitHub. (Please note that, the project is configured for Eclipse CDT).

#### Add the pre-configured project to Eclipse CDT

Run Eclipse CDT. It will show a dialogue about the **workspace path**. Before accepting the path, check that path and copy (and unzip) the downloaded pre-configured project there. After that, you can accept the workspace path. Of course you can modify this path but, in that case copy the project to the corresponding location.

Close the start up window and go to File->Import and choose General->Existing project into Workspace. Browse the root directory of the project and click Finish

On **Windows** you have to do two additional things:

- Copy the SDL2.dll into the project's Debug folder
- Right click on the project -> Project properties -> C/C++ Build -> Settings -> Libraries -> Add ... and add mingw32 above SDLmain and SDL. (The order is important: mingw32, SDLmain, SDL)

# Compile and Run

Now you are ready to run the LVGL Graphics Library on your PC. Click on the Hammer Icon on the top menu bar to Build the project. If you have done everything right, then you will not get any errors. Note that on some systems additional steps might be required to "see" SDL 2 from Eclipse but, in most of cases the configurations in the downloaded project is enough.

After a success build, click on the Play button on the top menu bar to run the project. Now a window should appear in the middle of your screen.

Now everything is ready to use the LVGL in the practice or begin the development on your PC.

# 2.3 STM32

TODO

## 2.4 NXP

TODO

# 2.5 Espressif (ESP32)

## 2.6 Arduino

TODO

2.3. STM32 18

# 2.7 Micropython

# 2.7.1 What is Micropython?

Micropython is Python for microcontrollers. Using Micropython, you can write Python3 code and run it even on a bare metal architecture with limited resources.

## Highlights of Micropython

- Compact Fits and runs within just 256k of code space and 16k of RAM. No OS is needed, although you can also run it with an OS, if you want.
- Compatible Strives to be as compatible as possible with normal Python (known as CPython).
- Versatile Supports many architectures (x86, x86-64, ARM, ARM Thumb, Xtensa).
- Interactive No need for the compile-flash-boot cycle. With the REPL (interactive prompt) you can type commands and execute them immediately, run scripts etc.
- **Popular** Many platforms are supported. The user base is growing bigger. Notable forks: MicroPython, CircuitPython, MicroPython\_ESP32\_psRAM\_LoBo
- Embedded Oriented Comes with modules specifically for embedded systems, such as the machine module for accessing low-level hardware (I/O pins, ADC, UART, SPI, I2C, RTC, Timers etc.)

# 2.7.2 Why Micropython + LVGL?

Currently, Micropython does not have a good high-level GUI library by default. LVGL is an Object Oriented Component Based high-level GUI library, which seems to be a natural candidate to map into a higher level language, such as Python. LVGL is implemented in C and its APIs are in C.

#### Here are some advantages of using LVGL in Micropython:

- Develop GUI in Python, a very popular high level language. Use paradigms such as Object Oriented Programming.
- Usually, GUI development requires multiple iterations to get things right. With C, each iteration consists of Change code > Build > Flash > Run.In Micropython it's just Change code > Run! You can even run commands interactively using the REPL (the interactive prompt)

#### Micropython + LVGL could be used for:

- Fast prototyping GUI.
- Shorten the cycle of changing and fine-tuning the GUI.
- Model the GUI in a more abstract way by defining reusable composite objects, taking advantage of Python's language features such as Inheritance, Closures, List Comprehension, Generators, Exception Handling, Arbitrary Precision Integers and others.

2.7. Micropython 19

- Make LVGL accessible to a larger audience. No need to know C in order to create a nice GUI on an embedded system. This goes well with CircuitPython vision. CircuitPython was designed with education in mind, to make it easier for new or unexperienced users to get started with embedded development.
- Creating tools to work with LVGL at a higher level (e.g. drag-and-drop designer).

#### 2.7.3 So what does it look like?

TL;DR: It's very much like the C API, but Object Oriented for LVGL components.

Let's dive right into an example!

#### A simple example

```
import lvgl as lv
lv.init()
scr = lv.obj()
btn = lv.btn(scr)
btn.align(lv.scr_act(), lv.ALIGN.CENTER, 0, 0)
label = lv.label(btn)
label.set_text("Button")
lv.scr_load(scr)
```

#### 2.7.4 How can I use it?

#### **Online Simulator**

If you want to experiment with LVGL + Micropython without downloading anything - you can use our online simulator!It's a fully functional LVGL + Micropython that runs entirely in the browser and allows you to edit a python script and run it.

Click here to experiment on the online simulator

Hello World

Note: examples don't work with v7 yet, so v6 is used.

#### **PC Simulator**

Micropython is ported to many platforms. One notable port is "unix", which allows you to build and run Micropython (+LVGL) on a Linux machine. (On a Windows machine you might need Virtual Box or WSL or MinGW or Cygwin etc.)

Click here to know more information about building and running the unix port

2.7. Micropython 20

#### **Embedded platform**

At the end, the goal is to run it all on an embedded platform.Both Micropython and LVGL can be used on many embedded architectures, such as stm32, ESP32 etc.You would also need display and input drivers. We have some sample drivers (ESP32+ILI9341, as well as some other examples), but most chances are you would want to create your own input/display drivers for your specific purposes.Drivers can be implemented either in C as Micropython module, or in pure Micropython!

## 2.7.5 Where can I find more information?

- On the Blog Post
- On lv\_micropython README
- On lv binding micropython README
- On LVGL forum (Feel free to ask anything!)
- On Micropython docs and forum

2.7. Micropython 21

# THREE

# **PORTING**

# 3.1 System overview



**Application** Your application which creates the GUI and handles the specific tasks.

**LVGL** The graphics library itself. Your application can communicate with the library to create a GUI. It contains a HAL (Hardware Abstraction Layer) interface to register your display and input device drivers.

**Driver** Besides your specific drivers, it contains functions to drive your display, optionally to a GPU and to read the touchpad or buttons.

Depending on the MCU, there are two typical hardware set-ups. One with built-in LCD/TFT driver periphery and another without it. In both cases, a frame buffer will be required to store the current image of the screen.

- 1. MCU with TFT/LCD driver If your MCU has a TFT/LCD driver periphery then you can connect a display directly via RGB interface. In this case, the frame buffer can be in the internal RAM (if the MCU has enough RAM) or in the external RAM (if the MCU has a memory interface).
- 2. External display controller If the MCU doesn't have TFT/LCD driver interface then an external display controller (E.g. SSD1963, SSD1306, ILI9341) has to be used. In this case, the MCU can communicate with the display controller via Parallel port, SPI or sometimes I2C. The frame buffer is usually located in the display controller which saves a lot of RAM for the MCU.

# 3.2 Set-up a project

# 3.2.1 Get the library

LVGL Graphics Library is available on GitHub: https://github.com/lvgl/lvgl.

You can clone it or download the latest version of the library from GitHub.

The graphics library is the lvgl directory which should be copied into your project.

# 3.2.2 Configuration file

There is a configuration header file for LVGL called **lv\_conf.h**. It sets the library's basic behaviour, disables unused modules and features, adjusts the size of memory buffers in compile-time, etc.

Copy lvgl/lv\_conf\_template.h next to the lvgl directory and rename it to lv\_conf.h. Open the file and change the #if 0 at the beginning to #if 1 to enable its content.

 $lv\_conf.h$  can be copied other places as well but then you should add LV\_CONF\_INCLUDE\_SIMPLE define to your compiler options (e.g. -DLV\_CONF\_INCLUDE\_SIMPLE for gcc compiler) and set the include path manually.

In the config file comments explain the meaning of the options. Check at least these three configuration options and modify them according to your hardware:

- 1. LV\_HOR\_RES\_MAX Your display's horizontal resolution.
- 2. LV\_VER\_RES\_MAX Your display's vertical resolution.
- 3. LV\_COLOR\_DEPTH 8 for (RG332), 16 for (RGB565) or 32 for (RGB888 and ARGB8888).

#### 3.2.3 Initialization

To use the graphics library you have to initialize it and the other components too. The order of the initialization is:

- 1. Call lv init().
- 2. Initialize your drivers.
- 3. Register the display and input devices drivers in LVGL. More about *Display* and *Input device* registration.
- 4. Call lv\_tick\_inc(x) in every x milliseconds in an interrupt to tell the elapsed time. Learn more.
- 5. Call lv\_task\_handler() periodically in every few milliseconds to handle LVGL related tasks. Learn
  more.

# 3.3 Display interface

To set up a display an lv\_disp\_buf\_t and an lv\_disp\_drv\_t variable has to be initialized.

- lv\_disp\_buf\_t contains internal graphics buffer(s).
- lv\_disp\_drv\_t contains callback functions to interact with the display and manipulate drawing related things.

# 3.3.1 Display buffer

lv disp buf t can be initialized like this:

```
/*A static or global variable to store the buffers*/
static lv_disp_buf_t disp_buf;

/*Static or global buffer(s). The second buffer is optional*/
static lv_color_t buf_1[MY_DISP_HOR_RES * 10];
static lv_color_t buf_2[MY_DISP_HOR_RES * 10];

/*Initialize `disp_buf` with the buffer(s) */
lv_disp_buf_init(&disp_buf, buf_1, buf_2, MY_DISP_HOR_RES*10);
```

There are 3 possible configurations regarding the buffer size:

- 1. One buffer LVGL draws the content of the screen into a buffer and sends it to the display. The buffer can be smaller than the screen. In this case, the larger areas will be redrawn in multiple parts. If only small areas changes (e.g. button press) then only those areas will be refreshed.
- 2. **Two non-screen-sized buffers** having two buffers LVGL can draw into one buffer while the content of the other buffer is sent to display in the background. DMA or other hardware should be used to transfer the data to the display to let the CPU draw meanwhile. This way the rendering and refreshing of the display become parallel. Similarly to the *One buffer*, LVGL will draw the display's content in chunks if the buffer is smaller than the area to refresh.
- 3. Two screen-sized buffers. In contrast to *Two non-screen-sized buffers* LVGL will always provide the whole screen's content not only chunks. This way the driver can simply change the address of the frame buffer to the buffer received from LVGL. Therefore this method works the best when the MCU has an LCD/TFT interface and the frame buffer is just a location in the RAM.

## 3.3.2 Display driver

Once the buffer initialization is ready the display drivers need to be initialized. In the most simple case only the following two fields of lv\_disp\_drv\_t needs to be set:

- buffer pointer to an initialized lv disp buf t variable.
- flush\_cb a callback function to copy a buffer's content to a specific area of the display.

There are some optional data fields:

- hor\_res horizontal resolution of the display. (LV\_HOR\_RES\_MAX by default from lv\_conf.h).
- ver\_res vertical resolution of the display. (LV VER RES MAX by default from lv\_conf.h).
- color\_chroma\_key a color which will be drawn as transparent on chrome keyed images. LV\_COLOR\_TRANSP by default from  $lv\_conf.h$ ).
- user\_data custom user data for the driver. Its type can be modified in lv\_conf.h.
- anti-aliasing use anti-aliasing (edge smoothing). LV ANTIALIAS by default from  $lv\_conf.h.$
- rotated if 1 swap hor\_res and ver\_res. LVGL draws in the same direction in both cases (in lines from top to bottom) so the driver also needs to be reconfigured to change the display's fill direction.
- screen\_transp if 1 the screen can have transparent or opaque style. LV\_COLOR\_SCREEN\_TRANSP needs to enabled in *lv\_conf.h.*

To use a GPU the following callbacks can be used:

- gpu\_fill\_cb fill an area in memory with colors.
- gpu\_blend\_cb blend two memory buffers using opacity.

Note that, these functions need to draw to the memory (RAM) and not your display directly.

Some other optional callbacks to make easier and more optimal to work with monochrome, grayscale or other non-standard RGB displays:

- rounder\_cb round the coordinates of areas to redraw. E.g. a 2x2 px can be converted to 2x8. It can be used if the display controller can refresh only areas with specific height or width (usually 8 px height with monochrome displays).
- set\_px\_cb a custom function to write the *display buffer*. It can be used to store the pixels more compactly if the display has a special color format. (e.g. 1-bit monochrome, 2-bit grayscale etc.) This way the buffers used in lv\_disp\_buf\_t can be smaller to hold only the required number of bits for the given area size. set\_px\_cb is not working with Two screen-sized buffers display buffer configuration.
- monitor\_cb a callback function tells how many pixels were refreshed in how much time.

To set the fields of  $lv\_disp\_drv\_t$  variable it needs to be initialized with  $lv\_disp\_drv\_init(\&disp\_drv)$ . And finally to register a display for LVGL  $lv\_disp\_drv\_register(\&disp\_drv)$  needs to be called.

All together it looks like this:

Here some simple examples of the callbacks:

```
void my flush cb(lv disp drv t * disp drv, const lv area t * area, lv color t * color
→p)
{
    /*The most simple case (but also the slowest) to put all pixels to the screen one-
→by-one*/
    int32_t x, y;
    for(y = area->y1; y <= area->y2; y++) {
        for(x = area->x1; x <= area->x2; x++) {
            put_px(x, y, *color_p)
            color p++;
        }
    }
    /* IMPORTANT!!!
    * Inform the graphics library that you are ready with the flushing*/
    lv disp flush ready(disp);
}
void my gpu_fill_cb(lv_disp_drv_t * disp_drv, lv_color_t * dest_buf, const lv_area_t_
→* dest_area, const lv_area_t * fill_area, lv_color_t color);
```

(continues on next page)

```
/*It's an example code which should be done by your GPU*/
   uint32 t x, y;
   dest_buf += dest_width * fill_area->y1; /*Go to the first line*/
    for(y = fill area->y1; y < fill area->y2; y++) {
        for(x = fill_area->x1; x < fill_area->x2; x++) {
            dest_buf[x] = color;
                              /*Go to the next line*/
        dest_buf+=dest_width;
    }
}
void my_gpu_blend_cb(lv_disp_drv_t * disp_drv, lv_color_t * dest, const lv_color_t *_

¬src, uint32_t length, lv_opa_t opa)
   /*It's an example code which should be done by your GPU*/
   uint32 t i;
    for(i = 0; i < length; i++) {
        dest[i] = lv_color_mix(dest[i], src[i], opa);
}
void my_rounder_cb(lv_disp_drv_t * disp_drv, lv_area_t * area)
 /* Update the areas as needed. Can be only larger.
  * For example to always have lines 8 px height:*/
  area->y1 = area->y1 & 0\times07;
  area->y2 = (area->y2 & 0 \times 07) + 8;
}
void my_set_px_cb(lv_disp_drv_t * disp_drv, uint8_t * buf, lv_coord_t buf_w, lv_coord_
→t x, lv_coord_t y, lv_color_t color, lv_opa_t opa)
    /* Write to the buffer as required for the display.
    * Write only 1-bit for monochrome displays mapped vertically:*/
buf += buf_w * (y >> 3) + x;
if(lv\_color\_brightness(color) > 128) (*buf) |= (1 << (y % 8));
else (*buf) \&= ~(1 << (y % 8));
void my_monitor_cb(lv_disp_drv_t * disp_drv, uint32_t time, uint32_t px)
 printf("%d px refreshed in %d ms\n", time, ms);
```

#### 3.3.3 API

Display Driver HAL interface header file

# **Typedefs**

# typedef struct \_\_disp\_\_drv\_\_t lv\_\_disp\_\_drv\_\_t

Display Driver structure to be registered by HAL

# typedef struct \_\_disp\_\_t lv\_disp\_t

Display structure.

Note lv disp drv t should be the first member of the structure.

#### **Enums**

#### **Functions**

```
void lv_disp_drv_init(lv_disp_drv_t *driver)
```

Initialize a display driver with default values. It is used to have known values in the fields and not junk in memory. After it you can safely set only the fields you need.

#### **Parameters**

• driver: pointer to driver variable to initialize

```
void lv\_disp\_buf\_init(lv\_disp\_buf\_t *disp\_buf, void *buf1, void *buf2, uint32_t size\_in\_px\_cnt)

Initialize a display buffer
```

#### **Parameters**

- disp\_buf: pointer lv\_disp\_buf\_t variable to initialize
- buf1: A buffer to be used by LVGL to draw the image. Always has to specified and can't be NULL. Can be an array allocated by the user. E.g. static lv\_color\_t disp\_buf1[1024 \* 10] Or a memory address e.g. in external SRAM
- buf2: Optionally specify a second buffer to make image rendering and image flushing (sending to the display) parallel. In the disp\_drv->flush you should use DMA or similar hardware to send the image to the display in the background. It lets LVGL to render next frame into the other buffer while previous is being sent. Set to NULL if unused.
- size in px cnt: size of the buf1 and buf2 in pixel count.

```
lv_disp_t *lv_disp_drv_register(lv_disp_drv_t *driver)
```

Register an initialized display driver. Automatically set the first display as active.

**Return** pointer to the new display or NULL on error

#### **Parameters**

• driver: pointer to an initialized 'lv disp drv t' variable (can be local variable)

```
\label{eq:void_loss_disp_drv_update} \textbf{(} \textit{lv\_disp\_t*disp}, \textit{lv\_disp\_drv\_t*new\_drv}\textbf{)}
```

Update the driver in run time.

#### **Parameters**

• disp: pointer to a display. (return value of lv\_disp\_drv\_register)

• new drv: pointer to the new driver

# void lv\_disp\_remove(lv\_disp\_t \*disp)

Remove a display

#### **Parameters**

• disp: pointer to display

# void lv\_disp\_set\_default(lv\_disp\_t \*disp)

Set a default screen. The new screens will be created on it by default.

#### **Parameters**

• disp: pointer to a display

# lv\_disp\_t \*lv\_disp\_get\_default(void)

Get the default display

Return pointer to the default display

# lv\_coord\_t lv\_disp\_get\_hor\_res(lv\_disp\_t \*disp)

Get the horizontal resolution of a display

Return the horizontal resolution of the display

#### **Parameters**

• disp: pointer to a display (NULL to use the default display)

# lv\_coord\_t lv\_disp\_get\_ver\_res(lv\_disp\_t \*disp)

Get the vertical resolution of a display

**Return** the vertical resolution of the display

#### Parameters

• disp: pointer to a display (NULL to use the default display)

#### bool lv disp get antialiasing $(lv \ disp \ t * disp)$

Get if anti-aliasing is enabled for a display or not

Return true: anti-aliasing is enabled; false: disabled

## Parameters

• disp: pointer to a display (NULL to use the default display)

## lv\_coord\_t lv\_disp\_get\_dpi(lv\_disp\_t \*disp)

Get the DPI of the display

**Return** dpi of the display

#### **Parameters**

• disp: pointer to a display (NULL to use the default display)

# lv\_disp\_size\_t lv\_disp\_get\_size\_category(lv\_disp\_t\*disp)

Get the size category of the display based on it's hor. res. and dpi.

Return LV DISP SIZE SMALL/MEDIUM/LARGE/EXTRA LARGE

## Parameters

• disp: pointer to a display (NULL to use the default display)

## lv disp t\*lv disp get next(lv disp t\*disp)

Get the next display.

Return the next display or NULL if no more. Give the first display when the parameter is NULL

#### **Parameters**

• disp: pointer to the current display. NULL to initialize.

```
lv_disp_buf_t *lv_disp_get_buf(lv_disp_t *disp)
```

Get the internal buffer of a display

Return pointer to the internal buffers

#### **Parameters**

• disp: pointer to a display

# uint16\_t lv\_disp\_get\_inv\_buf\_size(lv\_disp\_t \*disp)

Get the number of areas in the buffer

Return number of invalid areas

# void \_lv\_disp\_pop\_from\_inv\_buf(lv\_disp\_t \*disp, uint16\_t num)

Pop (delete) the last 'num' invalidated areas from the buffer

#### **Parameters**

• num: number of areas to delete

## bool lv\_disp\_is\_double\_buf(lv\_disp\_t \*disp)

Check the driver configuration if it's double buffered (both buf1 and buf2 are set)

Return true: double buffered; false: not double buffered

#### **Parameters**

• disp: pointer to to display to check

# bool lv\_disp\_is\_true\_double\_buf(lv\_disp\_t \*disp)

Check the driver configuration if it's TRUE double buffered (both buf1 and buf2 are set and size is screen sized)

Return true: double buffered; false: not double buffered

#### **Parameters**

• disp: pointer to to display to check

#### struct lv disp buf t

 $\#include < lv\_hal\_disp.h >$  Structure for holding display buffer information.

#### **Public Members**

```
void *buf1
    First display buffer.

void *buf2
    Second display buffer.

void *buf_act
uint32_t size
lv_area_t area
volatile int flushing
```

volatile int flushing\_last

3.3. Display interface

```
\begin{tabular}{ll} \textbf{volatile} & uint 32\_t \ \textbf{last\_area} \\ \textbf{volatile} & uint 32\_t \ \textbf{last\_part} \\ \end{tabular}
```

## struct \_disp\_drv\_t

#include <lv\_hal\_disp.h> Display Driver structure to be registered by HAL

#### **Public Members**

lv\_coord\_t hor\_res

Horizontal resolution.

lv\_coord\_t ver\_res

Vertical resolution.

lv\_disp\_buf\_t \*buffer

Pointer to a buffer initialized with  $lv\_disp\_buf\_init()$ . LVGL will use this buffer(s) to draw the screens contents

#### uint32\_t antialiasing

1: antialiasing is enabled on this display.

#### uint32 t rotated

1: turn the display by 90 degree.

Warning Does not update coordinates for you!

# $uint32\_t$ screen\_transp

Handle if the the screen doesn't have a solid (opa == LV\_OPA\_COVER) background. Use only if required because it's slower.

#### uint32 t dpi

DPI (dot per inch) of the display. Set to LV DPI from lv Conf.h by default.

 $\label{eq:color_t} $\operatorname{void}(*flush\_cb)(struct \__disp\_drv\_t *\operatorname{disp\_drv}, \; \operatorname{const} \; \operatorname{lv\_area\_t} *\operatorname{area}, \; lv\_color\_t *\operatorname{color\_p})$$ 

MANDATORY: Write the internal buffer (VDB) to the display. 'lv\_disp\_flush\_ready()' has to be called when finished

OPTIONAL: Extend the invalidated areas to match with the display drivers requirements E.g. round y to, 8, 16 ...) on a monochrome display

OPTIONAL: Set a pixel in a buffer according to the special requirements of the display Can be used for color format not supported in LittelvGL. E.g. 2 bit -> 4 gray scales

**Note** Much slower then drawing with supported color formats.

void (\*monitor\_cb)(struct \_disp\_drv\_t \*disp\_drv, uint32\_t time, uint32\_t px)

OPTIONAL: Called after every refresh cycle to tell the rendering and flushing time + the number of flushed pixels

void (\*wait\_cb)(struct \_disp\_drv\_t \*disp\_drv)

OPTIONAL: Called periodically while lvgl waits for operation to be completed. For example flushing or GPU User can execute very simple tasks here or yield the task

void (\*gpu\_blend\_cb)(struct \_disp\_drv\_t \*disp\_drv, lv\_color\_t \*dest, const lv\_color\_t \*src, uint32\_t length, lv\_opa\_t opa)

OPTIONAL: Blend two memories using opacity (GPU only)

```
void (*gpu_fill_cb)(struct _disp_drv_t *disp_drv, lv_color_t *dest_buf, lv_coord_t
                           dest_width, const lv_area_t *fill_area, lv_color_t color)
         OPTIONAL: Fill a memory with a color (GPU only)
     lv_color_t color_chroma_key
         On CHROMA_KEYED images this color will be transparent. LV COLOR TRANSP by default.
         (lv_conf.h)
     lv disp drv user data t user data
         Custom display driver user data
struct _disp_t
     #include <lv_hal_disp.h> Display structure.
     Note lv disp drv t should be the first member of the structure.
     Public Members
     lv disp drv t driver
         < Driver to the display A task which periodically checks the dirty areas and refreshes them
     lv_task_t *refr_task
     lv_ll_t scr_ll
         Screens of the display
     struct _lv_obj_t *act_scr
         Currently active screen on this display
     struct _lv_obj_t *top_layer
         See lv_disp_get_layer_top
     struct _lv_obj_t *sys_layer
         \mathbf{See} \ lv\_disp\_get\_layer\_sys
     lv area t inv areas[LV INV BUF SIZE]
         Invalidated (marked to redraw) areas
     uint8 t inv area joined[LV INV BUF SIZE]
     uint32_t inv_p
     uint32_t last_activity_time
         Last time there was activity on this display
```

# 3.4 Input device interface

## 3.4.1 Types of input devices

To set up an input device an lv indev drv t variable has to be initialized:

type can be

- LV\_INDEV\_TYPE\_POINTER touchpad or mouse
- LV\_INDEV\_TYPE\_ENCODER encoder with left, right, push options
- LV\_INDEV\_TYPE\_BUTTON external buttons pressing the screen

read\_cb is a function pointer which will be called periodically to report the current state of an input device.
It can also buffer data and return false when no more data to be read or true when the buffer is not empty.

Visit *Input devices* to learn more about input devices in general.

## Touchpad, mouse or any pointer

Input devices which can click points of the screen belong to this category.

```
indev_drv.type = LV_INDEV_TYPE_POINTER;
indev_drv.read_cb = my_input_read;
...
bool my_input_read(lv_indev_drv_t * drv, lv_indev_data_t*data)
{
    data->point.x = touchpad_x;
    data->point.y = touchpad_y;
    data->state = LV_INDEV_STATE_PR or LV_INDEV_STATE_REL;
    return false; /*No buffering now so no more data read*/
}
```

**Important:** Touchpad drivers must return the last X/Y coordinates even when the state is LV INDEV STATE REL.

To set a mouse cursor use  $lv\_indev\_set\_cursor(my\_indev$ , &img\\_cursor). (my\_indev is the return value of  $lv\_indev\_drv\_register$ )

#### Keypad or keyboard

Full keyboards with all the letters or simple keypads with a few navigation buttons belong here.

To use a keyboard/keypad:

- Register a read\_cb function with LV\_INDEV\_TYPE\_KEYPAD type.
- An object group has to be created: lv\_group\_t \* g = lv\_group\_create() and objects have
  to be added to it with lv group add obj(g, obj)
- The created group has to be assigned to an input device: lv\_indev\_set\_group(my\_indev, g)
   (my\_indev is the return value of lv\_indev\_drv\_register)
- Use LV\_KEY\_... to navigate among the objects in the group. See lv\_core/lv\_group.h for the available keys.

#### **Encoder**

With an encoder you can do 4 things:

- 1. Press its button
- 2. Long-press its button
- 3. Turn left
- 4. Turn right

In short, the Encoder input devices work like this:

- By turning the encoder you can focus on the next/previous object.
- When you press the encoder on a simple object (like a button), it will be clicked.
- If you press the encoder on a complex object (like a list, message box, etc.) the object will go to edit mode whereby turning the encoder you can navigate inside the object.
- To leave edit mode press long the button.

To use an *Encoder* (similarly to the *Keypads*) the objects should be added to groups.

```
indev_drv.type = LV_INDEV_TYPE_ENCODER;
indev_drv.read_cb = encoder_read;
...
bool encoder_read(lv_indev_drv_t * drv, lv_indev_data_t*data){
   data->enc_diff = enc_get_new_moves();

   if(enc_pressed()) data->state = LV_INDEV_STATE_PR;
   else data->state = LV_INDEV_STATE_REL;

   return false; /*No buffering now so no more data read*/
}
```

#### Using buttons with Encoder logic

In addition to standar encoder behavior, you can also utilise its logic to navigate(focus) and edit widgets using buttons. This is especially handy if you have only few buttons avalible, or you want to use other buttons in addition to encoder wheel.

You need to have 3 buttons avalible:

- LV\_KEY\_ENTER will simulate press or pushing of the encoder button
- LV\_KEY\_LEFT will simulate turnuing encoder left
- LV\_KEY\_RIGHT will simulate turnuing encoder right
- other keys will be passed to the focused widget

If you hold the keys it will simulate encoder click with period specified in indev\_drv.
long press rep time.

#### **Button**

Buttons mean external "hardware" buttons next to the screen which are assigned to specific coordinates of the screen. If a button is pressed it will simulate the pressing on the assigned coordinate. (Similarly to a touchpad)

To assign buttons to coordinates use  $lv\_indev\_set\_button\_points(my\_indev, points\_array).points\_array should look like const <math>lv\_point\_t$  points\_array[] = {  $\{12,30\},\{60,90\},\ldots\}$ 

**Important:** The points\_array can't go out of scope. Either declare it as a global variable or as a static variable inside a function.

(continues on next page)

```
} else {
    data->state = LV_INDEV_STATE_REL; /*Set the released state*/
}

data->btn = last_btn; /*Save the last button*/

return false; /*No buffering now so no more data read*/
}
```

### 3.4.2 Other features

Besides read\_cb a feedback\_cb callback can be also specified in lv\_indev\_drv\_t. feedback\_cb is called when any type of event is sent by the input devices. (independently from its type). It allows making feedback for the user e.g. to play a sound on LV EVENT CLICK.

The default value of the following parameters can be set in  $lv\_conf.h$  but the default value can be overwritten in  $lv\_indev\_drv\_t$ :

- drag\_limit Number of pixels to slide before actually drag the object
- drag\_throw Drag throw slow-down in [%]. Greater value means faster slow-down
- long\_press\_time Press time to send LV EVENT LONG PRESSED (in milliseconds)
- $\bullet \ \ long\_press\_rep\_time \ \mathrm{Interval} \ of \ \mathrm{sending} \ \mathsf{LV\_EVENT\_LONG\_PRESSED\_REPEAT} \ (\mathrm{in \ milliseconds})$
- read\_task pointer to the lv\_task which reads the input device. Its parameters can be changed by lv task ...() functions

Every Input device is associated with a display. By default, a new input device is added to the lastly created or the explicitly selected (using  $lv\_disp\_set\_default()$ ) display. The associated display is stored and can be changed in disp field of the driver.

### 3.4.3 API

Input Device HAL interface layer header file

### **Typedefs**

#### **Enums**

### enum [anonymous]

Possible input device types

Values:

### LV INDEV TYPE NONE

Uninitialized state

### LV\_INDEV\_TYPE\_POINTER

Touch pad, mouse, external button

### LV INDEV TYPE KEYPAD

Keypad or keyboard

### LV\_INDEV\_TYPE\_BUTTON

External (hardware button) which is assigned to a specific point of the screen

## LV\_INDEV\_TYPE\_ENCODER

Encoder with only Left, Right turn and a Button

### enum [anonymous]

States for input devices

Values:

### $LV_INDEV_STATE_REL = 0$

LV\_INDEV\_STATE\_PR

### enum [anonymous]

Values:

### $LV_DRAG_DIR_HOR = 0x1$

Object can be dragged horizontally.

# $\textbf{LV\_DRAG\_DIR\_VER} = 0x2$

Object can be dragged vertically.

### $LV_DRAG_DIR_BOTH = 0x3$

Object can be dragged in all directions.

### LV DRAG DIR ONE =0x4

Object can be dragged only one direction (the first move).

## enum [anonymous]

Values:

### LV GESTURE DIR TOP

Gesture dir up.

### LV GESTURE DIR BOTTOM

Gesture dir down.

### LV GESTURE DIR LEFT

Gesture dir left.

### LV\_GESTURE\_DIR\_RIGHT

Gesture dir right.

### **Functions**

```
void lv_indev_drv_init(lv_indev_drv_t *driver)
```

Initialize an input device driver with default values. It is used to surly have known values in the fields ant not memory junk. After it you can set the fields.

#### **Parameters**

• driver: pointer to driver variable to initialize

```
lv_indev_t *lv_indev_drv_register(lv_indev_drv_t *driver)
```

Register an initialized input device driver.

Return pointer to the new input device or NULL on error

#### **Parameters**

• driver: pointer to an initialized 'lv\_indev\_drv\_t' variable (can be local variable)

```
void lv_indev_drv_update(lv_indev_t *indev, lv_indev_drv_t *new_drv)
```

Update the driver in run time.

### **Parameters**

- indev: pointer to a input device. (return value of lv\_indev\_drv\_register)
- new\_drv: pointer to the new driver

```
lv_indev_t *lv_indev_get_next(lv_indev_t *indev)
```

Get the next input device.

**Return** the next input devise or NULL if no more. Give the first input device when the parameter is NULL

### Parameters

• indev: pointer to the current input device. NULL to initialize.

```
bool _lv_indev_read(lv_indev_t *indev, lv_indev_data_t *data)
```

Read data from an input device.

**Return** false: no more data; true: there more data to read (buffered)

### **Parameters**

- indev: pointer to an input device
- data: input device will write its data here

### struct lv indev data t

#include <lv\_hal\_indev.h> Data structure passed to an input driver to fill

#### **Public Members**

```
lv_point_t point
    For LV_INDEV_TYPE_POINTER the currently pressed point
uint32_t key
    For LV_INDEV_TYPE_KEYPAD the currently pressed key
uint32_t btn_id
    For LV_INDEV_TYPE_BUTTON the currently pressed button
int16_t enc_diff
    For LV_INDEV_TYPE_ENCODER number of steps since the previous read
```

#### lv indev state t state

LV\_INDEV\_STATE\_REL or LV\_INDEV\_STATE\_PR

### struct \_lv\_indev\_drv\_t

#include <lv\_hal\_indev.h> Initialized by the user and registered by 'lv\_indev\_add()'

#### **Public Members**

### lv\_indev\_type\_t type

< Input device type Function pointer to read input device data. Return 'true' if there is more data to be read (buffered). Most drivers can safely return 'false'

bool (\*read\_cb)(struct \_lv\_indev\_drv\_t \*indev\_drv, lv\_indev\_data\_t \*data)

# void (\*feedback\_cb)(struct \_lv\_indev\_drv\_t \*, uint8\_t)

Called when an action happened on the input device. The second parameter is the event from lv event t

lv\_indev\_drv\_user\_data\_t user\_data

### struct \_disp\_t \*disp

< Pointer to the assigned display Task to read the periodically read the input device

### $lv\_task\_t$ \*read task

Number of pixels to slide before actually drag the object

### uint8\_t drag\_limit

Drag throw slow-down in [%]. Greater value means faster slow-down

# uint8\_t drag\_throw

At least this difference should between two points to evaluate as gesture

### uint8\_t gesture\_min\_velocity

At least this difference should be to send a gesture

### uint8 t gesture limit

Long press time in milliseconds

# $uint16\_t$ long\_press\_time

Repeated trigger period in long press [ms]

### uint16\_t long\_press\_rep\_time

### struct lv indev proc t

 $\#include < lv\_hal\_indev.h >$  Run time data of input devices Internally used by the library, you should not need to touch it.

#### **Public Members**

### lv\_indev\_state\_t state

Current state of the input device.

### lv\_point\_t act\_point

Current point of input device.

### lv\_point\_t last\_point

Last point of input device.

### lv\_point\_t vect

Difference between act point and last point.

```
ly point t drag sum
    lv_point_t drag_throw_vect
    struct \_lv\_obj\_t *act\_obj
    struct _lv_obj_t *last_obj
    struct _lv_obj_t *last_pressed
    lv_gesture_dir_t gesture_dir
    lv_point_t gesture_sum
    uint8 t drag limit out
    uint8_t drag_in_prog
    lv drag dir t drag dir
    uint8_t gesture_sent
    struct <u>lv indev proc</u> t::[anonymous]::[anonymous] pointer
    lv_indev_state_t last_state
    uint32_t last_key
    struct _lv_indev_proc_t::[anonymous]::[anonymous] keypad
    union lv indev proc t::[anonymous] types
    uint32_t pr_timestamp
         Pressed time stamp
    uint32_t longpr_rep_timestamp
         Long press repeat time stamp
    uint8_t long_pr_sent
    uint8 t reset query
    uint8 t disabled
    uint8 t wait until release
struct _lv_indev_t
     #include < lv hal indev.h > The main input device descriptor with driver, runtime data ('proc') and
    some additional information
    Public Members
    lv_indev_drv_t driver
    lv_indev_proc_t proc
    struct _lv_obj_t *cursor
         Cursor for LV INPUT TYPE POINTER
    struct _lv_group_t *group
         Keypad destination group
    const ly point t *btn points
         Array points assigned to the button ()screen will be pressed here by the buttons
```

# 3.5 Tick interface

The LVGL needs a system tick to know the elapsed time for animation and other tasks.

You need to call the lv\_tick\_inc(tick\_period) function periodically and tell the call period in milliseconds. For example, lv\_tick\_inc(1) for calling in every millisecond.

lv\_tick\_inc should be called in a higher priority routine than lv\_task\_handler() (e.g. in an interrupt) to precisely know the elapsed milliseconds even if the execution of lv\_task\_handler takes longer
time.

With FreeRTOS lv tick inc can be called in vApplicationTickHook.

On Linux based operating system (e.g. on Raspberry Pi) lv\_tick\_inc can be called in a thread as below:

### 3.5.1 API

Provide access to the system tick with 1 millisecond resolution

#### **Functions**

```
uint32_t lv_tick_get(void)
```

Get the elapsed milliseconds since start up

**Return** the elapsed milliseconds

```
uint32_t lv_tick_elaps(uint32_t prev_tick)
```

Get the elapsed milliseconds since a previous time stamp

**Return** the elapsed milliseconds since 'prev\_tick'

**Parameters** 

• prev\_tick: a previous time stamp (return value of systick\_get() )

# 3.6 Task Handler

To handle the tasks of LVGL you need to call <code>lv\_task\_handler()</code> periodically in one of the followings:

- while(1) of main() function
- timer interrupt periodically (low priority then lv tick inc())
- an OS task periodically

The timing is not critical but it should be about 5 milliseconds to keep the system responsive.

Example:

3.5. Tick interface 40

```
while(1) {
   lv_task_handler();
   my_delay_ms(5);
}
```

To learn more about task visit the Tasks section.

# 3.7 Sleep management

The MCU can go to sleep when no user input happens. In this case, the main while(1) should look like this:

You should also add below lines to your input device read function if a wake-up (press, touch or click etc.) happens:

In addition to <code>lv\_disp\_get\_inactive\_time()</code> you can check <code>lv\_anim\_count\_running()</code> to see if every animations are finished.

# 3.8 Operating system and interrupts

LVGL is **not thread-safe** by default.

However, in the following conditions it's valid to call LVGL related functions:

- In events. Learn more in Events.
- In *lv\_tasks*. Learn more in *Tasks*.

### 3.8.1 Tasks and threads

If you need to use real tasks or threads, you need a mutex which should be invoked before the call of <code>lv\_task\_handler</code> and released after it. Also, you have to use the same mutex in other tasks and threads around every <code>LVGL</code> (<code>lv\_...</code>) related function calls and codes. This way you can use <code>LVGL</code> in a real multitasking environment. Just make use of a mutex to avoid the concurrent calling of <code>LVGL</code> functions.

# 3.8.2 Interrupts

Try to avoid calling LVGL functions from the interrupts (except lv\_tick\_inc() and lv\_disp\_flush\_ready()). But, if you need to do this you have to disable the interrupt which uses LVGL functions while lv\_task\_handler is running. It's a better approach to set a flag or some value and periodically check it in an lv task.

# 3.9 Logging

LVGL has built-in log module to inform the user about what is happening in the library.

### 3.9.1 Log level

To enable logging, set LV\_USE\_LOG 1 in  $lv\_conf.h$  and set LV\_LOG\_LEVEL to one of the following values:

- LV\_LOG\_LEVEL\_TRACE A lot of logs to give detailed information
- LV\_LOG\_LEVEL\_INFO Log important events
- LV\_LOG\_LEVEL\_WARN Log if something unwanted happened but didn't cause a problem
- LV\_LOG\_LEVEL\_ERROR Only critical issue, when the system may fail
- LV\_LOG\_LEVEL\_NONE Do not log anything

The events which have a higher level than the set log level will be logged too. E.g. if you LV LOG LEVEL WARN, errors will be also logged.

# 3.9.2 Logging with printf

If your system supports printf, you just need to enable  $LV\_LOG\_PRINTF$  in  $lv\_conf.h$  to send the logs with printf.

### 3.9.3 Custom log function

If you can't use printf or want to use a custom function to log, you can register a "logger" callback with lv\_log\_register\_print\_cb().

For example:

(continues on next page)

3.9. Logging 42

```
serial_send("#");
serial_send(line_str);

serial_send(": ");
serial_send(fn_name);
serial_send(": ");
serial_send(dsc);
serial_send(dsc);
serial_send("\n");
}
...

lv_log_register_print_cb(my_log_cb);
```

# **3.9.4 Add logs**

You can also use the log module via the  $LV\_LOG\_TRACE/INFO/WARN/ERROR(description)$  functions.

3.9. Logging 43

**CHAPTER** 

**FOUR** 

# **OVERVIEW**

# 4.1 Objects

In the LVGL the **basic building blocks** of a user interface are the objects, also called *Widgets*. For example a *Button*, *Label*, *Image*, *List*, *Chart* or *Text area*.

Check all the *Object types* here.

### 4.1.1 Object attributes

### **Basic attributes**

All object types share some basic attributes:

- Position
- Size
- Parent
- Drag enable
- Click enable etc.

You can set/get these attributes with lv\_obj\_set\_... and lv\_obj\_get\_... functions. For example:

To see all the available functions visit the Base object's documentation.

### **Specific attributes**

The object types have special attributes too. For example, a slider has

- Min. max. values
- Current value
- Custom styles

For these attributes, every object type have unique API functions. For example for a slider:

The API of the object types are described in their Documentation but you can also check the respective header files (e.g.  $lv\_objx/lv\_slider.h$ )

## 4.1.2 Object's working mechanisms


#### Parent-child structure

A parent object can be considered as the container of its children. Every object has exactly one parent object (except screens), but a parent can have an unlimited number of children. There is no limitation for the type of the parent but, there are typical parent (e.g. button) and typical child (e.g. label) objects.

### Moving together

If the position of the parent is changed the children will move with the parent. Therefore all positions are relative to the parent.

The (0;0) coordinates mean the objects will remain in the top left-hand corner of the parent independently from the position of the parent.

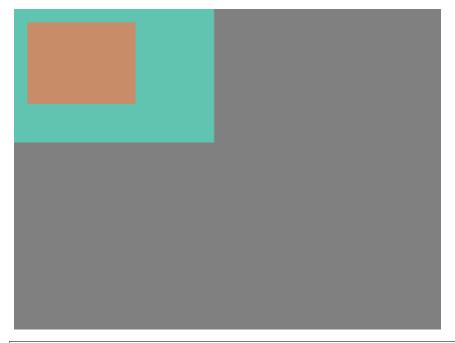

(continues on next page)

Modify the position of the parent:



```
lv_obj_set_pos(par, 50, 50); /*Move the parent. The child will move with it.*/
```

(For simplicity the adjusting of colors of the objects is not shown in the example.)

### Visibility only on the parent

If a child is partially or fully out of its parent then the parts outside will not be visible.



```
lv_obj_set_x(obj1, -30); /*Move the child a little bit of the parent*/
```

### Create - delete objects

In LVGL objects can be created and deleted dynamically in run-time. It means only the currently created objects consume RAM. For example, if you need a chart, you can create it when required and delete it when it is not visible or necessary.

Every object type has its own **create** function with a unified prototype. It needs two parameters:

- A pointer to the *parent* object. To create a screen give *NULL* as parent.
- Optionally, a pointer to *copy* object with the same type to copy it. This *copy* object can be *NULL* to avoid the copy operation.

All objects are referenced in C code using an  $lv\_obj\_t$  pointer as a handle. This pointer can later be used to set or get the attributes of the object.

The create functions look like this:

```
lv_obj_t * lv_ <type>_create(lv_obj_t * parent, lv_obj_t * copy);
```

There is a common delete function for all object types. It deletes the object and all of its children.

```
void lv_obj_del(lv_obj_t * obj);
```

 $\begin{subarray}{l} $lv\_obj\_del$ will delete the object immediately. If for any reason you can't delete the object immediately you can use <math>\begin{subarray}{l} lv\_obj\_del\_async(obj)$. It is useful e.g. if you want to delete the parent of an object in the child's <math>\begin{subarray}{l} lv\_event\_Delete$  signal.

You can remove all the children of an object (but not the object itself) using lv\_obj\_clean:

```
void lv_obj_clean(lv_obj_t * obj);
```

#### Screen - the most basic parent

The screens are special objects which have no parent object. So it is created like:

```
lv_obj_t * scr1 = lv_obj_create(NULL, NULL);
```

There is always an active screen on each display. By default, the library creates and loads a "Base object" as the screen for each display. To get the currently active screen use the <code>lv\_scr\_act()</code> function. To load a new one, use <code>lv scr load(scrl)</code>.

Screens can be created with any object type. For example, a Base object or an image to make a wallpaper.

Screens are created on the currently selected *default display*. The *default screen* is the last registered screen with <code>lv\_disp\_drv\_register</code> or you can explicitly select a new default display using <code>lv\_disp\_set\_default(disp)</code>. <code>lv\_scr\_act()</code> and <code>lv\_scr\_load()</code> operate on the currently default screen.

Visit Multi-display support to learn more.

#### 4.1.3 Parts

The widgets can have multiple parts. For example a *Button* has only a main part but a *Slider* is built from a background, an indicator and a knob.

The name of the parts is constructed like LV\_ + <TYPE> \_PART\_ <NAME>. For example LV\_BTN\_PART\_MAIN or LV\_SLIDER\_PART\_KNOB. The parts are usually used when styles are add to the objects. Using parts different styles can be assigned to the different parts of the objects.

To learn more about the parts read the related section of the Style overview.

### **S**tates

The object can be in a combinations of the following states:

- LV\_STATE\_DEFAULT Normal, released
- LV\_STATE\_CHECKED Toggled or checked
- LV\_STATE\_FOCUSED Focused via keypad or encoder or clicked via touchpad/mouse
- LV\_STATE\_EDITED Edit by an encoder
- LV\_STATE\_HOVERED Hovered by mouse (not supported now)
- LV\_STATE\_PRESSED Pressed
- LV\_STATE\_DISABLED Disabled or inactive

The states are usually automatically changed by the library as the user presses, releases, focuses etc an object. However, the states can be changed manually too. To completely overwrite the current state use <code>lv\_obj\_set\_state(obj, part, LV\_STATE...)</code>. To set or clear given state (but leave to other states untouched) use <code>lv\_obj\_add/clear\_state(obj, part, LV\_STATE\_...)</code> In both cases ORed state values can be used as well. E.g. <code>lv\_obj\_set\_state(obj, part, LV\_STATE\_PRESSED | LV\_PRESSED CHECKED)</code>.


To learn more about the states read the related section of the Style overview.

# 4.2 Layers

### 4.2.1 Order of creation

By default, LVGL draws old objects on the background and new objects on the foreground.

For example, assume we added a button to a parent object named button1 and then another button named button2. Then button1 (with its child object(s)) will be in the background and can be covered by button2 and its children.

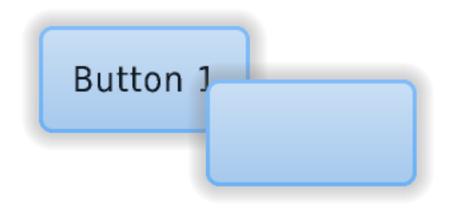

```
/*Create a screen*/
lv_obj_t * scr = lv_obj_create(NULL, NULL);
lv_scr_load(scr);
                        /*Load the screen*/
/*Create 2 buttons*/
lv_obj_t * btn1 = lv_btn_create(scr, NULL); /*Create a button on the screen*/
lv_btn_set_fit(btn1, true, true);
                                                  /*Enable to automatically set the
⇒size according to the content*/
lv_obj_set_pos(btn1, 60, 40);
                                                     /*Set the position of the
→button*/
lv obj t * btn2 = lv btn create(scr, btn1);
                                                   /*Copy the first button*/
lv_obj_set_pos(btn2, 180, 80);
                                                 /*Set the position of the button*/
/*Add labels to the buttons*/
lv_obj_t * label1 = lv_label_create(btn1, NULL);
                                                      /*Create a label on the first
→button*/
lv_label_set_text(label1, "Button 1");
                                                       /*Set the text of the label*/
lv_obj_t * label2 = lv_label_create(btn2, NULL);
                                                        /*Create a label on the
⇒second button*/
                                                         /*Set the text of the
lv_label_set_text(label2, "Button 2");
→label*/
```

(continues on next page)

4.2. Layers 49

```
/*Delete the second label*/
lv_obj_del(label2);
```

### 4.2.2 Bring to the foreground

There are several ways to bring an object to the foreground:

- Use lv\_obj\_set\_top(obj, true). If obj or any of its children is clicked, then LVGL will automatically bring the object to the foreground. It works similarly to a typical GUI on a PC. When a window in the background is clicked, it will come to the foreground automatically.
- Use <code>lv\_obj\_move\_foreground(obj)</code> to explicitly tell the library to bring an object to the foreground. Similarly, use <code>lv\_obj\_move\_background(obj)</code> to move to the background.
- When lv\_obj\_set\_parent(obj, new\_parent) is used, obj will be on the foreground on the new\_parent.

### 4.2.3 Top and sys layers

LVGL uses two special layers named as layer\_top and layer\_sys. Both are visible and common on all screens of a display. They are not, however, shared among multiple physical displays. The layer\_top is always on top of the default screen (lv\_scr\_act()), and layer\_sys is on top of layer top.

The layer\_top can be used by the user to create some content visible everywhere. For example, a menu bar, a pop-up, etc. If the click attribute is enabled, then layer\_top will absorb all user click and acts as a modal.

```
lv_obj_set_click(lv_layer_top(), true);
```

The layer\_sys is also using for similar purpose on LVGL. For example, it places the mouse cursor there to be sure it's always visible.

# 4.3 Events

Events are triggered in LVGL when something happens which might be interesting to the user, e.g. if an object:

- is clicked
- is dragged
- its value has changed, etc.

The user can assign a callback function to an object to see these events. In practice, it looks like this:

```
lv_obj_t * btn = lv_btn_create(lv_scr_act(), NULL);
lv_obj_set_event_cb(btn, my_event_cb); /*Assign an event callback*/
...
static void my_event_cb(lv_obj_t * obj, lv_event_t event)
{
```

(continues on next page)

4.3. Events 50

```
switch(event) {
        case LV_EVENT_PRESSED:
            printf("Pressed\n");
            break;
        case LV EVENT SHORT CLICKED:
            printf("Short clicked\n");
            break;
        case LV EVENT CLICKED:
            printf("Clicked\n");
            break;
        case LV EVENT LONG PRESSED:
            printf("Long press\n");
            break;
        case LV EVENT LONG PRESSED REPEAT:
            printf("Long press repeat\n");
            break;
        case LV_EVENT_RELEASED:
            printf("Released\n");
            break;
    }
       /*Etc.*/
}
```

More objects can use the same event callback.

### 4.3.1 Event types

The following event types exist:

### **Generic events**

All objects (such as Buttons/Labels/Sliders etc.) receive these generic events regardless of their type.

### Related to the input devices

These are sent when an object is pressed/released etc. by the user. They are used not only for *Pointers* but can used for *Keypad*, *Encoder* and *Button* input devices as well. Visit the *Overview of input devices* section to learn more about them.

- LV\_EVENT\_PRESSED The object has been pressed
- LV\_EVENT\_PRESSING The object is being pressed (sent continuously while pressing)
- LV\_EVENT\_PRESS\_LOST The input device is still being pressed but is no longer on the object
- LV\_EVENT\_SHORT\_CLICKED Released before LV\_INDEV\_LONG\_PRESS\_TIME time. Not called if dragged.

4.3. Events 51

- LV\_EVENT\_LONG\_PRESSED Pressing for LV\_INDEV\_LONG\_PRESS\_TIME time. Not called if dragged.
- LV\_EVENT\_LONG\_PRESSED\_REPEAT Called after LV\_INDEV\_LONG\_PRESS\_TIME in every LV\_INDEV\_LONG\_PRESS\_REP\_TIME ms. Not called if dragged.
- LV\_EVENT\_CLICKED Called on release if not dragged (regardless to long press)
- LV\_EVENT\_RELEASED Called in every case when the object has been released even if it was dragged. Not called if slid from the object while pressing and released outside of the object. In this case, LV EVENT PRESS LOST is sent.

#### Related to pointer

These events are sent only by pointer-like input devices (E.g. mouse or touchpad)

- LV\_EVENT\_DRAG\_BEGIN Dragging of the object has started
- LV\_EVENT\_DRAG\_END Dragging finished (including drag throw)
- LV\_EVENT\_DRAG\_THROW\_BEGIN Drag throw started (released after drag with "momentum")

#### Related to keypad and encoder

These events are sent by keypad and encoder input devices. Learn more about *Groups* in [overview/indev](Input devices) section.

- LV\_EVENT\_KEY A Key is sent to the object. Typically when it was pressed or repeated after a long press
- LV\_EVENT\_FOCUSED The object is focused in its group
- LV\_EVENT\_DEFOCUSED The object is defocused in its group

#### **General** events

Other general events sent by the library.

• LV\_EVENT\_DELETE The object is being deleted. Free the related user-allocated data.

### Special events

These events are specific to a particular object type.

- LV\_EVENT\_VALUE\_CHANGED The object value has changed (e.g. for a *Slider*)
- LV EVENT INSERT Something is inserted to the object. (Typically to a Text area)
- LV\_EVENT\_APPLY "Ok", "Apply" or similar specific button has clicked. (Typically from a Keyboard object)
- LV\_EVENT\_CANCEL "Close", "Cancel" or similar specific button has clicked. (Typically from a Keyboard object)
- LV\_EVENT\_REFRESH Query to refresh the object. Never sent by the library but can be sent by the user.

4.3. Events 52

Visit particular Object type's documentation to understand which events are used by an object type.

### 4.3.2 Custom data

Some events might contain custom data. For example,  $LV\_EVENT\_VALUE\_CHANGED$  in some cases tells the new value. For more information, see the particular *Object type's documentation*. To get the custom data in the event callback use  $lv\_event\_get\_data()$ .

The type of the custom data depends on the sending object but if it's a

- single number then it's uint32 t \* or int32 t \*
- text then char \* or const char \*

# 4.3.3 Send events manually

To manually send events to an object, use lv event send(obj, LV EVENT ..., &custom data).

For example, it can be used to manually close a message box by simulating a button press (although there are simpler ways of doing this):

```
/*Simulate the press of the first button (indexes start from zero)*/
uint32_t btn_id = 0;
lv_event_send(mbox, LV_EVENT_VALUE_CHANGED, &btn_id);
```

Or to perform refresh generically:

```
lv_event_send(label, LV_EVENT_REFRESH, NULL);
```

# 4.4 Styles

Styles are used to set the appearance of the objects. Styles in lvgl are heavily inspired by CSS. The concept in nutshell is the following:

- A style is an lv\_style\_t variable which can hold properties, for example border width, text color and so on. It's similar to class in CSS.
- Not all properties have to be specified. Unspecified properties will use a default value.
- Styles can be assigned to objects to change their appearance.
- A style can be used by any number of objects.
- Styles can be cascaded which means multiple styles can be assigned to an object and each style can have different properties. For example style\_btn can result in a default gray button and style\_btn\_red can add only a background-color=red to overwrite the background color.
- Later added styles have higher precedence. It means if a property is specified in two styles the later added will be used.
- Some properties (e.g. text color) can be inherited from the parent(s) if it's not specified in the object.
- Objects can have local styles that have higher precedence than "normal" styles.
- Unlike CSS (where pseudo-classes describes different states, e.g. :hover), in lvgl a property is assigned to a given state. (I.e. not the "class" is related to state but every single property has a state)
- Transitions can be applied when the object changes state.

### **4.4.1 States**

The objects can be in the following states:

- LV\_STATE\_DEFAULT (0x00): Normal, released
- LV\_STATE\_CHECKED (0x01): Toggled or checked
- LV\_STATE\_FOCUSED (0x02): Focused via keypad or encoder or clicked via touchpad/mouse
- LV\_STATE\_EDITED (0x04): Edit by an encoder
- LV\_STATE\_HOVERED (0x08): Hovered by mouse (not supported now)
- LV\_STATE\_PRESSED (0x10): Pressed
- LV\_STATE\_DISABLED (0x20): Disabled or inactive

Combination of states is also possible, for example LV\_STATE\_FOCUSED | LV\_STATE\_PRESSED.

The style properties can be defined in every state and state combination. For example, setting a different background color for default and pressed state. If a property is not defined in a state the best matching state's property will be used. Typically it means the property with LV\_STATE\_DEFAULT state. If the property is not set even for the default state the default value will be used. (See later)

But what does the "best matching state's property" really means? States have a precedence which is shown by their value (see in the above list). A higher value means higher precedence. To determine which state's property to use let's use an example. Let's see the background color is defined like this:

- LV\_STATE\_DEFAULT: white
- LV\_STATE\_PRESSED: gray
- LV STATE FOCUSED: red
- 1. By the default the object is in default state, so it's a simple case: the property is perfectly defined in the object's current state as white
- 2. When the object is pressed there are 2 related properties: default with white (default is related to every state) and pressed with gray. The pressed state has 0x10 precedence which is higher than the default state's 0x00 precedence, so gray color will be used.
- 3. When the object is focused the same thing happens as in pressed state and red color will be used. (Focused state has higher precedence than default state).
- 4. When the object is focused and pressed both gray and red would work, but the pressed state has higher precedence than focused so gray color will be used.
- 5. It's possible to set e.g rose color for LV\_STATE\_PRESSED | LV\_STATE\_FOCUSED. In this case, this combined state has 0x02 + 0x10 = 0x12 precedence, which higher than the pressed states precedence so rose color would be used.
- 6. When the object is checked there is no property to set the background color for this state. So in lack of a better option, the object remains white from the default state's property.

Some practical notes:

- If you want to set a property for all state (e.g. red background color) just set it for the default state. If the object can't find a property for its current state it will fall back to the default state's property.
- Use ORed states to describe the properties for complex cases. (E.g. pressed + checked + focused)
- It might be a good idea to use different style elements for different states. For example, finding background colors for released, pressed, checked + pressed, focused, focused + pressed, focused +

pressed + checked, etc states is quite difficult. Instead, for example, use the background color for pressed and checked states and indicate the focused state with a different border color.

# 4.4.2 Cascading styles

It's not required to set all the properties in one style. It's possible to add more styles to an object and let the later added style to modify or extend the properties in the other styles. For example, create a general gray button style and create a new for red buttons where only the new background color is set.

It's the same concept when in CSS all the used classes are listed like <div class=".btn .btn-red">.

The later added styles have higher precedence over the earlier ones. So in the gray/red button example above, the normal button style should be added first and the red style second. However, the precedence coming from states are still taken into account. So let's examine the following case:

- the basic button style defines dark-gray color for default state and light-gray color pressed state
- the red button style defines the background color as red only in the default state

In this case, when the button is released (it's in default state) it will be red because a perfect match is found in the lastly added style (red style). When the button is pressed the light-gray color is a better match because it describes the current state perfectly, so the button will be light-gray.

#### 4.4.3 Inheritance

Some properties (typically that are related to texts) can be inherited from the parent object's styles. Inheritance is applied only if the given property is not set in the object's styles (even in default state). In this case, if the property is inheritable, the property's value will be searched in the parent too until a part can tell a value for the property. The parents will use their own state to tell the value. So is button is pressed, and text color comes from here, the pressed text color will be used.

#### 4.4.4 Parts

Objects can have parts which can have their own style. For example a page has four parts:

- Background
- Scrollable
- Scrollbar
- Edge flash

![page small.png](A scrollable page in lvgl)

There is three types of object parts main, virtual and real.

The main part is usually the background and largest part of the object. Some object has only a main part. For example, a button has only a background.

The virtual parts are additional parts just drawn on the fly to the main part. There is no "real" object behind them. For example, the page's scrollbar is not a real object, it's just drawn when the page's background is drawn. The virtual parts always have the same state as the main part. If the property can be inherited, the main part will be also considered before going to the parent.

The real parts are real objects created and managed by the main object. For example, the page's scrollable part is real object. Real parts can be in different state than the main part.

To see which parts an object has visit their documentation page.

### 4.4.5 Initialize styles and set/get properties

Styles are stored in <code>lv\_style\_t</code> variables. Style variables should be <code>static</code>, global or dynamically allocated. In other words they can not be local variables in functions which are destroyed when the function exists. Before using a style it should be initialized with <code>lv\_style\_init(&my\_style)</code>. After initializing the style properties can be set added to it. Property set functions looks like this: <code>lv\_style\_set\_<property\_name>(&style, <state>, <value>);</code> For example the <code>above mentioned</code> example looks like this:

It's possible to copy a style with lv\_style\_copy(&style\_destination, &style\_source). After copy properties still can be added freely.

To remove a property use:

To get the value from style in a state functions with the following prototype are available: lv\_style\_get\_prperty\_name>(&style, <state>, <result poiner>);. The the best matching property will be selected and it's precedence will be returned. -1 will be returned if the property is not found. For example:

```
lv_color_t color;
int16_t res;
res = lv_style_get_bg_color(&style1, LV_STATE_PRESSED, &color);
if(res >= 0) {
   //the bg_color is loaded into `color`
}
```

To reset a style (free all it's data) use

```
lv_style_reset(&style);
```

## 4.4.6 Managing style list

A style on its own not that useful. It should be assigned to an object to take its effect. Every part of the objects stores a *style list* which is the list of assigned styles.

To add a style to an object use lv obj add style(obj, <part>, &style) For example:

An objects style list can be reset with lv\_obj\_reset\_style\_list(obj, <part>)

If a style which is already assigned to an object changes (i.e. one of it's property is set to a new value) the objects using that style should be notified with  $lv_obj_refresh_style(obj)$ 

To get a final value of property, including cascading, inheritance, local styles and transitions (see below), get functions like this can be used: lv\_obj\_get\_style\_property\_name(obj, cpart>)). These functions uses the object's current state and if no better candidate returns a default value. For example:

```
lv_color_t color = lv_obj_get_style_bg_color(btn, LV_BTN_PART_MAIN);
```

# 4.4.7 Local styles

In the object's style lists, so-called local properties can be stored as well. It's the same concept than CSS's <div style="color:red">. The local style is the same as a normal style, but it belongs only to a given object and can not be shared with other objects. To set a local property use functions like lv\_obj\_set\_style\_local\_property\_name>(obj, <part>, <state>, <value>); For example:

### 4.4.8 Transitions

By default, when an object changes state (e.g. it's pressed) the new properties from the new state are set immediately. However, with transitions it's possible to play an animation on state change. For example, on pressing a button its background color can be animated to the pressed color over 300 ms.

The parameters of the transitions are stored in the styles. It's possible to set

- the time of the transition
- the delay before starting the transition
- the animation path (also known as timing function)
- the properties to animate

The transition properties can be defined for each state. For example, setting 500 ms transition time in default state will mean that when the object goes to default state 500 ms transition time will be applied. Setting 100 ms transition time in the pressed state will mean a 100 ms transition time when going to presses state. So this example configuration will result in fast going to presses state and slow going back to default.

### 4.4.9 Properties

The following properties can be used in the styles.

### Mixed properties

- radius (lv\_style\_int\_t): Set the radius of the background. 0: no radius, LV\_RADIUS\_CIRCLE: maximal radius.
- clip\_corner (bool): true: enable to clip the overflowed content on the rounded (radius > 0) corners.
- size (lv\_style\_int\_t): Size of internal elements of the widgets. See the documentation of the widgets if this property is used or not.
- transform width (lv style int t): Make the object wider on both sides with this value.
- transform\_height (lv\_style\_int\_t) Make the object higher on both sides with this value.

• opa\_scale (lv\_style\_int\_t): Inherited. Scale down all opacity values of the object by this factor. As it's inherited the children objects will be affected too.

### Padding and margin properties


Padding sets the space on the inner sides of the edges. It means "I don't want my children too close to my sides, so keep this space". Padding inner set the "gap" between the children. Margin sets the space on the outer side of the edges. It means "I want this space around me".

These properties are typically used by <code>Container</code> object if layout or auto fit is enabled. However other widgets also use them to set spacing. See the documentation of the widgets for the details. <code>-pad\_top</code> (<code>lv\_style\_int\_t</code>): Set the padding on the top. <code>-pad\_bottom</code> (<code>lv\_style\_int\_t</code>): Set the padding on the left. <code>-pad\_right</code> (<code>lv\_style\_int\_t</code>): Set the padding on the right. <code>-pad\_inner</code> (<code>lv\_style\_int\_t</code>): Set the padding inside the object between children. <code>-margin\_top</code> (<code>lv\_style\_int\_t</code>): Set the margin on the top. <code>-margin\_bottom</code> (<code>lv\_style\_int\_t</code>): Set the margin on the bottom. <code>-margin\_left</code> (<code>lv\_style\_int\_t</code>): Set the margin on the left. <code>-margin\_right</code> (<code>lv\_style\_int\_t</code>): Set the margin on the right.

#### **Background properties**

The background is a simple rectangle which can have gradient and radius rounding.

- bg\_color (lv\_color\_t) Specifies the color of the background. Default value: LV\_COLOR\_WHITE
- bg\_opa (lv\_opa\_t) Specifies opacity of the background. Default value: LV\_OPA\_TRANSP.
- bg\_grad\_color (lv\_color\_t) Specifies the color of the background's gradient. The color on the right or bottom is bg grad dir != LV GRAD DIR NONE. Default value: LV COLOR WHITE.
- bg\_main\_stop (uint8\_t): Specifies where should the gradient start. 0: at left/top most position, 255: at right/bottom most position.
- bg\_grad\_stop (uint8\_t): Specifies where should the gradient start. 0: at left/top most position, 255: at right/bottom most position. Default value: 255.
- bg\_grad\_dir (lv\_grad\_dir\_t) Specifies the direction of the gradient. Can be LV GRAD DIR NONE/HOR/VER. Default value: LV GRAD DIR\_NONE.
- bg\_blend\_mode (lv\_blend\_mode\_t): Set the blend mode the background. Can be LV BLEND MODE NORMAL/ADDITIVE/SUBTRACTIVE). Default value: LV BLEND MODE NORMAL.

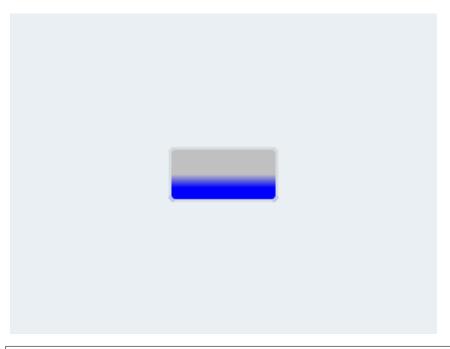


```
#include "../../lv_examples.h"
* Using the background style properties
void lv_ex_style_1(void)
    static lv_style_t style;
    lv style init(&style);
    lv_style_set_radius(&style, LV_STATE_DEFAULT, 5);
    /*Make a gradient*/
   lv_style_set_bg_opa(&style, LV_STATE_DEFAULT, LV_OPA_COVER);
    lv_style_set_bg_color(&style, LV_STATE_DEFAULT, LV_COLOR_SILVER);
    lv style set bg grad color(&style, LV STATE DEFAULT, LV COLOR BLUE);
    lv_style_set_bg_grad_dir(&style, LV_STATE_DEFAULT, LV_GRAD_DIR VER);
   /*Shift the gradient to the bottom*/
   lv_style_set_bg_main_stop(&style, LV_STATE_DEFAULT, 128);
    lv_style_set_bg_grad_stop(&style, LV_STATE_DEFAULT, 192);
   /*Create an object with the new style*/
   lv_obj_t * obj = lv_obj_create(lv_scr_act(), NULL);
    lv_obj_add_style(obj, LV_OBJ_PART_MAIN, &style);
    lv_obj_align(obj, NULL, LV_ALIGN_CENTER, 0, 0);
}
```

### **Border properties**

The border in drawn on to of the background. It has radius rounding.

• border\_color (lv color t) Specifies the color of the border.

- border\_opa (lv\_opa\_t) Specifies opacity of the border.
- border\_width (lv\_style\_int\_t): Set the width of the border.
- border\_side (lv\_border\_side\_t) Specifies which sides of the border to draw. Can be LV\_BORDER\_SIDE\_NONE/LEFT/RIGHT/TOP/BOTTOM/FULL. ORed values are also possible. Default value: LV BORDER SIDE FULL.
- border\_post (bool): If true the border will be drawn all children has been drawn.
- border\_blend\_mode (lv\_blend\_mode\_t): Set the blend mode of the border. Can be LV\_BLEND\_MODE\_NORMAL/ADDITIVE/SUBTRACTIVE). Default value: LV\_BLEND\_MODE\_NORMAL.

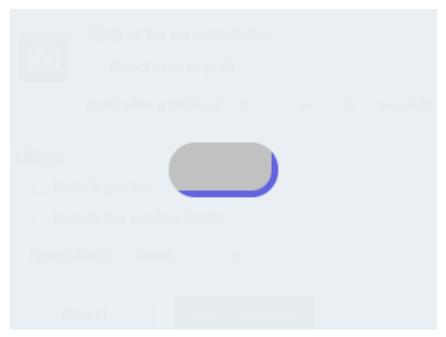

```
#include "../../lv_examples.h"
* Using the border style properties
void lv_ex_style_2(void)
    static lv style t style;
    lv_style_init(&style);
   /*Set a background color and a radius*/
   lv_style_set_radius(&style, LV_STATE_DEFAULT, 20);
    lv_style_set_bg_opa(&style, LV_STATE_DEFAULT, LV_OPA_COVER);
    lv_style_set_bg_color(&style, LV_STATE_DEFAULT, LV_COLOR_SILVER);
   /*Add border to the bottom+right*/
   lv_style_set_border_color(&style, LV_STATE_DEFAULT, LV_COLOR_BLUE);
    lv_style_set_border_width(&style, LV_STATE_DEFAULT, 5);
    lv_style_set_border_opa(&style, LV_STATE_DEFAULT, LV_OPA_50);
    lv_style_set_border_side(&style, LV_STATE_DEFAULT, LV_BORDER_SIDE_BOTTOM | LV_
→BORDER SIDE RIGHT);
    /*Create an object with the new style*/
```


(continues on next page)

```
lv_obj_t * obj = lv_obj_create(lv_scr_act(), NULL);
lv_obj_add_style(obj, LV_OBJ_PART_MAIN, &style);
lv_obj_align(obj, NULL, LV_ALIGN_CENTER, 0, 0);
}
```

### **Outline properties**

The outline is similar to border but is drawn outside of the object.

- $outline\_color\ (lv\_color\_t)$  Specifies the color of the outline.
- outline\_opa (lv\_opa\_t) Specifies opacity of the outline.
- outline\_width (lv\_style\_int\_t): Set the width of the outline.
- outline\_pad (lv style int t) Set the space between the object and the outline.
- outline\_blend\_mode (lv\_blend\_mode\_t): Set the blend mode of the outline. Can be LV BLEND MODE NORMAL/ADDITIVE/SUBTRACTIVE). Default value: LV BLEND MODE NORMAL.

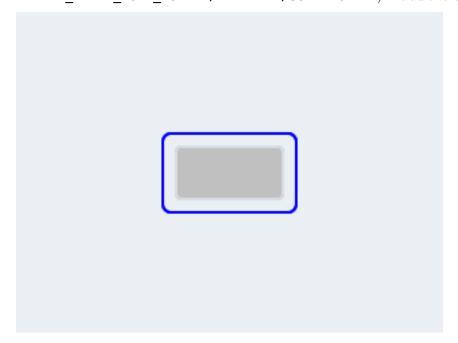

```
#include "../../lv_examples.h"

/**
   * Using the outline style properties
   */
void lv_ex_style_3(void)
{
    static lv_style_t style;
    lv_style_init(&style);

    /*Set a background color and a radius*/
    lv_style_set_radius(&style, LV_STATE_DEFAULT, 5);
    lv_style_set_bg_opa(&style, LV_STATE_DEFAULT, LV_OPA_COVER);
```

(continues on next page)

```
lv_style_set_bg_color(&style, LV_STATE_DEFAULT, LV_COLOR_SILVER);


/*Add outline*/
lv_style_set_outline_width(&style, LV_STATE_DEFAULT, 2);
lv_style_set_outline_color(&style, LV_STATE_DEFAULT, LV_COLOR_BLUE);
lv_style_set_outline_pad(&style, LV_STATE_DEFAULT, 8);

/*Create an object with the new style*/
lv_obj_t * obj = lv_obj_create(lv_scr_act(), NULL);
lv_obj_add_style(obj, LV_OBJ_PART_MAIN, &style);
lv_obj_align(obj, NULL, LV_ALIGN_CENTER, 0, 0);
}
```

### **Shadow properties**

The shadow is a blurred area under the object.

- shadow\_color (lv color t) Specifies the color of the shadow.
- shadow\_opa (lv\_opa\_t) Specifies opacity of the shadow.
- shadow\_width (lv\_style\_int\_t): Set the width (blur size) of the outline.
- shadow\_ofs\_x (lv style int t): Set the an X offset for the shadow.
- shadow\_ofs\_y (lv\_style\_int\_t): Set the an Y offset for the shadow.
- **shadow\_spread** (lv\_style\_int\_t): ake the shadow larger than the background in every direction by this value.
- shadow\_blend\_mode (lv\_blend\_mode\_t): Set the blend mode of the shadow. Can be LV BLEND MODE NORMAL/ADDITIVE/SUBTRACTIVE). Default value: LV BLEND MODE NORMAL.

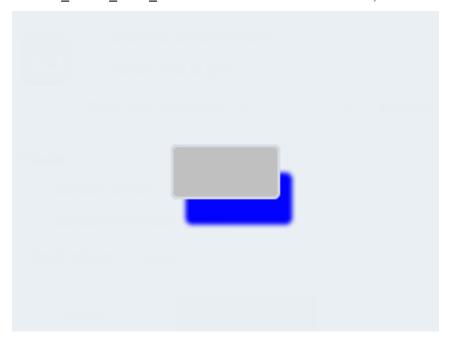

```
#include "../../lv examples.h"
* Using the Shadow style properties
void lv ex style 4(void)
    static lv style t style;
    lv style init(&style);
   /*Set a background color and a radius*/
   lv style set radius(&style, LV STATE DEFAULT, 5);
    lv style set bg opa(&style, LV STATE DEFAULT, LV OPA COVER);
    lv_style_set_bg_color(&style, LV_STATE_DEFAULT, LV_COLOR_SILVER);
   /*Add a shadow*/
   lv_style_set_shadow_width(&style, LV_STATE_DEFAULT, 8);
    lv_style_set_shadow_color(&style, LV_STATE_DEFAULT, LV_COLOR_BLUE);
    lv_style_set_shadow_ofs_x(&style, LV_STATE_DEFAULT, 10);
    lv_style_set_shadow_ofs_y(&style, LV_STATE_DEFAULT, 20);
   /*Create an object with the new style*/
   lv obj t * obj = lv obj create(lv scr act(), NULL);
    lv_obj_add_style(obj, LV_OBJ_PART_MAIN, &style);
    lv_obj_align(obj, NULL, LV_ALIGN_CENTER, 0, 0);
}
```

### Pattern properties

The pattern is an image (or symbol) drawn in the middle of the background or repeated to fill the whole background.

- pattern\_image (const void \*): Pointer to an lv\_img\_dsc\_t variable, a path to an image file or a symbol.
- pattern\_opa (lv opa t): Specifies opacity of the pattern.
- pattern\_recolor (lv\_color\_t): Mix this color to the pattern image. In case of symbols (texts) it will be the text color.
- pattern\_recolor\_opa (lv\_opa\_t): Intensity of recoloring. Default value: LV\_OPA\_TRANSP (no recoloring).
- pattern\_repeat (bool): true: the pattern will be repeated as a mosaic. false: place the pattern in the middle of the background.
- pattern\_blend\_mode (lv\_blend\_mode\_t): Set the blend mode of the pattern. Can be LV\_BLEND\_MODE\_NORMAL/ADDITIVE/SUBTRACTIVE). Default value: LV\_BLEND\_MODE\_NORMAL.




```
#include "../../lv examples.h"
* Using the pattern style properties
void lv_ex_style_5(void)
    static lv_style_t style;
    lv style init(&style);
    /*Set a background color and a radius*/
   lv_style_set_radius(&style, LV_STATE_DEFAULT, 5);
   lv_style_set_bg_opa(&style, LV_STATE_DEFAULT, LV_OPA_COVER);
   lv_style_set_bg_color(&style, LV_STATE_DEFAULT, LV_COLOR_SILVER);
   /*Add a repeating pattern*/
   lv style set pattern image(&style, LV STATE DEFAULT, LV SYMBOL OK);
    lv_style_set_pattern_recolor(&style, LV_STATE_DEFAULT, LV_COLOR_BLUE);
    lv_style_set_pattern_opa(&style, LV_STATE_DEFAULT, LV_OPA_50);
    lv_style_set_pattern_repeat(&style, LV_STATE_DEFAULT, true);
    /*Create an object with the new style*/
   lv_obj_t * obj = lv_obj_create(lv_scr_act(), NULL);
    lv_obj_add_style(obj, LV_OBJ_PART_MAIN, &style);
    lv_obj_align(obj, NULL, LV_ALIGN_CENTER, 0, 0);
}
```

### Value properties

Value is an arbitrary text drawn to the background. It can be a lightweighted replacement of creating label objects.

• value\_str (const char \*): Pointer to text to display. Only the pointer is saved.

- value\_color (lv\_color\_t): Color of the text.
- value\_opa (lv opa t): Opacity of the text.
- value\_font (const lv\_font\_t \*): Pointer to font of the text.
- $value\_letter\_space (lv\_style\_int\_t)$ : Letter space of the text.
- value\_line\_space (lv style int t): Line space of the text.
- value\_align (lv align t): Alignment of the text. Can be LV ALIGN ....
- value\_ofs\_x (lv\_style\_int\_t): X offset from the original position of the alignment.
- value\_ofs\_y (lv style int t): Y offset from the original position of the alignment.
- value\_blend\_mode (lv\_blend\_mode\_t): Set the blend mode of the text. Can be LV BLEND MODE NORMAL/ADDITIVE/SUBTRACTIVE). Default value: LV BLEND MODE NORMAL.

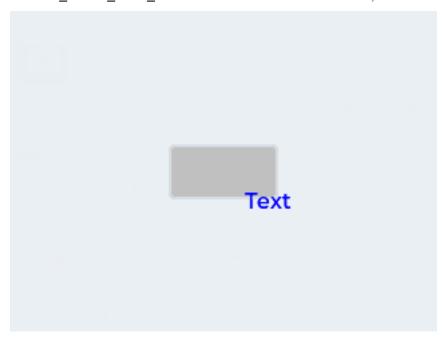

```
#include "../../lv_examples.h"

/**
   * Using the value style properties
   */
void lv_ex_style_6(void)
{
    static lv_style_t style;
    lv_style_init(&style);

   /*Set a background color and a radius*/
   lv_style_set_radius(&style, LV_STATE_DEFAULT, 5);
   lv_style_set_bg_opa(&style, LV_STATE_DEFAULT, LV_OPA_COVER);
   lv_style_set_bg_color(&style, LV_STATE_DEFAULT, LV_COLOR_SILVER);

   /*Add a value text properties*/
   lv_style_set_value_color(&style, LV_STATE_DEFAULT, LV_COLOR_BLUE);
   lv_style_set_value_align(&style, LV_STATE_DEFAULT, LV_ALIGN_IN_BOTTOM_RIGHT);
   lv_style_set_value_ofs_x(&style, LV_STATE_DEFAULT, 10);
```

(continues on next page)

```
lv_style_set_value_ofs_y(&style, LV_STATE_DEFAULT, 10);


/*Create an object with the new style*/
lv_obj_t * obj = lv_obj_create(lv_scr_act(), NULL);
lv_obj_add_style(obj, LV_OBJ_PART_MAIN, &style);
lv_obj_align(obj, NULL, LV_ALIGN_CENTER, 0, 0);

/*Add a value text to the local style. This way every object can have different______
-text*/
lv_obj_set_style_local_value_str(obj, LV_OBJ_PART_MAIN, LV_STATE_DEFAULT, "Text");
}
```

### **Text properties**

Properties for textual object.

- text\_color (lv\_color\_t): Color of the text.
- text\_opa (lv\_opa\_t): Opacity of the text.
- $text\_font$  (const  $lv\_font\_t$  \*): Pointer to font of the text.
- text\_letter\_space (lv\_style\_int\_t): Letter space of the text.
- text\_line\_space (lv style int t): Line space of the text.
- text\_decor (lv\_text\_decor\_t): Add text decoration. Can be LV\_TEXT\_DECOR\_NONE/UNDERLINE/STRIKETHROUGH.
- $text\_sel\_color$  ( $lv\_color\_t$ ): Set background color of text selection.
- text\_blend\_mode (lv\_blend\_mode\_t): Set the blend mode of the text. Can be LV BLEND MODE NORMAL/ADDITIVE/SUBTRACTIVE). Default value: LV BLEND MODE NORMAL.

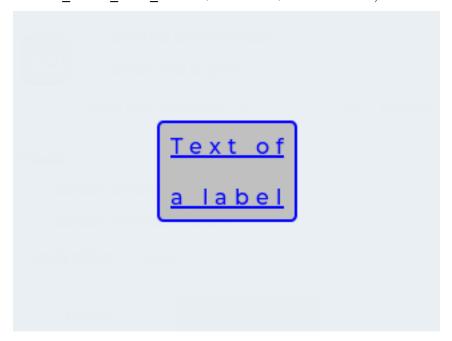

```
#include "../../lv examples.h"
* Using the text style properties
void lv_ex_style_7(void)
    static lv style t style;
   lv style init(&style);
    lv_style_set_radius(&style, LV_STATE_DEFAULT, 5);
    lv style set bg opa(&style, LV STATE DEFAULT, LV OPA COVER);
    lv style set bg color(&style, LV STATE DEFAULT, LV COLOR SILVER);
    lv_style_set_border_width(&style, LV_STATE_DEFAULT, 2);
    lv style set border color(&style, LV STATE DEFAULT, LV COLOR BLUE);
   lv_style_set_pad_top(&style, LV_STATE_DEFAULT, 10);
    lv style set pad bottom(&style, LV STATE DEFAULT, 10);
    lv_style_set_pad_left(&style, LV_STATE_DEFAULT, 10);
    lv_style_set_pad_right(&style, LV_STATE_DEFAULT, 10);
    lv style set text color(&style, LV STATE DEFAULT, LV COLOR BLUE);
    lv style set text letter space(&style, LV STATE DEFAULT, 5);
    lv_style_set_text_line_space(&style, LV_STATE_DEFAULT, 20);
    lv_style_set_text_decor(&style, LV_STATE_DEFAULT, LV_TEXT_DECOR_UNDERLINE);
    /*Create an object with the new style*/
    lv_obj_t * obj = lv_label_create(lv_scr_act(), NULL);
    lv obj add style(obj, LV LABEL_PART_MAIN, &style);
    lv_label_set_text(obj, "Text of\n"
                            "a label");
    lv_obj_align(obj, NULL, LV_ALIGN_CENTER, 0, 0);
}
```

## Line properties

Properties of lines.

- line\_color (lv color t): Color of the line.
- line\_opa (lv opa t): Opacity of the line.
- line\_width (lv style int t): Width of the line.
- line\_dash\_width (lv\_style\_int\_t): Width of dash. Dashing is drawn only for horizontal or vertical lines. 0: disable dash.
- line\_dash\_gap (lv\_style\_int\_t): Gap between two dash line. Dashing is drawn only for horizontal or vertical lines. 0: disable dash.
- line\_rounded (bool): true: draw rounded line endings.
- line\_blend\_mode (lv\_blend\_mode\_t): Set the blend mode of the line. Can be
  LV BLEND MODE NORMAL/ADDITIVE/SUBTRACTIVE). Default value: LV BLEND MODE NORMAL.



```
#include "../../lv_examples.h"

/**
    * Using the line style properties
    */
void lv_ex_style_8(void)
{
    static lv_style_t style;
    lv_style_init(&style);

    lv_style_set_line_color(&style, LV_STATE_DEFAULT, LV_COLOR_GRAY);
    lv_style_set_line_width(&style, LV_STATE_DEFAULT, 6);
    lv_style_set_line_rounded(&style, LV_STATE_DEFAULT, true);

/*Create an object with the new style*/
    lv_obj_t * obj = lv_line_create(lv_scr_act(), NULL);
    lv_obj_add_style(obj, LV_LINE_PART_MAIN, &style);

static lv_point_t p[] = {{10, 30}, {30, 50}, {100, 0}};
    lv_line_set_points(obj, p, 3);

lv_obj_align(obj, NULL, LV_ALIGN_CENTER, 0, 0);
}
```

### Image properties

Properties of image.

- image\_recolor (lv\_color\_t): Mix this color to the pattern image. In case of symbols (texts) it will be the text color.
- image\_recolor\_opa (lv\_opa\_t): Intensity of recoloring. Default value: LV\_OPA\_TRANSP (no recoloring).
- image\_opa (lv\_opa\_t): Opacity of the image.

• image\_blend\_mode (lv\_blend\_mode\_t): Set the blend mode of the image. Can be LV\_BLEND\_MODE\_NORMAL/ADDITIVE/SUBTRACTIVE). Default value: LV\_BLEND\_MODE\_NORMAL.




```
#include "../../lv examples.h"
* Using the image style properties
void lv ex style 9(void)
    static lv_style_t style;
    lv style init(&style);
    /*Set a background color and a radius*/
    lv_style_set_radius(&style, LV_STATE_DEFAULT, 5);
lv_style_set_bg_opa(&style, LV_STATE_DEFAULT, LV_OPA_COVER);
    lv_style_set_bg_color(&style, LV_STATE_DEFAULT, LV_COLOR_SILVER);
    lv_style_set_border_width(&style, LV_STATE_DEFAULT, 2);
    lv style set border color(&style, LV STATE DEFAULT, LV COLOR BLUE);
    lv style set pad top(&style, LV STATE DEFAULT, 10);
    lv style set pad bottom(&style, LV STATE DEFAULT, 10);
    lv style set pad left(&style, LV STATE DEFAULT, 10);
    lv_style_set_pad_right(&style, LV_STATE_DEFAULT, 10);
    lv style set image recolor(&style, LV STATE DEFAULT, LV COLOR BLUE);
    lv style set image recolor opa(&style, LV STATE DEFAULT, LV OPA 50);
    /*Create an object with the new style*/
    lv_obj_t * obj = lv_img_create(lv_scr_act(), NULL);
    lv_obj_add_style(obj, LV_IMG_PART_MAIN, &style);
    LV_IMG_DECLARE(img_cogwheel_argb);
    lv img set src(obj, &img cogwheel argb);
    lv_obj_align(obj, NULL, LV_ALIGN_CENTER, 0, 0);
}
```

# **Transition properties**

Properties to describe state change animations.

- transition\_time (lv\_style\_int\_t): Time of the transition.
- transition\_delay (lv style int t): Delay before the transition.
- transition\_1 (property name): A property on which transition should be applied. Use the property name with upper case with LV\_STYLE\_ prefix, e.g. LV\_STYLE\_BG\_COLOR
- transition\_2 (property name): Same as transition\_1 just for an other property.
- transition\_3 (property name): Same as transition\_1 just for an other property.
- transition\_4 (property name): Same as transition\_1 just for an other property.
- transition\_5 (property name): Same as transition\_1 just for an other property.
- transition\_6 (property name): Same as transition\_1 just for an other property.
- transition\_path (lv\_anim\_path\_t): An animation path for the transition. (Needs to be static or global variable because only its pointer is saved).

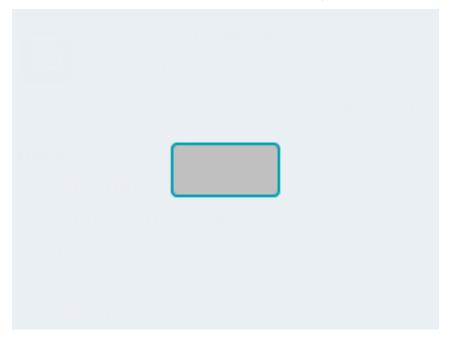

```
#include "../../lv_examples.h"

/**
    * Using the transitions style properties
    */
void lv_ex_style_10(void)
{
    static lv_style_t style;
    lv_style_init(&style);

    /*Set a background color and a radius*/
    lv_style_set_radius(&style, LV_STATE_DEFAULT, 5);
    lv_style_set_bg_opa(&style, LV_STATE_DEFAULT, LV_OPA_COVER);
    lv_style_set_bg_color(&style, LV_STATE_DEFAULT, LV_COLOR_SILVER);
```

(continues on next page)

(continued from previous page)

```
/*Set different background color in pressed state*/
lv_style_set_bg_color(&style, LV_STATE_PRESSED, LV_COLOR_GRAY);

/*Set different transition time in default and pressed state
    *fast press, slower revert to default*/
lv_style_set_transition_time(&style, LV_STATE_DEFAULT, 500);
lv_style_set_transition_time(&style, LV_STATE_PRESSED, 200);

/*Small delay to make transition more visible*/
lv_style_set_transition_delay(&style, LV_STATE_DEFAULT, 100);


/*Add `bg_color` to transitioned properties*/
lv_style_set_transition_prop_1(&style, LV_STATE_DEFAULT, LV_STYLE_BG_COLOR);

/*Create an object with the new style*/
lv_obj_t * obj = lv_obj_create(lv_scr_act(), NULL);
lv_obj_add_style(obj, LV_OBJ_PART_MAIN, &style);
lv_obj_align(obj, NULL, LV_ALIGN_CENTER, 0, 0);
}
```

## Scale properties

Auxiliary properties for scale-like elements. Scales have a normal and end region. As the name implies the end region is the end of the scale where can be critical values or inactive values. The normal region is before the end region. Both regions could have different properties.

- scale\_grad\_color (lv\_color\_t): In normal region make gradient to this color on the scale lines.
- $scale\_end\_color$  ( $lv\_color\_t$ ): Color of the scale lines in the end region.
- scale\_width (lv style int t): Width of the scale. Default value: LV DPI / 8.
- scale\_border\_width (lv\_style\_int\_t): Width of a border drawn on the outer side of the scale in the normal region.
- scale\_end\_border\_width (lv\_style\_int\_t): Width of a border drawn on the outer side of the scale in the end region.
- scale\_end\_line\_width (lv\_style\_int\_t): Width of a scale lines in the end region.

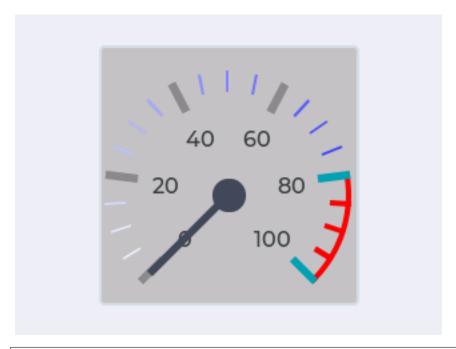

```
#include "../../lv_examples.h"
* Using the scale style properties
void lv_ex_style_11(void)
    static lv_style_t style;
    lv style init(&style);
    /*Set a background color and a radius*/
    lv_style_set_radius(&style, LV_STATE_DEFAULT, 5);
    lv_style_set_bg_opa(&style, LV_STATE_DEFAULT, LV_OPA_COVER);
    lv_style_set_bg_color(&style, LV_STATE_DEFAULT, LV_COLOR_SILVER);
   /*Set some paddings*/
   lv style set pad inner(&style, LV STATE DEFAULT, 20);
    lv_style_set_pad_top(&style, LV_STATE_DEFAULT, 20);
    lv_style_set_pad_left(&style, LV_STATE_DEFAULT, 5);
    lv_style_set_pad_right(&style, LV_STATE_DEFAULT, 5);
    lv style set scale end color(&style, LV STATE DEFAULT, LV COLOR RED);
    lv_style_set_line_color(&style, LV_STATE_DEFAULT, LV_COLOR_WHITE);
    lv_style_set_scale_grad_color(&style, LV_STATE_DEFAULT, LV_COLOR_BLUE);
    lv_style_set_line_width(&style, LV_STATE_DEFAULT, 2);
    lv_style_set_scale_end_line_width(&style, LV_STATE_DEFAULT, 4);
   lv_style_set_scale_end_border_width(&style, LV_STATE_DEFAULT, 4);
   /*Gauge has a needle but for simplicity its style is not initialized here*/
   /*Create an object with the new style*/
   lv_obj_t * obj = lv_gauge_create(lv_scr_act(), NULL);
    lv_obj_add_style(obj, LV_GAUGE_PART_MAIN, &style);
    lv_obj_align(obj, NULL, LV_ALIGN_CENTER, 0, 0);
}
```

(continues on next page)

(continued from previous page)

It the documentation of the widgets you will see sentences like "The widget use the typical background properties". The "typical background" properties are:

- Background
- Border
- Outline
- Shadow
- Pattern
- Value

# 4.4.10 Themes

Themes are a collection of styles. There is always an active theme whose styles are automatically applied when an object is created. It gives a default appearance to UI which can be modified by adding further styles.

The default theme is set in  $lv\_conf.h$  with  $lv\_THEME\_...$  defines. Every theme has the following properties

- · primary color
- secondary color
- small font
- normal font
- subtitle font
- title font
- flags (specific to the given theme)

It up to the theme how to use these properties.

There are 3 built-in themes:

- empty: no default styles are added
- material: an impressive, modern theme mono: simple black and white theme for monochrome displays
- template: a very simple theme which can be copied to create a custom theme

# **4.4.11 Example**

# Styling a button



```
#include "../../lv examples.h"
* Create styles from scratch for buttons.
void lv ex get started 2(void)
    static lv_style_t style_btn;
    static lv_style_t style_btn_red;
    /*Create a simple button style*/
   lv_style_init(&style_btn);
    lv style set radius(&style btn, LV STATE DEFAULT, 10);
   lv style set bg opa(&style btn, LV STATE DEFAULT, LV OPA COVER);
   lv style set bg color(&style btn, LV STATE DEFAULT, LV COLOR SILVER);
    lv_style_set_bg_grad_color(&style_btn, LV_STATE_DEFAULT, LV_COLOR_GRAY);
   lv style set bg grad dir(&style btn, LV STATE DEFAULT, LV GRAD DIR VER);
   /*Swap the colors in pressed state*/
   lv style set bg color(&style btn, LV STATE PRESSED, LV COLOR GRAY);
    lv style set bg grad color(&style btn, LV STATE PRESSED, LV COLOR SILVER);
   /*Add a border*/
   lv style set border color(&style btn, LV STATE DEFAULT, LV COLOR WHITE);
    lv_style_set_border_opa(&style_btn, LV_STATE_DEFAULT, LV_OPA_70);
    lv style set border width(&style btn, LV STATE DEFAULT, 2);
   /*Different border color in focused state*/
    lv style set border color(&style btn, LV STATE FOCUSED, LV COLOR BLUE);
    lv_style_set_border_color(&style_btn, LV_STATE_FOCUSED | LV_STATE_PRESSED, LV_
→COLOR NAVY);
```

(continues on next page)

(continued from previous page)

```
/*Set the text style*/
   lv_style_set_text_color(&style_btn, LV_STATE_DEFAULT, LV_COLOR_WHITE);
   /*Make the button smaller when pressed*/
   lv style set transform height(&style btn, LV STATE PRESSED, -5);
   lv_style_set_transform_width(&style_btn, LV_STATE_PRESSED, -10);
   /*Add a transition to the size change*/
   static lv anim path t path;
   lv_anim_path_init(&path);
   lv anim path set cb(&path, lv anim path overshoot);
   lv_style_set_transition_prop_1(&style_btn, LV_STATE_DEFAULT, LV_STYLE_TRANSFORM_
→HEIGHT);
   lv_style_set_transition_prop_2(&style_btn, LV_STATE_DEFAULT, LV_STYLE_TRANSFORM_
→WIDTH);
   lv style set transition time(&style btn, LV STATE DEFAULT, 300);
   lv_style_set_transition_path(&style_btn, LV_STATE_DEFAULT, &path);
   /*Create a red style. Change only some colors.*/
   lv style init(&style btn red);
   lv style set bg color(&style btn red, LV_STATE_DEFAULT, LV_COLOR_RED);
   lv style set bg grad color(&style btn red, LV STATE DEFAULT, LV COLOR MAROON);
   lv style set bg color(&style btn red, LV STATE PRESSED, LV COLOR MAROON);
   lv style set bg grad color(&style btn red, LV STATE PRESSED, LV COLOR RED);
   lv_style_set_text_color(&style_btn_red, LV_STATE_DEFAULT, LV_COLOR_WHITE);
   /*Create buttons and use the new styles*/
   lv obj t * btn = lv btn create(lv scr act(), NULL);
                                                         /*Add a button the
→current screen*/
   lv obj set pos(btn, 10, 10);
                                                         /*Set its position*/
   lv_obj_set_size(btn, 120, 50);
                                                         /*Set its size*/
   lv_obj_reset_style_list(btn, LV_BTN_PART_MAIN);
                                                         /*Remove the styles
→coming from the theme*/
   lv obj add style(btn, LV BTN PART MAIN, &style btn);
   lv_obj_t * label = lv_label_create(btn, NULL);
                                                        /*Add a label to the..
→button*/
   lv label set text(label, "Button");
                                                         /*Set the labels text*/
   /*Create a new button*/
   lv obj t * btn2 = lv btn create(lv scr act(), btn);
   lv_obj_set_pos(btn2, 10, 80);
   lv_obj_set_size(btn2, 120, 50);
                                                             /*Set its size*/
   →coming from the theme*/
   lv_obj_add_style(btn2, LV_BTN_PART_MAIN, &style_btn);
   lv_obj_add_style(btn2, LV_BTN_PART_MAIN, &style_btn_red); /*Add the red style...
→on top of the current */
   lv obj set style local radius(btn2, LV BTN PART MAIN, LV STATE DEFAULT, LV RADIUS
→CIRCLE); /*Add a local style*/
   label = lv label create(btn2, NULL);
                                              /*Add a label to the button*/
   lv label set text(label, "Button 2");
                                                           /*Set the labels text*/
```

(continues on next page)

(continued from previous page)

}

# 4.5 Input devices

An input device usually means:

- Pointer-like input device like touchpad or mouse
- Keypads like a normal keyboard or simple numeric keypad
- Encoders with left/right turn and push options
- External hardware buttons which are assigned to specific points on the screen

Important: Before reading further, please read the [Porting](/porting/indev) section of Input devices

# 4.5.1 Pointers

Pointer input devices can have a cursor. (typically for mouses)

Note that the cursor object should have lv\_obj\_set\_click(cursor\_obj, false). For images, *click-ing* is disabled by default.

# 4.5.2 Keypad and encoder

You can fully control the user interface without touchpad or mouse using a keypad or encoder(s). It works similar to the TAB key on the PC to select the element in an application or a web page.

# **Groups**

The objects, you want to control with keypad or encoder, needs to be added to a *Group*. In every group, there is exactly one focused object which receives the pressed keys or the encoder actions. For example, if a *Text area* is focused and you press some letter on a keyboard, the keys will be sent and inserted into the text area. Similarly, if a *Slider* is focused and you press the left or right arrows, the slider's value will be changed.

You need to associate an input device with a group. An input device can send the keys to only one group but, a group can receive data from more than one input device too.

To create a group use  $lv\_group\_t * g = lv\_group\_create()$  and to add an object to the group use  $lv\_group\_add\_obj(g, obj)$ .

The associate a group with an input device use lv\_indev\_set\_group(indev, g), where indev is the return value of lv indev drv register()

# **Keys**

There are some predefined keys which have special meaning:

- LV\_KEY\_NEXT Focus on the next object
- LV\_KEY\_PREV Focus on the previous object
- LV\_KEY\_ENTER Triggers LV\_EVENT\_PRESSED/CLICKED/LONG\_PRESSED etc. events
- LV\_KEY\_UP Increase value or move upwards
- LV\_KEY\_RIGHT Increase value or move the the right
- LV\_KEY\_LEFT Decrease value or move the the left
- LV\_KEY\_ESC Close or exit (E.g. close a Drop down list)
- LV\_KEY\_DEL Delete (E.g. a character on the right in a Text area)
- LV\_KEY\_BACKSPACE Delete a character on the left (E.g. in a Text area)
- LV\_KEY\_HOME Go to the beginning/top (E.g. in a Text area)
- LV\_KEY\_END Go to the end (E.g. in a *Text area*))

The most important special keys are LV\_KEY\_NEXT/PREV, LV\_KEY\_ENTER and LV\_KEY\_UP/DOWN/LEFT/RIGHT. In your read\_cb function, you should translate some of your keys to these special keys to navigate in the group and interact with the selected object.

Usually, it's enough to use only  $LV\_KEY\_LEFT/RIGHT$  because most of the objects can be fully controlled with them.

With an encoder, you should use only LV\_KEY\_LEFT, LV\_KEY\_RIGHT, and LV\_KEY\_ENTER.

# Edit and navigate mode

Since keypad has plenty of keys, it's easy to navigate between the objects and edit them using the keypad. But, the encoders have a limited number of "keys" hence, difficult to navigate using the default options. *Navigate* and *Edit* are created to avoid this problem with the encoders.

In Navigate mode, the encoders LV\_KEY\_LEFT/RIGHT is translated to LV\_KEY\_NEXT/PREV. Therefore the next or previous object will be selected by turning the encoder. Pressing LV\_KEY\_ENTER will change to Edit mode.

In *Edit* mode, LV\_KEY\_NEXT/PREV is usually used to edit the object. Depending on the object's type, a short or long press of LV\_KEY\_ENTER changes back to *Navigate* mode. Usually, an object which can not be pressed (like a *Slider*) leaves *Edit* mode on short click. But with object where short click has meaning (e.g. *Button*), long press is required.

# **Styling**

If an object is focused either by clicking it via touchpad, or focused via an encoder or keypad it goes to LV\_STATE\_F0CUSED. Hence focused styles will be applied on it.

If te object goes to edit mode it goes to LV\_STATE\_FOCUSED | LV\_STATE\_EDITED state so these style properties will be shown.

For a moew detaild description read the Style section.

# 4.5.3 API

# Input device

# **Functions**

```
void _lv_indev_init(void)
```

Initialize the display input device subsystem

```
void _lv_indev_read_task(lv_task_t *task)
```

Called periodically to read the input devices

### **Parameters**

task: pointer to the task itself

```
lv_indev_t *lv_indev_get_act(void)
```

Get the currently processed input device. Can be used in action functions too.

**Return** pointer to the currently processed input device or NULL if no input device processing right now

```
lv indev type t lv indev get type(const lv indev t*indev)
```

Get the type of an input device

Return the type of the input device from lv\_hal\_indev\_type\_t (LV\_INDEV\_TYPE\_...)

### **Parameters**

• indev: pointer to an input device

```
void lv_indev_reset(lv_indev_t *indev, lv_obj_t *obj)
```

Reset one or all input devices

### **Parameters**

- indev: pointer to an input device to reset or NULL to reset all of them
- **obj**: pointer to an object which triggers the reset.

```
void lv_indev_reset_long_press(lv_indev_t *indev)
```

Reset the long press state of an input device

# **Parameters**

• indev\_proc: pointer to an input device

```
void lv_indev_enable(lv_indev_t *indev, bool en)
```

Enable or disable an input devices

### **Parameters**

• indev: pointer to an input device

• en: true: enable; false: disable

# void lv indev set cursor(lv indev t \*indev, lv obj t \*cur\_obj)

Set a cursor for a pointer input device (for LV\_INPUT\_TYPE\_POINTER and LV\_INPUT\_TYPE\_BUTTON)

### **Parameters**

- indev: pointer to an input device
- cur obj: pointer to an object to be used as cursor

# void lv indev set group(lv\_indev\_t \*indev, lv\_group\_t \*group)

Set a destination group for a keypad input device (for LV\_INDEV\_TYPE\_KEYPAD)

### **Parameters**

- indev: pointer to an input device
- group: point to a group

# void lv\_indev\_set\_button\_points(lv\_indev\_t \*indev, const lv\_point\_t points[])

Set the an array of points for LV\_INDEV\_TYPE\_BUTTON. These points will be assigned to the buttons to press a specific point on the screen

### **Parameters**

- indev: pointer to an input device
- group: point to a group

# void lv indev get point(const lv indev t \*indev, lv point t \*point)

Get the last point of an input device (for LV\_INDEV\_TYPE\_POINTER and LV\_INDEV\_TYPE\_BUTTON)

# Parameters

- indev: pointer to an input device
- point: pointer to a point to store the result

# lv\_gesture\_dir\_t lv\_indev\_get\_gesture\_dir(const lv\_indev\_t \*indev)

Get the current gesture direct

Return current gesture direct

### **Parameters**

• indev: pointer to an input device

# uint32 t lv indev get key(const lv indev t\*indev)

Get the last pressed key of an input device (for LV INDEV TYPE KEYPAD)

**Return** the last pressed key (0 on error)

### **Parameters**

• indev: pointer to an input device

# bool lv indev is dragging(const lv\_indev\_t \*indev)

Check if there is dragging with an input device or not (for LV\_INDEV\_TYPE\_POINTER and LV INDEV TYPE BUTTON)

Return true: drag is in progress

### **Parameters**

• indev: pointer to an input device

# void lv\_indev\_get\_vect(const lv\_indev\_t \*indev, lv\_point\_t \*point)

Get the vector of dragging of an input device (for LV\_INDEV\_TYPE\_POINTER and LV\_INDEV\_TYPE\_BUTTON)

### **Parameters**

- indev: pointer to an input device
- point: pointer to a point to store the vector

# lv\_res\_t lv\_indev\_finish\_drag(lv\_indev\_t \*indev)

Manually finish dragging. LV\_SIGNAL\_DRAG\_END and LV\_EVENT\_DRAG\_END will be sent.

Return LV RES INV if the object being dragged was deleted. Else LV RES OK.

### **Parameters**

• indev: pointer to an input device

# void lv indev wait release(lv indev t \*indev)

Do nothing until the next release

### **Parameters**

• indev: pointer to an input device

# lv\_obj\_t \*lv\_indev\_get\_obj\_act(void)

Gets a pointer to the currently active object in index proc functions. NULL if no object is currently being handled or if groups aren't used.

Return pointer to currently active object

# $lv\_obj\_t *lv\_indev\_search\_obj (lv\_obj\_t *obj, lv\_point\_t *point)$

Search the most top, clickable object by a point

Return pointer to the found object or NULL if there was no suitable object

### **Parameters**

- **obj**: pointer to a start object, typically the screen
- point: pointer to a point for searching the most top child

# lv\_task\_t \*lv indev get read task(lv\_disp\_t \*indev)

Get a pointer to the indev read task to modify its parameters with lv\_task\_... functions.

Return pointer to the indev read refresher task. (NULL on error)

### **Parameters**

• indev: pointer to an inout device

# **Groups**

# **Typedefs**

```
typedef uint8_t lv_key_t
typedef void (*lv_group_style_mod_cb_t)(struct _lv_group_t *, lv_style_t *)
typedef void (*lv_group_focus_cb_t)(struct _lv_group_t *)
typedef struct _lv_group_t lv_group_t
```

Groups can be used to logically hold objects so that they can be individually focused. They are NOT for laying out objects on a screen (try  $lv\_cont$  for that).

# typedef uint8\_t lv\_group\_refocus\_policy\_t

# **Enums**

```
enum [anonymous]
     Values:
     \mathbf{LV}_{-}\mathbf{KEY}_{-}\mathbf{UP}=17
     LV_KEY_DOWN = 18
     LV_KEY_RIGHT = 19
     LV_KEY_LEFT = 20
     LV_KEY_ESC = 27
     LV KEY DEL = 127
     LV_KEY_BACKSPACE = 8
     LV_KEY_ENTER = 10
     LV_KEY_NEXT = 9
     LV KEY PREV = 11
     LV_KEY_HOME = 2
     LV\_KEY\_END = 3
enum [anonymous]
     Values:
     LV\_GROUP\_REFOCUS\_POLICY\_NEXT = 0
     LV_GROUP_REFOCUS_POLICY_PREV = 1
Functions
void _lv_group_init(void)
    Init. the group module
     Remark Internal function, do not call directly.
lv_group_t *lv_group_create(void)
     Create a new object group
     Return pointer to the new object group
void lv group del(lv_group_t*group)
     Delete a group object
     Parameters
           • group: pointer to a group
void lv_group_add_obj(lv_group_t *group, lv_obj_t *obj)
     Add an object to a group
     Parameters
           • group: pointer to a group
```

• **obj**: pointer to an object to add

# void lv\_group\_remove\_obj (lv\_obj\_t \*obj)

Remove an object from its group

### **Parameters**

• obj: pointer to an object to remove

# void lv group remove all objs(lv\_group\_t\*group)

Remove all objects from a group

### **Parameters**

• group: pointer to a group

# void lv\_group\_focus\_obj (lv\_obj\_t \*obj)

Focus on an object (defocus the current)

### **Parameters**

• **obj**: pointer to an object to focus on

# void lv\_group\_focus\_next(lv\_group\_t \*group)

Focus the next object in a group (defocus the current)

### **Parameters**

• group: pointer to a group

# void lv\_group\_focus\_prev(lv\_group\_t \*group)

Focus the previous object in a group (defocus the current)

### **Parameters**

• group: pointer to a group

# void lv\_group\_focus\_freeze(lv\_group\_t \*group, bool en)

Do not let to change the focus from the current object

### **Parameters**

- group: pointer to a group
- en: true: freeze, false: release freezing (normal mode)

# lv\_res\_t lv\_group\_send\_data(lv\_group\_t \*group, uint32\_t c)

Send a control character to the focuses object of a group

Return result of focused object in group.

### **Parameters**

- **group**: pointer to a group
- C: a character (use LV KEY .. to navigate)

# void lv\_group\_set\_focus\_cb(lv\_group\_t \*group, lv\_group\_focus\_cb\_t focus\_cb)

Set a function for a group which will be called when a new object is focused

### **Parameters**

- group: pointer to a group
- focus cb: the call back function or NULL if unused

# void lv\_group\_set\_refocus\_policy(lv\_group\_t \*group, lv\_group\_refocus\_policy\_t policy)

Set whether the next or previous item in a group is focused if the currently focused obj is deleted.

### **Parameters**

```
• group: pointer to a group
```

• new: refocus policy enum

# void lv\_group\_set\_editing(lv\_group\_t \*group, bool edit)

Manually set the current mode (edit or navigate).

### **Parameters**

- group: pointer to group
- edit: true: edit mode; false: navigate mode

# void lv\_group\_set\_click\_focus(lv\_group\_t \*group, bool en)

Set the click\_focus attribute. If enabled then the object will be focused then it is clicked.

### **Parameters**

- group: pointer to group
- en: true: enable click focus

# void lv\_group\_set\_wrap(lv\_group\_t \*group, bool en)

Set whether focus next/prev will allow wrapping from first->last or last->first object.

### **Parameters**

- group: pointer to group
- en: true: wrapping enabled; false: wrapping disabled

# lv\_obj\_t \*lv\_group\_get\_focused(const lv\_group\_t \*group)

Get the focused object or NULL if there isn't one

Return pointer to the focused object

# Parameters

• group: pointer to a group

```
lv_group_user_data_t *lv_group_get_user_data(lv_group_t *group)
```

Get a pointer to the group's user data

Return pointer to the user data

# Parameters

• group: pointer to an group

# lv\_group\_focus\_cb\_t lv\_group\_get\_focus\_cb(const lv\_group\_t \*group)

Get the focus callback function of a group

Return the call back function or NULL if not set

# **Parameters**

• group: pointer to a group

# bool lv group get editing(const lv\_group\_t\*group)

Get the current mode (edit or navigate).

Return true: edit mode; false: navigate mode

# **Parameters**

• group: pointer to group

# $bool \ \textbf{lv\_group\_get\_click\_focus(const} \ \textit{lv\_group\_t*group})$

Get the click\_focus attribute.

Return true: click focus is enabled; false: disabled

### **Parameters**

• group: pointer to group

# bool lv\_group\_get\_wrap(lv\_group\_t \*group)

Get whether focus next/prev will allow wrapping from first->last or last->first object.

### **Parameters**

- group: pointer to group
- en: true: wrapping enabled; false: wrapping disabled

# struct \_lv\_group\_t

#include <lv\_group.h> Groups can be used to logically hold objects so that they can be individually focused. They are NOT for laying out objects on a screen (try lv\_cont for that).

### **Public Members**

```
lv_ll_t obj_ll
```

Linked list to store the objects in the group

# lv\_obj\_t \*\*obj focus

The object in focus

A function to call when a new object is focused (optional)

lv\_group\_user\_data\_t user\_data

### uint8 t frozen

1: can't focus to new object

# uint8\_t editing

1: Edit mode, 0: Navigate mode

# uint8 t click focus

1: If an object in a group is clicked by an indev then it will be focused

# uint8 t refocus policy

1: Focus prev if focused on deletion. 0: Focus next if focused on deletion.

### uint8 t wrap

1: Focus next/prev can wrap at end of list. 0: Focus next/prev stops at end of list.

# 4.6 Displays

**Important:** The basic concept of *display* in LVGL is explained in the [Porting](/porting/display) section. So before reading further, please read the [Porting](/porting/display) section first.

In LVGL, you can have multiple displays, each with their own driver and objects.

Creating more displays is easy: just initialize more display buffers and register another driver for every display. When you create the UI, use <code>lv\_disp\_set\_default(disp)</code> to tell the library which display to create objects on.

Why would you want multi-display support? Here are some examples:

- Have a "normal" TFT display with local UI and create "virtual" screens on VNC on demand. (You need to add your VNC driver).
- Have a large TFT display and a small monochrome display.
- Have some smaller and simple displays in a large instrument or technology.
- Have two large TFT displays: one for a customer and one for the shop assistant.

# 4.6.1 Using only one display

Using more displays can be useful, but in most cases, it's not required. Therefore, the whole concept of multi-display is completely hidden if you register only one display. By default, the lastly created (the only one) display is used as default.

lv\_scr\_act(), lv\_scr\_load(scr), lv\_layer\_top(), lv\_layer\_sys(), LV\_HOR\_RES and LV\_VER\_RES are always applied on the lastly created (default) screen. If you pass NULL as disp parameter to display related function, usually the default display will be used. E.g. lv\_disp\_trig\_activity(NULL) will trigger a user activity on the default screen. (See below in *Inactivity*).

# 4.6.2 Mirror display

To mirror the image of the display to another display, you don't need to use the multi-display support. Just transfer the buffer received in drv.flush cb to another display too.

# 4.6.3 Split image

You can create a larger display from smaller ones. You can create it as below:

- 1. Set the resolution of the displays to the large display's resolution.
- 2. In drv.flush cb, truncate and modify the area parameter for each display.
- 3. Send the buffer's content to each display with the truncated area.

# 4.6.4 Screens

Every display has each set of Screens and the object on the screens.

Be sure not to confuse displays and screens:

- **Displays** are the physical hardware drawing the pixels.
- Screens are the high-level root objects associated with a particular display. One display can have multiple screens associated with it, but not vice versa.

Screens can be considered the highest level containers which have no parent. The screen's size is always equal to its display and size their position is (0;0). Therefore, the screens coordinates can't be changed, i.e. lv\_obj\_set\_pos(), lv\_obj\_set\_size() or similar functions can't be used on screens.

A screen can be created from any object type but, the two most typical types are the *Base object* and the *Image* (to create a wallpaper).

To create a screen, use  $lv_obj_t * scr = lv_<type>_create(NULL, copy)$ . copy can be an other screen to copy it.

To load a screen, use  $lv\_scr\_load(scr)$ . To get the active screen, use  $lv\_scr\_act()$ . These functions works on the default display. If you want to to specify which display to work on, use  $lv\_disp\_get\_scr\_act(disp)$  and  $lv\_disp\_load\_scr(disp, scr)$ .

Screens can be deleted with lv\_obj\_del(scr), but ensure that you do not delete the currently loaded screen.

## **Opaque screen**

Usually, the opacity of the screen is LV OPA COVER to provide a solid background for its children.

However, in some special cases, you might want a transparent screen. For example, if you have a video player that renders video frames on a lower layer, you want to create an OSD menu on the upper layer (over the video) using LVGL.

To do this, the screen should have a style that sets body.opa or image.opa to LV\_OPA\_TRANSP (or another non-opaque value) to make the screen opaque.

Also,  $LV\_COLOR\_SCREEN\_TRANSP$  needs to be enabled. Please note that it only works with  $LV\_COLOR\_DEPTH = 32$ .

The Alpha channel of 32-bit colors will be 0 where there are no objects and will be 255 where there are solid objects.

# 4.6.5 Features of displays

# **Inactivity**

The user's inactivity is measured on each display. Every use of an *Input device* (if associated with the display) counts as an activity. To get time elapsed since the last activity, use <code>lv\_disp\_get\_inactive\_time(disp)</code>. If <code>NULL</code> is passed, the overall smallest inactivity time will be returned from all displays (not the default display).

You can manually trigger an activity using lv\_disp\_trig\_activity(disp). If disp is NULL, the default screen will be used (and not all displays).

# **4.6.6 Colors**

The color module handles all color-related functions like changing color depth, creating colors from hex code, converting between color depths, mixing colors, etc.

The following variable types are defined by the color module:

- lv\_color1\_t Store monochrome color. For compatibility, it also has R, G, B fields but they are always the same value (1 byte)
- lv\_color8\_t A structure to store R (3 bit), G (3 bit), B (2 bit) components for 8-bit colors (1 byte)
- lv\_color16\_t A structure to store R (5 bit),G (6 bit),B (5 bit) components for 16-bit colors (2 byte)
- lv\_color32\_t A structure to store R (8 bit), G (8 bit), B (8 bit) components for 24-bit colors (4 byte)
- lv\_color\_t Equal to lv\_color1/8/16/24\_t according to color depth settings
- lv\_color\_int\_t uint8\_t, uint16\_t or uint32\_t according to color depth setting. Used to build color arrays from plain numbers.
- lv\_opa\_t A simple uint8 t type to describe opacity.

The lv\_color\_t, lv\_color1\_t, lv\_color8\_t, lv\_color16\_t and lv\_color32\_t types have got four fields:

- ch.red red channel
- ch.green green channel
- ch.blue blue channel
- full red + green + blue as one number

You can set the current color depth in  $lv\_conf.h$ , by setting the LV\_COLOR\_DEPTH define to 1 (monochrome), 8, 16 or 32.

### Convert color

You can convert a color from the current color depth to another. The converter functions return with a number, so you have to use the full field:

# Swap 16 colors

You may set LV\_COLOR\_16\_SWAP in  $lv\_conf.h$  to swap the bytes of RGB565 colors. It's useful if you send the 16-bit colors via a byte-oriented interface like SPI.

As 16-bit numbers are stored in Little Endian format (lower byte on the lower address), the interface will send the lower byte first. However, displays usually need the higher byte first. A mismatch in the byte order will result in highly distorted colors.

# Create and mix colors

You can create colors with the current color depth using the LV\_COLOR\_MAKE macro. It takes 3 arguments (red, green, blue) as 8-bit numbers. For example to create light red color:  $my\_color = COLOR\_MAKE(0xFF,0x80,0x80)$ .

Colors can be created from HEX codes too:  $my\_color = lv\_color\_hex(0x288ACF)$  or  $my\_color = lv\_folro\_hex3(0x28C)$ .

Mixing two colors is possible with mixed\_color = lv\_color\_mix(color1, color2, ratio). Ration can be 0..255. 0 results fully color2, 255 result fully color1.

Colors can be created with from HSV space too using lv\_color\_hsv\_to\_rgb(hue, saturation, value). hue should be in 0..360 range, saturation and value in 0..100 range.

# **Opacity**

To describe opacity the <code>lv\_opa\_t</code> type is created as a wrapper to <code>uint8\_t</code>. Some defines are also introduced:

- LV\_OPA\_TRANSP Value: 0, means the opacity makes the color completely transparent
- LV\_OPA\_10 Value: 25, means the color covers only a little
- LV\_OPA\_20 ... OPA\_80 come logically
- LV\_OPA\_90 Value: 229, means the color near completely covers
- LV\_OPA\_COVER Value: 255, means the color completely covers

You can also use the LV OPA \* defines in lv color mix() as a ratio.

# **Built-in colors**

The color module defines the most basic colors such as:

- #FFFFFF LV\_COLOR\_WHITE
- #000000 LV COLOR BLACK
- #808080 LV COLOR GRAY
- #c0c0c0 LV COLOR SILVER
- #ff0000 LV COLOR RED
- #800000 LV COLOR MAROON
- #00ff00 LV COLOR LIME
- #008000 LV COLOR GREEN
- #808000 LV COLOR OLIVE
- #0000ff LV COLOR BLUE
- #000080 LV COLOR NAVY
- #008080 LV COLOR TEAL
- #00ffff LV\_COLOR\_CYAN
- #00ffff LV COLOR AQUA
- #800080 LV\_COLOR\_PURPLE
- #ff00ff LV COLOR MAGENTA
- #ffa500 LV\_COLOR\_ORANGE
- #ffff00 LV COLOR YELLOW

as well as LV\_COLOR\_WHITE (fully white).

# 4.6.7 API

# **Display**

### **Functions**

```
lv_obj_t *lv_disp_get_scr_act(lv_disp_t *disp)
```

Return with a pointer to the active screen

**Return** pointer to the active screen object (loaded by 'lv scr load()')

### **Parameters**

• disp: pointer to display which active screen should be get. (NULL to use the default screen)

# void lv\_disp\_load\_scr(lv\_obj\_t\*scr)

Make a screen active

### **Parameters**

• scr: pointer to a screen

# lv\_obj\_t \*lv\_disp\_get\_layer\_top(lv\_disp\_t \*disp)

Return with the top layer. (Same on every screen and it is above the normal screen layer)

Return pointer to the top layer object (transparent screen sized lv\_obj)

### **Parameters**

• disp: pointer to display which top layer should be get. (NULL to use the default screen)

# lv\_obj\_t \*lv\_disp\_get\_layer\_sys(lv\_disp\_t \*disp)

Return with the sys. layer. (Same on every screen and it is above the normal screen and the top layer)

**Return** pointer to the sys layer object (transparent screen sized lv\_obj)

### **Parameters**

• disp: pointer to display which sys. layer should be get. (NULL to use the default screen)

```
void lv disp assign screen(lv disp t*disp, lv obj t*scr)
```

Assign a screen to a display.

### Parameters

- disp: pointer to a display where to assign the screen
- scr: pointer to a screen object to assign

# uint32\_t lv\_disp\_get\_inactive\_time(const lv\_disp\_t \*disp)

Get elapsed time since last user activity on a display (e.g. click)

Return elapsed ticks (milliseconds) since the last activity

### **Parameters**

• disp: pointer to an display (NULL to get the overall smallest inactivity)

# void lv\_disp\_trig\_activity(lv\_disp\_t \*disp)

Manually trigger an activity on a display

### **Parameters**

• disp: pointer to an display (NULL to use the default display)

# lv\_task\_t \*\_lv\_disp\_get\_refr\_task(lv\_disp\_t \*disp)

Get a pointer to the screen refresher task to modify its parameters with lv task ... functions.

```
Return pointer to the display refresher task. (NULL on error)
     Parameters
            • disp: pointer to a display
static lv_obj_t *lv_scr_act(void)
     Get the active screen of the default display
     Return pointer to the active screen
static lv_obj_t *lv_layer_top(void)
     Get the top layer of the default display
     Return pointer to the top layer
static lv_obj_t *lv_layer_sys(void)
     Get the active screen of the default display
     Return pointer to the sys layer
static void lv scr load(lv_obj_t*scr)
Colors
Typedefs
typedef uint32_t lv_color_int_t
typedef lv_color32_t lv color t
Enums
enum [anonymous]
     Opacity percentages.
     Values:
     LV_OPA_TRANSP = 0
     \mathbf{LV} \mathbf{.OPA} \mathbf{.0} = 0
     LV OPA 10 = 25
     LV_0PA_20 = 51
     \mathbf{LV} \mathbf{.OPA} \mathbf{.30} = 76
     LV_0PA_40 = 102
     LV_0PA_50 = 127
     LV_0PA_60 = 153
     \mathbf{LV\_0PA\_70} = 178
     LV_0PA_80 = 204
     LV_0PA_90 = 229
     LV_0PA_100 = 255
```

LV OPA COVER =255

# **Functions**

```
static uint8_t lv_color_to1(lv_color_t color)
static uint8_t lv_color_to8(lv_color_t color)
static uint16 t lv color to16(lv color t color)
static uint32 t lv color to32(lv color t color)
static uint8_t lv_color_brightness(lv_color_t color)
     Get the brightness of a color
     Return the brightness [0..255]
     Parameters
           • color: a color
static lv_color_t lv_color_make(uint8_t r, uint8_t g, uint8_t b)
static lv color t lv color hex(uint32 t c)
static lv_color_t lv_color_hex3(uint32_t c)
lv_color_t lv_color_lighten(lv_color_t c, lv_opa_t lvl)
lv_color_t lv_color_darken(lv_color_t c, lv_opa_t lvl)
lv_color_t lv color hsv to rgb(uint16 t h, uint8 t s, uint8 t v)
     Convert a HSV color to RGB
     Return the given RGB color in RGB (with LV_COLOR_DEPTH depth)
     Parameters
           • h: hue [0..359]
           • S: saturation [0..100]
           • v: value [0..100]
lv_color_hsv_t lv_color_rgb_to_hsv(uint8_t r8, uint8_t g8, uint8_t b8)
     Convert a 32-bit RGB color to HSV
     Return the given RGB color in HSV
     Parameters
           • r8: 8-bit red
           • q8: 8-bit green
           • b8: 8-bit blue
lv\_color\_hsv\_t lv\_color\_to\_hsv(lv\_color\_t color)
     Convert a color to HSV
     Return the given color in HSV
     Parameters

    color: color

union lv_color1_t
```

```
Public Members
     uint8_t blue
     uint8_t green
     uint8 t red
     union lv_color1_t::[anonymous] ch
     uint8\_t~\textbf{full}
union lv_color8_t
     Public Members
     uint8 t blue
     uint8\_t green
     uint8\_t red
     struct lv_color8_t::[anonymous] ch
     uint8\_t full
union lv_color16_t
     Public Members
     uint16_t blue
    uint16_t green
    uint16_t red
     uint16_t green_h
     uint16_t green_l
     struct lv_color16_t::[anonymous] ch
     uint16\_t full
union lv_color32_t
     Public Members
    uint8_t blue
    uint8_t green
    uint8_t red
     uint8_t alpha
     struct lv_color32_t::[anonymous] ch
     uint32 t full
struct lv_color_hsv_t
```

### **Public Members**

```
uint16_t h
uint8_t s
uint8 t v
```

# 4.7 Fonts

In LVGL fonts are collections of bitmaps and other information required to render the images of the letters (glyph). A font is stored in a lv\_font\_t variable and can be set in style's text\_font field. For example:

The fonts have a **bpp** (bits per pixel) property. It shows how many bits are used to describe a pixel in the font. The value stored for a pixel determines the pixel's opacity. This way, with higher bpp, the edges of the letter can be smoother. The possible bpp values are 1, 2, 4 and 8 (higher value means better quality).

The bpp also affects the required memory size to store the font. For example, bpp = 4 makes the font nearly 4 times greater compared to bpp = 1.

# 4.7.1 Unicode support

LVGL supports UTF-8 encoded Unicode characters. Your editor needs to be configureed to save your code/text as UTF-8 (usually this the default) and be sure that, LV\_TXT\_ENC is set to LV\_TXT\_ENC\_UTF8 in  $lv\_conf.h.$  (This is the default value)

To test it try

```
lv_obj_t * label1 = lv_label_create(lv_scr_act(), NULL);
lv_label_set_text(label1, LV_SYMBOL_OK);
```

If all works well, a  $\checkmark$  character should be displayed.

# 4.7.2 Built-in fonts

There are several built-in fonts in different sizes, which can be enabled in  $lv\_conf.h$  by  $LV\_FONT\_...$  defines:

- LV FONT MONTSERRAT 12 12 px ASCII + built-in symbol
- LV\_FONT\_MONTSERRAT\_14 14 px ASCII + built-in symbol
- LV\_FONT\_MONTSERRAT\_16 16 px ASCII + built-in symbol
- LV FONT MONTSERRAT 18 18 px ASCII + built-in symbol
- LV FONT MONTSERRAT 20 20 px ASCII + built-in symbol
- LV FONT MONTSERRAT\_22 22 px ASCII + built-in symbol
- LV FONT MONTSERRAT 24 24 px ASCII + built-in symbol
- LV\_FONT\_MONTSERRAT\_26 26 px ASCII + built-in symbol
- LV\_FONT\_MONTSERRAT\_28 28 px ASCII + built-in symbol

- LV\_FONT\_MONTSERRAT\_30 30 px ASCII + built-in symbol
- LV\_FONT\_MONTSERRAT\_32 32 px ASCII + built-in symbol
- LV FONT MONTSERRAT 34 34 px ASCII + built-in symbol
- LV\_FONT\_MONTSERRAT\_36 36 px ASCII + built-in symbol
- LV\_FONT\_MONTSERRAT\_38 38 px ASCII + built-in symbol
- LV\_FONT\_MONTSERRAT\_40 40 px ASCII + built-in symbol
- LV\_FONT\_MONTSERRAT\_42 42 px ASCII + built-in symbol
- LV\_FONT\_MONTSERRAT\_44 44 px ASCII + built-in symbol
- LV FONT MONTSERRAT 48 48 px ASCII + built-in symbol
- LV\_FONT\_MONTSERRAT\_12\_SUBPX 12 px font with subpixel rendering
- LV FONT MONTSERRAT 28 COMPRESSED 28 px compressed font with 3 bpp
- LV\_FONT\_DEJAVU\_16\_PERSIAN\_HEBREW 16 px Hebrew, Arabic, Perisan letters and all their forms
- LV FONT SIMSUN 16 CJK 16 px 1000 most common CJK radicals
- LV\_FONT\_UNSCII\_8 8 px pixel perfect font

The built-in fonts are **global variables** with names like <code>lv\_font\_montserrat\_16</code> for 16 px hight font. To use them in a style, just add a pointer to a font variable like shown above.

The built-in fonts have bpp = 4, contains the ASCII characters and uses the Montserrat font.

In addition to the ASCII range, the following symbols are also added to the built-in fonts from the FontAwesome font.

- LV\_SYMBOL\_AUDIO
- E LV\_SYMBOL\_VIDEO
- LV\_SYMBOL\_LIST
- ✓ LV\_SYMBOL\_OK
- ★ LV\_SYMBOL\_CLOSE
- U LV\_SYMBOL\_POWER
- LV\_SYMBOL\_SETTINGS
- LV\_SYMBOL\_TRASH
- ♠ LV\_SYMBOL\_HOME
- LV\_SYMBOL\_DOWNLOAD
- LV\_SYMBOL\_DRIVE
- ∠ LV\_SYMBOL\_REFRESH
- LV\_SYMBOL\_MUTE
- ♣ LV\_SYMBOL\_VOLUME\_MID
- LV\_SYMBOL\_VOLUME\_MAX
- LV\_SYMBOL\_IMAGE
- LV\_SYMBOL\_PREV
- LV\_SYMBOL\_PLAY
- LV\_SYMBOL\_PAUSE
- LV\_SYMBOL\_STOP
- ▶ LV\_SYMBOL\_NEXT
- ▲ LV\_SYMBOL\_EJECT
- LV\_SYMBOL\_LEFT
- > LV\_SYMBOL\_RIGHT
- + LV\_SYMBOL\_PLUS
- LV\_SYMBOL\_MINUS
- LV\_SYMBOL\_EYE\_OPEN
- **№** LV\_SYMBOL\_EYE\_CLOSE

- ▲ LV\_SYMBOL\_WARNING
- ★ LV\_SYMBOL\_SHUFFLE
- ▲ LV\_SYMBOL\_UP
- LV\_SYMBOL\_DOWN
- LV\_SYMBOL\_LOOP
- LV\_SYMBOL\_DIRECTORY
- ♣ LV\_SYMBOL\_UPLOAD
- ♪ LV\_SYMBOL\_CALL
- \* LV\_SYMBOL\_CUT
- LV SYMBOL COPY
- LV\_SYMBOL\_SAVE
- LV\_SYMBOL\_CHARGE
- LV\_SYMBOL\_PASTE
- LV\_SYMBOL\_BELL
- LV\_SYMBOL\_KEYBOARD
- ◀ LV\_SYMBOL\_GPS
- LV\_SYMBOL\_FILE
- LV\_SYMBOL\_WIFI
- LV\_SYMBOL\_BATTERY\_FULL
- LV\_SYMBOL\_BATTERY\_3
- LV\_SYMBOL\_BATTERY\_2
- LV\_SYMBOL\_BATTERY\_1
- □ LV\_SYMBOL\_BATTERY\_EMPTY
- ◆ LV\_SYMBOL\_USB
- LV\_SYMBOL\_BACKSPACE
- LV\_SYMBOL\_SD\_CARD
- ← LV\_SYMBOL\_NEW\_LINE

The symbols can be used as:

lv\_label\_set\_text(my\_label, LV\_SYMBOL\_OK);

Or with together with strings:

lv label set text(my label, LV SYMBOL OK "Apply");

Or more symbols together:

lv\_label\_set\_text(my\_label, LV\_SYMBOL\_OK LV\_SYMBOL\_WIFI LV\_SYMBOL\_PLAY);

# 4.7.3 Special features

# **Bidirectional support**

Most of the languages use Left-to-Right (LTR for short) writing direction, however some languages (such as Hebrew, Persian or Arabic) uses Right-to-Left (RTL for short) direction.

LVGL not only supports RTL texts but supports mixed (a.k.a. bidirectional, BiDi) text rendering too. Some examples:

# The names of these states in Arabic are الكويت and الكويت respectively.

# in Arabic. مفتاح معايير الويب! The title is

The BiDi support can be enabled by LV\_USE\_BIDI in lv\_conf.h

All texts have a base direction (LTR or RTL) which determines some rendering rules and the default alignment of the text (Left or Right). However, in LVGL, base direction is applied not only for labels. It's a general property which can be set for every object. If unset then it will be inherited from the parent. So it's enough to set the base direction of the screen and every object will inherit it.

The default base direction of screen can be set by LV\_BIDI\_BASE\_DIR\_DEF in *lv\_conf.h* and other objects inherit the base direction from their parent.

To set an object's base direction use <code>lv\_obj\_set\_base\_dir(obj, base\_dir)</code>. The possible base direction are:

- LV\_BIDI\_DIR\_LTR: Left to Right base direction
- LV BIDI DIR RTL: Right to Left base direction
- LV BIDI DIR AUTO: Auto detect base direction
- LV\_BIDI\_DIR\_INHERIT: Inherit the base direction from the parent (default for non-screen objects)

This list summarizes the effect of RTL base direction on objects:

- Create objects by default on the right
- lv tabview: displays tabs from right to left
- lv checkbox: Show the box on the right
- lv btnmatrix: Show buttons from right to left
- lv\_list: Show the icon on the right
- lv dropdown: Align the options to the right
- The texts in lv\_table, lv\_btnmatrix, lv\_keyboard, lv\_tabview, lv\_dropdown, lv\_roller are "BiDi processed" to be displayed correctly

### Arabic and Persian support

There are some special rules to display Arabic and Persian characters: the *form* of the character depends on their position in the text. A different form of the same letter needs to be used if it isolated, start, middle or end position. Besides these some conjunction rules also should be taken into account.

LVGL supports to apply these rules if LV\_USE\_ARABIC\_PERSIAN\_CHARS is enabled.

However, there some limitations:

- Only displaying texts is supported (e.g. on labels), text inputs (e.g. text area) doesn't support this feature
- Static text (i.e. const) are not processed. E.g. texts set by lv\_label\_set\_text() will "Arabic processed" but lv\_lable\_set\_text\_static() won't.
- Text get functions (e.g. lv\_label\_get\_text()) will return the processed text.

### Subpixel rendering

Subpixel rendering means to triple the horizontal resolution by rendering on Red, Green and Blue channel instead of pixel level. It takes advantage of the position of physical color channels of each pixel. It results in higher quality letter anti-aliasing. Lear more here.

Subpixel rendering requires to generate the fonts with special settings:

- In the online converter tick the Subpixel box
- In the command line tool use --lcd flag. Note that the generated font needs about 3 times more memory.

Subpixel rendering works only if the color channels of the pixels have a horizontal layout. That is the R, G, B channels are next each other and not above each other. The order of color channels also needs to match with the library settings. By default the LVGL assumes RGB order, however it can be swapped by setting LV\_SUBPX\_BGR 1 in  $lv\_conf.h.$ 

# **Compress fonts**

The bitmaps of the fonts can be compressed by

- ticking the  ${\tt Compressed}$  check box in the online converter
- not passing --no-compress flag to the offline converter (applies compression by default)

The compression is more effective with larger fonts and higher bpp. However, it's about 30% slower to render the compressed fonts. Therefore it's recommended to compress only the largest fonts of user interface, because

- they need the most memory
- they can be compressed better
- and probably they are used less frequently then the medium sized fonts. (so performance cost is smaller)

# 4.7.4 Add new font

There are several ways to add a new font to your project:

- 1. The simplest method is to use the Online font converter. Just set the parameters, click the *Convert* button, copy the font to your project and use it. Be sure to carefully read the steps provided on that site or you will get an error while converting.
- 2. Use the Offline font converter. (Requires Node.js to be installed)
- 3. If you want to create something like the built-in fonts (Roboto font and symbols) but in different size and/or ranges, you can use the built\_in\_font\_gen.py script in lvgl/scripts/built in font folder. (It requires Python and lv font conv to be installed)

To declare the font in a file, use  $LV_FONT_DECLARE(my_font_name)$ .

To make the fonts globally available (like the builtin fonts), add them to  $LV_FONT_CUSTOM_DECLARE$  in  $lv\_conf.h.$ 

# 4.7.5 Add new symbols

The built-in symbols are created from FontAwesome font.

- 1. Search symbol on https://fontawesome.com. For example the USB symbol. Copy it's Unicode ID which is 0xf287 in this case.
- 2. Open the Online font converter. Add Add FontAwesome.woff. .
- 3. Set the parameters such as Name, Size, BPP. You'll use this name to declare and use the font in your code.
- 4. Add the Unicode ID of the symbol to the range field. E.g.  $0 \times f287$  for the USB symbol. More symbols can be enumerated with ,.
- 5. Convert the font and copy it to your project. Make sure to compile the .c file of your font.
- 6. Declare the font using extern lv\_font\_t my\_font\_name; or simply LV\_FONT\_DECLARE(my\_font\_name);.

### Using the symbol

- 1. Convert the Unicode value to UTF8. You can do it e.g on this site. For 0xf287 the Hex UTF-8 bytes are EF 8A 87.
- 2. Create a define from the UTF8 values: #define MY USB SYMBOL "\xEF\x8A\x87"
- 3. Create a label and set the text. Eg. lv label set text(label, MY USB SYMBOL)

Note - lv\_label\_set\_text(label, MY\_USB\_SYMBOL) searches for this symbol in the font defined in style.text.font properties. To use the symbol you may need to change it. Eg style.text.font = my\_font\_name

# 4.7.6 Add a new font engine

LVGL's font interface is designed to be very flexible. You don't need to use LVGL's internal font engine but, you can add your own. For example, use FreeType to real-time render glyphs from TTF fonts or use an external flash to store the font's bitmap and read them when the library needs them.

A raedy to use FreeType can be found in ly freetype repository.

To do this a custom lv\_font\_t variable needs to be created:

```
/*Describe the properties of a font*/
lv font t my font;
my_font.get_glyph_dsc = my_get_glyph_dsc_cb;
                                                  /*Set a callback to get info...
→about gylphs*/
my font.get glyph bitmap = my get glyph bitmap cb; /*Set a callback to get bitmap of,
→a glyp*/
my_font.line_height = height;
                                                   /*The real line height where any...
→text fits*/
my_font.base_line = base line;
                                                   /*Base line measured from the top.
→of line height*/
my_font.dsc = something_required;
                                                   /*Store any implementation...
→specific data here*/
my font.user data = user data;
                                                   /*Optionally some extra user...
⊶data*/
. . .
/* Get info about glyph of `unicode letter` in `font` font.
* Store the result in `dsc_out`.
* The next letter (`unicode_letter_next`) might be used to calculate the width
→required by this glyph (kerning)
bool my get glyph dsc cb(const lv font t * font, lv font glyph dsc t * dsc out,...
→uint32_t unicode_letter, uint32_t unicode_letter_next)
   /*Your code here*/
    /* Store the result.
    * For example ...
   dsc_out->adv_w = 12;
                              /*Horizontal space required by the glyph in [px]*/
   dsc_out->box_h = 8;
                              /*Height of the bitmap in [px]*/
   dsc_out->box_w = 6;
                              /*Width of the bitmap in [px]*/
                              /*X offset of the bitmap in [pf]*/
   dsc_out->ofs_x = 0;
                              /*Y offset of the bitmap measured from the as line*/
   dsc_out->ofs_y = 3;
   dsc out->bpp = 2;
                               /*Bits per pixel: 1/2/4/8*/
                               /*true: glyph found; false: glyph was not found*/
    return true;
}
/* Get the bitmap of `unicode letter` from `font`. */
const uint8_t * my_get_glyph_bitmap_cb(const lv_font_t * font, uint32_t unicode_
→letter)
    /* Your code here */
   /* The bitmap should be a continuous bitstream where
    * each pixel is represented by `bpp` bits */
    return bitmap;
                    /*Or NULL if not found*/
}
```

# 4.8 Images

An image can be a file or variable which stores the bitmap itself and some metadata.

# 4.8.1 Store images

You can store images in two places

- as a variable in the internal memory (RAM or ROM)
- as a file

### **Variables**

The images stored internally in a variable is composed mainly of an <code>lv\_img\_dsc\_t</code> structure with the following fields:

- header
  - cf Color format. See below
  - w width in pixels ( $\leq 2048$ )
  - -h height in pixels ( $\leq 2048$ )
  - always zero 3 bits which need to be always zero
  - reserved reserved for future use
- data pointer to an array where the image itself is stored
- data\_size length of data in bytes

These are usually stored within a project as C files. They are linked into the resulting executable like any other constant data.

### **Files**

To deal with files you need to add a *Drive* to LVGL. In short, a *Drive* is a collection of functions (*open, read, close*, etc.) registered in LVGL to make file operations. You can add an interface to a standard file system (FAT32 on SD card) or you create your simple file system to read data from an SPI Flash memory. In every case, a *Drive* is just an abstraction to read and/or write data to a memory. See the *File system* section to learn more.

Images stored as files are not linked into the resulting executable, and must be read to RAM before being drawn. As a result, they are not as resource-friendly as variable images. However, they are easier to replace without needing to recompile the main program.

# 4.8.2 Color formats

Various built-in color formats are supported:

- LV\_IMG\_CF\_TRUE\_COLOR Simply stores the RGB colors (in whatever color depth LVGL is configured for).
- LV\_IMG\_CF\_TRUE\_COLOR\_ALPHA Like LV\_IMG\_CF\_TRUE\_COLOR but it also adds an alpha (transparency) byte for every pixel.
- LV\_IMG\_CF\_TRUE\_COLOR\_CHROMA\_KEYED Like LV\_IMG\_CF\_TRUE\_COLOR but if a pixel has LV\_COLOR\_TRANSP (set in *lv\_conf.h*) color the pixel will be transparent.
- LV\_IMG\_CF\_INDEXED\_1/2/4/8BIT Uses a palette with 2, 4, 16 or 256 colors and stores each pixel in 1, 2, 4 or 8 bits.

• LV\_IMG\_CF\_ALPHA\_1/2/4/8BIT Only stores the Alpha value on 1, 2, 4 or 8 bits. The pixels take the color of style.image.color and the set opacity. The source image has to be an alpha channel. This is ideal for bitmaps similar to fonts (where the whole image is one color but you'd like to be able to change it).

The bytes of the LV IMG CF TRUE COLOR images are stored in the following order.

For 32-bit color depth:

- Byte 0: Blue
- Byte 1: Green
- Byte 2: Red
- Byte 3: Alpha

For 16-bit color depth:

- Byte 0: Green 3 lower bit, Blue 5 bit
- Byte 1: Red 5 bit, Green 3 higher bit
- Byte 2: Alpha byte (only with LV\_IMG\_CF\_TRUE\_COLOR\_ALPHA)

For 8-bit color depth:

- Byte 0: Red 3 bit, Green 3 bit, Blue 2 bit
- Byte 2: Alpha byte (only with LV\_IMG\_CF\_TRUE\_COLOR\_ALPHA)

You can store images in a *Raw* format to indicate that, it's not a built-in color format and an external *Image* decoder needs to be used to decode the image.

- LV\_IMG\_CF\_RAW Indicates a basic raw image (e.g. a PNG or JPG image).
- LV\_IMG\_CF\_RAW\_ALPHA Indicates that the image has alpha and an alpha byte is added for every pixel.
- LV\_IMG\_CF\_RAW\_CHROME\_KEYED Indicates that the image is chrome keyed as described in LV\_IMG\_CF\_TRUE\_COLOR\_CHROMA\_KEYED above.

# 4.8.3 Add and use images

You can add images to LVGL in two ways:

- using the online converter
- manually create images

### Online converter

The online Image converter is available here: https://lvgl.io/tools/imageconverter

Adding an image to LVGL via online converter is easy.

- 1. You need to select a BMP, PNG or JPG image first.
- 2. Give the image a name that will be used within LVGL.
- 3. Select the Color format.

- 4. Select the type of image you want. Choosing a binary will generate a .bin file that must be stored separately and read using the *file support*. Choosing a variable will generate a standard C file that can be linked into your project.
- 5. Hit the *Convert* button. Once the conversion is finished, your browser will automatically download the resulting file.

In the converter C arrays (variables), the bitmaps for all the color depths (1, 8, 16 or 32) are included in the C file, but only the color depth that matches LV\_COLOR\_DEPTH in  $lv\_conf.h$  will actually be linked into the resulting executable.

In case of binary files, you need to specify the color format you want:

- RGB332 for 8-bit color depth
- RGB565 for 16-bit color depth
- RGB565 Swap for 16-bit color depth (two bytes are swapped)
- RGB888 for 32-bit color depth

### Manually create an image

If you are generating an image at run-time, you can craft an image variable to display it using LVGL. For example:

```
uint8_t my_img_data[] = {0x00, 0x01, 0x02, ...};

static lv_img_dsc_t my_img_dsc = {
    .header.always_zero = 0,
    .header.w = 80,
    .header.h = 60,
    .data_size = 80 * 60 * LV_COLOR_DEPTH / 8,
    .header.cf = LV_IMG_CF_TRUE_COLOR,
    .data = my_img_data,
};
```

If the color format is LV\_IMG\_CF\_TRUE\_COLOR\_ALPHA you can set data\_size like 80 \* 60 \* LV IMG PX SIZE ALPHA BYTE.

Another (possibly simpler) option to create and display an image at run-time is to use the Canvas object.

# Use images

The simplest way to use an image in LVGL is to display it with an  $lv\_img$  object:

```
lv_obj_t * icon = lv_img_create(lv_scr_act(), NULL);

/*From variable*/
lv_img_set_src(icon, &my_icon_dsc);

/*From file*/
lv_img_set_src(icon, "S:my_icon.bin");
```

If the image was converted with the online converter, you should use LV\_IMG\_DECLARE(my\_icon\_dsc) to declare the image in the file where you want to use it.

# 4.8.4 Image decoder

As you can see in the *Color formats* section, LVGL supports several built-in image formats. In many cases, these will be all you need. LVGL doesn't directly support, however, generic image formats like PNG or JPG.

To handle non-built-in image formats, you need to use external libraries and attach them to LVGL via the *Image decoder* interface.

The image decoder consists of 4 callbacks:

- **info** get some basic info about the image (width, height and color format).
- open open the image: either store the decoded image or set it to NULL to indicate the image can be read line-by-line.
- read if open didn't fully open the image this function should give some decoded data (max 1 line) from a given position.
- **close** close the opened image, free the allocated resources.

You can add any number of image decoders. When an image needs to be drawn, the library will try all the registered image decoder until finding one which can open the image, i.e. knowing that format.

The LV\_IMG\_CF\_TRUE\_COLOR\_..., LV\_IMG\_INDEXED\_... and LV\_IMG\_ALPHA\_... formats (essentially, all non-RAW formats) are understood by the built-in decoder.

### **Custom image formats**

The easiest way to create a custom image is to use the online image converter and set Raw, Raw with alpha or Raw with chrome keyed format. It will just take every byte of the binary file you uploaded and write it as the image "bitmap". You then need to attach an image decoder that will parse that bitmap and generate the real, renderable bitmap.

header.cf will be LV\_IMG\_CF\_RAW, LV\_IMG\_CF\_RAW\_ALPHA or LV\_IMG\_CF\_RAW\_CHROME\_KEYED accordingly. You should choose the correct format according to your needs: fully opaque image, use alpha channel or use chroma keying.

After decoding, the raw formats are considered  $True\ color$  by the library. In other words, the image decoder must decode the Raw images to  $True\ color$  according to the format described in [#color-formats](Color formats) section.

If you want to create a custom image, you should use LV\_IMG\_CF\_USER\_ENCODED\_0..7 color formats. However, the library can draw the images only in *True color* format (or *Raw* but finally it's supposed to be in *True color* format). So the LV\_IMG\_CF\_USER\_ENCODED\_... formats are not known by the library, therefore, they should be decoded to one of the known formats from [#color-formats](Color formats) section. It's possible to decode the image to a non-true color format first, for example, LV\_IMG\_INDEXED\_4BITS, and then call the built-in decoder functions to convert it to *True color*.

With *User encoded* formats, the color format in the open function (dsc->header.cf) should be changed according to the new format.

# Register an image decoder

Here's an example of getting LVGL to work with PNG images.

First, you need to create a new image decoder and set some functions to open/close the PNG files. It should looks like this:

```
/*Create a new decoder and register functions */
lv img decoder t * dec = lv img decoder create();
lv_img_decoder_set_info_cb(dec, decoder_info);
lv_img_decoder_set_open_cb(dec, decoder_open);
lv img decoder set close cb(dec, decoder close);
* Get info about a PNG image
* @param decoder pointer to the decoder where this function belongs
* @param src can be file name or pointer to a C array
* @param header store the info here
* @return LV RES OK: no error; LV RES INV: can't get the info
static lv_res_t decoder_info(lv_img_decoder_t * decoder, const void * src, lv_img_
→header t * header)
 /*Check whether the type `src` is known by the decoder*/
 if(is png(src) == false) return LV RES INV;
 /* Read the PNG header and find `width` and `height` */
 header->cf = LV IMG CF RAW ALPHA;
 header->w = width:
 header->h = height;
}
* Open a PNG image and return the decided image
* @param decoder pointer to the decoder where this function belongs
* @param dsc pointer to a descriptor which describes this decoding session
* @return LV_RES_OK: no error; LV_RES_INV: can't get the info
static lv_res_t decoder_open(lv_img_decoder_t * decoder, lv_img_decoder_dsc_t * dsc)
 /*Check whether the type `src` is known by the decoder*/
 if(is_png(src) == false) return LV_RES_INV;
 /*Decode and store the image. If `dsc->img data` is `NULL`, the `read line`..
→function will be called to get the image data line-by-line*/
 dsc->img_data = my_png_decoder(src);
 /*Change the color format if required. For PNG usually 'Raw' is fine*/
 dsc->header.cf = LV_IMG_CF_...
 /*Call a built in decoder function if required. It's not required if`my png
→decoder` opened the image in true color format.*/
 lv res t res = lv img decoder built in open(decoder, dsc);
 return res;
}
* Decode `len` pixels starting from the given `x`, `y` coordinates and store them in
→ `buf`.
* Required only if the "open" function can't open the whole decoded pixel array...
→(dsc->img_data == NULL)
                                                                      (continues on next page)
```

(continued from previous page)

```
* @param decoder pointer to the decoder the function associated with
 * @param dsc pointer to decoder descriptor
* @param x start x coordinate
* @param y start y coordinate
* @param len number of pixels to decode
* @param buf a buffer to store the decoded pixels
* @return LV_RES_OK: ok; LV_RES_INV: failed
lv_res_t decoder_built_in_read_line(lv_img_decoder_t * decoder, lv_img_decoder_dsc_t_
→* dsc, lv_coord_t x,
                                                  lv_coord_t y, lv_coord_t len, uint8_
\rightarrowt * buf)
  /*With PNG it's usually not required*/
  /*Copy `len` pixels from `x` and `y` coordinates in True color format to `buf` */
}
* Free the allocated resources
* @param decoder pointer to the decoder where this function belongs
* @param dsc pointer to a descriptor which describes this decoding session
static void decoder close(lv img decoder t * decoder, lv img decoder dsc t * dsc)
 /*Free all allocated data*/
 /*Call the built-in close function if the built-in open/read line was used*/
 lv_img_decoder_built_in_close(decoder, dsc);
```

So in summary:

- In decoder info, you should collect some basic information about the image and store it in header.
- In decoder\_open, you should try to open the image source pointed by dsc->src. Its type is already in dsc->src\_type == LV\_IMG\_SRC\_FILE/VARIABLE. If this format/type is not supported by the decoder, return LV\_RES\_INV. However, if you can open the image, a pointer to the decoded *True color* image should be set in dsc->img\_data. If the format is known but, you don't want to decode while image (e.g. no memory for it) set dsc->img\_data = NULL to call read\_line to get the pixels.
- In decoder close you should free all the allocated resources.
- decoder\_read is optional. Decoding the whole image requires extra memory and some computational overhead. However, if can decode one line of the image without decoding the whole image, you can save memory and time. To indicate that, the *line read* function should be used, set dsc->img\_data = NULL in the open function.

# Manually use an image decoder

LVGL will use the registered image decoder automatically if you try and draw a raw image (i.e. using the lv\_img object) but you can use them manually too. Create a lv\_img\_decoder\_dsc\_t variable to describe the decoding session and call lv img decoder open(), lv img decoder open().

```
lv_res_t res;
lv_img_decoder_dsc_t dsc;
res = lv_img_decoder_open(&dsc, &my_img_dsc, &lv_style_plain);

if(res == LV_RES_OK) {
   /*Do something with `dsc->img_data`*/
   lv_img_decoder_close(&dsc);
}
```

### 4.8.5 Image caching

Sometimes it takes a lot of time to open an image. Continuously decoding a PNG image or loading images from a slow external memory would be inefficient and detrimental to the user experience.

Therefore, LVGL caches a given number of images. Caching means some images will be left open, hence LVGL can quickly access them from dsc->img data instead of needing to decode them again.

Of course, caching images is resource-intensive as it uses more RAM (to store the decoded image). LVGL tries to optimize the process as much as possible (see below), but you will still need to evaluate if this would be beneficial for your platform or not. If you have a deeply embedded target which decodes small images from a relatively fast storage medium, image caching may not be worth it.

#### Cache size

The number of cache entries can be defined in LV\_IMG\_CACHE\_DEF\_SIZE in *lv\_conf.h*. The default value is 1 so only the most recently used image will be left open.

The size of the cache can be changed at run-time with lv img cache set size(entry num).

### Value of images

When you use more images than cache entries, LVGL can't cache all of the images. Instead, the library will close one of the cached images (to free space).

To decide which image to close, LVGL uses a measurement it previously made of how long it took to open the image. Cache entries that hold slower-to-open images are considered more valuable and are kept in the cache as long as possible.

If you want or need to override LVGL's measurement, you can manually set the *time to open* value in the decoder open function in dsc->time\_to\_open = time\_ms to give a higher or lower value. (Leave it unchanged to let LVGL set it.)

Every cache entry has a "life" value. Every time an image opening happens through the cache, the life of all entries are decreased to make them older. When a cached image is used, its life is increased by the time to open value to make it more alive.

If there is no more space in the cache, always the entry with the smallest life will be closed.

#### Memory usage

Note that, the cached image might continuously consume memory. For example, if 3 PNG images are cached, they will consume memory while they are opened.

Therefore, it's the user's responsibility to be sure there is enough RAM to cache, even the largest images at the same time.

#### Clean the cache

Let's say you have loaded a PNG image into a <code>lv\_img\_dsc\_t my\_png</code> variable and use it in an <code>lv\_img</code> object. If the image is already cached and you then change the underlying PNG file, you need to notify LVGL to cache the image again. Otherwise, there is no easy way of detecting that the underlying file changed and LVGL will still draw the old image.

To do this, use <code>lv\_img\_cache\_invalidate\_src(&my\_png)</code>. If <code>NULL</code> is passed as a parameter, the whole cache will be cleaned.

#### 4.8.6 API

#### Image decoder

### **Typedefs**

```
typedef uint8 tlv img src t
```

Get info from an image and store in the header

Return LV RES OK: info written correctly; LV RES INV: failed

#### **Parameters**

- src: the image source. Can be a pointer to a C array or a file name (Use lv\_img\_src\_get\_type to determine the type)
- header: store the info here

Open an image for decoding. Prepare it as it is required to read it later

### Parameters

- decoder: pointer to the decoder the function associated with
- dsc: pointer to decoder descriptor. src, style are already initialized in it.

Decode **len** pixels starting from the given **x**, **y** coordinates and store them in **buf**. Required only if the "open" function can't return with the whole decoded pixel array.

Return LV\_RES\_OK: ok; LV\_RES\_INV: failed

#### **Parameters**

- decoder: pointer to the decoder the function associated with
- dsc: pointer to decoder descriptor
- X: start x coordinate

- y: start y coordinate
- len: number of pixels to decode
- buf: a buffer to store the decoded pixels

### 

Close the pending decoding. Free resources etc.

#### **Parameters**

- decoder: pointer to the decoder the function associated with
- dsc: pointer to decoder descriptor

```
\textbf{typedef struct} \_\mathit{lv}\_\mathit{img}\_\mathit{decoder} \, \textbf{lv}\_\textbf{img}\_\textbf{decoder}\_\textbf{t}
```

```
typedef struct _lv_img_decoder_dsc lv_img_decoder_dsc_t
```

Describe an image decoding session. Stores data about the decoding

#### **Enums**

### enum [anonymous]

Source of image.

Values:

LV IMG SRC VARIABLE

LV IMG SRC FILE

Binary/C variable

LV\_IMG\_SRC\_SYMBOL

File in filesystem

LV IMG SRC UNKNOWN

 $Symbol \ (lv\_symbol\_def.h)$ 

#### **Functions**

### void \_lv\_img\_decoder\_init(void)

Initialize the image decoder module

```
ly res tlv img decoder get info(const char *src, ly img header t *header)
```

Get information about an image. Try the created image decoder one by one. Once one is able to get info that info will be used.

Return LV\_RES\_OK: success; LV\_RES\_INV: wasn't able to get info about the image

#### **Parameters**

- src: the image source. Can be 1) File name: E.g. "S:folder/img1.png" (The drivers needs to registered via lv\_fs\_add\_drv()) 2) Variable: Pointer to an lv\_img\_dsc\_t variable 3) Symbol: E.g. LV\_SYMBOL\_OK
- header: the image info will be stored here

```
lv_res_t lv_img_decoder_open(lv_img_decoder_dsc_t*dsc, const void *src, lv_color_t color)

Open an image. Try the created image decoder one by one. Once one is able to open the image that decoder is save in dsc
```

Return LV\_RES\_OK: opened the image. dsc->img\_data and dsc->header are set. LV\_RES\_INV: none of the registered image decoders were able to open the image.

#### **Parameters**

- dsc: describe a decoding session. Simply a pointer to an lv\_img\_decoder\_dsc\_t variable.
- src: the image source. Can be 1) File name: E.g. "S:folder/img1.png" (The drivers needs to registered via lv\_fs\_add\_drv()) 2) Variable: Pointer to an lv\_img\_dsc\_t variable 3) Symbol: E.g. LV\_SYMBOL\_OK
- style: the style of the image

```
lv\_res\_t lv\_img\_decoder\_read\_line(lv\_img\_decoder\_dsc\_t *dsc, lv\_coord\_t x, lv\_coord\_t y, lv\_coord\_t ten, uint8 t *buf)
```

Read a line from an opened image

Return LV\_RES\_OK: success; LV\_RES\_INV: an error occurred

#### **Parameters**

- dsc: pointer to lv\_img\_decoder\_dsc\_t used in lv\_img\_decoder\_open
- X: start X coordinate (from left)
- y: start Y coordinate (from top)
- len: number of pixels to read
- buf: store the data here

### void lv\_img\_decoder\_close(lv\_img\_decoder\_dsc\_t \*dsc)

Close a decoding session

#### **Parameters**

• dsc: pointer to lv img decoder dsc t used in lv img decoder open

### lv\_img\_decoder\_t \*lv\_img\_decoder\_create(void)

Create a new image decoder

**Return** pointer to the new image decoder

```
void lv img decoder delete(lv img decoder t*decoder)
```

Delete an image decoder

### **Parameters**

• decoder: pointer to an image decoder

Set a callback to get information about the image

#### **Parameters**

- decoder: pointer to an image decoder
- info cb: a function to collect info about an image (fill an lv img header t struct)

```
\begin{tabular}{ll} void $lv\_img\_decoder\_set\_open\_cb ($lv\_img\_decoder\_t * decoder, $lv\_img\_decoder\_open\_f\_t $ open\_cb) \end{tabular}
```

Set a callback to open an image

### **Parameters**

• decoder: pointer to an image decoder

• open cb: a function to open an image

```
\begin{tabular}{ll} void $\tt lv\_img\_decoder\_set\_read\_line\_cb(\it lv\_img\_decoder\_t & *decoder, \it lv\_img\_decoder\_read\_line\_f\_t read\_line\_cb) \\ \hline \\ & & & & & & & & & & & & & & & \\ \hline \end{tabular}
```

Set a callback to a decoded line of an image

#### **Parameters**

- decoder: pointer to an image decoder
- read\_line\_cb: a function to read a line of an image

```
\begin{tabular}{ll} void $lv\_img\_decoder\_set\_close\_cb($lv\_img\_decoder\_t *decoder, $lv\_img\_decoder\_close\_f\_t$ \\ $close\_cb) \end{tabular}
```

Set a callback to close a decoding session.  $\overline{E}$ .g. close files and free other resources.

#### **Parameters**

- decoder: pointer to an image decoder
- close cb: a function to close a decoding session

Get info about a built-in image

**Return** LV\_RES\_OK: the info is successfully stored in header; LV\_RES\_INV: unknown format or other error.

#### **Parameters**

- decoder: the decoder where this function belongs
- src: the image source: pointer to an lv\_img\_dsc\_t variable, a file path or a symbol
- header: store the image data here

```
lv\_res\_t lv\_img\_decoder\_built\_in\_open(lv\_img\_decoder\_t*decoder, lv\_img\_decoder\_dsc\_t*dsc)
```

Open a built in image

**Return** LV\_RES\_OK: the info is successfully stored in header; LV\_RES\_INV: unknown format or other error.

#### Parameters

- decoder: the decoder where this function belongs
- dsc: pointer to decoder descriptor. src, style are already initialized in it.

Decode len pixels starting from the given x, y coordinates and store them in buf. Required only if the "open" function can't return with the whole decoded pixel array.

Return LV\_RES\_OK: ok; LV\_RES\_INV: failed

#### Parameters

- decoder: pointer to the decoder the function associated with
- dsc: pointer to decoder descriptor
- X: start x coordinate
- y: start y coordinate

- len: number of pixels to decode
- buf: a buffer to store the decoded pixels

# 

Close the pending decoding. Free resources etc.

#### **Parameters**

- decoder: pointer to the decoder the function associated with
- dsc: pointer to decoder descriptor

### struct \_lv\_img\_decoder

#### **Public Members**

```
lv_img_decoder_info_f_t info_cb
lv_img_decoder_open_f_t open_cb
lv_img_decoder_read_line_f_t read_line_cb
lv_img_decoder_close_f_t close_cb
lv_img_decoder_user_data_t user_data
```

### struct lv img decoder dsc

#include < lv imq\_decoder.h > Describe an image decoding session. Stores data about the decoding

#### **Public Members**

#### lv img decoder t \*decoder

The decoder which was able to open the image source

#### const void \*src

The image source. A file path like "S:my img.png" or pointer to an lv img dsc t variable

### $lv\_color\_t$ color

Style to draw the image.

#### lv\_img\_src\_t src\_type

Type of the source: file or variable. Can be set in **open** function if required

### lv\_img\_header\_t header

Info about the opened image: color format, size, etc. MUST be set in open function

### const uint8\_t \*img\_data

Pointer to a buffer where the image's data (pixels) are stored in a decoded, plain format. MUST be set in open function

### uint32\_t time\_to\_open

How much time did it take to open the image. [ms] If not set lv\_img\_cache will measure and set the time to open

### const char \*error\_msg

A text to display instead of the image when the image can't be opened. Can be set in open function or set NULL.

#### void \*user data

Store any custom data here is required

### Image cache

#### **Functions**

### lv img cache entry t\* lv img cache open(const void \*src, lv color t color)

Open an image using the image decoder interface and cache it. The image will be left open meaning if the image decoder open callback allocated memory then it will remain. The image is closed if a new image is opened and the new image takes its place in the cache.

**Return** pointer to the cache entry or NULL if can open the image

#### **Parameters**

- src: source of the image. Path to file or pointer to an lv img dsc t variable
- style: style of the image

```
void lv img cache set size(uint16 t new slot num)
```

Set the number of images to be cached. More cached images mean more opened image at same time which might mean more memory usage. E.g. if 20 PNG or JPG images are open in the RAM they consume memory while opened in the cache.

#### **Parameters**

• new entry cnt: number of image to cache

### void lv img cache invalidate src(const void \*src)

Invalidate an image source in the cache. Useful if the image source is updated therefore it needs to be cached again.

#### **Parameters**

• src: an image source path to a file or pointer to an lv img dsc t variable.

#### struct lv\_img\_cache\_entry\_t

 $\#include < lv\_img\_cache.h >$  When loading images from the network it can take a long time to download and decode the image.

To avoid repeating this heavy load images can be cached.

#### **Public Members**

```
lv\_img\_decoder\_dsc\_t \; \mathbf{dec\_dsc}
```

Image information

#### int32 t life

Count the cache entries's life. Add time\_tio\_open to life when the entry is used. Decrement all lifes by one every in every ::lv img cache open. If life == 0 the entry can be reused

## 4.9 File system

LVGL has a 'File system' abstraction module that enables you to attach any type of file systems. The file system is identified by a drive letter. For example, if the SD card is associated with the letter 'S', a file can be reached like "S:path/to/file.txt".

### 4.9.1 Add a driver

To add a driver, lv fs drv t needs to be initialized like this:

```
lv fs drv t drv;
                                          /*Basic initialization*/
lv_fs_drv_init(&drv);
drv.letter = 'S';
                                          /*An uppercase letter to identify the drive...
drv.file size = sizeof(my file object);
                                          /*Size required to store a file object*/
drv.rddir_size = sizeof(my_dir_object);
                                          /*Size required to store a directory object...
→(used by dir_open/close/read)*/
                                          /*Callback to tell if the drive is ready to...
drv.ready cb = my ready cb;
→use */
drv.open cb = my open cb;
                                          /*Callback to open a file */
drv.close_cb = my_close_cb;
                                          /*Callback to close a file */
drv.read_cb = my_read_cb;
                                         /*Callback to read a file */
drv.write cb = my write cb;
                                         /*Callback to write a file */
drv.seek_cb = my_seek_cb;
                                         /*Callback to seek in a file (Move cursor)
→*/
drv.tell cb = my tell cb;
                                         /*Callback to tell the cursor position */
drv.trunc_cb = my_trunc_cb;
                                         /*Callback to delete a file */
drv.size_cb = my_size_cb;
                                         /*Callback to tell a file's size */
                                         /*Callback to rename a file */
drv.rename_cb = my_rename_cb;
                                         /*Callback to open directory to read its.
drv.dir open cb = my dir open cb;
→content */
drv.dir read cb = my dir read cb;
                                         /*Callback to read a directory's content */
drv.dir_close_cb = my_dir_close_cb;
                                         /*Callback to close a directory */
drv.free_space_cb = my_free_space_cb;
                                         /*Callback to tell free space on the drive_
→*/
drv.user data = my user data;
                                         /*Any custom data if required*/
lv_fs_drv_register(&drv);
                                          /*Finally register the drive*/
```

Any of the callbacks can be NULL to indicate that that operation is not supported.

As an example of how the callbacks are used, if you use  $lv_fs_open(&file, "S:/folder/file.txt", LV_FS_MODE_WR)$ , LVGL:

- 1. Verifies that a registered drive exists with the letter 'S'.
- 2. Checks if it's open\_cb is implemented (not NULL).
- 3. Calls the set open\_cb with "folder/file.txt" path.

### 4.9.2 Usage example

The example below shows how to read from a file:

```
lv_fs_file_t f;
lv_fs_res_t res;
res = lv_fs_open(&f, "S:folder/file.txt", LV_FS_MODE_RD);
if(res != LV_FS_RES_OK) my_error_handling();
uint32_t read_num;
```

4.9. File system

(continues on next page)

(continued from previous page)

```
uint8_t buf[8];
res = lv_fs_read(&f, buf, 8, &read_num);
if(res != LV_FS_RES_OK || read_num != 8) my_error_handling();
lv_fs_close(&f);
```

The mode in lv\_fs\_open can be LV\_FS\_MODE\_WR to open for write or LV\_FS\_MODE\_RD | LV\_FS\_MODE\_WR for both

This example shows how to read a directory's content. It's up to the driver how to mark the directories, but it can be a good practice to insert a '/' in front of the directory name.

```
lv_fs_dir_t dir;
lv_fs_res_t res;
res = lv fs dir open(&dir, "S:/folder");
if(res != LV_FS_RES_OK) my_error_handling();
char fn[256];
while(1) {
    res = lv_fs_dir_read(&dir, fn);
    if(res != LV FS RES OK) {
        my_error_handling();
        break:
    }
   /*fn is empty, if not more files to read*/
    if(strlen(fn) == 0) {
        break;
    printf("%s\n", fn);
}
lv_fs_dir_close(&dir);
```

### 4.9.3 Use drivers for images

*Image* objects can be opened from files too (besides variables stored in the flash).

To initialize the image, the following callbacks are required:

- open
- close
- read
- seek
- tell

### 4.9.4 API

### **Typedefs**

```
typedef uint8_t lv_fs_res_t
```

```
typedef uint8_t lv_fs_mode_t
typedef struct _lv_fs_drv_t lv_fs_drv_t
```

#### **Enums**

#### enum [anonymous]

Errors in the file system module.

Values:

 $\mathbf{LV\_FS\_RES\_0K} = 0$ 

LV\_FS\_RES\_HW\_ERR

LV\_FS\_RES\_FS\_ERR

LV\_FS\_RES\_NOT\_EX

LV\_FS\_RES\_FULL

LV\_FS\_RES\_LOCKED

LV\_FS\_RES\_DENIED

LV\_FS\_RES\_BUSY

LV\_FS\_RES\_TOUT

LV\_FS\_RES\_NOT\_IMP

LV\_FS\_RES\_OUT\_OF\_MEM

LV\_FS\_RES\_INV\_PARAM

LV\_FS\_RES\_UNKNOWN

### enum [anonymous]

Filesystem mode.

Values:

 $LV_FS_MODE_WR = 0x01$ 

 $LV_FS_MODE_RD = 0x02$ 

#### **Functions**

### void \_lv\_fs\_init(void)

Initialize the File system interface

### void lv fs drv init(lv\_fs\_drv\_t\*drv)

Initialize a file system driver with default values. It is used to surly have known values in the fields ant not memory junk. After it you can set the fields.

#### **Parameters**

• drv: pointer to driver variable to initialize

### void lv\_fs\_drv\_register(lv\_fs\_drv\_t \*drv\_p)

Add a new drive

### **Parameters**

• drv\_p: pointer to an lv\_fs\_drv\_t structure which is inited with the corresponding function pointers. The data will be copied so the variable can be local.

### lv\_fs\_drv\_t \*lv\_fs\_get\_drv(char letter)

Give a pointer to a driver from its letter

Return pointer to a driver or NULL if not found

#### **Parameters**

• letter: the driver letter

### bool lv fs is ready(char letter)

Test if a drive is ready or not. If the ready function was not initialized true will be returned.

Return true: drive is ready; false: drive is not ready

#### **Parameters**

• letter: letter of the drive

Return LV\_FS\_RES\_OK or any error from lv\_fs\_res\_t enum

#### **Parameters**

- file\_p: pointer to a *lv\_fs\_file\_t* variable
- path: path to the file beginning with the driver letter (e.g. S:/folder/file.txt)
- mode: read: FS\_MODE\_RD, write: FS\_MODE\_WR, both: FS\_MODE\_RD FS\_MODE\_WR

Close an already opened file

Return LV\_FS\_RES\_OK or any error from lv\_fs\_res\_t enum

#### **Parameters**

• file\_p: pointer to a lv\_fs\_file\_t variable

### lv\_fs\_res\_t lv\_fs\_remove(const char \*path)

Delete a file

Return LV\_FS\_RES\_OK or any error from lv\_fs\_res\_t enum

#### **Parameters**

• path: path of the file to delete

```
lv\_fs\_res\_t lv\_fs\_read ( lv\_fs\_file\_t *file\_p, void *buf, uint32_t btr, uint32_t *btr)

Read from a file
```

Return LV\_FS\_RES\_OK or any error from lv\_fs\_res\_t enum

#### **Parameters**

- file p: pointer to a lv\_fs\_file\_t variable
- buf: pointer to a buffer where the read bytes are stored
- btr: Bytes To Read
- br: the number of real read bytes (Bytes Read). NULL if unused.

```
lv_fs_res_t lv_fs_write(lv_fs_file_t *file_p, const void *buf, uint32_t btw, uint32_t *bw)
Write into a file
```

Return LV\_FS\_RES\_OK or any error from lv\_fs\_res\_t enum

#### **Parameters**

- file p: pointer to a *lv\_fs\_file\_t* variable
- buf: pointer to a buffer with the bytes to write
- btr: Bytes To Write
- br: the number of real written bytes (Bytes Written). NULL if unused.

### lv\_fs\_res\_t lv\_fs\_seek(lv\_fs\_file\_t \*file\_p, uint32\_t pos)

Set the position of the 'cursor' (read write pointer) in a file

 ${\bf Return} \ \ {\bf LV\_FS\_RES\_OK} \ \ {\bf or} \ \ {\bf any} \ \ {\bf error} \ \ {\bf from} \ \ {\bf lv\_fs\_res\_t} \ \ {\bf enum}$ 

#### **Parameters**

- file p: pointer to a *lv\_fs\_file\_t* variable
- pos: the new position expressed in bytes index (0: start of file)

Give the position of the read write pointer

Return LV FS RES OK or any error from 'fs res t'

#### **Parameters**

- file\_p: pointer to a *lv\_fs\_file\_t* variable
- pos\_p: pointer to store the position of the read write pointer

$$lv$$
 fs res t lv fs trunc( $lv$  fs file t\*file  $p$ )

Truncate the file size to the current position of the read write pointer

Return LV\_FS\_RES\_OK: no error, the file is read any error from lv\_fs\_res\_t enum

#### **Parameters**

• file p: pointer to an 'ufs file t' variable. (opened with ly fs open)

$$\mathit{lv\_fs\_res\_t} \ \mathsf{lv\_fs\_size} (\mathit{lv\_fs\_file\_t} \ *\mathit{file\_p}, \ \mathsf{uint} 32\_t \ *\mathit{size})$$

Give the size of a file bytes

Return LV FS\_RES\_OK or any error from lv\_fs\_res\_t enum

#### **Parameters**

- file p: pointer to a lv\_fs\_file\_t variable
- size: pointer to a variable to store the size

# $lv\_fs\_res\_t$ $lv\_fs\_rename(const char *oldname, const char *newname)$

Rename a file

Return LV FS RES OK or any error from 'fs res t'

### Parameters

- oldname: path to the file
- newname: path with the new name

```
lv_fs_res_t lv_fs_dir_open(lv_fs_dir_t *rddir_p, const char *path)
```

Initialize a 'fs\_dir\_t' variable for directory reading

Return LV\_FS\_RES\_OK or any error from lv\_fs\_res\_t enum

#### **Parameters**

- rddir\_p: pointer to a 'fs\_read\_dir\_t' variable
- path: path to a directory

Read the next filename form a directory. The name of the directories will begin with '/'

Return LV\_FS\_RES\_OK or any error from lv\_fs\_res\_t enum

### **Parameters**

- rddir\_p: pointer to an initialized 'fs\_rdir\_t' variable
- fn: pointer to a buffer to store the filename

Close the directory reading

Return LV\_FS\_RES\_OK or any error from lv\_fs\_res\_t enum

### **Parameters**

• rddir\_p: pointer to an initialized 'fs\_dir\_t' variable

$$lv\_fs\_res\_t$$
 lv\_fs\_free\_space(char  $letter$ , uint32\_t \* $total\_p$ , uint32\_t \* $free\_p$ )

Get the free and total size of a driver in kB

Return LV FS RES OK or any error from lv fs res t enum

#### Parameters

- letter: the driver letter
- total p: pointer to store the total size [kB]
- free\_p: pointer to store the free size [kB]

### char \*lv\_fs\_get\_letters(char \*buf)

Fill a buffer with the letters of existing drivers

Return the buffer

#### **Parameters**

• buf: buffer to store the letters ('\0' added after the last letter)

### const char \*lv\_fs\_get\_ext(const char \*fn)

Return with the extension of the filename

Return pointer to the beginning extension or empty string if no extension

#### **Parameters**

• fn: string with a filename

### char \*lv\_fs\_up(char \*path)

Step up one level

**Return** the truncated file name

#### **Parameters**

• path: pointer to a file name const char \*lv\_fs\_get\_last(const char \*path) Get the last element of a path (e.g. U:/folder/file -> file) **Return** pointer to the beginning of the last element in the path **Parameters** • buf: buffer to store the letters ('\0' added after the last letter) struct \_lv\_fs\_drv\_t **Public Members** char letter uint16 t file size uint16 t rddir size bool (\*ready\_cb)(struct \_lv\_fs\_drv\_t \*drv) lv\_fs\_res\_t (\*open\_cb)(struct \_lv\_fs\_drv\_t \*drv, void \*file\_p, const char \*path, lv fs mode t mode) lv fs res t (\*close cb)(struct lv fs drv t \*drv, void \*file p) lv\_fs\_res\_t (\*remove\_cb)(struct \_lv\_fs\_drv\_t \*drv, const char \*fn) lv\_fs\_res\_t (\*read\_cb)(struct \_lv\_fs\_drv\_t \*drv, void \*file\_p, void \*buf, uint32\_t btr,  $uint32_t *br$ lv\_fs\_res\_t (\*write\_cb)(struct \_lv\_fs\_drv\_t \*drv, void \*file\_p, const void \*buf, uint32\_t btw, uint32\_t \*bw) lv\_fs\_res\_t (\*seek\_cb)(struct \_lv\_fs\_drv\_t \*drv, void \*file\_p, uint32\_t pos) lv\_fs\_res\_t (\*tell\_cb)(struct\_lv\_fs\_drv\_t\*drv, void \*file\_p, uint32\_t \*pos\_p) lv\_fs\_res\_t (\*trunc\_cb)(struct \_lv\_fs\_drv\_t \*drv, void \*file\_p) lv\_fs\_res\_t (\*size\_cb)(struct\_lv\_fs\_drv\_t\*drv, void \*file\_p, uint32\_t\*size\_p) lv fs res t (\*rename cb)(struct lv fs drv t \*drv, const char \*oldname, const char \*newname) lv\_fs\_res\_t (\*free\_space\_cb)(struct \_lv\_fs\_drv\_t \*drv, uint32\_t \*total\_p, uint32\_t lv fs res t (\*dir open cb)(struct lv fs drv t\*drv, void \*rddir p, const char \*path) lv\_fs\_res\_t (\*dir\_read\_cb)(struct \_lv\_fs\_drv\_t \*drv, void \*rddir\_p, char \*fn)

### struct lv\_fs\_file\_t

lv\_fs\_drv\_user\_data\_t user\_data Custom file user data

4.9. File system

lv\_fs\_res\_t (\*dir\_close\_cb)(struct \_lv\_fs\_drv\_t \*drv, void \*rddir\_p)

```
void *file_d
lv_fs_drv_t *drv
struct lv_fs_dir_t

Public Members
void *dir_d
lv_fs_drv_t *drv
```

### 4.10 Animations

You can automatically change the value of a variable between a start and an end value using animations. The animation will happen by the periodical call of an "animator" function with the corresponding value parameter.

The *animator* functions has the following prototype:

```
void func(void * var, lv_anim_var_t value);
```

This prototype is compatible with the majority of the *set* function of LVGL. For example lv\_obj\_set\_x(obj, value) or lv\_obj\_set\_width(obj, value)

### 4.10.1 Create an animation

To create an animation an <code>lv\_anim\_t</code> variable has to be initialized and configured with <code>lv\_anim\_set\_...()</code> functions.

```
/* INITIALIZE AN ANIMATION
*-----*/
lv_anim_t a;
lv_anim_init(&a);

/* MANDATORY SETTINGS
*-----*/

/*Set the animator function and variable to animate*/
lv_anim_set_exec_cb(&a, btn1, (lv_anim_exec_xcb_t) lv_obj_set_x);

/*Length of the animation [ms]*/
lv_anim_set_time(&a, duration);

/*Set start and end values. E.g. 0, 150 [ms]*/
lv_anim_set_values(&a, start, end);

/* OPTIONAL SETTINGS
*------*/
```

(continues on next page)

(continued from previous page)

```
/*Time to wait before starting the animation [ms]*/
lv anim set delay(&a, delay);
/*Set path (curve). Default is linear*/
lv anim set path(&a, &path);
/*Set a callback to call when animation is ready.*/
lv_anim_set_ready_cb(&a, ready_cb);
/*Set a callback to call when animation is started (after delay).*/
lv_anim_set_start_cb(&a, start_cb);
/*Play the animation backward too with this duration. Default is 0 (disabled) [ms]*/
lv_anim_set_playback_time(&a, wait_time);
/*Delay before playback. Default is 0 (disabled) [ms]*/
lv anim_set_playback_delay(&a, wait_time);
/*Number of repetitions. Default is 1. LV ANIM REPEAT INFINIT for infinite...
→repetition*/
lv_anim_set_repeat_count(&a, wait_time);
/*Delay before repeat. Default is 0 (disabled) [ms]*/
lv_anim_set_repeat_delay(&a, wait_time);
/*true (default): apply the start vale immediately, false: apply start vale after.
→delay when then anim. really starts. */
lv_anim_set_early_apply(&a, true/false);
/* START THE ANIMATION
*____*/
                                               /*Start the animation*/
lv anim start(&a);
```

You can apply **multiple different animations** on the same variable at the same time. For example, animate the x and y coordinates with  $lv_obj_set_x$  and  $lv_obj_set_y$ . However, only one animation can exist with a given variable and function pair. Therefore  $lv_anim_start()$  will delete the already existing variable-function animations.

### 4.10.2 Animation path

You can determinate the **path of animation**. In the most simple case, it is linear, which means the current value between *start* and *end* is changed linearly. A *path* is mainly a function which calculates the next value to set based on the current state of the animation. Currently, there are the following built-in paths functions:

- lv\_anim\_path\_linear linear animation
- lv\_anim\_path\_step change in one step at the end
- lv\_anim\_path\_ease\_in slow at the beginning
- lv anim path ease out slow at the end
- lv\_anim\_path\_ease\_in\_out slow at the beginning and end too
- lv\_anim\_path\_overshoot overshoot the end value
- lv\_anim\_path\_bounce bounce back a little from the end value (like hitting a wall)

A path can be initialized like this:

```
lv_anim_path_t path;
lv_anim_path_init(&path);
lv_anim_path_set_cb(&path, lv_anim_path_overshoot);
lv_anim_path_set_user_data(&path, &foo); /*Optional for custom functions*/
/*Set the path in an animation*/
lv_anim_set_path(&a, &path);
```

### 4.10.3 Speed vs time

By default, you can set the animation time. But, in some cases, the animation speed is more practical.

The <code>lv\_anim\_speed\_to\_time(speed, start, end)</code> function calculates the required time in milliseconds to reach the end value from a start value with the given speed. The speed is interpreted in <code>unit/sec</code> dimension. For example, <code>lv\_anim\_speed\_to\_time(20,0,100)</code> will give 5000 milliseconds. For example, in case of <code>lv\_obj\_set\_x</code> <code>unit</code> is pixels so <code>20</code> means <code>20</code> <code>px/sec</code> speed.

#### 4.10.4 Delete animations

You can **delete an animation** by <code>lv\_anim\_del(var, func)</code> by providing the animated variable and its animator function.

#### 4.10.5 API

```
Input device
```

Same as lv\_anim\_exec\_xcb\_t but receives lv\_anim\_t \* as the first parameter. It's more consistent but less convenient. Might be used by binding generator functions.

```
typedef void (*lv_anim_ready_cb_t)(struct _lv_anim_t *)

Callback to call when the animation is ready
```

```
typedef void (*lv\_anim\_start\_cb\_t)(struct\_lv\_anim\_t*)
Callback to call when the animation really stars (considering delay)
```

### typedef struct \_lv\_anim\_t lv\_anim\_t

Describes an animation

#### **Enums**

### enum [anonymous]

Can be used to indicate if animations are enabled or disabled in a case

Values:

LV\_ANIM\_OFF

LV\_ANIM\_ON

#### **Functions**

```
void _lv_anim_core_init(void)
```

Init. the animation module

```
void lv_anim_init(lv_anim_t *a)
```

Initialize an animation variable. E.g.: lv\_anim\_t a; lv\_anim\_init(&a); lv\_anim\_set\_...(&a);

#### **Parameters**

• a: pointer to an lv\_anim\_t variable to initialize

### static void lv\_anim\_set\_var(lv\_anim\_t \*a, void \*var)

Set a variable to animate

#### **Parameters**

- a: pointer to an initialized lv anim t variable
- var: pointer to a variable to animate

### static void lv\_anim\_set\_exec\_cb(lv\_anim\_t \*a, lv\_anim\_exec\_xcb\_t exec\_cb)

Set a function to animate var

#### **Parameters**

- a: pointer to an initialized lv\_anim\_t variable
- exec\_cb: a function to execute during animation LittelvGL's built-in functions can be used. E.g. lv\_obj\_set\_x

### static void lv\_anim\_set\_time(lv\_anim\_t \*a, uint32\_t duration)

Set the duration of an animation

#### **Parameters**

- a: pointer to an initialized lv\_anim\_t variable
- duration: duration of the animation in milliseconds

### static void lv\_anim\_set\_delay(lv\_anim\_t \*a, uint32\_t delay)

Set a delay before starting the animation

#### **Parameters**

- a: pointer to an initialized lv anim t variable
- delay: delay before the animation in milliseconds

# static void lv\_anim\_set\_values(lv\_anim\_t \*a, lv\_anim\_value\_t start, lv\_anim\_value\_t end)

Set the start and end values of an animation

#### **Parameters**

- a: pointer to an initialized lv anim t variable
- start: the start value
- end: the end value

#### 

Similar to  $lv\_anim\_set\_exec\_cb$  but  $lv\_anim\_custom\_exec\_cb\_t$  receives  $lv\_anim\_t$  \* as its first parameter instead of void \*. This function might be used when LVGL is binded to other languages because it's more consistent to have  $lv\_anim\_t$  \* as first parameter. The variable to animate can be stored in the animation's  $user\_sata$ 

#### **Parameters**

- a: pointer to an initialized lv anim t variable
- exec cb: a function to execute.

### static void lv\_anim\_set\_path(lv\_anim\_t \*a, const lv\_anim\_path\_t \*path)

Set the path (curve) of the animation.

#### **Parameters**

- a: pointer to an initialized lv\_anim\_t variable
- path\_cb: a function the get the current value of the animation. The built in functions starts with lv\_anim\_path\_...

### static void lv\_anim\_set\_start\_cb(lv\_anim\_t \*a, lv\_anim\_ready\_cb\_t start\_cb)

Set a function call when the animation really starts (considering delay)

### Parameters

- a: pointer to an initialized lv\_anim\_t variable
- start cb: a function call when the animation starts

#### static void lv anim set ready cb(lv anim t\*a, lv anim ready cb t ready cb)

Set a function call when the animation is ready

#### **Parameters**

- a: pointer to an initialized lv\_anim\_t variable
- ready\_cb: a function call when the animation is ready

### static void lv\_anim\_set\_playback\_time(lv\_anim\_t \*a, uint16\_t time)

Make the animation to play back to when the forward direction is ready

#### **Parameters**

- a: pointer to an initialized lv\_anim\_t variable
- time: the duration of the playback animation in milliseconds. 0: disable playback

### static void lv\_anim\_set\_playback\_delay(lv\_anim\_t \*a, uint16\_t delay)

Make the animation to play back to when the forward direction is ready

### **Parameters**

• a: pointer to an initialized lv\_anim\_t variable

• delay: delay in milliseconds before starting the playback animation.

### static void lv\_anim\_set\_repeat\_count(lv\_anim\_t \*a, uint16\_t cnt)

Make the animation repeat itself.

#### **Parameters**

- a: pointer to an initialized lv\_anim\_t variable
- cnt: repeat count or LV\_ANIM\_REPEAT\_INFINITE for infinite repetition. 0: to disable repetition.

### static void lv\_anim\_set\_repeat\_delay(lv\_anim\_t \*a, uint16\_t delay)

Set a delay before repeating the animation.

#### **Parameters**

- a: pointer to an initialized  $lv\_anim\_t$  variable
- delay: delay in milliseconds before repeating the animation.

### void lv anim start(lv\_anim\_t\*a)

Create an animation

#### **Parameters**

• a: an initialized 'anim\_t' variable. Not required after call.

### static void lv\_anim\_path\_init(lv\_anim\_path\_t \*path)

Initialize an animation path

#### **Parameters**

• path: pointer to path

### static void lv\_anim\_path\_set\_cb(lv\_anim\_path\_t \*path, lv\_anim\_path\_cb\_t cb)

Set a callback for a path

#### **Parameters**

- path: pointer to an initialized path
- cb: the callback

### static void lv\_anim\_path\_set\_user\_data(lv\_anim\_path\_t \*path, void \*user\_data)

Set a user data for a path

#### **Parameters**

- path: pointer to an initialized path
- user data: pointer to the user data

### static int32\_t lv\_anim\_get\_delay(lv\_anim\_t \*a)

Get a delay before starting the animation

Return delay before the animation in milliseconds

#### **Parameters**

• a: pointer to an initialized lv anim t variable

### bool lv\_anim\_del(void \*var, lv\_anim\_exec\_xcb\_t exec\_cb)

Delete an animation of a variable with a given animator function

Return true: at least 1 animation is deleted, false: no animation is deleted

#### **Parameters**

- var: pointer to variable
- exec\_cb: a function pointer which is animating 'var', or NULL to ignore it and delete all the animations of 'var

```
lv_anim_t *lv_anim_get(void *var, lv_anim_exec_xcb_t exec_cb)
```

Get the animation of a variable and its exec cb.

Return pointer to the animation.

#### **Parameters**

- var: pointer to variable
- exec\_cb: a function pointer which is animating 'var', or NULL to delete all the animations of 'var'

```
static bool lv anim custom del(lv anim t*a, lv anim custom exec cb t exec cb)
```

Delete an animation by getting the animated variable from a. Only animations with <code>exec\_cb</code> will be deleted. This function exists because it's logical that all anim. functions receives an <code>lv\_anim\_t</code> as their first parameter. It's not practical in C but might make the API more consequent and makes easier to generate bindings.

Return true: at least 1 animation is deleted, false: no animation is deleted

#### **Parameters**

- a: pointer to an animation.
- exec\_cb: a function pointer which is animating 'var', or NULL to ignore it and delete all the animations of 'var

### uint16\_t lv\_anim\_count\_running(void)

Get the number of currently running animations

Return the number of running animations

```
uint16_t lv_anim_speed_to_time(uint16_t speed, lv_anim_value_t start, lv_anim_value_t end)
```

Calculate the time of an animation with a given speed and the start and end values

**Return** the required time [ms] for the animation with the given parameters

### **Parameters**

- speed: speed of animation in unit/sec
- start: start value of the animation
- end: end value of the animation

### void lv anim refr now(void)

Manually refresh the state of the animations. Useful to make the animations running in a blocking process where  $lv\_task\_handler$  can't run for a while. Shouldn't be used directly because it is called in  $lv\_refr\_now()$ .

lv\_anim\_value\_t lv\_anim\_path\_linear(const lv\_anim\_path\_t \*path, const lv\_anim\_t \*a)
Calculate the current value of an animation applying linear characteristic

Return the current value to set

#### **Parameters**

• a: pointer to an animation

lv\_anim\_value\_t lv\_anim\_path\_ease\_in(const lv\_anim\_path\_t \*path, const lv\_anim\_t \*a)
Calculate the current value of an animation slowing down the start phase

Return the current value to set

#### **Parameters**

• a: pointer to an animation

 $lv\_anim\_value\_t$   $lv\_anim\_path\_ease\_out(const$   $lv\_anim\_path\_t$  \*path, const  $lv\_anim\_t$  \*a)

Calculate the current value of an animation slowing down the end phase

Return the current value to set

#### **Parameters**

• a: pointer to an animation

 $lv\_anim\_value\_t$   $lv\_anim\_path\_ease\_in\_out(const$   $lv\_anim\_path\_t$  \*path, const  $lv\_anim\_t*a$ )

Calculate the current value of an animation applying an "S" characteristic (cosine)

Return the current value to set

#### **Parameters**

• a: pointer to an animation

 $lv\_anim\_value\_t$   $lv\_anim\_path\_overshoot(const$   $lv\_anim\_path\_t$  \*path, const  $lv\_anim\_t$  \*a)

Calculate the current value of an animation with overshoot at the end

Return the current value to set

#### **Parameters**

• a: pointer to an animation

 $lv\_anim\_value\_t$  **lv\_anim\_path\_bounce(const**  $lv\_anim\_path\_t$  \*path, **const**  $lv\_anim\_t$  \*a) Calculate the current value of an animation with 3 bounces

Return the current value to set

#### Parameters

• a: pointer to an animation

 $lv\_anim\_value\_t$   $lv\_anim\_path\_step(const\ lv\_anim\_path\_t\ *path,\ const\ lv\_anim\_t\ *a)$ 

Calculate the current value of an animation applying step characteristic. (Set end value on the end of the animation)

Return the current value to set

### Parameters

• a: pointer to an animation

#### **Variables**

```
\label{local_const_lv_anim_path_t} $$ \operatorname{lv_anim_path_t} = \operatorname{lv_anim_path_t} $$ \operatorname{lv_anim_path_t} $$
```

#### **Public Members**

 $lv\_anim\_path\_cb\_t$  cb

void \*user\_data

### struct lv anim t

 $\#include < lv\_anim.h >$ Describes an animation

#### **Public Members**

#### void \*var

Variable to animate

 $lv\_anim\_exec\_xcb\_t$  exec\_cb

Function to execute to animate

lv\_anim\_start\_cb\_t start\_cb

Call it when the animation is starts (considering delay)

lv\_anim\_ready\_cb\_t ready\_cb

Call it when the animation is ready

lv anim path t path

Describe the path (curve) of animations

int32 t start

Start value

int32 t end

End value

int32\_t time

Animation time in ms

int32 t act time

Current time in animation. Set to negative to make delay.

uint32\_t playback\_delay

Wait before play back

uint32\_t playback\_time

Duration of playback animation

uint32\_t repeat\_delay

Wait before repeat

uint16\_t repeat\_cnt

Repeat count for the animation

uint8\_t early\_apply

1: Apply start value immediately even is there is delay

lv\_anim\_user\_data\_t user\_data

Custom user data

uint32 t time orig

uint8\_t playback\_now

Play back is in progress

uint32\_t has\_run

Indicates the animation has run in this round

### **4.11 Tasks**

LVGL has a built-in task system. You can register a function to have it be called periodically. The tasks are handled and called in  $lv\_task\_handler()$ , which needs to be called periodically every few milliseconds. See *Porting* for more information.

The tasks are non-preemptive, which means a task cannot interrupt another task. Therefore, you can call any LVGL related function in a task.

### 4.11.1 Create a task

To create a new task, use <code>lv\_task\_create(task\_cb, period\_ms, LV\_TASK\_PRIO\_OFF/LOWEST/LOW/MID/HIGH/HIGHEST, user\_data)</code>. It will create an <code>lv\_task\_t \* variable</code>, which can be used later to modify the parameters of the task. <code>lv\_task\_create\_basic()</code> can also be used. It allows you to create a new task without specifying any parameters.

A task callback should have void (\*lv\_task\_cb\_t)(lv\_task\_t \*); prototype.

For example:

```
void my_task(lv_task_t * task)
{
    /*Use the user_data*/
    uint32_t * user_data = task->user_data;
    printf("my_task called with user data: %d\n", *user_data);

    /*Do something with LVGL*/
    if(something_happened) {
        something_happened = false;
        lv_btn_create(lv_scr_act(), NULL);
    }
}
...
static uint32_t user_data = 10;
lv_task_t * task = lv_task_create(my_task, 500, LV_TASK_PRIO_MID, &user_data);
```

### 4.11.2 Ready and Reset

lv task ready(task) makes the task run on the next call of lv task handler().

lv\_task\_reset(task) resets the period of a task. It will be called again after the defined period of
milliseconds has elapsed.

### 4.11.3 Set parameters

You can modify some parameters of the tasks later:

- lv task set cb(task, new cb)
- lv task set period(task, new period)
- lv task set prio(task, new priority)

### 4.11.4 One-shot tasks

You can make a task to run only once by calling \textsup \textsup task once (task). The task will automatically be deleted after being called for the first time.

#### 4.11.5 Measure idle time

You can get the idle percentage time <code>lv\_task\_handler</code> with <code>lv\_task\_get\_idle()</code>. Note that, it doesn't measure the idle time of the overall system, only <code>lv\_task\_handler</code>. It can be misleading if you use an operating system and call <code>lv\_task\_handler</code> in an task, as it won't actually measure the time the OS spends in an idle thread.

### 4.11.6 Asynchronous calls

In some cases, you can't do an action immediately. For example, you can't delete an object right now because something else is still using it or you don't want to block the execution now. For these cases, you can use the <code>lv\_async\_call(my\_function, data\_p)</code> to make <code>my\_function</code> be called on the next call of <code>lv\_task\_handler. data\_p</code> will be passed to function when it's called. Note that, only the pointer of the data is saved so you need to ensure that the variable will be "alive" while the function is called. You can use <code>static</code>, global or dynamically allocated data.

For example:

```
void my_screen_clean_up(void * scr)
{
    /*Free some resources related to `scr`*/

    /*Finally delete the screen*/
    lv_obj_del(scr);
}
...

/*Do somethings with the object on the current screen*/

/*Delete screen on next call of `lv_task_handler`. So not now.*/
lv_async_call(my_screen_clean_up, lv_scr_act());

/*The screen is still valid so you can do other things with it*/
```

If you just want to delete an object, and don't need to clean anything up in my\_screen\_cleanup, you could just use lv\_obj\_del\_async, which will delete the object on the next call to lv\_task\_handler.

### 4.11.7 API

#### **Typedefs**

```
typedef void (*lv_task_cb_t)(struct _lv_task_t *)
    Tasks execute this type type of functions.

typedef uint8_t lv_task_prio_t
typedef struct _lv_task_t lv_task_t
    Descriptor of a lv_task
```

#### **Enums**

```
enum [anonymous]
    Possible priorities for lv_tasks
     Values:
    LV_TASK_PRIO_OFF = 0
    LV_TASK_PRIO_LOWEST
    LV_TASK_PRIO_LOW
    LV TASK PRIO MID
    LV_TASK_PRIO_HIGH
    LV_TASK_PRIO_HIGHEST
    _LV_TASK_PRIO_NUM
Functions
void _lv_task_core_init(void)
    Init the lv task module
lv_task_t *lv_task_create_basic(void)
    Create an "empty" task.
                               It needs to initialized with at least lv task set cb and
    lv_task_set_period
    Return pointer to the created task
lv_task_t *lv_task_create(lv_task_cb_t task_xcb, uint32_t period, lv_task_prio_t prio, void
                            *user_data)
    Create a new ly task
    Return pointer to the new task
    Parameters
           • task xcb: a callback which is the task itself. It will be called periodically. (the 'x' in
             the argument name indicates that its not a fully generic function because it not follows the
             func name(object, callback, ...) convention)
           • period: call period in ms unit
```

- prio: priority of the task (LV\_TASK\_PRIO\_OFF means the task is stopped)
- user data: custom parameter

```
\label{eq:void_lv_task_t*task} \begin{tabular}{ll} void & lv\_task\_t *task \end{tabular} \end{tabular}
```

Delete a lv\_task

#### **Parameters**

• task: pointer to task\_cb created by task

```
void lv task set cb(lv task t *task, lv task cb t task cb)
```

Set the callback the task (the function to call periodically)

### **Parameters**

- task: pointer to a task
- task\_cb: the function to call periodically

### void lv\_task\_set\_prio(lv\_task\_t \*task, lv\_task\_prio\_t prio)

Set new priority for a ly task

#### **Parameters**

- task: pointer to a lv\_task
- prio: the new priority

### void lv\_task\_set\_period(lv\_task\_t \*task, uint32\_t period)

Set new period for a ly task

#### **Parameters**

- task: pointer to a lv\_task
- period: the new period

### void lv\_task\_ready(lv\_task\_t \*task)

Make a lv\_task ready. It will not wait its period.

#### **Parameters**

• task: pointer to a lv\_task.

### void lv\_task\_set\_repeat\_count(lv\_task\_t \*task, int32\_t repeat\_count)

Set the number of times a task will repeat.

#### **Parameters**

- task: pointer to a lv\_task.
- repeat count: -1: infinity; 0: stop; n>0: residual times

### void lv task reset(lv\_task\_t \*task)

Reset a lv\_task. It will be called the previously set period milliseconds later.

#### **Parameters**

• task: pointer to a lv task.

### void lv task enable(bool en)

Enable or disable the whole lv\_task handling

### Parameters

• en: true: lv task handling is running, false: lv task handling is suspended

### uint8\_t lv\_task\_get\_idle(void)

Get idle percentage

Return the ly task idle in percentage

### struct lv task t

 $\#include < lv\_task.h > Descriptor of a lv\_task$ 

### **Public Members**

### uint32\_t period

How often the task should run

#### uint32 t last run

Last time the task ran

### $lv\_task\_cb\_t$ task\_cb

Task function

```
void *user_data
    Custom user data
int32_t repeat_count
    1: Task times; -1: infinity; 0: stop; n>0: residual times
uint8_t prio
    Task priority
```

## 4.12 Drawing

With LVGL, you don't need to draw anything manually. Just create objects (like buttons and labels), move and change them and LVGL will refresh and redraw what is required.

However, it might be useful to have a basic understanding of how drawing happens in LVGL.

The basic concept is to not draw directly to the screen, but draw to an internal buffer first and then copy that buffer to screen when the rendering is ready. It has two main advantages:

- 1. **Avoids flickering** while layers of the UI are drawn. For example, when drawing a *background* + *button* + *text*, each "stage" would be visible for a short time.
- 2. **It's faster** to modify a buffer in RAM and finally write one pixel once than read/write a display directly on each pixel access. (e.g. via a display controller with SPI interface). Hence, it's suitable for pixels that are redrawn multiple times (e.g. background + button + text).

### 4.12.1 Buffering types

As you already might learn in the *Porting* section, there are 3 types of buffers:

- 1. One buffer LVGL draws the content of the screen into a buffer and sends it to the display. The buffer can be smaller than the screen. In this case, the larger areas will be redrawn in multiple parts. If only small areas changes (e.g. button press), then only those areas will be refreshed.
- 2. Two non-screen-sized buffers having two buffers, LVGL can draw into one buffer while the content of the other buffer is sent to display in the background. DMA or other hardware should be used to transfer the data to the display to let the CPU draw meanwhile. This way, the rendering and refreshing of the display become parallel. If the buffer is smaller than the area to refresh, LVGL will draw the display's content in chunks similar to the *One buffer*.
- 3. Two screen-sized buffers In contrast to *Two non-screen-sized buffers*, LVGL will always provide the whole screen's content, not only chunks. This way, the driver can simply change the address of the frame buffer to the buffer received from LVGL. Therefore, this method works best when the MCU has an LCD/TFT interface and the frame buffer is just a location in the RAM.

### 4.12.2 Mechanism of screen refreshing

- 1. Something happens on the GUI which requires redrawing. For example, a button has been pressed, a chart has been changed or an animation happened, etc.
- 2. LVGL saves the changed object's old and new area into a buffer, called an *Invalid area buffer*. For optimization, in some cases, objects are not added to the buffer:
  - Hidden objects are not added.
  - Objects completely out of their parent are not added.

- Areas out of the parent are cropped to the parent's area.
- The object on other screens are not added.
- 3. In every LV DISP DEF REFR PERIOD (set in *lv\_conf.h*):
  - LVGL checks the invalid areas and joins the adjacent or intersecting areas.
  - Takes the first joined area, if it's smaller than the *display buffer*, then simply draw the areas' content to the *display buffer*. If the area doesn't fit into the buffer, draw as many lines as possible to the *display buffer*.
  - When the area is drawn, call flush cb from the display driver to refresh the display.
  - If the area was larger than the buffer, redraw the remaining parts too.
  - Do the same with all the joined areas.

While an area is redrawn, the library searches the most top object which covers the area to redraw, and starts to draw from that object. For example, if a button's label has changed, the library will see that it's enough to draw the button under the text, and it's not required to draw the background too.

The difference between buffer types regarding the drawing mechanism is the following:

- 1. One buffer LVGL needs to wait for lv\_disp\_flush\_ready() (called at the end of flush\_cb) before starting to redraw the next part.
- 2. Two non-screen-sized buffers LVGL can immediately draw to the second buffer when the first is sent to flush\_cb because the flushing should be done by DMA (or similar hardware) in the background.
- 3. Two screen-sized buffers After calling flush\_cb, the first buffer, if being displayed as frame buffer. Its content is copied to the second buffer and all the changes are drawn on top of it.

### **4.12.3 Masking**

Masking is the basic concept of LVGL's drawing engine. To use LVGL it's not required to know about the mechanisms described here, but you might find interesting to know how the drawing works under hood.

To learn masking let's learn the steps of drawing first:

- 1. Create a draw descriptor from an object's styles (e.g. lv\_draw\_rect\_dsc\_t). It tells the parameters of drawing, for example the colors, widths, opacity, fonts, radius, etc.
- 2. Call the draw function with the initialized descriptor and some other parameters. It renders the primitive shape to the current draw buffer.
- 3. If the shape is very simple and doesn't require masks go to #5. Else create the required masks (e.g. a rounded rectangle mask)
- 4. Apply all the created mask(s) for one or a few lines. It create 0..255 values into a mask buffer with the "shape" of the created masks. E.g. in case of a "line mask" according to the parameters of the mask, keep one side of the buffer as it is (255 by default) and set the rest to 0 to indicate that the latter side should be removed.
- 5. Blend the image or rectangle to the screen. During blending masks (make some pixels transparent or opaque), blending modes (additive, subtractive, etc), opacity are handled.
- 6. Repeat from #4.

Masks are used the create almost every basic primitives:

• letters create a mask from the letter and draw a "letter-colored" rectangle using the mask.

- line created from 4 l"ine masks", to mask out the left, right, top and bottom part of the line to get perfectly perpendicular line ending
- rounded rectangle a mask is created real-time for each line of a rounded rectangle and a normal filled rectangle is drawn according to the mask.
- **clip corner** to clip to overflowing content on the rounded corners also a rounded rectangle mask is applied.
- rectangle border same as a rounded rectangle, but inner part is masked out too
- arc drawing a circle border is drawn, but an arc mask is applied.
- ARGB images the alpha channel is separated into a mask and the image is drawn as a normal RGB image.

As mentioned in #3 above in some cases no mask is required:

- a mono colored, not rounded rectangles
- RGB images

LVGL has the following built-in mask types which can be calculated and applied real-time:

- LV\_DRAW\_MASK\_TYPE\_LINE Removes a side of a line (top, bottom, left or right).
   lv\_draw\_line uses 4 of it. Essentially, every (skew) line is bounded with 4 line masks by forming a rectangle.
- LV\_DRAW\_MASK\_TYPE\_RADIUS Removes the inner or outer parts of a rectangle which can have radius too. It's also used to create circles by setting the radius to large value (LV\_RADIUS\_CIRCLE)
- LV\_DRAW\_MASK\_TYPE\_ANGLE Removes a circle sector. It is used by lv\_draw\_arc to remove the "empty" sector.
- LV\_DRAW\_MASK\_TYPE\_FADE Create a vertical fade (change opacity)
- LV\_DRAW\_MASK\_TYPE\_MAP The mask is stored in an array and the necessary parts are applied

Masks are create and removed automatically during drawing but the  $lv\_objmask$  allows the user to add masks. Here is an example:

C

### Several object masks



code

```
#include "../../lv_examples.h"
#if LV USE OBJMASK
void lv_ex_objmask_1(void)
    /*Set a very visible color for the screen to clearly see what happens*/
   lv obj set style local bg color(lv scr act(), LV OBJ PART MAIN, LV STATE DEFAULT,...
→lv_color_hex3(0xf33));
    lv_obj_t * om = lv_objmask_create(lv_scr_act(), NULL);
    lv_obj_set_size(om, 200, 200);
    lv_obj_align(om, NULL, LV_ALIGN_CENTER, 0, 0);
    lv_obj_t * label = lv_label_create(om, NULL);
    lv label set long mode(label, LV LABEL LONG BREAK);
    lv label set align(label, LV LABEL ALIGN CENTER);
    lv obj set width(label, 180);
    lv label set text(label, "This label will be masked out. See how it works.");
   lv_obj_align(label, NULL, LV_ALIGN_IN_TOP_MID, 0, 20);
    lv obj t * cont = lv cont create(om, NULL);
    lv obj set size(cont, 180, 100);
    lv obj set drag(cont, true);
    lv_obj_align(cont, NULL, LV_ALIGN_IN_BOTTOM_MID, 0, -10);
    lv obj t * btn = lv btn create(cont, NULL);
    lv_obj_align(btn, NULL, LV_ALIGN_CENTER, 0, 0);
    lv obj set style local value str(btn, LV BTN PART MAIN, LV STATE DEFAULT, "Button
");
    uint32_t t;
```

(continues on next page)

(continued from previous page)

```
lv_refr_now(NULL);
    t = lv_tick_get();
   while(lv_tick_elaps(t) < 1000);</pre>
    lv area t a;
    lv_draw_mask_radius_param_t r1;
   a.x1 = 10;
    a.y1 = 10;
    a.x2 = 190;
   a.y2 = 190;
    lv draw mask radius init(&r1, &a, LV RADIUS CIRCLE, false);
    lv objmask add mask(om, &r1);
   lv refr now(NULL);
    t = lv_tick_get();
   while(lv_tick_elaps(t) < 1000);</pre>
    a.x1 = 100;
   a.y1 = 100;
    a.x2 = 150;
    a.y2 = 150;
    lv_draw_mask_radius_init(&r1, &a, LV_RADIUS_CIRCLE, true);
    lv_objmask_add_mask(om, &r1);
    lv refr now(NULL);
    t = lv_tick_get();
    while(lv_tick_elaps(t) < 1000);</pre>
    lv_draw_mask_line_param_t l1;
    lv_draw_mask_line_points_init(&l1, 0, 0, 100, 200, LV_DRAW_MASK_LINE_SIDE_TOP);
    lv_objmask_add_mask(om, &l1);
   lv_refr_now(NULL);
    t = lv_tick_get();
   while(lv_tick_elaps(t) < 1000);</pre>
   lv draw mask fade param t f1;
   a.x1 = 100;
   a.y1 = 0;
   a.x2 = 200;
   a.y2 = 200;
    lv_draw_mask_fade_init(&f1, &a, LV_OPA_TRANSP, 0, LV_OPA_COVER, 150);
    lv objmask add mask(om, &f1);
}
#endif
```

#### Text mask

# Text with gradient

code

```
#include "../../lv_examples.h"
#if LV_USE_OBJMASK
#define MASK WIDTH 100
#define MASK HEIGHT 50
void lv_ex_objmask_2(void)
    /* Create the mask of a text by drawing it to a canvas*/
   static lv opa t mask map[MASK WIDTH * MASK HEIGHT];
   /*Create a "8 bit alpha" canvas and clear it*/
   lv_obj_t * canvas = lv_canvas_create(lv_scr_act(), NULL);
   lv canvas set buffer(canvas, mask map, MASK WIDTH, MASK HEIGHT, LV IMG CF ALPHA
   lv_canvas_fill_bg(canvas, LV_COLOR_BLACK, LV_OPA_TRANSP);
   /*Draw a label to the canvas. The result "image" will be used as mask*/
   lv draw label dsc t label dsc;
    lv_draw_label_dsc_init(&label_dsc);
    label dsc.color = LV COLOR WHITE;
    lv canvas draw text(canvas, 5, 5, MASK WIDTH, &label dsc, "Text with gradient",,
→LV LABEL ALIGN CENTER);
    /*The mask is reads the canvas is not required anymore*/
   lv_obj_del(canvas);
   /*Create an object mask which will use the created mask*/
    lv obj t * om = lv objmask create(lv scr act(), NULL);
    lv obj set size(om, MASK WIDTH, MASK HEIGHT);
```

(continues on next page)

(continued from previous page)

```
lv_obj_align(om, NULL, LV_ALIGN_CENTER, 0, 0);
    /*Add the created mask map to the object mask*/
    lv_draw_mask_map_param_t m;
    lv area t a;
    a.\overline{x}1 = \overline{0};
    a.y1 = 0;
    a.x2 = MASK_WIDTH - 1;
    a.y2 = MASK_HEIGHT - 1;
    lv_draw_mask_map_init(&m, &a, mask_map);
    lv_objmask_add_mask(om, &m);
    /*Create a style with gradient*/
    static lv_style_t style_bg;
    lv_style_init(&style_bg);
    lv_style_set_bg_opa(&style_bg, LV_STATE_DEFAULT, LV_OPA_COVER);
    lv_style_set_bg_color(&style_bg, LV_STATE_DEFAULT, LV_COLOR_RED);
    lv_style_set_bg_grad_color(&style_bg, LV_STATE_DEFAULT, LV_COLOR_BLUE);
    lv_style_set_bg_grad_dir(&style_bg, LV_STATE_DEFAULT, LV_GRAD_DIR_HOR);
    /* Create and object with the gradient style on the object mask.
     * The text will be masked from the gradient*/
    lv_obj_t * bg = lv_obj_create(om, NULL);
    lv_obj_reset_style_list(bg, LV_OBJ_PART_MAIN);
    lv_obj_add_style(bg, LV_OBJ_PART_MAIN, &style_bg);
    lv obj set size(bg, MASK WIDTH, MASK HEIGHT);
}
#endif
```

#### **MicroPython**

No examples yet.

**CHAPTER** 

**FIVE** 

### WIDGETS

## 5.1 Base object (lv\_obj)

#### 5.1.1 Overview

The 'Base Object' implements the basic properties of widgets on a screen, such as:

- coordinates
- parent object
- children
- main style
- attributes like Click enable, Drag enable, etc.

In object-oriented thinking, it is the base class from which all other objects in LVGL are inherited. This, among another things, helps reduce code duplication.

The functions and functionalities of Base object can be used with other widgets too. For example lv\_obj\_set\_width(slider, 100)

The Base object can be directly used as a simple widgets. It nothing else then a rectangle.

### Coordinates

#### Size

The object size can be modified on individual axes with  $lv_obj_set_width(obj, new_width)$  and  $lv_obj_set_height(obj, new_height)$ , or both axes can be modified at the same time with  $lv_obj_set_size(obj, new_width, new_height)$ .

Styles can add Margin to the objects. Margin tells that "I want this space around me". To set width or height reduced by the margin lv\_obj\_set\_width\_margin(obj, new\_width) or lv\_obj\_set\_height\_margin(obj, new\_height). In more exact way: new\_width = left margin + object width + right margin.

To get the width or height which includes the margins use lv obj get width/height margin(obj).

Styles can add Padding to the object as well. Padding means "I don't want my children too close to my sides, so keep this space". To set width or height reduced by the padding lv\_obj\_set\_width\_fit(obj, new\_width) or lv\_obj\_set\_height\_fit(obj, new\_height). In a more exact way: new\_width = left\_pad + object\_width + right\_pad To get the width or height which is REDUCED by padding use lv obj get width/height fit(obj). It can be considered the "useful size of the object".

Margin and padding gets important when Layout or Auto-fit is used by other widgets.

#### **Position**

You can set the x and y coordinates relative to the parent with  $lv\_obj\_set\_x(obj, new\_x)$  and  $lv\_obj\_set\_y(obj, new\_y)$ , or both at the same time with  $lv\_obj\_set\_pos(obj, new\_x, new y)$ .

#### **Alignment**

You can align the object to another with  $lv_obj_align(obj, obj_ref, LV_ALIGN_..., x_ofs, y_ofs)$ .

- **obj** is the object to align.
- obj\_ref is a reference object. obj will be aligned to it. If obj\_ref = NULL, then the parent of obj will be used.
- The third argument is the type of alignment. These are the possible options:



The alignment types build like LV\_ALIGN\_OUT\_TOP\_MID.

• The last two arguments allow you to shift the object by a specified number of pixels after aligning it.

For example, to align a text below an image:  $lv_obj_align(text, image, LV_ALIGN_OUT_BOTTOM_MID, 0, 10)$ . Or to align a text in the middle of its parent:  $lv_obj_align(text, NULL, LV_ALIGN_CENTER, 0, 0)$ .

lv\_obj\_align\_origo works similarly to lv\_obj\_align but it aligns the center of the object.

For example,  $lv\_obj\_align\_origo(btn, image, LV\_ALIGN\_OUT\_BOTTOM\_MID, 0, 0)$  will align the center of the button the bottom of the image.

The parameters of the alignment will be saved in the object if  $LV\_USE\_OBJ\_REALIGN$  is enabled in  $lv\_conf.h$ . You can then realign the objects simply by calling  $lv\_obj\_realign(obj)$ . It's equivalent to calling  $lv\_obj\_align$  again with the same parameters.

If the alignment happened with lv\_obj\_align\_origo, then it will be used when the object is realigned.

If <code>lv\_obj\_set\_auto\_realign(obj, true)</code> is used the object will be realigned automatically, if its size changes in <code>lv\_obj\_set\_width/height/size()</code> functions. It's very useful when size animations are applied to the object and the original position needs to be kept.

Note that the coordinates of screens can't be changed. Attempting to use these functions on screens will result in undefined behavior.

### Parents and children

You can set a new parent for an object with lv\_obj\_set\_parent(obj, new\_parent). To get the current parent, use lv\_obj\_get\_parent(obj).

To get the children of an object, use <code>lv\_obj\_get\_child(obj, child\_prev)</code> (from last to first) or <code>lv\_obj\_get\_child\_back(obj, child\_prev)</code> (from first to last). To get the first child, pass <code>NULL</code> as the second parameter and use the return value to iterate through the children. The function will return <code>NULL</code> if there are no more children. For example:

```
lv_obj_t * child = lv_obj_get_child(parent, NULL);
while(child) {
    /*Do something with "child" */
    child = lv_obj_get_child(parent, child);
}
```

lv\_obj\_count\_children(obj) tells the number of children on an object.
lv\_obj\_count\_children\_recursive(obj) also tells the number of children but counts children of children recursively.

### **Screens**

When you have created a screen like  $lv_obj_t * screen = lv_obj_create(NULL, NULL)$ , you can load it with  $lv_scr_load(screen)$ . The  $lv_scr_act()$  function gives you a pointer to the current screen.

If you have more display then it's important to know that these functions operate on the lastly created or the explicitly selected (with lv disp set default) display.

To get an object's screen use the lv obj get screen(obj) function.

### Layers

There are two automatically generated layers:

- top layer
- system layer

They are independent of the screens and they will be shown on every screen. The *top layer* is above every object on the screen and the *system layer* is above the *top layer* too. You can add any pop-up windows to the *top layer* freely. But, the *system layer* is restricted to system-level things (e.g. mouse cursor will be placed here in lv indev set cursor()).

The lv\_layer\_top() and lv\_layer\_sys() functions gives a pointer to the top or system layer.

You can bring an object to the foreground or send it to the background with lv obj move foreground(obj) and lv obj move background(obj).

Read the Layer overview section to learn more about layers.

#### **Events**

To set an event callback for an object, use lv\_obj\_set\_event\_cb(obj, event\_cb),

To manually send an event to an object, use lv\_event\_send(obj, LV\_EVENT\_..., data)

Read the *Event overview* to learn more about the events.

### **5.1.2** Parts

The widgets can have multiple parts. For example a *Button* has only a main part but a *Slider* is built from a background, an indicator and a knob.

The name of the parts is constructed like  $LV_+ < TYPE > PART_ < NAME >$ . For example  $LV_BTN_PART_MAIN$  or  $LV_SLIDER_PART_KNOB$ . The parts are usually used when styles are add to the objects. Using parts different styles can be assigned to the different parts of the objects.

To learn more about the parts read the related section of the Style overview.

#### **States**

The object can be in a combinations of the following states:

- LV\_STATE\_DEFAULT Normal, released
- LV\_STATE\_CHECKED Toggled or checked
- LV\_STATE\_FOCUSED Focused via keypad or encoder or clicked via touchpad/mouse
- LV\_STATE\_EDITED Edit by an encoder
- LV\_STATE\_HOVERED Hovered by mouse (not supported now)
- LV\_STATE\_PRESSED Pressed
- LV\_STATE\_DISABLED Disabled or inactive

The states are usually automatically changed by the library as the user presses, releases, focuses etc an object. However, the states can be changed manually too. To completely overwrite the current state use <code>lv\_obj\_set\_state(obj, part, LV\_STATE...)</code>. To set or clear given state (but leave to other states untouched) use <code>lv\_obj\_add/clear\_state(obj, part, LV\_STATE\_...)</code> In both cases ORed state values can be used as well. E.g. <code>lv\_obj\_set\_state(obj, part, LV\_STATE\_PRESSED | LV\_PRESSED CHECKED)</code>.

To learn more about the states read the related section of the Style overview.

### **Style**

Be sure to read the *Style overview* first.

To add a style to an object use <code>lv\_obj\_add\_style(obj, part, &new\_style)</code> function. The Base object use all the rectangle-like style properties.

To remove all styles from an object use lv obj reset style list(obj, part)

If you modify a style, which is already used by objects, in order to refresh the affected objects you can use either <code>lv\_obj\_refresh\_style(obj)</code> on each object using it or to notify all objects with a given style use <code>lv\_obj\_report\_style\_mod(&style)</code>. If the parameter of <code>lv\_obj\_report\_style\_mod</code> is <code>NULL</code>, all objects will be notified.

### **Attributes**

There are some attributes which can be enabled/disabled by lv obj set ...(obj, true/false):

- hidden Hide the object. It will not be drawn and will be considered by input devices as if it doesn't exist., Its children will be hidden too.
- **click** Allows you to click the object via input devices. If disabled, then click events are passed to the object behind this one. (E.g. *Labels* are not clickable by default)
- top If enabled then when this object or any of its children is clicked then this object comes to the foreground.
- drag Enable dragging (moving by an input device)
- drag\_dir Enable dragging only in specific directions. Can be LV\_DRAG\_DIR\_HOR/VER/ALL.
- $\mathbf{drag\_throw}$  Enable "throwing" with dragging as if the object would have momentum
- **drag\_parent** If enabled then the object's parent will be moved during dragging. It will look like as if the parent is dragged. Checked recursively, so can propagate to grandparents too.
- **parent\_event** Propagate the events to the parents too. Checked recursively, so can propagate to grandparents too.
- opa\_scale\_enable Enable opacity scaling. See the [#opa-scale](Opa scale) section.

#### **Protect**

There are some specific actions which happen automatically in the library. To prevent one or more that kind of actions, you can protect the object against them. The following protections exists:

- LV\_PROTECT\_NONE No protection
- LV\_PROTECT\_POS Prevent automatic positioning (e.g. Layout in *Containers*)
- LV\_PROTECT\_FOLLOW Prevent the object be followed (make a "line break") in automatic ordering (e.g. Layout in *Containers*)
- LV\_PROTECT\_PARENT Prevent automatic parent change. (e.g. *Page* moves the children created on the background to the scrollable)
- LV\_PROTECT\_PRESS\_LOST Prevent losing press when the press is slid out of the objects. (E.g. a *Button* can be released out of it if it was being pressed)
- LV\_PROTECT\_CLICK\_FOCUS Prevent automatically focusing the object if it's in a *Group* and click focus is enabled.
- LV\_PROTECT\_CHILD\_CHG Disable the child change signal. Used internally by the library

The  $lv\_obj\_set/clear\_protect(obj, LV\_PROTECT\_...)$  sets/clears the protection. You can use 'OR'ed values of protection types too.

### **Groups**

Once, an object is added to group with  $lv\_group\_add\_obj(group, obj)$  the object's current group can be get with  $lv\_obj\_get\_group(obj)$ .

lv\_obj\_is\_focused(obj) tells if the object is currently focused on its group or not. If the object is not
added to a group, false will be returned.

Read the *Input devices overview* to learn more about the *Groups*.

### Extended click area

By default, the objects can be clicked only on their coordinates, however, this area can be extended with lv\_obj\_set\_ext\_click\_area(obj, left, right, top, bottom). left/right/top/bottom describes how far the clickable area should extend past the default in each direction.

This feature needs to enabled in  $lv\_conf.h$  with LV\_USE\_EXT\_CLICK\_AREA. The possible values are:

- LV\_EXT\_CLICK\_AREA\_FULL store all 4 coordinates as lv\_coord\_t
- LV\_EXT\_CLICK\_AREA\_TINY store only horizontal and vertical coordinates (use the greater value of left/right and top/bottom) as uint8\_t
- LV\_EXT\_CLICK\_AREA\_OFF Disable this feature

### **5.1.3** Events

Only the Generic events are sent by the object type.

Learn more about *Events*.

# 5.1.4 Keys


No *Keys* are processed by the object type.

Learn more about Keys.

# **5.1.5** Example

C

# Base obejcts with custom styles

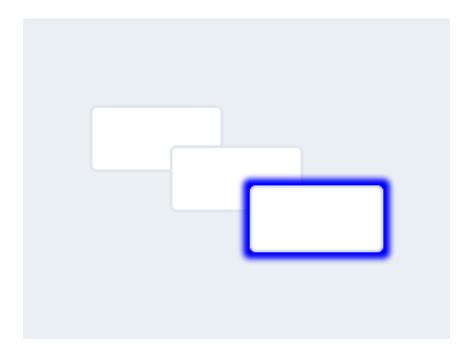

code

```
#include "../../lv_examples.h"
void lv_ex_obj_1(void)
{
    lv_obj_t * obj1;
    obj1 = lv_obj_create(lv_scr_act(), NULL);
    lv_obj_set_size(obj1, 100, 50);
    lv_obj_align(obj1, NULL, LV_ALIGN_CENTER, -60, -30);
    /*Copy the previous object and enable drag*/
   lv_obj_t * obj2;
    obj2 = lv_obj_create(lv_scr_act(), obj1);
    lv_obj_align(obj2, NULL, LV_ALIGN_CENTER, 0, 0);
    lv_obj_set_drag(obj2, true);
    static lv_style_t style_shadow;
    lv style init(&style shadow);
    lv_style_set_shadow_width(&style_shadow, LV_STATE_DEFAULT, 10);
    lv_style_set_shadow_spread(&style_shadow, LV_STATE_DEFAULT, 5);
    lv_style_set_shadow_color(&style_shadow, LV_STATE_DEFAULT, LV_COLOR_BLUE);
    /*Copy the previous object (drag is already enabled)*/
   lv obj t * obj3;
   obj3 = lv obj create(lv scr act(), obj2);
    lv obj add style(obj3, LV OBJ PART MAIN, &style shadow);
    lv_obj_align(obj3, NULL, LV_ALIGN_CENTER, 60, 30);
}
```

# MicroPython

No examples yet.

### 5.1.6 API

```
Typedefs
```

typedef lv\_res\_t (\*lv\_signal\_cb\_t)(struct \_lv\_obj\_t \*obj, lv\_signal\_t sign, void \*param)

```
typedef uint8_t lv_protect_t
typedef uint8_t lv_state_t
typedef struct _lv_obj_t lv_obj_t
typedef uint8_t lv_obj_part_t
```

### **Enums**

# enum [anonymous]

Design modes

Values:

# LV\_DESIGN\_DRAW\_MAIN

Draw the main portion of the object

### LV DESIGN DRAW POST

Draw extras on the object

# LV\_DESIGN\_COVER\_CHK

Check if the object fully covers the 'mask\_p' area

### enum [anonymous]

Design results

Values:

# LV\_DESIGN\_RES\_OK

Draw ready

### LV DESIGN RES COVER

Returned on LV\_DESIGN\_COVER\_CHK if the areas is fully covered

### LV DESIGN RES NOT COVER

Returned on LV\_DESIGN\_COVER\_CHK if the areas is not covered

# LV DESIGN RES MASKED

Returned on LV DESIGN COVER CHK if the areas is masked out (children also not cover)

# enum [anonymous]

Values:

### LV EVENT PRESSED

The object has been pressed

# LV EVENT PRESSING

The object is being pressed (called continuously while pressing)

### LV EVENT PRESS LOST

User is still pressing but slid cursor/finger off of the object

### LV EVENT SHORT CLICKED

User pressed object for a short period of time, then released it. Not called if dragged.

# LV EVENT LONG PRESSED

Object has been pressed for at least LV\_INDEV\_LONG\_PRESS\_TIME. Not called if dragged.

### LV EVENT LONG PRESSED REPEAT

 ${\it Called after LV\_INDEV\_LONG\_PRESS\_TIME in every LV\_INDEV\_LONG\_PRESS\_REP\_TIME } \ {\it ms.} \ {\it Not called if dragged}.$ 

### LV EVENT CLICKED

Called on release if not dragged (regardless to long press)

### LV\_EVENT\_RELEASED

Called in every cases when the object has been released

# LV\_EVENT\_DRAG\_BEGIN

LV\_EVENT\_DRAG\_END

LV\_EVENT\_DRAG\_THROW\_BEGIN

# LV EVENT GESTURE

The object has been gesture

### LV EVENT KEY

LV\_EVENT\_FOCUSED

LV\_EVENT\_DEFOCUSED

LV EVENT LEAVE

# LV EVENT VALUE CHANGED

The object's value has changed (i.e. slider moved)

### LV\_EVENT\_INSERT

LV\_EVENT\_REFRESH

# LV\_EVENT\_APPLY

"Ok", "Apply" or similar specific button has clicked

# LV\_EVENT\_CANCEL

"Close", "Cancel" or similar specific button has clicked

### LV EVENT DELETE

Object is being deleted

### enum [anonymous]

Signals are for use by the object itself or to extend the object's functionality. Applications should use  $lv\_obj\_set\_event\_cb$  to be notified of events that occur on the object.

Values:

### LV SIGNAL CLEANUP

Object is being deleted

# LV\_SIGNAL\_CHILD\_CHG

Child was removed/added

### LV SIGNAL COORD CHG

Object coordinates/size have changed

### LV SIGNAL PARENT SIZE CHG

Parent's size has changed

### LV SIGNAL STYLE CHG

Object's style has changed

### LV\_SIGNAL\_BASE\_DIR\_CHG

The base dir has changed

### LV\_SIGNAL\_REFR\_EXT\_DRAW\_PAD

Object's extra padding has changed

# LV SIGNAL GET TYPE

LVGL needs to retrieve the object's type

# LV\_SIGNAL\_GET\_STYLE

Get the style of an object

# LV\_SIGNAL\_GET\_STATE\_DSC

Get the state of the object

### LV SIGNAL HIT TEST

Advanced hit-testing

### LV SIGNAL PRESSED

The object has been pressed

### LV SIGNAL PRESSING

The object is being pressed (called continuously while pressing)

# LV SIGNAL PRESS LOST

User is still pressing but slid cursor/finger off of the object

# LV\_SIGNAL\_RELEASED

User pressed object for a short period of time, then released it. Not called if dragged.

### LV\_SIGNAL\_LONG\_PRESS

Object has been pressed for at least LV\_INDEV\_LONG\_PRESS\_TIME. Not called if dragged.

### LV SIGNAL LONG PRESS REP

Called after LV\_INDEV\_LONG\_PRESS\_TIME in every LV\_INDEV\_LONG\_PRESS\_REP\_TIME ms. Not called if dragged.

# LV\_SIGNAL\_DRAG\_BEGIN

LV\_SIGNAL\_DRAG\_THROW\_BEGIN

LV SIGNAL DRAG END

### LV SIGNAL GESTURE

The object has been gesture

### LV SIGNAL LEAVE

Another object is clicked or chosen via an input device

### LV SIGNAL FOCUS

LV\_SIGNAL\_DEFOCUS

LV\_SIGNAL\_CONTROL

LV\_SIGNAL\_GET\_EDITABLE

### enum [anonymous]

Values:

# $LV_PROTECT_NONE = 0x00$

### LV PROTECT CHILD CHG = 0x01

Disable the child change signal. Used by the library

### $LV_PROTECT_PARENT = 0x02$

Prevent automatic parent change (e.g. in lv\_page)

# $LV_PROTECT_POS = 0x04$

Prevent automatic positioning (e.g. in ly cont layout)

```
LV PROTECT FOLLOW = 0x08
         Prevent the object be followed in automatic ordering (e.g. in ly cont PRETTY layout)
     LV PROTECT PRESS LOST = 0x10
         If the indev was pressing this object but swiped out while pressing do not search other object.
     LV PROTECT CLICK FOCUS =0x20
         Prevent focusing the object by clicking on it
enum [anonymous]
     Values:
     LV\_STATE\_DEFAULT = 0x00
     LV STATE CHECKED = 0x01
     LV STATE FOCUSED = 0x02
     LV STATE EDITED = 0x04
     LV STATE HOVERED = 0x08
     LV STATE PRESSED = 0x10
     LV\_STATE\_DISABLED = 0x20
enum [anonymous]
     Values:
     LV_OBJ_PART_MAIN
     LV_OBJ_PART_VIRTUAL_LAST = 0x01
     LV_0BJ_PART_REAL_LAST = 0x40
     LV_OBJ_PART_ALL = 0xFF
Functions
void lv init(void)
     Init. the 'lv' library.
void lv deinit(void)
     Deinit the 'lv' library Currently only implemented when not using custom allocators, or GC is enabled.
lv_obj_t*lv_obj_create(lv_obj_t*parent, const lv_obj_t*copy)
     Create a basic object
     Return pointer to the new object
     Parameters
           • parent: pointer to a parent object. If NULL then a screen will be created
           • COPY: pointer to a base object, if not NULL then the new object will be copied from it
lv res t lv obj del(lv \ obj \ t * obj)
     Delete 'obj' and all of its children
     Return LV_RES_INV because the object is deleted
     Parameters
           • obj: pointer to an object to delete
```

# void lv\_obj\_del\_anim\_ready\_cb(lv\_anim\_t \*a)

A function to be easily used in animation ready callback to delete an object when the animation is ready

### **Parameters**

• a: pointer to the animation

### void lv\_obj\_del\_async(struct \_lv\_obj\_t \*obj)

Helper function for asynchronously deleting objects. Useful for cases where you can't delete an object directly in an LV EVENT DELETE handler (i.e. parent).

See ly async call

### **Parameters**

• obj: object to delete

### void lv\_obj\_clean(lv\_obj\_t \*obj)

Delete all children of an object

#### **Parameters**

• **obj**: pointer to an object

### void lv\_obj\_invalidate\_area(const lv\_obj\_t\*obj, const lv\_area\_t\*area)

Mark an area of an object as invalid. This area will be redrawn by 'lv\_refr\_task'

### **Parameters**

- **obj**: pointer to an object
- area: the area to redraw

# void lv\_obj\_invalidate(const lv\_obj\_t \*obj)

Mark the object as invalid therefore its current position will be redrawn by 'lv\_refr\_task'

#### **Parameters**

• **obj**: pointer to an object

# void lv\_obj\_set\_parent(lv\_obj\_t \*obj, lv\_obj\_t \*parent)

Set a new parent for an object. Its relative position will be the same.

### Parameters

- obj: pointer to an object. Can't be a screen.
- parent: pointer to the new parent object. (Can't be NULL)

### void lv obj move foreground( $lv \ obj \ t * obj$ )

Move and object to the foreground

### **Parameters**

• obj: pointer to an object

### void lv obj move background(lv\_obj\_t\*obj)

Move and object to the background

#### **Parameters**

• **obj**: pointer to an object

# void lv\_obj\_set\_pos(lv\_obj\_t\*obj, lv\_coord\_t x, lv\_coord\_t y)

Set relative the position of an object (relative to the parent)

- obj: pointer to an object
- X: new distance from the left side of the parent
- ullet y: new distance from the top of the parent

# void $lv_obj_set_x(lv_obj_t *obj, lv_coord_t x)$

Set the x coordinate of a object

### **Parameters**

- obj: pointer to an object
- X: new distance from the left side from the parent

# void lv\_obj\_set\_y(lv\_obj\_t \*obj, lv\_coord\_t y)

Set the y coordinate of a object

### **Parameters**

- obj: pointer to an object
- y: new distance from the top of the parent

# void lv\_obj\_set\_size(lv\_obj\_t \*obj, lv\_coord\_t w, lv\_coord\_t h)

Set the size of an object

### **Parameters**

- obj: pointer to an object
- W: new width
- h: new height

# void lv\_obj\_set\_width(lv\_obj\_t \*obj, lv\_coord\_t w)

Set the width of an object

#### **Parameters**

- **obj**: pointer to an object
- W: new width

# void lv obj set height(lv\_obj\_t\*obj, lv\_coord t h)

Set the height of an object

### **Parameters**

- obj: pointer to an object
- h: new height

### void lv\_obj\_set\_width\_fit(lv\_obj\_t \*obj, lv\_coord\_t w)

Set the width reduced by the left and right padding.

### **Parameters**

- **obj**: pointer to an object
- W: the width without paddings

# void lv\_obj\_set\_height\_fit(lv\_obj\_t \*obj, lv\_coord\_t h)

Set the height reduced by the top and bottom padding.

# Parameters

• obj: pointer to an object

• h: the height without paddings

### void lv\_obj\_set\_width\_margin(lv\_obj\_t\*obj, lv\_coord\_t w)

Set the width of an object by taking the left and right margin into account. The object width will be  $obj_w = w - margin_left - margin_right$ 

### **Parameters**

- **obj**: pointer to an object
- W: new height including margins

# void lv obj set height margin(lv\_obj\_t\*obj, lv\_coord t h)

Set the height of an object by taking the top and bottom margin into account. The object height will be  $obj_h = h$  -  $margin_bottom$ 

#### **Parameters**

- **obj**: pointer to an object
- h: new height including margins

void 
$$lv\_obj\_align(lv\_obj\_t *obj$$
,  $const lv\_obj\_t *base$ ,  $lv\_align\_t align$ ,  $lv\_coord\_t x\_ofs$ ,  $lv\_coord\_t y\_ofs$ )

Align an object to an other object.

### **Parameters**

- obj: pointer to an object to align
- base: pointer to an object (if NULL the parent is used). 'obj' will be aligned to it.
- align: type of alignment (see 'lv\_align\_t' enum)
- x ofs: x coordinate offset after alignment
- y ofs: y coordinate offset after alignment

void 
$$lv\_obj\_align\_origo(lv\_obj\_t *obj\_t *obj\_t *base, lv\_align\_t align, lv\_coord\_t x\_ofs, lv\_coord\_t y\_ofs)$$

Align an object to an other object.

### Parameters

- obj: pointer to an object to align
- base: pointer to an object (if NULL the parent is used). 'obj' will be aligned to it.
- align: type of alignment (see 'lv align t' enum)
- x ofs: x coordinate offset after alignment
- y\_ofs: y coordinate offset after alignment

### void lv obj realign( $lv \ obj \ t * obj$ )

Realign the object based on the last lv obj align parameters.

#### **Parameters**

• **obj**: pointer to an object

# void $lv_obj_set_auto_realign(lv_obj_t*obj, bool en)$

Enable the automatic realign of the object when its size has changed based on the last  $lv\_obj\_align$  parameters.

#### **Parameters**

• **obj**: pointer to an object

• en: true: enable auto realign; false: disable auto realign

Set the size of an extended clickable area

### **Parameters**

- **obj**: pointer to an object
- left: extended clickable are on the left [px]
- right: extended clickable are on the right [px]
- top: extended clickable are on the top [px]
- bottom: extended clickable are on the bottom [px]

# void $lv\_obj\_add\_style(lv\_obj\_t*obj$ , uint8\_t part, $lv\_style\_t*style$ )

Add a new style to the style list of an object.

### **Parameters**

- obj: pointer to an object
- part: the part of the object which style property should be set. E.g. LV\_OBJ\_PART\_MAIN, LV\_BTN\_PART\_MAIN, LV\_SLIDER\_PART\_KNOB
- style: pointer to a style to add (Only its pointer will be saved)

Remove a style from the style list of an object.

#### **Parameters**

- **obj**: pointer to an object
- part: the part of the object which style property should be set. E.g. LV\_OBJ\_PART\_MAIN, LV\_BTN\_PART\_MAIN, LV\_SLIDER\_PART\_KNOB
- style: pointer to a style to remove

# void lv\_obj\_clean\_style\_list(lv\_obj\_t \*obj, uint8\_t part)

Reset a style to the default (empty) state. Release all used memories and cancel pending related transitions. Typically used in 'LV\_SIGN\_CLEAN\_UP.

### Parameters

- **obj**: pointer to an object
- part: the part of the object which style list should be reseted. E.g. LV\_OBJ\_PART\_MAIN,
   LV BTN PART MAIN, LV SLIDER PART KNOB

### void lv obj reset style list(lv\_obj\_t\*obj, uint8 t part)

Reset a style to the default (empty) state. Release all used memories and cancel pending related transitions. Also notifies the object about the style change.

### Parameters

- **obj**: pointer to an object
- part: the part of the object which style list should be reseted. E.g. LV\_OBJ\_PART\_MAIN,
   LV BTN PART MAIN, LV SLIDER PART KNOB

### void lv\_obj\_refresh\_style(lv\_obj\_t \*obj, lv\_style\_property\_t prop)

Notify an object (and its children) about its style is modified

- **obj**: pointer to an object
- prop: LV\_STYLE\_PROP\_ALL or an LV\_STYLE\_... property. It is used to optimize what
  needs to be refreshed.

# void lv\_obj\_report\_style\_mod(lv\_style\_t \*style)

Notify all object if a style is modified

#### **Parameters**

• style: pointer to a style. Only the objects with this style will be notified (NULL to notify all objects)

Set a local style property of a part of an object in a given state.

Note shouldn't be used directly. Use the specific property get functions instead. For example:  $lv\_obj\_style\_get\_border\_opa()$ 

**Note** for performance reasons it's not checked if the property really has color type

#### **Parameters**

- obj: pointer to an object
- part: the part of the object which style property should be set. E.g. LV\_OBJ\_PART\_MAIN, LV\_BTN\_PART\_MAIN, LV\_SLIDER\_PART\_KNOB
- prop: a style property ORed with a state. E.g. LV\_STYLE\_BORDER\_COLOR | (LV\_STATE\_PRESSED << LV\_STYLE\_STATE\_POS)</li>
- the: value to set

$$\label{eq:cobj_set_style_local_int} \begin{tabular}{ll} v_obj\_t * obj, & wint8\_t & type, & v\_style\_property\_t & prop, \\ & v_style\_int\_t & value \end{tabular} \end{tabular}$$

Set a local style property of a part of an object in a given state.

Note shouldn't be used directly. Use the specific property get functions instead. For example: lv\_obj\_style\_get\_border\_opa()

Note for performance reasons it's not checked if the property really has integer type

#### **Parameters**

- obj: pointer to an object
- part: the part of the object which style property should be set. E.g. LV\_OBJ\_PART\_MAIN, LV\_BTN\_PART\_MAIN, LV\_SLIDER\_PART\_KNOB
- prop: a style property ORed with a state. E.g. LV\_STYLE\_BORDER\_WIDTH | (LV\_STATE\_PRESSED << LV\_STYLE\_STATE\_POS)
- the: value to set

$$\label{eq:cobj_set_style_local_opa} \begin{tabular}{ll} void $$_$lv\_obj\_set\_style\_local\_opa($lv\_obj\_t*obj, uint8\_t type, lv\_style\_property\_t prop, lv\_opa\_t opa) \end{tabular}$$

Set a local style property of a part of an object in a given state.

Note shouldn't be used directly. Use the specific property get functions instead. For example: lv\_obj\_style\_get\_border\_opa()

Note for performance reasons it's not checked if the property really has opacity type

### **Parameters**

• **obj**: pointer to an object

- part: the part of the object which style property should be set. E.g. LV\_OBJ\_PART\_MAIN,
   LV BTN PART MAIN, LV SLIDER PART KNOB
- prop: a style property ORed with a state. E.g. LV\_STYLE\_BORDER\_OPA | (LV\_STATE\_PRESSED << LV\_STYLE\_STATE\_POS)</li>
- the: value to set

# void \_lv\_obj\_set\_style\_local\_ptr(lv\_obj\_t \*obj, uint8\_t type, lv\_style\_property\_t prop, const void \*value)

Set a local style property of a part of an object in a given state.

Note shouldn't be used directly. Use the specific property get functions instead. For example: lv obj style get border opa()

Note for performance reasons it's not checked if the property really has pointer type

### **Parameters**

- **obj**: pointer to an object
- part: the part of the object which style property should be set. E.g. LV\_OBJ\_PART\_MAIN, LV\_BTN\_PART\_MAIN, LV\_SLIDER\_PART\_KNOB
- prop: a style property ORed with a state. E.g. LV\_STYLE\_TEXT\_FONT | (LV\_STATE\_PRESSED << LV\_STYLE\_STATE\_POS)</li>
- the: value to set

bool 
$$lv\_obj\_remove\_style\_local\_prop(lv\_obj\_t *obj$$
, uint8\_t part,  $lv\_style\_property\_t prop$ )

Remove a local style property from a part of an object with a given state.

Note shouldn't be used directly. Use the specific property remove functions instead. For example: lv obj style remove border opa()

**Return** true: the property was found and removed; false: the property was not found

# Parameters

- obj: pointer to an object
- part: the part of the object which style property should be removed. E.g. LV OBJ PART MAIN, LV BTN PART MAIN, LV SLIDER PART KNOB
- prop: a style property ORed with a state. E.g. LV\_STYLE\_TEXT\_FONT | (LV\_STATE\_PRESSED << LV\_STYLE\_STATE\_POS)

# void lv\_obj\_set\_hidden(lv\_obj\_t \*obj, bool en)

Hide an object. It won't be visible and clickable.

#### **Parameters**

- **obj**: pointer to an object
- en: true: hide the object

### void lv\_obj\_set\_adv\_hittest(lv\_obj\_t \*obj, bool en)

Set whether advanced hit-testing is enabled on an object

- **obj**: pointer to an object
- en: true: advanced hit-testing is enabled

# void lv\_obj\_set\_click(lv\_obj\_t \*obj, bool en)

Enable or disable the clicking of an object

#### **Parameters**

- obj: pointer to an object
- en: true: make the object clickable

# void $lv_obj_set_top(lv_obj_t * obj, bool en)$

Enable to bring this object to the foreground if it or any of its children is clicked

#### **Parameters**

- obj: pointer to an object
- en: true: enable the auto top feature

### void lv\_obj\_set\_drag(lv\_obj\_t \*obj, bool en)

Enable the dragging of an object

#### **Parameters**

- **obj**: pointer to an object
- en: true: make the object draggable

# void lv\_obj\_set\_drag\_dir(lv\_obj\_t\*obj, lv\_drag\_dir\_t drag\_dir)

Set the directions an object can be dragged in

#### **Parameters**

- **obj**: pointer to an object
- drag\_dir: bitwise OR of allowed drag directions

# void lv\_obj\_set\_drag\_throw(lv\_obj\_t \*obj, bool en)

Enable the throwing of an object after is is dragged

#### **Parameters**

- **obj**: pointer to an object
- en: true: enable the drag throw

# void lv\_obj\_set\_drag\_parent(lv\_obj\_t\*obj, bool en)

Enable to use parent for drag related operations. If trying to drag the object the parent will be moved instead

### **Parameters**

- **obj**: pointer to an object
- en: true: enable the 'drag parent' for the object

# void lv\_obj\_set\_gesture\_parent(lv\_obj\_t \*obj, bool en)

Enable to use parent for gesture related operations. If trying to gesture the object the parent will be moved instead

### **Parameters**

- **obj**: pointer to an object
- en: true: enable the 'gesture parent' for the object

### void lv\_obj\_set\_parent\_event(lv\_obj\_t\*obj, bool en)

Propagate the events to the parent too

### **Parameters**

- **obj**: pointer to an object
- en: true: enable the event propagation

### void lv\_obj\_set\_base\_dir(lv\_obj\_t\*obj, lv\_bidi\_dir\_t dir)

Set the base direction of the object

#### **Parameters**

- obj: pointer to an object
- dir: the new base direction. LV\_BIDI\_DIR\_LTR/RTL/AUTO/INHERIT

# void lv obj add protect(lv\_obj\_t\*obj, uint8 t prot)

Set a bit or bits in the protect filed

### **Parameters**

- obj: pointer to an object
- prot: 'OR'-ed values from lv\_protect\_t

# void lv\_obj\_clear\_protect(lv\_obj\_t\*obj, uint8\_t prot)

Clear a bit or bits in the protect filed

### **Parameters**

- **obj**: pointer to an object
- prot: 'OR'-ed values from lv protect t

# void lv\_obj\_set\_state(lv\_obj\_t \*obj, lv\_state\_t state)

Set the state (fully overwrite) of an object. If specified in the styles a transition animation will be started from the previous state to the current

### **Parameters**

- **obj**: pointer to an object
- state: the new state

### void lv obj add state(lv\_obj\_t\*obj, lv\_state\_t state)

Add a given state or states to the object. The other state bits will remain unchanged. If specified in the styles a transition animation will be started from the previous state to the current

#### **Parameters**

- obj: pointer to an object
- state: the state bits to add. E.g LV STATE PRESSED | LV STATE FOCUSED

```
void lv obj clear state(lv obj t *obj, lv state t state)
```

Remove a given state or states to the object. The other state bits will remain unchanged. If specified in the styles a transition animation will be started from the previous state to the current

### **Parameters**

- **obj**: pointer to an object
- state: the state bits to remove. E.g LV\_STATE\_PRESSED | LV\_STATE\_FOCUSED

# void lv\_obj\_finish\_transitions(lv\_obj\_t \*obj, uint8\_t part)

Finish all pending transitions on a part of an object

- **obj**: pointer to an object
- part: part of the object, e.g LV BRN PART MAIN or LV OBJ PART ALL for all parts

# void lv\_obj\_set\_event\_cb(lv\_obj\_t\*obj, lv\_event\_cb\_t event\_cb)

Set a an event handler function for an object. Used by the user to react on event which happens with the object.

### **Parameters**

- **obj**: pointer to an object
- event cb: the new event function

```
lv_res_t lv_event_send(lv_obj_t *obj, lv_event_t event, const void *data)
```

Send an event to the object

Return LV\_RES\_OK: obj was not deleted in the event; LV\_RES\_INV: obj was deleted in the event

### **Parameters**

- **obj**: pointer to an object
- event: the type of the event from lv\_event\_t.
- data: arbitrary data depending on the object type and the event. (Usually NULL)

$$lv\_res\_t$$
  $lv\_event\_send\_func(lv\_event\_cb\_t event\_xcb, lv\_obj\_t *obj, lv\_event\_t event, const void *data)$ 

Call an event function with an object, event, and data.

Return LV\_RES\_OK: obj was not deleted in the event; LV\_RES\_INV: obj was deleted in the event

### Parameters

- event\_xcb: an event callback function. If NULL LV\_RES\_0K will return without any actions. (the 'x' in the argument name indicates that its not a fully generic function because it not follows the func name(object, callback, ...) convention)
- obj: pointer to an object to associate with the event (can be NULL to simply call the event cb)
- event: an event
- data: pointer to a custom data

### const void \*lv event get data(void)

Get the data parameter of the current event

Return the data parameter

```
void lv_obj_set_signal_cb(lv_obj_t*obj, lv_signal_cb_t signal_cb)
```

Set the a signal function of an object. Used internally by the library. Always call the previous signal function in the new.

### **Parameters**

- **obj**: pointer to an object
- **signal cb**: the new signal function

```
lv_res_t lv_signal_send(lv_obj_t*obj, lv_signal_t signal, void *param)
```

Send an event to the object

Return LV RES OK or LV RES INV

### **Parameters**

- **obj**: pointer to an object
- event: the type of the event from lv\_event\_t.

# void lv\_obj\_set\_design\_cb(lv\_obj\_t\*obj, lv\_design\_cb\_t design\_cb)

Set a new design function for an object

#### **Parameters**

- obj: pointer to an object
- design cb: the new design function

# void \*lv\_obj\_allocate\_ext\_attr(lv\_obj\_t \*obj, uint16\_t ext\_size)

Allocate a new ext. data for an object

Return pointer to the allocated ext

### **Parameters**

- obj: pointer to an object
- ext\_size: the size of the new ext. data

# void lv\_obj\_refresh\_ext\_draw\_pad(lv\_obj\_t \*obj)

Send a 'LV\_SIGNAL\_REFR\_EXT\_SIZE' signal to the object to refresh the extended draw area. he object needs to be invalidated by lv\_obj\_invalidate(obj) manually after this function.

#### **Parameters**

• **obj**: pointer to an object

# $lv\_obj\_t *lv\_obj\_get\_screen(const lv\_obj\_t *obj)$

Return with the screen of an object

Return pointer to a screen

#### **Parameters**

• **obj**: pointer to an object

# lv\_disp\_t \*lv\_obj\_get\_disp(const lv\_obj\_t \*obj)

Get the display of an object

Return pointer the object's display

### lv\_obj\_t \*lv\_obj\_get\_parent(const lv\_obj\_t \*obj)

Returns with the parent of an object

**Return** pointer to the parent of 'obj'

### **Parameters**

• **obj**: pointer to an object

# lv\_obj\_t \*lv\_obj\_get\_child(const lv\_obj\_t \*obj, const lv\_obj\_t \*child)

Iterate through the children of an object (start from the "youngest, lastly created")

Return the child after 'act child' or NULL if no more child

- **obj**: pointer to an object
- child: NULL at first call to get the next children and the previous return value later

# lv\_obj\_t \*lv\_obj\_get\_child\_back(const lv\_obj\_t \*obj, const lv\_obj\_t \*child)

Iterate through the children of an object (start from the "oldest", firstly created)

Return the child after 'act child' or NULL if no more child

#### **Parameters**

- **obj**: pointer to an object
- child: NULL at first call to get the next children and the previous return value later

# uint16\_t lv\_obj\_count\_children(const lv\_obj\_t \*obj)

Count the children of an object (only children directly on 'obj')

Return children number of 'obj'

#### **Parameters**

• **obj**: pointer to an object

# uint16\_t lv\_obj\_count\_children\_recursive(const lv\_obj\_t \*obj)

Recursively count the children of an object

Return children number of 'obj'

#### **Parameters**

• **obj**: pointer to an object

# void lv\_obj\_get\_coords(const lv\_obj\_t \*obj, lv\_area\_t \*cords\_p)

Copy the coordinates of an object to an area

#### **Parameters**

- **obj**: pointer to an object
- cords\_p: pointer to an area to store the coordinates

# void lv\_obj\_get\_inner\_coords(const lv\_obj\_t \*obj, lv\_area\_t \*coords\_p)

Reduce area retried by  $lv\_obj\_get\_coords()$  the get graphically usable area of an object. (Without the size of the border or other extra graphical elements)

# Parameters

• coords\_p: store the result area here

# lv\_coord\_t lv\_obj\_get\_x(const lv\_obj\_t \*obj)

Get the x coordinate of object

Return distance of 'obj' from the left side of its parent

### **Parameters**

• **obj**: pointer to an object

# lv\_coord\_t lv\_obj\_get\_y(const lv\_obj\_t \*obj)

Get the y coordinate of object

Return distance of 'obj' from the top of its parent

#### **Parameters**

• **obj**: pointer to an object

# lv\_coord\_t lv\_obj\_get\_width(const lv\_obj\_t \*obj)

Get the width of an object

Return the width

### **Parameters**

• **obj**: pointer to an object

# lv\_coord\_t lv\_obj\_get\_height(const lv\_obj\_t \*obj)

Get the height of an object

Return the height

#### **Parameters**

• obj: pointer to an object

# lv\_coord\_t lv\_obj\_get\_width\_fit(const lv\_obj\_t \*obj)

Get that width reduced by the left and right padding.

Return the width which still fits into the container

### **Parameters**

• **obj**: pointer to an object

# $lv\_coord\_t$ $lv\_obj\_get\_height\_fit(const$ $lv\_obj\_t$ \*obj)

Get that height reduced by the top an bottom padding.

**Return** the height which still fits into the container

### **Parameters**

• **obj**: pointer to an object

### lv\_coord\_t lv\_obj\_get\_height\_margin(lv\_obj\_t \*obj)

Get the height of an object by taking the top and bottom margin into account. The returned height will be obj\_h + margin\_top + margin\_bottom

Return the height including thee margins

### **Parameters**

• **obj**: pointer to an object

### lv coord t lv obj get width margin(lv\_obj\_t \*obj)

Get the width of an object by taking the left and right margin into account. The returned width will be obj w + margin left + margin right

Return the height including thee margins

#### **Parameters**

• obj: pointer to an object

### ly coord t lv obj get width grid(lv obj t\*obj, uint8 t div, uint8 t span)

Divide the width of the object and get the width of a given number of columns. Take paddings into account.

**Return** the width according to the given parameters

- **obj**: pointer to an object
- div: indicates how many columns are assumed. If 1 the width will be set the parent's width If 2 only half parent width inner padding of the parent If 3 only third parent width 2 \* inner padding of the parent
- span: how many columns are combined

lv\_coord\_t lv\_obj\_get\_height\_grid(lv\_obj\_t\*obj, uint8\_t div, uint8\_t span)

Divide the height of the object and get the width of a given number of columns. Take paddings into account.

Return the height according to the given parameters

### **Parameters**

- obj: pointer to an object
- div: indicates how many rows are assumed. If 1 the height will be set the parent's height
   If 2 only half parent height inner padding of the parent If 3 only third parent height 2 \*
   inner padding of the parent
- span: how many rows are combined

# bool lv\_obj\_get\_auto\_realign(const $lv\_obj\_t *obj$ )

Get the automatic realign property of the object.

Return true: auto realign is enabled; false: auto realign is disabled

#### **Parameters**

• obj: pointer to an object

# lv\_coord\_t lv\_obj\_get\_ext\_click\_pad\_left(const lv\_obj\_t \*obj)

Get the left padding of extended clickable area

Return the extended left padding

#### **Parameters**

• obj: pointer to an object

# $lv\_coord\_t$ $lv\_obj\_get\_ext\_click\_pad\_right(const$ $lv\_obj\_t$ \*obj)

Get the right padding of extended clickable area

Return the extended right padding

#### **Parameters**

• obj: pointer to an object

# lv\_coord\_t lv\_obj\_get\_ext\_click\_pad\_top(const lv\_obj\_t \*obj)

Get the top padding of extended clickable area

**Return** the extended top padding

#### **Parameters**

• **obj**: pointer to an object

# lv\_coord\_t lv\_obj\_get\_ext\_click\_pad\_bottom(const lv\_obj\_t \*obj)

Get the bottom padding of extended clickable area

Return the extended bottom padding

### **Parameters**

• obj: pointer to an object

# $lv\_coord\_t$ $lv\_obj\_get\_ext\_draw\_pad(const$ $lv\_obj\_t$ \*obj)

Get the extended size attribute of an object

Return the extended size attribute

• **obj**: pointer to an object

lv\_style\_list\_t \*lv\_obj\_get\_style\_list(const lv\_obj\_t \*obj, uint8\_t part)

Get the style list of an object's part.

**Return** pointer to the style list. (Can be NULL)

#### **Parameters**

- **obj**: pointer to an object.
- part: part the part of the object which style list should be get. E.g. LV\_OBJ\_PART\_MAIN,
   LV BTN PART MAIN, LV SLIDER PART KNOB

Get a style property of a part of an object in the object's current state. If there is a running transitions it is taken into account

**Return** the value of the property of the given part in the current state. If the property is not found a default value will be returned.

Note shouldn't be used directly. Use the specific property get functions instead. For example: lv obj style get border width()

Note for performance reasons it's not checked if the property really has integer type

#### **Parameters**

- obj: pointer to an object
- part: the part of the object which style property should be get. E.g. LV\_OBJ\_PART\_MAIN, LV BTN PART MAIN, LV SLIDER PART KNOB
- prop: the property to get. E.g. LV\_STYLE\_BORDER\_WIDTH. The state of the object will be added internally

$$lv\_color\_t\_lv\_obj\_get\_style\_color(const\ lv\_obj\_t\ *obj$$
, uint8\_t  $part$ ,  $lv\_style\_property\_t$   $prop$ )

Get a style property of a part of an object in the object's current state. If there is a running transitions it is taken into account

**Return** the value of the property of the given part in the current state. If the property is not found a default value will be returned.

Note shouldn't be used directly. Use the specific property get functions instead. For example:  $lv\_obj\_style\_get\_border\_color()$ 

Note for performance reasons it's not checked if the property really has color type

### **Parameters**

- **obj**: pointer to an object
- part: the part of the object which style property should be get. E.g. LV\_OBJ\_PART\_MAIN, LV\_BTN\_PART\_MAIN, LV\_SLIDER\_PART\_KNOB
- prop: the property to get. E.g. LV\_STYLE\_BORDER\_COLOR. The state of the object will be added internally

$$lv\_opa\_t\_lv\_obj\_get\_style\_opa(const lv\_obj\_t *obj, uint8\_t part, lv\_style\_property\_t prop)$$

Get a style property of a part of an object in the object's current state. If there is a running transitions it is taken into account

**Return** the value of the property of the given part in the current state. If the property is not found a default value will be returned.

Note shouldn't be used directly. Use the specific property get functions instead. For example: lv\_obj\_style\_get\_border\_opa()

Note for performance reasons it's not checked if the property really has opacity type

#### **Parameters**

- **obj**: pointer to an object
- part: the part of the object which style property should be get. E.g. LV\_OBJ\_PART\_MAIN,
   LV BTN PART MAIN, LV SLIDER PART KNOB
- prop: the property to get. E.g. LV\_STYLE\_BORDER\_OPA. The state of the object will be added internally

Get a style property of a part of an object in the object's current state. If there is a running transitions it is taken into account

**Return** the value of the property of the given part in the current state. If the property is not found a default value will be returned.

Note shouldn't be used directly. Use the specific property get functions instead. For example: lv\_obj\_style\_get\_border\_opa()

Note for performance reasons it's not checked if the property really has pointer type

#### **Parameters**

- **obj**: pointer to an object
- part: the part of the object which style property should be get. E.g. LV\_OBJ\_PART\_MAIN, LV\_BTN\_PART\_MAIN, LV\_SLIDER\_PART\_KNOB
- prop: the property to get. E.g. LV\_STYLE\_TEXT\_FONT. The state of the object will be added internally

```
lv\_style\_t *lv\_obj\_get\_local\_style(lv\_obj\_t *obj, uint8_t part)
```

Get the local style of a part of an object.

**Return** pointer to the local style if exists else NULL.

### Parameters

- obj: pointer to an object
- part: the part of the object which style property should be set. E.g. LV\_OBJ\_PART\_MAIN,
   LV BTN PART MAIN, LV SLIDER PART KNOB

```
bool lv obj get hidden(const lv_obj_t*obj)
```

Get the hidden attribute of an object

Return true: the object is hidden

### **Parameters**

• **obj**: pointer to an object

### bool lv obj get adv hittest(const lv\_obj\_t\*obj)

Get whether advanced hit-testing is enabled on an object

Return true: advanced hit-testing is enabled

### **Parameters**

• **obj**: pointer to an object

# bool lv\_obj\_get\_click(const lv\_obj\_t \*obj)

Get the click enable attribute of an object

Return true: the object is clickable

#### **Parameters**

• obj: pointer to an object

# bool lv\_obj\_get\_top(const lv\_obj\_t \*obj)

Get the top enable attribute of an object

Return true: the auto top feature is enabled

### **Parameters**

• **obj**: pointer to an object

# bool lv\_obj\_get\_drag(const lv\_obj\_t \*obj)

Get the drag enable attribute of an object

Return true: the object is draggable

### **Parameters**

• **obj**: pointer to an object

# lv\_drag\_dir\_t lv\_obj\_get\_drag\_dir(const lv\_obj\_t \*obj)

Get the directions an object can be dragged

Return bitwise OR of allowed directions an object can be dragged in

### Parameters

• obj: pointer to an object

# bool lv\_obj\_get\_drag\_throw(const lv\_obj\_t \*obj)

Get the drag throw enable attribute of an object

Return true: drag throw is enabled

### Parameters

• **obj**: pointer to an object

### bool lv\_obj\_get\_drag\_parent(const lv\_obj\_t \*obj)

Get the drag parent attribute of an object

Return true: drag parent is enabled

### **Parameters**

• obj: pointer to an object

### bool lv obj get parent event(const lv\_obj\_t\*obj)

Get the drag parent attribute of an object

**Return** true: drag parent is enabled

### Parameters

• obj: pointer to an object

### bool lv\_obj\_get\_gesture\_parent(const lv\_obj\_t \*obj)

Get the gesture parent attribute of an object

Return true: gesture parent is enabled

#### **Parameters**

• **obj**: pointer to an object

lv\_bidi\_dir\_t lv\_obj\_get\_base\_dir(const lv\_obj\_t \*obj)

# uint8 t lv obj get protect(const lv obj t\*obj)

Get the protect field of an object

Return protect field ('OR'ed values of lv\_protect\_t)

### **Parameters**

• obj: pointer to an object

# bool lv\_obj\_is\_protected(const lv\_obj\_t \*obj, uint8\_t prot)

Check at least one bit of a given protect bitfield is set

Return false: none of the given bits are set, true: at least one bit is set

#### **Parameters**

- **obj**: pointer to an object
- prot: protect bits to test ('OR'ed values of lv protect t)

lv\_state\_t lv\_obj\_get\_state(const lv\_obj\_t \*obj, uint8\_t part)

$$lv\_signal\_cb\_t$$
 lv\_obj\_get\_signal\_cb(const  $lv\_obj\_t *obj$ )

Get the signal function of an object

Return the signal function

### **Parameters**

• obj: pointer to an object

# lv\_design\_cb\_t lv\_obj\_get\_design\_cb(const lv\_obj\_t \*obj)

Get the design function of an object

Return the design function

### **Parameters**

• **obj**: pointer to an object

### lv\_event\_cb\_t lv\_obj\_get\_event\_cb(const lv\_obj\_t \*obj)

Get the event function of an object

Return the event function

### **Parameters**

• obj: pointer to an object

# bool lv\_obj\_is\_point\_on\_coords(lv\_obj\_t\*obj, const lv\_point\_t\*point)

Check if a given screen-space point is on an object's coordinates.

This method is intended to be used mainly by advanced hit testing algorithms to check whether the point is even within the object (as an optimization).

- **obj**: object to check
- point: screen-space point

# bool lv\_obj\_hittest(lv\_obj\_t \*obj, lv\_point\_t \*point)

Hit-test an object given a particular point in screen space.

Return true if the object is considered under the point

#### **Parameters**

- **obj**: object to hit-test
- point: screen-space point

# void \*lv\_obj\_get\_ext\_attr(const lv\_obj\_t \*obj)

Get the ext pointer

Return the ext pointer but not the dynamic version Use it as ext->data1, and NOT da(ext)->data1

#### **Parameters**

• **obj**: pointer to an object

# void lv\_obj\_get\_type(const lv\_obj\_t \*obj, lv\_obj\_type\_t \*buf)

Get object's and its ancestors type. Put their name in  $type\_buf$  starting with the current type. E.g.  $buf.type[0]="lv\_btn"$ ,  $buf.type[1]="lv\_cont"$ ,  $buf.type[2]="lv\_obj"$ 

### **Parameters**

- obj: pointer to an object which type should be get
- buf: pointer to an  $lv\_obj\_type\_t$  buffer to store the types

Get the object's user data

Return user data

### Parameters

• obj: pointer to an object

# lv\_obj\_user\_data\_t \*lv\_obj\_get\_user\_data\_ptr(const lv\_obj\_t \*obj)

Get a pointer to the object's user data

Return pointer to the user data

### Parameters

• **obj**: pointer to an object

# void lv\_obj\_set\_user\_data(lv\_obj\_t \*obj, lv\_obj\_user\_data\_t data)

Set the object's user data. The data will be copied.

### **Parameters**

- **obj**: pointer to an object
- data: user data

# void $*lv_obj_get_group(const lv_obj_t *obj)$

Get the group of the object

**Return** the pointer to group of the object

# Parameters

• obj: pointer to an object

### bool lv obj is focused(const $lv \ obj \ t * obj$ )

Tell whether the object is the focused object of a group or not.

Return true: the object is focused, false: the object is not focused or not in a group

#### **Parameters**

• **obj**: pointer to an object

 $lv\_res\_t$   $lv\_obj\_handle\_get\_type\_signal(lv\_obj\_type\_t*buf, const char*name)$ 

Used in the signal callback to handle LV\_SIGNAL\_GET\_TYPE signal

Return LV RES OK

### **Parameters**

- buf: pointer to lv\_obj\_type\_t. (param in the signal callback)
- name: name of the object. E.g. "lv\_btn". (Only the pointer is saved)

void 
$$lv\_obj\_init\_draw\_rect\_dsc(lv\_obj\_t *obj, uint8\_t type, lv\_draw\_rect\_dsc\_t *draw\_dsc)$$

Initialize a rectangle descriptor from an object's styles

Note Only the relevant fields will be set. E.g. if border width == 0 the other border properties won't be evaluated.

#### **Parameters**

- **obj**: pointer to an object
- type: type of style. E.g. LV\_OBJ\_PART\_MAIN, LV\_BTN\_SLIDER\_KOB
- draw\_dsc: the descriptor the initialize

$$\label{eq:void_lv_obj_init_draw_img_dsc(lv_obj_t*obj, uint8_t part, lv_draw_img_dsc_t*draw_dsc)} \\ \text{void} \\ \text{lv\_obj\_init\_draw\_img\_dsc(lv\_obj\_t*obj, uint8\_t part, lv\_draw\_img\_dsc_t*draw\_dsc)} \\ \text{void} \\ \text{lv\_obj\_init\_draw\_img\_dsc_t*draw\_img\_d$$

void 
$$lv_obj_init_draw_line_dsc(lv_obj_t *obj_ uint8_t part, lv_draw_line_dsc_t *draw_dsc)$$

lv\_coord\_t lv\_obj\_get\_draw\_rect\_ext\_pad\_size(lv\_obj\_t\*obj, uint8\_t part)

Get the required extra size (around the object's part) to draw shadow, outline, value etc.

#### **Parameters**

- **obj**: pointer to an object
- part: part of the object

Fade in (from transparent to fully cover) an object and all its children using an opa scale animation.

#### **Parameters**

- **obj**: the object to fade in
- time: duration of the animation [ms]
- delay: wait before the animation starts [ms]

### void **lv\_obj\_fade\_out**(lv\_obj\_t \*obj, uint32\_t time, uint32\_t delay)

Fade out (from fully cover to transparent) an object and all its children using an opa scale animation.

- **obj**: the object to fade in
- time: duration of the animation [ms]

```
• delay: wait before the animation starts [ms]
bool lv_debug_check_obj_type(const lv_obj_t *obj, const char *obj_type)
     Check if any object has a given type
     Return true: valid
     Parameters
           • obj: pointer to an object
           • obj type: type of the object. (e.g. "lv_btn")
bool lv_debug_check_obj_valid(const lv\_obj\_t *obj)
     Check if any object is still "alive", and part of the hierarchy
     Return true: valid
     Parameters
           • obj: pointer to an object
           • obj type: type of the object. (e.g. "lv btn")
struct lv_realign_t
     Public Members
     const struct lv \ obj \ t *base
     lv_coord_t xofs
     lv_coord_t yofs
     lv_align_t align
     uint8_t auto_realign
     uint8 t origo align
          1: the origo (center of the object) was aligned with lv obj align origo
struct _lv_obj_t
     Public Members
     struct _lv_obj_t *parent
         Pointer to the parent object
     lv ll t child ll
         Linked list to store the children objects
     lv area t coords
         Coordinates of the object (x1, y1, x2, y2)
     lv\_event\_cb\_t event_cb
          Event callback function
     lv signal cb t signal cb
          Object type specific signal function
     lv_design_cb_t design_cb
          Object type specific design function
```

### void \*ext attr

Object type specific extended data

### lv\_style\_list\_t style\_list

### uint8\_t ext\_click\_pad\_hor

Extra click padding in horizontal direction

### uint8\_t ext\_click\_pad\_ver

Extra click padding in vertical direction

# lv\_area\_t ext\_click\_pad

Extra click padding area.

### lv coord t ext draw pad

EXTend the size in every direction for drawing.

### uint8 t click

1: Can be pressed by an input device

### uint8\_t drag

1: Enable the dragging

### uint8\_t drag\_throw

1: Enable throwing with drag

# uint8\_t drag\_parent

1: Parent will be dragged instead

# uint8\_t hidden

1: Object is hidden

### uint8\_t top

1: If the object or its children is clicked it goes to the foreground

### uint8 t parent event

1: Send the object's events to the parent too.

### uint8 t adv hittest

1: Use advanced hit-testing (slower)

### uint8 t gesture parent

1: Parent will be gesture instead

# lv\_drag\_dir\_t drag\_dir

Which directions the object can be dragged in

### lv\_bidi\_dir\_t base\_dir

Base direction of texts related to this object

### void \*group\_p

### uint8 t protect

Automatically happening actions can be prevented. 'OR'ed values from lv\_protect\_t

### lv state t state

### lv\_realign\_t realign

Information about the last call to  $lv\_obj\_align$ .

### lv\_obj\_user\_data\_t user\_data

Custom user data for object.

```
struct lv obj type t
     #include \langle lv\_obj.h \rangle Used by lv\_obj\_get\_type(). The object's and its ancestor types are stored
     Public Members
     const char *type[LV_MAX_ANCESTOR_NUM]
         [0]: the actual type, [1]: ancestor, [2] #1's ancestor ... [x]: "lv_obj"
struct lv_hit_test_info_t
     Public Members
     lv point t *point
     bool result
struct lv_get_style_info_t
     Public Members
     uint8 t part
     lv style list t *result
struct lv_get_state_info_t
     Public Members
     uint8_t part
     lv state t result
```

# 5.2 Arc (lv\_arc)

# 5.2.1 Overview

The Arc are consists of a background and a foreground arc. Both can have start and end angles and thickness.

### 5.2.2 Parts and Styles

The Arc's main part is called LV\_ARC\_PART\_MAIN. It draws a background using the typical background style properties and an arc using the *line* style properties. The arc's size and position will respect the *padding* style properties.

LV\_ARC\_PART\_INDIC is virtual part and it draws an other arc using the *line* style proeprties. It's padding values are interpreted relative to the background arc. The radius of the indicator arc will be modified according to the greatest padding value.

# **5.2.3** Usage

### **Angles**

To set the angles of the background, use the <code>lv\_arc\_set\_bg\_angles(arc, start\_angle, end\_angle)</code> function or <code>lv\_arc\_set\_bg\_start/end\_angle(arc, start\_angle)</code>. Zero degree is at the middle right (3 o'clock) of the object and the degrees are increasing in a clockwise direction. The angles should be in <code>[0;360]</code> range.

Similarly, lv\_arc\_set\_angles(arc, start\_angle, end\_angle) function or lv\_arc\_set\_start/end\_angle(arc, start\_angle) sets the angles of the indicator arc.

### **5.2.4 Events**

Only the Generic events are sent by the object type.

Learn more about *Events*.

# 5.2.5 Keys

No *Keys* are processed by the object type.

Learn more about Keys.

# 5.2.6 Example

C

### Simple Arc



code

```
#include "../../lv_examples.h"

#if LV_USE_ARC

void lv_ex_arc_1(void)
{
    /*Create an Arc*/
    lv_obj_t * arc = lv_arc_create(lv_scr_act(), NULL);
    lv_arc_set_end_angle(arc, 200);
    lv_obj_set_size(arc, 150, 150);
    lv_obj_align(arc, NULL, LV_ALIGN_CENTER, 0, 0);
}

#endif
```

### Loader with Arc



code

(continues on next page)

(continued from previous page)

```
if(a >= 270 + 360) {
        lv_task_del(t);
        return;
    }
}

/**
    * Create an arc which acts as a loader.
    */
void lv_ex_arc_2(void)
{
    /*Create an Arc*/
    lv_obj_t * arc = lv_arc_create(lv_scr_act(), NULL);
    lv_arc_set_bg_angles(arc, 0, 360);
    lv_arc_set_angles(arc, 270, 270);
    lv_obj_align(arc, NULL, LV_ALIGN_CENTER, 0, 0);

/* Create an `lv_task` to update the arc.
    * Store the `arc` in the user data*/
    lv_task_create(arc_loader, 20, LV_TASK_PRIO_LOWEST, arc);
}

#endif
```

### MicroPython

No examples yet.

### 5.2.7 API

### **Typedefs**

```
typedef uint8_t lv_arc_part_t
```

### **Enums**

```
enum [anonymous]
     Values:

LV_ARC_PART_BG = LV_OBJ_PART_MAIN

LV_ARC_PART_INDIC
    _LV_ARC_PART_VIRTUAL_LAST

_LV_ARC_PART_REAL_LAST = _LV_OBJ_PART_REAL_LAST
```

### **Functions**

```
lv\_obj\_t *lv\_arc\_create(lv\_obj\_t *par, const lv\_obj\_t *copy)
Create a arc objects
```

Return pointer to the created arc

#### **Parameters**

- par: pointer to an object, it will be the parent of the new arc
- copy: pointer to a arc object, if not NULL then the new object will be copied from it

```
void lv arc set start angle(lv_obj_t *arc, uint16 t start)
```

Set the start angle of an arc. 0 deg: right, 90 bottom, etc.

### **Parameters**

- arc: pointer to an arc object
- start: the start angle

### void lv arc set end angle(lv\_obj\_t \*arc, uint16 t end)

Set the start angle of an arc. 0 deg: right, 90 bottom, etc.

### **Parameters**

- arc: pointer to an arc object
- end: the end angle

### void lv\_arc\_set\_angles(lv\_obj\_t \*arc, uint16\_t start, uint16\_t end)

Set the start and end angles

### **Parameters**

- arc: pointer to an arc object
- start: the start angle
- end: the end angle

# void lv\_arc\_set\_bg\_start\_angle(lv\_obj\_t \*arc, uint16\_t start)

Set the start angle of an arc background. 0 deg: right, 90 bottom, etc.

#### **Parameters**

- arc: pointer to an arc object
- start: the start angle

# void lv\_arc\_set\_bg\_end\_angle(lv\_obj\_t \*arc, uint16\_t end)

Set the start angle of an arc background. 0 deg: right, 90 bottom etc.

### **Parameters**

- arc: pointer to an arc object
- end: the end angle

# void lv\_arc\_set\_bg\_angles(lv\_obj\_t \*arc, uint16\_t start, uint16\_t end)

Set the start and end angles of the arc background

### **Parameters**

- arc: pointer to an arc object
- start: the start angle
- end: the end angle

### void lv arc set rotation( $lv \ obj \ t *arc$ , uint16 t rotation angle)

Set the rotation for the whole arc

### **Parameters**

- arc: pointer to an arc object
- rotation\_angle: rotation angle

# uint16\_t lv\_arc\_get\_angle\_start(lv\_obj\_t \*arc)

Get the start angle of an arc.

**Return** the start angle [0..360]

### **Parameters**

• arc: pointer to an arc object

# uint16\_t lv\_arc\_get\_angle\_end(lv\_obj\_t \*arc)

Get the end angle of an arc.

**Return** the end angle [0..360]

### **Parameters**

• arc: pointer to an arc object

# uint16\_t lv\_arc\_get\_bg\_angle\_start(lv\_obj\_t \*arc)

Get the start angle of an arc background.

**Return** the start angle [0..360]

### **Parameters**

• arc: pointer to an arc object

# $uint16\_t$ lv\_arc\_get\_bg\_angle\_end( $lv\_obj\_t$ \*arc)

Get the end angle of an arc background.

**Return** the end angle [0..360]

### **Parameters**

• arc: pointer to an arc object

# struct lv\_arc\_ext\_t

### **Public Members**

```
uint16_t rotation_angle
uint16_t arc_angle_start
uint16_t arc_angle_end
uint16_t bg_angle_start
uint16_t bg_angle_end
lv_style_list_t style_arc
```

# 5.3 Bar (lv\_bar)

### 5.3.1 Overview

The bar object has a background and an indicator on it. The width of the indicator is set according to the current value of the bar.

Vertical bars can be created if the width of the object is smaller than its height.

Not only end, but the start value of the bar can be set which changes the start position of the indicator.

# 5.3.2 Parts and Styles

The Bar's main part is called LV\_BAR\_PART\_BG and it uses the typical background style properties.

LV\_BAR\_PART\_INDIC is a virtual part which also uses all the typical background properties. By default the indicator maximal size is the same as the background's size but setting positive padding values in LV\_BAR\_PART\_BG will make the indicator smaller. (negative values will make it larger) If the *value* style property is used on the indicator the alignment will be calculated based on the current size of the indicator. For example a center aligned value is always shown in the middle of the indicator regardless it's current size.

# **5.3.3** Usage

### Value and range

A new value can be set by <code>lv\_bar\_set\_value(bar, new\_value, LV\_ANIM\_ON/OFF)</code>. The value is interpreted in a range (minimum and maximum values) which can be modified with <code>lv\_bar\_set\_range(bar, min, max)</code>. The default range is 1..100.

The new value in <code>lv\_bar\_set\_value</code> can be set with or without an animation depending on the last parameter (<code>LV\_ANIM\_ON/OFF</code>). The time of the animation can be adjusted by <code>lv\_bar\_set\_anim\_time(bar, 100)</code>. The time is in milliseconds unit.

It's also possible to set the start value of the bar using  $lv\_bar\_set\_start\_value(bar, new\_value, LV\_ANIM\_ON/OFF)$ 

#### Modes

The bar can be drawn symmetrical to zero (drawn from zero, left to right), if it's enabled with  $lv\_bar\_set\_type(bar, LV\_BAR\_TYPE\_SYMMETRICAL)$ .

## **5.3.4 Events**

Only the Generic events are sent by the object type.

Learn more about *Events*.

### 5.3.5 Keys


No *Keys* are processed by the object type.

Learn more about Keys.

# 5.3.6 Example

C

### Simple Bar

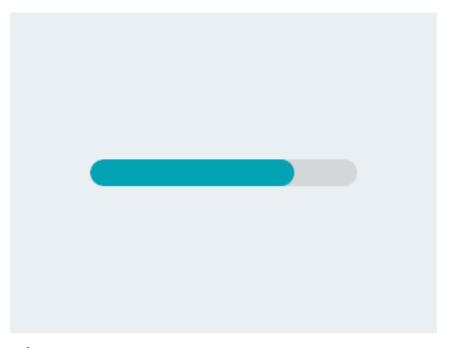

code

```
#include "../../lv_examples.h"
#if LV_USE_BAR

void lv_ex_bar_1(void)
{
    lv_obj_t * bar1 = lv_bar_create(lv_scr_act(), NULL);
    lv_obj_set_size(bar1, 200, 20);
    lv_obj_align(bar1, NULL, LV_ALIGN_CENTER, 0, 0);
    lv_bar_set_anim_time(bar1, 2000);
    lv_bar_set_value(bar1, 100, LV_ANIM_ON);
}
#endif
#endif
```

# MicroPython

No examples yet.

# 5.3.7 API

# **Typedefs**

```
\label{typedef} typedef \ \operatorname{uint8\_t} \ lv\_bar\_type\_t
```

# typedef uint8\_t lv\_bar\_part\_t

### **Enums**

# enum [anonymous]

Values:

LV\_BAR\_TYPE\_NORMAL

LV\_BAR\_TYPE\_SYMMETRICAL

LV\_BAR\_TYPE\_CUSTOM

# enum [anonymous]

Bar parts

Values:

LV BAR PART BG

### LV BAR PART INDIC

Bar background style.

# LV BAR PART VIRTUAL LAST

Bar fill area style.

#### **Functions**

```
lv_obj_t *lv_bar_create(lv_obj_t *par, const lv_obj_t *copy)
```

Create a bar objects

Return pointer to the created bar

#### **Parameters**

- par: pointer to an object, it will be the parent of the new bar
- copy: pointer to a bar object, if not NULL then the new object will be copied from it

```
void lv_bar_set_value(lv_obj_t*bar, int16_t value, lv_anim_enable_t anim)
```

Set a new value on the bar

### **Parameters**

- bar: pointer to a bar object
- value: new value
- anim: LV\_ANIM\_ON: set the value with an animation; LV\_ANIM\_OFF: change the value immediately

```
void lv bar_set_start_value(lv_obj_t*bar, int16_t start_value, lv_anim_enable_t anim)
```

Set a new start value on the bar

# Parameters

- bar: pointer to a bar object
- value: new start value
- anim: LV\_ANIM\_ON: set the value with an animation; LV\_ANIM\_OFF: change the value immediately

```
void lv\_bar\_set\_range(lv\_obj\_t*bar, int16\_t min, int16\_t max)
     Set minimum and the maximum values of a bar
     Parameters
           • bar: pointer to the bar object
           • min: minimum value
           • max: maximum value
void lv_bar_set_type(lv_obj_t *bar, lv_bar_type_t type)
     Set the type of bar.
     Parameters
           • bar: pointer to bar object
           • type: bar type
void lv_bar_set_anim_time(lv_obj_t *bar, uint16_t anim_time)
     Set the animation time of the bar
     Parameters
           • bar: pointer to a bar object
           • anim time: the animation time in milliseconds.
int16 tlv bar get value(const lv obj t*bar)
     Get the value of a bar
     Return the value of the bar
     Parameters
           • bar: pointer to a bar object
int16 t lv bar get start value(const lv_obj_t*bar)
     Get the start value of a bar
     Return the start value of the bar
     Parameters
           • bar: pointer to a bar object
int16_t lv_bar_get_min_value(const lv_obj_t *bar)
     Get the minimum value of a bar
     Return the minimum value of the bar
     Parameters
           • bar: pointer to a bar object
int16 t lv bar get max value(const lv_obj_t*bar)
     Get the maximum value of a bar
     Return the maximum value of the bar
     Parameters
           • bar: pointer to a bar object
lv bar type t lv bar get type(lv obj t*bar)
     Get the type of bar.
```

**Return** bar type

### **Parameters**

• bar: pointer to bar object

```
uint16_t lv_bar_get_anim_time(const lv_obj_t *bar)
```

Get the animation time of the bar

**Return** the animation time in milliseconds.

#### **Parameters**

• bar: pointer to a bar object

# struct lv\_bar\_anim\_t

### **Public Members**

```
lv\_obj\_t *bar lv\_anim\_value\_t anim_start lv\_anim\_value\_t anim_end lv\_anim\_value\_t anim_state struct lv\_bar\_ext\_t \#include < lv\_bar.h > Data of bar
```

#### **Public Members**

```
int16_t cur_value
int16_t min_value
int16_t max_value
int16_t start_value
lv_area_t indic_area
lv_anim_value_t anim_time
lv_bar_anim_t cur_value_anim
lv_bar_anim_t start_value_anim
uint8_t type
lv_style_list_t style_indic
```

# 5.4 Button (lv\_btn)

### 5.4.1 Overview

Buttons are simple rectangle-like objects. They are derived from *Containers* so layout and fit are also available. Besides, it can be enabled to automatically go to checked state on click.

# 5.4.2 Parts and Styles

The buttons has only a main style called LV\_BTN\_PART\_MAIN and it can use all the properties from the following groups:

- background
- border
- outline
- shadow
- value
- pattern
- transitions

It also uses the *padding* properties when *layout* or *fit* is enabled.

# 5.4.3 Usage

#### **States**

To make buttons usage simpler the button's state can be get with lv\_btn\_get\_state(btn). It returns one of the following values:

- LV\_BTN\_STATE\_RELEASED
- LV\_BTN\_STATE\_PRESSED
- LV\_BTN\_STATE\_CHECKED\_RELEASED
- LV\_BTN\_STATE\_CHECKED\_PRESSED
- LV\_BTN\_STATE\_DISABLED

With lv\_btn\_get\_state(btn, LV\_BTN\_STATE\_...) the buttons state can be changed manually.

If a more precise description of the state is required (e.g. focused) the general <code>lv\_obj\_get\_state(btn)</code> can be used.

### Checkable

You can configure the buttons as *toggle button* with lv\_btn\_set\_checkable(btn, true). In this case, on click, the button goes to LV\_STATE\_CHECKED state automatically, or back when clicked again.

### Layout and Fit

Similarly to *Containers*, buttons also have layout and fit attributes.

- lv\_btn\_set\_layout(btn, LV\_LAYOUT\_...) set a layout. The default is LV\_LAYOUT\_CENTER. So, if you add a label, then it will be automatically aligned to the middle and can't be moved with lv\_obj\_set\_pos(). You can disable the layout with lv\_btn\_set\_layout(btn, LV LAYOUT OFF).
- lv\_btn\_set\_fit/fit2/fit4(btn, LV\_FIT\_..) enables to set the button width and/or height automatically according to the children, parent, and fit type.

# **5.4.4 Events**

Besides the Generic events the following Special events are sent by the buttons:

• LV\_EVENT\_VALUE\_CHANGED - sent when the button is toggled.

Learn more about *Events*.

# 5.4.5 Keys

The following Keys are processed by the Buttons:


- LV\_KEY\_RIGHT/UP Go to toggled state if toggling is enabled.
- LV\_KEY\_LEFT/DOWN Go to non-toggled state if toggling is enabled.

Note that, the state of  $LV_KEY_ENTER$  is translated to  $LV_EVENT_PRESSED/PRESSING/RELEASED$  etc. Learn more about Keys.

# 5.4.6 Example

C

## **Simple Buttons**

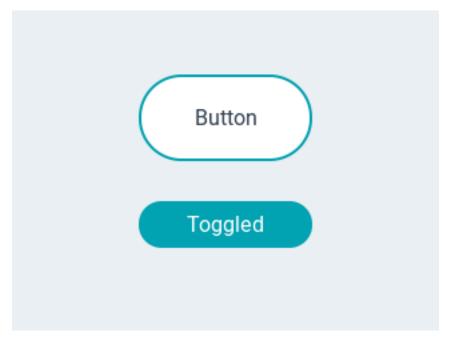

code


```
#include "../../lv_examples.h"
#include <stdio.h>
#if LV_USE_BTN

static void event_handler(lv_obj_t * obj, lv_event_t event)
```

(continues on next page)

(continued from previous page)

```
if(event == LV_EVENT_CLICKED) {
        printf("Clicked\n");
   else if(event == LV_EVENT_VALUE_CHANGED) {
        printf("Toggled\n");
}
void lv_ex_btn_1(void)
   lv_obj_t * label;
   lv_obj_t * btn1 = lv_btn_create(lv_scr_act(), NULL);
    lv_obj_set_event_cb(btn1, event_handler);
   lv_obj_align(btn1, NULL, LV_ALIGN_CENTER, 0, -40);
    label = lv label create(btn1, NULL);
   lv_label_set_text(label, "Button");
   lv_obj_t * btn2 = lv_btn_create(lv_scr_act(), NULL);
   lv_obj_set_event_cb(btn2, event_handler);
    lv_obj_align(btn2, NULL, LV_ALIGN_CENTER, 0, 40);
    lv_btn_set_checkable(btn2, true);
    lv btn toggle(btn2);
    lv_btn_set_fit2(btn2, LV_FIT_NONE, LV_FIT_TIGHT);
    label = lv_label_create(btn2, NULL);
    lv_label_set_text(label, "Toggled");
#endif
```

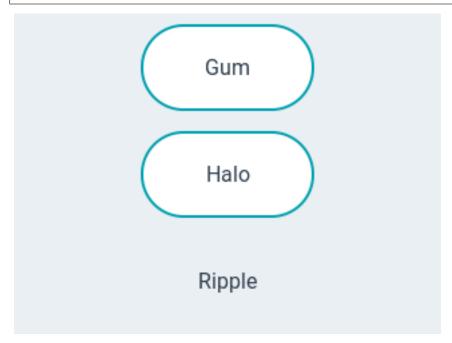

code

```
#include "../../lv examples.h"
#include <stdio.h>
#if LV USE BTN
* Advanced button transition examples
void lv ex btn 2(void)
    static lv anim path t path overshoot;
    lv_anim_path_init(&path_overshoot);
    lv anim path set cb(&path overshoot, lv anim path overshoot);
    static lv_anim_path_t path_ease_out;
    lv anim path init(&path ease out);
    lv_anim_path_set_cb(&path_ease_out, lv_anim_path ease out);
    static lv anim path t path ease in out;
    lv_anim_path_init(&path_ease_in_out);
    lv_anim_path_set_cb(&path_ease_in_out, lv_anim_path_ease_in_out);
    /*Gum-like button*/
    static lv style t style gum;
    lv_style_init(&style_gum);
    lv_style_set_transform_width(&style_gum, LV_STATE_PRESSED, 10);
    lv_style_set_transform_height(&style_gum, LV_STATE PRESSED, -10);
    lv_style_set_value_letter_space(&style_gum, LV_STATE_PRESSED, 5);
    lv_style_set_transition_path(&style_gum, LV_STATE_DEFAULT, &path_overshoot);
lv_style_set_transition_path(&style_gum, LV_STATE_PRESSED, &path_ease_in_out);
    lv_style_set_transition_time(&style_gum, LV_STATE_DEFAULT, 250);
    lv_style_set_transition_delay(&style_gum, LV_STATE_DEFAULT, 100);
    lv style set transition prop 1(&style gum, LV STATE DEFAULT, LV STYLE TRANSFORM
→WIDTH);
    lv_style_set_transition_prop_2(&style_gum, LV_STATE_DEFAULT, LV_STYLE_TRANSFORM_
→HEIGHT);
    lv\_style\_set\_transition\_prop\_3(\&style\_gum, LV\_STATE\_DEFAULT, LV\_STYLE\_VALUE\_
→LETTER_SPACE);
    lv_obj_t * btn1 = lv_btn_create(lv_scr_act(), NULL);
    lv_obj_align(btn1, NULL, LV_ALIGN_CENTER, 0, -80);
    lv obj add style(btn1, LV BTN PART MAIN, &style gum);
    /*Instead of creating a label add a values string*/
    lv_obj_set_style_local_value_str(btn1, LV_BTN_PART_MAIN, LV_STATE_DEFAULT, "Gum");
    /*Halo on press*/
    static lv_style_t style_halo;
    lv style init(&style halo);
    lv style set transition time(&style halo, LV STATE PRESSED, 400);
    lv_style_set_transition_time(&style_halo, LV_STATE_DEFAULT, 0);
    lv_style_set_transition_delay(&style_halo, LV_STATE_DEFAULT, 200);
    lv style set outline width(&style halo, LV STATE DEFAULT, 0);
    lv_style_set_outline_width(&style_halo, LV_STATE_PRESSED, 20);
    lv style set outline opa(&style halo, LV STATE DEFAULT, LV OPA COVER);
    lv style set outline opa(&style halo, LV STATE FOCUSED, LV OPA COVER);
                                                                                /*Just
→to be sure, the theme might use it*/
    lv_style_set_outline_opa(&style_halo, LV_STATE_PRESSED, LV_OPA_TRANSP);
```

(continues on next page)

(continued from previous page)

```
lv_style_set_transition_prop_1(&style_halo, LV_STATE_DEFAULT, LV_STYLE_OUTLINE_
→0PA);
    lv_style_set_transition_prop_2(&style_halo, LV_STATE_DEFAULT, LV_STYLE_OUTLINE_
→WIDTH);
    lv_obj_t * btn2 = lv_btn_create(lv_scr_act(), NULL);
    lv_obj_align(btn2, NULL, LV_ALIGN_CENTER, 0, 0);
    lv_obj_add_style(btn2, LV_BTN_PART_MAIN, &style_halo);
    lv_obj_set_style_local_value_str(btn2, LV_BTN_PART_MAIN, LV_STATE_DEFAULT, "Halo
");
   /*Ripple on press*/
    static lv style t style ripple;
    lv_style_init(&style_ripple);
    lv_style_set_transition_time(&style_ripple, LV_STATE_PRESSED, 300);
    lv_style_set_transition_time(&style_ripple, LV_STATE_DEFAULT, 0);
    lv_style_set_transition_delay(&style_ripple, LV_STATE_DEFAULT, 300);
    lv_style_set_bg_opa(&style_ripple, LV_STATE_DEFAULT, 0);
    lv_style_set_bg_opa(&style_ripple, LV_STATE_PRESSED, LV_OPA_80);
    lv_style_set_border_width(&style_ripple, LV_STATE_DEFAULT, 0);
    lv_style_set_outline_width(&style_ripple, LV_STATE_DEFAULT, 0);
    lv_style_set_transform_width(&style_ripple, LV_STATE_DEFAULT, -20);
    lv_style_set_transform_height(&style_ripple, LV_STATE_DEFAULT, -20);
    lv_style_set_transform_width(&style_ripple, LV_STATE_PRESSED, 0);
    lv style set transform height(&style ripple, LV STATE PRESSED, 0);
    lv style set transition path(&style ripple, LV STATE DEFAULT, &path ease out);
    lv style set transition prop 1(&style ripple, LV STATE DEFAULT, LV STYLE BG OPA);
    lv_style_set_transition_prop_2(&style_ripple, LV_STATE_DEFAULT, LV_STYLE_
→TRANSFORM WIDTH);
    lv style set transition prop 3(&style ripple, LV STATE DEFAULT, LV STYLE
→TRANSFORM HEIGHT);
    lv_obj_t * btn3 = lv_btn_create(lv_scr_act(), NULL);
    lv_obj_align(btn3, NULL, LV_ALIGN_CENTER, 0, 80);
    lv obj add style(btn3, LV BTN PART MAIN, &style ripple);
    lv obj set style local value str(btn3, LV BTN PART MAIN, LV STATE DEFAULT, "Ripple
#endif
```

# MicroPython

No examples yet.

### 5.4.7 API

# **Typedefs**

```
typedef uint8_t lv_btn_state_t
typedef uint8_t lv_btn_part_t
```

#### **Enums**

### enum [anonymous]

Possible states of a button. It can be used not only by buttons but other button-like objects too

Values:

```
LV_BTN_STATE_RELEASED

LV_BTN_STATE_PRESSED

LV_BTN_STATE_DISABLED

LV_BTN_STATE_CHECKED_RELEASED

LV_BTN_STATE_CHECKED_PRESSED

LV_BTN_STATE_CHECKED_DISABLED

_LV_BTN_STATE_LAST
```

### enum [anonymous]

Styles

Values:

```
\label{eq:lv_btn_part_main} \begin{split} \mathbf{LV\_BTN\_PART\_MAIN} &= LV\_OBJ\_PART\_MAIN \\ \mathbf{LV\_BTN\_PART\_VIRTUAL\_LAST} \\ \mathbf{LV\_BTN\_PART\_REAL\_LAST} &= LV\_OBJ\_PART\_REAL\_LAST \end{split}
```

### **Functions**

```
lv\_obj\_t *lv\_btn\_create(lv\_obj\_t *par, const lv\_obj\_t *copy)
```

Create a button object

Return pointer to the created button

### **Parameters**

- par: pointer to an object, it will be the parent of the new button
- copy: pointer to a button object, if not NULL then the new object will be copied from it

```
void lv btn set checkable(lv obj t*btn, bool tql)
```

Enable the toggled states. On release the button will change from/to toggled state.

### **Parameters**

- btn: pointer to a button object
- tgl: true: enable toggled states, false: disable

```
void lv btn set state(lv obj t *btn, lv btn state t state)
```

Set the state of the button

#### **Parameters**

- btn: pointer to a button object
- **state**: the new state of the button (from lv\_btn\_state\_t enum)

```
void lv_btn_toggle(lv_obj_t *btn)
```

Toggle the state of the button (ON->OFF, OFF->ON)

• btn: pointer to a button object

# static void lv\_btn\_set\_layout(lv\_obj\_t\*btn, lv\_layout\_t layout)

Set the layout on a button

#### **Parameters**

- btn: pointer to a button object
- layout: a layout from 'lv cont layout t'

Set the fit policy in all 4 directions separately. It tells how to change the button size automatically.

#### **Parameters**

- btn: pointer to a button object
- left: left fit policy from lv\_fit\_t
- right: right fit policy from lv\_fit\_t
- top: top fit policy from lv\_fit\_t
- bottom: bottom fit policy from lv fit t

## static void lv btn set fit2(lv\_obj\_t\*btn, lv\_fit\_t hor, lv\_fit\_t ver)

Set the fit policy horizontally and vertically separately. It tells how to change the button size automatically.

### **Parameters**

- btn: pointer to a button object
- hor: horizontal fit policy from lv\_fit\_t
- ver: vertical fit policy from lv\_fit\_t

# static void lv\_btn\_set\_fit(lv\_obj\_t \*btn, lv\_fit\_t fit)

Set the fit policy in all 4 direction at once. It tells how to change the button size automatically.

#### **Parameters**

- btn: pointer to a button object
- fit: fit policy from lv\_fit\_t

```
lv_btn_state_t lv btn get state(const lv_obj_t*btn)
```

Get the current state of the button

**Return** the state of the button (from lv\_btn\_state\_t enum) If the button is in disabled state LV\_BTN\_STATE\_DISABLED will be ORed to the other button states.

# Parameters

• btn: pointer to a button object

### bool lv btn get checkable(const lv obj t\*btn)

Get the toggle enable attribute of the button

Return true: checkable enabled, false: disabled

### **Parameters**

• btn: pointer to a button object

# static lv\_layout\_t lv\_btn\_get\_layout(const lv\_obj\_t \*btn)

Get the layout of a button

**Return** the layout from 'lv\_cont\_layout\_t'

#### **Parameters**

• btn: pointer to button object

# static lv\_fit\_t lv\_btn\_get\_fit\_left(const lv\_obj\_t \*btn)

Get the left fit mode

Return an element of lv fit t

### **Parameters**

• btn: pointer to a button object

# $\verb|static| lv\_fit\_t| \verb|lv_btn\_get_fit\_right(const| lv\_obj\_t|*btn)|$

Get the right fit mode

Return an element of lv\_fit\_t

#### **Parameters**

• btn: pointer to a button object

# static lv\_fit\_t lv\_btn\_get\_fit\_top(const lv\_obj\_t \*btn)

Get the top fit mode

Return an element of lv\_fit\_t

#### **Parameters**

• btn: pointer to a button object

# static lv\_fit\_t lv\_btn\_get\_fit\_bottom(const lv\_obj\_t \*btn)

Get the bottom fit mode

Return an element of lv fit t

#### **Parameters**

• btn: pointer to a button object

## struct lv\_btn\_ext\_t

 $\#include < lv\_btn.h >$ Extended data of button

### **Public Members**

```
lv cont ext t cont
```

Ext. of ancestor

### uint8\_t checkable

1: Toggle enabled

# 5.5 Button matrix (lv\_btnmatrix)

#### 5.5.1 Overview

The Button Matrix objects can display **multiple buttons** in rows and columns.

The main reasons for wanting to use a button matrix instead of a container and individual button objects are:

- The button matrix is simpler to use for grid-based button layouts.
- The button matrix consumes a lot less memory per button.

# 5.5.2 Parts and Styles

The Button matrix's main part is called LV\_BTNMATRIX\_PART\_BG. It draws a background using the typical background style properties.

LV\_BTNMATRIX\_PART\_BTN is virtual part and it refers to the buttons on the button matrix. It also uses all the typical background properties.

The top/bottom/left/right padding values from the background are used to keep some space on the sides. Inner padding is applied between the buttons.

# 5.5.3 Usage

#### Button's text

There is a text on each button. To specify them a descriptor string array, called *map*, needs to be used. The map can be set with <code>lv\_btnmatrix\_set\_map(btnm, my\_map)</code>. The declaration of a map should look like <code>const char \* map[] = {"btn1", "btn2", "btn3", ""}</code>. Note that the <code>last element has to be an empty string!</code>

Use "\n" in the map to make line break. E.g. {"btn1", "btn2", "\n", "btn3", ""}. Each line's buttons have their width calculated automatically.

#### **Control buttons**

The buttons width can be set relative to the other button in the same line with  $lv\_btnmatrix\_set\_btn\_width(btnm, btn\_id, width)$  E.g. in a line with two buttons: btnA, width = 1 and btnB, width = 2, btnA will have 33 % width and btnB will have 66 % width. It's similar to how the flex-grow property works in CSS.

In addition to width, each button can be customized with the following parameters:

- LV\_BTNMATRIX\_CTRL\_HIDDEN make a button hidden (hidden buttons still take up space in the layout, they are just not visible or clickable)
- LV\_BTNMATRIX\_CTRL\_NO\_REPEAT disable repeating when the button is long pressed
- LV\_BTNMATRIX\_CTRL\_DISABLED make a button disabled
- LV\_BTNMATRIX\_CTRL\_CHECKABLE enable toggling of a button
- LV\_BTNMATRIX\_CTRL\_CHECK\_STATE set the toggle state
- LV\_BTNMATRIX\_CTRL\_CLICK\_TRIG if 0, the button will react on press, if 1, will react on release

The set or clear a button's control attribute, use <code>lv\_btnmatrix\_set\_btn\_ctrl(btnm, btn\_id, LV\_BTNM\_CTRL\_...)</code> and <code>lv\_btnmatrix\_clear\_btn\_ctrl(btnm, btn\_id, LV\_BTNM\_CTRL\_...</code>.) respectively. More <code>LV\_BTNM\_CTRL\_...</code> values can be <code>Ored</code>

The set/clear the same control attribute for all buttons of a button matrix, use lv\_btnmatrix\_set\_btn\_ctrl\_all(btnm, btn\_id, LV\_BTNM\_CTRL\_...) and lv btnmatrix clear btn ctrl all(btnm, btn id, LV BTNM CTRL ...).

The set a control map for a button matrix (similarly to the map for the text), use lv\_btnmatrix\_set\_ctrl\_map(btnm, ctrl\_map). An element of ctrl\_map should look like ctrl\_map[0] = width | LV\_BTNM\_CTRL\_NO\_REPEAT | LV\_BTNM\_CTRL\_TGL\_ENABLE. The number of elements should be equal to the number of buttons (excluding newlines characters).

#### One check

The "One check" feature can be enabled with lv\_btnmatrix\_set\_one\_check(btnm, true) to allow only one button to be checked (toggled) at once.

#### Recolor

The texts on the button can be recolored similarly to the recolor feature for *Label* object. To enable it, use lv\_btnmatrix\_set\_recolor(btnm, true). After that a button with #FF0000 Red# text will be red.

### Aligning the button's text

To align the text on the buttons, use <code>lv\_btnmatrix\_set\_align(roller, LV\_LABEL\_ALIGN\_LEFT/CENTER/RIGHT)</code>. All text items in the button matrix will conform to the alignment proprty as it is set.

#### **Notes**

The Button matrix object is very light weighted because the buttons are not created just virtually drawn on the fly. This way, 1 button use only 8 extra bytes instead of the  $\sim$ 100-150 byte size of a normal *Button* object (plus the size of its container and a label for each button).

The disadvantage of this setup is that the ability to style individual buttons to be different from others is limited (aside from the toggling feature). If you require that ability, using individual buttons is very likely to be a better approach.

### **5.5.4** Events

Besides the Generic events, the following Special events are sent by the button matrices:

• LV\_EVENT\_VALUE\_CHANGED - sent when the button is pressed/released or repeated after long press. The event data is set to the ID of the pressed/released button.

Learn more about *Events*.

# 5.5.5 Keys

The following *Keys* are processed by the Buttons:

- LV\_KEY\_RIGHT/UP/LEFT/RIGHT To navigate among the buttons to select one
- LV\_KEY\_ENTER To press/release the selected button

Learn more about *Keys*.

# 5.5.6 Example

C

### Simple Button matrix



code

```
#include "../../lv_examples.h"
#include <stdio.h>
#if LV_USE_BTNMATRIX
static void event_handler(lv_obj_t * obj, lv_event_t event)
   if(event == LV EVENT VALUE CHANGED) {
       const char * txt = lv_btnmatrix_get_active_btn_text(obj);
       printf("%s was pressed\n", txt);
   }
}
void lv ex btnmatrix 1(void)
   lv_obj_t * btnm1 = lv_btnmatrix_create(lv_scr_act(), NULL);
   lv_btnmatrix_set_map(btnm1, btnm_map);
   lv_btnmatrix_set_btn_width(btnm1, 10, 2);
                                                /*Make "Action1" twice as wide
→as "Action2"*/
   lv_btnmatrix_set_btn_ctrl(btnm1, 10, LV_BTNMATRIX_CTRL_CHECKABLE);
   lv_btnmatrix_set_btn_ctrl(btnm1, 11, LV_BTNMATRIX_CTRL_CHECK_STATE);
```

(continues on next page)

(continued from previous page)

```
lv_obj_align(btnm1, NULL, LV_ALIGN_CENTER, 0, 0);
lv_obj_set_event_cb(btnm1, event_handler);
}
#endif
```

# MicroPython

No examples yet.

### 5.5.7 API

# **Typedefs**

```
typedef uint16_t lv_btnmatrix_ctrl_t
typedef uint8_t lv_btnmatrix_part_t
```

#### **Enums**

# enum [anonymous]

Type to store button control bits (disabled, hidden etc.) The first 3 bits are used to store the width

Values:

```
LV BTNMATRIX CTRL HIDDEN = 0x0008
```

Button hidden

# $LV_BTNMATRIX_CTRL_NO_REPEAT = 0x0010$

Do not repeat press this button.

# $LV_BTNMATRIX_CTRL_DISABLED = 0x0020$

Disable this button.

# $LV_BTNMATRIX_CTRL_CHECKABLE = 0x0040$

Button can be toggled.

# LV BTNMATRIX CTRL CHECK STATE = 0x0080

Button is currently toggled (e.g. checked).

```
LV_BTNMATRIX_CTRL_CLICK_TRIG = 0x0100
```

1: Send LV\_EVENT\_SELECTED on CLICK, 0: Send LV\_EVENT\_SELECTED on PRESS

### enum [anonymous]

Values:

```
LV_BTNMATRIX_PART_BG
```

LV\_BTNMATRIX\_PART\_BTN

# **Functions**

```
LV_EXPORT_CONST_INT(LV_BTNMATRIX_BTN_NONE)
```

# lv\_obj\_t \*lv\_btnmatrix\_create(lv\_obj\_t \*par, const lv\_obj\_t \*copy)

Create a button matrix objects

**Return** pointer to the created button matrix

#### **Parameters**

- par: pointer to an object, it will be the parent of the new button matrix
- copy: pointer to a button matrix object, if not NULL then the new object will be copied from it

### void lv btnmatrix set map( $lv\_obj\_t*btnm$ , const char \*map[])

Set a new map. Buttons will be created/deleted according to the map. The button matrix keeps a reference to the map and so the string array must not be deallocated during the life of the matrix.

#### **Parameters**

- btnm: pointer to a button matrix object
- $\mathsf{map}$ : pointer a string array. The last string has to be: "". Use "\n" to make a line break.

# void lv\_btnmatrix\_set\_ctrl\_map(lv\_obj\_t\*btnm, const lv\_btnmatrix\_ctrl\_t ctrl\_map[])

Set the button control map (hidden, disabled etc.) for a button matrix. The control map array will be copied and so may be deallocated after this function returns.

#### **Parameters**

- btnm: pointer to a button matrix object
- ctrl\_map: pointer to an array of lv\_btn\_ctrl\_t control bytes. The length of the array and position of the elements must match the number and order of the individual buttons (i.e. excludes newline entries). An element of the map should look like e.g.: ctrl\_map[0] = width | LV\_BTNMATRIX\_CTRL\_NO\_REPEAT | LV\_BTNMATRIX\_CTRL\_TGL\_ENABLE

```
void lv btnmatrix set focused btn(lv obj t*btnm, uint16 t id)
```

Set the focused button i.e. visually highlight it.

#### **Parameters**

- btnm: pointer to button matrix object
- id: index of the button to focus(LV BTNMATRIX BTN NONE to remove focus)

```
void lv_btnmatrix_set_recolor(const lv_obj_t *btnm, bool en)
```

Enable recoloring of button's texts

#### **Parameters**

- btnm: pointer to button matrix object
- en: true: enable recoloring; false: disable

Set the attributes of a button of the button matrix

#### **Parameters**

- btnm: pointer to button matrix object
- btn id: 0 based index of the button to modify. (Not counting new lines)

Clear the attributes of a button of the button matrix

### **Parameters**

- btnm: pointer to button matrix object
- btn\_id: 0 based index of the button to modify. (Not counting new lines)

# void lv\_btnmatrix\_set\_btn\_ctrl\_all(lv\_obj\_t\*btnm, lv\_btnmatrix\_ctrl\_t ctrl)

Set the attributes of all buttons of a button matrix

#### **Parameters**

- btnm: pointer to a button matrix object
- ctrl: attribute(s) to set from lv\_btnmatrix\_ctrl\_t. Values can be ORed.

# void lv btnmatrix clear btn ctrl all(lv obj t\*btnm, lv btnmatrix ctrl t ctrl)

Clear the attributes of all buttons of a button matrix

#### **Parameters**

- btnm: pointer to a button matrix object
- ctrl: attribute(s) to set from lv btnmatrix ctrl t. Values can be ORed.
- en: true: set the attributes; false: clear the attributes

# void lv\_btnmatrix\_set\_btn\_width(lv\_obj\_t\*btnm, uint16\_t btn\_id, uint8\_t width)

Set a single buttons relative width. This method will cause the matrix be regenerated and is a relatively expensive operation. It is recommended that initial width be specified using lv btnmatrix set ctrl map and this method only be used for dynamic changes.

#### **Parameters**

- btnm: pointer to button matrix object
- btn\_id: 0 based index of the button to modify.
- width: Relative width compared to the buttons in the same row. [1..7]

### void lv btnmatrix set one check(lv\_obj\_t\*btnm, bool one\_chk)

Make the button matrix like a selector widget (only one button may be toggled at a time). Checkable must be enabled on the buttons you want to be selected with lv\_btnmatrix\_set\_ctrl or lv btnmatrix set btn ctrl all.

### Parameters

- btnm: Button matrix object
- one chk: Whether "one check" mode is enabled

### const char \*\*lv btnmatrix get map array(const lv obj t\*btnm)

Get the current map of a button matrix

Return the current map

### **Parameters**

• btnm: pointer to a button matrix object

## bool lv btnmatrix get recolor(const lv\_obj\_t\*btnm)

Check whether the button's text can use recolor or not

Return true: text recolor enable; false: disabled

# **Parameters**

• btnm: pointer to button matrix object

# uint16\_t lv\_btnmatrix\_get\_active\_btn(const lv\_obj\_t \*btnm)

Get the index of the lastly "activated" button by the user (pressed, released etc) Useful in the the **event cb** to get the text of the button, check if hidden etc.

Return index of the last released button (LV\_BTNMATRIX\_BTN\_NONE: if unset)

### **Parameters**

• btnm: pointer to button matrix object

# const char \*lv\_btnmatrix\_get\_active\_btn\_text(const lv\_obj\_t \*btnm)

Get the text of the lastly "activated" button by the user (pressed, released etc) Useful in the the  ${\tt event}$  cb

Return text of the last released button (NULL: if unset)

#### **Parameters**

• btnm: pointer to button matrix object

## uint16 t lv btnmatrix get focused btn(const lv\_obj\_t\*btnm)

Get the focused button's index.

Return index of the focused button (LV\_BTNMATRIX\_BTN\_NONE: if unset)

#### **Parameters**

• btnm: pointer to button matrix object

# const char \*lv btnmatrix get btn text(const lv obj t \*btnm, uint16 t btn id)

Get the button's text

Return text of btn index' button

## **Parameters**

- btnm: pointer to button matrix object
- btn\_id: the index a button not counting new line characters. (The return value of lv\_btnmatrix\_get\_pressed/released)

# bool lv\_btnmatrix\_get\_btn\_ctrl(lv\_obj\_t\*btnm, uint16\_t btn\_id, lv\_btnmatrix\_ctrl\_t ctrl)

Get the whether a control value is enabled or disabled for button of a button matrix

Return true: long press repeat is disabled; false: long press repeat enabled

#### **Parameters**

- btnm: pointer to a button matrix object
- btn\_id: the index a button not counting new line characters. (E.g. the return value of lv btnmatrix get pressed/released)
- ctrl: control values to check (ORed value can be used)

### bool lv btnmatrix get one check(const lv\_obj\_t\*btnm)

Find whether "one toggle" mode is enabled.

Return whether "one toggle" mode is enabled

#### **Parameters**

• btnm: Button matrix object

# struct lv\_btnmatrix\_ext\_t

#### **Public Members**

```
const char **map_p
lv_area_t *button_areas
lv_btnmatrix_ctrl_t *ctrl_bits
lv_style_list_t style_btn
uint16_t btn_cnt
uint16_t btn_id_pr
uint16_t btn_id_focused
uint16_t btn_id_act
uint8_t recolor
uint8_t one_check
```

# 5.6 Calendar (Iv\_calendar)

### 5.6.1 Overview

The Calendar object is a classic calendar which can:

- highlight the current day
- highlight any user-defined dates
- display the name of the days
- go the next/previous month by button click
- highlight the clicked day

### 5.6.2 Parts and Styles

The calendar's main part is called LV\_CALENDAR\_PART\_BG. It draws a background using the typical background style properties.

Besides the following virtual parts exist:

- LV\_CALENDAR\_PART\_HEADER The upper area where the current year and month's name is shown. It also has buttons to move the next/previous month. It uses typical background properties and padding to keep some distance from the background (top, left, right) and the day names (bottom).
- LV\_CALENDAR\_PART\_DAY\_NAMES Shows the name of the days below the header. It uses the *text* style properties padding to keep some distance from the background (left, right), header (top) and dates (bottom).
- LV\_CALENDAR\_PART\_DATES Show the date numbers from 1..28/29/30/31 (depending on current month). Different "state" of the states are drawn according to the states defined in this part:
  - normal dates: drawn with LV\_STATE\_DEFAULT style
  - pressed date: drawn with LV\_STATE\_PRESSED style
  - today: drawn with LV STATE FOCUSED style

- highlighted dates: drawn with LV STATE CHECKED style

# 5.6.3 Usage

## 5.6.4 Overview

To set and get dates in the calendar, the <code>lv\_calendar\_date\_t</code> type is used which is a structure with <code>year</code>, <code>month</code> and <code>day</code> fields.

#### **Current date**

To set the current date (today), use the  $lv_calendar_set_today_date(calendar, &today_date)$  function.

#### Shown date

To set the shown date, use lv\_calendar\_set\_shown\_date(calendar, &shown\_date);

# Highlighted days

The list of highlighted dates should be stored in a <code>lv\_calendar\_date\_t</code> array loaded by <code>lv\_calendar\_set\_highlighted\_dates(calendar, &highlighted\_dates)</code>.Only the arrays pointer will be saved so the array should be a static or global variable.

### Name of the days

The name of the days can be adjusted with  $lv_calendar_set_day_names(calendar, day_names)$  where  $day_names$  looks like const char \*  $day_names[7] = {"Su", "Mo", ...};$ 

#### Name of the months

Similarly to day\_names, the name of the month can be set with lv\_calendar\_set\_month\_names(calendar, month\_names\_array).

### **5.6.5** Events

Besides the Generic events, the following Special events are sent by the calendars: LV\_EVENT\_VALUE\_CHANGED is sent when the current month has changed.

In *Input device related* events, lv\_calendar\_get\_pressed\_date(calendar) tells which day is currently being pressed or return NULL if no date is pressed.

### 5.6.6 Keys

No *Keys* are processed by the object type.

Learn more about Keys.

# 5.6.7 Example

C

### Calendar with day select

```
2018 October
                          >
Su Mo Tu We Th Fr Sa
             3
                     5
30
    1
         2
                 4
            10
                     12
7
         9
                     19
    15
        16
            17
                18
                         20
    22
        23
                25
21
            24
                    26
                         27
28
    29
        30
            31
                         3
    5
             7
                 8
                     9
4
         6
                         10
```

code

```
#include "../../lv_examples.h"
#include <stdio.h>
#if LV_USE_CALENDAR
static void event_handler(lv_obj_t * obj, lv_event_t event)
    if(event == LV EVENT VALUE CHANGED) {
       lv_calendar_date_t * date = lv_calendar_get_pressed_date(obj);
       if(date) {
            printf("Clicked date: %02d.%02d.%d\n", date->day, date->month, date->
→year);
    }
}
void lv_ex_calendar_1(void)
   lv_obj_t * calendar = lv_calendar_create(lv_scr_act(), NULL);
    lv_obj_set_size(calendar, 235, 235);
    lv_obj_align(calendar, NULL, LV_ALIGN CENTER, 0, 0);
   lv_obj_set_event_cb(calendar, event_handler);
   /*Make the date number smaller to be sure they fit into their area*/
   lv obj set_style local_text_font(calendar, LV_CALENDAR_PART_DATE, LV_STATE_
→DEFAULT, lv theme get font small());
```

(continues on next page)

(continued from previous page)

```
/*Set today's date*/
   lv_calendar_date_t today;
    today.year = 2018;
    today.month = 10;
    today.day = 23;
   lv_calendar_set_today_date(calendar, &today);
   lv_calendar_set_showed_date(calendar, &today);
   /*Highlight a few days*/
    static lv calendar date t highlighted days[3];
                                                        /*Only its pointer will be...
⇒saved so should be static*/
    highlighted_days[0].year = 2018;
    highlighted_days[0].month = 10;
   highlighted_days[0].day = 6;
    highlighted days[1].year = 2018;
   highlighted_days[1].month = 10;
   highlighted_days[1].day = 11;
   highlighted_days[2].year = 2018;
   highlighted_days[2].month = 11;
   highlighted_days[2].day = 22;
    lv_calendar_set_highlighted_dates(calendar, highlighted_days, 3);
}
#endif
```

## MicroPython

No examples yet.

# 5.6.8 API

### **Typedefs**

```
typedef uint8_t lv_calendar_part_t
```

### **Enums**

```
enum [anonymous]
Calendar parts
```

Values:

### LV CALENDAR PART BG

Background and "normal" date numbers style

## LV\_CALENDAR\_PART\_HEADER

# LV\_CALENDAR\_PART\_DAY\_NAMES

Calendar header style

## LV\_CALENDAR\_PART\_DATE

Day name style

#### **Functions**

```
lv_obj_t *lv_calendar_create(lv_obj_t *par, const lv_obj_t *copy)
```

Create a calendar objects

Return pointer to the created calendar

#### **Parameters**

- par: pointer to an object, it will be the parent of the new calendar
- copy: pointer to a calendar object, if not NULL then the new object will be copied from it

Set the today's date

#### **Parameters**

- calendar: pointer to a calendar object
- today: pointer to an lv\_calendar\_date\_t variable containing the date of today. The value will be saved it can be local variable too.

```
void lv calendar_set showed_date(lv_obj_t *calendar, lv_calendar_date_t *showed)
```

Set the currently showed

#### **Parameters**

- calendar: pointer to a calendar object
- **showed**: pointer to an *lv\_calendar\_date\_t* variable containing the date to show. The value will be saved it can be local variable too.

```
void lv_calendar_set_highlighted_dates(lv_obj_t *calendar, lv_calendar_date_t highlighted[], uint16_t date_num)
```

Set the the highlighted dates

#### **Parameters**

- calendar: pointer to a calendar object
- highlighted: pointer to an *lv\_calendar\_date\_t* array containing the dates. ONLY A POINTER WILL BE SAVED! CAN'T BE LOCAL ARRAY.
- date\_num: number of dates in the array

```
void lv_calendar_set_day_names(lv_obj_t*calendar, const char **day_names)
```

Set the name of the days

### **Parameters**

- calendar: pointer to a calendar object
- day\_names: pointer to an array with the names. E.g. const char \* days[7] = {"Sun", "Mon", ...} Only the pointer will be saved so this variable can't be local which will be destroyed later.

```
void lv_calendar_set_month_names(lv_obj_t*calendar, const char **month_names)
```

Set the name of the month

- calendar: pointer to a calendar object
- month\_names: pointer to an array with the names. E.g. const char \* days[12] = {"Jan", "Feb", ...} Only the pointer will be saved so this variable can't be local which will be destroyed later.

# $\mathit{lv\_calendar\_date\_t} * \texttt{lv\_calendar\_get\_today\_date(const} \; \mathit{lv\_obj\_t} * \mathit{calendar})$

Get the today's date

**Return** return pointer to an *lv* calendar date t variable containing the date of today.

#### **Parameters**

• calendar: pointer to a calendar object

# $lv\_calendar\_date\_t *lv\_calendar\_get\_showed\_date(const \ lv\_obj\_t *calendar)$

Get the currently showed

**Return** pointer to an *lv\_calendar\_date\_t* variable containing the date is being shown.

#### **Parameters**

• calendar: pointer to a calendar object

# $lv\_calendar\_date\_t *lv\_calendar\_get\_pressed\_date(const \ lv\_obj\_t *calendar)$

Get the pressed date.

**Return** pointer to an *lv\_calendar\_date\_t* variable containing the pressed date. **NULL** if not date pressed (e.g. the header)

#### **Parameters**

• calendar: pointer to a calendar object

# $\textit{lv\_calendar\_date\_t *lv\_calendar\_get\_highlighted\_dates(const \textit{lv\_obj\_t *} calendar)}$

Get the the highlighted dates

Return pointer to an  $lv\_calendar\_date\_t$  array containing the dates.

#### **Parameters**

• calendar: pointer to a calendar object

# uint16 tlv calendar get highlighted dates num(const lv\_obj\_t\*calendar)

Get the number of the highlighted dates

Return number of highlighted days

#### **Parameters**

• calendar: pointer to a calendar object

### const char \*\*lv calendar get day names(const lv\_obj\_t \*calendar)

Get the name of the days

Return pointer to the array of day names

### **Parameters**

• calendar: pointer to a calendar object

### const char \*\*lv calendar get month names(const lv obj t\*calendar)

Get the name of the month

Return pointer to the array of month names

• calendar: pointer to a calendar object

## struct lv\_calendar\_date\_t

#include <lv\_calendar.h> Represents a date on the calendar object (platform-agnostic).

#### **Public Members**

```
uint16_t year
int8_t month
int8_t day
struct lv_calendar_ext_t
```

#### **Public Members**

```
lv_calendar_date_t today
lv_calendar_date_t showed_date
lv_calendar_date_t *highlighted_dates
int8_t btn_pressing
uint16_t highlighted_dates_num
lv_calendar_date_t pressed_date
const char **day_names
const char **month_names
lv_style_list_t style_header
lv_style_list_t style_day_names
lv_style_list_t style_date_nums
```

# 5.7 Canvas (Iv\_canvas)

### 5.7.1 Overview

A Canvas inherites from *Image* where the user can draw anything. Rectangles, texts, images, lines arcs can be drawn here using lvgl's drawing engine. Besides some "effects" can be applied as well like rotation, zoom and blur.

# 5.7.2 Parts and Styles

The Canvas has on one main part called LV\_CANVAS\_PART\_MAIN and only the *image\_recolor* property is used to give a color to LV\_IMG\_CF\_ALPHA\_1/2/4/8BIT images.

# 5.7.3 Usage

### **Buffer**

The Canvas needs a buffer which stores the drawn image. To assign a buffer to a Canvas, use lv\_canvas\_set\_buffer(canvas, buffer, width, height, LV\_IMG\_CF\_...). Where buffer is a static buffer (not just a local variable) to hold the image of the canvas. For example, static lv\_color\_t buffer[LV\_CANVAS\_BUF\_SIZE\_TRUE\_COLOR(width, height)]. LV\_CANVAS\_BUF\_SIZE\_... macros help to determine the size of the buffer with different color formats.

The canvas supports all the built-in color formats like LV\_IMG\_CF\_TRUE\_COLOR or LV\_IMG\_CF\_INDEXED\_2BIT. See the full list in the Color formats section.

#### **Palette**

For LV\_IMG\_CF\_INDEXED\_... color formats, a palette needs to be initialized with  $lv_{canvas_set_palette(canvas, 3, LV_COLOR_RED)$ . It sets pixels with index=3 to red.

### **Drawing**

To set a pixel on the canvas, use  $lv\_canvas\_set\_px(canvas, x, y, LV\_COLOR\_RED)$ . With  $LV\_IMG\_CF\_INDEXED\_...$  or  $LV\_IMG\_CF\_ALPHA\_...$ , the index of the color or the alpha value needs to be passed as color. E.g.  $lv\_color\_t$  c; c.full = 3;

<code>lv\_canvas\_fill\_bg(canvas, LV\_COLOR\_BLUE, LV\_OPA\_50)</code> fills the whole canvas to blue with 50% opacity. Note that, if the current color format doesn't support colors (e.g. <code>LV\_IMG\_CF\_ALPHA\_2BIT</code>) teh color will be ignored. Similarly, if opacity is not supported (e.g. <code>LV\_IMG\_CF\_TRUE\_COLOR</code>) it will be ignored.

An array of pixels can be copied to the canvas with lv\_canvas\_copy\_buf(canvas, buffer\_to\_copy, x, y, width, height). The color format of the buffer and the canvas need to match.

To draw something to the canvas use

- lv canvas draw rect(canvas, x, y, width, heigth, &draw dsc)
- lv\_canvas\_draw\_text(canvas, x, y, max\_width, &draw\_dsc, txt, LV\_LABEL\_ALIGN\_LEFT/CENTER/RIGHT)
- lv canvas draw img(canvas, x, y, &img src, &draw dsc)
- lv\_canvas\_draw\_line(canvas, point\_array, point\_cnt, &draw\_dsc)
- lv canvas draw polygon(canvas, points array, point cnt, &draw dsc)
- lv\_canvas\_draw\_arc(canvas, x, y, radius, start\_angle, end\_angle, &draw dsc)

draw\_dsc is a lv\_draw\_rect/label/img/line\_dsc\_t variable which should be first initialized with
lv\_draw\_rect/label/img/line\_dsc\_init() function and then it's filed should be modified with the
desired colors and other values.

The draw function can draw to any color format. For example, it's possible to draw a text to an  $LV\_IMG\_VF\_ALPHA\_8BIT$  canvas and use the result image as a mask in  $lv\_objmask$  later.

#### **Transformations**

lv\_canvas\_transform() can be used to rotate and/or scale the image of an image and store the result on the canvas. The function needs the following parameters:

- **canvas** pointer to a canvas object to store the result of the transformation.
- img pointer to an image descriptor to transform. Can be the image descriptor of an other canvas too (lv\_canvas\_get\_img()).
- angle the angle of rotation (0..3600), 0.1 deg resolution
- **ZOOM** zoom factor (256 no zoom, 512 double size, 128 half size);
- offset x offset X to tell where to put the result data on destination canvas
- offset\_y offset X to tell where to put the result data on destination canvas
- pivot\_x pivot X of rotation. Relative to the source canvas. Set to source width / 2 to rotate around the center
- pivot\_y pivot Y of rotation. Relative to the source canvas. Set to source height / 2 to rotate around the center
- antialias true: apply anti-aliasing during the transformation. Looks better but slower.

Note that a canvas can't be rotated on itself. You need a source and destination canvas or image.

## 5.7.4 Blur

A given area of the canvas can be blurred horizontally with <code>lv\_canvas\_blur\_hor(canvas, &area, r)</code> of vertically with <code>lv\_canvas\_blur\_ver(canvas, &area, r)</code>. r is the radius of the blur (greater value means more intensive burring). <code>area</code> is the area where the blur should be applied (interpreted relative to the canvas)

# **5.7.5** Events

As default the clicking of a canvas is disabled (inherited by *Image*) and therefore no events are generated.

If clicking is enabled (lv\_obj\_set\_click(canvas, true)) only the Generic events are sent by the object type.

Learn more about *Events*.

## 5.7.6 Keys


No Keys are processed by the object type.

Learn more about *Keys*.

# **5.7.7 Example**

C

# Drawing on the Canvas and rotate

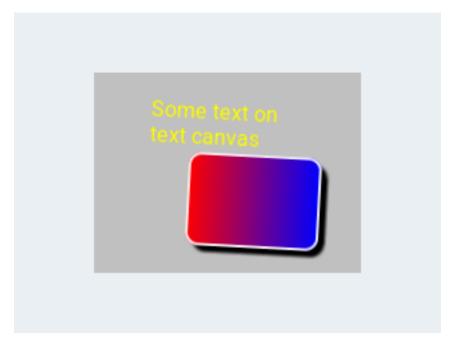

code

```
#include "../../lv_examples.h"
#if LV_USE_CANVAS
#define CANVAS WIDTH 200
#define CANVAS_HEIGHT 150
void lv ex canvas 1(void)
    lv_draw_rect_dsc_t rect_dsc;
    lv_draw_rect_dsc_init(&rect_dsc);
    rect_dsc.radius = 10;
    rect_dsc.bg_opa = LV_OPA_COVER;
    rect_dsc.bg_grad_dir = LV_GRAD_DIR_HOR;
    rect dsc.bg color = LV COLOR RED;
    rect dsc.bg grad color = LV COLOR BLUE;
    rect_dsc.border_width = 2;
    rect dsc.border opa = LV OPA 90;
    rect_dsc.border_color = LV_COLOR_WHITE;
    rect_dsc.shadow_width = 5;
    rect dsc.shadow ofs x = 5;
    rect_dsc.shadow_ofs_y = 5;
    lv_draw_label_dsc_t label_dsc;
    lv_draw_label_dsc_init(&label_dsc);
    label_dsc.color = LV_COLOR_YELLOW;
    static lv color t cbuf[LV CANVAS BUF SIZE TRUE COLOR(CANVAS WIDTH, CANVAS
→HEIGHT)];
    lv obj t * canvas = lv canvas create(lv scr act(), NULL);
```


(continues on next page)

(continued from previous page)

```
lv_canvas_set_buffer(canvas, cbuf, CANVAS_WIDTH, CANVAS_HEIGHT, LV_IMG_CF_TRUE_
→COLOR);
    lv_obj_align(canvas, NULL, LV_ALIGN_CENTER, 0, 0);
    lv_canvas_fill_bg(canvas, LV_COLOR_SILVER, LV_OPA_COVER);
    lv_canvas_draw_rect(canvas, 70, 60, 100, 70, &rect_dsc);
    lv_canvas_draw_text(canvas, 40, 20, 100, &label_dsc, "Some text on text canvas",
→LV_LABEL_ALIGN_LEFT);
    /* Test the rotation. It requires an other buffer where the orignal image is ...
\hookrightarrowstored.
     * So copy the current image to buffer and rotate it to the canvas */
    static lv_color_t cbuf_tmp[CANVAS_WIDTH * CANVAS_HEIGHT];
    memcpy(cbuf_tmp, cbuf, sizeof(cbuf_tmp));
    lv_img_dsc_t img;
    img.data = (void *)cbuf_tmp;
    img.header.cf = LV_IMG_CF_TRUE_COLOR;
    img.header.w = CANVAS WIDTH;
    img.header.h = CANVAS HEIGHT;
    lv_canvas_fill_bg(canvas, LV_COLOR_SILVER, LV_OPA_COVER);
    lv_canvas_transform(canvas, &img, 30, LV_IMG_ZOOM_NONE, 0, 0, CANVAS_WIDTH / 2,

    GANVAS_HEIGHT / 2, true);
#endif
```

# Transparent Canvas with chroma keying

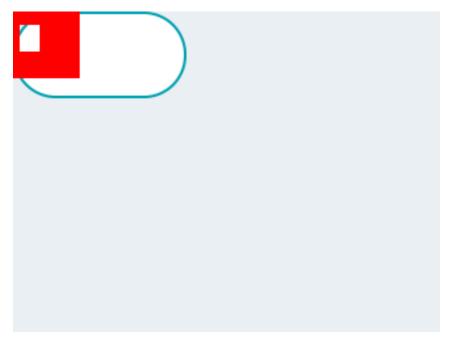

code

```
#include "../../lv examples.h"
#if LV USE CANVAS
#define CANVAS WIDTH 50
#define CANVAS HEIGHT 50
* Create a transparent canvas with Chroma keying and indexed color format (palette).
void lv ex canvas 2(void)
   /*Create a button to better see the transparency*/
   lv btn create(lv scr act(), NULL);
    /*Create a buffer for the canvas*/
    static lv_color_t cbuf[LV_CANVAS_BUF_SIZE_INDEXED_1BIT(CANVAS_WIDTH, CANVAS_
→HEIGHT)];
    /*Create a canvas and initialize its the palette*/
   lv_obj_t * canvas = lv_canvas_create(lv_scr_act(), NULL);
    lv_canvas_set_buffer(canvas, cbuf, CANVAS_WIDTH, CANVAS_HEIGHT, LV_IMG_CF_INDEXED_
\hookrightarrow1BIT);
    lv canvas set palette(canvas, 0, LV COLOR TRANSP);
    lv canvas set palette(canvas, 1, LV COLOR RED);
   /*Create colors with the indices of the palette*/
   lv_color_t c0;
   lv_color_t c1;
    c0.full = 0;
   c1.full = 1;
    /*Transparent background*/
   lv_canvas_fill_bg(canvas, c1, LV_OPA_TRANSP);
   /*Create hole on the canvas*/
   uint32_t x;
   uint32_t y;
    for (y = 10; y < 30; y++) {
        for(x = 5; x < 20; x++) {
            lv_canvas_set_px(canvas, x, y, c0);
    }
#endif
```

## MicroPython

No examples yet.

## 5.7.8 API

### **Typedefs**

```
typedef uint8_t lv_canvas_part_t
```

#### **Enums**

# enum [anonymous]

Values:

LV CANVAS PART MAIN

#### **Functions**

```
lv\_obj\_t *lv\_canvas\_create(lv\_obj\_t *par, const lv\_obj\_t *copy)
```

Create a canvas object

Return pointer to the created canvas

#### **Parameters**

- par: pointer to an object, it will be the parent of the new canvas
- copy: pointer to a canvas object, if not NULL then the new object will be copied from it

Set a buffer for the canvas.

#### **Parameters**

- buf: a buffer where the content of the canvas will be. The required size is (lv\_img\_color\_format\_get\_px\_size(cf) \* w \* h) / 8) It can be allocated with lv\_mem\_alloc() or it can be statically allocated array (e.g. static lv\_color\_t buf[100\*50]) or it can be an address in RAM or external SRAM
- canvas: pointer to a canvas object
- W: width of the canvas
- h: height of the canvas
- cf: color format. LV\_IMG\_CF\_...

void lv canvas set px(lv\_obj\_t\*canvas, lv\_coord\_t x, lv\_coord\_t y, lv\_color\_t c)

Set the color of a pixel on the canvas

### **Parameters**

- · canvas:
- X: x coordinate of the point to set
- y: x coordinate of the point to set
- C: color of the point

```
void lv_canvas_set_palette(lv_obj_t *canvas, uint8_t id, lv_color_t c)
```

Set the palette color of a canvas with index format. Valid only for LV IMG CF INDEXED1/2/4/8

- canvas: pointer to canvas object
- id: the palette color to set:

- for LV\_IMG\_CF\_INDEXED1: 0..1
- for LV IMG CF INDEXED2: 0..3
- for LV IMG CF INDEXED4: 0..15
- for LV\_IMG\_CF\_INDEXED8: 0..255
- **c**: the color to set

# $lv\_color\_t$ <code>lv\\_canvas\_get\_px(lv\\_obj\\_t\*canvas, lv\\_coord\\_t x, lv\\_coord\\_t y)</code>

Get the color of a pixel on the canvas

Return color of the point

#### **Parameters**

- · canvas:
- X: x coordinate of the point to set
- y: x coordinate of the point to set

 $lv\_img\_dsc\_t *lv\_canvas\_get\_img(lv\_obj\_t *canvas)$ 

Get the image of the canvas as a pointer to an lv\_img\_dsc\_t variable.

Return pointer to the image descriptor.

#### **Parameters**

• canvas: pointer to a canvas object

```
void lv_canvas_copy_buf( lv_obj_t*canvas, const void *to_copy, lv_coord_t x, lv_coord_t y, lv_coord_t w, lv_coord_t h)

Copy a buffer to the canvas
```

# Parameters

- canvas: pointer to a canvas object
- to copy: buffer to copy. The color format has to match with the canvas's buffer color format
- X: left side of the destination position
- y: top side of the destination position
- W: width of the buffer to copy
- h: height of the buffer to copy

```
void lv_canvas_transform(lv\_obj\_t*canvas, lv_img_dsc_t*img, int16_t angle, uint16_t zoom, lv_coord_t offset\_x, lv_coord_t offset\_y, int32_t pivot\_x, int32_t pivot\_y, bool antialias)
```

Transform and image and store the result on a canvas.

- canvas: pointer to a canvas object to store the result of the transformation.
- **img**: pointer to an image descriptor to transform. Can be the image descriptor of an other canvas too (*lv\_canvas\_get\_img()*).
- angle: the angle of rotation (0..3600), 0.1 deg resolution
- **ZOOM**: zoom factor (256 no zoom);
- offset X: offset X to tell where to put the result data on destination canvas
- offset y: offset X to tell where to put the result data on destination canvas

- pivot\_x: pivot X of rotation. Relative to the source canvas Set to source width / 2 to rotate around the center
- pivot\_y: pivot Y of rotation. Relative to the source canvas Set to source height / 2 to rotate around the center
- antialias: apply anti-aliasing during the transformation. Looks better but slower.

# void $lv_canvas_blur_hor(lv_obj_t *canvas, const lv_area_t *area, uint16_t r)$

Apply horizontal blur on the canvas

#### **Parameters**

- canvas: pointer to a canvas object
- r: radius of the blur

# void lv\_canvas\_blur\_ver(lv\_obj\_t \*canvas, const lv\_area\_t \*area, uint16\_t r)

Apply vertical blur on the canvas

#### **Parameters**

- canvas: pointer to a canvas object
- area: the area to blur. If **NULL** the whole canvas will be blurred.
- r: radius of the blur

# void lv\_canvas\_fill\_bg(lv\_obj\_t\*canvas, lv\_color\_t color, lv\_opa\_t opa)

Fill the canvas with color

#### **Parameters**

- canvas: pointer to a canvas
- color: the background color

Draw a rectangle on the canvas

#### **Parameters**

- canvas: pointer to a canvas object
- X: left coordinate of the rectangle
- y: top coordinate of the rectangle
- W: width of the rectangle
- h: height of the rectangle
- style: style of the rectangle (body properties are used except padding)

Draw a text on the canvas.

- canvas: pointer to a canvas object
- X: left coordinate of the text
- y: top coordinate of the text
- max\_w: max width of the text. The text will be wrapped to fit into this size

- style: style of the text (text properties are used)
- txt: text to display
- align: align of the text (LV LABEL ALIGN LEFT/RIGHT/CENTER)

void lv\_canvas\_draw\_img(lv\_obj\_t \*canvas, lv\_coord\_t x, lv\_coord\_t y, const void \*src, lv\_draw img dsc t \*imq draw dsc)

Draw an image on the canvas

#### **Parameters**

- canvas: pointer to a canvas object
- src: image source. Can be a pointer an lv\_img\_dsc\_t variable or a path an image.
- style: style of the image (image properties are used)

Draw a line on the canvas

#### **Parameters**

- canvas: pointer to a canvas object
- points: point of the line
- point cnt: number of points
- style: style of the line (line properties are used)

 $\label{eq:convas_draw_polygon} \begin{tabular}{ll} v\_canvas\_draw\_polygon(\begin{tabular}{ll} lv\_obj\_t & *canvas\_ & const & lv\_point\_t & points[], & uint32\_t & point\_cnt, lv\_draw\_rect\_dsc\_t & *poly\_draw\_dsc) \end{tabular}$ 

Draw a polygon on the canvas

#### **Parameters**

- canvas: pointer to a canvas object
- points: point of the polygon
- point cnt: number of points
- style: style of the polygon (body.main color and body.opa is used)

Draw an arc on the canvas

#### **Parameters**

- canvas: pointer to a canvas object
- X: origo x of the arc
- y: origo y of the arc
- r: radius of the arc
- start angle: start angle in degrees
- end angle: end angle in degrees
- style: style of the polygon (body.main color and body.opa is used)

### struct lv\_canvas\_ext\_t

#### **Public Members**

```
lv_img_ext_t img
lv_img_dsc_t dsc
```

## 5.8 Checkbox (Iv\_cb)

### 5.8.1 Overview

The Checkbox objects are built from a *Button* background which contains an also Button *bullet* and a *Label* to realize a classical checkbox.

## 5.8.2 Parts and Styles

The Check box's main part is called LV\_CHECKBOX\_PART\_BG. It's a container for a "bullet" and a text next to it. The background uses all the typical background style properties.

The bullet is real  $lv\_obj$  object and can be referred with LV\_CHACKBOX\_PART\_BULLET. The bullet automatically inherits the state of the background. So the background is pressed the bullet goes to pressed state as well. The bullet also uses all the typical background style properties.

There is not dedicated part for the label. Its styles can be set in the background's styles because the *text* styles properties are always inherited.

## 5.8.3 Usage

#### **Text**

The text can be modified by the lv\_checkbox\_set\_text(cb, "New text") function. It will dynamically allocate the text.

To set a static text, use lv\_checkbox\_set\_static\_text(cb, txt). This way, only a pointer of txt will be stored and it shouldn't be deallocated while the checkbox exists.

## Check/Uncheck

You can manually check / un-check the Checkbox via lv\_checkbox\_set\_checked(cb, true/false). Setting true will check the checkbox and false will un-check the checkbox.

### **Disabled**

To make the Checkbox disabled, use lv\_checkbox\_set\_disabled(cb, true).

#### **5.8.4 Events**

Besides the Generic events the following Special events are sent by the Checkboxes:

• LV\_EVENT\_VALUE\_CHANGED - sent when the checkbox is toggled.

Note that, the generic input device-related events (like  $LV\_EVENT\_PRESSED$ ) are sent in the inactive state too. You need to check the state with  $lv\_cb\_is\_inactive(cb)$  to ignore the events from inactive Checkboxes.

Learn more about *Events*.

## 5.8.5 Keys

The following *Keys* are processed by the 'Buttons':

- LV\_KEY\_RIGHT/UP Go to toggled state if toggling is enabled
- LV\_KEY\_LEFT/DOWN Go to non-toggled state if toggling is enabled

Note that, as usual, the state of  $LV\_KEY\_ENTER$  is translated to  $LV\_EVENT\_PRESSED/PRESSING/RELEASED$  etc.

Learn more about Keys.

## 5.8.6 Example

C

## Simple Checkbox



code

```
#include "../../lv_examples.h"
#include <stdio.h>
#if LV_USE_CHECKBOX

static void event_handler(lv_obj_t * obj, lv_event_t event)
{
```

(continues on next page)

(continued from previous page)

```
if(event == LV_EVENT_VALUE_CHANGED) {
    printf("State: %s\n", lv_checkbox_is_checked(obj) ? "Checked" : "Unchecked");
}

void lv_ex_checkbox_1(void)
{
    lv_obj_t * cb = lv_checkbox_create(lv_scr_act(), NULL);
    lv_checkbox_set_text(cb, "I agree to terms and conditions.");
    lv_obj_align(cb, NULL, LV_ALIGN_CENTER, 0, 0);
    lv_obj_set_event_cb(cb, event_handler);
}

#endif
```

## MicroPython

No examples yet.

## 5.8.7 API

## **Typedefs**

```
typedef uint8_t lv_checkbox_style_t
```

### **Enums**

```
enum [anonymous]
```

Checkbox styles.

Values:

```
LV\_CHECKBOX\_PART\_BG = LV\_BTN\_PART\_MAIN
```

Style of object background.

\_LV\_CHECKBOX\_PART\_VIRTUAL\_LAST

\_LV\_CHECKBOX\_PART\_REAL\_LAST

#### **Functions**

```
 lv\_obj\_t *lv\_checkbox\_create( lv\_obj\_t *par, const \ lv\_obj\_t *copy) \\ Create a check box objects
```

Return pointer to the created check box

#### **Parameters**

- par: pointer to an object, it will be the parent of the new check box
- copy: pointer to a check box object, if not NULL then the new object will be copied from it

## void $lv_checkbox_set_text(lv_obj_t *cb, const char *txt)$

Set the text of a check box. txt will be copied and may be deallocated after this function returns.

#### **Parameters**

- cb: pointer to a check box
- txt: the text of the check box. NULL to refresh with the current text.

## void $lv\_checkbox\_set\_text\_static(lv\_obj\_t*cb, const char*txt)$

Set the text of a check box. txt must not be deallocated during the life of this checkbox.

#### **Parameters**

- cb: pointer to a check box
- txt: the text of the check box. NULL to refresh with the current text.

## **static** void **lv\_checkbox\_set\_checked**(lv\_obj\_t \*cb, bool checked)

Set the state of the check box

#### **Parameters**

- cb: pointer to a check box object
- checked: true: make the check box checked; false: make it unchecked

## static void lv\_checkbox\_set\_disabled(lv\_obj\_t \*cb)

Make the check box inactive (disabled)

#### **Parameters**

• cb: pointer to a check box object

## const char \*lv checkbox get text(const $lv\_obj\_t$ \*cb)

Get the text of a check box

Return pointer to the text of the check box

#### **Parameters**

• **cb**: pointer to check box object

## static bool lv checkbox is checked(const $lv\_obj\_t*cb$ )

Get the current state of the check box

Return true: checked; false: not checked

#### **Parameters**

• cb: pointer to a check box object

## static bool lv\_checkbox\_is\_inactive(const $lv\_obj\_t *cb$ )

Get whether the check box is inactive or not.

Return true: inactive; false: not inactive

#### **Parameters**

• cb: pointer to a check box object

#### struct lv checkbox ext t

#### **Public Members**

```
lv_btn_ext_t bg_btn
lv_obj_t *bullet
lv_obj_t *label
```

## 5.9 Chart (Iv\_chart)

### 5.9.1 Overview

Charts are basic object to visualize data points. It support *Line* charts (connect points with lines and/or draw points on them) and *Column* chart.

Chart also support division lines, 2 y axis, axis ticks, and texts on ticks.

## 5.9.2 Parts and Styles

The Chart's main part is called LV\_CHART\_PART\_BG and it uses all the typical background properties. The *text* style properties determine the style of the axis texts and the *line* properties determine ticks' style. *Padding* values add some space on the sides thus it makes *series area* smaller. Padding also can be used to make space for axis texts and ticks.

The background of the series is called LV\_CHART\_PART\_SERIES\_BG and it's placed on the main background. The division lines, and series data is drawn on this part. Besides the typical background style properties the *line* style properties are used by the division lines. The *padding* values tells the space between the this part and the axis texts.

The style of the series can be referenced by LV\_CHART\_PART\_SERIES. In case of column type the following properties are used:

- radius: radius of the bars
- padding\_inner: space between the columns of the same **x** coordinate

In case of Line type these properties are used:

- line properties to describe the lines
- size radius of the points
- bg\_opa: the overall opacity of the area below the lines
- bg\_main\_stop: % of bg\_opa at the top to create an alpha fade (0: transparent at the top, 255: bg\_opa at the top)
- bg\_grad\_stop: % of bg\_opa at the bottom to create an alpha fade (0: transparent at the bottom, 255: bg\_opa at the top)
- bg\_drag\_dir: should be LV\_GRAD\_DIR\_VER to allow alpha fading with bg\_main\_stop and bg\_grad\_stop

## 5.9.3 Usage

#### **Data series**

You can add any number of series to the charts by lv\_chart\_add\_series(chart, color). It allocates data for a lv\_chart\_series\_t structure which contains the chosen color and an array for the data points.

#### Series' type

The following data display types exist:

- LV\_CHART\_TYPE\_NONE Do not display any data. It can be used to hide a series.
- LV\_CHART\_TYPE\_LINE Draw lines between the points.
- LV\_CHART\_TYPE\_COLUMN Draw columns.

You can specify the display type with lv\_chart\_set\_type(chart, LV\_CHART\_TYPE\_...). The types can be 'OR'ed (like LV\_CHART\_TYPE\_LINE).

## Modify the data

You have several options to set the data of series:

- 1. Set the values manually in the array like ser1->points[3] = 7 and refresh the chart with lv\_chart\_refresh(chart).
- 2. Use the lv chart set next(chart, ser, value).
- 3. Initialize all points to a given value with: lv\_chart\_init\_points(chart, ser, value).
- 4. Set all points from an array with: lv\_chart\_set\_points(chart, ser, value\_array).

Use LV\_CHART\_POINT\_DEF as value to make the library skip drawing that point, column, or line segment.

#### **Update modes**

lv chart set next can behave in two ways depending on update mode:

- LV\_CHART\_UPDATE\_MODE\_SHIFT Shift old data to the left and add the new one o the right.
- LV\_CHART\_UPDATE\_MODE\_CIRCULAR Circularly add the new data (Like an ECG diagram).

The update mode can be changed with  $lv\_chart\_set\_update\_mode(chart, LV\_CHART\_UPDATE\_MODE\_...)$ .

#### **Number of points**

The number of points in the series can be modified by lv\_chart\_set\_point\_count(chart, point\_num). The default value is 10.

### Vertical range

You can specify the minimum and maximum values in y-direction with lv\_chart\_set\_range(chart, y\_min, y\_max). The value of the points will be scaled proportionally. The default range is: 0..100.

#### **Division lines**

The number of horizontal and vertical division lines can be modified by lv\_chart\_set\_div\_line\_count(chart, hdiv\_num, vdiv\_num). The default settings are 3 horizontal and 5 vertical division lines.

#### Tick marks and labels

Ticks and labels can be added to the axis.

lv\_chart\_set\_x\_tick\_text(chart, list\_of\_values, num\_tick\_marks,
LV\_CHART\_AXIS\_...) set the ticks and texts on x axis. list\_of\_values is a string with '\n'
terminated text (expect the last) with text for the ticks. E.g. const char \* list\_of\_values
= "first\nsec\nthird". list\_of\_values can be NULL. If list\_of\_values is set then
num\_tick\_marks tells the number of ticks between two labels. If list\_of\_values is NULL then it
specifies the total number of ticks.

Major tick lines are drawn where text is placed, and minor tick lines are drawn elsewhere. lv\_chart\_set\_x\_tick\_length(chart, major\_tick\_len, minor\_tick\_len) sets the length of tick lines on the x-axis.

The same functions exists for the y axis too: lv\_chart\_set\_y\_tick\_text and lv chart set y tick length.

#### **5.9.4** Events

Only the Generic events are sent by the object type.

Learn more about *Events*.

## 5.9.5 Keys

No *Keys* are processed by the object type.

Learn more about *Keys*.

## 5.9.6 Example

C

#### Line Chart



code

```
#include "../../lv_examples.h"
#if LV_USE_CHART
void lv_ex_chart_1(void)
    /*Create a chart*/
    lv_obj_t * chart;
    chart = lv_chart_create(lv_scr_act(), NULL);
    lv_obj_set_size(chart, 200, 150);
    lv_obj_align(chart, NULL, LV_ALIGN_CENTER, 0, 0);
    lv_chart_set_type(chart, LV_CHART_TYPE_LINE); /*Show lines and points too*/
   /*Add two data series*/
   lv_chart_series_t * ser1 = lv_chart_add_series(chart, LV_COLOR_RED);
   lv chart_series_t * ser2 = lv_chart_add_series(chart, LV_COLOR_GREEN);
   /*Set the next points on 'ser1'*/
   lv chart set next(chart, ser1, 10);
    lv_chart_set_next(chart, ser1, 30);
    lv_chart_set_next(chart, ser1, 70);
    lv_chart_set_next(chart, ser1, 90);
   /*Directly set points on 'ser2'*/
    ser2->points[0] = 90;
    ser2->points[1] = 70;
```

(continues on next page)

(continued from previous page)

```
ser2->points[2] = 65;
ser2->points[3] = 65;
ser2->points[4] = 65;
ser2->points[5] = 65;
ser2->points[6] = 65;
ser2->points[7] = 65;
ser2->points[8] = 65;
ser2->points[9] = 65;
lv_chart_refresh(chart); /*Required after direct set*/
}
#endif
```



code

(continues on next page)

(continued from previous page)

```
lv_obj_set_style_local_bg_grad_dir(chart, LV_CHART_PART_SERIES, LV_STATE_DEFAULT,_

→LV GRAD DIR VER);

    lv_obj set_style_local_bg_main_stop(chart, LV_CHART_PART_SERIES, LV_STATE_DEFAULT,
           /*Max opa on the top*/
  255);
    lv obj set style local bg grad stop(chart, LV CHART PART SERIES, LV STATE DEFAULT,
           /*Transparent on the bottom*/
    /*Add two data series*/
   lv_chart_series_t * ser1 = lv_chart_add_series(chart, LV_COLOR_RED);
    lv_chart_series_t * ser2 = lv_chart_add_series(chart, LV_COLOR_GREEN);
   /*Set the next points on 'ser1'*/
   lv_chart_set_next(chart, ser1, 31);
    lv_chart_set_next(chart, ser1, 66);
    lv_chart_set_next(chart, ser1, 10);
    lv_chart_set_next(chart, ser1, 89);
    lv chart set next(chart, ser1, 63);
    lv_chart_set_next(chart, ser1, 56);
    lv_chart_set_next(chart, ser1, 32);
    lv_chart_set_next(chart, ser1, 35);
    lv_chart_set_next(chart, ser1, 57);
    lv_chart_set_next(chart, ser1, 85);
   /*Directly set points on 'ser2'*/
    ser2->points[0] = 92;
    ser2->points[1] = 71;
    ser2->points[2] = 61;
    ser2->points[3] = 15;
    ser2->points[4] = 21;
    ser2->points[5] = 35;
    ser2->points[6] = 35;
    ser2->points[7] = 58;
    ser2->points[8] = 31;
    ser2->points[9] = 53;
   lv_chart_refresh(chart); /*Required after direct set*/
}
#endif
```

## MicroPython

No examples yet.

## 5.9.7 API

## **Typedefs**

```
typedef uint8_t lv_chart_type_t
typedef uint8_t lv_chart_update_mode_t
typedef uint8_t lv_chart_axis_options_t
```

#### **Enums**

```
enum [anonymous]
    Chart types
     Values:
    LV\_CHART\_TYPE\_NONE = 0x00
         Don't draw the series
    LV\_CHART\_TYPE\_LINE = 0x01
         Connect the points with lines
    LV CHART TYPE COLUMN = 0x02
         Draw columns
enum [anonymous]
    Chart update mode for lv chart set next
     Values:
    LV_CHART_UPDATE_MODE_SHIFT
         Shift old data to the left and add the new one of the right
    LV CHART UPDATE MODE CIRCULAR
         Add the new data in a circular way
enum [anonymous]
    Data of axis
     Values:
    LV\_CHART\_AXIS\_SKIP\_LAST\_TICK = 0x00
         don't draw the last tick
    LV\_CHART\_AXIS\_DRAW\_LAST\_TICK = 0x01
         draw the last tick
    LV_CHART_AXIS_INVERSE_LABELS_ORDER = 0x02
         draw tick labels in an inversed order
enum [anonymous]
     Values:
    LV\_CHART\_PART\_BG = LV\_OBJ\_PART\_MAIN
    LV\_CHART\_PART\_SERIES\_BG = \_LV\_OBJ\_PART\_VIRTUAL\_LAST
    LV CHART PART SERIES
Functions
LV_EXPORT_CONST_INT(LV_CHART_POINT_DEF)
LV_EXPORT_CONST_INT(LV_CHART_TICK_LENGTH_AUTO)
lv_obj_t *lv_chart_create(lv_obj_t *par, const lv_obj_t *copy)
    Create a chart background objects
    Return pointer to the created chart background
    Parameters
```

• par: pointer to an object, it will be the parent of the new chart background

• copy: pointer to a chart background object, if not NULL then the new object will be copied from it

### lv\_chart\_series\_t \*lv\_chart\_add\_series(lv\_obj\_t \*chart, lv\_color\_t color)

Allocate and add a data series to the chart

Return pointer to the allocated data series

#### **Parameters**

- chart: pointer to a chart object
- color: color of the data series

```
void lv_chart_clear_serie(lv_obj_t *chart, lv_chart_series_t *serie)
```

Clear the point of a series

#### **Parameters**

- chart: pointer to a chart object
- serie: pointer to the chart's series to clear

## void lv\_chart\_set\_div\_line\_count(lv\_obj\_t\*chart, uint8\_t hdiv, uint8\_t vdiv)

Set the number of horizontal and vertical division lines

## **Parameters**

- chart: pointer to a graph background object
- hdiv: number of horizontal division lines
- vdiv: number of vertical division lines

## void **lv\_chart\_set\_range**(lv\_obj\_t \*chart, lv\_coord\_t ymin, lv\_coord\_t ymax)

Set the minimal and maximal y values

#### **Parameters**

- chart: pointer to a graph background object
- ymin: y minimum value
- ymax: y maximum value

## void lv\_chart\_set\_type(lv\_obj\_t \*chart, lv\_chart\_type\_t type)

Set a new type for a chart

#### **Parameters**

- chart: pointer to a chart object
- type: new type of the chart (from 'lv chart type t' enum)

## void lv\_chart\_set\_point\_count(lv\_obj\_t \*chart, uint16\_t point\_cnt)

Set the number of points on a data line on a chart

#### **Parameters**

- chart: pointer r to chart object
- point cnt: new number of points on the data lines

```
void lv_chart_init_points(lv_obj_t*chart, lv_chart_series_t*ser, lv_coord_t y)
```

Initialize all data points with a value

#### **Parameters**

• chart: pointer to chart object

- ser: pointer to a data series on 'chart'
- y: the new value for all points

# void **lv\_chart\_set\_points** (*lv\_obj\_t\*chart*, *lv\_chart\_series\_t\*ser*, lv\_coord\_t *y\_array*[]) Set the value of points from an array

#### **Parameters**

- chart: pointer to chart object
- ser: pointer to a data series on 'chart'
- y\_array: array of 'lv\_coord\_t' points (with 'points count' elements )

## $\label{eq:chart_set_next} \ \ void \ \ \textbf{lv\_chart\_series\_t *ser}, \ \ \text{lv\_coord\_t } \ y \textbf{)}$

Shift all data right and set the most right data on a data line

#### **Parameters**

- chart: pointer to chart object
- ser: pointer to a data series on 'chart'
- y: the new value of the most right data

#### **Parameters**

- chart: pointer to a chart object
- update: mode

Set the length of the tick marks on the  $\overline{x}$  axis

#### **Parameters**

- chart: pointer to the chart
- major\_tick\_len: the length of the major tick or LV\_CHART\_TICK\_LENGTH\_AUTO to set automatically (where labels are added)
- minor\_tick\_len: the length of the minor tick, LV\_CHART\_TICK\_LENGTH\_AUTO to set automatically (where no labels are added)

void 
$$lv\_chart\_set\_y\_tick\_length(lv\_obj\_t *chart, uint8\_t major\_tick\_len, uint8\_t mi-nor\_tick\_len)$$
  
Set the length of the tick marks on the y axis

#### **Parameters**

- chart: pointer to the chart
- major\_tick\_len: the length of the major tick or LV\_CHART\_TICK\_LENGTH\_AUTO to set automatically (where labels are added)
- minor\_tick\_len: the length of the minor tick, LV\_CHART\_TICK\_LENGTH\_AUTO to set automatically (where no labels are added)

# $\label{eq:condary_y_tick_length} \begin{tabular}{ll} void $\tt lv\_chart\_set\_secondary\_y\_tick\_length($\it lv\_obj\_t *\it chart, uint8\_t major\_tick\_len, uint8\_t minor\_tick\_len) \end{tabular}$

Set the length of the tick marks on the secondary y axis

#### Parameters

- chart: pointer to the chart
- major\_tick\_len: the length of the major tick or LV\_CHART\_TICK\_LENGTH\_AUTO to set automatically (where labels are added)
- minor\_tick\_len: the length of the minor tick, LV\_CHART\_TICK\_LENGTH\_AUTO to set automatically (where no labels are added)

Set the x-axis tick count and labels of a chart

#### **Parameters**

- chart: pointer to a chart object
- list\_of\_values: list of string values, terminated with , except the last
- num\_tick\_marks: if list\_of\_values is NULL: total number of ticks per axis else number of ticks between two value labels
- options: extra options

Set the secondary y-axis tick count and labels of a chart

#### **Parameters**

- chart: pointer to a chart object
- list\_of\_values: list of string values, terminated with , except the last
- num\_tick\_marks: if list\_of\_values is NULL: total number of ticks per axis else number of ticks between two value labels
- options: extra options

Set the y-axis tick count and labels of a chart

### **Parameters**

- chart: pointer to a chart object
- list of values: list of string values, terminated with , except the last
- num\_tick\_marks: if list\_of\_values is NULL: total number of ticks per axis else number of ticks between two value labels
- options: extra options

## lv\_chart\_type\_t lv\_chart\_get\_type(const lv\_obj\_t \*chart)

Get the type of a chart

**Return** type of the chart (from 'lv chart t' enum)

#### **Parameters**

• chart: pointer to chart object

## uint16\_t lv\_chart\_get\_point\_count(const lv\_obj\_t \*chart)

Get the data point number per data line on chart

Return point number on each data line

#### **Parameters**

```
• chart: pointer to chart object
```

## void lv\_chart\_refresh(lv\_obj\_t \*chart)

Refresh a chart if its data line has changed

#### **Parameters**

• chart: pointer to chart object

## struct lv\_chart\_series\_t

#### **Public Members**

```
lv_coord_t *points
lv_color_t color
uint16_t start_point
```

struct lv\_chart\_axis\_cfg\_t

#### **Public Members**

#### **Public Members**

```
lv_ll_t series_ll
lv_coord_t ymin
lv_coord_t ymax
uint8_t hdiv_cnt
uint8_t vdiv_cnt
uint16_t point_cnt
lv_style_list_t style_series_bg
lv_style_list_t style_series
lv_chart_type_t type
lv_chart_axis_cfg_t y_axis
lv_chart_axis_cfg_t x_axis
uint8_t update_mode
```

## 5.10 Container (lv\_cont)

#### 5.10.1 Overview

The containers are essentially a **basic object** with some special features.

## Layout

You can apply a layout on the containers to automatically order their children. The layout spacing comes from style.body.padding. ... properties. The possible layout options:

- LV\_LAYOUT\_OFF Do not align the children.
- LV\_LAYOUT\_CENTER Align children to the center in column and keep padding.inner space between them.
- LV\_LAYOUT\_COL\_ Align children in a left-justified column. Keep padding.left space on the left, pad.top space on the top and padding.inner space between the children.
- LV\_LAYOUT\_COL\_M Align children in centered column. Keep padding.top space on the top and padding.inner space between the children.
- LV\_LAYOUT\_COL\_R Align children in a right-justified column. Keep padding.right space on the right, padding.top space on the top and padding.inner space between the children.
- LV\_LAYOUT\_ROW\_T Align children in a top justified row. Keep padding.left space on the left, padding.top space on the top and padding.inner space between the children.
- LV\_LAYOUT\_ROW\_M Align children in centered row. Keep padding.left space on the left and padding.inner space between the children.
- LV\_LAYOUT\_ROW\_B Align children in a bottom justified row. Keep padding.left space on the left, padding.bottom space on the bottom and padding.inner space between the children.
- LV\_LAYOUT\_PRETTY Put as many objects as possible in a row (with at least padding. inner space and padding.left/right space on the sides). Divide the space in each line equally between the children. Keep padding.top space on the top and pad.inner space between the lines.
- LV\_LAYOUT\_GRID Similar to LV\_LAYOUT\_PRETTY but not divide horizontal space equally just let padding.left/right on the edges and padding.inner space between the elements.

#### **Autofit**

Container have an autofit feature which can automatically change the size of the container according to its children and/or parent. The following options exist:

- LV\_FIT\_NONE Do not change the size automatically.
- LV\_FIT\_TIGHT Shrink-wrap the container around all of its children, while keeping padding. top/bottom/left/right space on the edges.
- LV\_FIT\_FLOOD Set the size to the parent's size minus padding.top/bottom/left/right (from the parent's style) space.
- LV\_FIT\_FILL Use LV\_FIT\_FLOOD while smaller than the parent and LV\_FIT\_TIGHT when larger. It will ensure that the container is, at minimum, the size of its parent.

To set the auto fit mode for all directions, use <code>lv\_cont\_set\_fit(cont, LV\_FIT\_...)</code>. To use different auto fit horizontally and vertically, use <code>lv\_cont\_set\_fit2(cont, hor\_fit\_type, ver\_fit\_type)</code>. To use different auto fit in all 4 directions, use <code>lv\_cont\_set\_fit4(cont, left\_fit\_type, right\_fit\_type, top\_fit\_type, bottom\_fit\_type)</code>.

## 5.10.2 Styles

You can set the styles with lv\_cont\_set\_style(btn, LV\_CONT\_STYLE\_MAIN, &style).

• style.body properties are used.

### **5.10.3** Events

Only the Generic events are sent by the object type.

Learn more about *Events*.

## 5.10.4 Keys

No *Keys* are processed by the object type.

Learn more about Keys.

## **5.10.5** Example

C

Container with auto-fit

Short text

It is a long text

Here is an even longer text

code

```
#include "../../lv_examples.h"
#if LV_USE_CONT
void lv_ex_cont_1(void)
   lv_obj_t * cont;
    cont = lv cont create(lv scr act(), NULL);
    lv obj set auto realign(cont, true);
                                                             /*Auto realign when the
⇒size changes*/
    lv_obj_align_origo(cont, NULL, LV_ALIGN_CENTER, 0, 0); /*This parametrs will be_
→sued when realigned*/
    lv cont set fit(cont, LV FIT TIGHT);
    lv_cont_set_layout(cont, LV_LAYOUT_COLUMN_MID);
    lv_obj_t * label;
    label = lv_label_create(cont, NULL);
    lv label set text(label, "Short text");
   /*Refresh and pause here for a while to see how `fit` works*/
   uint32 t t;
    lv refr now(NULL);
    t = lv_tick_get();
   while(lv_tick_elaps(t) < 500);</pre>
    label = lv label create(cont, NULL);
    lv_label_set_text(label, "It is a long text");
   /*Wait here too*/
   lv_refr_now(NULL);
   t = lv_tick_get();
   while(lv_tick_elaps(t) < 500);</pre>
   label = lv_label_create(cont, NULL);
    lv_label_set_text(label, "Here is an even longer text");
}
#endif
```

## MicroPython

No examples yet.

### 5.10.6 API

### **Typedefs**

```
typedef uint8_t lv_layout_t
typedef uint8_t lv_fit_t
```

#### **Enums**

## enum [anonymous]

Container layout options

Values:

### LV LAYOUT OFF = 0

No layout

## LV\_LAYOUT\_CENTER

Center objects

## LV LAYOUT COLUMN LEFT

COULMN:

- Place the object below each other
- Keep pad top space on the top
- Keep pad\_inner space between the objectsColumn left align

### LV LAYOUT COLUMN MID

Column middle align

## LV LAYOUT COLUMN RIGHT

Column right align

## LV\_LAYOUT\_ROW\_TOP

ROW:

- Place the object next to each other
- Keep pad left space on the left
- Keep pad\_inner space between the objects
- If the object which applies the layout has base\_dir == LV\_BIDI\_DIR\_RTL the row will start from the right applying pad.right spaceRow top align

## LV\_LAYOUT\_ROW\_MID

Row middle align

### LV LAYOUT ROW BOTTOM

Row bottom align

## LV\_LAYOUT\_PRETTY\_TOP

PRETTY:

- Place the object next to each other
- If there is no more space start a new row
- Respect pad\_left and pad\_right when determining the available space in a row
- Keep pad\_inner space between the objects in the same row
- Keep pad\_inner space between the objects in rows
- Divide the remaining horizontal space equally Row top align

## LV\_LAYOUT\_PRETTY\_MID

Row middle align

## LV\_LAYOUT\_PRETTY\_BOTTOM

Row bottom align

## LV\_LAYOUT\_GRID

GRID

- Place the object next to each other
- If there is no more space start a new row
- Respect pad\_left and pad\_right when determining the available space in a row
- Keep pad inner space between the objects in the same row
- Keep pad\_inner space between the objects in rows
- Unlike PRETTY, GRID always keep pad\_inner space horizontally between objects so it doesn't divide the remaining horizontal space equally Align same-sized object into a grid

## \_LV\_LAYOUT\_LAST

### enum [anonymous]

How to resize the container around the children.

Values:

## LV\_FIT\_NONE

Do not change the size automatically

## LV\_FIT\_TIGHT

Shrink wrap around the children

### LV FIT PARENT

Align the size to the parent's edge

## LV\_FIT\_MAX

Align the size to the parent's edge first but if there is an object out of it then get larger

```
LV FIT LAST
```

### enum [anonymous]

Values:

```
 \begin{split} \mathbf{LV\_CONT\_PART\_MAIN} &= LV\_OBJ\_PART\_MAIN \\ \mathbf{\_LV\_CONT\_PART\_VIRTUAL\_LAST} &= \_LV\_OBJ\_PART\_VIRTUAL\_LAST \\ \mathbf{\_LV\_CONT\_PART\_REAL\_LAST} &= \_LV\_OBJ\_PART\_REAL\_LAST \end{split}
```

## **Functions**

```
lv\_obj\_t *lv\_cont\_create(lv\_obj\_t *par, const lv\_obj\_t *copy)
```

Create a container objects

Return pointer to the created container

#### **Parameters**

- par: pointer to an object, it will be the parent of the new container
- copy: pointer to a container object, if not NULL then the new object will be copied from it

```
void lv_cont_set_layout(lv_obj_t *cont, lv_layout_t layout)
```

Set a layout on a container

#### **Parameters**

• cont: pointer to a container object

• layout: a layout from 'lv\_cont\_layout\_t'

void lv cont\_set\_fit4(lv\_obj\_t\*cont, lv\_fit\_t left, lv\_fit\_t right, lv\_fit\_t top, lv\_fit\_t bottom)

Set the fit policy in all 4 directions separately. It tell how to change the container's size automatically.

#### **Parameters**

- cont: pointer to a container object
- left: left fit policy from lv\_fit\_t
- right: right fit policy from lv fit t
- top: top fit policy from lv\_fit\_t
- bottom: bottom fit policy from lv\_fit\_t

## static void lv\_cont\_set\_fit2(lv\_obj\_t\*cont, lv\_fit\_t hor, lv\_fit\_t ver)

Set the fit policy horizontally and vertically separately. It tells how to change the container's size automatically.

#### **Parameters**

- cont: pointer to a container object
- hor: horizontal fit policy from lv fit t
- ver: vertical fit policy from lv fit t

Set the fit policy in all 4 direction at once. It tells how to change the container's size automatically.

#### **Parameters**

- cont: pointer to a container object
- fit: fit policy from lv\_fit\_t

## lv\_layout\_t lv\_cont\_get\_layout(const lv\_obj\_t \*cont)

Get the layout of a container

Return the layout from 'lv cont layout t'

## Parameters

• cont: pointer to container object

## lv\_fit\_t lv\_cont\_get\_fit\_left(const lv\_obj\_t \*cont)

Get left fit mode of a container

Return an element of lv fit t

#### **Parameters**

• cont: pointer to a container object

### lv\_fit\_t lv cont get fit right(const lv\_obj\_t \*cont)

Get right fit mode of a container

Return an element of lv\_fit\_t

#### **Parameters**

• cont: pointer to a container object

## lv\_fit\_t lv\_cont\_get\_fit\_top(const lv\_obj\_t \*cont)

Get top fit mode of a container

Return an element of lv fit t

#### **Parameters**

• cont: pointer to a container object

```
lv_fit_t lv_cont_get_fit_bottom(const lv_obj_t *cont)
```

Get bottom fit mode of a container

Return an element of lv\_fit\_t

## **Parameters**

• cont: pointer to a container object

## struct lv\_cont\_ext\_t

#### **Public Members**

```
lv_layout_t layout
lv_fit_t fit_left
lv_fit_t fit_right
lv_fit_t fit_top
lv_fit_t fit_bottom
```

## 5.11 color picker (lv\_cpicker)

#### 5.11.1 Overview

As its name implies *Color picker* allows to select color. The Hue, Saturation and Value of the color can be selected after each other.

The widget has two forms: circle (disc) and rectangle.

In both forms, be long pressing the object, the color picker will change to the next parameter of the color (hue, saturation or value). Besides, double click will reset the current parameter.

#### 5.11.2 Parts and Styles

The Color picker's main part is called LV\_CPICKER\_PART\_BG. In circular form it uses *scale\_width* to set the the width of the circle and *pad\_inner* for padding between the circle and the inner preview circle. In rectangle mode *radius* can be used to apply a radius on the rectangle.

The object has virtual part called LV\_CPICKER\_PART\_KNOB which is rectangle (or circle) drawn on the current value. It uses all the rectangle like style properties and padding to make it larger than the width of the circle or rectangle background.

## 5.11.3 Usage

#### **Type**

The type of the Color picker can be changed with lv\_cpicker\_set\_type(cpicker, LV\_CPICKER\_TYPE\_RECT/DISC)

#### Set color

The colro can be set manually with lv\_cpicker\_set\_hue/saturation/value(cpicker, x) or all at once with lv\_cpicker\_set\_hsv(cpicker, hsv) or lv\_cpicker\_set\_color(cpicker, rgb)

#### Color mode

The current color moed can be manually selected with lv\_cpicker\_set\_color\_mode(cpicker, LV CPICKER COLOR MODE HUE/SATURATION/VALUE).

The color moe be fixed (do not change with long press) using lv cpicker set color mode fixed(cpicker, true)

#### **Knob color**

lv\_cpicker\_set\_knob\_colored(cpicker, true) make the knob to automatically show the selected
color as background color.

## **5.11.4 Events**

Only the Generic events are sent by the object type.

Learn more about *Events*.

## 5.11.5 Keys


- LV\_KEY\_UP, LV\_KEY\_RIGHT Increment the current parameter's value by 1
- LV\_KEY\_DOWN, LV\_KEY\_LEFT Decrement the current parameter's by 1
- LV\_KEY\_ENTER By long press the next mode will be shown. By double click the current parameter will be reset.

Learn more about *Keys*.

## **5.11.6 Example**

C

## Disc color picker

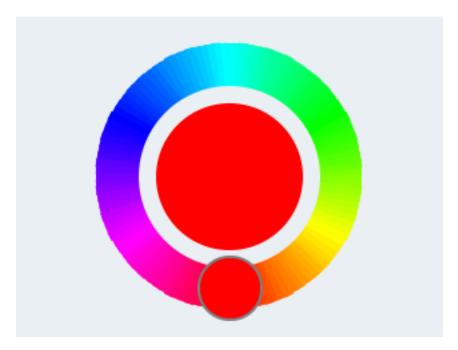

code

```
#include "../../lv_examples.h"
#if LV_USE_CPICKER

void lv_ex_cpicker_1(void)
{
    lv_obj_t * cpicker;

    cpicker = lv_cpicker_create(lv_scr_act(), NULL);
    lv_obj_set_size(cpicker, 200, 200);
    lv_obj_align(cpicker, NULL, LV_ALIGN_CENTER, 0, 0);
}
#endif
```

## MicroPython

No examples yet.

## 5.11.7 API

## **Typedefs**

```
typedef uint8_t lv_cpicker_type_t
typedef uint8_t lv_cpicker_color_mode_t
```

#### **Enums**

```
enum [anonymous]
     Values:
    LV CPICKER TYPE RECT
    LV CPICKER TYPE DISC
enum [anonymous]
     Values:
    LV CPICKER COLOR MODE HUE
    LV_CPICKER_COLOR_MODE_SATURATION
    LV_CPICKER_COLOR_MODE_VALUE
enum [anonymous]
     Values:
    LV CPICKER PART MAIN = LV OBJ PART MAIN
    LV\_CPICKER\_PART\_KNOB = \_LV\_OBJ\_PART\_VIRTUAL\_LAST
     _LV_CPICKER_PART_VIRTUAL_LAST
    LV CPICKER PART REAL LAST = LV OBJ PART REAL LAST
Functions
lv obj t *lv cpicker create(lv obj t *par, const lv obj t *copy)
    Create a colorpicker objects
    Return pointer to the created colorpicker
    Parameters
           • par: pointer to an object, it will be the parent of the new colorpicker
           • copy: pointer to a colorpicker object, if not NULL then the new object will be copied from
            it
void lv_cpicker_set_type(lv_obj_t *cpicker, lv_cpicker_type_t type)
    Set a new type for a colorpicker
    Parameters
           • cpicker: pointer to a colorpicker object
           • type: new type of the colorpicker (from 'lv_cpicker_type_t' enum)
bool lv cpicker set hue(lv_obj_t *cpicker, uint16 t hue)
    Set the current hue of a colorpicker.
    Return true if changed, otherwise false
    Parameters
           • cpicker: pointer to colorpicker object
           • hue: current selected hue [0..360]
bool lv_cpicker_set_saturation(lv_obj_t *cpicker, uint8_t saturation)
```

Set the current saturation of a colorpicker.

Return true if changed, otherwise false

#### **Parameters**

- cpicker: pointer to colorpicker object
- saturation: current selected saturation [0..100]

## bool $lv\_cpicker\_set\_value(lv\_obj\_t*cpicker, uint8\_t val)$

Set the current value of a colorpicker.

Return true if changed, otherwise false

#### **Parameters**

- cpicker: pointer to colorpicker object
- val: current selected value [0..100]

## bool lv\_cpicker\_set\_hsv(lv\_obj\_t\*cpicker, lv\_color\_hsv\_t hsv)

Set the current hsv of a colorpicker.

Return true if changed, otherwise false

#### **Parameters**

- cpicker: pointer to colorpicker object
- hsv: current selected hsv

## bool lv\_cpicker\_set\_color(lv\_obj\_t\*cpicker, lv\_color\_t color)

Set the current color of a colorpicker.

Return true if changed, otherwise false

### Parameters

- cpicker: pointer to colorpicker object
- color: current selected color

## 

Set the current color mode.

#### **Parameters**

- cpicker: pointer to colorpicker object
- mode: color mode (hue/sat/val)

## $\label{eq:color_mode_fixed(lv_obj\_t*cpicker, bool fixed)} void \ \textbf{lv\_cpicker\_set\_color\_mode\_fixed(lv\_obj\_t*cpicker, bool fixed)}$

Set if the color mode is changed on long press on center

#### **Parameters**

- cpicker: pointer to colorpicker object
- fixed: color mode cannot be changed on long press

## void lv cpicker set knob colored(lv\_obj\_t\*cpicker, bool en)

Make the knob to be colored to the current color

#### **Parameters**

- cpicker: pointer to colorpicker object
- en: true: color the knob; false: not color the knob

## $lv\_cpicker\_color\_mode\_t$ $lv\_cpicker\_get\_color\_mode(lv\_obj\_t *cpicker)$

Get the current color mode.

Return color mode (hue/sat/val)

#### **Parameters**

• cpicker: pointer to colorpicker object

## bool lv\_cpicker\_get\_color\_mode\_fixed(lv\_obj\_t\*cpicker)

Get if the color mode is changed on long press on center

Return mode cannot be changed on long press

#### **Parameters**

• cpicker: pointer to colorpicker object

## uint16\_t lv\_cpicker\_get\_hue(lv\_obj\_t \*cpicker)

Get the current hue of a colorpicker.

Return current selected hue

#### **Parameters**

• cpicker: pointer to colorpicker object

## uint8\_t lv\_cpicker\_get\_saturation(lv\_obj\_t \*cpicker)

Get the current saturation of a colorpicker.

Return current selected saturation

#### **Parameters**

• cpicker: pointer to colorpicker object

## uint8\_t lv\_cpicker\_get\_value(lv\_obj\_t \*cpicker)

Get the current hue of a colorpicker.

Return current selected value

#### **Parameters**

• cpicker: pointer to colorpicker object

## lv\_color\_hsv\_t lv\_cpicker\_get\_hsv(lv\_obj\_t \*cpicker)

Get the current selected hsv of a colorpicker.

Return current selected hsv

#### **Parameters**

• cpicker: pointer to colorpicker object

## lv\_color\_t lv\_cpicker\_get\_color(lv\_obj\_t \*cpicker)

Get the current selected color of a colorpicker.

Return current selected color

#### **Parameters**

• cpicker: pointer to colorpicker object

## bool lv\_cpicker\_get\_knob\_colored(lv\_obj\_t \*cpicker)

Whether the knob is colored to the current color or not

Return true: color the knob; false: not color the knob

**Parameters** 

• cpicker: pointer to color picker object

## struct lv\_cpicker\_ext\_t

#### **Public Members**

```
lv_color_hsv_t hsv
lv_style_list_t style_list
lv_point_t pos
uint8_t colored
struct lv_cpicker_ext_t::[anonymous] knob
uint32_t last_click_time
uint32_t last_change_time
lv_point_t last_press_point
lv_cpicker_color_mode_t color_mode
uint8_t color_mode_fixed
lv_cpicker_type_t type
```

## 5.12 Drop-down list (lv\_dropdown)

#### 5.12.1 Overview

The drop-down list allows the user to select one value from a list.

The drop-down list is closed by default and displays a single value or a predefined text. When activated (by click on the drop-down list), a list is created from which the user may select one option. When the user selects a new value, the list is deleted.

## 5.12.2 Parts and Styles

The drop-down list's main part is called LV\_DROPDOWN\_PART\_MAIN which is a simple  $lv\_obj$  object. It uses all the typical background properties. *Pressed*, *Focused*, *Edited* etc. stiles are also applied as usual.

The list, which is created when the main object is clicked, is an *Page*. Its background part can be referenced with LV\_DROPDOWN\_PART\_LIST and uses all the typical background properties for the rectangle itself and text properties for the options. To adjust the space between the options use the *text\_line\_space* style property. Padding values can be used to make some space on the edges.

The scrollable part of the page is hidden and its styles are always empty (so transparent with no padding).

The scrollbar can be referenced with LV\_DROPDOWN\_PART\_SCRLBAR and uses all the typical background properties.

The selected option can be referenced with LV\_DROPDOWN\_PART\_SELECTED and uses all the typical background properties. It will used in its default state to draw a rectangle on the selected option, and in pressed state to draw a rectangle on the being pressed option.

## 5.12.3 Usage

## 5.12.4 Overview

## Set options

The options are passed to the drop-down list as a string with <code>lv\_dropdown\_set\_options(dropdown, options)</code>. The options should be separated by <code>\n</code>. For example: <code>"First\nSecond\nThird"</code>. The string will be saved in the drop-down list, so it can in local variable too.

The lv\_dropdown\_add\_option(dropdown, "New option", pos) function inserts a new option to pos index.

To save memory the options can set from a static(constant) string too with  $lv\_dropdown\_set\_static\_options(dropdown, options)$ . In this case the options string should be alive while the drop-down list exists and  $lv\_dropdown\_add\_option$  can't be used

You can select an option manually with lv\_dropdown\_set\_selected(dropdown, id), where id is the index of an option.

#### Get selected option

The get the currently selected option, use <code>lv\_dropdown\_get\_selected(dropdown)</code>. It will return the <code>index</code> of the selected option.

lv\_dropdown\_get\_selected\_str(dropdown, buf, buf\_size) copies the name of the selected option to a buf.

### Direction

The list can be created on any side. The default  $LV\_DROPDOWN\_DOWN$  can be modified by  $lv\_dropdown\_set\_dir(dropdown, LV\_DROPDOWN\_DIR\_LEFT/RIGHT/UP/DOWN)$  function.

If the list would be vertically out of the screen, it will aligned to the edge.

## **Symbol**

A symbol (typically an arrow) can be added to the drop down list with  $lv\_dropdown\_set\_symbol(dropdown, LV\_SYMBOL\_...)$ 

If the direction of the drop-down list is LV\_DROPDOWN\_DIR\_LEFT the symbol will be shown on the left, else on the right.

## Maximum height

The maximum height of drop-down list can be set via lv\_dropdown\_set\_max\_height(dropdown, height). By default it's set to 3/4 vertical resolution.

#### Show selected

The main part can either show the selected option or a static text. It can controlled with lv dropdown set show selected(sropdown, true/false).

The static text can be set with  $lv\_dropdown\_set\_text(dropdown, "Text")$ . Only the pointer of the text is saved.

#### **Animation time**

The drop-down list's open/close animation time is adjusted by lv\_dropdown\_set\_anim\_time(ddlist, anim\_time). Zero animation time means no animation.

## Manually open/close

To manually open or close the drop-down list the  $lv\_dropdown\_open/close(dropdown, LV ANIM ON/OFF)$  function can be used.

## **5.12.5** Events

Besides the Generic events, the following Special events are sent by the drop-down list:

• LV\_EVENT\_VALUE\_CHANGED - Sent when the new option is selected.

Learn more about *Events*.

## 5.12.6 Keys

The following Keys are processed by the Buttons:

- LV\_KEY\_RIGHT/DOWN Select the next option.
- LV\_KEY\_LEFT/UP Select the previous option.
- LY\_KEY\_ENTER Apply the selected option (Send LV\_EVENT\_VALUE\_CHANGED event and close the drop-down list).

## **5.12.7 Example**

C

### Simple Drop down list



code

```
#include "../../lv_examples.h"
#include <stdio.h>
#if LV_USE_DROPDOWN
static void event_handler(lv_obj_t * obj, lv_event_t event)
                   if(event == LV EVENT VALUE CHANGED) {
                                     char buf[32];
                                     lv_dropdown_get_selected_str(obj, buf, sizeof(buf));
                                     printf("Option: %s\n", buf);
                   }
}
void lv_ex_dropdown_1(void)
                  /*Create a normal drop down list*/
                  \label{local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_loc
                                                        "Banana\n"
                                                        "Orange\n"
                                                        "Melon\n"
                                                        "Grape\n"
                                                        "Raspberry");
                   lv obj align(ddlist, NULL, LV ALIGN IN TOP MID, 0, 20);
                   lv_obj_set_event_cb(ddlist, event_handler);
}
#endif
```

## Drop "up" list



code

```
#include "../../lv_examples.h"
#include <stdio.h>
#if LV USE DROPDOWN
* Create a drop LEFT menu
void lv_ex_dropdown_2(void)
    /*Create a drop down list*/
   lv_obj_t * ddlist = lv_dropdown_create(lv_scr_act(), NULL);
    lv_dropdown_set_options(ddlist, "Apple\n"
            "Banana\n"
            "Orange\n"
            "Melon\n"
            "Grape\n"
            "Raspberry");
    lv_dropdown_set_dir(ddlist, LV_DROPDOWN_DIR_LEFT);
   lv_dropdown_set_symbol(ddlist, NULL);
    lv_dropdown_set_show_selected(ddlist, false);
    lv_dropdown_set_text(ddlist, "Fruits");
    /*It will be called automatically when the size changes*/
    lv_obj_align(ddlist, NULL, LV_ALIGN_IN_TOP_RIGHT, 0, 20);
    /*Copy the drop LEFT list*/
   ddlist = lv dropdown create(lv scr act(), ddlist);
    lv obj align(ddlist, NULL, LV ALIGN IN TOP RIGHT, 0, 100);
}
```

(continues on next page)

(continued from previous page)

#endif

## MicroPython

No examples yet.

## 5.12.8 API

```
Typedefs
```

```
typedef uint8_t lv_dropdown_dir_t
typedef uint8_t lv_dropdown_part_t
```

#### **Enums**

## **Functions**

```
\mathit{lv\_obj\_t} * \texttt{lv\_dropdown\_create}(\mathit{lv\_obj\_t} * \mathit{par}, \, \texttt{const} \, \mathit{lv\_obj\_t} * \mathit{copy})
```

Create a drop down list objects

LV\_DROPDOWN\_PART\_SCROLLBAR
LV\_DROPDOWN\_PART\_SELECTED

Return pointer to the created drop down list

#### **Parameters**

- par: pointer to an object, it will be the parent of the new drop down list
- COPY: pointer to a drop down list object, if not NULL then the new object will be copied from it

```
void lv_dropdown_set_text(lv_obj_t *ddlist, const char *txt)
```

Set text of the ddlist (Displayed on the button if show selected = false)

#### **Parameters**

• ddlist: pointer to a drop down list object

• txt: the text as a string (Only it's pointer is saved)

### void lv dropdown clear options(lv\_obj\_t\*ddlist)

Clear any options in a drop down list. Static or dynamic.

#### **Parameters**

• ddlist: pointer to drop down list object

## void lv\_dropdown\_set\_options(lv\_obj\_t \*ddlist, const char \*options)

Set the options in a drop down list from a string

#### **Parameters**

- ddlist: pointer to drop down list object
- options: a string with '' separated options. E.g. "One\nTwo\nThree" The options string can be destroyed after calling this function

## void lv\_dropdown\_set\_options\_static(lv\_obj\_t \*ddlist, const char \*options)

Set the options in a drop down list from a string

#### **Parameters**

- ddlist: pointer to drop down list object
- options: a static string with ' 'separated options. E.g. "One\nTwo\nThree"

## void lv\_dropdown\_add\_option(lv\_obj\_t \*ddlist, const char \*option, uint32\_t pos)

Add an options to a drop down list from a string. Only works for dynamic options.

#### Parameters

- ddlist: pointer to drop down list object
- option: a string without ''. E.g. "Four"
- pos: the insert position, indexed from 0, LV\_DROPDOWN\_POS\_LAST = end of string

## void lv dropdown set selected( $lv\_obj\_t*ddlist$ , uint16 t $sel\_opt$ )

Set the selected option

#### **Parameters**

- ddlist: pointer to drop down list object
- **sel\_opt**: id of the selected option (0 ... number of option 1);

## void lv\_dropdown\_set\_dir(lv\_obj\_t \*ddlist, lv\_dropdown\_dir\_t dir)

Set the direction of the a drop down list

#### **Parameters**

- ddlist: pointer to a drop down list object
- dir: LV DROPDOWN DIR LEF/RIGHT/TOP/BOTTOM

## void lv\_dropdown\_set\_max\_height(lv\_obj\_t \*ddlist, lv\_coord\_t h)

Set the maximal height for the drop down list

#### **Parameters**

- ddlist: pointer to a drop down list
- h: the maximal height

#### void lv dropdown set symbol( $lv \ obj \ t *ddlist$ , const char \*symbol)

Set an arrow or other symbol to display when the drop-down list is closed.

#### **Parameters**

- ddlist: pointer to drop down list object
- $symbol: a text like LV_SYMBOL_DOWN or NULL to not draw icon$

## void lv\_dropdown\_set\_show\_selected(lv\_obj\_t \*ddlist, bool show)

Set whether the ddlist highlight the last selected option and display its text or not

#### **Parameters**

- ddlist: pointer to a drop down list object
- show: true/false

## const char \*lv dropdown get text(lv\_obj\_t \*ddlist)

Get text of the ddlist (Displayed on the button if show\_selected = false)

Return the text string

#### **Parameters**

• ddlist: pointer to a drop down list object

## const char \*lv\_dropdown\_get\_options(const lv\_obj\_t \*ddlist)

Get the options of a drop down list

Return the options separated by ''-s (E.g. "Option1\nOption2\nOption3")

#### **Parameters**

• ddlist: pointer to drop down list object

## uint16\_t lv\_dropdown\_get\_selected(const lv\_obj\_t \*ddlist)

Get the selected option

**Return** id of the selected option (0 ... number of option - 1);

#### **Parameters**

• ddlist: pointer to drop down list object

## uint16\_t lv\_dropdown\_get\_option\_cnt(const lv\_obj\_t \*ddlist)

Get the total number of options

**Return** the total number of options in the list

#### **Parameters**

• ddlist: pointer to drop down list object

#### void lv dropdown get selected str(const lv obj t\*ddlist, char \*buf, uint32 t buf size)

Get the current selected option as a string

### **Parameters**

- ddlist: pointer to ddlist object
- buf: pointer to an array to store the string
- buf size: size of buf in bytes. 0: to ignore it.

## lv\_coord\_t lv\_dropdown\_get\_max\_height(const lv\_obj\_t \*ddlist)

Get the fix height value.

**Return** the height if the ddlist is opened (0: auto size)

#### **Parameters**

• ddlist: pointer to a drop down list object

## const char \*lv\_dropdown\_get\_symbol(lv\_obj\_t \*ddlist)

Get the symbol to draw when the drop-down list is closed

**Return** the symbol or NULL if not enabled

#### **Parameters**

• ddlist: pointer to drop down list object

## lv\_dropdown\_dir\_t lv\_dropdown\_get\_dir(const lv\_obj\_t \*ddlist)

Get the symbol to draw when the drop-down list is closed

Return the symbol or NULL if not enabled

#### **Parameters**

• ddlist: pointer to drop down list object

## bool $lv_dropdown_get_show_selected(lv_obj_t*ddlist)$

Get whether the ddlist highlight the last selected option and display its text or not

Return true/false

#### **Parameters**

• ddlist: pointer to a drop down list object

## void lv\_dropdown\_open(lv\_obj\_t \*ddlist)

Open the drop down list with or without animation

#### **Parameters**

• ddlist: pointer to drop down list object

## void lv dropdown close(lv\_obj\_t\*ddlist)

Close (Collapse) the drop down list

#### **Parameters**

- ddlist: pointer to drop down list object
- anim en: LV ANIM ON: use animation; LV ANOM OFF: not use animations

## struct lv\_dropdown\_ext\_t

## **Public Members**

```
lv_obj_t *page
const char *text
const char *symbol
char *options
lv_style_list_t style_selected
lv_style_list_t style_page
lv_style_list_t style_scrlbar
lv_coord_t max_height
uint16_t option_cnt
```

uint16\_t sel\_opt\_id

```
uint16_t sel_opt_id_orig
uint16_t pr_opt_id
lv_dropdown_dir_t dir
uint8_t show_selected
uint8 t static txt
```

# 5.13 Gauge (lv\_gauge)

# 5.13.1 Overview

The gauge is a meter with scale labels and one or more needles.

# 5.13.2 Parts and Styles

The Gauge's main part is called LV\_GAUGE\_PART\_MAIN. It draws a background using the typical background style properties and "minor" scale lines using the *line* and *scale* style properties. It also uses the *text* properties to set the style of the scale labels. *pad\_inner* is used to set space between the scale lines and the scale labels.

LV\_GAUGE\_PART\_MAJOR is a virtual part which describes the major scale lines (where labels are added) using the *line* and *scale* style properties.

LV\_GAUGE\_PART\_NEEDLE is also virtual part and it describes the needle(s) via the *line* style properties. size and the typical background properties are used to describe a rectangle (or circle) in the picot point of the needle(s). pad inner is used to to make the needle(s) smaller than the outer radius of the scale lines.

# 5.13.3 Usage

### Set value and needles

The gauge can show more than one needle. Use the <code>lv\_gauge\_set\_needle\_count(gauge, needle\_num, color\_array)</code> function to set the number of needles and an array with colors for each needle. The array must be static or global variable because only its pointer is stored.

You can use lv gauge set value(gauge, needle id, value) to set the value of a needle.

### **Scale**

You can use the <code>lv\_gauge\_set\_scale(gauge, angle, line\_num, label\_cnt)</code> function to adjust the scale angle and the number of the scale lines and labels. The default settings are 220 degrees, 6 scale labels, and 21 lines.

The scale of the Gauge can have offset. It can be adjusted with lv\_gauge\_set\_angle\_offset(gauge, angle).

### Range

The range of the gauge can be specified by lv\_gauge\_set\_range(gauge, min, max). The default range is 0..100.

### Critical value

To set a critical value, use <code>lv\_gauge\_set\_critical\_value(gauge, value)</code>. The scale color will be changed to <code>scale\_end\_color</code> after this value. The default critical value is 80.

# **5.13.4 Events**

Only the Generic events are sent by the object type.

Learn more about *Events*.

# 5.13.5 Keys

No *Keys* are processed by the object type.

Learn more about Keys.

# **5.13.6 Example**

C

# Simple Gauge



code

```
#include "../../lv_examples.h"
#if LV_USE_GAUGE

void lv_ex_gauge_1(void)
{
```

(continues on next page)

(continued from previous page)

```
/*Describe the color for the needles*/
    static lv_color_t needle_colors[3];
    needle_colors[0] = LV_COLOR_BLUE;
    needle_colors[1] = LV_COLOR_ORANGE;
    needle_colors[2] = LV_COLOR_PURPLE;
    /*Create a gauge*/
   lv_obj_t * gauge1 = lv_gauge_create(lv_scr_act(), NULL);
   lv_gauge_set_needle_count(gauge1, 3, needle_colors);
    lv_obj_set_size(gauge1, 200, 200);
   lv_obj_align(gauge1, NULL, LV_ALIGN_CENTER, 0, 0);
   /*Set the values*/
   lv_gauge_set_value(gauge1, 0, 10);
    lv_gauge_set_value(gauge1, 1, 20);
    lv_gauge_set_value(gauge1, 2, 30);
}
#endif
```

### MicroPython

No examples yet.

# 5.13.7 API

# **Typedefs**

```
typedef void (*lv_gauge_format_cb_t) (lv_obj_t*gauge, char *buf, int bufsize, int32_t value) typedef uint8_t lv_gauge_style_t
```

### **Enums**

### **Functions**

- par: pointer to an object, it will be the parent of the new gauge
- copy: pointer to a gauge object, if not NULL then the new object will be copied from it

# void $lv_gauge_set_needle_count(lv_obj_t*gauge, uint8_t needle_cnt, const lv_color_t colors[])$

Set the number of needles

#### **Parameters**

- gauge: pointer to gauge object
- needle\_cnt: new count of needles
- colors: an array of colors for needles (with 'num' elements)

# $\label{eq:condition} \mbox{void $\tt lv\_gauge\_set\_value($\it lv\_\it obj\_\it t*\it gauge, uint8\_t needle\_\it id, int32\_t value)$}$

Set the value of a needle

### **Parameters**

- gauge: pointer to a gauge
- needle id: the id of the needle
- value: the new value

# **static** void **lv\_gauge\_set\_range**(lv\_obj\_t \*gauge, int32\_t min, int32\_t max)

Set minimum and the maximum values of a gauge

### **Parameters**

- gauge: pointer to he gauge object
- min: minimum value
- max: maximum value

# static void lv gauge set critical value(lv\_obj\_t\*gauge, int32 t value)

Set a critical value on the scale. After this value 'line.color' scale lines will be drawn

### **Parameters**

- gauge: pointer to a gauge object
- value: the critical value

```
void lv_gauge_set_scale(lv_obj_t*gauge, uint16_t angle, uint8_t line_cnt, uint8_t label_cnt)
Set the scale settings of a gauge
```

### Parameters

- gauge: pointer to a gauge object
- angle: angle of the scale (0..360)
- line\_cnt: count of scale lines. To get a given "subdivision" lines between labels: line\_cnt = (sub div + 1) \* (label cnt 1) + 1
- label\_cnt: count of scale labels.

# static void lv gauge set angle offset(lv\_obj\_t\*gauge, uint16 t angle)

Set the set an offset for the gauge's angles to rotate it.

### **Parameters**

- gauge: pointer to a line meter object
- angle: angle offset (0..360), rotates clockwise

Set an image to display as needle(s). The needle image should be horizontal and pointing to the right (--->).

### **Parameters**

- gauge: pointer to a gauge object
- img\_src: pointer to an lv\_img\_dsc\_t variable or a path to an image (not an lv\_img object)
- pivot\_x: the X coordinate of rotation center of the image
- pivot\_y: the Y coordinate of rotation center of the image

 $\label{local_void_local_void_local_v} \begin{tabular}{ll} \textbf{Void} & \textbf{Vv\_gauge\_set\_format\_cb(} & \textit{lv\_obj\_t*gauge}, & \textit{lv\_gauge\_format\_cb\_t format\_cb)} \\ \end{tabular}$ 

Assign a function to format gauge values

### **Parameters**

- gauge: pointer to a gauge object
- format\_cb: pointer to function of lv\_gauge\_format\_cb\_t

int32\_t lv\_gauge\_get\_value(const lv\_obj\_t \*gauge, uint8\_t needle)

Get the value of a needle

Return the value of the needle [min,max]

#### **Parameters**

- gauge: pointer to gauge object
- needle: the id of the needle

# uint8\_t lv\_gauge\_get\_needle\_count(const lv\_obj\_t \*gauge)

Get the count of needles on a gauge

Return count of needles

### **Parameters**

• gauge: pointer to gauge

### static int32 tlv gauge get min value(const lv obj t\*lmeter)

Get the minimum value of a gauge

Return the minimum value of the gauge

### Parameters

• gauge: pointer to a gauge object

### static int32 t lv gauge get max value(const lv obj t\*lmeter)

Get the maximum value of a gauge

Return the maximum value of the gauge

### Parameters

• gauge: pointer to a gauge object

# $\verb|static| int 32_t lv_gauge_get_critical_value(const | lv_obj_t * gauge)|$

Get a critical value on the scale.

Return the critical value

### **Parameters**

• qauge: pointer to a gauge object

# uint8\_t lv\_gauge\_get\_label\_count(const lv\_obj\_t \*gauge)

Set the number of labels (and the thicker lines too)

Return count of labels

### **Parameters**

• gauge: pointer to a gauge object

# static uint16\_t lv\_gauge\_get\_line\_count(const lv\_obj\_t \*gauge)

Get the scale number of a gauge

Return number of the scale units

### **Parameters**

• gauge: pointer to a gauge object

# $\verb|static uint| 16_t lv_gauge_get_scale_angle(const \mathit{lv}\_\mathit{obj}\_t *\mathit{gauge})|$

Get the scale angle of a gauge

Return angle of the scale

### **Parameters**

• gauge: pointer to a gauge object

# static uint16\_t lv\_gauge\_get\_angle\_offset(lv\_obj\_t \*gauge)

Get the offset for the gauge.

**Return** angle offset (0..360)

# Parameters

• gauge: pointer to a gauge object

# $\textbf{const void *lv\_gauge\_get\_needle\_img(} \textit{lv\_obj\_t *gauge}\textbf{)}$

Get an image to display as needle(s).

Return pointer to an  $lv_img_dsc_t$  variable or a path to an image (not an  $lv_img$  object). NULL if not used.

### **Parameters**

• gauge: pointer to a gauge object

# lv\_coord\_t lv\_gauge\_get\_needle\_img\_pivot\_x(lv\_obj\_t\*gauge)

Get the X coordinate of the rotation center of the needle image

**Return** the X coordinate of rotation center of the image

### **Parameters**

• gauge: pointer to a gauge object

# lv coord t lv gauge get needle img pivot y(lv\_obj\_t\*gauge)

Get the Y coordinate of the rotation center of the needle image

**Return** the X coordinate of rotation center of the image

# Parameters

• qauge: pointer to a gauge object

### struct lv\_gauge\_ext\_t

### **Public Members**

```
lv_linemeter_ext_t lmeter
int32_t *values
const lv_color_t *needle_colors
const void *needle_img
lv_point_t needle_img_pivot
lv_style_list_t style_needle
lv_style_list_t style_strong
uint8_t needle_count
uint8_t label_count
lv_gauge_format_cb_t format_cb
```

# 5.14 Image (lv\_img)

### **5.14.1** Overview

Images are the basic object to display from the flash (as arrays) or externally as files. Images can display symbols (LV\_SYMBOL\_...) too.

Using the Image decoder interface custom image formats can be supported as well.

# 5.14.2 Parts and Styles

The images has only a main part called LV\_IMG\_PART\_MAIN which uses the typical background style propeties to draw a background rectangle and the *image* properties. The padding values are used to make the background virtually larger. (It won't change the image's real size but the size modification is applied only during drawing)

# 5.14.3 Usage

### Image source

To provide maximum flexibility, the source of the image can be:

- a variable in the code (a C array with the pixels).
- a file stored externally (like on an SD card).
- a text with Symbols.

To set the source of an image, use lv\_img\_set\_src(img, src).

To generate a **pixel array** from a PNG, JPG or BMP image, use the Online image converter tool and set the converted image with its pointer: lv\_img\_set\_src(img1, &converted\_img\_var); To make the variable visible in the C file, you need to declare it with LV\_IMG\_DECLARE(converted\_img\_var).

To use **external files**, you also need to convert the image files using the online converter tool but now you should select the binary Output format. You also need to use LVGL's file system module and register a

driver with some functions for the basic file operation. Got to the *File system* to learn more. To set an image sourced from a file, use <code>lv\_img\_set\_src(img, "S:folder1/my\_img.bin")</code>.

You can set a **symbol** similarly to *Labels*. In this case, the image will be rendered as text according to the *font* specified in the style. It enables to use of light-weighted mono-color "letters" instead of real images. You can set symbol like <code>lv\_img\_set\_src(img1, LV\_SYMBOL\_OK)</code>.

### Label as an image

Images and labels are sometimes used to convey the same thing. For example, to describe what a button does. Therefore, images and labels are somewhat interchangeable. To handle these images can even display texts by using LV\_SYMBOL\_DUMMY as the prefix of the text. For example, lv\_img\_set\_src(img, LV SYMBOL DUMMY "Some text").

### **Transparency**

The internal (variable) and external images support 2 transparency handling methods:

- Chrome keying Pixels with LV COLOR TRANSP (lv\_conf.h) color will be transparent.
- Alpha byte An alpha byte is added to every pixel.

### Palette and Alpha index

Besides True color (RGB) color format, the following formats are also supported:

- Indexed Image has a palette.
- Alpha indexed Only alpha values are stored.

These options can be selected in the font converter. To learn more about the color formats, read the *Images* section.

### Recolor

The images can be re-colored in run-time to any color according to the brightness of the pixels. It is very useful to show different states (selected, inactive, pressed, etc.) of an image without storing more versions of the same image. This feature can be enabled in the style by setting <code>img.intense</code> between <code>LV\_OPA\_TRANSP</code> (no recolor, value: 0) and <code>LV\_OPA\_COVER</code> (full recolor, value: 255). The default value is <code>LV\_OPA\_TRANSP</code> so this feature is disabled.

### Auto-size

It is possible to automatically set the size of the image object to the image source's width and height if enabled by the <code>lv\_img\_set\_auto\_size(image, true)</code> function. If <code>auto-size</code> is enabled, then when a new file is set, the object size is automatically changed. Later, you can modify the size manually. The <code>auto-size</code> is enabled by default if the image is not a screen.

### Mosaic

If the object size is greater than the image size in any directions, then the image will be repeated like a mosaic. It's a very useful feature to create a large image from only a very narrow source. For example, you can have a  $300 \times 1$  image with a special gradient and set it as a wallpaper using the mosaic feature.

### Offset

With lv\_img\_set\_offset\_x(img, x\_ofs) and lv\_img\_set\_offset\_y(img, y\_ofs), you can add some offset to the displayed image. It is useful if the object size is smaller than the image source size. Using the offset parameter a Texture atlas or a "running image" effect can be created by *Animating* the x or y offset.

### 5.14.4 Transformations

Using the <code>lv\_img\_set\_zoom(img, factor)</code> the images will be zoomed. Set <code>factor</code> to <code>256</code> or <code>LV\_IMG\_ZOOM\_NONE</code> to disable zooming. A larger value enlarges the images (e.g. <code>512</code> double size), a smaller value shrinks it (e.g. <code>128</code> half size). Fractional scale works as well. E.g. <code>281</code> for <code>10%</code> enlargement.

To rotate the image use lv\_img\_set\_angle(img, angle). Angle has 0.1 degree precision, so for 45.8° set 458.

By default, the pivot point of the rotation is the center of the image. It can be changed with lv\_img\_set\_pivot(img, pivot\_x, pivot\_y). 0;0 is the top left corner.

The quality of the transformation can be adjusted with lv\_img\_set\_antialias(img, true/false). With enabled anti-aliasing the transformations has a higher quality but they are slower.

The transformations require the whole image to be available. Therefore indexed images (LV\_IMG\_CF\_INDEXED\_...), alpha only images (LV\_IMG\_CF\_ALPHA\_...) or images from files can be transformed. In other words transformations work only on true color images stored as C array, or if a custom Image decoder returns the whole image.

Note that, the real coordinates of image object won't change during transformation. That is lv obj get width/height/x/y() will returned the original, non-zoomed coordinates.

### 5.14.5 Rotate

The images can be rotated with

### 5.14.6 Events

Only the Generic events are sent by the object type.

Learn more about *Events*.

# 5.14.7 Keys


No *Keys* are processed by the object type.

Learn more about Keys.

# **5.14.8 Example**

C

### Image from variable and symbol

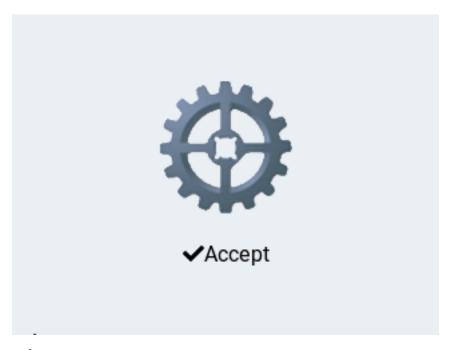

code


```
#include "../../lv_examples.h"
#if LV_USE_IMG

/* Find the image here: https://github.com/lvgl/lv_examples/tree/master/assets */
LV_IMG_DECLARE(img_cogwheel_argb);

void lv_ex_img_1(void)
{
    lv_obj_t * img1 = lv_img_create(lv_scr_act(), NULL);
    lv_img_set_src(img1, &img_cogwheel_argb);
    lv_obj_align(img1, NULL, LV_ALIGN_CENTER, 0, -20);

    lv_obj_t * img2 = lv_img_create(lv_scr_act(), NULL);
    lv_img_set_src(img2, LV_SYMBOL_OK "Accept");
    lv_obj_align(img2, img1, LV_ALIGN_OUT_BOTTOM_MID, 0, 20);
}
#endif
```

### Image recoloring

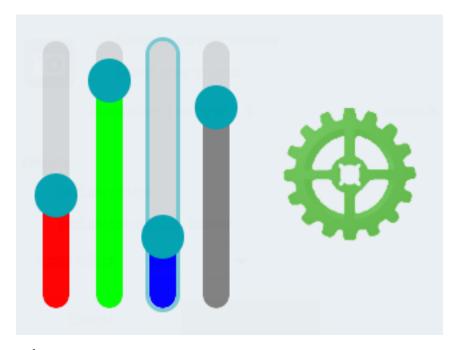

code

```
#include "../../lv_examples.h"
#if LV_USE_IMG
#define SLIDER WIDTH 20
static void create sliders(void);
static void slider_event_cb(lv_obj_t * slider, lv_event_t event);
static lv_obj_t * red_slider, * green_slider, * blue_slider, * intense_slider;
static lv_obj_t * img1;
LV IMG DECLARE(img cogwheel argb);
void lv ex img 2(void)
   /*Create 4 sliders to adjust RGB color and re-color intensity*/
   create sliders();
   /* Now create the actual image */
   img1 = lv_img_create(lv_scr_act(), NULL);
    lv_img_set_src(img1, &img_cogwheel_argb);
    lv obj align(img1, NULL, LV ALIGN IN RIGHT MID, -20, 0);
static void slider_event_cb(lv_obj_t * slider, lv_event_t event)
    if(event == LV EVENT VALUE CHANGED) {
        /* Recolor the image based on the sliders' values */
        lv color t color = lv color make(lv slider get value(red slider), lv slider
→get_value(green_slider), lv_slider_get_value(blue_slider));
        lv opa t intense = lv slider get value(intense slider);
        lv obj set style local image recolor opa(img1, LV IMG PART MAIN, LV STATE
→DEFAULT, intense);
                                                                      (continues on next page)
```

(continued from previous page)

```
lv_obj_set_style_local_image_recolor(img1, LV_IMG_PART_MAIN, LV_STATE_DEFAULT,
→ color);
   }
static void create sliders(void)
    /* Create a set of RGB sliders */
    /* Use the red one as a base for all the settings */
    red_slider = lv_slider_create(lv_scr_act(), NULL);
    lv_slider_set_range(red_slider, 0, 255);
    lv obj set size(red slider, SLIDER WIDTH, 200); /* Be sure it's a vertical slider,
    lv_obj_set_style_local_bg_color(red_slider, LV_SLIDER_PART_INDIC, LV_STATE_
→DEFAULT, LV COLOR RED);
    lv_obj_set_event_cb(red_slider, slider_event_cb);
   /* Copy it for the other three sliders */
    green_slider = lv_slider_create(lv_scr_act(), red_slider);
    lv_obj_set_style_local_bg_color(green_slider, LV_SLIDER_PART_INDIC, LV_STATE_
→DEFAULT, LV COLOR LIME);
    blue slider = lv slider create(lv scr act(), red slider);
    lv_obj_set_style local_bg_color(blue_slider, LV_SLIDER_PART_INDIC, LV_STATE_
→DEFAULT, LV COLOR BLUE);
    intense_slider = lv_slider_create(lv_scr_act(), red_slider);
    lv_obj_set_style_local_bg_color(intense_slider, LV_SLIDER_PART_INDIC, LV_STATE_
→DEFAULT, LV_COLOR_GRAY);
    lv_slider_set_value(intense_slider, 255, LV_ANIM_OFF);
    lv obj align(red slider, NULL, LV ALIGN IN LEFT MID, 20, 0);
    lv obj align(green slider, red slider, LV ALIGN OUT RIGHT MID, 20, 0);
    lv_obj_align(blue_slider, green_slider, LV_ALIGN_OUT_RIGHT_MID, 20, 0);
    lv_obj_align(intense_slider, blue_slider, LV_ALIGN_OUT_RIGHT_MID, 20, 0);
}
#endif
```

### MicroPython

No examples yet.

# 5.14.9 API

# **Typedefs**

```
typedef uint8 tlv img part t
```

### **Enums**

```
enum [anonymous]

Values:
```

# LV\_IMG\_PART\_MAIN

### **Functions**

```
lv\_obj\_t *lv\_img\_create(lv\_obj\_t *par, const lv\_obj\_t *copy)
```

Create an image objects

Return pointer to the created image

### **Parameters**

- par: pointer to an object, it will be the parent of the new button
- copy: pointer to a image object, if not NULL then the new object will be copied from it

# void lv\_img\_set\_src(lv\_obj\_t \*img, const void \*src\_img)

Set the pixel map to display by the image

### **Parameters**

- img: pointer to an image object
- data: the image data

# void lv\_img\_set\_auto\_size(lv\_obj\_t \*img, bool autosize\_en)

Enable the auto size feature. If enabled the object size will be same as the picture size.

### **Parameters**

- img: pointer to an image
- en: true: auto size enable, false: auto size disable

# void $lv\_img\_set\_offset\_x(lv\_obj\_t*img, lv\_coord\_t x)$

Set an offset for the source of an image. so the image will be displayed from the new origin.

### **Parameters**

- img: pointer to an image
- X: the new offset along x axis.

# void lv\_img\_set\_offset\_y(lv\_obj\_t \*img, lv\_coord\_t y)

Set an offset for the source of an image. so the image will be displayed from the new origin.

### **Parameters**

- img: pointer to an image
- y: the new offset along y axis.

# void lv\_img\_set\_pivot(lv\_obj\_t \*img, lv\_coord\_t pivot\_x, lv\_coord\_t pivot\_y)

Set the rotation center of the image. The image will be rotated around this point

### **Parameters**

- img: pointer to an image object
- pivot x: rotation center x of the image
- pivot\_y: rotation center y of the image

# void lv\_img\_set\_angle(lv\_obj\_t \*img, int16\_t angle)

Set the rotation angle of the image. The image will be rotated around the set pivot set by  $lv\_img\_set\_pivot()$ 

### **Parameters**

- img: pointer to an image object
- angle: rotation angle in degree with 0.1 degree resolution (0..3600: clock wise)

# void lv\_img\_set\_zoom(lv\_obj\_t \*img, uint16\_t zoom)

Set the zoom factor of the image.

### **Parameters**

- img: pointer to an image object
- **ZOOM**: the zoom factor.
  - -256 or LV ZOOM IMG NONE for no zoom
  - <256: scale down
  - ->256 scale up
  - 128 half size
  - 512 double size

# void lv\_img\_set\_antialias(lv\_obj\_t \*img, bool antialias)

Enable/disable anti-aliasing for the transformations (rotate, zoom) or not

#### **Parameters**

- $\bullet$   $\mbox{img:}$  pointer to an image object
- antialias: true: anti-aliased; false: not anti-aliased

# const void \*lv\_img\_get\_src(lv\_obj\_t \*img)

Get the source of the image

Return the image source (symbol, file name or C array)

### **Parameters**

• img: pointer to an image object

# const char \*lv\_img\_get\_file\_name(const lv\_obj\_t \*img)

Get the name of the file set for an image

Return file name

### **Parameters**

• img: pointer to an image

# bool lv\_img\_get\_auto\_size(const lv\_obj\_t \*img)

Get the auto size enable attribute

Return true: auto size is enabled, false: auto size is disabled

### Parameters

• img: pointer to an image

# lv coord t lv img get offset x(lv\_obj\_t\*img)

Get the offset.x attribute of the img object.

Return offset.x value.

### **Parameters**

• img: pointer to an image

# lv\_coord\_t lv\_img\_get\_offset\_y(lv\_obj\_t \*img)

Get the offset.y attribute of the img object.

Return offset.y value.

### **Parameters**

• img: pointer to an image

# uint16\_t lv\_img\_get\_angle(lv\_obj\_t \*img)

Get the rotation angle of the image.

**Return** rotation angle in degree (0..359)

### **Parameters**

• img: pointer to an image object

# void lv\_img\_get\_pivot(lv\_obj\_t \*img, lv\_point\_t \*center)

Get the rotation center of the image.

### **Parameters**

- img: pointer to an image object
- center: rotation center of the image

# $uint16\_t$ $lv_img_get_zoom(lv_obj_t*img)$

Get the zoom factor of the image.

Return zoom factor (256: no zoom)

### **Parameters**

• img: pointer to an image object

# bool lv\_img\_get\_antialias(lv\_obj\_t \*img)

Get whether the transformations (rotate, zoom) are anti-aliased or not

Return true: anti-aliased; false: not anti-aliased

### **Parameters**

• img: pointer to an image object

# struct lv\_img\_ext\_t

# **Public Members**

# const void \*src

lv\_point\_t offset

 $lv\_coord\_t \ \textbf{W}$ 

lv\_coord\_t **h** 

uint16 t angle

lv\_point\_t pivot

 $uint16\_t$  zoom

uint8\_t src\_type

uint8\_t auto\_size

uint8\_t cf

### uint8 t antialias

# 5.15 Image button (lv\_imgbtn)

# 5.15.1 Overview

The Image button is very similar to the simple 'Button' object. The only difference is that, it displays user-defined images in each state instead of drawing a rectangle. Before reading this section, please read the *Button* section for better understanding.

# 5.15.2 Parts and Styles

The Image button object has only a main part called LV\_IMG\_BTN\_PART\_MAIN from where all *image* style properties are used. It's possible to recolor the image in each state with *image\_recolor* and *image\_recolor\_opa* properties. For example, to make the image darker if it is pressed.

# 5.15.3 Usage

### Image sources

To set the image in a state, use the <code>lv\_imgbtn\_set\_src(imgbtn, LV\_BTN\_STATE\_...,&img\_src)</code>. The image sources works the same as described in the <code>Image object</code> except that, "Symbols" are not supported by the Image button.

If LV\_IMGBTN\_TILED is enabled in  $lv\_conf.h$ , then  $lv\_imgbtn\_set\_src\_tiled(imgbtn, LV\_BTN\_STATE\_..., &img\_src\_left, &img\_src\_mid, &img\_src\_right)$  becomes available. Using the tiled feature the middle image will be repeated to fill the width of the object. Therefore with LV\_IMGBTN\_TILED, you can set the width of the Image button using  $lv\_obj\_set\_width()$ . However, without this option, the width will be always the same as the image source's width.

### **Button features**

Similarly to normal Buttons lv\_imgbtn\_set\_checkable(imgbtn, true/false), lv\_imgbtn\_toggle(imgbtn) and lv\_imgbtn\_set\_state(imgbtn, LV\_BTN\_STATE\_...) also works.

### 5.15.4 Events

Beside the Generic events, the following Special events are sent by the buttons:

• LV\_EVENT\_VALUE\_CHANGED - Sent when the button is toggled.

Note that, the generic input device related events (like  $LV\_EVENT\_PRESSED$ ) are sent in the inactive state too. You need to check the state with  $lv\_btn\_get\_state(btn)$  to ignore the events from inactive buttons.

Learn more about *Events*.

# 5.15.5 Keys

The following Keys are processed by the Buttons:

- LV\_KEY\_RIGHT/UP Go to toggled state if toggling is enabled.
- LV\_KEY\_LEFT/DOWN Go to non-toggled state if toggling is enabled.

Note that, as usual, the state of  $LV\_KEY\_ENTER$  is translated to  $LV\_EVENT\_PRESSED/PRESSING/RELEASED$  etc.

Learn more about Keys.

# **5.15.6** Example

C

# Simple Image button



code

```
#include "../../lv_examples.h"
#if LV_USE_IMGBTN

void lv_ex_imgbtn_1(void)
{
    LV_IMG_DECLARE(imgbtn_green);
    LV_IMG_DECLARE(imgbtn_blue);

    /*Darken the button when pressed*/
    static lv_style_t style;
    lv_style_init(&style);
    lv_style_set_image_recolor_opa(&style, LV_STATE_PRESSED, LV_OPA_30);
    lv_style_set_image_recolor(&style, LV_STATE_PRESSED, LV_COLOR_BLACK);
```

(continues on next page)

(continued from previous page)

```
lv_style_set_text_color(&style, LV_STATE_DEFAULT, LV_COLOR_WHITE);

/*Create an Image button*/
lv_obj_t * imgbtn1 = lv_imgbtn_create(lv_scr_act(), NULL);
lv_imgbtn_set_src(imgbtn1, LV_BTN_STATE_RELEASED, &imgbtn_green);
lv_imgbtn_set_src(imgbtn1, LV_BTN_STATE_PRESSED, &imgbtn_green);
lv_imgbtn_set_src(imgbtn1, LV_BTN_STATE_CHECKED_RELEASED, &imgbtn_blue);
lv_imgbtn_set_src(imgbtn1, LV_BTN_STATE_CHECKED_PRESSED, &imgbtn_blue);
lv_imgbtn_set_checkable(imgbtn1, true);
lv_obj_add_style(imgbtn1, LV_IMGBTN_PART_MAIN, &style);
lv_obj_align(imgbtn1, NULL, LV_ALIGN_CENTER, 0, -40);

/*Create a label on the Image button*/
lv_obj_t * label = lv_label_create(imgbtn1, NULL);
lv_label_set_text(label, "Button");
}

#endif
```

### MicroPython

No examples yet.

# 5.15.7 API

# **Typedefs**

```
typedef uint8_t lv_imgbtn_part_t
```

### **Enums**

```
\begin{array}{c} \textbf{enum} \ [\textbf{anonymous}] \\ Values: \end{array}
```

```
LV\_IMGBTN\_PART\_MAIN = LV\_BTN\_PART\_MAIN
```

### **Functions**

```
\mathit{lv\_obj\_t} * \texttt{lv\_imgbtn\_create} (\mathit{lv\_obj\_t} * \mathit{par}, \, \texttt{const} \, \mathit{lv\_obj\_t} * \mathit{copy})
```

Create a image button objects

Return pointer to the created image button

### **Parameters**

- par: pointer to an object, it will be the parent of the new image button
- copy: pointer to a image button object, if not NULL then the new object will be copied from it

```
void lv_imgbtn_set_src(lv_obj_t *imgbtn, lv_btn_state_t state, const void *src)
Set images for a state of the image button
```

Parameters

- imgbtn: pointer to an image button object
- state: for which state set the new image (from lv btn state t) '
- Src: pointer to an image source (a C array or path to a file)

```
void lv_imgbtn_set_src_tiled(lv_obj_t *imgbtn, lv_btn_state_t state, const void *src_left, const void *src mid, const void *src right)
```

Set images for a state of the image button

### **Parameters**

- imgbtn: pointer to an image button object
- state: for which state set the new image (from lv\_btn\_state\_t) '
- src\_left: pointer to an image source for the left side of the button (a C array or path to a file)
- src\_mid: pointer to an image source for the middle of the button (ideally 1px wide) (a C array or path to a file)
- src\_right: pointer to an image source for the right side of the button (a C array or path to a file)

# static void lv\_imgbtn\_set\_checkable(lv\_obj\_t \*imgbtn, bool tgl)

Enable the toggled states. On release the button will change from/to toggled state.

### **Parameters**

- imgbtn: pointer to an image button object
- tgl: true: enable toggled states, false: disable

# static void lv\_imgbtn\_set\_state(lv\_obj\_t \*imgbtn, lv\_btn\_state\_t state)

Set the state of the image button

# Parameters

- imgbtn: pointer to an image button object
- state: the new state of the button (from lv\_btn\_state\_t enum)

### static void lv imgbtn toggle(lv\_obj\_t\*imgbtn)

Toggle the state of the image button (ON->OFF, OFF->ON)

### **Parameters**

• imgbtn: pointer to a image button object

# const void \*lv\_imgbtn\_get\_src(lv\_obj\_t \*imgbtn, lv\_btn\_state\_t state)

Get the images in a given state

**Return** pointer to an image source (a C array or path to a file)

### **Parameters**

- imgbtn: pointer to an image button object
- state: the state where to get the image (from lv btn state t) '

### const void \*lv imgbtn get src left(lv obj t \*imgbtn, lv btn state t state)

Get the left image in a given state

**Return** pointer to the left image source (a C array or path to a file)

### Parameters

• imgbtn: pointer to an image button object

• state: the state where to get the image (from lv\_btn\_state\_t) '

# const void \*lv\_imgbtn\_get\_src\_middle(lv\_obj\_t \*imgbtn, lv\_btn\_state\_t state)

Get the middle image in a given state

Return pointer to the middle image source (a C array or path to a file)

### **Parameters**

- imgbtn: pointer to an image button object
- state: the state where to get the image (from lv\_btn\_state\_t) '

# const void \*lv\_imgbtn\_get\_src\_right(lv\_obj\_t \*imgbtn, lv\_btn\_state\_t state)

Get the right image in a given state

**Return** pointer to the left image source (a C array or path to a file)

### **Parameters**

- imgbtn: pointer to an image button object
- state: the state where to get the image (from lv btn state t) '

# static lv\_btn\_state\_t lv\_imgbtn\_get\_state(const lv\_obj\_t \*imgbtn)

Get the current state of the image button

Return the state of the button (from lv\_btn\_state\_t enum)

### **Parameters**

• imgbtn: pointer to a image button object

# static bool lv\_imgbtn\_get\_checkable(const lv\_obj\_t \*imgbtn)

Get the toggle enable attribute of the image button

Return true: toggle enabled, false: disabled

### **Parameters**

• imgbtn: pointer to a image button object

# struct lv imgbtn ext t

### **Public Members**

```
lv_btn_ext_t btn
const void *img_src_mid[_LV_BTN_STATE_LAST]
const void *img_src_left[_LV_BTN_STATE_LAST]
const void *img_src_right[_LV_BTN_STATE_LAST]
lv_img_cf_t act_cf
uint8_t tiled
```

# 5.16 Keyboard (lv\_keyboard)

### 5.16.1 Overview

The Keyboard object is a special *Button matrix* with predefined keymaps and other features to realize a virtual keyboard to write text.

# 5.16.2 Parts and Styles

Similarly to Button matices Keyboards consist of 2 part:

- LV\_KEYBOARD\_PART\_BG which is the main part and uses all the typical background properties
- LV\_KEYBOARD\_PART\_BTN which is virtual part for the buttons. It also uses all typical backround proeprties and the *text* properties.

# 5.16.3 Usage

### Modes

The Keyboards have the following modes:

- LV\_KEYBOARD\_MODE\_TEXT\_LOWER Display lower case letters
- LV\_KEYBOARD\_MODE\_TEXT\_UPPER Display upper case letters
- LV\_KEYBOARD\_MODE\_TEXT\_SPECIAL Display special characters
- LV\_KEYBOARD\_MODE\_NUM Display numbers, +/- sign, and decimal dot.

The TEXT modes' layout contains buttons to change mode.

To set the mode manually, use  $lv_keyboard_set_mode(kb, mode)$ . The default more is  $LV_KEYBOARD_MODE_TEXT_UPPER$ .

### Assign Text area

You can assign a *Text area* to the Keyboard to automatically put the clicked characters there. To assign the text area, use <code>lv\_keyboard\_set\_textarea(kb, ta)</code>.

The assigned text area's **cursor can be managed** by the keyboard: when the keyboard is assigned, the previous text area's cursor will be hidden and the new one will be shown. When the keyboard is closed by the *Ok* or *Close* buttons, the cursor also will be hidden. The cursor manager feature is enabled by  $lv_keyboard_set_cursor_manage(kb, true)$ . The default is not managed.

### **New Keymap**

You can specify a new map (layout) for the keyboard with lv\_keyboard\_set\_map(kb, map) and lv\_keyboard\_set\_ctrl\_map(kb, ctrl\_map). Learn more about the *Button matrix* object. Keep in mind that, using following keywords will have the same effect as with the original map:

- LV\_SYMBOL\_OK Apply.
- $LV\_SYMBOL\_CLOSE$  Close.
- LV\_SYMBOL\_BACKSPACE Delete on the left.

- LV\_SYMBOL\_LEFT Move the cursor left.
- LV\_SYMBOL\_RIGHT Move the cursor right.
- "ABC" Load the uppercase map.
- "abc" Load the lower case map.
- "Enter" New line.

# **5.16.4 Events**

Besides the Generic events, the following Special events are sent by the keyboards:

- LV\_EVENT\_VALUE\_CHANGED Sent when the button is pressed/released or repeated after long press. The event data is set to the ID of the pressed/released button.
- LV\_EVENT\_APPLY The Ok button is clicked.
- LV\_EVENT\_CANCEL The Close button is clicked.

The keyboard has a **default event handler** callback called <code>lv\_keyboard\_def\_event\_cb</code>. It handles the button pressing, map changing, the assigned text area, etc. You can completely replace it with your custom event handler however, you can call <code>lv\_keyboard\_def\_event\_cb</code> at the beginning of your event handler to handle the same things as before.

Learn more about *Events*.

# 5.16.5 Keys

The following Keys are processed by the buttons:

- $\bullet~LV\_KEY\_RIGHT/UP/LEFT/RIGHT$  To navigate among the buttons and select one.
- LV\_KEY\_ENTER To press/release the selected button.

Learn more about Keys.

# **5.16.6 Examples**

C

### Keyboard with text area



code

```
#include "../../lv_examples.h"
#if LV_USE_KEYBOARD

void lv_ex_keyboard_1(void)
{
    /*Create a keyboard and apply the styles*/
    lv_obj_t *kb = lv_keyboard_create(lv_scr_act(), NULL);
    lv_keyboard_set_cursor_manage(kb, true);

    /*Create a text area. The keyboard will write here*/
    lv_obj_t *ta = lv_textarea_create(lv_scr_act(), NULL);
    lv_obj_align(ta, NULL, LV_ALIGN_IN_TOP_MID, 0, LV_DPI / 16);
    lv_textarea_set_text(ta, "");
    lv_coord_t max_h = LV_VER_RES / 2 - LV_DPI / 8;
    if(lv_obj_get_height(ta) > max_h) lv_obj_set_height(ta, max_h);

    /*Assign the text area to the keyboard*/
    lv_keyboard_set_textarea(kb, ta);
}
#endif
```

# MicroPython

# Keyboard with text area

No examples yet.

# 5.16.7 API

# **Typedefs**

```
typedef uint8_t lv_keyboard_mode_t
typedef uint8 t lv keyboard style t
```

### **Enums**

# enum [anonymous]

Current keyboard mode.

Values:

LV\_KEYBOARD\_MODE\_TEXT\_LOWER
LV\_KEYBOARD\_MODE\_TEXT\_UPPER
LV\_KEYBOARD\_MODE\_SPECIAL
LV\_KEYBOARD\_MODE\_NUM

enum [anonymous]

Values:

LV\_KEYBOARD\_PART\_BG
LV\_KEYBOARD\_PART\_BTN

### **Functions**

```
\mathit{lv\_obj\_t} * \texttt{lv\_keyboard\_create}(\mathit{lv\_obj\_t} * \mathit{par}, \texttt{const} \; \mathit{lv\_obj\_t} * \mathit{copy})
```

Create a keyboard objects

Return pointer to the created keyboard

### **Parameters**

- par: pointer to an object, it will be the parent of the new keyboard
- copy: pointer to a keyboard object, if not NULL then the new object will be copied from it

```
void lv_keyboard_set_textarea(lv_obj_t*kb, lv_obj_t*ta)
```

Assign a Text Area to the Keyboard. The pressed characters will be put there.

### **Parameters**

- kb: pointer to a Keyboard object
- ta: pointer to a Text Area object to write there

# void lv\_keyboard\_set\_mode(lv\_obj\_t\*kb, lv\_keyboard\_mode\_t mode)

Set a new a mode (text or number map)

### **Parameters**

- kb: pointer to a Keyboard object
- mode: the mode from 'lv keyboard mode t'

# void lv\_keyboard\_set\_cursor\_manage(lv\_obj\_t\*kb, bool en)

Automatically hide or show the cursor of the current Text Area

### **Parameters**

- kb: pointer to a Keyboard object
- en: true: show cursor on the current text area, false: hide cursor

# $\label{eq:const_map} \begin{tabular}{ll} void $\tt lv\_keyboard\_mode\_t mode, const char *map[]$) \\ \hline \end{tabular}$

Set a new map for the keyboard

#### **Parameters**

- kb: pointer to a Keyboard object
- mode: keyboard map to alter 'lv keyboard mode t'
- map: pointer to a string array to describe the map. See 'lv\_btnmatrix\_set\_map()' for more info.

# $\begin{tabular}{lll} void $lv\_keyboard\_set\_ctrl\_map($lv\_obj\_t$ *$kb, $lv\_keyboard\_mode\_t$ mode, $constle bt the btnmatrix $ctrl\_t$ $ctrl\_map(]) \\ \end{tabular}$

Set the button control map (hidden, disabled etc.) for the keyboard. The control map array will be copied and so may be deallocated after this function returns.

### Parameters

- kb: pointer to a keyboard object
- mode: keyboard ctrl map to alter 'lv keyboard mode t'
- ctrl\_map: pointer to an array of lv\_btn\_ctrl\_t control bytes. See: lv\_btnmatrix\_set\_ctrl\_map for more details.

# lv\_obj\_t \*lv\_keyboard\_get\_textarea(const lv\_obj\_t \*kb)

Assign a Text Area to the Keyboard. The pressed characters will be put there.

Return pointer to the assigned Text Area object

### **Parameters**

• kb: pointer to a Keyboard object

# lv\_keyboard\_mode\_t lv\_keyboard\_get\_mode(const lv\_obj\_t \*kb)

Set a new a mode (text or number map)

**Return** the current mode from 'lv\_keyboard\_mode\_t'

### **Parameters**

• kb: pointer to a Keyboard object

# bool $lv_keyboard_get_cursor_manage(const <math>lv_obj_t^*kb)$

Get the current cursor manage mode.

Return true: show cursor on the current text area, false: hide cursor

### **Parameters**

• kb: pointer to a Keyboard object

# static const char \*\*lv\_keyboard\_get\_map\_array(const lv\_obj\_t \*kb)

Get the current map of a keyboard

Return the current map

### **Parameters**

• **kb**: pointer to a keyboard object

# void lv\_keyboard\_def\_event\_cb(lv\_obj\_t\*kb, lv\_event\_t event)

Default keyboard event to add characters to the Text area and change the map. If a custom event\_cb is added to the keyboard this function be called from it to handle the button clicks

### **Parameters**

- kb: pointer to a keyboard
- event: the triggering event

# struct lv\_keyboard\_ext\_t

### **Public Members**

```
lv_btnmatrix_ext_t btnm
lv_obj_t *ta
lv_keyboard_mode_t mode
uint8_t cursor_mng
```

# 5.17 Label (lv\_label)

### **5.17.1** Overview

A label is the basic object type that is used to display text.

# 5.17.2 Parts and Styles

The label has only a main part, called LV\_LABEL\_PART\_MAIN. It uses all the typical background properties and the *text* properties. The padding values can be used to make the area for the text small in the related direction.

### 5.17.3 Usage

# Set text

You can set the text on a label at runtime with <code>lv\_label\_set\_text(label, "New text")</code>. It will allocate a buffer dynamically, and the provided string will be copied into that buffer. Therefore, you don't need to keep the text you pass to <code>lv label set text</code> in scope after that function returns.

With lv\_label\_set\_text\_fmt(label, "Value: %d", 15) printf formatting can be used to set the text.

Labels are able to show text from a **static character buffer** which is **\0**-terminated. To do so, use <code>lv\_label\_set\_static\_text(label, "Text")</code>. In this case, the text is not stored in the dynamic memory and the given buffer is used directly instead. This means that the array can't be a local variable which goes out of scope when the function exits. Constant strings are safe to use with <code>lv\_label\_set\_static\_text</code> (except when used with <code>LV\_LABEL\_LONG\_DOT</code>, as it modifies the buffer in-place), as they are stored in ROM memory, which is always accessible.

You can also use a **raw array** as label text. The array doesn't have to be **\0** terminated. In this case, the text will be saved to the dynamic memory like with <code>lv\_label\_set\_text</code>. To set a raw character array, use the <code>lv\_label\_set\_array\_text(label, char\_array, size)</code> function.

### Line break

Line breaks are handled automatically by the label object. You can use \n to make a line break. For example: "linel\nline2\n\nline4"

### Long modes

By default, the width of the label object automatically expands to the text size. Otherwise, the text can be manipulated according to several long mode policies:

- $\bullet~LV\_LABEL\_LONG\_EXPAND$  Expand the object size to the text size (Default)
- LV\_LABEL\_LONG\_BREAK Keep the object width, break (wrap) the too long lines and expand the object height
- LV\_LABEL\_LONG\_DOT Keep the object size, break the text and write dots in the last line (not supported when using lv\_label\_set\_static\_text)
- LV\_LABEL\_LONG\_SROLL Keep the size and scroll the label back and forth
- LV\_LABEL\_LONG\_SROLL\_CIRC Keep the size and scroll the label circularly
- LV\_LABEL\_LONG\_CROP Keep the size and crop the text out of it

You can specify the long mode with lv\_label\_set\_long\_mode(label, LV\_LABEL\_LONG\_...)

It's important to note that, when a label is created and its text is set, the label's size already expanded to the text size. In addition with the default LV\_LABEL\_LONG\_EXPAND, long mode lv\_obj\_set\_width/height/size() has no effect.

So you need to change the *long mode* first set the new *long mode* and then set the size with lv\_obj\_set\_width/height/size().

Another important note is that LV\_LABEL\_LONG\_DOT manipulates the text buffer in-place in order to add/remove the dots. When lv\_label\_set\_text or lv\_label\_set\_array\_text are used, a separate buffer is allocated and this implementation detail is unnoticed. This is not the case with lv\_label\_set\_static\_text! The buffer you pass to lv\_label\_set\_static\_text must be writable if you plan to use LV\_LABEL\_LONG\_DOT.

# Text align

The lines of the text can be aligned to the left, right or center with <code>lv\_label\_set\_align(label, LV\_LABEL\_ALIGN\_LEFT/RIGHT/CENTER)</code>. Note that, it will align only the lines, not the label object itself.

Vertical alignment is not supported by the label itself; you should place the label inside a larger container and align the whole label object instead.

# Text recolor

In the text, you can use commands to recolor parts of the text. For example: "Write a #ff0000 red# word". This feature can be enabled individually for each label by lv\_label\_set\_recolor() function.

Note that, recoloring work only in a single line. Therefore,  $\n$  should not use in a recolored text or it should be wrapped by  $LV\_LABEL\_LONG\_BREAK$  else, the text in the new line won't be recolored.

### Very long texts

Lvgl can efficiently handle very long (> 40k characters) by saving some extra data ( $\sim$ 12 bytes) to speed up drawing. To enable this feature, set LV\_LABEL\_LONG\_TXT\_HINT 1 in  $lv\_conf.h$ .

# **Symbols**

The labels can display symbols alongside letters (or on their own). Read the *Font* section to learn more about the symbols.

# **5.17.4 Events**

Only the Generic events are sent by the object type.

Learn more about *Events*.

# 5.17.5 Keys

No *Keys* are processed by the object type.

Learn more about Keys.

# **5.17.6 Example**

C

# Label recoloring and scrolling

Re-color words of a label and wrap long text automatically.

It is a circularly scro

code

```
#include "../../lv_examples.h"
#if LV USE LABEL
void lv_ex_label_1(void)
    lv_obj_t * label1 = lv_label_create(lv_scr_act(), NULL);
    lv label set long mode(label1, LV LABEL LONG BREAK); /*Break the long lines*/
    lv label set recolor(label1, true);
                                                            /*Enable re-coloring by...
⇔commands in the text*/
    lv label set align(label1, LV LABEL ALIGN CENTER); /*Center aligned lines*/
    lv_label_set_text(label1, "#0000ff Re-color# #ff00ff words# #ff0000 of a# label "
                             "and wrap long text automatically.");
    lv obj set width(label1, 150);
    lv_obj_align(label1, NULL, LV_ALIGN_CENTER, 0, -30);
    lv_obj_t * label2 = lv_label_create(lv_scr_act(), NULL);
   lv_label_set_long_mode(label2, LV_LABEL_LONG_SROLL_CIRC);
                                                               /*Circular scroll*/
    lv_obj_set_width(label2, 150);
    lv_label_set_text(label2, "It is a circularly scrolling text. ");
    lv_obj_align(label2, NULL, LV_ALIGN_CENTER, 0, 30);
}
#endif
```

### Text shadow

A simple method to create shadows on text It even works with

newlines and spaces.

code

(continues on next page)

(continued from previous page)

```
/* Create a style for the shadow*/
   static lv_style_t label_shadow_style;
    lv_style_init(&label_shadow_style);
    lv_style_set_text_opa(&label_shadow_style, LV_STATE_DEFAULT, LV_OPA_50);
    lv_style_set_text_color(&label_shadow_style, LV_STATE_DEFAULT, LV_COLOR_RED);
    /*Create a label for the shadow first (it's in the background) */
   lv_obj_t * shadow_label = lv_label_create(lv_scr_act(), NULL);
   lv_obj_add_style(shadow_label, LV_LABEL_PART_MAIN, &label_shadow_style);
    /* Create the main label */
   lv_obj_t * main_label = lv_label_create(lv_scr_act(), NULL);
    lv label set text(main label, "A simple method to create\n"
                                  "shadows on text\n"
                                  "It even works with\n\n"
                                  "newlines
                                               and spaces.");
   /*Set the same text for the shadow label*/
   lv_label_set_text(shadow_label, lv_label_get_text(main_label));
    /* Position the main label */
   lv_obj_align(main_label, NULL, LV_ALIGN_CENTER, 0, 0);
    /* Shift the second label down and to the right by 2 pixel */
    lv obj align(shadow label, main label, LV ALIGN IN TOP LEFT, 1, 1);
}
#endif
```

### Align labels

A text with multiple lines

A text with multiple lines

A text with multiple lines

code

```
#include "../../lv examples.h"
#if LV USE LABEL
static void text_changer(lv_task_t * t);
lv_obj_t * labels[3];
/**
* Create three labels to demonstrate the alignments.
void lv_ex_label_3(void)
    /*`lv label set align` is not required to align the object itslef.
    * It's used only when the text has multiple lines*/
   /* Create a label on the top.
    * No additional alignment so it will be the reference*/
    labels[0] = lv label create(lv scr act(), NULL);
    lv_obj_align(labels[0], NULL, LV_ALIGN_IN_TOP_MID, 0, 5);
   lv_label_set_align(labels[0], LV_LABEL_ALIGN_CENTER);
   /* Create a label in the middle.
    * `lv obj align` will be called every time the text changes
    * to keep the middle position */
    labels[1] = lv_label_create(lv_scr_act(), NULL);
    lv_obj_align(labels[1], NULL, LV_ALIGN_CENTER, 0, 0);
    lv label set_align(labels[1], LV LABEL ALIGN_CENTER);
    /* Create a label in the bottom.
    * Enable auto realign. */
   labels[2] = lv_label_create(lv_scr_act(), NULL);
    lv_obj_set_auto_realign(labels[2], true);
    lv_obj_align(labels[2], NULL, LV_ALIGN_IN_BOTTOM_MID, 0, -5);
   lv_label_set_align(labels[2], LV_LABEL_ALIGN_CENTER);
    lv_task_t * t = lv_task_create(text_changer, 1000, LV_TASK_PRIO_MID, NULL);
    lv_task_ready(t);
}
static void text_changer(lv_task_t * t)
    const char * texts[] = {"Text", "A very long text", "A text with\nmultiple\nlines
→", NULL};
    static uint8_t i = 0;
    lv_label_set_text(labels[0], texts[i]);
    lv_label_set_text(labels[1], texts[i]);
    lv_label_set_text(labels[2], texts[i]);
   /*Manually realaign `labels[1]`*/
   lv_obj_align(labels[1], NULL, LV_ALIGN_CENTER, 0, 0);
    if(texts[i] == NULL) i = 0;
#endif
```

### MicroPython

No examples yet.

### 5.17.7 API

### **Typedefs**

```
typedef uint8_t lv_label_long_mode_t
typedef uint8_t lv_label_align_t
typedef uint8_t lv_label_part_t
```

### **Enums**

# enum [anonymous]

Long mode behaviors. Used in ' $lv\_label\_ext\_t$ '

Values:

# LV LABEL LONG EXPAND

Expand the object size to the text size

# LV\_LABEL\_LONG\_BREAK

Keep the object width, break the too long lines and expand the object height

# LV\_LABEL\_LONG\_DOT

Keep the size and write dots at the end if the text is too long

### LV\_LABEL\_LONG\_SROLL

Keep the size and roll the text back and forth

# LV\_LABEL\_LONG\_SROLL\_CIRC

Keep the size and roll the text circularly

# LV\_LABEL\_LONG\_CROP

Keep the size and crop the text out of it

# enum [anonymous]

Label align policy

Values:

# LV\_LABEL\_ALIGN\_LEFT

Align text to left

### LV LABEL ALIGN CENTER

Align text to center

# LV\_LABEL\_ALIGN\_RIGHT

Align text to right

# LV\_LABEL\_ALIGN\_AUTO

Use LEFT or RIGHT depending on the direction of the text (LTR/RTL)

### enum [anonymous]

Label styles

Values:

# LV\_LABEL\_PART\_MAIN

#### **Functions**

```
LV_EXPORT_CONST_INT(LV_LABEL_DOT_NUM)

LV_EXPORT_CONST_INT(LV_LABEL_POS_LAST)

LV_EXPORT_CONST_INT(LV_LABEL_TEXT_SEL_OFF)

lv_obj_t *lv_label_create(lv_obj_t *par, const lv_obj_t *copy)

Create a label objects
```

Return pointer to the created button

### **Parameters**

- par: pointer to an object, it will be the parent of the new label
- copy: pointer to a button object, if not NULL then the new object will be copied from it

```
void lv_label_set_text(lv_obj_t *label, const char *text)
```

Set a new text for a label. Memory will be allocated to store the text by the label.

### **Parameters**

- label: pointer to a label object
- text: '\0' terminated character string. NULL to refresh with the current text.

```
void lv_label_set_text_fmt(lv_obj_t *label, const char *fmt, ...)
```

Set a new formatted text for a label. Memory will be allocated to store the text by the label.

### **Parameters**

- label: pointer to a label object
- fmt: printf-like format

```
void lv label set text static(lv_obj_t*label, const char *text)
```

Set a static text. It will not be saved by the label so the 'text' variable has to be 'alive' while the label exist.

### **Parameters**

- label: pointer to a label object
- text: pointer to a text. NULL to refresh with the current text.

```
void lv label_set_long_mode(lv_obj_t*label, lv_label_long_mode_t long_mode)
```

Set the behavior of the label with longer text then the object size

### **Parameters**

- label: pointer to a label object
- long\_mode: the new mode from 'lv\_label\_long\_mode' enum. In LV\_LONG\_BREAK/LONG/ROLL the size of the label should be set AFTER this function

```
void lv_label_set_align(lv_obj_t*label, lv_label_align_t align)
```

Set the align of the label (left or center)

### **Parameters**

• label: pointer to a label object

• align: 'LV LABEL ALIGN LEFT' or 'LV LABEL ALIGN LEFT'

# void lv\_label\_set\_recolor(lv\_obj\_t \*label, bool en)

Enable the recoloring by in-line commands

### **Parameters**

- label: pointer to a label object
- en: true: enable recoloring, false: disable

# void lv\_label\_set\_anim\_speed(lv\_obj\_t\*label, uint16\_t anim\_speed)

Set the label's animation speed in LV\_LABEL\_LONG\_SROLL/SCROLL\_CIRC modes

### **Parameters**

- label: pointer to a label object
- anim speed: speed of animation in px/sec unit

# void lv\_label\_set\_text\_sel\_start(lv\_obj\_t\*label, uint32\_t index)

Set the selection start index.

### **Parameters**

- label: pointer to a label object.
- index: index to set. LV LABEL TXT SEL OFF to select nothing.

# void lv\_label\_set\_text\_sel\_end(lv\_obj\_t \*label, uint32\_t index)

Set the selection end index.

### **Parameters**

- label: pointer to a label object.
- index: index to set. LV\_LABEL\_TXT\_SEL\_OFF to select nothing.

# char \*lv\_label\_get\_text(const lv\_obj\_t \*label)

Get the text of a label

Return the text of the label

### **Parameters**

• label: pointer to a label object

# lv\_label\_long\_mode\_t lv\_label\_get\_long\_mode(const lv\_obj\_t \*label)

Get the long mode of a label

Return the long mode

### Parameters

• label: pointer to a label object

# lv label align t lv label get align(const lv obj t\*label)

Get the align attribute

Return LV\_LABEL\_ALIGN\_LEFT or LV\_LABEL\_ALIGN\_CENTER

### **Parameters**

• label: pointer to a label object

# bool lv\_label\_get\_recolor(const lv\_obj\_t \*label)

Get the recoloring attribute

**Return** true: recoloring is enabled, false: disable

#### **Parameters**

• label: pointer to a label object

# uint16\_t lv\_label\_get\_anim\_speed(const lv\_obj\_t \*label)

Get the label's animation speed in LV LABEL LONG ROLL and SCROLL modes

Return speed of animation in px/sec unit

### **Parameters**

• label: pointer to a label object

# void lv\_label\_get\_letter\_pos(const lv\_obj\_t \*label, uint32\_t index, lv\_point\_t \*pos)

Get the relative x and y coordinates of a letter

### **Parameters**

- label: pointer to a label object
- index: index of the letter [0 ... text length]. Expressed in character index, not byte index (different in UTF-8)
- **pos**: store the result here (E.g. index = 0 gives 0;0 coordinates)

# uint32\_t lv\_label\_get\_letter\_on(const lv\_obj\_t \*label, lv\_point\_t \*pos)

Get the index of letter on a relative point of a label

**Return** the index of the letter on the 'pos\_p' point (E.g. on 0;0 is the 0. letter) Expressed in character index and not byte index (different in UTF-8)

### **Parameters**

- label: pointer to label object
- pos: pointer to point with coordinates on a the label

# bool lv\_label\_is\_char\_under\_pos(const lv\_obj\_t \*label, lv\_point\_t \*pos)

Check if a character is drawn under a point.

Return whether a character is drawn under the point

### **Parameters**

- label: Label object
- pos: Point to check for character under

# uint32\_t lv\_label\_get\_text\_sel\_start(const lv\_obj\_t \*label)

Get the selection start index.

Return selection start index. LV\_LABEL\_TXT\_SEL\_0FF if nothing is selected.

### **Parameters**

• label: pointer to a label object.

# uint32\_t lv\_label\_get\_text\_sel\_end(const lv\_obj\_t \*label)

Get the selection end index.

Return selection end index. LV LABEL TXT SEL OFF if nothing is selected.

### **Parameters**

• label: pointer to a label object.

```
lv_style_list_t *lv_label_get_style(lv_obj_t *label, uint8_t type)
void lv_label_ins_text(lv_obj_t *label, uint32_t pos, const char *txt)
Insert a text to the label. The label text can not be static.
```

### **Parameters**

- label: pointer to a label object
- pos: character index to insert. Expressed in character index and not byte index (Different in UTF-8) 0: before first char. LV LABEL POS LAST: after last char.
- txt: pointer to the text to insert

Delete characters from a label. The label text can not be static.

### **Parameters**

- label: pointer to a label object
- pos: character index to insert. Expressed in character index and not byte index (Different in UTF-8) 0: before first char.
- cnt: number of characters to cut

### struct lv label ext t

#include <lv label.h> Data of label

### **Public Members**

```
char *text
char *tmp ptr
char tmp[LV\_LABEL\_DOT\_NUM + 1]
union lv_label_ext_t::[anonymous] dot
uint32\_t dot_end
uint16 t anim speed
lv_point_t offset
lv_draw_label_hint_t hint
uint32_t sel_start
uint32 t sel end
lv_label_long_mode_t long_mode
uint8_t static_txt
uint8 t align
uint8 t recolor
uint8 t expand
uint8_t dot_tmp_alloc
```

# 5.18 LED (lv\_led)

# 5.18.1 Overview

The LEDs are rectangle-like (or circle) object. It's brightness can be adjusted. With lower brightness the the colors of the LED become darker.

# 5.18.2 Parts and Styles

The LEDs have only one main part, called LV\_LED\_PART\_MAIN and it uses all the typical background style properties.

# 5.18.3 Usage

# **Brightness**

You can set their brightness with lv\_led\_set\_bright(led, bright). The brightness should be between 0 (darkest) and 255 (lightest).

# **Toggle**

Use lv\_led\_on(led) and lv\_led\_off(led) to set the brightness to a predefined ON or OFF value. The lv\_led\_toggle(led) toggles between the ON and OFF state.

# **5.18.4 Events**

Only the Generic events are sent by the object type.

Learn more about *Events*.

# 5.18.5 Keys

No Keys are processed by the object type.


Learn more about Keys.

# **5.18.6 Example**

C

5.18. LED (lv\_led) 286

# LED with custom style

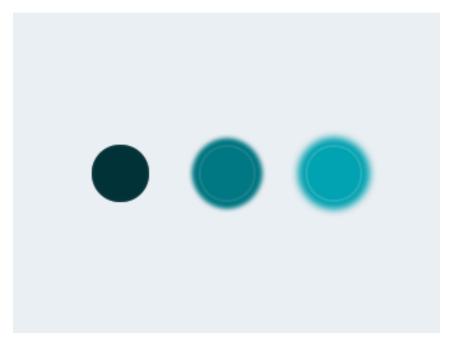

code

```
#include "../../lv_examples.h"
#if LV_USE_LED
void lv_ex_led_1(void)
    /*Create a LED and switch it OFF*/
   lv_obj_t * led1 = lv_led_create(lv_scr_act(), NULL);
    lv_obj_align(led1, NULL, LV_ALIGN_CENTER, -80, 0);
   lv_led_off(led1);
   /*Copy the previous LED and set a brightness*/
   lv_obj_t * led2 = lv_led_create(lv_scr_act(), led1);
   lv_obj_align(led2, NULL, LV_ALIGN_CENTER, 0, 0);
   lv_led_set_bright(led2, 190);
   /*Copy the previous LED and switch it ON*/
   lv_obj_t * led3 = lv_led_create(lv_scr_act(), led1);
    lv_obj_align(led3, NULL, LV_ALIGN_CENTER, 80, 0);
    lv led on(led3);
#endif
```

# MicroPython

No examples yet.

# 5.18.7 API

### **Typedefs**

```
typedef uint8_t lv_led_part_t
```

#### **Enums**

# enum [anonymous]

Values:

 $LV\_LED\_PART\_MAIN = LV\_OBJ\_PART\_MAIN$ 

### **Functions**

$$lv\_obj\_t *lv\_led\_create(lv\_obj\_t *par, const lv\_obj\_t *copy)$$

Create a led objects

Return pointer to the created led

### **Parameters**

- par: pointer to an object, it will be the parent of the new led
- copy: pointer to a led object, if not NULL then the new object will be copied from it

Set the brightness of a LED object

#### **Parameters**

- led: pointer to a LED object
- bright: LV\_LED\_BRIGHT\_MIN (max. dark) ... LV\_LED\_BRIGHT\_MAX (max. light)

# void lv led on( $lv\_obj\_t*led$ )

Light on a LED

# **Parameters**

• led: pointer to a LED object

# void lv led off( $lv\_obj\_t*led$ )

Light off a LED

### **Parameters**

• led: pointer to a LED object

# void lv\_led\_toggle(lv\_obj\_t \*led)

Toggle the state of a LED

### **Parameters**

• led: pointer to a LED object

# uint8\_t lv\_led\_get\_bright(const lv\_obj\_t \*led)

Get the brightness of a LEd object

Return bright 0 (max. dark) ... 255 (max. light)

### **Parameters**

• led: pointer to LED object

5.18. LED (lv\_led) 288

# struct lv\_led\_ext\_t

### **Public Members**

uint8\_t bright

# 5.19 Line (lv\_line)

### 5.19.1 Overview

The Line object is capable of drawing straight lines between a set of points.

# 5.19.2 Parts and Styles

The Line has only a main part, called LV\_LABEL\_PART\_MAIN. It uses all the line style properties.

# 5.19.3 Usage

### Set points

The points has to be stored in an lv\_point\_t array and passed to the object by the lv\_line\_set\_points(lines, point\_array, point\_cnt) function.

### Auto-size

It is possible to automatically set the size of the line object according to its points. It can be enable with the lv\_line\_set\_auto\_size(line, true) function. If enabled then when the points are set the object's width and height will be changed according to the maximal x and y coordinates among the points. The *auto size* is enabled by default.

### Invert y

By deafult, the  $y == \theta$  point is in the top of the object. It might be conter-intuitive in some cases so the y coordinates can be inverted with  $lv\_line\_set\_y\_invert(line, true)$ . In this case,  $y == \theta$  will be the bottom of teh obeject. The y invert is disabled by default.

# **5.19.4 Events**

Only the Generic events are sent by the object type.

Learn more about *Events*.

# 5.19.5 Keys

No Keys are processed by the object type.


Learn more about Keys.

5.19. Line (lv\_line)

# **5.19.6 Example**

C

### Simple Line

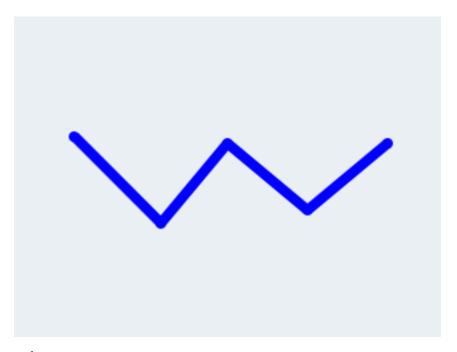

code

```
#include "../../lv_examples.h"
#if LV_USE_LINE
void lv_ex_line_1(void)
   /*Create an array for the points of the line*/
   static lv_point_t line_points[] = { {5, 5}, {70, 70}, {120, 10}, {180, 60}, {240,
→10} };
   /*Create style*/
   static lv_style_t style_line;
    lv_style_init(&style_line);
    lv_style_set_line_width(&style_line, LV_STATE_DEFAULT, 8);
   lv_style_set_line_color(&style_line, LV_STATE_DEFAULT, LV_COLOR_BLUE);
   lv_style_set_line_rounded(&style_line, LV_STATE_DEFAULT, true);
   /*Create a line and apply the new style*/
   lv_obj_t * line1;
   line1 = lv_line_create(lv_scr_act(), NULL);
                                                /*Set the points*/
   lv_line_set_points(line1, line_points, 5);
    lv_obj_add_style(line1, LV_LINE_PART_MAIN, &style_line); /*Set the points*/
    lv_obj_align(line1, NULL, LV_ALIGN_CENTER, 0, 0);
}
#endif
```

# MicroPython

No examples yet.

### 5.19.7 API

### **Typedefs**

```
typedef uint8_t lv_line_style_t
```

### **Enums**

# enum [anonymous]

Values:

LV\_LINE\_PART\_MAIN

### **Functions**

```
lv_obj_t *lv_line_create(lv_obj_t *par, const lv_obj_t *copy)
```

Create a line objects

Return pointer to the created line

### **Parameters**

• par: pointer to an object, it will be the parent of the new line

```
void lv_line_set_points (lv_obj_t *line, const lv_point_t point_a[], uint16_t point_num) Set an array of points. The line object will connect these points.
```

#### **Parameters**

- line: pointer to a line object
- point\_a: an array of points. Only the address is saved, so the array can NOT be a local variable which will be destroyed
- point num: number of points in 'point a'

```
void lv_line_set_auto_size(lv_obj_t *line, bool en)
```

Enable (or disable) the auto-size option. The size of the object will fit to its points. (set width to x max and height to y max)

### **Parameters**

- line: pointer to a line object
- en: true: auto size is enabled, false: auto size is disabled

# void lv line set y invert(lv\_obj\_t\*line, bool en)

Enable (or disable) the y coordinate inversion. If enabled then y will be subtracted from the height of the object, therefore the y=0 coordinate will be on the bottom.

# Parameters

- line: pointer to a line object
- en: true: enable the y inversion, false:disable the y inversion

# bool lv\_line\_get\_auto\_size(const lv\_obj\_t \*line)

Get the auto size attribute

Return true: auto size is enabled, false: disabled

### **Parameters**

• line: pointer to a line object

# bool lv\_line\_get\_y\_invert(const lv\_obj\_t \*line)

Get the y inversion attribute

Return true: y inversion is enabled, false: disabled

### **Parameters**

• line: pointer to a line object

# struct lv\_line\_ext\_t

#### **Public Members**

```
const lv_point_t *point_array
uint16_t point_num
uint8_t auto_size
uint8_t y_inv
```

# 5.20 List (lv\_list)

# 5.20.1 Overview

The Lists are built from a background *Page* and *Buttons* on it. The Buttons contain an optional icon-like *Image* (which can be a symbol too) and a *Label*. When the list becomes long enough it can be scrolled.

# 5.20.2 Parts and Styles

The List has the same parts as the *Page* 

- LV\_LIST\_PART\_BG
- LV\_LIST\_PART\_SCRL
- LV\_LIST\_PART\_SCRLBAR
- LV\_LIST\_PART\_EDGE\_FLASH

Refer to the *Page* documentation for details.

The buttons on the list are treated as normal buttons and they only have a main part called  $LV\_BTN\_PART\_MAIN$ .

# 5.20.3 Usage

### Add buttons

You can add new list elements (button) with <code>lv\_list\_add\_btn(list, &icon\_img, "Text")</code> or with symbol <code>lv\_list\_add\_btn(list, SYMBOL\_EDIT, "Edit text")</code>. If you do not want to add image use <code>NULL</code> as image source. The function returns with a pointer to the created button to allow further configurations.

The width of the buttons is set to maximum according to the object width. The height of the buttons are adjusted automatically according to the content. ( $content\ height + padding\_top + padding\_bottom$ ).

The labels are created with LV\_LABEL\_LONG\_SROLL\_CIRC long mode to automatically scroll the long labels circularly.

lv\_list\_get\_btn\_label(list\_btn) and lv\_list\_get\_btn\_img(list\_btn) can be used
to get the label and the image of a list button. The text can be et directly with
lv list get btn text(list btn).

### **Delete buttons**

To delete a list element just use  $lv_obj_del(btn)$  on the return value of  $lv_list_add_btn()$ . To clean the list (remove all buttons) use  $lv_list_clean(list)$ 

### Manual navigation

You can navigate manually in the list with lv list up(list) and lv list down(list).

You can focus on a button directly using lv list focus(btn, LV ANIM ON/OFF).

The animation time of up/down/focus movements can be set via: lv\_list\_set\_anim\_time(list, anim\_time). Zero animation time means not animations.

### Layout

By default the list is vertical. To get a horizontal list use  $lv_list_set_layout(list, LV_LAYOUT_ROW_MID)$ .

### Edge flash

A circle-like effect can be shown when the list reaches the most top or bottom position. lv\_list\_set\_edge\_flash(list, true) enables this feature.

### Scroll propagation

If the list is created on an other scrollable element (like a *Page*) and the list can't be scrolled further the scrolling can be propagated to the parent. This way the scroll will be continued on the parent. It can be enabled with lv\_list\_set\_scroll\_propagation(list, true)

# 5.20.4 Events

Only the Generic events are sent by the object type.

Learn more about *Events*.

# 5.20.5 Keys

The following Keys are processed by the Lists:

- LV\_KEY\_RIGHT/DOWN Select the next button
- LV\_KEY\_LEFT/UP Select the previous button

Note that, as usual, the state of  $LV\_KEY\_ENTER$  is translated to  $LV\_EVENT\_PRESSED/PRESSING/RELEASED$  etc.

The Selected buttons are in LV\_BTN\_STATE\_PR/TG\_PR state.


To manually select a button use <code>lv\_list\_set\_btn\_selected(list, btn)</code>. When the list is defocused and focused again it will restore the last selected button.

Learn more about *Keys*.

# **5.20.6 Example**

C

# Simple List

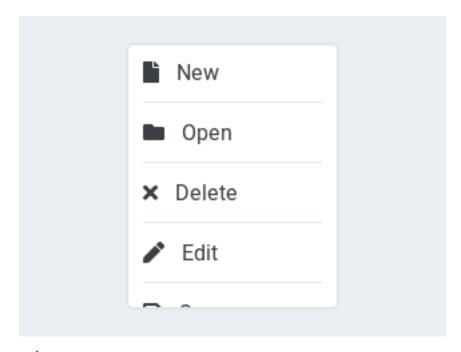

code

```
#include "../../lv examples.h"
#include <stdio.h>
#if LV_USE_LIST
static void event_handler(lv_obj_t * obj, lv_event_t event)
    if(event == LV EVENT CLICKED) {
        printf("Clicked: %s\n", lv list get btn text(obj));
    }
}
void lv_ex_list_1(void)
    /*Create a list*/
    lv_obj_t * list1 = lv_list_create(lv_scr_act(), NULL);
    lv_obj_set_size(list1, 160, 200);
    lv_obj_align(list1, NULL, LV_ALIGN_CENTER, 0, 0);
   /*Add buttons to the list*/
   lv_obj_t * list_btn;
    list_btn = lv_list_add_btn(list1, LV_SYMBOL_FILE, "New");
    lv_obj_set_event_cb(list_btn, event_handler);
    list_btn = lv_list_add_btn(list1, LV_SYMBOL_DIRECTORY, "Open");
    lv_obj_set_event_cb(list_btn, event_handler);
    list btn = lv list add btn(list1, LV SYMBOL CLOSE, "Delete");
    lv_obj_set_event_cb(list_btn, event_handler);
    list_btn = lv_list_add_btn(list1, LV_SYMBOL_EDIT, "Edit");
   lv_obj_set_event_cb(list_btn, event_handler);
   list_btn = lv_list_add_btn(list1, LV_SYMBOL_SAVE, "Save");
   lv_obj_set_event_cb(list_btn, event_handler);
    list_btn = lv_list_add_btn(list1, LV_SYMBOL_BELL, "Notify");
   lv_obj_set_event_cb(list_btn, event_handler);
    list_btn = lv_list_add_btn(list1, LV_SYMBOL_BATTERY_FULL, "Battery");
    lv obj set event cb(list btn, event handler);
}
#endif
```

### **MicroPython**

No examples yet.

### 5.20.7 API

### **Typedefs**

typedef uint8\_t lv\_list\_style\_t

### **Enums**

```
enum [anonymous]
List styles.

Values:
```

List background style

$$\_$$
LV $\_$ LIST $\_$ PART $\_$ VIRTUAL $\_$ LAST $=$   $\_$ LV $\_$ PAGE $\_$ PART $\_$ VIRTUAL $\_$ LAST

### **Functions**

Return pointer to the created list

#### **Parameters**

- par: pointer to an object, it will be the parent of the new list
- copy: pointer to a list object, if not NULL then the new object will be copied from it

### void lv list clean(lv\_obj\_t \*list)

Delete all children of the scrl object, without deleting scrl child.

### Parameters

• list: pointer to an object

```
lv\_obj\_t *lv\_list\_add\_btn(lv\_obj\_t *list, const void *img\_src, const char *txt)
Add a list element to the list
```

Add a list element to the list

Return pointer to the new list element which can be customized (a button)

### **Parameters**

- list: pointer to list object
- img\_fn: file name of an image before the text (NULL if unused)
- txt: text of the list element (NULL if unused)

# bool lv\_list\_remove(const lv\_obj\_t \*list, uint16\_t index)

Remove the index of the button in the list

Return true: successfully deleted

# Parameters

• list: pointer to a list object

• index: pointer to a the button's index in the list, index must be 0 <= index < lv list ext t.size

# void lv\_list\_focus\_btn(lv\_obj\_t \*list, lv\_obj\_t \*btn)

Make a button selected

### **Parameters**

- list: pointer to a list object
- btn: pointer to a button to select NULL to not select any buttons

# static void lv list set scrollbar mode(lv\_obj\_t\*list, lv\_scrollbar\_mode\_t mode)

Set the scroll bar mode of a list

#### **Parameters**

- list: pointer to a list object
- sb\_mode: the new mode from 'lv\_page\_sb\_mode\_t' enum

# static void lv list set scroll propagation(lv\_obj\_t\*list, bool en)

Enable the scroll propagation feature. If enabled then the List will move its parent if there is no more space to scroll.

#### **Parameters**

- list: pointer to a List
- en: true or false to enable/disable scroll propagation

### static void lv list set edge flash(lv\_obj\_t\*list, bool en)

Enable the edge flash effect. (Show an arc when the an edge is reached)

### Parameters

- list: pointer to a List
- en: true or false to enable/disable end flash

# **static** void **lv\_list\_set\_anim\_time**(lv\_obj\_t \*list, uint16\_t anim\_time)

Set scroll animation duration on 'list up()' 'list down()' 'list focus()'

### **Parameters**

- list: pointer to a list object
- anim\_time: duration of animation [ms]

# void lv\_list\_set\_layout(lv\_obj\_t \*list, lv\_layout\_t layout)

Set layout of a list

### **Parameters**

- list: pointer to a list object
- layout: which layout should be used

# const char \*lv list get btn text(const lv\_obj\_t \*btn)

Get the text of a list element

**Return** pointer to the text

# **Parameters**

• btn: pointer to list element

# lv\_obj\_t \*lv\_list\_get\_btn\_label(const lv\_obj\_t \*btn)

Get the label object from a list element

Return pointer to the label from the list element or NULL if not found

#### **Parameters**

• btn: pointer to a list element (button)

# lv\_obj\_t \*lv\_list\_get\_btn\_img(const lv\_obj\_t \*btn)

Get the image object from a list element

Return pointer to the image from the list element or NULL if not found

### **Parameters**

• btn: pointer to a list element (button)

# lv\_obj\_t \*lv\_list\_get\_prev\_btn(const lv\_obj\_t \*list, lv\_obj\_t \*prev\_btn) Get the next button from list. (Starts from the bottom button)

Return pointer to the next button or NULL when no more buttons

### **Parameters**

- list: pointer to a list object
- prev\_btn: pointer to button. Search the next after it.

**Return** pointer to the previous button or NULL when no more buttons

### **Parameters**

- list: pointer to a list object
- prev btn: pointer to button. Search the previous before it.

$$\operatorname{int}32\_{\operatorname{t}}$$
  $\operatorname{lv\_list\_get\_btn\_index}$  (const  $\operatorname{\mathit{lv\_obj\_t}}*\operatorname{\mathit{list}},$  const  $\operatorname{\mathit{lv\_obj\_t}}*\operatorname{\mathit{btn}}$ )

Get the index of the button in the list

Return the index of the button in the list, or -1 of the button not in this list

# **Parameters**

- list: pointer to a list object. If NULL, assumes btn is part of a list.
- btn: pointer to a list element (button)

### uint16 t lv list get size(const lv obj t\*list)

Get the number of buttons in the list

Return the number of buttons in the list

# **Parameters**

• list: pointer to a list object

# lv\_obj\_t \*lv list get btn selected(const lv\_obj\_t \*list)

Get the currently selected button. Can be used while navigating in the list with a keypad.

Return pointer to the selected button

# **Parameters**

• list: pointer to a list object

```
lv layout t lv list get layout(lv_obj_t*list)
     Get layout of a list
     Return layout of the list object
     Parameters
           • list: pointer to a list object
static lv\_scrollbar\_mode\_t lv\_list\_get\_scrollbar\_mode(const <math>lv\_obj\_t * list)
     Get the scroll bar mode of a list
     Return scrollbar mode from 'lv scrollbar mode t' enum
     Parameters
           • list: pointer to a list object
static bool lv_list_get_scroll_propagation(lv_obj_t *list)
     Get the scroll propagation property
     Return true or false
     Parameters
           • list: pointer to a List
static bool lv_list_get_edge_flash(lv_obj_t *list)
     Get the scroll propagation property
     Return true or false
     Parameters
           • list: pointer to a List
static uint16 t lv list get anim time(const lv_obj_t*list)
     Get scroll animation duration
     Return duration of animation [ms]
     Parameters
           • list: pointer to a list object
void lv_list_up(const lv_obj_t *list)
     Move the list elements up by one
     Parameters
           • list: pointer a to list object
void lv list down(const lv obj t*list)
     Move the list elements down by one
     Parameters
           • list: pointer to a list object
void lv list focus(const lv obj t*btn, lv anim enable t anim)
```

struct lv\_list\_ext\_t

Focus on a list button. It ensures that the button will be visible on the list.

• btn: pointer to a list button to focus

**Parameters** 

5.20. List (lv\_list) 299

• anim: LV ANOM ON: scroll with animation, LV ANIM OFF: without animation

### **Public Members**

```
lv_page_ext_t page
lv_obj_t *last_sel_btn
lv_obj_t *act sel btn
```

# 5.21 Line meter (lv\_lmeter)

### 5.21.1 Overview

The Line meter object consists of some radial lines which draw a scale. Setting a value for the Line meter will change the color of the scale lines proportionally.

# 5.21.2 Parts and Styles

The Line meter has only a main part, called LV\_LINEMETER\_PART\_MAIN. It uses all the typical background properties the draw a rectangle-like or circle background and the *line* and *scale* properties to draw the scale lines. The active lines (which are related to smaller values the the current value) are colored from *line\_color* to *scale\_grad\_color*. The lines in the end (after the current value) are set to *scale\_end\_color* color.

# 5.21.3 Usage

### Set value

When setting a new value with lv\_linemeter\_set\_value(linemeter, new\_value) the proportional part of the scale will be recolored.

### Range and Angles

The lv linemeter set range(linemeter, min, max) function sets the range of the line meter.

You can set the angle of the scale and the number of the lines by: lv\_linemeter\_set\_scale(linemeter, angle, line\_num). The default angle is 240 and the default line number is 31.

### Angle offset

By default the scale angle is interpreted symmetrically to the y axis. It results in "standing" line meter. With lv\_linemeter\_set\_angle\_offset an offset can be added the scale angle. It can used e.g to put a quarter line meter into a corner or a half line meter to the right or left side.

# Mirror

By default the Line meter's lines are activated clock-wise. It can be changed using lv\_linemeter\_set\_mirror(linemeter, true/false).

# **5.21.4 Events**

Only the Generic events are sent by the object type.

Learn more about *Events*.

# 5.21.5 Keys


No *Keys* are processed by the object type.

Learn more about *Keys*.

# **5.21.6 Example**

C

# Simple Line meter

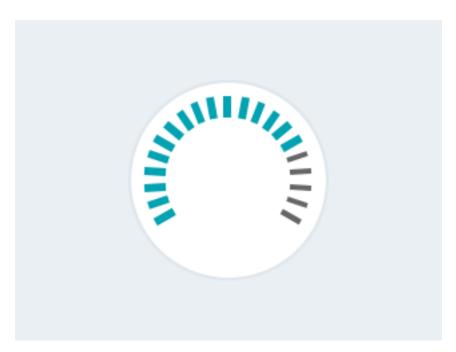

code

(continues on next page)

(continued from previous page)

```
lv_obj_set_size(lmeter, 150, 150);
    lv_obj_align(lmeter, NULL, LV_ALIGN_CENTER, 0, 0);
}
#endif
```

# MicroPython

No examples yet.

# 5.21.7 API

# **Typedefs**

```
typedef uint8_t lv_linemeter_part_t
```

### **Enums**

```
enum [anonymous]
```

Values:

```
LV_LINEMETER_PART_MAIN
_LV_LINEMETER_PART_VIRTUAL_LAST
_LV_LINEMETER_PART_REAL_LAST = _LV_OBJ_PART_REAL_LAST
```

### **Functions**

```
lv\_obj\_t *lv\_linemeter\_create(lv\_obj\_t *par, const lv\_obj\_t *copy)
```

 ${\bf Create\ a\ line\ meter\ objects}$ 

Return pointer to the created line meter

### Parameters

- par: pointer to an object, it will be the parent of the new line meter
- copy: pointer to a line meter object, if not NULL then the new object will be copied from it

```
void lv linemeter set value(lv_obj_t*lmeter, int32 t value)
```

Set a new value on the line meter

# Parameters

- lmeter: pointer to a line meter object
- value: new value

```
void lv_linemeter_set_range(lv_obj_t *lmeter, int32_t min, int32_t max)
```

Set minimum and the maximum values of a line meter

### **Parameters**

- lmeter: pointer to he line meter object
- min: minimum value

• max: maximum value

# void lv\_linemeter\_set\_scale(lv\_obj\_t \*lmeter, uint16\_t angle, uint16\_t line\_cnt)

Set the scale settings of a line meter

#### **Parameters**

- lmeter: pointer to a line meter object
- angle: angle of the scale (0..360)
- line\_cnt: number of lines

# void lv\_linemeter\_set\_angle\_offset(lv\_obj\_t \*lmeter, uint16\_t angle)

Set the set an offset for the line meter's angles to rotate it.

### **Parameters**

- lmeter: pointer to a line meter object
- angle: angle offset (0..360), rotates clockwise

# void lv\_linemeter\_set\_mirror(lv\_obj\_t \*lmeter, bool mirror)

Set the orientation of the meter growth, clockwise or counterclockwise (mirrored)

#### **Parameters**

- lmeter: pointer to a line meter object
- mirror: mirror setting

# int32\_t lv\_linemeter\_get\_value(const lv\_obj\_t \*lmeter)

Get the value of a line meter

Return the value of the line meter

# Parameters

• lmeter: pointer to a line meter object

# int32\_t lv\_linemeter\_get\_min\_value(const lv\_obj\_t \*lmeter)

Get the minimum value of a line meter

Return the minimum value of the line meter

### Parameters

• lmeter: pointer to a line meter object

# int32\_t lv\_linemeter\_get\_max\_value(const lv\_obj\_t \*lmeter)

Get the maximum value of a line meter

Return the maximum value of the line meter

### **Parameters**

• lmeter: pointer to a line meter object

# uint16 t lv linemeter get line count(const lv obj t \*lmeter)

Get the scale number of a line meter

Return number of the scale units

### **Parameters**

• lmeter: pointer to a line meter object

# uint16\_t lv\_linemeter\_get\_scale\_angle(const lv\_obj\_t \*lmeter)

Get the scale angle of a line meter

# Return angle of the scale

#### **Parameters**

• lmeter: pointer to a line meter object

# uint16\_t lv\_linemeter\_get\_angle\_offset(lv\_obj\_t \*lmeter)

Get the offset for the line meter.

**Return** angle offset (0..360)

### **Parameters**

• lmeter: pointer to a line meter object

```
void lv_linemeter_draw_scale(lv_obj_t *lmeter, const lv_area_t *clip_area, uint8_t part)
```

### bool lv linemeter get mirror(lv\_obj\_t\*lmeter)

get the mirror setting for the line meter

Return mirror (true or false)

#### **Parameters**

• lmeter: pointer to a line meter object

# struct lv\_linemeter\_ext\_t

#### **Public Members**

```
uint16_t scale_angle
uint16_t angle_ofs
uint16_t line_cnt
int32_t cur_value
int32_t min_value
int32_t max_value
uint8 t mirrored
```

# 5.22 Message box (lv\_msdbox)

### 5.22.1 Overview

The Message boxes act as pop-ups. They are built from a background Container, a Label and a Button matrix for buttons.

The text will be broken into multiple lines automatically (has LV\_LABEL\_LONG\_MODE\_BREAK) and the height will be set automatically to involve the text and the buttons (LV\_FIT\_TIGHT fit vertically)-

# 5.22.2 Parts and Styles

The Message box's main part is called LV\_MSGBOX\_PART\_MAIN and it uses all the typical background style properties. Using padding will add space on the sides. *pad\_inner* will add space between the text and the buttons. The *label* style properties affect the style of text.

The buttons parts are the same as in case of Button matrix:

- LV MSGBOX PART BTN BG the background of the buttons
- LV MSGBOX PART BTN the buttons

# 5.22.3 Usage

#### Set text

To set the text use the <code>lv\_msgbox\_set\_text(msgbox, "My text")</code> function. Not only the pointer of the text will be saved, so the the text can be in a local variable too.

### Add buttons

To add buttons use the  $lv_msgbox_add_btns(msgbox, btn_str)$  function. The button's text needs to be specified like const char \*  $btn_str[] = {"Apply", "Close", ""}$ . For more information visit the *Button matrix* documentation.

The button matrix will be created only when lv msgbox add btns() is called for the first time.

### **Auto-close**

With lv\_msgbox\_start\_auto\_close(mbox, delay) the message box can be closed automatically after delay milliseconds with an animation. The lv\_mbox\_stop\_auto\_close(mbox) function stops a started auto close.

The duration of the close animation can be set by lv\_mbox\_set\_anim\_time(mbox, anim\_time).

# **5.22.4 Events**

Besides the Generic events the following Special events are sent by the Message boxes:

• LV\_EVENT\_VALUE\_CHANGED sent when the button is clicked. The event data is set to ID of the clicked button.

The Message box has a default event callback which closes itself when a button is clicked.

Learn more about *Events*.

##Keys

The following *Keys* are processed by the Buttons:


- LV KEY RIGHT/DOWN Select the next button
- LV\_KEY\_LEFT/TOP Select the previous button
- LV\_KEY\_ENTER Clicks the selected button

Learn more about Keys.

# **5.22.5** Example

C

### Simple Message box

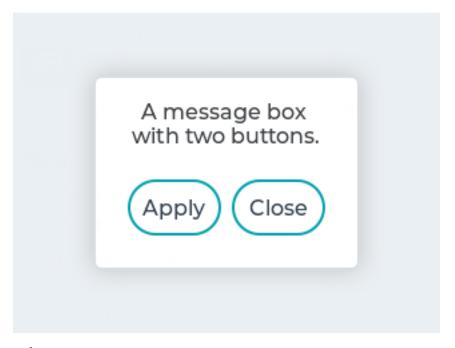

code

```
#include "../../lv_examples.h"
#include <stdio.h>
#if LV_USE_MSGBOX
static void event_handler(lv_obj_t * obj, lv_event_t event)
    if(event == LV EVENT VALUE CHANGED) {
       printf("Button: %s\n", lv_msgbox_get_active_btn_text(obj));
}
void lv_ex_msgbox_1(void)
   static const char * btns[] ={"Apply", "Close", ""};
   lv_obj_t * mbox1 = lv_msgbox_create(lv_scr_act(), NULL);
   lv_msgbox_set_text(mbox1, "A message box with two buttons.");
   lv_msgbox_add_btns(mbox1, btns);
   lv obj set width(mbox1, 200);
   lv_obj_set_event_cb(mbox1, event_handler);
    lv_obj_align(mbox1, NULL, LV_ALIGN_CENTER, 0, 0); /*Align to the corner*/
}
#endif
```

### Modal



Welcome to the modal message box demo!
Press the button to display a message

code

```
#include "../../lv_examples.h"
#if LV USE MSGBOX
static void mbox_event_cb(lv_obj_t *obj, lv_event_t evt);
static void btn_event_cb(lv_obj_t *btn, lv_event_t evt);
static void opa anim(void * bg, lv anim value t v);
static lv obj t *mbox, *info;
static lv_style_t style_modal;
static const char welcome_info[] = "Welcome to the modal message box demo!\n"
        "Press the button to display a message box.";
static const char in_msg_info[] = "Notice that you cannot touch "
        "the button again while the message box is open.";
void lv ex msqbox 2(void)
    lv_style_init(&style_modal);
   lv_style_set_bg_color(&style_modal, LV_STATE_DEFAULT, LV_COLOR_BLACK);
    /* Create a button, then set its position and event callback */
    lv obj t *btn = lv btn create(lv scr act(), NULL);
    lv_obj_set_size(btn, 200, 60);
    lv_obj_set_event_cb(btn, btn_event_cb);
   lv_obj_align(btn, NULL, LV_ALIGN_IN_TOP_LEFT, 20, 20);
   /* Create a label on the button */
   lv obj t *label = lv label create(btn, NULL);
    lv label set text(label, "Display a message box!");
```

(continues on next page)

(continued from previous page)

```
/* Create an informative label on the screen */
    info = lv_label_create(lv_scr_act(), NULL);
    lv_label_set_text(info, welcome_info);
    lv_label_set_long_mode(info, LV_LABEL_LONG_BREAK); /* Make sure text will wrap */
    lv obj set width(info, LV HOR RES - 10);
    lv_obj_align(info, NULL, LV_ALIGN_IN_BOTTOM_LEFT, 5, -5);
}
static void mbox_event_cb(lv_obj_t *obj, lv_event_t evt)
    if(evt == LV EVENT DELETE && obj == mbox) {
        /* Delete the parent modal background */
        lv_obj_del_async(lv_obj_get_parent(mbox));
        mbox = NULL; /* happens before object is actually deleted! */
        lv_label_set_text(info, welcome_info);
    } else if(evt == LV_EVENT_VALUE_CHANGED) {
        /* A button was clicked */
        lv_msgbox_start_auto_close(mbox, 0);
    }
}
static void btn_event_cb(lv_obj_t *btn, lv_event_t evt)
    if(evt == LV EVENT CLICKED) {
        /* Create a full-screen background */
        /* Create a base object for the modal background */
        lv_obj_t *obj = lv_obj_create(lv_scr_act(), NULL);
        lv_obj_reset_style_list(obj, LV_OBJ_PART_MAIN);
        lv obj add style(obj, LV OBJ PART MAIN, &style modal);
        lv_obj_set_pos(obj, 0, 0);
        lv_obj_set_size(obj, LV_HOR_RES, LV_VER_RES);
        static const char * btns2[] = {"0k", "Cancel", ""};
        /* Create the message box as a child of the modal background */
        mbox = lv msgbox create(obj, NULL);
        lv msgbox add btns(mbox, btns2);
        lv_msgbox_set_text(mbox, "Hello world!");
        lv obj align(mbox, NULL, LV ALIGN CENTER, 0, 0);
        lv_obj_set_event_cb(mbox, mbox_event_cb);
        /st Fade the message box in with an animation st/
        lv anim t a;
        lv anim init(\&a);
        lv_anim_set_var(&a, obj);
        lv_anim_set_time(&a, 500);
        lv_anim_set_values(&a, LV_OPA_TRANSP, LV_OPA_50);
        lv_anim_set_exec_cb(&a, (lv_anim_exec_xcb_t)opa_anim);
        lv anim start(&a);
        lv label set text(info, in msg info);
        lv obj align(info, NULL, LV ALIGN IN BOTTOM LEFT, 5, -5);
    }
}
```

(continues on next page)

(continued from previous page)

```
static void opa_anim(void * bg, lv_anim_value_t v)
{
    lv_obj_set_style_local_bg_opa(bg, LV_OBJ_PART_MAIN, LV_STATE_DEFAULT, v);
}
#endif
```

# MicroPython

No examples yet.

### 5.22.6 API

### **Typedefs**

```
typedef uint8_t lv_msgbox_style_t
```

#### **Enums**

# enum [anonymous]

Message box styles.

Values:

```
\label{eq:lv_msgbox_part_bg} \begin{split} \mathbf{LV\_MSGBOX\_PART\_BG} &= \mathit{LV\_CONT\_PART\_MAIN} \\ \mathbf{LV\_MSGBOX\_PART\_BTN\_BG} &= \mathit{\_LV\_CONT\_PART\_REAL\_LAST} \\ \mathbf{LV\_MSGBOX\_PART\_BTN} \end{split}
```

### **Functions**

```
lv\_obj\_t *lv\_msgbox\_create(lv\_obj\_t *par, const lv\_obj\_t *copy)
Create a message box objects
```

Create a message box objects

Return pointer to the created message box

# **Parameters**

- par: pointer to an object, it will be the parent of the new message box
- copy: pointer to a message box object, if not NULL then the new object will be copied from it

```
\label{local_void_local_void} \textbf{lv\_msgbox\_add\_btns} \ (\textit{lv\_obj\_t *mbox}, \ \textbf{const} \ \text{char *btn\_mapaction} [] \ \textbf{)}
```

Add button to the message box

### **Parameters**

- mbox: pointer to message box object
- btn\_map: button descriptor (button matrix map). E.g. a const char \*txt[] = {"ok", "close", ""} (Can not be local variable)

# void lv\_msgbox\_set\_text(lv\_obj\_t \*mbox, const char \*txt)

Set the text of the message box

#### **Parameters**

- mbox: pointer to a message box
- txt: a '\0' terminated character string which will be the message box text

# void lv\_msgbox\_set\_anim\_time(lv\_obj\_t \*mbox, uint16\_t anim\_time)

Set animation duration

#### **Parameters**

- mbox: pointer to a message box object
- anim time: animation length in milliseconds (0: no animation)

# void lv\_msgbox\_start\_auto\_close(lv\_obj\_t \*mbox, uint16\_t delay)

Automatically delete the message box after a given time

### **Parameters**

- mbox: pointer to a message box object
- delay: a time (in milliseconds) to wait before delete the message box

# void $lv_msgbox_stop_auto_close(lv_obj_t*mbox)$

Stop the auto. closing of message box

#### **Parameters**

• mbox: pointer to a message box object

# void lv msgbox set recolor( $lv\_obj\_t*mbox$ , bool en)

Set whether recoloring is enabled. Must be called after lv\_msgbox\_add\_btns.

### **Parameters**

- mbox: pointer to message box object
- en: whether recoloring is enabled

# const char \*lv msgbox get text(const lv\_obj\_t \*mbox)

Get the text of the message box

Return pointer to the text of the message box

#### **Parameters**

• mbox: pointer to a message box object

# uint16\_t lv\_msgbox\_get\_active\_btn(lv\_obj\_t\*mbox)

Get the index of the lastly "activated" button by the user (pressed, released etc) Useful in the the  $event\_cb$ .

Return index of the last released button (LV\_BTNMATRIX\_BTN\_NONE: if unset)

#### **Parameters**

• mbox: pointer to message box object

# const char \*lv\_msgbox\_get\_active\_btn\_text(lv\_obj\_t \*mbox)

Get the text of the lastly "activated" button by the user (pressed, released etc) Useful in the the event\_cb.

Return text of the last released button (NULL: if unset)

### **Parameters**

• mbox: pointer to message box object

# uint16\_t lv\_msgbox\_get\_anim\_time(const $lv\_obj\_t *mbox$ )

Get the animation duration (close animation time)

**Return** animation length in milliseconds (0: no animation)

#### **Parameters**

• mbox: pointer to a message box object

# bool lv\_msgbox\_get\_recolor(const lv\_obj\_t \*mbox)

Get whether recoloring is enabled

**Return** whether recoloring is enabled

### **Parameters**

• mbox: pointer to a message box object

# $lv\_obj\_t *lv\_msgbox\_get\_btnmatrix(lv\_obj\_t *mbox)$

Get message box button matrix

Return pointer to button matrix object

Remark return value will be NULL unless lv msgbox add btns has been already called

### **Parameters**

• mbox: pointer to a message box object

# struct lv\_msgbox\_ext\_t

### **Public Members**

```
\begin{array}{l} lv\_cont\_ext\_t \ \ \mathbf{bg} \\ \\ lv\_obj\_t \ ^*\mathbf{text} \\ \\ lv\_obj\_t \ ^*\mathbf{btnm} \\ \\ \\ \mathbf{uint}16\_t \ \mathbf{anim\_time} \end{array}
```

# 5.23 Object mask (lv\_objmask)

### 5.23.1 Overview

The  $Object\ mask$  is capable of add some mask to drawings when its children is drawn.

# 5.23.2 Parts and Styles

The Object mask has only a main part called LV\_OBJMASK\_PART\_BG and it uses the typical background style properties.

# 5.23.3 Usage

### **Adding mask**

Before adding a mask to the *Object mask* the mask should be initialized:

```
lv_draw_mask_<type>_param_t mask_param;
lv_draw_mask_<type>_init(&mask_param, ...);
lv_objmask_mask_t * mask_p = lv_objmask_add_mask(objmask, &mask_param);
```

Lvgl supports the following mask types:

- **line** clip the pixels on the top/bottom left/right of a line. Can be initialized from two points or a point and an angle:
- angle keep the pixels only between a given start and end angle
- radius keep the pixel only inside a rectangle which can have radius (can for a circle too). Can be inverted to keep the pixel outside of the rectangle.
- fade fade vertically (change the pixels opacity according to their y position)
- map use an alpha mask (a byte array) to describe the pixels opacity.

The coordinates in the mask are relative to the Object. That is if the object moves the masks move with it. For the details of the mask *init* function see the *API* documentation below.

# **Update** mask

AN existing mask can be updated with  $lv_objmask_update_mask(objmask, mask_p, new_param)$ , where  $mask_p$  is return value of  $lv_objmask_add_mask$ .

### Remove mask

A mask can be removed with lv objmask remove mask(objmask, mask p)

# **5.23.4 Events**

Only the Generic events are sent by the object type.

Learn more about *Events*.

# 5.23.5 Keys

No *Keys* are processed by the object type.

Learn more about *Keys*.

# **5.23.6 Example**

C

### Several object masks



code

```
#include "../../lv_examples.h"
#if LV USE OBJMASK
void lv_ex_objmask_1(void)
    /*Set a very visible color for the screen to clearly see what happens*/
   lv obj set style local bg color(lv scr act(), LV OBJ PART MAIN, LV STATE DEFAULT,...
→lv_color_hex3(0xf33));
    lv_obj_t * om = lv_objmask_create(lv_scr_act(), NULL);
    lv_obj_set_size(om, 200, 200);
    lv_obj_align(om, NULL, LV_ALIGN_CENTER, 0, 0);
    lv_obj_t * label = lv_label_create(om, NULL);
    lv label set long mode(label, LV LABEL LONG BREAK);
    lv label set align(label, LV LABEL ALIGN CENTER);
    lv obj set width(label, 180);
    lv label set text(label, "This label will be masked out. See how it works.");
   lv_obj_align(label, NULL, LV_ALIGN_IN_TOP_MID, 0, 20);
    lv obj t * cont = lv cont create(om, NULL);
    lv obj set size(cont, 180, 100);
    lv obj set drag(cont, true);
    lv_obj_align(cont, NULL, LV_ALIGN_IN_BOTTOM_MID, 0, -10);
    lv obj t * btn = lv btn create(cont, NULL);
    lv_obj_align(btn, NULL, LV_ALIGN_CENTER, 0, 0);
    lv obj set style local value str(btn, LV BTN PART MAIN, LV STATE DEFAULT, "Button
");
    uint32_t t;
```

(continues on next page)

(continued from previous page)

```
lv_refr_now(NULL);
    t = lv_tick_get();
   while(lv_tick_elaps(t) < 1000);</pre>
    lv area t a;
    lv_draw_mask_radius_param_t r1;
   a.x1 = 10;
    a.y1 = 10;
    a.x2 = 190;
    a.y2 = 190;
    lv draw mask radius init(&r1, &a, LV RADIUS CIRCLE, false);
    lv objmask add mask(om, &r1);
   lv refr now(NULL);
    t = lv_tick_get();
   while(lv_tick_elaps(t) < 1000);</pre>
    a.x1 = 100;
   a.y1 = 100;
    a.x2 = 150;
    a.y2 = 150;
    lv_draw_mask_radius_init(&r1, &a, LV_RADIUS_CIRCLE, true);
    lv_objmask_add_mask(om, &r1);
    lv refr now(NULL);
    t = lv_tick_get();
    while(lv_tick_elaps(t) < 1000);</pre>
    lv_draw_mask_line_param_t l1;
    lv_draw_mask_line_points_init(&l1, 0, 0, 100, 200, LV_DRAW_MASK_LINE_SIDE_TOP);
    lv_objmask_add_mask(om, &l1);
   lv_refr_now(NULL);
    t = lv_tick_get();
   while(lv_tick_elaps(t) < 1000);</pre>
   lv draw mask fade param t f1;
   a.x1 = 100;
   a.y1 = 0;
   a.x2 = 200;
   a.y2 = 200;
    lv_draw_mask_fade_init(&f1, &a, LV_OPA_TRANSP, 0, LV_OPA_COVER, 150);
    lv objmask add mask(om, &f1);
}
#endif
```

### Text mask

# Text with gradient

code

```
#include "../../lv_examples.h"
#if LV_USE_OBJMASK
#define MASK WIDTH 100
#define MASK HEIGHT 50
void lv_ex_objmask_2(void)
    /* Create the mask of a text by drawing it to a canvas*/
   static lv opa t mask map[MASK WIDTH * MASK HEIGHT];
   /*Create a "8 bit alpha" canvas and clear it*/
   lv_obj_t * canvas = lv_canvas_create(lv_scr_act(), NULL);
   lv canvas set buffer(canvas, mask map, MASK WIDTH, MASK HEIGHT, LV IMG CF ALPHA
   lv_canvas_fill_bg(canvas, LV_COLOR_BLACK, LV_OPA_TRANSP);
   /*Draw a label to the canvas. The result "image" will be used as mask*/
   lv draw label dsc t label dsc;
    lv_draw_label_dsc_init(&label_dsc);
    label dsc.color = LV COLOR WHITE;
    lv canvas draw text(canvas, 5, 5, MASK WIDTH, &label dsc, "Text with gradient",,
→LV LABEL ALIGN CENTER);
    /*The mask is reads the canvas is not required anymore*/
   lv_obj_del(canvas);
   /*Create an object mask which will use the created mask*/
    lv obj t * om = lv objmask create(lv scr act(), NULL);
    lv obj set size(om, MASK WIDTH, MASK HEIGHT);
```

(continues on next page)

(continued from previous page)

```
lv_obj_align(om, NULL, LV_ALIGN_CENTER, 0, 0);
    /*Add the created mask map to the object mask*/
    lv_draw_mask_map_param_t m;
    lv area t a;
    a.\overline{x}1 = \overline{0};
    a.y1 = 0;
    a.x2 = MASK_WIDTH - 1;
    a.y2 = MASK_HEIGHT - 1;
    lv_draw_mask_map_init(&m, &a, mask_map);
    lv_objmask_add_mask(om, &m);
    /*Create a style with gradient*/
    static lv_style_t style_bg;
    lv_style_init(&style_bg);
    lv_style_set_bg_opa(&style_bg, LV_STATE_DEFAULT, LV_OPA_COVER);
    lv_style_set_bg_color(&style_bg, LV_STATE_DEFAULT, LV_COLOR_RED);
    lv_style_set_bg_grad_color(&style_bg, LV_STATE_DEFAULT, LV_COLOR_BLUE);
    lv_style_set_bg_grad_dir(&style_bg, LV_STATE_DEFAULT, LV_GRAD_DIR_HOR);
    /* Create and object with the gradient style on the object mask.
     * The text will be masked from the gradient*/
    lv_obj_t * bg = lv_obj_create(om, NULL);
    lv_obj_reset_style_list(bg, LV_OBJ_PART_MAIN);
    lv obj add style(bg, LV OBJ PART MAIN, &style bg);
    lv obj set size(bg, MASK WIDTH, MASK HEIGHT);
}
#endif
```

### MicroPython

No examples yet.

# 5.23.7 API

### **Typedefs**

```
typedef uint8_t lv_objmask_part_t
```

### Enums

```
enum [anonymous]

Values:

LV_OBJMASK_PART_MAIN
```

### **Functions**

```
lv\_obj\_t *lv\_objmask_create(lv\_obj\_t *par, const lv\_obj\_t *copy)

Create a object mask objects
```

Return pointer to the created object mask

### **Parameters**

- par: pointer to an object, it will be the parent of the new object mask
- COPY: pointer to a object mask object, if not NULL then the new object will be copied from it

```
\mathit{lv\_objmask\_mask\_t} * \textbf{lv\_objmask\_add\_mask(} \mathit{lv\_obj\_t} * \mathit{objmask}, \mathit{void} * \mathit{param} \textbf{)}
```

Add a mask

Return pointer to the added mask

### **Parameters**

- objmask: pointer to an Object mask object
- param: an initialized mask parameter

```
void lv_objmask_update_mask(lv_obj_t *objmask, lv_objmask_mask_t *mask, void *param)
Update an already created mask
```

### **Parameters**

- objmask: pointer to an Object mask object
- mask: pointer to created mask (returned by lv objmask add mask)
- param: an initialized mask parameter (initialized by lv\_draw\_mask\_line/angle/.../init)

```
{\tt void} \ \textbf{lv\_obj\_mask\_remove\_mask} ( \textit{lv\_obj\_t} * \textit{objmask}, \textit{lv\_objmask\_mask\_t} * \textit{mask} )
```

Remove a mask

### Parameters

- objmask: pointer to an Object mask object
- mask: pointer to created mask (returned by lv\_objmask\_add\_mask) If NULL passed all
  masks will be deleted.

```
struct lv_objmask_mask_t
```

```
Public Members
```

void \*param

```
struct lv_objmask_ext_t
```

### **Public Members**

```
\begin{array}{c} lv\_cont\_ext\_t \text{ cont} \\ lv\_ll\_t \text{ mask\_ll} \end{array}
```

### **Typedefs**

```
typedef uint8_t lv_draw_mask_res_t
typedef uint8_t lv_draw_mask_type_t
```

```
typedef lv draw mask res t (*lv draw mask xcb t)(lv opa t *mask buf, lv coord t
                                                       abs x, ly coord t abs y, ly coord t
                                                       len, void *p)
     A common callback type for every mask type. Used internally by the library.
typedef uint8 tlv draw mask line side t
typedef struct _lv_draw_mask_map_param_t lv_draw_mask_map_param_t
typedef _lv draw mask saved t lv draw mask saved arr t[ LV MASK MAX NUM]
Enums
enum [anonymous]
     Values:
     LV_DRAW_MASK_RES_TRANSP
     LV DRAW MASK RES FULL COVER
     LV_DRAW_MASK_RES_CHANGED
     LV_DRAW_MASK_RES_UNKNOWN
enum [anonymous]
     Values:
     LV_DRAW_MASK_TYPE_LINE
     LV DRAW MASK TYPE ANGLE
     LV_DRAW_MASK_TYPE_RADIUS
     LV DRAW MASK TYPE FADE
     LV DRAW MASK TYPE MAP
enum [anonymous]
     Values:
     LV_DRAW_MASK_LINE_SIDE_LEFT = 0
     LV_DRAW_MASK_LINE_SIDE_RIGHT
     LV_DRAW_MASK_LINE_SIDE_TOP
     LV DRAW MASK LINE SIDE BOTTOM
Functions
int16 t lv draw mask add(void *param, void *custom id)
     Add a draw mask. Everything drawn after it (until removing the mask) will be affected by the mask.
     \mathbf{Return} \ \ \mathrm{the \ an \ integer}, \ \mathrm{the \ ID} \ \ \mathrm{of \ the \ mask}. \ \ \mathbf{Can \ be \ used \ in \ lv\_draw\_mask\_remove \ id}.
     Parameters
           • param: an initialized mask parameter. Only the pointer is saved.
           custom id:
                                 \operatorname{custom}
                                           pointer
                                                         identify
                                                                         mask.
                                                                                      Used
                                                                                             in
             lv draw_mask_remove_custom.
void *lv_draw_mask_remove_id(int16_t id)
     Remove a mask with a given ID
```

**Return** the parameter of the removed mask. If more masks have <code>custom\_id</code> ID then the last mask's parameter will be returned

#### **Parameters**

• id: the ID of the mask. Returned by lv draw mask add

```
void *lv_draw_mask_remove_custom(void *custom_id)
```

Remove all mask with a given custom ID

Return return the parameter of the removed mask. If more masks have custom\_id ID then the last mask's parameter will be returned

### **Parameters**

custom\_id: a pointer used in lv\_draw\_mask\_add

```
\label{line_points_init} $$ \text{void } \textbf{lv\_draw\_mask\_line\_param\_t} * param, \quad \text{lv\_coord\_t} $$ p1x, \, \text{lv\_coord\_t} $$ p2x, \, \text{lv\_coord\_t} $$ p2x, \, \text{lv\_draw\_mask\_line\_side\_t} $$ side$ )
```

Initialize a line mask from two points.

#### **Parameters**

- param: pointer to a lv\_draw\_mask\_param\_t to initialize
- plx: X coordinate of the first point of the line
- ply: Y coordinate of the first point of the line
- p2x: X coordinate of the second point of the line
- p2y: y coordinate of the second point of the line
- side: and element of lv\_draw\_mask\_line\_side\_t to describe which side to keep. With LV\_DRAW\_MASK\_LINE\_SIDE\_LEFT/RIGHT and horizontal line all pixels are kept With LV\_DRAW\_MASK\_LINE\_SIDE\_TOP/BOTTOM and vertical line all pixels are kept

```
void lv_draw_mask_line_angle_init(lv_draw_mask_line_param_t *param, lv_coord_t p1x, lv_coord_t py, int16_t angle, lv_draw_mask_line_side_t side)
```

Initialize a line mask from a point and an angle.

### **Parameters**

- param: pointer to a lv\_draw\_mask\_param\_t to initialize
- px: X coordinate of a point of the line
- py: X coordinate of a point of the line
- angle: right 0 deg, bottom: 90
- side: and element of lv\_draw\_mask\_line\_side\_t to describe which side to keep. With LV\_DRAW\_MASK\_LINE\_SIDE\_LEFT/RIGHT and horizontal line all pixels are kept With LV\_DRAW\_MASK\_LINE\_SIDE\_TOP/BOTTOM and vertical line all pixels are kept

```
\label{local_void_local_void_local_void} $$ \begin{tabular}{ll} $ v_draw_mask\_angle\_param\_t *param, lv\_coord\_t & vertex\_x, \\ lv\_coord\_t & vertex\_y, lv\_coord\_t & start\_angle, lv\_coord\_t \\ & end\_angle \end\_angle \end\_ang
```

Initialize an angle mask.

### **Parameters**

- param: pointer to a lv\_draw\_mask\_param\_t to initialize
- vertex x: X coordinate of the angle vertex (absolute coordinates)

- vertex y: Y coordinate of the angle vertex (absolute coordinates)
- start angle: start angle in degrees. 0 deg on the right, 90 deg, on the bottom
- end\_angle: end angle

```
void lv_draw_mask_radius_init(lv_draw_mask_radius_param_t *param, const lv_area_t *rect, lv coord t radius, bool inv)
```

Initialize a fade mask.

#### **Parameters**

- param: param pointer to a lv draw mask param t to initialize
- rect: coordinates of the rectangle to affect (absolute coordinates)
- radius: radius of the rectangle
- inv: true: keep the pixels inside the rectangle; keep the pixels outside of the rectangle

```
void lv_draw_mask_fade_init(lv_draw_mask_fade_param_t *param, const lv_area_t *coords, lv_opa_t opa_top, lv_coord_t y_top, lv_opa_t opa_bottom, lv_coord_t y_bottom)
```

Initialize a fade mask.

### **Parameters**

- param: pointer to a lv\_draw\_mask\_param\_t to initialize
- coords: coordinates of the area to affect (absolute coordinates)
- opa\_top: opacity on the top
- y\_top: at which coordinate start to change to opacity to opa\_bottom
- opa bottom: opacity at the bottom
- y bottom: at which coordinate reach opa bottom.

```
\label{local_v_draw_mask_map_param} \begin{tabular}{l} $\mathsf{v}_{\mathsf{d}} = \mathsf{v}_{\mathsf{d}} =
```

Initialize a map mask.

### **Parameters**

- param: pointer to a lv\_draw\_mask\_param\_t to initialize
- coords: coordinates of the map (absolute coordinates)
- map: array of bytes with the mask values

### struct lv draw mask common dsc t

### **Public Members**

```
lv_draw_mask_xcb_t cb
lv_draw_mask_type_t type
```

struct lv\_draw\_mask\_line\_param\_t

# **Public Members** lv\_draw\_mask\_common\_dsc\_t dsc lv\_point\_t **p1** lv point t p2 $lv\_draw\_mask\_line\_side\_t$ side struct lv\_draw\_mask\_line\_param\_t::[anonymous] cfg lv\_point\_t origo int32\_t xy\_steep int32\_t yx\_steep $int32\_t$ steep $int32\_t$ spx uint8 t flat uint8 t inv struct lv\_draw\_mask\_angle\_param\_t **Public Members** $lv\_draw\_mask\_common\_dsc\_t$ dsc lv point t vertex p lv\_coord\_t start\_angle lv\_coord\_t end\_angle

```
lv_point_t vertex_p
lv_coord_t start_angle
lv_coord_t end_angle
struct lv_draw_mask_angle_param_t::[anonymous] cfg
lv_draw_mask_line_param_t start_line
lv_draw_mask_line_param_t end_line
uint16_t delta_deg
struct lv_draw_mask_radius_param_t
```

### **Public Members**

```
lv_draw_mask_common_dsc_t dsc
lv_area_t rect
lv_coord_t radius
uint8_t outer
struct lv_draw_mask_radius_param_t::[anonymous] cfg
int32_t y_prev
lv_sqrt_res_t y_prev_x
struct lv draw mask fade param t
```

### **Public Members**

```
lv draw mask common dsc t dsc
    lv area t coords
    lv coord ty top
    lv_coord_t y_bottom
    lv_opa_t opa_top
    lv_opa_t opa_bottom
    struct lv draw mask fade param t::[anonymous] cfg
struct _lv_draw_mask_map_param_t
    Public Members
    lv_draw_mask_common_dsc_t dsc
    lv_area_t coords
    const lv_opa_t *map
    struct _lv_draw_mask_map_param_t::[anonymous] cfg
struct _lv_draw_mask_saved_t
    Public Members
    void *param
    void *custom id
```

# 5.24 Page (Iv\_page)

## 5.24.1 Overview

The Page consist of two *Containers* on each other:

- · a background
- a top which is **scrollable**.

## 5.24.2 Parts and Styles

The Page's main part is called LV\_PAGE\_PART\_BG which is the background of the Page. It uses all the typical background style properties. Using padding will add space on the sides.

The scrollable object can be referenced via the LV\_PAGE\_PART\_SCRL part. It also uses all the typical background style properties and padding to add space on the sides.

LV\_LIST\_PART\_SCROLLBAR is a virtual part of the background to draw the scroll bars. Uses all the typical background style properties, *size* to set the width of the scroll bars, and *pad\_right* and *pad\_bottom* to set the spacing.

LV\_LIST\_PART\_EDGE\_FLASHis also a virtual part of the background to draw a semicircle on the sides when the list can not be scrolled in that direction further. Uses all the typical background properties.

## 5.24.3 Usage

The background object can be referenced as the page itself like. E.g. to set the page's width: lv obj set width(page, 100).

If a child is created on the page it will be automatically moved to the scrollable container. If the scrollable container becomes larger then the background it can be scrolled by dragging (like the lists on smartphones).

By default, the scrollable's has LV\_FIT\_MAX fit in all directions. It means the scrollable size will be the same as the background's size (minus the padding) while the children are in the background. But when an object is positioned out of the background the scrollable size will be increased to involve it.

#### **Scrollbars**

Scrollbars can be shown according to four policies:

- LV SCRLBAR MODE OFF Never show scroll bars
- LV\_SCRLBAR\_MODE\_ON Always show scroll bars
- LV\_SCRLBAR\_MODE\_DRAG Show scroll bars when the page is being dragged
- LV\_SCRLBAR\_MODE\_AUTO Show scroll bars when the scrollable container is large enough to be scrolled
- LV SCRLBAR MODE HIDE Hide the scroll bar temporally
- LV SCRLBAR MODE UNHIDE Unhide the previously hidden scrollbar. Recover the original mode too

The scroll bar show policy can be changed by:  $lv\_page\_set\_scrlbar\_mode(page, SB\_MODE)$ . The default value is  $LV\_SCRLBAR\_MODE\_AUTO$ .

### Glue object

A children can be "glued" to the page. In this case, if the page can be scrolled by dragging that object. It can be enabled by the lv\_page\_glue\_obj(child, true).

### Focus object

An object on a page can be focused with <code>lv\_page\_focus(page, child, LV\_ANIM\_ONO/FF)</code>. It will move the scrollable container to show a child. The time of the animation can be set by <code>lv\_page\_set\_anim\_time(page, anim\_time)</code> in milliseconds. <code>child</code> doesn't have to be a direct child of the page. This is it works if the scrollable object is the grandparent of the object too.

### Manual navigation

You can move the scrollable object manually using  $lv_page_scroll_hor(page, dist)$  and  $lv_page_scroll_ver(page, dist)$ 

### **Edge flash**

A circle-like effect can be shown if the list reached the most top/bottom/left/right position. lv\_page\_set\_edge\_flash(list, en) enables this feature.

### **Scroll propagation**

If the list is created on an other scrollable element (like an other page) and the Page can't be scrolled further the scrolling can be propagated to the parent to continue the scrolling on the parent. It can be enabled with lv page set scroll propagation(list, true)

## 5.24.4 Clean the page

All the object created on the page can be clean with lv\_page\_clean(page). Note that lv\_obj\_clean(page) doesn't work here because it would delete the scrollable object too.

### Scrollable API

There are functions to directly set/get the scrollable's attributes:

- lv page get scrl()
- lv\_page\_set\_scrl\_fit/fint2/fit4()
- lv page set scrl width()
- lv page set scrl height()
- lv page set scrl fit width()
- lv\_page\_set\_scrl\_fit\_height()
- lv page set scrl layout()

### **5.24.5** Events

Only the Generic events are sent by the object type.

default propagates The scrollable object has a event callback which the LV EVENT PRESSED. LV EVENT PRESSING. ing events to the background object: LV EVENT PRESS LOST, LV EVENT RELEASED, LV EVENT SHORT CLICKED, LV EVENT CLICKED, LV EVENT LONG PRESSED, LV EVENT LONG PRESSED REPEAT

Learn more about *Events*.

##Keys

The following *Keys* are processed by the Page:

• LV\_KEY\_RIGHT/LEFT/UP/DOWN Scroll the page

Learn more about *Keys*.

## **5.24.6 Example**

C

Page with scrollbar

Lorem ipsum
dolor sit
amet,
consectetur
adipiscing
elit,
sed do
eiusmod
tempor

code

```
#include "../../lv_examples.h"
#if LV_USE_PAGE
void lv_ex_page_1(void)
    /*Create a page*/
    lv_obj_t * page = lv_page_create(lv_scr_act(), NULL);
    lv_obj_set_size(page, 150, 200);
    lv_obj_align(page, NULL, LV_ALIGN_CENTER, 0, 0);
    /*Create a label on the page*/
    lv_obj_t * label = lv_label_create(page, NULL);
    lv_label_set_long_mode(label, LV_LABEL_LONG_BREAK);
                                                                   /*Automatically
→break long lines*/
    lv_obj_set_width(label, lv_page_get_width_fit(page));
                                                                    /*Set the label.
⇒width to max value to not show hor. scroll bars*/
   lv_label_set_text(label, "Lorem ipsum dolor sit amet, consectetur adipiscing elit,
\hookrightarrow \backslash n''
                             "sed do eiusmod tempor incididunt ut labore et dolore,
⊸magna aliqua.\n"
                             "Ut enim ad minim veniam, quis nostrud exercitation,
→ullamco\n"
                             "laboris nisi ut aliquip ex ea commodo conseguat. Duis.
→aute irure\n"
                             "dolor in reprehenderit in voluptate velit esse cillum.
→dolore\n"
```

(continues on next page)

(continued from previous page)

```
"eu fugiat nulla pariatur.\n"

"Excepteur sint occaecat cupidatat non proident, sunt in

culpa\n"

"qui officia deserunt mollit anim id est laborum.");

#endif
```

## MicroPython

No examples yet.

### 5.24.7 API

### **Typedefs**

```
typedef uint8_t lv_scrollbar_mode_t
typedef uint8_t lv_page_edge_t
typedef uint8_t lv_part_style_t
```

#### **Enums**

## enum [anonymous]

Scrollbar modes: shows when should the scrollbars be visible

Values:

```
LV SCROLLBAR MODE OFF = 0x0
```

Never show scroll bars

## $LV\_SCROLLBAR\_MODE\_ON = 0x1$

Always show scroll bars

## $LV\_SCROLLBAR\_MODE\_DRAG = 0x2$

Show scroll bars when page is being dragged

## LV SCROLLBAR MODE AUTO = 0x3

Show scroll bars when the scrollable container is large enough to be scrolled

```
\textbf{LV\_SCROLLBAR\_MODE\_HIDE} = 0x4
```

Hide the scroll bar temporally

## LV SCROLLBAR MODE UNHIDE =0x5

Unhide the previously hidden scroll bar. Recover original mode too

#### enum [anonymous]

Edges: describes the four edges of the page

Values:

```
\textbf{LV}\_\textbf{PAGE}\_\textbf{EDGE}\_\textbf{LEFT} = 0x1
```

 $LV_PAGE_EDGE_TOP = 0x2$ 

 $LV_PAGE_EDGE_RIGHT = 0x4$ 

### **Functions**

```
lv\_obj\_t *lv\_page\_create(lv\_obj\_t *par, const lv\_obj\_t *copy)
Create a page objects
```

Return pointer to the created page

### **Parameters**

- par: pointer to an object, it will be the parent of the new page
- copy: pointer to a page object, if not NULL then the new object will be copied from it

```
void lv_page_clean(lv_obj_t *page)
```

Delete all children of the scrl object, without deleting scrl child.

### **Parameters**

• page: pointer to an object

```
lv\_obj\_t *lv\_page\_get\_scrollable(const \ lv\_obj\_t *page)
```

Get the scrollable object of a page

Return pointer to a container which is the scrollable part of the page

### Parameters

• page: pointer to a page object

```
uint16 t lv page get anim time(const lv_obj_t*page)
```

Get the animation time

**Return** the animation time in milliseconds

### **Parameters**

• page: pointer to a page object

```
\label{eq:collbar_mode} \mbox{void $\tt lv\_page\_set\_scrollbar\_mode($\it lv\_obj\_t*page, $\it lv\_scrollbar\_mode\_t$ \it sb\_mode)$} \\
```

Set the scroll bar mode on a page

### **Parameters**

- page: pointer to a page object
- **sb\_mode**: the new mode from 'lv\_page\_sb.mode\_t' enum

```
void lv page set anim time(lv_obj_t*page, uint16 t anim_time)
```

Set the animation time for the page

### **Parameters**

- page: pointer to a page object
- anim\_time: animation time in milliseconds

## void lv\_page\_set\_scroll\_propagation(lv\_obj\_t \*page, bool en)

Enable the scroll propagation feature. If enabled then the page will move its parent if there is no more space to scroll. The page needs to have a page-like parent (e.g. <code>lv\_page</code>, <code>lv\_tabview</code> tab, <code>lv\_win</code> content area etc) If enabled drag direction will be changed <code>LV\_DRAG\_DIR\_ONE</code> automatically to allow scrolling only in one direction at one time.

#### **Parameters**

- page: pointer to a Page
- en: true or false to enable/disable scroll propagation

```
void lv_page_set_edge_flash(lv_obj_t *page, bool en)
```

Enable the edge flash effect. (Show an arc when the an edge is reached)

#### **Parameters**

- page: pointer to a Page
- en: true or false to enable/disable end flash

Set the fit policy in all 4 directions separately. It tell how to change the page size automatically.

#### **Parameters**

- page: pointer to a page object
- left: left fit policy from lv fit t
- right: right fit policy from lv\_fit\_t
- top: bottom fit policy from lv\_fit\_t
- bottom: bottom fit policy from lv fit t

```
static void lv page set scrollable fit2(lv_obj t*page, lv fit t hor, lv fit t ver)
```

Set the fit policy horizontally and vertically separately. It tell how to change the page size automatically.

### **Parameters**

- page: pointer to a page object
- hot: horizontal fit policy from lv\_fit\_t
- ver: vertical fit policy from lv\_fit\_t

```
static void lv_page_set_scrollable_fit(lv_obj_t *page, lv_fit_t fit)
```

Set the fit policy in all 4 direction at once. It tell how to change the page size automatically.

### **Parameters**

- page: pointer to a button object
- fit: fit policy from lv fit t

## static void lv\_page\_set\_scrl\_width(lv\_obj\_t\*page, lv\_coord\_t w)

Set width of the scrollable part of a page

### Parameters

• page: pointer to a page object

• W: the new width of the scrollable (it has no effect is horizontal fit is enabled)

## static void lv\_page\_set\_scrl\_height(lv\_obj\_t \*page, lv\_coord\_t h)

Set height of the scrollable part of a page

#### **Parameters**

- page: pointer to a page object
- h: the new height of the scrollable (it has no effect is vertical fit is enabled)

## **static** void **lv\_page\_set\_scrl\_layout**(*lv\_obj\_t\*page*, *lv\_layout\_t layout*)

Set the layout of the scrollable part of the page

#### **Parameters**

- page: pointer to a page object
- layout: a layout from 'lv\_cont\_layout\_t'

## lv\_scrollbar\_mode\_t lv\_page\_get\_scrollbar\_mode(const lv\_obj\_t \*page)

Set the scroll bar mode on a page

Return the mode from 'lv\_page\_sb.mode\_t' enum

#### **Parameters**

• page: pointer to a page object

## bool $lv_page_get_scroll_propagation(lv_obj_t*page)$

Get the scroll propagation property

Return true or false

#### **Parameters**

• page: pointer to a Page

### bool lv page get edge flash(lv\_obj\_t \*page)

Get the edge flash effect property.

### **Parameters**

• page: pointer to a Page return true or false

## lv\_coord\_t lv\_page\_get\_width\_fit(lv\_obj\_t \*page)

Get that width which can be set to the children to still not cause overflow (show scrollbars)

Return the width which still fits into the page

#### **Parameters**

• page: pointer to a page object

### lv\_coord\_t lv\_page\_get\_height\_fit(lv\_obj\_t \*page)

Get that height which can be set to the children to still not cause overflow (show scrollbars)

Return the height which still fits into the page

#### **Parameters**

• page: pointer to a page object

## lv\_coord\_t lv\_page\_get\_width\_grid(lv\_obj\_t \*page, uint8\_t div, uint8\_t span)

Divide the width of the object and get the width of a given number of columns. Take into account the paddings of the background and scrollable too.

**Return** the width according to the given parameters

#### **Parameters**

- page: pointer to an object
- div: indicates how many columns are assumed. If 1 the width will be set the parent's width If 2 only half parent width inner padding of the parent If 3 only third parent width 2 \* inner padding of the parent
- span: how many columns are combined

## lv\_coord\_t lv\_page\_get\_height\_grid(lv\_obj\_t \*page, uint8\_t div, uint8\_t span)

Divide the height of the object and get the width of a given number of columns. Take into account the paddings of the background and scrollable too.

**Return** the height according to the given parameters

#### **Parameters**

- page: pointer to an object
- div: indicates how many rows are assumed. If 1 the height will be set the the parent's height
   If 2 only half parent height inner padding of the parent If 3 only third parent height 2 \*
   inner padding of the parent
- span: how many rows are combined

## static lv\_coord\_t lv\_page\_get\_scrl\_width(const lv\_obj\_t \*page)

Get width of the scrollable part of a page

**Return** the width of the scrollable

#### **Parameters**

• page: pointer to a page object

## static lv\_coord\_t lv\_page\_get\_scrl\_height(const lv\_obj\_t \*page)

Get height of the scrollable part of a page

Return the height of the scrollable

#### **Parameters**

• page: pointer to a page object

## static lv\_layout\_t lv\_page\_get\_scrl\_layout(const lv\_obj\_t \*page)

Get the layout of the scrollable part of a page

**Return** the layout from 'lv\_cont\_layout\_t'

#### **Parameters**

• page: pointer to page object

### $static\ lv\_fit\_t\ lv\_page\_get\_scrl\_fit\_left(const\ lv\_obj\_t\ *page)$

Get the left fit mode

Return an element of lv\_fit\_t

#### **Parameters**

• page: pointer to a page object

## static lv\_fit\_t lv\_page\_get\_scrl\_fit\_right(const lv\_obj\_t \*page)

Get the right fit mode

Return an element of lv fit t

#### **Parameters**

• page: pointer to a page object

## static lv\_fit\_t lv\_page\_get\_scrl\_fit\_top(const lv\_obj\_t \*page)

Get the top fit mode

Return an element of lv fit t

#### **Parameters**

• page: pointer to a page object

## $\verb|static|| \mathit{lv\_fit\_t}| \ensuremath{ \text{lv\_page\_get\_scrl\_fit\_bottom(const}|| \mathit{lv\_obj\_t}| *page)}|$

Get the bottom fit mode

Return an element of lv\_fit\_t

#### **Parameters**

• page: pointer to a page object

## bool $lv_page_on_edge(lv_obj_t *page, lv_page_edge_t edge)$

Find whether the page has been scrolled to a certain edge.

Return true if the page is on the specified edge

#### **Parameters**

- page: Page object
- edge: Edge to check

## void lv\_page\_glue\_obj (lv\_obj\_t \*obj, bool glue)

Glue the object to the page. After it the page can be moved (dragged) with this object too.

#### **Parameters**

- **obj**: pointer to an object on a page
- glue: true: enable glue, false: disable glue

$$\label{eq:const_lv_obj_t*page_focus(lv_obj_t*page, const_lv_obj_t*obj, lv_anim\_enable\_t anim\_en)} void \ \textbf{lv\_page\_focus(} \ lv\_obj\_t*page, \ \textbf{const}_lv\_obj\_t*obj, lv\_anim\_enable\_t anim\_en)} \\$$

Focus on an object. It ensures that the object will be visible on the page.

#### **Parameters**

- page: pointer to a page object
- **obj**: pointer to an object to focus (must be on the page)
- anim\_en: LV\_ANIM\_ON to focus with animation; LV\_ANIM\_OFF to focus without animation

## void lv\_page\_scroll\_hor(lv\_obj\_t \*page, lv\_coord\_t dist)

Scroll the page horizontally

### **Parameters**

- page: pointer to a page object
- **dist**: the distance to scroll (< 0: scroll left; > 0 scroll right)

### void lv page scroll $ver(lv\_obj\_t*page, lv\_coord\_t\_dist)$

Scroll the page vertically

### Parameters

- page: pointer to a page object
- dist: the distance to scroll (< 0: scroll down; > 0 scroll up)

## void lv\_page\_start\_edge\_flash(lv\_obj\_t \*page, lv\_page\_edge\_t edge)

Not intended to use directly by the user but by other object types internally. Start an edge flash animation.

## **Parameters**

- · page:
- edge: the edge to flash. Can be LV PAGE EDGE LEFT/RIGHT/TOP/BOTTOM

## struct lv\_page\_ext\_t

### **Public Members**

```
lv_cont_ext_t bg
lv\_obj\_t *scrl
lv_style_list_t style
lv_area_t hor_area
lv_area_t ver_area
uint8 t hor draw
uint8_t ver_draw
lv\_scrollbar\_mode\_t mode
struct lv_page_ext_t::[anonymous] scrlbar
lv\_anim\_value\_t state
uint8\_t enabled
uint8_t top_ip
uint8_t bottom_ip
uint8 t right ip
uint8_t left_ip
struct lv_page_ext_t::[anonymous] edge_flash
uint16 t anim time
lv_obj_t *scroll prop obj
uint8_t scroll_prop
```

# 5.25 Roller (lv\_roller)

### 5.25.1 Overview

Roller allows you to simply select one option from more with scrolling.

## 5.25.2 Parts and Styles

The Roller's main part is called LV\_ROLLER\_PART\_BG. It's a rectangle and uses all the typical background properties. The style of the Roller's label is inherited from the *text* style properties of the background. To adjust the space between the options use the *text\_line\_space* style property. The *padding* style properties set the space on the sides.

The selected option in the middle can be referenced with LV\_ROLLER\_PART\_SELECTED virtual part. It also uses all the typical background properties and *text\_color* property to change the color of the options in the selected area.

## 5.25.3 Usage

## **Set options**

The options are passed to the Roller as a string with lv\_roller\_set\_options(roller, options, LV\_ROLLER\_MODE\_NORMAL/INFINITE). The options should be separated by \n. For example: "First\nSecond\nThird".

LV ROLLER MODE INIFINITE make the roller circular.

You can select an option manually with lv\_roller\_set\_selected(roller, id, LV\_ANIM\_ON/OFF), where *id* is the index of an option.

### Get selected option

The get the currently selected option use lv\_roller\_get\_selected(roller) it will return the *index* of the selected option.

lv\_roller\_get\_selected\_str(roller, buf, buf\_size) copy the name of the selected option to buf.

### Align the options

To align the label horizontally use  $lv\_roller\_set\_align(roller, LV\_LABEL\_ALIGN\_LEFT/CENTER/RIGHT)$ .

## Visible rows

The number of visible rows can be adjusted with lv\_roller\_set\_visible\_row\_count(roller, num)

### **Animation time**

When the Roller is scrolled and doesn't stop exactly on an option it will scroll to the nearest valid option automatically. The time of this scroll animation can be changed by <code>lv\_roller\_set\_anim\_time(roller, anim\_time)</code>. Zero animation time means no animation.

## 5.25.4 Events

Besides, the Generic events the following Special events are sent by the Drop down lists:

• LV\_EVENT\_VALUE\_CHANGED sent when a new option is selected

Learn more about *Events*.

## 5.25.5 Keys

The following Keys are processed by the Buttons:

- LV\_KEY\_RIGHT/DOWN Select the next option
- LV\_KEY\_LEFT/UP Select the previous option
- LY\_KEY\_ENTER Apply the selected option (Send LV\_EVENT\_VALUE\_CHANGED event)

## **5.25.6 Example**

C

## Simple Roller



code

```
#include "../../lv_examples.h"
#include <stdio.h>
#if LV_USE_ROLLER

static void event_handler(lv_obj_t * obj, lv_event_t event)
{
    if(event == LV_EVENT_VALUE_CHANGED) {
```

(continues on next page)

(continued from previous page)

```
char buf[32];
        lv_roller_get_selected_str(obj, buf, sizeof(buf));
        printf("Selected month: %s\n", buf);
    }
}
void lv_ex_roller_1(void)
    lv_obj_t *roller1 = lv_roller_create(lv_scr_act(), NULL);
    lv_roller_set_options(roller1,
                         "January\n"
                        "February\n"
                        "March\n"
                         "April\n"
                         "May\n"
                         "June\n"
                         "July\n"
                         "August\n"
                        "September\n"
                        "October\n"
                        "November\n"
                        "December",
                        LV_ROLLER_MODE_INIFINITE);
    lv roller set visible row count(roller1, 4);
    lv_obj_align(roller1, NULL, LV_ALIGN_CENTER, 0, 0);
    lv_obj_set_event_cb(roller1, event_handler);
}
#endif
```

### MicroPython

No examples yet.

## 5.25.7 API

## **Typedefs**

```
typedef uint8_t lv_roller_mode_t
typedef uint8_t lv_roller_part_t
```

### **Enums**

## enum [anonymous]

Roller mode.

Values:

## LV\_ROLLER\_MODE\_NORMAL

Normal mode (roller ends at the end of the options).

## LV\_ROLLER\_MODE\_INIFINITE

Infinite mode (roller can be scrolled forever).

## enum [anonymous]

Values:

```
 \begin{split} \mathbf{LV\_ROLLER\_PART\_BG} &= \mathit{LV\_PAGE\_PART\_BG} \\ \mathbf{LV\_ROLLER\_PART\_SELECTED} &= \mathit{LV\_PAGE\_PART\_VIRTUAL\_LAST} \\ \mathbf{LV\_ROLLER\_PART\_VIRTUAL\_LAST} \\ \end{split}
```

#### **Functions**

```
lv\_obj\_t *lv\_roller\_create(lv\_obj\_t *par, const lv\_obj\_t *copy)
Create a roller object
```

Return pointer to the created roller

### **Parameters**

- par: pointer to an object, it will be the parent of the new roller
- COPY: pointer to a roller object, if not NULL then the new object will be copied from it

```
void lv\_roller\_set\_options(lv\_obj\_t*roller, const char *options, lv\_roller\_mode\_t mode)
Set the options on a roller
```

#### **Parameters**

- roller: pointer to roller object
- options: a string with ' 'separated options. E.g. "One\nTwo\nThree"
- mode: LV ROLLER MODE NORMAL or LV ROLLER MODE INFINITE

# void lv\_roller\_set\_align(lv\_obj\_t \*roller, lv\_label\_align\_t align)

Set the align of the roller's options (left, right or center[default])

## Parameters

- roller: pointer to a roller object
- align: one of lv\_label\_align\_t values (left, right, center)

```
void lv_roller_set_selected(lv_obj_t *roller, uint16_t sel_opt, lv_anim_enable_t anim)
Set the selected option
```

### Parameters

- roller: pointer to a roller object
- **sel\_opt**: id of the selected option (0 ... number of option 1);
- anim: LV ANOM ON: set with animation; LV ANIM OFF set immediately

## void lv\_roller\_set\_visible\_row\_count(lv\_obj\_t \*roller, uint8\_t row\_cnt)

Set the height to show the given number of rows (options)

### Parameters

- roller: pointer to a roller object
- row cnt: number of desired visible rows

## void lv\_roller\_set\_auto\_fit(lv\_obj\_t \*roller, bool auto\_fit)

Allow automatically setting the width of roller according to it's content.

### **Parameters**

- roller: pointer to a roller object
- auto\_fit: true: enable auto fit

## static void lv\_roller\_set\_anim\_time(lv\_obj\_t \*roller, uint16\_t anim\_time)

Set the open/close animation time.

#### **Parameters**

- roller: pointer to a roller object
- anim time: open/close animation time [ms]

## uint16\_t lv\_roller\_get\_selected(const lv\_obj\_t \*roller)

Get the id of the selected option

**Return** id of the selected option (0 ... number of option - 1);

#### **Parameters**

• roller: pointer to a roller object

## uint16\_t lv\_roller\_get\_option\_cnt(const lv\_obj\_t \*roller)

Get the total number of options

**Return** the total number of options in the list

#### **Parameters**

• roller: pointer to a roller object

## void lv\_roller\_get\_selected\_str(const lv\_obj\_t \*roller, char \*buf, uint32\_t buf\_size)

Get the current selected option as a string

### **Parameters**

- roller: pointer to roller object
- buf: pointer to an array to store the string
- buf size: size of buf in bytes. 0: to ignore it.

## lv\_label\_align\_t lv\_roller\_get\_align(const lv\_obj\_t \*roller)

Get the align attribute. Default alignment after \_create is LV\_LABEL\_ALIGN\_CENTER

LV\_LABEL\_ALIGN\_RIGHT

or

#### **Parameters**

• roller: pointer to a roller object

## bool lv\_roller\_get\_auto\_fit(lv\_obj\_t \*roller)

Get whether the auto fit option is enabled or not.

Return true: auto fit is enabled

#### **Parameters**

• roller: pointer to a roller object

## const char \*lv\_roller\_get\_options(const lv\_obj\_t \*roller)

Get the options of a roller

Return the options separated by ''-s (E.g. "Option1\nOption2\nOption3")

#### **Parameters**

• roller: pointer to roller object

```
static uint16_t lv_roller_get_anim_time(const lv_obj_t *roller)
```

Get the open/close animation time.

**Return** open/close animation time [ms]

#### **Parameters**

• roller: pointer to a roller

## struct lv\_roller\_ext\_t

#### **Public Members**

```
lv_page_ext_t page
lv_style_list_t style_sel
uint16_t option_cnt
uint16_t sel_opt_id
uint16_t sel_opt_id_ori
lv_roller_mode_t mode
uint8_t auto_fit
```

# 5.26 Slider (lv\_slider)

### 5.26.1 Overview

The Slider object looks like a *Bar* supplemented with a knob. The knob can be dragged to set a value. The Slider also can be vertical or horizontal.

## 5.26.2 Parts and Styles

The Slider's main part is called LV SLIDER PART BG and it uses the typical background style properties.

LV\_SLIDER\_PART\_INDIC is a virtual part which also uses all the typical background properties. By default, the indicator maximal size is the same as the background's size but setting positive padding values in LV\_SLIDER\_PART\_BG will make the indicator smaller. (negative values will make it larger) If the *value* style property is used on the indicator the alignment will be calculated based on the current size of the indicator. For example a center aligned value is always shown in the middle of the indicator regardless it's current size.

LV\_SLIDER\_PART\_KNOB is a virtual part using all the typical background properties to describe the knob(s). Similarly to the *indicator* the *value* text is also aligned to the current position and size of the knob. By default the knob is square (with a radius) with side length equal to the smaller side of the slider. The knob can be made larger with the *padding* values. Padding values can be asymmetric too.

## 5.26.3 Usage

### Value and range

To set an initial value use lv\_slider\_set\_value(slider, new\_value, LV\_ANIM\_ON/OFF). lv\_slider\_set\_anim\_time(slider, anim\_time) sets the animation time in milliseconds.

To specify the range (min, max values) the  $lv\_slider\_set\_range(slider, min, max)$  can be used.

### Symmetrical and Range

Besides the normal type the Slider can be configured in two additional types:

- LV\_SLIDER\_TYPE\_NORMAL normal type
- LV\_SLIDER\_TYPE\_SYMMETRICAL draw the indicator symmetrical to zero (drawn from zero, left to right)
- LV\_SLIDER\_TYPE\_RANGE allow the use of an additional knob for the left (start) value. (Can be used with lv\_slider\_set/get\_left\_value())

The type can be changed with lv slider set type(slider, LV SLIDER TYPE ...)

### 5.26.4 Events

Besides the Generic events the following Special events are sent by the Slider:

• LV\_EVENT\_VALUE\_CHANGED Sent while the slider is being dragged or changed with keys. The event is sent continuously while the slider is dragged and only when it is released. Use lv\_slider\_is\_dragged to decide whether is slider is being dragged or just released.

## 5.26.5 Keys


- LV\_KEY\_UP, LV\_KEY\_RIGHT Increment the slider's value by 1
- LV\_KEY\_DOWN, LV\_KEY\_LEFT Decrement the slider's value by 1

Learn more about Keys.

## **5.26.6 Example**

C

## Slider with custo mstyle

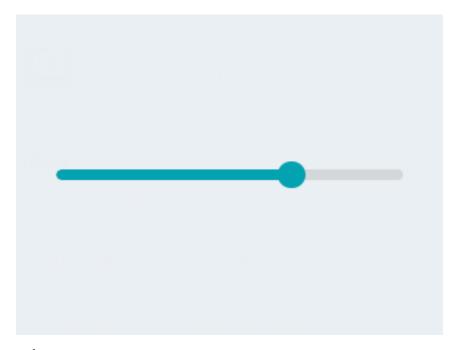

code

```
#include "../../lv_examples.h"
#include <stdio.h>
#if LV_USE_SLIDER

static void event_handler(lv_obj_t * obj, lv_event_t event)
{
    if(event == LV_EVENT_VALUE_CHANGED) {
        printf("Value: %d\n", lv_slider_get_value(obj));
    }
}

void lv_ex_slider_l(void)
{
    /*Create a slider*/
    lv_obj_t * slider = lv_slider_create(lv_scr_act(), NULL);
    lv_obj_align(slider, NULL, LV_ALIGN_CENTER, 0, 0);
    lv_obj_set_event_cb(slider, event_handler);
}

#endif
```

#### Set value with slider



code

```
#include "../../lv_examples.h"
#include <stdio.h>
#if LV USE SLIDER
static void slider_event_cb(lv_obj_t * slider, lv_event_t event);
static lv_obj_t * slider_label;
void lv ex slider 2(void)
    /* Create a slider in the center of the display */
    lv obj t * slider = lv slider create(lv scr act(), NULL);
    lv_obj_set_width(slider, LV_DPI * 2);
   lv_obj_align(slider, NULL, LV_ALIGN_CENTER, 0, 0);
   lv_obj_set_event_cb(slider, slider_event_cb);
   lv slider set range(slider, 0, 100);
   /* Create a label below the slider */
   slider label = lv label create(lv scr act(), NULL);
   lv_label_set_text(slider_label, "0");
    lv obj set auto realign(slider label, true);
    lv obj align(slider label, slider, LV ALIGN OUT BOTTOM MID, 0, 10);
   /* Create an informative label */
    lv_obj_t * info = lv_label_create(lv_scr_act(), NULL);
    lv_label_set_text(info, "Welcome to the slider+label demo!\n"
                            "Move the slider and see that the label\n"
                            "updates to match it.");
    lv obj align(info, NULL, LV ALIGN IN TOP LEFT, 10, 10);
}
static void slider event cb(lv obj t * slider, lv event t event)
```

(continues on next page)

(continued from previous page)

```
if(event == LV_EVENT_VALUE_CHANGED) {
    static char buf[4]; /* max 3 bytes for number plus 1 null terminating byte */
    snprintf(buf, 4, "%u", lv_slider_get_value(slider));
    lv_label_set_text(slider_label, buf);
}
#endif
#endif
```

## MicroPython

No examples yet.

## 5.26.7 API

### **Typedefs**

```
typedef uint8_t lv_slider_type_t
```

#### **Enums**

```
enum [anonymous]
Values:

LV_SLIDER_TYPE_NORMAL

LV_SLIDER_TYPE_SYMMETRICAL

LV_SLIDER_TYPE_RANGE

enum [anonymous]

Built-in styles of slider

Values:

LV_SLIDER_PART_BG

LV_SLIDER_PART_INDIC

Slider background style.

LV_SLIDER_PART_KNOB
```

### **Functions**

```
lv_obj_t *lv_slider_create(lv_obj_t *par, const lv_obj_t *copy)
```

Create a slider objects

 ${\bf Return}\,$  pointer to the created slider

Slider indicator (filled area) style.

### **Parameters**

- par: pointer to an object, it will be the parent of the new slider
- copy: pointer to a slider object, if not NULL then the new object will be copied from it

## static void lv slider set value(lv\_obj\_t\*slider, int16 t value, lv\_anim\_enable\_t anim)

Set a new value on the slider

#### **Parameters**

- slider: pointer to a slider object
- value: new value
- anim: LV\_ANIM\_ON: set the value with an animation; LV\_ANIM\_OFF: change the value immediately

#### 

Set a new value for the left knob of a slider

#### **Parameters**

- slider: pointer to a slider object
- left\_value: new value
- anim: LV\_ANIM\_ON: set the value with an animation; LV\_ANIM\_OFF: change the value immediately

## **static** void **lv\_slider\_set\_range**(lv\_obj\_t \*slider, int16\_t min, int16\_t max)

Set minimum and the maximum values of a bar

### **Parameters**

- slider: pointer to the slider object
- min: minimum value
- max: maximum value

## **static** void **lv\_slider\_set\_anim\_time**(lv\_obj\_t \*slider, uint16\_t anim\_time)

Set the animation time of the slider

#### **Parameters**

- slider: pointer to a bar object
- anim time: the animation time in milliseconds.

## static void lv\_slider\_set\_type(lv\_obj\_t\*slider, lv\_slider\_type\_t type)

Make the slider symmetric to zero. The indicator will grow from zero instead of the minimum position.

### **Parameters**

- slider: pointer to a slider object
- en: true: enable disable symmetric behavior; false: disable

## int16 t lv slider get value(const lv\_obj\_t\*slider)

Get the value of the main knob of a slider

**Return** the value of the main knob of the slider

### **Parameters**

• slider: pointer to a slider object

## static int16\_t lv\_slider\_get\_left\_value(const lv\_obj\_t \*slider)

Get the value of the left knob of a slider

**Return** the value of the left knob of the slider

#### **Parameters**

• slider: pointer to a slider object

## static int16\_t lv\_slider\_get\_min\_value(const lv\_obj\_t \*slider)

Get the minimum value of a slider

Return the minimum value of the slider

#### **Parameters**

• slider: pointer to a slider object

## static int16\_t lv\_slider\_get\_max\_value(const lv\_obj\_t \*slider)

Get the maximum value of a slider

Return the maximum value of the slider

#### **Parameters**

• slider: pointer to a slider object

## bool lv\_slider\_is\_dragged(const lv\_obj\_t \*slider)

Give the slider is being dragged or not

Return true: drag in progress false: not dragged

#### **Parameters**

• slider: pointer to a slider object

## static uint16\_t lv\_slider\_get\_anim\_time(lv\_obj\_t \*slider)

Get the animation time of the slider

**Return** the animation time in milliseconds.

#### **Parameters**

• slider: pointer to a slider object

## static lv\_slider\_type\_t lv\_slider\_get\_type(lv\_obj\_t \*slider)

Get whether the slider is symmetric or not.

Return true: symmetric is enabled; false: disable

## **Parameters**

• slider: pointer to a bar object

## struct lv\_slider\_ext\_t

### **Public Members**

```
lv_bar_ext_t bar
lv_style_list_t style_knob
lv_area_t left_knob_area
lv_area_t right_knob_area
int16_t *value_to_set
uint8 t dragging
```

# 5.27 Spinbox (Iv\_spinbox)

### **5.27.1** Overview

The Spinbox contains a number as text which can be increased or decreased by *Keys* or API functions. Under the hood the Spinbox is a modified *Text area*.

## 5.27.2 Parts and Styles

The Spinbox's main part is called LV\_SPINBOX\_PART\_BG which is a rectangle-like background using all the typical background style properties. It also describes the style of the label with its *text* style properties.

LV\_SPINBOX\_PART\_CURSOR is a virtual part describing the cursor. Read the *Text area* documentation for a detailed description.

#### Set format

lv\_spinbox\_set\_digit\_format(spinbox, digit\_count, separator\_position) set the format of the number. digit\_count sets the number of digits. Leading zeros are added to fill the space on
the left. separator\_position sets the number of digit before the decimal point. 0 means no decimal
point.

lv\_spinbox\_set\_padding\_left(spinbox, cnt) add cnt "space" characters between the sign an
the most left digit.

### Value and ranges

lv spinbox set range(spinbox, min, max) sets the range of the Spinbox.

lv spinbox set value(spinbox, num) sets the Spinbox's value manually.

lv\_spinbox\_increment(spinbox) and lv\_spinbox\_decrement(spinbox) increments/decrements the value of the Spinbox.

lv\_spinbox\_set\_step(spinbox, step) sets the amount to increment decrement.

### **5.27.3** Events

Besides the Generic events the following Special events are sent by the Drop down lists:

- LV\_EVENT\_VALUE\_CHANGED sent when the value has changed. (the value is set as event data as int32 t)
- LV\_EVENT\_INSERT sent by the ancestor Text area but shouldn't be used.

Learn more about *Events*.

## 5.27.4 Keys

The following *Keys* are processed by the Buttons:


• LV\_KEY\_LEFT/RIGHT With Keypad move the cursor left/right. With Encoder decrement/increment the selected digit.

- LY\_KEY\_ENTER Apply the selected option (Send LV\_EVENT\_VALUE\_CHANGED event and close the Drop down list)
- LV\_KEY\_ENTER With Encoder got the net digit. Jump to the first after the last.

## **5.27.5** Example

C

## Simple Spinbox

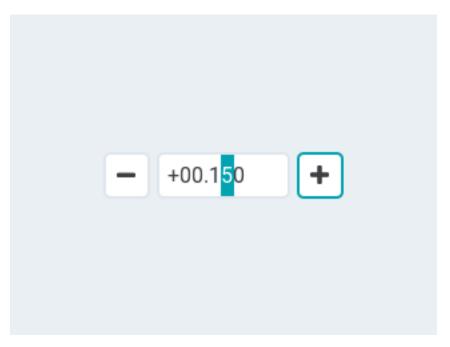

code

```
#include "../../lv_examples.h"
#include <stdio.h>
#if LV_USE_SPINBOX

static void lv_spinbox_increment_event_cb(lv_obj_t * btn, lv_event_t e)
{
    if(e == LV_EVENT_SHORT_CLICKED || e == LV_EVENT_LONG_PRESSED_REPEAT) {
        lv_spinbox_increment(spinbox);
    }
}

static void lv_spinbox_decrement_event_cb(lv_obj_t * btn, lv_event_t e)
{
    if(e == LV_EVENT_SHORT_CLICKED || e == LV_EVENT_LONG_PRESSED_REPEAT) {
        lv_spinbox_decrement(spinbox);
    }
}
```

(continues on next page)

(continued from previous page)

```
void lv_ex_spinbox_1(void)
    spinbox = lv spinbox create(lv scr act(), NULL);
    lv_spinbox_set_range(spinbox, -1000, 90000);
    lv_spinbox_set_digit_format(spinbox, 5, 2);
    lv_spinbox_step_prev(spinbox);
    lv_obj_set_width(spinbox, 100);
   lv obj align(spinbox, NULL, LV ALIGN CENTER, 0, 0);
   lv coord t h = lv obj get height(spinbox);
    lv obj t * btn = lv btn create(lv scr act(), NULL);
    lv_obj_set_size(btn, h, h);
    lv obj align(btn, spinbox, LV ALIGN OUT RIGHT MID, 5, 0);
    lv_theme_apply(btn, LV_THEME_SPINBOX_BTN);
    lv_obj_set_style_local_value_str(btn, LV_BTN_PART_MAIN, LV_STATE_DEFAULT, LV_
→SYMBOL PLUS);
    lv_obj_set_event_cb(btn, lv_spinbox_increment_event_cb);
    btn = lv_btn_create(lv_scr_act(), btn);
    lv_obj_align(btn, spinbox, LV_ALIGN_OUT_LEFT_MID, -5, 0);
    lv_obj_set_event_cb(btn, lv_spinbox_decrement_event_cb);
    lv_obj_set_style_local_value_str(btn, LV_BTN_PART_MAIN, LV_STATE_DEFAULT, LV_
→SYMBOL MINUS);
#endif
```

### **MicroPython**

No examples yet.

## 5.27.6 API

### **Typedefs**

```
typedef uint8 tlv spinbox part t
```

#### **Enums**

#### **Functions**

```
lv\_obj\_t *lv\_spinbox\_create(lv\_obj\_t *par, const lv\_obj\_t *copy)
```

Create a spinbox objects

Return pointer to the created spinbox

#### **Parameters**

- par: pointer to an object, it will be the parent of the new spinbox
- copy: pointer to a spinbox object, if not NULL then the new object will be copied from it

```
void lv_spinbox_set_rollover(lv_obj_t *spinbox, bool b)
```

Set spinbox rollover function

#### **Parameters**

- spinbox: pointer to spinbox
- b: true or false to enable or disable (default)

```
void lv_spinbox_set_value(lv_obj_t *spinbox, int32_t i)
```

Set spinbox value

#### **Parameters**

- spinbox: pointer to spinbox
- i: value to be set

```
void lv_spinbox_set_digit_format(lv_obj_t *spinbox, uint8_t digit_count, uint8_t separator_position)
```

Set spinbox digit format (digit count and decimal format)

### **Parameters**

- spinbox: pointer to spinbox
- digit count: number of digit excluding the decimal separator and the sign
- separator\_position: number of digit before the decimal point. If 0, decimal point is not shown

```
{\tt void} \ \textbf{lv\_spinbox\_set\_step(} \textit{lv\_obj\_t*spinbox}, \ {\tt uint32\_t} \ \textit{step)}
```

Set spinbox step

### **Parameters**

- spinbox: pointer to spinbox
- step: steps on increment/decrement

```
void lv_spinbox_set_range(lv_obj_t *spinbox, int32_t range_min, int32_t range_max)
Set spinbox value range
```

### **Parameters**

- spinbox: pointer to spinbox
- range\_min: maximum value, inclusive
- range max: minimum value, inclusive

## void lv\_spinbox\_set\_padding\_left(lv\_obj\_t \*spinbox, uint8\_t padding)

Set spinbox left padding in digits count (added between sign and first digit)

## Parameters

- spinbox: pointer to spinbox
- cb: Callback function called on value change event

## bool lv\_spinbox\_get\_rollover(lv\_obj\_t \*spinbox)

Get spinbox rollover function status

#### **Parameters**

• spinbox: pointer to spinbox

## int32\_t lv\_spinbox\_get\_value(lv\_obj\_t \*spinbox)

Get the spinbox numeral value (user has to convert to float according to its digit format)

Return value integer value of the spinbox

#### **Parameters**

• spinbox: pointer to spinbox

## void lv\_spinbox\_step\_next(lv\_obj\_t \*spinbox)

Select next lower digit for edition by dividing the step by 10

#### **Parameters**

• **spinbox**: pointer to spinbox

## void lv\_spinbox\_step\_prev(lv\_obj\_t \*spinbox)

Select next higher digit for edition by multiplying the step by 10

#### **Parameters**

• spinbox: pointer to spinbox

## void lv\_spinbox\_increment(lv\_obj\_t \*spinbox)

Increment spinbox value by one step

### **Parameters**

• spinbox: pointer to spinbox

## void lv spinbox decrement(lv\_obj\_t \*spinbox)

Decrement spinbox value by one step

### **Parameters**

• spinbox: pointer to spinbox

## struct lv\_spinbox\_ext\_t

### **Public Members**

```
lv_textarea_ext_t ta
int32_t value
int32_t range_max
int32_t range_min
int32_t step
uint8_t rollover
uint16_t digit_count
uint16_t dec_point_pos
```

## uint16\_t digit\_padding\_left

## **5.27.7 Example**

# 5.28 Spinner (lv\_spinner)

### 5.28.1 Overview

The Spinner object is a spinning arc over a border.

## 5.28.2 Parts and Styles

The Spinner uses the following parts:

- LV\_SPINNER\_PART\_BG: main part

The parts and style works the same as in case of Arc. Read its documentation for a details description.

## 5.28.3 Usage

### Arc length

The length of the arc can be adjusted by lv spinner set arc length(spinner, deg).

## Spinning speed

The speed of the spinning can be adjusted by lv\_spinner\_set\_spin\_time(preload, time\_ms).

### Spin types

You can choose from more spin types:

- LV\_SPINNER\_TYPE\_SPINNING\_ARC spin the arc, slow down on the top
- LV\_SPINNER\_TYPE\_FILLSPIN\_ARC spin the arc, slow down on the top but also stretch the arc
- LV\_SPINNER\_TYPE\_CONSTANT\_ARC spin the arc at a constant speed

To apply one if them use lv spinner set type(preload, LV SPINNER TYPE ...)

### Spin direction

The direction of spinning can be changed with lv\_spinner\_set\_dir(preload, LV\_SPINNER\_DIR\_FORWARD/BACKWARD).

### 5.28.4 Events

Only the Generic events are sent by the object type.

# 5.28.5 Keys


No Keys are processed by the object type.

Learn more about Keys.

## **5.28.6 Example**

C

## Simple spinner

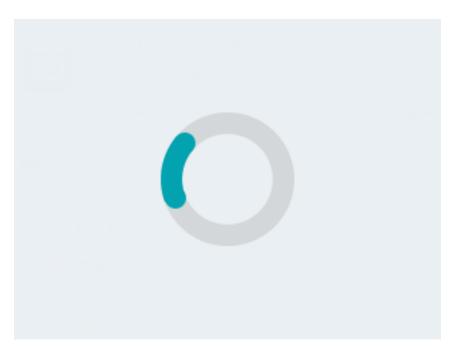

code

```
#include "../../lv_examples.h"
#if LV_USE_SPINNER

void lv_ex_spinner_1(void)
{
    /*Create a Preloader object*/
    lv_obj_t * preload = lv_spinner_create(lv_scr_act(), NULL);
    lv_obj_set_size(preload, 100, 100);
    lv_obj_align(preload, NULL, LV_ALIGN_CENTER, 0, 0);
}
#endif
```

## MicroPython

## MicroPython

No examples yet.

## 5.28.7 API

```
Typedefs
```

```
typedef uint8_t lv_spinner_type_t
typedef uint8_t lv_spinner_dir_t
typedef uint8_t lv_spinner_style_t
```

### **Enums**

### enum [anonymous]

Type of spinner.

Values:

LV\_SPINNER\_TYPE\_SPINNING\_ARC
LV\_SPINNER\_TYPE\_FILLSPIN\_ARC
LV\_SPINNER\_TYPE\_CONSTANT\_ARC

## enum [anonymous]

Direction the spinner should spin.

Values:

LV\_SPINNER\_DIR\_FORWARD
LV\_SPINNER\_DIR\_BACKWARD

## enum [anonymous]

Values:

```
 \begin{split} \mathbf{LV\_SPINNER\_PART\_BG} &= \mathit{LV\_ARC\_PART\_BG} \\ \mathbf{LV\_SPINNER\_PART\_INDIC} &= \mathit{LV\_ARC\_PART\_INDIC} \\ \mathbf{\_LV\_SPINNER\_PART\_VIRTUAL\_LAST} \\ \mathbf{\_LV\_SPINNER\_PART\_REAL\_LAST} &= \mathit{LV\_ARC\_PART\_REAL\_LAST} \end{split}
```

## **Functions**

```
\mathit{lv\_obj\_t} * \texttt{lv\_spinner\_create} (\mathit{lv\_obj\_t} * \mathit{par}, \, \texttt{const} \, \mathit{lv\_obj\_t} * \mathit{copy})
```

Create a spinner object

Return pointer to the created spinner

### **Parameters**

- par: pointer to an object, it will be the parent of the new spinner
- copy: pointer to a spinner object, if not NULL then the new object will be copied from it

```
void lv_spinner_set_arc_length(lv_obj_t *spinner, lv_anim_value_t deg)
```

Set the length of the spinning arc in degrees

#### **Parameters**

- spinner: pointer to a spinner object
- deg: length of the arc

## void lv spinner set spin time(lv\_obj\_t\*spinner, uint16 t time)

Set the spin time of the arc

#### **Parameters**

- spinner: pointer to a spinner object
- time: time of one round in milliseconds

## void lv\_spinner\_set\_type(lv\_obj\_t \*spinner, lv\_spinner\_type\_t type)

Set the animation type of a spinner.

#### **Parameters**

- spinner: pointer to spinner object
- type: animation type of the spinner

## void lv\_spinner\_set\_dir(lv\_obj\_t \*spinner, lv\_spinner\_dir\_t dir)

Set the animation direction of a spinner

#### **Parameters**

- spinner: pointer to spinner object
- direction: animation direction of the spinner

## lv\_anim\_value\_t lv\_spinner\_get\_arc\_length(const lv\_obj\_t \*spinner)

Get the arc length [degree] of the a spinner

#### **Parameters**

• spinner: pointer to a spinner object

## uint16\_t lv\_spinner\_get\_spin\_time(const lv\_obj\_t \*spinner)

Get the spin time of the arc

#### **Parameters**

• spinner: pointer to a spinner object [milliseconds]

## lv spinner type t lv spinner get type(lv obj t\*spinner)

Get the animation type of a spinner.

Return animation type

### **Parameters**

• spinner: pointer to spinner object

## lv\_spinner\_dir\_t lv\_spinner\_get\_dir(lv\_obj\_t \*spinner)

Get the animation direction of a spinner

Return animation direction

### **Parameters**

• spinner: pointer to spinner object

## void lv\_spinner\_anim\_cb(void \*ptr, lv\_anim\_value\_t val)

Animator function (exec cb) to rotate the arc of spinner.

### Parameters

- ptr: pointer to spinner
- val: the current desired value [0..360]

## struct lv\_spinner\_ext\_t

#### **Public Members**

```
lv_arc_ext_t arc
lv_anim_value_t arc_length
uint16_t time
lv_spinner_type_t anim_type
lv_spinner_dir_t anim_dir
```

# 5.29 Switch (lv\_switch)

### 5.29.1 Overview

The Switch can be used to turn on/off something. It looks like a little slider.

## 5.29.2 Parts and Styles

The Switch uses the the following parts:

- LV\_SWITCH\_PART\_BG: main part
- LV SWITCH PART INDIC: the indicator (virtual part)
- LV\_SWITCH\_PART\_KNOB: the knob (virtual part)

The parts and style works the same as in case of Slider. Read its documentation for a details description. ## Usage

### Change state

The state of the Switch can be changed by clicking on it or by  $lv\_switch\_on(switch, LV\_ANIM\_ON/OFF)$ ,  $lv\_switch\_off(switch, LV\_ANIM\_ON/OFF)$  or  $lv\_switch\_toggle(switch, LV\_ANOM\_ON/OFF)$  functions

#### **Animation time**

The time of animations, when the switch changes state, can be adjusted with lv\_switch\_set\_anim\_time(switch, anim\_time).

## 5.29.3 Events

Besides the Generic events the following Special events are sent by the Switch:

• LV\_EVENT\_VALUE\_CHANGED Sent when the switch changes state.

## 5.29.4 Keys


- LV\_KEY\_UP, LV\_KEY\_RIGHT Turn on the slider
- LV\_KEY\_DOWN, LV\_KEY\_LEFT Turn off the slider

Learn more about Keys.

## **5.29.5** Example

C

## Simple Switch

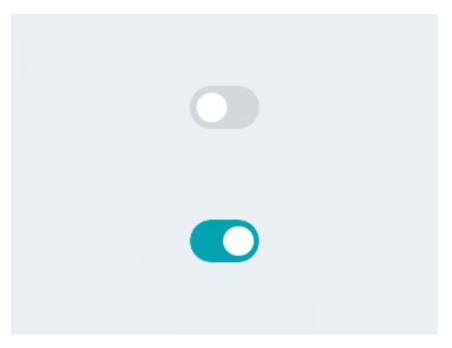

code

```
#include "../../lv_examples.h"
#include <stdio.h>
#if LV_USE_SWITCH

static void event_handler(lv_obj_t * obj, lv_event_t event)
{
    if(event == LV_EVENT_VALUE_CHANGED) {
        printf("State: %s\n", lv_switch_get_state(obj) ? "On" : "Off");
    }
}

void lv_ex_switch_1(void)
{
    /*Create a switch and apply the styles*/
    lv_obj_t *swl = lv_switch_create(lv_scr_act(), NULL);
    lv_obj_align(swl, NULL, LV_ALIGN_CENTER, 0, -50);
    lv_obj_set_event_cb(swl, event_handler);
```

(continues on next page)

(continued from previous page)

```
/*Copy the first switch and turn it ON*/
lv_obj_t *sw2 = lv_switch_create(lv_scr_act(), sw1);
lv_switch_on(sw2, LV_ANIM_ON);
lv_obj_align(sw2, NULL, LV_ALIGN_CENTER, 0, 50);
}
#endif
```

## MicroPython

No examples yet.

### 5.29.6 API

### **Typedefs**

```
typedef uint8_t lv_switch_part_t
```

#### **Enums**

## enum [anonymous]

Switch parts.

Values:

```
LV_SWITCH_PART_BG = LV_BAR_PART_BG
```

Switch background.

 $\begin{array}{l} \textbf{LV\_SWITCH\_PART\_INDIC} = LV\_BAR\_PART\_INDIC \\ \text{Switch fill area.} \end{array}$ 

 $\textbf{LV SWITCH\_PART\_KNOB} = \_LV\_BAR\_PART\_VIRTUAL\_LAST$ 

Switch knob.
\_LV\_SWITCH\_PART\_VIRTUAL\_LAST

## **Functions**

```
lv\_obj\_t *lv\_switch\_create(lv\_obj\_t *par, const lv\_obj\_t *copy)
```

Create a switch objects

Return pointer to the created switch

## **Parameters**

- par: pointer to an object, it will be the parent of the new switch
- copy: pointer to a switch object, if not NULL then the new object will be copied from it

```
void lv_switch_on(lv_obj_t *sw, lv_anim_enable_t anim)
```

Turn ON the switch

### Parameters

• SW: pointer to a switch object

• anim: LV\_ANIM\_ON: set the value with an animation; LV\_ANIM\_OFF: change the value immediately

```
void lv_switch_off(lv_obj_t *sw, lv_anim_enable_t anim)
```

Turn OFF the switch

#### **Parameters**

- SW: pointer to a switch object
- anim: LV\_ANIM\_ON: set the value with an animation; LV\_ANIM\_OFF: change the value immediately

```
bool lv\_switch\_toggle(lv\_obj\_t *sw, lv\_anim\_enable\_t anim)
```

Toggle the position of the switch

Return resulting state of the switch.

#### **Parameters**

- SW: pointer to a switch object
- anim: LV\_ANIM\_ON: set the value with an animation; LV\_ANIM\_OFF: change the value immediately

## static void lv\_switch\_set\_anim\_time(lv\_obj\_t\*sw, uint16\_t anim\_time)

Set the animation time of the switch

Return style pointer to a style

#### **Parameters**

- SW: pointer to a switch object
- anim time: animation time

## static bool lv\_switch\_get\_state(const lv\_obj\_t \*sw)

Get the state of a switch

Return false: OFF; true: ON

### **Parameters**

• SW: pointer to a switch object

## static uint16\_t lv\_switch\_get\_anim\_time(const lv\_obj\_t \*sw)

Get the animation time of the switch

Return style pointer to a style

#### **Parameters**

• SW: pointer to a switch object

## struct lv\_switch\_ext\_t

### **Public Members**

```
lv_bar_ext_t bar
lv_style_list_t style_knob
uint8_t state
```

# 5.30 Table (lv\_table)

# 5.30.1 Overview

Tables, as usual, are built from rows, columns, and cells containing texts.

The Table object is very light weighted because only the texts are stored. No real objects are created for cells but they are just drawn on the fly.

# 5.30.2 Parts and Styles

The main part of the Table is called LV\_TABLE\_PART\_BG. It's a rectangle like background and uses all the typical background style properties.

For the cells there are 4 virtual parts. Every cell has type (1, 2, 3 or 4) which tells which part's styles to apply on them. The cell parts are:

- LV\_TABLE\_PART\_CELL1
- LV\_TABLE\_PART\_CELL2
- LV\_TABLE\_PART\_CELL3
- LV\_TABLE\_PART\_CELL4

The cells also use all the typical background style properties. If there is a line break ( $\n$ ) in a cell's content then a horizontal division line will drawn after the line break using the *line* style properties.

The style of texts in the cells are inherited from the cell parts or the background part.

# 5.30.3 Usage

#### **Rows and Columns**

To set number of rows and columns use lv\_table\_set\_row\_cnt(table, row\_cnt) and lv table set col cnt(table, col cnt)

## Width and Height

The width of the columns can be set with lv\_table\_set\_col\_width(table, col\_id, width). The overall width of the Table object will be set to the sum of columns widths.

The height is calculated automatically from the cell styles (font, padding etc) and the number of rows.

#### Set cell value

The cells can store only texts so numbers needs to be converted to text before displaying them in a table.

lv\_table\_set\_cell\_value(table, row, col, "Content"). The text is saved by the table so it
can be even a local variable.

Line break can be used in the text like "Value $\n0.3$ ".

#### Align

The text alignment in cells can be adjusted individually with lv\_table\_set\_cell\_align(table, row, col, LV\_LABEL\_ALIGN\_LEFT/CENTER/RIGHT).

# Cell type

You can use 4 different cell types. Each has its own style.

Cell types can be used to add different style for example to:

- table header
- first column
- highlight a cell
- etc

The type can be selected with lv\_table\_set\_cell\_type(table, row, col, type) type can be 1, 2, 3 or 4.

# Merge cells

Cells can be merged horizontally with lv\_table\_set\_cell\_merge\_right(table, col, row, true). To merge more adjacent cells apply this function for each cell.

## Crop text

By default, the texts are word-wrapped to fit into the width of the cell and the height of the cell is set automatically. To disable this and keep the text as it is enable <code>lv\_table\_set\_cell\_crop(table, row, col, true)</code>.

#### Scroll

The make the Table scrollable place it on a Page

# 5.30.4 Events

Only the Generic events are sent by the object type.

Learn more about *Events*.

# 5.30.5 Keys

No *Keys* are processed by the object type.

Learn more about Keys.

# **5.30.6 Example**

C

#### Simple table



code

```
#include "../../lv_examples.h"
#if LV_USE_TABLE
void lv_ex_table_1(void)
    lv obj t * table = lv table create(lv scr act(), NULL);
    lv_table_set_col_cnt(table, 2);
    lv table set row cnt(table, 4);
    lv_obj_align(table, NULL, LV_ALIGN_CENTER, 0, 0);
   /*Make the cells of the first row center aligned */
   lv_table_set_cell_align(table, 0, 0, LV_LABEL_ALIGN_CENTER);
    lv_table_set_cell_align(table, 0, 1, LV_LABEL_ALIGN_CENTER);
    /*Align the price values to the right in the 2nd column*/
   lv_table_set_cell_align(table, 1, 1, LV_LABEL_ALIGN_RIGHT);
   lv_table_set_cell_align(table, 2, 1, LV_LABEL_ALIGN_RIGHT);
   lv_table_set_cell_align(table, 3, 1, LV_LABEL_ALIGN_RIGHT);
   lv_table_set_cell_type(table, 0, 0, 2);
   lv_table_set_cell_type(table, 0, 1, 2);
   /*Fill the first column*/
   lv_table_set_cell_value(table, 0, 0, "Name");
   lv_table_set_cell_value(table, 1, 0, "Apple");
    lv_table_set_cell_value(table, 2, 0, "Banana");
```

```
lv_table_set_cell_value(table, 3, 0, "Citron");

/*Fill the second column*/
lv_table_set_cell_value(table, 0, 1, "Price");
lv_table_set_cell_value(table, 1, 1, "$7");
lv_table_set_cell_value(table, 2, 1, "$4");
lv_table_set_cell_value(table, 3, 1, "$6");
}
#endif
```

# MicroPython

No examples yet.

# MicroPython

No examples yet.

# 5.30.7 API

#### **Enums**

```
enum [anonymous]
Values:

LV_TABLE_PART_BG

LV_TABLE_PART_CELL1

LV_TABLE_PART_CELL2

LV_TABLE_PART_CELL3

LV_TABLE_PART_CELL4
```

# **Functions**

```
lv\_obj\_t *lv\_table\_create(lv\_obj\_t *par, const lv\_obj\_t *copy)
Create a table object
```

Return pointer to the created table

#### **Parameters**

- par: pointer to an object, it will be the parent of the new table
- copy: pointer to a table object, if not NULL then the new object will be copied from it

```
void lv_table_set_cell_value( lv_obj_t *table, uint16_t row, uint16_t col, const char *txt) Set the value of a cell.
```

#### **Parameters**

• table: pointer to a Table object

- **row**: id of the row [0 .. row\_cnt -1]
- **col**: id of the column [0 .. col\_cnt -1]
- txt: text to display in the cell. It will be copied and saved so this variable is not required after this function call.

## void lv\_table\_set\_row\_cnt(lv\_obj\_t \*table, uint16\_t row\_cnt)

Set the number of rows

#### **Parameters**

- table: table pointer to a Table object
- row cnt: number of rows

## void lv table set col cnt(lv\_obj\_t\*table, uint16 t col\_cnt)

Set the number of columns

#### **Parameters**

- table: table pointer to a Table object
- col\_cnt: number of columns. Must be < LV\_TABLE\_COL\_MAX

# void lv\_table\_set\_col\_width(lv\_obj\_t \*table, uint16\_t col\_id, lv\_coord\_t w)

Set the width of a column

#### **Parameters**

- table: table pointer to a Table object
- col id: id of the column [0 .. LV\_TABLE\_COL\_MAX -1]
- W: width of the column

# void $lv\_table\_set\_cell\_align(lv\_obj\_t *table, uint16\_t row, uint16\_t col, lv\_label\_align\_t align)$

Set the text align in a cell

#### **Parameters**

- table: pointer to a Table object
- **row**: id of the row [0 .. row\_cnt -1]
- col: id of the column [0 .. col cnt -1]
- align: LV\_LABEL\_ALIGN\_LEFT or LV\_LABEL\_ALIGN\_CENTER of LV LABEL ALIGN RIGHT

# void **lv\_table\_set\_cell\_type**(lv\_obj\_t \*table, uint16\_t row, uint16\_t col, uint8\_t type) Set the type of a cell.

#### **Parameters**

- table: pointer to a Table object
- row: id of the row [0 .. row\_cnt -1]
- col: id of the column [0 .. col\_cnt -1]
- type: 1,2,3 or 4. The cell style will be chosen accordingly.

# $\label{local_void_local} \begin{picture}(t) void $lv\_table\_set\_cell\_crop(\end{picture} \begin{picture}(t) void $lv\_table\_crop(\end{picture} \$

Set the cell crop. (Don't adjust the height of the cell according to its content)

#### Parameters

- table: pointer to a Table object
- **row**: id of the row [0 .. row\_cnt -1]
- col: id of the column [0 .. col\_cnt -1]
- Crop: true: crop the cell content; false: set the cell height to the content.

void **lv\_table\_set\_cell\_merge\_right**( $lv\_obj\_t *table$ , uint16\_t row, uint16\_t col, bool en) Merge a cell with the right neighbor. The value of the cell to the right won't be displayed.

#### **Parameters**

- table: table pointer to a Table object
- row: id of the row [0 .. row cnt -1]
- col: id of the column [0 .. col cnt -1]
- en: true: merge right; false: don't merge right

const char \*lv\_table\_get\_cell\_value(lv\_obj\_t \*table, uint16\_t row, uint16\_t col)
Get the value of a cell.

Return text in the cell

#### **Parameters**

- table: pointer to a Table object
- **row**: id of the row [0 .. row\_cnt -1]
- col: id of the column [0 .. col cnt -1]

uint16\_t lv\_table\_get\_row\_cnt(lv\_obj\_t \*table)

Get the number of rows.

Return number of rows.

#### **Parameters**

• table: table pointer to a Table object

uint16 t lv table get col cnt(lv obj t \*table)

Get the number of columns.

Return number of columns.

#### **Parameters**

• table: table pointer to a Table object

lv coord t lv table get col width(lv\_obj\_t\*table, uint16 t col\_id)

Get the width of a column

Return width of the column

#### **Parameters**

- table: table pointer to a Table object
- col id: id of the column [0 .. LV TABLE COL MAX -1]

lv\_label\_align\_t lv\_table\_get\_cell\_align(lv\_obj\_t \*table, uint16\_t row, uint16\_t col)
Get the text align of a cell

**Return** LV\_LABEL\_ALIGN\_LEFT (default in case of error) or LV\_LABEL\_ALIGN\_CENTER or LV LABEL ALIGN RIGHT

#### **Parameters**

- table: pointer to a Table object
- row: id of the row [0 .. row\_cnt -1]
- col: id of the column [0 .. col\_cnt -1]

# 

**Return** 1,2,3 or 4

#### **Parameters**

- table: pointer to a Table object
- row: id of the row [0 .. row cnt -1]
- col: id of the column [0 .. col\_cnt -1]

# lv\_label\_align\_t lv\_table\_get\_cell\_crop(lv\_obj\_t \*table, uint16\_t row, uint16\_t col) Get the crop property of a cell

Return true: text crop enabled; false: disabled

#### **Parameters**

- table: pointer to a Table object
- **row**: id of the row [0 .. row\_cnt -1]
- col: id of the column [0 .. col\_cnt -1]

# bool $lv\_table\_get\_cell\_merge\_right(lv\_obj\_t*table, uint16\_t row, uint16\_t col)$ Get the cell merge attribute.

Return true: merge right; false: don't merge right

#### **Parameters**

- table: table pointer to a Table object
- **row**: id of the row [0 .. row\_cnt -1]
- **col**: id of the column [0 .. col\_cnt -1]

# lv\_res\_t lv\_table\_get\_pressed\_cell(lv\_obj\_t \*table, uint16\_t \*row, uint16\_t \*col) Get the last pressed or being pressed cell

Return LV\_RES\_OK: a valid pressed cell was found, LV\_RES\_INV: no valid cell is pressed

#### **Parameters**

- table: pointer to a table object
- row: pointer to variable to store the pressed row
- col: pointer to variable to store the pressed column

# union lv\_table\_cell\_format\_t

#include <lv\_table.h> Internal table cell format structure.

Use the lv\_table APIs instead.

#### **Public Members**

```
uint8_t align
uint8_t right_merge
uint8_t type
uint8_t crop
struct lv_table_cell_format_t::[anonymous] s
uint8_t format_byte
struct lv_table_ext_t
```

#### **Public Members**

```
uint16_t col_cnt
uint16_t row_cnt
char **cell_data
lv_coord_t *row_h
lv_style_list_t cell_style[LV_TABLE_CELL_STYLE_CNT]
lv_coord_t col_w[LV_TABLE_COL_MAX]
uint8_t cell_types
```

# 5.31 Tabview (lv\_tabview)

# 5.31.1 Overview

The Tab view object can be used to organize content in tabs.

# 5.31.2 Parts and Styles

The Tab view object has several parts. The main is LV\_TABVIEW\_PART\_BG. It a rectangle-like container which holds the other parts of the Tab view.

On the background 2 important real parts are created:

- LV\_TABVIEW\_PART\_BG\_SCRL: it's the scrollable part of *Page*. It holds the content of the tabs next to each other. The background of the Page is always transparent and can't be accessed externally.
- LV\_TABVIEW\_PART\_TAB\_BG: The tab buttons which is a *Button matrix*. Clicking on a button will scroll LV\_TABVIEW\_PART\_BG\_SCRL to the related tab's content. The tab buttons can be accessed via LV\_TABVIEW\_PART\_TAB\_BTN. The height of the tab's button matrix is calculated from the font height plus padding of the background's and the button's style.

All the listed parts supports the typical background style properties and padding.

LV\_TABVIEW\_PART\_TAB\_BG has an additional real part, an indicator, called LV\_TABVIEW\_PART\_INDIC. It's a thin rectangle-like object under the currently selected tab. When the tab view is animated to an other tab the indicator will be animated too. It can be styles using the typical background style properties. The *size* style property will set the its thickness.

When a new tab is added a *Page* is create for them on LV\_TABVIEW\_PART\_BG\_SCRL and a new button is added to LV\_TABVIEW\_PART\_TAB\_BG Button matrix. The created Pages can be used as normal Pages and they have the usual Page parts.

# 5.31.3 Usage

#### Adding tab

New tabs can be added with lv\_tabview\_add\_tab(tabview, "Tab name"). It will return with a pointer to a *Page* object where the tab's content can be created.

#### Change tab

To select a new tab you can:

- Click on it on the Button matrix part
- Slide
- Use lv tabview set tab act(tabview, id, LV ANIM ON/OFF) function

#### Tab button's position

By default, the tab selector buttons are placed on the top of the Tab view. It can be changed with lv\_tabview\_set\_btns\_pos(tabview, LV\_TABVIEW\_TAB\_POS\_TOP/BOTTOM/LEFT/RIGHT/NONE)

LV\_TABVIEW\_TAB\_POS\_NONE will hide the tabs.

Note that, you can't change the tab position from top or bottom to left or right when tabs are already added.

#### **Animation time**

The animation time is adjusted by <code>lv\_tabview\_set\_anim\_time(tabview, anim\_time\_ms)</code>. It is used when the new tab is loaded.

## Scroll propagation

As the tabs' content object is a Page it can receive scroll propagation from an other Page-like object. For example, if a text area is created on the tab's content and that Text area is scrolled but it reached the end the scroll can be propagated to the content Page. It can be enabled with lv\_page/textarea set scroll propagation(obj, true).

By default the tab's content Pages have enabled scroll propagation, therefore when they are scrolled horizontally the scroll is propagated to LV\_TABVIEW\_PART\_BG\_SCRL and this way the Pages will be scrolled.

The manual sliding can be disabled with lv\_page\_set\_scroll\_propagation(tab\_page, false).

# **5.31.4 Events**

Besides the Generic events the following Special events are sent by the Slider:

• LV\_EVENT\_VALUE\_CHANGED Sent when a new tab is selected by sliding or clicking the tab button

Learn more about *Events*.

# 5.31.5 Keys

The following Keys are processed by the Tabview:

- LV\_KEY\_RIGHT/LEFT Select a tab
- LV\_KEY\_ENTER Change to the selected tab

Learn more about Keys.

# **5.31.6 Example**

C

Simple Tabview

Tab1 Tab2 Tab3

# This the first tab

If the content of a tab become too long the it automatically become scrollable.

code

```
#include "../../lv_examples.h"
#if LV_USE_TABVIEW

void lv_ex_tabview_1(void)
{
    /*Create a Tab view object*/
```

```
lv_obj_t *tabview;
    tabview = lv_tabview_create(lv_scr_act(), NULL);
    /*Add 3 tabs (the tabs are page (lv_page) and can be scrolled*/
    lv_obj_t *tab1 = lv_tabview_add_tab(tabview, "Tab 1");
lv_obj_t *tab2 = lv_tabview_add_tab(tabview, "Tab 2");
lv_obj_t *tab3 = lv_tabview_add_tab(tabview, "Tab 3");
    /*Add content to the tabs*/
    lv_obj_t * label = lv_label_create(tab1, NULL);
    lv_label_set_text(label, "This the first tab\n\n"
                                   "If the content\n"
                                   "of a tab\n"
                                   "become too long\n"
                                   "the it \n"
                                   "automatically\n"
                                   "become\n"
                                   "scrollable.");
    label = lv_label_create(tab2, NULL);
    lv_label_set_text(label, "Second tab");
    label = lv_label_create(tab3, NULL);
    lv label set text(label, "Third tab");
#endif
```

# MicroPython

No examples yet.

# 5.31.7 API

# **Typedefs**

```
typedef uint8_t lv_tabview_btns_pos_t
typedef uint8_t lv_tabview_part_t
```

#### Enums

# **enum** [anonymous]

Position of tabview buttons.

Values:

```
LV_TABVIEW_TAB_POS_NONE
LV_TABVIEW_TAB_POS_TOP
LV_TABVIEW_TAB_POS_BOTTOM
LV_TABVIEW_TAB_POS_LEFT
```

# LV\_TABVIEW\_TAB\_POS\_RIGHT enum [anonymous] Values: LV\_TABVIEW\_PART\_BG = LV\_OBJ\_PART\_MAIN \_LV\_TABVIEW\_PART\_VIRTUAL\_LAST = \_LV\_OBJ\_PART\_VIRTUAL\_LAST LV\_TABVIEW\_PART\_BG\_SCRLLABLE = \_LV\_OBJ\_PART\_REAL\_LAST LV\_TABVIEW\_PART\_TAB\_BG LV\_TABVIEW\_PART\_TAB\_BTN LV\_TABVIEW\_PART\_INDIC

#### **Functions**

```
lv\_obj\_t *lv\_tabview\_create(lv\_obj\_t *par, const lv\_obj\_t *copy)
Create a Tab view object
```

3

 ${\bf Return}\,$  pointer to the created tab

LV TABVIEW PART REAL LAST

#### **Parameters**

- par: pointer to an object, it will be the parent of the new tab
- copy: pointer to a tab object, if not NULL then the new object will be copied from it

```
lv\_obj\_t *lv_tabview_add_tab(lv\_obj\_t *tabview, const char *name)
```

Add a new tab with the given name

Return pointer to the created page object (lv\_page). You can create your content here

#### **Parameters**

- tabview: pointer to Tab view object where to ass the new tab
- name: the text on the tab button

```
void lv_tabview_clean_tab(lv_obj_t *tab)
```

Delete all children of a tab created by lv\_tabview\_add\_tab.

#### **Parameters**

• tab: pointer to a tab

```
void lv_tabview_set_tab_act( lv_obj_t *tabview, uint16_t id, lv_anim_enable_t anim)
Set a new tab
```

#### **Parameters**

- tabview: pointer to Tab view object
- id: index of a tab to load
- anim: LV\_ANIM\_ON: set the value with an animation; LV\_ANIM\_OFF: change the value immediately

```
void lv_tabview_set_anim_time(lv_obj_t *tabview, uint16_t anim_time)
```

Set the animation time of tab view when a new tab is loaded

#### **Parameters**

- tabview: pointer to Tab view object
- anim time: time of animation in milliseconds

# void lv tabview set btns pos(lv\_obj\_t\*tabview, lv\_tabview\_btns\_pos\_t btns\_pos)

Set the position of tab select buttons

#### **Parameters**

- tabview: pointer to a tab view object
- btns pos: which button position

# uint16\_t lv\_tabview\_get\_tab\_act(const lv\_obj\_t \*tabview)

Get the index of the currently active tab

Return the active tab index

#### **Parameters**

• tabview: pointer to Tab view object

# uint16\_t lv\_tabview\_get\_tab\_count(const lv\_obj\_t \*tabview)

Get the number of tabs

Return tab count

#### **Parameters**

• tabview: pointer to Tab view object

# lv\_obj\_t \*lv\_tabview\_get\_tab(const lv\_obj\_t \*tabview, uint16\_t id)

Get the page (content area) of a tab

Return pointer to page (lv\_page) object

# Parameters

- tabview: pointer to Tab view object
- id: index of the tab (>=0)

# uint16\_t lv\_tabview\_get\_anim\_time(const lv\_obj\_t \*tabview)

Get the animation time of tab view when a new tab is loaded

**Return** time of animation in milliseconds

#### **Parameters**

• tabview: pointer to Tab view object

#### lv tabview btns pos tlv tabview get btns pos(const lv obj t\*tabview)

Get position of tab select buttons

#### **Parameters**

• tabview: pointer to a ab view object

# struct lv tabview ext t

#### **Public Members**

```
lv obj t*btns
```

lv obj t \*indic

 $lv\_obj\_t$  \*content

```
const char **tab_name_ptr
lv_point_t point_last
uint16_t tab_cur
uint16_t tab_cnt
uint16_t anim_time
lv tabview btns pos t btns pos
```

# 5.32 Text area (lv\_textarea)

# 5.32.1 Overview

The Text Area is a *Page* with a *Label* and a cursor on it. Texts or characters can be added to it. Long lines are wrapped and when the text becomes long enough the Text area can be scrolled.

# 5.32.2 Parts and Styles

The Text area has the same parts as *Page*. Expect LV\_PAGE\_PART\_SCRL because it can't be referenced and it's always transparent. Refer the Page's documentation of details.

Besides the Page parts the virtual LV\_TEXTAREA\_PART\_CURSOR part exists to draw the cursor. The cursor's area is always the bounding box of the current character. A block cursor can be created by adding a background color and background opa to LV\_TEXTAREA\_PART\_CURSOR's style. The create line cursor let the cursor transparent and set the *border\_side* property.

#### 5.32.3 Usage

#### Add text

You can insert text or characters to the current cursor's position with:

- lv textarea add char(textarea, 'c')
- lv textarea add text(textarea, "insert this text")

To add wide characters like 'a', 'B' or CJK characters use lv textarea add text(ta, "a").

lv\_textarea\_set\_text(ta, "New text") changes the whole text.

# Placeholder

A placeholder text can be specified - which is displayed when the Text area is empty - with  $lv\_textarea\_set\_placeholder\_text(ta, "Placeholder text")$ 

#### Delete character

To delete character from the left. of the current cursor position use lv textarea del char(textarea). To delete from the right use lv textarea del char forward(textarea)

#### Move the cursor

The cursor position can be modified directly with  $lv\_textarea\_set\_cursor\_pos(textarea, 10)$ . The 0 position means "before the first characters",  $LV\_TA\_CURSOR\_LAST$  means "after the last character"

You can step the cursor with

- lv\_textarea\_cursor\_right(textarea)
- lv\_textarea\_cursor\_left(textarea)
- lv\_textarea\_cursor\_up(textarea)
- lv textarea cursor down(textarea)

If lv\_textarea\_set\_cursor\_click\_pos(textarea, true) is called the cursor will jump to the position where the Text area was clicked.

#### Hide the cursor

The cursor can be hidden with lv textarea set cursor hidden(textarea, true).

#### Cursor blink time

The blink time of the cursor can be adjusted with lv\_textarea\_set\_cursor\_blink\_time(textarea, time ms).

#### One line mode

The Text area can be configures to be one lined with lv\_ta\_set\_one\_line(ta, true). In this mode the height is set automatically to show only one line, line break character are ignored, and word wrap is disabled.

#### Password mode

The text area supports password mode which can be enabled with lv textarea set pwd mode(textarea, true).

If the • (Bullet, U+2022) character exists in the font, the entered characters are converted to it after some time or when a new character is entered. If • not exists, \* will be used.

In password mode lv\_textarea\_get\_text(textarea) gives the real text, not the bullet characters.

The visibility time can be adjusted with lv\_textarea\_set\_pwd\_show\_time(textarea, time\_ms).

# Text align

The text can be aligned to the left, center or right with lv\_textarea\_set\_text\_align(textarea, LV LABEL ALIGN LET/CENTER/RIGHT).

In one line mode, the text can be scrolled horizontally only if the text is left aligned.

#### **Accepted characters**

You can set a list of accepted characters with lv\_textarae\_set\_accepted\_chars(ta, "0123456789.+-"). Other characters will be ignored.

#### Max text length

The maximum number of characters can be limited with lv\_textarea\_set\_max\_length(textarea, max char num)

#### Very long texts

If there is a very long text in the Text area (e. g. > 20k characters) its scrolling and drawing might be slow. However, by enabling LV\_LABEL\_LONG\_TXT\_HINT 1 in  $lv\_conf.h$  it can be hugely improved. It will save some info about the label to speed up its drawing. Using LV\_LABEL\_LONG\_TXT\_HINT the scrolling and drawing will as fast as with "normal" short texts.

#### Select text

A part of text can be selected if enabled with lv\_textarea\_set\_text\_sel(textarea, true). It works like when you select a text on your PC with your mouse.

#### **Scrollbars**

The scrollbars can shown according to different policies set by lv\_textarea\_set\_sb\_mode(textarea, LV\_SCRLBAR\_MODE\_...). Learn more at the *Page* object.

#### Scroll propagation

When the Text area is scrolled on an other scrollable object (like a Page) and the scrolling has reached the edge of the Text area, the scrolling can be propagated to the parent. In other words, when the Text area can be scrolled further, the parent will be scrolled instead.

It can be enabled with lv ta set scroll propagation(ta, true).

Learn more at the *Page* object.

#### Edge flash

When the Text area is scrolled to edge a circle like flash animation can be shown if it is enabled with lv\_ta\_set\_edge\_flash(ta, true)

#### 5.32.4 Events

Besides the Generic events the following Special events are sent by the Slider:

• LV\_EVENT\_INSERT Sent when a character before a character is inserted. The evnet data is the text planned to insert. lv\_ta\_set\_insert\_replace(ta, "New text") replaces the text to insert. The new text can't be in a local variable which is destroyed when the event callback exists. "" means do not insert anything.

• LV\_EVENT\_VALUE\_CHANGED When the content of the text area has been changed.

# 5.32.5 Keys


- LV\_KEY\_UP/DOWN/LEFT/RIGHT Move the cursor
- Any character Add the character to the current cursor position

Learn more about Keys.

# **5.32.6 Example**

C

Simple Text area

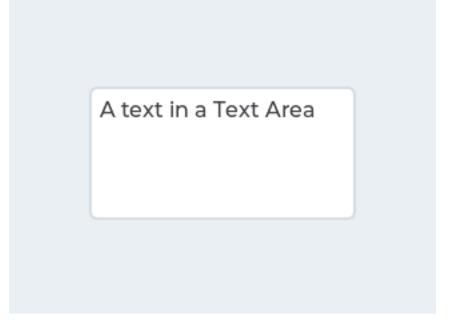

code

```
#include "../../lv_examples.h"
#include <stdio.h>
#if LV_USE_TEXTAREA


lv_obj_t * tal;

static void event_handler(lv_obj_t * obj, lv_event_t event)
{
    if(event == LV_EVENT_VALUE_CHANGED) {
        printf("Value: %s\n", lv_textarea_get_text(obj));
    }
    else if(event == LV_EVENT_LONG_PRESSED_REPEAT) {
        /*For simple test: Long press the Text are to add the text below*/
        const char * txt = "\n\nYou can scroll it if the text is long enough.\n";
```

```
static uint16_t i = 0;
    if(txt[i] != '\0') {
        lv_textarea_add_char(ta1, txt[i]);
        i++;
    }
}

void lv_ex_textarea_1(void)
{
    ta1 = lv_textarea_create(lv_scr_act(), NULL);
    lv_obj_set_size(ta1, 200, 100);
    lv_obj_align(ta1, NULL, LV_ALIGN_CENTER, 0, 0);
    lv_textarea_set_text(ta1, "A text in a Text Area");    /*Set an initial text*/
    lv_obj_set_event_cb(ta1, event_handler);
}
#endif
```

#### Text are with password field

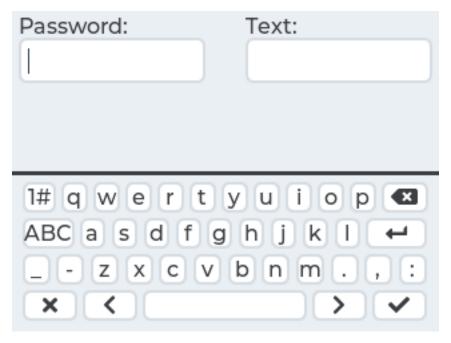

code

```
#include "../../lv_examples.h"
#include <stdio.h>
#if LV_USE_TEXTAREA && LV_USE_KEYBOARD

static void kb_event_cb(lv_obj_t * event_kb, lv_event_t event);
static void ta_event_cb(lv_obj_t * ta, lv_event_t event);

static lv_obj_t * kb;
```

```
void lv_ex_textarea_2(void)
    /* Create the password box */
   lv_obj_t * pwd_ta = lv_textarea_create(lv_scr_act(), NULL);
    lv_textarea_set_text(pwd_ta, "");
    lv_textarea_set_pwd_mode(pwd_ta, true);
    lv_textarea_set_one_line(pwd_ta, true);
    lv_obj_set_width(pwd_ta, LV_HOR_RES / 2 - 20);
    lv_obj_set_pos(pwd_ta, 5, 20);
    lv_obj_set_event_cb(pwd_ta, ta_event_cb);
   /* Create a label and position it above the text box */
   lv obj t * pwd label = lv label create(lv scr act(), NULL);
    lv label set text(pwd label, "Password:");
    lv_obj_align(pwd_label, pwd_ta, LV_ALIGN_OUT_TOP_LEFT, 0, 0);
   /* Create the one-line mode text area */
   lv obj t * oneline ta = lv textarea create(lv scr act(), pwd ta);
    lv textarea_set_pwd_mode(oneline_ta, false);
    lv obj align(oneline ta, NULL, LV ALIGN IN TOP RIGHT, -5, 20);
   /* Create a label and position it above the text box */
   lv obj t * oneline label = lv label create(lv scr act(), NULL);
    lv_label_set_text(oneline_label, "Text:");
    lv obj align(oneline label, oneline ta, LV ALIGN OUT TOP LEFT, 0, 0);
   /* Create a keyboard and make it fill the width of the above text areas */
    kb = lv keyboard_create(lv_scr_act(), NULL);
    lv_obj_set_event_cb(kb, kb_event_cb); /* Setting a custom event handler stops the...
→ keyboard from closing automatically */
    lv obj set size(kb, LV HOR RES, LV VER RES / 2);
    lv keyboard set textarea(kb, pwd ta); /* Focus it on one of the text areas to,
→start */
    lv_keyboard_set_cursor_manage(kb, true); /* Automatically show/hide cursors on_
→text areas */
static void kb_event_cb(lv_obj_t * event_kb, lv_event_t event)
    /* Just call the regular event handler */
    lv_keyboard_def_event_cb(event_kb, event);
static void ta_event_cb(lv_obj_t * ta, lv_event_t event)
    if(event == LV EVENT CLICKED) {
        /* Focus on the clicked text area */
        if(kb != NULL)
            lv_keyboard_set_textarea(kb, ta);
    }
   else if(event == LV EVENT INSERT) {
        const char * str = lv event get data();
        if(str[0] == '\n') {
            printf("Ready\n");
```

```
}
}
#endif
```

# MicroPython

No examples yet.

## 5.32.7 API

# **Typedefs**

```
typedef uint8_t lv_textarea_style_t
```

#### **Enums**

# enum [anonymous]

Possible text areas styles.

Values:

 $\begin{tabular}{ll} \textbf{LV\_TEXTAREA\_PART\_CURSOR} &= \_LV\_PAGE\_PART\_VIRTUAL\_LAST\\ &\text{Cursor style} \end{tabular}$ 

LV\_TEXTAREA\_PART\_PLACEHOLDER

Placeholder style

```
_LV_TEXTAREA_PART_VIRTUAL_LAST
```

 ${\tt \_LV\_TEXTAREA\_PART\_REAL\_LAST} = {\tt \_LV\_PAGE\_PART\_REAL\_LAST}$ 

#### **Functions**

```
LV_EXPORT_CONST_INT(LV_TEXTAREA_CURSOR_LAST)
```

```
lv\_obj\_t *lv\_textarea\_create(lv\_obj\_t *par, const lv\_obj\_t *copy)
```

Create a text area objects

Return pointer to the created text area

# Parameters

- par: pointer to an object, it will be the parent of the new text area
- COPY: pointer to a text area object, if not NULL then the new object will be copied from it

# void lv\_textarea\_add\_char(lv\_obj\_t \*ta, uint32\_t c)

Insert a character to the current cursor position. To add a wide char, e.g. 'Á' use 'lv\_txt\_encoded\_conv\_wc('Á')'

#### **Parameters**

- ta: pointer to a text area object
- C: a character (e.g. 'a')

# void lv\_textarea\_add\_text(lv\_obj\_t \*ta, const char \*txt)

Insert a text to the current cursor position

#### **Parameters**

- ta: pointer to a text area object
- txt: a '\0' terminated string to insert

# void lv textarea del char(lv\_obj\_t\*ta)

Delete a the left character from the current cursor position

#### **Parameters**

• ta: pointer to a text area object

# void lv\_textarea\_del\_char\_forward(lv\_obj\_t \*ta)

Delete the right character from the current cursor position

#### **Parameters**

• ta: pointer to a text area object

# void lv\_textarea\_set\_text(lv\_obj\_t \*ta, const char \*txt)

Set the text of a text area

#### **Parameters**

- ta: pointer to a text area
- txt: pointer to the text

# void lv\_textarea\_set\_placeholder\_text(lv\_obj\_t \*ta, const char \*txt)

Set the placeholder text of a text area

#### **Parameters**

- ta: pointer to a text area
- txt: pointer to the text

#### void lv textarea set cursor pos(lv obj t\*ta, int32 t pos)

Set the cursor position

#### Parameters

- obj: pointer to a text area object
- pos: the new cursor position in character index < 0 : index from the end of the text LV TEXTAREA CURSOR LAST: go after the last character

# void lv\_textarea\_set\_cursor\_hidden(lv\_obj\_t \*ta, bool hide)

Hide/Unhide the cursor.

# Parameters

• ta: pointer to a text area object

• hide: true: hide the cursor

# void lv\_textarea\_set\_cursor\_click\_pos(lv\_obj\_t\*ta, bool en)

Enable/Disable the positioning of the the cursor by clicking the text on the text area.

#### **Parameters**

- ta: pointer to a text area object
- en: true: enable click positions; false: disable

# void lv\_textarea\_set\_pwd\_mode(lv\_obj\_t \*ta, bool en)

Enable/Disable password mode

#### **Parameters**

- ta: pointer to a text area object
- en: true: enable, false: disable

# void lv\_textarea\_set\_one\_line(lv\_obj\_t \*ta, bool en)

Configure the text area to one line or back to normal

#### **Parameters**

- ta: pointer to a Text area object
- en: true: one line, false: normal

# void lv textarea set text align(lv obj t\*ta, lv label align t align)

Set the alignment of the text area. In one line mode the text can be scrolled only with LV\_LABEL\_ALIGN\_LEFT. This function should be called if the size of text area changes.

#### **Parameters**

- ta: pointer to a text are object
- align: the desired alignment from lv\_label\_align\_t. (LV LABEL ALIGN LEFT/CENTER/RIGHT)

# void lv\_textarea\_set\_accepted\_chars(lv\_obj\_t \*ta, const char \*list)

Set a list of characters. Only these characters will be accepted by the text area

#### **Parameters**

- ta: pointer to Text Area
- list: list of characters. Only the pointer is saved. E.g. "+-.,0123456789"

# void lv\_textarea\_set\_max\_length(lv\_obj\_t\*ta, uint32\_t num)

Set max length of a Text Area.

#### **Parameters**

- ta: pointer to Text Area
- num: the maximal number of characters can be added (lv\_textarea\_set\_text ignores it)

# void lv textarea set insert replace(lv obj t \*ta, const char \*txt)

In LV\_EVENT\_INSERT the text which planned to be inserted can be replaced by an other text. It can be used to add automatic formatting to the text area.

# **Parameters**

• ta: pointer to a text area.

• txt: pointer to a new string to insert. If "" no text will be added. The variable must be live after the event cb exists. (Should be global or static)

# static void lv\_textarea\_set\_sscrollbar\_mode(lv\_obj\_t\*ta, lv\_scrollbar\_mode\_t mode)

Set the scroll bar mode of a text area

#### **Parameters**

- ta: pointer to a text area object
- sb mode: the new mode from 'lv scrollbar mode t' enum

# static void lv\_textarea\_set\_scroll\_propagation(lv\_obj\_t \*ta, bool en)

Enable the scroll propagation feature. If enabled then the Text area will move its parent if there is no more space to scroll.

#### **Parameters**

- ta: pointer to a Text area
- en: true or false to enable/disable scroll propagation

# **static** void **lv\_textarea\_set\_edge\_flash(** *lv\_obj\_t* \* *ta*, bool *en***)**

Enable the edge flash effect. (Show an arc when the an edge is reached)

#### **Parameters**

- page: pointer to a Text Area
- en: true or false to enable/disable end flash

# void lv\_textarea\_set\_text\_sel(lv\_obj\_t \*ta, bool en)

Enable/disable selection mode.

# **Parameters**

- ta: pointer to a text area object
- en: true or false to enable/disable selection mode

# void lv\_textarea\_set\_pwd\_show\_time(lv\_obj\_t\*ta, uint16\_t time)

Set how long show the password before changing it to '\*'

#### **Parameters**

- ta: pointer to Text area
- time: show time in milliseconds. 0: hide immediately.

# void lv\_textarea\_set\_cursor\_blink\_time(lv\_obj\_t \*ta, uint16\_t time)

Set cursor blink animation time

#### **Parameters**

- ta: pointer to Text area
- time: blink period. 0: disable blinking

# const char \*lv textarea get text(const lv\_obj\_t \*ta)

Get the text of a text area. In password mode it gives the real text (not '\*'s).

**Return** pointer to the text

# **Parameters**

• ta: pointer to a text area object

# const char \*lv\_textarea\_get\_placeholder\_text(lv\_obj\_t \*ta)

Get the placeholder text of a text area

**Return** pointer to the text

#### **Parameters**

• ta: pointer to a text area object

# lv\_obj\_t \*lv\_textarea\_get\_label(const lv\_obj\_t \*ta)

Get the label of a text area

Return pointer to the label object

#### **Parameters**

• ta: pointer to a text area object

# uint32\_t lv\_textarea\_get\_cursor\_pos(const $lv\_obj\_t *ta$ )

Get the current cursor position in character index

Return the cursor position

#### **Parameters**

• ta: pointer to a text area object

# bool lv\_textarea\_get\_cursor\_hidden(const lv\_obj\_t \*ta)

Get whether the cursor is hidden or not

**Return** true: the cursor is hidden

#### **Parameters**

• ta: pointer to a text area object

# bool lv textarea get cursor click pos(lv\_obj\_t\*ta)

Get whether the cursor click positioning is enabled or not.

Return true: enable click positions; false: disable

#### **Parameters**

• ta: pointer to a text area object

# bool $lv_textarea_get_pwd_mode(const <math>lv_obj_t*ta)$

Get the password mode attribute

Return true: password mode is enabled, false: disabled

#### **Parameters**

• ta: pointer to a text area object

# bool $lv\_textarea\_get\_one\_line(const lv\_obj\_t *ta)$

Get the one line configuration attribute

Return true: one line configuration is enabled, false: disabled

#### **Parameters**

• ta: pointer to a text area object

## const char \*lv\_textarea\_get\_accepted\_chars(lv\_obj\_t \*ta)

Get a list of accepted characters.

Return list of accented characters.

#### **Parameters**

• ta: pointer to Text Area

# uint32\_t lv\_textarea\_get\_max\_length(lv\_obj\_t\*ta)

Get max length of a Text Area.

Return the maximal number of characters to be add

#### **Parameters**

• ta: pointer to Text Area

# static lv\_scrollbar\_mode\_t lv\_textarea\_get\_scrollbar\_mode(const lv\_obj\_t \*ta)

Get the scroll bar mode of a text area

Return scrollbar mode from 'lv scrollbar mode t' enum

#### **Parameters**

• ta: pointer to a text area object

# static bool lv\_textarea\_get\_scroll\_propagation(lv\_obj\_t \*ta)

Get the scroll propagation property

Return true or false

#### **Parameters**

• ta: pointer to a Text area

# static bool lv\_textarea\_get\_edge\_flash(lv\_obj\_t \*ta)

Get the scroll propagation property

**Return** true or false

#### **Parameters**

• ta: pointer to a Text area

# bool lv textarea text is selected(const lv\_obj\_t\*ta)

Find whether text is selected or not.

Return whether text is selected or not

#### **Parameters**

• ta: Text area object

# bool lv\_textarea\_get\_text\_sel\_en(lv\_obj\_t \*ta)

Find whether selection mode is enabled.

Return true: selection mode is enabled, false: disabled

#### **Parameters**

• ta: pointer to a text area object

## uint16 t lv textarea get pwd show time(lv\_obj\_t\*ta)

Set how long show the password before changing it to '\*'

**Return** show time in milliseconds. 0: hide immediately.

#### **Parameters**

• ta: pointer to Text area

# uint16\_t lv\_textarea\_get\_cursor\_blink\_time(lv\_obj\_t \*ta)

Set cursor blink animation time

**Return** time blink period. 0: disable blinking

#### **Parameters**

• ta: pointer to Text area

# void lv\_textarea\_clear\_selection(lv\_obj\_t \*ta)

Clear the selection on the text area.

#### **Parameters**

• ta: Text area object

# void lv\_textarea\_cursor\_right(lv\_obj\_t \*ta)

Move the cursor one character right

#### **Parameters**

• ta: pointer to a text area object

# void lv\_textarea\_cursor\_left(lv\_obj\_t \*ta)

Move the cursor one character left

#### **Parameters**

• ta: pointer to a text area object

# void lv\_textarea\_cursor\_down(lv\_obj\_t \*ta)

Move the cursor one line down

#### **Parameters**

• ta: pointer to a text area object

# void lv\_textarea\_cursor\_up(lv\_obj\_t\*ta)

Move the cursor one line up

#### Parameters

• ta: pointer to a text area object

# struct lv\_textarea\_ext\_t

# **Public Members**

```
lv_page_ext_t page
lv_obj_t *label
char *placeholder_txt
lv_style_list_t style_placeholder
char *pwd_tmp
const char *accapted_chars
uint32_t max_length
uint16_t pwd_show_time
lv_style_list_t style
lv_coord_t valid_x
uint32_t pos
uint16_t blink_time
```

lv\_area\_t area

```
uint32_t txt_byte_pos
uint8_t state
uint8_t hidden
uint8_t click_pos
struct lv_textarea_ext_t::[anonymous] cursor
uint32_t sel_start
uint32_t sel_end
uint8_t text_sel_in_prog
uint8_t text_sel_en
uint8_t pwd_mode
uint8_t one line
```

# 5.33 Tile view (lv\_tileview)

#### 5.33.1 Overview

The Tileview is a container object where its elements (called *tiles*) can be arranged in a grid form. By swiping the user can navigate between the tiles.

If the Tileview is screen sized it gives a user interface you might have seen on the smartwatches.

# 5.33.2 Parts and Styles

The Tileview has the same parts as *Page*. Expect LV\_PAGE\_PART\_SCRL because it can't be referenced and it's always transparent. Refer the Page's documentation of details.

# 5.33.3 Usage

#### Valid positions

The tiles don't have to form a full grid where every element exists. There can be holes in the grid but it has to be continuous, i.e. there can't be an empty rows or columns.

With  $lv\_tileview\_set\_valid\_positions(tileview, valid\_pos\_array, array\_len)$  the valid positions can be set. Scrolling will be possible only to this positions. The 0,0 index means the top left tile. E.g.  $lv\_point\_t$  valid\_pos\_array[] = {{0,0}, {0,1}, {1,1}, {{LV\\_COORD\\_MIN, LV\\_COORD\\_MIN}}} gives a Tile view with "L" shape. It indicates that there is no tile in {1,1} therefore the user can't scroll there.

In other words, the  $valid_pos_array$  tells where the tiles are. It can be changed on the fly to disable some positions on specific tiles. For example, there can be a 2x2 grid where all tiles are added but the first row (y = 0) as a "main row" and the second row (y = 1) contains options for the tile above it. Let's say horizontal scrolling is possible only in the main row and not possible between the options in the second row. In this case the  $valid_pos_array$  needs to changed when a new main tile is selected:

- for the first main tile:  $\{0,0\}$ ,  $\{0,1\}$ ,  $\{1,0\}$  to disable the  $\{1,1\}$  option tile
- for the second main tile  $\{0,0\}$ ,  $\{1,0\}$ ,  $\{1,1\}$  to disable the  $\{0,1\}$  option tile

#### Set tile

To set the currently visible tile use  $lv\_tileview\_set\_tile\_act(tileview, x\_id, y\_id, LV\_ANIM\_ON/OFF)$ .

#### Add element

To add elements just create an object on the Tileview and position it manually to the desired position.

lv\_tileview\_add\_element(tielview, element) should be used to make possible to scroll (drag)
the Tileview by one its element. For example, if there is a button on a tile, the button needs to be explicitly
added to the Tileview to enable the user to scroll the Tileview with the button too.

#### Scroll propagation

The scroll propagation feature of page-like objects (like List) can be used very well here. For example, there can be a full-sized List and when it reaches the top or bottom most position the user will scroll the tile view instead.

#### **Animation time**

The animation time of the Tileview can be adjusted with lv\_tileview\_set\_anim\_time(tileview, anim\_time).

Animations are applied when

- a new tile is selected with lv tileview set tile act
- the current tile is scrolled a little and then released (revert the original title)
- the current tile is scrolled more than half size and then released (move to the next tile)

#### Edge flash

An "edge flash" effect can be added when the tile view reached hits an invalid position or the end of tile view when scrolled.

Use lv tileview set edge flash(tileview, true) to enable this feature.

# 5.33.4 Events

Besides the Generic events the following Special events are sent by the Slider:

• LV\_EVENT\_VALUE\_CHANGED Sent when a new tile loaded either with scrolling or lv\_tileview\_set\_act. The event data is set ti the index of the new tile in valid\_pos\_array (It's type is uint32 t \*)

# 5.33.5 Keys


- LV KEY UP, LV KEY RIGHT Increment the slider's value by 1
- LV\_KEY\_DOWN, LV\_KEY\_LEFT Decrement the slider's value by 1

Learn more about *Keys*.

# **5.33.6 Example**

C

Tileview with content

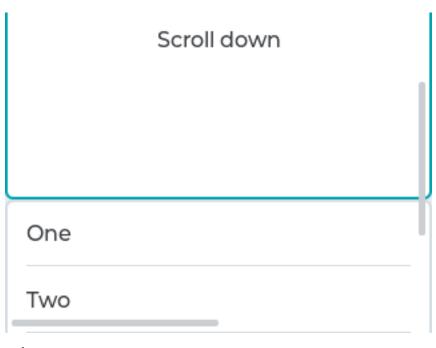

code

```
#include "../../lv_examples.h"
#if LV_USE_TILEVIEW
void lv_ex_tileview_1(void)
    static lv_point_t valid_pos[] = {{0,0}, {0, 1}, {1,1}};
    lv_obj_t *tileview;
    tileview = lv_tileview_create(lv_scr_act(), NULL);
    lv_tileview_set_valid_positions(tileview, valid_pos, 3);
    lv_tileview_set_edge_flash(tileview, true);
    lv_obj_t * tile1 = lv_obj_create(tileview, NULL);
lv_obj_set_size(tile1, LV_HOR_RES, LV_VER_RES);
    lv_tileview_add_element(tileview, tile1);
    /*Tile1: just a label*/
    lv_obj_t * label = lv_label_create(tile1, NULL);
    lv_label_set_text(label, "Scroll down");
    lv_obj_align(label, NULL, LV_ALIGN_CENTER, 0, 0);
    /*Tile2: a list*/
    lv_obj_t * list = lv_list_create(tileview, NULL);
    lv_obj_set_size(list, LV_HOR_RES, LV_VER_RES);
    lv_obj_set_pos(list, 0, LV_VER_RES);
    lv_list_set_scroll_propagation(list, true);
    lv list set scrollbar mode(list, LV SCROLLBAR MODE OFF);
```

```
lv_list_add_btn(list, NULL, "One");
    lv_list_add_btn(list, NULL, "Two");
    lv_list_add_btn(list, NULL, "Three");
    lv_list_add_btn(list, NULL, "Four");
    lv_list_add_btn(list, NULL, "Five");
    lv_list_add_btn(list, NULL, "Six");
lv_list_add_btn(list, NULL, "Seven");
    lv_list_add_btn(list, NULL, "Eight");
    /*Tile3: a button*/
    lv_obj_t * tile3 = lv_obj_create(tileview, tile1);
    lv_obj_set_pos(tile3, LV_HOR_RES, LV VER RES);
    lv_tileview_add_element(tileview, tile3);
    lv_obj_t * btn = lv_btn_create(tile3, NULL);
    lv_obj_align(btn, NULL, LV_ALIGN_CENTER, 0, 0);
    lv tileview add element(tileview, btn);
    label = lv label create(btn, NULL);
    lv label set text(label, "No scroll up");
}
#endif
```

# MicroPython

No examples yet.

# 5.33.7 API

#### **Enums**

# **Functions**

Return pointer to the created tileview

## **Parameters**

• par: pointer to an object, it will be the parent of the new tileview

• CODY: pointer to a tileview object, if not NULL then the new object will be copied from it

# void lv\_tileview\_add\_element(lv\_obj\_t \*tileview, lv\_obj\_t \*element)

Register an object on the tileview. The register object will able to slide the tileview

#### **Parameters**

- tileview: pointer to a Tileview object
- element: pointer to an object

```
void lv tileview set valid positions(lv_obj_t *tileview, const lv_point_t valid_pos[],
                                          uint16_t valid_pos_cnt)
```

Set the valid position's indices. The scrolling will be possible only to these positions.

#### **Parameters**

- tileview: pointer to a Tileview object
- valid pos: array width the indices. E.g. lv point t p[] = {{0,0}}, {1,0}, {1, 1. Only the pointer is saved so can't be a local variable.
- valid pos cnt: number of elements in valid\_pos array

```
void lv tileview set tile act(lv_obj_t *tileview, lv coord t x,
                                                                 lv coord t
                               lv_anim_enable_t anim)
```

Set the tile to be shown

#### **Parameters**

- tileview: pointer to a tileview object
- **x**: column id (0, 1, 2...)
- y: line id (0, 1, 2...)
- anim: LV\_ANIM\_ON: set the value with an animation; LV\_ANIM\_OFF: change the value immediately

# static void lv\_tileview\_set\_edge\_flash(lv\_obj\_t\*tileview, bool en)

Enable the edge flash effect. (Show an arc when the an edge is reached)

#### **Parameters**

- tileview: pointer to a Tileview
- en: true or false to enable/disable end flash

# static void lv\_tileview\_set\_anim\_time(lv\_obj\_t\*tileview, uint16\_t anim\_time)

Set the animation time for the Tile view

#### **Parameters**

- tileview: pointer to a page object
- anim time: animation time in milliseconds

# void lv tileview get tile act(lv\_obj t\*tileview, lv coord t\*x, lv coord t\*y)

Get the tile to be shown

#### **Parameters**

- tileview: pointer to a tileview object
- **x**: column id (0, 1, 2...)
- y: line id (0, 1, 2...)

# static bool lv tileview get edge flash(lv\_obj\_t\*tileview)

Get the scroll propagation property

**Return** true or false

#### **Parameters**

• tileview: pointer to a Tileview

# static uint16\_t lv\_tileview\_get\_anim\_time(lv\_obj\_t \*tileview)

Get the animation time for the Tile view

**Return** animation time in milliseconds

# **Parameters**

• tileview: pointer to a page object

# struct lv\_tileview\_ext\_t

#### **Public Members**

```
lv_page_ext_t page
const lv_point_t *valid_pos
uint16_t valid_pos_cnt
uint16_t anim_time
lv_point_t act_id
uint8_t drag_top_en
uint8_t drag_bottom_en
uint8_t drag_left_en
uint8_t drag_right_en
```

# 5.34 Window (Iv\_win)

## 5.34.1 Overview

The Window is container-like objects built from a header with title and button and a content area.

# 5.34.2 Parts and Styles

The main part is LV\_WIN\_PART\_BG which holds the two other real parts:

- 1. LV\_WIN\_PART\_HEADER: a header *Container* on the top with a title and control buttons
- 2. LV WIN PART CONTENT SCRL the scrollable part of a Page for the content below the header.

Besides these, LV\_WIN\_PART\_CONTENT\_SCRL has a scrollbar part called LV\_WIN\_PART\_CONTENT\_SCRL. Read the documentation of *Page* for more details on the scrollbars.

All parts supports the typical background properties. The title uses the *Text* properties of the header part.

The height of the control buttons is: header height - header padding\_top - header padding\_bottom.

#### **Title**

On the header, there is a title which can be modified by: lv win set title(win, "New title").

#### **Control buttons**

Control buttons can be added to the right of the window header with: <code>lv\_win\_add\_btn\_right(win, LV\_SYMBOL\_CLOSE)</code>, to add a button to the left side of the window header use <code>lv\_win\_add\_btn\_left(win, LV\_SYMBOL\_CLOSE)</code> instead. The second parameter is an <code>Image</code> source so it can be a symbol, a pointer to an <code>lv img dsc t</code> variable or a path to file.

The width of the buttons can be set with  $lv_win_set_btn_width(win, w)$ . If w == 0 the buttons will be square-shaped.

lv win close event cb can be used as an event callback to close the Window.

#### **Scrollbars**

The scrollbar behavior can be set by lv\_win\_set\_scrlbar\_mode(win, LV\_SCRLBAR\_MODE\_...). See *Page* for details.

# Manual scroll and focus

To scroll the Window directly you can use lv\_win\_scroll\_hor(win, dist\_px) or lv win scroll ver(win, dist px).

To make the Window show an object on it use lv win focus(win, child, LV ANIM ON/OFF).

The time of scroll and focus animations can be adjusted with lv\_win\_set\_anim\_time(win, anim time ms)

# Layout

To set a layout for the content use <code>lv\_win\_set\_layout(win, LV\_LAYOUT\_...)</code>. See *Container* for details.

# 5.34.3 Events

Only the Generic events are sent by the object type.

Learn more about *Events*.

# 5.34.4 Keys

The following Keys are processed by the Page:

• LV\_KEY\_RIGHT/LEFT/UP/DOWN Scroll the page

Learn more about Keys.

# **5.34.5** Example

C

Simple window

# Window title

This is the content of the window

You can add control buttons to the window header

The content area becomes automatically scrollable is it's large enough.

Volumen scroll the content

code

```
#include "../../lv_examples.h"
#if LV_USE_WIN
void lv_ex_win_1(void)
    /*Create a window*/
   lv_obj_t * win = lv_win_create(lv_scr_act(), NULL);
                                                                  /*Set the title*/
   lv_win_set_title(win, "Window title");
    /*Add control button to the header*/
   lv_obj_t * close_btn = lv_win_add_btn(win, LV_SYMBOL_CLOSE);
                                                                           /*Add
→close button and use built-in close action*/
    lv obj set event cb(close btn, lv win close event cb);
   lv_win_add_btn(win, LV_SYMBOL_SETTINGS);
                                                 /*Add a setup button*/
   /*Add some dummy content*/
   lv_obj_t * txt = lv_label_create(win, NULL);
    lv_label_set_text(txt, "This is the content of the window) n n "
                           "You can add control buttons to\n"
                           "the window header\n\n"
                           "The content area becomes\n"
                           "automatically scrollable is it's \n"
                           "large enough.\n\n"
                           " You can scroll the content\n"
                           "See the scroll bar on the right!");
```

```
}
#endif
```

## MicroPython

No examples yet.

# 5.34.6 API

#### **Enums**

# enum [anonymous]

Window parts.

Values:

```
LV\_WIN\_PART\_BG = LV\_OBJ\_PART\_MAIN
```

Window object background style.

$$LV\_WIN\_PART\_HEADER = \_LV\_OBJ\_PART\_REAL\_LAST$$

Window titlebar background style.

#### LV WIN PART CONTENT SCROLLABLE

Window content style.

# LV\_WIN\_PART\_SCROLLBAR

Window scrollbar style.

\_LV\_WIN\_PART\_REAL\_LAST

# **Functions**

```
\mathit{lv\_obj\_t} * \texttt{lv\_win\_create} (\mathit{lv\_obj\_t} * \mathit{par}, \, \texttt{const} \, \mathit{lv\_obj\_t} * \mathit{copy})
```

Create a window objects

Return pointer to the created window

#### **Parameters**

- par: pointer to an object, it will be the parent of the new window
- copy: pointer to a window object, if not NULL then the new object will be copied from it

```
void lv_win_clean(lv_obj_t *win)
```

Delete all children of the scrl object, without deleting scrl child.

#### **Parameters**

• win: pointer to an object

```
lv\_obj\_t *lv\_win\_add\_btn(lv\_obj\_t *win, const void *img\_src)
```

Add control button to the header of the window

Return pointer to the created button object

#### **Parameters**

- win: pointer to a window object
- img\_src: an image source ('lv\_img\_t' variable, path to file or a symbol)

# void lv\_win\_close\_event\_cb(lv\_obj\_t \*btn, lv\_event\_t event)

Can be assigned to a window control button to close the window

#### **Parameters**

- btn: pointer to the control button on the widows header
- evet: the event type

# void lv\_win\_set\_title(lv\_obj\_t \*win, const char \*title)

Set the title of a window

#### **Parameters**

- win: pointer to a window object
- title: string of the new title

# void lv\_win\_set\_header\_height(lv\_obj\_t \*win, lv\_coord\_t size)

Set the control button size of a window

Return control button size

#### **Parameters**

• win: pointer to a window object

# void lv\_win\_set\_btn\_width(lv\_obj\_t \*win, lv\_coord\_t width)

Set the width of the control buttons on the header

#### Parameters

- win: pointer to a window object
- width: width of the control button. 0: to make them square automatically.

# void lv\_win\_set\_content\_size(lv\_obj\_t \*win, lv\_coord\_t w, lv\_coord\_t h)

Set the size of the content area.

# Parameters

- win: pointer to a window object
- W: width
- h: height (the window will be higher with the height of the header)

# void lv\_win\_set\_layout(lv\_obj\_t \*win, lv\_layout\_t layout)

Set the layout of the window

#### **Parameters**

- win: pointer to a window object
- layout: the layout from 'lv layout t'

# void lv\_win\_set\_scrollbar\_mode(lv\_obj\_t \*win, lv\_scrollbar\_mode\_t sb\_mode)

Set the scroll bar mode of a window

# **Parameters**

• win: pointer to a window object

• **sb mode**: the new scroll bar mode from 'lv\_scrollbar\_mode\_t'

# void lv\_win\_set\_anim\_time(lv\_obj\_t \*win, uint16\_t anim\_time)

Set focus animation duration on lv win focus()

#### **Parameters**

- win: pointer to a window object
- anim time: duration of animation [ms]

```
void lv_win_set_drag(lv_obj_t *win, bool en)
```

Set drag status of a window. If set to 'true' window can be dragged like on a PC.

#### **Parameters**

- win: pointer to a window object
- en: whether dragging is enabled

# const char \*lv\_win\_get\_title(const lv\_obj\_t \*win)

Get the title of a window

Return title string of the window

#### **Parameters**

• win: pointer to a window object

# lv\_obj\_t \*lv\_win\_get\_content(const lv\_obj\_t \*win)

Get the content holder object of window (lv\_page) to allow additional customization

Return the Page object where the window's content is

#### **Parameters**

• win: pointer to a window object

# lv\_coord\_t lv\_win\_get\_header\_height(const lv\_obj\_t \*win)

Get the header height

Return header height

#### **Parameters**

• win: pointer to a window object

# lv\_coord\_t lv\_win\_get\_btn\_width(lv\_obj\_t \*win)

Get the width of the control buttons on the header

**Return** width of the control button. 0: square.

#### **Parameters**

• win: pointer to a window object

## lv\_obj\_t \*lv win get from btn(const lv\_obj\_t \*ctrl\_btn)

Get the pointer of a widow from one of its control button. It is useful in the action of the control buttons where only button is known.

**Return** pointer to the window of 'ctrl btn'

# Parameters

• ctrl\_btn: pointer to a control button of a window

# lv\_layout\_t lv\_win\_get\_layout(lv\_obj\_t \*win)

Get the layout of a window

**Return** the layout of the window (from 'lv\_layout\_t')

#### **Parameters**

• win: pointer to a window object

# lv\_scrollbar\_mode\_t lv\_win\_get\_sb\_mode(lv\_obj\_t \*win)

Get the scroll bar mode of a window

**Return** the scroll bar mode of the window (from 'lv\_sb\_mode\_t')

## **Parameters**

• win: pointer to a window object

# uint16\_t lv\_win\_get\_anim\_time(const lv\_obj\_t \*win)

Get focus animation duration

Return duration of animation [ms]

#### **Parameters**

• win: pointer to a window object

# lv\_coord\_t lv\_win\_get\_width(lv\_obj\_t \*win)

Get width of the content area (page scrollable) of the window

Return the width of the content area

#### **Parameters**

• win: pointer to a window object

# static bool lv\_win\_get\_drag(const lv\_obj\_t \*win)

Get drag status of a window. If set to 'true' window can be dragged like on a PC.

**Return** whether window is draggable

#### **Parameters**

• win: pointer to a window object

# void $lv\_win\_focus(lv\_obj\_t*win, lv\_obj\_t*obj, lv\_anim\_enable\_t anim\_en)$

Focus on an object. It ensures that the object will be visible in the window.

#### Parameters

- win: pointer to a window object
- **obj**: pointer to an object to focus (must be in the window)
- anim\_en: LV\_ANIM\_ON focus with an animation; LV\_ANIM\_OFF focus without animation

# static void lv\_win\_scroll\_hor(lv\_obj\_t \*win, lv\_coord\_t dist)

Scroll the window horizontally

#### **Parameters**

- win: pointer to a window object
- **dist**: the distance to scroll (< 0: scroll right; > 0 scroll left)

# static void lv\_win\_scroll\_ver(lv\_obj\_t \*win, lv\_coord\_t dist)

Scroll the window vertically

#### **Parameters**

• win: pointer to a window object

• dist: the distance to scroll (< 0: scroll down; > 0 scroll up)

# struct lv\_win\_ext\_t

# **Public Members**

 $\begin{array}{l} lv\_obj\_t \ *page \\ lv\_obj\_t \ *header \\ \mathrm{char} \ *title\_txt \\ lv\_coord\_t \ btn\_w \end{array}$ 

# CONTRIBUTING

# 6.1 Introduction

Join LVGL's community and leave your footprint in the library!

There are a lot of ways to contribute to LVGL even if you are are new to the library or even new to programming.

It might be scary to make the first step but you have nothing to afraid of. A friendly and helpful community is waiting to know like-minded people and make something great together.

So let's find which contribution option fits you the best and join the development of LVGL!

Before getting started here are some guidelines to make contribution smoother:

- Be kind and friendly.
- Be sure to read the relevant part of the documentation before posting a question.
- Ask questions in Forum and use [GitHub]((https://github.com/lvgl/) for development-related discussions.
- Fill the post or issue templates in the Forum or GitHub. It makes much easier to understand your case and you will get a useful answer faster.
- If possible send an absolute minimal but build-able code example in order to reproduce the issue. Be sure it contains all required variable declarations, constants, and assets (images, fonts).
- Use Markdown to format your posts. You can learn it in 10 minutes.
- Speak about one thing in one issue or topic.
- Give feedback and close the issue or mark the topic as solved if your question is answered.
- For non-trivial fixes and features, it's better to open an issue first to discuss the details instead of sending a pull request directly.
- Please read and follow the Coding style guide.

# 6.1.1 Pull request

Merging new code into lvgl, documentation, blog, examples, and other repositories happen via *Pull requests* (PR for short). A PR is a notification like "Hey, I made some updates to your project. Here are the changes, you can add them if you want." To do this you need a copy (called fork) of the original project under your account, make some changes there, and notify the original repository about your updates. You can see how it looks like on GitHub for lvgl here: https://github.com/lvgl/lvgl/pulls

To add your changes you can edit files online on GitHub and send a new Pull request from there (recommended for small changes) or add the updates in your favorite editor/IDE and use git to publish the changes (recommended for more complex updates).

#### From GitHub

- 1. Navigate to the file you want to edit.
- 2. Click the Edit button in the top right-hand corner.
- 3. Add your changes to the file
- 4. Add a commit message on the bottom of the page
- 5. Click the *Propose changes* button

#### From command line

It's about the lvgl repository but it works the same way for other repositories too.

- 1. Fork the lvgl repository. To do this click the "Fork" button in the top right corner. It will "copy" the lvgl repository to your GitHub account (https://github.com/<YOUR\_NAME>? tab=repositories)
- 2. Clone your forked repository.
- 3. Add your changes. You can create a *feature branch* from *master* for the updates: **git checkout -b** the-new-feature
- 4. Commit and push you changed to the forked lvgl repository.
- 5. Create a PR on GitHub from the page of your lvgl repository (https://github.com/ <YOUR\_NAME>/lvgl) by clicking the "New pull request" button. Don't forget to select the branch where you added your changes.
- 6. Set the base branch. It means where you want to merge your update. In the lvgl repo fixes go to master, new features to dev branch.
- 7. Describe what is in the update. An example code is welcome if applicable.
- 8. Update\*\* your lvgl repo with new commits. They will automatically appear in the PR too.

# 6.2 When you got started with LVGL

Even if you're just getting started with LVGL there plenty of ways to make your feet wet. Most of these options even doesn't require knowing a single line of code of LVGL.

## 6.2.1 Give LVGL a Star

Show that you like LVGL by giving it star on GitHub!

Star

This simple click makes LVGL more visible on GitHub and makes it more attractive to other people. So with this, you already helped a lot!

# 6.2.2 Tell what you have achieved

Have you already started LVGL in a *Simulator*, a development board, or your custom hardware? Was it easy or where there some obstacles? Are you happy with the result?

If so why don't you tell it to your friends? You can post it on Twitter, Facebook, LinkedIn, or create a YouTube video.

Any of these helps a lot to spread the word of LVGL and familiarize it with new developers.

Only thing: don't forget to add a link to https://lvg.io or https://github.com/lvgl and #lvgl. Thank you! :)

# 6.2.3 Write examples

As you learn LVGL probably you will play with the features of widgets. But why don't you publish your experiments?

Every widgets' documentation contains some examples. For example here are the examples of the Drop-down list. The examples are directly loaded from the ly examples repository.

So all you need to do is sending a Pull request to the lv\_examples repository and follow some conventions:

- Name the examples like lv ex <widget name> <id>
- Make the example as short and simple as possible
- Add comments to explain what the example does
- Use 320x240 resolution
- Create a screenshot about the example
- Update index.rst in the example's folder with your new example. See how the other examples are added.

## 6.2.4 Improve the docs

As you read the documentation you might see some typos or unclear sentences. For typos and straightforward fixes, you can simply edit the file on GitHub. There is an <code>Edit on GitHub</code> link on the top right-hand corner of all pages. Click it to see the file on GitHub, hit the Edit button, and add you fixes as described in Pull request - From GitHub section.

Note that, the documentation is also formatted in Markdown.

#### 6.2.5 Translate the docs

If you have more free time you can even translate the documentation. The currently available languages are shown in the locals folder.

If your chosen language is still not added, please write a comment here.

To add your translations:

- Find the .po in <language\_code>/LC\_MESSAGES/<section\_name>.po. E.g. the widgets translated to German should be in de/LC MESSAGES/widgets.po.
- Open a po file and fill the msgstr fields with the translation
- Send a Pull request

To display a translation in the public documentation page at least these sections should be translated:

- Get started: Quick overview
- Overview: Objects, Events, Styles
- Porting: System overview, Set-up a project, Display interface, Input device Interface, Tick interface
- 5 widgets of your choice

# 6.2.6 Write a blog post

LVGL Blog is free for everyone. It's a good place to talk about a project you created with LVGL, write a tutorial, or share some nice tricks. The latest blog posts are shown on the homepage of LVGL to make your work more visible.

The blog is hosted on GitHub. If you add a post GitHub automatically turns it into a website. See the README of the blog repo to see how to add your post.

# 6.3 When you already use LVGL

#### 6.3.1 Give feedback

Let us know what you are working on! You can open a new topic in the My projects category of the Forum. Showing your project to others is a win-win situation because it increases your and LVGL's reputation at the same time.

If you don't want to speak about it publicly feel free to use Contact form on lvgl.io to private message to us.

# 6.3.2 Report bugs

As you use LVGL you might find bugs. Before reporting them be sure to check the relevant parts of the documentation.

If it really seems like a bug feel free to open an issue on GitHub.

When filing the issue be sure to fill the template. It helps a lot to find the root of the problems and helps to avoid a lot of questions.

# 6.3.3 Send fixes

The beauty of open-source software is you can see how they work and fix or adjust them as you need. If you found a bug and was able to fix it don't hesitate to send a Pull request with the fix.

In your Pull request please also add a line to CHANGELOG.md.

#### 6.3.4 Join the conversations in the Forum

It feels so good when you are not alone if something is not working. But it's even better to help people when they struggle with something.

While you were learning LVGL you might have questions and used the Forum to get answers. Now you already know how LVGL works and have a decent knowledge about it.

It's a nice way of contribution to use the Forum and answer the questions of newcomers - like you were once. Just read the titles and if you are familiar with the topic don't hesitate to share your thoughts.

Participating in the discussions is one of the best ways to part of the project and know like-minded people!

#### 6.3.5 Add features

We collect the planned features in GitHub issues tracker and mark them with Help wanted label. If you are interested in any of them feel free to tell your remarks, and/or participate in the the implementation.

Other features which are (still) not on the road map are listed in the Feature request category of the Forum. If you have a feature idea for LVGL please use the Forum the share it!

When adding a new features the followings also needs to be updated:

- Add a line to CHANGELOG.md.
- Update the documentation. See this guide.
- Add an example if applicable. See this guide.

# 6.4 When you are confident with LVGL

# 6.4.1 Become a maintainer

If you really want to part of the development you can become a maintainer of a repo. By becoming a maintainer

- you get write access to that repo: add code directly without sending a Pull request accept Pull request close/repopen/edit issues
- your name will be added in the credits section of lvgl.io/about (will be added soon) and lvgl's README.
- you can join the Core\_contributor group in the Forum and get the LVGL logo on your avatar.
- your word has higher impact when we make decisions

You can become a maintainer by invitation, however the followings need to met

- 1. Have > 50 replays in the Forum. You can your stats here
- 2. Send > 5 non trivial Pull request to the repo where you would like to be maintainer

If you are interested, just send a message (e.g. from the Forum) to the current maintainers of the repository. They will check is the prerequisites are met. Note that, it's not automatic process, i.e. if the conditions are met you won't be automatically a maintainer. It's up to the current maintainers to make the decision.

# 6.4.2 Garden your repo under LVGL organization

Besides the core lvgl repository there are other repos for ports to development boards, IDEs or other environment. If you ported LVGL to a new platform we can host it under the LVGL organization among the other repos.

This way you project will become the part of whole LVGL project and get more visibility. If you are interested in this opportunity just open an issue in lvgl repo and tell what you have!

After that, it all seems good, we open a repo for you project where you will have admin rights. Besides your name will be added in the credits section of lvgl.io/about (will be added soon) and lvgl's README and you can join the Core\_contributor group in the Forum and get the LVGL logo on your avatar.

To make this concept sustainable there a few rules to follow:

- You need to add a README to your repo.
- We expect to maintain the repo some extent:
  - Follow at least major the versions of lvgl
  - respond to the issues (in a reasonable time)
- if there is no activity in a repo for 6 month it will be arcived