# LittlevGL Documentation

Release 6.0

**Gabor Kiss-Vamosi** 

# **CONTENTS**

English (en) - (zh-CN) Magyar (hu) - Türk (tr)

PDF version: LittlevGL.pdf



LittlevGL is a free and open-source graphics library providing everything you need to create embedded GUI with easy-to-use graphical elements, beautiful visual effects and low memory footprint.

Website · GitHub · Forum · Live demo · Simulator · Blog

CONTENTS 1

# **CHAPTER**

# **ONE**

# **KEY FEATURES**

- Powerful building blocks buttons, charts, lists, sliders, images etc
- Advanced graphics with animations, anti-aliasing, opacity, smooth scrolling
- Various input devices touchpad, mouse, keyboard, encoder etc
- Multi-language support with UTF-8 encoding
- Multi-display support, i.e. use more TFT, monochrome displays simultaneously
- Fully customizable graphical elements
- Hardware independent to use with any microcontroller or display
- Scalable to operate with little memory (64 kB Flash, 16 kB RAM)
- OS, External memory and GPU supported but not required
- Single frame buffer operation even with advanced graphical effects
- Written in C for maximal compatibility (C++ compatible)
- Simulator to start embedded GUI design on PC without embedded hardware
- Tutorials, examples, themes for rapid GUI design
- Documentation online and offline
- Free and open-source under MIT license

# **REQUIREMENTS**

- 16, 32 or 64 bit microcontroller or processor
- > 16 MHz clock speed is recommended
- Flash/ROM: > 64 kB for the very essential components (> 180 kB is recommended)
- RAM:
  - Static RAM usage: ~8..16 kB depending on the used features and objects types
  - Stack: > 2kB (> 4 kB is recommended)
  - Dynamic data (heap):  $> 4~{\rm KB}$  ( $> 16~{\rm kB}$  is recommended if using several objects). Set by LV\_MEM\_SIZE in  $lv\_conf.h.$
  - Display buffer: > "Horizontal resolution" pixels ( $> 10 \times$  "Horizontal resolution" is recommended)
- C99 or newer compiler
- Basic C (or C++) knowledge: pointers, structs, callbacks.

 $Note \ that \ the \ memory \ usage \ might \ vary \ depending \ on \ the \ architecture, \ compiler \ and \ build \ options.$ 

# THREE

# **FAQ**

# 3.1 Where to get started?

- For a general overview of LittlevGL visit littlevgl.com
- To make some experiments with LittlevGL in a simulator on your PC or in even in your browser see the *Get started* guide.
- To see how you can port LittlevGL to your device go to the *Porting* section.
- To learn how LittlevGL works start to read the Overview.
- To read tutorials or share your own experiences go to the Blog
- To see the source doe of the library go to GitHub: https://github.com/littlevgl/lvgl/.

# 3.2 Where can I ask questions?

To ask questions in the Forum: https://forum.littlevgl.com/.

We use GitHub issues for development related discussion. So you should use them only if your question or issue is tightly related to the development of the library.

# 3.3 Is my MCU/hardware supported?

Every MCU which is capable of driving a display via Parallel port, SPI, RGB interface or anything else and fulfills the *Requirements* is supported by LittlevGL. It includes

- "Common" MCUs like STM32F, STM32H, NXP Kinetis, LPC, iMX, dsPIC33, PIC32 etc.
- Bluetooth, GSM, WiFi modules like Nordic NRF and Espressif ESP32
- Linux frame buffer like /dev/fb0 which includes Single board computers too like Raspberry
- and anything else with a strong enough MCU and a periphery to drive a display

# 3.4 Is my display supported?

LittlevGL needs just one simple driver to copy an array of pixels to a given area of the display. If you can do this your display then you use that display with LittlevGL. It includes

- TFTs with 16 or 24 bit color depth
- Monitors with HDMI port
- Small monochrome displays
- Gray-scale displays
- LED matrices
- or any other display where you can control the color/state of the pixels

See the *Porting* section to learn more.

# 3.5 Is LittlevGL free? How can I use it in a commercial product?

LittlevGL comes with MIT license which means you can download and use it for any purpose you want without any obligations.

# 3.6 Nothing happens, my display driver is not called. What have I missed?

Be sure you are calling  $lv\_tick\_inc(x)$  in an interrupt and  $lv\_task\_handler()$  in your main while(1).

Learn more in the *Tick* and *Task handler* section.

# 3.7 Why the display driver is called only one? Only the upper part of the display is refreshed.

Be sure you are calling lv\_disp\_flush\_ready(drv) at the end of you display flush callback.

# 3.8 Why I see only garbage on the screen?

Probably there a bug in your display driver. Try the following code without using LittlevGL:

```
#define BUF_W 20
#define BUF_H 10
lv_color_t buf[BUF_W * BUF_H];
lv_color_t * buf_p = buf;
uint16_t x, y;
for(y = 0; y < BUF_H; y++) {
    lv_color_t c = lv_color_mix(LV_COLOR_BLUE, LV_COLOR_RED, (y * 255) / BUF_H);
    for(x = 0; x < BUF_W; x++){
        (*buf_p) = c;
        buf_p++;
    }
}
lv_area_t a;</pre>
```

(continues on next page)

(continued from previous page)

```
a.x1 = 10;
a.y1 = 40;
a.x2 = a.x1 + BUF_W - 1;
a.y2 = a.y1 + BUF_H - 1;
my_flush_cb(NULL, &a, buf);
```

# 3.9 Why I see non-sense colors on the screen?

Probably LittlevGL's the color format is not compatible with your displays color format. Check LV COLOR DEPTH in  $lv\_conf.h.$ 

If you are using 16 bit colors with SPI (or other byte-oriented) interface probably you need to set  $LV\_COLOR\_16\_SWAP$  1 in  $lv\_conf.h$ . It swaps the upper and lower bytes of the pixels.

# 3.10 How to speed up my UI?

- Turn on compiler optimization
- Increase the size of the display buffer
- Use 2 display buffers and flush the buffer with DMA (or similar periphery) in the background
- Increase the clock speed of the SPI or Parallel port if you use them to drive the display
- If you display has SPI port consider changing to a model with parallel because it has much higher throughput
- Keep the display buffer in the internal RAM (not external SRAM) because LittlevGL uses it a lot and it should have a small access time

# 3.11 How to reduce flash/ROM usage?

You can disable all the unused feature (like animations, file system, GPU etc) and object types in  $lv\_conf.h$ . IF you are using GCC you can add

- -fdata-sections -ffunction-sections compiler flags
- --gc-sections linker flag

to remove unused functions and variables. '

# 3.12 How to reduce the RAM usage

- Lower the size of the Display buffer
- Reduce LV\_MEM\_SIZE in  $lv\_conf.h$ . This memory used when you create objects like buttons, labels, etc
- To work with lower LV\_MEM\_SIZE you can create the objects only when required and deleted them when they are not required anymore.

# 3.13 How to work with an operating system?

To work with an operating system where tasks can interrupt each other you should protect LittlevGL related function calls with a mutex. See the *Operation system* section to learn more.

# 3.14 How to contribute to LittlevGL?

There are several ways to contribute to LittlevGL:

- write a few lines about your project to inspire others
- answer other's questions
- report and/or fix bugs
- suggest and/or implement new features
- improve and/or translate the documentation
- write a blog post about your experiences

To learn more see Contributing guide

# 3.15 Where can I find the documentation of the previous version (v5.3)?

You can download it here and open offline:

Docs-v5-3.zip

# 3.15.1 Get started

#### Live demos

You can see how LittlevGL looks like without installing and downloading anything. There some ready made user interfaces which you can easily try in your browser.

Go to the Live demo page and choose a demo you are interested in.

# Micropython

# What is Micropython?

Micropython is Python for microcontrollers. With Micropython you can write Python3 code and run it on bare metal architectures with limited resources.

## Micropython highlights

- Compact fit and run within just 256k of code space and 16k of RAM. No OS is needed, although you can also run it with OS, if you want.
- Compatible strives to be as compatible as possible with normal Python (known as CPython)
- Verstile Supports many architectures (x86, x86-64, ARM, ARM Thumb, Xtensa)
- Interactive No need for the compile-flash-boot cycle. With the REPL (interactive prompt) you can type commands and execute them immediately, run scripts etc.
- **Popular** Many platforms are supported. User base is growing bigger.Notable forks: MicroPython, CircuitPython, MicroPython\_ESP32\_psRAM\_LoBo
- Embedded Oriented Comes with modules specifically for embedded systsems, such as the machine module for accessing low-level hardware (I/O pins, ADC, UART, SPI, I2C, RTC, Timers etc.)

## Why Micropython + LittlevGL?

Micropython today does not have a good high-level GUI library.LittlevGL is a good high-level GUI library, it's implemented in C and its API is in C.LittlevGL is an Object Oriented Compenent Based library, which seems a natural candidate to map into a higher level language, such as Python.

## Here are some advantages of using LittlevGL in Micropython:

- Develop GUI in Python, a very popular high level language. Use paradigms such as Object Oriented Programming.
- GUI development requires multiple iterations to get things right. With C, each iteration consists of **Change code > Build > Flash > Run**. In Micropython it's just **Change code > Run**. You can even run commands interactively using the REPL (the interactive prompt)

# Micropython + LittlevGL could be used for:

- Fast prototyping GUI.
- Shorten the cycle of changing and fine-tuning the GUI.
- Model the GUI in a more absract way by defining reusable composite objects, taking advantage of Python's language features such as Inheritance, Closures, List Comprehension, Generators, Exception Handling, Arbitrary Precision Integers and others.
- Make LittlevGL accessible to a larger audience. No need to know C in order to create a nice GUI on an embedded system. This goes well with CircuitPython vision. CircuitPython was designed with education in mind, to make it easier for new or unexperienced users to get started with embedded development.

#### So how does it look like?

TL;DR: It's very much like the C API, but Object Oriented for LittlevGL componets.

Let's dive right into an example!

#### A simple example

```
import lvgl as lv
lv.init()
scr = lv.obj()
btn = lv.btn(scr)
btn.align(lv.scr_act(), lv.ALIGN.CENTER, 0, 0)
label = lv.label(btn)
label.set_text("Button")
lv.scr_load(scr)
```

#### How can I use it?

#### **Online Simulator**

If you want to experiment with LittlevGL + Micropython without downloading anything - you can use our online simulator!It's a fully functional LittlevGL + Micropython that runs entirely in the browser and allows you to edit a python script and run it.

Link to the online simulator

#### **PC Simulator**

Micropython is ported to many platform, one of the is the "unix port", which allows you to build and run Micropython (+LittlevGL) on a Linux machine. (On a windows machine you might need Virtual Box or WSL or MinGW or Cygwin etc.)

More information about building and running the unix port

#### The real thing

At the end, the goal is to run it all on an embedded platform.Both Micropython and LittlevGL can be used on many embedded architectures, such as stm32, ESP32 etc.You would also need display and input drivers. We have some example drivers (ESP32+ILI9341, as well as some other examples), but most chances are you would want to create your own input/display drivers for your specific purposes.Drivers can be implemented either in C as Micropython module, or in pure Micropython!

# Where can I find more information?

- On the Blog Post
- On lv micropython README
- On lv\_binding\_micropython README

- On LittlevGL forum (Feel free to ask anything!)
- On Micropython docs and forum

#### Simulator on PC

You can try out the LittlevGL using only your PC without any development boards. Write a code, run it on the PC and see the result on the monitor. It is cross-platform: Windows, Linux and OSX are supported. The written code is portable, you can simply copy it when using an embedded hardware.

The simulator is also very useful to report bugs because it means common platform for every user. So it's a good idea to reproduce a bug in simulator and use the code snippet in the Forum.

#### Select an IDE

The simulator is ported to various IDEs. Choose your favourite IDE, read its README on GitHub, download the project, and load it to the IDE.

In followings the set-up guide of Eclipse CDT is described in more details.

#### Set-up Eclipse CDT

#### **Install Eclipse CDT**

Eclipse CDT is C/C++ IDE. You can use other IDEs as well but in this tutorial the configuration for Eclipse CDT is shown.

Eclipse is a Java based software therefore be sure Java Runtime Environment is installed on your system.

On Debian-based distros (e.g. Ubuntu): sudo apt-get install default-jre

You can download Eclipse's CDT from: https://eclipse.org/cdt/. Start the installer and choose *Eclipse CDT* from the list.

#### Install SDL 2

The PC simulator uses the SDL 2 cross platform library to simulate a TFT display and a touch pad.

# Linux

On **Linux** you can easily install SDL2 using a terminal:

- 1. Find the current version of SDL2: apt-cache search libsdl2 (e.g. libsdl2-2.0-0)
- 2. Install SDL2: sudo apt-get install libsdl2-2.0-0 (replace with the found version)
- 3. Install SDL2 development package: sudo apt-get install libsdl2-dev
- 4. If build essentials are not installed yet: sudo apt-get install build-essential

#### Windows

If you are using **Windows** firstly you need to install MinGW (64 bit version). After it do the following steps to add SDL2:

- 1. Download the development libraries of SDL. Go to https://www.libsdl.org/download-2.0.php and download  $Development\ Libraries:\ SDL2-devel-2.0.5-mingw.tar.gz$
- 2. Uncompress the file and go to  $x86\_64$ -w64-mingw32 directory (for 64 bit MinGW) or to i686-w64-mingw32 (for 32 bit MinGW)
- 3. Copy \_...mingw32/include/SDL2 folder to C:/MinGW/.../x86\_64-w64-mingw32/include
- 4. Copy \_...mingw32/lib/ content to C:/MinGW/.../x86\_64-w64-mingw32/lib
- 5. Copy \_\_...mingw32/bin/SDL2.dll to {eclipse\_worksapce}/pc\_simulator/Debug/. Do it later when Eclipse is installed.

Note: If you will use Microsoft Visual Studio instead of Eclipse then you don't have to install MinGW.

#### **OSX**

On OSX you can easily install SDL2 with brew: brew install sdl2

If something is not working I suggest this tutorial to get started with SDL.

## Pre-configured project

A pre-configured graphics library project (based on the latest release) is always available. You can find it on GitHub or on the Download page. (The project is configured for Eclipse CDT.)

#### Add the pre-configured project to Eclipse CDT

Run Eclipse CDT. It will show a dialogue about the **workspace path**. Before accepting it check that path and copy (and unzip) the downloaded pre-configured project there. Now you can accept the workspace path. Of course you can modify this path but in that case copy the project to that location.

Close the start up window and go to File->Import and choose General->Existing project into Workspace. Browse the root directory of the project and click Finish

On Windows you have to do two additional things:

- Copy the SDL2.dll into the project's Debug folder
- Righ click on the project -> Project properties -> C/C++ Build -> Settings -> Libraries -> Add ... and add mingw32 above SDLmain and SDL. (The order is important: mingw32, SDLmain, SDL)

#### **Compile and Run**


Now you are ready to run the Littlev Graphics Library on your PC. Click on the Hammer Icon on the top menu bar to Build the project. If you have done everything right you will not get any errors. Note that on some systems additional steps might be required to "see" SDL 2 from Eclipse but in most of cases the configurations in the downloaded project is enough.

After a success build click on the Play button on the top menu bar to run the project. Now a window should appear in the middle of your screen.

Now everything is ready to use the Littlev Graphics Library in the practice or begin the development on your PC.

# **3.15.2 Porting**

#### System overview

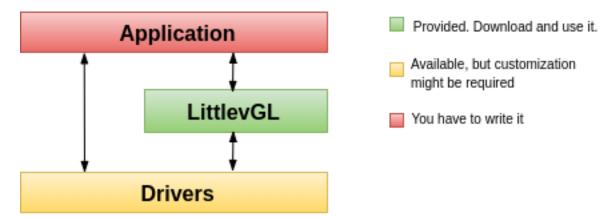

**Application** Your application which creates the GUI and handles the specific tasks.

**LittlevGL** The graphics library itself. Your application can communicate with the library to create a GUI. It contains a HAL (Hardware Abstraction Layer) interface to register your display and input device drivers.

**Driver** Besides your specific drivers, it contains functions to drive your display, optionally to a GPU and to read the touchpad or buttons.

There are **two typical hardware set-ups** depending on the MCU has an LCD/TFT driver periphery or not. In both cases, a frame buffer will be required to store the current image of the screen.

- 1. MCU with TFT/LCD driver If your MCU has a TFT/LCD driver periphery then you can connect a display directly via RGB interface. In this case, the frame buffer can be in the internal RAM (if the MCU has enough RAM) or in the external RAM (if the MCU has a memory interface).
- 2. External display controller If the MCU doesn't have TFT/LCD driver interface then an external display controller (E.g. SSD1963, SSD1306, ILI9341) has to be used. In this case, the MCU can communicate with the display controller via Parallel port, SPI or sometimes I2C. The frame buffer is usually located in the display controller which saves a lot of RAM for the MCU.

# Set-up a project

#### Get the library

LittlevGL Graphics Library is available on GitHub: https://github.com/littlevgl/lvgl.

You can clone it or download the latest version of the library from GitHub or you can use the Download page as well.

The graphics library is the lvgl directory which should be copied into your project.

## Config file

There is a configuration header file for LittlevGL called lv\_conf.h. It sets the library's basic behavior, disables unused modules and features, adjusts the size of memory buffers in compile time, etc.

Copy lvgl/lv\_conf\_template.h next to the lvgl directory and rename it to lv\_conf.h. Open the file and change the #if 0 at the beginning to #if 1 to enable its content.

*lv\_conf.h* can be copied other places as well but then you should add LV\_CONF\_INCLUDE\_SIMPLE define to your compiler options (e.g. -DLV\_CONF\_INCLUDE\_SIMPLE for gcc) and set the include path manually.

In the config file comments explain the meaning of the options. Check at least these three configuration options and modify them according to your hardware:

- 1. LV\_HOR\_RES\_MAX Your display's horizontal resolution
- 2. LV\_VER\_RES\_MAX Your display's vertical resolution
- 3. LV\_COLOR\_DEPTH 8 for (RG332), 16 for (RGB565) or 32 for (RGB888 and ARGB8888).

#### Initialization

In order to use the graphics library you have to initialize it and the other components too. To order of the initialization is:

- 1. Call  $lv\_init()$
- 2. Initialize your drivers
- 3. Register the display and input devices drivers in LittlevGL. More about *Display* and *Input device* registration.
- 4. Call lv tick inc(x) in every x milliseconds in an interrupt to tell the elapsed time. Learn more.
- 5. Call lv\_task\_handler() periodically in every few milliseconds to handle LittlevGL related tasks.
  Learn more.

#### Display interface

To set up a display an lv\_disp\_buf\_t and an lv\_disp\_drv\_t variable has to be initialized.

- lv\_disp\_buf\_t contains internal graphics buffer(s).
- lv\_disp\_drv\_t contains callback functions to interact with the display and manipulate drawing related things.

# Display buffer

lv\_disp\_buf\_t can be initialized like this:

```
/*A static or global variable to store the buffers*/
static lv_disp_buf_t disp_buf;

/*Static or global buffer(s). The second buffer is optional*/
static lv_color_t buf_1[MY_DISP_HOR_RES * 10];
static lv_color_t buf_2[MY_DISP_HOR_RES * 10];
```

(continues on next page)

(continued from previous page)

```
/*Initialize `disp_buf` with the buffer(s) */
lv_disp_buf_init(&disp_buf, buf_1, buf_2, MY_DISP_HOR_RES*10);
```

There are there possible configurations regarding the buffer size:

- 1. One buffer LittlevGL draws the content of the screen into a buffer and sends it to the display. The buffer can be smaller than the screen. In this case, the larger areas will be redrawn in multiple parts. If only small areas changes (e.g. button press) then only those areas will be refreshed.
- 2. **Two non-screen-sized buffers** having two buffers LittlevGL can draw into one buffer while the content of the other buffer is sent to display in the background. DMA or other hardware should be used to transfer the data to the display to let the CPU draw meanwhile. This way the rendering and refreshing of the display become parallel. Similarly to the *One buffer* LittlevGL will draw the display's content in chunks if the buffer is smaller than the area to refresh.
- 3. Two screen-sized buffers. In contrast to Two non-screen-sized buffers LittlevGL will always provide the whole screen's content not only chunks. This way the driver can simply change the address of the frame buffer to the buffer received from LittlevGL. Therefore this method works the best when the MCU has an LCD/TFT interface and the frame buffer is just a location in the RAM.

#### Display driver

Once the buffer initialization is ready the display drivers need to be initialized. In the most simple case only the following two fields of lv disp drv t needs to be set:

- buffer pointer to an initialized lv\_disp\_buf\_t variable.
- flush cb a callback function to copy a buffer's content to a specific area of the display.

There are some optional data fields:

- hor\_res horizontal resolution of the display. (LV HOR RES MAX by default from  $lv\_conf.h$ )
- ver\_res vertical resolution of the display. (LV VER RES MAX by default from  $lv\_conf.h$ )
- color\_chroma\_key a color which will be drawn as transparent on chrome keyed images. LV\_COLOR\_TRANSP by default from  $lv\_conf.h)$
- user\_data custom user data for the driver. Its type can be modified in ly conf.h.
- anti-aliasing use anti-aliasing (edge smoothing). LV ANTIALIAS by default from lv\_conf.h
- rotated if 1 swap hor\_res and ver\_res. LittlevGL draws in the same direction in both cases (in lines from top to bottom) so the driver also needs to be reconfigured to change the display's fill direction.
- screen\_transp if 1 the screen can have transparent or opaque style. LV\_COLOR\_SCREEN\_TRANSP needs to enabled in *lv\_conf.h* To use a GPU the following callbacks can be used:
- gpu fill cb fill an area with colors.
- **gpu\_blend\_cb** blend two buffers using opacity.

Some other optional callbacks to make easier and more optimal to work with monochrome, gray-scale or other non-standard RGB displays:

• rounder\_cb round the coordinates of areas to redraw. E.g. a 2x2 px can be converted to 2x8. It can be used if the display controller can refresh only areas with specific height or width (usually 8 px height with monochrome displays).

- set\_px\_cb a custom function to write the *display buffer*. It can be used to store the pixels in a more compact way if the display has a special color format. (e.g. 1 bit monochrome, 2 bit gray-scale etc.) This way the buffers used in lv\_disp\_buf\_t can be smaller to hold only the required number of bits for the given area size.
- monitor\_cb a callback function tell how many pixels were refreshed in how much time.

To set the fields of  $lv\_disp\_drv\_t$  variable it needs to be initialized with  $lv\_disp\_drv\_init(\&disp\_drv)$ . And finally to register a display for LittlevGL  $lv\_disp\_drv\_register(\&disp\_drv)$  needs to be called.

All together it looks like this:

Here some simple examples of the callbacks:

```
void my flush cb(lv disp drv t * disp_drv, const lv_area_t * area, lv_color_t * color_
→p)
{
    /*The most simple case (but also the slowest) to put all pixels to the screen one-
→by-one*/
    int32 t x, y;
    for(y = area->y1; y <= area->y2; y++) {
        for(x = area->x1; x <= area->x2; x++) {
            put_px(x, y, *color_p)
            color_p++;
        }
    }
    /* IMPORTANT!!!
     * Inform the graphics library that you are ready with the flushing*/
   lv_disp_flush_ready(disp);
}
void my mem fill cb(lv disp drv t * disp drv, lv color t * dest buf, const lv area t,
-* dest area, const lv area t * fill area, lv color t color);
    /*It's an example code which should be done by your GPU*/
   uint32 t x,y;
    for(y = 0; i < length; i++) {
        dest[i] = color;
}
void my_mem_blend_cb(lv_disp_drv_t * disp_drv, lv_color_t * dest, const lv_color_t *_
⇒src, uint32 t length, lv opa t opa)
    /*It's an example code which should be done by your GPU*/
   uint32 t i;
    for(i = 0; i < length; i++) {
```

(continues on next page)

(continued from previous page)

```
dest[i] = lv_color_mix(dest[i], src[i], opa);
    }
}
void my rounder cb(lv disp drv t * disp drv, lv area t * area)
  /* Update the areas as needed. Can be only larger.
   * For example to always have lines 8 px height:*/
  area->y1 = area->y1 & 0\times07;
   area->y2 = (area->y2 & 0 \times 07) + 8;
}
void my_set_px_cb(lv_disp_drv_t * disp_drv, uint8_t * buf, lv_coord_t buf_w, lv_coord_
→t x, lv_coord_t y, lv_color_t color, lv_opa_t opa)
    /* Write to the buffer as required for the display.
     * Write only 1 bit for monochrome displays mapped vertically:*/
buf += buf w * (y >> 3) + x;
 if(lv\ color\ brightness(color) > 128)\ (*buf) |= (1 << (y % 8));
else (*buf) &= \sim (1 << (y % 8));
void my_monitor_cb(lv_disp_drv_t * disp_drv, uint32_t time, uint32_t px)
  printf("%d px refreshed in %d ms\n", time, ms);
```

# API

Display Driver HAL interface header file

#### **Typedefs**

```
typedef struct __disp__drv__t lv__disp__drv__t
```

Display Driver structure to be registered by HAL

# typedef struct \_\_disp\_\_t lv\_disp\_t

Display structure.  $lv\_disp\_drv\_t$  is the first member of the structure.

# **Functions**

```
void lv_disp_drv_init(lv_disp_drv_t *driver)
```

Initialize a display driver with default values. It is used to have known values in the fields and not junk in memory. After it you can safely set only the fields you need.

#### **Parameters**

• driver: pointer to driver variable to initialize

```
void \mathbf{lv\_disp\_buf\_init}(\mathit{lv\_disp\_buf\_t} * \mathit{disp\_buf}, \quad \text{void} * \mathit{buf1}, \quad \text{void} * \mathit{buf2}, \quad \text{uint32\_t}  \mathit{size\_in\_px\_cnt}) Initialize a display buffer
```

#### **Parameters**

- $disp\_buf$ : pointer  $lv\_disp\_buf\_t$  variable to initialize
- buf1: A buffer to be used by LittlevGL to draw the image. Always has to specified
  and can't be NULL. Can be an array allocated by the user. E.g. static lv\_color\_t
  disp\_buf1[1024 \* 10] Or a memory address e.g. in external SRAM
- buf2: Optionally specify a second buffer to make image rendering and image flushing (sending to the display) parallel. In the disp\_drv->flush you should use DMA or similar hardware to send the image to the display in the background. It lets LittlevGL to render next frame into the other buffer while previous is being sent. Set to NULL if unused.
- size in px cnt: size of the buf1 and buf2 in pixel count.

# lv\_disp\_t \*lv\_disp\_drv\_register(lv\_disp\_drv\_t \*driver)

Register an initialized display driver. Automatically set the first display as active.

Return pointer to the new display or NULL on error

#### **Parameters**

• driver: pointer to an initialized 'lv\_disp\_drv\_t' variable (can be local variable)

# 

Update the driver in run time.

#### **Parameters**

- disp: pointer to a display. (return value of lv\_disp\_drv\_register)
- new\_drv: pointer to the new driver

# void lv\_disp\_remove(lv\_disp\_t \*disp)

Remove a display

#### **Parameters**

• disp: pointer to display

# void lv disp set default(lv\_disp\_t \*disp)

Set a default screen. The new screens will be created on it by default.

#### **Parameters**

• disp: pointer to a display

# lv\_disp\_t \*lv\_disp\_get\_default(void)

Get the default display

 ${f Return}$  pointer to the default display

#### lv coord t lv disp get hor res( $lv \ disp \ t * disp$ )

Get the horizontal resolution of a display

**Return** the horizontal resolution of the display

#### **Parameters**

• disp: pointer to a display (NULL to use the default display)

# lv coord t lv disp get ver res(lv\_disp\_t \*disp)

Get the vertical resolution of a display

Return the vertical resolution of the display

#### **Parameters**

• disp: pointer to a display (NULL to use the default display)

# bool lv\_disp\_get\_antialiasing(lv\_disp\_t \*disp)

Get if anti-aliasing is enabled for a display or not

Return true: anti-aliasing is enabled; false: disabled

#### **Parameters**

• disp: pointer to a display (NULL to use the default display)

## $lv \ disp \ t *lv \ disp \ get \ next(lv \ disp \ t *disp)$

Get the next display.

Return the next display or NULL if no more. Give the first display when the parameter is NULL

#### **Parameters**

• disp: pointer to the current display. NULL to initialize.

# $lv\_disp\_buf\_t *lv\_disp\_get\_buf(lv\_disp\_t *disp)$

Get the internal buffer of a display

Return pointer to the internal buffers

#### **Parameters**

• disp: pointer to a display

# uint16\_t lv\_disp\_get\_inv\_buf\_size(lv\_disp\_t \*disp)

Get the number of areas in the buffer

Return number of invalid areas

# void lv\_disp\_pop\_from\_inv\_buf(lv\_disp\_t \*disp, uint16\_t num)

Pop (delete) the last 'num' invalidated areas from the buffer

## Parameters

• num: number of areas to delete

# bool lv disp is double buf(lv\_disp\_t\*disp)

Check the driver configuration if it's double buffered (both buf1 and buf2 are set)

Return true: double buffered; false: not double buffered

#### Parameters

• disp: pointer to to display to check

# bool lv\_disp\_is\_true\_double\_buf(lv\_disp\_t \*disp)

Check the driver configuration if it's TRUE double buffered (both buf1 and buf2 are set and size is screen sized)

Return true: double buffered; false: not double buffered

#### **Parameters**

• disp: pointer to to display to check

# struct lv disp buf t

#include <lv hal disp.h> Structure for holding display buffer information.

#### **Public Members**

#### void \*buf1

First display buffer.

#### void \*buf2

Second display buffer.

#### void \*buf\_act

uint32 t size

lv area tarea

#### volatile uint32 t flushing

# struct \_disp\_drv\_t

#include <lv hal disp.h> Display Driver structure to be registered by HAL

#### **Public Members**

#### lv coord t hor res

Horizontal resolution.

#### lv coord t ver res

Vertical resolution.

## lv\_disp\_buf\_t\*buffer

Pointer to a buffer initialized with  $lv\_disp\_buf\_init()$ . LittlevGL will use this buffer(s) to draw the screens contents

## uint32 t antialiasing

1: antialiasing is enabled on this display.

#### uint32 t rotated

1: turn the display by 90 degree.

Warning Does not update coordinates for you!

# $uint32\_t$ screen\_transp

Handle if the the screen doesn't have a solid (opa == LV\_OPA\_COVER) background. Use only if required because it's slower.

 $\label{eq:color_disp_drv_t} \begin{tabular}{ll} void (*flush\_cb)(struct $\__disp\_drv$, $t^*_disp\_drv$, $const $lv_area\_t $*area, $lv\_color\_t $*color $p$) \\ \end{tabular}$ 

MANDATORY: Write the internal buffer (VDB) to the display. 'lv\_disp\_flush\_ready()' has to be called when finished

# void (\*rounder\_cb)(struct \_disp\_drv\_t \*disp\_drv, lv\_area\_t \*area)

OPTIONAL: Extend the invalidated areas to match with the display drivers requirements E.g. round  ${\sf y}$  to, 8, 16 ..) on a monochrome display

OPTIONAL: Set a pixel in a buffer according to the special requirements of the display Can be used for color format not supported in LittelyGL. E.g. 2 bit -> 4 gray scales

Note Much slower then drawing with supported color formats.

void (\*monitor\_cb)(struct \_disp\_drv\_t \*disp\_drv, uint32\_t time, uint32\_t px)

OPTIONAL: Called after every refresh cycle to tell the rendering and flushing time + the number of flushed pixels

void (\*gpu\_blend\_cb)(struct \_\_disp\_\_drv\_t \*disp\_\_drv, lv\_\_color\_\_t \*dest, const lv\_\_color\_\_t \*src, uint32\_t length, lv\_\_opa\_t opa)

OPTIONAL: Blend two memories using opacity (GPU only)

```
void (*gpu_fill_cb)(struct _disp_drv_t *disp_drv, lv_color_t *dest_buf, lv_coord_t
                             dest width, const lv_area_t *fill_area, lv_color_t color)
          OPTIONAL: Fill a memory with a color (GPU only)
     lv_color_t color_chroma_key
          On CHROMA_KEYED images this color will be transparent. LV COLOR TRANSP by default.
          (lv_conf.h)
     lv disp drv user data t user data
          Custom display driver user data
struct _disp_t
     #include < lv hal disp.h > Display structure. lv disp drv t is the first member of the structure.
     Public Members
     lv_disp_drv_t driver
          < Driver to the display A task which periodically checks the dirty areas and refreshes them
     lv_task_t *refr_task
     lv ll t scr ll
          Screens of the display
     \mathbf{struct} \_\mathit{lv}\_\mathit{obj}\_\mathit{t} \ *\mathbf{act}\_\mathbf{scr}
          Currently active screen on this display
     struct <u>lv_obj_t</u> *top layer
          See lv\_disp\_get\_layer\_top
     struct <u>lv_obj_t</u> *sys layer
          See lv_disp_get_layer_sys
     lv_area_t inv_areas[LV_INV_BUF_SIZE]
          Invalidated (marked to redraw) areas
     uint8_t inv_area_joined[LV_INV_BUF_SIZE]
     uint32_t inv_p
     uint32 t last activity time
          Last time there was activity on this display
```

#### Input device interface

# Types of input devices

To set up an input device an lv indev drv t variable has to be initialized:

type can be

• LV\_INDEV\_TYPE\_POINTER touchpad or mouse

- LV\_INDEV\_TYPE\_KEYPAD keyboard or keypad
- LV\_INDEV\_TYPE\_ENCODER encoder with left, right, push options
- LV\_INDEV\_TYPE\_BUTTON external buttons pressing the screen

read\_cb is a function pointer which will be called periodically to report the current state of an input device.
It can also buffer data and return false when no more data to be read or true when the buffer is not empty.

Visit *Input devices* to learn more about input devices in general.

#### Touchpad, mouse or any pointer

Input devices which are able to click points of the screen belong to this category.

```
indev_drv.type = LV_INDEV_TYPE_POINTER;
indev_drv.read_cb = my_input_read;
...
bool my_input_read(lv_indev_drv_t * drv, lv_indev_data_t*data)
{
    data->point.x = touchpad_x;
    data->point.y = touchpad_y;
    data->state = LV_INDEV_STATE_PR or LV_INDEV_STATE_REL;
    return false; /*No buffering now so no more data read*/
}
```

**Important:** Touchpad drivers must return the last X/Y coordinates even when the state is  $LV\_INDEV\_STATE\_REL$ .

To set a mouse cursor use  $lv\_indev\_set\_cursor(my\_indev$ , &img\\_cursor). (my\_indev is the return value of  $lv\_indev\_drv\_register$ )

# Keypad or keyboard

Full keyboards with all the letters or simple keypads with a few navigation buttons belong here.

To use a keyboard/keypad:

- Register a read cb function with LV INDEV TYPE KEYPAD type.
- Enable LV USE GROUP in lv conf.h
- An object group has to be created: lv\_group\_t \* g = lv\_group\_create() and objects have to be added to it with lv\_group\_add\_obj(g, obj)
- The created group has to be assigned to an input device: lv\_indev\_set\_group(my\_indev, g)
   (my\_indev is the return value of lv\_indev\_drv\_register)
- Use LV\_KEY\_... to navigate among the objects in the group. See lv\_core/lv\_group.h for the available keys.

#### **Encoder**

With an encoder you can do 4 things:

- 1. Press its button
- 2. Long press its button
- 3. Turn left
- 4. Turn right

In short, the Encoder input devices work like this:

- By turning the encoder you can focus on the next/previous object.
- When you press the encoder on a simple object (like a button), it will be clicked.
- If you press the encoder on a complex object (like a list, message box, etc.) the object will go to edit mode where by turning the encoder you can navigate inside the object.
- To leave edit mode press long the button.

To use an *Encoder* (similarly to the *Keypads*) the objects should be added to groups.

```
indev_drv.type = LV_INDEV_TYPE_ENCODER;
indev_drv.read_cb = my_input_read;
...

bool encoder_read(lv_indev_drv_t * drv, lv_indev_data_t*data){
   data->enc_diff = enc_get_new_moves();

   if(enc_pressed()) data->state = LV_INDEV_STATE_PR;
   else data->state = LV_INDEV_STATE_REL;

   return false; /*No buffering now so no more data read*/
}
```

#### **Button**

Buttons mean external "hardware" buttons next to the screen which are assigned to specific coordinates of the screen. If a button is pressed it will simulate the pressing on the assigned coordinate. (Similarly to a touchpad)

To assign buttons to coordinates use  $lv\_indev\_set\_button\_points(my\_indev, points\_array).points\_array should look like const <math>lv\_point\_t$  points\_array[] = {  $\{12,30\},\{60,90\},\ldots\}$ 

```
indev drv.type = LV INDEV TYPE BUTTON;
indev drv.read cb = my input read;
bool button_read(lv_indev_drv_t * drv, lv_indev_data_t*data){
    static uint32 t last btn = 0; /*Store the last pressed button*/
    int btn_pr = my_btn_read();
                                   /*Get the ID (0,1,2...) of the pressed button*/
                                   /*Is there a button press? (E.g. -1 indicated no.
    if(btn pr >= 0) {
→button was pressed)*/
      last btn = btn pr;
                                    /*Save the ID of the pressed button*/
       data->state = LV INDEV STATE PR; /*Set the pressed state*/
    } else {
      data->state = LV INDEV STATE REL; /*Set the released state*/
                                    /*Save the last button*/
   data->btn = last btn;
    return false;
                                     /*No buffering now so no more data read*/
}
```

#### Other features

Besides read\_cb a feedback\_cb callback can be also specified in lv\_indev\_drv\_t. feedback\_cb is called when any type of event is sent by the input devices. (independently from its type). It gives the opportunity to make feedback for the user e.g. to play a sound on LV EVENT CLICK.

The default value of the following parameters can be set in  $lv\_conf.h$  but the default value can be overwritten in  $lv\_indev\_drv\_t$ :

- drag\_limit Number of pixels to slide before actually drag the object
- drag\_throw Drag throw slow-down in [%]. Greater value means faster slow-down
- long\_press\_time Press time to send LV\_EVENT\_LONG\_PRESSED (in milliseconds)
- long\_press\_rep\_time Interval of sending LV\_EVENT\_LONG\_PRESSED\_REPEAT (in milliseconds)
- read\_task pointer to the lv\_task which reads the input device. It parameters can be changed by lv\_task\_...() functions

Every Input device is associated with a display. By default, a new input device is added to the lastly created or the explicitly selected (using  $lv\_disp\_set\_default()$ ) display. The associated display is stored and can be changed in disp field of the driver.

#### **API**

Input Device HAL interface layer header file

# **Typedefs**

```
typedef uint8_t lv_indev_type_t
```

# typedef uint8\_t lv\_indev\_state\_t

# typedef struct \_lv\_indev\_drv\_t lv\_indev\_drv\_t

Initialized by the user and registered by 'lv\_indev\_add()'

# typedef struct \_lv\_indev\_proc\_t lv\_indev\_proc\_t

Run time data of input devices Internally used by the library, you should not need to touch it.

# typedef struct \_lv\_indev\_t lv\_indev\_t

The main input device descriptor with driver, runtime data ('proc') and some additional information

#### **Enums**

# enum [anonymous]

Possible input device types

Values:

# LV\_INDEV\_TYPE\_NONE

Uninitialized state

# LV\_INDEV\_TYPE\_POINTER

Touch pad, mouse, external button

## LV INDEV TYPE KEYPAD

Keypad or keyboard

# LV\_INDEV\_TYPE\_BUTTON

External (hardware button) which is assigned to a specific point of the screen

# LV INDEV TYPE ENCODER

Encoder with only Left, Right turn and a Button

#### enum [anonymous]

States for input devices

Values:

```
LV INDEV STATE REL = 0
```

LV INDEV STATE PR

#### **Functions**

# void lv\_indev\_drv\_init(lv\_indev\_drv\_t \*driver)

Initialize an input device driver with default values. It is used to surly have known values in the fields ant not memory junk. After it you can set the fields.

#### **Parameters**

• driver: pointer to driver variable to initialize

# lv\_indev\_t \*lv\_indev\_drv\_register(lv\_indev\_drv\_t \*driver)

Register an initialized input device driver.

Return pointer to the new input device or NULL on error

#### **Parameters**

• driver: pointer to an initialized 'lv indev drv t' variable (can be local variable)

# void lv\_indev\_drv\_update(lv\_indev\_t \*indev, lv\_indev\_drv\_t \*new\_drv)

Update the driver in run time.

#### **Parameters**

- indev: pointer to a input device. (return value of lv\_indev\_drv\_register)
- new\_drv: pointer to the new driver

```
lv_indev_t *lv_indev_get_next(lv_indev_t *indev)
```

Get the next input device.

**Return** the next input devise or NULL if no more. Give the first input device when the parameter is NULL

#### **Parameters**

• indev: pointer to the current input device. NULL to initialize.

```
bool lv_indev_read(lv_indev_t *indev, lv_indev_data_t *data)
```

Read data from an input device.

Return false: no more data; true: there more data to read (buffered)

#### **Parameters**

- indev: pointer to an input device
- data: input device will write its data here

# struct lv indev data t

#include <lv\_hal\_indev.h> Data structure passed to an input driver to fill

#### **Public Members**

```
lv_point_t point
```

For LV\_INDEV\_TYPE\_POINTER the currently pressed point

uint32 t **key** 

For LV\_INDEV\_TYPE\_KEYPAD the currently pressed key

uint32 t btn id

For LV\_INDEV\_TYPE\_BUTTON the currently pressed button

int16\_t enc\_diff

For LV\_INDEV\_TYPE\_ENCODER number of steps since the previous read

lv indev state t state

LV INDEV STATE REL or LV INDEV STATE PR

#### struct lv indev drv t

#include <lv\_hal\_indev.h> Initialized by the user and registered by 'lv\_indev\_add()'

#### **Public Members**

```
lv_indev_type_t type
```

< Input device type Function pointer to read input device data. Return 'true' if there is more data to be read (buffered). Most drivers can safely return 'false'

```
bool (*read cb)(struct lv indev drv t *indev drv, lv indev data t *data)
```

void (\*feedback\_cb)(struct \_lv\_indev\_drv\_t \*, uint8\_t)

Called when an action happened on the input device. The second parameter is the event from lv event t

lv\_indev\_drv\_user\_data\_t user\_data

# struct \_\_disp\_\_t \*disp

< Pointer to the assigned display Task to read the periodically read the input device

## lv\_task\_t \*read\_task

Number of pixels to slide before actually drag the object

# uint8\_t drag\_limit

Drag throw slow-down in [%]. Greater value means faster slow-down

## uint8 t drag throw

Long press time in milliseconds

# uint16\_t long\_press\_time

Repeated trigger period in long press [ms]

uint16 t long press rep time

# struct \_lv\_indev\_proc\_t

 $\#include < lv\_hal\_indev.h >$  Run time data of input devices Internally used by the library, you should not need to touch it.

#### **Public Members**

```
lv_indev_state_t state
```

Current state of the input device.

## lv\_point\_t act\_point

Current point of input device.

# lv\_point\_t last\_point

Last point of input device.

#### lv point t vect

Difference between act point and last point.

lv\_point\_t drag\_sum

lv point t drag throw vect

struct \_lv\_obj\_t \*act\_obj

struct \_lv\_obj\_t \*last\_obj

struct <u>lv obj t</u> \*last pressed

uint8 t drag limit out

uint8\_t drag\_in\_prog

struct \_lv\_indev\_proc\_t::[anonymous]::[anonymous] pointer

lv\_indev\_state\_t last\_state

uint32\_t last\_key

struct \_lv\_indev\_proc\_t::[anonymous]::[anonymous] keypad

union \_lv\_indev\_proc\_t::[anonymous] types

# uint32\_t pr\_timestamp

Pressed time stamp

# uint32\_t longpr\_rep\_timestamp

Long press repeat time stamp

```
uint8_t long_pr_sent
uint8_t reset_query
uint8_t disabled
uint8_t wait_until_release
struct lv indev t
```

 $\#include < lv\_hal\_indev.h >$  The main input device descriptor with driver, runtime data ('proc') and some additional information

#### **Public Members**

#### Tick interface

The LittlevGL needs a system tick to know the elapsed time for animation and other task.

You need to call the lv\_tick\_inc(tick\_period) function periodically and tell the call period in milliseconds. For example, if called in every millisecond: lv tick inc(1).

lv\_tick\_inc should be called in a higher priority routine than lv\_task\_handler() (e.g. in an interrupt) to precisely know the elapsed milliseconds even if the execution of lv\_task\_handler takes longer
time.

With FreeRTOS lv\_tick\_inc can be called in vApplicationTickHook.

On Linux based operation system (e.g. on Raspberry) lv\_tick\_inc can be called in a thread:

#### API

Provide access to the system tick with 1 millisecond resolution

#### **Functions**

#### Task Handler

To handle the tasks of LittlevGL you need to call lv task handler() periodically in one of the followings:

- while(1) of main() function
- timer interrupt periodically (low priority then lv tick inc())
- an OS task periodically

The timing is not critical but it should be about 5 milliseconds to keep the system responsive.

Example:

```
while(1) {
    lv_task_handler();
    my_delay_ms(5);
}
```

To learn more about task visit the *Tasks* section.

# Sleep management

The MCU can go to sleep when no user input happens. In this case the main while(1) should look like this:

You should also add these lines to your input device read function if a press happens:

```
lv_tick_inc(LV_DISP_DEF_REFR_PERIOD);  /*Force task execution on wake-up*/
timer_start();  /*Restart the timer where lv_tick_inc() is_u
called*/
lv_task_handler();  /*Call `lv_task_handler()` manually to process_u
the press event*/
```

In addition to lv\_disp\_get\_inactive\_time() you can check lv\_anim\_count\_running() to see if every animations are finished.

#### Operating system and interrupts

LittlevGL is **not thread-safe** by default.

However, in the following case it's valid to call LittlevGL related functions:

- In events. Learn more in Events.
- In lv tasks. Learn more in Tasks.

#### Tasks and threads

If you need to use real tasks or threads you need a mutex which should be taken before the call of lv\_task\_handler and released after it. In addition, you have to use to that mutex in other tasks and threads around every LittlevGL (lv\_...) related function call and code. This way you can use LittlevGL in a real multitasking environment. Just use a mutex to avoid the concurrent calling of LittlevGL functions.

#### Interrupts

Try to avoid calling LittlevGL function from an interrupts (except <code>lv\_tick\_inc()</code>). But if you really need to do this you have to disable the interrupt which uses LittlevGL functions while <code>lv\_task\_handler</code> is running. It's a better approach to set a flag or other value and periodically check it in an <code>lv\_task</code>.

#### Logging

LittlevGL has built-in log module to inform the user about what is happening in the library.

#### Log level

To enable logging set LV USE LOG 1 in lv conf.h and set LV LOG LEVEL to one of the following values:

- LV\_LOG\_LEVEL\_TRACE A lot of logs to give detailed information
- LV\_LOG\_LEVEL\_INFO Log important events
- LV\_LOG\_LEVEL\_WARN Log if something unwanted happened but didn't cause a problem
- LV\_LOG\_LEVEL\_ERROR Only critical issue, when the system may fail
- LV\_LOG\_LEVEL\_NONE Do not log anything

The events which have higher level than the set log level will be logged too. E.g. if you LV\_LOG\_LEVEL\_WARN, errors will be also logged.

## Logging with printf

If your system supports printf you just need to enable LV\_LOG\_PRINTF in *lv\_conf.h* to send the logs with printf.

### **Custom log function**

If you can't use printf or want to use a custom function to log you can register a "logger" callback with lv log register print().

For example:

```
void my_log_cb(lv_log_level_t level, const char * file, int line, const char * dsc)
 /*Send the logs via serial port*/
 if(level == LV_LOG_LEVEL_ERROR) serial_send("ERROR: ");
 if(level == LV LOG LEVEL WARN) serial send("WARNING: ");
 if(level == LV_LOG_LEVEL_INFO) serial_send("INFO: ");
 if(level == LV LOG LEVEL TRACE) serial send("TRACE: ");
 serial send("File: ");
 serial_send(file);
 char line str[8];
 sprintf(line_str,"%d", line);
 serial_send("#");
 serial_send(line_str);
 serial_send(": ");
 serial send(dsc);
 serial_send("\n");
}
lv_log_register_print(my_log_cb);
```

#### Add logs

You can also use the log module via the LV LOG TRACE/INFO/WARN/ERROR(description) functions.

# **3.15.3** Overview

# **Objects**

In the LittlevGL the **basic building blocks** of a user interface are the objects, also called *Widgets*. For example a *Button*, *Label*, *Image*, *List*, *Chart* or *Text area*.

Check all the *Object types* here.

# **Object attributes**

#### Basic attributes

The objects have basic attributes which are common independently from their type:

- Position
- Size
- Parent
- Drag enable
- Click enable etc.

You can set/get this attributes with  $lv_obj_set_...$  and  $lv_obj_get_...$  functions. For example:

To see all the available functions visit the Base object's documentation.

#### **Specific attributes**

The object types have special attributes too. For example, a slider has

- Min. max. values
- Current value
- Custom styles

For these attributes every object type have unique API functions. For example for a slider:

The API of the object types are described in their Documentation but you can also check the respective header files (e.g.  $lv\_objx/lv\_slider.h$ )

#### Object's working mechanisms


#### Parent-child structure

A parent object can be considered as the container of its children. Every object has exactly one parent object (except screens) but a parent can have unlimited number of children. There is no limitation for the type of the parent but there are typical parent (e.g. button) and typical child (e.g. label) objects.


# Moving together

If the position of the parent is changed the children will move with the parent. Therefore all positions are relative to the parent.

The (0;0) coordinates mean the objects will remain in the top left-hand corner of the parent independently from the position of the parent.

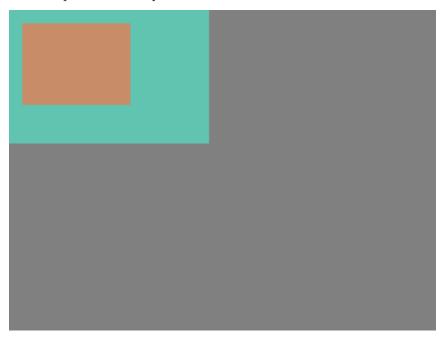


Modify the position of the parent:

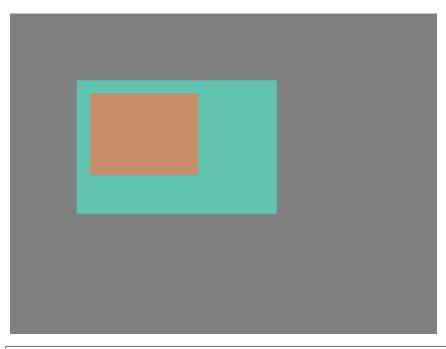

(For simplicity the adjusting of colors of the objects is not shown in the example.)

# Visibility only on the parent

If a child partially or fully out of its parent then the parts outside will not be visible.

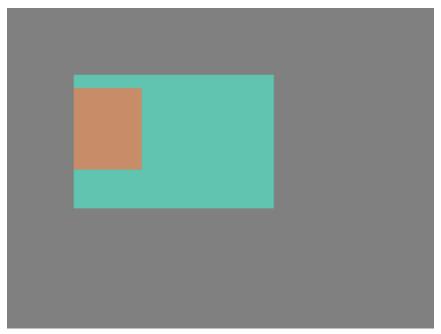

```
lv_obj_set_x(obj1, -30); /*Move the child a little bit of the parent*/
```

#### Create - delete objects

In LittlevGL objects can be created and deleted dynamically in run-time. It means only the currently created objects consume RAM. For example, if you need a chart you can create it when required and delete it when it is not visible or necessary.

Every objects type has its own create function with a unified prototype. It needs two parameters:

- a pointer the parent object. To create a screen give *NULL* as parent.
- optionally a pointer to an other object with the same type to copy it. Can be *NULL* to not copy an other object.

Independently from the object type a common variable type  $lv\_obj\_t$  is used. This pointer can be used later to set or get the attributes of the object.

The create functions look like this:

```
lv_obj_t * lv_ <type>_create(lv_obj_t * parent, lv_obj_t * copy);
```

There is a common **delete** function for all object types. It deletes the object and all of its children.

```
void lv_obj_del(lv_obj_t * obj);
```

 $\lower lv\_obj\_del$  will delete the object immediately. If for any reason you can't delete the object immediately you can use  $\lower lv\_obj\_del\_async(obj)$ . It is useful e.g. is you want to delete the parent of an object in  $\lower lv\_even lv_even lv_e$ 

You can delete only the children of an object but leave the object itself "alive":

```
void lv_obj_clean(lv_obj_t * obj);
```

#### Screen - the most basic parent

The screens are special objects which have no parent object. So it is created like:

```
lv_obj_t * scr1 = lv_obj_create(NULL, NULL);
```

Always there is an active screen on display. By default, the library creates and loads one. To get the currently active screen use the  $lv\_scr\_act()$  function to load new one use  $lv\_scr\_load(scr1)$ .

Screens can be created with any object type. For example, a Base object or an image to make a wallpaper.

Screens are created on the *default display*. The *default screen* is the lastly registered screen with lv\_disp\_drv\_register (if there is only screen then that one) or you can explicitly selected display with lv\_disp\_set\_default(disp). lv\_scr\_act() and lv\_scr\_load() operate on the currently default screen.

Visit Multi display support to learn more.

# Layers

#### Order of creation

The earlier created object (and its children) will be drawn earlier (nearer to the background). In other words, the lastly created object will be on the top among its siblings. It is very important, the order is calculated among the objects on the same level ("siblings").

Layers can be added easily by creating 2 objects (which can be transparent). Firstly 'A' and secondly 'B'. 'A' and every object on it will be in the background and can be covered by 'B' and its children.



```
/*Create a screen*/
lv_obj_t * scr = lv_obj_create(NULL, NULL);
lv_scr_load(scr);
                        /*Load the screen*/
/*Create 2 buttons*/
lv obj t * btn1 = lv btn create(scr, NULL);
                                                 /*Create a button on the screen*/
lv btn set fit(btn1, true, true);
                                                   /*Enable to automatically set the
⇒size according to the content*/
lv_obj_set_pos(btn1, 60, 40);
                                                     /*Set the position of the...
→button*/
lv_obj_t * btn2 = lv_btn_create(scr, btn1);
                                                   /*Copy the first button*/
lv obj set pos(btn2, 180, 80);
                                                 /*Set the position of the button*/
/*Add labels to the buttons*/
lv_obj_t * label1 = lv_label_create(btn1, NULL);
                                                       /*Create a label on the first
→button*/
lv_label_set_text(label1, "Button 1");
                                                       /*Set the text of the label*/
lv obj t * label2 = lv label create(btn2, NULL);
                                                       /*Create a label on the
→second button*/
lv_label_set_text(label2, "Button 2");
                                                         /*Set the text of the
→label*/
/*Delete the second label*/
lv obj del(label2);
```

# Bring to the foreground

There are several ways to bring an object to the foreground:

• Use lv\_obj\_set\_top(obj, true). If obj or any of its children is clicked then LittlevGL will

automatically bring the object to the foreground. It works similarly to the windows on PC. When a window in the background is clicked it will come to the foreground automatically.

- Use lv\_obj\_move\_foreground(obj) and lv\_obj\_move\_background(obj) to explicitly tell the library to bring an object to the foreground or move to the background.
- When lv\_obj\_set\_parent(obj, new\_parent) is used obj will be on the foreground on the new parent.

### Top and sys layer

There are two special layers called <code>layer\_top</code> and <code>layer\_sys</code>. Both of them is visible and the same on all screens of a display. <code>layer\_top</code> is on top of "normal screen" and <code>layer\_sys</code> is on top of <code>layer\_top</code> too.

layer\_top can be used by the user to create some content visible everywhere. For example a menu bar, a pop-up, etc. If the click attribute is enabled then layer\_top will absorb all user click and acts as a modal.

```
lv_obj_set_click(lv_layer_top(), true);
```

layer sys is used by LittlevGL. For example, it places the mouse cursor there to be sure it's always visible.

### **Events**

In LittlevGL events are triggered if something happens which might be interesting to the user. For example an object

- is clicked
- is dragged
- its value has changed, etc.

The user can assign a callback function to an object to see these event. In the practice it looks like this:

(continues on next page)

(continued from previous page)

```
printf("Long press\n");
    break;

case LV_EVENT_LONG_PRESSED_REPEAT:
    printf("Long press repeat\n");
    break;

case LV_EVENT_RELEASED:
    printf("Released\n");
    break;

/*Etc.*/
}
```

More objects can use the same event callback.

# **Event types**

The following event types exist:

### **Generic events**

Any object can receive these events independently from their type. I.e. these events are sent to Buttons, Labels, Sliders, etc.

### Input device related

Sent when an object is pressed, released, etc by the user. They are used for *Keypad*, *Encoder* and *Button* input devices as well not only for *Pointers*. Visit the *Overview of input devices* section to learn more about them.

- LV\_EVENT\_PRESSED The object has been pressed
- LV\_EVENT\_PRESSING The object is being pressed (sent continuously while pressing)
- LV EVENT PRESS LOST Still pressing but slid from the objects
- LV\_EVENT\_SHORT\_CLICKED Released before lLV\_INDEV\_LONG\_PRESS\_TIME. Not called if dragged.
- LV\_EVENT\_LONG\_PRESSED Pressing for LV\_INDEV\_LONG\_PRESS\_TIME time. Not called if dragged.
- LV\_EVENT\_LONG\_PRESSED\_REPEAT Called after LV\_INDEV\_LONG\_PRESS\_TIME in every LV\_INDEV\_LONG\_PRESS\_REP\_TIME ms. Not called if dragged.
- LV\_EVENT\_CLICKED Called on release if not dragged (regardless to long press)
- LV\_EVENT\_RELEASED Called in every case when the object has been released even if it was dragged. Not called if slid from the object while pressing and released outside of the object. In this case, LV\_EVENT\_PRESS\_LOST is sent.

### Pointer related

These events are sent only by pointer-like input devices (E.g. mouse or touchpad)

- LV\_EVENT\_DRAG\_BEGIN Dragging of the object has started
- LV\_EVENT\_DRAG\_END Dragging finished (including drag throw)
- LV\_EVENT\_DRAG\_THROW\_BEGIN Drag throw started (released after drag with "momentum")

# Keypad and encoder related

These events are sent by keypad and encoder input devices. Learn more about *Groups* in [overview/indev](Input devices) section.

- LV\_EVENT\_KEY A Key is sent to the object. Typically when it was pressed or repeated after a long press
- LV\_EVENT\_FOCUSED The object is focused in its group
- LV\_EVENT\_DEFOCUSED The object is defocused in its group

### **General** events

Other general events sent by the library.

• LV EVENT DELETE The object is being deleted. Free the related user-allocated data.

## Special events

These events are specific to a particular object type.

- LV\_EVENT\_VALUE\_CHANGED The object value has changed (e.g. for a Slider)
- LV\_EVENT\_INSERT Something is inserted to the object. (Typically to a Text area)
- LV\_EVENT\_APPLY "Ok", "Apply" or similar specific button has clicked. (Typically from a Keyboard object)
- LV\_EVENT\_CANCEL "Close", "Cancel" or similar specific button has clicked. (Typically from a *Keyboard* object)
- LV\_EVENT\_REFRESH Query to refresh the object. Never sent by the library but can be sent by the user.

To see exactly which events are used by an object type see the particular Object type's documentation.

### **Custom data**

Some events might contain custom data. For example  $LV\_EVENT\_VALUE\_CHANGED$  in some cases tells the new value. For more info see the particular *Object type's documentation*. To get the custom data in the event callback use  $lv\_event\_get\_data()$ .

The type of the custom data depends on the sending object but if its a

• single number then it's uint32 t \* or intt32 t \*

• text then char \* or const char \*

### Send events manually

To manually send events to an object use lv\_event\_send(obj, LV\_EVENT\_..., &custom\_data).

It can be used for example to manually close a message box by simulating a button press:

```
/*Simulate the press of the first button (indexes start from zero)*/
uint32_t btn_id = 0;
lv_event_send(mbox, LV_EVENT_VALUE_CHANGED, &btn_id);
```

Or to ask refresh in a generic way.

```
lv_event_send(label, LV_EVENT_REFRESH, NULL);
```

## **Styles**

Styles are used to set the appearance of the objects. A style is a structure variable with attributes like colors, paddings, opacity, font etc.

There is common style type called lv\_style\_t for every object type.

By setting the fields of the <code>lv\_style\_t</code> variables and assigning to to an object you can influence the appearance of the objects.

**Important:** The objects store only a pointer to a style so the style cannot be a local variable which is destroyed after the function exists. **You should use static, global or dynamically allocated variables.** 

### Use the styles

The objects have a *Main style* which determines the appearance of their background or main part. However, some object types have additional styles too.

Some object has only one style. E.g.

- Label
- Image
- Line, etc

For example, a slider has 3 styles:

- Background (main style)
- Indicator
- Know

Every object type has its own style set/get functions. For example

```
const lv_style_t * btn_style = lv_btn_get_style(btn, LV_BTN_STYLE_REL);
lv_btn_set_style(btn, LV_BTN_STYLE_REL, &new_style);
```

To see the styles supported by an object type ( $LV_{-} < OBJ_{-} TYPE > STYLE < STYLE_TYPE >$ ) check the documentation of the particular  $Object\ type$ .

If you **modify a style which is already used** by one or more objects then the objects have to be notified about the style is changed. You have two options to do that:

```
/*Notify an object about its style is modified*/
void lv_obj_refresh_style(lv_obj_t * obj);

/*Notify all objects with a given style. (NULL to notify all objects)*/
void lv_obj_report_style_mod(void * style);
```

lv\_obj\_report\_style\_mod can refresh only the Main styles.

### Inherit styles

If the *Main style* of an object is **NULL** then its style will be inherited from its parent's style. It makes easier to create a consistent design. Don't forget a style describes a lot of properties at the same time. So for example, if you set a button's style and create a label on it with **NULL** style then the label will be rendered according to the button's style. In other words, the button makes sure its children will look well on it.

Setting the <code>glass</code> style property will prevent inheriting that style. You should use it if the style is transparent so that its children use colors and others from its grandparent.

### Style properties

A style has 5 main parts: common, body, text, image and line. An object will use those fields which are relevant to it. For example, *Lines* don't care about the *letter\_space*. To see which fields are used by an object type see their *Documentation*.

The fields of a style structure are the followings:

# **Common properties**

• glass 1: Do not inherit this style

# Body style properties

Used by the rectangle-like objects

- body.main\_color Main color (top color)
- body.grad\_color Gradient color (bottom color)

- body.radius Corner radius. (set to LV RADIUS CIRCLE to draw circle)
- body.opa Opacity (0..255 or  $LV\_OPA\_TRANSP$ ,  $LV\_OPA\_10$ ,  $LV\_OPA\_20$  ..  $LV\_OPA\_COVER$ )
- body.border.color Border color
- body.border.width Border width
- body.border.part Border parts (LV\_BORDER\_LEFT/RIGHT/TOP/BOTTOM/FULL or 'OR'ed values)
- body.border.opa Border opacity (0..255 or LV\_OPA\_TRANSP, LV\_OPA\_10, LV\_OPA\_20 ... LV\_OPA\_COVER)
- body.shadow.color Shadow color
- body.shadow.width Shadow width
- body.shadow.type Shadow type (LV\_SHADOW\_BOTTOM/FULL)
- body.padding.top Top padding
- body.padding.bottom Bottom padding
- body.padding.left Left padding
- body.padding.right Right padding
- body.padding.inner Inner padding (between content elements or children)

## Text style properties

Used by the objects which show texts

- text.color Text color
- text.sel\_color Selected text color
- text.font Pointer to a font
- text.opa Text opacity (0..255 or LV\_OPA\_TRANSP, LV\_OPA\_10, LV\_OPA\_20 ... LV\_OPA\_COVER\*)
- text.letter\_space Letter space

## Image style properties

Used by image-like objects or icons on objects

- image.color Color for image re-coloring based on the pixels brightness
- image.intense Re-color intensity (0..255 or LV\_OPA\_TRANSP, LV\_OPA\_10, LV\_OPA\_20 ... LV\_OPA\_COVER)
- image.opa Image opacity (0..255 or  $LV\_OPA\_TRANSP$ ,  $LV\_OPA\_10$ ,  $LV\_OPA\_20$  ...  $LV\_OPA\_COVER$ )

## Line style properties

Used by objects containing lines or line-like elements

- line.color Line color
- line.width Line width
- line.opa Line opacity (0..255 or  $LV\_OPA\_TRANSP$ ,  $LV\_OPA\_10$ ,  $LV\_OPA\_20$  ...  $LV\_OPA\_COVER$ )

# **Built-in styles**

There are several built-in styles in the library:



As you can see there is a style for screens, for buttons, plain and pretty styles and transparent styles as well.

The lv\_style\_transp, lv\_style\_transp\_fit and lv\_style\_transp\_tight differ only in paddings: for lv\_style\_transp\_tight all paddings are zero, for lv\_style\_transp\_fit only hor and ver paddings are zero but has inner padding.

**Important:** Transparent built-in styles have glass = 1 by default which means these styles (e.g. their colors) won't be inherited by children.

The built in styles are global lv style t variables. You can use them like:

```
lv_btn_set_style(obj, LV_BTN_STYLE_REL, &lv_style_btn_rel)
```

### Create new styles

You can modify the built-in styles or you can create new styles.

When creating new styles it's recommended to first copy a built-in style with lv\_style\_copy(&dest\_style, &src\_style) to be sure all fields are initialized with a proper value.

Do not forget the created style should be **static** or global. For example:

```
static lv_style_t my_red_style;
lv_style_copy(&my_red_style, &lv_style_plain);
my_red_style.body.main_color = LV_COLOR_RED;
my_red_style.body.grad_color = LV_COLOR_RED;
```

### Style animations

You change the styles with animations using <code>lv\_style\_anim\_...()</code> function. Two styles are required to represent the *start* and *end* state, and a third style which will be animated. Here is an example to show how it works.

To see the whole API of style animations see lv\_core/lv\_style.h.

Here you can learn more about the Animations.

### Style example

The example below demonstrates the usage of styles.



(continues on next page)

(continued from previous page)

```
style1.body.border.color = LV COLOR GRAY;
style1.body.border.width = 2;
style1.body.border.opa = LV_OPA_50;
style1.body.padding.left = 5;
                                         /*Horizontal padding, used by the bar
→indicator below*/
style1.body.padding.right = 5;
style1.body.padding.top = 5;
                                        /*Vertical padding, used by the bar indicator...
→below*/
style1.body.padding.bottom = 5;
style1.text.color = LV COLOR RED;
/*Create a simple object*/
lv obj t *obj1 = lv obj create(lv scr act(), NULL);
lv_obj_set_style(obj1, &style1);
                                                         /*Apply the created style*/
lv_obj_set_pos(obj1, 20, 20);
                                                         /*Set the position*/
/*Create a label on the object. The label's style is NULL by default*/
lv obj t *label = lv_label_create(obj1, NULL);
lv_obj_align(label, NULL, LV_ALIGN_CENTER, 0, 0);
                                                         /*Align the label to the...
→middle*/
/*Create a bar*/
lv obj t *bar1 = lv bar create(lv scr act(), NULL);
lv_bar_set_style(bar1, LV_BAR_STYLE_INDIC, &style1);
                                                         /*Modify the indicator's...
→style*/
lv bar set value(bar1, 70);
                                                         /*Set the bar's value*/
```

### **Themes**

To create styles for your GUI is challenging because you need a deeper understanding of the library and you need to have some design skills. In addition, it takes a lot of time to create so many styles.


To speed up the design part themes are introduced. A theme is a style collection which contains the required styles for every object type. For example 5 styles for buttons to describe their 5 possible states. Check the Existing themes or try some in the Live demo section.

To be more specific a theme is a structure variable which contains a lot of ly style t \* fields. For buttons:

```
theme.btn.rel /*Released button style*/
theme.btn.pr /*Pressed button style*/
theme.btn.tgl_rel /*Toggled released button style*/
theme.btn.tgl_pr /*Toggled pressed button style*/
theme.btn.ina /*Inactive button style*/
```

A theme can initialized by: lv\_theme\_<name>\_init(hue, font). Where hue is a Hue value from HSV color space (0..360) and font is the font applied in the theme (NULL to use the LV\_FONT\_DEFAULT)

When a theme is initialized its styles can be used like this:

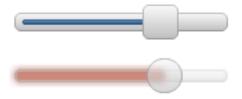

```
/*Create a default slider*/
lv_obj_t *slider = lv_slider_create(lv_scr_act(), NULL);
lv_slider_set_value(slider, 70);
lv_obj_set_pos(slider, 10, 10);

/*Initialize the alien theme with a reddish hue*/
lv_theme_t *th = lv_theme_alien_init(10, NULL);

/*Create a new slider and apply the themes styles*/
slider = lv_slider_create(lv_scr_act(), NULL);
lv_slider_set_value(slider, 70);
lv_obj_set_pos(slider, 10, 50);
lv_slider_set_style(slider, LV_SLIDER_STYLE_BG, th->slider.bg);
lv_slider_set_style(slider, LV_SLIDER_STYLE_INDIC, th->slider.indic);
lv_slider_set_style(slider, LV_SLIDER_STYLE_KNOB, th->slider.knob);
```

You can ask the library to automatically apply the styles from a theme when you create new objects. To do this use lv\_theme\_set\_current(th);

```
/*Initialize the alien theme with a reddish hue*/
lv_theme_t *th = lv_theme_alien_init(10, NULL);
lv_theme_set_current(th);

/*Create a slider. It will use the style from teh current theme.*/
slider = lv_slider_create(lv_scr_act(), NULL);
```

Themes can be enabled or disabled one by on in lv conf.h.

### Live update

By default if lv\_theme\_set\_current(th) is called again it won't refresh the styles of the existing objects. To enable live update of themes enable LV THEME LIVE UPDATE in lv conf.h.

Live update will update only those objects whose style are from the theme, i.e. created after the first call of lv\_theme\_set\_current(th) or the styles were set manually

### Input devices

Input devices in general means:

- Pointer-like input devices like touchpad or mouse
- Keypads like a normal keyboard or simple numpad
- Encoders with left/right turn and push options
- External hardware buttons which are assigned to specific points on the screen

Important: Before reading further, please read the [Porting](/porting/indev) section of Input devices

#### **Pointers**

Pointer input devices can have a cursor. (typically for mouses)

# Keypad and encoder

You can fully control the user interface without touchpad or mouse using a keypad or encoder(s). it works similarly when you press the TAB key on PC to select the element in an application or a web page.

### **Groups**

The objects, you want to control with keypad or encoder, needs to be added to a *Group*. In every group, there is exactly one focused object which receives the pressed keys or the encoder actions. For example, if a *Text area* is focused and you press some letter on a keyboard, the keys will be sent and inserted into the Text area. Or if a *Slider* is focused and you press the left or right arrows the slider's value will be changed.

You need to associate an input device with a group. An input device can send the keys to only one group but a group can receive data from more than one input devices too.

To create a group use  $lv\_group\_t g = lv\_group\_create()$  and to add an object to the group use  $lv\_group\_add\_obj(g, obj)$ .

The associate a group with an input device use  $lv\_indev\_set\_group(indev, g)$ , where indev is the return value of  $lv\_indev\_drv\_register()$ 

# **Keys**

There are some predefined keys which have special meaning:

- LV\_KEY\_NEXT Focus on the next object
- LV\_KEY\_PREV Focus on the previous object
- LV\_KEY\_ENTER Triggers LV EVENT PRESSED/CLICKED/LONG PRESSED etc events
- LV\_KEY\_UP Increase value or move upwards
- LV\_KEY\_DOWN Decrease value or move downwards
- LV KEY RIGHT Increase value or move the the right

- LV KEY LEFT Decrease value or move the the left
- LV\_KEY\_ESC Close or exit (E.g. close a Drop down list)
- LV\_KEY\_DEL Delete (E.g. a character on the right in a Text area)
- LV\_KEY\_BACKSPACE Delete a character on the left (E.g. in a Text area)
- LV\_KEY\_HOME Go to the beginning/top (E.g. in a Text area)
- LV KEY END Go to the end (E.g. in a Text area))

The most important special keys are: LV\_KEY\_NEXT/PREV, LV\_KEY\_ENTER and LV\_KEY\_UP/DOWN/LEFT/RIGHT. In your raed\_cb function you should translate some of your keys to these special keys to navigate in the group and interact with the selected object.

Usually, it's enough to use only  $LV\_KEY\_LEFT/RIGHT$  because most of the objects can be fully controlled with them.

With an encoder, you should use only LV KEY LEFT, LV KEY RIGHT and LV KEY ENTER.

## Edit and navigate mode

With keypads, there are plenty of keys so it's easy to navigate among the objects and edit them. However, the encoders have a very limited number of "keys". To effectively support encoders too *Navigate* and *Edit* is created.

In *Navigate* mode the encoders LV\_KEY\_LEFT/RIGHT is translated to LV\_KEY\_NEXT/PREV. Therefore the next or previous object will be selected by turning the encoder. Pressing LV\_KEY\_ENTER will change to *Edit* mode.

In *Edit* mode LV\_KEY\_NEXT/PREV is used normally to edit the object. Depending on the object's type a short or long press of LV\_KEY\_ENTER changes back to *Navigate* mode. Usually object which can not be pressed (like a *Slider*) leaves *Edit* mode on short click but with object where short click has meaning (e.g. *Button*) long press is required.

## Styling the focused object

To visually highlight the focused element its Main style will be updated. By default, some orange color is mixed to the original colors of the style. A new style modifier callback be set by <code>lv\_group\_set\_style\_mod\_cb(g, my\_style\_mod\_cb)</code>. A style modifier callback receives a pointer to a caller group and pointer to a style to modify. The default style modifier looks like this (slightly simplified):

(continues on next page)

(continued from previous page)

```
/*Recolor text*/
style->text.color = lv_color_mix(style->text.color, LV_COLOR_ORANGE, LV_OPA_70);

/*Add some recolor to the images*/
if(style->image.intense < LV_OPA_MIN) {
    style->image.color = LV_COLOR_ORANGE;
    style->image.intense = LV_OPA_40;
}
}
```

This style modifier callback is used for keypads and encoder in *Navigate* mode. For the *Edit* mode and other callback is used which can be set with <code>lv\_group\_set\_style\_mod\_edit\_cb()</code>. By default, it has a greenish color.

#### Live demo

Try this Live demo to see how a group and touchpad-less navigation works in the practice.

### **API**

### Input device

### **Functions**

```
void lv indev init(void)
```

Initialize the display input device subsystem

```
void lv_indev_read_task(lv_task_t *task)
```

Called periodically to read the input devices

### **Parameters**

• task: pointer to the task itself

```
lv_indev_t *lv_indev_get_act(void)
```

Get the currently processed input device. Can be used in action functions too.

**Return** pointer to the currently processed input device or NULL if no input device processing right now

```
lv_indev_type_t lv_indev_get_type(const lv_indev_t*indev)
```

Get the type of an input device

Return the type of the input device from lv\_hal\_indev\_type\_t (LV\_INDEV\_TYPE\_...)

# Parameters

• indev: pointer to an input device

```
void lv_indev_reset(lv_indev_t *indev)
```

Reset one or all input devices

### **Parameters**

• indev: pointer to an input device to reset or NULL to reset all of them

# void lv\_indev\_reset\_long\_press(lv\_indev\_t \*indev)

Reset the long press state of an input device

#### **Parameters**

• indev proc: pointer to an input device

# void lv\_indev\_enable(lv\_indev\_t \*indev, bool en)

Enable or disable an input devices

#### **Parameters**

- indev: pointer to an input device
- en: true: enable; false: disable

# void lv\_indev\_set\_cursor(lv\_indev\_t \*indev, lv\_obj\_t \*cur\_obj)

Set a cursor for a pointer input device (for LV\_INPUT\_TYPE\_POINTER and LV\_INPUT\_TYPE\_BUTTON)

### **Parameters**

- indev: pointer to an input device
- cur obj: pointer to an object to be used as cursor

# void lv\_indev\_set\_group(lv\_indev\_t \*indev, lv\_group\_t \*group)

Set a destination group for a keypad input device (for LV\_INDEV\_TYPE\_KEYPAD)

#### **Parameters**

- indev: pointer to an input device
- group: point to a group

# void lv\_indev\_set\_button\_points(lv\_indev\_t \*indev, const lv\_point\_t \*points)

Set the an array of points for LV\_INDEV\_TYPE\_BUTTON. These points will be assigned to the buttons to press a specific point on the screen

#### **Parameters**

- indev: pointer to an input device
- group: point to a group

# void lv\_indev\_get\_point(const lv\_indev\_t \*indev, lv\_point\_t \*point)

Get the last point of an input device (for LV\_INDEV\_TYPE\_POINTER and LV\_INDEV\_TYPE\_BUTTON)

### **Parameters**

- indev: pointer to an input device
- point: pointer to a point to store the result

# uint32\_t lv\_indev\_get\_key(const lv\_indev\_t \*indev)

Get the last pressed key of an input device (for LV\_INDEV\_TYPE\_KEYPAD)

**Return** the last pressed key (0 on error)

#### **Parameters**

• indev: pointer to an input device

# bool lv\_indev\_is\_dragging(const lv\_indev\_t \*indev)

Check if there is dragging with an input device or not (for LV\_INDEV\_TYPE\_POINTER and LV\_INDEV\_TYPE\_BUTTON)

Return true: drag is in progress

#### **Parameters**

• indev: pointer to an input device

# void lv\_indev\_get\_vect(const lv\_indev\_t \*indev, lv\_point\_t \*point)

Get the vector of dragging of an input device (for LV\_INDEV\_TYPE\_POINTER and LV\_INDEV\_TYPE\_BUTTON)

#### **Parameters**

- indev: pointer to an input device
- point: pointer to a point to store the vector

# void lv\_indev\_wait\_release(lv\_indev\_t \*indev)

Do nothing until the next release

### **Parameters**

• indev: pointer to an input device

# lv\_task\_t \*lv\_indev\_get\_read\_task(lv\_disp\_t \*indev)

Get a pointer to the indev read task to modify its parameters with lv\_task\_... functions.

Return pointer to the indev read refresher task. (NULL on error)

### **Parameters**

• indev: pointer to an inout device

# lv\_obj\_t \*lv\_indev\_get\_obj\_act(void)

Gets a pointer to the currently active object in index proc functions. NULL if no object is currently being handled or if groups aren't used.

Return pointer to currently active object

# **Groups**

### **Typedefs**

```
typedef uint8_t lv_key_t
typedef void (*lv_group_style_mod_cb_t)(struct _lv_group_t *, lv_style_t *)
typedef void (*lv_group_focus_cb_t)(struct _lv_group_t *)
typedef struct _lv_group_t lv group_t
```

Groups can be used to logically hold objects so that they can be individually focused. They are NOT for laying out objects on a screen (try lv\_cont for that).

```
typedef uint8_t lv_group_refocus_policy_t
```

### **Enums**

### enum [anonymous]

Values:

```
\label{eq:LV_KEY_UP} \begin{split} \textbf{LV\_KEY\_UP} &= 17 \\ \textbf{LV\_KEY\_DOWN} &= 18 \end{split}
```

```
LV_KEY_RIGHT = 19
    LV_KEY_LEFT = 20
    LV_KEY_ESC = 27
    LV_KEY_DEL = 127
    LV_KEY_BACKSPACE = 8
    LV_KEY_ENTER = 10
    LV_KEY_NEXT = 9
    LV KEY PREV = 11
    LV KEY HOME = 2
    LV_KEY_END = 3
enum [anonymous]
     Values:
    LV GROUP REFOCUS POLICY NEXT = 0
    LV\_GROUP\_REFOCUS\_POLICY\_PREV = 1
Functions
void lv_group_init(void)
    Init. the group module
    Remark Internal function, do not call directly.
lv_group_t *lv_group_create(void)
    Create a new object group
    Return pointer to the new object group
void lv group del(lv_group_t*group)
    Delete a group object
    Parameters
          • group: pointer to a group
void lv_group_add_obj (lv_group_t *group, lv_obj_t *obj)
    Add an object to a group
    Parameters
          • group: pointer to a group
          • obj: pointer to an object to add
void lv_group_remove_obj(lv_obj_t *obj)
    Remove an object from its group
    Parameters
          • obj: pointer to an object to remove
void lv group remove all objs(lv_group_t*group)
    Remove all objects from a group
    Parameters
```

• **group**: pointer to a group

# void lv\_group\_focus\_obj (lv\_obj\_t \*obj)

Focus on an object (defocus the current)

#### **Parameters**

• obj: pointer to an object to focus on

# void lv\_group\_focus\_next(lv\_group\_t \*group)

Focus the next object in a group (defocus the current)

#### **Parameters**

• group: pointer to a group

# void lv\_group\_focus\_prev(lv\_group\_t \*group)

Focus the previous object in a group (defocus the current)

### **Parameters**

• group: pointer to a group

# void lv\_group\_focus\_freeze(lv\_group\_t \*group, bool en)

Do not let to change the focus from the current object

#### **Parameters**

- group: pointer to a group
- en: true: freeze, false: release freezing (normal mode)

## lv\_res\_t lv\_group\_send\_data(lv\_group\_t \*group, uint32\_t c)

Send a control character to the focuses object of a group

Return result of focused object in group.

#### **Parameters**

- group: pointer to a group
- C: a character (use LV KEY .. to navigate)

$$\begin{tabular}{lll} void $lv\_group\_set\_style\_mod\_cb ($lv\_group\_t & *group, & lv\_group\_style\_mod\_cb\_t \\ & style\_mod\_cb) \end{tabular}$$

Set a function for a group which will modify the object's style if it is in focus

## Parameters

- group: pointer to a group
- style mod cb: the style modifier function pointer

$$\begin{tabular}{lll} void $lv\_group\_set\_style\_mod\_edit\_cb($lv\_group\_t & *group, & lv\_group\_style\_mod\_cb\_t \\ & style\_mod\_edit\_cb) \end{tabular}$$

Set a function for a group which will modify the object's style if it is in focus in edit mode

### **Parameters**

- group: pointer to a group
- style mod edit cb: the style modifier function pointer

# $\label{eq:cond_void_lv_group_t*group} \textbf{void} \ \textbf{lv\_group\_t*group\_} focus\_cb\_t \ focus\_cb)$

Set a function for a group which will be called when a new object is focused

#### **Parameters**

• group: pointer to a group

• focus cb: the call back function or NULL if unused

# void lv group set\_refocus policy(lv\_group\_t \*group\_lv\_group\_refocus\_policy\_t policy)

Set whether the next or previous item in a group is focused if the currently focussed obj is deleted.

#### **Parameters**

- group: pointer to a group
- new: refocus policy enum

# void lv\_group\_set\_editing(lv\_group\_t \*group, bool edit)

Manually set the current mode (edit or navigate).

### **Parameters**

- group: pointer to group
- edit: true: edit mode; false: navigate mode

# void lv\_group\_set\_click\_focus(lv\_group\_t \*group, bool en)

Set the click\_focus attribute. If enabled then the object will be focused then it is clicked.

### **Parameters**

- group: pointer to group
- en: true: enable click focus

# void lv\_group\_set\_wrap(lv\_group\_t \*group, bool en)

Set whether focus next/prev will allow wrapping from first->last or last->first object.

#### **Parameters**

- group: pointer to group
- en: true: wrapping enabled; false: wrapping disabled

$$lv\_style\_t *lv\_group\_mod\_style(lv\_group\_t *group, const lv\_style\_t *style)$$

Modify a style with the set 'style mod' function. The input style remains unchanged.

Return a copy of the input style but modified with the 'style mod' function

### **Parameters**

- group: pointer to group
- style: pointer to a style to modify

# lv\_obj\_t \*lv\_group\_get\_focused(const lv\_group\_t \*group)

Get the focused object or NULL if there isn't one

**Return** pointer to the focused object

### **Parameters**

• group: pointer to a group

# lv group user data t \*lv group get user data(lv\_group\_t \*group)

Get a pointer to the group's user data

**Return** pointer to the user data

## **Parameters**

• group: pointer to an group

# lv\_group\_style\_mod\_cb\_t lv\_group\_get\_style\_mod\_cb(const lv\_group\_t \*group)

Get a the style modifier function of a group

Return pointer to the style modifier function

#### **Parameters**

• group: pointer to a group

# lv\_group\_style\_mod\_cb\_t lv\_group\_get\_style\_mod\_edit\_cb(const lv\_group\_t \*group)

Get a the style modifier function of a group in edit mode

Return pointer to the style modifier function

### **Parameters**

• group: pointer to a group

# lv\_group\_focus\_cb\_t lv\_group\_get\_focus\_cb(const lv\_group\_t \*group)

Get the focus callback function of a group

Return the call back function or NULL if not set

### **Parameters**

• group: pointer to a group

# bool lv\_group\_get\_editing(const lv\_group\_t \*group)

Get the current mode (edit or navigate).

Return true: edit mode; false: navigate mode

### **Parameters**

• group: pointer to group

# bool lv\_group\_get\_click\_focus(const lv\_group\_t \*group)

Get the click focus attribute.

Return true: click focus is enabled; false: disabled

#### **Parameters**

• group: pointer to group

# bool lv\_group\_get\_wrap(lv\_group\_t \*group)

Get whether focus next/prev will allow wrapping from first->last or last->first object.

### Parameters

- group: pointer to group
- en: true: wrapping enabled; false: wrapping disabled

### void lv group report style $mod(lv \ qroup \ t *qroup)$

Notify the group that current theme changed and style modification callbacks need to be refreshed.

### **Parameters**

• group: pointer to group. If NULL then all groups are notified.

# struct lv group t

 $\#include < lv\_group.h > Groups$  can be used to logically hold objects so that they can be individually focused. They are NOT for laying out objects on a screen (try  $lv\_cont$  for that).

### **Public Members**

### lv ll t obj ll

Linked list to store the objects in the group

```
lv_obj_t **obj focus
    The object in focus
lv_group_style_mod_cb_t style_mod_cb
    A function to modifies the style of the focused object
lv_group_style_mod_cb_t style_mod_edit_cb
    A function which modifies the style of the edited object
lv group focus cb t focus cb
    A function to call when a new object is focused (optional)
lv\_style\_t style tmp
    Stores the modified style of the focused object
lv group user data t user data
uint8 t frozen
    1: can't focus to new object
uint8 t editing
    1: Edit mode, 0: Navigate mode
uint8 t click focus
    1: If an object in a group is clicked by an indev then it will be focused
uint8 t refocus policy
    1: Focus prev if focused on deletion. 0: Focus next if focused on deletion.
uint8 t wrap
    1: Focus next/prev can wrap at end of list. 0: Focus next/prev stops at end of list.
```

### **Displays**

**Important:** The basic concept of *Display* in LittlevGL is explained in the [Porting](/porting/display) section. So before reading further, please read that section first.

In LittlevGL you can have multiple displays each with its own drivers and objects.

Creating more displays is easy: just initialize display buffers and register the drivers for every display. When you create the UI use lv disp set deafult(disp) to tell the library to which display create the object.

But in which cases can you use the multi-display support? Here are some examples:

- Have a "normal" TFT display with local UI and create "virtual" screens on VNC on demand. (You need to add your own VNC driver)
- Have a large TFT display and a small monochrome display.
- Have some smaller and simple displays in a large instrument or technology
- Have two large TFT displays: one for a customer and one for the shop assistant

## Using only one display

Using more displays can be useful but in most of the cases, it's not required. Therefore the whole concept of multi-displays is completely hidden if you register only one display. By default, the lastly created (the only one) display is used as default.

lv\_scr\_act(), lv\_scr\_load(scr), lv\_layer\_top(), lv\_layer\_sys(), LV\_HOR\_RES and LV\_VER\_RES are always applied on the lastly created (default) screen. If you pass NULL as disp parameter to display related function usually the default display will be used. E.g. lv\_disp\_trig\_activity(NULL) will trigger a user activity on the default screen. (See below in *Inactivity*).

### Mirror display

To mirror the image of display to an other display you don't really need to use the multi-display support. Just transfer the buffer received in <code>drv.flush\_cb</code> to an other display too.

### Split image

You can create a larger display from more smaller ones. You do it like this:

- 1. Set the resolution of the displays to the large display's resolution
- 2. In drv.flush cb truncate and modify the area parameter for each display.
- 3. Send the buffer's content to each display with the truncated area,

### **Screens**

Every display has it each set of Screens and the object on the screens.

Screens can be considered the highest level containers which have no parent. The screen's size is always equal to its display's and size their position is (0;0). Therefore the screens coordinates can't be changed, i.e.  $lv_obj_set_pos(), lv_obj_set_size()$  or similar functions can't be used on screens.

A screen can be created from any object type but two most typical types are the *Base object* and the *Image* (to create a wallpaper).

To create a screen use  $lv\_obj\_t * scr = lv\_<type>\_create(NULL, copy)$ . copy can be an other screen to copy it.

To load a screen use  $lv\_scr\_load(scr)$ . The get active screen use  $lv\_scr\_act()$ . These functions works on the default display to specify which display you mean use  $lv\_disp\_get\_scr\_act(disp)$  and  $lv\_disp\_load\_scr(disp, scr)$ .

Screens can be deleted with lv obj del(scr) but be sure to not delete currently loaded screen.

# Opaque screen

Usually, the opacity of the screen is LV\_OPA\_COVER to provide a solid, folly covering background for its children. However, in some special case, you might want a transparent screen. For example, if you have a video player which renders the video frames on a layer but on an other layer you want to create an OSD menu (over the video) using LittlevGL. In this the style of the screen you should have body.opa = LV\_OPA\_TRANSP or image.opa = LV\_OPA\_TRANSP (or other LV\_OPA\_... values) to make the screen opaque. To properly handle the screens opacity LV\_COLOR\_SCREEN\_TRANSP needs to be enabled. Not that, it works on with LV\_COLOR\_DEPTH = 32. The Alpha channel of 32-bit colors will be 0 where there are no objects and will be 255 where there are solid objects.

## Features of displays

### Inactivity

The user's inactivity is measured on each display. Every use of an *Input device* (if associated with the display) counts as an activity. To get time elapsed since the last activity use <code>lv\_disp\_get\_inactive\_time(disp)</code>. If <code>NULL</code> is passed the overall smallest inactivity time will be returned from all displays.

You can manually trigger an activity using <code>lv\_disp\_trig\_activity(disp)</code>. If <code>disp</code> is <code>NULL</code> the default screen will be used.

### **Colors**

The color module handles all color-related functions like changing color depth, creating colors from hex code, converting between color depths, mixing colors etc.

The following variable types are defined by the color module:

- lv\_color1\_t Store monochrome color. For compatibility it also has R,G,B fields but they are always the same (1 byte)
- lv\_color8\_t A structure to store R (3 bit),G (3 bit),B (2 bit) components for 8 bit colors (1 byte)
- lv\_color16\_t A structure to store R (5 bit),G (6 bit),B (5 bit) components for 16 bit colors (2 byte)
- lv\_color32\_t A structure to store R (8 bit), G (8 bit), B (8 bit) components for 24 bit colors (4 byte)
- lv\_color\_t Equal to lv\_color1/8/16/24\_t according to color depth settings
- lv\_color\_int\_t uint8\_t, uint16\_t or uint32\_t according to color depth setting. Used to build color arrays from plain numbers.
- lv\_opa\_t A simple uint8 t type to describe opacity.

The lv\_color\_t, lv\_color1\_t, lv\_color8\_t, lv\_color16\_t and lv\_color32\_t types have got four fields:

- ch.red red channel
- ch.green green channel
- ch.blue blue channel
- full red + green + blue as one number

You can set the current color depth in  $lv\_conf.h$  by setting the LV\_COLOR\_DEPTH define to 1 (monochrome), 8, 16 or 32.

### Convert color

You can convert a color from the current color depth to an other. The converter functions return with a number so you have to use the full field:

```
lv_color_t c;
c.red = 0x38;
c.green = 0x70;
c.blue = 0xCC;
```

(continues on next page)

(continued from previous page)

### Swap 16 colors

You may set LV\_COLOR\_16\_SWAP in  $lv\_conf.h$  to swap the bytes of RGB565 colors. It's useful if you send the 16 bit colors via a byte-oriented interface like SPI. As 16 bit numbers are stored in Little Endian format (lower byte on the lower address) the interface will send the lower byte first. However, displays usually need the higher byte first. A mismatch in the byte order will result in highly distorted colors.

### Create and mix colors

You can create colors with the current color depth using the LV\_COLOR\_MAKE macro. It takes 3 arguments (red, green, blue) as 8 bit numbers. For example to create light red color:  $my\_color = COLOR\ MAKE(0xFF,0x80,0x80)$ .

Colors can be created from HEX codes too:  $my\_color = lv\_color\_hex(0x288ACF)$  or  $my\_color = lv\_folro\_hex3(0x28C)$ .

Mixing two colors is possible with mixed\_color = lv\_color\_mix(color1, color2, ratio). Ration can be 0..255. 0 results fully color2, 255 result fully color1.

Colors can be created with from HSV space too using lv\_color\_hsv\_to\_rgb(hue, saturation, value). hue should be in 0..360 range, saturation and value in 0..100 range.

# **Opacity**

To describe opacity the <code>lv\_opa\_t</code> type is created as a wrapper to <code>uint8\_t</code>. Some defines are also introduced:

- LV OPA TRANSP Value: 0, means the opacity makes the color fully transparent
- LV\_OPA\_10 Value: 25, means the color covers only a little
- LV\_OPA\_20 ... OPA\_80 come logically
- LV\_OPA\_90 Value: 229, means the color near fully covers
- LV\_OPA\_COVER Value: 255, means the color fully covers

You can also use the LV\_OPA\_\* defines in lv\_color\_mix() as ratio.

### **Built-in colors**

The color module defines the most basic colors:

- #000000 LV\_COLOR\_BLACK
- #808080 LV COLOR GRAY
- #c0c0c0 LV COLOR SILVER
- #ff0000 LV\_COLOR\_RED
- #800000 LV COLOR MARRON
- #00ff00 LV\_COLOR\_LIME
- #008000 LV\_COLOR\_GREEN
- #808000 LV\_COLOR\_OLIVE
- #0000ff LV COLOR BLUE
- #000080 LV\_COLOR\_NAVY
- #008080 LV\_COLOR\_TAIL
- #00ffff LV\_COLOR\_CYAN
- #00ffff LV\_COLOR\_AQUA
- #800080 LV COLOR PURPLE
- #ff00ff LV\_COLOR\_MAGENTA
- #ffa500 LV\_COLOR\_ORANGE
- #ffff00 LV\_COLOR\_YELLOW

as well as  $LV\_COLOR\_WHITE$ .

## **API**

### **Display**

### **Functions**

```
lv\_obj\_t *lv\_disp\_get\_scr\_act(lv\_disp\_t *disp)
```

Return with a pointer to the active screen

Return pointer to the active screen object (loaded by 'lv\_scr\_load()')

### **Parameters**

• disp: pointer to display which active screen should be get. (NULL to use the default screen)

# void lv\_disp\_load\_scr(lv\_obj\_t \*scr)

Make a screen active

#### **Parameters**

• **SCr**: pointer to a screen

# lv\_obj\_t \*lv\_disp\_get\_layer\_top(lv\_disp\_t \*disp)

Return with the top layer. (Same on every screen and it is above the normal screen layer)

Return pointer to the top layer object (transparent screen sized lv\_obj)

#### **Parameters**

• disp: pointer to display which top layer should be get. (NULL to use the default screen)

# lv\_obj\_t \*lv\_disp\_get\_layer\_sys(lv\_disp\_t \*disp)

Return with the sys. layer. (Same on every screen and it is above the normal screen and the top layer)

**Return** pointer to the sys layer object (transparent screen sized ly obj)

### **Parameters**

• disp: pointer to display which sys. layer should be get. (NULL to use the default screen)

# void lv\_disp\_assign\_screen(lv\_disp\_t \*disp, lv\_obj\_t \*scr)

Assign a screen to a display.

#### **Parameters**

- disp: pointer to a display where to assign the screen
- SCT: pointer to a screen object to assign

# lv\_task\_t \*lv\_disp\_get\_refr\_task(lv\_disp\_t \*disp)

Get a pointer to the screen refresher task to modify its parameters with lv\_task\_... functions.

Return pointer to the display refresher task. (NULL on error)

#### **Parameters**

• disp: pointer to a display

# uint32 t lv disp get inactive time(const lv\_disp\_t\*disp)

Get elapsed time since last user activity on a display (e.g. click)

Return elapsed ticks (milliseconds) since the last activity

#### **Parameters**

• disp: pointer to an display (NULL to get the overall smallest inactivity)

# void lv\_disp\_trig\_activity(lv\_disp\_t \*disp)

Manually trigger an activity on a display

#### **Parameters**

• disp: pointer to an display (NULL to use the default display)

# static lv\_obj\_t \*lv\_scr\_act(void)

Get the active screen of the default display

Return pointer to the active screen

# static lv\_obj\_t \*lv\_layer\_top(void)

Get the top layer of the default display

**Return** pointer to the top layer

# static lv\_obj\_t \*lv\_layer\_sys(void)

Get the active screen of the deafult display

Return pointer to the sys layer

# Colors

```
Typedefs
typedef uint32_t lv_color_int_t
typedef lv_color32_t lv_color_t
\textbf{typedef} \ \operatorname{uint8\_t} \ \textbf{lv\_opa\_t}
Enums
enum [anonymous]
      Opacity percentages.
      Values:
      LV OPA TRANSP = 0
      \mathbf{LV} \mathbf{.OPA} \mathbf{.0} = 0
      \mathbf{LV\_0PA\_10} = 25
      \mathbf{LV\_0PA\_20} = 51
      \mathbf{LV} \mathbf{.OPA} \mathbf{.30} = 76
      LV_0PA_40 = 102
      LV_0PA_50 = 127
      \mathbf{LV\_0PA\_60} = 153
      LV_0PA_70 = 178
      \mathbf{LV\_0PA\_80} = 204
      LV_0PA_90 = 229
      LV OPA 100 = 255
      {\bf LV\_OPA\_COVER} = 255
Functions
static uint8_t lv_color_to1(lv_color_t color)
union lv_color1_t
      Public Members
      uint8 t blue
      uint8_t green
      uint8_t red
```

uint8\_t full
union lv\_color8\_t

```
Public Members
     uint8_t blue
     uint8_t green
     uint8 t red
     struct lv_color8_t::[anonymous] ch
     uint8_t full
union lv_color16_t
     Public Members
     uint16 t blue
     uint16\_t green
     uint16_t red
     uint16_t green_h
     uint16_t green_l
     struct lv_color16_t::[anonymous] ch
     uint16_t full
union lv_color32_t
     Public Members
     uint8_t blue
     uint8_t green
     uint8_t red
     uint8 t alpha
     struct lv_color32_t::[anonymous] ch
     uint32_t full
struct lv_color_hsv_t
     Public Members
     uint16_t h
     uint8\_t \ \textbf{S}
     uint8\_t \ \textbf{V}
```

### **Fonts**

In LittlevGL fonts are collections of bitmaps and other information required to render the images of the letters (glyph). A font is stored in a lv\_font\_t variable and can be set it in style's text.font field. For example:

```
my_style.text.font = &lv_font_roboto_28; /*Set a larger font*/
```

The fonts have a **bpp** (Bit-Per-Pixel) property. It shows how many bits are used to describe a pixel in the font. The value stored for a pixel determines the pixel's opacity. This way with higher bpp the edges of the letter can be smoother. The possible bpp values are 1, 2, 4 and 8 (higher value means better quality).

The bpp also affects the required memory size to store the font. E.g. bpp = 4 makes the font  $\sim 4$  times greater compared to bpp = 1.

### Unicode support

LittlevGL supports UTF-8 encoded Unicode characters. You need to configure your editor to save your code/text as UTF-8 (usually this the default) and be sure LV\_TXT\_ENC is set to LV\_TXT\_ENC\_UTF8 in  $lv\_conf.h.$  (This is the default value)

To test it try

```
lv_obj_t * label1 = lv_label_create(lv_scr_act(), NULL);
lv_label_set_text(label1, LV_SYMBOL_OK);
```

If all works well a  $\checkmark$  character should be displayed.

### **Built-in fonts**

There are several built-in fonts in different sizes which can be enabled in ly conf.h by LV FONT ... defines:

- LV FONT ROBOTO 12 12 px
- LV FONT ROBOTO 16 16 px
- LV\_F0NT\_R0B0T0\_22 22 px
- LV FONT ROBOTO 28 28 px

The built-in fonts are **global variables** with names like lv\_font\_roboto\_16 for 16 px hight font. To use them in a style just add a pointer to a font variable like shown above.

The built-in fonts have bpp = 4, contains the ASCII characters and uses the Roboto font.

In addition to the ASCII rangle, the following symbols are also added to the built-in fonts from the FontAwesome font.

- LV\_SYMBOL\_AUDIO
- Ⅲ LV\_SYMBOL\_VIDEO
- LV\_SYMBOL\_LIST
- ✓ LV\_SYMBOL\_OK
- ★ LV\_SYMBOL\_CLOSE
- U LV\_SYMBOL\_POWER
- LV\_SYMBOL\_SETTINGS
- ♠ LV\_SYMBOL\_HOME
- ▲ LV\_SY BOL\_DOWNLOAD
- LV\_SYMBOL\_DRIVE
- ₽ LV\_SYMBOL\_REFRESH
- LV\_SYMBOL\_MUTE
- LV\_SYMBOL\_VOLUME\_MID
- LV\_SYMBOL\_VOLUME\_MAX
- LV SYMBOL IMAGE
- LV\_SYMBOL\_EDIT
- LV\_SYMBOL\_PREV
- LV\_SYMBOL\_PLAY
- LV\_SYMBOL\_PAUSE
- LV\_SYMBOL\_STOP
- ▶ LV\_SYMBOL\_NEXT
- ▲ LV\_SYMBOL\_EJECT
- LV\_SYMBOL\_LEFT
- LV\_SYMBOL\_RIGHT
- **★** LV\_SYMBOL\_PLUS
- LV\_SYMBOL\_MINUS
- ▲ LV\_SYMBOL\_WARNING
- □ LV\_SYMBOL\_SHUFFLE
- ▲ LV\_SYMBOL\_UP
- LV\_SYMBOL\_DOWN
- LV\_SYMBOL\_LOOP
- LV\_SYMBOL\_DIRECTORY
- LV\_SYMBOL\_UPLOAD
- LV\_SYMBOL\_CALL
- ≥

  LV\_SYMBOL\_CUT
- ♠ LV\_SYMBOL\_COPY
- LV\_SYMBOL\_SAVE
- \$ LV\_SYMBOL\_CHARGE
- ▲ LV\_SYMBOL\_BELL
- LV\_SYMBOL\_KEYBOARD
- ◀ LV\_SYMBOL\_GPS
- LV\_SYMBOL\_FILE
- LV\_SYMBOL\_WIFI
- LV\_SYMBOL\_BATTERY\_FULL
- LV\_SYMBOL\_BATTERY\_3
- LV\_SYMBOL\_BATTERY\_2
- LV\_SYMBOL\_BATTERY\_1
- □ LV\_SYMBOL\_BATTERY\_EMPTY
- LV\_SYMBOL\_BLUETOOTH

The symbols can be used as:

```
lv_label_set_text(my_label, LV_SYMBOL_OK);
```

Or with together with strings:

```
lv_label_set_text(my_label, LV_SYMBOL_OK "Apply");
```

Or more symbols together:

```
lv_label_set_text(my_label, LV_SYMBOL_OK LV_SYMBOL_WIFI LV_SYMBOL_PLAY);
```

### Add new font

There are several ways to add a new font to your project:

- 1. The most simple way is to use the Online font converter. Just set the parameters, click the *Convert* button, copy the font to your project and use it.
- 2. Use the Offline font converter. (Requires Node.js to be installed)
- 3. If you want to create something like the built-in fonts (Roboto font and symbols) but in different size and/or ranges you can use the built\_in\_font\_gen.py script in lvgl/scripts/built\_in\_font folder. (It requires Python and lv\_font\_conv to be installed)

To declare the font in a file use LV\_FONT\_DECLARE(my\_font\_name).

To make to font globally available add them to LV FONT CUSTOM DECLARE in lv\_conf.h.

### Add new symbols

The built-in symbols are created from FontAwesome font. To add new symbols from the FontAwesome font do the following steps:

- 1. Search symbol on https://fontawesome.com. For example the USB symbol
- 2. Open the Online font converter add FontAwesome.ttf and add the Unicode ID of the symbol to the range field. E.g. 0xf287 for the USB symbol. More symbols can be enumerated with ,.
- 3. Convert the font and copy it to your project.
- 4. Convert the Unicode value to UTF8. You can do it e.g. on this site. For 0xf287 the Hex UTF-8 bytes are EF 8A 87.
- Create a define from the UTF8 values: #define MY\_USB\_SYMBOL "\xEF\x8A\x87"
- 6. Use the symbol as the built-in symbols. lv\_label\_set\_text(label, MY\_USB\_SYMBOL)

## Add a new font engine

LittlevGL's font interface is designed to be very flexible. You don't need to use LittlevGL's internal font engine but you can add your own. For example use FreeType to real-time render glyphs from TTF fonts or use an external flash to store the font's bitmap and read them when the library need them.

To do this a custom <code>lv\_font\_t</code> variable needs to be created:

```
/*Describe the properties of a font*/
lv font t my font;
my font.get glyph dsc = my get glyph dsc cb;
                                                  /*Set a callback to get info...
→about gylphs*/
my font.get glyph bitmap = my get glyph bitmap cb; /*Set a callback to get bitmap of,
→a glyp*/
my_font.line_height = height;
                                                   /*The real line height where any...
→text fits*/
my font.base line = base line;
                                                   /*Base line measured from the top...
→of line height*/
my_font.dsc = something_required;
                                                   /*Store any implementation...
→specific data here*/
my font.user data = user data;
                                                   /*Optionally some extra user...
⊶data*/
. . .
/* Get info about glyph of `unicode letter` in `font` font.
* Store the result in `dsc_out`.
* The next letter (`unicode_letter_next`) might be used to calculate the width
→required by this glyph (kerning)
bool my get glyph dsc cb(const lv font t * font, lv font glyph dsc t * dsc out,...
→uint32_t unicode_letter, uint32_t unicode_letter_next)
   /*Your code here*/
    /* Sotore the result.
    * For example ...
   dsc_out->adv_w = 12;
                              /*Horizontal space required by the glyph in [px]*/
   dsc_out->box_h = 8;
                               /*Height of the bitmap in [px]*/
                              /*Width of the bitmap in [px]*/
   dsc_out->box_w = 6;
                              /*X offset of the bitmap in [pf]*/
   dsc\_out->ofs\_x = 0;
                              /*Y offset of the bitmap measured from the as line*/
   dsc_out->ofs_y = 3;
   dsc out->bpp = 2;
                               /*Bit per pixel: 1/2/4/8*/
    return true;
                              /*true: glyph found; false: glyph was not found*/
}
/* Get the btmap of `unicode letter` from `font`. */
const uint8_t * my_get_glyph_bitmap_cb(const lv_font_t * font, uint32_t unicode_
⊢letter)
{
   /* Your code here */
   /* The bitmap should be a continuous bitstream where
    * each pixel is represented by `bpp` bits */
    return bitmap;
                    /*Or NULL if not found*/
}
```

# **Images**

An image can be a file or variable which stores the image itself and some metadata.

## Store images

You can store images in two places

- as a variable in the internal memory (RAM or ROM)
- as a file

#### **Variables**

The images stored internally in a variable has lv img dsc t type with the following fields:

- header
  - cf Color format. See below
  - w width in pixels ( $\leq 2048$ )
  - -h height in pixels ( $\leq 2048$ )
  - always zero 3 bits which need to be always zero
  - reserved reserved for future use
- data pointer to an array where the image itself is stored
- data\_size length of data in bytes

#### **Files**

To deal with files you need to add a *Drive* to LittlevGL. In short, a Drive a collection of functions (*open*, read, close, etc) registered in LittlevGL to make file operation. You can add an interface to a standard file system (FAT32 on SD card) or you create your own simple file system to read data from an SPI Flash memory. In every cases, a Drive is just an abstraction to read and/or write data to a memory. See the *File system* section to learn more.

### **Color formats**

Various built-in color formats are supported:

- LV\_IMG\_CF\_TRUE\_COLOR Simply store the RGB colors
- LV\_IMG\_CF\_TRUE\_COLOR\_ALPHA Store the RGB colors but add an Alpha byte too for every pixel
- LV\_IMG\_CF\_TRUE\_COLOR\_CHROMA\_KEYED Store the RGB color but if a pixel has LV COLOR TRANSP (set in *lv\_conf.h*) color the pixel will be transparent
- LV\_IMG\_CF\_INDEXED\_1/2/4/8BIT Use palette with 2, 4, 16 or 256 colors and store each pixel on 1, 2, 4 or 8 bit
- LV\_IMG\_CF\_ALPHA\_1/2/4/8BIT Store only the Alpha value on 1, 2, 4 or 8 bits. Draw the pixels style.image.color and the set opacity.

The bytes of the True color 32 bit images are stored in the following order

- Byte 0: Blue
- Byte 1: Green

- Byte 2: Red
- Byte 3: Alpha

For 16 bit color depth

- Byte 0: Green 3 lower bit, Blue 5 bit
- Byte 1: Red 5 bit, Green 3 higher bit
- Byte 2: Alpha byte (only with LV\_IMG\_CF\_TRUE\_COLOR\_ALPHA)

For 8 bit color depth

- Byte 0: Red 3 bit, Green 3 bit, Blue 2 bit
- Byte 2: Alpha byte (only with LV\_IMG\_CF\_TRUE\_COLOR\_ALPHA)

You can store images in a *Raw* format to indicate that it's not a built-in color format and an *Image decoder* needs to be used to decode the image.

- LV\_IMG\_CF\_RAW A raw image e.g. a PNG or JPG image
- LV\_IMG\_CF\_RAW\_ALPHA Indicate that the image has alpha, and an Alpha byte is added for every pixel
- LV\_IMG\_CF\_RAW\_CHROME\_KEYED Indicate that the image is chrome keyed as described in LV IMG CF TRUE COLOR CHROMA KEYED above.

## Add and use images

You can add images to LittlevGL in two ways:

- using the online converter
- manually create images

# Online converter

The Online Image Converter is available here: https://littlevgl.com/image-to-c-array

You need to select a BMP, PNG or JPG image, give it a name, select the  $Color\ format$ , select the type (file or variable) and hit the Convert button and the result file be download.

In the converter C arrays (variables) the image for all the Color depths (1, 8, 16 or 32) are included and the used image will be selected in compile time based on LV COLOR DEPTH in  $lv\_conf.h$ .

IN case of files you need to tell which color format you want

- RGB332 for 8 bit color depth
- RGB565 for 16 bit color depth
- RGB565 Swap for 16 bit color depth (two bytes are swapped)
- RGB888 for 32 bit color depth

# Manually create an image

If you calculate an image run-time you can craft an image variable to display it. For example:

```
uint8_t my_img_data[] = {0x00, 0x01, 0x02, ...};

static lv_img_dsc_t my_img_dsc = {
    .header.always_zero = 0,
    .header.w = 80,
    .header.h = 60,
    .data_size = 80 * 60 * LV_COLOR_DEPTH / 8,
    .header.cf = LV_IMG_CF_TRUE_COLOR,
    .data = my_img_data,
};
```

If the color format is LV\_IMG\_CF\_TRUE\_COLOR\_ALPHA you can set data\_size like 80 \* 60 \* LV\_IMG\_PX\_SIZE\_ALPHA\_BYTE.

An other option to create image run-time is to use the Canvas object.

## Use images

The most simple way to use an Image in LittlevGL is to display it with an  $lv\_img$  object:

```
lv_obj_t * icon = lv_img_create(lv_scr_act(), NULL);

/*From varaible*/
lv_img_set_src(icon, &my_icon_dsc);

/*From file*/
lv_img_set_src(icon, "S:my_icon.bin");
```

If the image was converted with the online converter you should use LV\_IMG\_DECLARE(my\_icon\_dsc) to declare the icon in the file where you want to use it.

### Image decoder

As you can see in the *Color formats* section LittlevGL supports several built image formats. However, it doesn't support for example PNG or JPG out of the box. To handle non-built-in image formats you need to use external libraries and attach them to LittlevGL via the *Image decoder* interface.

The image decoder consists of 4 images:

- **info** get some basic info about the image (width, height and color format)
- **open** open the image: either store the decoded image or set it to **NULL** to indicate the image can be read line-by-line
- read if open didn't fully open the image this function should give the some decoded data (max 1 line) from a given position.
- close close the opened image, free the allocated resources.

You can add any number of image decoders. When an image needs to be drawn the library will try all the registered image decoder until find one which is able to open the image, i.e. know that format.

The  $LV\_IMG\_CF\_TURE\_COLOR\_...$ ,  $LV\_IMG\_INDEXED\_...$  and  $LV\_IMG\_ALPHA\_...$  formats are known by the built-in decoder.

## **Custom image formats**

The easiest was to create a custom image is to use the Online image converter and set Raw, Raw with alpha, Raw with chrome keyed format. It will just take the every bytes of selected image and write them as image data. heafer.cf will be LV\_IMG\_CF\_RAW, LV\_IMG\_CF\_RAW\_ALPHA or LV\_IMG\_CF\_RAW\_CHROME\_KEYED accordingly. You should choose the correct format according to you needs: fully covering image, use alpha channel or use chroma keying.

After decoding, the *raw* formats are considered *True color*. In other words the image decoder should decode the *Raw* images to *True color* according to the format described in [#color-formats](Color formats) section.

If you want to create a really custom image you should use LV\_IMG\_CF\_USER\_ENCODED\_0..7 color formats. However, the library can draw the images only in *True color* format (or *Raw* but finally it's supposed to be in *True color* format). So the LV\_IMG\_CF\_USER\_ENCODED\_... formats are not known by the library therefore they should be decoded to one of the known formats from [#color-formats](Color formats) section. It's possible to decoded the image to a non-true color format first, for example LV\_IMG\_INDEXED\_4BITS, and then call the built-in decoder functions to convert it to *True color*.

With *User encoded* formats the color format in the open function (dsc->header.cf) should be changed according to the new format.

# Register an image decoder

For example, if you want LittlevGL to "understand" PNG images you need to create a new image decoder and set some functions to open/close the PNG files. It should looks like this:

```
/*Create a new decoder and register functions */
lv img decoder t * dec = lv img decoder create();
lv img_decoder_set_info_cb(dec, decoder_info);
lv img decoder set open cb(dec, decoder open);
lv img decoder set close cb(dec, decoder close);
* Get info about a PNG image
* @param decoder pointer to the decoder where this function belongs
* @param src can be file name or pointer to a C array
* @param header store the info here
* @return LV_RES_OK: no error; LV_RES_INV: can't get the info
static lv res t decoder info(lv img decoder t * decoder, const void * src, lv img
→header_t * header)
  /*Check whether the type `src` is known by the decoder*/
 if(is_png(src) == false) return LV_RES_INV;
 header->cf = LV IMG CF RAW ALPHA;
 header->w = width;
 header->h = height;
}
* Open a PNG image and return the decided image
* @param decoder pointer to the decoder where this function belongs
```

(continues on next page)

(continued from previous page)

```
* @param dsc pointer to a descriptor which describes this decoding session
 * @return LV RES OK: no error; LV RES INV: can't get the info
static lv_res_t decoder_open(lv_img_decoder_t * decoder, lv_img_decoder_dsc_t * dsc)
 /*Check whether the type `src` is known by the decoder*/
 if(is_png(src) == false) return LV_RES_INV;
 /*Decode and store the image. If `dsc->img data` the `raed line` function will be,
→called to get the image data liny-by-line*/
 dsc->img data = my png decoder(src);
 /*Change the color format if required. For PNG usually 'Raw' is fine*/
 dsc->header.cf = LV IMG CF ...
 /*Call a built in decoder function if required. It's not required if`my png
→decoder` opened the image in true color format.*/
 lv res t res = lv img decoder built in open(decoder, dsc);
 return res;
}
* Decode `len` pixels starting from the given `x`, `y` coordinates and store them in.
→`buf`.
* Required only if the "open" function can't open the whole decoded pixel array...
\hookrightarrow (dsc->img data == NULL)
* @param decoder pointer to the decoder the function associated with
* @param dsc pointer to decoder descriptor
* @param x start x coordinate
* @param y start y coordinate
* @param len number of pixels to decode
* @param buf a buffer to store the decoded pixels
* @return LV_RES_OK: ok; LV_RES_INV: failed
lv_res_t decoder_built_in_read_line(lv_img_decoder_t * decoder, lv_img_decoder_dsc_t_
\rightarrow* dsc, lv coord t x,
                                                   lv coord t y, lv coord t len, uint8
\rightarrowt * buf)
  /*With PNG it's usually not required*/
  /*Copy `len` pixels from `x` and `y` coordinates in True color format to `buf` */
}
* Free the allocated resources
* @param decoder pointer to the decoder where this function belongs
* @param dsc pointer to a descriptor which describes this decoding session
static void decoder_close(lv_img_decoder_t * decoder, lv_img_decoder_dsc_t * dsc)
 /*Free all allocated data*/
```

(continues on next page)

(continued from previous page)

```
/*Call the built-in close function if the built-in open/read_line was used*/
lv_img_decoder_built_in_close(decoder, dsc);
}
```

So in summary:

- In decoder info you should collect some basic information about the image and store it in header.
- In decoder\_open you should try to open the image source pointed by dsc->src. It's type is already in dsc->src\_type == LV\_IMG\_SRC\_FILE/VARIABLE. If this format/type is not supported by the decoder return LV\_RES\_INV. However, if you can open the image a pointer to the decoded *True color* image should be set in dsc->img\_data. If the format is known but you don't want decode while image (e.g. no memory for it) set dsc->img\_data = NULL to call read line to get the pixels.
- In decoder\_close you should free all the allocated resources.
- decoder\_read is optional. Decoding the whole image requires extra memory and some computational overhead. However, if can decode one line of the image without decoding the whole image you can save memory and time. To indicate that the *line read* function should be used set dsc->img\_data = NULL in the open function.

#### Manually use an image decoder

LittlevGL will use th registered image decoder automatically but you can use them manually too. Create a lv\_img\_decoder\_dsc\_t varaible to describe a the decoding session and call lv\_img\_decoder\_open(), lv img\_decoder\_open().

```
lv_res_t res;
lv_img_decoder_dsc_t dsc;
res = lv_img_decoder_open(&dsc, &my_img_dsc, &lv_style_plain);

if(res == LV_RES_OK) {
   /*Do something with `dsc->img_data`*/
   lv_img_decoder_close(&dsc);
}
```

#### Image caching

Sometimes it takes a lot of time to open an image. Continuously decoding a PNG image or loading images from a slow external memory would be effective. Therefore LittlevGL caches a given number of images. Caching means some images will be left open hence LittlevGl can quickly access them from dsc->img\_data instead of decoding the again.

#### Cache size

The number of cache entries can be defined in LV\_IMG\_CACHE\_DEF\_SIZE in *lv\_conf.h*. The default value is 1 so only the lastly used image will be left open. The size of cache can be changed in tun-time with lv img cache set size(entry num)

## Value of images

If you use more images then the cache size LittlevGL can't cache all of the images. Instead, if a new image needs to be opened but there is no place in the cache the library will close an image. To decide which image to close LittlevGL measured how much did it take to open the image. Images which more time consuming to open are considered more valuable and LittlevGL tries to cache them longer. You can manually set the time to open value in the decoder open function in dsc->time\_to\_open = time\_ms to give a higher or lower value to the image. (Leave it unchanged to let LittlevGL set it)

Every cache entry has a "life" value. Every time an image opening happens through the cache the life of all entries are decreased to make them older. When a cached image is used its life is increased by the time to open value to make it more alive.

If there is no more space in the cache always the entry with the smallest life will be closed.

## Memory usage

Note that, the cached image might continuously consume memory. For example, if 3 PNG images are cached, they will consume memory while they are opened. Therefore it's the user responsibility to be sure there is enough RAM to cache even the largest images at the same time.

#### Clean the cache

Let's say you have loaded a PNG image into a <code>lv\_img\_dsc\_t my\_png</code> variable and use it in an <code>lv\_img</code> object. If the image is already cached and you change <code>my\_png->data</code> you need to notify LittlevGL to cache the image again. To do this use <code>lv\_img\_cache\_invalidate\_src(&my\_png)</code>. If <code>NULL</code> is passed as parameter the whole cache will be cleaned.

#### **API**

#### Image decoder

#### **Typedefs**

Return LV\_RES\_OK: info written correctly; LV\_RES\_INV: failed

#### **Parameters**

- src: the image source. Can be a pointer to a C array or a file name (Use lv\_img\_src\_get\_type to determine the type)
- header: store the info here

Open an image for decoding. Prepare it as it is required to read it later

## Parameters

- decoder: pointer to the decoder the function associated with
- dsc: pointer to decoder descriptor. src, style are already initialized in it.

Decode len pixels starting from the given x, y coordinates and store them in buf. Required only if the "open" function can't return with the whole decoded pixel array.

Return LV\_RES\_OK: ok; LV\_RES\_INV: failed

#### **Parameters**

- decoder: pointer to the decoder the function associated with
- dsc: pointer to decoder descriptor
- X: start x coordinate
- y: start y coordinate
- len: number of pixels to decode
- buf: a buffer to store the decoded pixels

```
\label{typedef} \begin{tabular}{ll} typedef & void (*lv\_img\_decoder\_close\_f\_t)(struct $\_lv\_img\_decoder$ *decoder, struct $\_lv\_img\_decoder\_dsc$ *dsc) \\ \hline & \_lv\_img\_decoder\_dsc$ *dsc) \\ \hline \end{tabular}
```

Close the pending decoding. Free resources etc.

#### **Parameters**

- decoder: pointer to the decoder the function associated with
- dsc: pointer to decoder descriptor

```
typedef struct <u>lv_img_decoder</u> lv_img_decoder_t
```

```
typedef struct <u>lv_img_decoder_dsc_lv_img_decoder_dsc_t</u>
```

Describe an image decoding session. Stores data about the decoding

## **Enums**

## **enum** [anonymous]

Source of image.

Values:

LV\_IMG\_SRC\_VARIABLE

LV\_IMG\_SRC\_FILE

Binary/C variable

LV\_IMG\_SRC\_SYMBOL

File in filesystem

## LV\_IMG\_SRC\_UNKNOWN

Symbol (lv\_symbol\_def.h)

**enum** [anonymous]

Values:

LV IMG CF UNKNOWN = 0

## LV IMG CF RAW

Contains the file as it is. Needs custom decoder function

#### LV IMG CF RAW ALPHA

Contains the file as it is. The image has alpha. Needs custom decoder function

## LV\_IMG\_CF\_RAW\_CHROMA\_KEYED

Contains the file as it is. The image is chroma keyed. Needs custom decoder function

## LV IMG CF TRUE COLOR

Color format and depth should match with LV\_COLOR settings

## LV IMG CF TRUE COLOR ALPHA

Same as LV IMG CF TRUE COLOR but every pixel has an alpha byte

## LV IMG CF TRUE COLOR CHROMA KEYED

Same as LV IMG CF TRUE COLOR but LV COLOR TRANSP pixels will be transparent

## LV IMG CF INDEXED 1BIT

Can have 2 different colors in a palette (always chroma keyed)

## LV IMG CF INDEXED 2BIT

Can have 4 different colors in a palette (always chroma keyed)

## LV\_IMG\_CF\_INDEXED\_4BIT

Can have 16 different colors in a palette (always chroma keyed)

## LV IMG CF INDEXED 8BIT

Can have 256 different colors in a palette (always chroma keyed)

## LV IMG CF ALPHA 1BIT

Can have one color and it can be drawn or not

## LV\_IMG\_CF\_ALPHA\_2BIT

Can have one color but 4 different alpha value

## LV IMG CF ALPHA 4BIT

Can have one color but 16 different alpha value

## LV IMG CF ALPHA 8BIT

Can have one color but 256 different alpha value

#### **Functions**

#### void lv img decoder init(void)

Initialize the image decoder module

## lv\_res\_t lv\_img\_decoder\_get\_info(const char \*src, lv\_img\_header\_t \*header)

Get information about an image. Try the created image decoder one by one. Once one is able to get info that info will be used.

Return LV\_RES\_OK: success; LV\_RES\_INV: wasn't able to get info about the image

#### **Parameters**

- src: the image source. Can be 1) File name: E.g. "S:folder/img1.png" (The drivers needs to registered via  $lv_fs_add_drv()$ ) 2) Variable: Pointer to an  $lv_img_dsc_t$  variable 3) Symbol: E.g.  $lv_symbol_ok$
- header: the image info will be stored here

Open an image. Try the created image decoder one by one. Once one is able to open the image that decoder is save in  $\mathsf{dsc}$ 

Return LV\_RES\_OK: opened the image. dsc->img\_data and dsc->header are set. LV\_RES\_INV: none of the registered image decoders were able to open the image.

#### **Parameters**

- dsc: describe a decoding session. Simply a pointer to an lv\_img\_decoder\_dsc\_t variable.
- src: the image source. Can be 1) File name: E.g. "S:folder/img1.png" (The drivers needs to registered via lv\_fs\_add\_drv()) 2) Variable: Pointer to an lv\_img\_dsc\_t variable 3) Symbol: E.g. LV\_SYMBOL\_OK
- style: the style of the image

Read a line from an opened image

Return LV\_RES\_OK: success; LV\_RES\_INV: an error occurred

#### **Parameters**

- dsc: pointer to lv\_img\_decoder\_dsc\_t used in lv\_img\_decoder\_open
- X: start X coordinate (from left)
- y: start Y coordinate (from top)
- len: number of pixels to read
- buf: store the data here

void lv img decoder close(lv img\_decoder\_dsc\_t\*dsc)

Close a decoding session

## **Parameters**

dsc: pointer to lv img decoder dsc t used in lv img decoder open

lv\_img\_decoder\_t \*lv\_img\_decoder\_create(void)

Create a new image decoder

Return pointer to the new image decoder

void lv img decoder delete(lv img decoder t\*decoder)

Delete an image decoder

## **Parameters**

• decoder: pointer to an image decoder

Set a callback to get information about the image

#### **Parameters**

- decoder: pointer to an image decoder
- info\_cb: a function to collect info about an image (fill an lv\_img\_header\_t struct)

Set a callback to open an image

#### **Parameters**

- decoder: pointer to an image decoder
- open\_cb: a function to open an image

Set a callback to a decoded line of an image

#### **Parameters**

- decoder: pointer to an image decoder
- read\_line\_cb: a function to read a line of an image

```
void lv\_img\_decoder\_set\_close\_cb (lv\_img\_decoder\_t *decoder, lv\_img\_decoder\_close\_f\_t
```

 $\frac{close\_cb)}{\text{Set a callback to close a decoding session. E.g. close files and free other resources.}}$ 

#### **Parameters**

- decoder: pointer to an image decoder
- close\_cb: a function to close a decoding session

## struct lv\_img\_header\_t

 $\#include < lv\_img\_decoder.h >$ LittlevGL image header

## **Public Members**

```
uint32_t cf
uint32_t always_zero
uint32_t reserved
uint32_t w
uint32_t h
```

## struct lv img dsc t

 $\#include < lv\_img\_decoder.h >$ Image header it is compatible with the result from image converter utility

#### **Public Members**

```
lv_img_header_t header
uint32_t data_size
const uint8_t *data
struct _lv_img_decoder
```

## **Public Members**

```
lv_img_decoder_info_f_t info_cb
lv_img_decoder_open_f_t open_cb
lv_img_decoder_read_line_f_t read_line_cb
```

```
lv_img_decoder_close_f_t close_cb
lv img decoder user data t user data
```

## struct \_lv\_img\_decoder\_dsc

#include <lv\_img\_decoder.h> Describe an image decoding session. Stores data about the decoding

#### **Public Members**

## lv img decoder t\*decoder

The decoder which was able to open the image source

#### const void \*src

The image source. A file path like "S:my\_img.png" or pointer to an lv img dsc t variable

## const lv\_style\_t \*style

Style to draw the image.

## lv\_img\_src\_t src\_type

Type of the source: file or variable. Can be set in open function if required

## lv\_img\_header\_t header

Info about the opened image: color format, size, etc. MUST be set in open function

## const uint8\_t \*img\_data

Pointer to a buffer where the image's data (pixels) are stored in a decoded, plain format. MUST be set in open function

## uint32\_t time\_to\_open

How much time did it take to open the image. [ms] If not set  $lv\_img\_cache$  will measure and set the time to open

## const char \*error msg

A text to display instead of the image when the image can't be opened. Can be set in open function or set NULL.

## void \*user data

Store any custom data here is required

#### Image cache

#### **Functions**

#### lv img cache entry t\*lv img cache open(const void \*src, const lv style t \*style)

Open an image using the image decoder interface and cache it. The image will be left open meaning if the image decoder open callback allocated memory then it will remain. The image is closed if a new image is opened and the new image takes its place in the cache.

Return pointer to the cache entry or NULL if can open the image

#### **Parameters**

- **src**: source of the image. Path to file or pointer to an  $lv\_img\_dsc\_t$  variable
- style: style of the image

## void lv\_img\_cache\_set\_size(uint16\_t new\_slot\_num)

Set the number of images to be cached. More cached images mean more opened image at same time which might mean more memory usage. E.g. if 20 PNG or JPG images are open in the RAM they consume memory while opened in the cache.

#### **Parameters**

• new\_entry\_cnt: number of image to cache

## void lv\_img\_cache\_invalidate\_src(const void \*src)

Invalidate an image source in the cache. Useful if the image source is updated therefore it needs to be cached again.

#### **Parameters**

• src: an image source path to a file or pointer to an lv img dsc t variable.

## struct lv\_img\_cache\_entry\_t

 $\#include < lv\_img\_cache.h >$  When loading images from the network it can take a long time to download and decode the image.

To avoid repeating this heavy load images can be cached.

#### **Public Members**

## int32 t life

Count the cache entries's life. Add time\_tio\_open to life when the entry is used. Decrement all lifes by one every in every  $lv\_img\_cache\_open$ . If life == 0 the entry can be reused

## File system

LittlevGL has File system abstraction module which enables to attache any type of file system. The file system are identified by a letter. For example if the SD card is assiciated with letter 'S' a file can be reached like ""S:path/to/file.txt.

#### Add a driver

To add a driver an  $lv_fs_drv_t$  needs to be inaitilezed like this:

```
lv fs drv t drv;
lv_fs_drv_init(&drv);
                                          /*Basic initialization*/
drv.letter = 'S';
                                          /*An uppercased letter to identify teh.
⊶drive */
drv.file size = sizeof(my file object);
                                          /*Size required to store a file object*/
drv.rddir size = sizeof(my dir object);
                                          /*Size required to store a directory object...
→(used by dir_open/close/read)*/
drv.ready_cb = my_ready_cb;
                                          /*Callback to tell if the drive is ready to...
→use */
drv.open_cb = my_open_cb;
                                          /*Callback to open a file */
drv.close_cb = my_close_cb;
                                          /*Callback to close a file */
drv.read cb = my read cb;
                                          /*Callback to read a file */
drv.write cb = my write cb;
                                          /*Callback to write a file */
drv.seek_cb = my_seek_cb;
                                          /*Callback to seek in a file (Move cursor)...
drv.tell cb = my tell cb;
                                          /*Callback to tell the cursor position */
drv.trunc_cb = my_trunc_cb;
                                          /*Callback to delete a file */
                                          /*Callback to tell a file's size */
drv.size cb = my size cb;
```

(continues on next page)

(continued from previous page)

```
/*Callback to rename a file */
drv.rename_cb = my_size_cb;
drv.dir_open_cb = my_dir_open_cb;
                                          /*Callback to open directory to read its.
→content */
drv.dir_read_cb = my_dir_read_cb;
                                          /*Callback to read a directory's content */
drv.dir_close_cb = my_dir_close_cb;
                                          /*Callback to close a directory */
drv.free_space_cb = my_size_cb;
                                          /*Callback to tell free space on the drive
→*/
drv.user_data = my_user_data;
                                          /*Any custom data if required*/
lv_fs_drv_register(&drv);
                                          /*Finally register the drive*/
```

Any of the callbacks can be NULL to indicate that operation is not supported.

## Use drivers for images

Image objects can be open from files too (besides variables stored i nteh flash)

To initialize the for images the following callbacks are required:

- open
- close
- read
- seek
- tell

#### **API**

## **Typedefs**

```
typedef uint8_t lv_fs_res_t
typedef uint8_t lv_fs_mode_t
typedef struct _lv_fs_drv_t lv_fs_drv_t
```

## **Enums**

## enum [anonymous]

Errors in the filesystem module.

Values:

```
LV_FS_RES_OK = 0
LV_FS_RES_HW_ERR
LV_FS_RES_FS_ERR
LV_FS_RES_NOT_EX
```

```
LV_FS_RES_FULL

LV_FS_RES_LOCKED

LV_FS_RES_DENIED

LV_FS_RES_BUSY

LV_FS_RES_TOUT

LV_FS_RES_NOT_IMP

LV_FS_RES_OUT_OF_MEM

LV_FS_RES_INV_PARAM

LV_FS_RES_UNKNOWN
```

## enum [anonymous]

Filesystem mode.

Values:

$$\label{eq:local_local} \begin{split} \textbf{LV\_FS\_MODE\_WR} &= 0x01 \\ \textbf{LV\_FS\_MODE\_RD} &= 0x02 \end{split}$$

#### **Functions**

## void lv\_fs\_init(void)

Initialize the File system interface

Initialize a file system driver with default values. It is used to surly have known values in the fields ant not memory junk. After it you can set the fields.

#### **Parameters**

• drv: pointer to driver variable to initialize

## void lv\_fs\_drv\_register(lv\_fs\_drv\_t \*drv\_p)

Add a new drive

#### **Parameters**

• drv\_p: pointer to an lv\_fs\_drv\_t structure which is inited with the corresponding function pointers. The data will be copied so the variable can be local.

## bool lv\_fs\_is\_ready(char letter)

Test if a drive is rady or not. If the ready function was not initialized true will be returned.

Return true: drive is ready; false: drive is not ready

#### **Parameters**

• letter: letter of the drive

Return LV\_FS\_RES\_OK or any error from lv\_fs\_res\_t enum

#### **Parameters**

- file\_p: pointer to a lv\_fs\_file\_t variable
- path: path to the file beginning with the driver letter (e.g. S:/folder/file.txt)

• mode: read: FS\_MODE\_RD, write: FS\_MODE\_WR, both: FS\_MODE\_RD | FS\_MODE\_WR

## lv\_fs\_res\_t lv\_fs\_close(lv\_fs\_file\_t \*file\_p)

Close an already opened file

Return LV\_FS\_RES\_OK or any error from lv\_fs\_res\_t enum

#### **Parameters**

• file p: pointer to a *lv\_fs\_file\_t* variable

## lv\_fs\_res\_t lv\_fs\_remove(const char \*path)

Delete a file

Return LV\_FS\_RES\_OK or any error from lv\_fs\_res\_t enum

#### **Parameters**

• path: path of the file to delete

$$lv\_fs\_res\_t$$
  $lv\_fs\_read(lv\_fs\_file\_t *file\_p, void *buf, uint32\_t btr, uint32\_t *br)$  Read from a file

Return LV FS RES OK or any error from lv fs res t enum

#### **Parameters**

- file\_p: pointer to a *lv\_fs\_file\_t* variable
- buf: pointer to a buffer where the read bytes are stored
- btr: Bytes To Read
- br: the number of real read bytes (Bytes Read). NULL if unused.

$$lv\_fs\_res\_t$$
  $lv\_fs\_write(lv\_fs\_file\_t *file\_p, const void *buf, uint32\_t btw, uint32\_t *bw)$  Write into a file

Return LV\_FS\_RES\_OK or any error from lv\_fs\_res\_t enum

#### **Parameters**

- file p: pointer to a lv\_fs\_file t variable
- buf: pointer to a buffer with the bytes to write
- btr: Bytes To Write
- br: the number of real written bytes (Bytes Written). NULL if unused.

## lv fs res t lv fs seek(lv fs file t\*file p, uint32 t pos)

Set the position of the 'cursor' (read write pointer) in a file

Return LV\_FS\_RES\_OK or any error from lv\_fs\_res\_t enum

#### **Parameters**

- file p: pointer to a lv\_fs\_file t variable
- pos: the new position expressed in bytes index (0: start of file)

Give the position of the read write pointer

Return LV\_FS\_RES\_OK or any error from 'fs\_res\_t'

#### **Parameters**

- file p: pointer to a lv fs file t variable
- pos p: pointer to store the position of the read write pointer

## lv\_fs\_res\_t lv\_fs\_trunc(lv\_fs\_file\_t \*file\_p)

Truncate the file size to the current position of the read write pointer

Return LV\_FS\_RES\_OK: no error, the file is read any error from lv\_fs\_res\_t enum

#### **Parameters**

• file p: pointer to an 'ufs\_file\_t' variable. (opened with lv\_fs\_open )

Give the size of a file bytes

Return LV\_FS\_RES\_OK or any error from lv\_fs\_res\_t enum

## **Parameters**

- file\_p: pointer to a *lv\_fs\_file\_t* variable
- size: pointer to a variable to store the size

## lv\_fs\_res\_t lv\_fs\_rename(const char \*oldname, const char \*newname)

Rename a file

**Return** LV\_FS\_RES\_OK or any error from 'fs\_res\_t'

#### **Parameters**

- oldname: path to the file
- newname: path with the new name

$$\mathit{lv\_fs\_res\_t} \; \mathsf{lv\_fs\_dir\_open} ( \mathit{lv\_fs\_dir\_t} \; *\mathit{rddir\_p}, \; \mathsf{const} \; \mathrm{char} \; *\mathit{path})$$

Initialize a 'fs\_dir\_t' variable for directory reading

Return LV FS RES OK or any error from lv fs res t enum

#### **Parameters**

- rddir p: pointer to a 'fs read dir t' variable
- path: path to a directory

Read the next filename form a directory. The name of the directories will begin with '/'

Return LV\_FS\_RES\_OK or any error from lv\_fs\_res\_t enum

#### **Parameters**

- rddir p: pointer to an initialized 'fs rdir t' variable
- fn: pointer to a buffer to store the filename

$$lv\_fs\_res\_t$$
  $lv\_fs\_dir\_close(lv\_fs\_dir\_t*rddir\_p)$ 

Close the directory reading

Return LV FS RES OK or any error from lv fs res t enum

## Parameters

• rddir\_p: pointer to an initialized 'fs\_dir\_t' variable

$$lv\_fs\_res\_t$$
  $lv\_fs\_free\_space$  (char  $letter$ ,  $uint32\_t$  \* $total\_p$ ,  $uint32\_t$  \* $free\_p$ )

Get the free and total size of a driver in kB

Return LV\_FS\_RES\_OK or any error from lv\_fs\_res\_t enum

#### **Parameters**

- letter: the driver letter
- total p: pointer to store the total size [kB]
- free p: pointer to store the free size [kB]

## char \*lv fs get letters(char \*buf)

Fill a buffer with the letters of existing drivers

**Return** the buffer

#### **Parameters**

• buf: buffer to store the letters ('\0' added after the last letter)

## const char \*lv\_fs\_get\_ext(const char \*fn)

Return with the extension of the filename

Return pointer to the beginning extension or empty string if no extension

#### **Parameters**

• fn: string with a filename

## char \*lv\_fs\_up(char \*path)

Step up one level

**Return** the truncated file name

#### **Parameters**

• path: pointer to a file name

## const char \*lv fs get last(const char \*path)

Get the last element of a path (e.g. U:/folder/file -> file)

**Return** pointer to the beginning of the last element in the path

#### **Parameters**

• buf: buffer to store the letters ('\0' added after the last letter)

## struct \_lv\_fs\_drv\_t

## **Public Members**

```
char letter
```

$$lv\_fs\_res\_t$$
 (\*open\_cb)(struct  $\_lv\_fs\_drv\_t$  \*drv, void \*file\_p, const char \*path,  $lv\_fs\_mode\_t$  mode)

$$lv\_fs\_res\_t$$
 (\*read\_cb)(struct  $\_lv\_fs\_drv\_t$  \*drv, void \*file\_p, void \*buf, uint32\_t btr, uint32\_t \*br)

```
lv fs res t (*write cb)(struct lv fs drv t *drv, void *file p, const void *buf,
                             uint32 t btw, uint32 t *bw)
    lv_fs_res_t (*seek_cb)(struct _lv_fs_drv_t *drv, void *file_p, uint32_t pos)
    lv_fs_res_t (*tell_cb)(struct_lv_fs_drv_t*drv, void *file_p, uint32_t *pos_p)
    lv_fs_res_t (*trunc_cb)(struct _lv_fs_drv_t *drv, void *file_p)
    lv fs res t (*size cb)(struct lv fs drv t*drv, void *file p, uint32 t*size p)
    lv_fs_res_t (*rename_cb)(struct__lv_fs_drv_t *drv, const char *oldname, const char
                              *newname)
    lv_fs_res_t (*free_space_cb)(struct _lv_fs_drv_t *drv, uint32_t *total_p, uint32_t
                                   *free p)
    lv_fs_res_t (*dir_open_cb)(struct _lv_fs_drv_t *drv, void *rddir_p, const char *path)
    lv fs res_t (*dir read cb)(struct lv fs drv t*drv, void *rddir p, char *fn)
    lv fs res t (*dir close cb)(struct lv fs drv t *drv, void *rddir p)
    lv_fs_drv_user_data_t user_data
         Custom file user data
struct lv_fs_file_t
    Public Members
    void *file d
    lv fs drv t *drv
struct lv_fs_dir_t
    Public Members
    void *dir_d
    lv fs drv t *drv
```

#### **Animations**

You can automatically change the value of a variable between a start and an end value using animations. The animation will happen by the periodical call of an "animator" function with the corresponding value parameter.

The *animator* functions has the following prototype:

```
void func(void * var, lv_anim_var_t value);
```

This prototype is compatible with the majority of the set function of LittlevGL. For example lv obj set x(obj, value) or lv obj set width(obj, value)

#### Create an animation

To create an animation an <code>lv\_anim\_t</code> variable has to be initialized and configured with <code>lv\_anim\_set\_...()</code> functions.

```
lv anim t a;
lv anim set exec cb(\&a, btn1, lv obj set x);
                                                /*Set the animator function and
→variable to animate*/
lv_anim_set_time(&a, duration, delay);
                                                /*Set start and end values. E.g. 0,...
lv anim set values(&a, start, end);
→150*/
                                                /*Set path from `lv anim path ...`.
lv anim set path cb(&a, lv anim path linear);
→functions or a custom one.*/
lv_anim_set_ready_cb(&a, ready_cb);
                                                /*Set a callback to call then
→animation is ready. (Optional)*/
lv_anim_set_playback(&a, wait_time);
                                                /*Enable playback of teh animation...
→with `wait_time` delay*/
lv anim set repeat(&a, wait time);
                                                /*Enable repeat of teh animation with
→ `wait_time` delay. Can be compiled with playback*/
lv anim create(\&a);
                                                /*Start the animation*/
```

You can apply **multiple different animations** on the same variable at the same time. For example animate the x and y coordinates with <code>lv\_obj\_set\_x</code> and <code>lv\_obj\_set\_y</code>. However, only one animation can exist with a given variable and function pair. Therefore <code>lv\_anim\_create()</code> will delete the already existing variable-function animations.

## **Animation path**

You can determinate the **path of animation**. In the most simple case, it is linear which means the current value between *start* and *end* is changed linearly. A *path* is a function which calculates the next value to set based on the current state of the animation. Currently, there are the following built-in paths:

- lv\_anim\_path\_linear linear animation
- lv\_anim\_path\_step change in one step at the end
- lv\_anim\_path\_ease\_in slow at the beginning
- lv\_anim\_path\_ease\_out slow at the end
- lv\_anim\_path\_ease\_in\_out slow at the beginning and end too
- lv\_anim\_path\_overshoot overshoot the end value
- lv\_anim\_path\_bounce back a little from the end value (like hitting a wall)

#### Speed vs time

By default, you can set the animation time. But in some cases, the **animation speed** is more practical.

The <code>lv\_anim\_speed\_to\_time(speed, start, end)</code> function calculates the required time in milliseconds to reach the end value from a start value with the given speed. The speed is interpreted in <code>unit/sec</code> dimension. For example <code>lv\_anim\_speed\_to\_time(20,0,100)</code> will give 5000 milliseconds. For example in case of <code>lv obj set x unit</code> is pixels so <code>20 means 20 px/sec</code> speed.

#### **Delete animations**

You can delete an animation by lv\_anim\_del(var, func) by providing the animated variable and its animator function.

#### **API**

## Input device

## **Typedefs**

```
typedef void (*lv_anim_exec_xcb_t)(void *, lv_anim_value_t)
```

Generic prototype of "animator" functions. First parameter is the variable to animate. Second parameter is the value to set. Compatible with  $lv_xxx_set_yyy(obj, value)$  functions The x in  $xcb_t$  means its not a fully generic prototype because it doesn't receive  $lv_anim_t$  as its first argument

```
\textbf{typedef} \ \operatorname{void} \ (\textbf{*lv\_anim\_custom\_exec\_cb\_t}) \ (\textbf{struct} \ \_\mathit{lv\_anim\_t} \ \textbf{*}, \ \mathit{lv\_anim\_value\_t})
```

Same as lv\_anim\_exec\_xcb\_t but receives lv\_anim\_t \* as the first parameter. It's more consistent but less convenient. Might be used by binding generator functions.

```
typedef lv\_anim\_value\_t (*lv\_anim\_path\_cb\_t) (const struct \_lv\_anim\_t *)

Get the current value during an animation
```

```
\label{typedef_void} \textbf{typedef} \hspace{0.1cm} \text{void} \hspace{0.1cm} (\textbf{*lv\_anim\_ready\_cb\_t}) \textbf{(struct} \hspace{0.1cm} \_lv\_anim\_t \hspace{0.1cm} \textbf{*)}
```

Callback to call when the animation is ready

```
typedef struct <u>lv_anim_t</u> lv_anim_t
```

Describes an animation

#### **Enums**

#### enum [anonymous]

Can be used to indicate if animations are enabled or disabled in a case

Values:

```
LV_ANIM_OFF
LV_ANIM_ON
```

## **Functions**

```
void lv_anim_core_init(void)
```

Init. the animation module

```
void lv_anim_init(lv_anim_t *a)
```

Initialize an animation variable. E.g.: lv\_anim\_t a; lv\_anim\_init(&a); lv\_anim\_set\_...(&a); lv\_anim\_create(&a);

**Parameters** 

• a: pointer to an lv anim t variable to initialize

## static void lv\_anim\_set\_exec\_cb(lv\_anim\_t \*a, void \*var, lv\_anim\_exec\_xcb\_t exec\_cb)

Set a variable to animate function to execute on var

#### **Parameters**

- a: pointer to an initialized lv\_anim\_t variable
- var: pointer to a variable to animate
- $exec\_cb$ : a function to execute. LittelvGL's built-in functions can be used. E.g.  $lv\_obj\_set\_x$

## static void lv anim set time(lv\_anim\_t \*a, uint16 t duration, uint16 t delay)

Set the duration and delay of an animation

#### **Parameters**

- a: pointer to an initialized lv\_anim\_t variable
- duration: duration of the animation in milliseconds
- delay: delay before the animation in milliseconds

## static void lv\_anim\_set\_values(lv\_anim\_t \*a, lv\_anim\_value\_t start, lv\_anim\_value\_t end)

Set the start and end values of an animation

#### **Parameters**

- a: pointer to an initialized lv\_anim\_t variable
- start: the start value
- end: the end value

#### 

Similar to <code>lv\_anim\_set\_var\_and\_cb</code> but <code>lv\_anim\_custom\_exec\_cb\_t</code> receives <code>lv\_anim\_t</code> \* as its first parameter instead of <code>void</code> \*. This function might be used when <code>LittlevGL</code> is binded to other languages because it's more consistent to have <code>lv\_anim\_t</code> \* as first parameter.

#### **Parameters**

- a: pointer to an initialized lv anim t variable
- exec cb: a function to execute.

## static void lv\_anim\_set\_path\_cb(lv\_anim\_t \*a, lv\_anim\_path\_cb\_t path\_cb)

Set the path (curve) of the animation.

#### **Parameters**

- a: pointer to an initialized lv\_anim\_t variable
- path\_cb: a function the get the current value of the animation. The built in functions starts with lv\_anim\_path\_...

## $static\ void\ lv\_anim\_set\_ready\_cb(\mathit{lv\_anim\_t}\ *a,\ \mathit{lv\_anim\_ready\_cb\_t}\ \mathit{ready\_cb})$

Set a function call when the animation is ready

#### **Parameters**

- a: pointer to an initialized lv anim t variable
- ready cb: a function call when the animation is ready

## static void lv\_anim\_set\_playback(lv\_anim\_t \*a, uint16\_t wait\_time)

Make the animation to play back to when the forward direction is ready

#### **Parameters**

- a: pointer to an initialized lv\_anim\_t variable
- wait time: time in milliseconds to wait before starting the back direction

## static void lv anim clear playback(lv anim t\*a)

Disable playback. (Disabled after lv anim init())

#### **Parameters**

• a: pointer to an initialized lv\_anim\_t variable

## static void lv\_anim\_set\_repeat(lv\_anim\_t \*a, uint16\_t wait\_time)

Make the animation to start again when ready.

## **Parameters**

- a: pointer to an initialized lv anim t variable
- wait\_time: time in milliseconds to wait before starting the animation again

## static void lv\_anim\_clear\_repeat(lv\_anim\_t \*a)

Disable repeat. (Disabled after lv anim init())

#### **Parameters**

• a: pointer to an initialized lv\_anim\_t variable

## $\verb|static| void lv_anim_set_user_data(|\mathit{lv}\_\mathit{anim}\_\mathit{t}\ *\mathit{a}, |\mathit{lv}\_\mathit{anim}\_\mathit{user}\_\mathit{data}\_\mathit{t}\ \mathit{user}\_\mathit{data})|$

Set a user specific data for the animation

## Parameters

- a: pointer to an initialized lv\_anim\_t variable
- user data: the user data

```
static lv_anim_user_data_t lv_anim_get_user_data(lv_anim_t *a)
```

Get the user data

Return the user data

## Parameters

• a: pointer to an initialized lv anim t variable

## $\textbf{static} \ \text{lv\_anim\_user\_data\_t *lv\_anim\_get\_user\_data\_ptr(} \textit{lv\_anim\_t *a}\textbf{)}$

Get pointer to the user data

**Return** pointer to the user data

## **Parameters**

• a: pointer to an initialized lv\_anim\_t variable

## void lv\_anim\_create(lv\_anim\_t \*a)

Create an animation

## **Parameters**

• a: an initialized 'anim\_t' variable. Not required after call.

## bool lv anim del(void \*var, lv anim exec xcb t exec cb)

Delete an animation of a variable with a given animator function

Return true: at least 1 animation is deleted, false: no animation is deleted

#### **Parameters**

- var: pointer to variable
- exec\_cb: a function pointer which is animating 'var', or NULL to ignore it and delete all the animations of 'var

## static bool lv anim custom del(lv anim t\*a, lv anim custom exec cb t exec cb)

Delete an aniamation by getting the animated variable from a. Only animations with <code>exec\_cb</code> will be deleted. This function exist becasue it's logical that all anim functions receives an <code>lv\_anim\_t</code> as their first parameter. It's not practical in C but might makes the API more conequent and makes easier to genrate bindings.

Return true: at least 1 animation is deleted, false: no animation is deleted

#### **Parameters**

- a: pointer to an animation.
- exec\_cb: a function pointer which is animating 'var', or NULL to ignore it and delete all the animations of 'var

## uint16\_t lv\_anim\_count\_running(void)

Get the number of currently running animations

Return the number of running animations

Calculate the time of an animation with a given speed and the start and end values

**Return** the required time [ms] for the animation with the given parameters

## Parameters

- speed: speed of animation in unit/sec
- start: start value of the animation
- end: end value of the animation

## lv anim value t lv anim path linear(const lv anim t \*a)

Calculate the current value of an animation applying linear characteristic

Return the current value to set

#### **Parameters**

• a: pointer to an animation

## lv\_anim\_value\_t lv\_anim\_path\_ease\_in(const lv\_anim\_t \*a)

Calculate the current value of an animation slowing down the start phase

Return the current value to set

#### **Parameters**

• a: pointer to an animation

## lv\_anim\_value\_t lv\_anim\_path\_ease\_out(const lv\_anim\_t \*a)

Calculate the current value of an animation slowing down the end phase

Return the current value to set

#### **Parameters**

• a: pointer to an animation

## lv\_anim\_value\_t lv\_anim\_path\_ease\_in\_out(const lv\_anim\_t \*a)

Calculate the current value of an animation applying an "S" characteristic (cosine)

Return the current value to set

#### **Parameters**

• a: pointer to an animation

## $\mathit{lv\_anim\_value\_t} \ \texttt{lv\_anim\_path\_overshoot(const} \ \mathit{lv\_anim\_t} \ *a)$

Calculate the current value of an animation with overshoot at the end

Return the current value to set

#### **Parameters**

• a: pointer to an animation

## lv\_anim\_value\_t lv\_anim\_path\_bounce(const lv\_anim\_t \*a)

Calculate the current value of an animation with 3 bounces

Return the current value to set

#### **Parameters**

• a: pointer to an animation

## lv\_anim\_value\_t lv\_anim\_path\_step(const lv\_anim\_t \*a)

Calculate the current value of an animation applying step characteristic. (Set end value on the end of the animation)

Return the current value to set

## **Parameters**

• a: pointer to an animation

## struct \_lv\_anim\_t

 $\#include < lv\_anim.h > Describes an animation$ 

#### **Public Members**

## void \*var

Variable to animate

$$lv\_anim\_exec\_xcb\_t$$
 exec\_cb

Function to execute to animate

## $lv\_anim\_path\_cb\_t$ path\_cb

Function to get the steps of animations

#### lv anim ready cb t ready cb

Call it when the animation is ready

#### int32 t start

Start value

## int32 t end

End value

## uint16 t time

Animation time in ms

```
int16 t act time
    Current time in animation. Set to negative to make delay.
uint16_t playback_pause
    Wait before play back
uint16 t repeat pause
    Wait before repeat
lv anim user data t user data
    Custom user data
uint8 t playback
    When the animation is ready play it back
uint8_t repeat
    Repeat the animation infinitely
uint8 t playback now
    Play back is in progress
uint32 t has run
    Indicates the animation has run in this round
```

#### **Tasks**

LittlevGL has a built-in task system. You can register a functions to call them periodically. The tasks are handled and called in  $lv_task_handler()$  which needs to be called periodically in every few milliseconds. See *Porting* for more information.

The tasks are non-preemptive which means a task can interrupt an other. Therefore you can call any LittlevGL related function in a task.

#### Create a task

To create a new task use <code>lv\_task\_create(task\_cb, period\_ms, LV\_TASK\_PRIO\_OFF/LOWEST/LOW/MID/HIGH/HIGHEST, user\_data)</code>. It will create an <code>lv\_task\_t \*</code> variable which can be used later to modify the parameters of the task. <code>lv\_task\_create\_basic()</code> also can be used to create a new task without specifying any parameters.

A task callback should have void (\*lv task cb t)(lv task t \*); prototype.

For example:

```
void my_task(lv_task_t * task)
{
    /*Use the user_data*/
    uint32_t * user_data = task->user_data;
    printf("my_task called with user data: %d\n", *user_data);

    /*Do something with LittlevGL*/
    if(something_happened) {
        something_happened = false;
        lv_btn_create(lv_scr_act(), NULL);
    }
}
...
```

(continues on next page)

(continued from previous page)

```
static uint32_t user_data = 10;
lv_task_t * task = lv_task_create(my_task, 500, LV_TASK_PRI0_MID, &user_data);
```

## Ready and Reset

```
lv_task_ready(task) makes the task run on the next call of lv_task_handler().
lv_task_reset(task) resets the period of a task. It will be called the defined period milliseconds later.
```

## Set parameters

You can modify some parameters of the tasks later:

- lv\_task\_set\_cb(task, new\_cb)
- lv task set period(task, new period)
- lv\_task\_set\_prio(task, new\_priority)

## One-shot tasks

You can make a task to run only once by calling \textsup \task\_once(\task). The task will be automatically deleted when called for the first time.

#### Measure idle time

You can get the idle percentage time <code>lv\_task\_handler</code> with <code>lv\_task\_get\_idle()</code>. Note that, it doesn't measure the idle time of the overall system, only <code>lv\_task\_handler</code>. It might be misleading if you use an operating system and call <code>lv task handler</code> in a task.

## **Asynchronous calls**

In some cases, you can't do an action immediately. For example, you can't delete an object right now because something else still uses it or you don't want to block the execution now. For these cases, you can use the <code>lv\_async\_call(my\_function, data\_p)</code> to make <code>my\_function</code> to be called on the next call of <code>lv\_task\_handler</code>. <code>data\_p</code> will be passed to function when it's called. Note that, only the pointer of the data is saved so you need to ensure that the variable will be "alive" while the function is called. You can use <code>static</code>, global or dynamically allocated data.

For example:

```
void my_screen_clean_up(void * scr)
{
   /*Free some resources related to `scr`*/

   /*Finally delete the screen*/
   lv_obj_del(scr);
}
```

(continues on next page)

(continued from previous page)

```
/*Do somethings with the object on the current screen*/
/*Delete screen on next call of `lv task handler`. So not now.*/
lv_async_call(my_screen_clean_up, lv_scr_act());
/*The screen is still valid so you can do other things with it*/
API
Typedefs
typedef void (*lv task cb t)(struct _lv task_t *)
    Tasks execute this type type of functions.
typedef uint8_t lv_task_prio_t
typedef struct _lv_task_t lv_task_t
    Descriptor of a ly task
Enums
enum [anonymous]
    Possible priorities for lv_tasks
     Values:
    LV_TASK_PRIO_OFF = 0
    LV_TASK_PRIO_LOWEST
    LV_TASK_PRIO_LOW
    LV_TASK_PRIO_MID
    LV_TASK_PRIO_HIGH
    LV_TASK_PRIO_HIGHEST
    _LV_TASK_PRIO_NUM
Functions
void lv_task_core_init(void)
    Init the lv_task module
lv_task_t *lv_task_create_basic(void)
    Create an "empty" task.
                              It needs to initialzed with at least lv task set cb and
    lv_task_set_period
    Return pointer to the craeted task
lv task t *lv task create(lv task cb t task xcb, uint32 t period, lv task prio t prio, void
                           *user\_data)
    Create a new lv_task
    Return pointer to the new task
```

#### **Parameters**

- task\_xcb: a callback which is the task itself. It will be called periodically. (the 'x' in the argument name indicates that its not a fully generic function because it not follows the func\_name(object, callback, ...) convention)
- period: call period in ms unit
- prio: priority of the task (LV\_TASK\_PRIO\_OFF means the task is stopped)
- user\_data: custom parameter

## void lv task del(lv task t \*task)

Delete a lv task

#### **Parameters**

• task: pointer to task cb created by task

## void lv\_task\_set\_cb(lv\_task\_t \*task, lv\_task\_cb\_t task\_cb)

Set the callback the task (the function to call periodically)

#### **Parameters**

- task: pointer to a task
- task cb: the function to call periodically

## void lv\_task\_set\_prio(lv\_task\_t \*task, lv\_task\_prio\_t prio)

Set new priority for a ly task

#### **Parameters**

- task: pointer to a lv task
- prio: the new priority

## void lv task set period(lv task t \*task, uint32 t period)

Set new period for a ly task

#### **Parameters**

- task: pointer to a lv\_task
- period: the new period

## void lv task ready(lv task t\*task)

Make a lv\_task ready. It will not wait its period.

#### **Parameters**

• task: pointer to a ly task.

## void lv task once(lv\_task\_t \*task)

Delete the ly task after one call

#### **Parameters**

• task: pointer to a lv task.

## void lv task reset(lv\_task\_t \*task)

Reset a lv\_task. It will be called the previously set period milliseconds later.

## **Parameters**

• task: pointer to a lv\_task.

## void lv task enable(bool en)

Enable or disable the whole ly task handling

#### **Parameters**

• en: true: lv\_task handling is running, false: lv\_task handling is suspended

## uint8\_t lv\_task\_get\_idle(void)

Get idle percentage

Return the lv\_task idle in percentage

## struct lv task t

 $\#include < lv\_task.h > Descriptor of a lv\_task$ 

#### **Public Members**

```
uint32_t period
```

How often the task should run

## uint32\_t last\_run

Last time the task ran

 $lv\_task\_cb\_t$  task\_cb

Task function

## void \*user\_data

Custom user data

## uint8 t prio

Task priority

## uint8 t once

1: one shot task

## **Drawing**

With LittlevGL you don't need to draw anything manually. Just create objects (like buttons and labels), move and change them and LittlevGL will refresh and redraw what is required.

However, it might be useful to have a basic understanding of how drawing happens in LittlevGL.

The basic concept is to not draw directly to screen but draw to an internal buffer first and then copy that buffer to screen when the rendering is ready. It has two main advantages:

- 1. **Avoids flickering** while layers of the UI are drawn. E.g. when drawing a background + button + text each "stage" would be visible for a short time.
- 2. **It's faster** because when pixels are redrawn multiple times (e.g. background + button + text) it's faster to modify a buffer in RAM and finally write one pixel once than read/write a display directly on each pixel access. (e.g. via a display controller with SPI interface).

## **Buffering types**

As you already might learn in the *Porting* section there are 3 types of buffering:

1. One buffer LittlevGL draws the content of the screen into a buffer and sends it to the display. The buffer can be smaller than the screen. In this case, the larger areas will be redrawn in multiple parts. If only small areas changes (e.g. button press) then only those areas will be refreshed.

- 2. **Two non-screen-sized buffers** having two buffers LittlevGL can draw into one buffer while the content of the other buffer is sent to display in the background. DMA or other hardware should be used to transfer the data to the display to let the CPU draw meanwhile. This way the rendering and refreshing of the display become parallel. Similarly to the *One buffer* LittlevGL will draw the display's content in chunks if the buffer is smaller than the area to refresh.
- 3. Two screen-sized buffers. In contrast to Two non-screen-sized buffers LittlevGL will always provide the whole screen's content not only chunks. This way the driver can simply change the address of the frame buffer to the buffer received from LittlevGL. Therefore this method works the best when the MCU has an LCD/TFT interface and the frame buffer is just a location in the RAM.

#### Mechanism of screen refreshing

- 1. Something happens on the GUI which requires redrawing. E.g. a button has been pressed, a chart has been changed or an animation happened, etc.
- 2. LittlevGL saves the changed object's old and new area into a buffer, called *Invalid area buffer*. For optimization in some cases objects are not added to the buffer:
  - Hidden objects are not added
  - Objects completely out of their parent are not added
  - Areas out of the parent are cropped to the parent's area
  - The object on other screens are not added
- 3. In every LV DISP DEF REFR PERIOD (set in *lv\_conf.h*):
  - LittlevGL checks the invalid areas and joins the adjacent or intersecting areas
  - Takes the first joined area if it's smaller the display buffer then simply draws the areas content to the display buffer. If the area doesn't fit into the buffer draw as many lines as possible to the display buffer.
  - When the area is drawn call flush cb from the display driver to refresh the display
  - If the area was larger than the buffer redraw the remaining parts too.
  - Do the same with all the joined areas.

While an area is redrawn the library searches the most top object which covers the area to redraw and starts to draw from that object. For example, if a button's label has changed the library will see that it's enough to draw the button under the text and it's not required to draw the background too.

The difference between buffer types regarding the drawing mechanism is the following:

- 1. One buffer LittlevGL needs to wait for lv\_disp\_flush\_ready() (called at the end of flush\_cb) before starting to redraw the next part.
- 2. Two non-screen-sized buffers LittlevGL can immediately draw to the second buffer when the first is sent to flush\_cb because the flushing should be done by DMA (or similar hardware) in the background.
- 3. **Two screen-sized buffers** After calling flush\_cb the first buffer if being displayed as frame buffer. Its content is copied to the second buffer and all the changes are drawn on top of it.

## 3.15.4 Object types (Widgets)

Base object (lv\_obj)

## Overview

The Base Object contains the most basic attributes of the objects:

- coordinates
- parent object
- children
- main style
- attributes like Click enable, Drag enable, etc.

#### **Coordinates**

The object size can be modified with <code>lv\_obj\_set\_width(obj, new\_width)</code> and <code>lv\_obj\_set\_height(obj, new\_height)</code> or in one function with <code>lv\_obj\_set\_size(obj, new\_width, new\_height)</code>.

You can set the x and y coordinates relative to the parent with  $lv_obj_set_x(obj, new_x)$  and  $lv_obj_set_y(obj, new_y)$  or in one function with  $lv_obj_set_pos(obj, new_x, new_y)$ .

You can align the object to an other with  $lv_obj_align(obj, obj_ref, LV_ALIGN_.$ ..,  $x_shift, y_shift)$ . The second argument is a reference object,  $obj_will$  be aligned to it. If  $obj_ref = NULL$  then the parent of  $obj_will$  be used. The third argument is the  $type_will$  of alignment. These are the possible options:



The alignment types build like LV ALIGN OUT TOP MID.

The last two argument means an x and y shift after the alignment.

For example to align a text below an image: lv\_obj\_align(text, image,
LV\_ALIGN\_OUT\_BOTTOM\_MID, 0, 10).Or to align a text in the middle of its parent:
lv\_obj\_align(text, NULL, LV ALIGN CENTER, 0, 0).

 $\lower lv_obj_align_origo$  works similarly to  $\lower lv_obj_align$  but it aligns the middle point of the object. For example  $\lower lv_obj_align_origo(btn, image, LV_ALIGN_OUT_BOTTOM_MID, 0, 0)$  will align the center of the button the bottom of the image.

The parameters of the alignment will be saved in the object if LV\_USE\_OBJ\_REALIGN is enabled in  $lv\_conf.h$ . You can realign the objects manually with  $lv\_obj\_realign(obj)$ . It's equivalent to calling  $lv\_obj\_align$  again with the same parameters.

If the alignment happened with  $lv\_obj\_align\_origo$  then it will be used when the object is realigned.

If lv\_obj\_set\_auto\_realign(obj, true) is used the object will be realigned automatically if its size changes in lv\_obj\_set\_width/height/size() functions.

It's very useful when size animations are applied to the object and the original position needs to be kept.

Note that, the coordinates of screens can't be changed. Attempting to use these functions on screens will result in undefined behavior.

#### Parents and children

You can set a new parent for an object with lv\_obj\_set\_parent(obj, new\_parent). To get the current parent use lv obj get parent(obj).

To get the children of an object use <code>lv\_obj\_get\_child(obj, child\_prev)</code> (from last to first) or <code>lv\_obj\_get\_child\_back(obj, child\_prev)</code> (from first to last). To get the first child pass <code>NULL</code> as the second parameter and use the return value to iterate through the children. The function will return <code>NULL</code> if there is no more children. For example:

```
lv_obj_t * child;
child = lv_obj_get_child(parent, NULL);
while(child) {
    /*Do something with "child" */
    child = lv_obj_get_child(parent, child);
}
```

lv\_obj\_count\_children(obj) tells the number of children on an object.
lv\_obj\_count\_children\_recursive(obj) also tells the number of children but counts children of children recursively.

## Screens

When you have created a screen like  $lv_obj_create(NULL, NULL)$  you can load it with  $lv_scr_load(screen1)$ . The  $lv_scr_act()$  function gives you a pointer to the current screen.

If you have more display then it's important to know that these functions operate on the lastly created or the explicitly selected (with  $lv\_disp\_set\_default$ ) display.

To get the screen of an object use the lv obj get screen(obj) function.

## Layers

There are two automatically generated layers:

- top layer
- system layer

They are independent of the screens and the same layers will be shown on every screen. The *top layer* is above every object on the screen and *system layer* is above the *top layer* too. You can add any pop-up windows to the *top layer* freely. But the *system layer* is restricted to system level things (e.g. mouse cursor will be placed here in lv\_indev\_set\_cursor()).

The lv layer top() and lv layer sys() functions gives a pointer to the top or system layer.

You can bring an object to the foreground or send it to the background with  $lv\_obj\_move\_foreground(obj)$  and  $lv\_obj\_move\_background(obj)$ .

Read the Layer overview section to learn more about layers.

## **Style**

The base object stores the *Main style* of the object. To set a new style use <code>lv\_obj\_set\_style(obj, &new style)</code> function. If <code>NULL</code> is set as style then the object will inherit its parent's style.

Note that you shouldn't use <code>lv\_obj\_set\_style</code> is for "non Base objects". Every object type has its own style set function which should be used for them. E.g. for button <code>lv btn set style()</code>

If you modify a style, which is already used by objects in order to refresh the affected objects you can use either  $lv\_obj\_refresh\_style(obj)$  or to notify all object with a given style  $lv\_obj\_report\_style\_mod(\&style)$ . If the parameter of  $lv\_obj\_report\_style\_mod$  is NULL all objects will be notified.

Read the Style overview to learn more about styles.

#### **Events**

To set an event callback for an object use <code>lv\_obj\_set\_event\_cb(obj, event\_cb)</code>,

To manually send an event to an object use <code>lv\_event\_send(obj, LV\_EVENT\_..., data)</code>

Read the <code>Event overview</code> to learn more about the events.

#### **Attributes**

There are some attributes which can be enabled/disabled by lv\_obj\_set\_...(obj, true/false):

- hidden Hide the object. It will not be drawn and will be considered as if it doesn't exist., Its children will be hidden too.
- **click** Enabled to click the object via input devices. If disabled then object behind this object will be clicked. (E.g. *Labels* are not clickable by default)
- top If enabled then when this object or any of its children is clicked then this object comes to the foreground.
- drag Enable dragging (moving by an input device)
- drag\_dir Enable dragging only in specific directions. Can be LV\_DRAG\_DIR\_HOR/VER/ALL.
- drag\_throw Enable "throwing" with dragging as if the object would have momentum
- drag\_parent If enabled then the object's parent will be moved during dragging. It will look like as if the parent is dragged. Checked recursively, so can propagate to grandparents too.
- parent\_event Propagate the events to the parents too. Checked recursively, so can propagate to grandparents too.
- opa\_scale\_enable Enable opacity scaling. See the [#opa-scale](Opa scale) section.

## Opa scale

If lv\_obj\_set\_opa\_scale\_enable(obj, true) is set for an object then the object's and all of its children's opacity can be adjusted with lv\_obj\_set\_opa\_scale(obj, LV\_OPA\_...). The opacities stored in the styles will be scaled down by this factor.

It is very useful to fade in/out an object with some children using an Animation.

A little bit of technical background: during the rendering process the object and its parents are checked recursively to find a parent with enabled *Opa scale*. If an object has found with enabled *Opa scale* then that *Opa scale* will be used by the rendered object too. Therefore if you want to disable the Opa scaling for an object when the parent has Opa scale just enable Opa scaling for the object and set its value to LV\_OPA\_COVER. It will overwrite the parent's settings.

#### **Protect**

There are some specific actions which happen automatically in the library. To prevent one or more that kind of actions you can protect the object against them. The following protections exists:

- LV\_PROTECT\_NONE No protection
- LV\_PROTECT\_POS Prevent automatic positioning (e.g. Layout in Containers)
- LV\_PROTECT\_FOLLOW Prevent the object be followed (make a "line break") in automatic ordering (e.g. Layout in *Containers*)
- LV\_PROTECT\_PARENT Prevent automatic parent change. (e.g. *Page* moves the children created on the background to the scrollable)
- LV\_PROTECT\_PRESS\_LOST Prevent losing press when the press is slid out of the objects. (E.g. a *Button* can be released out of it if it was being pressed)
- LV\_PROTECT\_CLICK\_FOCUS Prevent automatically focusing the object if it's in a *Group* and click focus is enabled.
- LV PROTECT CHILD CHG Disable the child change signal. Used internally by the library

The  $lv\_obj\_set/clear\_protect(obj, LV\_PROTECT\_...)$  sets/clears the protection. You can use 'OR'ed values of protection types too.

#### **Groups**

Once an object is added to *group* with lv\_group\_add\_obj(group, obj) the object's current group can be get with lv obj get group(obj).

lv\_obj\_is\_focused(obj) tells if the object is currently focused in its group or not. If the object is not
added to a group false will be returned.

Read the *Input devices overview* to learn more about the *Groups*.

#### Extended click area

By default, the objects can be clicked only on their coordinates, however this area can be extended with lv\_obj\_set\_ext\_click\_area(obj, left, right, top, bottom). left/right/top/bottom tells extra size the directions respectively.

This feature needs to enabled in  $lv\_conf.h$  with LV\_USE\_EXT\_CLICK\_AREA. The possible values are:

- LV\_EXT\_CLICK\_AREA\_FULL store all 4 coordinates as lv\_coord\_t
- LV\_EXT\_CLICK\_AREA\_TINY store only horizontal and vertical coordinates (use the greater value of left/right and top/bottom) as uint8\_t

## **Styles**

Use lv\_obj\_set\_style(obj, &style) to set a style for a base obejct.

All style.body properties are used. The default style for screens is  $lv\_style\_scr$  and  $lv\_style\_plain\_color$  for normal objects

## **Events**

Only the Generic events are sent by the object type.

Learn more about *Events*.


## **Keys**

No *Keys* are processed by the object type.

Learn more about Keys.

## **Example**

## C

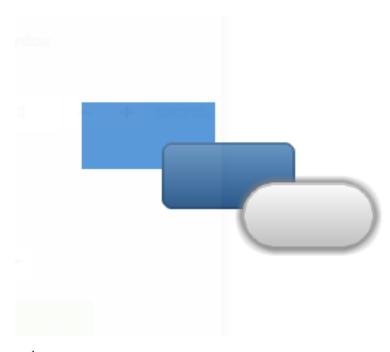

code

```
#include "lvgl/lvgl.h"
void lv ex obj 1(void)
   lv_obj_t * obj1;
   obj1 = lv_obj_create(lv_scr_act(), NULL);
   lv obj set size(obj1, 100, 50);
   lv obj set style(obj1, &lv style plain color);
   lv obj align(obj1, NULL, LV ALIGN CENTER, -60, -30);
   /*Copy the previous object and enable drag*/
   lv obj_t * obj2;
   obj2 = lv obj create(lv scr act(), obj1);
   lv_obj_set_style(obj2, &lv_style_pretty_color);
   lv obj align(obj2, NULL, LV ALIGN CENTER, 0, 0);
   static lv_style_t style_shadow;
   lv style copy(&style shadow, &lv style pretty);
   style_shadow.body.shadow.width = 6;
   style_shadow.body.radius = LV_RADIUS_CIRCLE;
   /*Copy the previous object (drag is already enabled)*/
   lv obj t * obj3;
   obj3 = lv_obj_create(lv_scr_act(), obj2);
   lv_obj_set_style(obj3, &style_shadow);
   lv obj align(obj3, NULL, LV ALIGN CENTER, 60, 30);
```

## MicroPython

No examples yet.

```
API
Typedefs
typedef uint8 tlv design mode t
typedef bool (*lv_design_cb_t)(struct _lv_obj_t *obj, const lv_area_t *mask_p,
                                   lv_design_mode_t mode)
     The design callback is used to draw the object on the screen. It accepts the object, a mask area, and
     the mode in which to draw the object.
typedef uint8_t lv_event_t
     Type of event being sent to the object.
typedef void (*lv_event_cb_t)(struct _lv_obj_t *obj, lv_event_t event)
     Event callback. Events are used to notify the user of some action being taken on the object. For
     details, see lv\_event\_t.
typedef uint8_t lv_signal_t
typedef lv_res_t (*lv_signal_cb_t)(struct _lv_obj_t *obj, lv_signal_t sign, void *param)
typedef uint8 tlv align t
```

typedef uint8\_t lv\_drag\_dir\_t

# typedef struct \_lv\_obj\_t lv\_obj\_t typedef uint8\_t lv\_protect\_t

#### **Enums**

## enum [anonymous]

Design modes

Values:

## LV\_DESIGN\_DRAW\_MAIN

Draw the main portion of the object

## LV\_DESIGN\_DRAW\_POST

Draw extras on the object

## LV DESIGN COVER CHK

Check if the object fully covers the 'mask\_p' area

## enum [anonymous]

Values:

## LV\_EVENT\_PRESSED

The object has been pressed

## LV EVENT PRESSING

The object is being pressed (called continuously while pressing)

## LV EVENT PRESS LOST

User is still pressing but slid cursor/finger off of the object

## LV\_EVENT\_SHORT\_CLICKED

User pressed object for a short period of time, then released it. Not called if dragged.

## LV EVENT LONG PRESSED

Object has been pressed for at least LV INDEV LONG PRESS TIME. Not called if dragged.

## LV EVENT LONG PRESSED REPEAT

Called after LV\_INDEV\_LONG\_PRESS\_TIME in every LV\_INDEV\_LONG\_PRESS\_REP\_TIME ms. Not called if dragged.

## LV EVENT CLICKED

Called on release if not dragged (regardless to long press)

## LV EVENT RELEASED

Called in every cases when the object has been released

## LV\_EVENT\_DRAG\_BEGIN

LV\_EVENT\_DRAG\_END

LV\_EVENT\_DRAG\_THROW\_BEGIN

LV\_EVENT\_KEY

LV\_EVENT\_FOCUSED

LV EVENT DEFOCUSED

## LV EVENT VALUE CHANGED

The object's value has changed (i.e. slider moved)

## LV\_EVENT\_INSERT

## LV\_EVENT\_REFRESH

## LV EVENT APPLY

"Ok", "Apply" or similar specific button has clicked

## LV EVENT CANCEL

"Close", "Cancel" or similar specific button has clicked

## LV\_EVENT\_DELETE

Object is being deleted

## enum [anonymous]

Signals are for use by the object itself or to extend the object's functionality. Applications should use  $lv\_obj\_set\_event\_cb$  to be notified of events that occur on the object.

Values:

## LV\_SIGNAL\_CLEANUP

Object is being deleted

## LV SIGNAL CHILD CHG

Child was removed/added

## LV SIGNAL CORD CHG

Object coordinates/size have changed

## LV\_SIGNAL\_PARENT\_SIZE\_CHG

Parent's size has changed

## LV SIGNAL STYLE CHG

Object's style has changed

## LV SIGNAL REFR EXT DRAW PAD

Object's extra padding has changed

## LV SIGNAL GET TYPE

LittlevGL needs to retrieve the object's type

## LV SIGNAL PRESSED

The object has been pressed

## LV SIGNAL PRESSING

The object is being pressed (called continuously while pressing)

## LV SIGNAL PRESS LOST

User is still pressing but slid cursor/finger off of the object

## LV\_SIGNAL\_RELEASED

User pressed object for a short period of time, then released it. Not called if dragged.

## LV SIGNAL LONG PRESS

Object has been pressed for at least LV\_INDEV\_LONG\_PRESS\_TIME. Not called if dragged.

## LV SIGNAL LONG PRESS REP

Called after LV\_INDEV\_LONG\_PRESS\_TIME in every LV\_INDEV\_LONG\_PRESS\_REP\_TIME ms. Not called if dragged.

#### LV SIGNAL DRAG BEGIN

LV SIGNAL DRAG END

LV\_SIGNAL\_FOCUS

LV\_SIGNAL\_DEFOCUS

# LV\_SIGNAL\_CONTROL LV\_SIGNAL\_GET\_EDITABLE [anonymous]

## $\textbf{enum} \ [\text{anonymous}]$

Object alignment.

Values:

 $LV_ALIGN_CENTER = 0$ 

LV\_ALIGN\_IN\_TOP\_LEFT

LV\_ALIGN\_IN\_TOP\_MID

LV\_ALIGN\_IN\_TOP\_RIGHT

LV\_ALIGN\_IN\_BOTTOM\_LEFT

LV\_ALIGN\_IN\_BOTTOM\_MID

LV ALIGN IN BOTTOM RIGHT

LV\_ALIGN\_IN\_LEFT\_MID

LV\_ALIGN\_IN\_RIGHT\_MID

LV\_ALIGN\_OUT\_TOP\_LEFT

LV\_ALIGN\_OUT\_TOP\_MID

LV\_ALIGN\_OUT\_TOP\_RIGHT

LV\_ALIGN\_OUT\_BOTTOM\_LEFT

LV\_ALIGN\_OUT\_BOTTOM\_MID

LV ALIGN OUT BOTTOM RIGHT

LV\_ALIGN\_OUT\_LEFT\_TOP

LV\_ALIGN\_OUT\_LEFT\_MID

LV\_ALIGN\_OUT\_LEFT\_BOTTOM

LV ALIGN OUT RIGHT TOP

LV\_ALIGN\_OUT\_RIGHT\_MID

LV\_ALIGN\_OUT\_RIGHT\_BOTTOM

## enum [anonymous]

Values:

## $LV_DRAG_DIR_HOR = 0x1$

Object can be dragged horizontally.

## $LV_DRAG_DIR_VER = 0x2$

Object can be dragged vertically.

## LV DRAG\_DIR\_ALL = 0x3

Object can be dragged in all directions.

## enum [anonymous]

Values:

LV PROTECT NONE = 0x00

### LV PROTECT CHILD CHG = 0x01

Disable the child change signal. Used by the library

### $LV_PROTECT_PARENT = 0x02$

Prevent automatic parent change (e.g. in lv\_page)

### $LV_PROTECT_POS = 0x04$

Prevent automatic positioning (e.g. in lv\_cont layout)

### LV PROTECT FOLLOW = 0x08

Prevent the object be followed in automatic ordering (e.g. in lv\_cont PRETTY layout)

### LV PROTECT PRESS LOST = 0x10

If the indev was pressing this object but swiped out while pressing do not search other object.

### LV PROTECT CLICK FOCUS = 0x20

Prevent focusing the object by clicking on it

#### **Functions**

### void lv\_init(void)

Init. the 'lv' library.

Create a basic object

Return pointer to the new object

#### **Parameters**

- parent: pointer to a parent object. If NULL then a screen will be created
- copy: pointer to a base object, if not NULL then the new object will be copied from it

### $lv_res_t lv_obj_del(lv_obj_t *obj)$

Delete 'obj' and all of its children

Return LV RES INV because the object is deleted

#### Parameters

• obj: pointer to an object to delete

### void lv obj clean(lv\_obj\_t\*obj)

Delete all children of an object

#### **Parameters**

• **obj**: pointer to an object

### void lv\_obj\_invalidate(const lv\_obj\_t \*obj)

Mark the object as invalid therefore its current position will be redrawn by 'lv\_refr\_task'

#### **Parameters**

• **obj**: pointer to an object

### void lv\_obj\_set\_parent(lv\_obj\_t \*obj, lv\_obj\_t \*parent)

Set a new parent for an object. Its relative position will be the same.

- obj: pointer to an object. Can't be a screen.
- parent: pointer to the new parent object. (Can't be NULL)

### void lv\_obj\_move\_foreground(lv\_obj\_t \*obj)

Move and object to the foreground

#### **Parameters**

• obj: pointer to an object

### void $lv_obj_move_background(lv_obj_t*obj)$

Move and object to the background

#### **Parameters**

• obj: pointer to an object

# void $lv_obj_set_pos(lv_obj_t *obj, lv_coord_t x, lv_coord_t y)$

Set relative the position of an object (relative to the parent)

#### **Parameters**

- obj: pointer to an object
- X: new distance from the left side of the parent
- y: new distance from the top of the parent

void 
$$lv_obj_set_x(lv_obj_t *obj, lv_coord_t x)$$

Set the x coordinate of a object

#### **Parameters**

- obj: pointer to an object
- X: new distance from the left side from the parent

void 
$$lv_obj_set_y(lv_obj_t *obj, lv_coord_t y)$$

Set the y coordinate of a object

#### **Parameters**

- **obj**: pointer to an object
- **y**: new distance from the top of the parent

void **lv obj set size**(
$$lv\_obj\_t*obj$$
,  $lv\_coord\_tw$ ,  $lv\_coord\_th$ )

Set the size of an object

#### **Parameters**

- obj: pointer to an object
- W: new width
- h: new height

### void $lv_obj_set_width(lv_obj_t *obj, lv_coord_t w)$

Set the width of an object

#### **Parameters**

- **obj**: pointer to an object
- W: new width

### void lv\_obj\_set\_height(lv\_obj\_t \*obj, lv\_coord\_t h)

Set the height of an object

#### **Parameters**

• **obj**: pointer to an object

• h: new height

$$\label{local_vobj_align} $$ \text{void lv\_obj\_} t *obj\_ t *obj\_ t *base, lv\_align\_ t align, lv\_coord\_ t x\_mod, lv\_coord\_ t y\_mod) $$$$

Align an object to an other object.

#### **Parameters**

- **obj**: pointer to an object to align
- base: pointer to an object (if NULL the parent is used). 'obj' will be aligned to it.
- align: type of alignment (see 'lv\_align\_t' enum)
- $x_{mod}$ : x coordinate shift after alignment
- y\_mod: y coordinate shift after alignment

$$\label{eq:coord_t} \begin{tabular}{l} void $lv\_obj\_align\_origo($lv\_obj\_t *obj, const $lv\_obj\_t *base, $lv\_align\_t $align, $lv\_coord\_t $x\_mod, $lv\_coord\_t $y\_mod)$ \end{tabular}$$

Align an object to an other object.

#### **Parameters**

- obj: pointer to an object to align
- base: pointer to an object (if NULL the parent is used). 'obj' will be aligned to it.
- align: type of alignment (see 'lv\_align\_t' enum)
- x mod: x coordinate shift after alignment
- y\_mod: y coordinate shift after alignment

### void lv\_obj\_realign(lv\_obj\_t \*obj)

Realign the object based on the last lv obj align parameters.

#### **Parameters**

• obj: pointer to an object

### void $lv_obj_set_auto_realign(lv_obj_t*obj, bool en)$

Enable the automatic realign of the object when its size has changed based on the last  $lv\_obj\_align$  parameters.

### **Parameters**

- **obj**: pointer to an object
- en: true: enable auto realign; false: disable auto realign

$$\label{eq:coord_top} \begin{tabular}{l} void $lv\_obj\_set\_ext\_click\_area($lv\_obj\_t*obj,$lv\_coord\_t$ $left,$lv\_coord\_t$ $right,$lv\_coord\_t$ $top,$lv\_coord\_t$ $bottom) \end{tabular}$$

Set the size of an extended clickable area

### Parameters

- **obj**: pointer to an object
- left: extended clickable are on the left [px]
- right: extended clickable are on the right [px]
- top: extended clickable are on the top [px]
- **bottom**: extended clickable are on the bottom [px]

### void lv\_obj\_set\_style(lv\_obj\_t \*obj, const lv\_style\_t \*style)

Set a new style for an object

#### **Parameters**

- obj: pointer to an object
- style\_p: pointer to the new style

### void lv\_obj\_refresh\_style(lv\_obj\_t \*obj)

Notify an object about its style is modified

#### **Parameters**

• obj: pointer to an object

### void lv\_obj\_report\_style\_mod(lv\_style\_t \*style)

Notify all object if a style is modified

#### **Parameters**

• style: pointer to a style. Only the objects with this style will be notified (NULL to notify all objects)

# void $lv_obj_set_hidden(lv_obj_t *obj, bool en)$

Hide an object. It won't be visible and clickable.

#### **Parameters**

- obj: pointer to an object
- en: true: hide the object

### void lv\_obj\_set\_click(lv\_obj\_t \*obj, bool en)

Enable or disable the clicking of an object

#### **Parameters**

- obj: pointer to an object
- en: true: make the object clickable

# void $lv_obj_set_top(lv_obj_t *obj, bool en)$

Enable to bring this object to the foreground if it or any of its children is clicked

#### **Parameters**

- **obj**: pointer to an object
- en: true: enable the auto top feature

### void lv\_obj\_set\_drag(lv\_obj\_t \*obj, bool en)

Enable the dragging of an object

#### **Parameters**

- **obj**: pointer to an object
- en: true: make the object dragable

### void lv\_obj\_set\_drag\_dir(lv\_obj\_t\*obj, lv\_drag\_dir\_t drag\_dir)

Set the directions an object can be dragged in

#### **Parameters**

- **obj**: pointer to an object
- drag\_dir: bitwise OR of allowed drag directions

### void lv\_obj\_set\_drag\_throw(lv\_obj\_t \*obj, bool en)

Enable the throwing of an object after is is dragged

#### **Parameters**

- obj: pointer to an object
- en: true: enable the drag throw

### void lv\_obj\_set\_drag\_parent(lv\_obj\_t \*obj, bool en)

Enable to use parent for drag related operations. If trying to drag the object the parent will be moved instead

#### **Parameters**

- **obj**: pointer to an object
- en: true: enable the 'drag parent' for the object

### void lv obj set parent event(lv\_obj\_t \*obj, bool en)

Propagate the events to the parent too

#### **Parameters**

- obj: pointer to an object
- en: true: enable the event propagation

### void lv\_obj\_set\_opa\_scale\_enable(lv\_obj\_t \*obj, bool en)

Set the opa scale enable parameter (required to set opa\_scale with  $lv\_obj\_set\_opa\_scale()$ )

#### **Parameters**

- obj: pointer to an object
- en: true: opa scaling is enabled for this object and all children; false: no opa scaling

### void lv\_obj\_set\_opa\_scale(lv\_obj\_t \*obj, lv\_opa\_t opa\_scale)

Set the opa scale of an object

#### **Parameters**

- **obj**: pointer to an object
- opa scale: a factor to scale down opacity [0..255]

### void lv obj set protect(lv\_obj\_t\*obj, uint8 t prot)

Set a bit or bits in the protect filed

### Parameters

- obj: pointer to an object
- prot: 'OR'-ed values from lv protect t

### void lv\_obj\_clear\_protect(lv\_obj\_t \*obj, uint8\_t prot)

Clear a bit or bits in the protect filed

#### **Parameters**

- obj: pointer to an object
- prot: 'OR'-ed values from lv protect t

### void lv\_obj\_set\_event\_cb(lv\_obj\_t\*obj, lv\_event\_cb\_t event\_cb)

Set a an event handler function for an object. Used by the user to react on event which happens with the object.

#### **Parameters**

• **obj**: pointer to an object

• event cb: the new event function

 $lv\_res\_t$   $lv\_event\_send(lv\_obj\_t*obj, lv\_event\_t\ event, const\ void*data)$ 

Send an event to the object

Return LV\_RES\_OK: obj was not deleted in the event; LV\_RES\_INV: obj was deleted in the event

#### **Parameters**

- obj: pointer to an object
- event: the type of the event from lv\_event\_t.
- data: arbitrary data depending on the object type and the event. (Usually NULL)

 $lv\_res\_t$   $lv\_event\_send\_func(lv\_event\_cb\_t event\_xcb, lv\_obj\_t *obj, lv\_event\_t event, const void *data)$ 

Call an event function with an object, event, and data.

Return LV\_RES\_OK: obj was not deleted in the event; LV\_RES\_INV: obj was deleted in the event

#### **Parameters**

- event\_xcb: an event callback function. If NULL LV\_RES\_0K will return without any actions. (the 'x' in the argument name indicates that its not a fully generic function because it not follows the func\_name(object, callback, ...) convention)
- obj: pointer to an object to associate with the event (can be NULL to simply call the  $event\_cb$ )
- event: an event
- data: pointer to a custom data

### const void \*lv\_event\_get\_data(void)

Get the data parameter of the current event

Return the data parameter

void lv\_obj\_set\_signal\_cb(lv\_obj\_t\*obj, lv\_signal\_cb\_t signal\_cb)

Set the a signal function of an object. Used internally by the library. Always call the previous signal function in the new.

#### Parameters

- **obj**: pointer to an object
- signal cb: the new signal function

void lv\_signal\_send(lv\_obj\_t \*obj, lv\_signal\_t signal, void \*param)

Send an event to the object

#### **Parameters**

- **obj**: pointer to an object
- event: the type of the event from lv event t.

void lv\_obj\_set\_design\_cb(lv\_obj\_t\*obj, lv\_design\_cb\_t design\_cb)

Set a new design function for an object

- obj: pointer to an object
- design cb: the new design function

### void \*lv\_obj\_allocate\_ext\_attr(lv\_obj\_t \*obj, uint16\_t ext\_size)

Allocate a new ext. data for an object

Return pointer to the allocated ext

#### **Parameters**

- **obj**: pointer to an object
- ext\_size: the size of the new ext. data

### void lv\_obj\_refresh\_ext\_draw\_pad(lv\_obj\_t \*obj)

Send a 'LV\_SIGNAL\_REFR\_EXT\_SIZE' signal to the object

#### **Parameters**

• **obj**: pointer to an object

### $lv\_obj\_t *lv\_obj\_get\_screen(const lv\_obj\_t *obj)$

Return with the screen of an object

Return pointer to a screen

#### **Parameters**

• **obj**: pointer to an object

### lv\_disp\_t \*lv\_obj\_get\_disp(const lv\_obj\_t \*obj)

Get the display of an object

Return pointer the object's display

#### **Parameters**

• scr: pointer to an object

### lv\_obj\_t \*lv\_obj\_get\_parent(const lv\_obj\_t \*obj)

Returns with the parent of an object

Return pointer to the parent of 'obj'

#### **Parameters**

• **obj**: pointer to an object

### lv\_obj\_t \*lv\_obj\_get\_child(const lv\_obj\_t \*obj, const lv\_obj\_t \*child)

Iterate through the children of an object (start from the "youngest, lastly created")

Return the child after 'act child' or NULL if no more child

#### **Parameters**

- **obj**: pointer to an object
- child: NULL at first call to get the next children and the previous return value later

### $lv\_obj\_t *lv\_obj\_get\_child\_back(const \ lv\_obj\_t *obj, const \ lv\_obj\_t *child)$

Iterate through the children of an object (start from the "oldest", firstly created)

Return the child after 'act child' or NULL if no more child

#### **Parameters**

- **obj**: pointer to an object
- child: NULL at first call to get the next children and the previous return value later

#### uint16 tlv obj count children(const lv obj t\*obj)

Count the children of an object (only children directly on 'obj')

Return children number of 'obj'

#### **Parameters**

• obj: pointer to an object

### uint16\_t lv\_obj\_count\_children\_recursive(const lv\_obj\_t \*obj)

Recursively count the children of an object

Return children number of 'obj'

#### **Parameters**

• **obj**: pointer to an object

### void lv\_obj\_get\_coords(const lv\_obj\_t \*obj, lv\_area\_t \*cords\_p)

Copy the coordinates of an object to an area

#### **Parameters**

- **obj**: pointer to an object
- cords\_p: pointer to an area to store the coordinates

### void lv\_obj\_get\_inner\_coords(const lv\_obj\_t \*obj, lv\_area\_t \*coords\_p)

Reduce area retried by  $lv\_obj\_get\_coords()$  the get graphically usable area of an object. (Without the size of the border or other extra graphical elements)

#### **Parameters**

• coords\_p: store the result area here

Get the x coordinate of object

Return distance of 'obj' from the left side of its parent

#### **Parameters**

• **obj**: pointer to an object

### lv\_coord\_t lv\_obj\_get\_y(const lv\_obj\_t \*obj)

Get the y coordinate of object

Return distance of 'obj' from the top of its parent

#### **Parameters**

• obj: pointer to an object

### lv\_coord\_t lv\_obj\_get\_width(const lv\_obj\_t \*obj)

Get the width of an object

Return the width

#### **Parameters**

• obj: pointer to an object

### lv\_coord\_t lv\_obj\_get\_height(const lv\_obj\_t \*obj)

Get the height of an object

Return the height

### Parameters

• **obj**: pointer to an object

### lv\_coord\_t lv\_obj\_get\_width\_fit(lv\_obj\_t \*obj)

Get that width reduced by the left and right padding.

**Return** the width which still fits into the container

#### **Parameters**

• **obj**: pointer to an object

### lv\_coord\_t lv\_obj\_get\_height\_fit(lv\_obj\_t\*obj)

Get that height reduced by the top an bottom padding.

Return the height which still fits into the container

#### **Parameters**

• obj: pointer to an object

### bool lv\_obj\_get\_auto\_realign(lv\_obj\_t\*obj)

Get the automatic realign property of the object.

Return true: auto realign is enabled; false: auto realign is disabled

#### **Parameters**

• **obj**: pointer to an object

### lv\_coord\_t lv\_obj\_get\_ext\_click\_pad\_left(const lv\_obj\_t \*obj)

Get the left padding of extended clickable area

Return the extended left padding

#### **Parameters**

• **obj**: pointer to an object

## lv\_coord\_t lv\_obj\_get\_ext\_click\_pad\_right(const lv\_obj\_t \*obj)

Get the right padding of extended clickable area

Return the extended right padding

#### **Parameters**

• **obj**: pointer to an object

### lv\_coord\_t lv\_obj\_get\_ext\_click\_pad\_top(const lv\_obj\_t \*obj)

Get the top padding of extended clickable area

Return the extended top padding

#### **Parameters**

• obj: pointer to an object

### lv\_coord\_t lv\_obj\_get\_ext\_click\_pad\_bottom(const lv\_obj\_t \*obj)

Get the bottom padding of extended clickable area

**Return** the extended bottom padding

#### **Parameters**

• **obj**: pointer to an object

### lv\_coord\_t lv\_obj\_get\_ext\_draw\_pad(const lv\_obj\_t \*obj)

Get the extended size attribute of an object

Return the extended size attribute

• obj: pointer to an object

### const lv\_style\_t \*lv\_obj\_get\_style(const lv\_obj\_t \*obj)

Get the style pointer of an object (if NULL get style of the parent)

Return pointer to a style

#### **Parameters**

• obj: pointer to an object

### bool lv\_obj\_get\_hidden(const lv\_obj\_t \*obj)

Get the hidden attribute of an object

Return true: the object is hidden

#### **Parameters**

• **obj**: pointer to an object

### bool lv\_obj\_get\_click(const lv\_obj\_t \*obj)

Get the click enable attribute of an object

Return true: the object is clickable

#### **Parameters**

• **obj**: pointer to an object

### bool lv\_obj\_get\_top(const lv\_obj\_t \*obj)

Get the top enable attribute of an object

Return true: the auto top feature is enabled

#### **Parameters**

• obj: pointer to an object

### bool lv obj get drag(const lv\_obj\_t\*obj)

Get the drag enable attribute of an object

Return true: the object is dragable

#### **Parameters**

• **obj**: pointer to an object

### lv\_drag\_dir\_t lv\_obj\_get\_drag\_dir(const lv\_obj\_t \*obj)

Get the directions an object can be dragged

Return bitwise OR of allowed directions an object can be dragged in

#### **Parameters**

• **obj**: pointer to an object

### bool lv\_obj\_get\_drag\_throw(const lv\_obj\_t \*obj)

Get the drag throw enable attribute of an object

Return true: drag throw is enabled

#### **Parameters**

• **obj**: pointer to an object

### bool lv\_obj\_get\_drag\_parent(const lv\_obj\_t \*obj)

Get the drag parent attribute of an object

Return true: drag parent is enabled

#### **Parameters**

• **obj**: pointer to an object

### bool lv\_obj\_get\_parent\_event(const $lv\_obj\_t *obj$ )

Get the drag parent attribute of an object

Return true: drag parent is enabled

#### **Parameters**

• obj: pointer to an object

### lv\_opa\_t lv\_obj\_get\_opa\_scale\_enable(const lv\_obj\_t \*obj)

Get the opa scale enable parameter

Return true: opa scaling is enabled for this object and all children; false: no opa scaling

#### **Parameters**

• obj: pointer to an object

# $lv\_opa\_t$ lv\_obj\_get\_opa\_scale(const $lv\_obj\_t *obj$ )

Get the opa scale parameter of an object

Return opa scale [0..255]

#### **Parameters**

• obj: pointer to an object

### uint8\_t lv\_obj\_get\_protect(const lv\_obj\_t \*obj)

Get the protect field of an object

Return protect field ('OR'ed values of lv\_protect\_t)

### Parameters

• obj: pointer to an object

### bool lv\_obj\_is\_protected(const lv\_obj\_t \*obj, uint8\_t prot)

Check at least one bit of a given protect bitfield is set

Return false: none of the given bits are set, true: at least one bit is set

#### Parameters

- **obj**: pointer to an object
- prot: protect bits to test ('OR'ed values of lv protect t)

### $lv \ signal \ cb \ t \ lv \ obj \ get \ signal \ cb (const \ lv \ obj \ t *obj)$

Get the signal function of an object

Return the signal function

#### **Parameters**

• **obj**: pointer to an object

### lv\_design\_cb\_t lv\_obj\_get\_design\_cb(const lv\_obj\_t \*obj)

Get the design function of an object

Return the design function

### Parameters

• **obj**: pointer to an object

# $lv\_event\_cb\_t$ lv\_obj\_get\_event\_cb(const $lv\_obj\_t$ \*obj)

Get the event function of an object

Return the event function

#### **Parameters**

• **obj**: pointer to an object

### void \*lv\_obj\_get\_ext\_attr(const lv\_obj\_t \*obj)

Get the ext pointer

Return the ext pointer but not the dynamic version Use it as ext->data1, and NOT da(ext)->data1

#### **Parameters**

• **obj**: pointer to an object

### void lv\_obj\_get\_type(lv\_obj\_t \*obj, lv\_obj\_type\_t \*buf)

Get object's and its ancestors type. Put their name in type\_buf starting with the current type. E.g. buf.type[0]="lv\_btn", buf.type[1]="lv\_cont", buf.type[2]="lv\_obj"

#### **Parameters**

- **obj**: pointer to an object which type should be get
- buf: pointer to an  $lv\_obj\_type\_t$  buffer to store the types

### $lv\_obj\_user\_data\_t$ $lv\_obj\_get\_user\_data(lv\_obj\_t*obj)$

Get the object's user data

Return user data

### **Parameters**

• obj: pointer to an object

# $lv\_obj\_user\_data\_t *lv\_obj\_get\_user\_data\_ptr(\mathit{lv\_obj\_t} *obj)$

Get a pointer to the object's user data

Return pointer to the user data

#### **Parameters**

• **obj**: pointer to an object

### void lv\_obj\_set\_user\_data(lv\_obj\_t\*obj, lv\_obj\_user\_data\_t data)

Set the object's user data. The data will be copied.

#### **Parameters**

- **obj**: pointer to an object
- data: user data

### void \*lv\_obj\_get\_group(const lv\_obj\_t \*obj)

Get the group of the object

Return the pointer to group of the object

#### **Parameters**

• **obj**: pointer to an object

### bool lv\_obj\_is\_focused(const lv\_obj\_t \*obj)

Tell whether the object is the focused object of a group or not.

Return true: the object is focused, false: the object is not focused or not in a group

#### **Parameters**

• obj: pointer to an object

### struct lv\_reailgn\_t

#### **Public Members**

### const struct $\_lv\_obj\_t$ \*base

lv coord t xofs

lv\_coord\_t yofs

lv\_align\_t align

uint8\_t auto\_realign

uint8 t origo align

1: the origo (center of the object) was aligned with lv\_obj\_align\_origo

### struct \_lv\_obj\_t

#### **Public Members**

### struct \_lv\_obj\_t \*par

Pointer to the parent object

### lv ll t child ll

Linked list to store the children objects

#### lv area t coords

Coordinates of the object (x1, y1, x2, y2)

### lv\_event\_cb\_t event\_cb

Event callback function

### $lv\_signal\_cb\_t$ signal\_cb

Object type specific signal function

### $lv\_design\_cb\_t$ design\_cb

Object type specific design function

#### void \*ext attr

Object type specific extended data

### const lv\_style\_t \*style\_p

Pointer to the object's style

#### void \*group p

Pointer to the group of the object

### uint8\_t ext\_click\_pad\_hor

Extra click padding in horizontal direction

### uint8 t ext click pad ver

Extra click padding in vertical direction

#### lv\_area\_t ext\_click\_pad

Extra click padding area.

### uint8\_t click

1: Can be pressed by an input device

### uint8 t drag

1: Enable the dragging

### uint8\_t drag\_throw

1: Enable throwing with drag

### uint8\_t drag\_parent

1: Parent will be dragged instead

#### uint8 t hidden

1: Object is hidden

#### uint8 t top

1: If the object or its children is clicked it goes to the foreground

### uint8 t opa scale en

1: opa scale is set

### uint8\_t parent\_event

1: Send the object's events to the parent too.

### lv\_drag\_dir\_t drag\_dir

Which directions the object can be dragged in

#### uint8 t reserved

Reserved for future use

#### uint8\_t protect

Automatically happening actions can be prevented. 'OR'ed values from lv\_protect\_t

### lv\_opa\_t opa\_scale

Scale down the opacity by this factor. Effects all children as well

### lv\_coord\_t ext\_draw\_pad

EXTtend the size in every direction for drawing.

#### lv realign t realign

Information about the last call to  $lv\_obj\_align$ .

### lv\_obj\_user\_data\_t user\_data

Custom user data for object.

### struct lv\_obj\_type\_t

 $\#include < lv\_obj.h > Used by \ lv\_obj\_get\_type()$ . The object's and its ancestor types are stored here

#### **Public Members**

### const char \*type[LV\_MAX\_ANCESTOR\_NUM]

[0]: the actual type, [1]: ancestor, [2] #1's ancestor ... [x]: "lv\_obj"

### Arc (lv\_arc)

#### Overview

The Arc object draws an arc within start and end angles and with a given thickness.

### **Angles**

To set the angles use the <code>lv\_arc\_set\_angles(arc, start\_angle, end\_angle)</code> function. The zero degree is at the bottom of the object and the degrees are increasing in a counter-clockwise direction. The angles should be in <code>[0;360]</code> range.

#### **Notes**

The width and height of the Arc should be the same.

Currently, the Arc object does not support anti-aliasing.

#### **Styles**

To set the style of an Arc object use lv\_arc\_set\_style(arc, LV\_ARC\_STYLE\_MAIN, &style)

- line.rounded make the endpoints rounded (opacity won't work properly if set to 1)
- line.width the thickness of the arc
- line.color the color of the arc.

#### **Events**

Only the Genreric events are sent by the object type.

Learn more about *Events*.


### **Keys**

No Keys are processed by the object type.

Learn more about Keys.

### **Example**

C

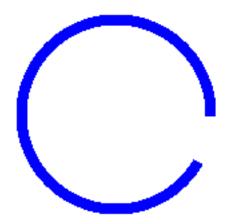

code

```
#include "lvgl/lvgl.h"
void lv_ex_arc_1(void)
  /*Create style for the Arcs*/
 lv_style_t style;
 lv_style_copy(&style, &lv_style_plain);
 style.line.color = LV_COLOR_BLUE;
                                             /*Arc color*/
 style.line.width = 8;
                                             /*Arc width*/
 /*Create an Arc*/
 lv_obj_t * arc = lv_arc_create(lv_scr_act(), NULL);
 lv_arc_set_style(arc, LV_ARC_STYLE_MAIN, &style);
                                                         /*Use the new style*/
 lv_arc_set_angles(arc, 90, 60);
 lv_obj_set_size(arc, 150, 150);
 lv_obj_align(arc, NULL, LV_ALIGN_CENTER, 0, 0);
}
```

#### MicroPython

No examples yet.

#### API

### **Typedefs**

```
typedef uint8_t lv_arc_style_t
```

#### **Enums**

### enum [anonymous]

Values:

LV ARC STYLE MAIN

#### **Functions**

```
lv\_obj\_t *lv\_arc\_create(lv\_obj\_t *par, const lv\_obj\_t *copy)
```

Create a arc objects

Return pointer to the created arc

#### **Parameters**

- par: pointer to an object, it will be the parent of the new arc
- copy: pointer to a arc object, if not NULL then the new object will be copied from it

Set the start and end angles of an arc. 0 deg: bottom, 90 deg: right etc.

#### **Parameters**

- arc: pointer to an arc object
- start: the start angle [0..360]
- end: the end angle [0..360]

$$\label{eq:const_varc_style} \begin{tabular}{l} void $\tt lv\_arc\_style\_t *arc, $lv\_arc\_style\_t *type, const $lv\_style\_t *style) \\ \hline \end{tabular}$$

Set a style of a arc.

#### **Parameters**

- arc: pointer to arc object
- type: which style should be set
- style: pointer to a style

### uint16\_t lv\_arc\_get\_angle\_start(lv\_obj\_t \*arc)

Get the start angle of an arc.

**Return** the start angle [0..360]

#### **Parameters**

• arc: pointer to an arc object

### uint16\_t lv\_arc\_get\_angle\_end(lv\_obj\_t \*arc)

Get the end angle of an arc.

**Return** the end angle [0..360]

#### **Parameters**

• arc: pointer to an arc object

# $\textbf{const} \ \text{lv\_style\_t} \ *\textbf{lv\_arc\_get\_style} (\ \textbf{const} \ \textit{lv\_obj\_t} \ *\textit{arc}, \ \textit{lv\_arc\_style\_t} \ \textit{type})$

Get style of a arc.

Return style pointer to the style

- arc: pointer to arc object
- type: which style should be get

### struct lv\_arc\_ext\_t

#### **Public Members**

```
lv_coord_t angle_start
lv coord t angle end
```

### Bar (lv\_bar)

#### Overview

The Bar objects have got two main parts:

- 1. a background which is the object itself
- 2. an indicator which shape is similar to the background but its width/height can be adjusted.

The orientation of the bar can be vertical or horizontal according to the width/height ratio. Logically on horizontal bars, the indicator's width, on vertical bars the indicator's height can be changed.

#### Value and range

A new value can be set by <code>lv\_bar\_set\_value(bar, new\_value, LV\_ANIM\_ON/OFF)</code>. The value is interpreted in a range (minimum and maximum values) which can be modified with <code>lv\_bar\_set\_range(bar, min, max)</code>. The default range is 1..100.

The new value in <code>lv\_bar\_set\_value</code> can be set with our without an animation depending on the last parameter (<code>LV\_ANIM\_ON/OFF</code>). The time of the animation can be adjusted by <code>lv bar set anim time(bar, 100)</code>. The time is in milliseconds unit.

#### **Symmetrical**

The bar can be drawn symmetrical to zero (drawn from zero left to right) if it's enabled with lv bar set sym(bar, true)

### **Styles**

To set the style of an Bar object use lv bar set style(arc, LV BAR STYLE MAIN, &style)

- LV\_BAR\_STYLE\_BG is an *Base object* therefore it uses its style elements. Its default style is: lv\_style\_pretty.
- LV\_BAR\_STYLE\_INDIC is similar to the background. It uses the *left*, *right*, *top* and *bottom* paddings to keeps some space form the edges of the background. Its default style is: lv\_style\_pretty\_color.

#### **Events**

Only the Generic events are sent by the object type.

Learn more about *Events*.

### Keys

No *Keys* are processed by the object type.

Learn more about *Keys*.

#### **Example**

C




code

```
#include "lvgl/lvgl.h"

void lv_ex_bar_1(void)
{
    lv_obj_t * bar1 = lv_bar_create(lv_scr_act(), NULL);
    lv_obj_set_size(bar1, 200, 30);
    lv_obj_align(bar1, NULL, LV_ALIGN_CENTER, 0, 0);
    lv_bar_set_anim_time(bar1, 1000);
    lv_bar_set_value(bar1, 100, LV_ANIM_ON);
}
```

### MicroPython

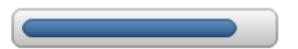

code

```
bar1 = lv.bar(lv.scr_act())
bar1.set_size(200, 30);
bar1.align(None, lv.ALIGN.CENTER, 0, 0);
bar1.set_anim_time(1000);
bar1.set_value(100, lv.ANIM.ON);
```

### **API**

### **Typedefs**

```
typedef uint8_t lv_bar_style_t
```

#### Enums

### enum [anonymous]

Bar styles.

Values:

LV\_BAR\_STYLE\_BG

LV\_BAR\_STYLE\_INDIC

Bar background style.

### **Functions**

```
lv\_obj\_t *lv\_bar\_create(lv\_obj\_t *par, const lv\_obj\_t *copy)
Create a bar objects
```

Return pointer to the created bar

#### **Parameters**

- par: pointer to an object, it will be the parent of the new bar
- copy: pointer to a bar object, if not NULL then the new object will be copied from it

void lv\_bar\_set\_value(lv\_obj\_t\*bar, int16\_t value, lv\_anim\_enable\_t anim)

Set a new value on the bar

#### **Parameters**

- bar: pointer to a bar object
- value: new value
- anim: LV\_ANIM\_ON: set the value with an animation; LV\_ANIM\_OFF: change the value immediately

void lv\_bar\_set\_range(lv\_obj\_t \*bar, int16\_t min, int16\_t max)

Set minimum and the maximum values of a bar

#### **Parameters**

- bar: pointer to the bar object
- min: minimum value
- max: maximum value

void lv\_bar\_set\_sym(lv\_obj\_t \*bar, bool en)

Make the bar symmetric to zero. The indicator will grow from zero instead of the minimum position.

#### **Parameters**

- bar: pointer to a bar object
- en: true: enable disable symmetric behavior; false: disable

void lv\_bar\_set\_anim\_time(lv\_obj\_t \*bar, uint16\_t anim\_time)

Set the animation time of the bar

#### **Parameters**

- bar: pointer to a bar object
- anim\_time: the animation time in milliseconds.

void lv bar\_set style(lv\_obj\_t\*bar\_lv\_bar\_style\_t type, const lv\_style\_t \*style)

Set a style of a bar

#### **Parameters**

- bar: pointer to a bar object
- type: which style should be set
- style: pointer to a style

### int16\_t lv\_bar\_get\_value(const lv\_obj\_t \*bar)

Get the value of a bar

Return the value of the bar

### Parameters

• bar: pointer to a bar object

### int16\_t lv\_bar\_get\_min\_value(const lv\_obj\_t \*bar)

Get the minimum value of a bar

**Return** the minimum value of the bar

#### **Parameters**

• bar: pointer to a bar object

### int16\_t lv\_bar\_get\_max\_value(const lv\_obj\_t \*bar)

Get the maximum value of a bar

Return the maximum value of the bar

#### **Parameters**

• bar: pointer to a bar object

### bool lv\_bar\_get\_sym(lv\_obj\_t \*bar)

Get whether the bar is symmetric or not.

Return true: symmetric is enabled; false: disable

#### **Parameters**

• bar: pointer to a bar object

### uint16\_t lv\_bar\_get\_anim\_time(lv\_obj\_t\*bar)

Get the animation time of the bar

**Return** the animation time in milliseconds.

#### **Parameters**

• bar: pointer to a bar object

# $\textbf{const} \ lv\_style\_t \ *\textbf{lv\_bar\_get\_style} (\textbf{const} \ \mathit{lv\_obj\_t} \ *\mathit{bar}, \ \mathit{lv\_bar\_style\_t} \ \mathit{type})$

Get a style of a bar

Return style pointer to a style

#### **Parameters**

- bar: pointer to a bar object
- type: which style should be get

### struct lv\_bar\_ext\_t

#include  $<\!\!lv\_bar.h\!\!>$  Data of bar

#### **Public Members**

 $uint8\_t \text{ sym}$ 

```
int16_t cur_value
int16_t min_value
int16_t max_value
lv_anim_value_t anim_start
lv_anim_value_t anim_end
lv_anim_value_t anim_state
lv_anim_value_t anim_state
```

### const lv\_style\_t \*style\_indic

### Button (lv\_btn)

#### Overview

Buttons are simple rectangle-like objects, but they change their style and state when they are pressed or released.

#### **States**

Buttons can be in one of the 5 possible states:

- LV\_BTN\_STATE\_REL Released state
- LV\_BTN\_STATE\_PR Pressed state
- LV\_BTN\_STATE\_TGL\_REL Toggled released state
- LV\_BTN\_STATE\_TGL\_PR Toggled pressed state
- LV\_BTN\_STATE\_INA Inactive state

The state from ...\_REL to ...\_PR will be changed automatically when the button is pressed and back when released.

You can set the button's state manually with lv btn set state(btn, LV BTN STATE TGL REL).

### **Toggle**

You can configure the buttons as *toggle button* with lv\_btn\_set\_toggle(btn, true). In this case on release, the button goes to *toggled released* state.

### Layout and Fit

Similarly to *Containers* buttons also have layout and fit attributes.

- lv\_btn\_set\_layout(btn, LV\_LAYOUT\_...) set a layout. The default is LV\_LAYOUT\_CENTER. So if you add a label, then it will be automatically aligned to the middle and can't be moved with lv\_obj\_set\_pos(). You can disable the layout with lv\_btn\_set\_layout(btn, LV\_LAYOUT\_OFF)
- lv\_btn\_set\_fit/fit2/fit4(btn, LV\_FIT\_..) enables to set the button width and/or height automatically according to the children, parent, and fit type.

#### Ink effect

You can enable a special animation on buttons: when a button is pressed, the pressed state will be drawn in a growing circle starting from the point of pressing. It's like an ink droplet in the water. When the button is released, the released state will be reverted by fading. It's like the ink is fully mixed with a lot of water and become no visible in it.

To control this animation use the following functions:

- lv\_btn\_set\_ink\_in\_time(btn, time\_ms) time of circle growing
- lv\_btn\_set\_ink\_wait\_time(btn, time\_ms) minim time to keep the fully covering (pressed) state
- lv\_btn\_set\_ink\_out\_time(btn, time\_ms) time fade back to releases state

This feature needs to be enabled with LV\_BTN\_INK\_EFFECT 1 in lv\_conf.h.

#### **Styles**

A button can have 5 independent styles for the 5 state. You can set them via: lv\_btn\_set\_style(btn, LV\_BTN\_STYLE\_..., &style). The styles use the style.body properties.

- LV\_BTN\_STYLE\_REL style of the released state. Default: lv style btn rel
- LV\_BTN\_STYLE\_PR style of the pressed state. Default: lv\_style\_btn\_pr
- LV\_BTN\_STYLE\_TGL\_REL style of the toggled released state. Default: lv\_style\_btn\_tgl\_rel
- $\bullet$  LV\_BTN\_STYLE\_TGL\_PR style of the toggled pressed state. Default: lv\_style\_btn\_tgl\_pr
- LV\_BTN\_STYLE\_INA style of the inactive state. Default: lv\_style\_btn\_ina

When you create a label on a button, it's a good practice to set the button's **style.text** properties too. Because labels have **style = NULL** by default, they inherit the parent's (button) style. Hence you don't need to create a new style for the label.

#### **Events**

Besides the Generic events the following Special events are sent by the buttons:

• LV\_EVENT\_VALUE\_CHANGED sent when the button is toggled.

Note that the generic input device-related events (like  $LV\_EVENT\_PRESSED$ ) are sent in the inactive state too. You need to check the state with  $lv\_btn\_get\_state(btn)$  to ignore the events from inactive buttons.

Learn more about Events.

#### **Keys**

The following *Keys* are processed by the Buttons:

- LV\_KEY\_RIGHT/UP Go to toggled state if toggling is enabled
- LV\_KEY\_LEFT/DOWN Go to non-toggled state if toggling is enabled

Note that, as usual, the state of LV\_KEY\_ENTER is translated to LV\_EVENT\_PRESSED/PRESSING/RELEASED etc.

Learn more about Keys.

#### **Example**

C



code

```
#include "lvgl/lvgl.h"
#include <stdio.h>
static void event_handler(lv_obj_t * obj, lv_event_t event)
    if(event == LV_EVENT_CLICKED) {
        printf("Clicked\n");
   else if(event == LV_EVENT_VALUE_CHANGED) {
        printf("Toggled\\n");
    }
}
void lv_ex_btn_1(void)
    lv_obj_t * label;
   lv_obj_t * btn1 = lv_btn_create(lv_scr_act(), NULL);
    lv_obj_set_event_cb(btn1, event_handler);
    lv_obj_align(btn1, NULL, LV_ALIGN_CENTER, 0, -40);
    label = lv label create(btn1, NULL);
   lv_label_set_text(label, "Button");
   lv_obj_t * btn2 = lv_btn_create(lv_scr_act(), NULL);
    lv_obj_set_event_cb(btn2, event_handler);
    lv_obj_align(btn2, NULL, LV_ALIGN_CENTER, 0, 40);
    lv_btn_set_toggle(btn2, true);
    lv_btn_toggle(btn2);
```

(continues on next page)

(continued from previous page)

```
lv_btn_set_fit2(btn2, LV_FIT_NONE, LV_FIT_TIGHT);
label = lv_label_create(btn2, NULL);
lv_label_set_text(label, "Toggled");
}
```

### MicroPython

No examples yet.

#### **API**

### **Typedefs**

```
typedef uint8_t lv_btn_state_t
typedef uint8_t lv_btn_style_t
```

#### **Enums**

### enum [anonymous]

Possible states of a button. It can be used not only by buttons but other button-like objects too

Values:

### LV\_BTN\_STATE\_REL

Released

### LV\_BTN\_STATE\_PR

Pressed

### LV BTN STATE TGL REL

Toggled released

### LV\_BTN\_STATE\_TGL\_PR

Toggled pressed

### LV BTN STATE INA

Inactive

### \_LV\_BTN\_STATE\_NUM

Number of states

### enum [anonymous]

Styles

Values:

### LV\_BTN\_STYLE\_REL

Release style

# LV\_BTN\_STYLE\_PR

Pressed style

### LV BTN STYLE TGL REL

Toggle released style

### LV\_BTN\_STYLE\_TGL\_PR

Toggle pressed style

### LV\_BTN\_STYLE\_INA

Inactive style

#### **Functions**

 $lv\_obj\_t *lv\_btn\_create(lv\_obj\_t *par, const lv\_obj\_t *copy)$ 

Create a button objects

Return pointer to the created button

#### **Parameters**

- par: pointer to an object, it will be the parent of the new button
- COPY: pointer to a button object, if not NULL then the new object will be copied from it

### void lv\_btn\_set\_toggle(lv\_obj\_t \*btn, bool tgl)

Enable the toggled states. On release the button will change from/to toggled state.

#### **Parameters**

- btn: pointer to a button object
- tgl: true: enable toggled states, false: disable

Set the state of the button

#### **Parameters**

- btn: pointer to a button object
- state: the new state of the button (from lv\_btn\_state\_t enum)

#### void lv btn toggle(lv\_obj\_t \*btn)

Toggle the state of the button (ON->OFF, OFF->ON)

### Parameters

• btn: pointer to a button object

### static void lv\_btn\_set\_layout(lv\_obj\_t \*btn, lv\_layout\_t layout)

Set the layout on a button

#### **Parameters**

- btn: pointer to a button object
- layout: a layout from 'lv\_cont\_layout\_t'

# static void lv\_btn\_set\_fit4(lv\_obj\_t \*btn, lv\_fit\_t left, lv\_fit\_t right, lv\_fit\_t top, lv\_fit\_t bottom)

Set the fit policy in all 4 directions separately. It tell how to change the button size automatically.

- btn: pointer to a button object
- left: left fit policy from lv\_fit\_t
- right: right fit policy from lv fit t
- top: bottom fit policy from lv fit t

• bottom: bottom fit policy from lv\_fit\_t

### static void lv\_btn\_set\_fit2(lv\_obj\_t\*btn, lv\_fit\_t hor, lv\_fit\_t ver)

Set the fit policy horizontally and vertically separately. It tell how to change the button size automatically.

#### **Parameters**

- btn: pointer to a button object
- hot: horizontal fit policy from lv fit t
- ver: vertical fit policy from lv fit t

### static void lv btn set fit(lv\_obj\_t\*cont, lv\_fit\_t fit)

Set the fit policy in all 4 direction at once. It tell how to change the button size automatically.

#### **Parameters**

- btn: pointer to a button object
- fit: fit policy from lv\_fit\_t

### void lv\_btn\_set\_ink\_in\_time(lv\_obj\_t\*btn, uint16\_t time)

Set time of the ink effect (draw a circle on click to animate in the new state)

#### **Parameters**

- btn: pointer to a button object
- time: the time of the ink animation

### void lv\_btn\_set\_ink\_wait\_time(lv\_obj\_t\*btn, uint16\_t time)

Set the wait time before the ink disappears

### Parameters

- btn: pointer to a button object
- time: the time of the ink animation

### void lv btn set ink out time(lv\_obj\_t\*btn, uint16 t time)

Set time of the ink out effect (animate to the released state)

### **Parameters**

- btn: pointer to a button object
- time: the time of the ink animation

# $\label{local_void_local_void_local_void_local} \begin{subarray}{ll} void $lv\_btn\_set\_style($lv\_obj\_t*btn, $lv\_btn\_style\_t$ type, $const $lv\_style\_t*style($lv\_obj\_t*btn, $lv\_btn\_style\_t$) $$ $lv\_style\_t $$ $lv\_style$

Set a style of a button.

#### **Parameters**

- btn: pointer to button object
- type: which style should be set
- style: pointer to a style

#### lv\_btn\_state\_t lv btn get state(const lv\_obj\_t\*btn)

Get the current state of the button

Return the state of the button (from lv\_btn\_state\_t enum)

#### **Parameters**

• btn: pointer to a button object

### bool lv\_btn\_get\_toggle(const lv\_obj\_t \*btn)

Get the toggle enable attribute of the button

Return ture: toggle enabled, false: disabled

#### **Parameters**

• btn: pointer to a button object

### static lv\_layout\_t lv\_btn\_get\_layout(const lv\_obj\_t \*btn)

Get the layout of a button

Return the layout from 'lv cont layout t'

#### **Parameters**

• btn: pointer to button object

### static lv\_fit\_t lv\_btn\_get\_fit\_left(const lv\_obj\_t \*btn)

Get the left fit mode

Return an element of lv\_fit\_t

#### **Parameters**

• btn: pointer to a button object

# $\textbf{static} \ \textit{lv\_fit\_t} \ \textbf{lv\_btn\_get\_fit\_right(const} \ \textit{lv\_obj\_t*btn)}$

Get the right fit mode

Return an element of lv\_fit\_t

#### **Parameters**

• btn: pointer to a button object

### static lv\_fit\_t lv\_btn\_get\_fit\_top(const lv\_obj\_t \*btn)

Get the top fit mode

Return an element of lv\_fit\_t

#### **Parameters**

• btn: pointer to a button object

### static lv\_fit\_t lv\_btn\_get\_fit\_bottom(const lv\_obj\_t \*btn)

Get the bottom fit mode

Return an element of lv fit t

#### **Parameters**

• btn: pointer to a button object

### uint16\_t lv\_btn\_get\_ink\_in\_time(const lv\_obj\_t \*btn)

Get time of the ink in effect (draw a circle on click to animate in the new state)

**Return** the time of the ink animation

#### **Parameters**

• btn: pointer to a button object

### uint16\_t lv\_btn\_get\_ink\_wait\_time(const lv\_obj\_t \*btn)

Get the wait time before the ink disappears

Return the time of the ink animation

• btn: pointer to a button object

### uint16\_t lv\_btn\_get\_ink\_out\_time(const lv\_obj\_t \*btn)

Get time of the ink out effect (animate to the releases state)

Return the time of the ink animation

#### **Parameters**

• btn: pointer to a button object

# ${\tt const} \ lv\_style\_t \ *lv\_btn\_get\_style (const \ \mathit{lv\_obj\_t} \ *btn, \ \mathit{lv\_btn\_style\_t} \ type)$

Get style of a button.

Return style pointer to the style

### **Parameters**

- btn: pointer to button object
- type: which style should be get

### struct lv btn ext t

 $\#include < lv\_btn.h >$  Extended data of button

#### **Public Members**

```
lv_cont_ext_t cont
    Ext. of ancestor

const lv_style_t *styles[_LV_BTN_STATE_NUM]
    Styles in each state

uint16_t ink_in_time
    [ms] Time of ink fill effect (0: disable ink effect)

uint16_t ink_wait_time
    [ms] Wait before the ink disappears

uint16_t ink_out_time
    [ms] Time of ink disappearing

lv_btn_state_t state
    Current state of the button from 'lv_btn_state_t' enum

uint8_t toggle
    1: Toggle enabled
```

#### Button matrix (lv\_btnm)

#### Overview

The Button Matrix objects can display multiple buttons in rows and columns.

#### Button's text

There is a text on each button. To specify them a descriptor string array, called map, needs to be used. The map can be set with  $lv\_btnm\_set\_map(btnm, my\_map)$ . The declaration of a map should look

like const char \* map[] = {"btn1", "btn2", "btn3", ""}. Note that the last element has to be an empty string!

Use "\n" in the map to make line break. E.g. {"btn1", "btn2", "\n", "btn3", ""}. The button's width is recalculated in every line to will the whole line.

#### **Control buttons**

The **buttons width** can be set relative to the other button in the same line with  $lv\_btnm\_set\_btn\_width(btnm, btn\_id, width)$  E.g. in a line with two buttons: btnA, width = 1 and btnB, width = 2, btnA will have 33 % width adnd btnB will have 66 % width.

In addition to width each button can be customized with the following parameters:

- LV\_BTNM\_CTRL\_HIDDEN make a button hidden
- LV\_BTNM\_CTRL\_NO\_REPEAT disable repeating when the button is long pressed
- LV\_BTNM\_CTRL\_INACTIVE make a button inactive
- LV\_BTNM\_CTRL\_TGL\_ENABLE enable toggling of a button
- LV\_BTNM\_CTRL\_TGL\_STATE set the toggle state
- LV\_BTNM\_CTRL\_CLICK\_TRIG if 0 the button will react on press, if 1 will react on release

The set or clear a button's control attribute use lv\_btnm\_set\_btn\_ctrl(btnm, btn\_id, LV\_BTNM\_CTRL\_...) and lv\_btnm\_clear\_btn\_ctrl(btnm, btn\_id, LV\_BTNM\_CTRL\_...) respectively. More LV BTNM CTRL ... values can be Ored

The set/clear the same control attribute for all buttons of a button matrix use lv\_btnm\_set\_btn\_ctrl\_all(btnm, btn\_id, LV\_BTNM\_CTRL\_...) and lv\_btnm\_clear\_btn\_ctrl\_all(btnm, btn\_id, LV\_BTNM\_CTRL\_...).

The set a control map for a button matrix (similarly to the map for the text) use <code>lv\_btnm\_set\_ctrl\_map(btnm, ctrl\_map)</code>. An element of <code>ctrl\_map</code> should look like <code>ctrl\_map[0] = width | LV\_BTNM\_CTRL\_NO\_REPEAT | LV\_BTNM\_CTRL\_TGL\_ENABLE</code>. The number of elements should be equal to the number of buttons (excluding newlines characters).

#### One toggle

The "One toggle" feature can be enabled with lv\_btnm\_set\_one\_toggle(btnm, true) to allow only one toggled button at once.

#### Recolor

The texts on the button can be recolored similarly to the recolor feature for *Label* object. To enabel it use lv btnm set recolor(btnm, true). After that a button with #FF0000 Red# text will be red.

#### Notes

The Button matrix object is very light weighted because the buttons are not created just virtually drawn on the fly. This way 1 button use only 8 extra bytes instead of the  $\sim 100$ -150 byte size of a normal Button object.

### **Styles**

The Button matrix works with 6 styles: a background and 5 button styles for each state. You can set the styles with lv\_btnm\_set\_style(btn, LV\_BTNM\_STYLE\_..., &style). The background and the buttons use the style.body properties. The labels use the style.text properties of the button styles.

- LV\_BTNM\_STYLE\_BG Background style. Uses all *style.body* properties including *padding* Default: *lv\_style\_pretty*
- LV\_BTNM\_STYLE\_BTN\_REL style of the released buttons. Default:  $lv\_style\_btn\_rel$
- LV\_BTNM\_STYLE\_BTN\_PR style of the pressed buttons. Default: lv\_style\_btn\_pr
- LV\_BTNM\_STYLE\_BTN\_TGL\_REL style of the toggled released buttons. Default:  $lv\_style\_btn\_tgl\_rel$
- • LV\_BTNM\_STYLE\_BTN\_TGL\_PR style of the toggled pressed buttons. Default:  $lv\_style\_btn\_tgl\_pr$
- LV\_BTNM\_STYLE\_BTN\_INA style of the inactive buttons. Default: lv\_style\_btn\_ina

#### **Events**

Besides the Genreric events the following Special events are sent by the button matrices:

• LV\_EVENT\_VALUE\_CHANGED sent when the button is pressed/released or repeated after long press. The event data is set to ID of the pressed/released button.

Learn more about *Events*.

##Keys

The following *Keys* are processed by the Buttons:

- LV\_KEY\_RIGHT/UP/LEFT/RIGHT To navigate among the buttons to select one
- LV\_KEY\_ENTER To press/release the selected button

Learn more about Keys.

### **Example**

C



code

```
#include "lvgl/lvgl.h"
#include <stdio.h>
static void event_handler(lv_obj_t * obj, lv_event_t event)
   if(event == LV_EVENT_VALUE_CHANGED) {
       const char * txt = lv_btnm_get_active_btn_text(obj);
       printf("%s was pressed\n", txt);
   }
}
"Action1", "Action2", ""};
void lv_ex_btnm_1(void)
   lv_obj_t * btnm1 = lv_btnm_create(lv_scr_act(), NULL);
   lv_btnm_set_map(btnm1, btnm_map);
   lv_btnm_set_btn_width(btnm1, 10, 2);
                                         /*Make "Action1" twice as wide as
→"Action2"*/
   lv_obj_align(btnm1, NULL, LV_ALIGN_CENTER, 0, 0);
   lv_obj_set_event_cb(btnm1, event_handler);
}
```

### MicroPython

No examples yet.

#### **API**

```
Typedefs
```

```
typedef uint16_t lv_btnm_ctrl_t
typedef uint8_t lv_btnm_style_t
```

#### **Enums**

### enum [anonymous]

Type to store button control bits (disabled, hidden etc.)

Values:

### LV BTNM CTRL HIDDEN = 0x0008

Button hidden

### $LV_BTNM_CTRL_NO_REPEAT = 0x0010$

Do not repeat press this button.

### LV BTNM CTRL INACTIVE = 0x0020

Disable this button.

### LV BTNM CTRL TGL ENABLE = 0x0040

Button can be toggled.

### LV BTNM CTRL TGL STATE = 0x0080

Button is currently toggled (e.g. checked).

### LV BTNM CTRL CLICK TRIG = 0x0100

1: Send LV EVENT SELECTED on CLICK, 0: Send LV EVENT SELECTED on PRESS

### enum [anonymous]

Values:

LV\_BTNM\_STYLE\_BG

LV BTNM STYLE BTN REL

LV BTNM STYLE BTN PR

LV\_BTNM\_STYLE\_BTN\_TGL\_REL

LV\_BTNM\_STYLE\_BTN\_TGL\_PR

LV\_BTNM\_STYLE\_BTN\_INA

#### **Functions**

 $lv\_obj\_t *lv\_btnm\_create(lv\_obj\_t *par, const lv\_obj\_t *copy)$ 

Create a button matrix objects

Return pointer to the created button matrix

- par: pointer to an object, it will be the parent of the new button matrix
- COPY: pointer to a button matrix object, if not NULL then the new object will be copied from it

### void $lv_btnm_set_map(const lv_obj_t *btnm, const char *map[])$

Set a new map. Buttons will be created/deleted according to the map. The button matrix keeps a reference to the map and so the string array must not be deallocated during the life of the matrix.

#### **Parameters**

- btnm: pointer to a button matrix object
- map: pointer a string array. The last string has to be: "". Use "\n" to make a line break.

### void lv\_btnm\_set\_ctrl\_map(const lv\_obj\_t \*btnm, const lv\_btnm\_ctrl\_t ctrl\_map[])

Set the button control map (hidden, disabled etc.) for a button matrix. The control map array will be copied and so may be deallocated after this function returns.

#### **Parameters**

- btnm: pointer to a button matrix object
- ctrl\_map: pointer to an array of lv\_btn\_ctrl\_t control bytes. The length of the array and position of the elements must match the number and order of the individual buttons (i.e. excludes newline entries). An element of the map should look like e.g.: ctrl\_map[0] = width | LV BTNM CTRL NO REPEAT | LV BTNM CTRL TGL ENABLE

### void lv btnm set pressed(const lv\_obj\_t\*btnm, uint16 t id)

Set the pressed button i.e. visually highlight it. Mainly used a when the btnm is in a group to show the selected button

#### **Parameters**

- btnm: pointer to button matrix object
- id: index of the currently pressed button (LV\_BTNM\_BTN\_NONE to unpress)

void  $lv\_btnm\_set\_style(lv\_obj\_t*btnm, lv\_btnm\_style\_t type, const lv\_style\_t*style)$ Set a style of a button matrix

#### **Parameters**

- btnm: pointer to a button matrix object
- type: which style should be set
- style: pointer to a style

### void lv btnm set recolor(const lv obj t\*btnm, bool en)

Enable recoloring of button's texts

#### **Parameters**

- btnm: pointer to button matrix object
- en: true: enable recoloring; false: disable

### void lv\_btnm\_set\_btn\_ctrl(const lv\_obj\_t\*btnm, uint16\_t btn\_id, lv\_btnm\_ctrl\_t ctrl)

Set the attributes of a button of the button matrix

#### **Parameters**

- btnm: pointer to button matrix object
- btn id: 0 based index of the button to modify. (Not counting new lines)

# void **lv\_btnm\_clear\_btn\_ctrl(const** *lv\_obj\_t\*btnm*, uint16\_t *btn\_id*, *lv\_btnm\_ctrl\_t ctrl*) Clear the attributes of a button of the button matrix

- btnm: pointer to button matrix object
- btn id: 0 based index of the button to modify. (Not counting new lines)

### void lv\_btnm\_set\_btn\_ctrl\_all(lv\_obj\_t\*btnm, lv\_btnm\_ctrl\_t ctrl)

Set the attributes of all buttons of a button matrix

#### **Parameters**

- btnm: pointer to a button matrix object
- ctrl: attribute(s) to set from lv\_btnm\_ctrl\_t. Values can be ORed.

### void lv\_btnm\_clear\_btn\_ctrl\_all(lv\_obj\_t\*btnm, lv\_btnm\_ctrl\_t ctrl)

Clear the attributes of all buttons of a button matrix

#### **Parameters**

- btnm: pointer to a button matrix object
- ctrl: attribute(s) to set from  $lv\_btnm\_ctrl\_t$ . Values can be ORed.
- en: true: set the attributes; false: clear the attributes

### void lv\_btnm\_set\_btn\_width(const lv\_obj\_t\*btnm, uint16\_t btn\_id, uint8\_t width)

Set a single buttons relative width. This method will cause the matrix be regenerated and is a relatively expensive operation. It is recommended that initial width be specified using <code>lv\_btnm\_set\_ctrl\_map</code> and this method only be used for dynamic changes.

#### **Parameters**

- btnm: pointer to button matrix object
- btn\_id: 0 based index of the button to modify.
- width: Relative width compared to the buttons in the same row. [1..7]

### void lv btnm set one toggle(lv\_obj\_t\*btnm, bool one\_toggle)

Make the button matrix like a selector widget (only one button may be toggled at a time).

Toggling must be enabled on the buttons you want to be selected with lv\_btnm\_set\_ctrl or lv\_btnm\_set\_btn\_ctrl\_all.

#### Parameters

- btnm: Button matrix object
- one\_toggle: Whether "one toggle" mode is enabled

#### const char \*\*lv btnm get map array(const lv obj t \*btnm)

Get the current map of a button matrix

Return the current map

#### **Parameters**

• btnm: pointer to a button matrix object

#### bool lv btnm get recolor(const lv\_obj\_t\*btnm)

Check whether the button's text can use recolor or not

Return true: text recolor enable; false: disabled

### Parameters

• btnm: pointer to button matrix object

# uint16\_t lv\_btnm\_get\_active\_btn(const lv\_obj\_t\*btnm)

Get the index of the lastly "activated" button by the user (pressed, released etc) Useful in the the event cb to get the text of the button, check if hidden etc.

Return index of the last released button (LV\_BTNM\_BTN\_NONE: if unset)

## **Parameters**

• btnm: pointer to button matrix object

# const char \*lv\_btnm\_get\_active\_btn\_text(const lv\_obj\_t \*btnm)

Get the text of the lastly "activated" button by the user (pressed, released etc) Useful in the the  ${\tt event\_cb}$ 

Return text of the last released button (NULL: if unset)

#### **Parameters**

• btnm: pointer to button matrix object

# uint16 t lv btnm get pressed btn(const lv\_obj\_t\*btnm)

Get the pressed button's index. The button be really pressed by the user or manually set to pressed with  $lv\ btnm\ set\ pressed$ 

Return index of the pressed button (LV\_BTNM\_BTN\_NONE: if unset)

## **Parameters**

• btnm: pointer to button matrix object

# const char \*lv btnm get btn text(const lv\_obj\_t\*btnm, uint16 t btn\_id)

Get the button's text

Return text of btn index' button

## Parameters

- btnm: pointer to button matrix object
- btn\_id: the index a button not counting new line characters. (The return value of lv btnm get pressed/released)

## bool lv btnm get btn ctrl(lv obj t\*btnm, uint16 t btn id, lv btnm ctrl t ctrl)

Get the whether a control value is enabled or disabled for button of a button matrix

Return true: long press repeat is disabled; false: long press repeat enabled

#### **Parameters**

- btnm: pointer to a button matrix object
- btn\_id: the index a button not counting new line characters. (E.g. the return value of lv\_btnm\_get\_pressed/released)
- ctrl: control values to check (ORed value can be used)

# $\textbf{const} \ lv\_style\_t \ *\textbf{lv\_btnm\_get\_style} (\textbf{const} \ lv\_obj\_t \ *btnm, \ lv\_btnm\_style\_t \ type)$

Get a style of a button matrix

**Return** style pointer to a style

- btnm: pointer to a button matrix object
- type: which style should be get

```
bool lv_btnm_get_one_toggle(const lv_obj_t *btnm)
```

Find whether "one toggle" mode is enabled.

Return whether "one toggle" mode is enabled

### **Parameters**

• btnm: Button matrix object

# struct lv\_btnm\_ext\_t

### **Public Members**

```
const char **map_p
lv_area_t *button_areas
lv_btnm_ctrl_t *ctrl_bits
const lv_style_t *styles_btn[_LV_BTN_STATE_NUM]
uint16_t btn_cnt
uint16_t btn_id_pr
uint16_t btn_id_act
uint8_t recolor
uint8_t one_toggle
```

# Calendar (Iv\_calendar)

## Overview

The Calendar object is a classic calendar which can:

- highlight the current day and week
- highlight any user-defined dates
- display the name of the days
- go the next/previous month by button click
- highlight the clicked day

The set and get dates in the calendar the <code>lv\_calendar\_date\_t</code> type is used which is a structure with <code>year</code>, <code>month</code> and <code>day</code> fields.

## **Current date**

To set the current date (today) use the lv\_calendar\_set\_today\_date(calendar, &today\_date) function.

#### Shown date

To set the shown date use lv\_calendar\_set\_shown\_date(calendar, &shown\_date);

## Highlighted days

The list of highlighted dates should be stored in a <code>lv\_calendar\_date\_t</code> array a loaded by <code>lv\_calendar\_set\_highlighted\_dates(calendar, &highlighted\_dates).Only the arrays pointer will be saved so the array should be a static or global variable.</code>

### Name of the days

The name of the days can be adjusted with  $lv_calendar_set_day_names(calendar, day_names)$  where  $day_names$  looks like const char \*  $day_names[7] = {"Su", "Mo", ...};$ 

### Name of the months

Similarly to day names the name of the month can be set with lv calendar set month names(calendar, month names array).

## **Styles**

You can set the styles with lv\_calendar\_set\_style(btn, LV\_CALENDAR\_STYLE\_..., &style).

- LV\_CALENDAR\_STYLE\_BG Style of the background using the body properties and the style of the date numbers using the text properties. body.padding.left/rigth/bottom padding will be added on the edges. around the date numbers.
- LV\_CALENDAR\_STYLE\_HEADER Style of the header where the current year and month is displayed. body and text properties are used.
- LV\_CALENDAR\_STYLE\_HEADER\_PR Pressed header style, used when the next/prev. month button is being pressed. text properties are used by the arrows.
- LV\_CALENDAR\_STYLE\_DAY\_NAMES Style of the day names. text properties are used by the day texts and body.padding.top determines the space above the day names.
- LV\_CALENDAR\_STYLE\_HIGHLIGHTED\_DAYS text properties are used to adjust the style of the highlights days
- LV\_CALENDAR\_STYLE\_INACTIVE\_DAYS text properties are used to adjust the style of the visible days of previous/next month.
- LV\_CALENDAR\_STYLE\_WEEK\_BOX body properties are used to set the style of the week box
- LV\_CALENDAR\_STYLE\_TODAY\_BOX body and text properties are used to set the style of the today box

### **Events**

Besides the Generic events the following Special events are sent by the calendars LV\_EVENT\_VALUE\_CHANGED is sent when the current month has changed.

In *Input device related* events <code>lv\_calendar\_get\_pressed\_date(calendar)</code> tells which day is currently being pressed or return <code>NULL</code> if no date is pressed.

## **Keys**

No *Keys* are processed by the object type.

Learn more about Keys.

## Example

C



code

```
#include "lvgl/lvgl.h"

static void event_handler(lv_obj_t * obj, lv_event_t event)
{
    if(event == LV_EVENT_CLICKED) {
        lv_calendar_date_t * date = lv_calendar_get_pressed_date(obj);
        if(date) {
            lv_calendar_set_today_date(obj, date);
        }
    }

void lv_ex_calendar_1(void)
{
    lv_obj_t * calendar = lv_calendar_create(lv_scr_act(), NULL);
    lv_obj_set_size(calendar, 230, 230);
    lv_obj_align(calendar, NULL, LV_ALIGN_CENTER, 0, 0);
    lv_obj_set_event_cb(calendar, event_handler);

/*Set the today*/
    lv_calendar_date_t today;
```

(continues on next page)

(continued from previous page)

```
today.year = 2018;
    today.month = 10;
    today.day = 23;
    lv_calendar_set_today_date(calendar, &today);
    lv_calendar_set_showed_date(calendar, &today);
    /*Highlight some days*/
    static lv_calendar_date_t highlihted_days[3];
                                                    /*Only it's pointer will be
⇒saved so should be static*/
   highlihted_days[0].year = 2018;
    highlihted days[0].month = 10;
   highlihted days[0].day = 6;
    highlihted days[1].year = 2018;
    highlihted_days[1].month = 10;
   highlihted_days[1].day = 11;
    highlihted_days[2].year = 2018;
    highlihted_days[2].month = 11;
   highlihted_days[2].day = 22;
    lv_calendar_set_highlighted_dates(calendar, highlihted_days, 3);
}
```

## MicroPython

No examples yet.

## **API**

## **Typedefs**

typedef uint8\_t lv\_calendar\_style\_t

## **Enums**

## enum [anonymous]

Calendar styles

Values:

# LV CALENDAR STYLE BG

Background and "normal" date numbers style

## LV CALENDAR STYLE HEADER

# LV\_CALENDAR\_STYLE\_HEADER\_PR

Calendar header style

# LV\_CALENDAR\_STYLE\_DAY\_NAMES

Calendar header style (when pressed)

# LV\_CALENDAR\_STYLE\_HIGHLIGHTED\_DAYS

Day name style

# LV\_CALENDAR\_STYLE\_INACTIVE\_DAYS

Highlighted day style

# LV\_CALENDAR\_STYLE\_WEEK\_BOX

Inactive day style

# LV CALENDAR\_STYLE\_TODAY\_BOX

Week highlight style

#### **Functions**

# lv\_obj\_t \*lv\_calendar\_create(lv\_obj\_t \*par, const lv\_obj\_t \*copy)

Create a calendar objects

Return pointer to the created calendar

#### **Parameters**

- par: pointer to an object, it will be the parent of the new calendar
- copy: pointer to a calendar object, if not NULL then the new object will be copied from it

# 

Set the today's date

### **Parameters**

- calendar: pointer to a calendar object
- today: pointer to an  $lv\_calendar\_date\_t$  variable containing the date of today. The value will be saved it can be local variable too.

# $\label{localendar_set_showed_date} \begin{picture}(tv\_obj\_t * calendar, tv\_calendar\_date\_t * showed)(tv\_obj\_t * calendar\_date\_t * showed)(tv\_obj\_t * showed)(tv\_obj\_t$

Set the currently showed

## **Parameters**

- calendar: pointer to a calendar object
- **showed**: pointer to an  $lv\_calendar\_date\_t$  variable containing the date to show. The value will be saved it can be local variable too.

# void lv\_calendar\_set\_highlighted\_dates(lv\_obj\_t \*calendar, lv\_calendar\_date\_t \*highlighted, uint16\_t date\_num)

Set the highlighted dates

## **Parameters**

- calendar: pointer to a calendar object
- highlighted: pointer to an *lv\_calendar\_date\_t* array containing the dates. ONLY A POINTER WILL BE SAVED! CAN'T BE LOCAL ARRAY.
- date num: number of dates in the array

# void lv\_calendar\_set\_day\_names(lv\_obj\_t\*calendar, const char \*\*day\_names)

Set the name of the days

## Parameters

• calendar: pointer to a calendar object

• day\_names: pointer to an array with the names. E.g. const char \* days[7] = {"Sun", "Mon", ...} Only the pointer will be saved so this variable can't be local which will be destroyed later.

void lv calendar\_set month names(lv\_obj\_t \*calendar, const char \*\*\*day\_names)

Set the name of the month

#### **Parameters**

- calendar: pointer to a calendar object
- day\_names: pointer to an array with the names. E.g. const char \* days[12] = {"Jan", "Feb", ...} Only the pointer will be saved so this variable can't be local which will be destroyed later.

 $\label{eq:const_void_lv_calendar_style} \begin{tabular}{ll} v\_calendar\_style\_t & type, & const & v\_style\_t \\ & *style) \end{tabular}$ 

Set a style of a calendar.

#### **Parameters**

- calendar: pointer to calendar object
- type: which style should be set
- style: pointer to a style

 $lv\_calendar\_date\_t *lv\_calendar\_get\_today\_date(const \ lv\_obj\_t *calendar)$  Get the today's date

Return return pointer to an *lv\_calendar\_date\_t* variable containing the date of today.

#### **Parameters**

• calendar: pointer to a calendar object

 $\label{lv_calendar_date_t*lv_calendar_get_showed_date(const} \ lv\_obj\_t \ *calendar) \\ \text{Get the currently showed}$ 

Return pointer to an lv calendar date t variable containing the date is being shown.

# **Parameters**

- calendar: pointer to a calendar object
- $\label{lv_calendar_date_t*lv_calendar_get_pressed_date(const} \ \textit{lv\_obj\_t*calendar}) \\ \text{Get the the pressed date.}$

Return pointer to an lv\_calendar\_date\_t variable containing the pressed date.

### **Parameters**

- calendar: pointer to a calendar object
- $\label{localendar_date_t*lv_calendar_get_highlighted_dates(const} \ \textit{lv\_obj\_t*calendar}) \\ \text{Get the highlighted dates}$

Return pointer to an lv\_calendar\_date\_t array containing the dates.

# Parameters

• calendar: pointer to a calendar object

# 

Get the number of the highlighted dates

Return number of highlighted days

### **Parameters**

• calendar: pointer to a calendar object

# const char \*\*lv\_calendar\_get\_day\_names(const lv\_obj\_t \*calendar)

Get the name of the days

Return pointer to the array of day names

## **Parameters**

• calendar: pointer to a calendar object

# const char \*\*lv\_calendar\_get\_month\_names(const lv\_obj\_t \*calendar)

Get the name of the month

Return pointer to the array of month names

### **Parameters**

• calendar: pointer to a calendar object

# 

Get style of a calendar.

Return style pointer to the style

### **Parameters**

- calendar: pointer to calendar object
- type: which style should be get

## struct lv calendar date t

#include <\lv\_calendar.h> Represents a date on the calendar object (platform-agnostic).

### **Public Members**

```
uint16_t year
int8_t month
int8_t day
```

## struct lv\_calendar\_ext\_t

## **Public Members**

```
lv_calendar_date_t today
lv_calendar_date_t showed_date
lv_calendar_date_t *highlighted_dates
uint8_t highlighted_dates_num
int8_t btn_pressing
lv_calendar_date_t pressed_date
const char **day_names
const char **month_names
const lv_style_t *style_header
```

```
const lv_style_t *style_header_pr
const lv_style_t *style_day_names
const lv_style_t *style_highlighted_days
const lv_style_t *style_inactive_days
const lv_style_t *style_week_box
const lv_style_t *style_today_box
```

## Canvas (Iv\_canvas)

### Overview

A Canvas is like an *Image* where the user can draw anything.

## **Buffer**

Canvas needs a buffer which stores the drawn image. To assign a buffer lv canvas set buffer(canvas, buffer, width, height, Canvas use LV IMG CF TRUE COLOR ALPHA). buffer is static buffer (not just a a variable) to hold the image of the canvas. For example static lv color t buffer[LV CANVAS BUF SIZE TRUE COLOR(width, height)]. LV CANVAS BUF SIZE .. . macros help to determine the size of the buffer with different color formats.

## **Palette**

For LV\_IMG\_CF\_INDEXED\_... color formats a palette needs to be initialized with  $lv_{canvas_set_palette(canvas, 3, LV_COLOR_RED)$ . It sets pixels with index=3 to red.

# **Drawing**

To set a pixel on the canvas use  $lv_canvas_set_px(canvas, x, y, LV_COLOR_RED)$ . With  $LV_IMG_CF_INDEXED_...$  or  $LV_IMG_CF_ALPHA_...$  the index of the color or the alpha value needs to be passed as color. E.g.  $lv_color_t c$ ; c.full = 3;

lv canvas fill bg(canvas, LV COLOR BLUE) fills the whole canvas to blue.

An array of pixels can be copied to the canvas with lv\_canvas\_copy\_buf(canvas, buffer\_to\_copy, x, y, width, height). The color format of the buffer and the canvas need to match.

To draw something to the canvas use

- lv\_canvas\_draw\_rect(canvas, x, y, width, heigth, &style)
- lv\_canvas\_draw\_text(canvas, x, y, max\_width, &style, txt, LV LABEL ALIGN LEFT/CENTER/RIGTH)
- lv canvas draw img(canvas, x, y, &img src, &style)
- lv canvas draw line(canvas, point array, point cnt, &style)
- lv\_canvas\_draw\_polygon(canvas, points\_array, point\_cnt, &style)
- lv\_canvas\_draw\_arc(canvas, x, y, radius, start\_angle, end\_angle, &style)

## **Rotate**

A rotated image can be added to canvas with lv\_canvas\_rotate(canvas, &imd\_dsc, angle, x, y, pivot\_x, pivot\_y). It will rotate the image shown by img\_dsc around the given pivot and stores it on the x, y coordinates of canvas. Instead of img\_dsc and the buffer of an other canvas also can be used by lv\_canvas\_get\_img(canvas).

Note that a canvas can't be rotated on itself. You need a source and destination canvas or image.

## **Styles**

You can set the styles with lv\_canvas\_set\_style(btn, LV\_CANVAS\_STYLE\_MAIN, &style). style.image.color is used to tell the base color with LV IMG CF ALPHA ... color format.

### **Events**

Only the Generic events are sent by the object type.

Learn more about Events.


# **Keys**

No *Keys* are processed by the object type.

Learn more about Keys.

# **Example**

C

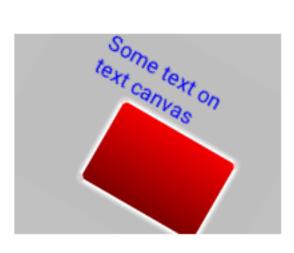

code

```
#include "lvgl/lvgl.h"
#define CANVAS_WIDTH 200
#define CANVAS_HEIGHT 150
void lv_ex_canvas_1(void)
    static lv_style_t style;
    lv_style_copy(&style, &lv_style_plain);
    style.body.main color = LV COLOR RED;
    style.body.grad_color = LV_COLOR_MAROON;
    style.body.radius = 4;
    style.body.border.width = 2;
    style.body.border.color = LV_COLOR_WHITE;
    style.body.shadow.color = LV_COLOR_WHITE;
    style.body.shadow.width = 4;
    style.line.width = 2;
    style.line.color = LV_COLOR_BLACK;
    style.text.color = LV_COLOR_BLUE;
    static lv_color t cbuf[LV_CANVAS_BUF_SIZE_TRUE_COLOR(CANVAS_WIDTH, CANVAS_
→HEIGHT)];
    lv obj t * canvas = lv canvas create(lv scr act(), NULL);
    lv canvas set buffer(canvas, cbuf, CANVAS WIDTH, CANVAS HEIGHT, LV IMG CF TRUE
→COLOR);
    lv_obj_align(canvas, NULL, LV_ALIGN_CENTER, 0, 0);
    lv canvas fill bg(canvas, LV COLOR SILVER);
    lv canvas draw rect(canvas, 70, 60, 100, 70, &style);
    lv_canvas_draw_text(canvas, 40, 20, 100, &style, "Some text on text canvas", LV_
→LABEL_ALIGN_LEFT);
   /* Test the rotation. It requires an other buffer where the orignal image is
⇔stored.
    * So copy the current image to buffer and rotate it to the canvas */
    lv color t cbuf tmp[CANVAS WIDTH * CANVAS HEIGHT];
    memcpy(cbuf_tmp, cbuf, sizeof(cbuf_tmp));
    lv_img_dsc_t img;
    img.data = (void *)cbuf tmp;
    img.header.cf = LV_IMG_CF_TRUE_COLOR;
    img.header.w = CANVAS WIDTH;
    img.header.h = CANVAS HEIGHT;
    lv_canvas_fill_bg(canvas, LV_COLOR_SILVER);
    lv_canvas_rotate(canvas, &img, 30, 0, 0, CANVAS_WIDTH / 2, CANVAS_HEIGHT / 2);
}
```

## MicroPython

No examples yet.

## **API**

## **Typedefs**

```
typedef uint8_t lv_canvas_style_t
```

### **Enums**

## enum [anonymous]

Values:

LV\_CANVAS\_STYLE\_MAIN

### **Functions**

```
lv\_obj\_t *lv\_canvas\_create(lv\_obj\_t *par, const lv\_obj\_t *copy)
     Create a canvas object
```

Return pointer to the created canvas

### **Parameters**

- par: pointer to an object, it will be the parent of the new canvas
- copy: pointer to a canvas object, if not NULL then the new object will be copied from it

```
void lv canvas set buffer (lv\_obj\_t *canvas, void *buf, lv coord t w, lv coord t h,
                              lv\_img\_cf\_t \ cf)
```

Set a buffer for the canvas.

## **Parameters**

- a buffer where the content of the canvas will be. The required size is (lv\_img\_color\_format\_get\_px\_size(cf) \* w \* h) / 8) It can be allocated with lv mem alloc() or it can be statically allocated array (e.g. static lv\_color\_t buf[100\*50]) or it can be an address in RAM or external SRAM
- canvas: pointer to a canvas object
- W: width of the canvas
- h: height of the canvas
- cf: color format. LV IMG CF ...

void lv\_canvas\_set\_px(lv\_obj\_t\*canvas, lv\_coord\_t x, lv\_coord\_t y, lv\_color\_t c) Set the color of a pixel on the canvas

# **Parameters**

- · canvas:
- X: x coordinate of the point to set
- y: x coordinate of the point to set
- C: color of the point

## void lv canvas set palette(lv obj t\*canvas, uint8 t id, lv color t c)

Set the palette color of a canvas with index format. Valid only for LV IMG CF INDEXED1/2/4/8

- canvas: pointer to canvas object
- id: the palette color to set:
  - for LV\_IMG\_CF\_INDEXED1: 0..1
  - for LV\_IMG\_CF\_INDEXED2: 0..3
  - for LV IMG CF INDEXED4: 0..15
  - for LV IMG CF INDEXED8: 0..255
- C: the color to set

void **lv\_canvas\_set\_style**(*lv\_obj\_t\*canvas*, *lv\_canvas\_style\_t type*, **const** lv\_style\_t \*style) Set a style of a canvas.

#### **Parameters**

- canvas: pointer to canvas object
- type: which style should be set
- style: pointer to a style

 $lv\_color\_t$  **lv\_canvas\_get\_px** ( $lv\_obj\_t$  \*canvas, lv\_coord\_t x, lv\_coord\_t y) Get the color of a pixel on the canvas

Return color of the point

#### **Parameters**

- canvas:
- X: x coordinate of the point to set
- y: x coordinate of the point to set

 $lv\_img\_dsc\_t *lv\_canvas\_get\_img(lv\_obj\_t *canvas)$ 

Get the image of the canvas as a pointer to an lv img dsc t variable.

**Return** pointer to the image descriptor.

## **Parameters**

• canvas: pointer to a canvas object

 ${\bf Return}\,$  style pointer to the style

### **Parameters**

- canvas: pointer to canvas object
- type: which style should be get

Copy a buffer to the canvas

- canvas: pointer to a canvas object
- to copy: buffer to copy. The color format has to match with the canvas's buffer color format
- $\bullet$  X: left side of the destination position

- y: top side of the destination position
- W: width of the buffer to copy
- h: height of the buffer to copy

Rotate and image and store the result on a canvas.

#### **Parameters**

- canvas: pointer to a canvas object
- img: pointer to an image descriptor. Can be the image descriptor of an other canvas too (lv\_canvas\_get\_img()).
- angle: the angle of rotation (0..360);
- offset X: offset X to tell where to put the result data on destination canvas
- offset\_y: offset X to tell where to put the result data on destination canvas
- pivot\_x: pivot X of rotation. Relative to the source canvas Set to source width / 2 to rotate around the center
- pivot\_y: pivot Y of rotation. Relative to the source canvas Set to source height / 2 to rotate around the center

void lv\_canvas\_fill\_bg(lv\_obj\_t \*canvas, lv\_color\_t color)

Fill the canvas with color

#### **Parameters**

- canvas: pointer to a canvas
- color: the background color

Draw a rectangle on the canvas

## Parameters

- canvas: pointer to a canvas object
- X: left coordinate of the rectangle
- y: top coordinate of the rectangle
- W: width of the rectangle
- h: height of the rectangle
- style: style of the rectangle (body properties are used except padding)

 $\begin{array}{c} \text{void } \textbf{lv\_canvas\_draw\_text} (\textit{lv\_obj\_t} *\textit{canvas}, \textit{lv\_coord\_t} \textit{x}, \textit{lv\_coord\_t} \textit{y}, \textit{lv\_coord\_t} \textit{max\_w}, \\ \textbf{const} \textit{lv\_style\_t} *\textit{style}, \textbf{const} \textit{char} *\textit{txt}, \textit{lv\_label\_align\_t} \textit{align}) \end{array}$ 

Draw a text on the canvas.

- canvas: pointer to a canvas object
- X: left coordinate of the text
- V: top coordinate of the text
- max\_w: max width of the text. The text will be wrapped to fit into this size

- style: style of the text (text properties are used)
- txt: text to display
- align: align of the text (LV LABEL ALIGN LEFT/RIGHT/CENTER)
- void lv\_canvas\_draw\_img(lv\_obj\_t \*canvas, lv\_coord\_t x, lv\_coord\_t y, const void \*src, const lv style t \*style)

Draw an image on the canvas

### **Parameters**

- canvas: pointer to a canvas object
- src: image source. Can be a pointer an  $lv\_img\_dsc\_t$  variable or a path an image.
- style: style of the image (image properties are used)

Draw a line on the canvas

#### **Parameters**

- canvas: pointer to a canvas object
- points: point of the line
- point cnt: number of points
- style: style of the line (line properties are used)

Draw a polygon on the canvas

## Parameters

- canvas: pointer to a canvas object
- points: point of the polygon
- point cnt: number of points
- style: style of the polygon (body.main color and body.opa is used)

```
 \begin{array}{c} \text{void } \textbf{lv\_canvas\_draw\_arc} (\textit{lv\_obj\_t} * \textit{canvas}, \textit{lv\_coord\_t} \textit{x}, \textit{lv\_coord\_t} \textit{y}, \textit{lv\_coord\_t} \textit{r}, \textit{int} 32\_t \\ \textit{start\_angle}, \textit{int} 32\_t \textit{end\_angle}, \textbf{const} \textit{lv\_style\_t} * \textit{style}) \end{array}
```

Draw an arc on the canvas

#### **Parameters**

- canvas: pointer to a canvas object
- X: origo x of the arc
- y: origo y of the arc
- r: radius of the arc
- start\_angle: start angle in degrees
- end angle: end angle in degrees
- style: style of the polygon (body.main color and body.opa is used)

# struct lv\_canvas\_ext\_t

### **Public Members**

```
lv\_img\_ext\_t img lv\_img\_dsc\_t dsc
```

# Check box (lv\_cb)

### Overview

The Check Box objects are built from a *Button* background which contains an also Button *bullet* and a *Label* to realize a classical check box.

#### **Text**

The text can be modified by the lv\_cb\_set\_text(cb, "New text") function. It will dynamically allocate the text.

To set a static text use lv\_cb\_set\_static\_text(cb, txt). This way only a pointer of txt will be stored it shouldn't be deallocated while the checkbox exists.

# Check/Uncheck

You can manually check / un-check the Check box via lv\_cb\_set\_checked(cb, true/false).

## Inactive

To make the Check box inactive use lv\_cb\_set\_inactive(cb, true).

## **Styles**

The Check box styles can be modified with lv\_cb\_set\_style(cb, LV\_CB\_STYLE\_..., &style).

- LV\_CB\_STYLE\_BG Background style. Uses all style.body properties. The label's style comes from style.text. Default: lv\_style\_transp
- LV\_CB\_STYLE\_BOX\_REL Style of the released box. Uses the style.body properties. Default: lv\_style\_btn\_rel
- LV\_CB\_STYLE\_BOX\_PR Style of the pressed box. Uses the style.body properties. Default: lv style btn pr
- LV\_CB\_STYLE\_BOX\_TGL\_REL Style of the checked released box. Uses the style.body properties. Default: lv\_style\_btn\_tgl\_rel
- LV\_CB\_STYLE\_BOX\_TGL\_PR Style of the checked released box. Uses the style.body properties. Default: lv\_style\_btn\_tgl\_pr
- LV\_CB\_STYLE\_BOX\_INA Style of the inactive box. Uses the style.body properties. Default: lv style btn ina

### **Events**

Besides the Generic events the following Special events are sent by the Check boxes:

• LV\_EVENT\_VALUE\_CHANGED sent when the Check box is toggled.

Note that the generic input device related events (like  $LV\_EVENT\_PRESSED$ ) are sent in the inactive state too. You need to check the state with  $lv\_cb\_is\_inactive(cb)$  to ignore the events from inactive Check boxes.

Learn more about *Events*.

# **Keys**

The following *Keys* are processed by the Buttons:

- LV\_KEY\_RIGHT/UP Go to toggled state if toggling is enabled
- LV\_KEY\_LEFT/DOWN Go to non-toggled state if toggling is enabled

Note that, as usual, the state of  $LV\_KEY\_ENTER$  is translated to  $LV\_EVENT\_PRESSED/PRESSING/RELEASED$  etc.

Learn more about *Keys*.

## **Example**

C



code

#include "lvgl/lvgl.h"
#include <stdio.h>

(continues on next page)

(continued from previous page)

```
static void event_handler(lv_obj_t * obj, lv_event_t event)
{
    if(event == LV_EVENT_VALUE_CHANGED) {
        printf("State: %s\n", lv_cb_is_checked(obj) ? "Checked" : "Unchecked");
    }
}

void lv_ex_cb_1(void)
{
    lv_obj_t * cb = lv_cb_create(lv_scr_act(), NULL);
    lv_cb_set_text(cb, "I agree to terms and conditions.");
    lv_obj_align(cb, NULL, LV_ALIGN_CENTER, 0, 0);
    lv_obj_set_event_cb(cb, event_handler);
}
```

# MicroPython

No examples yet.

### API

## **Typedefs**

```
typedef uint8_t lv_cb_style_t
```

### **Enums**

# enum [anonymous]

Checkbox styles.

Values:

# LV\_CB\_STYLE\_BG

Style of object background.

# LV CB STYLE BOX REL

Style of box (released).

# LV CB STYLE BOX PR

Style of box (pressed).

# LV CB STYLE BOX TGL REL

Style of box (released but checked).

# LV\_CB\_STYLE\_BOX\_TGL\_PR

Style of box (pressed and checked).

# LV\_CB\_STYLE\_BOX\_INA

Style of disabled box

## **Functions**

```
lv\_obj\_t *lv\_cb\_create(lv\_obj\_t *par, const lv\_obj\_t *copy)
Create a check box objects
```

Return pointer to the created check box

#### **Parameters**

- par: pointer to an object, it will be the parent of the new check box
- copy: pointer to a check box object, if not NULL then the new object will be copied from it

## void lv cb set text( $lv\_obj\_t *cb$ , const char \*txt)

Set the text of a check box. txt will be copied and may be deallocated after this function returns.

### **Parameters**

- cb: pointer to a check box
- txt: the text of the check box. NULL to refresh with the current text.

# void lv cb set static text( $lv\_obj\_t*cb$ , const char \*txt)

Set the text of a check box. txt must not be deallocated during the life of this checkbox.

### **Parameters**

- cb: pointer to a check box
- txt: the text of the check box. NULL to refresh with the current text.

# **static** void **lv\_cb\_set\_checked**(*lv\_obj\_t\*cb*, bool *checked*)

Set the state of the check box

### **Parameters**

- cb: pointer to a check box object
- checked: true: make the check box checked; false: make it unchecked

# static void lv\_cb\_set\_inactive(lv\_obj\_t \*cb)

Make the check box inactive (disabled)

#### **Parameters**

• cb: pointer to a check box object

# void lv\_cb\_set\_style(lv\_obj\_t \*cb, lv\_cb\_style\_t type, const lv\_style\_t \*style)

Set a style of a check box

# Parameters

- cb: pointer to check box object
- type: which style should be set
- style: pointer to a style

# const char \*lv\_cb\_get\_text(const lv\_obj\_t \*cb)

Get the text of a check box

Return pointer to the text of the check box

### **Parameters**

• **cb**: pointer to check box object

# static bool lv\_cb\_is\_checked(const lv\_obj\_t \*cb)

Get the current state of the check box

Return true: checked; false: not checked

• cb: pointer to a check box object

# static bool lv\_cb\_is\_inactive(const lv\_obj\_t \*cb)

Get whether the check box is inactive or not.

Return true: inactive; false: not inactive

#### **Parameters**

• cb: pointer to a check box object

# ${\tt const} \ lv\_style\_t \ {\tt *lv\_cb\_get\_style} ({\tt const} \ \mathit{lv\_obj\_t} \ {\tt *cb}, \ \mathit{lv\_cb\_style\_t} \ \mathit{type})$

Get a style of a button

Return style pointer to the style

#### **Parameters**

- **cb**: pointer to check box object
- type: which style should be get

## struct lv cb ext t

# **Public Members**

## Chart (lv\_chart)

### Overview

Charts have a rectangle-like background with horizontal and vertical division lines and data series drawn from lines, points colums or areas.

### Data series

You can add any number of series to the charts by lv\_chart\_add\_series(chart, color). It allocates data for a lv\_chart\_series\_t structure which contains the chosen color and an array for the data points.

## Series' type

The following data display types exists:

- LV\_CHART\_TYPE\_NONE do not display any data. It can be used to hide a series.
- LV\_CHART\_TYPE\_LINE draw lines between the points
- LV CHART TYPE COL Draw columns
- LV\_CHART\_TYPE\_POINT Draw points
- ${\bf LV\_CHART\_TYPE\_AREA}$  Draw areas (fill the area below the lines)

• LV\_CHART\_TYPE\_VERTICAL\_LINE Draw only vertical lines to connect the points. Useful if the chart width is equal to the number of points.

You can specify the display type with <code>lv\_chart\_set\_type(chart, LV\_CHART\_TYPE\_...)</code>. The types can be 'OR'ed (like <code>LV\_CHART\_TYPE\_LINE | LV\_CHART\_TYPE\_POINT</code>).

## Modify the data

You have several options to set the data of series:

- 1. Set the values manually in the array like ser1->points[3] = 7 and refresh the chart with lv\_chart\_refresh(chart).
- 2. Use the lv chart set next(chart, ser, value)
- 3. Initialize all points to a given value with: lv\_chart\_init\_points(chart, ser, value).
- 4. Set all points from an array with: lv\_chart\_set\_points(chart, ser, value\_array).

Use LV CHART POINT DEF as value to make the library to not draw that point, column, or line segment.

## **Update modes**

lv\_chart\_set\_next can behave in two way depending on *update mode*:

- LV\_CHART\_UPDATE\_MODE\_SHIFT Shift old data to the left and add the new one o the right
- LV\_CHART\_UPDATE\_MODE\_CIRCULAR Add the new data in a circular way. (Like an ECG diagram)

To update mode can be changed with  $lv\_chart\_set\_update\_mode(chart, LV\_CHART\_UPDATE\_MODE\_...)$ .

## **Number of points**

The number of points in the series can be modified by lv\_chart\_set\_point\_count(chart, point\_num). The default value is 10.

### Vertical range

You can specify a the min. and max. values in y directions with lv\_chart\_set\_range(chart, y\_min, y\_max). The value of the points will be scaled proportionally. The default range is: 0..100.

# **Division lines**

The number of horizontal and vertical division lines can be modified by lv\_chart\_set\_div\_line\_count(chart, hdiv\_num, vdiv\_num). The default settings are 3 horizontal and 5 vertical division lines.

## Series' appearance

To set the line width and point radius of the series use the lv\_chart\_set\_series\_width(chart, size) function. The default value is: 2.

The opacity of the data lines can be specified by lv\_chart\_set\_series\_opa(chart, opa). The default value is: OPA COVER.

You can apply a dark color fade on the bottom of columns and points by lv\_chart\_set\_series\_darking(chart, effect) function. The default dark level is OPA\_50.

### Tick marks and labels

Ticks and texts to ticks can be added.

lv\_chart\_set\_x\_tick\_text(chart, list\_of\_values, num\_tick\_marks,
LV\_CHART\_AXIS\_...) set the ticks and texts on x axis. list\_of\_values is a string with '\n'
terminated text (expect the last) with text for the ticks. E.g. const char \* list\_of\_values
= "first\nseco\nthird". list\_of\_values can be NULL. If list\_of\_values is set then
num\_tick\_marks tells the number of ticks between two labels. If list\_of\_values is NULL then it
specifies the total number of ticks.

Where text are added *major tick lines* are drawn, of the other places *minor tick lines*. lv\_chart\_set\_x\_tick\_length(chart, major\_tick\_len, minor\_tick\_len) sets the length of tick lines on the x axis.

The same functions exists for the y axis too:  $lv\_chart\_set\_y\_tick\_text$  and  $lv\_chart\_set\_y\_tick\_length$ 

lv\_chart\_set\_margin(chart, 20) needs to be used to add some extra space around the chart for the
ticks and texts.

## **Styles**

You can set the styles with lv chart set style(btn, LV CHART STYLE MAIN, &style).

- style.body properties set the background's appearance
- style.line properties set the division lines' appearance
- style.text properties set the axis labels' appearance

## **Events**

Only the Generic events are sent by the object type.

Learn more about *Events*.

### **Keys**

No *Keys* are processed by the object type.

Learn more about Keys.

# **Example**

C



code

```
#include "lvgl/lvgl.h"
void lv_ex_chart_1(void)
    /*Create a chart*/
    lv_obj_t * chart;
    chart = lv_chart_create(lv_scr_act(), NULL);
    lv_obj_set_size(chart, 200, 150);
    lv obj align(chart, NULL, LV ALIGN CENTER, 0, 0);
    lv_chart_set_type(chart, LV_CHART_TYPE_POINT | LV_CHART_TYPE_LINE);
→lines and points too*/
                                                                           /*Opacity_
    lv_chart_set_series_opa(chart, LV_OPA_70);
→of the data series*/
    lv_chart_set_series_width(chart, 4);
                                                                           /*Line
→width and point radious*/
   lv_chart_set_range(chart, 0, 100);
    /*Add two data series*/
   lv_chart_series_t * ser1 = lv_chart_add_series(chart, LV_COLOR_RED);
   lv_chart_series_t * ser2 = lv_chart_add_series(chart, LV_COLOR_GREEN);
   /*Set the next points on 'dl1'*/
   lv chart set next(chart, ser1, 10);
    lv_chart_set_next(chart, ser1, 10);
    lv_chart_set_next(chart, ser1, 10);
    lv_chart_set_next(chart, ser1, 10);
    lv_chart_set_next(chart, ser1, 10);
```

(continues on next page)

(continued from previous page)

```
lv_chart_set_next(chart, ser1, 10);
    lv_chart_set_next(chart, ser1, 10);
    lv_chart_set_next(chart, ser1, 30);
    lv_chart_set_next(chart, ser1, 70);
    lv_chart_set_next(chart, ser1, 90);
    /*Directly set points on 'dl2'*/
    ser2->points[0] = 90;
    ser2->points[1] = 70;
    ser2->points[2] = 65;
    ser2->points[3] = 65;
    ser2->points[4] = 65;
    ser2->points[5] = 65;
    ser2->points[6] = 65;
    ser2->points[7] = 65;
    ser2->points[8] = 65;
    ser2->points[9] = 65;
    lv_chart_refresh(chart); /*Required after direct set*/
}
```

# MicroPython

No examples yet.

## **API**

### **Typedefs**

```
typedef uint8_t lv_chart_type_t
typedef uint8_t lv_chart_update_mode_t
typedef uint8_t lv_chart_axis_options_t
typedef uint8_t lv_chart_style_t
```

### Enums

# enum [anonymous]

Chart types

Values:

```
LV\_CHART\_TYPE\_NONE = 0x00
```

Don't draw the series

 $LV\_CHART\_TYPE\_LINE = 0x01$ 

Connect the points with lines

 $LV\_CHART\_TYPE\_COLUMN = 0x02$ 

Draw columns

LV CHART TYPE POINT = 0x04

Draw circles on the points

# $\textbf{LV\_CHART\_TYPE\_VERTICAL\_LINE} = 0x08$

Draw vertical lines on points (useful when chart width == point count)

# $LV\_CHART\_TYPE\_AREA = 0x10$

Draw area chart

## enum [anonymous]

Chart update mode for lv chart set next

Values:

# LV\_CHART\_UPDATE\_MODE\_SHIFT

Shift old data to the left and add the new one o the right

# LV\_CHART\_UPDATE\_MODE\_CIRCULAR

Add the new data in a circular way

## enum [anonymous]

Data of axis

Values:

# $LV\_CHART\_AXIS\_SKIP\_LAST\_TICK = 0x00$

don't draw the last tick

# $LV\_CHART\_AXIS\_DRAW\_LAST\_TICK = 0x01$

draw the last tick

# enum [anonymous]

Values:

LV\_CHART\_STYLE\_MAIN

#### **Functions**

$$lv\_obj\_t *lv\_chart\_create(lv\_obj\_t *par, const lv\_obj\_t *copy)$$

Create a chart background objects

Return pointer to the created chart background

## Parameters

- par: pointer to an object, it will be the parent of the new chart background
- COPY: pointer to a chart background object, if not NULL then the new object will be copied from it

# $lv\_chart\_series\_t *lv\_chart\_add\_series (lv\_obj\_t *chart, lv\_color\_t color)$

Allocate and add a data series to the chart

Return pointer to the allocated data series

#### **Parameters**

- chart: pointer to a chart object
- color: color of the data series

# void lv\_chart\_clear\_serie(lv\_obj\_t \*chart, lv\_chart\_series\_t \*serie)

Clear the point of a serie

#### **Parameters**

• chart: pointer to a chart object

• serie: pointer to the chart's serie to clear

# void lv\_chart\_set\_div\_line\_count(lv\_obj\_t\*chart, uint8\_t hdiv, uint8\_t vdiv)

Set the number of horizontal and vertical division lines

#### **Parameters**

- chart: pointer to a graph background object
- hdiv: number of horizontal division lines
- vdiv: number of vertical division lines

# void lv\_chart\_set\_range(lv\_obj\_t \*chart, lv\_coord\_t ymin, lv\_coord\_t ymax)

Set the minimal and maximal y values

#### **Parameters**

- chart: pointer to a graph background object
- ymin: y minimum value
- ymax: y maximum value

# void lv\_chart\_set\_type(lv\_obj\_t \*chart, lv\_chart\_type\_t type)

Set a new type for a chart

## **Parameters**

- chart: pointer to a chart object
- type: new type of the chart (from 'lv\_chart\_type\_t' enum)

# void lv\_chart\_set\_point\_count(lv\_obj\_t \*chart, uint16\_t point\_cnt)

Set the number of points on a data line on a chart

# Parameters

- chart: pointer r to chart object
- point cnt: new number of points on the data lines

# void lv\_chart\_set\_series\_opa(lv\_obj\_t \*chart, lv\_opa\_t opa)

Set the opacity of the data series

## Parameters

- chart: pointer to a chart object
- opa: opacity of the data series

## void lv chart set series width(lv obj t\*chart, lv coord t width)

Set the line width or point radius of the data series

## **Parameters**

- chart: pointer to a chart object
- width: the new width

# $\label{eq:condition} \mbox{void $lv\_chart\_set\_series\_darking($lv\_obj\_t*chart, $lv\_opa\_t$ $dark\_eff)}$

Set the dark effect on the bottom of the points or columns

- chart: pointer to a chart object
- dark eff: dark effect level (LV\_OPA\_TRANSP to turn off)

void **lv\_chart\_init\_points** (*lv\_obj\_t* \**chart*, *lv\_chart\_series\_t* \**ser*, lv\_coord\_t *y*)

Initialize all data points with a value

#### **Parameters**

- chart: pointer to chart object
- ser: pointer to a data series on 'chart'
- y: the new value for all points

void **lv\_chart\_set\_points** (*lv\_obj\_t\*chart*, *lv\_chart\_series\_t\*ser*, lv\_coord\_t *y\_array*[]) Set the value of points from an array

## **Parameters**

- chart: pointer to chart object
- ser: pointer to a data series on 'chart'
- y\_array: array of 'lv\_coord\_t' points (with 'points count' elements )

void **lv\_chart\_set\_next**(*lv\_obj\_t* \**chart*, *lv\_chart\_series\_t* \**ser*, lv\_coord\_t *y*)
Shift all data right and set the most right data on a data line

#### **Parameters**

- chart: pointer to chart object
- ser: pointer to a data series on 'chart'
- y: the new value of the most right data

void **lv\_chart\_set\_update\_mode**(lv\_obj\_t \*chart, lv\_chart\_update\_mode\_t update\_mode) Set update mode of the chart object.

# Parameters

- chart: pointer to a chart object
- update: mode

**static** void **lv\_chart\_set\_style**(*lv\_obj\_t* \**chart*, *lv\_chart\_style\_t* type, **const** lv\_style\_t \**style*)

Set the style of a chart

## **Parameters**

- chart: pointer to a chart object
- type: which style should be set (can be only LV\_CHART\_STYLE\_MAIN)
- style: pointer to a style

 $\label{eq:chart_set_x_tick_length} \begin{tabular}{ll} void $lv\_chart\_set\_x\_tick\_length($lv\_obj\_t$ *$chart, uint8\_t $major\_tick\_len, uint8\_t $minor\_tick\_len) \end{tabular}$ 

Set the length of the tick marks on the x axis

- chart: pointer to the chart
- major\_tick\_len: the length of the major tick or LV\_CHART\_TICK\_LENGTH\_AUTO to set automatically (where labels are added)
- minor\_tick\_len: the length of the minor tick, LV\_CHART\_TICK\_LENGTH\_AUTO to set automatically (where no labels are added)

Set the length of the tick marks on the y axis

#### **Parameters**

- chart: pointer to the chart
- major\_tick\_len: the length of the major tick or LV\_CHART\_TICK\_LENGTH\_AUTO to set automatically (where labels are added)
- minor\_tick\_len: the length of the minor tick, LV\_CHART\_TICK\_LENGTH\_AUTO to set automatically (where no labels are added)

 $\label{local_void_local_void_local_void_local} \begin{tabular}{ll} $v$ const char $*list\_of\_values, & uint8\_t \\ $num\_tick\_marks, & lv\_chart\_axis\_options\_t & options \end{tabular} \end{tabular}$ 

Set the x-axis tick count and labels of a chart

## **Parameters**

- chart: pointer to a chart object
- list\_of\_values: list of string values, terminated with , except the last
- num\_tick\_marks: if list\_of\_values is NULL: total number of ticks per axis else number of ticks between two value labels
- options: extra options

 $\label{eq:const_set_y_tick_texts} void \ \textbf{lv\_chart\_set\_y\_tick\_texts} (\textit{lv\_obj\_t} *\textit{chart}, \ \textbf{const} \ \textit{char} *\textit{list\_of\_values}, \ \textit{uint8\_t} \\ \textit{num\_tick\_marks}, \ \textit{lv\_chart\_axis\_options\_t} \ \textit{options})$ 

Set the y-axis tick count and labels of a chart

#### **Parameters**

- chart: pointer to a chart object
- list of values: list of string values, terminated with, except the last
- num\_tick\_marks: if list\_of\_values is NULL: total number of ticks per axis else number of ticks between two value labels
- options: extra options

## void lv chart set margin(lv\_obj\_t\*chart, uint16 t margin)

Set the margin around the chart, used for axes value and ticks

### **Parameters**

- chart: pointer to an chart object
- margin: value of the margin [px]

lv\_chart\_type\_t lv\_chart\_get\_type(const lv\_obj\_t \*chart)

Get the type of a chart

Return type of the chart (from 'lv\_chart\_t' enum)

### **Parameters**

• chart: pointer to chart object

# uint16\_t lv\_chart\_get\_point\_cnt(const lv\_obj\_t \*chart)

Get the data point number per data line on chart

Return point number on each data line

• chart: pointer to chart object

# lv\_opa\_t lv\_chart\_get\_series\_opa(const lv\_obj\_t \*chart)

Get the opacity of the data series

Return the opacity of the data series

### **Parameters**

• chart: pointer to chart object

# lv\_coord\_t lv\_chart\_get\_series\_width(const lv\_obj\_t \*chart)

Get the data series width

Return the width the data series (lines or points)

#### **Parameters**

• chart: pointer to chart object

# lv\_opa\_t lv\_chart\_get\_series\_darking(const lv\_obj\_t \*chart)

Get the dark effect level on the bottom of the points or columns

Return dark effect level (LV\_OPA\_TRANSP to turn off)

#### **Parameters**

• chart: pointer to chart object

# 

Get the style of an chart object

Return pointer to the chart's style

### **Parameters**

- chart: pointer to an chart object
- type: which style should be get (can be only LV\_CHART\_STYLE\_MAIN)

# uint16\_t lv\_chart\_get\_margin(lv\_obj\_t\*chart)

Get the margin around the chart, used for axes value and labels

## **Parameters**

- chart: pointer to an chart object
- return: value of the margin

# void lv\_chart\_refresh(lv\_obj\_t \*chart)

Refresh a chart if its data line has changed

### **Parameters**

• chart: pointer to chart object

# struct lv\_chart\_series\_t

## **Public Members**

```
lv_coord_t *points
lv_color_t color
uint16 t start point
```

# struct lv\_chart\_axis\_cfg\_t

# **Public Members**

### **Public Members**

```
lv_ll_t series_ll
lv_coord_t ymin
lv_coord_t ymax
uint8 t hdiv cnt
uint8 t vdiv cnt
uint16_t point_cnt
lv_chart_type_t type
lv_chart_axis_cfg_t y_axis
lv_chart_axis_cfg_t x_axis
uint16_t margin
uint8_t update_mode
lv\_coord\_t width
uint8 t num
lv\_opa\_t opa
lv_opa_t dark
struct lv_chart_ext_t::[anonymous] series
```

# Container (lv\_cont)

# **Overview**

The containers are **rectangle-like object** with some special features.

## Layout

You can apply a layout on the containers to automatically order their children. The layout spacing comes from style.body.padding. ... properties. The possible layout options:

- LV\_LAYOUT\_OFF Do not align the children
- LV\_LAYOUT\_CENTER Align children to the center in column and keep padding.inner space between them
- LV\_LAYOUT\_COL\_: Align children in a left justified column. Keep padding.left space on the left, pad.top space on the top and padding.inner space between the children.
- LV\_LAYOUT\_COL\_M Align children in centered column. Keep padding.top space on the top and padding.inner space between the children.
- LV\_LAYOUT\_COL\_R Align children in a right justified column. Keep padding.right space on the right, padding.top space on the top and padding.inner space between the children.
- LV\_LAYOUT\_ROW\_T Align children in a top justified row. Keep padding.left space on the left, padding.top space on the top and padding.inner space between the children.
- LV\_LAYOUT\_ROW\_M Align children in centered row. Keep padding.left space on the left and padding.inner space between the children.
- LV\_LAYOUT\_ROW\_B Align children in a bottom justified row. Keep padding.left space on the left, padding.bottom space on the bottom and padding.inner space between the children.
- LV\_LAYOUT\_PRETTY Put as may objects as possible in a row (with at least padding.inner space and padding.left/right space on the sides). Divide the space in each line equally between the children. Keep padding.top space on the top and pad.inner space between the lines.
- LV\_LAYOUT\_GRID Similar to LV\_LAYOUT\_PRETTY but not divide horizontal space equally just let padding.left/right on the edges and padding.inner space betweenthe elemnts.

#### Auto fit

Container have an auto fit features which can automaticall change the size of the Container according to its children and/or parent. The following options are exist:

- LV\_FIT\_NONE Do not change the size automatically
- LV\_FIT\_TIGHT Set the size to involve all children by keeping padding.top/bottom/left/right space on the edges.
- LV\_FIT\_FLOOD Set the size to the parents size by keeping padding.top/bottom/left/right (from the parent's style) space.
- LV FIT FILL Use LV FIT FLOOD while smaller than the parent and LV FIT TIGHT when larger.

To set the auto fit use <code>lv\_cont\_set\_fit(cont, LV\_FIT\_...)</code>. It will set the same auto fit in every directions. To use different auto fit horizontally and vertically use <code>lv\_cont\_set\_fit2(cont, hor\_fit\_type, ver\_fit\_type)</code>. To use different auto fit in all 4 directions use <code>lv\_cont\_set\_fit4(cont, left\_fit\_type, right\_fit\_type, top\_fit\_type, bottom fit type)</code>.

# **Styles**

You can set the styles with lv\_cont\_set\_style(btn, LV\_CONT\_STYLE\_MAIN, &style).

• style.body properties are used.

## **Events**

Only the Genreric events are sent by the object type.

Learn more about *Events*.

## **Keys**

No *Keys* are processed by the object type.

Learn more about Keys.

## **Example**

C

Short text

It is a long text

Here is an even longer text

code

(continues on next page)

(continued from previous page)

```
lv_cont_set_layout(cont, LV_LAYOUT_COL_M);

lv_obj_t * label;
label = lv_label_create(cont, NULL);
lv_label_set_text(label, "Short text");

label = lv_label_create(cont, NULL);
lv_label_set_text(label, "It is a long text");

label = lv_label_create(cont, NULL);
lv_label_set_text(label, "Here is an even longer text");
}
```

# MicroPython

No examples yet.

## API

# **Typedefs**

```
typedef uint8_t lv_layout_t
typedef uint8_t lv_fit_t
typedef uint8_t lv_cont_style_t
```

### **Enums**

## enum [anonymous]

Container layout options

Values:

 $LV\_LAYOUT\_OFF = 0$ No layout

# LV\_LAYOUT\_CENTER

Center objects

# LV\_LAYOUT\_COL\_L

Column left align

# LV LAYOUT COL M

Column middle align

# LV\_LAYOUT\_COL\_R

Column right align

# LV\_LAYOUT\_ROW\_T

Row top align

# LV\_LAYOUT\_ROW\_M

Row middle align

# LV LAYOUT ROW B

Row bottom align

## LV LAYOUT PRETTY

Put as many object as possible in row and begin a new row

# LV LAYOUT GRID

Align same-sized object into a grid

# LV\_LAYOUT\_NUM

# enum [anonymous]

How to resize the container around the children.

Values:

# LV FIT NONE

Do not change the size automatically

# LV FIT TIGHT

Shrink wrap around the children

# LV\_FIT\_FLOOD

Align the size to the parent's edge

## LV FIT FILL

Align the size to the parent's edge first but if there is an object out of it then get larger

# \_LV\_FIT\_NUM

# enum [anonymous]

Values:

LV\_CONT\_STYLE\_MAIN

### **Functions**

```
lv\_obj\_t *lv cont create(lv\_obj\_t *par, const lv\_obj\_t *copy)
```

Create a container objects

**Return** pointer to the created container

### **Parameters**

- par: pointer to an object, it will be the parent of the new container
- copy: pointer to a container object, if not NULL then the new object will be copied from it

```
void lv_cont_set_layout(lv_obj_t *cont, lv_layout_t layout)
```

Set a layout on a container

### **Parameters**

- cont: pointer to a container object
- layout: a layout from 'lv cont layout t'

# $void \ \textbf{lv\_cont\_set\_fit4} (\textit{lv\_obj\_t} * cont, \textit{lv\_fit\_t left}, \textit{lv\_fit\_t right}, \textit{lv\_fit\_t top}, \textit{lv\_fit\_t bottom})$

Set the fit policy in all 4 directions separately. It tell how to change the container's size automatically.

- cont: pointer to a container object
- left: left fit policy from lv\_fit\_t

- right: right fit policy from lv\_fit\_t
- top: bottom fit policy from lv fit t
- bottom: bottom fit policy from lv\_fit\_t

# $\textbf{static} \ \operatorname{void} \ \textbf{lv\_cont\_set\_fit2} ( \mathit{lv\_obj\_t} \ ^*\mathit{cont}, \ \mathit{lv\_fit\_t} \ \mathit{hor}, \ \mathit{lv\_fit\_t} \ \mathit{ver} )$

Set the fit policy horizontally and vertically separately. It tell how to change the container's size automatically.

#### **Parameters**

- cont: pointer to a container object
- hot: horizontal fit policy from lv fit t
- ver: vertical fit policy from lv fit t

# static void lv\_cont\_set\_fit(lv\_obj\_t \*cont, lv\_fit\_t fit)

Set the fit policyin all 4 direction at once. It tell how to change the container's size automatically.

## **Parameters**

- cont: pointer to a container object
- fit: fit policy from lv fit t

Set the style of a container

### **Parameters**

- cont: pointer to a container object
- type: which style should be set (can be only LV CONT STYLE MAIN)
- style: pointer to the new style

# lv\_layout\_t lv\_cont\_get\_layout(const lv\_obj\_t \*cont)

Get the layout of a container

**Return** the layout from 'lv\_cont\_layout\_t'

## **Parameters**

• cont: pointer to container object

# lv\_fit\_t lv cont get fit left(const lv\_obj\_t \*cont)

Get left fit mode of a container

 ${f Return}$  an element of  ${f lv\_fit\_t}$ 

### **Parameters**

• cont: pointer to a container object

# lv\_fit\_t lv\_cont\_get\_fit\_right(const lv\_obj\_t \*cont)

Get right fit mode of a container

Return an element of lv\_fit\_t

#### **Parameters**

• cont: pointer to a container object

# lv\_fit\_t lv\_cont\_get\_fit\_top(const lv\_obj\_t \*cont)

Get top fit mode of a container

 ${f Return}$  an element of  ${f lv\_fit\_t}$ 

#### **Parameters**

• cont: pointer to a container object

# lv\_fit\_t lv\_cont\_get\_fit\_bottom(const lv\_obj\_t \*cont)

Get bottom fit mode of a container

Return an element of lv fit t

### **Parameters**

• cont: pointer to a container object

# $\textbf{static const} \ lv\_style\_t \ *\textbf{lv\_cont\_get\_style} (\textbf{const} \ lv\_obj\_t \ *cont, \ lv\_cont\_style\_t \ type)$

Get the style of a container

Return pointer to the container's style

### **Parameters**

- cont: pointer to a container object
- type: which style should be get (can be only LV\_CONT\_STYLE\_MAIN)

# struct lv\_cont\_ext\_t

#### **Public Members**

```
uint8_t layout
uint8_t fit_left
uint8_t fit_right
uint8_t fit_top
uint8_t fit_bottom
```

# Drop down list (lv\_ddlist)

### Overview

Drop Down Lists allow you to simply select one option from more. The Drop Down List is closed by default an show the currently selected text. If you click on it the list opens and all the options are shown.

## Set options

The options are passed to the Drop Down List as a string with  $lv_ddlist_set_options(ddlist, options)$ . The options should be separated by n. For example: "First\nSecond\nThird".

You can select an option manually with lv\_ddlist\_set\_selected(ddlist, id), where *id* is the index of an option.

## Get selected option

The get the currently selected option use  $lv_ddlist_get_selected(ddlist)$  it will return the *index* of the selected option.

lv\_ddlist\_get\_selected\_str(ddlist, buf, buf\_size) copies the name of the selected option
to buf.

## Align the options

To align the label horizontally use <code>lv\_ddlist\_set\_align(ddlist, LV\_LABEL\_ALIGN\_LEFT/CENTER/RIGHT)</code>.

## Height and width

By default, the list's height is adjusted automatically to show all options. The  $lv_ddlist_set_fix_height(ddlist, height)$  sets a fixed height for the opened list. 0 means to use auto height.

The width is also adjusted automatically. To prevent this apply lv\_ddlist\_set\_fix\_width(ddlist, width). 0 means to use auto width.

#### **Scrollbars**

Similarly to *Page* with fix height the Drop Down List supports various scrollbar display modes. It can be set by lv ddlist set sb mode(ddlist, LV SB MODE ...).

#### **Animation time**

The Drop Down List open/close animation time is adjusted by lv\_ddlist\_set\_anim\_time(ddlist, anim time). Zero animation time means no animation.

#### **Decoration arrow**

A down arrow can be added to the left side of the Drop down list with lv ddlist set draw arrow(ddlist, true).

## Stay open

You can force the Drop down list to **stay opened** when an option is selected with <code>lv\_ddlist\_set\_stay\_open(ddlist, true)</code>.

## **Styles**

The lv\_ddlist\_set\_style(ddlist, LV\_DDLIST\_STYLE\_..., &style) set the styles of a Drop Down List.

- LV\_DDLIST\_STYLE\_BG Style of the background. All style.body properties are used. style.text is used for the option's label. Default: lv style pretty
- LV\_DDLIST\_STYLE\_SEL Style of the selected option. The style.body properties are used. The selected option will be recolored with text.color. Default: lv\_style\_plain\_color
- LV\_DDLIST\_STYLE\_SB Style of the scrollbar. The style.body properties are used. Default: lv style plain color

#### **Events**

Besides the Generic events the following Special events are sent by the Drop down lists:

Learn more about *Events*.

## **Keys**

The following *Keys* are processed by the Buttons:

- LV\_KEY\_RIGHT/DOWN Select the next option
- LV\_KEY\_LEFT/UP Select the previous option
- LY\_KEY\_ENTER Apply the selected option (Send LV\_EVENT\_VALUE\_CHANGED event and close the Drop down list)

#### **Example**

C



code

```
#include "lvgl/lvgl.h"
#include <stdio.h>
static void event_handler(lv_obj_t * obj, lv_event_t event)
    if(event == LV_EVENT_VALUE_CHANGED) {
        char buf[32];
        lv ddlist get selected str(obj, buf, sizeof(buf));
        printf("Option: %s\n", buf);
    }
}
void lv ex ddlist 1(void)
    /*Create a drop down list*/
    lv_obj_t * ddlist = lv_ddlist_create(lv_scr_act(), NULL);
    lv ddlist set options(ddlist, "Apple\n"
            "Banana\n"
            "Orange\n"
            Melon\n
            "Grape\n"
            "Raspberry");
    lv_ddlist_set_fix_width(ddlist, 150);
    lv_ddlist_set_draw_arrow(ddlist, true);
    lv_obj_align(ddlist, NULL, LV_ALIGN_IN_TOP_MID, 0, 20);
    lv_obj_set_event_cb(ddlist, event_handler);
```

## MicroPython

No examples yet.

## **API**

## **Typedefs**

```
typedef uint8_t lv_ddlist_style_t
```

## **Enums**

```
enum [anonymous]
     Values:
     LV_DDLIST_STYLE_BG
     LV_DDLIST_STYLE_SEL
     LV_DDLIST_STYLE_SB
```

#### **Functions**

## lv\_obj\_t \*lv\_ddlist\_create(lv\_obj\_t \*par, const lv\_obj\_t \*copy)

Create a drop down list objects

Return pointer to the created drop down list

#### **Parameters**

- par: pointer to an object, it will be the parent of the new drop down list
- copy: pointer to a drop down list object, if not NULL then the new object will be copied from it

# void lv\_ddlist\_set\_options(lv\_obj\_t \*ddlist, const char \*options)

Set the options in a drop down list from a string

#### **Parameters**

- ddlist: pointer to drop down list object
- options: a string with ' 'separated options. E.g. "One\nTwo\nThree"

## void lv\_ddlist\_set\_selected(lv\_obj\_t \*ddlist, uint16\_t sel\_opt)

Set the selected option

#### **Parameters**

- ddlist: pointer to drop down list object
- **sel\_opt**: id of the selected option (0 ... number of option 1);

# void lv\_ddlist\_set\_fix\_height(lv\_obj\_t \*ddlist, lv\_coord\_t h)

Set a fix height for the drop down list If 0 then the opened ddlist will be auto. sized else the set height will be applied.

#### Parameters

- ddlist: pointer to a drop down list
- h: the height when the list is opened (0: auto size)

## void lv ddlist set fix width( $lv \ obj \ t *ddlist$ , $lv \ coord \ t \ w$ )

Set a fix width for the drop down list

## Parameters

- ddlist: pointer to a drop down list
- W: the width when the list is opened (0: auto size)

## void lv ddlist set draw arrow(lv\_obj\_t\*ddlist, bool en)

Set arrow draw in a drop down list

## Parameters

- ddlist: pointer to drop down list object
- en: enable/disable a arrow draw. E.g. "true" for draw.

## void lv\_ddlist\_set\_stay\_open(lv\_obj\_t \*ddlist, bool en)

Leave the list opened when a new value is selected

- ddlist: pointer to drop down list object
- en: enable/disable "stay open" feature

# static void lv\_ddlist\_set\_sb\_mode(lv\_obj\_t \*ddlist, lv\_sb\_mode\_t mode)

Set the scroll bar mode of a drop down list

#### **Parameters**

- ddlist: pointer to a drop down list object
- **sb\_mode**: the new mode from 'lv\_page\_sb\_mode\_t' enum

## **static** void **lv\_ddlist\_set\_anim\_time**(lv\_obj\_t \*ddlist, uint16\_t anim\_time)

Set the open/close animation time.

## **Parameters**

- ddlist: pointer to a drop down list
- anim\_time: open/close animation time [ms]

# void **lv\_ddlist\_set\_style**(*lv\_obj\_t* \**ddlist*, *lv\_ddlist\_style\_t* type, **const** lv\_style\_t \**style*) Set a style of a drop down list

#### **Parameters**

- ddlist: pointer to a drop down list object
- type: which style should be set
- style: pointer to a style

# void lv\_ddlist\_set\_align(lv\_obj\_t\*ddlist, lv\_label\_align\_t align)

Set the alignment of the labels in a drop down list

#### **Parameters**

- ddlist: pointer to a drop down list object
- align: alignment of labels

## const char \*lv ddlist get options(const lv\_obj\_t \*ddlist)

Get the options of a drop down list

**Return** the options separated by ''-s (E.g. "Option1\nOption2\nOption3")

## Parameters

• ddlist: pointer to drop down list object

## uint16\_t lv\_ddlist\_get\_selected(const lv\_obj\_t \*ddlist)

Get the selected option

**Return** id of the selected option (0 ... number of option - 1);

#### **Parameters**

• ddlist: pointer to drop down list object

## void lv ddlist get selected str(const lv\_obj\_t\*ddlist, char \*buf, uint16 t buf\_size)

Get the current selected option as a string

#### **Parameters**

- **ddlist**: pointer to ddlist object
- buf: pointer to an array to store the string
- buf\_size: size of buf in bytes. 0: to ignore it.

## lv\_coord\_t lv\_ddlist\_get\_fix\_height(const lv\_obj\_t\*ddlist)

Get the fix height value.

**Return** the height if the ddlist is opened (0: auto size)

#### **Parameters**

• ddlist: pointer to a drop down list object

## bool lv\_ddlist\_get\_draw\_arrow(lv\_obj\_t\*ddlist)

Get arrow draw in a drop down list

#### **Parameters**

• ddlist: pointer to drop down list object

# bool lv\_ddlist\_get\_stay\_open(lv\_obj\_t \*ddlist)

Get whether the drop down list stay open after selecting a value or not

#### Parameters

• ddlist: pointer to drop down list object

# static lv\_sb\_mode\_t lv\_ddlist\_get\_sb\_mode(const lv\_obj\_t \*ddlist)

Get the scroll bar mode of a drop down list

Return scrollbar mode from 'lv\_page\_sb\_mode\_t' enum

#### **Parameters**

• ddlist: pointer to a drop down list object

# static uint16\_t lv\_ddlist\_get\_anim\_time(const lv\_obj\_t \*ddlist)

Get the open/close animation time.

Return open/close animation time [ms]

#### **Parameters**

• ddlist: pointer to a drop down list

# $\verb|const||_{lv\_style\_t} * \verb|lv\_ddlist\_get\_style| (\verb|const||_{lv\_obj\_t} * |ddlist\_style\_t| |type|)$

Get a style of a drop down list

Return style pointer to a style

#### **Parameters**

- ddlist: pointer to a drop down list object
- type: which style should be get

# lv\_label\_align\_t lv\_ddlist\_get\_align(const lv\_obj\_t \*ddlist)

Get the alignment of the labels in a drop down list

Return alignment of labels

## **Parameters**

• ddlist: pointer to a drop down list object

## void lv ddlist open(lv\_obj\_t\*ddlist, lv\_anim\_enable\_t anim)

Open the drop down list with or without animation

#### **Parameters**

- ddlist: pointer to drop down list object
- anim\_en: LV\_ANIM\_ON: use animation; LV\_ANOM\_OFF: not use animations

## void lv\_ddlist\_close(lv\_obj\_t \*ddlist, lv\_anim\_enable\_t anim)

Close (Collapse) the drop down list

#### **Parameters**

- ddlist: pointer to drop down list object
- anim\_en: LV\_ANIM\_ON: use animation; LV\_ANOM\_OFF: not use animations

## struct lv\_ddlist\_ext\_t

## **Public Members**

```
lv_page_ext_t page
lv_obj_t *label
const lv_style_t *sel_style
uint16_t option_cnt
uint16_t sel_opt_id
uint16_t sel_opt_id_ori
uint8_t opened
uint8_t force_sel
uint8_t draw_arrow
uint8_t stay_open
lv_coord_t fix_height
```

## Gauge (Iv\_gauge)

#### Overview

The gauge is a meter with scale labels and needles.

#### Scale

You can use the lv\_gauge\_set\_scale(gauge, angle, line\_num, label\_cnt) function to adjust the scale angle and the number of the scale lines and labels. The default settings are 220 degrees, 6 scale labels, and 21 lines.

#### **Needles**

The gauge can show more than one needle. Use the <code>lv\_gauge\_set\_needle\_count(gauge, needle\_num, color\_array)</code> function to set the number of needles and an array with colors for each needle. The array must be static or global variable because only its pointer is stored.

You can use lv\_gauge\_set\_value(gauge, needle\_id, value) to set the value of a needle.

# Range

The range of the gauge can be specified by lv\_gauge\_set\_range(gauge, min, max). The default range is 0..100.

## Critical value

To set a critical value use lv\_gauge\_set\_critical\_value(gauge, value). The scale color will be changed to line.color after this value. (default: 80)

#### **Styles**

The gauge uses one style which can be set by lv\_gauge\_set\_style(gauge, LV\_GAUGE\_STYLE\_MAIN, &style). The gauge's properties are derived from the following style attributes:

- body.main\_color line's color at the beginning of the scale
- body.grad\_color line's color at the end of the scale (gradient with main color)
- body.padding.left line length
- body.padding.inner label distance from the scale lines
- body.radius radius of needle origin circle
- line.width line width
- line.color line's color after the critical value
- text.font/color/letter\_space label attributes

#### **Events**

Only the Generic events are sent by the object type.

Learn more about *Events*.


#### **Keys**

No *Keys* are processed by the object type.

Learn more about Keys.

## **Example**

C

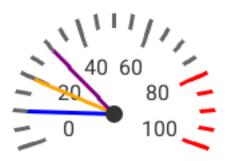

code

```
#include "lvgl/lvgl.h"
void lv ex gauge 1(void)
    /*Create a style*/
    static lv style t style;
    lv_style_copy(&style, &lv_style_pretty_color);
    style.body.main color = lv color hex3(0x666);
                                                      /*Line color at the beginning*/
    style.body.grad_color = lv_color_hex3(0x666);
                                                      /*Line color at the end*/
    style.body.padding.left = 10;
                                                       /*Scale line length*/
    style.body.padding.inner = 8 ;
                                                      /*Scale label padding*/
    style.body.border.color = lv_color_hex3(0x333);
                                                      /*Needle middle circle color*/
    style.line.width = 3;
    style.text.color = lv_color_hex3(0x333);
    style.line.color = LV COLOR RED;
                                                      /*Line color after the critical...
   /*Describe the color for the needles*/
    static lv_color_t needle_colors[] = {LV_COLOR_BLUE, LV_COLOR_ORANGE, LV_COLOR_
→PURPLE};
    /*Create a gauge*/
    lv obj t * gauge1 = lv gauge create(lv scr act(), NULL);
    lv_gauge_set_style(gauge1, LV_GAUGE_STYLE_MAIN, &style);
    lv_gauge_set_needle_count(gauge1, 3, needle_colors);
    lv obj set size(gauge1, 150, 150);
    lv_obj_align(gauge1, NULL, LV_ALIGN_CENTER, 0, 20);
    /*Set the values*/
    lv gauge set value(gauge1, 0, 10);
    lv gauge set value(gauge1, 1, 20);
```

(continues on next page)

(continued from previous page)

```
lv_gauge_set_value(gauge1, 2, 30);
}
```

## MicroPython

No examples yet.

#### API

## **Typedefs**

```
typedef uint8_t lv_gauge_style_t
```

## Enums

# enum [anonymous]

Values:

LV\_GAUGE\_STYLE\_MAIN

#### **Functions**

```
lv\_obj\_t *lv\_gauge\_create(lv\_obj\_t *par, const lv\_obj\_t *copy)
```

Create a gauge objects

Return pointer to the created gauge

#### Parameters

- par: pointer to an object, it will be the parent of the new gauge
- COPY: pointer to a gauge object, if not NULL then the new object will be copied from it

```
void lv_gauge_set_needle_count(lv_obj_t *gauge, uint8_t needle_cnt, const lv_color_t colors[])
```

Set the number of needles

#### **Parameters**

- gauge: pointer to gauge object
- needle cnt: new count of needles
- colors: an array of colors for needles (with 'num' elements)

 $\label{eq:void_lv_gauge_set_value} void \ \textbf{lv}\_\textbf{gauge}\_\textbf{set\_value}(\textit{lv}\_\textit{obj}\_\textit{t} *\textit{gauge}, \textit{uint8}\_\textit{t} \textit{needle}\_\textit{id}, \textit{int16}\_\textit{t} \textit{value})$ 

Set the value of a needle

- gauge: pointer to a gauge
- needle\_id: the id of the needle
- value: the new value

## **static** void **lv\_gauge\_set\_range**(lv\_obj\_t \*gauge, int16\_t min, int16\_t max)

Set minimum and the maximum values of a gauge

#### **Parameters**

- gauge: pointer to he gauge object
- min: minimum value
- max: maximum value

# **static** void **lv\_gauge\_set\_critical\_value**(*lv\_obj\_t\*gauge*, int16\_t *value*)

Set a critical value on the scale. After this value 'line.color' scale lines will be drawn

## **Parameters**

- gauge: pointer to a gauge object
- value: the critical value

void **lv\_gauge\_set\_scale**(lv\_obj\_t \*gauge, uint16\_t angle, uint8\_t line\_cnt, uint8\_t label\_cnt)

Set the scale settings of a gauge

#### **Parameters**

- gauge: pointer to a gauge object
- angle: angle of the scale (0..360)
- line\_cnt: count of scale lines. The get a given "subdivision" lines between label, line\_cnt = (sub\_div + 1) \* (label\_cnt 1) + 1
- label cnt: count of scale labels.

# $\textbf{static} \ \operatorname{void} \ \textbf{lv\_gauge\_set\_style} ( \ \mathit{lv\_obj\_t} \ *\mathit{gauge}, \ \mathit{lv\_gauge\_style\_t} \ \mathit{type}, \ \mathit{lv\_style\_t} \ *\mathit{style} \textbf{)}$

Set the styles of a gauge

#### **Parameters**

- gauge: pointer to a gauge object
- type: which style should be set (can be only LV GAUGE STYLE MAIN)
- style: set the style of the gauge

# int16\_t lv\_gauge\_get\_value(const lv\_obj\_t \*gauge, uint8\_t needle)

Get the value of a needle

**Return** the value of the needle [min,max]

#### **Parameters**

- qauge: pointer to gauge object
- needle: the id of the needle

# uint8\_t lv\_gauge\_get\_needle\_count(const lv\_obj\_t \*gauge)

Get the count of needles on a gauge

Return count of needles

#### **Parameters**

• gauge: pointer to gauge

# static int16\_t lv\_gauge\_get\_min\_value(const lv\_obj\_t \*lmeter)

Get the minimum value of a gauge

 ${\bf Return}\;\;{\rm the\;minimum\;value\;of\;the\;gauge}$ 

#### **Parameters**

• gauge: pointer to a gauge object

# static int16\_t lv\_gauge\_get\_max\_value(const lv\_obj\_t \*lmeter)

Get the maximum value of a gauge

Return the maximum value of the gauge

#### **Parameters**

• gauge: pointer to a gauge object

# static int16\_t lv\_gauge\_get\_critical\_value(const lv\_obj\_t \*gauge)

Get a critical value on the scale.

Return the critical value

#### **Parameters**

• gauge: pointer to a gauge object

# $wint8\_t lv_gauge_get_label_count(const lv_obj_t *gauge)$

Set the number of labels (and the thicker lines too)

Return count of labels

#### **Parameters**

• gauge: pointer to a gauge object

# $\verb|static uint8_t lv_gauge_get_line_count(const | lv_obj_t * gauge)|$

Get the scale number of a gauge

Return number of the scale units

## Parameters

• gauge: pointer to a gauge object

# static uint16\_t lv\_gauge\_get\_scale\_angle(const lv\_obj\_t \*gauge)

Get the scale angle of a gauge

Return angle of the scale

#### Parameters

• gauge: pointer to a gauge object

# 

Get the style of a gauge

Return pointer to the gauge's style

## Parameters

- gauge: pointer to a gauge object
- type: which style should be get (can be only LV GAUGE STYLE MAIN)

## struct lv\_gauge\_ext\_t

#### **Public Members**

```
lv_lmeter_ext_t lmeter
int16_t *values
const lv_color_t *needle_colors
uint8_t needle_count
uint8_t label_count
```

## Image (Iv\_img)

#### Overview

The Images are the basic object to display images.

## Image source

To provide maximum flexibility the source of the image can be:

- a variable in the code (a C array with the pixels)
- a file stored externally (like on an SD card)
- a text with Symbols

To set the source of an image use lv img set src(img, src)

To generate a pixel array from a PNG, JPG or BMP image use the Online image converter tool and set the converted image with its pointer: lv\_img\_set\_src(img1, &converted\_img\_var); To make the variable visible in the C file you need to declare it with LV IMG DECLARE(converted img var)

To use **external files** you also need to convert the image files using the online converter tool but now you should select the binary Output format. You also need to use LittlevGL's file system module and register a driver with some functions for the basic file operation. Got to the *File system* to learn more. To set an image source form a file use <code>lv\_img\_set\_src(img, "S:folder1/my\_img.bin")</code>

You can set a **symbol** similarly to *Labels*. In this case, the image will be rendered as text according to the *font* specified in the style. It enables to use of light weighted mono-color "letters" instead of real images. You can set symbol like <code>lv\_img\_set\_src(img1, LV\_SYMBOL\_OK)</code>

## Label as an image

Images and labels are sometimes for the same thing. E.g.to describe what a button does. Therefore Images and Labels are somewhat interchangeable. To handle these images can even display texts by using  $LV\_SYMBOL\_DUMMY$  as the prefix of the text. For example  $lv\_img\_set\_src(img, LV\_SYMBOL\_DUMMY$  "Some text")

## **Transparency**

The internal (variable) and external images support 2 transparency handling methods:

• Chrome keying pixels with LV\_COLOR\_TRANSP (lv\_conf.h) color will be transparent

• Alpha byte An alpha byte is added to every pixel

#### Palette and Alpha index

Besides True color (RGB) color format the following formats are also supported:

- Indexed image has a palette
- Alpha indexed only alpha values are stored

These options can be selected in the font converter. To learn more about the color formats read the *Images* section.

#### Recolor

The images can be re-colored in run-time to any color according to the brightness of the pixels. It is very useful to show different states (selected, inactive, pressed etc) of an image without storing more versions of the same image. This feature can be enabled in the style by setting <code>img.intense</code> between <code>LV\_OPA\_TRANSP</code> (no recolor, value: 0) and <code>LV\_OPA\_COVER</code> (full recolor, value: 255). The default value is <code>LV\_OPA\_TRANSP</code> so this feature is disabled.

#### Auto-size

It is possible to automatically set the size of the image object to the image source's width and height if enabled by the <code>lv\_img\_set\_auto\_size(image, true)</code> function. If auto size is enabled then when a new file is set the object size is automatically changed. Later you can modify the size manually. The auto size is enabled by default if the image is not a screen

## Mosaic

If the object size is greater then the image size in any directions then the image will be repeated like a mosaic. It's a very useful feature to create a large image from only a very narrow source. For example, you can have a  $300 \times 1$  image with a special gradient and set it as a wallpaper using the mosaic feature.

#### Offset

With <code>lv\_img\_set\_offset\_x(img, x\_ofs)</code> and <code>lv\_img\_set\_offset\_y(img, y\_ofs)</code> you can add some offset to the displayed image. It is useful if the object size is smaller than the image source size. Using the offset parameter a Texture atlas or a "running image" effect can be created by <code>Animating</code> the x or y offset.

#### **Styles**

The images uses one style which can be set by lv\_img\_set\_style(lmeter, LV\_IMG\_STYLE\_MAIN, &style). All the style.image properties are used:

- image.intense intensity of recoloring (0..255 or LV\_OPA\_...)
- image.color color for recoloring or color of the alpha indexed images
- image.opa overall opacity of image

When the Image object displays a text then style.text properties are used. See *Label* for more information.

The images' default style is *NULL* so they **inherit the parent's style**.

#### **Events**

Only the Generic events are sent by the object type.

Learn more about *Events*.

## Keys

No *Keys* are processed by the object type.

Learn more about Keys.

## Example

C



code

```
#include "lvgl/lvgl.h"

LV_IMG_DECLARE(cogwheel);

void lv_ex_img_1(void)
{
    lv_obj_t * img1 = lv_img_create(lv_scr_act(), NULL);
    lv_img_set_src(img1, &cogwheel);
```

(continues on next page)

(continued from previous page)

```
lv_obj_align(img1, NULL, LV_ALIGN_CENTER, 0, -20);

lv_obj_t * img2 = lv_img_create(lv_scr_act(), NULL);
 lv_img_set_src(img2, LV_SYMBOL_OK "Accept");
 lv_obj_align(img2, img1, LV_ALIGN_OUT_BOTTOM_MID, 0, 20);
}
```

## MicroPython

No examples yet.

## API

## **Typedefs**

```
typedef uint8_t lv_img_style_t
```

#### **Enums**

## enum [anonymous]

Values:

LV\_IMG\_STYLE\_MAIN

#### **Functions**

```
lv\_obj\_t *lv\_img\_create(lv\_obj\_t *par, const lv\_obj\_t *copy)
```

Create an image objects

Return pointer to the created image

## Parameters

- par: pointer to an object, it will be the parent of the new button
- copy: pointer to a image object, if not NULL then the new object will be copied from it

```
void lv_img_set_src(lv_obj_t *img, const void *src_img)
```

Set the pixel map to display by the image

#### **Parameters**

- img: pointer to an image object
- data: the image data

```
void lv_img_set_auto_size(lv_obj_t *img, bool autosize_en)
```

Enable the auto size feature. If enabled the object size will be same as the picture size.

- img: pointer to an image
- en: true: auto size enable, false: auto size disable

# void $lv\_img\_set\_offset\_x(lv\_obj\_t*img, lv\_coord\_t x)$

Set an offset for the source of an image. so the image will be displayed from the new origin.

#### **Parameters**

- img: pointer to an image
- X: the new offset along x axis.

# void lv\_img\_set\_offset\_y(lv\_obj\_t\*img, lv\_coord\_t y)

Set an offset for the source of an image. so the image will be displayed from the new origin.

#### **Parameters**

- img: pointer to an image
- y: the new offset along y axis.

# **static** void **lv\_img\_set\_style**(lv\_obj\_t \*img, lv\_img\_style\_t type, **const** lv\_style\_t \*style) Set the style of an image

#### **Parameters**

- img: pointer to an image object
- type: which style should be set (can be only LV IMG STYLE MAIN)
- style: pointer to a style

# const void \*lv\_img\_get\_src(lv\_obj\_t \*img)

Get the source of the image

**Return** the image source (symbol, file name or C array)

#### **Parameters**

• img: pointer to an image object

# const char \*lv\_img\_get\_file\_name(const lv\_obj\_t \*img)

Get the name of the file set for an image

Return file name

# Parameters

• img: pointer to an image

## bool lv\_img\_get\_auto\_size(const lv\_obj\_t \*img)

Get the auto size enable attribute

Return true: auto size is enabled, false: auto size is disabled

#### **Parameters**

• img: pointer to an image

## lv coord tlv img get offset x(lv\_obj\_t\*img)

Get the offset.x attribute of the img object.

Return offset.x value.

#### **Parameters**

• img: pointer to an image

# lv\_coord\_t lv\_img\_get\_offset\_y(lv\_obj\_t \*img)

Get the offset.y attribute of the img object.

Return offset.y value.

#### **Parameters**

• imq: pointer to an image

```
static const lv\_style\_t *lv\_img\_get\_style(const <math>lv\_obj\_t *img, lv\_img\_style\_t type)
Get the style of an image object
```

Return pointer to the image's style

## **Parameters**

- img: pointer to an image object
- type: which style should be get (can be only LV\_IMG\_STYLE\_MAIN)

## struct lv img ext t

## **Public Members**

```
const void *src
lv_point_t offset
lv_coord_t w
lv_coord_t h
uint8_t src_type
uint8_t auto_size
uint8_t cf
```

## Image button (Iv\_imgbtn)

## **Overview**

The Image button is very similar to the simple Button object. The only difference is it displays user-defined images in each state instead of drawing a button. Before reading this please read the *Button* section too.

#### Image sources

To set the image in a state the <code>lv\_imgbtn\_set\_src(imgbtn, LV\_BTN\_STATE\_..., &img\_src)</code> The image sources works the same as described in the <code>Image object</code>.

If LV\_IMGBTN\_TILED is enabled in *lv\_conf.h* three sources can be set for each state:

- left
- center
- right

The *center* image will be repeated to fill the width of the object. Therefore with LV\_IMGBTN\_TILED you can set the width of the Image button while without it the width will be always the same as the image source's width.

#### **States**

The states also work like with Button object. It can be set with lv\_imgbtn\_set\_state(imgbtn, LV\_BTN\_STATE\_...)

#### **Toggle**

The toggle feature can be enabled with lv\_imgbtn\_set\_toggle(imgbtn, true)

## Style usage

Similarly to normal Buttons, Image buttons also have 5 independent styles for the 5 state. You can set them via: lv\_imgbtn\_set\_style(btn, LV\_IMGBTN\_STYLE\_..., &style). The styles use the style.image properties.

- LV\_IMGBTN\_STYLE\_REL style of the released state. Default: lv\_style\_btn\_rel
- LV\_IMGBTN\_STYLE\_PR style of the pressed state. Default: lv style btn pr
- LV\_IMGBTN\_STYLE\_TGL\_REL style of the toggled released state. Default: lv\_style\_btn\_tgl\_rel
- LV\_IMGBTN\_STYLE\_TGL\_PR style of the toggled pressed state. Default: lv style btn tgl pr
- LV\_IMGBTN\_STYLE\_INA style of the inactive state. Default: lv\_style\_btn\_ina

When labels are created on a button, it's a good practice to set the image button's style.text properties too. Because labels have style = NULL by default they inherit the parent's (image button) style. Hence you don't need to create a new style for the label.

#### **Events**

Besided the Genreric events the following Special events are sent by the buttons:

• LV\_EVENT\_VALUE\_CHANGED sent when the button is toggled.

Note that the generic input device related events (like  $LV\_EVENT\_PRESSED$ ) are sent in the inactive state too. You need to check the state with  $lv\_btn\_get\_state(btn)$  to ignore the events from inactive buttons.

Learn more about Events.

## Keys

The following *Keys* are processed by the Buttons:

- LV\_KEY\_RIGHT/UP Go to toggled state if toggling is enabled
- LV\_KEY\_LEFT/DOWN Go to non-toggled state if toggling is enabled

Note that, as usual, the state of LV\_KEY\_ENTER is translated to LV\_EVENT\_PRESSED/PRESSING/RELEASED etc.

Learn more about Keys.

## **Example**

C



code

```
#include "lvgl/lvgl.h"
void lv_ex_imgbtn_1(void)
    lv_style_t style_pr;
    lv_style_copy(&style_pr, &lv_style_plain);
    style pr.image.color = LV COLOR BLACK;
    style pr.image.intense = LV OPA 50;
    style_pr.text.color = lv_color_hex3(0xaaa);
   LV_IMG_DECLARE(imgbtn_green);
   LV IMG DECLARE(imgbtn blue);
   /*Create an Image button*/
   lv_obj_t * imgbtn1 = lv_imgbtn_create(lv_scr_act(), NULL);
    lv_imgbtn_set_src(imgbtn1, LV_BTN_STATE_REL, &imgbtn_green);
    lv_imgbtn_set_src(imgbtn1, LV_BTN_STATE_PR, &imgbtn_green);
    lv_imgbtn_set_src(imgbtn1, LV_BTN_STATE_TGL_REL, &imgbtn_blue);
    lv imgbtn set src(imgbtn1, LV BTN STATE TGL PR, &imgbtn blue);
    lv imgbtn set style(imgbtn1, LV BTN STATE PR, &style pr);
                                                                      /*Use the darker.
→style in the pressed state*/
    lv_imgbtn_set_style(imgbtn1, LV_BTN_STATE_TGL_PR, &style_pr);
    lv_imgbtn_set_toggle(imgbtn1, true);
    lv_obj_align(imgbtn1, NULL, LV_ALIGN_CENTER, 0, -40);
    /*Create a label on the Image button*/
    lv obj t * label = lv label create(imgbtn1, NULL);
    lv label set text(label, "Button");
}
```

## MicroPython

No examples yet.

#### **API**

## **Typedefs**

```
typedef uint8_t lv_imgbtn_style_t
```

#### Enums

# enum [anonymous]

Values:

## LV\_IMGBTN\_STYLE\_REL

Same meaning as ordinary button styles.

```
LV_IMGBTN_STYLE_PR
```

LV\_IMGBTN\_STYLE\_TGL\_REL

LV\_IMGBTN\_STYLE\_TGL\_PR

LV\_IMGBTN\_STYLE\_INA

## **Functions**

```
\mathit{lv\_obj\_t} * \texttt{lv\_imgbtn\_create} (\mathit{lv\_obj\_t} * \mathit{par}, \, \texttt{const} \, \mathit{lv\_obj\_t} * \mathit{copy})
```

Create a image button objects

Return pointer to the created image button

#### **Parameters**

- par: pointer to an object, it will be the parent of the new image button
- ullet COPY: pointer to a image button object, if not NULL then the new object will be copied from it

```
void lv imgbtn set src(lv obj t*imgbtn, lv btn state t state, const void *src)
```

Set images for a state of the image button

#### **Parameters**

- imgbtn: pointer to an image button object
- state: for which state set the new image (from lv btn state t) '
- Src: pointer to an image source (a C array or path to a file)

Set images for a state of the image button

- imgbtn: pointer to an image button object
- state: for which state set the new image (from lv btn state t) '

- src\_left: pointer to an image source for the left side of the button (a C array or path to a file)
- src\_mid: pointer to an image source for the middle of the button (ideally 1px wide) (a C array or path to a file)
- src\_right: pointer to an image source for the right side of the button (a C array or path to a file)

## **static** void **lv\_imgbtn\_set\_toggle**(lv\_obj\_t \*imgbtn, bool tgl)

Enable the toggled states. On release the button will change from/to toggled state.

#### **Parameters**

- imgbtn: pointer to an image button object
- tgl: true: enable toggled states, false: disable

# static void lv\_imgbtn\_set\_state(lv\_obj\_t \*imgbtn, lv\_btn\_state\_t state)

Set the state of the image button

#### **Parameters**

- imgbtn: pointer to an image button object
- **state**: the new state of the button (from lv\_btn\_state\_t enum)

## static void lv\_imgbtn\_toggle(lv\_obj\_t \*imgbtn)

Toggle the state of the image button (ON->OFF, OFF->ON)

#### **Parameters**

• imgbtn: pointer to a image button object

void  $lv\_imgbtn\_set\_style(lv\_obj\_t*imgbtn, lv\_imgbtn\_style\_t type, const lv\_style\_t*style)$ Set a style of a image button.

#### **Parameters**

- imgbtn: pointer to image button object
- type: which style should be set
- style: pointer to a style

# $\textbf{const void *lv\_imgbtn\_get\_src}(\textit{lv\_obj\_t *} imgbtn, \textit{lv\_btn\_state\_t state})$

Get the images in a given state

Return pointer to an image source (a C array or path to a file)

#### **Parameters**

- imgbtn: pointer to an image button object
- state: the state where to get the image (from lv\_btn\_state\_t) '

# const void \*lv\_imgbtn\_get\_src\_left(lv\_obj\_t \*imgbtn, lv\_btn\_state\_t state)

Get the left image in a given state

**Return** pointer to the left image source (a C array or path to a file)

- imgbtn: pointer to an image button object
- state: the state where to get the image (from lv\_btn\_state\_t) '

# const void \*lv\_imgbtn\_get\_src\_middle(lv\_obj\_t \*imgbtn, lv\_btn\_state\_t state)

Get the middle image in a given state

Return pointer to the middle image source (a C array or path to a file)

#### **Parameters**

- imgbtn: pointer to an image button object
- state: the state where to get the image (from lv btn state t) '

# const void \*lv\_imgbtn\_get\_src\_right(lv\_obj\_t \*imgbtn, lv\_btn\_state\_t state)

Get the right image in a given state

Return pointer to the left image source (a C array or path to a file)

#### **Parameters**

- imgbtn: pointer to an image button object
- state: the state where to get the image (from lv btn state t) '

# $\verb|static|| \mathit{lv\_btn\_state\_t}| \ensuremath{\texttt{lv\_imgbtn\_get\_state}}(\ensuremath{\texttt{const}}| \mathit{lv\_obj\_t} * \mathit{imgbtn})|$

Get the current state of the image button

Return the state of the button (from lv\_btn\_state\_t enum)

## **Parameters**

• imgbtn: pointer to a image button object

## static bool lv\_imgbtn\_get\_toggle(const lv\_obj\_t \*imgbtn)

Get the toggle enable attribute of the image button

Return ture: toggle enabled, false: disabled

## Parameters

• imgbtn: pointer to a image button object

# 

Return style pointer to the style

#### Parameters

- imgbtn: pointer to image button object
- type: which style should be get

## struct lv imgbtn ext t

#### **Public Members**

```
lv_btn_ext_t btn
const void *img_src[_LV_BTN_STATE_NUM]
const void *img_src_left[_LV_BTN_STATE_NUM]
const void *img_src_mid[_LV_BTN_STATE_NUM]
const void *img_src_right[_LV_BTN_STATE_NUM]
lv_img_cf_t act_cf
```

## Keyboard (lv\_kb)

#### Overview

The Keyboard object is a special *Button matrix* with predefined keymaps and other features to realize a virtual keyboard to write text.

#### Modes

The Keyboards have two modes:

- LV\_KB\_MODE\_TEXT display letters, number, and special characters
- LV\_KB\_MODE\_NUM display numbers, +/- sign and decimal dot

To set the mode use lv\_kb\_set\_mode(kb, mode). The default is LV\_KB\_MODE\_TEXT

#### Assign Text area

You can assign a *Text area* to the Keyboard to automatically put the clicked characters there. To assign the Text area use lv kb set ta(kb, ta).

The assigned Text area's cursor can be managed by the keyboard: when the keyboard is assigned the previous Text area's cursor will be hidden an the new's will be shown. When the keyboard is closed by the *Ok* or *Close* buttons the cursor also will be hidden. The cursor manager feature is enabled by  $lv_kb_set_cursor_manage(kb, true)$ . The default is not managed.

## New key map

You can specify a new map (layout) for the keyboard with <code>lv\_kb\_set\_map(kb, map)</code>. and <code>lv\_kb\_set\_ctrl\_map(kb, ctrl\_map)</code>. Learn more about in the <code>Button matrix</code> object. Keep in mind using following keywords will have the same effect as with the original map:

- LV\_SYMBOL\_OK Apply
- SYMBOL CLOSE Close
- LV\_SYMBOL\_LEFT Move the cursor left
- LV\_SYMBOL\_RIGHT Move the cursor right
- "ABC" load the uppercase map
- "abc" load the lower case map
- "Enter" new line
- "Bkps" Delete on the left

#### **Styles**

The Keyboards work with 6 styles: a background and 5 button styles for each state. You can set the styles with lv\_kb\_set\_style(btn, LV\_KB\_STYLE\_..., &style). The background and the buttons use the style.body properties. The labels use the style.text properties of the buttons' styles.

- LV\_KB\_STYLE\_BG Background style. Uses all style.body properties including padding Default: lv style pretty
- LV\_KB\_STYLE\_BTN\_REL style of the released buttons. Default: lv style btn rel
- LV\_KB\_STYLE\_BTN\_PR style of the pressed buttons. Default: lv\_style\_btn\_pr
- LV\_KB\_STYLE\_BTN\_TGL\_REL style of the toggled released buttons. Default: lv style btn tgl rel
- LV\_KB\_STYLE\_BTN\_TGL\_PR style of the toggled pressed buttons. Default: lv\_style\_btn\_tgl\_pr
- LV\_KB\_STYLE\_BTN\_INA style of the inactive buttons. Default: lv style btn ina

#### **Events**

Besides the Generic events the following Special events are sent by the keyboards:

- LV\_EVENT\_VALUE\_CHANGED sent when the button is pressed/released or repeated after long press. The event data is set to ID of the pressed/released button.
- LV EVENT APPLY the Ok button is clicked
- LV\_EVENT\_CANCEL the Close button is clicked

The keyboard has a **default event handler** callback called <code>lv\_kb\_def\_event\_cb</code>. It handles the button pressing, map changing, the assigned Text area, etc. You can completely replace it with your custom event handler but you can call <code>lv\_kb\_def\_event\_cb</code> at the beginning of your event handler to handle the same things as before.

Learn more about Events.

#### **Keys**

The following *Keys* are processed by the Buttons:

- LV\_KEY\_RIGHT/UP/LEFT/RIGHT To navigate among the buttons and elect one
- LV\_KEY\_ENTER To press/release the selected button

Learn more about Keys.

## **Examples**

C





code

```
#include "lvgl/lvgl.h"
void lv_ex_kb_1(void)
             /*Create styles for the keyboard*/
             static lv_style_t rel_style, pr_style;
             lv_style_copy(&rel_style, &lv_style_btn_rel);
             rel_style.body.radius = 0;
             rel_style.body.border.width = 1;
             lv style copy(&pr style, &lv style btn pr);
             pr style.body.radius = 0;
             pr_style.body.border.width = 1;
             /*Create a keyboard and apply the styles*/
             lv_obj_t *kb = lv_kb_create(lv_scr_act(), NULL);
             lv kb set cursor manage(kb, true);
             \label{local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_local_loc
             lv_kb_set_style(kb, LV_KB_STYLE_BTN_REL, &rel_style);
             lv_kb_set_style(kb, LV_KB_STYLE_BTN_PR, &pr_style);
             /*Create a text area. The keyboard will write here*/
             lv_obj_t *ta = lv_ta_create(lv_scr_act(), NULL);
             lv_obj_align(ta, NULL, LV_ALIGN_IN_TOP_MID, 0, 10);
             lv_ta_set_text(ta, "");
             /*Assign the text area to the keyboard*/
             lv_kb_set_ta(kb, ta);
```

## MicroPython

No examples yet.

## **API**

## **Typedefs**

```
typedef uint8_t lv_kb_mode_t
typedef uint8_t lv_kb_style_t
```

#### **Enums**

## enum [anonymous]

Current keyboard mode.

Values:

LV\_KB\_MODE\_TEXT
LV\_KB\_MODE\_NUM

## enum [anonymous]

Values:

LV\_KB\_STYLE\_BG

LV\_KB\_STYLE\_BTN\_REL

LV\_KB\_STYLE\_BTN\_PR

LV\_KB\_STYLE\_BTN\_TGL\_REL

LV\_KB\_STYLE\_BTN\_TGL\_PR

LV\_KB\_STYLE\_BTN\_INA

#### **Functions**

```
lv\_obj\_t *lv\_kb\_create(lv\_obj\_t *par, const lv\_obj\_t *copy)
Create a keyboard objects
```

J J

Return pointer to the created keyboard

## **Parameters**

- par: pointer to an object, it will be the parent of the new keyboard
- COPY: pointer to a keyboard object, if not NULL then the new object will be copied from it

```
void lv_kb_set_ta(lv_obj_t*kb, lv_obj_t*ta)
```

Assign a Text Area to the Keyboard. The pressed characters will be put there.

- kb: pointer to a Keyboard object
- ta: pointer to a Text Area object to write there

void lv\_kb\_set\_mode(lv\_obj\_t \*kb, lv\_kb\_mode\_t mode)

Set a new a mode (text or number map)

#### **Parameters**

- kb: pointer to a Keyboard object
- mode: the mode from 'lv kb mode t'

## void lv\_kb\_set\_cursor\_manage(lv\_obj\_t\*kb, bool en)

Automatically hide or show the cursor of the current Text Area

#### **Parameters**

- kb: pointer to a Keyboard object
- en: true: show cursor on the current text area, false: hide cursor

## static void lv\_kb\_set\_map(lv\_obj\_t \*kb, const char \*map[])

Set a new map for the keyboard

#### **Parameters**

- kb: pointer to a Keyboard object
- map: pointer to a string array to describe the map. See 'lv\_btnm\_set\_map()' for more info.

# static void lv\_kb\_set\_ctrl\_map(lv\_obj\_t\*kb, const lv\_btnm\_ctrl\_t ctrl\_map[])

Set the button control map (hidden, disabled etc.) for the keyboard. The control map array will be copied and so may be deallocated after this function returns.

## Parameters

- kb: pointer to a keyboard object
- ctrl\_map: pointer to an array of lv\_btn\_ctrl\_t control bytes. See: lv\_btnm\_set\_ctrl\_map for more details.

$$\label{local_volume} \mbox{void $lv\_kb\_style$\_$t $type$, $const $lv\_style\_t $*style$)}$$

Set a style of a keyboard

#### **Parameters**

- kb: pointer to a keyboard object
- type: which style should be set
- style: pointer to a style

# lv\_obj\_t \*lv\_kb\_get\_ta(const lv\_obj\_t \*kb)

Assign a Text Area to the Keyboard. The pressed characters will be put there.

**Return** pointer to the assigned Text Area object

#### **Parameters**

• kb: pointer to a Keyboard object

## lv kb mode\_t lv kb get mode(const lv\_obj\_t\*kb)

Set a new a mode (text or number map)

**Return** the current mode from 'lv\_kb\_mode\_t'

## **Parameters**

• kb: pointer to a Keyboard object

# bool lv\_kb\_get\_cursor\_manage(const $lv\_obj\_t *kb$ )

Get the current cursor manage mode.

Return true: show cursor on the current text area, false: hide cursor

#### **Parameters**

• kb: pointer to a Keyboard object

# static const char \*\*lv\_kb\_get\_map\_array(const lv\_obj\_t \*kb)

Get the current map of a keyboard

Return the current map

#### **Parameters**

• kb: pointer to a keyboard object

## const lv\_style\_t \*lv\_kb\_get\_style(const lv\_obj\_t \*kb, lv\_kb\_style\_t type)

Get a style of a keyboard

**Return** style pointer to a style

#### **Parameters**

- kb: pointer to a keyboard object
- type: which style should be get

Default keyboard event to add characters to the Text area and change the map. If a custom event\_cb is added to the keyboard this function be called from it to handle the button clicks

## **Parameters**

- kb: pointer to a keyboard
- event: the triggering event

## struct lv\_kb\_ext\_t

#### **Public Members**

```
lv_btnm_ext_t btnm
lv_obj_t *ta
lv_kb_mode_t mode
uint8_t cursor_mng
```

## Label (lv\_label)

## **Overview**

The Labels are the basic objects to display text.

#### Set text

You can modify the text in run-time at any time with lv\_label\_set\_text(label, "New text"). It will allocate the text dynamically.

Labels are able to show text from a static array. Use: lv\_label\_set\_static\_text(label, char\_array). In this case, the text is not stored in the dynamic memory but the given array is used directly instead. Keep in my the array can't be a local variable which destroys when the function exits.

You can also use a **raw character array** as label text. The array doesn't have to be **\0** terminated. In this case, the text will be saved to the dynamic memory. To set a raw character array use the <code>lv\_label\_set\_array\_text(label, char\_array)</code> function.

#### Line break

You can use \n to make line break. For example: "line1\nline2\n\nline4"

## Long modes

The size of the label object can be automatically expanded to the text size or the text can be manipulated according to several long mode policies:

- LV\_LABEL\_LONG\_EXPAND Expand the object size to the text size (Default)
- LV\_LABEL\_LONG\_BREAK Keep the object width, break (wrap) the too long lines and expand the object height
- LV\_LABEL\_LONG\_DOTS Keep the object size, break the text and write dots in the last line
- LV\_LABEL\_LONG\_ROLL Keep the size and scroll the label back and forth
- LV\_LABEL\_LONG\_ROLL\_CIRC Keep the size and scroll the label circularly
- LV\_LABEL\_LONG\_CROP Keep the size and crop the text out of it.

You can specify the long mode with: lv\_label\_set\_long\_mode(label, LV\_LABEL\_LONG\_...)

It's important to note that when a label is created and its test is set the label's size already expanded to the text size. In addition with the default LV\_LABEL\_LONG\_EXPAND long mode lv\_obj\_set\_width/height/size() has no effect. So you need to change the long mode first and then set the size with lv obj set width/height/size().

#### Text align

The label's text can be aligned to the left, right or middle with  $lv_label_set_align(label, LV_LABEL_ALIGN_LEFT/RIGHT/CENTER)$ 

## Draw background

You can enable to draw a background for the label with lv label set body draw(label, draw)

#### Text recolor

In the text, you can use commands to re-color parts of the text. For example: "Write a #ff0000 red# word". This feature can be enabled individually for each label by lv label set recolor() function.

Note that, recoloring work only in a single line. I.e. there can't be  $\n$  in a recolored text or it can be wrapped by LV\_LABEL\_LONG\_BREAK else the text in the new line won't be recolored.

## Very long texts

LittlevGL can effectively handle very long (> 40k characters) by saving some extra data ( $\sim$ 12 bytes) to speed up drawing. To enable this feature set LV LABEL LONG TXT HINT 1 in  $lv\_conf.h.$ 

## **Symbols**

The labels can display symbols besides letters. Read the *Font* section to learn more about the symbols.

## **Styles**

The Label uses one style which can be set by lv\_label\_set\_style(label, LV\_LABEL\_STYLE\_MAIN, &style). Form the style the following properties are used:

- all properties from style.text
- for background drawing style.body properties. padding will increase the size only visually, the real object's size won't be changed.

The labels' default style is NULL so they inherit the parent's style.

#### **Events**

Only the Generic events are sent by the object type.

Learn more about *Events*.

## **Keys**

No Keys are processed by the object type.

Learn more about Keys.

# **Example**

C

Re-color words of a label and wrap long text automatically.

It is a circularly scr

code

```
#include "lvgl/lvgl.h"
void lv_ex_label_1(void)
    lv_obj_t * label1 = lv_label_create(lv_scr_act(), NULL);
    lv_label_set_long_mode(label1, LV_LABEL_LONG_BREAK);
                                                             /*Break the long lines*/
    lv_label_set_recolor(label1, true);
                                                             /*Enable re-coloring by_
⇔commands in the text*/
    lv_label_set_align(label1, LV_LABEL_ALIGN_CENTER);
                                                             /*Center aligned lines*/
    lv_label_set_text(label1, "#000080 Re-color# #0000ff words# #6666ff of a# label "
                              "and wrap long text automatically.");
    lv_obj_set_width(label1, 150);
    lv_obj_align(label1, NULL, LV_ALIGN_CENTER, 0, -30);
    lv_obj_t * label2 = lv_label_create(lv_scr_act(), NULL);
    lv_label_set_long_mode(label2, LV_LABEL_LONG_SROLL_CIRC);
                                                                 /*Circular scroll*/
    lv_obj_set_width(label2, 150);
    lv_label_set_text(label2, "It is a circularly scrolling text. ");
    lv_obj_align(label2, NULL, LV_ALIGN_CENTER, 0, 30);
}
```

## MicroPython

No examples yet.

**API** 

## **Typedefs**

```
typedef uint8_t lv_label_long_mode_t
typedef uint8_t lv_label_align_t
typedef uint8 t lv label style t
```

## **Enums**

# enum [anonymous]

Long mode behaviors. Used in 'lv\_label\_ext\_t'

Values:

# LV\_LABEL\_LONG\_EXPAND

Expand the object size to the text size

## LV\_LABEL\_LONG\_BREAK

Keep the object width, break the too long lines and expand the object height

# LV\_LABEL\_LONG\_DOT

Keep the size and write dots at the end if the text is too long

## LV\_LABEL\_LONG\_SROLL

Keep the size and roll the text back and forth

# LV\_LABEL\_LONG\_SROLL\_CIRC

Keep the size and roll the text circularly

# LV\_LABEL\_LONG\_CROP

Keep the size and crop the text out of it

# enum [anonymous]

Label align policy

Values:

# LV\_LABEL\_ALIGN\_LEFT

Align text to left

## LV\_LABEL\_ALIGN\_CENTER

Align text to center

## LV LABEL ALIGN RIGHT

Align text to right

## enum [anonymous]

Label styles

Values:

# LV\_LABEL\_STYLE\_MAIN

## **Functions**

```
lv\_obj\_t *lv\_label\_create(lv\_obj\_t *par, const lv\_obj\_t *copy)
```

Create a label objects

Return pointer to the created button

- par: pointer to an object, it will be the parent of the new label
- copy: pointer to a button object, if not NULL then the new object will be copied from it

## void lv\_label\_set\_text(lv\_obj\_t \*label, const char \*text)

Set a new text for a label. Memory will be allocated to store the text by the label.

#### **Parameters**

- label: pointer to a label object
- text: '\0' terminated character string. NULL to refresh with the current text.

# void lv\_label\_set\_array\_text(lv\_obj\_t \*label, const char \*array, uint16\_t size)

Set a new text for a label from a character array. The array don't has to be '\0' terminated. Memory will be allocated to store the array by the label.

#### **Parameters**

- label: pointer to a label object
- array: array of characters or NULL to refresh the label
- size: the size of 'array' in bytes

# void lv\_label\_set\_static\_text(lv\_obj\_t \*label, const char \*text)

Set a static text. It will not be saved by the label so the 'text' variable has to be 'alive' while the label exist.

#### **Parameters**

- label: pointer to a label object
- text: pointer to a text. NULL to refresh with the current text.

# void lv\_label\_set\_long\_mode(lv\_obj\_t\*label, lv\_label\_long\_mode\_t long\_mode)

Set the behavior of the label with longer text then the object size

#### **Parameters**

- label: pointer to a label object
- long\_mode: the new mode from 'lv\_label\_long\_mode' enum. In LV\_LONG\_BREAK/LONG/ROLL the size of the label should be set AFTER this function

## void lv\_label\_set\_align(lv\_obj\_t \*label, lv\_label\_align\_t align)

Set the align of the label (left or center)

#### **Parameters**

- label: pointer to a label object
- align: 'LV\_LABEL\_ALIGN\_LEFT' or 'LV\_LABEL\_ALIGN\_LEFT'

# void lv\_label\_set\_recolor(lv\_obj\_t \*label, bool en)

Enable the recoloring by in-line commands

#### **Parameters**

- label: pointer to a label object
- en: true: enable recoloring, false: disable

# void lv\_label\_set\_body\_draw(lv\_obj\_t \*label, bool en)

Set the label to draw (or not draw) background specified in its style's body

- label: pointer to a label object
- en: true: draw body; false: don't draw body

## void lv\_label\_set\_anim\_speed(lv\_obj\_t\*label, uint16\_t anim\_speed)

Set the label's animation speed in LV\_LABEL\_LONG\_SROLL/SCROLL\_CIRC modes

#### **Parameters**

- label: pointer to a label object
- anim\_speed: speed of animation in px/sec unit

Set the style of an label

#### **Parameters**

- label: pointer to an label object
- type: which style should be get (can be only LV\_LABEL\_STYLE\_MAIN)
- style: pointer to a style

# void lv\_label\_set\_text\_sel\_start(lv\_obj\_t \*label, uint16\_t index)

Set the selection start index.

#### **Parameters**

- label: pointer to a label object.
- index: index to set. LV LABEL TXT SEL OFF to select nothing.

## void lv\_label\_set\_text\_sel\_end(lv\_obj\_t\*label, uint16\_t index)

Set the selection end index.

## Parameters

- label: pointer to a label object.
- index: index to set. LV LABEL TXT SEL OFF to select nothing.

## char \*lv label get text(const lv\_obj\_t \*label)

Get the text of a label

Return the text of the label

# **Parameters**

• label: pointer to a label object

## lv\_label\_long\_mode\_t lv\_label\_get\_long\_mode(const lv\_obj\_t \*label)

Get the long mode of a label

Return the long mode

## **Parameters**

• label: pointer to a label object

## lv\_label\_align\_t lv\_label\_get\_align(const lv\_obj\_t \*label)

Get the align attribute

Return LV\_LABEL\_ALIGN\_LEFT or LV\_LABEL\_ALIGN\_CENTER

• label: pointer to a label object

## bool lv\_label\_get\_recolor(const lv\_obj\_t \*label)

Get the recoloring attribute

Return true: recoloring is enabled, false: disable

#### **Parameters**

• label: pointer to a label object

# bool lv\_label\_get\_body\_draw(const lv\_obj\_t \*label)

Get the body draw attribute

Return true: draw body; false: don't draw body

#### **Parameters**

• label: pointer to a label object

# uint16\_t lv\_label\_get\_anim\_speed(const lv\_obj\_t \*label)

Get the label's animation speed in LV\_LABEL\_LONG\_ROLL and SCROLL modes

**Return** speed of animation in px/sec unit

#### **Parameters**

• label: pointer to a label object

# void lv\_label\_get\_letter\_pos(const lv\_obj\_t \*label, uint16\_t index, lv\_point\_t \*pos)

Get the relative x and y coordinates of a letter

#### **Parameters**

- label: pointer to a label object
- index: index of the letter [0 ... text length]. Expressed in character index, not byte index (different in UTF-8)
- pos: store the result here (E.g. index = 0 gives 0;0 coordinates)

# uint16\_t lv\_label\_get\_letter\_on(const lv\_obj\_t \*label, lv\_point\_t \*pos)

Get the index of letter on a relative point of a label

**Return** the index of the letter on the 'pos\_p' point (E.g. on 0;0 is the 0. letter) Expressed in character index and not byte index (different in UTF-8)

#### **Parameters**

- label: pointer to label object
- pos: pointer to point with coordinates on a the label

## bool lv label is char under pos(const lv\_obj\_t\*label, lv point t\*pos)

Check if a character is drawn under a point.

Return whether a character is drawn under the point

#### **Parameters**

- label: Label object
- pos: Point to check for characte under

# $\textbf{static const} \ lv\_style\_t \ *\textbf{lv\_label\_get\_style} (\textbf{const} \ \textit{lv\_obj\_t} \ *label\_\textit{style\_t} \ \textit{type})$

Get the style of an label object

Return pointer to the label's style

## **Parameters**

- label: pointer to an label object
- type: which style should be get (can be only LV LABEL STYLE MAIN)

# uint16\_t lv\_label\_get\_text\_sel\_start(const lv\_obj\_t \*label)

Get the selection start index.

Return selection start index. LV LABEL TXT SEL OFF if nothing is selected.

#### **Parameters**

• label: pointer to a label object.

# ${\tt uint16\_t}$ **lv\_label\_get\_text\_sel\_end(const** $\mathit{lv\_obj\_t}$ \* $\mathit{label}$ )

Get the selection end index.

Return selection end index. LV\_LABEL\_TXT\_SEL\_OFF if nothing is selected.

#### **Parameters**

• label: pointer to a label object.

## void lv\_label\_ins\_text(lv\_obj\_t \*label, uint32\_t pos, const char \*txt)

Insert a text to the label. The label text can not be static.

#### **Parameters**

- label: pointer to a label object
- pos: character index to insert. Expressed in character index and not byte index (Different in UTF-8) 0: before first char. LV LABEL POS LAST: after last char.
- txt: pointer to the text to insert

## void lv label cut text(lv\_obj\_t\*label, uint32 t pos, uint32 t cnt)

Delete characters from a label. The label text can not be static.

#### **Parameters**

- label: pointer to a label object
- pos: character index to insert. Expressed in character index and not byte index (Different in UTF-8) 0: before first char.
- cnt: number of characters to cut

## struct lv label ext t

#include <lv label.h> Data of label

#### **Public Members**

```
char *text
char *tmp_ptr
char tmp[sizeof(char *)]
union lv_label_ext_t::[anonymous] dot
uint16_t dot_end
lv_point_t offset
```

```
lv_draw_label_hint_t hint
uint16_t anim_speed
uint16_t txt_sel_start
uint16_t txt_sel_end
lv_label_long_mode_t long_mode
uint8_t static_txt
uint8_t align
uint8_t recolor
uint8_t expand
uint8_t body_draw
uint8_t dot_tmp_alloc
```

## LED (lv\_led)

#### Overview

The LEDs are rectangle-like (or circle) object.

## **Brightness**

You can set their brightness with lv\_led\_set\_bright(led, bright). The brightness should be between 0 (darkest) and 255 (lightest).

## **Toggle**

Use lv\_led\_on(led) and lv\_led\_off(led) to set the brightness to a predefined ON or OFF value. The lv led toggle(led) toggles between the ON and OFF state.

## **Styles**

The LED uses one style which can be set by lv\_led\_set\_style(led, LV\_LED\_STYLE\_MAIN, &style). To determine the appearance the style.body properties are used.

The colors are darkened and shadow width is reduced at a lower brightness and gains its original value at brightness 255 to show a lighting effect.

The default style is: lv\_style\_pretty\_color. Not that, the LED doesn't really look like a LED with the default style so you should create your own style. See the example below.

## **Events**

Only the Generic events are sent by the object type.

Learn more about *Events*.

## **Keys**

No *Keys* are processed by the object type.

Learn more about Keys.

## Example

C



code

```
#include "lvgl/lvgl.h"
void lv_ex_led_1(void)
    /*Create a style for the LED*/
    static lv_style_t style_led;
    lv_style_copy(&style_led, &lv_style_pretty_color);
    style_led.body.radius = LV_RADIUS_CIRCLE;
    style_led.body.main_color = LV_COLOR_MAKE(0xb5, 0x0f, 0x04);
    style_led.body.grad_color = LV_COLOR_MAKE(0x50, 0x07, 0x02);
    style_led.body.border.color = LV_COLOR_MAKE(0xfa, 0x0f, 0x00);
    style_led.body.border.width = 3;
    style led.body.border.opa = LV OPA 30;
    style_led.body.shadow.color = LV_COLOR_MAKE(0xb5, 0x0f, 0x04);
    style led.body.shadow.width = 5;
   /*Create a LED and switch it ON*/
   lv_obj_t * led1 = lv_led_create(lv_scr_act(), NULL);
    lv_obj_set_style(led1, &style_led);
    lv obj align(led1, NULL, LV ALIGN CENTER, -80, 0);
    lv led off(led1);
```

(continues on next page)

(continued from previous page)

```
/*Copy the previous LED and set a brightness*/
lv_obj_t * led2 = lv_led_create(lv_scr_act(), led1);
lv_obj_align(led2, NULL, LV_ALIGN_CENTER, 0, 0);
lv_led_set_bright(led2, 190);

/*Copy the previous LED and switch it OFF*/
lv_obj_t * led3 = lv_led_create(lv_scr_act(), led1);
lv_obj_align(led3, NULL, LV_ALIGN_CENTER, 80, 0);
lv_led_on(led3);
}
```

# MicroPython

No examples yet.

#### API

## **Typedefs**

```
typedef uint8_t lv_led_style_t
```

## **Enums**

```
\begin{array}{c} \textbf{enum} \ [\textbf{anonymous}] \\ Values: \end{array}
```

LV\_LED\_STYLE\_MAIN

#### **Functions**

```
lv\_obj\_t *lv\_led\_create(lv\_obj\_t *par, const lv\_obj\_t *copy)
Create a led objects
```

Return pointer to the created led

# Parameters

- par: pointer to an object, it will be the parent of the new led
- copy: pointer to a led object, if not NULL then the new object will be copied from it

```
void lv_led_set_bright(lv_obj_t *led, uint8_t bright)
```

Set the brightness of a LED object

## **Parameters**

- led: pointer to a LED object
- bright: 0 (max. dark) ... 255 (max. light)

```
void lv_led_on(lv_obj_t * led)
```

Light on a LED

## Parameters

• led: pointer to a LED object

# void $lv_led_off(lv_obj_t*led)$

Light off a LED

#### **Parameters**

• led: pointer to a LED object

## void lv\_led\_toggle(lv\_obj\_t \*led)

Toggle the state of a LED

#### **Parameters**

• led: pointer to a LED object

# static void lv led set style(lv obj t\*led, lv led style t type, const lv style t \*style)

Set the style of a led

#### **Parameters**

- led: pointer to a led object
- type: which style should be set (can be only LV LED STYLE MAIN)
- style: pointer to a style

# uint8\_t lv\_led\_get\_bright(const lv\_obj\_t \*led)

Get the brightness of a LEd object

Return bright 0 (max. dark) ... 255 (max. light)

#### **Parameters**

• led: pointer to LED object

# static const lv style t \*lv led get style(const lv obj t \*led, lv led style t type)

Get the style of an led object

Return pointer to the led's style

#### **Parameters**

- led: pointer to an led object
- type: which style should be get (can be only LV CHART STYLE MAIN)

# struct lv\_led\_ext\_t

#### **Public Members**

uint8\_t bright

## Line (lv\_line)

# **Overview**

The Line object is capable of drawing straight lines between a set of points.

## Set points

The points has to be stored in an  $lv_point_t$  array and passed to the object by the  $lv_line_set_points(lines, point_array, point_cnt)$  function.

#### Auto-size

It is possible to automatically set the size of the line object according to its points. You can enable it with the lv\_line\_set\_auto\_size(line, true) function. If enabled then when the points are set the object's width and height will be changed according to the maximal x and y coordinates among the points. The *auto size* is enabled by default.

## Invert y

By deafult, the y == 0 point is in the top of the object but you can invert the y coordinates with  $lv\_line\_set\_y\_invert(line, true)$ . The y invert is disabled by default.

## **Styles**

The Line uses one style which can be set by lv\_line\_set\_style(led, LV\_LINE\_STYLE\_MAIN, &style) and it uses all style.line properties.

#### **Events**

Only the Generic events are sent by the object type.

Learn more about *Events*.

## **Keys**

No *Keys* are processed by the object type.

Learn more about *Keys*.

## **Example**

C



code

```
#include "lvgl/lvgl.h"
void lv_ex_line_1(void)
    /*Create an array for the points of the line*/
   static lv_point_t line_points[] = { {5, 5}, {70, 70}, {120, 10}, {180, 60}, {240,__
→10} };
    /*Create new style (thick dark blue)*/
    static lv_style_t style_line;
    lv_style_copy(&style_line, &lv_style_plain);
    style_line.line.color = LV_COLOR_MAKE(0 \times 00, 0 \times 3b, 0 \times 75);
    style_line.line.width = 3;
    style_line.line.rounded = 1;
    /*Copy the previous line and apply the new style*/
    lv_obj_t * line1;
    line1 = lv_line_create(lv_scr_act(), NULL);
    lv_line_set_points(line1, line_points, 5);
                                                   /*Set the points*/
    lv_line_set_style(line1, LV_LINE_STYLE_MAIN, &style_line);
    lv obj align(line1, NULL, LV ALIGN CENTER, 0, 0);
```

## MicroPython

No examples yet.

#### API

## **Typedefs**

typedef uint8\_t lv\_line\_style\_t

#### **Enums**

# enum [anonymous]

Values:

LV LINE STYLE MAIN

#### **Functions**

lv\_obj\_t \*lv line create(lv\_obj\_t \*par, const lv\_obj\_t \*copy)

Create a line objects

Return pointer to the created line

#### **Parameters**

• par: pointer to an object, it will be the parent of the new line

void **lv\_line\_set\_points** (*lv\_obj\_t* \**line*, **const** lv\_point\_t *point\_a*[], uint16\_t *point\_num*) Set an array of points. The line object will connect these points.

#### **Parameters**

- line: pointer to a line object
- point\_a: an array of points. Only the address is saved, so the array can NOT be a local variable which will be destroyed
- point num: number of points in 'point a'

## void lv line set auto size(lv\_obj\_t\*line, bool en)

Enable (or disable) the auto-size option. The size of the object will fit to its points. (set width to x max and height to y max)

## Parameters

- line: pointer to a line object
- en: true: auto size is enabled, false: auto size is disabled

## void lv\_line\_set\_y\_invert(lv\_obj\_t \*line, bool en)

Enable (or disable) the y coordinate inversion. If enabled then y will be subtracted from the height of the object, therefore the y=0 coordinate will be on the bottom.

## Parameters

- line: pointer to a line object
- en: true: enable the y inversion, false:disable the y inversion

static void  $lv\_line\_set\_style(lv\_obj\_t*line, lv\_line\_style\_t type, const lv\_style\_t*style)$ Set the style of a line

## **Parameters**

- line: pointer to a line object
- type: which style should be set (can be only LV LINE STYLE MAIN)

• style: pointer to a style

# bool lv\_line\_get\_auto\_size(const lv\_obj\_t \*line)

Get the auto size attribute

Return true: auto size is enabled, false: disabled

#### **Parameters**

• line: pointer to a line object

# bool lv\_line\_get\_y\_invert(const lv\_obj\_t \*line)

Get the y inversion attribute

Return true: y inversion is enabled, false: disabled

#### Parameters

• line: pointer to a line object

```
static const lv_style_t *lv_line_get_style(const lv_obj_t *line, lv_line_style_t type)
```

Get the style of an line object

Return pointer to the line's style

#### **Parameters**

- line: pointer to an line object
- type: which style should be get (can be only LV\_LINE\_STYLE\_MAIN)

# struct lv\_line\_ext\_t

#### **Public Members**

```
const lv_point_t *point_array
uint16_t point_num
uint8_t auto_size
uint8_t y_inv
```

## List (lv\_list)

## Overview

The Lists are built from a background *Page* and *Buttons* on it. The Buttons contain an optional icon-like *Image* (which can be a symbol too) and a *Label*. When the list becomes long enough it can be scrolled.

# Add buttons

You can add new list elements with <code>lv\_list\_add\_btn(list, &icon\_img, "Text", event\_cb)</code> or with symbol <code>lv\_list\_add\_btn(list, SYMBOL\_EDIT, "Edit text")</code>. If you do not want to add image use <code>NULL</code> as image source. The function returns with a pointer to the created button to allow further configurations.

The width of the buttons is set to maximum according to the object width. The height of the buttons are adjusted automatically according to the content. ( $content\ height + padding.top + padding.bottom$ ).

The labels are created with LV\_LABEL\_LONG\_SROLL\_CIRC long mode to automatically scroll the long labels circularly.

You can use <code>lv\_list\_get\_btn\_label(list\_btn)</code> and <code>lv\_list\_get\_btn\_img(list\_btn)</code> to get the label and the image of a list button. You can get the text directly with <code>lv\_list\_get\_btn\_text(list\_btn)</code>.

#### **Delete buttons**

To delete a list element just use  $lv_obj_del(btn)$  on the return value of  $lv_list_add_btn()$ . To clean the list (remove all buttons) use  $lv_list_clean(list)$ 

## Manual navigation

You can navigate manually in the list with  $lv_list_up(list)$  and  $lv_list_down(list)$ .

You can focus on a button directly using lv list focus(btn, LV ANIM ON/OFF).

The animation time of up/down/focus movements can be set via: lv\_list\_set\_anim\_time(list, anim time). Zero animation time means not animations.

## Edge flash

A circle-like effect can be shown when the list reaches the most top or bottom position. lv\_list\_set\_edge\_flash(list, en) enables this feature.

#### Scroll propagation

If the list is created on an other scrollable element (like a *Page*) and the list can't be scrolled further the **scrolling can be propagated to the parent**. This way the scroll will be continued on the parent. It can be enabled with lv\_list\_set\_scroll\_propagation(list, true)

If the buttons have lv\_btn\_set\_toggle enabled then lv\_list\_set\_single\_mode(list, true) can be used to ensure that only one button can be in toggled state at the same time.

## Style usage

The lv list set style(list, LV LIST STYLE ..., &style) function sets the style of a list.

- LV\_LIST\_STYLE\_BG list background style. Default: lv\_style\_transp\_fit
- LV\_LIST\_STYLE\_SCRL scrollable part's style. Default: lv style pretty
- LV\_LIST\_STYLE\_SB scrollbars' style. Default: lv\_style\_pretty\_color. For details see Page
- LV\_LIST\_STYLE\_BTN\_REL button released style. Default: lv style btn rel
- LV\_LIST\_STYLE\_BTN\_PR button pressed style. Default: lv\_style\_btn\_pr
- LV\_LIST\_STYLE\_BTN\_TGL\_REL button toggled released style. Default: lv style btn tql rel

- LV\_LIST\_STYLE\_BTN\_TGL\_PR button toggled pressed style. Default: lv style btn tgl pr
- LV\_LIST\_STYLE\_BTN\_INA button inactive style. Default: lv\_style\_btn\_ina

Because BG has a transparent style by default if there is only a few buttons the list will look shorter but become scrollable when more list elements are added.

To modify the height of the buttons adjust the body.padding.top/bottom fields of the corresponding styles (LV\_LIST\_STYLE\_BTN\_REL/PR/...)

## **Events**

Only the Generic events are sent by the object type.

Learn more about Events.

## **Keys**

The following *Keys* are processed by the Lists:

- LV\_KEY\_RIGHT/DOWN Select the next button
- LV\_KEY\_LEFT/UP Select the previous button

Note that, as usual, the state of  $LV\_KEY\_ENTER$  is translated to  $LV\_EVENT\_PRESSED/PRESSING/RELEASED$  etc.


The Selected buttons are in LV\_BTN\_STATE\_PR/TG\_PR state.

To manually select a button use <code>lv\_list\_set\_btn\_selected(list, btn)</code>. When the list is defocused and focused again it will restore the last selected button.

Learn more about *Keys*.

## **Example**

C

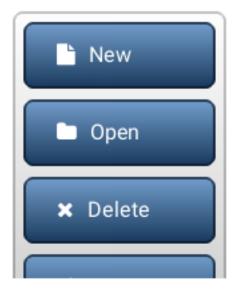

code

```
#include "lvgl/lvgl.h"
#include <stdio.h>
static void event_handler(lv_obj_t * obj, lv_event_t event)
    if(event == LV EVENT CLICKED) {
        printf("Clicked: %s\n", lv_list_get_btn_text(obj));
}
void lv_ex_list_1(void)
    /*Create a list*/
   lv_obj_t * list1 = lv_list_create(lv_scr_act(), NULL);
    lv_obj_set_size(list1, 160, 200);
    lv_obj_align(list1, NULL, LV_ALIGN_CENTER, 0, 0);
   /*Add buttons to the list*/
   lv_obj_t * list_btn;
   list btn = lv list add btn(list1, LV SYMBOL FILE, "New");
   lv_obj_set_event_cb(list_btn, event_handler);
    list_btn = lv_list_add_btn(list1, LV_SYMBOL_DIRECTORY, "Open");
   lv_obj_set_event_cb(list_btn, event_handler);
    list btn = lv list add btn(list1, LV SYMBOL CLOSE, "Delete");
    lv_obj_set_event_cb(list_btn, event_handler);
    list btn = lv list add btn(list1, LV SYMBOL EDIT, "Edit");
```

(continues on next page)

(continued from previous page)

```
lv_obj_set_event_cb(list_btn, event_handler);

list_btn = lv_list_add_btn(list1, LV_SYMBOL_SAVE, "Save");
    lv_obj_set_event_cb(list_btn, event_handler);
}
```

# MicroPython

No examples yet.

#### **API**

## **Typedefs**

```
typedef uint8_t lv_list_style_t
```

## **Enums**

## enum [anonymous]

List styles.

Values:

## LV\_LIST\_STYLE\_BG

List background style

## LV\_LIST\_STYLE\_SCRL

List scrollable area style.

# LV\_LIST\_STYLE\_SB

List scrollbar style.

# LV\_LIST\_STYLE\_EDGE\_FLASH

List edge flash style.

# LV\_LIST\_STYLE\_BTN\_REL

Same meaning as the ordinary button styles.

```
LV_LIST_STYLE_BTN_PR
```

LV\_LIST\_STYLE\_BTN\_TGL\_REL

LV\_LIST\_STYLE\_BTN\_TGL\_PR

LV\_LIST\_STYLE\_BTN\_INA

## **Functions**

```
lv\_obj\_t *lv\_list\_create(lv\_obj\_t *par, const lv\_obj\_t *copy)
```

Create a list objects

Return pointer to the created list

## **Parameters**

• par: pointer to an object, it will be the parent of the new list

• copy: pointer to a list object, if not NULL then the new object will be copied from it

# void lv\_list\_clean(lv\_obj\_t \*obj)

Delete all children of the scrl object, without deleting scrl child.

#### **Parameters**

• **obj**: pointer to an object

# lv\_obj\_t \*lv\_list\_add\_btn(lv\_obj\_t \*list, const void \*img\_src, const char \*txt)

Add a list element to the list

**Return** pointer to the new list element which can be customized (a button)

#### **Parameters**

- list: pointer to list object
- img\_fn: file name of an image before the text (NULL if unused)
- txt: text of the list element (NULL if unused)

## bool lv list remove(const lv\_obj\_t \*list, uint16 t index)

Remove the index of the button in the list

Return true: successfully deleted

#### **Parameters**

- list: pointer to a list object
- index: pointer to a the button's index in the list, index must be 0 <= index < lv list ext t.size

# void lv\_list\_set\_single\_mode(lv\_obj\_t \*list, bool mode)

Set single button selected mode, only one button will be selected if enabled.

#### **Parameters**

- list: pointer to the currently pressed list object
- mode: enable(true)/disable(false) single selected mode.

## void lv list set btn selected(lv\_obj\_t\*list, lv\_obj\_t\*btn)

Make a button selected

#### **Parameters**

- list: pointer to a list object
- btn: pointer to a button to select NULL to not select any buttons

## static void lv list set sb mode(lv obj t\*list, lv sb mode t mode)

Set the scroll bar mode of a list

## **Parameters**

- list: pointer to a list object
- sb mode: the new mode from 'lv page sb mode t' enum

## static void lv list set scroll propagation(lv\_obj\_t\*list, bool en)

Enable the scroll propagation feature. If enabled then the List will move its parent if there is no more space to scroll.

## Parameters

• list: pointer to a List

• en: true or false to enable/disable scroll propagation

# **static** void **lv\_list\_set\_edge\_flash**(*lv\_obj\_t* \**list*, bool *en*)

Enable the edge flash effect. (Show an arc when the an edge is reached)

#### **Parameters**

- list: pointer to a List
- en: true or false to enable/disable end flash

# **static** void **lv\_list\_set\_anim\_time**(lv\_obj\_t \*list, uint16\_t anim\_time)

Set scroll animation duration on 'list up()' 'list down()' 'list focus()'

#### **Parameters**

- list: pointer to a list object
- anim time: duration of animation [ms]

Set a style of a list

#### **Parameters**

- list: pointer to a list object
- type: which style should be set
- style: pointer to a style

# bool lv\_list\_get\_single\_mode(lv\_obj\_t \*list)

Get single button selected mode.

#### **Parameters**

• list: pointer to the currently pressed list object.

## const char \*lv list get btn text(const lv\_obj\_t \*btn)

Get the text of a list element

Return pointer to the text

#### **Parameters**

• btn: pointer to list element

# $lv\_obj\_t *lv\_list\_get\_btn\_label(const <math>lv\_obj\_t *btn)$

Get the label object from a list element

Return pointer to the label from the list element or NULL if not found

#### **Parameters**

• btn: pointer to a list element (button)

# lv\_obj\_t \*lv\_list\_get\_btn\_img(const lv\_obj\_t \*btn)

Get the image object from a list element

Return pointer to the image from the list element or NULL if not found

#### **Parameters**

• btn: pointer to a list element (button)

# $lv\_obj\_t *lv\_list\_get\_prev\_btn(const \ lv\_obj\_t *list, \ lv\_obj\_t *prev\_btn)$

Get the next button from list. (Starts from the bottom button)

Return pointer to the next button or NULL when no more buttons

#### **Parameters**

- list: pointer to a list object
- prev\_btn: pointer to button. Search the next after it.

# $lv\_obj\_t *lv\_list\_get\_next\_btn(const \ lv\_obj\_t *list, \ lv\_obj\_t *prev\_btn)$

Get the previous button from list. (Starts from the top button)

Return pointer to the previous button or NULL when no more buttons

#### **Parameters**

- list: pointer to a list object
- prev\_btn: pointer to button. Search the previous before it.

# int32\_t lv\_list\_get\_btn\_index(const lv\_obj\_t \*list, const lv\_obj\_t \*btn)

Get the index of the button in the list

Return the index of the button in the list, or -1 of the button not in this list

#### **Parameters**

- list: pointer to a list object. If NULL, assumes btn is part of a list.
- btn: pointer to a list element (button)

# uint16\_t lv\_list\_get\_size(const lv\_obj\_t \*list)

Get the number of buttons in the list

**Return** the number of buttons in the list

#### **Parameters**

• list: pointer to a list object

# lv\_obj\_t \*lv\_list\_get\_btn\_selected(const lv\_obj\_t \*list)

Get the currently selected button. Can be used while navigating in the list with a keypad.

Return pointer to the selected button

#### **Parameters**

• list: pointer to a list object

# $\verb|static|| lv\_sb\_mode\_t| lv\_list\_get\_sb\_mode(const|| lv\_obj\_t|*list)|$

Get the scroll bar mode of a list

 ${\bf Return} \ \ {\bf scrollbar} \ \ {\bf mode} \ \ {\bf from} \ \ {\bf `lv\_page\_sb\_mode\_t' enum}$ 

#### **Parameters**

• list: pointer to a list object

# static bool lv\_list\_get\_scroll\_propagation(lv\_obj\_t \*list)

Get the scroll propagation property

Return true or false

#### **Parameters**

• list: pointer to a List

# static bool lv\_list\_get\_edge\_flash(lv\_obj\_t \*list)

Get the scroll propagation property

Return true or false

## **Parameters**

• list: pointer to a List

# static uint16\_t lv\_list\_get\_anim\_time(const lv\_obj\_t \*list)

Get scroll animation duration

**Return** duration of animation [ms]

#### **Parameters**

• list: pointer to a list object

# $\textbf{const} \ lv\_style\_t \ *\textbf{lv\_list\_get\_style} (\textbf{const} \ lv\_obj\_t \ *list, \ lv\_list\_style\_t \ type)$

Get a style of a list

Return style pointer to a style

## **Parameters**

- list: pointer to a list object
- type: which style should be get

# void lv\_list\_up(const lv\_obj\_t \*list)

Move the list elements up by one

#### **Parameters**

• list: pointer a to list object

## void lv\_list\_down(const lv\_obj\_t \*list)

Move the list elements down by one

#### **Parameters**

• list: pointer to a list object

# void lv\_list\_focus(const lv\_obj\_t \*btn, lv\_anim\_enable\_t anim)

Focus on a list button. It ensures that the button will be visible on the list.

#### **Parameters**

- btn: pointer to a list button to focus
- anim: LV\_ANOM\_ON: scroll with animation, LV\_ANIM\_OFF: without animation

## struct lv\_list\_ext\_t

#### **Public Members**

```
lv_page_ext_t page
const lv_style_t *styles_btn[_LV_BTN_STATE_NUM]
const lv_style_t *style_img
uint16_t size
uint8_t single_mode
lv_obj_t *last_sel
lv_obj_t *selected_btn
```

## Line meter (lv\_lmeter)

#### Overview

The Line Meter object consists of some radial lines which draw a scale.

#### Set value

When setting a new value with lv\_lmeter\_set\_value(lmeter, new\_value) the proportional part of the scale will be recolored.

### Range and Angles

The lv\_lmeter\_set\_range(lmeter, min, max) function sets the range of the line meter.

You can set the angle of the scale and the number of the lines by: lv\_lmeter\_set\_scale(lmeter, angle, line\_num). The default angle is 240 and the default line number is 31.

# **Styles**

The line meter uses one style which can be set by lv\_lmeter\_set\_style(lmeter, LV\_LMETER\_STYLE\_MAIN, &style). The line meter's properties are derived from the following style attributes:

- line.color "inactive line's" color which are greater then the current value
- body.main\_color "active line's" color at the beginning of the scale
- body.grad\_color "active line's" color at the end of the scale (gradient with main color)
- body.padding.hor line length
- line.width line width

The default style is lv\_style\_pretty\_color.

#### **Events**

Only the Generic events are sent by the object type.

Learn more about *Events*.

#### **Keys**

No *Keys* are processed by the object type.

Learn more about Keys.

## **Example**

C



code

```
#include "lvgl/lvgl.h"
void lv ex lmeter 1(void)
    /*Create a style for the line meter*/
    static lv_style_t style_lmeter;
    lv_style_copy(&style_lmeter, &lv_style_pretty_color);
    style_lmeter.line.width = 2;
    style lmeter.line.color = LV COLOR SILVER;
    style lmeter.body.main color = lv color hex(0x91bfed);
                                                                  /*Light blue*/
    style lmeter.body.grad color = lv color hex(0x04386c);
                                                                   /*Dark blue*/
    style lmeter.body.padding.left = 16;
                                                                   /*Line length*/
    /*Create a line meter */
    lv_obj_t * lmeter;
    lmeter = lv_lmeter_create(lv_scr_act(), NULL);
    lv_lmeter_set_range(lmeter, 0, 100);
                                                           /*Set the range*/
    lv_lmeter_set_value(lmeter, 80);
                                                           /*Set the current value*/
    lv_lmeter_set_scale(lmeter, 240, 31);
                                                           /*Set the angle and number...
→of lines*/
   lv_lmeter_set_style(lmeter, LV_LMETER_STYLE_MAIN, &style_lmeter);
→*Apply the new style*/
   lv obj set size(lmeter, 150, 150);
    lv obj align(lmeter, NULL, LV ALIGN CENTER, 0, 0);
}
```

## MicroPython

No examples yet.

#### **API**

#### **Typedefs**

```
typedef uint8_t lv_lmeter_style_t
```

#### Enums

# enum [anonymous]

Values:

LV\_LMETER\_STYLE\_MAIN

#### **Functions**

```
lv\_obj\_t *lv\_lmeter\_create(lv\_obj\_t *par, const lv\_obj\_t *copy)
```

Create a line meter objects

Return pointer to the created line meter

#### **Parameters**

- par: pointer to an object, it will be the parent of the new line meter
- copy: pointer to a line meter object, if not NULL then the new object will be copied from it

```
void lv_lmeter_set_value(lv_obj_t *lmeter, int16_t value)
```

Set a new value on the line meter

#### **Parameters**

- lmeter: pointer to a line meter object
- value: new value

# void lv\_lmeter\_set\_range(lv\_obj\_t \*lmeter, int16\_t min, int16\_t max)

Set minimum and the maximum values of a line meter

#### **Parameters**

- lmeter: pointer to he line meter object
- min: minimum value
- max: maximum value

## void lv\_lmeter\_set\_scale(lv\_obj\_t \*lmeter, uint16\_t angle, uint8\_t line\_cnt)

Set the scale settings of a line meter

## **Parameters**

- lmeter: pointer to a line meter object
- angle: angle of the scale (0..360)
- line\_cnt: number of lines

#### **Parameters**

- lmeter: pointer to a line meter object
- type: which style should be set (can be only LV\_LMETER\_STYLE\_MAIN)
- style: set the style of the line meter

# $int16\_t$ lv\_lmeter\_get\_value(const $lv\_obj\_t$ \*lmeter)

Get the value of a line meter

Return the value of the line meter

#### **Parameters**

• lmeter: pointer to a line meter object

# int16\_t lv\_lmeter\_get\_min\_value(const lv\_obj\_t \*lmeter)

Get the minimum value of a line meter

**Return** the minimum value of the line meter

#### **Parameters**

• lmeter: pointer to a line meter object

# int16\_t lv\_lmeter\_get\_max\_value(const lv\_obj\_t \*lmeter)

Get the maximum value of a line meter

Return the maximum value of the line meter

#### **Parameters**

• lmeter: pointer to a line meter object

## uint8 t lv lmeter get line count(const lv\_obj\_t\*lmeter)

Get the scale number of a line meter

Return number of the scale units

## **Parameters**

• lmeter: pointer to a line meter object

# uint16\_t lv\_lmeter\_get\_scale\_angle(const lv\_obj\_t \*lmeter)

Get the scale angle of a line meter

Return angle of the scale

#### **Parameters**

• lmeter: pointer to a line meter object

# 

Get the style of a line meter

Return pointer to the line meter's style

#### **Parameters**

- lmeter: pointer to a line meter object
- type: which style should be get (can be only LV\_LMETER\_STYLE\_MAIN)

# struct lv\_lmeter\_ext\_t

#### **Public Members**

```
uint16_t scale_angle
uint8_t line_cnt
int16_t cur_value
int16_t min_value
int16_t max_value
```

## Message box (Iv\_mbox)

#### Overview

The Message boxes act as pop-ups. They are built from a background Container, a Label and a Button matrix for buttons.

The text will be broken into multiple lines automatically (has LV\_LABEL\_LONG\_MODE\_BREAK) and the height will be set automatically to involve the text and the buttons (LV FIT TIGHT auto fit vertically)-

#### Set text

To set the text use the lv mbox set text(mbox, "My text") function.

#### Add buttons

To add buttons use the  $lv_mbox_add_btns(mbox, btn_str)$  function. You need specify the button's text like const char \*  $btn_str[] = {"Apply", "Close", ""}$ . For more information visit the Button matrix documentation.

## **Auto-close**

With  $lv\_mbox\_start\_auto\_close(mbox, delay)$  the message box can be closed automatically after delay milliseconds with an animation. The  $lv\_mbox\_stop\_auto\_close(mbox)$  function stops a started auto close.

The duration of the close animation can be set by lv mbox set anim time(mbox, anim time).

## **Styles**

Use lv\_mbox\_set\_style(mbox, Lv\_MBOX\_STYLE\_..., &style) to set a new style for an element of the Message box:

- LV\_MBOX\_STYLE\_BG specifies the background container's style. style.body sets the background and style.label sets the text appearance. Default: lv style pretty
- LV\_MBOX\_STYLE\_BTN\_BG style of the Button matrix background. Default: lv\_style\_trans
- LV\_MBOX\_STYLE\_BTN\_REL style of the released buttons. Default: lv style btn rel
- LV\_MBOX\_STYLE\_BTN\_PR style of the pressed buttons. Default: lv\_style\_btn\_pr

- LV\_MBOX\_STYLE\_BTN\_TGL\_REL style of the toggled released buttons. Default: lv style btn tgl rel
- $\bullet$  LV\_MBOX\_STYLE\_BTN\_TGL\_PR style of the toggled pressed buttons. Default: lv\_style\_btn\_tgl\_pr
- LV\_MBOX\_STYLE\_BTN\_INA style of the inactive buttons. Default: lv style btn ina

The height of the button area comes from  $font\ height\ +\ padding.top\ +\ padding.bottom$  of LV\_MBOX\_STYLE\_BTN\_REL.

#### **Events**

Besides the Generic events the following Special events are sent by the Message boxes:

• LV\_EVENT\_VALUE\_CHANGED sent when the button is clicked. The event data is set to ID of the clicked button.

The Message box has a default event callback which closes itself when a button is clicked.

Learn more about *Events*.

##Keys


The following *Keys* are processed by the Buttons:

- LV\_KEY\_RIGHT/DOWN Select the next button
- LV\_KEY\_LEFT/TOP Select the previous button
- LV\_KEY\_ENTER Clicks the selected button

Learn more about Keys.

## **Example**

C

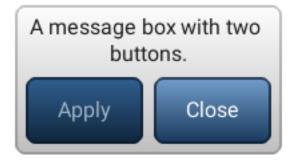

code

```
#include "lvgl/lvgl.h"
#include <stdio.h>
static void event_handler(lv_obj_t * obj, lv_event_t event)
    if(event == LV_EVENT_VALUE_CHANGED) {
        printf("Button: %s\n", lv_mbox_get_active_btn_text(obj));
    }
}
void lv_ex_mbox_1(void)
    static const char * btns[] ={"Apply", "Close", ""};
    lv_obj_t * mbox1 = lv_mbox_create(lv_scr_act(), NULL);
    lv_mbox_set_text(mbox1, "A message box with two buttons.");
    lv_mbox_add_btns(mbox1, btns);
    lv_obj_set_width(mbox1, 200);
    lv_obj_set_event_cb(mbox1, event_handler);
    lv_obj_align(mbox1, NULL, LV_ALIGN_CENTER, 0, 0); /*Align to the corner*/
}
```



code

(continues on next page)

(continued from previous page)

```
#include "lvgl/lvgl.h"
/********
* STATIC PROTOTYPES
********************
static void mbox_event_cb(lv_obj_t *obj, lv_event_t evt);
static void btn_event_cb(lv_obj_t *btn, lv_event_t evt);
/*********
* STATIC VARIABLES
*****************
static lv_obj_t *mbox, *info;
static const char welcome_info[] = "Welcome to the modal message box demo!\n"
                                  "Press the button to display a message box.";
static const char in_msg_info[] = "Notice that you cannot touch "
                                 "the button again while the message box is open.";
/********
    GLOBAL FUNCTIONS
*****************
void lv_ex_mbox_2(void)
       /* Create a button, then set its position and event callback */
       lv_obj_t *btn = lv_btn_create(lv_scr_act(), NULL);
       lv obj set size(btn, 200, 60);
       lv_obj_set_event_cb(btn, btn_event_cb);
       lv_obj_align(btn, NULL, LV_ALIGN_IN_TOP_LEFT, 20, 20);
       /* Create a label on the button */
       lv obj t *label = lv label create(btn, NULL);
       lv_label_set_text(label, "Display a message box!");
       /* Create an informative label on the screen */
       info = lv_label_create(lv_scr_act(), NULL);
       lv_label_set_text(info, welcome_info);
       lv_label_set_long_mode(info, LV_LABEL_LONG_BREAK); /* Make sure text will__
→wrap */
       lv obj set width(info, LV HOR RES - 10);
       lv_obj_align(info, NULL, LV_ALIGN_IN_BOTTOM_LEFT, 5, -5);
}
/*************
* STATIC FUNCTIONS
********************
static void mbox_event_cb(lv_obj_t *obj, lv_event_t evt)
       if(evt == LV_EVENT_DELETE && obj == mbox) {
               /* Delete the parent modal background */
```

(continues on next page)

(continued from previous page)

```
lv_obj_del_async(lv_obj_get_parent(mbox));
                mbox = NULL; /* happens before object is actually deleted! */
                lv_label_set_text(info, welcome_info);
        } else if(evt == LV_EVENT_VALUE_CHANGED) {
                /* A button was clicked */
                lv mbox start auto close(mbox, 0);
        }
}
static void btn_event_cb(lv_obj_t *btn, lv_event_t evt)
        if(evt == LV EVENT CLICKED) {
                static lv style t modal style;
                /* Create a full-screen background */
                lv_style_copy(&modal_style, &lv_style_plain_color);
                /* Set the background's style */
                modal style.body.main color = modal style.body.grad color = LV COLOR
→BLACK;
                modal style.body.opa = LV OPA 50;
                /* Create a base object for the modal background */
                lv_obj_t *obj = lv_obj_create(lv_scr_act(), NULL);
                lv_obj_set_style(obj, &modal_style);
                lv obj set pos(obj, 0, 0);
                lv obj set size(obj, LV HOR RES, LV VER RES);
                lv_obj_set_opa_scale_enable(obj, true); /* Enable opacity scaling for_
→the animation */
                static const char * btns2[] = {"Ok", "Cancel", ""};
                /* Create the message box as a child of the modal background */
                mbox = lv mbox create(obj, NULL);
                lv_mbox_add_btns(mbox, btns2);
                lv_mbox_set_text(mbox, "Hello world!");
                lv obj align(mbox, NULL, LV ALIGN CENTER, 0, 0);
                lv_obj_set_event_cb(mbox, mbox_event_cb);
                /* Fade the message box in with an animation */
                lv anim t a;
                lv anim init(\&a);
                lv anim set time(\&a, 500, 0);
                lv anim set values(&a, LV OPA TRANSP, LV OPA COVER);
                lv anim set exec cb(\&a, obj, (lv anim exec xcb t)lv obj set opa

    scale);
                lv anim create(\&a);
                lv_label_set_text(info, in_msg_info);
            lv obj align(info, NULL, LV ALIGN IN BOTTOM LEFT, 5, -5);
        }
}
```

## MicroPython

No examples yet.

## **API**

## **Typedefs**

```
typedef uint8_t lv_mbox_style_t
```

#### **Enums**

## enum [anonymous]

Message box styles.

Values:

LV\_MBOX\_STYLE\_BG

LV MBOX STYLE BTN BG

Same meaning as ordinary button styles.

LV\_MBOX\_STYLE\_BTN\_REL

LV\_MBOX\_STYLE\_BTN\_PR

LV\_MBOX\_STYLE\_BTN\_TGL\_REL

LV\_MBOX\_STYLE\_BTN\_TGL\_PR

LV\_MBOX\_STYLE\_BTN\_INA

## **Functions**

```
lv\_obj\_t *lv\_mbox\_create(lv\_obj\_t *par, const lv\_obj\_t *copy)
```

Create a message box objects

Return pointer to the created message box

#### **Parameters**

- par: pointer to an object, it will be the parent of the new message box
- copy: pointer to a message box object, if not NULL then the new object will be copied from it

```
void lv mbox add btns(lv_obj_t*mbox, const char **btn_mapaction)
```

Add button to the message box

#### **Parameters**

- mbox: pointer to message box object
- btn\_map: button descriptor (button matrix map). E.g. a const char \*txt[] = {"ok", "close", ""} (Can not be local variable)

```
void lv_mbox_set_text(lv_obj_t *mbox, const char *txt)
```

Set the text of the message box

#### **Parameters**

- mbox: pointer to a message box
- txt: a '\0' terminated character string which will be the message box text

# void lv\_mbox\_set\_anim\_time(lv\_obj\_t \*mbox, uint16\_t anim\_time)

Set animation duration

## **Parameters**

- mbox: pointer to a message box object
- anim\_time: animation length in milliseconds (0: no animation)

## void lv\_mbox\_start\_auto\_close(lv\_obj\_t \*mbox, uint16\_t delay)

Automatically delete the message box after a given time

#### **Parameters**

- mbox: pointer to a message box object
- delay: a time (in milliseconds) to wait before delete the message box

## void lv mbox stop auto close(lv\_obj\_t\*mbox)

Stop the auto. closing of message box

#### **Parameters**

• mbox: pointer to a message box object

# ${\tt void} \ \textbf{lv\_mbox\_set\_style} (\textit{lv\_obj\_t} * \textit{mbox}, \textit{lv\_mbox\_style\_t} \ \textit{type}, \ \textbf{const} \ \textit{lv\_style\_t} \ * \textit{style})$

Set a style of a message box

#### **Parameters**

- mbox: pointer to a message box object
- type: which style should be set
- style: pointer to a style

# void lv\_mbox\_set\_recolor(lv\_obj\_t \*mbox, bool en)

Set whether recoloring is enabled. Must be called after lv mbox add btns.

## Parameters

- btnm: pointer to button matrix object
- en: whether recoloring is enabled

## const char \*lv\_mbox\_get\_text(const lv\_obj\_t \*mbox)

Get the text of the message box

Return pointer to the text of the message box

#### **Parameters**

mbox: pointer to a message box object

## uint16 t lv mbox get active btn(lv obj t\*mbox)

Get the index of the lastly "activated" button by the user (pressed, released etc) Useful in the the event cb.

Return index of the last released button (LV BTNM BTN NONE: if unset)

#### **Parameters**

• btnm: pointer to button matrix object

## const char \*lv mbox get active btn text( $lv\_obj\_t*mbox$ )

Get the text of the lastly "activated" button by the user (pressed, released etc) Useful in the the  ${\tt event\_cb}$ .

Return text of the last released button (NULL: if unset)

#### **Parameters**

• btnm: pointer to button matrix object

# uint16\_t lv\_mbox\_get\_anim\_time(const lv\_obj\_t \*mbox)

Get the animation duration (close animation time)

Return animation length in milliseconds (0: no animation)

#### **Parameters**

• mbox: pointer to a message box object

# ${\tt const} \ {\tt lv\_style\_t} \ {\tt *lv\_mbox\_get\_style} ({\tt const} \ {\tt lv\_obj\_t} \ {\tt *mbox}, \ {\tt lv\_mbox\_style\_t} \ {\tt type})$

Get a style of a message box

Return style pointer to a style

#### **Parameters**

- mbox: pointer to a message box object
- type: which style should be get

# bool lv\_mbox\_get\_recolor(const lv\_obj\_t \*mbox)

Get whether recoloring is enabled

Return whether recoloring is enabled

## **Parameters**

• mbox: pointer to a message box object

$$lv\_obj\_t *lv\_mbox\_get\_btnm(lv\_obj\_t *mbox)$$

Get message box button matrix

Return pointer to button matrix object

Remark return value will be NULL unless lv\_mbox\_add\_btns has been already called

#### **Parameters**

• mbox: pointer to a message box object

## struct lv\_mbox\_ext\_t

#### **Public Members**

```
\begin{array}{l} lv\_cont\_ext\_t \ \ \mathbf{bg} \\ \\ lv\_obj\_t \ ^*\mathbf{text} \\ \\ lv\_obj\_t \ ^*\mathbf{btnm} \\ \\ \\ \mathbf{uint} 16\_t \ \mathbf{anim\_time} \end{array}
```

## Page (Iv\_page)

# Overview

The Page consist of two *Containers* on each other:

- a background (or base)
- a top which is **scrollable**.

The background object can be referenced as the page itself like: lv obj set width(page, 100).

If you create a child on the page it will be automatically moved to the scrollable container. If the scrollable container becomes larger than the background it can be \*scrolled by dragging (like the lists on smartphones).

By default, the scrollable's has LV\_FIT\_FILLauto fit in all directions. It means the scrollable size will be the same as the background's size (minus the paddings) while the children are in the background. But when an object is positioned out of the background the scrollable size will be increased to involve it.

#### **Scrollbars**

Scrollbars can be shown according to four policies:

- LV\_SB\_MODE\_OFF Never show scrollbars
- LV\_SB\_MODE\_ON Always show scrollbars
- LV\_SB\_MODE\_DRAG Show scrollbars when the page is being dragged
- $\bullet \ \ LV\_SB\_MODE\_AUTO \ Show \ scrollbars \ when \ the \ scrollable \ container \ is \ large \ enough \ to \ be \ scrolled$

You can set scroll bar show policy by:  $lv_page_set_sb_mode(page, SB_MODE)$ . The default value is  $LV_set_sb_mode(page, SB_MODE)$ .

# Glue object

You can glue children to the page. In this case, you can scroll the page by dragging the child object. It can be enabled by the <code>lv\_page\_glue\_obj(child, true)</code>.

#### Focus object

You can focus on an object on a page with <code>lv\_page\_focus(page, child, LV\_ANIM\_ONO/FF)</code>. It will move the scrollable container to show a child. The time of the animation can be set by <code>lv page set anim time(page, anim time)</code> in milliseconds.

#### Manual navigation

You can move the scrollable object manually using lv\_page\_scroll\_hor(page, dist) and lv page scroll ver(page, dist)

## Edge flash

A circle-like effect can be shown if the list reached the most top/bottom/left/right position. lv\_page\_set\_edge\_flash(list, en) enables this feature.

# **Scroll propagation**

If the list is created on an other scrollable element (like an other page) and the Page can't be scrolled further the scrolling can be propagated to the parent to continue the scrolling on the parent. It can be enabled with lv\_page\_set\_scroll\_propagation(list, true)

## Scrollable API

There are functions to directly set/get the scrollable's attributes:

- lv\_page\_get\_scrl()
- lv\_page\_set\_scrl\_fit/fint2/fit4()
- lv page set scrl width()
- lv page set scrl height()
- lv page set scrl layout()

#### **Notes**

The background draws its border when the scrollable is drawn. It ensures that the page always will have a closed shape even if the scrollable has the same color as the Page's parent.

## **Styles**

Use lv\_page\_set\_style(page, LV\_PAGE\_STYLE\_..., &style) to set a new style for an element of the page:

- LV\_PAGE\_STYLE\_BG background's style which uses all style.body properties (default: lv\_style\_pretty\_color)
- LV\_PAGE\_STYLE\_SCRL scrollable's style which uses all style.body properties (default: lv style pretty)
- LV\_PAGE\_STYLE\_SB scrollbar's style which uses all style.body properties. padding. right/bottom sets horizontal and vertical the scrollbars' padding respectively and the padding. inner sets the scrollbar's width. (default: lv\_style\_pretty\_color)

## **Events**

Only the Generic events are sent by the object type.

scrollable object has default event callback follow- $\mathbf{a}$ which propagates the LV EVENT PRESSED. ing events to the background object: LV EVENT PRESSING. LV EVENT PRESS LOST, LV EVENT RELEASED, LV EVENT SHORT CLICKED, LV EVENT CLICKED, LV\_EVENT\_LONG\_PRESSED, LV\_EVENT\_LONG\_PRESSED\_REPEAT

Learn more about Events.

##Keys


The following *Keys* are processed by the Page:

• LV\_KEY\_RIGHT/LEFT/UP/DOWN Scroll the page

Learn more about Keys.

## **Example**

C

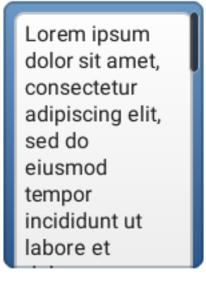

code

```
#include "lvgl/lvgl.h"
void lv_ex_page_1(void)
    /*Create a scroll bar style*/
    static lv style t style sb;
    lv_style_copy(&style_sb, &lv_style_plain);
    style_sb.body.main_color = LV_COLOR_BLACK;
    style_sb.body.grad_color = LV_COLOR_BLACK;
    style_sb.body.border.color = LV_COLOR_WHITE;
    style sb.body.border.width = 1;
    style sb.body.border.opa = LV OPA 70;
    style_sb.body.radius = LV_RADIUS_CIRCLE;
    style sb.body.opa = LV OPA 60;
    style_sb.body.padding.right = 3;
    style sb.body.padding.bottom = 3;
                                            /*Scrollbar width*/
    style_sb.body.padding.inner = 8;
    /*Create a page*/
    lv_obj_t * page = lv_page_create(lv_scr_act(), NULL);
    lv_obj_set_size(page, 150, 200);
    lv_obj_align(page, NULL, LV_ALIGN_CENTER, 0, 0);
    lv_page_set_style(page, LV_PAGE_STYLE_SB, &style_sb);
                                                                      /*Set the...
→scrollbar style*/
    /*Create a label on the page*/
    lv obj t * label = lv label create(page, NULL);
    lv label set long mode(label, LV LABEL LONG BREAK);
                                                                     /*Automatically...
 <del>∍break long lines*/</del>
                                                                        (continues on next page)
```

(continued from previous page)

```
lv_obj_set_width(label, lv_page_get_fit_width(page));
                                                                    /*Set the label...
→width to max value to not show hor. scroll bars*/
    lv_label_set_text(label, "Lorem ipsum dolor sit amet, consectetur adipiscing elit,
\hookrightarrow \ n''
                             "sed do eiusmod tempor incididunt ut labore et dolore,
⊸magna aliqua.\n"
                             "Ut enim ad minim veniam, quis nostrud exercitation,
→ullamco\n"
                             "laboris nisi ut aliquip ex ea commodo consequat. Duis
→aute irure\n"
                             "dolor in reprehenderit in voluptate velit esse cillum,
-dolore\n"
                             "eu fugiat nulla pariatur.\n"
                             "Excepteur sint occaecat cupidatat non proident, sunt in_
"qui officia deserunt mollit anim id est laborum.");
}
```

## MicroPython

No examples yet.

#### API

#### **Typedefs**

```
typedef uint8_t lv_sb_mode_t
typedef uint8_t lv_page_edge_t
typedef uint8_t lv_page_style_t
```

## **Enums**

## enum [anonymous]

Scrollbar modes: shows when should the scrollbars be visible

Values:

**LV\_SB\_MODE\_ON** = 0x1Always show scrollbars

LV SB MODE DRAG =0x2

Show scrollbars when page is being dragged

LV SB MODE AUTO = 0x3

Show scrollbars when the scrollable container is large enough to be scrolled

 $\textbf{LV\_SB\_MODE\_HIDE} = 0x4$ 

Hide the scroll bar temporally

## LV SB MODE UNHIDE =0x5

Unhide the previously hidden scrollbar. Recover it's type too

#### enum [anonymous]

Edges: describes the four edges of the page

Values:

LV\_PAGE\_EDGE\_LEFT = 0x1LV\_PAGE\_EDGE\_TOP = 0x2LV\_PAGE\_EDGE\_RIGHT = 0x4LV\_PAGE\_EDGE\_BOTTOM = 0x8

# enum [anonymous]

Values:

LV\_PAGE\_STYLE\_BG
LV\_PAGE\_STYLE\_SCRL
LV\_PAGE\_STYLE\_SB
LV\_PAGE\_STYLE\_EDGE\_FLASH

#### **Functions**

$$lv\_obj\_t *lv\_page\_create(lv\_obj\_t *par, const lv\_obj\_t *copy)$$

Create a page objects

Return pointer to the created page

## **Parameters**

- par: pointer to an object, it will be the parent of the new page
- copy: pointer to a page object, if not NULL then the new object will be copied from it

# void lv page clean(lv\_obj\_t\*obj)

Delete all children of the scrl object, without deleting scrl child.

#### **Parameters**

• **obj**: pointer to an object

# lv\_obj\_t \*lv\_page\_get\_scrl(const lv\_obj\_t \*page)

Get the scrollable object of a page

**Return** pointer to a container which is the scrollable part of the page

## **Parameters**

• page: pointer to a page object

## uint16\_t lv\_page\_get\_anim\_time(const lv\_obj\_t \*page)

Get the animation time

**Return** the animation time in milliseconds

## **Parameters**

• page: pointer to a page object

```
\label{eq:condition} \mbox{void $ \textbf{lv}_{a}$-page\_set\_sb\_mode($lv\_obj\_t$ *page, $lv\_sb\_mode\_t$ sb\_mode) }
```

Set the scroll bar mode on a page

#### **Parameters**

- page: pointer to a page object
- **sb\_mode**: the new mode from 'lv\_page\_sb.mode\_t' enum

# void $lv_page_set_anim_time(lv_obj_t*page, uint16_t anim_time)$

Set the animation time for the page

#### **Parameters**

- page: pointer to a page object
- anim time: animation time in milliseconds

# void lv\_page\_set\_scroll\_propagation(lv\_obj\_t \*page, bool en)

Enable the scroll propagation feature. If enabled then the page will move its parent if there is no more space to scroll.

#### **Parameters**

- page: pointer to a Page
- en: true or false to enable/disable scroll propagation

# void $lv_page_set_edge_flash(lv_obj_t *page, bool en)$

Enable the edge flash effect. (Show an arc when the an edge is reached)

#### **Parameters**

- page: pointer to a Page
- en: true or false to enable/disable end flash

# 

Set the fit policy in all 4 directions separately. It tell how to change the page size automatically.

## Parameters

- page: pointer to a page object
- left: left fit policy from lv fit t
- right: right fit policy from lv fit t
- top: bottom fit policy from lv fit t
- bottom: bottom fit policy from lv fit t

# $\textbf{static} \ \operatorname{void} \ \textbf{lv\_page\_set\_scrl\_fit2} ( \textit{lv\_obj\_t *page}, \textit{lv\_fit\_t hor}, \textit{lv\_fit\_t ver})$

Set the fit policy horizontally and vertically separately. It tell how to change the page size automatically.

#### **Parameters**

- page: pointer to a page object
- hot: horizontal fit policy from lv fit t
- ver: vertical fit policy from lv\_fit\_t

## **static** void **lv\_page\_set\_scrl\_fit**(lv\_obj\_t \*page, lv\_fit\_t fit)

Set the fit policyin all 4 direction at once. It tell how to change the page size automatically.

#### **Parameters**

- page: pointer to a button object
- fit: fit policy from lv fit t

# static void lv\_page\_set\_scrl\_width(lv\_obj\_t \*page, lv\_coord\_t w)

Set width of the scrollable part of a page

#### **Parameters**

- page: pointer to a page object
- W: the new width of the scrollable (it has no effect is horizontal fit is enabled)

## static void lv page set scrl height(lv obj t\*page, lv coord t h)

Set height of the scrollable part of a page

## **Parameters**

- page: pointer to a page object
- h: the new height of the scrollable (it has no effect is vertical fit is enabled)

# static void lv\_page\_set\_scrl\_layout(lv\_obj\_t \*page, lv\_layout\_t layout)

Set the layout of the scrollable part of the page

## **Parameters**

- page: pointer to a page object
- layout: a layout from 'lv\_cont\_layout\_t'

#### **Parameters**

- page: pointer to a page object
- type: which style should be set
- style: pointer to a style

## lv sb mode t lv page get sb mode(const lv\_obj\_t \*page)

Set the scroll bar mode on a page

Return the mode from 'lv page sb.mode t' enum

# Parameters

• page: pointer to a page object

# bool $lv_page_get_scroll_propagation(lv_obj_t*page)$

Get the scroll propagation property

Return true or false

#### **Parameters**

• page: pointer to a Page

## bool lv page get edge flash(lv\_obj\_t\*page)

Get the edge flash effect property.

#### **Parameters**

• page: pointer to a Page return true or false

## lv\_coord\_t lv\_page\_get\_fit\_width(lv\_obj\_t \*page)

Get that width which can be set to the children to still not cause overflow (show scrollbars)

Return the width which still fits into the page

#### **Parameters**

• page: pointer to a page object

# lv\_coord\_t lv\_page\_get\_fit\_height(lv\_obj\_t \*page)

Get that height which can be set to the children to still not cause overflow (show scrollbars)

**Return** the height which still fits into the page

## **Parameters**

• page: pointer to a page object

# static lv\_coord\_t lv\_page\_get\_scrl\_width(const lv\_obj\_t \*page)

Get width of the scrollable part of a page

Return the width of the scrollable

#### **Parameters**

• page: pointer to a page object

# static lv\_coord\_t lv\_page\_get\_scrl\_height(const lv\_obj\_t \*page)

Get height of the scrollable part of a page

Return the height of the scrollable

#### **Parameters**

• page: pointer to a page object

# static lv\_layout\_t lv\_page\_get\_scrl\_layout(const lv\_obj\_t \*page)

Get the layout of the scrollable part of a page

**Return** the layout from 'lv\_cont\_layout\_t'

#### **Parameters**

• page: pointer to page object

# $\textbf{static} \ \textit{lv\_fit\_t} \ \textbf{lv\_page\_get\_scrl\_fit\_left(const} \ \textit{lv\_obj\_t*page)}$

Get the left fit mode

Return an element of lv\_fit\_t

## **Parameters**

• page: pointer to a page object

# static lv\_fit\_t lv\_page\_get\_scrl\_fit\_right(const lv\_obj\_t \*page)

Get the right fit mode

Return an element of lv\_fit\_t

## **Parameters**

• page: pointer to a page object

# static lv\_fit\_t lv\_page\_get\_scrl\_fit\_top(const lv\_obj\_t \*page)

Get the top fit mode

Return an element of lv\_fit\_t

#### **Parameters**

• page: pointer to a page object

# static lv\_fit\_t lv page get scrl fit bottom(const lv\_obj\_t \*page)

Get the bottom fit mode

Return an element of lv fit t

#### **Parameters**

• page: pointer to a page object

# $\verb|const| lv_style_t *lv_page_get_style| (\verb|const| lv_obj_t *page, lv_page_style_t type|)|$

Get a style of a page

Return style pointer to a style

## **Parameters**

- page: pointer to page object
- type: which style should be get

# bool lv\_page\_on\_edge(lv\_obj\_t \*page, lv\_page\_edge\_t edge)

Find whether the page has been scrolled to a certain edge.

 ${\bf Return}\;\;{\bf true}\;{\bf if}\;{\bf the}\;{\bf page}\;{\bf is}\;{\bf on}\;{\bf the}\;{\bf specified}\;{\bf edge}$ 

## **Parameters**

- page: Page object
- edge: Edge to check

# void lv\_page\_glue\_obj (lv\_obj\_t \*obj, bool glue)

Glue the object to the page. After it the page can be moved (dragged) with this object too.

## **Parameters**

- **obj**: pointer to an object on a page
- glue: true: enable glue, false: disable glue

# $\label{eq:void_lv_page_focus(lv_obj_t*page, const} \ lv\_obj\_t*obj\_t*obj\_t*obj\_t*obj\_t*obj\_t*anim\_enable\_t \ anim\_en)$

Focus on an object. It ensures that the object will be visible on the page.

#### **Parameters**

- page: pointer to a page object
- **obj**: pointer to an object to focus (must be on the page)
- anim\_en: LV\_ANIM\_ON to focus with animation; LV\_ANIM\_OFF to focus without animation

# void lv\_page\_scroll\_hor(lv\_obj\_t \*page, lv\_coord\_t dist)

Scroll the page horizontally

#### **Parameters**

- page: pointer to a page object
- **dist**: the distance to scroll (< 0: scroll left; > 0 scroll right)

# void lv\_page\_scroll\_ver(lv\_obj\_t \*page, lv\_coord\_t dist)

Scroll the page vertically

## **Parameters**

- page: pointer to a page object
- **dist**: the distance to scroll (< 0: scroll down; > 0 scroll up)

# void lv\_page\_start\_edge\_flash(lv\_obj\_t \*page)

Not intended to use directly by the user but by other object types internally. Start an edge flash animation. Exactly one ext->edge flash.xxx ip should be set

## **Parameters**

• page:

```
struct lv_page_ext_t
```

## **Public Members**

```
lv_cont_ext_t bg
lv\_obj\_t *scrl
const lv_style_t *style
lv_area_t hor_area
lv_area_t ver_area
uint8 t hor draw
uint8_t ver_draw
lv\_sb\_mode\_t \ \mathbf{mode}
struct lv_page_ext_t::[anonymous] sb
lv_anim_value_t state
uint8\_t enabled
uint8_t top_ip
uint8_t bottom_ip
uint8_t right_ip
uint8_t left_ip
struct lv_page_ext_t::[anonymous] edge_flash
uint16 t anim time
uint8 t scroll prop
uint8_t scroll_prop_ip
```

## Preloader (lv\_preload)

## **Overview**

The preloader object is a spinning arc over a border.

# Arc length

The length of the arc can be adjusted by lv\_preload\_set\_arc\_length(preload, deg).

# Spinning speed

The speed of the spinning can be adjusted by lv preload set spin time(preload, time ms).

## Spin types

You can choose from more spin types:

- LV\_PRELOAD\_TYPE\_FILLSPIN\_ARC spin the arc, slow down on the top but also stretch the arc

To apply one if them use lv preload set type(preload, LV PRELOAD TYPE ...)

# Spin direction

The direction of spinning can be changed with lv\_preload\_set\_dir(preload, LV\_PRELOAD\_DIR\_FORWARD/BACKWARD).

# **Styles**

You can set the styles with lv\_preload\_set\_style(btn, LV\_PRELOAD\_STYLE\_MAIN, &style). It describes both the arc and the border style:

- arc is described by the line properties
- border is described by the body.border properties including body.padding.left/top (the smaller is used) to give a smaller radius for the border.

## **Events**

Only the Generic events are sent by the object type.

# **Keys**

No *Keys* are processed by the object type.

Learn more about Keys.

# **Example**

C



code

```
#include "lvgl/lvgl.h"
void lv_ex_preload_1(void)
    /*Create a style for the Preloader*/
    static lv_style_t style;
    lv_style_copy(&style, &lv_style_plain);
    style.line.width = 10;
                                                   /*10 px thick arc*/
                                                   /*Blueish arc color*/
    style.line.color = lv_color_hex3(0x258);
    style.body.border.color = lv_color_hex3(0xBBB); /*Gray background color*/
    style.body.border.width = 10;
    style.body.padding.left = 0;
   /*Create a Preloader object*/
    lv_obj_t * preload = lv_preload_create(lv_scr_act(), NULL);
    lv_obj_set_size(preload, 100, 100);
    lv_obj_align(preload, NULL, LV_ALIGN_CENTER, 0, 0);
    lv_preload_set_style(preload, LV_PRELOAD_STYLE_MAIN, &style);
```

## **MicroPython**

No examples yet.

# MicroPython

No examples yet.

## **API**

# **Typedefs**

```
typedef uint8_t lv_preload_type_t
typedef uint8_t lv_preload_dir_t
typedef uint8 t lv preload style t
```

## **Enums**

# **enum** [anonymous]

Type of preloader.

Values:

LV\_PRELOAD\_TYPE\_SPINNING\_ARC
LV\_PRELOAD\_TYPE\_FILLSPIN\_ARC

## enum [anonymous]

Direction the preloader should spin.

Values:

LV\_PRELOAD\_DIR\_FORWARD
LV\_PRELOAD\_DIR\_BACKWARD

# enum [anonymous]

Values:

LV\_PRELOAD\_STYLE\_MAIN

## **Functions**

```
lv\_obj\_t *lv\_preload\_create(lv\_obj\_t *par, const lv\_obj\_t *copy)
```

Create a pre loader objects

**Return** pointer to the created pre loader

# Parameters

- par: pointer to an object, it will be the parent of the new pre loader
- COPY: pointer to a pre loader object, if not NULL then the new object will be copied from it

```
void lv_preload_set_arc_length(lv_obj_t*preload, lv_anim_value_t deg)
```

Set the length of the spinning arc in degrees

- preload: pointer to a preload object
- deg: length of the arc

# void lv\_preload\_set\_spin\_time(lv\_obj\_t \*preload, uint16\_t time)

Set the spin time of the arc

#### **Parameters**

- preload: pointer to a preload object
- time: time of one round in milliseconds

# $\label{eq:const_void_lv_preload_style} $$ \text{void} \ \textbf{lv\_preload\_style\_t} \ \ type, \ \ \textbf{const} \ \ \textbf{lv\_style\_t} \\ *style) $$$

Set a style of a pre loader.

#### **Parameters**

- preload: pointer to pre loader object
- type: which style should be set
- style: pointer to a style

# $\label{eq:cond_set_type} \mbox{void $lv\_preload\_type\_t type} \mbox{)} \mbox{$lv\_preload\_type\_t type} \mbox{)}$

Set the animation type of a preloader.

## **Parameters**

- preload: pointer to pre loader object
- type: animation type of the preload

# void lv\_preload\_set\_dir(lv\_obj\_t \*preload, lv\_preload\_dir\_t dir)

Set the animation direction of a preloader

## **Parameters**

- preload: pointer to pre loader object
- direction: animation direction of the preload

# $lv\_anim\_value\_t$ lv\_preload\_get\_arc\_length(const $lv\_obj\_t$ \*preload)

Get the arc length [degree] of the a pre loader

#### **Parameters**

• preload: pointer to a pre loader object

# uint16 t lv preload get spin time(const lv\_obj\_t \*preload)

Get the spin time of the arc

# **Parameters**

• preload: pointer to a pre loader object [milliseconds]

# const lv\_style\_t \*lv\_preload\_get\_style(const lv\_obj\_t \*preload, lv\_preload\_style\_t type) Get style of a pre loader.

Return style pointer to the style

## Parameters

- preload: pointer to pre loader object
- type: which style should be get

# lv\_preload\_type\_t lv\_preload\_get\_type(lv\_obj\_t\*preload)

Get the animation type of a preloader.

Return animation type

## **Parameters**

• preload: pointer to pre loader object

```
lv_preload_dir_t lv_preload_get_dir(lv_obj_t *preload)
```

Get the animation direction of a preloader

Return animation direction

#### **Parameters**

• preload: pointer to pre loader object

# void lv\_preload\_spinner\_anim(void \*ptr, lv\_anim\_value\_t val)

Animator function (exec\_cb) to rotate the arc of spinner.

#### **Parameters**

- ptr: pointer to preloader
- val: the current desired value [0..360]

# struct lv\_preload\_ext\_t

## **Public Members**

```
lv_arc_ext_t arc
lv_anim_value_t arc_length
uint16_t time
lv_preload_type_t anim_type
lv_preload_dir_t anim_dir
```

# Roller (lv\_roller)

## Overview

Roller allows you to simply select one option from more with scrolling. Its functionalities are similar to Drop down list.

## Set options

The options are passed to the Roller as a string with  $lv\_roller\_set\_options(roller, options, LV\_ROLLER\_MODE\_NORMAL/INFINITE)$ . The options should be separated by  $\n$ . For example: "First\nSecond\nThird".

LV ROLLER MODE INIFINITE make the roller circular.

You can select an option manually with lv\_roller\_set\_selected(roller, id), where *id* is the index of an option.

# Get selected option

The get the currently selected option use lv\_roller\_get\_selected(roller) it will return the *index* of the selected option.

lv\_roller\_get\_selected\_str(roller, buf, buf\_size) copy the name of the selected option to buf.

# Align the options

To align the label horizontally use lv\_roller\_set\_align(roller, LV\_LABEL\_ALIGN\_LEFT/CENTER/RIGHT).

## Height and width

You can set the number of visible rows with lv\_roller\_set\_visible\_row\_count(roller, num)

The width is adjusted automatically according to the width of the options. To prevent this apply lv roller set fix width(roller, width). 0 means to use auto width.

## **Animation time**

When the Roller is scrolled and doesn't stop exactly on an option it will scroll to the nearest valid option automatically. The time of this scroll animation can be changed by <code>lv\_roller\_set\_anim\_time(roller, anim\_time)</code>. Zero animation time means no animation.

## **Styles**

The lv roller set style(roller, LV ROLLER STYLE ..., &style) set the styles of a Roller.

- LV\_ROLLER\_STYLE\_BG Style of the background. All style.body properties are used. style.text is used for the option's label. Default: lv style pretty
- LV\_ROLLER\_STYLE\_SEL Style of the selected option. The style.body properties are used. The selected option will be recolored with text.color. Default: lv\_style\_plain\_color

## **Events**

Besides, the Generic events the following Special events are sent by the Drop down lists:

• LV\_EVENT\_VALUE\_CHANGED sent when a new option is selected

Learn more about *Events*.

#### **Keys**

The following *Keys* are processed by the Buttons:

- LV\_KEY\_RIGHT/DOWN Select the next option
- LV\_KEY\_LEFT/UP Select the previous option

• LY\_KEY\_ENTER Apply the selected option (Send LV\_EVENT\_VALUE\_CHANGED event)

# **Example**

C



 $\operatorname{code}$ 

```
#include "lvgl/lvgl.h"
#include <stdio.h>
static void event_handler(lv_obj_t * obj, lv_event_t event)
    if(event == LV_EVENT_VALUE_CHANGED) {
        char buf[32];
        lv_roller_get_selected_str(obj, buf, sizeof(buf));
        printf("Selected month: %s\n", buf);
    }
}
void lv_ex_roller_1(void)
    lv_obj_t *roller1 = lv_roller_create(lv_scr_act(), NULL);
    lv_roller_set_options(roller1,
                         "January\n"
                        "February\n"
                        "March\n"
                         "April\n"
                        "May\n"
                        "June\n"
                        "July\n"
                         "August\n"
```

(continues on next page)

```
"September\n"
    "October\n"
    "November\n"
    "December",
    LV_ROLLER_MODE_INIFINITE);

lv_roller_set_visible_row_count(roller1, 4);
lv_obj_align(roller1, NULL, LV_ALIGN_CENTER, 0, 0);
lv_obj_set_event_cb(roller1, event_handler);
}
```

# MicroPython

No examples yet.

## **API**

## **Typedefs**

```
typedef uint8_t lv_roller_mode_t
typedef uint8_t lv_roller_style_t
```

## **Enums**

# enum [anonymous]

Roller mode.

Values:

## LV ROLLER MODE NORMAL

Normal mode (roller ends at the end of the options).

# LV\_ROLLER\_MODE\_INIFINITE

Infinite mode (roller can be scrolled forever).

## enum [anonymous]

Values:

```
LV_ROLLER_STYLE_BG
LV_ROLLER_STYLE_SEL
```

## **Functions**

```
lv\_obj\_t *lv\_roller\_create(lv\_obj\_t *par, const lv\_obj\_t *copy)
Create a roller object
```

create a roller object

Return pointer to the created roller

- par: pointer to an object, it will be the parent of the new roller
- copy: pointer to a roller object, if not NULL then the new object will be copied from it

void  $lv\_roller\_set\_options(lv\_obj\_t*roller, const char *options, lv\_roller\_mode\_t mode)$ Set the options on a roller

#### **Parameters**

- roller: pointer to roller object
- options: a string with ' 'separated options. E.g. "One\nTwo\nThree"
- mode: LV ROLLER MODE NORMAL or LV ROLLER MODE INFINITE

# void lv\_roller\_set\_align(lv\_obj\_t \*roller, lv\_label\_align\_t align)

Set the align of the roller's options (left, right or center[default])

## **Parameters**

- roller: pointer to a roller object
- align: one of lv\_label\_align\_t values (left, right, center)

void  $lv\_roller\_set\_selected(lv\_obj\_t*roller, uint16\_t sel\_opt, lv\_anim\_enable\_t anim)$ Set the selected option

#### **Parameters**

- roller: pointer to a roller object
- **sel\_opt**: id of the selected option (0 ... number of option 1);
- anim: LV\_ANOM\_ON: set with animation; LV\_ANIM\_OFF set immediately

# void lv\_roller\_set\_visible\_row\_count(lv\_obj\_t\*roller, uint8\_t row\_cnt)

Set the height to show the given number of rows (options)

## **Parameters**

- roller: pointer to a roller object
- row cnt: number of desired visible rows

# static void lv\_roller\_set\_fix\_width(lv\_obj\_t \*roller, lv\_coord\_t w)

Set a fix width for the drop down list

# Parameters

- roller: pointer to a roller obejct
- W: the width when the list is opened (0: auto size)

# **static** void **lv\_roller\_set\_anim\_time**(lv\_obj\_t\*roller, uint16\_t anim\_time)

Set the open/close animation time.

## **Parameters**

- roller: pointer to a roller object
- anim\_time: open/close animation time [ms]

# void $lv_roller_set_style(lv_obj_t *roller, lv_roller_style_t type, const lv_style_t *style)$ Set a style of a roller

- roller: pointer to a roller object
- type: which style should be set
- style: pointer to a style

# uint16\_t lv\_roller\_get\_selected(const lv\_obj\_t \*roller)

Get the id of the selected option

**Return** id of the selected option (0 ... number of option - 1);

#### **Parameters**

• roller: pointer to a roller object

# **static** void **lv\_roller\_get\_selected\_str(const** *lv\_obj\_t* \*roller, char \*buf, uint16\_t buf size)

Get the current selected option as a string

#### **Parameters**

- roller: pointer to roller object
- buf: pointer to an array to store the string
- buf size: size of buf in bytes. 0: to ignore it.

# lv\_label\_align\_t lv\_roller\_get\_align(const lv\_obj\_t \*roller)

Get the align attribute. Default alignment after \_create is LV\_LABEL\_ALIGN\_CENTER

LV\_LABEL\_ALIGN\_RIGHT

or

#### **Parameters**

• roller: pointer to a roller object

# static const char \*lv\_roller\_get\_options(const lv\_obj\_t \*roller)

Get the options of a roller

Return the options separated by ''-s (E.g. "Option1\nOption2\nOption3")

# Parameters

• roller: pointer to roller object

## static uint16 t lv roller get anim time(const lv obj t\*roller)

Get the open/close animation time.

Return open/close animation time [ms]

## **Parameters**

• roller: pointer to a roller

# bool lv\_roller\_get\_hor\_fit(const lv\_obj\_t \*roller)

Get the auto width set attribute

Return true: auto size enabled; false: manual width settings enabled

## **Parameters**

• roller: pointer to a roller object

# $\textbf{const} \ lv\_style\_t \ *\textbf{lv}\_roller\_\texttt{get}\_\texttt{style} (\textbf{const} \ \textit{lv}\_\textit{obj}\_t \ *\textit{roller}\_\textit{style}\_t \ \textit{type})$

Get a style of a roller

Return style pointer to a style

- roller: pointer to a roller object
- type: which style should be get

# struct lv\_roller\_ext\_t

## **Public Members**

```
lv_ddlist_ext_t ddlist
lv_roller_mode_t mode
```

## Slider (lv\_slider)

## Overview

The Slider object looks like a Bar supplemented with a knob. The knob can be dragged to set a value. The Slider also can be vertical or horizontal.

## Value and range

To set an initial value use lv\_slider\_set\_value(slider, new\_value, LV\_ANIM\_ON/OFF). lv slider set anim time(slider, anim time) sets the animation time in milliseconds.

To specify the  $range\ (min,\ max\ values)$  the  $lv\_slider\_set\_range(slider,\ min\ ,\ max)$  can be used.

## **Knob placement**

The knob can be placed in two ways:

- inside the background
- on the edges on min/max values

Use the  $lv\_slider\_set\_knob\_in(slider, true/false)$  to choose between the modes. ( $knob\_in = false$  is the default)

## **Styles**

You can modify the slider's styles with lv\_slider\_set\_style(slider, LV\_SLIDER\_STYLE\_..., &style).

- LV\_SLIDER\_STYLE\_BG Style of the background. All style.body properties are used. The padding values make the knob larger than the background. (negative value makes is larger)
- LV\_SLIDER\_STYLE\_INDIC Style of the indicator. All style.body properties are used. The padding values make the indicator smaller than the background.
- LV\_SLIDER\_STYLE\_KNOB Style of the knob. All style.body properties are used except padding.

#### **Events**

Besides the Generic events the following Special events are sent by the Slider:

• LV\_EVENT\_VALUE\_CHANGED Sent while the slider is being dragged or changed with keys.

# **Keys**

- LV\_KEY\_UP, LV\_KEY\_RIGHT Increment the slider's value by 1
- LV\_KEY\_DOWN, LV\_KEY\_LEFT Decrement the slider's value by 1

Learn more about Keys.

## **Example**

C



code

```
#include "lvgl/lvgl.h"
#include <stdio.h>


static void event_handler(lv_obj_t * obj, lv_event_t event)
{
    if(event == LV_EVENT_VALUE_CHANGED) {
        printf("Value: %d\n", lv_slider_get_value(obj));
    }
}

void lv_ex_slider_1(void)
{
    /*Create styles*/
    static lv_style_t style_bg;
    static lv_style_t style_indic;
    static lv_style_t style_knob;
    lv_style_copy(&style_bg, &lv_style_pretty);
```

(continues on next page)

```
style_bg.body.main_color = LV_COLOR_BLACK;
style_bg.body.grad_color = LV_COLOR_GRAY;
style_bg.body.radius = LV_RADIUS_CIRCLE;
style_bg.body.border.color = LV_COLOR_WHITE;
lv_style_copy(&style_indic, &lv_style_pretty_color);
style_indic.body.radius = LV_RADIUS_CIRCLE;
style_indic.body.shadow.width = 8;
style_indic.body.shadow.color = style_indic.body.main_color;
style_indic.body.padding.left = 3;
style_indic.body.padding.right = 3;
style indic.body.padding.top = 3;
style indic.body.padding.bottom = 3;
lv_style_copy(&style_knob, &lv_style_pretty);
style_knob.body.radius = LV_RADIUS_CIRCLE;
style_knob.body.opa = LV_OPA 70;
style knob.body.padding.top = 10 ;
style_knob.body.padding.bottom = 10 ;
/*Create a slider*/
lv_obj_t * slider = lv_slider_create(lv_scr_act(), NULL);
lv_slider_set_style(slider, LV_SLIDER_STYLE_BG, &style_bg);
lv_slider_set_style(slider, LV_SLIDER_STYLE_INDIC,&style_indic);
lv slider set style(slider, LV SLIDER STYLE KNOB, &style knob);
lv obj align(slider, NULL, LV ALIGN CENTER, 0, 0);
lv_obj_set_event_cb(slider, event_handler);
```

Welcome to the slider+label demo! Move the slider and see that the label updates to match it.

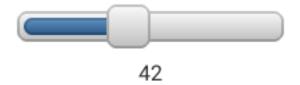

code

```
/**
    * @file lv_ex_slider_2.c
    *

(continues on next page)
```

```
/********
      INCLUDES
**************************
#include "lvgl/lvgl.h"
#include <stdio.h>
/************
* DEFINES
*******************
* TYPEDEFS
********************
/*************
* STATIC PROTOTYPES
*****************
static void slider_event_cb(lv_obj_t * slider, lv_event_t event);
/********
* STATIC VARIABLES
*****************
static lv_obj_t * slider_label;
/***********
     MACROS
********************
/***********
* GLOBAL FUNCTIONS
*****************
void lv ex slider 2(void)
   /* Create a slider in the center of the display */
   lv_obj_t * slider = lv_slider_create(lv_scr_act(), NULL);
   lv_obj_set_width(slider, LV_DPI * 2);
   lv_obj_align(slider, NULL, LV_ALIGN_CENTER, 0, 0);
   lv_obj_set_event_cb(slider, slider_event_cb);
   lv_slider_set_range(slider, 0, 100);
   /* Create a label below the slider */
   slider_label = lv_label_create(lv_scr_act(), NULL);
   lv_label_set_text(slider_label, "0");
   lv_label_set_align(slider_label, LV_LABEL_ALIGN_CENTER);
   lv obj align(slider label, slider, LV ALIGN OUT BOTTOM MID, 0, 10);
   /* Create an informative label */
   lv_obj_t * info = lv_label_create(lv_scr_act(), NULL);
   lv_label_set_text(info, "Welcome to the slider+label demo!\n"
                         "Move the slider and see that the label\n"
```

(continues on next page)

```
"updates to match it.");
lv_obj_align(info, NULL, LV_ALIGN_IN_TOP_LEFT, 10, 10);
}

/****************

* STATIC FUNCTIONS

*****************

*static void slider_event_cb(lv_obj_t * slider, lv_event_t event)

{

if(event == LV_EVENT_VALUE_CHANGED) {

    static char buf[4]; /* max 3 bytes for number plus 1 null terminating byte */
    snprintf(buf, 4, "%u", lv_slider_get_value(slider));
    lv_label_set_text(slider_label, buf);
    lv_obj_align(slider_label, slider, LV_ALIGN_OUT_BOTTOM_MID, 0, 10);
}
}
```

## MicroPython

No examples yet.

## API

## **Typedefs**

```
typedef uint8 tlv slider style t
```

# **Enums**

# enum [anonymous]

Built-in styles of slider

Values:

LV\_SLIDER\_STYLE\_BG

LV\_SLIDER\_STYLE\_INDIC

Slider background style.

# LV\_SLIDER\_STYLE\_KNOB

Slider indicator (filled area) style.

## **Functions**

```
lv\_obj\_t *lv\_slider\_create(lv\_obj\_t *par, const lv\_obj\_t *copy)
Create a slider objects
```

Return pointer to the created slider

## **Parameters**

• par: pointer to an object, it will be the parent of the new slider

• copy: pointer to a slider object, if not NULL then the new object will be copied from it

# static void lv\_slider\_set\_value(lv\_obj\_t \*slider, int16\_t value, lv\_anim\_enable\_t anim)

Set a new value on the slider

#### **Parameters**

- slider: pointer to a slider object
- value: new value
- anim: LV\_ANIM\_ON: set the value with an animation; LV\_ANIM\_OFF: change the value immediately

# static void lv slider set range(lv\_obj\_t\*slider, int16 t min, int16 t max)

Set minimum and the maximum values of a bar

#### **Parameters**

- slider: pointer to the slider object
- min: minimum value
- max: maximum value

# **static** void **lv\_slider\_set\_anim\_time**(lv\_obj\_t \*slider, uint16\_t anim\_time)

Set the animation time of the slider

## **Parameters**

- slider: pointer to a bar object
- anim time: the animation time in milliseconds.

# void lv\_slider\_set\_knob\_in(lv\_obj\_t \*slider, bool in)

Set the 'knob in' attribute of a slider

## **Parameters**

- slider: pointer to slider object
- in: true: the knob is drawn always in the slider; false: the knob can be out on the edges

# void $lv_slider_set_style(lv_obj_t *slider, lv_slider_style_t type, const lv_style_t *style)$ Set a style of a slider

## **Parameters**

- slider: pointer to a slider object
- type: which style should be set
- style: pointer to a style

# int16\_t lv\_slider\_get\_value(const lv\_obj\_t \*slider)

Get the value of a slider

**Return** the value of the slider

## **Parameters**

• slider: pointer to a slider object

# static int16\_t lv\_slider\_get\_min\_value(const lv\_obj\_t \*slider)

Get the minimum value of a slider

Return the minimum value of the slider

• slider: pointer to a slider object

# static int16\_t lv\_slider\_get\_max\_value(const lv\_obj\_t \*slider)

Get the maximum value of a slider

Return the maximum value of the slider

## **Parameters**

• slider: pointer to a slider object

# bool lv\_slider\_is\_dragged(const lv\_obj\_t \*slider)

Give the slider is being dragged or not

Return true: drag in progress false: not dragged

#### **Parameters**

• slider: pointer to a slider object

# bool lv\_slider\_get\_knob\_in(const lv\_obj\_t \*slider)

Get the 'knob in' attribute of a slider

Return true: the knob is drawn always in the slider; false: the knob can be out on the edges

#### **Parameters**

• slider: pointer to slider object

# $\verb|const| lv_style_t *lv_slider_get_style(const| lv_obj_t *slider, lv_slider_style_t \; type)|$

Get a style of a slider

Return style pointer to a style

## **Parameters**

- slider: pointer to a slider object
- type: which style should be get

# struct lv\_slider\_ext\_t

#### **Public Members**

```
lv_bar_ext_t bar
const lv_style_t *style_knob
int16_t drag_value
uint8_t knob_in
```

## Spinbox (Iv\_spinbox)

## Overview

The Spinbox contains a number as text which can be increased or decreased by *Keys* or API functions. The Spinbox is a modified *Text area*.

## Set format

lv\_spinbox\_set\_digit\_format(spinbox, digit\_count, separator\_position) set the format of the number. digit\_count sets the number of digits. Leading zeros are added to fill the space on
the left. separator\_position sets the number of digit before the decimal point. 0 means no decimal
point.

lv\_spinbox\_set\_padding\_left(spinbox, cnt) add cnt "space" characters between the sign an
the most left digit.

# Value and ranges

lv\_spinbox\_set\_range(spinbox, min, max) sets the range of the Spinbox.

lv\_spinbox\_set\_value(spinbox, num) sets the Spinbox's value manually.

lv\_spinbox\_increment(spinbox) and lv\_spinbox\_decrement(spinbox) increments/decrements the value of the Spinbox.

lv spinbox set step(spinbox, step) sets the amount to increment decrement.

## Style usage

The lv\_spinbox\_set\_style(roller, LV\_SPINBOX\_STYLE\_..., &style) set the styles of a Spinbox.

- LV\_SPINBOX\_STYLE\_BG Style of the background. All style.body properties are used. style.text is used for label. Default: lv\_style\_pretty
- LV\_SPINBOX\_STYLE\_SB Scrollbar's style which uses all style.body properties. padding. right/bottom sets horizontal and vertical the scrollbars' padding respectively and the padding. inner sets the scrollbar's width. (default: lv\_style\_pretty\_color)
- LV\_SPINBOX\_STYLE\_CURSOR Style of the cursor which uses all style.body properties including padding to make the cursor larger then the digits.

#### **Events**

Besides the Generic events the following Special events are sent by the Drop down lists:

- LV\_EVENT\_VALUE\_CHANGED sent when the value has changed. (the value is set as event data as int32 t)
- LV EVENT INSERT sent by the ancestor Text area but shouldn't be used.

Learn more about *Events*.

## **Keys**

The following *Keys* are processed by the Buttons:

- LV\_KEY\_LEFT/RIGHT With Keypad move the cursor left/right. With Encoder decrement/increment the selected digit.
- LY\_KEY\_ENTER Apply the selected option (Send LV\_EVENT\_VALUE\_CHANGED event and close the Drop down list)

• LV\_KEY\_ENTER With Encoder got the net digit. Jump to the first after the last.

## **Example**

C



 $\operatorname{code}$ 

```
#include "lvgl/lvgl.h"
#include <stdio.h>
static void event_handler(lv_obj_t * obj, lv_event_t event)
    if(event == LV_EVENT_VALUE_CHANGED) {
        printf("Value: %d\n", lv_spinbox_get_value(obj));
    }
   else if(event == LV EVENT CLICKED) {
        /*For simple test: Click the spinbox to increment its value*/
        lv spinbox increment(obj);
    }
}
void lv ex spinbox 1(void)
    lv_obj_t * spinbox;
    spinbox = lv_spinbox_create(lv_scr_act(), NULL);
    lv_spinbox_set_digit_format(spinbox, 5, 3);
    lv_spinbox_step_prev(spinbox);
    lv_obj_set_width(spinbox, 100);
    lv obj align(spinbox, NULL, LV ALIGN CENTER, 0, 0);
    lv obj set event cb(spinbox, event handler);
}
```

# MicroPython

No examples yet.

## **API**

## **Typedefs**

```
typedef uint8_t lv_spinbox_style_t
```

#### Enums

# enum [anonymous]

Values:

LV\_SPINBOX\_STYLE\_BG
LV\_SPINBOX\_STYLE\_SB
LV\_SPINBOX\_STYLE\_CURSOR

## **Functions**

```
lv\_obj\_t *lv\_spinbox\_create(lv\_obj\_t *par, const lv\_obj\_t *copy)
```

Create a spinbox objects

**Return** pointer to the created spinbox

# Parameters

- par: pointer to an object, it will be the parent of the new spinbox
- copy: pointer to a spinbox object, if not NULL then the new object will be copied from it

Set a style of a spinbox.

## **Parameters**

- templ: pointer to template object
- type: which style should be set
- style: pointer to a style

```
void lv_spinbox_set_value(lv_obj_t *spinbox, int32_t i)
```

Set spinbox value

## **Parameters**

- spinbox: pointer to spinbox
- i: value to be set

```
void lv_spinbox_set_digit_format(lv_obj_t *spinbox, uint8_t digit_count, uint8_t separator position)
```

Set spinbox digit format (digit count and decimal format)

- spinbox: pointer to spinbox
- digit\_count: number of digit excluding the decimal separator and the sign
- separator\_position: number of digit before the decimal point. If 0, decimal point is not shown

## void lv spinbox set step(lv\_obj\_t\*spinbox, uint32 t step)

Set spinbox step

#### **Parameters**

- spinbox: pointer to spinbox
- step: steps on increment/decrement

# void lv\_spinbox\_set\_range(lv\_obj\_t \*spinbox, int32\_t range\_min, int32\_t range\_max)

Set spinbox value range

## **Parameters**

- spinbox: pointer to spinbox
- range\_min: maximum value, inclusive
- range\_max: minimum value, inclusive

# void lv\_spinbox\_set\_padding\_left(lv\_obj\_t \*spinbox, uint8\_t padding)

Set spinbox left padding in digits count (added between sign and first digit)

#### **Parameters**

- spinbox: pointer to spinbox
- cb: Callback function called on value change event

Get style of a spinbox.

Return style pointer to the style

#### **Parameters**

- templ: pointer to template object
- type: which style should be get

# int32\_t lv\_spinbox\_get\_value(lv\_obj\_t \*spinbox)

Get the spinbox numeral value (user has to convert to float according to its digit format)

Return value integer value of the spinbox

## **Parameters**

• spinbox: pointer to spinbox

# void lv\_spinbox\_step\_next(lv\_obj\_t \*spinbox)

Select next lower digit for edition by dividing the step by 10

## **Parameters**

• spinbox: pointer to spinbox

# void lv\_spinbox\_step\_prev(lv\_obj\_t \*spinbox)

Select next higher digit for edition by multiplying the step by 10

• spinbox: pointer to spinbox

# void lv\_spinbox\_increment(lv\_obj\_t \*spinbox)

Increment spinbox value by one step

## **Parameters**

• spinbox: pointer to spinbox

# void lv\_spinbox\_decrement(lv\_obj\_t \*spinbox)

Decrement spinbox value by one step

## **Parameters**

• spinbox: pointer to spinbox

# struct lv\_spinbox\_ext\_t

## **Public Members**

```
lv_ta_ext_t ta
int32_t value
int32_t range_max
int32_t range_min
int32_t step
uint16_t digit_count
uint16_t dec_point_pos
uint16_t digit_padding_left
```

# **Example**

# Switch (lv\_sw)

## Overview

The Switch can be used to turn on/off something. The look like a little slider.

## Change state

The state of the switch can be changed by

- Clicking on it
- Sliding it
- Using lv\_sw\_on(sw, LV\_ANIM\_ON/OFF), lv\_sw\_off(sw, LV\_ANIM\_ON/OFF) or lv\_sw\_toggle(sw, LV\_ANOM\_ON/OFF) functions

# **Animation time**

The time of animations, when the switch changes state, can be adjusted with  $lv_sw_set_anim_time(sw,anim_time)$ .

## **Styles**

You can modify the Switch's styles with lv\_sw\_set\_style(sw, LV\_SW\_STYLE\_..., &style).

- LV\_SW\_STYLE\_BG Style of the background. All style.body properties are used. The padding values make the Switch smaller than the knob. (negative value makes is larger)
- LV\_SW\_STYLE\_INDIC Style of the indicator. All style.body properties are used. The padding values make the indicator smaller than the background.
- LV\_SW\_STYLE\_KNOB\_OFF Style of the knob when the switch is off. The style.body properties are used except padding.
- LV\_SW\_STYLE\_KNOB\_ON Style of the knob when the switch is on. The style.body properties are used except padding.

## **Events**

Besides the Generic events the following Special events are sent by the Switch:

• LV\_EVENT\_VALUE\_CHANGED Sent when the switch changes state.

## **Keys**

- LV\_KEY\_UP, LV\_KEY\_RIGHT Turn on the slider
- LV\_KEY\_DOWN, LV\_KEY\_LEFT Turn off the slider

Learn more about Keys.

## **Example**

C





code

```
#include "lvgl/lvgl.h"
#include <stdio.h>
static void event_handler(lv_obj_t * obj, lv_event_t event)
    if(event == LV EVENT VALUE CHANGED) {
        printf("State: %s\n", lv_sw_get_state(obj) ? "On" : "Off");
void lv_ex_sw_1(void)
    /*Create styles for the switch*/
    static lv_style_t bg_style;
    static lv style t indic style;
    static lv style t knob on style;
    static lv_style_t knob_off_style;
    lv_style_copy(&bg_style, &lv_style_pretty);
    bg style.body.radius = LV RADIUS CIRCLE;
    bg style.body.padding.top = 6;
    bg style.body.padding.bottom = 6;
    lv_style_copy(&indic_style, &lv_style_pretty_color);
    indic_style.body.radius = LV_RADIUS_CIRCLE;
    indic_style.body.main_color = lv_color_hex(0x9fc8ef);
    indic_style.body.grad_color = lv_color_hex(0x9fc8ef);
    indic style.body.padding.left = 0;
    indic style.body.padding.right = 0;
    indic style.body.padding.top = 0;
    indic style.body.padding.bottom = 0;
```

(continues on next page)

```
lv_style_copy(&knob_off_style, &lv_style_pretty);
knob_off_style.body.radius = LV_RADIUS_CIRCLE;
knob_off_style.body.shadow.width = 4;
knob off style.body.shadow.type = LV SHADOW BOTTOM;
lv_style_copy(&knob_on_style, &lv_style_pretty_color);
knob on style.body.radius = LV RADIUS CIRCLE;
knob_on_style.body.shadow.width = 4;
knob_on_style.body.shadow.type = LV_SHADOW_BOTTOM;
/*Create a switch and apply the styles*/
lv obj t *sw1 = lv sw create(lv scr act(), NULL);
lv_sw_set_style(sw1, LV_SW_STYLE_BG, &bg_style);
lv_sw_set_style(sw1, LV_SW_STYLE_INDIC, &indic_style);
lv_sw_set_style(sw1, LV_SW_STYLE_KNOB_ON, &knob_on_style);
lv_sw_set_style(sw1, LV_SW_STYLE_KNOB_OFF, &knob_off_style);
lv obj align(sw1, NULL, LV ALIGN CENTER, 0, -50);
lv_obj_set_event_cb(sw1, event_handler);
/*Copy the first switch and turn it ON*/
lv_obj_t *sw2 = lv_sw_create(lv_scr_act(), sw1);
lv_sw_on(sw2, LV_ANIM_ON);
lv_obj_align(sw2, NULL, LV_ALIGN_CENTER, 0, 50);
```

## MicroPython

No examples yet.

## API

## **Typedefs**

typedef uint8\_t lv\_sw\_style\_t

## **Enums**

# enum [anonymous]

Switch styles.

Values:

# LV\_SW\_STYLE\_BG

Switch background.

## LV SW STYLE INDIC

Switch fill area.

# LV\_SW\_STYLE\_KNOB\_OFF

Switch knob (when off).

## LV SW STYLE KNOB ON

Switch knob (when on).

## **Functions**

 $lv\_obj\_t *lv\_sw\_create(lv\_obj\_t *par, const lv\_obj\_t *copy)$ 

Create a switch objects

Return pointer to the created switch

#### **Parameters**

- par: pointer to an object, it will be the parent of the new switch
- copy: pointer to a switch object, if not NULL then the new object will be copied from it

void  $lv_sw_on(lv_obj_t *sw, lv_anim_enable_t anim)$ 

Turn ON the switch

#### **Parameters**

- SW: pointer to a switch object
- anim: LV\_ANIM\_ON: set the value with an animation; LV\_ANIM\_OFF: change the value immediately

void lv\_sw\_off(lv\_obj\_t \*sw, lv\_anim\_enable\_t anim)

Turn OFF the switch

## **Parameters**

- SW: pointer to a switch object
- anim: LV\_ANIM\_ON: set the value with an animation; LV\_ANIM\_OFF: change the value immediately

bool lv\_sw\_toggle(lv\_obj\_t \*sw, lv\_anim\_enable\_t anim)

Toggle the position of the switch

**Return** resulting state of the switch.

#### **Parameters**

- SW: pointer to a switch object
- anim: LV\_ANIM\_ON: set the value with an animation; LV\_ANIM\_OFF: change the value immediately

void lv\_sw\_set\_style(lv\_obj\_t \*sw, lv\_sw\_style\_t type, const lv\_style\_t \*style)

Set a style of a switch

## **Parameters**

- SW: pointer to a switch object
- type: which style should be set
- style: pointer to a style

void lv\_sw\_set\_anim\_time(lv\_obj\_t \*sw, uint16\_t anim\_time)

Set the animation time of the switch

**Return** style pointer to a style

- SW: pointer to a switch object
- anim\_time: animation time

```
static bool lv sw get state(const lv_obj_t *sw)
     Get the state of a switch
     Return false: OFF; true: ON
     Parameters
           • SW: pointer to a switch object
const lv_style_t *lv_sw_get_style(const lv_obj_t *sw, lv_sw_style_t type)
     Get a style of a switch
     Return style pointer to a style
     Parameters
           • SW: pointer to a switch object
           • type: which style should be get
uint16_t lv_sw_get_anim_time(const lv_obj_t *sw)
     Get the animation time of the switch
     Return style pointer to a style
     Parameters
           • SW: pointer to a switch object
struct lv sw ext t
     Public Members
     lv slider ext t slider
     const lv_style_t *style_knob_off
         Style of the knob when the switch is OFF
     const lv style t *style knob on
         Style of the knob when the switch is ON (NULL to use the same as OFF)
     lv coord t start x
     uint8_t changed
     uint8\_t slided
     uint16 t anim time
Table (lv_table)
```

## Overview

Tables, as usual, are built from rows, columns, and cells containing texts.

The Table object is very light weighted because only the texts are stored. No real objects are created for cells but they are just drawn on the fly.

## **Rows and Columns**

To set number of rows and columns use lv\_table\_set\_row\_cnt(table, row\_cnt) and lv\_table\_set\_col\_cnt(table, col\_cnt)

## Width and Height

The width of the columns can be set with lv\_table\_set\_col\_width(table, col\_id, width). The overall width of the Table object will be set to the sum of columns widths.

The height is calculated automatically from the cell styles (font, padding etc) and the number of rows.

## Set cell value

The cells can store on texts so need to convert numbers to text before displaying them in a table.

lv\_table\_set\_cell\_value(table, row, col, "Content"). The text is saved by the table so it
can be even a local variable.

Line break can be used in the text like "Value\n60.3".

## Align

The text alignment in cells can be adjusted individually with  $lv\_table\_set\_cell\_align(table, row, col, LV\_LABEL\_ALIGN\_LEFT/CENTER/RIGHT)$ .

# Cell type

You can use 4 different cell types. Each has its own style.

Cell types can be used to add different style for example to:

- table header
- first column
- highlight a cell
- etc

The type can be selected with lv\_table\_set\_cell\_type(table, row, col, type) type can be 1, 2, 3 or 4.

## Merge cells

Cells can be merged horizontally with <code>lv\_table\_set\_cell\_merge\_right(table, col, row, true)</code>. To merge more adjacent cells apply this function for each cell.

## Crop text

By default, the texts are word-wrapped to fit into the width of the cell and the height of the cell is set automatically. To disable this and keep the text as it is enable <code>lv\_table\_set\_cell\_crop(table, row, col, true)</code>.

## **Scroll**

The make the Table scrollable place it on a Page

# **Styles**

Use  $lv\_table\_set\_style(page, LV\_TABLE\_STYLE\_..., &style)$  to set a new style for an element of the page:

- LV\_PAGE\_STYLE\_BG background's style which uses all style.body properties (default: lv\_style\_plain\_color)
- LV\_PAGE\_STYLE\_CELL1/2/3/4 4 for styles for the 4 cell types. All style.body properties are used. (default: lv\_style\_plain)

## **Events**

Only the Generic events are sent by the object type.

Learn more about *Events*.

## **Keys**

No *Keys* are processed by the object type.

Learn more about Keys.

# **Example**

C

Name	Price
Apple	\$7
Banana	\$4
Citron	\$6

code

```
#include "lvgl/lvgl.h"
void lv ex table 1(void)
    /*Create a normal cell style*/
    static lv style t style cell1;
    lv_style_copy(&style_cell1, &lv_style_plain);
    style cell1.body.border.width = 1;
    style_cell1.body.border.color = LV_COLOR_BLACK;
    /*Crealte a header cell style*/
    static lv_style_t style_cell2;
    lv_style_copy(&style_cell2, &lv_style_plain);
    style_cell2.body.border.width = 1;
    style cell2.body.border.color = LV COLOR BLACK;
    style cell2.body.main color = LV COLOR SILVER;
    style_cell2.body.grad_color = LV_COLOR_SILVER;
    lv_obj_t * table = lv_table_create(lv_scr_act(), NULL);
    lv_table_set_style(table, LV_TABLE_STYLE_CELL1, &style_cell1);
    lv_table_set_style(table, LV_TABLE_STYLE_CELL2, &style_cell2);
lv_table_set_style(table, LV_TABLE_STYLE_BG, &lv_style_transp_tight);
    lv_table_set_col_cnt(table, 2);
    lv_table_set_row_cnt(table, 4);
    lv_obj_align(table, NULL, LV_ALIGN_CENTER, 0, 0);
    /*Make the cells of the first row center aligned */
    lv_table_set_cell_align(table, 0, 0, LV_LABEL_ALIGN_CENTER);
    lv table set cell align(table, 0, 1, LV LABEL ALIGN CENTER);
    /*Make the cells of the first row TYPE = 2 (use `style cell2`) */
```

(continues on next page)

```
lv_table_set_cell_type(table, 0, 0, 2);
lv_table_set_cell_type(table, 0, 1, 2);

/*Fill the first column*/
lv_table_set_cell_value(table, 0, 0, "Name");
lv_table_set_cell_value(table, 1, 0, "Apple");
lv_table_set_cell_value(table, 2, 0, "Banana");
lv_table_set_cell_value(table, 3, 0, "Citron");

/*Fill the second column*/
lv_table_set_cell_value(table, 0, 1, "Price");
lv_table_set_cell_value(table, 1, 1, "$7");
lv_table_set_cell_value(table, 2, 1, "$4");
lv_table_set_cell_value(table, 3, 1, "$6");
}
```

## MicroPython

No examples yet.

# MicroPython

No examples yet.

## API

# **Typedefs**

```
typedef uint8_t lv_table_style_t
```

## **Enums**

```
enum [anonymous]

Values:

LV_TABLE_STYLE_BG

LV_TABLE_STYLE_CELL1

LV_TABLE_STYLE_CELL2

LV_TABLE_STYLE_CELL3

LV_TABLE_STYLE_CELL4
```

## **Functions**

```
lv\_obj\_t *lv\_table\_create(lv\_obj\_t *par, const lv\_obj\_t *copy)
Create a table object
```

Return pointer to the created table

## **Parameters**

- par: pointer to an object, it will be the parent of the new table
- copy: pointer to a table object, if not NULL then the new object will be copied from it

void **lv\_table\_set\_cell\_value(** lv\_obj\_t \*table, uint16\_t row, uint16\_t col, **const** char \*txt**)** Set the value of a cell.

#### **Parameters**

- table: pointer to a Table object
- **row**: id of the row [0 .. row\_cnt -1]
- col: id of the column [0 .. col\_cnt -1]
- txt: text to display in the cell. It will be copied and saved so this variable is not required after this function call.

# void lv\_table\_set\_row\_cnt(lv\_obj\_t \*table, uint16\_t row\_cnt)

Set the number of rows

#### **Parameters**

- table: table pointer to a Table object
- row cnt: number of rows

# void lv\_table\_set\_col\_cnt(lv\_obj\_t \*table, uint16\_t col\_cnt)

Set the number of columns

#### **Parameters**

- table: table pointer to a Table object
- col\_cnt: number of columns. Must be < LV\_TABLE\_COL\_MAX

$$\label{eq:col_width} \begin{tabular}{ll} void $lv\_table\_set\_col\_width ($lv\_obj\_t*table$, uint16\_t $col\_id$, $lv\_coord\_t $w$) \\ \end{tabular}$$

Set the width of a column

## **Parameters**

- table: table pointer to a Table object
- col\_id: id of the column [0 .. LV\_TABLE\_COL\_MAX -1]
- W: width of the column

Set the text align in a cell

## **Parameters**

- table: pointer to a Table object
- **row**: id of the row [0 .. row\_cnt -1]
- col: id of the column [0 .. col\_cnt -1]
- align: LV\_LABEL\_ALIGN\_LEFT or LV\_LABEL\_ALIGN\_CENTER or LV LABEL ALIGN RIGHT

# void **lv\_table\_set\_cell\_type**(lv\_obj\_t \*table, uint16\_t row, uint16\_t col, uint8\_t type) Set the type of a cell.

- table: pointer to a Table object
- **row**: id of the row [0 .. row\_cnt -1]
- col: id of the column [0 .. col\_cnt -1]
- type: 1,2,3 or 4. The cell style will be chosen accordingly.

# void **lv\_table\_set\_cell\_crop**( $lv\_obj\_t *table$ , uint16\_t row, uint16\_t col, bool crop) Set the cell crop. (Don't adjust the height of the cell according to its content)

## **Parameters**

- table: pointer to a Table object
- **row**: id of the row [0 .. row\_cnt -1]
- col: id of the column [0 .. col\_cnt -1]
- Crop: true: crop the cell content; false: set the cell height to the content.

# void **lv\_table\_set\_cell\_merge\_right**( $lv\_obj\_t *table$ , uint16\_t row, uint16\_t col, bool en) Merge a cell with the right neighbor. The value of the cell to the right won't be displayed.

#### **Parameters**

- table: table pointer to a Table object
- **row**: id of the row [0 .. row\_cnt -1]
- col: id of the column [0 .. col cnt -1]
- en: true: merge right; false: don't merge right

## Parameters

- table: pointer to table object
- type: which style should be set
- style: pointer to a style

# const char \*lv\_table\_get\_cell\_value(lv\_obj\_t \*table, uint16\_t row, uint16\_t col) Get the value of a cell.

Return text in the cell

## **Parameters**

- table: pointer to a Table object
- **row**: id of the row [0 .. row cnt -1]
- col: id of the column [0 .. col\_cnt -1]

# uint16\_t lv\_table\_get\_row\_cnt(lv\_obj\_t \*table)

Get the number of rows.

Return number of rows.

# Parameters

• table: table pointer to a Table object

# uint16\_t lv\_table\_get\_col\_cnt(lv\_obj\_t \*table)

Get the number of columns.

Return number of columns.

#### **Parameters**

• table: table pointer to a Table object

## lv\_coord\_t lv\_table\_get\_col\_width(lv\_obj\_t\*table, uint16\_t col\_id)

Get the width of a column

Return width of the column

### **Parameters**

- table: table pointer to a Table object
- col\_id: id of the column [0 .. LV\_TABLE\_COL\_MAX -1]

# lv\_label\_align\_t lv\_table\_get\_cell\_align(lv\_obj\_t \*table, uint16\_t row, uint16\_t col) Get the text align of a cell

**Return** LV\_LABEL\_ALIGN\_LEFT (default in case of error) or LV\_LABEL\_ALIGN\_CENTER or LV LABEL ALIGN RIGHT

#### **Parameters**

- table: pointer to a Table object
- **row**: id of the row [0 .. row\_cnt -1]
- **col**: id of the column [0 .. col\_cnt -1]

$$lv\_label\_align\_t$$
 lv\_table\_get\_cell\_type( $lv\_obj\_t$ \* $table$ , uint16\_t  $row$ , uint16\_t  $col$ )

Get the type of a cell

**Return** 1,2,3 or 4

## Parameters

- table: pointer to a Table object
- **row**: id of the row [0 .. row\_cnt -1]
- col: id of the column [0 .. col cnt -1]

## 

Return true: text crop enabled; false: disabled

#### **Parameters**

- table: pointer to a Table object
- **row**: id of the row [0 .. row\_cnt -1]
- col: id of the column [0 .. col\_cnt -1]

# bool $lv\_table\_get\_cell\_merge\_right(lv\_obj\_t*table, uint16\_t row, uint16\_t col)$ Get the cell merge attribute.

Return true: merge right; false: don't merge right

- table: table pointer to a Table object
- row: id of the row [0 .. row\_cnt -1]
- col: id of the column [0 .. col\_cnt -1]

Return style pointer to the style

### **Parameters**

- table: pointer to table object
- type: which style should be get

## union lv\_table\_cell\_format\_t

 $\#include < lv\_table.h >$  Internal table cell format structure.

Use the lv\_table APIs instead.

### **Public Members**

```
uint8_t align
uint8_t right_merge
uint8_t type
uint8_t crop
struct lv_table_cell_format_t::[anonymous] s
uint8_t format_byte
struct lv_table_ext_t
```

### **Public Members**

```
uint16_t col_cnt
uint16_t row_cnt
char **cell_data
const lv_style_t *cell_style[LV_TABLE_CELL_STYLE_CNT]
lv_coord_t col_w[LV_TABLE_COL_MAX]
```

## Tabview (Iv\_tabview)

#### Overview

The Tab view object can be used to organize content in tabs.

## Adding tab

You can add a new tabs with lv\_tabview\_add\_tab(tabview, "Tab name"). It will return with a pointer to a *Page* object where you can add the tab's content.

### Change tab

To select a new tab you can:

- Click on it on the header part
- Slide horizontally
- Use lv tabview set tab act(tabview, id, LV ANIM ON/OFF) function

The manual sliding can be disabled with lv tabview set sliding(tabview, false).

### Tab button's position

By default, the tab selector buttons are placed on the top of the Tabview. It can be changed with lv tabview set btns pos(tabview, LV TABVIEW BTNS POS TOP/BOTTOM/LEFT/RIGHT)

Note that, you can't change the tab position from top or bottom to left or right when tabs are already added.

#### Hide the tabs

The tab buttons can be hidden by lv tabview set btns hidden(tabview, true)

#### Animation time

The animation time is adjusted by lv\_tabview\_set\_anim\_time(tabview, anim\_time\_ms). It is used when the new tab is loaded.

### Style usage

Use lv\_tabview\_set\_style(tabview, LV\_TABVIEW\_STYLE\_..., &style) to set a new style for an element of the Tabview:

- LV\_TABVIEW\_STYLE\_BG main background which uses all style.body properties (default: lv style plain)
- LV\_TABVIEW\_STYLE\_INDIC a thin rectangle on indicating the current tab. Uses all style.body properties. Its height comes from body.padding.inner (default: lv\_style\_plain\_color)
- LV\_TABVIEW\_STYLE\_BTN\_BG style of the tab buttons' background. Uses all style.body properties. The header height will be set automatically considering body.padding.top/bottom (default: lv style transp)
- LV\_TABVIEW\_STYLE\_BTN\_REL style of released tab buttons. Uses all style.body properties. (default: lv\_style\_tbn\_rel)
- LV\_TABVIEW\_STYLE\_BTN\_PR style of released tab buttons. Uses all style.body properties except padding. (default:  $lv_style_tbn_rel$ )
- LV\_TABVIEW\_STYLE\_BTN\_TGL\_REL style of selected released tab buttons. Uses all style.body properties except padding. (default: lv\_style\_tbn\_rel)
- LV\_TABVIEW\_STYLE\_BTN\_TGL\_PR style of selected pressed tab buttons. Uses all style.body properties except padding. (default: lv\_style\_btn\_tgl\_pr)

The height of the header is calculated like: font height and padding.top and padding.bottom from  $LV\_TABVIEW\_STYLE\_BTN\_REL + padding.top$  and padding bottom from  $LV\_TABVIEW\_STYLE\_BTN\_BG$ 

#### **Events**

Besides the Generic events the following Special events are sent by the Slider:

• LV\_EVENT\_VALUE\_CHANGED Sent when a new tab is selected by sliding or clicking the tab button

Learn more about *Events*.

## **Keys**


The following *Keys* are processed by the Tabview:

- LV\_KEY\_RIGHT/LEFT Select a tab
- LV\_KEY\_ENTER Change to the selected tab

Learn more about Keys.

## **Example**

C

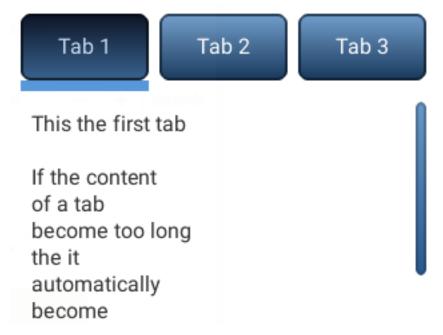

code

```
#include "lvgl/lvgl.h"

void lv_ex_tabview_1(void)
```

(continues on next page)

(continued from previous page)

```
{
    /*Create a Tab view object*/
   lv_obj_t *tabview;
    tabview = lv_tabview_create(lv_scr_act(), NULL);
    /*Add 3 tabs (the tabs are page (lv_page) and can be scrolled*/
   lv_obj_t *tab1 = lv_tabview_add_tab(tabview, "Tab 1");
    lv_obj_t *tab2 = lv_tabview_add_tab(tabview, "Tab 2");
    lv_obj_t *tab3 = lv_tabview_add_tab(tabview, "Tab 3");
   /*Add content to the tabs*/
   lv obj t * label = lv label create(tab1, NULL);
    lv_label_set_text(label, "This the first tab\n\n"
                             "If the content\n"
                             "of a tab\n"
                             "become too long\n"
                             "the it \n"
                             "automatically\n"
                             "become\n"
                             "scrollable.");
    label = lv_label_create(tab2, NULL);
    lv_label_set_text(label, "Second tab");
    label = lv label create(tab3, NULL);
    lv_label_set_text(label, "Third tab");
}
```

### **MicroPython**

No examples yet.

#### API

## **Typedefs**

```
typedef uint8_t lv_tabview_btns_pos_t
typedef uint8_t lv_tabview_style_t
```

### **Enums**

### enum [anonymous]

Position of tabview buttons.

Values:

```
LV_TABVIEW_BTNS_POS_TOP
LV_TABVIEW_BTNS_POS_BOTTOM
LV_TABVIEW_BTNS_POS_LEFT
LV_TABVIEW_BTNS_POS_RIGHT
```

## enum [anonymous]

Values:

LV\_TABVIEW\_STYLE\_BG

LV\_TABVIEW\_STYLE\_INDIC

LV\_TABVIEW\_STYLE\_BTN\_BG

LV\_TABVIEW\_STYLE\_BTN\_REL

LV\_TABVIEW\_STYLE\_BTN\_PR

LV\_TABVIEW\_STYLE\_BTN\_TGL\_REL

LV\_TABVIEW\_STYLE\_BTN\_TGL\_REL

### **Functions**

 $lv\_obj\_t *lv\_tabview\_create(lv\_obj\_t *par, const lv\_obj\_t *copy)$ 

Create a Tab view object

Return pointer to the created tab

### **Parameters**

- par: pointer to an object, it will be the parent of the new tab
- copy: pointer to a tab object, if not NULL then the new object will be copied from it

## void lv\_tabview\_clean(lv\_obj\_t \*obj)

Delete all children of the scrl object, without deleting scrl child.

### **Parameters**

• obj: pointer to an object

```
lv\_obj\_t *lv\_tabview\_add\_tab(lv\_obj\_t *tabview, const char *name)
```

Add a new tab with the given name

Return pointer to the created page object (lv\_page). You can create your content here

### Parameters

- tabview: pointer to Tab view object where to ass the new tab
- name: the text on the tab button

 $\label{local_void_local_void_local} \textbf{lv\_tabview\_set\_tab\_act} (\textit{lv\_obj\_t*tabview}, \ \text{uint} 16\_t \ \textit{id}, \ \textit{lv\_anim\_enable\_t anim})$ 

Set a new tab

## **Parameters**

- tabview: pointer to Tab view object
- id: index of a tab to load
- anim: LV\_ANIM\_ON: set the value with an animation; LV\_ANIM\_OFF: change the value immediately

## void lv\_tabview\_set\_sliding(lv\_obj\_t \*tabview, bool en)

Enable horizontal sliding with touch pad

### **Parameters**

• tabview: pointer to Tab view object

• en: true: enable sliding; false: disable sliding

## void lv\_tabview\_set\_anim\_time(lv\_obj\_t \*tabview, uint16\_t anim\_time)

Set the animation time of tab view when a new tab is loaded

#### **Parameters**

- tabview: pointer to Tab view object
- anim\_time: time of animation in milliseconds

```
\begin{tabular}{ll} void $lv\_tabview\_set\_style($lv\_obj\_t$ *tabview, $lv\_tabview\_style\_t$ type, $const $lv\_style\_t$ *style) \\ \end{tabular}
```

Set the style of a tab view

### **Parameters**

- tabview: pointer to a tan view object
- type: which style should be set
- style: pointer to the new style

## ${\tt void}~ \textbf{lv\_tabview\_set\_btns\_pos} (\textit{lv\_obj\_t}~*tabview, \textit{lv\_tabview\_btns\_pos\_t}~ \textit{btns\_pos})$

Set the position of tab select buttons

#### **Parameters**

- tabview: pointer to a tab view object
- btns\_pos: which button position

## void lv\_tabview\_set\_btns\_hidden(lv\_obj\_t \*tabview, bool en)

Set whether tab buttons are hidden

### **Parameters**

- tabview: pointer to a tab view object
- en: whether tab buttons are hidden

## uint16\_t lv\_tabview\_get\_tab\_act(const lv\_obj\_t \*tabview)

Get the index of the currently active tab

Return the active tab index

### **Parameters**

• tabview: pointer to Tab view object

## uint16\_t lv\_tabview\_get\_tab\_count(const lv\_obj\_t \*tabview)

Get the number of tabs

Return tab count

### **Parameters**

• tabview: pointer to Tab view object

## $lv\_obj\_t *lv\_tabview\_get\_tab(const lv\_obj\_t *tabview, uint16\_t id)$

Get the page (content area) of a tab

Return pointer to page (lv\_page) object

- tabview: pointer to Tab view object
- id: index of the tab (>= 0)

## bool lv tabview get sliding(const lv\_obj\_t\*tabview)

Get horizontal sliding is enabled or not

Return true: enable sliding; false: disable sliding

#### **Parameters**

• tabview: pointer to Tab view object

## uint16\_t lv\_tabview\_get\_anim\_time(const lv\_obj\_t \*tabview)

Get the animation time of tab view when a new tab is loaded

Return time of animation in milliseconds

### **Parameters**

• tabview: pointer to Tab view object

# const lv\_style\_t \*lv\_tabview\_get\_style(const lv\_obj\_t \*tabview, lv\_tabview\_style\_t type) Get a style of a tab view

Return style pointer to a style

### Parameters

- tabview: pointer to a ab view object
- type: which style should be get

## $lv\_tabview\_btns\_pos\_t$ $lv\_tabview\_get\_btns\_pos$ (const $lv\_obj\_t$ \*tabview)

Get position of tab select buttons

### **Parameters**

• tabview: pointer to a ab view object

## bool lv\_tabview\_get\_btns\_hidden(const lv\_obj\_t \*tabview)

Get whether tab buttons are hidden

Return whether tab buttons are hidden

#### **Parameters**

• tabview: pointer to a tab view object

## struct lv\_tabview\_ext\_t

## **Public Members**

uint8\_t draging

```
lv_obj_t *btns
lv_obj_t *indic
lv_obj_t *content
const char **tab_name_ptr
lv_point_t point_last
uint16_t tab_cur
uint16_t tab_cnt
uint16_t anim_time
uint8_t slide_enable
```

```
uint8_t drag_hor
uint8_t scroll_ver
uint8_t btns_hide
lv_tabview_btns_pos_t btns_pos
```

## Text area (lv\_ta)

### Overview

The Text Area is a *Page* with a *Label* and a cursor on it. Texts or characters can be added to it. Long lines are wrapped and when the text becomes long enough the Text area can be scrolled-

### Add text

You can insert text or characters to the current cursor's position with:

```
lv_ta_add_char(ta, 'c')
```

• lv\_ta\_add\_text(ta, "insert this text")

To add wide characters like 'a', 'B' or CJK characters use lv\_ta\_add\_text(ta, "a").

lv\_ta\_set\_text(ta, "New text") changes the whole text.

### **Placeholder**

A placeholder text can be specified which is displayed when the Text area is empty with  $lv_{ta}_{set_placeholder_{text}(ta, "Placeholder text")}$ 

### Delete character

To delete a character from the left of the current cursor position use  $lv_ta_del_char(ta)$ . The delete from teh right use  $lv_ta_del_char_forward(ta)$ 

### Move the cursor

The cursor position can be modified directly with  $lv_ta_set_cursor_pos(ta, 10)$ . The 0 position means "before the first characters",  $lv_ta_set_cursor_pos(ta, 10)$ .

You can step the cursor with

- lv\_ta\_cursor\_right(ta)
- lv ta cursor left(ta)
- lv ta cursor up(ta)
- lv ta cursor down(ta)

If lv\_ta\_set\_cursor\_click\_pos(ta, true) is called the cursor will jump to the position where the Text area was clicked.

### **Cursor types**

There are several cursor types. You can set one of them with: lv\_ta\_set\_cursor\_type(ta,
LV\_CURSOR\_...)

- LV\_CURSOR\_NONE No cursor
- LV\_CURSOR\_LINE A simple vertical line
- LV\_CURSOR\_BLOCK A filled rectangle on the current character
- LV\_CURSOR\_OUTLINE A rectangle border around the current character
- LV\_CURSOR\_UNDERLINE Underline the current character

You can 'OR' LV CURSOR HIDDEN to any type to temporarily hide the cursor.

The blink time of the cursor can be adjusted with lv\_ta\_set\_cursor\_blink\_time(ta, time\_ms).

### One line mode

The Text area can be configures to be one lined with lv\_ta\_set\_one\_line(ta, true). In this mode the height is set automatically to show only one line, line break character are ignored, and word wrap is disabled.

#### Password mode

The text area supports password mode which can be enabled with <code>lv\_ta\_set\_pwd\_mode(ta, true)</code>. In password mode, the enters characters are converted to \* after some time or when a new character is entered.

In password mode lv ta get text(ta) gives the real text and not the asterisk characters

The visibility time can be adjusted with lv\_ta\_set\_pwd\_show\_time(ta, time\_ms).

### Text align

The text can be aligned to the left, center or right with lv\_ta\_set\_text\_align(ta, LV\_LABEL\_ALIGN\_LET/CENTER/RIGHT).

In one line mode, the text can be scrolled horizontally only if the text is left aligned.

### **Accepted characters**

You can set a list of accepted characters with lv\_ta\_set\_accepted\_chars(ta, "0123456789.+-"). Other characters will be ignored.

### Max text length

The maximum number of characters can be limited with lv\_ta\_set\_max\_length(ta, max\_char\_num)

### Very long texts

If there is a very long text in the Text area (> 20 k characters) its scrolling and drawing might be slow. However, by enabling LV\_LABEL\_LONG\_TXT\_HINT 1 in  $lv\_conf.h$  it can be hugely improved. It will save some info about the label to speed up its drawing. Using LV\_LABEL\_LONG\_TXT\_HINT the scrolling and drawing will as fast as with "normal" short texts.

#### Select text

A part of text can be selected if enabled with lv\_ta\_set\_text\_sel(ta, true). It works like when you select a text on your PC with your mouse.

### **Scrollbars**

The scrollbars can shown according to different policies set by lv\_ta\_set\_sb\_mode(ta, LV\_SB\_MODE\_. ..). Learn more at the *Page* object.

### **Scroll propagation**

When the Text area is scrolled on an other scrollable object (like a Page) and the scrolling has reached the edge of the Text area, the scrolling can be propagated to the parent. In other words, when the Text area can be scrolled further, the parent will be scrolled instead.

It can be enabled with lv ta set scroll propagation(ta, true).

Learn more at the *Page* object.

### Edge flash

When the Text area is scrolled to edge a circle like flash animation can be shown if it is enabled with lv ta set edge flash(ta, true)

### Style usage

Use lv\_ta\_set\_style(page, LV\_TA\_STYLE\_..., &style) to set a new style for an element of the text area:

- LV\_TA\_STYLE\_BG background's style which uses all style.body properties. The label uses style.label from this style. (default: lv\_style\_pretty)
- LV\_TA\_STYLE\_SB scrollbar's style which uses all style.body properties (default: lv\_style\_pretty\_color)
- LV\_TA\_STYLE\_CURSOR cursor style. If NULL then the library sets a style automatically according to the label's color and font
  - LV\_CURSOR\_LINE: a style.line.width wide line but drawn as a rectangle as style.
     body. padding.top/left makes an offset on the cursor
  - LV CURSOR BLOCK: a rectangle as style.body padding makes the rectangle larger
  - $LV\_CURSOR\_OUTLINE$  : an empty rectangle (just a border) as  ${\tt style.body}$  padding makes the rectangle larger

 LV\_CURSOR\_UNDERLINE: a style.line.width wide line but drawn as a rectangle as style.body.padding.top/left makes an offset on the cursor

### **Events**

Besides the Generic events the following Special events are sent by the Slider:

- LV\_EVENT\_INSERT Sent when a character before a character is inserted. The evnet data is the text planned to insert. lv\_ta\_set\_insert\_replace(ta, "New text") replaces the text to insert. The new text can't be in a local variable which is destroyed when the event callback exists. "" means do not insert anything.
- LV\_EVENT\_VALUE\_CHANGED When the content of the text area has been changed.

### **Keys**

- LV\_KEY\_UP/DOWN/LEFT/RIGHT Move the cursor
- Any character Add the character to the current cursor position

Learn more about Keys.

### **Example**

C

A text in a Text Area

You can scroll it if the text is long enough.

code

#include "lvgl/lvgl.h"
#include <stdio.h>

(continues on next page)

(continued from previous page)

```
lv_obj_t * ta1;
static void event_handler(lv_obj_t * obj, lv_event_t event)
    if(event == LV EVENT VALUE CHANGED) {
        printf("Value: %s\n", lv_ta_get_text(obj));
    else if(event == LV_EVENT_LONG_PRESSED_REPEAT) {
        /*For simple test: Long press the Text are to add the text below*/
        const char * txt = "\n\nYou can scroll it if the text is long enough.\n";
        static uint16_t i = 0;
        if(txt[i] != '\0') {
            lv_ta_add_char(ta1, txt[i]);
            i++;
        }
    }
}
void lv_ex_ta_1(void)
    ta1 = lv_ta_create(lv_scr_act(), NULL);
    lv_obj_set_size(ta1, 200, 100);
    lv_obj_align(ta1, NULL, LV_ALIGN_CENTER, 0, 0);
    lv_ta_set_cursor_type(ta1, LV_CURSOR_BLOCK);
    lv ta set text(ta1, "A text in a Text Area");
                                                     /*Set an initial text*/
    lv_obj_set_event_cb(ta1, event_handler);
}
```

### **MicroPython**

No examples yet.

### API

## **Typedefs**

```
typedef uint8_t lv_cursor_type_t
typedef uint8_t lv_ta_style_t
```

### **Enums**

## **enum** [anonymous]

Style of text area's cursor.

Values:

## LV\_CURSOR\_NONE

No cursor

### LV CURSOR LINE

Vertical line

## LV CURSOR BLOCK

Rectangle

## LV\_CURSOR\_OUTLINE

Outline around character

### LV CURSOR UNDERLINE

Horizontal line under character

### LV CURSOR HIDDEN = 0x08

This flag can be ORed to any of the other values to temporarily hide the cursor

### enum [anonymous]

Possible text areas tyles.

Values:

## LV\_TA\_STYLE\_BG

Text area background style

## LV TA STYLE SB

Scrollbar style

## LV\_TA\_STYLE\_CURSOR

Cursor style

## LV\_TA\_STYLE\_EDGE\_FLASH

Edge flash style

## LV\_TA\_STYLE\_PLACEHOLDER

Placeholder style

#### **Functions**

## $lv\_obj\_t *lv\_ta\_create(lv\_obj\_t *par, const lv\_obj\_t *copy)$

Create a text area objects

**Return** pointer to the created text area

### Parameters

- par: pointer to an object, it will be the parent of the new text area
- copy: pointer to a text area object, if not NULL then the new object will be copied from it

### void lv ta add char( $lv \ obj \ t *ta$ , uint32 t c)

Insert a character to the current cursor position. To add a wide char, e.g. 'Á' use 'lv\_txt\_encoded\_conv\_wc('Á')'

### **Parameters**

- ta: pointer to a text area object
- C: a character (e.g. 'a')

### void $lv_ta_add_text(lv_obj_t*ta, const char*txt)$

Insert a text to the current cursor position

- ta: pointer to a text area object
- txt: a '\0' terminated string to insert

## void lv\_ta\_del\_char(lv\_obj\_t \*ta)

Delete a the left character from the current cursor position

#### **Parameters**

• ta: pointer to a text area object

## void lv\_ta\_del\_char\_forward(lv\_obj\_t \*ta)

Delete the right character from the current cursor position

#### **Parameters**

• ta: pointer to a text area object

## void lv\_ta\_set\_text(lv\_obj\_t \*ta, const char \*txt)

Set the text of a text area

#### **Parameters**

- ta: pointer to a text area
- txt: pointer to the text

## void lv\_ta\_set\_placeholder\_text(lv\_obj\_t \*ta, const char \*txt)

Set the placeholder text of a text area

### **Parameters**

- ta: pointer to a text area
- txt: pointer to the text

### void lv\_ta\_set\_cursor\_pos(lv\_obj\_t \*ta, int16\_t pos)

Set the cursor position

### Parameters

- obj: pointer to a text area object
- pos: the new cursor position in character index < 0: index from the end of the text LV TA CURSOR LAST: go after the last character

## void lv\_ta\_set\_cursor\_type(lv\_obj\_t \*ta, lv\_cursor\_type\_t cur\_type)

Set the cursor type.

### **Parameters**

- ta: pointer to a text area object
- cur type: element of 'lv\_cursor\_type\_t'

## void lv ta set cursor click pos(lv obj t\*ta, bool en)

Enable/Disable the positioning of the the cursor by clicking the text on the text area.

### Parameters

- ta: pointer to a text area object
- en: true: enable click positions; false: disable

## void lv ta set pwd mode( $lv\_obj\_t *ta$ , bool en)

Enable/Disable password mode

- ta: pointer to a text area object
- en: true: enable, false: disable

## void lv\_ta\_set\_one\_line(lv\_obj\_t \*ta, bool en)

Configure the text area to one line or back to normal

#### **Parameters**

- ta: pointer to a Text area object
- en: true: one line, false: normal

## void lv ta\_set\_text\_align(lv\_obj\_t\*ta, lv\_label\_align\_t align)

Set the alignment of the text area. In one line mode the text can be scrolled only with LV\_LABEL\_ALIGN\_LEFT. This function should be called if the size of text area changes.

### **Parameters**

- ta: pointer to a text are object
- align: the desired alignment from lv\_label\_align\_t
  (LV\_LABEL\_ALIGN\_LEFT/CENTER/RIGHT)

## void $lv_ta_set_accepted_chars(lv_obj_t*ta, const char*list)$

Set a list of characters. Only these characters will be accepted by the text area

#### **Parameters**

- ta: pointer to Text Area
- list: list of characters. Only the pointer is saved. E.g. "+-.,0123456789"

## void lv\_ta\_set\_max\_length(lv\_obj\_t \*ta, uint16\_t num)

Set max length of a Text Area.

#### **Parameters**

- ta: pointer to Text Area
- num: the maximal number of characters can be added (lv\_ta\_set\_text ignores it)

## void lv ta set insert replace(lv\_obj\_t \*ta, const char \*txt)

In LV\_EVENT\_INSERT the text which planned to be inserted can be replaced by an other text. It can be used to add automatic formatting to the text area.

## Parameters

- ta: pointer to a text area.
- txt: pointer to a new string to insert. If "" no text will be added. The variable must be live after the event\_cb exists. (Should be global or static)

## static void lv\_ta\_set\_sb\_mode(lv\_obj\_t\*ta, lv\_sb\_mode\_t mode)

Set the scroll bar mode of a text area

### **Parameters**

- ta: pointer to a text area object
- **sb\_mode**: the new mode from 'lv\_page\_sb\_mode\_t' enum

## static void lv ta set scroll propagation(lv\_obj\_t \*ta, bool en)

Enable the scroll propagation feature. If enabled then the Text area will move its parent if there is no more space to scroll.

- ta: pointer to a Text area
- en: true or false to enable/disable scroll propagation

## static void lv\_ta\_set\_edge\_flash(lv\_obj\_t \*ta, bool en)

Enable the edge flash effect. (Show an arc when the an edge is reached)

#### **Parameters**

- page: pointer to a Text Area
- en: true or false to enable/disable end flash

## void lv\_ta\_set\_style(lv\_obj\_t \*ta, lv\_ta\_style\_t type, const lv\_style\_t \*style)

Set a style of a text area

#### **Parameters**

- ta: pointer to a text area object
- type: which style should be set
- style: pointer to a style

## void $lv_ta_set_text_sel(lv_obj_t*ta, bool en)$

Enable/disable selection mode.

#### **Parameters**

- ta: pointer to a text area object
- en: true or false to enable/disable selection mode

## void lv ta set pwd show time( $lv \ obj \ t *ta$ , uint16 t time)

Set how long show the password before changing it to '\*'

#### **Parameters**

- ta: pointer to Text area
- time: show time in milliseconds. 0: hide immediately.

## void lv ta set cursor blink time(lv\_obj\_t\*ta, uint16 t time)

Set cursor blink animation time

### **Parameters**

- ta: pointer to Text area
- time: blink period. 0: disable blinking

## const char \*lv\_ta\_get\_text(const $lv\_obj\_t$ \*ta)

Get the text of a text area. In password mode it gives the real text (not '\*'s).

Return pointer to the text

### **Parameters**

• ta: pointer to a text area object

## const char \*lv ta get placeholder text(lv\_obj\_t \*ta)

Get the placeholder text of a text area

Return pointer to the text

#### **Parameters**

• ta: pointer to a text area object

## lv\_obj\_t \*lv\_ta\_get\_label(const lv\_obj\_t \*ta)

Get the label of a text area

Return pointer to the label object

### **Parameters**

• ta: pointer to a text area object

## uint16\_t lv\_ta\_get\_cursor\_pos(const lv\_obj\_t \*ta)

Get the current cursor position in character index

Return the cursor position

#### **Parameters**

• ta: pointer to a text area object

## lv\_cursor\_type\_t lv\_ta\_get\_cursor\_type(const lv\_obj\_t \*ta)

Get the current cursor type.

Return element of 'lv cursor type t'

### **Parameters**

• ta: pointer to a text area object

## bool lv ta get cursor click pos(lv\_obj\_t \*ta)

Get whether the cursor click positioning is enabled or not.

Return true: enable click positions; false: disable

### **Parameters**

• ta: pointer to a text area object

## bool $lv_ta_get_pwd_mode(const lv_obj_t*ta)$

Get the password mode attribute

Return true: password mode is enabled, false: disabled

### Parameters

• ta: pointer to a text area object

## bool lv\_ta\_get\_one\_line(const lv\_obj\_t \*ta)

Get the one line configuration attribute

Return true: one line configuration is enabled, false: disabled

## **Parameters**

• ta: pointer to a text area object

## ${\tt const~char~*lv\_ta\_get\_accepted\_chars(\it lv\_\it obj\_t~*ta)}$

Get a list of accepted characters.

Return list of accented characters.

### **Parameters**

• ta: pointer to Text Area

## ${\rm uint}16\_{\rm t}$ lv\_ta\_get\_max\_length( $\mathit{lv}\_\mathit{obj}\_\mathit{t}$ \* $\mathit{ta}$ )

Set max length of a Text Area.

**Return** the maximal number of characters to be add

### **Parameters**

• ta: pointer to Text Area

## static lv\_sb\_mode\_t lv\_ta\_get\_sb\_mode(const lv\_obj\_t \*ta)

Get the scroll bar mode of a text area

Return scrollbar mode from 'lv\_page\_sb\_mode\_t' enum

#### **Parameters**

• ta: pointer to a text area object

## static bool lv\_ta\_get\_scroll\_propagation(lv\_obj\_t \*ta)

Get the scroll propagation property

Return true or false

#### **Parameters**

• ta: pointer to a Text area

## static bool lv\_ta\_get\_edge\_flash(lv\_obj\_t \*ta)

Get the scroll propagation property

Return true or false

### **Parameters**

• ta: pointer to a Text area

## const lv\_style\_t \*lv\_ta\_get\_style(const lv\_obj\_t \*ta, lv\_ta\_style\_t type)

Get a style of a text area

**Return** style pointer to a style

### **Parameters**

- ta: pointer to a text area object
- type: which style should be get

## bool lv\_ta\_text\_is\_selected(const lv\_obj\_t \*ta)

Find whether text is selected or not.

**Return** whether text is selected or not

### **Parameters**

• ta: Text area object

## bool lv ta get text sel en(lv\_obj\_t\*ta)

Find whether selection mode is enabled.

Return true: selection mode is enabled, false: disabled

#### **Parameters**

• ta: pointer to a text area object

## uint16\_t lv\_ta\_get\_pwd\_show\_time(lv\_obj\_t \*ta)

Set how long show the password before changing it to '\*'

**Return** show time in milliseconds. 0: hide immediately.

### **Parameters**

• ta: pointer to Text area

## uint16\_t lv\_ta\_get\_cursor\_blink\_time(lv\_obj\_t \*ta)

Set cursor blink animation time

Return time blink period. 0: disable blinking

• ta: pointer to Text area

## void lv\_ta\_clear\_selection(lv\_obj\_t \*ta)

Clear the selection on the text area.

### **Parameters**

• ta: Text area object

## void lv\_ta\_cursor\_right(lv\_obj\_t \*ta)

Move the cursor one character right

### **Parameters**

• ta: pointer to a text area object

## void lv\_ta\_cursor\_left(lv\_obj\_t \*ta)

Move the cursor one character left

### **Parameters**

• ta: pointer to a text area object

## void lv\_ta\_cursor\_down(lv\_obj\_t \*ta)

Move the cursor one line down

### **Parameters**

• ta: pointer to a text area object

## void $lv_ta_cursor_up(lv_obj_t*ta)$

Move the cursor one line up

### **Parameters**

• ta: pointer to a text area object

## struct lv\_ta\_ext\_t

### **Public Members**

```
lv_page_ext_t page
lv_obj_t *label
lv_obj_t *placeholder
char *pwd_tmp
const char *accapted_chars
uint16_t max_length
uint16_t pwd_show_time
const lv_style_t *style
lv_coord_t valid_x
uint16_t pos
uint16_t blink_time
lv_area_t area
```

uint16\_t txt\_byte\_pos lv\_cursor\_type\_t type

```
uint8_t state
uint8_t click_pos
struct lv_ta_ext_t::[anonymous] cursor
uint16_t tmp_sel_start
uint16_t tmp_sel_end
uint8_t text_sel_in_prog
uint8_t text_sel_en
uint8_t pwd_mode
uint8_t one_line
```

### Tile view (lv\_tileview)

#### Overview

The Tileview a container object where its elements (called *tiles*) can be arranged in a grid form. By swiping the user can navigate between the tiles.

If the Tileview is screen sized it gives a user interface you might have seen on the smartwatches.

## Valid positions

The tiles don't have to form a full grid where every element exists. There can be holes in the grid but it has to be continuous, i.e. there can the be an empty row or column.

With  $lv\_tileview\_set\_valid\_positions(tileview, valid\_pos\_array, array\_len)$  the valid positions can be set. Scrolling will be possible only to this positions. the 0,0 index means the top left tile. E.g.  $lv\_point\_t$  valid $\_pos\_array[] = \{\{0,0\}, \{0,1\}, \{1,1\}, \{\{LV\_COORD\_MIN, LV\_COORD\_MIN\}\}$  gives a Tile view with "L" shape. It indicates that there is no tile in  $\{1,1\}$  therefore the user can't scroll there.

In other words, the  $valid_pos_array$  tells where the tiles are. It can be changed on the fly to disable some positions on specific tiles. For example, there can be a 2x2 grid where all tiles are added but the first row (y = 0) as a "main row" and the second row (y = 1) contains options for the tile above it. Let's say horizontal scrolling is possible only in the main row and not possible between the options in the second row. In this case the  $valid_pos_array$  needs to changed when a new main tile is selected:

- for the first main tile:  $\{0,0\}$ ,  $\{0,1\}$ ,  $\{1,0\}$  to disable the  $\{1,1\}$  option tile
- for the second main tile  $\{0,0\}$ ,  $\{1,0\}$ ,  $\{1,1\}$  to disable the  $\{0,1\}$  option tile

#### Add element

To add elements just create an object on the Tileview and call lv\_tileview\_add\_element(tielview, element).

The element should have the same size than the Tile view and needs to be positioned manually to the desired position.

The scroll propagation feature of page-like objects (like *List*) can be used very well here. For example, there can be a full-sized List and when it reaches the top or bottom most position the user will scroll the tile view instead.

lv\_tileview\_add\_element(tielview, element) should be used to make possible to scroll (drag) the Tileview by one its element. For example, if there is a button on a tile, the button needs to be explicitly added to the Tileview to enable the user to scroll the Tileview with the button too.

It true for the buttons on a *List* as well. Every list button and the list itself needs to be added with lv tileview add element.

### Set tile

To set the currently visible tile use lv\_tileview\_set\_tile\_act(tileview, x\_id, y\_id, LV ANIM ON/OFF).

#### **Animation time**

The animation time when a tile

- is selected with lv\_tileview\_set\_tile\_act
- is scrolled a little and then released (revert the original title)
- is scrolled more than half size and then release (move to the next tile)

can be set with lv tileview set anim time(tileview, anim time).

### Edge flash

An "edge flash" effect can be added when the tile view reached hits an invalid position or the end of tile view when scrolled.

Use lv\_tileview\_set\_edge\_flash(tileview, true) to enable this feature.

### **Styles**

The Tileview has on one style which van be changes with lv\_tileview\_set\_style(slider, LV TILEVIEW STYLE MAIN, &style).

• LV TILEVIEW STYLE MAIN Style of the background. All style.body properties are used.

### **Events**

Besides the Generic events the following Special events are sent by the Slider:

• LV\_EVENT\_VALUE\_CHANGED Sent when a new tile loaded either with scrolling or lv\_tileview\_set\_act. The event data is set ti the index of the new tile in valid\_pos\_array (It's type is uint32 t \*)

### **Keys**

- LV\_KEY\_UP, LV\_KEY\_RIGHT Increment the slider's value by 1
- LV\_KEY\_DOWN, LV\_KEY\_LEFT Decrement the slider's value by 1

Learn more about Keys.

### **Example**

C



code

```
#include "lvgl/lvgl.h"

void lv_ex_tileview_1(void)
{
    static lv_point_t valid_pos[] = {{0,0}, {0, 1}, {1,1}};
    lv_obj_t *tileview;
    tileview = lv_tileview_create(lv_scr_act(), NULL);
    lv_tileview_set_valid_positions(tileview, valid_pos, 3);
    lv_tileview_set_edge_flash(tileview, true);

lv_obj_t * tile1 = lv_obj_create(tileview, NULL);
    lv_obj_set_size(tile1, LV_HOR_RES, LV_VER_RES);
    lv_obj_set_style(tile1, &lv_style_pretty);
    lv_tileview_add_element(tileview, tile1);

/*Tile1: just a label*/
    lv_obj_t * label = lv_label_create(tile1, NULL);
    lv_label_set_text(label, "Tile 1");
    lv_obj_align(label, NULL, LV_ALIGN_CENTER, 0, 0);
```

(continues on next page)

(continued from previous page)

```
/*Tile2: a list*/
    lv_obj_t * list = lv_list_create(tileview, NULL);
    lv_obj_set_size(list, LV_HOR_RES, LV_VER_RES);
    lv_obj_set_pos(list, 0, LV_VER_RES);
    lv_list_set_scroll_propagation(list, true);
    lv_list_set_sb_mode(list, LV_SB_MODE_OFF);
    lv_tileview_add_element(list, list);
    lv_obj_t * list_btn;
    list_btn = lv_list_add_btn(list, NULL, "One");
    lv tileview add element(tileview, list btn);
    list_btn = lv_list_add_btn(list, NULL, "Two");
   lv_tileview_add_element(tileview, list_btn);
    list_btn = lv_list_add_btn(list, NULL, "Three");
    lv tileview add element(tileview, list btn);
    list btn = lv list add btn(list, NULL, "Four");
   lv_tileview_add_element(tileview, list_btn);
    list btn = lv list add btn(list, NULL, "Five");
    lv_tileview_add_element(tileview, list_btn);
   /*Tile3: a button*/
   lv_obj_t * tile3 = lv_obj_create(tileview, tile1);
    lv_obj_set_pos(tile3, LV_HOR_RES, LV_VER_RES);
    lv_tileview_add_element(tileview, tile3);
    lv obj t * btn = lv btn create(tile3, NULL);
    lv_obj_align(btn, NULL, LV_ALIGN_CENTER, 0, 0);
    label = lv_label_create(btn, NULL);
    lv_label_set_text(label, "Button");
}
```

## MicroPython

No examples yet.

## **API**

## **Typedefs**

```
typedef uint8_t lv_tileview_style_t
```

### **Enums**

```
\begin{array}{c} \textbf{enum} \ [\textbf{anonymous}] \\ Values: \end{array}
```

LV\_TILEVIEW\_STYLE\_MAIN

### **Functions**

## lv\_obj\_t \*lv\_tileview\_create(lv\_obj\_t \*par, const lv\_obj\_t \*copy)

Create a tileview objects

Return pointer to the created tileview

#### **Parameters**

- par: pointer to an object, it will be the parent of the new tileview
- copy: pointer to a tileview object, if not NULL then the new object will be copied from it

## void lv tileview add element(lv\_obj\_t \*tileview, lv\_obj\_t \*element)

Register an object on the tileview. The register object will able to slide the tileview

#### **Parameters**

- tileview: pointer to a Tileview object
- element: pointer to an object

# void lv\_tileview\_set\_valid\_positions(lv\_obj\_t \*tileview, const lv\_point\_t \*valid\_pos, uint16 t valid pos cnt)

Set the valid position's indices. The scrolling will be possible only to these positions.

### **Parameters**

- tileview: pointer to a Tileview object
- valid\_pos: array width the indices. E.g. lv\_point\_t p[] = {{0,0}, {1,0}, {1, 1}. Only the pointer is saved so can't be a local variable.
- valid\_pos\_cnt: numner of elements in valid\_pos array

$$\begin{tabular}{lll} void $\tt lv\_tileview\_set\_tile\_act($\it lv\_obj\_t$ * $\it tileview$, & $\tt lv\_coord\_t$ & $\it x$, & $\tt lv\_coord\_t$ & $\it y$ \\ & & & & & & & & & & & & & & & \\ & & & & & & & & & & & & \\ & & & & & & & & & & & & \\ & & & & & & & & & & & \\ & & & & & & & & & & & \\ & & & & & & & & & & & \\ & & & & & & & & & & & \\ & & & & & & & & & & & \\ & & & & & & & & & & \\ & & & & & & & & & & \\ & & & & & & & & & & \\ & & & & & & & & & \\ & & & & & & & & & \\ & & & & & & & & & \\ & & & & & & & & \\ & & & & & & & & \\ & & & & & & & \\ & & & & & & & \\ & & & & & & & \\ & & & & & & & \\ & & & & & & & \\ & & & & & & & \\ & & & & & & & \\ & & & & & & & \\ & & & & & & \\ & & & & & & \\ & & & & & & & \\ & & & & & & \\ & & & & & & & \\ & & & & & & \\ & & & & & & \\ & & & & & & \\ & & & & & & \\ & & & & & & \\ & & & & & & \\ & & & & & & \\ & & & & & & \\ & & & & & & \\ & & & & & & \\ & & & & & & \\ & & & & & & \\ & & & & & \\ & & & & & & \\ & & & & & \\ & & & & & \\ & & & & & \\ & & & & & \\ & & & & & \\ & & & & & \\ & & & & & \\ & & & & & \\ & & & & \\ & & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\$$

Set the tile to be shown

### **Parameters**

- tileview: pointer to a tileview object
- **x**: column id (0, 1, 2...)
- y: line id (0, 1, 2...)
- anim: LV\_ANIM\_ON: set the value with an animation; LV\_ANIM\_OFF: change the value immediately

## static void lv\_tileview\_set\_edge\_flash(lv\_obj\_t\*tileview, bool en)

Enable the edge flash effect. (Show an arc when the an edge is reached)

### **Parameters**

- tileview: pointer to a Tileview
- en: true or false to enable/disable end flash

## **static** void **lv\_tileview\_set\_anim\_time**(lv\_obj\_t\*tileview, uint16\_t anim\_time)

Set the animation time for the Tile view

- tileview: pointer to a page object
- anim time: animation time in milliseconds

# void lv\_tileview\_set\_style(lv\_obj\_t \*tileview, lv\_tileview\_style\_t type, const lv\_style\_t \*style)

Set a style of a tileview.

### **Parameters**

- tileview: pointer to tileview object
- type: which style should be set
- style: pointer to a style

## static bool lv\_tileview\_get\_edge\_flash(lv\_obj\_t\*tileview)

Get the scroll propagation property

Return true or false

### **Parameters**

• tileview: pointer to a Tileview

## static uint16\_t lv\_tileview\_get\_anim\_time(lv\_obj\_t\*tileview)

Get the animation time for the Tile view

Return animation time in milliseconds

### **Parameters**

• tileview: pointer to a page object

Get style of a tileview.

Return style pointer to the style

### **Parameters**

- tileview: pointer to tileview object
- type: which style should be get

## struct lv\_tileview\_ext\_t

## **Public Members**

```
lv_page_ext_t page
const lv_point_t *valid_pos
uint16_t valid_pos_cnt
uint16_t anim_time
lv_point_t act_id
uint8_t drag_top_en
uint8_t drag_bottom_en
uint8_t drag_left_en
uint8_t drag_right_en
uint8_t drag_hor
uint8_t drag_ver
```

## Window (lv\_win)

### Overview

The windows are one of the most complex container-like objects. They are built from two main parts:

- 1. a header *Container* on the top
- 2. a Page for the content below the header.

### **Title**

On the header, there is a title which can be modified by: lv\_win\_set\_title(win, "New title"). The title always inherits the style of the header.

### **Control buttons**

You can add control buttons to the right side of the header with: lv\_win\_add\_btn(win,
LV\_SYMBOL\_CLOSE). The second parameter is an *Image* source.

lv win close event cb can be used as an event callback to close the Window.

You can modify the size of the control buttons with the lv\_win\_set\_btn\_size(win, new\_size) function.

### **Scrollbars**

The scrollbar behavior can be set by lv\_win\_set\_sb\_mode(win, LV\_SB\_MODE\_...). See Page for details.

### Manual scroll and focus

To scroll the Window directly you can use lv\_win\_scroll\_hor(win, dist\_px) or lv win scroll ver(win, dist px).

To make the Window show an object on it use lv win focus(win, child, LV ANIM ON/OFF).

The time of scroll and focus animations can be adjusted with  $lv\_win\_set\_anim\_time(win, anim\_time\_ms)$ 

### Layout

To set a layout for the content use <code>lv\_win\_set\_layout(win, LV\_LAYOUT\_...)</code>. See *Container* for details.

### Style usage

Use lv\_win\_set\_style(win, LV\_WIN\_STYLE\_..., &style) to set a new style for an element of the Window:

- LV\_WIN\_STYE\_BG main background which uses all style.body properties (header and content page are placed on it) (default: lv style plain)
- LV\_WIN\_STYLE\_CONTENT content page's scrollable part which uses all style.body properties (default: lv\_style\_transp)
- LV\_WIN\_STYLE\_SB scroll bar's style which uses all style.body properties. left/top padding sets the scrollbars' padding respectively and the inner padding sets the scrollbar's width. (default: lv style pretty color)
- LV\_WIN\_STYLE\_HEADER header's style which uses all style.body properties (default: lv\_style\_plain\_color)
- LV\_WIN\_STYLE\_BTN\_REL released button's style (on header) which uses all style.body properties (default: lv\_style\_btn\_rel)
- LV\_WIN\_STYLE\_BTN\_PR released button's style (on header) which uses all style.body properties (default: lv\_style\_btn\_pr)

### **Events**

Only the Generic events are sent by the object type.

Learn more about *Events*.

## **Keys**

The following Keys are processed by the Page:

• LV\_KEY\_RIGHT/LEFT/UP/DOWN Scroll the page

Learn more about Keys.

## **Example**

C



This is the content of the window

You can add control buttons to the window header

The content area becomes automatically scrollable is it's large enough.

```
code
```

```
#include "lvgl/lvgl.h"
void lv_ex_win_1(void)
    /*Create a window*/
    lv_obj_t * win = lv_win_create(lv_scr_act(), NULL);
    lv win set title(win, "Window title");
                                                                    /*Set the title*/
    /*Add control button to the header*/
    lv_obj_t * close_btn = lv_win_add_btn(win, LV_SYMBOL_CLOSE);
                                                                             /*Add...
→close button and use built-in close action*/
   lv_obj_set_event_cb(close_btn, lv_win_close_event_cb);
    lv win add btn(win, LV SYMBOL SETTINGS); /*Add a setup button*/
    /*Add some dummy content*/
    lv_obj_t * txt = lv_label_create(win, NULL);
    lv_label_set_text(txt, "This is the content of the window\n\n"
                            "You can add control buttons to\\mathbf{n}"
                            "the window header\n\n"
                            "The content area becomes automatically \ensuremath{\mathbf{n}}"
                            "scrollable is it's large enough.\n\"
                            " You can scroll the content\n"
                            "See the scroll bar on the right!");
}
```

### MicroPython

No examples yet.

### **API**

## **Typedefs**

## typedef uint8\_t lv\_win\_style\_t

### **Enums**

## enum [anonymous]

Window styles.

Values:

### LV WIN STYLE BG

Window object background style.

## LV WIN STYLE CONTENT

Window content style.

## LV WIN STYLE SB

Window scrollbar style.

## LV\_WIN\_STYLE\_HEADER

Window titlebar background style.

## LV\_WIN\_STYLE\_BTN\_REL

Same meaning as ordinary button styles.

LV\_WIN\_STYLE\_BTN\_PR

### **Functions**

$$lv\_obj\_t *lv\_win\_create(lv\_obj\_t *par, const lv\_obj\_t *copy)$$

Create a window objects

Return pointer to the created window

### **Parameters**

- par: pointer to an object, it will be the parent of the new window
- copy: pointer to a window object, if not NULL then the new object will be copied from it

### void lv win clean(lv\_obj\_t \*obj)

Delete all children of the scrl object, without deleting scrl child.

### **Parameters**

• **obj**: pointer to an object

## $lv\_obj\_t *lv\_win\_add\_btn(lv\_obj\_t *win, const void *img\_src)$

Add control button to the header of the window

**Return** pointer to the created button object

- win: pointer to a window object
- img\_src: an image source ('lv\_img\_t' variable, path to file or a symbol)

## $\label{eq:cose_event_cb} \ \ void \ \ \textbf{lv\_win\_close\_event\_cb} \ (\textit{lv\_obj\_t *btn}, \ \textit{lv\_event\_t event})$

Can be assigned to a window control button to close the window

#### **Parameters**

- btn: pointer to the control button on teh widows header
- evet: the event type

## void lv\_win\_set\_title(lv\_obj\_t \*win, const char \*title)

Set the title of a window

#### **Parameters**

- win: pointer to a window object
- title: string of the new title

## void lv\_win\_set\_btn\_size(lv\_obj\_t \*win, lv\_coord\_t size)

Set the control button size of a window

Return control button size

#### **Parameters**

• win: pointer to a window object

## void lv\_win\_set\_layout(lv\_obj\_t \*win, lv\_layout\_t layout)

Set the layout of the window

#### **Parameters**

- win: pointer to a window object
- layout: the layout from 'lv layout t'

## $void lv\_win\_set\_sb\_mode(lv\_obj\_t *win, lv\_sb\_mode\_t sb\_mode)$

Set the scroll bar mode of a window

#### **Parameters**

- win: pointer to a window object
- sb mode: the new scroll bar mode from 'lv sb mode t'

## void lv\_win\_set\_anim\_time(lv\_obj\_t \*win, uint16\_t anim\_time)

Set focus animation duration on lv win focus()

#### **Parameters**

- win: pointer to a window object
- anim time: duration of animation [ms]

## $\label{eq:const_void_lv_win_style} void \ \textbf{lv\_win\_style\_} t \ *win, \ lv\_win\_style\_t \ type, \ \textbf{const} \ \text{lv\_style\_} t \ *style \textbf{)}$

Set a style of a window

### **Parameters**

- win: pointer to a window object
- type: which style should be set
- style: pointer to a style

## void lv\_win\_set\_drag(lv\_obj\_t \*win, bool en)

Set drag status of a window. If set to 'true' window can be dragged like on a PC.

- win: pointer to a window object
- en: whether dragging is enabled

## const char \*lv\_win\_get\_title(const lv\_obj\_t \*win)

Get the title of a window

Return title string of the window

#### **Parameters**

• win: pointer to a window object

## lv\_obj\_t \*lv\_win\_get\_content(const lv\_obj\_t \*win)

Get the content holder object of window (lv page) to allow additional customization

Return the Page object where the window's content is

### **Parameters**

• win: pointer to a window object

## lv\_coord\_t lv\_win\_get\_btn\_size(const lv\_obj\_t \*win)

Get the control button size of a window

Return control button size

#### **Parameters**

• win: pointer to a window object

## lv\_obj\_t \*lv\_win\_get\_from\_btn(const lv\_obj\_t \*ctrl\_btn)

Get the pointer of a widow from one of its control button. It is useful in the action of the control buttons where only button is known.

Return pointer to the window of 'ctrl\_btn'

### **Parameters**

• ctrl btn: pointer to a control button of a window

## lv\_layout\_t lv\_win\_get\_layout(lv\_obj\_t \*win)

Get the layout of a window

**Return** the layout of the window (from 'lv\_layout\_t')

### **Parameters**

• win: pointer to a window object

## $lv\_sb\_mode\_t$ $lv\_win\_get\_sb\_mode(lv\_obj\_t*win)$

Get the scroll bar mode of a window

**Return** the scroll bar mode of the window (from 'lv sb mode t')

### **Parameters**

• win: pointer to a window object

## uint16 t lv win get anim time(const lv\_obj\_t \*win)

Get focus animation duration

**Return** duration of animation [ms]

## Parameters

• win: pointer to a window object

## lv\_coord\_t lv\_win\_get\_width(lv\_obj\_t \*win)

Get width of the content area (page scrollable) of the window

**Return** the width of the content area

#### **Parameters**

• win: pointer to a window object

## const lv\_style\_t \*lv\_win\_get\_style(const lv\_obj\_t \*win, lv\_win\_style\_t type)

Get a style of a window

Return style pointer to a style

### **Parameters**

- win: pointer to a button object
- type: which style window be get

## static bool lv\_win\_get\_drag(const lv\_obj\_t \*win)

Get drag status of a window. If set to 'true' window can be dragged like on a PC.

**Return** whether window is draggable

#### **Parameters**

• win: pointer to a window object

## void $lv\_win\_focus(lv\_obj\_t*win, lv\_obj\_t*obj, lv\_anim\_enable\_t anim\_en)$

Focus on an object. It ensures that the object will be visible in the window.

### **Parameters**

- win: pointer to a window object
- **obj**: pointer to an object to focus (must be in the window)
- anim\_en: LV\_ANIM\_ON focus with an animation; LV\_ANIM\_OFF focus without animation

## static void lv win scroll hor(lv\_obj\_t \*win, lv\_coord\_t dist)

Scroll the window horizontally

### **Parameters**

- win: pointer to a window object
- **dist**: the distance to scroll (< 0: scroll right; > 0 scroll left)

## static void lv\_win\_scroll\_ver(lv\_obj\_t \*win, lv\_coord\_t dist)

Scroll the window vertically

### **Parameters**

- win: pointer to a window object
- dist: the distance to scroll (< 0: scroll down; > 0 scroll up)

## struct lv\_win\_ext\_t

### **Public Members**

lv\_obj\_t \*page

lv\_obj\_t \*header

```
lv_obj_t *title
const lv_style_t *style_btn_rel
const lv_style_t *style_btn_pr
lv_coord_t btn_size
```