LittlevGL documentation (Turkish)

Table of contents

Hoşgeldiniz Porting **PC** Simulator Nesneler Biçimler Giriş Aygıtları Renkler Fontlar Çizimler Animasyon Kodlama Kılavuzu Nesne Türleri Anahtar (lv_sw) Açılır liste (lv_ddlist) Buton (lv_btn) Buton matrisi (lv_btnm) Çizge (lv_chart) Çizgi (lv_line) Çizgi ölçer (lv_lmeter) Etiket (lv_label) Kaydırıcı (lv_slider) Klavye (lv_kb) Konteynır (lv_cont) LED (lv_led) Liste (lv_list) Mesaj kutusu (lv_mbox) Onay kutusu (lv_cb) Önyükleyici (lv_preload) Pencere (lv_window) Resim (lv_img) Resim buton (lv_imgbtn) Sarma çubuğu (lv_roller) Sayfa (lv_page) Sekme görünümü (lv_tabview) Sütun (lv_bar) Takvim (lv_calendar) Tartı (lv_gauge) Temel nesne (lv_obj) Yay (lv_arc) Yazı alanı (lv_ta)

Hoşgeldiniz

Written for v5.3, revision 2



Welcome LittlevGL Embedded GUI Library



LittlevGL is a free and open-source graphics library providing everything you need to create embedded GUI with easy-to-use graphical elements, beautiful visual effects and low memory footprint.

Key features

- Powerful building blocks buttons, charts, lists, sliders, images, etc.
- Advanced graphics with animations, anti-aliasing, opacity, smooth scrolling
- Various input devices touch pad, mouse, keyboard, encoder, buttons, etc.
- Multi-language support with UTF-8 encoding
- Fully customizable graphical elements
- Hardware independent to use with any microcontroller or display
- Scalable to operate with little memory (50 kB Flash, 10 kB RAM)
- OS, External memory and GPU supported but not required
- Single frame buffer operation even with advances graphical effects
- Written in C for maximal compatibility
- Simulator to develop on PC without embedded hardware
- Tutorials, examples, themes for rapid development

How to get started?

Read the documentation

Reading the documentation first is always a good idea. Don't be afraid it takes only a little time to learn the basics.

You can start here with Porting or with an Introduction to the library.

Tutorial

There is a tutorial to show you the most important parts step-by-step.

It's located in the lv_examples repository

Try LittlevGL in a PC simulator

If you don't have an embedded hardware with a display yet you can try the library on PC. The PC simulator uses a window on your monitor to simulate a display and uses your mouse to click on that display.

The simulator is works with Windows, Linux, and OSX as well.

Here you can learn how to set-up the simulator: PC simulator

Contribute

Use GitHub's issue tracker to:


- Report bugs
- Suggest new features
- Add new features
- Help others

Before contributing, read the related document: CONTRIBUTING

Porting

Written for v5.2

System architecture

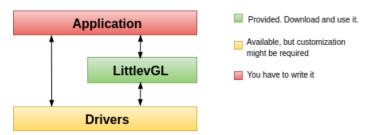

Application

Your application which creates the GUI and handles the specific tasks.

LittlevGL

The graphics library itself. Your application can communicate with the library to create a GUI. It contains a HAL (Hardware Abstraction Layer) interface to register your display and input device drivers.

Driver

Besides your specific drivers, it contains functions to drive your display, optionally to a GPU and to read the touchpad or buttons.

There are **two typical hardware set-ups** depending on the MCU has an LCD/TFT driver periphery or not. In both cases, a frame buffer will be required to store the current image of the screen.

MCU with TFT/LCD driver

If your MCU has a TFT/LCD driver periphery then you can connect a display directly via RGB interface. In this case, the frame buffer can be in the internal RAM (if the MCU has a memory interface).

External display controller

If the MCU doesn't have TFT/LCD driver then an external display controller (E.g. SSD1963, SSD1306, ILI9341) has to be used. In this case, the MCU can communicate with the display controller via Parallel port, SPI or sometimes I2C. The frame buffer is usually located in the display controller which saves a lot of RAM for the MCU.

Requirements

- 16, 32 or 64 bit microcontroller or processor
- 16 MHz clock speed
- 8 kB RAM for static data and >2 KB RAM for dynamic data (graphical objects)
- 64 kB program memory (flash)
- Optionally ~1/10 screen sized memory for internal buffering (at 240 × 320, 16 bit colors it means 15 kB)

The LittlevGL is designed to be highly portable and to not use any external resources:

- No external RAM required (but supported)
- No float numbers are used
- No GPU needed (but supported)
- Only a single frame buffer is required located in:
 - Internal RAM or

- External RAM or
- External display controller's memory

If you would like to reduce the required hardware resources you can:

- Disable the unused object types to save RAM and ROM
- · Change the size of the graphical buffer to save RAM
- Use simpler styles to reduce the rendering time

Project set-up

Get the library

The Littlev Graphics Library is available on GitHub: https://github.com/littlevgl/lvgl. You can clone or download the latest version of the library from here or you can use the Download page as well.

The graphics library is the **lvgl** directory which should be copied into your project.

Config file

There is a configuration header file for LittlevGL: **Iv_conf.h**. It sets the library's basic behavior in compile time, disable unused modules and features and adjust the size of memory buffers etc.

Copy _lvgl/lv_conf_templ.h_ next to the *lvgl* directory and rename it to _lv_conf.h_. Open the file and delete the first *#if* and the last *#endif* to enable the content. In the config file comments explain the meaning of the options. Check at least these three config options and modify them according to your hardware:

- 1. LV_HOR_RES Your display's horizontal resolution
- 2. LV_VER_RES Your display's vertical resolution
- 3. LV_COLOR_PETH 8 for (RG332), 16 for (RGB565) or 32 for (RGB888 and ARGB8888).

Initialization

In order to use the graphics library you have to initialize it and the other components too. To order of the initialization is:

- 1. Call _lv_init()_
- 2. Initialize your drivers
- 3. Register the display and input devices drivers in LittlevGL. (see below)

Porting the library

To adopt LittlevGL into your project firstly you have to provide some functions and register them in the graphics library.

Display interface

To set up a display an <code>lv_disp_drv_t</code> variable has to be initialized:

```
lv_disp_drv_t disp_drv;
lv_disp_drv_init(&disp_drv); /*Basic initialization*/
disp_drv. ...=...; /*Initialize the fields here. See below.*/
disp_drv_register(&disp_drv); /*Register the driver in LittlevGL*/
```

You can configure the driver for different operation modes. To learn more about the drawing modes visit Drawing and rendering.

Internal buffering (VDB)

The graphics library works with an internal buffering mechanism to create advances graphics features with only one frame buffer. The internal buffer is called VDB (Virtual Display Buffer) and its size can be adjusted in Iv_conf.h with _LV_VDB_SIZE_. When _LV_VDB_SIZE_ > 0 then the

internal buffering is used and you have to provide a function which flushes the buffer's content to your display:

```
disp_drv.disp_flush = my_disp_flush;
...
void my_disp_flush(int32_t x1, int32_t y1, int32_t x2, int32_t y2, const lv_color_t* color_p)
{
    /*TODO Copy 'color_p' to the specified area*/
    /*Call 'lv_fluh_ready()' when ready*/lv_flush_ready();
}
```

In the flush function, you can use DMA or any hardware to do the flushing in the background, but when the flushing is ready you have to call

```
lv_flush_ready();
```

Hardware acceleration (GPU)

First of all using GPU is totally optional. But if your MCU supports graphical acceleration then you can use it. The _mem_blend_ and _mem_fill_fields of the display driver is used to interface with a GPU. The GPU related functions can be used only if internal buffering (VDB) is enabled.

Unbuffered drawing

It is possible to draw directly to a frame buffer when the internal buffering is disabled (LV VDB SIZE = 0).

```
disp_drv.disp_fill = my_disp_fill;/*Fill an area in the frame buffer*/
disp_drv.disp_map = my_disp_map;/*Copy a color_map (e.g. image) into the frame buffer*/
...
void my_disp_map(int32_t x1,int32_t y1,int32_t x2,int32_t y2,constlv_color_t* color_p)
{
    /*TODO Copy 'color_p' to the specified area*/
}

voidmy_disp_fill(int32_t x1,int32_t y1,int32_t x2,int32_t y2,lv_color_t color)
{
    /*TODO Fill the specified area with 'color'*/
}
```

Keep in mind this way during refresh some artifacts can be visible because the layers are drawn after each other. And some high-level graphics features like anti-aliasing, opacity or shadows aren't available in this configuration.

If you use an external display controller which supports accelerated filling (e.g. RA8876) then you can use this feature in _disp_fill()_

Input device interface

To set up an input device an Iv_indev_drv_t variable has to be initialized:

```
lv_indev_drv_t indev_drv;lv_indev_drv_init(&indev_drv); /*Basic initialization*/
indev_drv.type =.../*See below.*/
indev_drv.read =.../*See below.*/
lv_indev_drv_register(&indev_drv); /*Register the driver in LittlevGL*/
```

type can be

- LV INDEV TYPE POINTER: touchpad or mouse
- LV_INDEV_TYPE_KEYPAD: keyboard
- LV_INDEV_TYPE_ENCODER: left, right, push
- LV INDEV TYPE BUTTON: external buttons pressing the screen

read is a function pointer which will be called periodically to report the current state of an input device. It can also buffer data and return *false* when no more data to be read or *true* when the buffer is not empty.

To learn more about input devices visit Input devices.

Touchpad, mouse or any pointer

```
indev_drv.type = LV_INDEV_TYPE_POINTER;
indev_drv.read = my_input_read;
```

The read function should look like this:

```
bool my_input_read(lv_indev_data_t*data)
{
    data->point.x = touchpad_x;
    data->point.y = touchpad_y;
    data->state = LV_INDEV_STATE_PR or LV_INDEV_STATE_REL;
    return false; /*No buffering so no more data read*/
}
```

IMPORTANT NOTE: Touchpad drivers must return the last X/Y coordinates even when the state is LV_INDEV_STATE_REL.

Keypad or keyboard

```
indev_drv.type = LV_INDEV_TYPE_KEYPAD;
indev_drv.read = my_input_read;
```

The read function should look like this:

To use a keyboard:

- Register a read function (like above) with _LV_INDEV_TYPE_KEYPAD_ type.
- _USE_LV_GROUP_ has to be enabled in _lv_conf.h_
- An object group has to be created: _lv_group_create()_ and objects have to be added: _lv_group_add_obj()_
- The created group has to be assigned to an input device: _lv_indev_set_group(my_indev, group1);_
- Use _LV_GROUP_KEY_..._ to navigate among the objects in the group

Visit Touchpad-less navigation to learn more.

Encoder

With an encoder you can do 4 things:

- 1. press its button
- 2. long press its button
- 3. turn left
- 4. turn right

By turning the encoder you can focus on the next/previous object. When you press the encoder on a simple object (like a button), it will be clicked. If you press the encoder on a complex object (like a list, message box etc.) the object will go to edit mode where by turning the encoder you can navigate inside the object. To leave edit mode press long the button.

```
indev_drv.type = LV_INDEV_TYPE_ENCODER;
indev_drv.read = my_input_read;
```

The read function should look like this:

```
bool encoder_read(lv_indev_data_t*data) {
  data->enc_diff = enc_get_new_moves();
  if(enc_pressed()) {
    data->state = LV_INDEV_STATE_PR;
  }
  else{
    data->state = LV_INDEV_STATE_REL;
  }
  return false; /*No buffering so no more data read*/
}
```

• To use an **ENCODER**, similarly to the **KEYPAD**, the objects should be added to groups

Button

```
indev_drv.type = LV_INDEV_TYPE_BUTTON;
indev_drv.read = my_input_read;
```

The read function should look like this:

• The buttons need to be assigned to pixels on the screen using <code>lv_indev_set_button_points(indev, points_array)</code> . Where <code>_points_array_look like const lv_point_t points_array[] = { {12,30},{60,90}, ...}</code>

Tick interface

The LittlevGL uses a system tick. Call the lv_tick_inc(tick_period) function periodically and tell the call period in milliseconds. For example if called in every milliseconds: lv_tick_inc(1) .

Task handling

To handle the tasks of LittlevGL you need to call lv_task_handler() periodically in one of the following:

- while(1) of main() function
- · timer interrupt periodically
- an OS task periodically

The timing is not critical but it should be about 5 milliseconds to keep the system responsive.

Example:

```
while(1) {
  lv_task_handler();
  my_delay_ms(5);
}
```

The MCU can go to sleep when no user input happens. In this case the main while(1) should look like this:

You should also add these lines to your input device read function if a press happens:

In addition to $[v_{indev_get_inactive_time()}]$ you can check $[v_{anim_count_running()}]$ to see if every animations are finished.

Using with an operating system

LittlevGL is not thread-safe. Despite it, it's quite simple to use LittlevGL inside an operating system.

The **simple scenario** is to don't use the operating system's tasks but use <code>lv_task</code> s. An <code>_lv_task_</code> is a function called periodically in <code>lv_task_handler</code>. In the <code>_lv_task_</code> you can get the state of the sensors, buffers etc and call LittlevGL functions to refresh the GUI. To create an <code>_lv_task_use</code>: <code>lv_task_create(my_func, period_ms, Lv_task_prio_Lowest/Low/MID/HIGH/HIGHEST, custom_ptr)</code>

If you need to **use other task or threads** you need one mutex which should be taken before calling <code>lv_task_handler</code> and released after it. In addition, you have to use to that mutex in other tasks and threads around every LittlevGL (<code>lv_...</code>) related code. This way you can use LittlevGL in a real multitasking environment. Just use a mutex to avoid concurrent calling of LittlevGL functions.

Porting example

Here you will find an example porting code: Porting tutorial.

PC Simulator

Written for v5.1

You can try out the Littlev Graphics Library **using only your PC** without any development board. Write a code, run it on the PC and see the result on the monitor. It is cross-platform: Windows, Linux and OSX are supported!

- · Needs only few minutes setup
- . Costs \$0. No PCB cost and no pay for any software
- A TFT display is simulated and shown on the monitor of your PC
- The touch pad is replaced by your mouse
- · The written code is portable, you can simply copy it when using an embedded hardware

Install Eclipse CDT

Eclipse CDT is C/C++ IDE. You can use other IDEs as well but in this tutorial the configuration for Eclipse CDT is shown.

Eclipse is a Java based software therefore be sure Java Runtime Environment is installed on your system.

On Debian-based distros (e.g. Ubuntu): sudo apt-get install default-jre

You can download Eclipse's CDT from: https://eclipse.org/cdt/. Start the installer and choose Eclipse CDT from the list.

Install SDL 2

The PC simulator uses the SDL 2 cross platform library to simulate a TFT display and a touch pad.

Linux

On Linux you can easily install SDL2 using a terminal:

- 1. Find the current version of SDL2: apt-cache search libsdl2 (e.g. libsdl2-2.0-0)
- 2. Install SDL2: sudo apt-get install libsdl2-2.0-0 (replace with the found version)
- 3. Install SDL2 development package: ${\tt sudo\ apt-get\ install\ 1ibsdl2-dev}$
- 4. If build essentials are not installed yet: sudo apt-get install build-essential

Windows

If you are using Windows firstly you need to install MinGW (64 bit version). After it do the following steps to add SDL2:

- 1. Download the development libraries of SDL.

 Go to https://www.libsdl.org/download-2.0.php and download *Development Libraries: SDL2-devel-2.0.5-mingw.tar.gz*
- 2. Uncompress the file and go to _x86_64-w64-mingw32_ directory (for 64 bit MinGW) or to i686-w64-mingw32 (for 32 bit MinGW)
- 3. Copy _...mingw32/include/SDL2 folder to _C:/MinGW/.../x86_64-w64-mingw32/include_
- 4. Copy _...mingw32/lib/ content to _C:/MinGW/.../x86_64-w64-mingw32/lib_
- 5. Copy _...mingw32/bin/SDL2.dll to _{eclipse_worksapce}/pc_simulator/Debug/_. Do it later when Eclipse is installed.

Note: If you will use Microsoft Visual Studio instead of Eclipse then you don't have to install MinGW.

osx

On **OSX** you can easily install SDL2 with brew: brew install sdl2

If something is not working I suggest this tutorial to get started with SDL.

Pre-configured project

A pre-configured graphics library project (based on the latest release) is always available in PC simulator project. You can find it on GitHub or on the Download page. The project is configured for Eclipse CDT.

Add the pre-configured project to Eclipse CDT

Run Eclipse CDT. It will show a dialogue about the **workspace path**. Before accepting it check that path and copy (and unzip) the downloaded pre-configured project there. Now you can accept the workspace path. Of course you can modify this path but in that case copy the project to that location.

Close the start up window and go to File->Import and choose General->Existing project into Workspace. Browse the root directory of the project and click Finish

On Windows you have to do two additional things:

- Copy the SDL2.dll into the project's Debug folder
- Righ click on the project -> Project properties -> C/C++ Build -> Settings -> Libraries -> Add ... and add *mingw32* above SDLmain and SDL. (The order is important: mingw32, SDLmain, SDL)

Compile and Run

Now you are ready to run the Littlev Graphics Library on your PC. Click on the Hammer Icon on the top menu bar to Build the project. If you have done everything right you will not get any errors. Note that on some systems additional steps might be required to "see" SDL 2 from Eclipse but in most of cases the configurtions in the downloaded project is enough.

After a success build click on the Play button on the top menu bar to run the project. Now a window should appear in the middle of your screen.

Now everything is ready to use the Littlev Graphics Library in the practice or begin the development on your PC.

Next step

To create your first LittlevGL GUI you should read the pages below Porting in the sidebar.

Nesneler

Written for v5.1

In the Littlev Graphics Library the **basic building blocks** of a user interface are the objects. For example:

- Button
- Label
- Image
- List
- Chart
- Text area

Click to check all the existing Object types

Object attributes

Basic attributes

The objects have basic attributes which are common independently from their type:

- Position
- Size
- Parent
- Drag enable
- · Click enable etc.

You can set/get this attributes with lv_obj_set_... and lv_obj_get_... functions. For example:

```
/*Set basic object attributes*/
lv_obj_set_size(btn1, 100, 50); /*Button size*/
lv_obj_set_pos(btn1, 20,30); /*Button position*/
```

To see all the available functions visit the Base object's documentation.

Specific attributes

The object types have special attributes. For example a slider have:

- Min. max. values
- Current value
- · Callback function for new value set
- Styles

For these attributes every object type have unique API functions. For example for a slider:

Object's working mechanisms

Parent-child structure

A parent can be considered as the container of its children. Every object has exactly one parent object (except screens) but a parent can have unlimited number of children. There is no limitation for the type of the parent but there typically parent (e.g. button) and typical child (e.g. label)

objects.

Screen - the most basic parent

The screen is a special object which has no parent object. Always there is an active screen. By default, the library creates and loads one. To get the currently active screen use the lv_scr_act() function.


A screen can be created with any object type, for example, a basic object or an image to make a wallpaper.

Moving together

If the position of the parent is changed the children will move with the parent. Therefore all positions are relative to the parent. So the (0;0) coordinates mean the objects will remain in the top left-hand corner of the parent independently from the position of the parent.




Modify the position of the parent:

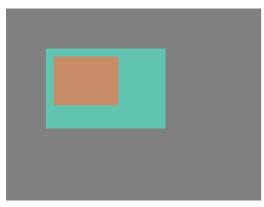

Visibility only on parent

If a child partially or totally out of its parent then the parts outside will not be visible.

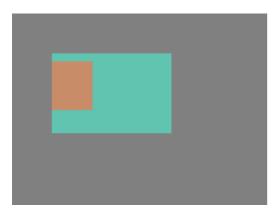

Create - delete objects

In the graphics library objects can be created and deleted dynamically in run-time. It means only the currently created objects consume RAM. For example, if you need a chart you can create it only when it is required and delete after it is used.

Every objects type has its own **create** function with an unified prototype. It needs two parameters: a pointer the parent object and optionally a pointer to an other object with the same type. If the second parameter is not *NULL* then this objects will be copied to the new one. To create a screen give *NULL* as parent. The return value of the create function is a pointer to the created object. Independently from the object type a common variable type **Iv_obj_t** is used. This pointer can be used later to set or get the attributes of the object. The create functions look like this:

```
lv_obj_t * lv_type_create(lv_obj_t * parent, lv_obj_t * copy);
```

There is a common delete function for all object types. It deletes the object and all of its children.

```
void lv_obj_del(lv_obj_t * obj);
```

You can delete only the children of an object but leave the object itself "alive":

```
void lv_obj_clean(lv_obj_t * obj);
```

Layers

The earlier created object (and its children) will be drawn earlier (nearer to the background). In other words, the lastly created object will be on the top among its siblings. It is very important, the order is calculated among the objects on the same level ("siblings").

Layers can be added easily by creating 2 objects (which can be transparent) firstly 'A' and secondly 'B'. 'A' and every object on it will be in the background and can be covered by 'B' and its children.



```
/*Create a screen*/
lv_obj_t * scr = lv_obj_create(NULL, NULL);
lv_scr_load(scr);
                                                    /*Load the screen*/
/*Create 2 buttons*/
lv_obj_t * btn1 = lv_btn_create(scr, NULL);
                                                   /*Create a button on the screen*/
lv_btn_set_fit(btn1, true, true);
                                                   /*Enable to automatically set the size according to the content*/
lv_obj_set_pos(btn1, 60, 40);
                                                      /*Set the position of the button*/
lv_obj_t * btn2 = lv_btn_create(scr, btn1);
                                                   /*Copy the first button*/
lv_obj_set_pos(btn2, 180, 80);
/*Add labels to the buttons*/
lv_obj_t * label1 = lv_label_create(btn1, NULL);
                                                   /*Create a label on the first button*/
lv label set text(label1, "Button 1");
                                                    /*Create a label on the second button*/
lv_obj_t * label2 = lv_label_create(btn2, NULL);
lv_label_set_text(label2, "Button 2");
                                                      /*Set the text of the label*/
/*Delete the second label*/
lv obi del(label2);
```

Giriş Aygıtları

Written for v5.1

To interact with the created object *Input devices* are required. For example Touchpad, Mouse, Keyboard or even an Encoder. To learn how to add an input device, read the Porting guide.

When you register an input device driver the library adds some extra information to it to describe the state of the input device in more detail. When a user action (e.g. a button press) happens and an action (callback) function is triggered always there is an input device which triggered that action. You can get this input device with

```
lv_indev_t *indev = lv_indev_get_act();
```

It might be important when you need to know some special information about the input device like the currently pressed point, or dragging an object or not etc.

The input devices have a very simple API:

```
/*Get the last point on a display input*/
void lv_indev_get_point(lv_indev_t * indev, point_t * point);
/*Check if there is dragging on input device or not */
bool lv indev is dragging(lv indev t * indev);
/*Get the vector of dragging on a input device*/
void lv_indev_get_vect(lv_indev_t * indev, point_t * point);
void lv_indev_wait_release(lv_indev_t * indev);
/*Do nothing until the next release*/
void lv_indev_wait_release(lv_indev_t * indev);
/*Reset one or all (use NULL) input devices*/
void lv_indev_reset(lv_indev_t * indev);
/*Reset the long pressed state of an input device*/
void lv_indev_reset_lpr(lv_indev_t * indev);
/*Set a cursor for a pointer input device*/
void lv_indev_set_cursor(lv_indev_t * indev, lv_obj_t * cur_obj);
/*Set a destination group for a keypad input device*,
void lv_indev_set_group(lv_indev_t * indev, lv_group_t * group);
```

Touchpad-less navigation

The objects can be grouped in order to easily control them without touchpad or mouse. It allows you to use

- Keyboard or keypad
- Hardware buttons
- Encoder

to navigate among objects.

Firstly you have to **create an object group** with <code>lv_group_t *group = lv_group_create()</code> and add objects to it with <code>lv_group_add_obj(group, obj)</code>. In a group always there is a *focused* object. All the button press will be "sent" to the currently focused object.

To navigate among the objects in a group (change the focused object) and interact with them an _LV_INDEV_TYPE_KEYPAD_ typed input device is required. In its *read* function you can tell the library which key is pressed or released. To learn how to add an input device, read the Porting guide.

Besides you have to assign the group to the input device with

```
lv_indev_set_group(indev, group)
```

There are some special **control characters** which can be used in the *read* function:

- LV_GROUP_KEY_NEXT Focus on the next object
- LV_GROUP_KEY_PREV Focus on the previous object
- LV_GROUP_KEY_UP Increment the value, move up or click the focused object (move up means e.g. select an upper list element)
- . LV_GROUP_KEY_DOWN Decrement the value or move down on the focused object (move down means e.g. select a lower list element)
- LV_GROUP_KEY_RIGHT Increment the value or click the focused object
- LV_GROUP_KEY_LEFT Decrement the value of the focused object
- LV_GROUP_KEY_ENTER Click the focused object or a selected element (e.g. list element)
- LV_GROUP_KEY_ESC Close the object (e.g. drop-down list)

In some cases (e.g. when a pop-up window appears) it is useful to freeze the focus on an object. It means the _LV_GROUP_KEY_NEXT/PREV_will be ignored. You can do it with _lv_group_focus_freeze(group,true) .

The **style of the object in focus** is modified by a function. By default, it makes the object's colors orangish but you can also specify your own style updater function in each group with

```
void lv_group_set_style_mod_cb(group, style_mod_cb).
```

The _style_mod_cb_ needs an v_{style_t} parameter which is a copy of the focused object's style. In the callback, you can mix some colors to the current ones, and modify parameters but it is not permitted to set attributes which modify the size (like _letter_space_, padding etc.)

Renkler

Written for v5.1

The color module handles all color related functions like changing color depth, creating colors from hex code, converting between color depths, mixing colors etc.

The following variable types are defined by the color module:

- Iv_color1_t Store monochrome color. For compatibility it also has R,G,B fields but they are always the same (1 byte)
- Iv_color8_t A structure to store R (3 bit), G (3 bit), B (2 bit) components for 8 bit colors (1 byte)
- Iv_color16_t A structure to store R (5 bit),G (6 bit),B (5 bit) components for 16 bit colors (2 byte)
- Iv_color24_t A structure to store R (8 bit), G (8 bit), B (8 bit) components for 24 bit colors (4 byte)
- Iv_color_t Equal to color1/8/16/24 t according to color depth settings
- Iv_color_int_t uint8_t, uint16_t or uint32_t according to color depth setting. Used to build color arrays from plain numbers.
- Iv_opa_t A simple uint8 t type to describe opacity.

The _lv_color_t_, _lv_color1_t _lv_color8_t_, _lv_color16_t_ and _lv_color24_t_ types have got four fields:

- red red channel
- green green channel
- blue blue channel
- full red + green + blue as one number

You can set the current color depth in _lv_conf.h_ by setting the _LV_COLOR_DEPTH_ define to 1 (monochrome), 8, 16 or 24.

You can **convert a color from the current color depth** to an other. The converter functions return with a number so you have to use the *full* field:

You can **create a color** with the current color depth using the **LV_COLOR_MAKE** macro. It takes 3 arguments (red, green, blue) as 8 bit numbers. For example to create light red color: my_color = COLOR_MAKE(0xFF,0x80,0x80) . Colors can be created from **HEX codes** too: my_color = LV_COLOR_HEX(0xFF8080) Or my_color = LV_COLOR_HEX3(0xF88) .

Mixing two colors is possible with mixed_color = lv_color_mix(color1, color2, ratio) . Ration can be 0..255. 0 results fully color2, 255 result fully color1.

To describe **opacity** the _lv_opa_t_ type is created as wrapper to _uint8_t_. Some defines are also introduced:

- LV_OPA_TRANSP Value: 0, means the opacity makes the color fully transparent
- LV_OPA_10 Value: 25, means the color covers only a little
- LV_OPA_20 ... OPA_80 come logically
- LV_OPA_90 Value: 229, means the color near fully covers

• LV_OPA_COVER Value: 255, means the color fully covers

You can also use the _LV_OPA_*_ defines in _lv_color_mix() as ratio._

The color module defines the **most basic colors**:

- LV_COLOR_BLACK
- LV_COLOR_GRAY
- LV_COLOR_SILVER
- LV_COLOR_RED
- LV_COLOR_MARRON
- LV_COLOR_LIME
- LV_COLOR_GREEN
- LV_COLOR_OLIVE
- LV_COLOR_BLUE
- LV_COLOR_NAVY
- LV_COLOR_TAIL
- LV_COLOR_CYAN
- LV_COLOR_AQUA
- LV_COLOR_PURPLE
- LV_COLOR_MAGENTA
- LV_COLOR_ORANGE
- LV_COLOR_YELLOW

as well as Lv_color_white.

Fontlar

Written for v5.1

In LittlevGL fonts are bitmaps and other descriptors to store the images of the letters (glyph) and some additional information. A font is stored in a lv_font_t variable and can be set it in style's text.font field.

The fonts have a **bpp (Bit-Per-Pixel)** property. It shows how much bit is used to describe a pixel in the font. The value stored for a pixel determines the pixel's opacity. This way the image of the letters (especially on the edges) can be smooth and even. The possible bpp values are 1, 2, 4 and 8 (higher value means better quality). The bpp also affects the required memory size to store the font. E.g. bpp = 4 makes the font's memory size 4 times greater compared to bpp = 1.

Built-in fonts

There are several built-in fonts which can be enabled in Iv_conf.h by _USE_LV_FONT_..._ defines. There are built-in fonts in different sizes:

- 10 px
- 20 px
- 30 px
- 40 px

You can enable the fonts with 1, 2, 4 or 8 values to set its bpp (e.g. #define USE_LV_FONT_DEJAVU_20 4 in ly_conf.h).

The built-in fonts exist with multiply character-sets in each size:

- ASCII (Unicode 32..126)
- Latin supplement (Unicode 160..255)
- Cyrillic (Unicode 1024..1279)

The built-in fonts use the Dejavu font.

The built-in fonts are global variables with names like:

- lv_font_dejavu_20 (20 px ASCII font)
- lv_font_dejavu_20_latin_sup (20 px Latin supplement font)
- lv_font_dejavu_20_cyrillic (20 px Cyrillic font)

Unicode support

The LittlevGL supports Unicode letter from **UTF-8** coded characters. You need to configure your editor to save your code/text as UTF-8 (usually this the default) and enable _LV_TXT_UTF8_ in lv_conf.h. Without enabled _LV_TXT_UTF8_ only ASCII fonts and symbols can be used (see the symbols below)

After it the texts will be decoded to determine the Unicode values. To display the letters your font needs to contain the image (glyph) of the characters.

The built-in fonts are already added to the same sized ASCII font. For example if _USE_LV_FONT_DEJAVU_20_ and _USE_LV_FONT_DEJAVU_20_LATIN_SUP_ are enabled in _lv_conf .h then the "abcÁÖÜ" text can be rendered when using _lv_font_dejavu_20_.

Symbol fonts

The symbol fonts are special fonts which contain symbols instead of letters. There are **built-in symbol fonts** as well and they are also assigned to the ASCII font with the same size. In a text, a symbol can be referenced like _SYMBOL_LEFT_, _SYMBOL_RIGHT_ etc. You can mix these symbol names with strings:

```
lv_label_set_text(label1,"Right "SYMBOL_RIGHT);
```

The symbols can be used without UTF-8 support as well. (_LV_TXT_UTF8 0_)

The list above shows the existing symbols:

SVMBOL AUDIO	◆ SYMBOL PLUS
SYMBOL_AUDIO	_
■ SYMBOL_VIDEO	SYMBOL_MINUS
SYMBOL_LIST	▲ SYMBOL_WARNING
✓ SYMBOL_OK	☆ SYMBOL_SHUFFLE
★ SYMBOL_CLOSE	▲ SYMBOL_UP
じ SYMBOL_POWER	✓ SYMBOL_DOWN
SYMBOL SETTINGS	SYMBOL_LOOP
⊞ SYMBOL_TRASH	SYMBOL_DIRECTORY
SYMBOL_HOME	▲ SYMBOL_UPLOAD
♣ SYMBOL_DOWNLOAD	SYMBOL_CALL
SYMBOL_DRIVE	% SYMBOL_CUT
SYMBOL_REFRESH SYMBOL_REFRESH	台 SYMBOL_COPY
■ SYMBOL MUTE	SYMBOL_SAVE
SYMBOL_VOLUME_MID	SYMBOL_CHARGE
SYMBOL_VOLUME_MAX	SYMBOL_BELL
SYMBOL_IMAGE	SYMBOL_KEYBOARD
SYMBOL_EDIT	✓ SYMBOL_GPS
M SYMBOL_PREV	SYMBOL_FILE
► SYMBOL_PLAY	SYMBOL_WIFI
SYMBOL_PAUSE	SYMBOL BATTERY FULL
SYMBOL_STOP	SYMBOL BATTERY 3
SYMBOL_NEXT	SYMBOL BATTERY 2
▲ SYMBOL_EJECT	SYMBOL_BATTERY_1
✓ SYMBOL_LEFT	SYMBOL BATTERY EMPTY
> SYMBOL_RIGHT	SYMBOL BLUETOOTH
F STRIBUL_INGITI	•

Add new font

If you want to **add new fonts to the library** you can use the Online Font Converter Tool. It can create a C array from a TTF file which can be copied copy to your project. You can specify the height, the range of characters and the bpp. Optionally you can enumerate the characters to include only them into the final font. To use the generated font declare it with _LV_FONT_DECLARE(my_font_name)_. After that, the font can be used as the built-in fonts.

Font example

aeuois äéüöíß

Right >

```
/*Create a new style for the label*/
static lv_style_t style;
lv_style_copy(&style, &lv_style_plain);
style.text.color = LV_COLOR_BLUE;
lv_obj_t *label;
/*Use ASCII and Unicode letters*/
label = lv_label_create(lv_scr_act(), NULL);
lv_obj_set_pos(label, 20, 20);
lv_label_set_style(label, &style);
/*Mix text and symbols*/
label = lv_label_create(lv_scr_act(), NULL);
lv_obj_set_pos(label, 20, 100);
lv_label_set_style(label, &style);
lv_label_set_text(label, "Right "SYMBOL_RIGHT);
```

Çizimler

Written for v5.1

In *LittlevGL* you can think in graphical objects and don't care about how the drawing happens. You can set the size, position or any attribute of the object an the library will refresh the old (invalid) areas and redraw the new ones. However, you should know the basic drawing methods to know which one you should choose.

Buffered and unbuffered drawing

Unbuffered drawing

The unbuffered drawing puts the pixels directly to the display (frame buffer). Therefore during the drawing process, some flickering might be visible because firstly the background has to be drawn and then the objects on it. For this reason, this type is not suitable when scrolling, dragging and animations are used. On the other hand, it has the smallest memory footprint because no extra graphics buffer is required.

To use unbuffered drawing set _LV_VDB_SIZE_ to 0 in _lv_conf.h_ and register the _disp_map_ and _disp_fill_functions. Here you can learn more about Porting.

Buffered drawing

The buffered drawing is similar to double buffering when two screen sized buffers are used (one for rendering and an other to display the last ready frame). However, LittlevGL's buffered drawing algorithm uses only one frame buffer and a small graphical buffer called Virtual Display Buffer (VDB). For VDB size ~1/10 screen size is typically enough. For a 320 × 240 screen with 16-bit colors, it means only 15 kB extra RAM.

With buffered drawing there is no flickering because the image is created firstly in the memory (VDB), therefore scrolling, dragging and animations can be used. In addition, it enables the use of other graphical effects like anti-aliasing, transparency (opacity) and shadows.

To use buffered drawing set _LV_VDB_SIZE_ to > LV_HOR_RES in _lv_conf.h_ and register a _disp_flush_ function.

In buffered mode, you can use **double VDB** to parallelly execute rendering into one VDB and copying pixels to your frame buffer from an other. The copy should use DMA or other hardware acceleration to work in the background to let the CPU to do other things. In _lv_conf.h_ the _LV_VDB_DOUBLE 1_ enables this feature.

Buffered vs Unbuffered drawing

Keep in mind it's not sure that the unbuffered drawing is faster. During the rendering process, a pixel is overwritten multiple times (e.g. background, button, text are above each other). This way in unbuffered mode the library needs to access the external memory or display controller several times which is slower than writing/reading the internal RAM.

The following table summarizes the differences between the two drawing methods:

	Unbuffered drawing	Buffered drawing
Memory usage	No extra	>~1/10 screen
Quality	Flickering	Flawless
Antialiasing	Not supported	Supported
Transparency	Not supported	Supported
Shadows	Not supported	Supported

Anti-aliasing

In lv_conf.h you can enable the anti-aliasing with _LV_ANTIALIAS 1_. The anti-aliasing is supported only in buffered mode (LV_VDB_SIZE > LV_HOR_RES).

The anti-aliasing algorithm puts some translucent pixels (pixels with opacity) to make lines and curves (including corners with radius) smooth and even. Because it only puts some extra pixels anti-aliasing requires only a few extra computational power(~1,1x extra time compared to not anti-aliased configuration)

As described in Font section the fonts can be anti-aliased by using a different font with higher bpp (Bit-Per-Pixel). This way the pixels of a font can be not only 0 or 1 but can be translucent. The supported bpp-s are 1, 2, 4 and 8. Keep in mind a font with higher bpp requires more ROM.

Animasyon

Written for v5.1

You can automatically change the value (animate) of a variable between a start and an end value using an **animator function** with void func (void* var,int32_t value) prototype. The animation will happen by the periodical calling of the animator function with the corresponding value parameter.

To create an animation you have to initializes an _lv_anim_t_ variable (there is a template in lv_anim.h):

```
lv_anim_t a;
a.var = button1;
                                             /*Variable to animate*/
a.start = 100;
a.end = 300:
a.fp = (lv_anim_fp_t) lv_obj_set_height;
                                                                         /*Function to be used to animate*/
a.path = lv_anim_path_linear;
                                                                         /*Path of animation*/
a.end_cb = NULL;
                                               /*Callback when the animation is ready*/
a.act_time = 0;
                                                 /*Set < 0 to make a delay [ms] */
                                              /*Animation length [ms] */
a.time = 200;
a.playback = 0;
                                                /*1: animate in reverse direction too when the normal is ready*/
                                                      /*Wait before playback [ms] */
a.playback_pause = 0;
a.repeat = 0;
                                              /*1: Repeat the animation (with or without playback) */
a.repeat_pause = 0;
                                                /*Wait before repeat [ms] */
lv_anim_create(&a);
                                              /*Start the animation*/
```

The anim_create(&a) will register the animation and immediately applies the start value regardless to the set delay.

You can determinate the **path of animation**. In most simple case it is linear which means the current value between *start* and *end* is changed linearly. A path is a function which calculates the next value to set based on the current state of the animation. Currently, there are two built-in paths:

- Iv_anim_path_linear linear animation
- Iv_anim_path_step change in one step at the end

By default, you can set the animation time. But in some cases, the **animation speed** is more practical. The <code>lv_anim_speed_to_time(speed, start, end)</code> function calculates the required time in milliseconds to reach the end value from a start value with the given speed. The speed is interpreted in *unit/sec* dimension. For example <code>lv_anim_speed_to_time(20,0,100)</code> will give 5000 milliseconds.

You can apply **multiple different animations** on the same variable at the same time. (For example animate the x and y coordinates with _lv_obj_set_x_ end _lv_obj_set_y_). But only one animation can exist with a given variable and function pair. Therefore the _lv_anim_create()_ function will delete the already existing variable-function animations.

You can **delete an animation** by <code>lv_anim_del(var, func)</code> with providing the animated variable and its animator function.

Kodlama Kılavuzu

Revision 2

File format

Use lv_misc/lv_templ.c and lv_misc/lv_templ.h

Naming conventions

- Words are separated by '_'
- In variable and function names use only lower case letters (e.g. height_tmp)
- In enums and defines use only upper case letters (e.g. e.g. MAX_LINE_NUM)
- Global names (API):
 - starts with Iv
 - o followed by module name: btn, label, style etc.
 - followed by the action (for functions): set, get, refr etc.
 - closed with the subject: name, size, state etc.
- Typedefs

```
    prefer typedef struct and typedef enum instead of struct name and enum name
    always end typedef struct and typedef enum type names with _t
```

- Abbreviations:
 - Use abbreviations on public names only if they become longer than 32 characters
 - Use only very straightforward (e.g. pos: position) or well-established (e.g. pr: press) abbreviations

Coding guide

- · Functions:
 - Try to write function shorter than is 50 lines
 - Always shorter than 100 lines (except very straightforwards)
- Variables:
 - One line, one declaration (BAD: char x, y;)
 - Use <stdint.h> (uint8_t, int32_t etc)
 - o Declare variables when needed (not all at function start)
 - Use the smallest required scope
 - Variables in a file (outside functions) are always static
 - Do not use global variables (use functions to set/get static variables)

Comments

Before every function have a comment like this:

```
/**

* Return with the screen of an object

* @param obj pointer to an object

* @return pointer to a screen

*/

lv_obj_t * lv_obj_get_scr(lv_obj_t * obj);
```

Always use $\ /* \ Something \ */ \ format and NOT \ // Something \$

Write readable code to avoid descriptive comments like: x++; /* Add 1 to x */ . The code should show clearly what you are doing.

You should write why have you done this: x++; /*Because of closing '\0' of the string */

Short "code summaries" of a few lines are accepted. E.g. /*Calculate the new coordinates*/

In comments use ``when referring to a variable. E.g. $/*Update the value of `x_act`*/$

Formatting

Here is example to show bracket placing and using of white spaces:

```
/**
  * Set a new text for a label. Memory will be allocated to store the text by the label.
  * @param label pointer to a label object
  * @param text '\0' terminated character string. NULL to refresh with the current text.
  */
void lv_label_set_text(lv_obj_t * label, const char * text)
{     /* Main brackets of functions in new line*/
     if(label == NULL) return; /*No bracket only if the command is inline with the if statement*/
     lv_obj_inv(label);
     lv_label_ext_t * ext = lv_obj_get_ext(label);
     /*Comment before a section */
     if(text == ext->txt || text == NULL) { /*Bracket of statements start inline*/
          lv_label_refr_text(label);
          return;
     }
     ...
}
```

Use 4 spaces indentation instead of tab.

```
You can use astyle to format the code. The required config flies are: docs/astyle_c and docs/astyle_h. To format the source files: $ find . -type f -name "*.c" | xargs astyle --options=docs/astyle_c
To format the header files: $ find . -type f -name "*.h" | xargs astyle --options=docs/astyle_h
```

Append -n to the end to skip creation of backup file OR use find . -type fi

Nesne Türleri

Written for v5.1

The following pages contain detailed documentation for each of the objects in the Littlev Graphics Library.

- Base object (lv_obj)
- Label (lv_label)
- Image (lv_img)
- Line (lv_line)
- Arc (lv_arc)
- Container (lv_cont)
- Page (lv_page)
- Window (lv_window)
- Tab view (lv_tabview)
- Bar (lv_bar)
- Line meter (lv_lmeter)
- Gauge (lv_gauge)
- Chart (lv_chart)
- LED (lv_led)
- Preloader (lv_preload)
- Message box (lv_mbox)
- Text area (lv_ta)
- Calendar (lv_calendar)
- Button (lv_btn)
- Image button (lv_imgbtn)
- Button matrix (lv_btnm)
- Keyboard (lv_kb)
- List (lv_list)
- Drop down list (lv_ddlist)
- Roller (lv_roller)
- Check box (lv_cb)
- Switch (lv_sw)
- Slider (lv_slider)

Anahtar (lv_sw)

Written for v5.1, revision 2

Overview

The Switch can be used to turn on/off something. The look like a little slider. The state of the switch can be changed by:

- · Clicking on it
- · Sliding it
- Using lv_sw_on(sw) and lv_sw_off(sw) functions

A callback function can be assigned to call when the user uses the switch: lv_sw_set_action(sw, my_action)

New in v5.3: Switches can be animated by calling $v_s_{set_anim_time(sw, anim_ms)}$.

Style usage

You can modify the Switch's styles with $v_s_{style}(s_w, v_s_{style}, v_s_{style})$.

- LV_SW_STYLE_BG Style of the background. All *style.body* properties are used. The *padding* values make the Switch smaller then the knob. (negative value makes is larger)
- LV_SW_STYLE_INDIC Style of the indicator. All style.body properties are used. The padding values make the indicator smaller then the background.
- LV_SW_STYLE_KNOB_OFF Style of the knob when the switch is off. The style.body properties are used except padding.
- LV_SW_STYLE_KNOB_ON Style of the knob when the switch is on. The style.body properties are used except padding.

Notes

• The Knob is not a real object it is only drawn above the Bar

Example





```
/*Create styles for the switch*/
static lv_style_t bg_style;
static lv_style_t indic_style;
static lv_style_t knob_on_style;
static lv_style_t knob_off_style;
lv_style_copy(&bg_style, &lv_style_pretty);
bg_style.body.radius = LV_RADIUS_CIRCLE;
lv_style_copy(&indic_style, &lv_style_pretty_color);
indic_style.body.radius = LV_RADIUS_CIRCLE;
indic_style.body.main_color = LV_COLOR_HEX(0x9fc8ef);
indic_style.body.grad_color = LV_COLOR_HEX(0x9fc8ef);
indic_style.body.padding.hor = 0;
indic_style.body.padding.ver = 0;
lv_style_copy(&knob_off_style, &lv_style_pretty);
knob_off_style.body.radius = LV_RADIUS_CIRCLE;
knob_off_style.body.shadow.width = 4;
knob_off_style.body.shadow.type = LV_SHADOW_BOTTOM;
lv_style_copy(&knob_on_style, &lv_style_pretty_color);
knob_on_style.body.radius = LV_RADIUS_CIRCLE;
knob_on_style.body.shadow.width = 4;
knob_on_style.body.shadow.type = LV_SHADOW_BOTTOM;
/*Create a switch and apply the styles*/
lv_obj_t *sw1 = lv_sw_create(lv_scr_act(), NULL);
lv_sw_set_style(sw1, LV_SW_STYLE_BG, &bg_style);
lv_sw_set_style(sw1, LV_SW_STYLE_INDIC, &indic_style);
lv_sw_set_style(sw1, LV_SW_STYLE_KNOB_ON, &knob_on_style);
lv_sw_set_style(sw1, LV_SW_STYLE_KNOB_OFF, &knob_off_style);
lv_obj_align(sw1, NULL, LV_ALIGN_CENTER, 0, -50);
/*Copy the first switch and turn it ON*/
\label{eq:lv_obj_t} \textbf{1v\_obj\_t} \ \texttt{*sw2} = \texttt{lv\_sw\_create(lv\_scr\_act(), sw1);}
lv_sw_set_on(sw2);
lv_obj_align(sw2, NULL, LV_ALIGN_CENTER, 0, 50);
```

Açılır liste (lv_ddlist)

Written for v5.3, revision 2

Overview

Drop Down Lists allow you to simply **select one option from more**. The Drop Down List is closed by default an show the currently selected text. If you click on it the this list opens and all the options are shown.

The **options** are passed to the Drop Down List as a **string** with lv_ddlist_set_options(ddlist, options). The options should be separated by \n . For example: "First\nSecond\nThird".

You can select an option manually with lv_ddlist_set_selected(ddlist, id), where _id_ is the index of an option.

A callback function can be specified with lv_dalist_set_action(ddlist, my_action) to call when a new option is selected.

By default the list's **height** is adjusted automatically to show all options. The lv_ddlist_set_fix_height(ddlist, h) sets a fixed height for the opened list.

The width is also adjusted automatically. To prevent this apply <code>lv_ddlist_set_hor_fit(ddlist, false)</code> and set the width manually by <code>lv_obj_set_width(ddlist, width)</code> .

The Drop Down List open/close animation time is adjusted by lv_ddlist_set_anim_time(ddlist, anim_time). Zero animation time means no animation.

New in v5.3 is the ability to enable an arrow on the side of the drop down list. To use this feature you can call lv_ddlist_set_draw_arrow(ddlist, true).


Style usage

 $\label{thm:condition} The $$ $ \text{lv_ddlist_set_style}(\text{ddlist}, \ \text{LV_DDLIST_STYLE_}..., \ \text{\&style}) $$ $ set the styles of a Drop Down List. $$ $ \text{log}(\text{ddlist_set_style})(\text{ddlist_set_style$

- LV_DDLIST_STYLE_BG Style of the background. All *style.body* properties are used. It is used for the label's style from *style.text*. Default: _lv_style_pretty_
- LV_DDLIST_STYLE_SEL Style of the selected option. The *style.body* properties are used. The selected option will be recolored with *text.color*. Default: _lv_style_plain_color_
- LV_DDLIST_STYLE_SB Style of the scrollbar. The style.body properties are used. Default: _lv_style_plain_color_

Example





```
static lv_res_t ddlist_action(lv_obj_t * ddlist)
   uint8_t id = lv_obj_get_free_num(ddlist);
   char sel_str[32];
   lv_ddlist_get_selected_str(ddlist, sel_str);
   printf("Ddlist %d new option: %s \n", id, sel_str);
   return LV_RES_OK; /*Return OK if the drop down list is not deleted*/
/*Create a drop down list*/
lv_obj_t * ddl1 = lv_ddlist_create(lv_scr_act(), NULL);
lv\_ddlist\_set\_options(ddl1, \ "Apple\n"
                          "Banana\n"
                           "Orange\n"
                           "Melon\n"
                           "Grape\n"
                           "Raspberry");
{\tt lv\_obj\_align(ddl1, NULL, LV\_ALIGN\_IN\_TOP\_LEFT, 30, 10);}
lv_obj_set_free_num(ddl1, 1);
                                          /*Set a unique ID*/
lv\_ddlist\_set\_action(ddl1,\ ddlist\_action); \ \ /*Set\ a\ function\ to\ call\ when\ anew\ option\ is\ chosen*/
/*Create a stule*/
static lv_style_t style_bg;
lv_style_copy(&style_bg, &lv_style_pretty);
style_bg.body.shadow.width = 4; /*Enable the shadow*/
style_bg.text.color = LV_COLOR_MAKE(0x10, 0x20, 0x50);
/*Copy the drop down list and set the new style_bg*/
lv_obj_t * dd12 = lv_ddlist_create(lv_scr_act(), dd11);
lv_obj_align(dd12, NULL, LV_ALIGN_IN_TOP_RIGHT, -30, 10);
lv_obj_set_style(ddl2, &style_bg);
```

Buton (lv_btn)

Written for v5.1(rev.2)

Genel Bakış

Butonlar kullanıcının **basmak**, **bırakmak** veya **uzun basmak** eylemlerine bildiri fonksiyoları (<code>lv_action_t</code> fonksiyon işaretçileri) ile reaksiyon gösterir. Bildiri fonksiyonu <code>lv_btn_set_action(btn, ACTION_TYPE, bildiri_fonk)</code> ile ayarlanır. Olası aksiyon türleri:

- LV_BTN_ACTION_CLICK: Buton basıldıktan sonra bırakıldı. (tıklandı)
- LV_BTN_ACTION_PR: Buton'a basıldı
- LV_BTN_ACTION_LONG_PR: Buton'a uzun basıldı
- LV_BTN_ACTION_LONG_PR_REPEAT: Buton'a uzun süre basıldı ve bu aksiyon belirli aralıklarla tetiklendi

Buttons can be in one of the five possible states: Butonlar beş olası durumlar dan birinde bulunabilir:

- LV BTN STATE REL Bırakma durumu
- LV_BTN_STATE_PR Basma durumu
- LV BTN STATE TGL REL Bırakma surumuna geç (Dorum açık)
- LV_BTN_STATE_TGL_PR Basma durumuna geç (Basma durumu açık)
- LV BTN STATE INA Pasif durum

Butonlar lv_btn_set_toggle(btn, true) fonksiyonu ile **durum butonu** olarak ayarlanabilir. Bu durumda bırakma, buton bırakma durumuna geçer.

Manuel olarak buton durumunu lv_btn_set_state(btn, LV_BTN_STATE_TGL_REL) fonksiyonu ile ayarlanabilir.

Bir buton Pasif duruma sadece manuel olarak (_lv_btn_set_state()_) fonksiyonu ile geçebilir. Pasif durumda hiçbir aksiyon çağırılamaz.

Konteyner'a benzer olarak butonlarda katman ve otomatik sığdır özellikeri vardır:

- lv_btn_set_layout (btn, Lv_LAYOUT_...) fonksiyonu ile katman ayarlanır. Varsayılan katman Lv_LAYOUT_CENTER'dır. Bu sebepten eğer etiket(label) eklenirse, etiket otomatik olarak ortaya yerleşir.
- lv_btn_set_fit(btn, hor_en, ver_en) fonksiyonu butonun genişlik ve yüksekliğini alt birimlere bağlı olarak otomatik aktifleştirir.

Biçim kullanımı

Buton 5 durum için 5 bağımsız biçime sahiptir. 1v_btn_set_style (btn, LV_BTN_STYLE_..., &style) fonksiyonu ile ayarlanır. Biçimler style.body özellirlerini kullanır.

- LV_BTN_STYLE_REL Bırakma durum biçimi. Varsayılan: _lv_style_btn_rel_
- LV_BTN_STYLE_PR Basma durum biçimi. Varsayılan: _lv_style_btn_pr_
- LV_BTN_STYLE_TGL_REL Bırak geç durum biçimi. Varsayılan: _lv_style_btn_tgl_rel_
- LV_BTN_STYLE_TGL_PR Bas geç durum biçimi. Varsayılan: _lv_style_btn_tgl_pr_
- LV_BTN_STYLE_INA Pasif durum biçimi. Varsayılan: _lv_style_btn_ina_

Notlar

- Eğer buton sürüklenirse, butonun tıklama ve uzun basma aksiyonları çağırılamaz
- Eğer buton uzun basıldığında ve butonun uzun basılma aksiyonu ayarlanmış ise butonun tıklama aksiyonu çağırılamaz

Örneğin

Default buttons



Inactive

```
static lv_res_t btn_click_action(lv_obj_t * btn)
    uint8_t id = lv_obj_get_free_num(btn);
   printf("Button %d is released\n", id);
    /* Buton birakildi.
     * Birşeyleri burada yap */
    return LV_RES_OK; /*Return OK Eğer buton silinmediyse*/
}
/*Etiket başlığı oluştur*/
lv_obj_t * label = lv_label_create(lv_scr_act(), NULL);
lv_label_set_text(label, "Default buttons");
lv_obj_align(label, NULL, LV_ALIGN_IN_TOP_MID, 0, 5);
/*Normal buton oluştur*/
{\tt lv\_obj\_t} \ * \ {\tt btn1} \ = \ {\tt lv\_btn\_create(lv\_scr\_act(), \ NULL)};
lv\_cont\_set\_fit(btn1,\ true,\ true)\ ;\ /*{\it Enable resizing horizontally and vertically}*/
lv_obj_align(btn1, label, LV_ALIGN_OUT_BOTTOM_MID, 0, 10);
lv_obj_set_free_num(btn1, 1);  /*Set a unique number for the button*/
lv_btn_set_action(btn1, LV_BTN_ACTION_CLICK, btn_click_action);
/*Buton'a etiket ekle*/
label = lv_label_create(btn1, NULL);
lv label set text(label, "Normal");
/*{\tt Butonu}\ kopyala\ ve\ de\check{g}i\$tir(toggle)\ durumuna\ ayarla.\ ({\tt Birakma}\ aksiyonuda\ kopyalandı)*/
lv_obj_t * btn2 = lv_btn_create(lv_scr_act(), btn1);
lv_obj_align(btn2, btn1, LV_ALIGN_OUT_BOTTOM_MID, 0, 10);
lv_btn_set_state(btn2, LV_BTN_STATE_TGL_REL); /*Değiştir durumunu ayarla*/
                                             /*Buton için tek-eşsiz sayı ayarla*/
lv_obj_set_free_num(btn2, 2);
/*Değiştir(toggle) butonuna etiket ekle*/
label = lv_label_create(btn2, NULL);
lv_label_set_text(label, "Toggled");
/*Butonu\ kopyala\ ve\ pasif\ durumu\ aktifleştir.*/
lv_obj_t * btn3 = lv_btn_create(lv_scr_act(), btn1);
lv_obj_align(btn3, btn2, LV_ALIGN_OUT_BOTTOM_MID, 0, 10);
{\tt lv\_btn\_set\_state(btn3,\ LV\_BTN\_STATE\_INA);} \quad /*{\tt Pasif\ durumu\ ayarla*/}
                                              /*Buton için tek-eşsiz sayı ayarla*/
lv obj set free num(btn3, 3);
/*Pasif butona etiket ekle*/
label = lv_label_create(btn3, NULL);
lv_label_set_text(label, "Inactive");
```

Buton matrisi (lv_btnm)

Written for v5.1 (rev.1)

Genel Bakış

Buton matris nesneleri metin sıralamasına bağlı tanımlanarak **çoklu butonlar** olarak gösterilir ve *map*(haritalama) şeklinde çağırılır.

1v_btnm_set_map(btnm, my_map) fonksiyonu ile map belirtilebilir.

Haritalamanın(map) tanımlanması const char * map[] = {"btn1", "btn2", "btn3", ""} şeklindedir. NOT Son eleman mutlaka boş bir metin olası gerekir!

Metin'in ilk karakteri bazı özellikleri belirtmek için kontrol karakter olabilir:utes:

- bit 7..6 Metinsel karakterlerden kontrol byte'ına ayrım yapmak için daima 0b10
- bit 5 Pasif buton
- bit 4 Gizli buton
- bit 3 Buton için uzun basma yok
- bit 2..0 Aynı satırdaki butonlar için genişlik ilişki karşılaştırması. [1..7]

Kontrol byte olarak sekizli sayı özelliği tavsiye edilir. Örneğin "\213buton". Sekizli sayı daima _2_ (bit 7..6) ile başlar orta bölüm özellikleri (bit 5..3) ve son bölüm genişliği (bit 2..0). Önek 3 birim genişliğinde gizli butonu tanımlıyor.

Haritalamada satır sonu yapmak için "\n" kullanmak: {"btn1", "btn2", "\n", "btn3", ""} . Butonun genişliği her satırda tekrar hesaplanır.

lv_btnm_set_action(btnm, btnm_action) fonksiyonu buton bırakıldığında çağırma aksiyonunu belirtir.

Butonların değişimi(geçişi) tıklandığında aktifleşir. Tek seferde sadece bir buton değişimi olur. tv_btnm_set_toggle(btnm, true, id) fonksiyonu değişimi aktifleştirir ve id'si verilmiş butonun değişim durumunu ayarlar.

Biçim Kullanımı

Buton matris 6 biçim ile çalışır: Bir arkaplan ve 5 herbir durum için buton biçimi.

1v_btnm_set_style(btn, LV_BTNM_STYLE_..., &style) fonksiyonu ile biçim ayarlanabilir. Arkaplan ve butonlar *style.body* özelliğini kullanır. Etiketler buton biçim özelliklerinden style.text 'i kullanır.

- LV BTNM STYLE BG Arkaplan biçimi. padding ile beraber tüm style.body özelliklerini kullanır. Varsayılan: İv style pretty
- LV_BTNM_STYLE_BTN_REL Bırakma butonların biçimi. Varsayılan: _lv_style_btn_rel_
- LV_BTNM_STYLE_BTN_PR Basma butonların biçimi. Varsayılan: _lv_style_btn_pr_
- LV_BTNM_STYLE_BTN_TGL_REL Değişim bırakma butonların biçimi. Varsayılan: _lv_style_btn_tgl_rel_
- LV_BTNM_STYLE_BTN_TGL_PR Değişim basma butonların biçimi. Varsayılan: _lv_style_btn_tgl_pr_
- LV_BTNM_STYLE_BTN_INA Pasif butonların biçimi. Varsayılan: _lv_style_btn_ina_

Notlar

• Buton matris nesnesi çok basittir. Temel nesne arkaplanı oluşturur ve gerçek buton oluşturmak yerine butonları çizer.

Örnek



```
/*Uzun süre basılıp çekildiğinde çağrılır*/
{\tt static} \ {\tt lv\_res\_t} \ {\tt btnm\_action} \, ({\tt lv\_obj\_t} \ {\tt *} \ {\tt btnm}, \ {\tt const} \ {\tt char} \ {\tt *txt})
   printf("Button: %s released\n", txt);
    return LV RES OK; /*Return OK, cünkü buton matris silinmedi*/
}
/*Buton tanımlama metin dizisini oluştur*/
static const char * btnm_map[] = {"1", "2", "3", "4", "5", "\n",
                            "6", "7", "8", "9", "0", "\n",
                            "\202Action1", "Action2", ""};
/*Varsayılan buton matris'i olustur*/
lv_obj_t * btnm1 = lv_btnm_create(lv_scr_act(), NULL);
lv_btnm_set_map(btnm1, btnm_map);
lv_btnm_set_action(btnm1, btnm_action);
lv_obj_set_size(btnm1, LV_HOR_RES, LV_VER_RES / 2);
/*Buton matris arkaplan için yeni biçim oluştur*/
static lv_style_t style_bg;
lv_style_copy(&style_bg, &lv_style_plain);
style_bg.body.main_color = LV_COLOR_SILVER;
style_bg.body.grad_color = LV_COLOR_SILVER;
style_bg.body.padding.hor = 0;
style_bg.body.padding.ver = 0;
style_bg.body.padding.inner = 0;
/*2 buton bicimleri olustur*/
static lv_style_t style_btn_rel;
static lv_style_t style_btn_pr;
lv_style_copy(&style_btn_rel, &lv_style_btn_rel);
style_btn_rel.body.main_color = LV_COLOR_MAKE(0x30, 0x30, 0x30);
style_btn_rel.body.grad_color = LV_COLOR_BLACK;
style_btn_rel.body.border.color = LV_COLOR_SILVER;
style_btn_rel.body.border.width = 1;
style_btn_rel.body.border.opa = LV_OPA_50;
style_btn_rel.body.radius = 0;
lv_style_copy(&style_btn_pr, &style_btn_rel);
style_btn_pr.body.main_color = LV_COLOR_MAKE(0x55, 0x96, 0xd8);
style_btn_pr.body.grad_color = LV_COLOR_MAKE(0x37, 0x62, 0x90);
style_btn_pr.text.color = LV_COLOR_MAKE(0xbb, 0xd5, 0xf1);
/*Yeni biçim ile ikinci buton matris'i oluştur*/
lv_obj_t * btnm2 = lv_btnm_create(lv_scr_act(), btnm1);
lv_btnm_set_style(btnm2, LV_BTNM_STYLE_BG, &style_bg);
lv_btnm_set_style(btnm2, LV_BTNM_STYLE_BTN_REL, &style_btn_rel);
lv_btnm_set_style(btnm2, LV_BTNM_STYLE_BTN_PR, &style_btn_pr);
lv\_obj\_align(btnm2, btnm1, LV\_ALIGN\_OUT\_BOTTOM\_MID, 0, 0);\\
```

Çizge (lv_chart)

Written for v5.1

Overview

Charts have a rectangle-like background with horizontal and vertical division lines. You can add any number of **series** to the charts by 1v_chart_add_series (chart, color). It allocates data for a 1v_chart_series_t structure which contains the chosen *color* and an array for the data.

You have several options to set the data of series:

- 1. Set the values manually in the array like ser1->points[3] = 7 and refresh the chart with lv_chart_refresh(chart).
- 2. Use the lv_chart_set_next (chart, ser, value) function to shift all data to left and set a new data on the most right position.
- 3. Initialize all points to a given value with: lv_chart_init_points(chart, ser, value).
- 4. Set all points from an array with: lv_chart_set_points(chart, ser, value_array).

There are four data display types:

- LV_CHART_TYPE_NONE: do not display the points. It can be used if you would like to add your own draw method.
- LV_CHART_TYPE_LINE: draw lines between the points
- LV_CHART_TYPE_COL: Draw columns
- LV_CHART_TYPE_POINT: Draw points

You can specify the display type with lv_chart_set_type(chart, TYPE) . The LV_CHART_TYPE_LINE | LV_CHART_TYPE_POINT type is also valid to draw both lines and points.

You can specify a the **min. and max. values in y** directions with 1v_chart_set_range(chart, y_min, y_max). The value of the points will be scaled proportionally. The default range is: 0..100.

The number of points in the data lines can be modified by lv_chart_set_point_count(chart, point_num). The default value is 10.

The **number of horizontal and vertical division lines** can be modified by lv_chart_set_div_line_count(chart, hdiv_num, vdiv_num). The default settings are 3 horizontal and 5 vertical division lines.

To set the line width and point radius use the ly_chart_set_series_width (chart, size) function. The default value is: 2.

The *opacity of the data lines can be specified by lv_chart_set_series_opa(chart, opa). The default value is: OPA_COVER.


You can apply a dark color fade on the bottom of columns and points by lv_chart_set_series_darking(chart, effect) function. The default dark level is OPA_50.

Style usage

- style.body properties set the background's appearance
- style.line properties set the division lines' appearance

The series related parameters can be set directly for each chart with <code>lv_chart_set_series_width()</code>, <code>lv_chart_set_series_opa()</code> and <code>lv_chart_set_series_dark()</code>.

Example

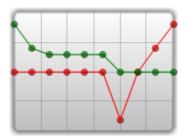

```
/*Create a style for the chart*/
static lv_style_t style;
lv_style_copy(&style, &lv_style_pretty);
style.body.shadow.width = 6;
style.body.shadow.color = LV_COLOR_GRAY;
style.line.color = LV_COLOR_GRAY;
/*Create a chart*/
lv_obj_t * chart;
chart = lv_chart_create(lv_scr_act(), NULL);
lv_obj_set_size(chart, 200, 150);
lv_obj_set_style(chart, &style);
\label{local_local_local} $$ lv\_obj\_align(chart, NULL, LV\_ALIGN\_CENTER, 0, 0); $$
lv\_chart\_set\_type(chart, \ Lv\_CHART\_TYPE\_POINT \ | \ Lv\_CHART\_TYPE\_LINE); \ /*Show \ lines \ and \ points \ too*/
lv_chart_set_series_opa(chart, LV_OPA_70);
                                                                         /*Opacity of the data series*/
lv_chart_set_series_width(chart, 4);
                                                                         /*Line width and point radious*/
lv_chart_set_range(chart, 0, 100);
/*Add two data series*/
lv_chart_series_t * ser1 = lv_chart_add_series(chart, LV_COLOR_RED);
lv_chart_series_t * ser2 = lv_chart_add_series(chart, LV_COLOR_GREEN);
/*Set the next points on 'dl1'*/
lv_chart_set_next(chart, ser1, 10);
lv_chart_set_next(chart, ser1, 50);
lv_chart_set_next(chart, ser1, 70);
lv_chart_set_next(chart, ser1, 90);
/*Directly set points on 'dl2'*/
ser2->points[0] = 90;
ser2->points[1] = 70;
ser2->points[2] = 65;
ser2->points[3] = 65;
ser2->points[4] = 65;
ser2->points[5] = 65;
lv_chart_refresh(chart); /*Required after direct set*/
```

Çizgi (lv_line)

Written for v5.1

Overview

The line object is capable of **drawing straight lines** between a set of points. The points has to be stored in an <code>lv_point_t</code> array and passed to the object by the <code>lv_line_set_points(lines, point_array, point_num)</code> function.

It is possible to **automatically set the size** of the line object according to its points. You can enable it with the <code>lv_line_set_auto_size(line,true)</code> function. If enabled then when the points are set then the object width and height will be changed according to the max. x and max. y coordinates among the points. The *auto size* is enabled by default.

Basically the y == 0 point is in the top of the object but you can **invert the y coordinates** with $v_{\text{line_set_y_invert(line, true)}}$. After it the y coordinates will be subtracted from object's height.

Style usage

• style.line properties are used

Notes



```
/*Create an array for the points of the line*/
static lv_point_t line_points[] = { {5, 5}, {70, 70}, {120, 10}, {180, 60}, {240, 10} };
/*Create line with default style*/
lv_obj_t * line1;
line1 = lv_line_create(lv_scr_act(), NULL);
lv_line_set_points(line1, line_points, 5);
lv_obj_align(line1, NULL, LV_ALIGN_IN_TOP_MID, 0, 20);
/*Create new style (thin light blue)*/
static lv style t style line2;
lv_style_copy(&style_line2, &lv_style_plain);
style\_line2.line.color = LV\_COLOR\_MAKE(0x2e, 0x96, 0xff);
style_line2.line.width = 2;
/*Copy the previous line and apply the new style*/
lv_obj_t * line2 = lv_line_create(lv_scr_act(), line1);
lv_line_set_style(line2, &style_line2);
lv_obj_align(line2, line1, LV_ALIGN_OUT_BOTTOM_MID, 0, -20);
/*Create new style (thick dark blue) */
static lv_style_t style_line3;
lv_style_copy(&style_line3, &lv_style_plain);
style_line3.line.color = LV_COLOR_MAKE(0x00, 0x3b, 0x75);
style_line3.line.width = 5;
/*Copy the previous line and apply the new style*/
lv_obj_t * line3 = lv_line_create(lv_scr_act(), line1);
lv_line_set_style(line3, &style_line3);
lv_obj_align(line3, line2, LV_ALIGN_OUT_BOTTOM_MID, 0, -20);
```

Çizgi ölçer (lv_lmeter)

Written for v5.1

Overview

The Line Meter object consists of some radial lines which draw a scale. When setting a new value with lv_lmeter_set_value(lmeter,
new_value) the proportional part of the scale will be recolored.

The lv_lmeter_set_range(lmeter, min, max) function sets the range of the line meter.

You can set the **angle** of the scale and the **number of the lines** by: 1v_lmeter_set_scale(lmeter, angle, line_num) . The default angle is 240 and the default line number is 31

Style usage


The line meter uses one style which can be set by <code>lv_lmeter_set_style(lmeter, &style)</code>. The line meter's properties are derived from the following style attributes:

- line.color "inactive line's" color which are greater then the current value
- body.main_color "active line's" color at the beginning of the scale
- body.grad_color "active line's" color at the end of the scale (gradient with main color)
- body.padding.hor line length
- line.width line width

The default style is _lv_style_pretty_color_.

Notes

- The line meter has no background.
- It is recommended to use antialiasing on smaller dpi displays to show smooth lines
- · Odd number of scale lines look better
- It looks better if the scale angle is: (line number 1) * N, where N is an integer

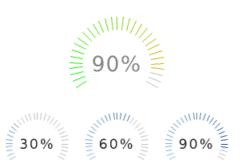

```
* Create 3 similar line meter
/*Create a simple style with ticker line width*/
static lv_style_t style_lmeter1;
lv_style_copy(&style_lmeter1, &lv_style_pretty_color);
style_lmeter1.line.width = 2;
style_lmeter1.line.color = LV_COLOR_SILVER;
style_lmeter1.body.main_color = LV_COLOR_HEX(0x91bfed); /*Light blue*/
style_lmeter1.body.grad_color = LV_COLOR_HEX(0x04386c);
                                                               /*Dark blue*/
/*Create the first line meter */
lv_obj_t * lmeter;
lmeter = lv_lmeter_create(lv_scr_act(), NULL);
lv_lmeter_set_range(lmeter, 0, 100);
                                                      /*Set the range*/
ly lmeter set value(lmeter, 30);
                                                      /*Set the current value*/
                                                 /*Apply the new style*/
lv_lmeter_set_style(lmeter, &style_lmeter1);
lv_obj_set_size(lmeter, 80, 80);
lv_obj_align(lmeter, NULL, LV_ALIGN_IN_BOTTOM_LEFT, 20, -20);
/*Add a label to show the current value*/
lv_obj_t * label;
label = lv_label_create(lmeter, NULL);
lv\_label\_set\_text(label, \ "30%");
lv_label_set_style(label, &lv_style_pretty);
lv_obj_align(label, NULL, LV_ALIGN_CENTER, 0, 0);
/*Create the second line meter and label*/
lmeter = lv_lmeter_create(lv_scr_act(), lmeter);
lv_lmeter_set_value(lmeter, 60);
lv_obj_align(lmeter, NULL, LV_ALIGN_IN_BOTTOM_MID, 0, -20);
label = lv_label_create(lmeter, label);
lv_label_set_text(label, "60%");
lv_obj_align(label, NULL, LV_ALIGN_CENTER, 0, 0);
/*Create the third line meter and label*/
lmeter = lv_lmeter_create(lv_scr_act(), lmeter);
lv_lmeter_set_value(lmeter, 90);
lv_obj_align(lmeter, NULL, LV_ALIGN_IN_BOTTOM_RIGHT, -20, -20);
label = lv label create(lmeter, label);
lv_label_set_text(label, "90%");
lv_obj_align(label, NULL, LV_ALIGN_CENTER, 0, 0);
 * Create a greater line meter
*********
/*Create a new style*/
static lv_style_t style_lmeter2;
lv_style_copy(&style_lmeter2, &lv_style_pretty_color);
style lmeter2.line.width = 2;
style_lmeter2.line.color = LV_COLOR_SILVER;
style_lmeter2.body.padding.hor = 16;
                                               /*Line length*/
style_lmeter2.body.main_color = LV_COLOR_LIME;
style_lmeter2.body.grad_color = LV_COLOR_ORANGE;
/*Create the line meter*/
lmeter = lv_lmeter_create(lv_scr_act(), lmeter);
lv_obj_set_style(lmeter, &style_lmeter2);
lv_obj_set_size(lmeter, 120, 120);
lv_obj_align(lmeter, NULL, LV_ALIGN_IN_TOP_MID, 0, 20);
lv_lmeter_set_scale(lmeter, 240, 31);
lv_lmeter_set_value(lmeter, 90);
/*Create a label style with greater font*/
static lv style t style label;
lv_style_copy(&style_label, &lv_style_pretty);
style_label.text.font = &lv_font_dejavu_60;
style_label.text.color = LV_COLOR_GRAY;
/*Add a label to show the current value*/
label = lv_label_create(lmeter, label);
lv_label_set_text(label, "90%");
lv_obj_set_style(label, &style_label);
lv_obj_align(label, NULL, LV_ALIGN_CENTER, 0, 0);
```

Etiket (lv_label)

Written for v5.1

Overview

The Labels are the basic objects to **display text**. There is no limitation in the text size because it's stored dynamically. You can modify the text in runtime at any time with lv_label_set_text().

You can use \n to make line break. For example: "line1\nline2\n\nline4"

The size of the label object can be automatically expanded to the text size or the text can be manipulated according to several **long mode policies**:

- LV LABEL LONG EXPAND: Expand the object size to the text size
- . LV LABEL LONG BREAK: Keep the object width, break (wrap) the too long lines and expand the object height
- LV LABEL LONG DOTS: Keep the object size, break the text and write dots in the last line
- LV LABEL LONG SCROLL: Expand the object size and scroll the text on the parent (move the label object)
- LV_LABEL_LONG_ROLL: Keep the size and roll just the text (not the object)

You can specify the long mode with: lv_label_set_long_mode(label, long_mode)

Labels are able to show text from a **static array**. Use: livelabel, char_array). In this case, the text is not stored in the dynamic memory but the given array is used instead. Keep in my the array can't be a local variable which destroys when the function exits.

You can also use a **raw character array** as label text. The array doesn't have to be \(\)0 terminated. In this case, the text will be saved to the dynamic memory. To set a raw character array use the \(\)1v_label_set_array_text(label, char_array) function.

The label's **text can be aligned** to the left, right or middle with lv_label_set_align(label, LV_LABEL_ALIGN_LEFT/RIGHT/CENTER)

You can enable to draw a background for the label with lv_label_set_body_draw(label, draw)

In the text, you can use commands to **re-color parts of the text**. For example: "Write a #ff0000 red# word" . This feature can be enabled individually for each label by Iv_label_set_recolor() function.

The labels can display symbols besides letters. Learn more about symbols here.

The labels' **default style** is **NULL** so they inherit the parent's style.

Style usage

- Use all properties from style.text
- For background drawing style.body properties are used

Notes

The label's **click enable attribute** is **disabled** by default. You can enable clicking with <code>lv_obj_set_click(label, true)</code>

Title Label

Align lines to the middle

Re-color words of the text

If a line become too long it can be automatically broken into multiple lines

```
/*Create label on the screen. By default it will inherit the style of the screen*/
lv_obj_t * title = lv_label_create(lv_scr_act(), NULL);
lv_label_set_text(title, "Title Label");
lv_obj_align(title, NULL, LV_ALIGN_IN_TOP_MID, 0, 20); /*Align to the top*/
/*Create anew style*/
static lv_style_t style_txt;
lv_style_copy(&style_txt, &lv_style_plain);
style_txt.text.font = &lv_font_dejavu_40;
style_txt.text.letter_space = 2;
style_txt.text.line_space = 1;
style_txt.text.color = LV_COLOR_HEX(0x606060);
/*Create a new label*/
lv_obj_t * txt = lv_label_create(lv_scr_act(), NULL);
                                                    /*Set the created style*/
lv_obj_set_style(txt, &style_txt);
                                                     /*Break the long lines*/
lv_label_set_long_mode(txt, LV_LABEL_LONG_BREAK);
                                                   /*Enable re-coloring by commands in the text*/
lv_label_set_recolor(txt, true);
lv_label_set_align(txt, LV_LABEL_ALIGN_CENTER);
                                                     /*Center aligned lines*/
lv\_label\_set\_text(txt, \ "Align lines to the middle\n\n"
                      "#000080 Re-color# #0000ff words of# #6666ff the text#\n\n"
                       "If a line become too long it can be automatically broken into multiple lines");
lv_obj_set_width(txt, 300);
                                                    /*Set a width*/
lv_obj_align(txt, NULL, LV_ALIGN_CENTER, 0, 20);
                                                    /*Align to center*/
```

Kaydırıcı (lv_slider)

Written for v5.1

Overview

The Slider object looks like a **Bar** supplemented **with a Knob**. The Knob can be **dragged to set a value**. The Slider also can be vertical or horizontal.

To set an **initial value** use <code>lv_slider_set_value(slider, new_value)</code> function or <code>lv_slider_set_value_anim(slider, new_value, anim_time)</code> to set the value with an animation.

To specify the range (min, max values) the lv_slider_set_range (slider, min , max) can be used.

A callback function can be assigned to call when a new value is set by the user: lv_slider_set_action(slider, my_action)

The knob can be placed two ways:

- inside the background on min/max values
- · on the edges on min/max values

Use the <code>lv_slider_set_knob_in(slider, true/false)</code> to choose between the modes. (knob_in == false is the default)

Style usage

You can modify the slider's styles with $lv_slider_set_style(slider, LV_SLIDER_STYLE_..., &style)$.

- LV_SLIDER_STYLE_BG Style of the background. All *style.body* properties are used. The *padding* values make the slider smaller then the knob. (negative value makes is larger)
- LV_SLIDER_STYLE_INDIC Style of the indicator. All *style.body* properties are used. The *padding* values make the indicator smaller then the background.
- LV_SLIDER_STYLE_KNOB Style of the knob. The style.body properties are used except padding

Notes

• The Knob is not a real object it is only drawn above the Bar



```
/*Called when a new value id set on the slider*/
static lv_res_t slider_action(lv_obj_t * slider)
    printf("New slider value: %d\n", lv_slider_get_value(slider));
    return LV_RES_OK;
}
/*Create a default slider*/
lv_obj_t * slider1 = lv_slider_create(lv_scr_act(), NULL);
lv_obj_set_size(slider1, 160, 30);
lv_obj_align(slider1, NULL, LV_ALIGN_IN_TOP_RIGHT, -30, 30);
lv_slider_set_action(slider1, slider_action);
lv_bar_set_value(slider1, 70);
/*Create a label right to the slider*/
lv_obj_t * slider1_label = lv_label_create(lv_scr_act(), NULL);
lv_label_set_text(slider1_label, "Default");
\label{lower} {\tt lv\_obj\_align(slider1\_label, slider1, LV\_ALIGN\_OUT\_LEFT\_MID, -20, 0);}
/*Create a bar, an indicator and a knob style*/
static lv_style_t style_bg;
static lv style t style indic;
static lv_style_t style_knob;
lv_style_copy(&style_bg, &lv_style_pretty);
style_bg.body.main_color = LV_COLOR_BLACK;
style bg.body.grad color = LV COLOR GRAY:
style_bg.body.radius = LV_RADIUS_CIRCLE;
style_bg.body.border.color = LV_COLOR_WHITE;
lv_style_copy(&style_indic, &lv_style_pretty);
style_indic.body.grad_color = LV_COLOR_GREEN;
style_indic.body.main_color = LV_COLOR_LIME;
style_indic.body.radius = LV_RADIUS_CIRCLE;
style_indic.body.shadow.width = 10;
style_indic.body.shadow.color = LV_COLOR_LIME;
style_indic.body.padding.hor = 3;
style_indic.body.padding.ver = 3;
lv_style_copy(&style_knob, &lv_style_pretty);
style_knob.body.radius = LV_RADIUS_CIRCLE;
style_knob.body.opa = LV_OPA_70;
style_knob.body.padding.ver = 10 ;
/*Create a second slider*/
lv_obj_t * slider2 = lv_slider_create(lv_scr_act(), slider1);
lv_slider_set_style(slider2, LV_SLIDER_STYLE_BG, &style_bg);
lv_slider_set_style(slider2, LV_SLIDER_STYLE_INDIC,&style_indic);
lv_slider_set_style(slider2, LV_SLIDER_STYLE_KNOB, &style_knob);
lv_obj_align(slider2, slider1, LV_ALIGN_OUT_BOTTOM_MID, 0, 30); /*Align below 'bar1'*/
/*Create a second label*/
lv_obj_t * slider2_label = lv_label_create(lv_scr_act(), slider1_label);
lv_label_set_text(slider2_label, "Modified");
lv_obj_align(slider2_label, slider2, LV_ALIGN_OUT_LEFT_MID, -30, 0);
```

Klavye (lv_kb)

Written for v5.1

Overview

As it names shows the **Keyboard** object provides a keyboard to **write text**. You can assign a **Text area** to the Keyboard to put the clicked characters there. To assign the **Text** area use 1v_kb_set_ta(kb, ta).

The keyboard contains an _Ok_ and a *Hide* button. An ok and a hide action can be specified by \[\text{lv_kb_set_ok_action(kb, action)} \] and \[\text{lv_kb_set_hide_action(kb, action)} \] to add callbacks to Ok/Hide clicks. If no action is specified then the buttons will delete the Keyboard.

The assigned Text area's **cursor** can be **managed** by the keyboard: when the keyboard is assigned the previous Text area's cursor will be hidden an the new's will be shown. Clicking on _Ok_ or *Hide* will also hide the cursor. The cursor manager feature is enabled by \[\text{lv_kb_set_cursor_manage(kb, true)} \]. The default is not manage.

The Keyboards have two modes:

- LV_KB_MODE_TEXT: display letters, number and special characters
- LV_KB_MODE_NUM: display numbers, +/- sign and dot

To set the mode use lv_kb_set_mode(kb, mode) . The default is _LV_KB_MODE_TEXT_

You can specify a **new map** (layout) for the keyboard with <code>lv_kb_set_map</code> (kb, <code>map</code>). It works like a the <code>Button</code> matrix so control character can be added to the layout the set button width and other attributes. Keep in mind using following keywords will have the same effect as with the original map: <code>_SYMBOL_OK_, _SYMBOL_CLOSE_, _SYMBOL_LEFT_, _SYMBOL_RIGHT_, ABC, abc, Enter, Del, _#1_, +/- .</code>

Style usage

The Keyboard works with 6 styles: a background and 5 button styles for each states. You can set the styles with tv_kb_set_style (btn, LV_KB_STYLE_..., &style) . The background and the buttons use the style.body properties. The labels use the style.text properties of the button styles.

- LV_KB_STYLE_BG Background style. Uses all style.body properties including padding Default: lv style pretty
- LV_KB_STYLE_BTN_REL style of the released buttons. Default: _lv_style_btn_rel_
- LV_KB_STYLE_BTN_PR style of the pressed buttons. Default: _lv_style_btn_pr_
- $\bullet \ \ LV_KB_STYLE_BTN_TGL_REL \ style \ of the \ toggled \ released \ buttons. \ Default: \ _lv_style_btn_tgl_rel_btn_tgl_re$
- LV_KB_STYLE_BTN_TGL_PR style of the toggled pressed buttons. Default: lv style btn tgl pr
- LV_KB_STYLE_BTN_INA style of the inactive buttons. Default: _lv_style_btn_ina_





```
/*Create styles for the keyboard*/
static lv_style_t rel_style, pr_style;
lv_style_copy(&rel_style, &lv_style_btn_rel);
rel_style.body.radius = 0;
lv_style_copy(&pr_style, &lv_style_btn_pr);
pr_style.body.radius = 0;
/*Create a keyboard and apply the styles*/
lv_obj_t *kb = lv_kb_create(lv_scr_act(), NULL);
lv_kb_set_cursor_manage(kb, true);
lv_kb_set_style(kb, LV_KB_STYLE_BG, &lv_style_transp_tight);
lv_kb_set_style(kb, LV_KB_STYLE_BTN_REL, &rel_style);
lv_kb_set_style(kb, LV_KB_STYLE_BTN_PR, &pr_style);
/*Create a text area. The keyboard will write here*/
lv_obj_t *ta = lv_ta_create(lv_scr_act(), NULL);
lv\_obj\_align(ta, NULL, LV\_ALIGN\_IN\_TOP\_MID, 0, 10);\\
lv_ta_set_text(ta, "");
/*Assign the text area to the keyboard*/
lv_kb_set_ta(kb, ta);
```

Konteynır (lv_cont)

Written for v5.1 (rev.3)

Genel Bakış

Konteynerler bazı özel özellirleri ile dikdörtgen'e benzer nesneler dir.

Konteynerlara **katman** uygulandığında alt birimlerede uygulanmış olur. Katman aralığı(mesafe) style.body.padding.hor/ver/inner özelliği ile yapılır. Olası katman seçenekleri:

- LV_LAYOUT_OFF: Alt birimleri hizalama(olumsuz)
- LV LAYOUT CENTER: Alt birimleri merkezde sutun şeklinde hizala ve aralarında pad.inner boşluk bırak
- LV_LAYOUT_COL_L: Alt birimleri soldaki bir sütunda hizalayın. Solda *pad.hor* alanı, üstte *pad.ver* alanı ve alt birimler arasında *pad.inner* alanı olsun.
- LV LAYOUT COL M: Alt birimleri ortalanmış sütunla hizalayın. En üstte pad.ver alanını ve alt birimler arasında pad.inner alanını tutun.
- LV_LAYOUT_COL_R: Alt birimleri sağa dayalı bir sütunda hizalayın. Sağ tarafta pad.hor alanı, üstte pad.ver alanı ve alt birimler arasında pad.inner alanı olsun.
- LV_LAYOUT_ROW_T: Alt birimleri en üst sıradaki bir satırda hizalayın. Solda *pad.hor* alanı, üstte *pad.ver* alanı ve alt birimler arasında *pad.inner* alanı olsun.
- LV LAYOUT ROW M: Orta sıradaki alt birimleri hizalayın. Sol tarafta pad.hor alanı ve alt birimler arasında pad.inner boşluk bulundurun.
- LV_LAYOUT_ROW_B: Alttaki bir satırdaki alt birimleri hizalayın. Soldaki *pad.hor* alanını, alt kısımdaki *pad.ver* alanını ve alt birimler arasında *pad.inner* alanı tutun.
- LV_LAYOUT_PRETTY: Bir satırda olabildiğince çok nesne koyun (en azından *pad.inner* boşluk ve yanlarda *pad.hor* boşluk ile) ve yeni bir sıraya başlayın. Her bir çizgideki alanı, alt birimler arasında eşit olarak bölün. Üst kısımda *pad.ver* alanını ve satırların arasındaki *pad.inner* alanını tutun.
- LV LAYOUT GRID: PRETTY LAYOUT'a benzer, ancak yatay alanı eşit olarak bölmesin, sadece pad.hor boşluğa izin verin.

Tüm alt birimleri dahil etmek için kapsayıcı boyutunu otomatik olarak ayarlayan bir **otomatik sığdır(uyum)** özelliğini etkinleştirebilirsiniz. Solda ve sağda *pad.hor* alanı ve altta *pad.ver* alanı olacak. Otomatik yerleştirme, Iv_cont_set_fit(cont, true) işleviyle yatay, dikey veya her iki yönde de etkinleştirilebilir. İkinci parametre yataydır, üçüncü parametre dikey sığdırma etkinliğidir.

Biçim Kullanımı

• style.body özellikleri kullanılır.

Notlar

• Alt birim pozisyonunu hor / ver fit etkin iken ayarlayamazsınız. Ne olduğunu hayal edelim. Uyum sağlandığında tek alt birimin pozisyonunu değiştirirseniz, konteyner yeni pozisyonu "etrafında" hareket ettirir / yerleştirir. Bir konteynerda daha fazla nesneniz varsa, bunları birbirine göre hizalayabilirsiniz. Bir geçici çözüm olarak konteyner üzerinde küçük saydam bir nesne oluşturabilirsiniz. Alt birimleri "takip etmemek" için konteyner'ı düzeltecektir.

Örnek

47/82

```
lv_obj_t * box1;
box1 = lv_cont_create(lv_scr_act(), NULL);
lv_obj_set_style(box1, &lv_style_pretty);
lv_cont_set_fit(box1, true, true);
/*Konteyner'a metin ekle*/
lv_obj_t * txt = lv_label_create(box1, NULL);
lv\_label\_set\_text(txt, \ "Lorem ipsum dolor \n"
                    "sit amet, consectetur\n"
                    "adipiscing elit, sed do\n"
                    "eiusmod tempor incididunt\n"
                    "ut labore et dolore\n"
                    "magna aliqua.");
/*Biçim oluştur*/
static lv_style_t style;
lv_style_copy(&style, &lv_style_pretty_color);
style.body.shadow.width = 6;
style.body.padding.hor = 5;
                                                     /*Büyük bir yatay boşluk oluştur*/
/*Başka bir konteyner oluştur*/
lv_obj_t * box2;
box2 = lv_cont_create(lv_scr_act(), NULL);
lv_cont_set_fit(box2, true, false); /*Dikey siğdirmayı aktif etme*/
lv_obj_set_height(box2, 55); /*Sabit yükseklik ayarla*/
/*Yeni konteyner'a metin ekle*/
lv_obj_t * txt2 = lv_label_create(box2, NULL);
lv_label_set_text(txt2, "No vertical fit 1...\n"
                    "No vertical fit 2...\n"
                    "No vertical fit 3...\n"
                    "No vertical fit 4...");
/*Konteyner'ı öncekinin altına hizala*/
lv_obj_align(box2, box1, LV_ALIGN_OUT_BOTTOM_MID, 30, -30);
```

LED (lv_led)

Written for v5.1

Overview

The LEDs are rectangle-like (or circle) object. You can set their **brightness** with lv_led_set_bright(led, bright(led, bright(led"), bright(led"), bright(led")

Use v_{led} and v_{led} to set the brightness to a predefined ON or OFF value. The v_{led} toggles between the ON and OFF state.

Style usage

The LED uses one style which can be set by <code>lv_led_set_style(led, &style)</code>. To determine the appearance the **style.body** properties are used. The colors are darkened and shadow width is reduced at a lower brightness and gains its original value at brightness 255 to show a lighting effect. The default style is: <code>lv_style_pretty_color</code>.

Notes

• Typically the default style is not suitable therefore you have to create you own style. See the Examples.



```
/*Create a style for the LED*/
static lv style t style led;
lv_style_copy(&style_led, &lv_style_pretty_color);
style_led.body.radius = LV_RADIUS_CIRCLE;
style_led.body.main_color = LV_COLOR_MAKE(0xb5, 0x0f, 0x04);
style_led.body.grad_color = LV_COLOR_MAKE(0x50, 0x07, 0x02);
style_led.body.border.color = LV_COLOR_MAKE(0xfa, 0x0f, 0x00);
style_led.body.border.width = 3;
style_led.body.border.opa = LV_OPA_30;
{\tt style\_led.body.shadow.color = LV\_COLOR\_MAKE(0xb5, 0x0f, 0x04);}
style_led.body.shadow.width = 10;
/*Create\ a\ LED\ and\ switch\ it\ ON*/
lv_obj_t * led1 = lv_led_create(lv_scr_act(), NULL);
lv_obj_set_style(led1, &style_led);
lv_obj_align(led1, NULL, LV_ALIGN_IN_TOP_MID, 40, 40);
lv_led_on(led1);
/*Copy the previous LED and set a brightness*/
lv_obj_t * led2 = lv_led_create(lv_scr_act(), led1);
\label{eq:loss_loss} $$ lv\_obj\_align(led2, led1, LV\_ALIGN\_OUT\_BOTTOM\_MID, 0, 40); $$
lv_led_set_bright(led2, 190);
/*Copy the previous LED and switch it OFF*/
lv_obj_t * led3 = lv_led_create(lv_scr_act(), led1);
lv_obj_align(led3, led2, LV_ALIGN_OUT_BOTTOM_MID, 0, 40);
lv_led_off(led3):
/*Create 3 labels next to the LEDs*/
lv_obj_t * label = lv_label_create(lv_scr_act(), NULL);
lv_label_set_text(label, "LED On");
lv_obj_align(label, led1, LV_ALIGN_OUT_LEFT_MID, -40, 0);
label = lv_label_create(lv_scr_act(), NULL);
lv_label_set_text(label, "LED half");
lv_obj_align(label, led2, LV_ALIGN_OUT_LEFT_MID, -40, 0);
label = lv_label_create(lv_scr_act(), NULL);
lv_label_set_text(label, "LED Off");
lv_obj_align(label, led3, LV_ALIGN_OUT_LEFT_MID, -40, 0);
```

Liste (lv_list)

Written for v5.1

Overview

The Lists are built from a background **Page** and **Buttons** on it. The Buttons contain an optional icon-like Image (which can be a symbol too) and a Label. When the list become long enough it can be scrolled. The **width of the buttons** is set to maximum according to the object width. The **height** of the buttons are adjusted automatically according to the content (content height + style.body.padding.ver).

You can **add new list element** with <code>lv_list_add(list, "U:/img", "Text", rel_action)</code> or with symbol icon <code>lv_list_add(list, symbol_EDIT, "Edit text")</code>. If you do no want to add image use <code>""</code> as file name. The function returns with a pointer to the created button to allow further configurations.

You can use lv_list_get_btn_label(list_btn) and lv_list_get_btn_img(list_btn) to get the label and the image of a list button.

In the release action of a button you can get the the **button's text** with lv_list_get_btn_text(button). It helps to identify the released list element.

To delete a list element just use lv_obj_del() on the return value of lv_list_add() .

You can navigate manually in the list with list_up(list) and lv_list_down(list) .

You can focus on a button directly using lv_list_focus(btn, anim_en) .

The **animation time** of up/down/focus movements can be set via: lv_list_set_anim_time(list, anim_time). Zero animation time means not animations.

Style usage

The lv_list_set_style(list, LV_LIST_STYLE_..., &style) function sets the style of a list. For details explanation of _BG_, SCRL and _SB_ see Page

- LV_LIST_STYLE_BG list background style. Default: _lv_style_transp_fit_
- LV_LIST_STYLE_SCRL scrollable parts's style. Default: _lv_style_pretty_
- LV_LIST_STYLE_SB scrollbars' style. Default: _lv_style_pretty_color_
- LV_LIST_STYLE_BTN_REL button released style. Default: lv style btn rel
- LV_LIST_STYLE_BTN_PR button pressed style. Default: _lv_style_btn_pr_
- LV_LIST_STYLE_BTN_TGL_REL button toggled released style. Default: _lv_style_btn_tgl_rel_
- LV_LIST_STYLE_BTN_TGL_PR button toggled pressed style. Default: _lv_style_btn_tgl_pr_
- LV_LIST_STYLE_BTN_INA button inactive style. Default: _lv_style_btn_ina_

Notes

- You can set a transparent background for the list. In this case if you have only a few list buttons the list will look shorter but become scrollable when more list elements are added.
- The button labels default long mode is LV_LABEL_LONG_ROLL. You can modify it manually. Use LV_list_get_btn_label() to get buttons's label
- To **modify the height of the buttons** adjust the *body.padding.ver* field of the corresponding style (LV_LIST_STYLE_BTN_REL , LV LIST STYLE BTN PR etc.)

Default Modified New Open Default Modified New Default Modified New Default Modified New Default New

```
/*Will be called on click of a button of a list*/
static lv_res_t list_release_action(lv_obj_t * list_btn)
{
    printf("List element click:%s\n", lv_list_get_btn_text(list_btn));
    return LV_RES_OK; /*Return OK because the list is not deleted*/
}
* Create a default list
/*Crate the list*/
lv_obj_t * list1 = lv_list_create(lv_scr_act(), NULL);
lv_obj_set_size(list1, 130, 170);
lv_obj_align(list1, NULL, LV_ALIGN_IN_TOP_LEFT, 20, 40);
/*Add list elements*/
lv_list_add(list1, SYMBOL_FILE, "New", list_release_action);
{\tt lv\_list\_add(list1, SYMBOL\_DIRECTORY, "Open", list\_release\_action);}
{\tt lv\_list\_add(list1, SYMBOL\_CLOSE, "Delete", list\_release\_action);}
lv_list_add(list1, SYMBOL_EDIT, "Edit", list_release_action);
lv_list_add(list1, SYMBOL_SAVE, "Save", list_release_action);
/*Create a label above the list*/
lv_obj_t * label;
label = lv_label_create(lv_scr_act(), NULL);
lv_label_set_text(label, "Default");
ly obj align(label, list1, LV ALIGN OUT TOP MID, 0, -10);
* Create new styles
*******
/*Create a scroll bar stule*/
static lv_style_t style_sb;
lv_style_copy(&style_sb, &lv_style_plain);
style_sb.body.main_color = LV_COLOR_BLACK;
style_sb.body.grad_color = LV_COLOR_BLACK;
style sb.body.border.color = LV COLOR WHITE;
style_sb.body.border.width = 1;
style_sb.body.border.opa = LV_OPA_70;
style_sb.body.radius = LV_RADIUS_CIRCLE;
style_sb.body.opa = LV_OPA_60;
/*Create stules for the buttons*/
static lv_style_t style_btn_rel;
static lv_style_t style_btn_pr;
lv_style_copy(&style_btn_rel, &lv_style_btn_rel);
style_btn_rel.body.main_color = LV_COLOR_MAKE(0x30, 0x30, 0x30);
style_btn_rel.body.grad_color = LV_COLOR_BLACK;
style_btn_rel.body.border.color = LV_COLOR_SILVER;
style_btn_rel.body.border.width = 1;
style_btn_rel.body.border.opa = LV_OPA_50;
style_btn_rel.body.radius = 0;
lv_style_copy(&style_btn_pr, &style_btn_rel);
style_btn_pr.body.main_color = LV_COLOR_MAKE(0x55, 0x96, 0xd8);
style_btn_pr.body.grad_color = LV_COLOR_MAKE(0x37, 0x62, 0x90);
style_btn_pr.text.color = LV_COLOR_MAKE(0xbb, 0xd5, 0xf1);
* Create a list with modified styles
**********
/*Copy the previous list*/
lv_obj_t * list2 = lv_list_create(lv_scr_act(), list1);
lv_obj_align(list2, NULL, LV_ALIGN_IN_TOP_RIGHT, -20, 40);
lv_list_set_sb_mode(list2, LV_SB_MODE_AUTO);
lv_list_set_style(list2, LV_LIST_STYLE_BG, &lv_style_transp_tight);
lv_list_set_style(list2, LV_LIST_STYLE_SCRL, &lv_style_transp_tight);
lv_list_set_style(list2, LV_LIST_STYLE_BTN_REL, &style_btn_rel); /*Set the new button styles*/
lv_list_set_style(list2, LV_LIST_STYLE_BTN_PR, &style_btn_pr);
/*Create a label above the list*/
label = lv_label_create(lv_scr_act(), label);
                                                   /*Copy the previous label*/
lv label set text(label, "Modified");
lv\_obj\_align(label, \ list2, \ LV\_ALIGN\_OUT\_TOP\_MID, \ 0, \ -10);
```

Mesaj kutusu (lv_mbox)

Written for v5.1

Overview

The message boxes act as **pop-ups**. They are built from a **background**, a **text** and **buttons**. The background is a Container object with enabled vertical fit to ensure that the text and the buttons are always visible.

To set the text use the lv_mbox_set_text(mbox, "My text") function.

The buttons are a Button matrix. To **add buttons** use the <code>lv_mbox_add_btns(mbox, btn_str, action)</code> function. In this you can specify the button text e.g (<code>const_char * btn_str[] = {"btn1", "btn2", ""}</code>) and add a callback which is called when a button is released. For more information visit the Button matrix's documentation.

With lv_mbox_start_auto_close (mbox, delay) the message box can be closed automatically after delay milliseconds with a long animation. The lv_mbox_stop_auto_close (mbox) function will stop a started auto close.

The close animation time can be adjusted by lv_mbox_set_anim_time(mbox, anim_time).

Style usage


Use $lv_mbox_set_style(mbox, LV_MBOX_STYLE_..., \&style)$ to set a new style for an element of the message box:

- LV_MBOX_STYLE_BG specifies the background container's style. style.body for background and style.label for the text appearance.

 Default: Iv_style_pretty
- LV_MBOX_STYLE_BTN_BG style of the buttons (button matrix) background. Default: Iv_style_transp
- LV_MBOX_STYLE_BTN_REL style of the released buttons. Default: lv_style_btn_rel
- LV_MBOX_STYLE_BTN_PR style of the pressed buttons. Default: lv_style_btn_pr
- LV_MBOX_STYLE_BTN_TGL_REL style of the toggled released buttons. Default: lv_style_btn_tgl_rel
- LV_MBOX_STYLE_BTN_TGL_PR style of the toggled pressed buttons. Default: lv_style_btn_tgl_pr
- LV_MBOX_STYLE_BTN_INA style of the inactive buttons. Default: lv_style_btn_ina

Notes

• The **height of the buttons** comes from the *font height* + $2 \times body.vpad$ of LV_MBOX_STYLE_BTN_REL_

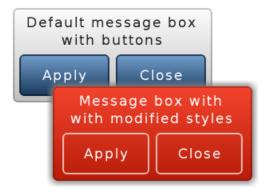

```
/*Called when a button is clicked*/
static lv_res_t mbox_apply_action(lv_obj_t * mbox, const char * txt)
       printf("Mbox button: %s\n", txt);
       return LV_RES_OK; /*Return OK if the message box is not deleted*/
}
 * Create a default message box
lv_obj_t * mbox1 = lv_mbox_create(lv_scr_act(), NULL);
lv\_mbox\_set\_text(mbox1, \ "Default \ message \ box \ ""
                                             "with buttons");
                                                                                                                 /*Set the text*/
/*Add two buttons*/
static const char * btns[] ={"\221Apply", "\221Close", ""}; /*Button description. '\221' lv_btnm like control char*/
lv_mbox_add_btns(mbox1, btns, NULL);
lv_obj_set_width(mbox1, 250);
{\tt lv\_obj\_align(mbox1, NULL, LV\_ALIGN\_IN\_TOP\_LEFT, 10, 10); /*Align \ to \ the \ corner*/line in the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the line of the
  * Create a message box with new styles
/*Create a new background style*/
static lv_style_t style_bg;
ly style copy(&style bg, &ly style pretty);
style_bg.body.main_color = LV_COLOR_MAKE(0xf5, 0x45, 0x2e);
style\_bg.body.grad\_color = LV\_COLOR\_MAKE(0xb9, 0x1d, 0x09);
style_bg.body.border.color = LV_COLOR_MAKE(0x3f, 0x0a, 0x03);
style_bg.text.color = LV_COLOR_WHITE;
style bg.body.padding.hor = 12;
style_bg.body.padding.ver = 8;
style_bg.body.shadow.width = 8;
/*Create released and pressed button styles*/
static lv style t style btn rel;
static lv_style_t style_btn_pr;
lv_style_copy(&style_btn_rel, &lv_style_btn_rel);
style_btn_rel.body.empty = 1;
                                                                                              /*Draw only the border*/
style_btn_rel.body.border.color = LV_COLOR_WHITE;
style_btn_rel.body.border.width = 2;
style_btn_rel.body.border.opa = LV_OPA_70;
style_btn_rel.body.padding.hor = 12;
style_btn_rel.body.padding.ver = 8;
lv_style_copy(&style_btn_pr, &style_btn_rel);
style_btn_pr.body.empty = 0;
\label{eq:style_btn_pr.body.main_color = LV_COLOR_MAKE(0x5d, 0x0f, 0x04);} \\
style_btn_pr.body.grad_color = LV_COLOR_MAKE(0x5d, 0x0f, 0x04);
 /*Copy the message box (The buttons will be copied too)*/
lv_obj_t * mbox2 = lv_mbox_create(lv_scr_act(), mbox1);
lv\_mbox\_set\_text(mbox2, "Message box with\n"
                                             "with modified styles");
lv_mbox_set_style(mbox2, LV_MBOX_STYLE_BG, &style_bg);
lv_mbox_set_style(mbox2, LV_MBOX_STYLE_BTN_REL, &style_btn_rel);
lv mbox set style(mbox2, LV MBOX STYLE BTN PR, &style btn pr);
lv_obj_align(mbox2, mbox1, Lv_ALIGN_OUT_BOTTOM_LEFT, 50, -20); /*Align according to the previous message box */
```

Onay kutusu (lv_cb)

Overview

The Check Box objects are built from a Button **background** which contains an also Button **bullet** and a **label** to realize a classical check box. The **text** can be modified by the <code>lv_cb_set_text(cb, "New text")</code> function.

An **action** can assigned by <code>lv_cb_set_action(cb, action)</code> .

You can manually **check / un-check** the Check box via <code>lv_cb_set_checked(cb, state)</code> .

Style usage

The Check box styles can be modified with lv_cb_set_style(cb, LV_CB_STYLE_..., &style) .

- LV_CB_STYLE_BG Background style. Uses all style.body properties. The label's style comes from style.text. Default: _lv_style_transp_
- LV_CB_STYLE_BOX_REL Style of the released box. Uses the style.body properties. Default: _lv_style_btn_rel_
- LV_CB_STYLE_BOX_PR Style of the pressed box. Uses the style.body properties. Default: _lv_style_btn_pr_
- LV_CB_STYLE_BOX_TGL_REL Style of the checked released box. Uses the style.body properties. Default: _lv_style_btn_tgl_rel_
- LV_CB_STYLE_BOX_TGL_PR Style of the checked released box. Uses the style.body properties. Default: _lv_style_btn_tgl_pr_



```
static lv_res_t cb_release_action(lv_obj_t * cb)
    /*A check box is clicked*/
    printf("\$s \ state: \$d\n", \ lv\_cb\_get\_text(cb), \ lv\_cb\_is\_checked(cb));
   return LV_RES_OK;
}
 * Create a container for the check boxes
/*Create border style*/
\verb|static lv_style_t| \verb|style_border|;
lv_style_copy(&style_border, &lv_style_pretty_color);
style_border.glass = 1;
style_border.body.empty = 1;
/*Create a container*/
lv_obj_t * cont;
cont = lv_cont_create(lv_scr_act(), NULL);
lv_cont_set_layout(cont, LV_LAYOUT_COL_L);
                                              /*Arrange the children in a column*/
lv_cont_set_fit(cont, true, true);
                                               /*Fit the size to the content*/
lv_obj_set_style(cont, &style_border);
/********
 * Create check boxes
/*Create check box*/
lv_obj_t * cb;
cb = lv_cb_create(cont, NULL);
lv_cb_set_text(cb, "Potato");
lv_cb_set_action(cb, cb_release_action);
/*Copy the previous check box*/
cb = lv_cb_create(cont, cb);
lv_cb_set_text(cb, "Onion");
/*Copy the previous check box*/
cb = lv_cb_create(cont, cb);
lv_cb_set_text(cb, "Carrot");
/*Copy the previous check box*/
cb = lv_cb_create(cont, cb);
lv_cb_set_text(cb, "Salad");
/*Align the container to the middle*/
lv_obj_align(cont, NULL, LV_ALIGN_CENTER, 0, 0);
```

Önyükleyici (lv_preload)

Written for v5.2

Overview

The preloader object is a spinning arc over a border.

The length of the arc can be adjusted by $lv_preload_set_arc_length(preload, deg)$.

Style usage

The LV_PRELOAD_STYLE_MAIN style describes both the arc and the border style:

- arc is described by the line properties
- **border** is described by the **body.border** properties including **body.padding.hor/ver** (smaller is used) to give a smaller radius for the border.



Pencere (lv_window)

Written for v5.1 (rev.4)

Genel Bakış

Pencereler, **en karmaşık** konteyner benzeri nesnelerden biridir. İki ana bölümden oluşur: Üstte bir **başlık** Konteyner ve başlığın altındaki **içerik** için bir Sayfa.

Üstbilgi **başlığı** değiştirilebilir: [lv_win_set_title(win, "Yeni Başlık")]. Başlık, üstbilginin biçimini her zaman miraslanır.

Üst bilginin sağına **kontrol butonları** <code>lv_win_add_btn(win, "U:/close", my_close_action)</code> fonksiyonu ile eklenebilir. İkinci parametre bir resim dosyası yoludur, üçüncü parametre buton bırakıldığı zaman çağrılan bir fonksiyondur. **Semboller** resim gibi kullanabilir: <code>lv_win_add_btn(win, symbol_close, my_close_action)</code>.

Kontrol butonlarının boyutu lv_win_set_btn_size(win, yeni_boyut) fonksiyonuyla değiştirebilir.

Kaydırma çubuğunun davranışı lv_win_set_sb_mode(win, LV_SB_MODE_...) fonksiyonuyla ayarlanabilir.

İçerik düzenini ayarlamak için 1v_win_set_1ayout (win, LV_LAYOUT_...) fonksiyonu kullanılır.

Biçim kullanımı

Pencerenin öğesine yeni bir stil ayarlamak için 1v_win_set_style(win, LV_WIN_STYLE_..., &style) fonksiyonu kullanılır.

- LV_WIN_STYE_BG tüm style.body özelliklerini kullanan ana arka plan(üstbilgi ve içerik yer alır) (varsayılan: lv style plain)
- LV_WIN_STYLE_CONTENT_BG tüm style.body özelliklerini kullanan içerik sayfasının arka planı (varsayılan: lv style transp)
- LV WIN STYLE CONTENT SCRL tüm style.body özelliklerini kullanan içerik sayfasının kaydırma çubuğu (varsayılan: lv style transp)
- LV_WIN_STYLE_SB tüm style.body özelliklerini kullanan kaydırma çubuğunun biçimi. Kaydırma çubuğunun dolgusu sırasıyla yatay/dikey* dolgularıyla ayarlanır ve kaydırma çubuğunun genişliği de iç dolguyla ayarlanır. (varsayılan: lv_style_pretty_color)
- LV_WIN_STYLE_HEADER tüm style.body özelliklerini kullanan üstbilgi biçimi (varsayılan: lv_style_plain_color)
- LV_WIN_STYLE_BTN_REL tüm style.body özelliklerini kullanan butonu bırakman(üstbilgi) biçimi (varsayılan: lv_style_btn_rel)
- LV_WIN_STYLE_BTN_PR tüm style.body özelliklerini kullanan butona basma(üstbilgi) biçimi (default: lv style btn pr)

Notlar



```
/*Yeni bir kaydırma çubuğu biçimi oluştur*/
static lv_style_t style_sb;
lv_style_copy(&style_sb, &lv_style_plain);
style_sb.body.main_color = LV_COLOR_BLACK;
style_sb.body.grad_color = LV_COLOR_BLACK;
style_sb.body.border.color = LV_COLOR_WHITE;
style_sb.body.border.width = 1;
style_sb.body.border.opa = LV_OPA_70;
style_sb.body.radius = LV_RADIUS_CIRCLE;
style_sb.body.opa = LV_OPA_60;
/*Yeni bir pencere oluştur*/
lv_obj_t * win = lv_win_create(lv_scr_act(), NULL);
lv_win_set_title(win, "Example window");
                                                                 /*Başlığı ayarla*/
lv_win_set_style(win, LV_WIN_STYLE_SB, &style_sb);
                                                                 /*Kaydırma çubuğunun biçimini ayarla*/
/*Üstbilgiye kontrol butonu ekle*/
                                                                 /*Ayar butonu ekle*/
/*Kapatma butonu ekle ve kapatma aksiyonunun kullanılması*/
lv_win_add_btn(win, SYMBOL_SETTINGS, my_setup_action);
lv_win_add_btn(win, SYMBOL_CLOSE, lv_win_close_action);
/*İçerik örneği ekle*/
lv_obj_t * txt = lv_label_create(win, NULL);
lv\_label\_set\_text(txt, \ "This is the content of the window \n\n"
                       "You can add control buttons to\nthe window header\n\n"
                       "You can scroll it\n\n"
                        "See the scroll bar on the right!");
```

Resim (lv_img)

Written for v5.1

Overview

The Images are the basic object to display images. To provide maximum flexibility the source of the image can be:

- a variable in the code (a C array with the pixels)
- a file stored externally (like on an SD card)
- a text with Symbols

To set the source of an image the lv_img_set_src function can be used.

To generate a pixel array from a PNG, JPG or BMP image use the Online image converter tool and set the converted image with its pointer:

```
lv_img_set_src(img1, &converted_img_var);
```

To use **external files** you also need to convert the image files using the online converter tool but now you should select the binary Output format. To see how to handle external image files from LittlevGL check the Tutorial.

You can set a **symbol** from lv_symbol_def.h too. In this case, the image will be rendered as text according to the **font** specified in the style. It enables to use light weighted mono-color "letters" instead of real images. You can set symbol like this:

```
lv_img_set_src(img1, SYMBOL_OK);
```

The internal (variable) and external images support 2 transparency handling methods:

- Chrome keying Lv_color_transp (lv_conf.h) will be transparent
- Alpha byte Add an alpha byte to every pixel

These options can be selected in the online font converter.

The images can be **re-colored in run-time** to any color according to the brightness of the pixels. It is very useful to show different states (selected, inactive, pressed etc) of an image without storing more versions of the same image. This feature can be enabled in the style by setting img.intense between LV_OPA_TRANSP (no recolor, value: 0) and LV_OPA_TRANSP (full recolor, value: 255). The default value is LV_OPA_TRANSP so this feature is disabled.

It is possible to **automatically set the size** of the image object to the image source's width and height if enabled by the lv_img_set_auto_size(image, true) function. If auto size is enabled then when a new file is set the object size is automatically changed. Later you can modify the size manually. If the object size is greater then the image size in any directions then the image will be repeated like a mosaic. The auto size is enabled by default if the image is not a screen.

The images' default style is NULL so they inherit the parent's style.

Style usage

- For images style.img
- For symbols style.text

Notes

• Symbols names (like SYMBOL_EDIT) are short strings, therefore, you can concatenate them to show more symbols.

Re-color the images in run time







Use symbols from fonts as images



```
/*Declare a cogwheel image variable*/
LV_IMG_DECLARE(img_cw);
* Create three images and re-color them
/*Create the first image without re-color*/
lv_obj_t * img1 = lv_img_create(lv_scr_act(), NULL);
lv_img_set_src(img1, &img_cw);
lv_obj_align(img1, NULL, LV_ALIGN_IN_TOP_LEFT, 20, 40);
/*Create style to re-color with light blue*/
static lv stvle t stvle img2:
lv_style_copy( &style_img2, &lv_style_plain);
style_img2.image.color = LV_COLOR_HEX(0x003b75);
style_img2.image.intense = LV_OPA_50;
/*Create an image with the light blue stule*/
lv_obj_t * img2 = lv_img_create(lv_scr_act(), img1);
lv_obj_set_style(img2, &style_img2);
lv\_obj\_align(img2, NULL, LV\_ALIGN\_IN\_TOP\_MID, \ 0, \ 40);\\
/*Create style to re-color with dark blue*/
static lv style t style img3;
lv_style_copy(&style_img3, &lv_style_plain);
style_img3.image.color = LV_COLOR_HEX(0x003b75);
style_img3.image.intense = LV_OPA_90;
/*Create an image with the dark blue stule*/
lv_obj_t * img3 = lv_img_create(lv_scr_act(), img2);
lv_obj_set_style(img3, &style_img3);
lv_obj_align(img3, NULL, LV_ALIGN_IN_TOP_RIGHT, -20, 40);
* Create an image with symbols
/*Create a string from sumbols*/
char buf[32]:
sprintf(buf, "%s%s%s%s%s%s%s",
             SYMBOL_DRIVE, SYMBOL_FILE, SYMBOL_DIRECTORY, SYMBOL_SETTINGS,
             SYMBOL_POWER, SYMBOL_GPS, SYMBOL_BLUETOOTH);
/*Create style with a symbol font*/
static lv_style_t style_sym;
lv_style_copy(&style_sym, &lv_style_plain);
  The built-in fonts are extended with symbols
style_sym.text.font = &lv_font_dejavu_60;
style_sym.text.letter_space = 10;
/*Create an image and use the string as source*/
lv_obj_t * img_sym = lv_img_create(lv_scr_act(), NULL);
lv_img_set_src(img_sym, buf);
lv_img_set_style(img_sym, &style_sym);
\label{localign} $$ lv\_obj\_align(img\_sym, NULL, LV\_ALIGN\_IN\_BOTTOM\_MID, 0, -30); $$
/*Create description labels*/
lv_obj_t * label = lv_label_create(lv_scr_act(), NULL);
lv_label_set_text(label, "Re-color the images in run time");
{\tt lv\_obj\_align(label, NULL, LV\_ALIGN\_IN\_TOP\_MID, \ 0, \ 15);}
label = lv_label_create(lv_scr_act(), NULL);
lv_label_set_text(label, "Use symbols from fonts as images");
{\tt lv\_obj\_align(label, NULL, LV\_ALIGN\_IN\_BOTTOM\_MID, 0, -80);}
```

Resim buton (lv_imgbtn)

Written for v5.2

Overview

The Image button is very similar to the simple Button object. The only difference is it displays user-defined images in each state instead of drawing a button. Before reading this please learn how the Buttons work in LittelvGL: link to the button

To set the image in a state the <code>lv_imgbtn_set_src(imgbtn, LV_BTN_STATE_..., &img_src)</code> The image sources works the same as described in the Image object. TODO link

Similarly to the Button object actions (callbacks) can be assigned by <code>lv_imgbtn_set_action(imgbtn, LV_BTN_ACTION_..., my_action)</code> .

The states also work like with Button object. It can be set with lv_imgbtn_set_state(imgbtn, LV_BTN_STATE_...)

The **toggle** feature can be enabled with lv_imgbtn_set_toggle(imgbtn, true)

Style usage

The Image buttons can have unique styles for each state. All the style.image properties used by the Image button:

- image.color Recolor the image to this color according to intense
- image.intense The extent of recoloring (0..255 or LV_OPA_0/10/20..100)
- image.opa The opacity of the object (0..255 or LV_OPA_0/10/20..100)

Notes



```
/*Create style to make the button darker when pressed*/
lv style t style pr;
lv_style_copy(&style_pr, &lv_style_plain);
style_pr.image.color = LV_COLOR_BLACK;
style_pr.image.intense = LV_OPA_50;
style_pr.text.color = LV_COLOR_HEX3(0xaaa);
LV_IMG_DECLARE(imgbtn_green);
LV_IMG_DECLARE(imgbtn_blue);
/*Create an Image button*/
lv_obj_t * imgbtn1 = lv_imgbtn_create(lv_scr_act(), NULL);
lv_imgbtn_set_src(imgbtn1, LV_BTN_STATE_REL, &imgbtn_green);
{\tt lv\_imgbtn\_set\_src(imgbtn1, LV\_BTN\_STATE\_PR, \&imgbtn\_green);}
lv_imgbtn_set_src(imgbtn1, LV_BTN_STATE_TGL_REL, &imgbtn_blue);
lv_imgbtn_set_src(imgbtn1, LV_BTN_STATE_TGL_PR, &imgbtn_blue);
lv_imgbtn_set_style(imgbtn1, LV_BTN_STATE_PR, &style_pr);
                                                                  /*Use the darker style in the pressed state*/
lv_imgbtn_set_style(imgbtn1, LV_BTN_STATE_TGL_PR, &style_pr);
lv_imgbtn_set_toggle(imgbtn1, true);
{\tt lv\_obj\_align(imgbtn1, NULL, LV\_ALIGN\_CENTER, 0, -40);}
/*Create a label on the Image button*/
lv_obj_t * label = lv_label_create(imgbtn1, NULL);
lv_label_set_text(label, "Button");
/*Copy the fist image button and set Toggled state*/
lv_obj_t * imgbtn2 = lv_imgbtn_create(lv_scr_act(), imgbtn1);
lv_btn_set_state(imgbtn2, LV_BTN_STATE_TGL_REL);
\label{lv_obj_align(imgbtn2, imgbtn1, LV_ALIGN_OUT_BOTTOM_MID, 0, 20);} \\
/*Create a label on the Image button*/
label = lv_label_create(imgbtn2, NULL);
lv_label_set_text(label, "Button");
```

Sarma çubuğu (lv_roller)

Written for v5.1 Updated to v5.2

Overview

Roller allow you to simply select one option from more with scrolling. Its functionalities are similar to Drop down list.

The **options** are passed to the Roller as a **string** with $|v_roller_set_options(roller, options)|$. The options should be separated by $|v_roller_set_options(roller, options)|$. The options should be separated by $|v_roller_set_options(roller, options)|$.

You can select an option manually with ly_roller_set_selected (roller, id) , where _id_ is the index of an option.

A callback function can be specified with lv_roller_set_action(roller, my_action) to call when a new option is selected.

The roller's height can be adjusted with lv_roller_set_visible_row_count(roller, row_cnt) to set number of visible options.

The width is adjusted automatically. To prevent this apply <code>lv_roller_set_hor_fit(roller, false)</code> and set the width manually by <code>lv_obj_set_width(roller, width)</code>. You should use <code>lv_roller_set_hor_fit(roller, false)</code> instead of <code>lv_cont_set_fit(lv_page_get_scrl(roller), false, false);</code>, ohterwise you'll get an <code>LV_LABEL_ALIGN_LEFT</code> style of the list label text.

The Roller's open/close **animation** time is adjusted by <code>lv_roller_set_anim_time(roller, anim_time)</code>. Zero animation time means no animation. This feature is implemented within <code>lv_ddlist.c</code> in v5.2: <code>lv_ddlist_set_anim_time(roller, anim_time);</code> should be used for animation.

Style usage

The lv_roller_set_style(roller, Lv_ROLLER_STYLE_..., &style) set the styles of a roller.

- LV_ROLLER_STYLE_BG Style of the background. All *style.body* properties are used. It is used for the label's style from *style.text*. Gradient is applied on the top and bottom as well. Default: _lv_style_pretty_
- LV_DDLIST_STYLE_SEL Style of the selected option. The *style.body* properties are used. The selected option will be recolored with *text.color*. Default: _lv_style_plain_color_





```
/*Create a default roller*/
lv_obj_t *roller1 = lv_roller_create(lv_scr_act(), NULL);
lv\_roller\_set\_options (roller1, \ "Apple \ ""
                                "Broccoli\n"
                                "Cabbage\n"
                                 "Dewberry\n"
                                 "Eggplant\n"
                                "Fig\n"
                                "Grapefruit");
lv_obj_set_pos(roller1, 50, 80);
/*Create styles*/
static lv_style_t bg_style;
lv_style_copy(&bg_style, &lv_style_pretty);
bg_style.body.main_color = LV_COLOR_WHITE;
bg_style.body.grad_color = LV_COLOR_HEX3(0xddd);
bg_style.body.border.width = 0;
bg_style.text.line_space = 20;
bg_style.text.opa = LV_OPA_40;
static lv_style_t sel_style;
lv_style_copy(&sel_style, &lv_style_pretty);
sel\_style.body.empty = 1;
sel_style.body.radius = LV_RADIUS_CIRCLE;
sel_style.text.color = LV_COLOR_BLUE;
/*Create a roller and apply the new styles*/
lv_obj_t *roller2 = lv_roller_create(lv_scr_act(), NULL);
lv_roller_set_options(roller2, "0\n"
                                "1\n"
                                "2\n"
                                 "3\n"
                                "4\n"
                                "5\n"
                                "6\n"
                                "7\n"
                                 "8\n"
                                "9");
lv_roller_set_style(roller2, LV_ROLLER_STYLE_BG, &bg_style);
lv_roller_set_selected(roller2, 3, false);
lv_roller_set_style(roller2, LV_ROLLER_STYLE_SEL, &sel_style);
lv_roller_set_visible_row_count(roller2, 3);
lv_roller_set_hor_fit(roller2, false);
lv_obj_set_width(roller2, 40);
lv_obj_set_pos(roller2, 220, 50);
```

Sayfa (lv_page)

Written for v5.1 rev(5)

Genel Bakış

Tabandaki **arka plan** (veya temel) ve üstte **kaydırılabilir** olmak üzere sayfa iki konteyner dan oluşur. Eğer sayfada bir alt birim oluşuturulursa o otomatik olarak kaydırılabilir konteyner'a taşınır. Eğer kaydırılabilir konteyner arka plan dan büyük ise **sürükleyerek kaydırılabilir** (akıllı telefonlardaki listeler gibi).

Varsayılan olarak kaydırılabilir sayfanın *auto fit* özelliği dikey olarak aktif tir bu yüzden tüm alt birimleri dahil ettiği için yükseklik artar. Kaydırılabilir sayfanın genişliği otomatik olarak arka plan sayfanın genişliğine ayarlanır (eksi(-) arkaplan yatay padding).

Arka plan nesnesi sayfanın kendisi gibi referans edilebilir: [v_obj_set_width(sayfa, 100)].

Kaydırma çubuk nesnesine şunlar alınabilir: lv_page_get_scr1 (sayfa) .

kaydırma çubukları dört ilkeye bağlı olarak gösterilir:

- LV SB MODE OFF: Kaydırma çubuklarını asla gösterme
- LV_SB_MODE_ON: Kaydırma çubuklarını daima göster
- LV_SB_MODE_DRAG: Sayfa sürüklendiğinde kaydırma çubuklarını göster
- LV SB MODE AUTO: Kaydırılabilir konteyner kaydırılabilecek kadar büyük olduğunda kaydırma çubuklarını göster

Kaydırma çubuğu gösterisi ilkesini şu şekilde ayarlayabilirsiniz: tv_page_set_sb_mode (sayfa, SB_MODE). Varsayılan değer _LV_PAGE_SB_MODE_ON_;

Alt birimlere sayfa yapıştırabilirsiniz. Bu durumda, alt nesneyi sürükleyerek sayfayı kaydırabilirsiniz. tv_page_glue_obj(child, true) fonksiyonu ile etkinleştirilebilir.

Sayfada neneye odaklanma lv_page_focus(page, child, anim_time) ile yapılır.

Bir alt birimi göstermek için kaydırılabilir konteyneri hareket ettiririz. Son parametre sıfır değilse, sayfa bir animasyon ile hareket eder.

Bırakma ve basma aksiyonu sayfaya lv_page_set_rel_action(page, my_rel_action) Ve lv_page_set_pr_action(page, my_pr_action) fonksiyonları ile atanabilir. Aksiyonlar arkaplan ve kaydırılabilir nesne ile de tetiklenebilir.

Doğrudan Kaydırılabilir sayfanın ayarla/al özellik fonksiyonları:

- lv_page_set_scrl_fit()
- lv_page_set_scrl_width()
- lv_page_set_scrl_height()
- lv_page_set_scrl_layout()

Biçim Kullanımı

Sayfa elemanları için 1v_page_set_style(page, LV_PAGE_STYLE_..., &style) fonksiyonu kullanarak yeni biçim ayarlama:

- LV_PAGE_STYLE_BG Arkaplan sayfa biçimi tüm style.body özelliklerini kullanır (varsayılan: lv_style_pretty_color)
- LV_PAGE_STYLE_SCRL kaydırılabilir sayfa biçimi tüm style.body özelliklerini kullanır (varsayılan: lv_style_pretty)
- LV_PAGE_STYLE_SB Kaydırma çubuk biçimi tüm *style.body* özelliklerini kullanır. Kaydırma sayfasının dolgusu sırayla yatay/dikey dolgu olarak ayarlanır ve iç dolgu kaydırma sayfasının genişliğidir. (varsayılan: lv_style_pretty_color)

Notlar

• Eğer x ve y yönüne karşılık gelen *hor* veya *ver* sığdır aktif ise **Alt birimlerin posisyon ayarları** münkün değildir. Çünkü, eğer _y_ koodinatı *ver* sığdır ile değiştirilirse kaydırılabilir nesne alt nesnenin altında ve üstünde olacak şekilde yeniden boyutlandırılacaktır. Fakar kaydırılabilir parça ortada olamadığı için tekrar geri üst'e taşınır. Bunu önlemek için _lv_obj_align_() nesnesini birbirine göre yerleştirmek için (biri üst /

solda olmak zorundadır) veya lv_page_set_scrl_fit(sayfa, false, false); ile sığdırmayı devre dışı bırakın ve boyutunu ayarla lv_page_set_scrl_width/height(page, 100)

 Arka plan, kaydırılabilir çizildiğinde sınırını çizer. Kaydırılabilir sayfanın ebeveyni ile aynı renge sahip olsa bile sayfanın her zaman kapalı şekli olmasını sağlar.

```
/*Kaydırma çubuk biçimi oluştur*/
static lv_style_t style_sb;
lv_style_copy(&style_sb, &lv_style_plain);
style_sb.body.main_color = LV_COLOR_BLACK;
style_sb.body.grad_color = LV_COLOR_BLACK;
style_sb.body.border.color = LV_COLOR_WHITE;
style_sb.body.border.width = 1;
style_sb.body.border.opa = LV_OPA_70;
style_sb.body.radius = LV_RADIUS_CIRCLE;
style_sb.body.opa = LV_OPA_60;
                                      /*Sağda yatay dolgu*/
style_sb.body.padding.hor = 3;
style_sb.body.padding.inner = 8;
                                       /*Kaydırma çubuk genişliği*/
/*Sayfa oluştur*/
lv_obj_t * page = lv_page_create(lv_scr_act(), NULL);
lv_obj_set_size(page, 150, 200);
lv_obj_align(page, NULL, LV_ALIGN_CENTER, 0, 0);
lv_page_set_style(page, LV_PAGE_STYLE_SB, &style_sb);
                                                               /*Kaydırma çubuk biçimi ayarla*/
lv_page_set_sb_mode(page, LV_SB_MODE_AUTO);
                                                               /*Kaydırma mümkün ise kaydırma çubuklarını göster*/
/*Saufada bir etiket olustur*/
lv_obj_t * label = lv_label_create(page, NULL);
lv_label_set_long_mode(label, LV_LABEL_LONG_BREAK);
                                                               /*Uzun satırları otomatik olarak böl*/
lv_obj_set_width(label, lv_page_get_scrl_width(page));
                                                                /*Genişlik ayarla, Satırlar bu genişlikten sonra bölünecek*/
lv_label_set_text(label, "Lorem ipsum dolor sit amet, consectetur adipiscing elit,\n"
                         "sed do eiusmod tempor incididunt ut labore et dolore magna aliqua.\n"
                         "Ut enim ad minim veniam, quis nostrud exercitation ullamco\n"
                         "laboris nisi ut aliquip ex ea commodo consequat. Duis aute irure\n"
                         "dolor in reprehenderit in voluptate velit esse cillum dolore\n^1
                         "eu fugiat nulla pariatur.\n"
                         "Excepteur sint occaecat cupidatat non proident, sunt in culpa\n"
                         "qui officia deserunt mollit anim id est laborum.");
```

Sekme görünümü (lv_tabview)

Written for v5.1

Overview

The Tab view object can be used to **organize content in tabs**. You can **add a new tab** with lv_tabview_add_tab(tabview, "Tab name"). It will return with a pointer to a Page object where you can add the tab's content.

To select a tab you can:

- · Click on it on the header part
- Slide horizontally
- Use lv_tabview_set_tab_act(tabview, id, anim_en) function

The $manual\ sliding\ can\ be\ disabled\ with\ \ lv_tabview_set_sliding\ (tabview,\ false)$.

The animation time is adjusted by lv_tabview_set_anim_time(tabview, anim_time).

A **callback function** can be assigned to **tab load** event with <code>lv_tabview_set_tab_load_action(tabview, action)</code> . The callback function need to have the following prototype:

```
void callback(lv_obj_t * tabview, uint16_t act_id);
```

Where _act_id_ means tab which will be loaded. In the action | lv_tabview_get_tab_act(tabview) | will give the id of the old tab.

Style usage

Use <code>lv_tabview_set_style</code> (tabview, <code>LV_TABVIEW_STYLE_...</code>, <code>&style</code>) to set a new style for an element of the tab view:

- LV_TABVIEW_STYLE_BG main background which uses all style.body properties (default: lv_style_plain)
- LV_TABVIEW_STYLE_INDIC a thin rectangle on the top to indicate the current tab. Uses all *style.body* properties. It height comes from *body.padding.inner* (default: _lv_style_plain_color_)
- LV_TABVIEW_STYLE_BTN_BG style of the tab buttons' background. Uses all *style.body* properties. The header height will be set automatically considering *body.padding.ver* (default: _lv_style_transp_)
- LV_TABVIEW_STYLE_BTN_REL style of released tab buttons. Uses all style.body properties. (default: lv style tbn rel)
- LV_TABVIEW_STYLE_BTN_PR style of released tab buttons. Uses all style.body properties. (default: _lv_style_tbn_rel_)
- LV_TABVIEW_STYLE_BTN_TGL_REL style of toggled released tab buttons. Uses all style.body properties. (default: _lv_style_tbn_rel_)
- LV_TABVIEW_STYLE_BTN_TGL_PR style of toggled pressed tab buttons. Uses all style.body properties. (default: _lv_style_btn_tgl_pr_)

Notes



Sütun (lv_bar)

Written for v5.1

Genel Bakış

Bar nesnesi **arkaplan** ve **işaretleyici(gösterge)** olmak üzere iki parçadan oluşur. Nesnenin temeli **arkaplan**dır, **işaretleyici(gösterge)** arkaplan ile şekil olarak benzerdir fakat genişlik ve yüksekliği ayarlanabilir.

Bar'ın yönü genişlik/yükseklik oranına bağlı olarak **dikey veya yatay** olabilir. Mantıksal olarak yatay barlar genişlik, dikey barlar yükseklik değerleri değiştirilerek oluşturulur.

lv_bar_set_value(bar, new_value) fonksiyonu ile **yeni değer** atanır. Bu değer lv_bar_set_range(bar, min, max) fonksiyonu ile belirlenmiş **aralık** (minimum ve maximum değerler) arasında bir değerdir. Varsayılan aralık değerleri 1..100 arasındadır.

Güncel değerden istenilen değere geçiş **animasyon** lu biçinde olur. Bu durumda lu-bar_set_value_anim(bar, yeni_deger, animasyon_zamani) fonksiyonu kullanılır.

Biçim Kullanımı

- Nesnenin temeli arkaplan bu nedenle biçim elementleri kullanılır. Varsayılan biçin LV_STYLE_PRETTY dir.
- işaretleyici(gösterge) arkaplanın benzeridir. Işaretleyici(gösterge) biçimleri Iv_bar_set_style_indic(bar,&style_indic) fonksiyonu ile ayarlanır ve arkaplan ile arasında mesafe bırakmak için hpad and vpad biçim elementleri kullanılır. Varsayılan biçim olarak LV_STYLE_PRETTY_COLOR kullanılır.

Notlar

• İşaretleyici gerçek bir nesne değildir; sadece bar tarafından çizilmiştir.



```
/*Varsayılan Bar oluştur*/
lv_obj_t * bar1 = lv_bar_create(lv_scr_act(), NULL);
lv_obj_set_size(bar1, 200, 30);
{\tt lv\_obj\_align(bar1, NULL, LV\_ALIGN\_IN\_TOP\_RIGHT, -20, 30);}
lv_bar_set_value(bar1, 70);
/*Bar'ın sağında etiket oluştur*/
lv_obj_t * bar1_label = lv_label_create(lv_scr_act(), NULL);
lv_label_set_text(bar1_label, "Default");
lv_obj_align(bar1_label, bar1, LV_ALIGN_OUT_LEFT_MID, -10, 0);
/*Bar ve işaretleyici(gösterge) için biçim oluştur*/
static lv_style_t style_bar;
static lv_style_t style_indic;
lv_style_copy(&style_bar, &lv_style_pretty);
style_bar.body.main_color = LV_COLOR_BLACK;
style_bar.body.grad_color = LV_COLOR_GRAY;
style_bar.body.radius = LV_RADIUS_CIRCLE;
style_bar.body.border.color = LV_COLOR_WHITE;
lv_style_copy(&style_indic, &lv_style_pretty);
style_indic.body.grad_color = LV_COLOR_GREEN;
style_indic.body.main_color= LV_COLOR_LIME;
style_indic.body.radius = LV_RADIUS_CIRCLE;
style_indic.body.shadow.width = 10;
style_indic.body.shadow.color = LV_COLOR_LIME;
                                                                                                /*İşaretleyici(gösterge)'yi biraz küçüklt*/
style_indic.body.padding.hor = 3;
style_indic.body.padding.ver = 3;
/*İkinci bar oluştur*/
lv_obj_t * bar2 = lv_bar_create(lv_scr_act(), bar1);
lv_bar_set_style(bar2, LV_BAR_STYLE_BG, &style_bar);
lv_bar_set_style(bar2, LV_BAR_STYLE_INDIC, &style_indic);
lv\_obj\_align(bar2, \ bar1, \ LV\_ALIGN\_OUT\_BOTTOM\_MID, \ 0, \ 30); \ /*'Bar1''in \ altında \ hizala*/line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line | line 
/*Bar'ın sağında ikinci bir etiket oluştur*/
lv_obj_t * bar2_label = lv_label_create(lv_scr_act(), bar1_label);
lv_label_set_text(bar2_label, "Modified");
{\tt lv\_obj\_align(bar2\_label,\ bar2,\ LV\_ALIGN\_OUT\_LEFT\_MID,\ -10,\ 0);}
```

Takvim (lv_calendar)

Written for v5.2 (rev.4)

Genel Bakış

The Calendar object is a classic calendar which can: Takvim nesnesi klasik takvimdir:

- Şuanki gün ve haftayı vurgular
- · Herhangi kullanıcı tanımlı tarihleri vurgular
- Günün ismini gösterir
- Buton tıklaması ile önceki/sonraki aylara geçiş sağlar

Takvimde tarihleri almak ve ayarlamak, yıl, ay and gün alanlarına sahip bir yapı olan lv_calendar_date_t tür kullanılır.

Mevcut tarihi ayarlamak için lv_calendar_set_today_date(calendar, &today_date) fonksiyonu kullanılır.

Gösterilen tarihi ayarlamak için 1v_calendar_set_shown_date(calendar, &shown_date) kullanın;

Vurgulanan tarihlerin listesi bir lv_calendar_date_t dizisinde dizilmelidir ve bu diziyi geçerek lv_calendar_set_hoghlighted_dates (calendar, &highlighted_dates) 'e geçilebilir.

Dizinin yalnızca statik veya global bir değişken olması için yalnızca diziler işaretçisi kaydedilir.

```
Günlerin adları, lv_calendar_set_day_names(calendar, gun_isismleri) ile ayarlanabilinir; burada gun_isismleri, const char * gun_isismleri[7] = {"Pazar", "Pazartesi", ...};
```

Bir tarih seçmek için eylem v5.3 'te desteklenecek ve deneysel kullanım için şimdi dev-5.3 dalında mevcut olacaktır.

Biçim Kullanımı

- LV_CALENDAR_STYLE_BG body özelliklerini kullanarak arka planın biçimi ve metin özelliklerini kullanarak veri numaralarının biçimi.
- LV_CALENDAR_STYLE_HEADER Geçerli yıl ve ayın görüntülendiği başlığın biçimi. body ve metin özellikleri kullanılır.
- LV_CALENDAR_STYLE_HEADER_PR Preslenmiş başlık biçimi, sonraki / önceki ay düğmesine basılıyor. metin özellikleri oklar tarafından kullanılır.
- LV_CALENDAR_STYLE_DAY_NAMES Gün isimlerinin biçimi. metin özellikleri gün metinleri tarafından kullanılır ve body.padding.ver gün isimlerinin üzerindeki alanı belirler.
- LV_CALENDAR_STYLE_HIGHLIGHTED_DAYS text özellikleri, öne çıkan günlerin biçimini ayarlamak için kullanılır
- LV_CALENDAR_STYLE_INACTIVE_DAYS text özellikleri önceki / sonraki ayın görünen günlerinin biçimini ayarlamak için kullanılır.
- LV_CALENDAR_STYLE_WEEK_BOX body özellikleri, hafta kutusunun biçimini ayarlamak için kullanılır
- LV_CALENDAR_STYLE_TODAY_BOX Bugün kutusunun biçimini ayarlamak için body ve text özellikleri kullanılır



```
/*Takvim nesnesi oluştur*/
lv_obj_t * calendar = lv_calendar_create(lv_scr_act(), NULL);
lv_obj_set_size(calendar, 240, 220);
lv_obj_align(calendar, NULL, LV_ALIGN_CENTER, 0, 0);
/*Geçerli hafta için biçim oluştur*/
static lv style t style week box;
lv_style_copy(&style_week_box, &lv_style_plain);
style_week_box.body.border.width = 1;
style_week_box.body.border.color = LV_COLOR_HEX3(0x333);
style_week_box.body.empty = 1;
style_week_box.body.radius = LV_RADIUS_CIRCLE;
style_week_box.body.padding.ver = 3;
style_week_box.body.padding.hor = 3;
/*Bugün için biçim oluştur*/
static lv_style_t style_today_box;
lv_style_copy(&style_today_box, &lv_style_plain);
style_today_box.body.border.width = 2;
style_today_box.body.border.color = LV_COLOR_NAVY;
style_today_box.body.empty = 1;
style_today_box.body.radius = LV_RADIUS_CIRCLE;
style_today_box.body.padding.ver = 3;
style_today_box.body.padding.hor = 3;
style_today_box.text.color= LV_COLOR_BLUE;
/*Vurgulanan günler için biçim oluştur*/
static lv style t style highlighted day;
lv_style_copy(&style_highlighted_day, &lv_style_plain);
style_highlighted_day.body.border.width = 2;
style_highlighted_day.body.border.color = LV_COLOR_NAVY;
style_highlighted_day.body.empty = 1;
style_highlighted_day.body.radius = LV_RADIUS_CIRCLE;
style_highlighted_day.body.padding.ver = 3;
style_highlighted_day.body.padding.hor = 3;
style_highlighted_day.text.color= LV_COLOR_BLUE;
/*Bicimleri uygula*/
{\tt lv\_calendar\_set\_style} \ ({\tt calendar}, \ {\tt LV\_CALENDAR\_STYLE\_WEEK\_BOX}, \ {\tt \&style\_week\_box}) \ ;
{\tt lv\_calendar\_set\_style} \ ({\tt calendar}, \ {\tt LV\_CALENDAR\_STYLE\_TODAY\_BOX}, \ \&style\_today\_box); \\
{\tt lv\_calendar\_set\_style(calendar,\ LV\_CALENDAR\_STYLE\_HIGHLIGHTED\_DAYS,\ \&style\_highlighted\_day);}
/*Bugün'ü auarla*/
lv_calendar_date_t today;
today.year = 2018;
today.month = 10;
today.day = 23;
lv_calendar_set_today_date(calendar, &today);
lv_calendar_set_showed_date(calendar, &today);
/*Vurgulanan bazı günler*/
static lv calendar date t highlihted days[3];
                                                      /*Sadece isaretci kaudedilecek, bu uüzden statik olmalı*/
highlihted_days[0].year = 2018;
highlihted_days[0].month = 10;
highlihted_days[0].day = 6;
highlihted_days[1].year = 2018;
highlihted_days[1].month = 10;
highlihted_days[1].day = 11;
highlihted_days[2].year = 2018;
highlihted_days[2].month = 11;
highlihted_days[2].day = 22;
lv_calendar_set_highlighted_dates(calendar, highlihted_days, 3);
```

Tartı (lv_gauge)

Written for v5.1

Overview

The gauge is a meter with **scale labels** and **needles**. You can use the <code>lv_gauge_set_scale(gauge, angle, line_num, label_cnt)</code> function to adjust the scale angle and the number of the scale lines and labels. The default settings are: 220 degrees, 6 scale labels and 21 lines.

The gauge can show **more then one needles** . Use the <code>lv_gauge_set_needle_count(gauge, needle_num, color_array)</code> function to set the number of needles and an array with colors for each needle. (The array must be static or global variable).

You can use <code>lv_gauge_set_value(gauge, needle_id, value)</code> to set the value of a needle.


To set a critical value use <code>lv_gauge_set_critical_value(gauge, value)</code> . The scale color ill be changed to <code>line.color</code> after this value. (default: 80)

The range of the gauge can be specified by lv_gauge_set_range(gauge, min, max) .

Style usage

The gauge uses one style which can be set by <code>lv_gauge_set_style(gauge, &style)</code> . The gauge's properties are derived from the following style attributes:

- body.main_color line's color at the beginning of the scale
- body.grad_color line's color at the end of the scale (gradient with main color)
- body.padding.hor line length
- body.padding.inner label distance from the scale lines
- line.width line width
- line.color line's color after the critical value
- text.font/color/letter_space label attributes

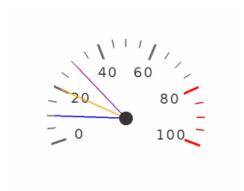

```
/*Create a style*/
static lv_style_t style;
{\tt lv\_style\_copy(\&style, \&lv\_style\_pretty\_color);}
/*Scale line length*/
/*Scale label padding*/
style.body.padding.hor = 10;
style.body.padding.inner = 8 ;
style.line.width = 3;
style.text.color = LV_COLOR_HEX3(0x333);
style.line.color = LV_COLOR_RED;
                                           /*Line color after the critical value*/
/*Describe the color for the needles*/
static lv_color_t needle_colors[] = {LV_COLOR_BLUE, LV_COLOR_ORANGE, LV_COLOR_PURPLE};
/*Create a gauge*/
lv_obj_t * gauge1 = lv_gauge_create(lv_scr_act(), NULL);
lv_gauge_set_style(gauge1, &style);
lv_gauge_set_needle_count(gauge1, 3, needle_colors);
lv_obj_align(gauge1, NULL, LV_ALIGN_CENTER, 0, 20);
/*Set the values*/
{\tt lv\_gauge\_set\_value(gauge1, \ 0, \ 10);}
lv_gauge_set_value(gauge1, 1, 20);
lv_gauge_set_value(gauge1, 2, 30);
```

Temel nesne (lv_obj)

Written for v5.1(rev.4)

Genel Bakış


Temel Nesne nesnelerin en temel özelliklerini içerir.

- Koordinatlar
- Kapsayıcı(Parent) Nesne
- Alt(Children)
- Biçim
- Klikleme aktif, taşıma aktif gibi özellikler.

Kapsayıcı(parent)'a bağlı olarak **x ve y koordinatları** lv_obj_set_x (nesne, yeni_x) ve lv_obj_set_y (nesne, yeni_y) fonksiyonları ile veya lv_obj_set_pos (nesne, yeni_x, yeni_y) bir fonksiyonu ile ayarlanabilir.

Nesne boyutu 1v_obj_set_width(nesne, yeni_genislik) Ve 1v_obj_set_height(nesne, yeni_yukseklik) fonksiyonları veya 1v_obj_set_size(nesne, yeni_genislik, yeni_yukseklik) fonksiyonu ile modifiye edilebilir.

Nesneyi 1v_obj_align(nesne1, nesne2, LV_ALIGN_TYPE, x_kaydir, y_kaydir) fonksiyonu ile başka bir nesneye göre **hizalama**. Son iki argüman (x ve y kaydir) değerleri hizalama yapıldıktan sonra kaydırma değerleridir. İkinci argüman(nesne2) ise ilk argüman(nesne1)'ı hizalamada referans olarak kullanılır ve bu argümana(nesne2)'ye göre hizalama yapar, eğer NULL olarak tanımlanmış ise hizalama ekrana göre veya ayarlanmış kapsayıcıya göre uygulanır. Üçüncü eleman ise hizalama türürüdür:

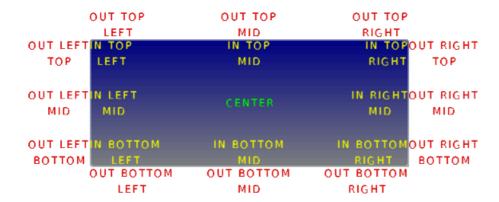

Hizalama türleri LV_ALIGN_OUT_TOP_MID bu şekilde oluşturulur. Örneğin bir yazıyı resim dosyasının altına 10 pixel sağa kaydırarak yazdırmak için lv_obj_align(text, image, LV_ALIGN_OUT_BOTTOM_MID, 0, 10) şeklinde kullanılır veya yazıy(text)'ı kapsayıcının merkezinde yazdırmak için lv_obj_align(text, NULL, LV_ALIGN_CENTER, 0, 0) şeklinde kullanılır.

Nesne için 1v_obj_set_parent (nesne, yeni_kapsayıcı) fonksiyonu ile yeni kapsayıcı ayarlayabilirsiniz.

Bir nesnenin altlarına sondan başa doğru gitmek için tv_obj_get_child(nesne, alt_onceki) fonksiyonu ile, baştan sona doğru gitmek için tv_obj_get_child_back(obj, child_prev) fonksiyonu kullanılır. İlk alt birimi geçip bir önceki dönüş değeri için ikinci parametre *NULL* seçilir. Fonksiyon *NULL* ile dönüyorsa başka bir alt birim yoktur.

1v_obj_create(NULL, NULL) komutu ile **ekran** oluşturduğumuzda, 1v_scr_load(ekran1) fonksiyonu ile **yükleme** yapabiliriz. 1v_scr_act() fonksiyonu **geçerli ekran**'na bir işaretçi tanımlar.

Otomatik olarak oluşturulan iki katman vardır:

- üst katman
- · system katman

Ekranlardan bağımsız olarak oluşturulan nesneler herbir ekranda gösterilecektir. Üst katman(*top layer*) ekrandaki herbir nesnenin üzerindedir ve sistem katmanı(*system layer*) da üst katmanın üzerindedir. Üst katmana pop-up penceresi serbestçe eklenebilir fakat sistem katmanı sistem seviye işleri için sınırlandırılmıştır (örneğin fare imleci buraya taşınmıştır). 1v_layer_sys() fonksiyonları üst veya sistem katman için bir işaretçi tanımlar.

Nesne için <code>lv_obj_set_style(obj, ¥i_biçim)</code> fonksiyonu ile **yeni biçim** tanımlanabilir, eğer biçim <code>NULL</code> seçildiyse nesne kapsayıcısının biçim mirasını alır. Eğer nesne için **modifiye bir biçim** kullanılacak ise kesinlikle bunu **nesneye bildirim** yapmamız gerekir.

lv_obj_refresh_style(nesne) fonksiyonu ile nesnenin biçimini yenileyebilir veya tüm nesnelere lv_obj_report_style_mod(&biçim) fonksiyonu ile bildirim yapılabilir. lv obj report style mod 's parametresini NULL olarak ayarlayıp tüm nesnelere bildirim yap.

lv_obj_set_...(obj, true/false) fonksiyonu ile Aktif/Pasif yapılabilen bazı özellikler:

- hidden Nesneyi gizle. Çizilmeyecek ve herhangi bir yer kaplamayacak. Alt elemanlerı da gizlenecek.
- **click** Nesnenin tıklama özelliğini bir girdi cihazı ile aktifleştir (örneğin dokunmatik). Eğer pasif ise, nesne arkasındaki giriş aygıtı tıklama işlemi sırasında kontrol edilir.
- top Eger aktifleştirilirse bu nesne veya nesnenin herhangi birine tıklandığında nesne ön tarafa doğru gelir.
- drag Sürüklemeyi aktifleştir (bir giriş aracı ile haraket ettirilir)
- drag_throw Sürükleme ile bırakmayı aftifleştirildiğinde nesne süskleme ile hızlanma kazanır.
- drag_parent Eğer aktifleştirilir ise nesnenin kapsayıcısıda sürüklenir.

Kütüphanede otomatik oluşan bazı özel aksiyonlar vardır, bu bir veya birden çok aksiyondan korunmak için **nesneyi koru** yapılmalı. Mevcut koruma seçenekleri:

- LV_PROTECT_NONE Koruma yok
- LV_PROTECT_POS Otomatik pozisyon koruma (örneğin. lv_cont)
- LV_PROTECT_FOLLOW Takip eden nesnelerin otomatik düzenleme koruma (örneğin. lv_cont)
- LV_PROTECT_PARENT Otomatik kapsayıcı değişim koruma
- LV_PROTECT_CHILD_CHG Alt değişim sinyal pasifleştirme. Kütüphane tarafından kullanılır.

lv_obj_set/clr_protect(obj, Lv_protect_...) fonksiyonları ile koruma ayarla/temizle yapılır. 'OR' kullanılarak koruma tip değerleri de kullanılabilir.

Nesneler için **gömülü animasyonlar** vardır. Mevcut animasyon türleri:

- LV_ANIM_FLOAT_TOP .. dan üst'e kaydır.
- LV_ANIM_FLOAT_LEFT .. dan sol'a kaydır.
- LV_ANIM_FLOAT_BOTTOM .. dan taban'a kaydır.
- LV ANIM FLOAT RIGHT .. dan sağ'a kaydır.
- LV_ANIM_GROW_H Yatay Büyült/Küçült
- LV_ANIM_GROW_V Dikey Büyült/Küçült

lv_obj_animate(obj, anim_type, time, delay, callback) fonsiyonu nesneye animasyon uygular. Animasyon yönünü belirlemek için _ANIM_IN_ veya _ANIM_OUT_ animasyon türü seçilir, eğer tür belirtilmemişse varsayılan _ANIM_IN_ dir. Daha fazla bilgi için animations.

Biçim Kullanımı

Tüm style.body özellirleri kullanır. Normal bir nesne için varsayılan ekranlar _lv_style_plain_ and _lv_style_plain_color_.



```
/*Basit temel nesne oluştur*/
lv_obj_t * obj1;
obj1 = lv_obj_create(lv_scr_act(), NULL);
lv_obj_set_size(obj1, 150, 40);
lv_obj_set_style(obj1, &lv_style_plain_color);
lv_obj_align(obj1, NULL, LV_ALIGN_IN_TOP_MID, 0, 40);
/*{\tt Bir\ \"{o}nceki\ nesneyi\ kopyala\ ve\ s\"{u}r\"{u}klemeyi\ aktifleştir.*}/
lv_obj_t * obj2;
obj2 = lv_obj_create(lv_scr_act(), obj1);
lv_obj_set_style(obj2, &lv_style_pretty_color);
lv_obj_set_drag(obj2, true);
{\tt lv\_obj\_align(obj2, NULL, LV\_ALIGN\_CENTER, 0, 0);}
static lv_style_t style_shadow;
lv_style_copy(&style_shadow, &lv_style_pretty);
style_shadow.body.shadow.width = 6;
style_shadow.body.radius = LV_RADIUS_CIRCLE;
/*Bir önceki nesneyi kopyala (sürükeleme önceden aktif edilmiş)*/
lv_obj_t * obj3;
obj3 = lv_obj_create(lv_scr_act(), obj2);
lv_obj_set_style(obj3, &style_shadow);
\label{lv_obj_align(obj3, NULL, LV_ALIGN_IN_BOTTOM_MID, 0, -40);} \\
```

Yay (lv_arc)

Written for v5.2

Genel Bakış

Belirlenen kalınlık ile başlangıç ve bitiş açıları verilmiş bir Yay nesnesi çizilmesi.

Açıların ayarlanması için v_arc_set_angles(arc(yay), baslangic_acisi, bitis_acisi) fonksiyonu kullanılır. Sıfır derece nesnenin altından başlar ve saat tersi yönünde devam eder, açı değerleri [0;360] arasındadır.

Yay nesnesinin biçim(style) ayarlaması için 1v_arc_set_style(arc, Lv_arc_style_main, &style) fonksiyonu kullanılır.

Biçim kullanımı

- line.rounded bitiş noktasını yuvarlaştırmak için kullanılır (Şeffaflık(opacity) 1 yapılırsa bu özellik çalışmaz)
- line.width Yay kalınlığı.
- line.color Yay rengi.

Notlar

- Yay için genişlik ve boy aynı olmalı.
- Yay anti-aliasing i şuan desteklememektedir.



```
/*Yay için biçim oluştur*/
lv_style_t style;
lv_style_copy(&style, &lv_style_plain);
style.line.color = LV_COLOR_BLUE;
                                            /*Yau rengi*/
style.line.width = 8;
                                            /*Yay kalınlığı*/
/*Yay oluştur*/
lv_obj_t * arc = lv_arc_create(lv_scr_act(), NULL);
lv_arc_set_style(arc, LV_ARC_STYLE_MAIN, &style);
                                                           /*Yeni bicim kullanımı*/
lv_arc_set_angles(arc, 90, 60);
lv_obj_set_size(arc, 150, 150);
lv_obj_align(arc, NULL, LV_ALIGN_CENTER, 0, 0);
/*Bir önceki yay'ı kopyalayıp farklı açılarda ve boyutta yay olustur*/
arc = lv_arc_create(lv_scr_act(), arc);
lv_arc_set_angles(arc, 90, 20);
lv_obj_set_size(arc, 125, 125);
lv_obj_align(arc, NULL, LV_ALIGN_CENTER, 0, 0);
/*Bir önceki yay'ı kopyalayıp farklı açılarda ve boyutta yay oluştur*/
arc = lv_arc_create(lv_scr_act(), arc);
lv_arc_set_angles(arc, 90, 310);
lv_obj_set_size(arc, 100, 100);
lv_obj_align(arc, NULL, LV_ALIGN_CENTER, 0, 0);
```

Yazı alanı (lv_ta)

Written for v5.1

Overview

The Text Area is a page with a label and a cursor on it. You can insert text or characters to the current cursor position with:

- lv_ta_add_char(ta, 'c')
- lv_ta_add_text(ta, "insert this text")

The lv_ta_set_text(ta, "New text") changes the whole text.

To delete a character from the left of the current cursor position use lv_ta_del() .

The cursor position can be modified directly like <code>lv_ta_set_cursor_pos(ta, 10)</code> or by stepping it:

- lv_ta_cursor_right(ta)
- lv_ta_cursor_left(ta)
- lv_ta_cursor_up(ta)
- lv_ta_cursor_down(ta)

There are several cursor types. You can set one of them with: 1v_ta_set_cursor_type(ta, LV_CURSOR_...)

- LV_CURSOR_NONE
- LV_CURSOR_LINE
- LV CURSOR BLOCK
- LV_CURSOR_OUTLINE
- LV CURSOR UNDERLINE

You can 'OR' _LV_CURSOR_HIDDEN_ to any type to hide the cursor.

The Text area can be configures to be one lined with $lv_{ta_set_one_line(ta, true)}$.

The text area supports password mode. It can be enabled with lv_ta_set_pwd_mode(ta, true).

Style usage

Use lv_ta_set_style(page, LV_TA_STYLE_..., &style) to set a new style for an element of the text area:

- LV_TA_STYLE_BG background's style which uses all *style.body* properties. The label also uses this *style.label* from this style. (default: lv_style_pretty)
- LV_TA_STYLE_SB scrollbar's style which uses all style.body properties (default: lv_style_transp)
- LV_TA_STYLE_CURSOR cursor style. If NULL then the library sets us a style automatically according to the label color and font
 - LV_CURSOR_LINE: a *style.line.width* wide line but drawn as a rectangle as *style.body*. Hor. and ver. padding makes an offset on the cursor
 - LV CURSOR BLOCK: a rectangle as style.body Hor. and ver. padding makes the rectangle larger
 - · LV_CURSOR_OUTLINE: an empty rectangle (just a border) as style.body Hor. and ver. padding makes the rectangle larger
 - LV_CURSOR_UNDERLINE: a style.line.width wide line but drawn as a rectangle as style.body. Hor. and ver. padding makes an offset on the cursor

Notes

• In password mode lv_ta_get_text(ta) gives the real text and not the asterisk characters

Example

A long text in a Text Area You can scroll it if the text is long



```
/*Create a scroll bar style*/
static lv_style_t style_sb;
lv_style_copy(&style_sb, &lv_style_plain);
style_sb.body.main_color = LV_COLOR_BLACK;
style_sb.body.grad_color = LV_COLOR_BLACK;
style_sb.body.border.color = LV_COLOR_WHITE;
style_sb.body.border.width = 1;
style_sb.body.border.opa = LV_OPA_70;
style_sb.body.radius = LV_RADIUS_CIRCLE;
style_sb.body.opa = LV_OPA_60;
/*Create a normal Text area*/
lv_obj_t * ta1 = lv_ta_create(lv_scr_act(), NULL);
lv_obj_set_size(ta1, 200, 100);
lv_obj_align(ta1, NULL, LV_ALIGN_CENTER, 0, - LV_DPI / 2);
lv\_ta\_set\_style(ta1, LV\_TA\_STYLE\_SB, \& style\_sb);
lv_ta_set_cursor_type(ta1, LV_CURSOR_BLOCK);
lv_ta_set_text(ta1, "A text in a Text Area\n"
              "You can scroll it if the text is long enough.");
                                                                    /*Set an initial text*/
lv_ta_set_cursor_pos(ta1, 2);
                                                                     /*Set the cursor position*/
                                                                     /*Insert a word at the current cursor position*/
lv_ta_add_text(ta1, "long ");
static lv_style_t style_bg;
lv_style_copy(&style_bg, &lv_style_pretty);
style_bg.body.shadow.width = 8;
style_bg.text.color = LV_COLOR_MAKE(0x30, 0x60, 0xd0);
                                                                    /*Blue label*/
/*Create a one lined test are with password mode*/
lv_obj_t * ta2 = lv_ta_create(lv_scr_act(), ta1);
lv_obj_align(ta2, ta1, LV_ALIGN_OUT_BOTTOM_MID, 0, 50);
lv_ta_set_style(ta2,LV_TA_STYLE_BG, &style_bg);
lv_ta_set_one_line(ta2, true);
lv_ta_set_cursor_type(ta2, LV_CURSOR_LINE);
lv_ta_set_pwd_mode(ta2, true);
lv_ta_set_text(ta2, "Password");
```