

Features:

- Universal AC input / Full range
- Programmable output Voltage (0% ~ 105%)
- Programmable output Current (0% ~ 105%)
- Forced current sharing at parallel operation
- **Constant current limit**
- Selectable +5V / 0.5A or +9V / 0.3A auxiliary output
- Global control via RS232
- Remote setting multiple PSU via RS232, RS485 & I²C
- **Power OK signal**
- Remote ON / OFF, Remote sense function

7. This test done without enclosure.

- Protection: OVP, OLP, OTP, Fan failure










3 years w	arranty				ZERTIFIZIERT	www.tuv.com ID 2000000000	E204803		
	MODEL	AE-800-12	AE-800-15	AE-800-24	AE-800-30	AE-800-36	AE-800-48	AE-800-60	
	DC Voltage Range	12V	15V	24V	30V	36V	48V	60V	
	Rated Current	66.7A	53.4A	33.5A	26.7A	22.3A	16.7A	13.4A	
	Current Range	0 ~ 66.7A	0 ~ 53.4A	0 ~ 33.5A	0 ~ 26.7A	0 ~ 22.3A	0 ~ 16.7A	0 ~ 13.4A	
	Rated Power	800W	801W	804W	801W	802.8W	801.6W	804W	
	Ripple & Noise (Max.) Note.2	120mVp-p	150mVp-p	240mVp-p	300mVp-p	360mVp-p	480mVp-p	600mVp-p	
Output	Voltage Adj. Range	±5.0% Typical adjustment by potentiometer. (VR1)							
	Voltage Tolerance Note.3	±2.0%							
	Line Regulation	±1.0%							
	Load Regulation	±1.0%							
	Setup, Rise Time	800ms, 100ms at full load							
	Hold Up Time (Typ.)	14ms / 230VAC at full load							
	Voltage Range Note.4								
	Frequency Range	47 ~ 63Hz							
	Power Factor (Typ.)	0.95 / 230VAC, 0.98 / 115VAC at full load							
Input	Efficiency (Typ.)	89%	90%	92%	92%	92%	92%	93%	
	AC Current (Typ.)	9.3A / 100VAC,	3.7A / 240VAC						
	Inrush Current (Typ.)	30A / 115VAC, 6	60A / 230VAC						
	Leakage Current	< 1.0mA / 240V/	AC						
Protection	Over Load	105% rated output power, Protection type: Constant current limit							
		Variable OVP, 120 ± 7% Vout. Refer to VCI VS OVP curve.							
	Over Voltage	Protection type: Latch-style (Recovery after reset AC power ON or inhibit)							
	Over Temperature	85 ±5°C detect on NTC, Protection type: Auto recovery after temperature goes down							
	Auxiliary Power	Selectable +5V / 0.5A or +9V / 0.3A auxiliary output							
	Remote ON / OFF Control	By external switch							
	Power OK Signal	Open drain signal low when PSU turns on, Max. sink current: 20mA, Max. drain voltage: 40V.							
Function	Output Voltage Trim	Adjustment of output voltage is between 0 ~ 105% of rated output							
	Output Current Trim	Adjustment of output current is between 0 ~ 105% of rated output							
	Parallel (Current Sharing) Note.5								
	Address Setting	-		address switch (sw1). 0~7				
	Working Temp.	Up to 8 units can be set using an address switch (sw1), 0~7 -20 ~ +60°C (Refer to de-rating curve)							
	Working Humidity	20 ~ 90% RH non-condensing							
Environment	Storage Temp. & Humidity	-40 ~ +85°C, 10 ~ 95% RH							
	Temp. Coefficient	±0.02% / °C (0 ~ 50°C)							
	Vibration	10 ~ 500Hz, 2G 10min. / 1cycle, period for 60min. each along X, Y, Z axes Compliance to IEC 68-2-6, IEC 68-2-64							
	Safety Standards	Certified UL 60950-1; EN 60950-1							
	Withstand Voltage Note.7								
	Isolation Resistance		O/P-FG: 100M C		- //		- /		
Safety & EMC	EMI Conduction & Radiation		022; EN 61204-3						
	Harmonic Current		000-3-2; EN 6100	<u> </u>					
Note.6	EMS Immunity	Certified EN 55024; EN 61204-3; EN 61000-6-1; IEC 61000-4-2, 3, 4, 5, 6, 8, 11							
14016.0	Cooling	Load and temperature control fan							
Others	Dimension (WxHxD)	127x41x249 mm / 5.000x1.614x9.803 inch							
Others	, ,			3.000 111011					
Note	Packing 1.7kg; 6pcs / 11.2kg / 0.55CUFT 1. All parameters NOT specially mentioned are measured at 230VAC input, rated load and 25°C of ambient temperature. 2. Ripple & noise are measured at 20MHz of bandwidth by using a 12" twisted pair-wire terminated with a 0.1uF & 47uF parallel capacitor. 3. Tolerance: includes setup time tolerance, line regulation and load regulation. 4. De-rating may apply in low input voltage. Please check the de-rating curve for more details. 5. In parallel connection only one unit will operate if the total output load is less than 5% of the rated power. 6. The power supply is considered a component which will be installed into a final equipment. The final equipment must be re-confirmed that it still meets EMC directives. 7. This test done without enclosure.								



Mechanical Drawings:

Unit:mm / inch

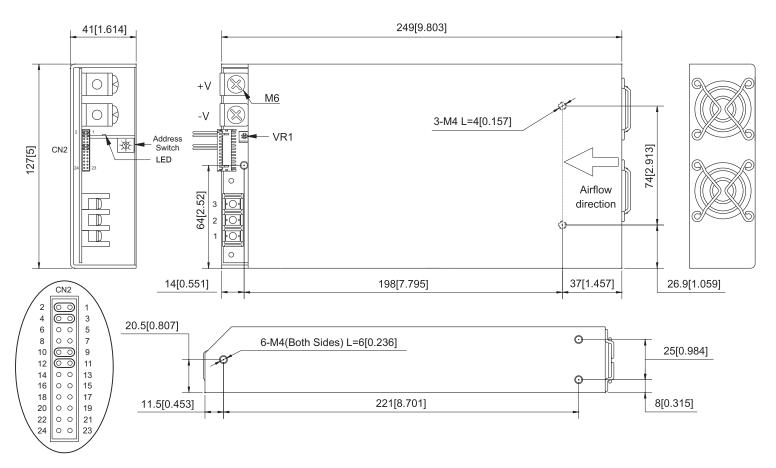

AC Input Terminal Pin No. Assignment

Pin No.	Assignment		
1	ACL		
2	ACN		
3			

CN2 Function Description:

Pin No.	Function	Description	Pin No.	Function		Mating Housing / Contact	
1	VS+	Positive output voltage	13	ACI	I Program		
2	VO+	Remote sense (+)	14	GND	Ground		
3	VS-	Remote sense (-)	15	VCI	V Program		
4	VO-	Negative output voltage	16	GND	Ground		
5	POK	Power OK	17	AUX	+5V / 0.5A or +9V / 0.3A Auxiliary power		
6	GND	Ground	18	GND	Ground	JST PHDR-24VS	JST SPHD-002T-P0.5
7	PAR	Parallel operation current share	19	SCL	Serial Clock used in the I ² C interface	or equivalent	or equivalent
8	VSET	Aux output setting	20	SDA	Serial Data used in the I ² C interface		
9	EN-	Inhibit ON/OFF (-)	21	AUX	+5V / 0.5A or +9V / 0.3A Auxiliary power		
10	GND	Ground	22	GND	Ground		
11	EN+	Inhibit ON/OFF (+)	23	NC.	For RS232 Transmission function		
12	AUX	+5V / 0.5A or +9V / 0.3A Auxiliary power	24	NC.	For RS232 Receiver function		





LED Status:

LED	LED Signal	Status		
Solid(Green)		Power OK (Local mode)		
Solid(Orange)		Power OK (Remote mode)		
Slow Blink(Green)	_	Power Standby		
Fast Blink(Red)		Over Voltage Protection (OVP)		
Solid(Red)		Over Load Protection (OLP)		
Slow Blink(Red)		Over Temperature Protection (OTP)		
Intermittent Blink(Red)		Fan Failure		
Interlace Blink(Red)		Power Failure		


^{*}Local mode : Use ACI/VCI to control output current and voltage. Remote mode : Use RS-232 or I²C command to control output current and voltage.


De-rating Curve:

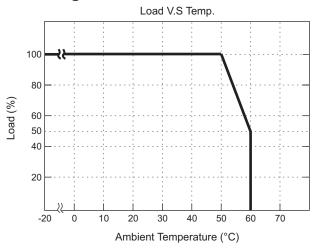

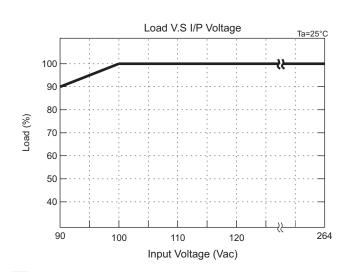


CMD VS Output Curve:

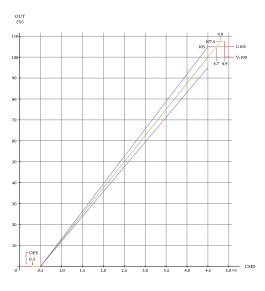


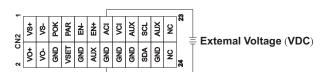



VCI VS OVP Curve:

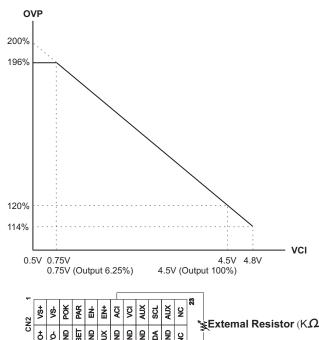



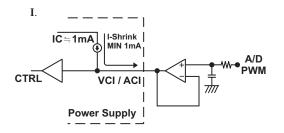


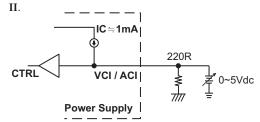


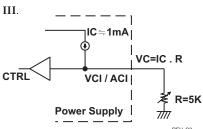





Remote ON/OFF:

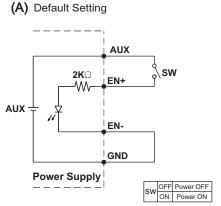

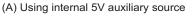

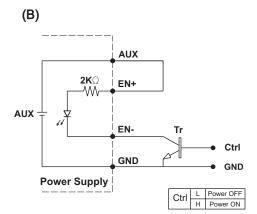


(B) ON / OFF Control by NPN transistor

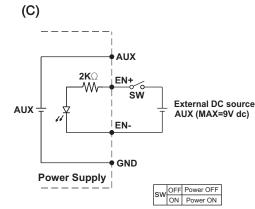


(C) Using external voltage source

Power OK Signal:


*The grounding of "AUX" power should be connected to "GND" port. If " V-" is connected as Grounding, make sure to short the GND and V- ports.

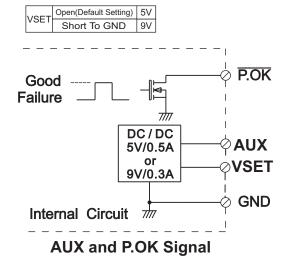


*Place an additional capacitor to have a better performance of auxiliary power operation.

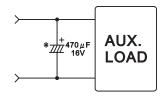

1. Remote Sense

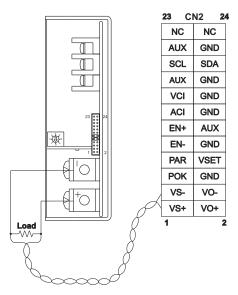


2. Local Sense (Default setting)

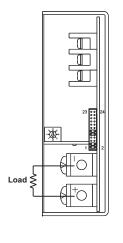


23	CN2	24	4
NC	N	C	
AUX	GI	D/	
SCL	SI	DΑ	
AUX	GI	ΝD	
VCI	GI	ΝD	
ACI	GI	ΝD	
EN+	A	JX	
EN-	GI	ND	
PAR	VS	VSET	
POK	GI		
VS-	V	0-	
VS+	V) +	
1		2	



3. Current Sharing with Remote Sensing(Parallel Connection)

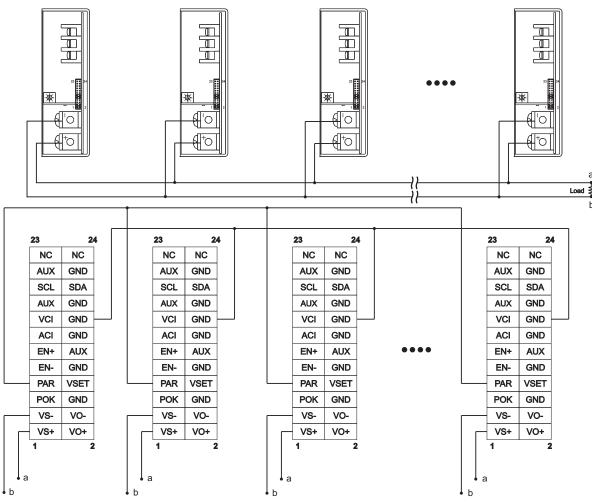

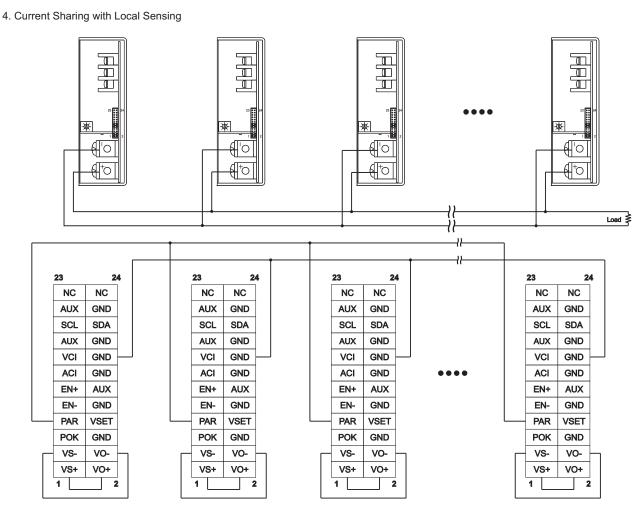




Installation Instruction:

1. Mounting Directions

1-1 Recommended standard mounting methods:

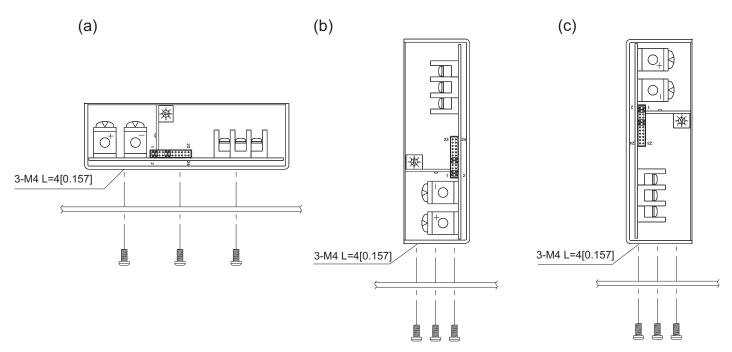

2. Mounting Method

- 2-1 There are ventilating holes on the front and back side panels, do not obstruct; allow 50mm at least for air flow.
- 2-2 Recommended the torque of mounting screw:

M4 screw: 1.27N • m (13.0kgf • cm)

