Linux Driver Development for Embedded Processors

ST STM32MP1 Practical Labs Setup

Building a Linux embedded system for the ST STM32MP1 processor

The STM32MP1 microprocessor series is based on a heterogeneous single or dual Arm Cortex-A7 and Cortex-M4 cores architecture, strengthening its ability to support multiple and flexible applications, achieving the best performance and power figures at any time. The Cortex-A7 core provides access to open-source operating systems (Linux/Android) while the Cortex-M4 core leverages the STM32 MCU ecosystem.

You can check all the info related to this family at

https://www.st.com/en/microcontrollers-microprocessors/stm32mp1-series.html#overview

For the development of the labs the **STM32MP157C-DK2** Discovery kit will be used. The documentation of this board can be found at

https://www.st.com/en/evaluation-tools/stm32mp157c-dk2.html

Connect and set up hardware

To set up the STM32MP15 Discovery kit connections follow the steps indicated in the STM32 MPU wiki section located at

https://wiki.st.com/stm32mpu/wiki/Getting started/STM32MP1 boards/STM32MP157x-DK2

Creating the structure for the STM32MPU embedded software distribution

The STM32MPU embedded software distribution for STM32 microprocessor platforms supports three software packages.

- The Starter Package to quickly and easily start with any STM32MPU microprocessor device. The Starter Package is generated from the Distribution Package.
- The Developer Package to add your own developments on top of the STM32MPU Embedded Software distribution, or to replace the Starter Package pre-built binaries.
 The Developer Package is generated from the Distribution Package.
- The **Distribution Package** to create your own Linux® distribution, your own Starter Package and your own Developer Package.

Create your <working directory> and assign a unique name to it (for example by including the release name).

PC:~\$ mkdir STM32MP15-Ecosystem-v2.0.0

```
PC:~$ cd STM32MP15-Ecosystem-v2.0.0
```

Create the first-level directories that will host the software packages delivered through the STM32MPU embedded software distribution release note.

```
PC:~/STM32MP15-Ecosystem-v2.0.0$ mkdir Starter-Package
PC:~/STM32MP15-Ecosystem-v2.0.0$ mkdir Developer-Package
PC:~/STM32MP15-Ecosystem-v2.0.0$ mkdir Distribution-Package
```

Populate the target and boot the image

To populate the STM32MP15 Discovery kit with the Starter Package follow the steps indicated in the STM32 MPU wiki section located at

https://wiki.st.com/stm32mpu/wiki/Getting_started/STM32MP1_boards/STM32MP157x-DK2/Let%27s_start/Populate_the_target_and_boot_the_image

Installing the SDK for the developer package

PC:~\$ mdir -p \$HOME/STM32MPU workspace/tmp

To download the STM32MP1 Developer Package SDK for the STM32MP15-Ecosystem-v2.0.0 release follow the steps indicated in the STM32 MPU wiki section located at https://wiki.st.com/stm32mpu/wiki/STM32MP1_Developer_Package

Follow the next steps to install the SDK:

1. Uncompress the tarball file to get the SDK installation script and make it executable.

```
PC:~$ mkdir -p $SDK_ROOT/SDK

PC:~/STM32MPU_workspace/tmp$ tar xvf en.SDK-x86_64-stm32mp1-openstlinux-5.4-dunfell-mp1-20-06-24.tar.xz

PC:~/STM32MPU_workspace/tmp$ chmod +x stm32mp1-openstlinux-5.4-dunfell-mp1-20-06-24/sdk/st-image-weston-openstlinux-weston-stm32mp1-x86_64-toolchain-3.1-openstlinux-5.4-dunfell-mp1-20-06-24.sh
```

2. Add the following line to .bashrc.

```
PC:~$ echo "export SDK_ROOT=$HOME/STM32MP15-Ecosystem-v2.0.0/Developer-Package"
>> $HOME/.bashrc
```

3. Install the SDK.

```
PC:~/STM32MPU_workspace/tmp$ ./stm32mp1-openstlinux-5.4-dunfell-mp1-20-06-24/sdk/st-image-weston-openstlinux-weston-stm32mp1-x86_64-toolchain-3.1-openstlinux-5.4-dunfell-mp1-20-06-24.sh -d $SDK_ROOT/SDK ST OpenSTLinux - Weston - (A Yocto Project Based Distro) SDK installer version 3.1-openstlinux-5.4-dunfell-mp1-20-06-24
```

Each time you wish to use the SDK in a new shell session, you need to source the environment setup script:

PC:~\$ source \$SDK_ROOT/SDK/environment-setup-cortexa7t2hf-neon-vfpv4-ostl-linux-gnueabi

Installing and compiling the Linux kernel for the developer package

To download the STM32MP1 Linux kernel for the STM32MP15-Ecosystem-v2.0.0 release follow the steps indicated in the STM32 MPU wiki section located at https://wiki.st.com/stm32mpu/wiki/STM32MP1_Developer_Package

Follow the next steps to install and compile the Linux kernel:

1. Extract the kernel source code.

```
PC:~$ cd $SDK ROOT
```

PC:~/STM32MP15-Ecosystem-v2.0.0/Developer-Package\$ tar xvf en.SOURCES-kernel-stm32mp1-openstlinux-5-4-dunfell-mp1-20-06-24.tar.xz

PC:~\$ cd \$SDK_ROOT/stm32mp1-openstlinux-5.4-dunfell-mp1-20-06-24/sources/arm-ostl-linux-gnueabi/linux-stm32mp-5.4.31-r0

PC:~/STM32MP15-Ecosystem-v2.0.0/Developer-Package/stm32mp1-openstlinux-5.4-dunfell-mp1-20-06-24/sources/arm-ostl-linux-gnueabi/linux-stm32mp-5.4.31-r0\$ tar xvf linux-5.4.31.tar.xz

PC:~/STM32MP15-Ecosystem-v2.0.0/Developer-Package/stm32mp1-openstlinux-5.4-dunfell-mp1-20-06-24/sources/arm-ostl-linux-gnueabi/linux-stm32mp-5.4.31-r0\$ cd linux-5.4.31

2. To initialize a pad in GPIO mode with a bias (internal pull-up, pull-down...), it is needed to disable the strict mode of pinctrl. You have to change the strict variable of the struct pinmux_ops to false. You can find within the kernel sources the struct pinmux_ops structure; it is included in the /drivers/pinctrl/stm32/pinctrl-stm32.c file.

```
static const struct pinmux_ops stm32_pmx_ops = {
    .get_functions_count = stm32_pmx_get_funcs_cnt,
    .get function name = stm32 pmx get func name,
```

```
.get_function_groups = stm32_pmx_get_func_groups,
           .set mux
                               = stm32 pmx set mux,
           .gpio_set_direction = stm32_pmx_gpio_set_direction,
           .strict
                               = false,
   };
3. Prepare and configure kernel source code.
   PC:~/STM32MP15-Ecosystem-v2.0.0/Developer-Package/stm32mp1-openstlinux-5.4-
   dunfell-mp1-20-06-24/sources/arm-ostl-linux-gnueabi/linux-stm32mp-5.4.31-
   r0/linux-5.4.31$ for p in `ls -1 ../*.patch`; do patch -p1 < $p; done
   PC:~/STM32MP15-Ecosystem-v2.0.0/Developer-Package/stm32mp1-openstlinux-5.4-
   dunfell-mp1-20-06-24/sources/arm-ostl-linux-gnueabi/linux-stm32mp-5.4.31-
   r0/linux-5.4.31$ make multi_v7_defconfig fragment*.config
   PC:~/STM32MP15-Ecosystem-v2.0.0/Developer-Package/stm32mp1-openstlinux-5.4-
   dunfell-mp1-20-06-24/sources/arm-ostl-linux-gnueabi/linux-stm32mp-5.4.31-
   r0/linux-5.4.31$ for f in `ls -1 ../fragment*.config`; do
   scripts/kconfig/merge config.sh -m -r .config $f; done
   PC:~/STM32MP15-Ecosystem-v2.0.0/Developer-Package/stm32mp1-openstlinux-5.4-
   dunfell-mp1-20-06-24/sources/arm-ostl-linux-gnueabi/linux-stm32mp-5.4.31-
   r0/linux-5.4.31$ yes '' | make ARCH=arm oldconfig
4. Configure the following kernel settings that will be needed during the development of
   the drivers.
   PC:~/STM32MP15-Ecosystem-v2.0.0/Developer-Package/stm32mp1-openstlinux-5.4-
   dunfell-mp1-20-06-24/sources/arm-ostl-linux-gnueabi/linux-stm32mp-5.4.31-
   r0/linux-5.4.31$ make ARCH=arm menuconfig
           Device drivers >
                  <*> Industrial I/O support --->
                         -*- Enable buffer support within IIO
                               Industrial I/O buffering based on kfifo
                         <*> Enable IIO configuration via configfs
                          -*- Enable triggered sampling support
                         <*>
                              Enable software IIO device support
                         <*>
                               Enable software triggers support
                                Triggers - standalone --->
                                        <*> High resolution timer trigger
                                        <*> SYSFS trigger
            Device drivers >
                  <*> Userspace I/O drivers --->
                         <*> Userspace I/O platform driver with generic IRQ
   handling
          Device drivers >
                  Input device support --->
```

```
-*- Generic input layer (needed for keyboard, mouse, ...)
<*> Polled input device skeleton
```

5. Compile kernel source code and kernel modules.

PC:~/STM32MP15-Ecosystem-v2.0.0/Developer-Package/stm32mp1-openstlinux-5.4-dunfell-mp1-20-06-24/sources/arm-ostl-linux-gnueabi/linux-stm32mp-5.4.31-r0/linux-5.4.31\$ make -j4 ARCH=arm uImage vmlinux dtbs LOADADDR=0xC2000040

PC:~/STM32MP15-Ecosystem-v2.0.0/Developer-Package/stm32mp1-openstlinux-5.4-dunfell-mp1-20-06-24/sources/arm-ostl-linux-gnueabi/linux-stm32mp-5.4.31-r0/linux-5.4.31\$ make ARCH=arm modules

PC:~/STM32MP15-Ecosystem-v2.0.0/Developer-Package/stm32mp1-openstlinux-5.4-dunfell-mp1-20-06-24/sources/arm-ostl-linux-gnueabi/linux-stm32mp-5.4.31-r0/linux-5.4.31\$ mkdir -p \$PWD/install artifact/

PC:~/STM32MP15-Ecosystem-v2.0.0/Developer-Package/stm32mp1-openstlinux-5.4-dunfell-mp1-20-06-24/sources/arm-ostl-linux-gnueabi/linux-stm32mp-5.4.31-r0/linux-5.4.31\$ make ARCH=arm INSTALL_MOD_PATH="\$PWD/install_artifact" modules install

6. Boot the STM32MP1 target and open a new terminal on the host, for example "minicom". Set the following configuration: "115.2 kbaud, 8 data bits, 1 stop bit, no parity".

PC:~\$ minicom -D /dev/ttyACM0

7. Connect Ethernet cable between host and eval board and verify the connection.

root@stm32mp1:~# ifconfig eth0 down

root@stm32mp1:~# ifconfig eth0 up

root@stm32mp1:~# ifconfig eth0 10.0.0.10

root@stm32mp1:~# ping 10.0.0.1

8. Deploy the compiled Linux kernel image and the kernel modules to the target STM32MP1 device.

PC:~/STM32MP15-Ecosystem-v2.0.0/Developer-Package/stm32mp1-openstlinux-5.4-dunfell-mp1-20-06-24/sources/arm-ostl-linux-gnueabi/linux-stm32mp-5.4.31-r0/linux-5.4.31\$ scp arch/arm/boot/uImage root@10.0.0.10:/boot

PC:~/STM32MP15-Ecosystem-v2.0.0/Developer-Package/stm32mp1-openstlinux-5.4-dunfell-mp1-20-06-24/sources/arm-ostl-linux-gnueabi/linux-stm32mp-5.4.31-r0/linux-5.4.31\$ rm install_artifact/lib/modules/5.4.31/build install_artifact/lib/modules/5.4.31/source

```
PC:~/STM32MP15-Ecosystem-v2.0.0/Developer-Package/stm32mp1-openstlinux-5.4-dunfell-mp1-20-06-24/sources/arm-ostl-linux-gnueabi/linux-stm32mp-5.4.31-r0/linux-5.4.31$ find install_artifact/ -name "*.ko" | xargs $STRIP --strip-debug --remove-section=.comment --remove-section=.note --preserve-dates

PC:~/STM32MP15-Ecosystem-v2.0.0/Developer-Package/stm32mp1-openstlinux-5.4-dunfell-mp1-20-06-24/sources/arm-ostl-linux-gnueabi/linux-stm32mp-5.4.31-r0/linux-5.4.31$ scp -r install_artifact/lib/modules/*

root@10.0.0.10:/lib/modules
```

9. Re-generate the list of module dependencies (modules.dep) and the list of symbols provided by modules (modules.symbols), synchronize data on disk with memory and reboot the board.

```
root@stm32mp1:~# /sbin/depmod -a
root@stm32mp1:~# sync
root@stm32mp1:~# modinfo vivid
root@stm32mp1:~# reboot
```

Compile and deploy the Linux kernel drivers

Download the linux_5.4_stm32mp1_drivers.zip file from the github of the book and unzip it in the STM32MP15-Ecosystem-v2.0.0 folder of the Linux host:

```
PC:~$ cd ~/STM32MP15-Ecosystem-v2.0.0/
```

Compile and deploy the drivers to the **STM32MP157C-DK2** Discovery kit:

```
~/STM32MP15-Ecosystem-v2.0.0/linux_5.4_stm32mp1_drivers$ make
```

```
~/STM32MP15-Ecosystem-v2.0.0/linux_5.4_stm32mp1_drivers$ make deploy
scp *.ko root@10.0.0.10:
adxl345 stm32mp1.ko
                                                  100%
                                                         12KB 12.3KB/s
                                                                          00:00
adxl345 stm32mp1 iio.ko
                                                  100%
                                                         12KB 12.4KB/s
                                                                          00:00
                                                  100% 7024
hellokeys stm32mp1.ko
                                                                6.9KB/s
                                                                          00:00
helloworld stm32mp1.ko
                                                  100% 4008
                                                                3.9KB/s
                                                                          00:00
helloworld stm32mp1 char driver.ko
                                                  100% 6184
                                                                6.0KB/s
                                                                          00:00
                                                  100% 7724
100% 4604
helloworld stm32mp1 class driver.ko
                                                                7.5KB/s
                                                                          00:00
helloworld_stm32mp1_with_parameters.ko
                                                                4.5KB/s
                                                                          00:00
helloworld_stm32mp1_with_timing.ko
                                                  100% 5688
                                                                5.6KB/s
                                                                          00:00
i2c_stm32mp1_accel.ko
                                                  100% 7216
                                                                7.1KB/s
                                                                          00:00
int_stm32mp1_key.ko
                                                  100% 7812
                                                                7.6KB/s
                                                                          00:00
int stm32mp1 key wait.ko
                                                  100%
                                                         10KB
                                                                9.9KB/s
                                                                          00:00
io stm32mp1 expander.ko
                                                  100% 9664
                                                                9.4KB/s
                                                                          00:00
keyled stm32mp1 class.ko
                                                  100%
                                                         16KB 16.2KB/s
                                                                          00:00
ledRGB stm32mp1 class platform.ko
                                                  100% 9524
                                                                9.3KB/s
                                                                          00:00
                                                  100% 11KB 10.9KB/s
ledRGB stm32mp1 platform.ko
                                                                          00:00
```

```
led stm32mp1 UIO platform.ko
                                                 100% 6912
                                                              6.8KB/s
                                                                        00:00
                                                 100% 9460
linkedlist stm32mp1 platform.ko
                                                              9.2KB/s
                                                                        00:00
ltc2422_stm32mp1_dual.ko
                                                 100% 7344
                                                              7.2KB/s
                                                                        00:00
ltc2422 stm32mp1 trigger.ko
                                                 100% 9840
                                                              9.6KB/s
                                                                        00:00
ltc2607 stm32mp1 dual device.ko
                                                 100% 8056
                                                             7.9KB/s
                                                                        00:00
ltc3206_stm32mp1_led_class.ko
                                                 100% 11KB 11.1KB/s
                                                                        00:00
                                                 100% 5780
misc stm32mp1 driver.ko
                                                             5.6KB/s
                                                                        00:00
                                                 100%
                                                       12KB 11.7KB/s
                                                                        00:00
sdma stm32mp1 m2m.ko
sdma stm32mp1 mmap.ko
                                                 100%
                                                       12KB 11.7KB/s
                                                                        00:00
~/STM32MP15-Ecosystem-v2.0.0/linux 5.4 stm32mp1 drivers$
```

Verify that the drivers are now in the STM32MP157C-DK2 Discovery kit:

```
root@stm32mp1:~# ls
adx1345_stm32mp1.ko
                                         keyled_stm32mp1_class.ko
adxl345_stm32mp1_iio.ko
                                        ledRGB_stm32mp1_class_platform.ko
hellokeys stm32mp1.ko
                                         ledRGB stm32mp1 platform.ko
helloworld stm32mp1.ko
                                         led stm32mp1 UIO platform.ko
helloworld stm32mp1 char driver.ko
                                         linkedlist stm32mp1 platform.ko
helloworld_stm32mp1_class_driver.ko
                                         ltc2422_stm32mp1_dual.ko
helloworld_stm32mp1_with_parameters.ko
                                        ltc2422 stm32mp1 trigger.ko
helloworld stm32mp1 with timing.ko
                                         ltc2607 stm32mp1 dual device.ko
i2c_stm32mp1_accel.ko
                                        ltc3206_stm32mp1_led_class.ko
int stm32mp1 key.ko
                                         misc stm32mp1 driver.ko
int stm32mp1 key wait.ko
                                        sdma stm32mp1 m2m.ko
io stm32mp1 expander.ko
                                         sdma stm32mp1 mmap.ko
root@stm32mp1:~#
```

The stm32mp15xx-dkx.dtsi and stm32mp15-pinctrl.dtsi files with all the needed modifications to run the drivers are stored in the device_tree folder inside the linux_5.4_stm32mp1_drivers.zip file. During the development of the drivers you will modify these device tree files, then build and copy them to the STM32MP1 board.

```
PC:~/STM32MP15-Ecosystem-v2.0.0/Developer-Package/stm32mp1-openstlinux-5.4-dunfell-mp1-20-06-24/sources/arm-ostl-linux-gnueabi/linux-stm32mp-5.4.31-r0/linux-5.4.31$ make dtbs


PC:~/STM32MP15-Ecosystem-v2.0.0/Developer-Package/stm32mp1-openstlinux-5.4-dunfell-mp1-20-06-24/sources/arm-ostl-linux-gnueabi/linux-stm32mp-5.4.31-r0/linux-5.4.31$ scp arch/arm/boot/dts/stm32mp157c-dk2.dtb root@10.0.0.10:/boot
```

Hardware and device tree descriptions for the ST STM32MP1 labs

In the next sections it will be described the different hardware and device tree configurations for the labs where external hardware connected to the processor is controlled by the drivers. The schematic of the STM32MP157C-DK2 Discovery kit is included inside the linux_5.4_stm32mp1_drivers.zip file that can be downloaded from the github of the book.

LAB 5.2, 5.3 and 5.4 hardware and device tree descriptions

During the development of these drivers you will use the LD6 RED, LD5 GREEN and LD8 BLUE leds included in the STM32MP157C-DK2 Discovery kit. Go to the pag.13 of the schematic to see them. Each LED is individually controlled by a processor pin programmed as GPIO output. The pins are PA13, PA14, and PD11. The PD11 pin is used by the "gpio-leds" driver, therefore you'll have to disable it in the stm32mp15xx-dkx.dtsi file to avoid conflicts with your developed drivers.

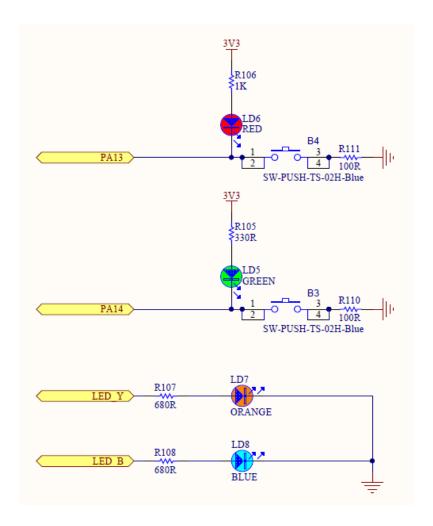

This is the device tree node that should be included in the stm32mp15xx-dkx.dtsi file to run the driver for the LAB 5.2:

This is the device tree node that should be included in the stm32mp15xx-dkx.dtsi file to run the driver for the LAB 5.3:

```
ledclassRGB {
          compatible = "arrow, RGB classleds";
           reg = <0x50002000 0x400>,
                 <0x50005000 0x400>;
          clocks = <&rcc GPIOA>,
                   <&rcc GPIOD>;
          clock-names = "GPIOA", "GPIOD";
          red {
                  label = "ledred";
          };
          green {
                  label = "ledgreen";
          };
          blue {
                  label = "ledblue";
           };
   };
```


This is the device tree node that should be included in the stm32mp15xx-dkx.dtsi file to run the driver for the LAB 5.4:

```
UIO {
   compatible = "arrow,UIO";
   reg = <0x50002000 0x1000>;
   clocks = <&rcc GPIOA>;
};
```

LAB 6.1 hardware and device tree descriptions

In this lab the driver will be able to manage several PCF8574 I/O expander devices connected to the I2C bus. You can use one of the multiples boards based on this device to develop this lab, for example, the next one https://www.waveshare.com/pcf8574-io-expansion-board.htm.

You will take the I2C5 bus from the CN13 connector of the STM32MP157C-DK2 Discovery kit. Go to the pag.10 of the STM32MP157C-DK2 schematic to see the connector.

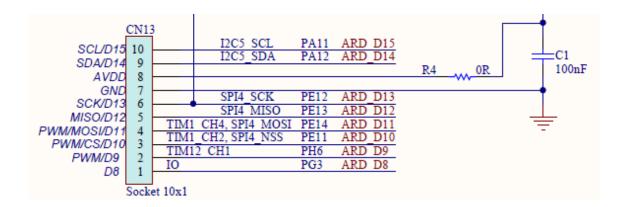

You can take the 3V3 and GND signals from the CN16 connector of the STM32MP157C-DK2 board. Go to the pag.10 of the STM32MP157C-DK2 schematic to see the connector.

This is the device tree node that should be included in the stm32mp15xx-dkx.dtsi file to run the driver for the LAB 6.1:

```
&i2c5 {
    pinctrl-names = "default", "sleep";
    pinctrl-0 = <&i2c5_pins_a>;
    pinctrl-1 = <&i2c5_pins_sleep_a>;
    i2c-scl-rising-time-ns = <185>;
    i2c-scl-falling-time-ns = <20>;
    clock-frequency = <400000>;
    /delete-property/dmas;
    /delete-property/dma-names;
    status = "okay";

ioexp@38 {
        compatible = "arrow,ioexp";
        reg = <0x38>;
}
```

```
};
};
```

LAB 6.2 hardware and device tree descriptions

To test this driver you will use the DC749A - Demo Board (http://www.analog.com/en/design-center/evaluation-hardware-and-software/evaluation-boards-kits/dc749a.html).


In this lab you will use the I2C5 pins of the STM32MP157C-DK2 CN13 connector to connect to the DC749A - Demo Board. Connect the pin 9 (I2C5_SDA) of the CN13 connector to the pin 7 (SDA) of the DC749A J1 connector and the pin 10 (I2C5_SCL) of the CN13 connector to the pin 4 (SCL) of the DC749A J1 connector. Connect the 3.3V pin from the STM32MP157C-DK2 CN16 connector to the DC749A Vin J2 pin and to the DC749A J20 DVCC connector. Connect the pin 1 (PG3 pad) of the CN13 connector to the pin 6 (ENRGB/S) of the DC749A J1 connector. Do not forget to connect GND between the two boards.

This is the device tree node that should be included in the stm32mp15xx-dkx.dtsi file to run the driver for the LAB 6.2:

```
&i2c5 {
   pinctrl-names = "default", "sleep";
   pinctrl-0 = <&i2c5 pins a>;
   pinctrl-1 = <&i2c5 pins sleep a>;
   i2c-scl-rising-time-ns = <185>;
   i2c-scl-falling-time-ns = <20>;
   clock-frequency = <400000>;
   /delete-property/dmas;
   /delete-property/dma-names;
   status = "okay";
   ltc3206: ltc3206@1b {
           compatible = "arrow,ltc3206";
           reg = \langle 0x1b \rangle;
           gpios = <&gpiog 3 GPIO_ACTIVE_LOW>;
           led1r {
                  label = "red";
           };
           led1b {
                  label = "blue";
           };
           led1g {
                   label = "green";
           };
```

LAB 7.1 and 7.2 hardware and device tree descriptions

In these two labs you will use the "USER" button (B3) of the STM32MP157C-DK2 board. The button is connected to PA14 pin. The pin will be programmed as an input generating an interrupt. You will also have to ensure the mechanical key is debounced. Open the STM32MP157C-DK2 schematic and find the button B3 in pag.13.

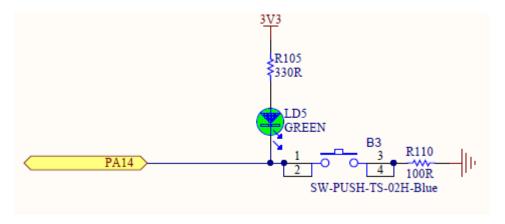


These are the device tree nodes that should be included in the stm32mp15xx-dkx.dtsi file to run the drivers for the LAB 7.1 and the LAB 7.2:

```
int_key_wait {
        compatible = "arrow,intkeywait";
        pinctrl-names = "default";
        pinctrl-0 = <&key_pins>;
        label = "PB_USER";
        gpios = <&gpioa 14 GPIO_ACTIVE_LOW>;
        interrupt-parent = <&gpioa>;
        interrupts = <14 IRQ_TYPE_EDGE_FALLING>;
};
```

LAB 7.3 hardware and device tree descriptions

In this lab you will use the LD7 ORANGE and the LD8 BLUE leds included in the STM32MP157C-DK2 Discovery kit. Go to the pag.13 of the STM32MP157C-DK2 schematic to see them. Each LED is individually controlled by a processor pin programmed as GPIO output. The pins are PH7 and PD11. Currently the PD11 pin is used by by the "gpio-leds" driver, therefore you'll have to disable it in the stm32mp15xx-dkx.dtsi file. In this lab you will also use the buttons B4 and B3. The button B4 is connected to PA13 pin and the button B3 is connected to the PA14 pin. Both pins will be programmed as an input generating an interrupt. You will also have to ensure the mechanical key is debounced. Open the STM32MP157C-DK2 schematic and find the B4 and B3 buttons in pag.13.

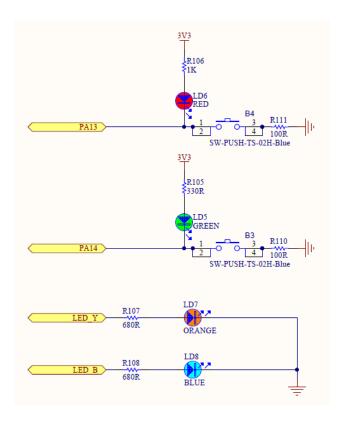

This is the device tree node that should be included in the stm32mp15xx-dkx.dtsi file to run the driver for the LAB 7.3:

```
trigger = "falling";
};

ledorange {
    label = "led";
    colour = "orange";
    gpios = <&gpioh 7 GPIO_ACTIVE_LOW>;
};

ledblue {
    label = "led";
    colour = "blue";
    gpios = <&gpiod 11 GPIO_ACTIVE_LOW>;
};
};
```


This is the device tree node that should be included in the stm32mp15-pinctrl.dtsi file to run the driver for the LAB 7.3:

```
keyleds_pins: keyleds-0 {
                          pins1 {
                                 pinmux = <STM32 PINMUX('H', 7, GPIO)>,
                                          <STM32 PINMUX('D', 11, GPIO)>;
                                 drive-push-pull;
                                 bias-pull-down;
                          };
                          pins2 {
                                 pinmux = <STM32 PINMUX('A', 13, GPIO)>;
                                 drive-push-pull;
                                 bias-pull-up;
                          };
                          pins3 {
                                 pinmux = <STM32_PINMUX('A', 14, GPIO)>;
                                 drive-push-pull;
                                 bias-pull-up;
                          };
};
```

LAB 10.1,10.2 and 12.1 hardware and device tree descriptions

In these labs you will control an accelerometer board connected to the I2C and SPI buses of the processor. You will use the ADXL345 Accel click mikroBUS $^{\text{TM}}$ accessory board to develop the drivers; you will access to the schematic of the board at http://www.mikroe.com/click/accel/.

For the LAB 10.1 you will connect the accelerometer board to the I2C5 pins of the STM32MP157C-DK2 CN13 connector. For the LAB 10.2 and the LAB 12.1 you will connect the accelerometer board to the SPI4 pins of the CN13 connector.

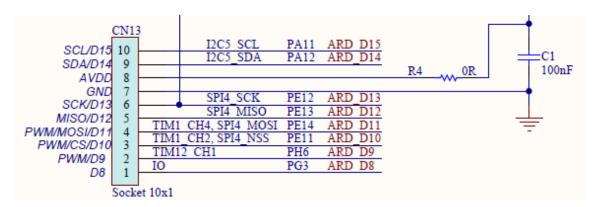

The pin 1 of the CN13 connector (PG3 pad) will be programmed as an input generating an interrupt for the LAB 10.2 and the LAB 12.1.

This is the device tree node that should be included in the stm32mp15xx-dkx.dtsi file to run the driver for the LAB 10.1:

```
&i2c5 {
    pinctrl-names = "default", "sleep";
    pinctrl-0 = <&i2c5_pins_a>;
    pinctrl-1 = <&i2c5_pins_sleep_a>;
    i2c-scl-rising-time-ns = <185>;
    i2c-scl-falling-time-ns = <20>;
    clock-frequency = <400000>;
    /delete-property/dmas;
    /delete-property/dma-names;
    status = "okay";

adxl345@1c {
        compatible = "arrow,adxl345";
        reg = <0x1d>;
    };
};
```

This is the device tree node that should be included in the stm32mp15xx-dkx.dtsi file to run the drivers for the LAB 10.2 and the LAB 12.1:

```
&spi4 {
   pinctrl-names = "default", "sleep";
```

```
pinctrl-0 = <&spi4 pins a>;
   pinctrl-1 = <&spi4_sleep_pins_a>;
   cs-gpios = <&gpioe 11 0>;
   status = "okay";
   Accel: ADXL345@0 {
           compatible = "arrow,adx1345";
           pinctrl-names ="default";
           pinctrl-0 = <&accel pins>;
           spi-max-frequency = <5000000>;
           spi-cpol;
           spi-cpha;
           reg = \langle 0 \rangle;
           int-gpios = <&gpiog 3 GPIO_ACTIVE_LOW>;
           interrupt-parent = <&gpiog>;
           interrupts = <3 IRQ TYPE LEVEL HIGH>;
   };
};
```

This is the device tree node that should be included in the stm32mp15-pinctrl.dtsi file to run the drivers for the LAB 10.2 and the LAB 12.1:

LAB 11.1 hardware and device tree descriptions

In this lab you will control the Analog Devices LTC2607 internal DACs individually or both DACA + DACB in a simultaneous mode. You will use the DC934A evaluation board; you can download the schematics at

https://www.analog.com/en/design-center/evaluation-hardware-and-software/evaluation-boards-kits/dc934a.html


For this LAB 11.1 you will connect the I2C5 pins of the STM32MP157C-DK2 CN13 connector to the SDA and SCL pins of the LTC2607 DC934A evaluation board. You are going to power the LTC2607 with the 3.3V pin of the STM32MP157C-DK2 CN16 connector, connecting it to V+, pin 1 of the DC934A's connector J1. Also connect GND between the DC934A (i.e., pin 3 of connector J1) and GND pin of the STM32MP157C-DK2 Discovery kit.

This is the device tree node that should be included in the stm32mp15xx-dkx.dtsi file to run the driver for the LAB 11.1:

```
&i2c5 {
   pinctrl-names = "default", "sleep";
   pinctrl-0 = <&i2c5 pins a>;
   pinctrl-1 = <&i2c5 pins sleep a>;
   i2c-scl-rising-time-ns = <185>;
   i2c-scl-falling-time-ns = <20>;
   clock-frequency = <400000>;
   /delete-property/dmas;
   /delete-property/dma-names;
   status = "okay";
   ltc2607@72 {
           compatible = "arrow,ltc2607";
           reg = \langle 0x72 \rangle;
   };
   ltc2607@73 {
           compatible = "arrow,ltc2607";
           reg = \langle 0x73 \rangle;
   };
};
```

LAB 11.2, LAB 11.3 and LAB 11.4 hardware and device tree descriptions


In these three labs you will reuse the hardware description of the LAB 11.1 and will use the SPI4 pins of the STM32MP157C-DK2 CN13 connector to connect to the LTC2422 dual ADC SPI device that is included in the DC934A board.

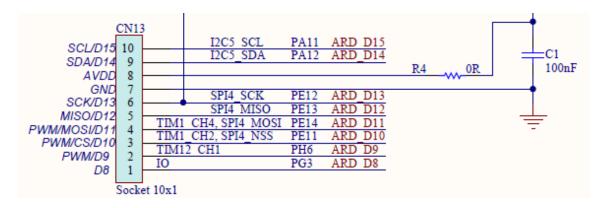

Open the STM32MP157C-DK2 schematic to see the CN13 connector and look for the SPI pins. The CS, SCK and MISO (Master In, Slave Out) signals will be used. The MOSI (Master out, Slave in) signal won't be needed, as you are only going to receive data from the LTC2422 device. Connect the next CN13 SPI4 pins to the LTC2422 SPI ones obtained from the DC934A board J1 connector:

- Connect the STM32MP157C-DK2 SPI4_NSS (CS) to LTC2422 CS
- Connect the STM32MP157C-DK2 SPI4_SCK (SCK) to LTC2422 SCK
- Connect the STM32MP157C-DK2 SPI4_MISO (MISO) to LTC2422 MISO

In the lab 11.4 you will also use the "USER" button (B3). The button is connected to the PA14 pin. The pin will be programmed as an input generating an interrupt.

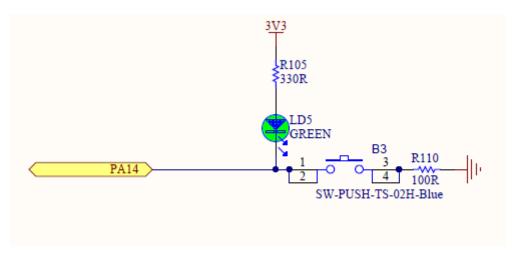

These are the device tree nodes that should be included in the stm32mp15xx-dkx.dtsi file to run the drivers for the LAB 11.2, LAB 11.3 and LAB 11.4:

This is the device tree node that should be included in the stm32mp15-pinctrl.dtsi file to run the driver for the LAB 11.4:

The kernel 5.4 modules developed for the STM32MP157C-DK2 board are included in the linux_5.4_STM32MP1_drivers.zip file and can be downloaded from the GitHub repository at https://github.com/ALIBERA/linux_book_2nd_edition

LAB 11.5: "IIO Mixed-Signal I/O Device" Module

This new lab has been added to the labs of Chapter 11 to reinforce the concepts of creating IIO drivers explained during this chapter, and apply in a practical way how to create a gpio controller reinforcing thus the theory developed during Chapter 5. You will also develop several user application to control GPIOs from user space.


A new low cost evaluation board based on the MAX11300 device will be used, thus expanding the number of evaluation boards that can be adquired to practice with the theory explained in the Chapter 11.

This new kernel module will control the Maxim MAX11300 device. The MAX11300 integrates a PIXITM, 12-bit, multichannel, analog-to-digital converter (ADC) and a 12-bit, multichannel, buffered digital-to-analog converter (DAC) in a single integrated circuit (IC). This device offers 20 mixed-signal high-voltage, bipolar ports, which are configurable as an ADC analog input, a DAC analog output, a general-purpose input port (GPI), a general-purpose output port (GPO), or an analog switch terminal. You can check all the info related to this device at https://www.maximintegrated.com/en/products/analog/data-converters/analog-to-digital-converters/MAX11300.html

The hardware platforms used in this lab are the STM32MP157C-DK2 board from ST and the PIXITM CLICK from MIKROE. The documentation of these boards can be found at https://www.st.com/en/evaluation-tools/stm32mp157c-dk2.html and https://www.mikroe.com/pixi-click

Before developing the driver, you can first create a custom design using the MAX11300 configuration GUI software. You will download this tool from Maxim's website. The MAX11300ConfigurationSetupV1.4.zip tool and the custom design used as a starting point for the development of the driver is included in the lab folder.

In the nex screenshot of the tool you can see the configuration that will be used during the development of the driver:

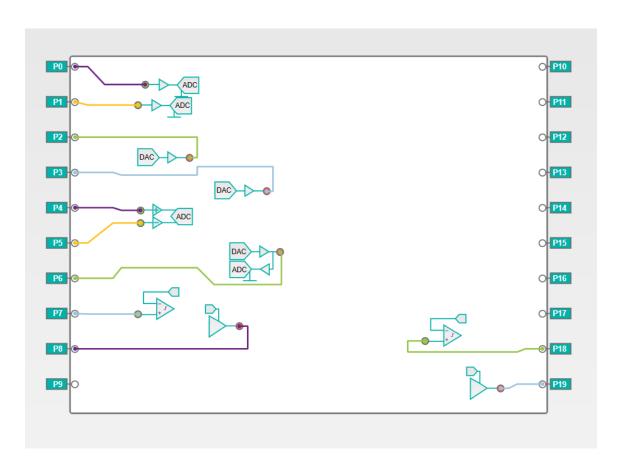


These are the parameters used during the configuration of the MAX11300 PIXI ports:

- **Port 0 (P0)** -> Single Ended ADC, Average of samples = 1, Reference Voltage = internal, Voltage Range = 0V to 10V.
- **Port 1 (P1)** -> Single Ended ADC, Average of samples = 1, Reference Voltage = internal, Voltage Range = 0V to 10V.
- **Port 2 (P2)** -> DAC, Voltage Output Level = 0V, Voltage Range = 0V to 10V.
- **Port 3 (P3)** -> DAC, Voltage Output Level = 0V, Voltage Range = 0V to 10V.
- **Port 4 (P4) and Port 5 (P5)** -> Differential ADC, Pin info: Input Pin (-) is P5 and Input Pin (+) is P4, Reference Voltage = internal, Voltage Range = 0V to 10V.

- **Port 6 (P6)** -> DAC with ADC monitoring, Reference Voltage = internal, Voltage Output Level = 0V, Voltage Range = 0V to 10V.
- **Port** 7 **(P7)** -> GPI, Interrupt: Masked, Voltage Input Threshold: 2.5V.
- **Port 8 (P8)** -> GPO, Voltage output Level = 3.3V.
- Port 18 (P18) -> GPI, Interrupt: Masked, Voltage Input Threshold: 2.5V.
- **Port 19 (P19)** -> GPO, Voltage output Level = 3.3V.

And these are the general parameters used during the configuration of the MAX11300 device:

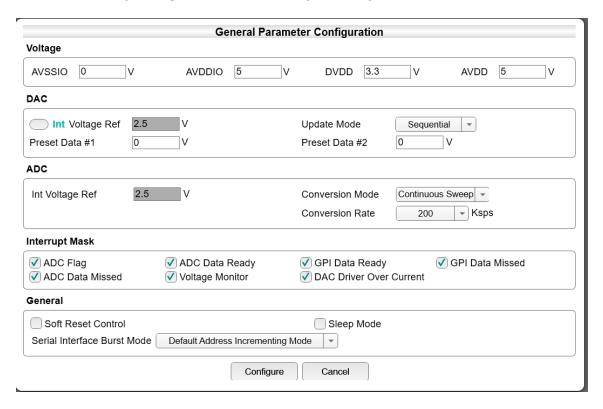


Not all the MAX11300 specifications were included during the development of this driver. These are the main specifications that have been included:

• Funcional modes for ports: Mode 1, Mode 3, Mode 5, Mode 6, Mode 7, Mode 8, Mode 9.

- DAC Update Mode: Sequential.
- ADC Conversion Mode: Continuous Sweep.
- Default ADC Conversion Rate of 200Ksps.
- Interrupts are masked.

LAB 11.5 hardware description

In this lab you will use the SPI4 pins of the STM32MP157C-DK2 CN13 connector to connect to the PIXITM CLICK mikroBUSTM socket. See below the STM32MP157C-DK2 CN13 connector:

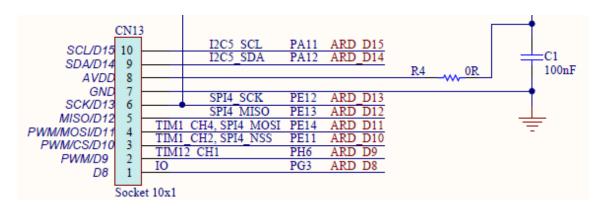


And the PIXITM CLICK mikroBUSTM socket:

Notes	Pin	mikro* BUS				Pin	Notes
	NC	1	AN	PWM	16	CNV	ADC trigger control
	NC	2	RST	INT	15	INT	Interrupt output
Chip select	cs	3	CS	RX	14	NC	
SPI clock	SCK	4	SCK	TX	13	NC	
SPI data output	SDO	5	MISO	SCL	12	NC	
SPI data input	SDI	6	MOSI	SDA	11	NC	
Power supply	+3.3V	7	3.3V	5V	10	+5V	Power supply
Ground	GND	8	GND	GND	9	GND	Ground

Open the STM32MP157C-DK2 schematic to see the CN13 connector and look for the SPI pins. The CS, SCK and MISO (Master In, Slave Out) and MOSI (Master out, Slave in) signals will be used. Connect the next CN13 SPI4 pins to the MAX11300 SPI ones obtained from the PIXITM CLICK mikroBUSTM socket:

- Connect the STM32MP157C-DK2 SPI4_NSS (Pin 3 of CN13) to MAX11300 CS (Pin 3 of Mikrobus)
- Connect the STM32MP157C-DK2 SPI4_SCK (Pin 6 of CN13) to MAX11300 SCK (Pin 4 of Mikrobus)
- Connect the STM32MP157C-DK2 SPI4_MOSI (Pin 4 of CN13) to MAX11300 MOSI (Pin 6 of Mikrobus)
- Connect the STM32MP157C-DK2 **SPI4_MISO** (Pin 5 of CN13) to MAX11300 **MISO** (Pin 5 of Mikrobus)
- Connect STM32MP157C-DK2 GND (Pin 7 of CN13) to MAX11300 GND (Pin 9 of Mikrobus)


Now, find the CN16 connector in the STM32MP157C-DK2 schematic:

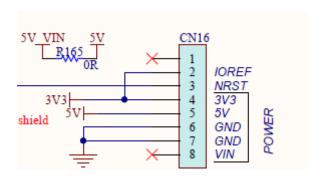

And connect the next power pins between the two boards:

- Connect the Pin 4 of CN16 (3.3V) to MAX11300 3.3V (Pin 7 of Mikrobus)
- Connect the Pin 5 of CN16 (5V) to MAX11300 5V (Pin 10 of Mikrobus)
- Connect the Pin 6 of CN16 (GND) to MAX11300 GND (Pin 9 of Mikrobus)

Finally, find the HD2 connector in the PIXITM CLICK schematic https://download.mikroe.com/documents/add-on-boards/click/pixi/pixi-click-schematic-v100.pdf

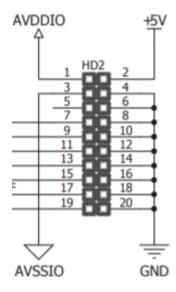

And connect the following pins:

- Connect the Pin 2 of HD2 (+5V) to the Pin 1 of HD2 (AVDDIO)
- Connect the Pin 4 of HD2 (GND) to the Pin 3 of HD2 (AVSSIO)

The hardware setup between the two boards is already done!!

LAB 11.5 device tree description

Open the stm32mp15xx-dkx.dtsi DT file and find the spi4 controller master node. Inside the spi4 node, you can see the pinctrl properties which configure the pins in SPI mode when the system runs and into a different state (ANALOG) when the system suspends to RAM. Both spi4_pins_a and spi4_sleep_pins_a are already defined in the stm32mp15-pinctrl.dtsi file.

The cs-gpios property specifies the gpio pins to be used for chip selects. In the spi4 node, you can see that there is only one chip select enabled. The spi4 controller is enabled by writing "okay" to the status property. Comment out all the sub-nodes included in the spi4 node coming from previous labs.

Now, you will add to the spi4 controller node the max11300 node, which includes twenty subnodes representing the different ports of the MAX11300 device. The first two properties inside the max11300 node are #size-cells and #address-cells. The #address-cells property defines the number of <u32> cells used to encode the address field in the child node's reg properties. The #size-cells property defines the number of <u32> cells used to encode the size field in the child

node's reg properties. In this driver, the #address-cells property of the max11300 node is set to 1 and the #size-cells property is set to 0. This setting specifies that one cell is required to represent an address and there is no a required cell to represent the size of the nodes that are children of the max11300 node. The serial device reg property included in all the channel childrens follows this specification set in the parent max11300 node.

There must be a DT device node's compatible property identical to the compatible string stored in one of the driver's of_device_id structures.

The spi-max-frequency specifies the maximum SPI clocking speed of device in Hz.

Each of the twenty children nodes can include the following properties:

- reg -> this property sets the port number of the MAX11300 device.
- port-mode -> this property sets the port configuration for the selected port.
- AVR -> this property selects the ADC voltage reference: 0: Internal, 1: External.
- **adc-range** -> this property selects the voltage range for ADC related modes.
- dac-range -> this property selects the voltage range for DAC related modes.
- **adc-samples** -> this property selects the number of samples for ADC related modes.
- **negative-input** -> this property sets the negative port number for ports configured in mode 8.

The channel sub-nodes have been configured with the same parameters that were used during configuration of the MAX11300 GUI software:

```
&spi4 {
    pinctrl-names = "default", "sleep";
    pinctrl-0 = <&spi4_pins_a>;
    pinctrl-1 = <&spi4_sleep_pins_a>;
    cs-gpios = <&gpioe 11 0>;
    status = "okay";

max11300@0 {
        #size-cells = <0>;
        #address-cells = <1>;
        compatible = "maxim,max11300";
        reg = <0>;
        spi-max-frequency = <10000000>;
        channel@0 {
            reg = <0>;
        }
```

```
port-mode = <PORT_MODE_7>;
         AVR = \langle 0 \rangle;
         adc-range = <ADC_VOLTAGE_RANGE_PLUS10>;
         adc-samples = <ADC SAMPLES 1>;
};
channel@1 {
         reg = \langle 1 \rangle;
         port-mode = <PORT MODE 7>;
         AVR = \langle 0 \rangle;
         adc-range = <ADC_VOLTAGE_RANGE_PLUS10>;
         adc-samples = <ADC_SAMPLES_128>;
};
channel@2 {
         reg = \langle 2 \rangle;
         port-mode = <PORT_MODE_5>;
         dac-range = <DAC VOLTAGE RANGE PLUS10>;
};
channel@3 {
         reg = \langle 3 \rangle;
         port-mode = <PORT MODE 5>;
         dac-range = <DAC VOLTAGE RANGE PLUS10>;
};
channel@4 {
         reg = \langle 4 \rangle;
         port-mode = <PORT_MODE_8>;
         AVR = \langle 0 \rangle;
         adc-range = <ADC_VOLTAGE_RANGE_PLUS10>;
         adc-samples = <ADC SAMPLES 1>;
         negative-input = <5>;
};
channel@5 {
         reg = \langle 5 \rangle;
         port-mode = <PORT MODE 9>;
         AVR = \langle 0 \rangle;
         adc-range = <ADC VOLTAGE RANGE PLUS10>;
};
channel@6 {
         reg = \langle 6 \rangle;
         port-mode = <PORT MODE 6>;
         AVR = \langle 0 \rangle;
         dac-range = <DAC VOLTAGE RANGE PLUS10>;
};
channel@7 {
         reg = \langle 7 \rangle;
         port-mode = <PORT MODE 1>;
};
channel@8 {
         reg = \langle 8 \rangle;
```

```
port-mode = <PORT_MODE_3>;
};
channel@9 {
         reg = \langle 9 \rangle;
         port-mode = <PORT_MODE_0>;
};
channel@10 {
         reg = \langle 10 \rangle;
         port-mode = <PORT_MODE_0>;
};
channel@11 {
         reg = \langle 11 \rangle;
         port-mode = <PORT_MODE_0>;
};
channel@12 {
         reg = \langle 12 \rangle;
         port-mode = <PORT_MODE_0>;
};
channel@13 {
         reg = \langle 13 \rangle;
         port-mode = <PORT_MODE_0>;
};
channel@14 {
         reg = \langle 14 \rangle;
         port-mode = <PORT_MODE_0>;
};
channel@15 {
         reg = \langle 15 \rangle;
         port-mode = <PORT_MODE_0>;
};
channel@16 {
        reg = <16>;
         port-mode = <PORT MODE 0>;
};
channel@17 {
         reg = (17);
         port-mode = <PORT_MODE_0>;
};
channel@18 {
         reg = \langle 18 \rangle;
         port-mode = <PORT_MODE_1>;
};
channel@19 {
         reg = \langle 19 \rangle;
         port-mode = <PORT_MODE_3>;
};
```

};

```
/* spidev@0 {
        compatible = "spidev";
        spi-max-frequency = <2000000>;
        reg = \langle 0 \rangle;
}; */
/*Accel: ADXL345@0 {
        compatible = "arrow,adx1345";
        pinctrl-names ="default";
        pinctrl-0 = <&accel pins>;
        spi-max-frequency = <5000000>;
        spi-cpol;
        spi-cpha;
        reg = \langle 0 \rangle;
        int-gpios = <&gpiog 3 GPIO ACTIVE LOW>;
        interrupt-parent = <&gpiog>;
        interrupts = <3 IRQ_TYPE_LEVEL_HIGH>;
};*/
/*ADC: 1tc2422@0 {
        compatible = "arrow,ltc2422";
        spi-max-frequency = <2000000>;
        reg = \langle 0 \rangle:
};
ADC: 1tc2422@0 {
        compatible = "arrow,ltc2422";
        spi-max-frequency = <2000000>;
        reg = \langle 0 \rangle;
        pinctrl-names ="default";
        pinctrl-0 = <&key pins>;
        int-gpios = <&gpioa 14 GPIO_ACTIVE_LOW>;
};*/
```

You also have to include the next header file at the beginning of the stm32mp15xx-dkx.dtsi DT file.

```
#include <dt-bindings/iio/maxim,max11300.h>
```

};

The maxim,max11300.h file includes the values of the DT binding properties that will be used for the DT channel children nodes. You have to place the maxim,max11300.h file under the next iio folder inside the kernel sources:

```
~/STM32MP15-Ecosystem-v2.0.0/Developer-Package/stm32mp1-openstlinux-5.4-dunfell-mp1-20-06-24/sources/arm-ostl-linux-gnueabi/linux-stm32mp-5.4.31-r0/linux-5.4.31/include/dt-bindings/iio/
```

This is the content of the maxim, max11300.h file:

```
#ifndef DT BINDINGS MAXIM MAX11300 H
#define DT BINDINGS MAXIM MAX11300 H
#define
          PORT MODE 0
#define
          PORT MODE 1
                       1
#define
          PORT MODE 2
                       2
                       3
#define
          PORT MODE 3
          PORT MODE 4
#define
                       4
#define
         PORT MODE 5
                       5
#define
          PORT_MODE_6
                       6
#define
          PORT MODE 7
                       7
#define
          PORT MODE 8
                       8
#define
          PORT MODE 9
                       9
#define
          PORT MODE 10
                       10
#define
          PORT MODE 11
                       11
#define
          PORT MODE 12
                       12
#define
          ADC SAMPLES 1
#define
          ADC SAMPLES 2
                         1
#define
          ADC SAMPLES 4
                         2
#define
          ADC SAMPLES 8
                         3
          ADC SAMPLES 16 4
#define
#define
         ADC SAMPLES 32
                         5
#define
          ADC SAMPLES 64
#define
          ADC_SAMPLES_128 7
/* ADC voltage ranges */
          ADC VOLTAGE RANGE NOT SELECTED
#define
#define
         ADC VOLTAGE RANGE PLUS10
                                            1
                                                   // 0 to +5V range
#define
         ADC VOLTAGE RANGE PLUSMINUS5
                                           2
                                                   // -5V to +5V range
#define
          ADC VOLTAGE RANGE MINUS10
                                                   // -10V to 0 range
                                           3
#define
          ADC VOLTAGE RANGE PLUS25
                                                   // 0 to +2.5 range
/* DAC voltage ranges mode 5*/
          DAC VOLTAGE RANGE NOT SELECTED
                                            0
#define
#define
          DAC VOLTAGE RANGE PLUS10
                                            1
                                            2
#define
          DAC VOLTAGE RANGE PLUSMINUS5
#define
          DAC_VOLTAGE_RANGE_MINUS10
                                            3
#endif /* DT BINDINGS MAXIM MAX11300 H */
```

LAB 11.5 driver description

The main code sections of the driver will be described using three different categories: Industrial framework as a SPI interaction, Industrial framework as an IIO device and GPIO driver interface. The MAX11300 driver is based on Paul Cercueil's AD5592R driver (https://elixir.bootlin.com/linux/latest/source/drivers/iio/dac/ad5592r.c)

Industrial framework as a SPI interaction

These are the main code sections:

1. Include the required header files:

```
#include <linux/spi/spi.h>
```

2. Create a struct spi_driver structure:

3. Register to the SPI bus as a driver:

```
module_spi_driver(max11300_spi_driver);
```

4. Add "maxim,max11300" to the list of devices supported by the driver. The compatible variable matchs with the compatible property of the max11300 DT node:

5. Define an array of struct spi device id structures:

6. Initialize the struct max11300_rw_ops structure with read and write callbacks that will access via SPI to the registers of the MAX11300 device. See below the code of these callbacks:

```
/* Initialize the struct max11300 rw ops with read and write callback functions
to write/read via SPI from MAX11300 registers */
static const struct max11300 rw ops max11300 rw ops = {
       .reg write = max11300 reg write,
       .reg read = max11300 reg read,
       .reg read differential = max11300 reg read differential,
};
/* function to write MAX11300 registers */
static int max11300_reg_write(struct max11300_state *st, u8 reg, u16 val)
{
       struct spi_device *spi = container_of(st->dev, struct spi_device, dev);
       struct spi_transfer t[] = {
                      .tx buf = &st->tx cmd,
                      .len = 1,
              }, {
                      .tx buf = &st->tx msg,
                      .1en = 2,
              },
       };
       /* to transmit via SPI the LSB bit of the command byte must be 0 */
       st->tx cmd = (reg << 1);
       /*
        * In little endian CPUs the byte stored in the higher address of the
        * "val" variable (MSB of the DAC) is stored in the lower address of the
        * "st->tx msg" variable using cpu to be16()
       st->tx_msg = cpu_to_be16(val);
       return spi_sync_transfer(spi, t, ARRAY_SIZE(t));
}
/* function to read MAX11300 registers in SE mode */
static int max11300 reg read(struct max11300 state *st, u8 reg, u16 *value)
{
       struct spi device *spi = container of(st->dev, struct spi device, dev);
       int ret;
       struct spi_transfer t[] = {
     {
```

```
.tx_buf = &st->tx_cmd,
                      .len = 1,
              }, {
                      .rx buf = &st->rx msg,
                      .1en = 2,
              },
       };
       dev info(st->dev, "read SE channel\n");
       /* to receive via SPI the LSB bit of the command byte must be 1 */
       st->tx \ cmd = ((reg << 1) | 1);
       ret = spi_sync_transfer(spi, t, ARRAY_SIZE(t));
       if (ret < 0)
              return ret;
       /*
        * In little endian CPUs the first byte (MSB of the ADC) received via
        * SPI (in BE format) is stored in the lower address of "st->rx msg"
        * variable. This byte is copied to the higher address of the "value"
        * variable using be16_to_cpu(). The second byte received via SPI is
        * copied from the higher address of "st->rx msg" to the lower address
        * of the "value" variable in little endian CPUs.
        * In big endian CPUs the addresses are not swapped.
        */
       *value = be16 to cpu(st->rx msg);
       return 0;
}
/* function to read MAX11300 registers in differential mode (2's complement) */
static int max11300 reg read differential(struct max11300 state *st, u8 reg,
                                          int *value)
{
       struct spi device *spi = container of(st->dev, struct spi device, dev);
       int ret;
       struct spi transfer t[] = {
               {
                      .tx buf = &st->tx cmd,
                      .len = 1,
              }, {
                      .rx_buf = &st->rx_msg,
                      .1en = 2,
              },
       };
```

Industrial framework as an IIO device

These are the main code sections:

1. Include the required header files:

```
#include <linux/iio/iio.h> /* devm_iio_device_alloc(), iio_priv() */
```

2. Create a global private data structure to manage the device from any function of the driver:

```
struct max11300 state {
       struct device *dev; // pointer to SPI device
       const struct max11300 rw ops *ops; // pointer to spi callback functions
       struct gpio_chip gpiochip; // gpio_chip controller
       struct mutex gpio lock;
       u8 num_ports; // number of ports of the MAX11300 device = 20
       u8 num_gpios; // number of ports declared in the DT as GPIOs
       u8 gpio offset[20]; // gpio port numbers (0 to 19) for the "offset"
values in the range 0..(@ngpio - 1)
       u8 gpio_offset_mode[20]; // gpio port modes (1 and 3) for the "offset"
values in the range 0..(@ngpio - 1)
       u8 port modes[20]; // port modes for the 20 ports of the MAX11300
       u8 adc range[20]; // voltage range for ADC related modes
       u8 dac range[20]; // voltage range for DAC related modes
       u8 adc reference[20]; // ADC voltage reference: 0: Internal, 1: External
       u8 adc samples[20]; // number of samples for ADC related modes
       u8 adc negative port[20]; // negative port number for ports configured
in mode 8
```

```
u8 tx_cmd; // command byte for SPI transactions
__be16 tx_msg; // transmit value for SPI transactions in BE format
__be16 rx_msg; // value received in SPI transactions in BE format
```

3. In the max11300_probe() function, declare an instance of the private structure and allocate the iio dev structure.

```
struct iio_dev *indio_dev;
struct max11300_state *st;
indio_dev = devm_iio_device_alloc(dev, sizeof(*st));
```

};

4. Initialize the <code>iio_device</code> and the data private structure within the <code>max11300_probe()</code> function. The data private structure will be previously allocated by using the <code>iio_priv()</code> function. Keep pointers between physical devices (devices as handled by the physical bus, SPI in this case) and logical devices:

st = iio_priv(indio_dev); /* To be able to access the private data structure in
other parts of the driver you need to attach it to the iio_dev structure using
the iio_priv() function. You will retrieve the pointer "data" to the private
structure using the same function iio priv() */

st->dev = dev; /* Keep pointer to the SPI device, needed for exchanging data with the MAX11300 device */

dev_set_drvdata(dev, iio_dev); /* link the spi device with the iio device */

iio_dev->name = name; /* Store the iio_dev name. Before doing this within
your probe() function, you will get the spi_device_id that triggered the match
using spi_get_device_id() */

iio_dev->dev.parent = dev; /* keep pointers between physical devices
(devices as handled by the physical bus, SPI in this case) and logical devices
*/

indio_dev->info = &max11300_info; /* store the address of the iio_info
structure which contains a pointer variable to the IIO raw reading/writing
callbacks */

max11300_alloc_ports(st); /* configure the IIO channels of the device to
generate the IIO sysfs entries. This function will be described in more detail
in the next point */

5. The max11300_alloc_ports() function will read the properties from the DT channel children nodes of the DT max11300 node by using the fwnode_property_read_u32() function, and will store the values of these properties into the variables of the data global structure. The function max11300_set_port_modes() will use these variables to configure the ports of the MAX11300 device. The max11300_alloc_ports() function will also generate the different IIO sysfs entries using the max11300_setup_port_*_mode() functions:

```
* this function will allocate and configure the iio channels of the iio device
* It will also read the DT properties of each port (channel) and will store
* them in the global structure of the device
static int max11300 alloc ports(struct max11300 state *st)
       unsigned int i, curr port = 0, num ports = st->num ports,
port mode 6 count = 0, offset = 0;
       st->num gpios = 0;
       /* recover the iio device from the global structure */
       struct iio_dev *iio_dev = iio_priv_to_dev(st);
       /* pointer to the storage of the specs of all the iio channels */
       struct iio chan spec *ports;
       /* pointer to struct fwnode handle allowing device description object */
       struct fwnode handle *child;
       u32 reg, tmp;
       int ret;
        * walks for each MAX11300 child node from the DT,
        * if an error is found in the node then walks to
        * the following one (continue)
        */
       device for each child node(st->dev, child) {
              ret = fwnode_property_read_u32(child, "reg", &reg);
              if (ret || reg >= ARRAY_SIZE(st->port_modes))
                     continue;
              /* store the value of the DT "port,mode" property
               * in the global structure to know the mode of each port in
               * other functions of the driver
              ret = fwnode property read u32(child, "port-mode", &tmp);
              if (!ret)
                      st->port modes[reg] = tmp;
              /* all the DT nodes should include the port-mode property */
              else {
                      dev info(st->dev, "port mode is not found\n");
                     continue;
              }
              /*
```

```
* you will store other DT properties
 * depending of the used "port, mode" property
 */
switch (st->port modes[reg]) {
case PORT MODE 7:
       ret = fwnode property_read_u32(child, "adc-range", &tmp);
       if (!ret)
              st->adc range[reg] = tmp;
       else
              dev info(st->dev, "Get default ADC range\n");
       ret = fwnode property read u32(child, "AVR", &tmp);
       if (!ret)
              st->adc_reference[reg] = tmp;
       else
              dev info(st->dev, "Get default internal ADC
                       reference\n");
       ret = fwnode property read u32(child, "adc-samples",
                                      &tmp);
       if (!ret)
              st->adc_samples[reg] = tmp;
       else
              dev info(st->dev, "Get default internal ADC
                       sampling\n");
       break;
case PORT MODE 8:
       ret = fwnode property_read_u32(child, "adc-range", &tmp);
       if (!ret)
              st->adc_range[reg] = tmp;
       else
              dev info(st->dev, "Get default ADC range\n");
       ret = fwnode property read u32(child, "AVR", &tmp);
       if (!ret)
              st->adc reference[reg] = tmp;
       else
              dev info(st->dev, "Get default internal ADC
                       reference\n");
       ret = fwnode property_read_u32(child, "adc-samples",
                                      &tmp);
       if (!ret)
              st->adc_samples[reg] = tmp;
       else
```

```
dev_info(st->dev, "Get default internal ADC
                       sampling\n");
       ret = fwnode property read u32(child, "negative-input",
                                      &tmp);
       if (!ret)
               st->adc negative port[reg] = tmp;
       else {
              dev info(st->dev, "Bad value for negative ADC
                       channel\n");
               return -EINVAL;
       }
       break;
case PORT MODE 9: case PORT MODE 10:
       ret = fwnode_property_read_u32(child, "adc-range", &tmp);
       if (!ret)
               st->adc range[reg] = tmp;
       else
              dev info(st->dev, "Get default ADC range\n");
       ret = fwnode property read u32(child, "AVR", &tmp);
       if (!ret)
              st->adc reference[reg] = tmp;
       else
               dev_info(st->dev, "Get default internal ADC
                       reference\n");
       break;
case PORT MODE 5: case PORT MODE 6:
       ret = fwnode property read u32(child, "dac-range", &tmp);
       if (!ret)
       st->dac_range[reg] = tmp;
       else
               dev info(st->dev, "Get default DAC range\n");
        * A port in mode 6 will generate two IIO sysfs entries,
        * one for writing the DAC port, and another for reading
        * the ADC port
        */
       if ((st->port modes[reg]) == PORT MODE 6) {
               ret = fwnode property read u32(child, "AVR",
                                             &tmp);
               if (!ret)
                      st->adc_reference[reg] = tmp;
```

```
else
                      dev_info(st->dev, "Get default internal
                              ADC reference\n");
               * get the number of ports set in mode_6 to
               * allocate space for the realated iio channels
              port_mode_6_count++;
       }
       break;
/* The port is configured as a GPI in the DT */
case PORT MODE 1:
       /*
        * link the gpio offset with the port number,
        * starting with offset = 0
       st->gpio offset[offset] = reg;
        * store the port mode for each gpio offset,
        * starting with offset = 0
       st->gpio offset mode[offset] = PORT MODE 1;
        * increment the gpio offset and number of configured
        * ports as GPIOs
        */
       offset++;
       st->num_gpios++;
       break;
/* The port is configured as a GPO in the DT */
case PORT_MODE_3:
       /*
        * link the gpio offset with the port number,
        * starting with offset = 0
        */
       st->gpio_offset[offset] = reg;
        * store the port_mode for each gpio offset,
        * starting with offset = 0
```

```
*/
              st->gpio offset mode[offset] = PORT MODE 3;
               * increment the gpio offset and
               * number of configured ports as GPIOs
               */
              offset++;
              st->num_gpios++;
              break;
       case PORT MODE 0:
              dev_info(st->dev, "the channel %d is set in default port
                       mode_0\n", reg);
              break;
       default:
              dev info(st->dev, "bad port mode for channel %d\n", reg);
       }
}
 * Allocate space for the storage of all the IIO channels specs.
 * Returns a pointer to this storage
devm kcalloc(st->dev, num ports + port mode 6 count,
             sizeof(*ports), GFP KERNEL);
 * i is the number of the channel, &ports[curr_port] is a pointer
 * variable that will store the "iio chan spec structure" address of
 * each port
 */
for (i = 0; i < num ports; i++) {
       switch (st->port modes[i]) {
       case PORT MODE 5:
              max11300 setup port 5 mode(iio dev, &ports[curr port],
                                         true, i, PORT MODE 5);
              curr port++;
              break;
       case PORT MODE 6:
              max11300_setup_port_6_mode(iio_dev, &ports[curr_port],
                                          true, i, PORT_MODE_6);
              curr_port++;
```

```
max11300_setup_port_6_mode(iio_dev, &ports[curr_port],
                                                false, i, PORT_MODE_6);
                      curr port++;
                      break;
              case PORT MODE 7:
                      max11300_setup_port_7_mode(iio_dev, &ports[curr_port],
                                                false, i, PORT_MODE_7);
                      curr port++;
                      break;
              case PORT_MODE 8:
                      max11300_setup_port_8_mode(iio_dev, &ports[curr_port],
                             false, i, st->adc_negative_port[i], PORT_MODE_8);
                      curr port++;
                      break;
              case PORT MODE 0:
                      dev_info(st->dev, "the channel is set in default port
                              mode_0\n");
                      break;
              case PORT MODE 1:
                      dev_info(st->dev, "the channel %d is set in port
                              mode_1\n", i);
                      break;
              case PORT MODE 3:
                      dev_info(st->dev, "the channel %d is set in port
                              mode_3\n", i);
                      break;
              default:
                      dev_info(st->dev, "bad port mode for channel %d\n", i);
              }
       }
       iio dev->num channels = curr port;
       iio dev->channels = ports;
       return 0;
}
```

6. Write the struct iio_info structure. The read/write user space operations to sysfs data channel access attributes are mapped to the following kernel callbacks:

```
static const struct iio_info max11300_info = {
```

```
.read_raw = max11300_read_adc,
    .write_raw = max11300_write_dac,
};
```

The max11300_write_dac() function contains a switch(mask) that sets different tasks depending of the received parameter values. If the received info_mask value is [IIO_CHAN_INFO_RAW] = "raw", the max11300_reg_write() function is called, which writes a DAC value (entered through the user space via a IIO sysfs entry) to the selected port DAC data register using a SPI transaction.

When the max11300_read_adc() function receives the info_mask value [IIO_CHAN_INFO_RAW] = "raw", it first reads the received ADC channel address value to select the ADC port mode. Once the ADC port mode has been discovered, then max11300_reg_read() or max11300_reg_read_differential() functions are called, which get the value of the selected port ADC data register via a SPI transaction. The returned ADC value is stored into the val variable and this value is returned to the user space through the IIO_VAL_INT identifier.

GPIO driver interface

The MAX11300 driver will also include a GPIO controller, which will configure and control the MAX11300 ports selected as GPIOs (Port 1 and Port 3 modes) in the DT node of the device.


In the Chapter 5 of this book, you saw how to control GPIOs from kernel space using the GPIO descriptor consumer interface of the GPIOLib framework.

Most processors today use composite pin controllers. These composite pin controllers will control the GPIOs of the processor, generate interrupts on top of the GPIO functionality and allow pin multiplexing using the I/O pins of the processor as GPIOs or as one of several peripheral functions. The STM32MP1 from ST is one of these processors, including composite pin controllers, which are configured with the pinctrl-stm32 driver: https://elixir.bootlin.com/linux/v5.4.64/source/drivers/pinctrl/stm32

The pinctrl-stm32 driver will register the gpio_chip structures with the kernel, the irq_chip structures with the IRQ system and the pinctrl_desc structures with the Pinctrl subsystem. The gpio and pin controllers are associated with each other within the pinctrl-stm32 driver through the pinctrl_add_gpio_range() function, which adds a range of GPIOs to be handled by a certain pin controller. In the section 2.1 of the gpio device tree binding document at https://elixir.bootlin.com/linux/latest/source/Documentation/devicetree/bindings/gpio/gpio.txt , you can see the gpio and pin controllers interaction within the DT sources.

The GPIOLib framework will provide the kernel and user space APIs to control the GPIOs.

In the next image, taken from the STM32MP1 wiki article at https://wiki.st.com/stm32mpu/wiki/GPIOLib_overview, you can see the interaction between different kernel drivers and frameworks to control the GPIO chips. You can also see in this article a description of the blocks shown in the image below.

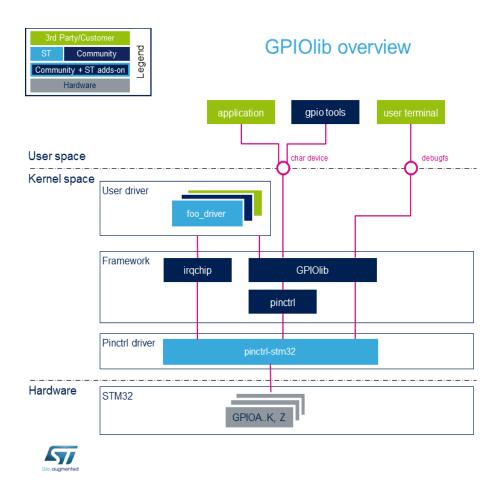

Our MAX11300 IIO driver will include a basic GPIO controller, which will configure the ports of the MAX11300 device as GPIOs, set the direction of the GPIOs (input or output) and control the ouput level of the GPIO lines (low or high ouput level).

These are the main steps to create the GPIO controller in our MAX11300 IIO driver:

- Include the following header, which defines the structures used to define a GPIO driver: #include linux/gpio/driver.h>
- 2. Initialize the gpio_chip structure with the different callbacks that will control the gpio lines of the GPIO controller and register the gpio chip with the kernel using the gpiochip add data() function:

```
static int max11300_gpio_init(struct max11300_state *st)
{
    st->gpiochip.label = "gpio-max11300";
    st->gpiochip.base = -1;
    st->gpiochip.ngpio = st->num_gpios;
    st->gpiochip.parent = st->dev;
    st->gpiochip.can_sleep = true;
    st->gpiochip.direction_input = max11300_gpio_direction_input;
    st->gpiochip.direction_output = max11300_gpio_direction_output;
    st->gpiochip.get = max11300_gpio_get;
    st->gpiochip.set = max11300_gpio_set;
    st->gpiochip.owner = THIS_MODULE;

    /* register a gpio_chip */
    return gpiochip_add_data(&st->gpiochip, st);
}
```

3. These are the callback functions that will control the GPIO lines of the MAX11300 GPIO controller:

```
/* for GPIOs from 16 to 19 ports */
       if (st->gpio_offset[offset] > 0x0F) {
               reg = GPI_DATA_19_TO_16_ADDRESS;
               ret = st->ops->reg read(st, reg, &read val);
               if (ret)
                      goto err_unlock;
               val = (int) (read_val);
               val = val << 16;</pre>
               if (val & BIT(st->gpio offset[offset]))
                      val = 1;
               else
                      val = 0;
               mutex unlock(&st->gpio lock);
               return val;
       }
       else {
               reg = GPI DATA 15 TO 0 ADDRESS;
               ret = st->ops->reg read(st, reg, &read val);
               if (ret)
                      goto err_unlock;
               val = (int) read_val;
               if(val & BIT(st->gpio offset[offset]))
                      val = 1;
               else
                      val = 0;
               mutex_unlock(&st->gpio_lock);
               return val;
       }
err unlock:
       mutex_unlock(&st->gpio_lock);
       return ret;
}
* struct gpio chip set callback function.
* It sets the output value of the GPIO line with
* GPIO ACTIVE HIGH mode (0=low, 1=high)
 * writing to the GPO DATA registers of the max11300
static void max11300_gpio_set(struct gpio_chip *chip, unsigned int offset,
                              int value)
```

```
{
       struct max11300 state *st = gpiochip get data(chip);
       u8 reg;
       unsigned int val = 0;
       mutex_lock(&st->gpio_lock);
       if (st->gpio offset mode[offset] == PORT MODE 1)
       dev info(st->dev, "the gpio %d cannot accept this output\n", offset);
       if (value == 1 && (st->gpio offset[offset] > 0x0F)) {
               dev info(st->dev, "The GPIO ouput is set high and port number is
                       %d. Pin is > 0x0F\n", st->gpio_offset[offset]);
              val |= BIT(st->gpio_offset[offset]);
              val = val >> 16;
               reg = GPO DATA 19 TO 16 ADDRESS;
               st->ops->reg_write(st, reg, val);
       }
       else if (value == 0 && (st->gpio offset[offset] > 0x0F)) {
               dev info(st->dev, "The GPIO ouput is set low and port number is
                       %d. Pin is > 0x0F\n", st->gpio_offset[offset]);
              val &= ~BIT(st->gpio offset[offset]);
              val = val >> 16:
               reg = GPO DATA 19 TO 16 ADDRESS;
               st->ops->reg write(st, reg, val);
       else if (value == 1 && (st->gpio offset[offset] < 0x0F)) {
               dev info(st->dev, "The GPIO ouput is set high and port number is
                       %d. Pin is < 0x0F\n", st->gpio_offset[offset]);
              val |= BIT(st->gpio_offset[offset]);
               reg = GPO_DATA_15_TO_0_ADDRESS;
               st->ops->reg_write(st, reg, val);
       }
       else if (value == 0 && (st->gpio_offset[offset] < 0x0F)) {</pre>
               dev_info(st->dev, "The GPIO ouput is set low and port_number is
                       %d. Pin is < 0x0F\n", st->gpio offset[offset]);
              val &= ~BIT(st->gpio offset[offset]);
               reg = GPO_DATA_15_TO_0_ADDRESS;
               st->ops->reg write(st, reg, val);
       }
       else
               dev info(st->dev, "the gpio %d cannot accept this value\n",
                       offset);
       mutex unlock(&st->gpio lock);
}
/*
```

```
* struct gpio chip direction input callback function.
 * It configures the GPIO port as an input (GPI)
 * writing to the PORT CFG register of the max11300
static int max11300_gpio_direction_input(struct gpio_chip *chip,
                                         unsigned int offset)
{
       struct max11300_state *st = gpiochip_get_data(chip);
       int ret;
       u8 reg;
       u16 port mode, val;
       mutex_lock(&st->gpio_lock);
       /* get the port number stored in the GPIO offset */
       if (st->gpio_offset_mode[offset] == PORT_MODE_3)
              dev_info(st->dev, "Error.The gpio %d only can be set in output
                       mode\n", offset);
       /* Set the logic 1 input above 2.5V level */
       val = 0x0fff;
       /* store the GPIO threshold value in the port DAC register */
       reg = PORT DAC DATA BASE ADDRESS + st->gpio offset[offset];
       ret = st->ops->reg write(st, reg, val);
       if (ret)
              goto err unlock;
       /* Configure the port as GPI */
       reg = PORT_CFG_BASE_ADDRESS + st->gpio_offset[offset];
       port_mode = (1 << 12);</pre>
       ret = st->ops->reg write(st, reg, port mode);
       if (ret)
              goto err_unlock;
       mdelay(1);
err unlock:
       mutex unlock(&st->gpio lock);
       return ret;
}
* struct gpio_chip direction_output callback function.
* It configures the GPIO port as an output (GPO) writing to
 * the PORT_CFG register of the max11300 and sets output value of the
```

```
* GPIO line with GPIO ACTIVE HIGH mode (0=low, 1=high)
 * writing to the GPO data registers of the max11300
 */
static int max11300 gpio direction output(struct gpio chip *chip,
                                      unsigned int offset, int value)
{
       struct max11300_state *st = gpiochip_get_data(chip);
       int ret;
       u8 reg;
       u16 port mode, val;
       mutex lock(&st->gpio lock);
       dev_info(st->dev, "The GPIO is set as an output\n");
       if (st->gpio offset mode[offset] == PORT MODE 1)
               dev_info(st->dev, "the gpio %d only can be set in input mode\n",
                       offset);
       /* GPIO output high is 3.3V */
       val = 0x0547;
       reg = PORT DAC DATA BASE ADDRESS + st->gpio offset[offset];
       ret = st->ops->reg write(st, reg, val);
       if (ret) {
              mutex_unlock(&st->gpio_lock);
              return ret;
       }
       mdelay(1);
       reg = PORT_CFG_BASE_ADDRESS + st->gpio_offset[offset];
       port_mode = (3 << 12);
       ret = st->ops->reg_write(st, reg, port_mode);
       if (ret) {
              mutex_unlock(&st->gpio_lock);
              return ret;
       mdelay(1);
       mutex unlock(&st->gpio lock);
       max11300 gpio set(chip, offset, value);
       return ret;
}
```

See in the next **Listings** the complete "IIO Mixed-Signal I/O Device" driver source code for the STM32MP1 processor.

Note: The "IIO Mixed-Signal I/O Device" driver source code developed for the STM32MP157C-DK2 board is included in the linux_5.4_max11300_driver.zip file and can be downloaded from the GitHub repository at https://github.com/ALIBERA/linux_book_2nd_edition

Listing 11-6: max11300-base.h

```
#ifndef DRIVERS IIO DAC max11300 BASE H
#define DRIVERS IIO DAC max11300 BASE H
#include <linux/types.h>
#include <linux/cache.h>
#include <linux/mutex.h>
#include <linux/gpio/driver.h>
struct max11300 state;
/* masks for the Device Control (DCR) Register */
#define DCR ADCCTL CONTINUOUS SWEEP (BIT(0) | BIT(1))
#define DCR DACREF BIT(6)
#define BRST BIT(14)
#define RESET BIT(15)
/* define register addresses */
#define DCR ADDRESS 0x10
#define PORT_CFG_BASE_ADDRESS 0x20
#define PORT ADC DATA BASE ADDRESS 0x40
#define PORT DAC DATA BASE ADDRESS 0x60
#define DACPRSTDAT1 ADDRESS 0x16
#define GPO_DATA_15_TO_0_ADDRESS 0x0D
#define GPO DATA 19 TO 16 ADDRESS 0x0E
#define GPI DATA 15 TO 0 ADDRESS 0x0B
#define GPI DATA 19 TO 16 ADDRESS 0x0C
 * declare the struct with pointers to the functions that will read and write
 * via SPI the registers of the MAX11300 device
struct max11300 rw ops {
   int (*reg write)(struct max11300 state *st, u8 reg, u16 value);
   int (*reg read)(struct max11300 state *st, u8 reg, u16 *value);
   int (*reg read differential)(struct max11300_state *st, u8 reg, int *value);
};
```

```
/* declare the global structure that will store the info of the device */
struct max11300 state {
   struct device *dev;
   const struct max11300 rw ops *ops;
   struct gpio_chip gpiochip;
   struct mutex gpio_lock;
   u8 num ports;
   u8 num gpios;
   u8 gpio offset[20];
   u8 gpio offset mode[20];
   u8 port modes[20];
   u8 adc_range[20];
   u8 dac_range[20];
   u8 adc reference[20];
   u8 adc samples[20];
   u8 adc_negative_port[20];
   u8 tx_cmd;
   __be16 tx_msg;
   __be16 rx_msg;
};
int max11300_probe(struct device *dev, const char *name,
             const struct max11300 rw ops *ops);
int max11300_remove(struct device *dev);
#endif /* __DRIVERS_IIO_DAC_max11300_BASE_H__ */
```

Listing 11-7: maxim, max11300.h

#ifndef DT BINDINGS MAXIM MAX11300 H

```
#define _DT_BINDINGS_MAXIM_MAX11300_H
#define
           PORT MODE 0
#define
          PORT MODE 1
                                 1
#define
          PORT MODE 2
                                 2
#define
          PORT MODE 3
                                 3
#define
                                 4
          PORT MODE 4
          PORT MODE 5
                                 5
#define
#define
          PORT MODE 6
                                 6
                                 7
#define
          PORT MODE 7
                                 8
#define
          PORT MODE 8
                                 9
#define
          PORT MODE 9
#define
                                 10
          PORT MODE 10
#define
           PORT MODE 11
                                 11
#define
          PORT MODE 12
                                 12
#define
          ADC SAMPLES 1
```

```
#define
          ADC SAMPLES 2
                               1
         ADC SAMPLES 4
#define
                               2
                               3
#define
        ADC_SAMPLES_8
#define
        ADC SAMPLES 16
                               4
#define
       ADC SAMPLES 32
                               5
#define ADC SAMPLES 64
                               6
#define ADC_SAMPLES_128
/* ADC voltage ranges */
#define
         ADC VOLTAGE RANGE NOT SELECTED
#define
                                             1 // 0 to +5V range
         ADC_VOLTAGE_RANGE_PLUS10
#define ADC_VOLTAGE_RANGE_PLUSMINUS5
                                            2 // -5V to +5V range
#define ADC VOLTAGE RANGE MINUS10
                                           3 // -10V to 0 range
#define
          ADC VOLTAGE RANGE PLUS25
                                           4 // 0 to +2.5 range
/* DAC voltage ranges mode 5*/
#define DAC_VOLTAGE_RANGE_NOT_SELECTED
                                             0
#define
          DAC VOLTAGE RANGE PLUS10
                                             1
#define DAC VOLTAGE RANGE PLUSMINUS5
                                             2
                                             3
#define
         DAC VOLTAGE RANGE MINUS10
#endif /* DT BINDINGS MAXIM MAX11300 H */
```

Listing 11-8: max11300.c

```
#include "max11300-base.h"
#include <linux/bitops.h>
#include <linux/module.h>
#include <linux/of.h>
#include <linux/spi/spi.h>
/* function to write MAX11300 registers */
static int max11300_reg_write(struct max11300_state *st, u8 reg, u16 val)
{
   struct spi device *spi = container of(st->dev, struct spi device, dev);
   struct spi transfer t[] = {
                  .tx buf = &st->tx cmd,
                  .len = 1,
          }, {
                  .tx buf = &st->tx msg,
                  .1en = 2,
          },
   };
```

```
/* to transmit via SPI the LSB bit of the command byte must be 0 */
   st->tx cmd = (reg << 1);
    * In little endian CPUs the byte stored in the higher address of
    * the "val" variable (MSB of the DAC) is stored in the lower address
    * of the "st->tx msg" variable using cpu to be16()
   st->tx msg = cpu to be16(val);
   return spi_sync_transfer(spi, t, ARRAY_SIZE(t));
}
/* function to read MAX11300 registers in SE mode */
static int max11300_reg_read(struct max11300_state *st, u8 reg, u16 *value)
   struct spi device *spi = container of(st->dev, struct spi device, dev);
   int ret;
   struct spi transfer t[] = {
                  .tx buf = &st->tx cmd,
                  .len = 1,
          }, {
                  .rx buf = &st->rx msg,
                  .len = 2,
          },
   };
   dev_info(st->dev, "read SE channel\n");
   /* to receive via SPI the LSB bit of the command byte must be 1 */
   st->tx \ cmd = ((reg << 1) | 1);
   ret = spi_sync_transfer(spi, t, ARRAY_SIZE(t));
   if (ret < 0)
          return ret;
    * In little endian CPUs the first byte (MSB of the ADC) received via
    * SPI (in BE format) is stored in the lower address of "st->rx msg"
    * variable. This byte is copied to the higher address of the "value"
    * variable using be16 to cpu(). The second byte received via SPI is
    * copied from the higher address of "st->rx_msg" to the lower address
    * of the "value" variable in little endian CPUs.
    * In big endian CPUs the addresses are not swapped.
```

```
*/
   *value = be16 to cpu(st->rx msg);
   return 0;
}
/* function to read MAX11300 registers in differential mode (2's complement) */
static int max11300 reg read differential(struct max11300 state *st, u8 reg,
                                          int *value)
{
   struct spi device *spi = container of(st->dev, struct spi device, dev);
   int ret;
   struct spi_transfer t[] = {
                  .tx buf = &st->tx cmd,
                  .len = 1,
          }, {
                  .rx buf = &st->rx msg,
                  .1en = 2,
          },
   };
   dev info(st->dev, "read differential channel\n");
   /* to receive LSB of command byte has to be 1 */
   st->tx \ cmd = ((reg << 1) | 1);
   ret = spi sync transfer(spi, t, ARRAY SIZE(t));
   if (ret < 0)
          return ret;
    * extend to an int 2's complement value the received SPI value in 2's
    * complement value, which is stored in the "st->rx msg" variable
   *value = sign extend32(be16 to cpu(st->rx msg), 11);
   return 0;
}
/*
 * Initialize the struct max11300 rw ops with read and write
 * callback functions to write/read via SPI from MAX11300 registers
static const struct max11300_rw_ops max11300_rw_ops = {
   .reg write = max11300 reg write,
   .reg_read = max11300_reg_read,
```

```
.reg_read_differential = max11300_reg_read_differential,
};
static int max11300 spi probe(struct spi device *spi)
   const struct spi_device_id *id = spi_get_device_id(spi);
   return max11300 probe(&spi->dev, id->name, &max11300 rw ops);
}
static int max11300 spi remove(struct spi device *spi)
   return max11300_remove(&spi->dev);
}
static const struct spi device id max11300 spi ids[] = {
   \{ .name = "max11300", \},
   {}
};
MODULE DEVICE TABLE(spi, max11300 spi ids);
static const struct of device id max11300 of match[] = {
   { .compatible = "maxim, max11300", },
   {},
};
MODULE DEVICE TABLE(of, max11300 of match);
static struct spi driver max11300 spi driver = {
   .driver = {
           .name = "max11300",
           .of match table = of_match_ptr(max11300_of_match),
   .probe = max11300 spi probe,
   .remove = max11300_spi_remove,
   .id table = max11300 spi ids,
};
module spi driver(max11300 spi driver);
MODULE AUTHOR("Alberto Liberal <aliberal@arroweurope.com>");
MODULE DESCRIPTION("Maxim max11300 multi-port converters");
MODULE LICENSE("GPL v2");
```

Listing 11-9: max11300-base.c

```
#include <linux/bitops.h>
#include <linux/delay.h>
#include <linux/iio/iio.h>
#include <linux/module.h>
#include <linux/mutex.h>
#include <linux/of.h>
#include <linux/property.h>
#include <dt-bindings/iio/maxim,max11300.h>
#include "max11300-base.h"
 * struct gpio chip get callback function.
 * It gets the input value of the GPIO line (0=low, 1=high)
 * accessing to the GPI DATA registers of max11300
static int max11300 gpio get(struct gpio chip *chip, unsigned int offset)
   struct max11300 state *st = gpiochip get data(chip);
   int ret = 0;
   u16 read_val;
   u8 reg;
   int val;
   mutex lock(&st->gpio lock);
   dev_info(st->dev, "The GPIO input is get\n");
   if (st->gpio offset mode[offset] == PORT MODE 3)
   dev info(st->dev, "the gpio %d cannot be configured in input mode\n",
           offset);
   /* for GPIOs from 16 to 19 ports */
   if (st->gpio offset[offset] > 0x0F) {
          reg = GPI DATA 19 TO 16 ADDRESS;
          ret = st->ops->reg read(st, reg, &read val);
          if (ret)
                  goto err unlock;
          val = (int) (read_val);
          val = val << 16;</pre>
          if (val & BIT(st->gpio offset[offset]))
                  val = 1:
          else
```

```
val = 0;
          mutex unlock(&st->gpio lock);
          return val;
   }
   else {
          reg = GPI DATA 15 TO 0 ADDRESS;
           ret = st->ops->reg read(st, reg, &read val);
           if (ret)
                  goto err_unlock;
          val = (int) read val;
          if(val & BIT(st->gpio_offset[offset]))
                  val = 1;
           else
                  val = 0;
          mutex_unlock(&st->gpio_lock);
          return val;
   }
err unlock:
   mutex unlock(&st->gpio lock);
   return ret;
}
 * struct gpio chip set callback function.
* It sets the output value of the GPIO line in
 * GPIO ACTIVE HIGH mode (0=low, 1=high)
 * writing to the GPO_DATA registers of max11300
 */
static void max11300_gpio_set(struct gpio_chip *chip, unsigned int offset,
                             int value)
{
   struct max11300_state *st = gpiochip_get_data(chip);
   u8 reg;
   unsigned int val = 0;
   mutex lock(&st->gpio lock);
   dev info(st->dev, "The GPIO ouput is set\n");
   if (st->gpio offset mode[offset] == PORT MODE 1)
   dev_info(st->dev, "the gpio %d cannot accept this output\n", offset);
   if (value == 1 && (st->gpio_offset[offset] > 0x0F)) {
```

```
dev info(st->dev,
              "The GPIO ouput is set high and port number is %d. Pin is > 0x0F\n",
                   st->gpio offset[offset]);
          val |= BIT(st->gpio offset[offset]);
          val = val >> 16;
          reg = GPO_DATA_19_TO_16_ADDRESS;
          st->ops->reg write(st, reg, val);
   else if (value == 0 && (st->gpio offset[offset] > 0x0F)) {
          dev info(st->dev,
               "The GPIO ouput is set low and port number is %d. Pin is > 0x0F\n",
                   st->gpio offset[offset]);
          val &= ~BIT(st->gpio_offset[offset]);
          val = val >> 16;
          reg = GPO DATA 19 TO 16 ADDRESS;
          st->ops->reg write(st, reg, val);
   else if (value == 1 && (st->gpio_offset[offset] < 0x0F)) {</pre>
          dev info(st->dev,
              "The GPIO ouput is set high and port number is %d. Pin is < 0x0F\n",
                   st->gpio offset[offset]);
          val |= BIT(st->gpio offset[offset]);
          reg = GPO DATA 15 TO 0 ADDRESS;
          st->ops->reg write(st, reg, val);
   else if (value == 0 && (st->gpio offset[offset] < 0x0F)) {
          dev_info(st->dev.
               "The GPIO ouput is set low and port number is %d. Pin is < 0x0F\n",
                   st->gpio offset[offset]);
          val &= ~BIT(st->gpio_offset[offset]);
          reg = GPO DATA 15 TO 0 ADDRESS;
          st->ops->reg_write(st, reg, val);
   }
   else
          dev info(st->dev, "the gpio %d cannot accept this value\n", offset);
   mutex unlock(&st->gpio lock);
}
/*
 * struct gpio chip direction input callback function.
* It configures the GPIO port as an input (GPI)
 * writing to the PORT CFG register of max11300
static int max11300 gpio direction input(struct gpio chip *chip,
                                         unsigned int offset)
   struct max11300_state *st = gpiochip_get_data(chip);
```

```
int ret;
   u8 reg;
   u16 port mode, val;
   mutex_lock(&st->gpio_lock);
   dev info(st->dev, "The GPIO is set as an input\n");
   /* get the port number stored in the GPIO offset */
   if (st->gpio offset mode[offset] == PORT MODE 3)
          dev info(st->dev,
                   "Error. The gpio %d only can be set in output mode\n",
                   offset);
   /* Set the logic 1 input above 2.5V level*/
   val = 0x0fff;
   /* store the GPIO threshold value in the port DAC register */
   reg = PORT DAC DATA BASE ADDRESS + st->gpio offset[offset];
   ret = st->ops->reg write(st, reg, val);
   if (ret)
          goto err unlock;
   /* Configure the port as GPI */
   reg = PORT CFG BASE ADDRESS + st->gpio offset[offset];
   port mode = (1 << 12);
   ret = st->ops->reg write(st, reg, port mode);
   if (ret)
          goto err_unlock;
   mdelay(1);
err unlock:
   mutex_unlock(&st->gpio_lock);
   return ret;
 * struct gpio chip direction output callback function.
* It configures the GPIO port as an output (GPO) writing to
* the PORT CFG register of max11300 and sets output value of the
 * GPIO line in GPIO ACTIVE HIGH mode (0=low, 1=high)
* writing to the GPO data registers of max11300
static int max11300_gpio_direction_output(struct gpio_chip *chip,
                                          unsigned int offset, int value)
```

}

{

```
struct max11300_state *st = gpiochip_get_data(chip);
   int ret;
   u8 reg;
   u16 port mode, val;
   mutex_lock(&st->gpio_lock);
   dev info(st->dev, "The GPIO is set as an output\n");
   if (st->gpio_offset_mode[offset] == PORT_MODE_1)
          dev info(st->dev,
                   "the gpio %d only can be set in input mode\n",
                   offset);
   /* GPIO output high is 3.3V */
   val = 0x0547;
   reg = PORT_DAC_DATA_BASE_ADDRESS + st->gpio_offset[offset];
   ret = st->ops->reg write(st, reg, val);
   if (ret) {
          mutex_unlock(&st->gpio_lock);
          return ret;
   }
   mdelay(1);
   reg = PORT CFG BASE ADDRESS + st->gpio offset[offset];
   port_mode = (3 << 12);</pre>
   ret = st->ops->reg_write(st, reg, port_mode);
   if (ret) {
          mutex_unlock(&st->gpio_lock);
          return ret;
   mdelay(1);
   mutex_unlock(&st->gpio_lock);
   max11300 gpio set(chip, offset, value);
   return ret;
* Initialize the MAX11300 gpio controller (struct gpio chip)
 * and register it to the kernel
static int max11300 gpio init(struct max11300 state *st)
   if (!st->num_gpios)
          return 0;
```

}

```
st->gpiochip.label = "gpio-max11300";
   st->gpiochip.base = -1;
   st->gpiochip.ngpio = st->num gpios;
   st->gpiochip.parent = st->dev;
   st->gpiochip.can sleep = true;
   st->gpiochip.direction input = max11300_gpio_direction_input;
   st->gpiochip.direction output = max11300 gpio direction output;
   st->gpiochip.get = max11300 gpio get;
   st->gpiochip.set = max11300 gpio set;
   st->gpiochip.owner = THIS MODULE;
   mutex_init(&st->gpio_lock);
   /* register a gpio chip */
   return gpiochip add data(&st->gpiochip, st);
}
 * Configure the port configuration registers of each port with the values
* retrieved from the DT properties. These DT values were read and stored in
 * the device global structure using the max11300 alloc ports() function.
 * The ports in GPIO mode will be configured in the gpiochip.direction input
 * and gpiochip.direction output callback functions.
static int max11300 set port modes(struct max11300 state *st)
   const struct max11300 rw ops *ops = st->ops;
   int ret;
   unsigned int i;
   u8 reg;
   u16 adc_range, dac_range, adc_reference, adc_samples, adc_negative_port;
   u16 val, port mode;
   struct iio dev *iio dev = iio priv to dev(st);
   mutex lock(&iio dev->mlock);
   for (i = 0; i < st->num ports; i++) {
          switch (st->port modes[i]) {
          case PORT MODE 5: case PORT MODE 6:
                  reg = PORT CFG BASE ADDRESS + i;
                  adc reference = st->adc reference[i];
                  port mode = (st->port modes[i] << 12);</pre>
                  dac range = (st->dac_range[i] << 8);</pre>
                  dev info(st->dev,
                "the value of adc cfg addr for channel %d in port mode %d is %x\n",
                          i, st->port_modes[i], reg);
```

```
if ((st->port_modes[i]) == PORT_MODE_5)
               val = (port_mode | dac_range);
       else
               val = (port_mode | dac_range | adc_reference);
       dev info(st->dev, "the channel %d is set in port mode %d\n",
                i, st->port modes[i]);
       dev info(st->dev,
     "the value of adc cfg val for channel %d in port mode %d is %x\n",
                i, st->port modes[i], val);
       ret = ops->reg_write(st, reg, val);
       if (ret)
               goto err unlock;
       mdelay(1);
       break;
case PORT_MODE 7:
       reg = PORT CFG BASE ADDRESS + i;
       port mode = (st->port modes[i] << 12);</pre>
       adc_range = (st->adc_range[i] << 8);</pre>
       adc reference = st->adc reference[i];
       adc samples = (st->adc samples[i] << 5);</pre>
       dev info(st->dev,
     "the value of adc cfg addr for channel %d in port mode %d is %x\n",
                i, st->port modes[i], reg);
       val = (port_mode | adc_range | adc_reference | adc_samples);
       dev info(st->dev,
                "the channel %d is set in port mode %d\n",
                i, st->port_modes[i]);
       dev info(st->dev,
      "the value of adc cfg val for channel %d in port mode %d is %x\n",
                i, st->port modes[i], val);
       ret = ops->reg write(st, reg, val);
       if (ret)
               goto err unlock;
       mdelay(1);
       break;
case PORT_MODE_8:
       reg = PORT CFG BASE ADDRESS + i;
       port_mode = (st->port_modes[i] << 12);</pre>
```

```
adc range = (st->adc range[i] << 8);</pre>
                  adc reference = st->adc reference[i];
                  adc samples = (st->adc samples[i] << 5);</pre>
                  adc negative port = st->adc negative port[i];
                  dev info(st->dev,
                "the value of adc cfg addr for channel %d in port mode %d is %x\n",
                           i, st->port modes[i], reg);
                  val = (port_mode | adc_range | adc_reference | adc_samples |
adc negative port);
                  dev_info(st->dev,
                           "the channel %d is set in port mode %d\n",
                           i, st->port modes[i]);
                  dev info(st->dev,
                "the value of adc cfg val for channel %d in port mode %d is %x\n",
                           i, st->port_modes[i], val);
                  ret = ops->reg write(st, reg, val);
                  if (ret)
                          goto err unlock;
                  mdelay(1);
                  break;
           case PORT MODE 9: case PORT MODE 10:
                  reg = PORT CFG BASE ADDRESS + i;
                  port mode = (st->port modes[i] << 12);</pre>
                  adc range = (st->adc range[i] << 8);</pre>
                  adc_reference = st->adc_reference[i];
                  dev_info(st->dev,
                "the value of adc cfg addr for channel %d in port mode %d is %x\n",
                           i, st->port_modes[i], reg);
                  val = (port mode | adc range | adc reference);
                  dev info(st->dev,
                           "the channel %d is set in port mode %d\n",
                           i, st->port modes[i]);
                  dev info(st->dev,
                 "the value of adc cfg val for channel %d in port mode %d is %x\n",
                           i, st->port modes[i], val);
                  ret = ops->reg write(st, reg, val);
                  if (ret)
                          goto err_unlock;
```

```
mdelay(1);
                  break;
          case PORT MODE 0:
                  dev_info(st->dev,
                          "the port %d is set in default port mode_0\n", i);
                  break:
          case PORT MODE 1:
                  dev info(st->dev, "the port %d is set in port mode 1\n", i);
                  break;
          case PORT MODE 3:
                  dev info(st->dev, "the port %d is set in port mode 3\n", i);
                  break;
          default:
                  dev_info(st->dev, "bad port mode is selected\n");
                  return -EINVAL;
          }
   }
err unlock:
   mutex unlock(&iio dev->mlock);
   return ret;
}
/* IIO writing callback function */
static int max11300 write dac(struct iio dev *iio dev,
                             struct iio chan spec const *chan,
                             int val, int val2, long mask)
{
   struct max11300 state *st = iio priv(iio dev);
   u8 reg;
   int ret;
   reg = (PORT DAC DATA BASE ADDRESS + chan->channel);
   dev_info(st->dev, "the DAC data register is %x\n", reg);
   dev_info(st->dev, "the value in the DAC data register is %x\n", val);
   switch (mask) {
   case IIO CHAN INFO RAW:
          if (!chan->output)
                  return -EINVAL;
          mutex lock(&iio dev->mlock);
          ret = st->ops->reg write(st, reg, val);
          mutex unlock(&iio dev->mlock);
          break;
   default:
          return -EINVAL;
```

```
}
   return ret;
}
/* IIO reading callback function */
static int max11300_read_adc(struct iio_dev *iio_dev,
                             struct iio chan spec const *chan,
                             int *val, int *val2, long m)
{
   struct max11300 state *st = iio priv(iio dev);
   u16 read val se;
   int read_val_dif;
   u8 reg;
   int ret;
   reg = PORT_ADC_DATA_BASE_ADDRESS + chan->channel;
   switch (m) {
   case IIO CHAN INFO RAW:
          mutex_lock(&iio_dev->mlock);
           if (!chan->output && ((chan->address == PORT_MODE_7) || (chan->address
== PORT MODE 6))) {
                  ret = st->ops->reg_read(st, reg, &read_val_se);
                  if (ret)
                          goto unlock;
                  *val = (int) read_val_se;
          else if (!chan->output && (chan->address == PORT_MODE_8)) {
                  ret = st->ops->reg_read_differential(st, reg, &read_val_dif);
                  if (ret)
                          goto unlock;
                  *val = read_val_dif;
          else {
                  ret = -EINVAL;
                  goto unlock;
           }
          ret = IIO_VAL_INT;
          break;
   default:
          ret = -EINVAL;
   }
unlock:
   mutex_unlock(&iio_dev->mlock);
```

```
return ret;
}
/* Create kernel hooks to read/write IIO sysfs attributes from user space */
static const struct iio info max11300 info = {
   .read raw = max11300 read adc,
   .write raw = max11300 write dac,
};
/* DAC with positive voltage range */
static void max11300 setup port 5 mode(struct iio dev *iio dev,
                                       struct iio chan spec *chan, bool output,
                                       unsigned int id, unsigned long port_mode)
{
   chan->type = IIO VOLTAGE;
   chan->indexed = 1;
   chan->address = port mode;
   chan->output = output;
   chan->channel = id;
   chan->info mask separate = BIT(IIO CHAN INFO RAW);
   chan->scan type.sign = 'u';
   chan->scan type.realbits = 12;
   chan->scan type.storagebits = 16;
   chan->scan type.endianness = IIO BE;
   chan->extend_name = "mode_5_DAC";
}
/* DAC with positive voltage range */
static void max11300 setup port 6 mode(struct iio dev *iio dev,
                                      struct iio_chan_spec *chan, bool output,
                                      unsigned int id, unsigned long port_mode)
{
   chan->type = IIO VOLTAGE;
   chan->indexed = 1;
   chan->address = port mode;
   chan->output = output;
   chan->channel = id;
   chan->info mask separate = BIT(IIO CHAN INFO RAW);
   chan->scan type.sign = 'u';
   chan->scan type.realbits = 12;
   chan->scan type.storagebits = 16;
   chan->scan type.endianness = IIO BE;
   chan->extend_name = "mode_6_DAC_ADC";
}
/* ADC in SE mode with positive voltage range and straight binary */
static void max11300_setup_port_7_mode(struct iio_dev *iio_dev,
                                      struct iio_chan_spec *chan, bool output,
```

```
unsigned int id, unsigned long port mode)
{
   chan->type = IIO VOLTAGE;
   chan->indexed = 1;
   chan->address = port mode;
   chan->output = output;
   chan->channel = id:
   chan->info mask separate = BIT(IIO CHAN INFO RAW);
   chan->scan type.sign = 'u';
   chan->scan type.realbits = 12;
   chan->scan type.storagebits = 16;
   chan->scan type.endianness = IIO BE;
   chan->extend_name = "mode_7_ADC";
}
/* ADC in differential mode with 2's complement value */
static void max11300_setup_port_8_mode(struct iio_dev *iio_dev,
                                       struct iio chan spec *chan, bool output,
                                       unsigned id, unsigned id2,
                                       unsigned int port mode)
{
   chan->type = IIO VOLTAGE;
   chan->differential = 1.
   chan->address = port mode;
   chan->indexed = 1;
   chan->output = output;
   chan->channel = id;
   chan->channel2 = id2;
   chan->info mask separate = BIT(IIO CHAN INFO RAW);
   chan->scan_type.sign = 's';
   chan->scan_type.realbits = 12;
   chan->scan_type.storagebits = 16;
   chan->scan type.endianness = IIO BE;
   chan->extend name = "mode 8 ADC";
}
 * this function will allocate and configure the iio channels of the iio device.
* It will also read the DT properties of each port (channel) and will store them
* in the device global structure
static int max11300 alloc ports(struct max11300 state *st)
   unsigned int i, curr port = 0, num ports = st->num ports, port mode 6 count =
0, offset = 0;
   st->num_gpios = 0;
   /* recover the iio device from the global structure */
```

```
struct iio dev *iio dev = iio priv to dev(st);
/* pointer to the storage of the specs of all the iio channels */
struct iio chan spec *ports;
/* pointer to struct fwnode handle that allows a device description object */
struct fwnode handle *child;
u32 reg, tmp;
int ret;
 * walks for each MAX11300 child node from the DT, if there is an error
* then walks to the following one (continue)
device for each child node(st->dev, child) {
       ret = fwnode property read u32(child, "reg", &reg);
       if (ret || reg >= ARRAY SIZE(st->port modes))
              continue;
        * store the value of the DT "port,mode" property in the global struct
        * to know the mode of each port in other functions of the driver
        */
       ret = fwnode property read u32(child, "port-mode", &tmp);
       if (!ret)
              st->port modes[reg] = tmp;
       /* all the DT nodes should include the port-mode property */
       else {
              dev info(st->dev, "port mode is not found\n");
              continue;
       }
        * you will store other DT properties depending
        * of the used "port, mode" property
        */
       switch (st->port modes[reg]) {
       case PORT MODE 7:
              ret = fwnode property read u32(child, "adc-range", &tmp);
              if (!ret)
                      st->adc range[reg] = tmp;
              else
                      dev info(st->dev, "Get default ADC range\n");
              ret = fwnode_property_read_u32(child, "AVR", &tmp);
              if (!ret)
```

```
st->adc reference[reg] = tmp;
       else
              dev info(st->dev,
                       "Get default internal ADC reference\n");
       ret = fwnode_property_read_u32(child, "adc-samples", &tmp);
       if (!ret)
              st->adc samples[reg] = tmp;
       else
              dev info(st->dev, "Get default internal ADC sampling\n");
       dev info(st->dev, "the channel %d is set in port mode %d\n",
               reg, st->port_modes[reg]);
       break:
case PORT MODE 8:
       ret = fwnode_property_read_u32(child, "adc-range", &tmp);
       if (!ret)
              st->adc_range[reg] = tmp;
       else
              dev info(st->dev, "Get default ADC range\n");
       ret = fwnode property read u32(child, "AVR", &tmp);
       if (!ret)
              st->adc reference[reg] = tmp;
       else
              dev_info(st->dev,
                       "Get default internal ADC reference\n");
       ret = fwnode property read u32(child, "adc-samples", &tmp);
       if (!ret)
              st->adc_samples[reg] = tmp;
       else
              dev info(st->dev, "Get default internal ADC sampling\n");
       ret = fwnode property read u32(child, "negative-input", &tmp);
       if (!ret)
              st->adc_negative_port[reg] = tmp;
       else {
              dev info(st->dev,
                       "Bad value for negative ADC channel\n");
              return -EINVAL;
       }
       dev info(st->dev, "the channel %d is set in port mode %d\n",
               reg, st->port modes[reg]);
       break;
case PORT MODE 9: case PORT MODE 10:
       ret = fwnode_property_read_u32(child, "adc-range", &tmp);
```

```
if (!ret)
              st->adc_range[reg] = tmp;
       else
              dev info(st->dev, "Get default ADC range\n");
       ret = fwnode property read u32(child, "AVR", &tmp);
              st->adc reference[reg] = tmp;
       else
              dev info(st->dev,
                       "Get default internal ADC reference\n");
       dev info(st->dev, "the channel %d is set in port mode %d\n",
               reg, st->port_modes[reg]);
       break:
case PORT MODE 5: case PORT MODE 6:
       ret = fwnode property read u32(child, "dac-range", &tmp);
       if (!ret)
       st->dac_range[reg] = tmp;
       else
              dev info(st->dev, "Get default DAC range\n");
        * A port in mode 6 will generate two IIO sysfs entries,
        * one for writing the DAC port, and another for reading
        * the ADC port
        */
       if ((st->port modes[reg]) == PORT MODE 6) {
              ret = fwnode property read u32(child, "AVR", &tmp);
              if (!ret)
                      st->adc_reference[reg] = tmp;
              else
                      dev_info(st->dev,
                              "Get default internal ADC reference\n");
              /*
               * get the number of ports set in mode_6 to allocate
               * space for the related iio channels
               */
              port mode 6 count++;
              dev_info(st->dev, "there are %d channels in mode_6\n",
                       port mode 6 count);
       }
       dev info(st->dev, "the channel %d is set in port mode %d\n",
               reg, st->port modes[reg]);
       break:
/* The port is configured as a GPI in the DT */
case PORT_MODE_1:
```

```
dev info(st->dev, "the channel %d is set in port mode %d\n",
               reg, st->port modes[reg]);
        * link the gpio offset with the port number,
        * starting with offset = 0
       st->gpio offset[offset] = reg;
       /*
        * store the port mode for each gpio offset,
        * starting with offset = 0
        */
       st->gpio_offset_mode[offset] = PORT_MODE_1;
       dev info(st->dev,
           "the gpio number %d is using the gpio offset number %d\n",
               st->gpio offset[offset], offset);
        * increment the gpio offset and number
        * of configured ports as GPIOs
       */
       offset++;
       st->num_gpios++;
       break;
/* The port is configured as a GPO in the DT */
case PORT MODE 3:
       dev info(st->dev, "the channel %d is set in port mode %d\n",
               reg, st->port_modes[reg]);
        * link the gpio offset with the port number,
        * starting with offset = 0
       st->gpio offset[offset] = reg;
        * store the port mode for each gpio offset,
        * starting with offset = 0
       */
       st->gpio offset mode[offset] = PORT MODE 3;
       dev info(st->dev,
            "the gpio number %d is using the gpio offset number %d\n",
               st->gpio_offset[offset], offset);
```

```
* increment the gpio offset and
               * number of configured ports as GPIOs
               */
              offset++;
              st->num_gpios++;
              break:
       case PORT MODE 0:
              dev info(st->dev,
                       "the channel %d is set in default port mode 0\n", reg);
              break;
       default:
              dev_info(st->dev, "bad port mode for channel %d\n", reg);
       }
}
/*
 * Allocate space for the storage of all the IIO channels specs.
* Returns a pointer to this storage
 */
ports = devm kcalloc(st->dev, num ports + port mode 6 count,
                     sizeof(*ports), GFP KERNEL);
if (!ports)
       return - ENOMEM;
 * i is the number of the channel, &ports[curr port] is a pointer variable that
* will store the "iio_chan_spec structure" address of each port
for (i = 0; i < num ports; i++) {
       switch (st->port_modes[i]) {
       case PORT MODE 5:
              dev_info(st->dev, "the port %d is configured as MODE 5\n", i);
              max11300_setup_port_5_mode(iio_dev, &ports[curr_port],
                                         true, i, PORT MODE 5); // true = out
              curr port++;
              break;
       case PORT MODE 6:
              dev_info(st->dev, "the port %d is configured as MODE 6\n", i);
              max11300 setup port 6 mode(iio dev, &ports[curr port],
                                         true, i, PORT MODE 6); // true = out
              curr port++;
              max11300 setup port 6 mode(iio dev, &ports[curr port],
                                         false, i, PORT MODE 6); // false = in
              curr_port++;
              break;
       case PORT_MODE_7:
```

```
dev_info(st->dev, "the port %d is configured as MODE 7\n", i);
                  max11300_setup_port_7_mode(iio_dev, &ports[curr_port],
                                            false, i, PORT MODE 7); // false = in
                  curr port++;
                  break;
          case PORT_MODE_8:
                  dev info(st->dev, "the port %d is configured as MODE 8\n", i);
                  max11300_setup_port_8_mode(iio_dev, &ports[curr_port],
                                            false, i, st->adc negative port[i],
                                            PORT MODE 8); // false = in
                  curr port++;
                  break;
          case PORT_MODE_0:
                  dev_info(st->dev,
                          "the channel is set in default port mode 0\n");
                  break;
          case PORT MODE 1:
                  dev_info(st->dev, "the channel %d is set in port mode_1\n", i);
                  break;
          case PORT MODE 3:
                  dev info(st->dev, "the channel %d is set in port mode 3\n", i);
                  break;
          default:
                  dev info(st->dev, "bad port mode for channel %d\n", i);
          }
   }
   iio dev->num channels = curr port;
   iio dev->channels = ports;
   return 0;
}
int max11300_probe(struct device *dev, const char *name,
            const struct max11300 rw ops *ops)
{
   /* create an iio device */
   struct iio dev *iio dev;
   /* create the global structure that will store the info of the device */
   struct max11300_state *st;
   u16 write val;
   u16 read val;
   u8 reg;
   int ret;
```

```
write val = 0;
dev info(dev, "max11300 probe() function is called\n");
/* allocates memory fot the IIO device */
iio dev = devm iio device alloc(dev, sizeof(*st));
if (!iio dev)
       return - ENOMEM:
/* link the global data structure with the iio device */
st = iio priv(iio dev);
/* store in the global structure the spi device */
st->dev = dev;
 * store in the global structure the pointer to the
* MAX11300 SPI read and write functions
st->ops = ops;
/* setup the number of ports of the MAX11300 device */
st->num ports = 20;
/* link the spi device with the iio device */
dev set drvdata(dev, iio dev);
iio dev->dev.parent = dev;
iio_dev->name = name;
* store the address of the iio info structure,
* which contains pointer variables
* to IIO write/read callbacks
*/
iio dev->info = &max11300 info;
iio dev->modes = INDIO DIRECT MODE;
/* reset the MAX11300 device */
reg = DCR ADDRESS;
dev_info(st->dev, "the value of DCR_ADDRESS is %x\n", reg);
write_val = RESET;
dev info(st->dev, "the value of reset is %x\n", write val);
ret = ops->reg write(st, reg, write val);
if (ret != 0)
       goto error;
```

```
/* return MAX11300 Device ID */
   reg = 0x00;
   ret = ops->reg read(st, reg, &read val);
   if (ret != 0)
          goto error;
   dev_info(st->dev, "the value of device ID is %x\n", read_val);
   /* Configure DACREF and ADCCTL */
   reg = DCR ADDRESS;
   write val = (DCR ADCCTL CONTINUOUS SWEEP | DCR DACREF);
   dev info(st->dev, "the value of DACREF CONT SWEEP is %x\n", write val);
   ret = ops->reg write(st, reg, write val);
   udelay(200);
   if (ret)
          goto error;
   dev info(dev, "the setup of the device is done\n");
   /* Configure the IIO channels of the device */
   ret = max11300 alloc ports(st);
   if (ret)
          goto error;
   ret = max11300 set port modes(st);
   if (ret)
          goto error reset device;
   ret = iio device register(iio dev);
   if (ret)
          goto error;
   ret = max11300_gpio_init(st);
   if (ret)
          goto error dev unregister;
   return 0;
error dev unregister:
   iio_device_unregister(iio_dev);
error reset device:
   /* reset the device */
   reg = DCR ADDRESS;
   write val = RESET;
   ret = ops->reg_write(st, reg, write_val);
   if (ret != 0)
          return ret;
```

error:

```
return ret;
}
EXPORT_SYMBOL_GPL(max11300_probe);
int max11300_remove(struct device *dev)
{
    struct iio_dev *iio_dev = dev_get_drvdata(dev);
    iio_device_unregister(iio_dev);
    return 0;
}
EXPORT_SYMBOL_GPL(max11300_remove);

MODULE_AUTHOR("Alberto Liberal <aliberal@arroweurope.com>");
MODULE_DESCRIPTION("Maxim max11300 multi-port converters");
MODULE_LICENSE("GPL v2");
```

LAB 11.5 driver demonstration

libgpiod provides a C library and simple tools for interacting with the linux GPIO character devices. The GPIO sysfs interface is deprecated from Linux 4.8 for these libgpiod tools. The C library encapsulates the ioctl() calls and data structures using a straightforward API. For more information see: https://git.kernel.org/pub/scm/libs/libgpiod/libgpiod.git/about/

You will use the 1.4.3 version of the library and tools during this demonstration section:

libgpiod	libgpiod	1.4.3	LGPLv2.1+	C library and tools for interacting with the linux GPIO character device
libgpiod	libgpiod-tools	1.4.3	LGPLv2.1+	C library and tools for interacting with the linux GPIO character device

The tools provided with libgpiod allow accessing the GPIO driver from the command line. There are six commands in libgpiod tools:

- **gpiodetect**: list all gpiochips present on the system, their names, labels, and number of GPIO lines. In the lab, the MAX11300 gpio chip will appear with the name of gpiochip10.
- **gpioinfo:** list all lines of specified gpiochips, their names, consumers, direction, active state, and additional flags.

- **gpioget:** read values of specified GPIO lines. This tool will call to the gpiochip.direction_input and gpiochip.get callback functions declared in the struct gpio_chip of the driver.
- **gpioset:** set values of specified GPIO lines, potentially keep the lines exported and wait until timeout, user input or signal. This tool will call to the gpiochip.direction_output callback function declared in the struct gpio_chip of the driver.
- **gpiofind:** find the gpiochip name and line offset given the line name.
- **gpiomon:** wait for events on GPIO lines, specify which events to watch, how many events to process before exiting or if the events should be reported to the console.

Download the linux_5.4_max11300_driver.zip file from the github of the book and unzip it in the STM32MP15-Ecosystem-v2.0.0 folder of the Linux host:

```
PC:~$ cd ~/STM32MP15-Ecosystem-v2.0.0/
```

Compile and deploy the drivers to the STM32MP157C-DK2 Discovery kit:

```
~/STM32MP15-Ecosystem-v2.0.0/linux_5.4_max11300_driver$ make
~/STM32MP15-Ecosystem-v2.0.0/linux_5.4_max11300_driver$ make deploy
```

Follow the next instructions to test the driver:

```
/* load the module */
root@stm32mp1:~# insmod max11300-base.ko
   49.999595] max11300 base: loading out-of-tree module taints kernel.
root@stm32mp1:~# insmod max11300.ko
    53.414477] max11300 spi0.0: max11300 probe() function is called
   53.419065] max11300 spi0.0: the value of DCR_ADDRESS is 10
   53.443251] max11300 spi0.0: the value of reset is 8000
   53.447408] max11300 spi0.0: read SE channel
    53.463302] max11300 spi0.0: the value of device ID is 424
    53.467382] max11300 spi0.0: the value of DACREF CONT SWEEP is 43
   53.483879] max11300 spi0.0: the setup of the device is done
    53.488095] max11300 spi0.0: the channel 0 is set in port mode 7
   53.513303] max11300 spi0.0: the channel 1 is set in port mode 7
    53.517860] max11300 spi0.0: the channel 2 is set in port mode 5
    53.543299] max11300 spi0.0: the channel 3 is set in port mode 5
   53.547856] max11300 spi0.0: the channel 4 is set in port mode 8
   53.558583] max11300 spi0.0: the channel 5 is set in port mode 9
    53.573303] max11300 spi0.0: there are 1 channels in mode 6
   53.577414] max11300 spi0.0: the channel 6 is set in port mode 6
   53.603435] max11300 spi0.0: the channel 7 is set in port mode 1
    53.607979] max11300 spi0.0: the gpio number 7 is using the gpio offset number
```

```
53.633269] max11300 spi0.0: the channel 8 is set in port mode 3
    53.637995] max11300 spi0.0: the gpio number 8 is using the gpio offset number
    53.653305] max11300 spi0.0: the channel 9 is set in default port mode_0
    53.658550] max11300 spi0.0: the channel 10 is set in default port mode_0
    53.683352] max11300 spi0.0: the channel 11 is set in default port mode_0
    53.703354] max11300 spi0.0: the channel 12 is set in default port mode_0
    53.708682] max11300 spi0.0: the channel 13 is set in default port mode 0
    53.733264] max11300 spi0.0: the channel 14 is set in default port mode_0
    53.738596] max11300 spi0.0: the channel 15 is set in default port mode_0
    53.753306] max11300 spi0.0: the channel 16 is set in default port mode 0
    53.758638] max11300 spi0.0: the channel 17 is set in default port mode 0
    53.783352] max11300 spi0.0: the channel 18 is set in port mode 1
    53.787984] max11300 spi0.0: the gpio number 18 is using the gpio offset number
    53.813258] max11300 spi0.0: the channel 19 is set in port mode 3
[
    53.817891] max11300 spi0.0: the gpio number 19 is using the gpio offset number
[
    53.843381] max11300 spi0.0: the port 0 is configured as MODE 7
    53.847839] max11300 spi0.0: the port 1 is configured as MODE 7
    53.873361] max11300 spi0.0: the port 2 is configured as MODE 5
    53.877825] max11300 spi0.0: the port 3 is configured as MODE 5
    53.893290] max11300 spi0.0: the port 4 is configured as MODE 8
    53.897752] max11300 spi0.0: bad port mode for channel 5
    53.903040] max11300 spi0.0: the port 6 is configured as MODE 6
    53.933290] max11300 spi0.0: the channel 7 is set in port mode_1
    53.937836] max11300 spi0.0: the channel 8 is set in port mode 3
    53.963201] max11300 spi0.0: the channel is set in default port mode 0
    53.968395] max11300 spi0.0: the channel is set in default port mode_0
    53.993241] max11300 spi0.0: the channel is set in default port mode_0
    53.998314] max11300 spi0.0: the channel is set in default port mode_0
    54.013253] max11300 spi0.0: the channel is set in default port mode_0
    54.018322] max11300 spi0.0: the channel is set in default port mode 0
    54.041409] max11300 spi0.0: the channel is set in default port mode_0
    54.063302] max11300 spi0.0: the channel is set in default port mode_0
    54.068369] max11300 spi0.0: the channel is set in default port mode 0
    54.083404] max11300 spi0.0: the channel 18 is set in port mode_1
    54.088038] max11300 spi0.0: the channel 19 is set in port mode_3
    54.113297] max11300 spi0.0: the value of adc cfg addr for channel 0 in port
mode 7 is 20
    54.120010] max11300 spi0.0: the channel 0 is set in port mode 7
    54.143298] max11300 spi0.0: the value of adc cfg val for channel 0 in port
mode 7 is 7100
    54.164512] max11300 spi0.0: the value of adc cfg addr for channel 1 in port
mode 7 is 21
    54.171232] max11300 spi0.0: the channel 1 is set in port mode 7
    54.193247] max11300 spi0.0: the value of adc cfg val for channel 1 in port
mode 7 is 71e0
```

```
54.214426] max11300 spi0.0: the value of adc cfg addr for channel 2 in port
mode 5 is 22
   54.221142 max11300 spi0.0: the channel 2 is set in port mode 5
    54.243258] max11300 spi0.0: the value of adc cfg val for channel 2 in port
mode 5 is 5100
    54.264524] max11300 spi0.0: the value of adc cfg addr for channel 3 in port
mode 5 is 23
    54.271238] max11300 spi0.0: the channel 3 is set in port mode 5
    54.293253] max11300 spi0.0: the value of adc cfg val for channel 3 in port
mode 5 is 5100
    54.314402] max11300 spi0.0: the value of adc cfg addr for channel 4 in port
mode 8 is 24
    54.321121] max11300 spi0.0: the channel 4 is set in port mode 8
    54.343410] max11300 spi0.0: the value of adc cfg val for channel 4 in port
    54.364616] max11300 spi0.0: the value of adc cfg addr for channel 5 in port
mode 9 is 25
    54.371335] max11300 spi0.0: the channel 5 is set in port mode 9
    54.393306] max11300 spi0.0: the value of adc cfg val for channel 5 in port
mode 9 is 9100
    54.414374] max11300 spi0.0: the value of adc cfg addr for channel 6 in port
mode 6 is 26
    54.421092] max11300 spi0.0: the channel 6 is set in port mode 6
    54.443469] max11300 spi0.0: the value of adc cfg val for channel 6 in port
mode 6 is 6100
    54.464637] max11300 spi0.0: the port 7 is set in port mode 1
    54.468921] max11300 spi0.0: the port 8 is set in port mode 3
    54.493295] max11300 spi0.0: the port 9 is set in default port mode 0
    54.498273] max11300 spi0.0: the port 10 is set in default port mode 0
    54.523486] max11300 spi0.0: the port 11 is set in default port mode_0
    54.528547] max11300 spi0.0: the port 12 is set in default port mode_0
    54.543431] max11300 spi0.0: the port 13 is set in default port mode_0
    54.548497] max11300 spi0.0: the port 14 is set in default port mode 0
    54.573339] max11300 spi0.0: the port 15 is set in default port mode_0
    54.578402] max11300 spi0.0: the port 16 is set in default port mode 0
    54.603446] max11300 spi0.0: the port 17 is set in default port mode 0
    54.608512] max11300 spi0.0: the port 18 is set in port mode 1
    54.633300] max11300 spi0.0: the port 19 is set in port mode 3
```

root@stm32mp1:~# cd /sys/bus/iio/devices/iio:device0/

root@stm32mp1:/sys/devices/platform/soc/44005000.spi/spi_master/spi0/spi0.0/iio:de vice0#

/* check the IIO sysfs entries under the IIO MAX11300 device */
root@stm32mp1:/sys/devices/platform/soc/44005000.spi/spi_master/spi0/spi0.0/iio:de
vice0# ls

```
dev
                                       in voltage1 mode 7 ADC raw
in voltage6 mode 6 DAC ADC raw
                                       of node
out_voltage3_mode_5_DAC_raw
                                       power
                                               uevent
in voltage0 mode 7 ADC raw
                                       in voltage4-voltage5 mode 8 ADC raw name
out voltage2 mode 5 DAC raw
                                       out voltage6 mode 6 DAC ADC raw subsystem
Connect port2 (DAC) to port0 (ADC)
/* write to the port2 (DAC) */
root@stm32mp1:/sys/devices/platform/soc/44005000.spi/spi_master/spi0/spi0.0/iio:de
vice0# echo 1000 > out_voltage2_mode 5 DAC raw
[ 813.600342] max11300 spi0.0: the DAC data register is 62
[ 813.604560] max11300 spi0.0: the value in the DAC data register is 3e8
/* read the port0 (ADC) */
root@stm32mp1:/sys/devices/platform/soc/44005000.spi/spi_master/spi0/spi0.0/iio:de
vice0# cat in voltage0 mode 7 ADC raw
[ 835.930969] max11300 spi0.0: read SE channel
1001
connect port2 (DAC) to port4 (ADC differential positive) & port3 (DAC) to port 5
(ADC differential negative)
/* set 5V output in the port2 (DAC) */
root@stm32mp1:/sys/devices/platform/soc/44005000.spi/spi master/spi0/spi0.0/iio:de
vice0# echo 2047 > out voltage2 mode 5 DAC raw
  282.286001] max11300 spi0.0: the DAC data register is 62
  282.289852] max11300 spi0.0: the value in the DAC data register is 7ff
/* set 2.5V in the port3 (DAC) */
root@stm32mp1:/sys/devices/platform/soc/44005000.spi/spi master/spi0/spi0.0/iio:de
vice0# echo 1024 > out_voltage3_mode_5_DAC_raw
  314.356308] max11300 spi0.0: the DAC data register is 63
[ 314.361039] max11300 spi0.0: the value in the DAC data register is 400
/* read differential input (port4 port5): 2.5V */
root@stm32mp1:/sys/devices/platform/soc/44005000.spi/spi_master/spi0/spi0.0/iio:de
vice0# cat in voltage4-voltage5 mode 8 ADC raw
[ 335.131855] max11300 spi0.0: read differential channel
513
/* set DAC and read ADC in port mode 6 */
root@stm32mp1:/sys/devices/platform/soc/44005000.spi/spi_master/spi0/spi0.0/iio:de
vice0# echo 1024 > out voltage6 mode 6 DAC ADC raw
[11090.790511] max11300 spi0.0: the DAC data register is 66
[11090.794478] max11300 spi0.0: the value in the DAC data register is 400
root@stm32mp1:/sys/devices/platform/soc/44005000.spi/spi master/spi0/spi0.0/iio:de
vice0# cat in_voltage6_mode_6_DAC_ADC_raw
```

```
[11095.169444] max11300 spi0.0: read SE channel
1022
/* check the gpio chip controllers */
root@stm32mp1:~# ls -l /dev/gpiochip*
crw----- 1 root root 254, 0 Feb 7 15:50 /dev/gpiochip0
crw----- 1 root root 254, 1 Feb 7 15:50 /dev/gpiochip1
crw----- 1 root root 254, 10 Feb 7 16:07 /dev/gpiochip10
crw----- 1 root root 254, 2 Feb 7 15:50 /dev/gpiochip2
crw----- 1 root root 254, 3 Feb 7 15:50 /dev/gpiochip3
crw----- 1 root root 254, 4 Feb 7 15:50 /dev/gpiochip4
crw----- 1 root root 254, 5 Feb 7 15:50 /dev/gpiochip5
crw----- 1 root root 254, 6 Feb 7 15:50 /dev/gpiochip6
crw----- 1 root root 254, 7 Feb 7 15:50 /dev/gpiochip7
crw----- 1 root root 254, 8 Feb 7 15:50 /dev/gpiochip8
crw----- 1 root root 254, 9 Feb 7 15:50 /dev/gpiochip9
root@stm32mp1:~#
/* active-high means that 0 value sets output line low */
/* Print information of all the lines of the gpiochip10 */
root@stm32mp1:~# gpioinfo gpiochip10
gpiochip10 - 4 lines:
       line 0:
                                   unused input active-high
                      unnamed
       line 1:
                      unnamed
                                   unused input active-high
                 unnamed
unnamed
       line 2:
                                   unused input active-high
                                  unused input active-high
       line 3:
connect port19 (GPO) to port 18 (GPI)
/* Set port19 (GPO) to high */
root@stm32mp1:~# gpioset gpiochip10 3=1
   62.435888] max11300 spi0.0: The GPIO is set as an output
   62.450060] max11300 spi0.0: The GPIO ouput is set
   62.453531] max11300 spi0.0: The GPIO ouput is set high and port number is 19.
Pin is > 0x0F
/* Read port 18 (GPI) */
root@stm32mp1:~# gpioget gpiochip10 2
   84.553859] max11300 spi0.0: The GPIO is set as an input
   84.559241] max11300 spi0.0: The GPIO input is get
   84.562564] max11300 spi0.0: read SE channel
1
/* Set port19 (GPO) to low */
root@stm32mp1:~# gpioset gpiochip10 3=0
[ 237.579351] max11300 spi0.0: The GPIO is set as an output
[ 237.586048] max11300 spi0.0: The GPIO ouput is set
```

```
[ 237.589376] max11300 spi0.0: The GPIO ouput is set low and port number is 19.
Pin is > 0x0F
/* Read port 18 (GPI) */
root@stm32mp1:~# gpioget gpiochip10 2
[ 242.972241] max11300 spi0.0: The GPIO is set as an input
[ 242.977719] max11300 spi0.0: The GPIO input is get
[ 242.981045] max11300 spi0.0: read SE channel
connect port19 (GPO) to port 7 (GPI)
/* Set port19 (GPO) to high */
root@stm32mp1:~# gpioset gpiochip10 3=1
  353.390612] max11300 spi0.0: The GPIO is set as an output
[ 353.397354] max11300 spi0.0: The GPIO ouput is set
[ 353.400681] max11300 spi0.0: The GPIO ouput is set high and port_number is 19.
Pin is > 0x0F
/* Read port7 (GPI) */
root@stm32mp1:~# gpioget gpiochip10 0
[ 360.911737] max11300 spi0.0: The GPIO is set as an input
[ 360.917224] max11300 spi0.0: The GPIO input is get
[ 360.920549] max11300 spi0.0: read SE channel
/* Set port19 (GPO) to low */
root@stm32mp1:~# gpioset gpiochip10 3=0
[ 395.411163] max11300 spi0.0: The GPIO is set as an output
[ 395.417793] max11300 spi0.0: The GPIO ouput is set
[ 395.423392] max11300 spi0.0: The GPIO ouput is set low and port number is 19.
Pin is > 0 \times 0 = 0
/* Read port7 (GPI) */
root@stm32mp1:~# gpioget gpiochip10 0
[ 398.715539] max11300 spi0.0: The GPIO is set as an input
  398.720941] max11300 spi0.0: The GPIO input is get
[ 398.724369] max11300 spi0.0: read SE channel
connect port8 (GPO) to port 7 (GPI)
/* Set port8 (GPO) to high */
root@stm32mp1:~# gpioset gpiochip10 1=1
  513.866874] max11300 spi0.0: The GPIO is set as an output
[ 513.877063] max11300 spi0.0: The GPIO ouput is set
[ 513.880397] max11300 spi0.0: The GPIO ouput is set high and port number is 8.
Pin is < 0x0F
```

```
/* Read port7 (GPI) */
root@stm32mp1:~# gpioget gpiochip10 0
[ 524.255066] max11300 spi0.0: The GPIO is set as an input
[ 524.260480] max11300 spi0.0: The GPIO input is get
[ 524.264006] max11300 spi0.0: read SE channel
/* Set port8 (GPO) to low */
root@stm32mp1:~# gpioset gpiochip10 1=0
[ 549.280354] max11300 spi0.0: The GPIO is set as an output
[ 549.287047] max11300 spi0.0: The GPIO ouput is set
[ 549.290375] max11300 spi0.0: The GPIO ouput is set low and port number is 8.
Pin is < 0x0F
/* Read port7 (GPI) */
root@stm32mp1:~# gpioget gpiochip10 0
[ 553.596437] max11300 spi0.0: The GPIO is set as an input
[ 553.601859] max11300 spi0.0: The GPIO input is get
[ 553.606632] max11300 spi0.0: read SE channel
/* check the new direction of the gpio lines */
root@stm32mp1:~# gpioinfo gpiochip10
gpiochip10 - 4 lines:
        line 0:
                                     unused input active-high
                        unnamed
        line 1: unnamed unused output active-high line 2: unnamed unused input active-high line 3: unnamed unused output active-high
/* remove the module */
root@stm32mp1:~# rmmod max11300.ko
root@stm32mp1:~# rmmod max11300-base.ko
```

In this section, you have seen how to control GPIOs using the tools provided with libgpiod. In the next section, you will see how to write applications to control GPIOs by using two different methods. The first method will control the GPIO using a device node and the second method will control the GPIO using the functions of the libgpiod library.

GPIO control through character device

Chapter 5 of this book explains how to write GPIO user drivers that control GPIOs using the new GPIO descriptor interface included in the GPIOlib framework. This descriptor interface identifies each GPIO through a struct gpio_desc structure.

GPIOlib is a framework that provides an internal Linux kernel API for managing and configuring GPIOs acting as a bridge between the Linux GPIO controller drivers and the Linux GPIO user drivers. Writing Linux drivers for devices using GPIOs is a good practice but you can prefer to control the GPIOs from user space. GPIOlib also provides access to APIs in the user space that will control the GPIOs through ioctl calls on char device files /dev/gpiochipX, where X is the number of the GPIO bank.

Until the launching of Linux kernel 4.8, the GPIOs were accessed via sysfs (/sys/class/gpio) method, but after this release, there are new interfaces, based on a char device. The syfs interface is deprecated, and is highly recommend to use the new interface. These are some of the advanteages of using the new character device user API:

- One device file for each gpiochip: /dev/gpiochip0, /dev/gpiochip1, /dev/gpiochipX...
- Similar to other kernel interfaces: ioctl() + poll() + read() + close()
- Possible to set/read multiple GPIOs at once.
- Possible to find GPIO lines by name.

You can find the userspace API for the GPIO character devices in the linux/gpio.h file. In the STM32MP1 SDK you can find this file in the following path:

```
~/STM32MP15-Ecosystem-v2.0.0/Developer-Package/SDK/syroots/cortexa7t2hf-neon-vfpv4-ostl-linux-gnueabi/usr/include/linux/gpio.h
```

The following application toggles ten times the GPIO PA14 connected to the green LED of the STM32MP1 eval board.

Listing 11-10: gpio_device_app.c

```
#include <errno.h>
#include <stdio.h>
#include <stdlib.h>
#include <unistd.h>
#include <fcntl.h>
#include <string.h>
#include linux/gpio.h>
```

```
#include <sys/ioctl.h>
#define DEVICE GPIO "/dev/gpiochip0"
int main(int argc, char *argv[])
{
    int fd;
    int ret;
    int flash = 10;
    struct gpiohandle data data;
    struct gpiohandle request req;
    /* open gpio device */
    fd = open(DEVICE GPIO, 0);
    if (fd < 0) {
        fprintf(stderr, "Failed to open %s\n", DEVICE GPIO);
        return -1;
    }
    /* request GPIO line PA14 as an output (green LED) */
    req.lineoffsets[0] = 14;
    rea.lines = 1:
    req.flags = GPIOHANDLE REQUEST OUTPUT;
    strcpy(req.consumer_label, "led_gpio_a_14");
    ret = ioctl(fd, GPIO GET LINEHANDLE IOCTL, &req);
    if (ret < 0) {
        printf("ERROR get line handle IOCTL (%d)\n", ret);
        if (close(fd) == -1)
          perror("Failed to close GPIO char device");
        return ret;
    }
    /* start the led_green with off state */
    data.values[0] = 1;
    for (int i=0; i < flash; i++) {
        /* toggle LED */
        data.values[0] = !data.values[0];
        ret = ioctl(req.fd, GPIOHANDLE SET LINE VALUES IOCTL, &data);
        if (ret < 0) {
          fprintf(stderr, "Failed to issue %s (%d)\n",
"GPIOHANDLE SET LINE VALUES IOCTL", ret);
          if (close(req.fd) == -1)
                  perror("Failed to close GPIO line");
          if (close(fd) == -1)
                  perror("Failed to close GPIO char device");
```

Compiling with Eclipse

Now, you will see how to configure Eclipse for building the previous application. Go to https://www.eclipse.org/downloads/eclipse-packages/ and select the latest version of Eclipse IDE for C/C++ Developers. At the moment of writing, the current version is the " Eclipse IDE 2020-06 " release. Installing Eclipse is simple. Just download a proper version from the web page and untar it. The system must have the proper version of Java SDK installed. Ubuntu allows multiple packages providing a Java Virtual Machine to be installed. For Neon is 8.

```
PC:~$ sudo apt-get install openjdk-8-jdk
```

Download the "Eclipse IDE for C/C++ Developers" tarball for Linux 64-bit and copy it into the /opt host folder.



```
PC:~$ sudo tar xf eclipse-cpp-2020-06-R-linux-gtk-x86_64.tar.gz -C /opt/
PC:~$ sudo chown -R root:root /opt/eclipse/
PC:~$ cd /opt/eclipse/
```

Launch Eclipse:

PC:/opt/eclipse\$./eclipse &

Configuring Eclipse for cross-development

In this section, you will learn how to configure the Eclipse tool options to successfully cross-compile an application using the toolchain of the Yocto SDK. You will create a single file project in Eclipse by adding the gpio_device_app.c source file.


Create a new C project

You will first create a C project with support for a cross-compiled toolchain, then create a new file and insert into it the code of the <code>gpio_device_app.c</code> application. You will explore and change a number of compiler and linker settings in order to get the toolchain to work correctly.


Launch Eclipse:

PC:/opt/eclipse\$./eclipse &


Select a workspace directory:

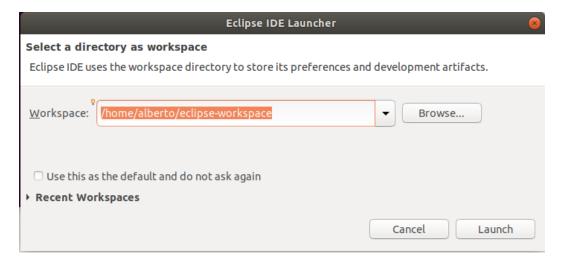


Using the Eclipse menus select File->New->Project, then select C project and click Next>

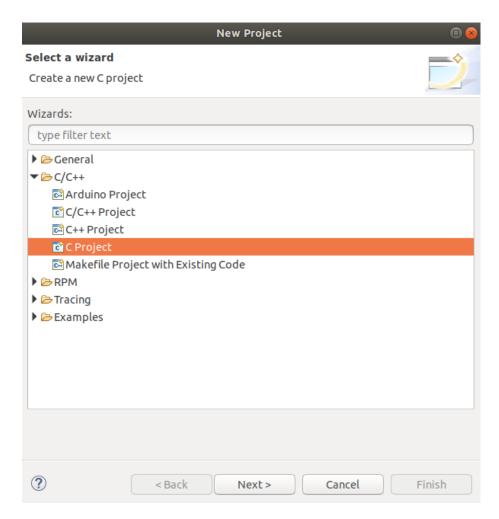


Give the project a name: **gpio_device_app**, Select Project type **Executable->Empty Project** and select the **Toolchains: Cross GCC**, click **Next>**.

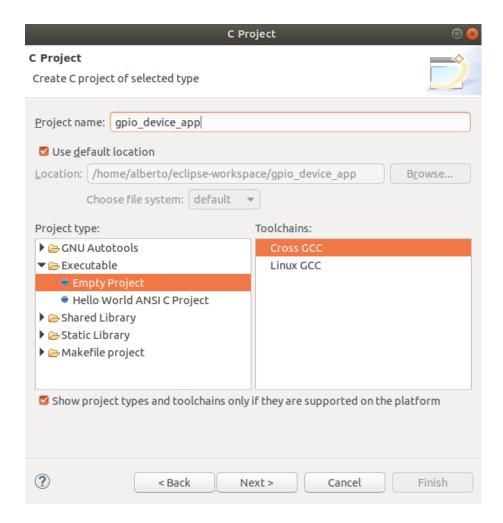


On the **Select Configurations** screen accept the default **Debug** and **Release** build and click **Next>**

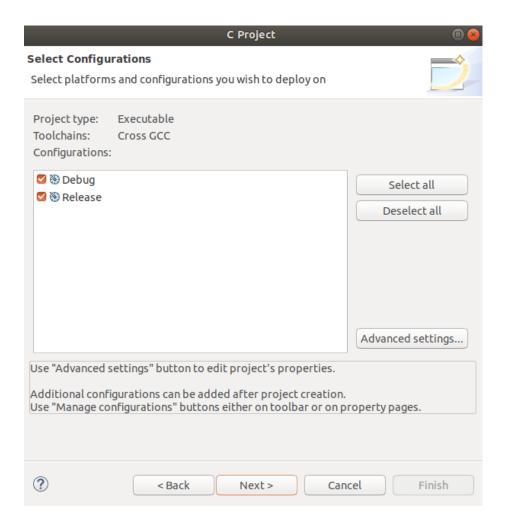

On the next screen, enter arm-ostl-linux-gnueabi- as a **Cross compiler prefix** and /home/alberto/STM32MP15-Ecosystem-v2.0.0/Developer-Package/SDK/sysroots/x86_64-ostl_sdk-linux/usr/bin/arm-ostl-linux-gnueabi as a **Cross compiler path**, then click **Finish**.

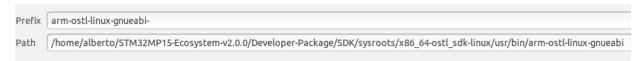


Eclipse will prompt to open the default C perspective. In the newly opened project you will now create the project file. Right click on the gpio_device_app project and select **New->File.** Insert **File name:** gpio_device_app.c, then click **Finish**.

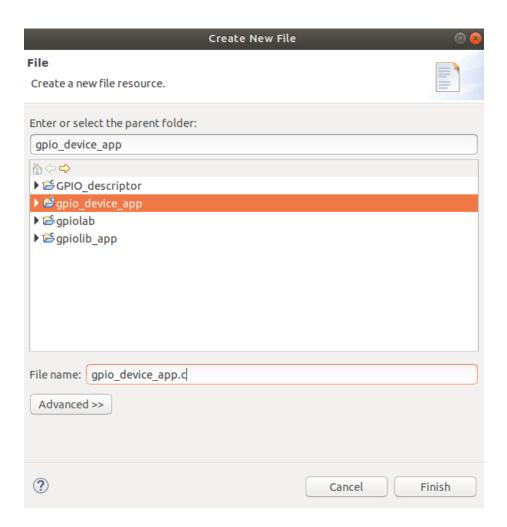


Now, insert the code of the Listing 11-10 into the gpio_device_app.c file.

Right click on the gpio_device_app project and select **Properties.** Expand the **C/C++ Build** item and click on **Settings**. This is where we will configure the toolchain settings. Under the **Cross settings** item at the top you can see the tool **Prefix** and **Path** that you entered earlier:

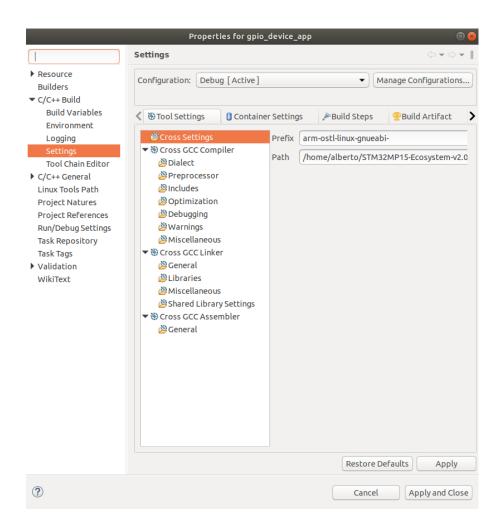

Select the **Cross GCC Compiler->Include** option and add this include path:

/home/alberto/STM32MP15-Ecosystem-v2.0.0/Developer-Package/SDK/sysroots/cortexa7t2hf-neon-vfpv4-ostl-linux-gnueabi/usr/include

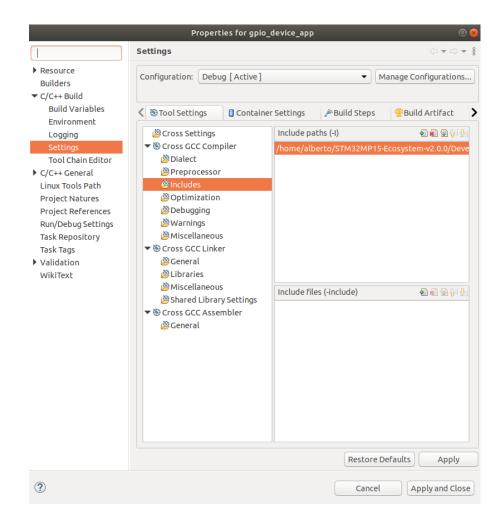

Now, you will enter the compiler flags. You can get these flags sourcing the SDK environment setup script and checking the environment variables CC and CFLAGS:

PC:~\$ source \$SDK_ROOT/SDK/environment-setup-cortexa7t2hf-neon-vfpv4-ostl-linux-gnueabi

PC:~\$ echo \$CC


arm-ostl-linux-gnueabi-gcc -mthumb -mfpu=neon-vfpv4 -mfloat-abi=hard -mcpu=cortex-a7 --sysroot=/home/alberto/STM32MP15-Ecosystem-v2.0.0/Developer-Package/SDK/sysroots/cortexa7t2hf-neon-vfpv4-ostl-linux-gnueabi

PC:~\$ echo \$CFLAGS

-O2 -pipe -g -feliminate-unused-debug-types

Under the Cross GCC Compiler -> Miscellaneous change the Other flags to be:

--sysroot=/home/alberto/STM32MP15-Ecosystem-v2.0.0/Developer-Package/SDK/sysroots/cortexa7t2hf-neon-vfpv4-ostl-linux-gnueabi -mthumb - mfpu=neon-vfpv4 -mfloat-abi=hard -mcpu=cortex-a7 -02 -pipe -g -feliminate-unused-debug-types -c -fmessage-length=0

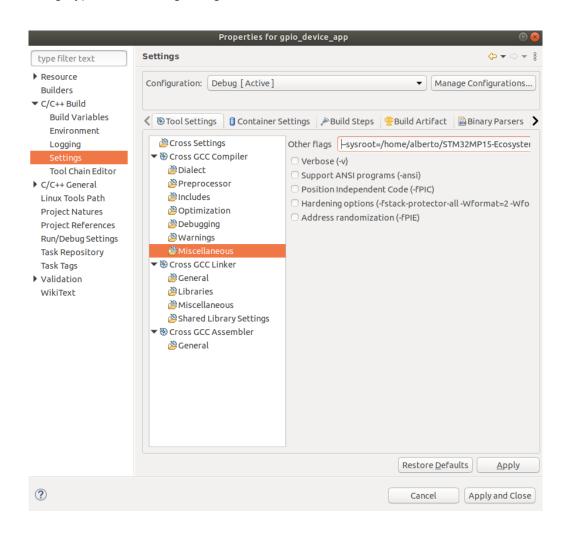

Now, you will enter the linker flags. You can get these flags sourcing the SDK environment setup script and checking the environment variable LDFLAGS:


PC:~\$ source \$SDK_ROOT/SDK/environment-setup-cortexa7t2hf-neon-vfpv4-ostl-linux-gnueabi

PC:~\$ echo \$LDFLAGS

-Wl,-O1 -Wl,--hash-style=gnu -Wl,--as-needed


Under the **Cross GCC Linker->Miscellaneous** set the **Linker flags** to be (add linker + compiler flags):

--sysroot=/home/alberto/STM32MP15-Ecosystem-v2.0.0/Developer-Package/SDK/sysroots/cortexa7t2hf-neon-vfpv4-ostl-linux-gnueabi/ -Wl,-O1 -Wl,--hash-style=gnu -Wl,--as-needed -mthumb -mfpu=neon-vfpv4 -mfloat-abi=hard -mcpu=cortex-a7

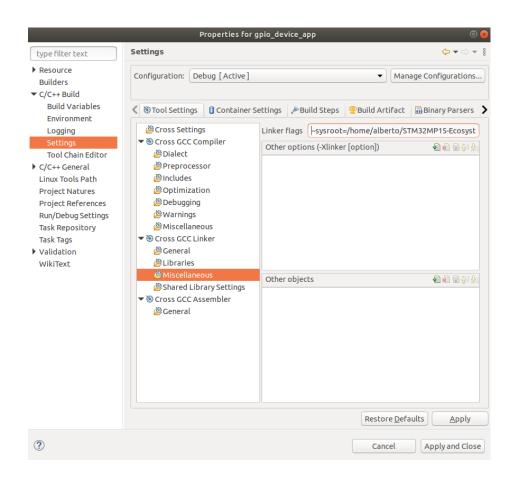

Now, click Apply and Close.

Finally, you can build your application using the hammer icon at the top of the Eclipse Window. If everything has been set up correctly your application will build.

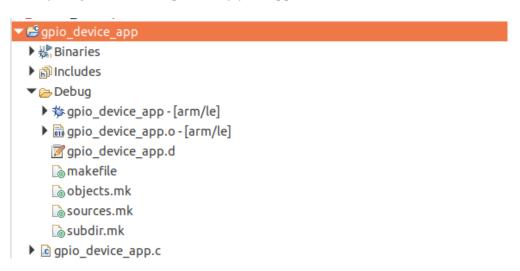

You can see the building output in the Console Tab.

```
Problems  □ Tasks □ Console  □ Properties  □ Properties
```

Deploy the application to the target STM32MP1:

```
PC:/eclipse-workspace/gpio_device_app/Debug$ scp gpio_device_app
root@10.0.0.10:/home/root
```

Finally, execute the application on the target. You can see the green LED flashing!

```
root@stm32mp1:~# ./gpio_device_app
```

GPIO control through gpiolibd library

In this section, you will see how to control GPIOs using the functions of the libgpiod library. You can find the userspace API for the libgpiod library in the linux/gpiod.h file. In the STM32MP1 SDK you can find this file in the following path:

```
~/STM32MP15-Ecosystem-v2.0.0/Developer-Package/SDK/syroots/cortexa7t2hf-neon-vfpv4-ostl-linux-gnueabi/usr/include/linux/gpiod.h
```

The following <code>libgpiod_app</code> application has the same behaviour than the <code>gpio_device_app</code> one, toggling ten times the GPIO PA14 connected to the green LED of the STM32MP1 eval board, but this time you will use the <code>libgpiod</code> library instead of the "gpio char device" method to control the green LED.

Listing 11-11: libgpiod_app.c

```
#include <errno.h>
#include <stdio.h>
#include <unistd.h>
#include <gpiod.h>
int main(int argc, char *argv[])
   struct gpiod chip *output chip;
   struct gpiod line *output line;
   int line value = 1;
   int flash = 10;
   int ret;
   /* open /dev/gpiochip0 */
   output_chip = gpiod_chip_open_by_number(0);
   if (!output_chip)
          return -1;
   /* get PA14 pin (green LED) */
   output_line = gpiod_chip_get_line(output_chip, 14);
   if(!output_line) {
           gpiod_chip_close(output_chip);
          return -1;
   }
   /* config PA14 as output and set a description */
   if (gpiod line request output(output line, "green Led",
                            GPIOD LINE ACTIVE STATE HIGH) == -1) {
           gpiod line release(output line);
           gpiod chip close(output chip);
          return -1;
```

```
}
   /* toggle 10 times the LED */
   for (int i=0; i < flash; i++) {
          line value = !line value;
          ret = gpiod_line_set_value(output_line, line_value);
          if (ret == -1) {
                  ret = -errno:
                  gpiod line release(output line);
                  gpiod chip close(output chip);
                  return ret;
          sleep(1);
   }
   gpiod line release(output line);
   gpiod_chip_close(output_chip);
   return 0;
}
```

You will also use Eclipse to configure a new project. You will keep the same compiler and linker options than the previous example, but an additional configuration to add the libgpiod library. Of course you have to create a new source file with the new example code.

Before you begin creating the new configuration, you will explore a very useful tool to find library dependencies. The name of this tool is pkg-config. Instead of locating the individual include directories and library dependencies and adding them to the build configuration in Eclipse you can use the pkg-config tool to automate this process.

Before opening Eclipse, you have to source the Yocto SDK environment script to set environment variables for pkg-config:

```
PC:~$ source $SDK_ROOT/SDK/environment-setup-cortexa7t2hf-neon-vfpv4-ostl-linux-gnueabi

PC:~$ which pkg-config
/home/alberto/STM32MP15-Ecosystem-v2.0.0/Developer-Package/SDK/sysroots/x86_64-ostl_sdk-linux/usr/bin/pkg-config
```

Show the list of include directory locations and the libraries prefixed by -l:

```
PC:~$ pkg-config libgpiod --cflags --libs
-lgpiod
```

Only the library gpiod is shown in the list.


Launch Eclipse in the terminal where you have sourced the environment script and create a new project keeping the same compiler and linker configuration as the previous example:

PC:/opt/eclipse\$./eclipse &

Create a new source file and insert the code of Listing 11-11: libgpiod_app.c

Now, you have to include the gpiod library in the Eclipse configuration. Under **Cross GCC Linker->Expert settings** add `pkg-config libgpiod --libs` to the **Command line pattern**. This will pass the location of the required libgpiod dependencies to the linker. Note the use of the backtick quotes.

\${COMMAND} \${FLAGS} \${OUTPUT_FLAG} \${OUTPUT_PREFIX}\${OUTPUT} \${INPUTS}`pkg-config libgpiod --libs`

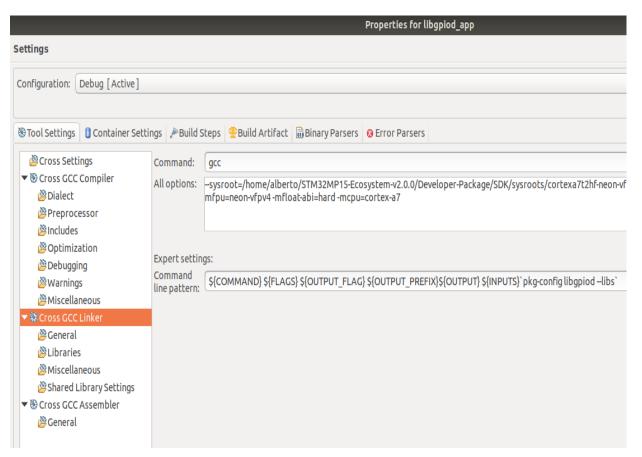

Now, click Apply and Close.

Finally, build your application using the hammer icon at the top of the Eclipse Window.

```
    ▶ Ibgpiod_app
    ▶ Includes
    Inclu
```

Deploy the application to the target STM32MP1:

```
PC:/eclipse-workspace/gpio_device_app/Debug$ scp libgpiod_app
root@10.0.0.10:/home/root
```

Finally, execute the application on the target. You can see the green LED flashing!

```
root@stm32mp1:~# ./libgpiod_app
```

Now, you can do a slight modification to the previous <code>libgpiod_app.c</code> application code to control the **port19 (GPO)** of the **MAX11300** device. Create a new project in Eclipse and set the same configuration of the previous <code>libgpiod_app</code> project. In the code below, you can see in bold the differences respect to the previous <code>libgpiod_app.c</code> source file.

Listing 11-11: libgpiod_max11300_app.c

```
#include <errno.h>
#include <stdio.h>
#include <unistd.h>
#include <gpiod.h>

int main(int argc, char *argv[])
{
    struct gpiod_chip *output_chip;
    struct gpiod_line *output_line;
    int line_value = 1;
    int flash = 10;
```

```
/* open /dev/gpiochip10 */
       output_chip = gpiod_chip_open_by_number(10);
       if (!output chip)
               return -1;
       /* get line 3 (port19) of the gpiochip10 device */
       output_line = gpiod_chip_get_line(output_chip, 3);
       if(!output_line) {
              gpiod_chip_close(output_chip);
              return -1;
       }
       /* config port19 (GPO) as output and set output to high level */
       if (gpiod_line_request_output(output_line, "Port19_GPO",
                               GPIOD_LINE_ACTIVE_STATE_HIGH) == -1) {
               gpiod_line_release(output_line);
               gpiod_chip_close(output_chip);
              return -1;
       }
       /* toggle 10 times the port19 (GPO) of the max11300 device */
       for (int i=0; i < flash; i++) {
              line value = !line value;
               ret = gpiod line set value(output line, line value);
               if (ret == -1) {
                      ret = -errno;
                      gpiod line release(output line);
                      gpiod_chip_close(output_chip);
                      return ret;
               sleep(1);
       }
       gpiod line release(output line);
       gpiod chip close(output chip);
       return 0;
    }
Deploy the application to the target STM32MP1:
    PC:/eclipse-workspace/gpio_max11300_device_app/Debug$ scp libgpiod max11300 app
    root@10.0.0.10:/home/root
Load the "max11300" Linux driver:
    root@stm32mp1:~# insmod max11300-base.ko
```

int ret;

root@stm32mp1:~# insmod max11300.ko

Launch on the STM32MP1 the libgpiod_max11300_app. You can see the port19 of the MAX11300 device toggling ten times. You can connect a LED in the port19 to reproduce the same behaviour of the previous applications.

```
root@stm32mp1:~# ./libgpiod max11300 app
  292.190891] max11300 spi0.0: The GPIO is set as an output
  292.197664] max11300 spi0.0: The GPIO ouput is set
  292.200991] max11300 spi0.0: The GPIO ouput is set high and port number is 1F
  292.217663] max11300 spi0.0: The GPIO ouput is set
  292.220996] max11300 spi0.0: The GPIO ouput is set low and port number is 19F
  293.234311] max11300 spi0.0: The GPIO ouput is set
  293.237645] max11300 spi0.0: The GPIO ouput is set high and port_number is 1F
  294.250366] max11300 spi0.0: The GPIO ouput is set
  294.253793] max11300 spi0.0: The GPIO ouput is set low and port number is 19F
  295.262513] max11300 spi0.0: The GPIO ouput is set
  295.265972] max11300 spi0.0: The GPIO ouput is set high and port_number is 1F
  296.274859] max11300 spi0.0: The GPIO ouput is set
  296.278195] max11300 spi0.0: The GPIO ouput is set low and port_number is 19F
  297.291950] max11300 spi0.0: The GPIO ouput is set
  297.295331] max11300 spi0.0: The GPIO ouput is set high and port number is 1F
  298.304457] max11300 spi0.0: The GPIO ouput is set
  298.307792] max11300 spi0.0: The GPIO ouput is set low and port number is 19F
  299.317951] max11300 spi0.0: The GPIO ouput is set
  299.321284] max11300 spi0.0: The GPIO ouput is set high and port number is 1F
  300.334107] max11300 spi0.0: The GPIO ouput is set
  300.337471] max11300 spi0.0: The GPIO ouput is set low and port number is 19F
  301.346559] max11300 spi0.0: The GPIO ouput is set
  301.349895] max11300 spi0.0: The GPIO ouput is set high and port_number is 1F
root@stm32mp1:~#
```

Connect the **port19** (line 3 of the gpiochip10 device) to the **port18** (line 2 of the gpiochip10 device) of the MAX11300 device. The port19 is set to high level after executing <code>libgpiod_max11300_app</code> application. You can check it by reading the port18:


```
root@stm32mp1:~# gpioget gpiochip10 2
[ 602.872172] max11300 spi0.0: The GPIO is set as an input
[ 602.877739] max11300 spi0.0: The GPIO input is get
[ 602.881066] max11300 spi0.0: read SE channel
1
```

Debugging with Eclipse


Now, you will see how to create a debug configuration that will connect to the STM32MP1 board to remotely debug your application. This debug configuration will automatically download the compiled binary, start a gdb-server session running and connect to it from within the Eclipse IDE.

Switch back to the C++ perspective in Eclipse. Right click on the previous libgpiod_max11300_app project and select **Debug As->Debug Configurations...**


In the Debug Configurations window select **C/C++ Remote Application** and press the **New** Button. The Create configuration window will appear and you can now configure the session.

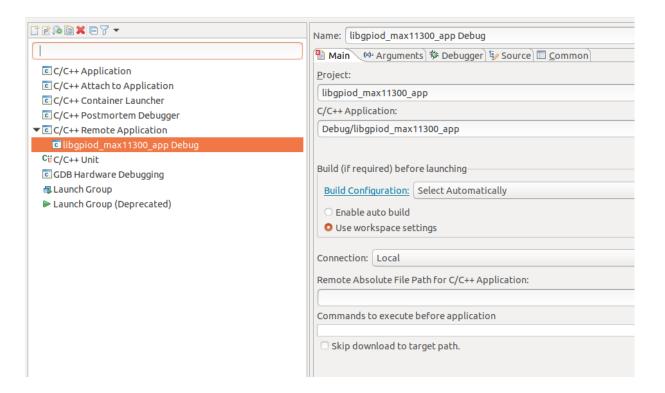

Create a new **Connection** by clicking **New** and choosing **SSH connection type**; click **OK**:

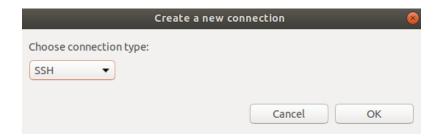


Edit properties of the new connection: specify the STM32MP15 **Host IP address**, the **User** (root) and the **Password based authentication** (leave the **Password** empty); click **Finish**:

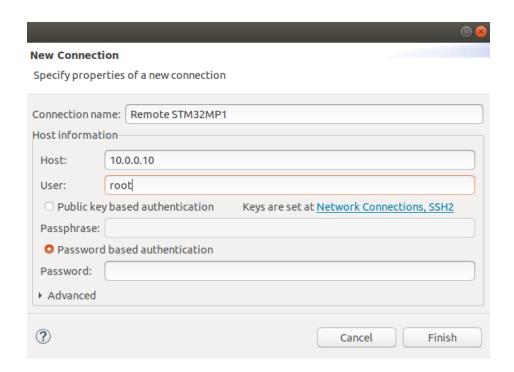


In the Create configuration window change the **Remote Absolute File Path** (this is where the binary will be placed in the STM32MP1 root file system) to be:

/root/libgpiod_max11300_app

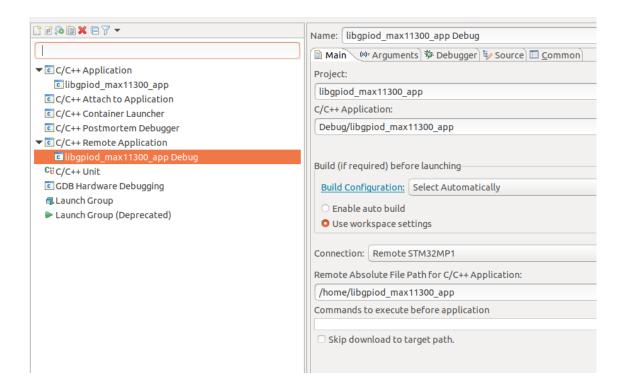

Now, you need to configure the gdb connection over ssh. Switch from the **Main** tab to the **Debugger** tab. In the GDB debugger enter the Yocto SDK ARM specific gdb:

/home/alberto/STM32MP15-Ecosystem-v2.0.0/Developer-Package/SDK/sysroots/x86_64-ostl sdk-linux/usr/bin/arm-ostl-linux-gnueabi/arm-ostl-linux-gnueabi-gdb

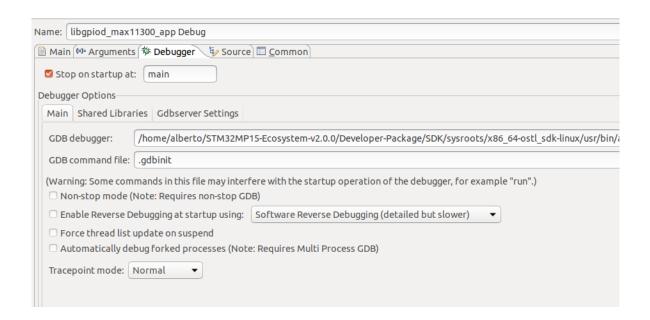


Click **Debug**. You will be asked to switch to the **Debug Perspective** window, accept it. Eclipse will automatically deploy your application on the STM32MP1 target and run gdbserver on it using the SSH protocol. The program will halt at the main() function.

```
🏇 Debug 🛭 🔓 Project Explorer
                                             [=] 🦠 i⇒ 🖇 🗆 🗇
                                                              libgpiod_max11300_app.c 

□ gpiod.h
▼ [c] libqpiod max11300 app Debug [C/C++ Remote Application]
                                                                       /* open /dev/gpiochip10 */
                                                               14
  ▼ 🔐 libgpiod_max11300_app [6237] [cores: 1]
                                                              15
                                                                       output_chip = gpiod_chip_open_by_number(10);
                                                               16
                                                                       if (!output_chip)
   ▼ 🗗 Thread #1 [libgpiod_max113] 6237 [core: 1] (Suspended : B
                                                               17
                                                                           return -1;
        main() at libgpiod_max11300_app.c:15 0x10578
                                                               18
   Remote Shell
                                                                       /* get line 3 (port19) of the gpiochip10 device */
                                                               19
                                                               20
21
22
                                                                       output_line = gpiod_chip_get_line(output_chip, 3);
   /home/alberto/STM32MP15-Ecosystem-v2.0.0/Developer-Page
                                                                       if(!output line) {
                                                                           gpiod_chip_close(output_chip);
                                                               23
                                                                           return -1;
                                                               24
25
26
27
28
29
30
                                                                       /* config port19 (GPO) as output and set ouput to high level */
                                                                       if (gpiod_line_request_output(output_line, "green Led",
                                                                                     GPIOD_LINE_ACTIVE_STATE_HIGH) == -1) {
                                                                            gpiod_line_release(output_line);
                                                                           gpiod_chip_close(output chip);
                                                                           return -1;
                                                               34
                                                                       /* toggle 10 times the port19 (GPO) of the max11300 device */
                                                               35
                                                                       for (int i=0; i < flash; i++) {
    line_value = !line_value;</pre>
                                                               36
                                                                            ret = gpiod_line_set_value(output line, line value);
                                                               38
                                                                           if (ret == -1) {
                                                                                ret = -errno;
                                                               40
                                                                                gpiod_line_release(output line);
                                                                                gpiod_chip_close(output_chip);
                                                               41
                                                               42
                                                                                return ret;
                                                               43
44
                                                                            sleep(1);
                                                               45
                                                               46
                                                               47
                                                                       gpiod line release(output line);
                                                               48
                                                                       gpiod_chip_close(output_chip);
                                                               49
                                                               50
                                                                       return Θ;
                                                               51 }
                                                              □ Console 🛮 🚟 Registers 🔝 Problems 🕠 Executables 🖟 Debugger Console 🕕 Memory
                                                              libgpiod max11300 app Debug [C/C++ Remote Application]
                                                              gdbserver :2345 /home/libgpiod max11300 app;exit
                                                              root@stm32mp1:~# gdbserver :2345 /home/libgpiod max11300 app;exit
                                                              Process /home/libgpiod_max11300_app created; pid = 6237
                                                              Listening on port 2345
                                                              Remote debugging from host ::ffff:10.0.0.1, port 40648
```

Set a breakpoint at line 36. Press Resume (F8), the program will stop at the breakpoint.

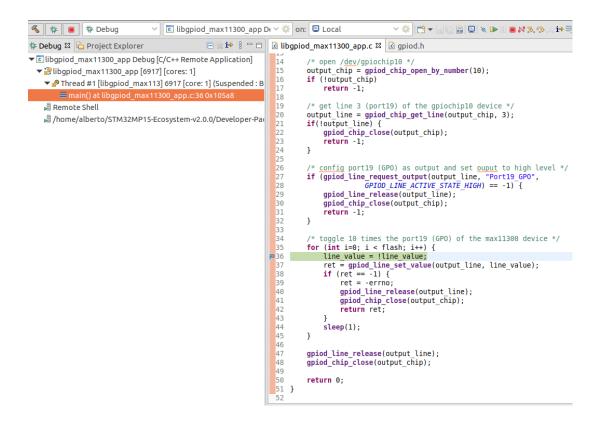

See below the minicom terminal output:

```
root@stm32mp1:~# [ 6090.669591] max11300 spi0.0: The GPIO is set as an output
[ 6090.676304] max11300 spi0.0: The GPIO ouput is set
[ 6090.679631] max11300 spi0.0: The GPIO ouput is set high and port_number is 19.
Pin is > 0x0F
```

Read the port18 of the MAX11300 device. The returned value is 1. See below the minicom output:

```
root@stm32mp1:~# gpioget gpiochip10 2
[ 6193.253441] max11300 spi0.0: The GPIO is set as an input
[ 6193.258859] max11300 spi0.0: The GPIO input is get
[ 6193.262184] max11300 spi0.0: read SE channel
1
```

Press Resume (F8), the program will stop again at the breakpoint. See below the minicom output:

```
root@stm32mp1:~# [ 6291.585690] max11300 spi0.0: The GPIO ouput is set
[ 6291.589025] max11300 spi0.0: The GPIO ouput is set low and port_number is 19.
Pin is > 0x0F
```

Read the port18 of the MAX11300 device. The returned value is 0. See below the minicom output:

```
root@stm32mp1:~# gpioget gpiochip10 2
[ 6328.471317] max11300 spi0.0: The GPIO is set as an input
[ 6328.476896] max11300 spi0.0: The GPIO input is get
[ 6328.480220] max11300 spi0.0: read SE channel
```

Remove the breakpoint and Press Resume (F8). See below the minicom output:

```
root@stm32mp1:~# [ 6370.410255] max11300 spi0.0: The GPIO ouput is set
[ 6370.413680] max11300 spi0.0: The GPIO ouput is set high and port number is 19.
Pin is > 0x0F
[ 6371.422515] max11300 spi0.0: The GPIO ouput is set
[ 6371.425977] max11300 spi0.0: The GPIO ouput is set low and port number is 19.
Pin is > 0x0F
[ 6372.434826] max11300 spi0.0: The GPIO ouput is set
[ 6372.438159] max11300 spi0.0: The GPIO ouput is set high and port number is 19.
Pin is > 0x0F
[ 6373.452756] max11300 spi0.0: The GPIO ouput is set
[ 6373.456144] max11300 spi0.0: The GPIO ouput is set low and port number is 19.
Pin is > 0x0F
[ 6374.465011] max11300 spi0.0: The GPIO ouput is set
[ 6374.468374] max11300 spi0.0: The GPIO ouput is set high and port number is 19.
Pin is > 0x0F
[ 6375.482913] max11300 spi0.0: The GPIO ouput is set
[ 6375.486385] max11300 spi0.0: The GPIO ouput is set low and port number is 19.
Pin is > 0x0F
[ 6376.500640] max11300 spi0.0: The GPIO ouput is set
[ 6376.504035] max11300 spi0.0: The GPIO ouput is set high and port number is 19.
Pin is > 0x0F
[ 6377.512866] max11300 spi0.0: The GPIO ouput is set
[ 6377.516313] max11300 spi0.0: The GPIO ouput is set low and port_number is 19.
Pin is > 0x0F
[ 6378.525251] max11300 spi0.0: The GPIO ouput is set
[ 6378.528586] max11300 spi0.0: The GPIO ouput is set high and port number is 19.
Pin is > 0x0F
```

Terminate the Debug session.

Note: The source code of the applications developed during this lab is included in the linux_5.4_max11300_driver.zip file and can be downloaded from the GitHub repository at https://github.com/ALIBERA/linux_book_2nd_edition

LAB 7.4: "GPIO expander device" Module

This new LAB 7.4 has been added to the labs of Chapter 7 to reinforce the concepts of creating **NESTED THREADED GPIO irqchips** drivers, which were explained during the chapter seven of this book, and apply in a practical way how to create a gpio controller with interrupt capabilities. You will also develop an user application that request GPIO interrupts from user space using the GPIOlib APIs.

A new low cost evaluation board based on the CY8C9520A device will be used, thus expanding the number of evaluation boards that can be adquired to practice with the theory explained in Chapter 7.


This new kernel module will control the Cypress CY8C9520A device. The CY8C9520A is a multiport IO expander with on board user available EEPROM and several PWM outputs. The IO expander's data pins can be independently assigned as inputs, outputs, quasi-bidirectional input/outputs or PWM ouputs. The individual data pins can be configured as open drain or collector, strong drive (10 mA source, 25 mA sink), resistively pulled up or down, or high impedance. The factory default configuration is pulled up internally. You can check all the info related to this device at https://www.cypress.com/products/cy8c95xx

The hardware platforms used in this lab are the STM32MP157C-DK2 board from ST and the EXPAND 6 Click from MIKROE. The documentation of these boards can be found at https://www.st.com/en/evaluation-tools/stm32mp157c-dk2.html and https://www.mikroe.com/expand-6-click

Not all the CY8C9520A features are included in this driver. The driver will configure the CY8C9520A port pins as input and outputs and will handle GPIO interrupts.

LAB 7.4 hardware description

In this lab you will use the I2C5 pins of the STM32MP157C-DK2 CN13 connector to connect to the EXPAND 6 Click mikroBUS™ socket. See below the STM32MP157C-DK2 CN13 connector:

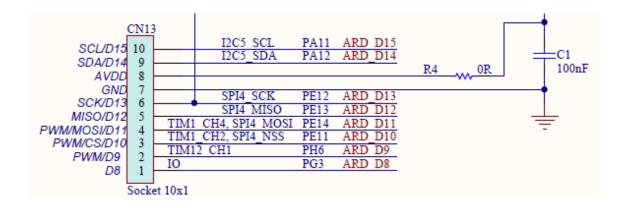

And the EXPAND 6 Click mikroBUSTM socket:


Notes	Pin	mikro**				Pin	Notes
	NC	1	AN	PWM	16	NC	
Reset	RST	2	RST	INT	15	INT	Interrupt
	NC	3	CS	RX	14	NC	
	NC	4	SCK	TX	13	NC	
	NC	5	MISO	SCL	12	SCL	I2C Clock
	NC	6	MOSI	SDA	11	SDA	I2C Data
Power Supply	3.3V	7	3.3V	5V	10	5V	Power Supply
Ground	GND	8	GND	GND	9	GND	Ground

Open the STM32MP157C-DK2 schematic to see the CN13 connector and look for the I2C5 pins. Connect the CN13 I2C5 pins to the CY8C9520A I2C ones obtained from the EXPAND 6 Click mikroBUSTM socket:

- Connect the STM32MP157C-DK2 I2C5_SCL (Pin 10 of CN13) to CY8C9520A SCL (Pin 12 of Mikrobus)
- Connect the STM32MP157C-DK2 I2C5_SDA (Pin 9 of CN13) to CY8C9520A SDA (Pin 11 of Mikrobus)

Connect the STM32MP157C-DK2 PG3 pad (Pin 1 of CN13) to CY8C9520A INT (Pin 15 of Mikrobus)

Now, find the CN16 connector in the STM32MP157C-DK2 schematic:

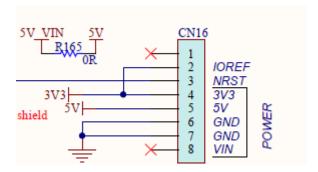

And connect the next power pins between the two boards:

- Connect the Pin 4 of CN16 (3.3V) to CY8C9520A 3.3V (Pin 7 of Mikrobus)
- Connect the Pin 6 of CN16 (GND) to CY8C9520A GND (Pin 8 of Mikrobus)

The hardware setup between the two boards is already done!!

LAB 7.4 device tree description

Open the stm32mp15xx-dkx.dtsi DT file and find the i2c5 controller master node. Inside the i2c5 node, you can see the pinctrl properties which configure the pins in I2C mode when the system runs and into a different state (ANALOG) when the system suspends to RAM. Both i2c5_pins_a and i2c5_pins_sleep_a are already defined in the stm32mp15-pinctrl.dtsi file.

The i2c5 controller is enabled by writing "okay" to the status property. You will set to 100Khz the clock-frequency property. EXPAND 6 Click communicates with MPU using an I2C bus interface with a maximum frequency of 100kHz.

Now, you will add to the i2c5 controller node the cy8c9520a node. There must be a DT device node's compatible property identical to the compatible string stored in one of the driver's of_device_id structures. The reg property includes the I2C address of the device.

The interrupt-controller property is an empty property, which declares a node as a device that receives interrupt signals. The interrupt-cells property is a property of the interrupt controller, and defines how many cells are needed to specify a single interrupt in an interrupt client node. In our device node the interrupt-cells property is set to two, the first cell defines the

index of the interrupt within the controller, while the second cell is used to specify the trigger and level flags of the interrupt.

Every GPIO controller node must contain both an empty gpio-controller property, and a gpio-cells integer property, which indicates the number of cells in a gpio-specifier for a gpio client device.

The interrupt-parent is a property containing a phandle to the interrupt controller that it is attached to. Nodes that do not have an interrupt-parent property can also inherit the property from their parent node. The CY8C9520A Interrupt pin (INT) is connected to the PG3 pad of the STM32MP1 processor, so the interrupt parent of our device is the GPIOG peripheral of the STM32MP1 processor.

The interrupts property is a property containing a list of interrupt specifiers, one for each interrupt output signal on the device. In our driver there is one output interrupt, so only one interrupt specifier containing the interrupted line number of the GPIOG peripheral is needed.

See below the device-tree configuration of our cy8c9520a device:

```
&i2c5 {
   pinctrl-names = "default", "sleep";
   pinctrl-0 = <&i2c5 pins a>;
   pinctrl-1 = <&i2c5 pins sleep a>;
   i2c-scl-rising-time-ns = <185>;
   i2c-scl-falling-time-ns = <20>;
   clock-frequency = <100000>;
   /* spare dmas for other usage */
   /delete-property/dmas;
   /delete-property/dma-names;
   status = "okay";
   cy8c9520a: cy8c9520a@20 {
           compatible = "cy8c9520a";
           reg = \langle 0x20 \rangle;
           interrupt-controller;
           #interrupt-cells = <2>;
           gpio-controller;
           #gpio-cells = <2>;
           interrupt-parent = <&gpiog>;
           interrupts = <3 IRQ_TYPE_LEVEL_HIGH>;
   };
   ltc2607@72 {
           compatible = "arrow,ltc2607";
           reg = \langle 0x72 \rangle;
   };
```

```
ltc2607@73 {
        compatible = "arrow,ltc2607";
        reg = \langle 0x73 \rangle;
};
ioexp@38 {
        compatible = "arrow,ioexp";
        reg = \langle 0x38 \rangle;
};
ioexp@39 {
        compatible = "arrow,ioexp";
        reg = \langle 0x39 \rangle;
};
adx1345@1d {
        compatible = "arrow,adx1345";
        reg = \langle 0x1d \rangle;
};
ltc3206: ltc3206@1b {
        compatible = "arrow,ltc3206";
        reg = \langle 0x1b \rangle;
        gpios = <&gpiog 3 GPIO_ACTIVE_LOW>;
        led1r {
                 label = "red";
        };
        led1b {
                 label = "blue";
        };
        led1g {
                 label = "green";
        };
        ledmain {
                 label = "main";
        };
        ledsub {
                 label = "sub";
        };
};
```

};

LAB 7.4 GPIO controller driver description

The main code sections of the driver will be described using two different categories: I2C driver setup, and GPIO driver interface. The CY8C9520A driver is based on the CY8C9540A driver from Intel Corporation.

I2C driver setup

These are the main code sections:

1. Include the required header files:

```
#include <linux/i2c.h>
```

2. Create a struct i2c_driver structure:

3. Register to the I2C bus as a driver:

```
module_i2c_driver(cy8c9520a_driver);
```

4. Add "cy8c9520a" to the list of devices supported by the driver. The compatible variable matchs with the compatible property of the cy8c9520a DT node:

5. Define an array of struct i2c device id structures:

GPIO driver interface

The CY8C9520A driver will control the I/O expander's data pins as inputs and outputs. In this driver each and every GPIO pin can be used as an external interrupt. Whenever there is an input change on a specific GPIO pin, the IRQ interrupt will be asserted by the CY8C9520A GPIO controller.

The CY8C9520A driver will register its gpio_chip structure with the kernel, and its irq_chip structure with the IRQ system.

Our GPIO irqchip will fall in the category of NESTED THREADED GPIO IRQCHIPS, which are off-chip GPIO expanders that reside on the other side of a sleeping bus, such as I2C or SPI.

The GPIOlib framework will provide the kernel and user space APIs to control the GPIOs and handle their interrupts.

These are the main steps to create our CY8C9520A driver, which includes a GPIO controller with interrupt capabilities:

- Include the following header, which defines the structures used to define a GPIO driver: #include linux/gpio/driver.h>
- 2. Initialize the gpio_chip structure with the different callbacks that will control the gpio lines of the GPIO controller, and register the gpiochip with the kernel using the devm_gpiochip_add_data() function. In the Listing 7-4 you can check the source code of these callback functions. Comments have been added before the main lines of the code to understand the meaning of the same.

```
static int cy8c9520a gpio init(struct cy8c9520a *cygpio)
       struct gpio chip *gpiochip = &cygpio->gpio chip;
       int err;
       gpiochip->label = cygpio->client->name;
       gpiochip->base = -1;
       gpiochip->ngpio = NGPIO;
       gpiochip->parent = &cygpio->client->dev;
       gpiochip->of_node = gpiochip->parent->of_node;
       gpiochip->can sleep = true;
       gpiochip->direction_input = cy8c9520a_gpio_direction input;
       gpiochip->direction_output = cy8c9520a_gpio_direction_output;
       gpiochip->get = cy8c9520a gpio get;
       gpiochip->set = cy8c9520a gpio set;
       gpiochip->owner = THIS MODULE;
       /* register a gpio chip */
       err = devm gpiochip add data(gpiochip->parent, gpiochip, cygpio);
```

```
if (err)
          return err;
return 0;
}
```

3. Initialize the irq_chip structure with the different callbacks that will handle the GPIO interrupts flow. In the Listing 7-4 you can check the source code of these callback functions. Comments have been added before the main lines of the code to understand the meaning of the same.

4. Write the interrupt setup function for the CY8C9520A device. The gpiochip_set_nested_irqchip() function sets up a nested cascaded irq handler for a gpio_chip from a parent IRQ. The The gpiochip_set_nested_irqchip() function takes as a parameter the handle_simple_irq flow handler, which handles simple interrupts sent from a demultiplexing interrupt handler or coming from hardware, where no interrupt hardware control is necessary. You can find all the complete information about irq-flow methods at https://www.kernel.org/doc/html/latest/core-api/genericirq.html

The interrupt handler for the GPIO child device will be called inside of a new thread created by the handle_nested_irq() function, which is called inside the interrupt handler of the driver.

The devm_request_threaded_irq() function inside cy8c9520a_irq_setup() will allocate the interrupt line taking as parameters the driver's interrupt handler cy8c9520a_irq_handler(), the linux IRQ number (client->irq), flags that will instruct the kernel about the desired behaviour (IRQF_ONESHOT | IRQF_TRIGGER_HIGH), and a pointer to the cygpio global structure that will be recovered in the interrupt handler of the driver.

```
static int cy8c9520a_irq_setup(struct cy8c9520a *cygpio)
{
    struct i2c_client *client = cygpio->client;
    struct gpio_chip *chip = &cygpio->gpio_chip;
    u8 dummy[NPORTS];
    int ret, i;
```

```
mutex init(&cygpio->irq lock);
/*
 * Clear interrupt state registers by reading the three registers
 * Interrupt Status Port0, Interrupt Status Port1,
 * Interrupt Status Port2,
 * and store the values in a dummy array
*/
i2c smbus read i2c block data(client, REG INTR STAT PORTO,
                                   NPORTS, dummy);
 * Initialise Interrupt Mask Port Register (19h) for each port
* Disable the activation of the INT lines. Each 1 in this
 * register masks (disables) the int from the corresponding GPIO
 */
memset(cygpio->irq_mask_cache, 0xff, sizeof(cygpio->irq_mask_cache));
memset(cygpio->irq mask, 0xff, sizeof(cygpio->irq mask));
/* Disable interrupts in all the gpio lines */
for (i = 0; i < NPORTS; i++) {
       i2c smbus write byte data(client, REG PORT SELECT, i);
       i2c smbus write byte data(client, REG INTR MASK,
                                    cygpio->irq mask[i]);
}
/* add a nested irgchip to the gpiochip */
gpiochip irqchip add nested(chip,
                            &cy8c9520a irq chip,
                            handle simple irq,
                            IRQ TYPE NONE);
 * Request interrupt on a GPIO pin of the external processor
 * this processor pin is connected to the INT pin of the cy8c9520a
 */
devm request threaded irq(&client->dev, client->irq, NULL,
                          cy8c9520a irq handler,
                          IRQF ONESHOT | IRQF TRIGGER HIGH,
                          dev name(&client->dev), cygpio);
 * set up a nested irq handler for a gpio_chip from a parent IRQ
 * you can now request interrupts from GPIO child drivers nested
 * to the cy8c9520a driver
 */
```

5. Write the interrupt handler for the CY8C9520A device. Inside this handler the pending GPIO interrupts are checked by reading the pending variable value, then the position of the first bit set in the variable is returned; the _ffs() function is used to perform this task. For each pending interrupt that is found, there is a call to the handle_nested_irq() wrapper function, which in turn calls the interrupt handler of the GPIO child driver that has requested this GPIO interrupt by using the devm_request_threaded_irq() function. The parameter of the handle_nested_irq() function is the Linux IRQ number previously returned by using the irq_find_mapping() function, which receives the hwirq of the input pin as a parameter (gpio_irq variable). The pending interrupt is cleared by doing pending &= ~BIT(gpio), and the same process is repeated until all the pending interrupts are being managed.

* register due to an interrupt in the GPIO, and store the new

```
* value in the pending register
              pending = stat[port] & (~cygpio->irq mask[port]);
              mutex unlock(&cygpio->irq lock);
              while (pending) {
                      ret = IRQ HANDLED;
                      /* get the first gpio that has got an int */
                      gpio = __ffs(pending);
                      /* clears the gpio in the pending register */
                      pending &= ~BIT(gpio);
                      /* gets the int number associated to this gpio */
                      gpio irq = cy8c9520a port offs[port] + gpio;
                      /* launch the ISR of the GPIO child driver */
                      handle_nested_irq(irq_find_mapping(cygpio-
>gpio_chip.irq.domain, gpio_irq));
              }
       }
       return ret;
}
```

See in the next **Listing 7-4** the complete "GPIO expander device" driver source code for the STM32MP1 processor.

Note: The "GPIO expander device" driver source code developed for the STM32MP157C-DK2 board is included in the linux_5.4_CY8C9520A_driver.zip file and can be downloaded from the GitHub repository at https://github.com/ALIBERA/linux_book_2nd_edition

Listing 7-4: CY8C9520A_stm32mp1.c

```
#include <linux/i2c.h>
#include <linux/interrupt.h>
#include <linux/irq.h>
#include <linux/gpio/driver.h>
#include <linux/kernel.h>
#include <linux/module.h>
#include <linux/slab.h>

#define DRV_NAME "cy8c9520a"

/* cy8c9520a settings */
#define NGPIO 20
```

```
#define DEVID CY8C9520A
                                        0x20
#define NPORTS
/* Register offset */
#define REG INPUT PORT0
                                        0x00
#define REG OUTPUT PORT0
                                        0x08
#define REG INTR STAT PORT0
                                        0x10
#define REG PORT SELECT
                                        0x18
#define REG SELECT PWM
                                        0x1a
#define REG INTR MASK
                                        0x19
#define REG PIN DIR
                                        0x1c
#define REG DRIVE PULLUP
                                        0x1d
#define REG_DRIVE_PULLDOWN
                                        0x1e
#define REG_DEVID_STAT
                                        0x2e
/* definition of the global structure for the driver */
struct cy8c9520a {
   struct i2c_client *client;
   struct gpio_chip gpio_chip;
   struct gpio_desc *gpio;
   int irq;
   struct mutex lock;
   /* protect serialized access to the interrupt controller bus */
   struct mutex irq lock;
   /* cached output registers */
   u8 outreg cache[NPORTS];
   /* cached IRQ mask */
   u8 irg mask cache[NPORTS];
   /* IRQ mask to be applied */
   u8 irq_mask[NPORTS];
};
/* Per-port GPIO offset */
static const u8 cy8c9520a_port_offs[] = {
   0,
   8,
   16,
};
/* return the port of the gpio */
static inline u8 cypress get port(unsigned int gpio)
   u8 i = 0;
   for (i = 0; i < sizeof(cy8c9520a port offs) - 1; i ++) {
          if (! (gpio / cy8c9520a_port_offs[i + 1]))
                  break;
   return i;
```

```
}
/* get the gpio offset inside its respective port */
static inline u8 cypress get offs(unsigned gpio, u8 port)
   return gpio - cy8c9520a_port_offs[port];
}
* struct gpio chip get callback function.
 * It gets the input value of the GPIO line (0=low, 1=high)
 * accessing to the REG INPUT PORT register
*/
static int cy8c9520a_gpio_get(struct gpio_chip *chip,
                             unsigned int gpio)
{
   int ret;
   u8 port, in_reg;
   struct cy8c9520a *cygpio = gpiochip get data(chip);
   dev info(chip->parent, "cy8c9520a gpio get function is called\n");
   /* get the input port address address (in reg) for the GPIO */
   port = cypress get port(gpio);
   in reg = REG INPUT PORT0 + port;
   dev info(chip->parent, "the in reg address is %u\n", in reg);
   mutex_lock(&cygpio->lock);
   ret = i2c_smbus_read_byte_data(cygpio->client, in_reg);
   if (ret < 0) {
          dev_err(chip->parent, "can't read input port %u\n", in_reg);
   }
   dev info(chip->parent,
          "cy8c9520a gpio get function with %d value is returned\n",
          ret);
   mutex unlock(&cygpio->lock);
    * check the status of the GPIO in its input port register
    * and return it. If expression is not 0 returns 1
   return !!(ret & BIT(cypress_get_offs(gpio, port)));
}
```

```
/*
 * struct gpio chip set callback function.
 * It sets the output value of the GPIO line in
 * GPIO ACTIVE HIGH mode (0=low, 1=high)
 * writing to the REG OUTPUT PORT register
static void cy8c9520a gpio set(struct gpio chip *chip,
                              unsigned int gpio, int val)
{
   int ret;
   u8 port, out reg;
   struct cy8c9520a *cygpio = gpiochip_get_data(chip);
   dev info(chip->parent,
            "cy8c9520a gpio set value func with %d value is called\n",
           val);
   /* get the output port address address (out reg) for the GPIO */
   port = cypress get port(gpio);
   out reg = REG OUTPUT PORT0 + port;
   mutex lock(&cygpio->lock);
   /*
    * if val is 1, gpio output level is high
    * if val is 0, gpio output level is low
    * the output registers were previously cached in cy8c9520a setup()
    */
   if (val) {
          cygpio->outreg_cache[port] |= BIT(cypress_get_offs(gpio, port));
   } else {
          cygpio->outreg cache[port] &= ~BIT(cypress get offs(gpio, port));
   }
   ret = i2c smbus write byte data(cygpio->client, out reg,
                                   cygpio->outreg cache[port]);
   if (ret < 0) {
          dev err(chip->parent, "can't write output port %u\n", port);
   }
   mutex unlock(&cygpio->lock);
}
/*
 * struct gpio_chip direction_output callback function.
 * It configures the GPIO as an output writing to
 * the REG_PIN_DIR register of the selected port
```

```
*/
static int cy8c9520a gpio direction output(struct gpio chip *chip,
                                           unsigned int gpio, int val)
{
   int ret;
   u8 pins, port;
   struct cy8c9520a *cygpio = gpiochip get data(chip);
   /* gets the port number of the gpio */
   port = cypress get port(gpio);
   dev_info(chip->parent, "cy8c9520a_gpio_direction output is called\n");
   mutex lock(&cygpio->lock);
   /* select the port where we want to config the GPIO as output */
   ret = i2c_smbus_write_byte_data(cygpio->client, REG_PORT_SELECT, port);
   if (ret < 0) {
          dev err(chip->parent, "can't select port %u\n", port);
          goto err;
   }
   ret = i2c smbus read byte data(cygpio->client, REG PIN DIR);
   if (ret < 0) {
          dev_err(chip->parent, "can't read pin direction\n");
          goto err;
   }
   /* simply transform int to u8 */
   pins = (u8)ret & 0xff;
   /* add the direction of the new pin. Set 1 if input and set 0 is output */
   pins &= ~BIT(cypress_get_offs(gpio, port));
   ret = i2c smbus write byte data(cygpio->client, REG PIN DIR, pins);
   if (ret < 0) {
          dev err(chip->parent, "can't write pin direction\n");
   }
err:
   mutex unlock(&cygpio->lock);
   cy8c9520a gpio set(chip, gpio, val);
   return ret;
}
 * struct gpio chip direction input callback function.
```

```
* It configures the GPIO as an input writing to
 * the REG PIN DIR register of the selected port
*/
static int cy8c9520a gpio direction input(struct gpio chip *chip,
                                          unsigned int gpio)
{
   int ret:
   u8 pins, port;
   struct cy8c9520a *cygpio = gpiochip get data(chip);
   /* gets the port number of the gpio */
   port = cypress_get_port(gpio);
   dev info(chip->parent, "cy8c9520a gpio direction input is called\n");
   mutex_lock(&cygpio->lock);
   /* select the port where we want to config the GPIO as input */
   ret = i2c smbus write byte data(cygpio->client, REG PORT SELECT, port);
   if (ret < 0) {
          dev_err(chip->parent, "can't select port %u\n", port);
          goto err;
   }
   ret = i2c smbus read byte data(cygpio->client, REG PIN DIR);
   if (ret < 0) {
          dev err(chip->parent, "can't read pin direction\n");
          goto err;
   }
   /* simply transform int to u8 */
   pins = (u8)ret & 0xff;
   /*
    * add the direction of the new pin.
    * Set 1 if input (out == 0) and set 0 is ouput (out == 1)
    */
   pins |= BIT(cypress get offs(gpio, port));
   ret = i2c smbus write byte data(cygpio->client, REG PIN DIR, pins);
   if (ret < 0) {
          dev err(chip->parent, "can't write pin direction\n");
          goto err;
   }
err:
   mutex_unlock(&cygpio->lock);
```

```
return ret;
}
/* function to lock access to slow bus (i2c) chips */
static void cy8c9520a irq bus lock(struct irq data *d)
   struct gpio chip *chip = irq data get irq chip data(d);
   struct cy8c9520a *cygpio = gpiochip get data(chip);
   dev info(chip->parent, "cy8c9520a irq bus lock is called\n");
   mutex lock(&cygpio->irq lock);
}
/*
* function to sync and unlock slow bus (i2c) chips
* REG INTR MASK register is accessed via I2C
 * write 0 to the interrupt mask register line to
 * activate the interrupt on the GPIO
 */
static void cy8c9520a irq bus sync unlock(struct irq data *d)
   struct gpio chip *chip = irq data get irq chip data(d);
   struct cy8c9520a *cygpio = gpiochip get data(chip);
   int ret. i:
   unsigned int gpio;
   u8 port;
   dev info(chip->parent, "cy8c9520a irq bus sync unlock is called\n");
   /* unmask the interrupt of the selected GPIO */
   gpio = d->hwirq;
   port = cypress_get_port(gpio);
   cygpio->irq_mask[port] &= ~BIT(cypress_get_offs(gpio, port));
   /* irq mask cache stores the last value of irq mask for each port */
   for (i = 0; i < NPORTS; i++) {
          /*
           * check if some of the bits have changed from the last cached value
           * irq mask registers were initialized in cy8c9520a_irq_setup()
          if (cygpio->irq mask cache[i] ^ cygpio->irq mask[i]) {
                 dev info(chip->parent, "gpio %u is unmasked\n", gpio);
                  cygpio->irq mask cache[i] = cygpio->irq mask[i];
                 ret = i2c smbus write byte data(cygpio->client,
                                                 REG PORT SELECT, i);
                 if (ret < 0) {
                         dev_err(chip->parent, "can't select port %u\n", port);
                         goto err;
                 }
```

```
/* enable the interrupt for the GPIO unmasked */
                  ret = i2c smbus write byte data(cygpio->client, REG INTR MASK,
                                                 cygpio->irq mask[i]);
                  if (ret < 0) {
                         dev_err(chip->parent,
                                "can't write int mask on port %u\n", port);
                         goto err;
                  }
                  ret = i2c smbus read byte data(cygpio->client, REG INTR MASK);
                  dev info(chip->parent, "the REG INTR MASK value is %d\n", ret);
          }
   }
err:
   mutex_unlock(&cygpio->irq_lock);
}
 * mask (disable) the GPIO interrupt.
* In the initial setup all the int lines are masked
static void cy8c9520a irg mask(struct irg data *d)
{
   u8 port;
   struct gpio chip *chip = irq data get irq chip data(d);
   struct cy8c9520a *cygpio = gpiochip get data(chip);
   unsigned gpio = d->hwirq;
   port = cypress get port(gpio);
   dev_info(chip->parent, "cy8c9520a_irq_mask is called\n");
   cygpio->irq_mask[port] |= BIT(cypress_get_offs(gpio, port));
}
 * unmask (enable) the GPIO interrupt.
* In the initial setup all the int lines are masked
static void cy8c9520a irq unmask(struct irq data *d)
   u8 port;
   struct gpio chip *chip = irq data get irq chip data(d);
   struct cy8c9520a *cygpio = gpiochip get data(chip);
   unsigned gpio = d->hwirq;
   port = cypress get port(gpio);
   dev_info(chip->parent, "cy8c9520a_irq_unmask is called\n");
```

```
cygpio->irq_mask[port] &= ~BIT(cypress_get_offs(gpio, port));
}
/* set the flow type (IRQ TYPE LEVEL/etc.) of the IRQ */
static int cy8c9520a_irq_set_type(struct irq_data *d, unsigned int type)
   int ret = 0:
   struct gpio_chip *chip = irq_data_get_irq_chip_data(d);
   struct cy8c9520a *cygpio = gpiochip_get_data(chip);
   dev info(chip->parent, "cy8c9520a irq set type is called\n");
   if ((type != IRQ_TYPE_EDGE_BOTH) && (type != IRQ_TYPE_EDGE_FALLING)) {
          dev err(&cygpio->client->dev, "irq %d: unsupported type %d\n",
                 d->irq, type);
          ret = -EINVAL;
          goto err;
   }
err:
   return ret;
/* Iinitialization of the irq chip structure with callback functions */
static struct irq_chip cy8c9520a_irq_chip = {
                         = "cy8c9520a-irq",
   .name
   .irq mask
                         = cy8c9520a irq mask,
   .irq unmask
                       = cy8c9520a irq unmask,
   .irq_bus_lock
                        = cy8c9520a_irq_bus_lock,
   .irq_bus_sync_unlock = cy8c9520a_irq_bus sync unlock,
   .irq_set_type
                       = cy8c9520a_irq_set_type,
};
 * interrupt handler for the cy8c9520a. It is called when
* there is a rising or falling edge in the unmasked GPIO
static irgreturn t cy8c9520a irg handler(int irg, void *devid)
   struct cy8c9520a *cygpio = devid;
   u8 stat[NPORTS], pending;
   unsigned port, gpio, gpio irq;
   int ret;
   pr_info ("the interrupt ISR has been entered\n");
   /*
```

```
* store in stat and clear (to enable ints)
    * the three interrupt status registers by reading them
    */
   ret = i2c smbus read i2c block data(cygpio->client,
                                       REG INTR STAT PORTO,
                                       NPORTS, stat);
   if (ret < 0) {
          memset(stat, 0, sizeof(stat));
   }
   ret = IRQ NONE;
   for (port = 0; port < NPORTS; port ++) {</pre>
          mutex_lock(&cygpio->irq_lock);
           * In every port check the GPIOs that have their int unmasked
           * and whose bits have been enabled in their REG_INTR_STAT_PORT
           * register due to an interrupt in the GPIO, and store the new
           * value in the pending register
           */
          pending = stat[port] & (~cygpio->irq mask[port]);
          mutex unlock(&cygpio->irq lock);
          /* Launch the ISRs of all the gpios that requested an interrupt */
          while (pending) {
                  ret = IRQ HANDLED;
                  /* get the first gpio that has got an int */
                  gpio = ffs(pending);
                  /* clears the gpio in the pending register */
                  pending &= ~BIT(gpio);
                  /* gets the int number associated to this gpio */
                  gpio irq = cy8c9520a port offs[port] + gpio;
                  /* launch the ISR of the GPIO child driver */
                  handle_nested_irq(irq_find_mapping(cygpio->gpio_chip.irq.domain,
                                           gpio irq));
          }
   }
   return ret;
}
/* Initial setup for the cy8c9520a */
static int cy8c9520a_setup(struct cy8c9520a *cygpio)
```

```
{
   int ret, i;
   struct i2c_client *client = cygpio->client;
   /* Disable PWM, set all GPIOs as input. */
   for (i = 0; i < NPORTS; i ++) {
          ret = i2c smbus write byte data(client, REG PORT SELECT, i);
          if (ret < 0) {
                  dev err(&client->dev, "can't select port %u\n", i);
                  goto end;
          }
          ret = i2c_smbus_write_byte_data(client, REG_SELECT_PWM, 0x00);
          if (ret < 0) {
                  dev err(&client->dev, "can't write to SELECT PWM\n");
                  goto end;
          }
          ret = i2c smbus write byte data(client, REG PIN DIR, 0xff);
          if (ret < 0) {
                  dev err(&client->dev, "can't write to PIN DIR\n");
                  goto end;
          }
   }
   /* Cache the output registers (Output Port 0, Output Port 1, Output Port 2) */
   ret = i2c smbus read i2c block data(client, REG OUTPUT PORTO,
                                       sizeof(cygpio->outreg cache),
                                       cygpio->outreg cache);
   if (ret < 0) {
          dev err(&client->dev, "can't cache output registers\n");
          goto end;
   }
   dev_info(&client->dev, "the cy8c9520a_setup is done\n");
end:
   return ret;
}
/* Interrupt setup for the cy8c9520a */
static int cy8c9520a irq setup(struct cy8c9520a *cygpio)
{
   struct i2c client *client = cygpio->client;
   struct gpio chip *chip = &cygpio->gpio chip;
   u8 dummy[NPORTS];
   int ret, i;
```

```
mutex_init(&cygpio->irq_lock);
dev info(&client->dev, "the cy8c9520a irq setup function is entered\n");
 * Clear interrupt state registers by reading the three registers
 * Interrupt Status Port0, Interrupt Status Port1, Interrupt Status Port2,
 * and store the values in a dummy array
ret = i2c smbus read i2c block data(client, REG INTR STAT PORTO,
                                   NPORTS, dummy);
if (ret < 0) {
       dev_err(&client->dev, "couldn't clear int status\n");
       goto err;
}
dev info(&client->dev, "the interrupt state registers are cleared\n");
 * Initialise Interrupt Mask Port Register (19h) for each port
 * Disable the activation of the INT lines. Each 1 in this
 * register masks (disables) the int from the corresponding GPIO
 */
memset(cygpio->irq mask cache, 0xff, sizeof(cygpio->irq mask cache));
memset(cygpio->irq mask, 0xff, sizeof(cygpio->irq mask));
/* Disable interrupts in all the gpio lines */
for (i = 0; i < NPORTS; i++) {
       ret = i2c smbus write byte data(client, REG PORT SELECT, i);
       if (ret < 0) {
              dev err(&client->dev, "can't select port %u\n", i);
              goto err;
       }
       ret = i2c smbus write byte data(client, REG INTR MASK,
                                    cygpio->irq mask[i]);
       if (ret < 0) {
              dev_err(&client->dev,
                      "can't write int mask on port %u\n", i);
              goto err;
       }
}
dev info(&client->dev, "the interrupt mask port registers are set\n");
/* add a nested irqchip to the gpiochip */
ret = gpiochip irqchip add nested(chip,
                                  &cy8c9520a irq chip,
```

```
0,
                                      handle simple irq,
                                      IRQ TYPE NONE);
   if (ret) {
          dev err(&client->dev,
                  "could not connect irachip to gpiochip\n");
          return ret:
   }
   /*
    * Request interrupt on a GPIO pin of the external processor
    * this processor pin is connected to the INT pin of the cy8c9520a
    */
   ret = devm_request_threaded_irq(&client->dev, client->irq, NULL,
                                   cy8c9520a irq handler,
                                   IRQF ONESHOT | IRQF TRIGGER HIGH,
                                   dev name(&client->dev), cygpio);
   if (ret) {
          dev_err(&client->dev, "failed to request irq %d\n", cygpio->irq);
                  return ret;
   }
    * set up a nested irq handler for a gpio_chip from a parent IRQ
    * you can now request interrupts from GPIO child drivers nested
    * to the cy8c9520a driver
   gpiochip set nested irqchip(chip,
                               &cy8c9520a irq chip,
                               cygpio->irq);
   dev_info(&client->dev, "the interrupt setup is done\n");
   return 0;
err:
   mutex destroy(&cygpio->irq lock);
   return ret;
* Initialize the cy8c9520a gpio controller (struct gpio chip)
* and register it to the kernel
static int cy8c9520a gpio init(struct cy8c9520a *cygpio)
   struct gpio_chip *gpiochip = &cygpio->gpio_chip;
   int err;
```

}

```
gpiochip->label = cygpio->client->name;
   gpiochip->base = -1;
   gpiochip->ngpio = NGPIO;
   gpiochip->parent = &cygpio->client->dev;
   gpiochip->of node = gpiochip->parent->of node;
   gpiochip->can sleep = true;
   gpiochip->direction input = cy8c9520a gpio direction input;
   gpiochip->direction output = cy8c9520a gpio direction output;
   gpiochip->get = cy8c9520a gpio get;
   gpiochip->set = cy8c9520a gpio set;
   gpiochip->owner = THIS MODULE;
   /* register a gpio_chip */
   err = devm_gpiochip_add_data(gpiochip->parent, gpiochip, cygpio);
   if (err)
          return err;
   return 0;
}
static int cy8c9520a probe(struct i2c client *client,
                           const struct i2c device id *id)
{
   struct cy8c9520a *cygpio;
   int ret;
   unsigned int dev id;
   dev info(&client->dev, "cy8c9520a probe() function is called\n");
   if (!i2c check functionality(client->adapter,
                                 I2C_FUNC_SMBUS_I2C_BLOCK |
                                 12C FUNC SMBUS BYTE DATA)) {
          dev_err(&client->dev, "SMBUS Byte/Block unsupported\n");
          return -EIO;
   }
   /* allocate global private structure for a new device */
   cygpio = devm kzalloc(&client->dev, sizeof(*cygpio), GFP KERNEL);
   if (!cygpio) {
          dev err(&client->dev, "failed to alloc memory\n");
          return - ENOMEM;
   }
   cygpio->client = client;
   mutex init(&cygpio->lock);
   /* Whoami */
   dev_id = i2c_smbus_read_byte_data(client, REG_DEVID_STAT);
```

```
if (dev_id < 0) {
          dev_err(&client->dev, "can't read device ID\n");
          ret = dev id;
          goto err;
   dev_info(&client->dev, "dev_id=0x%x\n", dev_id & 0xff);
   /* Initial setup for the cy8c9520a */
   ret = cy8c9520a_setup(cygpio);
   if (ret < 0) {
          goto err;
   }
   /* Initialize the cy8c9520a gpio controller */
   ret = cy8c9520a gpio init(cygpio);
   if (ret) {
          goto err;
   }
   /* Interrupt setup for the cy8c9520a */
   ret = cy8c9520a_irq_setup(cygpio);
   if (ret) {
          goto err;
   }
   /* link the I2C device with the cygpio device */
   i2c_set_clientdata(client, cygpio);
   return 0;
err:
   mutex_destroy(&cygpio->lock);
   return ret;
static int cy8c9520a remove(struct i2c client *client)
   dev info(&client->dev, "cy8c9520a remove() function is called\n");
   return 0;
static const struct of device id my of ids[] = {
   { .compatible = "cy8c9520a"},
   {},
};
MODULE_DEVICE_TABLE(of, my_of_ids);
```

}

}

```
static const struct i2c_device_id cy8c9520a_id[] = {
   {DRV_NAME, 0},
   {}
};
MODULE_DEVICE_TABLE(i2c, cy8c9520a_id);
static struct i2c_driver cy8c9520a_driver = {
   .driver = {
              .name = DRV NAME,
              .of_match_table = my_of_ids,
              .owner = THIS MODULE,
   .probe = cy8c9520a_probe,
   .remove = cy8c9520a_remove,
   .id table = cy8c9520a id,
};
module_i2c_driver(cy8c9520a_driver);
MODULE LICENSE("GPL v2");
MODULE AUTHOR("Alberto Liberal <aliberal@arroweurope.com>");
MODULE DESCRIPTION("This is a driver that controls the \
                   cy8c9520a I2C GPIO expander");
```

LAB 7.4 GPIO child driver description

You will develop a GPIO child driver (int_stm32mp1_gpio) now, which will request a GPIO IRQ from the CY8C9520A gpio controller. You will use the LAB 7.1: "button interrupt device" Module of this book as a starting point for the development of the driver. Whenever there is a change in the first input line of the CY8C9520A P0 port, the IRQ interrupt will be asserted by the CY8C9520A GPIO controller, and its interrupt handler cy8c9520a_irq_handler() will be called. The CY8C9520A driver's interrupt handler will call handle_nested_irq(), which in turn calls the interrupt handler P0 line0 isr() of our GPIO child driver.

The GPIO child driver will request the GPIO INT by using the devm_request_threaded_irq() function. Before calling this function, the driver will return the Linux IRQ number from the device tree by using the platform_get_irq() function.

See below the device-tree configuration for the int_stm32mp1_gpio device that should be included in the the stm32mp15xx-dkx.dtsi DT file. Check the differences with the int_key node of the LAB 7.1: "button interrupt device" Module that was taken as a reference for the development of this driver.

In our new driver the interrupt-parent is the cy8c9520a node of our CY8C9520A gpio controller driver and the GPIO interrupt line included in the interrupts property has the number 0, which matchs with the first input line of the CY8C9520A P0 controller.

See in the next **Listing 7-5** the complete "GPIO child device" driver source code for the STM32MP1 processor.

Note: The "GPIO child device" driver source code developed for the STM32MP157C-DK2 board is included in the linux_5.4_CY8C9520A_driver.zip file under the linux_5.4_gpio_int_driver folder and can be downloaded from the GitHub repository at https://github.com/ALIBERA/linux_book_2nd_edition

Listing 7-5: int_stm32mp1_gpio.c

```
#include <linux/module.h>
#include <linux/platform_device.h>
#include <linux/interrupt.h>
#include <linux/gpio/consumer.h>
#include <linux/miscdevice.h>
#include <linux/of_device.h>

static char *INT_NAME = "P0_line0_INT";

/* interrupt handler */
static irqreturn_t P0_line0_isr(int irq, void *data)
{
    struct device *dev = data;
    dev_info(dev, "interrupt received. key: %s\n", INT_NAME);
    return IRQ_HANDLED;
}

static struct miscdevice helloworld_miscdevice = {
        .minor = MISC_DYNAMIC_MINOR,
```

```
.name = "mydev",
};
static int my probe(struct platform device *pdev)
   int ret_val, irq;
   struct device *dev = &pdev->dev;
   dev info(dev, "my probe() function is called.\n");
   /* Get the Linux IRQ number */
   irq = platform get irq(pdev, 0);
   if (irq < 0){
          dev_err(dev, "irq is not available\n");
          return -EINVAL;
   dev_info(dev, "IRQ_using_platform_get_irq: %d\n", irq);
   /* Allocate the interrupt line */
   ret val = devm request threaded irq(dev, irq, NULL, P0 line0 isr,
                            IRQF ONESHOT | IRQF TRIGGER FALLING |
IRQF TRIGGER RISING,
                            INT NAME, dev);
   if (ret val) {
          dev_err(dev, "Failed to request interrupt %d, error %d\n", irq,
ret_val);
          return ret val;
   }
   ret_val = misc_register(&helloworld_miscdevice);
   if (ret_val != 0)
          dev err(dev, "could not register the misc device mydev\n");
          return ret_val;
   }
   dev_info(dev, "mydev: got minor %i\n",helloworld_miscdevice.minor);
   dev info(dev, "my probe() function is exited.\n");
   return 0;
}
static int my_remove(struct platform_device *pdev)
   dev info(&pdev->dev, "my remove() function is called.\n");
   misc deregister(&helloworld miscdevice);
   dev_info(&pdev->dev, "my_remove() function is exited.\n");
   return 0:
```

```
}
static const struct of device id my of ids[] = {
   { .compatible = "arrow, int gpio expand"},
   {},
};
MODULE DEVICE TABLE(of, my of ids);
static struct platform_driver my_platform_driver = {
   .probe = my_probe,
   .remove = my_remove,
   .driver = {
           .name = "int gpio expand",
           .of match table = my of ids,
           .owner = THIS_MODULE,
   }
};
module platform driver(my platform driver);
MODULE LICENSE("GPL");
MODULE_AUTHOR("Alberto Liberal <aliberal@arroweurope.com>");
MODULE DESCRIPTION("This is a GPIO INT platform driver");
```

LAB 7.4 GPIO based IRQ application

In the previous section you have seen how to request and handle a GPIO IRQ by using a GPIO child driver. In the following **Listing 7-6**, you will see how to request and handle an interrupt from the user space for the first line of the CY8C9520A P0 port. You will use the GPIOlib user space APIs, that will handle the GPIO INT through local calls on the char device file /dev/gpiochip10.

Note: The "GPIO based IRQ application" source code developed for the STM32MP157C-DK2 board is included in the linux_5.4_CY8C9520A_driver.zip file under the app folder and can be downloaded from the GitHub repository at https://github.com/ALIBERA/linux_book_2nd_edition

Listing 7-6: gpio_int.c

```
#include <stdio.h>
#include <stdlib.h>
#include <unistd.h>
#include <fcntl.h>
#include <poll.h>
#include <string.h>
#include <linux/gpio.h>
```

```
#include <sys/ioctl.h>
#define DEV_GPIO "/dev/gpiochip10"
#define POLL_TIMEOUT -1 /* No timeout */
int main(int argc, char *argv[])
    int fd, fd_in;
    int ret;
    int flags;
    struct gpioevent_request req;
    struct gpioevent_data evdata;
    struct pollfd fdset;
    /* open gpio */
    fd = open(DEV_GPIO, O_RDWR);
    if (fd < 0) {
        printf("ERROR: open %s ret=%d\n", DEV GPIO, fd);
        return -1;
    }
    /* Request GPIO P0 first line interrupt */
    req.lineoffset = 0;
    req.handleflags = GPIOHANDLE REQUEST INPUT;
    req.eventflags = GPIOEVENT REQUEST BOTH EDGES;
    strncpy(req.consumer_label, "gpio_irq", sizeof(req.consumer_label) - 1);
    /* requrest line event handle */
    ret = ioctl(fd, GPIO_GET_LINEEVENT_IOCTL, &req);
    if (ret) {
        printf("ERROR: ioctl get line event ret=%d\n", ret);
        return -1;
    }
    /* set event fd nonbloack read */
    fd in = req.fd;
    flags = fcntl(fd_in, F_GETFL);
    flags |= 0 NONBLOCK;
    ret = fcntl(fd_in, F_SETFL, flags);
    if (ret) {
        printf("ERROR: fcntl set nonblock read\n");
    }
    for (;;) {
        fdset.fd
                      = fd in;
        fdset.events = POLLIN;
```

```
fdset.revents = 0;
        /* poll gpio line event */
        ret = poll(&fdset, 1, POLL TIMEOUT);
        if (ret <= 0)
            continue:
        if (fdset.revents & POLLIN) {
            printf("irg received.\n");
            /* read event data */
            ret = read(fd in, &evdata, sizeof(evdata));
            if (ret == sizeof(evdata))
                printf("id: %d, timestamp: %lld\n", evdata.id, evdata.timestamp);
        }
    }
    /* close gpio */
    close(fd);
    return 0;
}
```

LAB 7.4 driver demonstration

Download the linux 5.4 CY8C9520A driver.zip file from the github of the book and unzip it in the STM32MP15-Ecosystem-v2.0.0 folder of the Linux host:

```
PC:~$ cd ~/STM32MP15-Ecosystem-v2.0.0/
```

Compile and deploy the drivers and the application to the STM32MP157C-DK2 Discovery kit:

```
~/STM32MP15-Ecosystem-v2.0.0/linux_5.4_CY8C9520A_driver$ make
    ~/STM32MP15-Ecosystem-v2.0.0/linux_5.4_CY8C9520A_driver$ make deploy
    ~/STM32MP15-Ecosystem-v2.0.0/linux_5.4_CY8C9520A_driver/linux_5.4_gpio_int_driver$
    make
    ~/STM32MP15-Ecosystem-v2.0.0/linux_5.4_CY8C9520A_driver/linux_5.4_gpio_int_driver$
    make deploy
    ~/STM32MP15-Ecosystem-v2.0.0/linux 5.4 CY8C9520A driver rev/app$ make
    ~/STM32MP15-Ecosystem-v2.0.0/linux 5.4 CY8C9520A driver/app$ make deploy
Follow the next instructions to test the drivers:
```

```
/* load the CY8C9520A module */
root@stm32mp1:~# insmod CY8C9520A stm32mp1.ko
[ 373.764568] CY8C9520A stm32mp1: loading out-of-tree module taints kernel.
  373.771612] cy8c9520a 1-0020: cy8c9520a_probe() function is called
[ 373.780939] cy8c9520a 1-0020: dev_id=0x20
```

```
373.802297] cy8c9520a 1-0020: the cy8c9520a setup is done
  373.806820] cy8c9520a 1-0020: the cy8c9520a irq setup function is entered
[ 373.816303] cy8c9520a 1-0020: the interrupt state registers are cleared
[ 373.831687] cy8c9520a 1-0020: the interrupt mask port registers are set
[ 373.837375] cy8c9520a 1-0020: the interrupt setup is done
/* Print information of all the lines of the gpiochip10 */
root@stm32mp1:~# gpioinfo gpiochip10
gpiochip10 - 20 lines:
       line
              0:
                      unnamed
                                     unused
                                              input active-high
        line
               1:
                                              input active-high
                      unnamed
                                     unused
        line
               2:
                                              input active-high
                       unnamed
                                     unused
       line
               3:
                      unnamed
                                     unused
                                              input active-high
        line
               4:
                      unnamed
                                     unused
                                              input active-high
        line
               5:
                                              input active-high
                      unnamed
                                     unused
                                              input active-high
        line
               6:
                      unnamed
                                     unused
        line
              7:
                       unnamed
                                     unused
                                              input active-high
        line
              8:
                       unnamed
                                     unused
                                              input active-high
       line
              9:
                      unnamed
                                     unused
                                              input active-high
        line 10:
                       unnamed
                                     unused
                                              input active-high
        line 11:
                                              input active-high
                       unnamed
                                     unused
        line 12:
                                              input active-high
                       unnamed
                                     unused
       line 13:
                                              input active-high
                      unnamed
                                     unused
       line 14:
                                              input active-high
                      unnamed
                                     unused
        line 15:
                                              input active-high
                      unnamed
                                     unused
        line 16:
                       unnamed
                                     unused
                                              input active-high
```

unused

unused

unused

input active-high

input active-high

input active-high

line 17:

line 18:

line 19:


unnamed

unnamed

unnamed

Connect pin 0 to pin 1 on the P0 port of the I/O Expander board

/* the gpio lines of the gpiochip10 are configured with internal pull-up to Vcc */

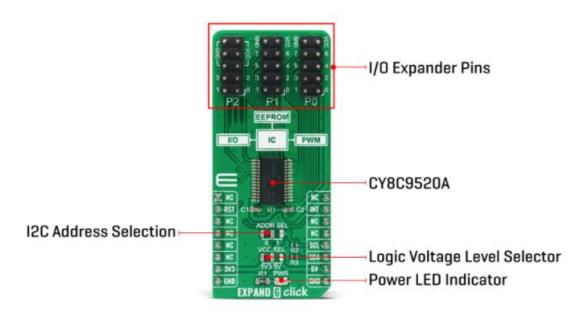

```
/* set to high level the pin 1 of P0 */
root@stm32mp1:~# gpioset gpiochip10 1=1
[ 318.304216] cy8c9520a 1-0020: cy8c9520a_gpio_direction output is called
[ 318.315157] cy8c9520a 1-0020: cy8c9520a_gpio_set_value function with 1 value is called

/* check the value received in the pin 0 of P0 */
root@stm32mp1:~# gpioget gpiochip10 0
[ 322.317713] cy8c9520a 1-0020: cy8c9520a_gpio_direction input is called
[ 322.328294] cy8c9520a 1-0020: cy8c9520a_gpio_get function is called
[ 322.333244] cy8c9520a 1-0020: the in_reg address is 0
[ 322.340352] cy8c9520a 1-0020: cy8c9520a_gpio_get function with 255 value is returned
```

Disconnect pin 0 and pin 1 on the P0 port of the I/O Expander pins. Handle GPIO INT in line 0 of P0 using the gpio interrupt driver

```
/* load the gpio interrupt module */
root@stm32mp1:~# insmod int stm32mp1 gpio.ko
    65.355362] int gpio expand int gpio: my probe() function is called.
    65.360469] cy8c9520a 1-0020: cy8c9520a_irq_bus_lock is called
    65.377282] cy8c9520a 1-0020: cy8c9520a irg bus sync unlock is called
    65.382796] cy8c9520a 1-0020: gpio 0 is unmasked
    65.396884] cy8c9520a 1-0020: the REG INTR MASK value is 254
   65.401255] int gpio expand int gpio: IRQ using platform get irq: 85
    65.413756] cy8c9520a 1-0020: cy8c9520a_irq_bus_lock is called
    65.418157] cy8c9520a 1-0020: cy8c9520a_irq_set_type is called
   65.424004] cy8c9520a 1-0020: cy8c9520a_irq_unmask is called
   65.436638] cy8c9520a 1-0020: cy8c9520a_irq_bus_sync_unlock is called
   65.443218] int gpio expand int gpio: mydev: got minor 61
    65.451734] int gpio expand int gpio: my probe() function is exited.
/* check the gpio interrupt with Linux IRO number 85 */
root@stm32mp1:~# cat /proc/interrupts
          CPU0
                     CPU1
                    12899
 18:
         12523
                              GIC-0 27 Level
                                                  arch timer
 20:
             0
                        0
                              GIC-0 232 Level
                                                  arm-pmu
                              GIC-0 233 Level
 21:
             0
                        0
                                                  arm-pmu
             0
 22:
                        0
                              GIC-0 68 Level
                                                  4000b000.audio-controller
             0
                              GIC-0 126 Level
 23:
                        0
                                                  40016000.cec
 24:
             0
                        0
                              GIC-0 116 Level
                                                  44005000.spi
 25:
             0
                              GIC-0 123 Level
                                                  4400b004.audio-controller,
4400b024.audio-controller
 26:
             0
                              GIC-0 43 Level
                                                  dma1chan0
                        0
 27:
           106
                        0
                              GIC-0 44 Level
                                                  dma1chan1
 28:
           218
                        0
                              GIC-0 45 Level
                                                  dma1chan2
           215
 29:
                        0
                              GIC-0 46 Level
                                                  dma1chan3
                              GIC-0 47 Level
             0
 30:
                        0
                                                  dma1chan4
             0
                              GIC-0 48 Level
                                                  dma1chan5
 31:
                        0
             0
                        0
                              GIC-0 49 Level
 32:
                                                  dma1chan6
                              GIC-0 79 Level
 33:
             0
                        0
                                                  dma1chan7
 34:
             0
                        0
                              GIC-0 88 Level
                                                  dma2chan0
 35:
             0
                        0
                              GIC-0 89 Level
                                                  dma2chan1
             0
                        0
                              GIC-0 90 Level
 36:
                                                  dma2chan2
             0
                              GIC-0 91 Level
 37:
                        0
                                                  dma2chan3
             0
                              GIC-0 92 Level
                                                  dma2chan4
 38:
                        0
 39:
             0
                        0
                              GIC-0 100 Level
                                                  dma2chan5
 40:
             0
                        0
                              GIC-0 101 Level
                                                  dma2chan6
 41:
             0
                        0
                              GIC-0 102 Level
                                                  dma2chan7
 42:
             0
                        0
                              GIC-0 37 Level
                                                  rcc irq
 44:
             0
                        0
                              GIC-0 179 Level
                                                  stm thermal
 45:
             0
                              GIC-0 112 Level
                                                  54002000.hash
```

```
46:
              0
                          0
                                GIC-0 154 Level
                                                     58000000.dma
                                                     mmci-pl18x (cmd)
 47:
          11811
                                GIC-0 81 Level
 48:
           6948
                          0
                                GIC-0 156 Level
                                                     mmci-pl18x (cmd)
 49:
            458
                          0
                                GIC-0 93 Level
                                                     eth0
 50:
           1214
                          0
                                GIC-0 120 Level
                                                     5a001000.display-controller
 51:
              0
                          0
                                GIC-0 121 Level
                                                     5a001000.display-controller
 53:
              0
                          0
                                GIC-0 111 Level
                                                     54001000.cryp
 54:
            172
                          0 stm32-exti-h-direct 27 Level
                                                                4000e000.serial
 55:
           1073
                             stm32-exti-h-direct 30 Level
                                                                40010000.serial
 56:
              0
                             stm32-exti-h-direct 70 Level
                                                                eth0
             25
 57:
                             stm32-exti-h-direct 43 Level
                                                                ehci hcd:usb2
 58:
              0
                             stm32-exti-h-direct 19 Level
                                                                5c004000.rtc
 59:
            525
                             stm32-exti-h-direct 21 Level
                                                                40012000.i2c
 60:
              0
                          0
                                GIC-0 64 Level
                                                     40012000.i2c
 61:
              0
                             stm32gpio
                                         1 Edge
                                                      0-0039
 62:
              0
                          0
                             stm32gpio
                                         2 Edge
                                                      ft6236
63:
             92
                          0
                             stm32-exti-h-direct 25 Level
                                                                40015000.i2c
 64:
              0
                          0
                                GIC-0 140 Level
                                                     40015000.i2c
 65:
            296
                          0
                             stm32-exti-h-direct 24 Level
                                                                5c002000.i2c
 66:
              0
                          0
                                GIC-0 128 Level
                                                     5c002000.i2c
67:
              0
                          0 stm32gpio 11 Edge
                                                      2-0028
 68:
              0
                             stm32-exti-h 55 Edge
                                                         pmic irq
                             pmic irq 16 Edge
69:
              0
5c002000.i2c:stpmic@33:regulators
              0
                          0
                             pmic irq
                                       17 Edge
5c002000.i2c:stpmic@33:regulators
71:
                             pmic irq
                                       19 Edge
5c002000.i2c:stpmic@33:regulators
72:
              0
                          0
                             pmic irq
                                       20 Edge
5c002000.i2c:stpmic@33:regulators
73:
              0
                             pmic irq
                                       21 Edge
5c002000.i2c:stpmic@33:regulators
74:
                                       14 Edge
              0
                             pmic irq
5c002000.i2c:stpmic@33:regulators
75:
                             pmic irq
                                       12 Edge
5c002000.i2c:stpmic@33:regulators
                             pmic irq
                                       13 Edge
5c002000.i2c:stpmic@33:regulators
77:
              0
                             pmic ira
                                        0 Edge
                                                     5c002000.i2c:stpmic@33:onkey
78:
              0
                                                     5c002000.i2c:stpmic@33:onkey
                          0
                             pmic irq
                                        1 Edge
 79:
              0
                                         7 Edge
                                                     58005000.sdmmc cd
                             stm32gpio
80:
              0
                             stm32-exti-h-direct 61 Edge
                                                                4c001000.mailbox
81:
              0
                          0
                                GIC-0 133 Level
                                                     4c001000.mailbox
              0
82:
                          0 stm32-exti-h 68 Edge
                                                         mlahb:m4@10000000
83:
              0
                          0 stm32-exti-h-direct 44 Level
                                                                49000000.usb-otg,
49000000.usb-otg, dwc2_hsotg:usb1
84:
              0
                          0 stm32gpio
                                         3 Level
                                                      1-0020
85:
              0
                          0 cy8c9520a-irq
                                                          P0_line0_INT
                                             0 Edge
```

```
IPI0:
              0
                         0 CPU wakeup interrupts
IPI1:
                         0 Timer broadcast interrupts
                      9850 Rescheduling interrupts
IPI2:
           1978
                      126 Function call interrupts
IPI3:
           145
IPI4:
              0
                         0 CPU stop interrupts
                      2965 IRQ work interrupts
IPI5:
           2789
IPI6:
                         0 completion interrupts
              0
Err:
              0
root@stm32mp1:~#
/* Connect pin 0 of P0 to GND, then disconnect it from GND. Two interrupts are
fired */
root@stm32mp1:~# [ 109.462672] the interrupt ISR has been entered
[ 109.468622] int_gpio_expand int_gpio: interrupt received. key: P0_line0_INT
[ 123.566674] the interrupt ISR has been entered
[ 123.572607] int_gpio_expand int_gpio: interrupt received. key: P0_line0_INT
/* remove the gpio int module */
root@stm32mp1:~# rmmod int stm32mp1 gpio.ko
[ 226.358291] int gpio expand int gpio: my remove() function is called.
[ 226.366632] int gpio expand int gpio: my remove() function is exited.
[ 226.371759] cy8c9520a 1-0020: cy8c9520a irq bus lock is called
[ 226.377619] cy8c9520a 1-0020: cy8c9520a irg mask is called
[ 226.382987] cy8c9520a 1-0020: cy8c9520a irg bus sync unlock is called
[ 226.389667] cy8c9520a 1-0020: cy8c9520a irq bus lock is called
[ 226.395447] cy8c9520a 1-0020: cy8c9520a irq bus sync unlock is called
/* remove the CY8C9520A module */
root@stm32mp1:~# rmmod CY8C9520A stm32mp1.ko
[ 299.364202] cy8c9520a 1-0020: cy8c9520a remove() function is called
Handle GPIO INT in line 0 of PO using a GPIO based interrupt application
/* load the CY8C9520A module */
root@stm32mp1:~# insmod CY8C9520A stm32mp1.ko
/* Launch the gpiomon application */
root@stm32mp1:~# gpiomon --falling-edge gpiochip10 0
    75.144142] cy8c9520a 1-0020: cy8c9520a gpio direction input is called
    75.157681] cy8c9520a 1-0020: cy8c9520a irq bus lock is called
Γ
   75.162219] cy8c9520a 1-0020: cy8c9520a irq bus sync unlock is called
   75.172701] cy8c9520a 1-0020: gpio 0 is unmasked
   75.183485] cy8c9520a 1-0020: the REG INTR MASK value is 254
   75.190147] cy8c9520a 1-0020: cy8c9520a irq bus lock is called
   75.196890] cy8c9520a 1-0020: cy8c9520a irg set type is called
   75.201293] cv8c9520a 1-0020: cv8c9520a irg unmask is called
   75.211559] cy8c9520a 1-0020: cy8c9520a irq bus sync unlock is called
/* Now connect pin 0 of P0 to GND. An interrupt is fired */
[ 133.764344] the interrupt ISR has been entered
event: FALLING EDGE offset: 0 timestamp: [1581090779.659029102]
```

```
/* Disconnect pin 0 of P0 from GND. An interrupt is fired */
[ 134.022438] the interrupt ISR has been entered
event: FALLING EDGE offset: 0 timestamp: [1581090779.917628185]
/* Exit application with Ctrl+C */
^C[ 272.381756] cy8c9520a 1-0020: cy8c9520a irg bus lock is called
[ 272.386313] cy8c9520a 1-0020: cy8c9520a irq mask is called
[ 272.391818] cy8c9520a 1-0020: cy8c9520a_irq_bus_sync unlock is called
[ 272.398294] cy8c9520a 1-0020: cy8c9520a irg bus lock is called
[ 272.404159] cy8c9520a 1-0020: cy8c9520a irg bus sync unlock is called
/* Launch now the gpio_int application. Connect pin 0 of P0 to GND, then remove it
from GND. Two interrupts are fired */
root@stm32mp1:~# ./gpio int
    57.807981] cy8c9520a 1-0020: cy8c9520a gpio direction input is called
    57.819284] cy8c9520a 1-0020: cy8c9520a irq bus lock is called
    57.824075] cy8c9520a 1-0020: cy8c9520a_irq_bus_sync_unlock is called
    57.830155] cy8c9520a 1-0020: gpio 0 is unmasked
    57.849225] cy8c9520a 1-0020: the REG INTR MASK value is 254
    57.856408] cy8c9520a 1-0020: cy8c9520a irq bus lock is called
    57.860806] cy8c9520a 1-0020: cy8c9520a irq set type is called
   57.866652] cy8c9520a 1-0020: cy8c9520a irg unmask is called
   57.882486] cy8c9520a 1-0020: cy8c9520a irq bus sync unlock is called
   69.954568] the interrupt ISR has been entered
   69.960525] cy8c9520a 1-0020: cy8c9520a gpio get function is called
   69.965476] cy8c9520a 1-0020: the in reg address is 0
   69.972588] cy8c9520a 1-0020: cy8c9520a gpio get function with 254 value is
returned
irq received.
id: 2, timestamp: 1581090715846627697
   90.880925] the interrupt ISR has been entered
   90.886890] cy8c9520a 1-0020: cy8c9520a gpio get function is called
    90.891738] cy8c9520a 1-0020: the in reg address is 0
   90.898983] cy8c9520a 1-0020: cy8c9520a gpio get function with 255 value is
returned
ira received.
id: 1, timestamp: 1581090736772991498
^C[ 104.312407] cy8c9520a 1-0020: cy8c9520a irq bus lock is called
[ 104.317061] cy8c9520a 1-0020: cy8c9520a irq mask is called
[ 104.322305] cy8c9520a 1-0020: cy8c9520a irq bus sync unlock is called
[ 104.328875] cy8c9520a 1-0020: cy8c9520a irg bus lock is called
[ 104.334756] cy8c9520a 1-0020: cy8c9520a irg bus sync unlock is called
```