

Arm® SBSA ACS Bare-metal

Version 7.1

User Guide

Non-Confidential

Issue 01

Copyright © 2020–2023 Arm Limited (or its affiliates). $102311_0701_01_en$ All rights reserved.



Arm® SBSA ACS Bare-metal

User Guide

Copyright © 2020–2023 Arm Limited (or its affiliates). All rights reserved.

Release Information

Document history

| Issue | Date | Confidentiality | Change |
|---------|-------------------|------------------|--------------------------|
| 0100-01 | 25 November 2020 | Non-Confidential | First release |
| 0100-02 | 25 March 2021 | Non-Confidential | Second release |
| 0100-03 | 11 May 2021 | Non-Confidential | Third release |
| 0301-01 | 27 September 2021 | Non-Confidential | Fourth release |
| 0302-01 | 26 July 2022 | Non-Confidential | Fifth release |
| 0701-01 | 28 March 2023 | Non-Confidential | REL 7.1.1 BETA-1 release |

Proprietary Notice

This document is protected by copyright and other related rights and the practice or implementation of the information contained in this document may be protected by one or more patents or pending patent applications. No part of this document may be reproduced in any form by any means without the express prior written permission of Arm. No license, express or implied, by estoppel or otherwise to any intellectual property rights is granted by this document unless specifically stated.

Your access to the information in this document is conditional upon your acceptance that you will not use or permit others to use the information for the purposes of determining whether implementations infringe any third party patents.

THIS DOCUMENT IS PROVIDED "AS IS". ARM PROVIDES NO REPRESENTATIONS AND NO WARRANTIES, EXPRESS, IMPLIED OR STATUTORY, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY, SATISFACTORY QUALITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE WITH RESPECT TO THE DOCUMENT. For the avoidance of doubt, Arm makes no representation with respect to, and has undertaken no analysis to identify or understand the scope and content of, patents, copyrights, trade secrets, or other rights.

This document may include technical inaccuracies or typographical errors.

TO THE EXTENT NOT PROHIBITED BY LAW, IN NO EVENT WILL ARM BE LIABLE FOR ANY DAMAGES, INCLUDING WITHOUT LIMITATION ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, PUNITIVE, OR CONSEQUENTIAL DAMAGES, HOWEVER CAUSED AND REGARDLESS OF THE THEORY OF LIABILITY, ARISING OUT OF ANY USE OF THIS DOCUMENT, EVEN IF ARM HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

This document consists solely of commercial items. You shall be responsible for ensuring that any use, duplication or disclosure of this document complies fully with any relevant export laws and regulations to assure that this document or any portion thereof is not exported, directly or indirectly, in violation of such export laws. Use of the word "partner" in reference to Arm's customers is not intended to create or refer to any partnership relationship with any other company. Arm may make changes to this document at any time and without notice.

This document may be translated into other languages for convenience, and you agree that if there is any conflict between the English version of this document and any translation, the terms of the English version of the Agreement shall prevail.

The Arm corporate logo and words marked with ® or ™ are registered trademarks or trademarks of Arm Limited (or its affiliates) in the US and/or elsewhere. All rights reserved. Other brands and names mentioned in this document may be the trademarks of their respective owners. Please follow Arm's trademark usage guidelines at https://www.arm.com/company/policies/trademarks.

Copyright © 2020–2023 Arm Limited (or its affiliates). All rights reserved.

Arm Limited. Company 02557590 registered in England.

110 Fulbourn Road, Cambridge, England CB1 9NJ.

(LES-PRE-20349|version 21.0)

Confidentiality Status

This document is Non-Confidential. The right to use, copy and disclose this document may be subject to license restrictions in accordance with the terms of the agreement entered into by Arm and the party that Arm delivered this document to.

Unrestricted Access is an Arm internal classification.

Product Status

The information in this document is for a Beta product, that is a product under development.

Feedback on content

Information about how to give feedback on the content.

If you have comments on content then send an e-mail to support-systemready-acs@arm.com. Give:

- The title Arm® SBSA ACS Bare-metal User Guide.
- The number 102311_0701_01_en.
- If applicable, the page number(s) to which your comments refer.
- A concise explanation of your comments.

Arm also welcomes general suggestions for additions and improvements.



Arm tests the PDF only in Adobe Acrobat and Acrobat Reader, and cannot guarantee the quality of the represented document when used with any other PDF reader.

Inclusive language commitment

Arm values inclusive communities. Arm recognizes that we and our industry have used language that can be offensive. Arm strives to lead the industry and create change.

This document includes language that can be offensive. We will replace this language in a future issue of this document.

To report offensive language in this document, email terms@arm.com.

Contents

| 1. Introduction | |
|--|----|
| 1.1 Conventions | |
| 1.2 Useful resources | 3 |
| 1.3 Other information | 9 |
| 2. Overview to SBSA ACS | 10 |
| 2.1 Abbreviations | |
| 2.2 SBSA ACS | 11 |
| 2.3 ACS design | 11 |
| 2.4 Steps to customize bare-metal code | |
| 2.4.1 Test components | 12 |
| 3. Execution of SBSA ACS | 14 |
| 3.1 SoC emulation environment | |
| 3.1.1 PE | 12 |
| 3.1.2 PCle | 16 |
| 3.1.3 DMA | 17 |
| 3.1.4 SMMU and device tests | 18 |
| 3.1.5 GIC | 21 |
| 3.1.6 Timer | 22 |
| 3.1.7 Watchdog timer | 23 |
| 3.1.8 Memory | 24 |
| 3.1.9 MPAM | 25 |
| 3.1.10 HMAT | 26 |
| 3.1.11 RAS | 27 |
| 3.1.12 PMU | 28 |
| 4. Porting requirements | 29 |
| 4.1 PAL implementation | 29 |
| 4.1.1 PE | 29 |
| 4.1.2 GIC | 30 |
| 4.1.3 Timer | 30 |
| 4 1 4 IOVIRT | 30 |

| 4.1.5 PCle | 31 |
|----------------------------|----|
| 4.1.6 SMMU | 32 |
| 4.1.7 Peripheral | 33 |
| 4.1.8 MPAM | 33 |
| 4.1.9 RAS | 34 |
| 4.1.10 DMA | |
| 4.1.11 Exerciser | 35 |
| 4.1.12 Miscellaneous | 35 |
| 5. SBSA ACS flow | |
| 5.1 SBSA ACS flow diagram | 37 |
| 5.2 SBSA test example flow | 38 |
| A. Revisions | 39 |
| A.1 Revisions | 39 |

1. Introduction

1.1 Conventions

The following subsections describe conventions used in Arm documents.

Glossary

The Arm® Glossary is a list of terms used in Arm documentation, together with definitions for those terms. The Arm Glossary does not contain terms that are industry standard unless the Arm meaning differs from the generally accepted meaning.

See the Arm Glossary for more information: developer.arm.com/glossary.

| Convention | Use |
|----------------------------|--|
| italic | Citations. |
| bold | Terms in descriptive lists, where appropriate. |
| monospace | Text that you can enter at the keyboard, such as commands, file and program names, and source code. |
| monospace <u>underline</u> | A permitted abbreviation for a command or option. You can enter the underlined text instead of the full command or option name. |
| <and></and> | Encloses replaceable terms for assembler syntax where they appear in code or code fragments. For example: |
| | MRC p15, 0, <rd>, <crn>, <crm>, <opcode_2></opcode_2></crm></crn></rd> |
| SMALL CAPITALS | Terms that have specific technical meanings as defined in the Arm® Glossary. For example, IMPLEMENTATION DEFINED, IMPLEMENTATION SPECIFIC, UNKNOWN, and UNPREDICTABLE. |



Recommendations. Not following these recommendations might lead to system failure or damage.



Requirements for the system. Not following these requirements might result in system failure or damage.



Requirements for the system. Not following these requirements will result in system failure or damage.



An important piece of information that needs your attention.



A useful tip that might make it easier, better or faster to perform a task.



A reminder of something important that relates to the information you are reading.

1.2 Useful resources

This document contains information that is specific to this product. See the following resources for other useful information.

Access to Arm documents depends on their confidentiality:

- Non-Confidential documents are available at developer.arm.com/documentation. Each document link in the following tables goes to the online version of the document.
- Confidential documents are available to licensees only through the product package.

Table 1-2: Arm publications

| Document name | Document ID | Licensee only |
|--|-----------------------|---------------|
| Arm® SBSA Architecture Compliance Test Scenario | PJDOC-2042731200-3439 | No |
| Arm® SBSA Architecture Compliance User Guide | 101547 | No |
| Arm® SBSA Architecture Compliance Validation Methodology | 101544 | No |



Arm tests its PDFs only in Adobe Acrobat and Acrobat Reader. Arm cannot guarantee the quality of its documents when used with any other PDF reader.

Adobe PDF reader products can be downloaded at http://www.adobe.com.

1.3 Other information

See the Arm® website for other relevant information.

- Arm[®] Developer.
- Arm® Documentation.
- Technical Support.
- Arm® Glossary.

2. Overview to SBSA ACS

This chapter provides an overview on Arm SBSA ACS, the ACS design, and steps to customize the bare-metal code.

2.1 Abbreviations

The following table lists the abbreviations used in this document.

Table 2-1: Abbreviations and expansions

| Abbreviation | Expansion |
|--------------|--|
| ACS | Architecture Compliance Suite |
| DMA | Direct Memory Access |
| ECAM | Enhanced Configuration Access Mechanism |
| GIC | Generic Interrupt Controller |
| HMAT | Heterogenous Memory Attribute Table |
| IORT | Input Output Remapping Table |
| IOVIRT | Input Output Virtualization |
| ITS | Interrupt Translation Service |
| MPAM | Memory System Resource Partitioning and Monitoring |
| MPIDR | Multiprocessor ID Register |
| MSI | Message-Signaled Interrupt |
| PAL | Platform Abstraction Layer |
| PCle | Peripheral Component Interconnect Express |
| PE | Processing Element |
| PMU | Performance Monitoring Unit |
| PPTT | Processor Properties Topology Table |
| RAS | Reliability, Availability, and Serviceability |
| RC | Root Complex |
| RP | Root Port |
| SBSA | Server Base System Architecture |
| SoC | System on Chip |
| SMC | Secure Monitor Call |
| SMMU | System Memory Management Unit |
| SRAT | System Resource Affinity Table |
| UART | Universal Asynchronous Receiver and Transmitter |
| UEFI | Unified Extensible Firmware Interface |
| VAL | Validation Abstraction Layer |

2.2 SBSA ACS

Arm specifies a hardware system architecture which is based on Arm 64-bit architecture that server system software such as operating systems, hypervisors, and firmware can rely on. This ensures standard system architecture to enable a suitably built single OS image to run on all the hardware compliant with this specification.

Arm provides a test suite named Architecture Compliance Suite (ACS) which contains self-checking portable C-based test cases to verify the compliance of hardware platforms to Server Base System Architecture (SBSA).

For more information on Arm SBSA ACS, see the README.

2.3 ACS design

The ACS is designed in a layered architecture that consists of the following components:

- Platform Abstraction Layer (PAL) is a C-based, Arm-defined API that you can implement. It
 abstracts features whose implementation varies from one target system to another. Each test
 platform requires a PAL implementation of its own. PAL APIs are meant for the compliance test
 to reach or use other abstractions in the test platform such as the UEFI infrastructure and baremetal abstraction.
 - For each component, PAL implementation must populate a data structure which involves supplying SoC-specific information such as base addresses, IRQ numbers, capabilities of PE, PCIe, RC, SMMU, DMA, and others.
 - PAL also uses client drivers underneath to retrieve certain device-specific information and to configure the devices.
- Validation Abstraction Layer (VAL) provides an abstraction over PAL and does not change based on the platform. This layer uses PAL layer to achieve a certain functionality. The following example achieves read memory functionality.

```
val_pcie_read_cfg -> pal_pcie_read_cfg
```

- Test pool is a layer which contains a list of test cases implemented for each component.
- Application is the top-level layer which allocates memory for component-specific tables and executes the test cases for each component.

The ACS test components are classified as follows:

- PE
- GIC
- PCle
- Exerciser
- I/O virtualization
- SMMU

- Watchdog
- Memory
- MPAM
- PMU
- RAS
- HMAT
- NIST

2.4 Steps to customize bare-metal code

The following are the steps to customize bare-metal code for different platforms.



The pal baremetal reference code is located in pal_baremetal.

1. Create a directory under the pal baremetal folder.

mkdir <platform_name>

2. Copy the reference code from pal_baremetal/FVP/RDN2 folder to <platform_name>.

cp -r FVP/RDN2/ platform_name/

- 3. Port all the required APIs. For more details on the list of APIs, see the Porting requirements.
- 4. Modify the file platform_name/include/platform_override_fvp.h with platform-specific information. For more details on sample implementation, see the Execution of SBSA ACS.

2.4.1 Test components

The following table lists the bare-metal components for each test implementation.

Table 2-2: Bare-metal components

| Components | Files |
|--------------------|------------------------------------|
| PE | pal_pe.c |
| GIC | pal_gic.c |
| PCIe | pal_pcie.c, pal_pcie_enumeration.c |
| Exerciser | pal_exerciser.c |
| IOVIRT | pal_iovirt.c |
| SMMU | pal_smmu.c |
| Timer and Watchdog | pal_timer_wd.c |

| Components | Files |
|-------------------------------|-------------------|
| Peripherals (UART and Memory) | pal_peripherals.c |
| DMA | pal_dma.c |
| MPAM | pal_mpam.c |
| PMU | pal_pmu.c |
| RAS | pal_ras.c |
| HMAT | pal_hmat.c |
| Miscellaneous | pal_misc.c |



PAL implementation requires porting when the underlying platform design changes.

3. Execution of SBSA ACS

This chapter provides information on the execution of the SBSA ACS on a full-chip SoC emulation environment.

3.1 SoC emulation environment

Executing SBSA ACS on a full-chip emulation environment requires implementation of PAL. This involves providing a collection of SoC-specific information such as capabilities, base addresses, IRQ numbers to the test logic.

In Unified Extensible Firmware Interface (UEFI) base systems, all the static information is present in UEFI tables. The PAL implementation which is based on UEFI, uses the generated header file for populating data structures. For a bare-metal system, this information must be supplied in a tabular format which becomes easy for PAL API implementation.

3.1.1 PE

This section provides information on the number of PEs in the system.

PE-specific information

Tests contain comparison of Multiprocessor ID Register (MPIDR) values with actual values read from register. Such interrupts are generated for the Performance Monitoring Unit (PMU) lines and tested.

PLATFORM_OVERRIDE_PEx_MPIDR:

MPIDR register value represents the xth PE hierarchy (cluster, core).

PLATFORM_OVERRIDE_PEx_INDEX:

Represents the xth PE.

PLATFORM_OVERRIDE_PEx_PMU_GSIV:

PMU interrupt number for xth PE.

A platform with eight PEs is populated as follows:

```
#define PLATFORM OVERRIDE PE CNT
                                           0x8
#define PLATFORM OVERRIDE PEO INDEX
                                           0 \times 0
#define PLATFORM OVERRIDE PEO MPIDR
                                           0 \times 0
#define PLATFORM OVERRIDE PEO PMU GSIV
                                           0 \times 17
#define PLATFORM OVERRIDE PE1 INDEX
                                           0x1
#define PLATFORM_OVERRIDE_PE1_MPIDR
                                           0x100
#define PLATFORM OVERRIDE PE1 PMU GSIV
                                           0x17
#define PLATFORM OVERRIDE PE2 INDEX
                                           0x2
#define PLATFORM OVERRIDE PE2 MPIDR
                                           0x200
```

```
#define PLATFORM OVERRIDE PE2 PMU GSIV 0x17
#define PLATFORM_OVERRIDE_PE3_INDEX
                                           0x3
#define PLATFORM_OVERRIDE_PE3_MPIDR
                                           0x300
#define PLATFORM OVERRIDE PE3 PMU GSIV 0x17
#define PLATFORM OVERRIDE PE4 INDEX
                                           0x4
#define PLATFORM OVERRIDE PE4 MPIDR
                                           0x10000
#define PLATFORM OVERRIDE PE4 PMU GSIV 0x17
#define PLATFORM OVERRIDE PE5 INDEX
                                           0x5
#define PLATFORM OVERRIDE PE5 MPIDR
                                           0x10100
#define PLATFORM OVERRIDE PE5 PMU GSIV 0x17
#define PLATFORM OVERRIDE PE6 INDEX
                                           0×6
#define PLATFORM OVERRIDE PE6 MPIDR
                                           0x10200
#define PLATFORM OVERRIDE PE6 PMU GSIV
                                          0x17
#define PLATFORM OVERRIDE PE7 INDEX
                                           0 \times 7
#define PLATFORM_OVERRIDE_PE7_MPIDR
#define PLATFORM_OVERRIDE_PE7_PMU_GSIV
                                           0x10300
                                          0x17
```

Header file representation:

```
typedef struct {
uint32_t num_of_pe;
} PE_INFO_HDR;

/**
@brief structure instance for PE entry
   **/
typedef struct {
uint32_t pe_num; //< PE Index
uint32_t attr; //< PE attributes
uint64_t mpidr; //< PE MPIDR
uint32_t pmu_gsiv; //< PMU Interrupt ID
} PE_INFO_ENTRY;

typedef struct {
PE_INFO_HDR header;
PE_INFO_ENTRY pe_info[];
} PE_INFO_TABLE;</pre>
```

3.1.1.1 Cache config

This section provides information on the cache info for each PE:

```
#define PLATFORM_OVERRIDE_CACHE_CNT 0x30
#define PLATFORM_CACHEx_FLAGS 0xFF
#define PLATFORM_CACHEx_OFFSET 0x68
#define PLATFORM_CACHEx_NEXT_LEVEL_INDEX 1
#define PLATFORM_CACHEx_SIZE 0x10000
#define PLATFORM_CACHEx_CACHE_ID 0x1
#define PLATFORM_CACHEx_IS_PRIVATE 0x1
#define PLATFORM_CACHEx_IS_PRIVATE 0x1
#define PLATFORM_CACHEx_TYPE 0
```

3.1.2 PCle

This section provides information on the number of Peripheral Component Interconnect express (PCIe) root ports and the information required for PCIe enumeration.

PLATFORM_OVERRIDE_PCIE_BAR64_VAL:

The address required for 64-bit Prefetchable Memory Base.

PLATFORM_OVERRIDE_PCIE_BAR32NP_VAL:

The address required for 32-bit Non-Prefetchable Memory Base.

PLATFORM_OVERRIDE_PCIE_BAR32P_VAL:

The address required for 32-bit Prefetchable Memory Base.

Parameters required for the PCle enumeration for a platform is populated as follows:

```
/* PCIe BAR config parameters*/

#define PLATFORM_OVERRIDE_PCIE_BAR64_VAL 0x500000000

#define PLATFORM_OVERRIDE_PCIE_BAR32NP_VAL 0x60700000

#define PLATFORM_OVERRIDE_PCIE_BAR32P_VAL 0x60000000
```

PLATFORM_OVERRIDE_NUM_ECAM:

Represents the number of Enhanced Configuration Access Mechanism (ECAM) regions in the system.

PLATFORM_OVERRIDE_PCIE_ECAM_BASE_ADDR_x:

ECAM base address: ECAM maps PCIe configuration space to a memory address. The memory address to the current configuration space must be provided here.

PLATFORM_OVERRIDE_PCIE_SEGMENT_GRP_NUM_x:

Segment number of the xth ECAM region.

PLATFORM_OVERRIDE_PCIE_START_BUS_NUM_x:

Starting bus number of the xth ECAM region.

PLATFORM_OVERRIDE_PCIE_END_BUS_NUM_x:

Ending bus number of the xth ECAM region.

A platform with one ECAM region is populated as follows:

```
/* PCIE platform config parameters */
#define PLATFORM_OVERRIDE_NUM_ECAM 1

/* Platform config parameters for ECAM_0 */
#define PLATFORM_OVERRIDE_PCIE_ECAM_BASE_ADDR_0 0x60000000
#define PLATFORM_OVERRIDE_PCIE_SEGMENT_GRP_NUM_0 0x0
#define PLATFORM_OVERRIDE_PCIE_START_BUS_NUM_0 0x0
#define PLATFORM_OVERRIDE_PCIE_START_BUS_NUM_0 0xff
```

```
typedef struct {
```

```
uint64_t ecam_base; ///< ECAM Base address
uint32_t segment_num; ///< Segment number of this ECAM
uint32_t start_bus_num; ///< Start Bus number for this ecam space
uint32_t end bus_num; ///< Last Bus number
} PCIE_INFO_BLOCK;

typedef struct {
uint32_t num_entries;
PCIE_INFO_BLOCK block[];
} PCIE_INFO_TABLE;</pre>
```

3.1.2.1 PCIE device hierarchy table

This hierarchy table is used to obtain platform specific support such as DMA, P2P and so on.

Parameters to be populated for each PCIe device is as follows:

```
PLATFORM PCIE DEVX CLASSCODE 0x6040000
PLATFORM PCIE DEVX VENDOR ID. 0x13B5
PLATFORM PCIE DEVX DEV ID 0xDEF
PLATFORM PCIE DEVX BUS NUM 0
PLATFORM PCIE DEVX DEV NUM 1
PLATFORM PCIE DEVX FUNC NUM 0
PLATFORM PCIE DEVX SEG NUM 0
PLATFORM PCIE DEVX DMA SUPPORT 0
PLATFORM PCIE DEVX DMA COHERENT 0
PLATFORM PCIE DEVX DMA COHERENT 1
PLATFORM PCIE DEVX DMA 64BIT 0
PLATFORM PCIE DEVX BEHIND SMMU 1
PLATFORM PCIE DEVX ATC SUPPORT 0
```

Header file representation:

```
typedef struct {
  uint64_t class_code;
  uint32_t device_id;
  uint32_t vendor_id;
  uint32_t bus;
  uint32_t dev;
  uint32_t func;
  uint32_t seg;
  uint32_t dma_support;
  uint32_t dma_coherent;
  uint32_t dma_fo4bit;
  uint32_t dma_64bit;
  uint32_t behind_smmu;
  uint32_t atc_present;
  PERIPHERAL IRQ_MAP irq_map;
} PCIE_READ_BLOCK;
```

3.1.3 DMA

This section provides the configuration options for Direct Memory Access (DMA) controller-based tests. Additionally, it describes the parameters for the number of DMA bus Requesters, and DMA Requester attributes that can be customized.

3.1.3.1 Number of DMA controllers

Header file representation:

```
#define PLATFORM_OVERRIDE_DMA_CNT 0
```

PLATFORM_OVERRIDE_DMA_CNT:

Represents the number of DMA controllers in the system.

3.1.3.2 DMA Requester attributes

Header file representation:

The actual info stored in the above pointers are implementation-specific.

3.1.4 SMMU and device tests

This section provides an overview on SMMU and the device tests. It also provides information on the number of IOVIRT nodes, SMMUs, RC, Named component, PMCG, ITS blocks, I/O virtualization node-specific information, SMMU node-specific information, RC-specific information, and I/O virtual address mapping.

3.1.4.1 Number of IOVIRT Nodes

Parameters to be filled are:

```
#define IORT_NODE_COUNT 0x13
```

IORT_NODE_COUNT:

Represents the total number of Root Complex (RC), SMMU, ITS, PMCG, and other nodes represented in IORT structure.

3.1.4.2 Number of SMMUs

Parameters to be filled are:

```
#define IOVIRT_SMMUV3_COUNT 5
```

```
#define IOVIRT SMMUV2 COUNT 0
```

SMMU_COUNT:

Represents the number of SMMUs in the system.

3.1.4.3 Number of RCs

Parameters to be filled are:

```
#define RC COUNT 0x1
```

RC_COUNT:

Represents the number of RCs present in the system.

3.1.4.4 Number of PMCGs

Parameters to be filled are:

```
#define PMCG COUNT 0x1
```

PMCG_COUNT:

Represents the number of Performance Monitor Counter Groups (PMCGs) present in the system.

3.1.4.5 Number of named components

Parameters to be filled are:

```
#define IOVIRT_NAMED_COMPONENT_COUNT 2
IOVIRT_NAMED_COMPONENT_COUNT
```

Represents the number of named components present in the system.

3.1.4.6 Number of ITS blocks

Parameters to be filled are:

```
#define IOVIRT_ITS_COUNT 0x1
```

IOVIRT_ITS_COUNT:

Represents the number of Interrupt Translation Service (ITS) nodes in the system.

3.1.4.7 I/O virtualization node-specific information

Header file representation:

```
typedef struct {
uint32_t type;
uint32_t num_data_map;
NODE_DATA_data;
uint32_t flags;
NODE_DATA_MAP_data_map[];
} IOVIRT_BLOCK;

typedef union {
char_name[MAX_NAMED_COMP_LENGTH];
IOVIRT_PMCG_INFO_BLOCK_rc;
IOVIRT_PMCG_INFO_BLOCK_pmcg;
uint32_t its_count;
SMMU_INFO_BLOCK_smmu;
} NODE_DATA;
```

3.1.4.8 SMMU node-specific information

Header file representation:

IOVIRT_SMMUV3_BASE_ADDRESS:

Represents the SMMU base address in the system.

3.1.4.9 Root Complex node specific information

3.1.4.10 PMCG node-specific information

Header file representation:

```
typedef struct {
uint64_t base;
uint32_t overflow_gsiv;
uint32_t node_ref;
} IOVIRT_PMCG_INFO_BLOCK;
```

3.1.4.11 Named component node specific information

Header file representation:

```
typedef struct {
uint64_t smmu_base; /* SMMU base to which component is attached, else NULL */
uint32_t cca; /* Cache Coherency Attribute */
char name[MAX_NAMED_COMP_LENGTH]; /* Device object name */
} IOVIRT_NAMED_COMP_INFO_BLOCK;
```

3.1.4.12 I/O virtual address mapping

Header file representation:

```
typedef struct {
uint32_t input_base;
uint32_t id_count;
uint32_t output_base;
uint32_t output_ref;
}ID_MAP;
```

3.1.5 GIC

This section provides the parameters for Generic Interrupt Controller (GIC) specific test.

GIC-specific tests

Parameters to be filled are:

```
#define PLATFORM_OVERRIDE_GICD_COUNT
                                                          0x1
#define PLATFORM_OVERRIDE_GICRD_COUNT #define PLATFORM_OVERRIDE_GICITS_COUNT
                                                          0x1
                                                          0 \times 1
#define PLATFORM OVERRIDE GICH COUNT
                                                          0x1
#define PLATFORM_OVERRIDE_GICMSIFRAME_COUNT 0x0
#define PLATFORM_OVERRIDE_GICC_TYPE 0x1
                                                          0x1000
#define PLATFORM OVERRIDE GICD TYPE
                                                         0x1001
#define PLATFORM_OVERRIDE_GICC_GICRD_TYPE
#define PLATFORM_OVERRIDE_GICR_GICRD_TYPE
                                                         0x1002
                                                         0x1003
#define PLATFORM OVERRIDE GICITS TYPE
                                                         0x1004
#define PLATFORM OVERRIDE GICMSIFRAME TYPE 0x1005
#define PLATFORM OVERRIDE GICH TYPE #define PLATFORM OVERRIDE GICC BASE
                                                          0x1006
                                                         0x30000000
#define PLATFORM OVERRIDE GICD BASE
                                                         0x30000000
```

```
#define PLATFORM_OVERRIDE_GICRD_BASE 0x300C0000

#define PLATFORM_OVERRIDE_GICITS_BASE 0x30040000

#define PLATFORM_OVERRIDE_GICH_BASE 0x2C010000

#define PLATFORM_OVERRIDE_GICITS_ID 0

#define PLATFORM_OVERRIDE_GICIRD_LENGTH (0x20000*8)
```

Header file representation:

```
typedef struct {
uint32_t gic_version;
uint32_t num_gicc;
uint32_t num_gicd;
uint32 t num gicrd;
uint32_t num_gicits;
uint32_t num_gich;
uint32_t num_msiframes;
uint32_t gicc_type;
uint32_t gicd_type;
uint32_t gicrd_type;
uint32 t gicrd length;
uint32_t gicits_type;
uint64_t gicc_base[PLATFORM_OVERRIDE_GICC_COUNT];
uint64 t gicd base[PLATFORM OVERRIDE GICD COUNT];
uint64_t gicrd_base[PLATFORM_OVERRIDE_GICRD_COUNT];
uint64_t gicits_base[PLATFORM_OVERRIDE_GICITS_COUNT];
uint64 t gicits id[PLATFORM OVERRIDE GICITS COUNT];
uint64 t gich base[PLATFORM OVERRIDE GICH COUNT];
uint64 t gicmsiframe base[PLATFORM OVERRIDE GICMSIFRAME COUNT];
uint64 t gicmsiframe id[PLATFORM OVERRIDE GICMSIFRAME COUNT];
uint32 t gicmsiframe flags[PLATFORM OVERRIDE GICMSIFRAME COUNT];
uint32 t gicmsiframe spi count[PLATFORM OVERRIDE GICMSIFRAME COUNT]; uint32 t gicmsiframe spi base[PLATFORM OVERRIDE GICMSIFRAME COUNT];
} PLATFORM OVERRIDE GIC INFO TABLE;
```

3.1.6 Timer

This section provides the parameters for timer-specific tests.

3.1.6.1 Timer information

Parameters to be filled are:

```
#define PLATFORM_OVERRIDE_PLATFORM_TIMER_COUNT  0x2
#define PLATFORM_OVERRIDE_S_EL1_TIMER_GSIV  0x1D
#define PLATFORM_OVERRIDE_NS_EL1_TIMER_GSIV  0x1E
#define PLATFORM_OVERRIDE_NS_EL2_TIMER_GSIV  0x1A
#define PLATFORM_OVERRIDE_VIRTUAL_TIMER_GSIV  0x1B
#define PLATFORM_OVERRIDE_EL2_VIR_TIMER_GSIV  28
```

```
typedef struct {
  uint32_t s_el1_timer_flag;
  uint32_t ns_el1_timer_flag;
  uint32_t el2_timer_flag;
  uint32_t el2_virt_timer_flag;
  uint32_t s_el1_timer_gsiv;
  uint32_t ns_el1_timer_gsiv;
```

```
uint32 t el2 timer gsiv;
uint32 t virtual timer flag;
uint32 t virtual timer gsiv;
uint32 t el2 virt timer gsiv;
uint32 t num_platform timer;
uint32 t num_watchdog;
uint32 t sys_timer_status;
}TIMER_INFO_HDR;

typedef struct {
uint32 t type;
uint32 t timer_count;
uint64 t block_cntl_base;
uint8 t frame_num[8];
uint64 t GtCntBase[8];
uint64 t GtCntElOBase[8];
uint64 t GtCntElOBase[8];
uint32 t yirt_gsiv[8];
uint32 t flags[8];
yint32 t flags[8];
yint32 t flags[8];
yint32 t flags[8];
tint32 t flags[8];
yint32 t flags[8];
yTIMER_INFO_GTBLOCK;
```

3.1.7 Watchdog timer

This section provides the parameters for the number of watchdog timer tests and watchdog information.

Parameters to be filled are:

```
#define PLATFORM_OVERRIDE_WD_TIMER_COUNT 2
```

3.1.7.1 Watchdog information

The following is the list of watchdog timers present in the system:

- Watchdog timer number
- Control base
- Refresh base
- Interrupt number
- Flags

3.1.8 Memory

This section provides information on the memory map in the system.

PLATFORM_OVERRIDE_MEMORY_ENTRY_COUNT:

Represents the number of memory range entries.

PLATFORM_OVERRIDE_MEMORY_ENTRYx_PHY_ADDR:

Represents the physical address of the xth memory entry.

PLATFORM_OVERRIDE_MEMORY_ENTRYx_VIRT_ADDR:

Represents the virtual address of the xth memory entry.

PLATFORM_OVERRIDE_MEMORY_ENTRYx_SIZE:

Represents the size of the xth memory entry.

PLATFORM_OVERRIDE_MEMORY_ENTRYx_TYPE:

Represents the type of the xth memory entry.

The following is an example for memory map.

```
#define PLATFORM OVERRIDE MEMORY ENTRY COUNT
                                                                       0 \times 4
#define PLATFORM OVERRIDE MEMORY ENTRYO PHY ADDR
                                                                       0xC000000
#define PLATFORM_OVERRIDE_MEMORY_ENTRYO_VIRT_ADDR
#define PLATFORM_OVERRIDE_MEMORY_ENTRYO_SIZE
                                                                       0xC000000
                                                                       0x4000000
#define PLATFORM OVERRIDE MEMORY ENTRYO TYPE
                                                                       MEMORY TYPE DEVICE
#define PLATFORM_OVERRIDE_MEMORY_ENTRY1_PHY_ADDR
                                                                       0 \times 1000 \overline{0}000
#define PLATFORM OVERRIDE MEMORY ENTRY1 VIRT
#define PLATFORM OVERRIDE MEMORY ENTRY1 SIZE
                                                                       0x10000000
                                                                       0xC170000
#define PLATFORM OVERRIDE MEMORY ENTRY1 TYPE
                                                                       MEMORY TYPE NOT POPULATED
#define PLATFORM_OVERRIDE_MEMORY_ENTRY2_PHY_ADDR
#define PLATFORM_OVERRIDE_MEMORY_ENTRY2_VIRT_ADDR
                                                                       0xFF600000
                                                                       0xFF600000
#define PLATFORM OVERRIDE MEMORY ENTRY2 SIZE
                                                                       0x10000
#define PLATFORM OVERRIDE MEMORY ENTRY2 TYPE #define PLATFORM OVERRIDE MEMORY ENTRY3 PHY ADDR #define PLATFORM OVERRIDE MEMORY ENTRY3 VIRT ADDR
                                                                       MEMORY_TYPE_RESERVED
                                                                       0x800000000
                                                                       0x80000000
#define PLATFORM OVERRIDE MEMORY ENTRY3 SIZE
                                                                       0x7F000000
#define PLATFORM OVERRIDE MEMORY ENTRY3 TYPE
                                                                       MEMORY TYPE NORMAL
```

```
typedef struct {
   MEM_INFO_TYPE_e type;
   uint64_t phy_addr;
   uint64_t virt_addr;
   uint64_t size;
   uint64_t slags; //To Indicate Cacheablility etc..
}MEM_INFO_BLOCK;
```

3.1.9 MPAM

This section provides information on the Memory System Resource Partitioning and Monitoring of the system.

Parameters to be filled are:

```
#define MPAM MAX MSC NODE
                                                 0 \times 1
#define MPAM MAX RSRC NODE
                                                 0x1
#define PLATFORM_MPAM_MSC_COUNT
                                                 0 \times 1
                                                0x1010028000
#define PLATFORM MPAM MSCx BASE ADDR
#define PLATFORM MPAM MSCx ADDR LEN
                                                0x2004
#define PLATFORM MPAM MSCx MAX NRDY
                                                10000000
#define PLATFORM MPAM MSCx RSRC COUNT
                                                 0x1
#define PLATFORM MPAM MSCx RSRCx RIS INDEX
                                                 0 \times 0
#define PLATFORM MPAM MSCx RSRCx LOCATOR TYPE 0x1
#define PLATFORM_MPAM_MSCx_RSRCx_DESCRIPTOR1
                                                 0x0
#define PLATFORM MPAM MSCx RSRCx DESCRIPTOR2
                                                0x0
```

```
* @brief Mpam Resource Node
typedef struct {
uint8 t ris index;
uint8_t locator_type; /* Identifies location of this resource */
uint64_t descriptor1; /* Primary acpi description of location */
uint32_t descriptor2; /* Secondary acpi description of location */
} MPAM RESOURCE NODE;
* @brief Mpam MSC Node
typedef struct {
uint64_t msc_base_addr; /* base addr of mem-map MSC reg */
uint32_t msc_addr_len; /* MSC mem map size */
uint32_t max_nrdy; /* max time in microseconds that MSC not ready
after config change */
uint32 t rsrc_count; /* number of resource nodes */
MPAM_RESOURCE_NODE rsrc_node[]; /* Details of resource node */
} MPAM MSC NODE;
* @brief Mpam info table
typedef struct {
uint32_t msc_count; /* Number of MSC node */
MPAM \overline{MSC} NODE msc node[]; /* Details of MSC node */
} MPAM INFO TABLE;
```

3.1.9.1 SRAT

This section provides information on the System Affinity table of the system.

Parameters to be filled are:

```
#define PLATFORM_OVERRIDE_NUM_SRAT_ENTRIES 17
#define PLATFORM_OVERRIDE_MEM_AFF_CNT 1
#define PLATFORM_OVERRIDE_GICC_AFF_CNT 16
```

The memory affinity and GICC Affinity parameters to be filled are:

```
#define PLATFORM_SRAT_MEMx_PROX_DOMAIN 0x0
#define PLATFORM_SRAT_MEMx_FLAGS 0x1
#define PLATFORM_SRAT_MEMx_ADDR_BASE 0x8080000000
#define PLATFORM_SRAT_MEMx_ADDR_LEN 0x3F7F7FFFFF
#define PLATFORM_SRAT_GICCx_PROX_DOMAIN 0x0
#define PLATFORM_SRAT_GICCx_PROC_UID 0x0
#define PLATFORM_SRAT_GICCx_FLAGS 0x1
#define PLATFORM_SRAT_GICCx_CLK_DOMAIN 0x0
```

Header file representation:

```
typedef union {
SRAT_MEM_AFF_ENTRY mem_aff;
SRAT_GICC_AFF_ENTRY gicc_aff;
} SRAT_NODE_INFO;

typedef struct {
    uint32 t node type; /* Node type*/
SRAT_NODE_INFO node_data;
} SRAT_INFO_ENTRY;

typedef struct {
    uint32_t num_of_srat_entries;
    uint32_t num_of_mem_ranges;
    SRAT_INFO_ENTRY srat_info[];
} SRAT_INFO_TABLE;
```

3.1.10 HMAT

This sections provides information on the Heterogeneous Memory Attribute Table

Parameters required to be populated are:

Header file representation:

```
typedef struct {
  uint32_t mem_prox_domain; /* Proximity domain of the memory region*/
  uint64_t write_bw; /* Maximum write bandwidth */
  uint64_t read_bw; /* Maximum read bandwidth */
  } HMAT_BW_ENTRY;

typedef struct {
  uint32_t num_of_mem_prox_domain; /* Number of Memory Proximity Domains */
  HMAT_BW_ENTRY bw_info[]; /* Array of bandwidth info based on proximity domain */
  } HMAT_INFO_TABLE;
```

3.1.11 RAS

This section provides Information on the Reliability, Availability and Serviceability features of the system.

Parameters to be filled are:

```
#define PLATFORM_OVERRIDE_NUM_RAS_NODES 0x1
#define PLATFORM_OVERRIDE_NUM_PE_RAS_NODES 0x1
#define PLATFORM_OVERRIDE_NUM_MC_RAS_NODES 0x0
#define RAS2_MAX_NUM_BLOCKS 0x4
```

```
typedef struct {
RAS_NODE_TYPE_e type; /* Node Type PE/GIC/SMMU */
uint16_t length; /* Length of the Node */
uint64_t num_intr_entries; /* Number of Interrupt Entry */
RAS_NODE_DATA node data; /* Node Specific Data */
RAS_INTERFACE_INFO intf_info; /* Node Interface Info */
RAS_INTERRUPT_INFO intr_info[2]; /* Node Interrupt Info */
} RAS NODE INFO;
typedef struct {
uint32 t num nodes; /* Number of total RAS Nodes */
uint32 t num pe node; /* Number of PE RAS Nodes */
uint32 t num mc node; /* Number of Memory Controller Nodes */
RAS_NODE_INFO node[]; /* Array of RAS nodes */
} RAS INFO TABLE;
typedef struct {
RAS2 FEAT TYPE type; /* RAS2 feature type*/
RAS2_BLOCK_INFO block_info; /* RAS2 block info */
} RAS2 BLOCK;
typedef struct {
uint32_t num_all_block; /* Number of RAS2 feature blocks */
uint32_t num_of_mem_block; /* Number of memory feature blocks */
RAS2 BLOCK blocks[];
} RAS2 INFO TABLE;
```

3.1.12 PMU

This section provides Information on the Performance Monitoring Unit of the system.

Parameters to be filled are:

```
#define MAX_NUM_OF_PMU_SUPPORTED 512
#define PLATFORM_OVERRIDE_PMU_NODE_CNT 0x1
#define PLATFORM_PMU_NODEx_BASE0 0x1010028000
#define PLATFORM_PMU_NODEx_BASE1 0x0
#define PLATFORM_PMU_NODEx_TYPE 0x2
#define PLATFORM_PMU_NODEx_PRI_INSTANCE 0x0
#define PLATFORM_PMU_NODEx_SEC_INSTANCE 0x0
#define PLATFORM_PMU_NODEx_SEC_INSTANCE 0x0
#define PLATFORM_PMU_NODEx_DUAL_PAGE_EXT 0x0
```

```
typedef struct {
  uint8_t type; /* The component that this PMU block is associated with*/
  uint64_t primary_instance; /* Primary node instance, specific to the PMU type*/
  uint32_t secondary_instance; /* Secondary node instance, specific to the PMU type*/
  uint8_t dual_page extension; /* Support of the dual-page mode*/
  uint64_t base0; /* Base address of Page 0 of the PMU*/
  uint64_t base1; /* Base address of Page 1 of the PMU,
  valid only if dual_page_extension is 1*/
} PMU_INFO_BLOCK;

typedef struct {
  uint32_t pmu_count; /* Total number of PMU info blocks*/
  PMU_INFO_BLOCK info[]; /* PMU info blocks for each PMU nodes*/
} PMU_INFO_TABLE;
```

4. Porting requirements

This chapter provides information on different PAL APIs in PE, GIC, timer, IOVIRT, PCIe, SMMU, peripheral, DMA, PMU, MPAM, RAS, exerciser, and other miscellaneous APIs.

4.1 PAL implementation

PAL is a C-based, Arm-defined API that you can implement. Each test platform requires a PAL implementation of its own.

The bare-metal reference code provides a reference implementation for a subset of APIs. Additional code must be implemented to match the target SoC implementation under the tests.

There are two implementation types for the PAL APIs and are classified in the following tables:



- Yes: indicates that the implementation of this API is already present. Since the values are platform-specific, it must be taken from the platform configuration file
- Platform-specific: you must implement all the APIs that are marked as platform-specific.

4.1.1 PE

The following table lists the different types of APIs in PE.

Table 4-1: PE APIs and their details

| API name | Function prototype | Implementation |
|----------------------|---|-----------------------|
| create_info_table | <pre>void pal_pe_create_info_table(PE_INFO_TABLE *PeTable);</pre> | Yes |
| call_smc | <pre>void pal_pe_call_smc(ARM_SMC_ARGS *args);</pre> | Yes |
| execute_payload | <pre>void pal_pe_execute_payload(ARM_SMC_ARGS *args);</pre> | Yes |
| update_elr | <pre>void pal_pe_update_elr(void *context,uint64_toffset);</pre> | Platform- specific |
| get_esr | <pre>uint64_t pal_pe_get_esr(void *context);</pre> | Platform- specific |
| data_cache_ops_by_va | <pre>void pal_pe_data_cache_ops_by_va(uint64_t addr, uint32_t type);</pre> | Yes |
| get_far | <pre>uint64_t pal_pe_get_far(void *context);</pre> | Platform- specific |
| install_esr | <pre>uint32_t pal_pe_install_esr(uint32_t exception_type, void(*esr) (uint64_t, void *));</pre> | Platform- specific |
| get_num | <pre>uint32_t pal_pe_get_num();</pre> | Yes |

| API name | Function prototype | Implementation |
|------------------|--------------------|-----------------------|
| psci_get_conduit | | Platform- specific |

4.1.2 GIC

The following table lists the different types of APIs in GIC.

Table 4-2: GIC APIs and their details

| API name | Function prototype | Implementation |
|-------------------|---|-----------------------|
| create_info_table | <pre>void pal_gic_create_info_table(GIC_INFO_TABLE* gic_info_table);</pre> | Yes |
| install_isr | <pre>uint32_t pal_gic_install_isr(uint32_t int_id, void(*isr)(void));</pre> | Platform- specific |
| end_of_interrupt | <pre>uint32_t pal_gic_end_of_interrupt(uint32_t int_id);</pre> | Platform- specific |
| request_irq | <pre>uint32_t pal_gic_request_irq(unsigned intirq_num, unsigned int mapped_ irq_num,void *isr);</pre> | Platform- specific |
| free_irq | <pre>void pal_gic_free_irq(unsigned int irq_num,unsigned int mapped_irq_num);</pre> | Platform- specific |
| set_intr_trigger | <pre>uint32_t pal_gic_set_intr_trigger(uint32_t int_idINTR_TRIGGER_ INFO_TYPE_etrigger_type);</pre> | Platform- specific |

4.1.3 Timer

The following table lists the different types of APIs in timer.

Table 4-3: Timer APIs and their details

| API name | Function prototype | Implementation |
|-----------------------|---|----------------|
| create_info_table | <pre>void pal_timer_create_info_table(TIMER_INFO_TABLE *timer_ info_table);</pre> | Yes |
| wd_create_info_table | <pre>void pal_wd_create_info_table(WD_INFO_TABLE *wd_table);</pre> | Yes |
| get_counter_frequency | uint64_t pal_timer_get_counter_frequency(void); | Yes |

4.1.4 IOVIRT

The following table lists the different types of APIs in IOVIRT.

Table 4-4: IOVIRT APIs and their details

| API name | Function prototype | Implementation |
|------------------------|---|----------------|
| create_info_table | <pre>void pal_iovirt_create_info_table(IOVIRT_INFO_TABLE *iovirt);</pre> | Yes |
| unique_rid_strid_map | <pre>uint32_t pal_iovirt_unique_rid_strid_map(uint64_t rc_block);</pre> | Yes |
| check_unique_ctx_initd | <pre>uint32_t pal_iovirt_check_unique_ctx_intid(uint64_t smmu_block);</pre> | Yes |

| API name | Function prototype | Implementation |
|----------|--|----------------|
| | <pre>uint64_t pal_iovirt_get_rc_smmu_base(IOVIRT_INFO_TABLE *iovirt, uint32_t rc_seg_num, uint32_t rid);</pre> | Yes |

4.1.5 PCle

The following table lists the different types APIs in PCle.

Table 4-5: PCIe APIs and their details

| API name | Function prototype | Implementation |
|---------------------------------------|--|-----------------------|
| create_info_table | <pre>void pal_pcie_create_info_table (PCIE_INFO_TABLE *PcieTable);</pre> | Yes |
| read_cfg | <pre>uint32_t pal_pcie_read_cfg(uint32_t bdf, uint32_t offset, uint32_t *data);</pre> | Yes |
| get_msi_vectors | <pre>uint32_t pal_get_msi_vectors(uint32_t seg,uint32_ t bus, uint32_t dev, uint32_t fn, PERIPHERAL_ VECTOR_LIST**mvector);</pre> | Platform- specific |
| scan_bridge_devices_and_check_memtype | <pre>uint32_t pal_pcie_scan_bridge_devices_and_check_ memtype (uint32_t seg,uint32_t bus, uint32_t dev, uint32_tfn);</pre> | Yes |
| get_pcie_type | <pre>uint32_t pal_pcie_get_pcie_type(uint32_t seg,uint32_t bus, uint32_t dev, uint32_t fn);</pre> | Yes |
| p2p_support | <pre>uint32_t pal_pcie_p2p_support(void);</pre> | Yes |
| read_ext_cap_word | <pre>void pal_pcie_read_ext_cap_word(uint32_t seg, uint32_ t bus, uint32_t dev,uint32_t fn, uint32_t ext_cap_id, uint8_t offset, uint16_t *val);</pre> | Yes |
| get_bdf_wrapper | <pre>uint32_t pal_pcie_get_bdf_wrapper (uint32_t class_ code, uint32_t start_bdf);</pre> | Yes |
| bdf_to_dev | <pre>void *pal_pci_bdf_to_dev(uint32_t bdf);</pre> | Yes |
| pal_pcie_ecam_base | <pre>uint64_t pal_pcie_ecam_base(uint32_t seg,uint32_t bus, uint32_t dev, uint32_tfunc)</pre> | Yes |
| pci_cfg_read | <pre>uint32_t pal_pci_cfg_read(uint32_t bus, uint32_t dev, uint32_t func, uint32_t offset, uint32_t *value)</pre> | Yes |
| pci_cfg_write | <pre>void pal_pci_cfg_write(uint32_t bus, uint32_t dev, uint32_t func, uint32_t offset, uint32_t data)</pre> | Yes |
| program_bar_reg | <pre>void pal_pcie_program_bar_reg(uint32_tbus, uint32_t dev, uint32_t func)</pre> | Yes |
| enumerate_device | <pre>uint32_t pal_pcie_enumerate_device(uint32_t bus, uint32_t sec_bus)</pre> | Yes |
| get_bdf | <pre>uint32_t pal_pcie_get_bdf(uint32_t ClassCode, uint32_t StartBdf)</pre> | Yes |
| increment_bus_dev | uint32_t pal_increment_bus_dev(uint32_t StartBdf) | Yes |
| get_base | <pre>uint64_t pal_pcie_get_base(uint32_t bdf, uint32_t bar_index)</pre> | Yes |
| io_read_cfg | <pre>uint32_t pal_pcie_io_read_cfg(uint32_t Bdf, uint32_t offset, uint32_t *data);</pre> | Yes |

| API name | Function prototype | Implementation |
|---------------------------------|--|-----------------------|
| io_write_cfg | <pre>void pal_pcie_io_write_cfg(uint32_t bdf, uint32_t offset, uint32_t data);</pre> | Yes |
| get_device_type | <pre>uint32_t pal_pcie_get_device_type(uint32_t seg, uint32_t bus, uint32_t dev, uint32_t fn);</pre> | Yes |
| get_snoop_bit | <pre>uint32_t pal_pcie_get_snoop_bit(uint32_t seg, uint32_t bus, uint32_t dev, uint32_t fn);</pre> | Yes |
| is_device_behind_smmu | <pre>uint32_t pal_pcie_is_device_behind_smmu(uint32_t seg, uint32_t bus, uint32_t dev, uint32_t fn);</pre> | Yes |
| get_dma_support | <pre>uint32_t pal_pcie_get_dma_support(uint32_t seg, uint32_t bus, uint32_t dev, uint32_t fn);</pre> | Yes |
| get_dma_coherent | <pre>uint32_t pal_pcie_get_dma_coherent(uint32_t seg, uint32_t bus, uint32_t dev, uint32_t fn);</pre> | Yes |
| ls_devicedma_64bit | <pre>uint32_t pal_pcie_is_devicedma_64bit(uint32_t seg, uint32_t bus, uint32_t dev, uint32_t fn);</pre> | Yes |
| get_legacy_irq_map | <pre>uint32_t pal_pcie_get_legacy_irq_map(uint32_t Seg, uint32_t Bus, uint32_t Dev, uint32_t Fn, PERIPHERAL_ IRQ_MAP *IrqMap);</pre> | Platform- specific |
| get_root_port_bdf | <pre>uint32_t pal_pcie_get_root_port_bdf(uint32_t *Seg, uint32_t *Bus, uint32_t *Dev, uint32_t *Func);</pre> | Yes |
| dev_p2p_support | <pre>uint32_t pal_pcie_dev_p2p_support(uint32_t seg, uint32_t bus, uint32_t dev, uint32_t fn);</pre> | Yes |
| is_cache_present | <pre>uint32_t pal_pcie_is_cache_present(uint32_t seg, uint32_t bus, uint32_t dev, uint32_t fn);</pre> | Yes |
| is_onchip_peripheral | <pre>uint32_t pal_pcie_is_onchip_peripheral(uint32_t bdf);</pre> | Platform- specific |
| check_device_list | <pre>uint32_t pal_pcie_check_device_list(void);</pre> | Yes |
| get_rp_transaction_frwd_support | <pre>uint32_t pal_pcie_get_rp_transaction_frwd_ support(uint32_t seg, uint32_t bus, uint32_t dev, uint32_t fn)</pre> | Platform- specific |
| check_device_valid | <pre>uint32_t pal_pcie_check_device_valid(uint32_t bdf);</pre> | Platform- specific |
| mem_get_offset | <pre>pal_pcie_mem_get_offset(uint32_t type);</pre> | Yes |

4.1.6 SMMU

The following table lists the different types of APIs in SMMU.

Table 4-6: SMMU APIs and their details

| API name | Function prototype | Implementation |
|---------------------------|--|-----------------------|
| check_device_iova | <pre>uint32_t pal_smmu_check_device_iova(void *port, uint64_t dma_addr);</pre> | Platform- specific |
| device_start_monitor_iova | <pre>void pal_smmu_device_start_monitor_iova(void *port);</pre> | Platform- specific |
| device_stop_monitor_iova | <pre>void pal_smmu_device_stop_monitor_iova(void *port);</pre> | Platform- specific |
| max_pasids | uint32_t pal_smmu_max_pasids(uint64_t smmu_base); | Yes |

| API name | Function prototype | Implementation |
|--------------------|--|-----------------------|
| pa2iova | <pre>uint64_t pal_smmu_pa2iova(uint64_t smmu_base, unit64_t pa);</pre> | Platform- specific |
| smmu_disable | <pre>uint32_t pal_smmu_disable(uint64_t smmu_base);</pre> | Platform- specific |
| create_pasid_entry | <pre>uint32_t pal_smmu_create_pasid_entry(uint64_t smmu_base, uint32_t pasid);</pre> | Platform- specific |

4.1.7 Peripheral

The following table lists the different types of APIs in peripheral.

Table 4-7: Peripheral APIs and their details

| API name | Function prototype | Implementation |
|-----------------------------|--|-----------------------|
| create_info_table | <pre>void pal_peripheral_create_info_table(PERIPHERAL_INFO_TABLE *per_info_table);</pre> | Yes |
| is_pcie | <pre>uint32_t pal_peripheral_is_pcie(uint32_t seg, uint32_t bus, uint32_t dev, uint32_t fn);</pre> | Yes |
| memory_create_info_table | <pre>void pal_memory_create_info_table(MEMORY_INFO_TABLE *memoryInfoTable);</pre> | Platform- specific |
| memory_ioremap | <pre>uint64_t pal_memory_ioremap(void *addr, uint32_t size, uint32_t attr);</pre> | Platform- specific |
| memory_unmap | <pre>void pal_memory_unmap(void *addr);</pre> | Platform- specific |
| memory_get_unpopulated_addr | <pre>uint64_t pal_memory_get_unpopulated_addr(uint64_t *addr, uint32_t instance)</pre> | Platform- specific |

4.1.8 MPAM

The following table lists the different types of APIs in MPAM:

Table 4-8: MPAM APIs and their details

| API name | Functional prototype | Implemention |
|-------------------|---|--------------|
| create_info_table | <pre>void pal_mpam_create_ info_table(MPAM_INFO_TABLE *MpamTable);</pre> | Yes |
| create_info_table | <pre>void pal_hmat_create_ info_table(HMAT_INFO_TABLE *HmatTable);</pre> | Yes |
| create_info_table | <pre>void pal_srat_create_info_ table(SRAT_INFO_TABLE * SratTable);</pre> | Yes |
| create_info_table | <pre>void pal_cache_create_ info_table(CACHE_INFO_TABLE *CacheTable, PE_INFO_TABLE *PeTable);</pre> | Yes |

4.1.9 RAS

The following table lists the different types of APIs in RAS:

Table 4-9: RAS APIs and their details

| API name | Function prototype | Implementation |
|---------------------------|---|-----------------------|
| ras_create_info_table | <pre>void pal_ras_create_info_table(RAS_ INFO_TABLE*RasInfoTable);</pre> | Yes |
| ras2_create_info_table | <pre>void pal_ras2_create_info_table(RAS2_INFO_TABLE*ras2_info_table);</pre> | Yes |
| setup_error | <pre>uint32_t pal_ras_setup_error(RAS_ERR_IN_t in_param, RAS_ERR_OUT_t *out_param);</pre> | Platform- specific |
| inject_error | <pre>uint32_t pal_ras_inject_error(RAS_ERR_IN_t in_param, RAS_ERR_OUT_ t *out_param);</pre> | Platform- specific |
| wait_timeout | <pre>void pal_ras_wait_timeout(uint32_t count);</pre> | Platform- specific |
| check_plat_poison_support | uint32_t pal_ras_check_plat_poison_support() | Platform- specific |

4.1.10 DMA

The following table lists the different types of APIs in DMA.

Table 4-10: DMA APIs and their details

| API name | Function prototype | Implementation |
|-------------------|---|-----------------------|
| create_info_table | <pre>void pal_dma_create_info_table(DMA_INFO_TABLE *dma_info_table);</pre> | Yes |
| start_from_device | <pre>uint32_t pal_dma_start_from_device(void *dma_target_buf, uint32_t length,void *host,void *dev);</pre> | Platform- specific |
| start_to_device | <pre>uint32_t pal_dma_start_to_device(void *dma_source_buf, uint32_t length, void *host, void *target, uint32_t timeout);</pre> | Platform- specific |
| mem_alloc | <pre>uint64_t pal_dma_mem_alloc(void *buffer, uint32_t length, void *dev, uint32_t flags);</pre> | Platform- specific |
| scsi_get_dma_addr | <pre>void pal_dma_scsi_get_dma_addr(void *port, void *dma_addr, uint32_t *dma_len);</pre> | Platform- specific |
| mem_get_attrs | <pre>int pal_dma_mem_get_attrs(void *buf, uint32_t *attr, uint32_t *sh)</pre> | Platform- specific |
| dma_mem_free | <pre>void pal_dma_mem_free(void *buffer, addr_tmem_dma, unsigned int length, void *port,unsigned int flags);</pre> | Platform- specific |

4.1.11 Exerciser

The following table lists the different types of APIs in exerciser.

Table 4-11: Exerciser APIs and their details

| API name | Function prototype | Implementation |
|------------------------|--|-----------------------|
| get_ecsr_base | <pre>uint64_t pal_exerciser_get_ecsr_base(uint32_t Bdf,uint32_t BarIndex)</pre> | Platform- specific |
| get_pcie_config_offset | uint64_t pal_exerciser_get_pcie_config_offset(uint32_t Bdf) | Platform- specific |
| start_dma_direction | uint32_t pal_exerciser_start_dma_direction(uint64_t Base, EXERCISER_DMA_ATTRDirection) | Platform- specific |
| find_pcie_capability | uint32_t pal_exerciser_find_pcie_capability(uint32_t ID, uint32_t Bdf, uint32_t Value, uint32_t *Offset) | Platform- specific |
| set_param | <pre>uint32_t pal_exerciser_set_param(EXERCISER_PARAM_TYPE type, uint64_t value1, uint64_t value2, uint32_t bdf);</pre> | Platform- specific |
| get_param | <pre>uint32_t pal_exerciser_get_param(EXERCISER_PARAM_TYPE type, uint64_t *value1, uint64_t *value2, uint32_t bdf);</pre> | Platform- specific |
| set_state | <pre>uint32_t pal_exerciser_set_state(EXERCISER_STATE state, uint64_t *value, uint32_t bdf);</pre> | Platform- specific |
| get_state | <pre>uint32_t pal_exerciser_get_state(EXERCISER_STATE *state, uint32_t bdf);</pre> | Platform- specific |
| ops | <pre>uint32_t pal_exerciser_ops(EXERCISER_OPS ops,uint64_t param, uint32_t instance);</pre> | Platform- specific |
| get_data | <pre>uint32_t pal_exerciser_get_data(EXERCISER_DATA_TYPE type, exerciser_ data_t *data, uint32_tbdf, uint64_t ecam);</pre> | Platform- specific |
| is_bdf_exerciser | uint32_t pal_is_bdf_exerciser(uint32_t bdf) | Platform- specific |

4.1.12 Miscellaneous

The following table lists the different types of miscellaneous PAL APIs.

Table 4-12: Miscellaneous APIs and their details

| API name | Function prototype | Implementation |
|--------------|---|-----------------------|
| mmio_read8 | uint8_t pal_mmio_read8(uint64_t addr); | Yes |
| mmio_read16 | <pre>uint16_t pal_mmio_read16(uint64_t addr);</pre> | Yes |
| mmio_read | uint32_t pal_mmio_read(uint64_t addr); | Yes |
| mmio_read64 | uint64_t pal_mmio_read64(uint64_t addr); | Yes |
| mmio_write8 | <pre>void pal_mmio_write8(uint64_t addr, uint8_t data);</pre> | Yes |
| mmio_write16 | <pre>void pal_mmio_write16(uint64_t addr, uint16_t data);</pre> | Yes |
| mmio_write | <pre>void pal_mmio_write(uint64_t addr, uint32_t data);</pre> | Yes |
| mmio_write64 | <pre>void pal_mmio_write64(uint64_t addr, uint64_t data);</pre> | Yes |
| print | <pre>void pal_print(char8_t *string, uint64_tdata);</pre> | Platform- specific |

| API name | Function prototype | Implementation |
|---------------------|--|-----------------------|
| print_raw | <pre>void pal_print_raw(uint64_t addr, char *string, uint64_t data)</pre> | Yes |
| mem_free | <pre>void pal_mem_free(void *buffer);</pre> | Platform- specific |
| mem_compare | <pre>int pal_mem_compare(void *src, void *dest, uint32_t len);</pre> | Yes |
| mem_set | <pre>void pal_mem_set(void *buf, uint32_t size,uint8_t value);</pre> | Yes |
| mem_allocate_shared | <pre>void pal_mem_allocate_shared(uint32_t num_pe, uint32_t sizeofentry);</pre> | Yes |
| mem_get_shared_addr | <pre>uint64_t pal_mem_get_shared_addr(void);</pre> | Yes |
| mem_free_shared | <pre>void pal_mem_free_shared(void);</pre> | Yes |
| mem_alloc | <pre>void *pal_mem_alloc(uint32_t size);</pre> | Platform- specific |
| mem_virt_to_phys | <pre>void *pal_mem_virt_to_phys(void *va);</pre> | Platform- specific |
| mem_alloc_cacheable | <pre>void *pal_mem_alloc_cacheable(uint32_t Bdf, uint32_t Size, void **Pa);</pre> | Platform- specific |
| mem_free_cacheable | <pre>void pal_mem_free_cacheable(uint32_t Bdf, uint32_t Size, void *Va, void *Pa);</pre> | Platform- specific |
| mem_phys_to_virt | <pre>void *pal_mem_phys_to_virt (uint64_t Pa);</pre> | Platform- specific |
| strncmp | uint32_t pal_strncmp(char8_t *str1, char8_t *str2, uint32_t len); | Yes |
| memcpy | <pre>void *pal_memcpy(void *dest_buffer, void *src_buffer, uint32_t len);</pre> | Yes |
| time_delay_ms | <pre>uint64_t pal_time_delay_ms(uint64_t time_ms);</pre> | Platform- specific |
| page_size | <pre>uint32_t pal_mem_page_size();</pre> | Platform- specific |
| alloc_pages | <pre>void *pal_mem_alloc_pages (uint32 NumPages);</pre> | Platform- specific |
| free_pages | <pre>void pal_mem_free_pages (void *PageBase, uint32_t NumPages);</pre> | Platform- specific |
| mem_calloc | <pre>void *pal_mem_calloc(uint32_t num, uint32_t Size);</pre> | Platform- specific |
| aligned_alloc | <pre>void *pal_aligned_alloc(uint32_t alignment, uint32_t size);</pre> | Platform- specific |
| mem_free_aligned | <pre>void pal_mem_free_aligned(void *buffer);</pre> | Platform- specific |


5. SBSA ACS flow

This chapter provides an overview of the SBSA ACS flow diagram and SBSA test example flow.

5.1 SBSA ACS flow diagram

The following flow diagram shows the sequence of events from initialization of devices, initialization of SBSA test data structures, and test case execution.

Figure 5-1: SBSA flow diagram

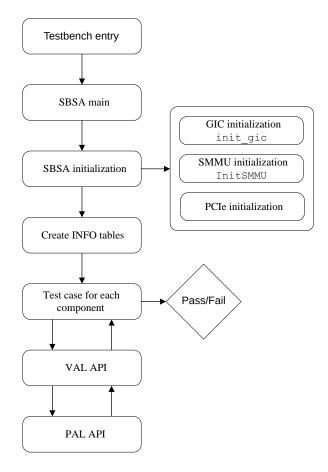


5.2 SBSA test example flow

If the device is Message-Signaled Interrupt (MSI) enabled, then the flag is set to MSI_ENABLED by the PAL layer. The test checks whether the device is of type endpoint and then checks if the flags are set to MSI_ENABLED.

The following flowchart shows the test that checks MSI support in a PCIe device.

Figure 5-2: SBSA example flow diagram

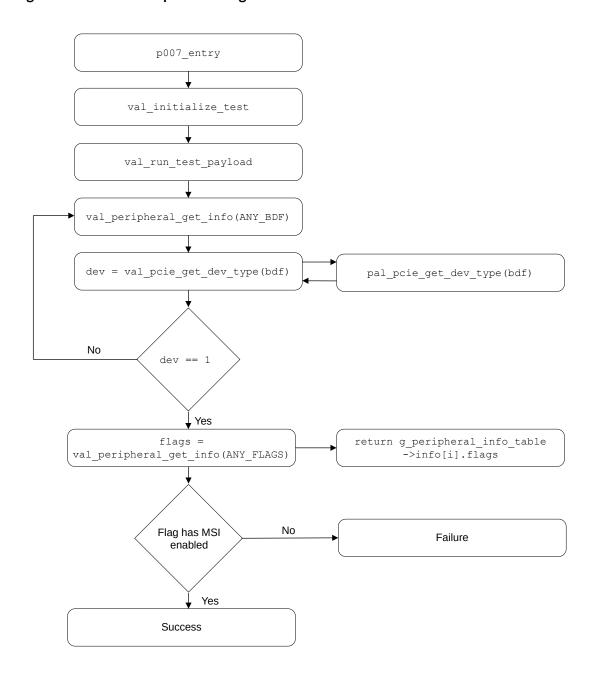

Appendix A Revisions

This appendix describes the technical changes between released issues of this book.

A.1 Revisions

This section consists of all the technical changes between different versions of this document.

Table A-1: Issue A

| Change | Location |
|----------------|----------|
| First release. | - |

Table A-2: Differences between Issue A and Issue 0100-02

| Change | Location |
|---|--|
| 1. Changed the file name of the component Timer and Watchdog. | See 2.4.1 Test |
| 2. Added two more components - DMA and Miscellaneous. | components on page 12. |
| Changed the node count in IOVIRT nodes. | See 3.1.4.1 Number of IOVIRT Nodes on page 18. |
| Added PLATFORM_OVERRIDE_GICITS_ID and PLATFORM_OVERRIDE_GICIRD_LENGTH in the GIC-specific tests section. | See 3.1.5 GIC on page 21. |
| Removed request_msi, free_msi, its_configure, and get_max_lpi_id APIs in the GIC section. | See 4.1.2 GIC on page 30. |
| Removed pal_pci_read_config_byte and pci_write_config_byte and added 10 new APIs in the PCIe section. | See 4.1.5 PCle on page 31. |
| Removed the create_info_table API in the SMMU section. | See 4.1.6 SMMU on page 32. |
| Removed pal_pcie.c and pal_pcie_enumeration.c APIs and added 8 new APIs in the Peripheral section. | See 4.1.7 Peripheral on page 33. |
| Renamed pal_mem_alloc_coherent API to pal_mem_alloc_cacheable API and pal_mem_free_coherent API to pal_mem_free_cacheable API. Added pal_mem_phys_to_virt API in the Miscellaneous section. | See 4.1.12 Miscellaneous on page 35. |

Table A-3: Differences between Issue 0100-02 and Issue 0100-03

| Change | Location |
|--|----------------------------------|
| Added get_rp_transaction_frwd_support API in PCIe. | See 4.1.5 PCle on page 31. |
| Added pal_is_bdf_exerciser API in Exerciser. | See 4.1.11 Exerciser on page 34. |

Table A-4: Differences between Issue 0100-03 and Issue 0301-01

| Change | Location |
|--|--|
| Updated the Execution of SBSA ACS | See 3. Execution of SBSA ACS on page 14. |
| Updated the Porting requirements | See 4. Porting requirements on page 29. |
| Added memory topic. | See 3.1.8 Memory on page 24. |
| Updated the SBSA example flow diagram. | See 5.2 SBSA test example flow on page 37. |

Table A-5: Differences between Issue 0301-01 and Issue 0302-01

| Change | Location |
|---|---|
| Updated information for the PCIe enumeration | See 3. Execution of SBSA ACS on page 14. |
| Added new APIs in Timer, PCIe, and Miscellaneous | See 4.1.3 Timer on page 30, 4.1.5 PCle on page 31, and 4.1.12 Miscellaneous on page 35. |

Table A-6: Differences between Issue 0302-01 and Issue 0701-01

| Change | Location |
|--|---|
| Changes to cp -r FVP/RDN2/platform_name | See 2.4 Steps to customize bare-metal code on page 12 |
| Added MPAM, PMU, RAS and HMAT components | See: |
| | • 3.1.9 MPAM on page 24 |
| | • 3.1.12 PMU on page 27 |
| | • 3.1.11 RAS on page 27 |
| | • 3.1.10 HMAT on page 26 |
| Added PAL APIs | See: |
| | • 4.1.8 MPAM on page 33 |
| | • 4.1.9 RAS on page 34 |
| | 4.1.12 Miscellaneous on page 35 |