# Microcomputer Systems



Course Title: Computer Organization and Architecture

Dr. Nazib Abdun Nasir Assistant Professor CS, AIUB nazib.nasir@aiub.edu

## Lecture Outline



- 1. Introduction to the architecture of microcomputers and IBM PC
- 2. Peripherals and their relations to the software or Programs
- 3. What computer does while executing instructions
- 4. Advantages and disadvantages of assembly language programming
- \*\*As a microcomputer user, you already know most of these terms

# Components of Microcomputer System



#### SYSTEM UNIT

### •I/O DEVICES OR PERIPHERALS

- > Keyboard
- Display Unit
- Disk drives

#### •INTEGRATED-CIRCUIT (IC)

- Contains transistors. Digital circuits [0's& 1's]
- Binary Digits/ Bits: 0 or 1



# Components of Microcomputer System



#### CPU:

- Brain of the computers
- Controls all the operations
- A single chip processor (microprocessor)

**MEMORY CIRCUITS:** Stores information

I/O CIRCUITS: Communicate with I/O devices

# The System Board



**System Board/motherboard** resides in the system unit It **contains** microprocessors and memory circuits

 It has expansion slots to connect additional circuit boards called add-in cards/add-in boards

I/O circuits are located in add-in cards

# A Glimpse of Motherboard





The Components of a Microcomputer System

# Memory



## **Bytes and Words:**

- ➤ Information processed is stored in memory
- ➤ A memory circuit element can store one bit of data [i.e. 0 or 1]
- ➤ Memory circuits are organized as a group of **8 bits** of data
- ➤8 bits of string = 1 Byte
- ➤ Memory bytes are known as **address**(i.e. street address of a house).



## Address Vs Contents



The stored data in a memory byte are called contents/value.

Address	Contents
The address of a memory byte is <b>FIXED</b> and different from other addresses( <b>unique</b> ).	Contents are <b>NOT</b> unique as they deal with current data.
The number of bits in an address depend on the processor [i.e. Intel 8086 = 20-bit & Intel 80286=24-bit ]	Contents of memory byte are always 8 bits

## Address Vs Contents



Address	Contents							
•		-						
•	·	٠	٠		•	•	•	•
7	0	0	1	0	1	1	0	1
6	1	1	0	0	1	1	1	0
5	0	0	0	0	1	1	0	1
4	1	1	1	0	1:	1	0	· 1
3	0	0	0	0	0	0	0	0
2	1	1	1	1	1	1	1	1
1	0	1	0	1	1.	1	1	0
0	0	1	1	0	0	0	0	1

# Memory byte addressing



Suppose a processor uses 20 bits for an address. How many memory bytes can be addressed using this processor?

- >A bit can have two possible values (i.e. 0 or 1)
- $\triangleright$  So, in a 20-bit address, we can have  $2^{20}$  or 10,48,576

In computer terminology  $2^{20} = 1$  Mega

Therefore, 20-bit address can be used to address 1 MB.

# Memory Word



In a Microcomputer, Two bytes = a word

So to store a word data, IBM PC needs:

- > A pair of successive memory bytes
- > A pair of memory bytes = Memory word


The **lower** address of the two memory bytes is the memory address.

> i.e. a memory word with address 2 is made up of address 2 and 3

A microprocessor can detect memory byte or memory word from memory location/address.

# Bit Positions in byte and Word



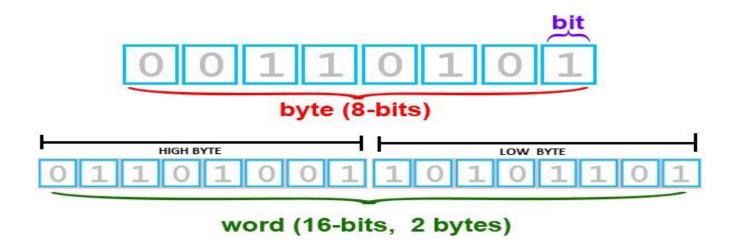

- Bit positions are numbered from Right to left
- •Bit 0-7 = low byte [Lower address of word]
- •Bit 8-15 = high byte [ Higher address of word]

# **Memory Operations**



The processor can perform **two** operations on memory

- Read or fetch the contents from a location
   Processor only gets a copy of the data
   Original contents of the location are unchanged
- ➤ Write or Store data at a location

  The data written become the new contents

  The Original/previous contents are lost

## RAM and ROM



### **RAM: Random Access Memory**

- RAM locations can be read and written
- Program instructions and data are stored
- > RAM memory are lost when the machine is turned off

### **ROM: Read Only Memory**

- Once initialized can't be changed (Read Only)
- Retain values unlike RAM [example]
- ROM based programs are known as firmware
- Responsible for loading start-up programs

## BUSES



A processor communicates with memory and I/O devices by using signals.

Signals are travelled along set of wires or connections called buses.

There are three kinds of signals and buses


- ➤ Address → Address Buses
- ➤ Data → Data Buses
- ➤ Control → Control Buses

## BUSES(cont'd...)

Address Bus: The CPU places the address of memory location on address bus to read the contents.

Data Bus: CPU receives the data, sent by memory circuits on the data bus.

**Control Bus:** CPU sends control signals on control bus perform read operation in memory.

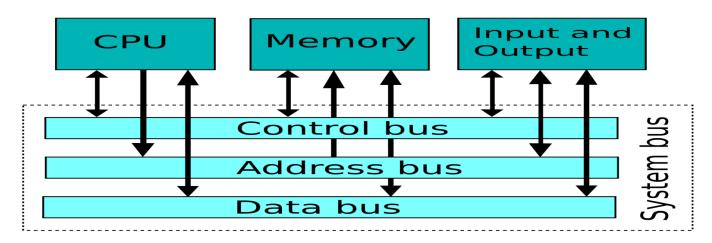

## CPU



CPU is the brain of computer.

CPU controls computer by executing programs (i.e. system or application).

Each instruction CPU executes, is a **bit** string.

Machine language: The language of 0's and 1's


- ➤ Instructions are designed to be simple
- Sequence of very basic operations

**Instruction Set:** The instructions performed by CPU.

The instructions set for each CPU is unique

# Intel 8086 Microprocessor Organization



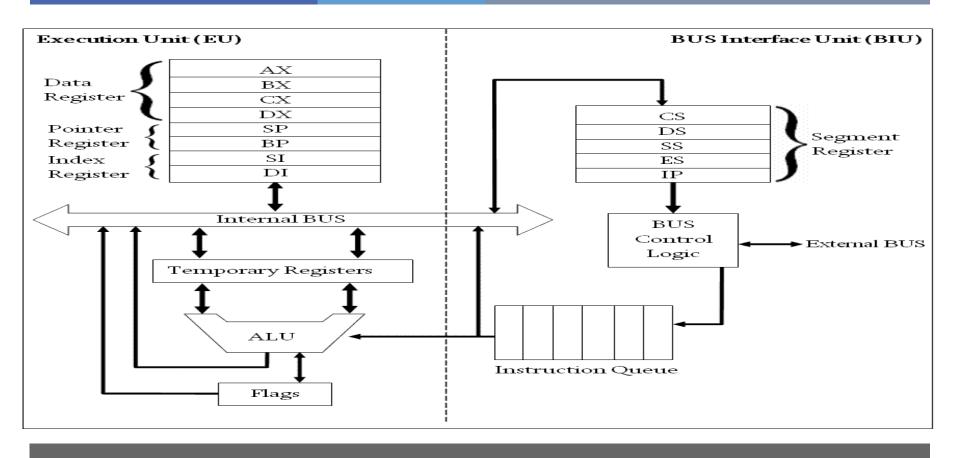



## **Execution Unit (EU)**

- EU contains ALU circuits.
- ALU performs arithmetic and logical operations.
- Data operations are stored in registers.
- A register is like memory location; however, we refer to it by name not number.
  - ▶i.e. AX, BX, CX, DX, SI, DI, SP, BP
- Also, EU Contains temporary registers for holding operands for the ALU and FLAGS registers.
- FLAG register's individual bits reflect the result of computation



## **Bus Interface Unit (BIU)**

- BIU enables communication between the EU and memory or I/O circuits.
- Primarily responsible for transmitting address, data and control signals on the buses.
- BIU registers are: CS,DS, ES and IP
  - ➤ BIU registers hold the addresses of the memory locations



## **EU** and **BIU**

- EU and BIU are connected by internal bus and they work together.
- While EU executes an Instruction, BIU fetches up to six bytes of the next instruction and places instructions in instruction queue (IQ).
- The overall process is called instruction prefetch and it's purpose is to speed up the processor.
- However, if EU needs to communicate with memory, BIU suspends instruction prefetch and performs required operations.





I/O ports functions as **transfer points** between the CPU and I/O devices.

I/O devices are connected through I/O ports



Serial	Parallel
Transfers 1 bit at a time	Transfers 8 or 16 bits at a time
Serial ports tend to be slower	Requires more wiring connection
Slow devices are connected to serial port. (i.e. Keyboard)	Fast devices are connected to parallel port. (i.e. disk drive)





#### How the CPU operated?

Machine language has two parts

- **≻ Opcode:** Type of operation
- Operands: Data to be operated on (Memory addresses are used)

#### The fetch- execute cycle

#### **Fetch**

- > Fetch an instruction from memory
- > Decode the instruction to determine the operation
- > Fetch data from memory if necessary


#### **Execute cycle**

- Perform operation on the data
- > Store the result if needed

# Timing



To ensure execution steps are carried out in an **orderly fashion**, a clock circuit controls the processor by generating a **train of clock pulses** 

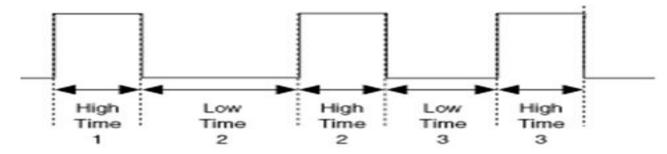

**Clock Period:** The time interval between two pulses.

**Clock rate/speed:** Number of Pulses per second.

- Measured in Megahertz (MHz)
- > 1 MHz = **1000000** (1 million) pulses per second



## **Timing Task**

If you have computer with processor 2.3 GHz, How many pulses are generated per seconds from your computer?

>2.3 X 1000X 1000000 = 2,30,00,00,000 pulses



# Programming Languages

- Machine Language: Bit strings (i.e. 0 & 1)
- Assembly language:
  - ➤ Symbolic names are used to represent operations, registers and memory locations(i.e. MOV AX, A)
  - Assembly program must be converted into machine language using assembler.
- High-Level language:
  - ➤ Allows programmer to write program in more natural language text.
  - ➤ A Compiler is needed to translate high-level programs into machine language





## **High-level**

- Closer to natural language.
   So, algorithm conversion in easier.
- Less instruction and time required than assembly language.
- Programs can be executed in any machine

## **Assembly**

- So close to the machine language. So programs are faster and shorter.
- Reading or writing to specific memory location, I/O ports is easy.
- It can be a sub program of a high-level language.
- Going into more details like how computer thinks.

## References



- Assembly Language Programming and Organization of the IBM PC, Ytha Yu and Charles Marut, McGraw Hill, 1992. (ISBN: 0-07-072692-2).
- https://www.researchgate.net/publication/323880534 Lecture 1 Introduction to Microcomputer Microprocessor

## **Books**



- Assembly Language Programming and Organization of the IBM PC, Ytha Yu and Charles Marut, McGraw Hill, 1992. (ISBN: 0-07-072692-2).
- Essentials of Computer Organization and Architecture, (Third Edition), Linda Null and Julia Lobur
- W. Stallings, "Computer Organization and Architecture: Designing for performance", 67h Edition, Prentice Hall of India, 2003, ISBN 81 – 203 – 2962 – 7
- Computer Organization and Architecture by John P. Haynes.