



smorphi

transforming learning with transformer robots

(assembly & info)

(contents)

PART LIST	(02)
BASIC ASSEMBLY TIPS	(03)
SMORPHI ASSEMBLY	
MECHANICAL	(05)
B ELECTRONIC	(22)
APP	(41)
FURTHER EXPLORATION	(44)


(part list)

All colors of parts are represented accurately here.
In the assembly steps, colors of some parts will be changed for diagram clarity.

8 x Acrylic Base Plate		6 x Hinge Mount	J	28 x Hex F-F M3 Nylon 10mm	-
4 x Aluminium Base Plate	4	3 x Hinge Mechanism	Na.	200 x Cap Screw M3x5)=
8 x Base Skirt Panel A	MA	1 x Battery		50 x Cap Screw M3x25	Danness
8 x Base Skirt Panel B		2 x Battery bracket	*	15 x Countersunk Screw M4x8)iii
8 x Mecanum Wheel (Right)	4	1 x Masterboard (ESP32)		2 x Wing Screw M3x5	>-
8 x Mecanum Wheel (Left)		4 x Slaveboard		1 x USB-C Cable	~
16 x Mecanum Motor	-	1 x Sound Sensor	AL PA	8 x 4-pin Connector	
16 x Motor Shaft Sleeve	I.	1 x Temperature Sensor	1	4 x 8-pin Connector	STATE OF THE PARTY
16 x Motor Mount	O	4 x IR Sensor	-15	1 x Battery Charger	
6 x Solenoid	4	1 x Pixy2 Camera	*	1 x Ceramic Screwdriver CD-25	
6 x Solenoid Latch Mount	A	1 x Pixy2 Mount		1 x HEX Key 1.5mm	<
6 x Solenoid Latch Guide	4	10 x Sensor Lock		1 x Ribbon cable (included in pixycam package)	
	^	70 5.47			


32 x Hex M-F M3 Nylon 45mm

(basic assembly tips)

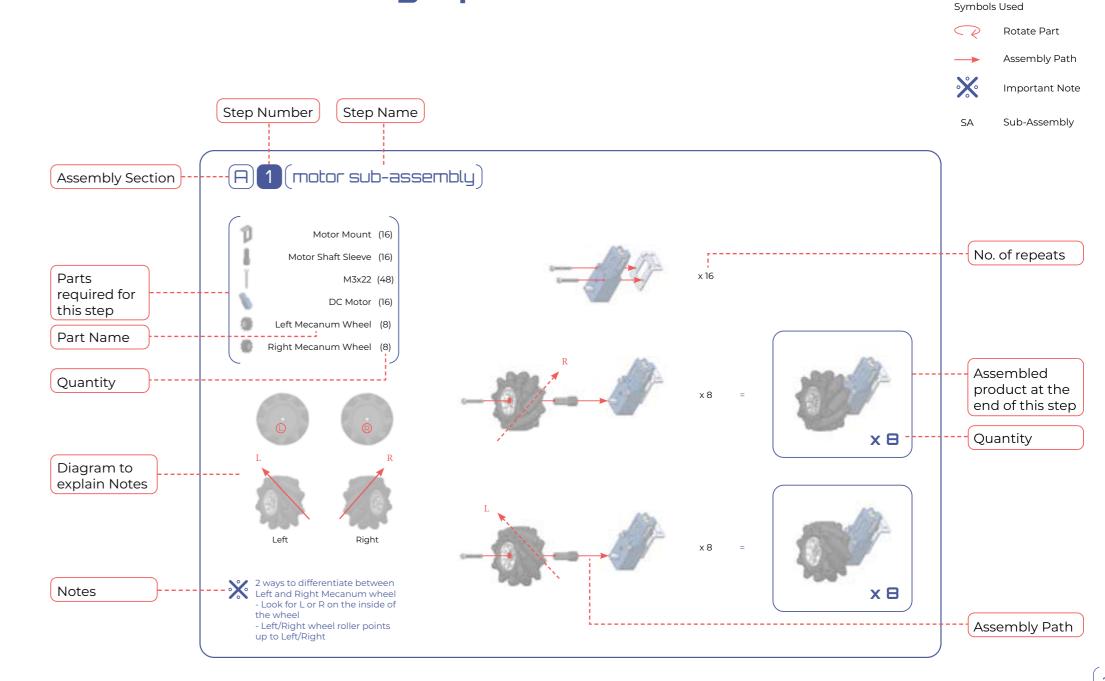



6 x Solenoid Catch

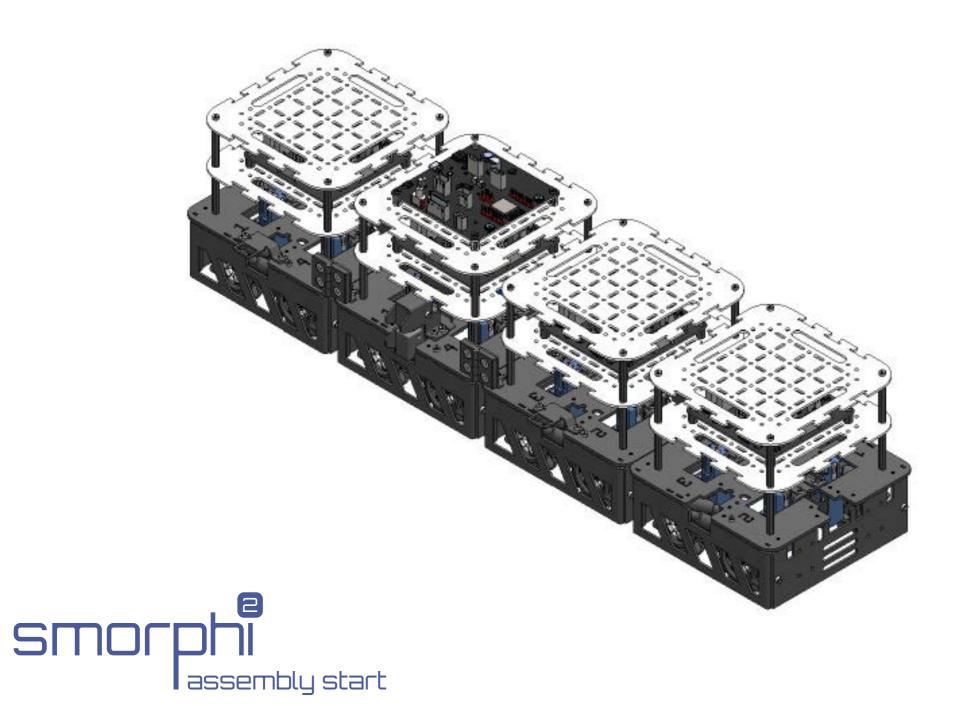


A 1 (motor sub-assembly)



2 ways to differentiate between Left and Right Mecanum wheel - Look for L or R on the inside of

- Left/Right wheel roller points up to Left/Right

the wheel

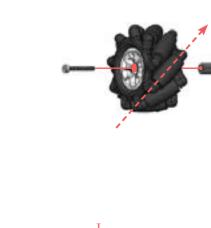










4


A 2 (base module sub-assembly)




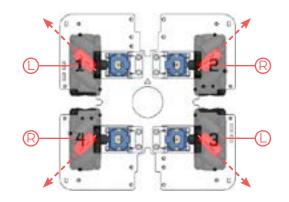


Make sure that the numbers are facing the right way up as shown in the plan view above.

Before attaching each wheel, check that the wheel is of the correct orientation for each numbered slot.

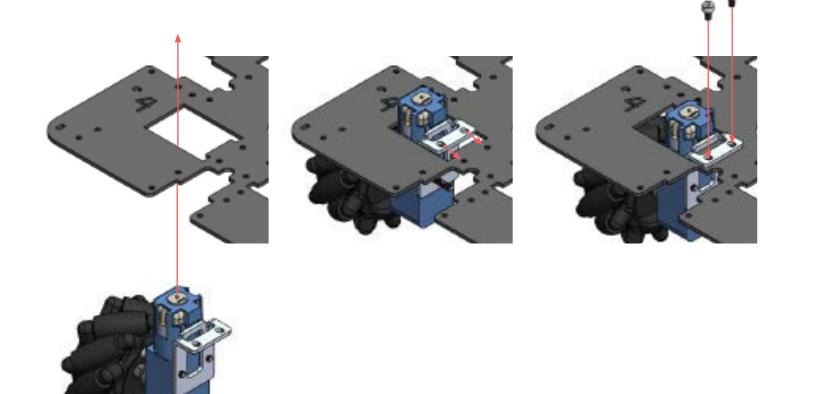

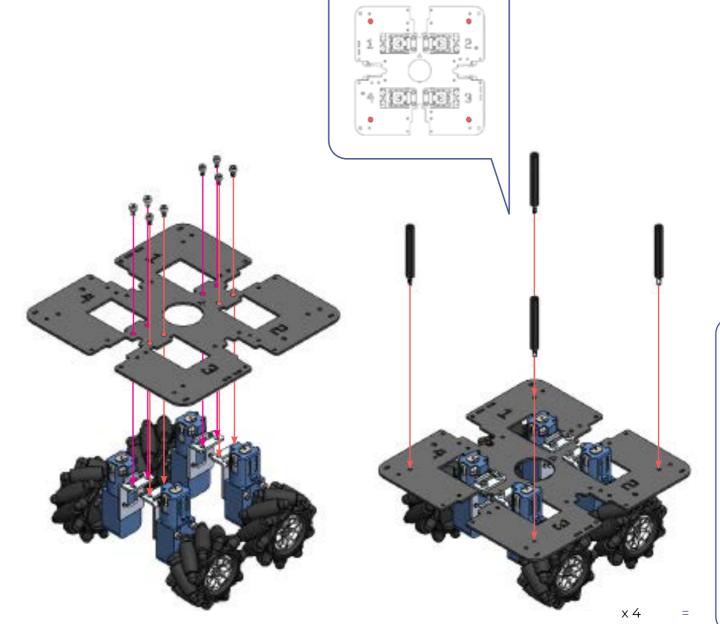

plan view

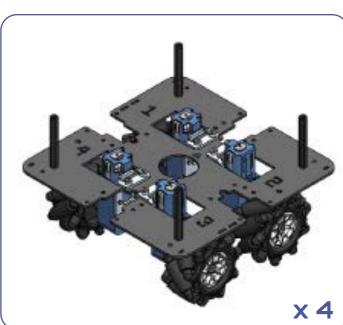




Base Skirt Panel A (8)


Base Skirt Panel B (8)


M3 x 5 (24)

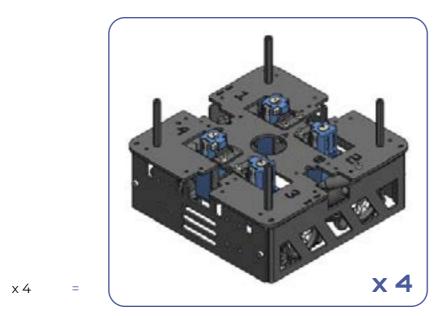



A 3 (solenoid latch sub-assembly)



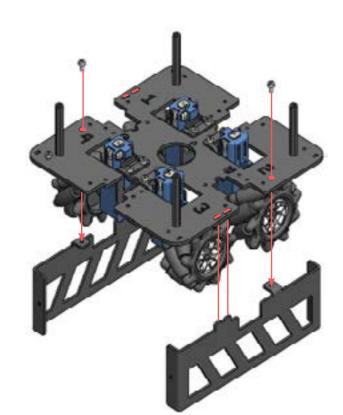

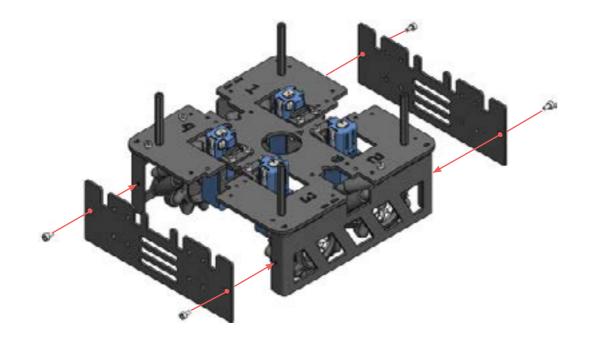


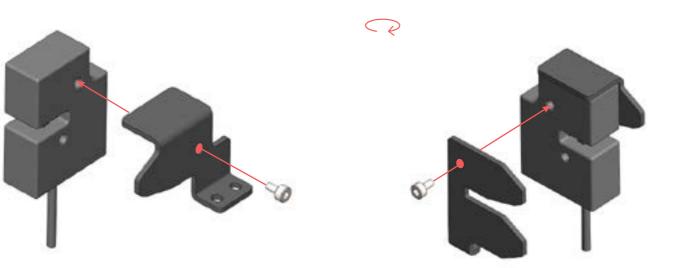

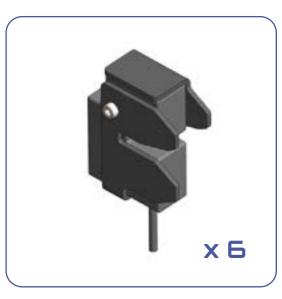



A (module 1 mechanical sub-assembly)



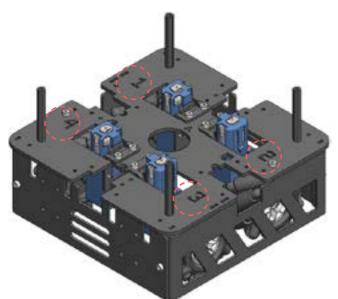




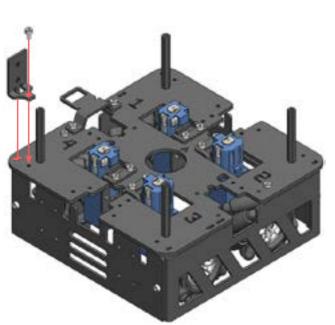

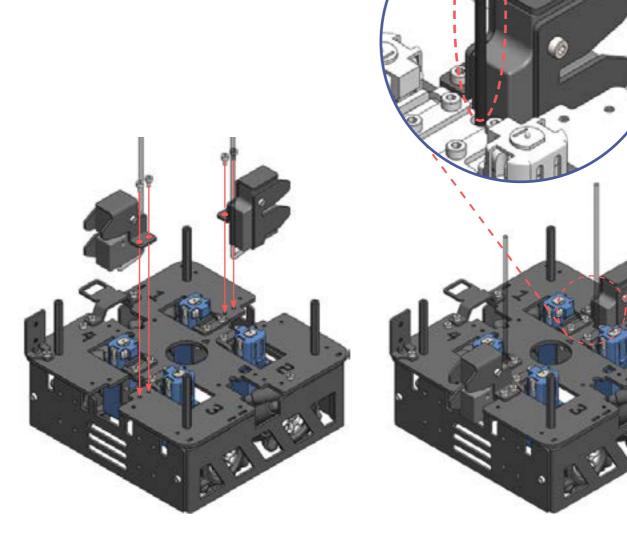


Solenoid Wire

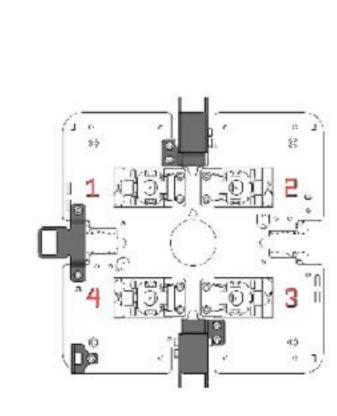



Check that the parts have been attached in the right location, in relation to the numbers.


A 5 (module 2 mechanical sub-assembly)

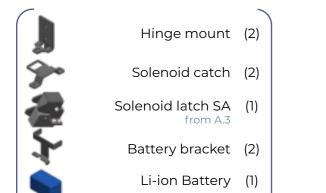


Base Module SA (1) from A.2

M3 x 5 (9)


Wing Screw M3 x 5 (1)

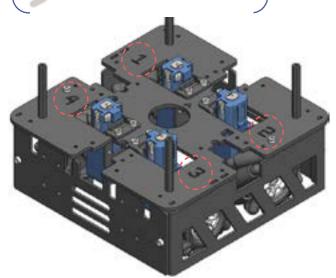


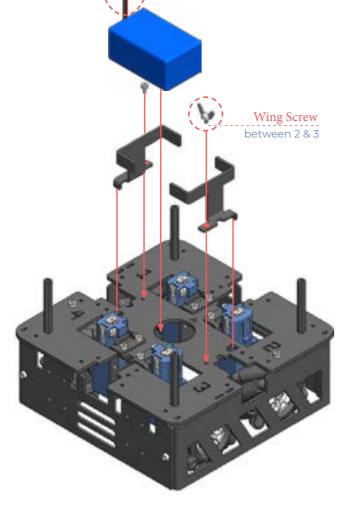



Battery wire

orientation

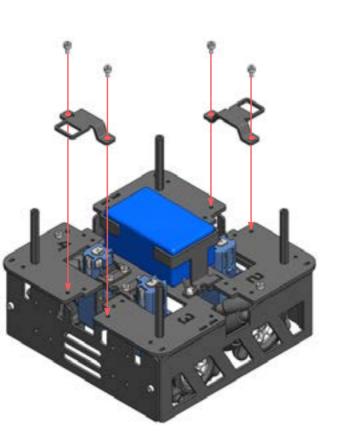

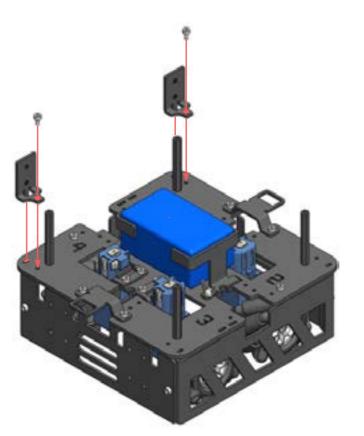

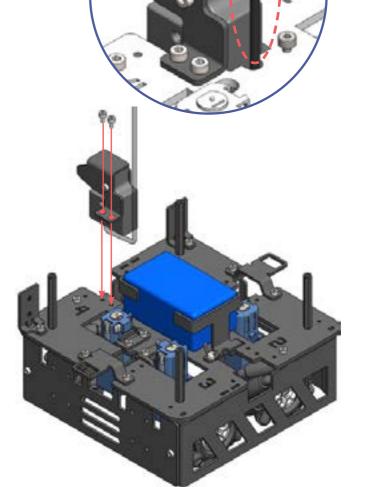

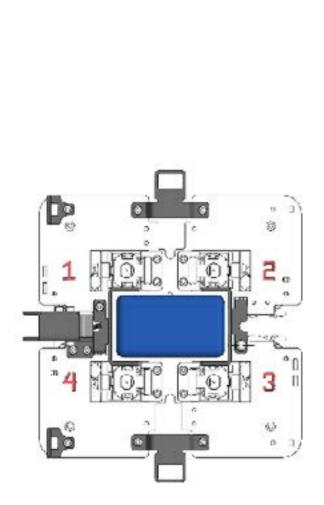

Solenoid Wire







A 6 module 3 mechanical sub-assembly







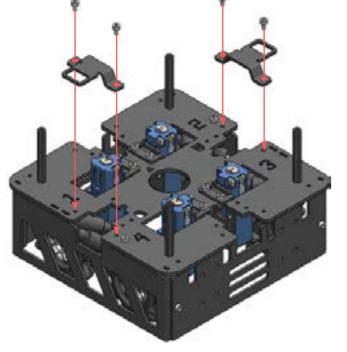



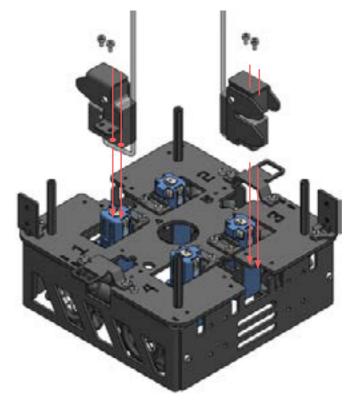


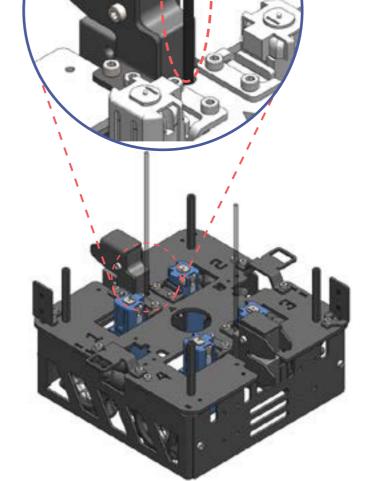

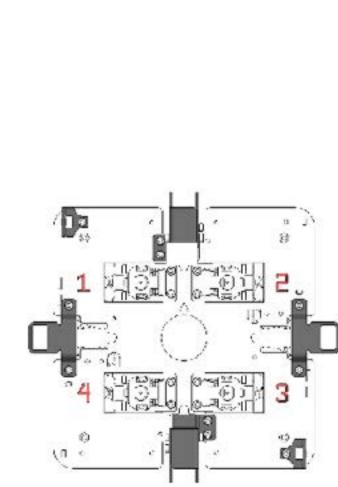


Solenoid Wire




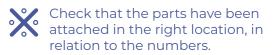


(module 4 mechanical sub-assembly)




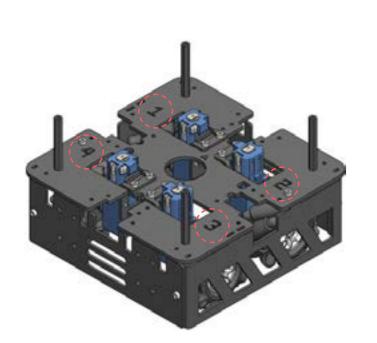


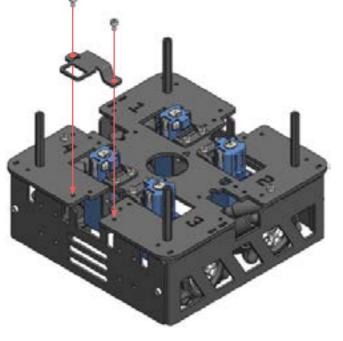



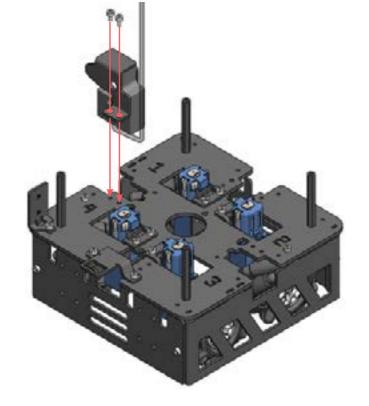


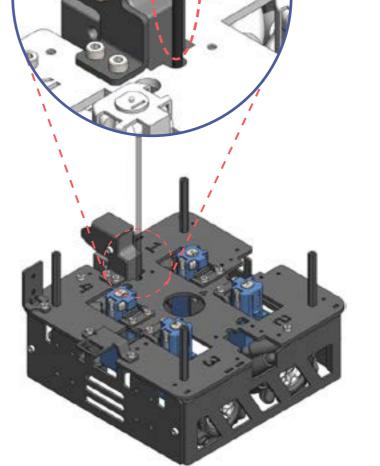

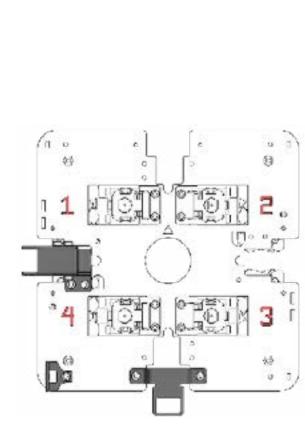



Solenoid Wire


Pay attention to the numbers and their positions in relation to the parts being attached.

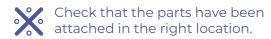



AB(full mechanical assembly)

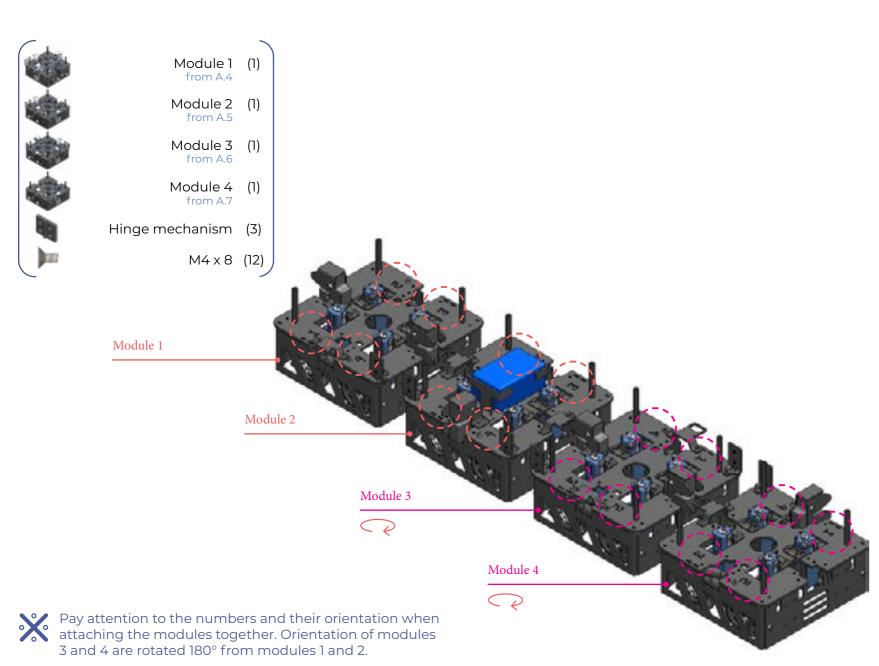


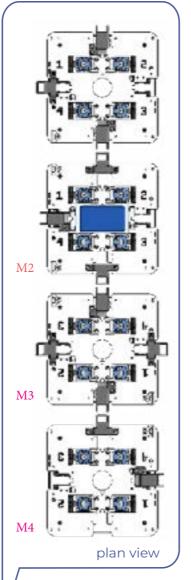


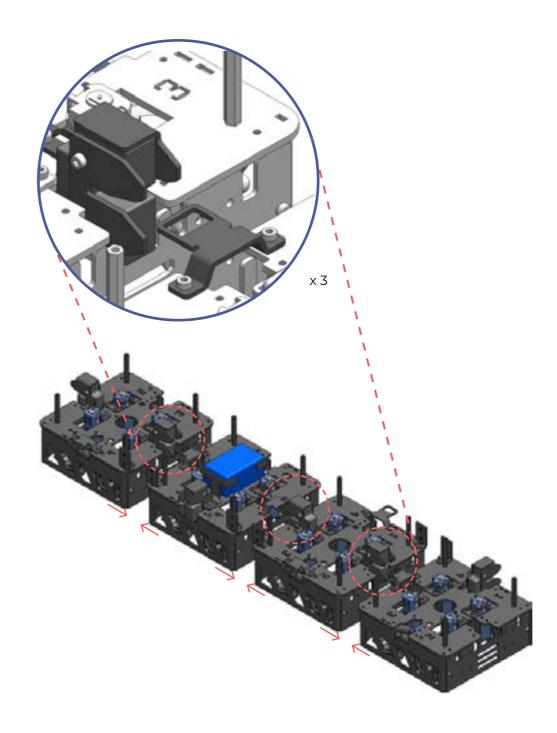

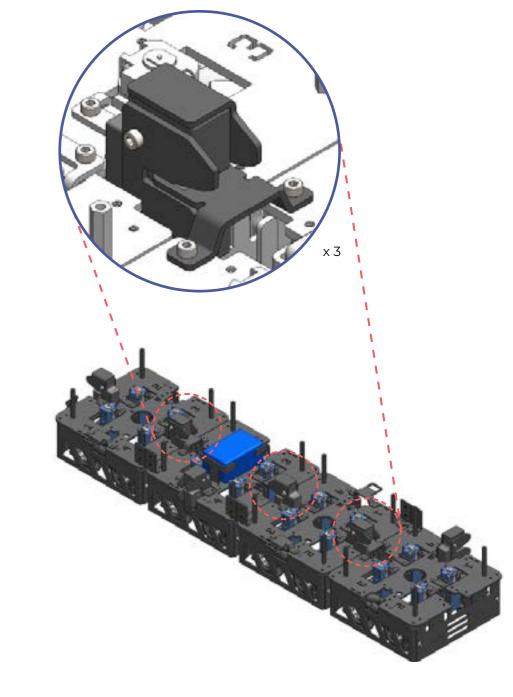

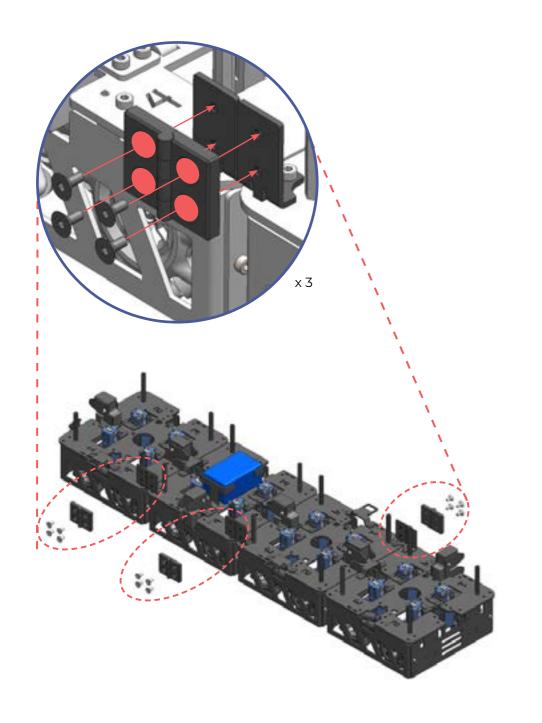

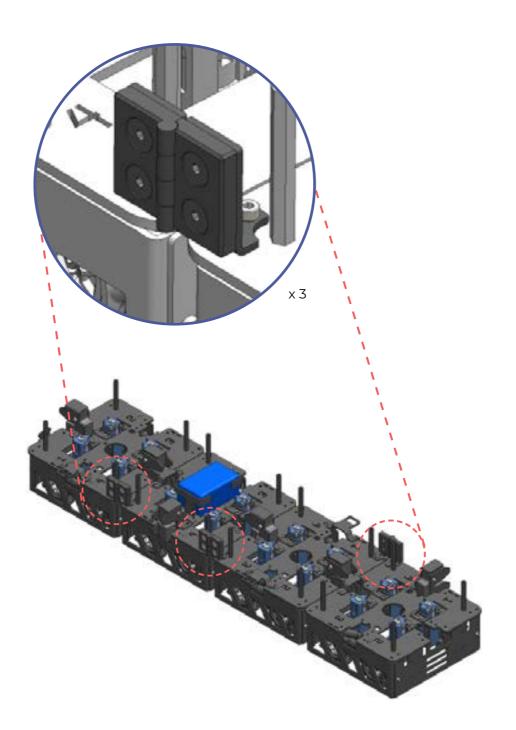

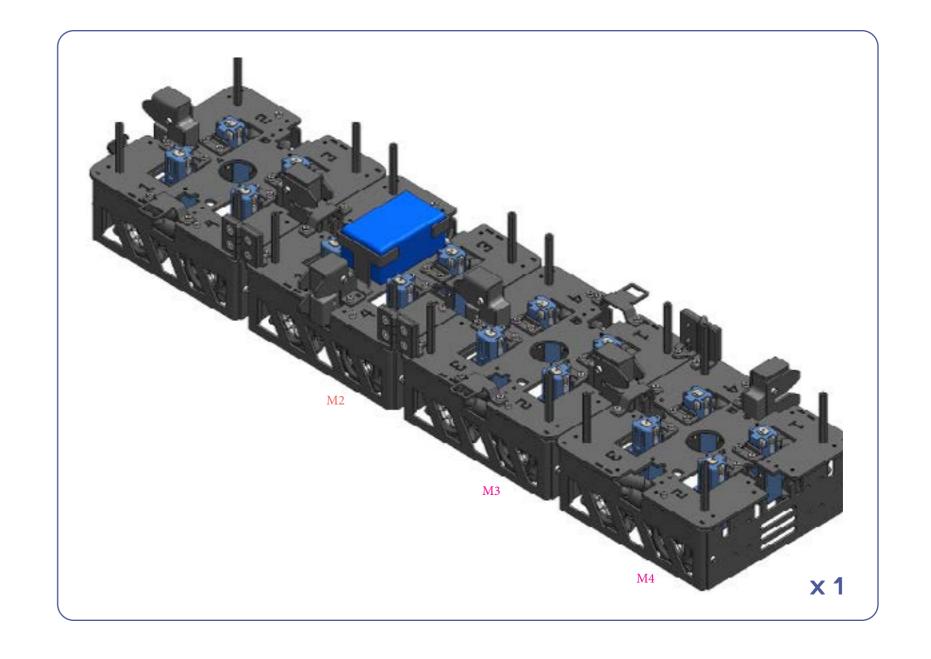

Check all the positions of solenoids, solenoid catches, hinge mounts before proceeding to section B.





B 1 (e-tray sub-assembly)









Slaveboard 4 identical pieces




How to differentiate between masterboard and slaveboards:


- Masterboard has a special switch

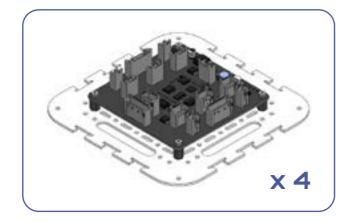


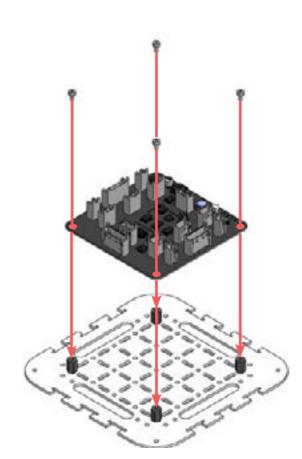


B2(e-tray onto mechanical assembly)

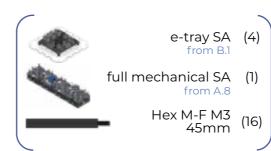

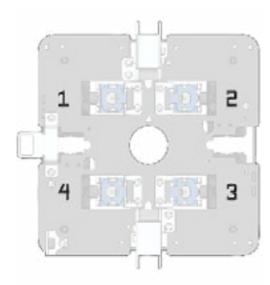

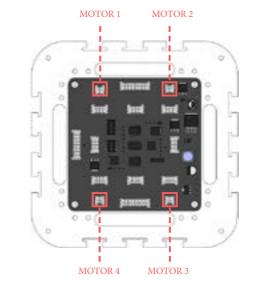

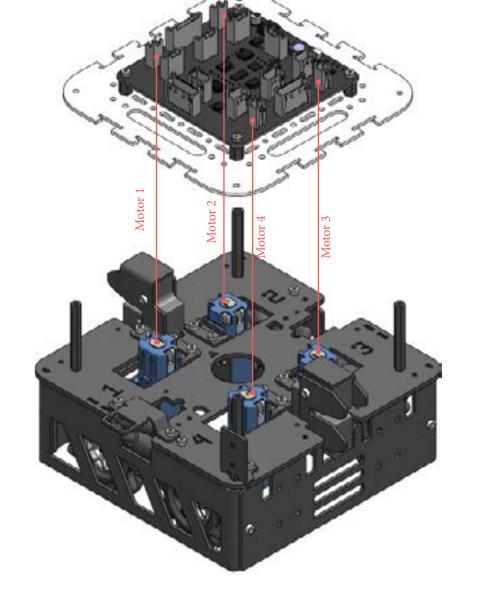





Orientate e-tray SA and base module as shown on the right.


Motor 1 connector on e-tray should be on top of Motor 1 of base module.

Same goes for Motor 2, 3 and 4.



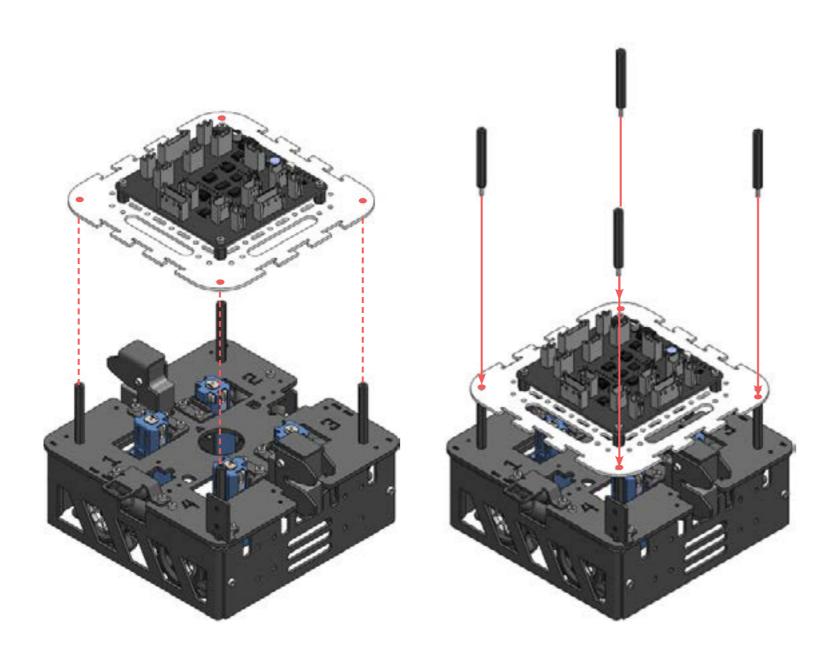

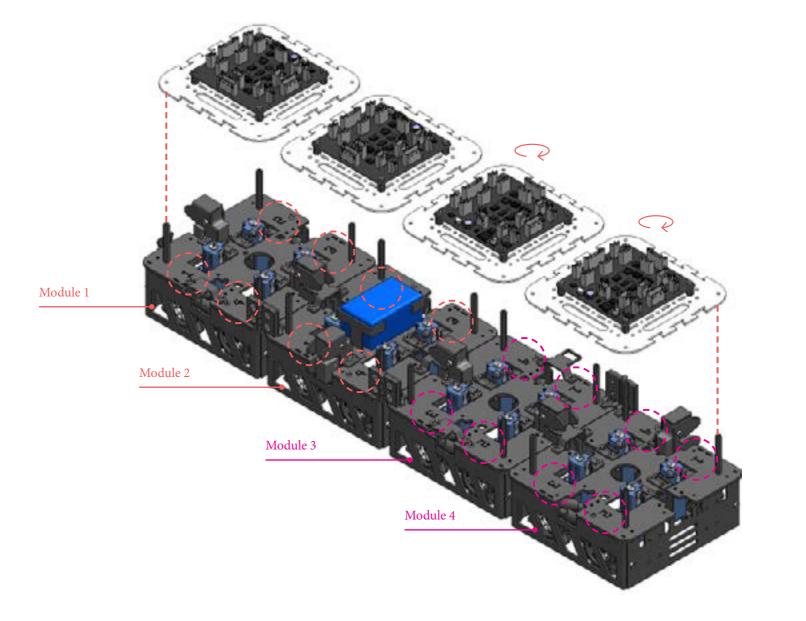

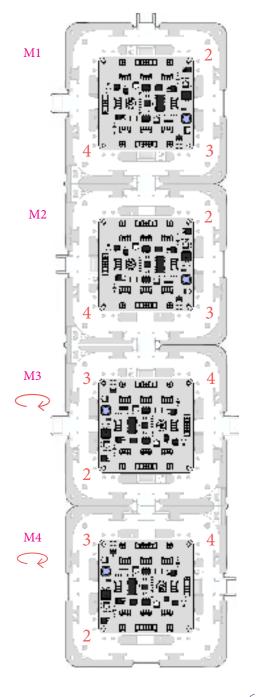



Before attaching the e-tray SA, please flip all the cables and connectors for motors and solenoids (not shown in diagram for clarity) out, for easy attachment later on.




Orientation of modules 3 and 4 are rotated 180° from modules 1 and 2. Therefore, make sure that the e-tray SAs for module 3 and 4 are also rotated 180° to correspond to the motor orientation as numbered.



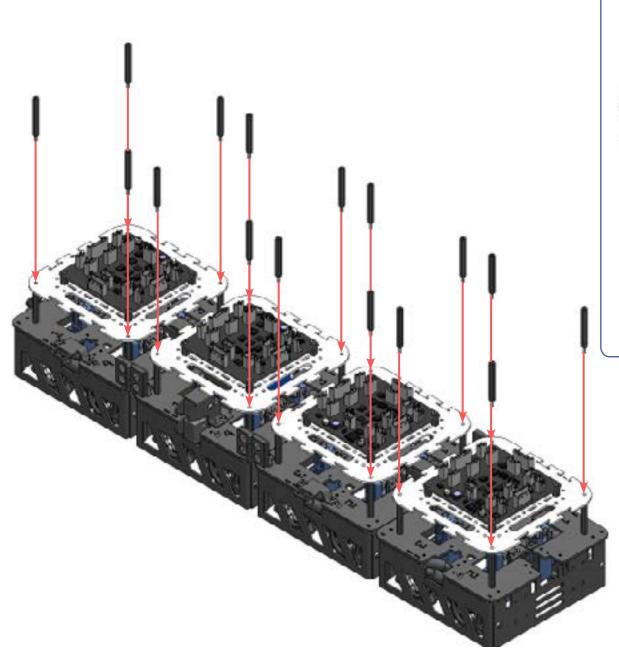

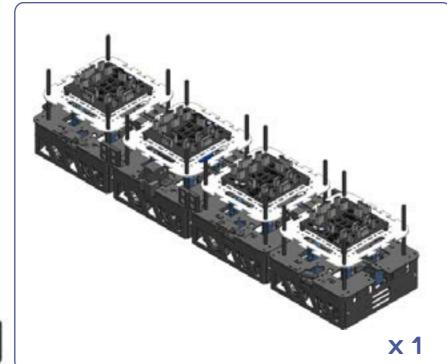



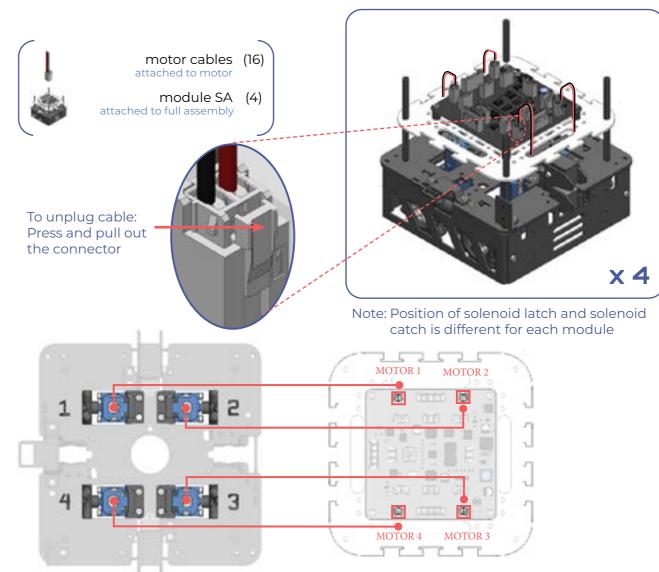



Make sure that Motor 1 is connected to Motor 1 connector on Slaveboard; the same goes for Motor 2, 3 and 4.



Motor cable connection is the same for all 4 modules



Module 1 to 4

Motor Connection





B4 (module 1 solenoid cable connection)

I


solenoid cables (2) attached to solenoids

module 1 SA (1) attached to full assembly

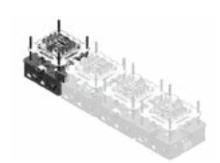

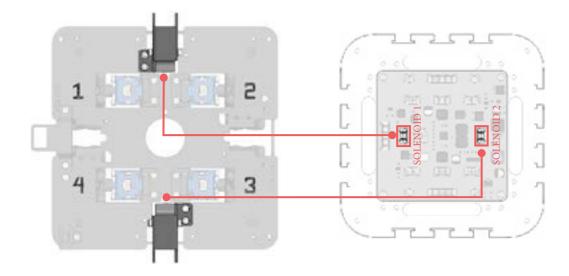



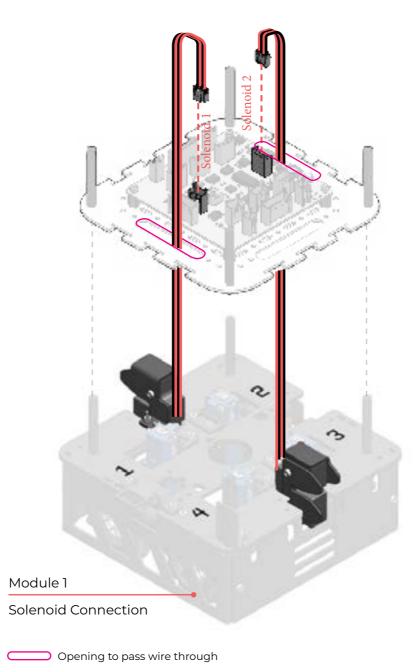







solenoid cables (1) attached to solenoids


module 2 SA (1) attached to full assembly



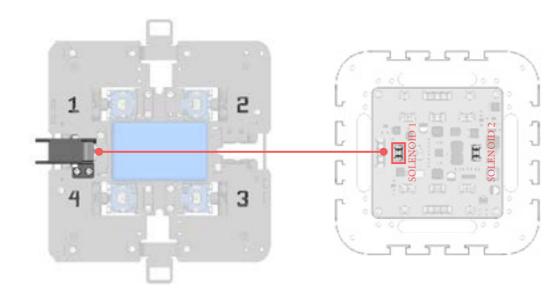



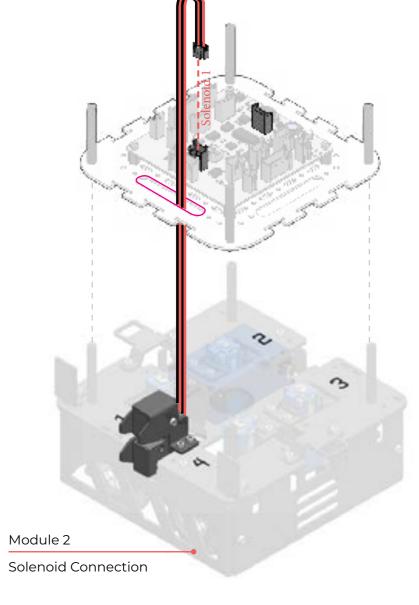

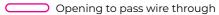





B 6 (**module 3** solenoid cable connection)


solenoid cables (2) attached to solenoids

module 3 SA (1) attached to full assembly

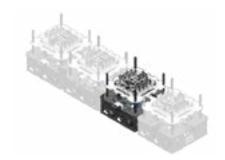

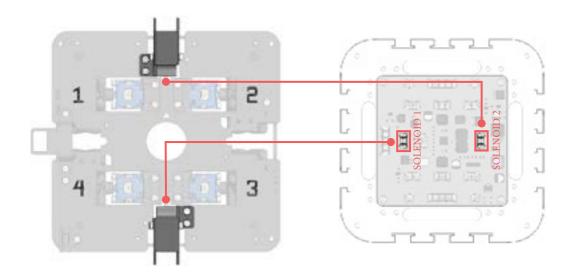



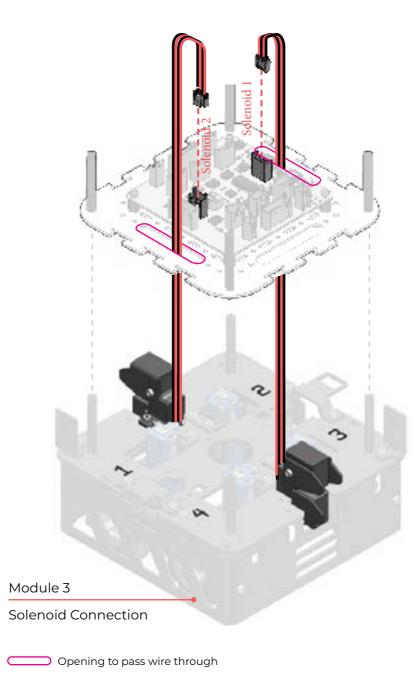








solenoid cables (1) attached to solenoids

module 4 SA (1) attached to full assembly

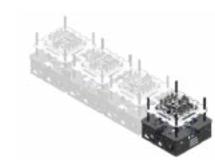

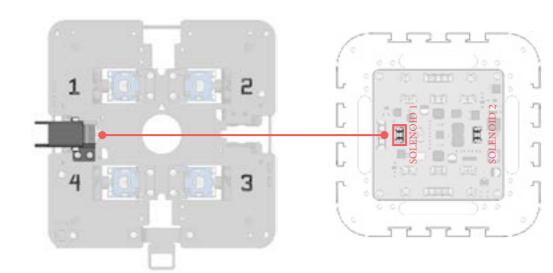


Make sure to connect the solenoid to the labelled solenoid connector exactly as in the diagram below.

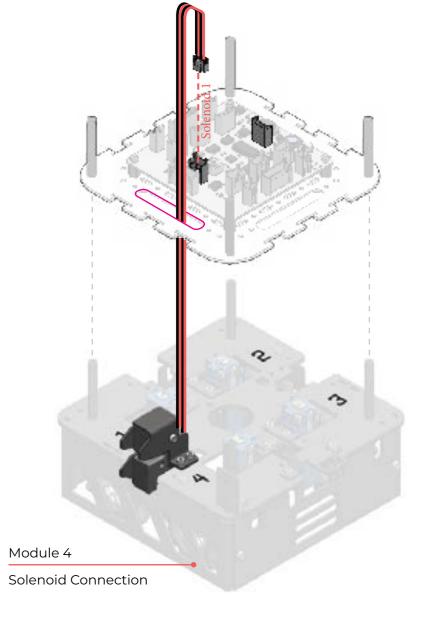


Opening to pass wire through




B (inter-module cable connection)

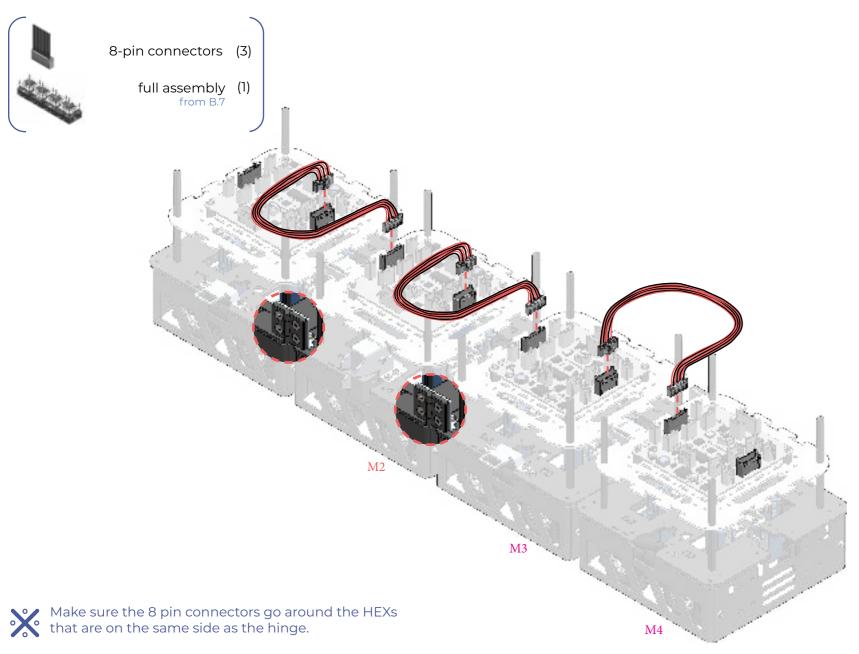

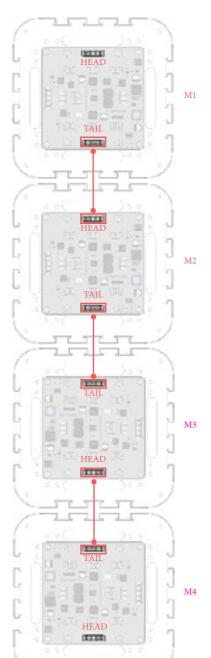






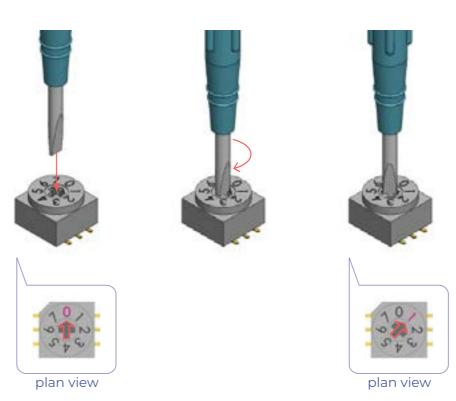




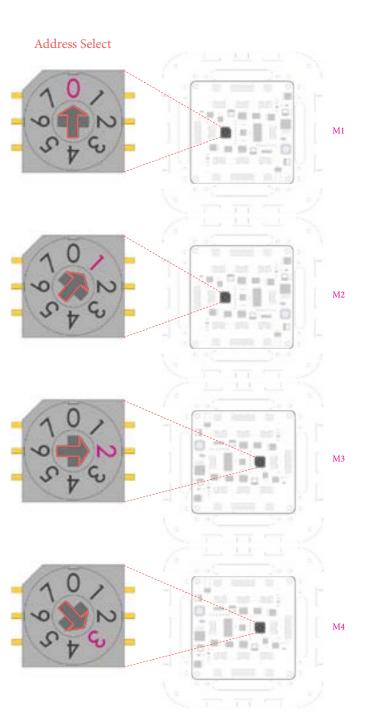

B12 (masterboard e-tray sub-assembly)




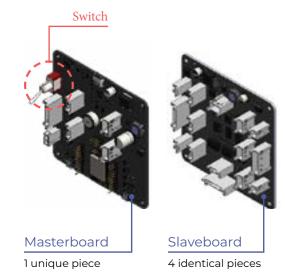


Make sure that you are attaching the masterboard and not the slaveboards.


How to differentiate between masterboard and slaveboards:


- Masterboard has a special switch

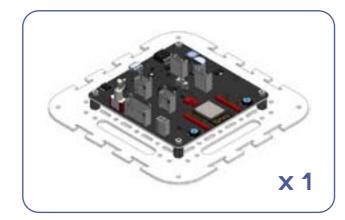

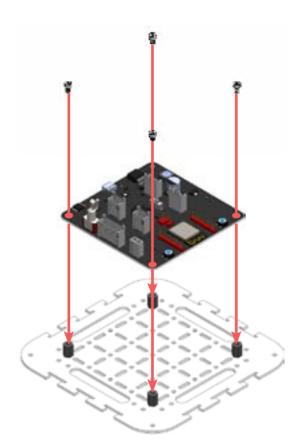


B 11 (masterboard e-tray onto main assembly)

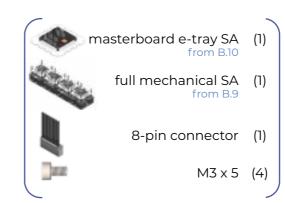

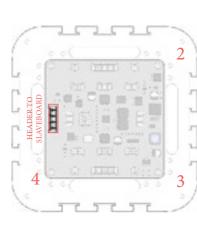




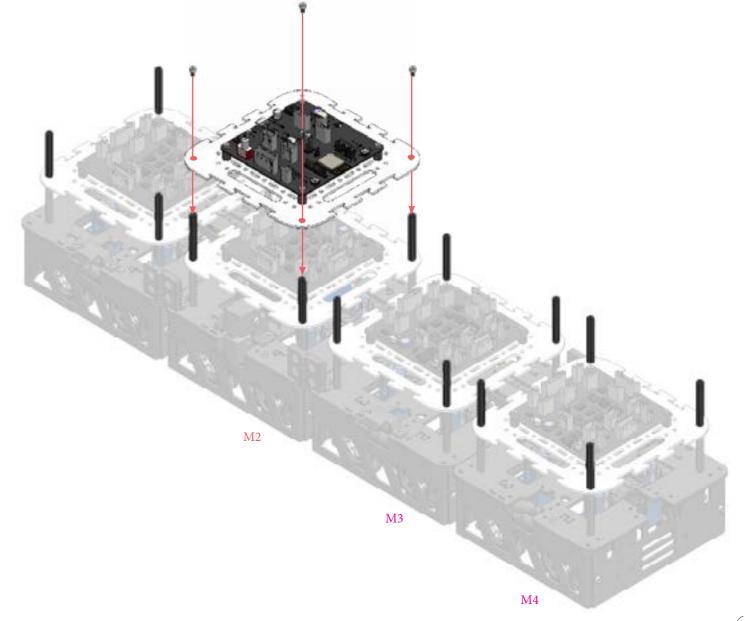







"DO NOT PLUG-IN / UNPLUG THE CONNECTOR CABLES WHILE THE POWER SUPPLY IS ACTIVELY PROVIDED (EITHER THROUGH BATTERY/ USB)"

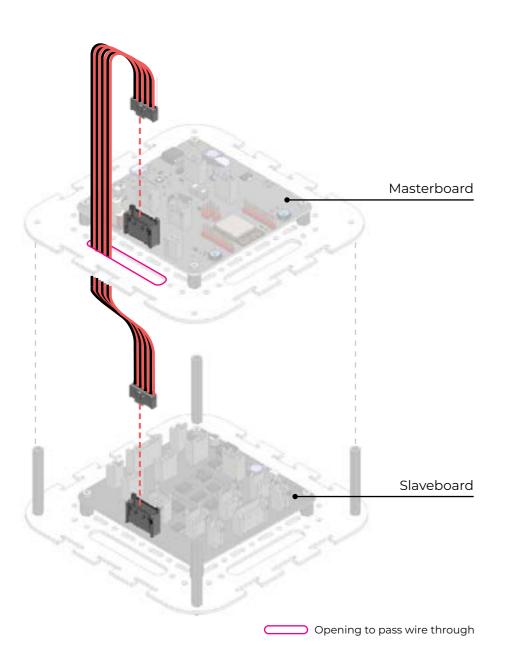


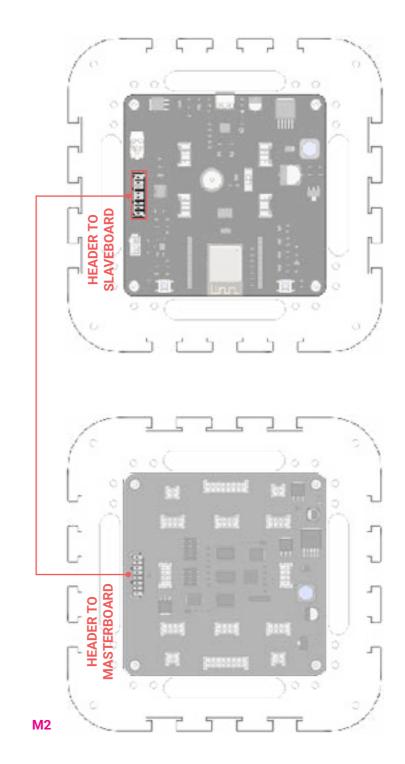



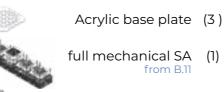

M3 x 5 (12)

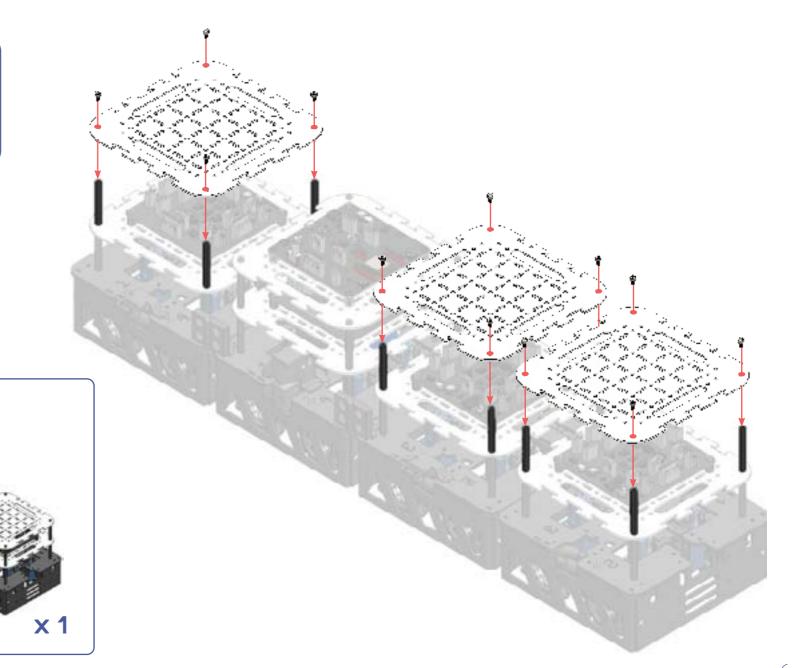



B13(connect battery to masterboard)

Module 2

Battery Connection



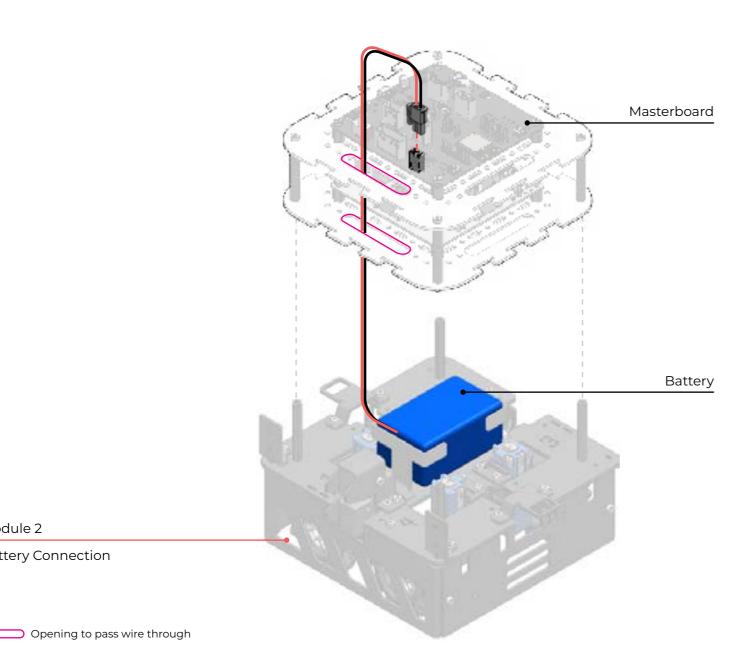

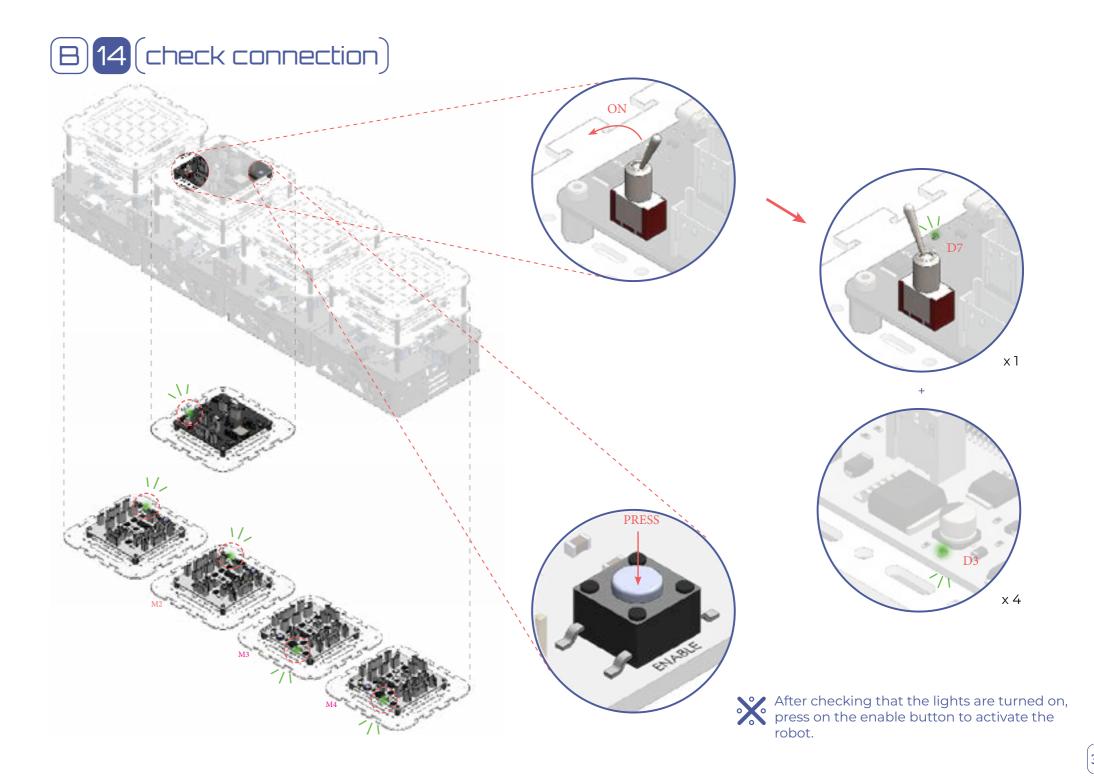







1. App Download.


Not all devices are compatible now.

See the table below to check if your device is compatible with the Smorphi app.


	Smorphi Ap	p Information	
Available Platforms	(Android)
Download from	(Google Play)
App Icon & Name		smorphi	
System Requirements		Android 6+)
OS Requirements		Android 6+ Bluetooth 4.0+	



2. Bluetooth Connection. Turn on Smorphi and the Bluetooth of your smart device. Tap on Smorphi app icon to launch application.

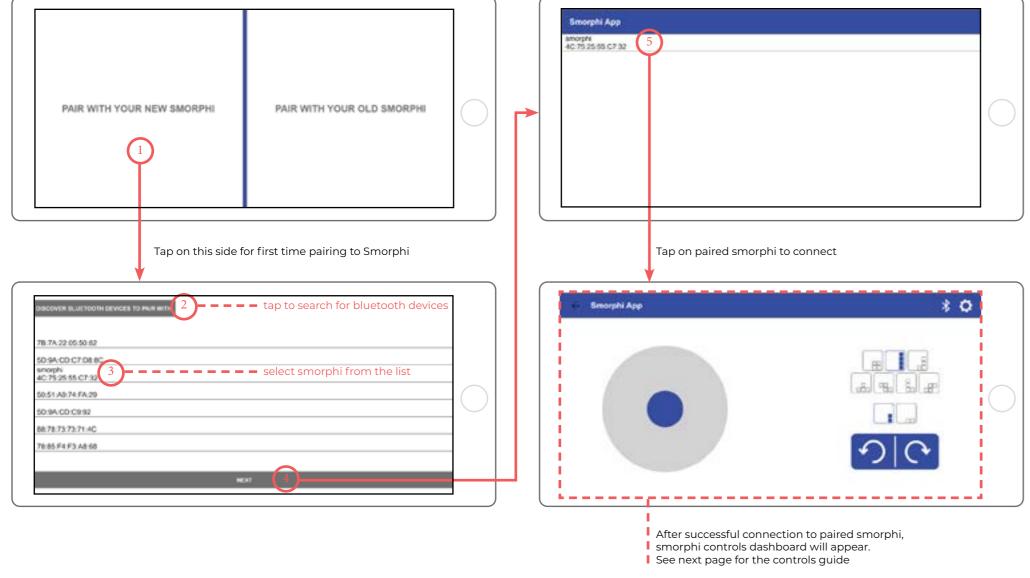



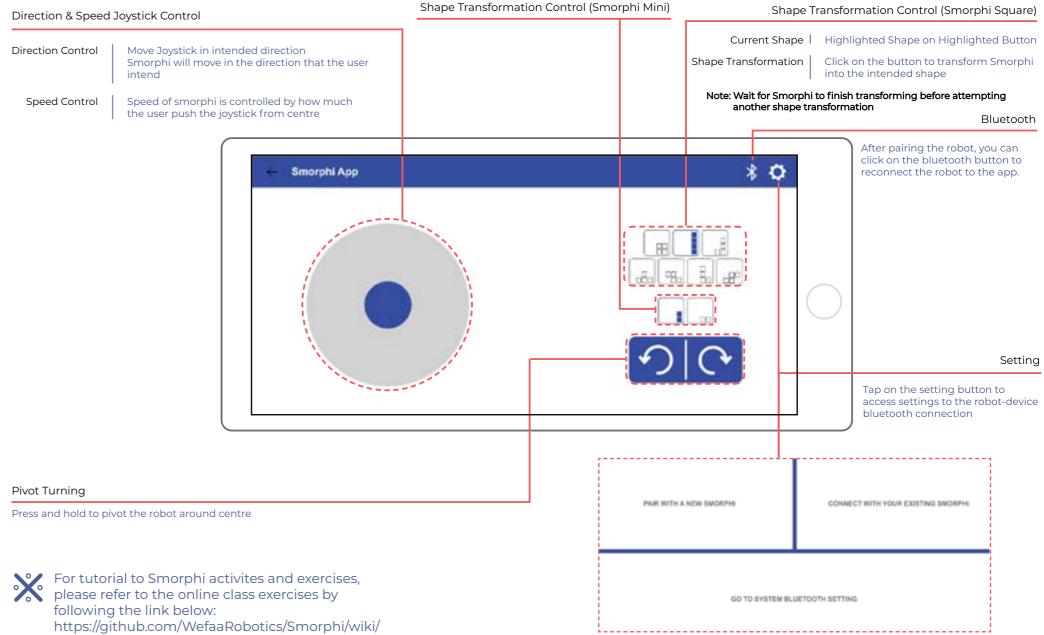

sensors)



sound sensor

Sound sensor measures volume of sound. Onboard potentiometer* can be used to tune the range of sensing.

Possible applications: sound-triggered shape transformation or sound-triggered locomotion.



temperature sensor

Temperature sensor measures surrounding

temperature, with a range of -55°C to 125°C.



IR sensors comes with 2 different modes, toggled by the switch onboard the sensor itself. One IR is front-facing and can be used to detect obstacles ahead. The other IR faces the ground and can be used for path tracking.



For sensor related activities and implementation, please refer to the online class exercises by following the link below:

https://github.com/WefaaRobotics/Smorphi/wiki/ **Robot-Exercises**




Pixy2 camera


Pixy2 Camera is able to colour code, detect and track lines and intersections, and learn to detect objects taught to it.



Tutorial on how to operate the potentiometer can be found by following the link below: https://github.com/WefaaRobotics/Smorphi/wiki/ Exercise-6


(sound/IR sensor wiring)

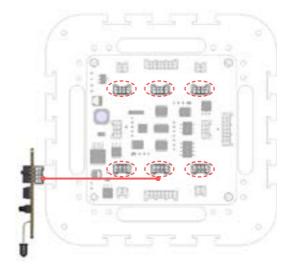


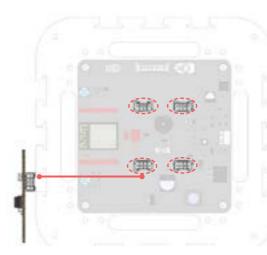


Module 1/2/3/4

slaveboard

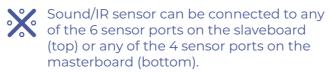

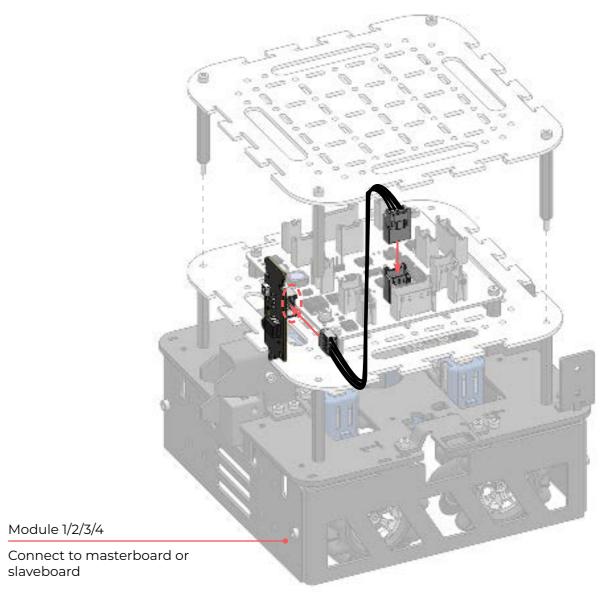



(temperature sensor wiring)

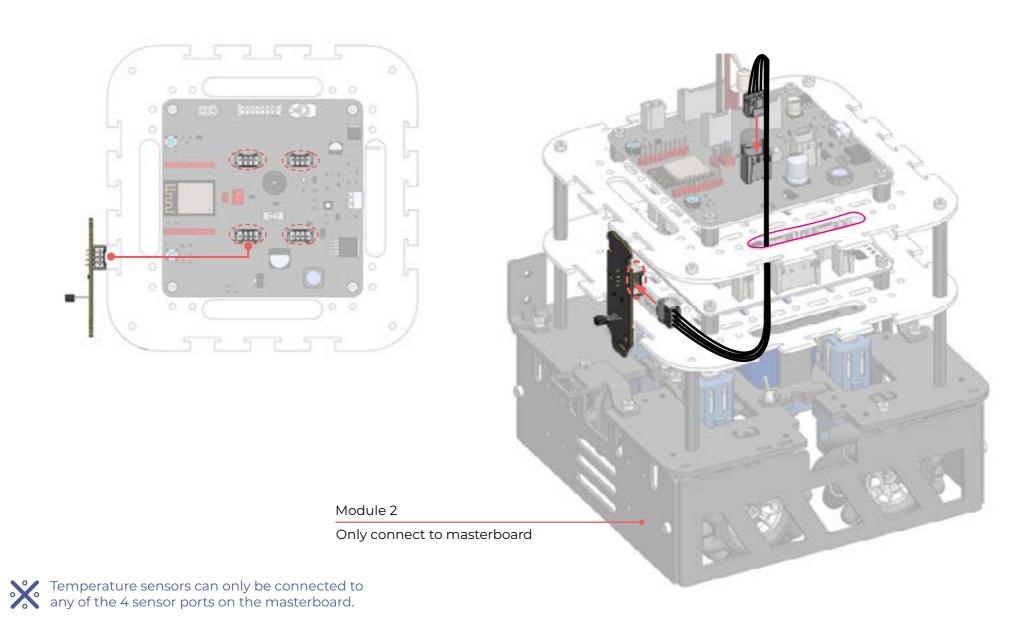


Opening to pass wire through

sensor position 1

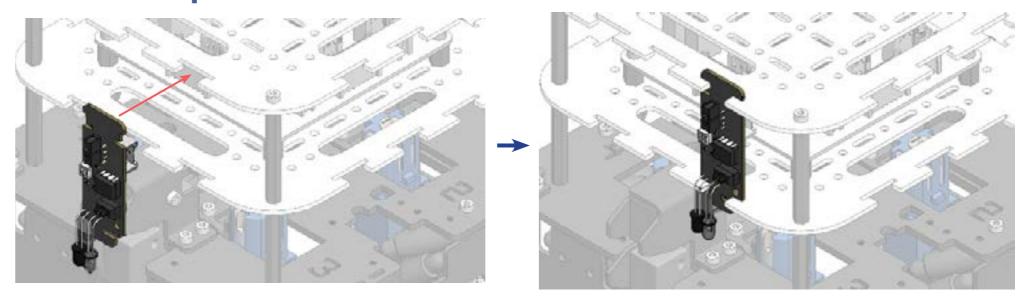


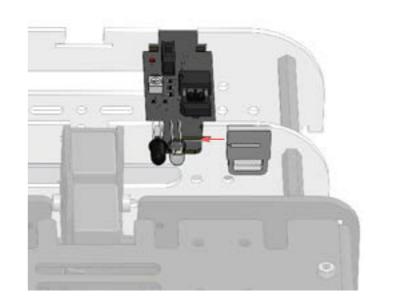

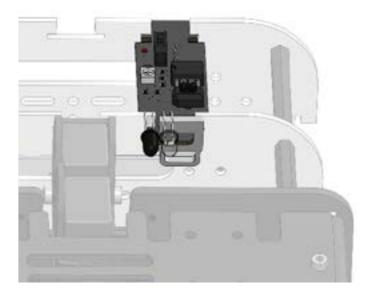


Sensors can be secured to the robot using the sensor lock provided.

(sensor position 2)

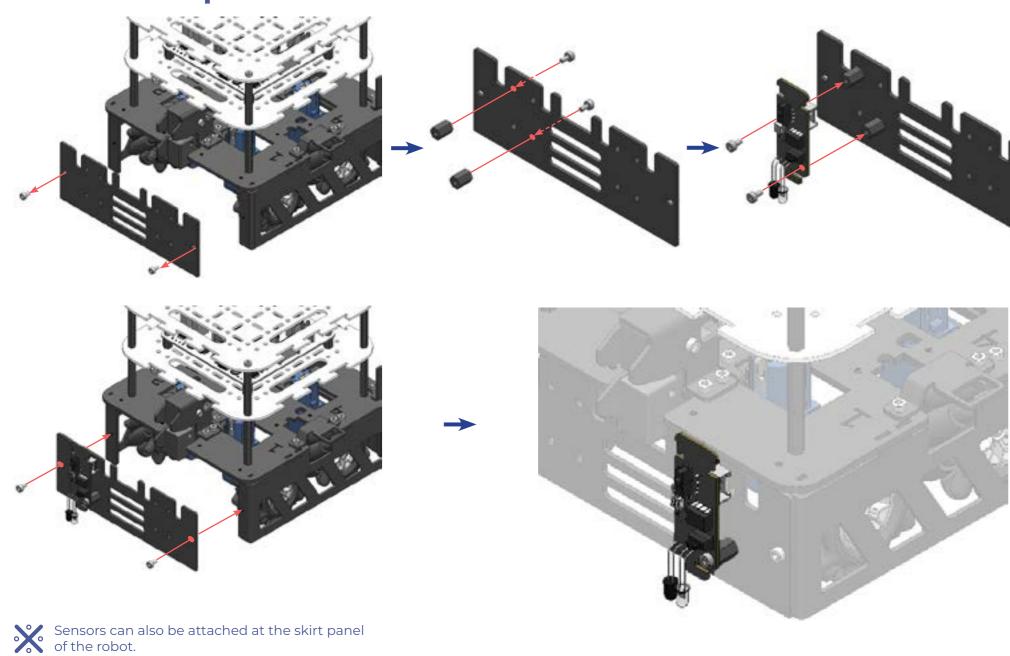


(pixycam wiring)

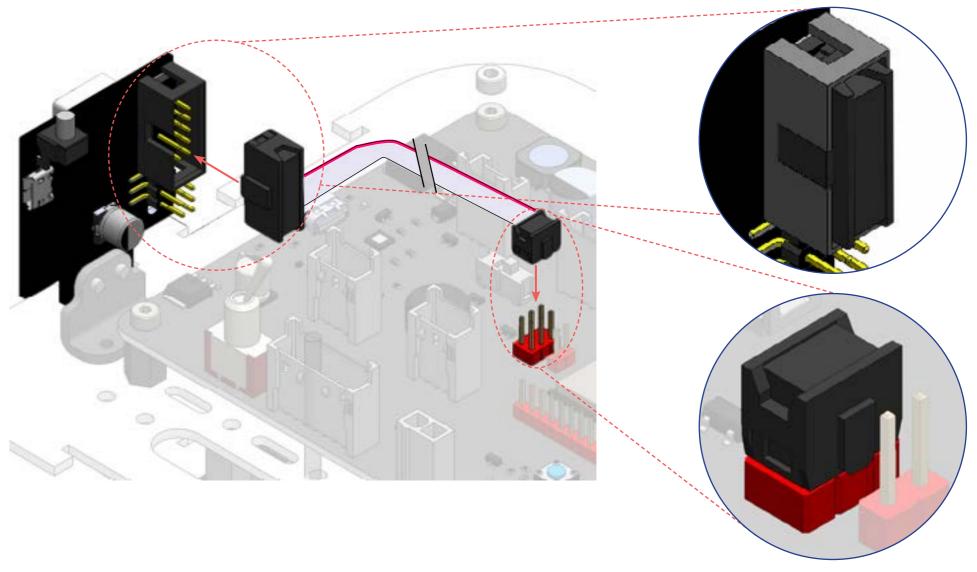

Use the flat ribbon cable to connect the pixycam to the masterboard
6 pin side to the masterboard
10 pin side to the pixycam




(mounting the pixycam)

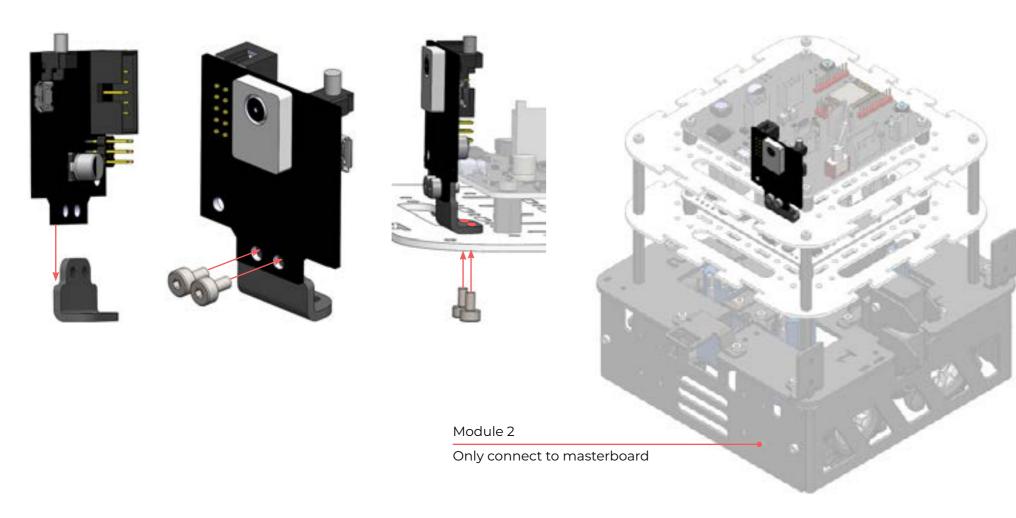



(connect to laptop)

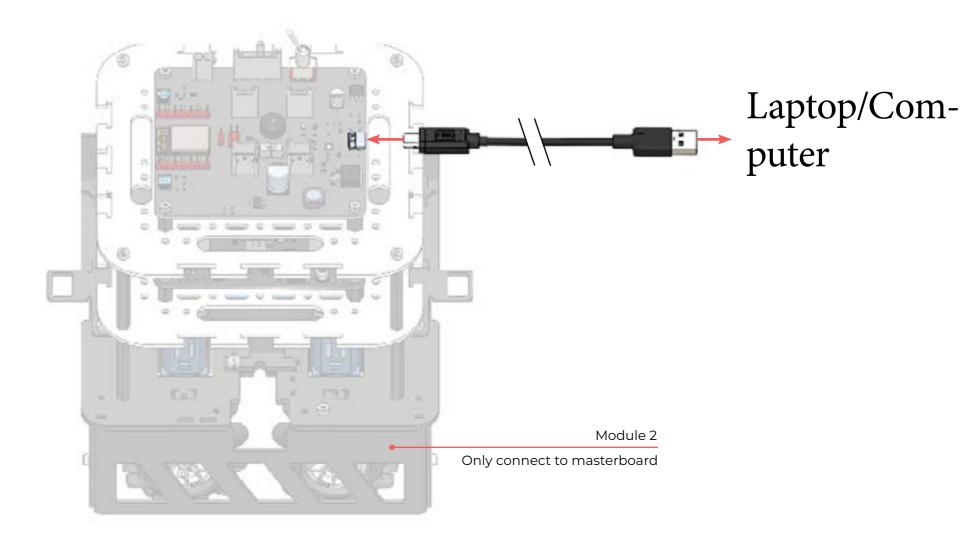

Plug in the USB-C cable as shown above to connect the masterboard to the computer. It allows us to upload our code from our computer onto the masterboard.



