mbeddr C User's Guide

Marcel Matzat¹, Bernhard Merkle², and Markus Voelter³

 $\begin{array}{c} ^{1} \text{ itemis AG} \\ ^{2} \text{ Sick AG} \\ ^{3} \text{ independent/itemis} \end{array}$

Abstract. mbeddr is a extensible, C-based programming environment optimized for embedded programming based on JetBrains MPS. This document describes the mbeddr stack from a user's perspective. It guides through the installation process of mbeddr, provides a simple "hello world" tutorial and discusses the differences to regular C. It also discusses all the extensions that are open sourced so far, including components, state machines, exceptions, physical units, requirements tracing and product line variability.



This document is part of the mbeddr project at http://mbeddr.com.

This document is licensed under the Eclipse Public License 1.0 (EPL).

Table of Contents

mb	m eddr	C User's Guide	
	Mar	cel Matzat, Bernhard Merkle, and Markus Voelter	
1	Language Use vs. Language Development		
2	Insta	allation 4	
	2.1	Java 4	
	2.2	JetBrains Meta Programming System (MPS)	
	2.3	GCC and make 5	
	2.4	Graphviz	
	2.5	mbeddr 6	
	2.6	Debugger	
3	Impo	ortant keyboard shortcuts in MPS 6	
4	Hello World Example		
	4.1	Create new project	
	4.2	Project Structure and Settings	
	4.3	Create an empty Module	
	4.4	Writing the Program	
	4.5	Build Configuration	
	4.6	Building and Executing the Program	
5	Differences to regular C		
	5.1	Preprocessor	
	5.2	Modules	
	5.3	Build configuration	
	5.4	Unit tests	
	5.5	Primitive Numeric Datatypes	
	5.6	Booleans	
	5.7	Literals	
	5.8	Pointers	
	5.9	Enumerations	
	5.10	Goto	
		Variables	
		Arrays	
		Reporting	
		Assembly Code	
		Comments	
6		mand Line Generation	
7	Version Control - working with MPS, mbeddr and git		
	7.1	Preliminaries	
	7.2	Committing Your Work	
	7.3	Pulling and Merging	
	7.4	A personal Process with git	
	7.5	The Graph Viewer 36	

Debugging	37
8.1 Creating a Debug Configuration	38
8.2 Running a Debug Session	39
•	42
	42
	44
	45
	47
	47
	48
	49
	50
	50
	51
	51
	55
	56
State Machines	58
13.1 Hello State Machine	58
13.2 Integrating with C code	59
	60
	61
	62
	62
15.1 Overview	62
15.2 Specifying Requirements	62
	65
15.4 Other Traceables	65
15.5 Evaluating the Traces in Reverse	66
Variability	66
16.1 Overview	66
	67
16.3 Presence Conditions	68
16.4 Replacements	69
16.5 Attribute Injection	70
16.6 Projection Magic	70
16.7 Building Variable Systems	70
	8.1 Creating a Debug Configuration 8.2 Running a Debug Session Importing existing Header Files Graphs 10.1 Setting up a Language 10.2 Creating the Generator 10.3 Generator Priorities 10.4 Making the Generation Optional 10.5 Wrap Up Physical Units 11.1 Basic SI Units in C programs 11.2 Derived Units 11.3 Convertible Units 11.4 Extension with new Units Components 12.1 Basic Interfaces and Components 12.2 Contracts 12.3 Mocks State Machines 13.1 Hello State Machine 13.2 Integrating with C code 13.3 The complete WrappingCounter state machine 13.4 Testing State Machines 13.5 Exceptions Requirements 15.1 Overview 15.2 Specifying Requirements 15.3 Tracing 15.4 Other Traceables 15.5 Evaluating the Traces in Reverse Variability 16.1 Overview 16.2 Feature Models and Configurations 16.3 Presence Conditions 16.4 Replacements 16.5 Attribute Injection 16.6 Projection Magic

1 Language Use vs. Language Development

This document focuses on the C programmer who wants to exploit the benefits of the extensions to C provided by mbeddr out of the box. We assume that you have some knowledge of regular C (such as K&R C, ANSI C or C99). We also assume that you realize some of the shortfalls of C and are "open" to the improvements in mbeddr C. The main point of mbeddr C is the ability to extend C with domain-specific concepts such as state machines, components, or whatever you deem useful in your domain. We have also removed some of the "dangerous" features of C that are often prohibited from use in real world projects.

This document does not discuss how to develop new languages or extend existing languages. We refer to the *Extension Guide* instead. It is available from http://mbeddr.com.

2 Installation

At this point we don't yet provide an all-in-one download package. This is because (a) we didn't get around to building one yet, and (b) as a consequence of a number of open legal issues regarding re-packaging some of the third-party tools used by mbeddr. However, this documentation describes the installation process in detail.

2.1 Java

MPS is a Java application. So as the first step, you have to install a Java Development Kit version 1.6 or greater (JDK 1.6). You can get it from here http://www.oracle.com/technetwork/java/javase/downloads/index.html

2.2 JetBrains Meta Programming System (MPS)

The mbeddr system is based on JetBrains MPS, an open source language workbench available from http://www.jetbrains.com/mps/. MPS is available for Windows, Mac and Linux, and we require the use of the 2.5.x version. Please make sure you install MPS in a path that does not contains blanks in any of its directory or file names (not even in the MPS 2.5 folder). This will simplify some of the command line work you may want to do.

After installing MPS using the platform-specific installer, please open the bin folder and edit the mps.vmoptions or mps.exe.vmoptions file (depending on your platform). To make MPS run smoothly, the MaxPermSize setting should be increased to at least 512m. It should look like this after the change:

⁻client

⁻Xss1024k

⁻ea

⁻Xmx1200m

⁻XX:MaxPermSize=512m

⁻XX:+HeapDumpOnOutOfMemoryError

⁻Dfile.encoding=UTF-8

On some 32bit Windows XP systems we had to reduce the -Xmx1200m setting to 768m to get it to work.

2.3 GCC and make

The mbeddr toolkit relies on gcc and make for compilation (unless you use a different, target-specific build process).

- On Mac you should install XCode to get gcc, gdb, make and the associated tools.
- On Linux, these tools should be installed by default.
- On Windows we recommend installing cygwin (http://www.cygwin.com/), a Unix-like environment for Windows. When selecting the packages to be installed, make sure gcc-core, gdb and make are included (both of them are in the Devel subtree in the selection dialog). The bin directory of your cygwin installation has to be added to the system PATH variable; either globally, or in the script that starts up MPS (MPS runs make, so it has to be visible to MPS). On Windows, the mps.bat file in the MPS installation folder would have to be adapted like this:

```
::rem mbeddr depends on Cygwin: gcc, make etc
::rem adapt the following to your cygwin bin path
set PATH=C:\ide\Cygwin\bin;%PATH%
```

2.4 Graphviz

MPS supports visualization of models via graphviz, directly embedded in MPS. To use it, you have to install graphviz from http://graphviz.org. We use version 2.28. After the installation, you have to put the bin directory of graphviz into the path. Either globally, or by modifying the MPS startup script in the same way as above:

```
::rem mbeddr depends on graphviz dot
::rem adapt the following to your graphviz bin path
set PATH=C:\ide\graphviz2.28\bin;%PATH%
```

2.5 mbeddr

You can get the mbeddr code either via distributions or via the public github repository.

Distribution You can get the mbeddr system via a zip file download from http://mbeddr.wordpress.com/getit/ Save the zip file into a folder on your hard disk and unzip it. Once again, please make sure the path to the unzipped folder contains no blanks!

github The github repo ist a https://github.com/mbeddr/mbeddr.core. You can clone it for your own use, or you can fork it to your own github account so you can make changes. Contact us if you want to become a committer.

2.6 Debugger

The mbeddr debugger is based on gdb, which has been installed as part of the Cygwin install. However, we don't use gdb directly; rather we use the Eclipse CDT debug bridge. This contains native code, and Java has to be able to find this native code.

We provide a special plugin which is responsible for loading the native code. This plugin is packaged into a zip file named *spawner* and stored it in the directory mbeddr.core/tools/spawner. In order to use the debugger, please unzip this plugin into the plugins directory of your MPS installation.

TODO(How do people get it if they use the downloaded ZIP file? Is it in there?)

3 Important keyboard shortcuts in MPS

MPS is a projectional editor. It does not parse text and build an Abstract Syntax Tree (AST). Instead the AST is created directly by user editing actions, and what you see in terms of text (or other notations) is a projection. This has many advantages, but it also means that some of the well-known editing gestures we know from normal text editing don't work. So in this section we explain some keyboard shortcuts that are essential to work with MPS.

Since the very first experience a projectional editor is somewhat different from what you are accustomed to in a text editor, we recommend you watch the following screencast:

http://www.youtube.com/watch?v=wgsY3-ZX_fs

Entering Code In MPS you can only enter code that is available from the code completion menu. Using aliases and other "tricks", MPS manages to make this feel almost like text editing. Here are some hints though:

 As you start typing, the text you're entering remains red, with a light red background. This means the string you've entered has not yet bound.

- Entered text will bind if there is only one thing left in the code completion menu that starts with the substring you've typed so far. An instance of the selected concept will be created and the red goes away.
- As long as text is still red, you can press Ctrl-Space to explicitly open the code completion menu, and you can select from those concepts that start with the substring you have typed in so far.
- If you want to go back and enter something different from what the entered text already preselects, press Ctrl-Space again. This will show the whole code completion menu.
- Finally, if you're trying to enter something that does not bind at all because the prefix you've typed does not match anything in the code completion menu, there is no point in continuing to type; it won't ever bind. You're probably trying to enter something that is not valid in this place. Maybe you haven't included the language module that provides the concept you have in mind?

Navigation Navigation in the source works as usual using the cursor keys or the mouse. References can be followed ("go to definition") either by Ctrl-Click or by using Ctrl-B.

Selection Selection is different. Ctrl-Up/Down can be used to select along the tree. For example consider a local variable declaration int x = 2 + 3 * 4; with the cursor at the 3. If you now press Ctrl-Up, the 3 * 4 will be selected because the * is the parent of the 3. Pressing Ctrl-Up again selects 2 + 3 * 4, and the next Ctrl-Up selects the whole local variable declaration.

You can also select with Shift-Up/Down. This selects siblings in a list. For example, consider a statement list as in a function body ...

```
void aFunction() {
  int x;
  int y;
  int z;
}
```

... and imagine the cursor in the x. You can press Ctrl-Up once to select the whole int x; and then you can use Shift-Down to select the y and z siblings. Note that the screencast mentioned above illustrates these things much clearer.

Deleting Things The safest way to delete something is to mark it (using the strategies discussed in the previous paragraph) and the press Backspace or Delete. In many places you can also simply press Backspace behind or Delete before the thing you want to delete.

Intentions Some editing functionalities are not available via "regular typing", but have to be performed via what's traditionally known as a quick fix. In MPS, those are called intentions. The intentions menu can be shown by pressing

Alt-Enter while the cursor is on the program element for which the intention menu should be shown (each language concept element has its own set of intentions). For example, module contents in mbeddr can only be set to be exported by selecting *export* from the intentions menu. Explore the contents of the intentions menu from time to time to see what's possible.

Note that you can just type the name of an intention once the menu is open, you don't have to use the cursor keys to select from the list. So, for example, to export a module content (function, struct), you type Alt-Enter, ex, Enter.

Surround-With Intentions Surround-With intentions are used to surround a selection with another construct. For example, if you select a couple of lines (i.e. a list of statements) in a C program, you can then surround these statements with an if or with a while. Press Ctrl-Alt-T to show the possible surround options at any time. To reemphasize: in contrast to regular intentions which are opened by Alt-Enter, surround-with intentions can work on a selection that contains several nodes!

Refactorings For many language constructs, refactorings are provided. Refactorings are more important in MPS than in "normal" text editors, because some (actually quite few) editing operations are hard to do manually. Please explore the refactorings context menu, and take note when we explain refactorings in the user's guide. Unlike intentions, which cannot have a specific keyboard shortcut assigned, refactorings can, and we make use of this feature heavily. The next section introduces some of these.


Note: Since MPS 2.5, MPS comes with a productivity guide and actually useful hints and tips at startup. The productivity guide tracks the commands you use and recommends more productive ones. Find it in the Help menu.

4 Hello World Example

For this tutorial we assume that you know how to use the C programming language. We also assume that you have have installed MPS, gcc/make, graphviz and the mbeddr.core distribution. This has been disussed in the previous section.


4.1 Create new project

Start up MPS and create a new project. Call the project HelloWorld and store it in a directory without blanks in the path. Let the wizard create a solution, but no language.

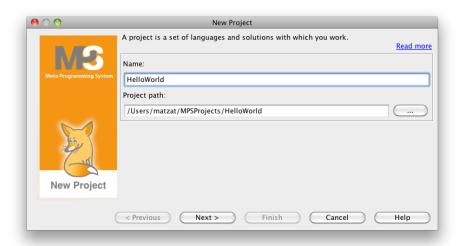

We now have to make the project aware of the mbeddr.core languages installed via the distribution. Go to the $File \to Settings$ and select the GlobalLibraries in the IDE settings. Create a library called mbeddr.core that points to the root directory of the unzipped mbeddr installation.


Note: This library must point to the root directory of the checkout so that all languages are below it, including *core* and *mpsutil*.

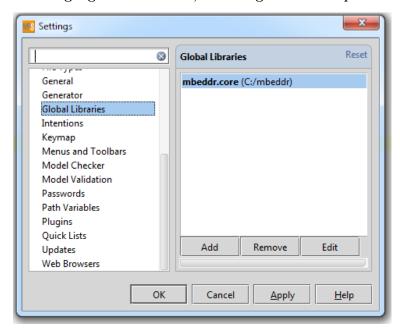

Notice that this is a global settings and have to be performed only once before your first application project.

4.2 Project Structure and Settings


An MPS project is a collection of solutions⁴. A *solution* is an application project that *uses* existing languages. Solutions contain any number of models; models contain root nodes. Physically, models are XML files that store MPS code. They are the relevant version control unit, and the fundamental unit of configuration.

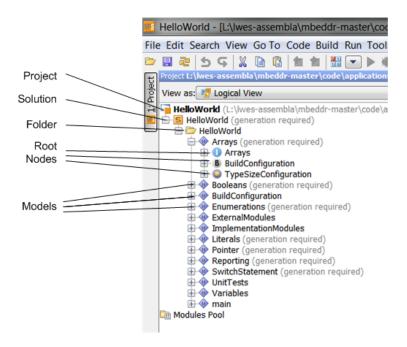

In the solution, create a new model with the name main, prefixed with the solution's name: select $New \to Model$ from the solution's context menu. No sterotype.

A model has to be configured with the languages that should be used to write the program in the model. In our case we need all the mbeddr.core languages. We have provided a *devkit* for these languages. A devkit is essentially a set of languages, used to simplify the import settings. As you create the model, the model properties dialog should open automatically. In the *Used Devkits* section, select the + button and add the com.mbeddr.core devkit.


⁴ A project can also contain *languages*, but these are only relevant to language implementors. We discuss this aspect of mbeddr in the *Extension Guide*

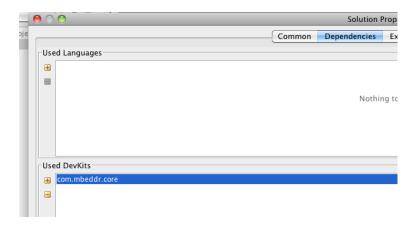

This concludes the configuration and setup of your project. You can now start writing C code.

4.3 Create an empty Module

Note: In this tutorial we create the basic building blocks manually. However, there are also a couple of Wizards in the Code menu that create these things manually. See the following figure.

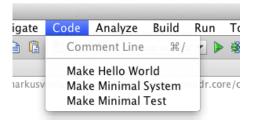

The top level concept in mbeddr C programs are *modules*. Modules act as namespaces and as the unit of encapsulation. So the first step is to create an empty module. The mbeddr.core C language does not use the artificial separation between .h and .c files you know it from classical C. Instead mbeddr C uses the aforementioned module concept. During code generation we create the corresponding .h and .c files.

A module can import other modules. The importing module can then access the *exported* contents of imported modules. Module contents can be exported using the export intention (available via Alt-Enter like any other intention).

So to get started, we create a new implementation module using the model's context menu as shown in the following screenshot:




Note: This operation, as well as almost all others, can be performed with the keyboard as well. Take a look at $File \to Settings \to Keymap$ to find out or change keyboard mappings.

As a result, you will get an empty implementation module. It currently has no name (the name is red and underlined) and only a placeholder «...» where top level C constructs such as functions, structs, or enums can be added later.

Next, specify HelloWorld as the name for the implementation module.

```
module HelloWorld from HelloWorld.main imports nothing {
    << ... >>
}
```

The module name is still underlined in red because of a missing type size configuration. The TypeSizeConfiguration specifies the sizes of the primitive types (such as int or long) for the particular target platform. mbeddr C provides a default type size configuration, which can be added to a module via an intention Create default type size configuration on the module in the editor. You may have to press F5 to make the red underline go away. For more details on type size configurations see chapter 5.5.

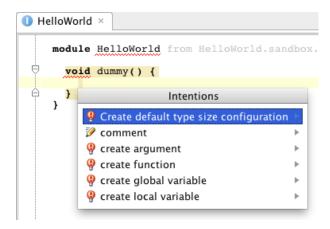

4.4 Writing the Program

Within the module you can now add contents such as functions, structs or global variables. Let's enter a main function so we can run the program later. You can enter a main function in one of the the following ways:

- create a new function instance by typing function at the placeholder in the module, and then specify the name and arguments.
- start typing the return type of the function (e.g. int32_t) and then enter a name and the opening parentheses⁵.
- specifically for the main function, you can also just type main (it will set up the correct signature automatically)

At this point, we are ready to implement the Hello World program. Our aim is to simply output a log message and return 0. To add a return value, move the cursor into the function body and type return 0.

```
module HelloWorld from HelloWorld.main imports nothing {
  int32_t main() {
    return 0;
  }
}
```

To print the message we could use printf or some other stdio function. However, in embedded systems there is often no printf or the target platform has no display available, so we use a special language extension for logging. It will be translated in a suitable way, depending on the available facilities on the target platform. Also, specific log messages can be deactivated in which case they are completely removed from the program. Below our main function we

⁵ Entering a type and a name makes it a global variable. As soon as you enter the (on the right side of the name, the variable is transformed into a function. This process is called a *right-transformation*.

create a new message list (just type message followed by return) and give it the name log.

Within the message list, hit Return or type message to create a new message. Change the type from ERROR to INFO with the help of code completion. Specify the name hello. Add a message property by hitting return between the parentheses. The type should be a string and the name should be who. Specify Hello as the value of the message text property. The resulting message should look like this:

```
message list log {
   INFO hello(string who) active: Hello
}
```

Now you are ready to use the message list and its messages from your main function. Insert a report() statement in the main function, specify the message list log and select the message hello. Pass the string "World" as parameter.

```
module HelloWorld from HelloWorld.main imports nothing {
  int32_t main(int8_t argc, string[] args) {
    report(0) log.hello("World") on/if;
    return 0;
} main (function)

message list log {
    INFO hello(string who) active: Hello
}
```

4.5 Build Configuration

We have to create one additional element, the BuildConfiguration. This specifies which modules should be compiled into an executable or library, as well as other aspects related to creating an executable. Depending on the selected target platform, a BuildConfiguration will automatically generate a corresponding make file. In the main model, create a new instance of BuildConfiguration (via the model's context menu, see figure below).



Initially, it will look as follows:

You will have to specify three things. First you have to select the target platform. For our tests, we use the desktop platform that generates a make file that can be compiled with the normal gcc compiler⁶. The desktop target contains some useful defaults, e.g. the gcc compiler and its options.

```
Target Platform:
   desktop
   compiler: gcc
   compiler options: -std=c99
   debug options: <no debug options>
```

Next, we have to address the configuration items. These are additional configuration data that define how various language concepts elements are translated. In our case we have to specify the reporting configuration. It determines how log messages are output. The printf strategy simply prints them to the console, which is fine for our purposes here. Select the placeholder and type reporting.

```
Configuration Items reporting: printf
```

Finally, in the Binaries section, we create a new exectuable and call it HelloWorld. In the program's body, add a reference to the HelloWorld implementation module we've created before. The code should look like this:

```
executable main isTest: false {
   used libraries
   << ... >>
   included modules
   HelloWorld
}
```

 $^{^{\}rm 6}$ Other target platforms may generate build scripts for other build systems.

4.6 Building and Executing the Program

Press Ctrl-F9 (or Cmd-F9 on the Mac) to rebuild the solution. In the HelloWorld/solutions/HelloWorld/source_gen/HelloWorld/main directory you should now have at least the following files (there may be others, but those are not important now):

Makefile HelloWorld.c HelloWorld.h

The files should be already compiled as part of the mbeddr C build facet (i.e. make is run by MPS automatically). Alternatively, to compile the files manually, open a command prompt (must be a cygwin prompt on Windows!) in this directory and type make. The output should look like the following:

\\$ make
rm -rf ./bin
mkdir -p ./bin
gcc -c -o bin/HelloWorld.o HelloWorld.c -std=c99

This builds the executable file HelloWorld.exe or HelloWorld (depending on your platform), and running it should show the following output:

\\$./HelloWorld.exe
hello: Hello @HelloWorld:main:0
 world = World

Note the output of the log statement in the program (report statement number 0 in function main in module HelloWorld; take a look back at the source code: the index of the statement (here: 0) is also output in the program source).

Note: That same Hello World example can be created using the $Code \rightarrow MakeHelloWorld$ menu.

This concludes our hello world example. In the next section we will examine important differences between mbeddr C and regular C.

5 Differences to regular C

This section describes the differences between mbeddr C and regular C99. All examples shown in this chapter can be found in the *HelloWorld* project that is available for download together with the *mbeddr.core* distribution.

TODO(*Use noindent consistently*)

5.1 Preprocessor

mbeddr C does not support the preprocessor. Instead we provide first class concepts for the various use cases of the C preprocessor. This avoids some of the chaos that can be created by misusing the preprocessor and provides much better analyzability. We will provide examples later.

The major consequence of not having a preprocessor is that the separation between header and implementation file is not exposed to the programmer. mbeddr provides modules instead.

5.2 Modules

While we *generate* header files, we don't *expose* them to the user in MPS. Instead, we have defined modules as the top-level concept. Modules also act as a kind of namespace. Module contents can be exported, in which case, if a module is imported by another module, the exported contents can be used by the importing module.

We distinguish between *implementation modules* which contain actual implementation code, and *external modules* which act as proxies for existing, non-mbeddr header files that should be accessible from within mbeddr C programs.

Implementation Modules The following example shows an implementation module (ImplementationModule) with an exported function. You can toggle the exported flag with the intention Toggle Export. The second module (Module-UsingTheExportedFunction) imports the ImplementationModule with the imports keyword in the module header. An importing module can access all exported contents defined in imported modules.

```
module ImplementationModule imports nothing {
   exported int32_t add(int32_t i, int32_t j) {
     return i + j;
   }
}
module ModuleUsingTheExportedFunction imports ImplementationModule {
   int32_t main(int8_t argc, string[] args) {
     int32_t result = add(10, 15);
     return 0;
   }
}
```

External modules mbeddr C code must be able to work with existing code and existing C libraries. So to call existing functions or instantiate structs, we use the following approach:

 We identify existing external header files and the corresponding object or library files.

- We create an external module to represent those; the external module specifies the .h file and the object/library files it represents.
- In the external module we add the contents of the existing .h files we want to make accessible to the mbeddr C program.
- We can now import the external module into any implementation module from which we want to be able to call into the external code
- The generator generates the necessary #include statements, and the corresponding build configuration.

Manually entering the contents of the header file into an external module is tedious and error-prone. mbeddr comes with an automatic import for external header files. Since this process is not as trivial as it may seem, we discuss it extensively in Section 9.

5.3 Build configuration

The BuildConfiguration specifies how a model should be translated and which modules should be compiled into an executable. Typically it will be generated into a make file that performs the compilation. We have discussed the basics as part of the Hello World in Section 4.5. We won't repeat the basics here.

The main part of the build configuration supports the definition of binaries. Binaries are either executables or libraries.

Executables An executable binds together a set of modules and compiles them into an executable. Exactly one module in a executable shall have a main function.

The build configuration, if it uses the desktop target, is generated into a make file which is automatically run as part of the MPS build, resulting in the corresponding executables. The generated code, the make file and the executables can be found in the source_gen folder of the respective solution (this directory can be changed via the Generator Output Path property in the solution properties).


Note: The build language is designed to be extended for integration with other build infrastructures. In that case, other targets (than desktop) would be provided by the language that provides integration with a particular build infrastructure.

Libraries Libraries are binaries that are not executable. Specifically, they are libXXXX.a files which can be linked into executables. A library will typically reside in its own MPS model (and hence in its own source_gen directory). To create a library, create a build configuration with a static library:

```
static library MathLib {
   MyFirstModule
   MyOtherModule
}
```

Running the resulting make file will create a $\mathtt{libMathLib.a.}$ Using the library for inclusion in an executable (which must be in a different MPS model!) requires the following three steps:

You have to import the model. Open the properties of the model that contains the code that uses the library, and add the model that contains the library to the Imported Models. This is necessary so that MPS can see the nodes defined in that model.

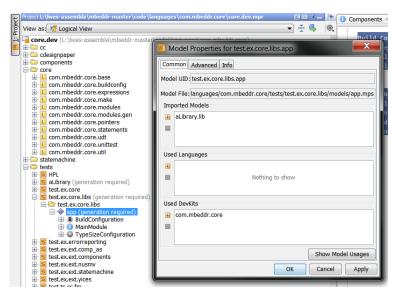

- In the implementation module that wants to use the functionality defined in the library, import the corresponding module(s) from the library. The importing module will see all the exported contents in the imported module (this is just like any other inter-module dependency).
- finally, in the build configuration of the executable that *uses* the library, the used library has to be specified in the used libraries section:

```
executable AnExe isTest: true {
    used libraries
    MathLib
    included modules
    MainModule
}
```

Extending the Build Process The build configuration is built in a way it is easily extensible. We will discuss details in the extension guide, but here are a couple of hints:

- New configuration items can be contributed by implementing the IConfigurationItem interface. They are expected to be used from transformation code. It can find the relevant items by querying the current model for a root of type IConfigurationContainer and by using the BCHelper helper class.
- New platforms can be contributed by extending the Platform concept. Users then also have to provide a generator for BuildConfigurations.

5.4 Unit tests

Unit Tests are supported as first class citizens by mbeddr C. A TestCase implements IModuleContent, so it can be used in implementation modules alongside with functions, structs or global variables. To assert the correctness of a result you have to use the assert statement followed by a Boolean expression (note that assert can just be used *only* inside test cases). A fail statement is also available — it fails the test unconditionally.

```
module AddTest imports nothing {
  exported test case testAddInt {
    assert(0) 1 + 2 == 3;
    assert(1) -1 + 1 == 1;
  }
  exported test case testAddFloat {
    float f1 = 5.0;
    float f2 = 10.5;
    assert(0) f1 + f2 == 15.5;
  }
}
```

The next piece of code shows a main function that executes the test cases imported from the AddTest module. The test expression supports invocations of test cases; it also evaluates to the number of failed assertions. By returning this value from main, we get an exit code != 0 in the case a test failed.

```
module TestSuite from HelloWorld.UnitTests imports AddTest {
  int32_t main() {
    return test testAddInt, testAddFloat;
  }
}
```

For executables that contain tests, in the build configuration, the isTest flag can be set to true; this adds a test target to the make file, so you can call make test on the command line in the source_gen folder to run the tests.

The example above contains a failing assertion assert(1) -1 + 1 == 1;. Below is the console output after running make test in the generated source folder for the solution:

```
runningTest: running test @AddTest:test_testAddInt:0
FAILED: ***FAILED*** @AddTest:test_testAddInt:2
   testID = 1
runningTest: running test @AddTest:test_testAddFloat:0
make: *** [test] Error 1
```

If you change the assertion to assert(1) -1 + 1 == 0;, rebuild with Ctrl-F9 and rerun make test you will get the following output, which has no errors:

```
runningTest: running test @AddTest:test_testAddInt:0
runningTest: running test @AddTest:test_testAddFloat:0
```

Test cases can of course call arbitrary functions. However, as we have stated earlier, assert and fail statements must reside in test cases, not in arbitrary functions (this is related to the way the failures are implicitly counted and returned back from a test case). However, functions can be marked as a test helper using an intention. assert and fail can be used within test helper functions. Test helpers must be called *directly* from test cases!

```
exported test case testAddFloat {
  assert(0) 1 + 2 == 3;
  moreStuff(10, 20, 30);
}


test helper
void moreStuff(int8_t x, int8_t y, int8_t z) {
  assert(0) x + y == z;
}
```

TODO(HERE)

5.5 Primitive Numeric Datatypes

The standard C data types (int, long, etc.) have different sizes on different platforms. This makes them non-portable. C99 provides another set of primitive data types with clearly defined sizes (int8_t, int16_t). In mbeddr C you have to use the C99 types, resulting in more portable programs. However, to be able to work with existing header files, the system has to know how the C99 types relate to the standard primitive types. This is the purpose of the TypeSizeConfiguration. It establishes a size-mapping between the C99 types and the standard primitive types. The TypeSizeConfiguration mentioned above can be added with the Create default type size configuration (see

screenshot below) on modules, or by creating one through the *New* menu on models. Every model has to contain exactly one type size configuration. To fill an existing empty type size configuration with the default values, you can use an intention on the TypeSizeConfiguration.

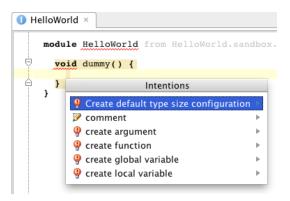

Integral Types The following integral types are not allowed in implementation modules, and can only be used in external modules for compatibility: char, short, int, long, long long, as well as their unsigned counterparts. The following list shows the default mapping of the C99 types:

```
\begin{array}{l} - \text{ int8\_t} \rightarrow \text{char} \\ - \text{ int16\_t} \rightarrow \text{short} \\ - \text{ int32\_t} \rightarrow \text{int} \\ - \text{ int64\_t} \rightarrow \text{long long} \\ - \text{ uint8\_t} \rightarrow \text{unsigned char} \\ - \text{ uint16\_t} \rightarrow \text{unsigned short} \\ - \text{ uint32\_t} \rightarrow \text{unsigned int} \\ - \text{ uint64\_t} \rightarrow \text{unsigned long long} \end{array}
```

Floating Point Types The size of floating point types can also be speficied, e.g. if they differ from the IEEE754 sizes.

```
\begin{array}{l} - \; {\tt float} \to 32 \\ - \; {\tt double} \to 64 \\ - \; {\tt long} \; {\tt double} \to 128 \end{array}
```

The type size configuration also requires the specification of the size of ${\tt size_t}$ and pointers.

5.6 Booleans

We have introduced a specific boolean datatype, including the true and false literals. Integers cannot be used interchangably with Boolean values. We do provide a (red, ugly) cast operator between integers and booleans for interop

with legacy code. The following example shows the usage of the Boolean data type.

```
module BooleanDatatype from HelloWorld.BooleanDatatype imports nothing {
  exported test case booleanTest {
    boolean b = false;
    assert(0) b == false;
    if (!b) { b = true; } if
    assert(1) b == true;
    assert(2) int2bool<1> == true;
}
```

5.7 Literals

mbeddr C supports special literals for hex, octal and binary numbers. The type of the literal is the smallest possible signed integer type (int8_t, ..., int64_t) that can represent the number.

```
module LiteralsApp imports nothing {
  exported test case testLiterals {
    int32_t intFromHex = hex<aff12>;
    assert(0) intFromHex == 720658;

    int32_t intFromOct = oct<334477>;
    assert(1) intFromOct == 112959;

    int32_t intFromBin = bin<100110011>;
    assert(2) intFromBin == 307;
  }
}
```

All number literals, including decimal literals are signed by default. A suffix **u** can be added to make them unsigned.

5.8 Pointers

C supports two styles of specifying pointer types: int *pointer2int and int* pointer2int. In mbeddr C, only the latter is supported: pointer-ness is a characteristic of a type, not of a variable.

Pointer Arithmetics For pointer arithmetics you have to use an explicit type conversion pointer2int and int2pointer, as illustrated in the following code. You can also see the usage of pointer dereference (*xp) and assigning an address with &.

```
module BasicPointer imports stdlib {
  exported test case testBasicPointer {
    int32_t x = 10;
    int32_t* xp = &x;
    assert(0) *xp == 10;
    int32_t[] anArray = {4, 5};
    int32_t* ap = anArray;
    assert(1) *ap == 4;

    // pointer arithmetic
    ap = int2pointer<pointer2int<ap> + 1>;
    assert(2) *ap == 5;
  }
    ...
}
```

Memory allocation works the same way as in regular C except that you need an external module to call functions such as malloc from stdlib. The next example illustrates how to do this. Note that size_t is a primitive type, built into mbeddr. It's size is also defined in a TypeSizeConfiguration.

```
external module stdlib resources header : <stdlib.h>
{
   void* malloc(size_t size);
   void free(void* pointer);
}
```

You have to include the external module stdlib in your implementation module with imports stdlib. You can then call malloc or free:

```
module BasicPointer imports stdlib {
    ...
    exported test case mallocTest {
      int8_t* mem = ((int8_t*) malloc(sizeof int8_t));
    *mem = 10;
      assert(0) *mem == 10;
      free(mem);
    }
}
```

Function Pointers In regular C, you define a function pointer type like this: int (*pt2Function) (int, int). The first part is the return type, followed by the name und a comma separated argument type list. The pointer asterisk is added before the name. This is a rather ugly notation. In mbeddr, we have introduced the notion of function types and function references. These are syntactically different from pointers (of course they are mapped to function pointers in the

generated C code). We have also introduced lambdas (i.e. closures without their own state).

For function types you first define the argument list and then the return type, separeted by => (a little bit like Scala). Here is an example: (int32_t, int32_t) => (int32_t) You can enter a fuction type by using the funtype alias, (see figure below). Function types are types, so they can be used in function signatures, local variables or typedefs, just like any other type (see example Hello World.Pointer.FunctionPointerAsTypes).

Values of type funtype are either references to functions or lambdas. In regular C, you have use the address operator to obtain a function pointer (&function). In mbeddr C, you use the : operator (as in :someFunction) to distinguish function references from regular pointer stuff. Of course the type and values have to be compatible; for function types this means that the signature must be the same. The following example shows the use of function references:

```
module FunctionPointer imports nothing {
  int32_t add(int32_t a, int32_t b) {
    return a + b;
  }
  int32_t minus(int32_t a, int32_t b) {
    return a - b;
  }
  exported test case testFunctionPointer {
    // function pointer signature
    (int32_t, int32_t)=>(int32_t) pt2Function;

    // assign "add"
    pt2Function = :add;
    assert(0) pt2Function(20, 10) == 30;

    // assign "minus"
    pt2Function = :minus;
    assert(1) pt2Function(20, 10) == 10;
  }
}
```

Function types can be used like any other type. This is illustrated in the next example. The typedef typedef (int3_t, int32_t)=>(int32_t) as ftype; defines a new function type. The type ftype is the first parameter in the doOperation function. You can easily call the function doOperation(:add, 20, 10) and put any suitable function reference as the first parameter.

```
module FunctionPointerAsTypes imports nothing {
  typedef (int32_t, int32_t) => (int32_t) as ftype;
  int32_t add(int32_t a, int32_t b) {
    return a + b;
  }
  exported test case testFunctionPointer {
    // call "add"
    assert(0) doOperation(:add, 20, 10) == 30;
  }
  int32_t doOperation(ftype operation, int32_t firstOp, int32_t secondOp) {
    return operation(firstOp, secondOp);
  }
}
```

Lambdas are also supported. Lambdas are essentially functions without a name. They are defined as a value and can be assigned to variables or passed to a function. The syntax for a lambda is [arg1, arg2, ...|an-expression-using-args]. The following is an example:

```
module Lambdas imports nothing {
  typedef (int32_t, int32_t)=>(int32_t) as ftype;
  exported test case testFunctionPointer {
    assert(0) doOperation([a, b|a + b;], 20, 10) == 30;
  }
  int32_t doOperation(ftype operation, int32_t firstOp, int32_t secondOp) {
    return operation(firstOp, secondOp);
  }
}
```

5.9 Enumerations

The mbeddr C language also provides enumeration support, comparable to to C99. There is one difference compared to regular C99. In mbeddr C an enumeration is not an integer type. This means, you can't do any arithmetic operations with enumerations.

Note: We may add a way to cast enums to ints later if it turns out that "enum arithmetics" are necessary

. TODO(What is the current state?)

```
module EnumerationApp imports nothing {
   enum SEASON { SPRING; SUMMER; AUTUMN; WINTER; }
```

```
exported test case testEnumeration {
    SEASON season = SPRING;
    assert(0) season != WINTER;
    season = WINTER;
    assert(1) season == WINTER;
}
```

5.10 Goto

mbeddr C supports the definition of labels and the goto statement. We discourage its use. However, gotos are useful for implementing code generators for domain-specific abstractions. This is why they are available.

5.11 Variables

Global variables are identical to regular C. Like all other module contents, they can be exported. A local variable declaration can only declare one variable at a time; otherwise is it is just like in C (so you cannot write int a,b;).

5.12 Arrays

Array brackets must show up after the type, not the variable name. The following example shows the usage of arrays in mbeddr C, incl. multi-dimensional arrays. Their usage is equivalent to regular C.

```
module ArrayApplication imports nothing {
  exported test case arrayTest {
    int32_t[3] array = {1, 2, 3};
    assert(0) array[0] == 1;
    int8_t[2][2] array2 = {{1, 2}, {3, 4}};
    assert(1) array2[1][1] == 4;
  }
}
```

5.13 Reporting

Reporting (or logging) is provided as a special concept. It's designed as a platform-independent reporting system. With the current generator and the desktop setting in the build configuration, report statements are generated into a printf. For other target platforms, other translations will be supported in the future, for example, by storing the message into some kind of error memory.

If you want to use reporting in your module, you first have to define a message list in a module. Inside, you can add MessageDefinitions with three different severities: ERROR (default), INFO and WARN.

Every message definition has a name (acts as an identifier to reference a message in a report statement), a severity, a string message and any number of additional arguments. Currently, only integer values and strings are allowed.

A report statement references a message from a message list and supplies values for all arguments defined by the message. The following example shows an example (active refers to the fact that these messages have not been disabled; use the corresponding intentions on the messages to enable/disable each message).

```
module Reporting imports nothing {
   message list demo {
      INFO programStarted() active: Program has just started running
      ERROR noArgumentPassedIn(int16_t actualArgCount) active:
            No argument has been passed in, although an arg is expected
   }
   int32_t main(int8_t argc, string[] args) {
      report(0) demo.programStarted();
      report(1) demo.noArgumentPassedIn(argc) on argc == 0;
      return 0;
   }
}
```

Note how the first report statement outputs the message in all cases. The second one only outputs the message if a condition is met.

Report statements can be disabled; this removes all the code from the program, so no overhead is entailed. Intentions on the message definition support enabling and disabling messages. It is also possible to enable/disable groups of messages by using intentions on the message list.

Note: At this time there is no way of enabling/disabling messages at runtime. This will be added in the future.

5.14 Assembly Code

At this point we are not able to write inline assembler. We will enable this feature in the future.

5.15 Comments

In mbeddr we distinguish between commenting out code and adding documentation. The former retains the AST structure of code, but wraps it in a comment. The latter supports adding prose text to program elements.

Commenting out Code Code that is commented out retains its syntax highlighting, but is shaded with a grey background.

```
// // Here is some documentation for the function
int8_t main(string[] args, int8_t argc) {
    // ... and here is some doc for the report statement
    report(0) HelloWorldMessages.hello() on/if;
    return 0;
}
```

Code can be commented out by pressing Ctrl-Alt-C (this is technically a refactoring, so this feature is also availale from the refactorings context menu). This also works for lists of elements. Commented out code can be commented back in by pressing Ctrl-Alt-C on the comment itself (the //) or the commented element.

Commenting out code is a bit different than in regular, textual systems because code that is commented out is still "live": it is still stored as a tree, code completion still works in it, it may still be shown in FindReferences, and refactorings may affect the code. We are not sure if this is a desirable feature and we are looking for your feedback. Of course, the code is not executed. All commented program elements are removed during code generation.

Not all program elements can be commented out (since special support by the language is necessary to make something commentable), only concepts that implement ICommentable can be commented. At this time, this is all statements and module contents.

Documentation mbeddr supports comments. There are several kinds of comments that can be used: single line statement comments, multi-line statement comments and element documentations.

Single line statement comments are comments that can be used in statement context. For example, in a function body, you can type // and fill in arbitrary text behind. One line only! The following shows as simple comment.

```
void aFunction() {
    // Here is a simple one line comment
    int8_t x;
} aFunction (function)
```

A multi-line comment statement can be created by typing /* in statement context. It supports multiple lines. However, since there is no wrapping over into the next line, editing can be cumbersome. To solve this problem you can press Ctrl-A anywhere in the multi-line comment to open a dialog with a regular text area. You can edit the text in this text area and when you close it with OK the text is transferred back into the actual comment.

```
void aFunction() {

/* A multi-line comment with stuff
 * in more than one line, which is
 * annoying to edit
 */ (Ctrl-A to edit, Ctrl-Y to rearrange)

int8_t x;
} aFunction (function)

Multi Line Comment Editor

A multi-line comment with stuff
in more than one line, which is
annoying to edit

OK Cancel
```

You can also press ${\tt Ctrl-Y}$ on a multi-line comment to automatically rearrange the line contents.

The two statement comments discussed above have two important limitations. The first one is that they are standalone statements and not connected to any program element (other than through their position in the code). Second, they can only be used in statement context. A better solution in many cases is to use the element documentation. It is semantically attached to a program element. To create one, either press Ctrl-A or use the Add Documentation intention. It looks just like a multi-line comment (and has the same edit dialog for convenient editing), but it is attached to (and hence moves around with) a program element. Currently, all statements and module contents can be annotated with an element documentation.

TODOs mbeddr comes with a special view for collecting and showing TODOs in comments. Anywhere within the comments discussed above, you can write TODO and then some text or TODO (category) and then some text (see next screenshot):

```
exported test case gotoTest {

    /* Here is a multiline comment.
    * It has some TODO(cat) where I need to do something.
    */ (Ctrl-A to edit, Ctrl-Y to rearrange)

int8_t x = 0;
goto ende;
fail(0);
    /* Here is some documntation with a TODO comment. */ (Ctrl-A to edit, Ctrl-Y to rearrange)
label ende:
assert(1) x == 0;
} gotoTest(test case)
```

To find the TODOs anywhere in your project, use the Tools->mbeddrTODO. It shows the TODOs in the form of a Find Usages dialog.



The view has many view options (try them!). The most important one is the top left one. Pressing it enables categories. In this case the TODOs are grouped by what has been specified by category in the TODO(category) format.

6 Command Line Generation

mbeddr C models can be generated to C code from the command line using ant. The HelloWorld project comes with an example ant file: in the project root directory, you can find a build.xml ant file:

It uses the mps.generate task provided with MPS. All the code is boilerplate, except these two lines:

```
<project file="\${mbeddr.home}/code/applications/HelloWorld/HelloWorld.mpr"/>
library name="mbeddr" dir="\${mbeddr.home}/code/languages"/>
```

The first line specifies the project whose contents should be generated. We point to the HelloWorld.mpr project in our case. If you only want to generate parts of a project (only some solutions or models), take a look at this article: http://confluence.jetbrains.net/display/MPSD2/HowTo+-+MPS+and+ant

The second line points to the directory that contains all the languages used by the to-be-generated project.

To make it work, you also have to provide a build.properties file to define two path variables:

Assuming you have installed ant, you can simply type ant at the command prompt in the directory that contains the build.xml file. Unfortunately, generation takes quite some time to execute (50 seconds on my machine). However, most of the time is startup and loading all the languages, so having a bigger program won't make much of a difference. The output should look like this:

```
L:\lwes-assembla\mbeddr\code\applications\HelloWorld>ant
Buildfile: build.xml

build:

[mps.generate] Build number MPS Build.MPS-20.7460

[mps.generate] Loaded project MPSProject file: L:\lwes-assembla\mbeddr\code\applications\HelloWorld\HelloWorld\mpr

[mps.generate] Per-root generation set to false

[mps.generate] Generating:

[mps.generate] MPSProject file: L:\lwes-assembla\mbeddr\code\applications\HelloWorld\HelloWorld.mpr

BUILD SUCCESSFUL

Total time: 57 seconds
```

You can now run make to build the executable.

7 Version Control - working with MPS, mbeddr and git

This section explains how to use git with MPS. It assumes a basic knowledge of git and the git command line. The section focuses on the integration with MPS. We will use the git command line for all of those operations that are not MPS-specific.

We assume the following setup: you work on your local machine with a clone of an existing git repository. It is connected to one upstream repository by the name of origin.

7.1 Preliminaries

VCS Granularity MPS reuses the version control integration from the IDEA platform. Consequently, the granularity of version control is the file. This is quite natural for project files and the like, but for MPS models it can be confusing at the beginning. Keep in mind that each *model*, living in solutions or languages, is represented as an XML file, so it is these files that are handled by the version control system.

The MPS Merge Driver MPS comes with a special merge driver for git (as well as for SVN) that makes sure MPS models are merged correctly. This merge driver has to be configured in the local git settings. In the MPS version control menu there is an entry *Install Version Control AddOn*. Make sure you execute

this menu entry before proceeding any further. As a result, your .gitconfig should contain an entry such as this one:

```
[merge "mps"]
name = MPS merge driver
driver = "\"/Users/markus/.MPS20/config/mps-merger.sh\" %0 %A %B %L"
```

The .gitignore For all projects, the .iws file should be added to .gitignore, since this contains the local configuration of your project and should not be shared with others.

Regarding the (temporary Java source) files generated by MPS, two approaches are possible: they can be checked in or not. Not checking them in means that some of the version control operations get simpler because there is less "stuff" to deal with. Checking them in has the advantage that no complete rebuild of these files is necessary after updating your code from the VCS, so this results in a faster workflow.

If you decide *not* to check in temporary Java source files, the following directories and files should be added to the .gitignore in your local repo:

- For languages: source_gen, source_gen.caches and classes_gen
- For solutions, if those are Java/BaseLanguage solutions, then the same applies as for languages. If these are other solutions to which the MPS-integrated Java build does not apply, then source_gen and source_gen.caches should be added, plus whatever else your own build process creates in terms of temporary files.

Make sure the .history files are *not* added to the gitignore! These are important for MPS-internal refactorings.

MPS' caches and Branching MPS keeps all kinds of project-related data in various caches. These caches are outside the project directory and are hence not checked into the VCS. This is good. But it has one problem: If you change the branch, your source files change, while the caches are still in the *old* state. This leads to all kinds of problems. So, as a rule, whenever you change a branch (that is not just trivially different from the one you have used so far), make sure you select File -> Invalidate Caches, restart and rebuild your project.

Depending on the degree of change, this may also be advisable after pulling from the remote repository.

7.2 Committing Your Work

In git you can always commit locally. Typically, commits will happen quite often, on a fine grained level. I like to do these from within MPS. Fig. 1 shows a program

```
module Units from cdesignpaper.units imports nothing {

unit kg for int

unit lb for int

exported test case simpleUnits {

int thisOneIsNew;

kg/int m1 = 10kg;

lb/int m2 = 10lb;

assert(0) m1 + 10kg == 20kg;

assert(1) m2 + 10kg == 20kg;

simpleUnits(test case)

}
```

Fig. 1. A new variable has been added to the program and the gutter shows the green markup

where I have just added a new variable. This is highlighted with the green bar in the gutter. Right-Clicking on the green bar allows you to rever this change to the latest checked in state.

In addition you can use the Changes view (from the Window -> Tool Windows menu) to look at the set of changed files. In my case (Fig. 2) it is basically one .mps file (plus two files realted to writing this document :-)). This .mps file contains the test case to which I have added the new variable.



Fig. 2. A new variable has been added to the program and the gutter shows the green markup

To commit your work, you can now select Version Control -> Commit Changes. The resulting dialog, again, shows you all the changes you have made and you can choose which one to include in your commit. After committing, your git status will look something like this and you are ready to push:

```
Markus-Voelters-MacBook:lwes-assembla markus$ git status

# On branch demo

# Your branch is ahead of 'assembla/demo' by 1 commit.

#
nothing to commit (working directory clean)
Markus-Voelters-MacBook-Air:lwes-assembla markus$
```

7.3 Pulling and Merging

Pulling (or merging) from a remote repository or another branch is when you potentially get merge conflicts. I usually perform all these operations from the command line. If you run into merge conflicts, they should be resolved from within MPS. After the pull or merge, the Changes view will highlight conflicting files in red. You can right-click onto it and select the Git -> Merge Tool option. This will bring up a merge tool on the level of the projectional editor to resolve the conflict. Please take a look at the screencast at

http://www.youtube.com/watch?v=gc9oCAnUx7I to see this process in action.

The process described above and in the video works well for MPS model files. However, you may also get conflicts in project, language or solution files. These are XML files, but cannot be edited with the projectional editor. Also, if one of these files has conflicts and contains the < < < and > > > merge markers, then MPS cannot open these files anymore because the XML parser stumbles over these merge markers.

I have found the following two approaches to work:

- You can either perform merges or pulls while the project is closed in MPS. Conflicts in project, language and solution files should then be resolved with an external merge tool such as WinMerge before attempting to open the project again in MPS.
- Alternatively you can merge or pull while the project is open (so the XML files are already parsed). You can then identify those conflicing files via the Changes view and merge them on XML-level with the MPS merge tool. After merging a project file, MPS prompts you that the file has been changed on disk and suggests to reload it. You should do this.

Please also keep in mind my remark about invalidating caches above.

7.4 A personal Process with git

Many people have described their way of working with git regarding branching, rebasing and merging. In principle each of these will work with MPS, when taking account what has been discussed above. Here is the process I use.

To develop a feature, I create a feature branch with

I then immediately push this new branch to the remote repository as a backup, and to allow other people to contribute to the branch. I use

```
git push -u origin newFeature
```

Using the -u parameter sets up the branch for remote tracking.

I then work locally on the branch, committing changes in a fine-grained way. I regularly push the branch to the remote repo. In less regular intervals I pull in the changes from the master branch to make sure I don't diverge too far from what happens on the master. I use merge for this:

Alternatively you can also use

```
git fetch
git checkout myFeature
git merge origin/master
```

This is the time when conflicts occur and have to be handled. In repeat this process until my feature is finished. I then merge my changes back on the master:

```
git checkout master
git pull // this makes sure the master is current
git merge --squash myFeature
```

Notice the -squash option. This allows me to "package" all of the commits that I have created on my local branch into a single commit with a meaningful comment such as "initial version of myFeature finished".

7.5 The Graph Viewer

The graph viewer allows to render all graphviz files in the current solution. It simply scans the source_gen directory recursively for .gv files and shows them in the tree. Underscores in the file name are used as hierarchies in the tree. Users

can create their own transformation to graphviz graphs, and they will be shown in the tree. A special graph language is available for this transformation (will be explained later).

By default, each build configuration results in a diagram that shows the dependencies between the modules. To see it in the graph viewer,

- Open an implementation module in the editor
- select Tools-> OpenGraphViewer from the menu
- in the graph viewer, click through the tree until you find a leaf node representing a diagram

The diagram should open in the lower pane of the graph viewer. You can zoom (mouse wheel) and move around (press mouse button and move). More interestingly, you can also click on a node, and the MPS editor selects the respective node.

8 Debugging

mbeddr comes with a Debugger for core C. The debugger can also debug the standard extensions and is extensible for user-defined extensions. In this section we describe how to debug C programs.


Note: We assume the default configuration, where we use gdb as the debug backed. Debugging on some target device is currently not yet supported.

The Hello World project contains a model called Debugger.Example that contains a simple program that makes use of a number of C extensions. We will use this program to illustrate debugging.


```
module DebuggerExample from Debugger.Example imports nothing {
  int8_t add(int8_t x, int8_t y) {
    return x + y;
  }
  exported test case testAdding {
    assert(0) add(1, 2) == 3;
    assert(1) add(2, 4) == 6;
  }
  int32_t main(int32_t argc, int8_t*[] argv) {
    return test testAdding;
  }
}
```

8.1 Creating a Debug Configuration


We start out by creating a new debug configuration as shown in the figure below:

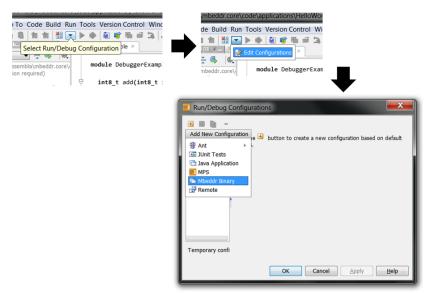

In the resulting dialog, name the new configuration <code>DebuggerExampleConfig</code> and select the <code>Debugger.Example.DebuggerExample</code> executable via the . . . button (this executable is defined in the build configuration of the debugger example).

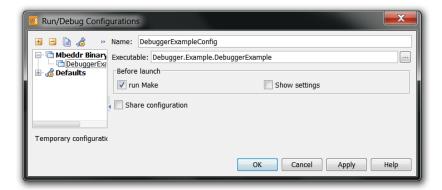


The launch configurations drop down at the top of the MPS screen should now show this new configuration:



8.2 Running a Debug Session

Before we can run the debugger, we have to make sure the C code for the program has been generated. So select Rebuild from the context menu of the Debugger. Example model or press Ctrl-F9.


Now set a breakpoint in the first line of the test case. You can set breakpoints by clicking into the gutter of the editor. The result should look like this:

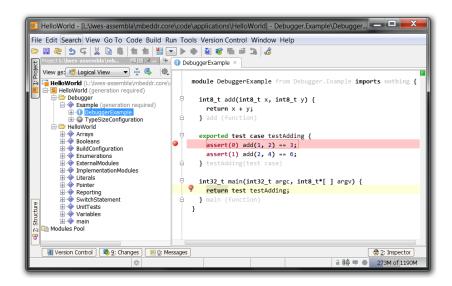


Next, run the previously created debug configuration by pressing Shift-F9 or by selecting the debugger button in the MPS title bar (see next figure).



The debugger should start up and stop at the breakpoint we had set before.

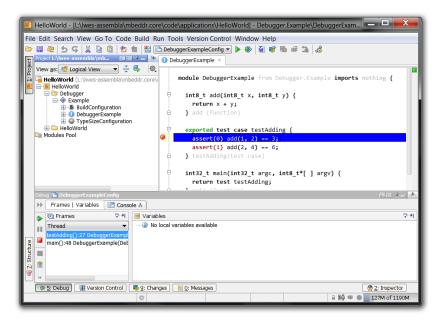

Next, press F8 to $step\ over$ the current line and then press F7 to $step\ into$ the add function on the second line of the test case. Once inside the function, you can see the nested stack frames as well as the local variables x and y.

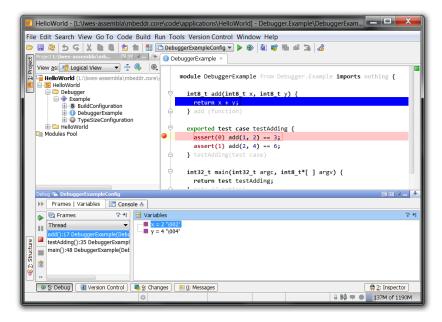

9 Importing existing Header Files

10 Graphs

This section explains how you can create custom graphs from your models. mbeddr comes with the com.mbeddr.mpsutil.graph language. It is an MPS language you can use to describe graphs. These graphs are then automatically translated into a .gv file, which is then picked up by the graphview for rendering.


Note: This section assumes that you have a basic understanding of MPS generators.

The example code for this chapter can be found in code/applications/Callgraph.

A call graph shows the call relationships between functions. Here is an example program:

```
module Module1 {
 void function1() {
   function2();
   function3();
 void function2() {
   function3();
   function1();
 void function3() {
   function4();
   function2();
 void function4() {
   function1();
   function2();
 int32_t main(int32_t argc, int8_t*[] argv) {
   function1():
   return 0;
}
```

Here is the resulting call graph diagram we are going to create in this chapter:

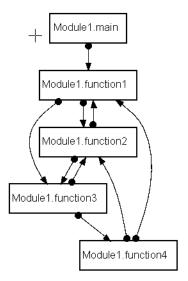

10.1 Setting up a Language

To define the transformation to the graph language we have to define our own language, even though we're not going to define any new *language* constructs, but just a generator. MPS still considers this a language.

We create a new language callgraph. It has to extend com.mbeddr.core.modules (because it defines functions, and we want to create a callgraph between functions), com.mbeddr.core.buildconfig (because we're going to hook the creation of the graph to the build configuration) and com.mbeddr.core.base (because we'll need one specific concept from this language, as we'll see later).

10.2 Creating the Generator

In this new language we now create a new generator. It contains one root mapping rule that maps a BuildConfiguration to a graph.

The map_BuildConfiguration template creates the actual graph. It is a root template that uses a Graph from the com.mbeddr.mpsutil.graph language. To make this available, the generator model has to use this language. Here is the empty Graph node:

If we generated this, it would create an empty and useless graph. So we now have to create a new Node for each function in each module in the executable created by the build configuration from which we generate the graph. So we first create a node object (that's a node from the graph language):

```
node function id someID (shape: rect t:"function") style normal
```

We specify an arbitrary name (function), an arbitrary ID (someID), we use a rect as the shape, a normal style and a label that is also arbitrary ("function"). Then we attach a LOOP macro. It is used to iterate over all relevant functions using the following LOOP code:

```
sequence<node<Binary>> allExecutables =
  node.binaries.where({~it => it.isInstanceOf(Executable);}).
  ofType<node<Executable>>; sequence<node<Module>>
  allModules = allExecutables.
  selectMany({~it => it.referencedModules.module; });
  allModules.selectMany({~it => it.descendants<concept = Function>; });
```

We then use a property macro on the function name that uses the qualified name of the function as the name of the node:

```
node.qualifiedName().replaceAll("\\.", "_");
```

We put the function's internal node ID as the ID of the created graph node using another property macro:

```
node.adapter.getId();
```

We use another property macro for the label of the node that also contains the qualified name of the function. Next up, we have to create an out edge for each function call in that function. So we add an out edge to the template graph node and LOOP over all functions:

Here is the expression we use in the LOOP macro:


We make the edge bidirectional (<->), we specify the ID to be the ID of the function call node (over which we currently iterate) and then we specify a dot tail arrow style and a normal head arrow style. Finally, we specify the target; we use the same function node defined above as the target, and then use a reference macro (->) to "rewire" the edge to its actual target node. Here is the expression in the reference macro:

```
node.function.qualifiedName().replaceAll("\\.", "_");
```


That's all we need to do in the generator template.

10.3 Generator Priorities

We have to make sure that our generator runs at the right time during the overall, multistep transformation process. To make our lives simple, we simple have it run at the same time as the generator that create the module dependencies. It runs as part of every transformation by default. So we open the generator properties of the generator we just wrote and specify a dependency to the com.mbeddr.core.buildconfig generator (it is the one creating the module dependency graph).

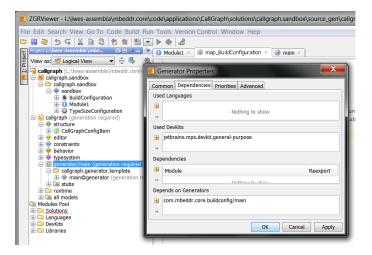

We then swap over to the next tab and specify that our generator runs at the same time (=) as the com.mbeddr.core.buildconfig/main.dependencyGraph.

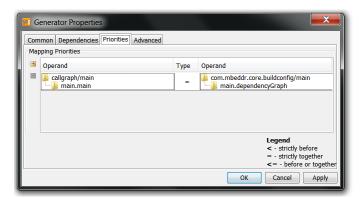

10.4 Making the Generation Optional

mbeddr comes with a generic configuration framework. BuildConfigurations contain so-called configuration items:

We create a configuration item; we only generate the graph if the callgraph item is configured.


```
Configuration Items reporting: printf callgraph
```

To make enable this feature, we have to do two things. In our callgraph language we create a new language concept called CallGraphConfigItem. It has to implement the IConfigurationItem interface for this to work. The editor for the concept is simply the constant callgraph

Finally, we have to make sure the transformation only runs if this item is present. To do this, we go back to the mapping configuration and to the root mapping rule we created earlier. We make this conditional on the presence of the configuration item:

10.5 Wrap Up

This finishes our implementation of the callgraph. You can now create some kind of example program (including a BuildConfiguration with the callgraph item). After rebuilding this example program, you should be able to open the graph viewer and see the new diagram:

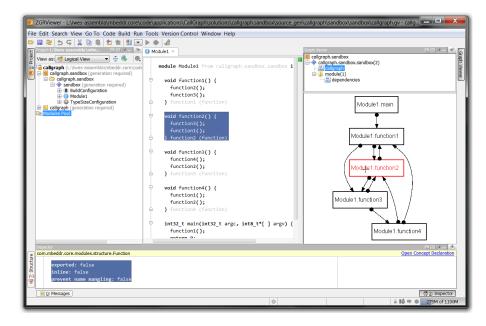

You can click on the boxes and select the function. You can also click on either end of the arrows and highlight the "outgoing" function calls.

11 Physical Units

Physical Units are new types that, in addition to specifying their actual data type, also specify a physical unit (see Fig. 3). New literals are introduced to support specifying values for these types that include the physical unit. The typing rules for the existing operators (+, * or >) are overridden to perform the

```
derived unit mps = m s<sup>-1</sup> for speed
convertible unit kmh for speed
conversion kmh -> mps = val * 0.27

int8_t/mps/ calculateSpeed(int8_t/m/ length, int8_t/s/ time) {
  int8_t/mps/ s = length / time;
  if ( s > 100 mps ) { s = [100 kmh → mps]; }
  return s;
}
```

Fig. 3. The *units* extension comes with the sevel SI units predefined and lets users define arbitrary derived units (such as the mps in the example). It is also possible to defined convertible units that require a numeric conversion factor to get back to SI units. Type checks ensure that the values associated with unit literals use the correct unit and perform unit computations (as in speed equals length divided by time). Errors are recorded if incompatible are used together (e.g. if we were to add length and time). To support this feature, the typing rules for the existing operators (such as + or /) have to be overridden.

correct type checks for types with units. The type system also performs unit computations to, for example, handle an speed = length/time correctly. To use physical units use the com.mbeddr.physicalunits devkit in your model.

11.1 Basic SI Units in C programs

Once the devkit is included, types can be annotated with physical units. We have defined the seven SI units in mbeddr:

```
int8_t/m/ length;
int8_t/s/ time;
```

It is also possible to define composite units. To add additional components press enter after the first one (the m in the example below):

```
-1 int8_t/m s / speed;
```

To change the exponent, use intentions on the unit. Types with units can also be typedef'ed to make using them more convenient:

```
-1 typedef int8_t/m s / as speed_t;
```

If you want to assign a value to the variable, you have to use literals with units, otherwise you will get compile errors:

```
int8_t/m/ length = 3 m;
```

Note that units are computed correctly:

```
speed_t aSpeed = 10 m / 5 s;
speed_t anotherSpeed = 10 m + 5 s; // error; adding apples and oranges
```

Of course, the type system is fully aware of the types and "pulls them through":

```
int8_t/m/ someLength;
int8_t/m/ result = 10 m + someLength;
```

To get values "into" and out of the units world, you can use the stripunit and introduceunit expressions:

```
int8_t/m/ someLength = 10 m;
int8_t justSomeValue = stripunit[someLength];
int8_t/m/ someLength = introduceunit[justSomeValue -> m];
```

11.2 Derived Units

A derived unit is one that combines several SI units. For example, $N = kg\frac{m}{s^2}$ or $mps = \frac{m}{s}$. Such derived units can be defined with the units extension as well.

To define derived units, create a UnitContainer in your model. There you can define derived units (Fig. 4).

Unit Declarations

```
derived unit N = kg m s<sup>-2</sup> for force
derived unit Pa = N m<sup>-2</sup> for pressure
```

Fig. 4. Derived units are combinations of other units.

Unit computations in C programs work as expected; compatibility is checked by reducing both to-be-compared units to their SI base units.

11.3 Convertible Units

The derived units discussed in the previous section are still within the SI system and require no value conversions. For convertible units, this is different. They can be declared in the unit container as well; but they need conversion rules to be usable (Fig. 5).

```
Unit Declarations
convertible unit F for temperature
convertible unit C for temperature

Conversion Rules
conversion F -> C = val * 9 / 5 + 32
conversion C -> F = (val - 32) * 5 / 9
```

Fig. 5. Convertible units require the definition of conversion rules.

Typically, a convertible unit is a non-SI unit, and the conversion rules map it back to the SI world. Notice how in the conversion rule the val keyword represents the value in the original unit.

Conversions in the C programs do not happen automatically, since such a conversion produced runtime overhead. Instead, an explicit conversion has to be used which relies on the conversion rule defined in the units container. A conversion can be added with an intention.

```
int8_t/F/ tempInF = 10 F;
int8_t/C/ tempInC = [tempInF -> C];
```

11.4 Extension with new Units

The units extension can also be "misused" to work with other type annotations such as money, time or coordinate systems. To achieve this, you have to define new elementary unit declarations in a language extension. Here is some example code with coordinate systems:

```
int8_t/#global/ aGlobalVariable = 10#global;
int8_t/K/ aTemp = aGlobalVariable; // error; #global != K
aGlobalVariable = 10K; // error; #global != K
aGlobalVariable = 230#local; // error; #global != #local
```

In the example above, #global and #local are two different coordinate systems; technically, both are subtypes of ElementaryUnitDeclaration:

Even though these are not technically *convertible* units, we can still define conversion rules:

```
Conversion Rules
conversion #global -> #local = val + 20
conversion #local -> #global = val - 20
```

The C code can then use conversions as shown above:

```
int8_t/#local/ aLocalVariable = 20#local;
aGlobalVariable = [aLocalVariable -> #global];
```

The coordinate systems extension is especially useful if combined with a new type and literal, for example, for vectors:

```
intvec/#global/ globalVector = (10,20)#global;
intvec/#local/ localVector = (20,20)#global;
```

12 Components

Modularization supports the divide-and-conquer approach, where a big problem is broken down in to a set of smaller problems that are easier to understand and solve. To make modules reusable in different contexts, modules should define a contract that prescribes how it must be used by client modules. Separating the module contract from the implementation also supports different implementations of the same contract.

Object oriented programming, as well as component-based development exploit this notion. However, C does not support any form of modularization beyond separating sets of functions, <code>enums</code>, <code>typedefs</code> etc. into different .c and .h files. mbeddr, in contrast supports a rich component model.

12.1 Basic Interfaces and Components

To use the components in your C programs, please include the com.mbeddr.components devkit.

Interfaces An interface is essentially a set of operation signatures, similar to function prototypes in C. query marks functions as not performing any state changes; they are assumed to be invokable any number of times without side effects (something we do not verify automatically at this time).

```
exported interface DriveTrain {
  void driveForwardFor(uint8_t speed, uint32_t ms)
  void driveBackwardFor(uint8_t speed, uint32_t ms)
  void driveContinouslyForward(uint8_t speed)
  void driveContinouslyBackward(uint8_t speed)
  void stop()
  query uint8_t currentSpeed()
}
```

Components Components can provide and require interfaces via *ports*. A *provided* port means that the component implements the provided interface's operations, and clients can invoke them. These invocations happen via required ports. A *required* port expresses an expectation of a component to be able to call operations on the port's interface. The example below shows a component RobotChassis that provides the DriveTrain interface shown above, and requires two instances of EcRobot_Motor.

```
exported component RobotChassis {
    provides DriveTrain dt
    requires EcRobot_Motor motorLeft
    requires EcRobot_Motor motorRight

    void dt_driveForwardFor(uint8_t speed, uint32_t ms) <- op dt.driveForwardFor {
        motorLeft.set_speed(((int8_t) speed));
        motorRight.set_speed(((int8_t) speed));
        ...
    }
    ...
}</pre>
```

Note how the dt_driveForwardFor runnable implements the operation driveForwardFor from the dt provided port. The two signatures are automatically synchronized. Inside components, the operations on required ports can be invoked in the familiar dot notation.

Components can be instantiated. Each component instance generally must get all its required ports connected to provided ports provided by other instances. However, a required port may be marked as optional (this is toggled via an intention), in which case, for a given instance, the required port may *not* be connected. Invocations on this required port make no sense in this case, which is why code invoking operations on an optional port must be wrapped in a with port (optionalReqPort) { ... } statement. The body of the with port is not

executed if the port is not connected. The IDE reports an error at editing time if an invocation on an optional port is *not* wrapped this way.

```
exported component RobotChassis {
    provides DriveTrain dt
    requires EcRobot_Motor motorLeft
    requires EcRobot_Motor motorRight
    requires optional ILogging log

void dt_driveForwardFor(uint8_t speed, uint32_t ms) <- op dt.driveForwardFor {
    with port(log) {
        // other stuff
        log.error(...)
        // more other stuff
     }
   }
   ...
}</pre>
```

Components can have fields. These get values for each of the component instances created:

```
exported component OrienterImpl extends nothing {
  ports:
    ...
  contents:
    field int16\_t[5] headingBuffer
    field int8\_t headingIndex

  void orienter\_orientTowards(int16\_t heading, uint8\_t speed, DIRECTION dir) <- ... {
     headingIndex = heading;
  }
}</pre>
```

Fields can be marked as init fields (via an intention). In this case, when a component is instantiated, a value for the field has to be specified. We will show this below.

We have seen above how a component runnable is tied to the invocation of an operation on a provided port (using <- op port.operation). This triggering mechanism can also be used for other events, for example, to react to component instantiation. This effectively supports constructors:

```
exported component OrienterImpl extends nothing {
  contents:
    void init() <- on init {
      compass.initAbsolute();
      compass.heading();
    }
}</pre>
```

Instantiation A key difference of mbeddr components compared to C++ classes is that mbeddr component instances are assumed to be allocated and connected during program startup (embedded software typically allocates all memory at program startup to avoid failing during execution), not at arbitrary points in the execution of a program (as in C++ classes). The following piece of code shows an instance configuration:

```
exported instance configuration defaultInstances extends nothing {
  instance RobotChassis chassis
  instance EcRobot_Motor_Impl motorLeft(motorAddress = NXT_PORT_B)
  instance EcRobot_Motor_Impl motorRight(motorAddress = NXT_PORT_C)
  connect chassis.motorLeft to motorLeft.motor
  connect chassis.motorRight to motorRight.motor
}
```

It allocates two instances of the EcRobot_Motor_Impl component (each with a different value for its motorAddress init parameter) as well as a single instance of RobotChassis. The chassis' required ports are connected to the provided ports of the two motors. Note that an instance configuration just defines instances and port connections. The actual allocation and initialization of the underlying data structures happens separately in the startup code of the application, for example, in a main function:

```
int32_t main(int32_t argc, int8_t*[] argv) {
  initialize defaultInstances;
  ...
}
```

To be able to call "into" component instances from regular, non-component C code, adapters can be used. They can be defined inside of instance configurations as well as outside of them. Here is an example:

```
exported instance configuration instances extends nothing {
  instances:
    instance EcRobot_Display_Impl i_display
  connectors:
    ...
  adapter:
    adapt i_display.displayPort as disp
}

void main() {
  initialize instances;
    disp.show("some message");
}
```

Transformation Configuration Components must be able to work potentially with various off-the-shelf middleware solutions such as AUTOSAR. In this case, components will have to be translated differently. Consequently, the transformation for components has to be configured. This happens — like any other configuration — in the BuildConfiguration:

```
Configuration Items
components: no middleware
wire statically: false
```

The default configuration uses the no middleware generator, where components are transformed to plain C function. mbeddr components support polymorphic invocations in the sense that a required port only specifies an *interface*, not the implementing *component*. This way, different implementations can be connected to the same required port (we implement this via a function pointer in the generated C code). This is roughly similar to C++ classes. However, to optimize performance, the generators can also be configured to connect instances statically. In this case, an invocation on a required port is implemented as a direct function call, avoiding additional overhead. This optimization can be performed globally or specifically for a single port. Polymorphism is not supported in this case — users trade flexibility for performance. To do this, select wire statically: true. You then have to reference the instance configuration you intend to use:

```
components: no middleware
wire statically: true instance config: instances
```

If you connect a specific component port to different provided ports in different instances of this component, an error will be reported.

You can also make the decision to wire statically (without polymorphism) on a port-by-port basis, directly in the component (via an intention):

```
{\tt requires} \ {\tt EcRobot\_Compass} \ {\tt compass} \ {\tt restricted} \ {\tt to} \ {\tt OrienterImpl.orienter}
```

In this case you specify not just the interface but also the particular component and port. This allows the generator to directly refer to the implementing C function — without any overhead.

12.2 Contracts

An additional difference to C++ classes is that mbeddr interfaces support contracts. Operations can specify pre and post conditions, as well as sequencing constraints. Here is the interface from above, but with contract specifications:

```
exported interface DriveTrain {
  void driveForwardFor(uint8_t speed, uint32_t ms)
    pre(0) speed < 100
  post(1) currentSpeed() == 0
  protocol init -> init
  void driveContinouslyForward(uint8_t speed)
  pre(0) speed <= 100
  post(1) currentSpeed() == speed
  protocol init -> forward
  void accelerateBy(uint8_t speed)
  post(1) currentSpeed() == old(currentSpeed()) + speed
  protocol forward -> forward
  query uint8_t currentSpeed()
}
```

The first operation, driveForwardFor, requires the speed parameter to be below 100. After the operation finishes, currentSpeed is zero (notice how the query operation currentSpeed() is called as part of the post condition). The protocol specifies that, in order to call the operation, the protocol has to be in the init state. The post condition for driveContinouslyForward expresses that after executing this method the current speed will be the one passed into the operation — in other words, it keeps driving. This is also reflected by the protocol specification which expresses that the protocol will be in the forward state. The accelerateBy operation can only be called legally while the protocol is in the forward state, and it remains in this state. The post condition shows how the value of a query operation before the execution of the function can be accessed.

The contract is specified on the *interface*. However, the code that checks the contract is generated into the components (i.e. the implementations of the interface operations). The contracts are then checked at runtime.

To add a pre- or postcondition or a protocol, use an intention on the operation. In the inspector, you will have to provide a reference to a message definition that will be **reported** in case the condition or the protocol fails.

12.3 Mocks

Mocks are used in tests to verify that a component sees a specific behavior at its ports. In mbeddr, a mock verifies the behavior of one specific interface only. Let us look at an example. Here is an interface and a struct used by that interface:

```
exported struct DataPacket {
  int8_t size;
  int8_t* data;
};

exported c/s interface PersistenceProvider {
  boolean isReady()
  void store(DataPacket* data)
  void flush()
}
```

This interfaces assumes that clients first call the <code>isReady</code> operation, call <code>store</code> several times and then call <code>flush</code>. We could specify this behavior via contracts shown above. However, we may also want to test that a specific <code>client</code> behaves correctly. Here is an example client:

```
exported c/s interface Driver {
  void run()
}

exported component Client extends nothing {
  ports:
    requires PersistenceProvider pers
    provides Driver d
  contents:
    void Driver_run() <- op d.run {
      DataPacket p;
      if ( pers.isReady() ) {
         pers.store(&p);
         pers.flush();
      }
    }
}</pre>
```

As we can see, this client does indeed behave correctly. However, if we wanted to write a test to see if it does, we could use a mock to verify it. Here is a mock implementation for the PersistenceProvider interface that verifies this behavior:

```
mock component PersistenceMock {
   report messages: true
   ports:
      provides PersistenceProvider pp
   expectations:
      sequence {
        0: pp.isReady return false;
      1: pp.isReady return true;
      2: pp.store {
            0: parameter data: data != null
            }
        3: pp.flush
      }
      total no. of calls is 4
}
```

It specifies that it expects four invocations in total; the first one should be isReady and the mock returns false. We then expect isReady to be called again, then we expect store to be called with a data argument not being null, and then we expect flush to be called.

Here is a test case that uses an instance of the Client shown above. It also uses an instance of the PersistenceMock:

```
exported test case runTest {
    client.run();
    client.run();
    validate mock mock report messages.mockDidntValidate();
}
```

Notice the validate mock statement. If the mock instance of PersistenceMock has seen anything else but the expected behavior, the validate mock statement will fail — and hence the test case will fail.

13 State Machines

State machines can be used to represent state-based behavior in a structural way (they can also be analyzed via model checking, however, we do not discuss this in this section). They are module contents and can be added to arbitrary models. Use the devkit com.mbeddr.statemachines.

13.1 Hello State Machine

The following is the simplest possible state machine. It has one state and one in event. Whenever it receives the **reset** event, it goes back to its single state **start**. In other words, it does nothing.

```
statemachine WrappingCounter {
  in events
   reset()
  states ( initial = start )
    state start {
      on reset [ ] -> start { }
   }
}
```

However, it is a valid state machine and can be used to illustrate some concepts. State machines have in events. These can be "injected" into the state machine from a C program. State machines have one or more states, and one of them must be the initial state. A state may have transitions; a transition reacts to an in event and then points to the new state.

Events can have arguments; they are declared along with the event. Notice how the <code>int</code> type requires the specification of bounds. This is to simplify model checking.

```
in events:
  reset()
  increment(int[0..10] delta)
```

A state machine can also have local variables. While these could in principle be handled via separate states, local variables are more scalable.

```
local variables

int[0..100] current = 0

int[0..100] LIMIT = 100

int[0..100] steps = 0
```

We are now ready to write a somewhat more sensible WrappingCounter state machine. Whenever we enter the start state, we set the current variable and the steps variable to zero (entry and exit actions can be added to a state via an intention). We have two transitions: if the increment event arrives, we go to the increasing state, incrementing the current value by the delta, passed in via the event. Notice how in transition actions we can access the arguments of the event that triggered the respective transition.

```
state start {
  entry {
    current = 0;
    steps = 0;
  }
  on increment [] -> increasing { current = current + delta; }
  on reset [] -> start { }
}
```

Let us look at the increasing state. There we also react to the increment event. But we use guard conditions to determine which transition fires. We can also access event arguments in the guard condition.

```
state increasing {
  entry { steps++; }
  on increment [current + delta <= LIMIT] -> increasing { current = current + delta; }
  on increment [current + delta > LIMIT] -> start { current = 0; }
  on reset [] -> start { }
}
```

13.2 Integrating with C code

State machines can be instantiated. They act as a type, so they can be used in local variables, arguments or in global variables:

The trigger statement is used to "inject" events from regular C code. Notice how we pass in the argument to the increment event.

```
void someFunctionCalledByADriver(int8_t ticks) {
  trigger(wc, increment(ticks));
}
```

State machines can also have out events. These are a means to define abstractly some kind of interaction with the environment. Currently, they can be bound to a C function:

```
out events
wrapped(int[0..100] steps) -> wrapped
```

These out events can then be fired from an action in the state machine, for example, in the exit action of the increasing state:

```
exit { send wrapped(steps); }
```

13.3 The complete WrappingCounter state machine

```
module WrappingCounterModule imports nothing {
  statemachine WrappingCounter {
     increment(int[0..10] delta)
     reset()
   out events
     wrapped(int[0..100] steps) -> wrapped
   local variables
     int[0..100] current = 0
     int[0..100] LIMIT = 100
     int[0..100] steps = 0
   states ( initial = start )
     state start {
       entrv {
         current = 0;
         steps = 0;
       on increment [ ] -> increasing { current = current + delta; }
       on reset [ ] -> start { }
      state increasing {
       entry { steps++; }
```

```
on increment [current + delta <= LIMIT] -> increasing { current = current + delta; }
  on increment [current + delta > LIMIT] -> start { current = 0; }
  on reset [ ] -> start { }
  exit { send wrapped(steps); }
}

void wrapped(int8\_t steps) {
  // do something
}

var WrappingCounter wc;

void someFunctionCalledByADriver(int8_t ticks) {
  trigger(wc, increment(ticks));
}
```

13.4 Testing State Machines

In addition to model checking (discussed in the chapter on analyses) state machines can also be checked regularly. The following piece of test code checks if the state machine works correctly:

```
exported test case testTheWrapper {
  trigger(wc, reset);
  assert(0) isInState(wc, start);
  trigger(wc, increment(5));
  assert(1) isInState(wc, increasing);
  assert(2) wc.current == 5;
  assert(3) wc.steps == 1;
}
```

Notice that in order to be able to access the variables current and steps from outside the state machine, these variables have to be marked as readable (via an intention).

There is also a shorthand for checking if a state machine reacts correctly to events in terms of the new current state:

```
exported test case testTheWrapper {
    ...
    test statemachine wc {
      reset -> start
      increment(5) -> increasing
      increment(90) -> increasing
      increment(10) -> start
    }
}
```

14 Exceptions

To be documented later.

15 Requirements

15.1 Overview

The requirements package supports the collection of requirements and traceability from arbitrary code back to the requirements.

15.2 Specifying Requirements

Requirements can be collected in instances of RequirementsModule, a root concept defined by the com.mbeddr.cc.requirements language. An example is shown in Fig. 15.2. Each requirement has an ID, a short prose summary, and a kind. (functional, timing). The kind, however, is more than just a text; each kind comes with its own additional specifications. For example, a timing requirement requires users to enter a timing specification. This way, additional formal data can be collected for each kind of requirement.

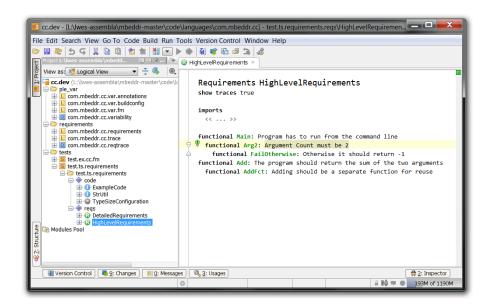


Fig. 6. Working with Requirements

In addition to the summary information discussed above, requirements can also contains details. The details editor can be opened on a requirement with an intention or with Ctrl-Shift-D. Fig. 15.2 shows an example.

functional Main: Program has to run from the command line functional Arg2: Argument Count must be 2 functional FailOtherwise: Otherwise it should return -1 functional Add: The program should return the sum of the two arguments functional AddFct: Adding should be a separate function for reuse



functional Main: Program has to run from the command line
functional Arg2: Argument Count must be 2

Additional Constraints
none
Additional Specifications
none
Description
Some details about this requirement.
Several lines.

functional FailOtherwise: Otherwise it should return -1
functional Add: The program should return the sum of the two arguments
functional AddFct: Adding should be a separate function for reuse

Fig. 7. Requirements editor expanded

In the details, a requirement can be described with additional prose, with the kind-specific formal descriptions as well as with additional constraints among requirements. The default hierarchical structure represents refinement: child requirements refine the parent requirements. In addition, each requirement can have typed links relative to other requirement, such as the conflicts with shown in Fig. 15.2.

Requirements modules can import other reqirements modules using the import section. This way, large sets of requirements can be modularized.

Extending the Requirements Language To extend the requirements framework, create a new language that extends com.mbeddr.cc.requirements. Then, use this language in the project that manages your requirements.

A new Link To create a new link, create a concept that extends RequirementsLink. It base class already comes with a pointer to the target requirement. Just define the concept and an alias.

 $A\ new\ Kind$ To create a new requirements kind, extend RequirementsKind and define an alias.

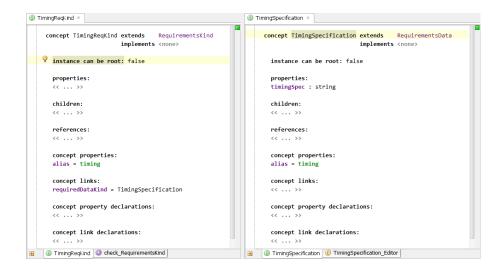


Fig. 8. Defining additional required specifications for a requirements kind.

A new Additional Specification Defining new additional specifications (such as the timing specification mentioned above) happens in two steps. First you have to create a new concept that extends RequirementsData. It should contain any additional structure you need (this can be a complete MPS DSL, or just a set of pointers to other nodes). You should also define an alias. The second step requires enforcing that a certain requirements kind also requires that particular additional specification. In the respective kind, use the requiredDataKind concept link to point to the concept whose instance is required. Fig. 15.2 shows an example.

```
requirements modules: HighLevelRequirements
module ExampleCode from test.ts.requirements.code imports nothing {
   int8_t main(string[ ] args, int8_t argc) {
      if ( argc == 2 ) {
        return 0;
      } else {
        return 1;
      } if
   }
} main (function)
```

Fig. 9. Code with requirements traces

15.3 Tracing

Tracing establishes links between implementation artifacts (i.e. arbitrary MPS nodes) and requirements. The trace facilities are implemented in the com.mbeddr.cc.trace language. Fig. 15.2 shows an example of requirements traces.

Traces can be attached to any MPS node using an intention. However, for this to work, the root owning the current node has to have a reference to a requirements module. This can be added using an intention. Only the requirements in the referenced modules can be referred to from a trace.

There is a second way to attach a trace to a program element: go to the target requirement and copy it (Ctrl-C). Then select one or more program nodes and press Ctrl-Shift-R. This will attach a trace from each of these elements to the copied requirement.

A trace can have a kind. By default, the kind is trace. However, the kind can be changed (Ctrl-Space on the trace keyword.)

Extending the Trace Facilities New trace kinds can be added by creating a new language that extends com.mbeddr.cc.trace, using that language from your application code, and defining a new concept that extends TraceKind.

15.4 Other Traceables

The tracing framework cannot just trace to requirements, but to any concept that implements ITraceTarget. For example, a functional model may be used as a trace target for implementation artifacts. In this section we explain briefly how new trace targets can be implemented. We suggest you also take a look at implementation of com.mbeddr.cc.requirements, since this uses the same facilities.

- Concepts that should act as a trace target must implement the ITraceTarget interface (e.g. Requirement)
- The root concept that contains the ITraceTargets must implement the ITraceTargetProvider and implement the method allTraceTargets.
- In addition, you have to create a concept that extends TraceTargetProvider-RefAttr. It references ITraceTargetProviders.

Here is how the whole system works: You attach a TraceAnnotation to a program element. It contains a set of TranceTargetRefs which in turn reference ITraceTargets. To find the candidate trace targets, the scoping rule of TranceTargetRef ascends the tree to the current root and checks if it has something in the traceTargetProviderAttr attribute. That would have to be a subtype of TraceTargetProviderRefAttr. It then follows the refs references to a set of ITraceTargetProvider and asks those for the candidate ITraceTarget.

15.5 Evaluating the Traces in Reverse

The traces can be evaluated in reverse order. For example, Fig. 15.5 (left) shows how requirements can be color-coded to reflect their state. The color codes must be updated explicitly (may take a while) by the Update Trace Stats intention on the requirement module.

In addition, MPS Find Usages functionality has been enhanced for requirements. If the user executes Find Usages for requirements, the various kinds of traces are listed separately in the result (Fig. 15.5, right).



Fig. 10. Left: The requirements can be color coded to reflect whether they are traced at all (grey), implemented (blue) and testes (green). Untraced requirements are red. Right: The Find Usages dialog shows the different kinds of traces as separate categories.

16 Variability

16.1 Overview

Product line engineering involves the coordinated construction of several related, but different products. Each product is typically referred to as a *variant*. The product variants within a product line have a lot in common, but also exhibit a set of well-defined differences. Managing these differences over the sets of products in a product line is non trivial. This document explains how to do it in the context of mbeddr.

A devkit com.mbeddr.cc.variability is defined that comprises the following three languages:

- com.mbeddr.cc.var.fm supports the definition of feature models. Feature
 models are a well-known formalism for expressing variability on a high-level,
 independent of the realization of the variability in software.
- com.mbeddr.cc.var.annotations allows the connection of implementation artifacts (any MPS model) to feature models as a way of mapping the highlevel variability to implementation code. This is done by attaching presence conditions to program elements (this is mbeddr's replacement for #ifdefs).
- com.mbeddr.cc.var.buildconfig ties the processing of annotations into mbeddr's build process.

16.2 Feature Models and Configurations

Defining a Feature Model Feature models express configuration options and the constraints between them. They are usually represented with a graphical notation as shown in Fig. 16.2.

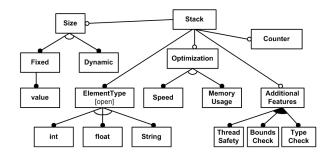


Fig. 11. An example feature model

```
feature model Stack
                                                           additional or {
                                     mandatory
 stack ! f
                                                             threadsafe
   options ? {.
                                                             boundscheck
     counter
                                                             typecheck
     optimization xor {
        speed
        memory
                                                        elementtype xor {
                                                          int
     size xor {---
                                                           float
        fixed [int8_t size].
                                                          string
        dynamic
```

Fig. 12. An example feature model in mbeddr

The following four kinds of constraints are supported between the features in a feature model:

- mandatory, the filled circle: mandatory features have to be in each product variant. In the above example, each Stack has to have the feature ElementType.
- optional, the hollow circle: optional features may or may not be in a product variant. In the example, Counter and Optimization are examples of optional features.
- or, the filled arc: a product variant may include zero, one or any number of the features grouped into a an or group. For example, a product may include any number of features from ThreadSafety, BoundsCheck and TypeCheck.

xor, the hollow arc: a product variant must include exactly one of the features grouped into a xor group. In the example, the ElementType must either int, float, or String.

Fig. 16.2 shows the textual notation for feature models used in mbeddr. Note how the constraint affects all children! We had to introduce the intermediate feature options to separate the mandatory stuff from the optional stuff. Features can have configuration attributes (of any type!). Children and attributes can be added to a feature via an intention. You can also use a surround intention to wrap a new feature around an existing one.

Defining Configurations The point of a feature model is to define and constrain the configuration space of a product. If a product configuration would just be expressed by a bunch of boolean variables, the configuration space would grow quickly, with 2^n , where n is the number of boolean config switches. With feature models, constraints are expressed over the features, defining what are valid configurations. This limits the space explosion and allows interesting analyses that will be provided in later releases.

Let us now look at how to define a product variant as a set of selected features. Fig. 16.2 shows two examples:

```
configuration model SimpleStack configures Stack
stack {
    options {
    counter
        size {
        fixed [size = 10]
    }
    }
    elementtype {
        int
    }
}
```

Fig. 13. Two valid configurations of the feature model

Note that, if you create invalid configurations by selecting feature combinations that are prohibited by the constraints expressed in the feature model, errors will be shown.

Feature models and configurations can be defined in a root concept called VariabilitySupport. It lives in the com.mbeddr.cc.var.fm language.

16.3 Presence Conditions

A presence condition is an annotation on a program element that specifies, under which conditions the program element is part of a product variant. To do so, the presence condition contains a boolean expression over the configuration features. For example the two report statements and the message list in Fig. 16.3 are only in the program, if the logging feature is selected. logging is a feature defined in the feature model FM that is referenced by this root node.

```
Variability from FM: DeploymentConfiguration
Rendering Mode: product line
module ApplicationModule from test.ex.cc.fm imports SensorModule {

   (loring)
    message list messages {
        INFO beginningMain() active: entering main function
        INFO exitingMain() active: exitingMainFunction
    }

   exported test case testVar {
        (corring)
        report(0) messages.beginningMain() on/if;
        int8_t x = SensorModule::getSensorValue(1);
        (corring)
        report(1) messages.exitingMain() on/if;
        assert(2) x == 10;
    } testVar(test case)

int32_t main(int32_t argc, string[] args) {
        return test testVar;
    } main (function)
}
```

Fig. 14. C program code with presence conditions

To use presence conditions, the root note (here: an implementation module) as to have a FeatureModelConfiguration annotation. It can be added via an intention if the com.mbeddr.cc.var.annotations language is used in the respective model. The annotation points to the feature model whose features the respective presence conditions should be able to reference. The configuration and the presence conditions are attached via intentions.

An existing presence condition can be *pulled up* to a suitable parent element by pressing Ctrl-Shift-P on the presence condition.

The background color of an annotated note is computed from the expression. Several annotated nodes that use the same expression will have the same color (an idea borrowed from Christian Kaestner's CIDE).

16.4 Replacements

A presence condition is basically like an **#ifdef**: the node to which it is attached will *not* be in the resulting system if the presence condition is *false*. But sometimes you want to *replace* something with something else if a certain feature condition is met. You can use replacements for that. Fig. 16.4 shows an example.

A replacement replaces the node to which it is attached with an alternative node if the condition is *true*. In the example in Fig. 16.4 the function call and the 10 are both replaced with a 42. Note that you'll get an error if you try to replace a node with something that is not structurally compatible, or has the wrong type.

```
exported test case testVar {
    (torstor)
    report(0) messages.beginningMain() on/if;
    int8_t x = SensorModule::getSensorValue(1) replace if (test) with 42;

    (torstor)
    report(1) messages.exitingMain() on/if;
    assert(2) x == 10 replace if (test) with 42;
```

Fig. 15. C program code with a conditional replacement

16.5 Attribute Injection

We have seen that features can have attributes and configurations specify values for these attributes. These values can be injected into programs. The attributes of those features that are used in ancestors of the current node are in scope and can be used. A type check is performed and errors are reported if the type is not compatible.

Note: At this time, this can only be done for expressions. This may be generalized later.

```
{valueTest}
int8_t vv = value;
{valueTest}
assert(3) vv == 42;

int8_t ww = 22 replace if {valueTest} with 12 + value;
{!valueTest}
assert(4) ww == 22;
```

Fig. 16. C program code with an attribute injection (value is the name of an attribute of the valueTest feature)

16.6 Projection Magic

It is possible to show and edit the program as a product line (with the annotations), undecorated (with no annotations) as well as in a given variant. Fig. 16.6 shows an example. Note that due to a limitation in MPS, it is currently not possible to show the values of attributes directly in the program in variant mode. The projection mode can be changed in the configuration annotation on the root node.

16.7 Building Variable Systems

Building variable systems is a little bit tricky. The problem is that you will want to build different variants at the same time. To make the C build simple, each variant should live in its own directory. If you want to generate into different

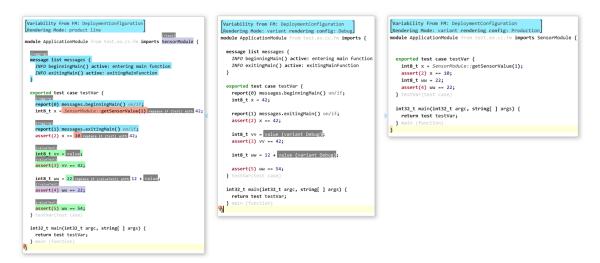


Fig. 17. C program rendered in product line mode and in two variants

directories with MPS, you need different models. This results in the following setup:

- You create one or more models that contains your product line artifacts, i.e. the program code, the feature models and the configurations.
- Then, for each variant you want to build, you create yet another model. This model imports the product line model (the one above). In this model you will have a build configuration that determines the variant that will be built.

Figure Fig. 16.7 shows an example of such as setup with one product line model (fm) and two variant models v_debug and v_production.

Each of the product models contains a BuildConfiguration that specifies the structure of the binary. In addition, the BuildConfiguration has an VariabilityTransformationConfiguration attached to it. It determines which configuration should be used for each feature model (Debug in the example). You can attach on of these to a build config using an intention, but you need the com.mbeddr.cc.var.buildconfig language for that.

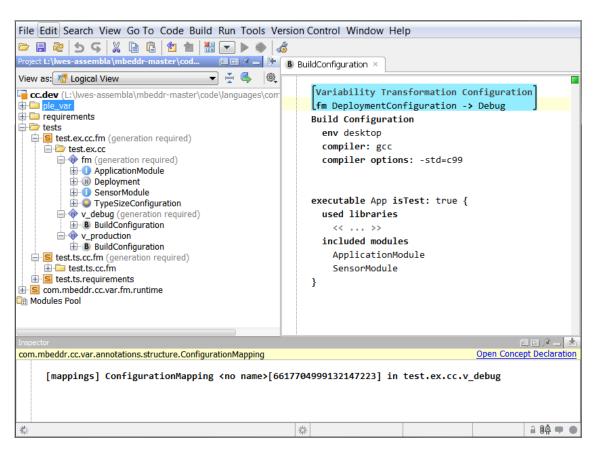


Fig. 18. Model setup and transformation configuration for generating several variants at the same time.