



Version 1.0 User's Guide

Edition 2



Introduction	1
The problem	
The Solution	
Takyon's Prime Directives	
Talyono i milo bilotaro	
Point to Point Communication 101	4
Paths and Endpoints	
Connected (reliable) versus Connectionless (unreliable, multicast)	
Messages	
Data Transferring	
Transport Memory	
Blocking Transfers	6
Non Blocking Transfers	7
Application Controlled Synchronization	7
Shared Memory	
Synchronization with Shared Memory	
Multi Buffering	
Polling and Event Driven	
Bi-Directional Communication and Buffer Sizes	
Uni-Directional Communication and Buffer Sizes	
Locality & Interconnects	
IO Device Communication	
Shared Memory, IO Device Memory, GPU Memory	
Scalability & Dataflow	
Strided Messages	
Where Are the Callbacks?	
Open Source Extensions; including Collective Communication	10
Core API Reference	14
takyonCreate	
takyonSend	
takyonSendTest	
takyonRecv	
takyonDestroy	
Helpful Programming Tips	22
Filling in the Path Attributes	
Setting the Interconnects and its Optional Properties	
Buffer Allocations	
Getting Helpful Print Messages	
Handling Errors	23
Talayan Onan Cauraa Eytanajana	0.4
Takyon Open Source Extensions	
Endian (takyon_endian.c)	
Time (takyon_time.c)	
Named Memory Allocation (takyon_mmap.c)	
Path Attributes (takyon_attributes.c)	
Collective Groups (takyon_collective.c)	
Graph Description 'Dataflow Configuration' Files (takyon_graph.c)	32
Interconnect Porting Kit	38
Interconnect Porting Kit	

Introduction


Takyon unifies multiple lower level point to point communication APIs into a simple unified API.

The problem

Many cross-platform communication and signaling standards already exist, but for the most part they are either focused on a particular interconnect hardware, a homogeneous HPC architecture, or locality (inter-thread, inter-process, inter-processor, intra-application).

Each existing standard has different design methodologies, strengths, and weaknesses. Some are very complex requiring hundreds of lines of code just to handle simple concepts. Others intend to be simple, but can get deceptively complex. Some mask important underlying features which can have performance impacts on latency and determinism.

Unfortunately there is no single standard that fits all localities, features, and strengths. The result is high development costs, compromising shortcuts taken, potential to require use of non-de-facto 3rd party proprietary APIs, and confused embedded HPC developers.

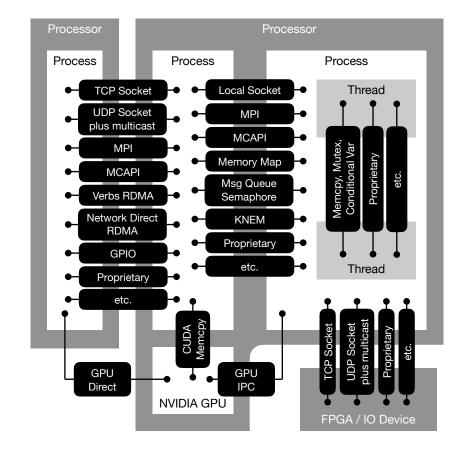




The Solution

At a fundamental level, point to point communication and signaling are about getting data and notifications from one end point to another. This concept is the same for all interconnects and localities.

If most lower level communication and signaling APIs are wrapped into a higher level standard without compromising the lower level features and strengths, then this higher level standard could be a one stop shop for embedded HPC developers.

Takyon is the solution. It's is an efficient layer over many lower level communication and signaling APIs.

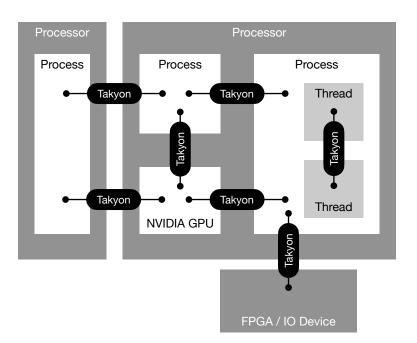

Takyon's Prime Directives

The goal is to cater to the embedded HPC engineer who is focused on algorithm development but not communication, and needs the performance and flexibility of lower level communication, and the simplicity of higher level communication concepts.

One Way, Zero Copy, Two Sided

This is the formula to achieving best performance.

- **One Way**: The message is transferred from the sender to the receiver in one underlying communication, without the need for a round trip to ask the receiver where to place the data. Takyon can do this because the application gets the credentials of the receive buffers when the path is created, so there's no need at transfer time to ask the receiver where to put the message.
- **Zero Copy**: The message is transferred without needing to use any intermediate buffering. Just like with 'one-way', since the receive buffers are pre-registered at path creation time, there's no need for intermediate buffering; Takyon can just send the data to the already known receive buffer locations.
- **Two Sided**: Integrated into the message transfer is an implicit notification to the receiver when the message has arrived and is ready to be processed, avoiding any expensive explicit secondary signaling message or method (like polling on a receive buffer memory location) to do the notification. Note that even for unconnected communications, like multicast, there are still two sides involved, and there is still an implicit signaling method to coordinate when data has arrived at the receiver.



Minimal Implicit Synchronization

Synchronizing requires messaging from one end point to the other and can perturb determinism and latency. The only implicit synchronization that Takyon uses is to notify the sender when the message has left and notify the receiver when the message has arrived. All other synchronization is left to the application, and should be used when:

- The receiver is ready for more data and the sender can start another message transfer.
- The sender's buffer can be filled (in the case where the sender and receiver are sharing a memory buffer). More details on this is explained in the next chapter.

Application Level Fault Tolerance

This is the formula to error recovery. This means that if something goes wrong with a communication path, it can be detected and either re-established or use an alternative path or method to make sure the application continues reliably.

- **Dynamic Connections**: Takyon paths can be created and destroyed at any time during the application's life cycle without effecting any other established communication paths. Multiple paths can be created between the same two endpoints using the same or different interconnects.
- **Timeouts**: When sending and/or receiving, there may be some amount of time that passes where the Takyon path is no longer considered responsive. If a Takyon path reports a timeout, then the application can take the appropriate action to keep running reliably; e.g. use an alternate communication path.
- **Disconnect Detection**: While timeouts can imply degraded communication paths, most modern interconnects can also detect when a path has disconnected due to some failure. If a Takyon path reports a disconnection, then the application can take the appropriate action to keep running reliably.

Follow the Intuition, Not the Hardware

Fundamentally, communication is about getting data from A to B. When using a higher level communication API, there should be no need to have different function calls for each type of interconnect or for different localities (thread, process, processor). Takyon's API is based on the following five communication concepts, and therefore only has five core functions:

- **Create**: create a communication path to a remote endpoint
- **Send**: send a message to the remote endpoint (blocking and non-blocking)
- Non-Blocking Send Finished Test: check if a previously started non-blocking send is complete
- Receive: receive a message
- **Destroy**: destroy the path



Point to Point Communication 101

This chapter will cover the fundamentals of point to point communication and how it was designed into Takyon to keep it simple and maintain best possible performance without any significant tradeoffs.

Note: In this chapter, pseudo code will be used to describe the concepts instead of actual Takyon functions.

Paths and Endpoints

A path is just a concept that logically describes the connectivity between two endpoints. When data is sent from the sender's endpoint, it's pushed down a logical path intended to get to the receiver's endpoint.

Connected (reliable) versus Connectionless (unreliable, multicast)

A path can be connected or connectionless.

A connected path knows about the remote endpoint. One cannot exist without the other, so if one of the endpoints fail, then this will force the remote endpoint to be invalid. Connected paths are bi-directional; i.e. either endpoint can send data to the remote endpoint. This is the type of connection to use when data transfers need to be reliable and ordered.

A connectionless path is one sided, and does not require the remote endpoint to exist. If data is sent, and the other side does not exists, the data will just be dropped on the transport. If both endpoints do exists, the receiver is not guaranteed to get all the messages the sender sends, and is not guaranteed to get the messages in the order sent. Connectionless also allows for multicasting where one sender can send to multiple receivers. Connectionless communication is useful for things like live video streaming, live audio streaming, analog to digital signal streaming, and digital to analog signal streaming, where it's OK to occasionally lose data or get data in a different order than the order sent. The data size transferred with connectionless paths is usually limited, typically to around 64 Kbytes (the typical size of a UDP datagram) or less (sometimes the MTU size).


Messages

Takyon is designed to pass messages: i.e. what is sent by a single call to send() is the same as what is received by a single call to recv(). With connectionless, a message could be dropped, but if it is received, it will be the entire message.



Data Transferring

Intuitively communication is about moving data from endpoint A to endpoint B or visa versa. To break it down a little further, there's two phases of sending and two phases of receiving.

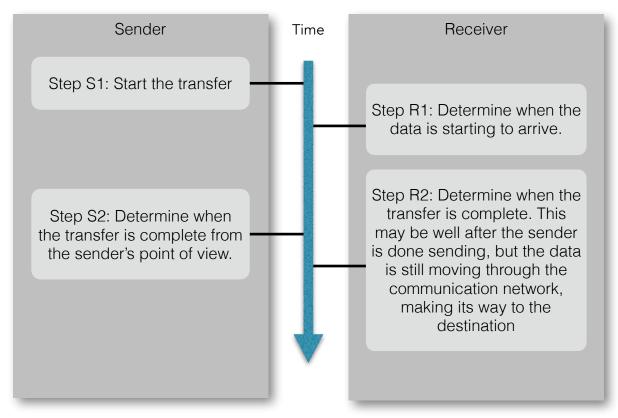

That's all there is to it.

Note: that S1, S2, R1, and R2 (from the diagram above) will be referenced throughout this chapter. Also, the following pseudo code will also be referenced:

- sendStart() == S1
- sendIsFinished() == S2
- send() == S1 + S2
- recv() == R1 + R2

Transport Memory

Many communication packages define/register the source and destination transport memory at the time of the transfer.



Important: One of the most fundamental aspects of Takyon, which is very different from many communication packages, is that Takyon requires the sender and receiver transport memory to be defined and registered when the communication path is established. This is a Takyon buffer. This means the Takyon send and receive functions will not need a data address passed in as an argument since they are already known.

Sender	Receiver
send(bytes)	recv(&bytes_received)

This may seem odd at first, but the improved performance is potentially a big benefit.

Takyon also allows a source and destination offset (in bytes) to be specified when sending, so the application can start from any byte in the Takyon buffer. If managed correctly, a single area of contiguous memory can be used by multiple Takyon buffers even across multiple Takyon paths. This is helpful for collective functions like scattering and gathering.

Blocking Transfers

The easiest form of transferring is to do steps S1 and S2 together in a single send function, and do steps R1 and R2 together in a single receive function.

Sender	Receiver
send(bytes)	recv(&bytes_received)

This is the common use case of transferring because it's simple to understand.



Non Blocking Transfers

This allows the sender to do step S1 and S2 as separate steps with intermediate processing between the steps.

Sender sendStart(bytes) // do something useful here sendIsFinished()

```
Receiver recv(&bytes_received)
```

Non blocking transfers are useful if the interconnect allows background transfers (no CPU interaction is needed while the data is being sent). This allows extra processing to occur at the same time the transfer is in progress.

The receiver could also be broken up into two separate functions, but it's typically not useful to know when data is starting to arrive, but instead only when it has completely arrived. Therefore Takyon only has one receive function.

Application Controlled Synchronization

Important: Another characteristic of Takyon achieving best performance, is the transfer needs to be one way. This means that the sender does not implicitly know when the receiver is ready for more data. This puts the responsibility of the synchronization on the application, but **this is a good responsibility**, because it allows the application to choose the best time to do the synchronization, and not waste time doing un-needed synchronization. Some applications are self synchronizing due to round trip communications. If the application does not naturally have round trip synchronization, then it's easy to use Takyon to do a zero byte transfer to explicitly do the synchronization.

INCORRECT METHOD (BAD): The following represents sending without synchronization:

```
Sender

while (1) {
  prepareData(data, bytes)
  send(bytes)
}
```

```
Receiver

while (1) {
  recv(&bytes)
  processData(data, bytes)
}
```

In this case the receiver's data could be overwritten while in the middle of processing, or worse, cause a crash because the interconnect is not designed to handle this.



CORRECT METHOD (**GOOD**): The proper way to guarantee correctness for all interconnects (even shared memory interconnects), is to add explicit synchronization.

```
while (1) {
  prepareData(data, bytes)
  send(bytes)
  recv(NULL) // Wait here
}
```

```
While (1) {
  recv(&bytes)
  processData(data, bytes)
  send(0) // 0 byte message
}
```

The sender will block after sending a message. The receiver sends the synchronization signal after processing the data.

BETTER METHOD: The above is correct for the general case, but if the interconnect is not using shared memory (one buffer shared by sender and receiver) then it can be improved. It would be better to block before sending instead of after sending, allowing data to be collected/generated on the sender without waiting for the receiver to finish processing the previous data.

```
while (1) {
  prepareData(data, bytes)
  recv(NULL) // Wait here
  send(bytes)
}
```

```
Receiver

while (1) {
  send(0) // 0 byte message recv(&bytes)
  processData(data, bytes)
}
```

This is more efficient since the sender and receiver will be processing concurrently.

If the application is using multiple transfer buffers, synchronization might only be needed after all of the buffers have been used up. More on this in the "Multi Buffering" section below.

As you can see, there are many choices of when to use synchronization. This shows why it may be detrimental if Takyon used implicit synchronization with every transfer; most of them may be unnecessary. This would reduce performance, and perturb determinism.

Shared Memory

Some Takyon interconnects support shared memory. This is where the sender and receiver actually point to the same memory locations. When the send() is called, it only needs to send a signal to the receiver no matter how many bytes the message is. It's really just sharing a pointer to a memory address.



Synchronization with Shared Memory

If the interconnect is defined to use shared memory, then that means the sender and receiver are actually pointing to the same buffer (they don't have their own independent buffers). If this is the case, the application will need to do more sophisticated synchronization to know when it is 'safe' to start filling the send side buffer. I.e. it is 'safe' when the receiver is not currently processing memory on the same buffer that the sender is about to fill.

Multi Buffering

Double and triple buffering is a common practice to overlap processing and transfers. A well developed multi-buffered application will minimize idle time, achieving great overall throughput and CPU utilization.

Takyon builds multi-buffering into the core APIs, making it easy for application developers to use multi-buffering in the application. Buffers are independent of each other, so when a transfer is busy on one buffer, the sender side can start filling data on another buffer and the receiver side can process the previous message it received. This is the idea of keeping the Takyon path and the processing cores on both endpoints busy.

Here's an example of multi buffering and how synchronization is used (if not using a shared memory interconnect):

```
Sender

nbufs = 3
buf = 0
while (1) {
  prepareData(data[buf], bytes)
  if (buf==0) recv(buf, NULL)
  send(buf, bytes)
  buf = (buf+1) % nbufs
}
```

```
Receiver

nbufs = 3
buf = 0
while (1) {
  if (buf==0) send(buf, 0)
  recv(buf, &bytes)
  processData(data[buf], bytes)
  but = (buf+1) % nbufs
}
```

In this example, synchronization is only done once for all the buffers. This minimizes the overhead for synchronization without compromising correctness.

This example is a great way to show that if Takyon had implicit synchronization for each transfer, it would degrade performance. This is why Takyon does not do any extra implicit synchronization and leaves it to the application.




Polling and Event Driven

Takyon performance is also defined by the method of checking for transfer progress. When waiting for a call to send() or receive() to complete, there are only two ways to do this:

- **Polling**: This uses CPU-based looping to keep checking if the transfer is complete. There are no context switches, so this is very responsive to the exact moment the transfer is complete. The drawback is that the compute core will not be available to do any other processing while Takyon is constantly checking to see if the transfer is complete. Plus a side effect is that the compute core will draw extra power and increase its temperature.
- Event Driven: This uses an OS-based mechanism to put the thread to sleep while waiting for the underlying communication interconnect to complete the transfer. While the thread is sleeping, the compute core can be busy doing other work. When the transfer is complete, a signal will be sent to the OS to let it know it can wake up the sleeping thread. Knowing when the transfer completed will not be as responsive as polling due to the context switches, but it will free up the compute core to allow other threads and processes to use the core while the communication transfer is in progress.

Bi-Directional Communication and Buffer Sizes

Once a connected Takyon path is established, transfers can be done in either direction. This allows the number of created paths to be minimized. Since the goal is to pre-register memory when the path is created, each side of the path must know the largest message size it can transfer. A decision may be to allow one direction to send large data blocks, and the other direction have no message space at all but be able to send zero byte messages to synchronize transfers. Another decision is to have the same buffer size for both directions.

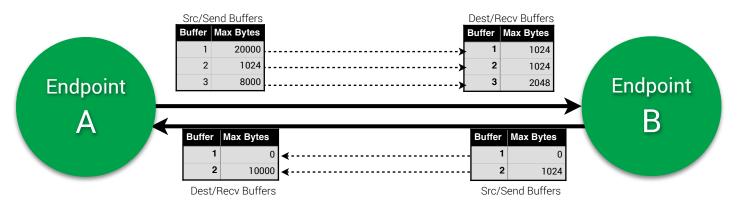

NOTE: This may be unintuitive, but the send/recv buffer pairs do not need to be the same size. This is useful for collective communication like scatter or gather, where the one side of the communication may have a lot more contiguous data than the other side (see Takyon's "scatter_gather" example).



Uni-Directional Communication and Buffer Sizes

Once a connectionless Takyon path is established, transfers can only be done in one direction. Furthermore, the max buffer size may be limited to 64 Kbytes (the typical size of a UDP datagram) or less (the MTU size). This is usually good for things like live streaming.



NOTE: This may be unintuitive, but Takyon can still support multiple buffers on the sender or receiver. This may be useful for organizing the message in some helpful way. The oddness is the remote side will not have any knowledge of how many buffers the other side has, nor the order of the messages arriving on the receiver. (see Takyon's "connectionless" example).

Locality & Interconnects

Takyon is designed to work between any two endpoints (localities).

- Thread to thread in the same process
- Process to process on the same OS
- Process to process between different CPUs
- Application to application

And to work with most any interconnect: threads, shared memory maps, sockets, RDMA, IO devices, etc.

This makes Takyon a truly portable communication package. When a path is created, the application can choose which underlying interconnect is used base on the locality of the end points. In many cases, there will be more than one interconnect to choose from. This gives the application the control to create multiple paths to use different interconnects in different ways.

IO Device Communication

IO Devices are typically one sided (connectionless). An application would typically receive from an input device (but not send to it), and send to an output device (but not receive from it). For example, this could facilitate communication to and from an FPGA, Lidar, Camera, etc. Takyon does not look at IO devices differently than any other typical point to point connectionless communication.



Shared Memory, IO Device Memory, GPU Memory

Takyon buffers are not restricted to CPU ram, but can also use shared, IO device, or GPU memory (e.g. CUDA). It's up to the Takyon implementer to add the support for any particular interconnect.

Scalability & Dataflow

Communication should be scalable for any size system. It does mean there needs to be a discipline for how to design the scalability. Developers need to spend time mapping an application to a system, with a specific number of processors, cores, interconnects, memory sizes, IO devices, etc. If the developer hardcodes the application to a particular system, then it will make it difficult to migrate to a future system with a different number of resources. Designing an application dataflow could be done at a logical level regardless of the final deployed system. In this way the application can be tested with minimal resources. When dataflow is scaled out, a well designed application should not need any source code modification.

If you have an extremely large system, hundreds of processors, then it would probably not be feasible to have direct communication connections between all processor pairs. For example, if you have a 2D grid of processors, each processor may only need to connect to adjacent processors. If the application needs to send a message to a far away processor, it could use multiple hops to make it to its destination.

Scalability should not be enforced by a communication package, but instead should be enforced by good dataflow design. See the Takyon examples that use the Takyon graph file description: hello_world_graph, barrier, reduce, pipeline, scatter_gather.

Strided Messages

Very few modern interconnects support strided transfers. Even common open-standard interconnects such as Sockets and OFED RDMA don't support strided messages.

A common example of strided data is an array of complex data (pair of real and imaginary values). It may be required by the application to send the real values to one endpoint, and the imaginary values to a different endpoint.

If a communication API supports strided, but the underlying hardware can't, this will result in a significant compromise (mysterious bad performance) with two options (hidden away in the communication API):

- Memory is dynamically allocated to reorganize the data into separate contiguous blocks and then sent down separate paths.
- Each strided block of the message needs to be sent separately; e.g. if each block is 4 bytes, but the message is megabytes, then this results in millions of tiny transfers.

When dealing with strided data, it should be the responsibility of the application, not the communication API, to efficiently handle strided data. Therefor Takyon does not currently support strided transfers.



Where Are the Callbacks?

The concept of a callback is that the application waits for a transfer completion through a registered function that gets called by an event handler in a different thread from the one that started the transfer. Callbacks may seem like they fit well with communication, but if the application does not have an event loop that collects all events, callbacks will be confusing and difficult to manage in a way that is thread-safe for communication. Unlike graphical user interfaces (GUIs) that require an event loop, most lower level communication APIs don't have an event loop concept (i.e. callback functions to notify when a transfer is complete).

A communication API could require an event loop, forcing all communication into a single thread. This would essentially serialize all communication events (send done & recv done events) and may degrade application performance due to the extra context switches.

An alternative could be to have a separate background thread for each created path. A callback would be called from this background thread. But now this requires the application to coordinate between threads and this also adds extra context switches. This is complex enough that it would likely be a feature that is rarely used or not understood correctly. Even if well understood, the extra performance hit may be undesirable.

Due to these complexities for the application developer, Takyon does not have a built-in callback method. That said, this does not preclude the application developer from implementing one of the two callback methods mentioned above. It would just need to be done explicitly by the application instead of being implicit in the Takyon API.

Open Source Extensions; including Collective Communication

Takyon includes some helpful extensions for common functionality in many applications using communication. This includes functions for:

- Current time, sleeping
- Endian testing, endian swapping
- Shared memory management
- Collective communication: barrier, reduce, scatter, gather, and generic layouts. This allows communication to be written in a similar way to MPI's collective functions.
- · Graph file to describe scalable dataflow

Theses functions are provided as open source code to make it easy to modify as needed. See the 'Takyon/ extensions/takyon_extensions.h' header file for the set of available functions. The source code is in the same folder.

Many of the Takyon examples make use of the open source extensions.



Core API Reference

takyonCreate

TakyonPath *takyonCreate(TakyonPathAttributes *attributes)

Then create the Takyon path's endpoint. If the other endpoint is also a Takyon endpoint, then takyonCreate() will also need to be called for that endpoint.

For connected interconnects, this creates a reliable communication path between the two endpoints. Messages will arrive in the same order as they are sent, also message won't be dropped.

For connectionless interconnects, the other endpoint does not need to exists for this endpoint to be created. Also, messages may be dropped before making it to the receiver, and order is not guaranteed.

The properties of the path are defined by the attributes, and must be set at time of creation. They cannot be changed once the path is created. If different behavior is needed over time, then create multiple paths to handle the different behaviors.

The attributes are passed in from a pointer to a TakyonPathAttributes structure (allocated by the application before this call is made), which contains the following fields:

Field	Description
char interconnect[TAKYON_MAX_INTERCONN ECT_CHARS]	This defines the interconnect to use for this path, a unique identifier to distinguish this path from all other paths using the same interconnect, and any optional parameters supported by the interconnect. See the implementation's release notes for a list of supported interconnect names, and the set of supported parameters. For connected interconnects, both end points must use the same interconnect name but the interconnect parameters on each endpoint are implementation specific. The size, in bytes, of the <i>interconnect</i> field is TAKYON_MAX_INTERCONNECT_CHARS, which needs to include the null terminating character of the atring
bool is_endpointA	terminating character of the string. One of the endpoints must be designated as endpoint A by setting this field to 'true'. If
boot is_enapointA	One of the endpoints must be designated as endpoint A by setting this field to 'true'. If set to 'false', then it's endpoint B. For connected interconnects, there is no functional difference after the connection is made, and either end point can do transfers.
bool is_polling	This sets if the communication path is event driven or polling when determining if a transfer is complete. Set to 'true' to use polling, or set to 'false' to use event driven. Some interconnects may require both end points to have the same value.
bool abort_on_failure	 This determines if the application should abort if a failure occurs. Set to 'true' if the application will call abort() if a failure is detected. Before aborting, a helpful error message will be printed to stderr. Using this mode allows the application to avoid the need for error checking the return values of the Takyon functions, resulting in cleaner source code. If set to 'false', then the Takyon functions will return even if a failure occurs. All returned values need to be checked to have a reliable application.



Field	Description
uint64_t verbosity	 There may be a need to see what's going on within the Takyon functions. This will allow the application to print different types of information to stdout/stderr. If set to 0, the takyon functions do not print any information. Otherwise, do a bitwise or-ing of the following values: TAKYON_VERBOSITY_NONE - A convenience to show there is no verbosity, this value is 0, but if masked with other values, then this will be ignored. TAKYON_VERBOSITY_ERRORS - Print (to stderr) details of what caused an error. If this is not used then errors will not get printed out unless 'abort_on_failure' is set to 'true'. TAKYON_VERBOSITY_CREATE_DESTROY - Print (to stdout) basic high level information during the create and destroy functions. TAKYON_VERBOSITY_CREATE_DESTROY_MORE - Print (to stdout) extra details during the create and destroy functions. TAKYON_VERBOSITY_SEND_RECV - Print (to stdout) basic high level details during the send and receive functions. TAKYON_VERBOSITY_SEND_RECV_MORE - Print (to stdout) extra details during the send and receive functions.
double path_create_timeout	The timeout period, in seconds, to wait for takyonCreate() to complete creating the endpoint. If the endpoint can't be created within the timeout period, then the create function returns NULL.
double send_start_timeout	The timeout period, in seconds, to wait for takyonSend() to start transfer of the message. Some interconnects are guaranteed to get started without ever waiting and will ignore this timeout, but some interconnects may have to wait for the resource to become available. If takyonSend() times out using this timeout, this is not an error, and sending can be attempted again later.
double send_finish_timeout	The timeout period, in seconds, to wait for a send, that already started transferring the message, to complete. If the send is blocking, then it will be used by takyonSend(). If the send is non blocking then this timeout will be used by takyonSendlsFinished(). If this timeout occurs while in takyonSend(), this is considered an error, and the path must be destroyed. If the send is blocking, then this timeout should be greater than zero to provide a reasonable amount of time for the already started transfer to complete. Only interconnects that can detect partial transfers will support this timeout.
double recv_start_timeout	The timeout period, in seconds, to wait for takyonRecv() to start receiving a message. If takyonRecv() times out using this timeout, this is not an error since no message has started arriving, and receiving can be attempted again later.
double recv_finish_timeout	The timeout period, in seconds, to wait for takyonRecv() to receive a complete message that is in the process of being received. If the timeout occurs, then this is considered an error, and the path must be destroyed. This timeout should be greater than zero to provide a reasonable amount of time for the already started transfer to complete.
double path_destroy_timeout	The timeout period, in seconds, to wait for takyonDestroy() to gracefully destroy the endpoint, which may include a coordination with the remote endpoint for connected interconnects. If the connection cannot be gracefully shutdown in the timeout period, then the connection is forcibly destroyed and this is considered an error, and in this case takyonDestroy() will return an error string instead of NULL.



Field	Description
TakyonCompletionMethod send_completion_method	Determines if takyonSend() is blocking or non blocking. Select one of the following values: • TAKYON_BLOCKING - Wait for takyonSend() to complete the send. • TAKYON_USE_IS_SEND_FINISHED - Start the transfer using takyonSend(), then use takyonIsSendFinished() to know when the send is complete. Interconnects that don't support non-blocking will complete the transfer before takyonSend() returns, but takyonSendTest() will still need to be called to complete the transaction.
TakyonCompletionMethod recv_completion_method	Currently, this must be set to TAKYON_BLOCKING, which means takyonRecv() will block waiting for the transfer to complete. To avoid blocking if no message arrives, use a 'recv_start_timeout' of zero or greater.
int nbufs_AtoB	Defines the number of transfer buffers from A (the source) to B (the destination). For connected interconnects, this value must be 1 or greater and both endpoints must use the same value.
int nbufs_BtoA	Defines the number of transfer buffers from B (the source) to A (the destination). For connected interconnects, this value must be 1 or greater and both endpoints must use the same value.
uint64_t *sender_max_bytes_list	This is a pointer to the endpoint's list of send buffer byte sizes where the size of the list must be <i>nbufs_AtoB</i> items if it's endpoint A or <i>nbufs_BtoA</i> items if it's endpoint B. The sender and receiver can have different sizes for the same buffer. An item in the list can be zero, allowing for zero byte messages to be sent.
uint64_t *recver_max_bytes_list	This is a pointer to the endpoint's list of receive buffer byte sizes where the size of the list must be <code>nbufs_BtoA</code> items if it's endpoint A or <code>nbufs_AtoB</code> items if it's endpoint B. The sender and receiver can have different sizes for the same buffer. An item in the list can be zero, allowing for zero byte messages to be sent.
size_t *sender_addr_list	This is a pointer to a list of memory addresses where the size of the list must be <code>nbufs_AtoB</code> if this is endpoint A or <code>nbufs_BtoA</code> if this is endpoint B. If an item in the list is set to 0, then Takyon will allocate the appropriate amount of memory aligned to a page boundary. If the corresponding byte size is 0, then no memory is allocated, but this will still allow Takyon to do zero byte transfers. If memory was allocated by Takyon, it will automatically free this memory when the path is destroyed. If an item in the list is not 0, then it must be a valid memory address (casted to a <code>size_f</code>) pointing to the appropriate memory address containing the number of bytes defined by <code>sender_max_bytes_list</code> . Some interconnects may have additional restrictions or requirements. Read the implementation notes to know the details.



Field	Description
size_t *recver_addr_list	This is a pointer to a list of memory addresses where the size of the list must be nbufs_BtoA if this is endpoint A or nbufs_AtoB if this is endpoint B.
	If an item in the list is set to 0, then Takyon will allocate the appropriate amount of memory aligned to a page boundary. If the corresponding byte size is 0, then no memory is allocated, but this will still allow Takyon to do zero byte transfers. If memory was allocated by Takyon, it will automatically free this memory when the path is destroyed.
	If an item in the list is not 0, then it must be a valid memory address (casted to a size_t) pointing to the appropriate memory address containing the number of bytes defined by recver_max_bytes_list.
	Some interconnects may have additional restrictions or requirements. Read the implementation notes to know the restrictions.
char *error_message	This fields is used to the report errors in a human readable way, which includes the call stack with file and line numbers within the Takyon core source code. This field should not be set by the application, because takyonCreate will allocate the memory for this field. This field is used to report errors if they occur with takyonCreate(), takyonSend(), takyonIsSendFinished(), or takyonRecv(). If an error occurs with takyonDestroy() the string is returned directly and must be freed by the application. Also, if the error occurs with takyonCreate(), then the attributes.error_message field must be freed if it's not NULL. In all other cases, this memory should not be freed.

If the path was successfully created, then a pointer to a TakyonPath structure is returned. This structure is opaque except for the *path->attrs* field. The attrs field allows the path to know all of it properties, including any memory buffers that Takyon allocated, which are located in the lists *sender_addr_list[]* and *recver_addr_list[]*.

If the path was not created due to an error or was not created within the timeout period *attributes*
>path_create_timeout, then one of the following will occur:

- If attributes->abort_on_failure is false, then NULL is returned, and an error message is stored in attributes->error_message if this field is not NULL, which means the application must free this field.
- If attributes->abort_on_failure is true, then an error message is printed to stderr, and then the process will call abort().



takyonSend

bool takyonSend(TakyonPath *path, int buffer_index, uint64_t bytes, uint64_t src_offset, uint64_t dest offset, bool *timed out ret)

Starts a message transfer.

The transfer will be blocking if the path was created using TAKYON_BLOCKING for send_completion_method.

If the path was created using TAKYON_USE_IS_SEND_FINISHED for *send_completion_method* then *takyonIsSendFinished()* will need to be called to complete the transfer, even if the underlying interconnect does not support non-blocking.

NOTE: Even if the sender completes the transfer, the receiver may still not have all the data, as some of it may still be in the network on its way to the receiver.

buffer_index (starting at 0) represents which memory buffer address in path->attrs.sender_addr_list[] that will be used as the source of the transfer.

bytes is the number of bytes that will be transferred. This must be between 0 and the max size of the buffer bytes.

src_offset is the offset from the start of the source's memory block where the transfer will start from. This must be between 0 and the max size of the buffer.

dest_offset is the offset from the start of the destination's memory block where the transferred data will start from. This must be between 0 and the max size of the buffer.

timed_out_ret is a pointer to a bool (supplied by the application) or NULL if path->attrs.send_start_timeout and path->attrs.send_finish_timeout are both set to TAKYON_WAIT_FOREVER. If not NULL, then after the call completes, then the bool variable will be set to true if the transfer timed out, otherwise it will be false.

If the function succeeds, then it will return true, and *timed_out_ret, if not NULL, will be set to false.

If the function times out before the transfer has started, then it will return true, and *timed_out_ret will be set to true. In this case, this call was a no-op; the communication path has not yet done anything, so it's still a valid path, and this call can be made again on the same buffer.

If the function fails, then the connection is in a bad state, and one of the following will occur:

- If path->attributes.abort_on_failure is false, then false is returned, and an error message is stored in path->attributes.error_message. The path is in a bad state and needs to be destroyed with takyonDestroy()
- If path->attributes.abort_on_failure is true, then an error message is printed to stderr, and then the process will call abort().



takyonSendTest

bool takyonSendTest(TakyonPath *path, int buffer_index, bool *timed_out_ret)

This blocks until a previously started non blocking send complete's the transfer.

This function should only be called if the path was set up using TAKYON_USE_IS_SEND_FINISHED for send_completion_method.

buffer_index needs to match the buffer index set in the takyonSend() call that started the transfer.

timed_out_ret is a pointer to a bool (supplied by the application) or NULL if path->attrs.send_finish_timeout is set to TAKYON_WAIT_FOREVER. If not NULL, then after the call completes, then the bool variable will be set to true if the transfer timed out, otherwise it will be false.

If the function succeeds, then it will return true, and *timed_out_ret, if not NULL, will be set to false.

If the function times out, then it will return true, and *timed_out_ret will be set to true. This indicates that the started transfer is not yet complete and this call can be made again later to see if it's complete then. The application may also decide that too much time elapsed and that the path is no longer responsive enough to be considered valid, and can take the appropriate action (application defined fault tolerance).

If the function fails, then the connection is in a bad state, and one of the following will occur:

- If path->attributes.abort_on_failure is false, then false is returned, and an error message is stored in path->attributes.error_message. The path is in a bad state and needs to be destroyed with takyonDestroy()
- If path->attributes.abort_on_failure is true, then an error message is printed to stderr, and then the process will call abort().



takyonRecv

bool takyonRecv(TakyonPath *path, int buffer_index, uint64_t *bytes_ret, uint64_t *offset_ret, bool
*timed out ret)

This blocks until the message arrives from the remote endpoint.

This call does not need to occur before the remote endpoint starts sending. This is because the sender already has a handle to the destination memory, and in general can complete the transfer without any explicit interaction from the receiver. If the data has already arrived, then this call will not block at all.

NOTE: With connected stream interconnects, like sockets, the takyonSend() may block until this function is called because a send-side socket needs to coordinate with the recv-side socket to complete large transfers.

buffer_index represents which memory buffer address in path->attrs.recver_addr_list[] that will be used to hold the received data. For connected interconnects, this must match the buffer index set by the call to takyonSend().

bytes_ret is the number of bytes that was received if the transfer completes successfully. If the send side set bytes to 0, then this will also be zero, which likely means it was just used for synchronization/notification. This can be set to NULL if the receiver already knows how many bytes it will receive.

offset_ret is the offset of the received data from the start of the destination's memory buffer address. This can be set to NULL if the receiver already knows the offset.

timed_out_ret is a pointer to a bool (supplied by the application) or NULL if path->attrs.recv_start_timeout and path->attrs.recv_finish_timeout are set to TAKYON_WAIT_FOREVER. If not NULL, then after the call completes, then the bool variable will be set to true if the transfer timed out, otherwise it will be false.

If the function succeeds, then it will return true, and *timed_out_ret, if not NULL, will be set to false.

If the function times out before a message starts to arrive, then it will return true, and *timed_out_ret will be set to true. This can be considered a no-op, and this call can be made again later on the same buffer index. The application may also decide that too much time elapsed and that the path is no longer responsive enough to be considered valid, and can take the appropriate action (application defined fault tolerance).

If the function fails, then the connection is in a bad state, and one of the following will occur:

- If path->attributes.abort_on_failure is false, then false is returned, and an error message is stored in path->attributes.error_message. The path is in a bad state and needs to be destroyed with takyonDestroy()
- If path->attributes.abort_on_failure is true, then an error message is printed to stderr, and then the process will call abort().



takyonDestroy

char *takyonDestroy(TakyonPath **path_ret)

This will close the path for this endpoint and free any resources that were allocated by *takyonCreate()*. If Takyon allocated any data buffers for this path when *takyonCreate()* was called, then those buffers will be freed.

For connected interconnects, if the path is still in a good state, this will block until both endpoints coordinate a proper disconnect or a timeout occurs as defined by *path->attrs.path_destroy_timeout* value. This coordinated shutdown allows any pending data on the transport to get flushed to the destination. If the path is in a bad state due to a previous error, then the connection may be closed without any coordination with the remote end point.

Once this endpoint is destroyed, a new path with the same unique identification can be created again.

If the function fails, then one of the following will occur:

- If path->attributes.abort_on_failure is false, then an error message is returned. When this error string is no longer needed by the application, then it needs to be freed by the application.
- If path->attributes.abort_on_failure is true, then an error message is printed to stderr, and then the process will call abort().



Helpful Programming Tips

Filling in the Path Attributes

There's a lot of attributes to fill in to create a path. To simplify it down to one line of code, just use the Takyon extension function:

```
takyonAllocAttributes()
```

This function comes from the C file:

Takyon/extensions/takyon attributes.c

Setting the Interconnects and its Optional Properties

Each path needs to have a unique ID for each type of interconnect used. For IP address based interconnects, this will be an IP address and port number or if using ephemeral port numbers then an IP address and a unique ID is needed. For most other interconnects, it will just be an ID. Here are some examples:

```
InterThreadMemcpy -ID=1
InterThreadMemcpy -ID=1
InterProcessMemcpy -ID=1
InterProcessMemcpy -ID=1
InterProcessSocket -ID=1
InterProcessSocket -ID=1
InterProcessSocket -ID=1
# Uses ephemeral port number (assigned by system)
Socket -client -IP=127.0.0.1 -ID=1
Socket -server -IP=127.0.0.1 -ID=1
# Uses specific port number (assigned by user)
Socket -client -IP=127.0.0.1 -port=12345
Socket -server -IP=127.0.0.1 -port=12345 -reuse
```

Since Takyon uses a text string to define the interconnect and its properties, it makes it very flexible, and can work with many different variations.



Buffer Allocations

Unless there are some specific needs for buffer memory, just let Takyon create the memory. This reduces the complexity of the application source code. This is achieved by using zero in all the elements of the send and recv addresses passed into the create() call. For example:

```
size_t sender_addr_list[3] = { 0, 0, 0 };
attrs.sender_addr_list = sender_addr_list;
size_t recver_addr_list[2] = { 0, 0 };
attrs.recver addr list = recver addr list;
```

If multiple Takyon paths will be sending data to a common memory buffer (e.g. a gather operation), or sending data from a common memory buffer (e.g. a scatter operation) then the application needs to allocate a memory block prior to creating the paths, and provided the appropriate memory address when setting up the address lists in the attributes structure.

Getting Helpful Print Messages

During development, make sure error reporting is turned on:

```
attributes.verbosity = TAKYON VERBOSITY ERRORS;
```

If errors or odd behavior are occurring, then turn on messages for each call to Takyon:

```
attributes.verbosity = TAKYON_VERBOSITY_ERRORS | TAKYON_VERBOSITY_CREATE_DESTROY |
TAKYON_VERBOSITY_SEND_RECV;
```

If tracking down difficult errors, it may be useful to turn on more details:

```
attributes.verbosity = TAKYON_VERBOSITY_ERRORS | TAKYON_VERBOSITY_CREATE_DESTROY | TAKYON_VERBOSITY_SEND_RECV | TAKYON_VERBOSITY_CREATE_DESTROY_DETAILS | TAKYON_VERBOSITY_SEND_RECV_DETAILS;
```

When development is complete, but you still want error messages, use:

```
attributes.verbosity = TAKYON_VERBOSITY_ERRORS;
```

If your application is designed to handle communication failures in a graceful way, you may want to turn off error messages, so in that case use:

```
attributes.verbosity = TAKYON VERBOSITY NONE;
```

Handling Errors

If the application is not designed for handling communication errors, and you want to avoid error checking, then use the following:

```
attributes.abort on failure = true;
```

In this case, the application will just abort if it detects an error, and a helpful error message will be printed so you know what happened.

If you need to handle communication errors without aborting, then you need to set the following:

```
attributes.abort on failure = false;
```

All return values from the Takyon APIs will need to be checked.

If exit() is preferred over aborting, then the application can get the status of each Takyon call and if an error occurs call exit(<n>) with the appropriate value for <n>.



Takyon Open Source Extensions

The Takyon extension functions described in this section are provided as open source to be compiled and linked into the application as needed. These convenience APIs are provided as source code instead of libraries in order to let the developers duplicate and modify the source to best fit the application needs. It also has the added benefit of simplifying certification if needed.

An application using the Takyon extension functions needs to:

- Include "takyon_extensions.h", located in "Takyon/extensions/".
- · Compile and link the appropriate extension C files, located in "Takyon/extensions/".

Endian (takyon_endian.c)

Helpful functions if the endian of all endpoints in the distributed application is not the same.

takyonEndianIsBig

bool takyonEndianIsBig()

Returns true if this endpoint is big endian, otherwise returns false indicating little endian.

takyonEndianSwap2Byte

```
void takyonEndianSwap2Byte(void *data, uint64_t num_elements)
```

Do byte swapping on a list of 16 bit values pointed to *data*. The number of elements in the list is *num_elements*. This will endian swap all 2 byte datatypes; e.g. short, unsigned short.

takyonEndianSwap4Byte

```
void takyonEndianSwap4Byte(void *data, uint64_t num_elements)
```

Do byte swapping on a list of 32 bit values pointed to *data*. The number of elements in the list is *num_elements*. This will endian swap all 4 byte datatypes; e.g. float, int, unsigned int.

takyonEndianSwap8Byte

```
void takyonEndianSwap8Byte(void *data, uint64_t num_elements)
```

Do byte swapping on a list of 64 bit values pointed to *data*. The number of elements in the list is *num_elements*. This will endian swap all 8 byte datatypes; e.g. double, long long, unsigned long long.



Time (takyon_time.c)

Helpful time related functions.

takyonSleep

```
void takyonSleep(double seconds)
```

Put the thread to sleep for the specified amount of time.

takyonTime

```
double takyonTime()
```

Returns the current number of seconds that have elapsed since the very first call to takyonTime().

Named Memory Allocation (takyon_mmap.c)

Functions to allocate named memory that can be accessed by remote processes in the same OS.

If inter-process memory map interconnects are used, then it may be helpful to have the application define one or more named memory blocks that can be used by the Takyon paths.

This may be especially useful if a gather type collective is used by multiple communication paths where one or more of the paths is an inter-process memory map interconnect, and the gathered data needs to be in one contiguous memory block.

takyonMmapAlloc

```
void takyonMmapAlloc(const char *map_name, uint64_t bytes, void **addr_ret, TakyonMmapHandle
*mmap handle ret)
```

Create a named memory block with the name *name*, and with *bytes* bytes. The address is returned in *addr_ret*, and the memory map handle is returned in *mmap_handle_ret*. If the memory map already exists, it will be freed and re-allocated.

takyonMmapFree

void takyonMmapFree(TakyonMmapHandle mmap_handle)

Frees the named memory block previously allocated by takyonMmapAlloc().



Path Attributes (takyon_attributes.c)

Simplify setting up the attributes for a Takyon path. This is not an all-encapsulating function to handle all path attribute variations, but if does handle simple symmetric paths.

takyonAllocAttributes

TakyonPathAttributes takyonAllocAttributes(bool is_endpointA, bool is_polling, int nbufs_AtoB, int
nbufs_BtoA, uint64_t bytes, double timeout, const char *interconnect)

This fills in the attributes with the specified values. Up to four lists (sender_max_bytes_list, recver_max_bytes_list, sender_addr_list, and recver_addr_list) are allocated based on the number of buffers. The address lists are set to 0 which means Takyon will allocate the buffer memory.

After this call, the attribute structure can still be modified. For example:

- Change an address value from 0 to some address value that the application already pre-allocated.
- Change one or more of the timeout values.

takyonFreeAttributes

void takyonFreeAttributes(TakyonPathAttributes attrs)

This will free any of the lists in the attribute structure that are not NULL.



Collective Groups (takyon_collective.c)

Organize previously created Takyon paths into collective groups. If you want Takyon to also create the paths at application startup, then use the graph description extension functions (see below in the next sub section).

The typical types of collective calls are:

- Barrier: a collective used for synchronization.
- Scatter: one source sends data to many destinations. Data can be unique for each destination.
- Gather: multiple sources send to one destination.
- One to One: a set of paths organized in a way that does not include any scatters or gathers. Useful for single lane pipelining, parallel transfers, mesh transfers, toroid transfers, etc.
- All to All (not yet supported): a collection of scatter groups and gather groups working together to move data in an organized way, such as a corner turn.
- Reduce: a collective that combines data from all graph nodes into a single node with a reduced answer, where the application supplies the reduction function, such as add, min, max, etc.

Barrier functions:

takyonBarrierInit

```
TakyonCollectiveBarrier *takyonBarrierInit(int nchildren, TakyonPath *parent_path, TakyonPath
**child path list)
```

Creates a tree based barrier where each thread in the tree can have any number of children. *nchildren* represents the number of paths accessible from the calling thread, and *child_list* contains the paths. *parent_path* is the path that communicates to the parent thread, which is NULL if this thread is the top thread in the tree. See the 'barrier' example to see how it can be constructed.

takyonBarrierRun

```
void takyonBarrierRun(TakyonCollectiveBarrier *collective, int buffer)
```

Runs the barrier algorithm. The barrier is run as a tree, and uses zero bytes messages. To have different barriers using the same paths, make sure the paths have multiple buffers, where each buffer is a different barrier. The tree algorithms is processed depth first starting from the root of the tree. Once all tree nodes have entered the barrier, then the tree is release from the barrier in the opposite depth first pattern.

takyonBarrierFinalize

```
void takyonBarrierFinalize(TakyonCollectiveBarrier *collective)
```

Frees the collective structure and the child list, but does not destroy any of the Takyon paths.



Reduce functions:

takyonReduceInit

```
TakyonCollectiveReduce *takyonReduceInit(int nchildren, TakyonPath *parent_path, TakyonPath
**child path list)
```

Creates a tree based barrier where each thread in the tree can have any number of children. *nchildren* represents the number of paths accessible from the calling thread, and *child_list* contains the paths. *parent_path* is the path that communicates to the parent thread, which is NULL if this thread is the top thread in the tree. See the 'reduce' example to see how it can be constructed.

takyonReduceRoot

```
void takyonReduceRoot(TakyonCollectiveReduce *collective, int buffer, uint64_t nelements, uint64_t
bytes per elem, void(*reduce function)(uint64 t nelements, void *a, void *b), void *data, bool scatter result)
```

Runs the reduce algorithm. The reduce is run as a tree, and starts from the bottom of the tree. The data is reduced and passed up the tree until it reaches the top thread. The application defines the reduce operation. This function should only be called by the root thread (the top of the tree). If *scatter_result* is true, then the reduction results are passed back down the tree so all threads in the tree have the reduction result.

takyonReduceChild

```
void takyonReduceChild(TakyonCollectiveReduce *collective, int buffer, uint64_t nelements, uint64_t
bytes_per_elem, void(*reduce_function)(uint64_t nelements,void *a,void *b), bool scatter_result)
```

Runs the reduce algorithm. The reduce is run as a tree, and starts from the bottom of the tree. The data is reduced and passed up the tree until it reaches the top thread. The application defines the reduce operation. This function should be called by all the reduction threads except the root thread (the top of the tree). If scatter_result is true, then the reduction results are passed back down the tree so all threads in the tree have the reduction result.

takyonReduceFinalize

```
void takyonReduceFinalize(TakyonCollectiveReduce *collective)
```

Frees the collective structure and child list, but does not destroy any of the Takyon paths.



One2One functions:

takyonOne2OneInit

```
TakyonCollectiveOne2One *takyonOne2OneInit(int npaths, int num_src_paths, int num_dest_paths, TakyonPath
**src_path_list, TakyonPath **dest_path_list)
```

Defines a set of paths that are organized in any fashion. *npaths* defines the total number of paths in the collective. *num_src_paths* defines the number of source side paths used by the calling thread, and the paths are defined in the list *src_path_list*. *num_dest_paths* defines the number of destination side paths used by the calling thread, and the paths are defined in the list *dest_path_list*.

takyonOne2OneFinalize

void takyonOne2OneFinalize(TakyonCollectiveOne2One *collective)

Frees the collective structure and the source and destination lists, but does not destroy any of the Takyon paths.



Scatter functions:

takyonScatterSrcInit

```
TakyonScatterSrc *takyonScatterSrcInit(int npaths, TakyonPath **path_list)
```

Defines a set of *npaths* source paths, defined by *path_list*, that are associated with the source side of the scatter collective. This function duplicates the list, so the input list can be discarded after the call. All Takyon paths defined in the list must be created before making this call.

takyonScatterDestInit

```
TakyonScatterDest *takyonScatterDestInit(int npaths, int path_index, TakyonPath *path)
```

Defines one destination of the scatter. This must be called for all scatter destination. The number of paths in the scatter collective is set in *npaths*. The path for this destination is defined by *path*. The argument *path_index* defines the associated source path index in the *path_list* defined by the call to *takyonScatterSrcInit()*. The Takyon path defined by *path* must be created before making this call.

takyonScatterSend

```
void takyonScatterSend(TakyonScatterSrc *collective, int buffer, uint64_t *nbytes_list, uint64_t *soffset_list, uint64_t *doffset_list)
```

Do a scatter send on the collective defined by *takyonScatterSrcInit()*. The data from each path's buffer index *buffer* will be sent. Each path has an independent number of bytes, source offset, and destination offset. The size of the three lists is *collective->npaths*, which also defines the number of scatter destinations.

takyonScatterRecv

```
void takyonScatterRecv(TakyonScatterDest *collective, int buffer, uint64_t *nbytes_ret, uint64_t
*offset ret)
```

Do a scatter receive on the collective defined by *takyonScatterDestInit*(). This function must be called by each destination in the scatter group. The data will arrive in the path's buffer index *buffer* with the number of bytes as pointed to by *nbytes_ret, and with an offset as pointed to by *offset_ret.

takyonScatterSrcFinalize

```
void takyonScatterSrcFinalize(TakyonScatterSrc *collective)
```

Frees the collective structure and the path list, but does not destroy any of the Takyon paths.

takyonScatterDestFinalize

```
void takyonScatterDestFinalize(TakyonScatterDest *collective)
```

Frees the collective structure, but does not destroy the Takyon path.



Gather functions:

takyonGatherSrcInit

```
TakyonGatherSrc *takyonGatherSrcInit(int npaths, int path_index, TakyonPath *path)
```

Defines one source of the gather. This must be called for all gather sources. The number of paths in the gather collective is set in *npaths*. The path for this destination is defined by *path*. The argument *path_index* defines the associated destination path index in the *path_list* defined by the call to *takyonGatherDestInit*(). The Takyon path defined by *path* must be created before making this call.

takyonGatherDestInit

```
TakyonGatherDest *takyonGatherDestInit(int npaths, TakyonPath **path_list)
```

Defines a set of *npaths* destination paths, defined by *path_list*, that are associated with the destination side of the gather collective. This function duplicates the list, so the input list can be discarded after the call. All Takyon paths defined in the list must be created before making this call.

takyonGatherSend

```
void takyonGatherSend(TakyonGatherSrc *collective, int buffer, uint64_t nbytes, uint64_t soffset, uint64_t
doffset)
```

Do a gather send on the collective defined by takyonGatherSrcInit(). This function must be called by each sources in the gather group. The data from the path's buffer index buffer will be sent, where the number of bytes is defined by nbytes, the source offset is soffset, and the destination offset is doffset.

takyonGatherRecv

```
void takyonGatherRecv(TakyonGatherDest *collective, int buffer, uint64_t *nbytes_list_ret, uint64_t
*offset list ret)
```

Do a gather receive on the collective defined by *takyonGatherDestInit()*. The data will arrive in each path's buffer indexed by *buffer*. Each path has an independent number of received bytes and offset, as defined by the two lists *nbytes_list_ret* and *offset_list_ret*. The size of the two lists is *collective->npaths*, which also defines the number of gather sources.

takyonGatherSrcFinalize

```
void takyonGatherSrcFinalize(TakyonGatherSrc *collective)
```

Frees the collective structure, but does not destroy the Takyon path.

takyonGatherDestFinalize


```
void takyonGatherDestFinalize(TakyonGatherDest *collective)
```

Frees the collective structure and the path list, but does not destroy any of the Takyon paths.



Graph Description 'Dataflow Configuration' Files (takyon_graph.c)

A "graph" in the communication field is a set of nodes with connections between the nodes. With a Takyon graph description file, nodes really represent threads in the Takyon world, and connections represent Takyon paths. Here's an example diagram:

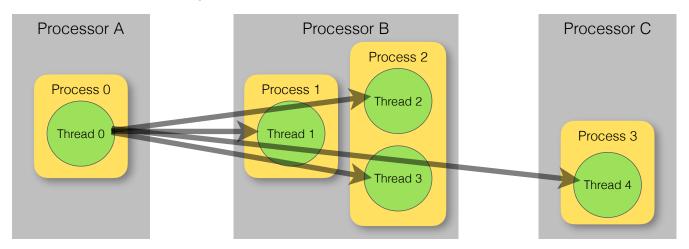

The following Takyon graph description functions are helpful for creating a scalable application with collective communications. The goal is to make Takyon similar to MPI, in that it's easy to get an application up and running across multiple processes and threads, where one executable needs to be run per defined process (equivalent to an MPI rank), which in turn has one or more threads. The primary differentiator from MPI is that this graph description will provide explicit control over the communication paths, and the number of threads for process. This allows for a very flexible configuration of paths in the application, for example:

- Use the same paths for different collective groups (scatter and gather), or use different paths for each collective group.
- Allow multiple paths between the same endpoints but with different performance properties (fast path for low latency commands, slow path for logging data)
- Use a different interconnect for each path (RDMA, TCP sockets, etc).
- Use a different number of buffers for each path (single buffer, double buffer, etc).

Explicitly defining path attributes can make it much easier to fine tune the resources and performance of a real-time application on an embedded HPC application.

To see examples of how to use the graph functionality, review the included examples: hello_world_graph, barrier, reduce, pipeline, and scatter_gather.

The graph description is defined in a text file that can be loaded and interpreted when the application starts. A typical application would be run like so:

> application cess_id> <graph_description_file>

The cation. The cationcation. The cation. The cation. The <



Graph File Format

The file format is as follows:

```
Groups
                                             All section headers must be defined.
Group: <name>
  Instances: <integer >= 1>
                                             The following sections must include one or more items: Groups, Processes,
                                             Paths
Processes
Process: <integer_ID>
  GroupIDs: <group name>[<index>] ...
                                             The 'Defaults' section is a convenience to avoid duplicate information across
                                             multiple paths. This section does not need to be specified, but if it is, it does
Buffers
                                             not need to specify all path defaults. Each item in 'Defaults' can be in any
Buffer: <name><buffer index>
  ProcessId: <ID>
                                             order. Each time an item is specified in 'Defaults', it replaces what the
  Where: <app defined name>
                                             previous default was. There can be multiple 'Defaults' specified, which is
 Bytes: <integer >= 1>
                                             helpful if groups of paths have different defaults.
Paths
Defaults
  IsPolling: {true | false}, {true | false}
  AbortOnFailure: {true | false}, {true | false}
  Verbosity: <or'ing of verbosity flags>, <or'ing of verbosity flags>
  PathCreateTimeout: <takyon timeout value>, <takyon timeout value>
  SendStartTimeout: <takyon timeout value>, <takyon timeout value>
  SendFinishTimeout: <takyon timeout value>, <takyon timeout value>
  RecvStartTimeout: <takyon timeout value>, <takyon timeout value>
  RecvFinishTimeout: <takyon timeout value>, <takyon timeout value>
  PathDestroyTimeout: <takyon timeout value>, <takyon timeout value>
  SendCompletionMethod: {TAKYON BLOCKING | TAKYON IS SEND FINISHED}, {TAKYON BLOCKING |
TAKYON IS SEND FINISHED}
  RecvCompletionMethod: TAKYON BLOCKING, TAKYON BLOCKING
  NBufsAtoB: <integer >= 0>, <integer >= 0>
  NBufsBtoA: <integer >= 0>, <integer >= 0>
  SenderMaxBytesList: <space separated list of integers >= 0>, <space separated list of integers >= 0>
  RecverMaxBytesList: <space separated list of integers >= 0>, <space separated list of integers >= 0>
  SenderAddrList: <space separated list of NULL and/or <mem name>:<offset>>, <list of NULL and/or
<mem name>:<offset>>
  RecverAddrList: <space separated list of NULL and/or <mem_name>:<offset>>, <list of NULL and/or
<mem name>:<offset>>
Path: <integer ID>
  Endpoints: <group_name>[<index>], <group_name>[<index>]
  InterconnectA: <interconnect specification>
  InterconnectB: <interconnect specification>
  <other attributes to override defaults>
Collectives
Collective: <name>
  Type: { BARRIER | REDUCE | ONE2ONE | SCATTER | GATHER }
  PathSrcIds: <space separated list of <pathID>:{A|B}>
```

One sided paths (connected and connectionless) can also be defined. When setting a path's "Endpoints:". Just define one of the sides with "-". The corresponding "interconnectA:" or "interconnectB:" will also need to be set to "-". All other parameters for the unused endpoint will be ignored.



Process level graph description functions:

takyonLoadGraphDescription

```
TakyonGraph *takyonLoadGraphDescription(int process_id, const char *filename)
```

Load graph description from a file with *filename*, and store the results in the return data structure. This should be called by all defined processes, where the *process_id* is a logical number defined in the description file. Any memory blocks defined will be allocated by the appropriate process. The application is required to implement the memory allocation functions:

```
void *appAllocateMemory(const char *name, const char *where, uint64_t bytes, void **user_data_ret)
void appFreeMemory(const char *where, void *user data, void *addr)
```

These functions provided the flexibility for the application to allocated from any type of memory; e.g. CPU ram, MMAPs, GPU ram, IO device memory, etc. The argument *name* is used to provided a name with the memory block if needed; e.g. name memory map. The argument *where* is an application defined name, and the application can use a string comparison to determine where the memory should be allocated; e.g. "CPU", "GPU", MMAP". The argument *bytes* is the number of bytes to be allocated. The pointer to user_data_ret allows any memory handle to be passed back via a void *; e.g. named memory map handles need to be later used to free the memory.

After loading the graph description, the application should then create the threads (group instances) defined for this process, and then each thread (group instance) should call *takyonCreateGroupPaths*() to create the Takyon paths associated with the thread (group instance). Note that each group instance has a global ID and an instance ID for the named group that it's in. See the graph based examples for a clear understanding of use.

takyonFreeGraphDescription

```
void takyonFreeGraphDescription(TakyonGraph *graph, int process id)
```

Frees any resources allocated by takyonLoadGraphDescription().

takyonPrintGraph

```
void takyonPrintGraph(TakyonGraph *graph)
```

This prints, to stdout, the basic information of the graph description. It may be helpful display the graph details after loading the graph.



Thread (group instance) level graph description functions:

takyonCreateGroupPaths

```
void takyonCreateGroupPaths(TakyonGraph *graph, int group_id)
```

Create all Takyon paths and collectives associated with this group instance (thread).

takyonDestroyGroupPaths

```
void takyonDestroyGraphPaths(TakyonGraph *graph, int group_id)
```

Destroy all Takyon paths associated with this group instance (thread). The collectives should be explicitly destroyed by the thread when the thread is done with the collective communications. See the graph based examples for a clear understanding of use.

takyonGetGroup

```
TakyonGroup *takyonGetGroup(TakyonGraph *graph, int group_id)
```

Given a group ID *group_id*, returns the group (thread) that it belongs to. The group can then be used to get the name of the group and the number of instances (threads) in the group.

takyonGetGroupInstance

```
int takyonGetGroupInstance(TakyonGraph *graph, int group_id)
```

Given a group ID *group_id*, return the instance index, starting with 0, in the group that it belongs to. Note that *group_id* is global across all groups.



Collective functions (to be called at the thread level after takyonCreateGroupPaths() has been called):

takyonGetBarrier

```
TakyonCollectiveBarrier *takyonGetBarrier(TakyonGraph *graph, const char *name, int group_id)
```

Returns the barrier collective group with the name *name* from the context of the thread with the group ID *group_id*. The parent and children Takyon paths in the returned collective will be valid paths previously created by the thread with the group ID *group_id*. This call must only be made after the thread calls *takyonCreateGroupPaths()*.

takyonGetReduce

```
TakyonCollectiveReduce *takyonGetReduce(TakyonGraph *graph, const char *name, int group_id)
```

Returns the reduce collective group with the name *name* from the context of the thread with the group ID *group_id*. The parent and children Takyon paths in the returned collective will be valid paths previously created by the thread with the group ID *group_id*. This call must only be made after the thread calls takyonCreateGroupPaths().

takyonGetOne2One

```
TakyonCollectiveOne2One *takyonGetOne2One(TakyonGraph *graph, const char *name, int group_id)
```

Returns the one-to-one collective group with the name *name* from the context of the thread with the group ID *group_id*. The source and destination Takyon paths in the returned collective will be valid paths previously created by the thread with the group ID *group_id*. This call must only be made after the thread calls *takyonCreateGroupPaths()*.

takyonGetScatterSrc

```
TakyonScatterSrc *takyonGetScatterSrc(TakyonGraph *graph, const char *name, int group_id)
```

Returns the source side of the scatter collective group with the name *name*. The group ID *group_id* must be the thread that is defined as the source of the scatter. This call must only be made after the thread calls *takyonCreateGroupPaths()*.

takyonGetScatterDest

```
TakyonScatterDest *takyonGetScatterDest(TakyonGraph *graph, const char *name, int group_id)
```

Returns one of the destination endpoints of the scatter collective group with the name *name*. This should be called for all the destinations of the scatter. For each call, the group ID *group_id* must be the thread that is defined as the destination of the scatter. This call must only be made after the thread calls *takyonCreateGroupPaths()*.



takyonGetGatherSrc

```
TakyonGatherSrc *takyonGetGatherSrc(TakyonGraph *graph, const char *name, int group_id)
```

Returns one of the source endpoints of the gather collective group with the name *name*. This should be called for all the sources of the gather. For each call, the group ID *group_id* must be the thread that is defined as the source of the gather. This call must only be made after the thread calls *takyonCreateGroupPaths()*.

takyonGetGatherDest

```
TakyonGatherDest *takyonGetGatherDest(TakyonGraph *graph, const char *name, int group_id)
```

Returns the destination side of the gather collective group with the name *name*. The group ID *group_id* must be the thread that is defined as the destination of the gather. This call must only be made after the thread calls *takyonCreateGroupPaths()*.



Interconnect Porting Kit

Adding a new interconnect (connected, connectionless, IO device, etc) is relatively easy.

- 1. Copy the file Takyon/API/src/takyon_template.c to Takyon/API/src/takyon <interconnect>.c
- 2. Fill in takyon_<interconnect>.c with the proper implementation. Use the existing source files as a reference on how to properly implement the source code.
- 3. If any utilities need to be added to keep the implementation broken up into manageable chunks, just add a utility file Takyon/API/src/utils_<functionality>.c, and add the global functions to either Takyon/API/inc/takyon private.h or to Takyon/API/inc/utils <functionality>.h
- 4. Add the interconnect and any new utility files to the appropriate makefiles in Takyon/API/builds/*/*.
- 5. Run the examples to validate the new implementation.



WE INNOVATE. WE DELIVER. YOU SUCCEED.

Americas: 866-OK-ABACO or +1-866-652-2226 Asia & Oceania: +81-3-5544-3973 Europe,

Africa, & Middle East: +44 (0) 1327-359444

Locate an Abaco Systems Sales Representative visit: abaco.com/products/sales

abaco.com

@AbacoSys

©2018 Abaco Systems. All Rights Reserved. All other brands, names or trademarks are property of their respective owners. Specifications are subject to change without notice.



