

Small OS Design

Version 1.0

July 2023

Presented by

Abdelrhman Walaa

Presented to

Sprints



Table Of Content

1. Project Introduction	4
1.1. System Requirements	4
1.1.1. Hardware Requirements	4
1.1.2. Software Requirements	4
2. High Level Design	5
2.1. System Architecture	5
2.1.1. Definition	5
2.1.2. Layered Architecture	5
2.2. System Modules	5
2.2.1. Definition	6
2.2.2. Design	
2.3. Modules Description	7
2.3.1. DIO Module	7
2.3.2. EXI Module	
2.3.3. TMR Module	7
2.3.4. LED Module	7
2.3.5. BTN Module	7
2.3.6. SOS Module	8
2.4. Drivers' Documentation (APIs)	g
2.4.1 Definition	g
2.4.2. MCAL APIs	g
2.4.2.1. DIO Driver APIs	
2.4.2.2. EXI Driver APIs	11
2.4.2.3. TMR Driver APIs	
2.4.3. HAL APIs	15
2.4.3.1. BTN Driver APIs	
2.4.3.2. LED Driver APIs	15
2.4.4. MWL APIs	16
2.4.4.1. SOS Driver APIs	16
2.4.5. APP APIs	17
2.5. UML	18
2.5.1. Class Diagram	18
2.5.2. State Machine Diagram	19
2.5.3. Sequence Diagram	20
2.5.4. Flowchart Diagram	21
4. Defendance	0.0

Small OS Design

1. Project Introduction

This project involves developing software for a robot to avoid any object in front.

1.1. System Requirements

1.1.1. Hardware Requirements

- 1. ATmega32 microcontroller
- 2. **PBUTTON0** to stop the SOS
- 3. **PBUTTON1** to run the SOS
- 4. **Two LEDs** to be toggled

1.1.2. Software Requirements

- 1. Implement an application that calls SOS module and use 2 tasks
- 2. Task_1: Toggle LED_0 (Every 300 Millisecond)
- 3. **Task_2**: Toggle LED_1 (Every **500** Millisecond)
- 4. Make sure these tasks occur periodically and forever
- 5. When pressing **BUTTON 0**, the SOS will stop
- 6. When pressing **BUTTON 1**, the SOS will run

2. High Level Design

2.1. System Architecture

2.1.1. Definition

Layered Architecture (Figure 1) describes an architectural pattern composed of several separate horizontal layers that function together as a single unit of software.

Microcontroller Abstraction Layer (*MCAL*) is a software module that directly accesses on-chip MCU peripheral modules and external devices that are mapped to memory, and makes the upper software layer independent of the MCU.

Hardware Abstraction Layer (HAL) is a layer of programming that allows a computer OS to interact with a hardware device at a general or abstract level rather than at a detailed hardware level.

Middleware Layer (MWL) is usually the software layer that mediates between application software and the kernel or device driver software.

2.1.2. Layered Architecture

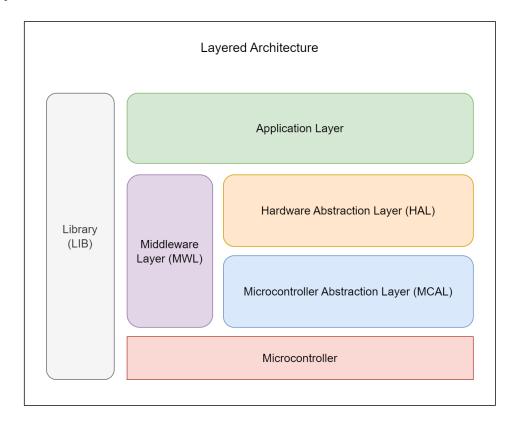


Figure 1. Layered Architecture Design

2.2. System Modules

2.2.1. Definition

A *Module* is a distinct assembly of components that can be easily added, removed or replaced in a larger system. Generally, a *Module* is not functional on its own.

In computer hardware, a *Module* is a component that is designed for easy replacement.

2.2.2. Design

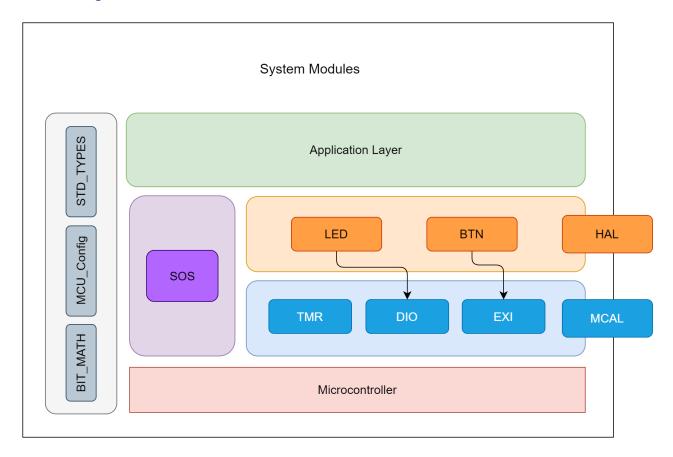


Figure 2. System Modules Design

2.3. Modules Description

2.3.1. DIO Module

The *DIO* (Digital Input/Output) module is responsible for reading input signals from the system's sensors (such as buttons) and driving output signals to the system's actuators (such as *LEDs*). It provides a set of APIs to configure the direction and mode of each pin (input/output, pull-up/down resistor), read the state of an input pin, and set the state of an output pin.

2.3.2. EXI Module

The *EXI* (External Interrupt) module is responsible for detecting external events that require immediate attention from the microcontroller, such as a button press. It provides a set of APIs to enable/disable external interrupts for specific pins, set the interrupt trigger edge (rising/falling/both), and define an interrupt service routine (*ISR*) that will be executed when the interrupt is triggered.

2.3.3. TMR Module

It is a module which is responsible for calculations and configurations of timer zero. It provides an API to start counting till the setted time in ms then stop counting after finishing.

2.3.4. LED Module

LED (Light Emitting Diode) is responsible for controlling the state of the systems' LEDs. It provides a set of APIs to turn off, to turn on, or to toggle the state of each led.

2.3.5. BTN Module

In most of the embedded electronic projects you may want to use a *BTN* (Push Button) switch to give user inputs to the microcontroller. Push Button is basically a small controlling device that is pressed to operate any electrical device.



2.3.6. SOS Module

SOS (Small Operating System) is the design of a small OS with a priority based on Non preemptive scheduler based on time triggered Used to executing multiple tasks at different time intervals by design simple scheduler a scheduler can be viewed as a simple operating system that allows tasks to be called periodically or (less commonly) on a one-shot basis. Also a scheduler can be viewed as a single timer interrupt service routine that is shared between many different tasks. As a result, only one timer needs to be initialized, and any changes to the timing generally require only one function to be altered.

2.4. Drivers' Documentation (APIs)

2.4.1 Definition

An *API* is an *Application Programming Interface* that defines a set of *routines*, *protocols* and *tools* for creating an application. An *API* defines the high level interface of the behavior and capabilities of the component and its inputs and outputs.

An *API* should be created so that it is generic and implementation independent. This allows for the API to be used in multiple applications with changes only to the implementation of the API and not the general interface or behavior.

2.4.2. MCAL APIs

2.4.2.1. DIO Driver APIs

```
Precompile Configurations Snippet:
/* Initial Directions of Port A Pins*/
/* Options: DIO_U8_INITIAL_INPUT
          DIO_U8_INITIAL_OUTPUT
*/
/* PORTA */
#define DIO_U8_PA0_INITIAL_DIRECTION
                                        DIO_U8_INITIAL_INPUT
#define DIO_U8_PA1_INITIAL_DIRECTION
                                        DIO_U8_INITIAL_INPUT
#define DIO_U8_PA7_INITIAL_DIRECTION
                                        DIO_U8_INITIAL_INPUT
/* Initial Values of Port A Pins */
/* Options: DIO_U8_INPUT_FLOATING
            DIO_U8_INPUT_PULLUP_RESISTOR
            DIO_U8_OUTPUT_LOW
            DIO U8 OUTPUT HIGH
/* PORTA */
#define DIO U8 PA0 INITIAL VALUE
                                       DIO U8 INPUT FLOATING
#define DIO_U8_PA1_INITIAL_VALUE
                                       DIO U8 INPUT FLOATING
#define DIO_U8_PA7_INITIAL_VALUE
                                      DIO U8 INPUT FLOATING
```

Linking Configurations Snippet:

There are no Linking Configurations as the defined APIs below could change the DIO peripheral Configurations during the Runtime.

```
Name: DIO_vdInitialization
| Input: void
Output: void
Description: Function to initialize DIO peripheral.
vd DIO vdInitialization (void)
Name: DIO_u8SetPinDirection
| Input: u8 PortId, u8 PinId, and u8 PinDirection
Output: u8 Error or No Error
Description: Function to set Pin direction.
u8 DIO_u8SetPinDirection (u8 Cpy_u8PortId, u8 Cpy_u8PinId, u8
Cpy_u8PinDirection)
Name: DIO_u8SetPinValue
Input: u8 PortId, u8 PinId, and u8 PinValue
Output: u8 Error or No Error
Description: Function to set Pin value.
u8 DIO_u8SetPinValue (u8 Cpy_u8PortId, u8 Cpy_u8PinId, u8 Cpy_u8PinValue)
Name: DIO u8GetPinValue
| Input: u8 PortId, u8 PinId, and Pointer to u8 ReturnedPinValue
Output: u8 Error or No Error
| Description: Function to get Pin value.
u8 DIO_u8GetPinValue (u8 Cpy_u8PortId, u8 Cpy_u8PinId, u8
*Cpy_pu8ReturnedPinValue)
| Name: DIO_u8TogglePinValue
| Input: u8 PortId and u8 PinId
Output: u8 Error or No Error
Description: Function to toggle Pin value.
u8 DIO u8TogglePinValue (u8 Cpy u8PortId, u8 Cpy u8PinId)
```

2.4.2.2. EXI Driver APIs

Precompile and Linking Configurations Snippet:

void(*Cpy_pfINTInterruptAction)(void))

There is no need for Precompile Configurations nor Linking Configurations as the defined APIs below could change the EXI peripheral Configurations during the Runtime.

```
| Name: EXI u8EnablePIE
Input: u8 InterruptId and u8 SenseControl
Output: u8 Error or No Error
Description: Function to enable and configure Peripheral Interrupt Enable (PIE),
              by setting relevant bit for each interrupt in GICR register, then
              configuring Sense Control in MCUCR (case interrupt 0 or 1) or MCUCSR
              (case interrupt 2) registers.
u8 EXI u8EnablePIE (u8 Cpy u8InterruptId, u8 Cpy u8SenseControl)
Name: EXI u8DisablePIE
Input: u8 InterruptId
Output: u8 Error or No Error
Description: Function to disable Peripheral Interrupt Enable (PIE), by clearing
              relevant bits for each interrupt in the GICR register.
u8 EXI_u8DisablePIE (u8 Cpy_u8InterruptId)
Name: EXI_u8SetCallBack
 Input: u8 InterruptId and Pointer to function INTInterruptAction that takes void and
        returns void
Output: u8 Error or No Error
 Description: Function to receive an address of a function (in APP Layer) to be
              called back in ISR function of the passed Interrupt (InterruptId), the
              address is passed through a pointer to function (INTInterruptAction),
              and then pass this address to the ISR function.
u8 EXI u8INTSetCallBack (u8 Cpy u8InterruptId,
```

2.4.2.3. TMR Driver APIs

```
Precompile Configurations Snippet:
/* TMR0 Waveform Generation Mode Select */
/* Options: TMR U8 TMR 0 NORMAL MODE
           TMR U8 TMR 0 PWM PHASE CORRECT MODE
           TMR_U8_TMR_0_CTC_MODE
           TMR_U8_TMR_0_FAST_PWM_MODE
#define TMR U8 TMR 0 MODE SELECT
                                          TMR U8 TMR 0 NORMAL MODE
/* TMR0 Compare Match Output Mode Select */
/* Options: TMR_U8_TMR_0_DISCONNECT_OC0_PIN // Any Mode
           TMR_U8_TMR_0_TOG_OC0_PIN // Non-PWM Modes only
           TMR_U8_TMR_0_CLR_OCO_PIN // Any Mode (PWM -> Non-Inverting Mode)
TMR_U8_TMR_0_SET_OCO_PIN // Any Mode (PWM -> Inverting Mode)
                                           TMR_U8_TMR_0_DISCONNECT_OC0_PIN
#define TMR U8 TMR 0 COMP OUTPUT MODE
/* TMR0 Interrupt Select */
/* Options: TMR_U8_TMR_0_NO_INTERRUPT
           TMR_U8_TMR_0_COMP_INTERRUPT
           TMR_U8_TMR_0_OVF_INTERRUPT
*/
#define TMR_U8_TMR_0_INTERRUPT_SELECT TMR_U8_TMR_0_NO_INTERRUPT
/* TMR0 Clock Select */
/* Options: TMR_U8_TMR_0_NO_CLOCK_SOURCE // No clock source (Timer/Counter0 stopped)
           TMR_U8_TMR_0_NO_PRESCALER  // CLK IO/1 (No prescaling)
           TMR_U8_TMR_0_8_PRESCALER  // CLK IO/8 (From prescaler)
           TMR_U8_TMR_0_64_PRESCALER // CLK IO/64 (From prescaler)
           TMR_U8_TMR_0_256_PRESCALER // CLK IO/256 (From prescaler)
           TMR_U8_TMR_0_1024_PRESCALER // CLK I0/1024 (From prescaler)
           TMR U8 TMR 0 EXTERNAL CLOCK SOURCE FALL EDGE
           //External clock source on T0 pin. Clock on falling edge.
           TMR_U8_TMR_0_EXTERNAL_CLOCK_SOURCE_RISE_EDGE
           // External clock source on T0 pin. Clock on rising edge.
*/
/* TMR0 Other Configurations */
#define TMR_U8_TMR_0_PRELOAD_VALUE
#define TMR_U8_TMR_0_COMPARE_VALUE
#define TMR_U16_TMR_0_NUM_OF_OVERFLOWS
```

Linking Configurations Snippet:

There are no Linking Configurations as the defined APIs below could change the DIO peripheral Configurations during the Runtime.

```
| Name: TMR_vdTMR0Initialization
| Input: void
Output: void
Description: Function to Initialize TMR0 peripheral.
vd TMR vdTMR0Initialization (void)
Name: TMR_vdTMR2Initialization
| Input: void
Output: void
Description: Function to Initialize TMR2 peripheral.
vd TMR_vdTMR2Initialization (void)
Name: TMR u8EnableTMR
| Input: u8 TimerId
Output: u8 Error or No Error
Description: Function to Enable TMR peripheral.
u8 TMR_u8EnableTMR (u8 Cpy_u8TimerId)
| Name: TMR_u8DisableTMR
| Input: u8 TimerId
Output: u8 Error or No Error
Description: Function to Disable TMR peripheral.
u8 TMR_u8DisableTMR (u8 Cpy_u8TimerId)
| Name: TMR u8DelayMS
| Input: u8 TimerId, u8 InterruptionMode, and u32 Delay
Output: u8 Error or No Error
| Description: Function to use TMR peripheral as Delay in MS.
u8 TMR_u8DelayMS (u8 Cpy_u8TimerId, u8 Cpy_u8InterruptionMode, u32
Cpy_u32Delay)
Name: TMR_u8DelayUS
| Input: u8 TimerId, u8 InterruptionMode, and u32 Delay
Output: u8 Error or No Error
Description: Function to use TMR peripheral as Delay in US.
u8 TMR_u8DelayUS (u8 Cpy_u8TimerId, u8 Cpy_u8InterruptionMode, u32
Cpy_u32Delay)
```

```
Name: TMR_u80VFSetCallBack
 Input: u8 TimerId and Pointer to function OVFInterruptAction taking void and
        returning void
Output: u8 Error or No Error
 Description: Function to receive an address of a function (in APP Layer) to be
              called back in ISR function of the passed Timer (TimerId), the address
              is passed through a pointer to function (OVFInterruptAction), and then
              pass this address to the ISR function.
u8 TMR_u80VFSetCallBack (u8 Cpy_u8TimerId,
void(*Cpy_pf0VFInterruptAction)(void))
| Name: TMR_u8GetOVFFlagStatus
| Input: u8 TimerId and Pointer to u8 ReturnedFlagStatus
Output: u8 Error or No Error
| Description: Function to Get status of the OVF Flag in TMR peripheral.
u8 TMR_u8GetOVFFLagStatus (u8 Cpy_u8TimerId, u8 *Cpy_pu8FlagStatus)
| Name: TMR_u8ClearOVFFlag
| Input: u8 TimerId
Output: u8 Error or No Error
| Description: Function to Clear the OVF Flag in TMR peripheral.
u8 TMR_u8ClearOVFFLag (u8 Cpy_u8TimerId)
```

2.4.3. HAL APIs

2.4.3.1. BTN Driver APIs

```
Name: BTN u8InitializationNMLMode
| Input: u8 DIOPortId and u8 DIOPinId
Output: u8 Error or No Error
Description: Function to initialize BTN pin in NML Mode.
u8 BTN u8InitializationNMLMode (u8 Cpy u8DIOPortId, u8 Cpy u8DIOPinId)
| Name: BTN_u8InitializationEXIMode
Input: u8 EXIId, u8 EXISenseControl, and Pointer to Function that takes
        void and returns void
Output: u8 Error or No Error
Description: Function to initialize BTN pin in EXI Mode.
u8 BTN_u8InitializationEXIMode (u8 Cpy_u8EXIId, u8 Cpy_u8EXISenseControl, void
(*Cpy_vpfEXIAction)(void))
| Name: BTN u8GetBTNState
| Input: u8 DIOPortId, u8 DIOPinId and Pointer to u8 ReturnedBTNState
Output: u8 Error or No Error
Description: Function to get BTN state.
u8 BTN_u8GetBTNState (u8 Cpy_u8DIOPortId, u8 Cpy_u8DIOPinId, u8
*Cpy_pu8ReturnedBTNState)
```

2.4.3.2. LED Driver APIs

```
| Name: LED_u8Initialization | Input: u8 LedId | Output: u8 Error or No Error | Description: Function to initialize LED peripheral. | u8 LED_u8Initialization (u8 Cpy_u8LedId) |
| Name: LED_u8SetLEDPin | Input: u8 LedId and u8 Operation | Output: u8 Error or No Error | Description: Function to switch LED on, off, or toggle. | u8 LED_u8SetLEDPin (u8 Cpy_u8LedId, u8 Cpy_u8Operation)
```

2.4.4. MWL APIs

2.4.4.1. SOS Driver APIs

```
| Name: SOS u8Initialization
| Input: void
Output: u8 Error or No Error
Description: Function to initialize SOS database.
u8 SOS u8Initialization (void)
Name: SOS_u8Deinitialization
| Input: void
Output: u8 Error or No Error
Description: Function to reset the SOS database to invalid values.
u8 SOS_u8Deinitialization (void)
Name: SOS_u8CreateTask
| Input: Pointer to en Task
Output: u8 Error or No Error
| Description: Function to create a new task and add it to the SOS database.
u8 SOS_u8CreateTask (SOS_enTask_t *Cpy_penTask)
| Name: SOS_vdEnableScheduler
Input: void
Output: void
Description: Function to enable the scheduler.
vd SOS_vdEnableScheduler (void)
Name: SOS_vdDisableScheduler
| Input: void
Output: void
Description: Function to disable the scheduler.
vd SOS_vdDisableScheduler (void)
```

2.4.5. APP APIs


```
Name: APP_vdInitialization
| Input: void
Output: void
| Description: Function to Initialize the Application.
vd APP_vdInitialization (void)
| Name: APP_vdStartProgram
| Input: void
Output: void
Description: Function to Start the basic flow of the Application.
vd APP_vdStartProgram (void)
Name: APP_vdStartSOS
| Input: void
Output: void
| Description: Function to Start the Operating System.
vd APP_vdStartSOS (void)
| Name: APP_vdStopSOS
| Input: void
Output: void
Description: Function to Stop the Operating System.
vd APP_vdStopSOS (void)
Name: APP_vdTaskToggleLED0
Input: void
Output: void
| Description: Function to implement task 1 logic.
vd APP_vdTaskToggleLED0 (void)
Name: APP_vdTaskToggleLED1
| Input: void
Output: void
| Description: Function to implement task 2 logic.
vd APP_vdTaskToggleLED1 (void)
```

2.5. UML


2.5.1. Class Diagram



2.5.2. State Machine Diagram

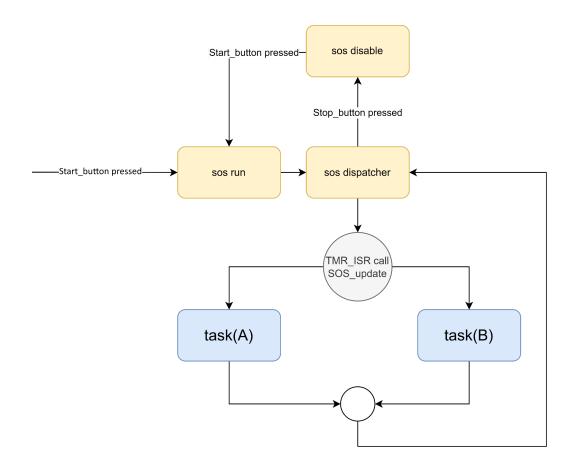


2.5.3. Sequence Diagram

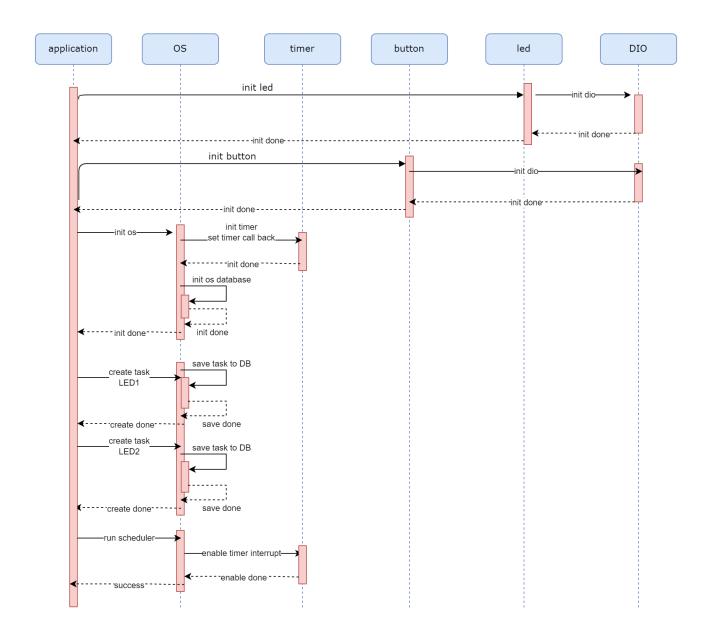


2.5.4. Flowchart Diagram


A. SOS_u8Initialization

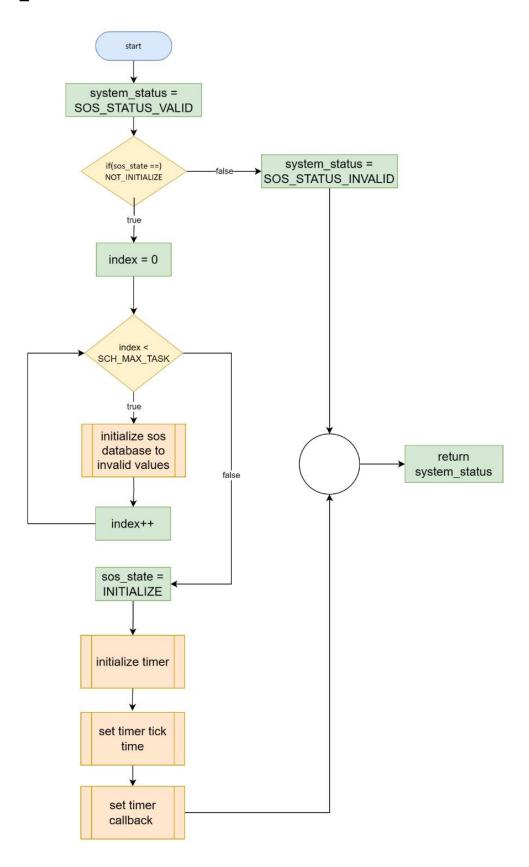


B. SOS_u8Deintialization

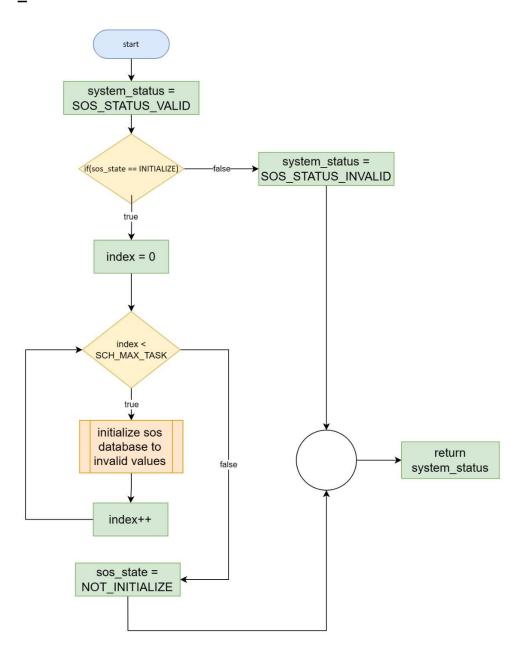

C. SOS_u8CreateTask

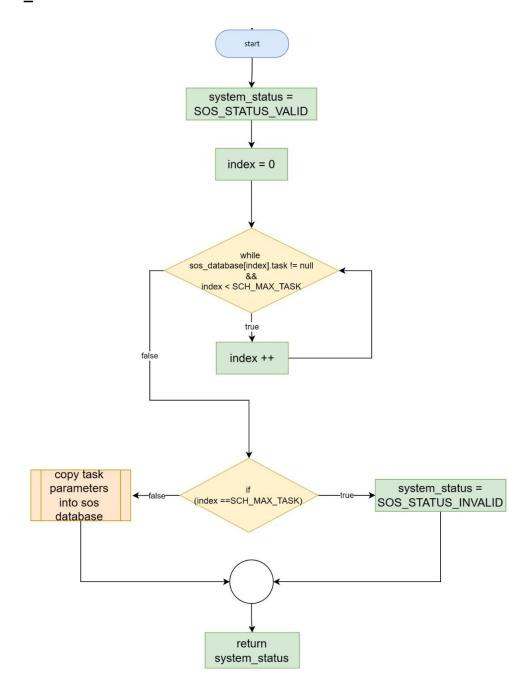


D. SOS_vdEnableScheduler

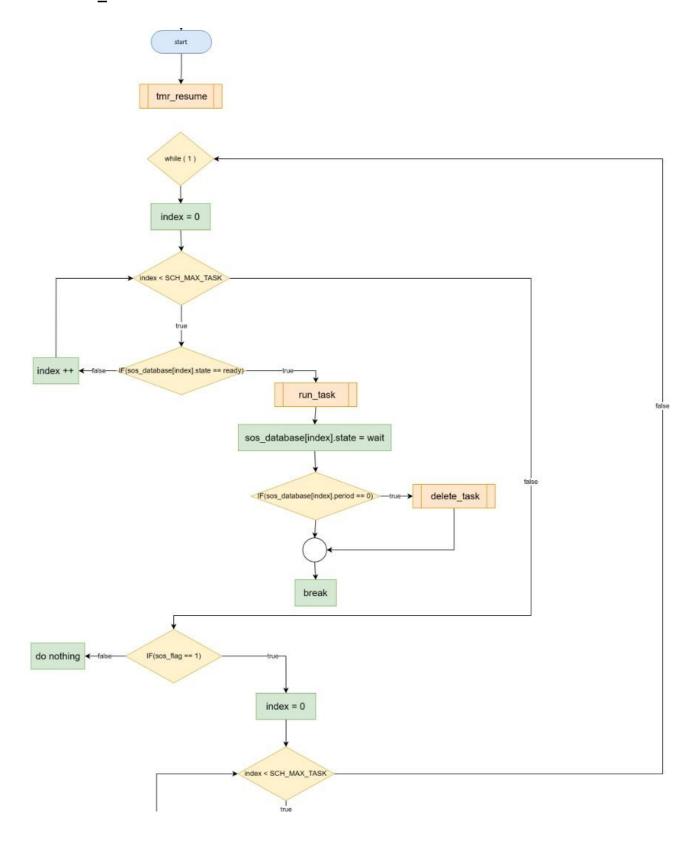

Continue the flowchart on the next page



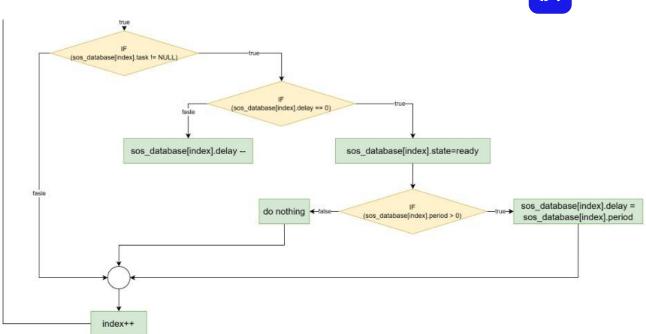

4. References

- 1. Draw IO
- 2. Layered Architecture | Baeldung on Computer Science
- 3. <u>Block Diagram Maker | Free Block Diagram Online | Lucidchart</u>
- 4. Microcontroller Abstraction Laver (MCAL) | Renesas
- 5. <u>Hardware Abstraction Layer an overview | ScienceDirect Topics</u>
- 6. Guide to Embedded Systems Architecture Part 1: Defining middleware EE Times
- 7. Top Five Differences Between Layers And Tiers | Skill-Lync
- 8. What is a module in software, hardware and programming?
- 9. Embedded Basics API's vs HAL's
- 10. Using Push Button Switch with Atmega32 and Atmel Studio