

Basic Communication Manager Design

July 2023

Presented by

Abdelrhman Walaa

Presented to

Sprints

Table Of Content

1. Project Introduction	3
1.1. System Requirements	3
1.1.1. Hardware Requirements	3
1.1.2. Software Requirements	3
2. High Level Design	4
2.1. System Architecture	4
2.1.1. Definition	4
2.1.2. Layered Architecture	4
2.1.3. Project Circuit Schematic	5
2.2. System Modules	6
2.2.1. Definition	6
2.2.2. Design	6
2.3. Modules Description	7
2.3.1. DIO Module	7
2.3.2. UART Module	7
2.3.3. LED Module	
2.3.4. BCM Module	7
2.4. Drivers' Documentation (APIs)	
2.4.1 Definition	
2.4.2. MCAL APIs	
2.4.2.1. DIO Driver APIs	
2.4.2.2. UART Driver APIs	
2.4.3. HAL APIs	
2.4.3.1. LED Driver APIs	15
2.4.4. SRVL APIs	16
2.4.4.1. BCM Driver APIs	
2.4.5. APP APIs	19
2.5. UML	
2.5.1. State Machine Diagram	20
2.5.2. Flowchart Diagram	21
4 References	23

Basic Communication Manager Design

1. Project Introduction

This project involves developing Basic Communication Manager software.

1.1. System Requirements

1.1.1. Hardware Requirements

- 1. ATmega32 microcontroller
- 2. **Two LEDs** to be toggled

1.1.2. Software Requirements

- 1. Send "BCM Operating" string from MCU_1 to MCU_2.
- 2. When MCU_1 finishes sending, LED_0 in MCU_1 will be toggled.
- 3. When MCU_2 finishes receiving the "BCM Operating" string, LED_1 in MCU_2 will be toggled.
- 4. MCU_2 will respond with a "Confirm BCM Operating" string to MCU_1.
- 5. When MCU_2 finishes sending, LED_0 in MCU_2 will be toggled.
- 6. When **MCU_1** finishes receiving the "Confirm BCM Operating" string, **LED_1** in **MCU_1** will be toggled.

2. High Level Design

2.1. System Architecture

2.1.1. Definition

Layered Architecture (Figure 1) describes an architectural pattern composed of several separate horizontal layers that function together as a single unit of software.

Microcontroller Abstraction Layer (*MCAL*) is a software module that directly accesses on-chip MCU peripheral modules and external devices that are mapped to memory, and makes the upper software layer independent of the MCU.

Hardware Abstraction Layer (HAL) is a layer of programming that allows a computer OS to interact with a hardware device at a general or abstract level rather than at a detailed hardware level.

Service Layer (SRVL) is usually the software layer that mediates between application software and device driver software.

2.1.2. Layered Architecture

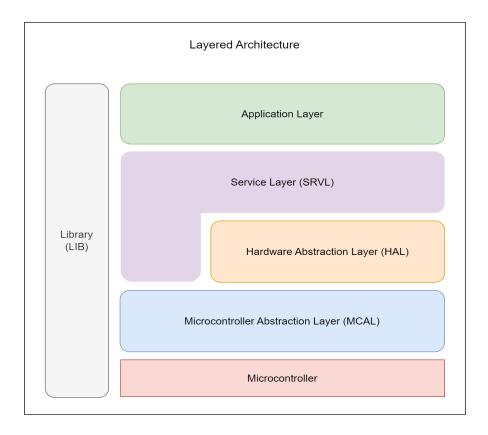


Figure 1. Layered Architecture Design

2.1.3. Project Circuit Schematic

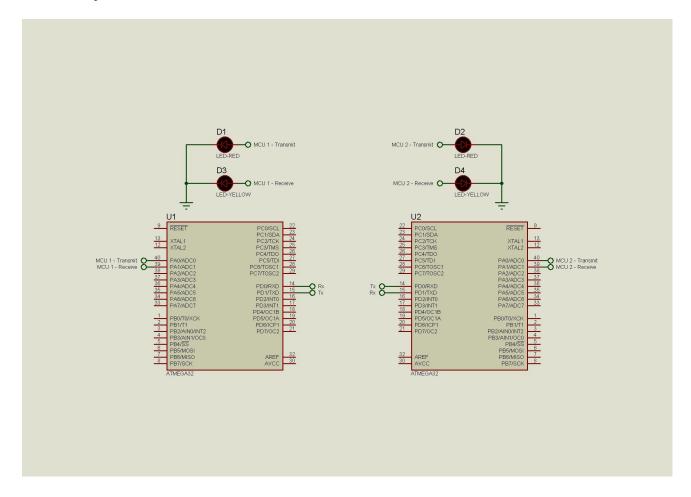


Figure 2. Project Circuit Schematic

2.2. System Modules

2.2.1. Definition

A *Module* is a distinct assembly of components that can be easily added, removed or replaced in a larger system. Generally, a *Module* is not functional on its own.

In computer hardware, a *Module* is a component that is designed for easy replacement.

2.2.2. Design

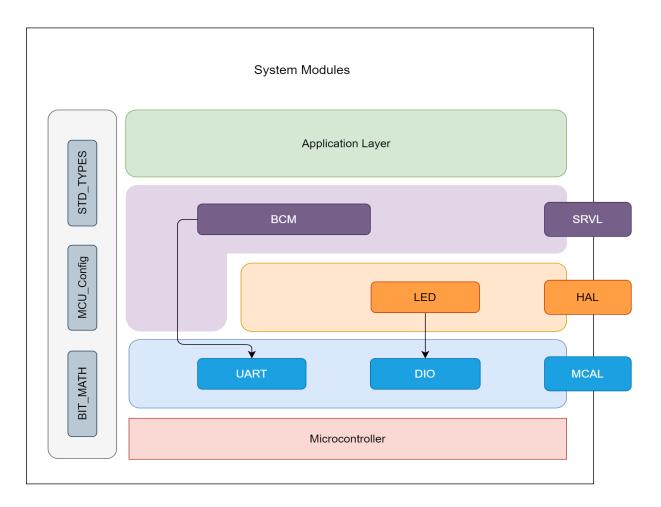


Figure 3. System Modules Design

2.3. Modules Description

2.3.1. DIO Module

The *DIO* (Digital Input/Output) module is responsible for reading input signals from the system's sensors (such as buttons) and driving output signals to the system's actuators (such as *LEDs*). It provides a set of APIs to configure the direction and mode of each pin (input/output, pull-up/down resistor), read the state of an input pin, and set the state of an output pin.

2.3.2. UART Module

The Universal Asynchronous Receiver-Transmitter (*UART*) is a popular asynchronous communication protocol. The *UART* driver is responsible for managing the data transfer between the two devices. The *UART* protocol allows for two-way data transfer, making it ideal for communication with external devices.

2.3.3. LED Module

LED (Light Emitting Diode) is responsible for controlling the state of the systems' LEDs. It provides a set of APIs to turn off, to turn on, or to toggle the state of each led.

2.3.4. BCM Module

The Basic Communication Manager (*BCM*) module is a crucial component in embedded systems that helps mediate interactions between the *Application* Layer and the underlying layers involved in communication protocols. Its primary function is to manage and facilitate communication between the application running on top and the lower-level communication layers, such as the *HAL* and *MCAL* layers.

2.4. Drivers' Documentation (APIs)

2.4.1 Definition

An *API* is an *Application Programming Interface* that defines a set of *routines*, *protocols* and *tools* for creating an application. An *API* defines the high level interface of the behavior and capabilities of the component and its inputs and outputs.

An *API* should be created so that it is generic and implementation independent. This allows for the API to be used in multiple applications with changes only to the implementation of the API and not the general interface or behavior.

2.4.2. MCAL APIs

2.4.2.1. DIO Driver APIs

```
Precompile Configurations Snippet:
/* Initial Directions of Port A Pins*/
/* Options: DIO_U8_INITIAL_INPUT
          DIO_U8_INITIAL_OUTPUT
*/
/* PORTA */
#define DIO_U8_PA0_INITIAL_DIRECTION
                                        DIO_U8_INITIAL_INPUT
#define DIO_U8_PA1_INITIAL_DIRECTION
                                        DIO_U8_INITIAL_INPUT
#define DIO_U8_PA7_INITIAL_DIRECTION
                                        DIO_U8_INITIAL_INPUT
/* Initial Values of Port A Pins */
/* Options: DIO_U8_INPUT_FLOATING
            DIO_U8_INPUT_PULLUP_RESISTOR
            DIO_U8_OUTPUT_LOW
            DIO U8 OUTPUT HIGH
/* PORTA */
#define DIO U8 PA0 INITIAL VALUE
                                       DIO U8 INPUT FLOATING
#define DIO_U8_PA1_INITIAL_VALUE
                                       DIO U8 INPUT FLOATING
#define DIO_U8_PA7_INITIAL_VALUE
                                      DIO U8 INPUT FLOATING
```

Linking Configurations Snippet:

There are no Linking Configurations as the defined APIs below could change the DIO peripheral Configurations during the Runtime.

```
| Name: DIO_initialization
| Input: void
Output: void
Description: Function to initialize DIO peripheral.
void DIO initialization (void)
Name: DIO_setPinDirection
| Input: u8 PortId, u8 PinId, and u8 PinDirection
Output: u8 Error or No Error
Description: Function to set Pin direction.
u8 DIO_setPinDirection (u8 u8_a_portId, u8 u8_a_pinId, u8
u8_a_pinDirection)
| Name: DIO_setPinValue
Input: u8 PortId, u8 PinId, and u8 PinValue
Output: u8 Error or No Error
Description: Function to set Pin value.
u8 DIO_setPinValue (u8 u8_a_portId, u8 u8_a_pinId, u8 u8_a_pinValue)
| Name: DIO_getPinValue
| Input: u8 PortId, u8 PinId, and Pointer to u8 ReturnedPinValue
Output: u8 Error or No Error
| Description: Function to get Pin value.
u8 DIO_getPinValue (u8 u8_a_portId, u8 u8_a_pinId, u8
*pu8_a_returnedPinValue)
| Name: DIO_togglePinValue
| Input: u8 PortId and u8 PinId
Output: u8 Error or No Error
Description: Function to toggle Pin value.
u8 DIO_togglePinValue (u8 u8_a_portId, u8 u8_a_pinId)
```

2.4.2.2. UART Driver APIs

```
Precompile and Linking Configurations Snippet:
/* UART Interrupt Ids */
typedef enum
 UART_EN_RXC_INT = 0,
 UART_EN_UDRE_INT,
 UART_EN_TXC_INT,
  UART_EN_INVALID_INT ID
} UART_enInterruptId_t;
/* UART Reception/Transmission Blocking Modes */
typedef enum
 UART_EN_BLOCKING_MODE = 0,
  UART_EN_NON_BLOCKING_MODE,
 UART_EN_INVALID_BLOCK_MODE
} UART_enBlockMode_t;
/* UART Error States */
typedef enum
{
 UART_EN_NOK = 0,
  UART_EN_OK
} UART_enErrorState_t;
/* UART Modes */
typedef enum
 UART_EN_ASYNC_MODE,
 UART_EN_SYNC_MODE
} UART_enMode_t;
/* UART Transmission Speeds */
typedef enum
 UART_EN_NORMAL_SPEED,
  UART_EN_DOUBLE_SPEED
} UART_enSpeed_t;
/* UART Multi-processor Communication Mode */
typedef enum
 UART EN MPCM DISABLED,
  UART_EN_MPCM_ENABLED
} UART_enMPCM_t;
```

```
/* UART Receiver RX */
typedef enum
{
  UART_EN_RX_DISABLED,
  UART_EN_RX_ENABLED
} UART_enRXEnable_t;
/* UART Transmitter TX */
typedef enum
  UART_EN_TX_DISABLED,
  UART_EN_TX_ENABLED
} UART_enTXEnable_t;
/* UART RX Complete Interrupt */
typedef enum
{
  UART_EN_RX_INT_DISABLED,
  UART_EN_RX_INT_ENABLED
} UART_enRXInterruptEnable_t;
/* TX Complete Interrupt */
typedef enum
  UART_EN_TX_INT_DISABLED,
  UART_EN_TX_INT_ENABLED
} UART_enTXInterruptEnable_t;
/* UART Data Register Empty Interrupt */
typedef enum
  UART_EN_UDRE_INT_DISABLED,
  UART_EN_UDRE_INT_ENABLED
} UART_enUDREInterruptEnable_t;
/* UART Parity Modes */
typedef enum
{
  UART_EN_PARITY_MODE_DISABLED,
  UART_EN_EVEN_PARITY_MODE,
  UART_EN_ODD_PARITY_MODE
} UART_enParityMode_t;
/* UART Stop Bit(s) */
typedef enum
  UART_EN_ONE_STOP_BIT,
  UART_EN_TWO_STOP_BIT
} UART_enStopBitsSelect_t;
```

```
/* UART Data Bits */
typedef enum
{
 UART_EN_5_DATA_BITS,
 UART_EN_6_DATA_BITS,
 UART_EN_7_DATA_BITS,
 UART_EN_8_DATA_BITS,
 UART_EN_9_DATA_BITS
} UART_enDataBitsSelect_t;
/* UART Baud Rates (Symbol Per Second -> Bit Per Second (bps)) */
typedef enum
{
 UART EN BAUD RATE 2400,
  UART_EN_BAUD_RATE_4800,
  UART_EN_BAUD_RATE_9600,
  UART_EN_BAUD_RATE_14400,
  UART_EN_BAUD_RATE_19200,
 UART_EN_BAUD_RATE_28800,
 UART_EN_BAUD_RATE_38400,
  UART_EN_BAUD_RATE_57600
} UART_enBaudRateSelect_t;
/* UART Linking Configurations Structure */
typedef struct
  UART_enMode_t
                               en_g_mode;
  UART_enSpeed_t
                               en_g_speed;
  UART_enMPCM_t
                               en_g_MPCM;
  UART_enRXEnable_t
                               en_g_RXEnable;
  UART_enTXEnable_t
                               en_g_TXEnable;
  UART_enRXInterruptEnable_t
                               en_g_RXInterruptEnable;
  UART enTXInterruptEnable t
                               en_g_TXInterruptEnable;
  UART_enUDREInterruptEnable_t en_g_UDREInterruptEnable;
  UART_enParityMode_t
                               en_g_parityMode;
 UART_enStopBitsSelect_t
                               en_g_stopBit;
 UART_enDataBitsSelect_t
                               en_g_dataBits;
 UART enBaudRateSelect t
                               en_g_baudRate;
} UART_stLinkConfig_t;
Name: UART_initialization
Input: void
Output: void
 Description: Function to initialize UART peripheral using Pre-compile
               Configurations.
void UART_initialization (void)
```

```
Name: UART_linkConfigInitialization
Input: Pointer to stLinkConfig
Output: en Error or No Error
Description: Function to initialize UART peripheral using Linking Configurations.
UART_enErrorState_t UART_linkConfigInitialization (const UART_stLinkConfig_t
*pst a linkConfig)
Name: UART receiveByte
Input: en BlockMode and Pointer to u8 ReturnedReceiveByte
Output: en Error or No Error
Description: Function to Receive Byte using both Blocking and Non-blocking Modes,
              with a Timeout mechanism.
UART_enErrorState_t UART_receiveByte (UART_enBlockMode_t en_a_blockMode, u8
*pu8 a returnedReceiveByte)
| Name: UART_transmitByte
Input: en BlockMode and u8 TransmitByte
Output: en Error or No Error
Description: Function to Transmit Byte using both Blocking and Non-blocking Modes,
              with a Timeout mechanism.
UART enErrorState t UART transmitByte (UART enBlockMode t u8 a blockMode, u8
u8 a transmitByte)
Name: UART_enableInterrupt
Input: en InterruptId
Output: en Error or No Error
Description: Function to enable UART different interrupts.
UART_enErrorState_t UART_enableInterrupt (UART_enInterruptId_t
en_a_interruptId)
Name: UART_disableInterrupt
Input: en InterruptId
Output: en Error or No Error
Description: Function to disable UART different interrupts.
UART_enErrorState t UART_disableInterrupt (UART_enInterruptId_t
en_a_interruptId)
```

```
Name: UART_RXCSetCallback
 Input: Pointer to Function that takes void and returns void
Output: en Error or No Error
 Description: Function to receive an address of a function ( in Upper Layer ) to be
              called back in ISR function, the address is passed through a pointer
              to function ( RXCInterruptAction ), and then pass this address to the
              ISR function.
UART_enErrorState_t UART_RXCSetCallback
(void(*vpf_a_RXCInterruptAction)(void))
Name: UART_UDRESetCallback
Input: Pointer to Function that takes void and returns void
Output: en Error or No Error
 Description: Function to receive an address of a function ( in Upper Layer ) to be
              called back in ISR function, the address is passed through a pointer
              to function ( UDREInterruptAction ), and then pass this address to the
              ISR function.
UART_enErrorState_t UART_UDRESetCallback
(void(*vpf_a_UDREInterruptAction)(void))
Name: UART_TXCSetCallback
Input: Pointer to Function that takes void and returns void
Output: en Error or No Error
 Description: Function to receive an address of a function ( in Upper Layer ) to be
              called back in ISR function, the address is passed through a pointer
              to function ( TXCInterruptAction ), and then pass this address to the
              ISR function.
UART_enErrorState_t UART_TXCSetCallback
(void(*vpf a TXCInterruptAction)(void))
```

2.4.3. HAL APIs

2.4.3.1. LED Driver APIs

```
| Name: LED_initialization | Input: u8 LedId | Output: u8 Error or No Error | Description: Function to initialize LED peripheral. | u8 LED_initialization (u8 u8_a_ledId) |
| Name: LED_setLEDPin | Input: u8 LedId and u8 Operation | Output: u8 Error or No Error | Description: Function to switch LED on, off, or toggle. | u8 LED_setLEDPin (u8 u8_a_ledId, u8 u8_a_operation)
```

2.4.4. SRVL APIs

2.4.4.1. BCM Driver APIs

```
Precompile and Linking Configurations Snippet:
/* BCM End of String Character */
#define BCM_U8_END_OF_STRING
/* BCM Protocols Ids */
typedef enum
{
  BCM_EN_PROTOCOL_0 = 0, // UART Protocol
                         // SPI Protocol
  BCM EN PROTOCOL 1,
                         // TWI Protocol
  BCM_EN_PROTOCOL_2,
  BCM_EN_INVALID_PROTOCOL
} BCM_enProtocolId_t;
/* BCM States */
typedef enum
{
  BCM_EN_IDLE = 0,
  /* UART Protocol */
  BCM_EN_UART_READY_TO_RECEIVE,
  BCM_EN_UART_RECEIVE_COMPLETE,
  BCM_EN_UART_READY_TO_TRANSMIT,
  BCM_EN_UART_TRANSMIT_COMPLETE,
  /* SPI Protocol */
  BCM_EN_SPI_READY_TO_RECEIVE,
  BCM_EN_SPI_RECEIVE_COMPLETE,
  BCM_EN_SPI_READY_TO_TRANSMIT,
  BCM_EN_SPI_TRANSMIT_COMPLETE,
  /* TWI Protocol */
  BCM_EN_TWI_READY_TO_RECEIVE,
  BCM_EN_TWI_RECEIVE_COMPLETE,
  BCM_EN_TWI_READY_TO_TRANSMIT,
  BCM_EN_TWI_TRANSMIT_COMPLETE,
  BCM_EN_INVALID_STATE
} BCM_enState_t;
/* BCM Error States */
typedef enum
{
  BCM EN NOK = 0,
  BCM_EN_OK
} BCM_enErrorState_t;
```

```
| Name: BCM initialization
| Input: en ProtocolId
Output: en Error or No Error
Description: Function to initialize BCM.
BCM_enErrorState_t BCM_initialization (BCM_enProtocolId_t en_a_protocolId)
Name: BCM deinitialization
Input: en ProtocolId
Output: en Error or No Error
Description: Function to deinitialize BCM.
BCM_enErrorState_t BCM_deinitialization (BCM_enProtocolId_t en_a_protocolId)
| Name: BCM receiveByte
Input: en ProtocolId and Pointer to u8 ReturnedReceiveByte
Output: en Error or No Error
Description: Function to Transmit Byte.
BCM_enErrorState_t BCM_receiveByte (BCM_enProtocolId_t en_a_protocolId, u8
*pu8_a_returnedReceiveByte)
| Name: BCM receiveString
Input: en ProtocolId and Pointer to u8 ReturnedReceiveString
Output: en Error or No Error
Description: Function to Receive Byte.
BCM_enErrorState_t BCM_receiveString (BCM_enProtocolId_t en_a_protocolId, u8
*pu8_a_returnedReceiveString)
| Name: BCM_transmitByte
Input: en ProtocolId and u8 TransmitByte
Output: en Error or No Error
Description: Function to Transmit Byte.
BCM_enErrorState_t BCM_transmitByte (BCM_enProtocolId_t en_a_protocolId, u8
u8 a transmitByte)
| Name: BCM_transmitString
| Input: en ProtocolId and Pointer to u8 TransmitString
Output: en Error or No Error
Description: Function to Transmit String.
BCM enErrorState t BCM transmitString (BCM enProtocolId t en a protocolId, u8
*pu8_a_transmitString)
```


```
Name: BCM_receiveDispatcher
Input: en ProtocolId
Output: en Error or No Error
| Description: Function to execute the periodic actions and notifies the user with
             the needed events over a specific BCM instance.
BCM_enErrorState_t BCM_receiveDispatcher (BCM_enProtocolId_t en_a_protocolId)
Name: BCM transmitDispatcher
| Input: en ProtocolId
Output: en Error or No Error
Description: Function to execute the periodic actions and notifies the user with
              the needed events over a specific BCM instance.
BCM_enErrorState_t BCM_transmitDispatcher (BCM_enProtocolId_t en_a_protocolId)
Name: BCM receiveCompleteSetCallback
| Input: en ProtocolId and Pointer to Function that takes void and returns void
Output: en Error or No Error
Description: Function to receive an address of a function ( in APP Layer ) to be
              called back in ISR function, the address is passed through a pointer
              to function ( ReceiveCompleteInterruptAction ), and then pass this
              address to the ISR function.
BCM enErrorState t BCM receiveCompleteSetCallback (BCM enProtocolId t
en_a_protocolId, void(*vpf_a_receiveCompleteInterruptAction)(void))
Name: BCM transmitCompleteSetCallback
| Input: en ProtocolId and Pointer to Function that takes void and returns void
Output: en Error or No Error
 Description: Function to receive an address of a function ( in APP Layer ) to be
              called back in ISR function, the address is passed through a pointer
              to function ( TransmitCompleteInterruptAction ), and then pass this
              address to the ISR function.
BCM enErrorState t BCM transmitCompleteSetCallback (BCM enProtocolId t
en_a_protocolId, void(*vpf_a_transmitCompleteInterruptAction)(void))
```

2.4.5. APP APIs

```
Name: APP_vdInitialization
| Input: void
Output: void
| Description: Function to Initialize the Application.
void APP_vdInitialization (void)
| Name: APP_vdStartProgram
| Input: void
Output: void
Description: Function to Start the basic flow of the Application.
void APP_vdStartProgram (void)
| Name: APP_receiveComplete
| Input: void
Output: void
| Description: Function to be called back when reception is completed.
void APP_receiveComplete (void)
| Name: APP_transmitComplete
| Input: void
Output: void
| Description: Function to be called back when transmission is completed.
void APP_transmitComplete (void)
```


2.5. UML

2.5.1. State Machine Diagram

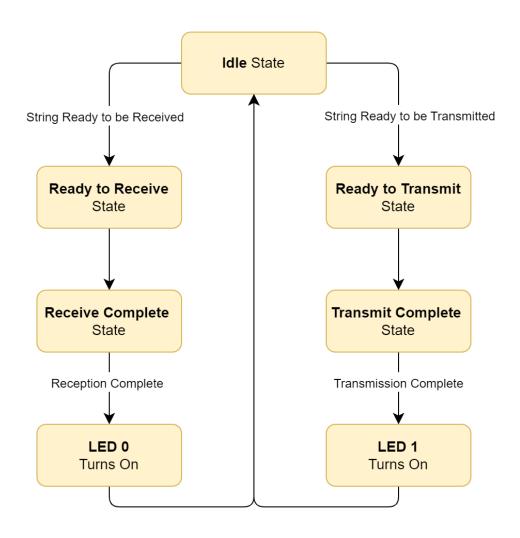


2.5.2. Flowchart Diagram

A. APP_initialization

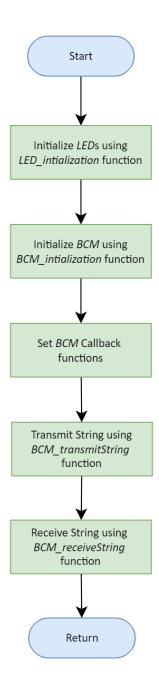

B. APP_startProgram

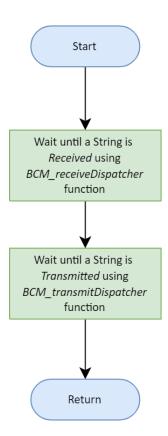

4. References

- 1. Draw IO
- 2. Layered Architecture | Baeldung on Computer Science
- 3. Block Diagram Maker | Free Block Diagram Online | Lucidchart
- 4. Microcontroller Abstraction Laver (MCAL) | Renesas
- 5. <u>Hardware Abstraction Layer an overview | ScienceDirect Topics</u>
- 6. Top Five Differences Between Layers And Tiers | Skill-Lync
- 7. What is a module in software, hardware and programming?
- 8. Embedded Basics API's vs HAL's