

O-RAN.WG3.E2AP-v01.01

Technical Specification

O-RAN Working Group 3, Near-Real-time RAN Intelligent Controller, E2 Application Protocol (E2AP)

Prepared by the O-RAN Alliance e.V. Copyright © 2020 by the O-RAN Alliance e.V.

By using, accessing or downloading any part of this O-RAN specification document, including by copying, saving, distributing, displaying or preparing derivatives of, you agree to be and are bound to the terms of the O-RAN Adopter License Agreement contained in the Annex ZZZ of this specification. All other rights reserved.



Revision History

Date	Revision	Author	Description
2020.01.22	01.00.00	Alistair URIE, Paul STEPHENS (Nokia)	Specification renamed v01.00.00 for approval
2020.01.28	01.00.00	Alistair URIE, Paul STEPHENS (Nokia)	Editorial corrections collected during WG3 approval process
2020.07.08	01.00.01	Alistair URIE (Nokia)	Addition of CR adopted during meeting #60
2020.07.13	01.00.02	Alistair URIE (Nokia), Jaemin HAN (Intel)	ASN.1 corrections, Table correction to align with ASN.1
2020.07.15	V01.01	Paul Stephens (Nokia)	Incremented version for Publication

"© 2019. 3GPP™ TSs and TRs are the property of ARIB, ATIS, CCSA, ETSI, TSDSI, TTA and TTC who jointly own the copyright in them. They are subject to further modifications and are therefore provided to you "as is" for information purposes only. Further use is strictly prohibited."

"© 2020. 3GPP™ TSs and TRs are the property of ARIB, ATIS, CCSA, ETSI, TSDSI, TTA and TTC who jointly own the copyright in them. They are subject to further modifications and are therefore provided to you "as is" for information purposes only. Further use is strictly prohibited."



Contents

2	Revis	sion History	2
3	Forev	ward	5
4	1	Scope	6
5	2	References	
	_		
6	3	Definitions and Abbreviations	
7 8	3.1 3.2	Definitions	
9	4	General	
10	4.1	Procedure Specification Principles	
11 12	4.2 4.3	Forwards and Backwards Compatibility	
12		-	
13	5	E2AP Services	10
14	6	Services expected from Signalling Transport	11
15	7	Functions of E2AP	12
16	8	E2AP Procedures	13
17	8.1	Elementary Procedures	
18	8.2	Near-RT RIC functional procedures	
19	8.2.1	RIC Subscription procedure	
20	8.2.2	RIC Subscription Delete procedure	
21	8.2.3	RIC Indication procedure	17
22	8.2.4	RIC Control procedure	19
23	8.3	Global Procedures	
24	8.3.1	E2 Setup procedure	
25	8.3.2	Reset procedure	
26	8.3.3 8.3.4	Error Indication	
27		RIC Service Update procedure	
28	9	Elements for E2AP Communication	
29	9.0	General	
30	9.1	Message Functional Definition and Content	
31	9.1.1	Messages for Near-RT RIC Functional Procedures	
32 33	9.1.2 9.2	Information Element definitions	
34	9.2.0	General	
3 4 35	9.2.0	Cause	
36	9.2.2	Criticality Diagnostics	
37	9.2.3	Message Type	
38	9.2.4	Global RIC ID	
39	9.2.5	Time to wait	
40	9.2.6	Global E2 Node ID.	49
41	9.2.7	RIC Request ID	49
42	9.2.8	RAN Function ID	49
43	9.2.9	RIC Event Trigger Definition	49
44	9.2.10		50
45	9.2.11	**	50
46	9.2.12		
47	9.2.13		
48	9.2.14	1 , , ,	
49 	9.2.15	71	
50	9.2.16	e e e e e e e e e e e e e e e e e e e	
51 52	9.2.17		
52	9.2.18	8 RIC Call Process ID	51



1	9.2.19	RIC Control message	51
2	9.2.20	RIC Control header	51
3	9.2.21	RIC Control Ack Request	52
4	9.2.22	RIC Control Status	52
5	9.2.23	RAN Function Definition	52
6	9.2.24	RAN Function Revision	52
7	9.2.25	RIC Control Outcome	52
8	9.3	Message and Information Element Abstract Syntax (with ASN.1)	55
9	9.3.1	General	
10	9.3.2	Usage of private message mechanism for non-standard use	
11	9.3.3	Elementary Procedure Definitions	
12	9.3.4	PDU definitions	
13	9.3.5	Information Element Definitions	
14	9.3.6	Common definitions	76
15	9.3.7	Constant definitions	77
16	9.3.8	Container definitions	
17	9.4	Message transfer syntax	
18	9.5	Timers	80
19	10 H	Iandling of Unknown, Unforeseen and Erroneous Protocol Data	81
20	Annex Z	ZZZ: O-RAN Adopter License Agreement	82
21		1: DEFINITIONS	
22	Section 2	2: COPYRIGHT LICENSE	82
23	Section 3	3: FRAND LICENSE	82
24	Section 4	4: TERM AND TERMINATION	83
25	Section 5	5: CONFIDENTIALITY	83
26	Section 6	6: INDEMNIFICATION	83
27	Section 7	7: LIMITATIONS ON LIABILITY; NO WARRANTY	84
28		8: ASSIGNMENT	
29	Section 9	9: THIRD-PARTY BENEFICIARY RIGHTS	84
30	Section	10: BINDING ON AFFILIATES	84
21	Castic	11. CENED AI	0.4



Foreward

- 2 This Technical Specification has been produced by the O-RAN Alliance.
- The contents of the present document are subject to continuing work within O-RAN and may change following formal O-RAN approval. Should the O-RAN Alliance modify the contents of the present document, it will be re-released by O-
- 5 RAN with an identifying change of release date and an increase in version number as follows:
- 6 Release x.y.z
- 7 where:
 - x the first digit is incremented for all changes of substance, i.e. technical enhancements, corrections, updates, etc. (the initial approved document will have x=01).
 - y the second digit is incremented when editorial only changes have been incorporated in the document.
 - z the third digit included only in working versions of the document indicating incremental changes during the editing process.

8

9

10 11

12



1 Scope

- The present document specifies the Near-RT RIC layer signalling protocol for the E2 interface.
- The E2 interface provides means for interconnecting a Near-RT RIC and an E2 Node. The E2 Application Protocol
- 4 (E2AP) supports the functions of E2 interface by signalling procedures defined in the present document. E2AP is
- developed in accordance to the general principles stated in O-RAN E2 General Aspects & Principles [2].

6

10

11

13

14

15

28

1

2 References

- 8 The following documents contain provisions which, through reference in this text, constitute provisions of the present document.
 - References are either specific (identified by date of publication, edition number, version number, etc.) or non-specific.
 - For a specific reference, subsequent revisions do not apply.
 - For a non-specific reference, the latest version applies. In the case of a reference to a 3GPP document (including a GSM document), a non-specific reference implicitly refers to the latest version of that document *in the same Release as the present document*.
- 16 [1] 3GPP TR 21.905: "Vocabulary for 3GPP Specifications".
- 17 [2] O-RAN-WG3.E2GAP: "O-RAN Working Group 3 Near-Real-time RAN Intelligent Controller, E2 General Aspects and Principles".
- O-RAN-WG3.E2SM: "O-RAN Working Group 3, Near-Real-time RAN Intelligent Controller, E2 Service Model (E2SM)".
- ORAN-WG2.A1.GA&P: "O-RAN Working Group 2, A1 interface: General Aspects and Principles".
- 23 [6] 3GPP TS 36.401: "Evolved Universal Terrestrial Radio Access Network (E-UTRAN); 24 Architecture Description".
- 25 [7] 3GPP TS 38.401: "NG-RAN; Architecture description".
- 26 [8] 3GPP TS 36.423: "Evolved Universal Terrestrial Radio Access Network (E-UTRAN); X2 application protocol (X2AP)".
 - [9] O-RAN-WG1.OAM Architecture: "O-RAN Operations and Maintenance Architecture".
- 29 [10] 3GPP TS 38.410: "NG general aspects and principles".
- 30 [11] 3GPP TS 38.420: "Xn general aspects and principles".
- 31 [12] 3GPP TS 38.470: "F1 general aspects and principles".
- 32 [13] 3GPP TS 36.413: "S1 Application Protocol (S1AP)".
- 33 [14] 3GPP TS 25.921: "Guidelines and principles for protocol description and error handling".
- 34 [15] ITU-T Recommendation X.691 (07/2002): "Information technology ASN.1 encoding rules: Specification of Packed Encoding Rules (PER)".
- 36 [16] ITU-T Recommendation X.680 (07/2002): "Information technology Abstract Syntax Notation One (ASN.1): Specification of basic notation".
- 38 [17] ITU-T Recommendation X.681 (07/2002): "Information technology Abstract Syntax Notation One (ASN.1): Information object specification".



3GPP TS 38.300: "NR; NR and NG-RAN Overall Description; Stage 2".

2 3

1

3 Definitions and Abbreviations

3.1 Definitions

- For the purposes of the present document, the terms and definitions given in 3GPP TR 21.905 [1] and the following
- 7 apply.
- 8 A term defined in the present document takes precedence over the definition of the same term, if any, in 3GPP TR
- 21.905 [1].
- 10 A1: Interface between non-RT RIC and Near-RT RIC to enable policy-driven guidance of Near-RT RIC
- applications/functions, and support AI/ML workflow [4]. 11
- E2: Interface connecting the Near-RT RIC and one or more O-CU-CPs, one or more O-CU-UPs, and one or more O-12
- 13 DUs [2].

- E2 Node: a logical node terminating E2 interface. In this version of the specification, ORAN nodes terminating E2 14
- 15 interface are:
 - for NR access: O-CU-CP, O-CU-UP, O-DU or any combination as defined in [9];
- 17 for E-UTRA access: O-eNB.
- non-RT RIC (O-RAN non-real-time RAN Intelligent Controller): a logical function that enables non-real-time 18
- 19 control and optimization of RAN elements and resources, AI/ML workflow including model training and updates, and
- 20 policy-based guidance of applications/features in Near-RT RIC.
- Near-RT RIC (O-RAN near-real-time RAN Intelligent Controller): a logical function that enables near-real-time 21
- 22 control and optimization of RAN elements and resources via fine-grained (e.g. UE basis, Cell basis) data collection and
- 23 actions over E2 interface.
- 24 O-CU: (O-RAN Central Unit): a logical node hosting RRC, SDAP and PDCP protocols [7].
- 25 O-CU-CP: (O-RAN Central Unit – Control Plane): a logical node hosting the RRC and the control plane part of the
- PDCP protocol [7]. 26
- 27 O-CU-UP: (O-RAN Central Unit – User Plane): a logical node hosting the user plane part of the PDCP protocol and the
- SDAP protocol [7]. 28
- O-DU: (O-RAN Distributed Unit): a logical node hosting RLC/MAC/High-PHY layers based on a lower layer
- 30 functional split.
- 31 O-eNB: an eNB Error! Reference source not found. or ng-eNB [18] that supports E2 interface.
- 32 O-RU: (O-RAN Radio Unit): a logical node hosting Low-PHY layer and RF processing based on a lower layer
- functional split. This is similar to 3GPP's "TRP" or "RRH" but more specific in including the Low-PHY layer 33
- (FFT/iFFT, PRACH extraction). 34
- O1: Interface between orchestration & management entities (Orchestration/NMS) and O-RAN managed elements, for 35
- operation and management, by which FCAPS management, Software management, File management and other similar 36
- functions shall be achieved. 37
- RAN Function: A specific Function in a E2 Node; examples include network interfaces (i.e. X2AP [8], F1 [12], S1AP 38
- 39 [13], Xn [11], NGc [10]) interfaces and RAN internal functions handling UEs, Cells, etc.



1 **RIC Service**: A Service provided on an E2 Node to provide access to messages and measurements and / or enable control of the E2 Node from the Near-RT RIC.

3

3.2 Abbreviations

- 5 For the purposes of the present document, the following abbreviations apply.
- 6 Near-RT RIC near-real-time RAN Intelligent Controller
- 7 non-RT RIC non-real-time RAN Intelligent Controller:
- 8 O-CU O-RAN Central Unit
- 9 O-CU-CP O-RAN Central Unit Control Plane
- 10 O-CU-UP O-RAN Central Unit User Plane
- 11 O-DU O-RAN Distributed Unit
- 12 O-RU O-RAN Radio Unit

13

14

15

20

21

22

23 24

25

26

28

29

30

32 33

4 General

4.1 Procedure Specification Principles

- The principle for specifying the procedure logic is to specify the functional behaviour of the terminating node exactly and completely. Any rule that specifies the behaviour of the originating node shall be possible to be verified with information that is visible within the system.
- The following specification principles have been applied for the procedure text in clause 8:
 - The procedure text discriminates between:
 - 1) Functionality which "shall" be executed.
 - The procedure text indicates that the receiving node "shall" perform a certain function Y under a certain condition. If the receiving node supports procedure X but cannot perform functionality Y requested in the REQUEST message of a Class 1 EP, the receiving node shall respond with the message used to report unsuccessful outcome for this procedure, containing an appropriate cause value.
 - 2) Functionality which "shall, if supported" be executed.
 - The procedure text indicates that the receiving node "shall, if supported," perform a certain function Y under a certain condition. If the receiving node supports procedure X, but does not support functionality Y, the receiving node shall proceed with the execution of the EP, possibly informing the requesting node about the not supported functionality.
 - Any required inclusion of an optional IE in a response message is explicitly indicated in the procedure text. If the procedure text does not explicitly indicate that an optional IE shall be included in a response message, the optional IE shall not be included. For requirements on including *Criticality Diagnostics* IE, see clause 10.



4.2 Forwards and Backwards Compatibility

- 2 The forwards and backwards compatibility of the protocol is assured by mechanism where all current and future
- 3 messages, and IEs or groups of related IEs, include ID and criticality fields that are coded in a standard format that will
 - not be changed in the future. These parts can always be decoded regardless of the standard version.

5

6

12

13

14 15

17

18

4

1

4.3 Specification Notations

- 7 For the purposes of the present document, the following notations apply:
- 8 Procedure When referring to an elementary procedure in the specification the Procedure Name is written with the first letters in each word in upper case characters followed by the word "procedure", e.g.

Handover Preparation procedure.

11 Message When referring to a message in the specification the MESSAGE NAME is written with all letters

in upper case characters followed by the word "message", e.g. HANDOVER REQUEST message.

IE When referring to an information element (IE) in the specification the *Information Element Name*

is written with the first letters in each word in upper case characters and all letters in Italic font

followed by the abbreviation "IE", e.g. *E-RAB ID* IE.

- Value of an IE When referring to the value of an information element (IE) in the specification the "Value" is
 - written as it is specified in the specification enclosed by quotation marks, e.g. "Value".

4.4 Identifiers

- For the purposes of the present document, the following identifiers apply:
- 20 Global E2 Node ID: Global identifier of an E2 Node. Defined as the global eNB or gNB identifier and an optional
- 21 local identifier of an CU-UP or DU which is required when and if an individual DU or CU-UP supports a direct E2
- 22 interface.
- 23 Global RIC ID: Global identifier of a Near-RT RIC.
- 24 **RAN Function ID**: Local identifier of a specific RAN Function within an E2 Node that supports one or more RIC
- 25 Services using a specific E2 Service Model. Note that same E2SM may be used by more than one RAN Function in the
- same E2 Node.
- 27 **RAN Function OID**: RAN Function Object Identifier. Used to identify specific RAN function definition (i.e. E2SM
- 28 used by specific RAN Function).
- 29 **RIC Action ID**: Local identifier used Near-RT RIC to identify a specific Action within a specific RIC Subscription
- Request, used by E2 Node in subsequent RIC Indication messages.
- 31 **RIC Call Process ID**: Local identifier used by E2 Node to identify the suspended associated procedure instance during
- a RIC Service "Insert", used by Near-RT RIC in subsequent RIC Control procedure.
- 33 RIC Request ID: Local identifier used by the Near-RT RIC to identify a specific RIC Subscription procedure or RIC
- Control procedure, used by E2 Node in subsequent RIC Indication messages.

35



5 E2AP Services

2 The present clause describes the services an E2 Node offers to the Near-RT RIC.

5.1 E2AP procedure modules

- 4 The E2 interface E2AP procedures are divided into two modules as follows:
 - 1. E2AP Near-RT RIC Functional Procedures;
- 6 2. E2AP Global Procedures:
- 7 The E2AP Near-RT RIC functional procedures module contains procedures used to pass application specific messages
- 8 between Near-RT RIC applications and a target function in an E2 node [2]
- 9 The Global Procedures module contains procedures that are not directly related to a specific application.

5.2 Parallel transactions

- Parallel transactions, that is, multiple ongoing E2AP procedures related to the same Application and E2 node, are
- 12 supported.

13



Services expected from Signalling Transport

The signalling connection shall provide in sequence delivery of E2AP messages. E2AP shall be notified if the signalling connection breaks.

3



Functions of E2AP

- The functions of E2AP are described in O-RAN Working Group 3 Near-Real-time RAN Intelligent Controller General
- 3 Aspects and Principles [2].

4



8 E2AP Procedures

8.1 Elementary Procedures

In the following tables, all EPs are divided into Class 1 and Class 2 EPs.

Table 8.1-1: Class 1 Elementary Procedures

Initiated	Initiated Elementary Initiating Message		Successful Outcome	Unsuccessful Outcome
by	Procedure		Response message	Response message
Near-RT RIC	RIC Subscription	RIC SUBSCRIPTION REQUEST	RIC SUBSCRIPTION RESPONSE	RIC SUBSCRIPTION FAILURE
Near-RT RIC	RIC Subscription Delete	RIC SUBSCRIPTION DELETE REQUEST	RIC SUBSCRIPTION DELETE RESPONSE	RIC SUBSCRIPTION DELETE FAILURE
E2 Node	2 Node RIC Service Update RIC SERVIC UPDATE		RIC SERVICE UPDATE ACKNOWLEDGE	RIC SERVICE UPDATE FAILURE
Near-RT RIC	RIC Control	RIC CONTROL REQUEST	RIC CONTROL ACKNOWLEDGE	RIC CONTROL FAILURE
E2 Node	E2 Setup	E2 SETUP REQUEST	E2 SETUP RESPONSE	E2 SETUP FAILURE
E2 Node	E2 Node Configuration Update	E2 NODE CONFIGURATION UPDATE	E2 NODE CONFIGURATION UPDATE ACKNOWLEDGE	E2 NODE CONFIGURATION UPDATE FAILURE
Near-RT RIC	E2 Connection Update	E2 CONNECTION UPDATE	E2 CONNECTION UPDATE ACKNOWLEDGE	E2 CONNECTION UPDATE FAILURE
Near-RT RIC or E2 Node	Reset	RESET REQUEST	RESET RESPONSE	

Table 8.1-2: Class 2 Elementary Procedures

Initiated by Elementary Procedure		Initiating Message		
E2 Node	RIC Indication	RIC INDICATION		
Near-RT RIC	RIC Service Query	RIC SERVICE QUERY		
E2 Node or Near- RT RIC	Error Indication	ERROR INDICATION		

8.2 Near-RT RIC Functional Procedures

8.2.1 RIC Subscription procedure

9 8.2.1.1 General

This procedure is used to establish E2 subscriptions on E2 Node consisting of an event trigger and a sequence of actions, each with a corresponding subsequent action.

8.2.1.2 Successful Operation

@startuml skinparam ParticipantPadding 50 skinparam BoxPadding 10 skinparam lifelineStrategy solid

6

12

13

15

16

17

18



 participant "Near-RT RIC" as near
participant "E2 Node" as ran
near -> ran: RIC SUBSCRIPTION REQUEST
ran->near: RIC SUBSCRIPTION RESPONSE
@enduml

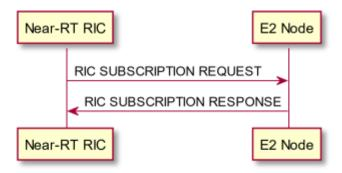


Figure 8.2.1.2-1: Near-RT RIC Subscription procedure, successful operation

The Near-RT RIC initiates the procedure by sending the RIC SUBSCRIPTION REQUEST message containing a unique RIC Request ID to the target E2 Node. When the Near-RT RIC sends the RIC SUBSCRIPTION message, it shall start the timer $T_{RICEVENTcreate}$.

At reception of the RIC SUBSCRIPTION REQUEST message the target E2 Node shall:

- Determine the target function using the information in the *RAN Function ID* IE and configure the requested event trigger using information in the *RIC Subscription Details* IE.
- If one or more **Report**, **Insert** and/or **Policy** RIC service actions are included in the *RIC Subscription Details* IE then the target function shall validate the event trigger and requested action sequence and, if accepted, store the required *RIC Request ID*, *RIC Event Trigger Definition* IE and sequence of *RIC Action ID* IE, *RIC Action Type* IE, *RIC Action Definition* IE, if included, and *RIC Subsequent Action* IE, if included.

If the requested trigger and at least one required action are accepted by the target E2 Node, the target E2 Node shall reserve necessary resources and send the RIC SUBSCRIPTION RESPONSE message back to the Near-RT RIC. The target E2 Node shall include in the response message the actions for which resources have been prepared at the target E2 Node in the RIC Actions Admitted List IE. The target E2 Node shall include the actions that have not been admitted in the RIC Actions Not Admitted List IE with an appropriate cause value.

Upon reception of the RIC SUBSCRIPTION RESPONSE message the Near-RT RIC shall stop the timer T_{RICEVENT} and terminate the Subscription Request procedure.

8.2.1.3 Unsuccessful Operation

```
@startuml
skinparam ParticipantPadding 50
skinparam BoxPadding 10
skinparam lifelineStrategy solid


participant "Near-RT RIC" as near
participant "E2 Node" as ran

near -> ran: RIC SUBSCRIPTION REQUEST

ran->near: RIC SUBSCRIPTION FAILURE

@enduml
```



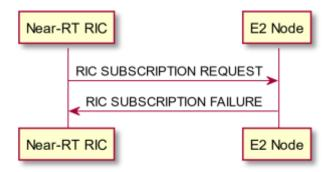

3

4

5

6

7

8

10

Figure 8.2.1.3-1: Near-RT RIC Subscription procedure, unsuccessful operation

If the target E2 Node does not admit at least one requested action, or detects an inconsistency in the sequence of actions or in the subsequent action definitions, or a failure occurs during the RIC Subscription procedure, the target E2 Node shall send the RIC SUBSCRIPTION FAILURE message to the Near-RT RIC. The E2 Node shall include the RIC Actions Not Admitted List IE with an appropriate cause value.

Upon reception of the RIC SUBSCRIPTION FAILURE message the Near-RT RIC shall stop the timer $T_{\text{RICEVENT}create}$ and terminate the RIC Subscription procedure.

9

Interactions with RIC Subscription Delete procedure:

- 11 If there is no response from the target E2 Node to the RIC SUBSCRIPTION REQUEST message before the timer
- TRICEVENTCreate expires in the Near-RT RIC, the Near-RT RIC shall cancel the RIC Subscription towards the target E2
- Node by initiating the RIC Subscription Delete procedure with an appropriate cause value. The Near-RT RIC shall
- 14 ignore any RIC SUBSCRIPTION RESPONSE or RIC SUBSCRIPTION FAILURE message received after the
- initiation of the RIC Subscription Delete procedure and remove any reference and release any resources related to the
- concerned E2.

17

18

29

8.2.1.4 Abnormal Conditions

- 19 If the target E2 Node receives a RIC SUBSCRIPTION REQUEST message containing *RIC Subscription Details* IE that
- does not align with the Near-RT RIC Service Model [3], the target E2 Node shall send the RIC SUBSCRIPTION
- 21 FAILURE message to the Near-RT RIC with an appropriate cause value.
- If the target E2 Node receives a RIC SUBSCRIPTION REQUEST message which contains a RAN Function ID IE that
- was not previously announced as a supported RAN function in the E2 Setup procedure or the RIC Service Update
- procedure, the target E2 Node shall send the RIC SUBSCRIPTION FAILURE message to the Near-RT RIC with an
- appropriate cause value.
- If the target E2 Node receives a RIC SUBSCRIPTION REQUEST message containing identical contents, that is, same
- 27 RAN Function ID IE, same RIC Event Trigger Definition IE and same sequence of actions, the target E2 Node shall
- send the RIC SUBSCRIPTION FAILURE message to the Near-RT RIC with an appropriate cause value.

8.2.2 RIC Subscription Delete procedure

- 30 8.2.2.1 General
- This procedure is used to delete E2 subscriptions on E2 Node.

32 8.2.2.2 Successful Operation

33 @startuml

skinparam ParticipantPadding 50

skinparam BoxPadding 10



```
skinparam lifelineStrategy solid

participant "Near-RT RIC" as near
participant "E2 Node" as ran

near -> ran: RIC SUBSCRIPTION DELETE REQUEST

ran->near: RIC SUBSCRIPTION DELETE RESPONSE

@enduml
```



Figure 8.2.1.2-1: Near-RT RIC Subscription Delete procedure, successful operation

The Near-RT RIC initiates the procedure by sending the RIC SUBSCRIPTION DELETE REQUEST message to the target E2 Node. When the Near-RT RIC sends the RIC SUBSCRIPTION DELETE REQUEST message, it shall start the timer $T_{RICEVENTdelete}$.

- At reception of the RIC SUBSCRIPTION DELETE REQUEST message the target E2 Node shall:
 - Determine the target function using the information in the *RAN Function ID* IE and delete the corresponding RIC EVENT trigger using information in the *RIC Request ID* IE.
 - If one or more subsequent actions were included in the previously received RIC Subscription, then the target function shall delete the required actions along with the corresponding *RIC Request ID* IE.
- The target E2 Node shall release necessary resources and send the RIC SUBSCRIPTION DELETE RESPONSE message back to the Near-RT RIC.
- Upon reception of the RIC SUBSCRIPTION DELETE RESPONSE message the Near-RT RIC shall stop the timer T_{RICEVENTdelete}, and terminate the RIC Subscription Delete procedure.

8.2.2.3 Unsuccessful Operation

```
@startuml

skinparam ParticipantPadding 50
skinparam BoxPadding 10
skinparam lifelineStrategy solid

participant "Near-RT RIC" as near
participant "E2 Node" as ran

near -> ran: RIC SUBSCRIPTION DELETE REQUEST

ran->near: RIC SUBSCRIPTION DELETE FAILURE

@enduml
```





17

22

Figure 8.2.1.3-1: RIC Subscription Delete procedure, unsuccessful operation

- If the target E2 Node has no stored subscription for the same *RIC Request ID* IE included in the RIC SUBSCRIPTION DELETE REQUEST message, or a failure occurs during the RIC Subscription Delete procedure, the target E2 Node shall send the RIC SUBSCRIPTION DELETE FAILURE message to the Near-RT RIC. The message shall contain with an appropriate cause value.
- Upon reception of the RIC SUBSCRIPTION DELETE FAILURE message the Near-RT RIC shall stop the timer T_{RICEVENTdelete}, and terminate the RIC Subscription Delete procedure.

9 8.2.2.4 Abnormal Conditions

- If the target E2 Node receives a RIC SUBSCRIPTION DELETE REQUEST message containing a *RIC Request ID* IE that is not known, the target E2 Node shall send the RIC SUBSCRIPTION DELETE FAILURE message to the Near-
- 12 RT RIC. The message shall contain with an appropriate cause value.
- 13 If the target E2 Node receives a RIC SUBSCRIPTION DELETE REQUEST message contains a RAN Function ID IE
- that was not previously announced as a supported RAN function in the E2 Setup procedure or the RIC Service Update
- procedure, the target E2 Node shall send the RIC SUBSCRIPTION DELETE FAILURE message to the Near-RT RIC.
- The message shall contain with an appropriate cause value.

8.2.3 RIC Indication procedure

18 8.2.3.1 General

- The purpose of the RIC Indication procedure is to transfer a message associated with a **Report** and/or **Insert** RIC
- Service to the Near-RT RIC corresponding to a previously successful RIC Subscription procedure and the
- 21 corresponding detection of the Event Trigger.

8.2.3.2 Successful Operation

```
@startuml
24
25
       skinparam ParticipantPadding 50
26
       skinparam BoxPadding 10
27
       skinparam lifelineStrategy solid
       participant "Near-RT RIC" as near
28
       participant "E2 Node" as ran
29
30
       ran->near: RIC INDICATION
31
32
       @enduml
```



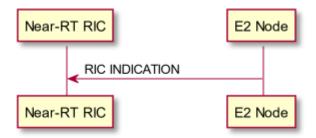


Figure 8.2.3.2-1: Near-RT RIC Indication procedure, successful operation

An E2 Node initiates the procedure by sending RIC INDICATION message containing the associated *RIC Request ID* IE, *RAN Function ID* IE, *RIC Action ID* IE, optionally sequence number *RIC Indication SN* IE, *RIC Indication Type* IE, *RIC Indication Message* IE and optionally a *RIC Call Process ID* IE to the Near-RT RIC.

 If the *RIC Subsequent Action Type* IE was set to Continue or Halt and a non-zero timer value was carried in the *RIC Time to Wait* IE within the *RIC Subsequent Action* IE, then the RIC INDICATION message shall provide the *RIC Call Process ID* IE and the E2 Node shall store current call state and suspend further processing of the associated RAN function.

The receiving Near-RT RIC shall use the *RIC Request ID* IE to route the Indication to the Near-RT RIC functionality that originated the corresponding RIC Subscription procedure.

If present, the receiving Near-RT RIC may use the RIC Call Process ID IE in a subsequent RIC Control procedure.

 If the E2 Node had stored an associated *RIC Subsequent Action* IE then, after successful transmission of the RIC INDICATION message, the originating E2 Node shall progress accordingly:

- If the *RIC Subsequent Action Type* IE was set to Continue or Halt, the associated *RIC Time to Wait* timer has not yet expired, and a RIC CONTROL REQUEST message is received with the same *RIC Call Process ID* IE, then the E2 Node shall use the RIC CONTROL REQUEST information along with the stored call state and continue to execute any remaining actions in the sequence of RIC Actions defined in the RIC Subscription procedure prior to resuming normal functionality of the associated RAN function.

If the *RIC Subsequent Action Type* IE was set to Continue and the associated *RIC Time to Wait* timer has expired or was set to zero, then the E2 Node shall use the stored call state and continue to execute any remaining actions in the sequence of RIC Actions defined in the RIC Subscription procedure prior to resuming normal functionality of the associated RAN function.

If the *RIC Subsequent Action Type* IE was set to Halt and the associated *RIC Time to Wait* timer has expired or was set to zero, then the E2 Node shall abort normal functionality of the associated RAN function. In this case, any remaining actions in the sequence of RIC Actions defined in the RIC Subscription procedure shall also be aborted.



Subsequent Action	Wait timer	Condition	Outcome
Continue or Halt	non-zero	E2 Node detected the event trigger in the RIC Event Trigger Definition IE.	RIC INDICATION message shall provide the <i>RIC Call Process ID</i> IE and E2 Node shall store current call state and suspend further processing of the associated RAN function.
Continue or Halt	not yet expired	E2 Node received the RIC CONTROL REQUEST message with the same RIC call process ID IE.	E2 Node shall use the RIC CONTROL information along with the stored call state and continue to execute any remaining actions in the sequence of RIC Actions defined in the RIC Subscription procedure prior to resuming normal functionality of the associated RAN function.
Continue	expired or was set to zero		E2 Node shall use the stored call state and continue to execute any remaining actions in the sequence of RIC Actions defined in the RIC Subscription procedure prior to resuming normal functionality of the associated RAN function.
Halt	expired or was set to zero		E2 Node shall abort normal functionality of the associated RAN function.

Table 8.2.3.2-1: RIC Indication procedure, successful operation

1

- 3 8.2.3.3 Unsuccessful Operation
- 4 Not applicable.
- 5 8.2.3.4 Abnormal Conditions
- 6 Not applicable.
- 7 8.2.4 RIC Control procedure
- 8 8.2.4.1 General
- 9 The purpose of the RIC Control procedure is to initiate or resume a specific functionality in the E2 Node.
 - 8.2.4.2 Successful Operation

11

13 14

15

16

17

18 19

20


21 22

```
@startuml

skinparam ParticipantPadding 5
skinparam BoxPadding 10
skinparam lifelineStrategy solid
participant "Near-RT RIC" as near
participant "E2 Node" as ran
ran<-near: RIC CONTROL REQUEST
ran-->near: RIC CONTROL ACKNOWLEDGE

@enduml
```



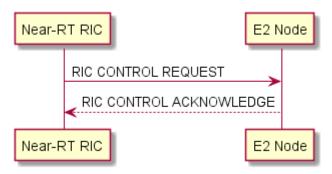

10

11

12

13

14

15

16

17

18

20

23

25

26 27 28

29

30 31

Figure 8.2.4.2-1: RIC Control procedure, successful operation

- The Near-RT RIC initiates the procedure by sending the RIC CONTROL REQUEST message containing the associated RIC Request ID IE, RAN Function ID IE, optionally RIC Call Process ID IE, RIC Control Header IE, RIC Control Message IE and optionally RIC Control Ack Request IE to the E2 Node.
- When the Near-RT RIC sends the RIC CONTROL REQUEST message and the optional *RIC Control Ack Request* IE has been set to Ack, it shall start the timer T_{RICcontrol}.
- 8 At reception of the RIC CONTROL REQUEST message the target E2 Node shall:
 - Determine the target function using the information in the *RAN Function ID* IE and initiate the requested RIC Control procedure action using information in the *RIC Control Message* IE.
 - If the *RIC Call Process ID* IE is included in the RIC CONTROL REQUEST message, the E2 Node shall use this IE to identify a specific call process that was previously announced in the RIC INDICATION message.
 - If the RIC CONTROL REQUEST message contains the *RIC Control Ack Request* IE set to "Ack" and the E2 Node has successfully processed the requested RIC Control procedure action, then the E2 Node shall respond with the RIC CONTROL ACKNOWLEDGE message.

Upon reception of the RIC CONTROL ACKNOWLEDGE message, the Near-RT RIC shall stop the timer $T_{RICcontrol}$ and terminate the RIC Control procedure. The Near-RT RIC may use the information contained in the *RIC Control Status* IE and the optional *RIC Control Outcome* IE to determine subsequent actions.

19


8.2.4.3 Unsuccessful Operation

```
@startuml

skinparam ParticipantPadding 5
skinparam BoxPadding 10
skinparam lifelineStrategy solid
participant "Near-RT RIC" as near
participant "E2 Node" as ran
ran<-near: RIC CONTROL REQUEST
ran->near: RIC CONTROL FAILURE

@enduml
```



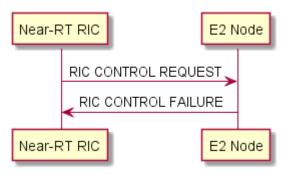

12

Figure 8.2.4.3-1: RIC Control procedure, unsuccessful operation

- If the RIC CONTROL REQUEST message contains an optional *RIC Call Process ID* IE that is invalid or refers to an expired Call Process, then the E2 Node shall respond with a RIC CONTROL FAILURE message with an appropriate cause value.
- If the E2 Node fails to perform the requested RIC Control procedure action, then the E2 Node shall respond with the RIC CONTROL FAILURE message with an appropriate cause value.
- Upon reception of the RIC CONTROL FAILURE message the Near-RT RIC shall stop the timer T_{RICcontrol,} if running, and terminate the RIC Control procedure.

10 8.2.4.4 Abnormal Conditions

- 11 If the target E2 Node receives a RIC CONTROL REQUEST message which contains a RAN Function ID IE that was
 - not previously announced as a supported RAN function in the E2 Setup procedure or the RIC Service Update
- procedure, or the E2 Node does not support the specific RIC Control procedure action, then the target E2 Node shall
- ignore message and send an ERROR INDICATION message to the Near-RT RIC.
- 15 Upon reception of the ERROR INDICATION message with Cause IE related to the RIC CONTROL REQUEST the
- Near-RT RIC shall stop the timer T_{RIC control} and terminate the RIC Control procedure.
- 17 If there is no response from the target E2 Node to the RIC CONTROL REQUEST message with the optional *RIC*
- 18 Control Ack IE set to Ack before timer T_{RICcontrol} expires in the RIC, the Near-RT RIC should send an ERROR
- 19 INDICATION with the appropriate value for the *Cause* IE.

20 8.3 Global Procedures

8.3.1 E2 Setup procedure

22 8.3.1.1 General

- The purpose of the E2 Setup procedure is to establish the signaling connection between E2 Node and Near-RT RIC.
- 24 This procedure erases any existing application level configuration data in the two nodes and replaces it by the one
- received. This procedure also resets the E2 interface like a Reset procedure would do.
- Note that this procedure performs the basic interface setup and transfers E2 Node specific configuration information to
- the Near-RT RIC.
- This procedure shall be initiated by the E2 Node.

29 8.3.1.2 Successful Operation

```
30 @startuml
31
32 skinparam ParticipantPadding 50
33 skinparam BoxPadding 10
34 skinparam lifelineStrategy solid
35
```



```
1
2
3
4
5
6
```

9

24

```
participant "Near-RT RIC" as near
participant "E2 Node" as ran

ran->near: E2 SETUP REQUEST
ran<-near: E2 SETUP RESPONSE

@enduml
```

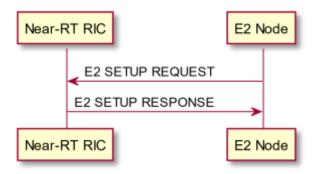



Figure 8.3.1.2-1: E2 Setup procedure, successful operation

- An E2 Node initiates the procedure by sending the E2 SETUP REQUEST message including the appropriate data to a Near-RT RIC. The Near-RT RIC replies with the E2 SETUP RESPONSE message including the appropriate data.
- If the E2 SETUP REQUEST message contains the optional *List of RAN Functions Added* IE, also present in the RIC SERVICE UPDATE message, and Near-RT RIC has successfully processed the *List of RAN Functions Added* IE, then
- Near-RT RIC shall respond with the E2 SETUP RESPONSE message which contains the *List of RAN Functions*
- 15 Accepted IE and/or the List of RAN Functions Rejected IE, also present in the RIC SERVICE UPDATE
- 16 ACKNOWLEDGE message.
- 17 If the E2 SETUP REQUEST message contains the optional E2 Node Component Configuration Update List IE, also
- present in the E2 NODE CONFIGURATION UPDATE message, and Near-RT RIC has successfully processed this
- information, then Near-RT RIC shall contain, in the E2 SETUP RESPONSE message, the E2 Node Component
- 20 Configuration Update Acknowledge List IE, also present in the E2 NODE CONFIGURATION UPDATE
- 21 ACKNOWLEDGE message.
- Note that the RIC Service Update procedure is defined in section 8.3.4 and the E2 Node Configuration Update procedure is defined in section 8.3.5.

8.3.1.3 Unsuccessful Operation

```
25
       @startuml
26
27
       skinparam ParticipantPadding 50
28
       skinparam BoxPadding 10
29
       skinparam lifelineStrategy solid
30
31
       participant "Near-RT RIC" as near
32
       participant "E2 Node" as ran
33
34
       ran->near: E2 SETUP REQUEST
35
       ran<-near: E2 SETUP FAILURE
36
       @enduml
```



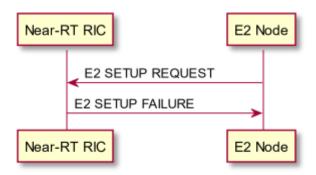

8

12

15

16 17

18

19 20

Figure 8.3.1.3-1: E2 Setup procedure, unsuccessful operation

- If the Near-RT RIC cannot accept the setup it shall respond with an E2 SETUP FAILURE message with an appropriate cause value. The Near-RT RIC may provide an alternative *Transport Layer Information* IE for the E2 Node to use when reinitiating the E2 Setup procedure towards the Near-RT RIC.
- If the E2 SETUP FAILURE message includes the *Time To Wait* IE, the E2 node shall wait at least for the indicated time before reinitiating the E2 Setup procedure towards the Near-RT RIC.

8.3.1.4 Abnormal Conditions

- If the first message received for a specific TNL association is not an E2 SETUP REQUEST, E2 SETUP RESPONSE, or E2 SETUP FAILURE message then this shall be treated as a logical error.
- 11 If the E2 node does not receive either the E2 SETUP RESPONSE message or the E2 SETUP FAILURE message, the
 - E2 node may reinitiate the E2 Setup procedure towards the same Near-RT RIC using the same TNL association,
- provided that the content of the new E2 SETUP REQUEST message is identical to the content of the previously
- unacknowledged E2 SETUP REQUEST message.

8.3.2 Reset procedure

8.3.2.1 General

The purpose of the Reset procedure is to align the resources in E2 Node and Near-RT RIC in the event of an abnormal failure. The procedure resets the E2 interface. This procedure doesn't affect the application level configuration data exchanged during the E2 Setup procedure, E2 Node Configuration Update procedure and RIC Service Update procedure.

21

22

23

8.3.2.2 Successful Operation

This procedure may be initiated by either Near-RT RIC or E2 Node.

```
25
       @startuml
26
27
       skinparam ParticipantPadding 5
28
       skinparam BoxPadding 10
29
       skinparam lifelineStrategy solid
30
       participant "Near-RT RIC" as near
31
32
       participant "E2 Node" as ran
33
34
       ran->near: RESET REQUEST
       ran<-near: RESET RESPONSE
35
36
       @enduml
```



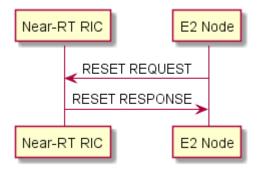


Figure 8.3.2.2-1: Reset, successful operation (E2 Node Initiated)

```
4
5
6
7
8
9
10
11
12
13
14
15
```

```
@startuml
skinparam ParticipantPadding 5
skinparam BoxPadding 10
skinparam lifelineStrategy solid

participant "Near-RT RIC" as near
participant "E2 Node" as ran

ran<-near: RESET REQUEST
ran->near: RESET RESPONSE

@enduml
```

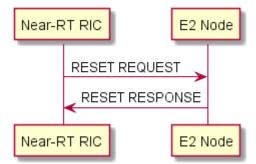


Figure 8.3.2.2-2: Reset, successful operation (Near-RT RIC Initiated)

- When the Reset procedure is initiated, the Near-RT RIC and E2 Node shall:
 - Delete any pre-established RIC Subscriptions,
 - Gracefully terminate any ongoing Near-RT RIC call processes using **INSERT**, **CONTROL** or **POLICY** services while ensuring that impact to ongoing calls for connected UE is minimized.
 - After the Reset has been completed, the Near-RT RIC shall re-issue any required Subscriptions.
- 24 Interactions with other procedures:
- If the RESET REQUEST message is received, any other ongoing procedure (except for another Reset procedure) on the same E2 interface related to ongoing RIC Services shall be aborted.

- 8.3.2.3 Unsuccessful Operation
- 29 Void.



8.3.2.4 Abnormal Conditions

- 2 If the initiating node does not receive the RESET RESPONSE message, the initiating node may reinitiate the Reset
- 3 procedure towards the same target node, provided that the content of the new RESET REQUEST message is identical to
- 4 the content of the previously unacknowledged RESET REQUEST message.

8.3.3 Error Indication 5

8.3.3.1 General

1

8

9

19 20

27

31

32

- 7 The Error Indication procedure is initiated by either the E2 Node or the Near-RT RIC to report detected errors in one
 - incoming message, provided they cannot be reported by an appropriate failure message.

8.3.3.2 Successful Operation

```
10
        @startuml
11
12
        skinparam ParticipantPadding 5
13
        skinparam BoxPadding 10
14
        skinparam lifelineStrategy solid
        participant "Near-RT RIC" as near participant "E2 Node" as ran
15
16
17
        ran->near: ERROR INDICATION
18
        @enduml
```

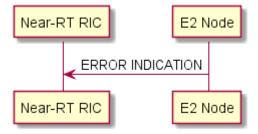


Figure 8.3.3.2-1: Error Indication, (E2 Node initiated) successful operation.

```
@startuml
23
       skinparam ParticipantPadding 5
24
       skinparam BoxPadding 10
25
       skinparam lifelineStrategy solid
       participant "Near-RT RIC" as near
26
       participant "E2 Node" as ran
28
       ran<-near: ERROR INDICATION
29
30
       @enduml
```

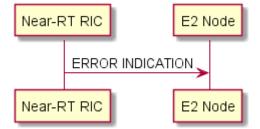


Figure 8.3.3.2-2: Error Indication, (Near-RT RIC Initiated) successful operation.

33 When the conditions defined in clause 10 are fulfilled, the Error Indication procedure is initiated by an ERROR 34 INDICATION message sent from the node detecting the error situation.



- The ERROR INDICATION message shall contain at least either the Cause IE or the Criticality Diagnostics IE and may
- 2 include RAN Function ID IE and RIC Request ID IE.
- 3 8.3.3.3 Unsuccessful Operation
- 4 Not applicable.
- 5 8.3.3.4 Abnormal Conditions
- 6 Not applicable.
- 7 8.3.4 RIC Service Update procedure
- 8 8.3.4.1 General

12

25

26

- The purpose of the RIC Service Update procedure is to update application level configuration data needed for E2 Node and Near-RT RIC to interoperate correctly over the E2 interface.
 - 8.3.4.2 Successful Operation

13 @startuml 15 skinparam ParticipantPadding 5 16 skinparam BoxPadding 10 17 skinparam lifelineStrategy solid 18 participant "Near-RT RIC" as near 19 participant "E2 Node" as ran 20 ran<--near: RIC SERVICE QUERY 21 ran->near: RIC SERVICE UPDATE ran<-near: RIC SERVICE UPDATE ACKNOWLEDGE 23 24 @enduml

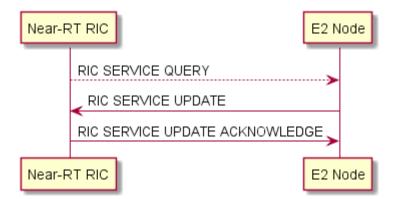


Figure 8.3.4.2-1: RIC Service Update procedure, successful operation

An E2 Node initiates the procedure by sending a RIC SERVICE UPDATE message to the Near-RT RIC. Such message shall include an appropriate set of up-to-date Near-RT RIC service-related configuration data, including, but not limited to, the complete lists of added, modified and deleted supported Near-RT RIC Service functions that E2 Node has just taken into operational use along with a revision counter for each item in each list.

- Upon reception of a RIC SERVICE UPDATE message, Near-RT RIC shall update the information for E2 Node as follows:
- 33 Update of Supported Near-RT RIC service Information:



3

4

5

6

7 8

g

10

11

22

23

24

25 26

27

28

29

30 31 32

33

34 35

36

37

- If the List of RAN Function Added IE is contained in the RIC SERVICE UPDATE message, Near-RT RIC shall add each listed accepted function information according to the information in the RAN Function ID IE and RAN Function Definition IE and store the corresponding RAN Function Revision IE.
- If the List of RAN Function Modified IE is contained in the RIC SERVICE UPDATE message, Near-RT RIC shall modify accepted information of supported functions according to the information in the RAN Function Definition IE and update the corresponding RAN Function Revision IE.
- If the List of RAN Function Deleted IE is contained in the RIC SERVICE UPDATE message, Near-RT RIC shall delete information of RAN Function indicated by the RAN Function ID IE along with the corresponding RAN Function Revision IE.
- These changes may be processed in the Near-RT-RIC and may be used when issuing RIC SUBSCRIPTION REQUEST and RIC CONTROL to provide valid RAN Function ID IE.
- 12 After successful update of requested information, Near-RT RIC shall reply with the RIC SERVICE UPDATE 13
 - ACKNOWLEDGE message to inform the initiating E2 Node that the requested update of application data was
- 14 performed successfully. In case the Near-RT RIC receives a RIC SERVICE UPDATE message without any IE except
- for Message Type IE, it shall reply with RIC SERVICE UPDATE ACKNOWLEDGE message without performing any 15
- updates to the existing configuration. 16
- 17 Optionally, the RIC SERVICE UPDATE message to the Near-RT RIC may have been sent as a response to the Near-
- RT RIC initiated RIC SERVICE QUERY message. In this case the E2 Node shall use the Near-RT RIC supplied RAN 18
- 19 Function Accepted IE to prepare the RAN Function Added IE, RAN Function Modified IE and/or RAN Function Deleted
- 20 IE to ensure realignment between the E2 Node and the Near-RT RIC in terms of the current list and revision of
- 21 supported Near-RT RIC Service functions that the E2 Node has just taken into operational use.

8.3.4.3 Unsuccessful Operation

```
@startuml
skinparam ParticipantPadding 5
skinparam BoxPadding 10
skinparam lifelineStrategy solid
participant "Near-RT RIC"
                              as near
participant "E2 Node" as ran ran<--near: RIC SERVICE QUERY
ran->near: RIC SERVICE UPDATE
ran<-near: RIC SERVICE UPDATE FAILURE
@enduml
```

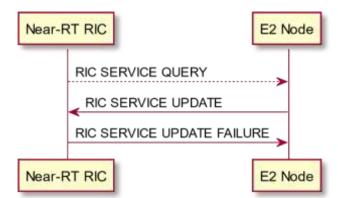


Figure 8.3.4.3-1: RIC Service Update procedure, unsuccessful operation

If the Near-RT RIC cannot accept the update it shall respond with a RIC SERVICE UPDATE FAILURE message and 38 appropriate cause value. 39



- If the RIC SERVICE UPDATE FAILURE message includes the *Time To Wait* IE, the E2 Node shall wait at least for
- the indicated time before reinitiating the RIC Service Update procedure towards the same Near-RT RIC. Both nodes
- 3 shall continue to operate the E2 with their existing Near-RT RIC Service data.

4 8.3.4.4 Abnormal Conditions

- 5 If the E2 Node after initiating a RIC Service Update procedure receives neither the RIC SERVICE UPDATE
- 6 ACKNOWLEDGE message nor the RIC SERVICE UPDATE FAILURE message, the E2 Node may reinitiate the RIC
- 7 Service Update procedure towards the same Near-RT RIC, provided that the content of the new RIC SERVICE
- 8 UPDATE message is identical to the content of the previously unacknowledged RIC SERVICE UPDATE message.
- 9 If the E2 Node receives a RIC SERVICE QUERY message with one or more unknown entries in the List of RAN
- 10 Functions Accepted IE, then the E2 Node shall ignore this list and resume with a complete list of supported functions.

8.3.5 E2 Node Configuration Update procedure

8.3.5.1 General

11

13

15

16

17

18 19

20

22

23

25

26

28

29

30 31

32

- The purpose of the E2 Node Configuration Update procedure is to update application level E2 Node configuration data
- needed for E2 Node and Near-RT RIC to interoperate correctly over the E2 interface.

8.3.5.2 Successful Operation

@startuml

skinparam ParticipantPadding 5
skinparam BoxPadding 10
skinparam lifelineStrategy solid
participant "Near-RT RIC" as near
participant "E2 Node" as ran
ran->near: E2 NODE CONFIGURATION UPDATE
ran<-near: E2 NODE CONFIGURATION UPDATE ACKNOWLEDGE

@enduml

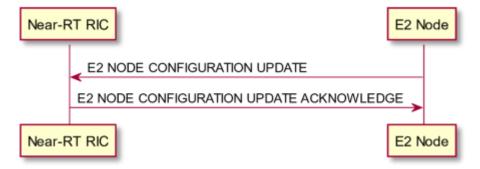


Figure 8.3.5.2-1: E2 Node Configuration Update procedure, successful operation

An E2 Node initiates the procedure by sending a E2 NODE CONFIGURATION UPDATE message to the Near-RT RIC. Such message shall include an appropriate set of up-to-date E2 Node-related configuration data that the E2 Node has just taken into operational use.

- Upon reception of the E2 NODE CONFIGURATION UPDATE message, Near-RT RIC shall update the information for the E2 Node as follows:
- Update of E2 Node configuration information in Near-RT RIC:



 If E2 Node Component Configuration Update Item IE is contained in the E2 NODE CONFIGURATION UPDATE message, Near-RT RIC shall add, modify and/or delete the E2 Node Component Configuration information accordingly.

After successful update of requested information, Near-RT RIC shall reply with the E2 NODE CONFIGURATION UPDATE ACKNOWLEDGE message to inform the initiating E2 Node that the requested update of application data was performed successfully. In case the Near-RT RIC receives a E2 NODE CONFIGURATION UPDATE message without any IE except for *Message Type* IE it shall reply with the E2 NODE CONFIGURATION UPDATE ACKNOWLEDGE message without performing any updates to the existing configuration.

8.3.5.3 Unsuccessful Operation

```
@startuml
skinparam ParticipantPadding 5
skinparam BoxPadding 10
skinparam lifelineStrategy solid
participant "Near-RT RIC" as near
participant "E2 Node" as ran
ran->near: E2 NODE CONFIGURATION UPDATE
ran<-near: E2 NODE CONFIGURATION UPDATE FAILURE

@enduml</pre>
```

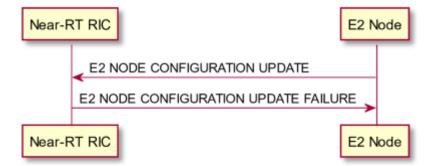


Figure 8.3.5.3-1: E2 Node Configuration Update procedure, unsuccessful operation

If Near-RT RIC cannot accept the E2 NODE CONFIGURATION UPDATE message it shall respond with the E2 NODE CONFIGURATION UPDATE FAILURE message and appropriate cause value.

If the E2 NODE CONFIGURATION UPDATE FAILURE message includes the *Time To Wait* IE the E2 Node shall wait at least for the indicated time before reinitiating the E2 Node Configuration Update procedure towards the same Near-RT RIC. Both nodes shall continue to operate with their existing configuration data.

8.3.5.4 Abnormal Conditions

If an E2 Node, after initiating the E2 Node Configuration Update procedure, receives neither the E2 NODE
CONFIGURATION UPDATE ACKNOWLEDGE message nor the E2 NODE CONFIGURATION UPDATE
FAILURE message, the E2 Node may reinitiate the E2 Node Configuration Update procedure towards the same Near-RT RIC, provided that the content of the new E2 NODE CONFIGURATION UPDATE message is identical to the content of the previously unacknowledged E2 NODE CONFIGURATION UPDATE message.

8.3.6 E2 Connection Update procedure

8.3.6.1 General

The purpose of the E2 Connection Update procedure is to update the E2 interface connection between the E2 Node and Near-RT RIC.



8.3.6.2 Successful Operation

```
@startuml

skinparam ParticipantPadding 5
skinparam BoxPadding 10
skinparam lifelineStrategy solid
participant "Near-RT RIC" as near
participant "E2 Node" as ran
near->ran: E2 CONNECTION UPDATE
near<-ran: E2 CONNECTION UPDATE ACKNOWLEDGE

@enduml
```

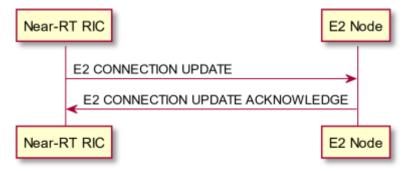


Figure 8.3.6.2-1: E2 Connection Update procedure, successful operation

The Near-RT RIC initiates the procedure by sending a E2 CONNECTION UPDATE message to the E2 Node. Such message shall include an appropriate set of up-to-date E2 interface connection data that the E2 Node shall take into account when modifying the E2 interface connection.


- Upon reception of a E2 CONNECTION UPDATE message, the E2 Node shall update as follows:
- If E2 Connection To Add List IE is contained in the E2 CONNECTION UPDATE message, then the E2 Node shall, if supported, use it to establish additional TNL Association(s) and configure for use for RIC services and/or E2 support functions according to the TNL Association Usage IE in the message.
- If E2 Connection To Modify List IE is contained in the E2 CONNECTION UPDATE message, then the E2 Node shall, if supported, use it to modify the existing usage for RIC services and/or E2 support functions, according to the TNL Association Usage IE in the message.
 - If E2 Connection To Remove List IE is contained in the E2 CONNECTION UPDATE message, then the E2 Node shall, if supported, use it to remove the existing connection(s). If only one connection remains after successful removal of other connections, the E2 Node shall use this remaining connection for all the RIC services and E2 support functions.
 - After successful update of E2 interface connection(s), the E2 Node shall reply with the E2 CONNECTION UPDATE ACKNOWLEDGE message to inform the initiating Near-RT RIC that the requested E2 connection update was performed successfully. In case the E2 Node receives a E2 CONNECTION UPDATE message without any IE except for *Message Type* IE, it shall reply with the E2 CONNECTION ACKNOWLEDGE message without performing any updates to the existing connections.

8.3.6.3 Unsuccessful Operation

```
@startuml

skinparam ParticipantPadding 5
skinparam BoxPadding 10
skinparam lifelineStrategy solid
participant "Near-RT RIC" as near
participant "E2 Node" as ran
near->ran: E2 CONNECTION UPDATE
near<-ran: E2 CONNECTION UPDATE FAILURE
```

@enduml

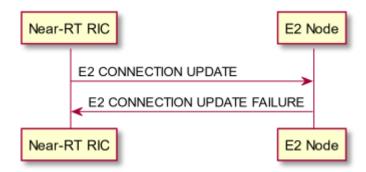

2

Figure 8.3.6.3-1: E2 Connection Update procedure, unsuccessful operation

- If the E2 Node cannot accept the update, it shall respond with a E2 CONNECTION UPDATE FAILURE message and appropriate cause value.
- If the E2 CONNECTION UPDATE FAILURE message includes the *Time To Wait* IE, the Near-RT RIC shall wait at least for the indicated time before reinitiating the E2 Connection Update procedure towards the same E2 Node. Both nodes shall continue to operate with their existing connection(s).

9 8.3.6.4 Abnormal Conditions

- 10 If the Near-RT RIC, after initiating E2 Connection Update procedure, receives neither the E2 CONNECTION
 - UPDATE ACKNOWLEDGE message nor the E2 CONNECTION UPDATE FAILURE message, the Near-RT RIC
- may reinitiate the E2 Connection Update procedure towards the same E2 Node, provided that the content of the new E2
 - CONNECTION UPDATE message is identical to the content of the previously unacknowledged E2 CONNECTION
- 14 UPDATE message.

5

16

11

13

9 Elements for E2AP Communication

17 9.0 General

- Sub clauses 9.1 and 9.2 describe the structure of the messages and information elements required for the E2AP protocol in tabular format. Sub clause 9.3 provides the corresponding ASN.1 definition.
- The following attributes are used for the tabular description of the messages and information elements: Presence, Range Criticality and Assigned Criticality. Their definition and use can be found in TS 36.413 [13].
- NOTE: The messages have been defined in accordance to the guidelines specified in TR 25.921 [14].

9.1 Message Functional Definition and Content

9.1.1 Messages for Near-RT RIC Functional Procedures

9.1.1.1 RIC SUBSCRIPTION REQUEST

- This message is sent by the Near-RT RIC to an E2 Node to create a new Subscription in the E2 Node.
- 27 Direction: Near-RT RIC \rightarrow E2 Node.



IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3		YES	reject
RIC Request ID	M		9.2.7		YES	reject
RAN Function ID	M		9.2.8		YES	reject
RIC Subscription Details	M				YES	reject
>RIC Event Trigger Definition	М		9.2.9		-	
>Sequence of Actions		1 <maxofricactio nID></maxofricactio 			EACH	ignore
>>RIC Action ID	M		9.2.10		-	
>>RIC Action Type	M		9.2.11		-	
>>RIC Action Definition	0		9.2.12		-	
>>RIC Subsequent Action	0		9.2.13		-	

Range bound	Explanation
maxofRICActionID	Maximum no. of Actions to be requested by Near-RT RIC. Value is
	16.

9.1.1.2 RIC SUBSCRIPTION RESPONSE

This message is sent by the E2 Node to accept the request from the Near-RT RIC to create a new Subscription in the E2 5 Node.

6 Direction: E2 Node → Near-RT RIC.

3

9

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3		YES	reject
RIC Request ID	M		9.2.7		YES	reject
RAN Function ID	M		9.2.8		YES	reject
RIC Actions Admitted List		1 <maxofricactio nID></maxofricactio 			YES	reject
>RIC Action ID	M		9.2.10		-	
RIC Actions Not Admitted List		0 <maxofricactio nID></maxofricactio 			YES	reject
>RIC Action ID	M		9.2.10		-	
>Cause	M		9.2.1		-	

Range bound	Explanation
maxofRICActionID	Maximum no. of Actions to be requested by Near-RT RIC. Value is
	16.

9.1.1.3 RIC SUBSCRIPTION FAILURE

10 This message is sent by the E2 Node to inform the Near-RT RIC that the request to create a new Subscription in the E2 Node failed. 11

Direction: E2 Node → Near-RT RIC. 12



2

3

7

8

12

13

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3		YES	reject
RIC Request ID	M		9.2.7		YES	reject
RAN Function ID	М		9.2.8		YES	reject
RIC Actions Not Admitted List		1 <maxofricactio nID></maxofricactio 			YES	reject
>RIC Action ID	М		9.2.10		-	
>Cause	M		9.2.1		•	
Criticality Diagnostics	0		9.2.2		YES	ignore

Range bound	Explanation
maxofRICActionID	Maximum no. of Actions to be requested by Near-RT RIC. Value is 16.

9.1.1.4 RIC SUBSCRIPTION DELETE REQUEST

- This message is sent by the Near-RT RIC to an E2 Node to request the deletion of an existing Subscription in the E2
- Node previously created for the Near-RT RIC. 5
- Direction: Near-RT RIC → E2 Node. 6

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3		YES	reject
RIC Request ID	M		9.2.7		YES	reject
RAN Function ID	М		9.2.8		YES	reject

9.1.1.5 RIC SUBSCRIPTION DELETE RESPONSE

- This message is sent by the E2 Node to accept the request from a Near-RT RIC to delete an existing Subscriptionin the E2 Node 10
- 11 Direction: E2 Node → Near-RT RIC.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3		YES	reject
RIC Request ID	M		9.2.7		YES	reject
RAN Function ID	M		9.2.8		YES	reject

9.1.1.6 RIC SUBSCRIPTION DELETE FAILURE

- This message is sent by the E2 Node to inform the Near-RT RIC that the request to delete an existing Subscription in 14 the E2 Node failed. 15
- 16 Direction: E2 Node → Near-RT RIC.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3		YES	reject
RIC Request ID	M		9.2.7		YES	reject
RAN Function ID	M		9.2.8		YES	reject
Cause	M		9.2.1		YES	ignore
Criticality Diagnostics	0		9.2.2		YES	ignore



4

8

9

13

14

9.1.1.7 RIC INDICATION

- 2 This message is sent by an E2 Node to transfer Report information to a Near-RT RIC.
- 3 Direction: E2 Node \rightarrow Near-RT RIC.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3		YES	reject
RIC Request ID	M		9.2.7		YES	reject
RAN Function ID	M		9.2.8		YES	reject
RIC Action ID	M		9.2.10		YES	reject
RIC Indication SN	0		9.2.14		YES	reject
RIC Indication Type	M		9.2.15		YES	reject
RIC Indication Header	M		9.2.17		YES	reject
RIC Indication Message	M		9.2.16		YES	reject
RIC Call process ID	0		9.2.18		YES	reject

9.1.1.8 RIC CONTROL REQUEST

- This message is sent by a Near-RT RIC to an E2 Node to initiate or resume a control function logic.
- 7 Direction: Near-RT RIC \rightarrow E2 Node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3		YES	reject
RIC Request ID	M		9.2.7		YES	reject
RAN Function ID	M		9.2.8		YES	reject
RIC Call Process ID	0		9.2.18		YES	reject
RIC Control Header	M		9.2.20		YES	reject
RIC Control Message	M		9.2.19		YES	reject
RIC Control Ack Request	0		9.2.21		YES	reject

9.1.1.9 RIC CONTROL ACKNOWLEDGE

- This message is sent by the E2 Node to inform the Near-RT RIC that the RIC CONTROL REQUEST message was received and to provide information on the outcome of the request.
- 12 Direction: E2 Node \rightarrow Near-RT RIC.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3		YES	reject
RIC Request ID	M		9.2.7		YES	reject
RAN Function ID	M		9.2.8		YES	reject
RIC Call process ID	0		9.2.18		YES	reject
RIC Control Status	M		9.2.22		YES	reject
RIC Control Outcome	0		9.2.25		YES	reiect

9.1.1.10 RIC CONTROL FAILURE

- This message is sent by the E2 Node to inform the Near-RT RIC that the RIC CONTROL REQUEST message was
- failed to be executed.
- 17 Direction: E2 Node \rightarrow Near-RT RIC.



IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3		YES	reject
RIC Request ID	M		9.2.7		YES	reject
RAN Function ID	M		9.2.8		YES	reject
RIC Call process ID	0		9.2.18		YES	reject
Cause	M		9.2.1		YES	ignore
RIC Control Outcome	0		9.2.25		YES	reject

2



9.1.2 Messages for Global Procedures

3 9.1.2.1 ERROR INDICATION

- This message is used to indicate that some error has been detected in the E2 Node or Near-RT RIC.
- 5 Direction: E2 Node → Near-RT RIC or Near-RT RIC → E2 Node.

o

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3		YES	ignore
RIC Request ID	0		9.2.7		YES	reject
RAN Function ID	0		9.2.8		YES	reject
Cause	0		9.2.1		YES	ignore
Criticality Diagnostics	0		9.2.2		YES	ignore

8

_

10

9.1.2.2 E2 SETUP REQUEST

- This message is sent by an E2 Node to a Near-RT RIC to transfer the initialization information.
- 12 Direction: E2 Node → Near-RT RIC



IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.3	_	YES	reject
Global E2 Node ID	M		9.2.6		YES	reject
List of RAN Functions Added		0 <maxofranfunct ionID></maxofranfunct 			YES	reject
>RAN Function ID	М		9.2.8	Id of the declared Function	-	
>RAN Function Definition	М		9.2.23	Definition of Function	-	
>RAN Function Revision	М		9.2.24	Revision counter	-	
>RAN Function OID	0		9.2.31	Object identifier of corresponding E2SM	-	
E2 Node Component Configuration Update List		01			YES	reject
>E2 Node Component Configuration Update Item		1 <maxofe2nodec omponents></maxofe2nodec 			EACH	reject
>>E2 Node Component Type	М		9.2.26	E2 Node component type	-	
>>E2 Node Component ID	0		9.2.32	E2 Node Component Identifier	-	
>>E2 Node Component Configuration Update	М		9.2.27	Contents depends on component type	-	

Range bound	Explanation
maxofRANfunctionID	Maximum no. of RAN Functions supported by E2 Node. Value is 256.
maxofE2nodeComponents	Maximum no. of E2 Node components supported by E2 Node. Value is 1024

9.1.2.3 E2 SETUP RESPONSE

- 3 This message is sent by a Near-RT RIC to an E2 Node to transfer the initialization information.
- Direction: Near-RT RIC →E2 Node



IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.3		YES	reject
Global RIC ID	M		9.2.4		YES	reject
List of RAN Functions Accepted		0 <maxofranfunct ionID></maxofranfunct 		Complete list of Functions accepted by Near-RT RIC	YES	Reject
>RAN Function ID	M		9.2.8	ld of the declared Function	-	
List of RAN Functions Rejected		0 <maxofranfunct ionID></maxofranfunct 		Complete list of Functions not accepted by Near-RT RIC	YES	reject
>RAN Function ID	M		9.2.8	ld of the declared Function	-	
>Cause	M		9.2.1	Reason for not accepting function	-	
E2 Node Component Configuration Update Acknowledge List		0 <maxofe2nodec omponents></maxofe2nodec 		Complete list of E2 Node Components in the E2 SETUP REQUEST message	YES	reject
>E2 Node Component Configuration Update Acknowledge Item					EACH	reject
>>E2 Node Component Type	М		9.2.26	E2 Node component type	-	
>>E2 Node Component ID	0		9.2.32	E2 Node Component Identifier	-	
>>E2 Node Component Configuration Update Acknowledge	М		9.2.28	Success or failure with Cause	-	

Range bound	Explanation
maxofRANfunctionID	Maximum no. of RAN Functions supported by E2 Node. Value is 256.
maxofE2nodeComponents	Maximum no. of E2 Node components supported by E2 Node. Value is 1024

9.1.2.4 E2 SETUP FAILURE

- This message is sent by the Near-RT RIC to indicate E2 Setup failure. 4
- 5 Direction: Near-RT RIC \rightarrow E2 Node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3		YES	reject
Cause	M		9.2.1		YES	ignore
Time To Wait	0		9.2.5		YES	ignore
Criticality Diagnostics	0		9.2.2		YES	Ignore
Transport Layer Information	0		9.2.29		YES	ignore

2



9.1.2.5 RESET REQUEST

- This message is sent from a Near-RT RIC to an E2 Node or from an E2 Node to a Near-RT RIC and is used to request
- 3 the E2 interface between the E2 node and the Near-RT RIC to be reset.
- 4 Direction: Near-RT RIC → E2 Node, or E2 Node → Near-RT RIC

5

1

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3		YES	reject
Cause	M		9.2.1		YES	ignore

6

7

9.1.2.6 RESET RESPONSE

- 8 This message is sent by an E2 Node to a Near-RT RIC or from a Near-RT RIC to an E2 Node as a response to a RESET
- 9 REQUEST message.
- 10 Direction: Near-RT RIC → E2 Node, or E2 Node → Near-RT RIC

11

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.3		YES	reject
Criticality Diagnostics	0		9.2.2		YES	ignore

12

13

9.1.2.7 RIC SERVICE UPDATE

- 14 This message is sent by an E2 Node to the Near-RT RIC to transfer updated information on RIC Services supported by
- the E2 Node.
- 16 Direction: E2 Node → Near-RT RIC



IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.3	-	YES	reject
List of RAN Functions Added		0 <maxofranfunc tionID></maxofranfunc 			YES	reject
>RAN Function ID	М		9.2.8	Id of the declared Function	-	
>RAN Function Definition	М		9.2.23	Definition of Function	-	
>RAN Function Revision	М		9.2.24	Revision counter	-	
>RAN Function OID	0		9.2.31	Object identifier of corresponding E2SM	-	
List of RAN Functions Modified		0 <maxofranfunc tionID></maxofranfunc 			YES	reject
>RAN Function ID	М		9.2.8	Id of the declared Function	-	
>RAN Function Definition	М		9.2.23	Definition of Function	-	
>RAN Function Revision	М		9.2.24	Revision counter	-	
>RAN Function OID	0		9.2.31	Object identifier of corresponding E2SM	-	
List of RAN Functions Deleted		0 <maxofranfunc tionID></maxofranfunc 			YES	reject
>RAN Function ID	М		9.2.8	Id of the declared Function	-	
>RAN Function Revision	М		9.2.24	Revision counter	-	

Range bound	Explanation				
maxofRANfunctionID	Maximum no. of Functions accepted by Near-RT RIC. Value is 256.				

9.1.2.8 RIC SERVICE UPDATE ACKNOWLEDGE

- This message is sent by the Near-RT RIC to the E2 Node to acknowledge update of RIC Services supported by the E2
- Node.

1

2

3

Direction: Near-RT RIC \rightarrow E2 Node. 6



IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3		YES	reject
List of RAN Functions Accepted		0 <maxofranfunct ionID></maxofranfunct 		Complete list of Functions accepted by Near-RT RIC	YES	reject
>RAN Function ID	M		9.2.8	Id of the declared Function	-	
>RAN Function Revision	M		9.2.24	Revision counter	-	
List of RAN Functions Rejected		0 <maxofranfunct ionID></maxofranfunct 		Complete list of Functions not accepted by Near-RT RIC	YES	reject
>RAN Function ID	M		9.2.8	Id of the declared Function	-	
>Cause	M		9.2.1	Reason for not accepting function	-	

Range bound	Explanation				
maxofRANfunctionID	Maximum no. of Functions accepted by Near-RT RIC. Value is 256.				

9.1.2.9 RIC SERVICE UPDATE FAILURE

4 This message is sent by the Near-RT RIC to the E2 Node to indicate RIC SERVICE Update Failure.

5 Direction: Near-RT RIC \rightarrow E2 Node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.3		YES	reject
List of RAN Functions Rejected		1 <maxofranfunct ionID></maxofranfunct 		Complete list of Functions not accepted by Near-RT RIC	YES	reject
>RAN Function ID	M		9.2.8	ld of the declared Function	-	
>Cause	M		9.2.1	Reason for not accepting function	-	
Time To Wait	0		9.2.5		YES	ignore
Criticality Diagnostics	0		9.2.2		YES	ignore

Range bound	Explanation
maxofRANfunctionID	Maximum no. of Functions accepted by Near-RT RIC. Value is 256.

9.1.2.10 RIC SERVICE QUERY

- This message is sent by a Near-RT RIC to an E2 Node to request a E2 Node initiated RIC Service Update procedure.
- 10 Direction: Near-RT RIC \rightarrow E2 Node.

6

8

1

2



2

3

7

8

9

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.3		YES	reject
List of RAN Functions Accepted		0 <maxofranfunct ionID></maxofranfunct 		Complete list of Functions previously accepted by Near-RT RIC	YES	reject
>RAN Function ID	M		9.2.8	ld of the declared Function	-	
>RAN Function Revision	M		9.2.24	Revision counter	-	

Range bound	Explanation
maxofRANfunctionID	Maximum no. of Functions accepted by Near-RT RIC. Value is 256.

E2 NODE CONFIGURATION UPDATE 9.1.2.11

- This message is sent by an E2 Node to the Near-RT RIC to transfer updated information on the E2 Node Configuration 4 information. 5
- Direction: E2 Node → Near-RT RIC 6

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.3		YES	reject
E2 Node Component Configuration Update List		0 <maxofe2nodec omponents></maxofe2nodec 			YES	reject
>E2 Node Component Configuration Update Item					EACH	reject
>>E2 Node Component Type	М		9.2.26	E2 Node component type	-	
>>E2 Node Component ID	0		9.2.32	E2 Node Component Identifier	-	
>>E2 Node Component Configuration Update	М		9.2.27	Contents depends on component type	-	

Range bound	Explanation
maxofE2nodeComponents	Maximum no. of E2 Node components supported by E2 Node.
	Value is 1024.

9.1.2.12 E2 NODE CONFIGURATION UPDATE ACKNOWLEDGE

- 10 This message is sent by Near-RT RIC to E2 Node to acknowledge update of E2 Node Configuration supported by the 11 E2 Node.
- 12 Direction: Near-RT RIC \rightarrow E2 Node.



IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3	_	YES	reject
E2 Node Component Configuration Update Acknowledge List		0 <maxofe2node Components></maxofe2node 			YES	reject
>E2 Node Component Configuration Update Acknowledge Item					EACH	reject
>>E2 Node Component Type	M		9.2.26	E2 Node component type	-	
>>E2 Node Component ID	0		9.2.32	E2 Node Component Identifier	-	
>>E2 Node Component Configuration Update Acknowledge	М		9.2.28	Success or failure with Cause	-	

Range bound	Explanation
maxofE2nodeComponents	Maximum no. of E2 Node components supported by E2 Node. Value is 1024.

9.1.2.13 E2 NODE CONFIGURATION UPDATE FAILURE

This message is sent by Near-RT RIC to E2 Node to indicate RAN Configuration Update Failure.

Direction: Near-RT RIC \rightarrow E2 Node 5

1

2

3

6

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.3		YES	reject
Cause	M		9.2.1	Cause	YES	reject
Time To Wait	0		9.2.5		YES	ignore
Criticality Diagnostics	0		9.2.2		YES	ignore

9.1.2.14 E2 CONNECTION UPDATE

This message is sent by Near-RT RIC to E2 Node to initiate update of E2 Connection supported by the E2 Node.

Direction: Near-RT RIC → E2 Node.



IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.3		YES	reject
E2 Connection To Add List		01			YES	ignore
>E2 Connection to Add Item IEs		1 <maxoftnla></maxoftnla>			EACH	ignore
>>Transport Layer Information	М		9.2.29	Transport layer address and port number of Near-RT RIC		
>>TNL Association Usage	М		9.2.30	Indicates how E2 connection is to be used		
E2 Connection To Remove List		01			YES	ignore
>E2 Connection to Remove Item IEs		1 <maxoftnla></maxoftnla>			EACH	ignore
>>Transport Layer Information	М		9.2.29	Transport layer address and port number of Near-RT RIC		
E2 Connection To Modify List		01			YES	ignore
>E2 Connection to Modify Item IEs		1 <maxoftnla></maxoftnla>			EACH	ignore
>>Transport Layer Information	М		9.2.29	Transport layer address and port number of Near-RT RIC		
>>TNL Association Usage	M		9.2.30	Indicates how E2 connection is to be used		

Range bound	Explanation
maxofTNLA	Maximum no. of TNL Associations supported by E2 Node. Value is 32.

9.1.2.15 **E2 CONNECTION UPDATE ACKNOWLEDGE**

- This message is sent by E2 Node to the Near-RT RIC to acknowledge update of E2 Connection supported by the E2 Node. 5
- Direction: E2 Node → Near-RT RIC. 6

3



IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3	_	YES	reject
E2 Connection Setup List		01			YES	ignore
>E2 Connection Setup Item IEs		1 <maxoftnla></maxoftnla>			EACH	ignore
>>Transport Layer Information	М		9.2.29	Transport layer address and port number of Near-RT RIC		
>>TNL Association Usage	М		9.2.30	Indicates how E2 connection is to be used		
E2 Connection Failed to Setup List		01			YES	ignore
>E2 Connection failed to setup Item IEs		1 <maxoftnla></maxoftnla>			EACH	ignore
>>Transport Layer Information	М		9.2.29	Transport layer address and port number of Near-RT RIC		
>>Cause	М		9.2.1			

Range bound	Explanation
maxofTNLA	Maximum no. of TNL Associations supported by E2 Node. Value is 32.

9.1.2.16 E2 CONNECTION UPDATE FAILURE

This message is sent by E2 Node to the Near-RT RIC to inform failure of the requested E2 Connection updates.

6 Direction: E2 Node → Near-RT RIC.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3		YES	reject
Cause	M		9.2.1		YES	reject
Time To Wait	0		9.2.5		YES	ignore
Criticality Diagnostics	0		9.2.2		YES	ignore

9.2 Information Element definitions

9.2.0 General

When specifying information elements which are to be represented by bit strings, if not otherwise specifically stated in the semantics description of the concerned IE or elsewhere, the following principle applies with regards to the ordering of bits:

- The first bit (leftmost bit) contains the most significant bit (MSB);
- The last bit (rightmost bit) contains the least significant bit (LSB);
- When importing bit strings from other specifications, the first bit of the bit string contains the first bit of the concerned information.

3

7 8

12

13



9.2.1 Cause

1

2 The purpose of the *Cause* IE is to indicate the reason for a particular event for the E2AP protocol.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE Cause Group	M			·
>RIC services				
>>RIC Request	0		ENUMERATED (RAN Function ID Invalid, Action not supported, Excessive actions, Duplicate action, Duplicate Event Trigger, Function resource limit, RIC Request ID unknown, Inconsistent Action/subsequent Action sequence, Control message invalid, RIC Call process ID Invalid, unspecified,)	
>>RIC Service	0		ENUMERATED (Function Not Required, Excessive functions, RIC Resource Limit,)	
>Transport Layer				
>>Transport Layer Cause	М		ENUMERATED (Unspecified, Transport Resource Unavailable,)	
>Protocol				
>>Protocol Cause	M		ENUMERATED (Transfer Syntax Error, Abstract Syntax Error (Reject), Abstract Syntax Error (Ignore and Notify), Message not Compatible with Receiver State, Semantic Error, Abstract Syntax Error (Falsely Constructed Message), Unspecified,)	
>Misc				
>>Miscellan eous Cause	M		ENUMERATED (Control Processing Overload, Hardware Failure, O&M Intervention, Unspecified,)	

The meaning of the different cause values is described in the following table. In general, "not supported" cause values indicate that the related capability is missing. On the other hand, "not available" cause values indicate that the related

capability is present, but insufficient resources were available to perform the requested action.



RIC Service cause	Meaning
Unspecified	Sent for RIC service cause when none of the specified cause
	values applies.
RAN Function ID Invalid	Requested function Id invalid or not known by E2 Node
Action not supported	Requested Action not supported by RAN function
Excessive actions	Excessive number of actions requested for RAN Function
Duplicate action	Same action requested more than once in same subscription
	request
Duplicate Event Trigger	Subscription request has same event trigger as previously
	accepted subscription request
Function resource limit	RAN function has reached resource limit
RIC Request ID unknown	RIC Request ID sent to Near-RT RIC is unknown
Inconsistent Action/subsequent	RAN Function has detected inconsistent sequence of
Action sequence	requested Action and Subsequent Action
Control message invalid	RAN Function has detected invalid RIC CONTROL
	REQUEST message
RIC Call process ID Invalid	RAN function has detected invalid RIC Call Process ID in RIC
	CONTROL REQUEST

Transport Layer cause	Meaning
Unspecified	Sent when none of the above cause values applies but still
	the cause is Transport Network Layer related.
Transport Resource Unavailable	The required transport resources are not available.

Protocol cause	Meaning
Transfer Syntax Error	The received message included a transfer syntax error.
Abstract Syntax Error (Reject)	The received message included an abstract syntax error and
	the concerning criticality indicated "reject".
Abstract Syntax Error (Ignore And	The received message included an abstract syntax error and
Notify)	the concerning criticality indicated "ignore and notify".
Message Not Compatible With	The received message was not compatible with the receiver
Receiver State	state.
Semantic Error	The received message included a semantic error.
Abstract Syntax Error (Falsely	The received message contained IEs or IE groups in wrong
Constructed Message)	order or with too many occurrences.
Unspecified	Sent when none of the above cause values applies but still the cause is Protocol related.

Miscellaneous cause	Meaning
Control Processing Overload	Control processing overload.
Not Enough User Plane Processing	No enough resources are available related to user plane
Resources Available	processing.
Hardware Failure	Action related to hardware failure.
O&M Intervention	The action is due to O&M intervention.
Unspecified Failure	Sent when none of the above cause values applies and the
	cause is not related to any of the categories Radio Network
	Layer, Transport Network Layer, NAS or Protocol.

9.2.2 Criticality Diagnostics

- The Criticality Diagnostics IE is sent by the E2 Node or the Near-RT RIC when parts of a received message have not
- been comprehended or were missing, or if the message contained logical errors. When applicable, it contains
- 7 information about which IEs were not comprehended or were missing.
- 8 For further details on how to use the *Criticality Diagnostics* IE, (see clause 10). The conditions for inclusion of the
- 9 Transaction ID IE are described in clause 10.



IE/Group Name	Presence	Range	IE type and reference	Semantics description
Procedure Code	0		INTEGER (0255)	Procedure Code is to be used if Criticality Diagnostics is part of Error Indication procedure, and not within the response message of the same procedure that caused the error.
Triggering Message	0		ENUMERATED(initi ating message, successful outcome, unsuccessful outcome)	The Triggering Message is used only if the Criticality Diagnostics is part of Error Indication procedure.
Procedure Criticality	0		ENUMERATED(reje ct, ignore, notify)	This Procedure Criticality is used for reporting the Criticality of the Triggering message (Procedure).
RIC Request ID	0		9.2.7	
Information Element Criticality Diagnostics		0 <maxnoof Errors></maxnoof 		
>IE Criticality	M		ENUMERATED(reje ct, ignore, notify)	The IE Criticality is used for reporting the criticality of the triggering IE. The value 'ignore' shall not be used.
>IE ID	М		INTEGER (065535)	The IE ID of the not understood or missing IE.
>Type of Error	M		ENUMERATED(not understood, missing)	-

Range bound	Explanation
maxnoofErrors	Maximum no. of IE errors allowed to be reported with a single
	message. The value for maxnoofErrors is 256.

9.2.3 Message Type

The Message Type IE uniquely identifies the message being sent. It is mandatory for all messages.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Message Type				
>Procedure Code	М		INTEGER (0255)	
>Type of Message	М		CHOICE (Initiating Message, Successful Outcome, Unsuccessful Outcome,)	

2



9.2.4 Global RIC ID

1

5

7

8

11

14

15

This IE is used to globally identify an Near-RT RIC.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PLMN Identity	M		3GPP 38.423 clause 9.2.2.4	
Near-RT RIC ID	M		BIT STRING (SIZE(20))	

9.2.5 Time to wait

This IE defines the minimum allowed waiting times.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Time to wait	М		ENUMERATED(1s, 2s, 5s, 10s, 20s, 60s)	

9.2.6 Global E2 Node ID

This IE is used to globally identify an E2 node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE Global E2 Node	M			
>gNB				
>>Global gNB ID	M		3GPP 38.423 clause 9.2.2.1	
>>gNB-CU-UP ID	0		3GPP 38.463 clause 9.3.1.15	
>>gNB-DU ID	0		3GPP 38.473 clause 9.3.1.9	
>en-gNB				
>>Global en-gNB ID			3GPP 36.423 clause 9.2.112	
>ng-eNB				
>>Global ng-eNB ID	M		3GPP 38.423 clause 9.2.2.2	
>eNB				
>>Global eNB ID	M		3GPP 36.423 clause 9.2.22	

9 9.2.7 RIC Request ID

This information element indicates the REQUEST ID number.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
RIC Requestor ID	М		INTEGER (0 65535)	
RIC Instance ID	М		INTEGER (065535)	

9.2.8 RAN Function ID

This information element indicates the RAN Function ID number, to be unique within a given E2 Node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
RAN Function ID	М		INTEGER (04095)	Value 0 reserved for Near- RT RIC internal usage

9.2.9 RIC Event Trigger Definition

This information element indicates the RIC event trigger description used by the RIC Subscription procedure.



IE/Group Name	Presence	Range	IE type and reference	Semantics description
RIC Event Trigger Definition	M		OCTET STRING	Defined in RAN Function specific E2 Service Model [3]

9.2.10 RIC Action ID

1

6

7

10

11

12

13

3 This information element indicates the Action ID number, to be unique within the given RIC Request ID.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
RIC Action ID	M		INTEGER (0255)	

9.2.11 RIC Action Type

This IE defines the type of action to be executed.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
RIC Action Type	M		ENUMERATED	
			(Insert, Report,	
			Policy,)	

9.2.12 RIC Action Definition

This information element provides parameters to used when executed a **REPORT**, **INSERT** or **POLICY** service.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
RIC Action Definition	М		OCTET STRING	Defined in RAN Function specific E2 Service Model [3]

9.2.13 RIC Subsequent Action

This IE defines the subsequent action to be taken after completing a particular Action. Shall be present when RIC Action Type set to **Insert**.

IE/Group Name	Presence	Range	IE type and	Semantics description
			reference	
RIC Subsequent Action Type	M		ENUMERATED	
			(Continue, Halt,)	
RIC Time to Wait	0		ENUMERATED	Required when required Wait
			(zero, 1ms, 2ms,	greater than zero.
			5ms, 10ms, 20ms,	
			30ms, 40ms, 50ms,	
			100ms, 200ms,	
			500ms, 1s, 2s, 5s,	
			10s, 20s, 60s,)	

9.2.14 RIC Indication Sequence Number (SN)

This information element indicates the Indication Sequence Number (SN).

IE/Group Name	Presence	Range	IE type and reference	Semantics description
RIC Indication SN	М		INTEGER (065535)	

17

14

15



5

6

9

13

14

16

17

9.2.15 RIC Indication Type

2 This IE defines the Indication Type.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
RIC Indication Type	М		ENUMERATED (Insert, Report,)	

9.2.16 RIC Indication message

This information element carries the RIC indication message used for INSERT and REPORT procedures.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
RIC Indication message	M		OCTET STRING	Defined in RAN Function specific E2 Service Model [3]

9.2.17 RIC Indication header

This information element carries the RIC indication header used for INSERT and REPORT procedures.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
RIC Indication header	M		OCTET STRING	Defined in RAN Function specific E2 Service Model [3]

9.2.18 RIC Call Process ID

This information element carries the RIC Call Process ID, meaning shall be unique within a given Function on a given E2 Node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
RIC Call Process ID	M		OCTET STRING	Defined in RAN Function specific E2 Service model [3]

9.2.19 RIC Control message

This information element carries the RIC control message for the RIC CONTROL procedure.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
RIC Control Message	M		OCTET STRING	Defined in RAN Function specific E2 Service model [3]

9.2.20 RIC Control header

This information element carries the RIC control header used for CONTROL procedures.



IE/Group Name	Presence	Range	IE type and reference	Semantics description
RIC Control header	M		OCTET STRING	Defined in RAN Function specific E2 Service Model [3]

9.2.21 RIC Control Ack Request

This IE defines whether and when the RIC CONTROL ACKNOWLEDGE message should be replied as described in the below table.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
RIC Control Ack Request	M		ENUMERATED (NoAck, Ack,	
			NAck)	

5

The meaning of the different values is described in the following table.

RIC Service cause	Meaning
NoAck	Optional RIC Control Acknowledgement is not required
Ack	Optional RIC Control Acknowledgement is required
NAck	Optional RIC Control Acknowledgement is only required to report failure

7

9.2.22 RIC Control Status

9 This IE defines the status of the requested RIC Control procedure.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
RIC Control Status	М		ENUMERATED (Success, Rejected, Failed)	

10

9.2.23 RAN Function Definition

12 This information element carries the RAN Function Definition.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
RAN Function Definition	M		OCTET STRING	Defined in RAN Function specific E2 Service Model [3]

13

9.2.24 RAN Function Revision

15 This information element carries the RAN Function Revision.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
RAN Function Revision	M		INTEGER (04095)	

16

17

9.2.25 RIC Control Outcome

This information element carries the RIC Control Outcome.



3

5

IE/Group Name	Presence	Range	IE type and reference	Semantics description
RIC Control Outcome	М		OCTET STRING	Defined in RAN Function specific E2 Service Model [3]

9.2.26 E2 Node Component Type

This IE is used to identify an E2 node component type.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
E2 node component type	M		ENUMERATED (gNB, gNB-	
			CU-UP, gNB-DU, en-gNB,	
			eNB, ng-eNB,)	

9.2.27 E2 Node Component Configuration Update

This IE is used to carry the E2 Node component configuration update information of a specific E2 Node component. In all cases the information is a data structure defined by the appropriate 3GPP specification and carried as an OCTET STRING.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE E2 node	M			
component type				
>gNB				
>>NGAP gNB-CU-CP	0		OCTET STRING	Content defined by 3GPP
configuration update				38.413 clause 9.2.6.4
>> XnAP gNB CU-CP	0		OCTET STRING	Content defined by 3GPP
configuration update				38.423 clause 9.1.3.4
>>E1AP gNB-CU-UP	0		OCTET STRING	Content defined by 3GPP
configuration update				38.463 clause 9.2.1.10
>>F1AP gNB-DU	0		OCTET STRING	Content defined by 3GPP
configuration update				38.473 clause 9.2.1.7
>en-gNB				
>>X2AP en-gNB	0		OCTET STRING	Content defined by 3GPP
configuration update				36.423 clause 9.1.2.8
>ng-eNB				
>>NGAP ng-eNB	0		OCTET STRING	Content defined by 3GPP
configuration update				38.413 clause 9.2.6.4
>>XnAP ng-eNB	0		OCTET STRING	Content defined by 3GPP
configuration update				38.423 clause 9.1.3.4
>eNB		•		
>>S1AP eNB	0		OCTET STRING	Content defined by 3GPP
configuration update				36.413 clause 9.1.8.7
>>X2AP eNB config	0		OCTET STRING	Content defined by 3GPP
update				36.423 clause 9.1.2.8

9.2.28 E2 Node Component Configuration Update Acknowledge

This IE is used to carry the E2 Node component configuration update acknowledge of a specific E2 Node component.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Outcome	M		ENUMERATED (success,	
			failure,)	
Cause	0		9.2.1	Cause for failure

12

9

10

11



3

5

6

9

10

9.2.29 Transport Layer Information

This information element provides Near-RT RIC address and optionally port number to be used by an E2 Node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Transport Layer Address	M		BIT STRING (SIZE(1160,))	To be passed to transport layer without interpretation
Transport Layer Port	0		BIT STRING (SIZE(16))	To be passed to transport layer without interpretation

9.2.30 TNL Association Usage

This information element provides TNL association usage.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
TNL Association Usage	М		ENUMERATED (ric service, support functions, both,)	Indicates whether E2 connection to be used for RIC services only, or E2 support functions only, or both

9.2.31 RAN Function OID

8 This information element carries the RAN Function OID

IE/Group Name	Presence	Range	IE type and reference	Semantics description
RAN Function Service Model	M		PrintableString(SIZE(11000,.	Object Identifier
OID))	of the specific
				RAN Function
				definition.
				Formatted as per
				OID (e.g.
				1.3.6.1.4.1.53148.
				1.2.1 for E2SM-
				NI)

9.2.32 E2 Node Component ID

11 This IE is used to locally identify an E2 node component.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE E2 node	M			
component type				
>gNB-CU-UP				
>>gNB-CU-UP ID	M		3GPP 38.463 clause 9.3.1.15	
>gNB-DU				
>>gNB-DU ID	М		3GPP 38.473 clause 9.3.1.9	

12



9.3 Message and Information Element Abstract Syntax (with

ASN.1)

1

9

15

19

20

21

22

9.3.1 General 3

- E2AP ASN.1 definition conforms to ITU-T Rec. X.691 [15], ITU-T Rec. X.680 [16] and ITU-T Rec. X.681 [17]. 4
- The ASN.1 definition specifies the structure and content of E2AP messages. E2AP messages can contain any IEs 5
- specified in the object set definitions for that message without the order or number of occurrence being restricted by 6
- ASN.1. However, for this version of the standard, a sending entity shall construct an E2AP message according to the 7
- 8 PDU definitions module and with the following additional rules:
 - IEs shall be ordered (in an IE container) in the order they appear in object set definitions.
- 10 Object set definitions specify how many times IEs may appear. An IE shall appear exactly once if the presence field 11
 - in an object has value "mandatory". An IE may appear at most once if the presence field in an object has value
- 12 "optional" or "conditional". If in a tabular format there is multiplicity specified for an IE (i.e., an IE list) then in the
- 13 corresponding ASN.1 definition the list definition is separated into two parts. The first part defines an IE container list
- 14 where the list elements reside. The second part defines list elements. The IE container list appears as an IE of its own.
 - For this version of the standard an IE container list may contain only one kind of list elements.
- In the above "IE" means an IE in the object set with an explicit ID. If one IE needs to appear more than once 16
- 17 in one object set, then the different occurrences will have different IE IDs.
- If an E2AP message that is not constructed as defined above is received, this shall be considered as Abstract Syntax 18
 - Error, and the message shall be handled as defined for Abstract Syntax Error in subclause 10.3.6.

9.3.2 Usage of private message mechanism for non-standard use

The private message mechanism for non-standard are not supported with E2AP.

9.3.3 Elementary Procedure Definitions

```
-- ASN1START
-- Elementary Procedure definitions
-- Derived from 3GPP 38.413 v15.4.0 NGAP
E2AP-PDU-Descriptions {
iso(1) identified-organization(3) dod(6) internet(1) private(4) enterprise(1) 53148 e2(1) version1
(1) e2ap(1) e2ap-PDU-Descriptions (0) }
DEFINITIONS AUTOMATIC TAGS ::=
BEGIN
\operatorname{\mathsf{--}} IE parameter types from other modules.
__ ********************
IMPORTS
    Criticality,
    ProcedureCode
FROM E2AP-CommonDataTypes
    E2connectionUpdate,
    E2connectionUpdateAcknowledge,
    E2connectionUpdateFailure,
    E2nodeConfigurationUpdate,
    E2nodeConfigurationUpdateAcknowledge,
    E2nodeConfigurationUpdateFailure,
```

```
E2setupFailure,
    E2setupRequest,
    E2setupResponse,
   ErrorIndication.
   ResetRequest,
   ResetResponse,
   RICcontrolAcknowledge,
   RICcontrolFailure,
   RICcontrolRequest,
   RICindication,
   RICserviceQuery,
   RICserviceUpdate,
  RICserviceUpdateAcknowledge,
   RICserviceUpdateFailure,
  RICsubscriptionFailure,
   RICsubscriptionRequest,
   RICsubscriptionResponse,
   RICsubscriptionDeleteFailure,
   RICsubscriptionDeleteRequest,
   RICsubscriptionDeleteResponse
FROM E2AP-PDU-Contents
   id-E2connectionUpdate,
    id-E2nodeConfigurationUpdate,
   id-E2setup,
   id-ErrorIndication,
   id-Reset,
   id-RICcontrol,
   id-RICindication,
   id-RICserviceQuery,
   id-RICserviceUpdate,
    id-RICsubscription,
    id-RICsubscriptionDelete
FROM E2AP-Constants;
__ ********************
-- Interface Elementary Procedure Class
__ *********************
E2AP-ELEMENTARY-PROCEDURE ::= CLASS {
    &InitiatingMessage
                                             OPTIONAL
    &SuccessfulOutcome
    &UnsuccessfulOutcome
                                             OPTIONAL
                            ProcedureCode UNIQUE ,
    &procedureCode
                                             DEFAULT ignore
    &criticality
                             Criticality
}
WITH SYNTAX {
  INITIATING MESSAGE
                             &InitiatingMessage
                             &SuccessfulOutcome]
    [SUCCESSFUL OUTCOME
    [UNSUCCESSFUL OUTCOME
                             &UnsuccessfulOutcome]
    PROCEDURE CODE
                              &procedureCode
    [CRITICALITY
                              &criticality]
__ *********************
-- Interface PDU Definition
__ **********************************
E2AP-PDU ::= CHOICE {
                             InitiatingMessage,
   initiatingMessage
    successfulOutcome
                             SuccessfulOutcome,
    unsuccessfulOutcome
                             UnsuccessfulOutcome,
}
InitiatingMessage ::= SEQUENCE {
  procedureCode E2AP-ELEMENTARY-PROCEDURE.&procedureCode criticality E2AP-ELEMENTARY-PROCEDURE.&criticality
                                                                ({E2AP-ELEMENTARY-PROCEDURES}),
                                                                ({E2AP-ELEMENTARY-
PROCEDURES } { @procedureCode } ) ,
                  E2AP-ELEMENTARY-PROCEDURE.&InitiatingMessage
                                                                ({E2AP-ELEMENTARY-
PROCEDURES } { @procedureCode } )
```



```
SuccessfulOutcome ::= SEQUENCE {
   procedureCode E2AP-ELEMENTARY-PROCEDURE.&procedureCode
                                                              ({E2AP-ELEMENTARY-PROCEDURES}),
                  E2AP-ELEMENTARY-PROCEDURE.&criticality
   criticality
                                                               ({E2AP-ELEMENTARY-
PROCEDURES \ { @procedureCode \} ) ,
                  E2AP-ELEMENTARY-PROCEDURE.&SuccessfulOutcome
                                                               ({E2AP-ELEMENTARY-
PROCEDURES } { @procedureCode } )
UnsuccessfulOutcome ::= SEQUENCE {
   procedureCode E2AP-ELEMENTARY-PROCEDURE.&procedureCode criticality E2AP-ELEMENTARY-PROCEDURE.&criticality
                                                               ({E2AP-ELEMENTARY-PROCEDURES}),
                                                               ({E2AP-ELEMENTARY-
PROCEDURES } { @procedureCode } ) ,
   value
                  E2AP-ELEMENTARY-PROCEDURE.&UnsuccessfulOutcome ({E2AP-ELEMENTARY-
PROCEDURES } { @procedureCode } )
__ ********************
-- Interface Elementary Procedure List
__ ****************
E2AP-ELEMENTARY-PROCEDURES E2AP-ELEMENTARY-PROCEDURE ::= {
  E2AP-ELEMENTARY-PROCEDURES-CLASS-1
   E2AP-ELEMENTARY-PROCEDURES-CLASS-2,
E2AP-ELEMENTARY-PROCEDURES-CLASS-1 E2AP-ELEMENTARY-PROCEDURE ::= {
   ricSubscription
   ricSubscriptionDelete
   ricServiceUpdate
   ricControl
   e2setup
   e2nodeConfigurationUpdate
   e2connectionUpdate
   reset,
}
E2AP-ELEMENTARY-PROCEDURES-CLASS-2 E2AP-ELEMENTARY-PROCEDURE ::= {
   ricIndication
   ricServiceQuery
   errorIndication,
}
__ *********************
-- Interface Elementary Procedures
__ ******************
-- New for v01.01
                     E2AP-ELEMENTARY-PROCEDURE ::= {
e2connectionUpdate
   INITIATING MESSAGE E2connectionUpdate
   SUCCESSFUL OUTCOME
                         E2connectionUpdateAcknowledge
   UNSUCCESSFUL OUTCOME
                       E2connectionUpdateFailure
   PROCEDURE CODE
                         id-E2connectionUpdate
   CRITICALITY
                         reject
}
INITIATING MESSAGE
                         E2nodeConfigurationUpdate
   SUCCESSFUL OUTCOME
                         {\tt E2nodeConfigurationUpdateAcknowledge}
   UNSUCCESSFUL OUTCOME
                         E2nodeConfigurationUpdateFailure
   PROCEDURE CODE
                         id-E2nodeConfigurationUpdate
   CRITICALITY
                         reject
}
e2setup E2AP-ELEMENTARY-PROCEDURE ::= {
   INITIATING MESSAGE E2setupRequest
   SUCCESSFUL OUTCOME
                         E2setupResponse
   UNSUCCESSFUL OUTCOME
                       E2setupFailure
   PROCEDURE CODE
                         id-E2setup
   CRITICALITY
                         reject
```

```
errorIndication E2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE ErrorIndication
    PROCEDURE CODE
                              id-ErrorIndication
    CRITICALITY
reset E2AP-ELEMENTARY-PROCEDURE ::= {
  INITIATING MESSAGE ResetRequest
    SUCCESSFUL OUTCOME
                              ResetResponse
    PROCEDURE CODE
                              id-Reset
    CRITICALITY
                              reject
ricControl E2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE RICcontrolRequest SUCCESSFUL OUTCOME RICcontrolAcknowledge
    UNSUCCESSFUL OUTCOME RICcontrolFai:
PROCEDURE CODE id-RICcontrol
                              RICcontrolFailure
    CRITICALITY
                             reject
ricIndication E2AP-ELEMENTARY-PROCEDURE ::= {
   INITIATING MESSAGE RICindication
    PROCEDURE CODE
                              id-RICindication
    CRITICALITY
                              ignore
ricServiceQuery E2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE RICserviceQuery
    PROCEDURE CODE
                               id-RICserviceQuery
    CRITICALITY
                              ignore
ricServiceUpdate E2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE RICserviceUpdate
SUCCESSFUL OUTCOME RICserviceUpdateAcknowledge
    UNSUCCESSFUL OUTCOME RICserviceUpdateFailure
    PROCEDURE CODE
                              id-RICserviceUpdate
    CRITICALITY
                             reject
ricSubscription E2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE RICsubscriptionRequest SUCCESSFUL OUTCOME RICsubscriptionResponse
    UNSUCCESSFUL OUTCOME RICsubscriptionFailure PROCEDURE CODE id-RICsubscription
    CRITICALITY
                             reject
ricSubscriptionDelete E2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE RICsubscriptionDeleteRequest SUCCESSFUL OUTCOME RICsubscriptionDeleteRespons
                              RICsubscriptionDeleteResponse
    UNSUCCESSFUL OUTCOME RICsubscriptionDeleteFailure
    PROCEDURE CODE
                              id-RICsubscriptionDelete
    CRITICALITY
                              reject
-- ASN1STOP
```

9.3.4 PDU definitions

```
-- ASN1START
__ *********************
-- PDU definitions for E2AP
-- Derived from 3GPP 38.413 v15.4.0 NGAP
E2AP-PDU-Contents {
```



id-RANfunctionsAdded,

```
iso(1) identified-organization(3) dod(6) internet(1) private(4) enterprise(1) 53148 e2(1) version1
(1) e2ap(1) e2ap-PDU-Contents (1) }
DEFINITIONS AUTOMATIC TAGS ::=
-- IE parameter types from other modules.
__ *********************
IMPORTS
   Cause,
    CriticalityDiagnostics,
    E2nodeComponentConfigUpdate,
    E2nodeComponentConfigUpdateAck,
    E2nodeComponentID,
    E2nodeComponentType,
    GlobalE2node-ID,
    GlobalRIC-ID,
    RANfunctionDefinition,
    RANfunctionID,
   RANfunctionOID.
   RANfunctionRevision,
    RICactionDefinition,
   RICactionID,
    RICactionType,
    RICcallProcessID,
    RICcontrolAckRequest,
    RICcontrolHeader,
   RICcontrolMessage,
    RICcontrolOutcome,
    RICcontrolStatus,
    RICeventTriggerDefinition,
    RICindicationHeader,
   RICindicationMessage,
   RICindicationSN,
    RICindicationType,
    RICrequestID,
    RICsubsequentAction,
    TimeToWait,
    TNLinformation,
    TNLusage
FROM E2AP-IEs
    ProtocolIE-Container(),
    ProtocolIE-ContainerList(),
    ProtocolIE-SingleContainer{},
    E2AP-PROTOCOL-IES,
    E2AP-PROTOCOL-IES-PAIR
FROM E2AP-Containers
    id-Cause,
    id-CriticalityDiagnostics,
    id-E2connectionSetup,
    id-E2connectionSetupFailed,
   id-E2connectionSetupFailed-Item,
    id-E2connectionFailed-Item,
    id-E2connectionUpdate-Item,
    id-E2connectionUpdateAdd,
    id-E2connectionUpdateModify,
    id-E2connectionUpdateRemove,
    \verb|id-E2connectionUpdateRemove-Item|,\\
    \verb|id-E2| node Component Config Update|,\\
    id-E2nodeComponentConfigUpdate-Item,
    id-E2nodeComponentConfigUpdateAck,
    id-E2nodeComponentConfigUpdateAck-Item,
    id-GlobalE2node-ID,
    id-GlobalRIC-ID,
    id-RANfunctionID,
    id-RANfunctionID-Item,
    id-RANfunctionIEcause-Item,
    id-RANfunction-Item,
    id-RANfunctionsAccepted,
```

```
id-RANfunctionsDeleted,
   id-RANfunctionsModified,
   id-RANfunctionsRejected,
   id-RICaction-Admitted-Item,
   id-RICactionID,
   id-RICaction-NotAdmitted-Item,
  id-RICactions-Admitted,
  id-RICactions-NotAdmitted,
   id-RICaction-ToBeSetup-Item,
  id-RICcallProcessID,
   id-RICcontrolAckRequest,
  id-RICcontrolHeader,
  id-RICcontrolMessage,
   id-RICcontrolOutcome,
  id-RICcontrolStatus,
  id-RICindicationHeader,
id-RICindicationMessage,
  id-RICindicationSN,
   id-RICindicationType,
  id-RICrequestID,
  id-RICserviceQuery,
   id-RICsubscriptionDetails,
  id-TimeToWait,
   id-TNLinformation,
  maxofE2nodeComponents,
   maxofRANfunctionID,
  maxofRICactionID,
   maxofTNI<sub>A</sub>
FROM E2AP-Constants;
__ *******************
-- MESSAGES FOR NEAR-RT RIC FUNCTIONAL PROCEDURES
__ *******************
__ *******************
-- RIC Subscription Elementary Procedure
__ ******************
-- RIC SUBSCRIPTION REQUEST
__ *********************
RICsubscriptionRequest ::= SEQUENCE {
                         ProtocolIE-Container {{RICsubscriptionRequest-IEs}},
  protocolIEs
RICsubscriptionRequest-IEs E2AP-PROTOCOL-IES ::= {
  { ID id-RICrequestID
                                CRITICALITY reject TYPE RICrequestID
   PRESENCE mandatory |
   { ID id-RANfunctionID
                                CRITICALITY reject TYPE RANfunctionID
  PRESENCE mandatory}|
   PRESENCE mandatory },
   . . .
}
RICsubscriptionDetails ::= SEQUENCE {
   \verb|ricEventTriggerDefinition| & \verb|RICeventTriggerDefinition|, \\
   ricAction-ToBeSetup-List
                          RICactions-ToBeSetup-List,
RICactions-ToBeSetup-List ::= SEQUENCE (SIZE(1..maxofRICactionID)) OF ProtocolIE-SingleContainer {
{RICaction-ToBeSetup-ItemIEs} }
                        E2AP-PROTOCOL-IES ::= {
RICaction-ToBeSetup-ItemIEs
   mandatory },
   . . .
```



```
RICaction-ToBeSetup-Item ::= SEQUENCE {
   ricActionID RICactionID,
ricActionType RICactionType,
ricActionDefinition RICactionDefinition OPTIONAL,
ricSubsequentAction RICsubsequentAction OPTIONAL,
}
__ *********************
-- RIC SUBSCRIPTION RESPONSE
__ **********************
RICsubscriptionResponse ::= SEQUENCE {
   protocolIEs
                           ProtocolIE-Container{{RICsubscriptionResponse-IEs}},
}
RICsubscriptionResponse-IEs E2AP-PROTOCOL-IES ::= {
   { ID id-RICrequestID
                                  CRITICALITY reject
                                                       TYPE RICrequestID
   PRESENCE mandatory } |
  { ID id-RANfunctionID
                                  CRITICALITY reject
                                                      TYPE RANfunctionID
   PRESENCE mandatory } |
   { ID id-RICactions-Admitted
                                 CRITICALITY reject
                                                       TYPE RICaction-Admitted-List
   PRESENCE mandatory } |
   PRESENCE optional },
   . . .
}
RICaction-Admitted-List ::= SEQUENCE (SIZE(1..maxofRICactionID)) OF ProtocolIE-
SingleContainer{{RICaction-Admitted-ItemIEs}}
RICaction-Admitted-ItemIEs E2AP-PROTOCOL-IES ::= {
   PRESENCE mandatory },
RICaction-Admitted-Item ::= SEQUENCE {
  ricActionID
                          RICactionID,
RICaction-NotAdmitted-List ::= SEQUENCE (SIZE(0..maxofRICactionID)) OF ProtocolIE-SingleContainer {
{RICaction-NotAdmitted-ItemIEs} }
RICaction-NotAdmitted-ItemIEs E2AP-PROTOCOL-IES ::= {
   { ID id-RICaction-NotAdmitted-Item CRITICALITY ignore TYPE RICaction-NotAdmitted-Item
   PRESENCE mandatory },
   . . .
{\tt RICaction-NotAdmitted-Item} \ ::= \ {\tt SEQUENCE} \ \{
   ricActionID
                           RICactionID,
   cause
                           Cause,
}
__ ********************
-- RIC SUBSCRIPTION FAILURE
__ *******************
RICsubscriptionFailure ::= SEQUENCE {
                           ProtocolIE-Container {{RICsubscriptionFailure-IEs}},
   protocolIEs
RICsubscriptionFailure-IEs E2AP-PROTOCOL-IES ::= {
                                  CRITICALITY reject TYPE RICrequestID
   { ID id-RICrequestID
   PRESENCE mandatory } |
    { ID id-RANfunctionID
                                 CRITICALITY reject TYPE RANfunctionID
   PRESENCE mandatory } |
```

```
PRESENCE mandatory } |
   PRESENCE optional },
}
__ ********************
-- RIC Subscription Delete Elementary Procedure
__ *********************
-- RIC SUBSCRIPTION DELETE REQUEST
__ **********************
RICsubscriptionDeleteRequest ::= SEQUENCE {
  protocolIEs
                     ProtocolIE-Container {{RICsubscriptionDeleteRequest-IEs}},
   . . .
}
RICsubscriptionDeleteRequest-IEs E2AP-PROTOCOL-IES ::= {
  { ID id-RICrequestID
                          CRITICALITY reject TYPE RICrequestID
  PRESENCE mandatory }|
  { ID id-RANfunctionID
                          CRITICALITY reject TYPE RANfunctionID
  PRESENCE mandatory },
}
__ *******************
-- RIC SUBSCRIPTION DELETE RESPONSE
__ ***************
RICsubscriptionDeleteResponse ::= SEQUENCE {
protocolIEs
                     ProtocolIE-Container {{RICsubscriptionDeleteResponse-IEs}},
}
RICsubscriptionDeleteResponse-IEs E2AP-PROTOCOL-IES ::= {
  { ID id-RICrequestID PRESENCE mandatory }|
                   CRITICALITY reject TYPE RICrequestID
  { ID id-RANfunctionID
                          CRITICALITY reject TYPE RANfunctionID
  PRESENCE mandatory },
__ ********************
-- RIC SUBSCRIPTION DELETE FAILURE
__ ******************
RICsubscriptionDeleteFailure ::= SEQUENCE {
protocolIEs
                     ProtocolIE-Container {{RICsubscriptionDeleteFailure-IEs}},
RICsubscriptionDeleteFailure-IEs E2AP-PROTOCOL-IES ::= {
                          CRITICALITY reject TYPE RICrequestID
 { ID id-RICrequestID
  PRESENCE mandatorv }|
   { ID id-RANfunctionID
                           CRITICALITY reject TYPE RANfunctionID
  PRESENCE mandatory } |
                           CRITICALITY ignore TYPE Cause
   { ID id-Cause
  PRESENCE mandatory }|
   PRESENCE optional },
}
__ *******************
-- RIC Indication Elementary Procedure
__ ******************
-- RIC INDICATION
```

```
__ *******************
RICindication ::= SEQUENCE {
                         ProtocolIE-Container {{RICindication-IEs}},
   protocolIEs
RICindication-IEs E2AP-PROTOCOL-IES ::= {
   { ID id-RICrequestID
                                CRITICALITY reject TYPE RICrequestID
   PRESENCE mandatory } |
   { ID id-RANfunctionID
                              CRITICALITY reject TYPE RANfunctionID
  { ID id-RANfunctionID
PRESENCE mandatory }|
{ ID id-RICactionID
PRESENCE mandatory }|
                               CRITICALITY reject TYPE RICactionID
                              CRITICALITY reject TYPE RICindicationSN
   { ID id-RICindicationSN
   PRESENCE optional } |
   { ID id-RICindicationType
                              CRITICALITY reject TYPE RICindicationType
  PRESENCE mandatory }|
   { ID id-RICindicationHeader
                               CRITICALITY reject TYPE RICindicationHeader
  PRESENCE mandatory } |
   { ID id-RICindicationMessage
                              CRITICALITY reject TYPE RICindicationMessage
  PRESENCE mandatory }|
   PRESENCE optional },
}
__ *******************
-- RIC Control Elementary Procedure
 __ *******************
-- RIC CONTROL REQUEST
 __ *******************
RICcontrolRequest ::= SEQUENCE {
                          ProtocolIE-Container {{RICcontrolRequest-IEs}},
  protocolIEs
RICcontrolRequest-IEs E2AP-PROTOCOL-IES ::= {
 { ID id-RICrequestID
                                CRITICALITY reject TYPE RICrequestID
   PRESENCE mandatory } |
   { ID id-RANfunctionID
                               CRITICALITY reject TYPE RANfunctionID
   PRESENCE mandatory } |
   { ID id-RICcallProcessID
                           CRITICALITY reject TYPE RICcallProcessID
  PRESENCE optional }|
   { ID id-RICcontrolHeader
                               CRITICALITY reject TYPE RICcontrolHeader
  PRESENCE mandatory }|
                            CRITICALITY reject TYPE RICcontrolMessage
  { ID id-RICcontrolMessage 
PRESENCE mandatory }|
   PRESENCE optional },
-- RIC CONTROL ACKNOWLEDGE
__ *********************
RICcontrolAcknowledge ::= SEQUENCE {
                       ProtocolIE-Container {{RICcontrolAcknowledge-IEs}},
protocolIEs
RICcontrolAcknowledge-IEs E2AP-PROTOCOL-IES ::= {
                                CRITICALITY reject TYPE RICrequestID
   { ID id-RICrequestID
   PRESENCE mandatory }|
   { ID id-RANfunctionID
                               CRITICALITY reject TYPE RANfunctionID
  PRESENCE mandatory }|
                            CRITICALITY reject TYPE RICcallProcessID
   { ID id-RICcallProcessID
   PRESENCE optional }|
   { ID id-RICcontrolStatus
                             CRITICALITY reject TYPE RICcontrolStatus
   PRESENCE mandatory } |
```



```
{ ID id-RICcontrolOutcome CRITICALITY reject TYPE RICcontrolOutcome
   PRESENCE optional },
-- RIC CONTROL FAILURE
__ ******************
RICcontrolFailure ::= SEQUENCE {
  protocolIEs
                       ProtocolIE-Container {{RICcontrolFailure-IEs}},
}
RICcontrolFailure-IEs E2AP-PROTOCOL-IES ::= {
                            CRITICALITY reject TYPE RICrequestID
   { ID id-RICrequestID
  PRESENCE mandatory }|
  { ID id-RANfunctionID PRESENCE mandatory } |
                            CRITICALITY reject TYPE RANfunctionID
   { ID id-RICcallProcessID
                           CRITICALITY reject TYPE RICcallProcessID
  PRESENCE optional }|
                            CRITICALITY ignore TYPE Cause
  { ID id-Cause
  PRESENCE mandatory } |
   { ID id-RICcontrolOutcome
                           CRITICALITY reject TYPE RICcontrolOutcome
  PRESENCE optional },
}
-- MESSAGES FOR GLOBAL PROCEDURES
__ *********************
-- Error Indication Elementary Procedure
-- ERROR INDICATION
ErrorIndication ::= SEQUENCE {
                      ProtocolIE-Container {{ErrorIndication-IEs}},
 protocolIEs
ErrorIndication-IEs E2AP-PROTOCOL-IES ::= {
                            CRITICALITY reject TYPE RICrequestID
                                                                  PRESENCE
 { ID id-RICrequestID
optional }|
   { ID id-RANfunctionID
                            CRITICALITY reject TYPE RANfunctionID
                                                                  PRESENCE
optional }|
   { ID id-Cause
                            CRITICALITY ignore TYPE Cause
                                                                   PRESENCE
optional
        } |
   PRESENCE
optional },
__ ******************
-- E2 Setup Elementary Procedure
-- E2 SETUP REQUEST
__ ********************
E2setupRequest ::= SEQUENCE {
  protocolIEs ProtocolIE-Container { {E2setupRequestIEs} },
   . . .
```



```
E2setupRequestIEs E2AP-PROTOCOL-IES ::= {
  { ID id-GlobalE2node-ID
                              CRITICALITY reject TYPE GlobalE2node-ID
  PRESENCE mandatory } |
                             CRITICALITY reject TYPE RANfunctions-List
   { ID id-RANfunctionsAdded
  PRESENCE optional } |
   { ID id-E2nodeComponentConfigUpdate CRITICALITY reject TYPE E2nodeComponentConfigUpdate-List
  PRESENCE optional },
__ *******************
-- E2 SETUP RESPONSE
__ **********************
E2setupResponse ::= SEQUENCE {
  protocolIEs ProtocolIE-Container { {E2setupResponseIEs} },
}
E2setupResponseIEs E2AP-PROTOCOL-IES ::= {
  { ID id-GlobalRIC-ID
                                 CRITICALITY reject TYPE GlobalRIC-ID
      PRESENCE mandatory
                     } |
                                CRITICALITY reject TYPE RANfunctionsID-List
   { ID id-RANfunctionsAccepted
     PRESENCE optional } |
                          CRITICALITY reject TYPE RANfunctionsIDcause-List
   { ID id-RANfunctionsRejected
     PRESENCE optional } |
   List PRESENCE optional
                     },
__ **********************
-- E2 SETUP FAILURE
__ *****************
E2setupFailure ::= SEQUENCE {
              ProtocolIE-Container { {E2setupFailureIEs} },
 protocolIEs
E2setupFailureIEs E2AP-PROTOCOL-IES ::= {
                              CRITICALITY ignore TYPE Cause
  { ID id-Cause
                                                                      PRESENCE
mandatory } |
                              CRITICALITY ignore TYPE TimeToWait
 { ID id-TimeToWait
                                                                      PRESENCE
optional }|
   { ID id-CriticalityDiagnostics
                             CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                      PRESENCE
optional }|
  { ID id-TNLinformation
                             CRITICALITY ignore TYPE TNLinformation
   PRESENCE optional },
}
-- E2 Connection Update Elementary Procedure
-- E2 CONNECTION UPDATE
E2connectionUpdate ::= SEQUENCE {
  protocolIEs
                        ProtocolIE-Container {{E2connectionUpdate-IEs}},
   . . .
}
E2connectionUpdate-IEs E2AP-PROTOCOL-IES ::= {
{ ID id-E2connectionUpdateAdd CRITICALITY reject TYPE E2connectionUpdate-List
  PRESENCE optional } |
   PRESENCE optional } |
```



```
ID id-E2connectionUpdateModify CRITICALITY reject TYPE E2connectionUpdate-List
   PRESENCE optional },
E2connectionUpdate-List ::= SEQUENCE (SIZE(1..maxofTNLA)) OF ProtocolIE-SingleContainer {
{E2connectionUpdate-ItemIEs} }
PRESENCE mandatory },
}
E2connectionUpdate-Item ::= SEQUENCE {
   tnlInformation
                         TNLinformation,
   t.nlUsage
                         TNLusage,
E2connectionUpdateRemove-List ::= SEQUENCE (SIZE(1..maxofTNLA)) OF ProtocolIE-SingleContainer {
{E2connectionUpdateRemove-ItemIEs} }
E2connectionUpdateRemove-ItemIEs
                        E2AP-PROTOCOL-IES ::= {
  PRESENCE mandatory },
E2connectionUpdateRemove-Item ::= SEQUENCE {
  tnlInformation
                         TNLinformation,
}
__ *******************
-- E2 CONNECTION UPDATE ACKNOWLEDGE
__ *******************
E2connectionUpdateAcknowledge ::= SEQUENCE {
  protocolIEs
                      ProtocolIE-Container {{E2connectionUpdateAck-IEs}},
  . . .
E2connectionUpdateAck-IEs E2AP-PROTOCOL-IES ::= {
   PRESENCE optional } |
   PRESENCE optional },
E2connectionSetupFailed-List ::= SEQUENCE (SIZE(1..maxofTNLA)) OF ProtocolIE-SingleContainer {
{E2connectionSetupFailed-ItemIEs} }
                       E2AP-PROTOCOL-IES ::= {
E2connectionSetupFailed-ItemIEs
  { ID id-E2connectionSetupFailed-Item
                                   CRITICALITY ignore TYPE
E2connectionSetupFailed-Item PRESENCE mandatory },
E2connectionSetupFailed-Item ::= SEQUENCE {
  tnlInformation
                         TNLinformation,
   cause
                         Cause,
}
__ *********************
-- E2 CONNECTION UPDATE FAILURE
__ **********************
E2connectionUpdateFailure ::= SEQUENCE {
  protocolIEs ProtocolIE-Container {{E2connectionUpdateFailure-IEs}},
```

```
E2connectionUpdateFailure-IEs E2AP-PROTOCOL-IES ::= {
     { ID id-Cause
                                                                         CRITICALITY reject TYPE Cause
                 PRESENCE optional }|
     { ID id-TimeToWait
                                                                        CRITICALITY ignore TYPE TimeToWait
                PRESENCE optional } |
                                                                      CRITICALITY ignore TYPE CriticalityDiagnostics
     { ID id-CriticalityDiagnostics
                 PRESENCE optional },
}
__ ***************
-- E2 Node Configuration Update Elementary Procedure
__ *********************
__ ********************
-- E2 NODE CONFIGURATION UPDATE
__ ********************
E2nodeConfigurationUpdate ::= SEQUENCE {
   protocolIEs
                                               ProtocolIE-Container {{E2nodeConfigurationUpdate-IEs}},
E2nodeConfigurationUpdate-IEs E2AP-PROTOCOL-IES ::= {
  { ID id-E2nodeComponentConfigUpdate CRITICALITY reject TYPE E2nodeComponentConfigUpdate-
              PRESENCE optional
                                                     },
}
 \verb|E2nodeComponentConfigUpdate-List| ::= \verb|SEQUENCE| (SIZE(1..maxofE2nodeComponents))| | OF ProtocolIE-List| | ProtocolIE-Lis
SingleContainer { {E2nodeComponentConfigUpdate-ItemIEs} }
{ ID id-E2nodeComponentConfigUpdate-Item
                                                                                   CRITICALITY reject TYPE
                                                                       PRESENCE mandatory },
E2nodeComponentConfigUpdate-Item
E2nodeComponentConfigUpdate-Item ::= SEQUENCE {
      e2nodeComponentType E2nodeComponentType,
                                                           E2nodeComponentID
      e2nodeComponentID
      e2nodeComponentConfigUpdate E2nodeComponentConfigUpdate,
}
-- E2 NODE CONFIGURATION UPDATE ACKNOWLEDGE
__ **********************
E2nodeConfigurationUpdateAcknowledge ::= SEQUENCE {
                                              ProtocolIE-Container {{E2nodeConfigurationUpdateAcknowledge-
     protocolIEs
IEs}},
E2nodeConfigurationUpdateAcknowledge-IEs E2AP-PROTOCOL-IES ::= {
  {\tt E2nodeComponentConfigUpdateAck-List} \qquad {\tt PRESENCE\ optional} \qquad \} \ \hbox{\it ,}
E2nodeComponentConfigUpdateAck-List ::= SEQUENCE (SIZE(1..maxofE2nodeComponents)) OF ProtocolIE-
SingleContainer { {E2nodeComponentConfigUpdateAck-ItemIEs} }
```



```
E2nodeComponentConfigUpdateAck-Item ::= SEQUENCE {
  e2nodeComponentType E2nodeComponentType,
   e2nodeComponentID
                              E2nodeComponentID
                                                   OPTIONAL,
   e2nodeComponentConfigUpdateAck E2nodeComponentConfigUpdateAck,
}
__ *******************
-- E2 NODE CONFIGURATION UPDATE FAILURE
__ *********************
E2nodeConfigurationUpdateFailure ::= SEQUENCE {
                                    {{E2nodeConfigurationUpdateFailure-IEs}},
  protocolIEs ProtocolIE-Container
E2nodeConfigurationUpdateFailure-IEs E2AP-PROTOCOL-IES ::= {
                                    CRITICALITY ignore TYPE Cause
   { ID id-Cause
            PRESENCE mandatory }|
   { ID id-TimeToWait
                                    CRITICALITY ignore TYPE TimeToWait
            PRESENCE optional } |
                                   CRITICALITY ignore TYPE CriticalityDiagnostics
   { ID id-CriticalityDiagnostics
           PRESENCE optional },
}
__ ********************
-- Reset Elementary Procedure
__ ******************
__ *****************
-- RESET REOUEST
ResetRequest ::= SEQUENCE {
  protocolIEs ProtocolIE-Container { {ResetRequestIEs} },
  . . .
ResetRequestIEs E2AP-PROTOCOL-IES ::= {
                              CRITICALITY ignore TYPE Cause
                                                                      PRESENCE
  { ID id-Cause
mandatory },
__ ********************
-- RESET RESPONSE
ResetResponse ::= SEQUENCE {
 protocolIEs ProtocolIE-Container { {ResetResponseIEs} },
ResetResponseIEs E2AP-PROTOCOL-IES ::= {
                             CRITICALITY ignore TYPE CriticalityDiagnostics PRESENCE
  { ID id-CriticalityDiagnostics
optional },
__ *********************
-- RIC Service Update Elementary Procedure
-- RIC SERVICE UPDATE
```

```
__ *******************
RICserviceUpdate ::= SEQUENCE {
                      ProtocolIE-Container {{RICserviceUpdate-IEs}},
  protocolIEs
RICserviceUpdate-IEs E2AP-PROTOCOL-IES ::= {
   { ID id-RANfunctionsAdded
                           CRITICALITY reject TYPE RANfunctions-List
  PRESENCE optional } |
  { ID id-RANfunctionsModified CRITICALITY reject TYPE RANfunctions-List
  PRESENCE optional } |
  PRESENCE optional },
RANfunctions-List ::= SEQUENCE (SIZE(0..maxofRANfunctionID)) OF ProtocolIE-SingleContainer {
{RANfunction-ItemIEs} }
RANfunction-ItemIEs
               E2AP-PROTOCOL-IES ::= {
   PRESENCE mandatory },
}
RANfunction-Item ::= SEQUENCE {
 ranFunctionID
                      RANfunctionID.
  ranFunctionDefinition
                      RANfunctionDefinition,
  ranFunctionRevision
                     RANfunctionRevision,
  ranFunctionOID
                     RANfunctionOID OPTIONAL
}
RANfunctionsID-List ::= SEQUENCE (SIZE(0..maxofRANfunctionID)) OF ProtocolIE-
SingleContainer{{RANfunctionID-ItemIEs}}
RANfunctionID-ItemIEs E2AP-PROTOCOL-IES ::= {
  PRESENCE mandatory },
RANfunctionID-Item ::= SEQUENCE {
ranFunctionID RANfunctionID,
  ranFunctionRevision
                     RANfunctionRevision.
__ *******************
-- RIC SERVICE UPDATE ACKNOWLEDGE
__ ********************
RICserviceUpdateAcknowledge ::= SEQUENCE {
 protocolIEs
                     ProtocolIE-Container {{RICserviceUpdateAcknowledge-IEs}},
}
RICserviceUpdateAcknowledge-IEs E2AP-PROTOCOL-IES ::= {
 { ID id-RANfunctionsAccepted CRITICALITY reject TYPE RANfunctionsID-List
  PRESENCE optional } |
   PRESENCE optional },
RANfunctionsIDcause-List ::= SEQUENCE (SIZE(0..maxofRANfunctionID)) OF ProtocolIE-SingleContainer {
{RANfunctionIDcause-ItemIEs} }
PRESENCE mandatory },
}
```



```
RANfunctionIDcause-Item ::= SEQUENCE {
  ranFunctionID
                    RANfunctionID,
  cause
                    Cause,
-- RIC SERVICE UPDATE FAILURE
__ ********************
RICserviceUpdateFailure ::= SEQUENCE {
 protocolIEs
              ProtocolIE-Container {{RICserviceUpdateFailure-IEs}},
}
RICserviceUpdateFailure-IEs E2AP-PROTOCOL-IES ::= {
  PRESENCE optional } |
  { ID id-TimeToWait
                         CRITICALITY ignore TYPE TimeToWait
  PRESENCE optional } |
  { ID id-CriticalityDiagnostics
                        CRITICALITY ignore TYPE CriticalityDiagnostics
  PRESENCE optional
               },
}
__ *********************************
-- RIC Service Query Elementary Procedure
__ *********************
__ *********************
-- RIC SERVICE QUERY
__ *******************
RICserviceQuery ::= SEQUENCE {
  protocolIEs
                    ProtocolIE-Container {{RICserviceQuery-IEs}},
}
RICserviceQuery-IEs E2AP-PROTOCOL-IES ::= {
  PRESENCE optional },
}
-- ASN1STOP
```

9.3.5 Information Element Definitions

```
-- ASN1START
-- E2AP
-- Information Element Definitions
__ ******************
E2AP-TEs {
iso(1) identified-organization(3) dod(6) internet(1) private(4) enterprise(1) 53148 e2(1) version1
(1) e2ap(1) e2ap-IEs (2)}
DEFINITIONS AUTOMATIC TAGS ::=
BEGIN
IMPORTS
   Criticality,
   Presence,
   ProcedureCode,
   ProtocolIE-ID,
   TriggeringMessage
FROM E2AP-CommonDataTypes
```



```
maxnoofErrors,
    maxProtocolIEs
 FROM E2AP-Constants;
 -- B
 -- C
 Cause ::= CHOICE {
  ricRequest
                      CauseRIC,
    ricService
                       CauseRICservice,
                      CauseTransport,
    transport
    protocol
                      CauseProtocol,
    misc
                       CauseMisc,
    . . .
 CauseMisc ::= ENUMERATED {
    control-processing-overload,
    hardware-failure,
    om-intervention,
    unspecified,
    . . .
 CauseProtocol ::= ENUMERATED {
   transfer-syntax-error,
     abstract-syntax-error-reject,
    abstract-syntax-error-ignore-and-notify,
    message-not-compatible-with-receiver-state,
    semantic-error,
     \verb|abstract-syntax-error-falsely-constructed-message|,
    unspecified,
}
CauseRIC ::= ENUMERATED {
 ran-function-id-Invalid,
    action-not-supported,
    excessive-actions,
    duplicate-action,
   duplicate-event,
    function-resource-limit,
    request-id-unknown,
    inconsistent-action-subsequent-action-sequence,
    control-message-invalid,
    call-process-id-invalid,
    unspecified,
}
 CauseRICservice ::= ENUMERATED{
  function-not-required,
     excessive-functions,
    ric-resource-limit,
 CauseTransport ::= ENUMERATED {
    unspecified,
    transport-resource-unavailable,
 }
 __ *********************
 -- copied from 3GPP 38.413 NGAP IEs v15.5.0
 -- note: ie-Extensions removed
 __ *****************
 CriticalityDiagnostics ::= SEQUENCE {
   procedureCode
    triggeringMessage
                                  ProcedureCode
                                                                        OPTIONAL,
                                 TriggeringMessage
                                                                        OPTIONAL.
    procedureCriticality
                                  Criticality
                                                                        OPTIONAL,
     ricRequestorID
                                  RICrequestID
                                                                        OPTIONAL,
    iEsCriticalityDiagnostics
                                  CriticalityDiagnostics-IE-List
                                                                        OPTIONAL,
 }
 CriticalityDiagnostics-IE-List ::= SEQUENCE (SIZE(1..maxnoofErrors)) OF CriticalityDiagnostics-IE-
```



```
CriticalityDiagnostics-IE-Item ::= SEQUENCE {
   iECriticality Criticality,
   iE-TD
                       ProtocolIE-ID,
   typeOfError
                      TypeOfError,
}
-- D
-- E
-- Following IE used to carry 3GPP defined RAN Configuration Update message defined in F1AP, E1AP,
XnAP, etc.
E2nodeComponentConfigUpdate ::= CHOICE{
  gNBconfigUpdate E2nodeComponentConfigUpdateGNB,
   en-gNBconfigUpdate E2nodeComponentConfigUpdateENgNB,
   ng-eNBconfigUpdate E2nodeComponentConfigUpdateNGeNB,
    eNBconfigUpdate
                     E2nodeComponentConfigUpdateENB,
}
\verb"E2nodeComponentConfigUpdateGNB" ::= \verb"SEQUENCE" \{
   ngAPconfigUpdate OCTET STRING OPTIONAL,
   xnAPconfigUpdate OCTET STRING
elAPconfigUpdate OCTET STRING
                                       OPTIONAL,
                                      OPTIONAL,
    flaPconfigUpdate OCTET STRING OPTIONAL,
E2nodeComponentConfigUpdateENgNB ::= SEQUENCE{
    x2APconfigUpdate OCTET STRING OPTIONAL,
{\tt E2nodeComponentConfigUpdateNGeNB} ::= {\tt SEQUENCE} \{
    ngAPconfigUpdate OCTET STRING OPTIONAL,
    xnAPconfigUpdate
                       OCTET STRING
                                       OPTIONAL,
}
{\tt E2nodeComponentConfigUpdateENB} ::= {\tt SEQUENCE} \{
   s1APconfigUpdate OCTET STRING x2APconfigUpdate OCTET STRING
                                     OPTIONAL,
                                      OPTIONAL,
E2nodeComponentConfigUpdateAck ::= SEQUENCE{
    updateOutcome ENUMERATED {success, failure, ...},
    failureCause
                       Cause
                                      OPTIONAL,
E2nodeComponentType ::= ENUMERATED {qNB, qNB-CU-UP, qNB-DU, en-qNB, eNB, nq-eNB, ...}
E2nodeComponentID ::= CHOICE{
    e2nodeComponentTypeGNB-CU-UP
                                   E2nodeComponentGNB-CU-UP-ID,
    e2nodeComponentTypeGNB-DU
                                  E2nodeComponentGNB-DU-ID,
}
E2nodeComponentGNB-CU-UP-ID ::= SEQUENCE{
  gNB-CU-UP-ID
                   GNB-CU-UP-ID,
}
E2nodeComponentGNB-DU-ID ::= SEQUENCE{
  gNB-DU-ID GNB-DU-ID,
}
__ ***************
-- copied from 3GPP X2AP IEs v15.4.0
-- note: ie-Extensions removed
                       **********
ENB-ID ::= CHOICE {
   macro-eNB-ID
                          BIT STRING (SIZE (20)),
                         BIT STRING (SIZE (28)),
   home-eNB-ID
```



```
short-Macro-eNB-ID BIT STRING (SIZE(18)),
   long-Macro-eNB-ID
                       BIT STRING (SIZE(21))
__ *********************
-- copied from 3GPP 38.423 v15.5.0 XnAP IEs
ENB-ID-Choice ::= CHOICE {
   enb-ID-macro
                        BIT STRING (SIZE(20)),
   enb-ID-macro BIT STRING (SIZE(20)),
enb-ID-shortmacro BIT STRING (SIZE(18)),
enb-ID-longmacro BIT STRING (SIZE(21)),
}
__ *******************
-- copied from 3GPP X2AP IEs v15.4.0
-- note: ie-Extensions removed
-- Note: to avoid duplicate names with XnAP, GNB-ID renamed ENGNB-ID, GlobalGNB-ID renamed
GlobalenGNB-ID
__ ********************
ENGNB-ID ::= CHOICE {
   gNB-ID BIT STRING (SIZE (22..32)),
   . . .
}
-- F
GlobalE2node-ID ::= CHOICE{
                  GlobalE2node-gNB-TD.
  aNB
   en-gNB
                    GlobalE2node-en-gNB-ID,
   ng-eNB
                    GlobalE2node-ng-eNB-ID,
   eNB
                    GlobalE2node-eNB-ID,
}
GlobalE2node-en-gNB-ID ::= SEQUENCE{
global-gNB-ID GlobalenGNB-ID,
GlobalE2node-eNB-ID ::= SEQUENCE{
  global-eNB-ID GlobalENB-ID,
GlobalE2node-gNB-ID ::= SEQUENCE{
   global-gNB-ID GlobalgNB-ID, gNB-CU-UP-ID GNB-CU-UP-ID
                                  OPTIONAL,
   gNB-DU-ID
                   GNR-DU-TD
                                 OPTIONAL.
GlobalE2node-ng-eNB-ID ::= SEQUENCE{
  global-ng-eNB-ID GlobalngeNB-ID,
-- copied from 3GPP X2AP IEs v15.4.0
-- note: ie-Extensions removed
GlobalENB-ID ::= SEQUENCE {
  pLMN-Identity PLMN-Identity,
   eNB-ID
                    ENB-ID,
-- copied from 3GPP X2AP IEs v15.4.0
-- Note: to avoid duplicate names with XnAP, GNB-ID renamed ENGNB-ID, GlobalGNB-ID renamed
GlobalenGNB-ID ::= SEQUENCE {
   pLMN-Identity PLMN-Identity,
   gNB-ID
                    ENGNB-ID,
   . . .
-- copied from 3GPP 38.423 v15.5.0 XnAP IEs
__ ********************
GlobalgNB-ID ::= SEQUENCE {
```

```
plmn-id
                   PLMN-Identity,
                   GNB-ID-Choice,
   gnb-id
   . . .
-- copied from 3GPP 38.423 v15.5.0 XnAP IEs
__ ********************************
GlobalngeNB-ID ::= SEQUENCE {
  plmn-id PLMN-100.
ENB-ID-Choice,
GlobalRIC-ID ::= SEQUENCE{
  pLMN-Identity
                      PLMN-Identity,
  ric-ID
                      BIT STRING (SIZE (20)),
}
-- copied from 3GPP 38.463 v15.5.0 E1AP IEs
GNB-CU-UP-ID::= INTEGER (0..68719476735)
GNB-DU-ID::=
               INTEGER (0..68719476735)
__ ***************
-- copied from 3GPP 38.423 v15.5.0 XnAP IEs
GNB-ID-Choice ::= CHOICE {
gnb-ID
                      BIT STRING (SIZE(22..32)),
   . . .
}
-- H
-- I
-- K
-- T.
-- M
-- N
-- P
__ ********************
-- copied from 3GPP X2AP IEs v15.4.0
PLMN-Identity ::= OCTET STRING (SIZE(3))
-- Q
-- R
__ *****************************
-- Following IE defined in E2SM
__ *******************
RANfunctionDefinition ::= OCTET STRING
RANfunctionID ::= INTEGER (0..4095)
RANfunctionOID ::= PrintableString(SIZE(1..1000,...))
RANfunctionRevision ::= INTEGER (0..4095)
__ **********************
-- Following IE defined in E2SM
RICactionDefinition ::= OCTET STRING
RICactionID ::= INTEGER (0..255)
RICactionType ::= ENUMERATED{
   report,
   insert,
   policy,
}
__ *********************
-- Following IE defined in E2SM
```



```
**********
RICcallProcessID ::= OCTET STRING
RICcontrolAckRequest ::= ENUMERATED{
  noAck,
   ack,
  nAck,
-- Following IE defined in E2SM
__ *******************
RICcontrolHeader ::= OCTET STRING
__ ***************
-- Following IE defined in E2SM
RICcontrolMessage ::= OCTET STRING
__ *********************************
-- Following IE defined in {\tt E2SM}
RICcontrolOutcome ::= OCTET STRING
RICcontrolStatus ::= ENUMERATED{
  success,
  rejected,
  failed,
}
__ ********************
-- Following IE defined in E2SM
__ *******************************
RICeventTriggerDefinition ::= OCTET STRING
__ ******************
-- Following IE defined in E2SM
__ **********************************
RICindicationHeader ::= OCTET STRING
-- Following IE defined in E2SM
 ._ ****************
RICindicationMessage ::= OCTET STRING
RICindicationSN ::= INTEGER (0..65535)
RICindicationType ::= ENUMERATED{
  report.
   insert,
}
RICrequestID ::= SEQUENCE {
  ricRequestorID
                        INTEGER (0..65535),
   ricInstanceID INTEGER (0..65535),
}
RICsubsequentAction ::=SEQUENCE{
   \verb|ricSubsequentActionType| & \verb|RICSubsequentActionType|, \\
   ricTimeToWait
                        RICtimeToWait.
RICsubsequentActionType ::= ENUMERATED{
  continue,
   wait,
   . . .
}
RICtimeToWait ::= ENUMERATED{
   w1ms,
   w2ms,
```

```
w5ms,
```

```
w10ms,
   w20ms,
   w30ms,
   w40ms,
   w50ms,
   w100ms,
   w200ms,
   w500ms,
   w1s,
   w2s,
   w5s,
   w10s,
   w20s,
   w60s,
   . . .
}
-- S
__ ********************
-- copied from 3GPP 38.413 NGAP IEs v15.5.0
__ *****************
TimeToWait ::= ENUMERATED {v1s, v2s, v5s, v10s, v20s, v60s, ...}
TNLinformation ::= SEQUENCE{
   tnlAddress BIT STRING (SIZE(1..160,...)),
   tnlPort
                   BIT STRING (SIZE(16)) OPTIONAL,
   . . .
}
TNLusage ::= ENUMERATED{ric-service, support-function, both, ...}
-- copied from 3GPP 38.413 NGAP IEs v15.5.0
__ ***********
TypeOfError ::= ENUMERATED {
  not-understood,
   missing,
   . . .
}
-- [J
-- V
-- W
-- X
-- Y
-- Z
END
-- ASN1STOP
```

9.3.6 Common definitions

```
-- ASN1START
__ *****************
-- Common definitions
-- Derived from 3GPP 38.413 v15.4.0
__ *****************
E2AP-CommonDataTypes {
iso(1) identified-organization(3) dod(6) internet(1) private(4) enterprise(1) 53148 e2(1) version1
(1) e2ap(1) e2ap-CommonDataTypes (3) }
DEFINITIONS AUTOMATIC TAGS ::=
BEGIN
Criticality
            ::= ENUMERATED { reject, ignore, notify }
Presence
            ::= ENUMERATED { optional, conditional, mandatory }
               ::= INTEGER (0..255)
ProcedureCode
```

id-GlobalRIC-ID



```
::= INTEGER (0..65535)
ProtocolIE-ID
TriggeringMessage ::= ENUMERATED { initiating-message, successful-outcome, unsuccessfull-outcome }
-- ASN1STOP
```

9.3.7 Constant definitions

```
-- ASN1START
__ *********************
-- Constant definitions
__ *********************
E2AP-Constants {
iso(1) identified-organization(3) dod(6) internet(1) private(4) enterprise(1) 53148 e2(1) version1
(1) e2ap(1) e2ap-Constants (4) }
DEFINITIONS AUTOMATIC TAGS ::=
RECIN
IMPORTS
   ProcedureCode,
   ProtocolIE-ID
FROM E2AP-CommonDataTypes;
__ *******************
-- Elementary Procedures
__ ****************
id-E2setup
                                  ProcedureCode ::= 1
id-ErrorIndication
                                  ProcedureCode ::= 2
id-Reset
                                  ProcedureCode ::= 3
id-RICcontrol
                                  ProcedureCode ::= 4
id-RICindication
                                  ProcedureCode ::= 5
id-RICserviceQuery
                                  ProcedureCode ::= 6
id-RICserviceUpdate
                                 ProcedureCode ::= 7
id-RICsubscription
                                  ProcedureCode ::= 8
                                 ProcedureCode ::= 9
id-RICsubscriptionDelete
id-E2nodeConfigurationUpdate
                                  ProcedureCode ::= 10
id-E2connectionUpdate
                                  ProcedureCode ::= 11
__ *********************************
-- Extension constants
__ ********************
maxProtocolTEs
                                  INTEGER ::= 65535
__ ******************
-- Lists
maxnoofErrors
                                  INTEGER ::= 256
{\tt maxofE2nodeComponents}
                                  INTEGER ::= 1024
maxofRANfunctionID
                                   INTEGER ::= 256
maxofRICactionID
                                  INTEGER ::= 16
maxofTNLA
                                  INTEGER ::= 32
__ *****************
-- IEs
__ *********************
id-Cause
                                  ProtocolIE-ID ::= 1
id-CriticalityDiagnostics
                                  ProtocolIE-ID ::= 2
id-GlobalE2node-ID
                                  ProtocolIE-ID ::= 3
```

ProtocolIE-ID ::= 4

END

-- ASN1STOP

```
id-RANfunctionID
                                              ProtocolIE-ID ::= 5
id-RANfunctionID-Item
                                              ProtocolIE-ID ::= 6
id-RANfunctionIEcause-Item
                                              ProtocolIE-ID ::= 7
id-RANfunction-Item
                                              ProtocolIE-ID ::= 8
id-RANfunctionsAccepted
                                              ProtocolIE-ID ::= 9
id-RANfunctionsAdded
                                              ProtocolTE-TD ::= 10
id-RANfunctionsDeleted
                                              ProtocolIE-ID ::= 11
                                              ProtocolIE-ID ::= 12
id-RANfunctionsModified
id-RANfunctionsRejected
                                              ProtocolIE-ID ::= 13
id-RICaction-Admitted-Item
                                             ProtocolIE-ID ::= 14
id-RICactionID
                                              ProtocolIE-ID ::= 15
id-RTCaction-NotAdmitted-Item
                                             ProtocolIE-ID ::= 16
                                             ProtocolIE-ID ::= 17
id-RICactions-Admitted
id-RICactions-NotAdmitted
                                              ProtocolIE-ID ::= 18
                                              ProtocolIE-ID ::= 19
id-RICaction-ToBeSetup-Item
id-RICcallProcessID
                                              ProtocolIE-ID ::= 20
                                              ProtocolIE-ID ::= 21
id-RICcontrolAckRequest
id-RICcontrolHeader
                                              ProtocolIE-ID ::= 22
id-RICcontrolMessage
                                              ProtocolIE-ID ::= 23
id-RICcontrolStatus
                                              ProtocolIE-ID ::= 24
id-RICindicationHeader
                                              ProtocolIE-ID ::= 25
id-RICindicationMessage
                                              ProtocolIE-ID ::= 26
id-RICindicationSN
                                             ProtocolIE-ID ::= 27
id-RICindicationType
                                              ProtocolIE-ID ::= 28
                                              ProtocolIE-ID ::= 29
id-RICrequestID
id-RICsubscriptionDetails
                                              ProtocolIE-ID ::= 30
id-TimeToWait
                                              ProtocolIE-ID ::= 31
id-RICcontrolOutcome
                                             ProtocolIE-ID ::= 32
id-E2nodeComponentConfigUpdate
                                              ProtocolTE-ID ::= 33
id-E2nodeComponentConfigUpdate-Item ProtocolIE-ID ::= 34 id-E2nodeComponentConfigUpdateAck ProtocolIE-ID ::= 35 id-E2nodeComponentConfigUpdateAck-Item ProtocolIE-ID ::= 36
id-E2connectionSetup
                                             ProtocolIE-ID ::= 39
id-E2connectionSetupFailed
                                              ProtocolTE-TD ::= 40
id-E2connectionSetupFailed-Item
                                              ProtocolIE-ID ::= 41
id-E2connectionFailed-Item
                                            ProtocolIE-ID ::= 42
id-E2connectionUpdate-Item
                                              ProtocolIE-ID ::= 43
                                             ProtocolIE-ID ::= 44
id-E2connectionUpdateAdd
id-E2connectionUpdateModify id-E2connectionUpdateRemove
                                             ProtocolIE-ID ::= 45
                                              ProtocolIE-ID ::= 46
                                             ProtocolIE-ID ::= 47
id-E2connectionUpdateRemove-Item
                                              ProtocolIE-ID ::= 48
id-TNLinformation
```

9.3.8 Container definitions

```
-- ASN1START
-- Container definitions
-- derived from 3GPP 38.413 v15.4.0
E2AP-Containers {
iso(1) identified-organization(3) dod(6) internet(1) private(4) enterprise(1) 53148 e2(1) version1
(1) e2ap(1) e2ap-Containers (5) }
DEFINITIONS AUTOMATIC TAGS ::=
BEGIN
__ ******************
-- IE parameter types from other modules.
__ *******************
TMPORTS
   Criticality,
   Presence,
   PrivateIE-ID,
   ProtocolExtensionID,
```

```
FROM E2AP-CommonDataTypes
  maxProtocolIEs
FROM E2AP-Constants;
__ *********************
-- Class Definition for Protocol IEs
__ *******************
E2AP-PROTOCOL-IES ::= CLASS {
   &id
               ProtocolIE-ID
                                        UNIQUE,
   &criticality
              Criticality,
   &Value,
              Presence
   &presence
WITH SYNTAX {
  ID
               &id
   CRITICALITY
               &criticality
   TYPE
               &Value
   PRESENCE
               &presence
__ ********************
-- Class Definition for Protocol IEs
__ ********************
E2AP-PROTOCOL-IES-PAIR ::= CLASS {
                  ProtocolIE-ID
                                        UNIQUE,
   &firstCriticality Criticality,
   &FirstValue,
   &secondCriticality Criticality,
   &SecondValue,
   &presence
                 Presence
WITH SYNTAX {
  ID
                     &id
                    &firstCriticality
   FIRST CRITICALITY
  FIRST TYPE
                     &FirstValue
  SECOND CRITICALITY
SECOND TYPE
                    &secondCriticality
                      &SecondValue
   PRESENCE
                      &presence
}
  ****************
-- Container for Protocol IEs
ProtocolIE-Container {E2AP-PROTOCOL-IES : IEsSetParam} ::=
  SEQUENCE (SIZE (0..maxProtocolIEs)) OF
   ProtocolIE-Field {{IEsSetParam}}
ProtocolIE-SingleContainer {E2AP-PROTOCOL-IES : IEsSetParam} ::=
   ProtocolIE-Field {{IEsSetParam}}
ProtocolIE-Field {E2AP-PROTOCOL-IES : IEsSetParam} ::= SEQUENCE {
           E2AP-PROTOCOL-IES.&id
                                       ({IEsSetParam}),
   id
   criticality
               E2AP-PROTOCOL-IES.&criticality
                                            ({IEsSetParam}{@id}),
               E2AP-PROTOCOL-IES.&Value
                                            ({IEsSetParam}{@id})
   value
}
__ ****************
-- Container for Protocol IE Pairs
__ ********************
ProtocolIE-ContainerPair {E2AP-PROTOCOL-IES-PAIR : IEsSetParam} ::=
```



```
1 2 3 4 Pro 5 6 7 8 9 10 } 11 12 -- 13 -- 14 -- 15 15 -- 16 -- 17 18 Pro 16 20 21 22 23 Pro 24 IE: 25 26 27 28 29 ENI 30 31
```

35

37

39

41

43

47

48

```
SEQUENCE (SIZE (0..maxProtocolIEs)) OF
   ProtocolIE-FieldPair {{IEsSetParam}}
ProtocolIE-FieldPair {E2AP-PROTOCOL-IES-PAIR : IEsSetParam} ::= SEQUENCE {
                   E2AP-PROTOCOL-IES-PAIR.&id
                                                        ({IEsSetParam}),
   id
   ({IEsSetParam}{@id}),
                                                          ({IEsSetParam}{@id}),
   secondCriticality E2AP-PROTOCOL-IES-PAIR.&secondCriticality
                                                         ({IEsSetParam}{@id}),
   secondValue
                    E2AP-PROTOCOL-IES-PAIR.&SecondValue
                                                          ({IEsSetParam}{@id})
__ *********************
-- Container Lists for Protocol IE Containers
__ ********************
ProtocolIE-ContainerList {INTEGER : lowerBound, INTEGER : upperBound, E2AP-PROTOCOL-IES :
IEsSetParam} ::=
   SEQUENCE (SIZE (lowerBound..upperBound)) OF
   ProtocolIE-SingleContainer {{IEsSetParam}}
ProtocolIE-ContainerPairList {INTEGER : lowerBound, INTEGER : upperBound, E2AP-PROTOCOL-IES-PAIR :
IEsSetParam} ::=
   SEQUENCE (SIZE (lowerBound..upperBound)) OF
   ProtocolIE-ContainerPair {{IEsSetParam}}
END
-- ASN1STOP
```

9.4 Message transfer syntax

E2AP shall use the ASN.1 Basic Packed Encoding Rules (BASIC-PER) Aligned Variant as transfer syntax, as specified in ITU-T Rec. X.691 [15].

9.5 Timers

- The following Timers are defined for use over the E2 interface in Near-RT RIC and E2 Node.
- 38 Triceventcreate
 - Specifies the maximum time for the RIC Subscription Request event creation procedure in the E2 Node.
- 40 T_{RICEVENT delete}
 - Specifies the maximum time for the RIC Subscription Request event deletion procedure in the E2 Node.
- 42 T_{RICcontrol}
 - Specifies the maximum time for the RIC Control Request event request procedure in the E2 Node.
- 44 Time To Wait
- Specifies the time to wait used in failure cases for E2 Setup procedure and RIC Service Update procedure. It is also used in the *RIC Subsequent Action* IE.



10 Handling of Unknown, Unforeseen and Erroneous

Protocol Data

Section 10 of TS 36.413 [13] is applicable for the purposes of the present document.



Annex ZZZ: O-RAN Adopter License Agreement

- 2 BY DOWNLOADING, USING OR OTHERWISE ACCESSING ANY O-RAN SPECIFICATION, ADOPTER
- 3 AGREES TO THE TERMS OF THIS AGREEMENT.
- 4 This O-RAN Adopter License Agreement (the "Agreement") is made by and between the O-RAN Alliance and the
- 5 entity that downloads, uses or otherwise accesses any O-RAN Specification, including its Affiliates (the "Adopter").
- This is a license agreement for entities who wish to adopt any O-RAN Specification.

Section 1: DEFINITIONS

- 8 1.1 "Affiliate" means an entity that directly or indirectly controls, is controlled by, or is under common control with
- another entity, so long as such control exists. For the purpose of this Section, "Control" means beneficial ownership of
- fifty (50%) percent or more of the voting stock or equity in an entity.
- 1.2 "Compliant Implementation" means any system, device, method or operation (whether implemented in hardware,
- software or combinations thereof) that fully conforms to a Final Specification.
- 13 "Adopter(s)" means all entities, who are not Members, Contributors or Academic Contributors, including their
- 14 Affiliates, who wish to download, use or otherwise access O-RAN Specifications.
- 15 1.4 "Minor Update" means an update or revision to an O-RAN Specification published by O-RAN Alliance that does
- not add any significant new features or functionality and remains interoperable with the prior version of an O-RAN
- 17 Specification. The term "O-RAN Specifications" includes Minor Updates.
- 18 1.5 "Necessary Claims" means those claims of all present and future patents and patent applications, other than design
- patents and design registrations, throughout the world, which (i) are owned or otherwise licensable by a Member,
- 20 Contributor or Academic Contributor during the term of its Member, Contributor or Academic Contributorship; (ii)
- such Member, Contributor or Academic Contributor has the right to grant a license without the payment of
- consideration to a third party; and (iii) are necessarily infringed by a Compliant Implementation (without considering
- any Contributions not included in the Final Specification). A claim is necessarily infringed only when it is not possible
- on technical (but not commercial) grounds, taking into account normal technical practice and the state of the art
- 25 generally available at the date any Final Specification was published by the O-RAN Alliance or the date the patent
- 26 claim first came into existence, whichever last occurred, to make, sell, lease, otherwise dispose of, repair, use or operate
- a Compliant Implementation without infringing that claim. For the avoidance of doubt in exceptional cases where a
- 28 Final Specification can only be implemented by technical solutions, all of which infringe patent claims, all such patent
- 29 claims shall be considered Necessary Claims.
- 30 1.6 "Defensive Suspension" means for the purposes of any license grant pursuant to Section 3, Member, Contributor,
- Academic Contributor, Adopter, or any of their Affiliates, may have the discretion to include in their license a term
- 32 allowing the licensor to suspend the license against a licensee who brings a patent infringement suit against the
- 33 licensing Member, Contributor, Academic Contributor, Adopter, or any of their Affiliates.

Section 2: COPYRIGHT LICENSE

- 35 2.1 Subject to the terms and conditions of this Agreement, O-RAN Alliance hereby grants to Adopter a nonexclusive,
- 36 nontransferable, irrevocable, non-sublicensable, worldwide copyright license to obtain, use and modify O-RAN
- 37 Specifications, but not to further distribute such O-RAN Specification in any modified or unmodified way, solely in
- 38 furtherance of implementations of an O-RAN
- 39 Specification.

34

42

- 40 2.2 Adopter shall not use O-RAN Specifications except as expressly set forth in this Agreement or in a separate written
- 41 agreement with O-RAN Alliance.

Section 3: FRAND LICENSE

- 43 3.1 Members, Contributors and Academic Contributors and their Affiliates are prepared to grant based on a separate
- Patent License Agreement to each Adopter under Fair Reasonable And Non- Discriminatory (FRAND) terms and
- 45 conditions with or without compensation (royalties) a nonexclusive, non-transferable, irrevocable (but subject to
- Defensive Suspension), non-sublicensable, worldwide patent license under their Necessary Claims to make, have made,
- use, import, offer to sell, lease, sell and otherwise distribute Compliant Implementations; provided, however, that such
- license shall not extend: (a) to any part or function of a product in which a Compliant Implementation is incorporated



6

7

8 9

10

11

12 13

14

15

16

17 18

19

20

21 22

30

40 41

43

45

- 1 that is not itself part of the Compliant Implementation; or (b) to any Adopter if that Adopter is not making a reciprocal 2 grant to Members, Contributors and Academic Contributors, as set forth in Section 3.3. For the avoidance of doubt, the 3 foregoing licensing commitment includes the distribution by the Adopter's distributors and the use by the Adopter's customers of such licensed Compliant Implementations. 4
 - 3.2 Notwithstanding the above, if any Member, Contributor or Academic Contributor, Adopter or their Affiliates has reserved the right to charge a FRAND royalty or other fee for its license of Necessary Claims to Adopter, then Adopter is entitled to charge a FRAND royalty or other fee to such Member, Contributor or Academic Contributor, Adopter and its Affiliates for its license of Necessary Claims to its licensees.
 - 3.3 Adopter, on behalf of itself and its Affiliates, shall be prepared to grant based on a separate Patent License Agreement to each Members, Contributors, Academic Contributors, Adopters and their Affiliates under Fair Reasonable And Non-Discriminatory (FRAND) terms and conditions with or without compensation (royalties) a nonexclusive, non-transferable, irrevocable (but subject to Defensive Suspension), non-sublicensable, worldwide patent license under their Necessary Claims to make, have made, use, import, offer to sell, lease, sell and otherwise distribute Compliant Implementations; provided, however, that such license will not extend: (a) to any part or function of a product in which a Compliant Implementation is incorporated that is not itself part of the Compliant Implementation; or (b) to any Members, Contributors, Academic Contributors, Adopters and their Affiliates that is not making a reciprocal grant to Adopter, as set forth in Section 3.1. For the avoidance of doubt, the foregoing licensing commitment includes the distribution by the Members', Contributors', Academic Contributors', Adopters' and their Affiliates' distributors and the use by the Members', Contributors', Academic Contributors', Adopters' and their Affiliates' customers of such licensed Compliant Implementations.

Section 4: TERM AND TERMINATION

- 4.1 This Agreement shall remain in force, unless early terminated according to this Section 4.
- 23 4.2 O-RAN Alliance on behalf of its Members, Contributors and Academic Contributors may terminate this Agreement 24 if Adopter materially breaches this Agreement and does not cure or is not capable of curing such breach within thirty 25
 - (30) days after being given notice specifying the breach.
- 26 4.3 Sections 1, 3, 5 - 11 of this Agreement shall survive any termination of this Agreement. Under surviving Section 3, 27 after termination of this Agreement, Adopter will continue to grant licenses (a) to entities who become Adopters after 28 the date of termination; and (b) for future versions of O-RAN Specifications that are backwards compatible with the 29 version that was current as of the date of termination.

Section 5: CONFIDENTIALITY

Adopter will use the same care and discretion to avoid disclosure, publication, and dissemination of O-RAN 31 Specifications to third parties, as Adopter employs with its own confidential information, but no less than reasonable 32 care. Any disclosure by Adopter to its Affiliates, contractors and consultants should be subject to an obligation of 33 confidentiality at least as restrictive as those contained in this Section. The foregoing obligation shall not apply to any 34 35 information which is: (1) rightfully known by Adopter without any limitation on use or disclosure prior to disclosure; (2) publicly available through no fault of Adopter; (3) rightfully received without a duty of confidentiality; (4) disclosed 36

by O-RAN Alliance or a Member, Contributor or Academic Contributor to a third party without a duty of 37

confidentiality on such third party; (5) independently developed by Adopter; (6) disclosed pursuant to the order of a 38 court or other authorized governmental body, or as required by law, provided that Adopter provides reasonable prior 39

written notice to O-RAN Alliance, and cooperates with O-RAN Alliance and/or the applicable Member, Contributor or

Academic Contributor to have the opportunity to oppose any such order; or (7) disclosed by Adopter with O-RAN

Alliance's prior written approval. 42

Section 6: INDEMNIFICATION

- 44 Adopter shall indemnify, defend, and hold harmless the O-RAN Alliance, its Members, Contributors or Academic
 - Contributors, and their employees, and agents and their respective successors, heirs and assigns (the "Indemnitees"),
- against any liability, damage, loss, or expense (including reasonable attorneys' fees and expenses) incurred by or 46
- 47 imposed upon any of the Indemnitees in connection with any claims, suits, investigations, actions, demands or
- judgments arising out of Adopter's use of the licensed O-RAN Specifications or Adopter's commercialization of 48
- 49 products that comply with O-RAN Specifications.



19

23

27

Section 7: LIMITATIONS ON LIABILITY; NO WARRANTY

- 2 EXCEPT FOR BREACH OF CONFIDENTIALITY, ADOPTER'S BREACH OF SECTION 3, AND ADOPTER'S
- INDEMNIFICATION OBLIGATIONS, IN NO EVENT SHALL ANY PARTY BE LIABLE TO ANY OTHER 3
- 4 PARTY OR THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, PUNITIVE OR CONSEQUENTIAL
- 5 DAMAGES RESULTING FROM ITS PERFORMANCE OR NON-PERFORMANCE UNDER THIS AGREEMENT,
- IN EACH CASE WHETHER UNDER CONTRACT, TORT, WARRANTY, OR OTHERWISE, AND WHETHER OR 6
- 7 NOT SUCH PARTY HAD ADVANCE NOTICE OF THE POSSIBILITY OF SUCH DAMAGES. O-RAN
- 8 SPECIFICATIONS ARE PROVIDED "AS IS" WITH NO WARRANTIES OR CONDITIONS WHATSOEVER.
- WHETHER EXPRESS, IMPLIED, STATUTORY, OR OTHERWISE. THE O-RAN ALLIANCE AND THE 9
- 10 MEMBERS, CONTRIBUTORS OR ACADEMIC CONTRIBUTORS EXPRESSLY DISCLAIM ANY WARRANTY
- OR CONDITION OF MERCHANTABILITY, SECURITY, SATISFACTORY QUALITY, NONINFRINGEMENT, 11
- 12 FITNESS FOR ANY PARTICULAR PURPOSE, ERROR-FREE OPERATION, OR ANY WARRANTY OR
- CONDITION FOR O-RAN SPECIFICATIONS. 13

Section 8: ASSIGNMENT 14

- 15 Adopter may not assign the Agreement or any of its rights or obligations under this Agreement or make any grants or
- 16 other sublicenses to this Agreement, except as expressly authorized hereunder, without having first received the prior,
- 17 written consent of the O-RAN Alliance, which consent may be withheld in O-RAN Alliance's sole discretion. O-RAN
- 18 Alliance may freely assign this Agreement.

Section 9: THIRD-PARTY BENEFICIARY RIGHTS

- Adopter acknowledges and agrees that Members, Contributors and Academic Contributors (including future Members, 20
- Contributors and Academic Contributors) are entitled to rights as a third-party beneficiary under this Agreement, 21
- including as licensees under Section 3. 22

Section 10: BINDING ON AFFILIATES

- Execution of this Agreement by Adopter in its capacity as a legal entity or association constitutes that legal entity's or 24
- association's agreement that its Affiliates are likewise bound to the obligations that are applicable to Adopter hereunder 25
- 26 and are also entitled to the benefits of the rights of Adopter hereunder.

Section 11: GENERAL

- This Agreement is governed by the laws of Germany without regard to its conflict or choice of law provisions. 28
- 29 This Agreement constitutes the entire agreement between the parties as to its express subject matter and expressly
- supersedes and replaces any prior or contemporaneous agreements between the parties, whether written or oral, relating 30
- 31 to the subject matter of this Agreement.
- 32 Adopter, on behalf of itself and its Affiliates, agrees to comply at all times with all applicable laws, rules and
- regulations with respect to its and its Affiliates' performance under this Agreement, including without limitation, export 33
- control and antitrust laws. Without limiting the generality of the foregoing, Adopter acknowledges that this Agreement 34
- 35 prohibits any communication that would violate the antitrust laws.
- 36 By execution hereof, no form of any partnership, joint venture or other special relationship is created between Adopter,
- 37 or O-RAN Alliance or its Members, Contributors or Academic Contributors. Except as expressly set forth in this
- 38 Agreement, no party is authorized to make any commitment on behalf of Adopter, or O-RAN Alliance or its Members,
- Contributors or Academic Contributors. 39
- 40 In the event that any provision of this Agreement conflicts with governing law or if any provision is held to be null,
- void or otherwise ineffective or invalid by a court of competent jurisdiction, (i) such provisions will be deemed stricken 41
- from the contract, and (ii) the remaining terms, provisions, covenants and restrictions of this Agreement will remain in 42
- 43 full force and effect.
- 44 Any failure by a party or third party beneficiary to insist upon or enforce performance by another party of any of the
- 45 provisions of this Agreement or to exercise any rights or remedies under this Agreement or otherwise by law shall not
- be construed as a waiver or relinquishment to any extent of the other parties' or third party beneficiary's right to assert 46
- or rely upon any such provision, right or remedy in that or any other instance; rather the same shall be and remain in full 47
- force and effect. 48

49