Computer Systems Organisation (CS2.201)

Summer 2021, IIIT Hyderabad

28 June, Monday (Lecture 15) – SEQ Timing

Taught by Prof. Avinash Sharma

SEQ Timing

In the operation of the hardware structure, a single clock transition triggers a flow through combinational logic to execute an entire instruction.

The implementation of SEQ consists of combinational logic and two forms of memory: clocked registers and RAM (the register file and the instruction and data memory).

We can consider reading from RAM as similar to combinational logic: an output word is generated based on the address input. This is a reasonable assumption for small memory and can be mimicked for larger circuits.

There are only four hardware units that require sequencing control – the program counter, the CC register, the data memory and the register file.

These are all controlled by a single clock signal:

- the PC is loaded with a new instruction address every cycle
- the CC register is loaded only when an integer operation instruction is executed
- the data memory is written only when rmmovl, pushl or call instruction is executed
- the register file allows up to two registers to be updated on every cycle

The SEQ hardware achieves the same effect as a sequential execution would, although in fact all the state updates occur simultaneously. This equivalence holds because the design follows the following principle:

The processor never needs to read back the state updated by an instruction in order to complete the processing of this instruction.

For example, the implementation of pushl reads the stack-top from %esp first and then decrements it. Implementing it the other way around would have violated the above principle.

Consider the Y86 code

0x000: irmovl \$0x100, %ebx
0x006: irmovl \$0x200, %edx
0x00c: addl %edx, %ebx

0x00e: je dest

0x013: rmmovl %ebx, 0(%edx)

dest:

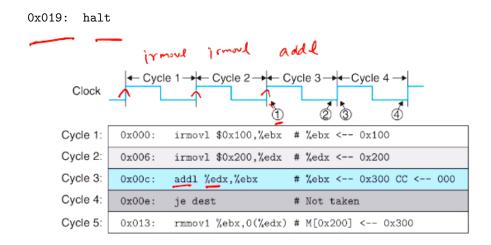


Figure 1: Execution of Example Code

All the irmov1 instructions take one cycle each.

At the beginning of cycle 3, the CCs were 100. By the end, 000 is being written to the CC register. Similarly, the PC is about to be written by the instruction address 0x00e, and %ebx with the value 0x300. But the loading will not actually happen until the next clock cycle starts.

Immediately after the clock edge, the CCs are 000 and the PC is 0x00e. The value ZF tells the processor to simply increment the PC and not jump; therefore, by the end, of the cycle, 0x013 is about to be loaded into PC.

SEQ Stage Implementations

Fetch

This unit reads 6 bytes from memory at a time, using the PC as the address of the first byte. In case of a memory error, the signal is sent to icode to replace the instruction read with nop.

Whether or not the instruction includes registers and/or an immediate value is indicated by 'need regids' and 'need valC', taken from icode; according to these, the PC value increments and generates valP.

The hardware unit 'Align' uses the value of 'need regids' to identify whether the next bytes are register IDs or not. It also generates the constant word valc.

Decode and Write-Back

These two stages are combined as they both access the register file. The icode. The register file allows up to two simultaneous reads (A and B) and two simultaneous writes (E and M), each of which has an address and a data

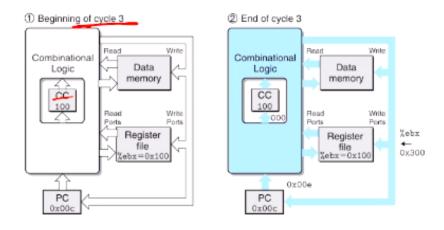


Figure 2: Cycle 3

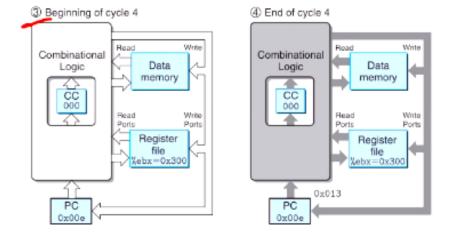


Figure 3: Cycle 4

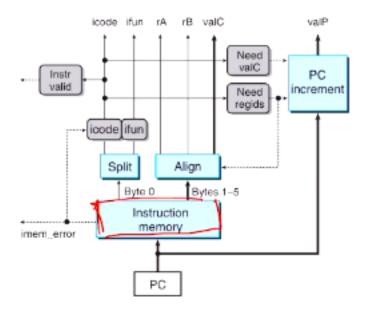


Figure 4: Fetch Implementation

connection.

The four blocks at the bottom generate the register IDs for the register file based the icode and the condition code Cnd.

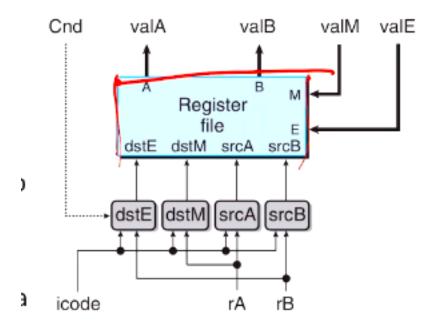


Figure 5: Decode and Write-Back Implementation