


Mobile Networks


Connections and structures



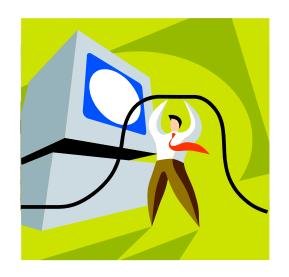

Public cellular network

- Access network with radio link
 - Space is divided in cells with a base station
 - Mobile Node (MN) can work when changing between cells

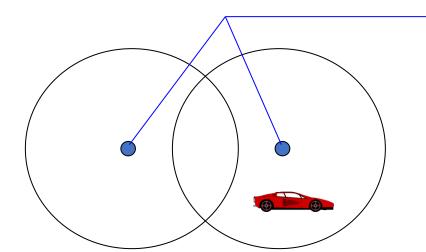

Cell coverage size is

- Highly variable
- Depends on the technology
- Depends on the number of users



Cells

Advantages:

- > capacity
- > # users
- < power
- > robustness (distributed system)

Each cell locally takes care of interference, coverage area, etc...

Disadvantages

- Uses cabled network between cells
- Many handovers
- Interference between cells


Fundamental:

Cell dimensioning

- Length of the cell
- Frequency re-utilization
- Channel reservation




Types of Wireless networks

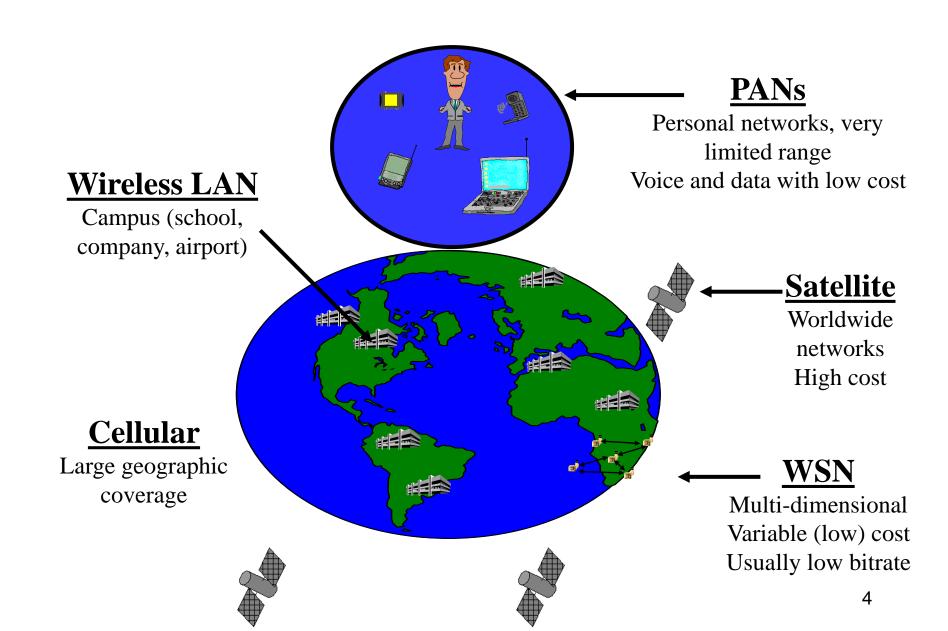



Comparison Between Wireless Technologies

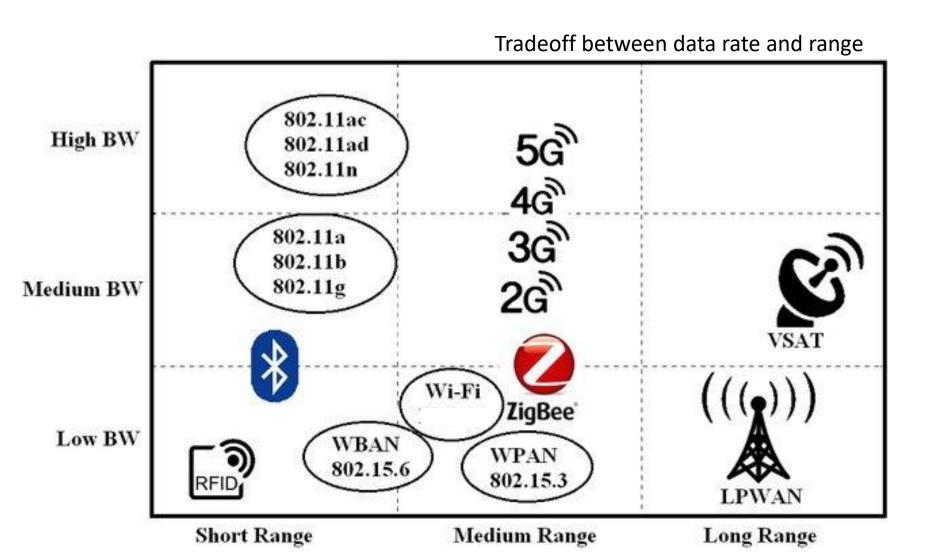




Standardization of Wireless Networks

- Wireless networks are standardized by IEEE.
- Under 802 LAN MAN standards committee.

LAN – Local Area Netework MAN – Metro Area Network

ISO OSI 7-layer model

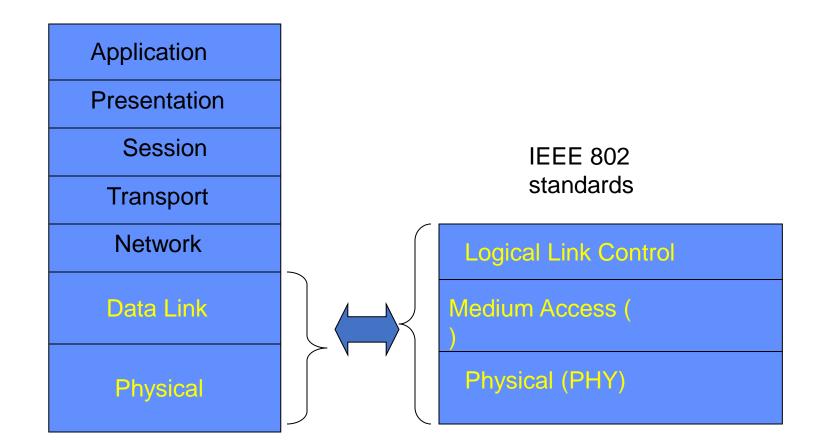



802.11



Outline

- 802.11 standard
- ➤ Physical layer
- MAC
 - DCF Distributed Coordination Function
 - PCF Point Coordination Function
- Advanced MAC functions



Historic IEEE 802.11 standard

- Local Wireless Network (WLAN)
- Includes Medium Access Control (MAC)
- Includes(d) five physical layers (PHY)
 - Frequency Hopping Spread Spectrum
 - Direct Sequence Spread Spectrum
 - infrared
 - 11 Mbps 2.4 GHz
 - 54 Mbps 5 GHz
 - Early efforts divided in three standards:
 - 802.11
 - 802.11a
 - 802.11b



Historic IEEE 802.11 Family

Protocol	Release Data	Freq.	Rate (typical)	Rate (max)	Range (indoor)
Legacy	1997	2.4 GHz	1 Mbps	2Mbps	?
802.11a	1999	5 GHz	25 Mbps	54 Mbps	~30 m
802.11b	1999	2.4 GHz	6.5 Mbps	11 Mbps	~30 m
802.11g	2003	2.4 GHz	25 Mbps	54 Mbps	~30 m
802.11n	2008	2.4/5 GHz	200 Mbps	600 Mbps	~50 m
802.11ac	2014	5 GHz	600Mbps	3.5 Gbps	~35m
802.11ax (Wi-Fi 6)	2021	2.4/5 GHz	130 (2.4 GHz) 400-800Mbps (5GHz)	10 Gbps	~30m
802.11be (Wi-Fi 7)	TBD	2.4/5/6 GHz	?	40 Gbps	?
802.11ay	2021	60 GHz	20 Gbps	20-40 Gbps	300-500m




New 802.11 Radio technologies

Current recent innovations being deployed:

• 802.11ax – Increased throughput in 2.4, 5 (and 6) GHz bands. Increased efficiency.


WiFi6

- 802.11ay Support for 20 Gbps in 60 GHz band.
- 802.11az 2nd generation positioning features.
- 802.11ba Wake up radio. Low power IoT applications.
- 802.11bb Light Communications
- 802.11bc Enhanced Broadcast Service
- 802.11bd Enhancements for Next Generation V2X
- 802.11be Extremely High Throughput
- 802.11bf WLAN Sensing [pending approval]

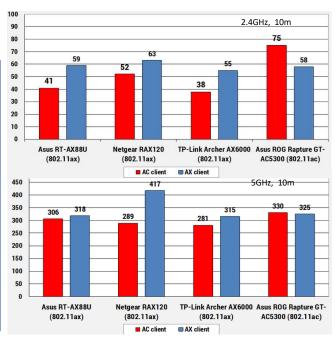



802.11 Architecture

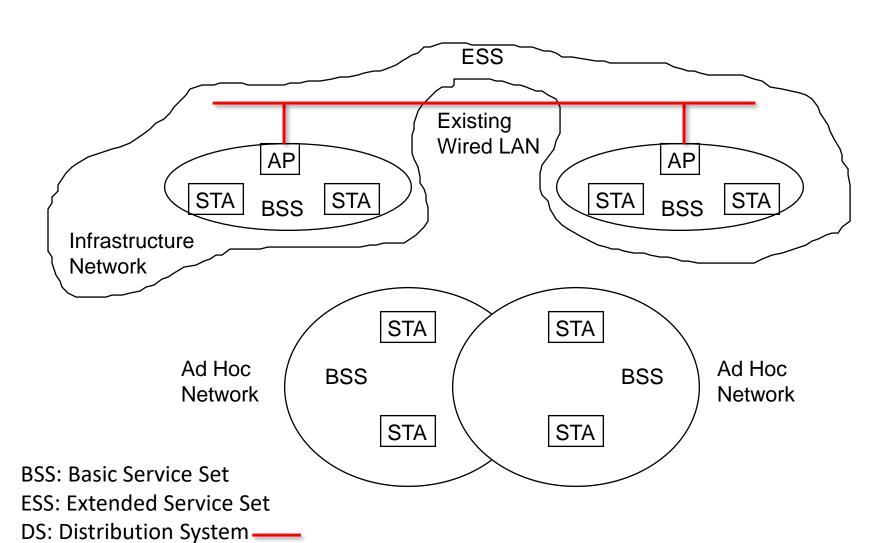



Components

- Station (STA) Mobile Terminal
- Access Point (AP) STA are connected to Access Points (infrastructured networks)
- Basic Service Set (BSS) STA and AP with the same coverage and connectivity area create a BSS.
- Extended Service Set (ESS) Multiple BSSs connected via the APs create an ESS.
- Distribution System (DS) Contains the entity that interconnects APs




Distribution System (DS)

- The Distribution system interconnects multiple BSSs
- 802.11 standard logically separates the wireless medium from the distribution system it does not preclude, nor demand, that the multiple media be same or different
- An Access Point (AP) is a STA that provides access to the DS by providing DS services in addition to acting as a STA.
- Data moves between BSS and the DS via an AP
- The DS and BSSs allow 802.11 to create a wireless network of arbitrary size and complexity called the Extended Service Set network (ESS)



Infrastructure vs Ad Hoc Mode

- Infrastructure mode: stations communicate with one or more access points which are connected to the wired infrastructure
 - What is deployed in practice
- Two modes of operation:
 - Distributed Control Functions DCF
 - Point Control Functions PCF
 - PCF is rarely used inefficient
- Alternative is "ad hoc" mode: multi-hop, assumes no infrastructure
 - Rarely used, e.g. military
 - Hot research topic!

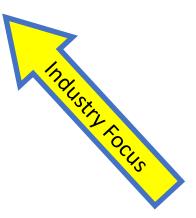



What about Ad Hoc?

- Ad-hoc mode: no fixed network infrastructure
 - Based on an Independent BSS
 - A wireless endpoint sends and all nodes within range can pick up signal
 - Each packet carries destination and source address
 - Effectively need to implement a "network layer"
 - How do know who is in the network?
 - Routing?
 - Security?




Outline

- 802.11 standard
- ➤ Physical layer
- MAC
 - DCF
 - PCF
- Advanced MAC functions



802.11 Channels (2.4GHz)


- The frequency is divided in channels
- In the UK and most of EU: 13 channels, 5MHz apart, 2.412 2.472 GHz
- In the US: only 11 channels
- Each channel is 22 MHz
- Significant overlap
- Best channels are 1, 6 and 11

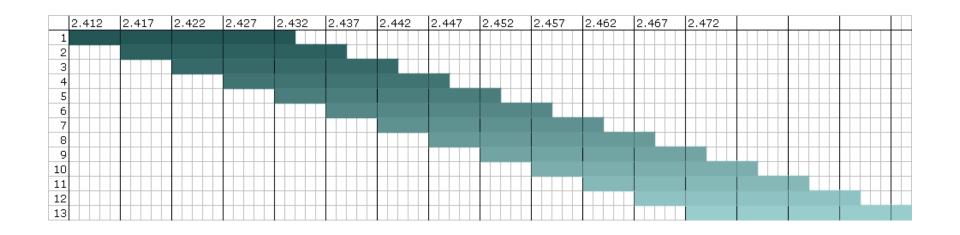




Frequency planning

- Interference from other WLAN systems or cells
- IEEE 802.11 operates at uncontrolled ISM band
- 14 channels of 802.11 are overlapping, only 3 channels are disjointed. For example Ch1, 6, 11
- Throughput decreases with less channel spacing
- A example of frequency allocation in multi-cell network

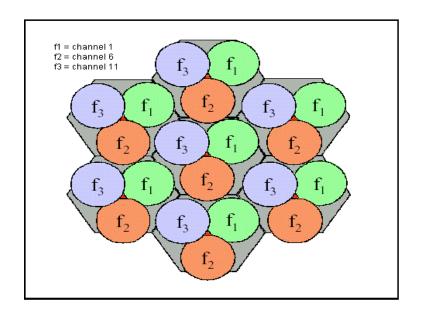

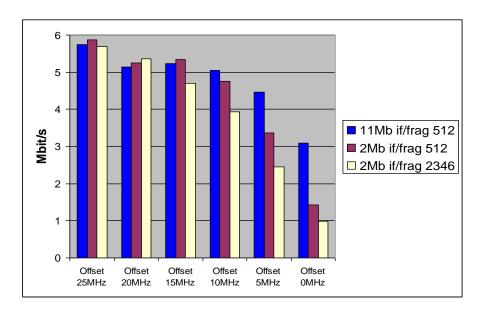




802.11 (5GHz)

- Uses frequency division in the 5.2 and 5.7 GHz bands
- What are the benefits?
 - Greater bandwidth
 - Less potential interference (5GHz)
 - More non-overlapping channels
- But does not provide interoperability
 - Interoperability at chipset level




Example: 802.11a Physical Channels

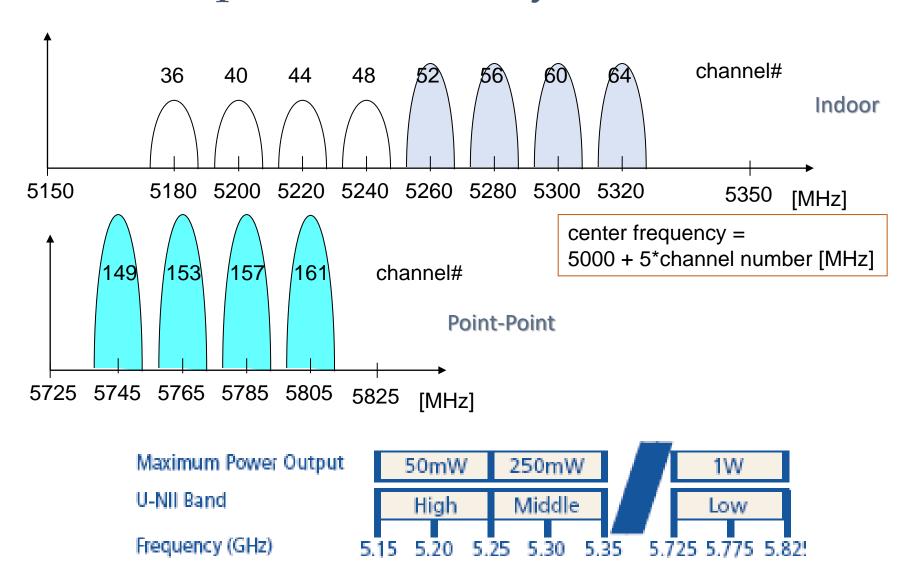



WiFi 6 radio layer enhancements

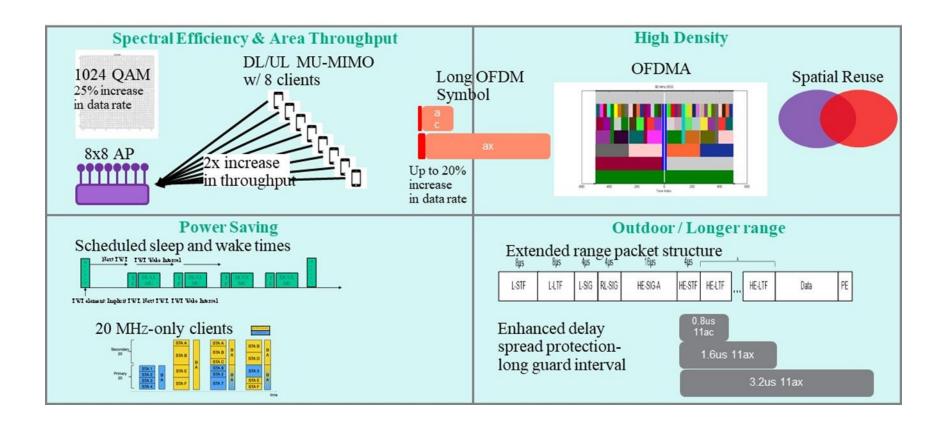



OFDMA – Orthogonal Frequency-division Multiple Access


- Multi-user version of OFDM (Orthogonal frequency-division Multiplexing)
- Divides channel resources into multiple Resource Units (RUs)
- Different users are allocated these Rus
- Data of multiple users can be sent on one channel simultaneously
- New in Wi-Fi 6
- So:
 - The AP communicates with multiple users during one transmission period






MU-MIMO – Multi-user Multiple-Input and Multiple-Output

- Introduced in Wi-Fi 5
- # antennas in APs is greater than in terminals
 - Unable to make the most out of channel resources
 - E.g.: in 802.11ac, which is only in 5GH<, each spatial stream (1x1 MIMO) has a max PHY rate of 433 Mbps when used with 80 MHz-wide channels
 - Single user transmission
- With MU-MIMO
 - AP communicates with multiple terminals simultaneously
 - Wi-Fi 5: 4x4 DL MU-MIMO (4 * 433 in downlink only)
 - Wi-Fi 6: 8x8 UL/DL MU-MIMO (8 * 433 in uplink/downlink)
- MU-MIMO





OFDMA + MU-MIMO

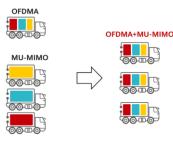

MU-MIMO

- Physically divides network resources to increase capacity and efficiency in high-bandwidth applications (i.e., video streaming and download)
- Increases spatial stream utilization and effective bandwidth while also lowering latency
- Prone to impact from terminals

OFDMA

- Supports multi-channel transmission in the frequency domain
- Ideal for low-bandwidth, small-packet applications (e.g., web browsing, IM)
- Increases spatial stream utilization and queueing time.
- Stable and resilient to impact from terminals
- MU-MIMO + OFDMA = Complementary operation
 - Optimal resource allocation based on services, via joint scheduling



Wi-Fi 7

- 6 GHz band!
 - In reality, Wi-Fi 6E also had...
 - Maximum channel bandwidth: 320MHz
 - Wi-fi 6: 160MHz
 - Analogy: highways with more lanes
- Quadrature Amplitude Modulation (QAM)
 - Data is represented by combinations of amplitudes, phases or frequencies
 - The encoding scheme determines the number of bits that can be carried in a symbol
 - Wi-Fi 6 uses 1024-QAM (10 bits) ... Wi-Fi 7 used 4096-AQM (12 bits→1.2x +)
- Multi-link Operation (MLO): 2.4GHz + 5GHz+ 6 GHz
- Peak transmission rate:
 - Wi-fi 6: 9.6Gbps
 - Wi-Fi 7: 23.06Gbps (x2.4 times!)




Outline

- 802.11 standard
- Physical layer
- **≻**MAC
 - DCF
 - PCF
- Advanced MAC functions



802.11- in the TCP/IP stack

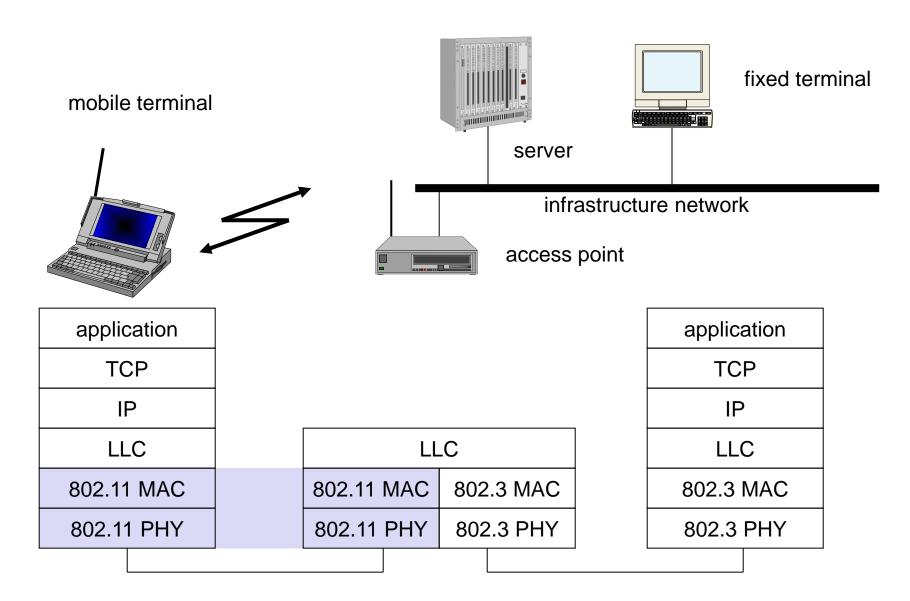



802.11 MAC Overview

- Uses variant of Carrier Sense Multiple Access with Collision Avoidance (CS/MACA)
 - RTS/CTS used for addressing hidden-nodes
- Automatic Repeat Request (ARQ)
 - Error control method for reliability
 - All frames have to be properly ACK, or timeout occurs
- Two operating modes:
 - Infra-structured network (Access point)
 - Ad-Hoc networks (without access point)
- Power saving support
- Wired Equivalent Privacy (WEP)
- MAC management
- Independent of the physical layer or of operating mode




Features of 802.11 MAC protocol

- Fair control access
 - Supports Media Access Control functionalities
 - Addressing
 - CSMA/CA
- Protection of data
 - Error detection (FCS Frame Check Sequence)
 - Compares number with received values
 - Error correction (ACK frame)
- Reliable data delivery
 - Fragmentation
 - Flow control: stop-and-wait (the next frame is only sent after an ACK from the previous one is received)




MAC IEEE802.11

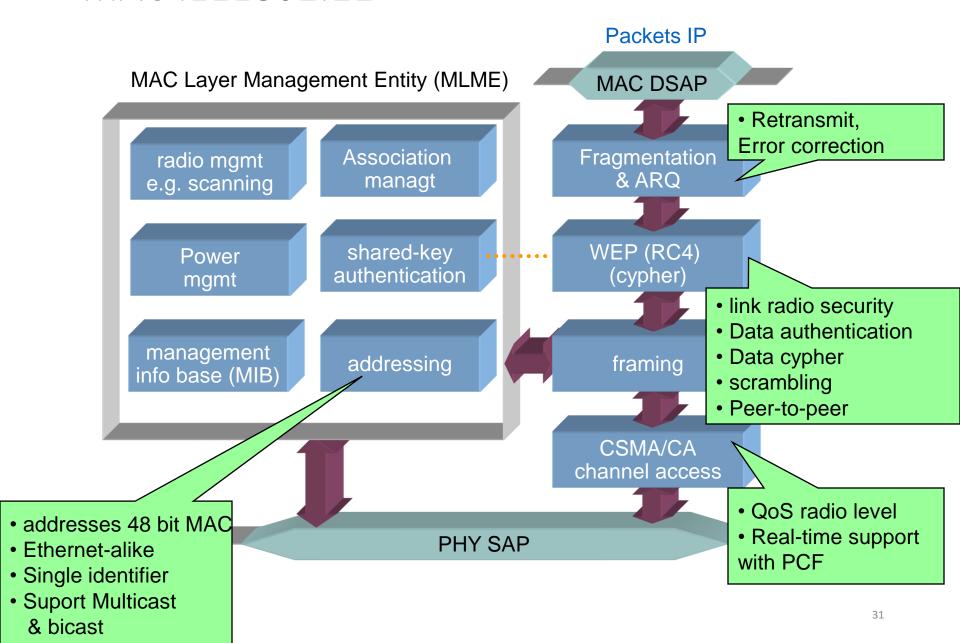




802.11 Frames

- Three types of frames
 - control: RTS, CTS, ACK
 - Management
 - Data
- Header depends on the frame type

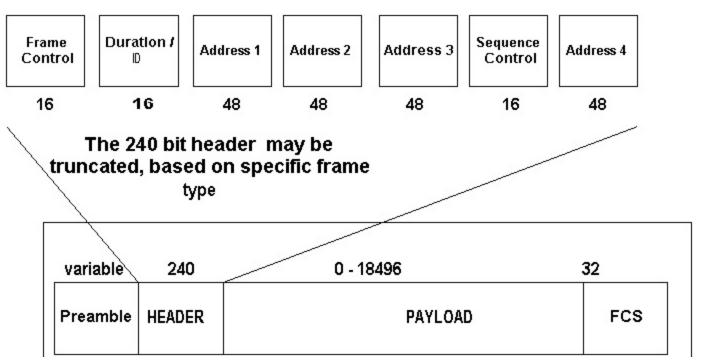



Frame Format

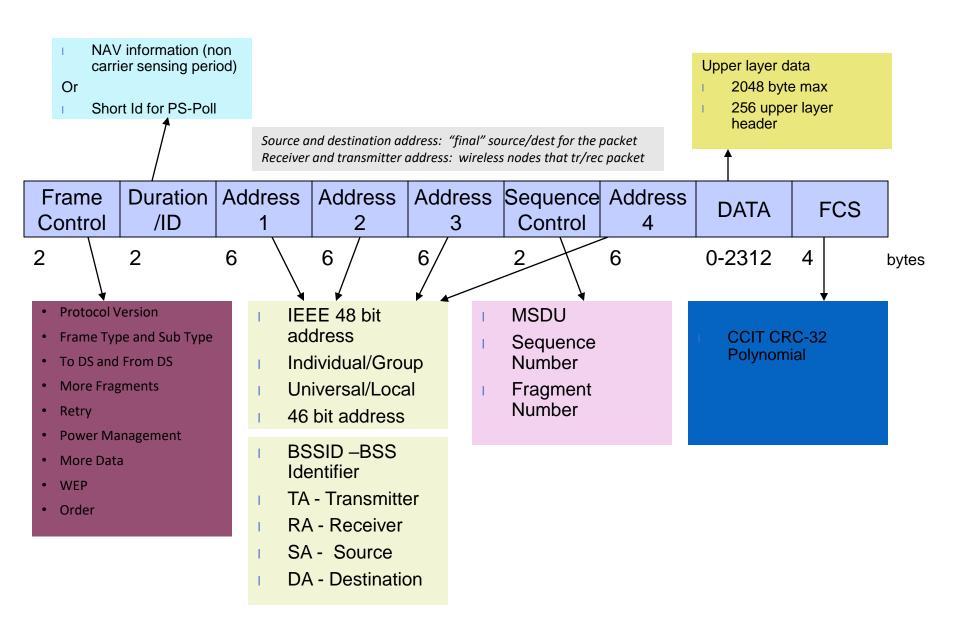



Packet Types

- Type/sub-type field is used to indicate the type of the frame
- Management:
 - Association/Authentication/Beacon
- Control
 - RTS, CTS, CF-end, ACK
- Data
 - Data only, or Data + CF-ACK, or Data + CF-Poll or Data + CF-Poll + CF-ACK

CF → Contention Free



Some More Fields

- Duration/ID: Duration in DCF mode/ID is used in PCF mode
- More Frag: 802.11 supports fragmentation of data
- More Data: In polling mode, station indicates it has more data to send when replying to CF-POLL
- RETRY is 1 if frame is a retransmission;
- WEP (Wired Equivalent Privacy) is 1 if frame is WEP coded
- Power Mgmt is 1 if in Power Save Mode;
- Order = 1 for strictly ordered service



Multi-bit Rate

- 802.11 allows for multiple bit rates
 - Allows for adaptation to channel conditions
 - Specific rates dependent on the version
- Algorithm for selecting the rate is not defined by the standard left to vendors
- Packets have multi-rate format
 - Different parts of the packet are sent at different rates
- Short vs Long preamble
 - Preamble allows the receiver to synchronize with the transmitter
 - Additional data is added to the header to help check for transmission errors
 - Long
 - Older, requires more data to help check for transmission errors (does it better)
 - Short
 - Less data = faster