

Technical Features CONECTABLE PLC RASPBERRY PI 24Vcc

MODEL TYPE	Raspberry PLC - 012003000700
Input Voltage	12 to 24Vdc (Fuse protection (2.5A) Polarity protection)
Input rated voltage	24Vdc
Rated Power	30 W
I max.	1.5A
Size	119.5x133.80x101mm
SRAM	4 GB
Communications	12C, Ethernet (x2), USB (x4), RS485 (x2 HALF-Duplex), SPI , Wi-Fi, Bluetooth, Serial TTL, CAN, µSD, RTC, µHDMI (x2)

General Features

DC power supply 12 to 24Vdc	
DC power supply 11.4 to 25.4Vdc	
DC power supply 30 W MAX.	
Power supply voltage	24Vdc
Power supply voltage	700 mA
20mΩ min.at 500Vdc bet terminals and the protectiv	
2.300 VAC at 50/60 Hz for one minute with a leakage current of 10mA max. Between all the external AC terminals and the protective ground terminal.	
80m/s2 in the X, Y and Z direction 2 times each.	
0° to 50°C with Raspberry OS Lite / 0° to 40°C with Raspberry OS Desktop	
10% to 90% (no condensation)	
With no corrosive gas	
-20° to 60°C	
2ms min.	
598g	
	DC power supply DC power supply Power supply voltage Power supply voltage 20mQ min.at 500Vdc bet terminals and the protective 2.300 VAC at 50/60 Hz fleakage current of 10mA r Between all the external A protective ground termina 80m/s2 in the X, Y and Z 2 times each. 0° to 50°C with Raspberry OR Raspberry OS Desktop 10% to 90% (no condensat) With no corrosive gas -20° to 60°C 2ms min.

figPIO(x1)

Digital GPIO25 (3.3V)


Expandability

I2C - 127 elements (x2) ModbusRTU with RS485: 32 elements






1. GPRS PLC's do not have available the Serial Tx (GPI014) and Rx (GPI015) pins. You can see them as Not Connected (NC).

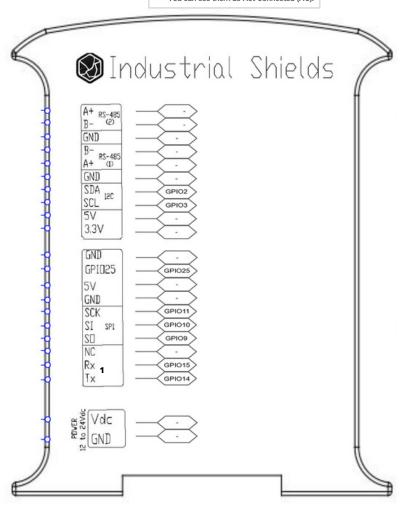

Upper Side 1



Left side



Upper side 2



Right Side





I/Os Table

		IOs Table				
Model	Reference 3	Analog Input Digital Isolated Input ² Digital Isolated Output Digital/Analogic Output Relay Output				
38AR	01200X000700	10	9	5	6	8

Notes

2. GPRS PLC's have one digital isolated input less than the Ethernet version.
3. The X on the reference number shows 5. The A off the reference fruit but shows the RAM Memory model. See the Reference Table. Example:

o xxxxx2xxxxxx - 2GB RAM Memory

xxxxx4xxxxxx - 4GB RAM Memory

xxxxx4xxxxxx - 8GB RAM Memory

Reference Table

Reference Table				
Model	RAM Memory			Accessory
Model	2GB RAM	4GB RAM	8GB RAM	with FAN
PLC Raspberry General Family				
Raspberry PLC Ethernet 38AR I/Os Analog/Digital PLUS (Raspberry Pi 4B X GB RAM Included + 8GB pSLC SIM W/Linux)	012002000700	012003000700	012004000700	xxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxx

1/Os Ranges

- Analogic I/Os voltage: 0 10 Vdc
 Digital I/Os voltage: 5 24 Vdc (300 mA)
 Relay's voltage: 220 Vac (5 A)



Analog I/Os equivalence

Analog Inputs				
PLC Pinout	Chip ADDR	Chip INDEX		
Zone A				
10.7	0x4a	0		
8.01	0x4a	1		
10.9	0x4b	0		
10.10	0x48	2		
10.11	0x48	0		
10.12	0x48	1		

Analog Outputs			
PLC Pinout Chip ADDR Chip INDEX			
Zone A			
A0.5	0x40	10	
A0.6	0x40	1	
A0.7	0x40	0	

Digital Inputs				
PLC Pinout	Chip ADDR	Chip INDEX	GPIO	
	Zon	ie A		
10.0	ADDR = 0x21	5		
10.1	ADDR = 0x21	3	-	
10.2	ADDR = 0x21	2	-	
10.3	ADDR = 0x21	1	-	
10.4	ADDR = 0x21	0	-	
10.5	-	-	GPIO = 13	
10.6	-	-	GPIO = 12	

Digital Outputs					
PLC Pinout Chip ADDR Chip INDEX					
	Zone A				
Q0.0	0x40	15			
Q0.1	0x40	14			
Q0.2	0x40	13			
Q0.3	0x40	12			
Q0.4	0x40	11			
Q0.5	0x40	10			
Q0.6	0x40	1			
Q0.7	0x40	0			



Rele I/Os equivalence

Analog Inputs				
PLC Pinout	Chip ADDR	Chip INDEX		
Zone B				
I1.2	0x49	0		
I1.3	0x4a	3		
I1.4	0x4b	2		
I1.5	0x4b	3		

Analog Outputs			
PLC Pinout Chip ADDR Chip INDEX			
Zone B			
A1.0	0x40	3	
A1.1	0x40	5	
A1.2	0x40	8	

Digital Inputs			
PLC Pinout GPIO			
Zone B			
I1.0 27			
I1.1	4		

Digital Outputs			
PLC Pinout Chip ADDR Chip INDEX			
Zone B			
Q1.0	0x40	3	
Q1.1	0x40	5	
Q1.2	0x40	8	



Relay I/Os equivalence

Relay			
PLC Pinout	Chip ADDR	Chip INDEX	
Zone B			
R1.1	0x20	1	
R1.2	0x20	2	
R1.3	0x21	7	
R1.4	0x20	0	
R1.5	0x40	7	
R1.6	0x40	4	
R1.7	0x40	6	
R1.8	0x40	9	



Performance Specifications

Raspberry Board	Raspberry Pi 4
I/O control method	Combination of the cyclic scan and immediate refresh processing methods.
Programming language	Linux applications: Python, C++, etc.
CPU	Broadcom BCM2711, Quad core Cortex-A72 (ARM v8) 64-bit SoC @ 1.5GHz
Website	https://www.raspberrypi.org/

Raspberry PLC Access

How to access to the Raspberry PLC:

-Linux users: using ssh specifying the IP address: 10.10.10.20/24.

-Windows users: we recommend to use PuTTY ssh client. The IP address have to be specified: 10.10.10.20/24.

You can download the latest release of PuTTY here:

https://www.chiark.greenend.org.uk/~sgtatham/putty/latest.html

UPS Shield

This PLC has integrated an UPS Shield, a device which provides an anti-voltage drop protection system designed to avoid data corruption when the current is suddenly cut off.

RTC

This PLC has integrated the DS3231 Real Time Clock model which is powered by a button battery (CR1216 or CR1220).

Fan

This PLC has the option to include a fan to refrigerate the CPU and the other components if the working envirionment requires it.

Warnings



Unused pins should not be connected. Ignoring the directive may damage the controller.

Before using this product, it is the responsibility of the user to read the product's User Guide and all accompanying documentation.

Industrial Shields PLCs must be powered between 12Vdc and 24Vdc. If a higher voltage is supplied to the equipment can suffer irreversible damage.

Maintenance must be performed by qualified personnel familiarized with the construction, operation, and hazards involved with the control.

Maintenance should be performed with the control out of operation and disconnected from all sources of power.

The Industrial Shields Family PLCs are Open Type Controllers. It is required that you install the Raspberry PLC in a housing, cabinet, or electric control room. Entry to the housing, cabinet, or electric control room should be limited to authorized personnel.

Inside the housting, cabinet or electric control room, the Industrial Shields PLC must be at a minimum distance from the rest of the components of a minimum of 25 cm, it can be severely damaged.

Failure to follow these installation requirements could result in severe personal injury and/or property damage. Always follow these requirements when installing Raspberry family PLCs.

In case of installation or maintenance of the PLC please follow the instructions marked in the Installation and Maintenance section on the User Guide

Do not disconnect equipment when a flammable or combustible atmosphere is present.

Disconnection of equipment when a flammable or combustible atmosphere is present may cause a fire or explosion which could result in death, serious injury and/or property damage.

Inside the encapsulated, there are supercapacitors if $25\mathrm{F}$ which can be dangerous. Be careful with them.

Symbology

	Indicates that the equipment is suitable for direct current only; to identify relevant terminals
\sim	Indicates that the equipment is suitable for alternating current only, to identify relevant terminals
	To identify the control by which a pulse is started.
<u></u>	To identify an earth (ground) terminal in cases where neither the symbol 5018 nor 5019 is explicily required.
\otimes	To identify the switch by means of which the signal lamp(s) is (are) switched on or off.
C€	CE marking indicates that a product complies with applicable European Union regulations
\triangle	Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury
4	To indicate hazards arising from dangerous voltages

Technical Support

You can contact with us using the best channel for you:



support@industrialshields.com



www.industrialshields.com



Visit our Blog, Forum orTicketing system



Check the user guides



Visit our Channel

