
Full static and dynamic design for two ECUs system

By/ Ahmed Maged

First - Sensors ECU

1 – Static design:

A- Layered architecture

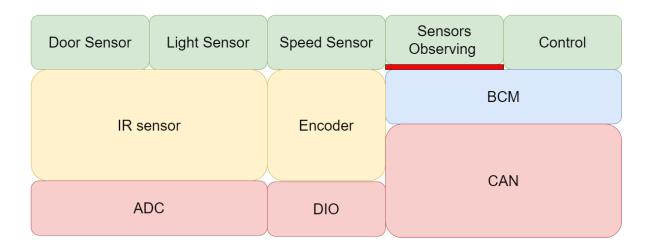

B-System Parameters

Name	gSysPar				
Туре	struct				
elements	DoorState	DoorState_t	Contain global current Door state		
	LightState	LightState _t	Contain global current light state		
	SpeedState	MovingState_t	Contain global current moving state		
Description	This a global struct	ure containing th	e current states of the sensors		

C- APIs documentation.

1 – Door Sensor Stack:

Function Name	Error_t Door_init(void);		
	inputs	N/A	
	inputs	Description:	
Argumonts	outputs	N/A	
Arguments		description:	
	input/output	N/A	
		description:	
Doturn	E_OK	0	
Return	E_NOK	1	
Description	call this api to initialize the Door Sensor module as in Door_config.h		

Function Name	Error_t Door_Update(void);		
	innuts	N/A	
	inputs	Description:	
Argumonts	outputs	N/A	
Arguments		description:	
	input/output	N/A	
		description:	
Dotum	E_OK	0	
Return	E_NOK	1	
Description	call this api periodically as it is the main function of the module and contain the module state machine		

Function Name	Error_t Door_GetCurrentState(DoorState_t* pReturnDoorState);		
	inputs	N/A	
	inputs	Description:	
Arguments	outputs	pReturnDoorState	enumeration
		description:	
	input/output	N/A	
		description:	
Dotum	E_OK	0	
Return	E_NOK	1	
Description	call this api to get the current state of the module		

Name	pReturnDoorState		
Туре	enumeration		
Range	CLOSED	0	Indicate its currently closed
	OPENED	1	Indicate its currently opened
Description	These values are to determine the current door state		

Function Name	Error_t IR_init(void);		
	innuka	N/A	
	inputs	Description:	
Arguments	outputs	N/A	
		description:	
	input/output	N/A	
		description:	
Datum	E_OK	0	
Return	E_NOK	1	
Description	call this api to initialize the Door Sensor module as in IR_config.h		

Function Name	Error_t IR_Update(Ch_ID_t ChannelID_cpy);		
		ChannelID_cpy	enumeration
	inputs	Description: the channel id containing the sensor	
Arguments	outputs	N/A	
Ö	outputs	description:	
	San and James de	N/A	
	input/output	description:	
Doturn	E_OK	0	
Return	E_NOK	1	
Description	call this api periodically as it is the main function of the module and contain the module state machine		

Name	ChannelID_cpy		
Туре	enumeration		
Range	CHANNEL0	0	To read sensor on Channel 0
	CHANNEL1	1	To read sensor on Channel 1
Description	These values are the channel IDs contains the sensors		

Function Name	IR_GetCurrentValue(Ch_ID_t ChannelID_cpy, u16* pReturnValue);				
inputs		ChannelID_cpy	enumeration		
	inputs	Description: the channel id contain	ing the sensor		
		pReturnValue	u16		
Arguments	outputs	description: the ADC conversion result			
	input/output	N/A			
		description:			
Doturn	E_OK	0			
Return	E_NOK	1			
Description	call this api to get the current state of the module				

Name	ChannelID_cpy		
Туре	enumeration		
Range	CHANNEL0	0	To read sensor on Channel 0
	CHANNEL1	1	To read sensor on Channel 1
Description	These values are the channel IDs contains the sensors		

Name	pReturnValue		
Туре	U16		
Range	0	0	The least result
	1023	1	The biggest result (10 Bit resolution ADC)
Description	These values are th	ne ch	annel IDs contains the sensors

2 – Light Sensor Stack:

Function Name	Error_t Light_init(void);		
	inputs	N/A	
	inputs	Description:	
Argumonts	outputs	N/A	
Arguments		description:	
	input/output	N/A	
		description:	
Dotum	E_OK	0	
Return	E_NOK	1	
Description	call this api to initialize the Light Sensor module as in Light_config.h		

Function Name	Error_t Light_Update(void);		
	innuts	N/A	
	inputs	Description:	
Argumonto	outputs	N/A	
Arguments		description:	
	input/output	N/A	
		description:	
Doturn	E_OK	0	
Return	E_NOK	1	
Description	call this api periodically as it is the main function of the module and contain the module state machine		

Function Name	Error_t Light_GetCurrentState(LightState_t* pReturnLightState);		
		N/A	
	inputs	Description:	
Argumonts	Arguments outputs	pReturnLightState	enumeration
Arguments		description:	
	in and for the st	N/A	
	input/output	description:	
Doturn	E_OK	0	
Return	E_NOK	1	
Description	call this api to get the current state of the module		

Name	pReturnLightState		
Туре	enumeration		
Range	OFF 0 Indicate its currently Off		
	ON 1 Indicate its currently On		
Description	These values are to determine the current light state		

^{*}IR previously mentioned in Door Stack.

3 – Speed Sensor Stack:

Function Name	Error_t Speed_init(void);		
	inputs	N/A	
		Description:	
Argumonts	outputs	N/A	
Arguments		description:	
	input/output	N/A	
		description:	
Dotum	E_OK	0	
Return	E_NOK	1	
Description	call this api to initialize the Door Sensor module as in Door_config.h		

Function Name	Error_t Speed_Update(void);		
	inputs	N/A	
	inputs	Description:	
Argumonts	ments outputs	N/A	
Arguments		description:	
	input/output	N/A	
		description:	
Poturn	E_OK	0	
Return	Return E_NOK	1	
Description	call this api periodically as it is the main function of the module and contain the module state machine		

Function Name	Error_t Speed_GetCurrentState(MovingState_t* pReturnMovingState);				
innute		N/A			
	inputs	Description:			
Argumonts	outputs	pReturnMovingState	enumeration		
Arguments outputs	description:				
	in nut/outnut	N/A			
	input/output	description:			
Return	E_OK 0		0		
E_NOK		1			
Description	call this api to get the current state of the module				

Name	pReturnMovingState		
Туре	enumeration		
Range	Stopped 0 Indicate its currently stopped		
	Moving 1 Indicate its currently moving		
Description	These values are to determine the current Moving state		

Function Name	Error_t Encoder_init(void);		
	innuts	N/A	
	inputs	Description:	
Argumonts	rguments outputs	N/A	
Arguments		description:	
	innut/outnut	N/A	
	input/output	description:	
Doturn	E_OK	0	
Return E_NOK		1	
Description	call this api to initialize the Door Sensor module as in Encoder_config.h		

Function Name	Error_t Encoder_Update(Ch_ID_t ChannelID_cpy);		
		ChannelID_cpy	enumeration
	inputs	Description:	
Arguments	outputs	N/A	
		description:	
	input/output	N/A	
		description:	
Doturn	E_OK	0	
Return	E_NOK	1	
Description	call this api periodically as it is the main function of the module and contain the module state machine		

Name	ChannelID_cpy		
Туре	enumeration		
Range	CHANNEL0	0	The starting Channels
	CHANNEL7 1 The Max num of channels		
Description	These values are the channel IDs (Pins)		

Function Name	Encoder_GetCurrentRPS(Ch_ID_t ChannelID_cpy, u16*pReturnRPS)				
	innuts	ChannelID_cpy	enumeration		
	inputs	Description:			
Argumonts	outputs	pReturnRPS	U16		
Arguments outputs	description:				
	innut/outnut	N/A			
	input/output	description:			
Doturn	E_OK		0		
Return E_NOK	1				
Description	call this api to get the current state of the module				

Name	ChannelID_cpy		
Туре	enumeration		
Range	CHANNEL0	0	The starting Channels
	CHANNEL7 1 The Max num of channels		
Description	These values are the channel IDs (Pins)		

Name	pReturnRPS	
Туре	U16	
Range	0	RPS is zero
	65,536	Max RPS num
Description	These values the Rotate Per Second number	

4 – Sensors Observer:

Function Name	Error_t Observer_init(void);		
	to and a	N/A	
	inputs	Description:	
Argumants	outputs.	N/A	
Arguments .	outputs	description:	
	input/output	N/A	
		description:	
Dotum	E_OK	0	
Return	E_NOK	1	
Description	call this api to initialize the Door Sensor module as in		ıle as in
Description	SenObserver_config.h		

Function Name	Error_t Observer_Notify(void);		
		N/A	
	inputs	Description:	
Awarinaanta		N/A	
Arguments	outputs	description:	
	input/output	N/A	
		description:	
Doturn	E_OK	0	
Return	E_NOK	1	
Description	call this api periodically as it is the main function of the module and contain the module state machine		

Function Name	Observer_Subscribe(Error_t (*pGetter)(void* pReturnData), Error_t (*pNotification)(void))		
		pGetter	*Function
		Description: the sensor data getter.	
	inputs	pNotification	*Function
Arguments _		Description: the called function to notify an update	
	outputs input/output	N/A	
		description:	description:
		N/A	
		description:	
Doturn	E_OK	0	
Return	E_NOK	1	
Description	Call this api to set a new subscription, with the data getter and the function to call to notify update.		

Name	pGetter	
Туре	*function	
Range	Door_GetCurrentState	To get door state
	Light_GetCurrentState	To get light state
	Speed_GetCurrentState	To get speed state
Description	These data getters	

Name	pNotification	
Туре	*function	
Range	Control_DoorUpdate_Clbk	To call when Door data updated
	Control_LightUpdate_Clbk	To call when light data updated
	Control_SpeedUpdate_Clbk To call when speed data updated	
Description	These notifications APIs when data associated updated	

Function Name	Observer_UnSubscribe(Error_t (*pGetter)(void* pReturnData),		
	inputs	pGetter	*Function
		Description: the sensor data getter.	
		pNotification	*Function
Arguments _		Description: the called function to notify an update	
	outputs	N/A	
		description:	
	in much / much much	N/A	
	input/output	description:	
Doturn	E_OK		0
Return	E_NOK	1	
Description	Call this api to remove subscription, with the data getter and the function to call to notify update.		

Name	pGetter	
Туре	*function	
Range	Door_GetCurrentState	To get door state
	Light_GetCurrentState	To get light state
	Speed_GetCurrentState	To get speed state
Description	These data getters	

Name	pNotification	
Туре	*function	
Range	Control_DoorUpdate_Clbk	To call when Door data updated
	Control_LightUpdate_Clbk	To call when light data updated
	Control_SpeedUpdate_Clbk To call when speed data updated	
Description	These notifications APIs when data associated updated	


5 – Control module:

Function Name	Error_t Control_init(void);		
	inputs	N/A	
	inputs	Description:	
Argumonts	rguments outputs	N/A	
-		description:	
	innut/outnut	N/A	
	input/output	description:	
Dotum	E_OK	0	
Return	E_NOK	1	
Description	call this api to initialize the Door Sensor module as in control_config.h		


Function Name	Error_t Control_Update(void);		
	* .	N/A	
	inputs	Description:	
Argumonts	outnuts.	N/A	
Arguments	outputs	description:	
	input/output	N/A	
		description:	
Doturn	E_OK	0	
Return	E_NOK	1	
Description	call this api periodically as it is the main function of the module and contain the module state machine		

2 – Dynamic Design:


A- Light Module state machine

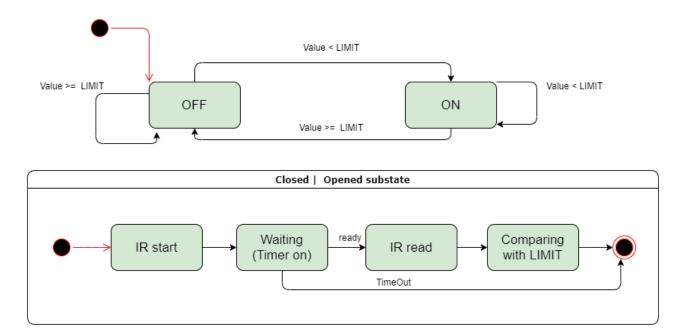


B- Door module state machine

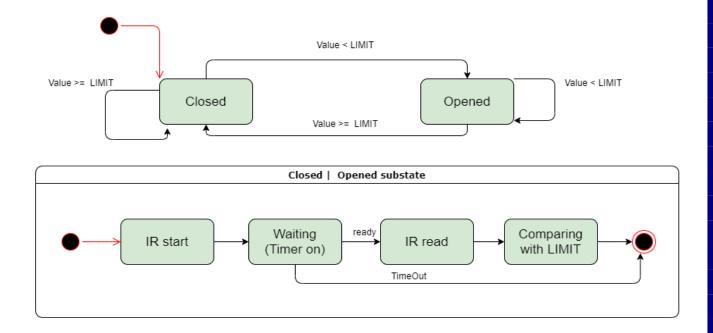

C- Speed module state machine

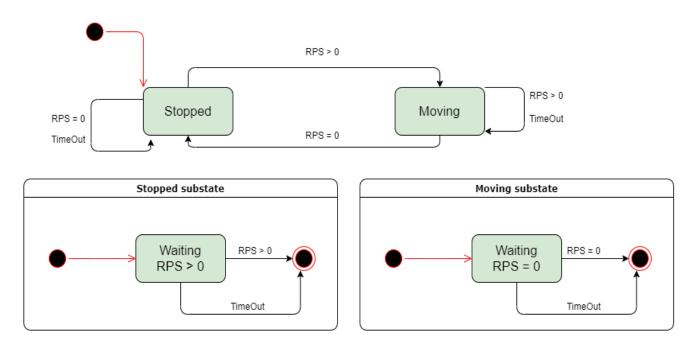



D- Sensor observing module state machine

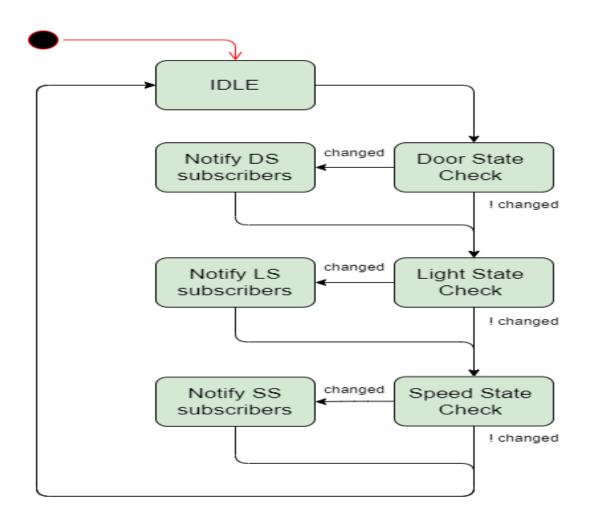

E- Control module

SN	Speed Update notification
LN	Light Update notification
DN	Door Update notification

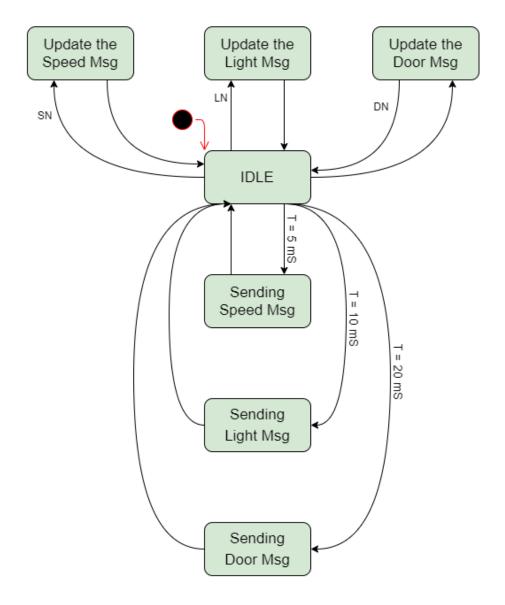


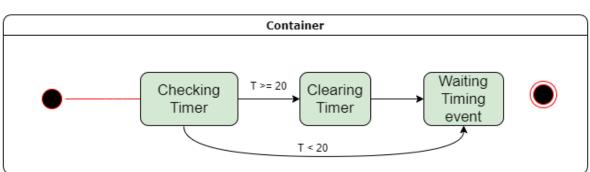

Second – Actuators ECU

1 – Static design:

A- Layered architecture

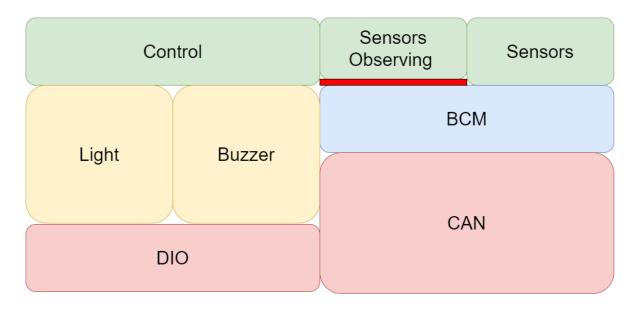

B-System Parameters

Name	gSysPar			
Туре	struct			
elements	DoorSensorState	DoorState_t	Contain global current Door state	
	LightSensorState	LightState _t	Contain global current light state	
	SpeedSensorState	MovingState_t	Contain global current moving state	
	BuzzerState	BuzzerState_t	Contain global current Buzzer state	
	LightState _t Contain global current light state			
Description	This a global structure containing the current states of the sensors			

C- APIs documentation.

1 – Sensors Module:

Function Name	Error_t Sensors_init(void);		
	inputs	N/A	
	inputs	Description:	
Argumonts	outputs	N/A	
Arguments		description:	
	input/output	N/A	
		description:	
Doturn	E_OK	0	
Return	E_NOK	1	
Description	call this api to initialize the Door Sensor module as in Sensors_config.h		

Function Name	Error_t Sensors_Update(void);		
	to and	N/A	
	inputs	Description:	
Argumonts	outputs.	N/A	
Arguments	outputs	description:	
	input/output	N/A	
		description:	
Doturn	E_OK	0	
Return	E_NOK	1	
Description	call this api periodically as it is the main function of the module and contain the module state machine		

Function Name	Sensors_GetDoorState(DoorState_t* pReturnDoorState);			
		N/A		
	inputs	Description:		
Arguments	outputs	pReturnDoorState	enumeration	
Arguments -	outputs	description:		
	input/output	N/A		
		description:		
Doturn	E_OK	0		
Return	E_NOK	1		
Description	call this api to get the current door state			

Name	pReturnDoorState		
Туре	enumeration		
Range	CLOSED	0	Indicate its currently closed
	OPENED 1 Indicate its currently opened		
Description	These values are to determine the current door state		

Function Name	Sensors_GetLightState(LightState_t* pReturnLightState);			
	innute	N/A		
	inputs	Description:		
Arguments	outputs	pReturnLightState	enumeration	
Arguments	outputs	description:		
	input/output	N/A		
		description:		
Doturn	E_OK	0		
Return	E_NOK	1		
Description	call this api to get the current light state			

Name	pReturnLightState		
Туре	enumeration		
Range	OFF	0	Indicate its currently closed
	ON 1 Indicate its currently opened		
Description	These values are to determine the current light state		

Function Name	Sensors_GetMovingState(MovingState_t* pReturnMovingState)		
		N/A	
	inputs	Description:	
Argumonts	outputs.	pReturnMovingState	enumeration
Arguments	outputs	description:	
	innut/outnut	N/A	
	input/output	description:	
Doturn	E_OK	0	
Return	E_NOK	1	
Description	call this api to get the current light state		

Name	pReturnMovingState		
Туре	enumeration		
Range	STOPPED 0 Indicate its currently closed		Indicate its currently closed
	MOVING 1 Indicate its currently opened		
Description	These values are to determine the current moving state		

2 – Sensors Observer:

Function Name	Error_t Observer_init(void);		
	to and a	N/A	
	inputs	Description:	
A way you a mata	outputs	N/A	
Arguments		description:	
	input/output	N/A	
		description:	
Dotum	E_OK	0	
Return	E_NOK	1	
Description	call this api to initialize the Door Sensor module as in		
Bescription	SenObserver_config.h		

Function Name	Error_t Observer_Notify(void);		
		N/A	
	inputs	Description:	
Awarinaanta		N/A	
Arguments	outputs	description:	
	input/output	N/A	
		description:	
Doturn	E_OK	0	
Return	E_NOK	1	
Description	call this api periodically as it is the main function of the module and contain the module state machine		

Function Name	Observer_Subscribe(Error_t (*pGetter)(void* pReturnData),		
		pGetter	*Function
		Description: the s	ensor data getter.
	inputs	pNotification	*Function
Arguments		Description: the called function to notify an update	
Ö	outputs.	N/A	
	outputs	description:	
	in much / much much	N/A	
	input/output	description:	
Doturn	E_OK		0
Return	E_NOK	1	
Description	Call this api to set a new subscription, with the data getter and the function to call to notify update.		

Name	pGetter	
Туре	*function	
Range	Door_GetCurrentState	To get door state
	Light_GetCurrentState	To get light state
	Speed_GetCurrentState	To get speed state
Description	These data getters	

Name	pNotification		
Туре	*function		
Range	Control_DoorUpdate_Clbk	To call when Door data updated	
	Control_LightUpdate_Clbk	To call when light data updated	
	Control_SpeedUpdate_Clbk To call when speed data updated		
Description	These notifications APIs when data associated updated		

Function Name	Observer_UnSubscribe(Error_t (*pGetter)(void* pReturnData), Error_t (*pNotification)(void))		
	inputs	pGetter	*Function
		Description: the sensor data getter.	
		pNotification	*Function
Arguments		Description: the called function to notify an update	
	outputs	N/A	
		description:	
	input/output	N/A	
		description:	
Doturn	E_OK	0	
Return	E_NOK	1	
Description	Call this api to remove subscription, with the data getter and the function to call to notify update.		

Name	pGetter	
Туре	*function	
Range	Door_GetCurrentState	To get door state
	Light_GetCurrentState	To get light state
	Speed_GetCurrentState	To get speed state
Description	These data getters	

Name	pNotification		
Туре	*function		
Range	Control_DoorUpdate_Clbk	To call when Door data updated	
	Control_LightUpdate_Clbk	To call when light data updated	
	Control_SpeedUpdate_Clbk To call when speed data updated		
Description	These notifications APIs when data associated updated		

3 – Control module:

Function Name	Error_t Control_init(void);		
	inputs	N/A	
		Description:	
Arguments	outputs	N/A	
		description:	
	input/output	N/A	
		description:	
Return	E_OK	0	
	E_NOK	1	
Description	call this api to initialize the Door Sensor module as in control_config.h		

Function Name	Error_t Control_Update(void);		
	inputs	N/A	
		Description:	
Arguments	outputs	N/A	
		description:	
	input/output	N/A	
		description:	
Doturn	E_OK	0	
Return	E_NOK	1	
Description	call this api periodically as it is the main function of the module and contain the module state machine		


Function Name	Error_t Control_DoorUpdate_Clbk(void);		
	inputs	N/A	
		Description:	
Argumonts	outputs	N/A	
Arguments		description:	
	input/output	N/A	
		description:	
Doturn	E_OK	0	
Return	E_NOK	1	
Description	The Sensors observer mngr supposed to call this api to indicates an update happened to Door state		


Function Name	Error_t Control_LightUpdate_Clbk(void);		
	inputs	N/A	
		Description:	
Arguments	outputs	N/A	
		description:	
	input/output	N/A	
		description:	
Doturn	E_OK	0	
Return	E_NOK	1	
Description	The Sensors observer mngr supposed to call this api to indicates an update happened to light state		

Function Name	Error_t Control_SpeedUpdate_Clbk(void);		
	inputs	N/A	
		Description:	
Arguments	outputs	N/A	
		description:	
	input/output	N/A	
		description:	
Dotum	E_OK	0	
Return	E_NOK	1	
Description	The Sensors observer mngr supposed to call this api to indicates an update happened to moving state		


2 – Dynamic Design:

A- Sensor Module

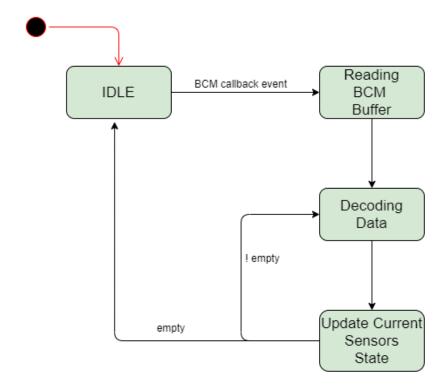

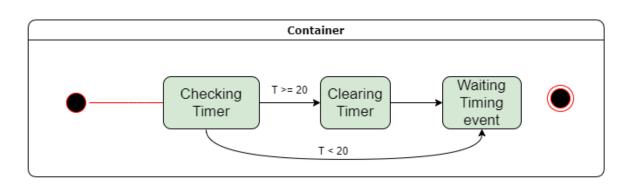

B- Sensor Observer module

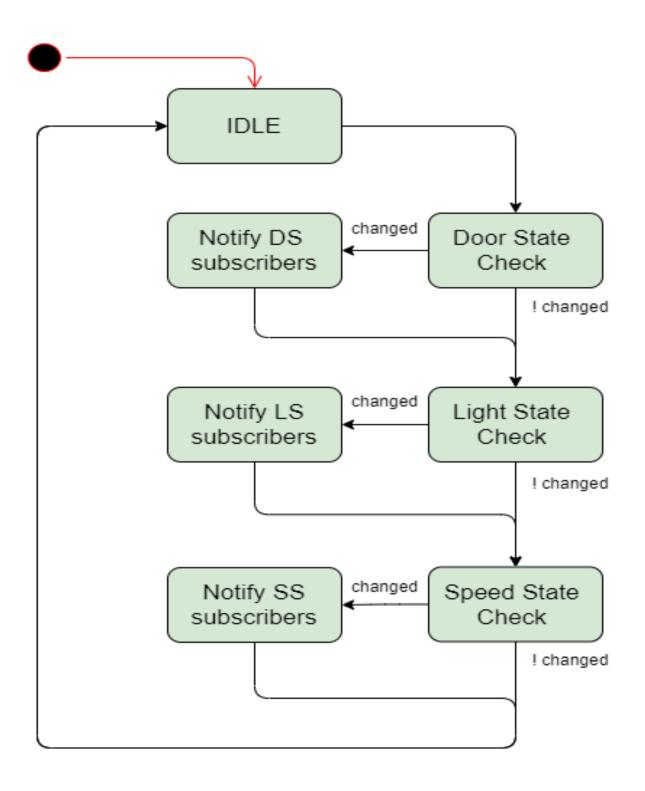

C-Control module

