6502 Instruction Set

TOC: Description / Instructions by Type / Address Modes in Detail / Instructions in Detail / "Illegal" Opcodes / WDC Extensions / Rockwell Extensions / Comparisons & BIT / A Primer of 6502 Arithmetic Operations / Jump Vectors and Stack Operations / Instruction Layout / Pinout / 65xx-Family

Tools: 6502 Emulator / 6502 Assembler / 6502 Disassembler

HI								LO-1	NIBBLE							
	-0	-1	-2	-3	-4	-5	-6	-7	-8	-9	-A	-B	-C	-D	-E	-1
0-	BRK impl	ORA X,ind				ORA zpg	ASL zpg		PHP impl	ORA #	ASL A			ORA abs	ASL abs	
1-	BPL rel	ORA ind,Y				ORA zpg,X	ASL zpg,X		CLC impl	ORA abs,Y				ORA abs,X	ASL abs,X	
2-	JSR abs	AND X,ind			BIT zpg	AND zpg	ROL zpg		PLP impl	AND #	ROL A		BIT abs	AND abs	ROL abs	
3-	BMI rel	AND ind,Y				AND zpg,X	ROL zpg,X		SEC impl	AND abs,Y				AND abs,X	ROL abs,X	
4 –	RTI impl	EOR X,ind				EOR zpg	LSR zpg		PHA impl	EOR #	LSR A		JMP abs	EOR abs	LSR abs	
5-	BVC rel	EOR ind, Y				EOR zpg,X	LSR zpg,X		CLI impl	EOR abs,Y				EOR abs,X	LSR abs,X	
6-	RTS impl	ADC X,ind				ADC zpg	ROR zpg		PLA impl	ADC #	ROR A		JMP ind	ADC abs	ROR abs	
7-	BVS rel	ADC ind,Y				ADC zpg,X	ROR zpg,X		SEI impl	ADC abs,Y				ADC abs,X	ROR abs,X	
8-		STA X, ind			STY zpg	STA zpg	STX zpg		DEY impl		TXA impl		STY abs	STA abs	STX abs	
9-	BCC rel	STA ind, Y			STY zpg,X	STA zpg,X	STX zpg,Y		TYA impl	STA abs,Y	TXS impl			STA abs,X		
A-	LDY #	LDA X,ind	LDX #		LDY zpg	LDA zpg	LDX zpg		TAY impl	LDA #	TAX impl		LDY abs	LDA abs	LDX abs	
В-	BCS rel	LDA ind,Y			LDY zpg,X	LDA zpg,X	LDX zpg,Y		CLV impl	LDA abs,Y	TSX impl		LDY abs,X	LDA abs,X	LDX abs,Y	
C-	CPY #	CMP X,ind			CPY zpg	CMP zpg	DEC zpg		INY impl	CMP #	DEX impl		CPY abs	CMP abs	DEC abs	
D-	BNE rel	CMP ind,Y				CMP zpg,X	DEC zpg,X		CLD impl	CMP abs,Y				CMP abs,X	DEC abs,X	
E-	CPX #	SBC X,ind			CPX zpg	SBC zpg	INC zpg		INX impl	SBC #	NOP impl		CPX abs	SBC abs	INC abs	
F-	BEQ rel	SBC ind,Y				SBC zpg,X	INC zpg,X		SED impl	SBC abs,Y				SBC abs,X	INC abs,X	

View: standard set only illegal opcodes (NMOS) WDC extensions (65C02)

Description

Address Modes

```
.... absolute
                                 OPC $LLHH
abs
                                               operand is address $HHLL *
abs.X .... absolute, X-indexed
                                 OPC $LLHH,X
                                               operand is address; effective address is address incremented by X with carry **
abs,Y .... absolute, Y-indexed
                                 OPC $LLHH,Y
                                               operand is address; effective address is address incremented by Y with carry **
      .... immediate
                                 OPC #$BB
                                               operand is byte BB
     .... implied
                                 OPC
                                               operand implied
ind
      .... indirect
                                 OPC ($LLHH)
                                               operand is address; effective address is contents of word at address: C.w($HHLL)
X, ind .... X-indexed, indirect
                                               operand is zeropage address; effective address is word in (LL + X, LL + X + 1), inc. without carry: C.w($00LL + X
                                 OPC ($LL,X)
ind,Y .... indirect, Y-indexed
                                 OPC ($LL),Y
                                               operand is zeropage address; effective address is word in (LL, LL + 1) incremented by Y with carry: C.w($00LL) +
     .... relative
                                 OPC $BB
                                               branch target is PC + signed offset BB ***
rel
zpq
     .... zeropage
                                 OPC $LL
                                               operand is zeropage address (hi-byte is zero, address = $00LL)
zpg,X .... zeropage, X-indexed
                                 OPC $LL,X
                                               operand is zeropage address; effective address is address incremented by X without carry **
                                OPC $LL,Y
                                               operand is zeropage address; effective address is address incremented by Y without carry **
zpg,Y .... zeropage, Y-indexed
```

- * 16-bit address words are little endian, lo(w)-byte first, followed by the hi(gh)-byte.

 (An assembler will use a human readable, big-endian notation as in \$HHLL.)
- ** The available 16-bit address space is conceived as consisting of pages of 256 bytes each, with address hi-bytes represententing the page index. An increment with carry may affect the hi-byte and may thus result in a crossing of page boundaries, adding an extra cycle to the execution. Increments without carry do not affect the hi-byte of an address and no page transitions do occur. Generally, increments of 16-bit addresses include a carry, increments of zeropage addresses don't. Notably this is not related in any way to the state of the carry flag in the status register.
- *** Branch offsets are signed 8-bit values, -128 ... +127, negative offsets in two's complement.

 Page transitions may occur and add an extra cycle to the execution.

Extended Address Modes (WDC 65C02)

```
(zpg) .... zeropage indirect OPC $LL,X operand is zeropage address; effective address is the word in (LL, LL + 1 (abs,X) .... absolute indexed indirect JMP ($LLHH,X) operand is base address for indirect lookup; effective address is word in ($HHLL + X, $HHLL + 1 + X)
```

Instructions by Name

```
ADC .... add with carry

AND .... and (with accumulator)

ASL .... arithmetic shift left

BCC .... branch on carry clear

BCS .... branch on carry set


BEQ .... branch on equal (zero set)

BIT .... bit test

BMI .... branch on minus (negative set)
```

```
BNE .... branch on not equal (zero clear)
BPL .... branch on plus (negative clear)
BRK .... break / interrupt
BVC .... branch on overflow clear
BVS .... branch on overflow set
CLC .... clear carry
CLD .... clear decimal
CLI .... clear interrupt disable
CLV .... clear overflow
CMP .... compare (with accumulator)
CPX .... compare with X
CPY .... compare with Y
DEC .... decrement
DEX .... decrement X
DEY .... decrement Y
EOR .... exclusive or (with accumulator)
INC .... increment
INX .... increment X
INY .... increment Y
JMP .... jump
JSR .... jump subroutine
LDA .... load accumulator
LDX .... load X
LDY .... load Y
LSR .... logical shift right
NOP .... no operation
ORA .... or with accumulator
PHA .... push accumulator
PHP .... push processor status (SR)
PLA .... pull accumulator
PLP .... pull processor status (SR)
ROL .... rotate left
ROR .... rotate right
RTI .... return from interrupt
RTS .... return from subroutine
SBC .... subtract with carry
SEC .... set carry
SED .... set decimal
SEI .... set interrupt disable
```

- STA store accumulator
- STX store X
- STY store Y
- \mathtt{TAX} transfer accumulator to X
- TAY transfer accumulator to Y
- TSX transfer stack pointer to X
- TXA transfer X to accumulator
- ${\tt TXS}$ transfer X to stack pointer
- TYA transfer Y to accumulator

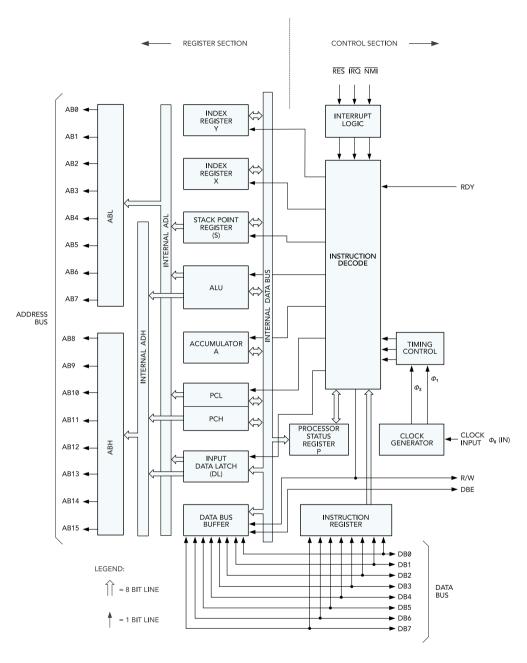

Block diagram of the NMOS 6502 CPU.
After (6501 specifics omitted):
MCS6502 Microcomputer Family Hardware Manual; Jannuary 1976.
MOS Technology, Inc., Norristown/PA, 1976.

Registers

```
PC ... program counter (16 bit)
AC ... accumulator (8 bit)
X ... X register (8 bit)
Y ... Y register (8 bit)
SR ... status register [NV-BDIZC] (8 bit)
SP ... stack pointer (8 bit)
```

Note: The status register (SR) is also known as the P register, the accumulator (AC) as just A, the stack pointer (SP) as S, and X and Y registers as XR and YR, respectively.

Contemporary machine language monitors (here, Commodore PET) show them typically like,

```
B*
     PC IRQ SR AC XR YR SP
.; 0401 E62E 32 04 5E 00 F8
.
("IRQ" is not a register, but the interrupt request vector, see below.)
```

- The accumulator is the main rgister of the 6502. Its content is typically used by the arithmetic logic unit (ALU) for the first operand and results are deposited in the accumulator again. Thus its name, as results accumulate in this register. Most arithmetic and logical operations interact with this register.
- The X and Y registers are auxiliary registers. Like the accumulator, they can be loaded directly with values, both immediatedly (as literal constants) or from memory. Additionally, they can be incremented and decremented, and their contents may be transferred to and from the acuumulator. Their main purpose is the use as index registers, where their contents is added to a base memory location, before any values are either stored to or retrieved from the resulting address, which is known as the effective address. This is commonly used for loops and table lookups at a given index, hence the name. (See address modes, below.)
- The **program counter** keeps track of the memory location holding the current instruction code. Its contents is automatically stepped up as the program is executed and is modified by branch and jump operations. As it must be able to address the full 16-bit address range of 64K bytes, it's the only 16-bit register of the 6502.

- The stack pointer points to the current top of stack (or rather, to its bottom, as the stack grows top-down.) The processor stack is located on memory page #1 (\$0100-\$01FF), a 256 bytes last-in-first-out (LIFO) stack, which enables subroutines and also serves as a quick intermediate storage. As a 8-bit register, the stack pointer holds just the low-byte of this address (the offset from \$0100.)

 Be aware that this will just wrap around, in case that the stack underflows.
- The status register holds the status of the processor, consisting of flags reflecting results of previous operations, configuration flags, like disabeling (blocking) interrupts or setting up binary encoded decimal mode (BCD), and the carry flag, which enables multi-byte arithmetics.

Status Register Flags (bit 7 to bit 0)

- N Negative
 V Overflow
- ignored
- B Break
- D Decimal (use BCD for arithmetics)
- I Interrupt (IRQ disable)
- z Zero
- C Carry
- The zero flag (Z) indicates a value of all zero bits and the negative flag (N) indicates the presence of a set sign bit in bit-position 7. These flags are always updated, whenever a value is transferred to a CPU register (A,X,Y) and as a result of any logical ALU operations. The Z and N flags are also updated by increment and decrement operations acting on a memory location.
- The carry flag (C) flag is used as a buffer and as a borrow in arithmetic operations. Any comparisons will update this additionally to the Z and N flags, as do shift and rotate operations.
- All arithmetic operations update the Z, N, C and V flags.
- The overflow flag (V) indicates overflow with signed binary arithmetics. As a signed byte represents a range of -128 to +127, an overflow can never occur when the operands are of opposite sign, since the result will never exceed this range.

Thus, overflow may only occur, if both operands are of the same sign. Then, the result must be also of the same sign. Otherwise, overflow is detected and the overflow flag is set. (I.e., both operands have a zero in the sign position at bit 7, but bit 7 of the result is 1, or, both operands have the sign-bit set, but the result is positive.)

- The decimal flag (D) sets the ALU to binary coded decimal (BCD) mode for additions and subtractions (ADC, SBC).
- The interrupt inhibit flag (I) blocks any maskable interrupt requests (IRQ).
- The break flag (B) is not an actual flag implemented in a register, and rather appears only, when the status register is pushed onto or pulled from the stack. When pushed, it will be 1 when transfered by a BRK or PHP instruction, and zero otherwise (i.e., when pushed by a hardware interrupt). When pulled into the status register (by PLP or on RTI), it will be ignored.

In other words, the break flag will be inserted, whenever the status register is transferred to the stack by software (BRK or PHP), and will be zero, when transferred by hardware. Since there is no actual slot for the break flag, it will be always ignored, when retrieved (PLP or RTI). The break flag is not accessed by the CPU at anytime and there is no internal representation. Its purpose is more for patching, to discern an interrupt caused by a BRK instruction from a normal interrupt initiated by hardware.

 Any of these flags (but the break flag) may be set or cleared by dedicated instructions. Moreover, there are branch instructions to conditionally divert the control flow depending on the respective state of the Z, N, C or V flag.

Processor Stack

LIFO, top-down, 8 bit range, 0x0100 - 0x01FF

Bytes, Words, Addressing

8 bit bytes, 16 bit words in lobyte-hibyte representation (Little-Endian). 16 bit address range, operands follow instruction codes.

Signed values are two's complement, sign in bit 7 (most significant bit). (\$111111111 = \$FF = -1, \$10000000 = \$80 = -128, \$011111111 = \$7F = +127) Signed binary and binary coded decimal (BCD) arithmetic modes.

System Vectors

```
$FFFA, $FFFB ... NMI (Non-Maskable Interrupt) vector, 16-bit (LB, HB)
$FFFC, $FFFD ... RES (Reset) vector, 16-bit (LB, HB)
$FFFE, $FFFF ... IRQ (Interrupt Request) vector, 16-bit (LB, HB)
```

Start/Reset Operations

An active-low reset line allows to hold the processor in a known disabled state, while the system is initialized. As the reset line goes high, the processor performs a start sequence of 7 cycles, at the end of which the program counter (PC) is read from the address provided in the 16-bit reset vector at \$FFFC (LB-HB). Then, at the eighth cycle, the processor transfers control by performing a JMP to the provided address.

Any other initializations are left to the thus executed program. (Notably, instructions exist for the initialization and loading of all registers, but for the program counter, which is provided by the reset vector at \$FFFC.)

Instructions by Type

• Transfer Instructions

LDA load accumulator

LDX load X

LDY load Y

STA store accumulator

STX store X

STY store Y

TAX transfer accumulator to X

TAY transfer stack pointer to X

TXA transfer X to accumulator

TXS transfer X to stack pointer

TXA transfer X to accumulator

Stack Instructions

These instructions transfer the accumulator or status register (flags) to and from the stack. The processor stack is a last-in-first-out (LIFO) stack of 256 bytes length, implemented at addresses \$0100 - \$01FF. The stack grows down as new values are pushed onto it with the current insertion point maintained in the stack pointer register.

(When a byte is pushed onto the stack, it will be stored in the address indicated by the value currently in the stack pointer, which will be then decremented by 1. Conversely, when a value is pulled from the stack, the stack pointer is incremented. The stack pointer is accessible by the \underline{TSX} and \underline{TXS} instructions.)

```
\underline{\text{PHP}} .... push accumulator \underline{\text{PHP}} .... push processor status register (with break flag set)
```

PLA pull accumulator

PLP pull processor status register

• Decrements & Increments

```
DEC .... decrement (memory)
```

 \mathtt{DEX} decrement X

 $\underline{\mathtt{DEY}}$ decrement Y

INC increment (memory)

INX increment X

INY increment Y

• Arithmetic Operations

```
ADC .... add with carry (prepare by CLC)
```

SBC subtract with carry (prepare by SEC)

See the Primer of 6502 Arithmetic Instructions below for details.

· Logical Operations

AND and (with accumulator)

EOR exclusive or (with accumulator)

ORA (inclusive) or with accumulator

• Shift & Rotate Instructions

All shift and rotate instructions preserve the bit shifted out in the carry flag.

```
ASL .... arithmetic shift left (shifts in a zero bit on the right)

LSR .... logical shift right (shifts in a zero bit on the left)

ROL .... rotate left (shifts in carry bit on the right)

ROR .... rotate right (shifts in zero bit on the left)
```

• Flag Instructions

```
CLC .... clear carry
CLD .... clear decimal (BCD arithmetics disabled)
CLI .... clear interrupt disable
CLV .... clear overflow
SEC .... set carry
SED .... set decimal (BCD arithmetics enabled)
SEI .... set interrupt disable
```

· Comparisons

Generally, comparison instructions subtract the operand from the given register without affecting that register. Flags are still set as with a normal subtraction and thus the relation of the two values becomes accessible by the Zero, Carry and Negative flags. (See the branch instructions below for how to evaluate flags.)

Relation R - Op	Z	С	N
Register < Operand	0	0	sign bit of result
Register = Operand	1	1	0
Register > Operand	0	1	sign bit of result

```
CMP .... compare (with accumulator)
CPX .... compare with X
CPY .... compare with Y
```

· Conditional Branch Instructions

Branch targets are relative, signed 8-bit address offsets. (An offset of zero corresponds to the immedately following address. While it is perfectly feasible to calculate offsets by hand, more often these are computed by an assembler program from absoulte addresses or labels. In the latter case, branch instructions may look more like absolute address mode instructions, while taking in actuality just a relative offset as a single-byte operand.)

BCS branch on carry clear
BCS branch on carry set
BEO branch on equal (zero flag set)
BMI branch on minus (negative flag set)
BNE branch on not equal (zero flag clear)
BPL branch on plus (negative flag clear)
BVC branch on overflow clear
BVS branch on overflow set

• Jumps & Subroutines

JSR and RTS affect the stack as the return address is pushed onto or pulled from the stack, respectively.

(JSR will first push the high-byte of the return address [PC+2] onto the stack, then the low-byte. The stack will then contain, seen from the bottom or from the most recently added byte, [PC+2]-L [PC+2]-H.)

JMP jump

JSR jump subroutine

RTS return from subroutine

Interrupts

A hardware interrupt (maskable IRQ and non-maskable NMI), will cause the processor to put first the address currently in the program counter onto the stack (in HB-LB order), followed by the value of the status register. (The stack will now contain, seen from the bottom or from the most recently added byte, SR PC-L PC-H with the stack pointer pointing to the address below the stored contents of status register.) Then, the processor will divert its control flow to the address provided in the two word-size interrupt vectors at \$FFFFA (IRQ) and \$FFFFE (NMI).

A set interrupt disable flag will inhibit the execution of an IRQ, but not of a NMI, which will be executed anyways.

The break instruction (BRK) behaves like a NMI, but will push the value of PC+2 onto the stack to be used as the return address. Also, as with any software initiated transfer of the status register to the stack, the break flag will be found set on the respective value pushed onto the stack. Then, control is transferred to the address in the NMI-vector at SFFFE.

In any way, the interrupt disable flag is set to inhibit any further IRQ as control is transferred to the interrupt handler specified by the respective interrupt vector.

The RTI instruction restores the status register from the stack and behaves otherwise like the JSR instruction. (The break flag is

always ignored as the status is read from the stack, as it isn't a real processor flag anyway.)

```
BRK .... break / software interrupt
RTI .... return from interrupt
```

See the section <u>Jump Vectors and Stack Operations</u> below for operational details.

· Other

```
BIT .... bit test (accumulator & memory)
MOP .... no operation
```

6502 Address Modes in Detail

(This section, especially the diagrams included, is heavily inspired by the Acorn Atom manual "Atomic Theory and Practice" by David Johnson Davies, Acorn Computers Limited, 2nd ed. 1980, p 118-121.)

· Implied Addressing

These instructions act directly on one or more registers or flags internal to the CPU. Therefor, these instructions are principally single-byte instructions, lacking an explicit operand. The operand is implied, as it is already provided by the very instruction.

Instructions targeting exclusively the contents of the accumulator may or may not be denoted by using an explicit "A" as the operand, depending on the flavor of syntax. (This may be regarded as a special address mode of its own, but it is really a special case of an implied instruction. It is still a single-byte instruction and no operand is provided in machine language.)

Mnemonic Examples:

```
CLC ...... clear the carry flag

ROL A ..... rotate contents of accumulator left by one position

ROL ..... same as above, implicit notation (A implied)

TXA ..... transfer contents of X-register to the accumulator


PHA ..... push the contents of the accumulator to the stack

RTS ..... return from subroutine (by pulling PC from stack)
```

Mind that some of these instructions, while simple in appearance, may be quite complex operations, like "PHA", which involves the accumulator, the stack pointer and memory access.

· Immediate Addressing

Here, a literal operand is given immediately after the instruction. The operand is always an 8-bit value and the total instruction length is always 2 bytes. In memory, the operand is a single byte following immediately after the instruction code. In assembler, the mode is usually indicated by a "#" prefix adjacent to the operand.

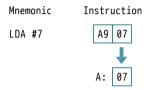

Mnemonic Examples:

load the literal hexidecimal value "\$7" into the accumulator

ADC #\$A0 add the literal hexidecimal value "\$A0" to the accumulator

CPX #\$32 compare the X-register to the literal hexidecimal value "\$32"

· Absolute Addressing

Absolute addressing modes provides the 16-bit address of a memory location, the contents of which used as the operand to the instruction. In machine language, the address is provided in two bytes immediately after the instruction (making these 3-byte instructions) in low-byte, high-byte order (LLHH) or little-endian. In assembler, conventional numbers (HHLL order or big-endian words) are used to provide the address.

Absolute addresses are also used for the jump instructions JMP and JSR to provide the address for the next instruction to continue with in the control flow.



Mnemonic Examples:

LDA \$3010 ... load the contents of address "\$3010" into the accumulator ROL \$08A0 ... rotate the contents of address "\$08A0" left by one position JMP \$4000 ... jump to (continue with) location "\$4000"

Zero-Page Addressing

The 16-bit address space available to the 6502 is thought to consist of 256 "pages" of 256 memory locations each (\$00...\$FF). In this model the high-byte of an address gives the page number and the low-byte a location inside this page. The very first of these pages, where the high-byte is zero (addresses \$0000...\$00FF), is somewhat special.

The zero-page address mode is similar to absolute address mode, but these instructions use only a single byte for the operand, the low-byte, while the high-byte is assumed to be zero by definition. Therefore, these instructions have a total length of just two bytes (one less than absolute mode) and take one CPU cycle less to execute, as there is one byte less to fetch.



Mnemonic Examples:


LDA \$80 load the contents of address "\$0080" into the accumulator BIT \$A2 perform bit-test with the contents of address "\$00A2" ASL \$9A arithmetic shift left of the contents of location "\$009A"

(One way to think of the zero-page is as a page of 256 additional registers, somewhat slower than the internal registers, but with zero-page instructions also faster executing than "normal" instructions. The zero-page has a few more tricks up its sleeve, making these addresses perform more like real registers, see below.)

• Indexed Addressing: Absolute, X and Absolute, Y

Indexed addressing adds the contents of either the X-register or the Y-register to the provided address to give the *effective address*, which provides the operand.

These instructions are usefull to e.g., load values from tables or to write to a continuous segment of memory in a loop. The most basic forms are "absolute,X" and "absolute,X", where either the X- or the Y-register, respectively, is added to a given base address. As the base address is a 16-bit value, these are generally 3-byte instructions. Since there is an additional operation to perform to determine the effective address, these instructions are one cycle slower than those using absolute addressing mode.*

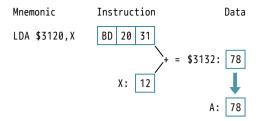

Mnemonic Examples:

LDA \$3120,X ... load the contents of address "\$3120 + X" into A LDX \$8240,Y ... load the contents of address "\$8240 + Y" into X INC \$1400,X ... increment the contents of address "\$1400 + X"


*) If the addition of the contents of the index register effects in a change of the high-byte given by the base address so that the effective address is on the next memory page, the additional operation to increment the high-byte takes another CPU cycle. This is also known as a crossing of page boundaries.

• Indexed Addressing: Zero-Page, X (and Zero-Page, Y)

As with absolute addressing, there is also a zero-page mode for indexed addressing. However, this is generally only available with the X-register. (The only exception to this is LDX, which has an indexed zero-page mode utilizing the Y-register.)

As we have already seen with normal zero-page mode, these instructions are one byte less in total length (two bytes) and take one CPU cycle less than instructions in absolute indexed mode.

Unlike absolute indexed instructions with 16-bit base addresses, zero-page indexed instructions never affect the high-byte of the effective address, which will simply wrap around in the zero-page, and there is no penalty for crossing any page boundaries.

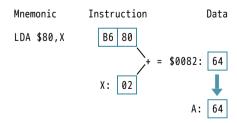

Mnemonic Examples:

LDA \$80,X ... load the contents of address "\$0080 + X" into A

LSR \$82,X ... shift the contents of address "\$0082 + X" left LDX \$60,Y ... load the contents of address "\$0060 + Y" into X

· Indirect Addressing

This mode looks up a given address and uses the contents of this address and the next one (in LLHH little-endian order) as the effective address. In its basic form, this mode is available for the JMP instruction only. (Its generally use is jump vectors and jump tables.)

Like the absolute JMP instruction it uses a 16-bit address (3 bytes in total), but takes two additional CPU cycles to execute, since there are two additional bytes to fetch for the lookup of the effective jump target.

Generally, indirect addressing is denoted by putting the lookup address in parenthesis.



Mnemonic Example:

JMP (\$FF82) ... jump to address given in locations "\$FF82" and "\$FF83"

Pre-Indexed Indirect, "(Zero-Page,X)"


Indexed indirect address modes are generally available only for instructions supplying an operand to the accumulator (LDA, STA, ADC, SBC, AND, ORA, EOR, etc). The placement of the index register inside or outside of the parenthesis indicating the address lookup will give you clue what these instructions are doing.

Pre-indexed indirect address mode is only available in combination with the X-register. It works much like the "zero-page,X" mode, but, after the X-register has been added to the base address, instead of directly accessing this, an additional lookup is performed, reading the contents of resulting address and the next one (in LLHH little-endian order), in order to determine the effective address.

Like with "zero-page,X" mode, the total instruction length is 2 bytes, but there are two additional CPU cycles in order to fetch the effective 16-bit address. As "zero-page,X" mode, a lookup address

will never overflow into the next page, but will simply wrap around in the zero-page.

These instructions are useful, whenever we want to loop over a table of pointers to disperse addresses, or where we want to apply the same operation to various addresses, which we have stored as a table in the zero-page.

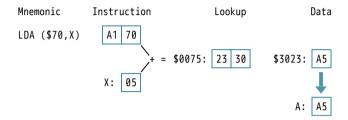

Mnemonic Examples:

LDA (\$70,X) ... load the contents of the location given in addresses "\$0070+X" and "\$0070+1+X" into A

STA (\$A2,X) ... store the contents of A in the location given in addresses "\$00A2+X" and "\$00A3+X"


EOR (\$BA,X) ... perform an exlusive OR of the contents of A and the contents of the location given in addresses "\$00BA+X" and "\$00BB+X"

Post-Indexed Indirect, "(Zero-Page), Y"

Post-indexed indirect addressing is only available in combination with the Y-register. As indicated by the indexing term ",Y" being appended to the outside of the parenthesis indicating the indirect lookup, here, a pointer is first read (from the given zero-page address) and resolved and only then the contents of the Y-register is added to this to give the effective address.

Like with "zero-page,Y" mode, the total instruction length is 2 bytes, but there it takes an additional CPU cycles to resolve and index the 16-bit pointer. As with "absolute,X" mode, the effective address may overflow into the next page, in the case of which the execution uses an extra CPU cycle.

These instructions are useful, wherever we want to perform lookups on varying bases addresses or whenever we want to loop over tables, the base address of which we have stored in the zero-page.

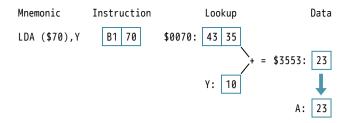

Mnemonic Examples:

LDA (\$70),Y ... add the contents of the Y-register to the pointer provided in "\$0070" and "\$0071" and load the contents of this address into A

STA (\$A2),Y ... store the contents of A in the location given by the pointer in "\$00A2" and "\$00A3" plus the contents of the Y-register

EOR (\$BA),Y ... perform an exlusive OR of the contents of A and the address given by the addition of Y to the pointer in "\$00BA" and "\$00BB"


Relative Addressing (Conditional Branching)

This final address mode is exlusive to conditional branch instructions, which branch in the execution path depending on the state of a given CPU flag. Here, the instruction provides only a relative offset, which is added to the contents of the program counter (PC) as it points to the immediate next instruction. The relative offset is a signed single byte value in two's complement encoding (giving a range of -128...+127), which allows for branching up to half a page forwards and backwards.

On the one hand, this makes these instructions compact, fast and relocatable at the same time. On the other hand, we have to mind that our branch target is no farther away than half a memory page.

Generally, an assembler will take care of this and we only have to provide the target address, not having to worry about relative addressing.

These instructions are always of 2 bytes length and perform in 2 CPU cycles, if the branch is not taken (the condition resolving to 'false'), and 3 cycles, if the branch is taken (when the condition is true). If a branch is taken and the target is on a different page, this adds another CPU cycle (4 in total).

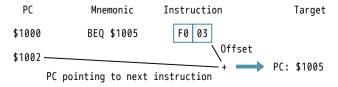

Mnemonic Examples:

(Examples are provided in usual assembler format. Mind how these look much like instructions in absolute address mode.)

BEQ \$1005 ... branch to location "\$1005", if the zero flag is set.

if the current address is \$1000, this will give an offset of \$03.

BCS \$08C4 ... branch to location "\$08C4", if the carry flag is set.

if the current address is \$08D4, this will give an offset of \$EE (-\$12).

BCC \$084A ... branch to location "\$084A", if the carry flag is clear.

Vendor

MOS Technology, 1975



Image: Wikimedia Commons.

6502 Instructions in Detail

ADC Add Memory to Accumulator with Carry

 $A + M + C \rightarrow A, C$ N Z C I D V + + + - - +

addressing	assembler	орс	bytes	cycles
immediate	ADC #oper	69	2	2
zeropage	ADC oper	65	2	3
zeropage,X	ADC oper,X	75	2	4
absolute	ADC oper	6D	3	4
absolute,X	ADC oper,X	7D	3	4*
absolute,Y	ADC oper,Y	79	3	4 *
<pre>(indirect,X)</pre>	ADC (oper,X)	61	2	6
(indirect),Y	ADC (oper),Y	71	2	5*

AND AND Memory with Accumulator

A AND M -> A N Z C I D V

addressing assembler opc bytes cycles immediate AND #oper 29 2 2 zeropage AND oper 25 2 3 zeropage,X AND oper,X 35 2 4 absolute AND oper,X 35 2 4 absolute,X AND oper,X 30 3 4* absolute,X AND oper,X 39 3 4* (indirect,X) AND (oper,X) 21 2 6 Shift Left One Bit (Memory or Accumulator) 0 N Z C I D V 1 addressing assembler opc bytes cycles secumulator ASL oper 06 2 5 ceropage,X					
zeropage AND oper 25 2 3 zeropage, X AND oper, X 35 2 4 absolute AND oper, X 3D 3 4* absolute, X AND oper, X 3D 3 4* absolute, Y AND (oper, X) 21 2 6 (indirect, X) AND (oper, X) 31 2 5* Shift Left One Bit (Memory or Accumulator) N Z C I D V 1 accumulator ASL a 0A 1 2 accumulator ASL a 0A 1 2 zeropage, X aSL oper ASL oper, X 16 2 5	addressing	assembler	opc	bytes o	cycles
zeropage AND oper 25 2 3 zeropage, X AND oper, X 35 2 4 absolute AND oper, X 3D 3 4* absolute, X AND oper, X 3D 3 4* absolute, Y AND (oper, X) 21 2 6 (indirect, X) AND (oper, X) 31 2 5* Shift Left One Bit (Memory or Accumulator) N Z C I D V 1 accumulator ASL a 0A 1 2 accumulator ASL a 0A 1 2 zeropage, X aSL oper ASL oper, X 16 2 5	immediate	AND #oper	29	2	2
zeropage, X	zeropage		25	2	3
absolute AND oper 2D 3 4 absolute, X AND oper, X 3D 3 4* absolute, Y AND oper, Y 39 3 4* (indirect, X) AND (oper, X) 21 2 6 (indirect), Y AND (oper, X) 21 2 5* Shift Left One Bit (Memory or Accumulator) C <- [76543210] <- 0 N Z C I D V + + + + addressing assembler opc bytes cycles accumulator ASL A 0A 1 2 zeropage ASL oper 06 2 5 zeropage, X ASL oper, X 16 2 6 absolute ASL oper, X 16 2 6 absolute, X ASL oper, X 1E 3 7 Branch on Carry Clear branch on C = 0 N Z C I D V addressing assembler opc bytes cycles relative BCC oper 90 2 2** Branch on Carry Set branch on Carry Set Branch on Result Zero branch on Result Zero branch on Z = 1 N Z C I D V	= =	=	35	2	4
absolute,Y AND oper,Y 39 3 4* (indirect,X) AND (oper,X) 21 2 6 (indirect),Y AND (oper),Y 31 2 5* Shift Left One Bit (Memory or Accumulator) C <- [76543210] <- 0	absolute		2D	3	4
(indirect,X) AND (oper,X) 21 2 6 (indirect),Y AND (oper),Y 31 2 5* Shift Left One Bit (Memory or Accumulator) C <- [76543210] <- 0	absolute,X	-	3D	3	4*
<pre>(indirect),Y AND (oper),Y 31 2 5* Shift Left One Bit (Memory or Accumulator) C <- [76543210] <- 0</pre>	absolute,Y	AND oper,Y	39	3	4 *
Shift Left One Bit (Memory or Accumulator) C <- [76543210] <- 0	(indirect,X)	AND (oper,X)	21	2	6
C <- [76543210] <- 0	(indirect),Y		31	2	5*
C <- [76543210] <- 0					
addressing assembler opc bytes cycles accumulator ASL A 0A 1 2 zeropage ASL oper 06 2 5 zeropage,X ASL oper,X 16 2 6 absolute ASL oper 0E 3 6 absolute,X ASL oper,X 1E 3 7 Branch on Carry Clear branch on C = 0 N Z C I D V addressing assembler opc bytes cycles relative BCC oper 90 2 2** Branch on Carry Set branch on C = 1 N Z C I D V addressing assembler opc bytes cycles relative BCS oper B0 2 2** Branch on Result Zero branch on Z = 1 N Z C I D V	Shift Left On	e Bit (Memory	or Ac	cumulato	or)
addressing assembler opc bytes cycles accumulator ASL A 0A 1 2 zeropage ASL oper 06 2 5 zeropage,X ASL oper,X 16 2 6 absolute ASL oper 0E 3 6 absolute,X ASL oper,X 1E 3 7 Branch on Carry Clear branch on C = 0 N Z C I D V addressing assembler opc bytes cycles relative BCC oper 90 2 2** Branch on Carry Set branch on C = 1 N Z C I D V addressing assembler opc bytes cycles relative BCS oper B0 2 2** Branch on Result Zero branch on Z = 1 N Z C I D V	C <- [7654321	01 <- 0		NZC	TDV
accumulator ASL A 0A 1 2 zeropage ASL oper 06 2 5 zeropage,X ASL oper,X 16 2 6 absolute ASL oper 0E 3 6 absolute,X ASL oper,X 1E 3 7 Branch on Carry Clear branch on C = 0 N Z C I D V addressing assembler opc bytes cycles relative BCC oper 90 2 2** Branch on Carry Set branch on C = 1 N Z C I D V addressing assembler opc bytes cycles relative BCS oper B0 2 2** Branch on Result Zero branch on Z = 1 N Z C I D V	0 1 [7051021	0] , 0			
accumulator ASL A 0A 1 2 zeropage ASL oper 06 2 5 zeropage,X ASL oper,X 16 2 6 absolute ASL oper 0E 3 6 absolute,X ASL oper,X 1E 3 7 Branch on Carry Clear branch on C = 0 N Z C I D V addressing assembler opc bytes cycles relative BCC oper 90 2 2** Branch on Carry Set branch on C = 1 N Z C I D V addressing assembler opc bytes cycles relative BCS oper B0 2 2** Branch on Result Zero branch on Z = 1 N Z C I D V					
zeropage ASL oper 06 2 5 zeropage,X ASL oper,X 16 2 6 absolute ASL oper 0E 3 6 absolute,X ASL oper,X 1E 3 7 Branch on Carry Clear branch on C = 0	addressing	assembler	opc	bytes o	cycles
zeropage ASL oper 06 2 5 zeropage,X ASL oper,X 16 2 6 absolute ASL oper 0E 3 6 absolute,X ASL oper,X 1E 3 7 Branch on Carry Clear branch on C = 0	accumulator	AST. A	0.A	1	2
zeropage, X ASL oper, X 16 2 6 absolute ASL oper 0E 3 6 absolute, X ASL oper, X 1E 3 7 Branch on Carry Clear branch on C = 0					
absolute ASL oper, X 1E 3 6 absolute, X ASL oper, X 1E 3 7 Branch on Carry Clear branch on C = 0	= =	-	16	2	6
absolute, X ASL oper, X 1E 3 7 Branch on Carry Clear branch on C = 0					
Branch on Carry Clear branch on C = 0		=			
branch on C = 0 N Z C I D V addressing assembler opc bytes cycles relative BCC oper 90 2 2** Branch on Carry Set branch on C = 1 N Z C I D V addressing assembler opc bytes cycles relative BCS oper B0 2 2** Branch on Result Zero branch on Z = 1 N Z C I D V	•	<u>.</u> ,			
addressing assembler opc bytes cycles relative BCC oper 90 2 2** Branch on Carry Set branch on C = 1	Branch on Car	ry Clear			
addressing assembler opc bytes cycles relative BCC oper 90 2 2** Branch on Carry Set branch on C = 1		-			
relative BCC oper 90 2 2** Branch on Carry Set branch on C = 1	branch on C =	0		N Z C	I D V
relative BCC oper 90 2 2** Branch on Carry Set branch on C = 1					
relative BCC oper 90 2 2** Branch on Carry Set branch on C = 1	- 4 4 4			h1	
Branch on Carry Set branch on C = 1 N Z C I D V addressing assembler opc bytes cycles relative BCS oper B0 2 2** Branch on Result Zero branch on Z = 1 N Z C I D V					
branch on C = 1 N Z C I D V addressing assembler opc bytes cycles relative BCS oper B0 2 2** Branch on Result Zero branch on Z = 1 N Z C I D V	relative	BCC oper	90	2	2**
branch on C = 1 N Z C I D V addressing assembler opc bytes cycles relative BCS oper B0 2 2** Branch on Result Zero branch on Z = 1 N Z C I D V					
branch on C = 1 N Z C I D V addressing assembler opc bytes cycles relative BCS oper B0 2 2** Branch on Result Zero branch on Z = 1 N Z C I D V	Branch on Car	ry Set			
addressing assembler opc bytes cycles relative BCS oper B0 2 2** Branch on Result Zero branch on Z = 1 N Z C I D V		-			
relative BCS oper B0 2 2** Branch on Result Zero branch on Z = 1 N Z C I D V	branch on $C =$	1		N Z C	I D V
relative BCS oper B0 2 2** Branch on Result Zero branch on Z = 1 N Z C I D V					
relative BCS oper B0 2 2** Branch on Result Zero branch on Z = 1 N Z C I D V					
Branch on Result Zero branch on Z = 1 N Z C I D V	addressing	assembler	opc	bytes o	cycles
branch on Z = 1	relative	BCS oper	В0	2	2**
branch on Z = 1					
branch on Z = 1	Branch on Res	ult %ero			
	Diamon on Nob	410 2010			
addressing assembler opc bytes cycles	branch on Z =	1		N Z C	I D V
addressing assembler opc bytes cycles					
addressing assembler opc bytes cycles					
	addressing	assembler	opc	bytes o	cycles

ASL

BCC

BCS

BEQ

relative

BIT Test Bits in Memory with Accumulator

BEQ oper

F0

2

2**

bits 7 and 6 of operand are transferred to bit 7 and 6 of SR (N,V); the zero-flag is set according to the result of the operand AND the accumulator (set, if the result is zero, unset otherwise). This allows a quick check of a few bits at once without affecting any of the registers, other than the status register (SR).

→ <u>Further details</u>.

A AND M \rightarrow Z, M7 \rightarrow N, M6 \rightarrow V N Z C I D V M7 + - - - M6

addressing	assembler	opc	bytes	cycles
zeropage	BIT oper	24	2	3
absolute	BIT oper	2C	3	4

BMI Branch on Result Minus

branch on N = 1 N Z C I D V

addressing assembler opc bytes cycles relative BMI oper 30 2 2**

BNE Branch on Result not Zero

branch on Z = 0 N Z C I D V

addressing assembler opc bytes cycles relative BNE oper D0 2 2**

BPL Branch on Result Plus

branch on N = 0 N Z C I D V ------

addressing assembler opc bytes cycles relative BPL oper 10 2 2**

BRK Force Break

BRK initiates a software interrupt similar to a hardware interrupt (IRQ). The return address pushed to the stack is PC+2, providing an extra byte of spacing for a break mark (identifying a reason for the break.)

The status register will be pushed to the stack with the break flag set to 1. However, when retrieved during RTI or by a PLP instruction, the break flag will be ignored.

The interrupt disable flag is not set automatically.

→ Further details.

	interrupt, push PC+2, pus	sh SR		N Z C I D V
	addressing implied			bytes cycles
BVC	Branch on Over	rflow Clear		
	branch on V =	0		N Z C I D V
	addressing			
	relative	BVC oper	50	2 2**
BVS	Branch on Over	rflow Set		
	branch on $V =$	1		N Z C I D V
	addressing	assembler	opc	bytes cycles
	relative	BVS oper	70	2 2**
CLC	Clear Carry Fl	lag		
	0 -> C			N Z C I D V 0
	addressing	assembler	opc	bytes cycles
	implied			1 2
CLD	Clear Decimal	Mode		
	0 -> D			N Z C I D V
	addressing	accembler	ong	
	addressing implied		D8	1 2
CLI	Clear Interrup	ot Disable Bit		
	0 -> I			N Z C I D V
	addressing	assembler	opc	bytes cycles
	implied	CLI	58	1 2
CLV	Clear Overflow	w Flag		
	NZCIDV			

NZCIDV

	0 -> V				0
	addressing	assembler	opc	bytes	cycles
	implied	CLV	В8	1	2
СМР	Compare Memor	ry with Accumu	ılator		
	A - M				CIDV

addressing	assembler	opc	bytes	cycles
immediate	CMP #oper	C9	2	2
zeropage	CMP oper	C5	2	3
zeropage,X	CMP oper,X	D5	2	4
absolute	CMP oper	CD	3	4
absolute,X	CMP oper,X	DD	3	4 *
absolute,Y	CMP oper,Y	D9	3	4*
(indirect,X)	CMP (oper,X)	C1	2	6
(indirect),Y	CMP (oper),Y	D1	2	5*

CPX Compare Memory and Index X

X - M	N	\mathbf{z}	С	Ι	D	V
	+	+	+	_	_	_

assembler addressing opc bytes cycles CPX #oper 2 2 immediate CPX oper E42 3 zeropage absolute CPX oper EC 3 4

CPY Compare Memory and Index Y

Y - M N Z C I D V + + + - - -

addressing assembler opc bytes cycles immediate CPY #oper 2 2 C4 2 3 zeropage CPY oper absolute CPY oper CC 3 4

DEC Decrement Memory by One

M - 1 -> M N Z C I D V + + - - - -

addressing	assembler	орс	bytes	cycles
zeropage	DEC oper	С6	2	5
zeropage,X	DEC oper,X	D6	2	6
absolute	DEC oper	CE	3	6
absolute,X	DEC oper,X	DE	3	7

					_
DEX	Decrement.	Index	Х	bv	On ϵ

DEX	Decrement Ind	lex X by One			
	x - 1 -> x			N Z C	I D V
				+ + -	
	addressing	assembler	opc	bytes	cycles
	implied	DEX	CA	1	2
DEY	Decrement Ind	lex Y by One			
	Y - 1 -> Y			N Z C	I D V
				+ + -	
	addressing	assembler	opc	bytes	cvcles
	implied	DEY	88	1	2
	тшрттеч	DEI	00	1	2
EOR	Exclusive-OR	Memory with Ac	ccumu]	ator	
	A EOR M -> A			NZC	IDV
	addressing	assembler	opc	bytes	cvcles
	immediate	EOR #oper	49	2	2
	zeropage	EOR #Oper	45	2	3
	zeropage,X	EOR oper,X	55	2	4
	absolute	EOR Oper,X	4D	3	4
	absolute,X	EOR oper,X	5D	3	4*
	absolute,Y	EOR oper,Y	59	3	4*
	(indirect,X)			2	6
		EOR (oper),Y		2	5*
TNG	Turnamant Mam				
INC	Increment Mem	ory by one			
	M + 1 -> M			N Z C	I D V
				+ + -	
	addressing	assembler	opc	bytes	cycles
	zeropage	INC oper	E6	2	5
	zeropage,X	INC oper,X	F6	2	6
	absolute	INC oper	EE	3	6
	absolute,X	INC oper,X	FE	3	7
INX	Increment Ind	lex X by One			
		- 2			
	X + 1 -> X				I D V
	addressing	assembler	opc	bytes	cycles
	implied	INX	E8	1	2

DEX	Decrement Ind	ex X by One			
	X - 1 -> X			и 7 С	I D V
	X - 1 -> X				
				–	
	addressing	assembler	opc	bytes	cycles
	implied	DEX	CA	1	2
	_				
DEY	Decrement Ind	ex Y by One			
	Y - 1 -> Y				I D V
				+ + -	
	addressing	assembler	onc	hvtes	cvcles
		assembler DEY	88	1	2
	implied	DEI	00	1	2
EOR	Exclusive-OR	Memory with Ac	ccumu!	Lator	
	A EOR M -> A			N Z C	I D V
				+ + -	
				•	-
	addressing	assembler		bytes	
	immediate	EOR #oper	49	2	2
	zeropage	EOR oper	45	2	3
	zeropage,X absolute	EOR oper,X EOR oper	55 4D	2 3	4 4
	absolute,X	EOR oper,X	5D	3	4 4*
	absolute,Y	EOR oper,Y	59	3	4*
		EOR (oper,X)	41	2	6
	(indirect),Y	EOR (oper),Y	51	2	5*
INC	Increment Mem	ory by One			
	M + 1 > M			N Z C	T D 17
	M + 1 -> M				I D V
					- -
	addressing	assembler	opc	bytes	cycles
	zeropage	INC oper	E6	2	5
	zeropage,X	INC oper,X	F6	2	6
	absolute	INC oper	EE	3	6
	absolute,X	INC oper,X	FE	3	7
INX	Increment Ind	ex X by One			
	X + 1 -> X			N Z C	I D V
	V 1 1 -> V				
				•	
	addressing	assembler	opc	bytes	cycles
	implied	INX	E8	1	2

INY	Increment Ind	ex Y by One			
	Y + 1 -> Y			N Z C + + -	I D V
	addressing	assembler	орс	bytes	cycles
	implied	INY	C8	1	2
JMP	Jump to New L	ocation			
	operand 1st b	yte -> PCL		N Z C	I D V
	operand 2nd b	yte -> PCH			
	addressing	assembler	орс	bytes	cycles
	absolute	JMP oper	4C	3	3
	indirect	JMP (oper)	6C	3	5
JSR	Jump to New Lepush (PC+2), operand 1st by		g Retu		ess I D V
	operand 2nd b	yte -> PCH			
	addressing	assembler	орс	bytes	cycles
	absolute	JSR oper	20	3	6
LDA	Load Accumula	tor with Memo	ry		
	M -> A			N Z C + + -	I D V
	addressing	assembler	opc	bytes	cycles
	immediate	LDA #oper	A9	2	2
	zeropage	LDA oper	A5	2	3
	zeropage,X	LDA oper,X	В5	2	4
	absolute	LDA oper	AD	3	4
	absolute,X	LDA oper,X	BD	3	4*

addressing	assembler	opc	bytes	cycles
immediate	LDA #oper	A9	2	2
zeropage	LDA oper	A5	2	3
zeropage,X	LDA oper,X	В5	2	4
absolute	LDA oper	AD	3	4
absolute,X	LDA oper,X	BD	3	4*
absolute,Y	LDA oper,Y	В9	3	4*
(indirect,X)	LDA (oper,X) A1	2	6
(indirect),Y	LDA (oper),	У В1	2	5*

LDX Load Index X with Memory

M -> X	N	Z	С	Ι	D	V	
	+	+	-	-	-	-	

addressing	assembler	opc	bytes	cycles
immediate	LDX #oper	A2	2	2
zeropage	LDX oper	A6	2	3
zeropage,Y	LDX oper,Y	В6	2	4

	absolute	LDX oper	AE	3	4
	absolute,Y	LDX oper,Y	BE	3	4*
LDY	Load Index Y	with Memory			
	М -> Y			N Z C	I D V
				+ + -	
	addressing	assembler	орс	bytes	cycles
	immediate	LDY #oper	A0	2	2
	zeropage	LDY oper	A4	2	3
	zeropage,X	LDY oper,X	В4	2	4
	absolute	LDY oper	AC	3	4
	absolute,X	LDY oper,X	ВС	3	4*
LSR	Shift One Bit	Right (Memory	y or A	accumula	tor)
	0 -> [7654321	.0] -> C		N Z C	
				0 + +	
	addressing	assembler	opc	bytes	cycles
	accumulator	LSR A	4A	1	2
	zeropage	LSR oper	46	2	5
	zeropage,X	LSR oper,X	56	2	6
	absolute	LSR oper	4E	3	6
	absolute,X	LSR oper,X	5E	3	7
NOP	No Operation				
				N Z C	I D V
	addressing	assembler	opc	bytes	cycles
	implied	NOP	EA	1	2
ORA	OR Memory wit	th Accumulator			
	A OR M -> A			N Z C + + -	I D V
	addressing	assembler	opc	bytes	cycles
	immediate	ORA #oper	09	2	2
	zeropage	ORA oper	05	2	3
	zeropage,X	ORA oper,X	15	2	4
	absolute	ORA oper	0D	3	4
	absolute,X	ORA oper,X	1D	3	4 *
	absolute,Y	ORA oper,Y	19	3	4 *
	(indinos + 7/)	ODA (onor V)	Λ1	2	6

(indirect,X) ORA (oper,X) 01
(indirect),Y ORA (oper),Y 11

6 5* push A

N Z C I D V

- - - - - -

addressing	assembler	opc	bytes	cycles
implied	РНА	48	1	3

PHP Push Processor Status on Stack

The status register will be pushed with the break flag and bit 5 set to 1.

push SR

 ${\tt N} \ {\tt Z} \ {\tt C} \ {\tt I} \ {\tt D} \ {\tt V}$

- - - -

addressing	assembler	opc	bytes	cycles
implied	PHP	08	1	3

PLA Pull Accumulator from Stack

pull A

N Z C I D V

+ + - - - -

addressing	assembler	opc	bytes	cycles
implied	PLA	68	1	4

PLP Pull Processor Status from Stack

The status register will be pulled with the break flag and bit $5\ \text{ignored.}$

pull SR

absolute,X

NZCIDV

from stack

addressing	assembler	opc	bytes	cycles
implied	PΓ.P	28	1	4

ROL Rotate One Bit Left (Memory or Accumulator)

C <- [76543210] <- C N Z C I D V + + + - - -

ROL oper,X

addressing assembler opc bytes cycles 2 accumulator ROL A 1 26 2 5 zeropage ROL oper zeropage,X ROL oper,X 36 2 6 absolute 3 ROL oper 2E

3E

3

7

ROR Rotate One Bit Right (Memory or Accumulator)

C -> [76543210] -> C	N	Z	С	Ι	D	V
	+	+	+	_	_	_

assembler	opc	bytes	cycles
ROR A	6A	1	2
ROR oper	66	2	5
ROR oper,X	76	2	6
ROR oper	6E	3	6
ROR oper,X	7E	3	7
	ROR A ROR oper ROR oper,X ROR oper	ROR A 6A ROR oper 66 ROR oper,X 76 ROR oper 6E	ROR A 6A 1 ROR oper 66 2 ROR oper, X 76 2 ROR oper 6E 3

RTI Return from Interrupt

The status register is pulled with the break flag and bit 5 ignored. Then PC is pulled from the stack.

addressing assembler opc bytes cycles implied RTI 40 1 6

RTS Return from Subroutine

pull PC, PC+1 -> PC N Z C I D V

addressing assembler opc bytes cycles implied RTS 60 1 6

SBC Subtract Memory from Accumulator with Borrow

addressing	assembler	opc	bytes	cycles
immediate	SBC #oper	E9	2	2
zeropage	SBC oper	E5	2	3
zeropage,X	SBC oper,X	F5	2	4
absolute	SBC oper	ED	3	4
absolute,X	SBC oper,X	FD	3	4*
absolute,Y	SBC oper,Y	F9	3	4*
(indirect,X)	SBC (oper,X)	E1	2	6
(indirect),Y	SBC (oper),Y	F1	2	5*

SEC Set Carry Flag

1 -> C N Z C I D V - - 1 - - -

	addressing	assembler	opc	bytes cy	cles
	implied	SEC	38	1	2
SED	Set Decimal F	lag			
	1 -> D			NZCI	DV
	addressing	assembler	opc	bytes cy	cles
	implied	SED	F8	1	2
SEI	Set Interrupt	Disable Statu	ıs		
	1 -> I			NZCI	יז ח
	1 -> 1			1	
	addressing	assembler	opc	bytes cy	ycles
	implied		78	1	2
STA	Store Accumul	ator in Memory	7		
	A -> M			NZCI	. ט ע
	addressing	assembler	opc	bytes cy	cles
	zeropage	STA oper	85	2	3
		STA oper,X	95	2	4
	absolute	STA oper	8D	3	4
	absolute,X			3 3	5 5
		STA oper,Y			6
	(indirect),Y	STA (oper,X) STA (oper),Y	91	2	6
	. , ,				
STX	Store Index X	in Memorv			
		1			
	X -> M			NZCI	D V
	addressing	assembler	opc	bytes cy	ycles
		STX oper		2	3
		STX oper,Y		2	4
	absolute		8E	3	4
STY	Sore Index Y	in Memory			
	V > M			N 7 0 -	. D
	Y -> M			NZCI	. ע
				-	_
	addressing	assembler	opc	bytes cy	ycles

	zeropage	STY oper	84	2 3	
	zeropage,X	STY oper,X	94	2 4	
	absolute	STY oper	8C	3 4	
		_			
TAX	Transfer Accu	mulator to In	dex X		
	A -> X			NZCIDV	
				+ +	
	addrocaina	accomblor	ona	bytes avales	
	addressing	assemblei		bytes cycles	-
	implied	TAX	AA	1 2	
TAY	Transfer Accu	mulator to In	dex Y		
	A -> Y			NZCIDV	
				+ +	
	addressing	assembler	onc	bytes cycles	
					-
	implied	TAY	A8	1 2	
TSX	Transfer Stac	k Pointer to	Index	X	
	SP -> X			NZCIDV	
				+ +	
	addressing	assembler	opc	bytes cycles	
	implied	TSX	BA	1 2	•
	Imbited	157	DA	1 2	
ТХА	Transfer Inde	x X to Accumu	lator		
TXA	Transfer Inde	x X to Accumu	lator		
TXA		x X to Accumu	lator	N Z C I D V	
TXA	Transfer Inde	x X to Accumu	lator	N Z C I D V	
TXA		x X to Accumu	lator	N Z C I D V + +	
TXA	X -> A			+ +	
TXA	X -> A				
TXA	X -> A addressing	assembler		+ + bytes cycles	
TXA	X -> A	assembler	opc	+ + bytes cycles	
TXA	X -> A addressing	assembler	opc	+ + bytes cycles	
TXA	X -> A addressing implied	assembler TXA	opc 8A	+ + bytes cycles 1 2	
	X -> A addressing implied	assembler TXA	opc 8A	+ + bytes cycles 1 2	
	X -> A addressing implied	assembler TXA	opc 8A	+ + bytes cycles 1 2	-
	X -> A addressing implied Transfer Inde	assembler TXA	opc 8A	+ + bytes cycles 1 2 er	-
	X -> A addressing implied Transfer Inde	assembler TXA	opc 8A	+ + bytes cycles 1 2 er	-
	<pre>X -> A addressing implied Transfer Inde X -> SP</pre>	assembler TXA x X to Stack	opc 8A Regist	<pre>bytes cycles 1 2 er N Z C I D V</pre>	
	<pre>X -> A addressing implied Transfer Inde X -> SP addressing</pre>	assembler TXA x X to Stack	opc 8A Regist opc	+ + bytes cycles 1 2 er	
	<pre>X -> A addressing implied Transfer Inde X -> SP</pre>	assembler TXA x X to Stack	opc 8A Regist	<pre>bytes cycles 1 2 er N Z C I D V</pre>	
	<pre>X -> A addressing implied Transfer Inde X -> SP addressing</pre>	assembler TXA x X to Stack assembler	opc 8A Regist opc	<pre>bytes cycles 1 2 er N Z C I D V bytes cycles</pre>	
TXS	<pre>X -> A addressing implied Transfer Inde X -> SP addressing implied</pre>	assembler TXA x X to Stack assembler TXS	opc 8A Regist opc 9A	<pre>bytes cycles 1 2 er N Z C I D V bytes cycles</pre>	
	<pre>X -> A addressing implied Transfer Inde X -> SP addressing</pre>	assembler TXA x X to Stack assembler TXS	opc 8A Regist opc 9A	<pre>bytes cycles 1 2 er N Z C I D V bytes cycles</pre>	
TXS	<pre>X -> A addressing implied Transfer Inde X -> SP addressing implied Transfer Inde</pre>	assembler TXA x X to Stack assembler TXS	opc 8A Regist opc 9A	bytes cycles 1 2 er N Z C I D V bytes cycles	
TXS	<pre>X -> A addressing implied Transfer Inde X -> SP addressing implied</pre>	assembler TXA x X to Stack assembler TXS	opc 8A Regist opc 9A	bytes cycles 1 2 er N Z C I D V bytes cycles 1 2 N Z C I D V	
TXS	<pre>X -> A addressing implied Transfer Inde X -> SP addressing implied Transfer Inde</pre>	assembler TXA x X to Stack assembler TXS	opc 8A Regist opc 9A	bytes cycles 1 2 er N Z C I D V bytes cycles	
TXS	<pre>X -> A addressing implied Transfer Inde X -> SP addressing implied Transfer Inde</pre>	assembler TXA x X to Stack assembler TXS	opc 8A Regist opc 9A	bytes cycles 1 2 er N Z C I D V bytes cycles 1 2 N Z C I D V	
TXS	<pre>X -> A addressing implied Transfer Inde X -> SP addressing implied Transfer Inde</pre>	assembler TXA x X to Stack assembler TXS	opc 8A Regist opc 9A	bytes cycles 1 2 er N Z C I D V bytes cycles 1 2 N Z C I D V	
TXS	<pre>X -> A addressing implied Transfer Inde X -> SP addressing implied Transfer Inde</pre>	assembler TXA x X to Stack assembler TXS	opc 8A Regist opc 9A	bytes cycles 1 2 er N Z C I D V bytes cycles 1 2 N Z C I D V	-

STY oper

zeropage

84

addressing	assembler	opc	bytes	cycles
implied	TYA	98	1	2

- * add 1 to cycles if page boundary is crossed
- ** add 1 to cycles if branch occurs on same page add 2 to cycles if branch occurs to different page

M6 memory bit 6 M7 memory bit 7

Note on assembler syntax:

Some assemblers employ "OPC \star oper" or a ".b" extension to the mneomonic for forced zeropage addressing.

Note on Read-Modify-Write instructions (NMOS 6502 only):

Some instructions, like EOR, ASL, ROL, DEC, INC, etc., fetch a value from memory to modify it and to write the modified value back to the originating address. The original NMOS 6502 switches immediately into write mode after the read of the value, resulting in the unmodified value being written back to the address (while the value is modified in the next cycle), before the modified value is finally written to the destination.

Normally, this should be of no concern, but it may cause issues when writing to a device attached to the address bus that may trigger some action on any write operation, as this address will be strobed twice (once for the intermediate, unmodified write-back operation and a second time when writing the modified value.)

This does not apply to the CMOS variants of the 6502.

Implementation Specific Details

The following sections cover traits specific to the implementation, like the original NMOS version and variants by MOS Technology or the CMOS version by Western Design Center (WDC).

"Illegal" Opcodes and Undocumented Instructions

The following instructions are undocumented are not guaranteed to work. Some are highly unstable, some may even start two asynchronous threads competing in race condition with the winner determined by such miniscule factors as temperature or minor differences in the production series, at other times, the outcome depends on the exact values involved and the chip series.

Use with care and at your own risk.

Please mind that this section applies to the original NMOS version of the 6502 by MOS Technology (and its variants, like the 6507 or 6510) only, but not to the later CMOS versions, like the W65C02S by Western Design Center (WDC). The latter either use these opcodes to implement extensions to the standard NMOS instruction set or will execute a NOP for any instruction codes still undefined.

There are several mnemonics for various opcodes. Here, they are (mostly) the same as those used by the ACME and DASM assemblers with known synonyms provided in parentheses:

```
• ALR (ASR)
```

- ANC
- ANC (ANC2)
- ANE (XAA)
- ARR
- DCP (DCM)
- ISC (ISB, INS)
- LAS (LAR)
- LAX
- LXA (LAX immediate)
- RLA
- RRA
- SAX (AXS, AAX)
- SBX (AXS, SAX)
- SHA (AHX, AXA)
- SHX (A11, SXA, XAS)
- SHY (A11, SYA, SAY)
- SLO (ASO)
- SRE (LSE)
- TAS (XAS, SHS)
- USBC (SBC)
- NOPs (including DOP, TOP)
- JAM (KIL, HLT)

"Illegal" Opcodes in Details

Legend to markers used in the instruction details:

```
* add 1 to cycles if page boundary is crossed
```

- t unstable
- tt highly unstable

ALR (ASR)

AND oper + LSR

A AND oper, 0 -> [76543210] -> C

N Z C I D V + + + - - -

addressing assembler opc bytes cycles immediate ALR #oper 4B 2 2

ANC

AND oper + set C as ASL

A AND oper, $bit(7) \rightarrow C$

N Z C I D V

addressing assembler opc bytes cycles immediate ANC #oper 0B 2 2

ANC (ANC2)

AND oper + set C as ROL

effectively the same as instr. OB

A AND oper, $bit(7) \rightarrow C$

N Z C I D V + + + - - -

addressing assembler opc bytes cycles immediate ANC #oper 2B 2 2

ANE (XAA)

* OR X + AND oper

Highly unstable, do not use.

A base value in A is determined based on the contets of A and a constant, which may be typically \$00, \$ff, \$ee, etc. The value of this constant depends on temerature, the chip series, and maybe other factors, as well.

In order to eliminate these uncertaincies from the equation, use either ${\tt 0}$ as the operand or a value of \$FF in the accumulator.

(A OR CONST) AND X AND oper -> A

N Z C I D V + + - - - -

addressing	assembler	opc	bytes	cycles
immediate	ANE #oper	8B	2	2 ††

ARR

AND oper + ROR

This operation involves the adder: V-flag is set according to (A AND oper) + oper The carry is not set, but bit 7 (sign) is exchanged with the carry

A AND oper, C -> [76543210] -> C

N Z C I D V + + + - - +

addressing	assembler	opc	bytes	cycles
immediate	ARR #oper	6B	2	2

DCP (DCM)

DEC oper + CMP oper

 $M - 1 \rightarrow M, A - M$

Decrements the operand and then compares the result to the accumulator.

N Z C I D V + + + - - -

addressing	assembler	орс	bytes	cycles
zeropage	DCP oper	C7	2	5
zeropage,X	DCP oper,X	D7	2	6
absolute	DCP oper	CF	3	6
absolute,X	DCP oper,X	DF	3	7
absolute,Y	DCP oper,Y	DB	3	7
(indirect,X)	DCP (oper,X)	C3	2	8
(indirect),Y	DCP (oper),Y	D3	2	8

ISC (ISB, INS)

INC oper + SBC oper

 $M + 1 \rightarrow M$, $A - M - \overline{C} \rightarrow A$

NZCIDV + + + - - +

addressing	assembler	орс	bytes	cycles
zeropage	ISC oper	E7	2	5
zeropage,X	ISC oper,X	F7	2	6
absolute	ISC oper	\mathbf{EF}	3	6
absolute,X	ISC oper,X	$\mathbf{F}\mathbf{F}$	3	7
absolute,Y	ISC oper,Y	FB	3	7
(indirect,X)	<pre>ISC (oper,X)</pre>	E3	2	8
(indirect),Y	ISC (oper),Y	F3	2	8

LAS (LAR)

LDA/TSX oper

M AND SP -> A, X, SP

NZCIDV

+ + - - - -

addressing	assembler	opc	bytes	cycles
absolute,Y	LAS oper.Y	BB	3	4*

LAX

LDA oper + LDX oper

M -> A -> X

NZCIDV

addressing	assembler	opc	bytes	cycles
zeropage	LAX oper	Α7	2	3
zeropage,Y	LAX oper,Y	В7	2	4
absolute	LAX oper	AF	3	4
absolute,Y	LAX oper,Y	BF	3	4*
<pre>(indirect,X)</pre>	LAX (oper,X)	A3	2	6
(indirect),Y	LAX (oper),Y	В3	2	5*

LXA (LAX immediate)

Store * AND oper in A and X

Highly unstable, involves a 'magic' constant, see ANE

(A OR CONST) AND oper -> A -> X

NZCIDV

addressing assembler opc bytes cycles immediate LXA #oper 2 †† ROL oper + AND oper

M = C < [76543210] < C, A AND M -> A

N Z C I D V + + + - - -

addressing	assembler	орс	bytes	cycles
zeropage	RLA oper	27	2	5
zeropage,X	RLA oper,X	37	2	6
absolute	RLA oper	2F	3	6
absolute,X	RLA oper,X	3F	3	7
absolute,Y	RLA oper,Y	3B	3	7
<pre>(indirect,X)</pre>	RLA (oper,X)	23	2	8
(indirect),Y	RLA (oper),Y	33	2	8

RRA

ROR oper + ADC oper

$$M = C \rightarrow [76543210] \rightarrow C, A + M + C \rightarrow A, C$$

N Z C I D V + + + - - +

addressing assembler opc bytes cycles 5 zeropage RRA oper 2 zeropage,X RRA oper,X 77 absolute RRA oper 6F 6 absolute,X RRA oper,X 7F 7 absolute, Y RRA oper, Y 7в (indirect, X) RRA (oper,X) 63 8 (indirect), Y RRA (oper), Y 73

SAX (AXS, AAX)

A and X are put on the bus at the same time (resulting effectively in an AND operation) and stored in $\mbox{\scriptsize M}$

A AND X -> M

 ${\tt N} \ {\tt Z} \ {\tt C} \ {\tt I} \ {\tt D} \ {\tt V}$

- - - - - :

addressing	assembler	opc	bytes	cycles
zeropage	SAX oper	87	2	3
zeropage,Y	SAX oper,Y	97	2	4
absolute	SAX oper	8F	3	4
<pre>(indirect,X)</pre>	SAX (oper,X)	83	2	6

SBX (AXS, SAX)

CMP and DEX at once, sets flags like CMP

```
(A AND X) - oper -> X
```

N Z C I D V + + + - - -

addressing assembler opc bytes cycles immediate SBX #oper CB 2 2

SHA (AHX, AXA)

Stores A AND X AND (high-byte of addr. + 1) at addr.

unstable: sometimes 'AND (H+1)' is dropped, page boundary crossings may not work (with the high-byte of the value used as the high-byte of the address)

A AND X AND $(H+1) \rightarrow M$

N Z C I D V

addressing assembler opc bytes cycles absolute, Y SHA oper, Y 9F 3 5 † (indirect), Y SHA (oper), Y 93 2 6 †

SHX (A11, SXA, XAS)

Stores X AND (high-byte of addr. + 1) at addr.

unstable: sometimes 'AND (H+1)' is dropped, page boundary crossings may not work (with the high-byte of the value used as the high-byte of the address)

 $X \text{ AND } (H+1) \longrightarrow M$

N Z C I D V

- - - - -

addressing assembler opc bytes cycles absolute, Y SHX oper, Y 9E 3 5 †

SHY (A11, SYA, SAY)

Stores Y AND (high-byte of addr. + 1) at addr.

unstable: sometimes 'AND (H+1)' is dropped, page boundary crossings may not work (with the high-byte of the value used as the high-byte of the address)

Y AND (H+1) -> M

N Z C I D V

addressing assembler opc bytes cycles absolute, X SHY oper, X 9C 3 5 †

ASL oper + ORA oper

 $M = C \leftarrow [76543210] \leftarrow 0$, A OR M \rightarrow A

N Z C I D V + + + - - -

addressing	assembler	opc	bytes	cycles
zeropage	SLO oper	07	2	5
zeropage,X	SLO oper,X	17	2	6
absolute	SLO oper	0F	3	6
absolute,X	SLO oper,X	1F	3	7
absolute,Y	SLO oper,Y	1B	3	7
(indirect,X)	SLO (oper,X)	03	2	8
(indirect),Y	SLO (oper),Y	13	2	8

SRE (LSE)

LSR oper + EOR oper

 $M = 0 \rightarrow [76543210] \rightarrow C$, A EOR M \rightarrow A

N Z C I D V

+ + + - - -

addressing	assembler	орс	bytes	cycles
zeropage	SRE oper	47	2	5
zeropage,X	SRE oper,X	57	2	6
absolute	SRE oper	4F	3	6
absolute,X	SRE oper,X	5F	3	7
absolute,Y	SRE oper,Y	5B	3	7
(indirect,X)	<pre>SRE (oper,X)</pre>	43	2	8
(indirect),Y	SRE (oper),Y	53	2	8

TAS (XAS, SHS)

Puts A AND X in SP and stores A AND X AND (high-byte of addr. + 1) at addr.

unstable: sometimes 'AND (H+1)' is dropped, page boundary crossings may not work (with the high-byte of the value used as the high-byte of the address)

A AND X \rightarrow SP, A AND X AND (H+1) \rightarrow M

N Z C I D V

- - - - - -

addressing	assembler	assembler opc			
absolute,Y	TAS oper,Y	9В	3	5 †	

SBC oper + NOP

effectively same as normal SBC immediate, instr. E9.

 $A - M - \overline{C} \rightarrow A$

N Z C I D V + + + - - +

addressing	assembler	assembler opc bytes				
immediate	USBC #oper	EB	2	2		

NOPs (including DOP, TOP)

Instructions effecting in 'no operations' in various address modes. Operands are ignored.

N Z C I D V

opc	addressing	bytes	cycles
1A	implied	1	2
3A	implied	1	2
5A	implied	1	2
7A	implied	1	2
DA	implied	1	2
FA	implied	1	2
80	immediate	2	2
82	immediate	2	2
89	immediate	2	2
C2	immediate	2	2
E2	immediate	2	2
04	zeropage	2	3
44	zeropage	2	3
64	zeropage	2	3
14	zeropage,X	2	4
34	zeropage,X	2	4
54	zeropage,X	2	4
74	zeropage,X	2	4
D4	zeropage,X	2	4
F4	zeropage,X	2	4
0C	absolute	3	4
1C	absolute,X	3	4*
3C	absolute,X	3	4*
5C	absolute,X	3	4*
7C	absolute,X	3	4*
DC	absolute,X	3	4*
FC	absolute,X	3	4*

JAM (KIL, HLT)

These instructions freeze the CPU.

The processor will be trapped infinitely in T1 phase with \$FF on the data bus. - Reset required.

Instruction codes: 02, 12, 22, 32, 42, 52, 62, 72, 92, B2, D2, F2

Have a look at this <u>table of the instruction layout</u> in order to see how most of these "illegal" instructions are a result of executing both instructions at c=1 and c=2 in a given slot (same column, rows immediately above) at once.

Where c is the lowest two bits of the instruction code. E.g., "SAX abs", instruction code \$8F, binary 10001111, is "STA abs", 10001101 (\$8D) and "STX abs", 10001110 (\$8E).

Rev. A 6502 (Pre-June 1976) "ROR Bug"

Famously, the Rev. A 6502 as delivered from September 1975 to June 1976 had a "ROR bug". However, the "ROR" instruction isn't only missing from the original documentation, as it turns out, the chip is actually missing crucial control lines, which would have been required to make this instruction work. The instruction is simply not implemented and it wasn't even part of the design. (This was actually added on popular demand in Rev. B, as rumor has it, demand by Steve Wozniak. Even, if not true, this makes for a good story. And how could there be a page on the 6502 without mentioning "Woz" once?) So, for all means, "ROR" is an undocumented or "illegal" instruction on the Rev. A 6502.

And this is how ROR behaves on these Rev. A chips, much like ASL: it shifts all bits to the left, shifting in a zero bit at the LSB side, but, unlike ASL, it does not shift the high-bit into the carry. (So there are no connections to the carry at all.)

ROR Rev. A (pre-June 1976)

As ASL, but does not update the carry.

 $\ensuremath{\mathtt{N}}$ and $\ensuremath{\mathtt{Z}}$ flags are set correctly for the operation performed.

[76543210] <- 0

N Z C I D V + + - - - -

addressing assembler opc bytes cycles accumulator ROR A 6A 1 2 2 5 zeropage ROR oper 66 2 zeropage, X ROR oper, X 76 6 absolute ROR oper 7 3 absolute, X ROR oper, X 7E

Western Design Center (WDC) W65C02(S) Extensions

The W65C02 features 69 instructions and 16 address modes (one of them a stack mode, which was previously considered as implied) and static CMOS ciruitry. There are two new address modes and 14 new instructions, as well as a few behavioral changes.

(The $G65\mathbf{SC}02$ by GTE Microcircuits is similar to W65C02 but doesn't implement any of the new instructions for bit manipulation.)

Additional Address Modes (W65C02)

The W65C02 adds the following address modes:

• zeropage indirect, (zeropage): OPC (\$LL)
operand is zeropage address; effective address is the word in (LL, LL + 1).

This mode provides zeropage indirection without indexing, similar to "pre-indexed indirect" ('(zero-page,X)') and "post-indexed indirect" ('(zero-page),Y') with the indexing register set to zero. This mode extends accumulator instructions, like ADC, AND, CMP, EOR, LDA, ORA, SBC, STA.

absolute indexed indirect, (absolute,X): OPC (\$LLHH,X)
 operand is base address for indirect lookup;
 effective address is word in (\$HHLL + X, \$HHLL + 1 + X).

This address mode is available for the JMP instruction only. This is similar to an indirect JMP instruction, but the X register is added to the absolute operand before the address lookup.

Instructions with Additional Address Modes (W65C02)

ADC Add Memory to Accumulator with Carry

addressing	assembler	opc	bytes	cycles
(zeropage)	ADC (oper)	72	2	5

AND AND Memory with Accumulator

	addressing	assembler	opc	bytes cycles
	(zeropage)	AND (oper)	32	2 5
віт	Test Bits in	Memory with A	Accumul	ator
	A AND M -> Z,	M7 -> N, M6	-> V	N Z C I D V M7 + M6
	addressing	assembler	opc	bytes cycles
	immediate	BIT #oper	89	3 2
	absolute,X	BIT oper,X	3C	3 4*
	zeropage	BIT oper	24	2 3
	zeropage,X	BIT oper,X	34	2 4
CMP	Compare Memor	y with Accumu	lator	
	A - (ZPG)			NZCIDV
	,			+ + +
	addressing	assembler	opc	bytes cycles
	(zeropage)	CMP (oper)	D2	2 5
DEC	Decrement by	One (Accumula	tor)	
	A - 1 -> A			N Z C I D V + +
	addressing	assembler	opc	bytes cycles
	accumulator	DEC A	3A	1 2
EOR	Exclusive-OR	Memory with A	Accumul	ator
	A EOR (ZPG) -	> A		N Z C I D V + +
	addressing (zeropage)	assembler		bytes cycles
INC	Increment by	One (Accumula	ator)	
	A + 1 -> A			N Z C I D V + +
	addressing accumulator	assembler	opc 1A	bytes cycles 1 2

addressing assembler opc bytes cycles (absolute,X) JMP (oper,X) 7C 3 6

Note: The 2004 datasheet lists this (erroneously) with 5 cycles (and also as implemented on the original NMOS 6502).

LDA Load Accumulator with Memory

(ZPG) \rightarrow A N Z C I D V

+ + - - - -

addressing assembler opc bytes cycles (zeropage) LDA (oper) B2 2 5

ORA OR Memory with Accumulator

A OR (ZPG) -> A

N Z C I D V + + - - - -

addressing assembler opc bytes cycles (zeropage) ORA (oper) 12 2 5

SBC Subtract Memory from Accumulator with Borrow

 $A - (ZPG) - \overline{C} -> A$

N Z C I D V + + + - - +

addressing assembler opc bytes cycles (zeropage) SBC (oper) F2 2 5

STA Store Accumulator in Memory

A -> (ZPG)

NZCIDV

- - - -

addressing assembler opc bytes cycles (zeropage) SBC (oper) 92 2 5

* add 1 to cycles if page boundary is crossed

Additional Instructions (W65C02)

Note: The bit manipulating instructions BBR, BBS, RMB and SMB were "grandfathered" in from the Rockwell R6500/11/12/15 instruction set. They are present on the W65C02S, but are missing in early versions of the W65C02.

BBR Branch on Bit Reset ***

This branch instruction tests a given bit of the accumulator and branches, if this bit is not set. This is an entire family of eight instructions in total, testing one of bits #0 to #7 each. Individual mnemonics designate the tested bit, as in BBRn, where n=0...7. As with all branch instructions, the address mode is relative, taking a signed single-byte offset as operand.

branch o	on I	A_n	=	0				N	Z	С	I	D	V
								_	_	_	_	_	_

bit tested	assembler	opc	bytes	cycles			
0 [0]	BBR0 oper	0F	2	5**			
1 [0-]	BBR1 oper	1F	2	5**			
2 []	BBR2 oper	2F	2	5**			
3 []	BBR3 oper	3F	2	5**			
4 [0]	BBR4 oper	4F	2	5**			
5 [0]	BBR5 oper	5F	2	5**			
6 [-0]	BBR6 oper	6F	2	5**			
7 [0]	BBR7 oper	7F	2	5**			

BBS Branch on Bit Set***

Similar to BBR, but branches on bit n set. Individual mnemonics designate the tested bit, as in BBSn, where n=0..7. As with all branch instructions, the address mode is relative, taking a signed single-byte offset as operand.

branch on $A_n = 1$	N	\mathbf{z}	С	I	D	V
	_	_	_	_	_	_

bit tested	assembler	opc	bytes	cycles
0 [1]	BBS0 oper	8F	2	5**
1 [1-]	BBS1 oper	9F	2	5**
2 [1]	BBS2 oper	AF	2	5**
3 []	BBS3 oper	BF	2	5**
4 [1]	BBS4 oper	CF	2	5**

		DDCE ones	DII	2	E de de
		BBS5 oper BBS6 oper		2 2	
		BBS7 oper			5**
	, [-]			_	
BRA	Branch Always				
	branches unco	her branch insolutionally. a relative ju		ions, bu	ıt
	PC+2 + operan	d -> PC		N Z C	I D V
	addressing	assembler	opc	bytes o	cycles
		BRA oper			3*
PHX	Push X Regist	er on Stack			
	push X			N Z C	I D V
	addressing	assembler	opc	bytes o	cycles
	stack/implied			1	
PHY	Push Y Regist	er on Stack			
	push Y			N Z C	I D V
	addressing	assembler	opc	bytes o	cycles
		 PHY			
	_				
PLX	Pull X Regist	er from Stack			
	pull X			N Z C	I D V
				+ + -	
	addressing	assembler	opc	bytes o	cycles
	implied	PLA	FA	1	4
PLY	Pull Y Regist	er from Stack			
	pull Y			N Z C	I D V
				+ + -	
	addressing	assembler	opc	bytes o	cycles
	implied	PLA	7A	1	4

RMB Reset Memory Bit***

Resets a bit in memory at the given zeropage location. This is an entire family of eight instructions in total, resetting one of bits #0 to #7 each. Individual mnemonics designate the bit to be reset, as in RMBn, where n = 0...7. The operand is always a zeropage address.

bit reset	assembler		opc	bytes	cycles
0 [0]	RMB0	zpg	07	2	5
1 [0-]	RMB1	zpg	17	2	5
2 []	RMB2	zpg	27	2	5
3 []	RMB3	zpg	37	2	5
4 [0]	RMB4	zpg	47	2	5
5 [0]	RMB5	zpg	57	2	5
6 [-0]	RMB6	zpg	67	2	5
7 [0]	RMB7	zpg	77	2	5

SMB Set Memory Bit***

Similar to RMB, but sets the respective bit. This is an entire family of eight instructions in total, setting one of bits #0to #7 each. Individual mnemonics designate the bit to be set, as in SMBn, where n = 0..7. The operand is always a zeropage address.

bit set	assembler		opc	bytes	cycles
0 [1]	SMB0	zpg	87	2	5
1 [1-]	SMB1	zpg	97	2	5
2 []	SMB2	zpg	A7	2	5
3 []	SMB3	zpg	В7	2	5
4 [1]	SMB4	zpg	C7	2	5
5 [1]	SMB5	zpg	D7	2	5
6 [-1]	SMB6	zpg	E7	2	5
7 [1]	SMB7	zpg	F7	2	5

STP Stop Mode

Stops and sets the signal on pin PHI2 to high. A reset signal will "wake up" the processor quickly.

stop the clock (sleep) $$\tt N\ Z\ C\ I\ D\ V$$

addressing	assembler	opc	bytes	cycles
implied	STP	DB	1	3

STZ Store Zero in Memory

0	-> M	1	N	Z	С	Ι	D	V
		-	_	_	_	_	_	_

addressing	assembler	opc	bytes	cycles
zeropage	STZ oper	64	2	3
zeropage,X	STZ oper,X	74	2	4
absolute	STZ oper	9C	3	4
absolute,X	STZ oper,X	9E	3	4*

TRB Test and Reset Memory Bit***

This instruction first ANDs the contents of the given memory location with the contents of the accumulator (A) and sets the Z flag accordingly to the result, much like the BIT instruction. Then, the contents of the memory location is ANDed with the compliment of the mask in A, and then written back, thus clearing the bit(s) set in A.

In other words, TRB clears the bits set in A in the specified location and sets Z, if any of these bits were set, otherwise resetting Z.

A AND M \rightarrow Z, \neg A AND M \rightarrow M N Z C I D V - + - - -

addressing assembler opc bytes cycles absolute TRB oper 1C 3 6 zeropage TRB oper 14 2 5

TSB Test and Set Memory Bit***

Similar to TRB, but sets the bits according to the bit mask in $\ensuremath{\mathtt{A.}}$

TSB sets the bits set in A in the specified location and sets \mathbf{Z} , if any of these bits were previously set, otherwise resetting \mathbf{Z} .

A AND M -> Z, A OR M -> M N Z C I D V - + - - -

addressing assembler opc bytes cycles absolute TRB oper OC 3 6

zeropage TRB oper 04 2 5

WAI Wait for Interrupt

Stops and pulls the signal on pin RDY to low. The processor goes into a low-power mode, similar to STP, until an IRQ or NMI signal is encountered to "wake it up" again.

stop and wait for sIRQ/sNMI N Z C I D V

addressing assembler opc bytes cycles implied WAI CB 1 3

- * add 1 to cycles if page boundary is crossed
- ** add 1 to cycles if branch occurs on same page
 add 2 to cycles if branch occurs to different page
- *** Instructions for bit manipulation not present on the G65**SC**02. Early versions of the W65C02 implement TRB and TSB only. Instructions BBR, BBS, RMB and SMB on the W65C02S are as on the Rockwell R6500/11/12/15 family.

Additional NOPs, "Reserved for Future Use" (W65C02)

There are no undefined opcodes on the W65C02. Opcodes not in use are marked as "reserved for future use" and execute as NOPs. These additional NOPs come at various byte sizes and cycle times, here listed by their respective instruction codes (W65C02S):

• NOP 1 byte, 1 cycle:

03, 13, 23, 33, 43, 53, 63, 73,

83, 93, A3, B3, C3, D3, E3, F3,

0B, 1B, 2B, 3B, 4B, 5B, 6B, 7B,

8B, 9B, AB, BB, EB, FB

• NOP 2 bytes, 2 cycles:

02, 22, 42, 62, 82, C2, E2

• NOP 2 bytes, 3 cycles:

- NOP 2 bytes, 4 cycles:
 54, F4, F4
- NOP 3 bytes, 4 cycles:
 DC, FC
- NOP 3 bytes, 8 cycles:

Modified Cycle Times (W65C02)

• Cycle Penalty for BCD Arithmetics

For instructions ADC and SBC, the negative flag (N), the overflow flag (V) and the zero flag (Z) are now set correctly for decimal mode. However, this comes at the general cost of an extra cycle for these instructions, for any BCD arithmetics.

Add 1 to any cycle times stated if the processor is currently in decimal mode (D flag = 1).

- Read-Modify-Write Instructions with Absolute Indexed Addresses execute in one cycle less when remaining at the same memory page.
- Indirect Jumps on Page Boundaries

Indirect JMP instructions with a look-up address low-byte of \$FF (as in \$11FF) now execute as expected, but there's an extra cycle added to the exuction time when address bytes are on different memory pages.

Behavioral Changes

- Modified reset and interrupt sequence: the decimal flag is now reset (D=0) and the processor set to binary mode.
- No undefinded opcodes (all unused instruction codes execute as NOPs, instead).
- For ADC and SBC N, V, and Z flags are set correctly in decimal mode, but there is now an extra 1-cycle penalty for decimal mode with certain instructions.
- Indexed addressing across page boundaries now results in an extra read of the last instruction byte, instead of the extra read of an invalid address (NMOS).

- Indirect jumps, fetching the address from the last byte of a page now fetch the high-byte correctly from the next page. (E.g., "JMP (\$11FF)" will fetch the low-byte of the effective address from \$11FF and the high-byte from \$1200. The NMOS version didn't increment the high-byte of the fetch address in these cases.) An extra cycle is added in these cases.
- Read-modify-write instructions do not write back the initial value to the
 address (as with the NMOS 6502), but perform a dummy read instead. So there
 are now two read cycles and one write cycle, while there were two write and
 one read cycle on the NMOS 6502. (Caveat: for indexed addressing, this dummy
 read is performed on the base address before indexing.)
- Read-modify-write instructions with absolute indexed addresses that do not cross page boundaries perform now in one cycle less (6 instead of 7 on the NMOS CPU).
- BRK instruction are fully executed before any interrupt. (On the NMOS version, if an interrupt occured while a BRK instruction was fetching the interupt vector, this would be overwritten and the interrupt executed, instead.)
- The signal on the RDY pin is now bidrectional. While it was just an input on the NMOS version, it is now also pulled low by the WAI instruction.

Rockwell R65000/11 •/12 •/15 Extensions

While the Rockwell R6500 family is very similar to the MOS 6502, types /11, /12, and /15 add four instructions for bit manipulation, which were later included in the WDC instruction set. (Hence, these instructions are the same on the respective Rockwell and WDC processors.)

Rockwell R6500 family processors also add additional interrupts, registers and ports for I/O communication, counters, and respective control registers. These are accessed and controlled by reserved addresses and have no impact on the instruction set. (See the respective datasheets for details.)

Additional Instructions (Rockwel R6500/11 /12 /15)

BBR Branch on Bit Reset

This branch instruction tests a given bit of the accumulator and branches, if this bit is not set. This is an entire family of eight instructions in total, testing one of bits #0 to #7 each. Individual mnemonics designate the tested bit, as in BBRn, where n=0...7. As with all branch instructions, the address mode is relative, taking a signed single-byte offset as operand.

branch on $A_n = 0$ N Z C I D V

bit tested	assembler opc bytes		bytes	cycles
0 [0]	BBR0 oper	0F	2	5**
1 [0-]	BBR1 oper	1F	2	5**
2 []	BBR2 oper	2F	2	5**
3 []	BBR3 oper	3F	2	5**
4 [0]	BBR4 oper	4F	2	5**
5 [0]	BBR5 oper	5F	2	5**
6 [-0]	BBR6 oper	6F	2	5**
7 [0]	BBR7 oper	7F	2	5**

BBS Branch on Bit Set

Similar to BBR, but branches on bit n set. Individual mnemonics designate the tested bit, as in BBSn, where n=0..7. As with all branch instructions, the address

mode is relative, taking a signed single-byte
offset as operand.

bit tested	asser	mbler	opc	bytes	cycles
0 [1]	BBS0	oper	8F	2	5**
1 [1-]	BBS1	oper	9F	2	5**
2 []	BBS2	oper	AF	2	5**
3 []	BBS3	oper	BF	2	5**
4 [1]	BBS4	oper	CF	2	5**
5 [1]	BBS5	oper	DF	2	5**
6 [-1]	BBS6	oper	EF	2	5**
7 [1]	BBS7	oper	FF	2	5**

RMB Reset Memory Bit

Resets a bit in memory at the given zeropage location. This is an entire family of eight instructions in total, resetting one of bits #0

to #7 each. Individual mnemonics designate the bit to be reset, as in RMBn, where n=0..7. The operand is always a zeropage address.

$0 \rightarrow M_n$	N	Z	С	Ι	D	V
	_	_	_	_	_	_

bit reset	assei	embler opc bytes		cycles	
0 [0]	RMB0	zpg	07	2	5
1 [0-]	RMB1	zpg	17	2	5
2 [0]	RMB2	zpg	27	2	5
3 []	RMB3	zpg	37	2	5
4 [0]	RMB4	zpg	47	2	5
5 [0]	RMB5	zpg	57	2	5
6 [-0]	RMB6	zpg	67	2	5
7 [0]	RMB7	zpg	77	2	5

SMB Set Memory Bit

Similar to RMB, but sets the respective bit. This is an entire family of eight instructions in total, setting one of bits #0to #7 each. Individual mnemonics designate the bit to be set, as in SMBn, where n = 0..7. The operand is always a zeropage address.

1 -> M _n	N	Z	С	Ι	D	V
	_	_	_	_	_	_

bit set	assei	mbler	орс	bytes	cycles
0 [1]	SMB0	zpg	87	2	5
1 [1-]	SMB1	zpg	97	2	5
2 []	SMB2	zpg	A7	2	5
3 []	SMB3	zpg	в7	2	5
4 [1]	SMB4	zpg	C7	2	5
5 [1]	SMB5	zpg	D7	2	5
6 [-1]	SMB6	zpg	E7	2	5
7 [1]	SMB7	zpg	F7	2	5

- * add 1 to cycles if page boundary is crossed
- ** add 1 to cycles if branch occurs on same page add 2 to cycles if branch occurs to different page

Pragmatics of Comparisons and the BIT Instruction

Compare Instructions

The 6502 MPU features three basic compare instructions in various address modes:

Instruction	Comparison
CMP	Accumulator and operand
CPX	X register and operand
CPY	Y register and operand

The various compare instructions subtract the operand from the respective register (as if the carry was set) without setting the result in the accumulator (rather, leaving its content unchanged) and adjust the N, Z, and C flags as with any ordinary subtraction.

Flags will be set as follows:

Relation	Z	С	N
register < operand	0	0	sign-bit of result
register = operand	1	1	0
register > operand	0	1	sign-bit of result

Meaning, we may dertermine the derivative relation "greater than or equal" (gte) by checking just the carry flag (using instruction BCS):

Relation	\mathbf{Z}	С	N
register ≥ operand	X	1	sign-bit of result

(For why the carry flag is set this way, see the notes on subtraction, below.)

Mind that the negative flag is not significant and all conditions may be evaluated by checking the carry and/or zero flag(s).

The BIT Instruction

The <u>BIT</u> instruction may be the most obscure instruction of the 6502: While other instruction serve a very clear purpose, like transferring values or performing basic arithmetic or logical operations, this one serves a rather specialized purpose, but it does so in a very general way. This purpose is bit testing.

Generally, testing of a particular bit is achieved by masking (isolating) this bit (or multiple bits) by an AND operation and then checking the zero flag (Z) by a BNE or BEQ instruction. This, however, destroys the contents of the accumulator. This is, where the BIT instruction comes in: much like the comparisons perform a subtraction without setting the result, the BIT instruction performs a logical AND without setting the result, but still reflects the result in the state of the zero flag (Z). Which allows for the same checks using the BNE or BEQ instructions, without affecting the contents of the accumulator.

Since the sign-bit is often used as a flag, testing this is also covered by the BIT instruction, which additionally to setting the zero flag also transfers bits 7 and 6 of the operand into the corresponding bits of the status register — which happen to be the negative (N) and overflow (V) flags. Therefore, bits 7 and 6 of the operand may be tested independently using the BMI/BPL and BVS/BVC instructions.

An interesting use of the BIT instruction may be observed in MS/Commodore BASIC:

```
;a condition has been previously evaluated
           ; by setting the carry, now set a flag...
           BCS SETFLAG
                           ;set a flag in location "FLAG"
            (...)
SETFLAG
           ROR FLAG
                            ;rotate carry into sign position
                            ;previous sign-bit now in bit 6
           BIT FLAG
                            ;bit 6 (prev. sign) into overflow flag (V)
           BVS ABORT
                            ; was the flag set already?
            (...)
                            ;no: adjust to condition...
           JMP CONTINUE
                            ; done, continue with task ...
            (...)
ABORT
                            ;flag set twice, abort the operation ...
```

Notably, this is easily modified to check the state of 'FLAG' first:

```
BCS SETFLAG ;set a flag...
```

```
SETFLAG BIT FLAG ;sign-bit into negative flag (N)

BMI ABORT ;is the flag set already?

ROR FLAG ;no: rotate carry into sign position
 ;(carry is left untouched by BIT)

(...) ;adjust to condition...

JMP CONTINUE ;done

ABORT (...) ;flag already set, abort...
```

In both cases, we don't care about the AND operation and its result in the zero flag (Z), but only about the bit transfer into the V or N flag, respectively.

A Primer of 6502 Arithmetic Operations

The 6502 processor features two basic arithmetic instructions, ADC, ADd with Carry, and SBC, SuBtract with Carry. As the names suggest, these provide addition and subtraction for single byte operands and results. However, operations are not limited to a single byte range, which is where the carry flag comes in, providing the means for a single-bit carry (or borrow), to combine operations over several bytes.

In order to accomplish this, the carry is included in each of these operations: for additions, it is added (much like another operand); for subtractions, which are just an addition using the inverse of the operand (complement value of the operand), the role of the carry is inverted, as well.

Therefore, it is crucial to set up the carry appropriatly: fo additions, the carry has to be initially cleared (using CLC), while for subtractions, it must be initially set (using SEC — more on SBC below).

```
;ADC: A = A + M + C

CLC ;clear carry in preparation

LDA #2 ;load 2 into the accumulator

ADD #3 ;add 3 -> now 5 in accumulator

;SBC: A = A - M - C ("C": "not carry")

SEC ;set carry in preparation

LDA #15 ;load 15 into the accumulator

SBC #8 ;subtract 8 -> now 7 in accumulator
```

Note: Here, we used immediate mode, indicated by the prefix "#" before the operand, to directly load a literal value. If there is no such "#" prefix, we generally

mean to use the value stored at the address, which is given by the operand. As we will see in the next example.)

To combine this for 16-bit values (2 bytes each), we simply chain the instructions for the next bytes to operate on, but this time without setting or clearing the carry.

Supposing the following locations for storing 16-bit values:

```
low-byte high-byte first argument ... $1000 $1001 second argument ... $1002 $1003 result ...... $1004 $1005
```

we perform a 16-bit addition by:

```
CLC ;prepare carry for addition

LDA $1000 ;load value at address $1000 into A (low byte of first argument)

ADC $1002 ;add low byte of second argument at $1002

STA $1004 ;store low byte of result at $1004

LDA $1001 ;load high byte of first argument

ADC $1003 ;add high byte of second argument

STA $1005 ;store high byte of result (result in $1004 and $1005)
```

and, conversely, for a 16-bit subtraction:

```
SEC     ;prepare carry for subtraction
LDA $1000    ;load value at address $1000 into A (low byte of first argument)
SBC $1002    ;subtract low byte of second argument at $1002
STA $1004    ;store low byte of result at $1004
LDA $1001    ;load high byte of first argument
SBC $1003    ;subtract high byte of second argument
STA $1005    ;store high byte of result (result in $1004 and $1005)
```

Note: Another, important preparatory step is to set the processor into binary mode by use of the CLD (CLear Decimal flag) instruction. (Compare the section on decimal mode below.) This has to be done only once.

Signed Values

Operations for unsigned and signed values are principally the same, the only difference being in how we interpret the values. Generally, the 6502 uses what is known as *two's complement* to represent negative values.

(In earlier computers, something known as ones' complement was used, where we simply flip all bits to their opposite state to represent a negative value. While simple, this came with a few drawbacks, like an additional value of negative zero, which are overcome by two's complement.)

In two's complement representation, we simply flip all the bits in a byte to their opposite (the same as an XOR by \$FF) and then add 1 to this.

```
E.g., to represent -4:,
```

(We here use "\$" to indicate a hexadecimal number and "%" for binary notation. A dot is used to separate the high- and low-nibble, i.e. group of 4 bits.)

```
%0000.0100 4
XOR %1111.1111 255
-----
%1111.1011 complement (all bits flipped)
+ 1
------
%1111.1100 -4, two's complement
```

Thus, in a single byte, we may represent values in the range

```
from -128 (%1000.0000 or $80)
to +127 (%0111.1111 or $7F)
```

A notable feature is that the highest value bit (first bit from the left) will always be 1 for a negative value and always be 0 for a positive one, for which it is also known as the *sign bit*. Whenever we interpret a value as a signed number, a set sign bit indicates a negative value.

This works just the same for larger values, e.g., for a signed 16-bit value:

```
-512 = %1111.1110.0000.0000 = $FE $00

-516 = %1111.1101.1111.1100 = $FD $FC (mind how the +1 step carries over)
```

Notably, the binary operations are still the same as with unsigned values and provide the expected results:

```
dec binary hex

100 %0110.0100 $64
+ -24 %1110.1000 $E8
```

76 %0100.1100 \$4C (+ carry)

Note: We may now see how SBC actually works, by adding ones' complement of the operand to the accumulator. If we add 1 from the carry to the result, this effectively results in a subtraction in two's complement (the inverse of the operand + 1). If the carry happens to be zero, the result falls short by 1 in terms of two's complement, which is equivalent to adding 1 to the operand before the subtraction. Thus, the carry either provides the correction required for a valid two's complement representation or, if missing, results in a subtraction including a binary borrow.

FLags with ADC and SBC

Besides the carry flag (C), which allows us to chain multi-byte operations, the CPU sets the following flags on the result of an arithmetic operation:

```
zero flag (Z) ...... set if the result is zero, else unset negative flag (N) ... the N flag always reflects the sign bit of the result overflow flag (V) ... indicates overflow in signed operations
```

The latter may require explanation: how is signed overflow different from the carry flag? The overflow flag is about a certain ambiguity of the sign bit and the negative flag in signed context: if operands are of the same sign, the case may occure, where the sign bit flips (as indicated by a change of the negative flag), while the result is still of the same sign. This condition is indicated by the overflow flag. Notably, such an overflow can never occur, when the operands are of opposite signs.

E.g., adding positive \$40 to positive \$40:

	acc.	acc.	flags
	hex	binary	NVDIZC
LDA #\$40	\$40	%0100.0000	000000
ADC #\$40	\$80	%1000.0000	110000

Here, the change of the sign bit is unrelated to the actual value in the accumulator, it is merely a consequence of carry propagation from bit 6 to bit 7, the sign bit. Since both operands are positive, the result must be positive, as well.

The overflow flag (V) is of interest in signed context only and has no meaning in unsigned context.

Decimal Mode (BCD)

Besides binary arithmetic, the 6502 processor supports a second mode, binary coded decimal (BCD), where each byte, rather than representing a range of 0...255, represents two decimal digits packed into a single byte. For this, a byte is thought divided into two sections of 4 bits, the high- and the low-nibble. Only values from 0...9 are used for each nibble and a byte can represent a range of a 2-digit decimal value only, as in 0...99.

E.g.,

dec binary hex
14 %0001.0100 \$14
98 %1001.1000 \$98

Mind how this intuitively translates to hexadecimal notation, where figures A...F are never used.

Whether or not the processor is in decimal mode is determined by the decimal flag (D). If it is set (using SED) the processor will use BCD arithmetic. If it is cleared (using CLD), the processor is in binary mode.

Decimal mode only affects instructions ADC and SBC (but not INC or DEC.)

Examples:

SED
CLC
LDA #\$12
ADC #\$44 ;accumulator now holds \$56
SED
CLC
LDA #\$28
ADC #\$14 ;accumulator now holds \$42

Mind that BCD mode is always unsigned:

acc. NVDIZC
SED
SEC
LDA #0 \$00 001011
SBC #1 \$99 101000

The carry flag and the zero flag work in decimal mode as expected.

The negative flag is set similar to binary mode (and of questionable value.)

The overflow flag has no meaning in decimal mode.

Multi-byte operations are just as in decimal mode: We first prepare the carry and then chain operations of the individual bytes in increasing value order, starting with the lowest value pair.

(It may be important to note that Western Design Center (WDC) version of the processor, the 65C02, always clears the decimal flag when it enters an interrupt, while the original NMOS version of the 6502 does not.)


6502 Jump Vectors and Stack Operations

The 256 bytes processor stack of the 6502 is located at $$0100 \dots $01FF$ in memory, growing down from top to bottom.

There are three 2-byte address locations at the very top end of the 64K address space serving as jump vectors for reset/startup and interrupt operations:

```
$FFFA, $FFFB ... NMI (Non-Maskable Interrupt) vector
$FFFC, $FFFD ... RES (Reset) vector
$FFFE, $FFFF ... IRQ (Interrupt Request) vector
```


As an interrupt occurs, any instruction currently processed is completed first. Only then, the value of the program counter (PC) is put in high-low order onto the stack, followed by the value currently in the status register, and control will be transferred to the address location found in the respective interrupt vector. The registers stored on the stack are recovered at the end of an interrupt routine, as control is transferred back to the interrupted code by the RTI instruction.

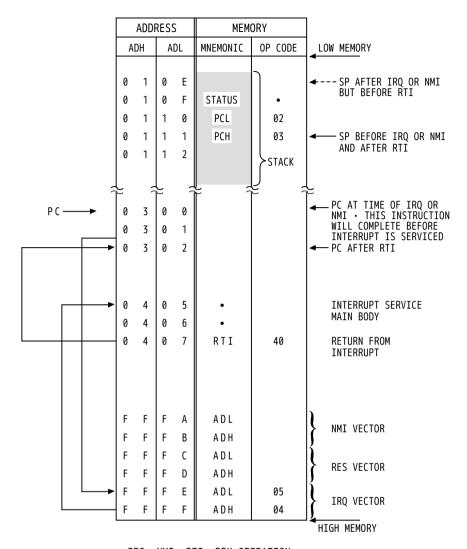

IRQ, NMI, RTI, BRK OPERATION

(Reset after: MCS6502 Instruction Set Summary, MOS Technology, Inc.)

Similarly, as a JSR instruction is encountered, PC is dumped onto the stack and recovered by the RTS instruction. (Here, the value stored is actually the address *before* the location, the program will eventually return to. Thus, the effective return address is PC+1.)

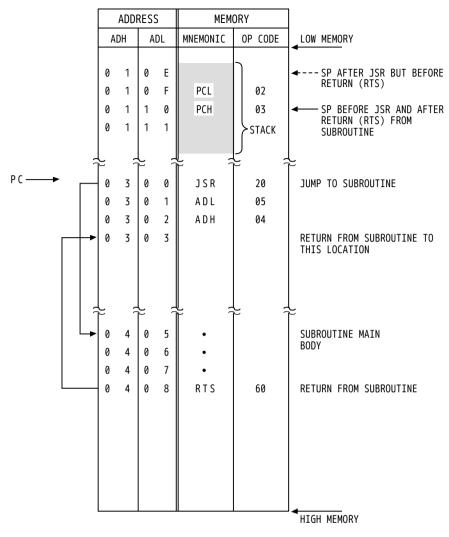

JSR, RTS OPERATION

(Reset after: MCS6502 Instruction Set Summary, MOS Technology, Inc.)

Curious Interrupt Behavior

• If the instruction was a taken branch instruction with 3 cycles execution time (without crossing page boundaries), the interrupt will trigger only after an extra CPU cycle.

- On the NMOS6502, an NMI hardware interrupt occuring at the start of a BRK intruction will hijack the BRK instruction, meanining, the BRK instruction will be executed as normal, but the NMI vector will be used instead of the IRQ vector.
- The 65C02 will clear the decimal flag on any interrupts (and BRK).

The Break Flag and the Stack

Interrupts and stack operations involving the status register (or P register) are the only instances, the break flag appears (namely on the stack). It has no representation in the CPU and can't be accessed by any instruction.

- The break flag will be set to on (1), whenever the transfer was caused by software (BRK or PHP).
- The break flag will be set to zero (0), whenever the transfer was caused by a hardware interrupt.
- The break flag will be masked and cleared (0), whenever transferred from the stack to the status register, either by PLP or during a return from interrupt (RTI).

Therefore, it's somewhat difficult to inspect the break flag in order to discern a software interrupt (BRK) from a hardware interrupt (NMI or IRQ) and the mechanism is seldom used. Accessing a break mark put in the extra byte following a BRK instruction is even more cumbersome and probably involves indexed zeropage operations.

Bit 5 (unused) of the status register will be set to 1, whenever the register is pushed to the stack. Bits 5 and 4 will always be ignored, when transferred to the status register.

```
E.g.,

SR: N V - B D I Z C
0 0 - - 0 0 1 1

PHP -> 0 0 1 1 0 0 1 1 = $33

PLP <- 0 0 - - 0 0 1 1 = $03

but:

PLA <- 0 0 1 1 0 0 1 1 = $33
```

```
2)
```

```
LDA #$32 ;00110010

PHA -> 0 0 1 1 0 0 1 0 = $32

PLP <- 0 0 - 0 0 1 0 = $02

3)

LDA #$C0
PHA -> 1 1 0 0 0 0 0 0 = $C0
LDA #$08
PHA -> 0 0 0 1 0 0 0 0 = $08
LDA #$12
PHA -> 0 0 0 1 0 0 1 0 = $12

RTI

SR: 0 0 - 0 0 1 0 = $02
PC: $C008
```

Mind that most emulators are displaying the status register (SR or P) in the state as it would be currently pushed to the stack, with bits 4 and 5 on, adding a bias of \$30 to the register value. Here, we chose to rather omit this virtual presence of these bits, since there isn't really a slot for them in the hardware.

6502 Instruction Layout

The 6502 instruction table is laid out according to a pattern a-b-c, where a and b are an octal number each, followed by a group of two binary digits c, as in the bit-vector "aaabbbcc".



Example:

All ROR instructions share a=3 and c=2 (3b2) with the address mode in b. At the same time, all instructions addressing the zero-page share b=1 (a1c). $abc=312 \Rightarrow (3 << 5 \mid 1 << 2 \mid 2) = <math>011.001.10 = 66$ "ROR zpg".

Notably, there are no legal opcodes defined where c=3, accounting for the empty columns in the usual, hexadecimal view of the instruction table. (For compactness empty rows where c=3 are omitted from the tables below.)

The following table lists the instruction set, rows sorted by c_{i} , then a_{i} .

Generally, instructions of a kind are typically found in rows as a combination of a and c, and address modes are in columns b.

However, there are a few exception to this rule, namely, where bits 0 of both c and b are low (c = 0, 2; b = 0, 2, 4, 6) and combinations of c and b select a group of related operations. (E.g., c=0 \land b=4: branch, c=0 \land b=6: set flag)

С	а									b							
			0		1		2		3		4		5		6		7
	0	\$00	BRK impl			\$08	PHP impl			\$10	BPL rel			\$18	CLC impl		
	1	\$20	JSR abs	\$24	BIT zpg	\$28	PLP impl	\$2C	BIT abs	\$30	BMI rel			\$38	SEC impl		
	2	\$40	RTI impl			\$48	PHA impl	\$4C	JMP abs	\$50	BVC rel			\$58	CLI impl		
0	3	\$60	RTS impl			\$68	PLA impl	\$6C	JMP ind	\$70	BVS rel			\$78	SEI impl		
Ū	4			\$84	STY zpg	\$88	DEY impl	\$8C	STY abs	\$90	BCC rel	\$94	STY zpg,X	\$98	TYA impl		
	5	\$A0	LDY #	\$A4	LDY zpg	\$A8	TAY impl	\$AC	LDY abs	\$B0	BCS rel	\$B4	LDY zpg,X	\$B8	CLV impl	\$BC	LDY abs,X
	6	\$C0	CPY #	\$C4	CPY zpg	\$C8	INY impl	\$CC	CPY abs	\$D0	BNE rel			\$D8	CLD impl		
	7	\$E0	CPX #	\$E4	CPX zpg	\$E8	INX impl	\$EC	CPX abs	\$F0	BEQ rel			\$F8	SED impl		
	0	\$01	ORA X,ind	\$05	ORA zpg	\$09	ORA #	\$0D	ORA abs	\$11	ORA ind,Y	\$15	ORA zpg,X	\$19	ORA abs,Y	\$1D	ORA abs,X
	1	\$21	AND X,ind	\$25	AND zpg	\$29	AND #	\$2D	AND abs	\$31	AND ind,Y	\$35	AND zpg,X	\$39	AND abs,Y	\$3D	AND abs,X
	2	\$41	EOR X,ind	\$45	EOR zpg	\$49	EOR #	\$4D	EOR abs	\$51	EOR ind,Y	\$55	EOR zpg,X	\$59	EOR abs,Y	\$5D	EOR abs,X
	3	\$61	ADC X,ind	\$65	ADC zpg	\$69	ADC #	\$6D	ADC abs	\$71	ADC ind,Y	\$75	ADC zpg,X	\$79	ADC abs,Y	\$7D	ADC abs,X
1	4	\$81	STA X,ind	\$85	STA zpg			\$8D	STA abs	\$91	STA ind,Y	\$95	STA zpg,X	\$99	STA abs,Y	\$9D	STA abs,X
	5	\$A1	LDA X,ind	\$A5	LDA zpg	\$A9	LDA #	\$AD	LDA abs	\$B1	LDA ind,Y	\$B5	LDA zpg,X	\$B9	LDA abs,Y	\$BD	LDA abs,X
	6	\$C1	CMP X,ind	\$C5	CMP zpg	\$C9	CMP #	\$CD	CMP abs	\$D1	CMP ind,Y	\$D5	CMP zpg,X	\$D9	CMP abs,Y	\$DD	CMP abs,X
	7	\$E1	SBC X,ind	\$E5	SBC zpg	\$E9	SBC #	\$ED	SBC abs	\$F1	SBC ind,Y	\$F5	SBC zpg,X	\$F9	SBC abs,Y	\$FD	SBC abs,X
2	0			\$06	ASL zpg	\$0A	ASL A	\$0E	ASL abs			\$16	ASL zpg,X			\$1E	ASL abs,X
	1			\$26	ROL zpg	\$2A	ROL A	\$2E	ROL abs			\$36	ROL zpg,X			\$3E	ROL abs,X
	2			\$46	LSR zpg	\$4A	LSR A	\$4E	LSR abs			\$56	LSR zpg,X			\$5E	LSR abs,X
	3			\$66	ROR zpg	\$6A	ROR A	\$6E	ROR abs			\$76	ROR zpg,X			\$7E	ROR abs,X

c	а									b					
			0		1		2		3	4		5	6		7
	4			\$86	STX zpg	\$8A	TXA impl	\$8E	STX abs		\$96	STX zpg,Y \$	A TXS impl		
	5	\$A2	LDX #	\$A6	LDX zpg	\$AA	TAX impl	\$AE	LDX abs		\$B6	LDX zpg,Y \$	BA TSX impl	\$BE	LDX abs,Y
	6			\$C6	DEC zpg	\$CA	DEX impl	\$CE	DEC abs		\$D6	DEC zpg,X		\$DE	DEC abs,X
	7			\$E6	INC zpg	\$EA	NOP impl	\$EE	INC abs		\$F6	INC zpg,X		\$FE	INC abs,X

Note: The operand of instructions like "ASL A" is often depicted as implied, as well. Mind that, for any practical reasons, the two notations are interchangeable for any instructions involving the accumulator. — However, there are subtle differences.

A rotated view, rows as combinations of c and b, and columns as a:

С	b									а							
			0		1		2		3		4		5		6		7
	0	\$00	BRK impl	\$20	JSR abs	\$40	RTI impl	\$60	RTS impl			\$A0	LDY #	\$C0	CPY #	\$E0	CPX #
	1			\$24	BIT zpg					\$84	STY zpg	\$A4	LDY zpg	\$C4	CPY zpg	\$E4	CPX zpg
	2	\$08	PHP impl	\$28	PLP impl	\$48	PHA impl	\$68	PLA impl	\$88	DEY impl	\$A8	TAY impl	\$C8	INY impl	\$E8	INX impl
0	3			\$2C	BIT abs	\$4C	JMP abs	\$6C	JMP ind	\$8C	STY abs	\$AC	LDY abs	\$CC	CPY abs	\$EC	CPX abs
	4	\$10	BPL rel	\$30	BMI rel	\$50	BVC rel	\$70	BVS rel	\$90	BCC rel	\$B0	BCS rel	\$D0	BNE rel	\$F0	BEQ rel
	5									\$94	STY zpg,X	\$B4	LDY zpg,X				
	6	\$18	CLC impl	\$38	SEC impl	\$58	CLI impl	\$78	SEI impl	\$98	TYA impl	\$B8	CLV impl	\$D8	CLD impl	\$F8	SED impl
	7											\$BC	LDY abs,X				
1	0	\$01	ORA X,ind	\$21	AND X,ind	\$41	EOR X,ind	\$61	ADC X,ind	\$81	STA X, ind	\$A1	LDA X,ind	\$C1	CMP X,ind	\$E1	SBC X,ind
	1	\$05	ORA zpg	\$25	AND zpg	\$45	EOR zpg	\$65	ADC zpg	\$85	STA zpg	\$A5	LDA zpg	\$C5	CMP zpg	\$E5	SBC zpg
	2	\$09	ORA #	\$29	AND #	\$49	EOR #	\$69	ADC #			\$A9	LDA #	\$C9	CMP #	\$E9	SBC #
	3	\$0D	ORA abs	\$2D	AND abs	\$4D	EOR abs	\$6D	ADC abs	\$8D	STA abs	\$AD	LDA abs	\$CD	CMP abs	\$ED	SBC abs
	4	\$11	ORA ind,Y	\$31	AND ind,Y	\$51	EOR ind,Y	\$71	ADC ind,Y	\$91	STA ind,Y	\$B1	LDA ind,Y	\$D1	CMP ind,Y	\$F1	SBC ind,Y
	5	\$15	ORA zpg,X	\$35	AND zpg,X	\$55	EOR zpg,X	\$75	ADC zpg,X	\$95	STA zpg,X	\$B5	LDA zpg,X	\$D5	CMP zpg,X	\$F5	SBC zpg,X
	6	\$19	ORA abs,Y	\$39	AND abs,Y	\$59	EOR abs,Y	\$79	ADC abs,Y	\$99	STA abs,Y	\$B9	LDA abs,Y	\$D9	CMP abs,Y	\$F9	SBC abs,Y
	5	\$15	ORA zpg,X	\$35	AND zpg,X	\$55	EOR zpg,X	\$75	ADC zpg,X	\$95	STA zpg,X	\$B5	LDA zpg,X	\$D5	CMP zpg,X	\$F5	SBC zpg,X

C	b								ė	а							
			0		1		2		3		4		5		6		7
	7	\$1D	ORA abs,X	\$3D	AND abs,X	\$5D	EOR abs,X	\$7D	ADC abs,X	\$9D	STA abs,X	\$BD	LDA abs,X	\$DD	CMP abs,X	\$FD	SBC abs,X
	0											\$A2	LDX #				
	1	\$06	ASL zpg	\$26	ROL zpg	\$46	LSR zpg	\$66	ROR zpg	\$86	STX zpg	\$A6	LDX zpg	\$C6	DEC zpg	\$E6	INC zpg
	2	\$0A	ASL A	\$2A	ROL A	\$4A	LSR A	\$6A	ROR A	\$8A	TXA impl	\$AA	TAX impl	\$CA	DEX impl	\$EA	NOP impl
2	3	\$0E	ASL abs	\$2E	ROL abs	\$4E	LSR abs	\$6E	ROR abs	\$8E	STX abs	\$AE	LDX abs	\$CE	DEC abs	\$EE	INC abs
-	4																
	5	\$16	ASL zpg,X	\$36	ROL zpg,X	\$56	LSR zpg,X	\$76	ROR zpg,X	\$96	STX zpg,Y	\$B6	LDX zpg,Y	\$D6	DEC zpg,X	\$F6	INC zpg,X
	6									\$9A	TXS impl	\$BA	TSX impl				
	7	\$1E	ASL abs,X	\$3E	ROL abs,X	\$5E	LSR abs,X	\$7E	ROR abs,X			\$BE	LDX abs,Y	\$DE	DEC abs,X	\$FE	INC abs,X

Finally, a more complex view, the instruction set listed by rows as combinations of a and c, and b in columns:

Address modes are either a property of b (even columns) or combinations of b and c (odd columns with aspecific row-index modulus 3; i.e., every third row in a given column). In those latter columns, first and third rows (c = 0 and c = 2) refer to the same kind of general operation.

Load, store and transfer instructions as well as comparisons are typically found in the lower half of the table, while most of the arithmetical and logical operations as well as stack and jump instructions are found in the upper half. (However, mind the exception of SBC as a "mirror" of ADC.)

а	С								1	b							
			0		1		2		3		4		5		6		7
	0	\$00	BRK impl			\$08	PHP impl			\$10	BPL rel			\$18	CLC impl		
0	1	\$01	ORA X,ind	\$05	ORA zpg	\$09	ORA #	\$0D	ORA abs	\$11	ORA ind,Y	\$15	ORA zpg,X	\$19	ORA abs,Y	\$1D	ORA abs,X
	2			\$06	ASL zpg	\$0A	ASL A	\$0E	ASL abs			\$16	ASL zpg,X			\$1E	ASL abs,X
1	0	\$20	JSR abs	\$24	BIT zpg	\$28	PLP impl	\$2C	BIT abs	\$30	BMI rel			\$38	SEC impl		
	1	\$21	AND X,ind	\$25	AND zpg	\$29	AND #	\$2D	AND abs	\$31	AND ind,Y	\$35	AND zpg,X	\$39	AND abs,Y	\$3D	AND abs,X

а	C									b							
			0		1		2		3		4		5		6		7
	2			\$26	ROL zpg	\$2A	ROL A	\$2E	ROL abs			\$36	ROL zpg,X			\$3E	ROL abs,X
	0	\$40	RTI impl			\$48	PHA impl	\$4C	JMP abs	\$50	BVC rel			\$58	CLI impl		
2	1	\$41	EOR X,ind	\$45	EOR zpg	\$49	EOR #	\$4D	EOR abs	\$51	EOR ind,Y	\$55	EOR zpg,X	\$59	EOR abs,Y	\$5D	EOR abs,X
	2			\$46	LSR zpg	\$4A	LSR A	\$4E	LSR abs			\$56	LSR zpg,X			\$5E	LSR abs,X
	0	\$60	RTS impl			\$68	PLA impl	\$6C	JMP ind	\$70	BVS rel			\$78	SEI impl		
3	1	\$61	ADC X,ind	\$65	ADC zpg	\$69	ADC #	\$6D	ADC abs	\$71	ADC ind,Y	\$75	ADC zpg,X	\$79	ADC abs,Y	\$7D	ADC abs,X
	2			\$66	ROR zpg	\$6A	ROR A	\$6E	ROR abs			\$76	ROR zpg,X			\$7E	ROR abs,X
	0			\$84	STY zpg	\$88	DEY impl	\$8C	STY abs	\$90	BCC rel	\$94	STY zpg,X	\$98	TYA impl		
4	1	\$81	STA X, ind	\$85	STA zpg			\$8D	STA abs	\$91	STA ind,Y	\$95	STA zpg,X	\$99	STA abs,Y	\$9D	STA abs,X
	2			\$86	STX zpg	\$8A	TXA impl	\$8E	STX abs			\$96	STX zpg,Y	\$9A	TXS impl		
	0	\$A0	LDY #	\$A4	LDY zpg	\$A8	TAY impl	\$AC	LDY abs	\$B0	BCS rel	\$B4	LDY zpg,X	\$B8	CLV impl	\$BC	LDY abs,X
5	1	\$A1	LDA X,ind	\$A5	LDA zpg	\$A9	LDA #	\$AD	LDA abs	\$B1	LDA ind,Y	\$B5	LDA zpg,X	\$B9	LDA abs,Y	\$BD	LDA abs,X
	2	\$A2	LDX #	\$A6	LDX zpg	\$AA	TAX impl	\$AE	LDX abs			\$B6	LDX zpg,Y	\$BA	TSX impl	\$BE	LDX abs,Y
	0	\$C0	CPY #	\$C4	CPY zpg	\$C8	INY impl	\$CC	CPY abs	\$D0	BNE rel			\$D8	CLD impl		
6	1	\$C1	CMP X,ind	\$C5	CMP zpg	\$C9	CMP #	\$CD	CMP abs	\$D1	CMP ind,Y	\$D5	CMP zpg,X	\$D9	CMP abs,Y	\$DD	CMP abs,X
	2			\$C6	DEC zpg	\$CA	DEX impl	\$CE	DEC abs			\$D6	DEC zpg,X			\$DE	DEC abs,X
	0	\$E0	CPX #	\$E4	CPX zpg	\$E8	INX impl	\$EC	CPX abs	\$F0	BEQ rel			\$F8	SED impl		
7	1	\$E1	SBC X,ind	\$E5	SBC zpg	\$E9	SBC #	\$ED	SBC abs	\$F1	SBC ind,Y	\$F5	SBC zpg,X	\$F9	SBC abs,Y	\$FD	SBC abs,X
	2			\$E6	INC zpg	\$EA	NOP impl	\$EE	INC abs			\$F6	INC zpg,X			\$FE	INC abs,X

"Illegal" Opcodes Revisited

So, how do the "illegal" opcodes fit into this decoding scheme? Let's have a look — "illegals" are shown on grey background.

The first view - rows by c and a and columns as b - reveals a strict relation beetween address modes and columns:

	a									b							
C	а		0		1		2		3	D	4		5		6		7
	0	\$00	BRK impl	\$04	NOP zpg	\$08	PHP impl	\$0C	NOP abs	\$10	BPL rel	\$14	NOP zpg,X	\$18	CLC impl	\$1C	NOP abs,X
	1	\$20	JSR abs	\$24	BIT zpg	\$28	PLP impl	\$2C	BIT abs	\$30	BMI rel	\$34	NOP zpg,X	\$38	SEC impl	\$3C	NOP abs,X
	2	\$40	RTI impl	\$44	NOP zpg	\$48	PHA impl	\$4C	JMP abs	\$50	BVC rel	\$54	NOP zpg,X	\$58	CLI impl	\$5C	NOP abs,X
•	3	\$60	RTS impl	\$64	NOP zpg	\$68	PLA impl	\$6C	JMP ind	\$70	BVS rel	\$74	NOP zpg,X	\$78	SEI impl	\$7C	NOP abs,X
0	4	\$80	NOP #	\$84	STY zpg	\$88	DEY impl	\$8C	STY abs	\$90	BCC rel	\$94	STY zpg,X	\$98	TYA impl	\$9C	SHY abs,X
	5	\$A0	LDY #	\$A4	LDY zpg	\$A8	TAY impl	\$AC	LDY abs	\$B0	BCS rel	\$B4	LDY zpg,X	\$B8	CLV impl	\$BC	LDY abs,X
	6	\$C0	CPY #	\$C4	CPY zpg	\$C8	INY impl	\$CC	CPY abs	\$D0	BNE rel	\$D4	NOP zpg,X	\$D8	CLD impl	\$DC	NOP abs,X
	7	\$E0	CPX #	\$E4	CPX zpg	\$E8	INX impl	\$EC	CPX abs	\$F0	BEQ rel	\$F4	NOP zpg,X	\$F8	SED impl	\$FC	NOP abs,X
	0	\$01	ORA X,ind	\$05	ORA zpg	\$09	ORA #	\$0D	ORA abs	\$11	ORA ind,Y	\$15	ORA zpg,X	\$19	ORA abs,Y	\$1D	ORA abs,X
	1	\$21	AND X,ind	\$25	AND zpg	\$29	AND #	\$2D	AND abs	\$31	AND ind,Y	\$35	AND zpg,X	\$39	AND abs,Y	\$3D	AND abs,X
	2	\$41	EOR X,ind	\$45	EOR zpg	\$49	EOR #	\$4D	EOR abs	\$51	EOR ind,Y	\$55	EOR zpg,X	\$59	EOR abs,Y	\$5D	EOR abs,X
1	3	\$61	ADC X,ind	\$65	ADC zpg	\$69	ADC #	\$6D	ADC abs	\$71	ADC ind,Y	\$75	ADC zpg,X	\$79	ADC abs,Y	\$7D	ADC abs,X
-	4	\$81	STA X,ind	\$85	STA zpg	\$89	NOP #	\$8D	STA abs	\$91	STA ind,Y	\$95	STA zpg,X	\$99	STA abs,Y	\$9D	STA abs,X
	5	\$A1	LDA X,ind	\$A5	LDA zpg	\$A9	LDA #	\$AD	LDA abs	\$B1	LDA ind,Y	\$B5	LDA zpg,X	\$B9	LDA abs,Y	\$BD	LDA abs,X
	6	\$C1	CMP X,ind	\$C5	CMP zpg	\$C9	CMP #	\$CD	CMP abs	\$D1	CMP ind,Y	\$D5	CMP zpg,X	\$D9	CMP abs,Y	\$DD	CMP abs,X
	7	\$E1	SBC X,ind	\$E5	SBC zpg	\$E9	SBC #	\$ED	SBC abs	\$F1	SBC ind,Y	\$F5	SBC zpg,X	\$F9	SBC abs,Y	\$FD	SBC abs,X
	0	\$02	JAM	\$06	ASL zpg	\$0A	ASL A	\$0E	ASL abs	\$12	JAM	\$16	ASL zpg,X	\$1A	NOP impl	\$1E	ASL abs,X
	1	\$22	JAM	\$26	ROL zpg	\$2A	ROL A	\$2E	ROL abs	\$32	JAM	\$36	ROL zpg,X	\$3A	NOP impl	\$3E	ROL abs,X
	2	\$42	JAM	\$46	LSR zpg	\$4A	LSR A	\$4E	LSR abs	\$52	JAM	\$56	LSR zpg,X	\$5A	NOP impl	\$5E	LSR abs,X
2	3	\$62	JAM	\$66	ROR zpg	\$6A	ROR A	\$6E	ROR abs	\$72	JAM	\$76	ROR zpg,X	\$7A	NOP impl	\$7E	ROR abs,X
2	4	\$82	NOP #	\$86	STX zpg	\$8A	TXA impl	\$8E	STX abs	\$92	JAM	\$96	STX zpg,Y	\$9A	TXS impl	\$9E	SHX abs,Y
	5	\$A2	LDX #	\$A6	LDX zpg	\$AA	TAX impl	\$AE	LDX abs	\$B2	JAM	\$B6	LDX zpg,Y	\$BA	TSX impl	\$BE	LDX abs,Y
	6	\$C2	NOP #	\$C6	DEC zpg	\$CA	DEX impl	\$CE	DEC abs	\$D2	JAM	\$D6	DEC zpg,X	\$DA	NOP impl	\$DE	DEC abs,X
	7	\$E2	NOP #	\$E6	INC zpg	\$EA	NOP impl	\$EE	INC abs	\$F2	JAM	\$F6	INC zpg,X	\$FA	NOP impl	\$FE	INC abs,X
3	0	\$03	SLO X,ind	\$07	SLO zpg	\$0B	ANC #	\$0F	SLO abs	\$13	SLO ind,Y	\$17	SLO zpg,X	\$1B	SLO abs,Y	\$1F	SLO abs,X

C	a								1	b							
			0		1		2		3		4		5		6		7
	1	\$23	RLA X,ind	\$27	RLA zpg	\$2B	ANC #	\$2F	RLA abs	\$33	RLA ind,Y	\$37	RLA zpg,X	\$3B	RLA abs,Y	\$3F	RLA abs,X
	2	\$43	SRE X, ind	\$47	SRE zpg	\$4B	ALR #	\$4F	SRE abs	\$53	SRE ind,Y	\$57	SRE zpg,X	\$5B	SRE abs,Y	\$5F	SRE abs,X
	3	\$63	RRA X,ind	\$67	RRA zpg	\$6B	ARR #	\$6F	RRA abs	\$73	RRA ind,Y	\$77	RRA zpg,X	\$7B	RRA abs,Y	\$7F	RRA abs,X
	4	\$83	SAX X,ind	\$87	SAX zpg	\$8B	ANE #	\$8F	SAX abs	\$93	SHA ind,Y	\$97	SAX zpg,Y	\$9В	TAS abs,Y	\$9F	SHA abs,Y
	5	\$A3	LAX X,ind	\$A7	LAX zpg	\$AB	LXA #	\$AF	LAX abs	\$B3	LAX ind,Y	\$B7	LAX zpg,Y	\$BB	LAS abs,Y	\$BF	LAX abs,Y
	6	\$C3	DCP X,ind	\$C7	DCP zpg	\$CB	SBX #	\$CF	DCP abs	\$D3	DCP ind,Y	\$D7	DCP zpg,X	\$DB	DCP abs,Y	\$DF	DCP abs,X
	7	\$E3	ISC X,ind	\$E7	ISC zpg	\$EB	USBC #	\$EF	ISC abs	\$F3	ISC ind,Y	\$F7	ISC zpg,X	\$FB	ISC abs,Y	\$FF	ISC abs,X

And, again, as a rotated view, rows as combinations of c and b, and columns as a. We may observe a close relationship between the legal and the undocumented instructions in the vertical (quarter-)segements of each column.

c b)						á	3						
		0	1		2		3		4		5	6		7
0	\$0	0 BRK impl	\$20 JSR a	abs \$40	RTI impl	\$60	RTS impl	\$80	NOP #	\$A0	LDY #	\$C0 CPY #	\$E0	CPX #
1	. \$0	4 NOP zpg	\$24 BIT 2	zpg \$44	NOP zpg	\$64	NOP zpg	\$84	STY zpg	\$A4	LDY zpg	\$C4 CPY zpg	\$E4	CPX zpg
2	\$0	8 PHP impl	\$28 PLP i	impl \$48	PHA impl	\$68	PLA impl	\$88	DEY impl	\$A8	TAY impl	\$C8 INY impl	\$E8	INX impl
0	\$0	C NOP abs	\$2C BIT a	abs \$4C	JMP abs	\$6C	JMP ind	\$8C	STY abs	\$AC	LDY abs	\$CC CPY abs	\$EC	CPX abs
4	\$1	0 BPL rel	\$30 BMI 1	rel \$50	BVC rel	\$70	BVS rel	\$90	BCC rel	\$B0	BCS rel	\$DO BNE rel	\$F0	BEQ rel
5	\$1	4 NOP zpg,	\$34 NOP 2	zpg,X \$54	NOP zpg,X	\$74	NOP zpg,X	\$94	STY zpg,X	\$B4	LDY zpg,X	\$D4 NOP zpg,X	\$F4	NOP zpg,X
6	\$1	8 CLC impl	\$38 SEC i	impl \$58	CLI impl	\$78	SEI impl	\$98	TYA impl	\$B8	CLV impl	\$D8 CLD impl	\$F8	SED impl
7	\$1	C NOP abs,	\$3C NOP a	abs,X \$5C	NOP abs,X	\$7C	NOP abs,X	\$9C	SHY abs,X	\$BC	LDY abs,X	\$DC NOP abs,X	\$FC	NOP abs,X
1 0	\$0	1 ORA X,inc	\$21 AND X	X,ind \$41	EOR X,ind	\$61	ADC X,ind	\$81	STA X, ind	\$A1	LDA X,ind	\$C1 CMP X,ind	\$E1	SBC X,ind
1	. \$0	5 ORA zpg	\$25 AND 2	zpg \$45	EOR zpg	\$65	ADC zpg	\$85	STA zpg	\$A5	LDA zpg	\$C5 CMP zpg	\$E5	SBC zpg
2	\$0	9 ORA #	\$29 AND #	# \$49	EOR #	\$69	ADC #	\$89	NOP #	\$A9	LDA #	\$C9 CMP #	\$E9	SBC #
3	\$0	D ORA abs	\$2D AND a	abs \$4D	EOR abs	\$6D	ADC abs	\$8D	STA abs	\$AD	LDA abs	\$CD CMP abs	\$ED	SBC abs
4	\$1	1 ORA ind,	\$31 AND i	ind,Y \$51	EOR ind,Y	\$71	ADC ind,Y	\$91	STA ind,Y	\$B1	LDA ind,Y	\$D1 CMP ind,Y	\$F1	SBC ind,Y

С	b								•	а							
			0		1		2		3		4		5		6		7
	5	\$15	ORA zpg,X	\$35	AND zpg,X	\$55	EOR zpg,X	\$75	ADC zpg,X	\$95	STA zpg,X	\$B5	LDA zpg,X	\$D5 CM	IP zpg,X	\$F5	SBC zpg,X
	6	\$19	ORA abs,Y	\$39	AND abs,Y	\$59	EOR abs,Y	\$79	ADC abs,Y	\$99	STA abs,Y	\$B9	LDA abs,Y	\$D9 CM	IP abs,Y	\$F9	SBC abs,Y
	7	\$1D	ORA abs,X	\$3D	AND abs,X	\$5D	EOR abs,X	\$7D	ADC abs,X	\$9D	STA abs,X	\$BD	LDA abs,X	\$DD C	IP abs,X	\$FD	SBC abs,X
	0	\$02	JAM	\$22	JAM	\$42	JAM	\$62	JAM	\$82	NOP #	\$A2	LDX #	\$C2 NO	P #	\$E2	NOP #
	1	\$06	ASL zpg	\$26	ROL zpg	\$46	LSR zpg	\$66	ROR zpg	\$86	STX zpg	\$A6	LDX zpg	\$C6 DI	C zpg	\$E6	INC zpg
	2	\$0A	ASL A	\$2A	ROL A	\$4A	LSR A	\$6A	ROR A	\$8A	TXA impl	\$AA	TAX impl	\$CA DI	X impl	\$EA	NOP impl
2	3	\$0E	ASL abs	\$2E	ROL abs	\$4E	LSR abs	\$6E	ROR abs	\$8E	STX abs	\$AE	LDX abs	\$CE DI	C abs	\$EE	INC abs
2	4	\$12	JAM	\$32	JAM	\$52	JAM	\$72	JAM	\$92	JAM	\$B2	JAM	\$D2 J	M	\$F2	JAM
	5	\$16	ASL zpg,X	\$36	ROL zpg,X	\$56	LSR zpg,X	\$76	ROR zpg,X	\$96	STX zpg,Y	\$B6	LDX zpg,Y	\$D6 DI	C zpg,X	\$F6	INC zpg,X
	6	\$1A	NOP impl	\$3A	NOP impl	\$5A	NOP impl	\$7A	NOP impl	\$9A	TXS impl	\$BA	TSX impl	\$DA NO	P impl	\$FA	NOP impl
	7	\$1E	ASL abs,X	\$3E	ROL abs,X	\$5E	LSR abs,X	\$7E	ROR abs,X	\$9E	SHX abs,Y	\$BE	LDX abs,Y	\$DE DI	C abs,X	\$FE	INC abs,X
	0	\$03	SLO X,ind	\$23	RLA X,ind	\$43	SRE X,ind	\$63	RRA X,ind	\$83	SAX X,ind	\$A3	LAX X,ind	\$C3 D0	P X,ind	\$E3	ISC X,ind
	1	\$07	SLO zpg	\$27	RLA zpg	\$47	SRE zpg	\$67	RRA zpg	\$87	SAX zpg	\$A7	LAX zpg	\$C7 D0	P zpg	\$E7	ISC zpg
	2	\$0B	ANC #	\$2B	ANC #	\$4B	ALR #	\$6B	ARR #	\$8B	ANE #	\$AB	LXA #	\$CB SI	3X #	\$EB	USBC #
	3	\$0F	SLO abs	\$2F	RLA abs	\$4F	SRE abs	\$6F	RRA abs	\$8F	SAX abs	\$AF	LAX abs	\$CF DO	P abs	\$EF	ISC abs
3	4	\$13	SLO ind,Y	\$33	RLA ind,Y	\$53	SRE ind,Y	\$73	RRA ind,Y	\$93	SHA ind,Y	\$B3	LAX ind,Y	\$D3 D0	P ind,Y	\$F3	ISC ind,Y
	5	\$17	SLO zpg,X	\$37	RLA zpg,X	\$57	SRE zpg,X	\$77	RRA zpg,X	\$97	SAX zpg,Y	\$B7	LAX zpg,Y	\$D7 D0	P zpg,X	\$F7	ISC zpg,X
	6	\$1B	SLO abs,Y	\$3B	RLA abs,Y	\$5B	SRE abs,Y	\$7B	RRA abs,Y	\$9B	TAS abs,Y	\$BB	LAS abs,Y	\$DB DO	P abs,Y	\$FB	ISC abs,Y
	7	\$1F	SLO abs,X	\$3F	RLA abs,X	\$5F	SRE abs,X	\$7F	RRA abs,X	\$9F	SHA abs,Y	\$BF	LAX abs,Y	\$DF DO	P abs,X	\$FF	ISC abs,X

And, finally, in a third view, we may observe how each of the rows of "illegal" instructions at c=3 inherits behavior from the two rows with c=1 and c=2 immediately above, combining the operations of these instructions with the address mode of the respective instruction at c=1. (Mind that in binary 3 is the combination of 2 and 1, bits 0 and 1 both set.)

We may further observe that additional NOPs result from non-effective or non-sensical combinations of operations and address modes, e.g., instr. \$89, which would be "STA #", storing the contents of the accumulator in the operand.

Some other instructions, typically combinations involving indirect indexed addressing, fail over unresolved timing issues entirely, resulting in a "JAM".

(We me also observe that there is indeed a difference in accumulator mode — as in "OPC A" — and immediate addressing. E.g., \$6A, "ROR A", is a valid instruction, while instruction \$7A, "ROR implied", is a NOP.

We may also note how "ROR X,ind" at \$62 and "ROR ind,Y" at \$72 fail entirely and result in a JAM.)

а	С		0		1		2		3	b	4		5		6		7
	0	\$00	BRK impl	\$04	NOP zpg	\$08		\$0C	NOP abs	\$10	BPL rel	\$14	NOP zpg,X	\$18	CLC impl	\$1C	NOP abs,
	1	\$01	_				ORA #	\$0D							ORA abs,Y		ORA abs,
0			·														•
	2	\$02	JAM		ASL zpg	\$0A	ASL A	\$0E	ASL abs	\$12	JAM	\$16	ASL zpg,X	\$1A	NOP impl	\$1E	ASL abs,
	3	\$03	SLO X,ind	\$07	SLO zpg	\$0B	ANC #	\$0F	SLO abs	\$13	SLO ind,Y	\$17	SLO zpg,X	\$1B	SLO abs,Y	\$1F	SLO abs,
	0	\$20	JSR abs	\$24	BIT zpg	\$28	PLP impl	\$2C	BIT abs	\$30	BMI rel	\$34	NOP zpg,X	\$38	SEC impl	\$3C	NOP abs,X
1	1	\$21	AND X,ind	\$25	AND zpg	\$29	AND #	\$2D	AND abs	\$31	AND ind,Y	\$35	AND zpg,X	\$39	AND abs,Y	\$3D	AND abs,
•	2	\$22	JAM	\$26	ROL zpg	\$2A	ROL A	\$2E	ROL abs	\$32	JAM	\$36	ROL zpg,X	\$3A	NOP impl	\$3E	ROL abs,
	3	\$23	RLA X,ind	\$27	RLA zpg	\$2B	ANC #	\$2F	RLA abs	\$33	RLA ind,Y	\$37	RLA zpg,X	\$3B	RLA abs,Y	\$3F	RLA abs,
	0	\$40	RTI impl	\$44	NOP zpg	\$48	PHA impl	\$4C	JMP abs	\$50	BVC rel	\$54	NOP zpg,X	\$58	CLI impl	\$5C	NOP abs,
	1	\$41	EOR X,ind	\$45	EOR zpg	\$49	EOR #	\$4D	EOR abs	\$51	EOR ind,Y	\$55	EOR zpg,X	\$59	EOR abs,Y	\$5D	EOR abs,
2	2	\$42	JAM	\$46	LSR zpg	\$4A	LSR A	\$4E	LSR abs	\$52	JAM	\$56	LSR zpg,X	\$5A	NOP impl	\$5E	LSR abs,
	3	\$43	SRE X,ind	\$47	SRE zpg	\$4B	ALR #	\$4F	SRE abs	\$53	SRE ind,Y	\$57	SRE zpg,X	\$5B	SRE abs,Y	\$5F	SRE abs,
	0	\$60	RTS impl	\$64	NOP zpg	\$68	PLA impl	\$6C	JMP ind	\$70	BVS rel	\$74	NOP zpg,X	\$78	SEI impl	\$7C	NOP abs,
	1	\$61	ADC X,ind	\$65	ADC zpg	\$69	ADC #	\$6D	ADC abs	\$71	ADC ind,Y	\$75	ADC zpg,X	\$79	ADC abs,Y	\$7D	ADC abs,
3	2	\$62	JAM	\$66	ROR zpg	\$6A	ROR A	\$6E	ROR abs	\$72	JAM	\$76	ROR zpg,X	\$7A	NOP impl	\$7E	ROR abs,
	3	\$63					ARR #		RRA abs	\$73					RRA abs,Y		·
4	0	\$80	NOP #		STY zpg	\$88	DEY impl	\$8C	STY abs	\$90	BCC rel		STY zpg,X		TYA impl		SHY abs,
	1	\$81	STA X, ind	\$85	STA zpg	\$89	NOP #	\$8D	STA abs	\$91	STA ind,Y	\$95	STA zpg,X	\$99	STA abs,Y	\$9D	STA abs,
	2	\$82	NOP #	\$86	STX zpg	\$8A	TXA impl	\$8E	STX abs	\$92	JAM	\$96	STX zpg,Y	\$9A	TXS impl	\$9E	SHX abs,

а	c									b							
			0		1		2		3		4		5		6		7
	3	\$83	SAX X,ind	\$87	SAX zpg	\$8B	ANE #	\$8F	SAX abs	\$93	SHA ind,Y	\$97	SAX zpg,Y	\$9B	TAS abs,Y	\$9F	SHA abs,Y
	0	\$A0	LDY #	\$A4	LDY zpg	\$A8	TAY impl	\$AC	LDY abs	\$B0	BCS rel	\$B4	LDY zpg,X	\$B8	CLV impl	\$BC	LDY abs,X
-	1	\$A1	LDA X,ind	\$A5	LDA zpg	\$A9	LDA #	\$AD	LDA abs	\$B1	LDA ind,Y	\$B5	LDA zpg,X	\$B9	LDA abs,Y	\$BD	LDA abs,X
5	2	\$A2	LDX #	\$A6	LDX zpg	\$AA	TAX impl	\$AE	LDX abs	\$B2	JAM	\$B6	LDX zpg,Y	\$BA	TSX impl	\$BE	LDX abs,Y
	3	\$A3	LAX X,ind	\$A7	LAX zpg	\$AB	LXA #	\$AF	LAX abs	\$B3	LAX ind,Y	\$В7	LAX zpg,Y	\$BB	LAS abs,Y	\$BF	LAX abs,Y
	0	\$C0	CPY #	\$C4	CPY zpg	\$C8	INY impl	\$CC	CPY abs	\$D0	BNE rel	\$D4	NOP zpg,X	\$D8	CLD impl	\$DC	NOP abs,X
6	1	\$C1	CMP X,ind	\$C5	CMP zpg	\$C9	CMP #	\$CD	CMP abs	\$D1	CMP ind,Y	\$D5	CMP zpg,X	\$D9	CMP abs,Y	\$DD	CMP abs,X
6	2	\$C2	NOP #	\$C6	DEC zpg	\$CA	DEX impl	\$CE	DEC abs	\$D2	JAM	\$D6	DEC zpg,X	\$DA	NOP impl	\$DE	DEC abs,X
	3	\$C3	DCP X,ind	\$C7	DCP zpg	\$CB	SBX #	\$CF	DCP abs	\$D3	DCP ind,Y	\$D7	DCP zpg,X	\$DB	DCP abs,Y	\$DF	DCP abs,X
	0	\$E0	CPX #	\$E4	CPX zpg	\$E8	INX impl	\$EC	CPX abs	\$F0	BEQ rel	\$F4	NOP zpg,X	\$F8	SED impl	\$FC	NOP abs,X
-	1	\$E1	SBC X,ind	\$E5	SBC zpg	\$E9	SBC #	\$ED	SBC abs	\$F1	SBC ind,Y	\$F5	SBC zpg,X	\$F9	SBC abs,Y	\$FD	SBC abs,X
7	2	\$E2	NOP #	\$E6	INC zpg	\$EA	NOP impl	\$EE	INC abs	\$F2	JAM	\$F6	INC zpg,X	\$FA	NOP impl	\$FE	INC abs,X
	3	\$E3	ISC X,ind	\$E7	ISC zpg	\$EB	USBC #	\$EF	ISC abs	\$F3	ISC ind,Y	\$F7	ISC zpg,X	\$FB	ISC abs,Y	\$FF	ISC abs,X

As a final observation, the two highly unstable instructions "ANE" (XAA) and "LXA" (LAX immediate) involving a "magic constant" are both combinations of an accumulator operation and an inter-register transfer between the accumulator and the X register:

```
$8B (a=5, c=3, b=2): ANE # = STA # (NOP) + TXA
(A OR CONST) AND X AND oper -> A

$AB (a=4, c=3, b=2): LXA # = LDA # + TAX
(A OR CONST) AND oper -> A -> X
```

In the case of ANE, the contents of the accumulator is put on the internal data lines at the same time as the contents of the X-register, while there's also the operand read for the immediate operation, with the result transferred to the accumulator.

In the case of LXA, the immediate operand and the contents of the accumulator are competing for the imput lines, while the result will be transferred to both the accumulator and the X register.

The outcome of these competing, noisy conditions depends on the production series of the chip, and maybe even on environmental conditions. This effects in an OR-ing of the accumulator with the "magic constant" combined with an AND-ing of the competing inputs. The final transfer to the target register(s) then seems to work as may be expected.

(This AND-ing of competing values susggests that the 6502 is working internally in active negative logic, where all data lines are first set to high and then cleared for any zero bits. This also suggests that the "magic constant" stands merely for a partial transfer of the contents of the accumulator.)

Much of this also applies to "TAS" (XAS, SHS), \$9B, but here the extra cycles for indexed addressing seem to contribute to the conflict being resolved without this "magic constant". However, TAS is still unstable.

Simlarly the peculiar group involving the high-byte of the provided address $+\ 1$ (as in "H+1") $-\ SHA$ (AHX, AXA), SHX (A11, SXA, XAS), SHY (A11, SYA, SAY) $-\$ involves a conflict of an attempt to store the accumulator and another register being put on the data lines at the same time, and the operations required to determine the target address for for indexed addressing. Again, the competing values are AND-ed and the instructions are unstable.


We may also observe that SHY is really the unimplemented instruction "STY abs,X" and SHX is "STX abs,Y" with SHA being the combination of "LDA abs,X" and SHX.

We may conclude that these "illegal opcodes" or "undocumented instructions" are really a text-book example of undefined behavior for undefined input patterns. Generally speaking, for any instructions xxxxxxx11 (c=3) both instructions at xxxxxxx01 (c=1) and xxxxxxx10 (c=2) are started in a thread, with competing ouput values on the internal data lines AND-ed. For some combinations, this results in a fragile race condition, while others are showing mostly stable behavior. The addressing mode is generally determined by that of the instruction at c=1.

(It may be interesting that is doesn't matter, if any of the two threads jams, as long as the timing for the other thread resolves. So there is no "JAM" instruction at c=3.)

Pinout

• 6502 (NMOS)

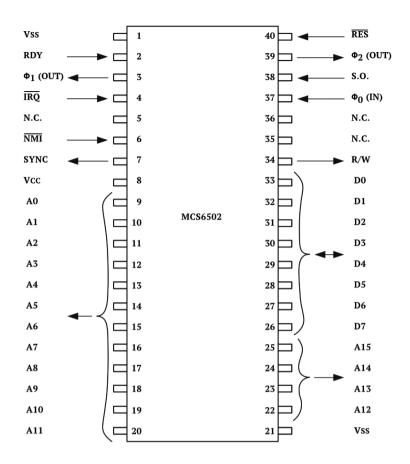


Vcc	supply voltage (+5 V DC ± 5%, +7 V max.)
Vss	logical ground
Φ ₀ ₂	clock
A0 ··· A15	address bus
D0 ··· D7	data bus
R/W	read/write
RDY	ready
S.O.	set overflow (future I/O interface)
SYNC	sync (goes high on opcode fetch phase)
IRQ	interrupt request (active low)

NMI	non maskable interrupt (active low)
RES	reset (active low)
N.C.	no connection

After: MCS6500 Microcomputer Family Hardware Manual. MOS Technology, Inc., 1976.

• WDC 65C02S (40 Pin PDIP)

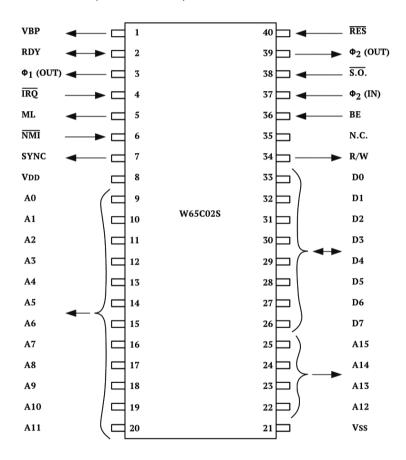

VDD	positive supply voltage
Vss	logical ground
Φ ₁ 2	clock

A0 ··· A15	address bus
D0 ··· D7	data bus
BE	bus enable
R/W	read/write
RDY	ready (bidirectional)
S.O.	set overflow (active low)
IRQ	interrupt request (active low)
NMI	non maskable interrupt (active low)
RES	reset (active low)
VBP	vector pull
N.C.	no connection

Based on: W65C02S 8-bit Microprocessor Datasheet. The Western Design Center, Inc., 2022.

The 65xx-Family:

Туре	Features, Comments
6502	NMOS, 16 bit address bus, 8 bit data bus
6502A	accelerated version of 6502
6502C	accelerated version of 6502, additional halt pin, CMOS
65C02	WDC version, additional instructions and address modes, up to 14MHz
6503, 6505, 6506	12 bit address bus [4 KiB]
6504	13 bit address bus [8 KiB], no NMI
6507	13 bit address bus [8 KiB], no interrupt lines
6509	20 bit address bus [1 MiB] by bankswitching
6510	as 6502 with additional 6 bit I/O-port
6511	integrated micro controler with I/O-port, serial interface, and RAM (Rockwell)
65F11	as 6511, integrated FORTH interpreter
7501	as 6502, HMOS
8500	as 6510, CMOS
8502	as 6510 with switchable 2 MHz option, 7 bit I/O-port
65816 (65C816)	16 bit registers and ALU, 24 bit address bus [16 MiB], up to 24 MHz (Western Design Center)
65802 (65C802)	as 65816, pin compatible to 6502, 64 KiB address bus, up to 16 MHz

Site Notes

For a simple overview of the instruction set in near-text format, see see here.

Disclaimer

Errors excepted. The information is provided for free and AS IS, therefore without any warranty; without even the implied warranty of merchantability or fitness for a particular purpose.

See also the "Virtual 6502" suite of online-programs

- >> <u>Virtual 6502</u> (6502/6510 emulator)
- >> 6502 Assembler
- >> 6502 Disassembler

External Links

- >> 6502.org the 6502 microprocessor resource
- >> <u>visual6502.org</u> visual transistor-level simulation of the 6502 CPU
- >> The Western Design Center, Inc. designers of the 6502 (still thriving)

Presented by mass:werk.