Notes on programming with the Arduino IDE

The Adruino IDE must be installed and the libraries for the ESP32 be included.

Create a new sketch and save it as MiniWebRadio. The IDE creates a new folder named MiniWebRadio.

The easiest way to do this is to add all the libraries you need in this folder. The required files Can be found in my repositories.

Https://github.com/schreibfaul1/ESP32-vs1053_ext

Https://github.com/schreibfaul1/ESP32-IR-Remote-Control Optional, for a IR Remote Control)

Zusätzlich wird der Treiber für ein SPI-Display mit Touchpad benötigt. Für das Waveshare 2.8inch Display ist das

https://github.com/schreibfaul1/ESP32-TFT-Library-ILI9431-HX8347D

Für andere Displays ist eine Anpassung notwendig. Gut geeignet sind die TFT Libraries von Adafruit.

If everything is included, the contents of the folder will look like this:

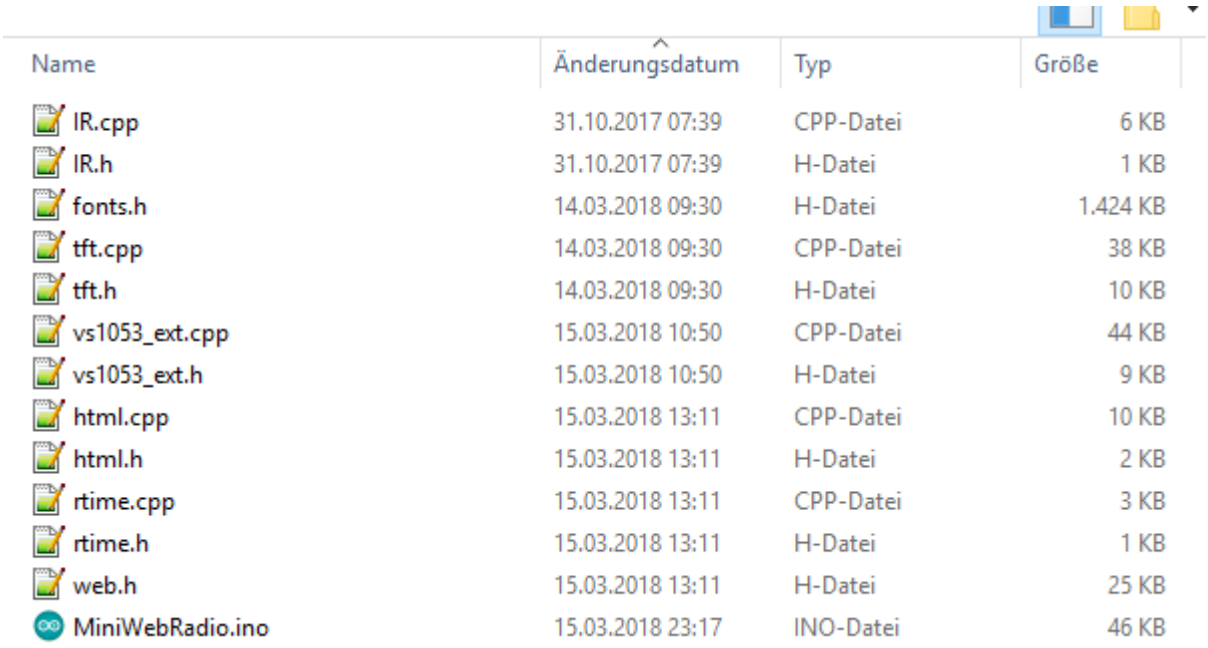

Name	Änderungsdatum	Typ	Größe
IR.cpp	31.10.2017 07:39	CPP-Datei	6 KB
IR.h	31.10.2017 07:39	H-Datei	1 KB
fonts.h	14.03.2018 09:30	H-Datei	1.424 KB
tft.cpp	14.03.2018 09:30	CPP-Datei	38 KB
tft.h	14.03.2018 09:30	H-Datei	10 KB
vs1053_ext.cpp	15.03.2018 10:50	CPP-Datei	44 KB
vs1053_ext.h	15.03.2018 10:50	H-Datei	9 KB
html.cpp	15.03.2018 13:11	CPP-Datei	10 KB
html.h	15.03.2018 13:11	H-Datei	2 KB
rtime.cpp	15.03.2018 13:11	CPP-Datei	3 KB
rtime.h	15.03.2018 13:11	H-Datei	1 KB
web.h	15.03.2018 13:11	H-Datei	25 KB
MiniWebRadio.ino	15.03.2018 23:17	INO-Datei	46 KB

The contents of the archive „Content_on_SD_Card. zip " Https://github.com/schreibfaul1/ESP32-MiniWebRadio/blob/master/Content_on_SD_Card.zip will be unzipped to the SD card.

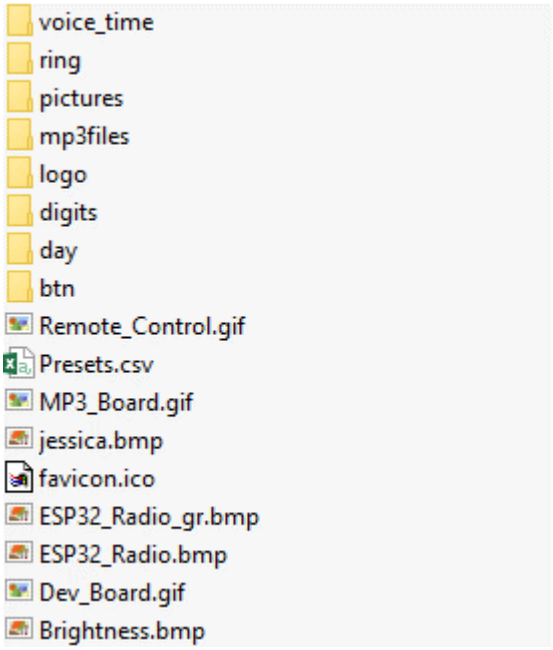

voice_time	Language files for the time (can be played at any hour)
ring	MP3 file for the alarm tone
pictures	Bitmaps to test the display (not strictly required)
mp3files	Music files etc. for the MP3 player
logo	Sender logos as bitmap (96x96 pixels in size)
digits	Alarm clock and time bitmaps
day	Bitmaps for the day (alarm on/off)
btn	Bitmaps for the buttons
preset.csv	The channel list can be edited, the first 256 entries are displayed in the

	internal nvs stored
favicon.ico	is displayed by the browser on the Web portal. The default URL is: http://esp32radio/index.html
ESP32_Radio.bmp	The Home screen
Brightness.bmp	Display Brightness menu graphic

Because more NVS memory is required for the channel list, the partition table must be changed.

```
//  if not enough space in nvs: change defaut.cvs
//
//  Name,     Type, SubType, Offset,   Size,     Flags
//  otadata,  data, ota,     0xe000,   0x2000,
//  app0,     app,  ota_0,   0x10000,  0x140000,
//  app1,     app,  ota_1,   0x150000, 0x130000,
//  nvs,      data, nvs,     0x280000, 0x10000,
//  eeprom,   data, 0x99,    0x290000, 0x1000,
//  spiffs,   data, spiffs,  0x291000, 0x169000
//
```

This can be done with a text editor.

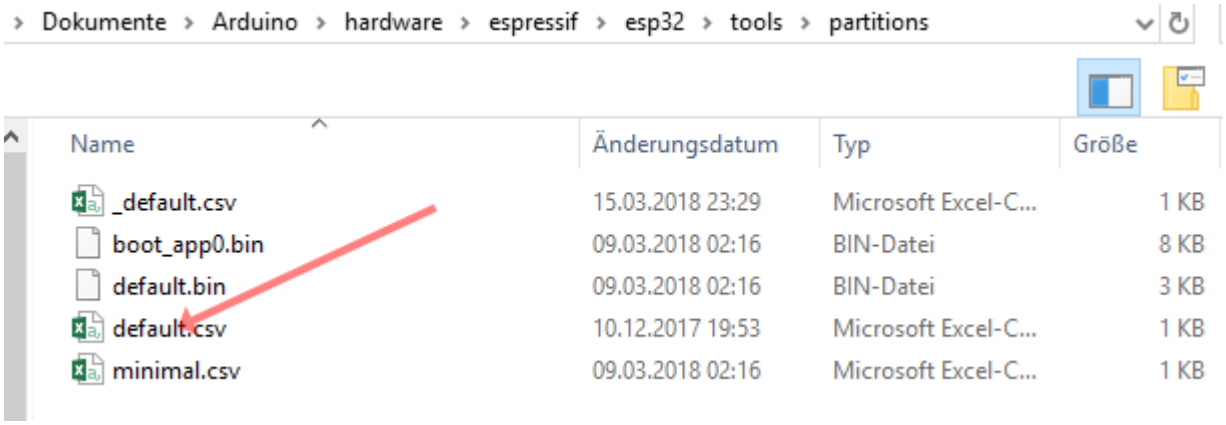

Or alternatively, the default. csv will overwrite the file from the Additional_info.

After that, the sketch can be compiled and uploaded.

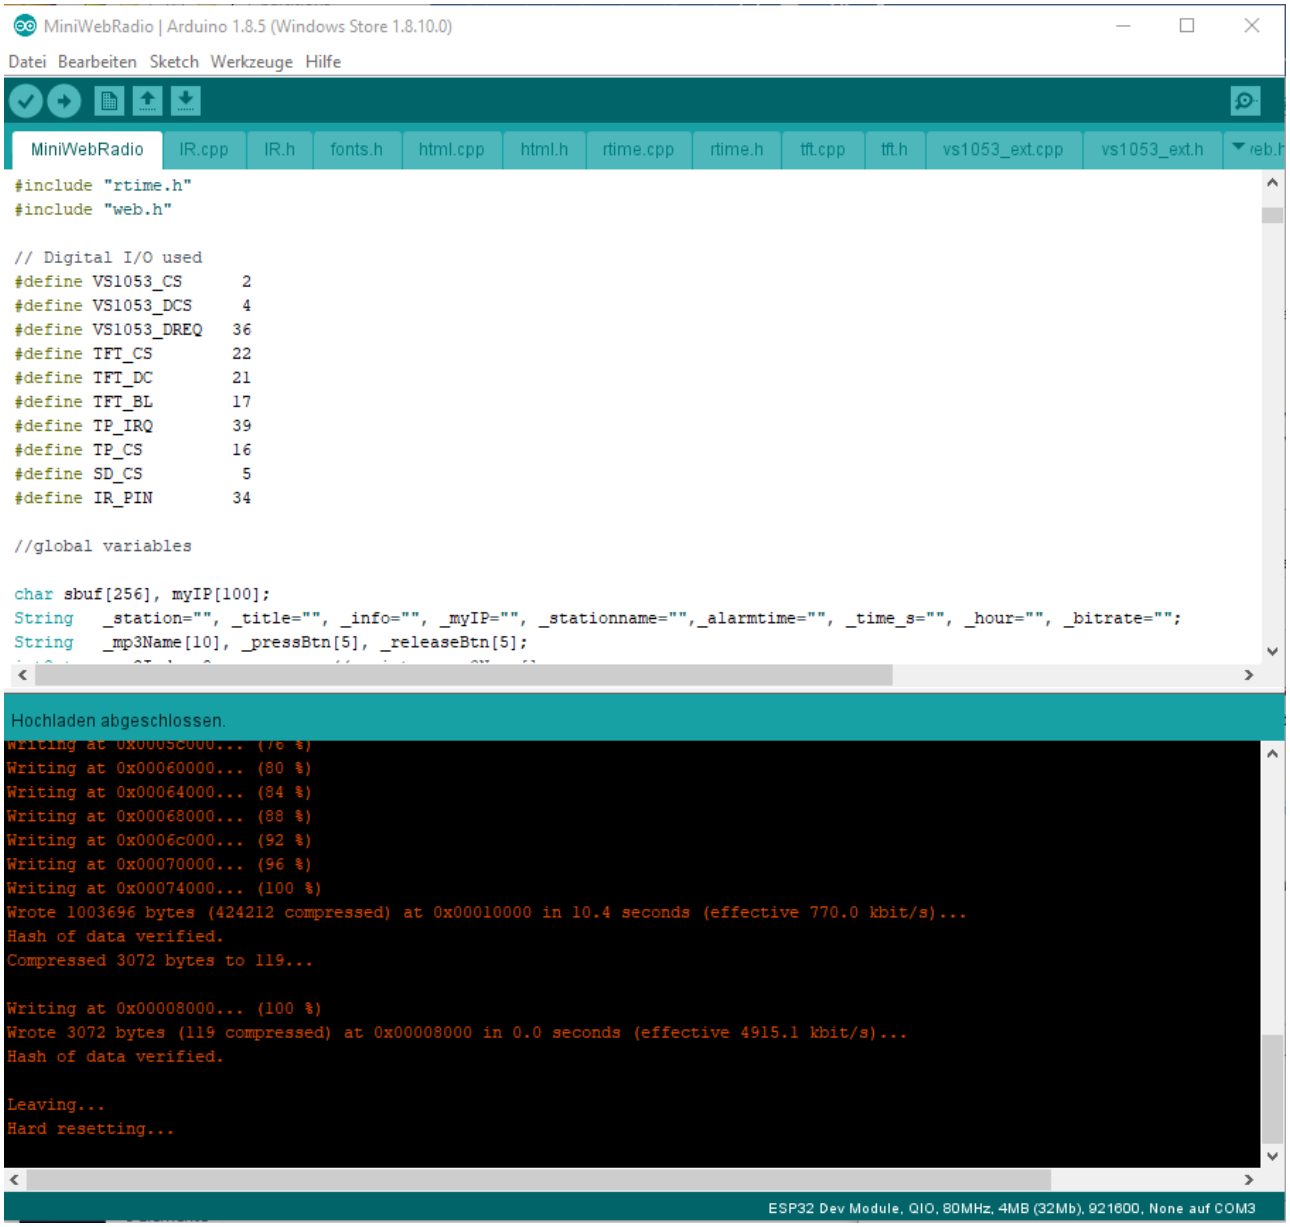

Sincerely,

Wolle